

Manifolds


8-9

Steer and Axle Manifold

The steer and axle manifold is mounted inside the manifold box at the yellow triangle side of the machine.

Index No.	Description	Schematic Item	Function	Torque
1	Flow control valve, 1.5 gpm / 5.7 L/min	BI	Right front steer cylinder retract circuit	20-25 ft-lbs / 27-34 Nm
2	Check valve	BC	Prevents right front steer cylinder from moving when not steering	20-25 ft-lbs / 27-34 Nm
3	Check valve	BB	Prevents left front steer cylinder from moving when not steering	20-25 ft-lbs / 27-34 Nm
4	Flow regulator valve, 2.1 gpm / 8 L/min	BL	Right rear steer cylinder extend circuit	20-25 ft-lbs / 27-34 Nm
5	Solenoid valve, 3 position 4 way	BQ	Steer left/right, right rear steer cylinder	20-25 ft-lbs / 27-34 Nm
6	Check valve	BE	Prevents right rear steer cylinder from moving when not steering	20-25 ft-lbs / 27-34 Nm
7	Check valve	BD	Prevents right rear steer cylinder from moving when not steering	20-25 ft-lbs / 27-34 Nm
8	Solenoid valve, 3 position 4 way	BP	Steer left/right, left rear steer cylinder	20-25 ft-lbs / 27-34 Nm
9	Flow regulator valve, 2.1 gpm / 8 L/min	BJ	Left rear steer cylinder extend circuit	20-25 ft-lbs / 27-34 Nm
10	Flow regulator valve, 7 gpm / 26.5 L/min	BS	Axle extend/retract circuit	20-25 ft-lbs / 27-34 Nm
11	Solenoid Valve, 2 position 3 way	BU	Axle retract	30-35 ft-lbs / 41-47 Nm
12	Solenoid Valve, 2 position 3 way	BT	Axle extend	30-35 ft-lbs / 41-47 Nm
13	Pressure reducing valve	BR	Axle extend/retract circuit	30-35 ft-lbs / 41-47 Nm

Manifolds

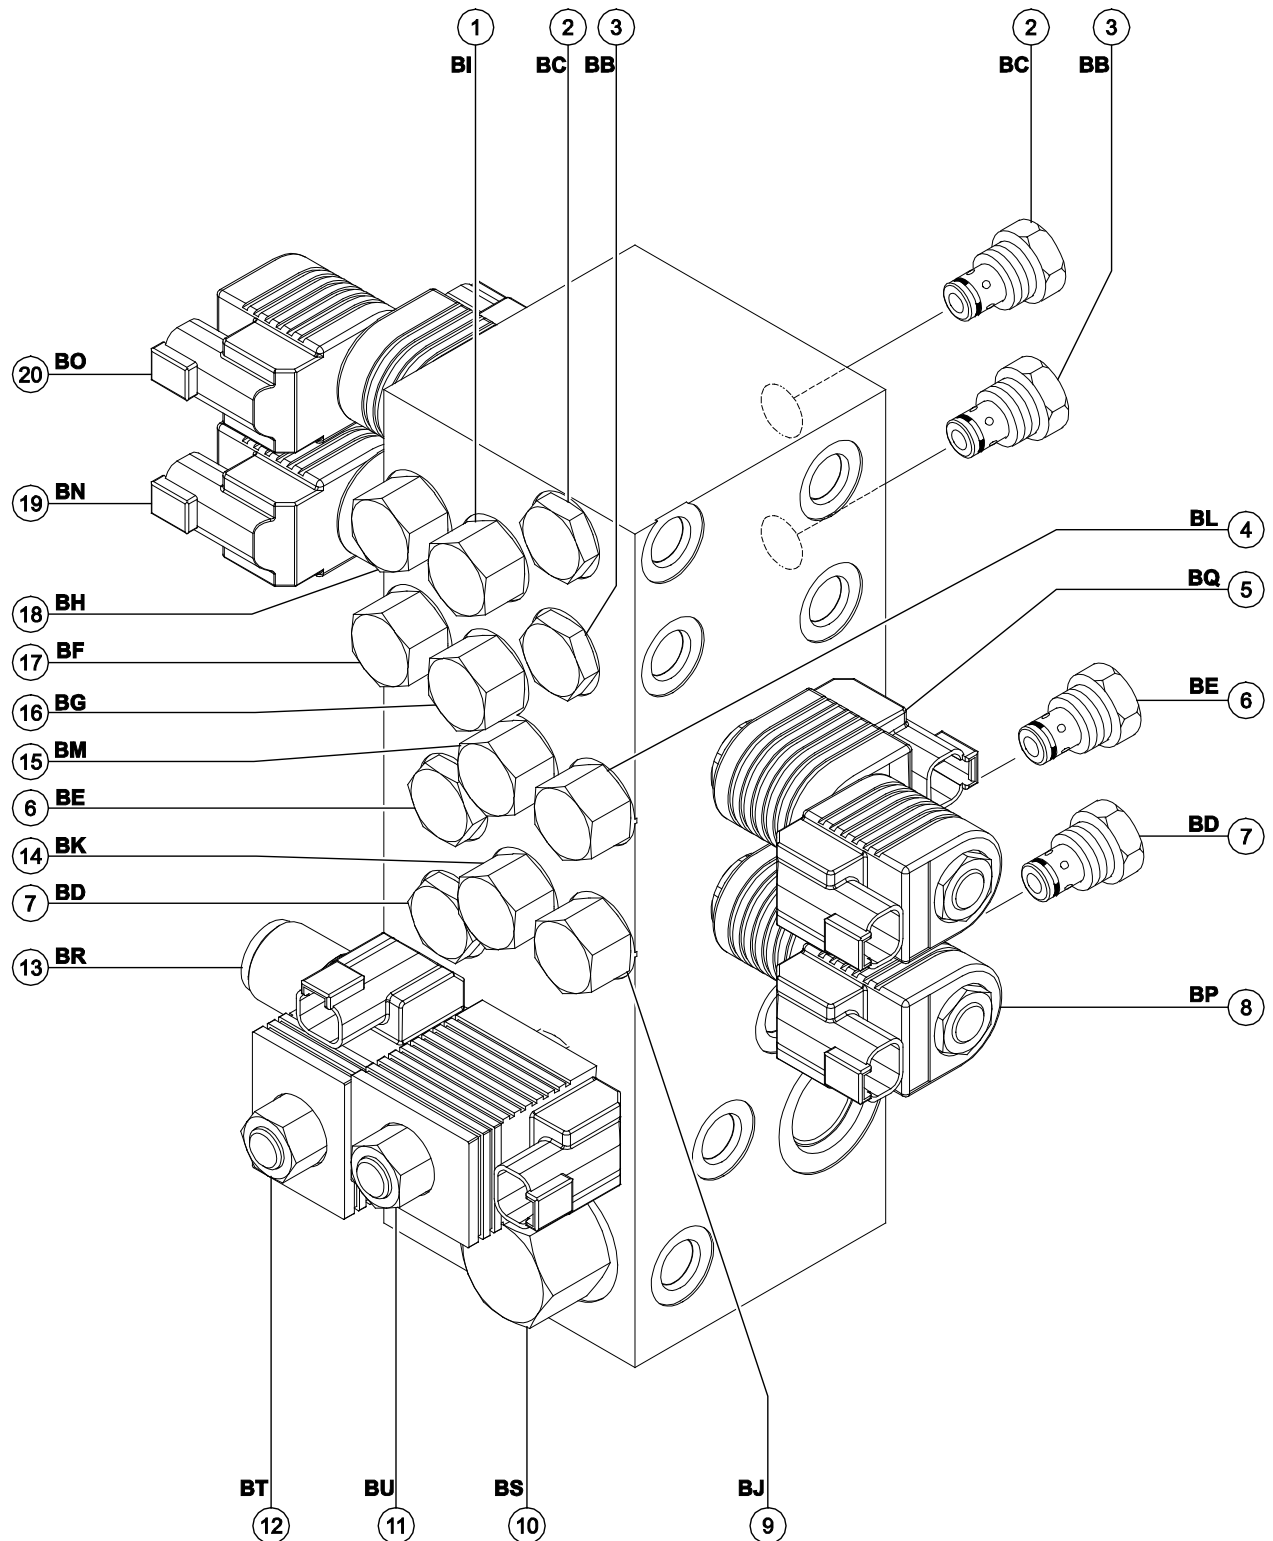


Manifolds

Steer and Axle Manifold, continued

The steer and axle manifold is mounted inside the manifold box at the yellow triangle side of the machine.

Index No.	Description	Schematic Item	Function	Torque
14	Flow regulator valve, 1.5 gpm / 5.7 L/min	BK	Left rear steer cylinder retract circuit	20-25 ft-lbs / 27-34 Nm
15	Flow regulator valve, 1.5 gpm / 5.7 L/min	BM	Right rear steer cylinder retract circuit	20-25 ft-lbs / 27-34 Nm
16	Flow regulator valve, 1.5 gpm / 5.7 L/min	BG	Left front steer cylinder retract circuit	20-25 ft-lbs / 27-34 Nm
17	Flow regulator valve, 2.1 gpm / 8 L/min	BF	Left front steer cylinder extend circuit	20-25 ft-lbs / 27-34 Nm
18	Flow regulator valve, 2.1 gpm / 8 L/min	BH	Right front steer cylinder extend circuit	20-25 ft-lbs / 27-34 Nm
19	Solenoid valve, 3 position 4 way	BN	Steer left/right, left front steer cylinder	20-25 ft-lbs / 27-34 Nm
20	Solenoid valve, 3 position 4 way	BO	Steer left/right, right front steer cylinder	20-25 ft-lbs / 27-34 Nm

Manifolds

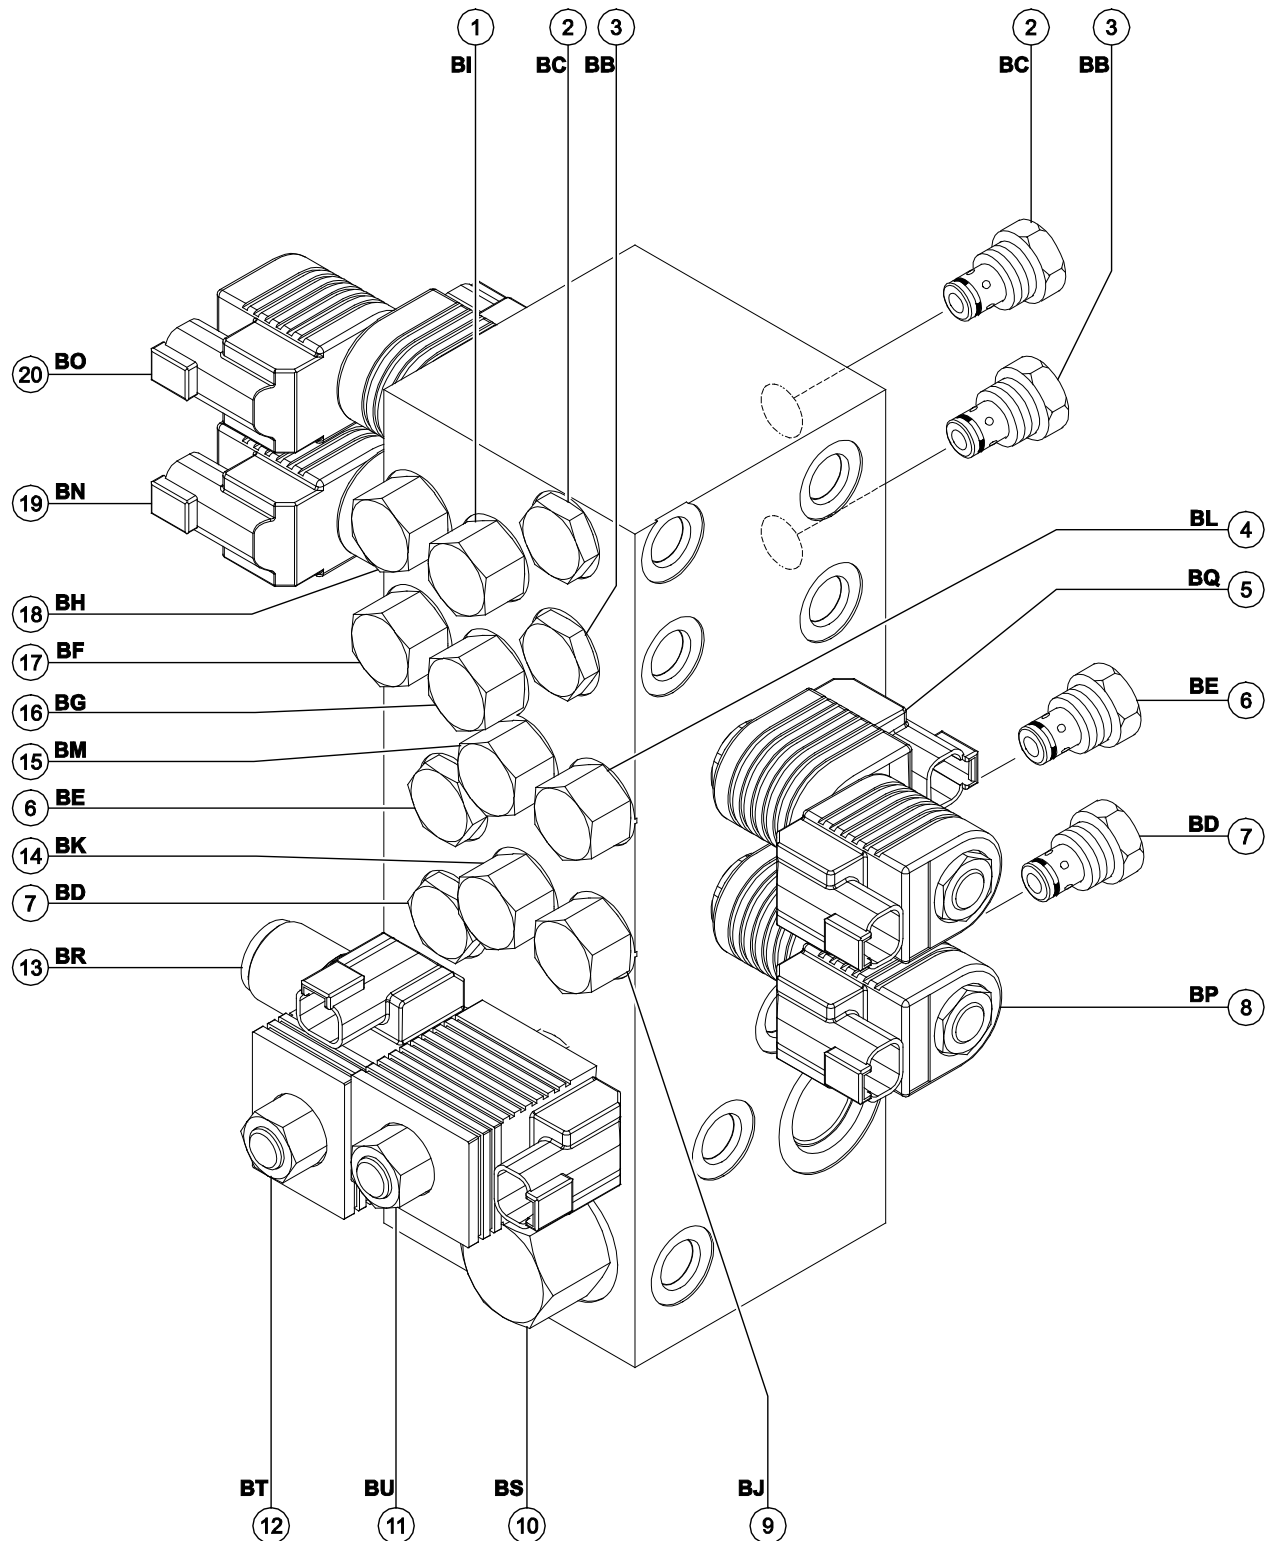

Manifolds

8-10

Valve Adjustments - Steer and Axle Manifold

How to Adjust the Axle Relief Valve

Note: Perform this procedure with the machine on a firm, level surface and in the stowed position with the axles extended.

Note: Refer to Steer and Axle Manifold list to locate the axle relief valve.

Note: Two people will be required to perform this procedure.

- 1 Connect a 0 to 5000 psi / 0 to 350 bar pressure gauge to the test port on the steer and axle manifold.
- 2 Locate the axle relief valve on the steer and axle manifold. Hold the relief valve with a wrench and remove the cap.
- 3 Start the engine from the platform controls and press down the foot switch. Press and hold the axle extend button at the platform controls. Observe the pressure reading on the pressure gauge. Refer to Specifications, *Hydraulic Component Specifications*.

- 4 Turn the engine off.
- 5 Adjust the internal hex socket. Turn it clockwise to increase the pressure or counterclockwise to decrease the pressure. Install the relief valve cap.

NOTICE

Component damage hazard. Do not adjust the relief valve pressures higher than specifications.

- 6 Repeat steps 3 through 5 to confirm relief valve pressure.
- 7 Remove the pressure gauge.