


ROUTER INITIAL CONFIGURATION

Model router :2621ms

End device :pc

Cable : console cable

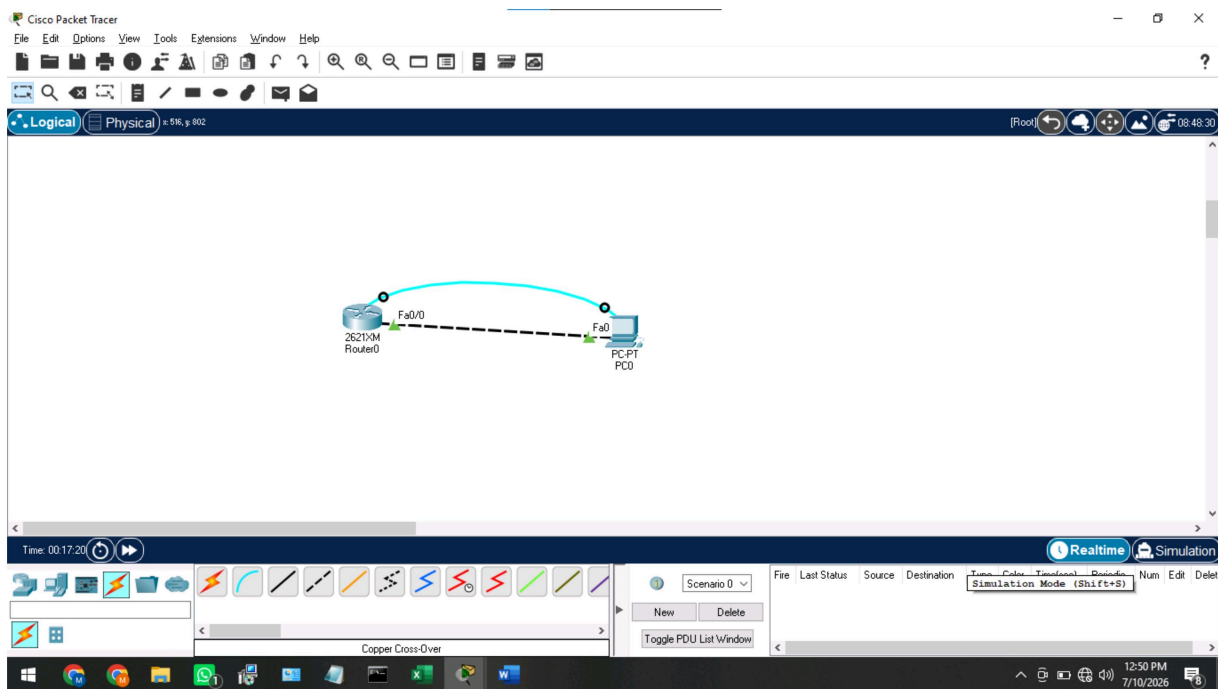

```
Router >show ip interface brief
```

```
Router >enable
```

```
Router # conf t
```

```
Router (config ) #interface fastethernet 0/0
```

```
Router (config-if)# ip address 50.0.0.1 255.0.0.0
```

```
Router (config-if) # exit
```

```
Router (config )# exit
```

```
Router # exit
```

```
Router >show ip interface brief
```

```

Router>
Router>
Router>
Router>show ip interface brief
Interface      IP-Address      OK? Method Status      Protocol
FastEthernet0/0 50.0.0.1        YES manual up          up
FastEthernet0/1 unassigned      YES unset  administratively down down
Router>

```

☐ Top

LIMITATION FOR USER

(Password set)

Router>enable

Router# configure terminal

Router(config)#enable secret "password"

```

Router(config)#
Router(config)#
Router(config)#enable secret ccna
Router(config)#

```

Router(config)# exit

```

Router(config)#exit
Router#
%SYS-5-CONFIG_I: Configured from console by console

Router#
Router#exit

```

Router#exit

Router>

Password : "password" -----> allowing user after enter password

Router#

```

Router>en
Password: |

```

LIMITAITON PASSWORD REMOVE

Router>en

Password : "password"

```
Router>
Router>en
Password:
```

```
Router>
Router>en
Password:
Router#
```

Router # conf t

```
Router>
Router>en
Password:
Router#conf t
Enter configuration commands, one per line.  End with CNTL/Z.
Router(config)#no enable secret
Router(config)#exit
Router#
%SYS-5-CONFIG_I: Configured from console by console

Router#exit
```

Router(config)# no enable secret

Router(config)# exit

Router#eixt

Router>en

```
Router>
Router>
Router>en
Router#
```

-----→allowing user without password after removing password

Router#

CONSOLE PASSWORD SET

Router>en

Router#conf t

```
Router>en
Router#conf t
Enter configuration commands, one per line. End with CNTL/Z.
Router(config)#username mega password mega
Router(config)#line console 0
Router(config-line)#login local
Router(config-line)#eixt
      ^
% Invalid input detected at '^' marker.

Router(config-line)#exit
Router(config)#
```

[Top](#)

Router(config)#username mega password mega

Router(config)#line console 0

Router(config -line)# login local 0

Router(config -line)# exit

Router(config)#exit

Router#eixt

-----→asking username and password

```
User Access Verification
```

```
Username: |
```

User :mega

```
User Access Verification
```

```
Username: mega
```

```
Password: |
```

Password :_____

```
Username: mega
Password:
Router>
```

-----→allowing after enter username and password to console

Router>en

Router#

REMOVE CONSOLE PASSWORD OR AUTHENTICATION

User :mega

Password :_____

```
User Access Verification

Username:
Username: mega
Password:

Router>en
Router#conf t
Enter configuration commands, one per line. End with CNTL/Z.
Router(config)#no username no password
Router(config)#line console 0
Router(config-line)# no login local
Router(config-line)#exit
Router(config)#exit
Router#
%SYS-5-CONFIG_I: Configured from console by console

Router#
```

Router>en

Router#conf t

Router(config)#no username no password

Router(config)#line console 0

Router(config-line)# no login local

Router(config-line)# exit

Router(config)#exit

Router#eixt

-----→allowing user without username and password after removing

Router>

```
Router(config-line)#exit
Router(config)#exit
Router#
%SYS-5-CONFIG_I: Configured from console by console

Router#ex
```

Router con0 is now available

Press RETURN to get started.

Router>
