SIMPL+ / SIMPL#

Televic Confero Control

Crestron module help and programming reference

Module information	Details
Symbol name	Televic Confero Control
Application	Televic Confero discussion, meeting and recording control
Control interface	Authenticated HTTP API with notification monitoring
Processor target	Crestron 4-Series, as documented by the repository
Library	Televic Confero.clz; SIMPL# .NET Framework 4.7.2
Assembly version	1.0.0.0
Document revision	1.0 - 28 October 2026
Source revision	f51bcfe460bf3dbcb74e7044ab8775d2b6ad93d9

Description

Provides individual microphone toggles, ordered speaker and request lists, first/last active microphone feedback, meeting control, recording control and discussion settings. Feedback represents confirmed controller state.

Contents

2 - Installation and connection
3 - Digital inputs
4 - Analog inputs and configuration
5 - Digital and analog outputs
6 - Serial outputs and row mapping
7 - Demo interface

Installation and connection

Required files and equipment

Use a Crestron 4-Series program, the Televic Confero controller with API access, and a valid API token. Keep Televic Confero Control.usp, its matching .ush symbol and Televic Confero.clz together in the module location used by your SIMPL project. Use matching files from the same build.

Setup procedure

1. Add Televic Confero Control to the SIMPL program.
2. Set the two string parameters below.
3. Wire connection/status feedback and the required controls.
4. Compile and load the program.
5. Pulse Initialize after program initialization, or hold it high at startup.
6. Confirm Connected_fb is high, then verify seat numbers and names before enabling operator controls.

Parameter	Format / function
IP	String, up to 255 characters. Hostname or IP address; optional HTTP prefix and port. Examples: 192.168.1.50, confero.example.local:9080, http://192.168.1.50:9080.
API_Key	String, up to 255 characters. API Bearer token only. Do not include the word Bearer or its following space.

Initialization

Every Initialize rising edge cancels the previous monitoring session and starts a replacement. Releasing Initialize does not stop monitoring. Refresh restarts an existing session and reloads snapshots; use Initialize for the first connection. No stop-monitoring input is exposed.

Connection indication

Connected_fb rises after a successful authenticated speaker snapshot. Other metadata may still be loading, and optional-feature failures can be present while Connected_fb remains high. Use Status_fb for additional detail.

Digital inputs

All command inputs act on a rising edge. Use momentary pulses. Commands require established speaker connectivity; commands sent while disconnected are ignored. Initialize and Refresh manage the monitoring session.

Signal	Function
Initialize	Start or replace monitoring using IP and API_Key. Also recognized if already high at module startup.
Refresh	Restart the existing session and reload all snapshots.
Meeting_Start	Start a new meeting from the local template.
Meeting_Stop	Stop the current meeting.
Start_Selected_Meeting	Start the scheduled meeting at Selected_Meeting.
Clear_Speakers	Clear the complete active speaker list.
Clear_Requests	Clear the complete request-to-speak list.
Turn_Off_Selected_Speaker	Turn off the microphone at Selected_Speaker in the current speaker list.
Enable_Selected_Request	Enable the microphone at Selected_Request in the current request list; the mic command also clears its request flag.
Recording_Start	Request recording state recording.
Recording_Stop	Request recording state idle.
Wireless_Turn_Off	Send the device turnOff action. Confirm intended scope on the installed system before exposing this control.
Mic_Toggle[1..100]	Toggle the seat mapped to this row, based on its latest confirmed microphone state. Match each button with Mic_On_fb on the same row.

Button behavior

A successful microphone command does not guarantee the controller admitted that seat. Use Mic_On_fb for indication. Repeated fast pulses can use the same confirmed state before feedback arrives; allow feedback to settle between operations.

Analog inputs and configuration

Signal	Accepted values / behavior
Selected_Speaker	1-based displayed speaker row. Set before pulsing Turn_Off_Selected_Speaker.
Selected_Request	1-based displayed request row. Set before pulsing Enable_Selected_Request.
Selected_Meeting	1-based displayed scheduled-meeting row. Set before pulsing Start_Selected_Meeting.
Discussion_Mode	On change: 1 Direct Speak; 2 Request; 3 Group; 4 Operator; 5 Hands Free. Other values are ignored.
Number_Of_Open_Mics	On change: 1-100. Other values are ignored. Independent of MIC_COUNT.

Selections of 0, rows beyond configured capacity and empty rows produce no action. A selected row resolves to the current seat number or scheduled-meeting ID when the action is triggered. A changing list can therefore change the target represented by a row.

Compile-time constants in Televic Confero Control.usp

Constant	Current source	Purpose
MIC_COUNT	100	Seat control and feedback rows.
SPEAKER_LIST_COUNT	15	Displayed active-speaker rows.
QUEUE_LIST_COUNT	15	Displayed request rows.
MEETING_LIST_COUNT	5	Displayed scheduled-meeting rows.
REFRESH_SECONDS	30	Metadata reconciliation interval; minimum 10 seconds.
DEBUG_PRINT	0	0 off; 1 HTTP results/errors; 2 also feedback summaries.

Digital and analog outputs

Digital output	High / low meaning
Connected_fb	1 = authenticated speaker monitoring established. 0 = initialization, failure or retry. Does not certify every optional feature.
Meeting_Running_fb	1 = current meeting metadata contains a meeting ID.
Recording_Active_fb	1 = recording state is exactly recording. 0 can also mean unknown; consult Recording_State_fb.
Mic_On_fb[1..100]	1 = mapped seat microphone confirmed on.
Mic_Request_fb[1..100]	1 = mapped seat requesting to speak.

Analog output	Meaning
First_Active_Mic	Actual seat number of the first item in the full ordered speaker list.
Last_Active_Mic	Actual seat number of the last item in the full ordered speaker list.
Mic_Count_fb	Total number of seats returned by the controller.
Speaker_Count_fb	Total number of active speakers.
Request_Count_fb	Total number of requests to speak.
Meeting_Count_fb	Total number of scheduled meetings.
Discussion_Mode_fb	1-5 using the input mode mapping; 0 when unavailable or unrecognized.
Number_Of_Open_Mics_fb	Current controller maximumNumberOfSpeakers; 0 when unavailable.

First and last active microphone

These outputs contain seat numbers, not row indexes or activation timestamps. Both are 0 when the speaker list is empty or monitoring is disconnected. They are equal when one microphone is active. The full speaker list is used even if the displayed speaker rows are truncated.


Serial outputs and row mapping

Serial output	Contents
Meeting_Title_fb	Current meeting title, or empty when unavailable.
Meeting_ID_fb	Current meeting ID, or empty when unavailable.
Recording_State_fb	Controller recording state text; Unknown when unavailable.
Status_fb	Connection/metadata status and most recent command result or error.
Mic_Number[1..100]	Actual seat number as text. Unused seat rows output "0".
Mic_Name[1..100]	Participant name from the current meeting; fallback Seat N. Empty for unused rows.
Mic_Role[1..100]	Controller seat role; empty for unused rows.
Speaker_Number[1..15]	Seat number as text in controller speaker order. Empty for unused rows.
Speaker_Name[1..15]	Participant name or Seat N in the matching speaker row.
Request_Number[1..15]	Seat number as text in controller request order. Empty for unused rows.
Request_Name[1..15]	Participant name or Seat N in the matching request row.
Scheduled_Meeting_Name[1..5]	Scheduled meeting name in controller list order.
Scheduled_Meeting_ID[1..5]	Stable scheduled meeting ID for the matching row.

Three distinct numbering systems

Seat rows: sorted by actual seat number. If seats are 3, 12 and 40, Mic_Toggle[2] controls seat 12 and Mic_Number[2] is "12".
Speaker/request rows: preserve controller list order. Selected_Speaker = 2 targets the second current speaker, regardless of seat number.
Scheduled-meeting rows: Selected_Meeting selects the displayed row; the action uses that row's stable ID.

Demo interface

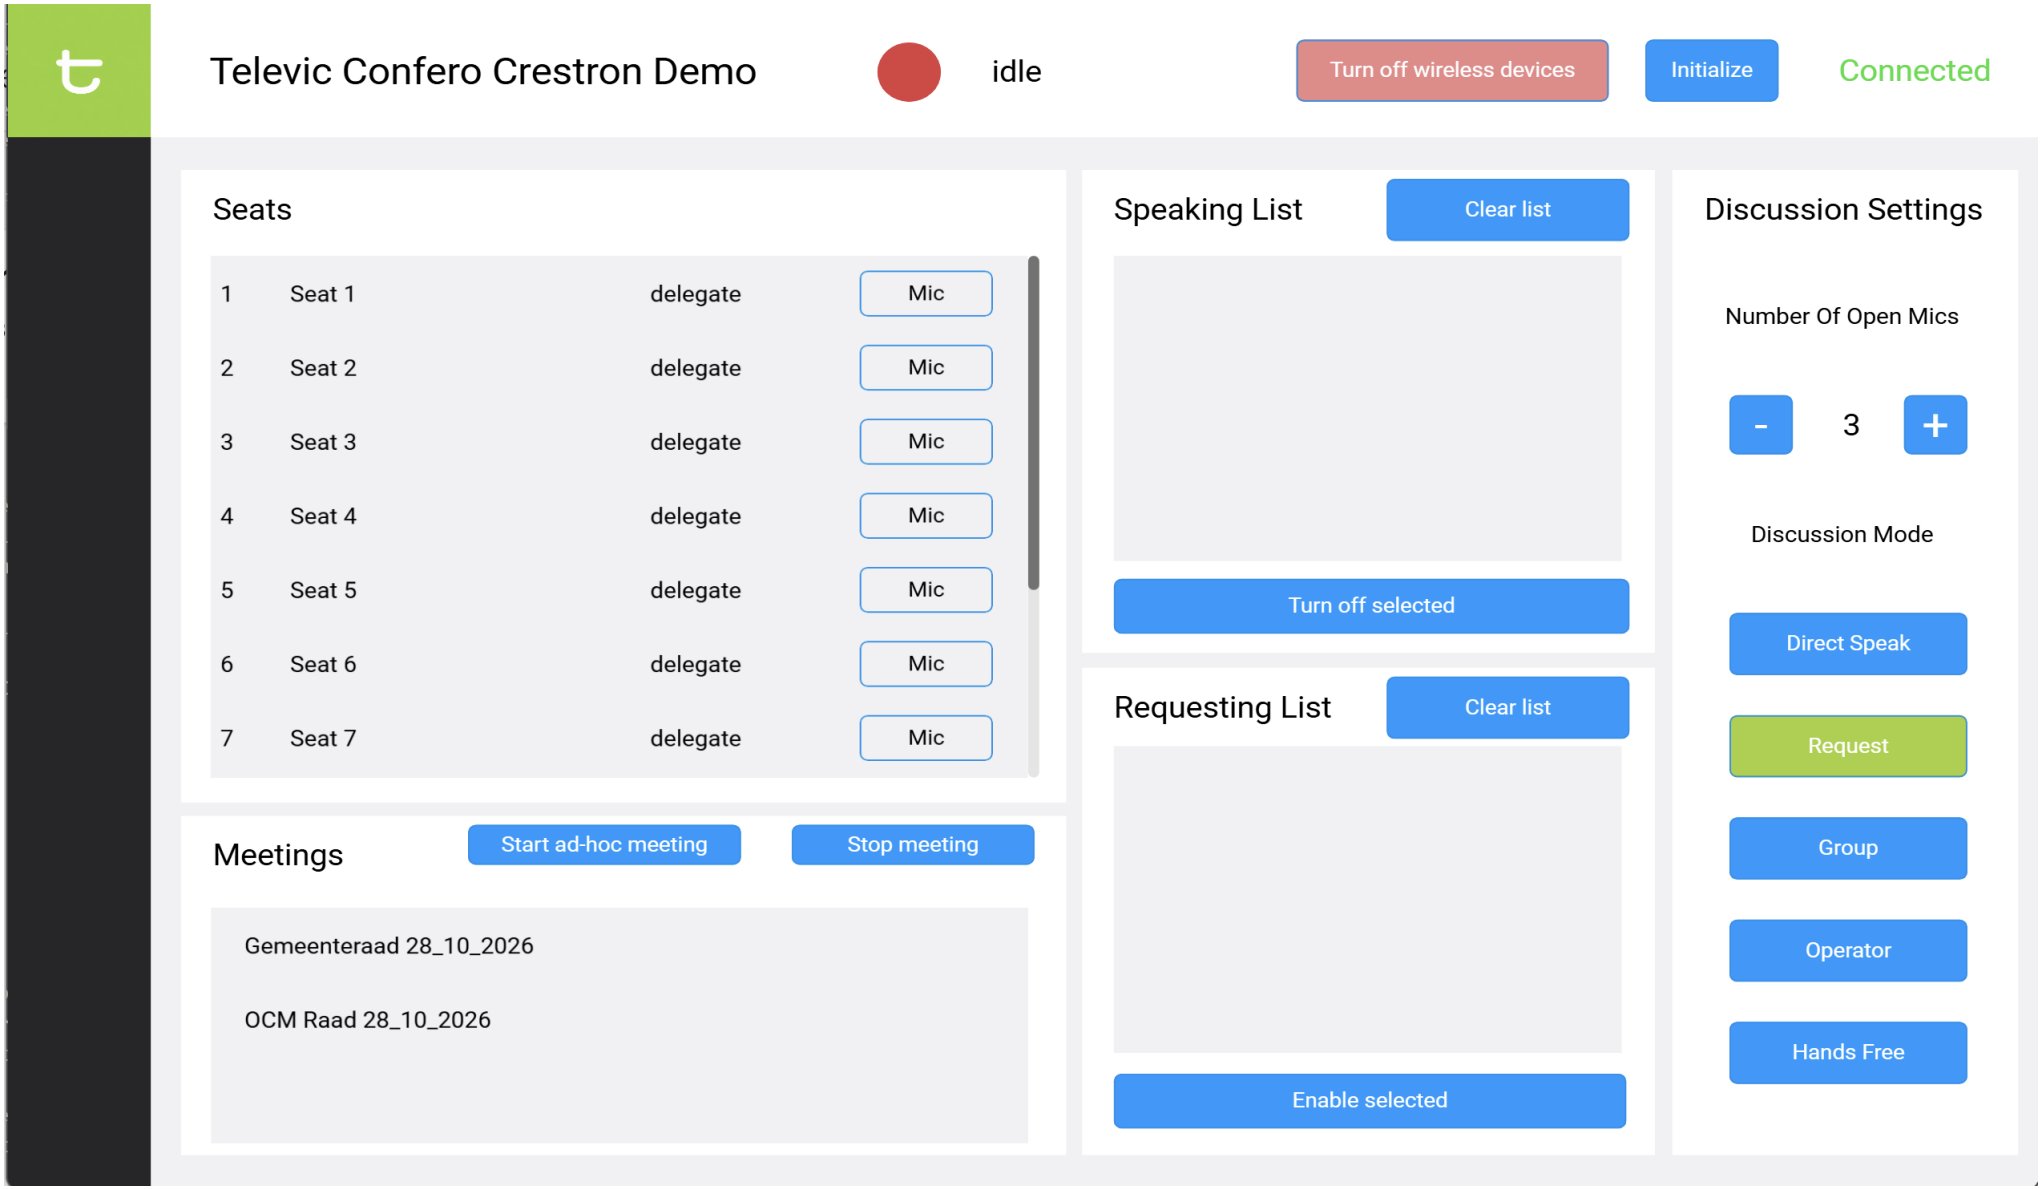

Televic Confero Crestron Demo - example touchpanel interface.