MSG Rectangular Connector 「MSG59RP/P-L_ _ _ 」

Instruction Sheet

No.	Procedure	Notes
1	<Receptacle Connector> Attachment to a panel 1-1. According to specified cut-out, the panel is cut. 1-2. A connector is set from the rear of a panel. M4 screw is let pass and bolted in an attachment hole. Loctite should be used by threadlocking after attachment from the panel back. 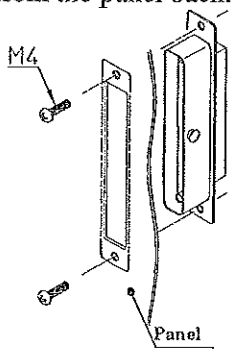 	・ Connector : Receptacle : MSG59RP-L_ _ _ (Panel Mount Type) ・ A panel hole size follows an attached sheet panel hole size figure.
2	Contact Loading The contact hole of an insulator are loaded with contact after crimping. (Contact insertion tool needlessness) 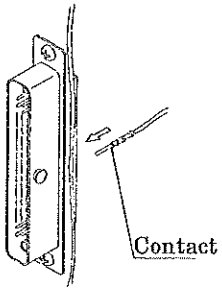 Contact Removal When contact needs to be removed from a body, an extraction tool (RX20-25V2J or RX2025GE1) is used. (Detailed handling is referring to the appending procedure figure)	・ Wires are lightly pulled out after loading to check that contacts are held certainly. ・ Loading of contact is equally arranged to a body. ・ There should not be any debt of wires. ✕ 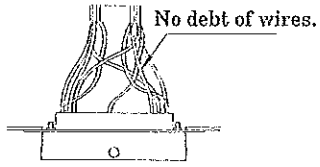
3	Bundling Wire Remove a twist of wires and bundle it lightly.	・ Stress should not be applied on contacts which have to remain floating. ◎ ✕ 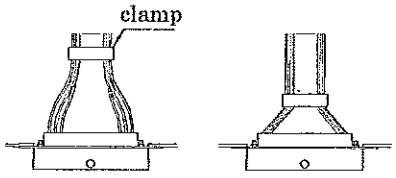

No.	Procedure	Notes
4	<Plug Connector> Contact Loading Wires which are finished the check after crimping are through into hood and the contact hole of an insulator are loaded with contacts. (Contact insertion tool needlessness) 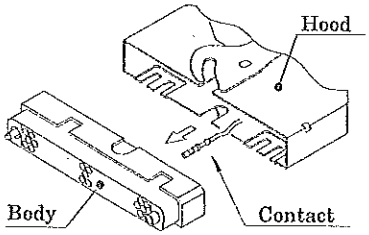 There should not be any debt of wires. 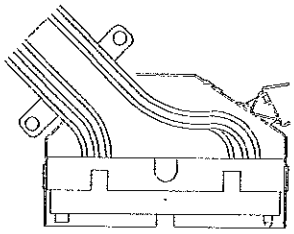	• Connector : Plug : MSG59P-L _ _ • Wires are lightly pulled out after loading to check that contacts are held certainly. • Loading of contact is equally arranged to a body. • A hood cannot be assembled if there is a debt of wires. Or a hood swells, a pin interferes in a lever, and it becomes the cause that connector cannot mate. 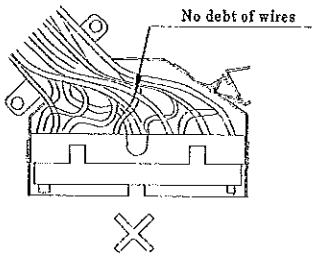
5	Hood Assembly Check the polarization of the hood and the body and insert the body into the hood without roll. 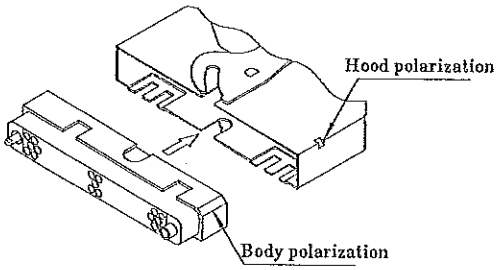 	• Please check the body assembles into the regular position of the hood.

No.	Procedure	Notes
6	Bundling Wires Remove a twist of wires and bundle it lightly. Wires are dedicated to a cable clamp, a clamp bolting screw is bolted by turns [right-and-left], and wires are clamped. If the diameter of bundling wires is much smaller than clamp capacity, please use taping, bushing, etc. in order to enlarge the diameter. 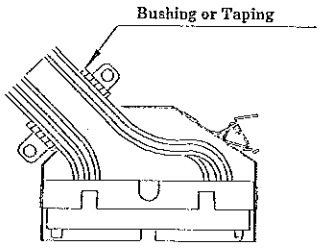 	• Stress should not be applied on the contacts.
7	Connector Disassembly 7-1. Removal of a body Cable clamp bolting screws and hood attachment screws (M2.6 screw) are removed. A hood mating side is opened by hand, wires are pushed and a body is picked out from a hood. 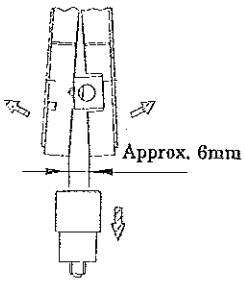 7-2. Removal of contact When removing contact from a body, (RX20-25V2J or RX2025GE1) are used. (Detailed handling is referring to the appending procedure figure)	• If a hood is opened too much, it will become the cause which deform a hood and a lever.

<table>
<tr><th>No.</th><th>Procedure</th><th>Notes</th></tr>
<tr><td>8</td><td><u>Inspection before mating</u>
The connector which finished harness is inspected.
a) Are screws bolted certainly?
b) Can the lever rotate smoothly?
c) Contacts are loaded at the right position.
d) Are contacts locked surely?
e) Has not hood mating side opened?</td><td></td></tr>
<tr><td>9</td><td><u>Prevention of incorrect mating (polarization key)</u>
In case of two or more connectors are used, a polarization key should be used.
<< The polarization key and the method of loading>>
Plug : MSG-PK1
 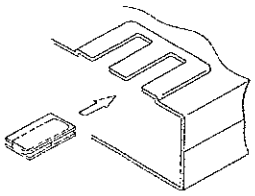
Receptacle : MSG-PK2
 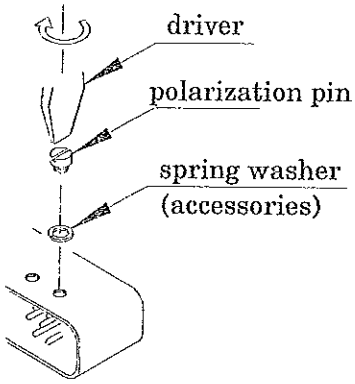
</td><td>・ Recommendation for polarization key position:
○:with polarization pin
×:without polarization pin
<table><tr><th>1</th><th>2</th><th>3</th><th>4</th></tr><tr><td>○</td><td>○</td><td>×</td><td>×</td></tr><tr><td>○</td><td>×</td><td>○</td><td>×</td></tr><tr><td>○</td><td>×</td><td>×</td><td>○</td></tr><tr><td>×</td><td>○</td><td>○</td><td>×</td></tr><tr><td>×</td><td>○</td><td>×</td><td>○</td></tr><tr><td>×</td><td>×</td><td>○</td><td>○</td></tr></table>6 kinds of polarization are available.
・ Avoid re-use of MSG-PK 1/2.
・ Avoid shock on polarization keys.

・ MSG-PK2
Torque with a recommendation bundle : 2.5kgf・cm</td></tr>
</table>

No.	Procedure	Notes
10	<u>Mating of a plug and receptacle</u> Check whether a lever and polarization keys are in the right position before mating. The mating sides of a plug and a receptacle are united in parallel and pre-mated. A lever is operated to the lock position . (It is operated until it makes click sound.) 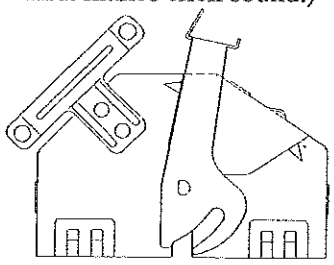 Lever position (before mating) 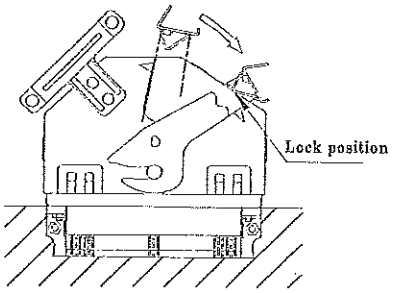 Lever position (after mating)	• If pre-mating is not performed straightly, it will become the cause of contact breakage.
11	<u>Others</u> 11-1. Avoid water, oil, and dust before mating connectors. 11-2. When pin contact is bent or a foreign substance is fitted over the inside of socket contact, it cannot mate correctly. 11-3. Storage conditions Temperature: Less than [30 degree C] Humidity: Less than [60%]	

END