

VB20 Platform API Commands Manual

Document Version: V1.0.0

Revision History

Doc Version	Date	Contents	Remarks
V1.0.0	2025/ 09/19	initial	

Contents

Revision History.....	2
1 Introduction.....	5
1.1 Preparation.....	5
1.1.1 Setting IP Address in Your Computer	5
1.1.2 Enabling Telnet Client.....	5
1.2 Logging In via Command-line Interface	5
1.3 API Commands Overview	6
1.3.1 gbconfig Commands	6
2 Command Sets	8
2.1 Camera.....	8
2.1.1 gbconfig --camera-mode	8
2.1.2 gbconfig -s camera-mode	8
2.1.3 gbconfig --camera-zoom.....	9
2.1.4 gbconfig -s camera-zoom	9
2.1.5 gbconfig --camera-coord	9
2.1.6 gbconfig -s camera-coord	10
2.1.7 gbconfig --camera-savecoord	10
2.1.8 gbconfig -s camera-savecoord.....	10
2.1.9 gbconfig --camera-loadcoord	11
2.1.10 gbconfig --camera-mirror	11
2.1.11 gbconfig -s camera-mirror	11
2.1.12 gbconfig --camera-hd	11
2.1.13 gbconfig -s camera-hd	12
2.1.14 gbconfig --camera-wdr	12
2.1.15 gbconfig -s camera-wdr	12
2.1.16 gbconfig --camera-powerfreq.....	13
2.1.17 gbconfig -s camera-powerfreq.....	13
2.1.18 gbconfig --camera-autoframing.....	13
2.1.19 gbconfig -s camera-autoframing	14
2.1.20 gbconfig --camera-autoframingspeed.....	14
2.1.21 gbconfig -s camera-autoframingspeed.....	14
2.1.22 gbconfig --camera-speakertracking.....	14

2.1.23	gbconfig -s camera-speakertracking.....	15
2.1.24	gbconfig --camera-getconfig.....	15
2.1.25	gbconfig --camera-geteptz	15
2.1.26	gbconfig --camera-max-resolution	16
2.1.27	gbconfig -s camera-max-resolution	16
2.1.28	gbconfig --camera-ai-region-select.....	16
2.1.29	gbconfig -s camera-ai-region-select	17
2.1.30	gbconfig --camera-ai-region-info.....	17
2.1.31	gbconfig -s camera-ai-region-info	18
2.2	Video.....	18
2.2.1	gbconfig --hdcpc-enable.....	18
2.2.2	gbconfig -s hdcpc-enable.....	19
2.2.3	gbconfig --cec-enable	19
2.2.4	gbconfig -s cec-enable	19
2.2.5	gbcontrol --sinkpower	20
2.2.6	gbcontrol --send-cmd	20
2.2.7	gbconfig --cec-cmd	20
2.2.8	gbconfig --auto-standby-time.....	21
2.2.9	gbconfig -s auto-standby-time	21
2.2.10	auto-standby-enable	21
2.2.11	gbconfig -s auto-standby-enable	22
2.3	Audio.....	22
2.3.1	gbconfig --autovolume	22
2.4	System	22
2.4.1	gbcontrol --device-info	22
2.4.2	gbconfig --vb-mic-disable	23
2.4.3	gbconfig -s vb-mic-disable	23
2.4.4	gbconfig --telnet-mode.....	23
2.4.5	gbconfig -s telnet-mode	24
2.4.6	gbcontrol --reset-to-default.....	24
2.4.7	gbconfig --ao-select	24
2.4.8	gbconfig -s ao-select	24

1 Introduction

1.1 Preparation

This section takes a third-party control device windows 10 as an example. You may also use other control devices.


1.1.1 Setting IP Address in Your Computer

The detailed operation steps are omitted here.

1.1.2 Enabling Telnet Client

Before logging in to the device via command-line interface, make sure that **Telnet Client** is enabled. By default, **Telnet Client** is disabled in Windows OS. To turn on **Telnet Client**, do as follows.

1. In the lower-left search bar, type "Control Panel" and press Enter key. From the search results, click on "**Control Panel**" to open the Control Panel interface.
2. Click "**Program**".
3. In **Programs and Features** area box, click **Turn Windows features on or off**.
4. In **Windows Features** dialog box, select **Telnet Client** check box.

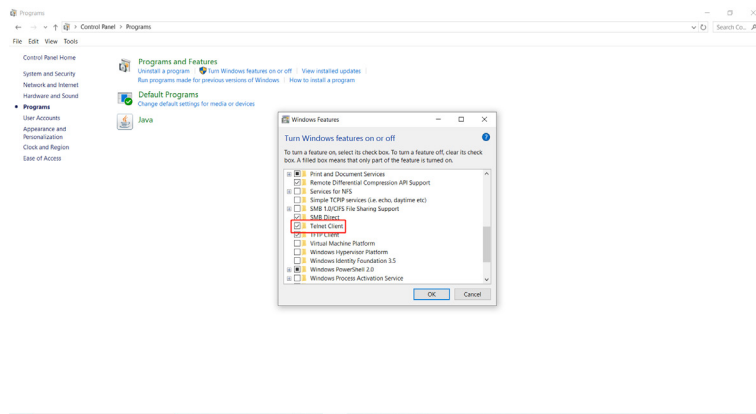

1.2 Logging In via Command-line Interface

- In the lower-left search bar, type "**cmd**" and press Enter key. From the search results, click on "**Command Prompt**" to open the Command Prompt interface.
- Input **telnet x.x.x.x 23**. "23" is the default port number.

For example, if the device's IP address is 192.168.4.53, input *telnet 192.168.4.53 23* and then press **Enter**.

```
C:\Users\proitav>telnet 192.168.4.53 22
```

- When the device prompts login, input **admin** and press **Enter**, then the device prompts password, just press **Enter** directly because the user admin has no default password.

```
username:admin
password:**
@!come!
#
```

Now, the device is ready to execute the CLI API command.

1.3 API Commands Overview

This device's API commands are mainly classified into the following types.

- gbconfig: manage the configurations of the device.
- gbcontrol: control the device to do something.

1.3.1 gbconfig Commands

gbconfig commands are mainly classified into two types **gbconfig** and **gbconfig -s** commands.

Commands	Description
gbconfig --camera-mode	Set the camera's tracking mode for the device.
gbconfig -s camera-mode	Get the camera's tracking mode for the device.
gbconfig --camera-zoom	Set the camera's zoom.
gbconfig -s camera-zoom	Get the camera's zoom.
gbconfig --camera-coord	Set coordinate information.
gbconfig -s camera-coord	Check coordinate information.
gbconfig --camera-savecoord	Save the coordinates as preset 1 or preset 2.
gbconfig -s --camera-savecoord	Get which preset corresponds to the coordinates.
gbconfig --camera-loadcoord	Load specific preset to the camera.
gbconfig --camera-mirror	Turn on/off camera's mirroring.
gbconfig -s camera-mirror	Get the camera's mirroring status.

Commands	Description
gbconfig --camera-hd	Set camera's HD to on/off.
gbconfig -s camera-hd	Get camera's HD status.
gbconfig --camera-wdr	Set camera's WDR value.
gbconfig -s camera-wdr	Get camera's WDR value.
gbconfig --camera-powerfreq	Set powerline frequency.
gbconfig -s camera-powerfreq	Get powerline frequency.
gbconfig --camera-autoframing	Set camera's autoframing tracking effect.
gbconfig -s camera-autoframing	Get camera's autoframing tracking effect.
gbconfig --camera-autoframingspeed	Set switching mode in auto framing mode.
gbconfig -s camera-autoframingspeed	Get switching mode in auto framing mode.
gbconfig --camera-speakertracking	Set speaker's tracking mode.
gbconfig -s camera-speakertracking	Get speaker's tracking mode.
gbconfig --camera-getconfig	Get common configuration information.
gbconfig --camera-geteptz	Get eptz information.
gbconfig --camera-max-resolution	Set camera's maximum resolution.
gbconfig -s camera-max-resolution	Get camera's maximum resolution.
gbconfig --camera-ai-region-select	Set the camera AI area selection status.
gbconfig -s camera-ai-region-select	Get the camera AI area selection status.
gbconfig --camera-ai-region-info	Set the camera AI area information.
gbconfig -s camera-ai-region-info	Get the camera AI area information.
gbconfig --hdcp-enable hdmi	Set HDCP on/off for HDMI Out
bconfig -s hdcp-enable	Get HDCP status for HDMI out
gbconfig --cec-enable	Set CEC enable/disable.
gbconfig -s cec-enable	Get CEC status.
gbcontrol --sinkpower	Send power on/off function via HDMI OUT.
gbcontrol --send-cmd	Hdmi Out sends cec command separately.
gbconfig -s cec-cmd	Get CEC commands for controlling display on/off.
gbconfig --auto-standby-time	Set the delay time to enter standby mode.
gbconfig -s auto-standby-time	Get the delay time to enter standby mode.
gbconfig --auto-standby-enable	Set to enable/disable automatically enter standby mode.
gbconfig -s auto-standby-enable	Get to enable/disable automatically enter standby mode.
gbconfig --autovolume	Set audio volume automatically.
gbcontrol --device-info	Get firmware version.
gbconfig --vb-mic-disable	Set whether to disable the built-in mic when mic10/mic11 is connected.
gbconfig -s vb-mic-disable	Get whether to disable the built-in mic when mic10/mic11 is connected.
gbconfig --telnet-mode	Set the working mode of the Telnet server that provides

Commands	Description
	external API access.
<code>gbconfig -s telnet-mode</code>	Get the working mode of the Telnet server that provides external API access.
<code>gbcontrol --reset-to-default</code>	Reset the device to factory defaults.
<code>gbconfig --ao-select</code>	Set the audio output interface.
<code>gbconfig -s ao-select</code>	Get the audio output interface.

2 Command Sets

2.1 Camera

2.1.1 `gbconfig --camera-mode`

Command	<code>gbconfig --camera-mode {normal autoframing speakertracking presentertracking individualsgallery}</code>
Response	
Description	Set camera's tracking mode from the following: • normal: Users need to adjust the camera to appropriate angle manually. • autoframing: Camera automatically tracks the people based on face recognition. • speakertracking: Camera automatically tracks the speaker based on speech recognition. • presentertracking: Camera automatically tracks the presenter always. • Individualsgallery: Camera identifies individuals in the frame and generates a multi-view display in left-to-right order.

Example:

To set the tracking mode to autoframing:

Command:

```
gbconfig --camera-mode autoframing
```

2.1.2 `gbconfig -s camera-mode`

Command	<code>gbconfig -s camera-mode</code>
Response	<i>normal/autoframing/speakertracking/presentertracking/individualsgallery</i>
Description	Get camera's tracking mode.

Example:

To get the camera's tracking mode:

Command:

```
gbconfig -s camera-mode
```

Response:

normal

2.1.3 gbconfig --camera-zoom

Command	gbconfig --camera-zoom 100~500
Response	0-success, a non-zero number- indicates failure, -1-video is not turn on, -2-indicates not OFF
Description	Set camera's zoom. The available value ranges from 100% to the camera's maximum physical zoom. For example, if the camera's maximum physical zoom is 500, the available range of the zoom is [100, 500].

Example:

To set the camera zoom as 100:

Command:

```
gbconfig --camera-zoom 100
```

Response:

```
0
```

2.1.4 gbconfig -s camera-zoom

Command	gbconfig -s camera-zoom
Response	xxx
Description	Get camera's zoom.

Example:

To get the camera zoom:

Command:

```
gbconfig -s camera-zoom
```

Response:

```
100
```

2.1.5 gbconfig --camera-coord

Command	gbconfig --camera-coord 0 0
Response	0-success, a non-zero number- indicates failure, -1-video is not turn on, -2-indicates not OFF
Description	Set coordinate information.

Example:

Set camera's coordinate information to 0,0:

Command:

```
gbconfig --camera-coord 0 0
```

Response:

```
0
```

2.1.6 gbconfig -s camera-coord

Command	gbconfig -s camera-coord
Response	
Description	Get coordinate information.

Example:

Get camera's coordinate information:

Command:

```
gbconfig -s camera-coord
```

Response:

```
0 0
```

2.1.7 gbconfig --camera-savecoord

Command	gbconfig --camera-savecoord [1 ~ 2]
Response	0 - success, non-0-failure, -1-video not opened, -2-non-OFF, -4-illegal number, -5-file error
Description	Save current coordinates to specified preset. Preset 1 and 2 are offered.

Example:

To set current coordinates to preset 1:

Command:

```
gbconfig --camera-savecoord
```

Response:

```
0
```

2.1.8 gbconfig -s camera-savecoord

Command	gbconfig -s camera-savecoord [1 ~ 2]
Response	true/false
Description	To get if the coordinates are saved to the specified preset. • True: The coordinates have been saved to the specified preset already. • False: The coordinates are not saved to the specified preset.

Example:

To get if current coordinates are save to preset 1:

Command:

```
gbconfig -s camera-savecoord 1
```

Response:

```
false
```

2.1.9 gbconfig --camera-loadcoord

Command	gbconfig --camera-loadcoord [1 2]
Response	0 - success, non-0 - failure, -1 - video not open, -2 - non-OFF, -3 - preset position does not exist, -4 - illegal number, -5 - preset position data abnormal
Description	Load preset 1/2 to the camera.

Example:

To load preset 1 to the camera:

Command:

```
gbconfig --camera-loadcoord 1
```

Response:

```
0
```

2.1.10 gbconfig --camera-mirror

Command	gbconfig --camera-mirror {n y}
Response	
Description	To turn on or off the camera's mirroring function. • n: Mirroring off. • y: Mirroring on.

Example:

To turn on mirroring:

Command:

```
gbconfig --camera-mirror y
```

2.1.11 gbconfig -s camera-mirror

Command	gbconfig -s camera-mirror
Response	n/y
Description	To get the mirroring status. • n: Mirroring off. • y: Mirroring on.

Example:

To get the mirroring status:

Command:

```
gbconfig -s camera-mirror
```

Response:

```
y
```

2.1.12 gbconfig --camera-hd

Command	gbconfig --camera-hd {n y}
Response	

Description	To Set camera's hd to on/off. - n: hd off. - y: hd on.
--------------------	--

Example:

To Set hd to on:

Command:

gbconfig --camera-hd n

2.1.13 gbconfig -s camera-hd

Command	gbconfig -s camera-hd
Response	n/y
Description	To get camera's hd status. - n: hd off. - y: hd on.

Example:

To get hd status:

Command:

gbconfig -s camera-hd

Response:

y

2.1.14 gbconfig --camera-wdr

Command	gbconfig --camera-wdr [-7 ~ 7]
Response	
Description	To set camera's WDR. (range -7~7)

Example:

To set camera's wdr to 7:

Command:

gbconfig --camera-wdr 7

2.1.15 gbconfig -s camera-wdr

Command	gbconfig -s camera-wdr
Response	-7 ~ 7
Description	To get camera's WDR. (range -7~7)

Example:

To get camera's wdr:

Command:

gbconfig -s camera-wdr

Response:

7

2.1.16 gbconfig --camera-powerfreq

Command	<code>gbconfig --camera-powerfreq {50 60}</code>
Response	
Description	To change the powerline frequency to prevent flicker in the video. • 50: Change the frequency to 50Hz. • 60: Change the frequency to 60Hz.

Example:

To change the powerline frequency to 60Hz:

Command:

```
gbconfig --camera-powerfreq 60
```

2.1.17 gbconfig -s camera-powerfreq

Command	<code>gbconfig -s camera-powerfreq</code>
Response	<code>50/60</code>
Description	Get the powerline frequency. • 50: Change the frequency to 50Hz. • 60: Change the frequency to 60Hz.

Example:

To get the powerline frequency:

Command:

```
gbconfig -s camera-powerfreq
```

Response:

60

2.1.18 gbconfig --camera-autoframing

Command	<code>gbconfig --camera-autoframing {smooth immediate}</code>
Response	
Description	Set camera's autoframing tracking effect.

Example:

To set camera's autoframing tracking effect to smooth:

Command:

```
gbconfig --camera-autoframing smooth
```

2.1.19 gbconfig -s camera-autoframing

Command	gbconfig -s camera-autoframing
Response	<i>smooth/immediate</i>
Description	Get camera's autoframing tracking effect.

Example:

To get camera's autoframing tracking effect:

Command:

```
gbconfig -s camera-autoframing
```

Response:

```
smooth
```

2.1.20 gbconfig --camera-autoframingspeed

Command	gbconfig --camera-autoframingspeed {slow normal fast}
Response	
Description	Set switching speed in autoframing mode.

Example:

To Set switching speed in autoframing mode to fast:

Command:

```
gbconfig --camera-autoframingspeed fast
```

2.1.21 gbconfig -s camera-autoframingspeed

Command	gbconfig -s camera-autoframingspeed
Response	<i>slow\normal\fast</i>
Description	Get switching speed in autoframing mode.

Example:

To get switching speed in autoframing mode:

Command:

```
gbconfig -s camera-autoframingspeed
```

2.1.22 gbconfig --camera-speakertracking

Command	gbconfig --camera-speakertracking {smooth immediate}
Response	
Description	Set speaker tracking switching mode

Example:

To Set speaker tracking switching mode to smooth:

Command:

gbconfig --camera-speakertracking to smooth

2.1.23 gbconfig -s camera-speakertracking

Command	gbconfig -s camera-speakertracking
Response	<i>smooth/immediate</i>
Description	Get speaker tracking switching mode

Example:

To get speaker tracking switching mode:

Command:

gbconfig -s camera-speakertracking

Response:

smooth

2.1.24 gbconfig --camera-getconfig

Command	gbconfig --camera-getconfig
Response	<i>{"result": { "2ddenoise": "n", "3ddenoise": "n", "autoframing": "smooth", "autoframingspeed": "slow", "autozoomunit": 1, "beauty": "n", "hdr": "y", "mirror": "y", "osd": "n", "phymaxzoom": 300, "powerfreq": "50", "shut": "y", "speakertracking": "smooth", "speakertrackingspeed": "fast", "version": "V1.0.78", "xmax": 108000, "xmin": -108000, "xstep": 3600, "ymax": 108000, "ymin": -108000, "ystep": 3600, "zoom": 500 }}</i>
Description	Get common configuration information.

Example:

To get common configuration information:

Command:

gbconfig --camera-getconfig

Response:

*{ "result": { "2ddenoise": "n", "3ddenoise": "n", "autoframing": "smooth",
"autoframingspeed": "slow", "autozoomunit": 1, "beauty": "n", "hdr": "y", "mirror":
"y", "osd": "n", "phymaxzoom": 300, "powerfreq": "50", "shut": "y",
"speakertracking": "smooth", "speakertrackingspeed": "fast", "version": "V1.0.78",
"xmax": 108000, "xmin": -108000, "xstep": 3600, "ymax": 108000, "ymin":
-108000, "ystep": 3600, "zoom": 500 }}*

2.1.25 gbconfig --camera-geteptz

Command	gbconfig --camera-geteptz
Response	<i>{ "result": { "autozoomunit": 1, "phymaxzoom": 300, "xmax": 108000, "xmin": -108000, "xstep": 3600, "ymax": 108000, "ymin": -108000, "ystep": 3600, "zoom": 500 }}</i>
Description	Get eptz information.

Example:

To get eptz information:

Command:

```
gbconfig --camera-geteptz
```

Response:

```
{"result": {"autozoomunit": 1, "phymaxzoom": 300, "xmax": 108000, "xmin": -108000, "xstep": 3600, "ymax": 108000, "ymin": -108000, "ystep": 3600, "zoom": 500}}
```

2.1.26 gbconfig --camera-max-resolution

Command	<code>gbconfig --camera-max-resolution { 0 1 2 }</code>
Response	
Description	Set the maximum resolution of the camera 0: 4K; 1: 1080P 2: 720P

Example:

To set the maximum resolution of the camera to 4K:

Command:

```
gbconfig --camera-max-resolution 0
```

2.1.27 gbconfig -s camera-max-resolution

Command	<code>gbconfig -s camera-max-resolution</code>
Response	<i>0/1/2</i>
Description	Set the maximum resolution of the camera 0: 4K; 1: 1080P 2: 720P

Example:

To get the maximum resolution of the camera:

Command:

```
gbconfig -s camera-max-resolution
```

Response:

```
0
```

2.1.28 gbconfig --camera-ai-region-select

Command	<code>gbconfig --camera-ai-region-select { 0 1 }</code>
Response	

Description	Set the camera AI area selection status. 0: indicates that not in the selected state. 1: indicates that the selection state has been entered.
--------------------	---

Example:

To set the camera AI area selection is entered:

Command:

```
gbconfig --camera-ai-region-select 0
```

2.1.29 gbconfig -s camera-ai-region-select

Command	gbconfig -s camera-ai-region-select
Response	
Description	Get the camera AI area selection status. 0: indicates that not in the selected state. 1: indicates that the selection state has been entered.

Example:

To get the camera AI area selection status:

Command:

```
gbconfig -s camera-ai-region-select
```

2.1.30 gbconfig --camera-ai-region-info

Command	gbconfig --camera-ai-region-info x1 y1 x2 y2				
Response	<i>0-success; -4-Invalid parameter</i>				
Description	Set the camera AI area information.				
	Parameter	Name	Type	Length	Description
	x1	x percentage on upper left corner	UINT8	1	The percentage relative to 1280, the initial value is 0, 1 represents 12.8
	y1	y percentage on upper left corner	UINT8	1	The percentage relative to 720, the initial value is 0, 1 represents 7.2
	x2	x percentage on lower right corner	UINT8	1	The percentage relative to 1280, initial value is 100
	y2	y percentage on lower right corner	UINT8	1	The percentage relative to 720, initial value is 100
Note: The value of each of the 4 parameters must be in the range of 0-100, and x1<x2, y1<y2.					

Example:

To set the camera AI area information:

Command:

```
gbconfig --camera-ai-region-info x1
```

2.1.31 gbconfig -s camera-ai-region-info

Command	gbconfig -s camera-ai-region-info				
Response					
Description	Get the camera AI area information.				
	Parameter	Name	Type	Length	Description
	x1	x percentage on upper left corner	UINT8	1	The percentage relative to 1280, the initial value is 0, 1 represents 12.8
	y1	y percentage on upper left corner	UINT8	1	The percentage relative to 720, the initial value is 0, 1 represents 7.2
	x2	x percentage on lower right corner	UINT8	1	The percentage relative to 1280, initial value is 100
	y2	y percentage on lower right corner	UINT8	1	The percentage relative to 720, initial value is 100
Note: The value of each of the 4 parameters must be in the range of 0-100, and $x1 < x2$, $y1 < y2$.					

Example:

To get the camera AI area information:

Command:

```
gbconfig -s camera-ai-region-info
```

2.2 Video

2.2.1 gbconfig --hdcp-enable

Command	gbconfig --hdcp-enable { y n } { HDMI1 HDMI2 }
Response	
Description	Enable/disable HDCP function of HDMI Out. y: HDCP ON n: HDCP OFF HDMI1: HDMI OUT 1 HDMI2: HDMI OUT 2

Example:

To set HDCP of HDMI out 1 to on:

Command:

```
gbconfig --hdcpc-enable y HDMI1
```

2.2.2 gbconfig -s hdcpc-enable

Command	gbconfig -s hdcpc-enable { HDMI1 HDMI2 }
Response	off 1.4 2.2
Description	Get HDCP status of HDMI Out.

Example:

To get HDCP status of HDMI out 1:

Command:

```
gbconfig -s hdcpc-enable HDMI1
```

Response:

```
Off
```

2.2.3 gbconfig --cec-enable

Command	gbconfig --cec-enable {n y}
Response	
Description	Set the CEC on/off. - n: Turn off CEC. - y: Turn on CEC.

Example:

To turn on CEC:

Command:

```
gbconfig --cec-enable y
```

2.2.4 gbconfig -s cec-enable

Command	gbconfig -s cec-enable
Response	n/y
Description	Get CEC status. - n: CEC is off. - y: CEC is on. Note: Once CEC is off, the command “<i>gbcontrol --sinkpower</i>” will be unavailable, and the switching between normal working and standby for VB10 will be invalid as well.

Example:

To get CEC status:

Command:

gbconfig -s cec-enable

Response:

y

2.2.5 gbcontrol --sinkpower

Command	gbcontrol --sinkpower {on off} { HDMI1 HDM2 ALL }
Response	
Description	To send CEC command for controlling display on or off. • on: Send CEC command for controlling display on. • Off: Send CEC command for controlling display off. • HDMI1: HDMI OUT1 • HDMI2: HDMI OUT2 • ALL: HDMI OUT1+HDMI OUT2

Example:

To send CEC command for controlling display connected to HDMI OUT1 to on:

Command:

gbcontrol --sinkpower on HDMI1

2.2.6 gbcontrol --send-cmd

Command	gbcontrol --send-cmd { hdmi1 hdmi2 } [str]
Response	
Description	Hdmi Out sends cec command separately. hdmi1: HDMI OUT1 hdmi2: HDMI OUT2 str: CEC command in string format

Example:

To send CEC command for controlling via HDMI OUT1:

Command:

gbcontrol --sinkpower on HDMI1 40 04

2.2.7 gbconfig --cec-cmd

Command	gbconfig --cec-cmd {on off} CmdStr {HDMI1 HDMI2}
Response	
Description	To configure and save CEC commands for controlling display on or off on the device. • on: Configure CEC command for controlling display on. • Off: Configure CEC command for controlling display off. CmdStr: CEC command in string or hex format. For example, the CEC command

	to power on display may be "40 04". hdmi1: HDMI OUT1 hdmi2: HDMI OUT2
--	---

Example:

To configure and save CEC command "40 04" for powering on display on the device:

Command:

gbconfig -cec-cmd hdmi on 40 04

2.2.8 gbconfig --auto-standby-time

Command	gbconfig --auto-standby-time [0 ~ 30]
Response	
Description	Set the time to enter standby mode. Range: 0~30

Example:

Set the time to enter standby mode to 30s:

Command:

gbconfig --auto-standby-time 30

2.2.9 gbconfig -s auto-standby-time

Command	gbconfig -s auto-standby-time
Response	0~30
Description	Get the time to enter standby mode. Range: 0~30

Example:

Get the time to enter standby:

Command:

gbconfig -s auto-standby-time

Response:

20

2.2.10 auto-standby-enable

Command	gbconfig --auto-standby-enable {n y}
Response	
Description	Set to enable/disable auto standby. n: off y: on

Example:

Set to enable auto standby:

Command:

```
gbconfig --auto-standby-enable y
```

2.2.11 gbconfig -s auto-standby-enable

Command	<code>gbconfig -s auto-standby-enable</code>
Response	n/y
Description	Get to auto standby status.

Example:

Get to enable auto standby:

Command:

```
gbconfig -s auto-standby-enable
```

Response:

```
y
```

2.3 Audio

2.3.1 gbconfig --autovolume

Command	<code>gbconfig --autovolume {inc dec}</code>
Response	
Description	Increase or decrease volume automatically. inc: Increase volume. dec: decrease volume.

Example:

To set increase volume automatically:

Command:

```
gbconfig --autovolume inc
```

2.4 System

2.4.1 gbcontrol --device-info

Command	<code>gbcontrol --device-info</code>
Response	Vxx.xx.xx
Description	Get device's firmware version.

Example:

To get device's firmware version:

Command:

gbcontrol --device-info

Response:

V1.1.1

2.4.2 gbconfig --vb-mic-disable

Command	<i>gbconfig --vb-mic-disable {n y}</i>
Response	
Description	Set whether to disable the built-in mic when mic10/mic11 is connected. n: disable y: enable

Example:

To set to disable the built-in mic when mic10/mic11 is connected:

Command:

gbconfig --vb-mic-disable y

2.4.3 gbconfig -s vb-mic-disable

Command	<i>gbconfig -s vb-mic-disable</i>
Response	n/y
Description	Get whether to disable the built-in mic when mic10/mic11 is connected. n: disable y: enable

Example:

To get whether to disable the built-in mic when mic10/mic11 is connected:

Command:

gbconfig -s vb-mic-disable

Response:

y

2.4.4 gbconfig --telnet-mode

Command	<i>gbconfig --telnet-mode {std tcp}</i>
Response	
Description	Set the working mode of the TelnetServer for external API access.

Example:

To set the working mode of the TelnetServer for external API access to std:

Command:

gbconfig --telnet-mode std

2.4.5 gbconfig -s telnet-mode

Command	<code>gbconfig -s telnet-mode</code>
Response	std/tcp
Description	Get the working mode of the TelnetServer for external API access.

Example:

To get the working mode of the TelnetServer for external API access:

Command:

```
gbconfig -s telnet-mode
```

Response:

```
std
```

2.4.6 gbcontrol --reset-to-default

Command	<code>gbcontrol --reset-to-default</code>
Response	
Description	Reset the device to factory defaults.

Example:

To reset the device to factory defaults:

Command:

```
gbcontrol --reset-to-default
```

2.4.7 gbconfig --ao-select

Command	<code>gbconfig --ao-select {0 1 2}</code>
Response	
Description	Set audio output ports. 0: indicates speaker; 1: indicates hdmi out 2: indicates speaker and hdmi out

Example:

To set audio output port to speaker:

Command:

```
gbconfig --ao-select 0
```

2.4.8 gbconfig -s ao-select

Command	<code>gbconfig -s ao-select</code>
Response	0/1/2

Description	Get audio output ports. 0: indicates speaker; 1: indicates hdmi out 2: indicates speaker and hdmi out
--------------------	--

Example:

To get audio output port:

Command:

```
gbconfig -s ao-select
```

Response:

```
1
```