


ISOMETRIC DRAWING AUTO-EDIT

E3D ISO Drawing Updater

Next-gen integrated version reorganizing the isometric-edit scripts into an src package (handler · *_edit modules).

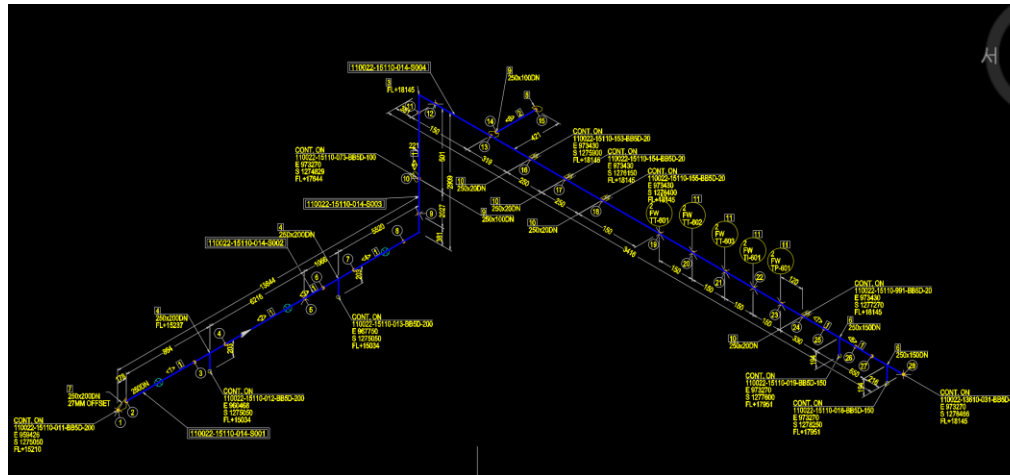

Key Purpose

Why this program

1. One-click cleanup of raw isometric DXF drawings

– Runs a 15-step edit pipeline (drawing-number delete, weld-table align, elbow-arc, spool text) on every selected sheet at once

→ **Effect:** Hours of manual per-drawing tidying collapse into a single batch run, with consistent results across the whole set

2. Sequential sheet numbering across a drawing set

– Assigns NNN-OF-TTT sheet numbers automatically over all selected DXFs

→ **Effect:** No hand-typed sheet counts and no numbering gaps or mismatches in the issued package

3. Configurable, repeatable editing rules

– Toggles and coordinate/text settings are saved and reloadable, and edits run in parallel across files

→ **Effect:** The same house standard is applied every time and large sets finish several times faster

Required inputs : One or more raw isometric DXF drawings exported from E3D ISO

Main Window – Item Guide

The screenshot shows the 'E3D ISO Drawing Auto Editing Tool' window. It features a top orange bar with the title and a close button. Below this is a tab labeled '1'. The main area is divided into several sections: 'Select Dxf Dwg from E3D ISO :', 'Options', 'Coordinates', and 'Spool No. Length Text'. The 'Select Dxf Dwg' section contains a large list box (2), a text field for 'Spool MAC' (3) with the value 'C:/SPOOL.MAC', and a status 'No file selected'. Below this are buttons for 'Select', 'Remove Selected' (4), 'Clear All', 'Mac for Spool' (5), and an 'Open' button (6). The 'Options' section has checkboxes for 'DwgNO Delete' (7), 'Arrow Block Change' (8), and 'Elbow Arc' (9). The 'Coordinates' section has input fields for 'Single Pipe Spool No. X' (10) with value '231.7' and 'Weld Table Align X' (11) with value '0' (0 = keep current position). The 'Spool No. Length Text' section has input fields for 'Text Height' (2.5), 'Text Width Ratio' (12) with value '0.9', and 'Start Y Coord' (Auto) (Auto = auto-detect from drawing). At the bottom are buttons for 'Auto Edit' (13), 'ISO Auto Numbering' (14), 'Load', and 'Cancel' (15).

1. General tab
2. Selected DXF drawing list (from E3D ISO)
3. Spool MAC path — macro used for spool numbers
4. Select / Remove Selected / Clear All
5. Mac for Spool — build the spool-number MAC
6. Open selected drawing
7. DwgNO Delete (remove drawing number)
8. Arrow Block Change (arrows to blocks)
9. Elbow Arc (elbow edit on/off)
10. Single Pipe Spool No. X coordinate
11. Weld Table Align X (0 = keep position)
12. Spool No. text: height / width ratio / start Y
13. Auto Edit — run the cleanup pipeline
14. ISO Auto Numbering — assign sheet numbers
15. Load / Cancel

Processing Steps

What 'Auto Edit' runs, in order

1. Normalize polylines to lines
2. Weld layer assignment
3. Dimension edit
4. Support tag edit
5. Spool-number text edit
6. Elbow arc edit
7. Olet dimension delete
8. Position marker delete
9. Instrument-number edit
10. Weld-number edit
11. Weld-table align
12. Item-number edit
13. Fall/slope text edit
14. Continuation text edit
15. Final layer and drawing-number cleanup
16. Sheet auto-numbering

Overview

What it does

1. Next-gen integrated version reorganizing the isometric-edit scripts into an src package (handler
2. *_edit modules)

Category: Isometric Drawing Auto-Edit

Folder: ISO_AUTO_EDIT/ISO UPDATE NEW

Main scripts: iso_updater.py


Scripts / Status: 22 scripts · Experimental

Tags: refactor · package · handler


Output Samples

Output Samples 1

Spool Leng Auto Create / Weld Bore & Type Auto Create

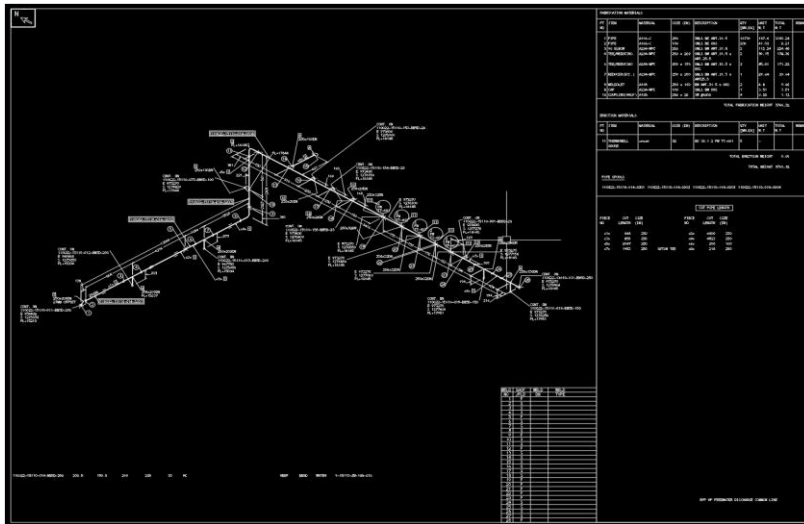


ISO Input File 1

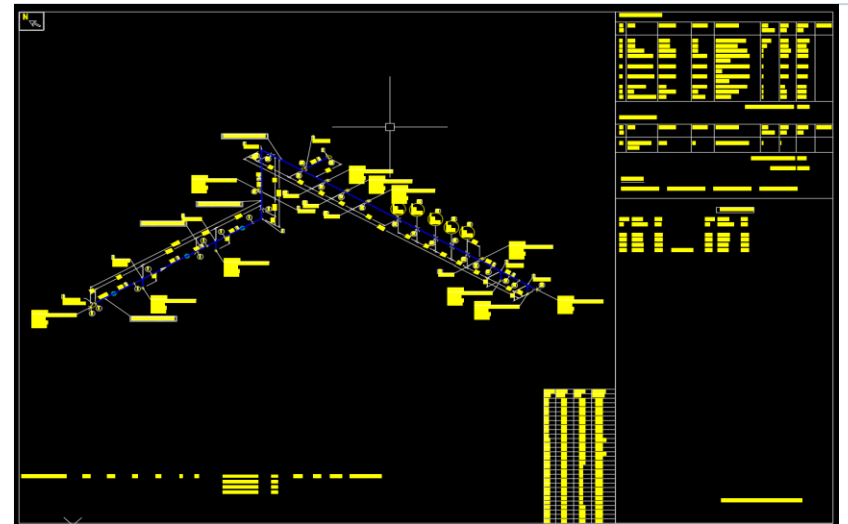

ISO Auto Output File 1

Output Samples

Output Samples 2

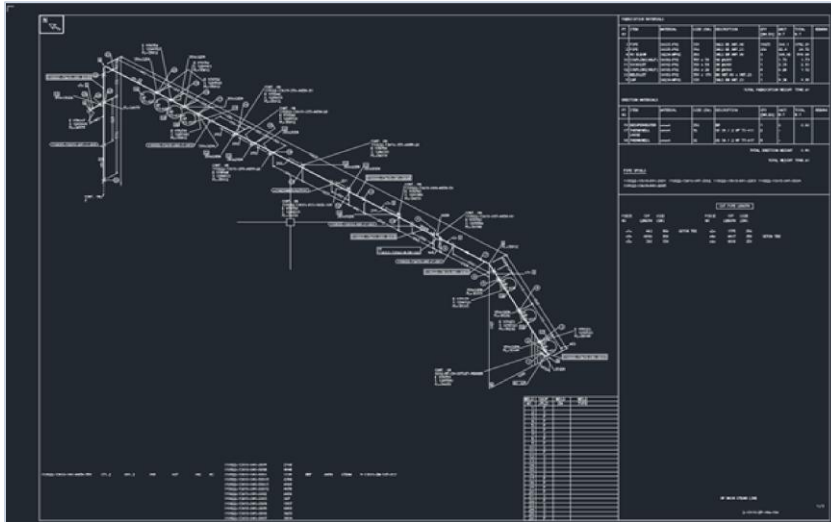







ISO Input File 2



ISO Auto Output File 2

Output Samples


Output Samples 3

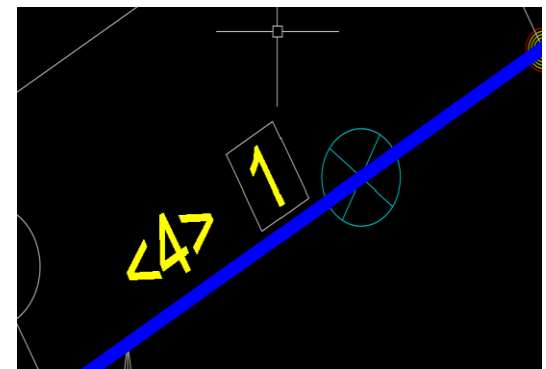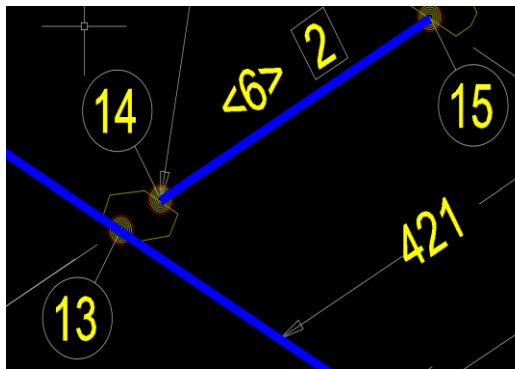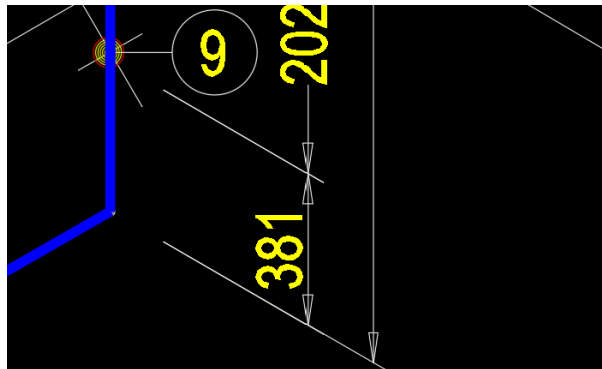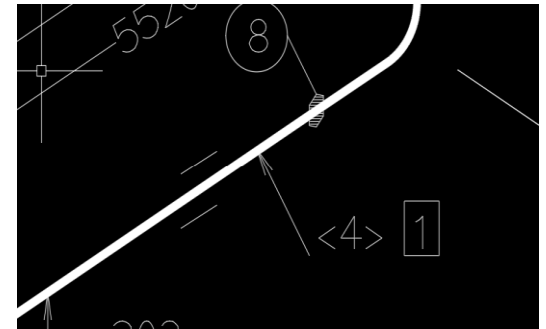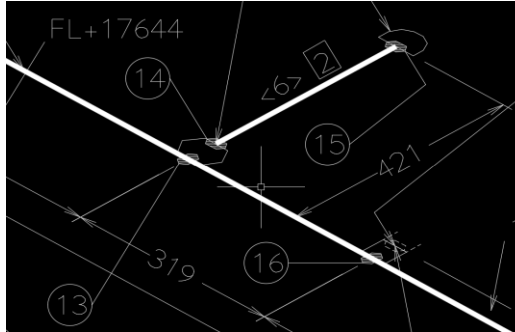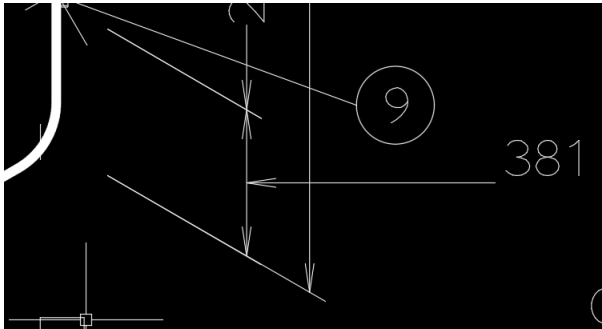

ISO Auto Output File 2-1

Output Samples



Output Samples 3

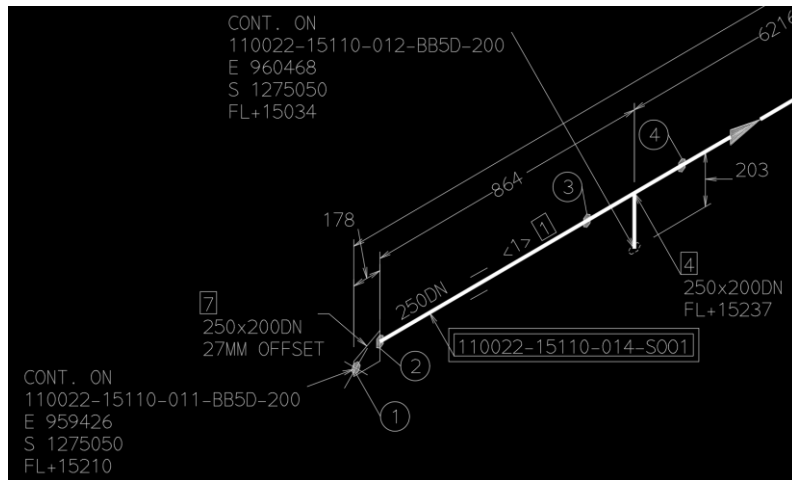

ISO Auto Output File 2-1

Output Samples



Output Samples 3

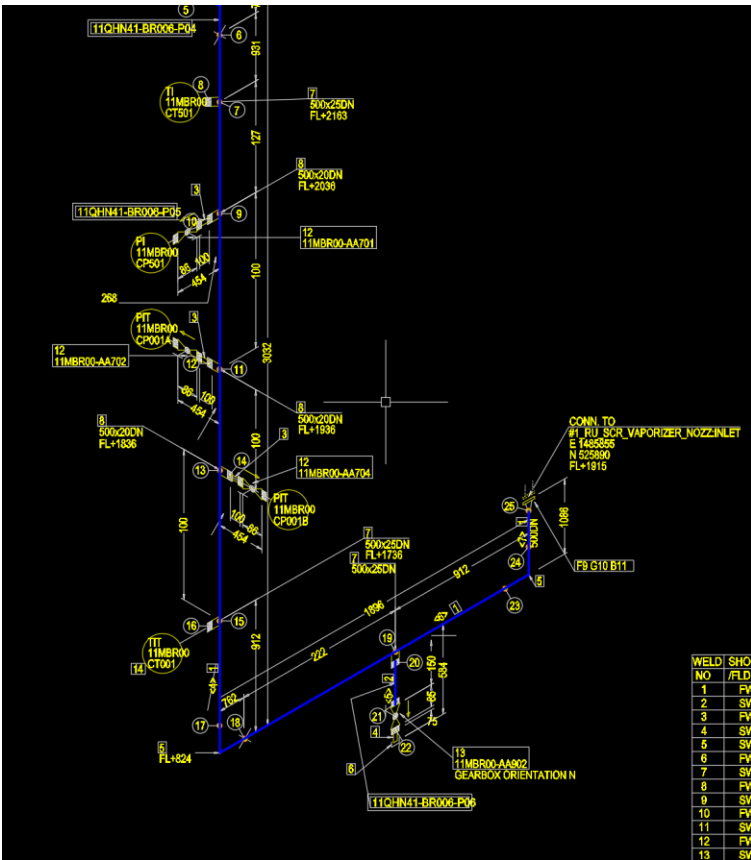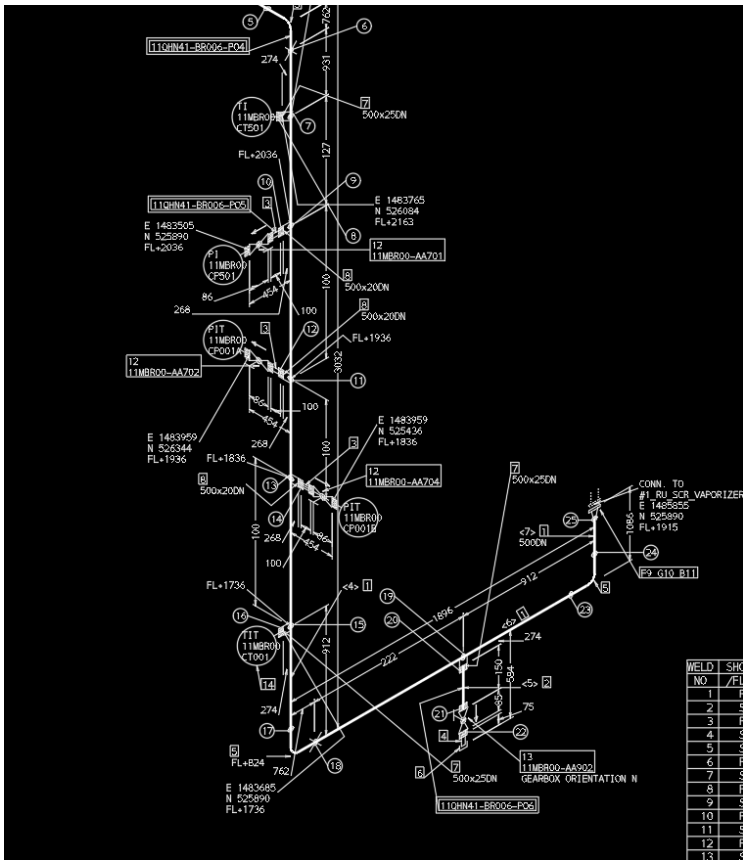

ISO Auto Output File 2-1

Output Samples

Output Samples 3

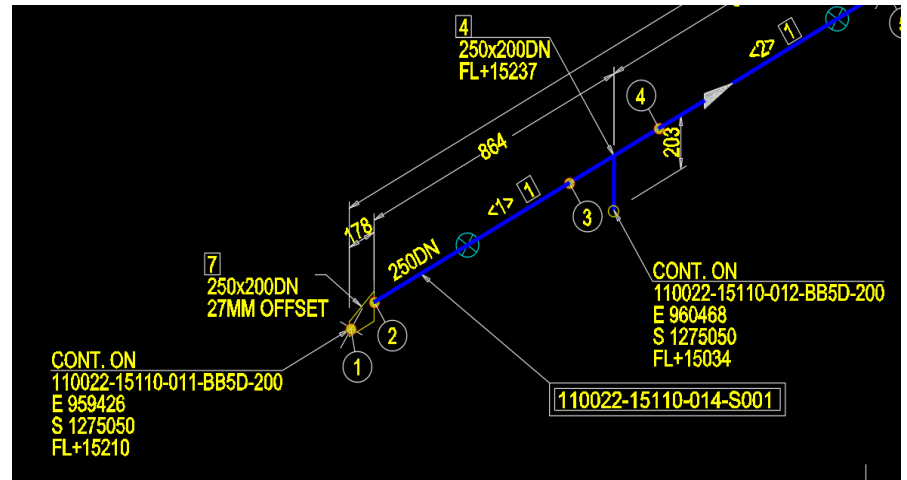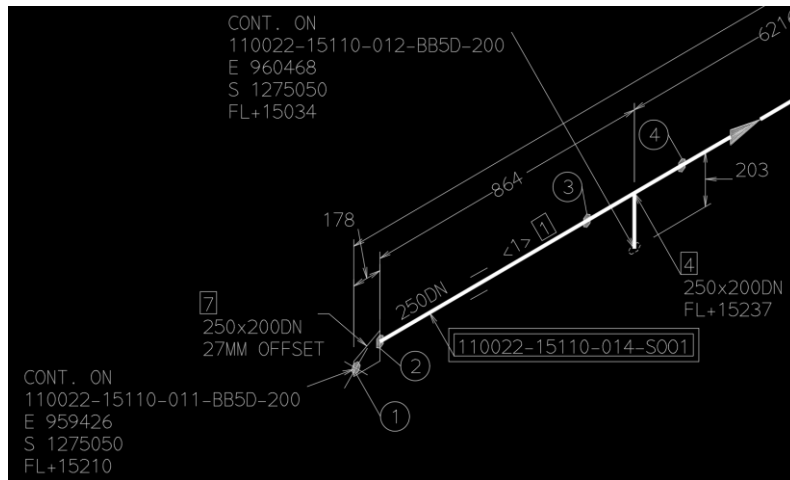



ISO Auto Output File 2-1

Output Samples

Output Samples 4

WELD NO	SHOP /FLD	WELD DN	WELD TYPE
1	F		
2	S		
3	S		
4	S		
5	F		
6	S		
7	S		
8	S		
9	F		
10	S		
11	S		
12	F		
13	S		
14	S		
15	S		
16	S		
17	S		
18	S		
19	F		
20	F		
21	F		
22	F		
23	F		
24	S		
25	S		
26	S		
27	S		
28	F		

WELD NO	SHOP /FLD	WELD DN	WELD TYPE
1	FW	200	BW
2	SW	250	BW
3	SW	250	BW
4	SW	250	BW
5	FW	250	BW
6	SW	250	BW
7	SW	250	BW
8	SW	250	BW
9	FW	250	BW
10	SW	100	OLET
11	SW	250	BW
12	FW	250	BW
13	SW	100	OLET
14	SW	100	BW
15	SW	100	BW
16	SW	20	SW
17	SW	20	SW
18	SW	20	SW
19	FW	32	SW
20	FW	32	SW
21	FW	32	SW
22	FW	32	SW
23	FW	32	SW
24	SW	20	SW
25	SW	250	BW
26	SW	250	BW
27	SW	250	BW
28	FW	250	BW

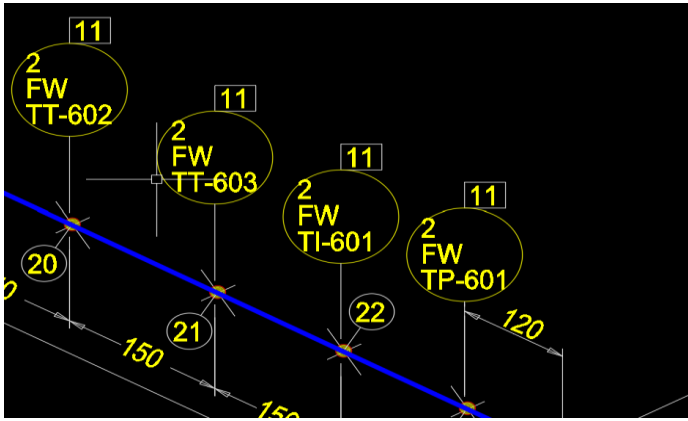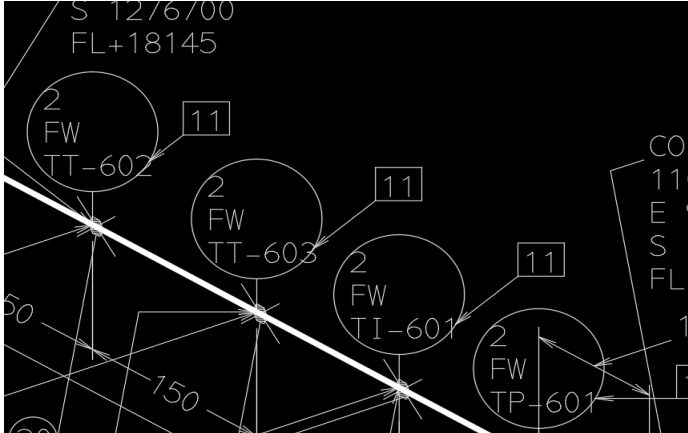

ISO Auto Output File 2-1

Notes & Information

- Part of the in-house Plant Engineering automation suite — category: Isometric Drawing Auto-Edit.
- Runs offline as a pure-Python / Tkinter tool; portable across PCs via OneDrive sync (needs Python + packages).
- Launch from the PC launcher (런처.bat) or run the main script: iso_updater.py.
- Current status: Experimental — behavior/outputs may still change.
- Output samples and the program window above reflect the current build.

Thank You

E3D ISO Drawing Updater · Plant Engineering Total Service System