




Instruction Manual


Device Buttons

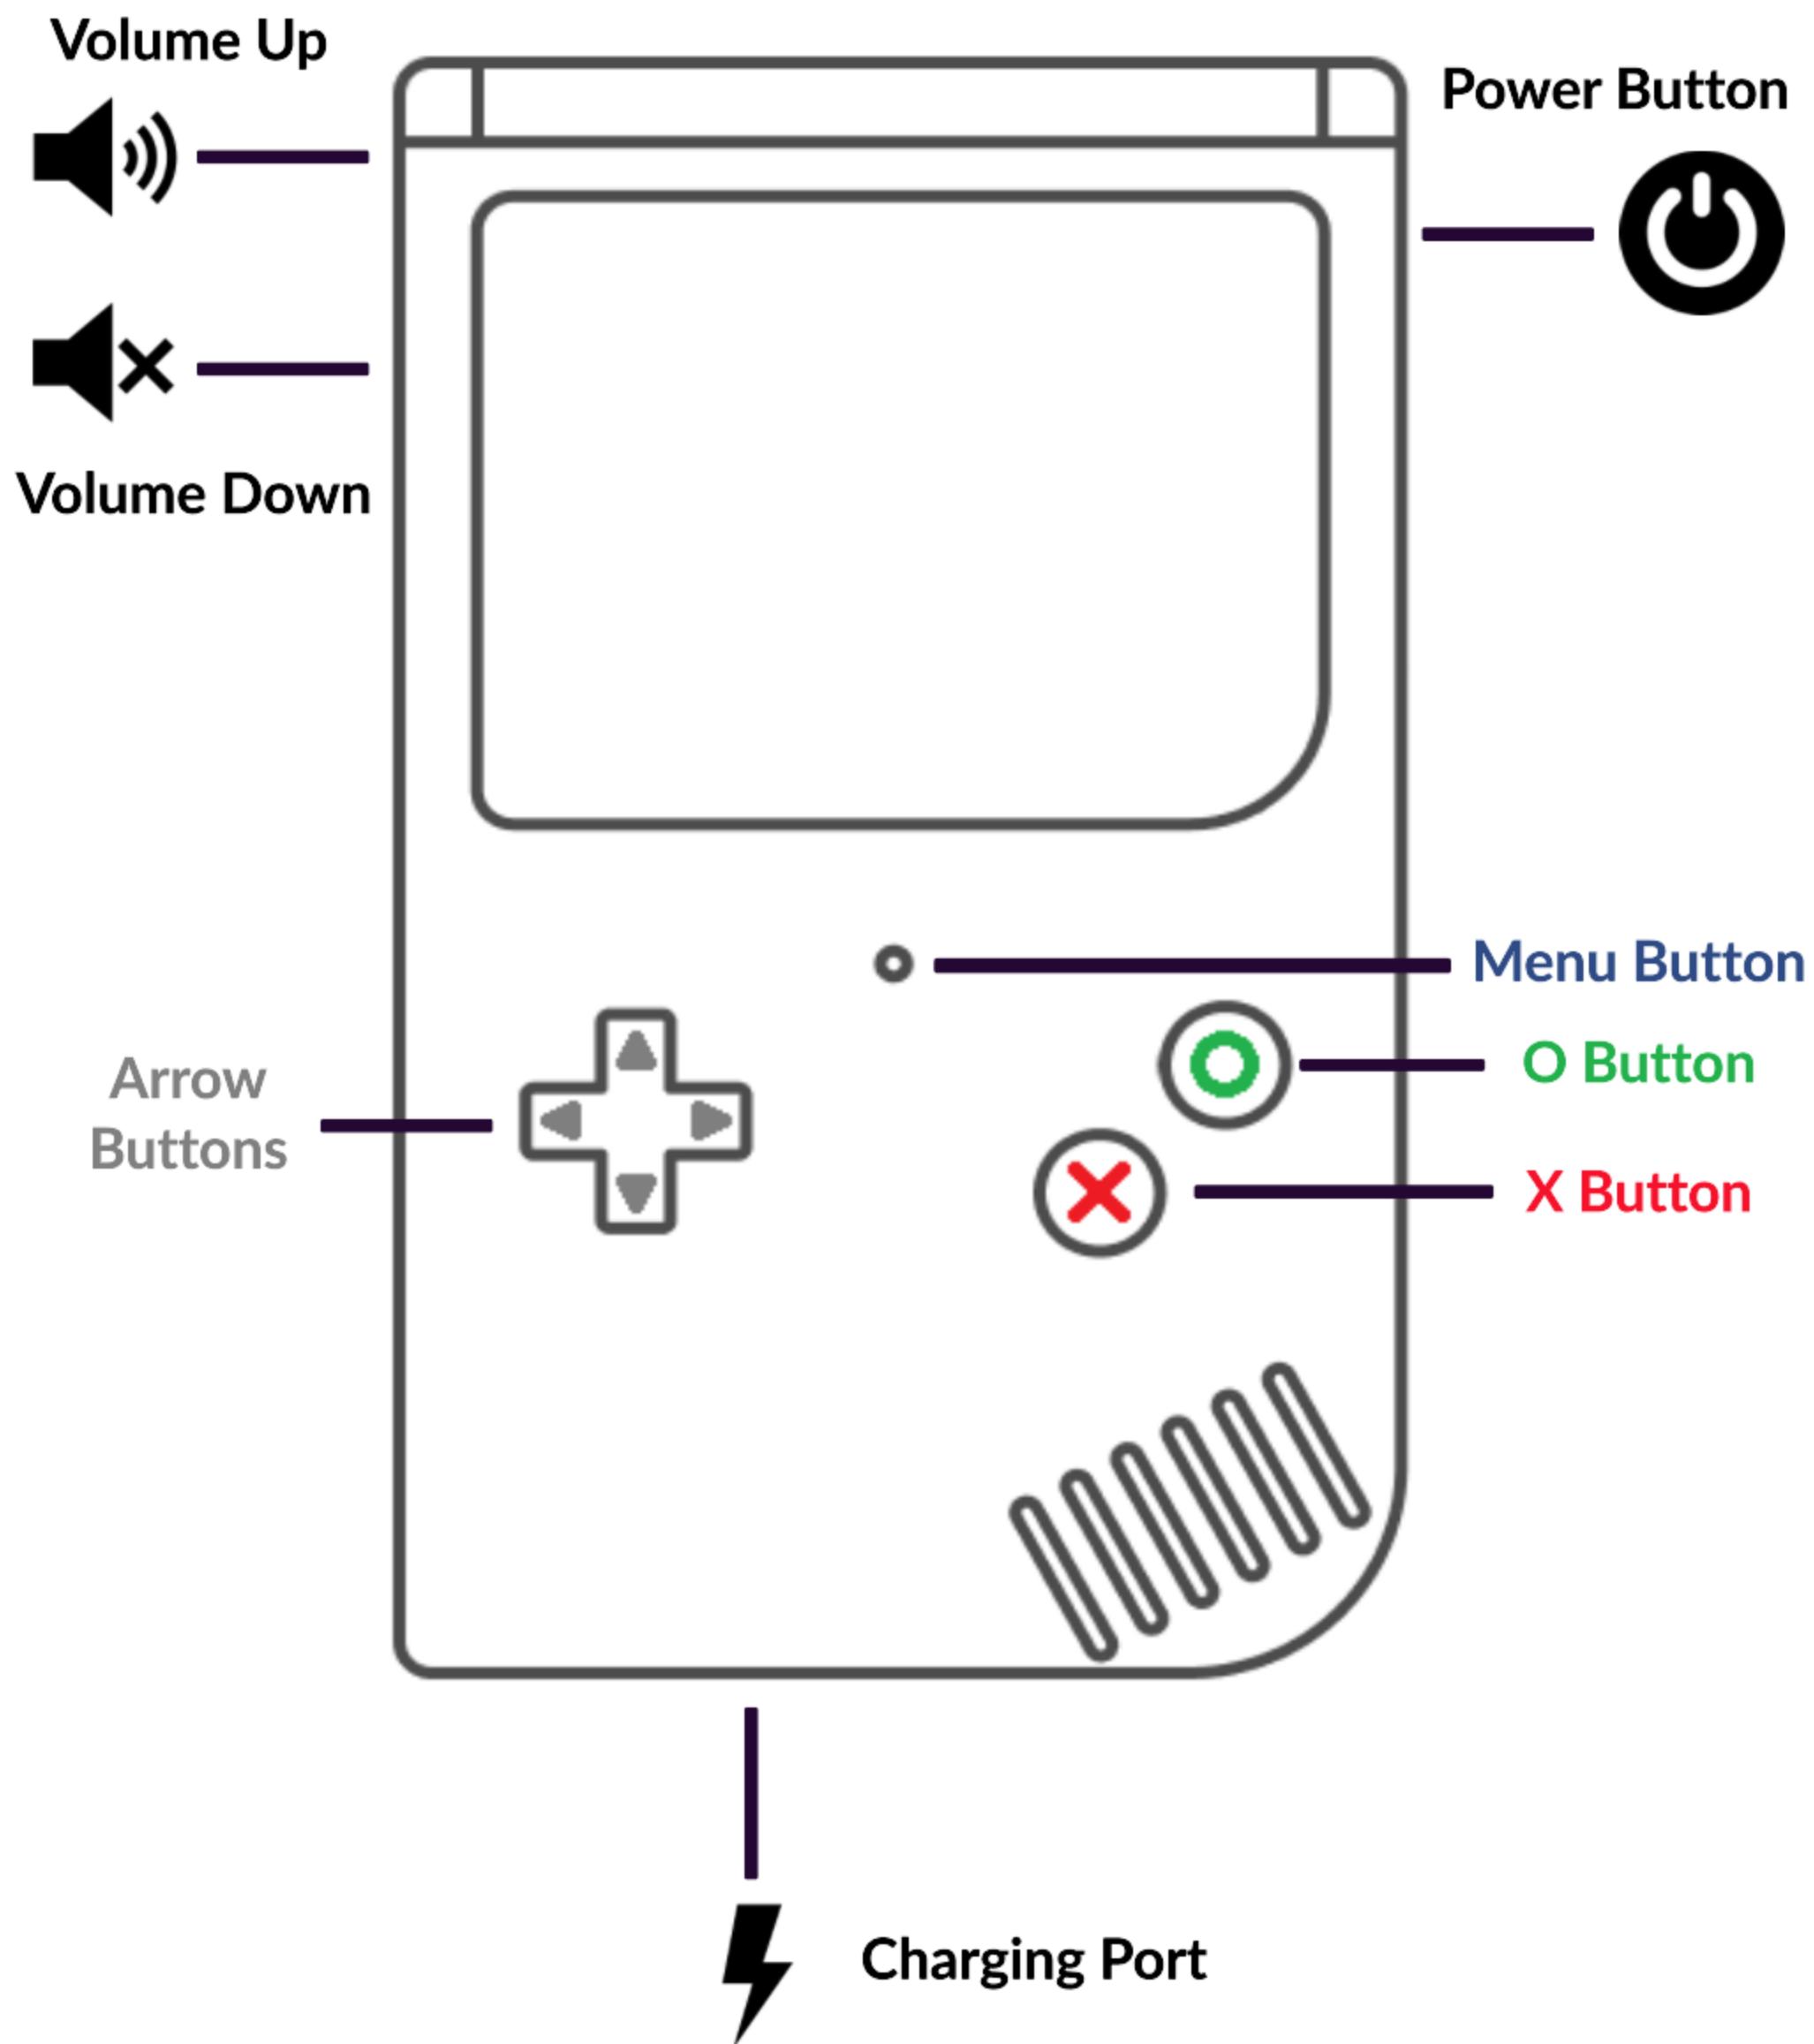

Game Select Menu

When starting up the device you will be greeted with the game select menu.

Use the up and down **arrow keys** to select a game and use the **O button** to start it.

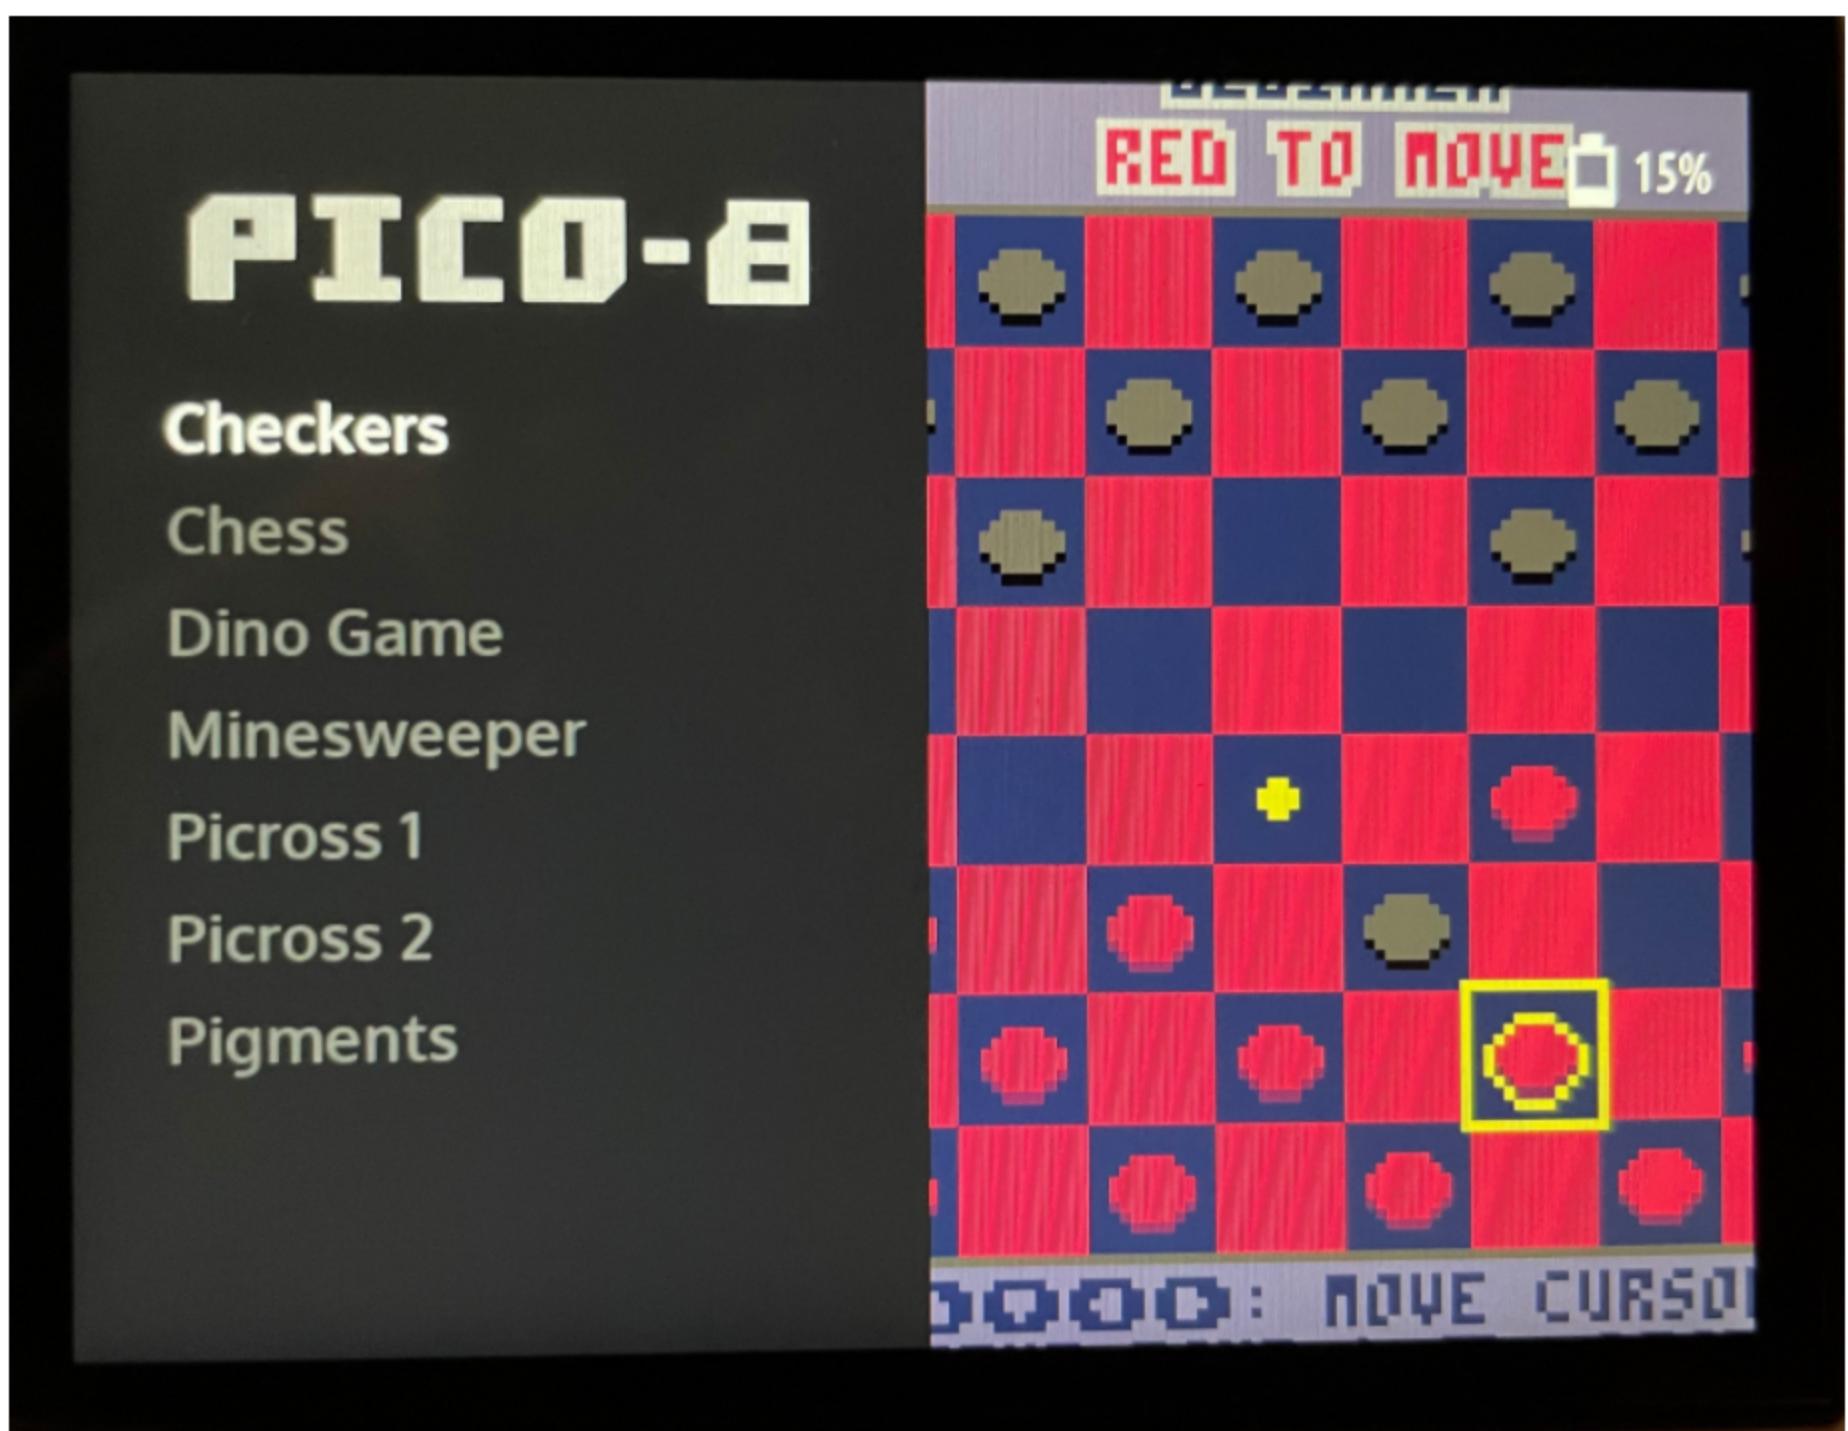


Pause Menu

Pressing the **menu button** during a game pauses the game and brings up the pause menu.

Use the **arrow keys** to navigate the menu and press **any button** to select an item.

Menu Button

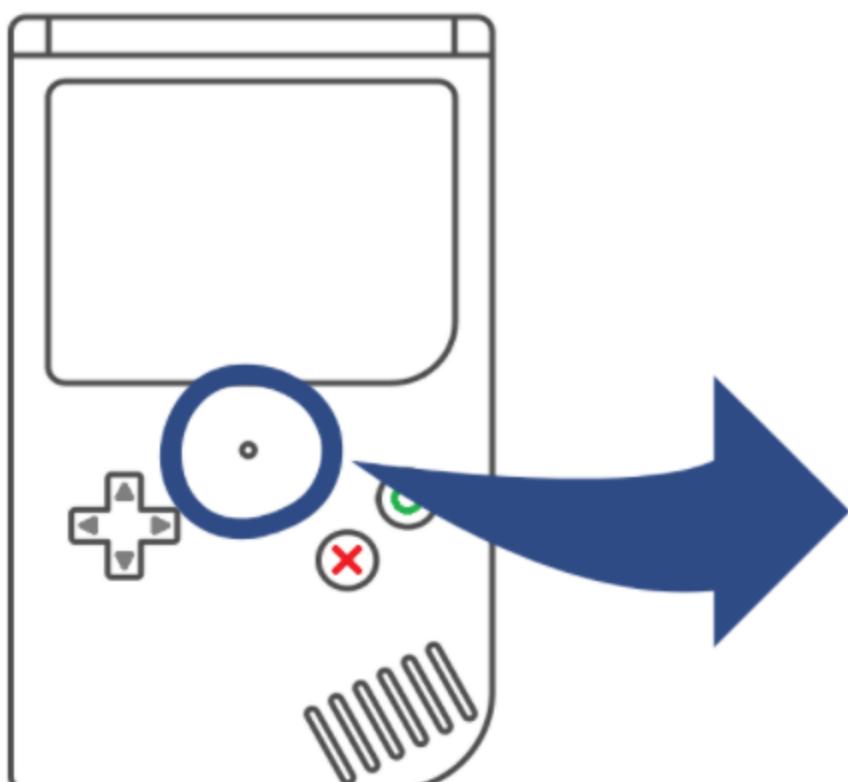

Games will always have the items shown above but they may also have additional items. These items can be selected like every other and are usually self-explanatory.

Pause Menu Items

Pause Menu



Continue: Resume playing the game

Favourite: Due to an error in the program this will exit the game

Options: Go to the options menu

Reset Cart: Go back to the title screen of the game

Shutdown: Go back to the game select menu

Options Menu



Sound: Turns the game volume on/off

Volume: Changes the game volume

Fullscreen: Always on

Controls: Test buttons to make sure they're working

Back: Go back to the pause menu

Keep in mind game volume is different from the system volume (changed by hitting the volume buttons), both must be on for sound to be made.