

USED GPIO PINS:

GPIO07 (CE1) GPIO08 (CE0)

GPIO16

GPIO18

GPIO19


GPIO20

GPIO21


GPIO23

GPIO24

GPIO25

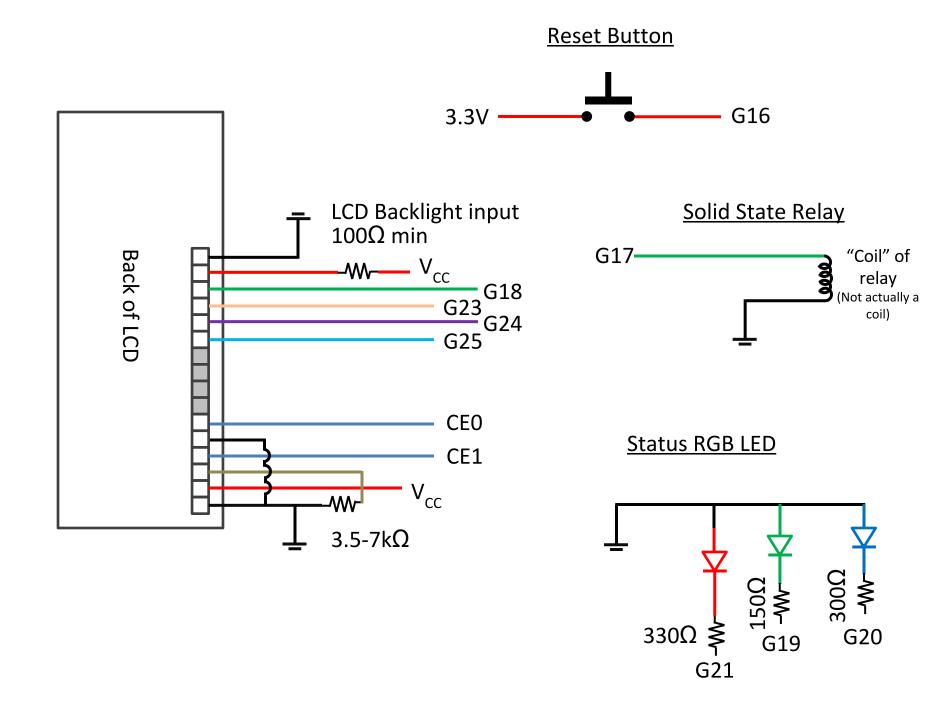

Current Sense Circuit

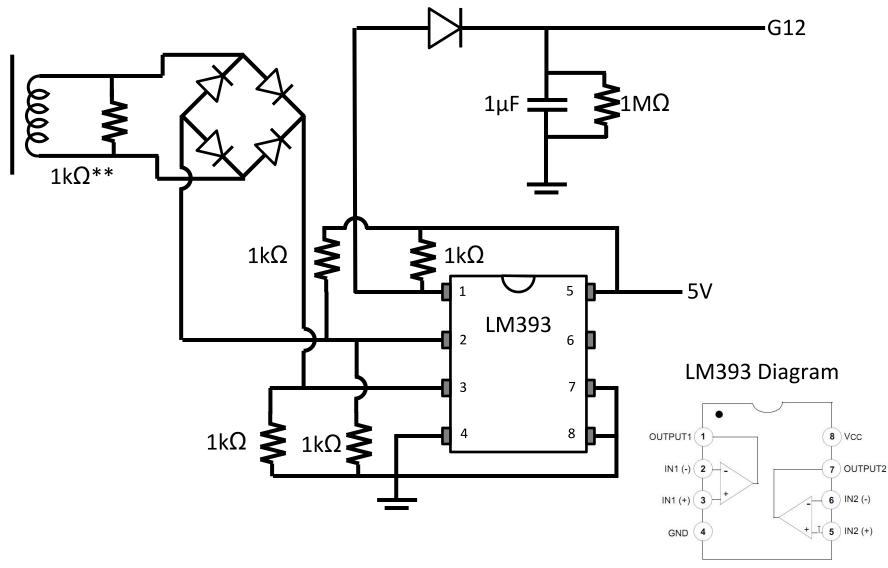

^{**} Load resistor may change based on signal from coil.