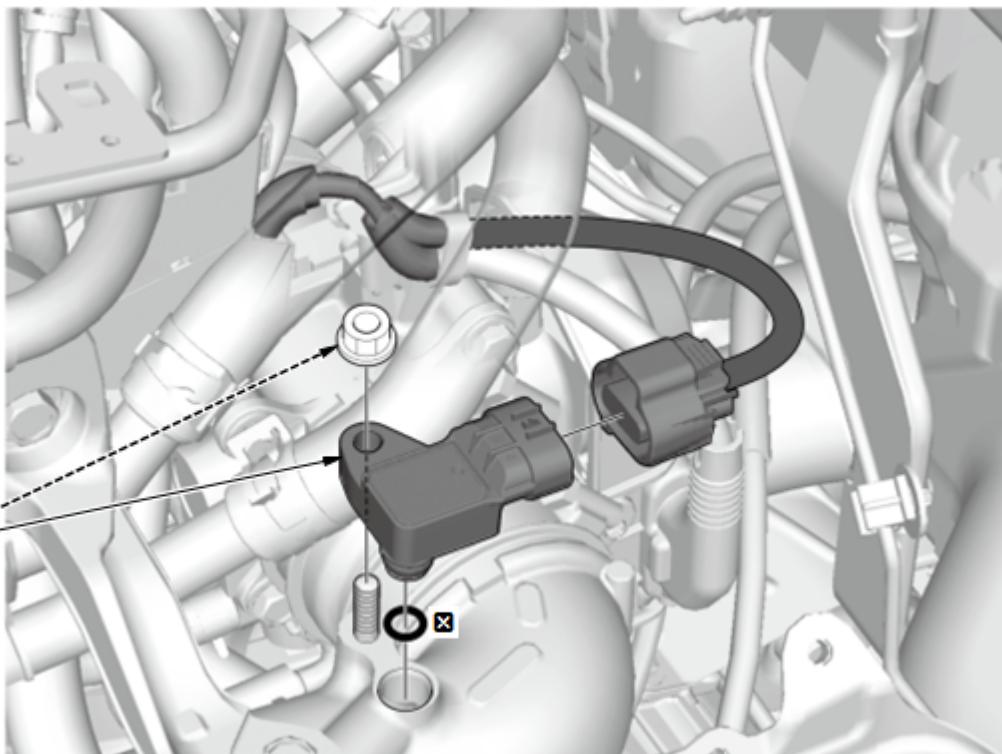


Turbocharger Boost Sensor Removal and Installation**Removal/Installation****1**

| | |
|-------------------------------------|-----------------------------|
| <input type="checkbox"/> | Torque: N·m (kgf·m, lbf·ft) |
| <input checked="" type="checkbox"/> | Replace |

1. Turbocharger Boost Sensor - Remove**2. All Removed Parts - Install**

1. Install the parts in the reverse order of removal.