



Radiator and A/C Condenser Fan, Motor, and Shroud Removal and Installation**Removal/Installation**

1

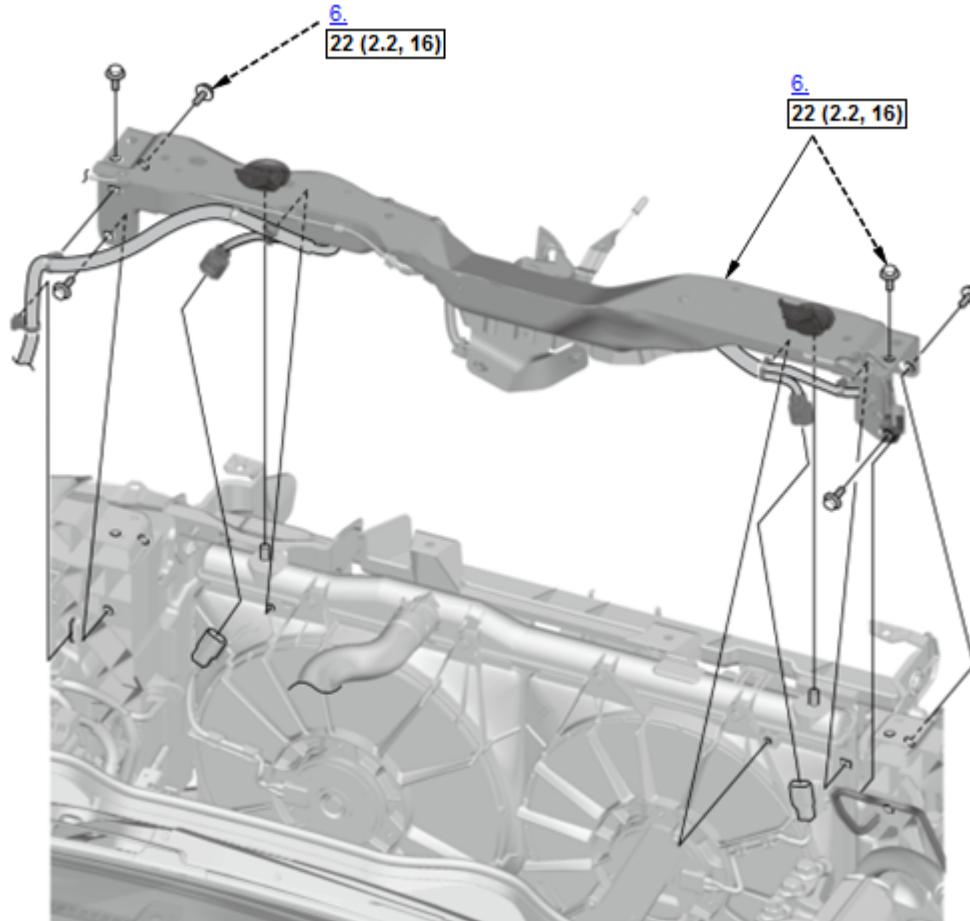


	Torque: N·m (kgf·m, lbf·ft)
--	-----------------------------

2

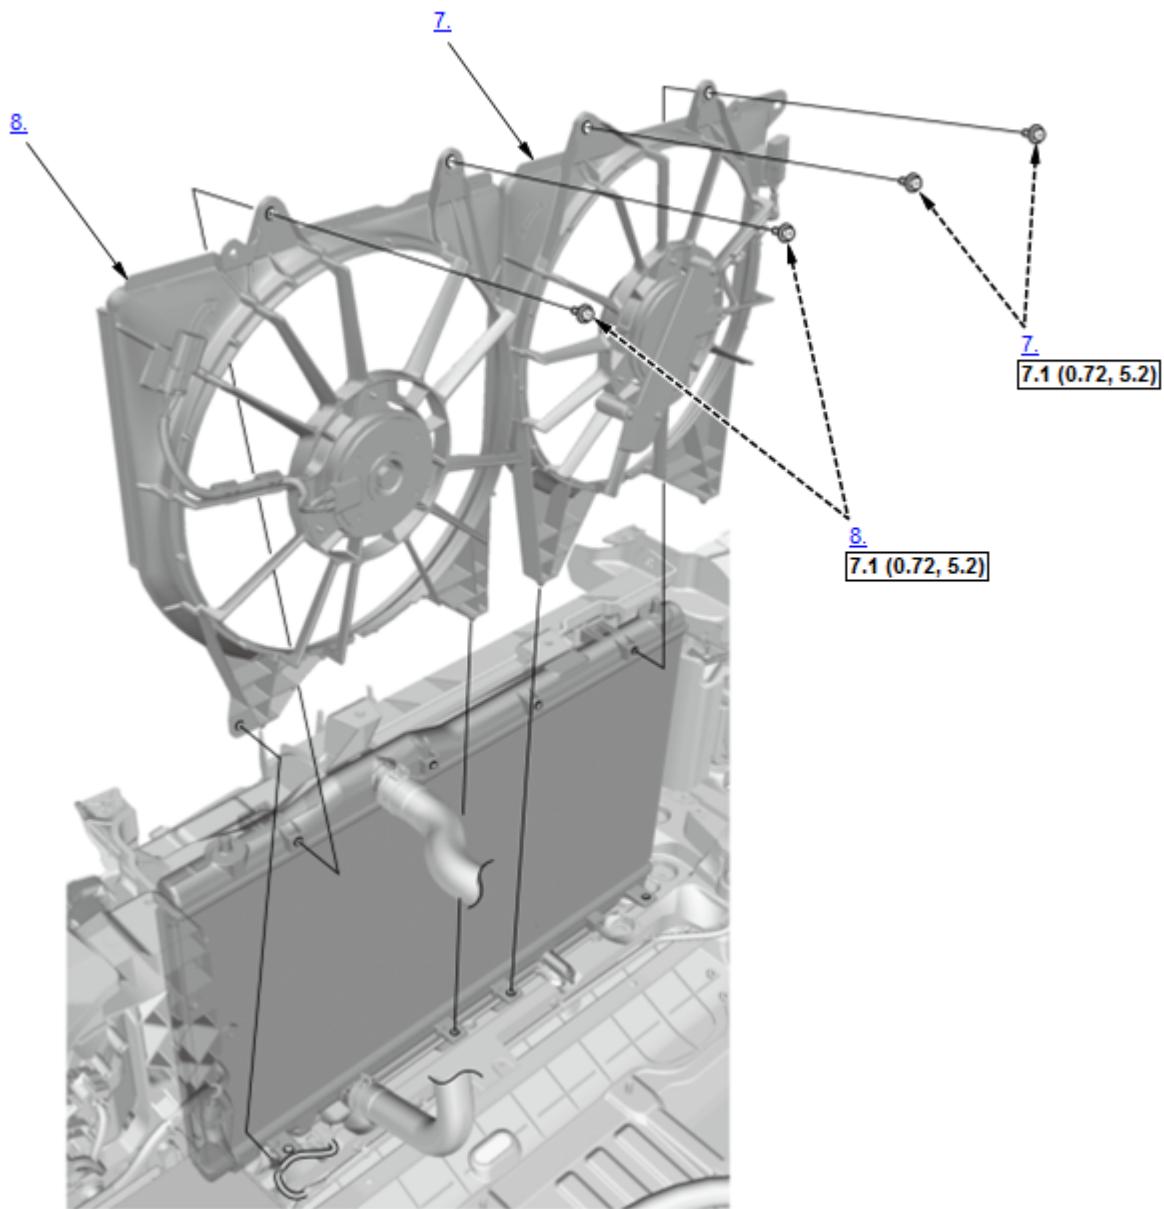

<input type="checkbox"/>	Torque: N·m (kgf·m, lbf·ft)
--------------------------	-----------------------------

3

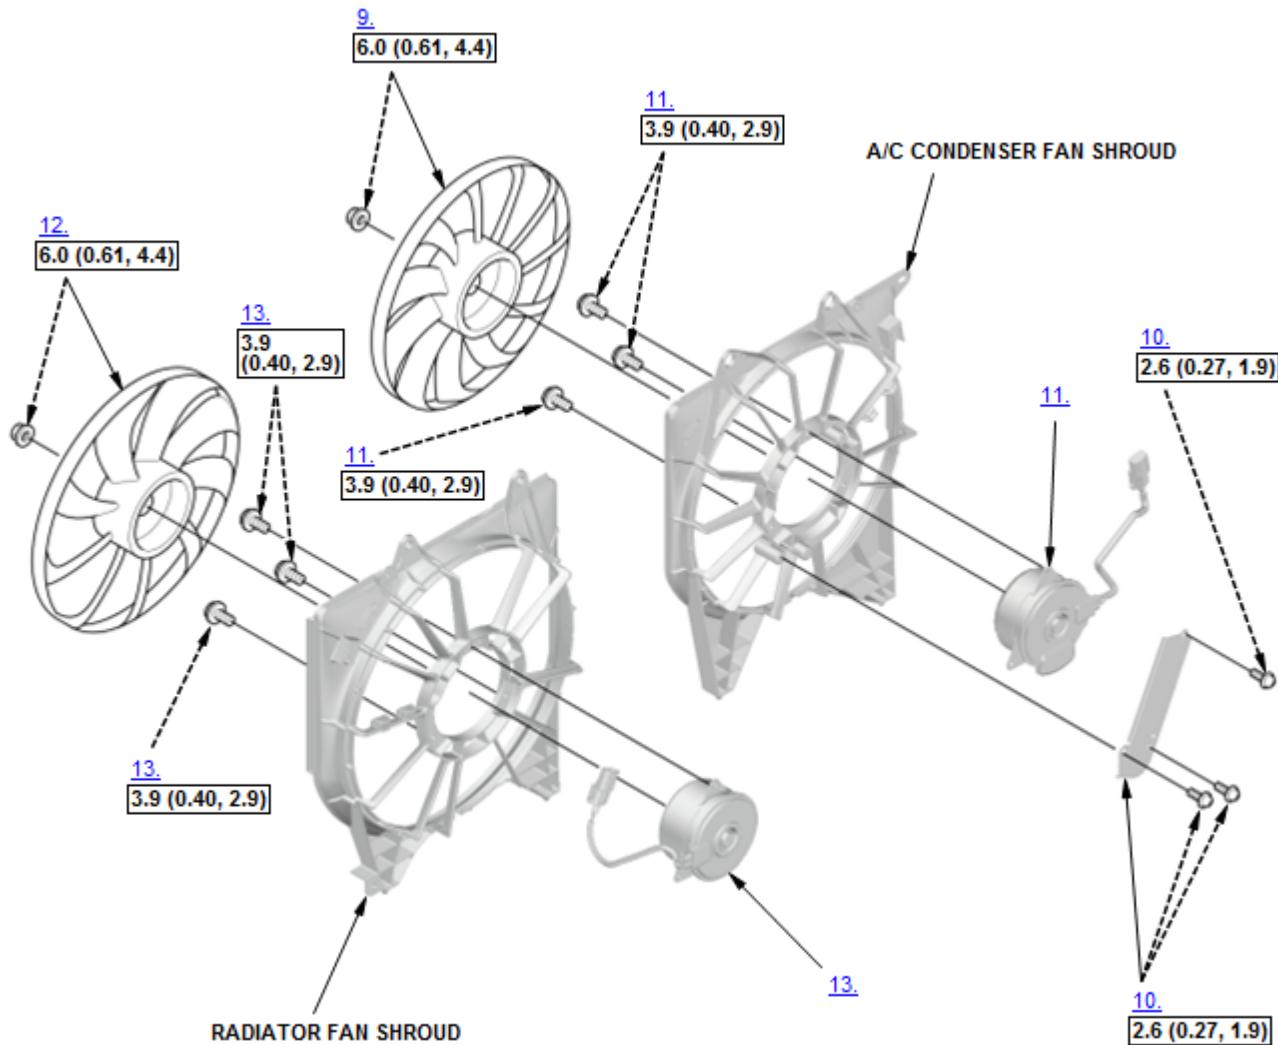

<input type="checkbox"/>	Torque: N·m (kgf·m, lbf·ft)
--------------------------	-----------------------------

1. Air Cleaner - Remove

2. Front Grille Cover - Remove

3. Front Bumper - Remove

4. Front Bumper Upper Beam - Remove

5. Connector (A/C Pressure Sensor) - Disconnect

6. Bulkhead - Move

7. A/C Condenser Fan Shroud Assembly - Remove

8. Radiator Fan Shroud Assembly - Remove

9. A/C Condenser Fan - Remove

10. Fan Motor Protector - Remove

11. A/C Condenser Fan Motor - Remove

12. Radiator Fan - Remove

13. Radiator Fan Motor - Remove

14. All Removed Parts - Install

1. Install the parts in the reverse order of removal.