


Ignition Coil and Spark Plug Removal and Installation**Removal/Installation**

NOTE:  Where icon is shown, click for further information.

1

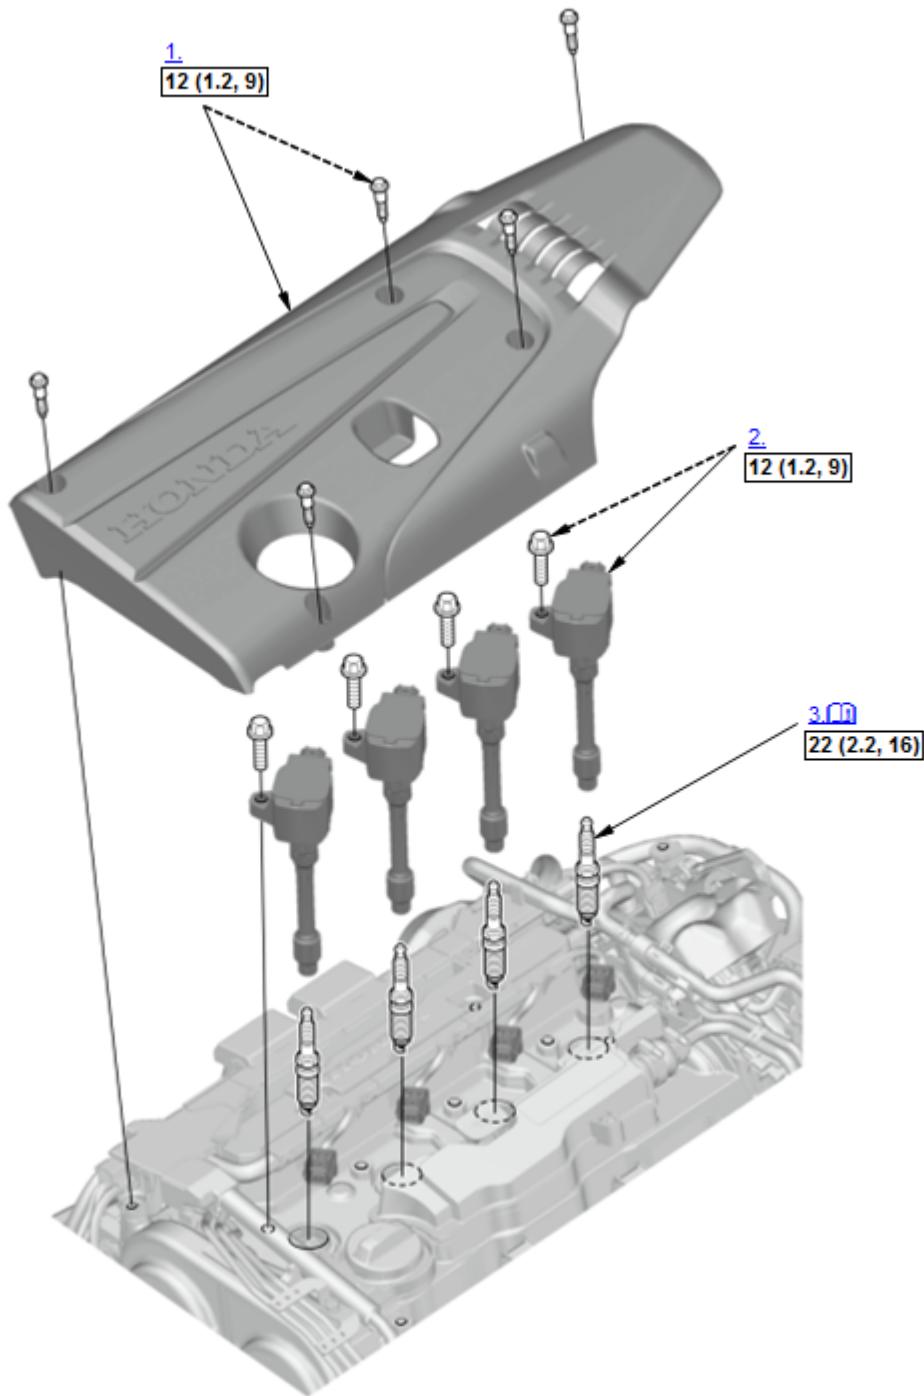

	Detailed information, notes, and precautions
	Torque: N·m (kgf·m, lbf·ft)

1. Engine Cover - Remove

2. Ignition Coil - Remove

3. Spark Plug - Remove

Note for installation

Apply a small amount of anti-seize compound to the spark plug threads, and screw the spark plugs into the cylinder head, finger-tight, then tighten the spark plugs to the specified torque.

4. All Removed Parts - Install

1. Install the parts in the reverse order of removal.

5. Maintenance Minder - Reset (With Maintenance Minder System)

1. If the Maintenance Minder required to replace the spark plugs, [reset the Maintenance Minder with the gauge](#) (see "Resetting the Maintenance Minder").