


Exhaust Pipe and Muffler Removal and Installation**Removal/Installation**

NOTE:

-  Where icon is shown, click for further information.
- Although a numbered sequence is shown, exhaust pipe A and the muffler are two separate components. If removal or replacement of one of the components is needed, it is not necessary to remove the other.

1

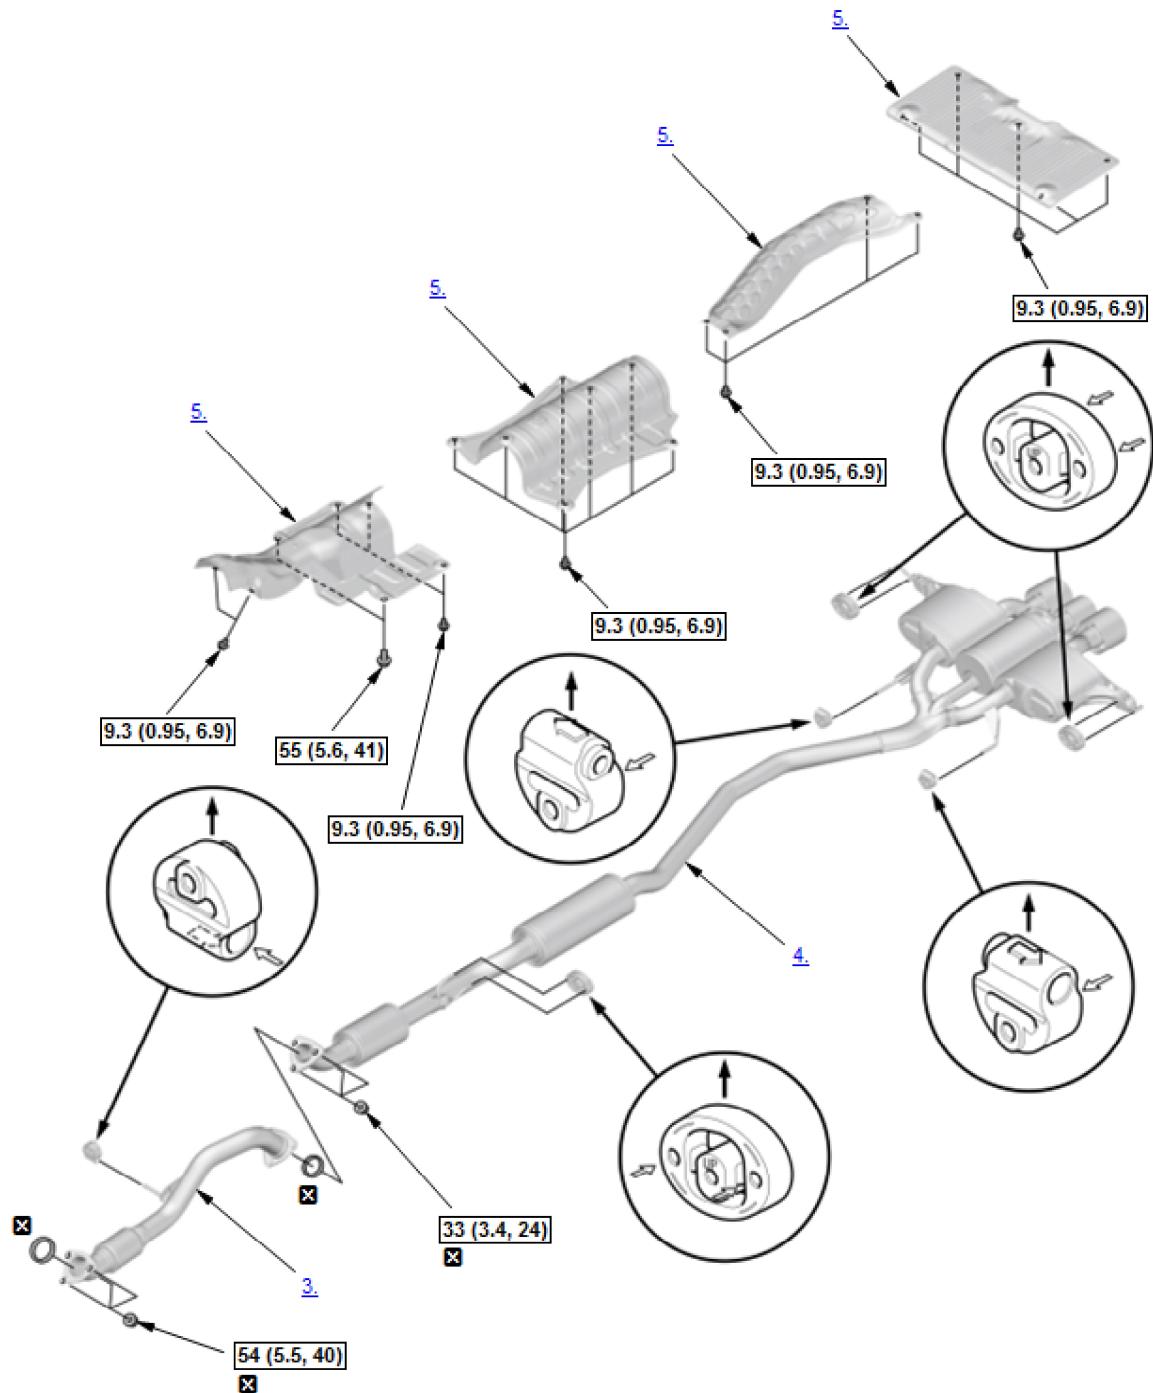

	Detailed information, notes, and precautions
	Torque: N·m (kgf·m, lbf·ft)
	Replace

1. Engine Undercover - Remove

NOTE: Remove the necessary part(s).

2. Rear Inner Fender - Remove

NOTE:

- When removing the muffler, do this procedure.
- Remove the appropriate portion of the rear inner fender.

3. Exhaust Pipe A - Remove

4. Muffler - Remove

5. Heat Shield - Remove

6. All Removed Parts - Install

1. Install the parts in the reverse order of removal.