

Rear Inner Fender Removal and Installation**Removal/Installation**

NOTE: [How to read the torque specifications.](#)

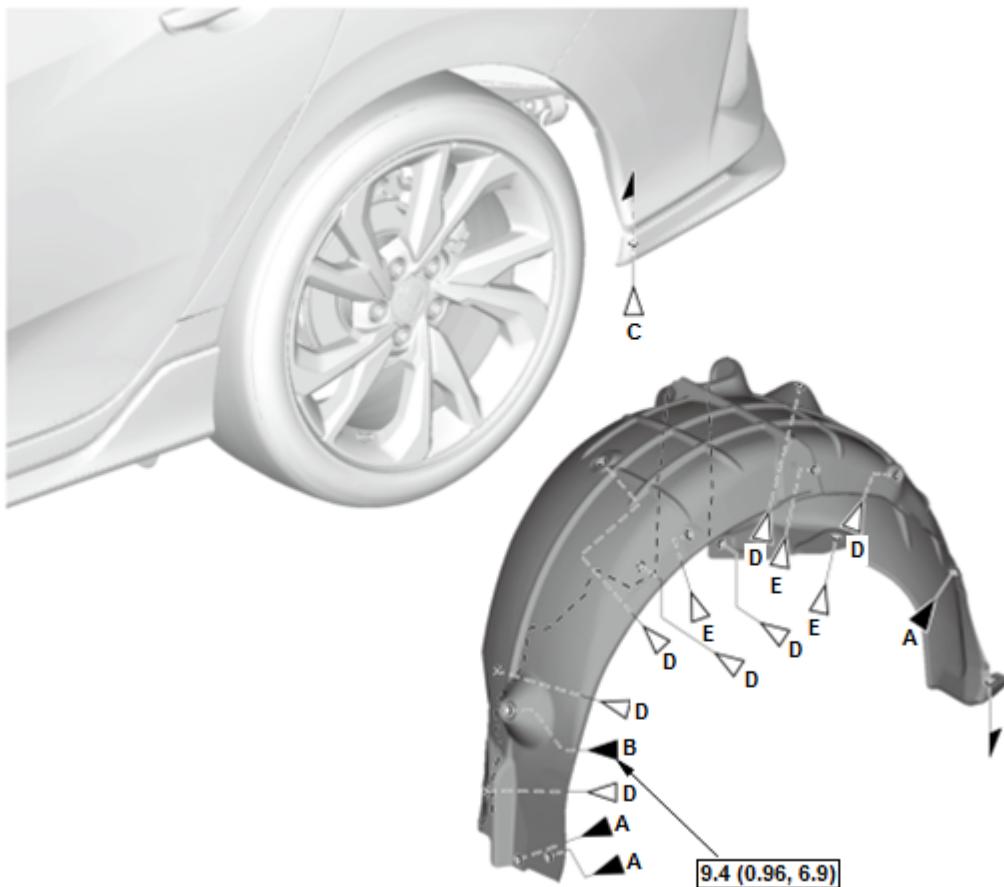
1. Vehicle - Lift**2. Rear Inner Fender - Remove****2/4-door****Fastener Locations**

A ▶ : 4 B ▶ : 1 C ▶ : 1 D ▶ : 7 E ▶ : 4

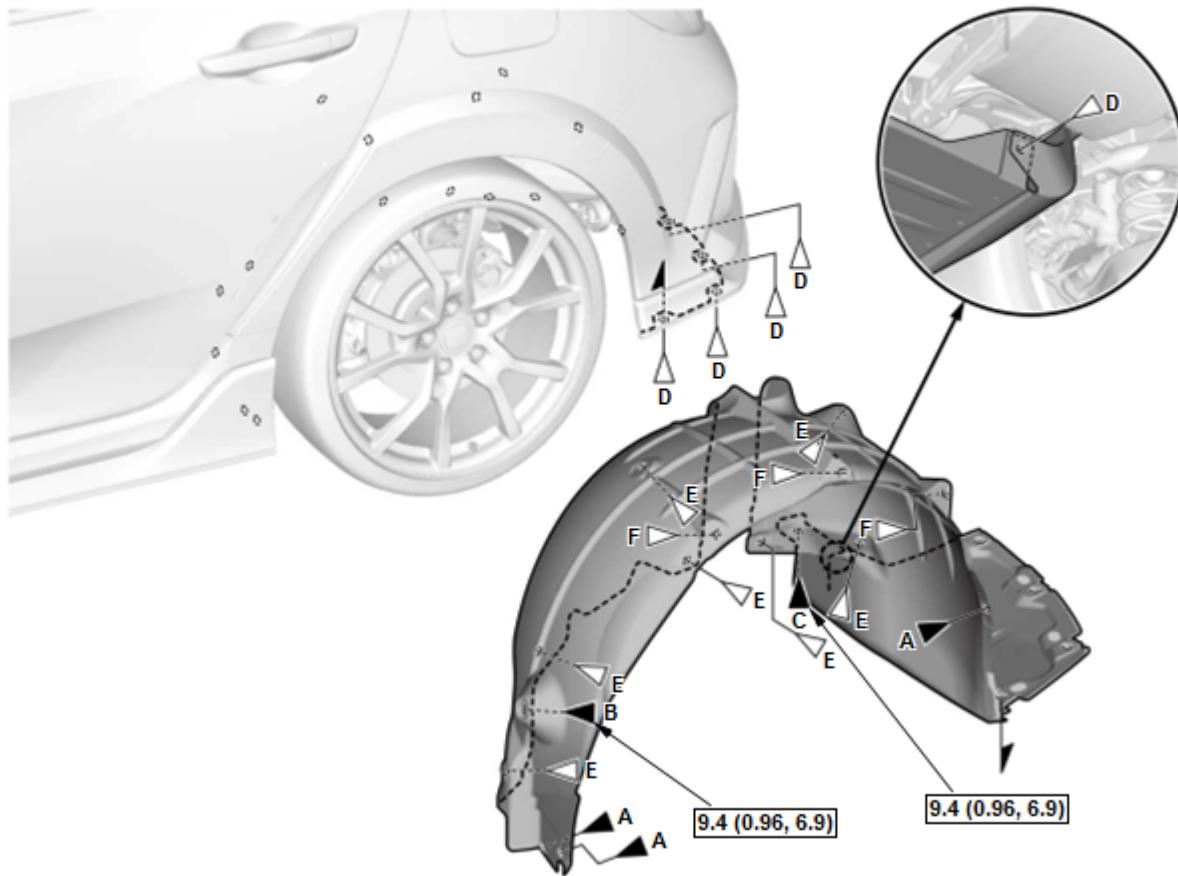
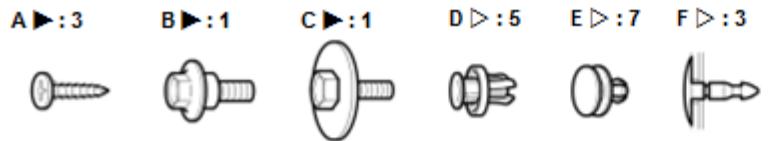
**5-door Except Type-R**

Fastener Locations

A ► : 3 B ► : 1 C ► : 1 D ► : 7 E ► : 3



5-door Type-R

Fastener Locations**3. All Removed Parts - Install**

1. Install the parts in the reverse order of removal.