

# μ Ship Nav NMEA 2000 Navigation instrument User Manual




## Startup:

On Startup, the instrument is initializing. For a few seconds, a splash screen will be displayed.



## Normal Operation:


During normal operation you can change screens by swiping left / right and up / down. The image below shows the order of the screens and the swipe actions.

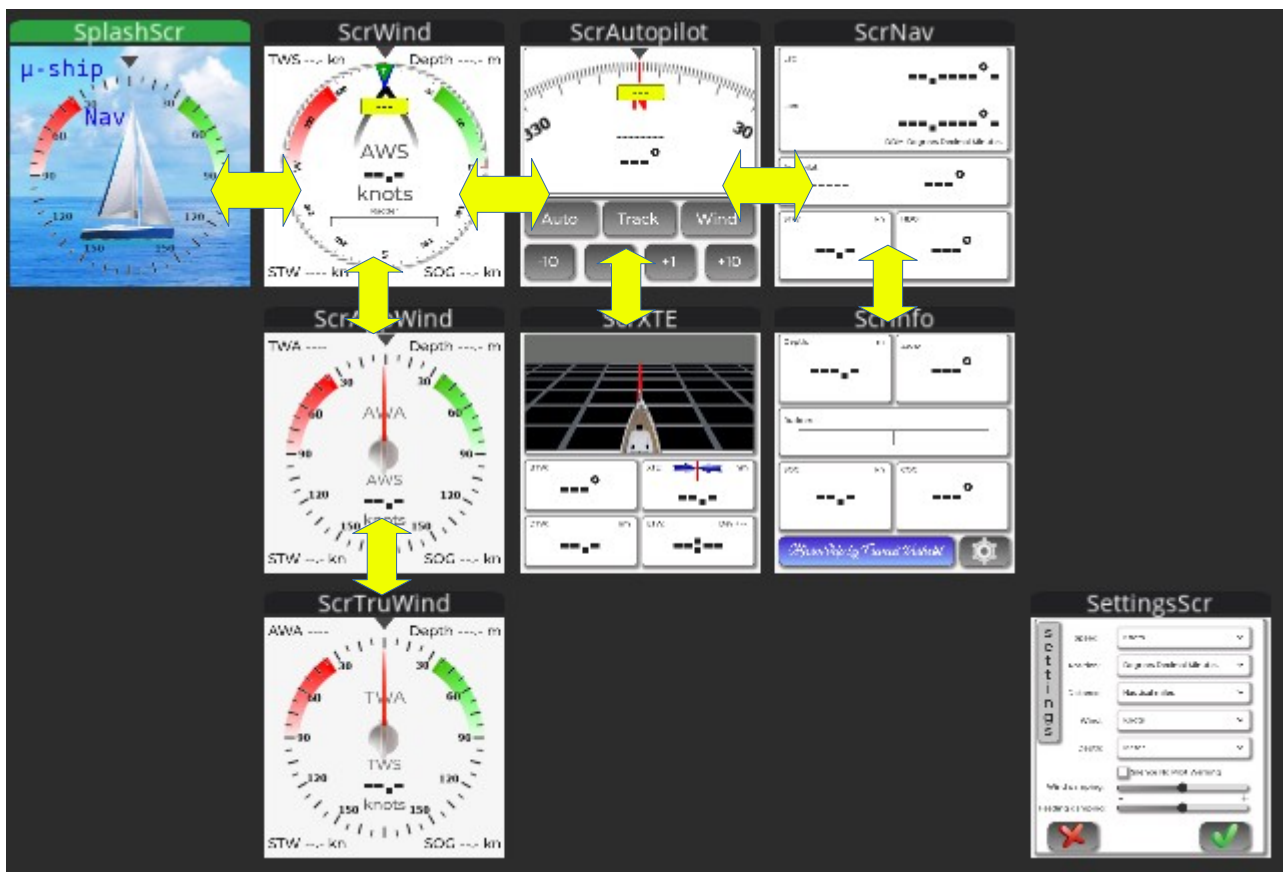

When swiping left or right from one of the lower screens, you will get the top screen of the side you swiped to.


Example:

- The screen is on ScrTruWind and you swipe to the left. This swipe action will show ScrAutopilot. (cfr yellow arrow)
- The screen is on ScrInfo and you swipe to the right. This will result in screen ScrAutopilot showing up (cfr blue arrow)

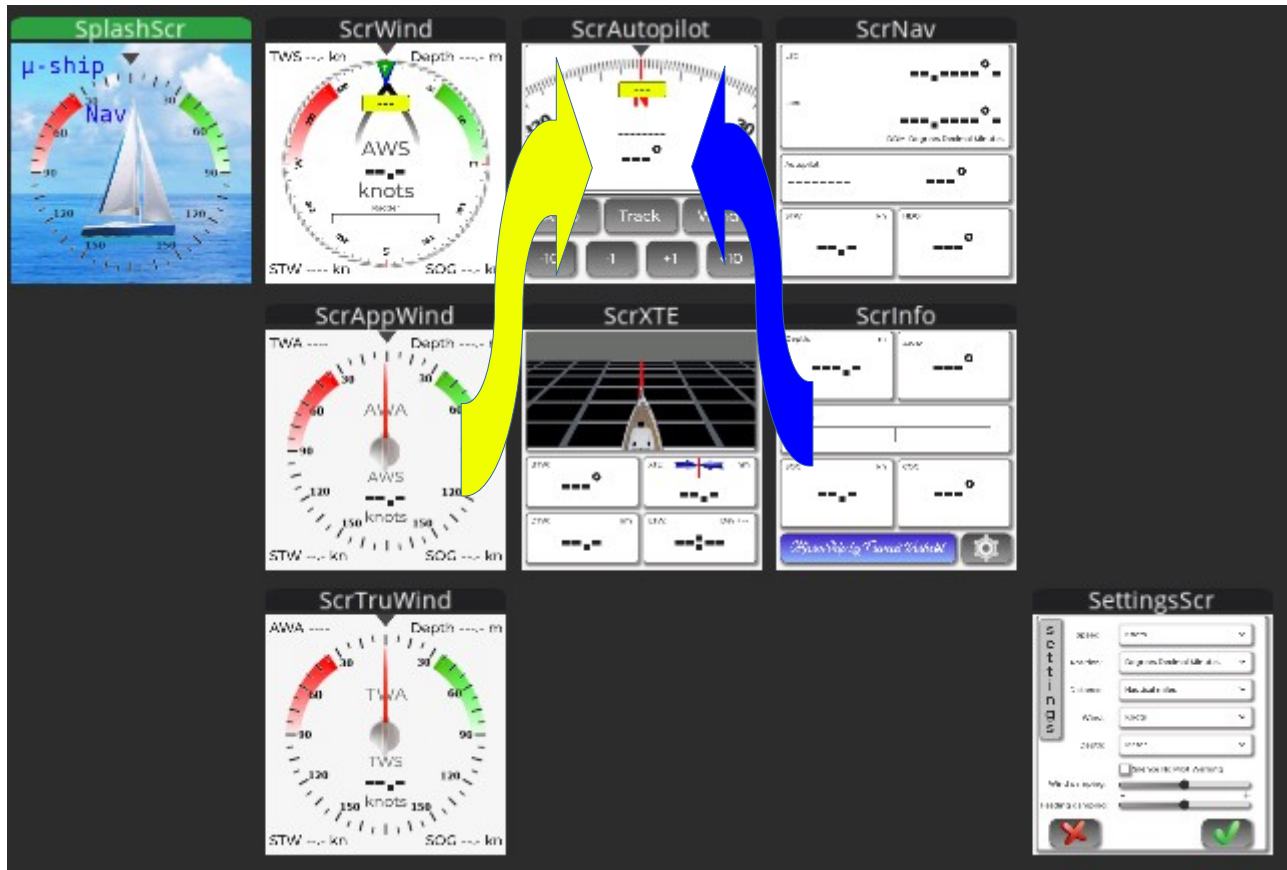


### Close haul display:


When on the AWA, apparent wind screen, the magnifier icon can be pressed to switch to close haul display. Pressing again returns to the normal AWA screen

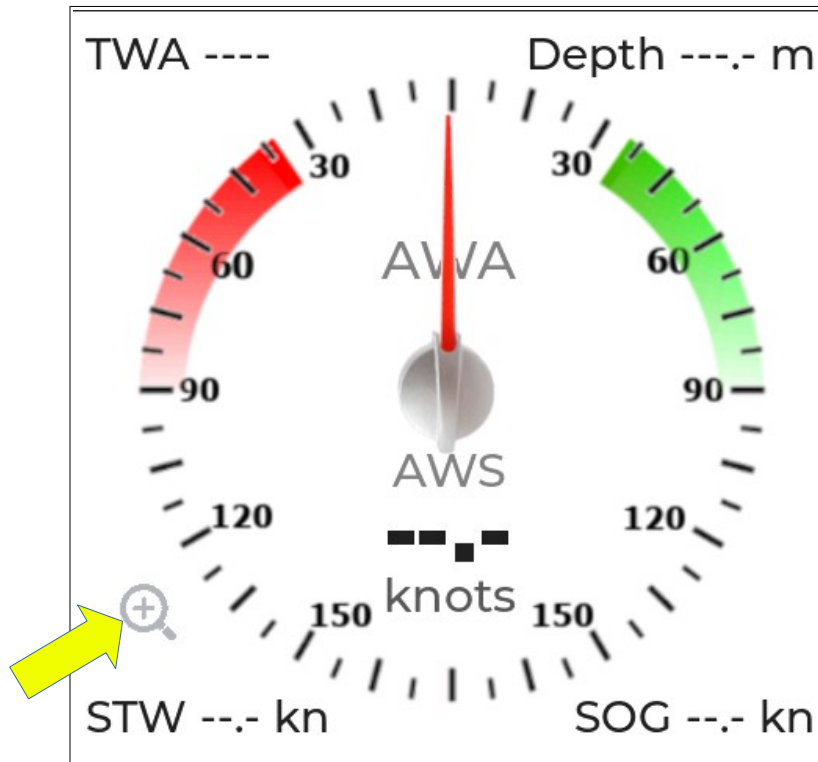

When you are sailing at wind angles in excess of 60° AWA there is a warning sign displayed in the center of the close haul wind display.

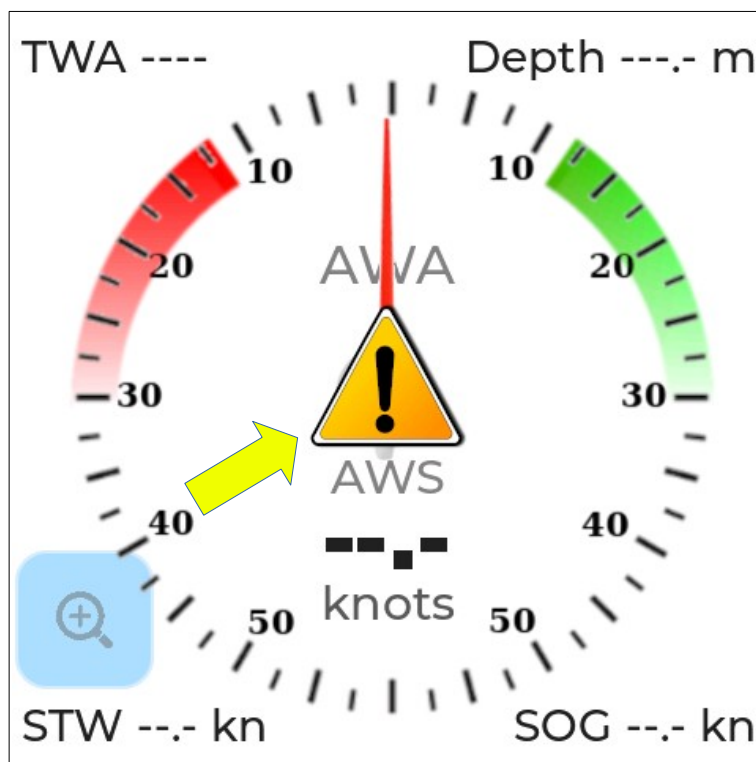

## Autopilot:

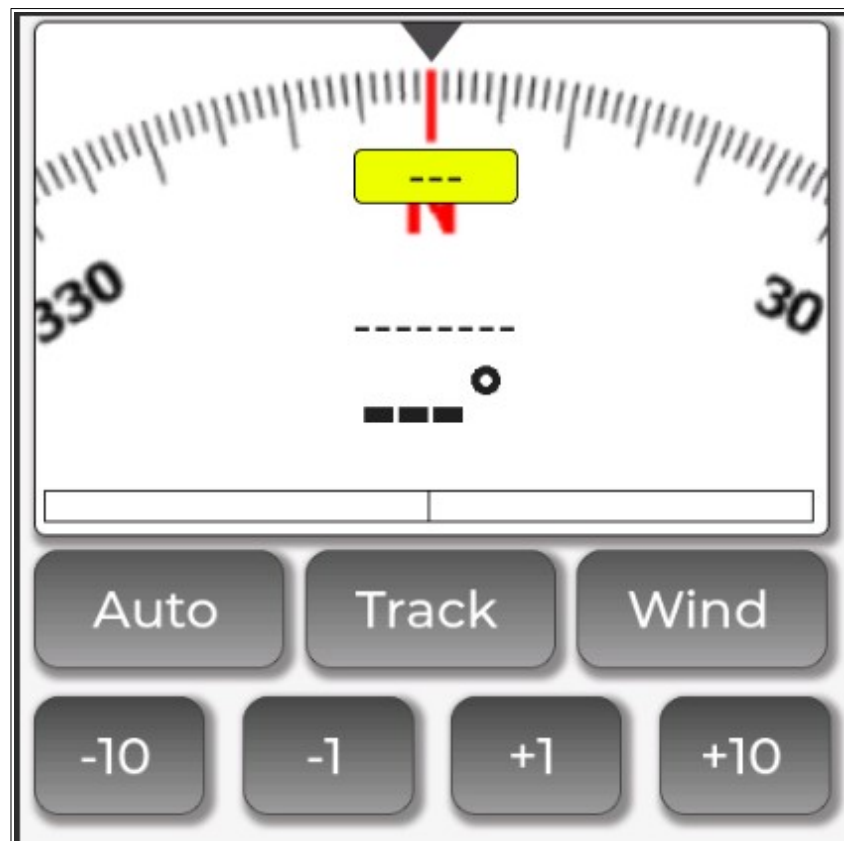

General remark: you need a somewhat longer button press to avoid accidental touch or a touch when swiping.



The Autopilot can be set in 3 modes:

- normal Auto mode: the AP will hold it's course. The course can be changed with the buttons -10, -1, +1, +10
- wind mode: the AP will steer to the wind. The wind angle can be changed with the buttons -10, -1, +1, +10  
In this mode the indicator panel (top part of the screen) will change to wind angle mode.
- Track mode: The AP will steer to an active waypoint. If there is no active waypoint, this mode will be disabled. When activating the track mode a confirmation will be asked through a popup screen. The course change in degrees to port or starboard will be indicated. You will have to confirm this course change to engage track mode.



When in one mode (eg Auto) pressing another mode will change the AP to the new chosen mode.

The active mode is visually indicated, by highlighting the respective button.

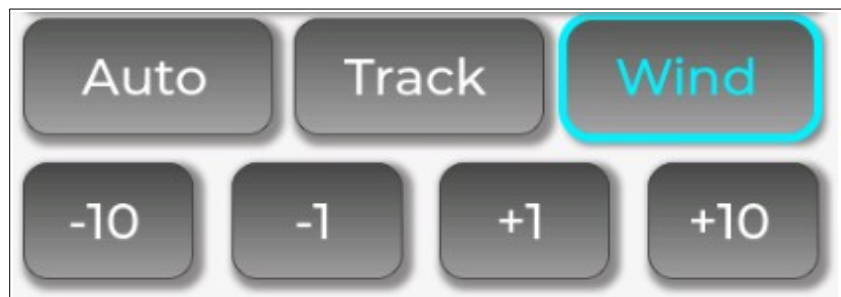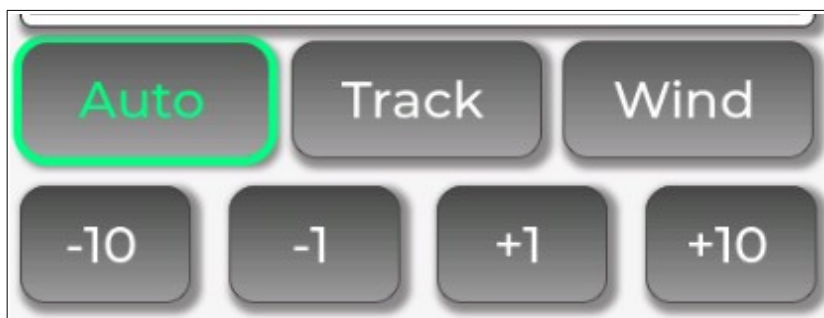

By pressing the active AP button you will revert to standby mode.

If the AP mode is changed on another instrument (eg the plotter) the active mode will be reflected accordingly on “μ Ship Nav” (this instrument). If you deactivate the active waypoint on the plotter, “μ Ship Nav” (this instrument) will sound an alarm and display a warning message. If you don’t react, it will switch the AP to Auto mode, except if you activate another AP mode on another instrument.


### **Screen backlight:**

If you do a long press on any of the screens, a backlight popup will be displayed to adjust the brightness of your screen.



### **Settings:**

The settings screen can be called by touching the settings icon in screen ScrInfo

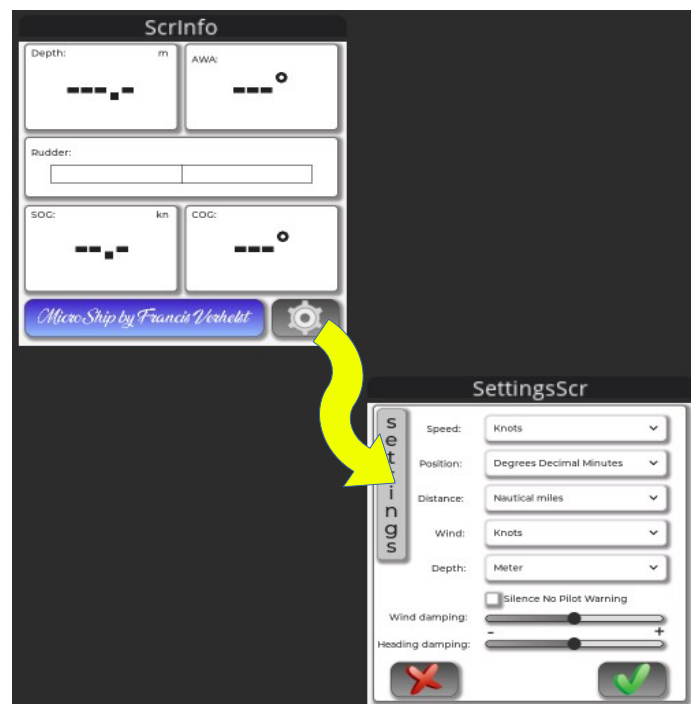




In the settings screen you adjust the units to your preference. This is self explanatory...

The wind damping and heading damping can be adjusted to have a more stable display.

The checkbox “silence no pilot warning” is specific to a problem on my Seataalk NG network:

From time to time I get this alarm on my plotter and other instruments, although there is nothing wrong. When this checkbox is checked, the display will automatically cancel this annoying alarm. ( without this option, somebody on board had to manually acknowledge the alarm, which was a pain in the \*ss)

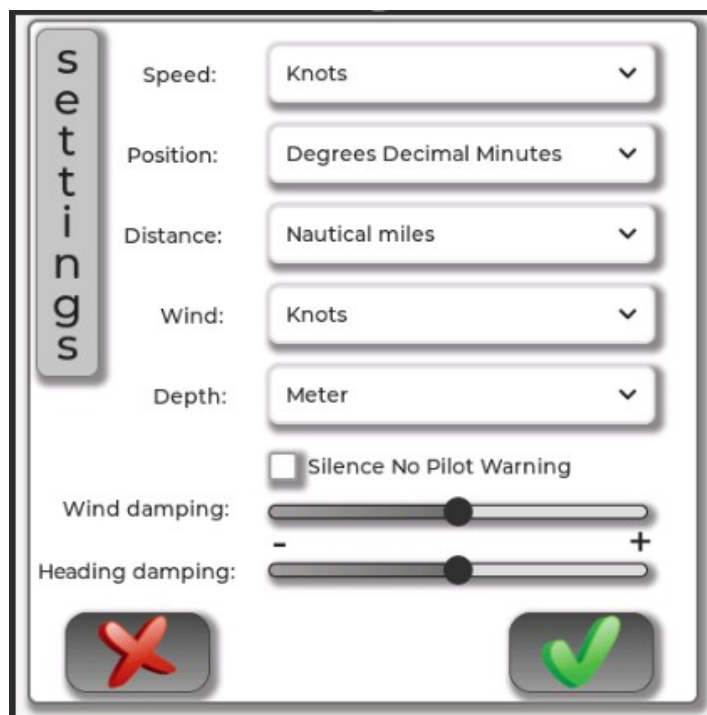

If you notice any errors or anything missing in this manual, please contact me [franciscontact@hotmail.com](mailto:franciscontact@hotmail.com)