


BS phase center = (-10, 14, 5) m | 28 GHz


Downlink: BS to UAV, 45 dBm

Warehouse Full bs_z5 fixed BS to UAV | BS=(-10, 14, 5) m | 28 GHz, 45 dBm

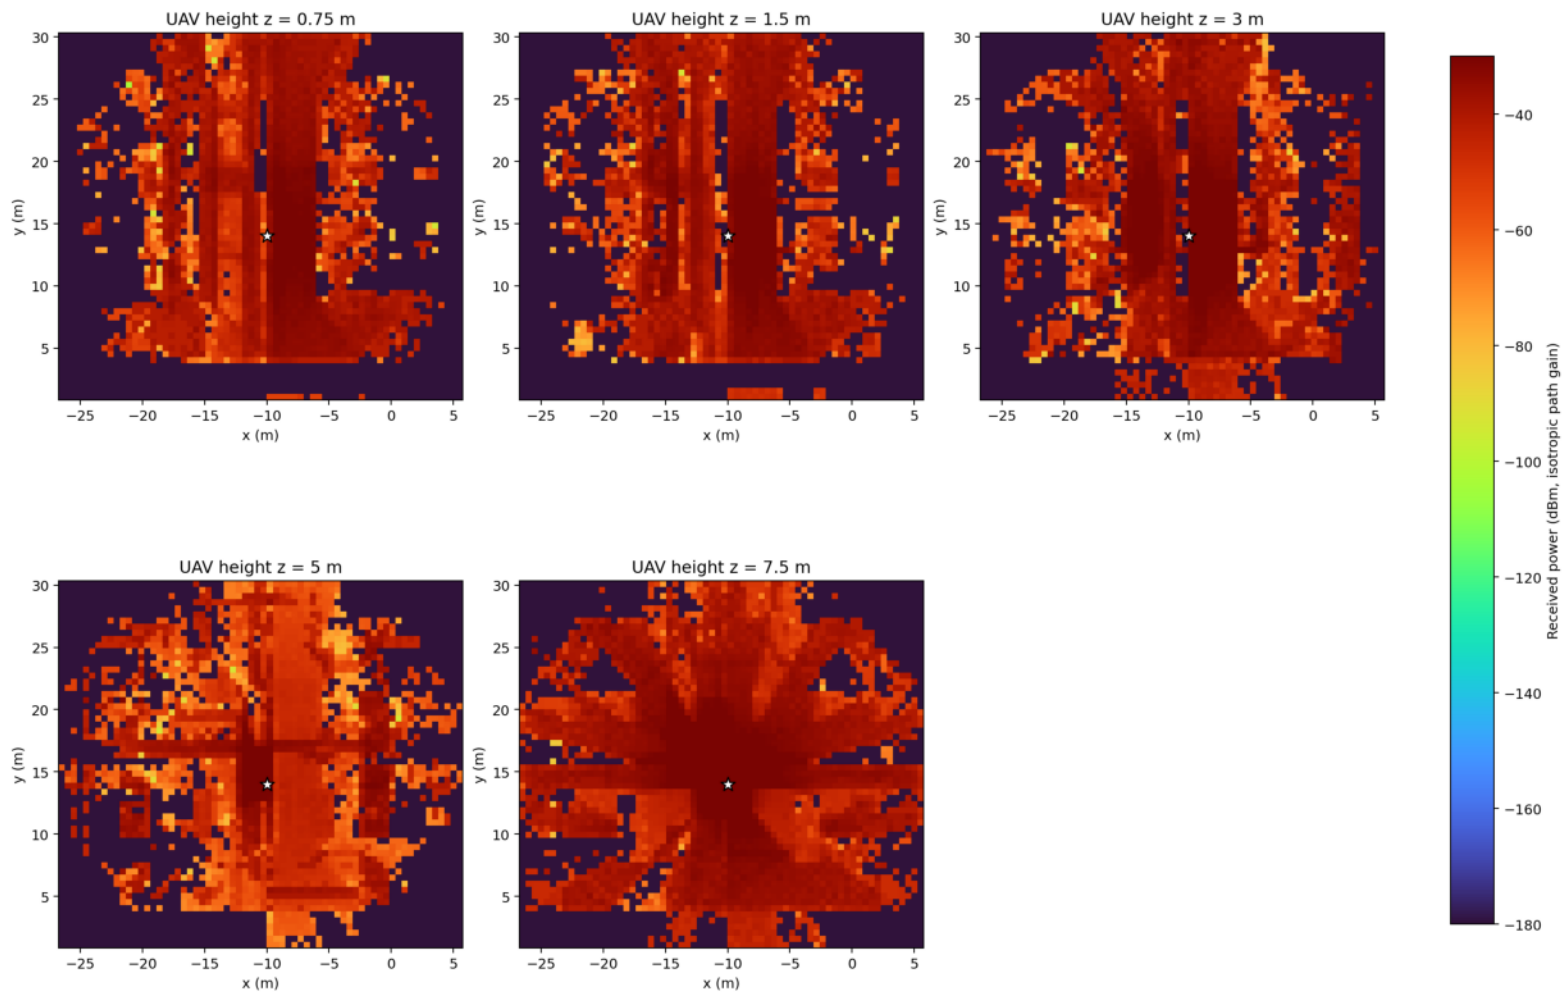

Uplink: UAV to BS, 30 dBm


Warehouse Full bs_z5 UAV-to-BS uplink | BS=(-10, 14, 5) m | 28 GHz, UAV transmitter=30 dBm

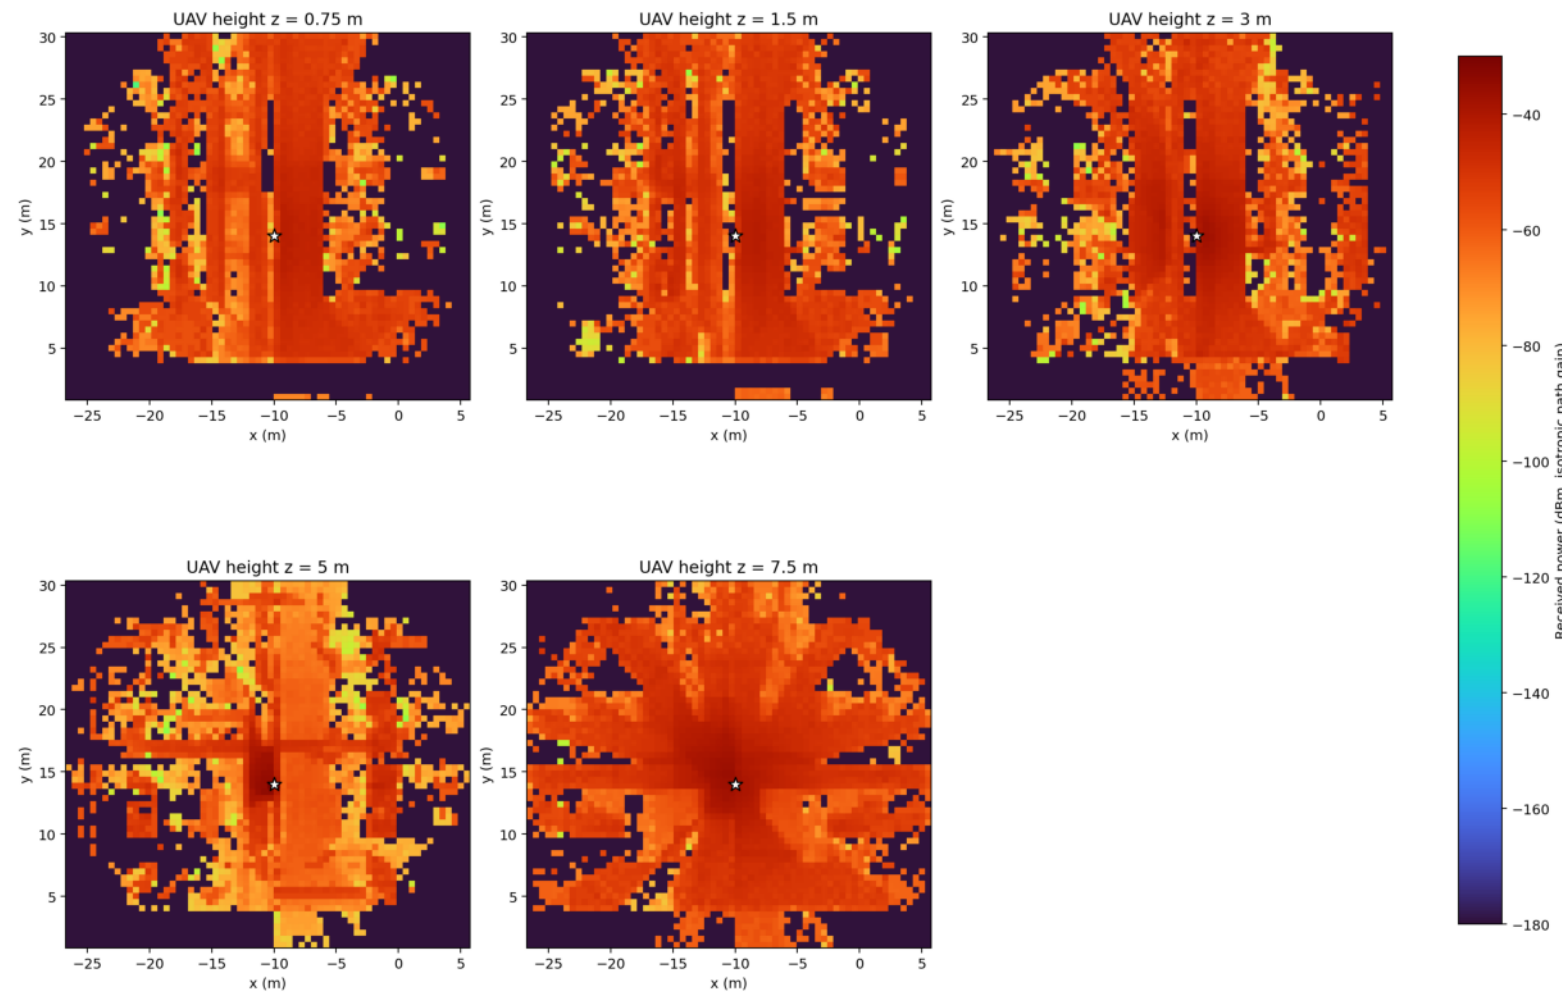

BS phase center = (-10, 14, 6) m | 28 GHz


Downlink: BS to UAV, 45 dBm

Warehouse Full bs_z6 fixed BS to UAV | BS=(-10, 14, 6) m | 28 GHz, 45 dBm

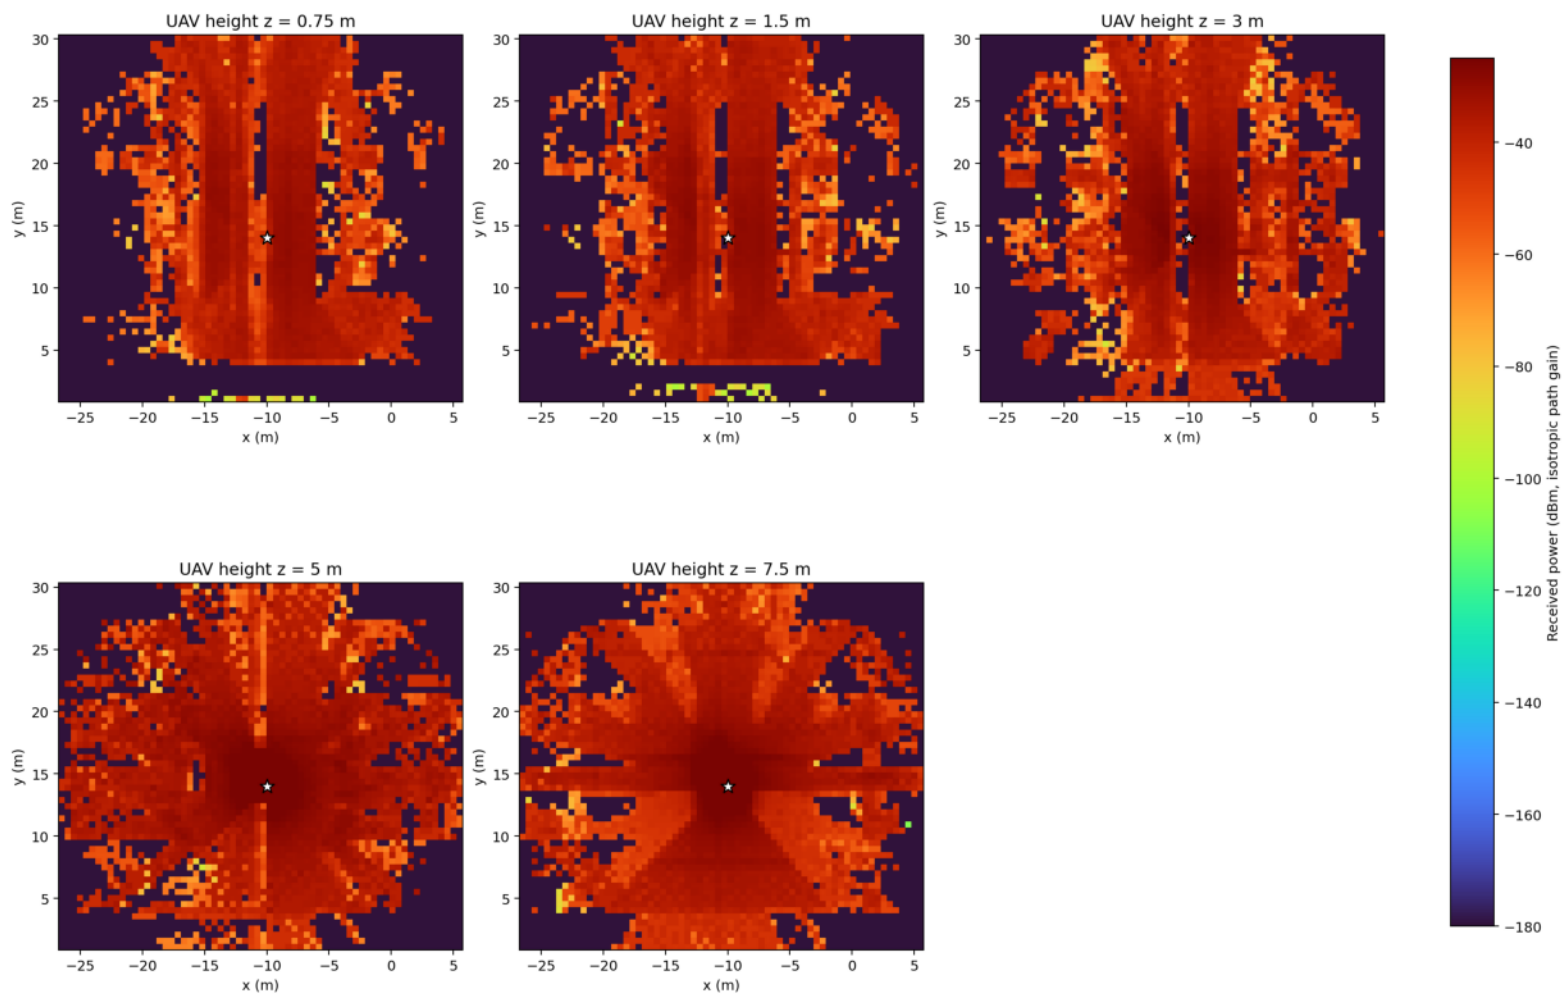

Uplink: UAV to BS, 30 dBm


Warehouse Full bs_z6 UAV-to-BS uplink | BS=(-10, 14, 6) m | 28 GHz, UAV transmitter=30 dBm

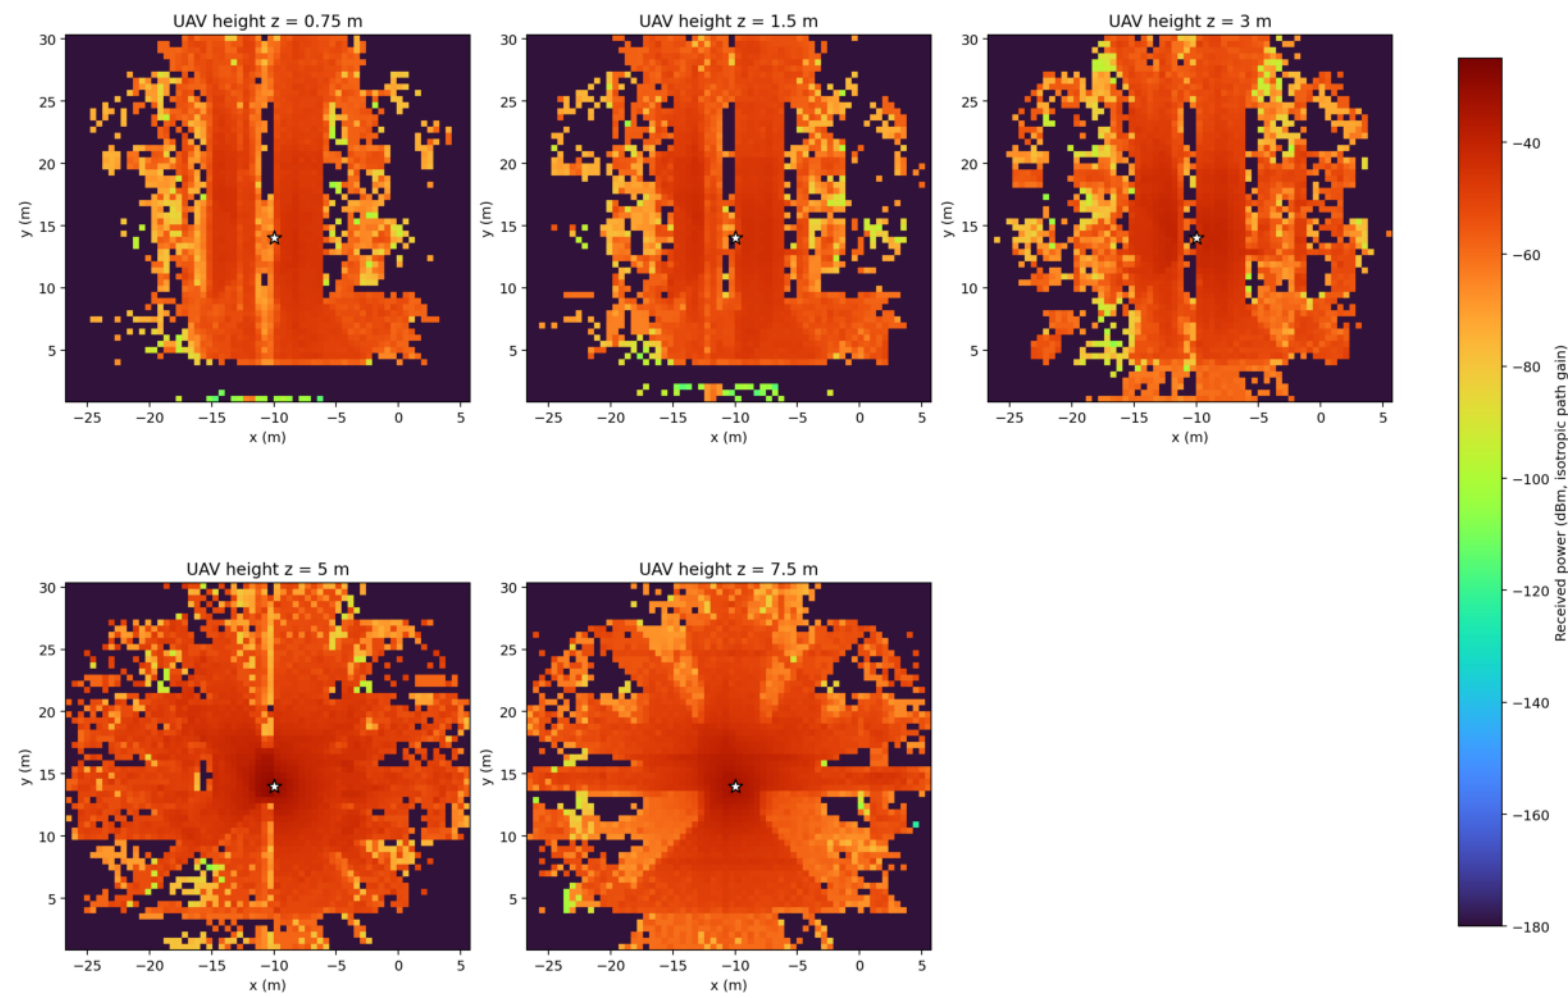

BS phase center = (-10, 14, 7) m | 28 GHz


Downlink: BS to UAV, 45 dBm

Warehouse Full bs_z7 fixed BS to UAV | BS=(-10, 14, 7) m | 28 GHz, 45 dBm

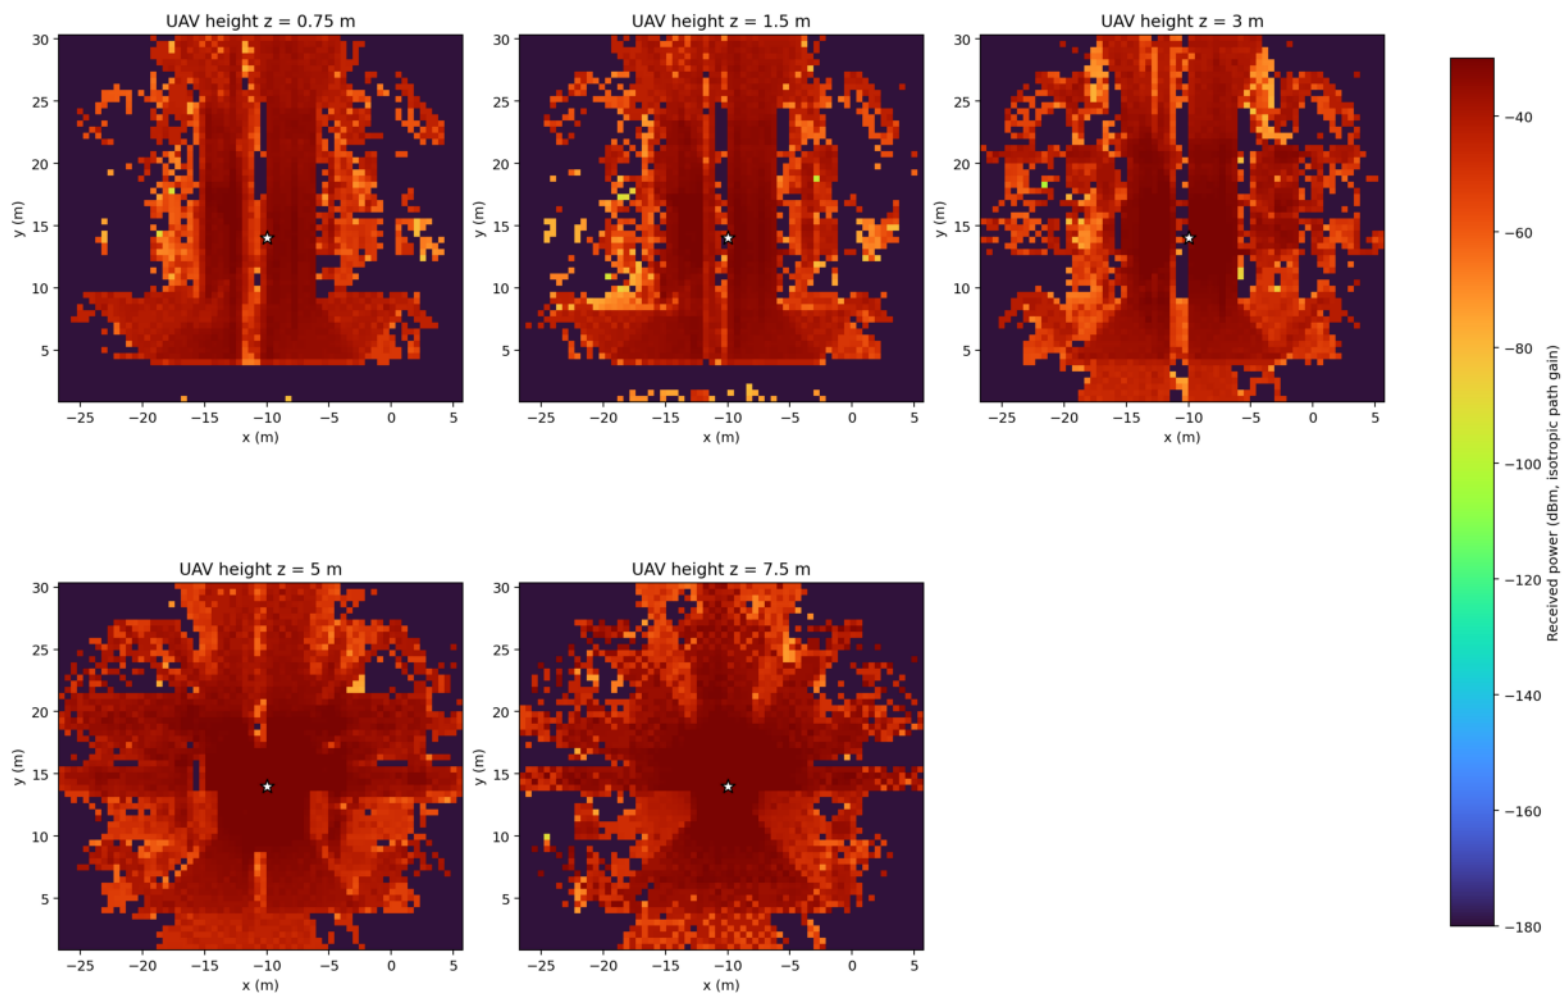

Uplink: UAV to BS, 30 dBm


Warehouse Full bs_z7 UAV-to-BS uplink | BS=(-10, 14, 7) m | 28 GHz, UAV transmitter=30 dBm

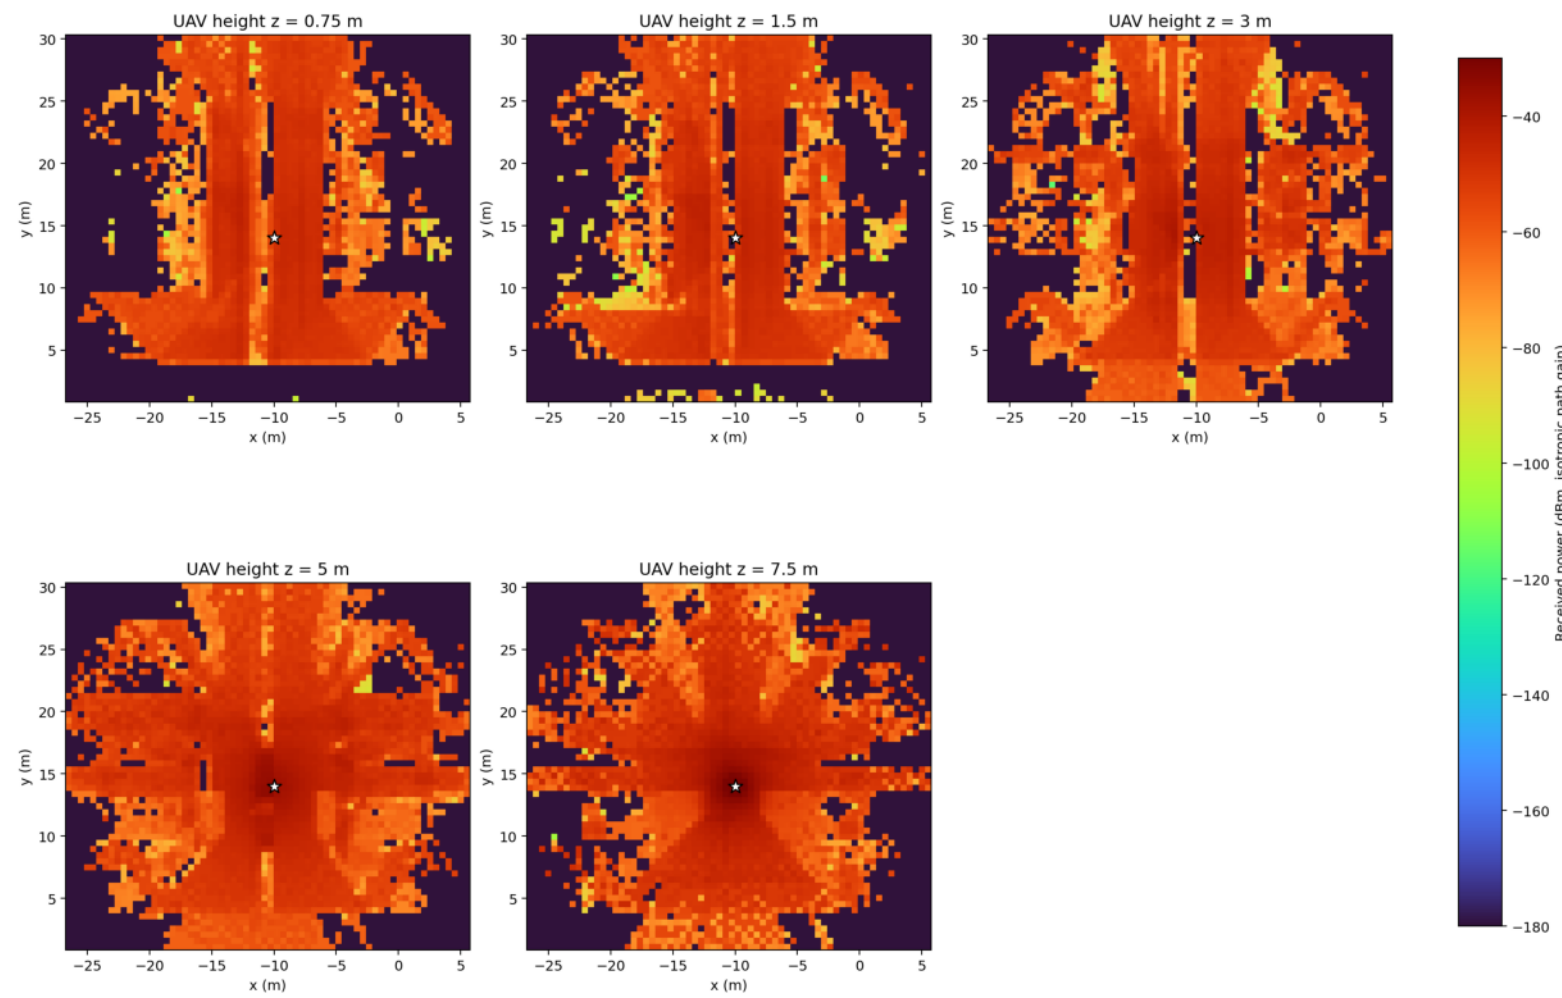

BS phase center = (-10, 14, 8) m | 28 GHz


Downlink: BS to UAV, 45 dBm

Warehouse Full bs_z8 fixed BS to UAV | BS=(-10, 14, 8) m | 28 GHz, 45 dBm

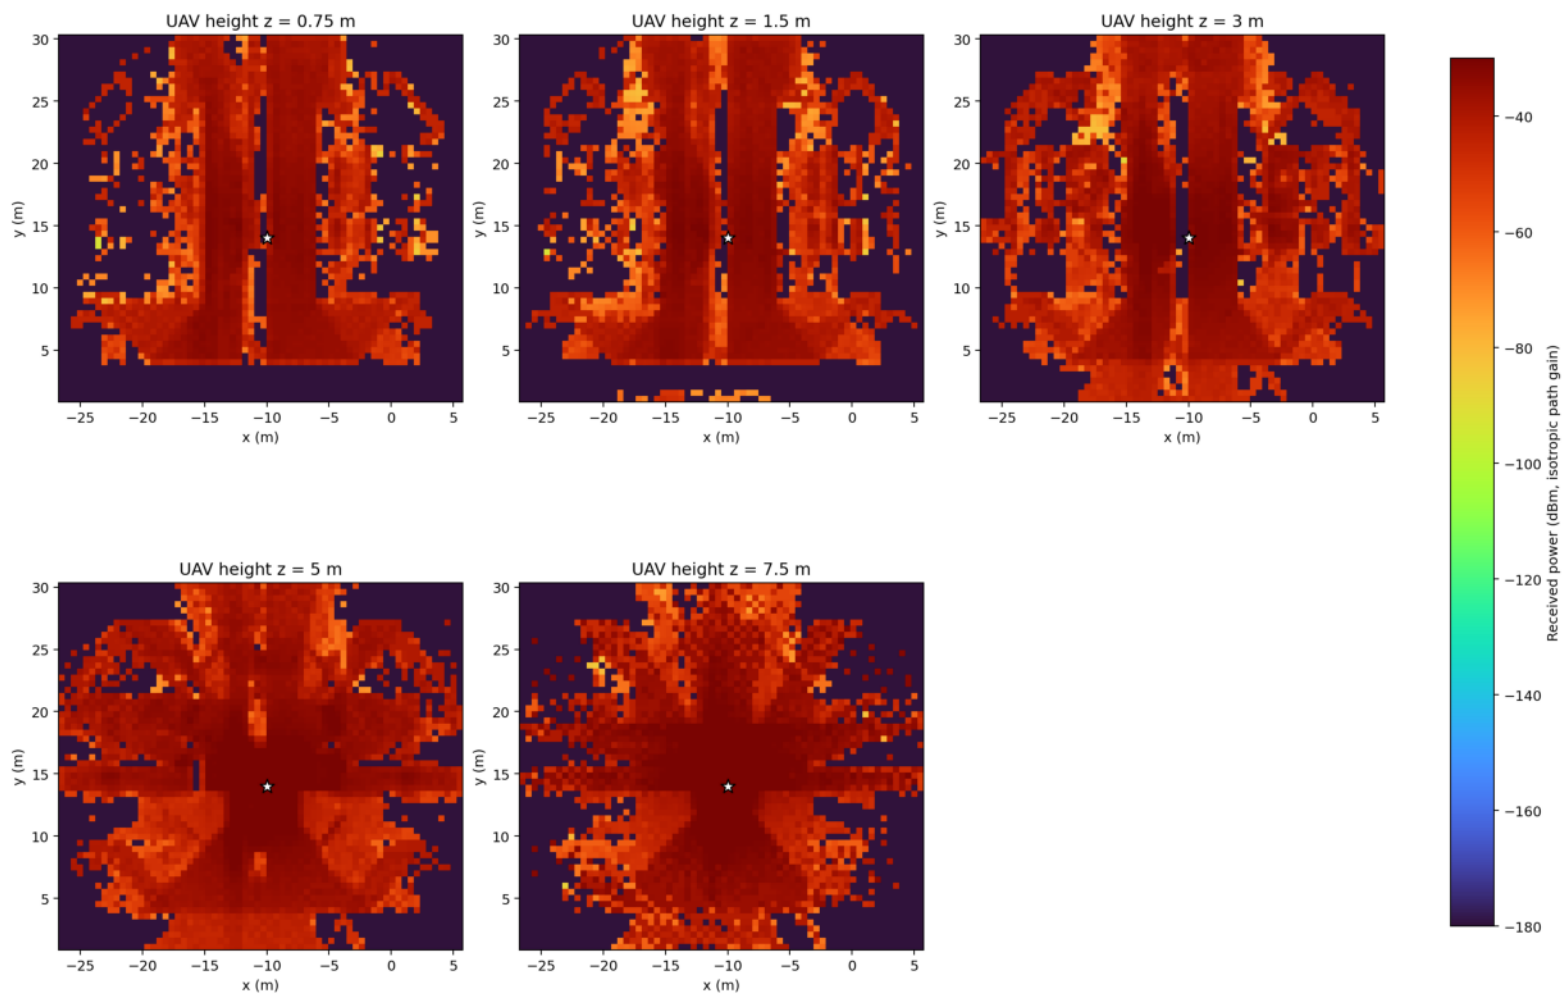

Uplink: UAV to BS, 30 dBm


Warehouse Full bs_z8 UAV-to-BS uplink | BS=(-10, 14, 8) m | 28 GHz, UAV transmitter=30 dBm

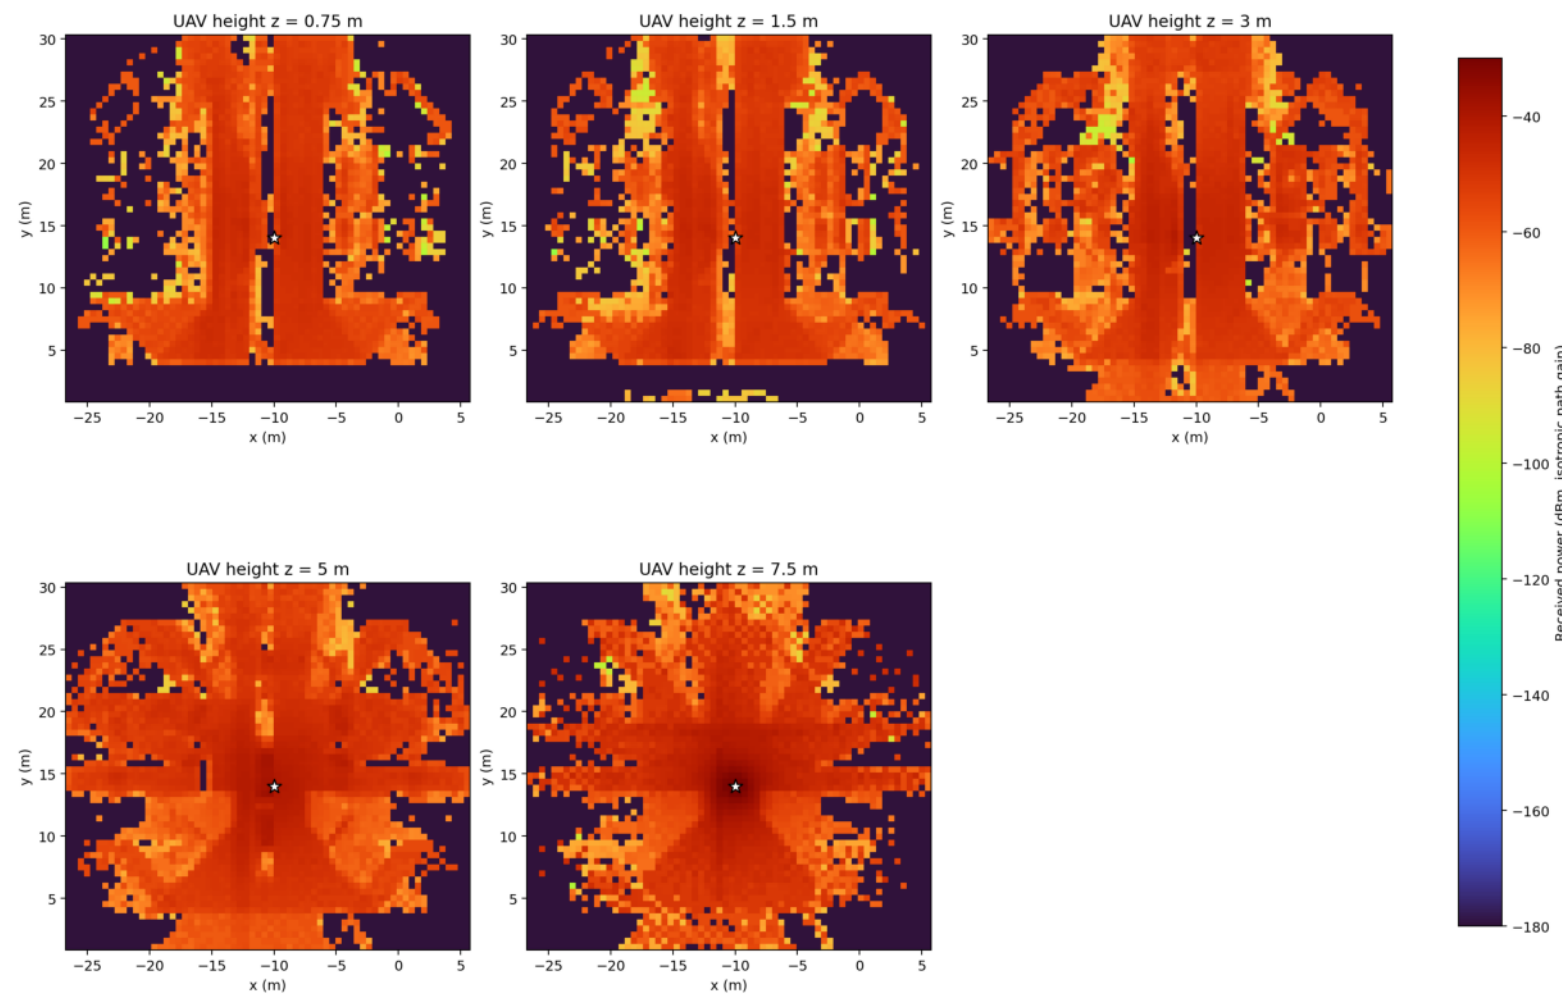

BS phase center = (-10, 14, 8.5) m | 28 GHz

Downlink: BS to UAV, 45 dBm

Warehouse Full bs_z8p5 fixed BS to UAV | BS=(-10, 14, 8.5) m | 28 GHz, 45 dBm

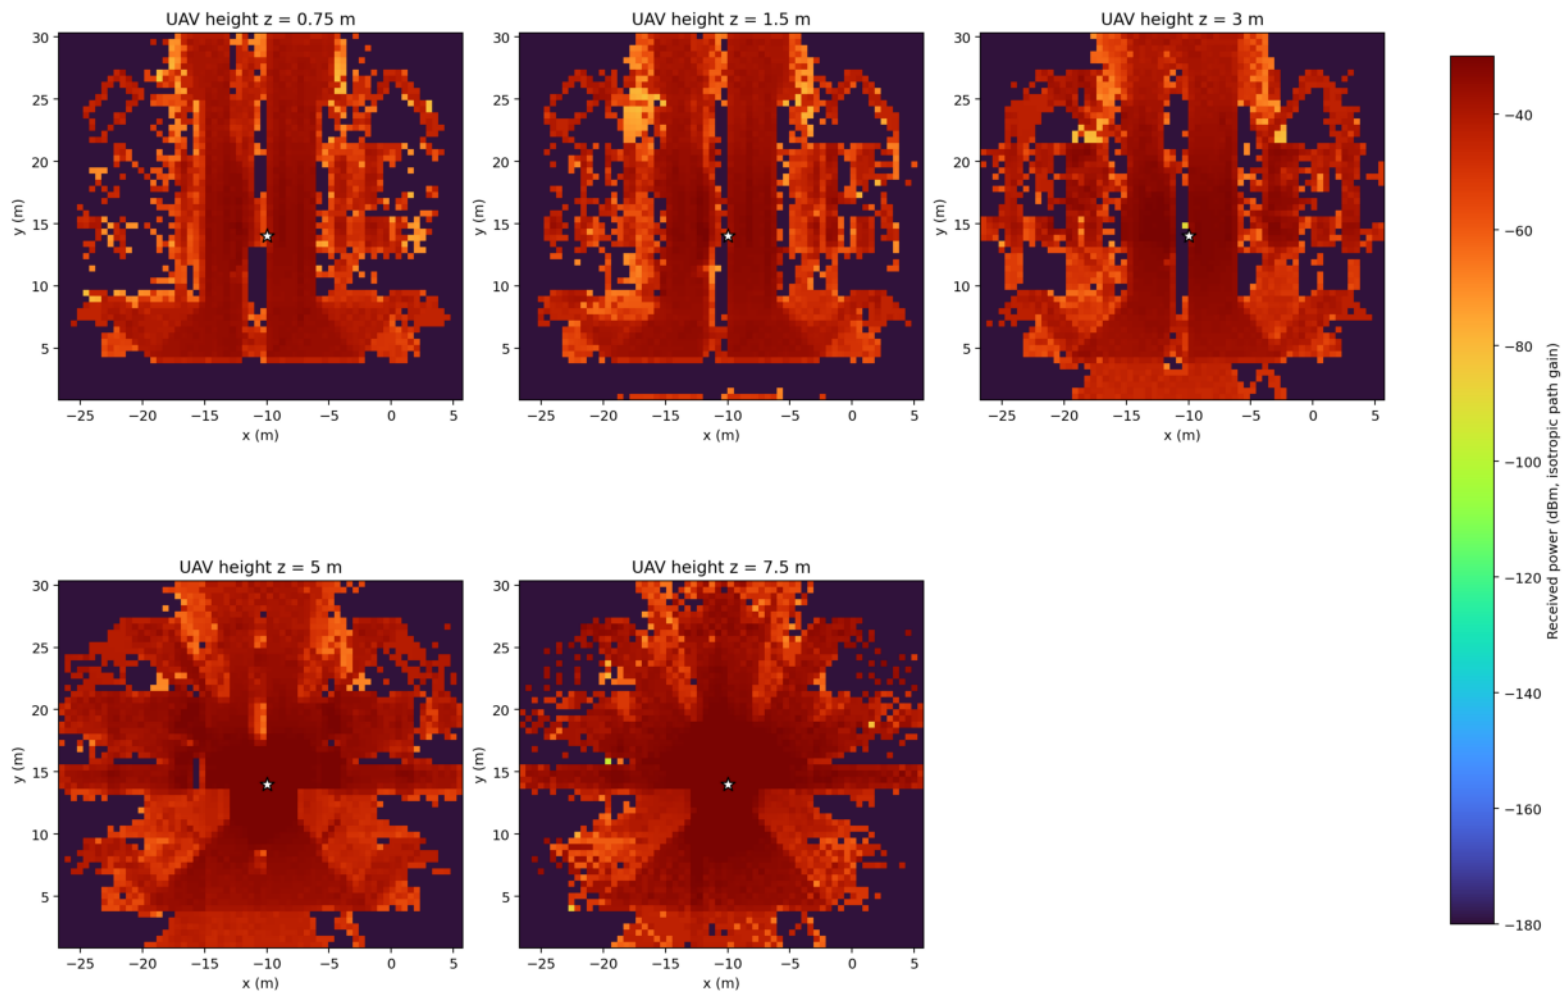

Uplink: UAV to BS, 30 dBm

Warehouse Full bs_z8p5 UAV-to-BS uplink | BS=(-10, 14, 8.5) m | 28 GHz, UAV transmitter=30 dBm

