



Goscor

Forklift Monitoring App

User Manual

Covers: Installation, Forklift Setup, Daily Usage, Monthly Usage, Reports, and Timeline Reading

Table of Contents

1. Quick Start Overview
2. Install the App
3. Main Report Screen
4. Link Devices to a Forklift
5. Select Which Forklift to View
6. View Daily Usage
7. Read the Timeline Graph
8. Use Monthly Usage
9. Download Reports
10. Config Sync and Saved Forklifts
11. Recommended Operating Workflow
12. Troubleshooting Quick Checks


1. Quick Start Overview

The Goscor app monitors forklift usage by combining three linked input devices: traction, steering, and hydraulics. A forklift profile stores those three device links. Once a profile is selected, the Report screen can show daily usage, monthly usage, the sensor timeline, and a downloadable PDF report.

Fast daily report workflow

1	Open the app Open the installed app or the live web site link.
2	Select forklift On the Report screen, use the Select forklift dropdown to choose the forklift.
3	Select date Choose the day to inspect.
4	Show Daily Report Press Show Daily Report. The Hours box and timeline update when data is loaded.
5	Download PDF Press Download PDF after the daily or monthly report has loaded.

Report screen with selected forklift, date, action buttons, Hours display, and sensor timeline.

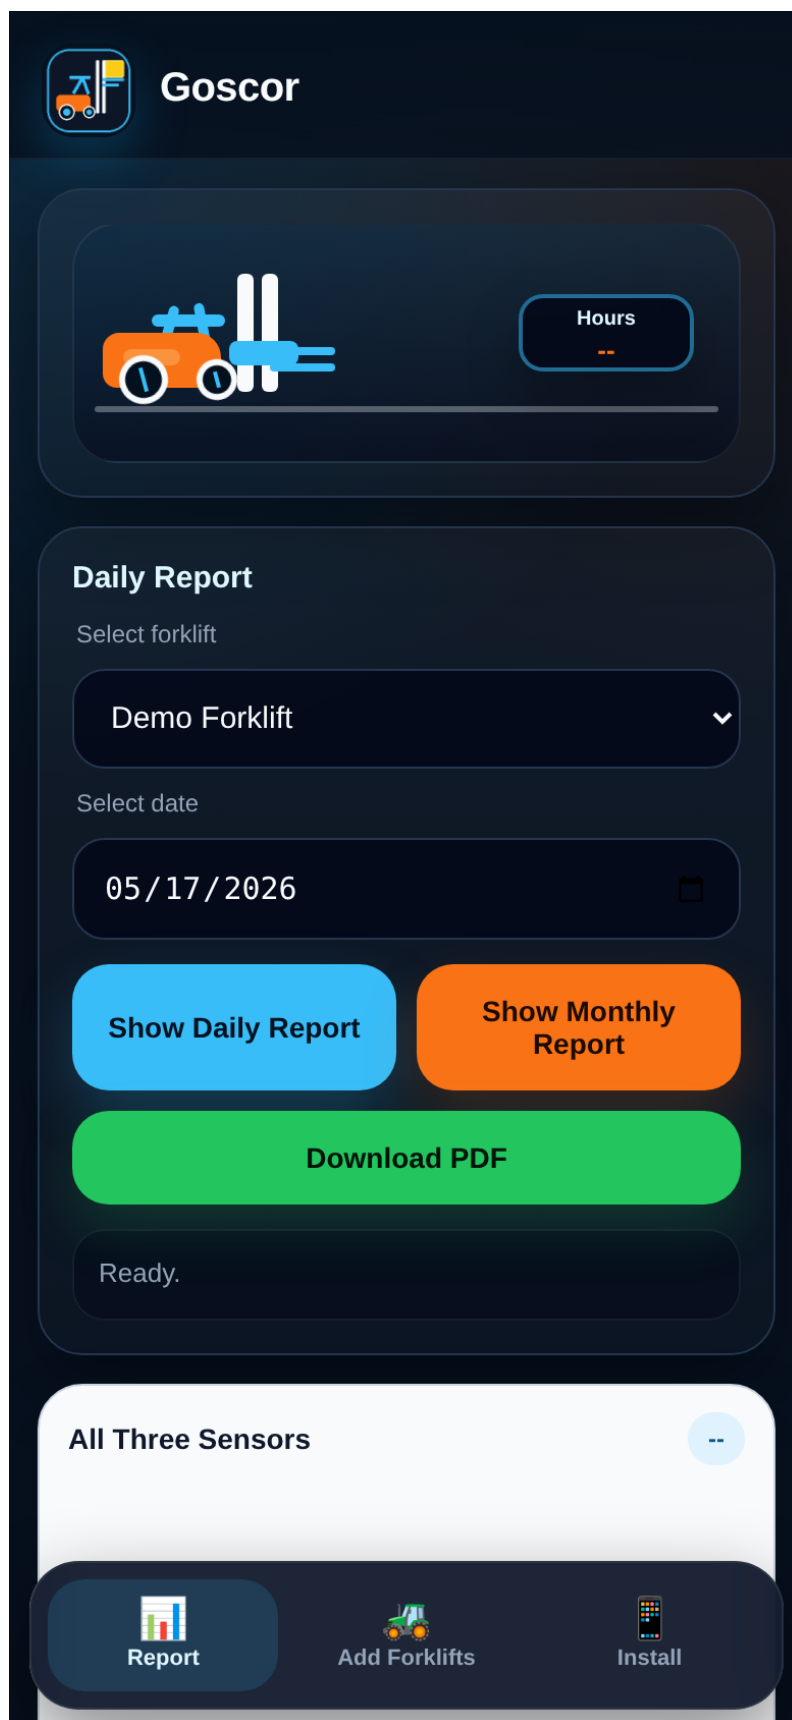

2. Install the App


The app is a Progressive Web App. It can install from the browser on Android or Windows when the browser exposes the install prompt. Use the bottom-right Install tab.

Install steps

1	Open the live app link Use Chrome on Android, or Chrome/Edge on Windows.
2	Tap Install Open the bottom Install tab and press Install App.
3	Confirm browser prompt Accept the browser installation dialog.
4	Launch normally After installation, open Goscor from the home screen or Windows Start Menu.


Install page. The app should show an Install App button when the browser allows PWA installation.

Note: If the install prompt does not appear, the app may already be installed, the browser may need one refresh, or the page may not be open from the live HTTPS web site link.

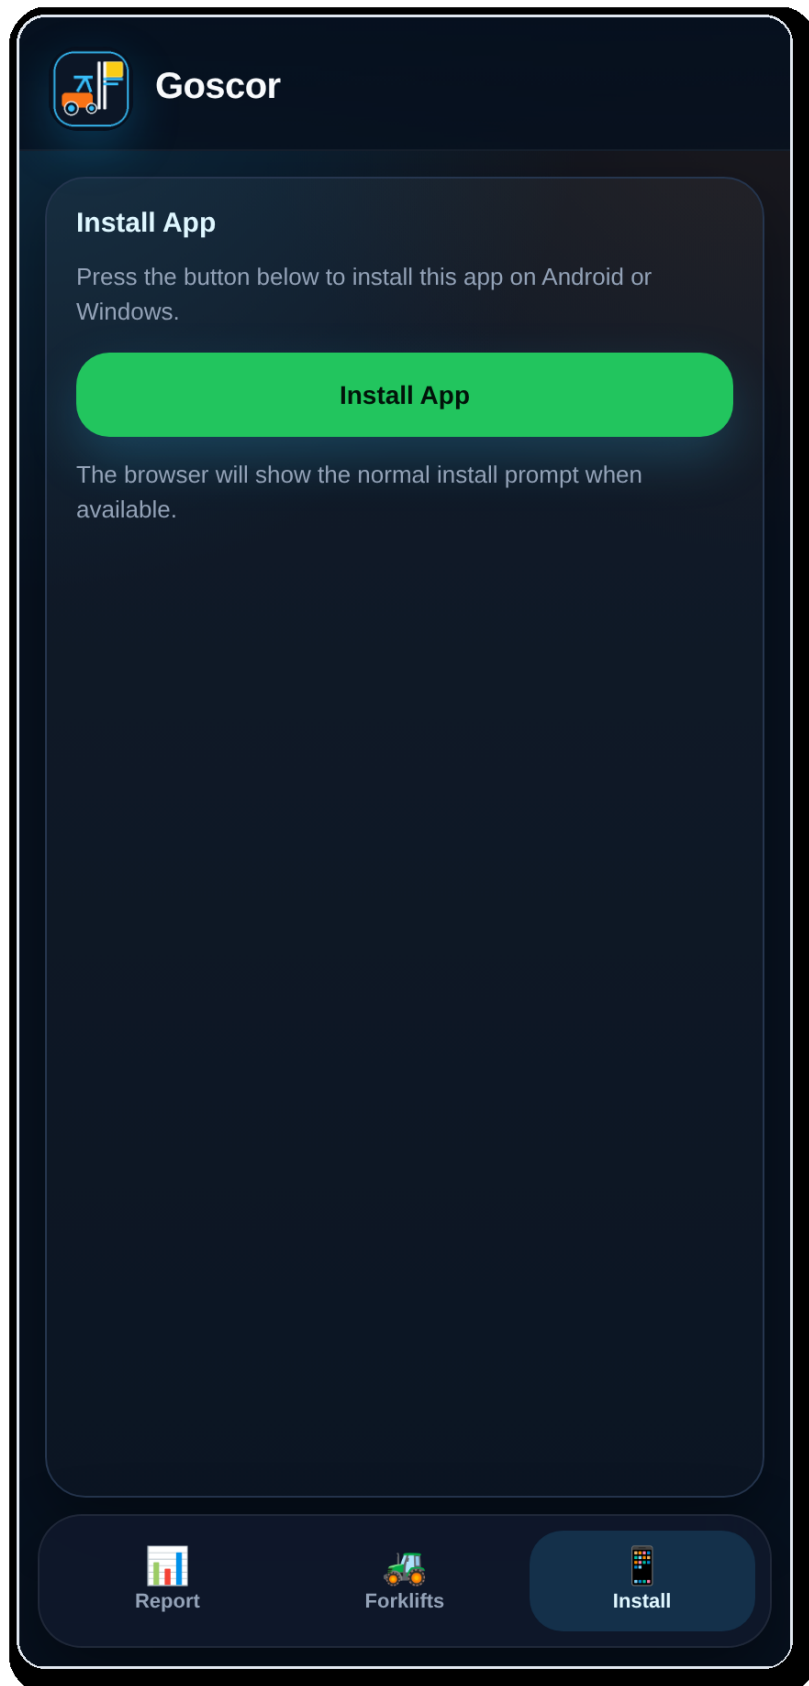

3. Main Report Screen

The Report tab is where the user selects a forklift and loads usage data. The top animation displays Hours after a daily report has loaded. The report controls sit underneath the animation.

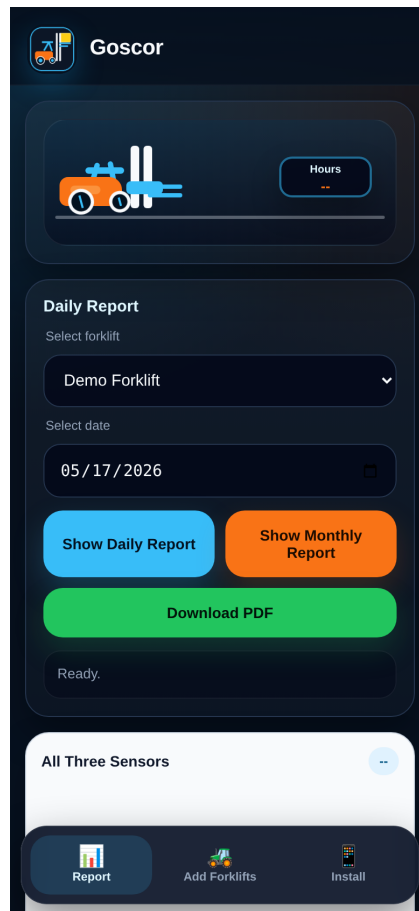

Controls on this screen

- Select forklift: Choose which forklift profile will be used for the report.
- Select date: Select the day for daily usage. The same date also controls which month is used for monthly usage.
- Show Daily Report: Downloads one day of telemetry and updates the Hours display and timeline.
- Show Monthly Report: Calculates total usage for the selected month.
- Download PDF: Creates a PDF after a daily or monthly report has loaded.

4. Link Devices to a Forklift

A forklift must be linked to three input devices: traction, steering, and hydraulics. The app combines these three inputs to calculate usage.

Device linking steps

1	Open Add Forklifts Tap the Add Forklifts tab in the bottom navigation.
2	Wait for devices The app loads the device list before showing the setup fields.
3	Enter forklift name Type a clear name, for example Forklift 1450.
4	Filter and select devices Use the filter boxes to find the traction, steering, and hydraulics devices.
5	Save Forklift Press Save Forklift to add the profile.
6	Save Config Press Save Config so other devices can load the same forklift setup.

Add Forklifts screen with Password, Config Sync, and Add Forklift setup fields.

 **Goscor**

Config Sync

Save or load the forklift setup file.

Password

Entre Password

Save Password

Load Config

Save Config

Config ready.

Add Forklift

Give the forklift a name, then select one ThingsBoard device for traction, one for steering, and one for hydraulics.

Forklift name

Example: Forklift 1

Traction device

Type to filter traction device

Press Load Devices first

Type part of the device name or ID, then select from the filtered dropdown.

 Report

 Add Forklifts

 Install

5. Config Sync and Saved Forklifts

Config Sync stores forklift profiles in the shared config file. This lets another phone or PC load the same forklift list. Focus for normal users: Save Password once, Load Config to pull saved forklifts, and Save Config after changes.

Config Sync section. Use this to save or load forklift profiles across devices.

The screenshot shows the 'Config Sync' section of the Goscor app. At the top is the Goscor logo, which consists of a blue square with a white forklift icon and the word 'Goscor' in white. Below the logo, the title 'Config Sync' is displayed in white. Underneath the title is the instruction 'Save or load the forklift setup file.' in a smaller white font. A 'Password' label is followed by a dark blue rounded rectangular input field containing the placeholder text 'Entre Password'. Below the input field is a large blue rounded rectangular button labeled 'Save Password'. Underneath this button are two more rounded rectangular buttons: a blue one labeled 'Load Config' and an orange one labeled 'Save Config'. At the bottom of the section, the text 'Config ready.' is displayed in a small white font.

Normal usage

- Save Password: Enter the config password once on each device, then save it locally on that device.
- Load Config: Pull the forklift profiles from the shared config file.
- Save Config: Push the current forklift profiles to the shared config file after adding or editing forklifts.

6. Select Which Forklift to View

The forklift used for reporting is selected from the Report screen. The dropdown is built from the saved forklift profiles. If the expected forklift is missing, go to Add Forklifts and press Load Config.

Selecting the active forklift

1	Go to Report Tap the Report tab in the bottom navigation.
2	Open Select forklift Tap the Select forklift dropdown.
3	Choose the forklift Select the forklift you want to view.
4	Load a report Select a date and press Show Daily Report or Show Monthly Report.

The Select forklift field controls which forklift the report will use.

 **Goscor**



Hours
--

Daily Report

Select forklift

Demo Forklift ▾

Select date

05/17/2026 📅

Show Daily Report

Show Monthly Report

Download PDF

Ready.

All Three Sensors ⋮


Report


Add Forklifts


Install


7. View Daily Usage

Daily usage shows how many hours the selected forklift was used on one selected day. The value is shown in the lifted Hours box in the animation and the timeline graph is updated below.

Daily usage steps

1	Select forklift Choose the forklift in the Select forklift dropdown.
2	Select date Choose the date for the day you want to view.
3	Press Show Daily Report The app connects to the data service and downloads the three linked sensor histories.
4	Read Hours The lifted load box changes from -- to the calculated hours, for example 4.34 h.
5	Check status The status line confirms that daily data downloaded successfully.


Lifted Hours box. This is the visual daily usage indicator after the daily report loads.

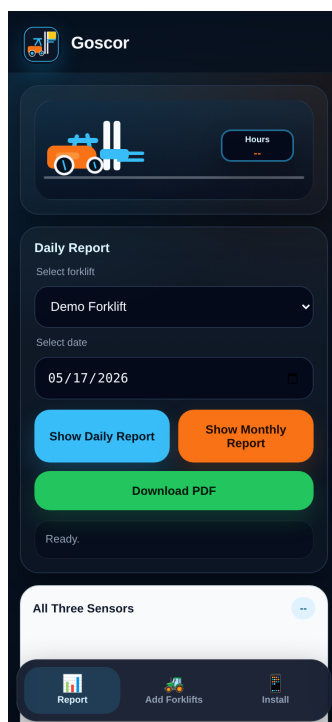

8. Read the Timeline Graph

The All Three Sensors timeline shows the raw ON/OFF state changes for traction, steering, and hydraulics across the selected day. It is useful for confirming when activity happened and which sensor was active.

All Three Sensors timeline. The lines step immediately between OFF and ON.

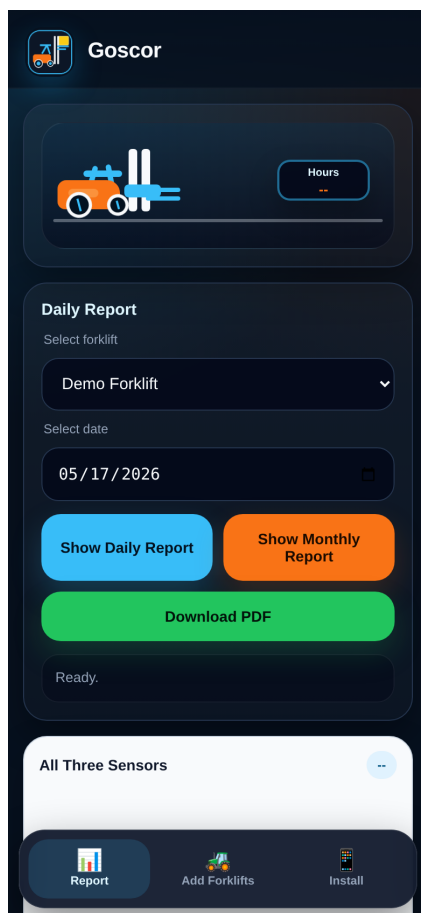

How to read it

- Horizontal axis: Time of day. Read left to right from morning to evening.
- Vertical axis: OFF at the bottom and ON at the top.
- Orange line: Traction sensor activity.
- Blue line: Steering sensor activity.
- Green line: Hydraulics sensor activity.
- Step changes: A vertical jump means the sensor changed state at that time. A flat line at ON means the sensor stayed active during that period.

The app calculates usage by combining all three sensors. If any of the linked sensors indicates activity, that period contributes to the forklift usage calculation, subject to the app's short OFF-gap logic.


9. Use Monthly Usage

Monthly usage totals the forklift usage hours for the whole calendar month of the selected date. This is useful for customer summaries and monthly operational reporting.

Monthly usage steps

1	Select forklift Choose the forklift from the Report screen.
2	Select any date in the month For example, selecting 2026-05-16 means the report uses May 2026.
3	Press Show Monthly Report The app downloads each day in that month and totals the usage.
4	Read the total The Monthly Summary shows total use per month.
5	Download PDF Press Download PDF to create a monthly PDF report.

Monthly usage is started from the Show Monthly Report button on the Report screen.

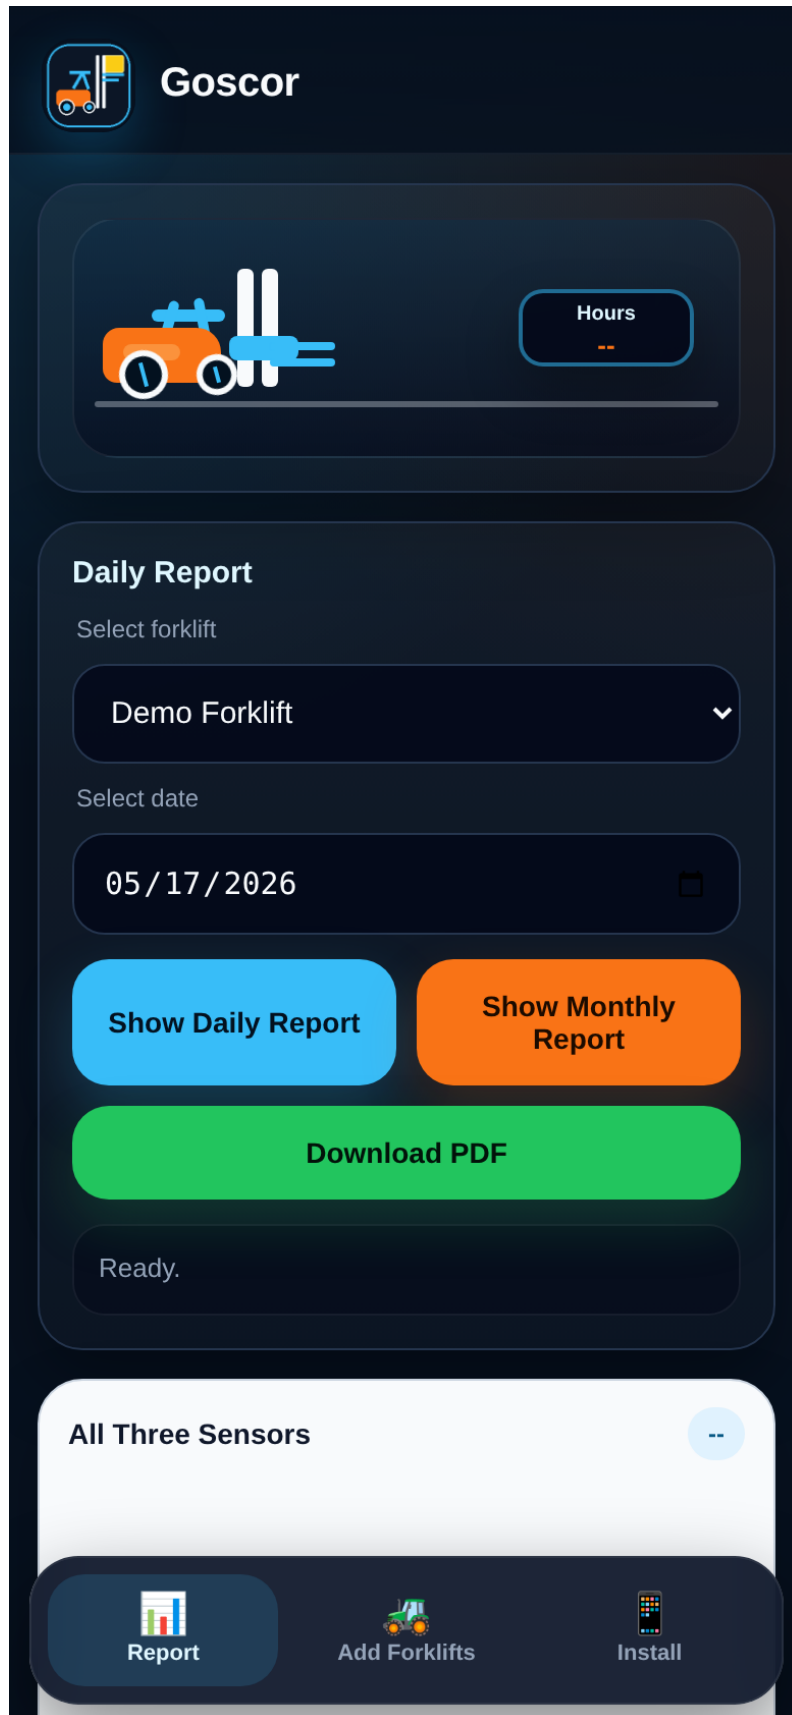

10. Download Reports

The Download PDF button creates a report after either a daily report or monthly report has been loaded. The report is generated directly by the app.

Report workflow

1	Load data first Run Show Daily Report or Show Monthly Report.
2	Confirm status Wait until the status indicates the data has been downloaded.
3	Press Download PDF The app generates the PDF locally.
4	Save or share Use the browser/device download options to save or send the PDF.

- Daily PDF: Includes selected date, total daily usage, and sensor event information.
- Monthly PDF: Includes selected month and total monthly usage.
- Best practice: Confirm the selected forklift and date before downloading the PDF.

11. Recommended Operating Workflow

The following workflow keeps the app consistent across devices and makes reporting easier for operators.

First setup on a device

1	Install or open app Use the Install tab or the live link.
2	Open Add Forklifts Go to the Add Forklifts tab.
3	Save password Enter the config password and press Save Password.
4	Load config Press Load Config to pull the saved forklift list.
5	Run reports Go to Report and choose the forklift/date.

Adding a new forklift

1	Open Add Forklifts Wait for the device list to load.
2	Enter name Use a clear forklift name, for example Forklift 1450.
3	Link devices Select traction, steering, and hydraulics devices.
4	Save Forklift Save the profile locally.
5	Save Config Push the new profile to the shared config so other devices can load it.

12. Troubleshooting Quick Checks

This section is intentionally short. The main user workflow is linking forklifts and viewing reports; password errors should not be the focus of normal operators.

If forklifts are missing

- Go to Add Forklifts and press Load Config.
- Confirm the device has the config password saved.
- If a forklift was newly added on another device, make sure that device pressed Save Config first.

If devices do not appear when adding a forklift

- Tap Add Forklifts and wait for the Loading Devices progress to finish.
- Type part of the device name or ID in the filter box.
- Confirm the app account can see those devices.

If a report does not load

- Confirm a forklift is selected.
- Confirm a date is selected.
- Confirm the selected forklift has traction, steering, and hydraulics linked.
- Try a known date where device telemetry exists.