1.

List 5 common issues users face with USB keyboards or mice on laptops, and write one possible solution for each.

Common Issues with USB Keyboards and Mice on Laptops

USB keyboards and mice are input devices used to enter data and control a computer. Sometimes, users face problems while connecting or using these devices.

Table: Common Issues and Their Solutions

S.No.	Common Issue	Possible Solution
1	**Keyboard or mouse is not working.**	Disconnect the USB device and reconnect it to another working USB port on the laptop.
2	**Keyboard or mouse disconnects frequently.**	Check the USB cable for damage and ensure the connector is firmly plugged into the port.
3	**Some keyboard keys are not working.**	Clean the keyboard carefully and check whether the affected keys work correctly after reconnecting it.
4	**Mouse pointer moves slowly or irregularly.**	Clean the mouse sensor and use the mouse on a clean, flat surface.
5	**Laptop does not recognize the USB device.**	Restart the laptop and update or reinstall the USB device driver through Device Manager if necessary.

2.

Simulate a troubleshooting flow: Your Bluetooth headphones are not connecting to your phone. Write the exact step-by-step actions you would take to diagnose and fix the issue, mentioning any settings or indicators you would check.

. Troubleshooting Bluetooth Headphones That Are Not Connecting to a Phone

Problem: Bluetooth headphones are not connecting to the phone.

Objective: To identify the cause of the connection problem and fix it by checking Bluetooth settings, battery level, pairing mode, and software updates.

Step-by-Step Troubleshooting Procedure

Step 1: Check Whether Bluetooth Is Turned On

- Open **Settings** on the phone.
- Tap **Bluetooth** and make sure it is turned on.
- Check whether the Bluetooth icon is visible in the phone's settings.

Step 2: Check the Headphones' Battery

- Make sure the headphones are sufficiently charged.
- Check the battery indicator, if available.
- If the battery is low, charge the headphones and try connecting again.

Step 3: Enable Pairing Mode

- Turn on the Bluetooth headphones.
- Press and hold the power or Bluetooth button according to the manufacturer's instructions.
- Check whether the LED indicator flashes, usually blue or white, to indicate pairing mode.

Step 4: Check Available Bluetooth Devices

- Open **Settings → Bluetooth** on the phone.
- Look under *Available Devices* or *Other Devices*.
- Select the name of your headphones when it appears.

Step 5: Remove and Re-Pair the Headphones

- If the headphones are already listed but will not connect, tap the settings icon beside their name.
- Select **Forget Device** or **Unpair**.
- Put the headphones back into pairing mode.
- Search for available devices and select the headphones again.

Step 6: Disconnect Other Devices

- Check whether the headphones are already connected to another phone, laptop, or tablet.
- Disconnect them from that device if necessary.
- Try pairing them with your phone again.

Step 7: Restart Both Devices

- Turn off the Bluetooth headphones.
- Restart the phone.
- Turn on the headphones and enable pairing mode.
- Try connecting again.

Step 8: Check for Software Updates

- Open the phone's settings and check for available system updates.
- If the headphone manufacturer provides an application, check whether a firmware update is available.
- Install appropriate updates and retry the connection.


Step 9: Reset the Headphones

- If the problem continues, follow the manufacturer's instructions to reset the headphones.
- After resetting, enable pairing mode and connect them to the phone again.

Step 10: Test the Connection


- Play a song or video after connecting.
- Check whether the sound comes through the headphones.
- If the headphones still do not connect, test them with another compatible device to determine whether the problem is with the headphones or the phone.

Troubleshooting Flowchart

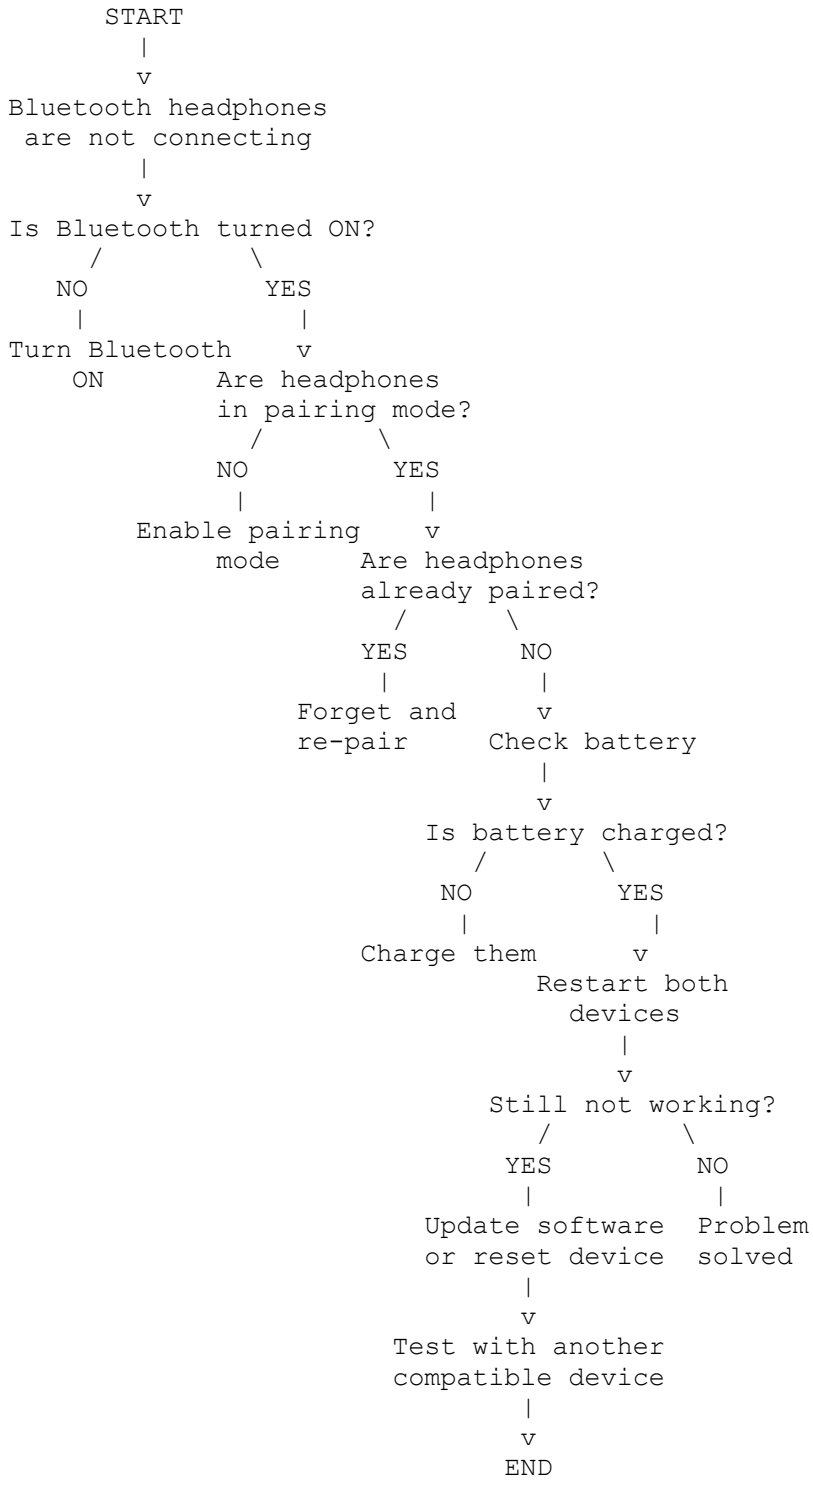

Important Indicators to Check

Indicator or Setting	What to Check
Bluetooth setting	Bluetooth is switched on.
Battery indicator	Headphones have sufficient charge.
LED light	Headphones are in pairing mode.
Available devices list	Headphones appear in the phone's Bluetooth menu.
Connection status	The device shows as connected.
Audio output	Sound plays through the headphones.
Software updates	Phone and headphone firmware are up to date.

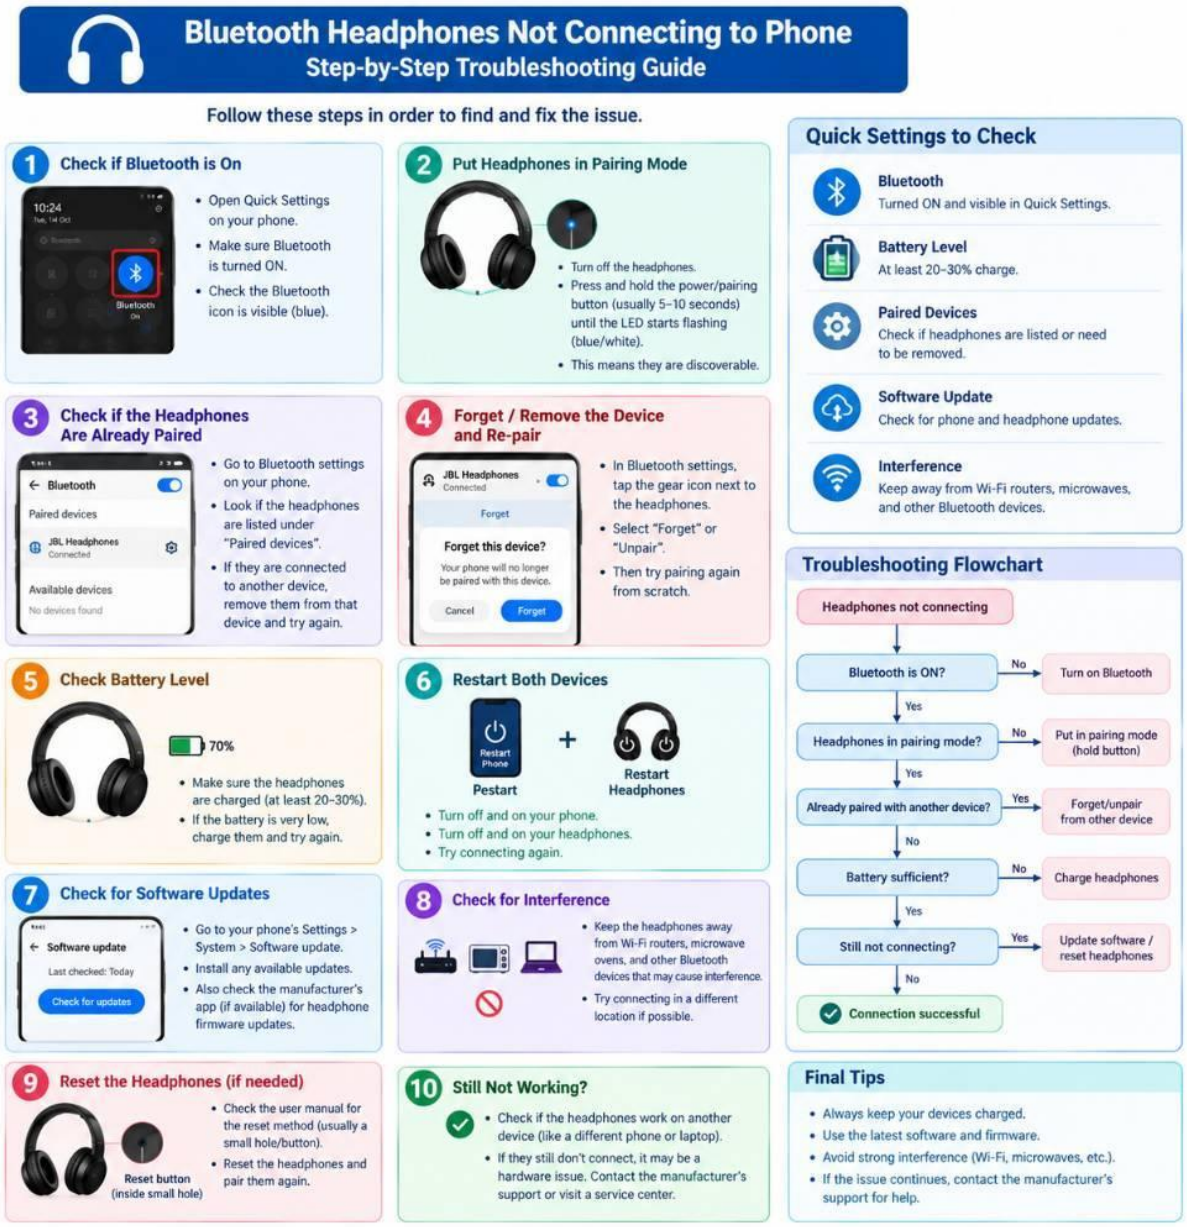

3.

A user reports that their external webcam is not detected during a Zoom call on Windows 10. Write a checklist of 6 things to check or try to resolve the problem.

Hint: Consider device manager, privacy settings, and app permissions.

. Troubleshooting Checklist: External Webcam Not Detected in Zoom on Windows 10

Problem: An external webcam is not detected during a Zoom call on a Windows 10 computer.

Objective: To identify and fix the webcam detection problem by checking hardware connections, device drivers, privacy settings, and Zoom permissions.

Checklist of 6 Things to Check

S.No.	Checklist Item	Steps to Resolve the Problem
1	**Check the USB Connection**	Disconnect the webcam and reconnect it to another USB port. Check that the cable is properly connected and not damaged.
2	**Check Device Manager**	Right-click the Start button, open Device Manager, and expand **Cameras** or **Imaging devices**. Check whether the webcam appears in the list.
3	**Update or Reinstall the Driver**	In Device Manager, right-click the webcam and select **Update driver**. If necessary, reinstall the driver using the manufacturer's instructions.
4	**Check Windows Privacy Settings**	Go to **Settings → Privacy → Camera**. Turn on camera access for the device and allow desktop apps to access the camera.
5	**Check Zoom Camera Settings**	Open Zoom, go to **Settings → Video**, and select the correct external webcam from the camera dropdown menu. Check whether the video preview appears.
6	**Close Other Apps and Restart**	Close other applications that may be using the webcam, such as Microsoft Teams or the Camera app. Restart Zoom and, if necessary, restart the computer.

4.

You are helping a friend whose printer is showing 'offline' status on their PC. Describe how you would use the Windows Troubleshooter tool to try to fix the issue, and explain what information the tool provides during the process.

. Troubleshooting a Printer Showing "Offline" on a Windows PC

Problem: The printer shows an *Offline* status on the computer, and the user cannot print documents.

Objective: To use the Windows Troubleshooter to identify and fix printer connection problems.

Step-by-Step Procedure

Step 1: Open Windows Settings

- Click the **Start** button.
- Open **Settings**.
- Select **Update & Security**.

Step 2: Open the Troubleshooter

- Click **Troubleshoot** in the left-hand menu.
- Select **Additional troubleshooters**.
- Find and select **Printer**.

Step 3: Run the Troubleshooter

- Click **Run the troubleshooter**.
- Windows will scan for common printer problems.
- Follow the instructions displayed on the screen.

Step 4: Check the Detected Problems

The troubleshooter checks for issues such as:

- Printer connection problems.
- Incorrect printer configuration.
- Printer driver problems.
- Errors that may prevent printing.

The exact checks depend on the Windows version and the problems detected.

Step 5: Apply the Recommended Fixes

- If Windows identifies a problem, it may suggest a solution or apply a fix automatically.
- Follow the on-screen instructions.
- If the troubleshooter cannot fix the problem, note the error message or recommended next steps.

Step 6: Test the Printer


- Open **Settings → Devices → Printers & scanners**.
- Select the printer and open its queue.
- Check that the printer is online and that no incorrect offline setting is enabled.
- Print a test page to confirm that the problem is resolved.

You've hit the Free plan limit for image generations requests. You can create more images when the limit resets in 23 hours.

Troubleshooting Flowchart

You can draw this simple flowchart in your assignment:

```
START
  |
```

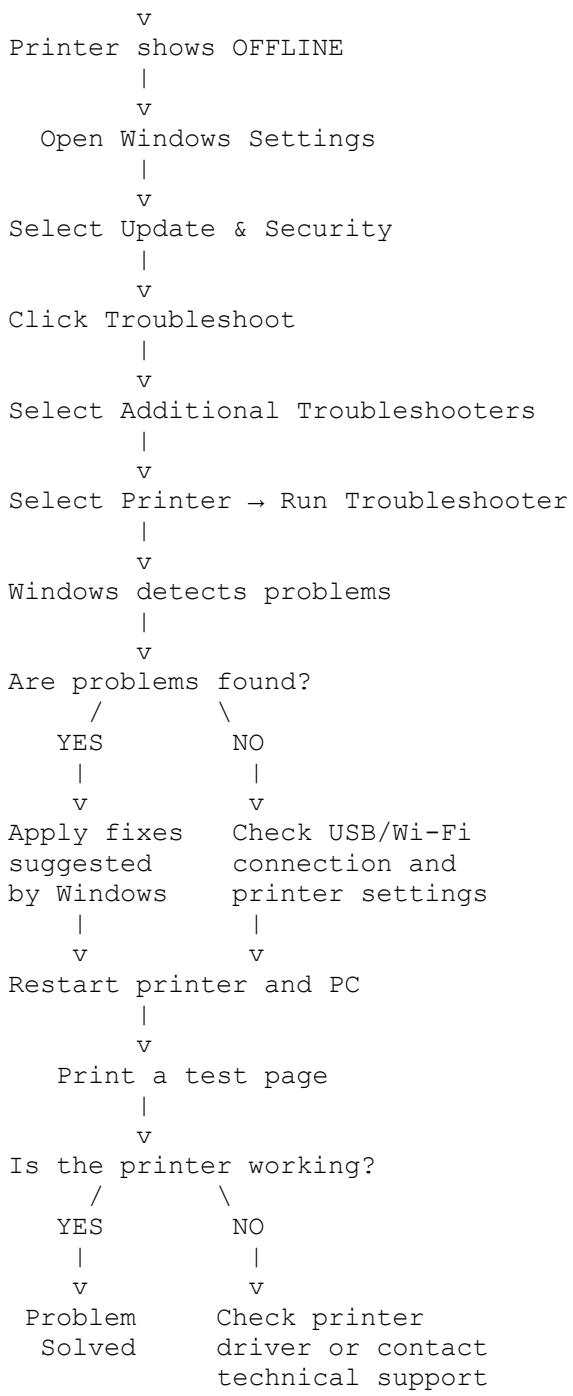

What Information Does the Windows Troubleshooter Provide?

The Windows Troubleshooter provides information about:

1. **Detected problems:** Identifies possible issues affecting printer operation.
2. **Connection status:** Helps identify whether the printer is accessible to the computer.
3. **Configuration errors:** May identify incorrect printer settings.
4. **Driver issues:** May detect certain problems related to printer drivers.
5. **Recommended solutions:** Suggests possible fixes or applies them automatically when supported.

6. **Troubleshooting results:** Indicates whether a problem was found, whether a fix was applied, or whether further action is needed.