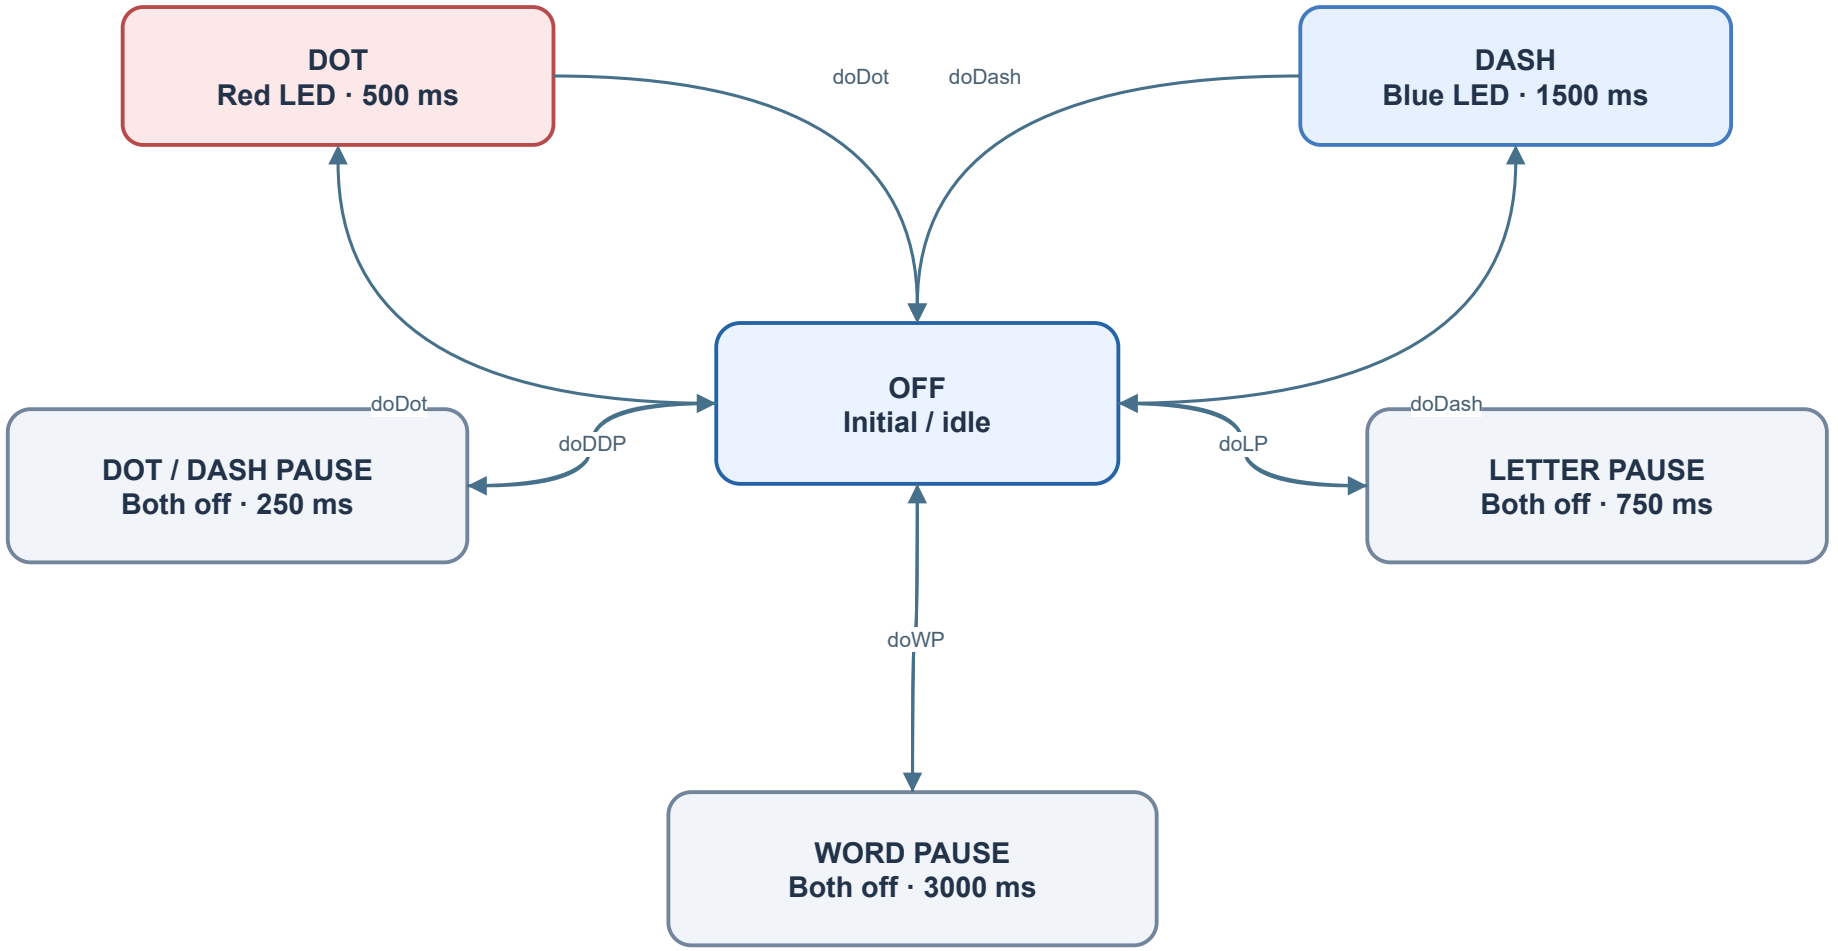

Button (GPIO 24): queues SOS or OK for the NEXT transmission.
Each message completes before selection changes.
DOT = GPIO 18 | DASH = GPIO 23 | LCD shows current message.