



Workshop Manual

Crafter 2017 ➤

TGE 2017 ➤

e-Crafter 2019 ➤

e-TGE 2019 ➤

General body repairs, interior

Edition 11.2018



List of Workshop Manual Repair Groups

Repair Group

- 00 - Technical data
- 68 - Interior equipment
- 69 - Passenger protection
- 70 - Trim, insulation
- 72 - Seat frames
- 74 - Seat - padding, covers

Technical information should always be available to the foremen and mechanics, because their careful and constant adherence to the instructions is essential to ensure vehicle road-worthiness and safety. In addition, the normal basic safety precautions for working on motor vehicles must, as a matter of course, be observed.



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety measures when working on vehicles with a start/stop system	1
1.2 Safety precautions when using testing and measuring instruments during a road test	2
1.3 Safety measures when working with pyrotechnic components	2
1.4 Safety instructions for airbag	3
1.5 Deactivating the airbag	4
1.6 Storage, transportation and disposal of airbag, belt tensioner and battery isolator units (pyrotechnic components)	4
1.7 Additional safety regulations for side airbag	5
1.8 Additional safety instructions for curtain airbag	5
1.9 Safety regulations for crash sensors (pressure sensors) for front side airbags	6
1.10 Renewing pyrotechnic, electrical and mechanical components of the restraint system after an accident	6
1.11 Checking airbag securing parts after an accident	8
1.12 Accident without airbag triggering	9
1.13 Checking seat belts	9
1.14 Check belt webbing	9
1.15 Checking inertia reel (locking mechanism)	10
1.16 Visually checking belt buckle	11
1.17 Check operation of belt buckle	11
1.18 Checking belt relays, and buckle tongues	11
1.19 Checking securing parts and anchorage points after an accident	12
1.20 Checking seat belt restraint function for holding additional child seats (not for driver's seat belt) - country-specific	12
1.21 Safety precautions when working in the vicinity of high-voltage components	12
1.22 Safety precautions when working on high-voltage system	13
2 Hazard classification for the high-voltage system	14
3 Repair notes	21
3.1 General repair instructions	21
3.2 Contact corrosion	21
3.3 Pipe/wire routing and attachment	21
3.4 Explanatory notes on production control numbers (PR no.)	22
68 - Interior equipment	23
1 Compartments/covers	23
1.1 Overview of fitting locations - storage compartments/covers	23
1.2 Assembly overview - driver side dash panel cover	25
1.3 Assembly overview - front passenger side dash panel cover	26
1.4 Assembly overview - steering column trim	27
1.5 Assembly overview - glove compartment	28
1.6 Assembly overview - storage compartment in roof headliner	30
1.7 Assembly overview - handbrake lever boot	32
1.8 Removing and installing dash panel cover on driver side	32
1.9 Removing and installing dash panel insert trim	33
1.10 Removing and installing dash panel cover on front passenger side	34
1.11 Removing and installing upper steering column trim	34
1.12 Removing and installing lower steering column trim	35
1.13 Removing and installing glove compartment opener	36
1.14 Removing and installing glove compartment	37
1.15 Removing and installing glove compartment cover	38
1.16 Removing and installing damper element for glove compartment lid	38
1.17 Service position for glove compartment lid	38



1.18	Removing and installing headliner storage compartment	40
1.19	Removing and installing handbrake lever boot	49
1.20	Removing and installing cover for central electrics	50
1.21	Removing and installing dash panel compartment	50
1.22	Removing and installing information electronics mounting frame	52
1.23	Removing and installing footwell cover	53
1.24	Removing and installing cover of windscreen heater for lane departure warning Z67	53
2	Equipment	55
2.1	Assembly overview - sun visors	55
2.2	Assembly overview - grab handle	58
2.3	Assembly overview - partition panel	61
2.4	Assembly overview - tie rails	65
2.5	Assembly overview - seat rail systems	67
2.6	Removing and installing sun visor	67
2.7	Removing and installing sun visor centre mount	71
2.8	Removing and installing grab handle	73
2.9	Removing and installing tool kit storage compartment	76
2.10	Removing and installing partition panel	78
2.11	Removing and installing tie rail	83
2.12	Removing and installing coat hook	86
2.13	Removing and installing retaining plate	86
2.14	Removing and installing seat rail system	87
2.15	Assembly overview - chock holder	89
2.16	Removing and installing chock holder	90
3	Centre console	92
3.1	Assembly overview - centre console	92
3.2	Removing and installing cover for centre console	93
3.3	Removing and installing front ashtray	93
3.4	Removing and installing centre console front storage compartment	94
3.5	Removing and installing centre console trim in front footwell	95
3.6	Removing and installing centre console	95
3.7	Removing and installing trim for operating and display unit	96
3.8	Removing and installing coin holder	97
4	On inside	98
4.1	Assembly overview - interior mirror	98
4.2	Removing and installing interior mirror	99
69	Passenger protection	101
1	Seat belts	101
1.1	Overview of fitting locations - seat belts and anchorage points	101
1.2	Assembly overview - front three-point seat belt	106
1.3	Assembly overview - rear outer three-point seat belt	108
1.4	Assembly overview - rear centre three-point seat belt	109
1.5	Assembly overview - rear three-point seat belt, single seat passenger compartment	110
1.6	Assembly overview - front belt buckle	111
1.7	Assembly overview - rear belt buckle	112
1.8	Removing and installing front three-point seat belt	113
1.9	Removing and installing rear three-point seat belt	119
1.10	Removing and installing rear belt guide	125
1.11	Removing and installing front belt guide	128
1.12	Removing and installing front belt end fitting	130
1.13	Removing and installing rear outer belt end fitting	131
1.14	Removing and installing belt height adjuster	133
1.15	Removing and installing front belt buckle	134
1.16	Removing and installing rear belt buckle	135



2	Airbag system	138
2.1	Overview of fitting locations - airbag system	138
3	Airbag control unit	139
3.1	Assembly overview - airbag control unit	139
3.2	Removing and installing airbag control unit J234	139
4	Battery isolator igniter	144
4.1	Removing and installing battery isolator igniter	144
5	Driver's airbag	145
5.1	Assembly overview - driver side airbag	145
5.2	Removing and installing airbag unit with igniter	145
5.3	Removing and installing return spring with slip ring (coil connector)	148
5.4	Renewing connector on airbag	149
6	Front passenger side airbag	150
6.1	Assembly overview - front passenger side airbag	150
6.2	Removing and installing front passenger side airbag unit with igniter	151
6.3	Removing and installing key-operated switch to deactivate front passenger side airbag E224	153
6.4	Removing and installing front passenger side airbag deactivated warning lamp K145	153
7	Side airbags	154
7.1	Assembly overview - front side airbag	154
7.2	Removing and installing front side airbag with igniter	154
8	Curtain airbags	157
8.1	Assembly overview - curtain airbag	157
8.2	Removing and installing curtain airbag with igniter	157
9	Airbag crash sensors	161
9.1	Overview of fitting locations - airbag crash sensors	161
9.2	Removing and installing front airbag crash sensor for driver side G283 or front airbag crash sensor for front passenger side G284	161
9.3	Removing and installing front side airbag crash sensor G179 / G180	165
9.4	Removing and installing rear side airbag crash sensor G256 / G257	166
10	Seat belt verification	169
10.1	Removing and installing seat belt verification	169
11	Seat occupied recognition	170
11.1	Removing and installing seat occupied recognition	170
12	Roll-over bar	171
12.1	Assembly overview - roll-over bar	171
12.2	Removing and installing roll-over bar	172
70 - Trim, insulation		180
1	Front door trims	180
1.1	Assembly overview - front door trim	180
1.2	Removing and installing trim for mid-range loudspeaker	182
1.3	Removing and installing treble loudspeaker trim	182
1.4	Removing and installing trim	182
1.5	Removing and installing front door trim	182
1.6	Removing and installing front door puller	185
1.7	Removing and installing button trim panel	185
1.8	Removing and installing interior door handle	186
2	Rear door trims	187
2.1	Assembly overview - rear door trim	187
2.2	Removing and installing trim	190
2.3	Removing and installing interior door handle	191
2.4	Removing and installing rear door trim	192
2.5	Removing and installing rear door puller	194



2.6	Removing and installing rear ashtray	195
3	Dash panel	197
3.1	Assembly overview - dash panel	197
3.2	Assembly overview - additional instruments	200
3.3	Removing and installing dash panel end cover	200
3.4	Removing and installing dash panel trim	201
3.5	Removing and installing dash panel insert trim	201
3.6	Removing and installing loudspeaker trim	202
3.7	Removing and installing light switch trim	203
3.8	Removing and installing radio/navigation system blanking plate	203
3.9	Removing and installing retaining frame for dash panel insert	203
3.10	Removing and installing dash panel	203
3.11	Removing and installing additional instruments	209
3.12	Removing and installing loudspeaker mounting	211
3.13	Removing and installing outer dash panel vents	211
3.14	Removing and installing centre vent	212
3.15	Removing and installing front centre defroster vent	214
3.16	Removing and installing side defroster vent	214
4	Central tube for dash panel	216
4.1	Assembly overview - central tube for dash panel	216
4.2	Removing and installing central tube for dash panel	219
5	Interior trims	231
5.1	Overview of fitting locations - interior trims	231
5.2	Assembly overview - step	241
5.3	Assembly overview - A-pillar trim	244
5.4	Assembly overview - B-pillar trim	246
5.5	Assembly overview - C-pillar trim	248
5.6	Assembly overview - side trim	250
5.7	Assembly overview - foot rest and floor covering	260
5.8	Removing and installing step	264
5.9	Removing and installing A-pillar trim	268
5.10	Removing and installing A-pillar gap cover	269
5.11	Removing and installing B-pillar trim	270
5.12	Removing and installing C-pillar trim	277
5.13	Removing and installing side trim	279
5.14	Removing and installing foot rest	282
5.15	Removing and installing floor covering	283
5.16	Removing and installing loudspeaker trim	288
5.17	Removing and installing cap	289
5.18	Removing and installing vents	292
5.19	Removing and installing partition panel trim	293
5.20	Removing and installing retaining strip	294
5.21	Removing and installing fastening rings	295
5.22	Removing and installing lock carrier trim	297
5.23	Removing and installing wheel housing lining	298
5.24	Removing and installing gap cover	299
6	Roof trims	301
6.1	Overview of fitting locations - roof trim	301
6.2	Assembly overview - roof end strip	302
6.3	Assembly overview - moulded headliner	303
6.4	Removing and installing roof end strip	306
6.5	Removing and installing moulded headlining	308
72	Seat frames	317
1	Overview of seat variants	317



1.1	Overview of fitting locations - seat variants	317
1.2	Mounting front seat on seat repair stand	321
2	Front seats	322
2.1	Overview of fitting locations - electrical and electronic components	322
2.2	Assembly overview - front seat	324
2.3	Assembly overview - front backrest	333
2.4	Assembly overview - seat pan	338
2.5	Assembly overview - seat depth adjustment	343
2.6	Removing and installing front seat	343
2.7	Connecting and disconnecting airbag adapter	350
2.8	Removing and installing handle for seat height adjustment	352
2.9	Removing and installing seat height adjustment unit	352
2.10	Removing and installing seat rake adjustment unit	353
2.11	Removing and installing lumbar support adjustment unit	354
2.12	Removing and installing front backrest	355
2.13	Removing and installing seat armrest	360
2.14	Removing and installing head restraint	361
2.15	Removing and installing head restraint guide	361
2.16	Removing and installing lumbar support adjustment switch E176 / E177	362
2.17	Removing and installing massage function button E670 / E671	362
2.18	Removing and installing lumbar support adjustment motor V125 / V126 / V129 / V130	363
2.19	Removing and installing massage control unit J740	364
2.20	Removing and installing cover	365
2.21	Removing and handle for installing backrest adjustment	366
2.22	Removing and installing seat trim	368
2.23	Removing and installing seat depth adjustment unit	377
3	Rear seats	379
3.1	Assembly overview - bench seat / individual seats	379
3.2	Assembly overview - head restraint and head restraint guide	382
3.3	Assembly overview - rear seat backrest	383
3.4	Assembly overview - seat frame	385
3.5	Assembly overview - centre armrest	387
3.6	Removing and installing bench seat / individual seats	387
3.7	Removing and installing head restraint	392
3.8	Removing and installing head restraint guide	393
3.9	Removing and installing rear seat backrest	394
3.10	Removing and installing seat trim, single seat passenger compartment	395
3.11	Removing and installing seat armrest, single seat passenger compartment	398
74	Seat - padding, covers	399
1	Front seat covers and padding	399
1.1	Assembly overview - cover and padding for seat pan	399
1.2	Assembly overview - cover and padding for backrest	403
1.3	Assembly overview - seat heating element	405
1.4	Assembly overview - backrest heater element	406
1.5	Removing and installing cover and padding for seat pan	406
1.6	Removing and installing backrest cover and backrest padding	411
1.7	Separating cover and padding on seat pan	416
1.8	Separating cover and padding on backrest	417
1.9	Separating centre cover and padding on backrest, fixed bench seat	420
1.10	Removing and installing head restraint cover and padding	421
1.11	Removing and installing seat heating element Z6 / Z8	422
1.12	Removing and installing backrest heating element Z7 / Z9	422
2	Rear seat covers and padding	424
2.1	Assembly overview - cover and padding	424



2.2	Removing and installing covers and padding	426
2.3	Separating cover and padding	431
2.4	Removing and installing cover and padding of head restraint	431



00 – Technical data

1 Safety information

(VRL012359; Edition 11.2018)

⇒ ["1.1 Safety measures when working on vehicles with a start/stop system", page 1](#)

⇒ ["1.2 Safety precautions when using testing and measuring instruments during a road test", page 2](#)

⇒ ["1.3 Safety measures when working with pyrotechnic components", page 2](#)

⇒ ["1.4 Safety instructions for airbag", page 3](#)

⇒ ["1.5 Deactivating the airbag", page 4](#)

⇒ ["1.6 Storage, transportation and disposal of airbag, belt tensioner and battery isolator units \(pyrotechnic components\)", page 4](#)

⇒ ["1.7 Additional safety regulations for side airbag", page 5](#)

⇒ ["1.8 Additional safety instructions for curtain airbag", page 5](#)

⇒ ["1.9 Safety regulations for crash sensors \(pressure sensors\) for front side airbags", page 6](#)

⇒ ["1.10 Renewing pyrotechnic, electrical and mechanical components of the restraint system after an accident", page 6](#)

⇒ ["1.11 Checking airbag securing parts after an accident", page 8](#)

⇒ ["1.12 Accident without airbag triggering", page 9](#)

⇒ ["1.13 Checking seat belts", page 9](#)

⇒ ["1.14 Check belt webbing", page 9](#)

⇒ ["1.15 Checking inertia reel \(locking mechanism\)", page 10](#)

⇒ ["1.16 Visually checking belt buckle", page 11](#)

⇒ ["1.17 Check operation of belt buckle", page 11](#)

⇒ ["1.18 Checking belt relays, and buckle tongues", page 11](#)

⇒ ["1.19 Checking securing parts and anchorage points after an accident", page 12](#)

⇒ ["1.20 Checking seat belt restraint function for holding additional child seats \(not for driver's seat belt\) - country-specific", page 12](#)

⇒ ["1.21 Safety precautions when working in the vicinity of high-voltage components", page 12](#)

⇒ ["1.22 Safety precautions when working on high-voltage system", page 13](#)

1.1 Safety measures when working on vehicles with a start/stop system

Risk of injury due to unexpected motor start

If the vehicle's start/stop system is activated, the engine can start unexpectedly. A message in the dash panel insert indicates whether the Start/Stop system is activated.

- Deactivate Start/Stop system by switching off the ignition.



1.2 Safety precautions when using testing and measuring instruments during a road test

Risk of injury through insecure testing and measuring instruments

When the front passenger airbag is triggered in an accident, insufficiently secured testing and measuring instruments become dangerous projectiles.

- Secure testing and measuring instruments on the rear seat.
- or
- Have a second person operate the testing and measuring instruments on the rear seat.

1.3 Safety measures when working with pyrotechnic components



CAUTION

Pyrotechnic components can trigger unintentionally.

Danger of injury.

- Discharge any static charge in your body by briefly touching the door striker plate.

The following are pyrotechnic components:

- ◆ Airbag units
- ◆ Belt tensioner
- ◆ Belt force limiters (depending on vehicle equipment level)
- ◆ Battery isolation elements (depending on vehicle equipment level)
- ◆ Triggering mechanisms for pedestrian protection system

General notes

- ◆ Testing, removing, installing and repair work may only be performed by qualified personnel.
- ◆ There are no replacement intervals for airbag units.
- ◆ Under no circumstances should checks be carried out with a test lamp, voltmeter or ohmmeter.
- ◆ Pyrotechnic components may only be checked in installed state and with vehicle diagnosis, testing and information systems approved by the manufacturer.
- ◆ When working on pyrotechnic components and airbag control unit - J234- , battery earth strap must be disconnected with ignition switched ON. Then, cover the negative terminal.
- ◆ A waiting time of 10 seconds is necessary after disconnecting the battery.
- ◆ Battery must be connected with ignition SWITCHED ON. When doing this, there should be no-one inside the vehicle.
- ◆ If the ignition is not switched on after reconnecting the battery, the ignition may only be switched on (key/button) from the driver's seat with the seat set in the rearmost position.



- ◆ Observe required procedures after connecting battery ⇒ Electrical system; Rep. gr. 27 ; Battery; Disconnecting and connecting battery .
- ◆ Before handling pyrotechnic components of the restraint system, for example before separating an electrical connection, the mechanic must electrostatically discharge himself/herself. Electrostatic discharge is achieved by touching earthed metallic parts, such as the door striker plate.
- ◆ Wash hands after coming into contact with triggered pyrotechnic components of restraint system.
- ◆ Pyrotechnic components must not be opened or repaired; always use new parts (risk of injury).
- ◆ Pyrotechnic components that have been dropped onto a hard surface or show signs of damage must not be installed in a vehicle.
- ◆ Pyrotechnic components must be installed immediately after they have been removed from their packaging.
- ◆ If work is interrupted, the pyrotechnic component must be stored back in its packaging.
- ◆ Leaving the pyrotechnic component unattended is prohibited.
- ◆ When connecting pyrotechnic components of the restraint system, only the person carrying out the work may be inside the vehicle.
- ◆ Pyrotechnic components must not come into contact with grease, cleaning solution or similar.
- ◆ The airbag unit must be renewed if any contamination such as oil, grease, paint or solvent penetrates the fabric.
- ◆ Pyrotechnic components must not be subjected to temperatures above 100°C, even for short periods.

Special instructions for belt tensioners

- ◆ Belt tensioner units must be handled with extreme caution during removal and installation. If handled incorrectly, there is a high risk of injury and damage in relation to the belt tensioner units.
- ◆ Belt tensioner units which are mechanically damaged (dents, fractures) must be renewed.
- ◆ Never point open end of belt tensioner at another person.
- ◆ When connecting the belt tensioner unit, all mechanical parts (including those of the 3-point seat belt) must be properly attached. If connection of the belt tensioner unit is hindered due to tight conditions, the belt strap must be rolled up completely before connecting. In this case there is no heightened risk of safety as long as the additional safety instructions are heeded. Essentially this is aimed at battery disconnection and electrostatic discharge of the fitter prior to connection of the belt tensioner unit.
- ◆ Depending on the crash intensity, it is possible that the belt tensioner was triggered but the belt force limiter did NOT ignite. These parts are to be treated as unignited components!

1.4 Safety instructions for airbag

Special instructions for airbags

- ◆ Removed airbag units must be stored with padded side facing up.



It is essential to carry out work in the following sequence when renewing airbag units:

- 1 - Remove old airbag unit and place to one side with padded side upwards.
- 2 - Remove new airbag unit from transport packaging and place to one side with padded side upwards.
- 3 - Immediately place old airbag unit in transport packaging.
- 4 - Install new airbag unit in vehicle.

1.5 Deactivating the airbag



Note

- ◆ *The prerequisites for deactivating one or more airbag units have been published in the "Technical Service Handbook".*
- ◆ *Airbags and belt tensioners are important elements of a vehicle's safety concept. These systems should therefore only be switched off in exceptional circumstances.*
- ◆ *For any deactivation, a DISS query - or SSD query for MAN TGE - should always be created.*
- ◆ *Any deactivation of the airbag units is subject to compulsory registration.*
- ◆ *Failure to comply means that the workshop responsible will bear full responsibility for subsequent damage and costs.*
- ◆ *Ensure when deactivating that the customer is made aware of the vehicle's status. The customer must also be informed that he will be unable to claim against the manufacturer for damages resulting from accidents in which injuries could have been prevented with the airbags. The customer bears sole responsibility for the conversion.*
- ◆ *Please observe the procedure in the workshop manual in all instances.*

In the "Technical Service Handbook", the "Procedure ID" or the "Technical solution number" for the deactivation of airbag units is: "2022327/2".

For MAN TGE, observe the relevant technical information in the "After Sales Portal".

Or search for "Deactivating airbag units" or "Deactivating airbag".

ElsaPro:

- Technical service handbook
- Service information
- Passenger protection, pedestrian protection
- Deactivation of airbag units/child seat, seat installation etc.

1.6 Storage, transportation and disposal of airbag, belt tensioner and battery isolator units (pyrotechnic components)

- ◆ Storage must comply with the relevant national legislation.
- ◆ Transportation is subject to national and international regulations that govern packaging, marking, labelling and freight documentation in detail.



- ◆ Untriggered pyrotechnic components must be disposed of correctly in the original packaging in accordance with national legislation. Contact the importer if in any doubt.
- ◆ Only completely ignited pyrotechnic components may be disposed of through the commercial waste system.
- ◆ This does not apply to belt tensioners which are operated by a Wankel type pump. Those must be disposed of like pyrotechnic components which were not triggered (e.g. airbags, seat belts, pyrotechnic battery isolators).
- ◆ Reason: On belt tensioners which are operated by a Wankel type pump it is not possible to verify, using workshop means, if all igniters have been triggered.

1.7 Additional safety regulations for side airbag

- ◆ Under no circumstances may seat covers be fitted which have not been specifically approved for use on seats with side airbags.
- ◆ The backrest padding must not be cut out in the area of the side airbag.
- ◆ When installing, make sure the seam for the side airbag is straight.
- ◆ All padding clips (metal and plastic clips) must be renewed.
- ◆ When installing, all padding clips must be fitted in the same positions as the original ones.
- ◆ If the cover is damaged (e.g. torn, burn holes) in the area of the side airbag, the cover must always be renewed for reasons of safety as the side airbag will otherwise not deploy properly.
- ◆ Repairs may not be carried out on the backrest cover in the area of the side airbag (because of the special thread and precisely defined seam).
- ◆ Renew the backrest padding after the side airbags have been triggered.
- ◆ All damaged components must be renewed after an accident. The original airbag unit can still be used if no signs of damage are found.
- ◆ If side airbag units are renewed, the sticker for the airbag number must be removed from the new side airbag unit and stuck over the old sticker on the seat pan.
- ◆ Never poke upholstery needles or any other sharp objects through the seat cover fabric in the vicinity of the airbag, seat occupied sensor, front passenger side - G128- and the seat occupied sensor mat.

1.8 Additional safety instructions for curtain airbag

- ◆ Inspect trims for damage prior to installing them.
- ◆ Always renew damaged pillar trims; never repair.
- ◆ Ensure proper seating of trims when installing them.
- ◆ When performing repair work behind the curtain airbag, always remove the entire module.
- ◆ To prevent any potential damage during removal and installation, curtain airbags must be handled with extreme caution.



- ◆ Place removed curtain airbag modules in packaging or on a clean, flat surface on a cover.
- ◆ After body repairs in vicinity of curtain airbag, check body for weld spray droplets, deformations and areas of chafing (compare with opposite side if necessary).
- ◆ Until the gas generator is screwed in place, you must always hold it firmly by hand when handling (transportation, removal and installation etc.).
- ◆ Never twist, kink, throw, shake, pull, hang, squeeze, press, pinch or clamp any curtain airbag modules.
- ◆ Folding is acceptable as long as no damage is caused (in particular to the protective sleeve).

1.9 Safety regulations for crash sensors (pressure sensors) for front side airbags

The side airbag crash sensors respond to changes in pressure and must therefore be treated with particular caution. Observe the following:

- ◆ The correct installation position is vitally important: install only in the specified location in the door.
- ◆ Protect the crash sensor against mechanical shocks and impacts: any crash sensors which have been dropped must no longer be used. Remove the crash sensor when carrying out bodywork on the door.
- ◆ The crash sensor is matched to the volume of air inside the door: deformation of the door, resulting in a reduction in the air space in the door, impairs the function of the crash sensor.
- ◆ Avoid any major soiling of the crash sensor: do not use compressed air in the vicinity of the crash sensor. Protect the crash sensor against swarf from filing or drilling (example, during retrofitting of door speakers). Do not use cavity sealants or spray oil in the vicinity of the crash sensor.
- ◆ Protect against heat/cold: avoid heat effects, for example during spray painting or other body shop operations. The crash sensors must not be exposed to temperatures below -40°C (for example in aircraft holds without air conditioning).
- ◆ The crash sensor must be protected against humidity during storage and installation.

For the crash sensor to function properly, it is vital to ensure that the door forms an effective seal after being fitted. Observe the following:

- ◆ All components (e.g. cover, speakers, door trim) must be correctly fitted.
- ◆ The door trim retaining clips seal the system. If necessary, renew retaining clips.

1.10 Renewing pyrotechnic, electrical and mechanical components of the restraint system after an accident

Special tools and workshop equipment required

- ◆ Vehicle diagnostic tester



Note

- ◆ *The airbag control unit can be used with airbag generation 8.* »not 8.R« for up to 2 side and/or belt tensioner triggering actions.*
- ◆ *The airbag control unit can be used for up to 2 side airbag/driver airbag/front passenger airbag and/or belt tensioner deployments with the airbag generations 9.*, 10.* and 8.R.*
- ◆ *After the third deployment, the error message "Control unit faulty" is displayed.*

The airbag control unit must be renewed:

- ◆ In the event of a driver/front passenger airbag deployment "however, not applicable for airbag generation 9.*, 10.* and 8.R" ⇒ [page 7](#)
- ◆ After side airbag, driver/front passenger airbag or belt tensioner deployments
- ◆ In the event of damage to the housing
- ◆ In the event of deformation to the tunnel within 200 mm around the control unit

The following parts must always be replaced:

- ◆ All triggered airbag units.
- ◆ Battery isolation igniter - N253-

Additionally, in the event of the front passenger airbag being triggered:

- ◆ Dash panel
- ◆ Supports of front passenger airbag unit which have been bent out of shape (must not be bent back into shape)
- ◆ All sensors for front airbag at front end
- ◆ Remaining sensors for lateral acceleration in event of deformation of attachment points in vicinity of sensors

Additionally, in the event of the driver airbag being triggered:

- ◆ Return spring with slip ring
- ◆ All sensors for front airbag at front end
- ◆ Remaining sensors for lateral acceleration in event of deformation of attachment points in vicinity of sensors

Additionally, in the event of the side airbag being triggered:

- ◆ Pressure sensors on the triggered side
- ◆ Lateral acceleration sensors on the side affected
- ◆ Seat cover
- ◆ Padding
- ◆ In case of folding backrest: seat bolster (if fitted)
- ◆ Remaining sensors for lateral acceleration in event of deformation of attachment points in vicinity of sensors

Additionally:


- ◆ All belt inertia reels with triggered belt tensioners
- ◆ All belt inertia reels with triggered belt tensioners

- ◆ Belt buckles for all belt inertia reels with triggered belt tensioners and seat belt engaged
- ◆ Belt height adjuster (mechanical and electrical) for all belt inertia reels with triggered belt tensioners and seat belt engaged
- If you suspect that belt tensioners or belt force limiters have been triggered, connect a vehicle diagnostic tester .
- In »Guided Fault Finding« check whether there is a crash entry logged for the airbag control unit.
- At the same time check whether the “Resistance too high” fault is also logged for belt tensioners and/or belt force limiters. Triggered belt tensioners and/or belt force limiters have to meet both conditions. “Prerequisite: The airbag control unit has not yet been renewed”.



Note

- ◆ *The “Resistance too high” fault can also be logged in the event of a cable break. Under normal circumstances, no crash entry is then logged.*
- ◆ *Depending on the crash intensity, it is possible that the belt tensioner was triggered but »NOT« the belt force limiter. Observe notes on disposal of pyrotechnic components
⇒ [page 4](#) .*
- ◆ *In addition, note the section “Inspecting seat belts”
⇒ [page 9](#) .*
- ◆ *Deployed belt force limiters can be identified by the following features:*
- ◆ *The pin -1- and lug -3- have popped out of the belt force limiter housing on the belt inertia reel.*
- ◆ *The strap -2- is no longer vertical but is pointing diagonally outwards.*
- If parts of the belt system are removed because of an accident, the belt system bolts must be renewed.
- In addition, the following must also be replaced if necessary (visual check): All damaged components.
- After renewing the airbag units or the control unit, affix stickers (only tear-off strips) to the registration card and return the registration card to the responsible Sales Centre or to the Importer for registration.

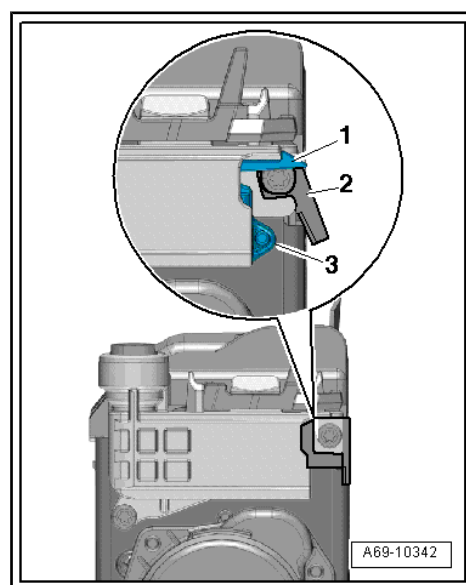

1.11 Checking airbag securing parts after an accident

All damaged securing elements must be replaced. It is not permitted to return the components to their original shape or »make them fit«.

The following components must be checked after the relevant airbag has been triggered.

In the event of the front passenger airbag being triggered:

- ◆ Central tube for dash panel: it must be possible to install the supports for the front passenger airbag and front passenger airbag unit tension-free. Otherwise the central tube must also be renewed.
- ◆ Check the glove compartment for damage. Renew it if damaged.



In the event of the driver airbag being triggered:

- ◆ Steering wheel: remove the steering wheel and place on a flat surface together with the steering collar. The full face of the steering collar must be in contact with the flat surface. Otherwise the steering wheel must be renewed.
- ◆ Check steering wheel for smoke residues. If any smoke residues are found, the steering wheel must be renewed.

1.12 Accident without airbag triggering

- ◆ If front passenger airbag warning lamp - K145- does not indicate a fault, there is no requirement to renew pyrotechnic components. The seat belts should be checked separately.

1.13 Checking seat belts



Note

The seat belt system must be inspected systematically after every accident! If damage is determined at any of the points to be checked, customer must be informed regarding necessity of changing belts.

Points to check

- ◆ Check belt webbing ⇒ [page 9](#) .
- ◆ Check inertia reel (locking mechanism) ⇒ [page 10](#) .
- ◆ Visually check belt buckle ⇒ [page 11](#) .
- ◆ Check operation of belt buckle ⇒ [page 11](#) .
- ◆ Check belt guide fittings and latch plates ⇒ [page 11](#) .
- ◆ Check securing parts and anchorage points ⇒ [page 12](#) .
- ◆ Checking seat belt restraint function for holding additional child seats (not for driver seat belt) - country-specific ⇒ [page 12](#) .






Note

If the customer refuses to have a damaged seat belt renewed, an appropriate comment should be made in the service notes.


1.14 Check belt webbing

Procedure

- Pull belt completely out of inertia reel or lap belt adjustment plate.
- Check belt webbing for soiling, and if necessary wash with a mild soapy solution ⇒ Owner's Manual .

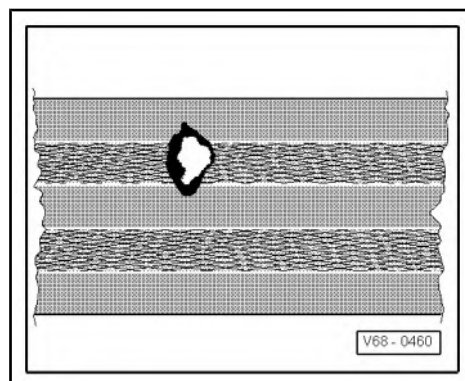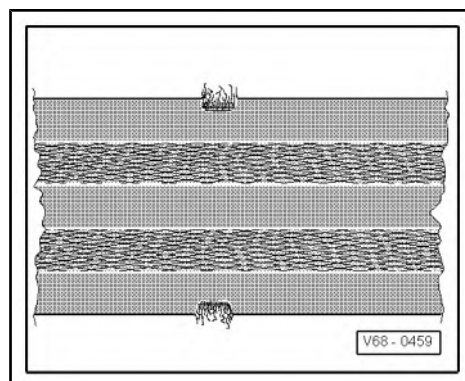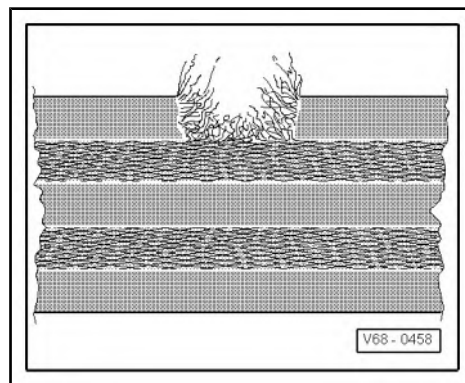

- If either of the types of damage illustrated below (1 and 2) are determined on accident vehicle, renew seat belt complete with belt buckle.
- If - as described under points 1, 2, 3 and/or 4 - damage is determined on a vehicle which has not been involved in an accident, it is sufficient to renew the damaged seat belt only.
- 1 - Belt webbing cut, torn or chafed.
- 2 - Torn webbing loops on belt edge.
- 3 - Burns caused by cigarettes or similar.
- 4 - One edge of belt deformed or wavy.

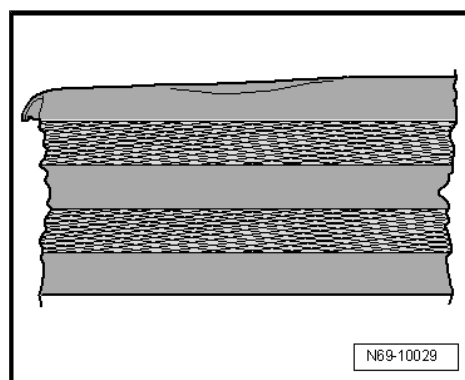

1.15 Checking inertia reel (locking mechanism)

The inertia reel has two locking functions.

- ◆ The first locking function is triggered by the belt being jerked out of the reel (belt extension acceleration).



Test 1

- Pull belt out of inertia reel with firm jerk.
- Will not lock - renew seat belt complete with buckle.
- If difficulties are experienced when belt is extended or retracted, first check whether position of inertia reel has been altered.
- The second locking function is triggered by a change in vehicle speed (vehicle-dependent locking function).

Test 2

- For safety reasons, the road test should be carried out on a traffic-free stretch to ensure that other road users are not endangered.
- Put on seat belt.
- Accelerate vehicle to 20 km/h and then carry out emergency braking with foot brake.
- If seat belt is not locked by locking mechanism during braking procedure, renew seat belt complete with buckle.

1.16 Visually checking belt buckle

- Inspect belt buckle for cracks and chips.
- If damage is determined, renew seat belt complete with belt buckle.

1.17 Check operation of belt buckle

Checking belt buckle

- Push buckle tongue into belt buckle until it engages audibly. Check whether locking mechanism is properly engaged by pulling firmly on belt webbing.
- If buckle tongue fails even once to engage properly in belt buckle during at least 5 tests, renew seat belt complete with belt buckle.

Checking release mechanism

- Release seat belt by pressing button on belt buckle with finger pressure. When belt is slack, latch plate must spring out of belt buckle on its own.
- Carry out test at least 5 times. If buckle tongue fails even once to spring out of buckle, renew seat belt complete with belt buckle.

Under no circumstances whatsoever may lubricant be used to eliminate noise or stiffness in belt buckle buttons.

1.18 Checking belt relays, and buckle tongues

Plastic-coated fittings show fine, parallel scoring after stress on belt system (when belt was fastened during accident). (On the other hand, wear caused by frequent belt use can be recognized by smooth wear, free of lines.)

- Inspect for deformation, fracturing and cracks in plastic.
- If scoring and/or damage is determined, renew seat belt complete with belt latch.



1.19 Checking securing parts and anchorage points after an accident

- ◆ Latch plate deformed (stretched)
- ◆ Height adjustment does not function.
- ◆ Anchorage points (seat, pillars, underbody) distorted or thread damaged
- If damage is determined on these parts, renew seat belt complete with belt buckle.
- If parts of the belt system are removed because of an accident, the belt system securing bolts must be renewed.
- Renew anchorage points.



Note

In the case of damage resulting not from an accident but, for example, from wear, only the part which is actually damaged need be renewed.

1.20 Checking seat belt restraint function for holding additional child seats (not for driver's seat belt) - country-specific

For the functional check, all seat belt components including the side trim must be installed.

Activating the restraint function

- ◆ Pull out seat belt webbing completely to stop.

Correct function

- ◆ The belt must retract with an audible noise.
- ◆ If the belt retraction is stopped, it should not be possible to pull the belt out again until the function is deactivated.

Deactivating

- ◆ Allow the belt to retract as far as the last 100 mm (approx.).
- ◆ The restraint function must switch off at the latest when 100 mm of the seat belt webbing are still pulled out. The belt then works normally again.

If the seat belt restraint function for holding additional child seats does not work properly, the seat belt must be renewed.

1.21 Safety precautions when working in the vicinity of high-voltage components

Danger to life from high voltage

The high-voltage system is under high voltage. Damage to high-voltage components can result in severe or fatal injury from electric shock.

- Perform visual check of high-voltage components and high-voltage cables.
- Never use cutting or forming tools, or any other sharp-edged tools.
- Never use heat sources such as welding, brazing, soldering, hot air or thermal bonding equipment.



1.22 Safety precautions when working on high-voltage system

Danger to life from high voltage

The high-voltage system is under high voltage. Risk of severe or fatal injury due to electric shock.

- People having electronic medical devices for life support or health maintenance in or on their bodies are prohibited from working on the high-voltage system. Such medical devices include internal analgesic pumps, implanted defibrillators, pace-makers, insulin pumps and hearing aids.
- The high-voltage system must be de-energised by a suitably qualified technician.

Risk of injury from motor starting unexpectedly

On electric and hybrid vehicles, it can easily be missed that the vehicle is in "ready" mode. There is a risk of parts of the body becoming trapped or drawn in.

- Switch off ignition.
- Always store the ignition key outside the vehicle.

Risk of damage to high-voltage cables

Improper handling of high-voltage cables or high-voltage connectors may result in damage to their insulation.

- Never support body weight on high-voltage cables or high-voltage connectors.
- Never support any tools on high-voltage cables or high-voltage connectors.
- Never kink or severely bend high-voltage cables.
- Always observe the coding when connecting high-voltage connectors.

Risk of injury from activated stationary air conditioning

On electric and hybrid vehicles with active stationary air conditioning, the stationary air conditioning could switch on unintentionally. Risk of limbs becoming trapped or drawn in by the radiator fan starting automatically.

- Deactivate the stationary air conditioning.



2 Hazard classification for the high-voltage system

DANGER

The vehicle's high-voltage system and the high-voltage battery are dangerous and can cause burns or other injuries and even lead to a fatal electric shock.

- Any work on the high-voltage system, or on systems which could be indirectly affected by it, must only be carried out by properly trained and qualified expert personnel.
- In the event of queries or uncertainties regarding the terms "high-voltage technician" or "high-voltage expert", or those concerning the high-voltage system, the responsible importer must be contacted prior to the start of any work.
- Any repair work must be performed in accordance with applicable laws and regulations, the state-of-the-art technology, any relevant accident prevention regulations (in Germany, including but not limited to the BGI/GUV-I 8686 – Training for work on vehicles with high voltage systems), as well as this workshop manual.

Before work on the high-voltage system is started, a high-voltage technician must de-energise the high-voltage system ⇒ Electric drive motor (270, LS2); Rep. gr. 93 ; De-energising high-voltage system .

The types of work for which the high-voltage system has to be de-energised are indicated in the list entitled "Work on the high-voltage system" ⇒ [page 14](#) .

Work for which the high-voltage system has to be de-energised:

- ◆ Only the HVT ⇒ [page 15](#) is authorised to de-energise the high-voltage system in a certified manner.
- ◆ All work on an electric drive vehicle must be carried out only by those who are at least qualified as electrically instructed persons (EIP) ⇒ [page 15](#) .
- ◆ Regardless of the work to be performed, visually inspect high-voltage components in the work area.
- ◆ High-voltage cables must not be extensively bent or kinked.
- ◆ In the event of conspicuous findings or uncertainties, the high-voltage technician (HVT) or the high-voltage expert (HVE) ⇒ [page 15](#) must be consulted.
- ◆ Any work involving metal-removing, deforming and sharp-edged tools or heat sources such as welding, soldering, hot air, thermal bonding and infrared drying in the vicinity of high-voltage components and cables is prohibited. In this case, the high-voltage system must be de-energised and the respective component removed or sufficiently protected.
- ◆ All listed work refers to the removal and installation or the renewal of the individual components.
- ◆ For safety reasons, no further work should be performed in or on the vehicle during the charging process.
- ◆ For regular maintenance work, the high-voltage system does not have to be de-energised.



Explanation of qualifications

Working on high-voltage system

Qualification VW	Qualification MAN	Qualification DGUV-I 200-005	Scenario
EIP (electrically instructed person)	Person made aware of high-voltage issues in connection with MAN Truck & Bus AG	Chapter 2	Induction training for non-electrical work (< 60 VDC)
HVT (high-voltage technician)	Qualified vehicle electrician of the MAN Truck & Bus AG (for vehicles not being intrinsically safe in terms of high voltage)	Chapter 3.1 b	Work on inherently safe HV production vehicles ♦ Vehicles are de-energised exclusively with certification. ♦ Complete contact protection in place.
HVE level 1 (high-voltage expert)	Qualified vehicle electrician with authorisation to work in energised vehicles of MAN Truck & Bus AG (for vehicles not being intrinsically safe in terms of high voltage)	Chapter 3.2 b	Work on not inherently safe HV production vehicles ♦ Vehicles are also de-energised without certification or there is no complete contact protection in place, e.g. in the event of an accident.
HVE level 2 (high-voltage expert)		Chapter 3.3	Work on live accumulators ♦ Working on parts supplied with voltage, inevitably with no contact protection, for fault finding, component replacement, etc.

Observe the minimum qualification for the following work:	Minimum qualification:
De-energise high-voltage system	HVT ➔ page 15

Work on power unit

When working on the following components:	Before work is started, high-voltage system de-energised by HVT?			Minimum qualification: ➔ page 15
	yes (diagnostic and manual power disconnection)	yes (only diagnostic power disconnection)	no	
Three-phase current drive - VX54-	X			EIP
Electric drive motor - V141-	X			EIP
Drive motor temperature sender/rotor position sender -G712- / -G713-	X			EIP



Work on power and control electronics for electric drive

When working on the following components:	Before work is started, high-voltage system de-energised by HVT?			Minimum qualification: ➔ page 15
	yes (diagnostic and manual power disconnection)	yes (only diagnostic power disconnection)	no	
Power and control electronics for electric drive - JX1- with ♦ Electric drive control unit - J841- ♦ Intermediate circuit capacitor 1 - C25- ♦ Voltage converter - A19- ♦ DC/AC converter for drive motor - A37-	X			EIP
Air conditioner compressor fuse - S355-	X			EIP

Working on high-voltage system

When working on the following components:	Before work is started, high-voltage system de-energised by HVT?			Minimum qualification: ➔ page 15
	yes (diagnostic and manual power disconnection)	yes (only diagnostic power disconnection)	no	
Potential equalisation lines (earth) with connection to HV components	X			HVT
Measure insulation resistance		X		HVT
TW – maintenance connector for high-voltage system (service connector, service disconnection)		X		HVT
PX – high-voltage cables (orange) in vehicle	X			HVT

Work on heating and air conditioning system

When working on the following components:	Before work is started, high-voltage system de-energised by HVT?			Minimum qualification: ➔ page 15
	yes (diagnostic and manual power disconnection)	yes (only diagnostic power disconnection)	no	
Electrical air conditioner compressor - V470-		X		EIP
High-voltage heater (PTC) - Z115-		X		EIP
Work on heating and air conditioning system in vehicle interior			X	EIP
Refrigerant lines in the vehicle periphery (work which is not directly on the AC compressor and can be carried out without opening the refrigerant circuit, e.g. loosening and securing refrigerant lines)			X	EIP



When working on the following components:	Before work is started, high-voltage system de-energised by HVT?			Minimum qualification: ➤ page 15
	yes (diagnostic and manual power disconnection)	yes (only diagnostic power disconnection)	no	
Air conditioning performance test (for checking the pressure levels in the refrigerant circuit by means of air conditioning service equipment)			X	EIP
Refrigerant lines directly on electrical air conditioner compressor - V470-		X		EIP
Extract, evacuate or fill refrigerant			X	EIP

Work on charging connection

When working on the following components:	Before work is started, high-voltage system de-energised by HVT?			Minimum qualification: ➤ page 15
	yes (diagnostic and manual power disconnection)	yes (only diagnostic power disconnection)	no	
High-voltage battery charging socket 1 - UX4- with ◆ Temperature sender for charging socket 1 - G853- ◆ LED module for charging socket 1 - L263- ◆ Actuator for locking		X		EIP
Immediate charge button - E766-			X	EIP
Manual release mechanism for charging connector		X		EIP
Charge high-voltage battery in workshop area			X	EIP

Work on charging unit

When working on the following components:	Before work is started, high-voltage system de-energised by HVT?			Minimum qualification: ➤ page 15
	yes (diagnostic and manual power disconnection)	yes (only diagnostic power disconnection)	no	
Charging unit 1 for high-voltage battery - AX4- with control unit for high-voltage battery charging unit - J1050-		X		EIP



Work on high-voltage battery

When working on the following components:	Before work is started, high-voltage system de-energised by HVT?			Minimum qualification: ➔ page 15
	yes (diagnostic and manual power disconnection)	yes (only diagnostic power disconnection)	no	
Remove and install underbody cladding			X	EIP
Remove and install high-voltage battery 1 - AX2-		X		HVT
Disconnect high-voltage network connection		X		HVT
Disconnect low-voltage connection of high-voltage battery			X	EIP
Battery regulation control unit - J840- (service flap)		X		HVT
Module monitor control unit for batteries - J497- (battery removed)				HVE
Switching unit for high-voltage battery - SX6- (battery removed)				HVE
Open high-voltage battery 1 - AX2- (battery removed)				HVE
Bond high-voltage battery 1 - AX2- (battery removed)				HVE
Battery module 1 - J991- and other battery modules (battery removed)				HVE

Work on accident vehicles

When working on the following components:	Before work is started, high-voltage system de-energised by HVT?			Minimum qualification: ➔ page 15
	yes (diagnostic and manual power disconnection)	yes (only diagnostic power disconnection)	no	
Preliminary evaluation of degree of danger				HVT
Body work (with straightening jig)	X			EIP
Paint vehicle – observe instructions in paintwork manual			X	EIP

Work in vicinity of high-voltage components

When working on the following components or for following work:	Before work is started, high-voltage system de-energised by HVT?			Minimum qualification: ➔ page 15
	yes (diagnostic and manual power disconnection)	yes (only diagnostic power disconnection)	no	
Body work (assembly work as well as glass and dent repairs)			X	EIP
Gearbox with electric drive motor	X			EIP
Steering rack		X		EIP
Subframe, front		X		EIP



When working on the following components or for following work:	Before work is started, high-voltage system de-energised by HVT?			Minimum qualification: ➤ page 15
	yes (diagnostic and manual power disconnection)	yes (only diagnostic power disconnection)	no	
Front brakes			X	EIP
Rear brakes			X	EIP
Brake servo			X	EIP
Brake pressure accumulator for energy recovery of brake system	X			EIP
Rear axle and running gear			X	EIP
Underbody cladding			X	EIP
When welding, cover high-voltage components and visually inspect afterwards	X			EIP
Work involving metal-removing, deforming and sharp-edged tools or heat sources such as welding, soldering, hot air, thermal bonding and infrared drying in the vicinity of high-voltage components and cables	X			EIP
Work for which the motor is detached (e.g. motor mounting)		X		EIP
Control units and electric components of 12-V system (except airbag)			X	EIP
Battery - A-			X	EIP
Front left headlight - MX1-			X	EIP
Front right headlight - MX2-			X	EIP
Change bulb in headlight			X	EIP

General work

When working on the following components:	De-energise high-voltage system before work is started?			Minimum qualification: ➤ page 15
	yes (diagnostic and manual power disconnection)	yes (only diagnostic power disconnection)	no	
Drain and fill fluids (coolant and oils)			X	EIP
Coolant circuit and coolant expansion tank			X	EIP
Change tyres			X	EIP
Miscellaneous work on 12-V system (excluding airbag)			X	EIP
Airbag		X		EIP
Work on earth points of 12-V system (without potential equalisation lines)			X	EIP
Tail lights			X	EIP
Renew/repair windows			X	EIP
Repairs in vehicle interior			X	EIP
Repairs in roof area			X	EIP
Repairs on rear lid			X	EIP
Repairs on bumpers			X	EIP



When working on the following components:	De-energise high-voltage system before work is started?			Minimum qualification: ➔ page 15
	yes (diagnostic and manual power disconnection)	yes (only diagnostic power disconnection)	no	
Move lock carrier to service position			X	EIP
Removing and installing lock carrier			X	EIP
Repair work on lock carrier			X	EIP
Disconnect high-voltage battery 1 - AX2- from retaining frame		X		HVT
Remove and install deformation elements			X	EIP



3 Repair notes

⇒ [“3.1 General repair instructions”, page 21](#)

⇒ [“3.2 Contact corrosion”, page 21](#)

⇒ [“3.3 Pipe/wire routing and attachment”, page 21](#)

⇒ [“3.4 Explanatory notes on production control numbers \(PR no.\)”, page 22](#)

3.1 General repair instructions

- ◆ Repairing wiring harnesses and connectors ⇒ Electrical system, General information; Rep. gr. 97 ; Wiring harness and connector repair .
- ◆ Releasing and dismantling connector housings ⇒ Electrical system, General information; Rep. gr. 97 ; Wiring harness and connector repair; Releasing and dismantling contact housings .
- ◆ Cleaning contact surfaces ⇒ Electrical system, General information; Rep. gr. 97 ; Repair case - VAS 6410- .
- ◆ Vehicle diagnostic, testing and information systems ⇒ Electrical system, General information; Rep. gr. 97 ; Vehicle diagnostic, testing and information systems .

3.2 Contact corrosion

Contact corrosion can occur if unsuitable fastening elements (screws, bolts, nuts, washers) are used.

For this reason, only connecting elements with a special surface coating have been fitted.

In addition, rubber, plastic and adhesives are made of non-conductive materials.

If there is any doubt about the reusability of parts, renew them ⇒ Electronic parts catalogue (ETKA) or ⇒ webMANTIS for MAN TGE.

Observe the following:

- ◆ It is recommended to use genuine parts which are tested and compatible with aluminium.
- ◆ The use of approved parts is recommended.
- ◆ Damage resulting from contact corrosion is not covered by the warranty.

3.3 Pipe/wire routing and attachment

Risk of damage to lines

Lines may become damaged by moving or hot components.

- Route lines in their original positions.
- Make sure there is sufficient clearance between the lines and moving or hot components.



Note

- ◆ *If electrical wires are disconnected or removed and installed, it is useful to make corresponding drawings or photos. This guarantees that everything is re-installed in its original position.*
- ◆ *Secure the electrical connectors which are routed through installation openings using a wire or cord so that the electrical connector can be guided through the installation opening during installation. Otherwise, the electrical connector may be out of reach after installing.*
- ◆ *When using release tool - T10236- or removal lever - 80 - 200- the wires can be removed more easily.*
- ◆ *Note wiring harnesses when removing components. Excessive tensile stress may cause damage.*
- ◆ *Before installing, all securing elements and attachments must be checked for signs of wear and renewed as necessary.*
- ◆ *Route all of the various lines and electrical wiring in such a way that they are restored to their original positions and the wiring harnesses are not crushed.*
- ◆ *Fit all cable ties and other fasteners for wiring harness in the same places from which they were detached or cut.*
- ◆ *Ensure that the electrical connectors are pushed fully onto stop and engage audibly.*

3.4 Explanatory notes on production control numbers (PR no.)



Note

- ◆ *Various attachments are installed depending on the equipment. These are identified by production control numbers.*
- ◆ *Production control numbers are relevant for vehicle-specific allocation.*
- ◆ *The appropriate production control numbers on vehicle data sticker or in "Vehicle-specific notes" indicate which attachments are fitted to a vehicle ⇒ Vehicle-specific notes; Vehicle data; PR numbers .*

PR number table

PR number	Definition
K4A	Panel van
K4B	Kombi
K4F	Drop-side vehicle, chassis with cab (single cab)
K4G	Drop-side vehicle, chassis with double cab



68 – Interior equipment

1 Compartments/covers

⇒ [“1.1 Overview of fitting locations - storage compartments/covers”, page 23](#)

⇒ [“1.2 Assembly overview - driver side dash panel cover”, page 25](#)

⇒ [“1.3 Assembly overview - front passenger side dash panel cover”, page 26](#)

⇒ [“1.4 Assembly overview - steering column trim”, page 27](#)

⇒ [“1.5 Assembly overview - glove compartment”, page 28](#)

⇒ [“1.6 Assembly overview - storage compartment in roof headliner”, page 30](#)

⇒ [“1.7 Assembly overview - handbrake lever boot”, page 32](#)

⇒ [“1.8 Removing and installing dash panel cover on driver side”, page 32](#)

⇒ [“1.9 Removing and installing dash panel insert trim”, page 33](#)

⇒ [“1.10 Removing and installing dash panel cover on front passenger side”, page 34](#)

⇒ [“1.11 Removing and installing upper steering column trim”, page 34](#)

⇒ [“1.12 Removing and installing lower steering column trim”, page 35](#)

⇒ [“1.13 Removing and installing glove compartment opener”, page 36](#)

⇒ [“1.14 Removing and installing glove compartment”, page 37](#)

⇒ [“1.15 Removing and installing glove compartment cover”, page 38](#)

⇒ [“1.16 Removing and installing damper element for glove compartment lid”, page 38](#)

⇒ [“1.17 Service position for glove compartment lid”, page 38](#)

⇒ [“1.18 Removing and installing headliner storage compartment”, page 40](#)

⇒ [“1.19 Removing and installing handbrake lever boot”, page 49](#)

⇒ [“1.20 Removing and installing cover for central electrics”, page 50](#)

⇒ [“1.21 Removing and installing dash panel compartment”, page 50](#)

⇒ [“1.22 Removing and installing information electronics mounting frame”, page 52](#)

⇒ [“1.23 Removing and installing footwell cover”, page 53](#)

⇒ [“1.24 Removing and installing cover of windscreen heater for lane departure warning Z67 ”, page 53](#)

1.1 Overview of fitting locations - storage compartments/covers



1 - Dash panel

- ☐ Assembly overview
⇒ [page 197](#)
- ☐ Removing and installing
⇒ [page 203](#)

2 - Front passenger side dash panel compartment

- ☐ Assembly overview
⇒ [page 26](#)
- ☐ Removing and installing
⇒ [page 50](#)

3 - Front passenger side dash panel cover

- ☐ Assembly overview
⇒ [page 26](#)
- ☐ Removing and installing
⇒ [page 34](#)

4 - Glove compartment

- ☐ Assembly overview
⇒ [page 28](#)
- ☐ Removing and installing
⇒ [page 37](#)

5 - Storage compartment in centre console

- ☐ Front
- ☐ Assembly overview
⇒ [page 92](#)
- ☐ Removing and installing
⇒ [page 94](#)

6 - Steering column trim

- ☐ Bottom
- ☐ Assembly overview
⇒ [page 27](#)
- ☐ Removing and installing ⇒ [page 35](#)

7 - Driver side dash panel cover

- ☐ Assembly overview ⇒ [page 25](#)
- ☐ Removing and installing ⇒ [page 32](#)

8 - Cover for central electrics

- ☐ Assembly overview ⇒ [page 25](#)
- ☐ Removing and installing ⇒ [page 50](#)

9 - Dash panel end cover


- ☐ Left
- ☐ Assembly overview ⇒ [page 25](#)
- ☐ Right
- ☐ Assembly overview ⇒ [page 26](#)
- ☐ Removing and installing ⇒ [page 200](#)

10 - Driver side dash panel compartment

- ☐ Assembly overview ⇒ [page 25](#)
- ☐ Removing and installing ⇒ [page 50](#)

11 - Steering column trim

- ☐ Top
- ☐ Assembly overview ⇒ [page 27](#)

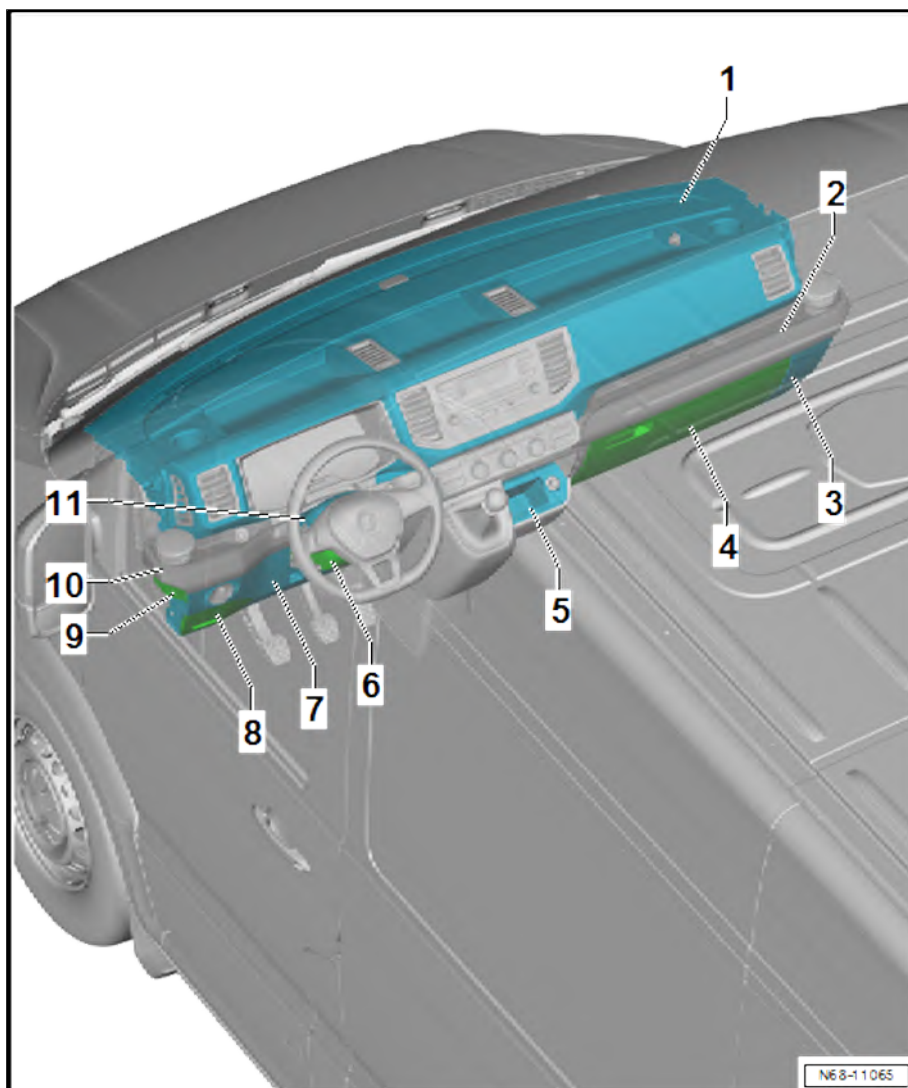



- ❑ Removing and installing ➔ [page 34](#)

1.2 Assembly overview - driver side dash panel cover

1 - Ashtray insert

2 - 12 V socket - U5-

- ❑ Removing and installing
➔ Electrical system;
General information;
Rep. gr. 96 ; 12-V socket ;
Removing and installing 12-V socket

3 - Driver side dash panel compartment

- ❑ Removing and installing
➔ [page 50](#)

4 - Bolts

- ❑ Qty. 3
- ❑ 1.5 Nm

5 - Headlight range control regulator - E102-

- ❑ Removing and installing
➔ Electrical system;
Rep. gr. 96 ; Controls;
Removing and installing headlight range control regulator - E102-

6 - Driver side dash panel cover

- ❑ Removing and installing
➔ [page 32](#)

7 - Bolts

- ❑ Qty. 4
- ❑ 1.5 Nm

8 - Diagnostic connector holder

- ❑ Removing and installing
➔ [page 32](#)

9 - Driver side entry light - W92-

- ❑ Removing and installing ➔ Electrical system; Rep. gr. 96 ; Lights; Removing and installing entry light - W92- / -W93-

10 - Cover for central electrics


- ❑ Removing and installing ➔ [page 50](#)

11 - Rotary light switch - EX1-

- ❑ Removing and installing ➔ Electrical system; Rep. gr. 96 ; Controls; Removing and installing rotary light switch - EX1-

12 - Dash panel end cover

- ❑ Removing and installing ➔ [page 200](#)

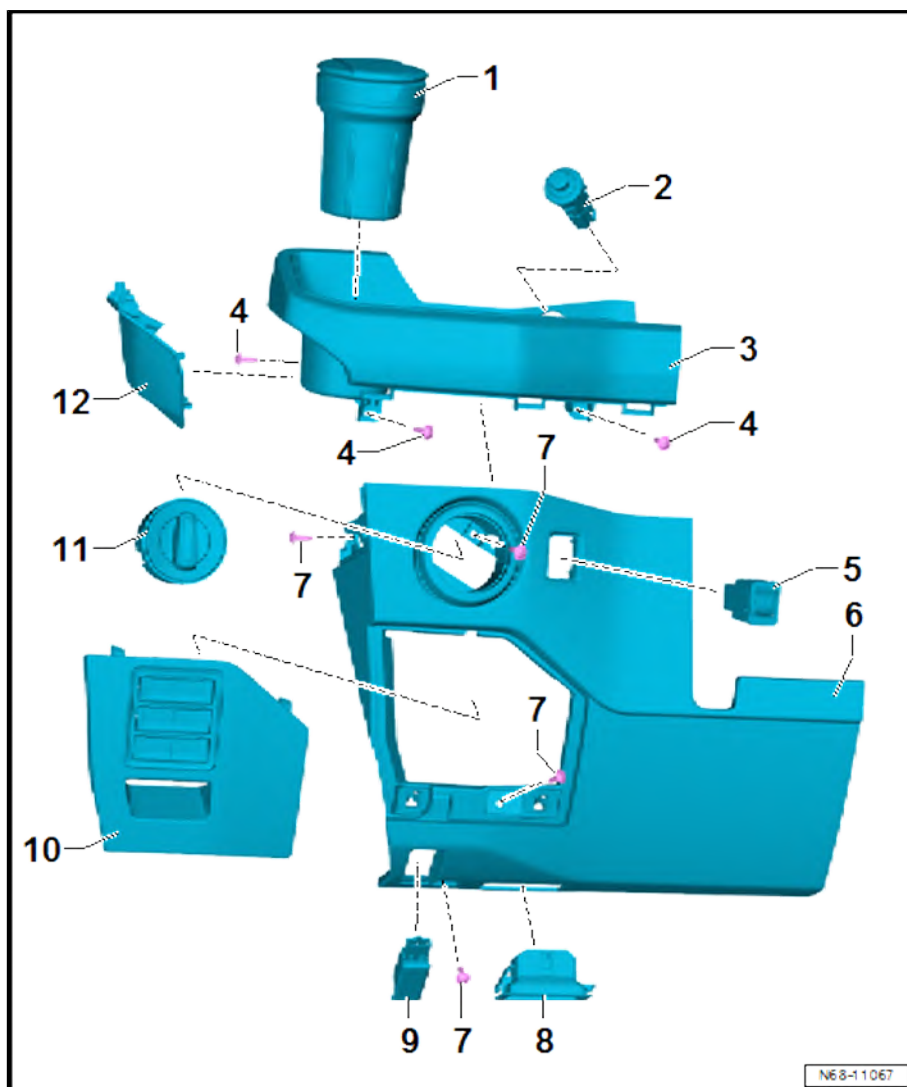

1.3 Assembly overview - front passenger side dash panel cover

1 - Front passenger side dash panel compartment

- ☐ Removing and installing
⇒ [page 50](#)

2 - Ashtray insert

3 - Bolts

- ☐ Qty. 2
- ☐ 1.5 Nm

4 - Dash panel end cover

- ☐ Removing and installing
⇒ [page 200](#)

5 - Bolts

- ☐ Qty. 2
- ☐ 1.5 Nm

6 - Front passenger side dash panel cover


- ☐ Removing and installing
⇒ [page 34](#)

7 - Passenger side entry light - W93-

- ☐ Removing and installing
⇒ Electrical system;
Rep. gr. 96 ; Lights; Re-
moving and installing
entry light -W92- / -W93-

8 - Glove compartment

- ☐ Assembly overview
⇒ [page 28](#)
- ☐ Removing and installing
⇒ [page 37](#)

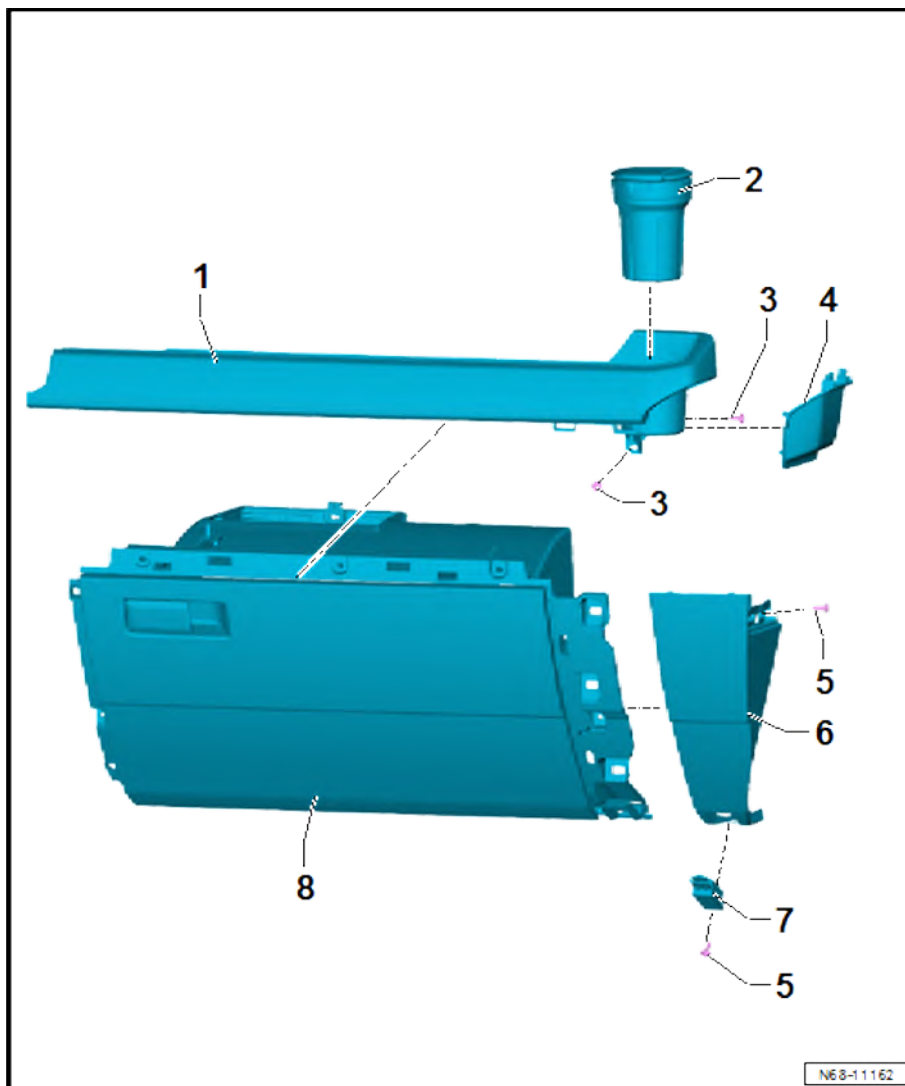



1.4 Assembly overview - steering column trim

1 - Dash panel insert trim

- ☐ With gap cover
- ☐ Removing and installing
⇒ [page 201](#)

2 - Steering column trim


- ☐ Top
- ☐ Removing and installing
⇒ [page 34](#)

3 - Bolts

- ☐ Qty. 3
- ☐ 2.5 Nm

4 - Steering column trim

- ☐ Bottom
- ☐ Removing and installing
⇒ [page 35](#)

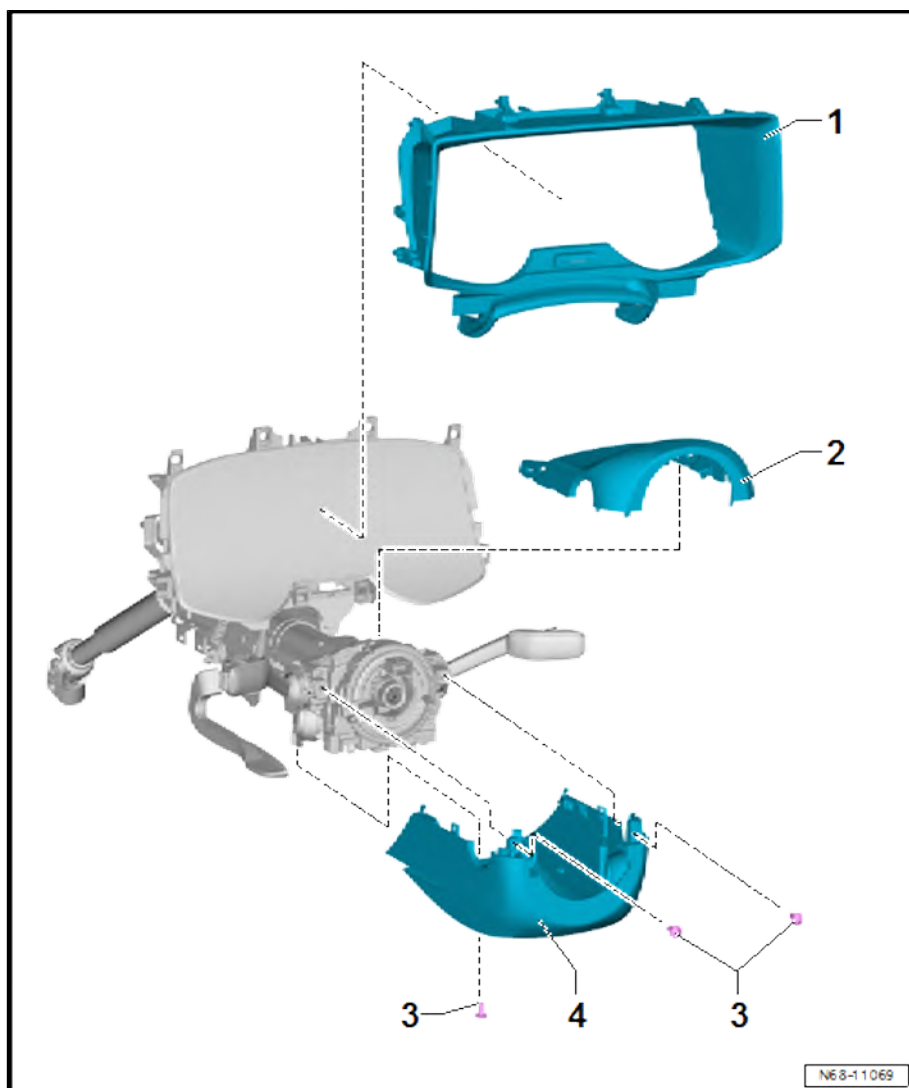

1.5 Assembly overview - glove compartment

1 - Glove compartment

- ☐ Removing and installing
⇒ [page 37](#)
- ☐ Service position for
glove compartment lid
⇒ [page 38](#)

2 - Bolts

- ☐ Qty. 9
- ☐ 1.5 Nm

3 - Key operated switch to deactivate front passenger side airbag - E224-

- ☐ Removing and installing
⇒ [page 153](#)

4 - Glove compartment light - W6-

- ☐ Removing and installing
⇒ Electrical system;
Rep. gr. 96 ; Controls;
Removing and installing
glove compartment light
- W6-

5 - Cold air hose

- ☐ For glove compartment
cooling
- ☐ Removing and installing
⇒ Heating, air conditioning;
Rep. gr. 87 ; Air
duct; Removing and installing
cold air hose of
glove compartment

6 - Union

- ☐ For glove compartment
cooling
- ☐ Removing and installing ⇒ Heating, air conditioning; Rep. gr. 87 ; Air duct; Removing and installing connection for cold air hose of glove compartment

7 - Glove compartment light switch - E26-

- ☐ Removing and installing ⇒ Electrical system; Rep. gr. 96 ; Controls; Removing and installing glove compartment light switch - E26-

8 - Glove compartment cover brake element

- ☐ Removing and installing ⇒ [page 38](#)

9 - Toothed rail brake element


- ☐ Toothed rail brake element is removed together with glove compartment cover brake element
- ☐ Removing and installing ⇒ [page 38](#)

10 - Information electronics mounting frame

- ☐ Vehicles with control unit 1 for information electronics - J794-
- ☐ Removing and installing ⇒ [page 52](#)

11 - Bolts

- ☐ Qty. 5
- ☐ 1.5 Nm

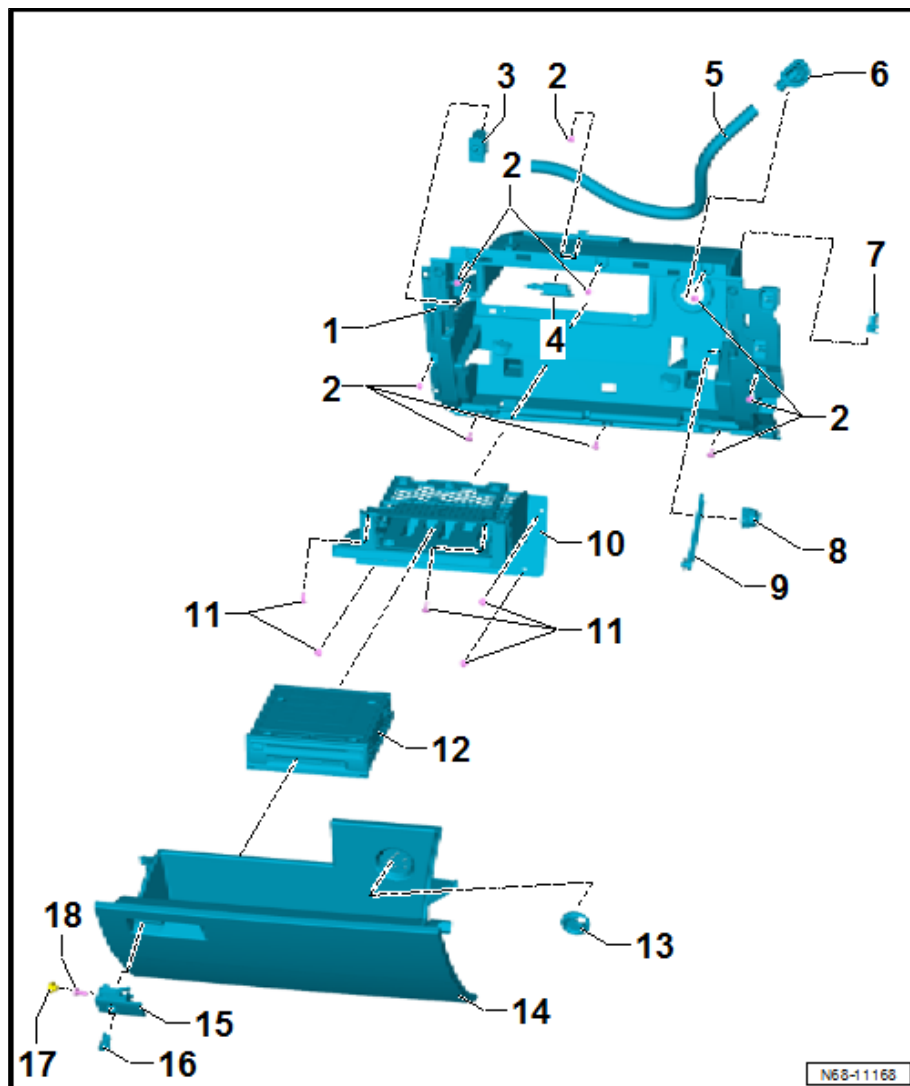



12 - Information electronics control unit 1 - J794-

- ☐ Removing and installing ⇒ Communication; Rep. gr. 91 ; Infotainment system; Removing and installing information electronics control unit 1 - J794-

13 - Valve

- ☐ For glove compartment cooling
- ☐ Removing and installing ⇒ Heating, air conditioning; Rep. gr. 87 ; Air duct; Removing and installing valve for cold air hose of glove compartment

14 - Glove compartment lid

- ☐ Removing and installing ⇒ [page 38](#)
- ☐ Service position for glove compartment lid ⇒ [page 38](#)

15 - Glove compartment opener

- ☐ Removing and installing ⇒ [page 36](#)

16 - Glove compartment lock

- ☐ Glove compartment lock is removed together with glove compartment opening mechanism
- ☐ Removing and installing ⇒ [page 36](#)

17 - Plugs

18 - Bolt

- ☐ 1.5 Nm



1.6 Assembly overview - storage compartment in roof headliner



Note

Although there are various other versions, only on equipment version is shown. Any other versions are similar.

1 - Storage box

- Removing and installing
⇒ [page 40](#)

2 - Clip

- Qty. 2

3 - Caps

- Qty. 2

4 - Bolts

- Qty. 17
- 3.5 Nm

5 - Caps

- With tether
- Qty. 2

6 - Storage compartment frame

- Removing and installing
⇒ [page 40](#)

7 - Bolts

- Qty. 3
- 1.5 Nm

8 - Storage compartment carrier

- Only one storage compartment is installed on vehicles with second evaporator housing on roof
- Removing and installing
⇒ [page 40](#)

9 - Bolts

- Qty. 7
- 8 Nm

10 - Storage compartment trim

- Only one storage compartment is installed on vehicles with second evaporator housing on roof
- Removing and installing ⇒ [page 40](#)

11 - Nuts


- Qty. 5
- 2.5 Nm

12 - Bolts

- Qty. 4
- 8 Nm

13 - Bracket

- Front

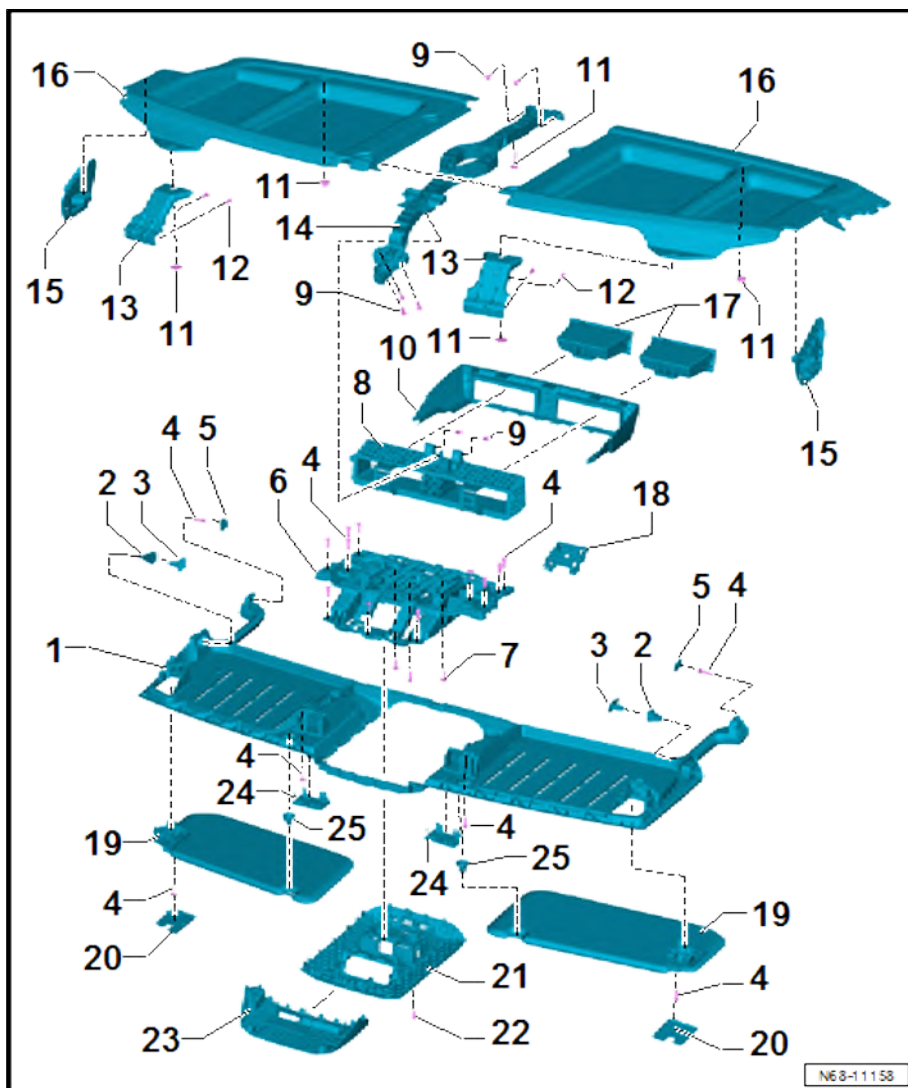



- ☐ For roof compartment
- ☐ Qty. 2
- ☐ Removing and installing ⇒ [page 40](#)

14 - Roof frame

- ☐ Depending on equipment
- ☐ Removing and installing ⇒ [page 40](#)

15 - Bracket

- ☐ On side
- ☐ For roof compartment
- ☐ Qty. 2
- ☐ Removing and installing ⇒ [page 40](#)

16 - Roof compartments

- ☐ Qty. 2
- ☐ Removing and installing ⇒ [page 40](#)

17 - Storage compartments

- ☐ Only one storage compartment is installed on vehicles with second evaporator housing on roof
- ☐ Qty. 2
- ☐ Removing and installing ⇒ [page 40](#)

18 - Bracket

- ☐ For auxiliary heater control unit - J364-
- ☐ On roof structure
- ☐ Removing and installing ⇒ Auxiliary heater, parking heater; Rep. gr. 82 ; Auxiliary/parking heater; Removing and installing auxiliary heater control unit - J364-

19 - Sun visors

- ☐ Qty. 2
- ☐ Removing and installing ⇒ [page 67](#)

20 - Caps

- ☐ Qty. 2

21 - Storage compartment trim

- ☐ Removing and installing ⇒ [page 40](#)

22 - Bolt

- ☐ 1.5 Nm

23 - Windscreen trim

- ☐ With front passenger side airbag deactivated warning lamp - K145-
- ☐ Removing and installing ⇒ [page 40](#)

24 - Caps

- ☐ With tether
- ☐ Qty. 2

25 - Centre bearing

- ☐ Qty. 2
- ☐ Removing and installing ⇒ [page 71](#)



1.7 Assembly overview - handbrake lever boot

1 - Handbrake lever boot

- ☐ Top
- ☐ Removing and installing
⇒ [page 49](#)

2 - Handbrake lever boot

- ☐ Bottom
- ☐ Removing and installing
⇒ [page 49](#)

3 - Parking brake lever


- ☐ Removing and installing
⇒ Brake system; Rep.
gr. 46 ; Parking brake;
Removing and installing
parking brake lever

4 - Handbrake warning switch - F9-

- ☐ Permanently attached
to parking brake lever

5 - Bracket

- ☐ Permanently attached
to seat frame on driver
side
- ☐ Removing and installing
⇒ [page 343](#)

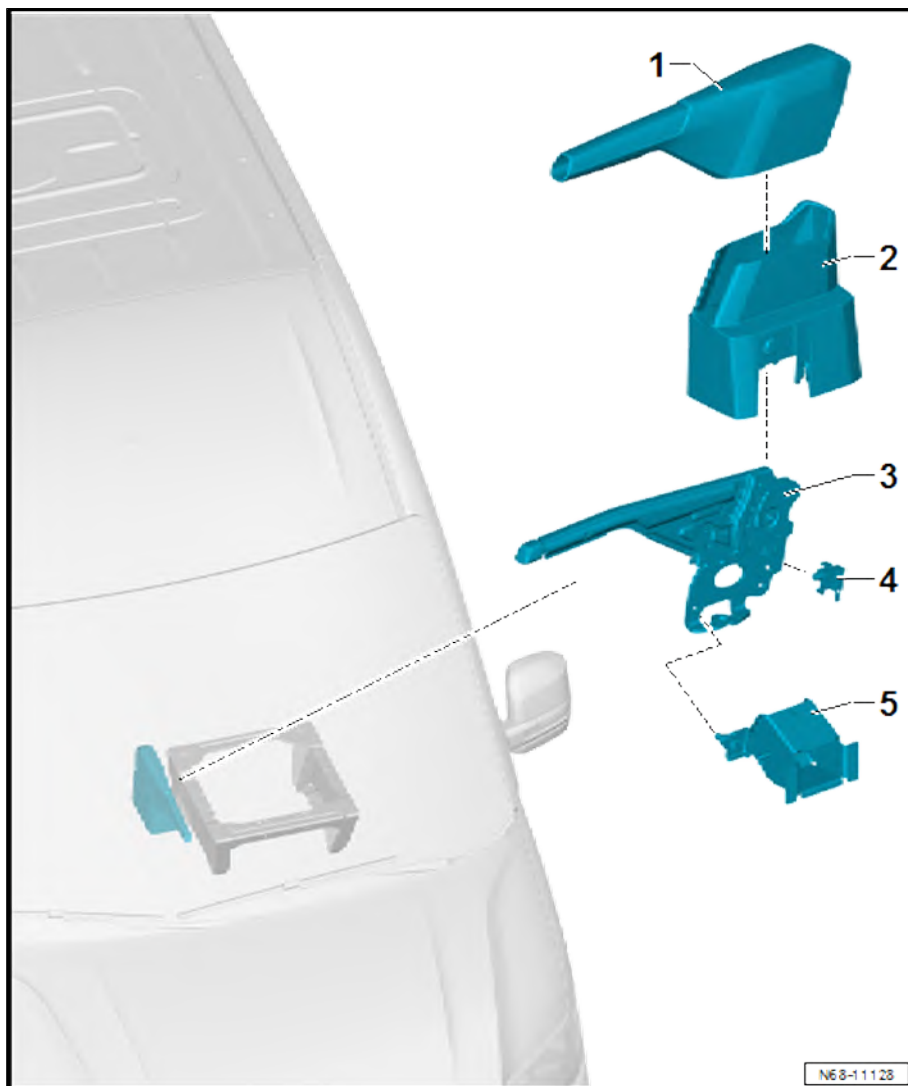

1.8 Removing and installing dash panel cover on driver side

Special tools and workshop equipment required

- ◆ Torque wrench - V.A.G 1783-




Removing


- Remove dash panel end cover on driver side ⇒ [page 200](#) .



- Remove rotary light switch - EX1- ➔ Electrical system; Rep. gr. 96 ; Controls; Removing and installing rotary light switch - EX1- .
- Remove cover for central electrics ➔ [page 50](#) .
- If present, remove driver side entry light - W92- ➔ Electrical system; Rep. gr. 96 ; Lights; Removing and installing entry light -W92- / -W93- .
- Unclip diagnostic connector holder -2- from driver side dash panel cover -1-.
- Unclip diagnostic connector -3-.
- Remove diagnostic connector holder -2-.

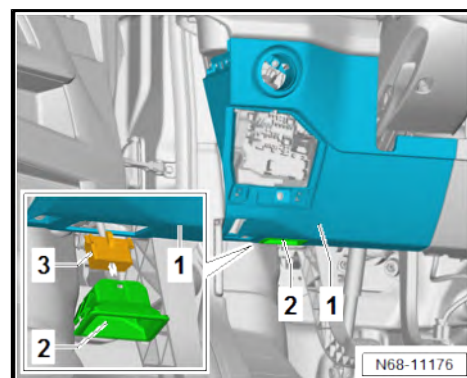

- Unscrew bolts -2-.
- Detach driver side dash panel cover -1- from fasteners -3-, and remove it.

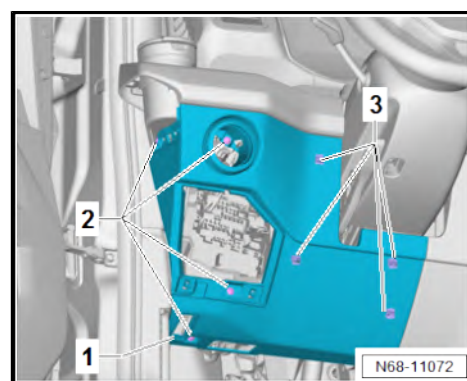

Vehicles with headlight range control regulator - E102-


- Disconnect connector -2- from headlight range control regulator - E102- -1-.

Installing

Install in reverse order of removal, observing the following:

Specified torques

- ◆ ➔ [“1.2 Assembly overview - driver side dash panel cover”, page 25](#)

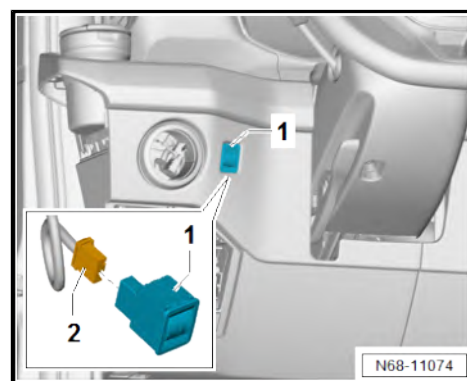

1.9 Removing and installing dash panel insert trim

The dash panel insert trim must be removed to facilitate complete removal of the gap cover as the gap cover is permanently attached to the dash panel insert trim via the »leather strip«.

Removing

- Remove trim of dash panel insert ➔ [page 201](#) .

Installing

Install in reverse order.



1.10 Removing and installing dash panel cover on front passenger side


Special tools and workshop equipment required

- ◆ Torque wrench - V.A.G 1783-



Removing

- Remove dash panel end cover on front passenger side
⇒ [page 200](#) .
- If present, remove passenger side entry light - W93- ⇒ Electrical system; Rep. gr. 96 ; Lights; Removing and installing entry light -W92- / -W93- .
- Unscrew bolts -2-.
- Detach front passenger side dash panel cover -1- from fasteners -3-, and remove it.

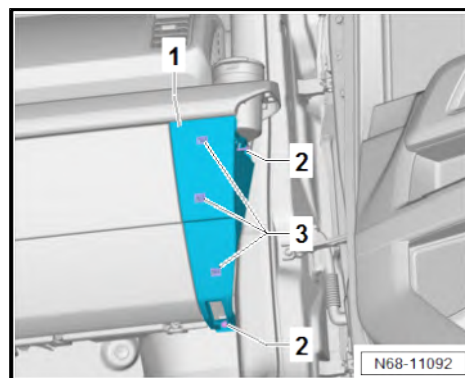

Installing

Install in reverse order of removal, observing the following:

Specified torques

- ◆ ⇒ ["1.3 Assembly overview - front passenger side dash panel cover", page 26](#)

1.11 Removing and installing upper steering column trim

Special tools and workshop equipment required


- ◆ Removal wedge - 3409-





Removing


- Adjust steering wheel reach so that the steering wheel projects as far into the passenger compartment as possible.
- Set steering wheel to lowest position.
- Detach top steering column trim -1- using removal wedge - 3409- -3- from bottom steering column trim -2-.

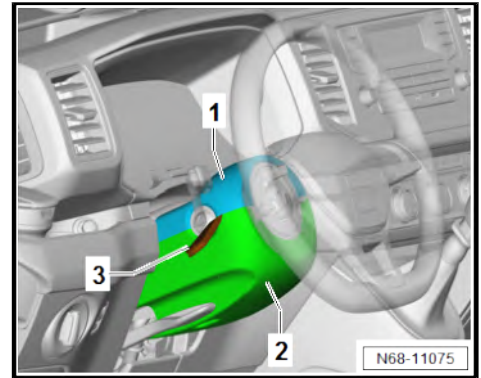

- Unclip gap cover of dash panel insert -2- from top steering column trim -1-, and remove it.

Installing


Install in reverse order.

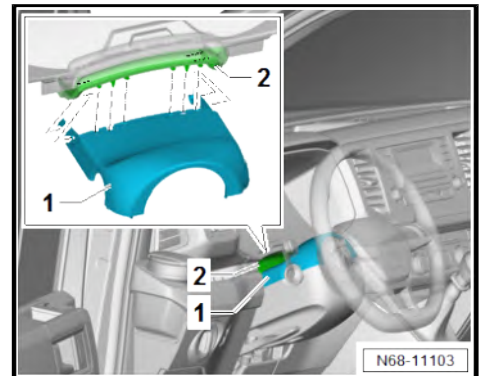

1.12 Removing and installing lower steering column trim

Special tools and workshop equipment required

- ◆ Torque wrench - V.A.G 1783-

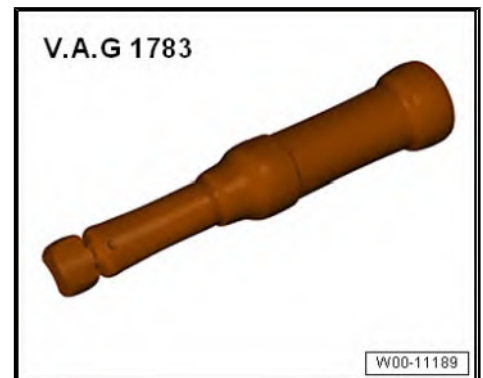

Removing



Note

The gap cover on the dash panel insert remains in the upper steering column trim.

- Detach upper steering column trim ➔ [page 34](#) .




- Turn steering wheel as shown until respective bolt -2- behind steering wheel is accessible.
- Unscrew bolts -2-.
- Remove lower steering column trim -1-.

Installing

Install in reverse order of removal, observing the following:

Specified torques


- ♦ ⇒ [“1.4 Assembly overview - steering column trim”, page 27](#)

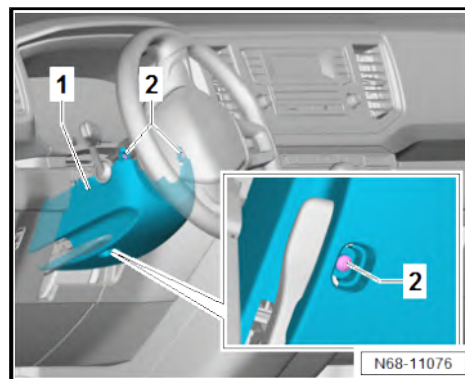

1.13 Removing and installing glove compartment opener


Special tools and workshop equipment required

- ♦ Torque screwdriver - V.A.G 1624-

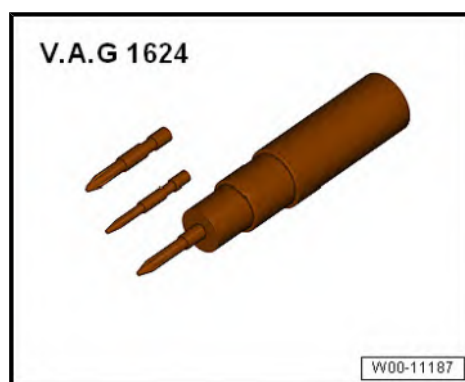

Removing

- Open glove compartment cover.
- Remove rubber plug -4- from glove compartment cover.
- Unscrew bolt -3-.
- Move glove box opening mechanism -1- in direction of -arrow a-.
- Remove glove box opening mechanism -1- with mounting frame -2- in direction of -arrow b-.

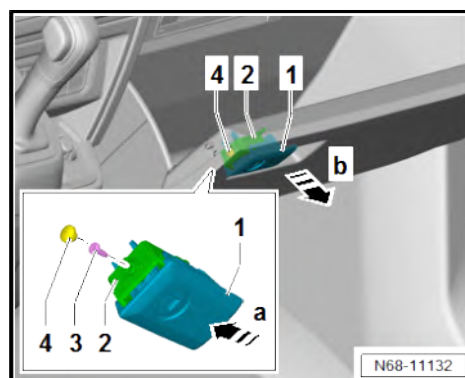


Installing

Install in reverse order of removal, observing the following:

- Open mounting frame -2- as shown.
- Insert glove box opening mechanism -1- in glove compartment cover.

Specified torques

- ♦ ⇒ [“1.5 Assembly overview - glove compartment”, page 28](#)

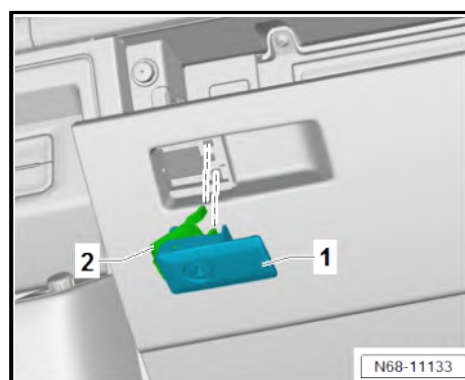





1.14 Removing and installing glove compartment

Removing

- Remove centre console ➔ [page 95](#) .
- If present, remove glove compartment light - W6- ➔ Electrical system; Rep. gr. 96 ; Lights; Removing and installing glove compartment light - W6- .
- If fitted, remove control unit 1 for information electronics - J794- ➔ Communication; Rep. gr. 91 ; Infotainment system; Removing and installing control unit 1 for information electronics - J794- .
- Glove compartment cover opened
- Unscrew bolt -3-.
- Close glove compartment -1-.
- Unscrew bolts -2-.
- Detach glove compartment -1- from dash panel.

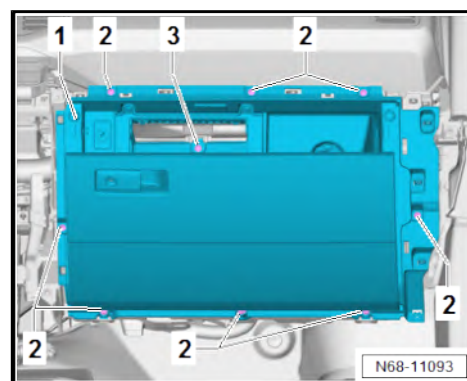

- Remove glove compartment -1- enough to allow access to cold air hose -4- for glove compartment cooling.
- Pull off cold air hose -4- from connection -7- for glove compartment cooling.
- If present, separate connector -2- from key operated switch used to deactivate front passenger airbag - E224- -3-.
- If present, separate connector -6- from glove compartment light switch - E26- -5-.
- Remove glove compartment -1-.

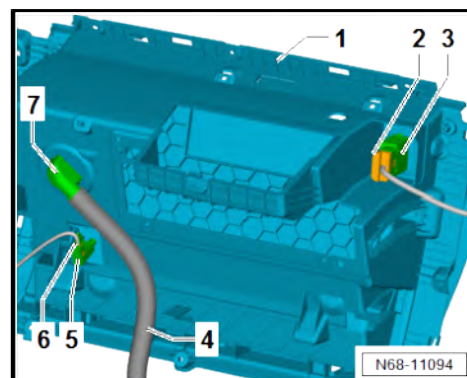

Installing

Install in reverse order of removal, observing the following:

Specified torques

- ◆ ➔ [“1.5 Assembly overview - glove compartment”, page 28](#)




1.15 Removing and installing glove compartment cover

Removing

- Remove glove compartment ⇒ [page 37](#) .
- Place glove compartment on a soft surface.
- Move glove compartment cover -1- to service position ⇒ [page 38](#) .
- Remove hinge pin -2- in direction of -arrow-.
- Remove glove compartment cover -1- from glove compartment -3-.

Installing

Install in reverse order.

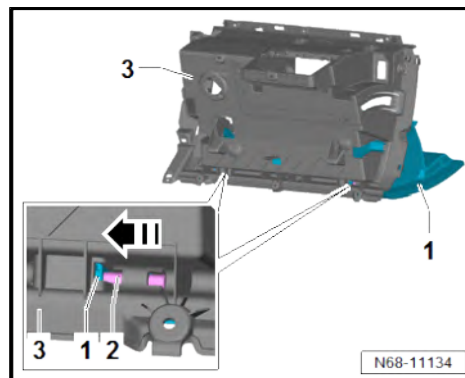


1.16 Removing and installing damper element for glove compartment lid

Removing

- Move glove compartment cover -1- to service position ⇒ [page 38](#) .
- Turn damper element -2- 90° anticlockwise, and remove it.

Installing

Install in reverse order.

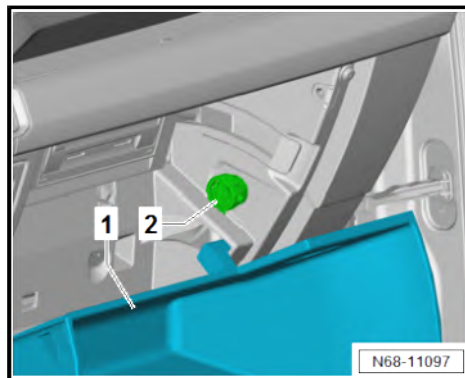

1.17 Service position for glove compartment lid

Special tools and workshop equipment required

- ◆ Removal wedge - 3409-





Moving to service position

- Glove compartment cover opened
- Release toothed rail of brake element -2- from glove compartment cover -1-, and remove it.



Note



Risk of trapping between glove compartment cover and end stops. Use removal wedge - 3409- to release.

- Press in end stops -2- in direction of -arrow- one after the other using removal wedge - 3409- . Hold glove compartment cover -1- under tension slightly when doing this.
- Open glove compartment cover -1-.




Note

If the brake element falls out of the damper element when the glove compartment cover is moved to the "service position", fit it back into the damper element. Note the correct installation position when doing this.

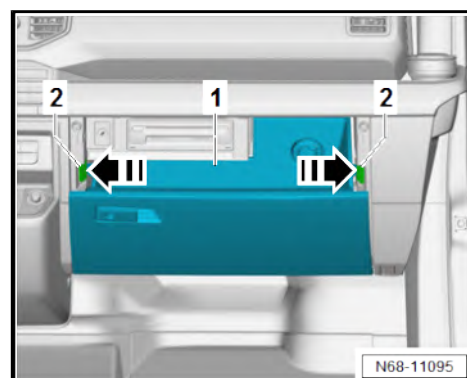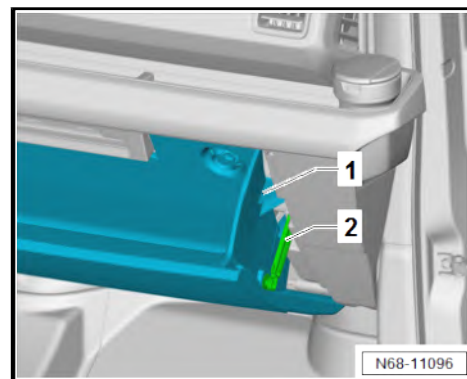


Moving from service position

- Insert toothed rail brake element -2- in glove compartment cover -1-.

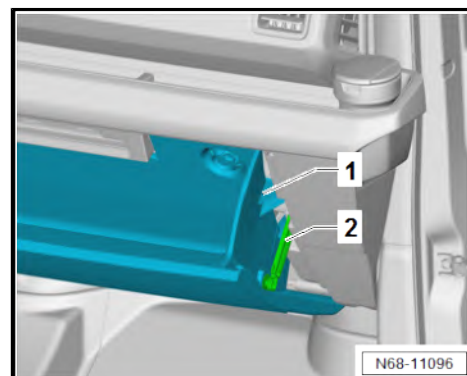

- Close glove compartment cover -1- slowly.
- Engage glove compartment cover -1- behind end stops -2- -arrow-.

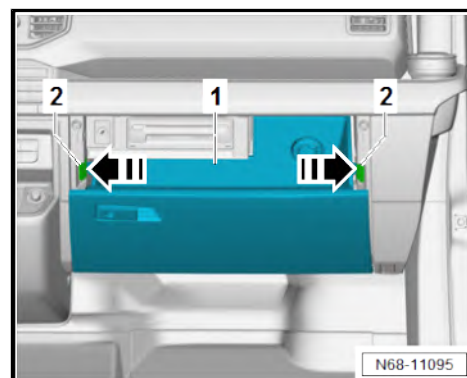



1.18 Removing and installing headliner storage compartment

⇒ [“1.18.1 Removing and installing storage compartment”, page 40](#)

⇒ [“1.18.2 Removing and installing storage compartment trim”, page 41](#)

⇒ [“1.18.3 Removing and installing windscreen trim”, page 41](#)

⇒ [“1.18.4 Removing and installing storage compartment trim”, page 42](#)

⇒ [“1.18.5 Removing and installing cover”, page 44](#)

⇒ [“1.18.6 Removing and installing storage box”, page 44](#)

⇒ [“1.18.7 Removing and installing storage compartment bracket”, page 45](#)

⇒ [“1.18.8 Removing and installing storage compartment carrier”, page 47](#)

⇒ [“1.18.9 Removing and installing roof frame”, page 47](#)

⇒ [“1.18.10 Removing and installing storage compartment mounting frame”, page 48](#)


⇒ [“1.18.11 Removing and installing roof compartment”, page 48](#)

⇒ [“1.18.12 Removing and installing roof compartment bracket”, page 48](#)

1.18.1 Removing and installing storage compartment

Special tools and workshop equipment required

- ◆ Wedges - T10383-

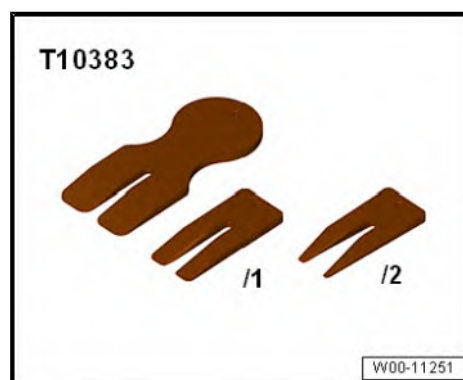

Removing



Note


The description is for vehicles without a second evaporator housing on the roof. Only one storage compartment is installed on vehicles with second evaporator housing.



- Use wedge - T10383- to unclip storage compartments -1- in direction of -arrows- from storage compartment trim -2- and remove.

Installing

Install in reverse order.

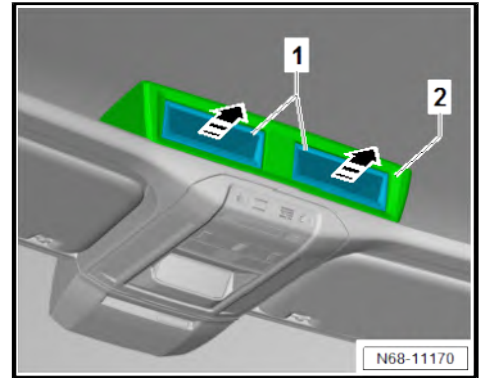

1.18.2 Removing and installing storage compartment trim

Removing




Note

The description is for vehicles without a second evaporator housing on the roof. Only one storage compartment is installed on vehicles with second evaporator housing.

- Unclip storage compartment trim -1- together with storage compartments in direction of -arrow- and remove.

Installing


Install in reverse order.

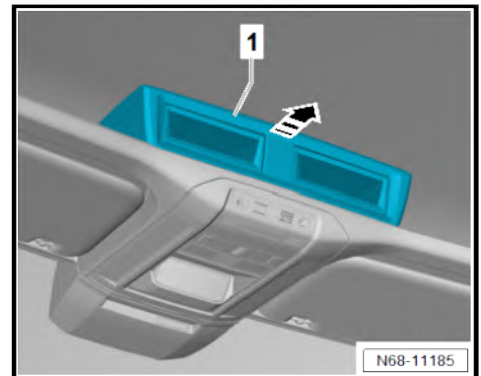

1.18.3 Removing and installing windscreen trim

Special tools and workshop equipment required

- ◆ Wedges - T10383-

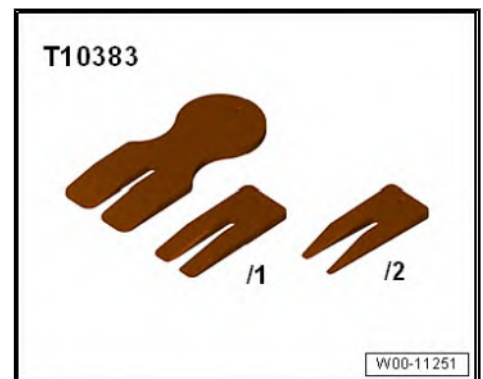




Removing



Note

The description is for vehicles with storage compartment. Adapt accordingly for vehicles without storage compartment.

- Use wedge - T10383- to detach windscreen trim -1- from storage compartment -2-.
- Remove windscreen trim -1- from guide -arrow-.

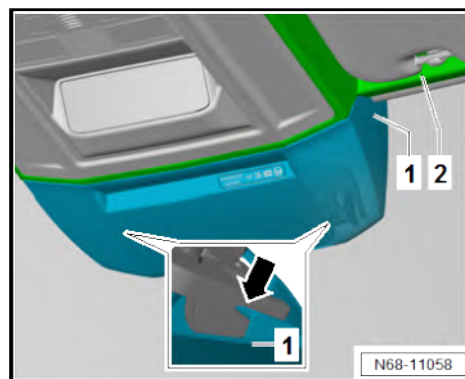


Vehicles with front passenger airbag warning lamp - K145-

- Switch off ignition and all electrical consumers.
- Withdraw ignition key.
- Disconnect electrical connector -3- from front passenger airbag warning lamp - K145- -2-.
- Remove windscreen trim -1-.

Installing


Install in reverse order.

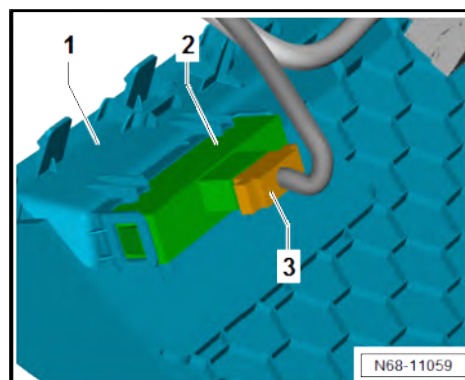

1.18.4 Removing and installing storage compartment trim


Special tools and workshop equipment required

- ♦ Wedges - T10383-

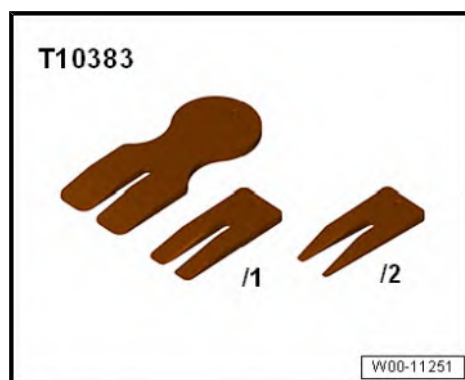




- ◆ Torque wrench - V.A.G 1783-

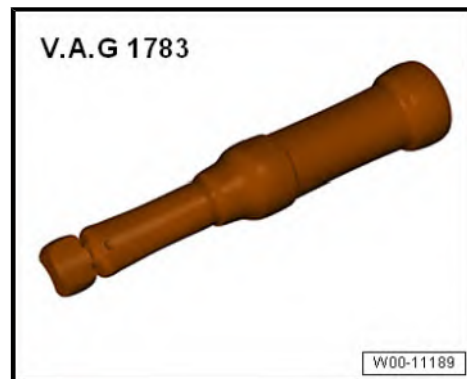


Removing

- Remove front interior light - W1- ⇒ Electrical system; Rep. gr. 96 ; Controls; Removing and installing front interior light - W1- .
- Unscrew bolt -3-.
- Use wedge - T10383- to detach storage compartment trim -1- downwards from storage compartment -2-.
- Remove storage compartment trim -1- sufficiently until wiring harness is accessible.

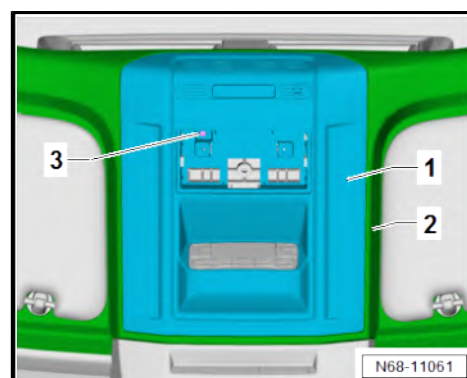

Vehicles with internal microphone - R74- and/or telematics button module - E734- and/or interior monitoring sensor - G273- and/or operating and display unit for rear air conditioning system - E857-

- Disconnect electrical connector -3- from operating and display unit for rear air conditioning system - E857- -2-.
- Disconnect electrical connector -6- from interior monitoring sensor - G273- -5-.
- Disconnect electrical connector -9- from telematics button module - E734- -7-.
- Disconnect electrical connector -8- from internal microphone - R74- -10-.

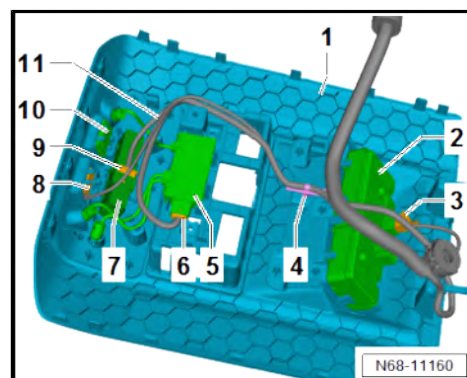

Continued for all vehicles

- Release retaining clip -4-.
- Guide out wiring harness -11-.
- Remove storage compartment trim -1-.

Installing

Install in reverse order of removal, observing the following:

Specified torques

- ◆ ⇒ [“1.6 Assembly overview - storage compartment in roof headliner”, page 30](#)



1.18.5 Removing and installing cover

Removing




Note

For vehicles without operating and display unit for rear air conditioning system - E857- and/or without telematics button module - E734-

- Remove storage compartment trim ➔ [page 40](#) .
- Use wedge - T10383- to unclip covers -1- from storage compartment trim -2-, and remove covers.

Installing

Install in reverse order.

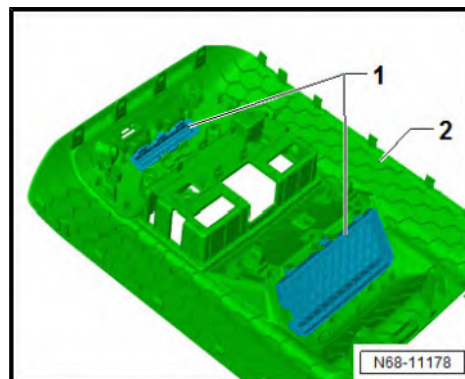

1.18.6 Removing and installing storage box


Special tools and workshop equipment required

- ◆ Release tool - T10518A-



Removing

- Remove sun visors ➔ [page 67](#) .
- Remove windscreen trim ➔ [page 40](#) .
- Remove storage compartment trim ➔ [page 40](#) .
- Remove storage compartment trim ➔ [page 40](#) .
- Use wedge - T10383- to unclip caps -2- from storage compartment -1-.
- Leave caps -2- with tether on vehicle.
- Unscrew bolts -3-.

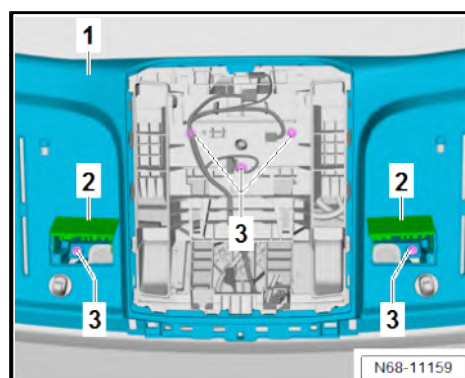

Note

The following work steps are described for the left-hand side of the vehicle. Removal for the right side follows the same pattern.





- Use wedge - T10383- to unclip cap -2-.



Note

When carrying out the steps below, ensure that release tool - T10518A- is positioned centrally in retaining clips.

- Detach retaining clip -5- from body mounting using release tool - T10518A- .
- Hold clip -5- under »tension« using commercially available long-nose pliers so that retaining clip does not engage again unintentionally.
- Remove clip -5- from storage compartment -1-.
- Use wedge - T10383- to unclip cap -3-.
- Leave cap -3- with tether on vehicle.
- Unscrew bolt -4-.
- Repeat procedure on right-hand side of vehicle.
- Press together locking lugs -2-.
- Hold storage compartment -1- under tension slightly so that locking lugs -2- do not engage again unintentionally.
- Release attachments -3- from body mounting.
- Remove storage compartment -1- downwards.

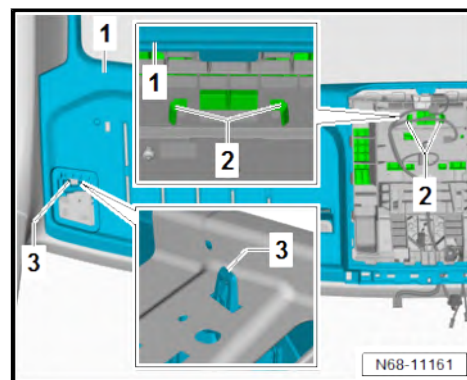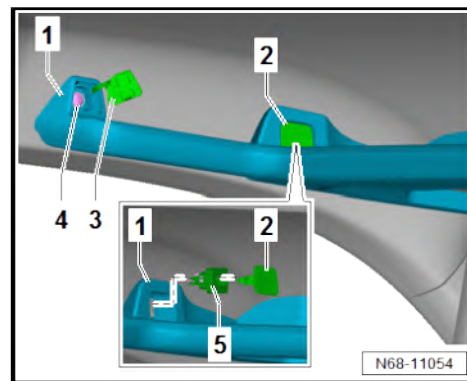


Installing

Install in reverse order of removal, observing the following:

- Check that seals -2- on storage compartment frame -1- are seated correctly and not damaged, renew if necessary ⇒ Electronic parts catalogue (ETKA) or ⇒ webMANTIS for MAN TGE.
- Ensure that all retaining clips are properly engaged in body.

Specified torques

- ◆ ⇒ [“1.6 Assembly overview - storage compartment in roof headliner”, page 30](#)

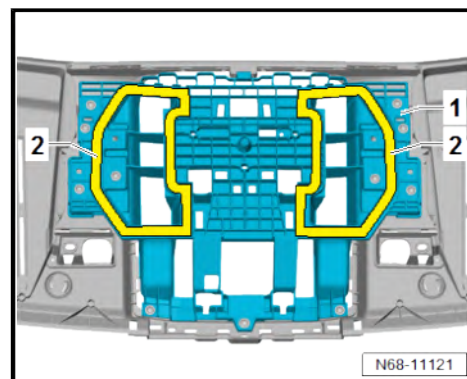


1.18.7 Removing and installing storage compartment bracket


Special tools and workshop equipment required



- ◆ Pop rivet pliers - VAS 5072A-

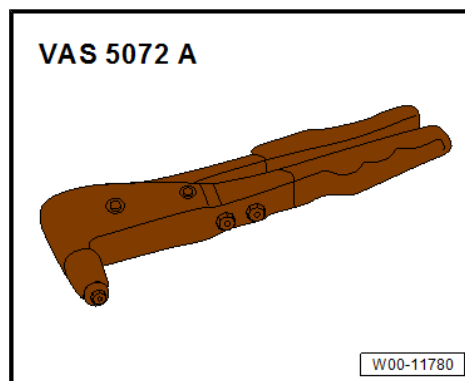

- ◆ Roll pin drift - VAS 5513-

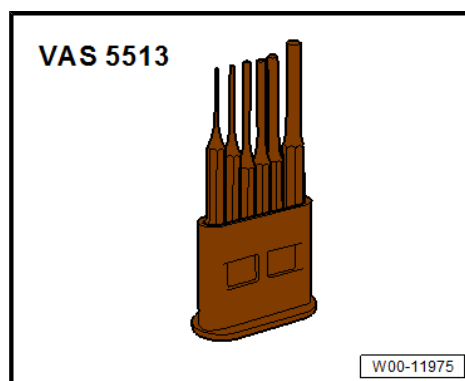

- ◆ Hand drill
- ◆ Drill bit with diameter smaller than 4.5 mm
- ◆ Safety goggles
- ◆ Safety gloves

Removing

- Remove moulded headliner in driver area ➔ [page 308](#) .

⚠ CAUTION

Risk of injury from swarf being flung into air.
Irritation and injury to skin and eyes possible.


- Wear safety goggles.
- Wear protective gloves.

- Drill off rivet heads -2- using drill and spiral drill bit with diameter less than 4.5 mm.
- Drive out rivet shanks -2- with drift - VAS 5513- .
- Detach storage compartment bracket -1- from body -arrow-, and remove it.
- Remove swarf.

Installing

Install in reverse order of removal, observing the following:

- Use rivet pliers - VAS 5072A- to install new pop rivets.
- Check that compensation element -3- is firmly secured to storage compartment bracket -1-.

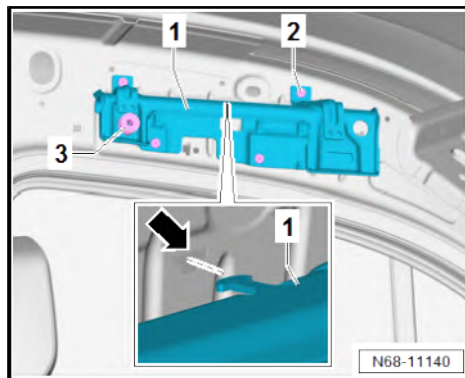




1.18.8 Removing and installing storage compartment carrier

Removing

- Remove storage compartment ➔ [page 40](#) .

Vehicles with second evaporator housing on roof

- Detach air duct -1- in -direction of arrow- from storage compartment carrier -3-.
- Make sure that seal on evaporator housing -2- is properly seated.

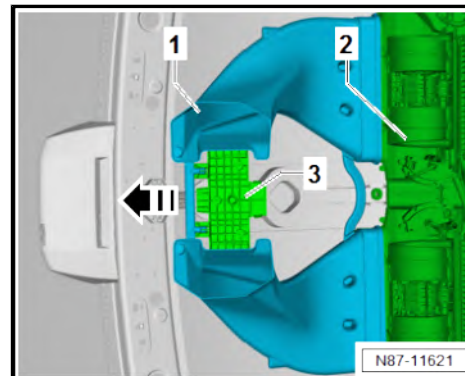

Continued for all vehicles


- Unscrew bolts -2-.
- Remove storage compartment carrier -1- from roof frame -3-.

Installing

Install in reverse order of removal, observing the following:

Specified torques

- ◆ ➔ [“1.6 Assembly overview - storage compartment in roof headliner”, page 30](#)

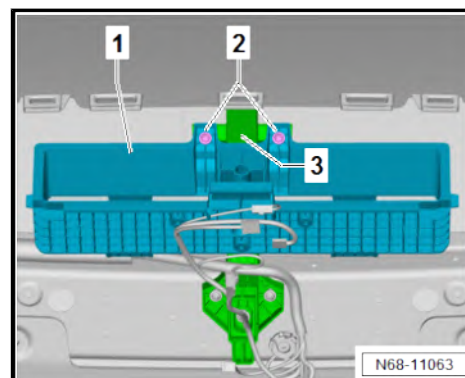

1.18.9 Removing and installing roof frame

Removing



Note

The description is for vehicles with a high roof. Adapt accordingly for vehicles with a different roof shape.


- Remove moulded headliner in driver area ➔ [page 308](#) .

Vehicles with second evaporator housing on roof

- Removing and installing evaporator housing ➔ Heating, air conditioning; Rep. gr. 87 ; Rear heater and air conditioning unit; Removing and installing evaporator housing .

Vehicles with roof compartment

- Unscrew bolt -3- from roof frame -2- for roof compartment -1-.

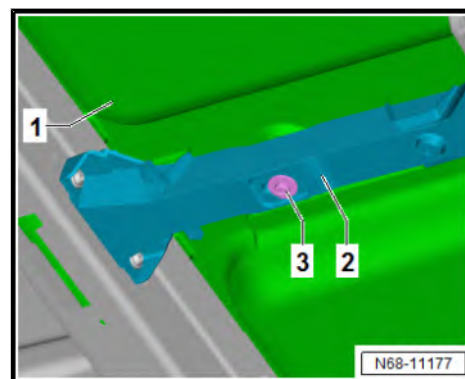



Vehicles with -roof aerial- and/or without roof compartment

- Disconnect electrical connectors -2- from -roof aerial- .

Continued for all vehicles


- Unscrew bolts -4-.
- Unscrew bolts -3-.
- Remove roof frame -1-.

Installing

Install in reverse order of removal, observing the following:

Specified torques

- ♦ ➔ [“1.6 Assembly overview - storage compartment in roof headliner”, page 30](#)

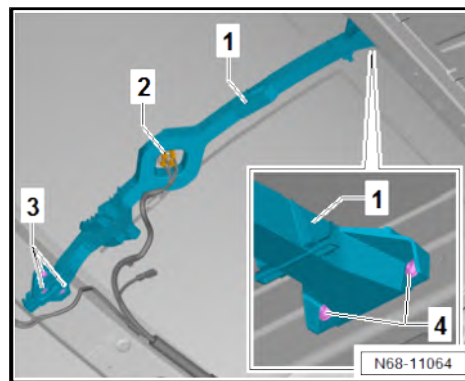

1.18.10 Removing and installing storage compartment mounting frame

Removing


- Remove storage compartment ➔ [page 40](#) .
- Unscrew bolts -3- from storage compartment -2-.
- Remove storage compartment frame -1-.

Installing

Install in reverse order of removal, observing the following:

Specified torques

- ♦ ➔ [“1.6 Assembly overview - storage compartment in roof headliner”, page 30](#)

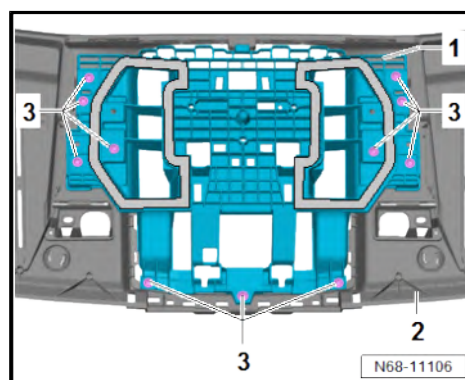

1.18.11 Removing and installing roof compartment

Removing


- Remove moulded headliner in driver area ➔ [page 308](#) .
- Unscrew bolts -3-.
- Remove roof compartment -1- from roof frame -2-.
- Guide out roof compartment -1- downwards from roof compartment bracket -4-.
- Remove roof compartment -1- via load compartment.

Installing

Install in reverse order of removal, observing the following:

Specified torques

- ♦ ➔ [“1.6 Assembly overview - storage compartment in roof headliner”, page 30](#)

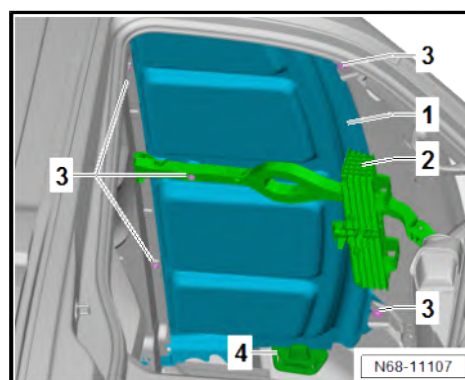

1.18.12 Removing and installing roof compartment bracket


Removing

- Remove roof compartment ➔ [page 40](#) .



Front roof compartment bracket

- Unscrew bolts -2-.
- Remove front roof compartment bracket -1-.

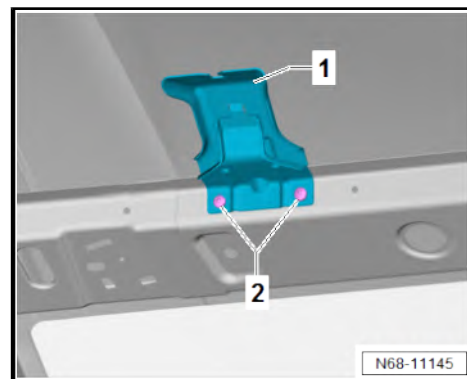

Side roof compartment bracket

- Unclip fasteners -arrows- from body.
- Remove side roof compartment bracket -1-.


Installing

Install in reverse order of removal, observing the following:

Front roof compartment bracket

Specified torques

- ◆ ⇒ [“1.6 Assembly overview - storage compartment in roof headliner”, page 30](#)

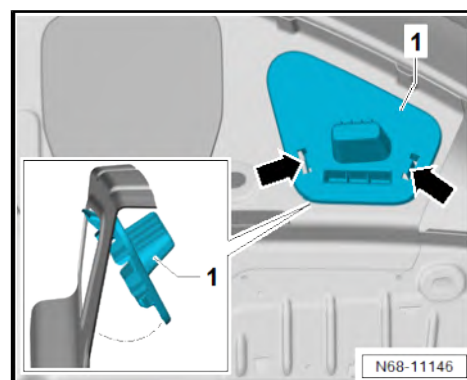


1.19 Removing and installing handbrake lever boot

Removing


Top handbrake lever trim

- The parking brake lever is in its lowest position and is not applied.
- Use a screwdriver -arrow- to release locking lug -3- in -direction of arrow a-.
- Pull off upper handbrake lever trim -1- in direction of -arrow b- from parking brake lever -2-.

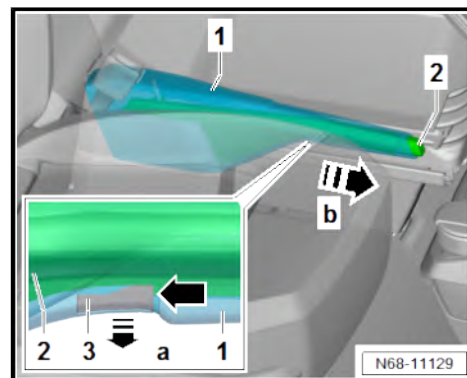

Bottom handbrake lever trim

- The parking brake lever is in its uppermost position and is applied.
- Detach lower handbrake lever trim -1- in -direction of arrow- from mountings -3-, and remove it.

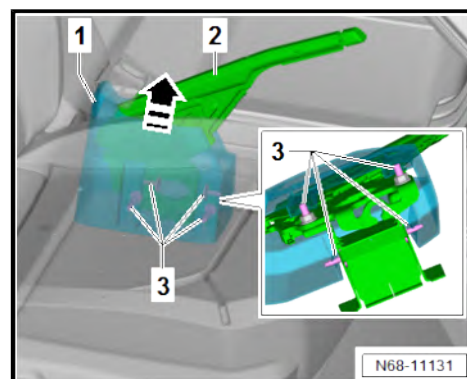




Installing

Install in reverse order of removal, observing the following:


- Check that locking lug -3- on upper handbrake lever trim -1- is firmly engaged with parking brake lever -2-.

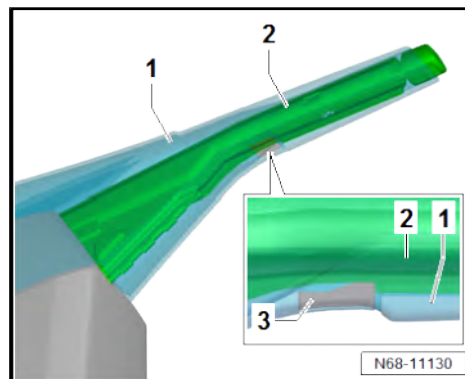

1.20 Removing and installing cover for central electrics

Removing

- Detach cover for central electrics -1- from fasteners -3-.
- Remove cover for central electrics -1- from driver side dash panel cover -2-.

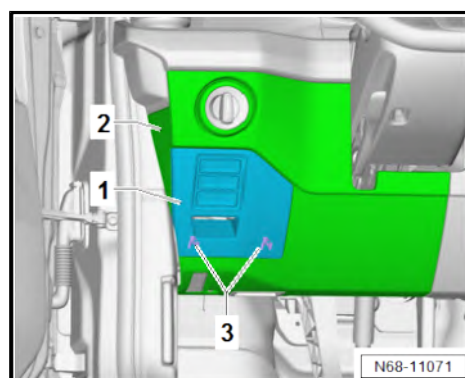


Vehicles with control elements

- Switch off ignition and all electrical consumers.
- Withdraw ignition key.
- Disconnect electrical connectors -2- from controls in cover for central electrics -1-.

Installing

Install in reverse order.

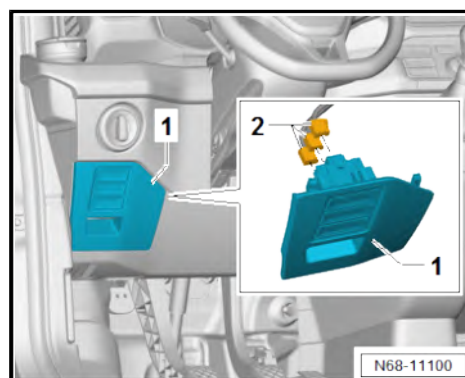

1.21 Removing and installing dash panel compartment

⇒ [“1.21.1 Removing and installing top centre dash panel compartment”, page 50](#)

⇒ [“1.21.2 Removing and installing centre dash panel compartment”, page 51](#)

⇒ [“1.21.3 Removing and installing dash panel storage compartment on driver side”, page 52](#)

⇒ [“1.21.4 Removing and installing dash panel storage compartment on front passenger side”, page 52](#)

1.21.1 Removing and installing top centre dash panel compartment

Special tools and workshop equipment required



◆ Removal wedge - 3409-




Removing

- Use removal wedge - 3409- to unclip top centre dash panel compartments -1- from installation openings in dash panel -2-.

Installing


Install in reverse order.

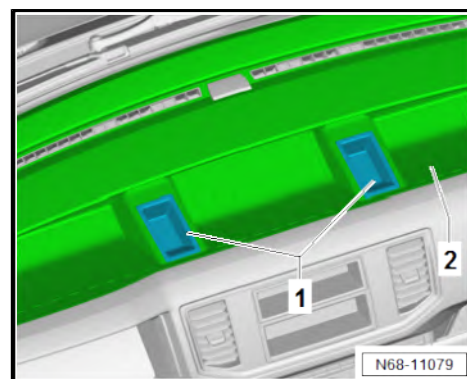

1.21.2 Removing and installing centre dash panel compartment

Special tools and workshop equipment required

- ◆ Torque wrench - V.A.G 1783-

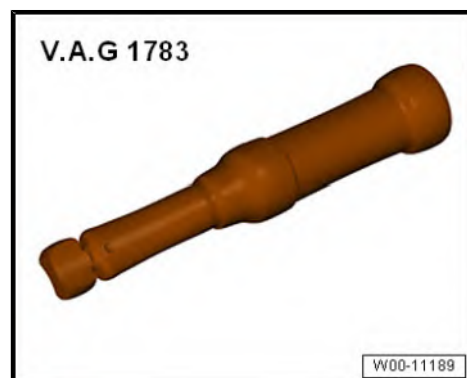

Removing


- Remove trim with centre vents ⇒ [page 212](#) .
- Unscrew bolts -2-.
- Remove centre dash panel compartment -1-.

Installing

Install in reverse order of removal, observing the following:

Specified torques

- ◆ ⇒ [“3.1 Assembly overview - dash panel”, page 197](#)

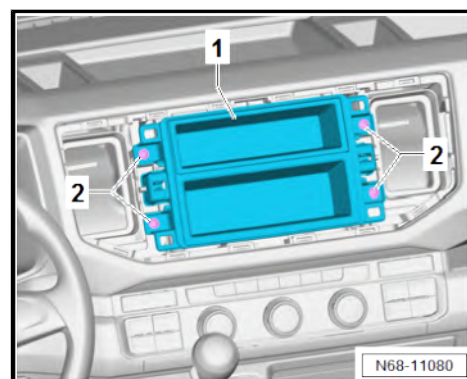




1.21.3 Removing and installing dash panel storage compartment on driver side

Removing

- Remove dash panel cover on driver side ⇒ [page 32](#) .
- If present, remove ashtray.
- Unscrew bolts -2-.
- Detach driver side storage compartment in dash panel -1- from fasteners -3-, and remove it.

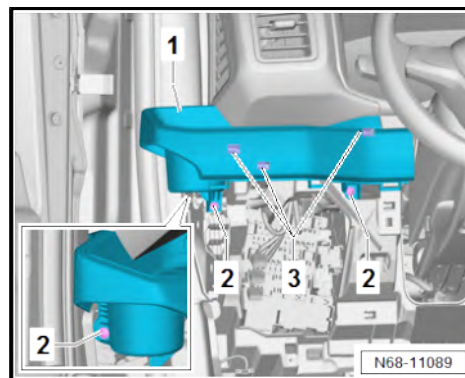

Vehicles with 12-V socket


- Switch off ignition and all electrical consumers.
- Withdraw ignition key.
- Disconnect electrical connector -2- from 12-V socket - U5- -1-.

Installing

Install in reverse order of removal, observing the following:

Specified torques

- ♦ ⇒ [“1.2 Assembly overview - driver side dash panel cover”, page 25](#)

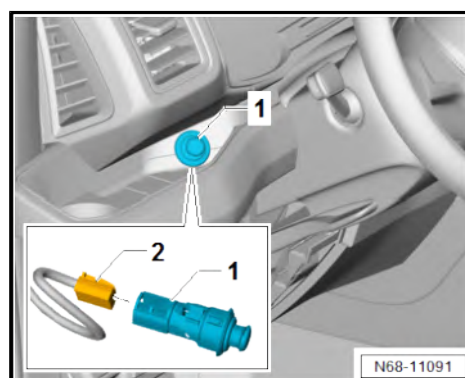

1.21.4 Removing and installing dash panel storage compartment on front passenger side

Removing


- Remove dash panel cover on front passenger side ⇒ [page 34](#) .
- If present, remove ashtray.
- Unscrew bolts -2-.
- Detach front passenger side storage compartment in dash panel -1- from fasteners -3-, and remove it.

Installing

Install in reverse order of removal, observing the following:

Specified torques

- ♦ ⇒ [“1.3 Assembly overview - front passenger side dash panel cover”, page 26](#)

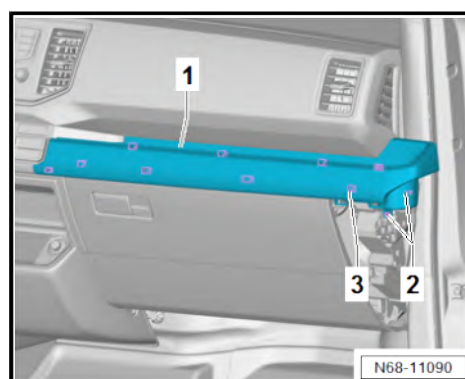


1.22 Removing and installing information electronics mounting frame

Special tools and workshop equipment required




- ◆ Torque wrench - V.A.G 1783-

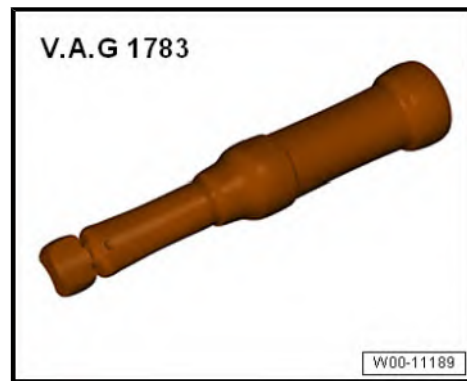

Removing

- Remove control unit 1 for information electronics - J794- ⇒ Communication; Rep. gr. 91 ; Infotainment system; Removing and installing control unit 1 for information electronics - J794- .
- Move glove compartment lid to service position ⇒ [page 38](#) .
- Unscrew bolts -2-.
- Remove information electronics mounting frame -1- from glove compartment -3-.

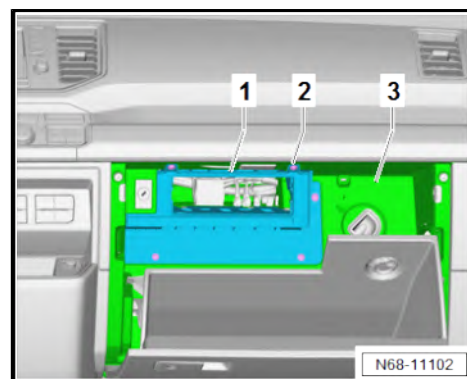

Installing

Install in reverse order of removal, observing the following:

Specified torques

- ◆ ⇒ [“1.5 Assembly overview - glove compartment”, page 28](#)

1.23 Removing and installing footwell cover

Removing


- Removing right floor covering in driver area ⇒ [page 283](#)
- Lift up floor covering on left in driver area at transition to footwell cover -1-.
- Unscrew nuts -3-.
- Unclip footwell cover -1- upwards from mountings -2-, and remove it.

Installing

Install in reverse order of removal, observing the following:

Specified torques

- ◆ ⇒ [“5.7 Assembly overview - foot rest and floor covering”, page 260](#)

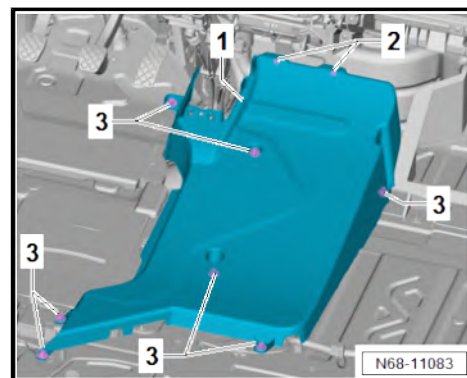

1.24 Removing and installing cover of windscreen heater for lane departure warning - Z67-

Removing

- Remove windscreen heater for lane departure warning - Z67- ⇒ Electrical system; Rep. gr. 96 ; Front camera for assist systems; Removing and installing windscreen heater for lane departure warning - Z67- .



Installing

Install in reverse order.



2 Equipment

- ⇒ [“2.1 Assembly overview - sun visors”, page 55](#)
- ⇒ [“2.2 Assembly overview - grab handle”, page 58](#)
- ⇒ [“2.3 Assembly overview - partition panel”, page 61](#)
- ⇒ [“2.4 Assembly overview - tie rails”, page 65](#)
- ⇒ [“2.5 Assembly overview - seat rail systems”, page 67](#)
- ⇒ [“2.6 Removing and installing sun visor”, page 67](#)
- ⇒ [“2.7 Removing and installing sun visor centre mount”, page 71](#)
- ⇒ [“2.8 Removing and installing grab handle”, page 73](#)
- ⇒ [“2.9 Removing and installing tool kit storage compartment”, page 76](#)
- ⇒ [“2.10 Removing and installing partition panel”, page 78](#)
- ⇒ [“2.11 Removing and installing tie rail”, page 83](#)
- ⇒ [“2.12 Removing and installing coat hook”, page 86](#)
- ⇒ [“2.13 Removing and installing retaining plate”, page 86](#)
- ⇒ [“2.14 Removing and installing seat rail system”, page 87](#)
- ⇒ [“2.15 Assembly overview - chock holder”, page 89](#)
- ⇒ [“2.16 Removing and installing chock holder”, page 90](#)

2.1 Assembly overview - sun visors

- ⇒ [“2.1.1 Assembly overview - sun visors, vehicles with roof storage compartment”, page 55](#)
- ⇒ [“2.1.2 Assembly overview - sun visors, vehicles without roof storage compartment”, page 57](#)

2.1.1 Assembly overview - sun visors, vehicles with roof storage compartment



Note

The assembly overview is illustrated for the right side of the vehicle. The left side is analogous.



1 - Storage box

- ☐ Assembly overview
⇒ [page 30](#)
- ☐ Removing and installing
⇒ [page 40](#)

2 - Retaining clips

- ☐ Qty. 2
- ☐ Renew any damaged or deformed retaining clips.

3 - Sun visor mount

- ☐ Sun visor bracket cannot be separated from sun visor

4 - Cover

- ☐ With tether

5 - Bolt


- ☐ 3.5 Nm

6 - Sun visor

- ☐ Removing and installing
⇒ [page 67](#)

7 - Centre bearing

- ☐ Removing and installing
⇒ [page 71](#)

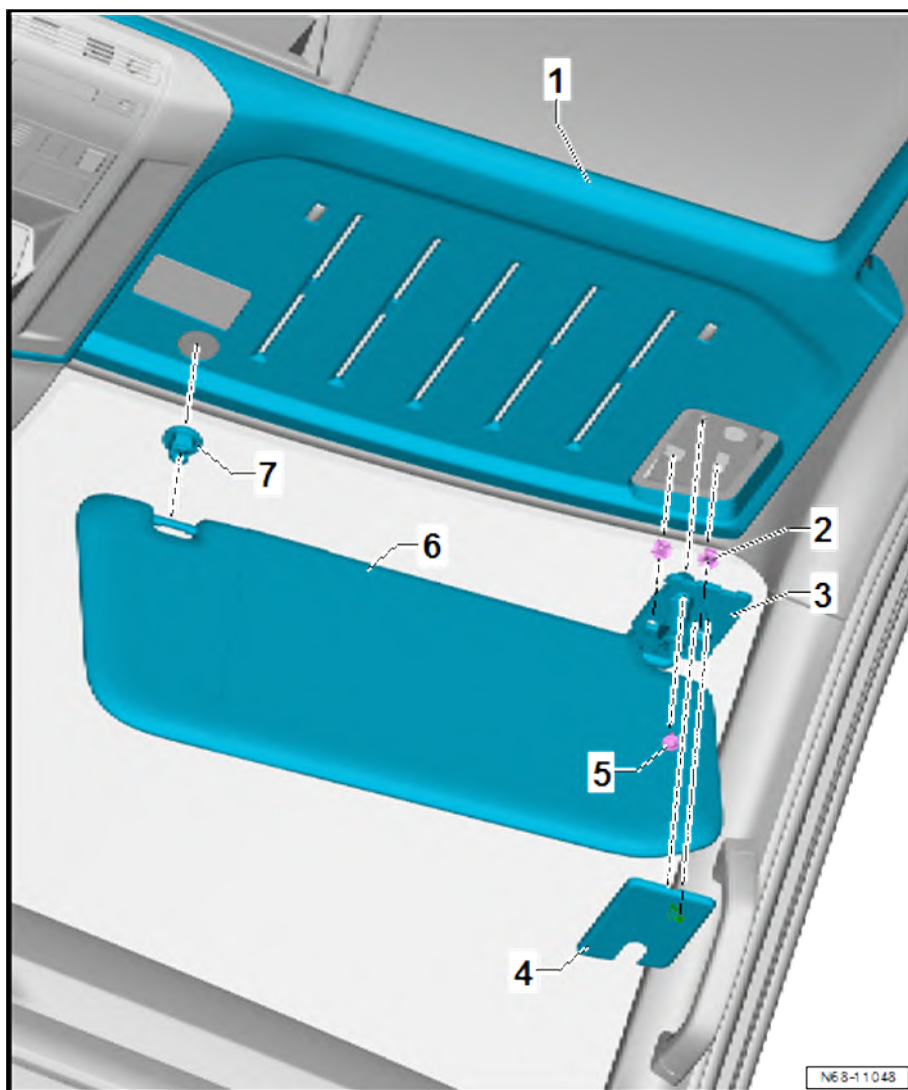



2.1.2 Assembly overview - sun visors, vehicles without roof storage compartment



Note

The assembly overview is illustrated for the right side of the vehicle. The left side is analogous.

1 - Sun visor

- ❑ Removing and installing
⇒ [page 67](#)

2 - Centre bearing

- ❑ Removing and installing
⇒ [page 71](#)

3 - Covers

- ❑ Qty. 2

4 - Bracket

- ❑ For centre bearing.
- ❑ Removing and installing
⇒ [page 71](#)

5 - Retaining clips

- ❑ Qty. 2
- ❑ Renew any damaged or deformed retaining clips.

6 - Retaining clips


- ❑ Qty. 2
- ❑ Renew any damaged or deformed retaining clips.

7 - Cover

- ❑ Sun visor bracket cannot be separated from sun visor

8 - Bolt

- ❑ 3.5 Nm

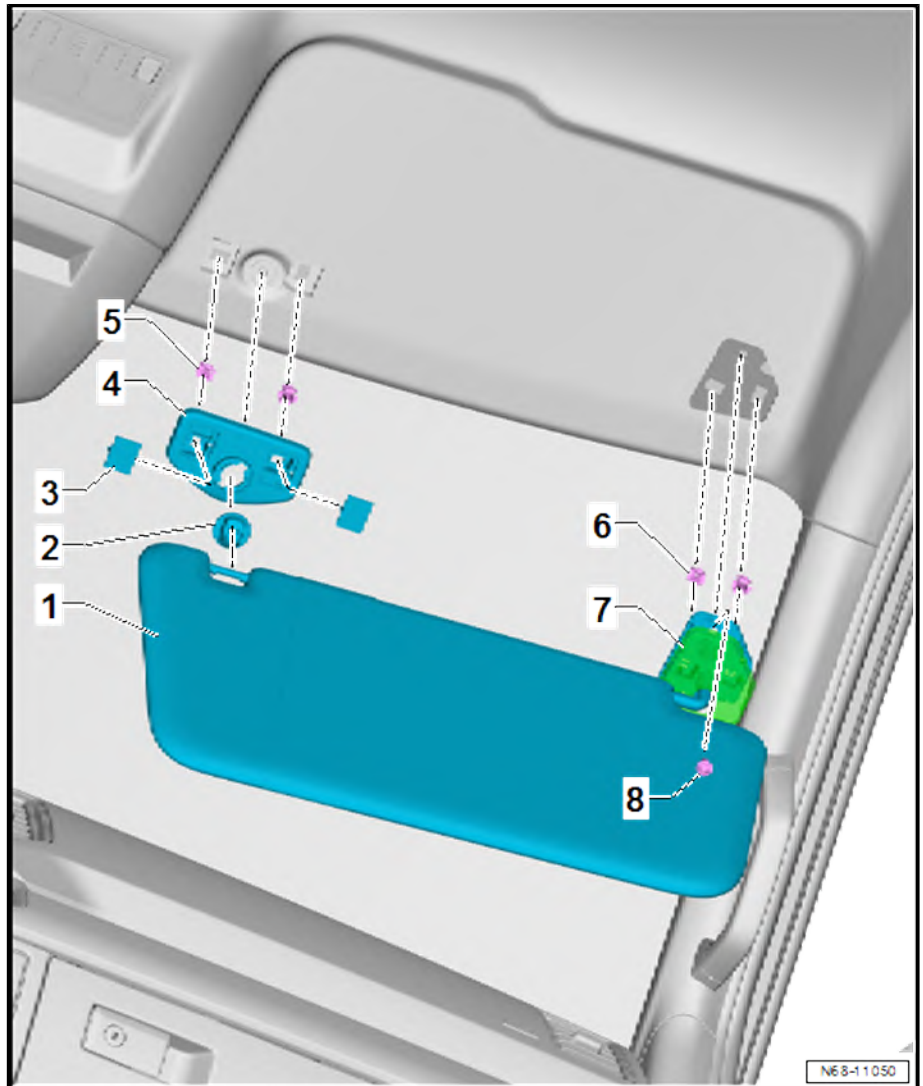



2.2 Assembly overview - grab handle

⇒ [“2.2.1 Assembly overview - grab handle, A-pillar trim”, page 58](#)

⇒ [“2.2.2 Assembly overview - grab handle, B-pillar trim”, page 59](#)

⇒ [“2.2.3 Assembly overview - grab handle, load compartment”, page 60](#)

2.2.1 Assembly overview - grab handle, A-pillar trim

1 - Handle


- ❑ Removing and installing
⇒ [page 73](#)

2 - Cover

- ❑ Removing and installing
⇒ [page 73](#)

3 - Bolts

- ❑ Qty. 2
- ❑ 6 Nm

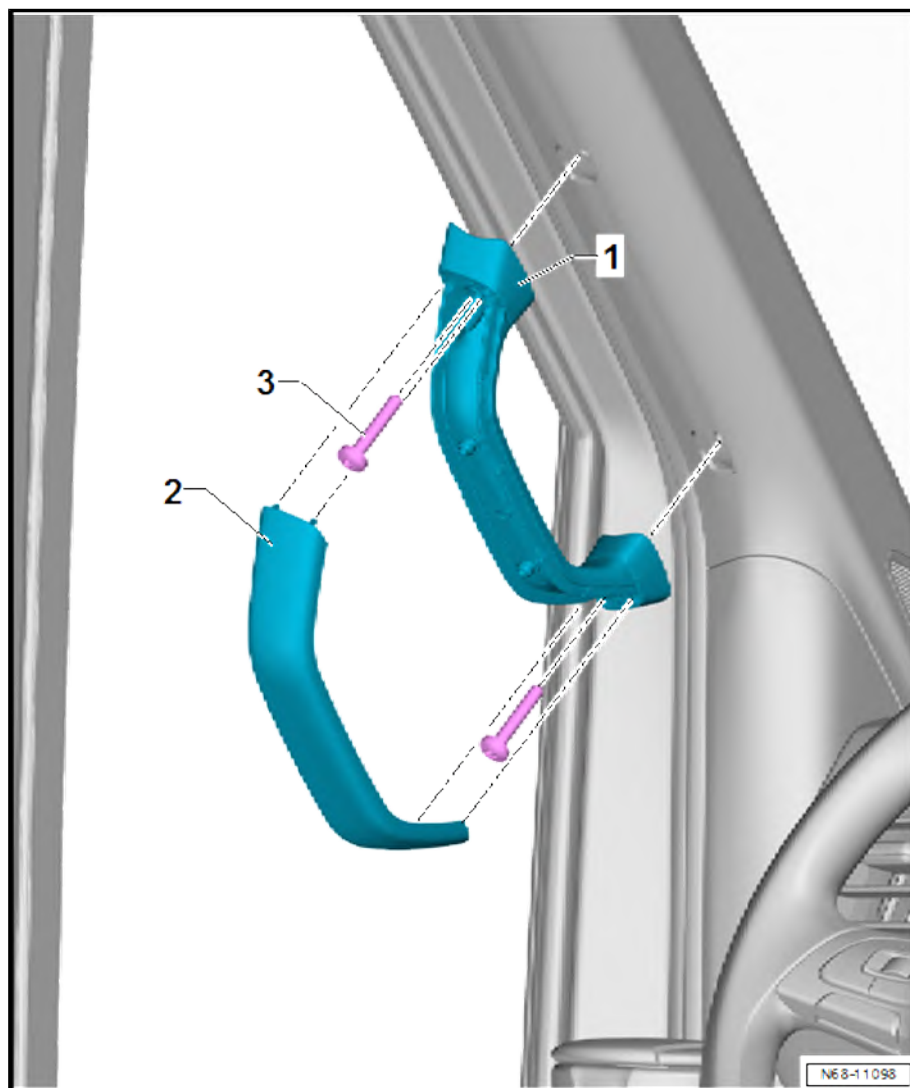



2.2.2 Assembly overview - grab handle, B-pillar trim

1 - Handle

- ❑ Removing and installing
⇒ [page 73](#)

2 - Bolts

- ❑ Qty. 2
- ❑ 8 Nm

3 - Bracket


- ❑ Removing and installing
⇒ [page 73](#)

4 - Bolts

- ❑ Qty. 2
- ❑ 6 Nm

5 - Cover

- ❑ Removing and installing
⇒ [page 73](#)

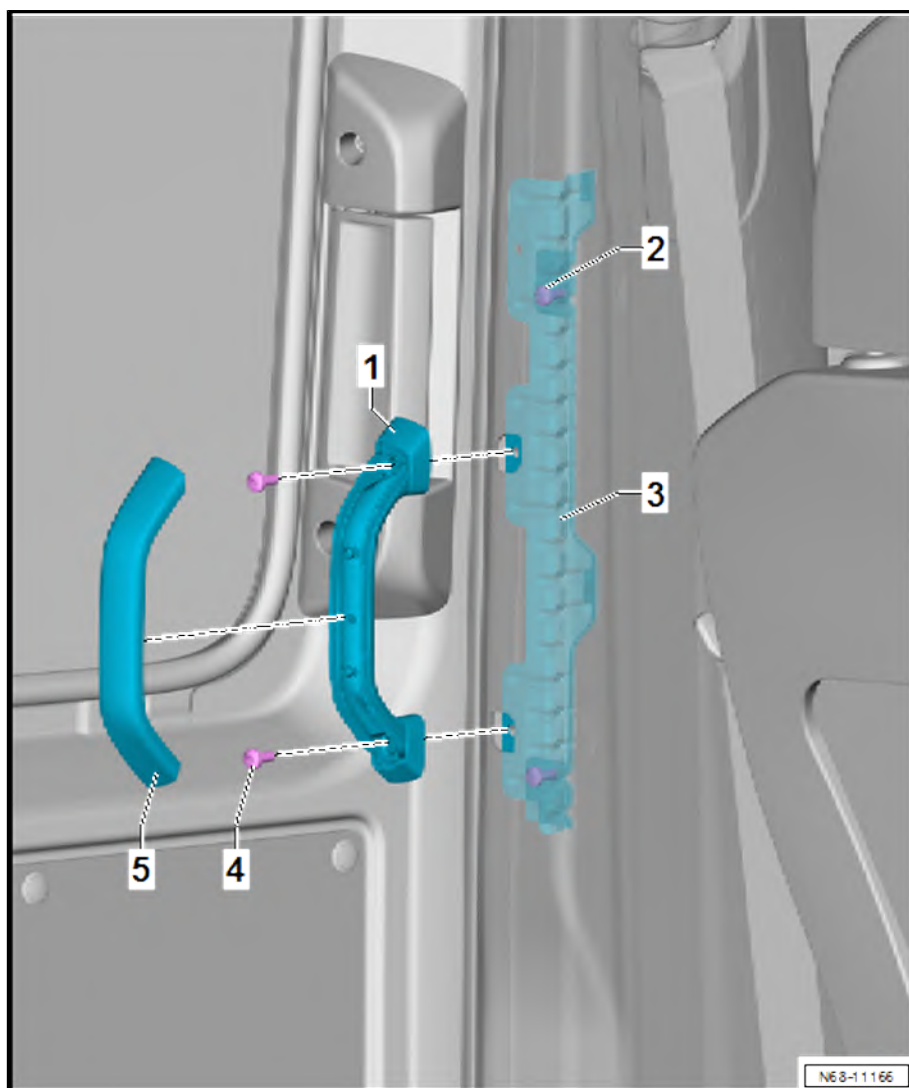



2.2.3 Assembly overview - grab handle, load compartment



Note


- ◆ The description is for vehicles with a partition panel. Adapt accordingly for vehicles without a partition panel.
- ◆ The illustration shows the grab handle on the B-pillar. The grab handles on the other pillars are basically the same.

1 - Handle

- Removing and installing
⇒ [page 73](#)

2 - Bolts

- Qty. 2
- 8 Nm

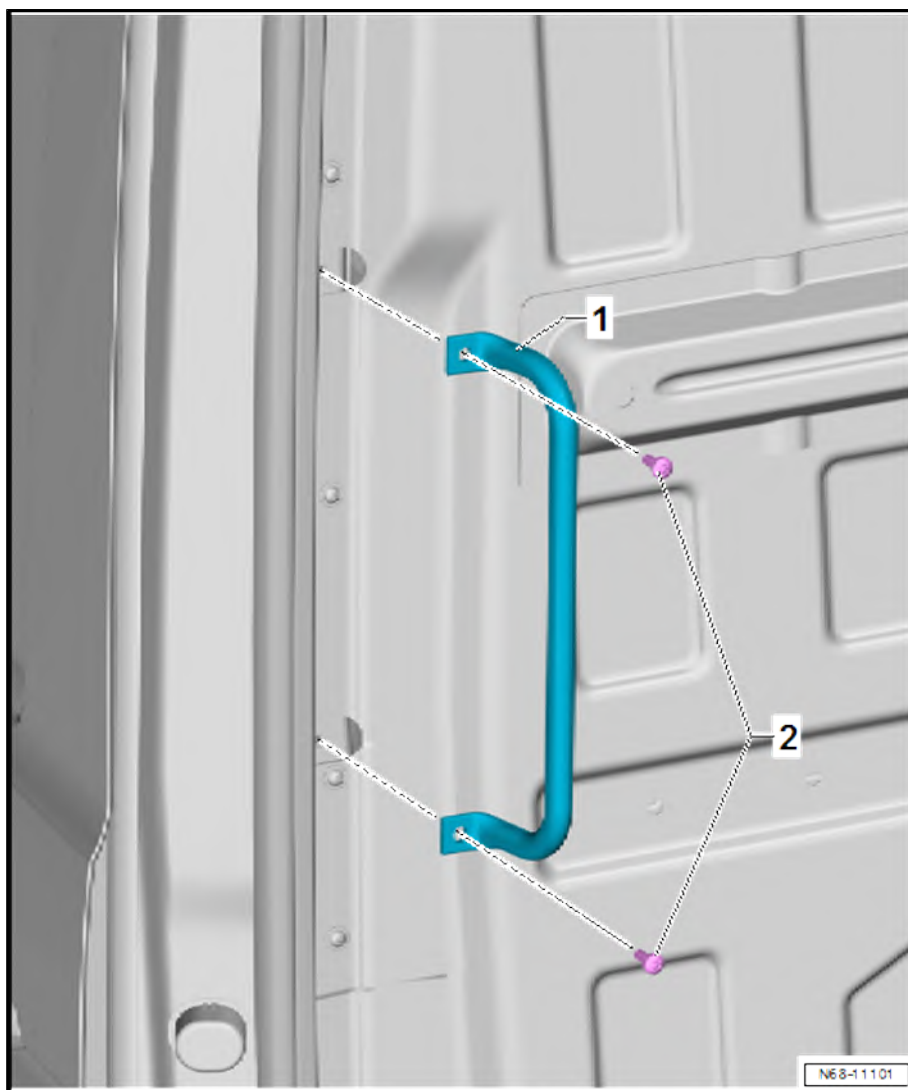



2.3 Assembly overview - partition panel



Note

- ◆ Although there are various other versions, only on equipment version is shown. Any other versions are similar.
- ◆ The description is for vehicles with a high roof. Adapt accordingly for vehicles with a different roof shape.

1 - Partition panel

- ☐ Removing and installing
⇒ [page 78](#)

2 - Pop rivets

- ☐ Vehicles with right sliding door
- ☐ Qty. 3

3 - Gap cover

- ☐ Version varies depending on equipment
- ☐ Vehicles with right sliding door
- ☐ Removing and installing
⇒ [page 78](#)

4 - Retaining strips

- ☐ Vehicles with tie rails on roof frame
- ☐ Qty. 2
- ☐ Assembly overview
⇒ [page 65](#)
- ☐ Removing and installing
⇒ [page 83](#)

5 - Bolts

- ☐ For partition panel
- ☐ Depending on equipment
- ☐ Tightening torque H2 partition ⇒ [page 62](#)
- ☐ Tightening torque H3 partition ⇒ [page 63](#)

6 - Window frame

- ☐ Removing and installing
⇒ [page 78](#)

7 - Bolts


- ☐ Qty. 14
- ☐ 3.5 Nm

8 - Partition glass

- ☐ Depending on equipment
- ☐ Removing and installing ⇒ General body repairs, exterior; Rep. gr. 64 ; Rear window; Removing and installing rear window

9 - Gap cover

- ☐ Vehicles with left sliding door
- ☐ Removing and installing ⇒ [page 78](#)

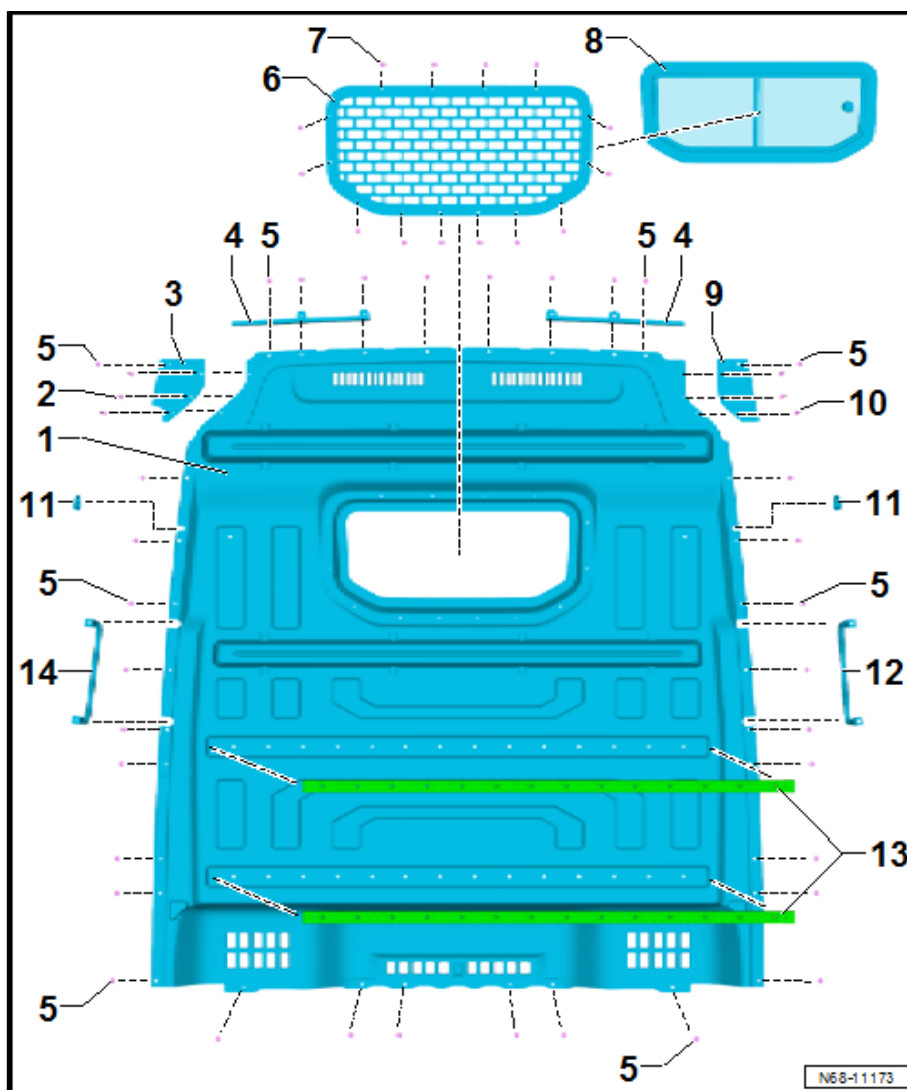



10 - Pop rivets

- ☐ Vehicles with left sliding door
- ☐ Qty. 3

11 - Coat hook

- ☐ Removing and installing ⇒ [page 86](#)

12 - Load compartment grab handle

- ☐ Vehicles with right sliding door
- ☐ Assembly overview ⇒ [page 58](#)
- ☐ Removing and installing ⇒ [page 73](#)

13 - Partition tie rails

- ☐ Depending on equipment
- ☐ Assembly overview ⇒ [page 65](#)
- ☐ Removing and installing ⇒ [page 83](#)

14 - Load compartment grab handle

- ☐ Vehicles with left sliding door
- ☐ Assembly overview ⇒ [page 58](#)
- ☐ Removing and installing ⇒ [page 73](#)

Tightening torque H2 partition




1 - Bolts

- Qty. 16
- 5 Nm

2 - Bolts

- Qty. 14
- 6 Nm

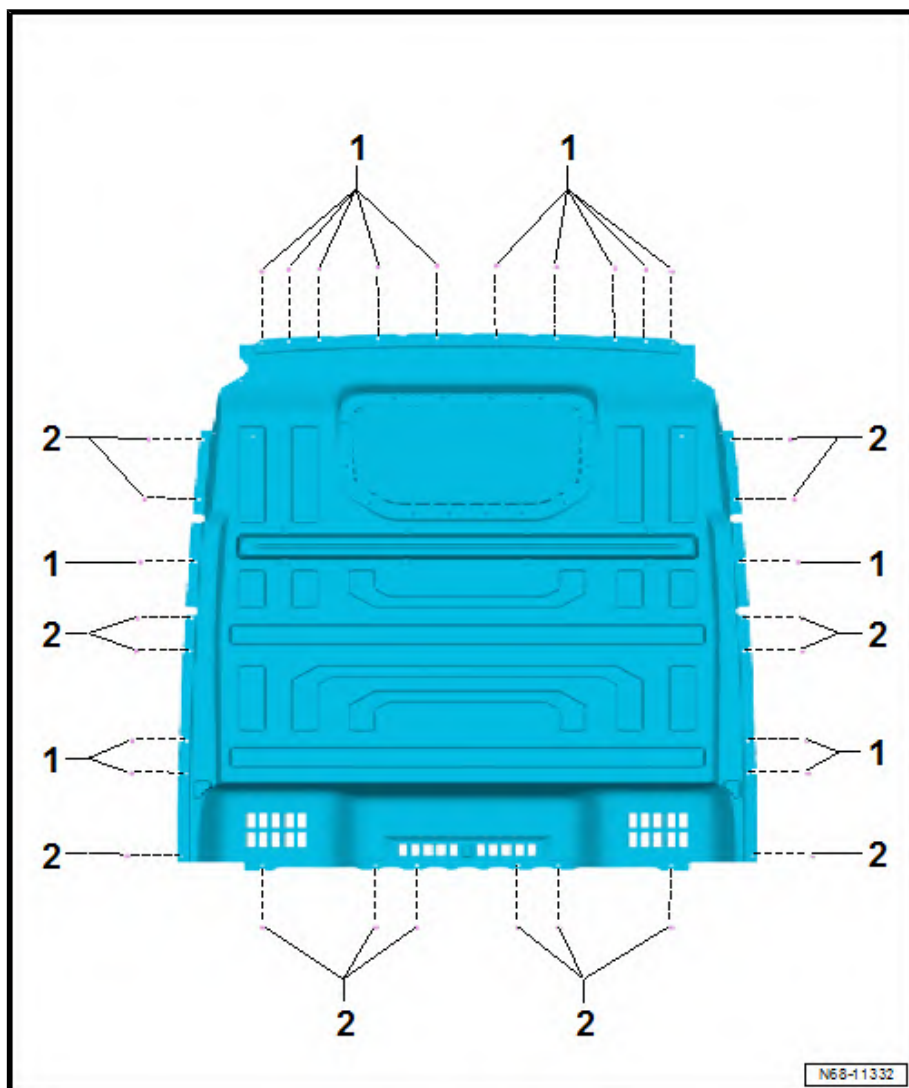

Tightening torque H3 partition




1 - Bolts

- Qty. 14
- 5 Nm

2 - Bolts

- Qty. 18
- 6 Nm

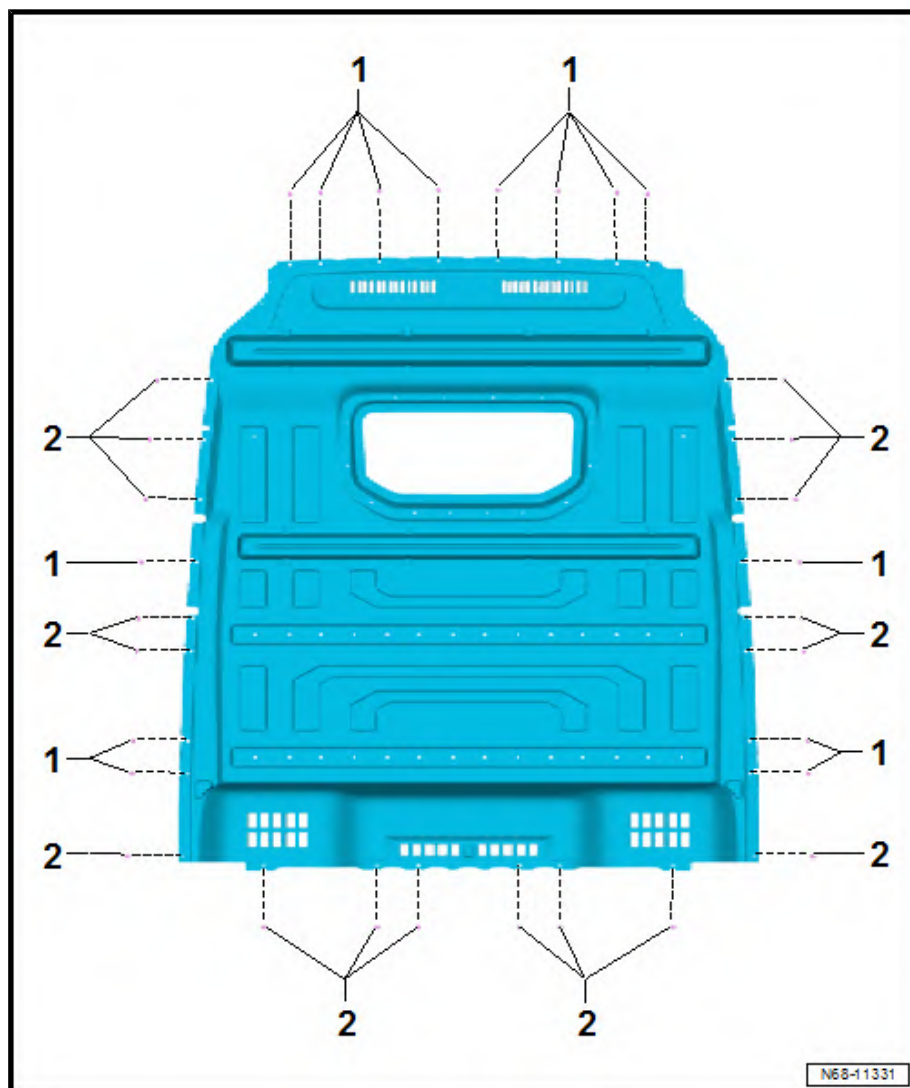



2.4 Assembly overview - tie rails



Note

- ◆ Although there are various other versions, only on equipment version is shown. Any other versions are similar.
- ◆ Assembly procedure applies to left side of vehicle. The right side is analogous.
- ◆ The description is for vehicles with a high roof and short wheelbase. Adapt accordingly for vehicles with a different roof shape or wheelbase.

1 - Roof tie rails

- ☐ On outside
- ☐ Qty. 2
- ☐ On inside
- ☐ Qty. 2
- ☐ Removing and installing
⇒ [page 83](#)

2 - Blind rivet nut

- ◆ Short wheelbase: qty. 174
- ◆ Medium wheelbase: qty. 194
- ◆ Long wheelbase: qty. 212

3 - Bolts

- ☐ Qty. 4
- ☐ 6 Nm

4 - Retaining strips

- ☐ Qty. 2
- ☐ Removing and installing
⇒ [page 83](#)

5 - Bolts


- ☐ On outside
- ☐ Qty. 8
- ☐ On inside
- ◆ Short wheelbase: qty. 14
- ◆ Medium wheelbase: qty. 18
- ◆ Long wheelbase: qty. 20
- ☐ 12 Nm

6 - Side panel tie rails

- ◆ Short and medium wheelbase: qty. 12
- ◆ Long wheelbase: qty. 16
- ☐ Removing and installing ⇒ [page 83](#)

7 - Bolts

- ◆ Short wheelbase: qty. 120
- ◆ Medium wheelbase: qty. 136
- ◆ Long wheelbase: qty. 152
- ☐ 8 Nm

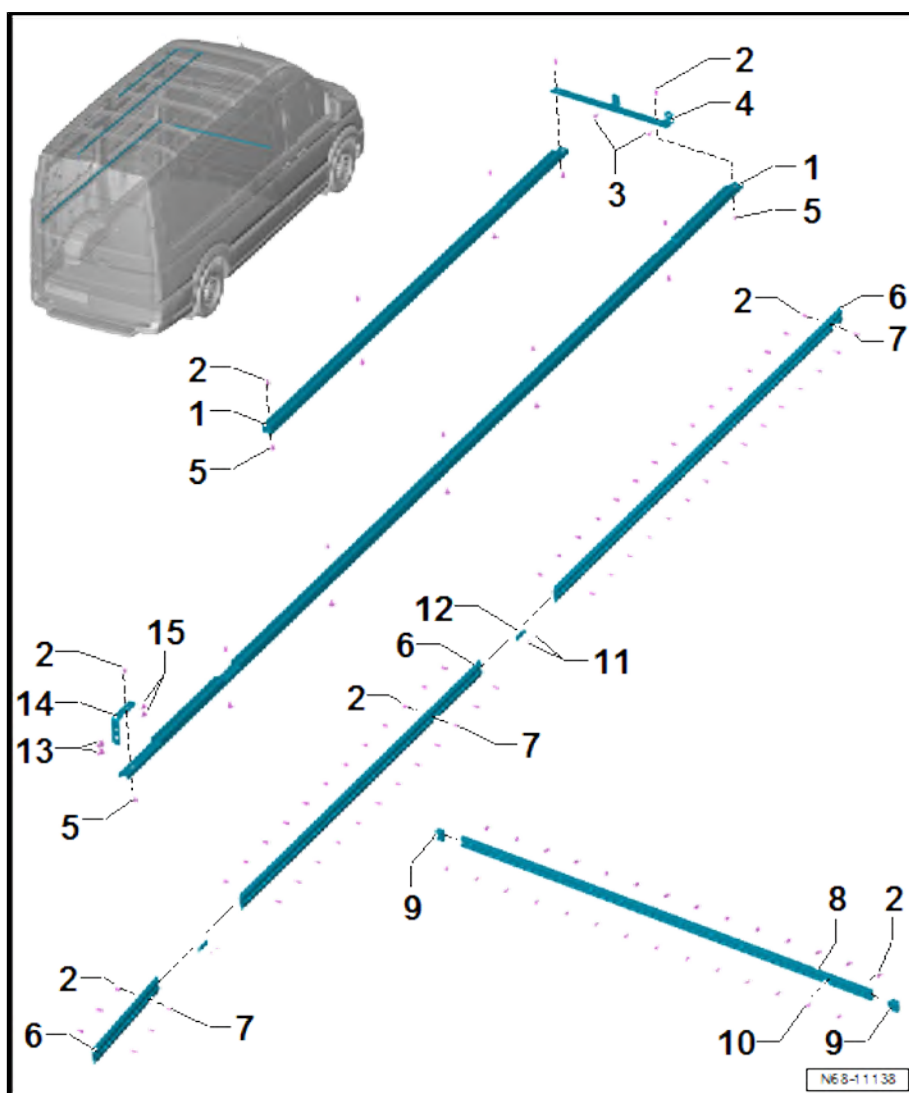



8 - Partition tie rails

- ☐ Qty. 2
- ☐ Removing and installing ⇒ [page 83](#)

9 - End caps

- ☐ Qty. 4

10 - Bolts

- ☐ Qty. 28
- ☐ 8 Nm

11 - Bolts

- ◆ Short and medium wheelbase: qty. 16
- ◆ Long wheelbase: qty. 24
 - ☐ 6 Nm

12 - Adapter

- ◆ Short and medium wheelbase: qty. 8
- ◆ Long wheelbase: qty. 12

13 - Blind rivet nut

- ☐ Qty. 4

14 - Bracket

- ☐ Qty. 2
- ☐ Removing and installing ⇒ [page 83](#)

15 - Bolts

- ☐ Qty. 4
- ☐ 12 Nm



2.5 Assembly overview - seat rail systems



Note

Although there are various other versions, only one equipment version is shown. Any other versions are similar.

1 - Seat rails

- ☐ Qty. 6
- ☐ Removing and installing
⇒ [page 87](#)

2 - Bolts

- ☐ Quantity varies depending on equipment
- ☐ 50 Nm

3 - Cover


- ☐ Front seat rail
- ☐ Removing and installing
⇒ [page 87](#)

4 - Cover

- ☐ Rear seat rail
- ☐ Removing and installing
⇒ [page 87](#)

5 - Caps

- ☐ Quantity varies depending on equipment
- ☐ Caps are only fitted where no seat is installed.
- ☐ Removing and installing
⇒ [page 87](#)

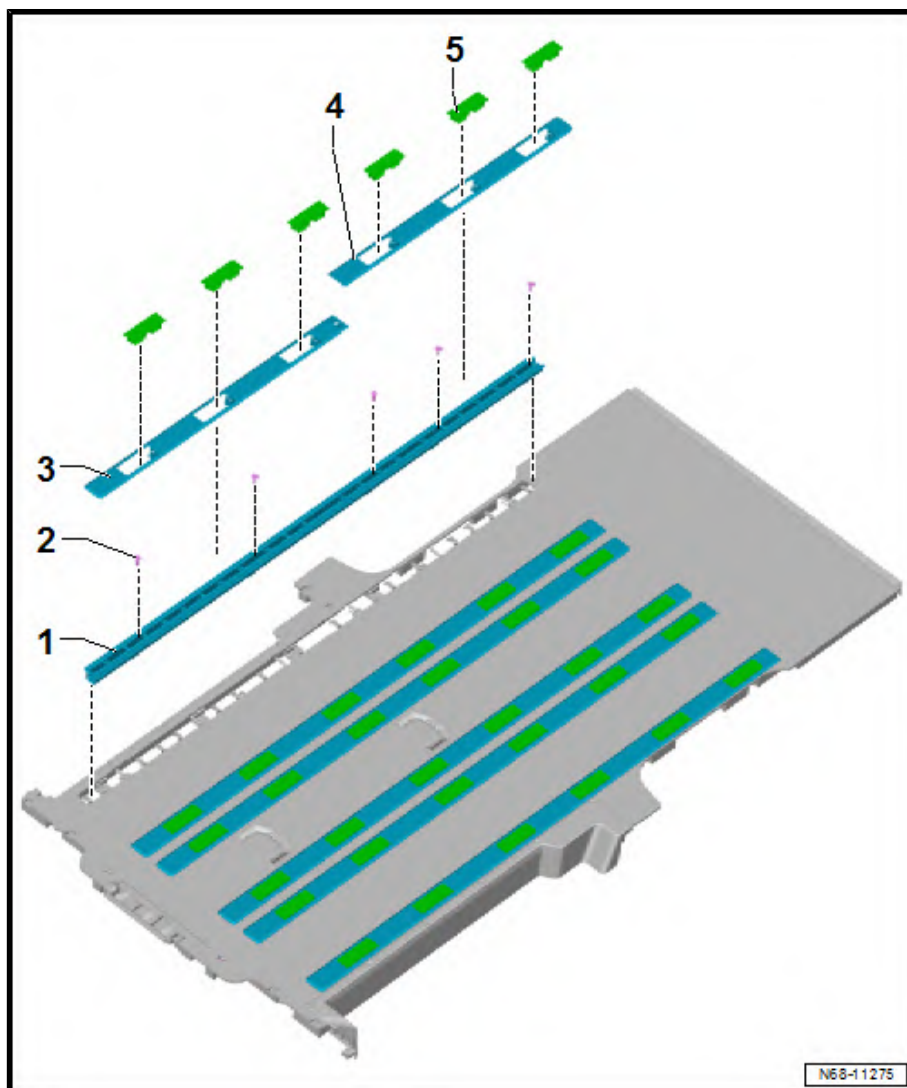

2.6 Removing and installing sun visor

⇒ [“2.6.1 Removing and installing sun visor, vehicles with roof storage compartment”, page 67](#)

⇒ [“2.6.2 Removing and installing sun visor, vehicles without roof storage compartment”, page 69](#)

2.6.1 Removing and installing sun visor, vehicles with roof storage compartment

Special tools and workshop equipment required




◆ Removal wedge - 3409-



◆ Release pliers - T10558-



◆ Release pliers - VAS 6427-

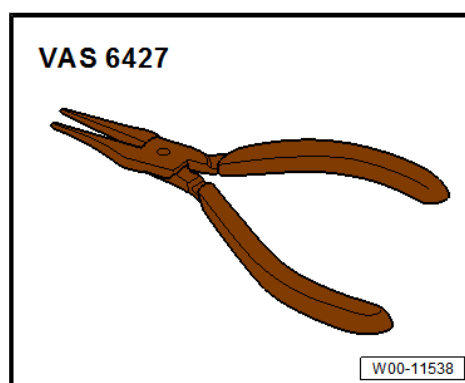


◆ Torque wrench - V.A.G 1783-






Removing

- Swing sun visor towards front.
- Detach sun visor -1- from centre mount -2- on storage compartment -3-.
- Use removal wedge - 3409- to lever out sun visor bracket cover -7-.
- Leave sun visor bracket cover -7- with tether -6- on vehicle.
- Unscrew bolt -5-.

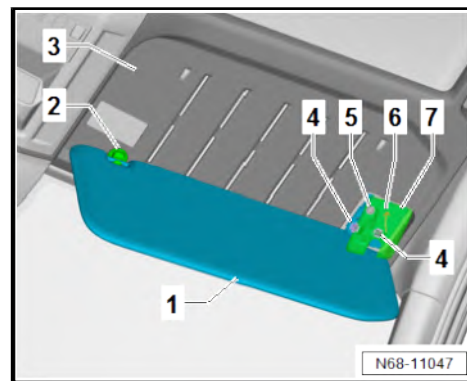

Note

- ◆ *To release retaining clips -4-, release pliers - VAS 6427- can also be used as an alternative.*
- ◆ *When carrying out the steps below, ensure that release pliers - T10558- are positioned centrally in retaining clips.*
- Turn sun visor bracket cover until left retaining clip is accessible.
- Use release pliers - T10558- -2- to release left retaining clip -3- from body mounting.
- Hold sun visor -1- under tension so that left retaining clip -3- does not engage again unintentionally.
- Turn sun visor bracket cover until right retaining clip -3- is accessible.
- Use release pliers - T10558- -2- to release right retaining clip -3- from body mounting.
- Remove sun visor with sun visor bracket -1- downwards.

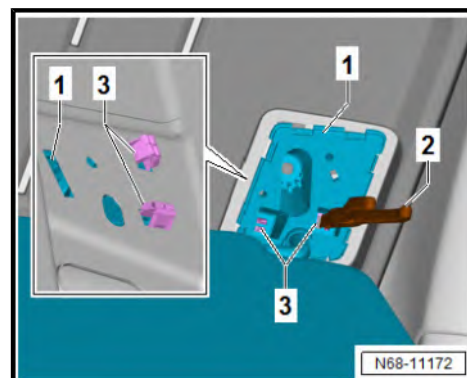

Installing

Install in reverse order of removal, observing the following:

- Ensure that both retaining clips are properly engaged in body.

Specified torques

- ◆ ⇒ [“2.1 Assembly overview - sun visors”, page 55](#)

2.6.2 Removing and installing sun visor, vehicles without roof storage compartment

Special tools and workshop equipment required

- ◆ Removal wedge - 3409-






◆ Release pliers - T10558-



◆ Release pliers - VAS 6427-

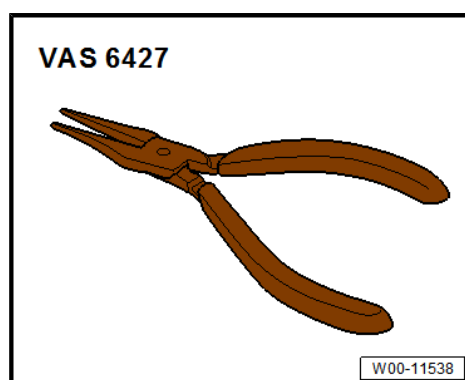

◆ Torque wrench - V.A.G 1783-





Removing



- Swing sun visor towards front.
- Detach sun visor -1- from centre mount -2-.
- Use removal wedge - 3409- to lever out sun visor bracket cover -5-.
- Leave sun visor bracket cover -5- on vehicle.
- Unscrew bolt -4-.



Note

- ◆ *To release retaining clips -3-, release pliers - VAS 6427- can also be used as an alternative.*
- ◆ *When carrying out the steps below, ensure that release pliers - T10558- are positioned centrally in retaining clips.*

- Turn sun visor bracket cover until left retaining clip is accessible.
- Use release pliers - T10558- -2- to release left retaining clip -3- from body mounting.
- Hold sun visor -1- under tension so that left retaining clip -3- does not engage again unintentionally.
- Turn sun visor bracket cover until right retaining clip -3- is accessible.
- Use release pliers - T10558- -2- to release right retaining clip -3- from body mounting.
- Remove sun visor with sun visor bracket -1- downwards.

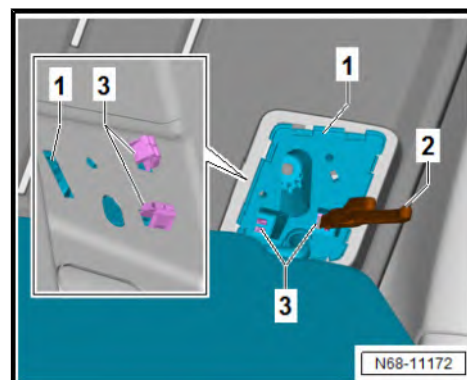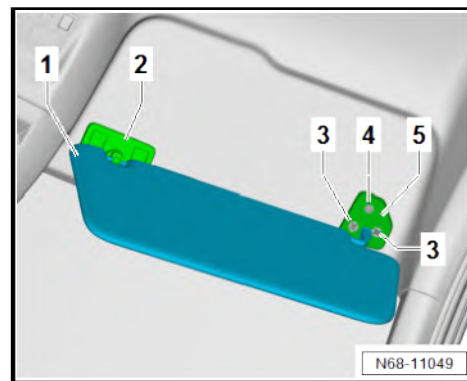

Installing

Install in reverse order of removal, observing the following:

- Ensure that both retaining clips are properly engaged in body.

Specified torques

- ◆ ⇒ [“2.1 Assembly overview - sun visors”, page 55](#)

2.7 Removing and installing sun visor centre mount

⇒ [“2.7.1 Removing and installing sun visor centre mount”, page 71](#)

⇒ [“2.7.2 Removing and installing sun visor centre mount, vehicles without roof storage compartment”, page 72](#)

2.7.1 Removing and installing sun visor centre mount

Removing



Note

*The description is for vehicles with roof storage compartment.
Adapt accordingly for vehicles without roof storage compartment.*


- Swing sun visor towards front.



- Detach sun visor from centre mount.
- Turn sun visor centre mount -1- approx. 90° in direction of -arrow-.
- Remove sun visor centre mount -1- downwards from storage compartment -2-.

Installing

Install in reverse order.

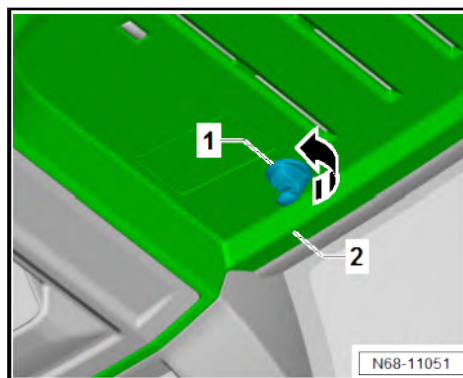


2.7.2 Removing and installing sun visor centre mount, vehicles without roof storage compartment

Special tools and workshop equipment required

- ◆ Release pliers - T10558-



- ◆ Release pliers - VAS 6427-

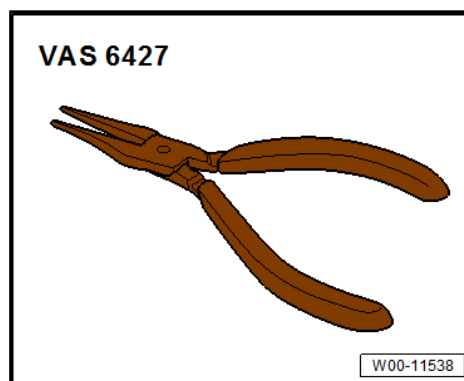



Removing

- Swing sun visor towards front.
- Detach sun visor from centre mount.
- Lever out caps -3- from sun visor centre mount holder -1-.



Note


- ◆ *To release retaining clips -2-, release pliers - VAS 6427- can also be used as an alternative.*
- ◆ *When carrying out the steps below, ensure that release pliers - T10558- are positioned centrally in retaining clips.*

- Release left retaining clip -2- from body mounting using release pliers - T10558- .
- Hold holder for sun visor centre mount -1- »taut« lightly so that retaining clip -2- does not engage again unintentionally.
- Release right retaining clip -2- from body mounting using release pliers - T10558- .
- Remove holder for sun visor centre mount -1- downwards.

Installing

Install in reverse order of removal, observing the following:

- Ensure that both retaining clips are properly engaged in body.

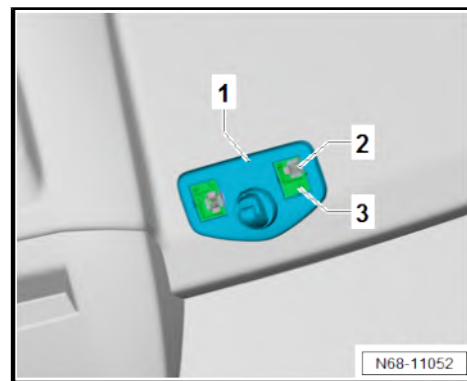

2.8 Removing and installing grab handle

⇒ [“2.8.1 Removing and installing grab handle, pillar trim”, page 73](#)

⇒ [“2.8.2 Removing and installing grab handle, load compartment”, page 74](#)

⇒ [“2.8.3 Removing and installing grab handle holder, A-pillar”, page 75](#)

⇒ [“2.8.4 Removing and installing grab handle holder, B-pillar”, page 76](#)

2.8.1 Removing and installing grab handle, pillar trim

Special tools and workshop equipment required

- ◆ Removal wedge - 3409-





- ◆ Torque wrench - V.A.G 1783-



Removing



Note

The illustration shows the grab handle on the A-pillar. The grab handles on the other pillars are basically the same.


- Use removal wedge - 3409- to unclip cap -3-.
- Unscrew bolts -2-.
- Remove handle -1-.
- If fitted, pull off coat hook from removed grab handle.

Installing

Install in reverse order of removal, observing the following:

Specified torques

- ◆ ⇒ [“2.2 Assembly overview - grab handle”, page 58](#)

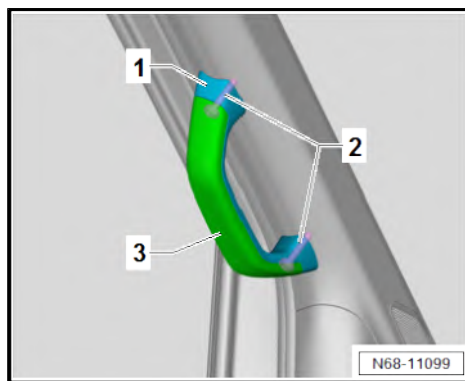

2.8.2 Removing and installing grab handle, load compartment

Special tools and workshop equipment required

- ◆ Torque wrench - V.A.G 1783-



Removing



Note

The removal and installation procedure is described for the grab handle on the B-pillar. Apply the same instructions for the grab handles on the other pillars as appropriate.




- Unscrew bolts -2-.
- Remove handle -1-.

Installing

Install in reverse order of removal, observing the following:

Specified torques


- ◆ ⇒ ["2.2 Assembly overview - grab handle", page 58](#)

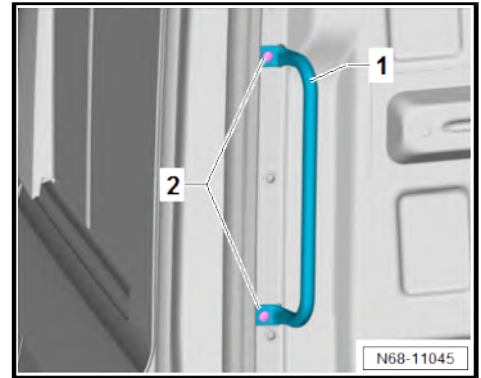


2.8.3 Removing and installing grab handle holder, A-pillar

Special tools and workshop equipment required

- ◆ Pop rivet pliers - VAS 5072A-

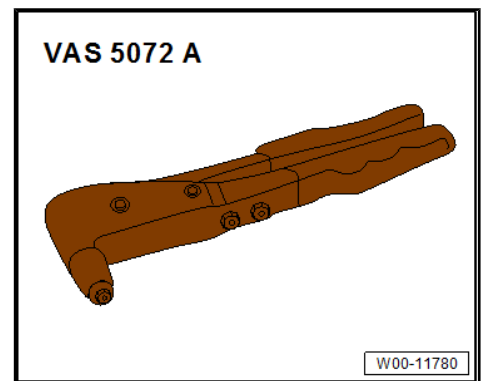

- ◆ Roll pin drift - VAS 5513-

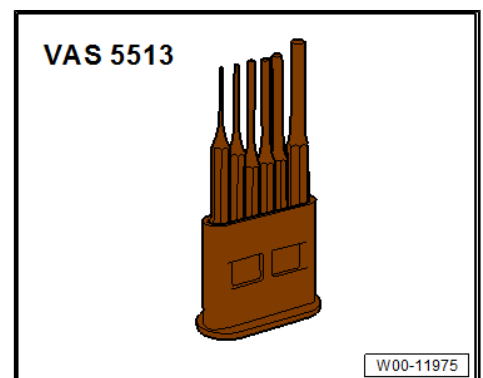

- ◆ Hand drill
- ◆ Drill bit with diameter smaller than 4.5 mm
- ◆ Safety goggles
- ◆ Safety gloves

Removing

- Remove upper A-pillar trim ⇒ [page 268](#) .



CAUTION

Risk of injury from swarf being flung into air.
Irritation and injury to skin and eyes possible.


- Wear safety goggles.
- Wear protective gloves.

- Drill off rivet heads -2- using drill and spiral drill bit with diameter less than 4.5 mm.
- Drive out rivet shanks -2- with drift - VAS 5513- .
- Remove grab handle holder -1-.
- Remove swarf.

Installing

Install in reverse order of removal, observing the following:

- Use rivet pliers - VAS 5072A- to install new pop rivets.

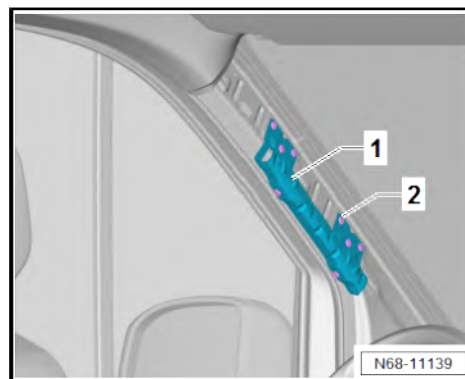

2.8.4 Removing and installing grab handle holder, B-pillar

Removing


- Remove upper B-pillar trim ⇒ [page 270](#) .
- Unscrew bolts -2-.
- Detach grab handle holder -1- from body -arrows-, and remove it.

Installing

Install in reverse order of removal, observing the following:

Specified torques

- ♦ ⇒ [“2.2 Assembly overview - grab handle”, page 58](#)

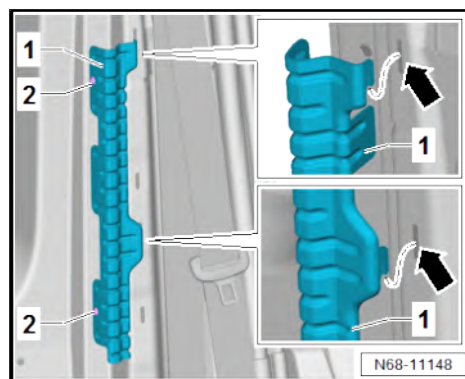

2.9 Removing and installing tool kit storage compartment

⇒ [“2.9.1 Removing and installing tool kit cover”, page 76](#)

⇒ [“2.9.2 Removing and installing tool kit storage compartment”, page 77](#)


2.9.1 Removing and installing tool kit cover

Removing

- Turn rotary fasteners -2- anti-clockwise by about 90°.
- Remove tool kit cover -1- upwards.

Installing

Install in reverse order.

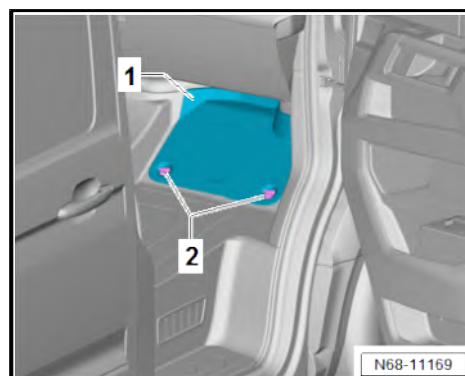




2.9.2 Removing and installing tool kit storage compartment

Special tools and workshop equipment required

- ◆ Torque wrench - V.A.G 1783-

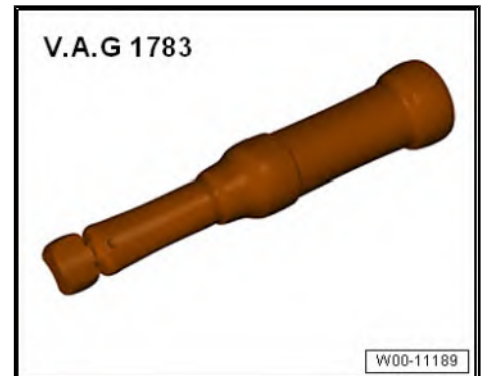

Removing

Right-hand drive vehicles

- Remove left floor covering in driver area ➔ [page 283](#) .

Left-hand drive vehicles

- Removing right floor covering in driver area ➔ [page 283](#)

Continued for all vehicles


- Remove inlay with tool kit.
- Unscrew nuts -2-.
- Remove tool kit storage compartment -1- upwards.

Installing

Install in reverse order of removal, observing the following:

Specified torques

- ◆ ➔ ["5.7 Assembly overview - foot rest and floor covering", page 260](#)

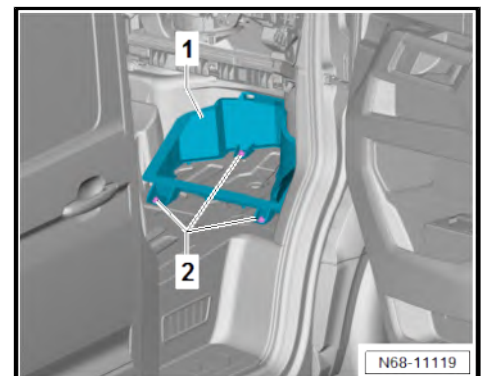



2.10 Removing and installing partition panel

⇒ [“2.10.1 Removing and installing partition panel”, page 78](#)

⇒ [“2.10.2 Removing and installing gap cover of partition panel”, page 79](#)

⇒ [“2.10.3 Removing and installing additional reinforcing element”, page 81](#)

⇒ [“2.10.4 Removing and installing window frame of partition panel”, page 82](#)

2.10.1 Removing and installing partition panel

Removing



Note

- ◆ *The description is for vehicles with a high roof and a sliding door on the right-hand side. Adapt accordingly for vehicles with a different roof shape or a sliding door on the left-hand side.*
- ◆ *On vehicles with a partition panel trim, this should remain on the partition panel.*

Vehicles with tie rails on roof frame

- Remove tie rails with brackets from roof ⇒ [page 83](#) .


Continued for all vehicles

- Remove load compartment grab handle ⇒ [page 73](#) .
- If fitted, protect glass in partition panel against damage.
- Use suitable means to protect body and surrounding components against damage.



Note

- ◆ *Do not rest the partition panel against the partition panel trim or glass.*
 - ◆ *The following work steps are described for the left-hand side of the vehicle. Removal for the right side follows the same pattern.*
- Unscrew bolts -2- underneath partition panel -1-.
 - Unscrew bolts -2- on side of partition panel -1-.

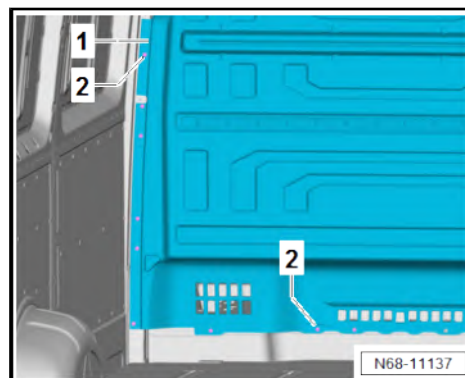



- Unscrew bolts -2- on side of partition panel -1-.
- Secure partition panel -1- using suitable workshop means to prevent it from sagging.

The help of a second mechanic is required for removal.

- Unscrew bolts -2- above partition panel -1-.
- Detach partition panel from body in straight line backwards.
- Remove partition panel towards rear, and place it on a suitable surface.

Installing

Install in reverse order of removal, observing the following:

Specified torques



- ◆ ⇒ [“2.3 Assembly overview - partition panel”, page 61](#)

2.10.2 Removing and installing gap cover of partition panel

Special tools and workshop equipment required


- ◆ Pop rivet pliers - VAS 5072A-

- ◆ Torque wrench - V.A.G 1783-

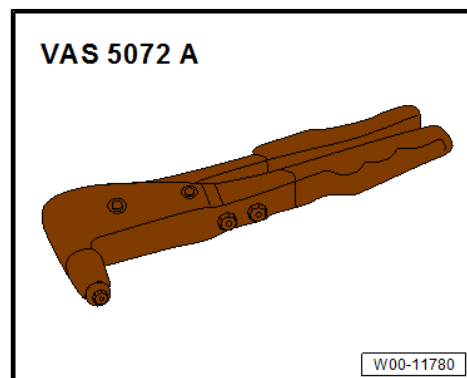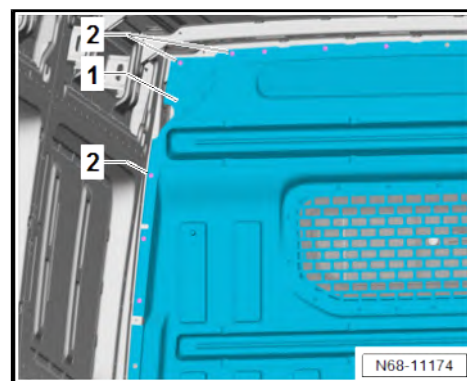



◆ Roll pin drift - VAS 5513-

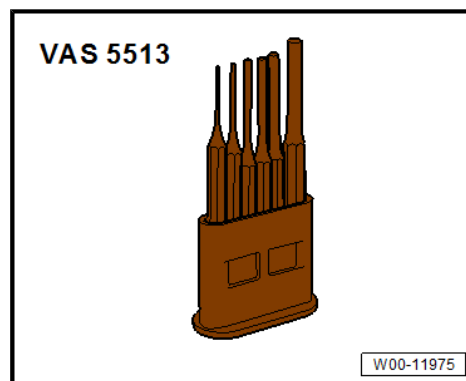

- ◆ Hand drill
- ◆ Drill bit with diameter smaller than 4.5 mm
- ◆ Safety goggles
- ◆ Safety gloves

Removing



Note

- ◆ *The description is for vehicles with a high roof. Adapt accordingly for vehicles with a different roof shape.*
- ◆ *Removal and installation are described for vehicles with a sliding door on the right-hand side. The removal and installation procedure for vehicles with left sliding door follows the same pattern.*
- Front seat must be positioned in foremost position.
- Protect side of partition panel facing driver area against being soiled by swarf.



CAUTION

**Risk of injury from swarf being flung into air.
Irritation and injury to skin and eyes possible.**

- Wear safety goggles.
- Wear protective gloves.

- Drill off rivet heads -3- using drill and spiral drill bit with diameter less than 4.5 mm.
- Drive out rivet shanks with drift - VAS 5513- .
- Remove swarf.
- Unscrew bolt -4-.
- Remove gap cover -1- from partition panel -2-.


Installing

Install in reverse order of removal, observing the following:

- Use rivet pliers - VAS 5072A- to install new pop rivets.

Specified torques

- ◆ ➔ [“2.3 Assembly overview - partition panel”, page 61](#)

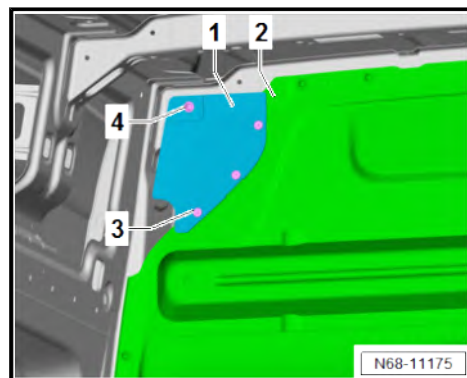





2.10.3 Removing and installing additional reinforcing element

Special tools and workshop equipment required


- ◆ Pop rivet pliers - VAS 5072A-

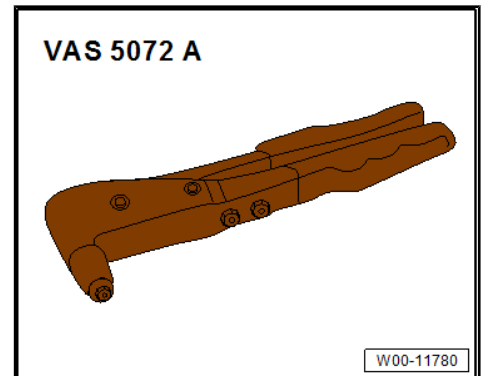

- ◆ Torque wrench - V.A.G 1783-

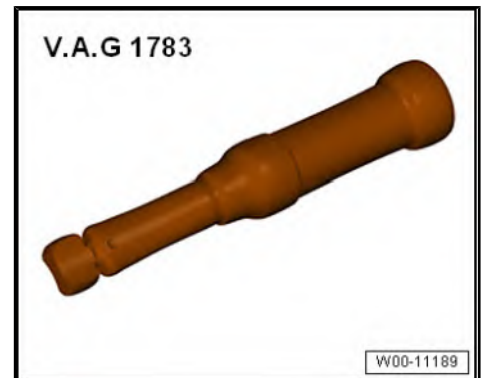

- ◆ Roll pin drift - VAS 5513-

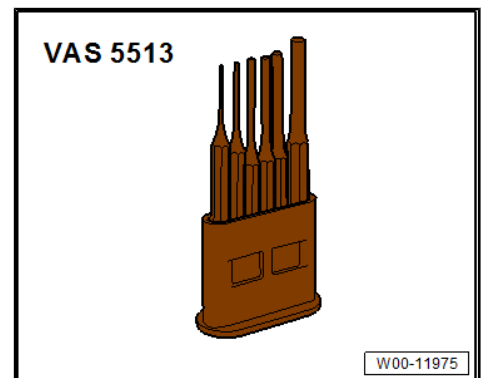

Removing

- Protect side of partition panel facing driver area against being soiled by swarf.

CAUTION

Risk of injury from swarf being flung into air.
Irritation and injury to skin and eyes possible.

- Wear safety goggles.
- Wear protective gloves.



- Drill off rivet heads -2- using drill and spiral drill bit with diameter less than 4.5 mm.
- Drive out rivet shanks with drift - VAS 5513- .
- Remove swarf.
- Unscrew bolt -3-.
- Remove reinforcing element -1-.


Installing

Install in reverse order of removal, observing the following:

- Use rivet pliers - VAS 5072A- to install new pop rivets.

Specified torques

- ♦ ⇒ ["2.3 Assembly overview - partition panel", page 61](#)

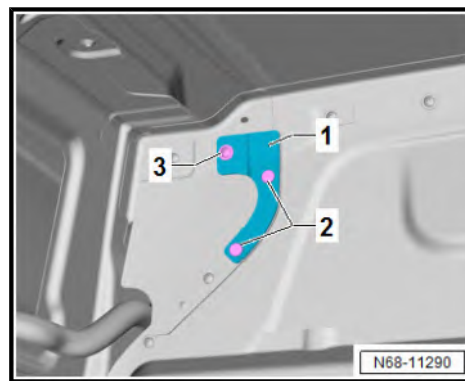

2.10.4 Removing and installing window frame of partition panel

Special tools and workshop equipment required

- ♦ Torque wrench - V.A.G 1783-



Removing


- Unscrew bolts -2-.
- Remove window frame -1- from partition panel.

Installing

Install in reverse order of removal, observing the following:

Specified torques

- ♦ ⇒ ["2.3 Assembly overview - partition panel", page 61](#)

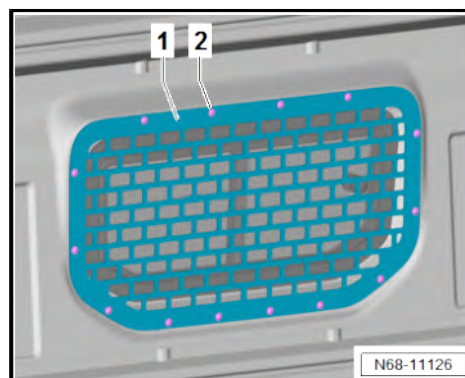



2.11 Removing and installing tie rail

⇒ [“2.11.1 Removing and installing tie rail, partition panel”, page 83](#)

⇒ [“2.11.2 Removing and installing tie rail, side panel”, page 83](#)

⇒ [“2.11.3 Removing and installing tie rail, roof”, page 84](#)

⇒ [“2.11.4 Removing and installing tie rail, floor”, page 85](#)

⇒ [“2.11.5 Removing and installing folder for tie rail, roof”, page 85](#)

2.11.1 Removing and installing tie rail, partition panel

Special tools and workshop equipment required

- ◆ Torque wrench - V.A.G 1783-

Removing


- Unscrew bolts -3-.
- Remove tie rail of partition panel -1- from partition panel.
- Pull off end caps -2- from tie rail of partition panel -1-.

Installing

Install in reverse order of removal, observing the following:

Specified torques

- ◆ ⇒ [“2.4 Assembly overview - tie rails”, page 65](#)

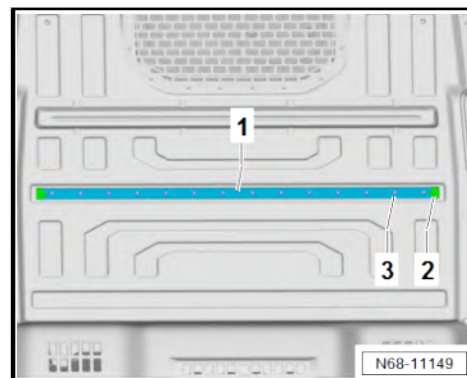

2.11.2 Removing and installing tie rail, side panel

Special tools and workshop equipment required

- ◆ Torque wrench - V.A.G 1783-






Removing



Note

*Removal and installation are described for the lower front tie rail.
The removal and installation procedure for the remaining tie rails
is basically the same.*

- Unscrew bolts -2-.
- Push adapter for side panel tie rail -1- in -direction of arrow-.

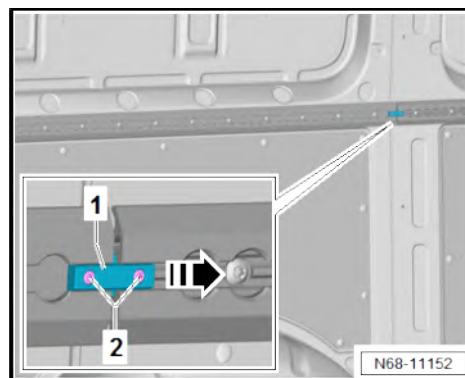


- Unscrew bolts -2-.
- Remove side panel tie rail -1-.
- Remove adapter for side panel tie rail.

Installing

Install in reverse order of removal, observing the following:

Specified torques

- ♦ ➔ [“2.4 Assembly overview - tie rails”, page 65](#)

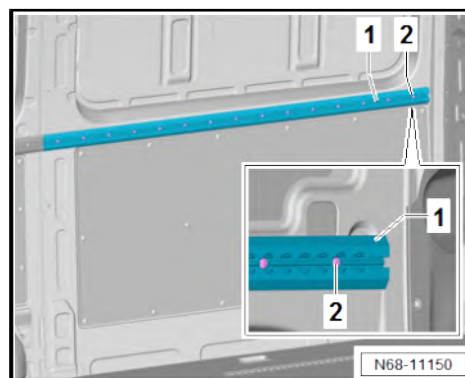

2.11.3 Removing and installing tie rail, roof

Special tools and workshop equipment required

- ♦ Torque wrench - V.A.G 1783-





Removing



Note


- ◆ *Removal and installation is described for the left vehicle side. The removal and installation procedure for the right follows the same pattern.*
- ◆ *The description is for vehicles with a high roof and short wheelbase. Adapt accordingly for vehicles with a different roof shape or wheelbase.*
- Unscrew bolts -2-.
- If fitted, remove washers.
- Remove roof tie rails -1-.

Installing

Install in reverse order of removal, observing the following:

Specified torques

- ◆ ⇒ [“2.4 Assembly overview - tie rails”, page 65](#)

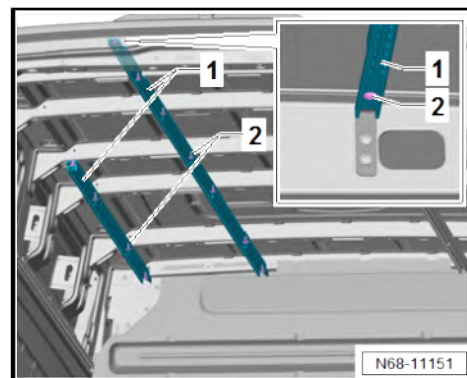

2.11.4 Removing and installing tie rail, floor

The floor tie rails are permanently secured to the floor covering.

- Removing and installing floor covering ⇒ [page 283](#) .

2.11.5 Removing and installing folder for tie rail, roof

Special tools and workshop equipment required

- ◆ Torque wrench - V.A.G 1783-



Removing



Note


The description is for vehicles with a high roof. Adapt accordingly for vehicles with a different roof shape.

- Remove respective tie rails on roof ⇒ [page 83](#) .



Holder for roof tie rails on partition panel

- Unscrew bolts -2-.
- Remove holder of roof tie rails -1- from partition panel.

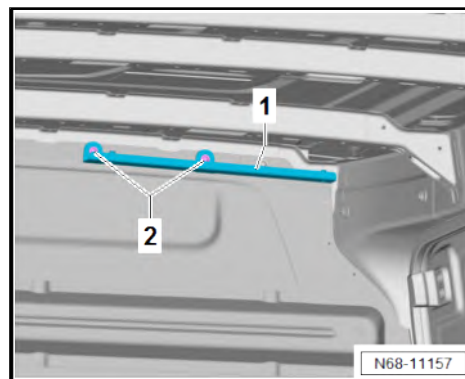

Holder for roof tie rails on D-pillar


- Unscrew bolts -2-.
- Remove holder of roof tie rails -1- from D-pillar.

Installing

Install in reverse order of removal, observing the following:

Specified torques


- ♦ ⇒ [“2.4 Assembly overview - tie rails”, page 65](#)

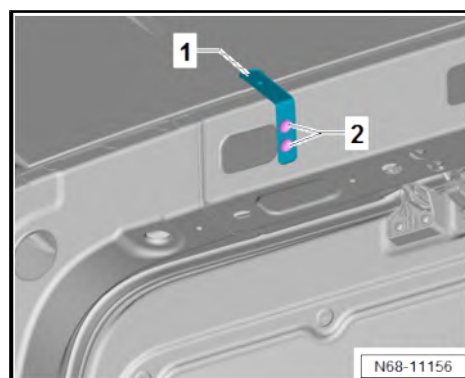

2.12 Removing and installing coat hook

Removing

- Pull off plug -3-.
- Push out pin -2-.
- Remove coat hook -1- from partition panel.

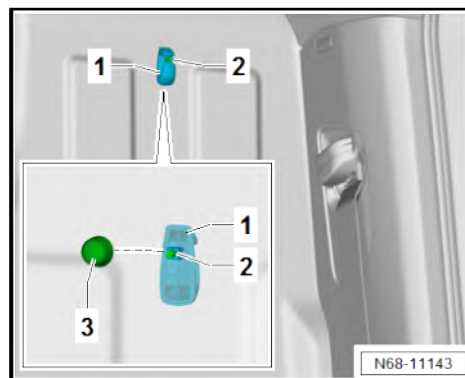


Coat hook adapter

- Pull off plug -3-.
- Push out pin -2-.
- Remove coat hook adapter -1- from partition panel.

Installing

Install in reverse order.

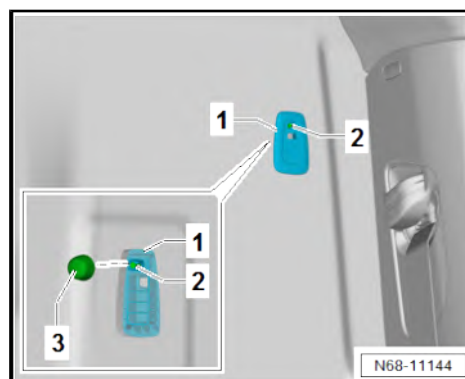


2.13 Removing and installing retaining plate

Special tools and workshop equipment required



- ◆ Torque wrench - V.A.G 1783-

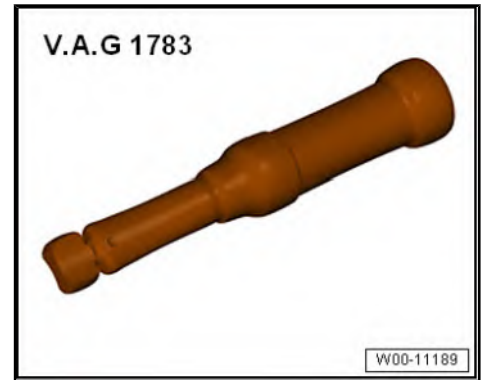

Removing



Note

Removal and installation are described for the rear right retaining plates. The removal and installation procedure for the remaining retaining plates is basically the same.


- Unscrew bolts -2-.
- Remove retaining plates -1-.

Installing

Install in reverse order of removal, observing the following:

Specified torques

- ◆ ⇒ [“5.6 Assembly overview - side trim”, page 250](#)

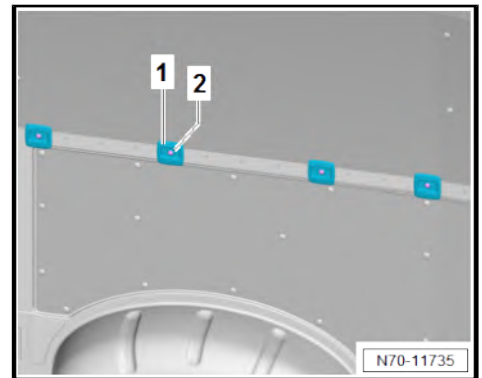

2.14 Removing and installing seat rail system

⇒ [“2.14.1 Removing and installing seat rail”, page 87](#)

⇒ [“2.14.2 Removing and installing cover”, page 88](#)

⇒ [“2.14.3 Removing and installing cap”, page 88](#)

2.14.1 Removing and installing seat rail

Special tools and workshop equipment required


- ◆ Torque wrench - V.A.G 1331-





Removing

- Remove individual seats in passenger compartment
⇒ [page 387](#) .
- Remove cover ⇒ [page 88](#) .
- Unscrew bolts -2-.
- Remove seat rail -1- upwards.

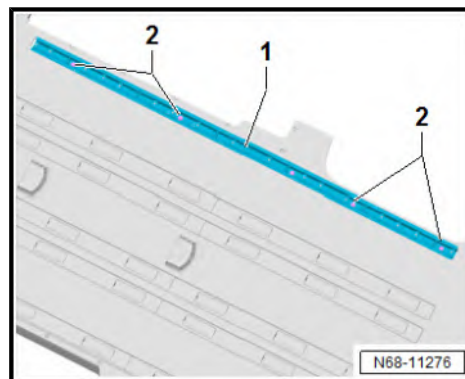

Installing

Install in reverse order of removal, observing the following:


- Insert seat rail -4- in floor.

Tightening sequence

- Tighten bolt -1-.
- Tighten bolt -2-.
- Tighten bolts -3-.

Specified torques

- ♦ ⇒ [“2.5 Assembly overview - seat rail systems”, page 67](#)

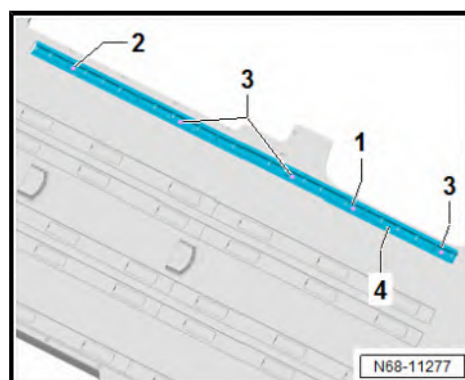

2.14.2 Removing and installing cover

Special tools and workshop equipment required

- ♦ Removal wedge - 3409-




Removing

- Use removal wedge - 3409- to unclip cover -1- in direction of -arrow-.
- Use removal wedge - 3409- to unclip cover -2- in direction of -arrow-.

Installing

Install in reverse order.

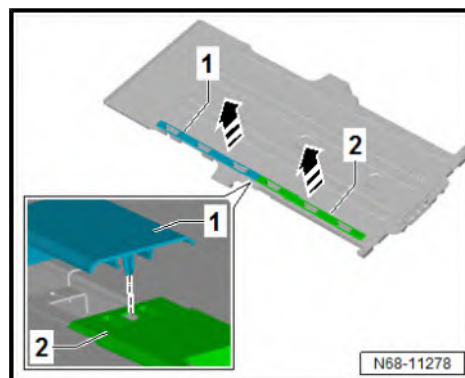

2.14.3 Removing and installing cap

Special tools and workshop equipment required




◆ Removal wedge - 3409-



Removing


- Use removal wedge - 3409- to push clip in direction of -arrow-.
- Remove cap -1-.

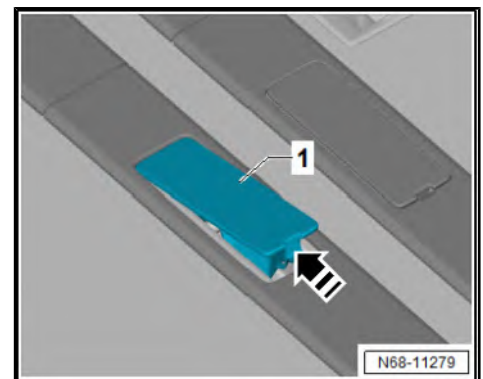

Installing

Install in reverse order of removal, observing the following:

- Engage cap -1- in recess -arrow A-.
- Clip in cap -1- downwards -arrow B-.

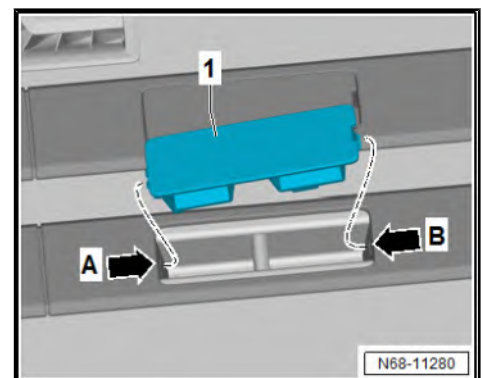

2.15 Assembly overview - chock holder



1 - Pop rivet nut


- ☐ Qty. 2 depending on equipment ⇒ Electronic parts catalogue (ETKA) or ⇒ webMANTIS for MAN TGE
- ☐ Qty. 4 depending on equipment ⇒ Electronic parts catalogue (ETKA) or ⇒ webMANTIS for MAN TGE

2 - Bolts

- ☐ Qty. 2 depending on equipment ⇒ Electronic parts catalogue (ETKA) or ⇒ webMANTIS for MAN TGE
- ☐ Qty. 4 depending on equipment ⇒ Electronic parts catalogue (ETKA) or ⇒ webMANTIS for MAN TGE
- ☐ 8 Nm

3 - Bracket

- ☐ For chock
- ☐ Depending on equipment ⇒ Electronic parts catalogue (ETKA) or ⇒ webMANTIS for MAN TGE
- ☐ Removing and installing ⇒ [page 90](#)

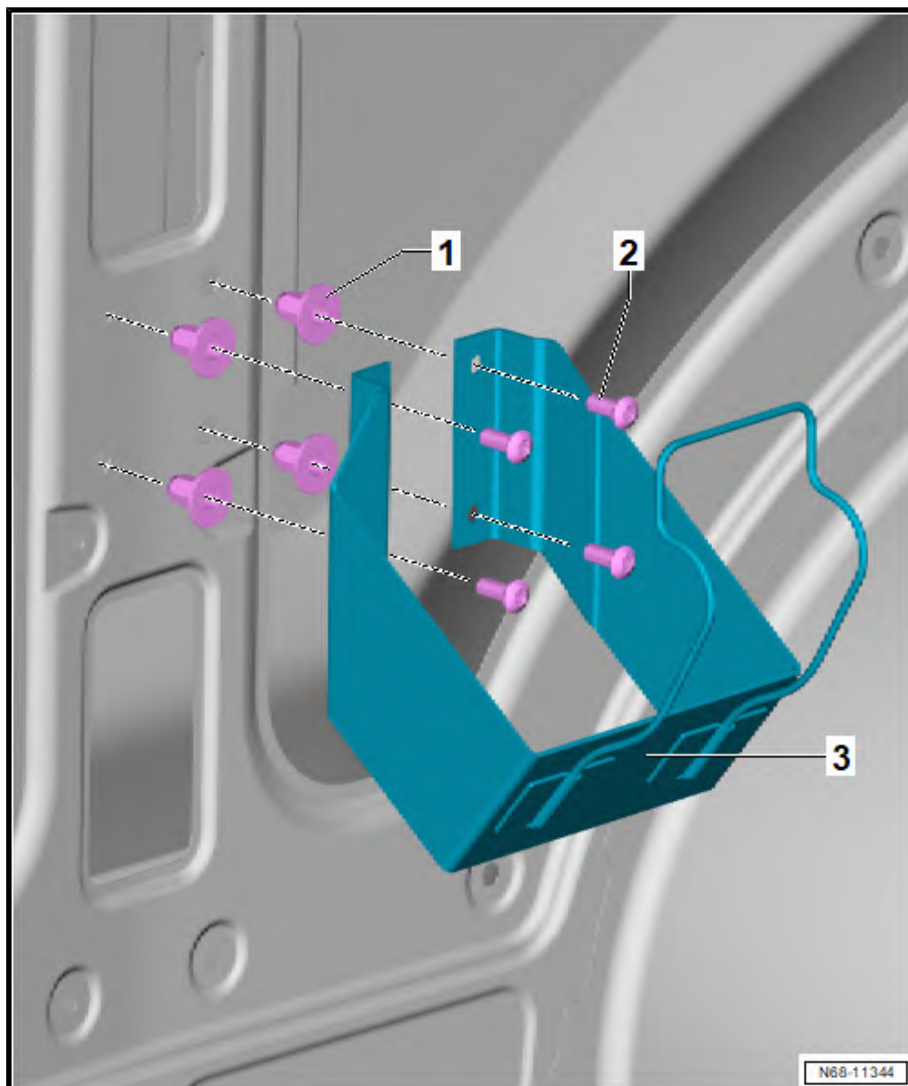

2.16 Removing and installing chock holder

Special tools and workshop equipment required

- ◆ Torque wrench - V.A.G 1783-






Removing


Version 1

- Open retaining clip -4-.
- Remove chock -3-.
- Unscrew bolts -2-.
- Remove chock holder -1-.

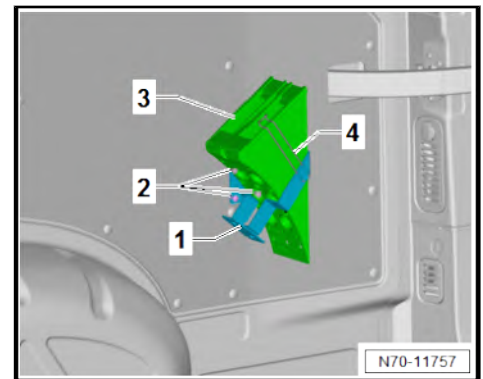

Version 2

- Open retaining clip -4-.
- Remove chock -3-.
- Unscrew bolts -2-.
- Remove chock holder -1-.

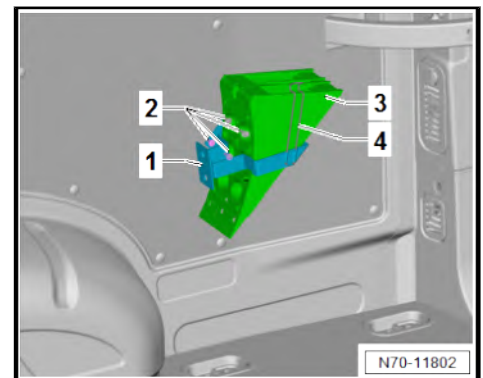

Installing

Install in reverse order of removal, observing the following:

Specified torques

- ◆ ⇒ [“2.15 Assembly overview - chock holder”, page 89](#)



3 Centre console

⇒ [“3.1 Assembly overview - centre console”, page 92](#)

⇒ [“3.2 Removing and installing cover for centre console”, page 93](#)

⇒ [“3.3 Removing and installing front ashtray”, page 93](#)

⇒ [“3.4 Removing and installing centre console front storage compartment”, page 94](#)

⇒ [“3.5 Removing and installing centre console trim in front footwell”, page 95](#)

⇒ [“3.6 Removing and installing centre console”, page 95](#)

⇒ [“3.7 Removing and installing trim for operating and display unit”, page 96](#)

⇒ [“3.8 Removing and installing coin holder”, page 97](#)

3.1 Assembly overview - centre console

1 - Centre console

- ❑ Removing and installing
⇒ [page 95](#)

2 - Bolts

- ❑ Qty. 10
- ❑ 1.5 Nm

3 - Dash panel trim panel

- ❑ Removing and installing
⇒ [page 201](#)

4 - Front storage compartment on centre console

- ❑ Removing and installing
⇒ [page 94](#)

5 - Centre console cover


- ❑ Removing and installing
⇒ [page 93](#)

6 - Cigarette lighter - U1-

- ❑ Depending on equipment
- ❑ With 12-V socket 2 - U18-
- ❑ Removing and installing
⇒ Electrical system;
General information;
Rep. gr. 96 ; 12-V socket ;
Removing and installing 12-V socket

7 - Centre console trim in front footwell

- ❑ Removing and installing
⇒ [page 95](#)

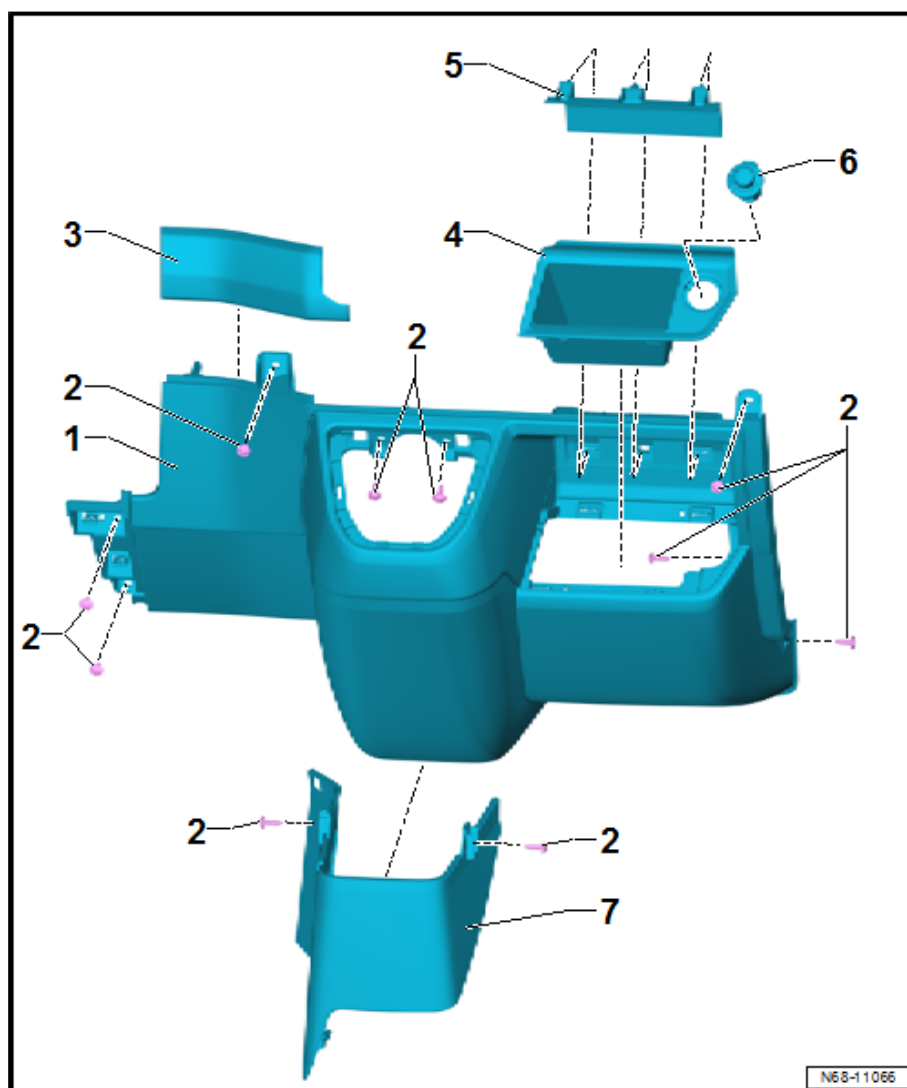

Volkswagen Technical Site: <https://vwts.ru>



3.2 Removing and installing cover for centre console


Special tools and workshop equipment required

- ◆ Removal wedge - 3409-



Removing

- Use removal wedge - 3409- to detach centre console cover -1- from fasteners -2-, and remove cover.

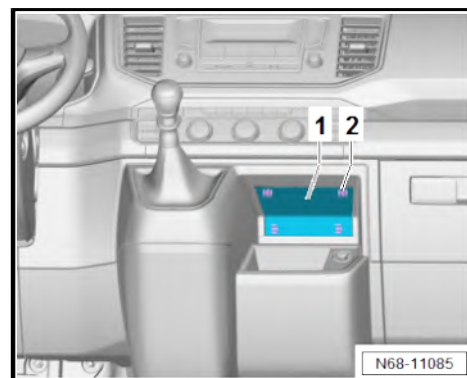


Vehicles with control elements

- Switch off ignition and all electrical consumers.
- Withdraw ignition key.
- Separate electrical connectors -2- from controls in centre console cover -1-.

Installing

Install in reverse order.

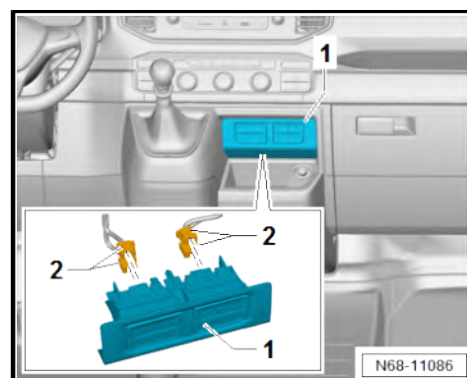

3.3 Removing and installing front ashtray

Ashtray in centre console

- The removal and installation procedure for the ashtray in the centre console is the same as that for the front centre console storage compartment ➔ [page 94](#) .




Ashtray in dash panel

Removing

- Remove front ashtray -1- in direction of -arrow-.

Installing

Install in reverse order.

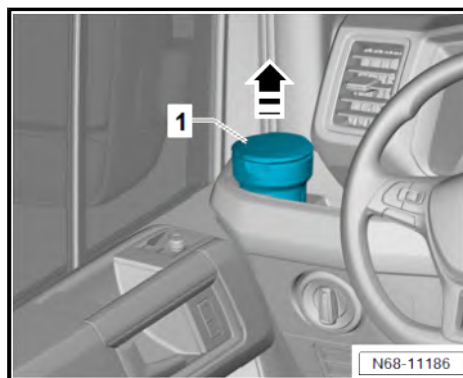

3.4 Removing and installing centre console front storage compartment

Special tools and workshop equipment required

- ◆ Removal wedge - 3409-




Removing

Vehicles with control elements in centre console cover

- Remove centre console cover ⇒ [page 93](#) .

Continued for all vehicles

- Use removal wedge - 3409- to detach front centre console storage compartment -1- from fasteners -2-, and remove storage compartment.

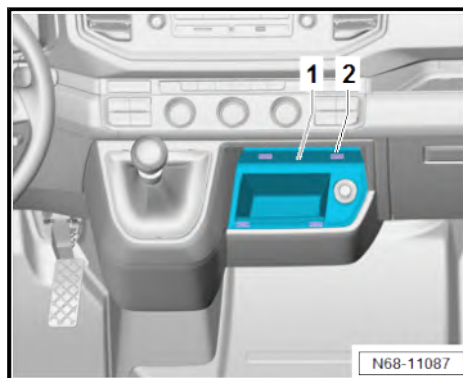




Vehicles with cigarette lighter or 12-V socket

- Switch off ignition and all electrical consumers.
- Withdraw ignition key.
- Disconnect electrical connector -2- from cigarette lighter - U1- -1-.

Installing

Install in reverse order.

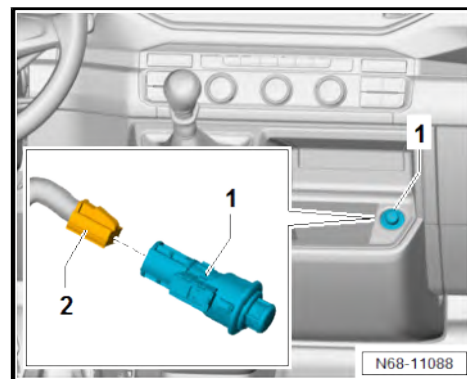

3.5 Removing and installing centre console trim in front footwell

Removing


- Remove centre console ⇒ [page 95](#) .
- Unscrew bolts -2-.
- Unclip centre console trim in front footwell -1- from fasteners -3-, and remove it.

Installing

Install in reverse order of removal, observing the following:

Specified torques

- ◆ ⇒ [“3.1 Assembly overview - centre console”, page 92](#)

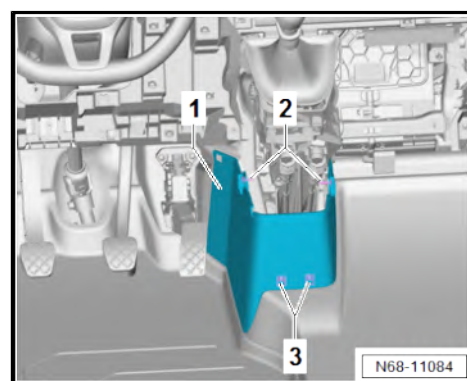

3.6 Removing and installing centre console

Special tools and workshop equipment required

- ◆ Removal wedge - 3409-



Removing

Vehicles with automatic gearbox

- Remove selector lever handle ⇒ Rep. gr. 37 ; Selector mechanism; Removing and installing selector lever handle .

Vehicles with manual gearbox

- Remove selector lever handle ⇒ Rep. gr. 34 ; Selector mechanism; Removing and installing selector lever handle .

Continued for all vehicles


- Remove dash panel cover on driver side ⇒ [page 32](#) .
- Remove dash panel trim panel ⇒ [page 201](#) .



- Remove dash panel storage compartment on front passenger side ⇒ [page 50](#) .
- Remove centre console cover ⇒ [page 93](#) .
- Remove centre console front storage compartment ⇒ [page 94](#) .

Right-hand drive vehicles

- Unclip diagnostic connector holder -1- from centre console -2-.
- Unclip diagnostic connector -3-.
- Remove diagnostic connector holder -1-.

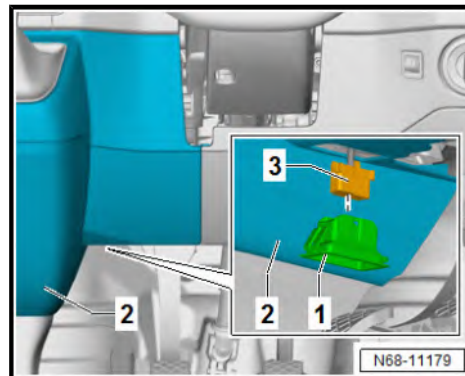

Continued for all vehicles


- Unscrew bolts -2-.
- Detach centre console -1- from dash panel.
- Lay wiring harnesses aside.
- Guide selector lever/gear lever boot upwards through installation opening in centre console -1-.
- Remove centre console -1-.

Installing

Install in reverse order of removal, observing the following:

Specified torques

- ♦ ⇒ [“3.1 Assembly overview - centre console”, page 92](#)

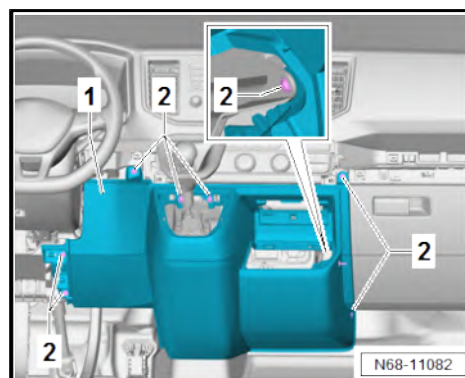

3.7 Removing and installing trim for operating and display unit

Removing

- Switch off ignition and all electrical consumers.
- Withdraw ignition key.
- Remove dash panel trim panel ⇒ [page 201](#) .




Note

The trim underneath is permanently attached to the trim for the operating and display unit for front air conditioning system - E87-.




- Use removal wedge - 3409- to release trim for operating and display unit for front air conditioning system - E87- -1- from fasteners -2-, and remove trim.

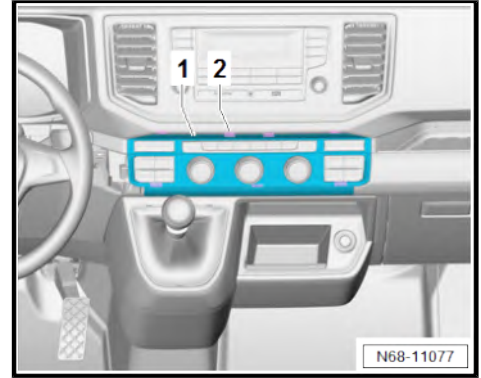

- Separate electrical connector -2- from hazard warning light switch - EX3- -3-.
- If fitted, separate any additional electrical connectors -4- from controls in trim for operating and display unit for front air conditioning system - E87- -1-.

Installing

Install in reverse order.

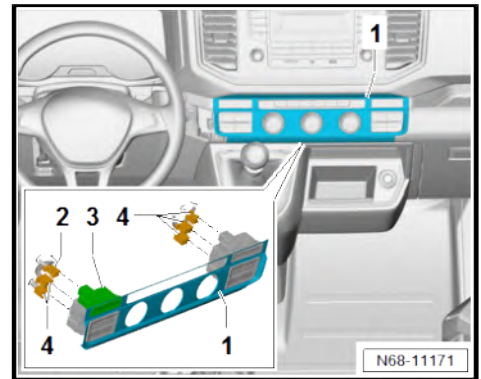

3.8 Removing and installing coin holder

- The removal and installation procedure for the coin holder is the same as that for the front centre console storage compartment ➔ [page 94](#) .



4 On inside

⇒ [“4.1 Assembly overview - interior mirror”, page 98](#)

⇒ [“4.2 Removing and installing interior mirror”, page 99](#)


4.1 Assembly overview - interior mirror

1 - On inside

- ☐ Manually operated
- ☐ Removing and installing
⇒ [page 99](#)

2 - Retaining plate

- ☐ Glued to windscreen
- ☐ A detached retaining plate can be used again on the windscreen
⇒ [page 99](#)
- ☐ Materials for bonding retaining plate: Allocation
⇒ Electronic parts catalogue (ETKA) or ⇒ web-MANTIS for MAN TGE

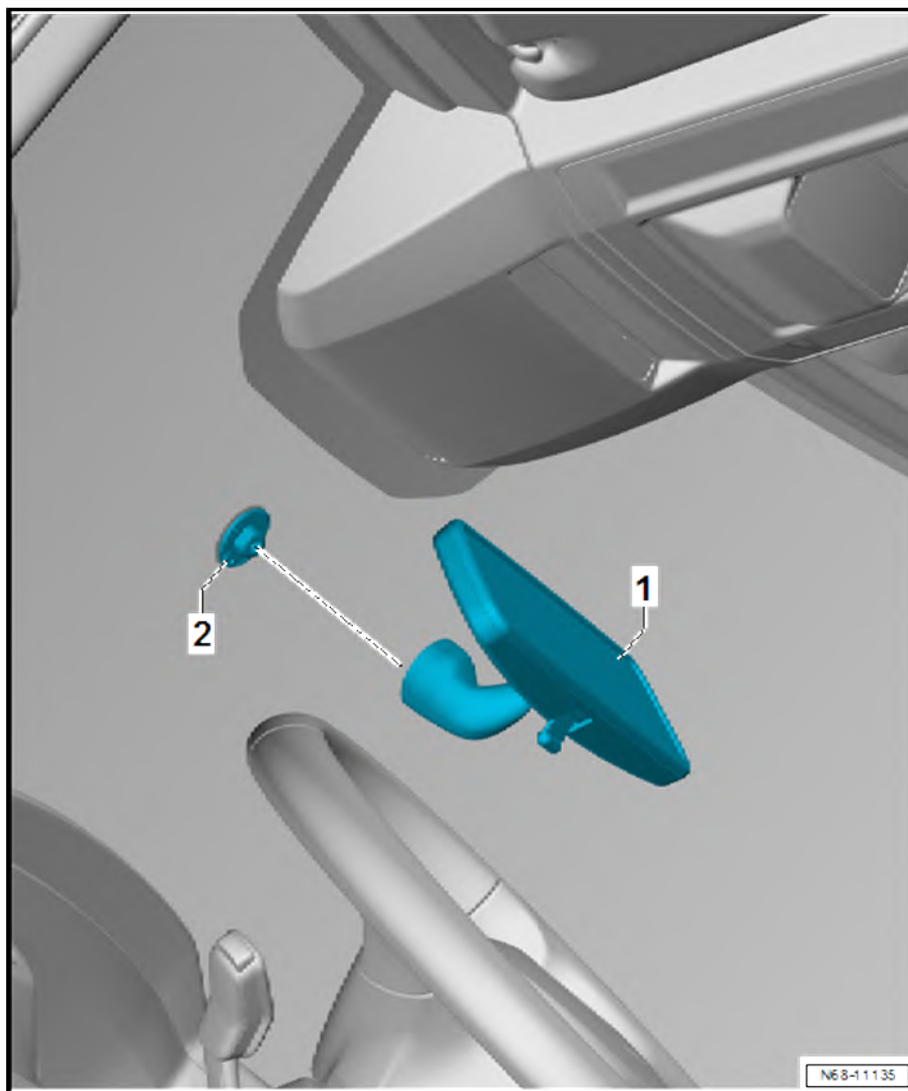



4.2 Removing and installing interior mirror

⇒ ["4.2.1 Removing and installing interior mirror", page 99](#)

⇒ ["4.2.2 Bonding retaining plate for interior mirror", page 99](#)

4.2.1 Removing and installing interior mirror

Removing


- Turn interior mirror -1- 90° in -direction of arrow-.
- Remove interior mirror -1- from glued-on retaining plate -2-.

Installing

Install in reverse order of removal, observing the following:

- Check that bonded retaining plate is firmly attached to wind-screen.

If retaining plate has become detached from windscreen, bond retaining plate in place ⇒ [page 99](#) .

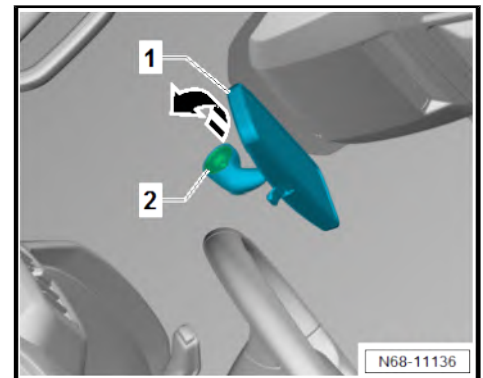

4.2.2 Bonding retaining plate for interior mirror

Materials


- ◆ Allocation ⇒ Electronic parts catalogue (ETKA) or ⇒ web-MANTIS for MAN TGE

Special tools and workshop equipment required

- ◆ Glass scraper (commercially available)
- ◆ Blade (commercially available)

Bonding

- Detach retaining plate -1- from mirror foot -2- in -direction of arrow-.
- Remove adhesive sealant from retaining plate -1- using a wire brush.

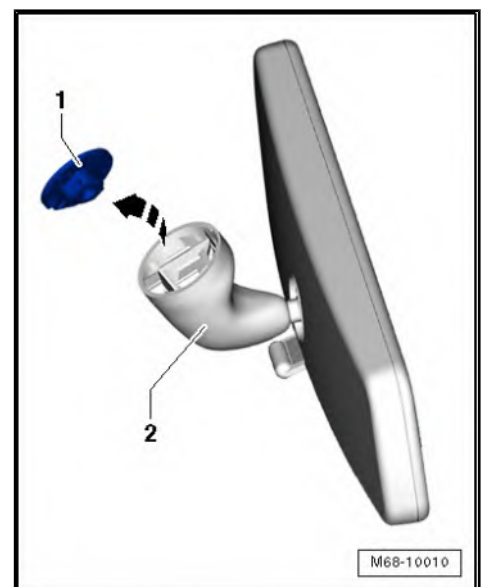



- Grind off the three spacer protrusions -arrows- on bonding surface. To do this, use sandpaper (360/400 grain) laid on flat surface.
- Keep sanded surface clean and free of grease.
- Remove adhesive sealant as well as old glass/paint primer down to ceramic layer on windscreen using a glass scraper.



Note

Do not damage ceramic coating. Scratches will remain permanently visible.

- Clean bonding surface with adhesive remover or cleaning solution "Allocation" ⇒ Electronic parts catalogue (ETKA) or ⇒ webMANTIS for MAN TGE.
- Cut a piece of mesh nylon fabric -3- from glass-metal adhesive set - D 000 703 A1- exactly to the size of the retaining plate -2-.



Note

Wear hand protection (rubber gloves).

- Apply a good layer of adhesive -1- from glass-metal adhesive set - D 000 703 A1- uniformly to the retaining plate -2-.
- Place nylon mesh fabric -3- on retaining plate -2-.
- Dab nylon mesh fabric -3- with tube of adhesive -1- while applying further adhesive.






Note

- ♦ *It is essential to bear in mind the drying time of the adhesive.*
- ♦ *Only 30 seconds are available from laying nylon mesh fabric on adhesive to pressing plate onto windscreen.*
- Press retaining plate -1- (do not use force) against windscreen -2- for 15 seconds.



Note

Interior mirror can be installed after 15 minutes ⇒ [page 99](#).

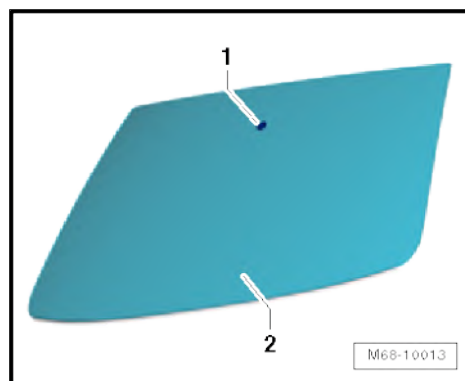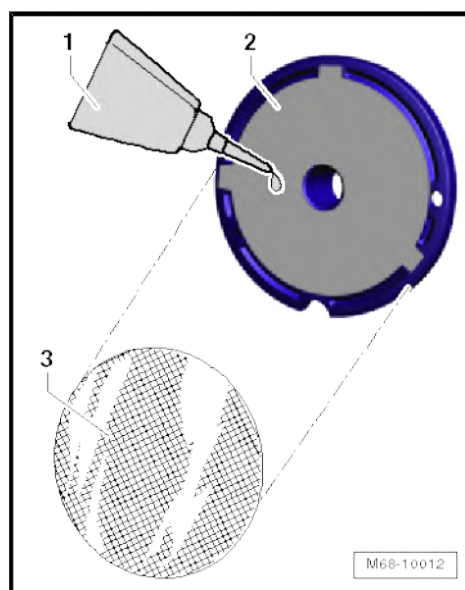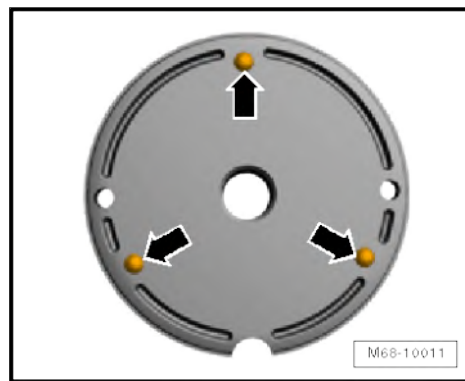



69 – Passenger protection

1 Seat belts

⇒ [“1.1 Overview of fitting locations - seat belts and anchorage points”, page 101](#)

⇒ [“1.2 Assembly overview - front three-point seat belt”, page 106](#)

⇒ [“1.3 Assembly overview - rear outer three-point seat belt”, page 108](#)

⇒ [“1.4 Assembly overview - rear centre three-point seat belt”, page 109](#)

⇒ [“1.5 Assembly overview - rear three-point seat belt, single seat passenger compartment”, page 110](#)

⇒ [“1.6 Assembly overview - front belt buckle”, page 111](#)

⇒ [“1.7 Assembly overview - rear belt buckle”, page 112](#)

⇒ [“1.8 Removing and installing front three-point seat belt”, page 113](#)

⇒ [“1.9 Removing and installing rear three-point seat belt”, page 119](#)

⇒ [“1.10 Removing and installing rear belt guide”, page 125](#)

⇒ [“1.11 Removing and installing front belt guide”, page 128](#)

⇒ [“1.12 Removing and installing front belt end fitting”, page 130](#)

⇒ [“1.13 Removing and installing rear outer belt end fitting”, page 131](#)

⇒ [“1.14 Removing and installing belt height adjuster”, page 133](#)

⇒ [“1.15 Removing and installing front belt buckle”, page 134](#)

⇒ [“1.16 Removing and installing rear belt buckle”, page 135](#)

1.1 Overview of fitting locations - seat belts and anchorage points

⇒ [“1.1.1 Overview of fitting locations - seat belts and anchorage points, driver seat and single co-driver seat”, page 101](#)

⇒ [“1.1.2 Overview of fitting locations - seat belts and anchorage points, driver seat and front bench seat”, page 103](#)

⇒ [“1.1.3 Overview of fitting locations - seat belts and anchorage points, rear bench seat double cab”, page 104](#)

⇒ [“1.1.4 Overview of fitting locations - seat belts and anchorage points, single seat passenger compartment”, page 105](#)

1.1.1 Overview of fitting locations - seat belts and anchorage points, driver seat and single co-driver seat



1 - Right belt height adjuster

- ❑ Assembly overview
⇒ [page 106](#)
- ❑ Removing and installing
⇒ [page 133](#)

2 - Front belt buckles

- ❑ Qty. 2
- ❑ Assembly overview
⇒ [page 111](#)
- ❑ Removing and installing
⇒ [page 134](#)

3 - Left belt height adjuster

- ❑ Assembly overview
⇒ [page 106](#)
- ❑ Removing and installing
⇒ [page 133](#)

4 - Left belt inertia reel

- ❑ Assembly overview
⇒ [page 106](#)
- ❑ Removing and installing
⇒ [page 133](#)

5 - Left front belt end fitting


- ❑ Assembly overview
⇒ [page 106](#)
- ❑ Removing and installing
⇒ [page 130](#)

6 - Right front belt end fitting

- ❑ Assembly overview
⇒ [page 106](#)
- ❑ Removing and installing
⇒ [page 130](#)

7 - Right belt inertia reel

- ❑ Assembly overview ⇒ [page 106](#)
- ❑ Removing and installing ⇒ [page 133](#)

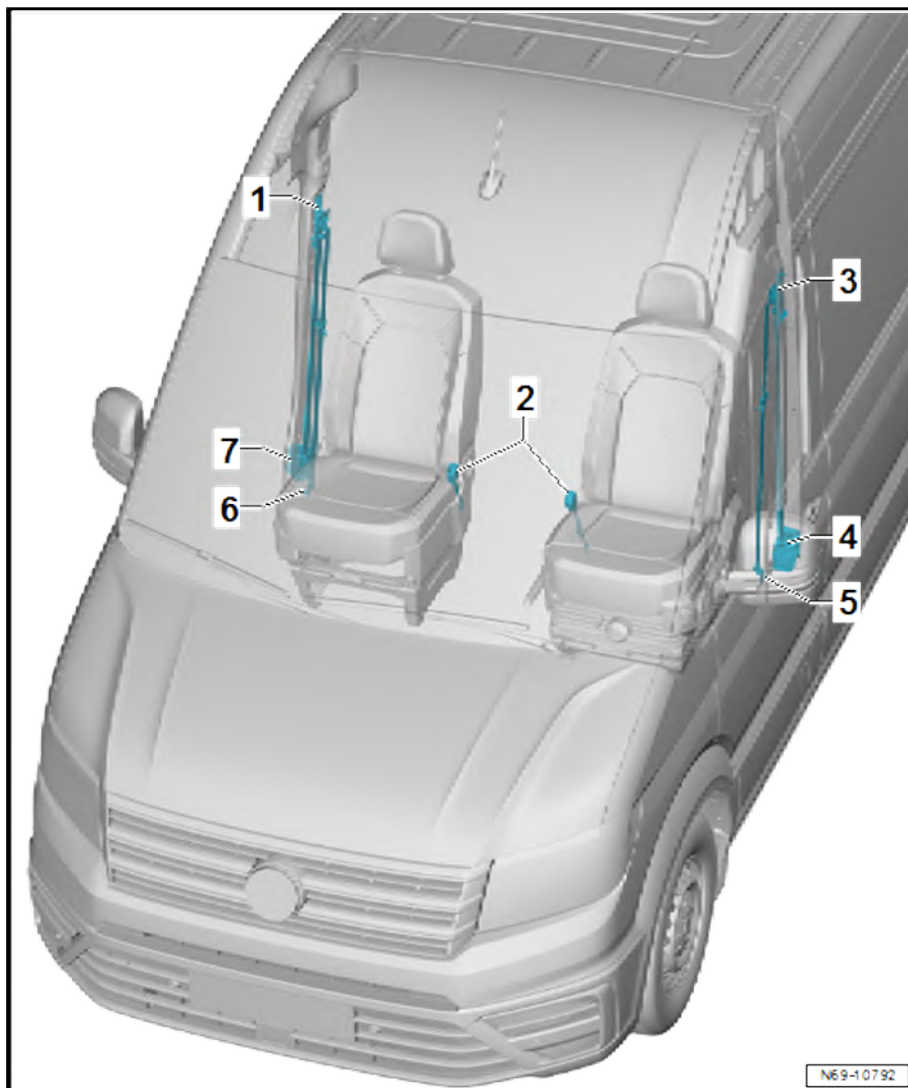

1.1.2 Overview of fitting locations - seat belts and anchorage points, driver seat and front bench seat

1 - Right belt height adjuster

- ☐ Assembly overview
⇒ [page 106](#)
- ☐ Removing and installing
⇒ [page 133](#)

2 - Centre belt inertia reel

- ☐ Assembly overview
⇒ [page 106](#)
- ☐ Removing and installing
⇒ [page 113](#)

3 - Left belt height adjuster

- ☐ Assembly overview
⇒ [page 106](#)
- ☐ Removing and installing
⇒ [page 133](#)

4 - Left belt inertia reel

- ☐ Assembly overview
⇒ [page 106](#)
- ☐ Removing and installing
⇒ [page 133](#)

5 - Left front belt end fitting

- ☐ Assembly overview
⇒ [page 106](#)
- ☐ Removing and installing
⇒ [page 133](#)

6 - Front belt buckles

- ☐ Qty. 2
- ☐ Assembly overview
⇒ [page 111](#)
- ☐ Removing and installing
⇒ [page 134](#)

7 - Centre belt buckle


- ☐ Assembly overview ⇒ [page 106](#)
- ☐ Removing and installing ⇒ [page 134](#)

8 - Right front belt end fitting

- ☐ Assembly overview ⇒ [page 106](#)
- ☐ Removing and installing ⇒ [page 133](#)

9 - Right belt inertia reel

- ☐ Assembly overview ⇒ [page 106](#)
- ☐ Removing and installing ⇒ [page 133](#)

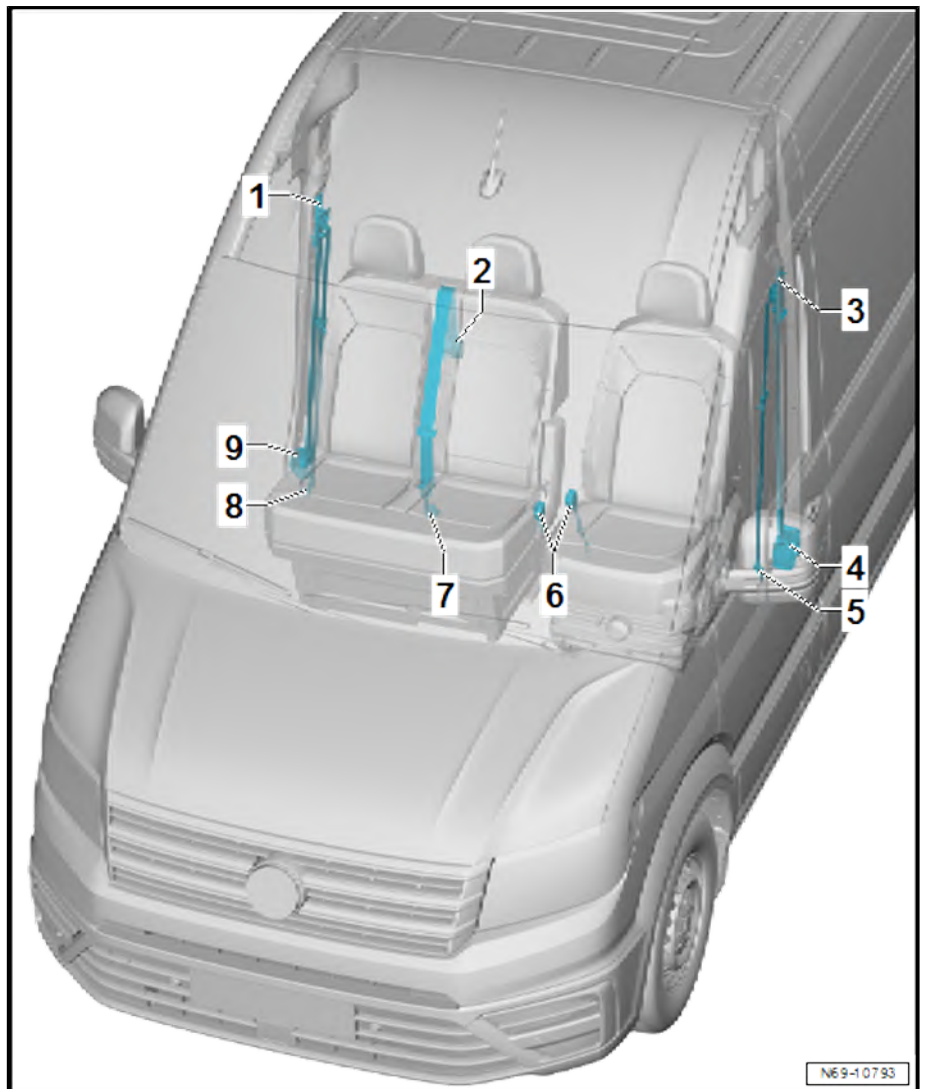

1.1.3 Overview of fitting locations - seat belts and anchorage points, rear bench seat double cab

1 - Centre belt buckles

- ☐ Assembly overview ➤ [page 112](#)
- ☐ Removing and installing ➤ [page 135](#)

2 - Right interior belt inertia reel

- ☐ Assembly overview ➤ [page 108](#)
- ☐ Removing and installing ➤ [page 119](#)

3 - Right belt buckle

- ☐ Assembly overview ➤ [page 112](#)
- ☐ Removing and installing ➤ [page 135](#)

4 - Rear right belt inertia reel

- ☐ Assembly overview ➤ [page 108](#)
- ☐ Removing and installing ➤ [page 119](#)

5 - Right belt guide fitting

- ☐ Assembly overview ➤ [page 108](#)
- ☐ Removing and installing ➤ [page 131](#)

6 - Right belt guide

- ☐ Removing and installing ➤ [page 125](#)

7 - Left belt guide

- ☐ Removing and installing ➤ [page 125](#)

8 - Left belt guide fitting

- ☐ Assembly overview ➤ [page 108](#)
- ☐ Removing and installing ➤ [page 131](#)

9 - Rear left belt inertia reel


- ☐ Assembly overview ➤ [page 108](#)
- ☐ Removing and installing ➤ [page 119](#)

10 - Left interior belt inertia reel

- ☐ Assembly overview ➤ [page 108](#)
- ☐ Removing and installing ➤ [page 119](#)

11 - Left belt buckle

- ☐ Assembly overview ➤ [page 112](#)
- ☐ Removing and installing ➤ [page 135](#)

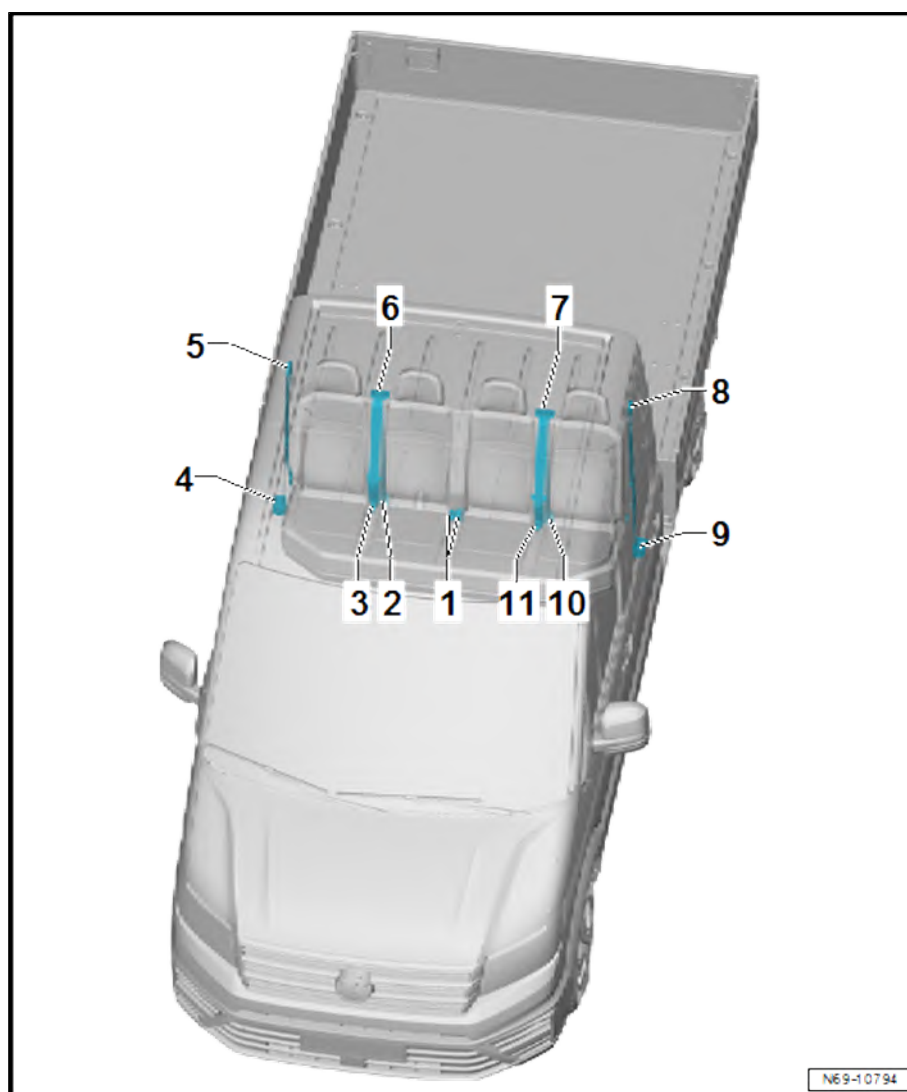



1.1.4 Overview of fitting locations - seat belts and anchorage points, single seat passenger compartment

1 - Belt inertia reels


- ☐ Qty. 6
- ☐ Assembly overview
⇒ [page 108](#)
- ☐ Removing and installing
⇒ [page 119](#)

2 - Belt end fittings

- ☐ Qty. 6
- ☐ Assembly overview
⇒ [page 108](#)
- ☐ Removing and installing
⇒ [page 131](#)

3 - Belt buckles

- ☐ Qty. 6
- ☐ Assembly overview
⇒ [page 112](#)
- ☐ Removing and installing
⇒ [page 135](#)

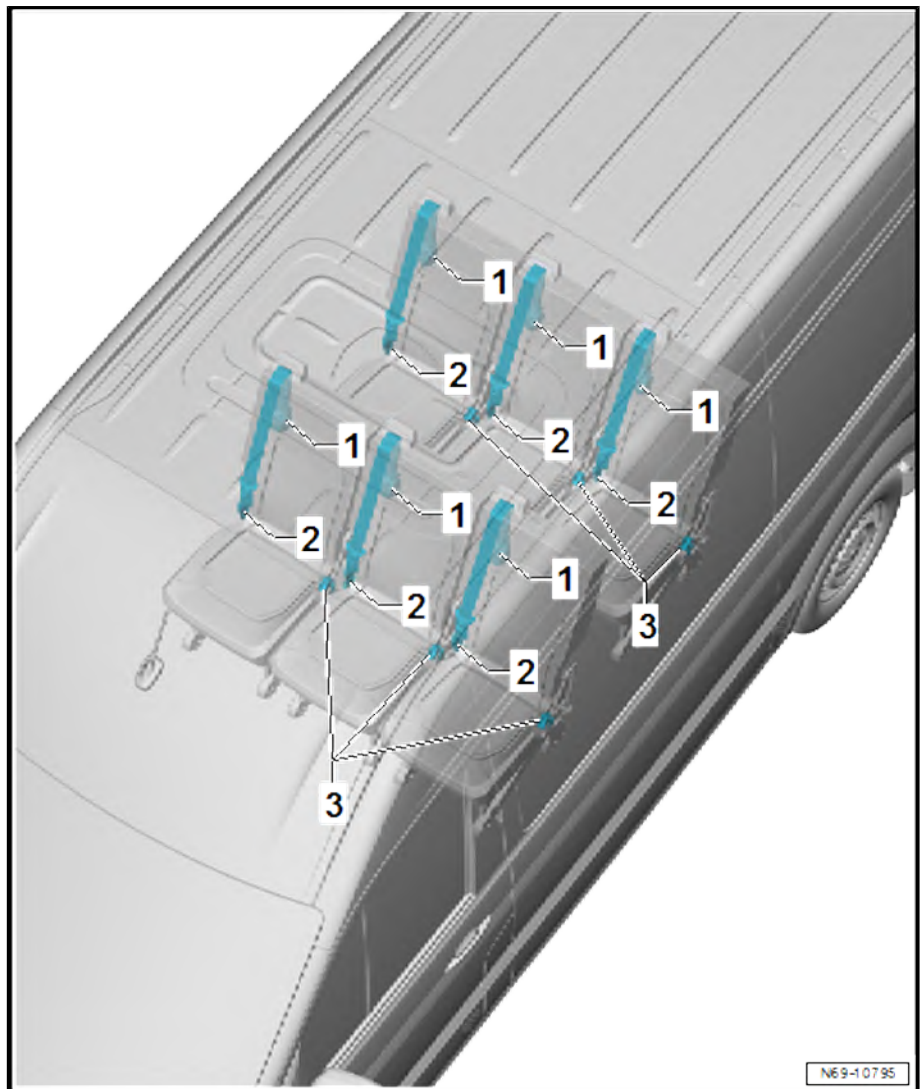

1.2 Assembly overview - front three-point seat belt

⇒ ["1.2.1 Assembly overview - front three-point seat belt, B-pillar", page 106](#)

⇒ ["1.2.2 Assembly overview - front three-point seat belt, bench seat", page 107](#)

1.2.1 Assembly overview - front three-point seat belt, B-pillar



Note

The assembly overview is shown for the left side of the vehicle. The right side is analogous.

1 - Bolt

- ☐ Always renew after belt tensioner has deployed with seat belt fastened.
- ☐ 40 Nm

2 - Bolt

- ☐ Always renew after belt tensioner has deployed with seat belt fastened.
- ☐ 20 Nm

3 - Belt anchor

- ☐ Must move to vertical position or operated position on its own after bolt has been tightened.

4 - Belt height adjustment

- ☐ Always renew after belt tensioner has deployed with seat belt fastened.
- ☐ Removing and installing ⇒ [page 133](#)

5 - Bolt

- ☐ Always renew after belt tensioner has deployed with seat belt fastened.
- ☐ 40 Nm

6 - Belt end fitting


- ☐ Removing and installing ⇒ [page 130](#)

7 - Bolt

- ☐ Always renew after belt tensioner has deployed with seat belt fastened.
- ☐ 40 Nm

8 - Belt inertia reel

- ☐ Always renew after belt tensioner has deployed with seat belt fastened.
- ☐ Removing and installing ⇒ [page 113](#)

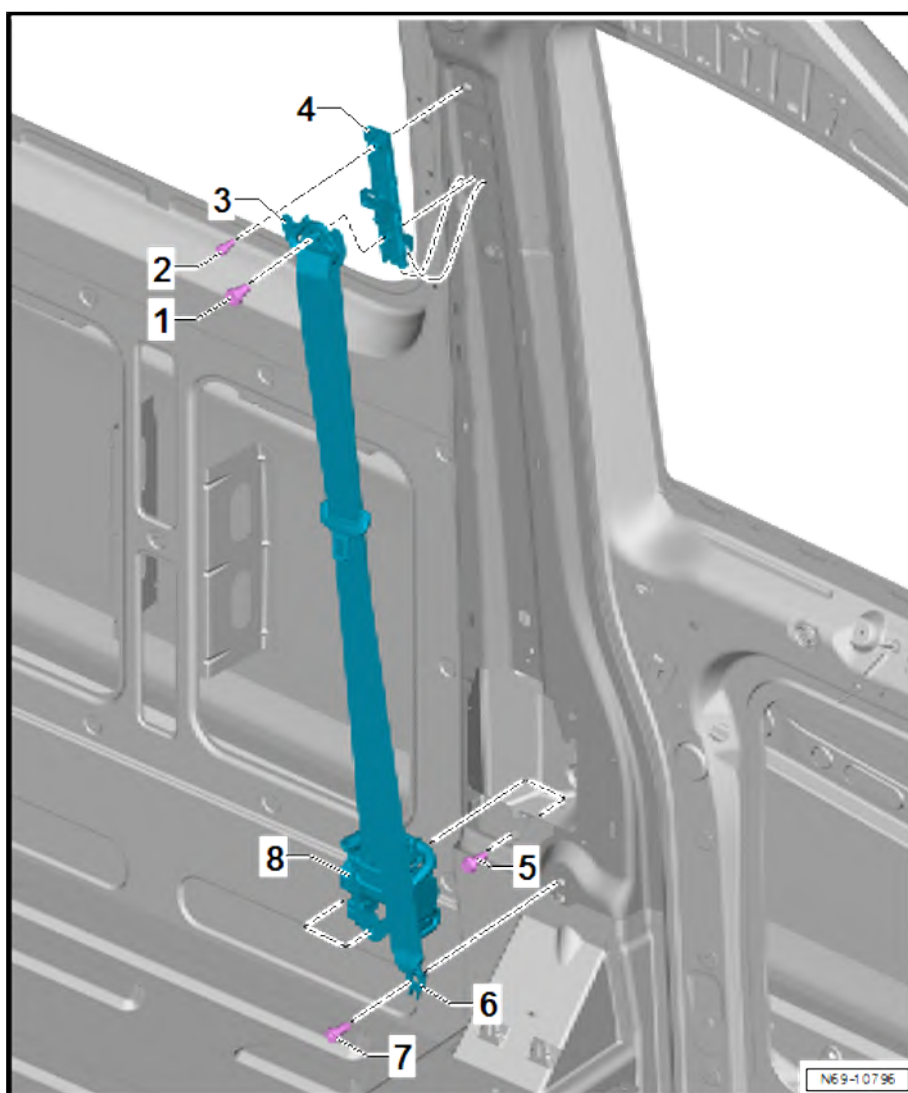

1.2.2 Assembly overview - front three-point seat belt, bench seat

1 - Belt inertia reel

- ☐ Always renew after belt tensioner has deployed with seat belt fastened.
- ☐ The inner belt buckle is permanently attached to the belt webbing of the belt inertia reel
- ☐ Removing and installing
⇒ [page 113](#)

2 - Seat trim

- ☐ For seat belt
- ☐ Assembly overview
⇒ [page 333](#)
- ☐ Removing and installing
⇒ [page 368](#)

3 - Bolt

- ☐ Always renew after belt tensioner has deployed with seat belt fastened.
- ☐ 40 Nm

4 - Belt guide


- ☐ Removing and installing
⇒ [page 128](#)

5 - Belt buckle

- ☐ The inner belt buckle is permanently attached to the belt webbing of the belt inertia reel
⇒ [page 113](#)
- ☐ Removing and installing
⇒ [page 134](#)

6 - Bolt

- ☐ Part of belt buckle
- ☐ Always renew after belt tensioner has deployed with seat belt fastened.
- ☐ 40 Nm

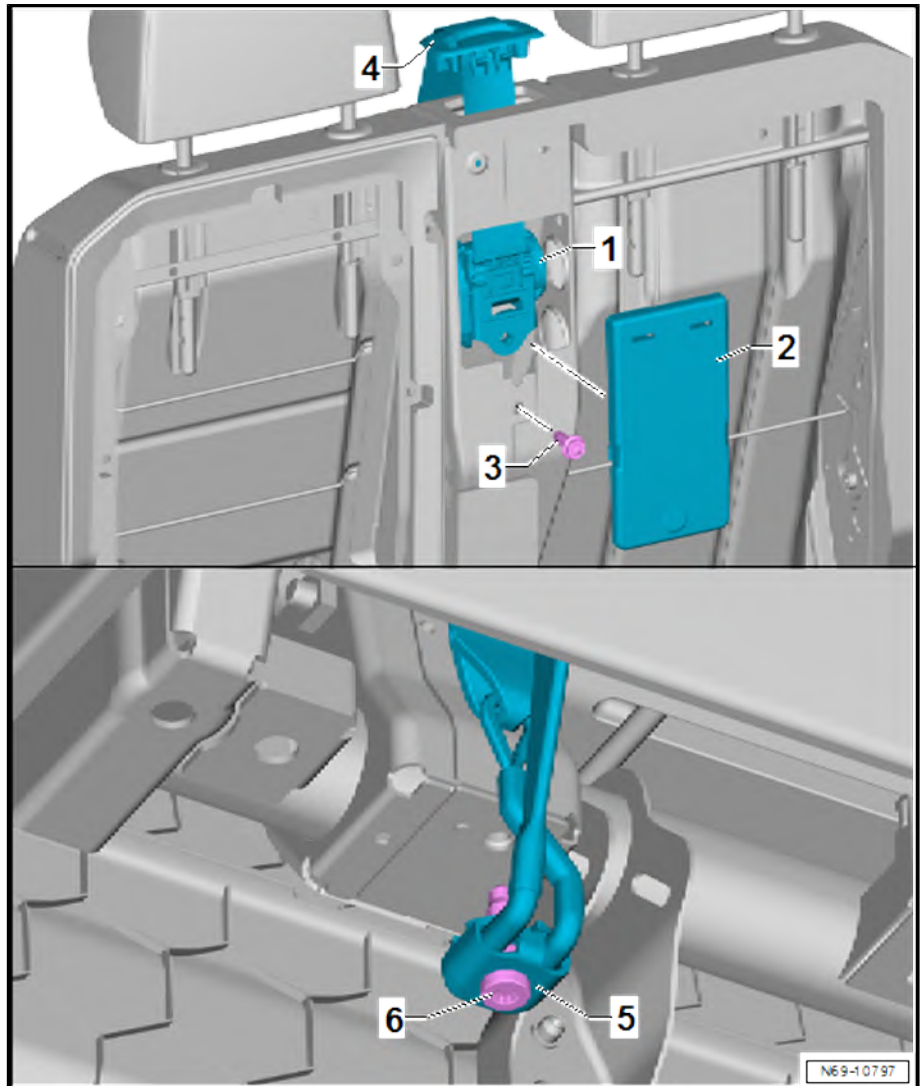



1.3 Assembly overview - rear outer three-point seat belt

1 - Bolt

- 40 Nm

2 - Belt anchor

- Removing and installing

3 - Belt inertia reel


- Removing and installing
⇒ [page 119](#)

4 - Bolt

- 40 Nm

5 - Belt end fitting

- Removing and installing
⇒ [page 119](#)

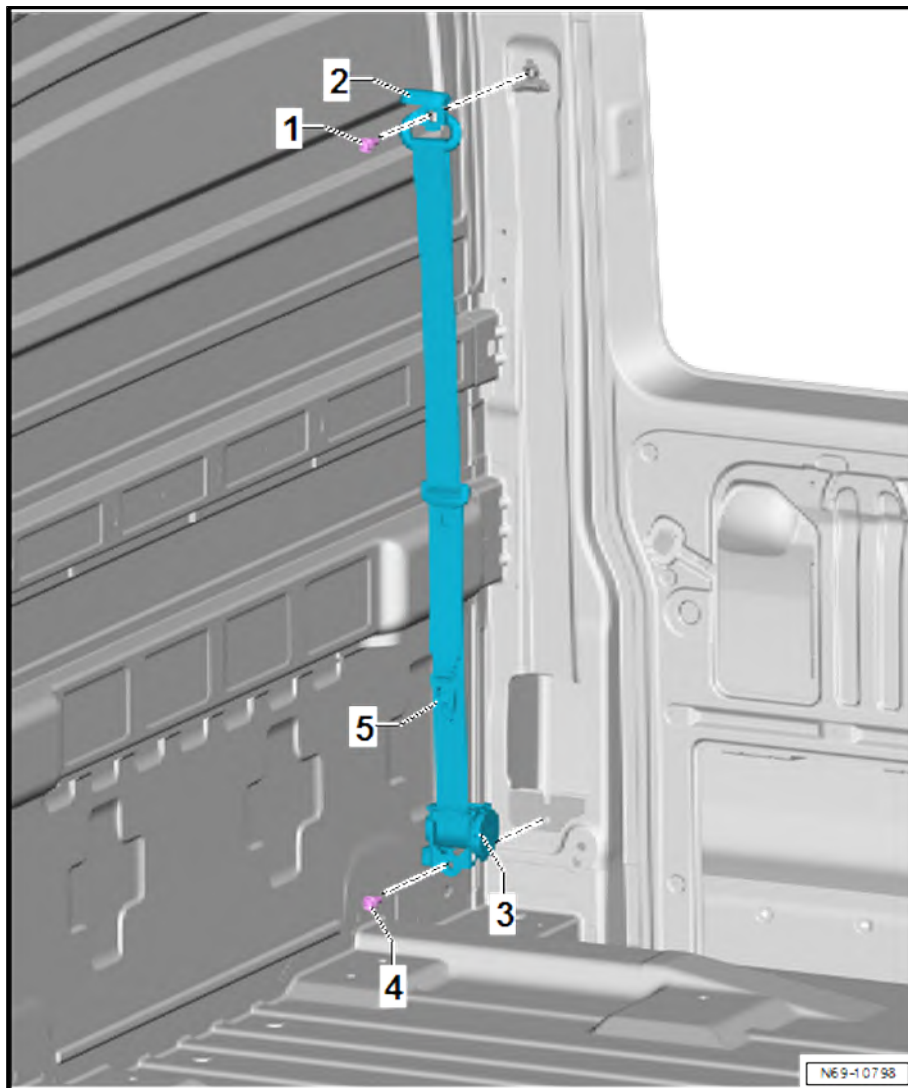




1.4 Assembly overview - rear centre three-point seat belt

1 - Belt inertia reels

- ❑ Qty. 2
- ❑ Removing and installing
⇒ [page 119](#)

2 - Bolts

- ❑ Qty. 2
- ❑ 40 Nm

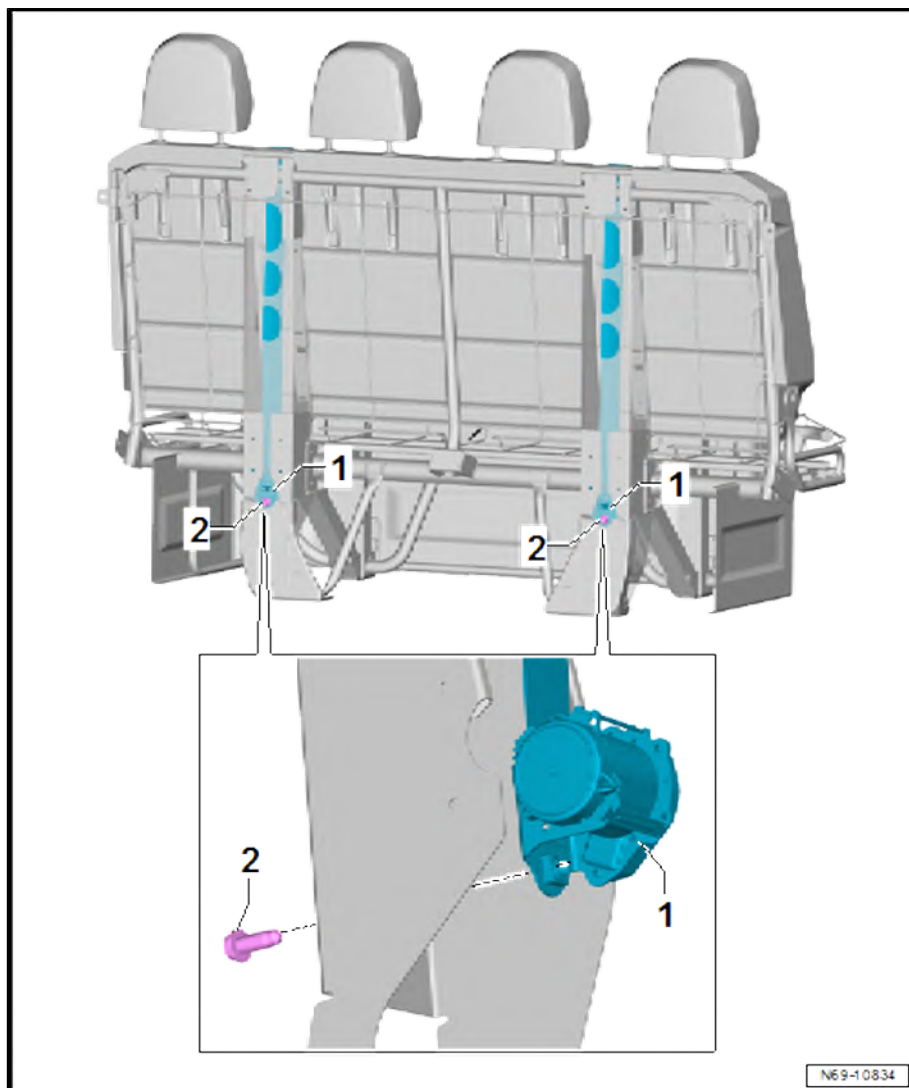



1.5 Assembly overview - rear three-point seat belt, single seat passenger compartment

1 - Belt guide

- ❑ Removing and installing
⇒ [page 396](#)

2 - Bolts

- ❑ Qty. 2
- ❑ 4.5 Nm

3 - Belt end fitting

- ❑ Removing and installing
⇒ [page 119](#)

4 - Nut


- ❑ 40 Nm

5 - Belt inertia reel

- ❑ Removing and installing
⇒ [page 119](#)

6 - Bolt

- ❑ 40 Nm

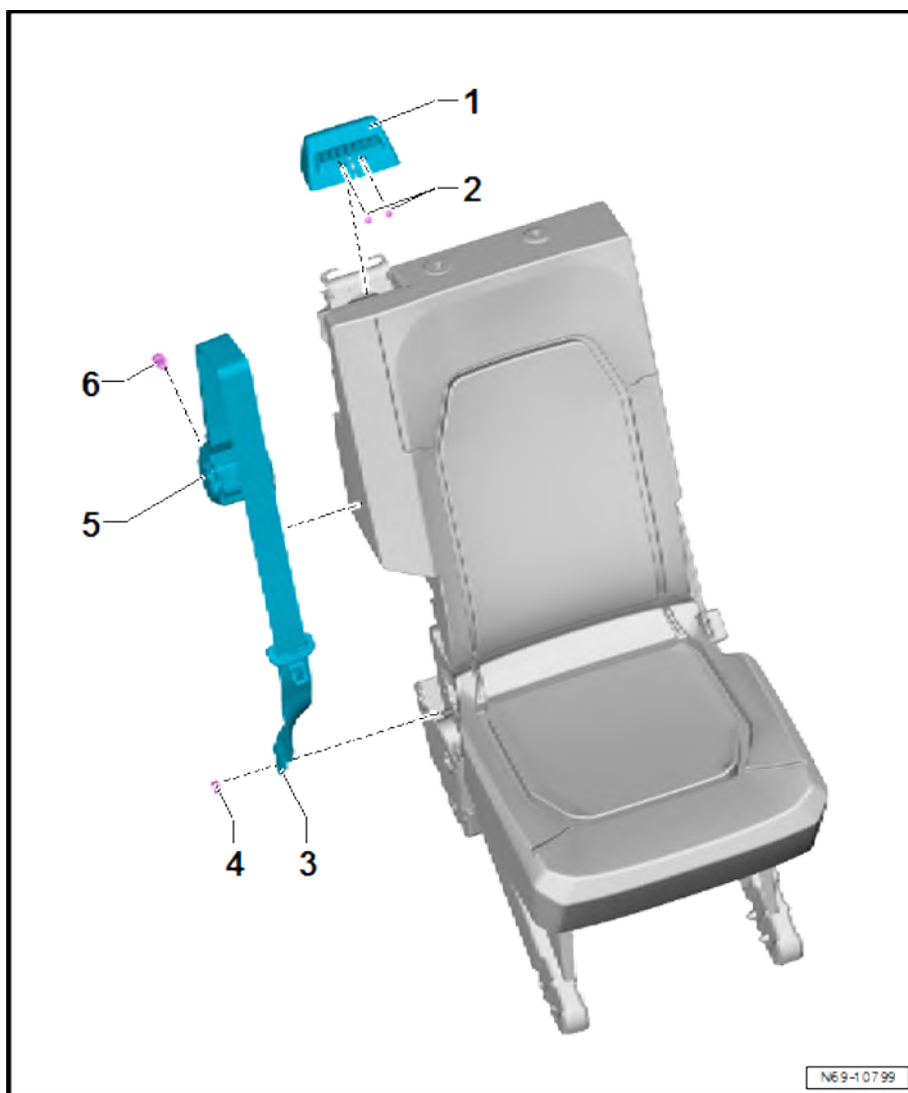

1.6 Assembly overview - front belt buckle

1 - Front belt buckle

- ☐ Driver side
- ☐ Always renew after belt tensioner has deployed with seat belt fastened.
- ☐ Removing and installing
⇒ [page 130](#)

2 - Bolt

- ☐ If removed due to an accident with seat belt fastened, renew bolt.
- ☐ 40 Nm

3 - Wiring harness


- ☐ Only in conjunction with belt switch

4 - Front belt buckle

- ☐ Passenger side
- ☐ Always renew after belt tensioner has deployed with seat belt fastened.
- ☐ Removing and installing
⇒ [page 134](#)

5 - Nut

- ☐ If removed due to an accident with seat belt fastened, renew bolt.
- ☐ 40 Nm

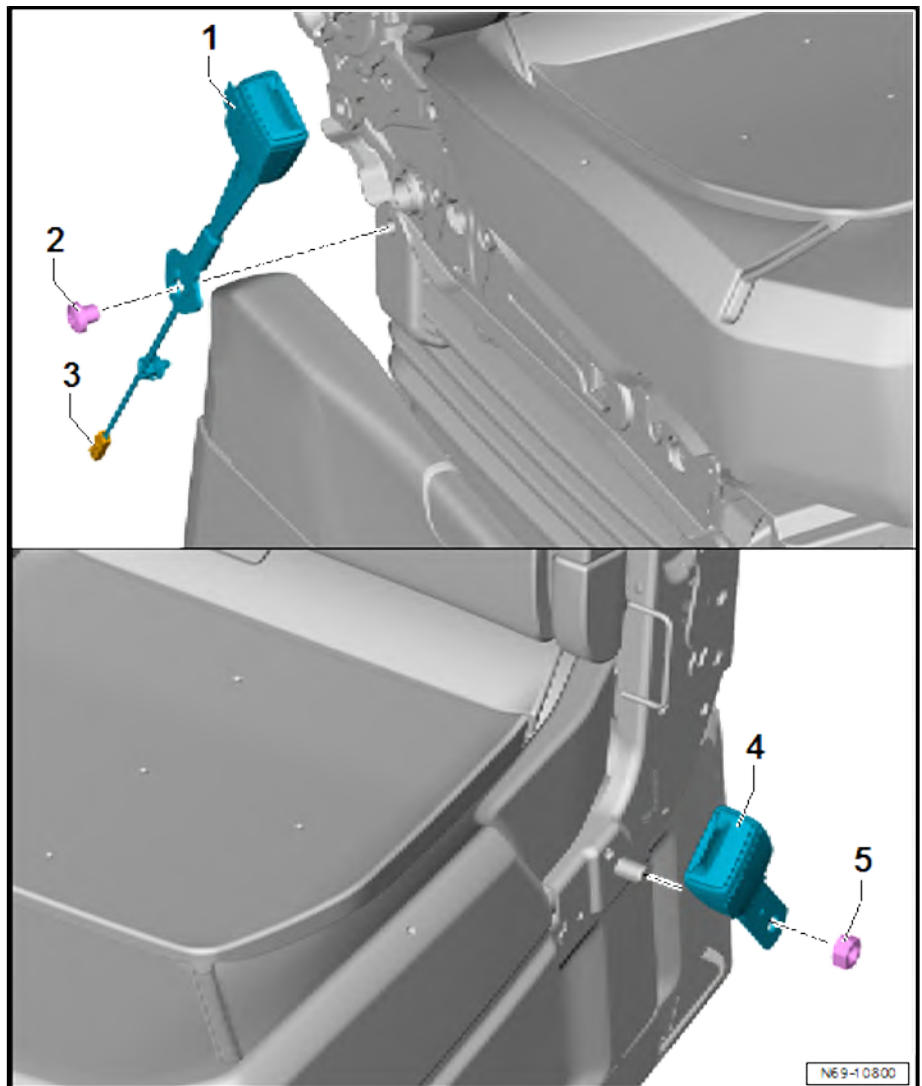

1.7 Assembly overview - rear belt buckle

⇒ [“1.7.1 Assembly overview - rear belt buckle, rear bench seat double cab”, page 112](#)

⇒ [“1.7.2 Assembly overview - rear belt buckle, single seat passenger compartment”, page 113](#)

1.7.1 Assembly overview - rear belt buckle, rear bench seat double cab

1 - Double belt buckle

- ☐ Centre
- ☐ Always renew after belt tensioner has deployed with seat belt fastened.
- ☐ Removing and installing
⇒ [page 135](#)

2 - Bolt


- ☐ Part of belt buckle
- ☐ Always renew after belt tensioner has deployed with seat belt fastened.
- ☐ 40 Nm

3 - Belt buckles

- ☐ On outside
- ☐ Qty. 2
- ☐ The outer belt buckles are permanently attached to the belt webbing of the belt inertia reels
⇒ [page 119](#)
- ☐ Removing and installing
⇒ [page 135](#)

4 - Bolts

- ☐ Part of belt buckle
- ☐ Always renew after belt tensioner has deployed with seat belt fastened.
- ☐ Qty. 2
- ☐ 40 Nm

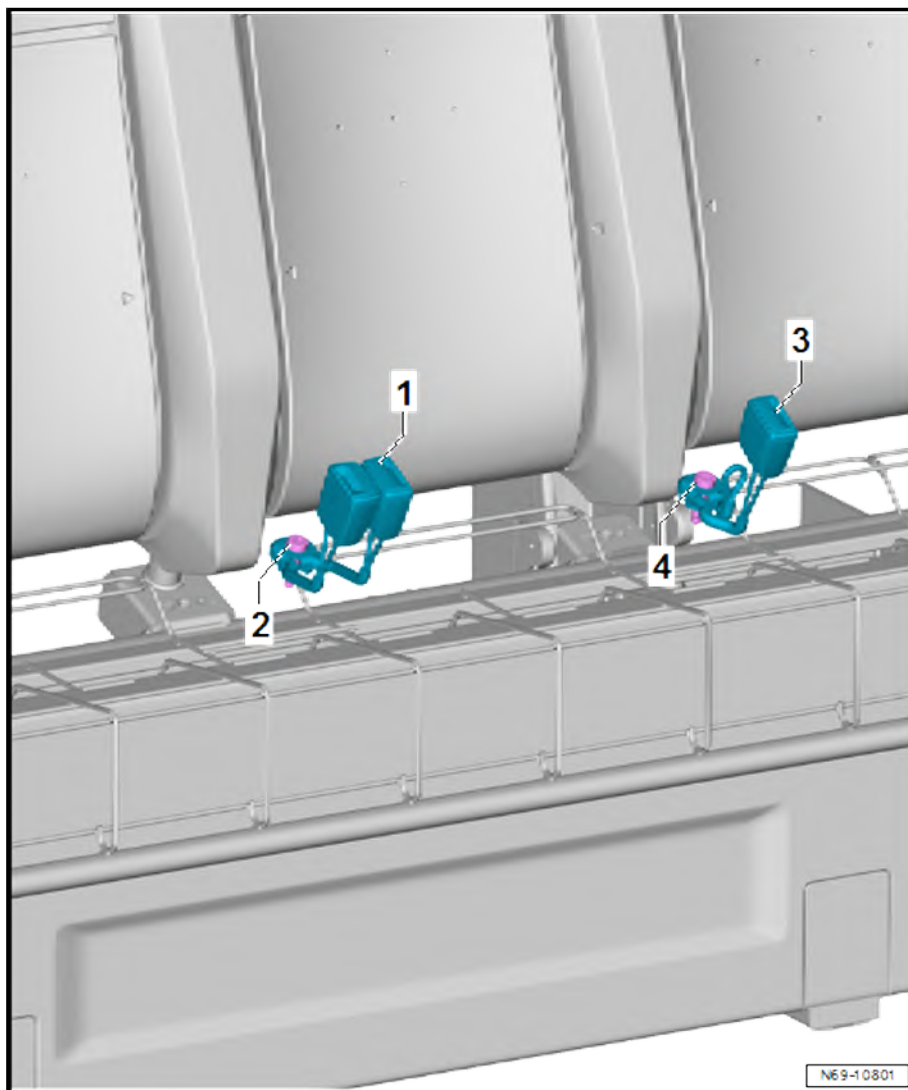

1.7.2 Assembly overview - rear belt buckle, single seat passenger compartment

1 - Belt buckle


- ☐ Always renew after belt tensioner has deployed with seat belt fastened.
- ☐ Removing and installing
⇒ [page 135](#)

2 - Fitting

- ☐ For single seat in passenger compartment

3 - Bolts

- ☐ Qty. 3
- ☐ 55 Nm

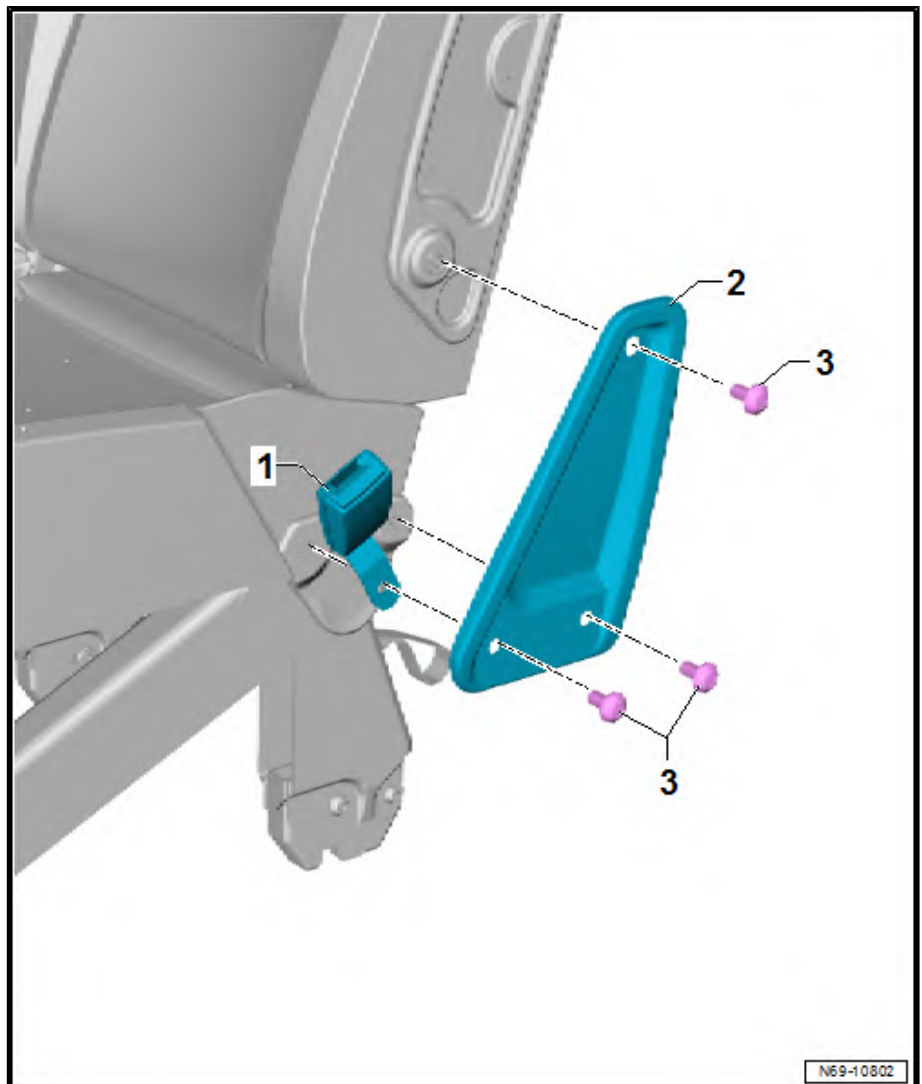

1.8 Removing and installing front three-point seat belt

⇒ [“1.8.1 Removing and installing front three-point seat belt, B-pillar”, page 113](#)

⇒ [“1.8.2 Removing and installing front three-point seat belt, bench seat”, page 116](#)

1.8.1 Removing and installing front three-point seat belt, B-pillar

Special tools and workshop equipment required



◆ Torque wrench - V.A.G 1331-



Removing

Vehicles with electric drive

DANGER

Danger to life from high voltage.


Risk of severe or fatal injury due to electric shock.

- The high-voltage system must be de-energised by a suitably qualified technician.

- De-energise high-voltage system ⇒ Rep. gr. 93 ; De-energising high-voltage system .

Continued for all vehicles

- Disconnect battery earth cable with ignition switched on ⇒ Electrical system; Rep. gr. 27 ; Battery; Connecting and disconnecting battery .
- Remove lower B-pillar trim ⇒ [page 270](#) .
- Unscrew bolt -1-.
- Remove belt guide fitting -2- with belt webbing.

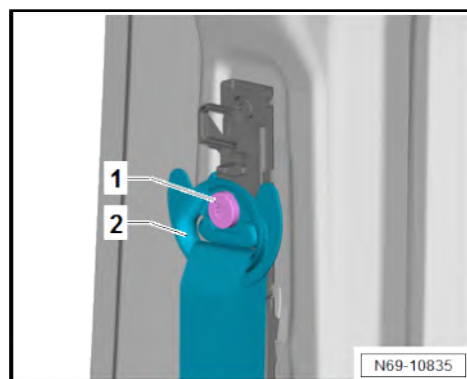


- Unscrew bolt -2-.
- Remove belt end fitting -1-.

CAUTION

Pyrotechnic components can trigger unintentionally.


Danger of injury.

- Discharge any static charge in your body by briefly touching the door striker plate.

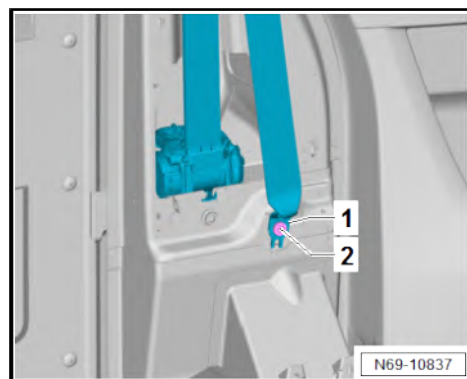




- Separate connector -1-. To do this, release retaining clip using a small screwdriver.
- Unscrew bolt -3-.
- Remove belt inertia reel -2- from mounting.

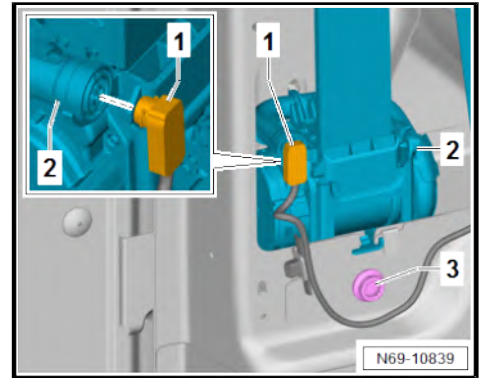

Installing

Install in reverse order of removal, observing the following:

- If parts of the belt system are removed because of an accident, the belt system bolts must be renewed.
- Insert belt inertia reel -1- with foolproof device (to prevent interchanging) -arrow- in mounting.
- Tighten bolt -2-.

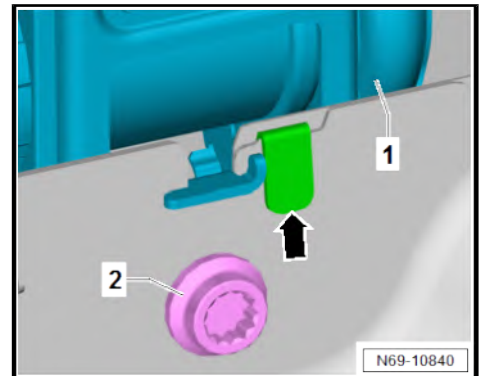



- Insert belt end fitting -1- with locating element in mounting -arrow-.
- Tighten bolt -2-.



Note


Battery must be connected with ignition switched on. If pyrotechnic components (e.g. airbag, belt tensioners) are repaired incorrectly, they could be accidentally triggered. Ensure that nobody is in vehicle when connecting battery.

- Switch on ignition.
- Connect battery earth cable with ignition switched on ⇒ Electrical system; Rep. gr. 27 ; Battery; Connecting and disconnecting battery .



Note

If the ignition is not switched on after reconnecting the battery, the ignition may only be switched on (key/button) from the driver's seat with the seat set in the rearmost position.

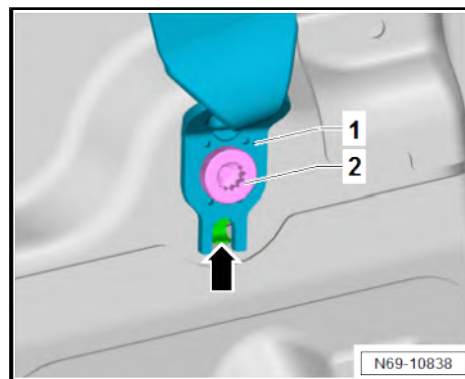

Vehicles with electric drive



WARNING

Danger to life from high voltage.

Risk of severe or fatal injury due to electric shock.

- The high-voltage system must be brought into operation by a suitably qualified technician.
-
- Re-energise high-voltage system ⇒ Rep. gr. 93 ; Re-energising high-voltage system .

Continued for all vehicles

- Use ⇒ Vehicle diagnostic tester to read event memory, clear event memory as necessary, and then read it again.

Vehicles with airbag control unit - J234-

- Adapt components to airbag control unit - J234- after they have been renewed ⇒ Vehicle diagnostic tester.

Specified torques

- ♦ ⇒ [“1.2 Assembly overview - front three-point seat belt”, page 106](#)

1.8.2 Removing and installing front three-point seat belt, bench seat

Removing

Vehicles with electric drive



DANGER

Danger to life from high voltage.

Risk of severe or fatal injury due to electric shock.

- The high-voltage system must be de-energised by a suitably qualified technician.



- De-energise high-voltage system ⇒ Rep. gr. 93 ; De-energising high-voltage system .

Continued for all vehicles

- Disconnect battery earth cable with ignition switched on ⇒ Electrical system; Rep. gr. 27 ; Battery; Connecting and disconnecting battery .

⚠ CAUTION

Pyrotechnic components can trigger unintentionally.


Danger of injury.

- Discharge any static charge in your body by briefly touching the door striker plate.



Continued for all vehicles

- Remove seat trim for seat belt ⇒ [page 368](#) .
- Remove bracket for front belt guide ⇒ [page 128](#) .
- If fitted, separate connector on belt inertia reel.
- Unscrew bolt -2-.
- Detach three-point seat belt -1- in direction of -arrow-.
- Guide belt buckle with belt webbing out of padding.
- Remove three-point seat belt -1- with belt buckle and belt webbing.

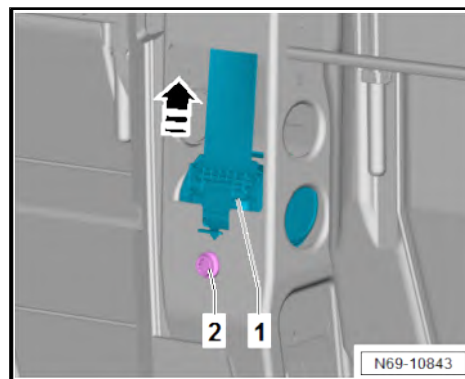

Installing

Install in reverse order of removal, observing the following:

- If parts of the belt system are removed because of an accident, the belt system bolts must be renewed.

Vehicles with electric belt inertia reels



Note

Battery must be connected with ignition switched on. If pyrotechnic components (e.g. airbag, belt tensioners) are repaired incorrectly, they could be accidentally triggered. Ensure that nobody is in vehicle when connecting battery.

- Switch on ignition.
- Connect battery earth cable with ignition switched on ⇒ Electrical system; Rep. gr. 27 ; Battery; Connecting and disconnecting battery .



Note

If the ignition is not switched on after reconnecting the battery, the ignition may only be switched on (key/button) from the driver's seat with the seat set in the rearmost position.

Vehicles with electric drive



WARNING

Danger to life from high voltage.

Risk of severe or fatal injury due to electric shock.

- The high-voltage system must be brought into operation by a suitably qualified technician.

- Re-energise high-voltage system ⇒ Rep. gr. 93 ; Re-energising high-voltage system .

Continued for all vehicles

- Use ⇒ Vehicle diagnostic tester to read event memory, clear event memory as necessary, and then read it again.

Vehicles with airbag control unit - J234-

- Adapt components to airbag control unit - J234- after they have been renewed ⇒ Vehicle diagnostic tester.



Specified torques

- ◆ ⇒ ["1.2 Assembly overview - front three-point seat belt", page 106](#)

1.9 Removing and installing rear three-point seat belt

⇒ ["1.9.1 Removing and installing rear three-point seat belt, C-pillar, double cab", page 119](#)

⇒ ["1.9.2 Removing and installing rear three-point seat belt, rear bench seat, double cab", page 122](#)

⇒ ["1.9.3 Removing and installing rear three-point seat belt, single seat passenger compartment", page 124](#)

1.9.1 Removing and installing rear three-point seat belt, C-pillar, double cab

Special tools and workshop equipment required

- ◆ Torque wrench - V.A.G 1331-



Removing

Vehicles with electric drive

DANGER

Danger to life from high voltage.

Risk of severe or fatal injury due to electric shock.

- The high-voltage system must be de-energised by a suitably qualified technician.

- De-energise high-voltage system ⇒ Rep. gr. 93 ; De-energising high-voltage system .

Continued for all vehicles

- Disconnect battery earth cable with ignition switched on ⇒ Electrical system; Rep. gr. 27 ; Battery; Connecting and disconnecting battery .

CAUTION

Pyrotechnic components can trigger unintentionally.

Danger of injury.



- Discharge any static charge in your body by briefly touching the door striker plate.

- Separate connector from belt inertia reel.



Continued for all vehicles

- Insert screwdriver between spring -2- and area indicated by -arrow-.
- Remove belt end fitting -1- downwards in -direction of arrow- from pin -3-.
- Open cap -2- in direction of -arrow-.
- Unscrew bolt -3-.
- Remove belt guide fitting -1- with belt webbing.

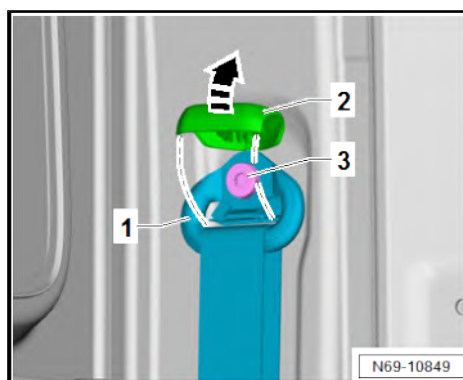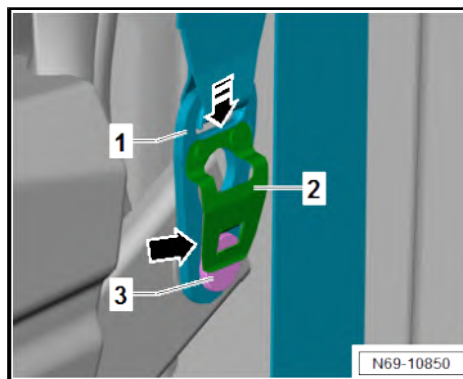



- Unscrew bolt -2-.
- Detach three-point seat belt -1- in direction of -arrow-.
- Remove three-point automatic seat belt -1-.

Installing

Install in reverse order of removal, observing the following:

- If parts of the belt system are removed because of an accident, the belt system bolts must be renewed.

Vehicles with electric belt inertia reels



Note

Battery must be connected with ignition switched on. If pyrotechnic components (e.g. airbag, belt tensioners) are repaired incorrectly, they could be accidentally triggered. Ensure that nobody is in vehicle when connecting battery.

- Switch on ignition.
- Connect battery earth cable with ignition switched on ⇒ Electrical system; Rep. gr. 27 ; Battery; Connecting and disconnecting battery .



Note

If the ignition is not switched on after reconnecting the battery, the ignition may only be switched on (key/button) from the driver's seat with the seat set in the rearmost position.

Vehicles with electric drive



WARNING

Danger to life from high voltage.

Risk of severe or fatal injury due to electric shock.

- The high-voltage system must be brought into operation by a suitably qualified technician.

- Re-energise high-voltage system ⇒ Rep. gr. 93 ; Re-energising high-voltage system .

Continued for all vehicles


- Use ⇒ Vehicle diagnostic tester to read event memory, clear event memory as necessary, and then read it again.

Vehicles with airbag control unit - J234-

- Adapt components to airbag control unit - J234- after they have been renewed ⇒ Vehicle diagnostic tester.

Specified torques

- ◆ ⇒ [“1.3 Assembly overview - rear outer three-point seat belt”, page 108](#)

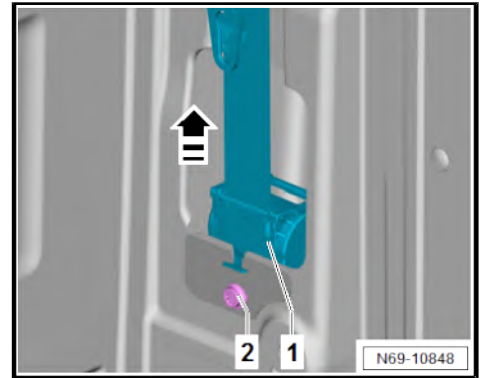



1.9.2 Removing and installing rear three-point seat belt, rear bench seat, double cab

Removing

Vehicles with electric drive

DANGER

Danger to life from high voltage.

Risk of severe or fatal injury due to electric shock.

- The high-voltage system must be de-energised by a suitably qualified technician.

- De-energise high-voltage system ⇒ Rep. gr. 93 ; De-energising high-voltage system .

Continued for all vehicles

- Disconnect battery earth cable with ignition switched on ⇒ Electrical system; Rep. gr. 27 ; Battery; Connecting and disconnecting battery .

CAUTION

Pyrotechnic components can trigger unintentionally.


Danger of injury.

- Discharge any static charge in your body by briefly touching the door striker plate.



Continued for all vehicles

- Remove outer rear belt buckle ⇒ [page 135](#) .
- Remove bracket and supports for rear belt guide ⇒ [page 125](#) .
- If fitted, separate connector on belt inertia reel.
- Unscrew bolt -2-.
- Detach three-point seat belt -1- in direction of -arrow-.
- Guide belt buckle with belt webbing out of padding.
- Remove three-point seat belt -1- with belt buckle and belt webbing.

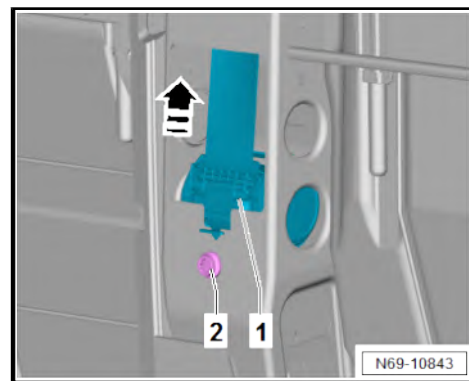

Installing

Install in reverse order of removal, observing the following:

- If parts of the belt system are removed because of an accident, the belt system bolts must be renewed.

Vehicles with electric belt inertia reels



Note

Battery must be connected with ignition switched on. If pyrotechnic components (e.g. airbag, belt tensioners) are repaired incorrectly, they could be accidentally triggered. Ensure that nobody is in vehicle when connecting battery.

- Switch on ignition.
- Connect battery earth cable with ignition switched on ⇒ Electrical system; Rep. gr. 27 ; Battery; Connecting and disconnecting battery .



Note

If the ignition is not switched on after reconnecting the battery, the ignition may only be switched on (key/button) from the driver's seat with the seat set in the rearmost position.

Vehicles with electric drive



WARNING

Danger to life from high voltage.

Risk of severe or fatal injury due to electric shock.

- The high-voltage system must be brought into operation by a suitably qualified technician.

- Re-energise high-voltage system ⇒ Rep. gr. 93 ; Re-energising high-voltage system .

Continued for all vehicles

- Use ⇒ Vehicle diagnostic tester to read event memory, clear event memory as necessary, and then read it again.

Vehicles with airbag control unit - J234-

- Adapt components to airbag control unit - J234- after they have been renewed ⇒ Vehicle diagnostic tester.



Specified torques

- ◆ ⇒ ["1.3 Assembly overview - rear outer three-point seat belt", page 108](#)

1.9.3 Removing and installing rear three-point seat belt, single seat passenger compartment


Special tools and workshop equipment required

- ◆ Torque wrench - V.A.G 1331-



Removing

- Remove left and right caps.
- Unscrew nut -2-.
- Remove rear seat backrest ⇒ [page 355](#) .
- Remove cover and padding for rear seat backrest ⇒ [page 411](#) .
- Separate cover and padding ⇒ [page 431](#) .

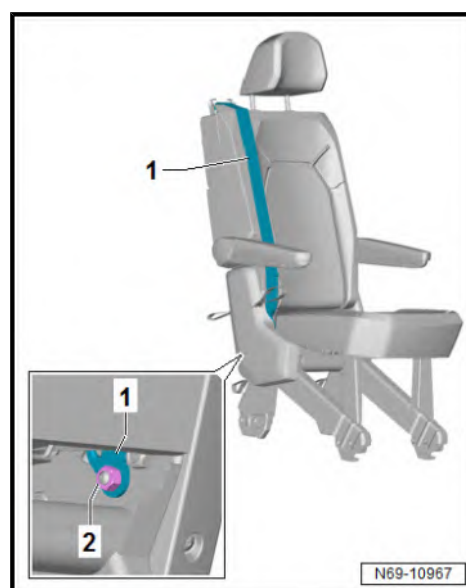

- Unscrew bolt -2-.
- Detach seat belt -1-.
- Remove seat belt -1-.


Installing

Install in reverse order of removal, observing the following:

- If parts of the belt system are removed because of an accident, the belt system securing bolts must be renewed.

Specified torques

- ◆ ⇒ ["1.3 Assembly overview - rear outer three-point seat belt", page 108](#)

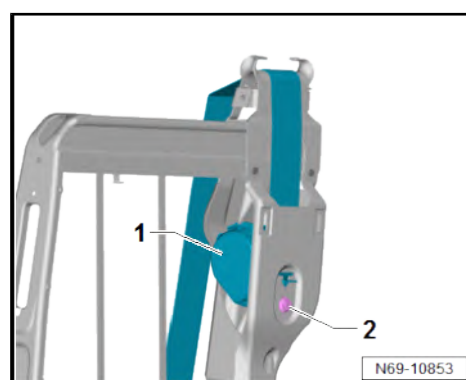



1.10 Removing and installing rear belt guide

⇒ ["1.10.1 Removing and installing rear belt guide, bench seat, double cab", page 125](#)

⇒ ["1.10.2 Removing and installing bracket for rear belt guide, bench seat, double cab", page 125](#)

⇒ ["1.10.3 Removing and installing rear belt guide, single seat passenger compartment", page 127](#)

1.10.1 Removing and installing rear belt guide, bench seat, double cab

Special tools and workshop equipment required

- ◆ Removal wedge - 3409-




Removing

- Use removal wedge - 3409- to detach fasteners on belt guide -2- in -direction of arrows-.
- Remove belt guide -2-.
- Guide out belt webbing -1- through slot -arrow-.

Installing

Install in reverse order of removal, observing the following:


- After guiding in belt webbing -1- through slot -arrow-, close belt guide -2-.

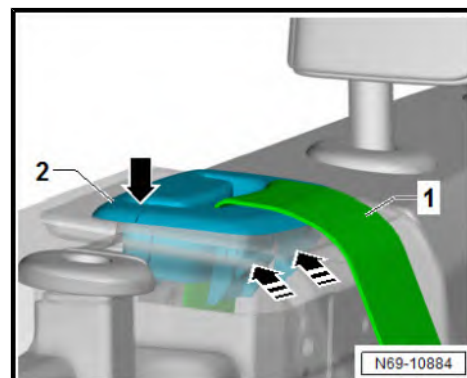

1.10.2 Removing and installing bracket for rear belt guide, bench seat, double cab


Special tools and workshop equipment required

- ◆ Pop rivet pliers - VAS 5072A-

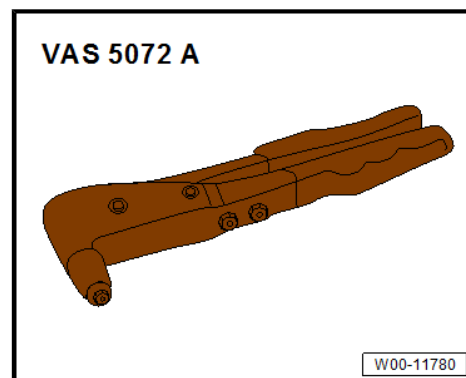



◆ Roll pin drift - VAS 5513-

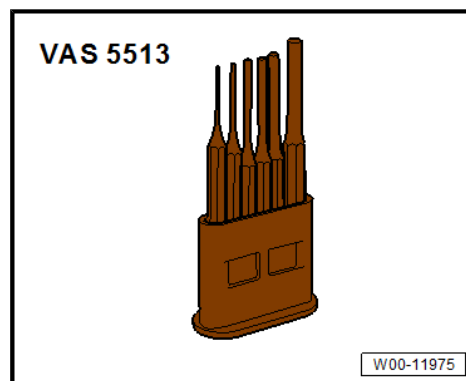

- ◆ Hand drill
- ◆ Drill bit with diameter smaller than 4.5 mm
- ◆ Safety goggles
- ◆ Safety gloves


Removing

- Remove cover and padding ⇒ [page 426](#) .

CAUTION

**Risk of injury from swarf being flung into air.
Irritation and injury to skin and eyes possible.**

- Wear safety goggles.
 - Wear protective gloves.
-
- Keep belt away from side at which drilling is carried out.
 - Drill off rivet heads -2- using drill and spiral drill bit with diameter less than 4.5 mm.
 - Drive out rivet shanks -2- with drift - VAS 5513- .
 - Detach bracket for belt guide -1-.
 - Remove swarf.
 - Guide out belt webbing through slot -arrow-.
 - Remove bracket for belt guide -1-.

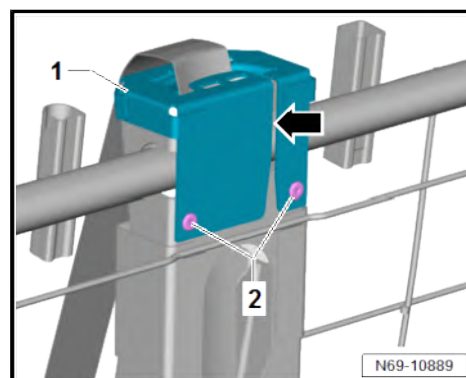




Supports for rear belt guide

- Keep belt away from side at which drilling is carried out.
- Drill off rivet heads -2- using drill and spiral drill bit with diameter less than 4.5 mm.
- Drive out rivet shanks with drift - VAS 5513- .
- Detach supports for belt guide -1-, and remove them.
- Remove swarf.

Installing

Install in reverse order of removal, observing the following:


- After guiding in belt webbing through slot, close bracket for belt guide.
- Use rivet pliers - VAS 5072A- to install new pop rivets.

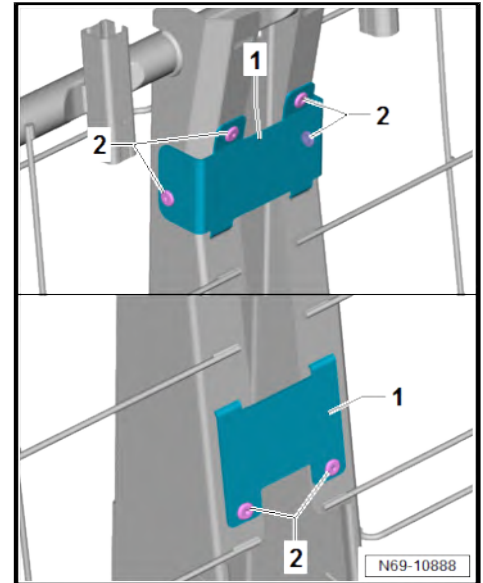


1.10.3 Removing and installing rear belt guide, single seat passenger compartment

Special tools and workshop equipment required

- ◆ Pop rivet pliers - VAS 5072A-

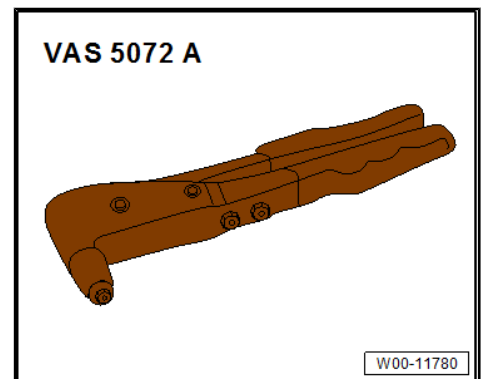

- ◆ Roll pin drift - VAS 5513-

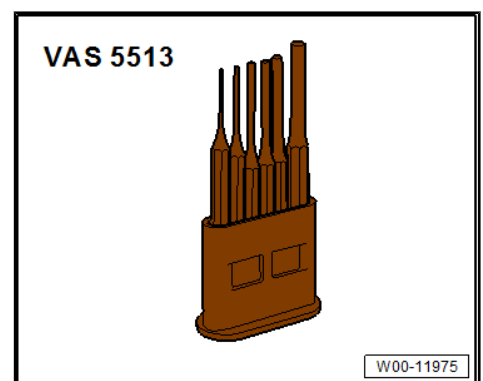

Removing

- Remove cover and padding => [page 426](#) .



CAUTION

Risk of injury from swarf being flung into air.
Irritation and injury to skin and eyes possible.


- Wear safety goggles.
- Wear protective gloves.

- Keep belt away from side at which drilling is carried out.
- Drill off rivet heads -2- using drill and spiral drill bit with diameter less than 4.5 mm.
- Drive out rivet shanks with drift - VAS 5513- .
- Remove swarf.
- Remove bracket for belt guide -1-.

Installing

Install in reverse order of removal, observing the following:

- Use rivet pliers - VAS 5072A- to install new pop rivets.

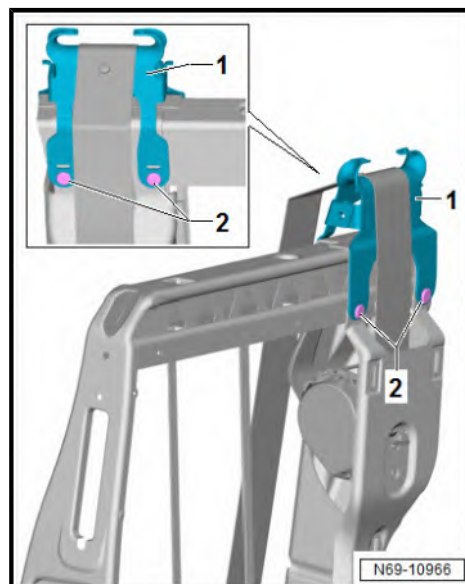

1.11 Removing and installing front belt guide

⇒ [“1.11.1 Removing and installing front belt guide, individual seat”, page 128](#)

⇒ [“1.11.2 Removing and installing front belt guide, bench seat”, page 128](#)

⇒ [“1.11.3 Removing and installing bracket for front belt guide, bench seat”, page 129](#)

1.11.1 Removing and installing front belt guide, individual seat

The belt guide fitting is permanently attached to the front three-point seat belt.

- Removing and installing front three-point seat belt
⇒ [page 113](#) .

1.11.2 Removing and installing front belt guide, bench seat

Special tools and workshop equipment required



◆ Removal wedge - 3409-




Removing

- Use removal wedge - 3409- to detach fasteners on belt guide -2- in -direction of arrows-.
- Remove belt guide -2-.
- Guide out belt webbing -1- through slot -arrow-.

Installing

Install in reverse order of removal, observing the following:


- After guiding in belt webbing -1- through slot -arrow-, close belt guide -2-.

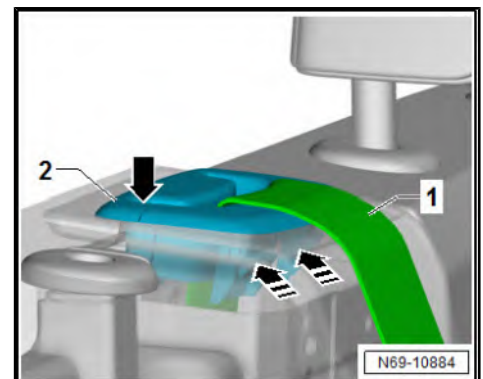


1.11.3 Removing and installing bracket for front belt guide, bench seat

Special tools and workshop equipment required

◆ Pop rivet pliers - VAS 5072A-

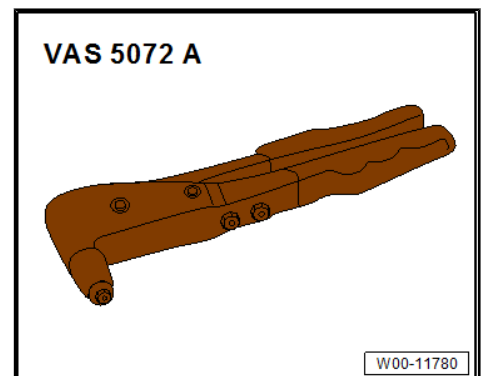

◆ Roll pin drift - VAS 5513-

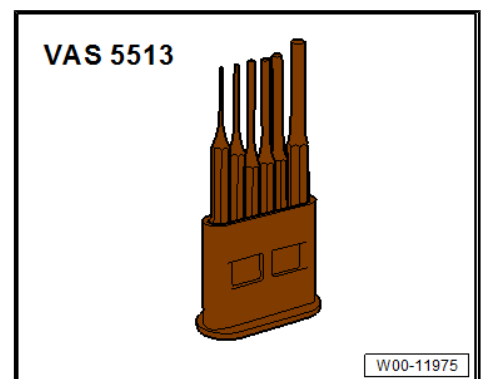

◆ Hand drill

◆ Drill bit with diameter smaller than 4.5 mm



- ◆ Safety goggles
- ◆ Safety gloves

Removing



Note

The description is for vehicles with a folding backrest. Adapt accordingly for vehicles without a backrest.

- Remove cover and cushion from outer backrest
⇒ [page 411](#) .



CAUTION


**Risk of injury from swarf being flung into air.
Irritation and injury to skin and eyes possible.**

- **Wear safety goggles.**
 - **Wear protective gloves.**
-
- Keep belt away from side at which drilling is carried out.
 - Drill off rivet heads -2- using drill and spiral drill bit with diameter less than 4.5 mm.
 - Drive out rivet shanks -2- with drift - VAS 5513- .
 - Detach bracket for belt guide -1-.
 - Remove swarf.
 - Guide out belt webbing through slot -arrow-.
 - Remove bracket for belt guide -1-.

Installing

Install in reverse order of removal, observing the following:

- After guiding in belt webbing through slot, close bracket for belt guide.
- Use rivet pliers - VAS 5072A- to install new pop rivets.

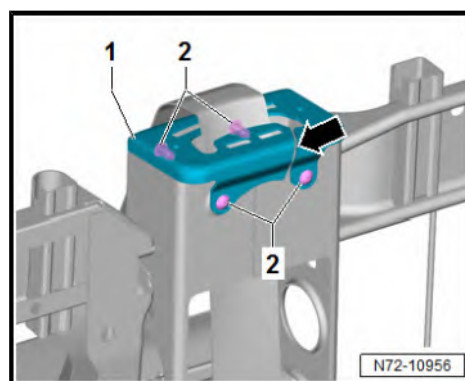

1.12 Removing and installing front belt end fitting

Special tools and workshop equipment required

- ◆ Torque wrench - V.A.G 1331-






Removing



Note

- ◆ *The description is for vehicles with a partition panel. Adapt accordingly for vehicles without a partition panel.*
- ◆ *The removal and installation procedure on vehicles with a partition panel is carried out via the load compartment. The removal and installation procedure on vehicles without a partition panel is carried out via the passenger compartment.*
- ◆ *For complete removal of the belt end fitting, it is necessary to remove the three-point automatic seat belt as the belt end fitting is firmly attached to the belt ⇒ [page 113](#).*
- Front seat must be positioned in foremost and highest position.
- Unclip cap -1- in direction of -arrow- from bottom B-pillar trim -2-.
- Unscrew bolt -4-.
- Remove belt -3- with front belt end fitting from body.

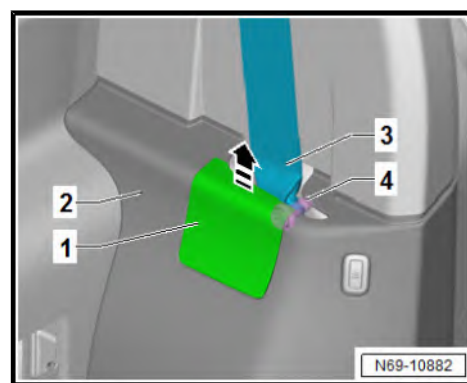


Installing

Install in reverse order of removal, observing the following:

- Insert belt end fitting -1- with locating element in mounting -arrow-.
- Tighten bolt -2-.

Specified torques

- ◆ ⇒ [“1.2 Assembly overview - front three-point seat belt”, page 106](#)

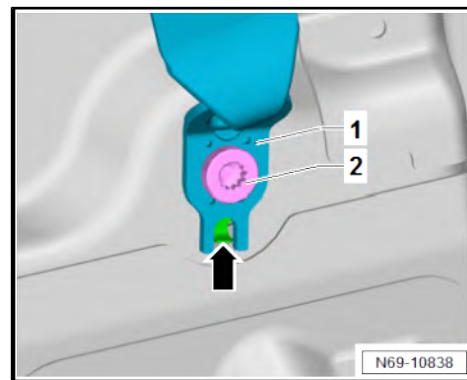

1.13 Removing and installing rear outer belt end fitting

⇒ [“1.13.1 Removing and installing rear outer belt end fitting, single seat passenger compartment”, page 131](#)

⇒ [“1.13.2 Removing and installing rear outer belt end fitting, rear bench seat, double cab”, page 132](#)

1.13.1 Removing and installing rear outer belt end fitting, single seat passenger compartment

Special tools and workshop equipment required



- ◆ Torque wrench - V.A.G 1331-



Removing


- Remove three-point seat belt ➔ [page 119](#) .
- Unscrew nut -2-.
- Remove belt end fitting -1-.

Installing

Install in reverse order of removal, observing the following:

Specified torques

- ◆ ➔ ["1.3 Assembly overview - rear outer three-point seat belt", page 108](#)

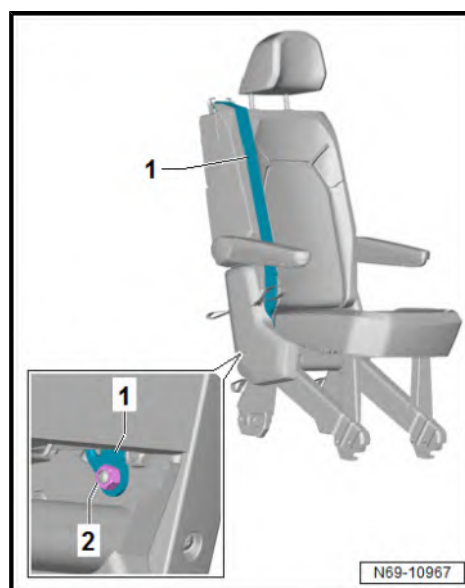

1.13.2 Removing and installing rear outer belt end fitting, rear bench seat, double cab

Removing



Note


For complete removal of the belt end fitting, it is necessary to remove the three-point automatic seat belt as the belt end fitting is firmly attached to the belt ➔ [page 119](#) .

- Insert a small screwdriver -arrow- between spring -2- and belt end fitting -1- (do not bend).
- Remove belt end fitting -1- downwards in -direction of arrow- from pin head -3-.

Installing

Install in reverse order of removal, observing the following:

- Pull belt webbing, locking lug on spring -2- must engage completely on pin head -3-.

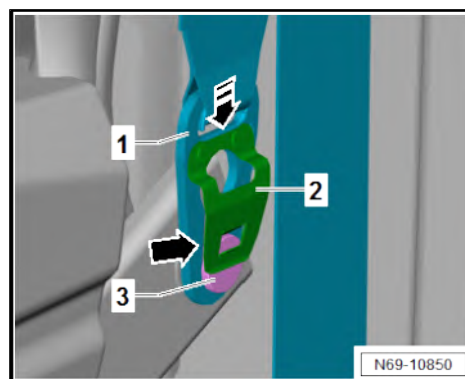



1.14 Removing and installing belt height adjuster


Special tools and workshop equipment required

- ◆ Torque wrench - V.A.G 1331-



Removing

- Remove upper B-pillar trim ➔ [page 270](#) .
- Unscrew bolt -1-.
- Remove belt guide fitting -2- with belt webbing.

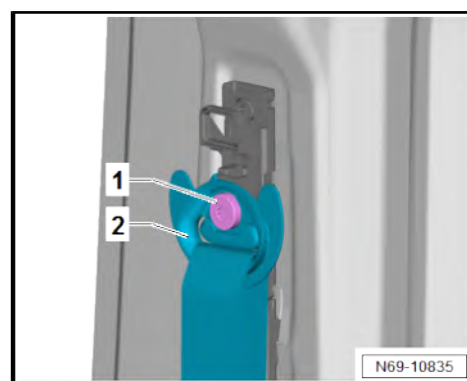

- Unscrew bolt -1-.
- Remove belt height adjuster -2- upwards from B-pillar -3-.

Installing


Install in reverse order of removal, observing the following:

- If parts of the belt system are removed because of an accident, the belt system bolts must be renewed.



Note

- ◆ *As a replacement part, belt height adjusters always come with slider for belt height adjuster set to lowest position (assembly position).*
- ◆ *If previously removed belt height adjusters are reinstalled, they must be moved to lowest position for installation (assembly position).*

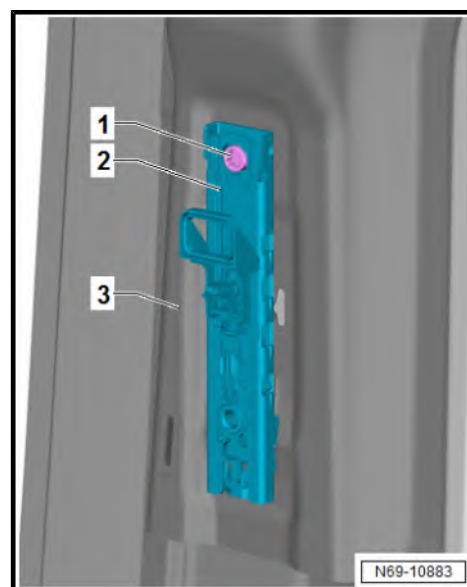

Specified torques

- ◆ ➔ ["1.2 Assembly overview - front three-point seat belt", page 106](#)



1.15 Removing and installing front belt buckle


⇒ ["1.15.1 Removing and installing front belt buckle, individual seat", page 134](#)

⇒ ["1.15.2 Removing and installing front belt buckle, bench seat", page 135](#)

1.15.1 Removing and installing front belt buckle, individual seat


Special tools and workshop equipment required

- ◆ Torque wrench - V.A.G 1331-

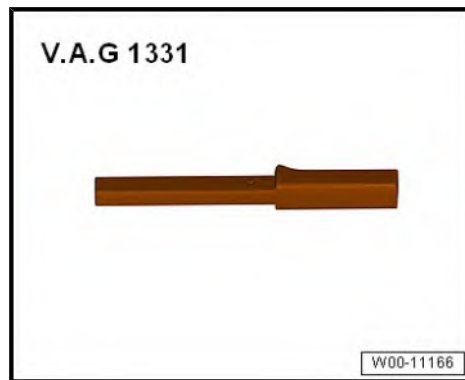

Removing

- Remove seat trim on tunnel side ⇒ [page 368](#) .
- If fitted, separate connector -3-.
- Detach electrical wire from seat frame.
- Unscrew bolt -2-.
- Remove belt buckle -1-.

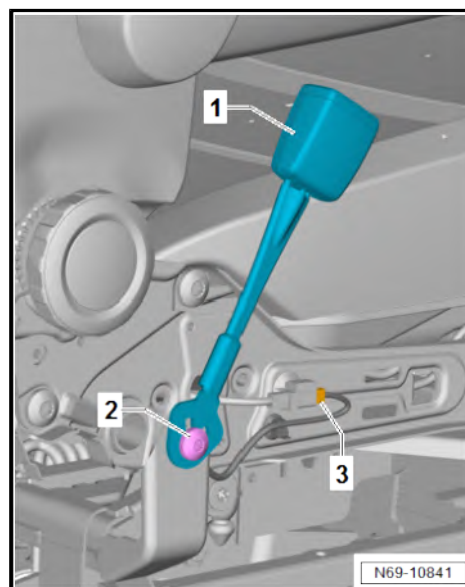


Installing

Install in reverse order of removal, observing the following:

- Place belt buckle -1- on locating element -arrow-.
- Tighten bolt -2-.

Specified torques

- ◆ ⇒ ["1.6 Assembly overview - front belt buckle", page 111](#)

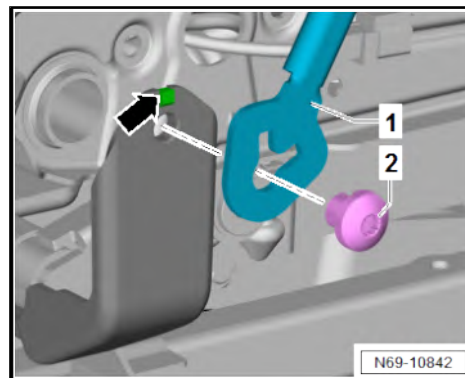



1.15.2 Removing and installing front belt buckle, bench seat

Special tools and workshop equipment required

- ◆ Torque wrench - V.A.G 1331-




Removing

Outer belt buckle

- Remove seat trim on tunnel side ➔ [page 368](#) .
- If fitted, disconnect connector.
- Unscrew nut -2-.
- Remove belt buckle -1- from bench seat -3-.

Inner belt buckle

The inner belt buckle is permanently attached to the belt webbing of the belt inertia reel ➔ [page 113](#) .

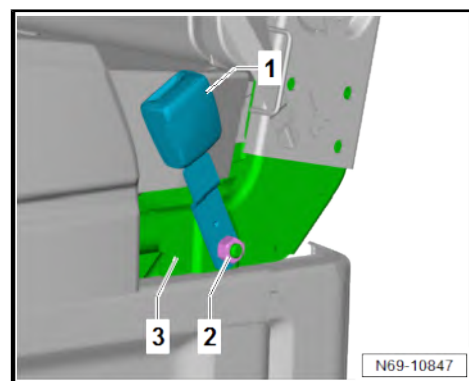

Installing

Install in reverse order of removal, observing the following:

Specified torques

- ◆ ➔ ["1.6 Assembly overview - front belt buckle", page 111](#)
- ◆ ➔ ["1.2 Assembly overview - front three-point seat belt", page 106](#)

1.16 Removing and installing rear belt buckle

➔ ["1.16.1 Removing and installing rear belt buckle, rear bench seat, double cab", page 135](#)

➔ ["1.16.2 Removing and installing rear belt buckle, single seat passenger compartment", page 136](#)

1.16.1 Removing and installing rear belt buckle, rear bench seat, double cab

Special tools and workshop equipment required



- ◆ Torque wrench - V.A.G 1331-




Removing



Note

Because the outer belt buckles are permanently attached to the belt webbing, the belt inertia reels must be removed beforehand to allow for removing the outer belt buckles -3- completely
⇒ [page 122](#) .

- Remove seat cushion ⇒ [page 387](#) .
- Unscrew bolt -2-.
- Remove centre twin belt buckle -1-.
- Unscrew bolt -4-.
- Remove outer belt buckle -3-.

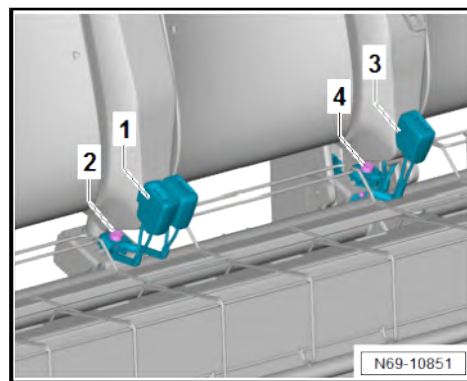


Installing

Install in reverse order of removal, observing the following:

- Insert twin belt buckle -1- with locating element in mounting -arrows-.
- Tighten bolts -2-.

Specified torques

- ◆ ⇒ [“1.7 Assembly overview - rear belt buckle”, page 112](#)

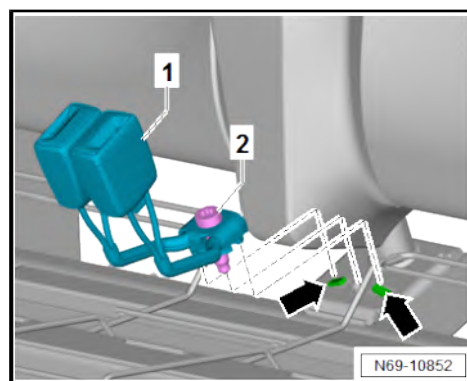


1.16.2 Removing and installing rear belt buckle, single seat passenger compartment

Special tools and workshop equipment required



◆ Torque wrench - V.A.G 1331-

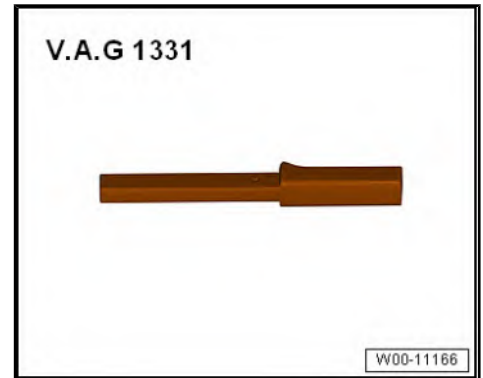

Removing


- Unscrew bolts -3-.
- Remove fitting -2-.
- Remove belt buckle -1- from individual seat.

Installing

Install in reverse order of removal, observing the following:

Specified torques

- ◆ ⇒ ["1.3 Assembly overview - rear outer three-point seat belt", page 108](#)

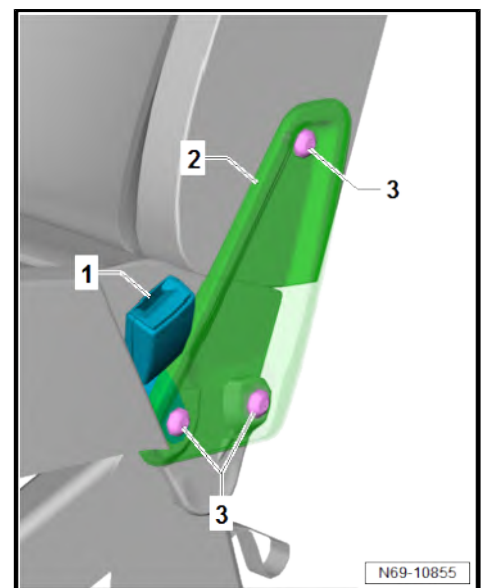

2 Airbag system

⇒ ["2.1 Overview of fitting locations - airbag system", page 138](#)

2.1 Overview of fitting locations - airbag system

1 - Curtain airbags

- ☐ Qty. 2
- ☐ Assembly overview
⇒ [page 157](#)
- ☐ Removing and installing
⇒ [page 157](#)

2 - Front passenger side airbag deactivated warning lamp - K145-

- ☐ Removing and installing
⇒ Electrical system;
Rep. gr. 96 ; Controls;
Removing and installing
front passenger airbag
warning lamp - K145-

3 - Front side airbags

- ☐ Qty. 2
- ☐ Assembly overview
⇒ [page 154](#)
- ☐ Removing and installing
⇒ [page 154](#)

4 - Airbag unit on driver side

- ☐ Assembly overview
⇒ [page 145](#)
- ☐ Removing and installing
⇒ [page 145](#)

5 - Airbag warning lamp - K75-

- ☐ Integrated into dash
panel insert - KX2-
- ☐ Cannot be replaced in-
dividually
- ☐ Removing and installing
⇒ Electrical system;
Rep. gr. 90 ; Dash panel
insert; Removing and installing dash panel insert - KX2-

6 - Airbag control unit - J234-


- ☐ Assembly overview ⇒ [page 139](#)
- ☐ Removing and installing ⇒ [page 139](#)

7 - Key operated switch to deactivate front passenger side airbag - E224-

- ☐ Assembly overview ⇒ [page 28](#)
- ☐ Removing and installing ⇒ [page 153](#)

8 - Airbag unit on front passenger side

- ☐ Assembly overview ⇒ [page 150](#)
- ☐ Removing and installing ⇒ [page 151](#)

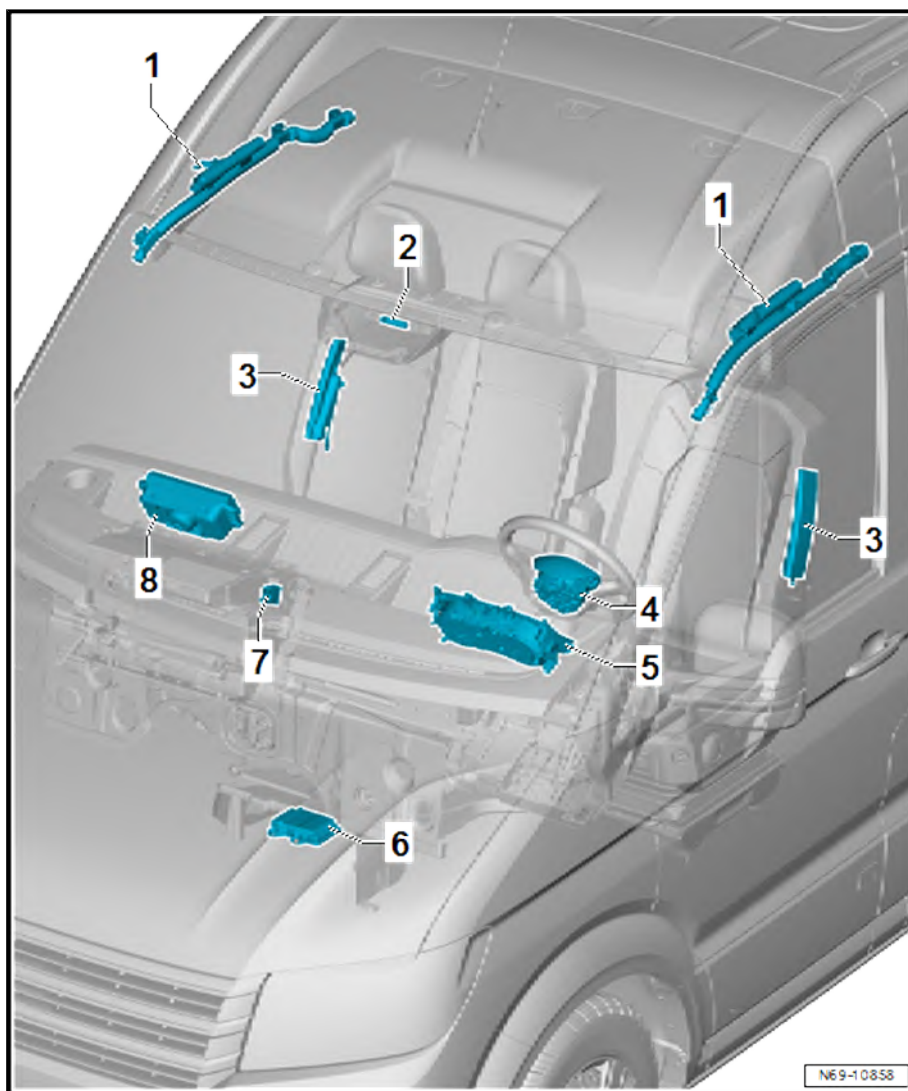



3 Airbag control unit

⇒ [“3.1 Assembly overview - airbag control unit”, page 139](#)

⇒ [“3.2 Removing and installing airbag control unit J234 ”, page 139](#)

3.1 Assembly overview - airbag control unit

1 - Airbag control unit - J234-


- ☐ Removing and installing
⇒ [page 139](#)
- ☐ The control unit is earthed via the housing with the body.

2 - Nut

- ☐ Nut and earth stud form the earth connection for the control unit.
- ☐ Threads must be free of paint and dirt.
- ☐ 9 Nm

3 - Nuts

- ☐ Qty. 2
- ☐ Nut and earth stud form the earth connection for the control unit.
- ☐ Threads must be free of paint and dirt.
- ☐ 9 Nm

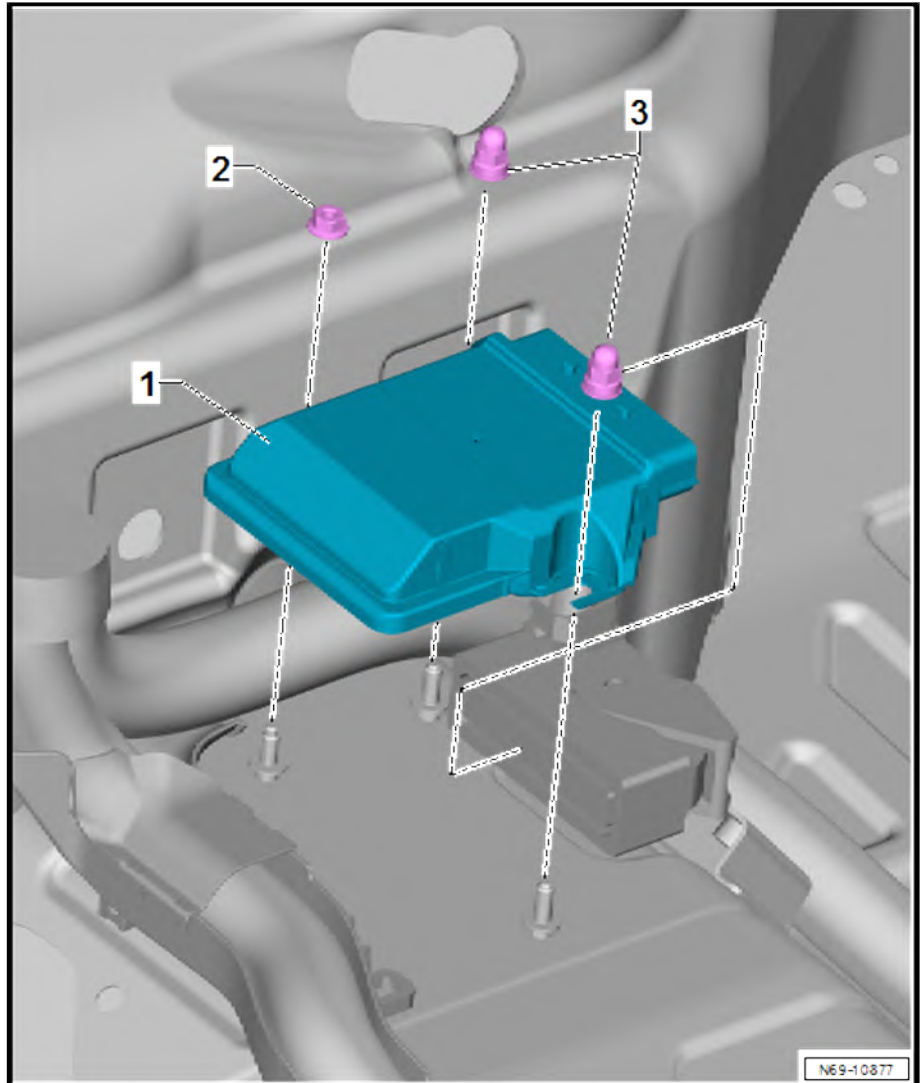

3.2 Removing and installing airbag control unit - J234-


Special tools and workshop equipment required



◆ Release tool - T10236-



◆ Removal lever - 80 - 200-

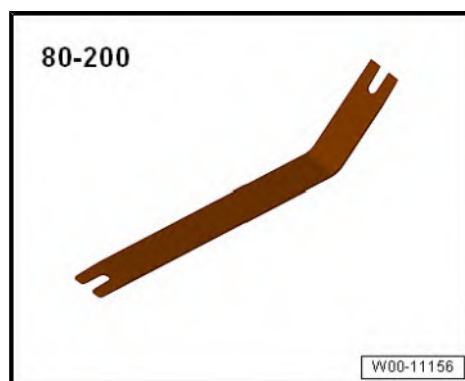

Removing



Note

- ◆ *Fit all cable ties and other fasteners for wiring harness in the same places from which they were detached or cut.*
- ◆ *Note wiring harnesses when removing components. Excessive tensile stress may cause damage.*
- ◆ *When using release tool - T10236- or removal lever - 80 - 200- the wires can be removed more easily.*

Vehicles with electric drive



DANGER

Danger to life from high voltage.

Risk of severe or fatal injury due to electric shock.

- **The high-voltage system must be de-energised by a suitably qualified technician.**

- De-energise high-voltage system ⇒ Rep. gr. 93 ; De-energising high-voltage system .

Continued for all vehicles

- Disconnect battery earth cable with ignition switched on ⇒ Electrical system; Rep. gr. 27 ; Battery; Connecting and disconnecting battery .
- Remove footwell cover ⇒ [page 53](#) .



CAUTION

Pyrotechnic components can trigger unintentionally.

Danger of injury.


- Discharge any static charge in your body by briefly touching the door striker plate.



- Open locking bar -6- in -direction of arrow-.
- Separate connector -5-.
- Release fasteners -3- from body.
- Lay wiring harness -4- aside.
- Unscrew nuts -2-.
- Lift airbag control unit - J234- -1- off threaded studs, and remove it.

Installing

Install in reverse order of removal, observing the following:

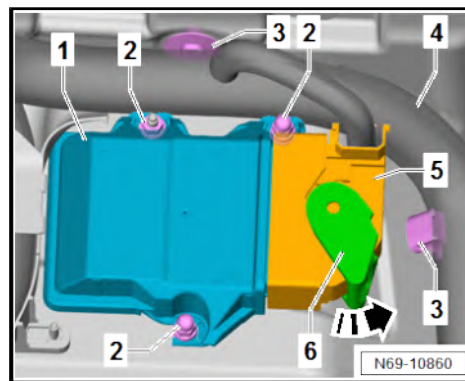

Note

- ♦ *Before nuts are installed, the respective thread must be cleaned.*
- ♦ *Route all of the various lines and electrical wiring in such a way that they are restored to their original positions and the wiring harnesses are not crushed.*
- It is vital for the control unit to be properly bolted before the ignition is switched on and the battery is connected.



Note

Battery must be connected with ignition switched on. If pyrotechnic components (e.g. airbag, belt tensioners) are repaired incorrectly, they could be accidentally triggered. Ensure that nobody is in vehicle when connecting battery.

- Connect battery earth cable with ignition switched on ⇒ Electrical system; Rep. gr. 27 ; Battery; Connecting and disconnecting battery .



Note

If the ignition is not switched on after reconnecting the battery, the ignition may only be switched on (key/button) from the driver's seat with the seat set in the rearmost position.

Vehicles with electric drive



WARNING

Danger to life from high voltage.

Risk of severe or fatal injury due to electric shock.

- **The high-voltage system must be brought into operation by a suitably qualified technician.**
- Re-energise high-voltage system ⇒ Rep. gr. 93 ; Re-energising high-voltage system .

Continued for all vehicles

- Use ⇒ Vehicle diagnostic tester to read event memory, clear event memory as necessary, and then read it again.



Specified torques

- ◆ ⇒ ["3.1 Assembly overview - airbag control unit", page 139](#)



4 Battery isolator igniter

⇒ ["4.1 Removing and installing battery isolator igniter",
page 144](#)

4.1 Removing and installing battery isolator igniter

The battery isolator igniter is permanently connected with the earth cable to battery monitoring control unit - J367- .

- Removing and installing battery monitor control unit - J367- ⇒
Electrical system; Rep. gr. 27 ; Battery; Removing and installing battery monitor control unit - J367- .

5 Driver's airbag

⇒ ["5.1 Assembly overview - driver side airbag", page 145](#)

⇒ ["5.2 Removing and installing airbag unit with igniter", page 145](#)

⇒ ["5.3 Removing and installing return spring with slip ring \(coil connector\)", page 148](#)

⇒ ["5.4 Renewing connector on airbag", page 149](#)

5.1 Assembly overview - driver side airbag

1 - Airbag unit on driver side

- ☐ With driver side airbag igniter - N95- .
- ☐ Removing and installing
⇒ [page 145](#)

2 - Wiring harness

- ☐ For multifunction buttons in steering wheel - E441- / -E440-
- ☐ Renewing connector on airbag ⇒ [page 149](#)

3 - Wiring harness

- ☐ For driver side airbag igniter - N95-
- ☐ Renewing connector on airbag ⇒ [page 149](#)

4 - Steering wheel


- ☐ Removing and installing
⇒ Running gear, axles, steering; Rep. gr. 48 ; Steering wheel; Removing and installing steering wheel

5 - Steering column combination switch

- ☐ With steering column electronics control unit - J527-
- ☐ Removing and installing
⇒ Electrical system; Rep. gr. 94 ; Steering column switch module; Removing and installing steering column combination switch .

6 - Catch

- ☐ Qty. 2
- ☐ To release, use drift - VAS 5513-

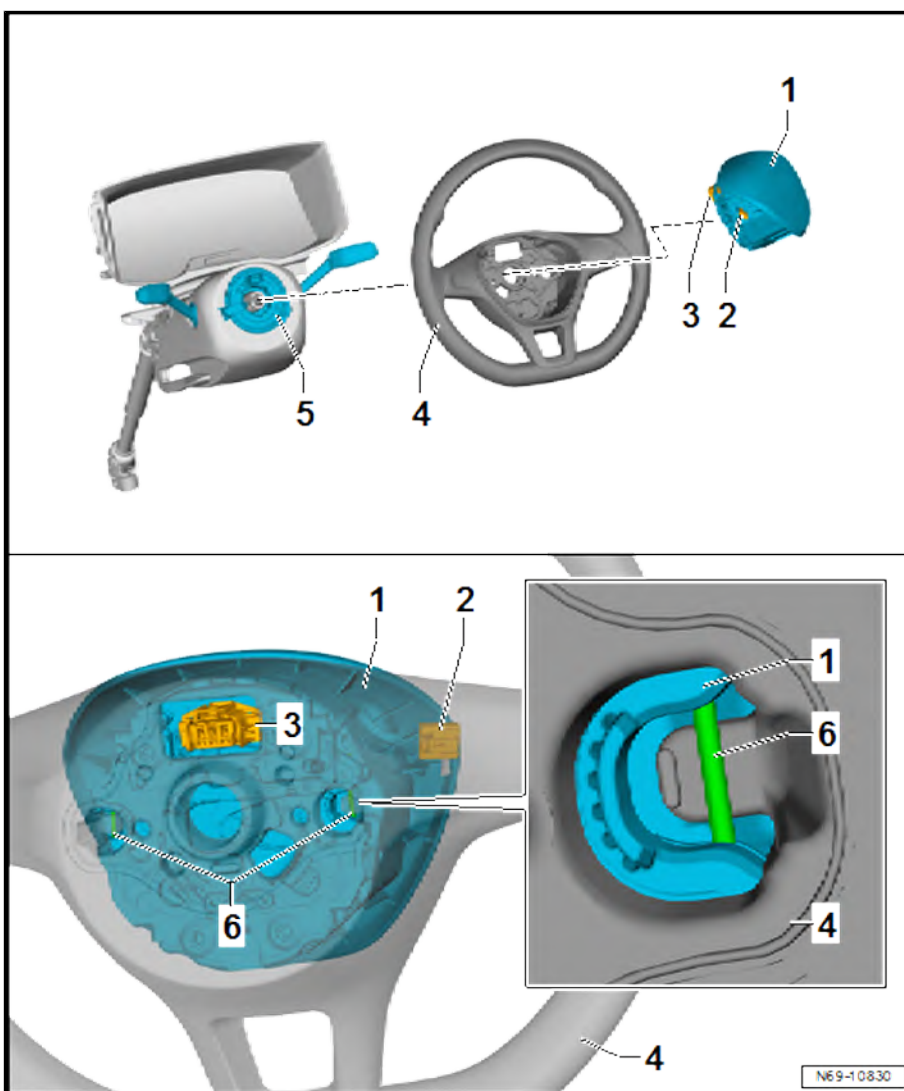


5.2 Removing and installing airbag unit with igniter

Special tools and workshop equipment required



◆ Roll pin drift - VAS 5513-

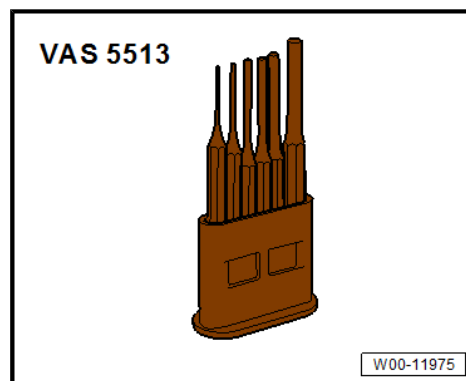

Removing

Vehicles with electric drive

DANGER

Danger to life from high voltage.

Risk of severe or fatal injury due to electric shock.

- The high-voltage system must be de-energised by a suitably qualified technician.

- De-energise high-voltage system ⇒ Rep. gr. 93 ; De-energising high-voltage system .

Continued for all vehicles

- Disconnect battery earth cable with ignition switched on ⇒ Electrical system; Rep. gr. 27 ; Battery; Connecting and disconnecting battery .
- Move steering wheel to lowest position.
- Adjust steering wheel reach so that the steering wheel projects as far into the passenger compartment as possible.



Note

- ◆ *If a flat-bladed screwdriver is used, wires may become damaged.*
- ◆ *Note wiring harnesses when removing the airbag unit. Excessive tensile stress may cause damage.*
- ◆ *Before removing the components, protect them to avoid any damage caused by tools.*
- ◆ *During the following work, ensure that the tools are positioned in such a way that they cannot slip.*
- Mask off end of handle from roll pin drift - VAS 5513- with adhesive tape to prevent damage to dash panel insert or trim elements.

CAUTION

Pyrotechnic components can trigger unintentionally.

Danger of injury.

- Discharge any static charge in your body by briefly touching the door striker plate.
- Turn steering wheel, as shown, until one opening on rear of steering wheel points upwards.




- Release locking bracket -3- for airbag unit with igniter -1- from steering wheel -2- in direction of -arrow- using roll pin drift -VAS 5513- .
- Turn steering wheel 180°.



Note

Lightly press with one hand on the horn symbol on the side of the steering wheel which has already been released. This is necessary to prevent the airbag from becoming jammed in the steering wheel.

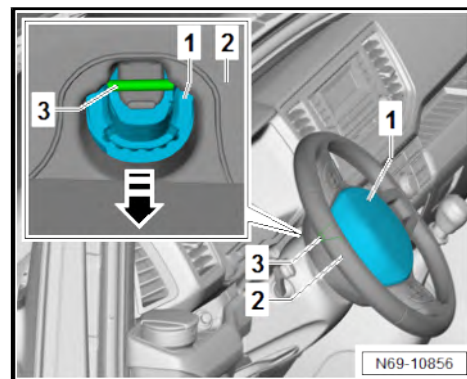


- Repeat release procedure.
- Airbag unit with igniter is released from fasteners in steering wheel.
- Turn steering wheel back to “straight ahead” position.
- Remove airbag unit with igniter -1- from steering wheel slightly until electrical connector -3- is accessible.
- Release connector locking mechanism -2- in direction of -arrow-.
- Disconnect electrical connector -3- from steering column electronics control unit - J527- .

Vehicles with multifunction buttons in steering wheel

- Disconnect electrical connector -4- in direction of -arrow- from multifunction buttons on left in steering wheel - E440- -5-.

Continued for all vehicles

- Remove airbag unit with igniter -1- from steering wheel.

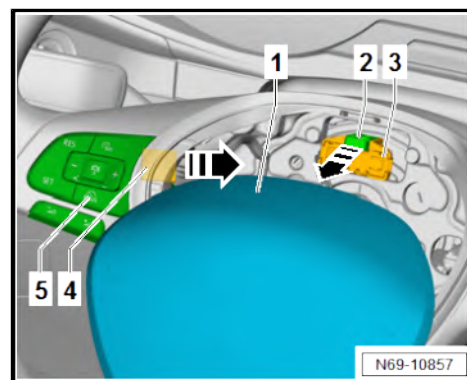

Note

Place airbag aside in such a way that the impact padding points upwards.



Installing


Install in reverse order of removal, observing the following:

- Check that electrical connectors -3- are firmly engaged with wiring harness -1-.
- Check that wiring harness -1- is firmly engaged with holders for airbag unit with igniter -2-.
- It is vital for the airbag unit to be properly engaged before the ignition is switched on and the battery is connected.



Note

Route all of the various lines and electrical wiring in such a way that they are restored to their original positions and the wiring harnesses are not crushed.

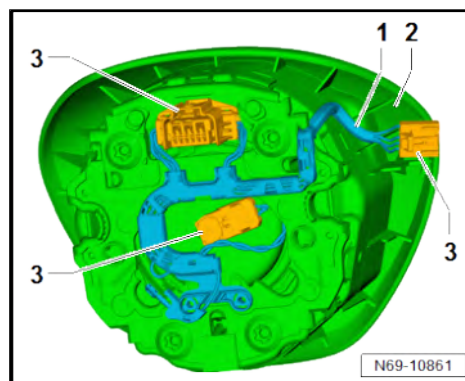

Note

Battery must be connected with ignition switched on. If pyrotechnic components (e.g. airbag, belt tensioners) are repaired incorrectly, they could be accidentally triggered. Ensure that nobody is in vehicle when connecting battery.

- Switch on ignition.
- Connect battery earth cable with ignition switched on ⇒ Electrical system; Rep. gr. 27 ; Battery; Connecting and disconnecting battery .



Note

If the ignition is not switched on after reconnecting the battery, the ignition may only be switched on (key/button) from the driver's seat with the seat set in the rearmost position.

Vehicles with electric drive



WARNING

Danger to life from high voltage.

Risk of severe or fatal injury due to electric shock.

- **The high-voltage system must be brought into operation by a suitably qualified technician.**

- Re-energise high-voltage system ⇒ Rep. gr. 93 ; Re-energising high-voltage system .

Continued for all vehicles

- Use ⇒ Vehicle diagnostic tester to read event memory, clear event memory as necessary, and then read it again.

5.3 Removing and installing return spring with slip ring (coil connector)

Return ring with slip ring (coil connector) is securely attached to steering column electronics control unit - J527- .

- Removing and installing steering column electronics control unit - J527- ⇒ Electrical system; Rep. gr. 94 ; Steering column



switch module; Removing and installing steering column electronics control unit - J527- .

5.4 Renewing connector on airbag



Note

The description is for vehicles with a multifunction steering wheel. Adapt accordingly for vehicles without a multifunction steering wheel.

Removing

- Remove airbag unit with igniter ➔ [page 145](#) .
- Detach wiring harness -1- at holders for airbag unit with igniter -2-.
- Remove wiring harness -1- with electrical connectors -3-.


Installing

Install in reverse order of removal, observing the following:



Note

Route all of the various lines and electrical wiring in such a way that they are restored to their original positions and the wiring harnesses are not crushed.

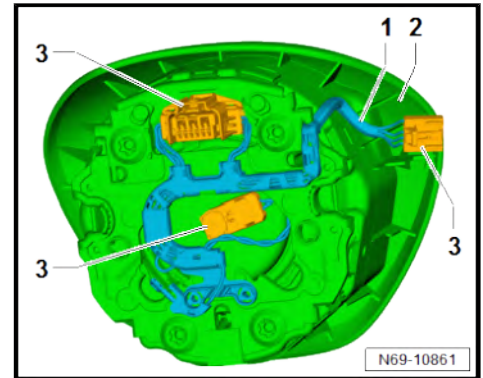

6 Front passenger side airbag

⇒ [“6.1 Assembly overview - front passenger side airbag”, page 150](#)

⇒ [“6.2 Removing and installing front passenger side airbag unit with igniter”, page 151](#)

⇒ [“6.3 Removing and installing key-operated switch to deactivate front passenger side airbag E224”, page 153](#)

⇒ [“6.4 Removing and installing front passenger side airbag deactivated warning lamp K145”, page 153](#)

6.1 Assembly overview - front passenger side airbag

1 - Airbag unit on front passenger side


- ☐ With front passenger side airbag igniter 1 - N131- .
- ☐ Removing and installing
⇒ [page 151](#)

2 - Bracket

- ☐ Qty. 2
- ☐ Assembly overview
⇒ [page 216](#)
- ☐ Removing and installing
⇒ [page 151](#)

3 - Bolts

- ☐ Renew after removal
- ☐ Before new bolts are installed, the thread of the corresponding fitting must be cleaned.
- ☐ Qty. 4
- ☐ 8 Nm

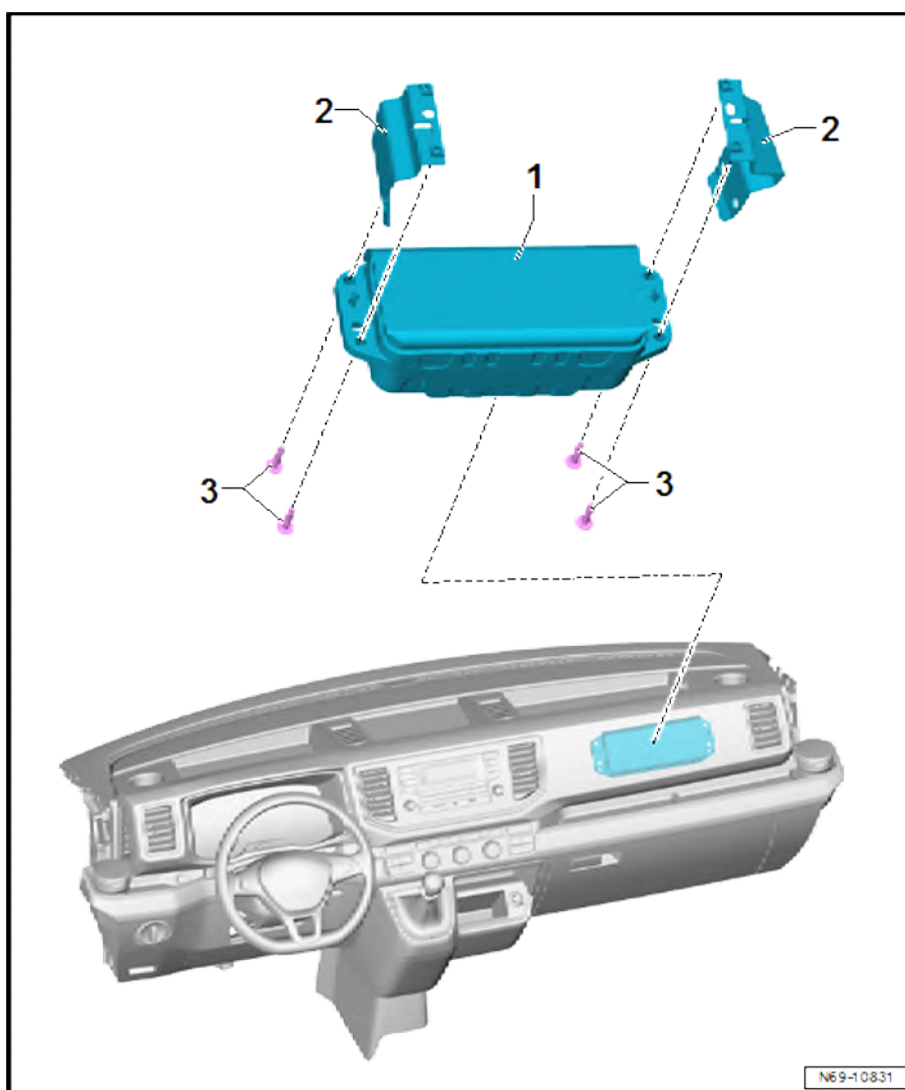



6.2 Removing and installing front passenger side airbag unit with igniter

⇒ [“6.2.1 Removing and installing front passenger side airbag unit with igniter”, page 151](#)

⇒ [“6.2.2 Removing and installing bracket for airbag unit on front passenger side”, page 153](#)

6.2.1 Removing and installing front passenger side airbag unit with igniter

Removing

Vehicles with electric drive



DANGER

Danger to life from high voltage.

Risk of severe or fatal injury due to electric shock.

- The high-voltage system must be de-energised by a suitably qualified technician.

- De-energise high-voltage system ⇒ Rep. gr. 93 ; De-energising high-voltage system .

Continued for all vehicles

- Disconnect battery earth cable with ignition switched on ⇒ Electrical system; Rep. gr. 27 ; Battery; Connecting and disconnecting battery .
- Remove glove compartment ⇒ [page 37](#) .



CAUTION

Pyrotechnic components can trigger unintentionally.

Danger of injury.

- Discharge any static charge in your body by briefly touching the door striker plate.




- Separate connector -4-.
- Unscrew bolts -2-.
- Remove front passenger side airbag unit with igniter -1- from brackets of front passenger side airbag unit -3-.
- Guide front passenger side airbag unit with igniter -1- downwards out of installation opening in glove compartment.



Note

Place airbag aside in such a way that the impact padding points upwards.

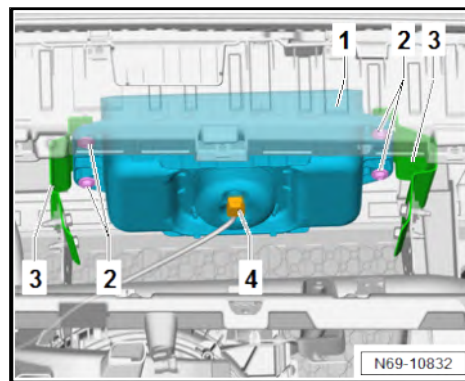

Installing

Install in reverse order of removal, observing the following:



Note

Note allocation of airbag unit to dash panel ⇒ Electronic parts catalogue (ETKA) or ⇒ webMANTIS for MAN TGE.

- It is vital for the airbag unit to be properly screwed in before the ignition is switched on and the battery is connected.



Note

Battery must be connected with ignition switched on. If pyrotechnic components (e.g. airbag, belt tensioners) are repaired incorrectly, they could be accidentally triggered. Ensure that nobody is in vehicle when connecting battery.

- Switch on ignition.
- Connect battery earth cable with ignition switched on ⇒ Electrical system; Rep. gr. 27 ; Battery; Connecting and disconnecting battery .



Note

If the ignition is not switched on after reconnecting the battery, the ignition may only be switched on (key/button) from the driver's seat with the seat set in the rearmost position.

Vehicles with electric drive



WARNING

Danger to life from high voltage.

Risk of severe or fatal injury due to electric shock.

- The high-voltage system must be brought into operation by a suitably qualified technician.

- Re-energise high-voltage system ⇒ Rep. gr. 93 ; Re-energising high-voltage system .

Continued for all vehicles

- Use ⇒ Vehicle diagnostic tester to read event memory, clear event memory as necessary, and then read it again.



Specified torques

- ◆ ➤ ["6.1 Assembly overview - front passenger side airbag", page 150](#)

6.2.2 Removing and installing bracket for air-bag unit on front passenger side

Removing


- Remove airbag unit with igniter on front passenger side ➤ [page 151](#) .
- Unscrew bolts -2-.
- Remove bracket of front passenger airbag unit -1-.

Installing

Install in reverse order of removal, observing the following:

Specified torques

- ◆ ➤ ["4.1 Assembly overview - central tube for dash panel", page 216](#)

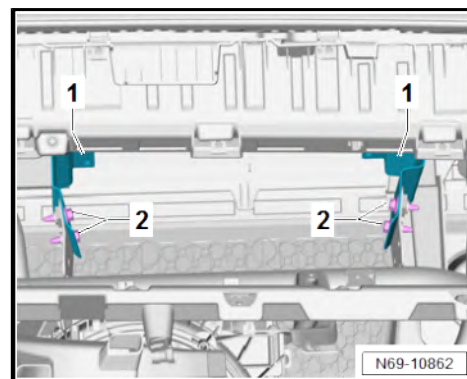

6.3 Removing and installing key-operated switch to deactivate front passenger side airbag - E224-


Removing

- Remove glove compartment ➤ [page 37](#) .
- Press together retaining springs -2-.
- Press out key operated switch to deactivate front passenger side airbag - E224- -1- from glove compartment -3-.

Installing

Install in reverse order of removal, observing the following:

- Ensure that key operated switch to deactivate front passenger side airbag - E224- audibly engages in glove compartment.

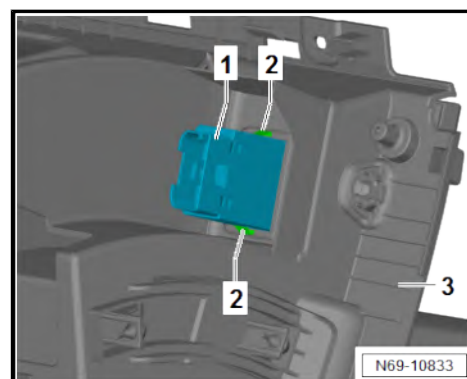

6.4 Removing and installing front passenger side airbag deactivated warning lamp - K145-

Removing

- Remove front passenger side airbag deactivated warning lamp - K145- ➤ Electrical system; Rep. gr. 96 ; Controls; Removing and installing front passenger side airbag deactivated warning lamp - K145- .

Installing

Install in reverse order.

7 Side airbags

⇒ ["7.1 Assembly overview - front side airbag", page 154](#)

⇒ ["7.2 Removing and installing front side airbag with igniter", page 154](#)

7.1 Assembly overview - front side airbag



Note

The description is for vehicles with an individual seat. The description for vehicles with a bench seat is analogous.

1 - Front side airbag

☐ With:

- ◆ Side airbag igniter on driver side - N199-
- ◆ Side airbag igniter on front passenger side - N200-
 - ☐ Removing and installing
⇒ [page 154](#)

2 - Bolt


- ☐ Renew after removal
- ☐ 8 Nm

3 - Wiring harness

- ☐ From side airbag igniter on driver side - N199- / side airbag igniter on front passenger side - N200- .

4 - Backrest frame

- ☐ Assembly overview
⇒ [page 333](#)
- ☐ Removing and installing
⇒ [page 355](#)

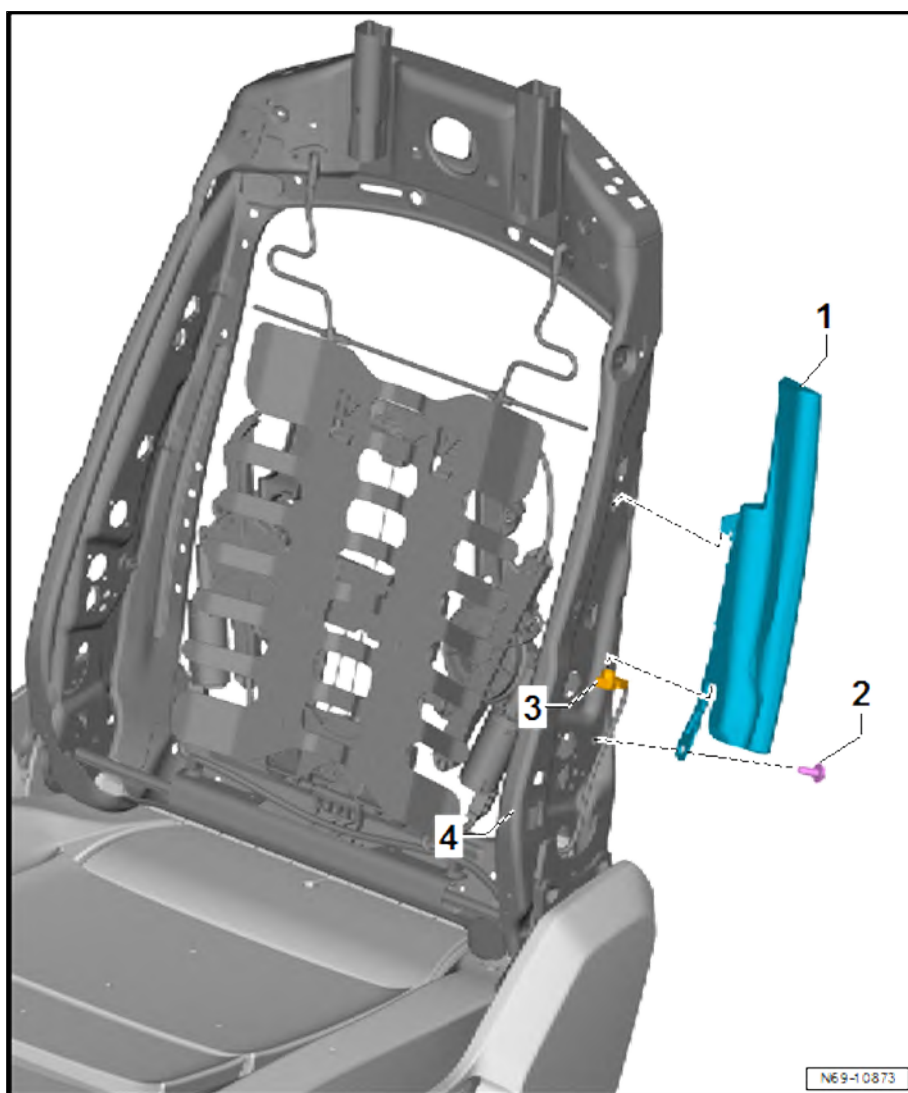


7.2 Removing and installing front side airbag with igniter

Special tools and workshop equipment required



◆ Torque wrench - V.A.G 1783-

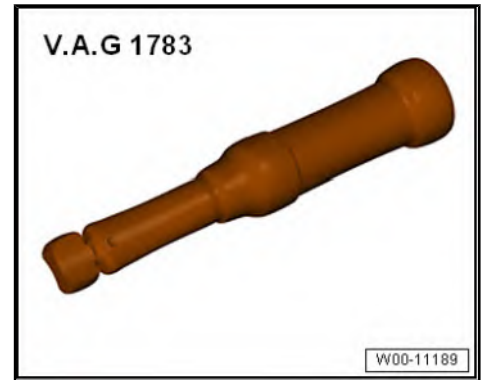

Removing

Vehicles with electric drive

 DANGER

Danger to life from high voltage.

Risk of severe or fatal injury due to electric shock.

- The high-voltage system must be de-energised by a suitably qualified technician.

- De-energise high-voltage system ⇒ Rep. gr. 93 ; De-energising high-voltage system .

Continued for all vehicles



Note

The description is for vehicles with an individual seat. The description for vehicles with a bench seat is analogous.

- Remove backrest cover and cushion ⇒ [page 411](#) .



- Separate connector -3-.
- Unscrew bolt -2-.
- Detach front side airbag with igniter -1- from backrest frame -4-, and remove it.



Note

Place airbag aside in such a way that the impact padding points upwards.

Installing

Install in reverse order of removal, observing the following:

- It is vital for the airbag unit to be properly screwed in before the ignition is switched on and the battery is connected.

Vehicles with electric drive



WARNING

Danger to life from high voltage.

Risk of severe or fatal injury due to electric shock.


- The high-voltage system must be brought into operation by a suitably qualified technician.

- Re-energise high-voltage system ⇒ Rep. gr. 93 ; Re-energising high-voltage system .

Continued for all vehicles

Specified torques

- ♦ ⇒ [“7.1 Assembly overview - front side airbag”, page 154](#)

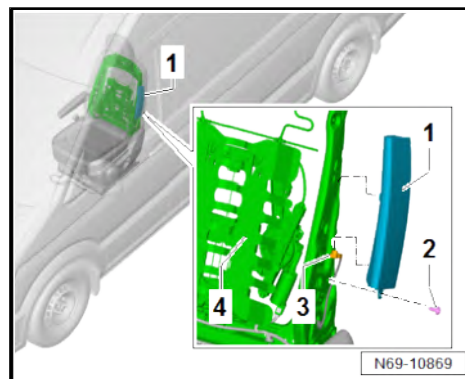



8 Curtain airbags

⇒ ["8.1 Assembly overview - curtain airbag", page 157](#)

⇒ ["8.2 Removing and installing curtain airbag with igniter", page 157](#)

8.1 Assembly overview - curtain airbag



Note

The description is for vehicles with a flat roof. Adapt accordingly for vehicles with a different roof shape.

1 - Curtain airbag

☐ With:


- ◆ Driver side curtain airbag igniter - N251-
- ◆ Front passenger side curtain airbag igniter - N252-
 - ☐ Removing and installing
⇒ [page 157](#)

2 - Bolts

- ☐ Renew after removal
- ☐ Qty. 2
- ☐ 8 Nm

3 - Retaining clips

- ☐ Qty. 3

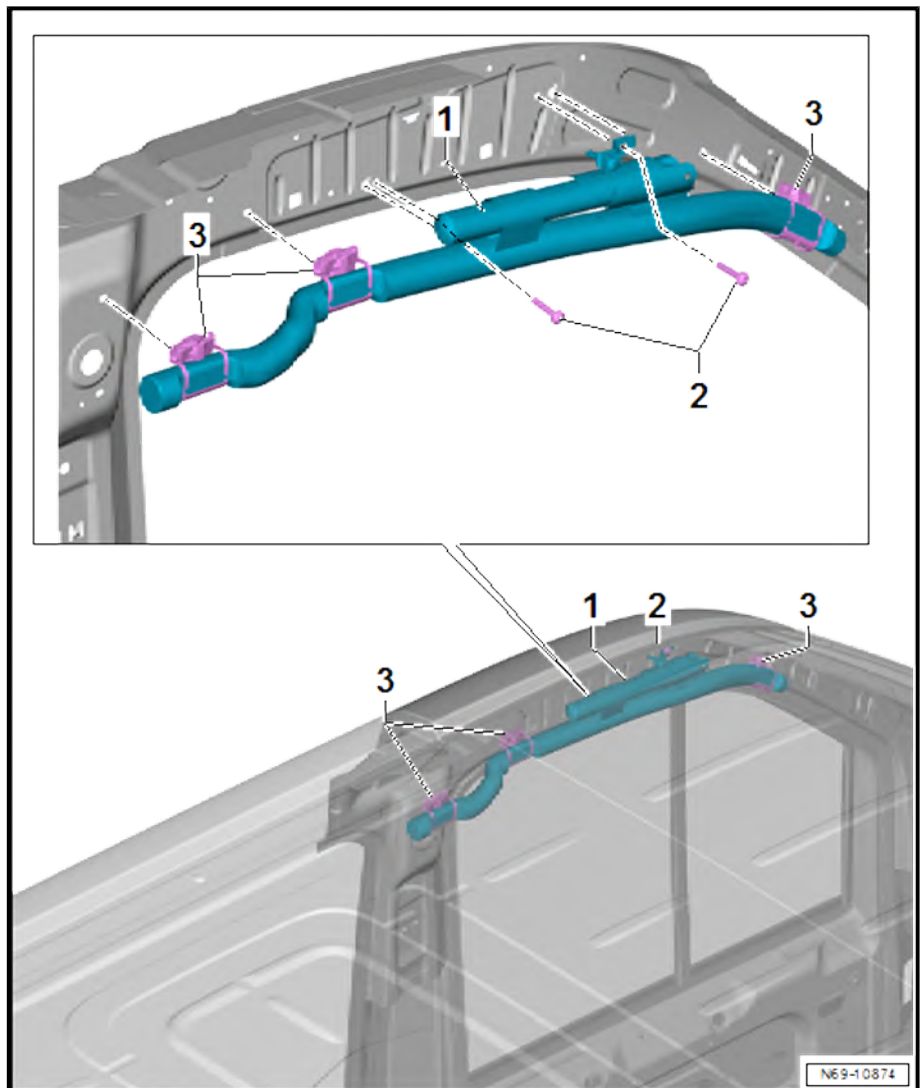


8.2 Removing and installing curtain airbag with igniter

Special tools and workshop equipment required



◆ Adjusting pliers - VAS 211 001-

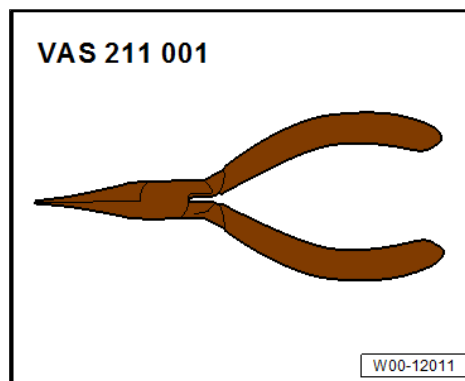

◆ Torque wrench - V.A.G 1783-



Removing



Note

The description is for vehicles with a high roof. Adapt accordingly for vehicles with a different roof shape.

Vehicles with electric drive



DANGER

Danger to life from high voltage.

Risk of severe or fatal injury due to electric shock.

- The high-voltage system must be de-energised by a suitably qualified technician.

- De-energise high-voltage system ⇒ Rep. gr. 93 ; De-energising high-voltage system .

Continued for all vehicles

- Disconnect battery earth cable with ignition switched on ⇒ Electrical system; Rep. gr. 27 ; Battery; Connecting and disconnecting battery .
- Remove moulded headliner in driver area ⇒ [page 308](#) .



CAUTION


Pyrotechnic components can trigger unintentionally.

Danger of injury.

- Discharge any static charge in your body by briefly touching the door striker plate.



- Release connector locking mechanism -2- in direction of -arrow-.
- Pull electrical connector -3- off curtain airbag with igniter -1-.

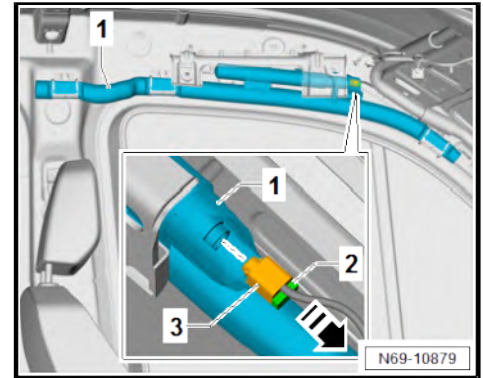


- Unscrew bolts -2- for curtain airbag with igniter -1-.



Note

Ensure that curtain airbag is not twisted.

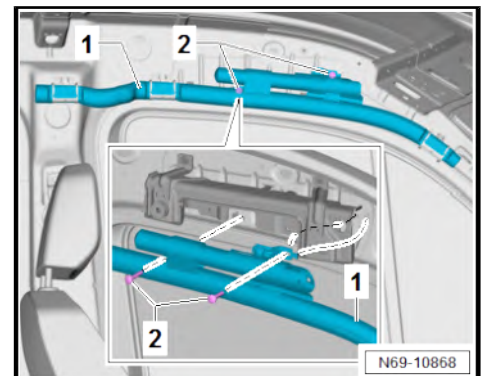


- Unclip retaining clips -2- for curtain airbag -1- from body using adjusting pliers - VAS 211 001- -3-.
- To do this, insert ends of pliers into openings -arrow-.
- Press together locking elements of retaining clips -2- -A and B- and pull out retaining clips -2-.



Note

Make sure that the retaining clips do not engage again on the released side.

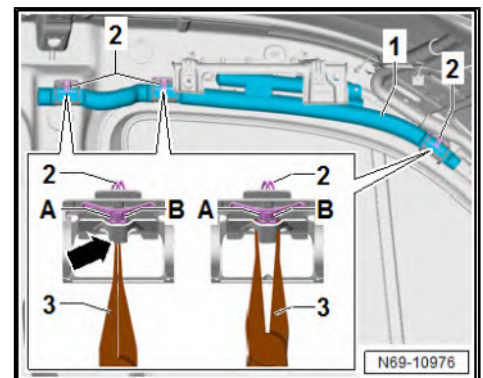

- Detach side airbag with igniter -1- from body mountings, and remove it.



Note

Place airbag aside in such a way that the impact padding points upwards.



Installing

Install in reverse order of removal, observing the following:

- It is vital for the airbag unit to be properly screwed in before the ignition is switched on and the battery is connected.
- Airbag unit with igniter -1- firmly engaged in body
- Make sure that the line to prevent twisting -2- is visible over the entire length and that it is straight.



Note


Battery must be connected with ignition switched on. If pyrotechnic components (e.g. airbag, belt tensioners) are repaired incorrectly, they could be accidentally triggered. Ensure that nobody is in vehicle when connecting battery.

- Connect battery earth cable with ignition switched on ⇒ Electrical system; Rep. gr. 27 ; Battery; Connecting and disconnecting battery .



Note

If the ignition is not switched on after reconnecting the battery, the ignition may only be switched on (key/button) from the driver's seat with the seat set in the rearmost position.

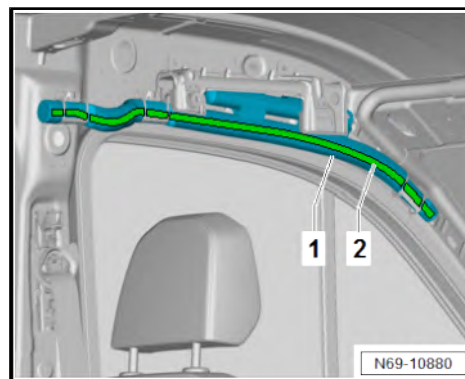

Vehicles with electric drive



WARNING

Danger to life from high voltage.

Risk of severe or fatal injury due to electric shock.

- **The high-voltage system must be brought into operation by a suitably qualified technician.**

- Re-energise high-voltage system ⇒ Rep. gr. 93 ; Re-energising high-voltage system .

Continued for all vehicles

- Use ⇒ Vehicle diagnostic tester to read event memory, clear event memory as necessary, and then read it again.

Specified torques

- ♦ ⇒ [“8.1 Assembly overview - curtain airbag”, page 157](#)



9 Airbag crash sensors

⇒ ["9.1 Overview of fitting locations - airbag crash sensors", page 161](#)

⇒ ["9.2 Removing and installing front airbag crash sensor for driver side G283 or front airbag crash sensor for front passenger side G284", page 161](#)

⇒ ["9.3 Removing and installing front side airbag crash sensor G179 / G180", page 165](#)

⇒ ["9.4 Removing and installing rear side airbag crash sensor G256 / G257", page 166](#)

9.1 Overview of fitting locations - airbag crash sensors

1 - Front airbag crash sensor for driver side - G283- or front airbag crash sensor for front passenger side - G284-

- ☐ On lock carrier
- ☐ Removing and installing
⇒ [page 161](#)

2 - Side airbag crash sensor, front passenger side - G180-

- ☐ On inner door panel
- ☐ Removing and installing
⇒ [page 165](#)

3 - Rear side airbag crash sensor, front passenger side - G257-


- ☐ Under front step
- ☐ Removing and installing
⇒ [page 166](#)

4 - Rear side airbag crash sensor, driver side - G256-

- ☐ Under front step
- ☐ Removing and installing
⇒ [page 166](#)

5 - Side airbag crash sensor, driver side - G179-

- ☐ On inner door panel
- ☐ Removing and installing
⇒ [page 165](#)

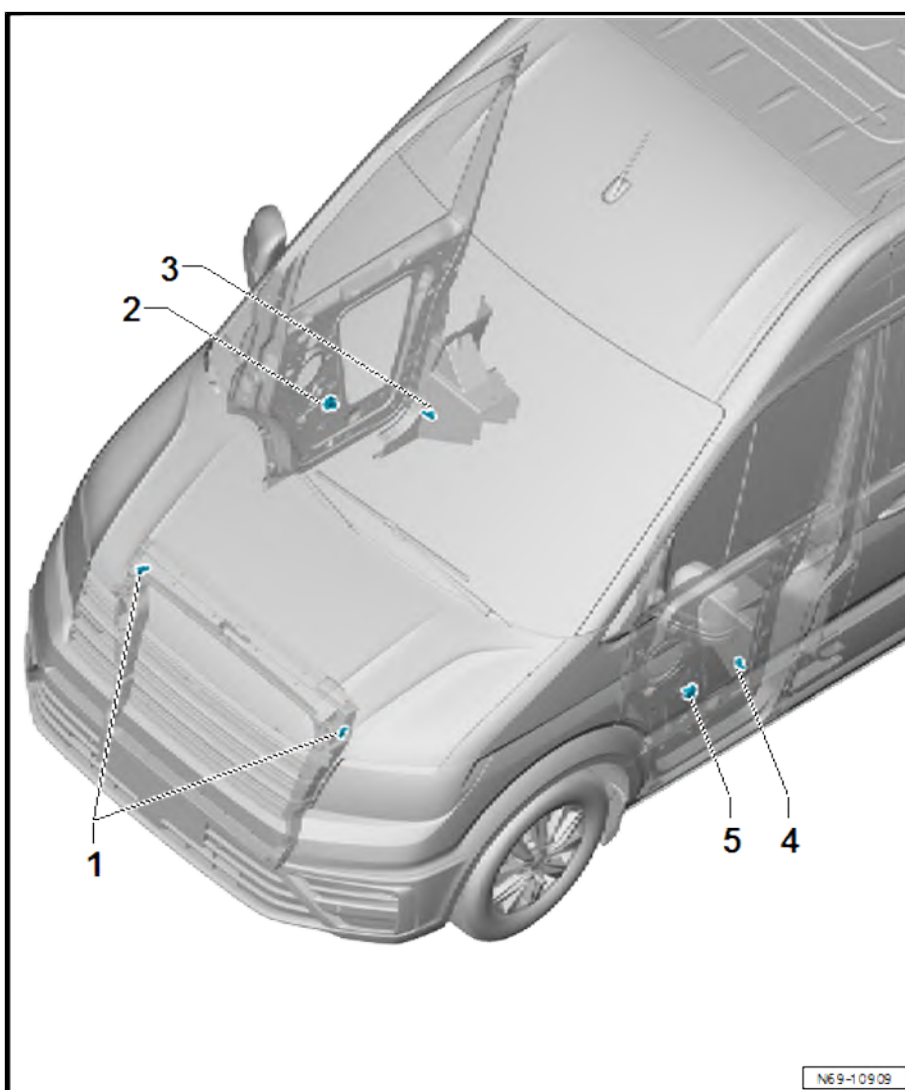

9.2 Removing and installing front airbag crash sensor for driver side - G283- or front airbag crash sensor for front passenger side - G284-

Special tools and workshop equipment required



◆ Removal wedge - 3409-



◆ Torque wrench - V.A.G 1783-



Removing

Vehicles with electric drive

DANGER

Danger to life from high voltage.


Risk of severe or fatal injury due to electric shock.

- The high-voltage system must be de-energised by a suitably qualified technician.

- De-energise high-voltage system ⇒ Rep. gr. 93 ; De-energising high-voltage system .

Continued for all vehicles

- Disconnect battery earth cable with ignition switched on ⇒ Electrical system; Rep. gr. 27 ; Battery; Connecting and disconnecting battery .
- Unscrew bolts -1-.
- Lay coolant expansion tank -2- to one side.

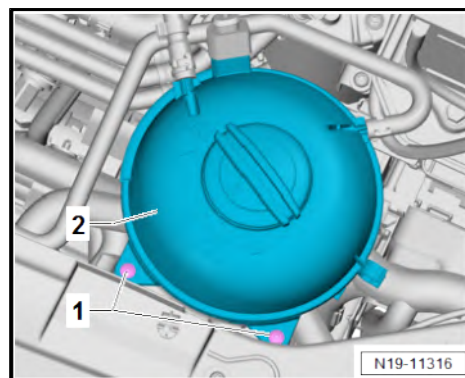




- Unscrew bolts -1-. While doing this, detach coolant expansion tank bracket -2-.

⚠ CAUTION

Pyrotechnic components can trigger unintentionally.
Danger of injury.

- Discharge any static charge in your body by briefly touching the door striker plate.

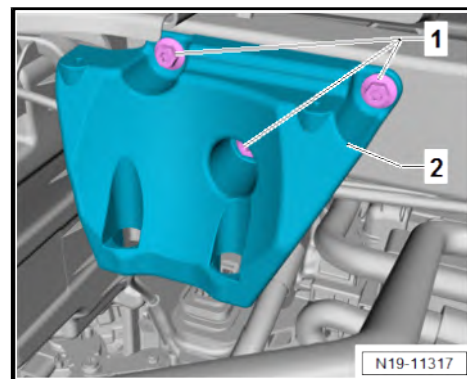



- Disconnect electrical connectors -3-.
- Unscrew bolts -2-. While doing this,
- release locking lug on front airbag crash sensor for driver side - G283- or front airbag crash sensor for front passenger side - G284- -1- using removal wedge - 3409- . At the same time, detach front airbag crash sensor for driver side - G283- or front airbag crash sensor for front passenger side - G284- -1-.

Installing

Install in reverse order of removal, observing the following:



Note


Battery must be connected with ignition switched on. If pyrotechnic components (e.g. airbag, belt tensioners) are repaired incorrectly, they could be accidentally triggered. Ensure that nobody is in vehicle when connecting battery.

- Connect battery earth cable with ignition switched on ⇒ Electrical system; Rep. gr. 27 ; Battery; Connecting and disconnecting battery .



Note

If the ignition is not switched on after reconnecting the battery, the ignition may only be switched on (key/button) from the driver's seat with the seat set in the rearmost position.

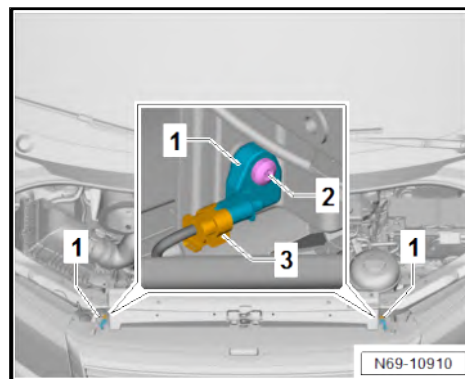

Vehicles with electric drive



WARNING

Danger to life from high voltage.

Risk of severe or fatal injury due to electric shock.

- **The high-voltage system must be brought into operation by a suitably qualified technician.**

- Re-energise high-voltage system ⇒ Rep. gr. 93 ; Re-energising high-voltage system .

Continued for all vehicles

- Use ⇒ Vehicle diagnostic tester to read event memory, clear event memory as necessary, and then read it again.

Specified torques

- ♦ Cooling system/coolant; Assembly overview - coolant expansion tank ⇒ Rep. gr. 19 ; Cooling system/coolant; Assembly overview - coolant expansion tank

Component	Specified torque
Bolt -2-	9 Nm



9.3 Removing and installing front side air-bag crash sensor -G179- / -G180-

Removing

Vehicles with electric drive



DANGER

Danger to life from high voltage.

Risk of severe or fatal injury due to electric shock.

- The high-voltage system must be de-energised by a suitably qualified technician.

- De-energise high-voltage system ⇒ Rep. gr. 93 ; De-energising high-voltage system .

Continued for all vehicles

- Disconnect battery earth cable with ignition switched on ⇒ Electrical system; Rep. gr. 27 ; Battery; Connecting and disconnecting battery .
- Remove front door trim ⇒ [page 182](#) .



CAUTION

Pyrotechnic components can trigger unintentionally.

Danger of injury.

- Discharge any static charge in your body by briefly touching the door striker plate.




- Separate connector -3-.
- Unclip front side airbag crash sensor -1- from mounting -2-.
- Turn front side airbag crash sensor -1- by 45° in direction of -arrow- and remove.

Installing

Install in reverse order of removal, observing the following:

- Check that seal on front side airbag crash sensor -1- is seated correctly and not damaged, renew if necessary ⇒ Electronic parts catalogue (ETKA) or ⇒ webMANTIS for MAN TGE.
- Ensure that front side airbag crash sensor -1- engages audibly in mounting -2-.

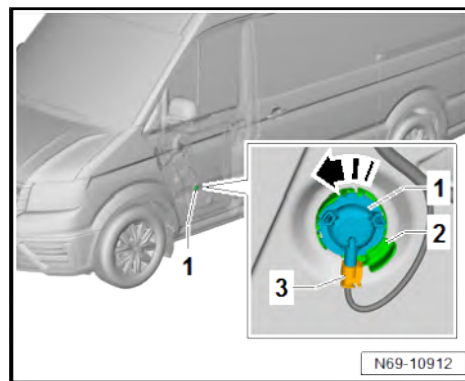

Note

Battery must be connected with ignition switched on. If pyrotechnic components (e.g. airbag, belt tensioners) are repaired incorrectly, they could be accidentally triggered. Ensure that nobody is in vehicle when connecting battery.

- Switch on ignition.
- Connect battery earth cable with ignition switched on ⇒ Electrical system; Rep. gr. 27 ; Battery; Connecting and disconnecting battery .



Note

If the ignition is not switched on after reconnecting the battery, the ignition may only be switched on (key/button) from the driver's seat with the seat set in the rearmost position.

Vehicles with electric drive



WARNING

Danger to life from high voltage.

Risk of severe or fatal injury due to electric shock.

- The high-voltage system must be brought into operation by a suitably qualified technician.

- Re-energise high-voltage system ⇒ Rep. gr. 93 ; Re-energising high-voltage system .

Continued for all vehicles


- Use ⇒ Vehicle diagnostic tester to read event memory, clear event memory as necessary, and then read it again.

9.4 Removing and installing rear side airbag crash sensor -G256- / -G257-

Special tools and workshop equipment required



◆ Torque wrench - V.A.G 1783-

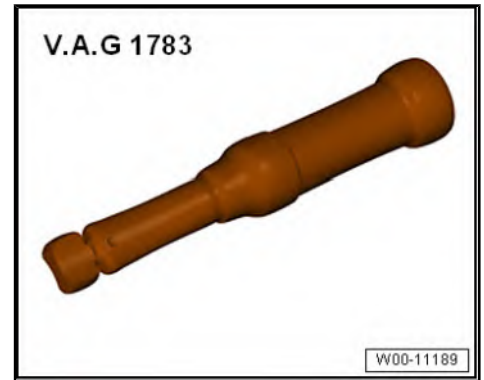

Removing

Vehicles with electric drive

DANGER

Danger to life from high voltage.

Risk of severe or fatal injury due to electric shock.

- The high-voltage system must be de-energised by a suitably qualified technician.

- De-energise high-voltage system ⇒ Rep. gr. 93 ; De-energising high-voltage system .

Continued for all vehicles

- Disconnect battery earth cable with ignition switched on ⇒ Electrical system; Rep. gr. 27 ; Battery; Connecting and disconnecting battery .
- Remove front step ⇒ [page 264](#) .

CAUTION

Pyrotechnic components can trigger unintentionally.

Danger of injury.

- Discharge any static charge in your body by briefly touching the door striker plate.



- Separate connector -2-.
- Unscrew bolt -3-.
- Removing and installing rear side airbag crash sensor -1- and remove.

Installing

Install in reverse order of removal, observing the following:



Note


Battery must be connected with ignition switched on. If pyrotechnic components (e.g. airbag, belt tensioners) are repaired incorrectly, they could be accidentally triggered. Ensure that nobody is in vehicle when connecting battery.

- Switch on ignition.
- Connect battery earth cable with ignition switched on ⇒ Electrical system; Rep. gr. 27 ; Battery; Connecting and disconnecting battery .



Note

If the ignition is not switched on after reconnecting the battery, the ignition may only be switched on (key/button) from the driver's seat with the seat set in the rearmost position.

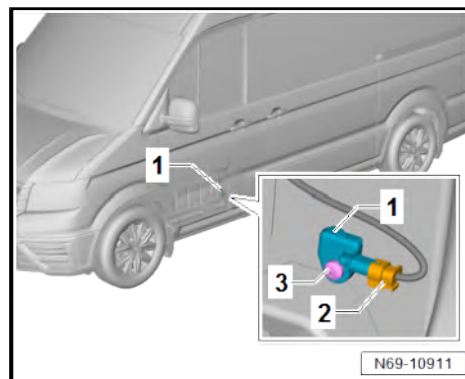

Vehicles with electric drive



WARNING

Danger to life from high voltage.

Risk of severe or fatal injury due to electric shock.

- **The high-voltage system must be brought into operation by a suitably qualified technician.**

- Re-energise high-voltage system ⇒ Rep. gr. 93 ; Re-energising high-voltage system .

Continued for all vehicles

- Use ⇒ Vehicle diagnostic tester to read event memory, clear event memory as necessary, and then read it again.

Specified torques

Component	Specified torque
Bolt -3- for rear side airbag crash sensor -1-	9 Nm



10 Seat belt verification

⇒ ["10.1 Removing and installing seat belt verification", page 169](#)

10.1 Removing and installing seat belt verification

The seat belt verification is integrated into the belt buckles.

- Removing and installing front belt buckle ⇒ [page 134](#)



11 Seat occupied recognition

⇒ "11.1 Removing and installing seat occupied recognition", page 170

11.1 Removing and installing seat occupied recognition

Removing

- Remove padding with seat pan cover ⇒ [page 406](#) .
- Detach electrical connector -3- from clip -4-.
- Separate connector -3-.
- Unclip seat-occupied sensor -1- from seat pan -2-.
- Remove seat-occupied sensor -1-.


Installing

Install in reverse order of removal, observing the following:



Note

If front passenger airbag warning lamp - K145- indicates a fault following installation, the event memory must be read, cleared and then read again ⇒ Vehicle diagnostic tester.

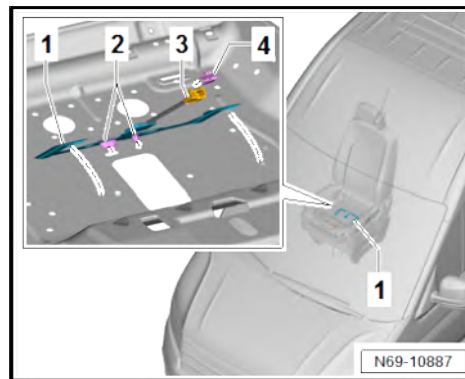



12 Roll-over bar

⇒ ["12.1 Assembly overview - roll-over bar", page 171](#)

⇒ ["12.2 Removing and installing roll-over bar", page 172](#)

12.1 Assembly overview - roll-over bar

⇒ ["12.1.1 Assembly overview - roll-over bar, front", page 171](#)

⇒ ["12.1.2 Assembly overview - roll-over bar, rear", page 172](#)

12.1.1 Assembly overview - roll-over bar, front

1 - Roll-over bar

- ☐ Upper left B-pillar
- ☐ Removing and installing
⇒ [page 172](#)

2 - Roll-over bar

- ☐ Upper right B-pillar
- ☐ Removing and installing
⇒ [page 172](#)

3 - Roll-over bar

- ☐ Lower right B-pillar
- ☐ Removing and installing
⇒ [page 172](#)

4 - Bolts

- ☐ Qty. 12
- ☐ 20 Nm

5 - Bolts

- ☐ Qty. 6
- ☐ 20 Nm

6 - Roll-over bar

- ☐ Lower left B-pillar
- ☐ Removing and installing
⇒ [page 172](#)

7 - Roll-over bar

- ☐ Lower B-pillar
- ☐ Removing and installing
⇒ [page 172](#)

8 - Bolts


- ☐ Qty. 4
- ☐ 20 Nm

9 - Washers

- ☐ Qty. 6

10 - Bolt

- ☐ 3.5 Nm

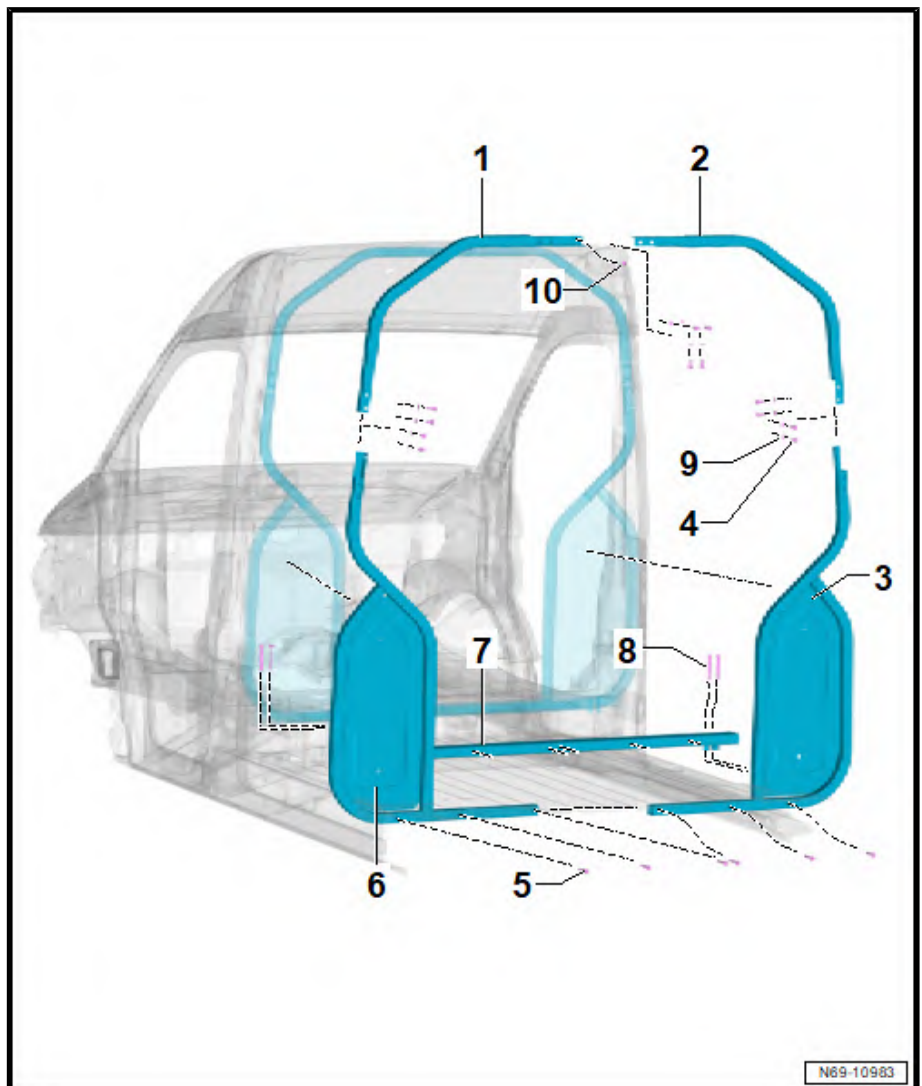



12.1.2 Assembly overview - roll-over bar, rear

1 - Roll-over bar

- ☐ Rear upper area
- ☐ Removing and installing
⇒ [page 176](#)

2 - Bolts

- ☐ Qty. 4
- ☐ 8 Nm

3 - Bolts

- ☐ Qty. 6
- ☐ 20 Nm

4 - Roll-over bar

- ☐ Rear right area
- ☐ Removing and installing
⇒ [page 176](#)

5 - Bolts


- ☐ Qty. 4
- ☐ 20 Nm

6 - Roll-over bar

- ☐ Rear lower area
- ☐ Removing and installing
⇒ [page 176](#)

7 - Roll-over bar

- ☐ Rear left area
- ☐ Removing and installing
⇒ [page 176](#)

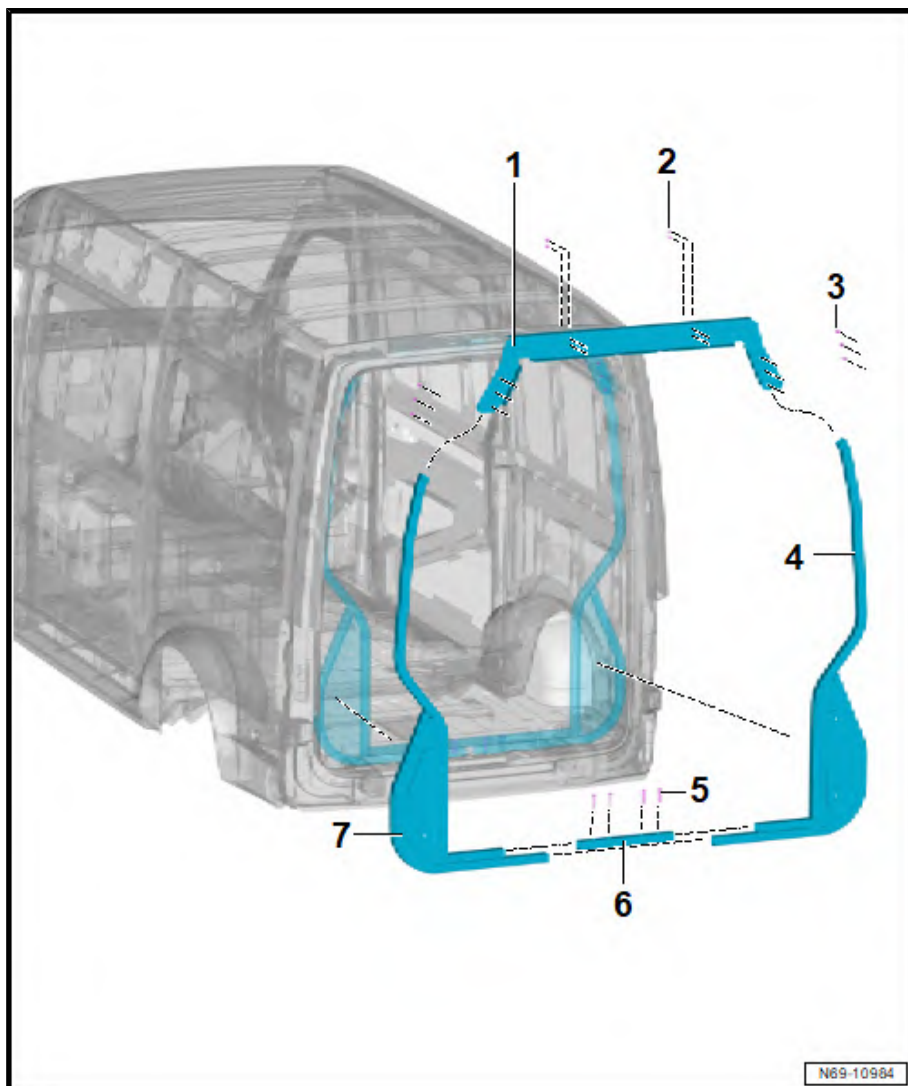

12.2 Removing and installing roll-over bar

⇒ [“12.2.1 Removing and installing roll-over bar, front”, page 172](#)


⇒ [“12.2.2 Removing and installing roll-over bar, rear”, page 176](#)

12.2.1 Removing and installing roll-over bar, front


Special tools and workshop equipment required



- ◆ Cutting tool - V.A.G 1351-

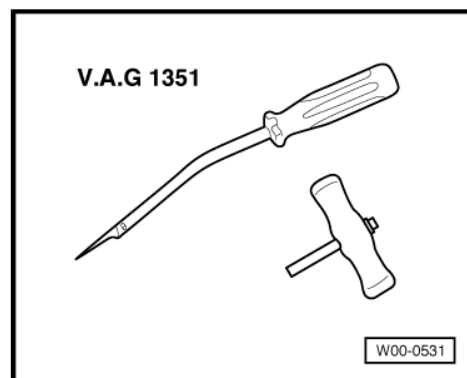

- ◆ Cord - VAS 861001/1A-
- ◆ Electric cutter - V.A.G 1561A-

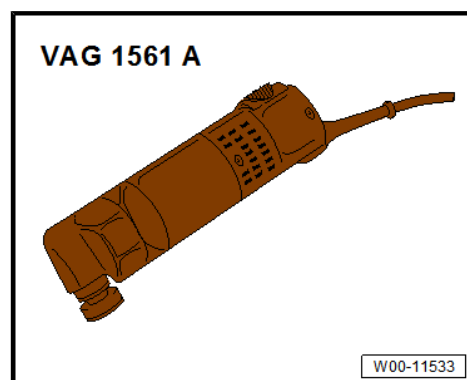

- ◆ Torque wrench - V.A.G 1783-




- ◆ Torque wrench - V.A.G 1331-






Removing


- Unscrew bolts -2-.
- Cut through bonding surfaces on upper right B-pillar roll bar -1- with cutter - V.A.G 1351- or electric cutter - V.A.G 1561A- .
- Remove roll-over bar on upper right B-pillar -1-.

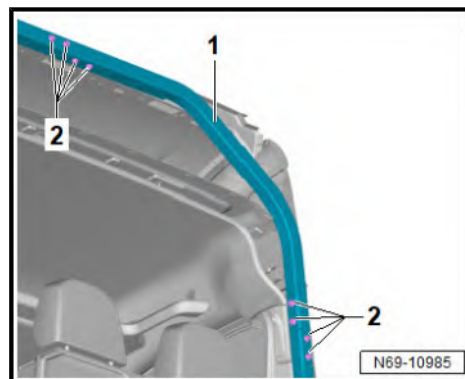

- Unscrew bolt -2-.
- Unscrew bolts -3-.
- Cut through bonding surfaces on upper left B-pillar roll bar -1- with cutter - V.A.G 1351- or electric cutter - V.A.G 1561A- .
- Remove roll-over bar on upper left B-pillar -1-.

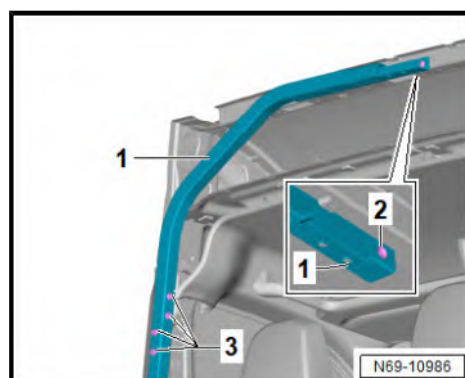

- Unscrew bolts -2- of roll-over bar on lower left B-pillar.
- Cut through bonding surfaces on lower left B-pillar roll bar -1- with cutter - V.A.G 1351- or electric cutter - V.A.G 1561A- .
- Remove roll-over bar on lower left B-pillar -1-.
- Perform the same work steps for the roll-over bar on the lower right B-pillar.

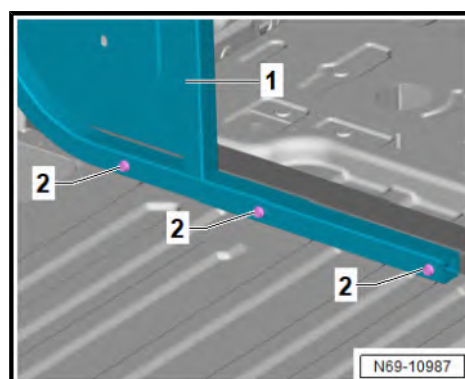



- Unscrew bolts -2-.
- Cut through bonding surfaces on lower B-pillar roll bar -1- with cutter - V.A.G 1351- or electric cutter - V.A.G 1561A- .
- Remove roll-over bar on lower B-pillar -1-.

Installing

Install in reverse order of removal, observing the following:



Note

Should the paintwork become damaged, repair it immediately ⇒ General paint information; Rep. gr. 00 ; General notes; Paint structure of paintwork applied by customer service .

On some components of the roll-over bar, beads of 2-pack PUR adhesive must be applied before installation ⇒ Electronic parts catalogue (ETKA) .

- Remove adhesive beads on removed components.
- Remove adhesive residue with cleaning solution for window replacement ⇒ Electronic parts catalogue (ETKA) or ⇒ web-MANTIS for MAN TGE
- Clean bonding surfaces of new components with cleaning solution for window replacement ⇒ Electronic parts catalogue (ETKA) or ⇒ webMANTIS for MAN TGE



Note



Bonding surfaces must be dry, free of dust, grease and dirt.

- Apply adhesive to roll-over bar on lower B-pillar -1- on side facing body.

2 - Round beads Ø 10 mm, length 50 mm

3 - Round beads Ø 10 mm, length 16 mm


- Mount spacers -4-.
- Install roll-over bar on lower B-pillar.

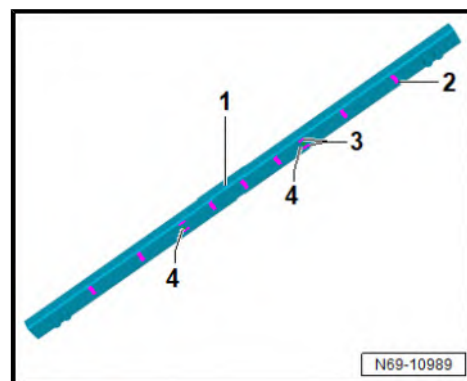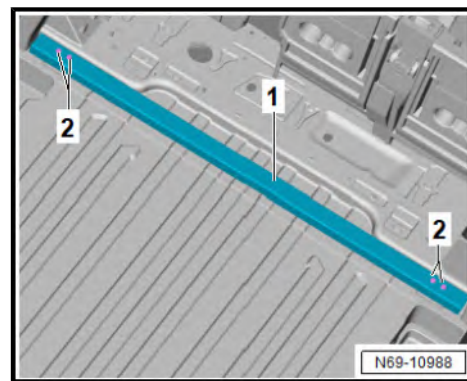

- Apply adhesive to roll-over bar on lower left B-pillar -1- on side facing body.


3 - Round bead Ø 10 mm, length 370 mm

- Mount spacers -2-.
- Perform the same work steps for the roll-over bar on the lower right B-pillar.
- Install roll-over bar on left B-pillar and roll-over bar on lower right B-pillar.

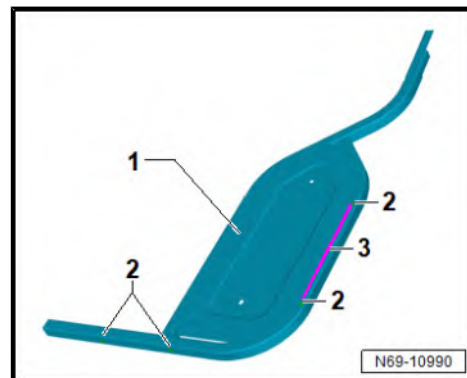




- Apply adhesive to roll-over bar on upper left B-pillar -1- on side facing body.
- 2 - Round bead Ø 10 mm, length 95 mm
- 4 - Round bead Ø 10 mm, length 295 mm
- Mount spacers -3-.
- Install roll-over bar on upper left B-pillar.

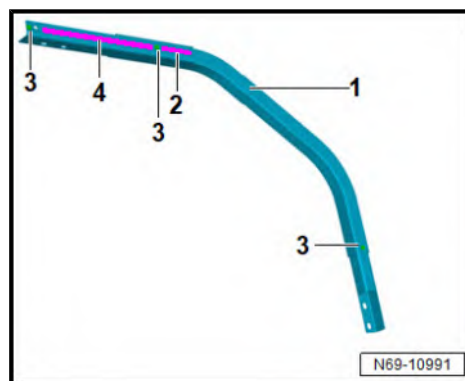

- Apply adhesive to roll-over bar on upper right B-pillar -1- on side facing body.
- 3 - Round beads Ø 10 mm, length 95 mm
- Mount spacers -2-.
- Install roll-over bar on upper right B-pillar.

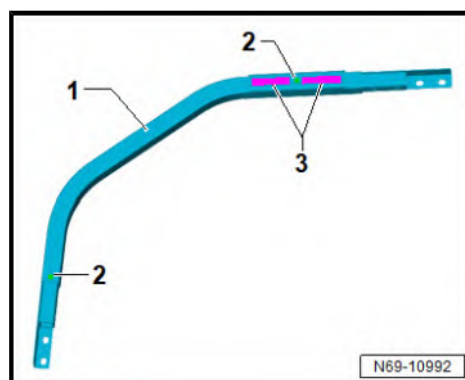


Specified torques

- ♦ ⇒ ["12.1 Assembly overview - roll-over bar", page 171](#)


12.2.2 Removing and installing roll-over bar, rear

Special tools and workshop equipment required

- ♦ Cutting tool - V.A.G 1351-

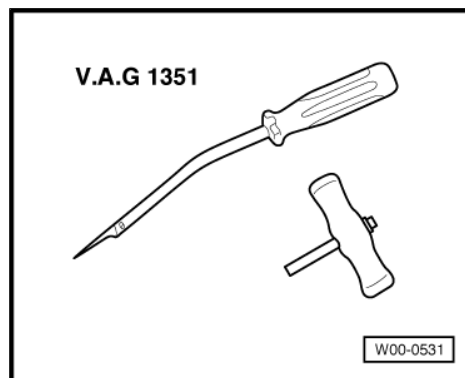


- ♦ Cord - VAS 861001/1A-
- ♦ Electric cutter - V.A.G 1561A-

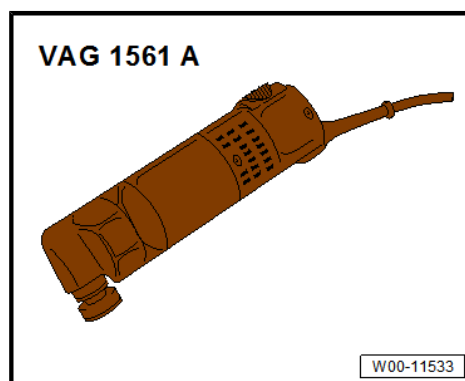



◆ Torque wrench - V.A.G 1783-

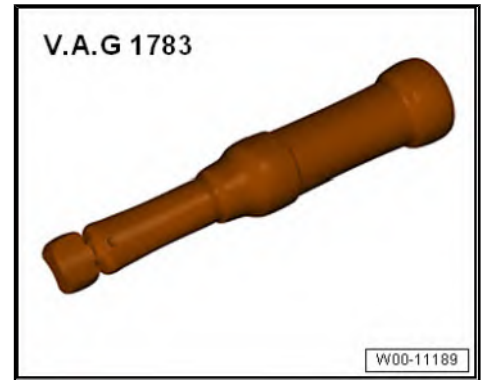


◆ Torque wrench - V.A.G 1331-




Removing

- Unscrew bolts -2-.
- Remove roll-over bar in lower rear area -1-.

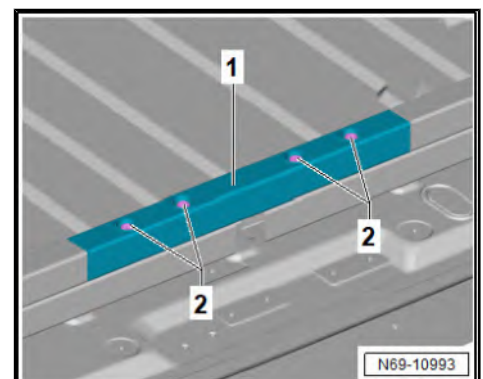

- Unscrew bolts -2-.
- Cut through bonding surfaces on rear left area roll bar -1- with cutter - V.A.G 1351- or electric cutter - V.A.G 1561A- .
- Remove roll-over bar in left rear area -1-.
- Perform the same work steps for the roll-over bar in the right rear area.

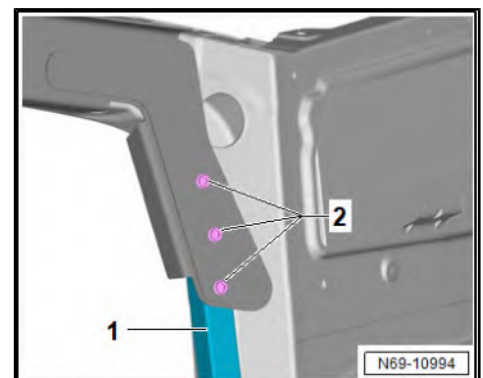



- Unscrew bolts -2-.
- Cut through bonding surfaces on rear upper area roll bar -1- with cutter - V.A.G 1351- or electric cutter - V.A.G 1561A- .
- Remove roll-over bar in upper rear area -1-.

Installing

Install in reverse order of removal, observing the following:



Note

Should the paintwork become damaged, repair it immediately ⇒ General paint information; Rep. gr. 00 ; General notes; Paint structure of paintwork applied by customer service .

On some components of the roll-over bar, beads of 2-pack PUR adhesive must be applied before installation ⇒ Electronic parts catalogue (ETKA) .



- Remove adhesive beads on removed components.
- Remove adhesive residue with cleaning solution for window replacement ⇒ Electronic parts catalogue (ETKA) or ⇒ web-MANTIS for MAN TGE
- Clean bonding surfaces of new components with cleaning solution for window replacement ⇒ Electronic parts catalogue (ETKA) or ⇒ webMANTIS for MAN TGE



Note

Bonding surfaces must be dry, free of dust, grease and dirt.

- Apply adhesive to roll-over bar in upper rear area -1- on side facing body.
- 2 - Round bead Ø 10 mm, length 165 mm
3 - Round bead Ø 10 mm, length 135 mm
4 - Round bead Ø 10 mm, length 1185 mm
- Mount spacers -5-.
 - Install roll-over bar in upper rear area.

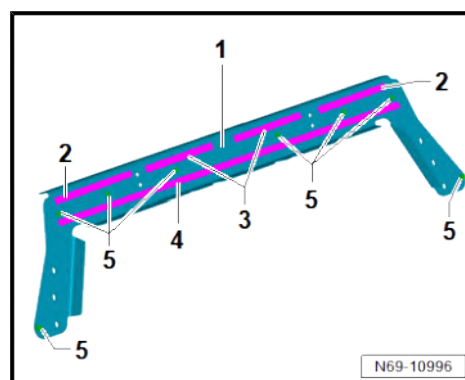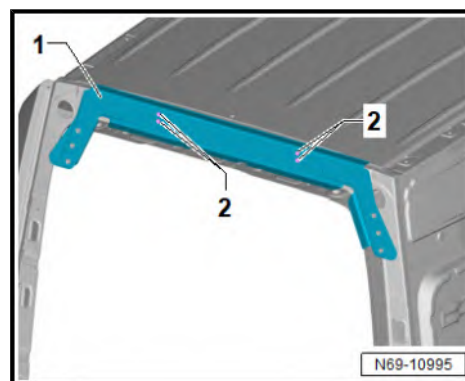



- Apply adhesive to roll-over bar in left rear area -1- on side facing body.

3 - Round bead Ø 10 mm, length 429 mm

4 - Round bead Ø 10 mm, length 90 mm

5 - Round bead Ø 10 mm, length 40 mm

6 - Round bead Ø 10 mm, length 135 mm

- Mount spacers -2-.


- Perform the same work steps for the roll-over bar in the right rear area.

Install roll-over bar in left and right rear area.

Install roll-over bar in lower rear area.

Specified torques

- ♦ ⇒ [“12.1 Assembly overview - roll-over bar”, page 171](#)

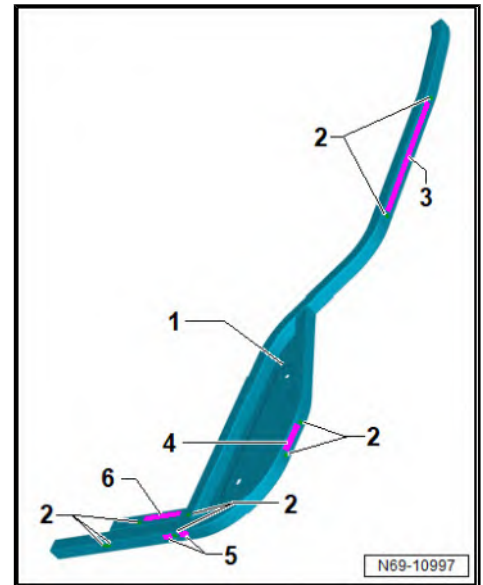



70 – Trim, insulation

1 Front door trims

⇒ [“1.1 Assembly overview - front door trim”, page 180](#)

⇒ [“1.2 Removing and installing trim for mid-range loudspeaker”, page 182](#)

⇒ [“1.3 Removing and installing treble loudspeaker trim”, page 182](#)

⇒ [“1.4 Removing and installing trim”, page 182](#)

⇒ [“1.5 Removing and installing front door trim”, page 182](#)

⇒ [“1.6 Removing and installing front door puller”, page 185](#)

⇒ [“1.7 Removing and installing button trim panel”, page 185](#)

⇒ [“1.8 Removing and installing interior door handle”, page 186](#)

1.1 Assembly overview - front door trim



Note

The assembly overview is shown for the left side of the vehicle. The right side is analogous.



1 - Door trim

- ☐ Removing and installing
⇒ [page 182](#)

2 - Button trim panel

- ☐ Depending on equipment
- ☐ With central switch for window regulators in driver door - E189-
- ☐ With exterior mirror adjuster - EX11-
- ☐ Removing and installing
⇒ [page 185](#)

3 - Upper part of handle recess, door puller

- ☐ Removing and installing
⇒ [page 182](#)

4 - Bolts

- ☐ Qty. 2
- ☐ 4.5 Nm

5 - Central locking button - E600-

- ☐ Removing and installing
⇒ Electrical system;
Rep. gr. 96 ; Controls;
Removing and installing
central locking button -
E600-

6 - Trim

- ☐ Permanently attached
to door trim

7 - Interior door handle

- ☐ Permanently attached
to door trim

8 - Bolts

- ☐ Qty. 3
- ☐ 2 Nm

9 - Warning triangle

- ☐ Removing and installing ⇒ [page 182](#)

10 - First aid kit/warning lamp

11 - Bracket


- ☐ For warning triangle
- ☐ Qty. 2
- ☐ Permanently attached to door trim

12 - Central locking SAFELOCK function warning lamp - K133-

- ☐ Driver door only
- ☐ With securing sleeve
- ☐ Removing and installing ⇒ Electrical system; Rep. gr. 96 ; Lights; Removing and installing central locking
SAFELOCK function warning lamp - K133-

13 - Clip

- ☐ Qty. 12
- ☐ Renew any damaged or deformed clips.

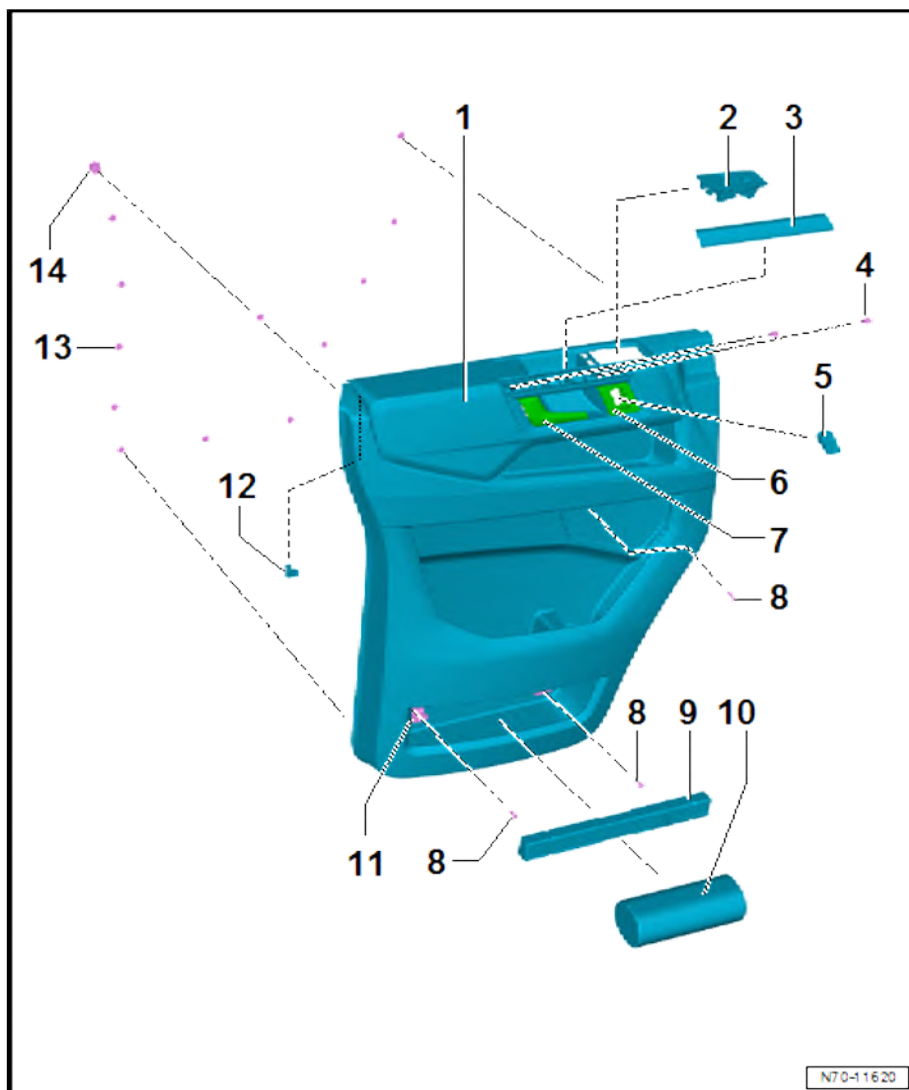



14 - Clip

- ☐ Crash clip
- ☐ Renew any damaged or deformed clips.

1.2 Removing and installing trim for mid-range loudspeaker

The mid-range loudspeaker trim is permanently secured to the door panel.

- Removing and installing front door panel ➔ [page 182](#) .

1.3 Removing and installing treble loudspeaker trim

The treble loudspeaker trim is permanently secured at the top of the A-pillar trim.

- Removing and installing upper A-pillar trim ➔ [page 268](#)

1.4 Removing and installing trim


The trim panels are permanently secured to the door panel.

- Removing and installing front door panel ➔ [page 182](#) .

1.5 Removing and installing front door trim

Special tools and workshop equipment required

- ◆ Release lever - T10039-

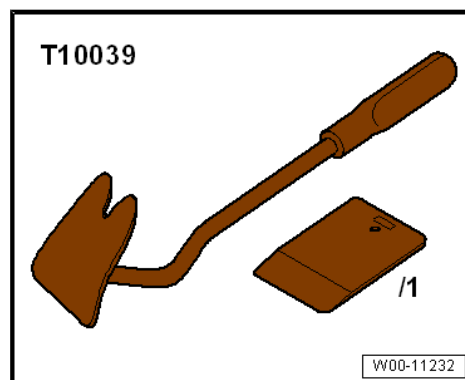

- ◆ Torque wrench - V.A.G 1783-




Removing

- Remove button trim panel ➔ [page 185](#) .
- If present, remove first aid kit/warning lamp from door storage compartment.




Vehicles with warning triangle in door storage compartment

- Open holder for warning triangle -1-.
- Remove warning triangle -2-.

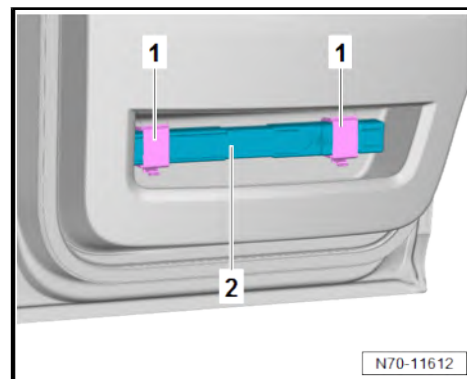


Continued for all vehicles

- Unclip upper handle recess of door puller -1- from door trim -2- using wedge - T10039/1- .

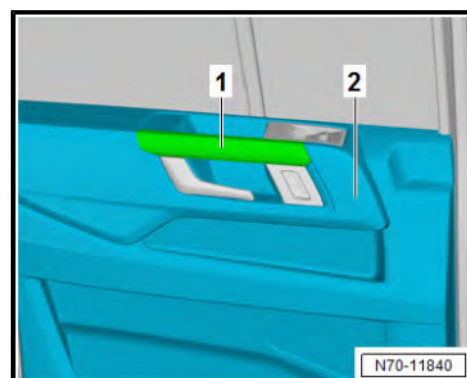

- Unscrew bolts -1- from door trim -2-.

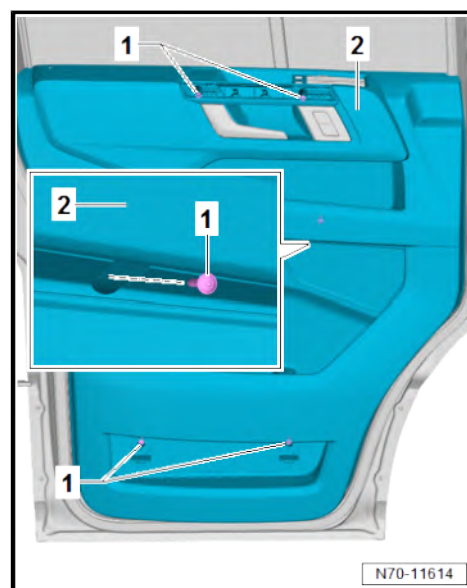





- Using wedge - T10039/1- , lever door trim -2- out of mountings in vicinity of fastenings -3-.
- Door trim -2- is released in area of attachments -3-.




Note

- ◆ *Retaining clip -1- is released in direction of -arrow-.*
- ◆ *Do not overstretch Bowden cables or wiring harnesses. This can cause damage to the locking elements or wiring harnesses.*
- Detach door trim -2- from window slot seal in direction of -arrow-.
- Remove door trim -2- sufficiently to allow access to Bowden cable locking element.
- Detach Bowden cable locking element -2- in direction of -arrow A-.
- Pull Bowden cable in direction of -arrow B- out of interior door handle -1-.

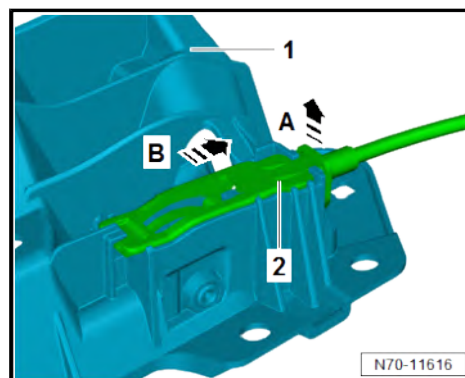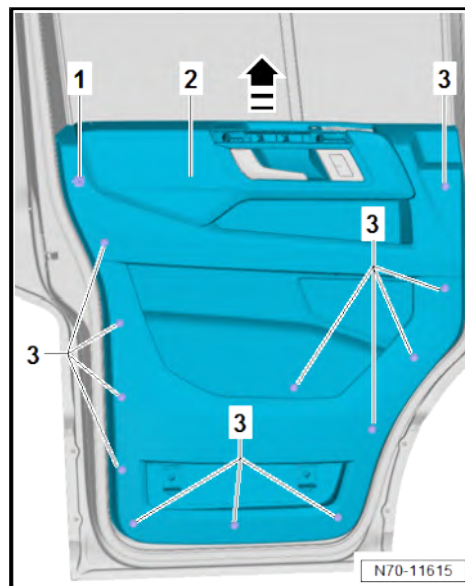

Vehicles with central locking system

- Disconnect connector -2- from central locking SAFELOCK function warning lamp - K133- -1-.

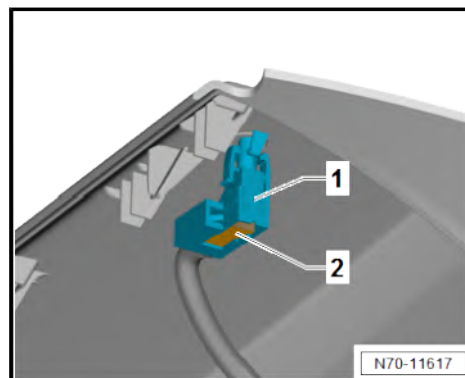



- Disconnect connector -2- from central locking button - E600- -1-.

Continued for all vehicles

- Remove door trim, and place it on a suitable surface.

Installing

Install in reverse order of removal, observing the following:





Note

- ◆ *When joining to the window slot seal, ensure that the door trim is at an angle of $>20^\circ$ to the inner panel to ensure that the clips do not cant.*
- ◆ *Route all of the various lines and electrical wiring in such a way that they are restored to their original positions and the wiring harnesses are not crushed.*

- Fit door trim -2- on window slot seal in direction of -arrow-.
- Check to ensure that retaining clip -1- is fitted properly.
- Secure door trim clips -2- in -direction of arrow B- on door.

Specified torques

- ◆ [⇒ "1.1 Assembly overview - front door trim", page 180](#)

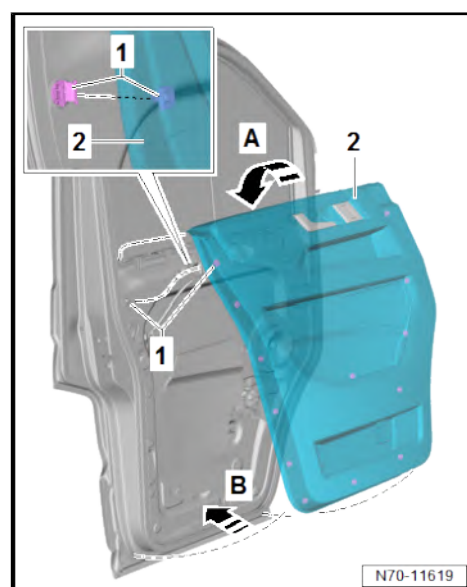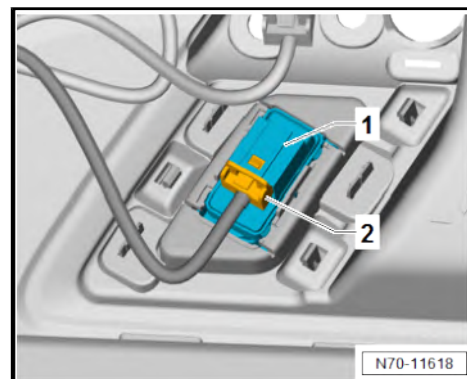

1.6 Removing and installing front door puller

The front door puller is permanently secured to the door panel.

- Removing and installing front door panel [⇒ page 182](#) .

1.7 Removing and installing button trim panel

Special tools and workshop equipment required



◆ Removal wedge - 3409-




Removing

- Switch off ignition and all electrical consumers.
- Withdraw ignition key.
- Unclip operating unit trim -1- from door trim -2- using removal wedge - 3409- .
- Disconnect connector -3- from exterior mirror adjuster - EX11- .
- Disconnect electrical connector -4- from central switch for window regulators in driver door - E189- .

Installing

Install in reverse order.

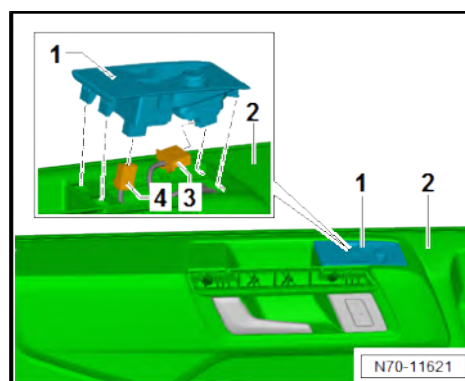

1.8 Removing and installing interior door handle

The interior door handle is permanently secured to the door panel.

- Removing and installing front door panel ⇒ [page 182](#) .



2 Rear door trims

⇒ [“2.1 Assembly overview - rear door trim”, page 187](#)

⇒ [“2.2 Removing and installing trim”, page 190](#)

⇒ [“2.3 Removing and installing interior door handle”, page 191](#)

⇒ [“2.4 Removing and installing rear door trim”, page 192](#)

⇒ [“2.5 Removing and installing rear door puller”, page 194](#)

⇒ [“2.6 Removing and installing rear ashtray”, page 195](#)

2.1 Assembly overview - rear door trim

⇒ [“2.1.1 Assembly overview - rear door trim, sliding door”, page 187](#)

⇒ [“2.1.2 Assembly overview - rear door trim, wing door”, page 189](#)

⇒ [“2.1.3 Assembly overview - rear door trim, cab door \(PR no. K4G double cab\)”, page 190](#)

2.1.1 Assembly overview - rear door trim, sliding door



Note

The assembly overview is illustrated for the right side of the vehicle. The left side is analogous.



1 - Sliding door trim

- ☐ Top
- ☐ Removing and installing
⇒ [page 192](#)

2 - Clip

- ☐ Qty. 10
- ☐ Renew any damaged or deformed clips.

3 - Sliding door trim

- ☐ Top centre
- ☐ Removing and installing
⇒ [page 192](#)

4 - Bolts

- ☐ Qty. 9
- ☐ 2.5 Nm

5 - Retaining clips

- ☐ Qty. 9
- ☐ Renew retaining clip if it is damaged or deformed

6 - Sliding door trim

- ☐ Bottom centre
- ☐ Removing and installing
⇒ [page 192](#)

7 - Clip


- ☐ Qty. 12
- ☐ Renew any damaged or deformed clips.

8 - Sliding door trim

- ☐ Bottom
- ☐ Removing and installing
⇒ [page 192](#)

9 - Clip

- ☐ Qty. 13
- ☐ Renew any damaged or deformed clips.

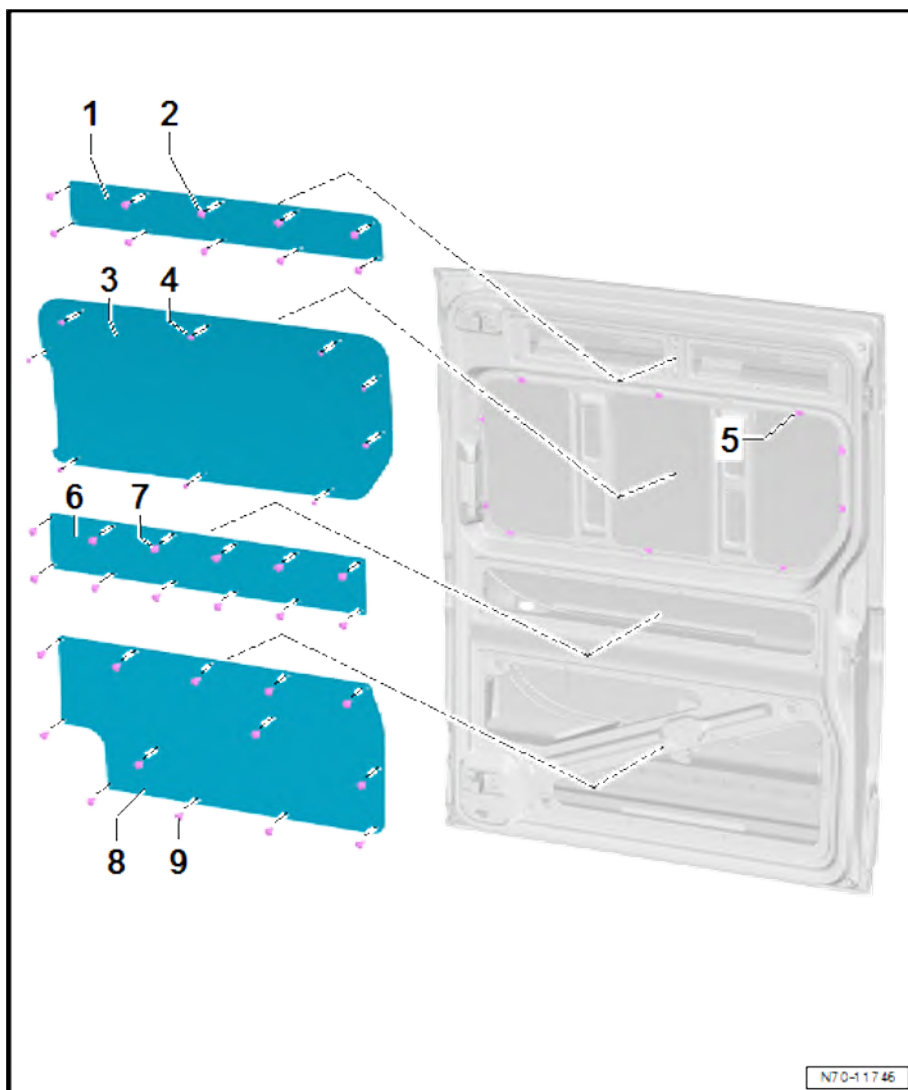



2.1.2 Assembly overview - rear door trim, wing door



Note

The assembly overview is illustrated for the right side of the vehicle. The left side is analogous.

1 - Wing door trim

- ☐ Top
- ☐ Removing and installing
⇒ [page 192](#)

2 - Clip

- ☐ Qty. 6
- ☐ Renew any damaged or deformed clips.

3 - Retaining clips

- ☐ Qty. 7
- ☐ Renew retaining clip if it is damaged or deformed

4 - Wing door trim

- ☐ Centre
- ☐ Removing and installing
⇒ [page 192](#)

5 - Bolts

- ☐ Qty. 7
- ☐ 2.5 Nm

6 - Wing door trim

- ☐ Bottom
- ☐ Removing and installing
⇒ [page 192](#)

7 - Interior door handle

- ☐ Removing and installing
⇒ General body repairs, exterior; Rep. gr. 58 ; Door components; Removing and installing door lock

8 - Trim panel

- ☐ Removing and installing ⇒ [page 190](#)

9 - Trim panel


- ☐ Removing and installing ⇒ [page 190](#)

10 - Clip

- ☐ Qty. 12
- ☐ Renew any damaged or deformed clips.

11 - Trim panel

- ☐ For interior door handle
- ☐ Removing and installing ⇒ [page 190](#)

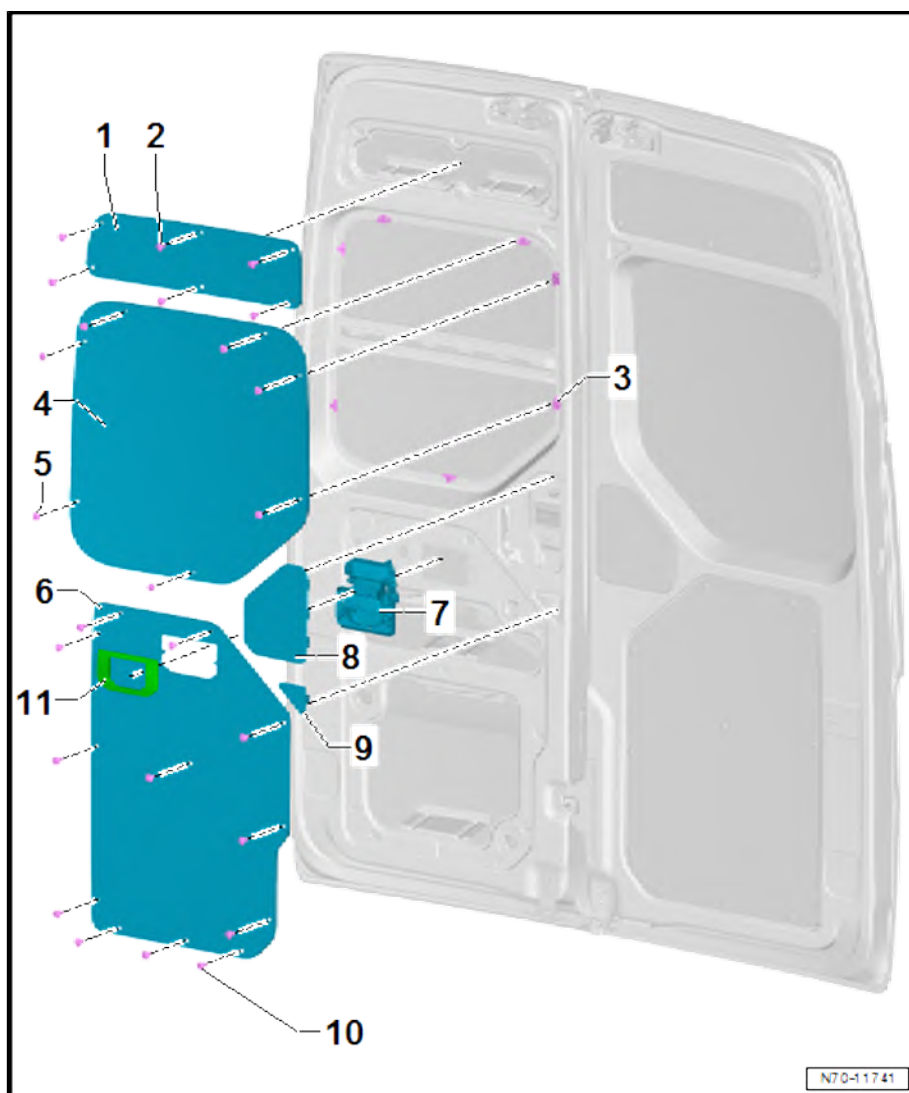



2.1.3 Assembly overview - rear door trim, cab door (PR no. K4G double cab)



Note

The assembly overview is shown for the left side of the vehicle. The right side is analogous.

1 - Cab door trim

- ❑ Removing and installing
⇒ [page 192](#)

2 - Door puller adapter

- ❑ Removing and installing
⇒ [page 194](#)

3 - Interior door handle

- ❑ Removing and installing
⇒ [page 191](#)

4 - Bolts

- ❑ Qty. 2
- ❑ 6 Nm

5 - Door puller cap

- ❑ Removing and installing
⇒ [page 194](#)

6 - Handle

- ❑ Removing and installing
⇒ [page 194](#)

7 - Ashtray installation frame


- ❑ Depending on equipment
- ❑ Removing and installing
⇒ [page 195](#)

8 - Ashtray

- ❑ Depending on equipment
- ❑ Removing and installing
⇒ [page 195](#)

9 - Clip

- ❑ Qty. 15
- ❑ Renew any damaged or deformed clips.

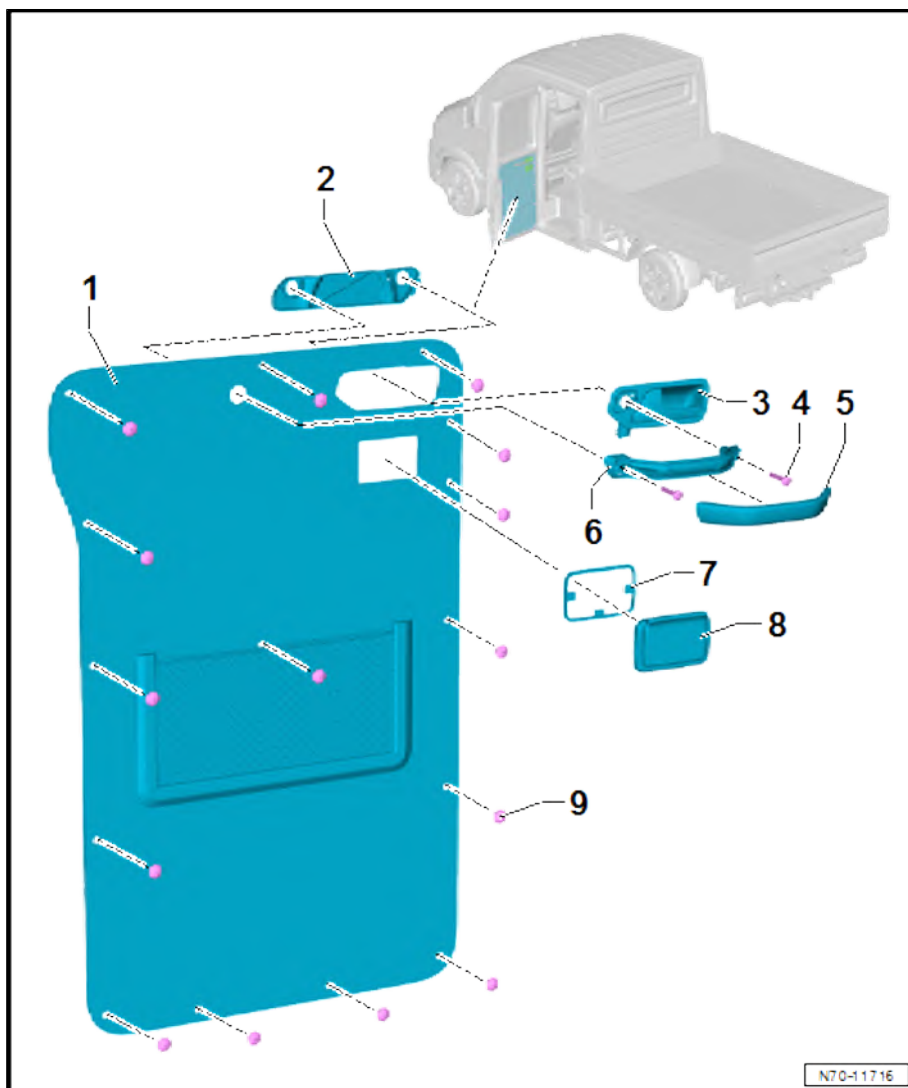


2.2 Removing and installing trim

Special tools and workshop equipment required




◆ Wedges - T10383-

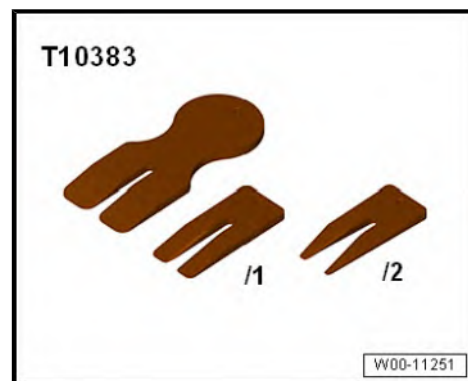

Removing

Interior door handle trim panel

- Use wedge - T10383- to unclip trim panel -1- from interior door handle -2-.
- Remove trim panel -1- from wing door trim -3-.

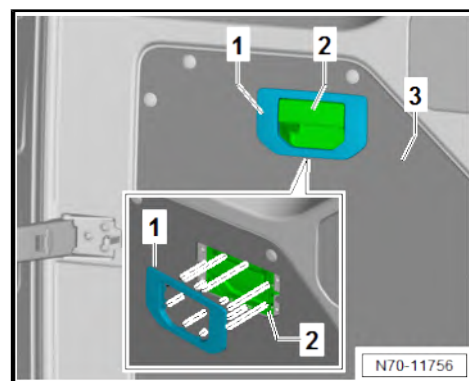


Wing door trim panels

- Use wedge - T10383- to unclip trim panels -1- from wing doors.
- Use wedge - T10383- to unclip trim panel -2- from wing door.

Installing

Install in reverse order.

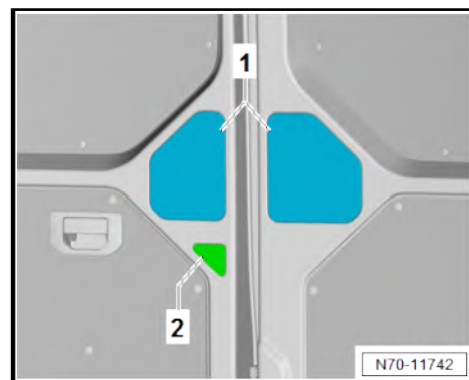


2.3 Removing and installing interior door handle

Removing

- Remove rear door puller in double cab ➔ [page 194](#) .
- Unclip interior door handle -1- from cab door trim -3- using removal wedge - 3409- .
- Detach Bowden cable -2-.
- Remove interior door handle -1-.

Installing

Install in reverse order.

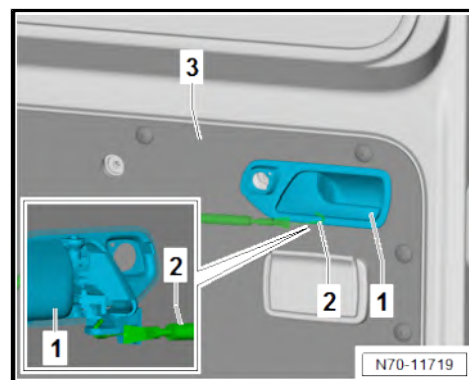



2.4 Removing and installing rear door trim

⇒ [“2.4.1 Removing and installing rear door trim, sliding door”, page 192](#)


⇒ [“2.4.2 Removing and installing rear door trim, wing door”, page 193](#)

⇒ [“2.4.3 Removing and installing rear door trim, cab door, double cab”, page 193](#)

2.4.1 Removing and installing rear door trim, sliding door

Removing


- Close sliding door.
- Remove clips -2-.
- Remove upper sliding door trim -1-.
- Unscrew bolts -4-.
- Remove centre upper sliding door trim -3-.

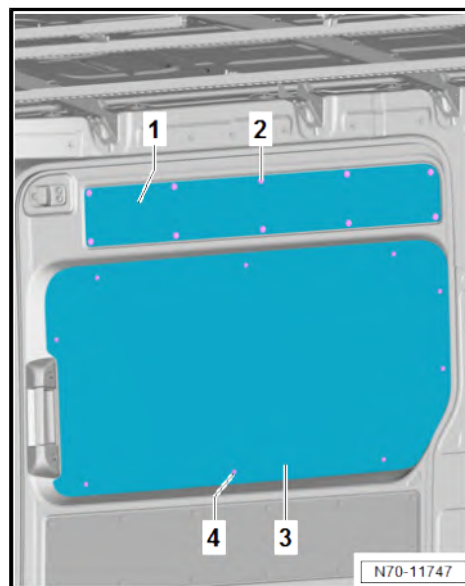

- Remove clips -2-.
- Remove centre lower sliding door trim -1-.
- Remove clips -4-.
- Remove lower sliding door trim -3-.

Installing

Install in reverse order.

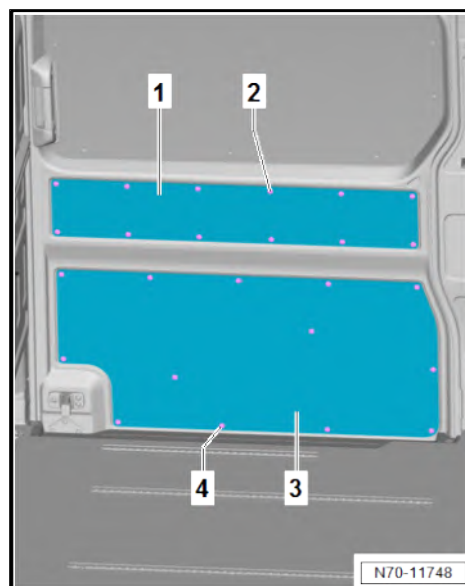





2.4.2 Removing and installing rear door trim, wing door

Removing


- Close wing door.
- Remove clips -2-.
- Remove upper wing door trim -1-.

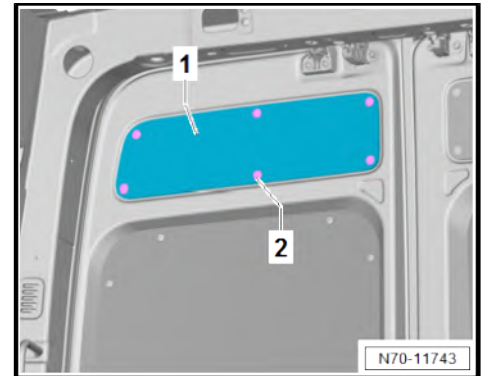

- Unscrew bolts -2-.
- Remove centre wing door trim -1-.
- Open wing door.
- Remove trim panel on interior door handle ⇒ [page 190](#) .

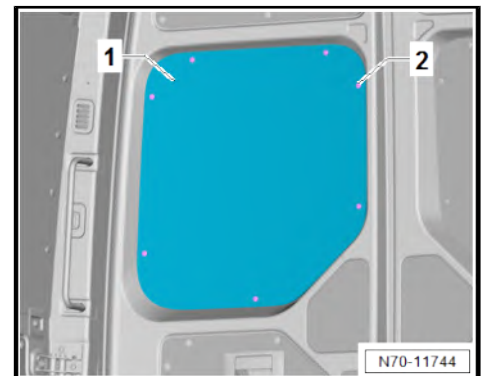

- Remove clips -2-.
- Remove lower wing door trim -1-.

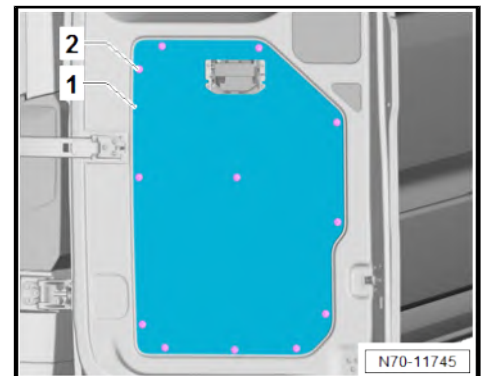

Installing

Install in reverse order.


2.4.3 Removing and installing rear door trim, cab door, double cab

Removing

- Remove inner door handle ⇒ [page 191](#) .
- Remove clips -2-.
- Remove cab door trim -1-.

Installing

Install in reverse order.

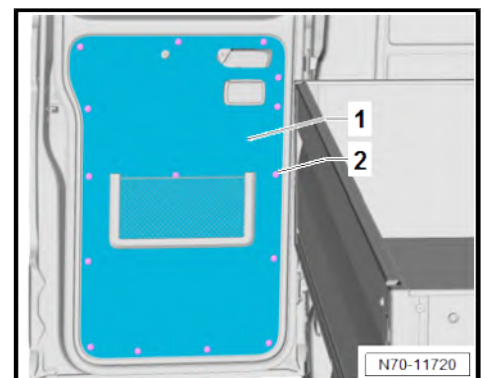



2.5 Removing and installing rear door puller

⇒ [“2.5.1 Removing and installing rear door puller, double cab”, page 194](#)

⇒ [“2.5.2 Removing and installing rear door puller adapter, double cab”, page 194](#)

2.5.1 Removing and installing rear door puller, double cab

Special tools and workshop equipment required

◆ Removal wedge - 3409-



◆ Torque wrench - V.A.G 1783-



Removing


- Use removal wedge - 3409- to unclip cap -2-.
- Unscrew bolts -3-.
- Remove rear door puller -1-.

Installing

Install in reverse order of removal, observing the following:

Specified torques

◆ ⇒ [“2.1 Assembly overview - rear door trim”, page 187](#)

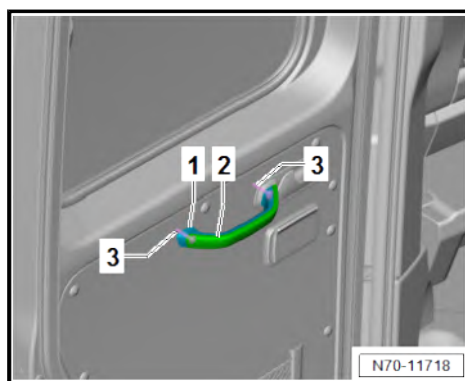


2.5.2 Removing and installing rear door puller adapter, double cab

Special tools and workshop equipment required



◆ Hot-air blower - V.A.G 1416-

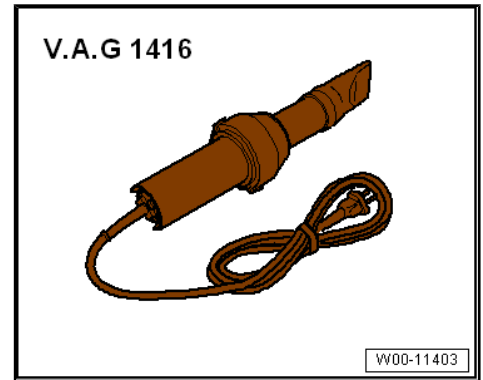

Removing

- Remove cab door trim ➔ [page 192](#) .
- Detach adhesive strip -2-. Heat bonding surface -2- with hot air blower - V.A.G 1416- to do this.
- Remove rear door puller adapter -1-.

Installing

Install in reverse order of removal, observing the following:



Note


Component is bonded in the factory with adhesive strips.

- Remove any adhesive residue.
- Thoroughly clean installation area of contaminants.



Note


- ◆ *Do not bond on adhesive strips until immediately before installation.*
- ◆ *Do not touch adhesive surfaces once backing film has been removed.*

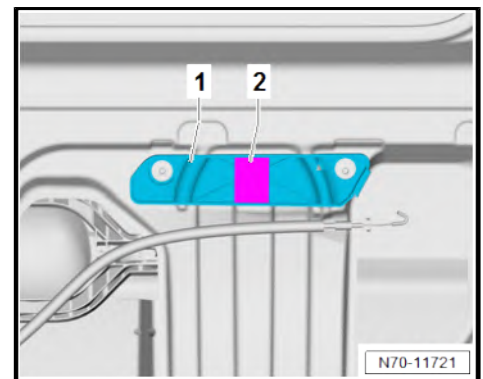

2.6 Removing and installing rear ashtray

Special tools and workshop equipment required

- ◆ Wedges - T10383-

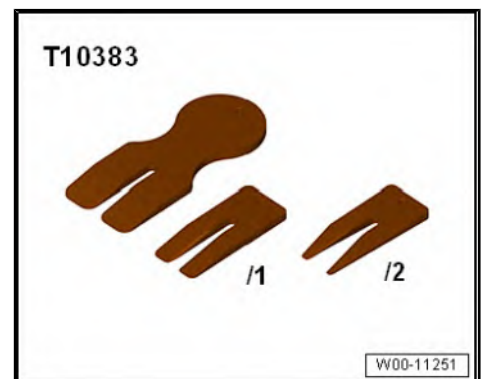




Removing

- Use wedge - T10383- to unclip ashtray -1- from trim -3-.
- Remove ashtray installation frame -2- from ashtray -1-.

Installing

Install in reverse order.

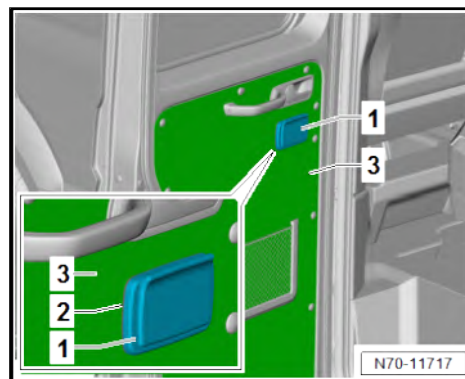



3 Dash panel

- ⇒ ["3.1 Assembly overview - dash panel", page 197](#)
- ⇒ ["3.2 Assembly overview - additional instruments", page 200](#)
- ⇒ ["3.3 Removing and installing dash panel end cover", page 200](#)
- ⇒ ["3.4 Removing and installing dash panel trim", page 201](#)
- ⇒ ["3.5 Removing and installing dash panel insert trim", page 201](#)
- ⇒ ["3.6 Removing and installing loudspeaker trim", page 202](#)
- ⇒ ["3.7 Removing and installing light switch trim", page 203](#)
- ⇒ ["3.8 Removing and installing radio/navigation system blanking plate", page 203](#)
- ⇒ ["3.9 Removing and installing retaining frame for dash panel insert", page 203](#)
- ⇒ ["3.10 Removing and installing dash panel", page 203](#)
- ⇒ ["3.11 Removing and installing additional instruments", page 209](#)
- ⇒ ["3.12 Removing and installing loudspeaker mounting", page 211](#)
- ⇒ ["3.13 Removing and installing outer dash panel vents", page 211](#)
- ⇒ ["3.14 Removing and installing centre vent", page 212](#)
- ⇒ ["3.15 Removing and installing front centre defroster vent", page 214](#)
- ⇒ ["3.16 Removing and installing side defroster vent", page 214](#)

3.1 Assembly overview - dash panel



1 - Dash panel

- ☐ The front centre defroster vent is permanently attached to the dash panel.
- ☐ Removing and installing ⇒ [page 203](#)

2 - Connection for external audio sources - R199-

- ☐ Removing and installing ⇒ Communication; Rep. gr. 91 ; Connection for external multi-media devices; Removing and installing connection for external audio sources - R199-

3 - Dash panel vent

- ☐ On outside
- ☐ Qty. 2
- ☐ Removing and installing ⇒ [page 211](#)

4 - Dash panel insert trim

- ☐ The gap cover is permanently attached to the trim of the dash panel insert via the »leather strap«
- ☐ Removing and installing ⇒ [page 201](#)

5 - Centre vent

- ☐ Top
- ☐ Qty. 2
- ☐ Removing and installing ⇒ [page 212](#)

6 - Storage compartments

- ☐ Top centre
- ☐ Vehicles without centre vent above dash panel
- ☐ Qty. 2
- ☐ Removing and installing ⇒ [page 50](#)

7 - Cover

- ☐ Depending on equipment
- ☐ Sunlight penetration photosensor - G107-
- ☐ Removing and installing ⇒ Heating, air conditioning; Rep. gr. 87 ; Other control components; Removing and installing sunlight penetration photosensor - G107-

8 - Centre vent


- ☐ The trim is permanently secured to the vents
- ☐ Removing and installing ⇒ [page 212](#)

9 - 12-V socket 3 - U19-

- ☐ Depending on equipment
- ☐ Removing and installing ⇒ Electrical system; General information; Rep. gr. 96 ; 12-V socket ; Removing and installing 12-V socket

10 - Storage compartment

- ☐ Centre

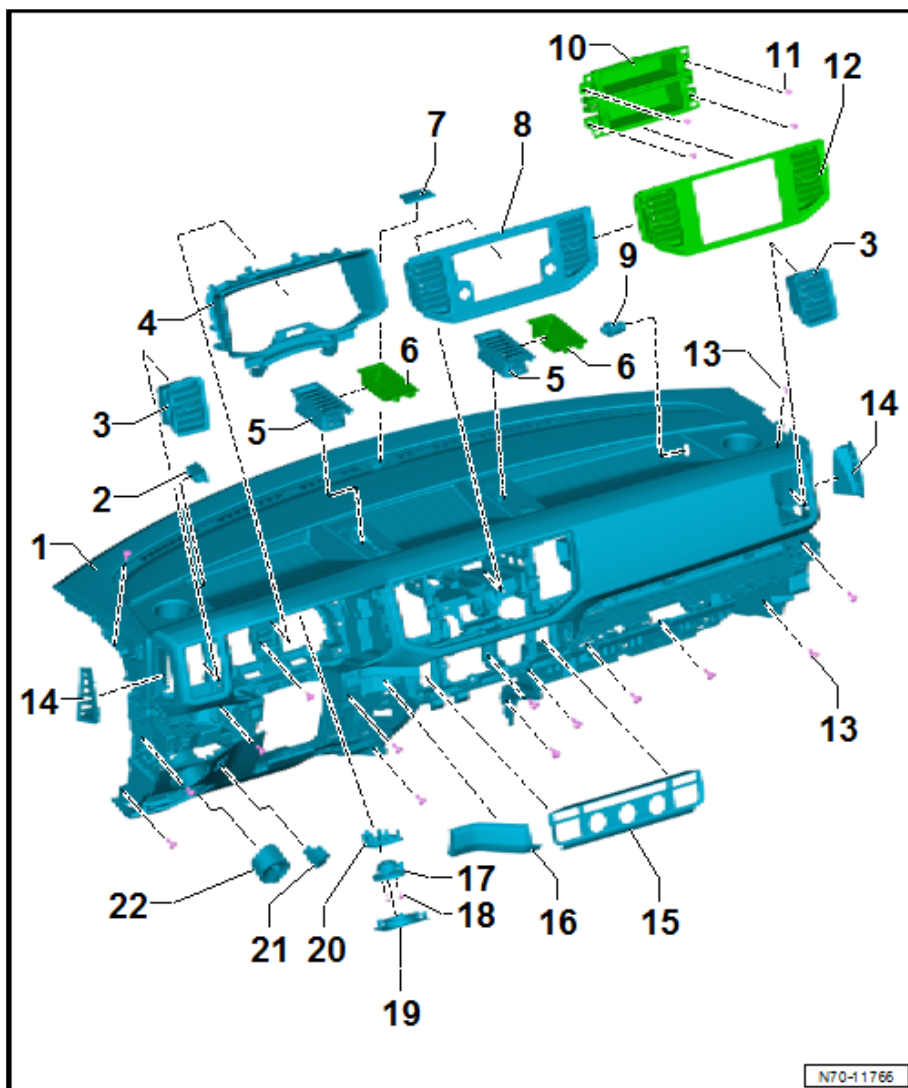

Volkswagen Technical Site: <https://vwts.ru>



- ☐ Vehicles without radio or Infotainment system display
- ☐ Removing and installing ⇒ [page 50](#)

11 - Bolts

- ☐ Qty. 4
- ☐ 1.5 Nm

12 - Trim

- ☐ Vehicles without radio or Infotainment system display
- ☐ Centre vent is permanently secured to trim
- ☐ Removing and installing ⇒ [page 212](#)

13 - Bolts

- ☐ For dash panel.
- ☐ Qty. 15
- ☐ 1.5 Nm

14 - Defroster vents

- ☐ On side
- ☐ Qty. 2
- ☐ Removing and installing ⇒ [page 214](#)

15 - Trim for operating and display unit for front air conditioning system - E87-

- ☐ For heater/air conditioner controls
- ☐ The trim underneath is permanently attached to the trim for the operating and display unit for front air conditioning system - E87-
- ☐ Removing and installing ⇒ [page 96](#)

16 - Trim panel

- ☐ Removing and installing ⇒ [page 201](#)

17 - Loudspeaker for emergency call module - R335-

- ☐ Depending on equipment
- ☐ Removing and installing ⇒ Communication; Rep. gr. 91 ; Sound system; Removing and installing loudspeaker for emergency call module - R335-

18 - Bolts

- ☐ Qty. 2
- ☐ 1.5 Nm

19 - Loudspeaker trim

- ☐ Removing and installing ⇒ [page 202](#)

20 - Mounting for loudspeaker

- ☐ Removing and installing ⇒ [page 211](#)

21 - Headlight range control regulator - E102-

- ☐ Removing and installing ⇒ Electrical system; Rep. gr. 96 ; Controls; Removing and installing headlight range control regulator - E102-

22 - Rotary light switch - EX1-

- ☐ Removing and installing ⇒ Electrical system; Rep. gr. 96 ; Controls; Removing and installing rotary light switch - EX1-



3.2 Assembly overview - additional instruments

1 - Mounting frame for additional instruments

- ❑ Removing and installing
⇒ [page 209](#)

2 - DIN slot

3 - Tachograph - G24-

- ❑ Removing and installing
⇒ Electrical system;
Rep. gr. 90 ; Additional
instruments; Removing
and installing tachograph - G24-

4 - Front trim for additional instruments

- ❑ Removing and installing
⇒ [page 209](#)

5 - Rear trim for additional instruments

- ❑ Removing and installing
⇒ [page 209](#)

6 - Blanking caps

- ❑ Qty. 2

7 - Bolts


- ❑ Qty. 4
- ❑ 2.5 Nm

8 - Retaining clips

- ❑ Qty. 5
- ❑ Renew any damaged or deformed retaining clips.

9 - Blind rivet nut

- ❑ Qty. 4
- ❑ Renew any damaged or deformed pop rivet nuts

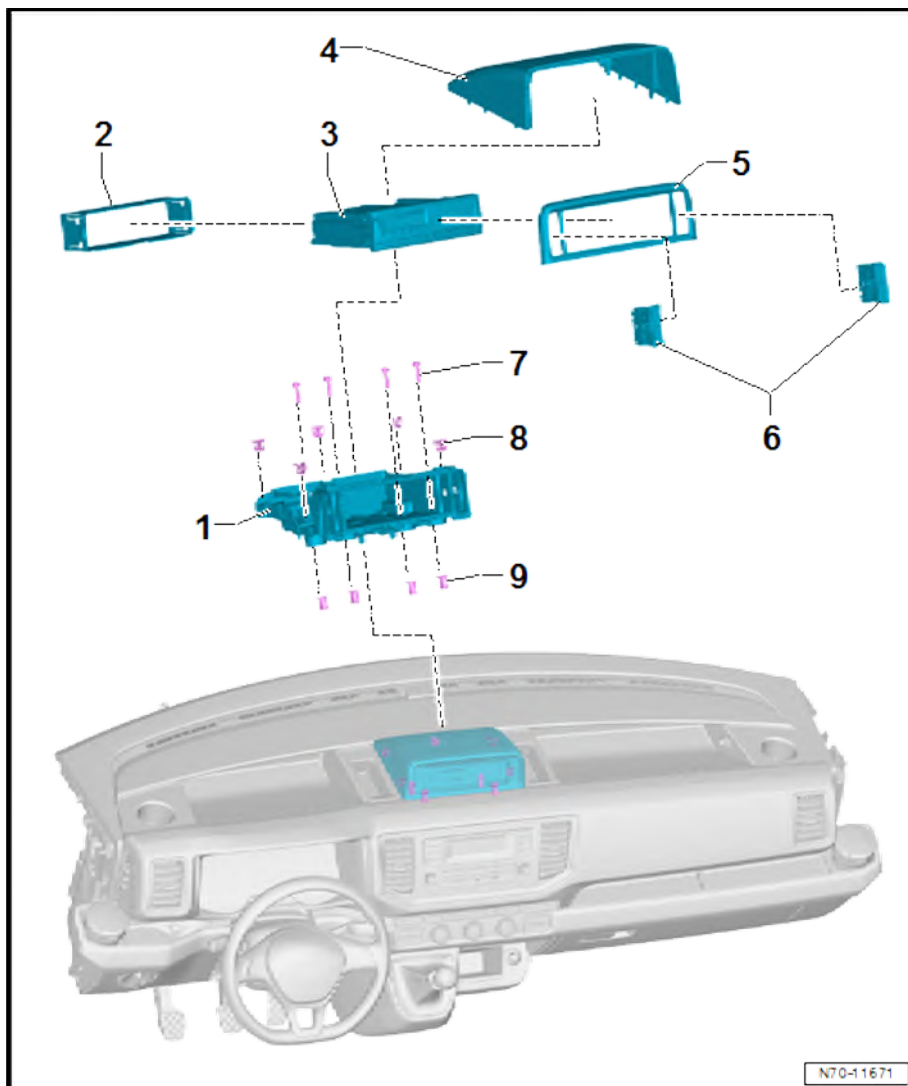

3.3 Removing and installing dash panel end cover

Special tools and workshop equipment required

- ◆ Removal wedge - 3409-






Removing

- Use removal wedge - 3409- to release dash panel end cover -1- from fasteners -4- on driver side dash panel cover -3-.
- Remove dash panel end cover -1- from driver side dash panel cover -2-.

Installing

Install in reverse order.

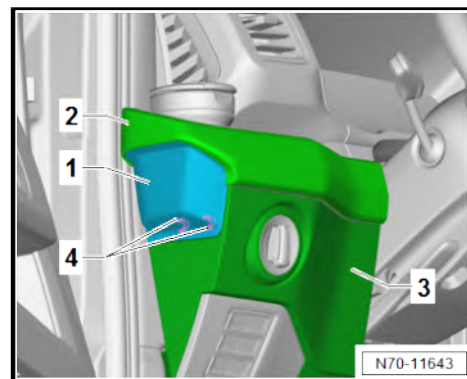

3.4 Removing and installing dash panel trim

Special tools and workshop equipment required


- ◆ Removal wedge - 3409-

Removing

- Use removal wedge - 3409- to detach dash panel trim -1- from fasteners -2-, and remove trim.

Installing


Install in reverse order.

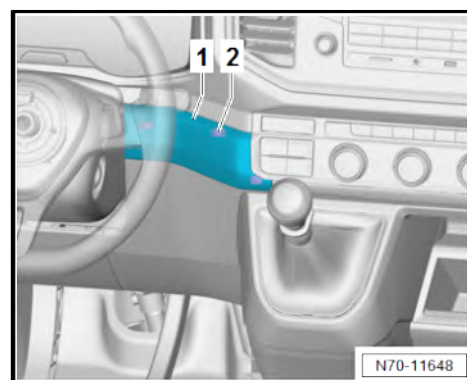

3.5 Removing and installing dash panel insert trim

Special tools and workshop equipment required

- ◆ Front end hook - 3370-

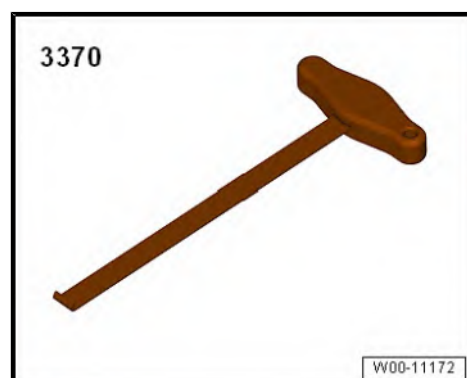



Removing

Vehicles with loudspeaker for emergency call module - R335-

- Remove loudspeaker trim ⇒ [page 202](#) .

Continued for all vehicles




Note

- ◆ *The gap cover is permanently attached to the trim of the dash panel insert -1- via the »leather strap«.*
- ◆ *The gap cover on the dash panel insert remains in the upper steering column trim -2-.*
- Detach upper steering column trim ⇒ [page 34](#) .



Note

- ◆ *Before removing the components, protect them to avoid any damage caused by tools.*
- ◆ *During the following work, ensure that the tools are positioned in such a way that they cannot slip.*
- Unclip dash panel insert trim -1- from mountings -3- using front end hook - 3370- .
- Remove dash panel insert -1- together with top steering column trim -2-.

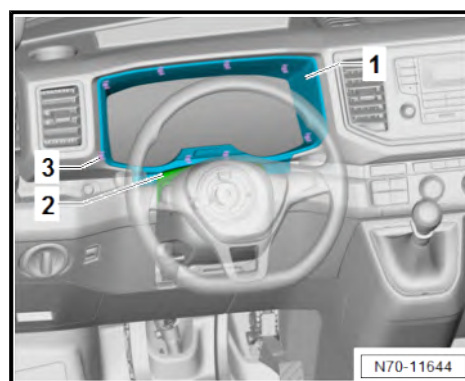

Installing

Install in reverse order.

3.6 Removing and installing loudspeaker trim

Special tools and workshop equipment required

- ◆ Removal wedge - 3409-





Removing

- Unclip loudspeaker trim -1- from dash panel insert trim -2- using removal wedge - 3409- .

Installing


Install in reverse order of removal, observing the following:

- Check that seal on loudspeaker trim is seated correctly and not damaged, renew if necessary ⇒ Electronic parts catalogue (ETKA) or ⇒ webMANTIS for MAN TGE.



Note

When installing, the seal of the loudspeaker trim must come into direct contact with the loudspeaker.

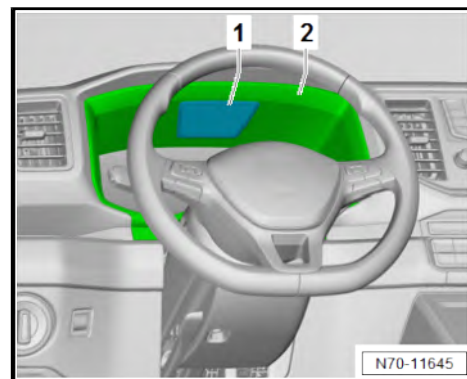

3.7 Removing and installing light switch trim

The light switch trim is permanently secured to the driver side dash panel cover.

- Removing and installing driver side dash panel cover
⇒ [page 32](#) .

3.8 Removing and installing radio/navigation system blanking plate

The mounting frame for the radio/navigation system is permanently attached to the dash panel.

- Removing and installing dash panel ⇒ [page 203](#)

The trim is permanently secured to the centre vents.

- Removing and installing centre vents ⇒ [page 212](#) .

3.9 Removing and installing retaining frame for dash panel insert


The retaining frame for the dash panel insert is permanently attached to the dash panel.

- Removing and installing dash panel ⇒ [page 203](#)

3.10 Removing and installing dash panel

Special tools and workshop equipment required

- ◆ Torque screwdriver - V.A.G 1624-

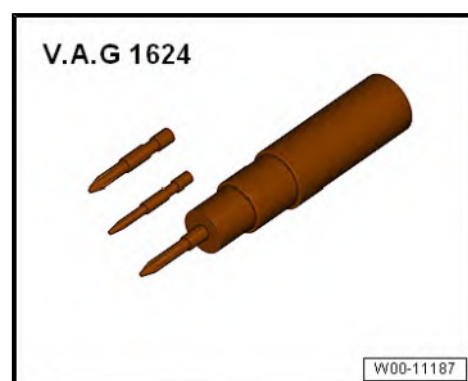




◆ Release tool - T10236-



◆ Removal lever - 80 - 200-

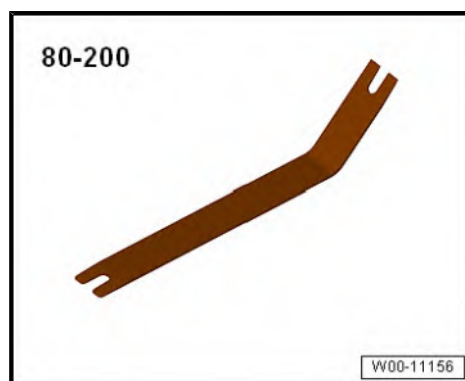

Removing



Note

- ◆ *If electrical wires are disconnected or removed and installed, it is useful to make corresponding drawings or photos. This guarantees that everything is re-installed in its original position.*
- ◆ *When using release tool - T10236- or removal lever - 80 - 200- the wires can be removed more easily.*
- ◆ *Secure the electrical connectors that are routed through installation openings in the dash panel using a wire or cord so that the electrical connector can be guided through the installation opening during installation of the dash panel. Otherwise, the electrical connector may be out of reach after the dash panel has been installed.*
- ◆ *Note wiring harnesses when removing components. Excessive tensile stress may cause damage.*
- ◆ *Fit all cable ties and other fasteners for wiring harness in the same places from which they were detached or cut.*
- ◆ *The removal and installation procedures may have to be modified slightly depending on equipment.*

Vehicles with electric drive



DANGER

Danger to life from high voltage.

Risk of severe or fatal injury due to electric shock.


- **The high-voltage system must be de-energised by a suitably qualified technician.**



- De-energise high-voltage system ⇒ Rep. gr. 93 ; De-energising high-voltage system .


Continued for all vehicles

- Move front seats as far back as possible.
- Switch off ignition and all electrical consumers.
- Withdraw ignition key.
- Remove steering column combination switch ⇒ Electrical system; Rep. gr. 94 ; Steering column switch module; Removing and installing steering column combination switch .
- Remove dash panel insert ⇒ Electrical system; Rep. gr. 90 ; Dash panel insert; Removing and installing dash panel insert - KX2- .
- If present, remove radio or Infotainment system display ⇒ Communication; Rep. gr. 91 ; Radio; Removing and installing radio or ⇒ Communication; Rep. gr. 91 ; Infotainment system; Removing and installing Infotainment system display .
- If present, remove centre dash panel storage compartment ⇒ [page 51](#) .
- Remove operating and display unit for front air conditioning system - E87- ⇒ Heating, air conditioning; Rep. gr. 87 ; Operating and display unit; Removing and installing operating and display unit .
- Remove upper A-pillar trims ⇒ [page 268](#) .
- If present, remove connection for external audio sources - R199- above dash panel ⇒ Communication; Rep. gr. 91 ; Connection for external audio sources; Removing and installing connection for external audio sources - R199- .
- If fitted, remove sunlight penetration photosensor - G107- above dash panel ⇒ Heating, air conditioning; Rep. gr. 87 ; Other control components; Removing and installing sunlight penetration photosensor - G107- .
- If present, remove additional instruments frame for tachograph - G24- above dash panel ⇒ [page 209](#) .
- Remove dash panel storage compartment on driver side ⇒ [page 50](#) .
- Remove glove compartment ⇒ [page 37](#) .
- If fitted, remove 12 V socket 3 - U19- above dash panel ⇒ Electrical system; General information; Rep. gr. 96 ; 12-V socket ; Removing and installing 12-V socket .
- Unscrew bolts -3- on left of central tube -4-
- Unscrew bolt -2- above dash panel -1-.

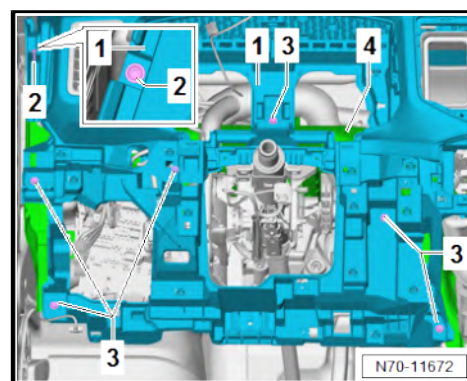



- Unscrew bolts -2- securing dash panel -1- to centre of cross member -3-.

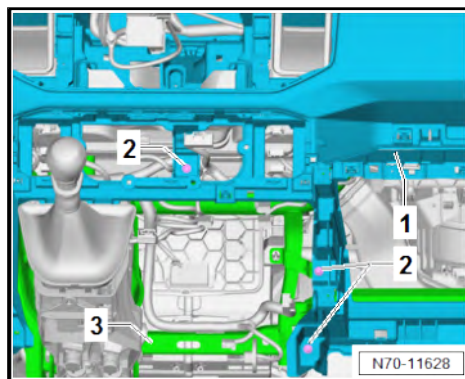


- Unscrew bolts -3- on right of central tube -4-
- Unscrew bolt -2- above dash panel -1-.

CAUTION

Pyrotechnic components can trigger unintentionally.
Danger of injury.

- Discharge any static charge in your body by briefly touching the door striker plate.

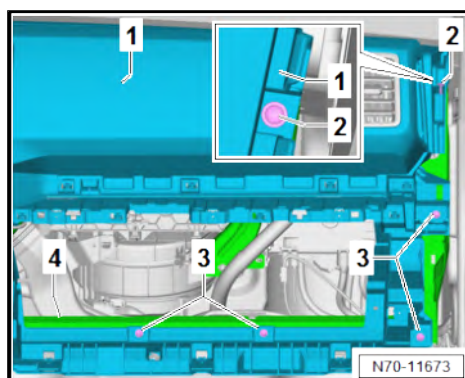


- Disconnect electrical connector -3- from front passenger side airbag igniter -1-.
- Unscrew bolts -2-.
- Depending on equipment, guide out wiring harnesses through dash panel installation openings.

The help of a second mechanic is required for removal.



Note

Wear safety gloves to protect against potential injury from sharp components.

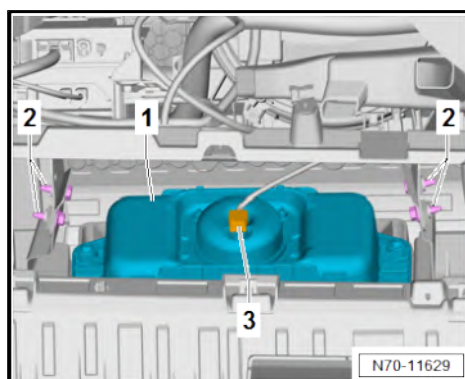




- Pull dash panel -1- back as far as possible until guide lugs -2- are clear of rubber grommets -3-.
- Pull out dash panel -1- from body mountings -4- in windscreen transition area.

Vehicles with Climatronic

- Remove front left chest vent temperature sensor - G385- ⇒ Heating, air conditioning system; Rep. gr. 87 ; Other control components; Removing and installing front left chest vent temperature sensor - G385- .
- Remove front right chest vent temperature sensor - G386- ⇒ Heating, air conditioning system; Rep. gr. 87 ; Other control components; Removing and installing front right chest vent temperature sensor - G386- .

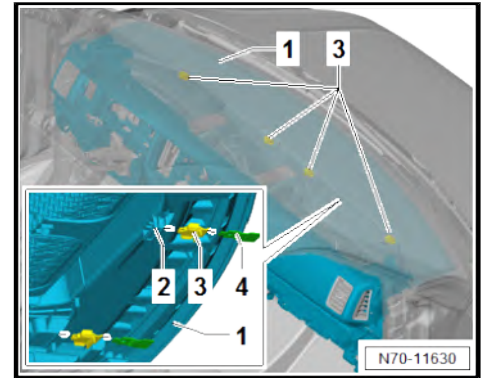


Continued for all vehicles



Note

The following work step is described for the left-hand side of the vehicle. Removal for the right side follows the same pattern.

- Detach fastener -2- with wiring harness from dash panel on left of dash panel -1-.
- Detach fastener with wiring harness from dash panel on right of dash panel.
- Use suitable means to protect body and surrounding components against damage.

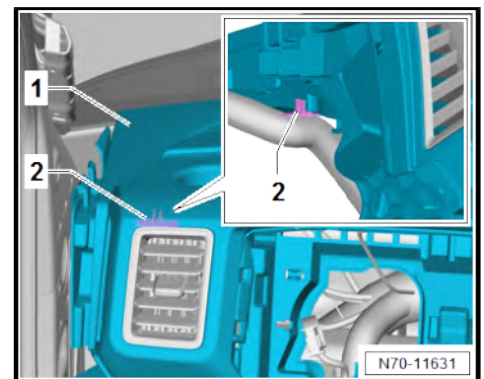



- Remove dash panel -1- from dash panel central tube -2-.
- With the aid of a second mechanic, lift out dash panel -1-. Mind wiring harnesses while doing so.
- Place dash panel -1- on a soft surface.

Installing



Install in reverse order of removal, observing the following:




Note

- ◆ *Before installing, all securing elements and attachments must be checked for signs of wear and renewed as necessary.*
- ◆ *When installing the dash panel, ensure that the dash panel seats precisely in the mountings in the transitional area to the windscreen.*
- ◆ *When installing the dash panel, guide the connector, which was secured with wire or a cord beforehand, from below through the assembly apertures in the dash panel. Otherwise, the electrical connectors may be out of reach after the dash panel has been inserted.*
- ◆ *Route all of the various lines and electrical wiring in such a way that they are restored to their original positions and the wiring harnesses are not crushed.*

- Check that seal -2- on air duct for vent defrost function -1- is seated correctly and not damaged -arrows-, renew if necessary ⇒ Electronic parts catalogue (ETKA) or ⇒ webMANTIS for MAN TGE.

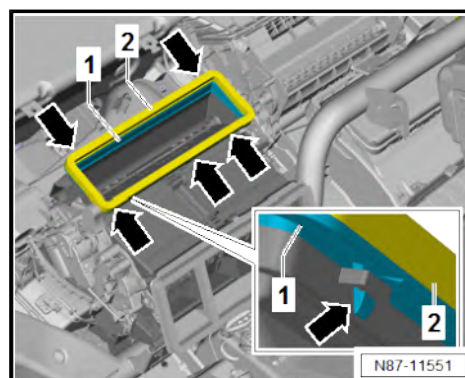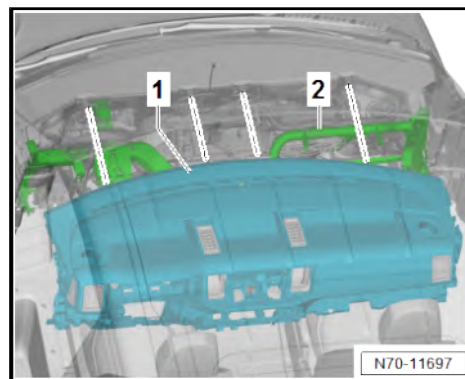


- Check that seal -2- on air duct for centre vent -1- is seated correctly and not damaged -arrows-, renew if necessary ⇒ Electronic parts catalogue (ETKA) or ⇒ webMANTIS for MAN TGE.

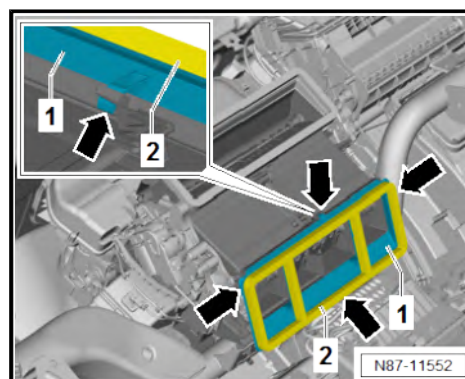




- Check that rubber sleeves -1- on body mountings -2- are seated correctly and not damaged, renew if necessary ⇒ Electronic parts catalogue (ETKA) or ⇒ webMANTIS for MAN TGE.

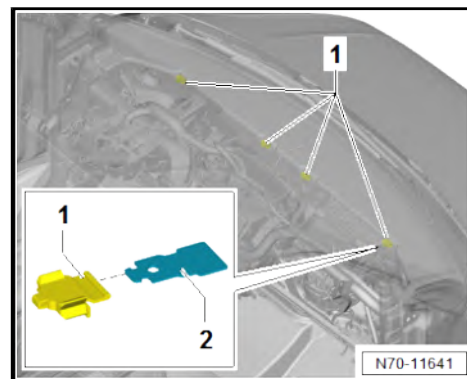

- With the aid of a second mechanic, push guide lugs -2- on dash panel -1- on rubber grommets -3- in transition area to windscreen, ensuring that they fit perfectly.
- Check that dash panel -1- with guide lugs -2- is fitted perfectly in body mounting -4-.
- Check that dash panel -1- is fitted perfectly on central tube for dash panel.

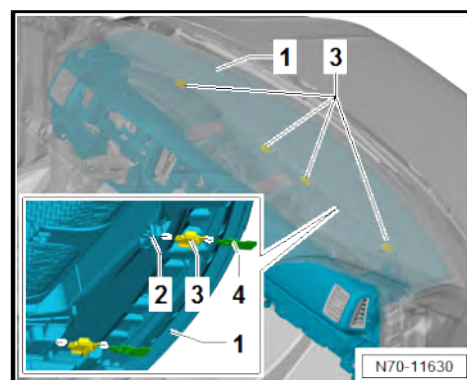

Vehicles with electric drive

WARNING

Danger to life from high voltage.

Risk of severe or fatal injury due to electric shock.

- The high-voltage system must be brought into operation by a suitably qualified technician.

- Re-energise high-voltage system ⇒ Rep. gr. 93 ; Re-energising high-voltage system .

Continued for all vehicles



Note

If front passenger airbag warning lamp - K145- indicates a fault following installation, the event memory must be read, cleared and then read again ⇒ Vehicle diagnostic tester.

Specified torques

- ◆ ⇒ [“3.1 Assembly overview - dash panel”, page 197](#)
- ◆ ⇒ [“4.1 Assembly overview - central tube for dash panel”, page 216](#)

3.11 Removing and installing additional instruments

⇒ [“3.11.1 Removing and installing additional instrument trim”, page 209](#)

⇒ [“3.11.2 Removing and installing additional instruments mounting frame”, page 211](#)

3.11.1 Removing and installing additional instrument trim

Special tools and workshop equipment required




◆ Removal wedge - 3409-



Removing


- Unclip rear additional instruments trim -1- from front additional instruments trim -2- using removal wedge - 3409- in direction of -arrow-.

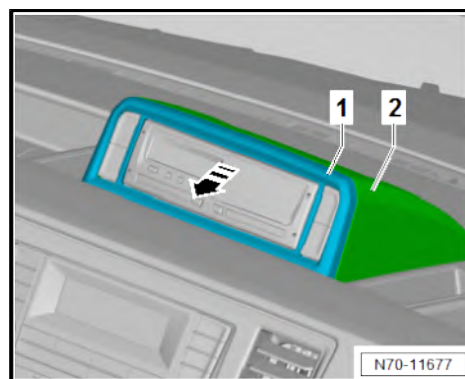

- Unclip front additional instruments trim -1- from retaining clips -3- using removal wedge - 3409- in direction of -arrow-.
- Remove front additional instruments trim -1- from frame for additional instruments -2-.

Installing

Install in reverse order.

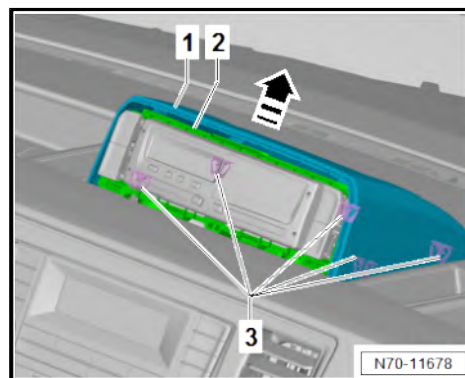




3.11.2 Removing and installing additional instruments mounting frame

Removing

- Remove tachograph - G24- ⇒ Electrical system; Rep. gr. 90 ; Additional instruments; Removing and installing tachograph - G24- .
- Remove additional instruments trims ⇒ [page 209](#) .
- Unscrew bolts -2-.
- Lay wiring harness aside.
- Remove additional instruments frame -1-.
- Unclip switch module blanking caps -3-.

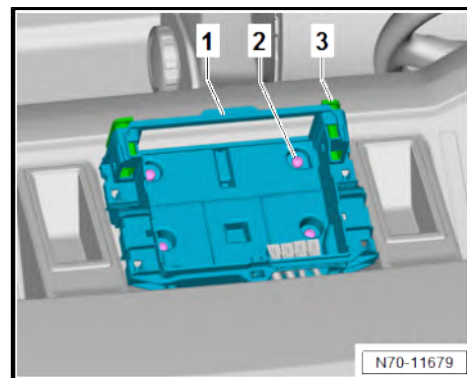

Installing

Install in reverse order of removal, observing the following:

Specified torques

- ♦ ⇒ [“3.2 Assembly overview - additional instruments”, page 200](#)


3.12 Removing and installing loudspeaker mounting

Removing

- Removing and installing loudspeaker for emergency call module - R335- ⇒ Communication; Rep. gr. 91 ; Sound system; Removing and installing loudspeaker for emergency call module - R335- .
- Unclip loudspeaker holder -1- from retaining clips -2-.

Installing

Install in reverse order.

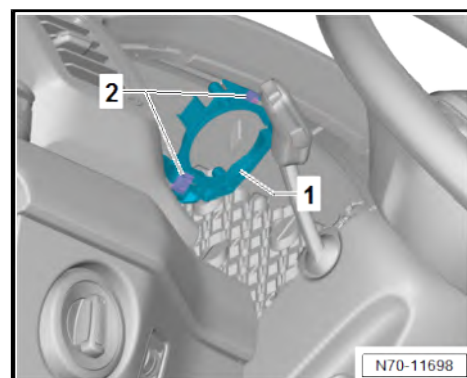

3.13 Removing and installing outer dash panel vents

Special tools and workshop equipment required

- ♦ Front end hook - 3370-





Removing



Note


- ◆ *Before removing the components, protect them to avoid any damage caused by tools.*
- ◆ *During the following work, ensure that the tools are positioned in such a way that they cannot slip.*

- Set outer dash panel vent -1- to fully open position.
- Insert front end hook - 3370- -3- in fresh air duct.
- Engage front end hook - 3370- -3- in rear of outer dash panel vent -1-.
- Pull outer dash panel vent -1- attached to front end hook - 3370- -3- from installation opening in dash panel -2- forcibly with a jolt.

Installing

Install in reverse order of removal, observing the following:

- Check that seal on fresh air channel is seated correctly and not damaged, renew if necessary ⇒ Electronic parts catalogue (ETKA) or ⇒ webMANTIS for MAN TGE.

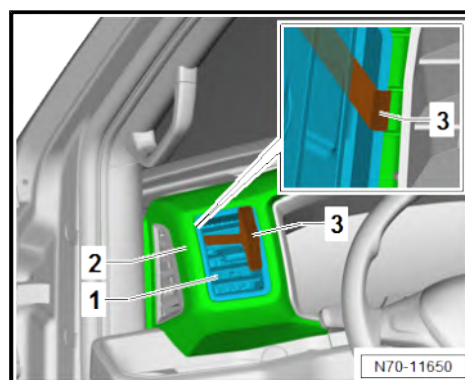

3.14 Removing and installing centre vent

⇒ [“3.14.1 Removing and installing centre vent”, page 212](#)

⇒ [“3.14.2 Removing and installing top centre vents”, page 213](#)

3.14.1 Removing and installing centre vent

Special tools and workshop equipment required

- ◆ Front end hook - 3370-



- ◆ Removal wedge - 3409-






Removing



Note

- ◆ *The trim -1- is permanently attached to the vents -2-.*
- ◆ *Before removing the components, protect them to avoid any damage caused by tools.*
- ◆ *During the following work, ensure that the tools are positioned in such a way that they cannot slip.*

- Open centre vent -2- completely.
- Insert front end hook - 3370- -3- in fresh air duct.
- Engage front end hook - 3370- -3- behind centre vent -2-.
- Hold centre vent -2- under tension slightly with front end hook - 3370- -3-.
- Use removal wedge - 3409- -5- to unclip trim -1- from fasteners -4-.
- Remove trim -1- together with centre vents -2-.

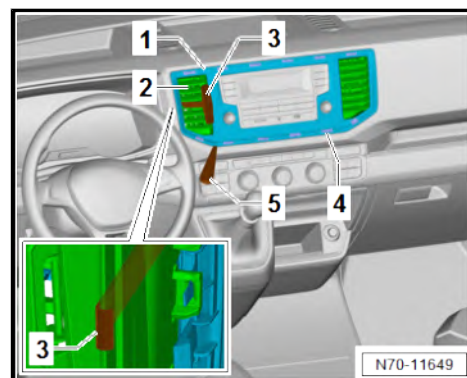

Installing


Install in reverse order of removal, observing the following:

- Check that seal on centre vents is seated correctly and not damaged, renew if necessary ⇒ Electronic parts catalogue (ETKA) or ⇒ webMANTIS for MAN TGE.

3.14.2 Removing and installing top centre vents

Special tools and workshop equipment required

- ◆ Assembly tool - T10118-

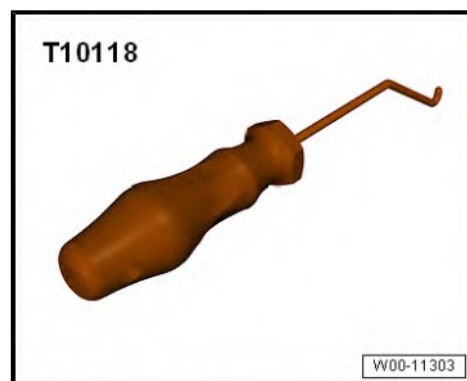

- ◆ Removal wedge - 3409-






Removing



Note

- ◆ *Before removing the components, protect them to avoid any damage caused by tools.*
- ◆ *During the following work, ensure that the tools are positioned in such a way that they cannot slip.*
- Open centre vent -1- completely.
- Insert assembly tool - T10118- -3- in fresh air duct.
- Engage assembly tool - T10118- -3- behind centre vents -1-.
- Hold centre vent -1- under tension slightly with assembly tool - T10118- -3-.
- Use removal wedge - 3409- to detach fasteners -4-.
- Remove centre vent -1- from installation openings -2- in dash panel.

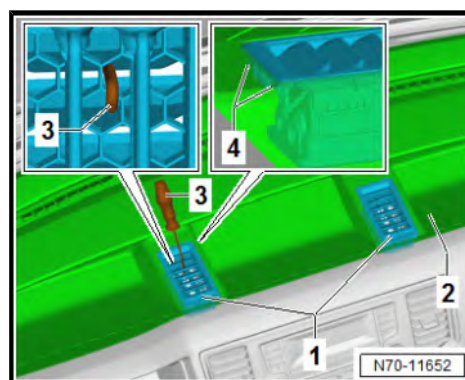

Installing

Install in reverse order of removal, observing the following:

- Check that seal on centre vents is seated correctly and not damaged, renew if necessary ⇒ Electronic parts catalogue (ETKA) or ⇒ webMANTIS for MAN TGE.

3.15 Removing and installing front centre defroster vent

The front centre defroster vent is permanently attached to the dash panel.

- Removing and installing dash panel ⇒ [page 203](#)

3.16 Removing and installing side defroster vent

Special tools and workshop equipment required

- ◆ Removal wedge - 3409-






Removing

- If present, remove ashtray.
- Use removal wedge - 3409- to unclip defroster vent -1- side-ways out of installation opening in dash panel -2-.

Installing

Install in reverse order.

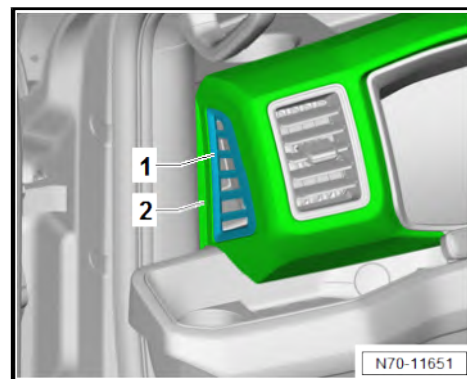

4 Central tube for dash panel

⇒ [“4.1 Assembly overview - central tube for dash panel”, page 216](#)

⇒ [“4.2 Removing and installing central tube for dash panel”, page 219](#)

4.1 Assembly overview - central tube for dash panel

⇒ [“4.1.1 Assembly overview - central tube for dash panel, left-hand drive vehicle”, page 216](#)

⇒ [“4.1.2 Assembly overview - central tube for dash panel, right-hand drive vehicle”, page 218](#)

4.1.1 Assembly overview - central tube for dash panel, left-hand drive vehicle

1 - Central tube for dash panel

- ☐ Removing and installing
⇒ [page 219](#)

2 - Bolts

- ☐ For heater and air conditioning unit
- ☐ Qty. 3
- ☐ 4 Nm

3 - Bracket

- ☐ For airbag unit on front passenger side
- ☐ Qty. 2
- ☐ Assembly overview
⇒ [page 150](#)
- ☐ Removing and installing
⇒ [page 151](#)

4 - Bolts

- ☐ If removal was carried out due to an accident, renew bolts
- ☐ Qty. 4
- ☐ 8 Nm

5 - Studs


- ☐ If removal was carried out due to an accident, renew studs
- ☐ Qty. 2
- ☐ 20 Nm

6 - Nuts

- ☐ If removal was carried out due to an accident, renew nuts
- ☐ Qty. 2
- ☐ 20 Nm

7 - Bolts

- ☐ If removal was carried out due to an accident, renew bolts
- ☐ Qty. 2

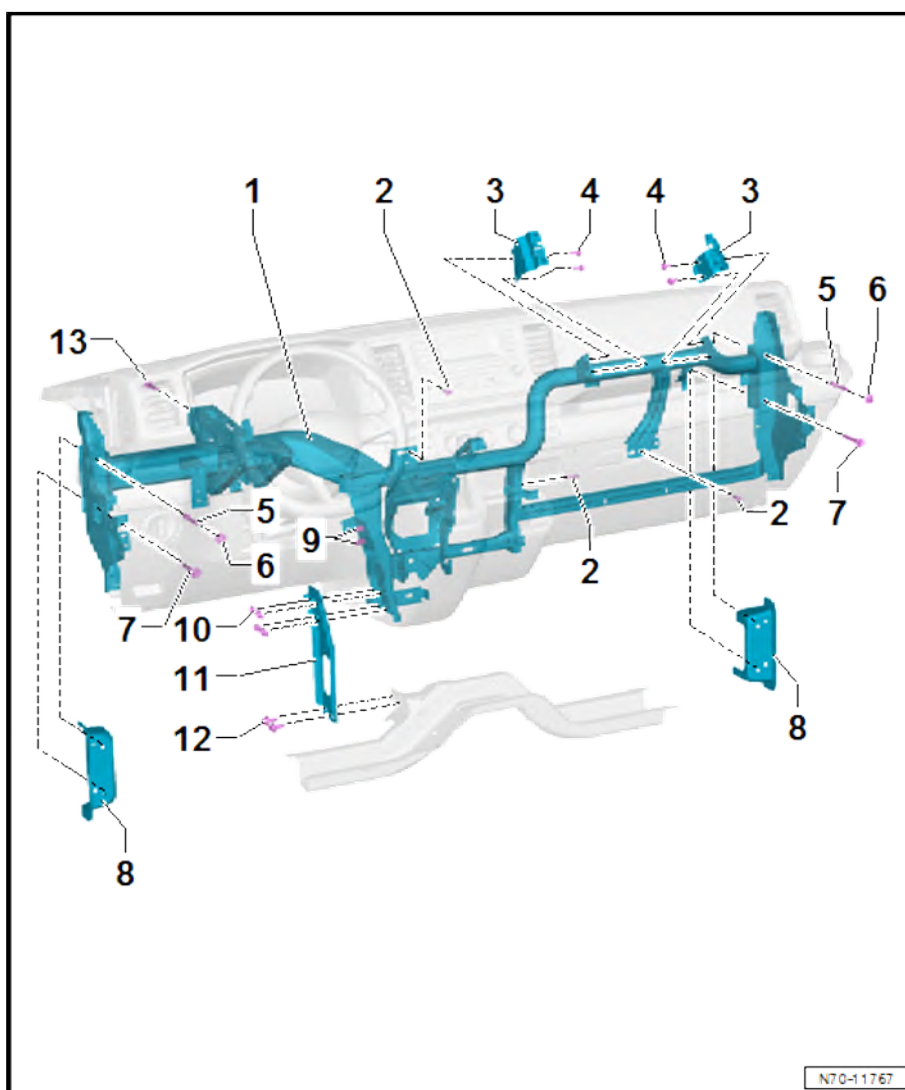



- ☐ 20 Nm

8 - Mounting brackets

- ☐ Qty. 2
- ☐ The mounting brackets are permanently secured to the body

9 - Nuts

- ☐ For earth points
- ☐ Qty. 2
- ☐ 9 Nm

10 - Nuts

- ☐ Qty. 4
- ☐ 20 Nm

11 - Securing bracket

- ☐ Removing and installing ⇒ [page 219](#)

12 - Bolts

- ☐ Qty. 2
- ☐ 20 Nm

13 - Bolt

- ☐ If removal was carried out due to an accident, renew bolt
- ☐ To bulkhead plenum chamber
- ☐ 20 Nm

4.1.2 Assembly overview - central tube for dash panel, right-hand drive vehicle

1 - Cross member

- ☐ For dash panel.
- ☐ Removing and installing
⇒ [page 219](#)

2 - Bracket

- ☐ For airbag unit on front passenger side
- ☐ Qty. 2
- ☐ Assembly overview
⇒ [page 150](#)
- ☐ Removing and installing
⇒ [page 151](#)

3 - Bolts

- ☐ If removal was carried out due to an accident, renew bolts
- ☐ Qty. 4
- ☐ 8 Nm

4 - Bolt

- ☐ If removal was carried out due to an accident, renew bolt
- ☐ To bulkhead plenum chamber
- ☐ 20 Nm

5 - Mounting brackets

- ☐ Qty. 2
- ☐ The mounting brackets are permanently secured to the body

6 - Studs

- ☐ If removal was carried out due to an accident, renew studs
- ☐ Qty. 2
- ☐ 20 Nm

7 - Nuts

- ☐ If removal was carried out due to an accident, renew nuts
- ☐ Qty. 2
- ☐ 20 Nm

8 - Bolts


- ☐ If removal was carried out due to an accident, renew bolts
- ☐ Qty. 2
- ☐ 20 Nm

9 - Nuts

- ☐ For earth points
- ☐ Qty. 2
- ☐ 9 Nm

10 - Nuts

- ☐ Qty. 4

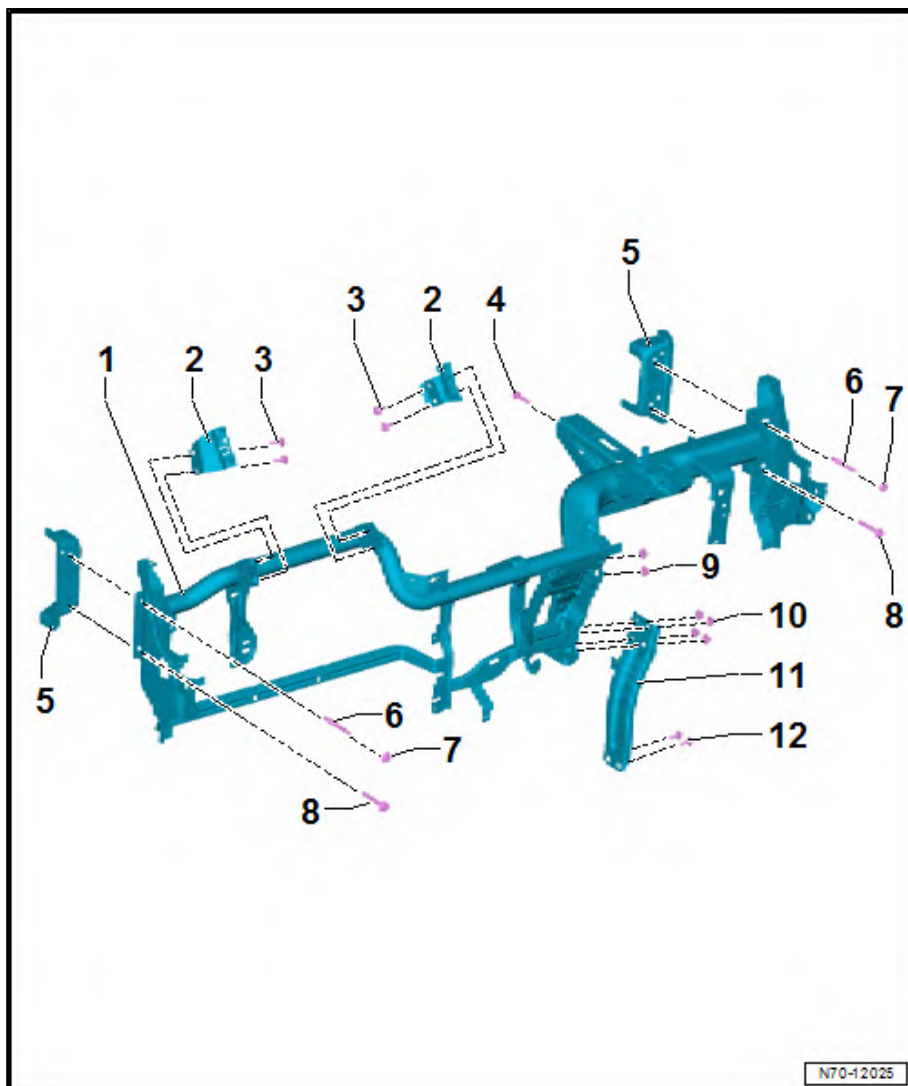



- ☐ 20 Nm

11 - Securing bracket

- ☐ Removing and installing ⇒ [page 219](#)

12 - Bolts

- ☐ Qty. 2
- ☐ 20 Nm

4.2 Removing and installing central tube for dash panel

⇒ [“4.2.1 Removing and installing central tube for dash panel, left-hand drive vehicles”, page 219](#)

⇒ [“4.2.2 Removing and installing central tube for dash panel, right-hand drive vehicles”, page 223](#)

⇒ [“4.2.3 Removing and installing securing bracket, left-hand drive vehicles”, page 228](#)

⇒ [“4.2.4 Removing and installing securing bracket, right-hand drive vehicles”, page 228](#)

4.2.1 Removing and installing central tube for dash panel, left-hand drive vehicles

Special tools and workshop equipment required

- ◆ Torque wrench - V.A.G 1331-



Removing



Note

- ◆ *If electrical wires are disconnected or removed and installed, it is useful to make corresponding drawings or photos. This guarantees that everything is re-installed in its original position.*
- ◆ *Note wiring harnesses when removing components. Excessive tensile stress may cause damage.*
- ◆ *When using release tool - T10236- or removal lever - 80 - 200- the wires can be removed more easily.*
- ◆ *Fit all cable ties and other fasteners for wiring harness in the same places from which they were detached or cut.*
- Remove windscreen wiper motor with linkage ⇒ Electrical system; Rep. gr. 92 ; Windscreen wiper system; Removing and installing wiper motor .






- Do not unscrew bolts and nuts with an impact driver. Unscrew them by hand.
- Unscrew bolt -2- from central tube for dash panel on plenum chamber bulkhead -1-.
- Remove dash panel ➔ [page 203](#) .
- Remove insulating mat above central tube for dash panel.
- Remove lower A-pillar trims ➔ [page 268](#) .
- Disconnect electrical connectors -6- from onboard supply control unit - J519- ➔ Electrical system; Rep. gr. 97 ; Control units; Removing and installing onboard supply control unit - J519- .
- If fitted, separate electrical connectors -3- from emergency call module control unit and communication unit - J949- -2-.
- Release attachments -4- securing wiring harness.
- Lay aside wiring harnesses from central tube for dash panel.
- Unscrew bolts -5-.
- Detach relay and fuse carrier -1- on central tube for dash panel.
- Remove relay and fuse carrier -1- with lines connected, and place it on floor covering.
- Remove footwell vent on driver side ➔ Heating, air conditioning; Rep. gr. 80 ; Air duct; Removing and installing footwell vent on driver side .
- Remove steering column ➔ Running gear, axles, steering; Rep. gr. 48 ; Steering column; Removing and installing steering column .
- Remove centre console trim in front footwell ➔ [page 95](#) .
- Unscrew bolts -2-.



Note


Do not overstretch cables of selector mechanism or pull out of rubber grommet in floor covering.

- Remove selector mechanism with cables -1- from central tube for dash panel -3-, and place it on floor covering.

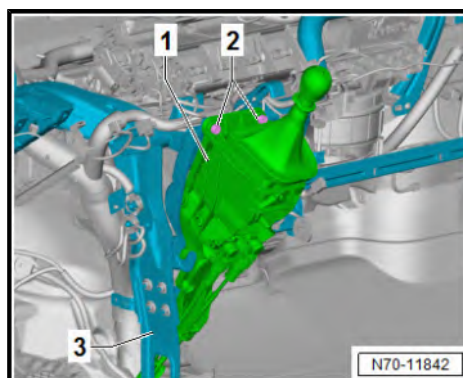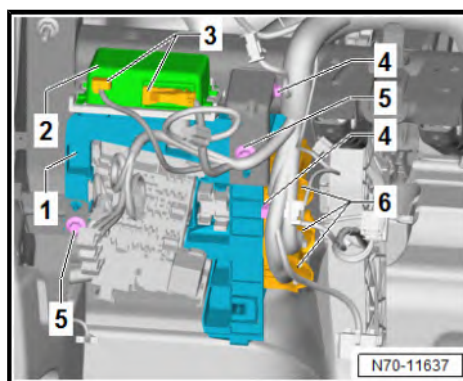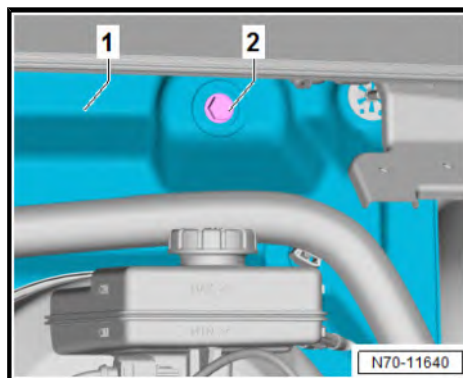




- Unscrew nuts -3-.
- Remove wiring harnesses -2-.
- Lay aside earth points from central tube for dash panel -1-.
- Remove air duct for centre vent ⇒ Heating, air conditioning system; Rep. gr. 80 ; Air duct; Removing and installing air duct for centre dash panel vent .
- Remove footwell vent on front passenger side ⇒ Heating, air conditioning; Rep. gr. 80 ; Air duct; Removing and installing footwell vent on front passenger side .

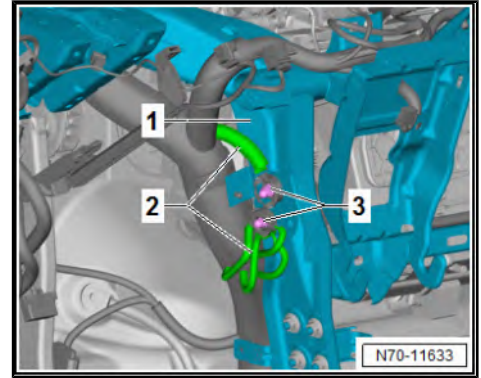



Vehicles with special vehicle control unit - J608-

- Release attachments -4- securing wiring harness.
- Lay aside wiring harnesses from central tube for dash panel -2-.
- Unscrew bolt -3-.
- Detach bracket for special vehicle control unit - J608- -1- with lines connected, and place it on floor covering.

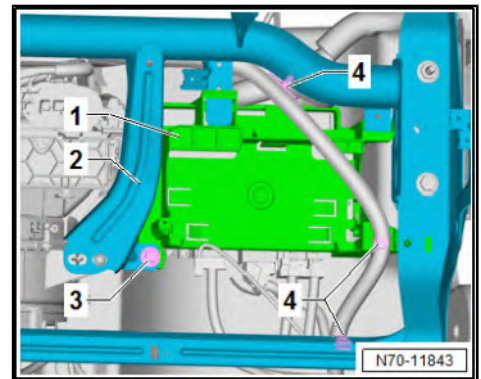


Continued for all vehicles

- Depending on equipment, unclip attachments -2- for wiring harness on left of central tube for dash panel -1-.
- Depending on equipment, unclip attachments -2- for wiring harness in centre of central tube for dash panel -1-.

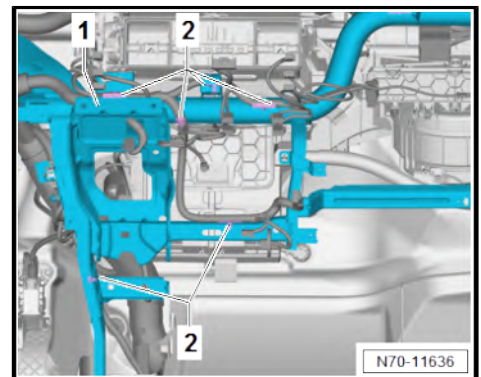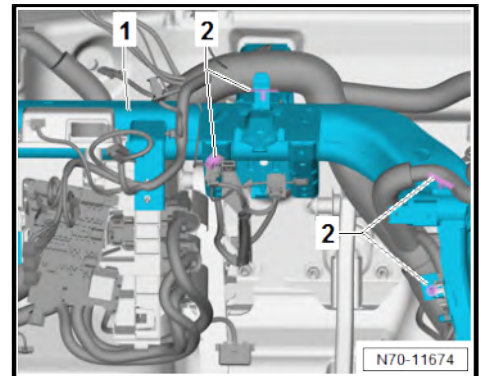




- Depending on equipment, unclip attachments -2- for wiring harness on right of central tube for dash panel -1-.
- Guide wiring harness completely over central tube for dash panel to move it clear.

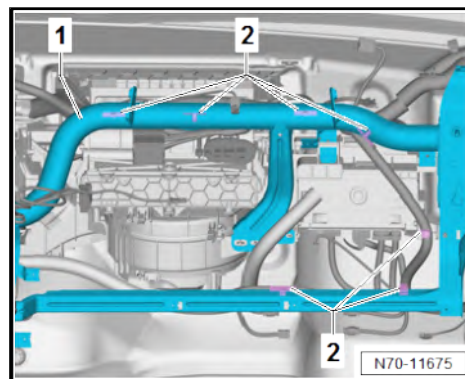

- Using suitable working means, secure heater and air conditioning unit -1- in front passenger footwell -arrows- to prevent possible sagging.

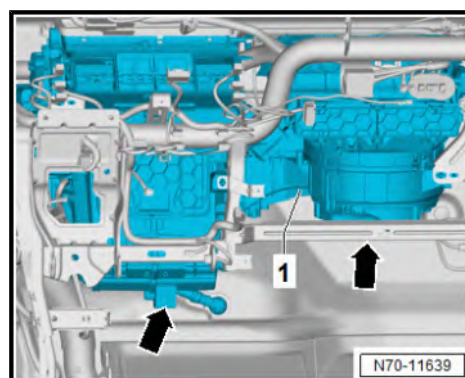


- Unscrew bolts -3- for heater and air conditioning unit -1- from central tube for dash panel -2-.



Note

Mark vertical and horizontal position on dash panel central tube for reinstallation.

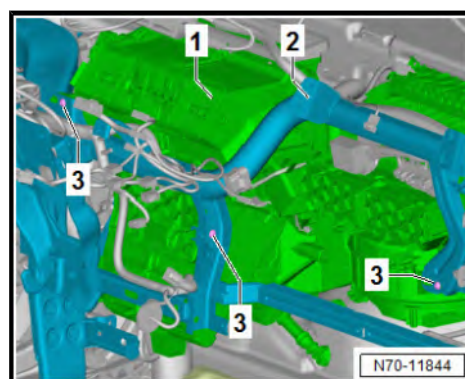


- Unscrew upper nuts -2- from central tube mounting brackets -1-.
- Use suitable means to protect body and surrounding components against damage.



Note

The following work steps are described for the right-hand side of the vehicle. Removal for the left side follows the same pattern.

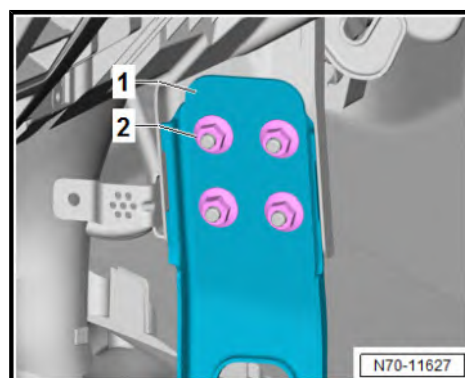




- Unscrew nut -3-.
- Unscrew studs -2-.
- Unscrew bolt -4- from central tube for dash panel -1-.
- Repeat loosening procedure on left-hand side of vehicle.

The help of a second mechanic is required for removal.



Note

Wear safety gloves to protect against potential injury from sharp components.

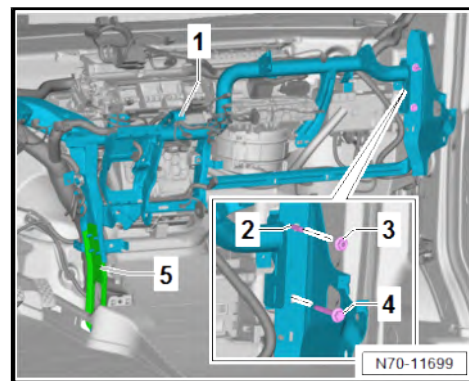

- Pull central tube for dash panel backwards slightly.
- Guide central tube for dash panel past central tube mounting bracket -5-.
- With the aid of a second mechanic, lift out central tube for dash panel. Keep wiring harnesses in mind when doing this.
- Place central tube for dash panel on a suitable surface.

Installing

Install in reverse order of removal, observing the following:



Note

- ◆ *Before bolting central tube for dash panel in place, align it using marks made during removal.*
- ◆ *Before installing, all securing elements and attachments must be checked for signs of wear and renewed as necessary.*
- ◆ *Route all of the various lines and electrical wiring in such a way that they are restored to their original positions and the wiring harnesses are not crushed.*

Specified torques

- ◆ [⇒ "4.1 Assembly overview - central tube for dash panel", page 216](#)
- ◆ Selector mechanism; Assembly overview - selector mechanism ⇒ Rep. gr. 34 ; Selector mechanism; Assembly overview - selector mechanism .
- ◆ Control units; Assembly overview - data bus diagnostic interface ⇒ Electrical system; Rep. gr. 97 ; Control units; Assembly overview - data bus diagnostic interface

4.2.2 Removing and installing central tube for dash panel, right-hand drive vehicles


Special tools and workshop equipment required



◆ Torque wrench - V.A.G 1331-



◆ Release lever - 80 - 200-

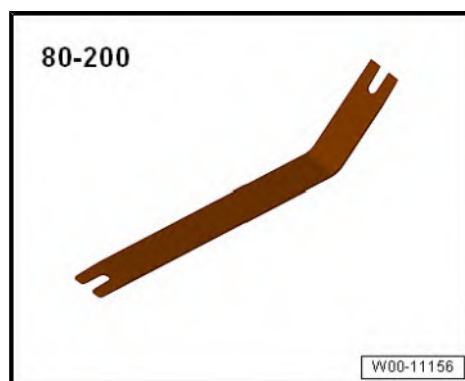

◆ Release tool - T10236-




Removing



- Remove windscreen wiper motor with linkage ⇒ Electrical system; Rep. gr. 92 ; Windscreen wiper system; Removing and installing wiper motor .
- Do not unscrew bolts and nuts with an impact driver. Unscrew them by hand.



- Unscrew bolt -1-.
- Remove dash panel ➤ [page 203](#) .
- Remove insulating mat above central tube for dash panel.
- Remove lower A-pillar trims ➤ [page 268](#) .
- If present, remove emergency call module control unit and communication unit - J949- ➤ Communication; Rep. gr. 91 ; Car-Net; Removing and installing emergency call module control unit and communication unit - J949- .
- Remove onboard supply control unit - J519- ➤ Electrical system; Rep. gr. 97 ; Control units; Removing and installing onboard supply control unit - J519- .
- Remove footwell vent on driver side ➤ Heating, air conditioning; Rep. gr. 80 ; Air duct; Removing and installing footwell vent on driver side .
- Remove steering column ➤ Running gear, axles, steering; Rep. gr. 48 ; Steering column; Removing and installing steering column .
- Remove centre console trim in front footwell ➤ [page 95](#) .
- Unscrew bolts -1-.
- Remove selector mechanism with cables -2-.

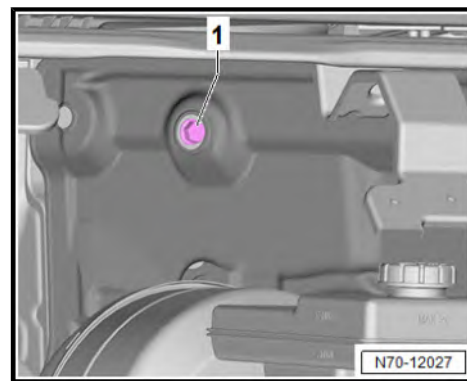


- Unscrew nuts -3-.
- Remove wiring harnesses -2-.
- Lay aside earth points from central tube for dash panel -1-.
- Remove air duct for centre vent ➤ Heating, air conditioning system; Rep. gr. 80 ; Air duct; Removing and installing air duct for centre dash panel vent .
- Remove footwell vent on front passenger side ➤ Heating, air conditioning; Rep. gr. 80 ; Air duct; Removing and installing footwell vent on front passenger side .

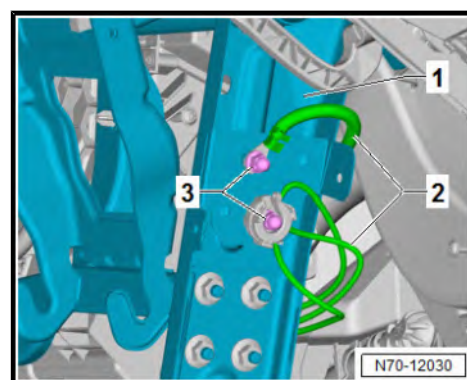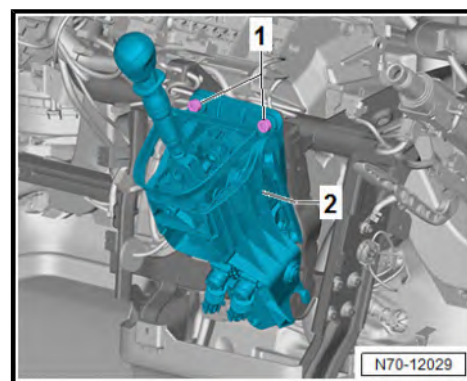

Vehicles with special vehicle control unit - J608-


- Separate electrical connectors -1-.
- Unscrew bolts -2-.
- Remove special vehicle control unit - J608- -3-.

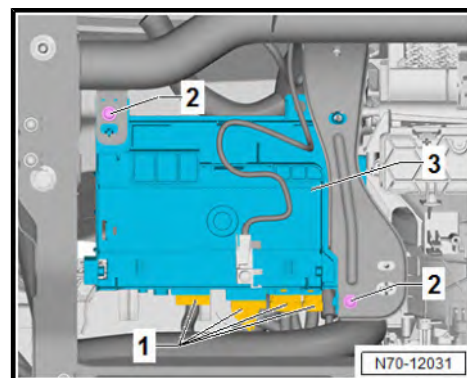




Continued for all vehicles


- Unclip fasteners -1- on wiring harness -2-.

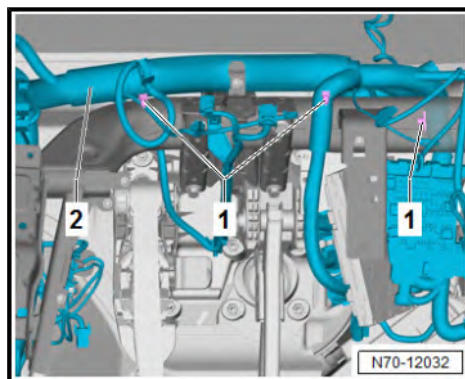


- Unclip fasteners -1- on wiring harness -2-.

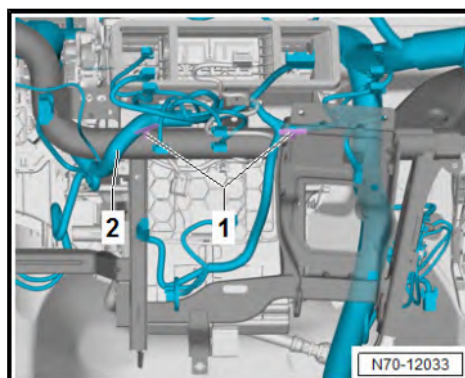

- Unclip fasteners -1- on wiring harness -2-.
- Lay wiring harness -2- aside.

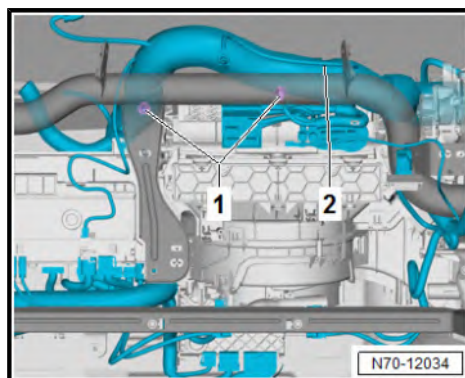


- Secure heater and air conditioning unit -1- in front passenger footwell to prevent possible sagging.

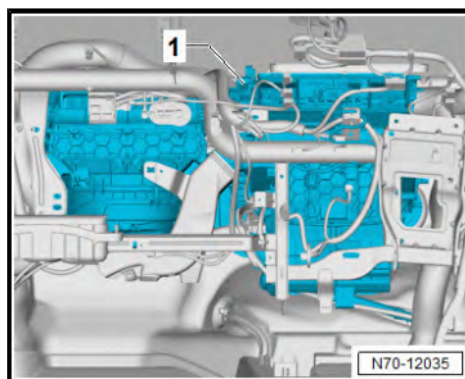




- Unscrew bolts -1-.
- Mark vertical and horizontal position on dash panel central tube for reinstallation.

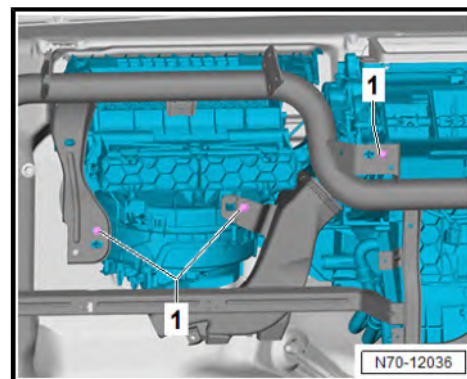

- Unscrew nuts -1-.
- Use suitable means to protect body and surrounding components against damage.

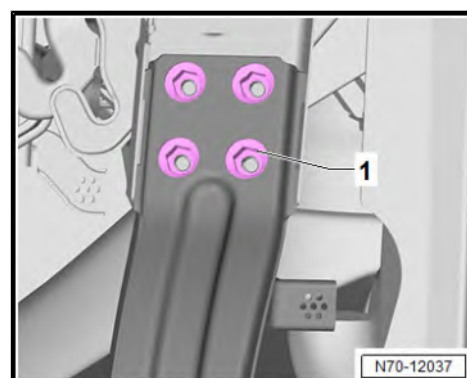


- Unscrew nut -3-.
- Unscrew studs -2-.
- Unscrew bolt -4-.
- Repeat release procedure on right-hand side of vehicle.



Note

Wear safety gloves to protect against potential injury from sharp components.

- Pull central tube for dash panel backwards slightly.
- Guide central tube for dash panel past central tube mounting bracket -5-.
- With the aid of a second mechanic, lift out central tube -1- for dash panel. Take note of wiring harnesses when doing so.
- Place central tube for dash panel on a suitable surface.

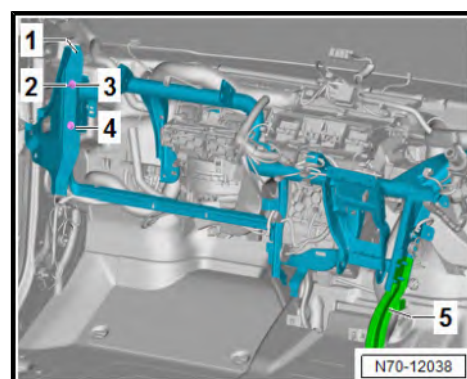

Installing

Install in reverse order of removal, observing the following:

Specified torques

- ◆ ➤ ["4.1 Assembly overview - central tube for dash panel", page 216](#)
- ◆ Selector mechanism; Assembly overview - selector mechanism ➤ Rep. gr. 34 ; Selector mechanism; Assembly overview - selector mechanism .
- ◆ Control units; Assembly overview - data bus diagnostic interface ➤ Electrical system; Rep. gr. 97 ; Control units; Assembly overview - data bus diagnostic interface



4.2.3 Removing and installing securing bracket, left-hand drive vehicles

Special tools and workshop equipment required

- ◆ Torque wrench - V.A.G 1331-



Removing


- Remove footwell cover ➔ [page 53](#) .



Note

Wear safety gloves to protect against potential injury from sharp components.

- Unscrew nuts -2-.
- Unscrew bolts -3-.
- Remove central tube mounting bracket -1-.

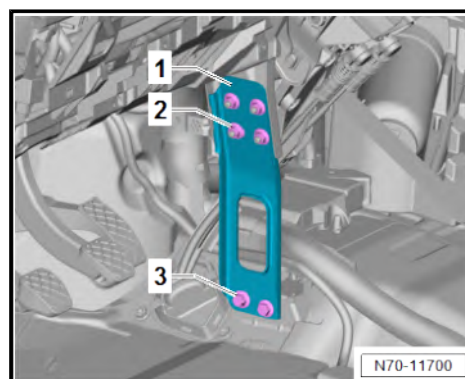

Installing

Install in reverse order of removal, observing the following:

Specified torques

- ◆ ➔ [“4.1 Assembly overview - central tube for dash panel”, page 216](#)

4.2.4 Removing and installing securing bracket, right-hand drive vehicles

Special tools and workshop equipment required

- ◆ Torque wrench - V.A.G 1331-





Removing


- Removing right floor covering in driver area ➤ [page 283](#)
- Remove footwell cover ➤ [page 53](#) .



Note

Wear safety gloves to protect against potential injury from sharp components.

- Unscrew nuts -2-.
- Unscrew bolts -3-.
- Remove central tube mounting bracket -1-.

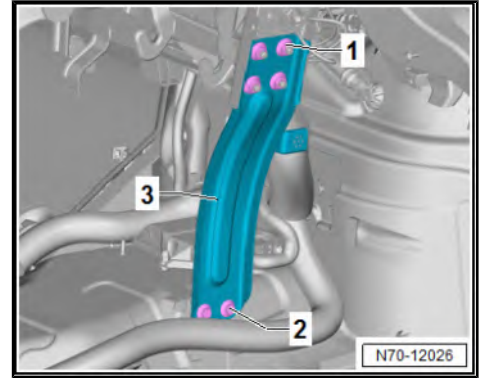

Installing

Install in reverse order of removal, observing the following:

Specified torques

- ◆ ➤ ["4.1 Assembly overview - central tube for dash panel", page 216](#)





5 Interior trims

- ⇒ [“5.1 Overview of fitting locations - interior trims”, page 231](#)
- ⇒ [“5.2 Assembly overview - step”, page 241](#)
- ⇒ [“5.3 Assembly overview - A-pillar trim”, page 244](#)
- ⇒ [“5.4 Assembly overview - B-pillar trim”, page 246](#)
- ⇒ [“5.5 Assembly overview - C-pillar trim”, page 248](#)
- ⇒ [“5.6 Assembly overview - side trim”, page 250](#)
- ⇒ [“5.7 Assembly overview - foot rest and floor covering”, page 260](#)
- ⇒ [“5.8 Removing and installing step”, page 264](#)
- ⇒ [“5.9 Removing and installing A-pillar trim”, page 268](#)
- ⇒ [“5.10 Removing and installing A-pillar gap cover”, page 269](#)
- ⇒ [“5.11 Removing and installing B-pillar trim”, page 270](#)
- ⇒ [“5.12 Removing and installing C-pillar trim”, page 277](#)
- ⇒ [“5.13 Removing and installing side trim”, page 279](#)
- ⇒ [“5.14 Removing and installing foot rest”, page 282](#)
- ⇒ [“5.15 Removing and installing floor covering”, page 283](#)
- ⇒ [“5.16 Removing and installing loudspeaker trim”, page 288](#)
- ⇒ [“5.17 Removing and installing cap”, page 289](#)
- ⇒ [“5.18 Removing and installing vents”, page 292](#)
- ⇒ [“5.19 Removing and installing partition panel trim”, page 293](#)
- ⇒ [“5.20 Removing and installing retaining strip”, page 294](#)
- ⇒ [“5.21 Removing and installing fastening rings”, page 295](#)
- ⇒ [“5.22 Removing and installing lock carrier trim”, page 297](#)
- ⇒ [“5.23 Removing and installing wheel housing lining”, page 298](#)
- ⇒ [“5.24 Removing and installing gap cover”, page 299](#)

5.1 Overview of fitting locations - interior trims

- ⇒ [“5.1.1 Overview of fitting locations - interior trims, driver area”, page 231](#)
- ⇒ [“5.1.2 Overview of fitting locations - interior trims, floor covering, driver area”, page 233](#)
- ⇒ [“5.1.3 Overview of fitting locations - interior trims, load compartment side panel \(PR number K4A panel van\)”, page 234](#)
- ⇒ [“5.1.4 Overview of fitting locations - interior trims, passenger compartment side panel \(PR number K4B Kombi\)”, page 236](#)
- ⇒ [“5.1.5 Overview of fitting locations - interior trims, load compartment floor covering \(PR number K4A panel van\)”, page 238](#)
- ⇒ [“5.1.6 Overview of fitting locations - interior trims, passenger compartment floor covering \(PR number K4B Kombi\)”, page 239](#)

5.1.1 Overview of fitting locations - interior trims, driver area



Note

The description is for vehicles with a high roof and partition panel. Adapt accordingly for vehicles with a different roof shape or without partition panel.

1 - B-pillar trim

- ☐ Assembly overview
⇒ [page 246](#)
- ☐ Removing and installing
⇒ [page 270](#)

2 - A-pillar trim

- ☐ Top
- ☐ Assembly overview
⇒ [page 244](#)
- ☐ Removing and installing
⇒ [page 268](#)

3 - A-pillar gap cover

- ☐ Assembly overview
⇒ [page 244](#)
- ☐ Removing and installing
⇒ [page 269](#)

4 - A-pillar trim

- ☐ Bottom
- ☐ Assembly overview
⇒ [page 244](#)
- ☐ Removing and installing
⇒ [page 268](#)

5 - Step cover

- ☐ Assembly overview
⇒ [page 241](#)
- ☐ Removing and installing
⇒ [page 264](#)

6 - Step

- ☐ Left
- ☐ Assembly overview
⇒ [page 241](#)
- ☐ Removing and installing
⇒ [page 264](#)

7 - B-pillar trim


- ☐ Bottom
- ☐ Assembly overview ⇒ [page 246](#)
- ☐ Removing and installing ⇒ [page 270](#)

8 - Step

- ☐ Right
- ☐ Assembly overview ⇒ [page 241](#)
- ☐ Removing and installing ⇒ [page 264](#)

9 - Partition panel trim

- ☐ Bottom
- ☐ Removing and installing ⇒ [page 293](#)

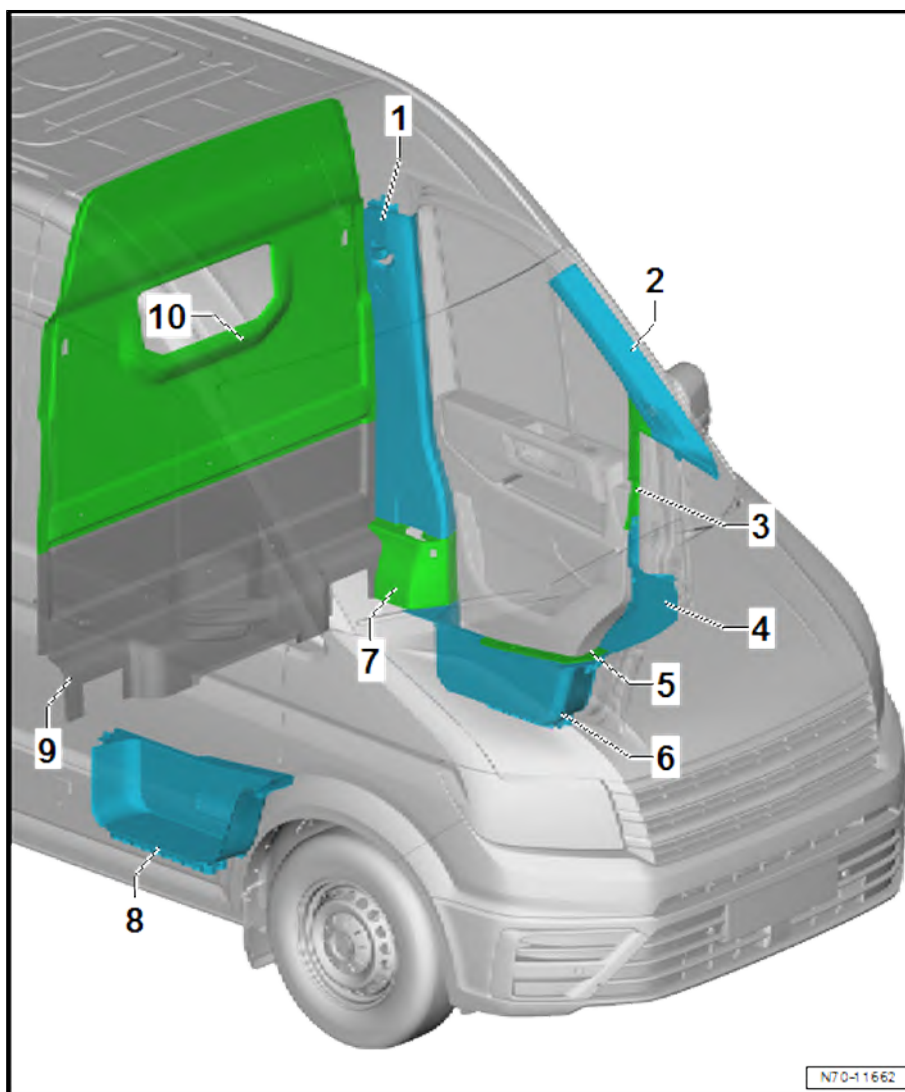

N70-11662



10 - Partition panel trim

- ☐ Top
- ☐ Removing and installing ⇒ [page 293](#)

5.1.2 Overview of fitting locations - interior trims, floor covering, driver area

1 - Floor covering in driver area


- ☐ Left
- ☐ Assembly overview
⇒ [page 260](#)
- ☐ Removing and installing
⇒ [page 283](#)

2 - Floor covering in driver area

- ☐ Right
- ☐ Assembly overview
⇒ [page 260](#)
- ☐ Removing and installing
⇒ [page 283](#)

3 - Floor covering in double cab

- ☐ Rear
- ☐ Removing and installing
⇒ [page 283](#)

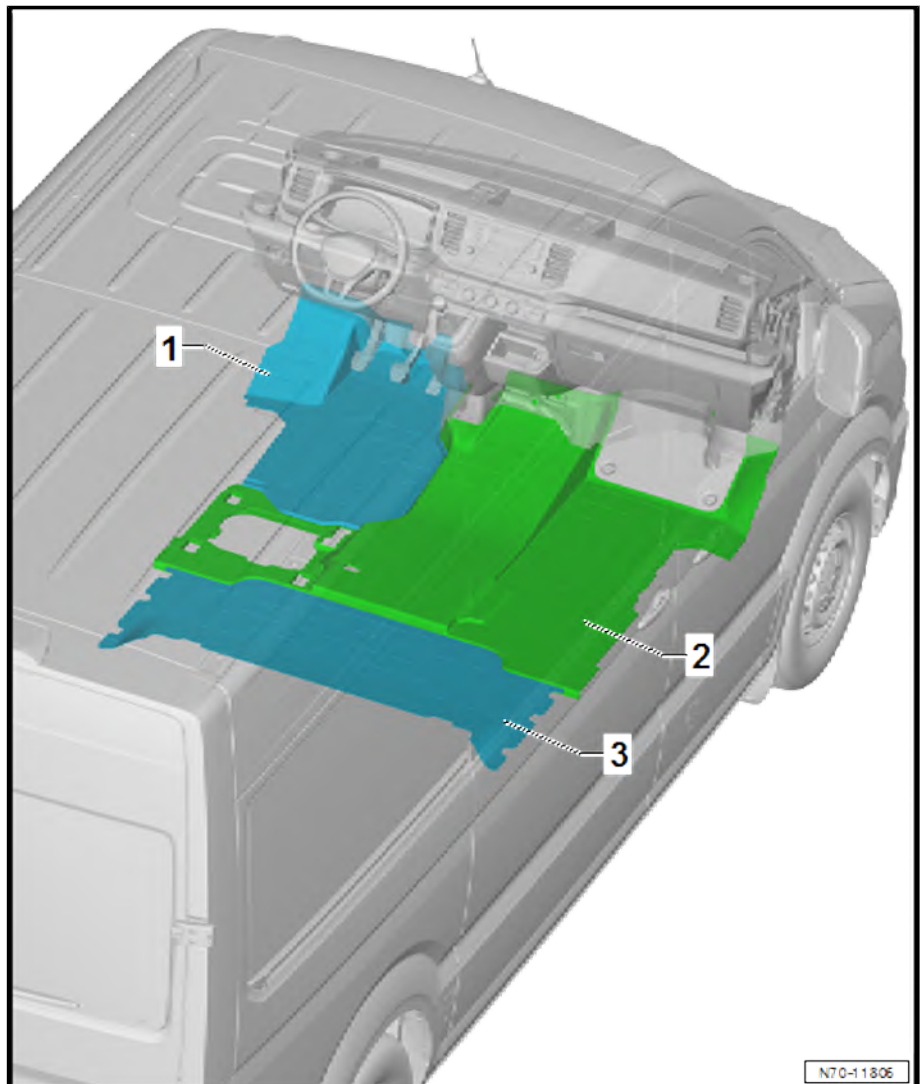

N70-11806

5.1.3 Overview of fitting locations - interior trims, load compartment side panel (PR number K4A panel van)



Note

- ◆ Although there are various other versions, only on equipment version is shown. Any other versions are similar.
- ◆ Assembly procedure applies to right-hand side of vehicle. The left side is analogous.
- ◆ The description is for vehicles with a short wheelbase. Adapt accordingly for vehicles with a different wheelbase.

1 - Sliding door trims

- ☐ Qty. 4
- ☐ Assembly overview
⇒ [page 187](#)
- ☐ Removing and installing
⇒ [page 192](#)

2 - Side trims

- ☐ Qty. 3
- ☐ Assembly overview
⇒ [page 250](#)
- ☐ Removing and installing
⇒ [page 279](#)

3 - Retaining plates

- ☐ Qty. 10
- ☐ Removing and installing
⇒ [page 86](#)

4 - Caps

- ☐ Qty. 3
- ☐ Depending on equipment
- ☐ Removing and installing
⇒ [page 289](#)

5 - Load compartment grab handle

- ☐ Assembly overview
⇒ [page 58](#)
- ☐ Removing and installing
⇒ [page 73](#)

6 - Wing door trims


- ☐ Qty. 3
- ☐ Assembly overview
⇒ [page 187](#)
- ☐ Removing and installing ⇒ [page 192](#)

7 - Cover

- ☐ For interior light switch - E317-
- ☐ Removing and installing ⇒ [page 289](#)

8 - Wing door trim panels

- ☐ Qty. 2
- ☐ Removing and installing ⇒ [page 190](#)

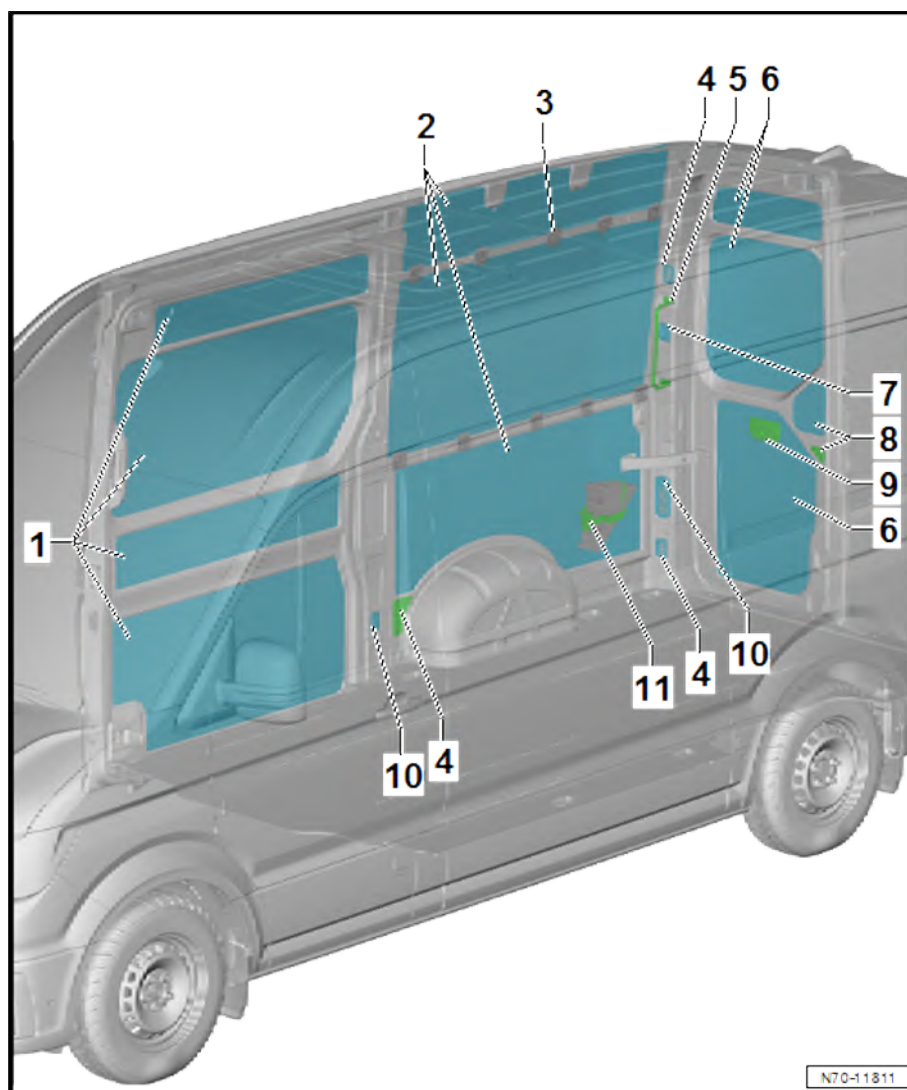



9 - Wing door trim panel

- ☐ For interior door handle
- ☐ Removing and installing ⇒ [page 190](#)

10 - Cover

- ☐ Depending on equipment
- ☐ With 12-V socket 4 - U20-
- ☐ With 12-V socket 5 - U26-
- ☐ With 12-V socket 6 - U33-
- ☐ Removing and installing ⇒ [page 289](#)

11 - Bracket

- ☐ For chock
- ☐ Removing and installing ⇒ [page 90](#)

5.1.4 Overview of fitting locations - interior trims, passenger compartment side panel (PR number K4B Kombi)



Note

- ◆ Although there are various other versions, only one equipment version is shown. Any other versions are similar.
- ◆ Assembly procedure applies to right-hand side of vehicle. The left side is analogous.
- ◆ The description is for vehicles with a short wheelbase. Adapt accordingly for vehicles with a different wheelbase.

1 - Sliding door trim

- ☐ Qty. 3
- ☐ Assembly overview
⇒ [page 187](#)
- ☐ Removing and installing
⇒ [page 192](#)

2 - Window frame gap cover

- ☐ Qty. 2
- ☐ Removing and installing
⇒ [page 299](#)

3 - C-pillar trim

- ☐ Assembly overview
⇒ [page 248](#)
- ☐ Removing and installing
⇒ [page 277](#)

4 - Gap cover of side panel

- ☐ Qty. 6
- ☐ Removing and installing
⇒ [page 299](#)

5 - Gap cover of side panel

- ☐ Removing and installing
⇒ [page 299](#)

6 - Cover

- ☐ Removing and installing
⇒ [page 289](#)

7 - Load compartment grab handle


- ☐ Assembly overview
⇒ [page 58](#)
- ☐ Removing and installing
⇒ [page 73](#)

8 - Wing door trim

- ☐ Qty. 2
- ☐ Assembly overview ⇒ [page 187](#)
- ☐ Removing and installing ⇒ [page 192](#)

9 - Cover

- ☐ For interior light switch - E317-
- ☐ Removing and installing ⇒ [page 289](#)

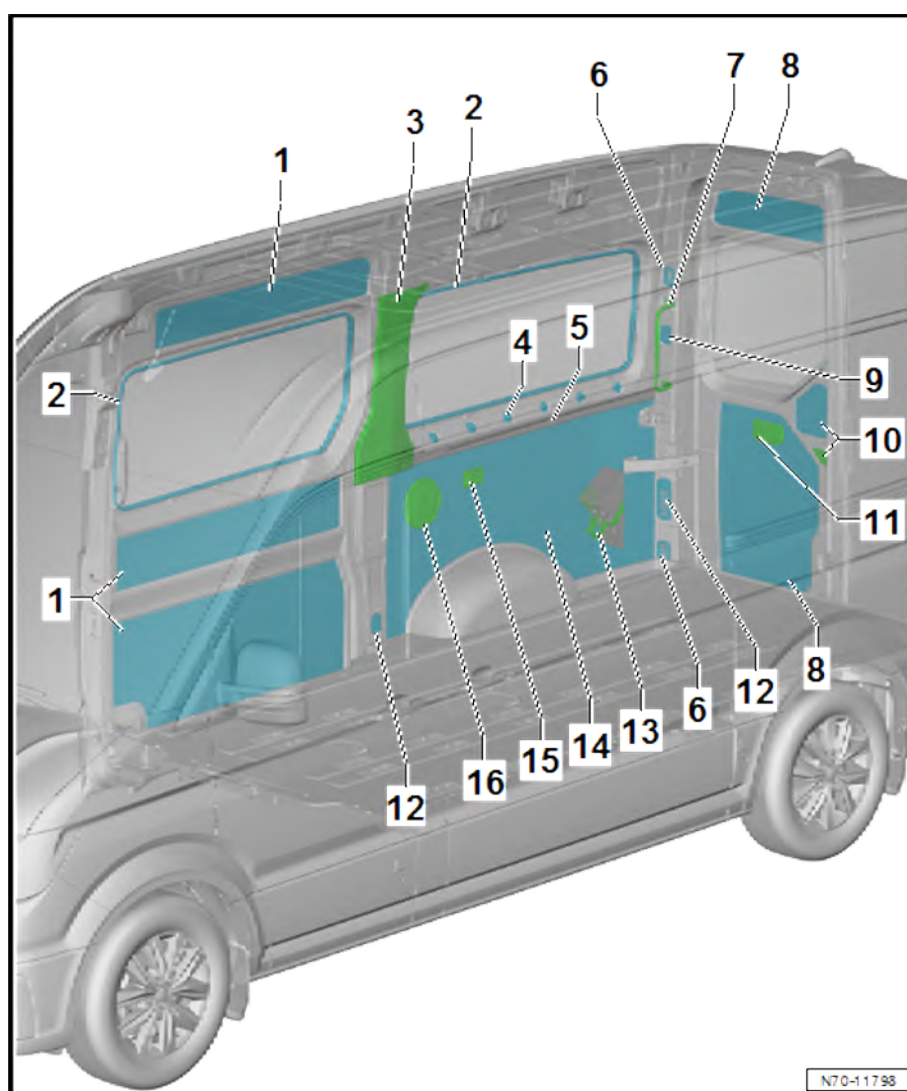



10 - Wing door trim panels

- ☐ Qty. 2
- ☐ Removing and installing ⇒ [page 190](#)

11 - Wing door trim panel

- ☐ For interior door handle
- ☐ Removing and installing ⇒ [page 190](#)

12 - Cover

- ☐ Depending on equipment
- ☐ With 12-V socket 4 - U20-
- ☐ With 12-V socket 5 - U26-
- ☐ With 12-V socket 6 - U33-
- ☐ Removing and installing ⇒ [page 289](#)

13 - Bracket

- ☐ For chock
- ☐ Removing and installing ⇒ [page 90](#)

14 - Side trim

- ☐ Assembly overview ⇒ [page 250](#)
- ☐ Removing and installing ⇒ [page 279](#)

15 - Ashtray

- ☐ Removing and installing ⇒ [page 289](#)

16 - Loudspeaker trim

- ☐ Removing and installing ⇒ [page 288](#)



5.1.5 Overview of fitting locations - interior trims, load compartment floor covering (PR number K4A panel van)



Note

- ◆ Although there are various other versions, only one equipment version is shown. Any other versions are similar.
- ◆ The description is for vehicles with a short wheelbase. Adapt accordingly for vehicles with a different wheelbase.

1 - Floor covering

- ☐ Centre
- ☐ Assembly overview
⇒ [page 260](#)
- ☐ Removing and installing
⇒ [page 283](#)

2 - Fastening rings

- ☐ Qty. 9
- ☐ Assembly overview
⇒ [page 260](#)
- ☐ Removing and installing
⇒ [page 295](#)

3 - Floor covering

- ☐ Front
- ☐ Assembly overview
⇒ [page 260](#)
- ☐ Removing and installing
⇒ [page 283](#)

4 - Sliding door step

- ☐ Assembly overview
⇒ [page 241](#)
- ☐ Removing and installing
⇒ [page 264](#)

5 - Wheel housing lining

- ☐ Removing and installing
⇒ [page 298](#)

6 - Retaining strip


- ☐ Assembly overview
⇒ [page 260](#)
- ☐ Removing and installing
⇒ [page 294](#)

7 - Lock carrier trim

- ☐ Assembly overview ⇒ [page 260](#)
- ☐ Removing and installing ⇒ [page 297](#)

8 - Floor covering

- ☐ Rear
- ☐ Assembly overview ⇒ [page 260](#)
- ☐ Removing and installing ⇒ [page 283](#)

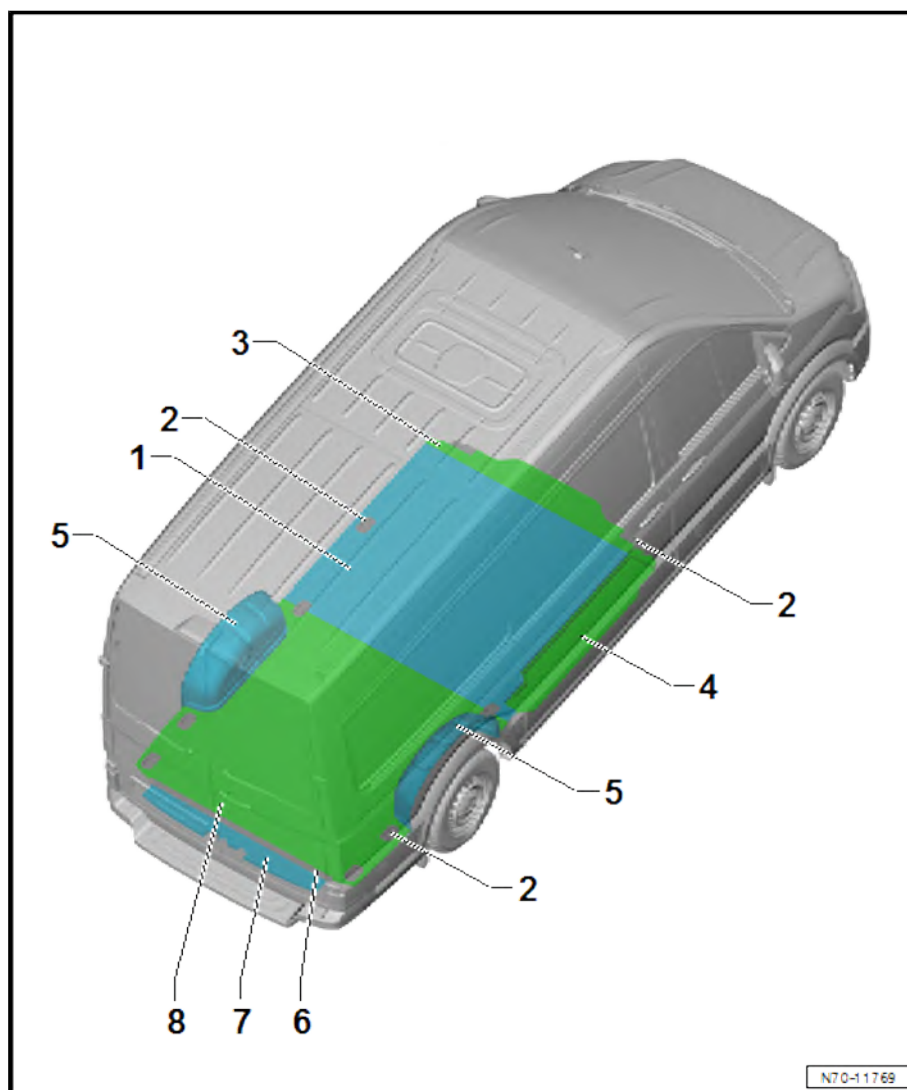

5.1.6 Overview of fitting locations - interior trims, passenger compartment floor covering (PR number K4B Kombi)



Note

- ◆ As there are so many different versions, only one equipment version is shown. The procedure follows the same pattern for the other versions.
- ◆ The description is for vehicles with a short wheelbase. Adapt accordingly for vehicles with a different wheelbase.

1 - Floor covering

- ☐ Assembly overview
⇒ [page 260](#)
- ☐ Removing and installing
⇒ [page 283](#)

2 - Trim

- ☐ For sliding door step
- ☐ Assembly overview
⇒ [page 241](#)
- ☐ Removing and installing
⇒ [page 264](#)

3 - Step

- ☐ For sliding door
- ☐ Assembly overview
⇒ [page 241](#)
- ☐ Removing and installing
⇒ [page 264](#)

4 - Vent

- ☐ Vehicles with second heater unit in driver area
- ☐ Vehicles with auxiliary air heater
- ☐ Assembly overview
⇒ [page 260](#)
- ☐ Removing and installing
⇒ [page 292](#)

5 - Seat rails


- ☐ Assembly overview
⇒ [page 67](#)
- ☐ Removing and installing
⇒ [page 87](#)

6 - Vent

- ☐ For footwell floor
- ☐ Vehicles with second heater unit in driver area
- ☐ Vehicles with auxiliary air heater
- ☐ Removing and installing ⇒ Heating, air conditioning; Rep. gr. 80 ; Air duct; Removing and installing air ducts; Removing and installing floor vents in passenger compartment

7 - Trim

- ☐ For lock carrier
- ☐ Assembly overview ⇒ [page 260](#)
- ☐ Removing and installing ⇒ [page 297](#)

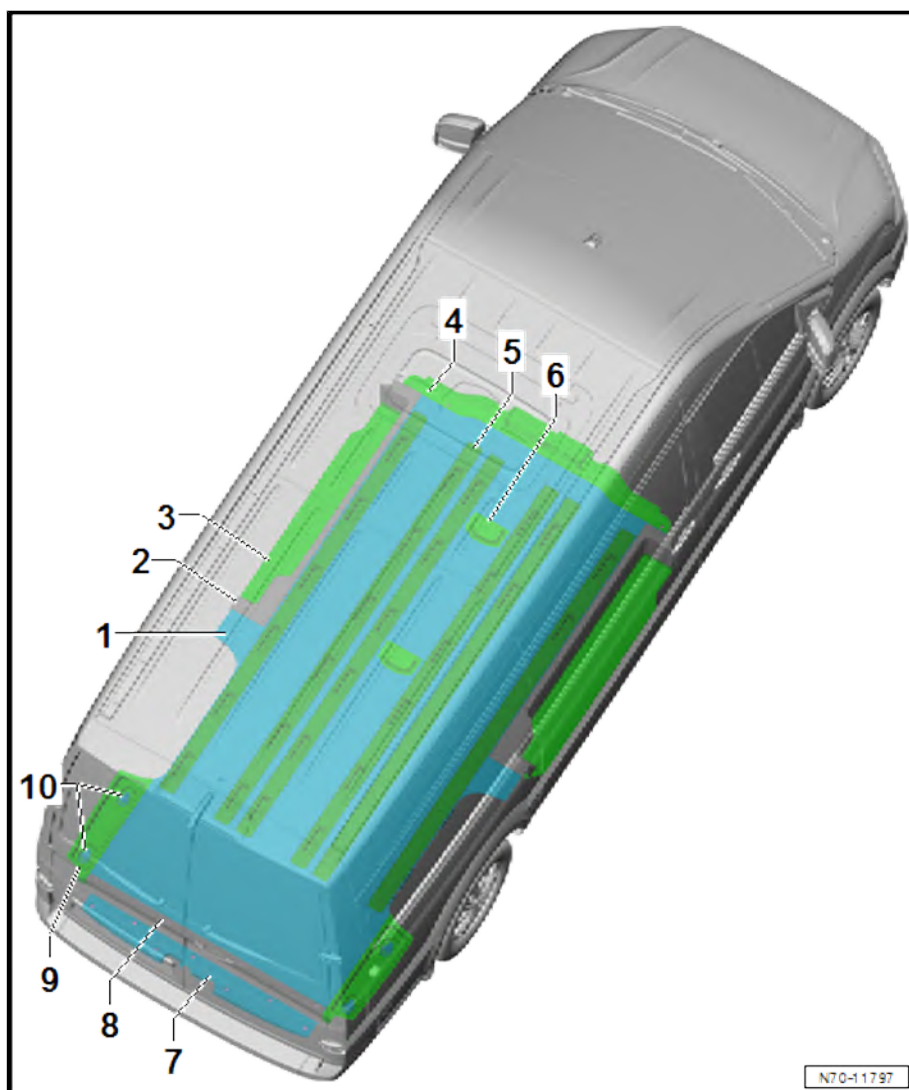



8 - Retaining strip

- ☐ Assembly overview ➔ [page 260](#)
- ☐ Removing and installing ➔ [page 294](#)

9 - Storage compartment

- ☐ For fastening rings
- ☐ Assembly overview ➔ [page 260](#)
- ☐ Removing and installing ➔ [page 295](#)

10 - Fastening rings

- ☐ Assembly overview ➔ [page 260](#)
- ☐ Removing and installing ➔ [page 295](#)



5.2 Assembly overview - step

⇒ ["5.2.1 Assembly overview - front step", page 241](#)

⇒ ["5.2.2 Assembly overview - rear step \(PR no. K4G double cab\)", page 242](#)

⇒ ["5.2.3 Assembly overview - rear step, sliding door \(PR no. K4A panel van\)", page 243](#)

5.2.1 Assembly overview - front step



Note

The assembly overview is shown for the left side of the vehicle. The right side is analogous.

1 - Step cover

- ☐ Only left side of vehicle
- ☐ Removing and installing
⇒ [page 264](#)

2 - Bolts

- ☐ Qty. 3
- ☐ 1.5 Nm

3 - Step


- ☐ Removing and installing
⇒ [page 264](#)

4 - Clip

- ☐ Qty. 7
- ☐ Renew any damaged or deformed clips.

5 - Grommets

- ☐ Qty. 7
- ☐ Renew any damaged or deformed grommets

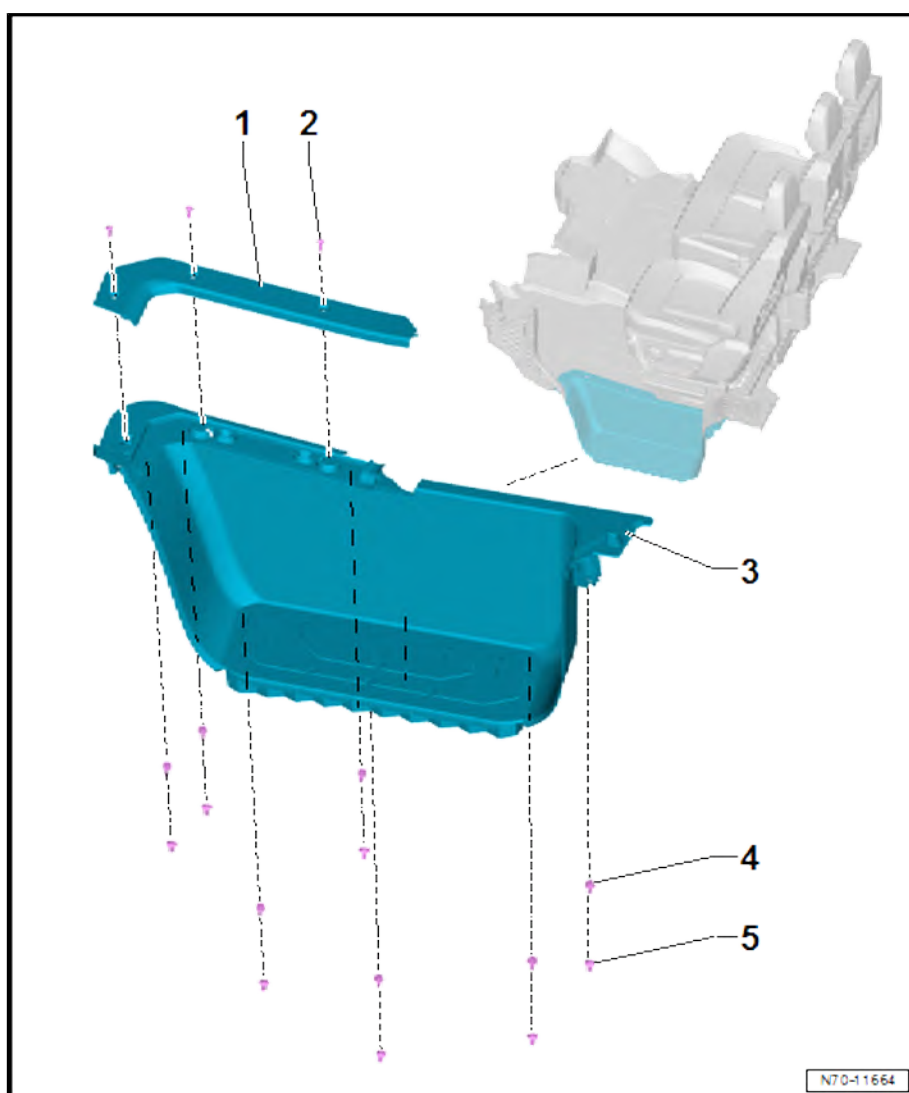



5.2.2 Assembly overview - rear step (PR no. K4G double cab)

1 - Step


- ❑ Removing and installing
⇒ [page 264](#)

2 - Clip

- ❑ Qty. 7
- ❑ Renew any damaged or deformed clips.

3 - Grommets

- ❑ Qty. 7
- ❑ Renew any damaged or deformed grommets

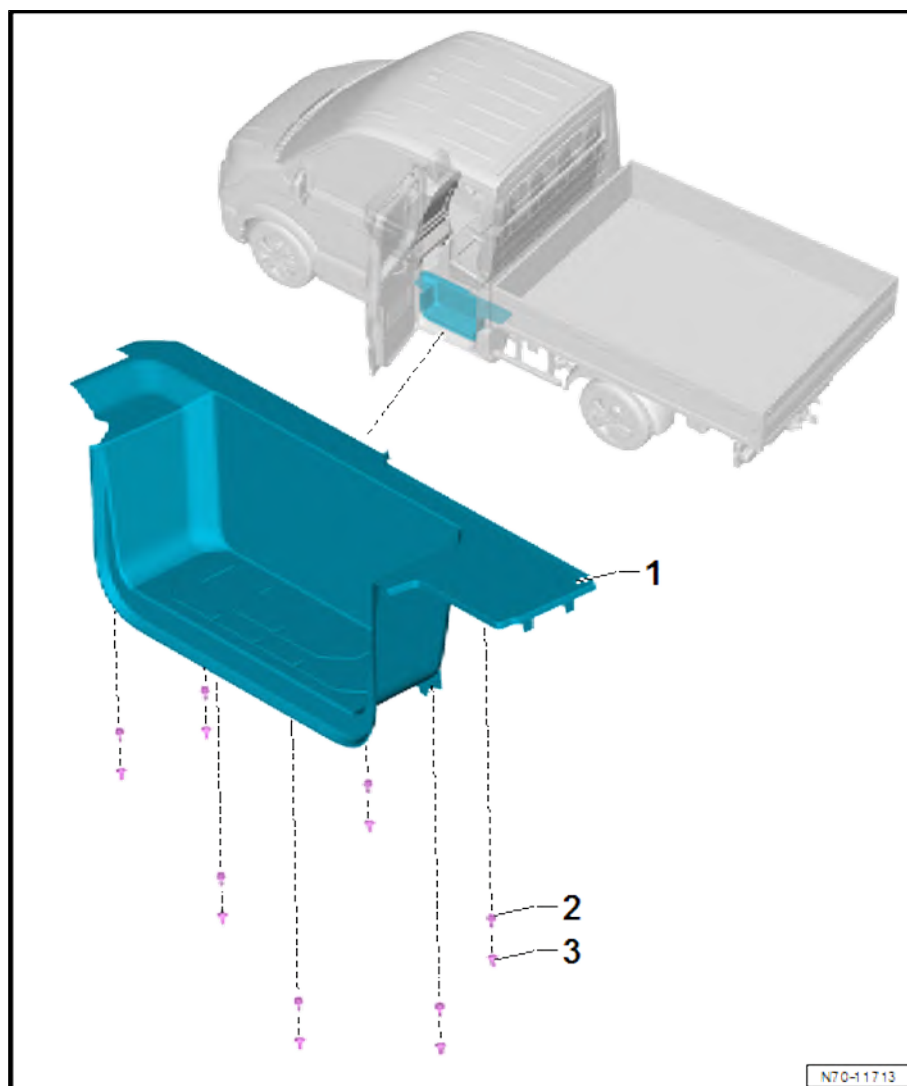



5.2.3 Assembly overview - rear step, sliding door (PR no. K4A panel van)



Note

The assembly overview is illustrated for the right side of the vehicle. The left side is analogous.

1 - Step

- ☐ Depending on equipment

◆ 2 sliding doors: qty 2

- ☐ Removing and installing
⇒ [page 264](#)

2 - Bolts

- ☐ Qty. 2
- ☐ 1.5 Nm

3 - Step cover


- ☐ Only vehicles with high floor
- ☐ Removing and installing
⇒ [page 264](#)

4 - Bolts

- ☐ Qty. 6
- ☐ 8 Nm

5 - Caps

- ☐ Qty. 6

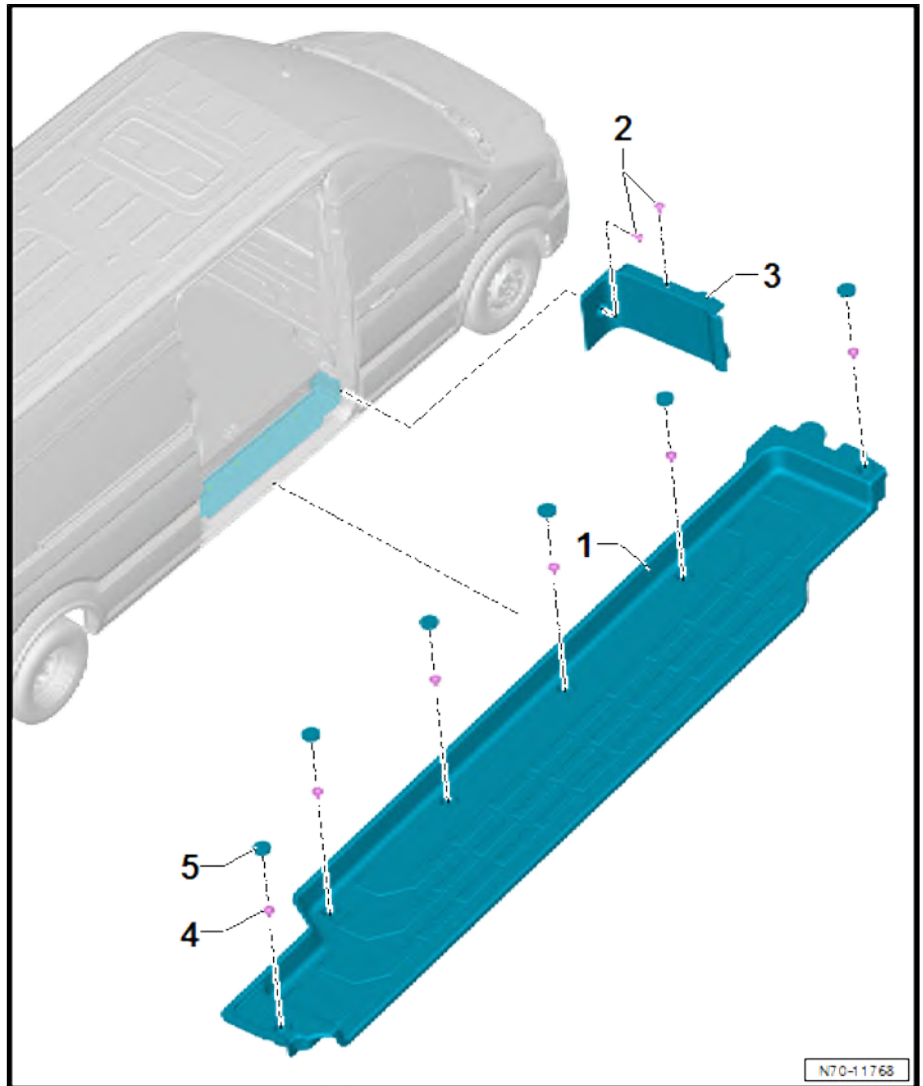



5.3 Assembly overview - A-pillar trim

⇒ [“5.3.1 Assembly overview - top A-pillar trim”, page 244](#)

⇒ [“5.3.2 Assembly overview - bottom A-pillar trim”, page 245](#)

5.3.1 Assembly overview - top A-pillar trim

1 - A-pillar trim


- ☐ Top
- ☐ Removing and installing
⇒ [page 268](#)

2 - Handle

- ☐ Depending on equipment
- ☐ Assembly overview
⇒ [page 58](#)
- ☐ Removing and installing
⇒ [page 73](#)

3 - Retaining clips

- ☐ Qty. 3
- ☐ Renew any damaged or deformed retaining clips.

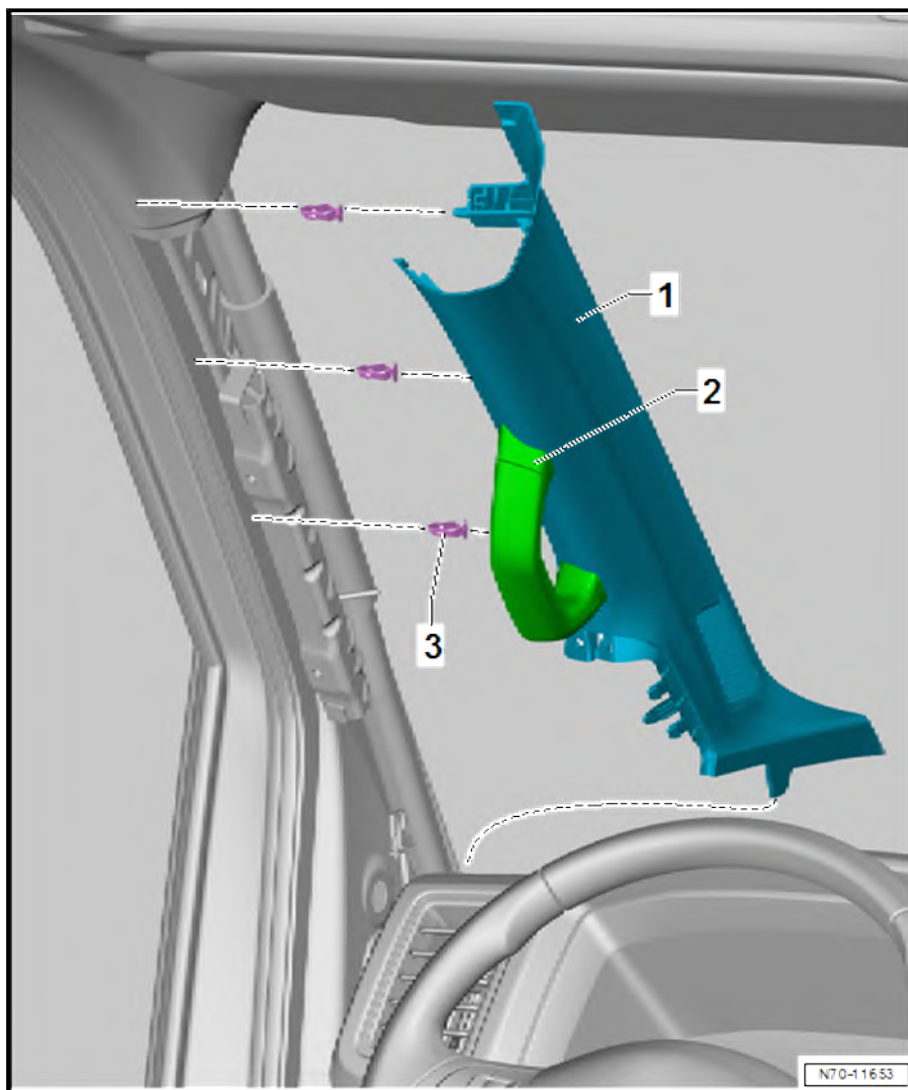



5.3.2 Assembly overview - bottom A-pillar trim



Note

The assembly overview is shown for the left side of the vehicle. The right side is analogous.

1 - A-pillar trim

- ☐ Bottom
- ☐ Removing and installing
⇒ [page 268](#)

2 - Bonnet operating lever


- ☐ Driver side
- ☐ Removing and installing
⇒ General body repairs,
exterior; Rep. gr. 55 ;
Bonnet; Removing and
installing bonnet re-
lease lever

3 - Retaining clips

- ☐ Qty. 2
- ☐ Renew any damaged or
deformed retaining
clips.

4 - A-pillar gap cover

- ☐ Removing and installing
⇒ [page 269](#)

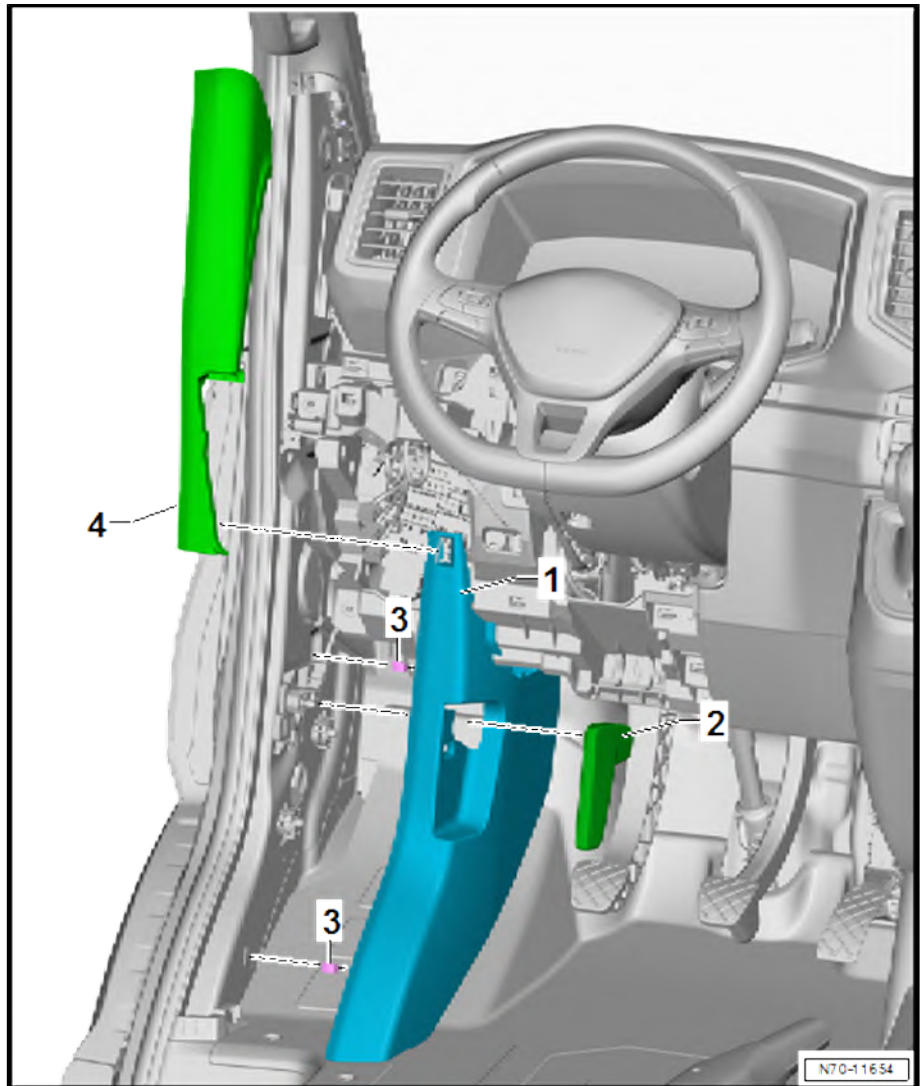

5.4 Assembly overview - B-pillar trim

⇒ "5.4.1 Assembly overview - B-pillar trim, PR no. K4A (panel van), K4B (Kombi), K4G (double cab)", page 246

⇒ "5.4.2 Assembly overview - B-pillar trim, PR no. K4F (single cab)", page 247

5.4.1 Assembly overview - B-pillar trim, PR no. K4A (panel van), K4B (Kombi), K4G (double cab)



Note

- ◆ The assembly overview is shown for the left side of the vehicle. The right side is analogous.
- ◆ The description is for vehicles with a partition panel. Adapt accordingly for vehicles without a partition panel.

1 - B-pillar trim

- ☐ Top
- ☐ Removing and installing
⇒ [page 270](#)

2 - Bolt

- ☐ 4 Nm

3 - Cover

- ☐ Depending on equipment

4 - Cap

- ☐ For belt bolted attachment

5 - Cover

- ☐ Depending on equipment
- ☐ With interior monitoring switch - E183-
- ☐ Removing and installing
⇒ Electrical system;
Rep. gr. 96 ; Controls;
Removing and installing
interior monitoring
switch - E183-

6 - B-pillar trim

- ☐ Bottom
- ☐ Removing and installing
⇒ [page 270](#)

7 - Retaining clips


- ☐ Qty. 3
- ☐ Renew any damaged or deformed retaining clips.

8 - Bracket

- ☐ Removing and installing ⇒ [page 270](#)

9 - Bolt

- ☐ 5 Nm

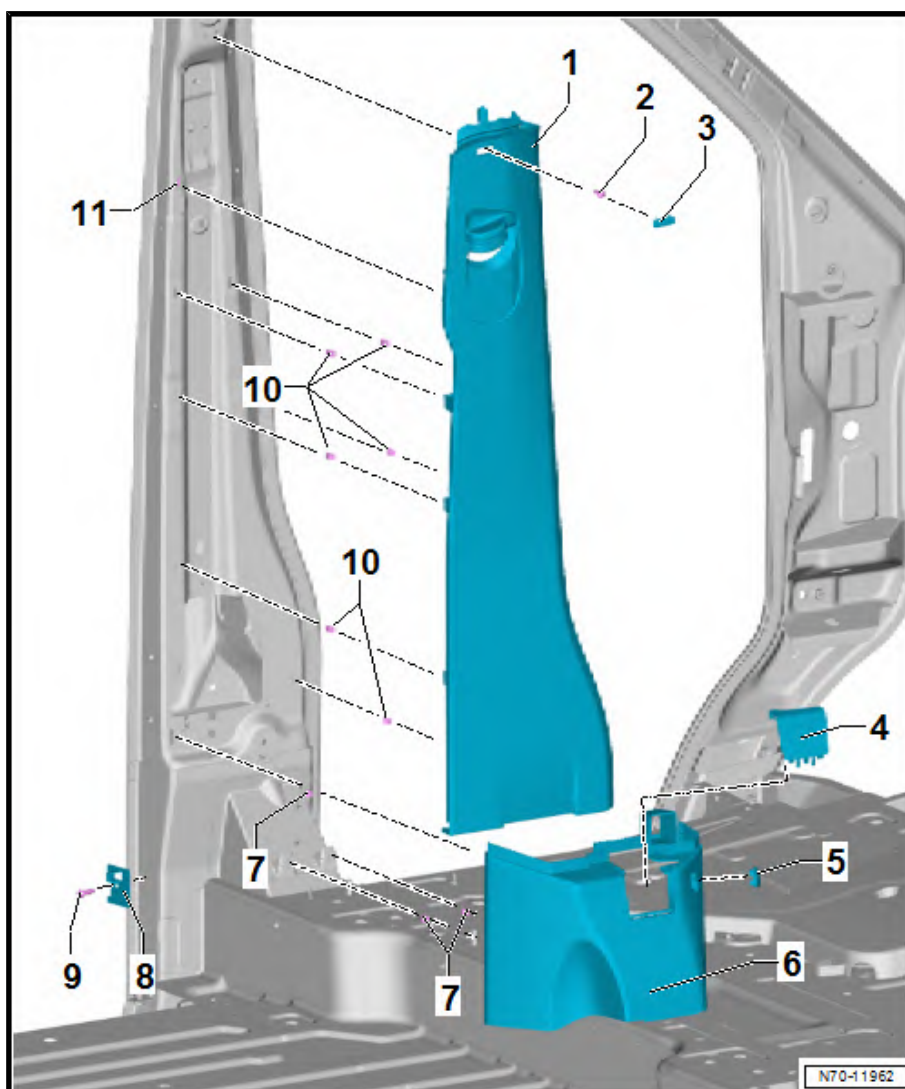



10 - Retaining clips

- ☐ Qty. 6
- ☐ Renew any damaged or deformed retaining clips.

11 - Securing clip

- ☐ Only on vehicles with partition panel
- ☐ Renew retaining clip if it is damaged or deformed

5.4.2 Assembly overview - B-pillar trim, PR no. K4F (single cab)



Note

The assembly overview is shown for the left side of the vehicle. The right side is analogous.

1 - B-pillar trim

- ☐ Centre
- ☐ Removing and installing
⇒ [page 270](#)

2 - Cover

- ☐ Depending on equipment
- ☐ With "airbag" symbol.

3 - Bolt

- ☐ 4 Nm

4 - B-pillar trim

- ☐ Top
- ☐ Removing and installing
⇒ [page 270](#)

5 - Tether clip

- ☐ Renew any damaged or deformed retaining clips.

6 - Retaining clips


- ☐ Qty. 8
- ☐ Renew any damaged or deformed retaining clips.

7 - Cover

- ☐ Depending on equipment
- ☐ With interior monitoring switch - E183-
- ☐ Removing and installing
⇒ Electrical system;
Rep. gr. 96 ; Controls;
Removing and installing
interior monitoring switch - E183-

8 - Retaining clips

- ☐ Qty. 3
- ☐ Renew any damaged or deformed retaining clips.

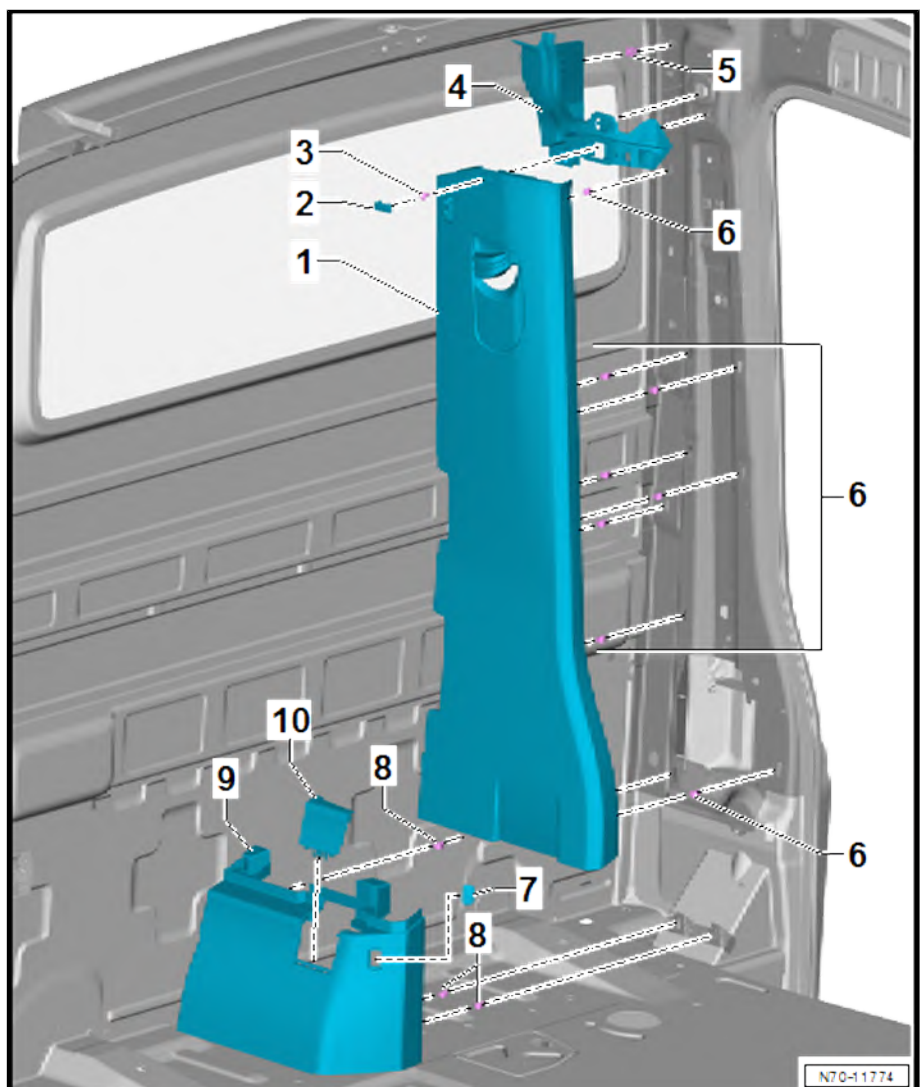



9 - B-pillar trim

- ☐ Bottom
- ☐ Removing and installing ⇒ [page 270](#)

10 - Cap

- ☐ For belt bolted attachment
- ☐ Removing and installing ⇒ [page 130](#)

5.5 Assembly overview - C-pillar trim

⇒ [“5.5.1 Assembly overview - C-pillar trim, on side of vehicle without sliding door”, page 248](#)

⇒ [“5.5.2 Assembly overview - C-pillar trim, on side of vehicle with sliding door”, page 249](#)

5.5.1 Assembly overview - C-pillar trim, on side of vehicle without sliding door



Note

The assembly overview is shown for the left side of the vehicle. The right side is analogous.

1 - C-pillar trim

- ☐ Removing and installing
⇒ [page 277](#)

2 - Adhesive strips


- ☐ Renew after removal
- ☐ Qty. 2

3 - Felt strip

- ☐ Renew damaged felt strips
- ☐ Qty. 2

4 - Clip

- ☐ Qty. 6
- ☐ Renew any damaged or deformed clips.

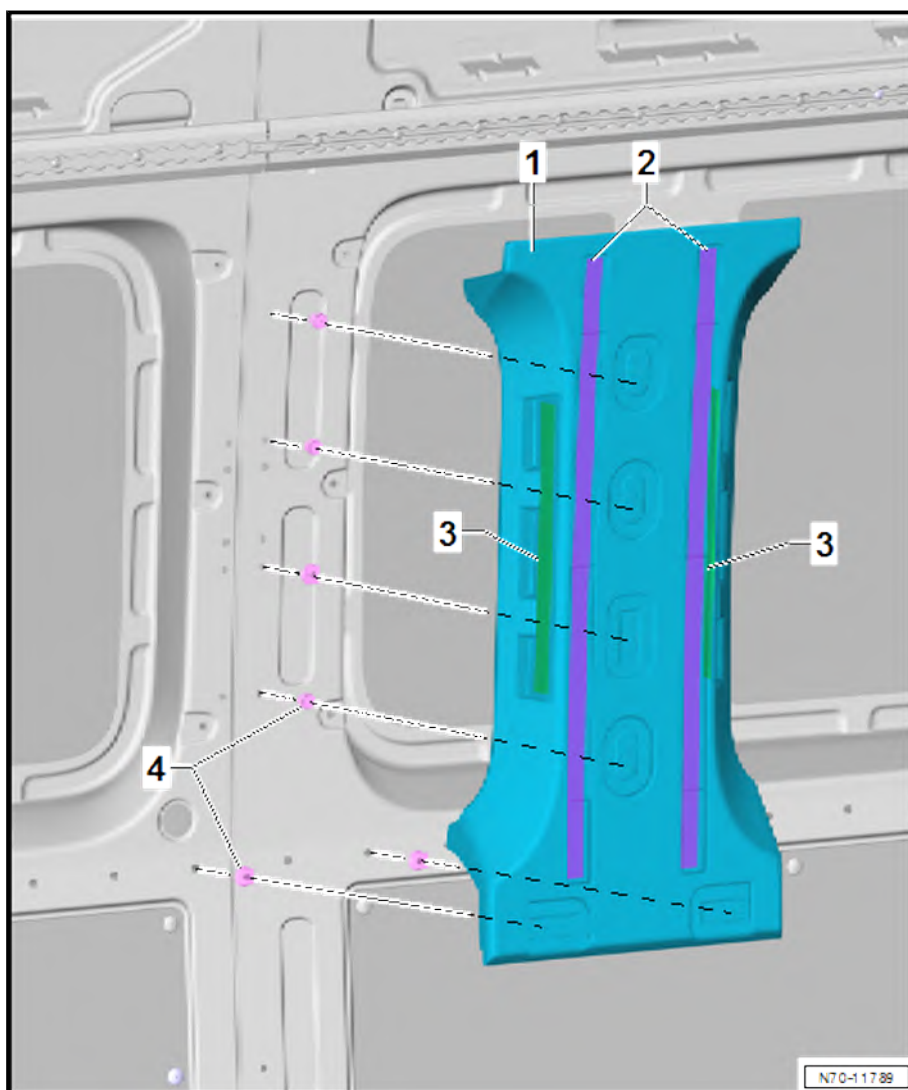



5.5.2 Assembly overview - C-pillar trim, on side of vehicle with sliding door



Note

The assembly overview is shown for the left side of the vehicle. The right side is analogous.

1 - C-pillar trim

- ☐ Removing and installing
⇒ [page 277](#)

2 - Adhesive strips


- ☐ Renew after removal
- ☐ Qty. 4

3 - Clip

- ☐ Qty. 5
- ☐ Renew any damaged or deformed clips.

4 - Felt strip

- ☐ Renew damaged felt strip

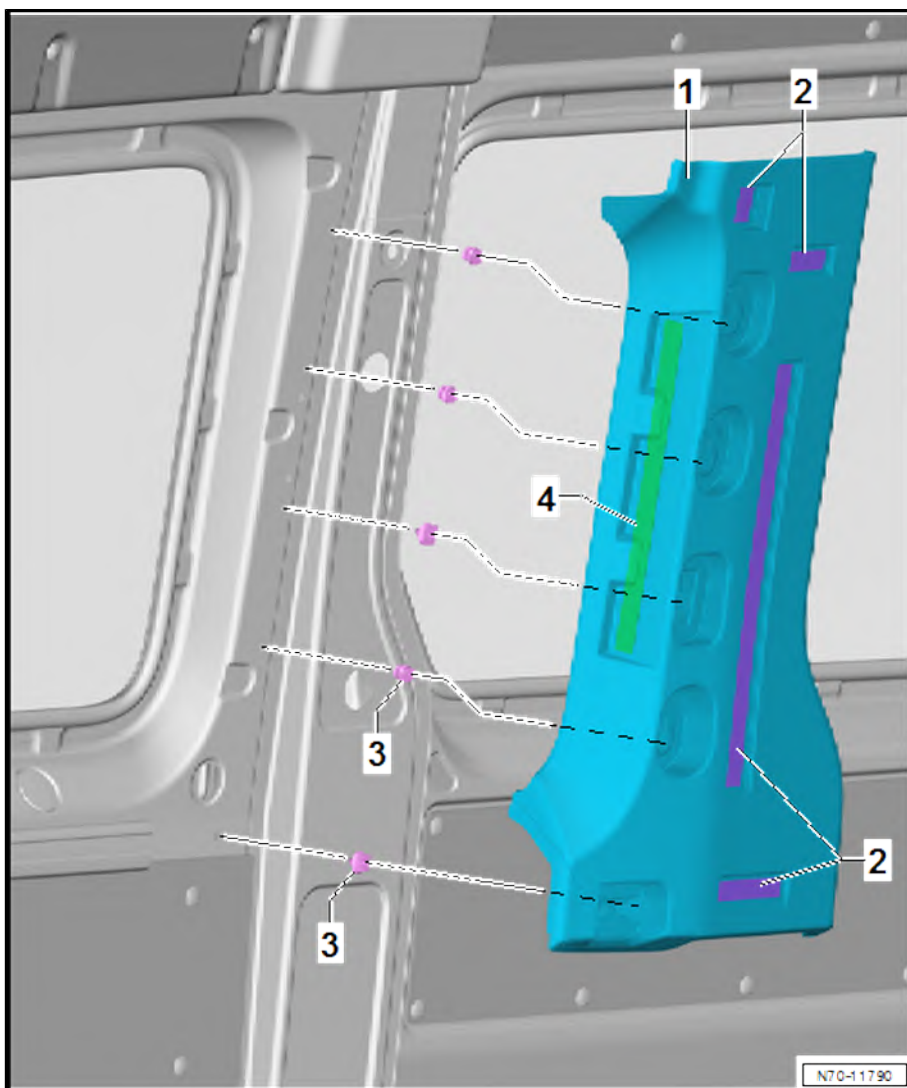



5.6 Assembly overview - side trim

⇒ ["5.6.1 Assembly overview - side trim, on side of vehicle with sliding door, panel van", page 250](#)

⇒ ["5.6.2 Assembly overview - side trim, short wheelbase, panel van", page 252](#)

⇒ ["5.6.3 Assembly overview - side trim, medium and long wheelbase, panel van", page 253](#)

⇒ ["5.6.4 Assembly overview - side trim, long wheelbase, panel van", page 254](#)

⇒ ["5.6.5 Assembly overview - side trim, retaining plates", page 255](#)

⇒ ["5.6.6 Assembly overview - side trim, front retaining plates", page 256](#)

⇒ ["5.6.7 Assembly overview - side trim, rear retaining plates", page 257](#)

⇒ ["5.6.8 Assembly overview - side trim, rear retaining plates, medium and long wheelbase", page 258](#)

⇒ ["5.6.9 Assembly overview - side trim, rear retaining plates, long wheelbase", page 259](#)

5.6.1 Assembly overview - side trim, on side of vehicle with sliding door, panel van



1 - Side trim

- ☐ Overall wood lining
- ☐ Top
- ☐ Removing and installing
⇒ [page 279](#)

2 - Clip

- ☐ Qty. 7
- ☐ Renew any damaged or deformed clips.

3 - Side trim

- ☐ Overall wood lining
- ☐ Centre
- ☐ Removing and installing
⇒ [page 279](#)

4 - Clip

- ☐ Qty. 6
- ☐ Renew any damaged or deformed clips.

5 - Bolts

- ☐ Qty. 2
- ☐ 3 Nm

6 - Side trim

- ☐ Overall wood lining
- ☐ Bottom
- ☐ Removing and installing
⇒ [page 279](#)

7 - Clip


- ☐ Qty. 9
- ☐ Renew any damaged or deformed clips.

8 - Side trim

- ☐ Partial plastic lining
- ☐ Bottom
- ☐ Removing and installing ⇒ [page 279](#)

9 - Clip

- ☐ Qty. 16
- ☐ Renew any damaged or deformed clips.

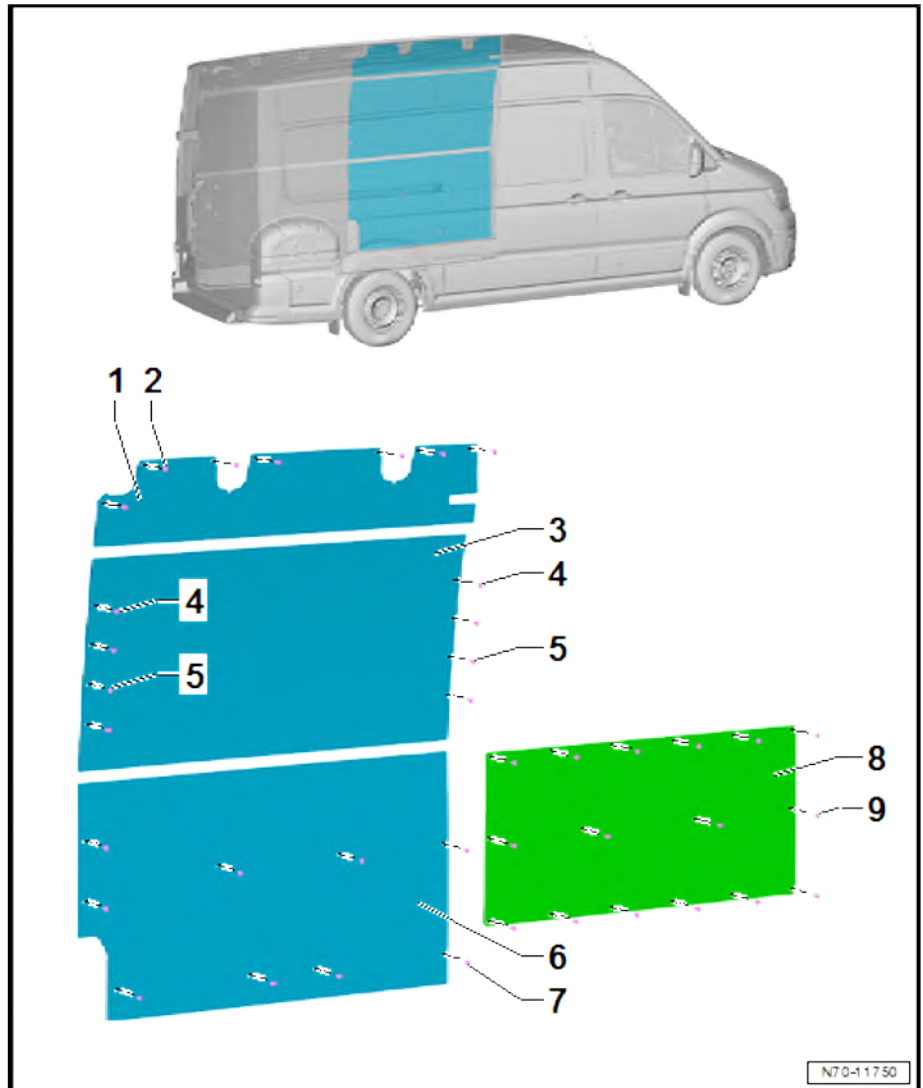



5.6.2 Assembly overview - side trim, short wheelbase, panel van

1 - Side trim

- ☐ Overall wood lining
- ☐ Top
- ☐ Removing and installing
⇒ [page 279](#)

2 - Clip

- ☐ Qty. 8
- ☐ Renew any damaged or deformed clips.

3 - Side trim

- ☐ Overall wood lining
- ☐ Centre
- ☐ Removing and installing
⇒ [page 279](#)

4 - Clip

- ☐ Qty. 6
- ☐ Renew any damaged or deformed clips.

5 - Bolts

- ☐ Quantity depends on equipment level
- ☐ 3 Nm

6 - Side trim

- ☐ Overall wood lining
- ☐ Bottom
- ☐ Removing and installing
⇒ [page 279](#)

7 - Clip

- ◆ Low floor: qty. 11
- ◆ High floor: qty. 10
- ☐ Renew any damaged or deformed clips.

8 - Bolts


- ☐ Qty. 4
- ☐ 4 Nm

9 - Side trim

- ☐ Partial plastic lining
- ☐ Bottom
- ☐ Removing and installing ⇒ [page 279](#)

10 - Clip

- ☐ Qty. 21
- ☐ Renew any damaged or deformed clips.

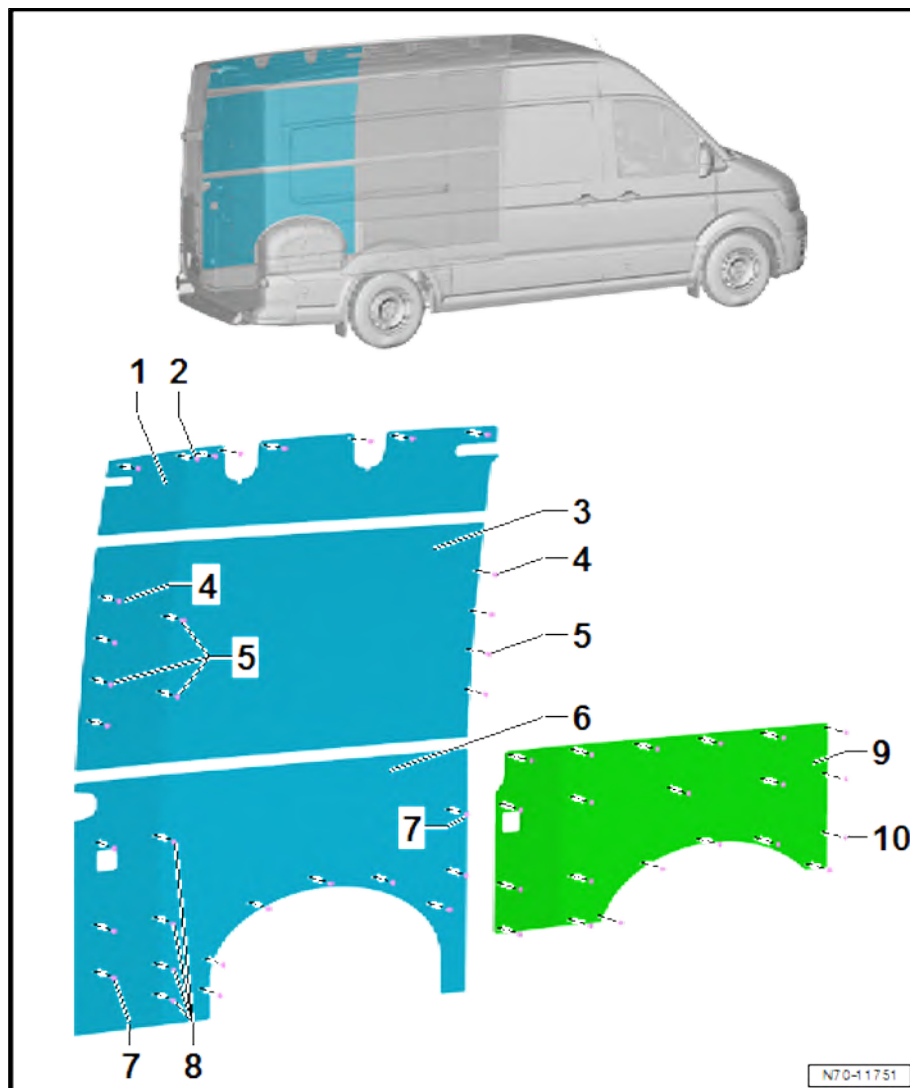



5.6.3 Assembly overview - side trim, medium and long wheelbase, panel van

1 - Side trim

- ☐ Overall wood lining
- ☐ Top
- ☐ Removing and installing
⇒ [page 279](#)

2 - Clip

- ☐ Qty. 10
- ☐ Renew any damaged or deformed clips.

3 - Side trim

- ☐ Overall wood lining
- ☐ Centre
- ☐ Removing and installing
⇒ [page 279](#)

4 - Clip

- ☐ Qty. 9
- ☐ Renew any damaged or deformed clips.

5 - Bolts

- ☐ Quantity depends on equipment level
- ☐ 3 Nm

6 - Side trim

- ☐ Overall wood lining
- ☐ Bottom
- ☐ Removing and installing
⇒ [page 279](#)

7 - Clip

- ◆ Low floor: qty. 17
- ◆ High floor: qty. 15
- ☐ Renew any damaged or deformed clips.

8 - Bolts


- ☐ Qty. 4
- ☐ 4 Nm

9 - Side trim

- ☐ Partial plastic lining
- ☐ Bottom
- ☐ Removing and installing ⇒ [page 279](#)

10 - Clip

- ☐ Qty. 29
- ☐ Renew any damaged or deformed clips.

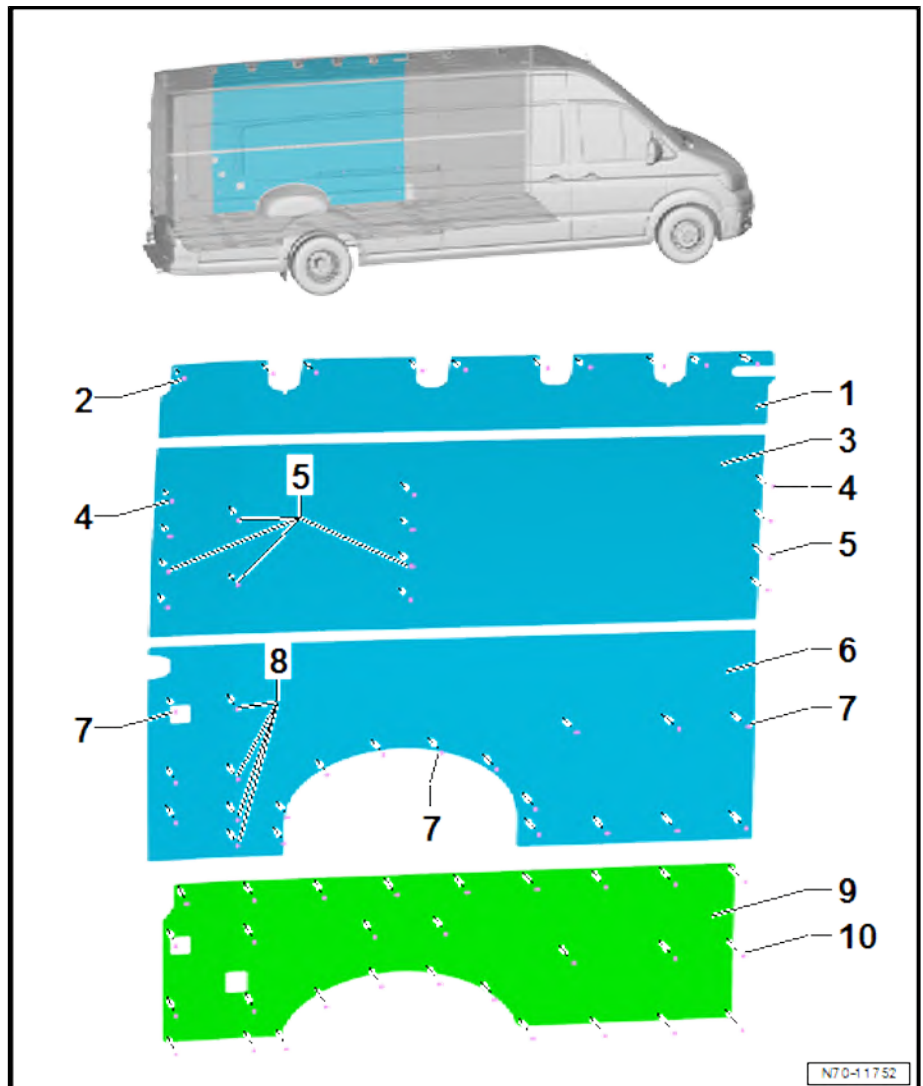



5.6.4 Assembly overview - side trim, long wheelbase, panel van

1 - Side trim

- ☐ Overall wood lining
- ☐ Top
- ☐ Removing and installing
⇒ [page 279](#)

2 - Clip

- ☐ Qty. 2
- ☐ Renew any damaged or deformed clips.

3 - Side trim

- ☐ Overall wood lining
- ☐ Centre
- ☐ Removing and installing
⇒ [page 279](#)

4 - Clip

- ☐ Qty. 6
- ☐ Renew any damaged or deformed clips.

5 - Bolts

- ☐ Qty. 2
- ☐ 3 Nm

6 - Side trim

- ☐ Overall wood lining
- ☐ Bottom
- ☐ Removing and installing
⇒ [page 279](#)

7 - Clip


- ☐ Qty. 7
- ☐ Renew any damaged or deformed clips.

8 - Side trim

- ☐ Partial plastic lining
- ☐ Bottom
- ☐ Removing and installing ⇒ [page 279](#)

9 - Clip

- ☐ Qty. 10
- ☐ Renew any damaged or deformed clips.

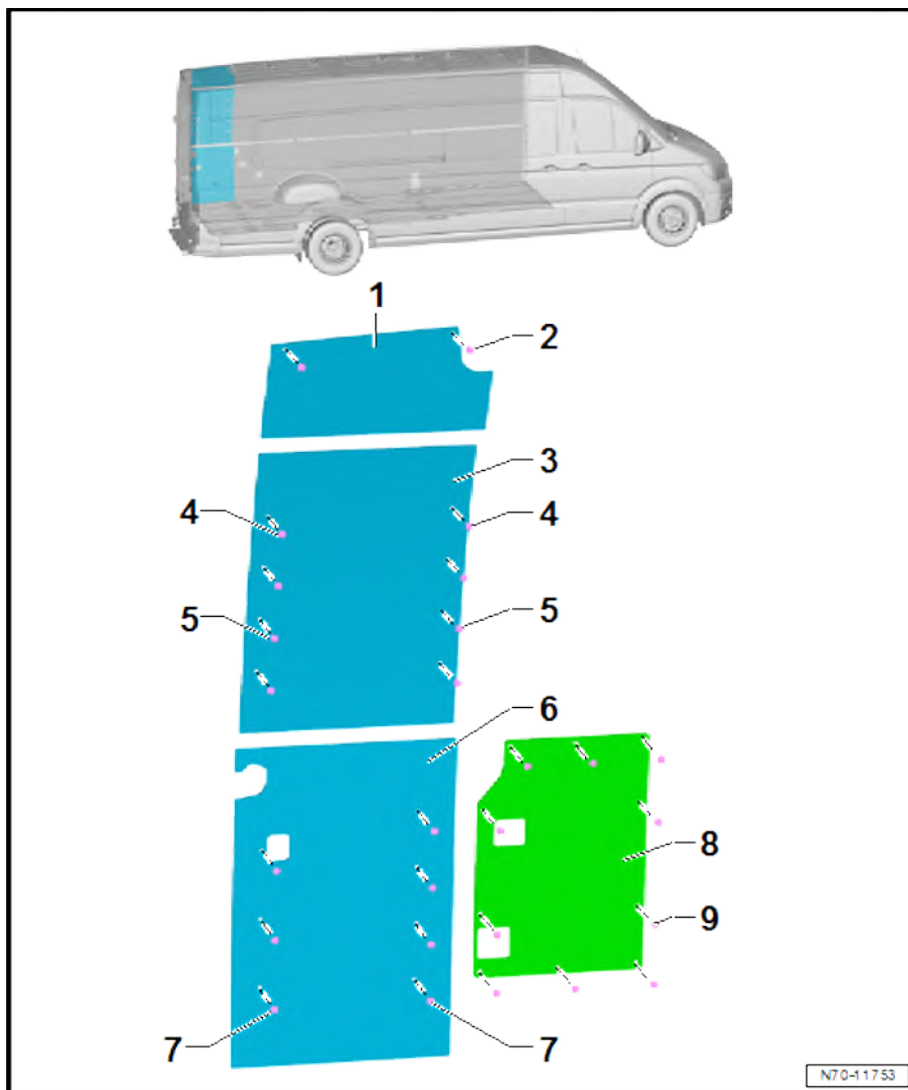



5.6.5 Assembly overview - side trim, retaining plates

1 - Side trim

- ☐ Rear
- ☐ Removing and installing
⇒ [page 279](#)

2 - Blind rivet nut

- ☐ Qty. 8

3 - Retaining plates


- ☐ Qty. 8
- ☐ Removing and installing
⇒ [page 86](#)

4 - Bolts

- ☐ Qty. 8
- ☐ 6 Nm

5 - Side trim

- ☐ Front
- ☐ Removing and installing
⇒ [page 279](#)

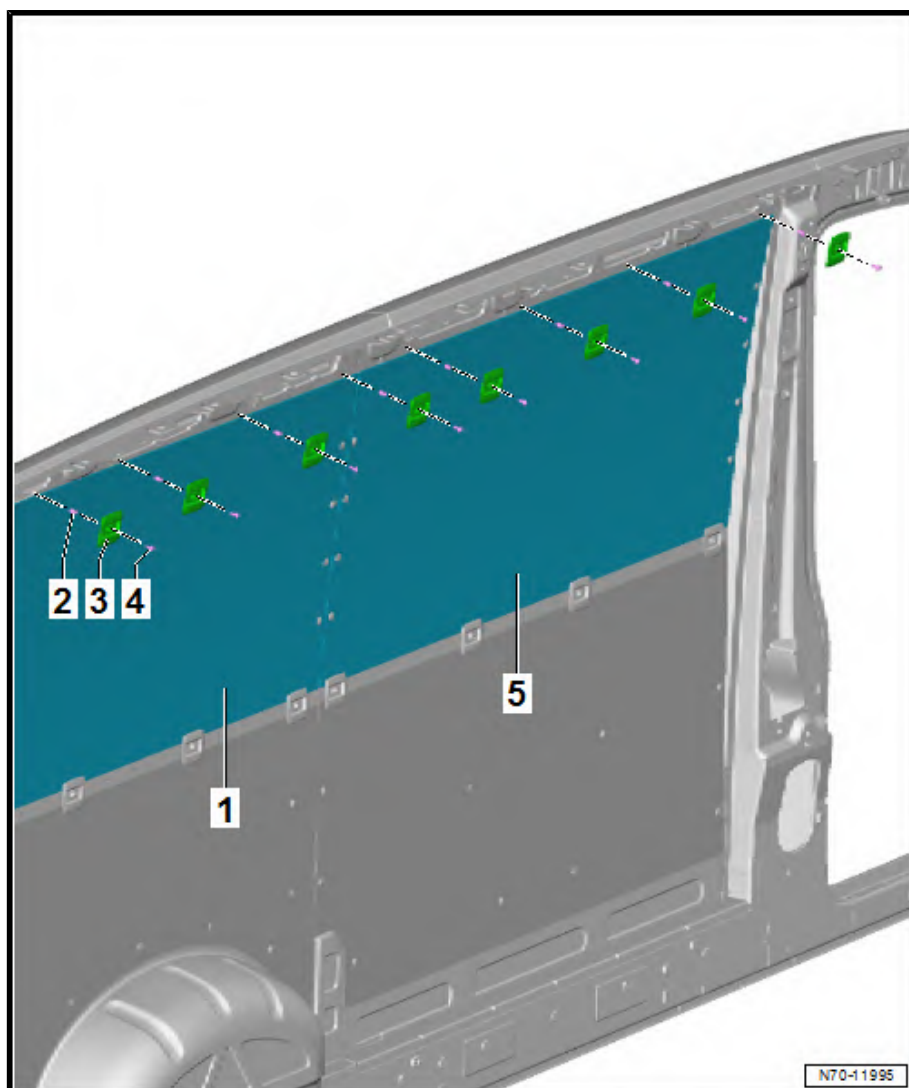



5.6.6 Assembly overview - side trim, front retaining plates

1 - Side trim

- ☐ Centre
- ☐ Removing and installing
⇒ [page 279](#)

2 - Blind rivet nut

- ☐ Qty. 4

3 - Retaining plates


- ☐ Qty. 4
- ☐ Removing and installing
⇒ [page 86](#)

4 - Bolts

- ☐ Qty. 4
- ☐ 6 Nm

5 - Side trim

- ☐ Top
- ☐ Removing and installing
⇒ [page 279](#)

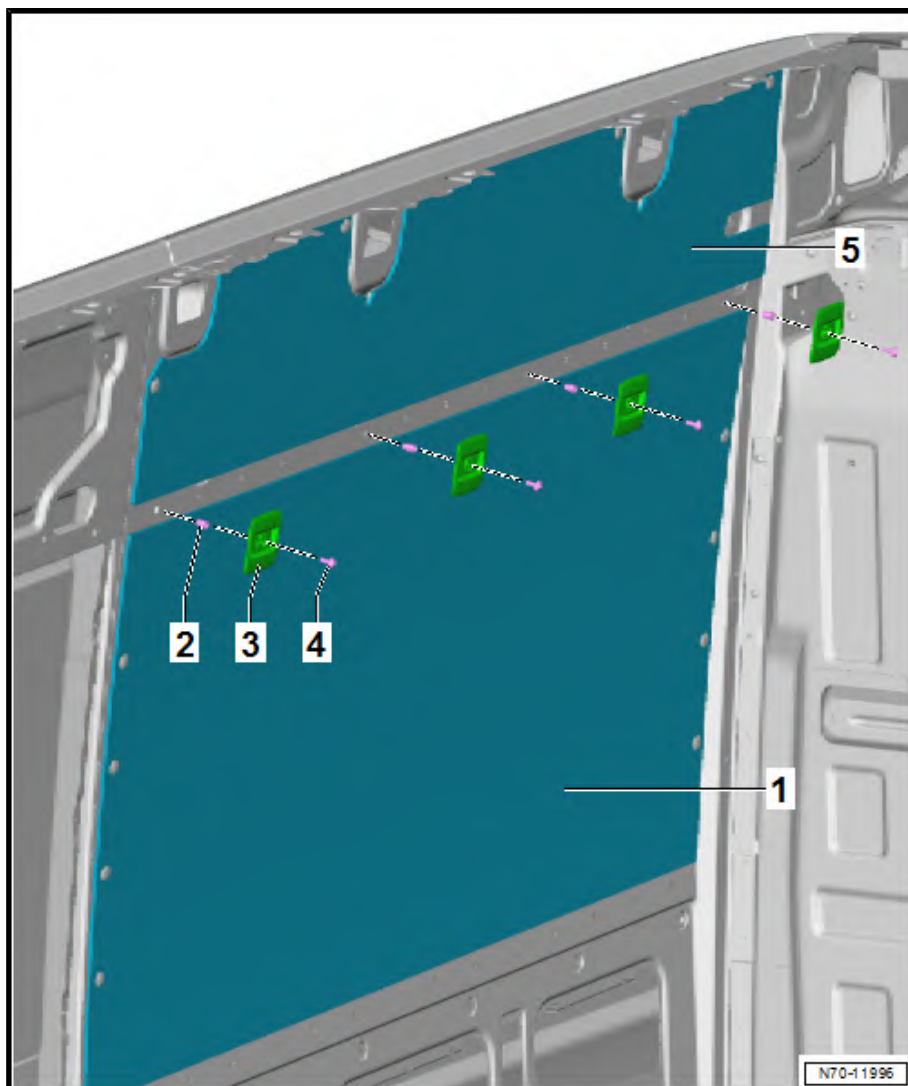



5.6.7 Assembly overview - side trim, rear retaining plates

1 - Side trim

- ☐ Bottom
- ☐ Removing and installing
⇒ [page 279](#)

2 - Blind rivet nut

- ☐ Qty. 8

3 - Retaining plates

- ☐ Qty. 8
- ☐ Removing and installing
⇒ [page 86](#)

4 - Bolts


- ☐ Qty. 8
- ☐ 6 Nm

5 - Side trim

- ☐ Centre
- ☐ Removing and installing
⇒ [page 279](#)

6 - Side trim

- ☐ Top
- ☐ Removing and installing
⇒ [page 279](#)

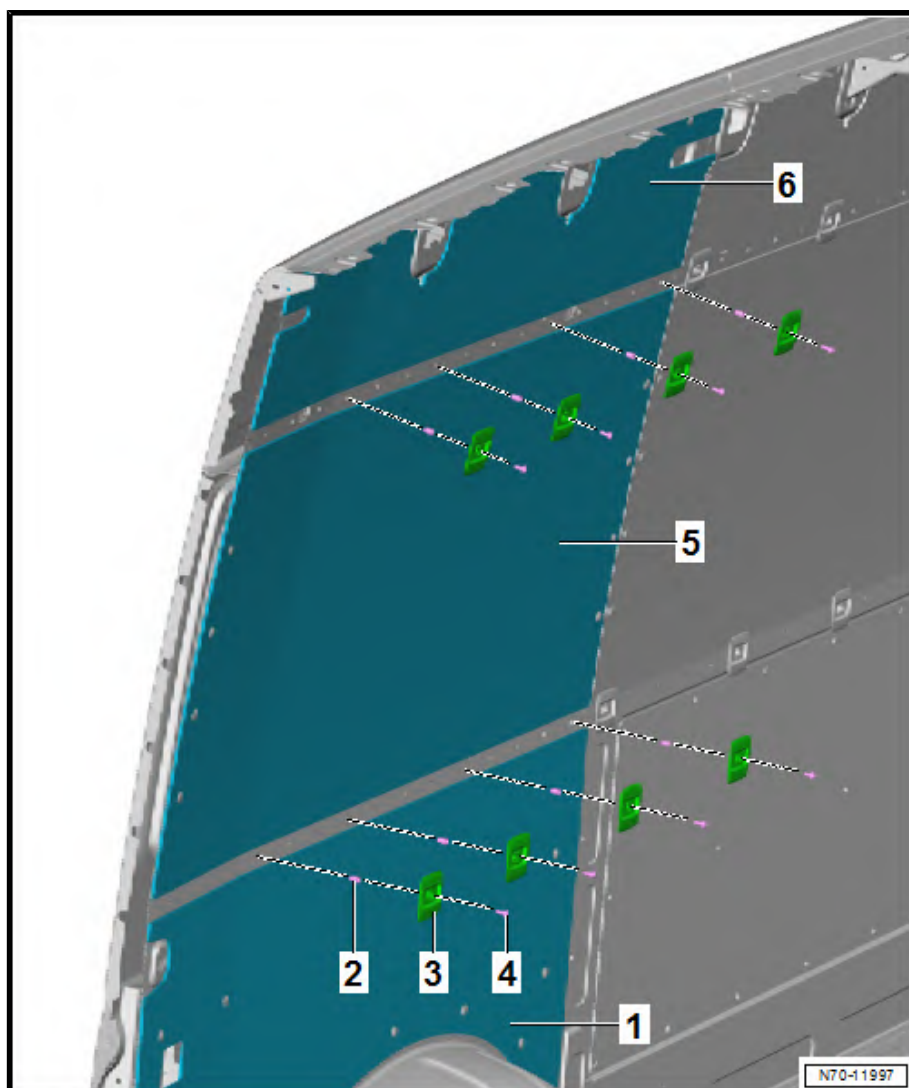



5.6.8 Assembly overview - side trim, rear retaining plates, medium and long wheelbase

1 - Side trim

- ☐ Bottom, centre
- ☐ Removing and installing
⇒ [page 279](#)

2 - Blind rivet nut

- ☐ Qty. 20

3 - Retaining plates

- ☐ Qty. 20
- ☐ Removing and installing
⇒ [page 86](#)

4 - Bolts


- ☐ Qty. 20
- ☐ 6 Nm

5 - Side trim

- ☐ rear, centre
- ☐ Removing and installing
⇒ [page 279](#)

6 - Side trim

- ☐ Centre
- ☐ Removing and installing
⇒ [page 279](#)

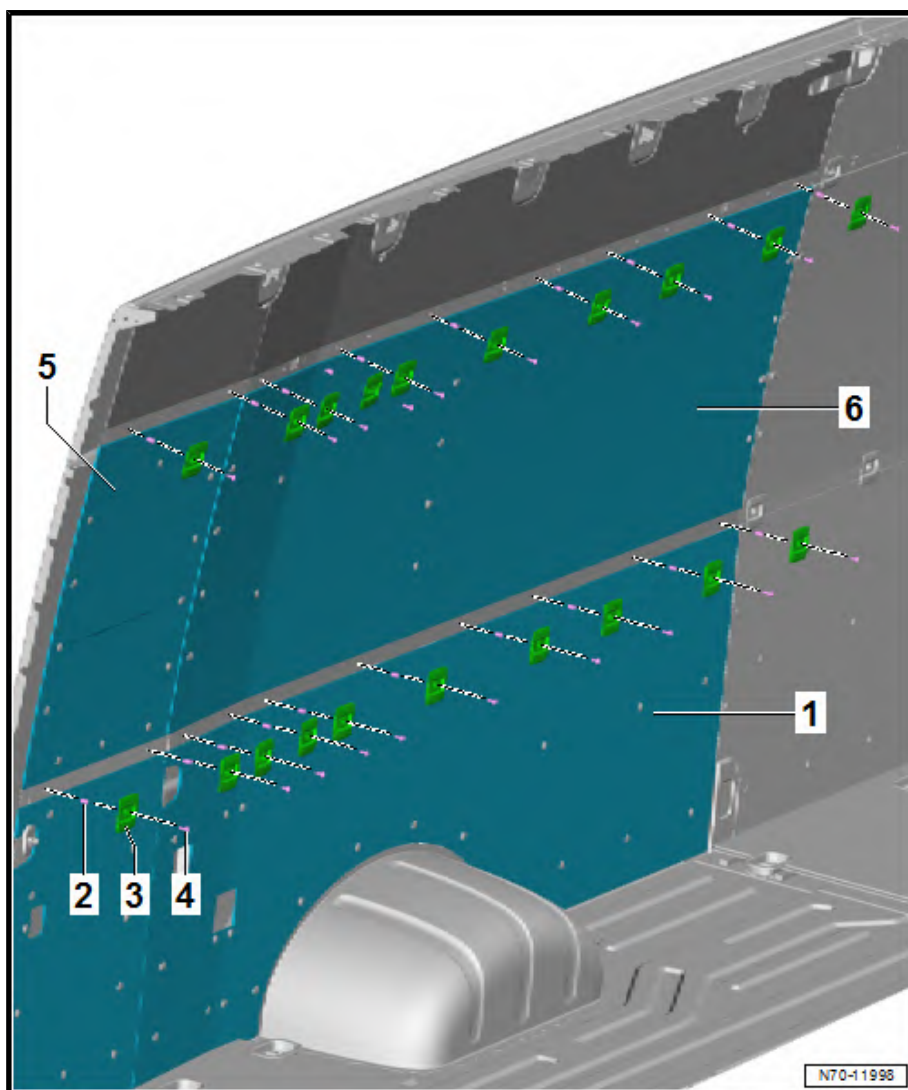



5.6.9 Assembly overview - side trim, rear retaining plates, long wheelbase

1 - Side trim

- ☐ Bottom
- ☐ Removing and installing
⇒ [page 279](#)

2 - Blind rivet nut

- ☐ Qty. 2

3 - Retaining plates

- ☐ Qty. 2
- ☐ Removing and installing
⇒ [page 86](#)

4 - Bolts


- ☐ Qty. 2
- ☐ 6 Nm

5 - Side trim

- ☐ Centre
- ☐ Removing and installing
⇒ [page 279](#)

6 - Side trim

- ☐ Top
- ☐ Removing and installing
⇒ [page 279](#)

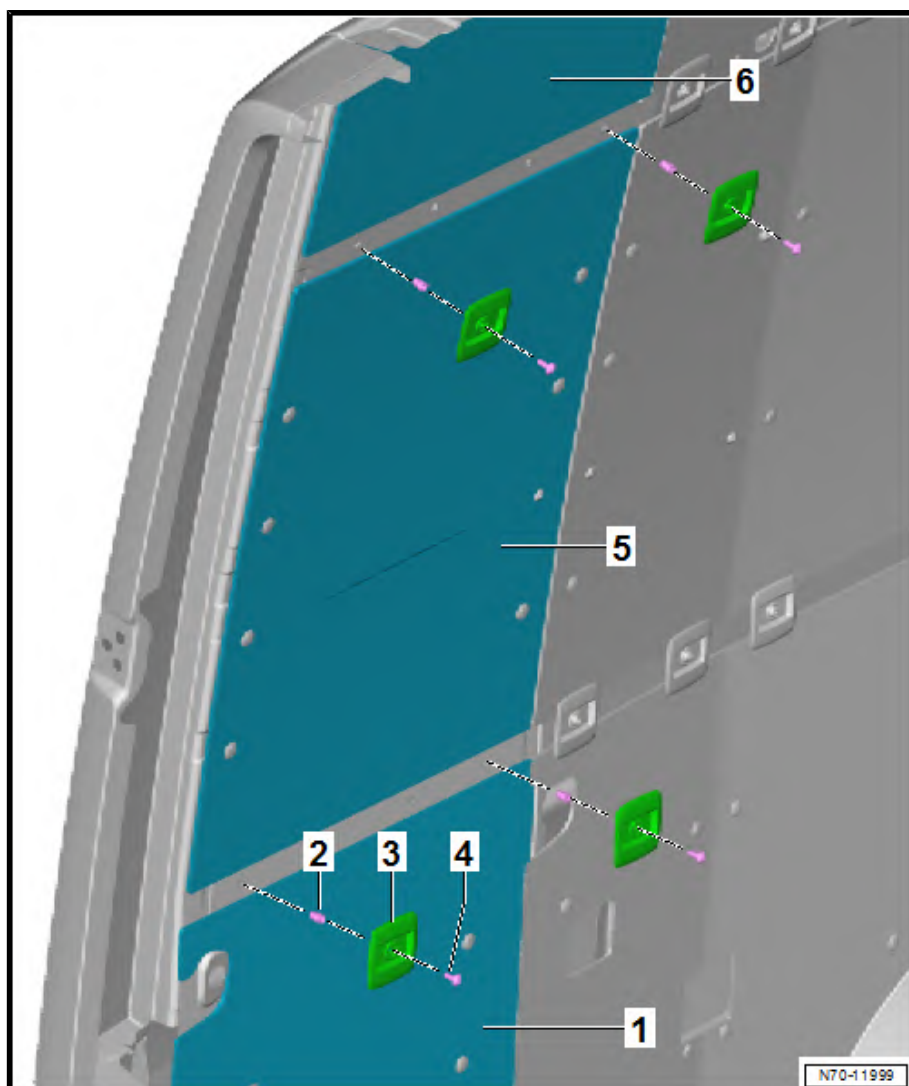

5.7 Assembly overview - foot rest and floor covering

⇒ [“5.7.1 Assembly overview - foot rest and floor covering, driver area”, page 260](#)

⇒ [“5.7.2 Assembly overview - foot rest and floor covering, load compartment \(PR no. K4A panel van\)”, page 261](#)

⇒ [“5.7.3 Assembly overview - foot rest and floor covering, passenger compartment \(PR no. K4B Kombi\)”, page 263](#)

5.7.1 Assembly overview - foot rest and floor covering, driver area

1 - Floor covering in driver area

- ☐ Left
- ☐ Removing and installing
⇒ [page 283](#)

2 - Rotary fasteners

- ☐ Qty. 2

3 - Tool kit cover

- ☐ Removing and installing
⇒ [page 76](#)

4 - Floor covering in driver area

- ☐ Right
- ☐ Removing and installing
⇒ [page 283](#)

5 - Nuts

- ☐ Qty. 3
- ☐ 2 Nm

6 - Tool kit storage compartment

- ☐ Removing and installing
⇒ [page 76](#)

7 - Nuts

- ☐ Qty. 7
- ☐ 2 Nm

8 - Footwell cover

- ☐ Removing and installing
⇒ [page 53](#)

9 - Clip

- ☐ Qty. 2


10 - Clip

- ☐ Qty. 2

11 - Foot rest

- ☐ Removing and installing ⇒ [page 282](#)

12 - Push-button

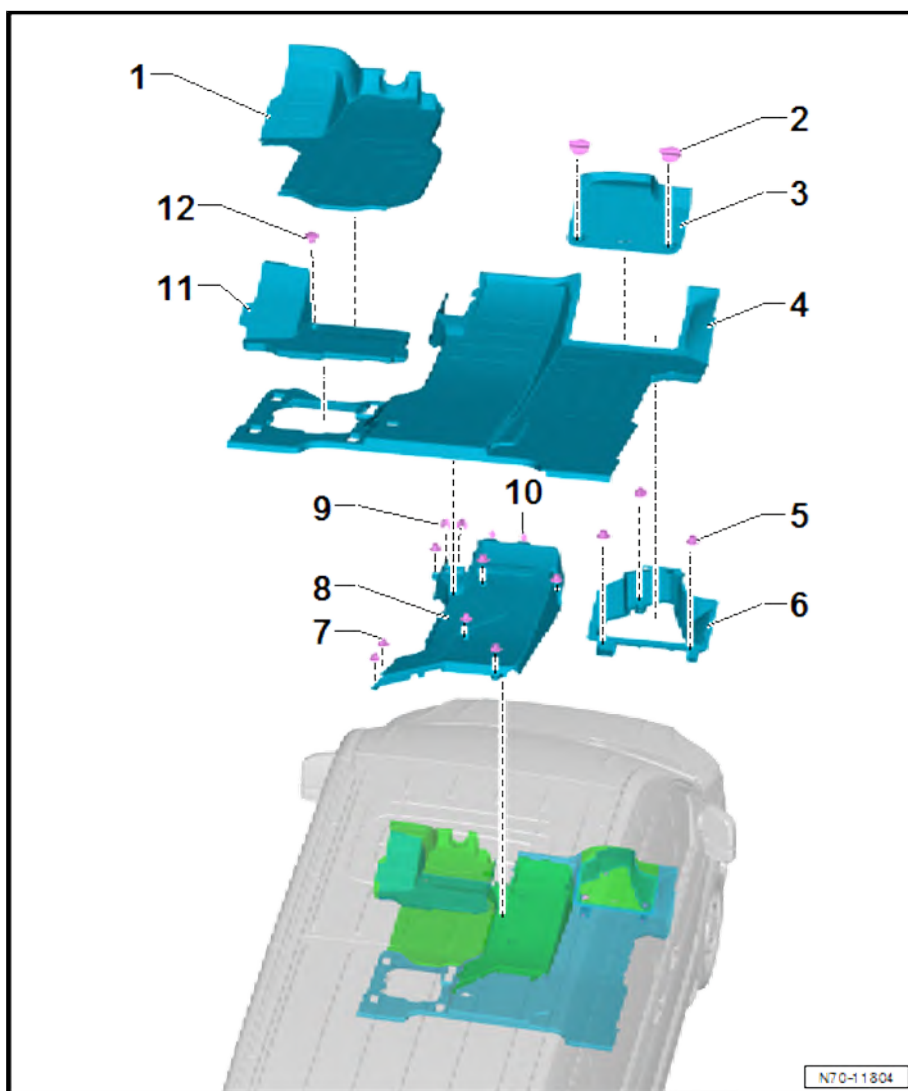



5.7.2 Assembly overview - foot rest and floor covering, load compartment (PR no. K4A panel van)



Note

- ◆ Although there are various other versions, only on equipment version is shown. Any other versions are similar.
- ◆ The assembly overview is shown for vehicles with short wheelbase and low floor. Adapt accordingly for vehicles with a different wheelbase or high floor.

1 - Floor covering

- ☐ Rear
- ☐ Removing and installing
⇒ [page 283](#)

2 - Covers for fastening rings

- ☐ Depending on equipment
- ☐ From calendar week 14/2018 made of plastic with two additional spacer sleeves

- ◆ Short wheelbase: qty. 7
- ◆ Medium wheelbase: qty. 9
- ◆ Long wheelbase: qty. 11
- ☐ Removing and installing
⇒ [page 295](#)

3 - Fastening rings

- ☐ Depending on equipment

- ◆ Short wheelbase: qty. 7
- ◆ Medium wheelbase: qty. 9
- ◆ Long wheelbase: qty. 11
- ☐ Removing and installing
⇒ [page 295](#)

4 - Bolts

- ☐ Depending on equipment

- ◆ Short wheelbase: qty. 14
- ◆ Medium wheelbase: qty. 18
- ◆ Long wheelbase: qty. 22
- ☐ 20 Nm

5 - Floor covering


- ☐ Centre
- ☐ Removing and installing ⇒ [page 283](#)

6 - Floor covering

- ☐ Front
- ☐ Removing and installing ⇒ [page 283](#)

7 - Bolts

- ☐ Qty. 2

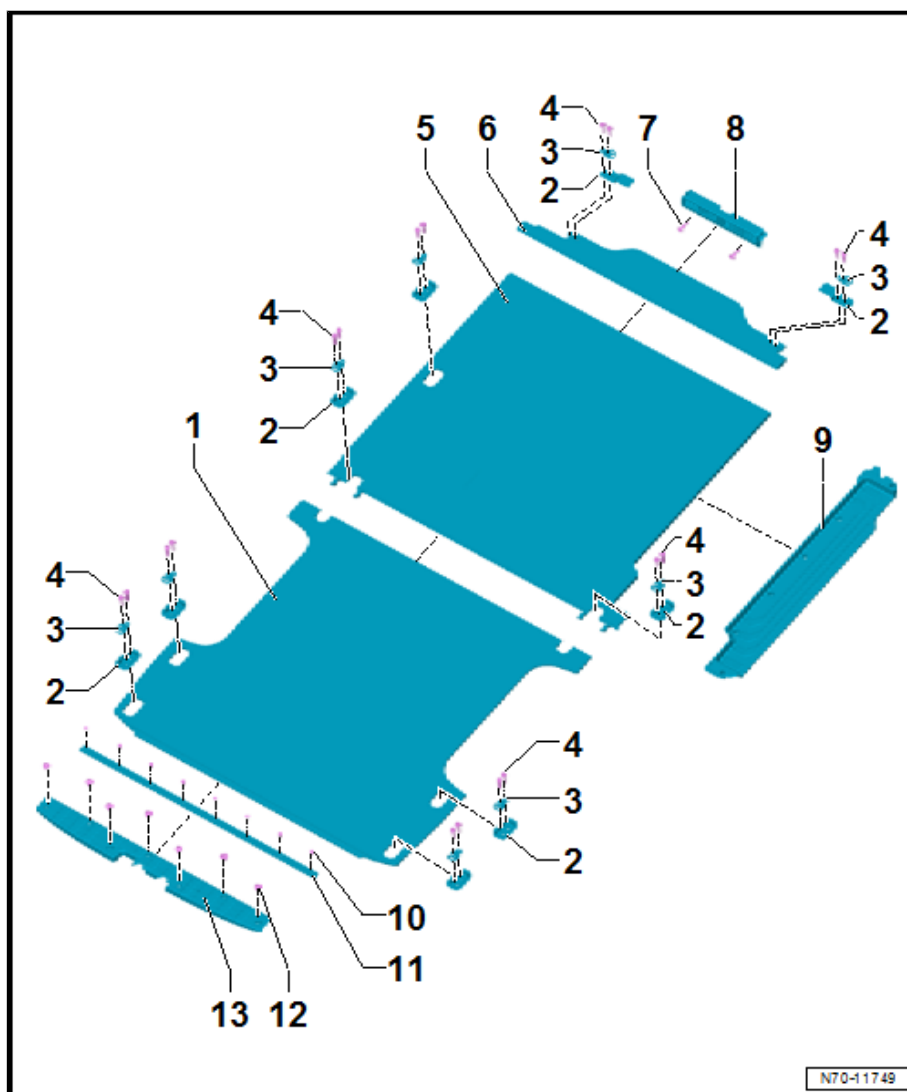



- ☐ 1.5 Nm

8 - Vent

- ☐ Vehicles with second heater unit in driver area
- ☐ Vehicles with auxiliary air heater
- ☐ Removing and installing ⇒ [page 292](#)

9 - Sliding door step

- ☐ Depending on equipment
- ◆ 2 sliding doors: qty 2
 - ☐ Assembly overview ⇒ [page 241](#)
 - ☐ Removing and installing ⇒ [page 264](#)

10 - Bolts

- ☐ Qty. 8
- ☐ 1.5 Nm

11 - Retaining strip

- ☐ Removing and installing ⇒ [page 294](#)

12 - Bolts

- ☐ Qty. 7
- ☐ 1.5 Nm

13 - Lock carrier trim

- ☐ Removing and installing ⇒ [page 297](#)



5.7.3 Assembly overview - foot rest and floor covering, passenger compartment (PR no. K4B Kombi)



Note

- ◆ As there are so many different versions, only one equipment version is shown. The procedure follows the same pattern for the other versions.
- ◆ The assembly overview is shown for vehicles with short wheelbase and high floor. Adapt accordingly for vehicles with a different wheelbase or low floor.

1 - Floor covering

- ☐ Removing and installing
⇒ [page 283](#)

2 - Bolts

- ☐ Qty. 6
- ☐ 5 Nm

3 - Vent

- ☐ Vehicles with second heater unit in driver area
- ☐ Vehicles with auxiliary air heater
- ☐ Removing and installing
⇒ [page 292](#)

4 - Vent

- ☐ For footwell floor
- ☐ Qty. 2
- ☐ Vehicles with second heater unit in driver area
- ☐ Vehicles with auxiliary air heater
- ☐ Removing and installing
⇒ Heating, air conditioning; Rep. gr. 80 ; Air duct; Removing and installing air ducts; Removing and installing floor vents in passenger compartment

5 - Seat rails


- ☐ Qty. 6
- ☐ Assembly overview
⇒ [page 67](#)
- ☐ Removing and installing
⇒ [page 87](#)

6 - Steps

- ☐ For sliding door
- ☐ Depending on equipment
- ☐ Two sliding doors: qty 2
- ☐ Assembly overview ⇒ [page 241](#)
- ☐ Removing and installing ⇒ [page 264](#)

7 - Trim

- ☐ For sliding door step

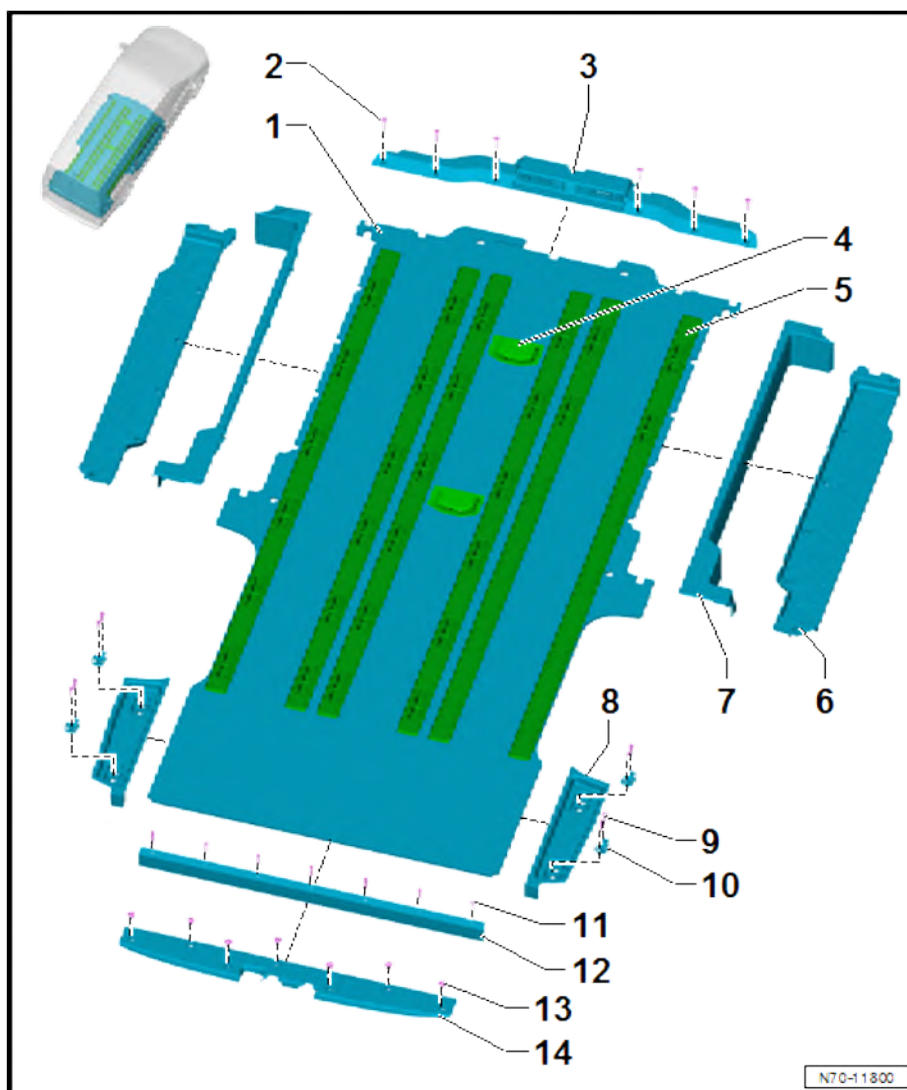



- ☐ Depending on equipment
- ☐ Two sliding doors: qty 2
- ☐ Removing and installing ⇒ [page 264](#)

8 - Storage compartment

- ☐ For fastening rings
- ☐ Qty. 2
- ☐ Removing and installing ⇒ [page 295](#)

9 - Bolts

- ☐ Qty. 8
- ☐ 1.5 Nm

10 - Fastening rings

- ☐ Qty. 4
- ☐ Removing and installing ⇒ [page 295](#)

11 - Bolts

- ☐ Qty. 7
- ☐ 1.5 Nm

12 - Retaining strip

- ☐ Removing and installing ⇒ [page 294](#)

13 - Bolts

- ☐ Qty. 7
- ☐ 1.5 Nm

14 - Trim

- ☐ For lock carrier
- ☐ Removing and installing ⇒ [page 297](#)

5.8 Removing and installing step

⇒ [“5.8.1 Removing and installing front step cover”, page 264](#)

⇒ [“5.8.2 Removing and installing front step”, page 265](#)

⇒ [“5.8.3 Removing and installing rear step, double cab”, page 265](#)

⇒ [“5.8.4 Removing and installing rear step cover of sliding door, high floor, panel van”, page 266](#)

⇒ [“5.8.5 Removing and installing rear step of sliding door”, page 266](#)

⇒ [“5.8.6 Removing and installing rear step trim of sliding door, high floor, Kombi”, page 267](#)

5.8.1 Removing and installing front step cover

Special tools and workshop equipment required



- ◆ Torque wrench - V.A.G 1783-



Removing


- Unscrew bolts -3-.
- Guide out guide on cover -1-.
- Remove step cover -1- from step -2-.

Installing

Install in reverse order of removal, observing the following:

Specified torques

- ◆ ⇒ [“5.2 Assembly overview - step”, page 241](#)

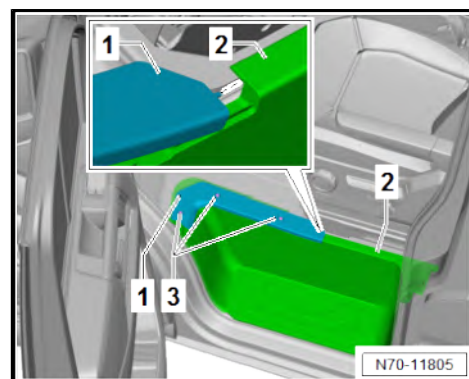


5.8.2 Removing and installing front step

Removing

- Remove lower A-pillar trim ⇒ [page 268](#) .
- Remove step cover ⇒ [page 264](#) .
- Remove lower B-pillar trim ⇒ [page 270](#) .
- Release step -1- from door seal beading.
- Lift up floor covering at transition to step -1-.
- Use wedge - T10383- to lever clips -2- out of grommets -3- in body.
- Unscrew bolts -1-.

Installing

Install in reverse order.

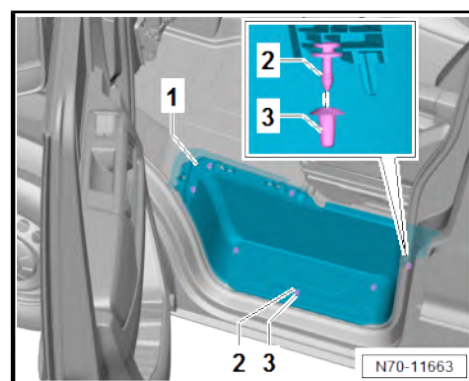


5.8.3 Removing and installing rear step, double cab

Removing

- Remove rear bench seat ⇒ [page 387](#) .
- Remove lower B-pillar trim ⇒ [page 270](#) .
- Release step -1- from door seal beading.
- Use wedge - T10383- to lever clips -2- out of grommets -3- in body.
- Unscrew bolts -1-.

Installing

Install in reverse order.

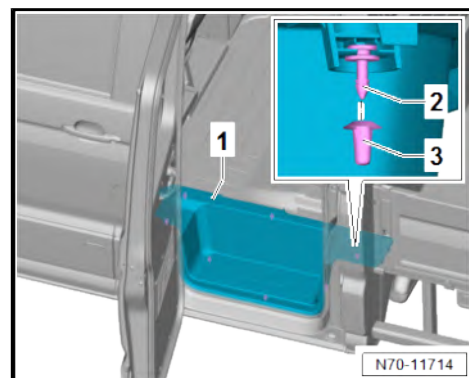



5.8.4 Removing and installing rear step cover of sliding door, high floor, panel van

Special tools and workshop equipment required

- ◆ Torque wrench - V.A.G 1783-



Removing


- Unscrew bolt -2-.
- If fitted, guide out step cover -1- from beneath floor covering.
- Remove step cover -1- from step -3-.

Installing

Install in reverse order of removal, observing the following:

Specified torques

- ◆ ⇒ [“5.2 Assembly overview - step”, page 241](#)

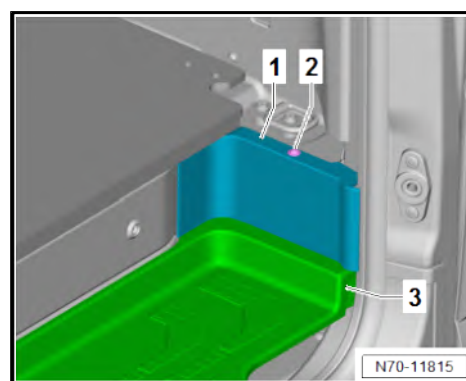

5.8.5 Removing and installing rear step of sliding door


Special tools and workshop equipment required

- ◆ Torque wrench - V.A.G 1783-





◆ Wedges - T10383-

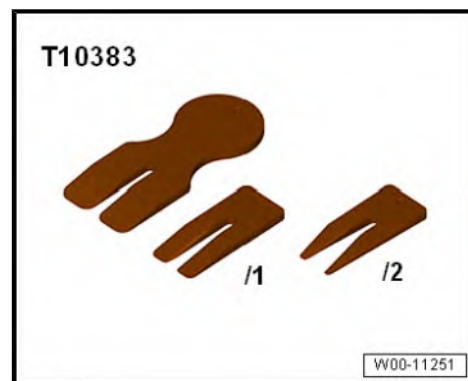

Removing



Note

The description is for vehicles with a high floor. The description for vehicles with a low floor is analogous.

Vehicles with high floor and PR no. K4A (panel van)

- Remove rear step cover of sliding door ➔ [page 264](#) .

Vehicles with high floor and PR no. K4B (Kombi)

- Remove rear step trim of sliding door ➔ [page 264](#) .

Continued for all vehicles


- Use wedge - T10383- to unclip plug -3-.
- Unscrew bolts -2-.
- Guide roller guide for sliding door out of step -1-.
- If fitted, guide out step -1- from beneath floor covering.
- Unscrew bolts -1-.

Installing

Install in reverse order of removal, observing the following:

Specified torques

- ◆ ➔ [“5.2 Assembly overview - step”, page 241](#)

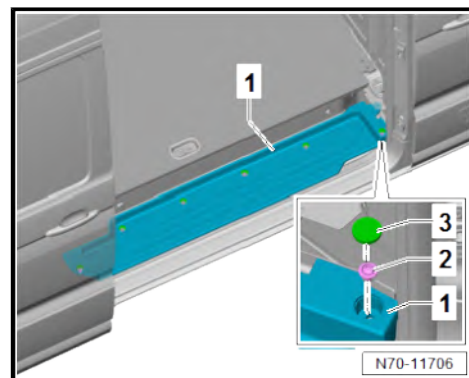

5.8.6 Removing and installing rear step trim of sliding door, high floor, Kombi

Special tools and workshop equipment required

- ◆ Torque wrench - V.A.G 1783-





Removing


- Unscrew bolts -3-.
- Guide step trim -1- out of guides on step -2-.
- Remove step trim -1-.

Installing

Install in reverse order of removal, observing the following:

Specified torques

- ♦ ⇒ [“5.2 Assembly overview - step”, page 241](#)

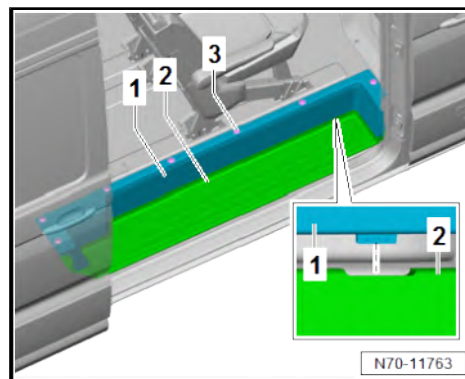

5.9 Removing and installing A-pillar trim

⇒ [“5.9.1 Removing and installing upper A-pillar trim”, page 268](#)

⇒ [“5.9.2 Removing and installing lower A-pillar trim”, page 269](#)

5.9.1 Removing and installing upper A-pillar trim

Removing


- Remove A-pillar gap cover ⇒ [page 269](#) .

Vehicles with grab handle

- Remove grab handle pillar trim ⇒ [page 73](#) .

Continued for all vehicles

- Detach top A-pillar trim -1- from door seal beading.
- Use wedge - T10383- to lever retaining clips -2- in -direction of arrow A- out of body mountings.
- Remove upper A-pillar trim -1- in -direction of arrow B-.

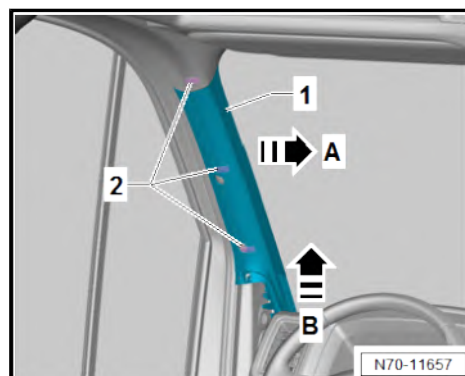


Vehicles with treble loudspeaker in pillar

- Switch off ignition and all electrical consumers.
- Withdraw ignition key.
- Disconnect electrical connector -2- from treble loudspeaker in pillar -1-.

Installing

Install in reverse order of removal, observing the following:

- Remove any clips left in the body mountings using wedge - T10383- , and fit them in the trim for installation.

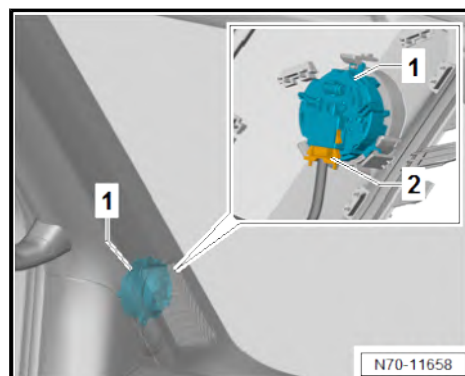




5.9.2 Removing and installing lower A-pillar trim

Removing

- Remove A-pillar gap cover ➔ [page 269](#) .
- Remove bonnet release lever -2- ➔ General body repairs, exterior; Rep. gr. 55 ; Bonnet; Removing and installing bonnet release lever .
- Detach bottom A-pillar trim -1- from door seal beading.
- Use wedge - T10383- to lever retaining clips -4- in -direction of arrow- out of body mountings.
- Unclip bottom A-pillar trim -1- from step -3- using wedge - T10383- .
- Remove bottom A-pillar trim -1-.

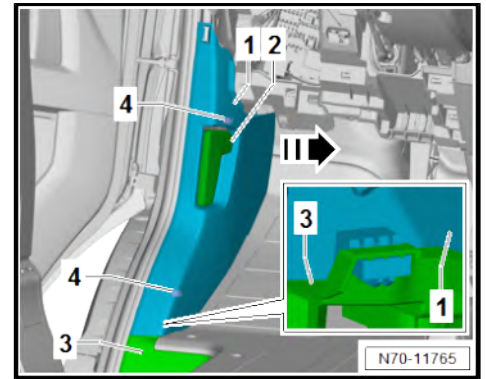

Installing


Install in reverse order of removal, observing the following:

- Remove any clips left in the body mountings using wedge - T10383- , and fit them in the trim for installation.
- Check proper operation of operating lever for bonnet -2-.

5.10 Removing and installing A-pillar gap cover

Special tools and workshop equipment required

- ◆ Wedges - T10383-

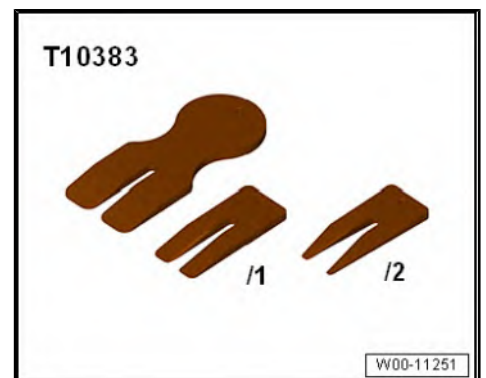




Removing

- Remove dash panel storage compartment on driver side
⇒ [page 50](#) .
- Use wedge - T10383- to unclip A-pillar gap cover -1- in
-direction of arrow- from lower A-pillar trim -3-.
- Use wedge - T10383- to unclip A-pillar gap cover -1- in
-direction of arrow- from upper A-pillar trim -2-.
- Detach A-pillar gap cover -1- from door seal beading.
- Remove A-pillar gap cover -1- from body in direction of
-arrow-.

Installing

Install in reverse order.

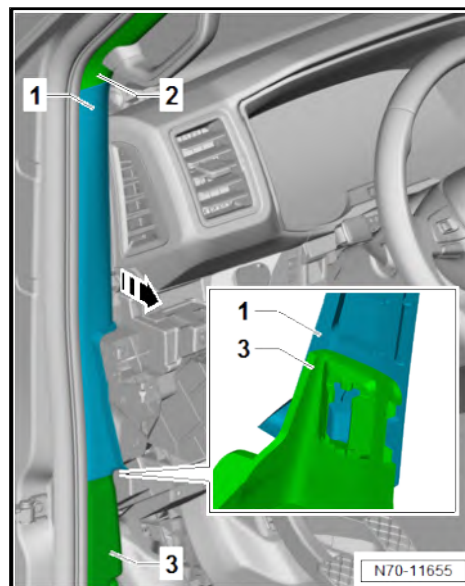

5.11 Removing and installing B-pillar trim

⇒ [“5.11.1 Removing and installing upper B-pillar trim, panel van, double cab, Kombi”, page 270](#)

⇒ [“5.11.2 Removing and installing upper B-pillar trim, single cab”, page 273](#)

⇒ [“5.11.3 Removing and installing centre B-pillar trim, single cab”, page 273](#)

⇒ [“5.11.4 Removing and installing lower B-pillar trim”, page 275](#)


⇒ [“5.11.5 Removing and installing B-pillar cover”, page 276](#)

⇒ [“5.11.6 Removing and installing lower B-pillar bracket”, page 277](#)

5.11.1 Removing and installing upper B-pillar trim, panel van, double cab, Kombi

Special tools and workshop equipment required

- ◆ Wedges - T10383-

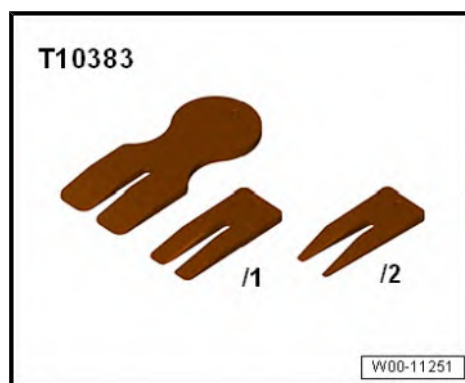



- ◆ Torque wrench - V.A.G 1783-



Removing



Note

- ◆ *The removal and installation procedure on vehicles with a partition panel is carried out via the load compartment. The removal and installation procedure on vehicles without a partition panel is carried out via the passenger compartment.*
- ◆ *The removal and installation procedures may have to be modified slightly depending on equipment.*


- Remove front belt end fitting ➔ [page 130](#) .

Vehicles with grab handle

- Remove grab handle pillar trim ➔ [page 73](#) .

Continued for all vehicles

- Move slide for belt height adjuster to lowest position.
- Use wedge - T10383- to unclip cap -2- from upper B-pillar trim -1-.
- Unscrew bolt -3-.

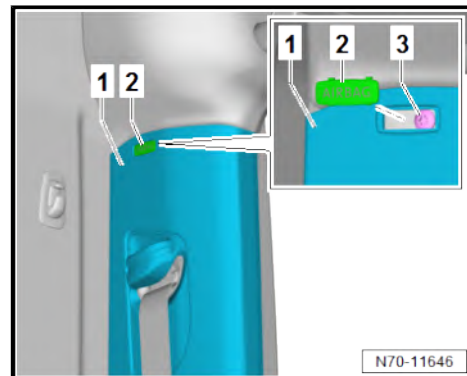




Vehicles with partition


Located at the same height as the slide for belt height adjustment is also a detent clip -2-.

Located between the upper B-pillar trims -1- and lower B-pillar trims -3- is a retaining hook.

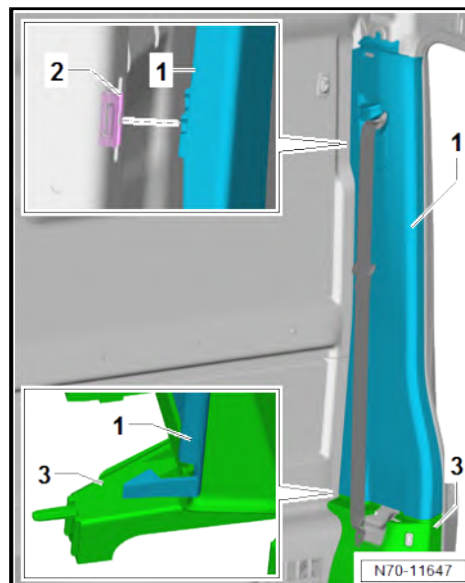

Continued for all vehicles

- Detach top B-pillar trim -1- from door seal beading.
- Unclip upper B-pillar trim -1- from lower B-pillar trim -2- using wedge - T10383- .
- Use wedge - T10383- to lever retaining clips -3- in -direction of arrow- out of body mountings starting at bottom.
- Guide out upper B-pillar trim -1- from moulded headliner.

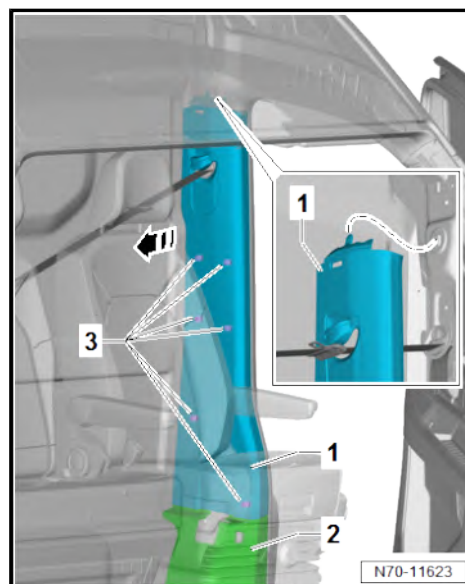


- Guide out belt webbing with latch plate -1- through slide for belt height adjustment -2-.
- Remove upper B-pillar trim -3-.

Installing

Install in reverse order of removal, observing the following:

- Remove any clips left in the body mountings using wedge - T10383- , and fit them in the trim for installation.
- After installing B-pillar trim -3-, check function of belt height adjuster -2-.

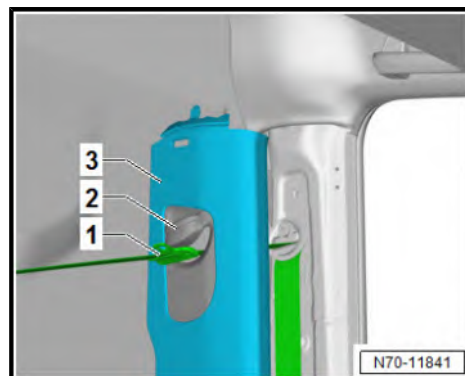

Note

Ensure that belt webbing is not twisted.




Vehicles with partition

- Check to ensure that upper B-pillar trim -1- is engaged in securing clip -2-.
- Check to ensure that retaining hook on upper B-pillar trims -1- is engaged behind lower B-pillar trims -3-.

Specified torques

- ◆ ⇒ [“5.4 Assembly overview - B-pillar trim”, page 246](#)

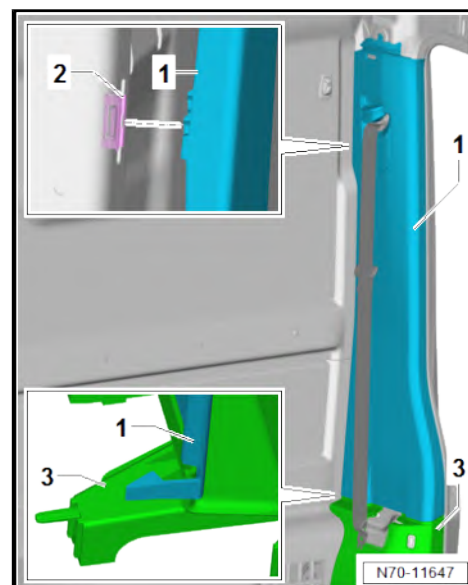


5.11.2 Removing and installing upper B-pillar trim, single cab

Removing

- Remove moulded headliner in driver area ⇒ [page 308](#) .
- Release fasteners -arrows- from body.
- Use wedge - T10383- to lever tether clip -2- out of body mountings.
- Remove upper B-pillar trim -1-.

Install in reverse order of removal, observing the following:


- Remove any clips left in the body mountings using wedge - T10383- , and fit them in the trim for installation.

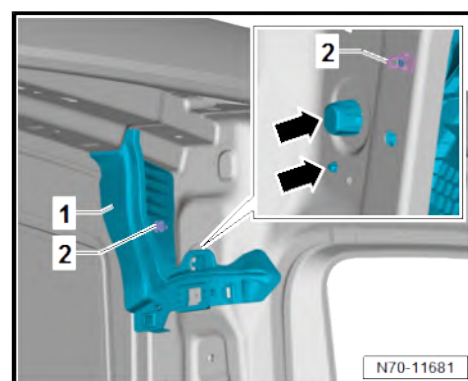

5.11.3 Removing and installing centre B-pillar trim, single cab

Special tools and workshop equipment required

- ◆ Wedges - T10383-

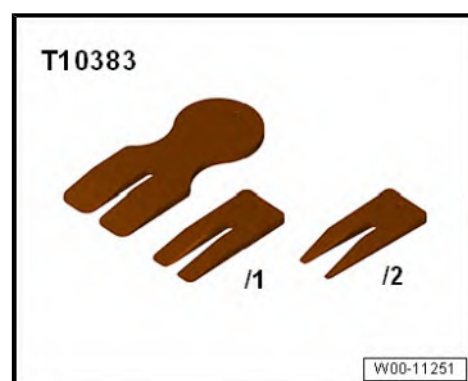





◆ Torque wrench - V.A.G 1783-



Removing

- Remove front belt end fitting ➔ [page 130](#) .
 - Move slide for belt height adjuster to lowest position.
 - Use wedge - T10383- to unclip cap -2- from centre B-pillar trim -1-.
 - Unscrew bolt -3-.
-
- Detach centre B-pillar trim -1- from door seal beading.
 - Use wedge - T10383- to unclip centre B-pillar trim -1- from lower B-pillar trim -4-.
 - Use wedge - T10383- to lever retaining clips -3- in -direction of arrow- out of body mountings starting at bottom.
 - Use wedge - T10383- to unclip centre B-pillar trim -1- from upper B-pillar trim -2-.

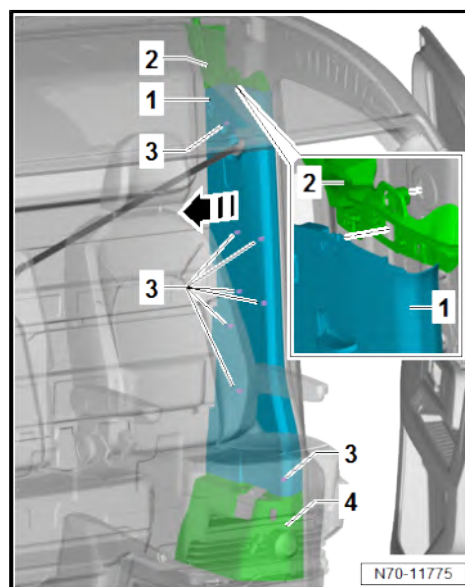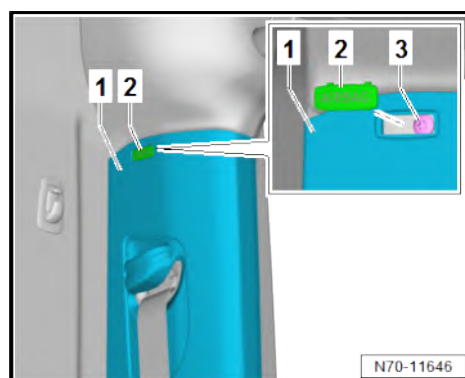




- Guide out belt webbing with latch plate -1- through slide for belt height adjustment -2-.
- Remove centre B-pillar trim -3-.

Installing

Install in reverse order of removal, observing the following:

- Remove any clips left in the body mountings using wedge - T10383- , and fit them in the trim for installation.
- After installing B-pillar trim -3-, check function of belt height adjuster -2-.

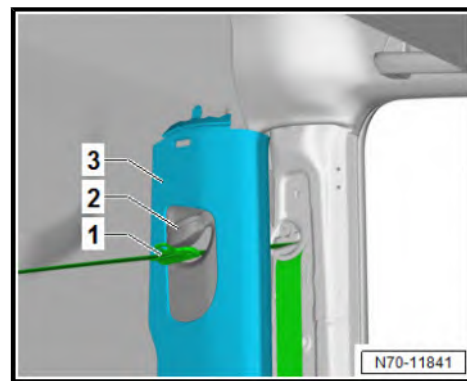

Note

Ensure that belt webbing is not twisted.

Specified torques

- ◆ ⇒ [“5.4 Assembly overview - B-pillar trim”, page 246](#)

5.11.4 Removing and installing lower B-pillar trim

Removing



Note

- ◆ *The description is for vehicles with a partition panel. Adapt accordingly for vehicles without a partition panel.*
- ◆ *The removal and installation procedure on vehicles with a partition panel is carried out via the load compartment. The removal and installation procedure on vehicles without a partition panel is carried out via the passenger compartment.*

Vehicles with PR number K4F (single cab)


- Remove centre B-pillar trims ⇒ [page 270](#) .

Vehicles with PR no. K4A (panel van), K4B (Kombi), K4G (double cab)

- Remove upper B-pillar trim ⇒ [page 270](#) .

Vehicles with K4B (Kombi), K4G (double cab)

Behind lower B-pillar trims -1-, there is a bracket -2- with an additional retainer -arrow-.

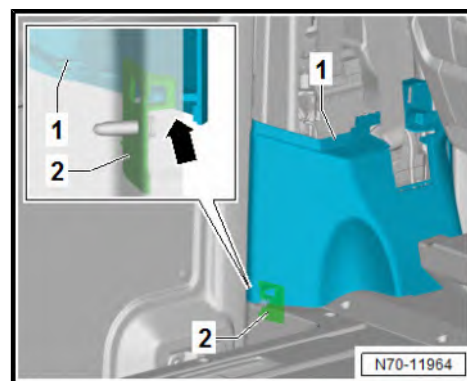




Continued for all vehicles

- If fitted, disconnect electrical connector on interior monitoring switch - E183- -2-.
- Detach bottom B-pillar trim -1- from door seal beading.
- Use wedge - T10383- to lever retaining clips -3- in -direction of arrow- out of body mountings.
- Remove bottom B-pillar trim -1-.

Installing

Install in reverse order of removal, observing the following:

- Remove any clips left in the body mountings using wedge - T10383- , and fit them in the trim for installation.

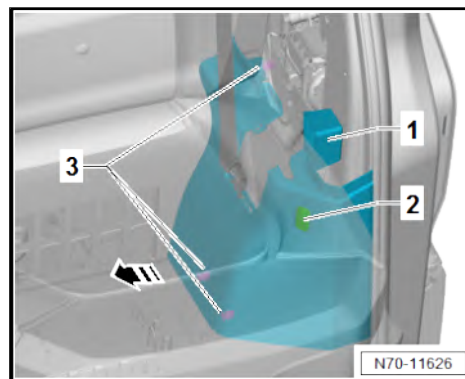

5.11.5 Removing and installing B-pillar cover

Special tools and workshop equipment required

- ♦ Hot-air blower - V.A.G 1416-



Removing

- Remove moulded headliner in driver area ➤ [page 308](#) .

Vehicles with roof compartment

- Remove roof compartment ➤ [page 40](#) .



Continued for all vehicles

- Detach adhesive strip -2-. Heat bonding surface -2- with hot air blower - V.A.G 1416- to do this.
- Take off B-pillar cover -1-.

Installing

Install in reverse order of removal, observing the following:



Note


Component is bonded in the factory with adhesive strips.

- Remove any adhesive residue.
- Thoroughly clean installation area of contaminants.



Note

- ◆ *Do not bond on adhesive strips until immediately before installation.*
- ◆ *Do not touch adhesive surfaces once backing film has been removed.*

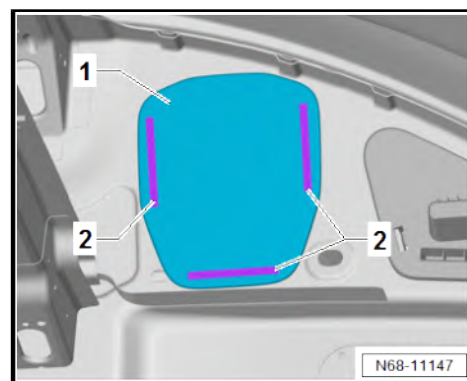

5.11.6 Removing and installing lower B-pillar bracket

Special tools and workshop equipment required

- ◆ Torque wrench - V.A.G 1783-




Removing

- Remove lower B-pillar trim ➔ [page 275](#) .
- Unscrew bolt -2-.
- Detach lower B-pillar bracket -1-.

Installing

Install in reverse order of removal, observing the following:

- ◆ ➔ [“5.4 Assembly overview - B-pillar trim”, page 246](#)

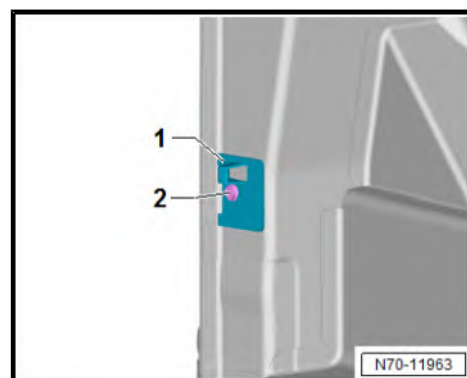


5.12 Removing and installing C-pillar trim

Special tools and workshop equipment required



◆ Wedges - T10383-

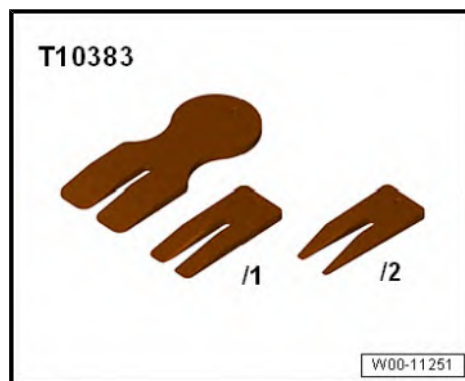

◆ Hot-air blower - V.A.G 1416-



Removing

Side of vehicle without sliding door


- Detach adhesive strip -2-. Heat bonding surface -2- with hot air blower - V.A.G 1416- to do this.
- Use wedge - T10383- to lever clips -4- in -direction of arrow- out of mountings.



Note

Do not damage felt strips -3-.

- Remove C-pillar trim -1-.

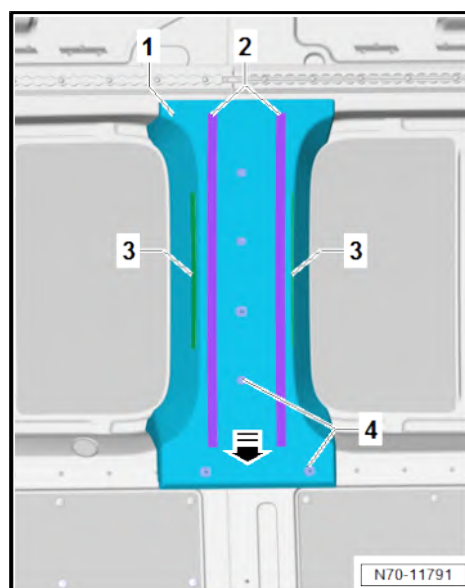



Side of vehicle with sliding door

- Detach adhesive strip -2-. Heat bonding surface -2- with hot air blower - V.A.G 1416- to do this.
- Use wedge - T10383- to lever clips -3- in -direction of arrow- out of mountings.



Note


Do not damage felt strips -4-.

- Remove C-pillar trim -1-.

Installing

Install in reverse order of removal, observing the following:

- Check that felt strip -4- on C-pillar trim is seated correctly and not damaged, renew if necessary ⇒ Electronic parts catalogue (ETKA) or ⇒ webMANTIS for MAN TGE.

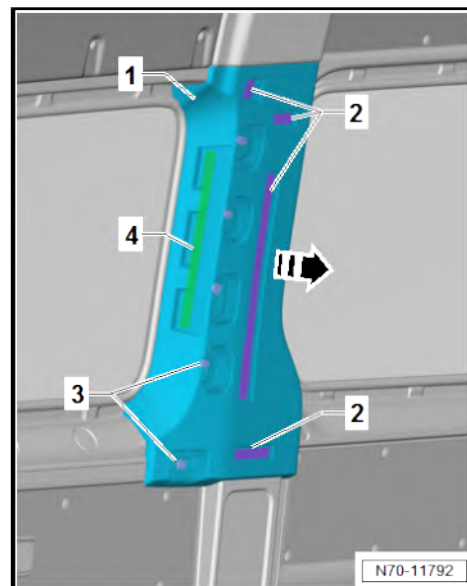

Note

Component is bonded in the factory with adhesive strips.

- Remove any adhesive residue.
- Thoroughly clean installation area of contaminants.



Note

- ◆ *Do not bond on adhesive strips until immediately before installation.*
- ◆ *Do not touch adhesive surfaces once backing film has been removed.*

5.13 Removing and installing side trim

⇒ [“5.13.1 Removing and installing front side trim, on side of vehicle without sliding door, panel van”, page 279](#)

⇒ [“5.13.2 Removing and installing rear side trim, panel van”, page 280](#)

5.13.1 Removing and installing front side trim, on side of vehicle without sliding door, panel van

Special tools and workshop equipment required



- ◆ Torque wrench - V.A.G 1783-



Removing

- If present, remove retaining plates on side panel ⇒ [page 86](#) .

Vehicles with side trim made of wood

- Remove respective tie rail on side panel ⇒ [page 83](#) .

Continued for all vehicles


- Remove clips -2-.
- Unscrew bolts -3-.
- Remove side trims -1-.

Installing

Install in reverse order of removal, observing the following:

Specified torques


- ◆ ⇒ [“5.6 Assembly overview - side trim”, page 250](#)

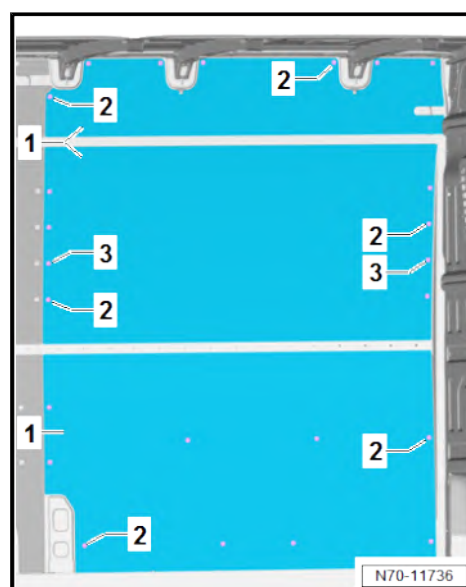

5.13.2 Removing and installing rear side trim, panel van

Special tools and workshop equipment required

- ◆ Torque wrench - V.A.G 1783-

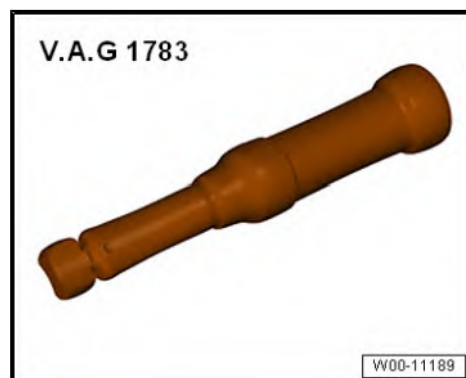



Removing



Note

The description is for vehicles with a short wheelbase. Adapt accordingly for vehicles with a different wheelbase.

- Wing doors completely opened
- If present, remove retaining plates on side panel ➔ [page 86](#) .

Vehicles with side trim made of wood

- Remove respective tie rail on side panel ➔ [page 83](#) .

Vehicles with chock holder

- Remove chock holder ➔ [page 90](#) .

Vehicles with 12-V socket

- Remove cap for 12-V socket ➔ [page 289](#) .

Vehicles with AC/DC converter with socket, 12 V-230 V

- Remove cap for DC/AC converter with socket, 12 V - 230 V ➔ [page 289](#) .

Vehicles with short wheelbase


- Remove clips -2-.
- Unscrew bolts -3-.
- Remove side trims -1-.





Vehicles with medium or long wheelbase

- Remove clips -2-.
- Unscrew bolts -3-.
- Remove side trims -1-.

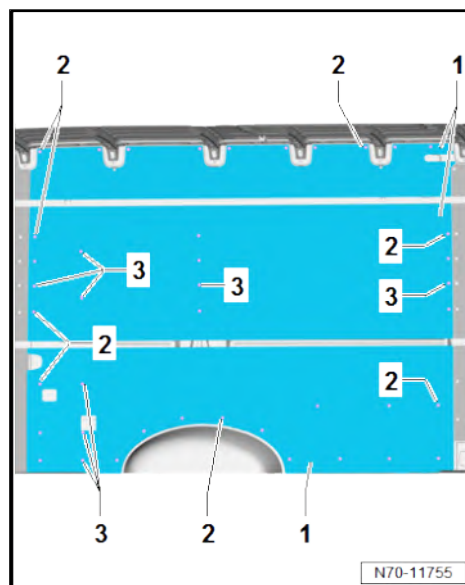

Vehicles with long wheelbase


- Remove clips -2-.
- Unscrew bolts -3-.
- Remove side trims -1-.

Installing

Install in reverse order of removal, observing the following:

Specified torques

- ♦ ⇒ [“5.6 Assembly overview - side trim”, page 250](#)

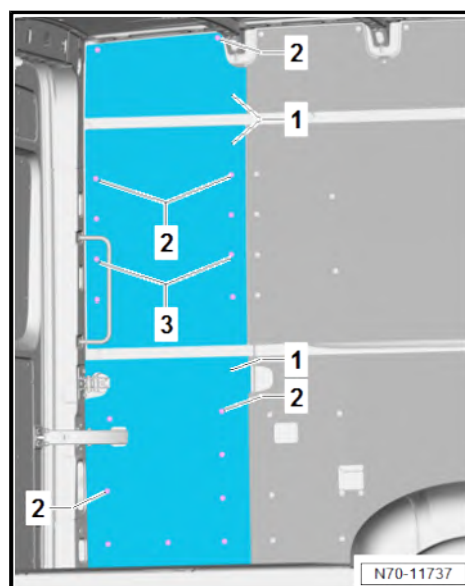

5.14 Removing and installing foot rest

Removing

Right-hand drive vehicles

- Removing right floor covering in driver area ⇒ [page 283](#)

Left-hand drive vehicles

- Remove left floor covering in driver area ⇒ [page 283](#) .




Continued for all vehicles

- Remove clip -5-.
- Fold right floor covering -2- aside to clear foot rest -1-.
- Guide out foot rest -1- from underneath step -3- and lower A-pillar trim -4-.
- Remove foot rest -1-.

Installing

Install in reverse order.

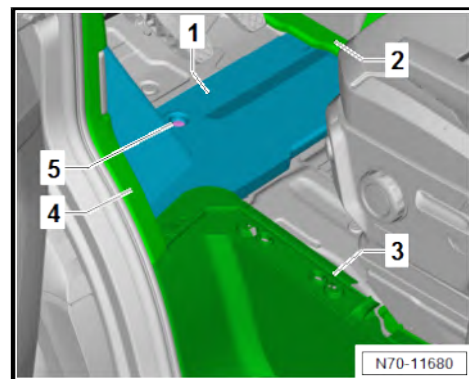

5.15 Removing and installing floor covering

⇒ [“5.15.1 Removing and installing floor covering, on left of driver area”, page 283](#)

⇒ [“5.15.2 Removing and installing floor covering, on right of driver area”, page 283](#)

⇒ [“5.15.3 Removing and installing rear floor covering, double cab”, page 285](#)

⇒ [“5.15.4 Removing and installing floor covering in load compartment, panel van”, page 285](#)

⇒ [“5.15.5 Removing and installing floor covering in passenger compartment, Kombi”, page 288](#)

5.15.1 Removing and installing floor covering, on left of driver area

Removing

Right-hand drive vehicles


- Remove tool kit cover ⇒ [page 76](#) .

Continued for all vehicles

- If present, remove foot mats.
- Remove front step cover ⇒ [page 264](#) .
- Lift up floor covering on left of driver area -1- beneath seat.
- Guide out floor covering on left of driver area -1- from underneath lower A-pillar trim -2-, and remove it.

Installing

Install in reverse order.

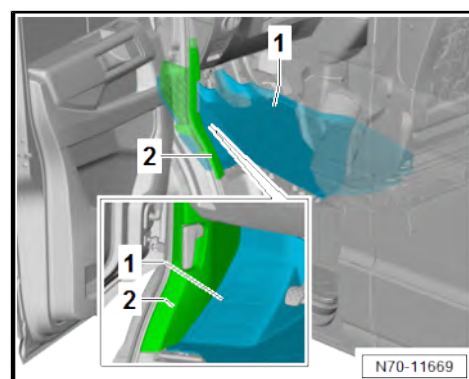

5.15.2 Removing and installing floor covering, on right of driver area

Removing



Note

The removal and installation procedures may have to be modified slightly depending on equipment.

- If present, remove foot mats.
- Remove centre console trim in front footwell ⇒ [page 95](#) .



- Remove parking brake lever with trim ⇒ Brake system; Rep. gr. 46 ; Parking brake; Removing and installing parking brake lever .
- Remove tool kit cover ⇒ [page 76](#) .

Vehicles with individual seat

- Remove seat box for front seat on driver side ⇒ [page 343](#) .
- Remove seat box for front seat on co-driver side
⇒ [page 343](#) .

Vehicles with front passenger bench seat

- Remove bench seat ⇒ [page 343](#) .

Vehicles with auxiliary air heater and/or second heater unit in driver area

- Remove vent ⇒ [page 292](#) .
- Remove footwell floor vent ⇒ Auxiliary heater; Rep. gr. 82 ; Overview of fitting locations - auxiliary air heater; Removing and installing floor vent for auxiliary air heater .
- Remove second heater unit ⇒ Heating, air conditioning; Rep. gr. 80 ; Heater unit; Removing and installing second heater unit .

Continued for all vehicles



Note

Ensure that the floor covering is not torn in the area of the cut-outs.

- Guide out floor covering on right of driver area -1- under lower B-pillar trim -3-.
- Guide out floor covering on right of driver area -1- under step -4-.
- Lift up floor covering on left of driver area -5- at transition to floor covering on right of driver area -1-.
- Guide handbrake cable -2- through floor covering on right of driver area -1-.
- Repeat guiding out procedure on right-hand side of vehicle.
- Guide out floor covering on right of driver area -1- under lower A-pillar trim -6-.

The help of a second mechanic is required for removal.

- Guide floor covering on right of driver area over relay and fuse carrier, and remove it.


Installing

Install in reverse order of removal, observing the following:



Note

The replacement part is supplied with holes cut-out for the seats or seat frames. However, no provision is made for cut-outs for vehicle-specific installations. Any cut-outs required for the specific vehicle must be cut using, for example, the electric cutter - V.A.G 1561A- .

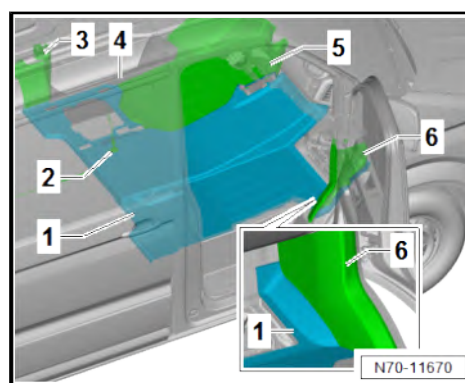




5.15.3 Removing and installing rear floor covering, double cab

Removing

- If present, remove foot mats.
- Remove rear bench seat ➤ [page 387](#) .
- Lift up rear floor covering -1- at transition to floor covering on right of driver area -3-.
- If fitted, guide out rear floor covering -1- at vent for second heater unit.
- Guide out rear floor covering -1- from underneath steps -2-, and remove it.

Installing


Install in reverse order.

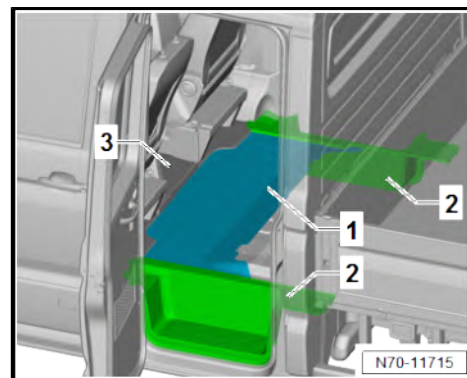

5.15.4 Removing and installing floor covering in load compartment, panel van

Special tools and workshop equipment required

- ◆ Hot-air blower - V.A.G 1416-

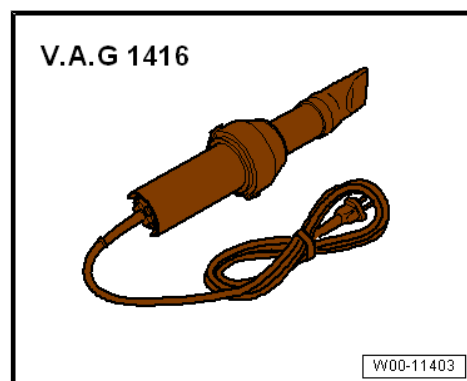

Removing



Note

- ◆ *The description is for vehicles with a short wheelbase. Adapt accordingly for vehicles with a different wheelbase.*
- ◆ *Increased resistance will be encountered when detaching the butyl adhesive sealing cord between the floor covering and the floor panel.*
- Remove fastening ring retainers in floor covering ➤ [page 295](#) .
- Use suitable means to protect body and surrounding components against damage.



- Heat up butyl adhesive sealing cord -3- using hot air blower - V.A.G 1416- .
- Guide front section of floor covering -1- forwards out of middle section of floor covering -2-.



Note

By doing this, butyl adhesive sealing cord -3- becomes detached.

- Remove front section of floor covering -1- towards rear.
- Remove retaining strip of floor covering ⇒ [page 294](#) .
- Remove fastening rings in floor covering ⇒ [page 295](#) .

Vehicles with tie rails on floor



Tie rails -1- are permanently secured to floor covering.

- Unscrew bolts -2-.

Continued for all vehicles

- Wing doors completely opened

The help of a second mechanic is required for removal.

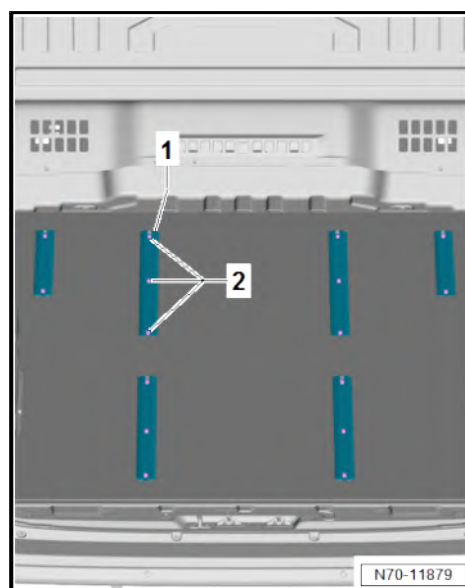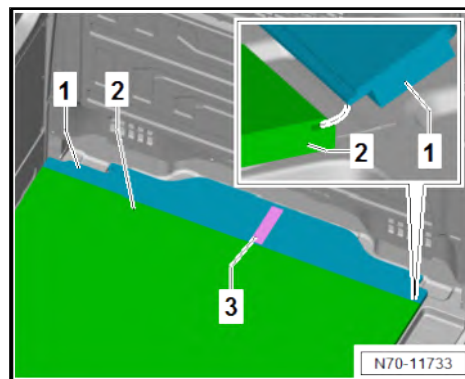




- Separate middle section of floor covering -1- and rear section of floor covering -3- from each other.



Note

By doing this, butyl adhesive sealing cord -2- becomes detached.

- Remove middle section of floor covering -1- towards rear.
- Remove rear section of floor covering -3- upwards from butyl adhesive sealing cord -2-.
- Remove rear section of floor covering -3- towards rear.

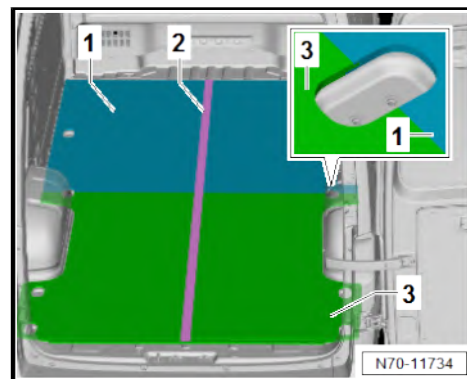

Installing

Install in reverse order of removal, observing the following:



Note

The replacement part is supplied with holes cut-out for the tie rails or fastening rings. However, no provision is made for cut-outs for vehicle-specific installations. Any cut-outs required for the specific vehicle must be cut using, for example, the electric cutter - V.A.G 1561A-.

- Remove any adhesive residue.
- Thoroughly clean installation area of contaminants.




Note

- ◆ *Butyl adhesive sealing cord is bonded to centre seam of floor panel.*
- ◆ *Short wheelbase: 3000 mm length.*
- ◆ *Medium wheelbase: 3850 mm length.*
- ◆ *Long wheelbase: 4400 mm length.*
- ◆ *Do not bond butyl adhesive sealing cord until immediately before assembly.*
- ◆ *Do not touch adhesive surfaces once backing film has been removed.*

- Bond butyl adhesive sealing cord -1- to centre seam of floor panel as shown.

Specified torques

Component	Specified torque
Bolts -2- for tie rails on floor	20 Nm

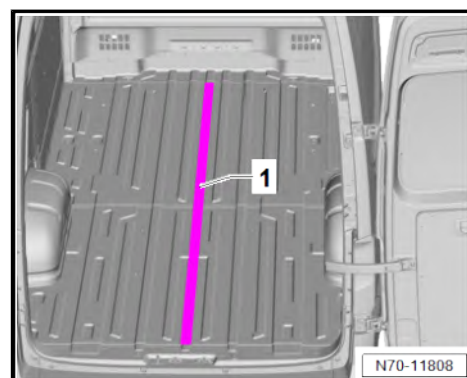



5.15.5 Removing and installing floor covering in passenger compartment, Kombi

Removing



Note

The description is for vehicles with a short wheelbase. Adapt accordingly for vehicles with a different wheelbase.

- Remove retaining strip of floor covering ⇒ [page 294](#) .
- Remove shelf with tie rails in floor covering ⇒ [page 295](#) .
- Remove individual seats in passenger compartment ⇒ [page 387](#) .
- Remove seat rails of single seats ⇒ [page 87](#) .

Vehicles with auxiliary air heater and/or second heater unit in driver area

- Remove vent ⇒ [page 292](#) .
- Remove footwell floor vent ⇒ Auxiliary heater; Rep. gr. 82 ;
Overview of fitting locations - auxiliary air heater; Removing and installing floor vent for auxiliary air heater .

Vehicles with high floor

- Remove rear step trim of sliding door ⇒ [page 264](#) .

Continued for all vehicles

- Use suitable means to protect body and surrounding components against damage.
- Wing doors completely opened

The help of a second mechanic is required for removal.

- Remove floor covering -1- backwards out of vehicle.


Installing

Install in reverse order of removal, observing the following:



Note

The replacement part is supplied with holes cut-out for the seats and seat rails. However, no provision is made for cut-outs for vehicle-specific installations. Any cut-outs required for the specific vehicle must be cut using, for example, the electric cutter - V.A.G 1561A- .

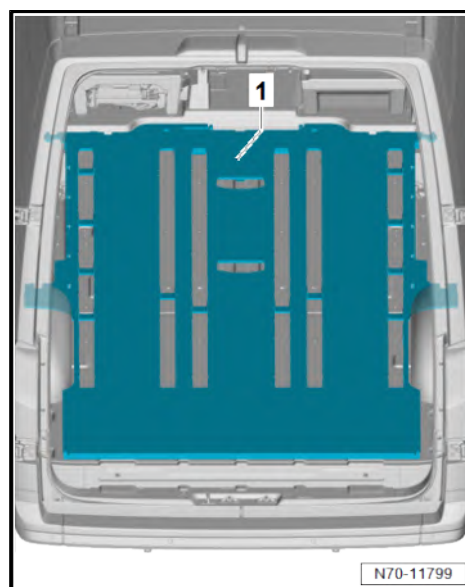


5.16 Removing and installing loudspeaker trim

Special tools and workshop equipment required



◆ Wedges - T10383-

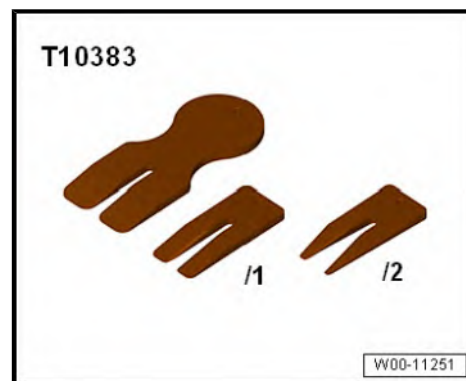

Removing

- Use wedge - T10383- to lever loudspeaker trim -1- out of side trim -2-.


Loudspeaker holder

The loudspeaker holder is removed together with the rear bass loudspeaker -R15- / -R17- .

- Removing and installing rear bass loudspeaker -R15- / -R17-
⇒ Communication; Rep. gr. 91 ; Sound system; Removing and installing rear bass loudspeaker -R15- / -R17- .

Installing

Install in reverse order.

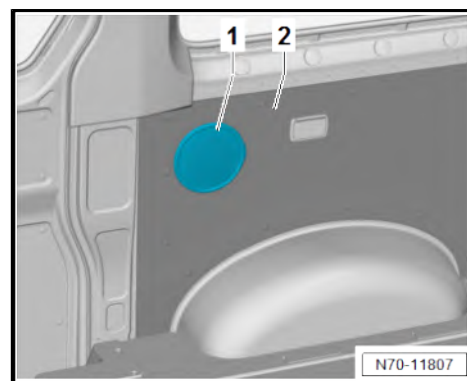

5.17 Removing and installing cap

⇒ ["5.17.1 Removing and installing cap on side", page 289](#)

⇒ ["5.17.2 Removing and installing cap, 12-V socket", page 290](#)


⇒ ["5.17.3 Removing and installing cap, interior light switch E317", page 291](#)

⇒ ["5.17.4 Removing and installing cap, interior monitoring sensor 3 G593", page 291](#)

5.17.1 Removing and installing cap on side

Special tools and workshop equipment required


◆ Wedges - T10383-

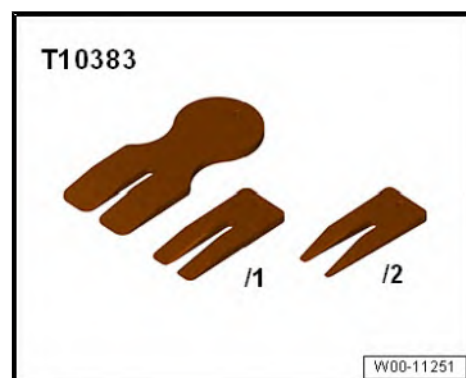



Removing

- Use wedge - T10383- to unclip cap -1- from body mounting.
- Use wedge - T10383- to unclip cap -2- from body mounting.

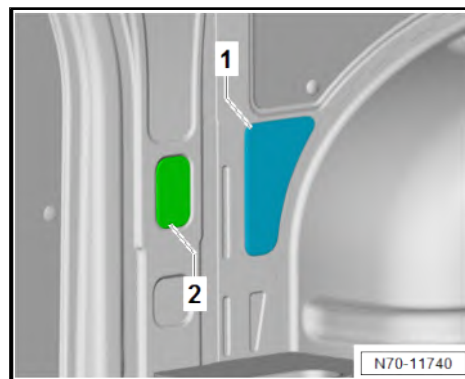


Vehicles with PR number K4B (Kombi)

- Use wedge - T10383- to unclip ashtray -1- from side trim.
- Remove ashtray installation frame -2- from ashtray -1-.

Installing


Install in reverse order.

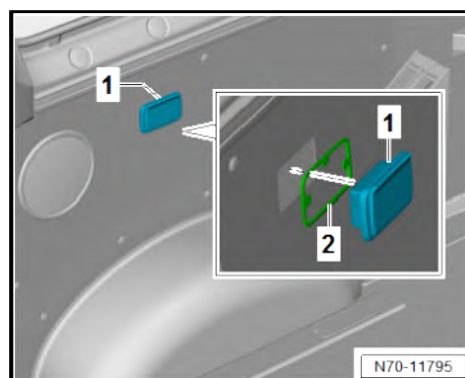

5.17.2 Removing and installing cap, 12-V socket

Special tools and workshop equipment required

- ♦ Wedges - T10383-

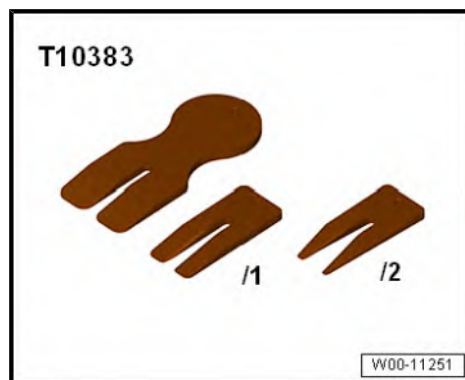

Removing



Note

The description is for the cap on the D-pillar. The caps on the other pillars are removed in basically the same way.

Depending on the equipment, the following 12-V sockets are installed:


- ♦ 12-V socket 4 - U20-
- ♦ 12-V socket 5 - U26-
- ♦ 12-V socket 6 - U33-
- Switch off ignition and all electrical consumers.



- Withdraw ignition key.
- Use wedge - T10383- to unclip cap -1-.
- Separate connector -3-.
- Remove 12-V socket -2- ⇒ Electrical system; General information; Rep. gr. 96 ; 12-V socket ; Removing and installing 12-V socket .
- Remove cap -1-.

Installing


Install in reverse order.

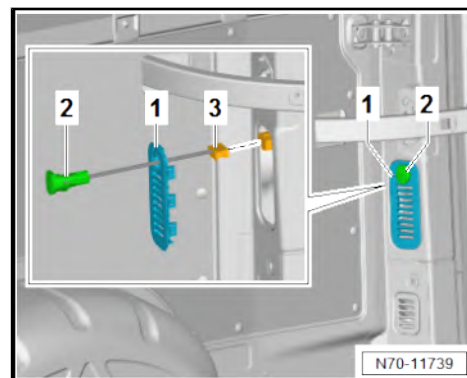

5.17.3 Removing and installing cap, interior light switch - E317-

Special tools and workshop equipment required

- ◆ Wedges - T10383-

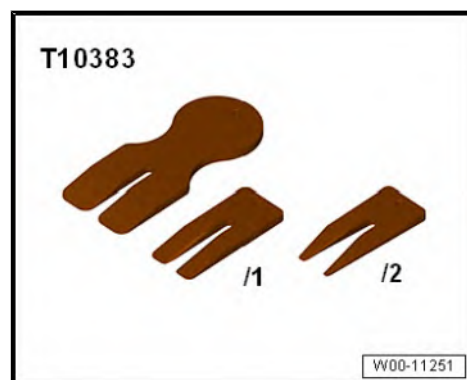


Removing

- Switch off ignition and all electrical consumers.
- Withdraw ignition key.
- Use wedge - T10383- to unclip cap -1-.
- Separate connector -3-.
- Remove interior light switch - E317- -2- ⇒ Electrical system; Rep. gr. 96 ; Controls; Removing and installing interior light switch - E317- .
- Remove cap -1-.

Installing

Install in reverse order.

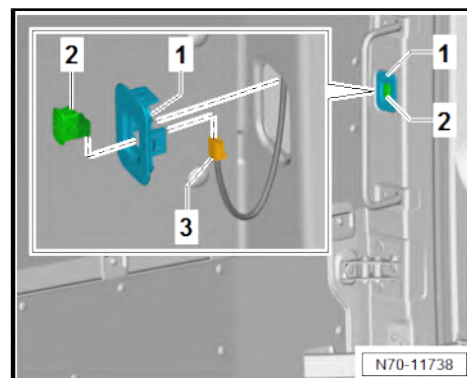


5.17.4 Removing and installing cap, interior monitoring sensor 3 - G593-

Special tools and workshop equipment required



◆ Wedges - T10383-

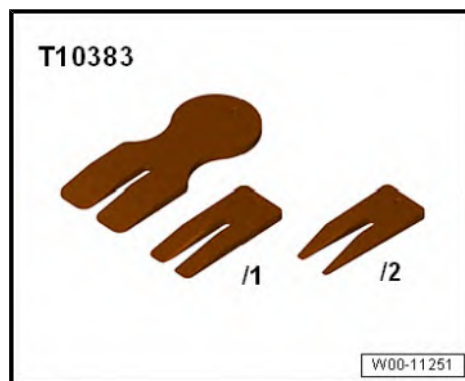


Removing

- Switch off ignition and all electrical consumers.
- Withdraw ignition key.
- Use wedge - T10383- to unclip cap -1-.
- Separate connector -2-.
- Remove cap -1-.

Installing


Install in reverse order.

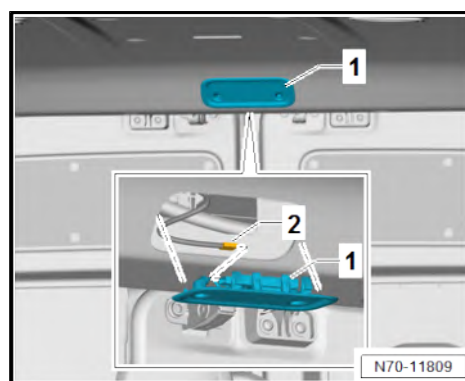


5.18 Removing and installing vents

Special tools and workshop equipment required

◆ Wedges - T10383-

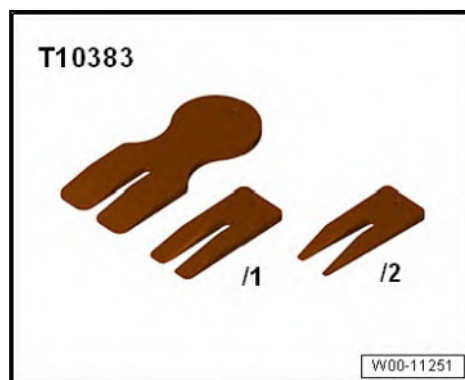

◆ Torque wrench - V.A.G 1783-

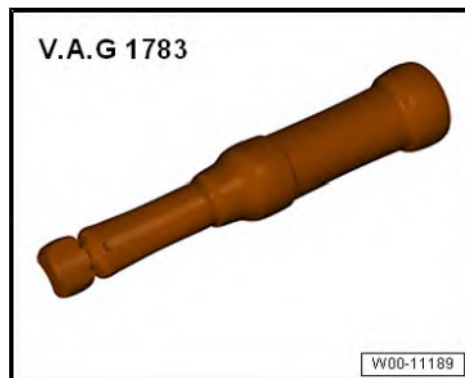

Removing

- Remove handbrake lever trims ➔ [page 49](#) .



Vehicles with front passenger bench seat


- Remove bench seat ➤ [page 343](#) .

Vehicles with partition

- Remove partition panel ➤ [page 78](#) .


Vehicles with PR no. K4A (panel van) or low floor

- Unscrew bolts -3-.
- Use wedge - T10383- to lever retaining clips -2- out of body mountings.
- Remove vent -1-.

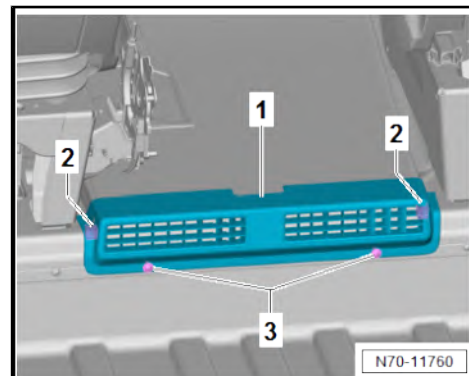

Vehicles with PR no. K4G (double cab) or high floor

- Use wedge - T10383- to lever retaining clips -2- out of body mountings.
- Remove vent -1-.

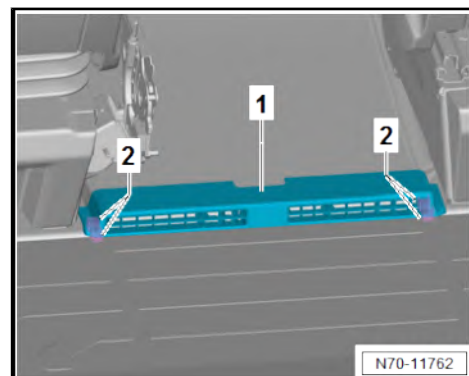

Vehicles with PR number K4B (Kombi)


- Unscrew bolts -2-.
- Remove vent -1-.

Installing

Install in reverse order of removal, observing the following:

Specified torques

- ◆ ➤ [“5.7 Assembly overview - foot rest and floor covering”, page 260](#)

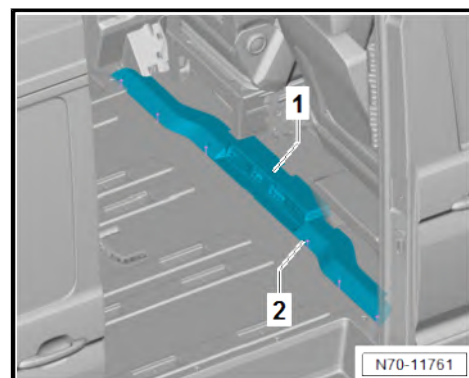

5.19 Removing and installing partition panel trim


Removing

- Remove left B-pillar trim ➤ [page 270](#) .
- If fitted, remove partition panel coat hook ➤ [page 86](#) .



Vehicles with high roof

- Unclip clips -3-.
- Remove upper partition panel trim -1- from partition panel -2-.


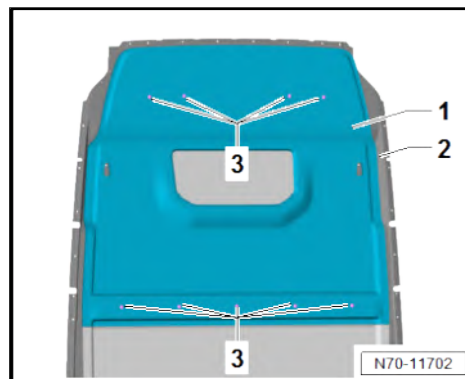


Vehicles with flat roof

- Unclip clips -4-.
- Detach adhesive strip -3-.
- Remove upper partition panel trim -1- from partition panel -2-.

Lower partition panel trim

- Remove partition panel ⇒ [page 78](#) .
- Unclip clips -3-.
- Detach adhesive strip -4-.
- Guide out lower partition panel trim -1- downwards from upper partition panel trim.
- Remove lower partition panel trim -1- from partition panel -2-.

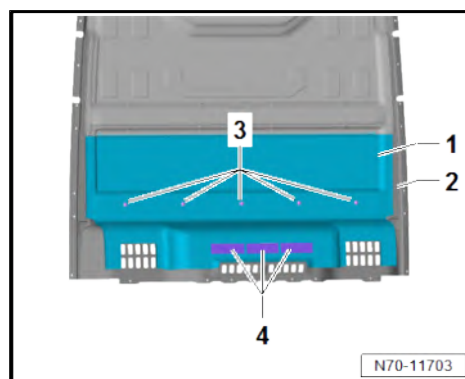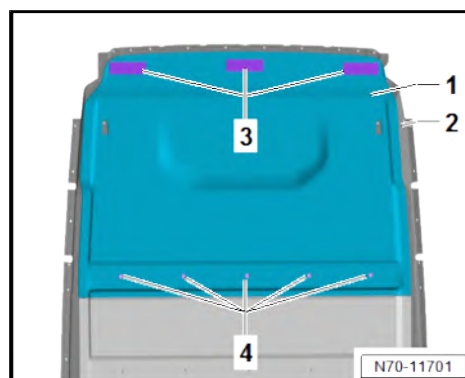

Installing

Install in reverse order of removal, observing the following:



Note

Component is bonded in the factory with adhesive strips.

- Remove any adhesive residue.
- Thoroughly clean installation area of contaminants.



Note


- ◆ *Do not bond on adhesive strips until immediately before installation.*
- ◆ *Do not touch adhesive surfaces once backing film has been removed.*

5.20 Removing and installing retaining strip

Special tools and workshop equipment required




- ◆ Torque wrench - V.A.G 1783-

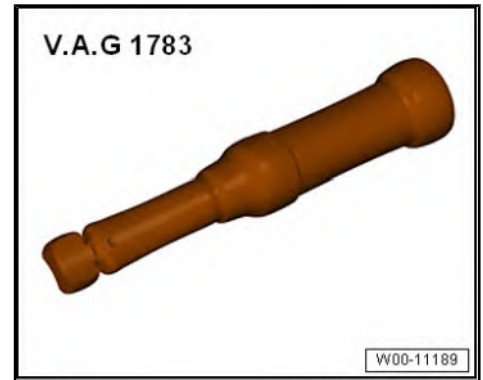

Removing

Vehicles with low floor

- Unscrew bolts -2-.
- Remove retaining strip -1-.

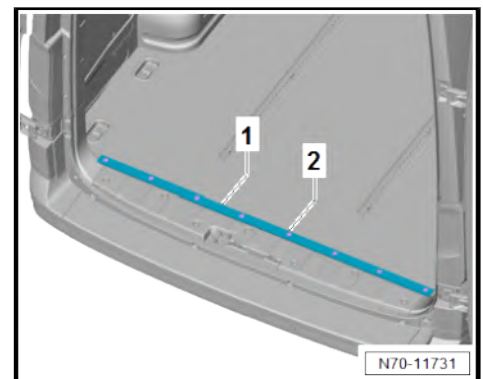

Vehicles with high floor


- Unscrew bolts -2-.
- Remove retaining strip -1-.

Installing

Install in reverse order of removal, observing the following:

Specified torques

- ◆ ⇒ ["5.7 Assembly overview - foot rest and floor covering", page 260](#)

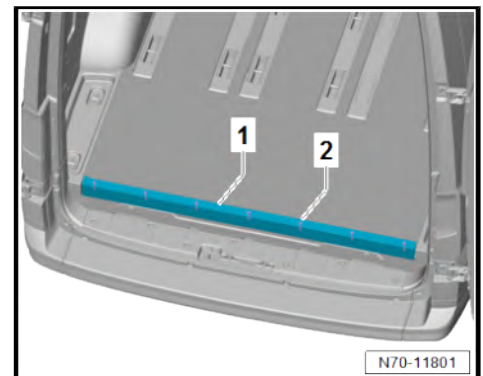

5.21 Removing and installing fastening rings

⇒ ["5.21.1 Removing and installing fastening rings", page 295](#)

⇒ ["5.21.2 Removing and installing fastening ring holder", page 297](#)

5.21.1 Removing and installing fastening rings

Special tools and workshop equipment required



- ◆ Torque wrench - V.A.G 1331-



Removing




Note

- ◆ *Removal and installation are described for the rear left fastening rings. The removal and installation procedure for the remaining fastening rings is basically the same.*
- ◆ *From calendar week 14/2018 made of plastic with two additional spacer sleeves*

Vehicles with PR number K4A (panel van)

- Unscrew bolts -2-.
- Remove fastening rings -1-.
- Remove fastening ring covers -3-.

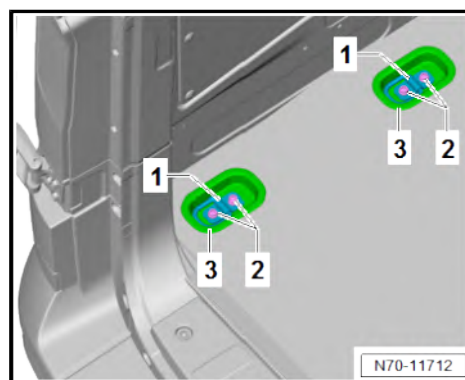

Vehicles with PR number K4B (Kombi)


- Unscrew bolts -3-.
- Remove fastening rings -2-.
- Remove fastening ring shelf -1-.

Installing

Install in reverse order of removal, observing the following:

Specified torques

- ◆ ⇒ [“5.7 Assembly overview - foot rest and floor covering”, page 260](#)

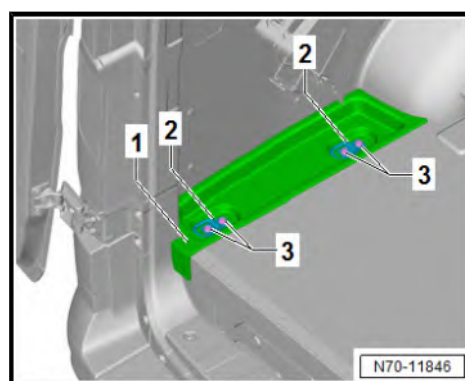




5.21.2 Removing and installing fastening ring holder

Removing

- Remove front fastening ring ➔ [page 295](#) .
- Remove fastening ring holder -1-.

Installing

Install in reverse order.

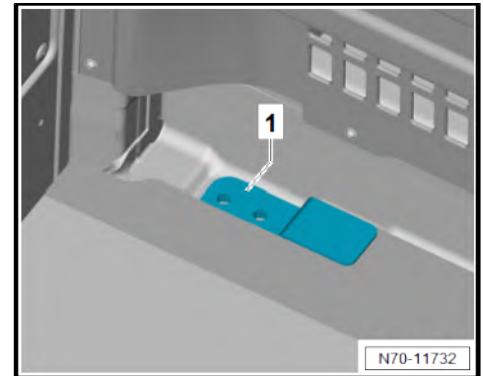

5.22 Removing and installing lock carrier trim

Special tools and workshop equipment required


- ◆ Torque wrench - V.A.G 1783-



Removing


Version 1

- Unscrew bolts -2-.
- Remove lock carrier trim -1-.

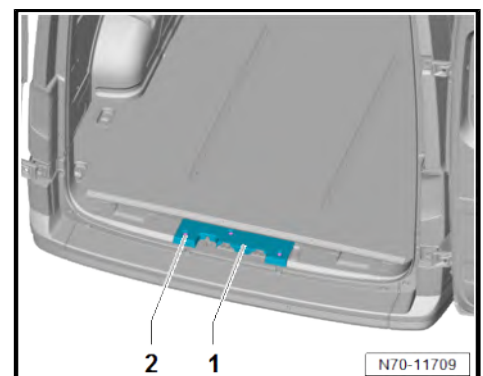

Version 2

- Unclip spare wheel spindle cover -1- from lock carrier trim -2-.

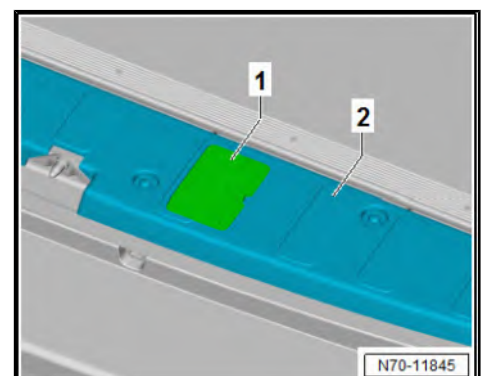




- Unscrew bolts -2-.
- Remove lock carrier trim -1-.

Installing

Install in reverse order of removal, observing the following:

Specified torques


- ♦ ⇒ [“5.7 Assembly overview - foot rest and floor covering”, page 260](#)

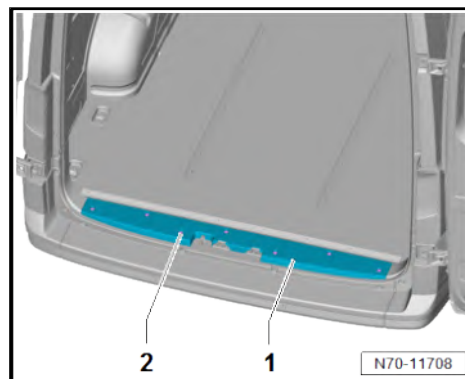

5.23 Removing and installing wheel housing lining

Special tools and workshop equipment required

- ♦ Hot-air blower - V.A.G 1416-

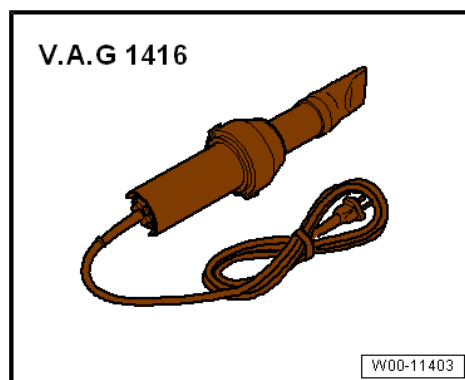

Removing

Vehicles with floor covering in load compartment or passenger compartment

- Remove rear floor covering ⇒ [page 283](#) .

Vehicles with side trim made of wood

- Remove respective rear lower side trim ⇒ [page 279](#) .



Continued for all vehicles

- Detach adhesive strip -2-. Heat bonding surfaces -2- with hot air blower - V.A.G 1416- to do this.
- Remove wheel housing liner -1-.

Installing

Install in reverse order of removal, observing the following:



Note


Component is bonded in the factory with adhesive strips.

- Remove any adhesive residue.
- Thoroughly clean installation area of contaminants.



Note


- ◆ *Do not bond on adhesive strips until immediately before installation.*
- ◆ *Do not touch adhesive surfaces once backing film has been removed.*

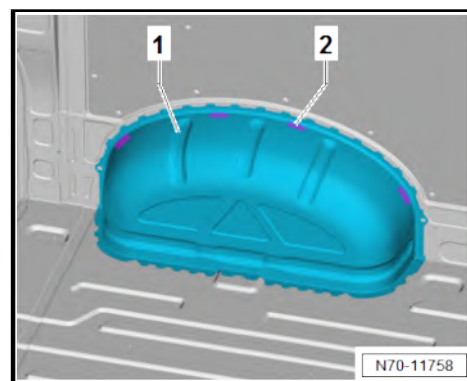

5.24 Removing and installing gap cover

Special tools and workshop equipment required


- ◆ Wedges - T10383-

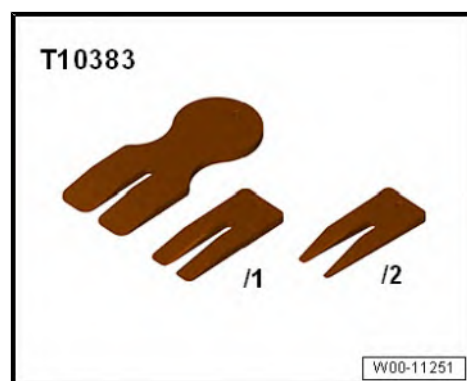

Removing


Gap cover of side panel

- Use wedge - T10383- to lever clips -2- in -direction of arrow- out of body mountings.
- Remove side panel gap cover -1-.

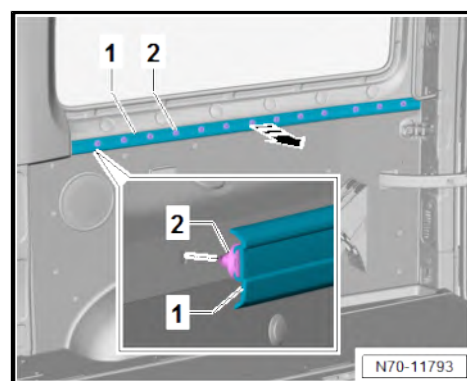



- Use wedge - T10383- to lever side panel gap cover -1- in -direction of arrow- out of body mounting.

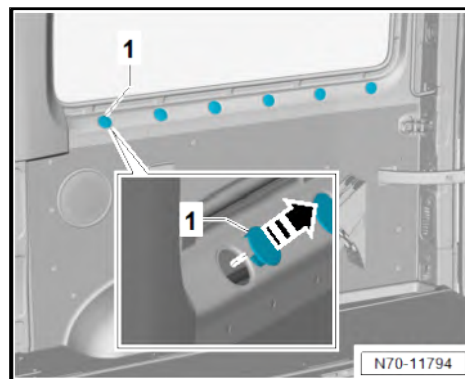


Window frame gap cover

- Remove window frame gap cover -1- from body mounting.

Installing

Install in reverse order.

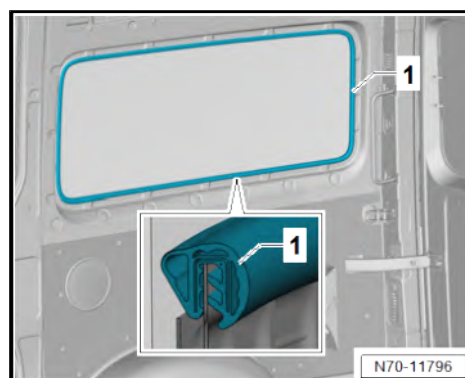



6 Roof trims

⇒ [“6.1 Overview of fitting locations - roof trim”, page 301](#)

⇒ [“6.2 Assembly overview - roof end strip”, page 302](#)

⇒ [“6.3 Assembly overview - moulded headliner”, page 303](#)

⇒ [“6.4 Removing and installing roof end strip”, page 306](#)

⇒ [“6.5 Removing and installing moulded headlining”, page 308](#)

6.1 Overview of fitting locations - roof trim



Note

The description is for vehicles with different roof and equipment versions. Any other versions are similar.

1 - Moulded headliner

- ☐ Driver area
- ☐ Vehicles with PR number K4F (single cab)
- ☐ Depending on equipment as flat roof with storage compartment
- ☐ Assembly overview
⇒ [page 303](#)
- ☐ Removing and installing
⇒ [page 308](#)

2 - Moulded headliner


- ☐ Rear
- ☐ Vehicles with PR number K4G (double cab)
- ☐ Assembly overview
⇒ [page 303](#)
- ☐ Removing and installing
⇒ [page 308](#)

3 - Moulded headliner

- ☐ Front
- ☐ Driver area
- ☐ Vehicles with PR number K4G (double cab)
- ☐ Depending on equipment without storage compartment
- ☐ Assembly overview
⇒ [page 303](#)
- ☐ Removing and installing
⇒ [page 308](#)

4 - Moulded headliner

- ☐ Rear
- ☐ Passenger compartment
- ☐ Vehicles with PR number K4A (panel van)
- ☐ Vehicles with PR number K4B (Kombi)
- ☐ Assembly overview ⇒ [page 303](#)
- ☐ Removing and installing ⇒ [page 308](#)

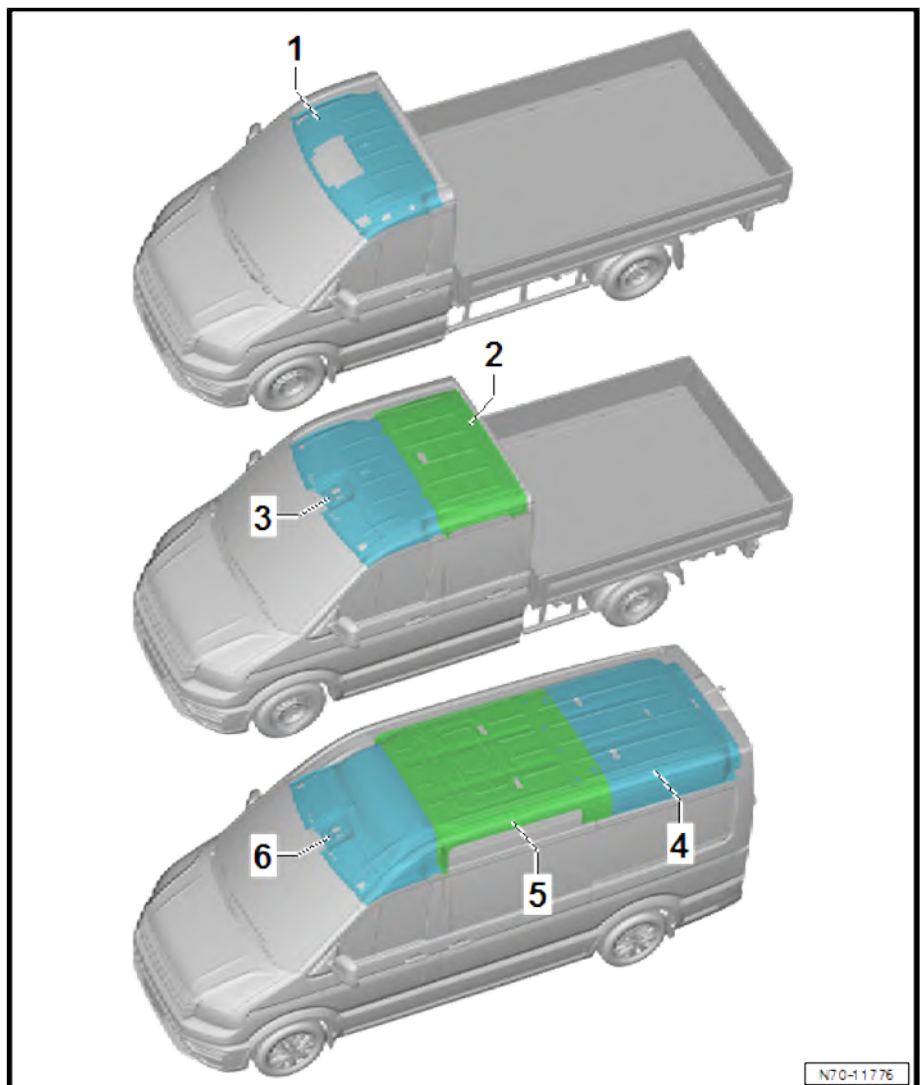

N70-11776



5 - Moulded headliner

- ☐ Front
- ☐ Passenger compartment
- ☐ Vehicles with PR number K4A (panel van)
- ☐ Vehicles with PR number K4B (Kombi)
- ☐ Assembly overview ➔ [page 303](#)
- ☐ Removing and installing ➔ [page 308](#)

6 - Moulded headliner

- ☐ Front
- ☐ Driver area
- ☐ Vehicles with PR number K4A (panel van)
- ☐ Vehicles with PR number K4B (Kombi)
- ☐ Depending on equipment as high roof without storage compartment
- ☐ Assembly overview ➔ [page 303](#)
- ☐ Removing and installing ➔ [page 308](#)

6.2 Assembly overview - roof end strip

1 - Roof end strip

- ☐ Vehicles without second evaporator housing on roof
- ☐ Vehicles without moulded headliner in passenger compartment
- ☐ Removing and installing ➔ [page 306](#)

2 - Bolts

- ☐ Qty. 6
- ☐ 3.5 Nm

3 - Roof end strip


- ☐ Top
- ☐ Vehicles with second evaporator housing on roof
- ☐ Vehicles without moulded headliner in passenger compartment
- ☐ Removing and installing ➔ [page 306](#)

4 - Bolts

- ☐ Qty. 6
- ☐ 3.5 Nm

5 - Roof end strip

- ☐ Bottom
- ☐ Vehicles with second evaporator housing on roof
- ☐ Removing and installing ➔ [page 306](#)

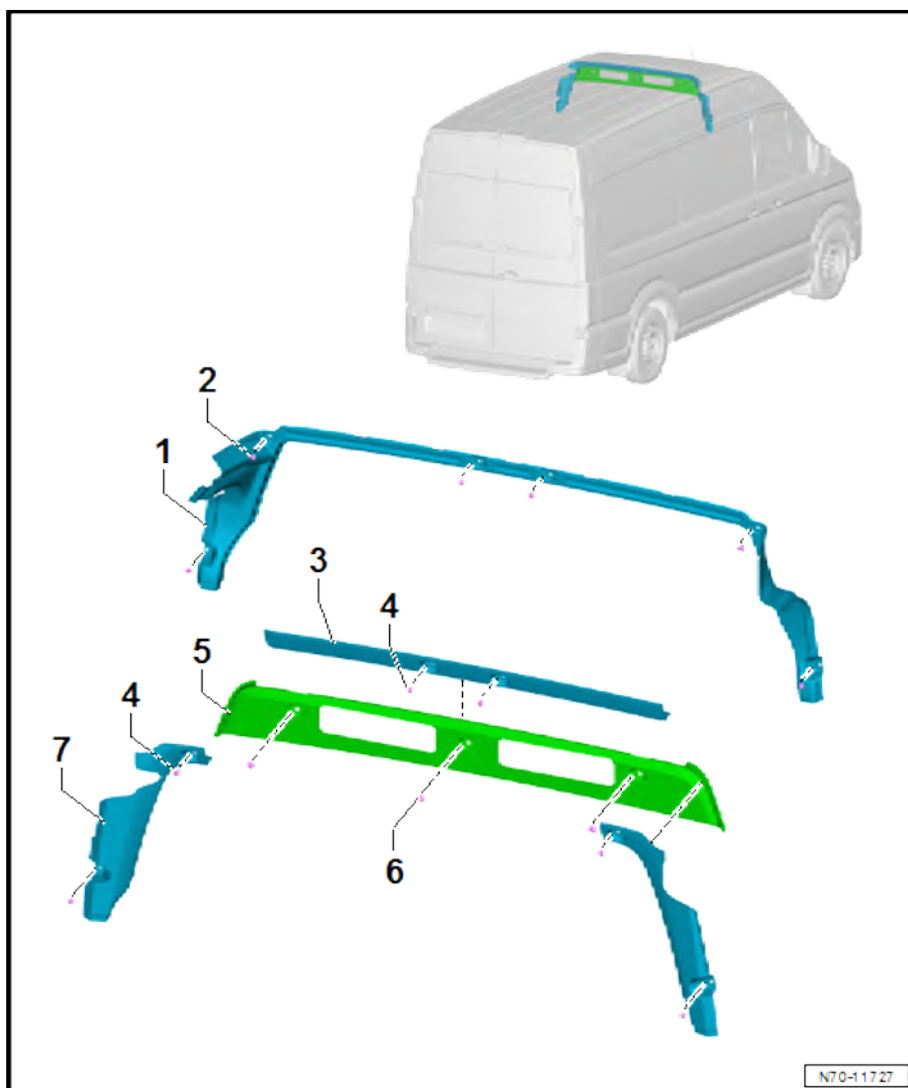



6 - Clip

- ☐ Qty. 3
- ☐ Renew any damaged or deformed clips.

7 - Roof end strips

- ☐ On side
- ☐ Vehicles with second evaporator housing on roof
- ☐ Vehicles without moulded headliner in passenger compartment
- ☐ Qty. 2
- ☐ Removing and installing ⇒ [page 306](#)

6.3 Assembly overview - moulded headliner

Assembly overview - moulded headliner, driver area
⇒ [page 303](#)

Assembly overview - moulded headliner, passenger compartment, vehicles with flat roof ⇒ [page 305](#)

Assembly overview - moulded headliner, passenger compartment, vehicles with high roof ⇒ [page 305](#)

Assembly overview - moulded headliner, driver area



Note

The description is for vehicles with different roof and equipment versions. Any other versions are similar.



1 - Moulded headliner

- ☐ Vehicles with PR number K4A (panel van)
- ☐ Vehicles with PR number K4B (Kombi)
- ☐ Depending on equipment as high roof without storage compartment
- ☐ Removing and installing ⇒ [page 308](#)

2 - Mountings

- ☐ Qty. 2

3 - Mountings

- ☐ Qty. 2

4 - Bolts

- ☐ Qty. 2
- ☐ 3.5 Nm

5 - Caps

- ☐ Qty. 2

6 - Clip

- ☐ Depending on equipment
- ◆ Vehicles without second evaporator housing on roof: qty. 4
- ◆ Vehicles with second evaporator housing on roof: qty. 3
- ☐ Renew any damaged or deformed clips.

7 - Clip

- ☐ Qty. 2
- ☐ Renew any damaged or deformed clips.

8 - Retaining clips

- ☐ Qty. 2
- ☐ Renew any damaged or deformed retaining clips.

9 - Moulded headliner


- ☐ Vehicles with PR number K4A (panel van)
- ☐ Vehicles with PR number K4B (Kombi)
- ☐ Vehicles with PR number K4F (single cab)
- ☐ Depending on equipment as flat roof with storage compartment
- ☐ Removing and installing ⇒ [page 308](#)

10 - Clip

- ☐ Qty. 7
- ☐ Renew any damaged or deformed clips.

11 - Moulded headliner

- ☐ Rear
- ☐ Vehicles with PR number K4G (double cab)
- ☐ Removing and installing ⇒ [page 308](#)

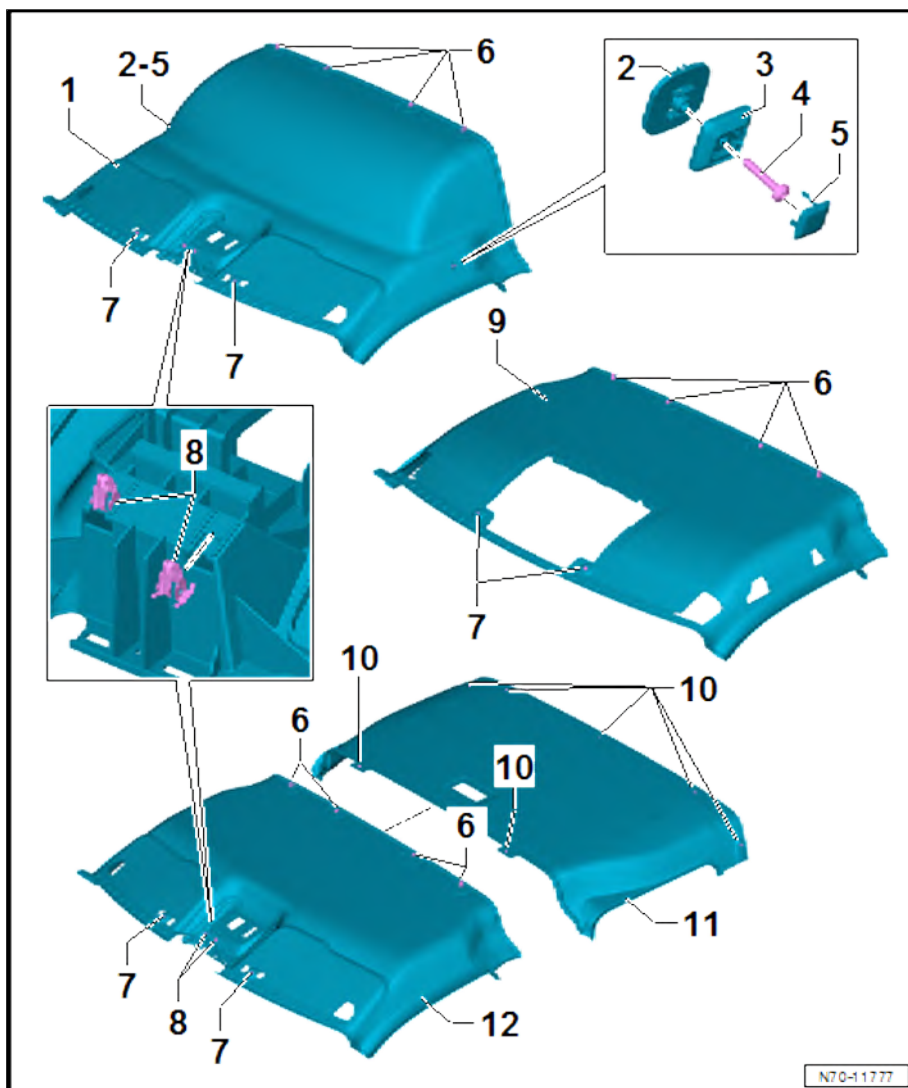



12 - Moulded headliner

- ☐ Front
- ☐ Vehicles with PR number K4G (double cab)
- ☐ Depending on equipment without storage compartment
- ☐ Removing and installing ➔ [page 308](#)

Assembly overview - moulded headliner, passenger compartment, vehicles with flat roof

1 - Moulded headliner

- ☐ Front
- ☐ Removing and installing
➔ [page 308](#)

2 - Clip


- ☐ Qty. 12
- ☐ Renew any damaged or deformed clips.

3 - Moulded headliner

- ☐ Rear
- ☐ Removing and installing
➔ [page 308](#)

4 - Clip

- ☐ Qty. 18
- ☐ Renew any damaged or deformed clips.

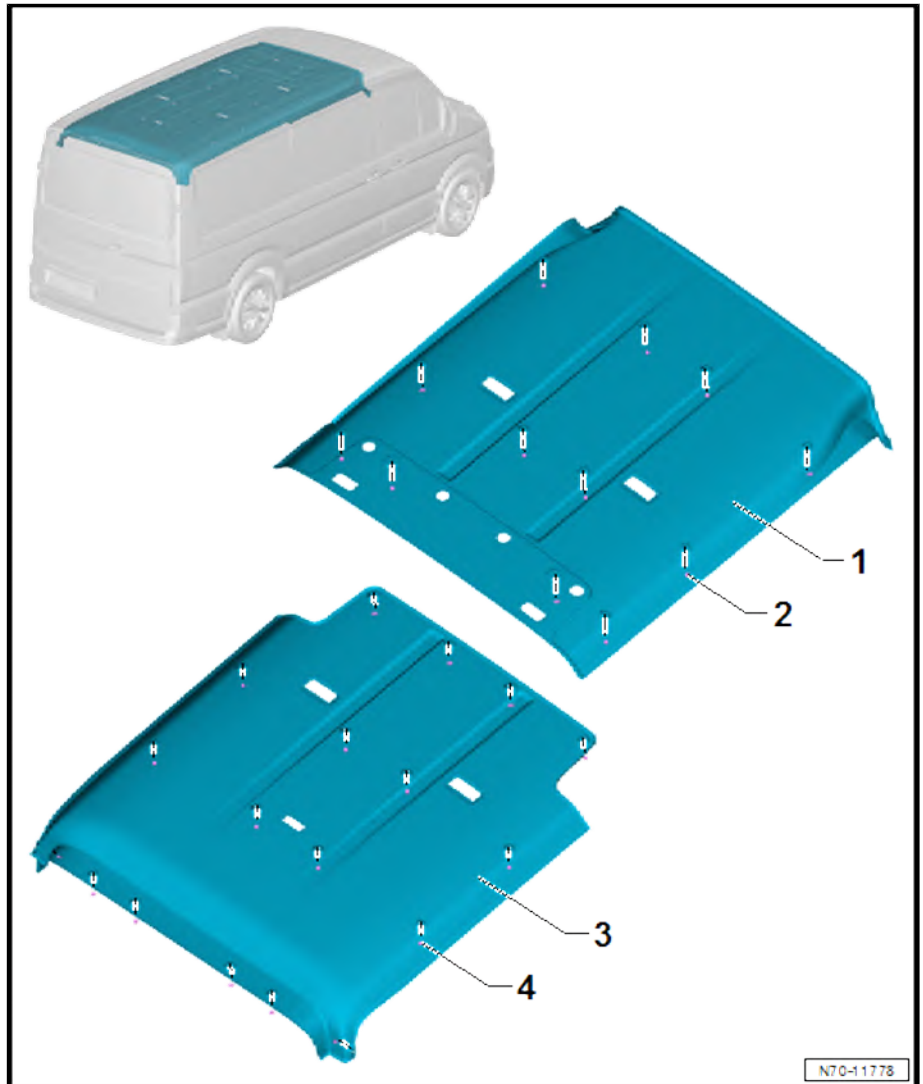

Assembly overview - moulded headliner, passenger compartment, vehicles with high roof



1 - Moulded headliner

- ☐ Front
- ☐ Removing and installing
⇒ [page 308](#)

2 - Clip

- ☐ Depending on equipment
- ◆ Without sliding door: qty. 14
- ◆ 1 sliding door: qty. 12
- ◆ 2 sliding doors: qty 10
 - ☐ Renew any damaged or deformed clips.

3 - Moulded headliner

- ☐ Centre
- ☐ Only medium and long wheelbase
- ☐ Removing and installing
⇒ [page 308](#)

4 - Clip


- ☐ Qty. 10
- ☐ Renew any damaged or deformed clips.

5 - Moulded headliner

- ☐ Rear
- ☐ Removing and installing
⇒ [page 308](#)

6 - Clip

- ☐ Qty. 24
- ☐ Renew any damaged or deformed clips.

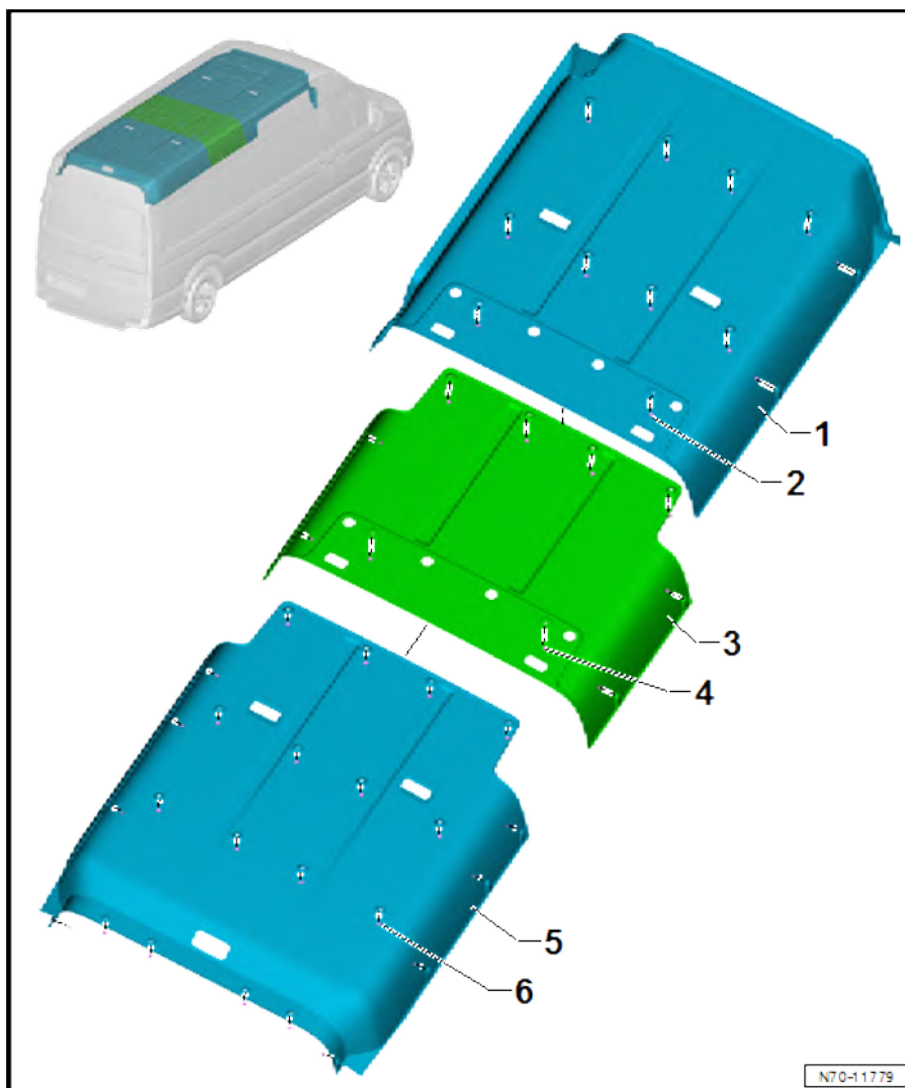

6.4 Removing and installing roof end strip

⇒ [“6.4.1 Removing and installing upper roof end strip”, page 306](#)

⇒ [“6.4.2 Removing and installing lower roof end strip, vehicles with second evaporator housing”, page 307](#)

6.4.1 Removing and installing upper roof end strip


Removing

- Remove upper B-pillar trims ⇒ [page 270](#) .



Version 1

- Unscrew bolts -3-.
- Pull upper roof end strip -1- towards rear out of moulded headliner in driver area -arrow-.
- Remove upper roof end strip -1-.
- Remove side roof end strips -2- towards rear.

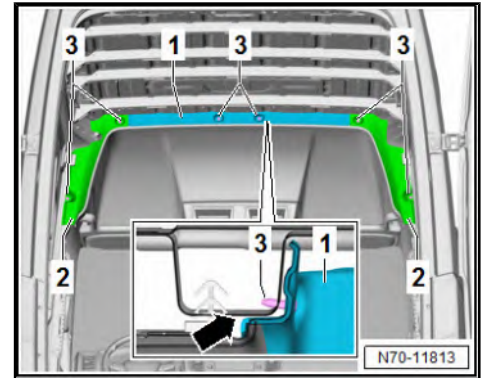

Version 2


- Unscrew bolts -2-.
- Pull upper roof end strip -1- towards rear out of moulded headliner in driver area -arrow-.
- Remove upper roof end strip -1-.

Installing

Install in reverse order of removal, observing the following:

Specified torques

- ◆ ⇒ [“6.2 Assembly overview - roof end strip”, page 302](#)

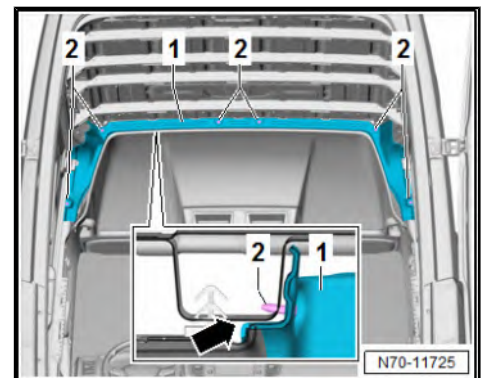

6.4.2 Removing and installing lower roof end strip, vehicles with second evaporator housing

Removing

Vehicles without moulded headliner in passenger compartment

- Remove upper roof end strip ⇒ [page 306](#) .

Vehicles with moulded headliner in passenger compartment


- Remove moulded headliner in front passenger compartment ⇒ [page 308](#) .

Continued for all vehicles

- Unclip clips -2-.
- Guide roof end strip -1- towards rear out of moulded headliner in driver area -arrow-.
- Remove roof end strip -1-.

Installing

Install in reverse order.

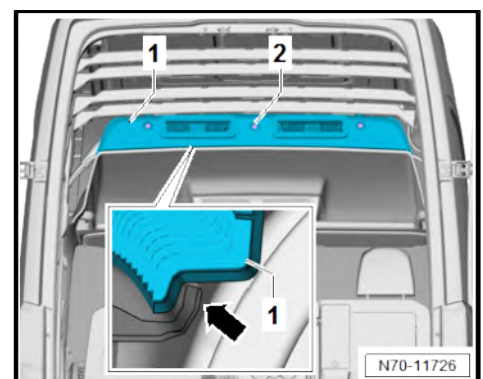



6.5 Removing and installing moulded headlining

⇒ [“6.5.1 Removing and installing moulded headliner, driver area”, page 308](#)

⇒ [“6.5.2 Removing and installing moulded headliner holder”, page 311](#)

⇒ [“6.5.3 Removing and installing rear moulded headliner, double cab”, page 312](#)

⇒ [“6.5.4 Removing and installing front moulded headliner, passenger compartment”, page 313](#)

⇒ [“6.5.5 Removing and installing middle moulded headliner, passenger compartment”, page 314](#)

⇒ [“6.5.6 Removing and installing rear moulded headliner, passenger compartment”, page 315](#)

6.5.1 Removing and installing moulded headliner, driver area

Removing



Note

- ◆ *The description is for vehicles with a high roof. Adapt accordingly for vehicles with a different roof shape.*
- ◆ *The removal and installation procedures may have to be modified slightly depending on equipment.*

Vehicles with PR number K4F (single cab)

- Remove centre B-pillar trims ⇒ [page 270](#) .

Vehicles with PR no. K4A (panel van), K4B (Kombi), K4G (double cab)

- Remove upper B-pillar trims ⇒ [page 270](#) .

Continued for all vehicles



Note

- ◆ *The A-pillar trims are not removed completely. They are only detached from the body at the top.*
- ◆ *The gap covers of the A-pillars are not removed.*
- Detach upper A-pillar trims ⇒ [page 268](#) .

Vehicles with storage compartment

- Remove storage compartment ⇒ [page 40](#) .

Vehicles without storage compartment



- Remove front interior light - W1- ⇒ Electrical system; Rep. gr. 96 ; Controls; Removing and installing front interior light - W1- .
- Remove windscreen trim ⇒ [page 40](#) .
- Remove sun visors ⇒ [page 67](#) .
- Remove sun visor centre mount holder ⇒ [page 71](#) .



i Note


The following work steps are described for the left-hand side of the vehicle. Removal for the right side follows the same pattern.

- Use wedge - T10383- to unclip cap -2- from retainer -1-.
 - Leave cap -2- with tether on vehicle.
 - Unscrew bolt -3-.
 - Repeat procedure on right-hand side of vehicle.
-
- Detach retaining clips -2- together with moulded headliner -1- from body mounting.

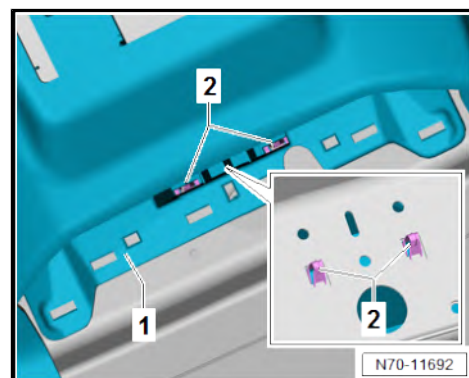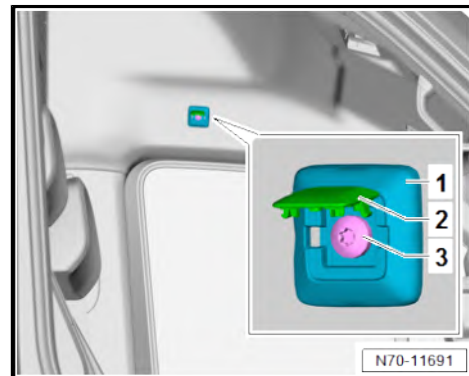


Vehicles with air humidity, rain and light sensor - G823- and/or front camera for driver assist systems - R242-

- Disconnect electrical connector -5- from front camera for driver assist systems - R242- -1-.
- Disconnect electrical connector -3- from air humidity, rain and light sensor - G823- -2-.
- Disconnect electrical connector -4- from windscreen heater for front camera for driver assist systems - R242- .
- Lay wiring harness from moulded headliner to one side.

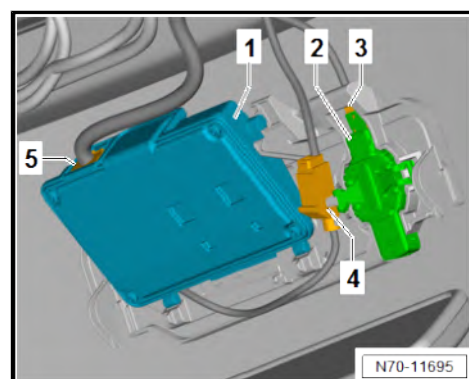

Vehicles with partition


- Detach rear clips -3- with moulded headliner -1- from mountings -2-.

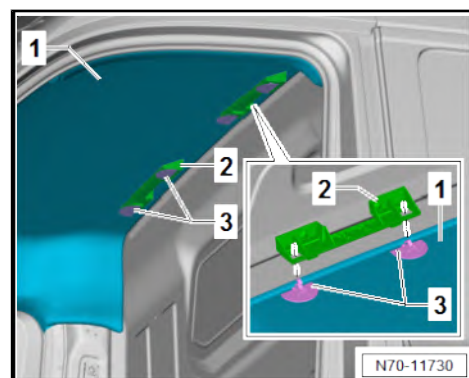




Vehicles without partition panel or with PR number K4G (double cab)

- Detach rear clips -2- with moulded headliner -1- from body mounting.

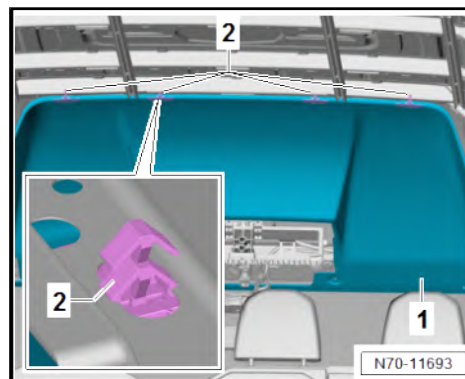

Vehicles with second evaporator housing on roof


- Detach rear clips -2- with moulded headliner -1- from evaporator housing.

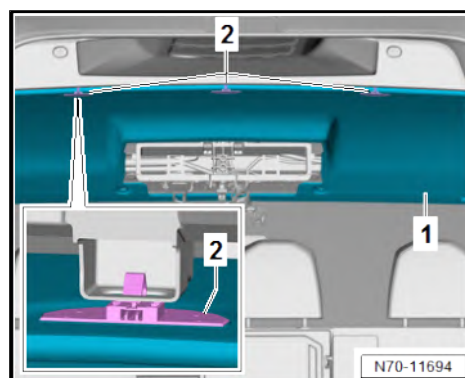


Continued for all vehicles

The help of a second mechanic is required for removal.

- Use wedge - T10383- to lever out clips -2-.
- Detach upper A-pillar trim to gain access to moulded headliner -1-.

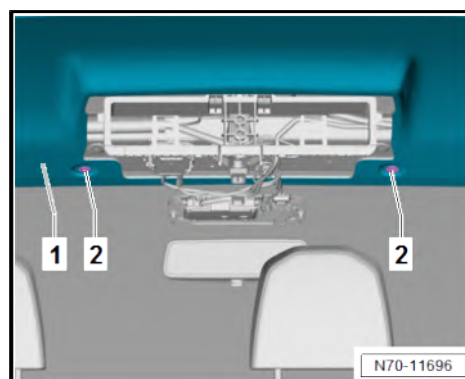

- Release moulded headliner -1- from door seal beading -2-. Remove downwards when doing this.
- If fitted, guide moulded headliner -1- out of rear roof end strip.
- Remove moulded headliner -1-. Do not kink or bend it when doing this.
- Place moulded headliner -1- on a clean surface.

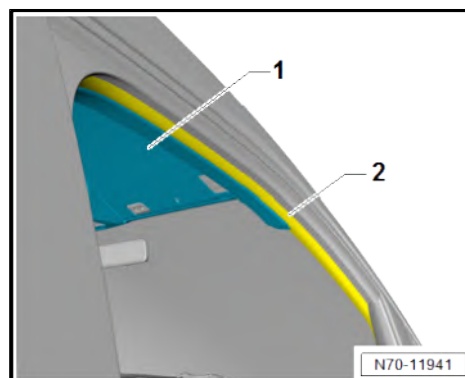

Installing

Install in reverse order of removal, observing the following:



Note

The replacement part does not provide any cut-outs for vehicle-specific equipment. Any cut-outs required for the specific vehicle must be cut using, for example, the electric cutter - V.A.G 1561A-.

Specified torques


- ♦ ➔ [“6.3 Assembly overview - moulded headliner”, page 303](#)




6.5.2 Removing and installing moulded headliner holder

Special tools and workshop equipment required

- ◆ Pop rivet pliers - VAS 5072A-

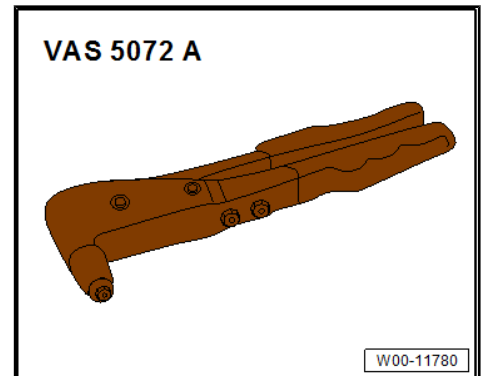

- ◆ Roll pin drift - VAS 5513-

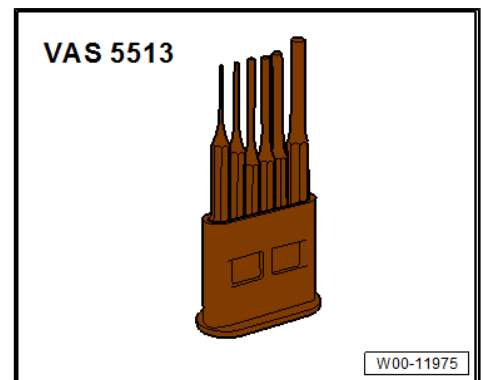

- ◆ Hand drill
- ◆ Drill bit with diameter smaller than 4.5 mm
- ◆ Safety goggles
- ◆ Safety gloves

Removing

- Remove moulded headliner in driver area ➔ [page 308](#) .


Side moulded headliner holder

CAUTION

- Risk of injury from swarf being flung into air.
Irritation and injury to skin and eyes possible.
- Wear safety goggles.
 - Wear protective gloves.



- Drill off rivet heads -2- using drill and spiral drill bit with diameter less than 4.5 mm.
- Drive out rivet shanks -2- with drift - VAS 5513- .
- Remove side moulded headliner holder -1-.
- Remove swarf.

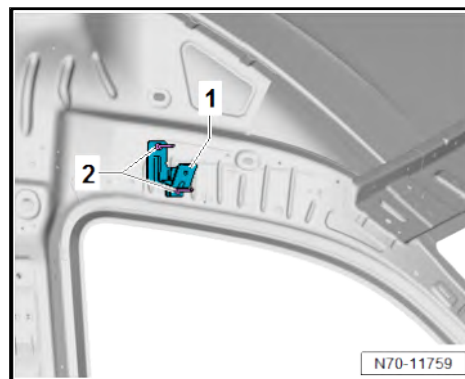

Rear moulded headliner holder


- Unclip clips -2-.
- Remove rear moulded headliner holder -1-.

Installing

Install in reverse order of removal, observing the following:

Side moulded headliner holder

- Use rivet pliers - VAS 5072A- to install new pop rivets.

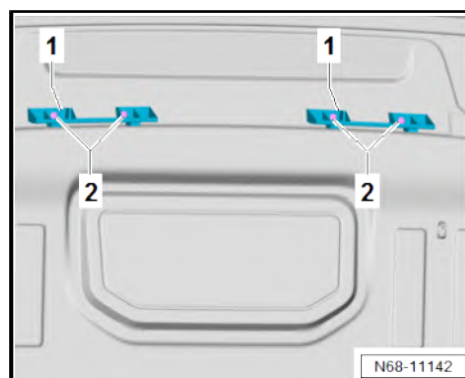


6.5.3 Removing and installing rear moulded headliner, double cab

Removing

- Remove moulded headliner in driver area ➔ [page 308](#) .
- Remove rear interior light/reading light ➔ Electrical system; Rep. gr. 96 ; Controls; Removing and installing rear interior light/reading light .
- Unclip clips -2-.

The help of a second mechanic is required for removal.

- Detach moulded headliner -1- from beading of door seals, and remove it downwards.
- Remove moulded headliner -1-. Do not kink or bend it when doing this.
- Place moulded headliner -1- on a clean surface.

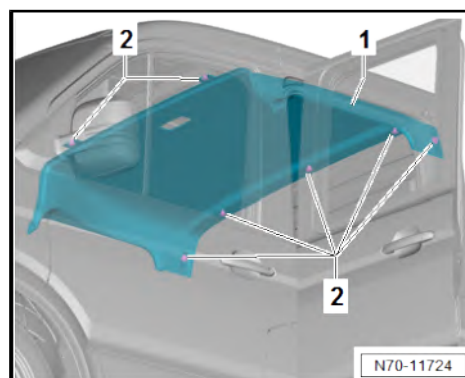

Installing

Install in reverse order of removal, observing the following:



Note

The replacement part does not provide any cut-outs for vehicle-specific equipment. Any cut-outs required for the specific vehicle must be cut using, for example, the electric cutter - V.A.G 1561A- .



6.5.4 Removing and installing front moulded headliner, passenger compartment

Removing



Note

- ◆ *The description is for vehicles with a short wheelbase. Adapt accordingly for vehicles with a different wheelbase.*
- ◆ *The removal and installation procedures may have to be modified slightly depending on equipment.*

Vehicles with short wheelbase

- Remove moulded headliner in rear of passenger compartment ➔ [page 308](#) .

Vehicles with medium or long wheelbase

- Remove moulded headliner in middle of passenger compartment ➔ [page 308](#) .


Continued for all vehicles

- Remove left interior light - W16- ➔ Electrical system; Rep. gr. 96 ; Controls; Removing and installing left interior light - W16- .
- Remove right interior light - W17- ➔ Electrical system; Rep. gr. 96 ; Controls; Removing and installing right interior light - W17- .

The help of a second mechanic is required for removal.


Vehicles with flat roof

- Remove clips -2-.
- Pull moulded headliner of passenger compartment -1- towards rear out of moulded headliner in driver area.

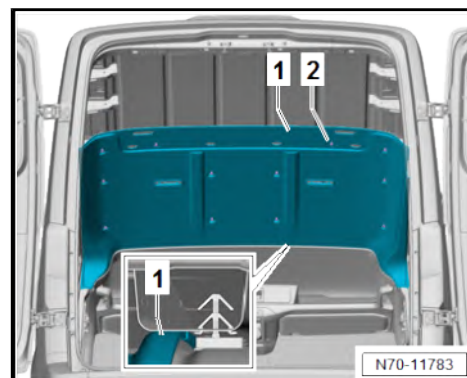

Vehicles with high roof and without second evaporator housing

- Remove clips -2-.
- Pull moulded headliner of passenger compartment -1- towards rear out of moulded headliner in driver area.

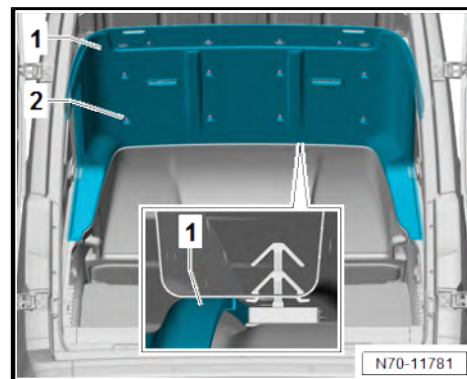




Vehicles with high roof and with second evaporator housing

- Remove clips -2-.
- Pull moulded headliner of passenger compartment -1- towards rear out of roof end strip -arrow-.

Continued for all vehicles

- Detach moulded headliner from beading in door seals and upper B-pillar trim.
- Remove moulded headliner downwards. Do not kink or bend it when doing this.
- Place moulded headliner on a clean surface.

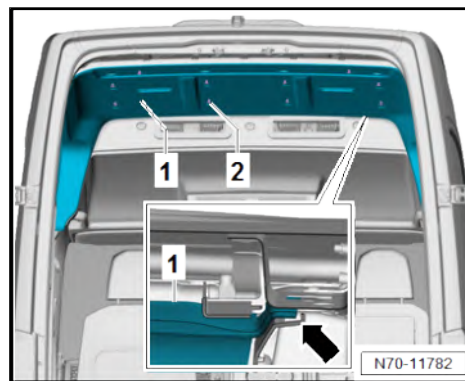

Installing

Install in reverse order of removal, observing the following:



Note

The replacement part does not provide any cut-outs for vehicle-specific equipment. Any cut-outs required for the specific vehicle must be cut using, for example, the electric cutter - V.A.G 1561A-.


6.5.5 Removing and installing middle moulded headliner, passenger compartment

Removing

- Remove moulded headliner in rear of passenger compartment ⇒ [page 308](#).

The help of a second mechanic is required for removal.

- Remove clips -2- from moulded headliner in passenger compartment -1-.
- Detach moulded headliner -1- from beading of door seals, and remove it downwards.
- Remove moulded headliner -1-. Do not kink or bend it when doing this.
- Place moulded headliner -1- on a clean surface.

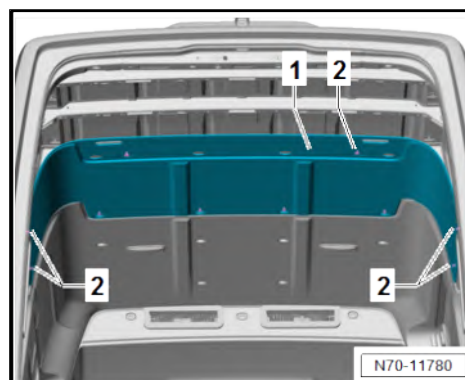

Installing

Install in reverse order of removal, observing the following:



Note

The replacement part does not provide any cut-outs for vehicle-specific equipment. Any cut-outs required for the specific vehicle must be cut using, for example, the electric cutter - V.A.G 1561A-.



6.5.6 Removing and installing rear moulded headliner, passenger compartment

Removing



Note

- ◆ *The description is for vehicles with a short wheelbase. Adapt accordingly for vehicles with a different wheelbase.*
- ◆ *The removal and installation procedures may have to be modified slightly depending on equipment.*

Vehicles with rear air duct on second evaporator housing

- Detach rear air duct on second evaporator housing ⇒ Heating, air conditioning system; Rep. gr. 87 ; Air duct; Removing and installing air ducts .

Vehicles with auxiliary air heater and/or second heater unit in driver area

- Remove temperature sensor on roof for air inlet on auxiliary air heater - G967- ⇒ Auxiliary heater, supplementary heater; Rep. gr. 82 ; Additional components for control and regulation; Removing and installing temperature sensor on roof for air inlet on auxiliary air heater - G967- .


Continued for all vehicles

- Remove rear left interior light - W47- ⇒ Electrical system; Rep. gr. 96 ; Controls; Removing and installing rear left interior light - W47- .
- Remove rear right interior light - W48- ⇒ Electrical system; Rep. gr. 96 ; Controls; Removing and installing rear right interior light - W48- .

The help of a second mechanic is required for removal.

Vehicles with flat roof

- Remove clips -2- from moulded headliner in passenger compartment -1-.

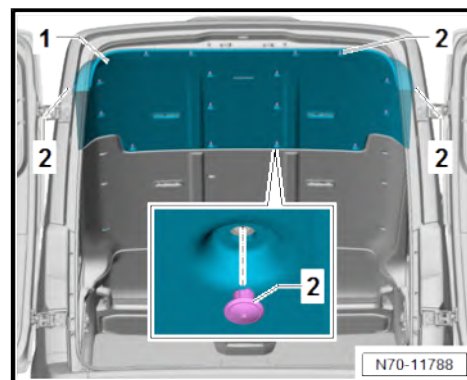



Vehicles with high roof

- Remove clips -2- from moulded headliner in passenger compartment -1-.

Continued for all vehicles

- Detach moulded headliner from beading of door seals and remove downwards.
- Remove moulded headliner. Do not kink or bend it when doing this.
- Place moulded headliner on a clean surface.


Installing

Install in reverse order of removal, observing the following:



Note

The replacement part does not provide any cut-outs for vehicle-specific equipment. Any cut-outs required for the specific vehicle must be cut using, for example, the electric cutter - V.A.G 1561A-.

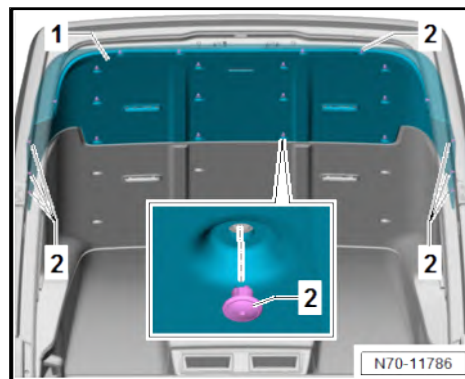



72 – Seat frames

1 Overview of seat variants

⇒ [“1.1 Overview of fitting locations - seat variants”, page 317](#)

⇒ [“1.2 Mounting front seat on seat repair stand”, page 321](#)

1.1 Overview of fitting locations - seat variants

⇒ [“1.1.1 Overview of fitting locations - seat versions, \(PR number K4A, panel van\)”, page 317](#)

⇒ [“1.1.2 Overview of fitting locations - seat versions, \(PR number K4F, single cab\)”, page 318](#)

⇒ [“1.1.3 Overview of fitting locations - seat versions, \(PR number K4G, double cab\)”, page 319](#)

⇒ [“1.1.4 Overview of fitting locations - seat versions, \(PR number K4B, Kombi\)”, page 320](#)

1.1.1 Overview of fitting locations - seat versions, (PR number K4A, panel van)

1 - Front seat


- ☐ Single seat
- ☐ Assembly overview - front seat ⇒ [page 324](#)
- ☐ Assembly overview - front backrest ⇒ [page 333](#)
- ☐ Assembly overview - seat pan ⇒ [page 338](#)
- ☐ Removing and installing ⇒ [page 343](#)

2 - Front seat

- ☐ Single seat
- ☐ Assembly overview - front seat ⇒ [page 324](#)
- ☐ Assembly overview - front backrest ⇒ [page 333](#)
- ☐ Assembly overview - seat pan ⇒ [page 338](#)
- ☐ Removing and installing ⇒ [page 343](#)

3 - Front seat

- ☐ Bench seat
- ☐ Assembly overview - front seat ⇒ [page 324](#)
- ☐ Assembly overview - front backrest ⇒ [page 333](#)
- ☐ Assembly overview - seat pan ⇒ [page 338](#)
- ☐ Removing and installing ⇒ [page 343](#)

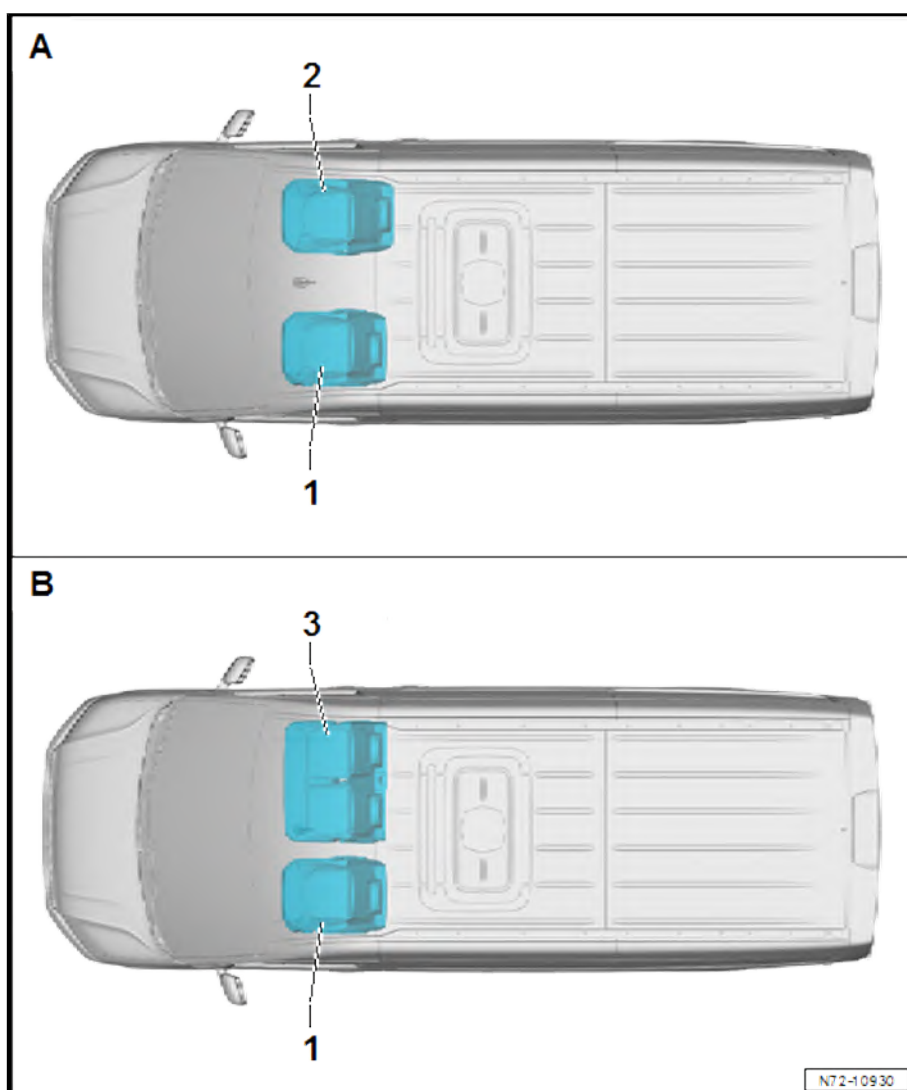



1.1.2 Overview of fitting locations - seat versions, (PR number K4F, single cab)

1 - Front seat


- ☐ Single seat
- ☐ Assembly overview - front seat ⇒ [page 324](#)
- ☐ Assembly overview - front backrest ⇒ [page 333](#)
- ☐ Assembly overview - seat pan ⇒ [page 338](#)
- ☐ Removing and installing ⇒ [page 343](#)

2 - Front seat

- ☐ Single seat
- ☐ Assembly overview - front seat ⇒ [page 324](#)
- ☐ Assembly overview - front backrest ⇒ [page 333](#)
- ☐ Assembly overview - seat pan ⇒ [page 338](#)
- ☐ Removing and installing ⇒ [page 343](#)

3 - Front seat

- ☐ Bench seat
- ☐ Assembly overview - front seat ⇒ [page 324](#)
- ☐ Assembly overview - front backrest ⇒ [page 333](#)
- ☐ Assembly overview - seat pan ⇒ [page 338](#)
- ☐ Removing and installing ⇒ [page 343](#)

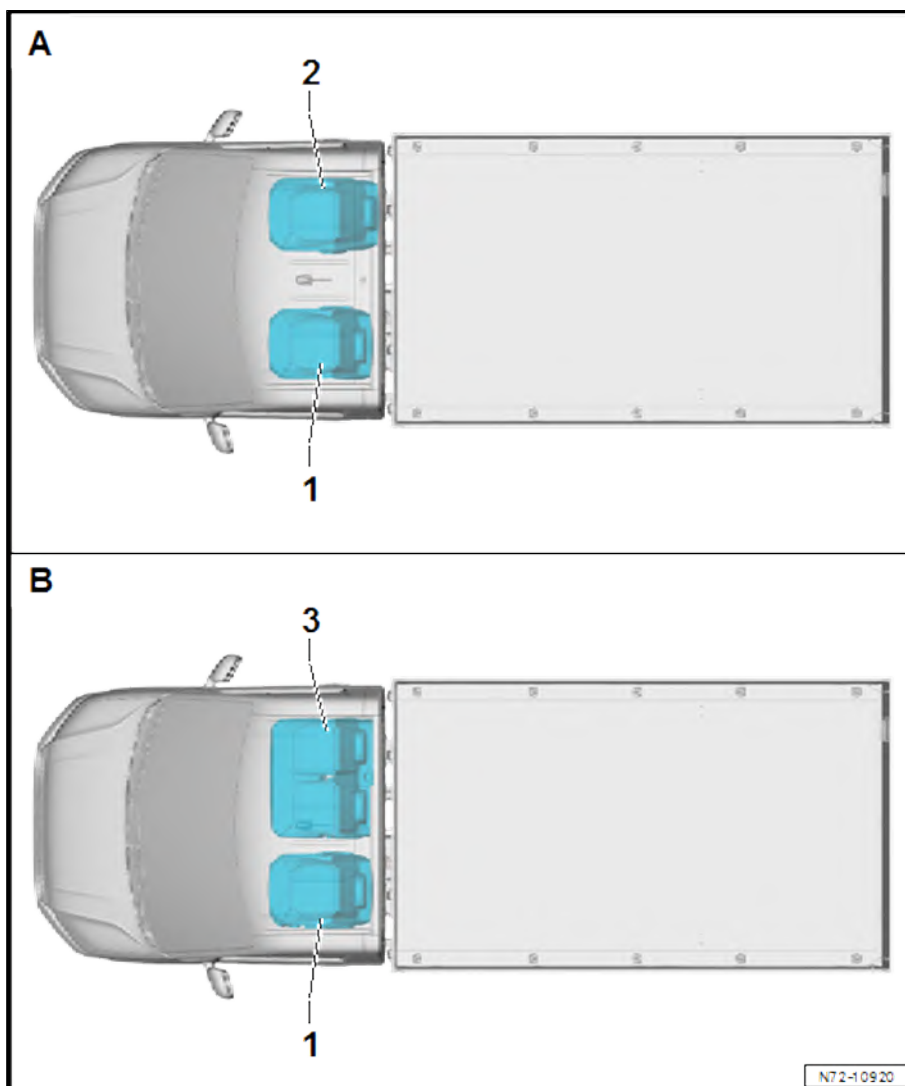



1.1.3 Overview of fitting locations - seat versions, (PR number K4G, double cab)

1 - Front seat

- ☐ Single seat
- ☐ Assembly overview - front seat ➤ [page 324](#)
- ☐ Assembly overview - front backrest ➤ [page 333](#)
- ☐ Assembly overview - seat pan ➤ [page 338](#)
- ☐ Removing and installing ➤ [page 343](#)

2 - Front seat


- ☐ Single seat
- ☐ Assembly overview - front seat ➤ [page 324](#)
- ☐ Assembly overview - front backrest ➤ [page 333](#)
- ☐ Assembly overview - seat pan ➤ [page 338](#)
- ☐ Removing and installing ➤ [page 343](#)

3 - Front seat

- ☐ Bench seat
- ☐ Assembly overview - front seat ➤ [page 324](#)
- ☐ Assembly overview - front backrest ➤ [page 333](#)
- ☐ Assembly overview - seat pan ➤ [page 338](#)
- ☐ Removing and installing ➤ [page 343](#)

4 - Rear seat

- ☐ Bench seat
- ☐ Assembly overview - bench seat / individual seats ➤ [page 379](#)
- ☐ Assembly overview - rear seat backrest ➤ [page 383](#)
- ☐ Assembly overview - seat pan ➤ [page 385](#)
- ☐ Removing and installing ➤ [page 387](#)

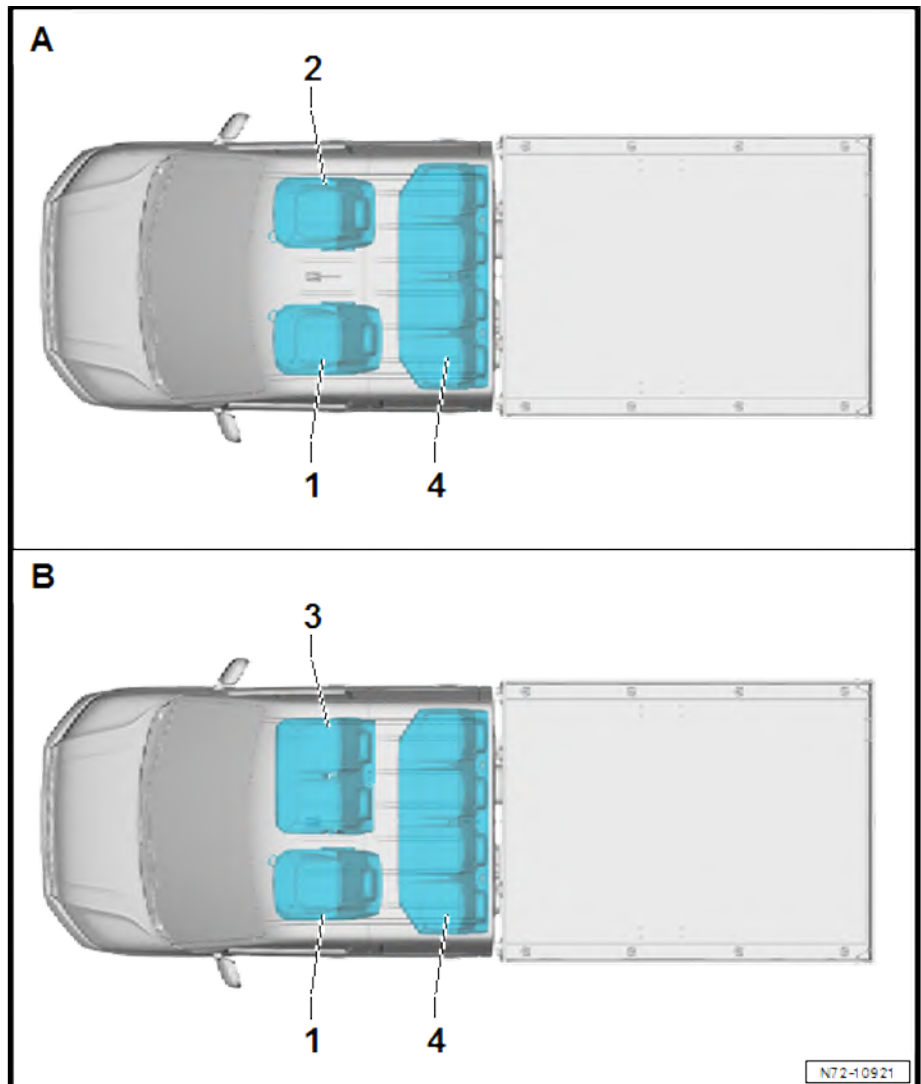

1.1.4 Overview of fitting locations - seat versions, (PR number K4B, Kombi)

1 - Front seat

- ☐ Single seat
- ☐ Assembly overview - front seat ➔ [page 324](#)
- ☐ Assembly overview - front backrest ➔ [page 333](#)
- ☐ Assembly overview - seat pan ➔ [page 338](#)
- ☐ Removing and installing ➔ [page 343](#)

2 - Front seat

- ☐ Single seat
- ☐ Assembly overview - front seat ➔ [page 324](#)
- ☐ Assembly overview - front backrest ➔ [page 333](#)
- ☐ Assembly overview - seat pan ➔ [page 338](#)
- ☐ Removing and installing ➔ [page 343](#)

3 - Front seat


- ☐ Bench seat
- ☐ Assembly overview - front seat ➔ [page 324](#)
- ☐ Assembly overview - front backrest ➔ [page 333](#)
- ☐ Assembly overview - seat pan ➔ [page 338](#)
- ☐ Removing and installing ➔ [page 343](#)

4 - Rear seats, 1st row

- ☐ Individual seats
- ☐ Qty. 3
- ☐ In direction of travel
- ☐ Assembly overview - bench seat / individual seats ➔ [page 379](#)
- ☐ Assembly overview - rear seat backrest ➔ [page 383](#)
- ☐ Assembly overview - seat pan ➔ [page 385](#)
- ☐ Removing and installing ➔ [page 387](#)

5 - Rear seats, 1st row

- ☐ Individual seats
- ☐ Qty. 2
- ☐ In opposite direction of travel
- ☐ Assembly overview - bench seat / individual seats ➔ [page 379](#)
- ☐ Assembly overview - rear seat backrest ➔ [page 383](#)
- ☐ Assembly overview - seat pan ➔ [page 385](#)
- ☐ Removing and installing ➔ [page 387](#)

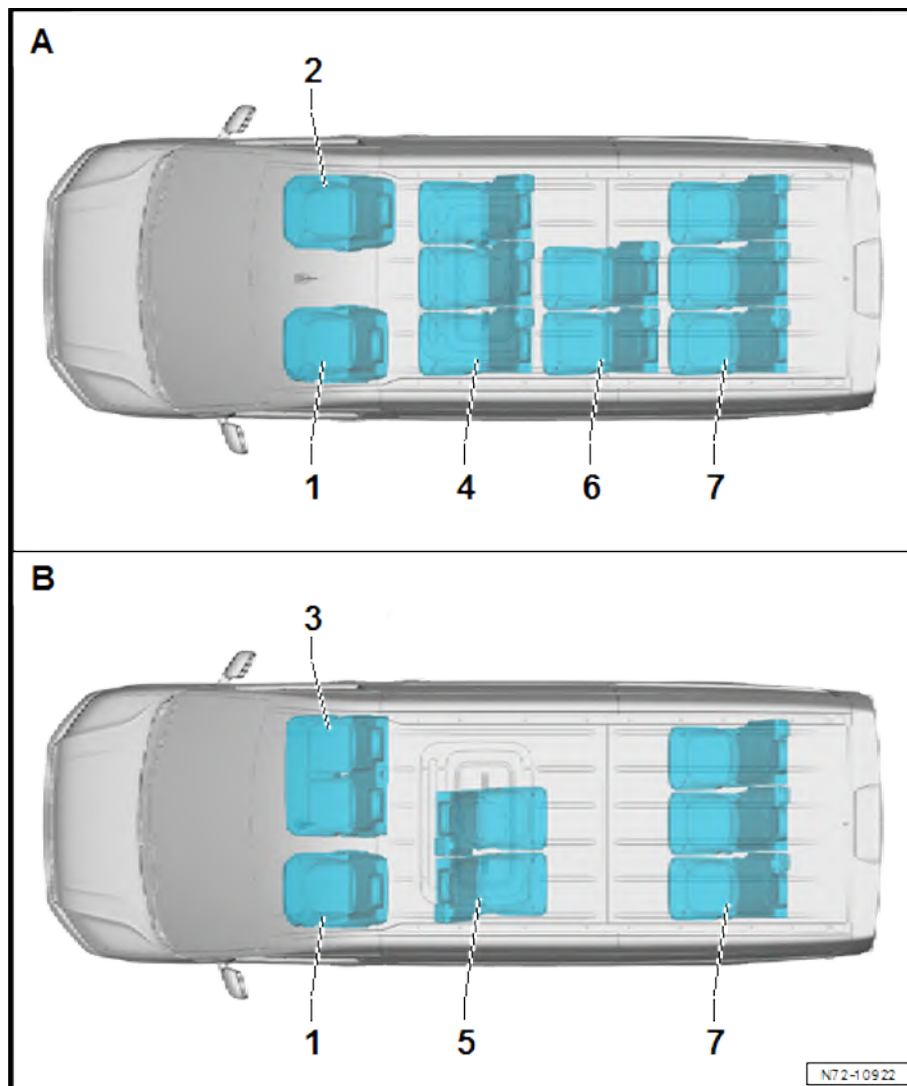



6 - Rear seats, 2nd row

- ☐ Individual seats
- ☐ Qty. 2
- ☐ In direction of travel
- ☐ Assembly overview - bench seat / individual seats ⇒ [page 379](#)
- ☐ Assembly overview - rear seat backrest ⇒ [page 383](#)
- ☐ Assembly overview - seat pan ⇒ [page 385](#)
- ☐ Removing and installing ⇒ [page 387](#)


7 - Rear seats, 3rd row

- ☐ Individual seats
- ☐ Qty. 3
- ☐ In direction of travel
- ☐ Assembly overview - bench seat / individual seats ⇒ [page 379](#)
- ☐ Assembly overview - rear seat backrest ⇒ [page 383](#)
- ☐ Assembly overview - seat pan ⇒ [page 385](#)
- ☐ Removing and installing ⇒ [page 387](#)

1.2 Mounting front seat on seat repair stand

Special tools and workshop equipment required

- ◆ Engine and gearbox support - VAS 6095-

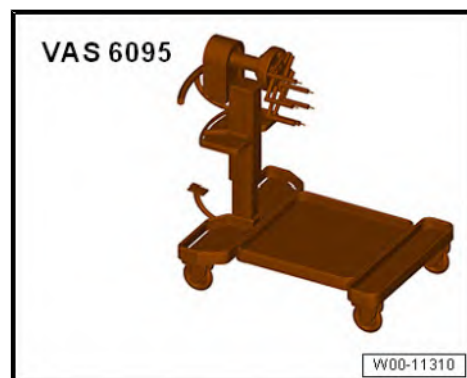

- ◆ Seat repair stand - VAS 6136-



Procedure

- Individual seat removed.
- Attach seat repair stand - VAS 6136- to engine and gearbox support - VAS 6095- .
- Secure front seat on seat repair stand - VAS 6136- .



2 Front seats

⇒ ["2.1 Overview of fitting locations - electrical and electronic components", page 322](#)

⇒ ["2.2 Assembly overview - front seat", page 324](#)

⇒ ["2.3 Assembly overview - front backrest", page 333](#)

⇒ ["2.4 Assembly overview - seat pan", page 338](#)

⇒ ["2.5 Assembly overview - seat depth adjustment", page 343](#)

⇒ ["2.6 Removing and installing front seat", page 343](#)

⇒ ["2.7 Connecting and disconnecting airbag adapter", page 350](#)

⇒ ["2.8 Removing and installing handle for seat height adjustment", page 352](#)

⇒ ["2.9 Removing and installing seat height adjustment unit", page 352](#)

⇒ ["2.10 Removing and installing seat rake adjustment unit", page 353](#)

⇒ ["2.11 Removing and installing lumbar support adjustment unit", page 354](#)

⇒ ["2.12 Removing and installing front backrest", page 355](#)

⇒ ["2.13 Removing and installing seat armrest", page 360](#)

⇒ ["2.14 Removing and installing head restraint", page 361](#)

⇒ ["2.15 Removing and installing head restraint guide", page 361](#)

⇒ ["2.16 Removing and installing lumbar support adjustment switch E176 / E177 ", page 362](#)

⇒ ["2.17 Removing and installing massage function button E670 / E671 ", page 362](#)

⇒ ["2.18 Removing and installing lumbar support adjustment motor V125 / V126 / V129 / V130 ", page 363](#)

⇒ ["2.19 Removing and installing massage control unit J740 ", page 364](#)

⇒ ["2.20 Removing and installing cover", page 365](#)

⇒ ["2.21 Removing and handle for installing backrest adjustment", page 366](#)

⇒ ["2.22 Removing and installing seat trim", page 368](#)

⇒ ["2.23 Removing and installing seat depth adjustment unit", page 377](#)

2.1 Overview of fitting locations - electrical and electronic components



1 - Heater element

- ☐ Renew after removal
⇒ [page 422](#)
- ☐ Seat padding
- ☐ Driver seat: heated seat cushion for front passenger seat - Z6- .
- ☐ Front passenger seat: heated seat cushion for front passenger seat - Z8- .
- ☐ Assembly overview
⇒ [page 405](#)

2 - Heater element

- ☐ Renew after removal
⇒ [page 422](#)
- ☐ Backrest padding
- ☐ Driver seat: heated backrest for driver seat - Z7- .
- ☐ Front passenger seat: heated backrest for front passenger seat - Z9- .
- ☐ Assembly overview
⇒ [page 406](#)

3 - Lumbar support


- ☐ Driver seat lumbar support longitudinal adjustment motor - V125-
- ☐ Driver seat lumbar support height adjustment motor - V129-
- ☐ Front passenger seat lumbar support longitudinal adjustment motor - V126-
- ☐ Front passenger seat lumbar support height adjustment motor - V130-
- ☐ Assembly overview ⇒ [page 333](#)
- ☐ Removing and installing ⇒ [page 363](#)

4 - Massage function button

- ☐ Driver seat massage function button - E670-
- ☐ Front passenger seat massage function button - E671-
- ☐ Assembly overview ⇒ [page 333](#)
- ☐ Removing and installing ⇒ [page 362](#)

5 - Lumbar support adjustment switch

- ☐ Driver seat lumbar support adjustment switch - E176-
- ☐ Front passenger seat lumbar support adjustment switch - E177-
- ☐ Assembly overview ⇒ [page 333](#)
- ☐ Removing and installing ⇒ [page 362](#)

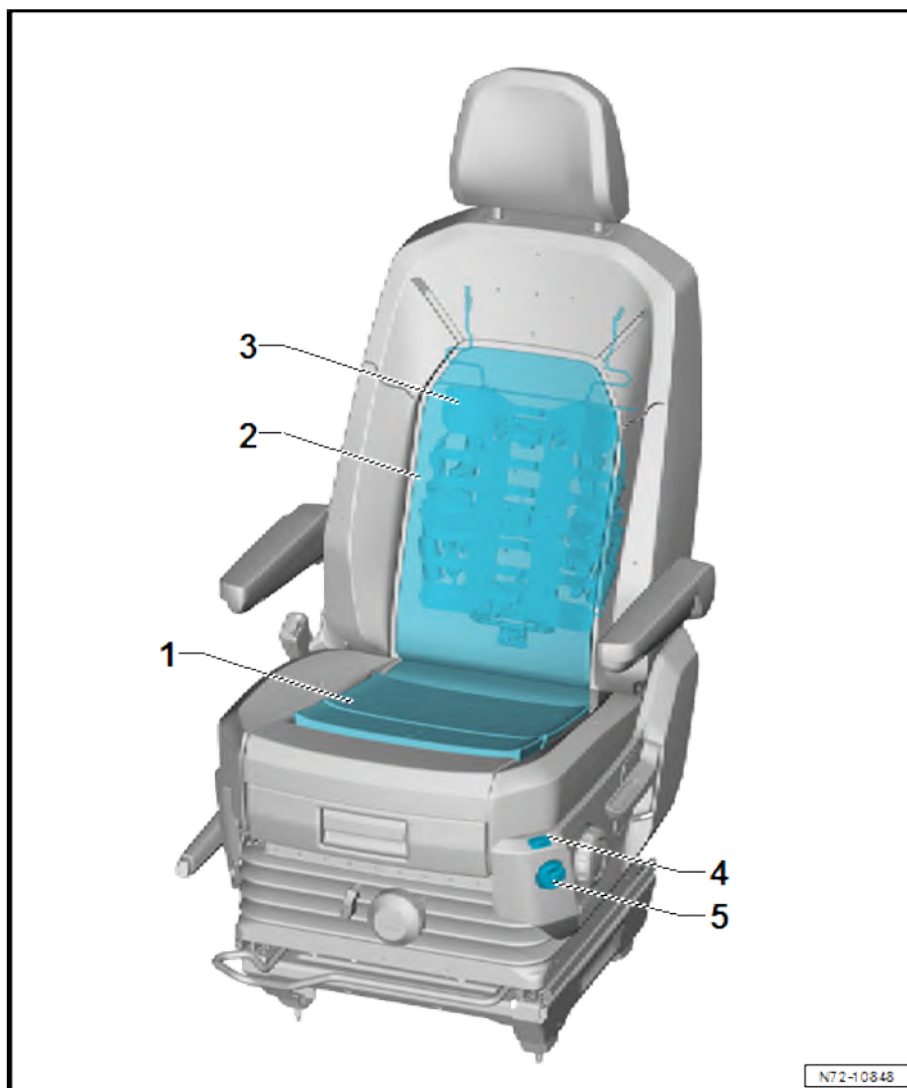

2.2 Assembly overview - front seat

⇒ [“2.2.1 Assembly overview - front seat, fixed height”, page 324](#)

⇒ [“2.2.2 Assembly overview - front seat, manual lumbar support”, page 326](#)

⇒ [“2.2.3 Assembly overview - front seat, electronic lumbar support”, page 327](#)

⇒ [“2.2.4 Assembly overview - front seat, suspension seat, electronic lumbar support, massage function, seat depth adjuster”, page 329](#)

⇒ [“2.2.5 Assembly overview - front seat, bench seat”, page 331](#)

2.2.1 Assembly overview - front seat, fixed height

1 - Front seat

- ☐ Assembly overview - front backrest
⇒ [page 333](#)
- ☐ Removing and installing
⇒ [page 343](#)

2 - Head restraint

- ☐ Removing and installing
⇒ [page 392](#)

3 - Seat trim

- ☐ Sill side
- ☐ Assembly overview - seat pan ⇒ [page 338](#)
- ☐ Removing and installing
⇒ [page 368](#)

4 - Bolts

- ☐ If removal was carried out due to an accident, renew bolts
- ☐ Qty. 4
- ☐ 40 Nm

5 - Seat box


- ☐ Assembly overview
⇒ [page 338](#)
- ☐ Removing and installing
⇒ [page 343](#)

6 - Nuts

- ☐ If removal was carried out due to an accident, renew nuts
- ☐ Observe tightening sequence ⇒ [page 347](#)
- ☐ Qty. 2
- ☐ 50 Nm

7 - Bolts

- ☐ If removal was carried out due to an accident, renew bolts
- ☐ Observe tightening sequence ⇒ [page 347](#)
- ☐ Qty. 2

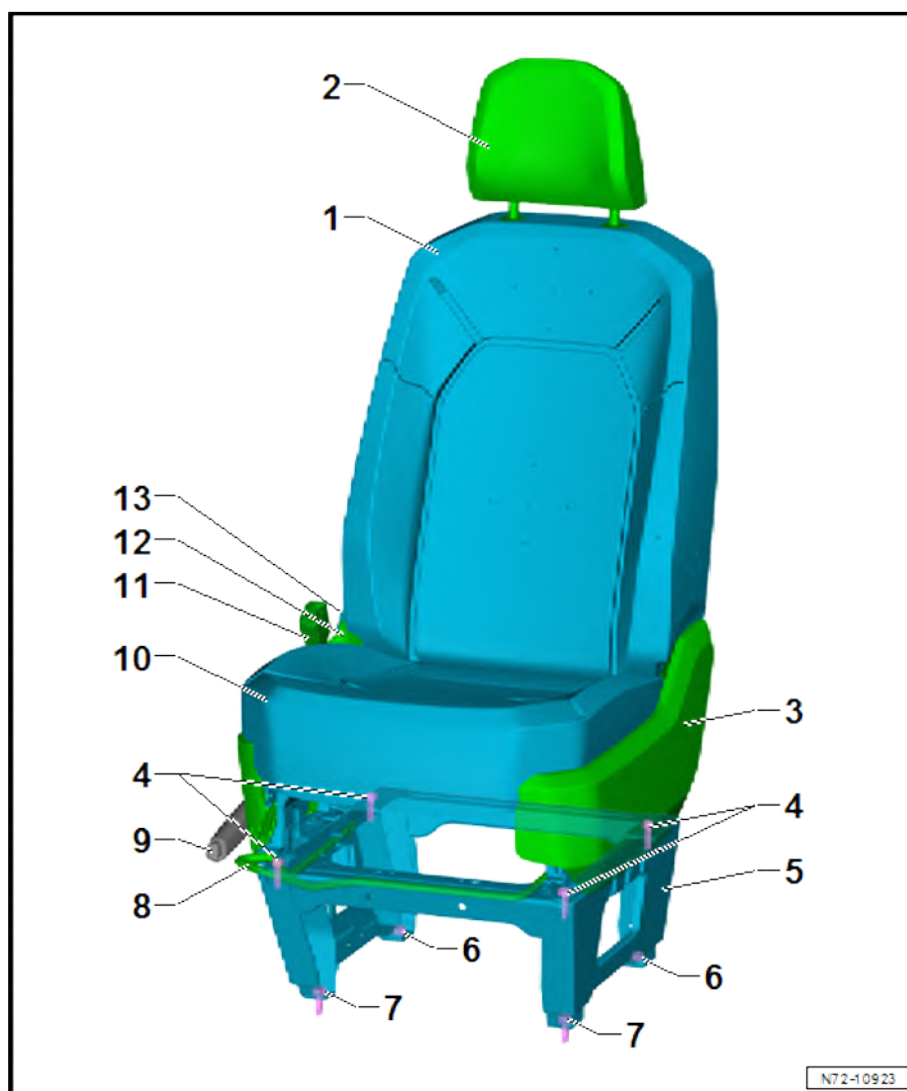



- ❑ 50 Nm

8 - Lever for seat longitudinal adjustment

- ❑ The mechanism for seat longitudinal adjustment is permanently attached to the seat pan; if it is defective, renew seat pan ➔ [page 355](#)

9 - Handbrake lever boot

- ❑ Assembly overview ➔ [page 32](#)
- ❑ Removing and installing ➔ [page 49](#)

10 - Seat pan

- ❑ Assembly overview ➔ [page 338](#)
- ❑ Removing and installing cover and padding on seat pan ➔ [page 406](#)

11 - Belt buckle

- ❑ Assembly overview ➔ [page 111](#)
- ❑ Removing and installing ➔ [page 134](#)

12 - Seat trim

- ❑ Tunnel side
- ❑ Assembly overview - seat pan ➔ [page 338](#)
- ❑ Removing and installing ➔ [page 368](#)

13 - Backrest adjustment handle

- ❑ Removing and installing ➔ [page 366](#)

2.2.2 Assembly overview - front seat, manual lumbar support

1 - Front seat

- ☐ Assembly overview - front backrest
⇒ [page 333](#)
- ☐ Removing and installing
⇒ [page 343](#)

2 - Head restraint

- ☐ Removing and installing
⇒ [page 392](#)

3 - Lumbar support adjuster

- ☐ Removing and installing
⇒ [page 354](#)

4 - Seat trim

- ☐ Sill side
- ☐ Assembly overview - seat pan ⇒ [page 338](#)
- ☐ Removing and installing
⇒ [page 368](#)

5 - Handle for seat height adjustment

- ☐ The mechanism for seat height adjustment is permanently attached to the seat pan; if it is defective, renew seat pan
⇒ [page 355](#)
- ☐ Removing and installing
⇒ [page 352](#)

6 - Handle for seat rake adjustment

- ☐ Removing and installing
⇒ [page 353](#)

7 - Bolts

- ☐ Qty. 4
- ☐ 50 Nm

8 - Seat box

- ☐ Assembly overview ⇒ [page 338](#)
- ☐ Removing and installing ⇒ [page 343](#)

9 - Nuts

- ☐ Qty. 2
- ☐ 50 Nm

10 - Bolts


- ☐ Qty. 2
- ☐ 50 Nm

11 - Lever for seat longitudinal adjustment

- ☐ The mechanism for seat longitudinal adjustment is permanently attached to the seat pan; if it is defective, renew seat pan ⇒ [page 355](#)

12 - Handbrake lever boot

- ☐ Assembly overview ⇒ [page 32](#)
- ☐ Removing and installing ⇒ [page 49](#)

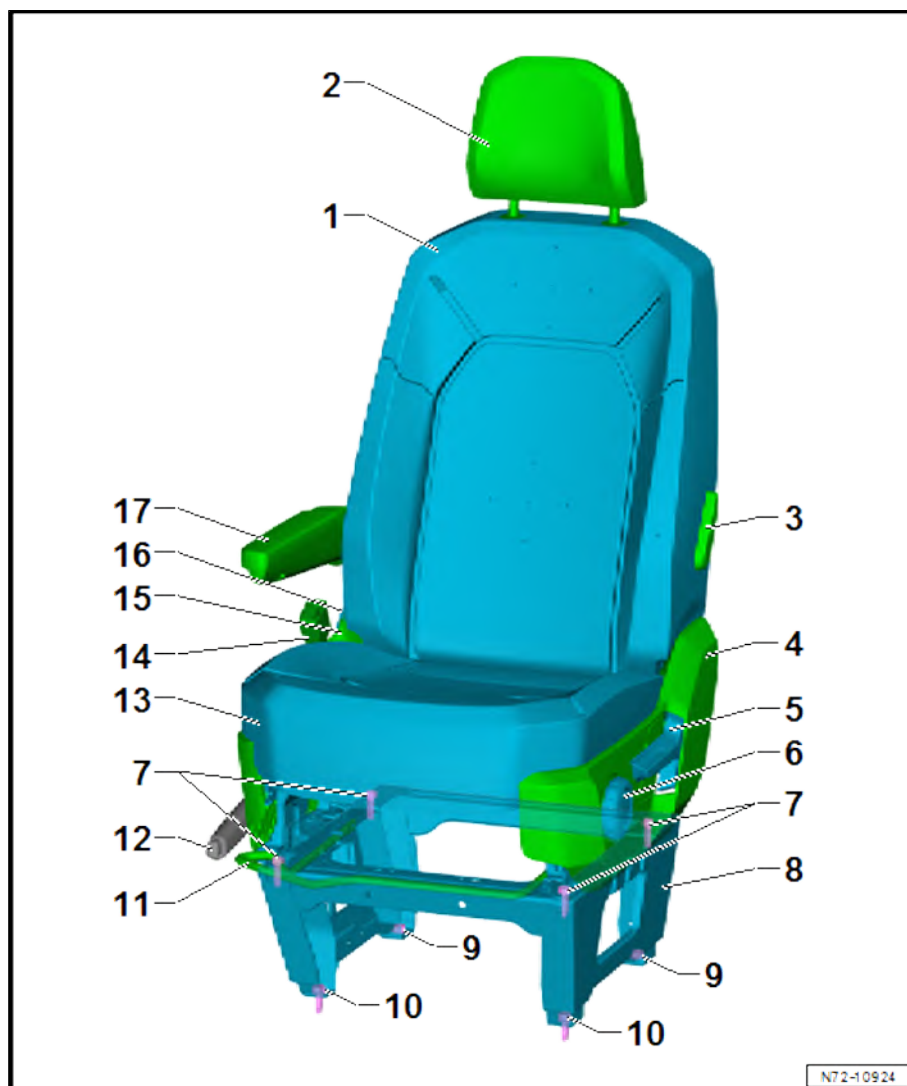



13 - Seat pan

- ☐ Assembly overview ➔ [page 338](#)
- ☐ Removing and installing cover and padding on seat pan ➔ [page 406](#)

14 - Belt buckle

- ☐ Assembly overview ➔ [page 111](#)
- ☐ Removing and installing ➔ [page 134](#)

15 - Seat trim

- ☐ Tunnel side
- ☐ Assembly overview - seat pan ➔ [page 338](#)
- ☐ Removing and installing ➔ [page 368](#)

16 - Backrest adjustment handle

- ☐ Removing and installing ➔ [page 366](#)

17 - Seat armrest

- ☐ Removing and installing ➔ [page 360](#)

2.2.3 Assembly overview - front seat, electronic lumbar support

1 - Front seat

- ☐ Assembly overview - front backrest ➔ [page 333](#)
- ☐ Removing and installing ➔ [page 343](#)

2 - Head restraint

- ☐ Removing and installing ➔ [page 392](#)

3 - Seat armrest

- ☐ Removing and installing ➔ [page 360](#)

4 - Seat trim


- ☐ Sill side
- ☐ Assembly overview - seat pan ➔ [page 338](#)
- ☐ Removing and installing ➔ [page 368](#)

5 - Handle for seat height adjustment

- ☐ The mechanism for seat height adjustment is permanently attached to the seat pan; if it is defective, renew seat pan ➔ [page 355](#)
- ☐ Removing and installing ➔ [page 352](#)

6 - Lumbar support adjustment switch

- ☐ Driver seat lumbar support adjustment switch - E176-
- ☐ Front passenger seat lumbar support adjustment switch - E177-
- ☐ Removing and installing ➔ [page 362](#)

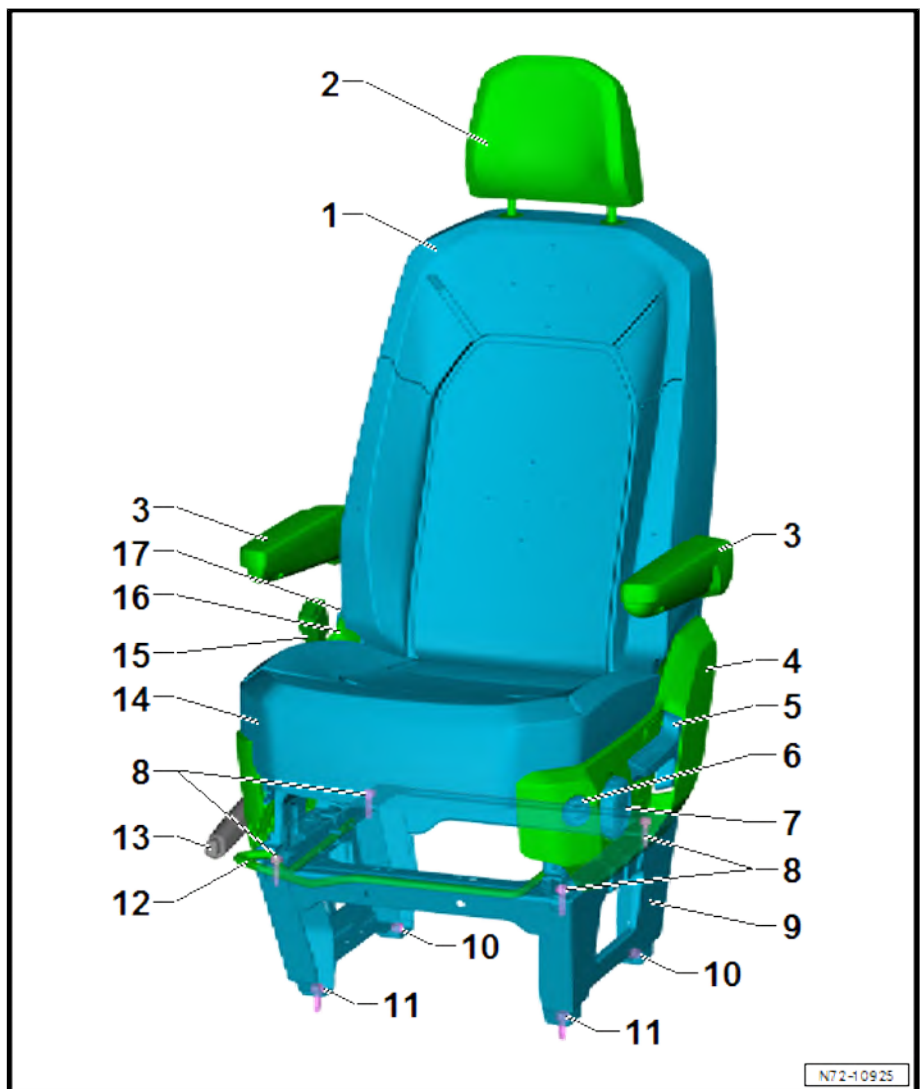

N72-10925



7 - Handle for seat rake adjustment

- ☐ Removing and installing ⇒ [page 353](#)

8 - Bolts

- ☐ Qty. 4
- ☐ 50 Nm

9 - Seat box

- ☐ Assembly overview ⇒ [page 338](#)
- ☐ Removing and installing ⇒ [page 343](#)

10 - Nuts

- ☐ Qty. 2
- ☐ 50 Nm

11 - Bolts

- ☐ Qty. 2
- ☐ 50 Nm

12 - Lever for seat longitudinal adjustment

- ☐ The mechanism for seat longitudinal adjustment is permanently attached to the seat pan; if it is defective, renew seat pan ⇒ [page 355](#)

13 - Handbrake lever boot

- ☐ Assembly overview ⇒ [page 32](#)
- ☐ Removing and installing ⇒ [page 49](#)

14 - Seat pan

- ☐ Assembly overview ⇒ [page 338](#)
- ☐ Removing and installing cover and padding on seat pan ⇒ [page 406](#)

15 - Belt buckle

- ☐ Assembly overview ⇒ [page 111](#)
- ☐ Removing and installing ⇒ [page 134](#)

16 - Seat trim

- ☐ Tunnel side
- ☐ Assembly overview - seat pan ⇒ [page 338](#)
- ☐ Removing and installing ⇒ [page 368](#)

17 - Backrest adjustment handle

- ☐ Removing and installing ⇒ [page 366](#)

2.2.4 Assembly overview - front seat, suspension seat, electronic lumbar support, massage function, seat depth adjuster

1 - Front seat

- ☐ Assembly overview - front backrest
⇒ [page 333](#)
- ☐ Removing and installing
⇒ [page 343](#)

2 - Head restraint

- ☐ Removing and installing
⇒ [page 392](#)

3 - Seat armrest

- ☐ Removing and installing
⇒ [page 360](#)

4 - Seat trim

- ☐ Sill side
- ☐ Assembly overview - seat pan ⇒ [page 338](#)
- ☐ Removing and installing
⇒ [page 368](#)

5 - Handle for seat height adjustment

- ☐ The mechanism for seat height adjustment is permanently attached to the seat pan; if it is defective, renew seat pan
⇒ [page 355](#)
- ☐ Removing and installing
⇒ [page 352](#)

6 - Massage function button

- ☐ Driver seat massage function button - E670-
- ☐ Front passenger seat massage function button - E671-
- ☐ Removing and installing ⇒ [page 362](#)

7 - Lumbar support adjustment switch

- ☐ Driver seat lumbar support adjustment switch - E176-
- ☐ Front passenger seat lumbar support adjustment switch - E177-
- ☐ Removing and installing ⇒ [page 362](#)

8 - Handle for seat rake adjustment

- ☐ Removing and installing ⇒ [page 353](#)

9 - Seat box


- ☐ Assembly overview ⇒ [page 338](#)
- ☐ Removing and installing ⇒ [page 343](#)

10 - Bolts

- ☐ Qty. 4
- ☐ 50 Nm

11 - Nuts

- ☐ Qty. 2

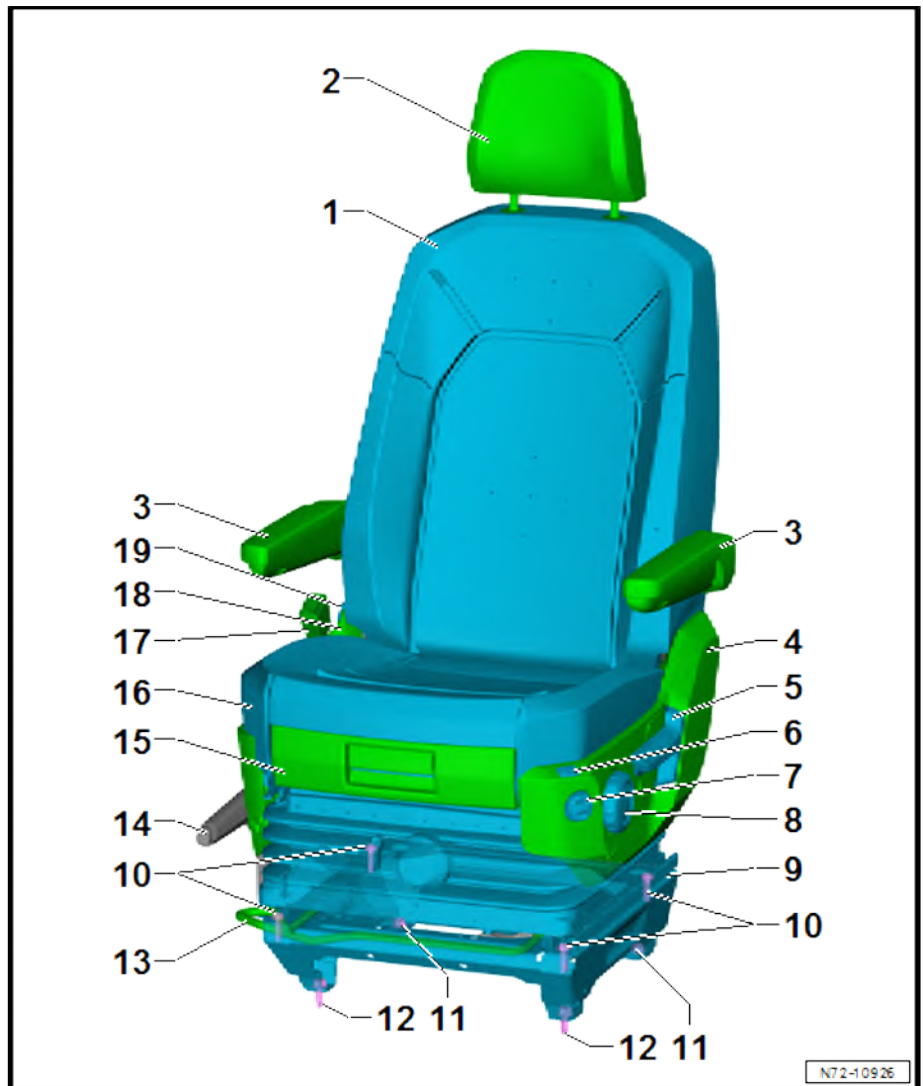



- ☐ 50 Nm

12 - Bolts

- ☐ Qty. 2
- ☐ 50 Nm

13 - Lever for seat longitudinal adjustment

- ☐ The mechanism for seat longitudinal adjustment is permanently attached to the seat pan; if it is defective, renew seat pan ⇒ [page 355](#)

14 - Handbrake lever boot

- ☐ Assembly overview ⇒ [page 32](#)
- ☐ Removing and installing ⇒ [page 49](#)

15 - Seat depth adjustment

- ☐ Assembly overview - seat pan ⇒ [page 338](#)
- ☐ Removing and installing ⇒ [page 377](#)

16 - Seat pan

- ☐ Assembly overview ⇒ [page 338](#)
- ☐ Removing and installing cover and padding on seat pan ⇒ [page 406](#)

17 - Belt buckle

- ☐ Assembly overview ⇒ [page 111](#)
- ☐ Removing and installing ⇒ [page 134](#)

18 - Seat trim

- ☐ Tunnel side
- ☐ Assembly overview - seat pan ⇒ [page 338](#)
- ☐ Removing and installing ⇒ [page 368](#)

19 - Backrest adjustment handle

- ☐ Removing and installing ⇒ [page 366](#)



2.2.5 Assembly overview - front seat, bench seat



Note

The description is for vehicles with a folding backrest. Adapt accordingly for vehicles without a backrest.

1 - Front bench seat

- ☐ Assembly overview - front backrest
⇒ [page 333](#)
- ☐ Removing and installing
⇒ [page 343](#)

2 - Head restraints

- ☐ Qty. 2
- ☐ Removing and installing
⇒ [page 392](#)

3 - Seat belt

- ☐ Assembly overview
⇒ [page 106](#)
- ☐ Removing and installing
⇒ [page 113](#)

4 - Seat trim, backrest

- ☐ Tunnel side
- ☐ Assembly overview - front backrest
⇒ [page 333](#)
- ☐ Removing and installing
⇒ [page 368](#)

5 - Retaining loop for seat rake adjustment

- ☐ Removing and installing
⇒ [page 353](#)

6 - Belt buckles


- ☐ Qty. 2
- ☐ On outside
- ☐ Assembly overview
⇒ [page 111](#)
- ☐ Removing and installing
⇒ [page 134](#)
- ☐ On inside
- ☐ The inner belt buckle is permanently attached to the belt webbing of the belt inertia reel
- ☐ Assembly overview ⇒ [page 106](#)
- ☐ Removing and installing ⇒ [page 113](#)

7 - Seat trims, seat frame

- ☐ Qty. 4
- ☐ Assembly overview - seat pan ⇒ [page 338](#)
- ☐ Removing and installing ⇒ [page 368](#)

8 - Seat frame

- ☐ Assembly overview ⇒ [page 338](#)
- ☐ Removing and installing ⇒ [page 343](#)

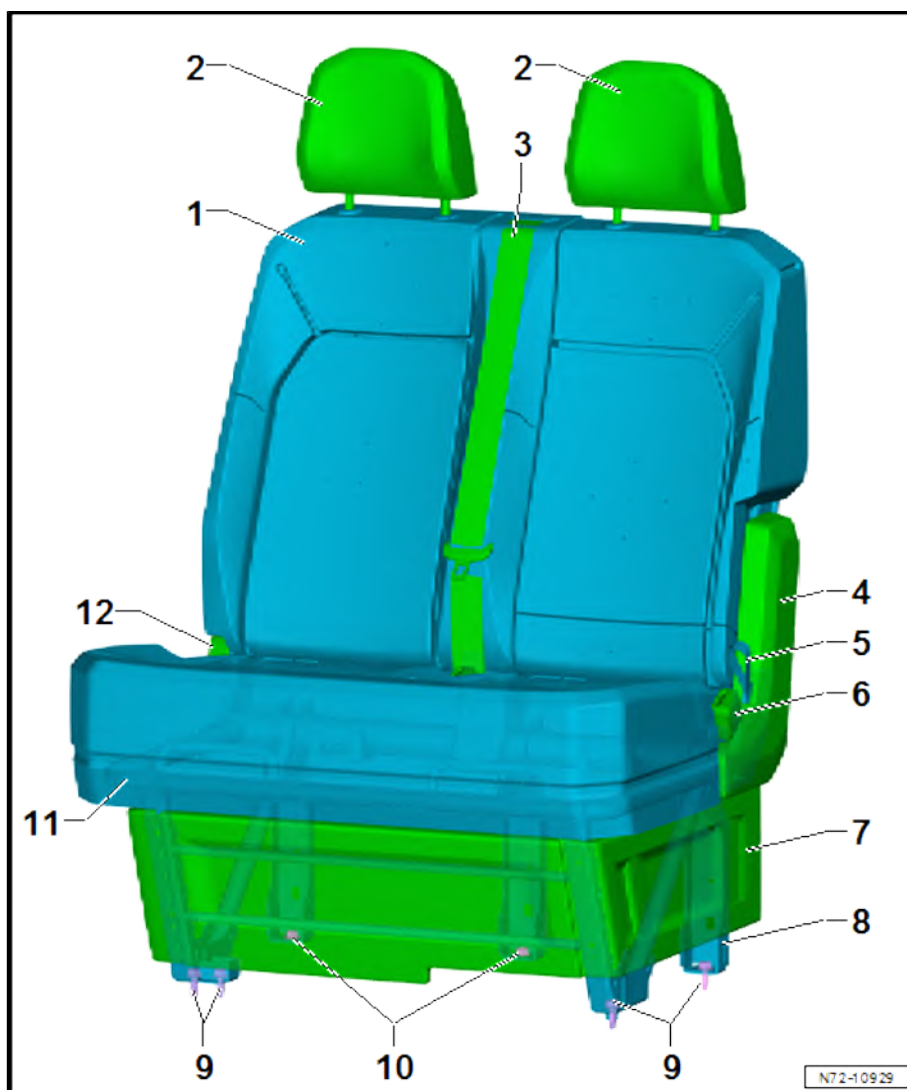



9 - Bolts

- ☐ If removal was carried out due to an accident, renew bolts
- ☐ Qty. 4
- ☐ 50 Nm

10 - Nuts

- ☐ If removal was carried out due to an accident, renew nuts
- ☐ Qty. 2
- ☐ 50 Nm

11 - Seat cushion

- ☐ Assembly overview ⇒ [page 338](#)
- ☐ Removing and installing ⇒ [page 343](#)

12 - Seat trim, backrest

- ☐ Sill side
- ☐ Assembly overview - front backrest ⇒ [page 333](#)
- ☐ Removing and installing ⇒ [page 368](#)

2.3 Assembly overview - front backrest

⇒ [“2.3.1 Assembly overview - front backrest, fixed”, page 333](#)

⇒ [“2.3.2 Assembly overview - front backrest, manual lumbar support”, page 334](#)

⇒ [“2.3.3 Assembly overview - front backrest, suspension seat, electronic lumbar support, massage function”, page 335](#)

⇒ [“2.3.4 Assembly overview - front backrest, bench seat”, page 336](#)

2.3.1 Assembly overview - front backrest, fixed

1 - Backrest frame

- ☐ Removing and installing
⇒ [page 355](#)

2 - Head restraint guides

- ☐ Qty. 2
- ☐ Removing and installing
⇒ [page 361](#)

3 - Head restraint

- ☐ Removing and installing
⇒ [page 361](#)

4 - Lumbar support frame

- ☐ Removing and installing
⇒ [page 354](#)

5 - Side airbag

- ☐ Assembly overview
⇒ [page 154](#)
- ☐ Removing and installing
⇒ [page 154](#)

6 - Wiring harness

- ☐ From side airbag igniter on driver side - N199- / side airbag igniter on front passenger side - N200- .

7 - Bolts

- ☐ Renew after removal
- ☐ Qty. 4
- ☐ 34 Nm

8 - Seat pan

- ☐ Assembly overview
⇒ [page 338](#)


- ☐ Removing and installing cover and padding on seat pan ⇒ [page 406](#)

9 - Backrest padding with cover

- ☐ Assembly overview ⇒ [page 403](#)
- ☐ Removing and installing ⇒ [page 411](#)

10 - Backrest adjustment handle

- ☐ Removing and installing ⇒ [page 366](#)

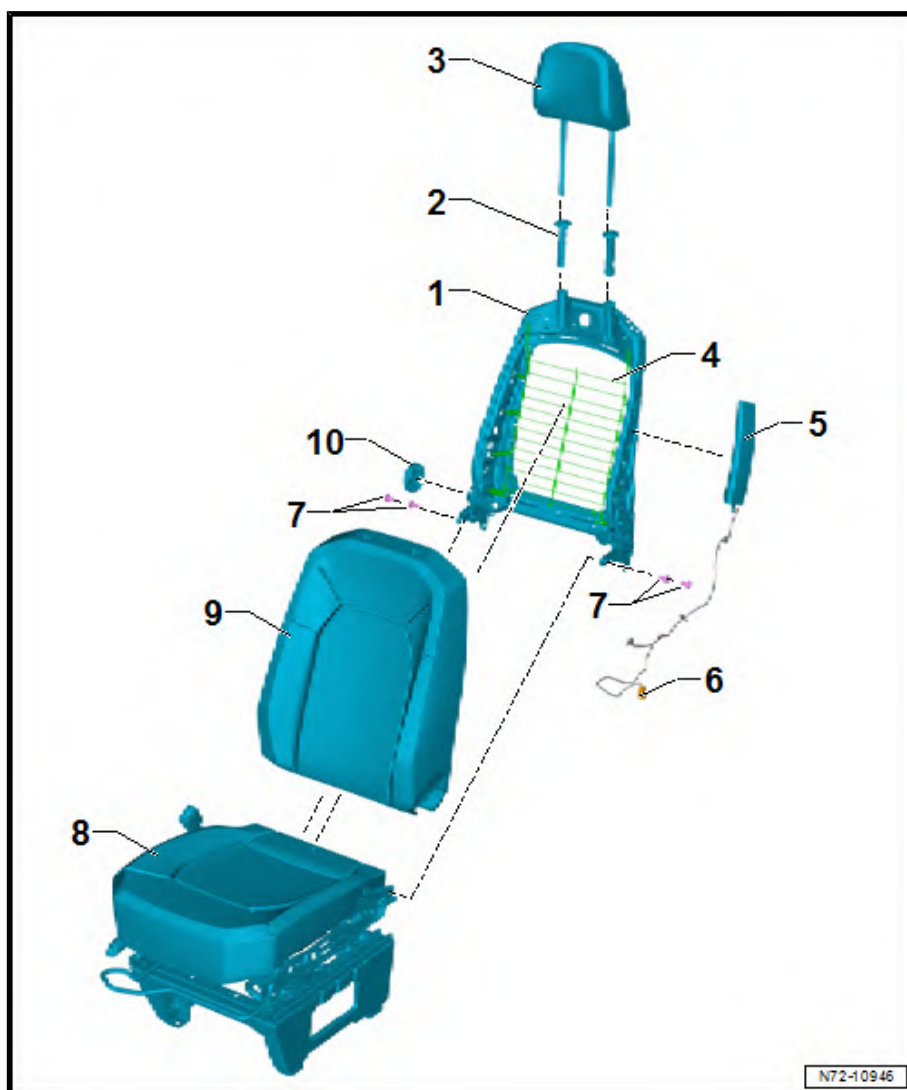

2.3.2 Assembly overview - front backrest, manual lumbar support

1 - Backrest frame

- ☐ Removing and installing
⇒ [page 355](#)

2 - Head restraint guides

- ☐ Qty. 2
- ☐ Removing and installing
⇒ [page 361](#)

3 - Head restraint

- ☐ Removing and installing
⇒ [page 361](#)

4 - Lumbar support

- ☐ With lumbar support frame
- ☐ Removing and installing
⇒ [page 354](#)

5 - Side airbag

- ☐ Assembly overview
⇒ [page 154](#)
- ☐ Removing and installing
⇒ [page 154](#)

6 - Lumbar support adjuster

- ☐ Removing and installing
⇒ [page 354](#)

7 - Wiring harness

- ☐ From side airbag igniter on driver side - N199- / side airbag igniter on front passenger side - N200- .

8 - Bolts

- ☐ Qty. 4
- ☐ 20 Nm

9 - Seat pan

- ☐ Assembly overview ⇒ [page 338](#)
- ☐ Removing and installing cover and padding on seat pan ⇒ [page 406](#)

10 - Backrest padding with cover

- ☐ Assembly overview ⇒ [page 403](#)
- ☐ Removing and installing ⇒ [page 411](#)

11 - Backrest adjustment handle

- ☐ Removing and installing ⇒ [page 366](#)


12 - Seat armrest cover

13 - Bolt

- ☐ 20 Nm

14 - Seat armrest

- ☐ Removing and installing ⇒ [page 360](#)

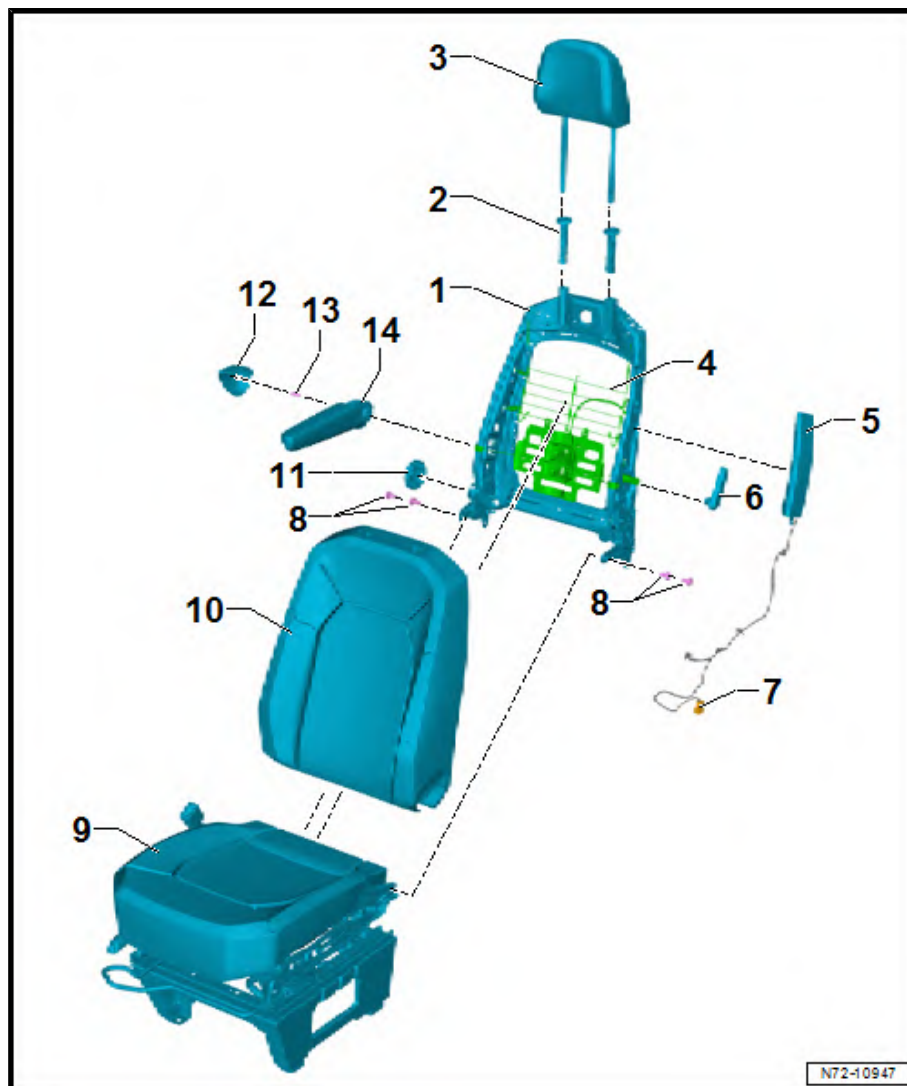

2.3.3 Assembly overview - front backrest, suspension seat, electronic lumbar support, massage function

1 - Backrest frame

- ☐ Removing and installing
⇒ [page 355](#)

2 - Head restraint guides

- ☐ Qty. 2
- ☐ Removing and installing
⇒ [page 361](#)

3 - Head restraint

- ☐ Removing and installing
⇒ [page 361](#)

4 - Lumbar support

- ☐ Driver seat lumbar support longitudinal adjustment motor - V125-
- ☐ Driver seat lumbar support height adjustment motor - V129-
- ☐ Front passenger seat lumbar support longitudinal adjustment motor - V126-
- ☐ Front passenger seat lumbar support height adjustment motor - V130-
- ☐ Removing and installing
⇒ [page 363](#)

5 - Side airbag

- ☐ Assembly overview
⇒ [page 154](#)
- ☐ Removing and installing
⇒ [page 154](#)

6 - Wiring harness

- ☐ From side airbag igniter on driver side - N199- / side airbag igniter on front passenger side - N200- .

7 - Seat armrest covers

- ☐ Qty. 2

8 - Bolts

- ☐ Qty. 2
- ☐ 20 Nm

9 - Seat armrests


- ☐ Qty. 2
- ☐ Removing and installing ⇒ [page 360](#)

10 - Bolts

- ☐ Qty. 4
- ☐ 50 Nm

11 - Wiring harness

- ☐ From lumbar support motor

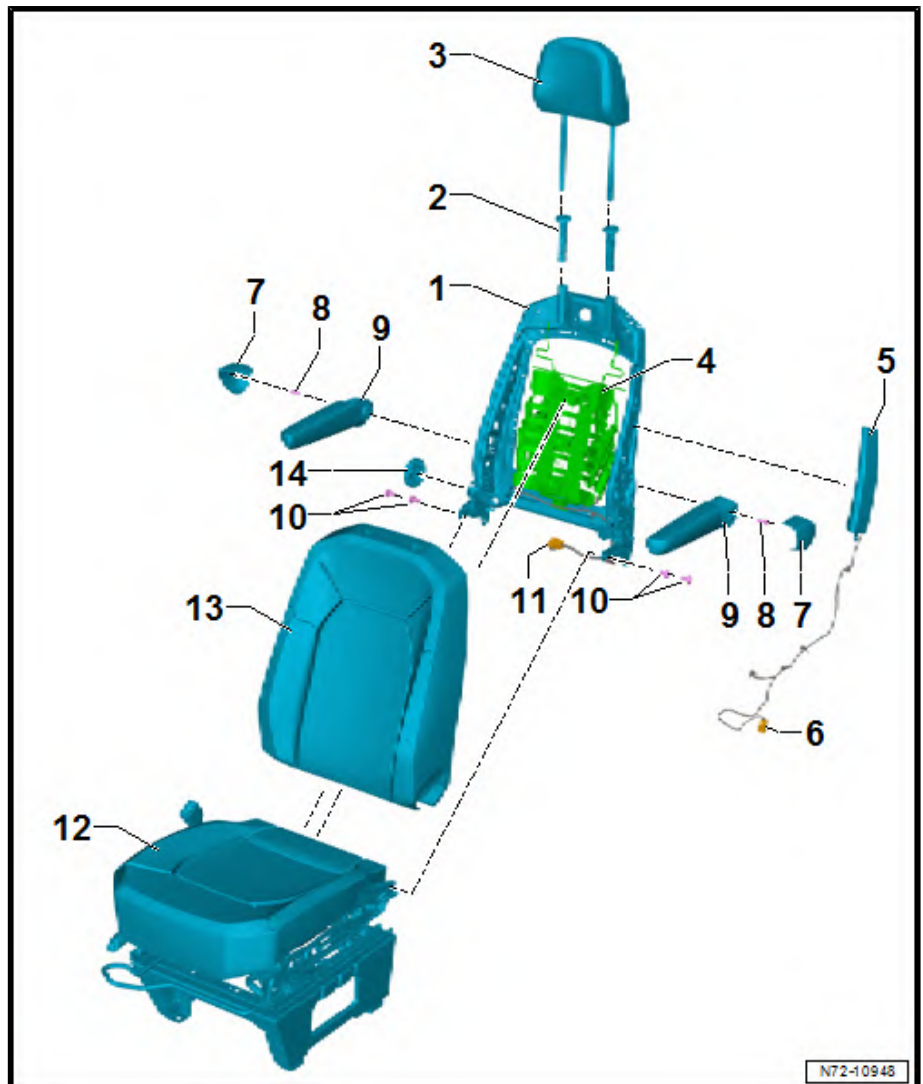

N72-10948

12 - Seat pan

- ❑ Assembly overview ⇒ [page 338](#)
- ❑ Removing and installing cover and padding on seat pan ⇒ [page 406](#)

13 - Backrest padding with cover

- ❑ Assembly overview ⇒ [page 403](#)
- ❑ Removing and installing ⇒ [page 411](#)

14 - Backrest adjustment handle

- ❏ Removing and installing ⇒ **page 366**

2.3.4 Assembly overview - front backrest, bench seat



Note

The description is for vehicles with a folding backrest. Adapt accordingly for vehicles without a backrest.

1 - Backrest frame

- ❑ On outside
- ❑ Removing and installing
⇒ **page 355**

2 - Backrest frame

- ❑ Centre
- ❑ Removing and installing
⇒ page 355

3 - Head restraint guides

- ❑ Qty. 4
- ❑ Removing and installing
⇒ page 361

4 - Head restraints

- ❑ Qty. 2
- ❑ Removing and installing
⇒ **page 361**

5 - Seat belt

- ❑ The belt buckle is permanently attached to the belt webbing of the belt inertia reel
- ❑ Assembly overview
⇒ [page 106](#)
- ❑ Removing and installing
⇒ [page 113](#)

6 - Belt guide


- ❑ Removing and installing
⇒ page 128

7 - Rear section

- ❏ Removing and installing
⇒ [page 368](#)

8 - Cover

- ☐ For pillar with three-point seat belt
- ☐ Discontinued as of calendar week 46/2017
- ☐ Removing and installing ⇒ **page 368**

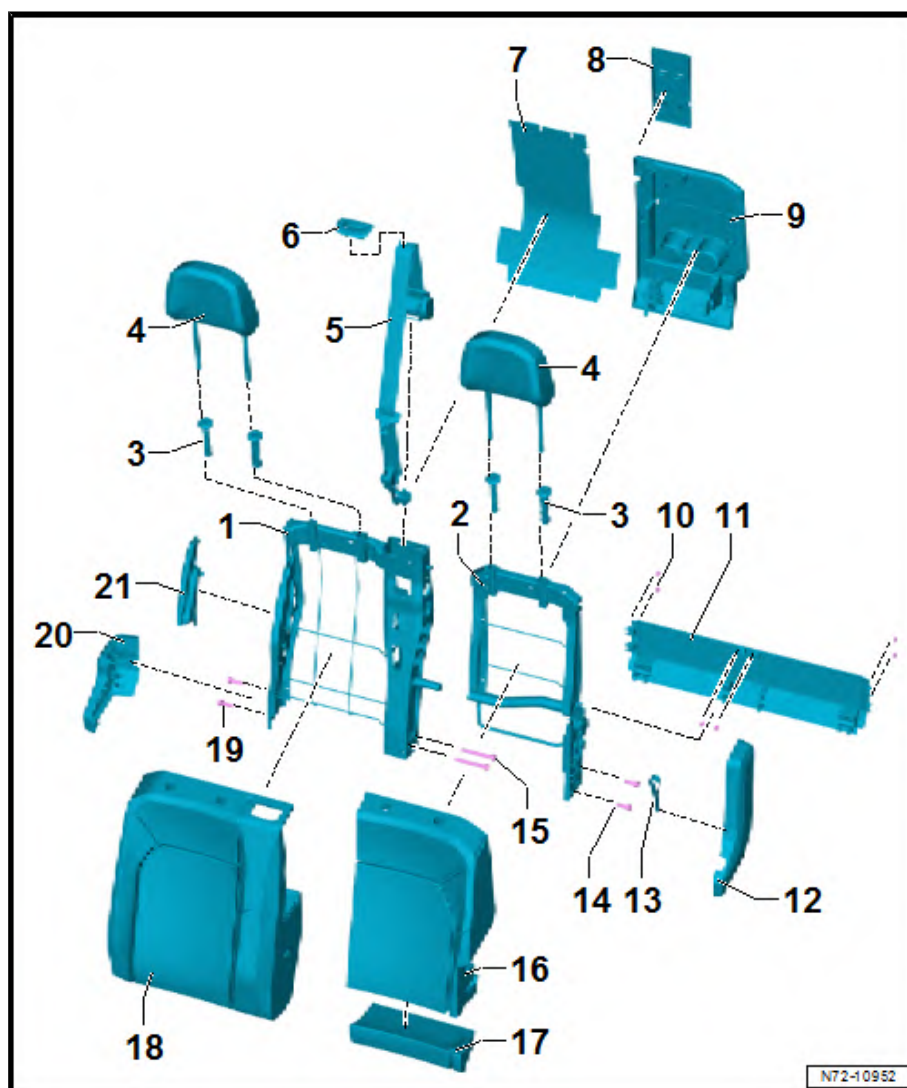



9 - Seat trim

- ☐ Centre
- ☐ Removing and installing ⇒ [page 368](#)

10 - Clip

- ☐ Qty. 6

11 - Backrest trim

- ☐ Rear
- ☐ Removing and installing ⇒ [page 368](#)

12 - Backrest trim

- ☐ Tunnel side
- ☐ Removing and installing ⇒ [page 368](#)

13 - Retaining loop for seat rake adjustment

- ☐ Removing and installing ⇒ [page 353](#)

14 - Bolts

- ☐ Renew after removal
- ☐ Qty. 2
- ☐ 40 Nm

15 - Bolts

- ☐ Renew after removal
- ☐ Qty. 2
- ☐ 40 Nm

16 - Backrest padding with cover

- ☐ Centre
- ☐ Assembly overview ⇒ [page 403](#)
- ☐ Removing and installing ⇒ [page 411](#)

17 - Intermediate padding with cover

- ☐ Assembly overview ⇒ [page 403](#)
- ☐ Removing and installing ⇒ [page 411](#)

18 - Backrest padding with cover

- ☐ On outside
- ☐ Assembly overview ⇒ [page 403](#)
- ☐ Removing and installing ⇒ [page 411](#)

19 - Bolts

- ☐ Renew after removal
- ☐ Qty. 2
- ☐ 40 Nm

20 - Backrest trim

- ☐ Sill side
- ☐ Removing and installing ⇒ [page 368](#)

21 - Side airbag

- ☐ Assembly overview ⇒ [page 154](#)
- ☐ Removing and installing ⇒ [page 154](#)

2.4 Assembly overview - seat pan

⇒ [“2.4.1 Assembly overview - seat pan, fixed”, page 338](#)

⇒ [“2.4.2 Assembly overview - seat pan, manual adjustment”, page 339](#)

⇒ [“2.4.3 Assembly overview - seat pan, suspension seat, electronic lumbar support, massage function”, page 340](#)

⇒ [“2.4.4 Assembly overview - seat pan, bench seat”, page 342](#)

2.4.1 Assembly overview - seat pan, fixed

1 - Seat pan

- ☐ Removing and installing
⇒ [page 343](#)

2 - Seat trim

- ☐ Tunnel side
- ☐ Removing and installing
⇒ [page 368](#)

3 - Bolt

- ☐ Specified torque
⇒ [Item 2 \(page 111\)](#)

4 - Belt buckle

- ☐ Assembly overview
⇒ [page 111](#)
- ☐ Removing and installing
⇒ [page 134](#)

5 - Seat occupied recognition

- ☐ Removing and installing
⇒ [page 170](#)

6 - Seat padding with cover

- ☐ Assembly overview
⇒ [page 399](#)
- ☐ Removing and installing
⇒ [page 406](#)

7 - Pop rivets

- ☐ Qty. 4

8 - Seat trim


- ☐ Rear
- ☐ Only vehicles without partition panel or without PR number K4F (single cab)
- ☐ Removing and installing ⇒ [page 368](#)

9 - Bracket

- ☐ Rear
- ☐ For seat trim
- ☐ Removing and installing ⇒ [page 368](#)

10 - Seat trim

- ☐ Sill side
- ☐ Removing and installing ⇒ [page 368](#)

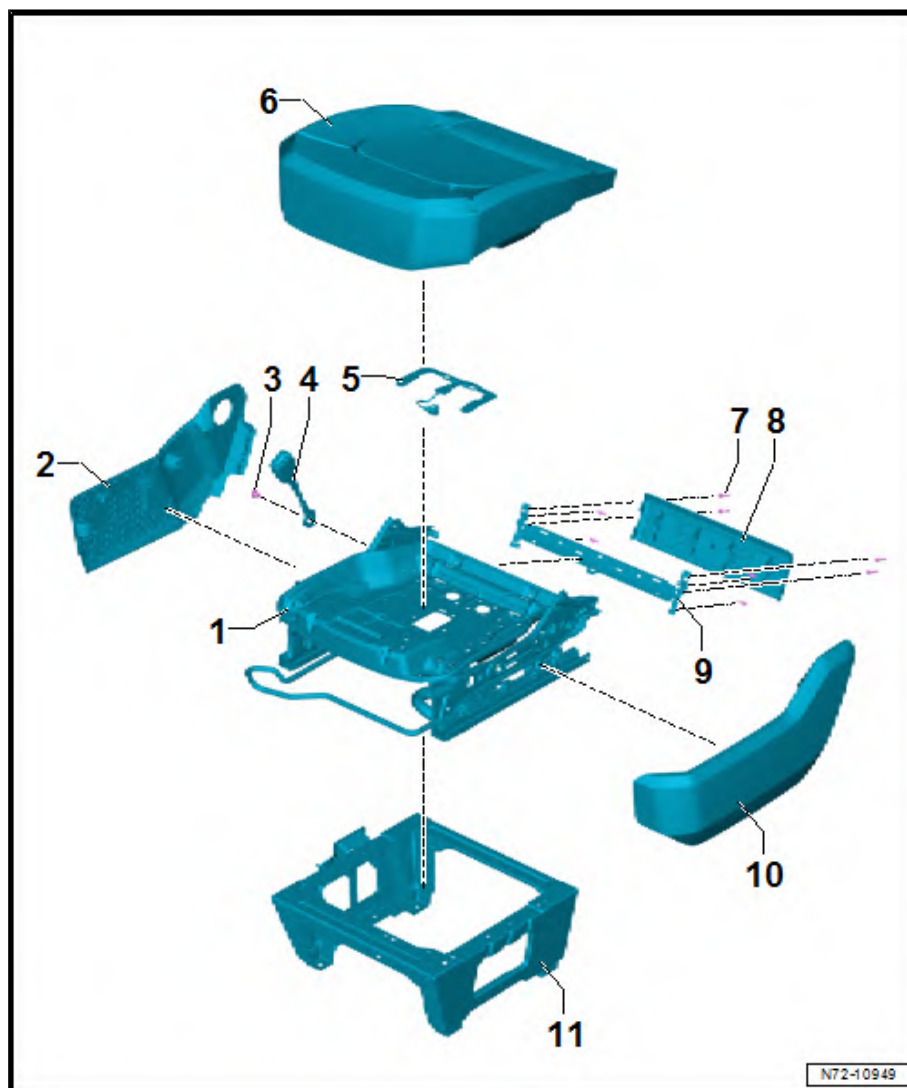



11 - Seat box

- ☐ Removing and installing ⇒ [page 343](#)

2.4.2 Assembly overview - seat pan, manual adjustment

1 - Seat pan

- ☐ Removing and installing
⇒ [page 343](#)

2 - Seat trim

- ☐ Tunnel side
- ☐ Removing and installing
⇒ [page 368](#)

3 - Bolt

- ☐ Specified torque
⇒ [Item 2 \(page 111\)](#)

4 - Belt buckle

- ☐ Assembly overview
⇒ [page 111](#)
- ☐ Removing and installing
⇒ [page 134](#)

5 - Seat occupied recognition

- ☐ Removing and installing
⇒ [page 170](#)

6 - Seat padding with cover

- ☐ Assembly overview
⇒ [page 399](#)
- ☐ Removing and installing
⇒ [page 406](#)

7 - Pop rivets

- ☐ Qty. 4

8 - Seat trim

- ☐ Rear
- ☐ Only vehicles without
partition panel or with-
out PR number K4F
(single cab)
- ☐ Removing and installing ⇒ [page 368](#)

9 - Bracket

- ☐ Rear
- ☐ For seat trim
- ☐ Removing and installing ⇒ [page 368](#)

10 - Seat height adjuster


- ☐ The mechanism for seat height adjustment is permanently attached to the seat pan; if it is defective,
renew seat pan ⇒ [page 355](#)
- ☐ Removing and installing ⇒ [page 352](#)

11 - Bolts

- ☐ Qty. 3
- ☐ 2.5 Nm

12 - Handle for seat height adjustment

- ☐ Removing and installing ⇒ [page 352](#)

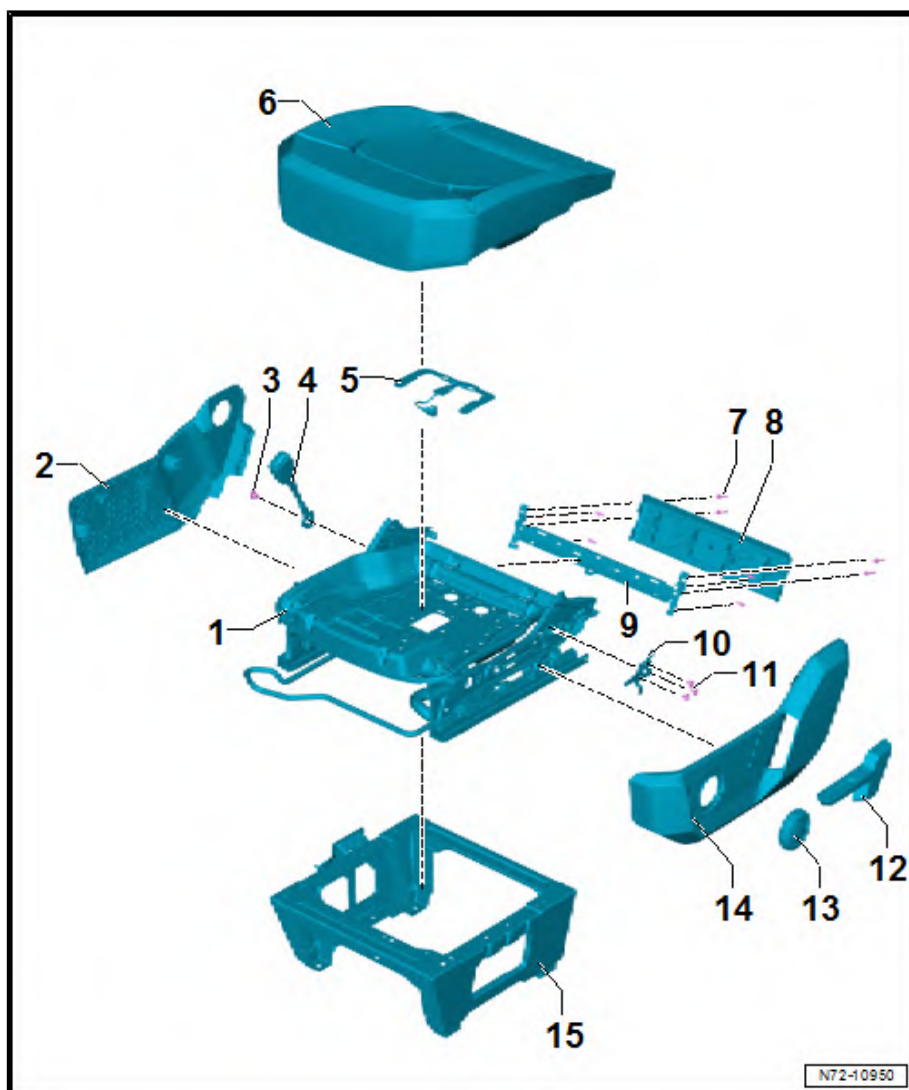



13 - Handle for seat rake adjustment

- ❑ Removing and installing ⇒ [page 353](#)

14 - Seat trim

- ❑ Sill side
- ❑ Removing and installing ⇒ [page 368](#)

15 - Seat box

- ❑ Removing and installing ⇒ [page 343](#)

2.4.3 Assembly overview - seat pan, suspension seat, electronic lumbar support, massage function

1 - Seat pan

- ❑ Removing and installing
⇒ [page 343](#)

2 - Seat trim

- ❑ Tunnel side
- ❑ Removing and installing
⇒ [page 368](#)

3 - Bolt

- ❑ Specified torque
⇒ [Item 2 \(page 111\)](#)

4 - Belt buckle

- ❑ Assembly overview
⇒ [page 111](#)
- ❑ Removing and installing
⇒ [page 134](#)

5 - Seat occupied recognition

- ❑ Removing and installing
⇒ [page 170](#)

6 - Seat depth adjustment

- ❑ Assembly overview
⇒ [page 343](#)
- ❑ Removing and installing
⇒ [page 377](#)

7 - Seat padding with cover

- ❑ Assembly overview
⇒ [page 399](#)
- ❑ Removing and installing
⇒ [page 406](#)

8 - Pop rivets


- ❑ Qty. 4

9 - Seat trim

- ❑ Rear
- ❑ Only vehicles without partition panel or without PR number K4F (single cab)
- ❑ Removing and installing ⇒ [page 368](#)

10 - Bracket

- ❑ Rear
- ❑ For seat trim
- ❑ Removing and installing ⇒ [page 368](#)

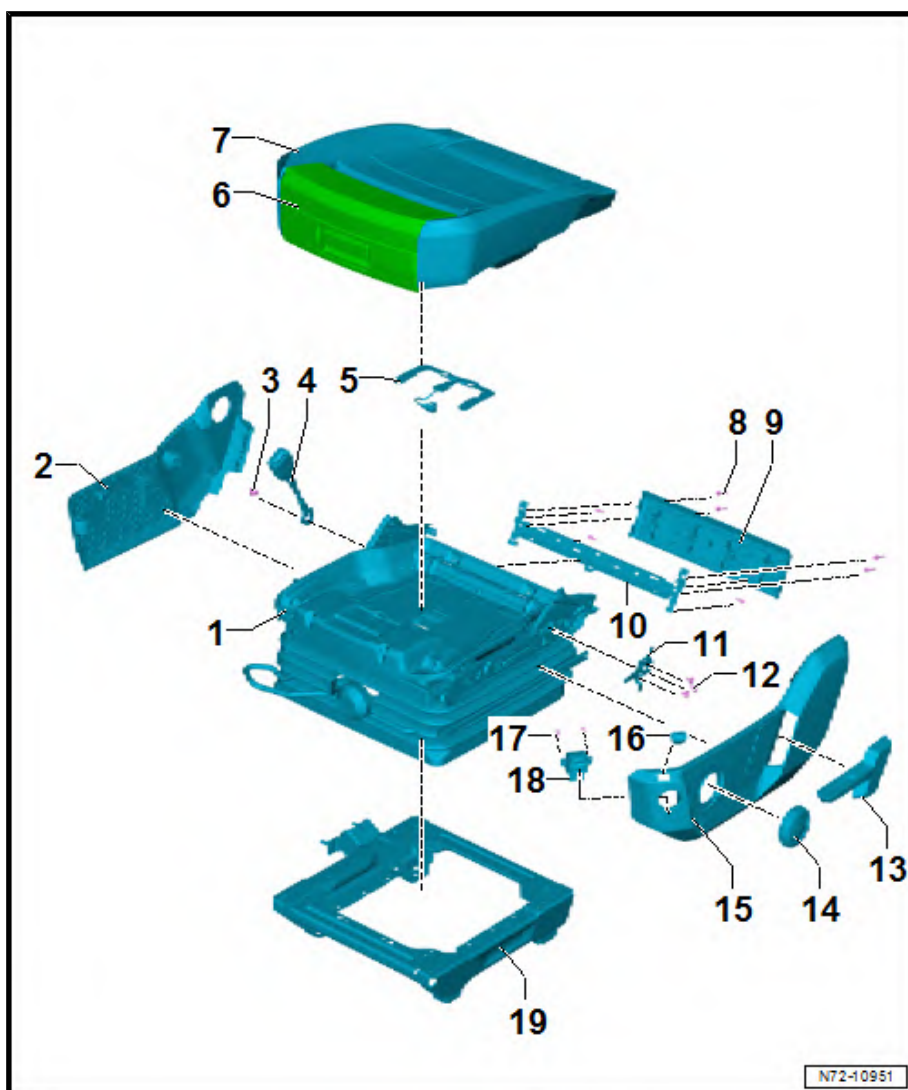



11 - Seat height adjuster

- ☐ The mechanism for seat height adjustment is permanently attached to the seat pan; if it is defective, renew seat pan ⇒ [page 355](#)
- ☐ Removing and installing ⇒ [page 352](#)

12 - Bolts

- ☐ Qty. 3
- ☐ 2.5 Nm

13 - Handle for seat height adjustment

- ☐ Removing and installing ⇒ [page 352](#)

14 - Handle for seat rake adjustment

- ☐ Removing and installing ⇒ [page 353](#)

15 - Seat trim

- ☐ Sill side
- ☐ Removing and installing ⇒ [page 368](#)

16 - Massage function button -E670- / -E671-

- ☐ Removing and installing ⇒ [page 362](#)

17 - Bolts

- ☐ Qty. 2
- ☐ 1 Nm

18 - Lumbar support adjustment switch -E176- / -E177-

- ☐ Removing and installing ⇒ [page 362](#)

19 - Seat box

- ☐ Removing and installing ⇒ [page 343](#)



2.4.4 Assembly overview - seat pan, bench seat



Note

The description is for vehicles with a folding backrest. Adapt accordingly for vehicles without a backrest.

1 - Seat frame

- ❑ Removing and installing
⇒ [page 343](#)

2 - Seat trim

- ❑ Rear
- ❑ Removing and installing
⇒ [page 368](#)

3 - Belt buckle

- ❑ On outside
- ❑ Assembly overview
⇒ [page 111](#)
- ❑ Removing and installing
⇒ [page 134](#)

4 - Nut

- ❑ 40 Nm

5 - Seat trims

- ❑ On side
- ❑ Qty. 2
- ❑ Removing and installing
⇒ [page 368](#)

6 - Bolts

- ❑ Qty. 6
- ❑ 4 Nm

7 - Seat trim


- ❑ Front
- ❑ Removing and installing
⇒ [page 368](#)

8 - Seat padding with covers

- ❑ Qty. 2
- ❑ Assembly overview
⇒ [page 399](#)
- ❑ Removing and installing ⇒ [page 406](#)

9 - Seat pans

- ❑ Qty. 2
- ❑ Removing and installing seat cushion ⇒ [page 343](#)

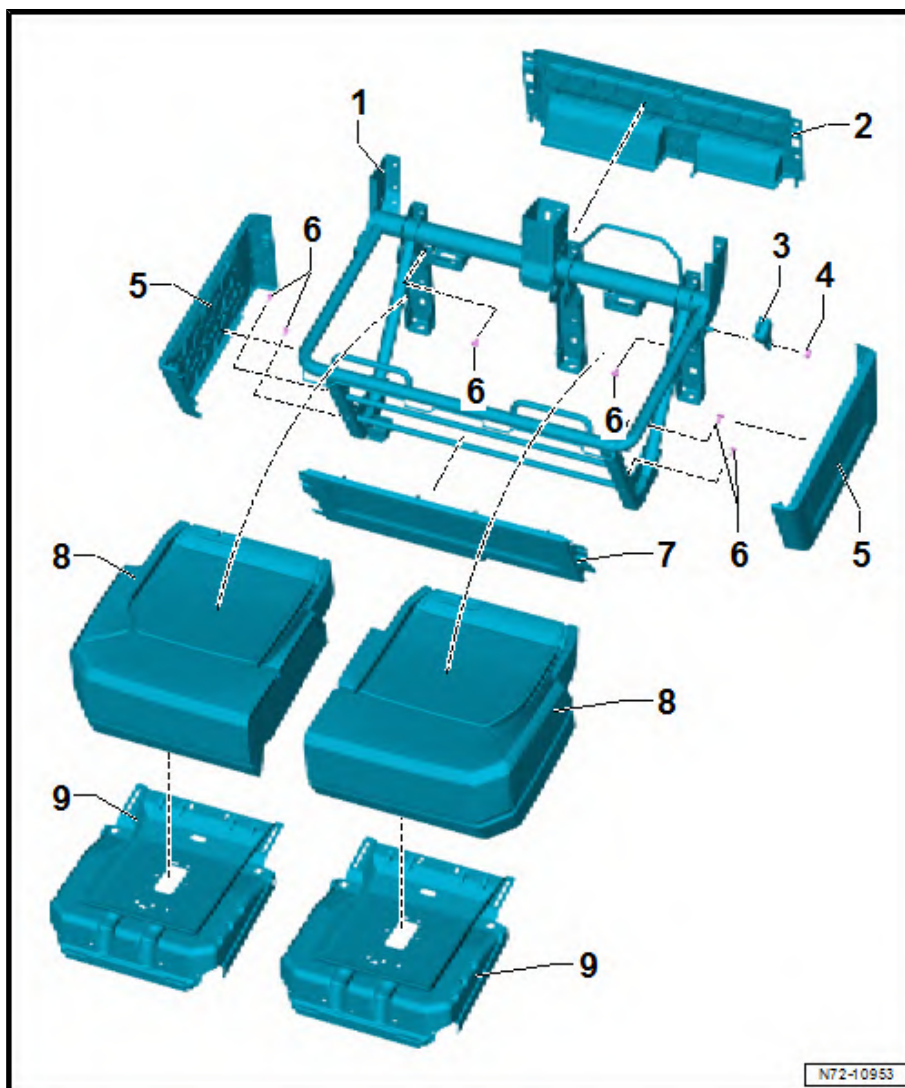

2.5 Assembly overview - seat depth adjustment

1 - Seat padding with cover

- ☐ Assembly overview
⇒ [page 399](#)
- ☐ Removing and installing
⇒ [page 406](#)

2 - Seat depth adjustment

- ☐ Removing and installing
⇒ [page 377](#)

3 - Seat depth adjuster trim


- ☐ Removing and installing
⇒ [page 377](#)

4 - Seat pan

- ☐ Assembly overview
⇒ [page 338](#)
- ☐ Removing and installing
⇒ [page 343](#)

5 - Bolts

- ☐ Qty. 4
- ☐ 3.5 Nm

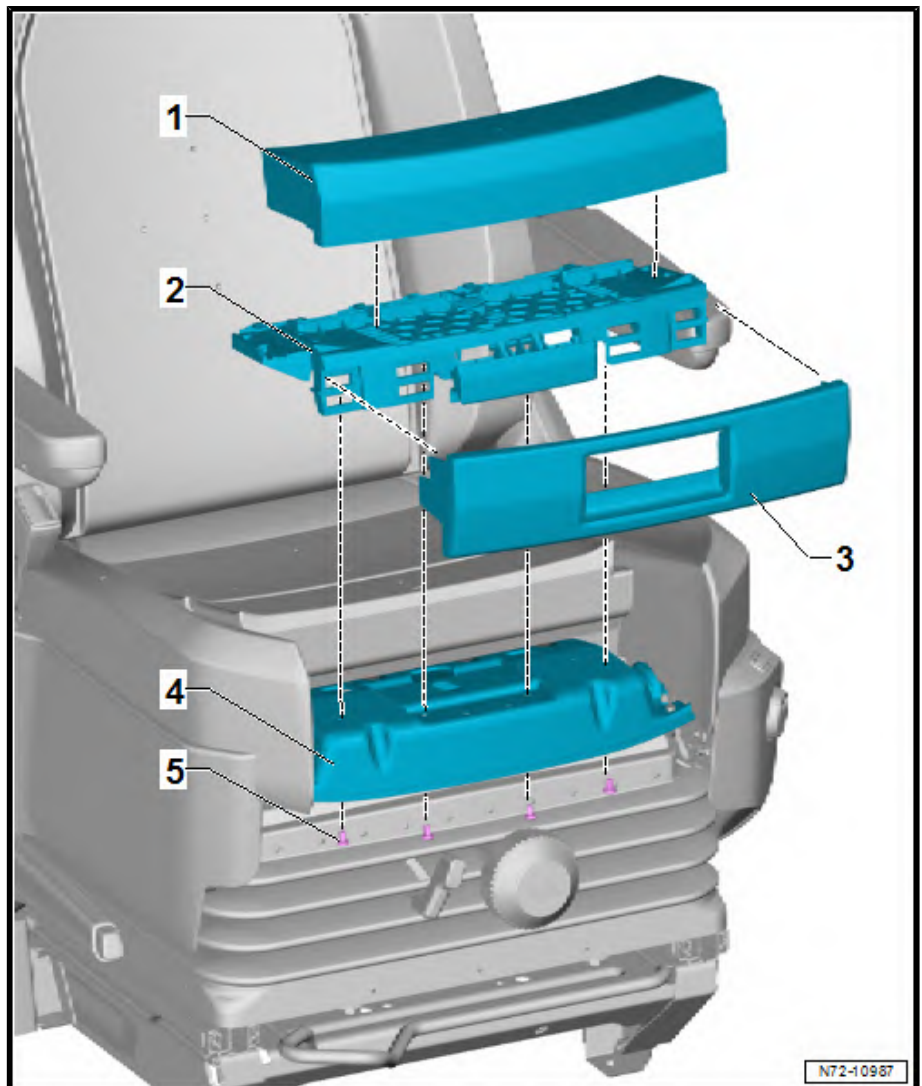

2.6 Removing and installing front seat

⇒ [“2.6.1 Removing and installing front seat, individual seat”, page 343](#)

⇒ [“2.6.2 Removing and installing front seat box, single seat”, page 345](#)

⇒ [“2.6.3 Removing and installing front seat, bench seat”, page 347](#)

⇒ [“2.6.4 Removing and installing front seat cushion, bench seat”, page 350](#)

2.6.1 Removing and installing front seat, individual seat

Special tools and workshop equipment required



- ◆ Torque wrench - V.A.G 1331-





Removing

Vehicles with side airbag

- Connect airbag adapter ➔ [page 350](#) .

Continued for all vehicles

- Front seat must be positioned in highest position.
- Do not unscrew bolts with an impact driver. Unscrew them by hand.
- Release locking lever -2-. When doing this, move front seat via seat longitudinal adjuster -4- to rearmost position.
- Unscrew bolts -1- and -3-.
- Front seat must be positioned in rearmost position.
- Switch off ignition and all electrical consumers.
- Withdraw ignition key.
- If fitted, lay wiring harness aside.
- If fitted, disconnect electrical connectors -2-.
- Unclip clip -3- from front seat -1-.
- Unclip clip -3- from coupling point -4-.

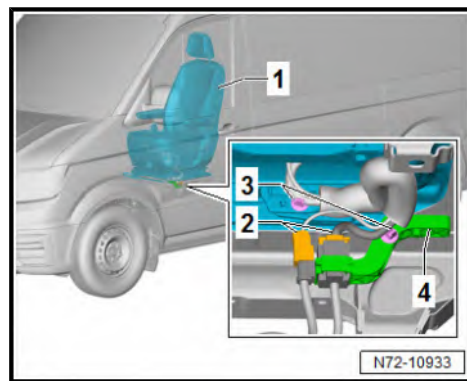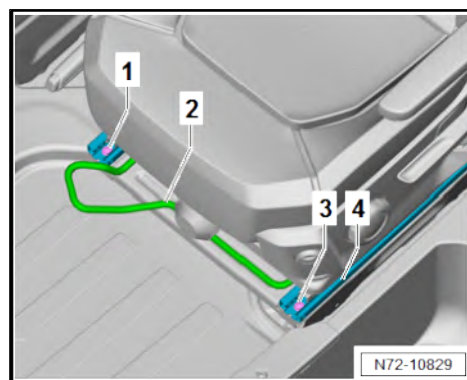


- Release locking lever. When doing this, move front seat via seat longitudinal adjuster -2- to foremost position.
- Unscrew bolts -1- and -3-.
- Front seat must be positioned in neutral position.
- Use suitable means to protect body and surrounding components against damage.
- Lift out front seat, and place it on a suitable surface.

Installing


Install in reverse order of removal, observing the following:

- Check threads in mounting plate for damage.

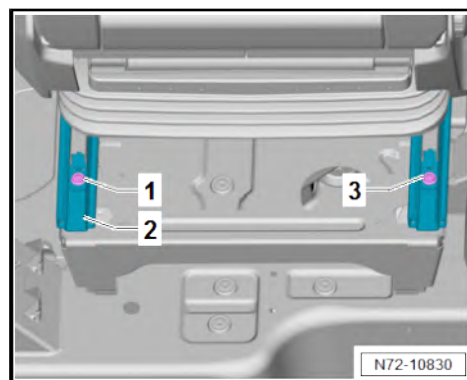



- Engage seat rails -2- synchronously.
- Screw in bolts -1- and -3- by hand as far as stop.

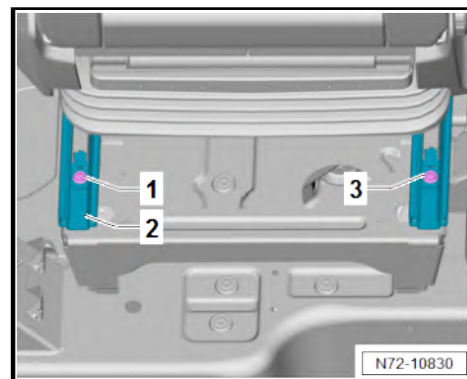

- Release locking lever -2-. When doing this, move front seat via seat rails -4- to rearmost position.
- Screw in bolts -1- and -3- by hand as far as stop.
- Tighten bolts at front first, then tighten bolts at rear.


Vehicles with side airbag



Note

Battery must be connected with ignition switched on. If pyrotechnic components (e.g. airbag, belt tensioners) are repaired incorrectly, they could be accidentally triggered. Ensure that nobody is in vehicle when connecting battery.

- Switch on ignition.
- Connect battery earth cable with ignition switched on ⇒ Electrical system; Rep. gr. 27 ; Battery; Connecting and disconnecting battery .

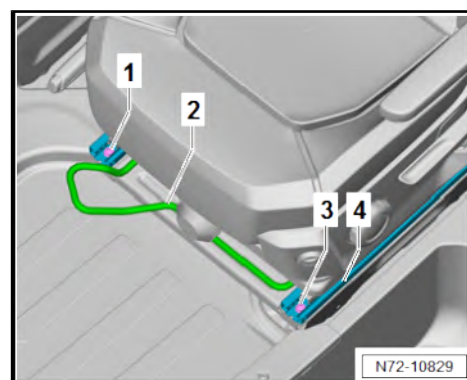

Note

If the ignition is not switched on after reconnecting the battery, the ignition may only be switched on (key/button) from the driver's seat with the seat set in the rearmost position.

- Use ⇒ Vehicle diagnostic tester to read event memory, clear event memory as necessary, and then read it again.

Specified torques

- ◆ ⇒ [“2.2 Assembly overview - front seat”, page 324](#)

2.6.2 Removing and installing front seat box, single seat

Removing

- Remove front seat ⇒ [page 343](#) .

Vehicles with 12 V socket - UX3- or DC/AC converter with socket, 12 V - 230 V - U13-



Note


In the housing of the DC/AC converter with socket, 12 V - 230 V - U13- there are capacitors that may still be charged with a residual voltage.



- Disconnect electrical connector for 12 V socket - UX3- or DC/AC converter with socket, 12 V - 230 V - U13- .

Continued for all vehicles

- Unscrew bolts -2-.
- Remove holders -3- from seat box -1-.
- Place holders -3- with lines connected onto floor covering.
- If fitted, lay wiring harness aside.

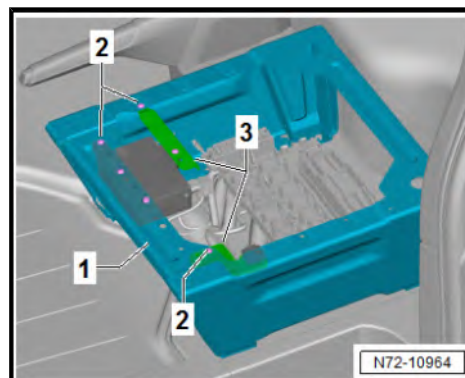


- Remove handbrake lever trims -2- ➔ [page 49](#) .
- Unscrew bolts -3-.



Note

Do not overstretch cable of parking brake lever or pull out of rubber grommet in floor covering.

- Remove parking brake lever with cable -2-, and place it onto floor covering.
- Do not unscrew bolts with an impact driver. Unscrew them by hand.
- Unscrew bolts -5-.
- Unscrew nuts -4-.
- Guide seat box -1- over relay and fuse carrier, and remove it.

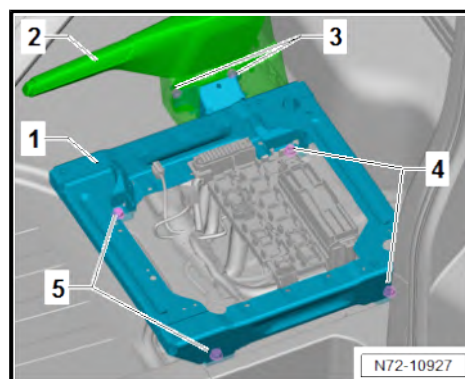

Installing

Install in reverse order of removal, observing the following:

- Check threads in mounting plate for damage.
- Bring seat box -1- into position in vehicle.




Tightening sequence for seat box

– Tighten bolts and nuts in the sequence shown:

Se- quenc e	Bolts and nuts	Specified torque
1.	-2- and -5-	Screw in to stop by hand
2.	-4- and -3-	Screw in to stop by hand
3rd	-2- and -5-	50 Nm
4th	-4- and -3-	50 Nm

Specified torques

- ◆ ⇒ [“2.2 Assembly overview - front seat”, page 324](#)
- ◆ Removing and installing DC/AC converter with socket, 12 V - 230 V - U13- ⇒ Electrical system; Rep. gr. 96 ; Cigarette lighter, Socket; Removing and installing DC/AC converter with socket, 12 V - 230 V - U13-
- ◆ Parking brake; Assembly overview - parking brake ⇒ Brake system; Rep. gr. 46 ; Parking brake; Assembly overview - parking brake

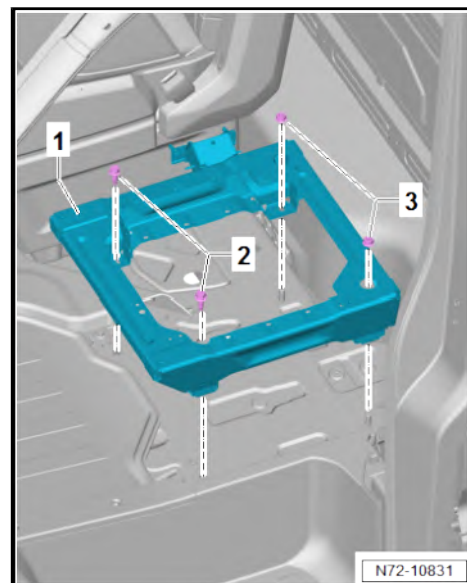

2.6.3 Removing and installing front seat, bench seat

Special tools and workshop equipment required

- ◆ Torque wrench - V.A.G 1331-



Removing



Note

The removal and installation procedure on vehicles with a partition panel is carried out via the load compartment. The removal and installation procedure on vehicles without a partition panel is carried out via the passenger compartment.

- Remove bench seat cushion ⇒ [page 343](#) .

Vehicles with second heater unit in driver area or right-hand drive equipment

- Remove cover for second heater unit ⇒ [page 365](#) .

Vehicles with side airbag

- Connect airbag adapter for bench seat ⇒ [page 350](#) .




Continued for all vehicles

- If present, lay wiring harness from bench seat -1- aside.
- If fitted, disconnect electrical connectors -4- under bench seat -1-.
- Remove coupling point -5-.
- Do not unscrew bolts and nuts with an impact driver. Unscrew them by hand.
- Unscrew bolts -2-.
- Unscrew nuts -3-.
- Use suitable means to protect body and surrounding components against damage.
- With the aid of a second mechanic, remove bench seat -1-, and place it onto a suitable surface.

Installing

Install in reverse order of removal, observing the following:

- Check threads in mounting plate for damage.
- Bring bench seat -1- into position in vehicle.

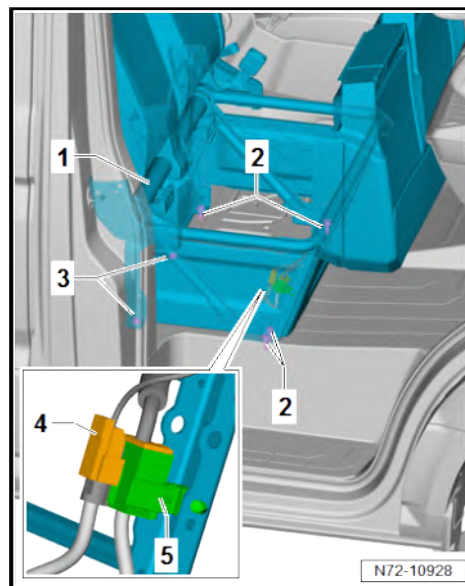



Tightening sequence for bench seat

- Tighten bolts and nuts in the sequence shown:

Se- quenc e	Bolts and nuts	Specified torque
1.	-3-	Screw in to stop by hand
2.	-2-	Screw in to stop by hand
3rd	-3-	50 Nm
4th	-2-	50 Nm

Vehicles with side airbag



Note

Battery must be connected with ignition switched on. If pyrotechnic components (e.g. airbag, belt tensioners) are repaired incorrectly, they could be accidentally triggered. Ensure that nobody is in vehicle when connecting battery.

- Switch on ignition.
- Connect battery earth cable with ignition switched on ⇒ Electrical system; Rep. gr. 27 ; Battery; Connecting and disconnecting battery .




Note

If the ignition is not switched on after reconnecting the battery, the ignition may only be switched on (key/button) from the driver's seat with the seat set in the rearmost position.

- Use ⇒ Vehicle diagnostic tester to read event memory, clear event memory as necessary, and then read it again.

Specified torques

- ◆ ⇒ ["2.2 Assembly overview - front seat", page 324](#)

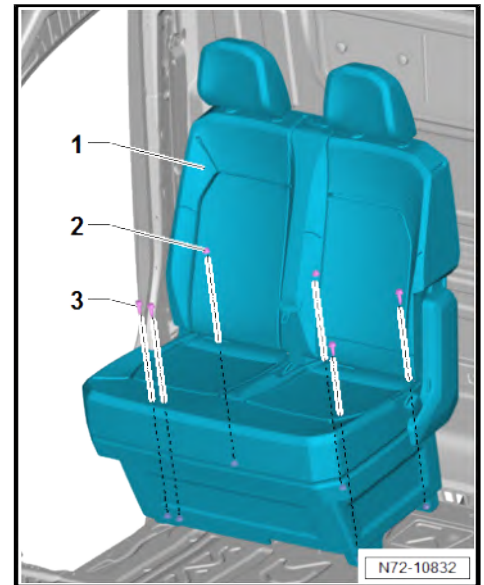



2.6.4 Removing and installing front seat cushion, bench seat

Removing


- Fold up and fix seat cushion.
- Switch off ignition and all electrical consumers.
- Withdraw ignition key.
- If fitted, disconnect electrical connectors under bench seat.
- If present, lay wiring harness from seat pans -1- aside.

For vehicles with retaining straps

- Turn retaining straps -2- in -direction of arrow B-.
- Detach retaining straps -2- in -direction of arrow A-.
- Guide retaining straps -2- out of seat frame.

Continued for all vehicles

- Release mountings -3- in -direction of arrow C-.
- Remove seat pans -1- together with seat cushions and place them on a clean surface.

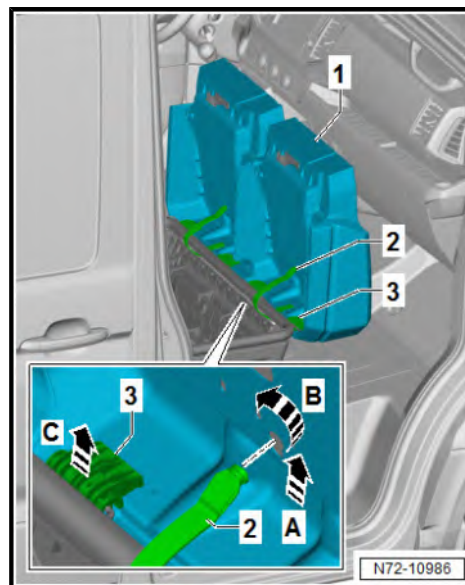


Installing

Install in reverse order.

2.7 Connecting and disconnecting airbag adapter

Special tools and workshop equipment required

- ♦ Airbag adapter - VAS 6282-

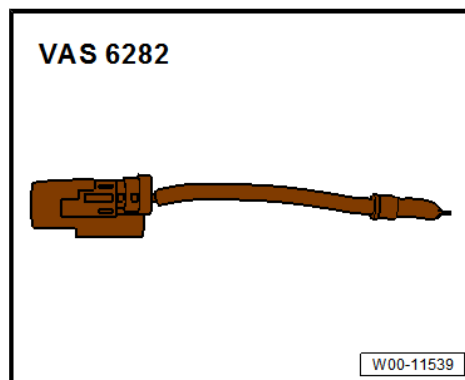

Procedure



Note

Connection is described for the individual seat. Connection for the bench seat follows the same pattern.



Vehicles with electric drive

DANGER

Danger to life from high voltage.

Risk of severe or fatal injury due to electric shock.

- The high-voltage system must be de-energised by a suitably qualified technician.

- De-energise high-voltage system ⇒ Rep. gr. 93 ; De-energising high-voltage system .

Continued for all vehicles

- Move front seat to rearmost and highest position.
- Disconnect battery earth cable with ignition switched on ⇒ Electrical system; Rep. gr. 27 ; Battery; Connecting and disconnecting battery .

CAUTION

Pyrotechnic components can trigger unintentionally.

Danger of injury.

- Discharge any static charge in your body by briefly touching the door striker plate.


- Fit airbag adapter - VAS 6282- -3- onto wiring harness -2- for side airbag.
- Then carry out the necessary work.



Note

The airbag adapter - VAS 6282- -3- must remain connected to the wiring harness -2- until the seat -1- is installed again.

- Then disconnect airbag adapter - VAS 6282- -3-.
- Reconnect wiring harness -2-.
- Connect battery earth cable with ignition switched on ⇒ Electrical system; Rep. gr. 27 ; Battery; Connecting and disconnecting battery .

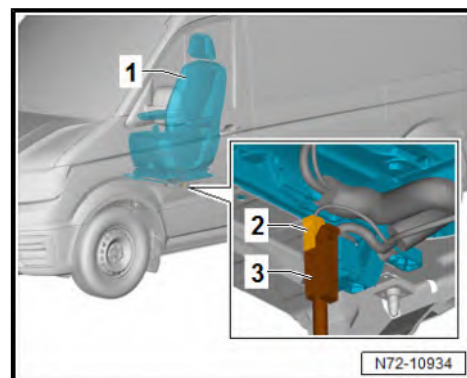

Vehicles with electric drive

WARNING

Danger to life from high voltage.

Risk of severe or fatal injury due to electric shock.

- The high-voltage system must be brought into operation by a suitably qualified technician.

- Re-energise high-voltage system ⇒ Rep. gr. 93 ; Re-energising high-voltage system .



2.8 Removing and installing handle for seat height adjustment


Removing

- Front seat must be positioned in foremost and highest position.
- Pull off handle for seat height adjustment -1- in -direction of arrow-.

Installing

Install in reverse order of removal, observing the following:

- Check securing elements -2- for damage; renew handle for seat height adjustment -1- if necessary ⇒ Electronic parts catalogue (ETKA) or ⇒ webMANTIS for MAN GTE.

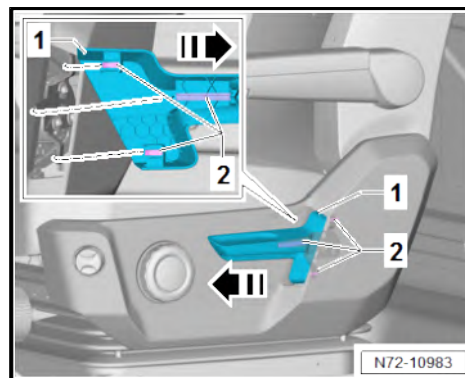

2.9 Removing and installing seat height adjustment unit

Special tools and workshop equipment required

- ♦ Torque wrench - V.A.G 1783-



Removing


- Remove seat trim on sill side ⇒ [page 368](#) .
- Unscrew bolts -2-.
- Remove seat height adjustment unit -1- in -direction of arrow-.

Installing

Install in reverse order of removal, observing the following:

Specified torques

- ♦ ⇒ [“2.4 Assembly overview - seat pan”, page 338](#)

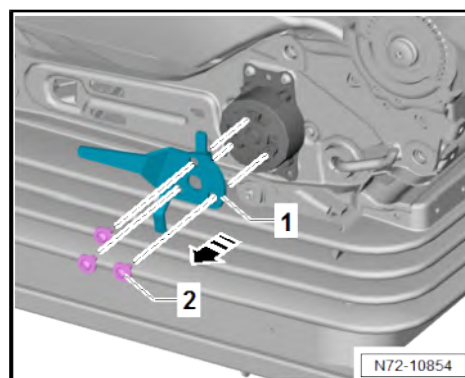



2.10 Removing and installing seat rake adjustment unit

⇒ [“2.10.1 Removing and installing seat rake adjustment handle, individual seat”, page 353](#)

⇒ [“2.10.2 Removing and installing seat rake adjustment adjuster unit, individual seat”, page 353](#)

⇒ [“2.10.3 Removing and installing seat rake adjustment unit, retaining loop, bench seat”, page 354](#)

2.10.1 Removing and installing seat rake adjustment handle, individual seat

Removing

- Pull off handle for seat rake adjustment -1- in direction of -arrow-.

Installing

Install in reverse order of removal, observing the following:

- Check that handle for seat rake adjustment -1- is seated correctly and not damaged, renew if necessary ⇒ Electronic parts catalogue (ETKA) or ⇒ webMANTIS for MAN TGE.
- Make sure that teeth on handle for seat rake adjustment -1- align with shaft splines.



2.10.2 Removing and installing seat rake adjustment adjuster unit, individual seat

Removing

- Secure seat frame using suitable workshop means to prevent it from sagging.
- Remove seat trim on sill side ⇒ [page 368](#) .
- Unscrew bolts -2-.
- Unscrew bolt -3-.
- Remove washer -4-.
- Remove seat rake adjustment adjuster unit -1-.

Installing


Install in reverse order of removal, observing the following:

- Make sure that teeth on handle for seat rake adjustment adjuster unit -1- align with shaft splines.

Specified torques

- ◆ ⇒ [“2.4 Assembly overview - seat pan”, page 338](#)

Component	Specified torque
Bolts -2-	8 Nm
Bolt -3-	10 Nm

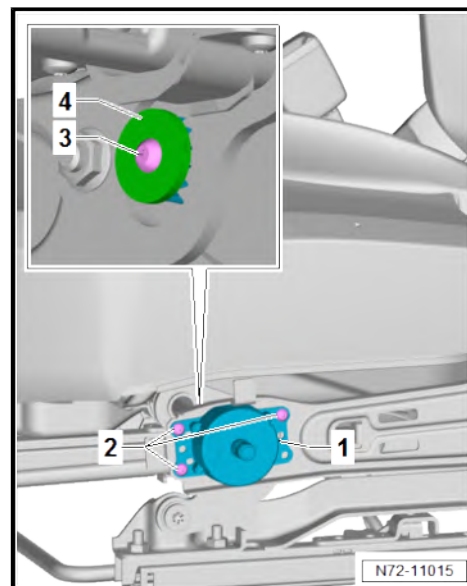




2.10.3 Removing and installing seat rake adjustment unit, retaining loop, bench seat

Removing

- Remove seat trim on tunnel side ⇒ [page 368](#) .
- Pull off retaining loop for seat rake adjustment -1- in -direction of arrow-.

Installing

Install in reverse order.

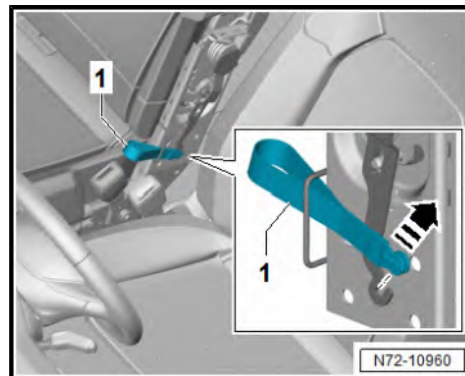

2.11 Removing and installing lumbar support adjustment unit


⇒ [“2.11.1 Removing and installing lumbar support adjustment unit, handle”, page 354](#)

⇒ [“2.11.2 Removing and installing lumbar support adjustment unit, support frame”, page 355](#)

2.11.1 Removing and installing lumbar support adjustment unit, handle

Special tools and workshop equipment required

- ◆ Removal pliers - 3392-

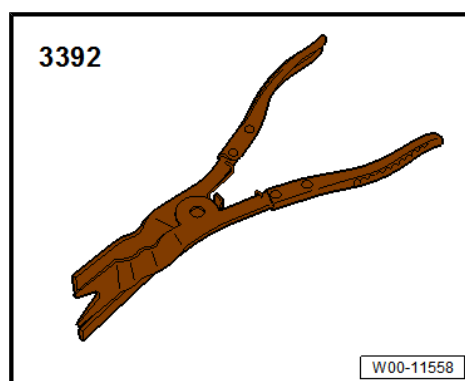


Removing

- Front seat must be positioned in foremost position.
- Use removal pliers - 3392- to pull lumbar support handle -2- off shaft -1-.

Installing

Install in reverse order of removal, observing the following:

- Make sure that teeth on lumbar support handle -2- align with shaft splines -1-.

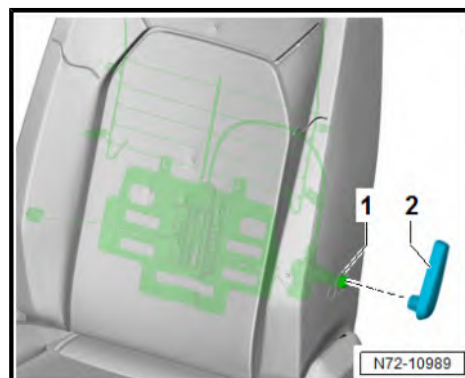




2.11.2 Removing and installing lumbar support adjustment unit, support frame

Removing

- Remove backrest cover and cushion ⇒ [page 411](#) .
- Unscrew bolts -2-.
- Detach lumbar support adjustment -1-.

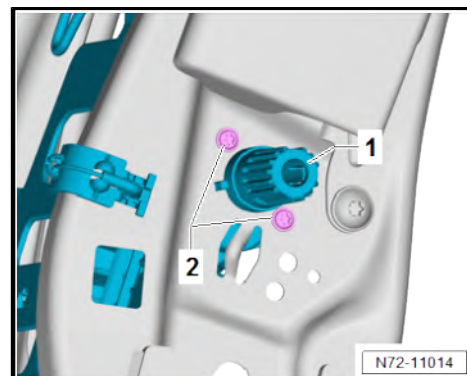

- Disengage springs -2- on backrest frame.
- Swing lumbar support -1- towards front.
- Detach lumbar support -1- in area of -arrows- from backrest frame.
- Remove lumbar support -1- together with cable.


Installing

Install in reverse order of removal, observing the following:

Specified torques

◆ ⇒ [“2.3 Assembly overview - front backrest”, page 333](#)

Component	Specified torque
Unscrew bolts -2- for lumbar support.	2.5 Nm

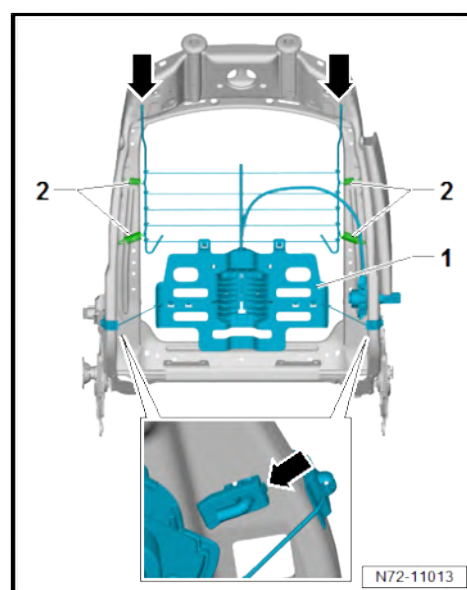

2.12 Removing and installing front backrest

⇒ [“2.12.1 Removing and installing front backrest, individual seat”, page 355](#)

⇒ [“2.12.2 Removing and installing front centre backrest, folding bench seat”, page 357](#)

⇒ [“2.12.3 Removing and installing front outer backrest, folding bench seat”, page 358](#)

⇒ [“2.12.4 Removing and installing front backrest, fixed bench seat”, page 359](#)

2.12.1 Removing and installing front backrest, individual seat


Removing

- Remove seat trim bracket at rear ⇒ [page 368](#) .



Vehicles without partition panel or without PR number K4F (single cab)

- If fitted, lay wiring harness aside.
- If fitted, disconnect electrical connectors -2-.
- Unclip clip -3- from front seat -1-.
- Unclip clip -3- from coupling point -4-.

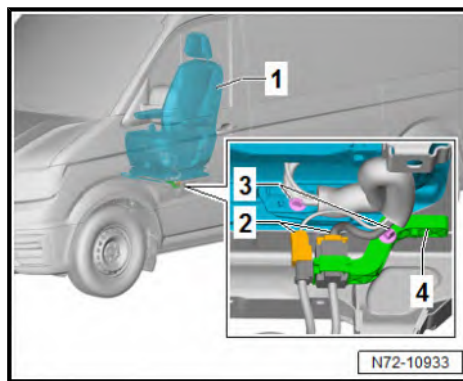

Continued for all vehicles


- Unscrew bolts -2- and -4-.



Note

Do not stretch wiring harness. This can cause damage to the locking elements or wiring harnesses.

- Fold backrest -3- forwards onto seat pan -1-.

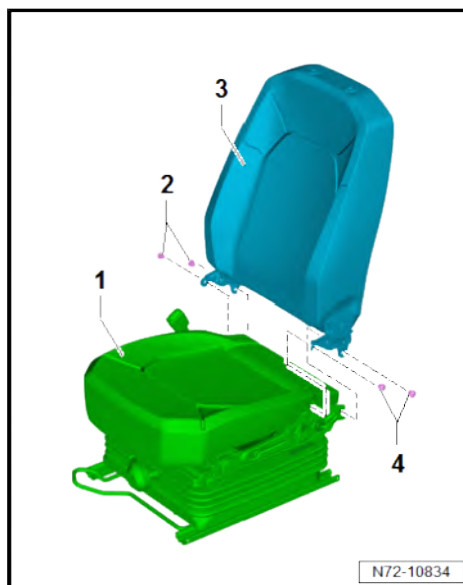

Vehicles with side airbag and/or massage function and/or electronic lumbar support and/or backrest heating

- Connect airbag adapter ➔ [page 350](#) .
- Separate electrical connectors -3-.
- Unclip clips -2-.
- Guide out wiring harness for side airbag.
- Lay wiring harness of backrest -1- aside.


Continued for all vehicles

- Remove backrest -1- together with cover and padding, and place it on a clean surface.

Installing

Install in reverse order of removal, observing the following:

- Check threads in mounting plate for damage.

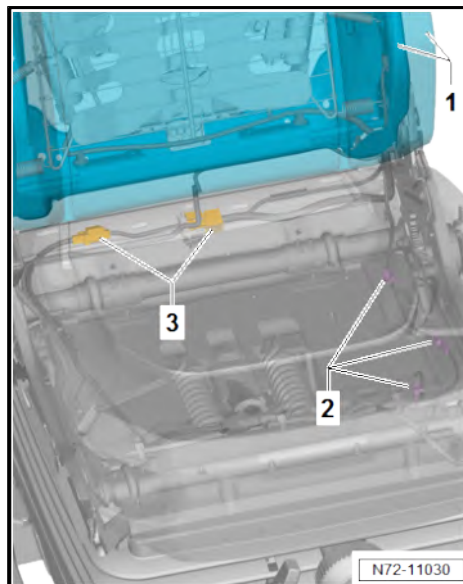




- Position backrest -1- on seat pan.
- Screw in bolts -2- and -5- by hand as far as stop.
- Screw in bolts -3- and -4- by hand as far as stop.
- Tighten bolts.

Specified torques

- ◆ ⇒ ["2.3 Assembly overview - front backrest", page 333](#)

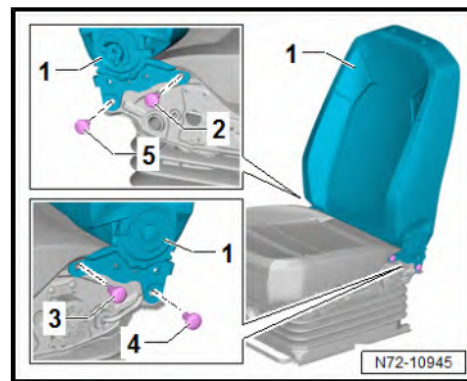

2.12.2 Removing and installing front centre backrest, folding bench seat

Special tools and workshop equipment required

- ◆ Torque wrench - V.A.G 1331-



Removing

- Switch off ignition and all electrical consumers.
- Withdraw ignition key.
- If fitted, disconnect electrical connectors under bench seat.
- Remove seat trim, backrest on tunnel side ⇒ [page 368](#) .
- Fold down backrest -1- in -direction of arrow A-.
- Unscrew bolts -2-.
- Remove backrest -1- together with cover and padding in -direction of arrow B-, and place it on a clean surface.


Installing

Install in reverse order of removal, observing the following:

- Check threads in mounting plate for damage.
- Screw in all bolts to stop by hand.
- Tighten bolts.

Specified torques

- ◆ ⇒ ["2.3 Assembly overview - front backrest", page 333](#)

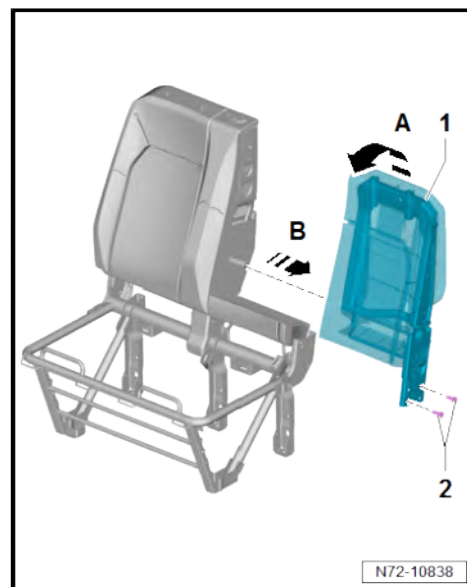



2.12.3 Removing and installing front outer backrest, folding bench seat


Removing

Vehicles with side airbag

- Connect airbag adapter for bench seat ➔ [page 350](#) .

Continued for all vehicles

- Remove front bench seat ➔ [page 343](#) .
- Remove seat trim, backrest on sill side ➔ [page 368](#) .
- Removing and installing front centre backrest ➔ [page 355](#) .
- Unscrew bolt -2-.
- Remove belt buckle -1- together with belt webbing.
- If fitted, disconnect electrical connectors under bench seat.

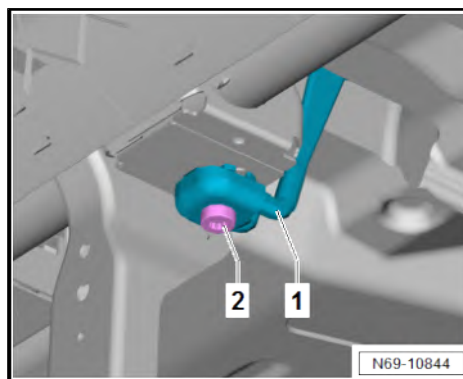


- Unscrew bolts -2-.
- Remove backrest -1- together with cover and padding in -direction of arrow-, and place it on a clean surface.

Installing

Install in reverse order of removal, observing the following:

- Check threads in mounting plate for damage.
- Screw in all bolts to stop by hand.

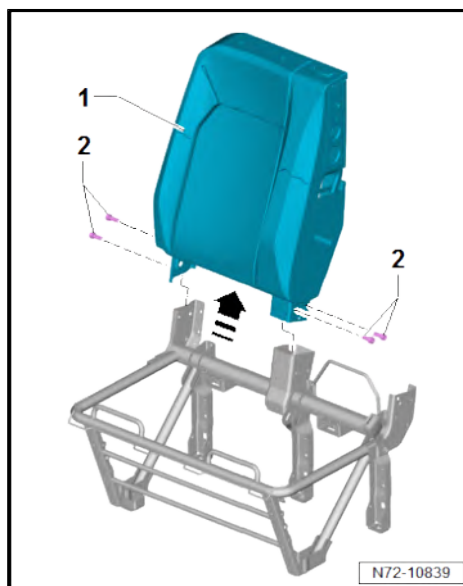



- Tighten bolts.



Note

Locating elements on belt buckle -1- must be seated in recess and lugs -arrows- on rear seat frame.

Vehicles with side airbag



Note

Battery must be connected with ignition switched on. If pyrotechnic components (e.g. airbag, belt tensioners) are repaired incorrectly, they could be accidentally triggered. Ensure that nobody is in vehicle when connecting battery.

- Switch on ignition.
- Connect battery earth cable with ignition switched on ⇒ Electrical system; Rep. gr. 27 ; Battery; Connecting and disconnecting battery .



Note

If the ignition is not switched on after reconnecting the battery, the ignition may only be switched on (key/button) from the driver's seat with the seat set in the rearmost position.

- Use ⇒ Vehicle diagnostic tester to read event memory, clear event memory as necessary, and then read it again.

Specified torques

- ◆ ⇒ ["2.3 Assembly overview - front backrest", page 333](#)
- ◆ ⇒ ["1.2 Assembly overview - front three-point seat belt", page 106](#)

2.12.4 Removing and installing front backrest, fixed bench seat



Removing

Vehicles with side airbag

- Connect airbag adapter for bench seat ⇒ [page 350](#) .

Continued for all vehicles

- Remove front bench seat ⇒ [page 343](#) .
- Remove seat trim, backrest on sill side ⇒ [page 368](#) .
- Remove seat trim, backrest on tunnel side ⇒ [page 368](#) .
- Unscrew bolt -2-.
- Remove belt buckle -1- together with belt webbing.
- If fitted, disconnect electrical connectors under bench seat.

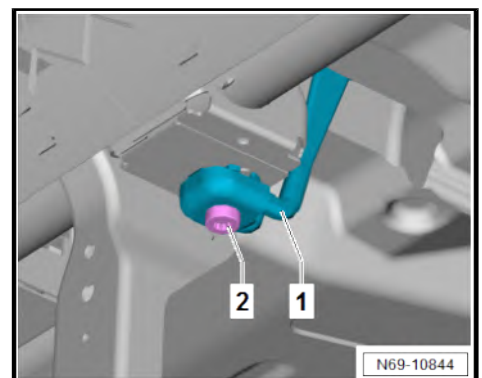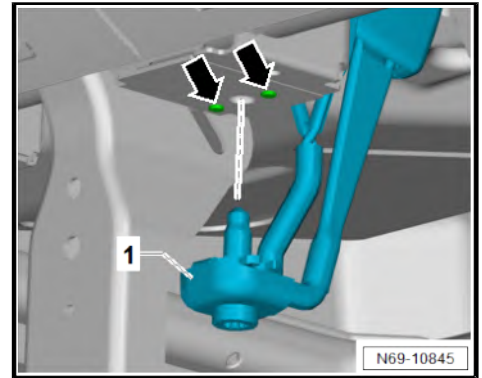




- Unscrew bolts -2-.
- Remove backrest -1- together with cover and padding in -direction of arrow-, and place it on a clean surface.

Installing

Install in reverse order of removal, observing the following:

- Check threads in mounting plate for damage.
- Screw in all bolts to stop by hand.

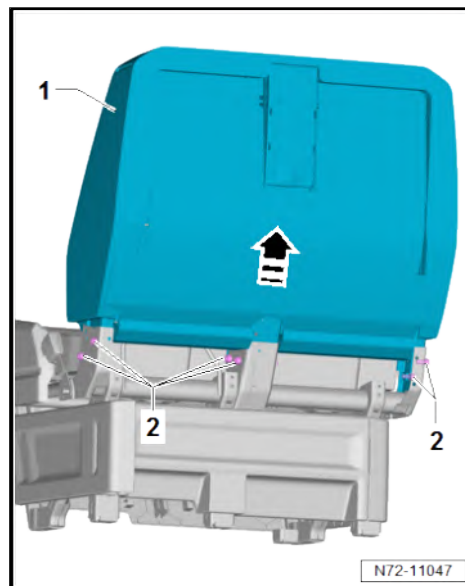

- Tighten bolts.



Note


Locating elements on belt buckle -1- must be seated in recess and lugs -arrows- on rear seat frame.

Vehicles with side airbag



Note

Battery must be connected with ignition switched on. If pyrotechnic components (e.g. airbag, belt tensioners) are repaired incorrectly, they could be accidentally triggered. Ensure that nobody is in vehicle when connecting battery.

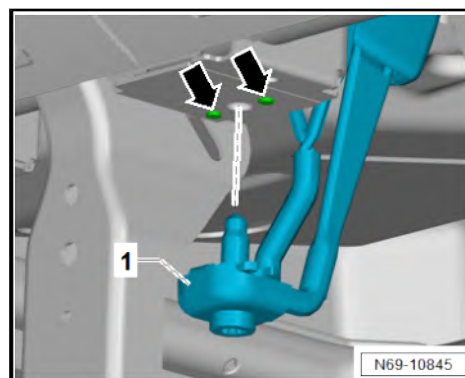

- Switch on ignition.
- Connect battery earth cable with ignition switched on ⇒ Electrical system; Rep. gr. 27 ; Battery; Connecting and disconnecting battery .



Note

If the ignition is not switched on after reconnecting the battery, the ignition may only be switched on (key/button) from the driver's seat with the seat set in the rearmost position.

- Use ⇒ Vehicle diagnostic tester to read event memory, clear event memory as necessary, and then read it again.

Specified torques

- ♦ ⇒ [“2.3 Assembly overview - front backrest”, page 333](#)
- ♦ ⇒ [“1.2 Assembly overview - front three-point seat belt”, page 106](#)

2.13 Removing and installing seat armrest

Special tools and workshop equipment required



◆ Torque wrench - V.A.G 1331-



Removing


- Front seat must be positioned in foremost position.
- Unclip cover -2- in -direction of arrow-.
- Unscrew bolt -3-.
- Remove seat armrest -1- in -direction of arrow- from backrest -4-.

Installing

Install in reverse order of removal, observing the following:

Specified torques

- ◆ ⇒ ["2.3 Assembly overview - front backrest", page 333](#)

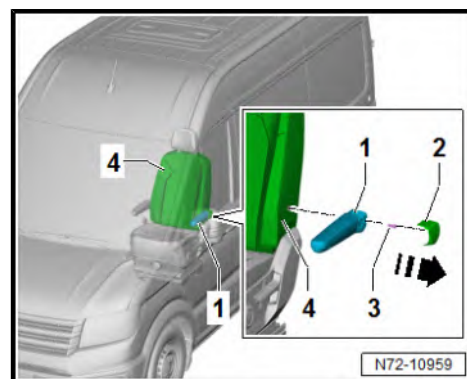


2.14 Removing and installing head restraint

Removing

- Release locking mechanism for head restraint guide -2- in direction of -arrow A-. Pull off head restraint -1- from backrest -3- in direction of -arrow B- when doing this.

Installing

Install in reverse order.

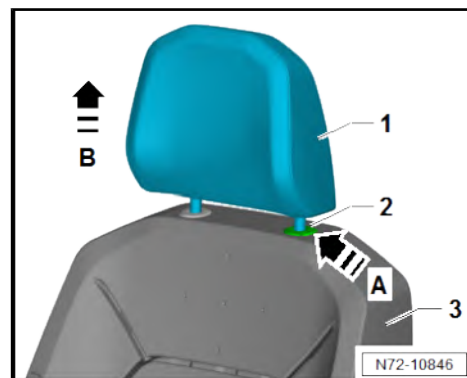

2.15 Removing and installing head restraint guide

Removing



Note

The description is for vehicles with an individual seat. The description for vehicles with a bench seat is analogous.

Vehicles with individual seat

- Remove backrest cover and cushion ⇒ [page 411](#) .

Vehicles with bench seat

- Remove backrest rear section ⇒ [page 368](#) .




Continued for all vehicles

- Release locking lugs of head restraint guides -1- in -direction of arrow-. When doing this, pull head restraint guides out of backrest frame -2-.

Installing


Install in reverse order.

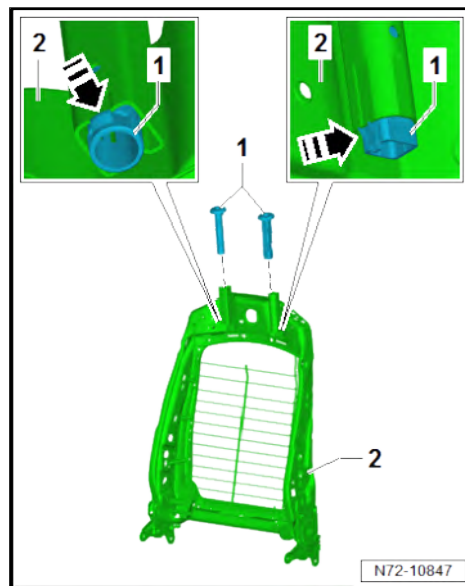

2.16 Removing and installing lumbar support adjustment switch -E176- / -E177-

Special tools and workshop equipment required

- ♦ Torque wrench 50-100Ncm - VAS 6253A-

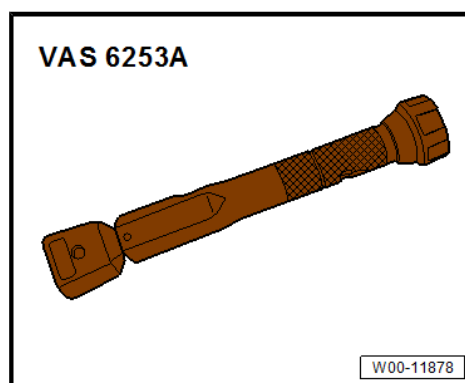

Removing


- Front seat must be positioned in rearmost and highest position.
- Separate connector -4-.
- Unscrew bolts -3-.
- Remove lumbar support adjustment switch -E176- / -E177- -1- from seat trim -2-.

Installing

Install in reverse order of removal, observing the following:

Specified torques

- ♦ ➔ [“2.4 Assembly overview - seat pan”, page 338](#)

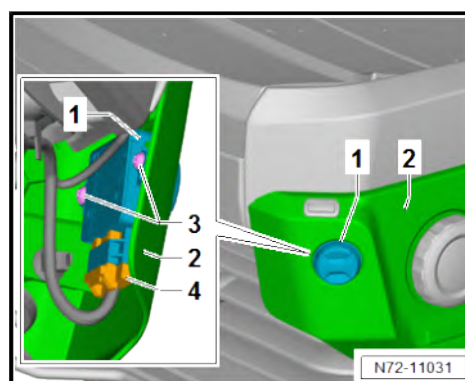

2.17 Removing and installing massage function button -E670- / -E671-

Special tools and workshop equipment required



◆ Removal wedge - 3409-




Removing

- Switch off ignition and all electrical consumers.
- Withdraw ignition key.
- Use removal wedge - 3409- to unclip massge function button -E670- / -E671- -1- in -direction of arrow- from seat trim -2-.
- Separate connector -3-.

Installing


Install in reverse order.

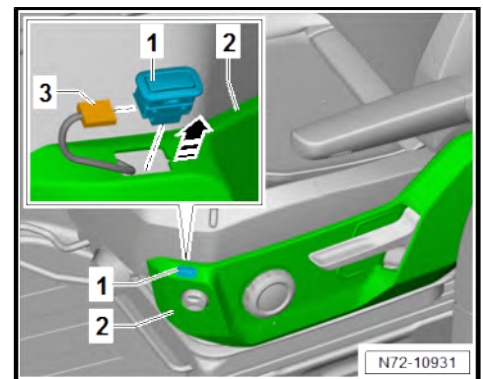


2.18 Removing and installing lumbar support adjustment motor -V125- / -V126- / -V129- / -V130-

Special tools and workshop equipment required

◆ Pop rivet pliers - VAS 5072A-

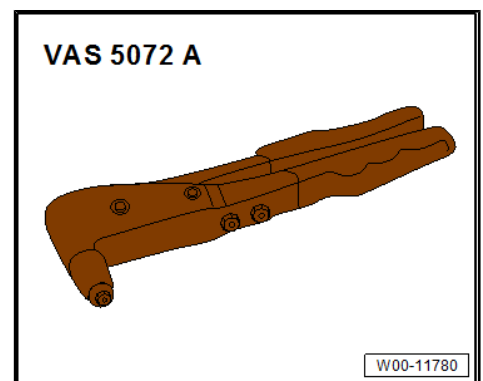

◆ Roll pin drift - VAS 5513-

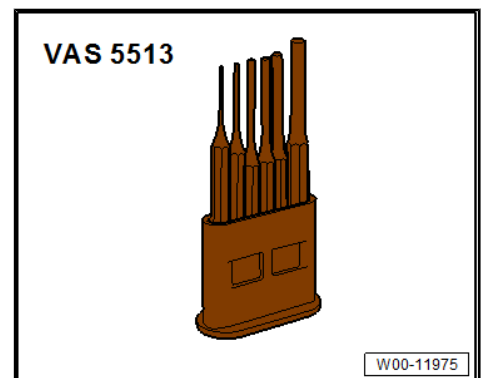

◆ Hand drill



- ◆ Drill bit with diameter smaller than 4.5 mm
- ◆ Safety goggles
- ◆ Safety gloves


Removing

- Remove backrest cover and cushion ➤ [page 411](#) .
- Disconnect electrical connectors -3-.

⚠ CAUTION

Risk of injury from swarf being flung into air.
Irritation and injury to skin and eyes possible.

- Wear safety goggles.
 - Wear protective gloves.
-
- Drill off rivet head -4- from backrest frame -2- using drill and spiral drill bit with diameter less than 4.5 mm.
 - Drive out rivet shank -4- with drift - VAS 5513- .
 - Remove swarf.
 - Swing lumbar support -1- towards front.
 - Detach lumbar support -1- in area of -arrows- from backrest frame -2-.
 - Remove lumbar support -1-.

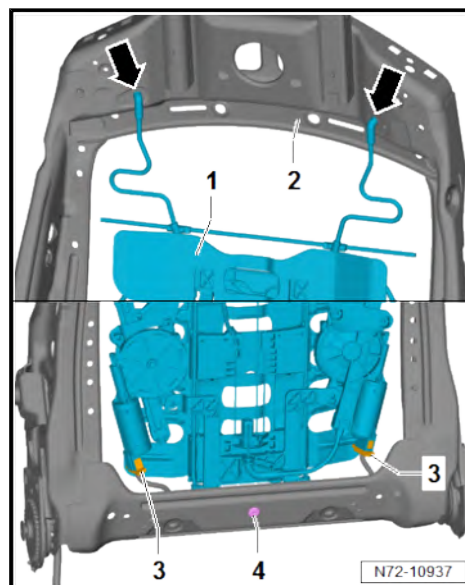

Installing

Install in reverse order of removal, observing the following:

- Use rivet pliers - VAS 5072A- to install new pop rivet.

2.19 Removing and installing massage control unit - J740-

Special tools and workshop equipment required

- ◆ Removal wedge - 3409-



Removing


- Front seat must be positioned in rearmost and highest position.



- Separate electrical connectors -2-.
- Unclip wiring harness -3- from retainer.
- To do this, lever off clip -4- using removal wedge - 3409- .
- Release massage control unit - J740- -1- from retaining tabs -5-.
- Pull massage control unit - J740- -1- out of mountings -arrows-.

Installing

Install in reverse order.

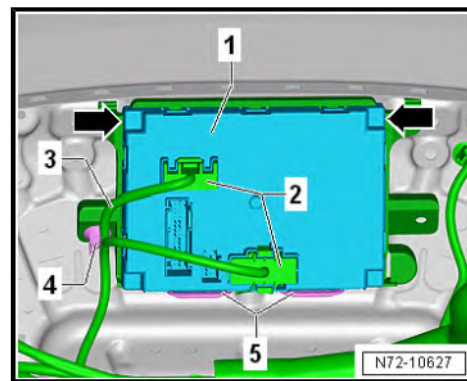

2.20 Removing and installing cover

⇒ [“2.20.1 Removing and installing cover, second heater unit”, page 365](#)

⇒ [“2.20.2 Removing and installing cover, seat box for electronics box”, page 365](#)

⇒ [“2.20.3 Removing and installing cover, socket”, page 365](#)

2.20.1 Removing and installing cover, second heater unit

Removing




Note

The description is for vehicles with bench seat. The description for vehicles with an individual seat follows the same pattern.

- Fold up and fix seat cushion.
- Remove cover -1- upwards from heater unit -2-.

Installing

Install in reverse order.

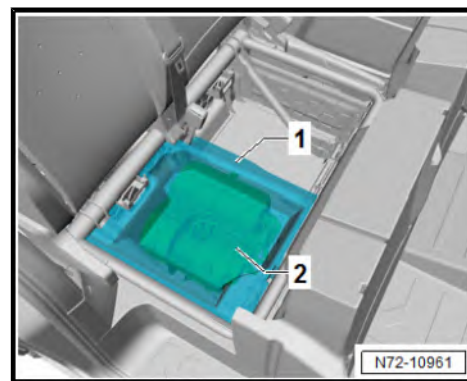

2.20.2 Removing and installing cover, seat box for electronics box

- Removal and installation of cover in seat box for electronics box is the same as removal and installation of cover for second heater unit ⇒ [page 365](#) .

2.20.3 Removing and installing cover, socket

Special tools and workshop equipment required



◆ Removal wedge - 3409-




Removing

- Switch off ignition and all electrical consumers.
- Withdraw ignition key.

Cap for 12 V socket - UX3-

- Use removal wedge - 3409- to detach cap -1-.
- Separate connector -3-.
- Remove cap -1- together with 12 V socket - UX3- -2-.
- Unscrew bolts -6-.
- Remove front section frame -7- from seat box -4-.
- Remove bottom section frame -5-.

Cap for DC/AC converter with socket, 12 V - 230 V - U13-

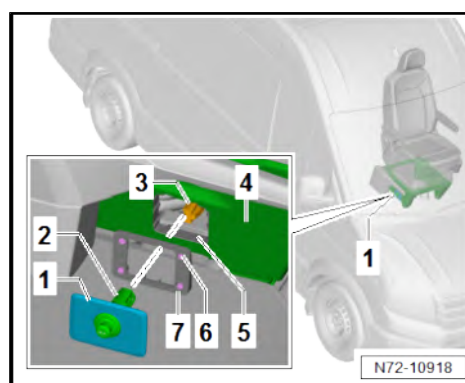

Note

In the housing of the DC/AC converter with socket, 12 V - 230 V - U13- there are capacitors that may still be charged with a residual voltage.


- Use removal wedge - 3409- to detach cap -1-.
- Remove cap -1- from DC/AC converter with socket, 12 V - 230 V - U13- -2-.
- Unscrew bolts -5-.
- Remove front section frame -6- from seat box -4-.
- Remove bottom section frame -3-.

Installing

Install in reverse order of removal, observing the following:

Specified torques

Component	Specified torque
Bolts for installation frame on seat box	1.5 Nm

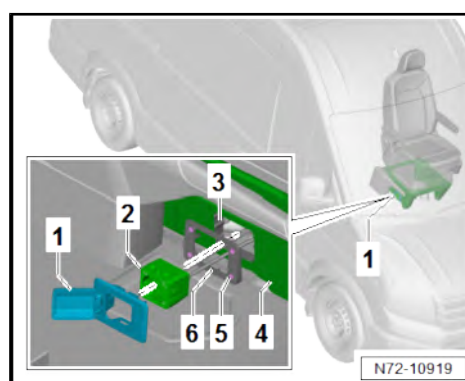


2.21 Removing and handle for installing backrest adjustment

Special tools and workshop equipment required



◆ Assembly tool - 3399-

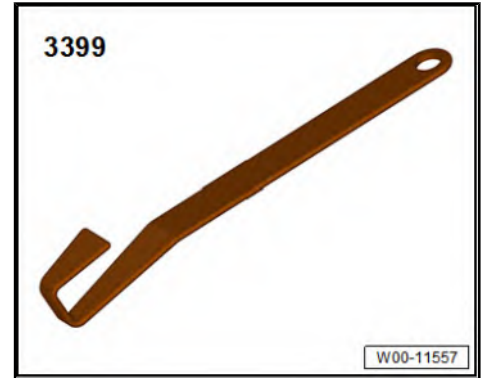


Removing



The removal and installation procedure on vehicles with a partition panel is carried out via the load compartment. The removal and installation procedure on vehicles without a partition panel is carried out via the passenger compartment.

- Front seat must be positioned in foremost and highest position.
- Turn backrest adjustment handle -1- until a detent can be seen from the rear -arrow A-.
- Insert assembly tool - 3399- -2- and lever it in direction of -arrow B-.
- Turn backrest adjustment handle -1- 120° further.
- Insert assembly tool - 3399- -2- and lever it in direction of -arrow B-.
- Remove handle for backrest adjuster -1-.

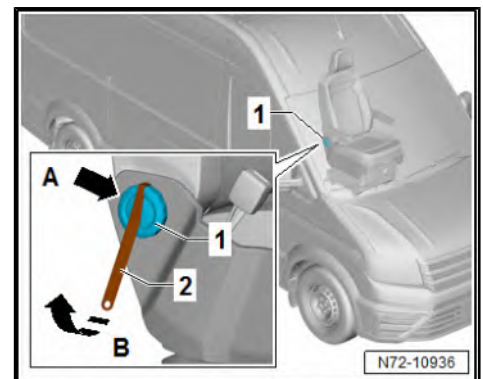

Installing

Install in reverse order of removal, observing the following:

- Check that handle for backrest adjuster -1- is seated correctly and not damaged, renew if necessary ⇒ Electronic parts catalogue (ETKA) or ⇒ webMANTIS for MAN TGE.
- Ensure that retaining hooks of handle for backrest adjuster -1- align with recesses in shaft.



2.22 Removing and installing seat trim

⇒ [“2.22.1 Removing and installing seat trim, sill side, individual seat”, page 368](#)

⇒ [“2.22.2 Removing and installing seat trim, tunnel side, individual seat”, page 369](#)

⇒ [“2.22.3 Removing and installing rear seat trim, individual seat”, page 370](#)

⇒ [“2.22.4 Removing and installing bracket for rear seat trim, individual seat”, page 370](#)

⇒ [“2.22.5 Removing and installing seat trim, sill side, backrest, bench seat”, page 372](#)

⇒ [“2.22.6 Removing and installing seat trim, tunnel side, backrest, bench seat”, page 373](#)

⇒ [“2.22.7 Removing and installing rear seat trim, backrest, bench seat”, page 373](#)

⇒ [“2.22.8 Removing and installing seat trim, rear section, bench seat”, page 374](#)

⇒ [“2.22.9 Removing and installing cover, seat belt pillar for three-point seat belt”, page 375](#)

⇒ [“2.22.10 Removing and installing centre seat trim, bench seat”, page 375](#)

⇒ [“2.22.11 Removing and installing front seat trim, seat frame, bench seat”, page 375](#)

⇒ [“2.22.12 Removing and installing side seat trim, seat frame, bench seat”, page 375](#)

⇒ [“2.22.13 Removing and installing rear seat trim, seat frame, bench seat”, page 377](#)

2.22.1 Removing and installing seat trim, sill side, individual seat

Removing


- Remove handle for seat rake adjustment ⇒ [page 353](#) .
- Remove handle for seat height adjustment ⇒ [page 352](#) .

Vehicles without partition panel or without PR number K4F (single cab)

- Detach seat trim at rear on sill side ⇒ [page 368](#) .

Vehicles with partition panel or with PR number K4F (single cab)


- Backrest must be positioned in foremost position.
- Remove clips -2- from seat trim -1- on sill side.

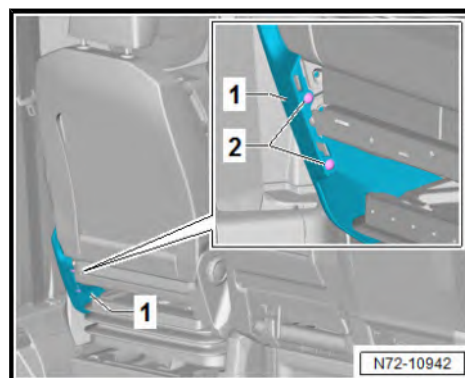




Continued for all vehicles

- Detach seat trim -1- in -direction of arrow A-.
- Push seat trim -1- in -direction of arrow B-. When doing this, remove it in -direction of arrow C-.

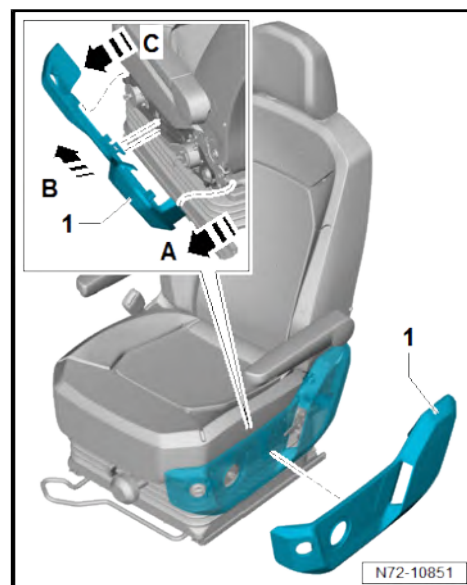

Vehicles with massage function and/or electronic lumbar support

- Switch off ignition and all electrical consumers.
- Withdraw ignition key.
- Disconnect electrical connector -3- from massage function button -E670- / -E671- -2-.
- Disconnect electrical connector -5- from lumbar support adjustment switch -E176- / -E177- -4-.
- Detach clip -6- from seat trim -1-.
- Lay wiring harness aside.

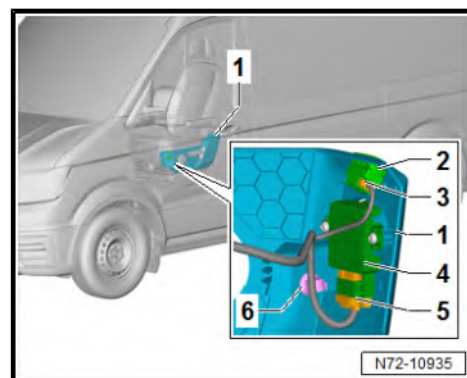

Installing

Install in reverse order.

2.22.2 Removing and installing seat trim, tunnel side, individual seat

Removing


- Backrest must be positioned in foremost position.
- Remove handle for backrest tilt adjustment ➔ [page 366](#) .

Vehicles without partition panel or without PR number K4F (single cab)

- Detach seat trim at rear on tunnel side ➔ [page 368](#) .

Vehicles with partition panel or with PR number K4F (single cab)

- Remove clips -2- from seat trim -1- on tunnel side.

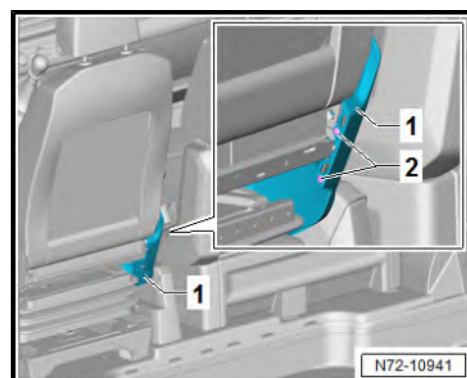




Continued for all vehicles

- Detach seat trim -1- in -direction of arrow A-.
- Push seat trim -1- in -direction of arrow B-. When doing this, remove it in -direction of arrow C-.

Installing

Install in reverse order.

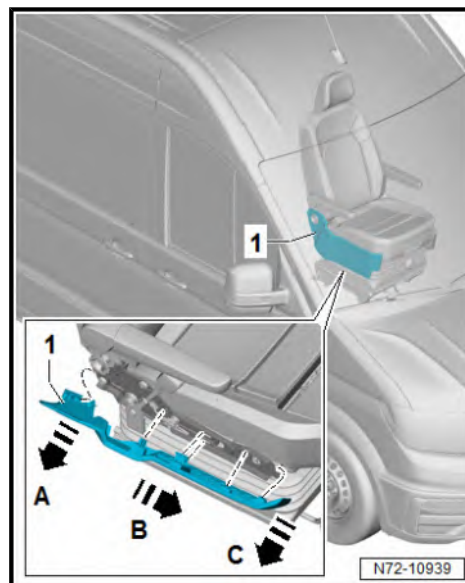

2.22.3 Removing and installing rear seat trim, individual seat


Removing

- Front seat must be positioned in rearmost and highest position.
- Detach seat trim -1- in -direction of arrow A- from seat trims -2-. When doing this, pull it off in -direction of arrow B-.
- Remove seat trim -1- in -direction of arrow C-.

Installing

Install in reverse order of removal, observing the following:


- Check that securing elements -3- are seated correctly and not damaged, renew if necessary ⇒ Electronic parts catalogue (ETKA) or ⇒ webMANTIS for MAN TGE.

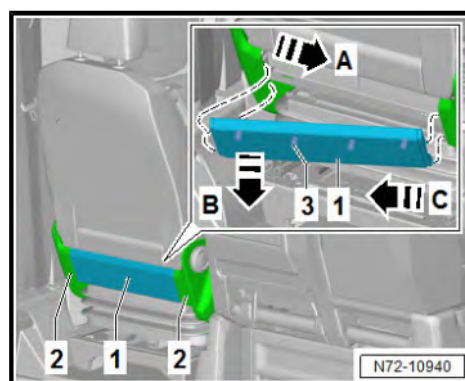

2.22.4 Removing and installing bracket for rear seat trim, individual seat


Special tools and workshop equipment required

- ♦ Pop rivet pliers - VAS 5072A-

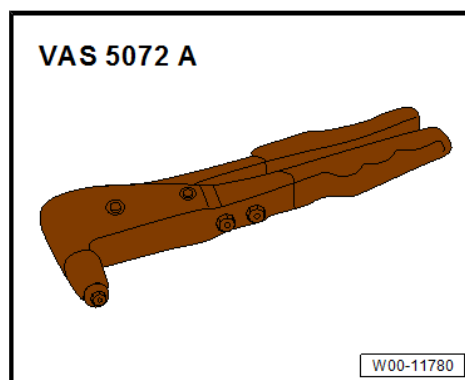



◆ Roll pin drift - VAS 5513-

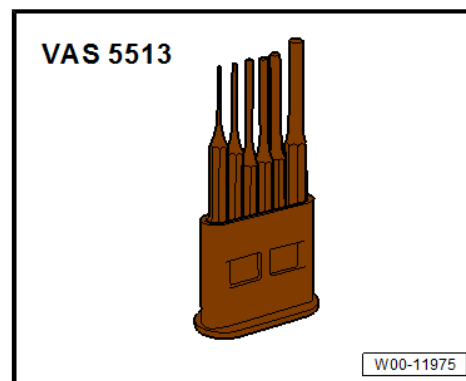

- ◆ Hand drill
- ◆ Drill bit with diameter smaller than 4.5 mm
- ◆ Safety goggles
- ◆ Safety gloves

Removing

Vehicles with side airbag

- Connect airbag adapter ⇒ [page 350](#) .

Vehicles with partition panel or with PR number K4F (single cab)

- Remove front seat ⇒ [page 343](#) .

Vehicles without partition panel or without PR number K4F (single cab)

- Switch off ignition and all electrical consumers.
- Withdraw ignition key.
- Remove rear seat trim ⇒ [page 368](#) .



Note


Protect relay and fuse carrier in seat box against contamination from drill swarf.

Vehicles with massage function and/or electronic lumbar support and/or backrest heating

- Push rear seat pan padding to side.
- Unclip clips -2-.
- Lay wiring harness from bracket for rear seat trim -1- aside.

Continued for all vehicles

- Remove seat trim on sill side ⇒ [page 368](#) .
- Remove seat trim on tunnel side ⇒ [page 368](#) .

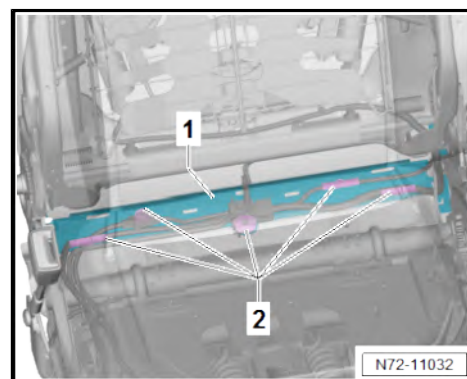

CAUTION

**Risk of injury from swarf being flung into air.
Irritation and injury to skin and eyes possible.**

- Wear safety goggles.
- Wear protective gloves.



- Drill off rivet heads -2- from bracket for rear seat trim -1- using drill and spiral drill bit with diameter less than 4.5 mm.
- Drive out rivet shanks -2- with drift - VAS 5513- .
- Remove bracket for rear seat trim -1-.
- Remove swarf.

Installing

Install in reverse order of removal, observing the following:

- Use rivet pliers - VAS 5072A- to install new pop rivets.

Vehicles with side airbag



Note

Battery must be connected with ignition switched on. If pyrotechnic components (e.g. airbag, belt tensioners) are repaired incorrectly, they could be accidentally triggered. Ensure that nobody is in vehicle when connecting battery.

- Switch on ignition.
- Connect battery earth cable with ignition switched on ⇒ Electrical system; Rep. gr. 27 ; Battery; Connecting and disconnecting battery .



Note

If the ignition is not switched on after reconnecting the battery, the ignition may only be switched on (key/button) from the driver's seat with the seat set in the rearmost position.

- Use ⇒ Vehicle diagnostic tester to read event memory, clear event memory as necessary, and then read it again.

2.22.5 Removing and installing seat trim, sill side, backrest, bench seat

Removing





Note

The removal and installation procedure on vehicles with a partition panel is carried out via the load compartment. The removal and installation procedure on vehicles without a partition panel is carried out via the passenger compartment.

- Fold up and fix seat cushion.
- Detach seat trim -1- in -direction of arrow A-.
- Detach seat trim -1- in -direction of arrow B-.
- Remove seat trim -1-.

Installing

Install in reverse order.

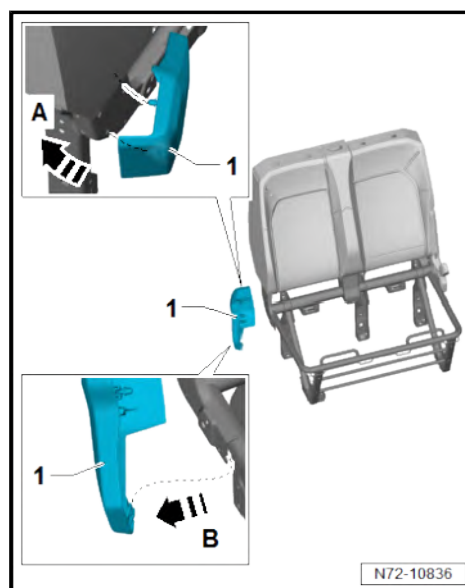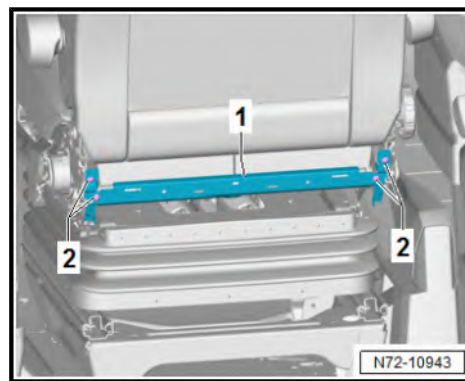



2.22.6 Removing and installing seat trim, tunnel side, backrest, bench seat

Removing




Note

- ◆ *The removal and installation procedure on vehicles with a partition panel is carried out via the load compartment. The removal and installation procedure on vehicles without a partition panel is carried out via the passenger compartment.*
- ◆ *The description is for vehicles with a folding backrest. Adapt accordingly for vehicles without a backrest.*
- Driver seat must be positioned in foremost and lowest position.
- Driver seat backrest must be positioned in foremost position.
- Detach seat trim -1- in -direction of arrow A-.
- Detach seat trim -1- in -direction of arrow B-.
- Guide out retaining loop for seat rake adjustment.
- Remove seat trim -1-.

Installing

Install in reverse order.

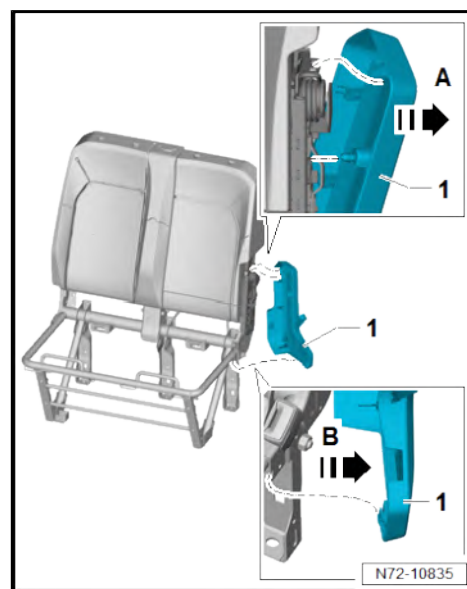

2.22.7 Removing and installing rear seat trim, backrest, bench seat

Removing

Vehicles with partition panel or with PR number K4F (single cab)

- Remove front bench seat ➔ [page 343](#) .




Continued for all vehicles

- Remove seat trim, backrest on sill side ➔ [page 368](#) .
- Remove seat trim, backrest on tunnel side ➔ [page 368](#) .
- Unclip seat trim -1- in -direction of arrow A-.
- Remove seat trim -1- in -direction of arrow B-.

Installing

Install in reverse order.

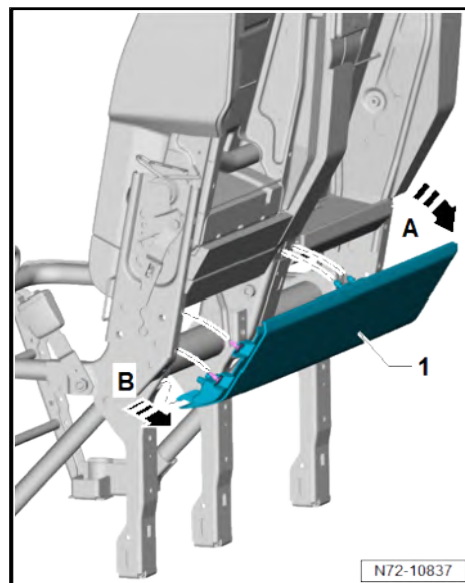

2.22.8 Removing and installing seat trim, rear section, bench seat

Removing




Note

The description is for vehicles with a folding backrest. Adapt accordingly for vehicles without a backrest.

- Remove cover and cushion from outer backrest ➔ [page 411](#) .
- Detach rear section -1- from backrest frame.
- Remove rear section -1-.

Installing

Install in reverse order.

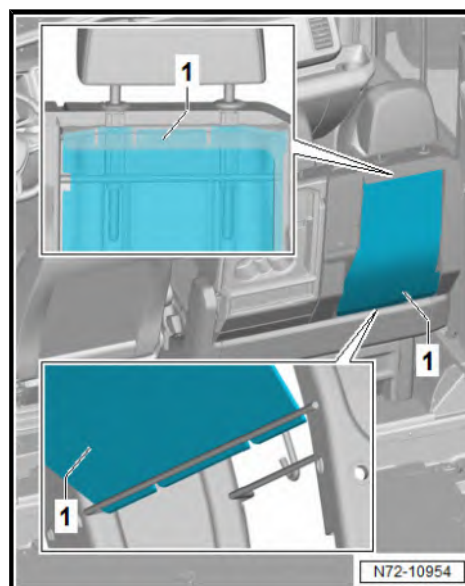

2.22.9 Removing and installing cover, seat belt pillar for three-point seat belt


Removing



Note

The description is for vehicles with a folding backrest. Adapt accordingly for vehicles without a backrest.

- Remove cover and cushion from outer backrest
⇒ [page 411](#) .
- Unclip seat trim for seat belt -1- in direction of -arrow-.
- Remove seat trim for seat belt -1-.

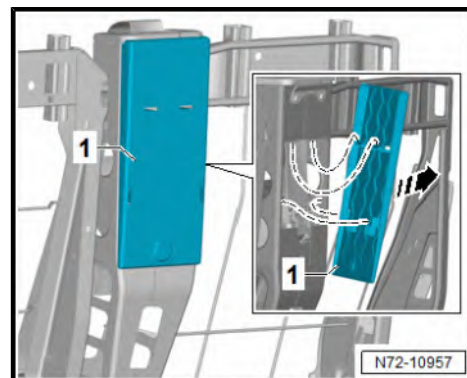

Installing

Install in reverse order.

2.22.10 Removing and installing centre seat trim, bench seat


Removing



Note

The removal and installation procedure on vehicles with a partition panel is carried out via the load compartment. The removal and installation procedure on vehicles without a partition panel is carried out via the passenger compartment.

- Fold centre backrest forwards.
- Unclip seat trim -1- in -direction of arrow A-.
- Remove seat trim -1- in -direction of arrow B-.

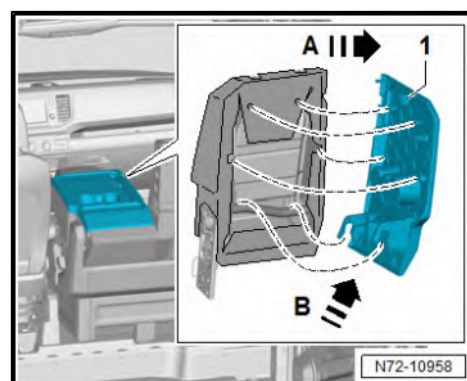

Installing

Install in reverse order.


2.22.11 Removing and installing front seat trim, seat frame, bench seat

Removing

- Remove side seat trims ⇒ [page 368](#) .
- Remove seat trim -1- in -direction of arrow-.

Installing

Install in reverse order.

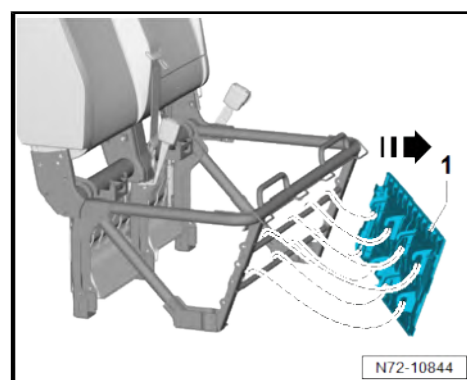

2.22.12 Removing and installing side seat trim, seat frame, bench seat

Special tools and workshop equipment required




- ◆ Torque wrench - V.A.G 1783-




Removing

- Fold up and fix seat cushion.
- Unscrew bolts -1-.

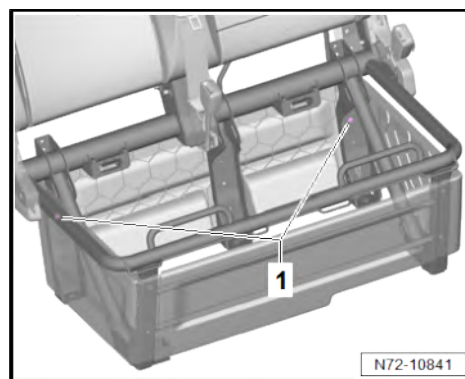

- Unscrew bolts -1-.

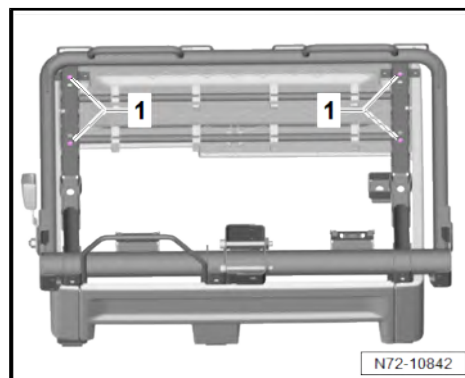


- Swing seat trims -1- in -direction of arrow A-. When doing this, remove them in -direction of arrow B-.

Installing

Install in reverse order of removal, observing the following:

Specified torques

- ◆ ⇒ [“2.4 Assembly overview - seat pan”, page 338](#)

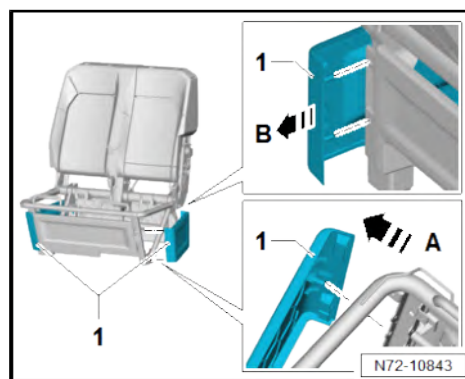



2.22.13 Removing and installing rear seat trim, seat frame, bench seat

Removing




Note

For reasons of clarity, the seat cushion is shown removed.

- Fold up and fix seat cushion.
- Remove side seat trims ⇒ [page 368](#) .
- Remove seat trim -1- in -direction of arrow-.

Installing

Install in reverse order.

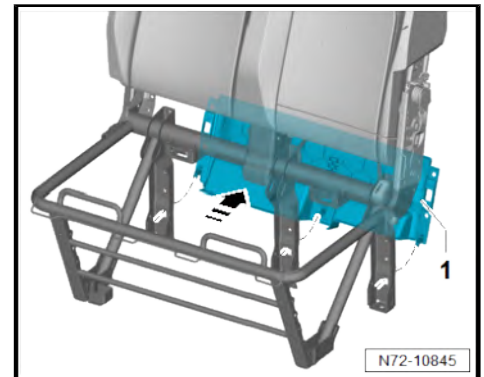

2.23 Removing and installing seat depth adjustment unit

⇒ [“2.23.1 Removing and installing seat depth adjustment unit, trim”, page 377](#)

⇒ [“2.23.2 Removing and installing seat depth adjustment unit”, page 378](#)

2.23.1 Removing and installing seat depth adjustment unit, trim

Special tools and workshop equipment required

- ◆ Removal wedge - 3409-






Removing

- Front seat must be positioned in rearmost and highest position.
- Pull seat depth adjustment unit -2- as far forwards as possible.
- Use removal wedge - 3409- to release locking lugs -arrows-.
- Remove trim -1-.

Installing

Install in reverse order.

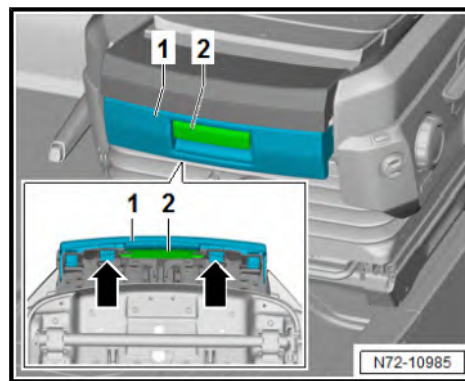

2.23.2 Removing and installing seat depth adjustment unit

Special tools and workshop equipment required

- ♦ Torque wrench - V.A.G 1783-



Removing


- Remove padding for seat depth adjustment unit at seat pan ⇒ [page 406](#).
- Separate connector -3-.
- Lay wiring harness -3- from seat pan -2- aside.
- Unscrew bolts -4-.
- Remove seat depth adjustment unit -1-. When doing this, detach tabs -arrows-.

Installing

Install in reverse order of removal, observing the following:

Specified torques

- ♦ ⇒ [“2.5 Assembly overview - seat depth adjustment”, page 343](#)

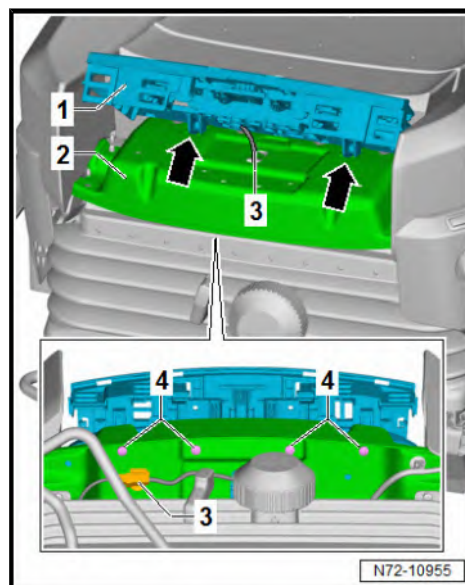



3 Rear seats

⇒ ["3.1 Assembly overview - bench seat / individual seats", page 379](#)

⇒ ["3.2 Assembly overview - head restraint and head restraint guide", page 382](#)

⇒ ["3.3 Assembly overview - rear seat backrest", page 383](#)

⇒ ["3.4 Assembly overview - seat frame", page 385](#)

⇒ ["3.5 Assembly overview - centre armrest", page 387](#)

⇒ ["3.6 Removing and installing bench seat / individual seats", page 387](#)

⇒ ["3.7 Removing and installing head restraint", page 392](#)

⇒ ["3.8 Removing and installing head restraint guide", page 393](#)

⇒ ["3.9 Removing and installing rear seat backrest", page 394](#)

⇒ ["3.10 Removing and installing seat trim, single seat passenger compartment", page 395](#)

⇒ ["3.11 Removing and installing seat armrest, single seat passenger compartment", page 398](#)

3.1 Assembly overview - bench seat / individual seats

⇒ ["3.1.1 Assembly overview - bench seat", page 379](#)

⇒ ["3.1.2 Assembly overview - single seat, passenger compartment", page 381](#)

3.1.1 Assembly overview - bench seat



1 - Rear bench seat

- ☐ Assembly overview - rear seat backrest
⇒ [page 383](#)
- ☐ Assembly overview - seat pan ⇒ [page 385](#)
- ☐ Removing and installing
⇒ [page 387](#)

2 - Seat cushion

- ☐ Assembly overview
⇒ [page 385](#)
- ☐ Removing and installing
⇒ [page 387](#)

3 - Head restraints

- ☐ Qty. 4
- ☐ Removing and installing
⇒ [page 392](#)

4 - Seat belts

- ☐ Qty. 2
- ☐ Assembly overview
⇒ [page 109](#)
- ☐ Removing and installing
⇒ [page 119](#)

5 - Belt buckles


- ☐ Qty. 3
- ☐ Assembly overview
⇒ [page 112](#)
- ☐ Removing and installing
⇒ [page 135](#)

6 - Bolts

- ☐ Qty. 6
- ☐ 90 Nm

7 - Trim

- ☐ Qty. 2
- ☐ Assembly overview - seat pan ⇒ [page 385](#)
- ☐ Removing and installing ⇒ [page 387](#)

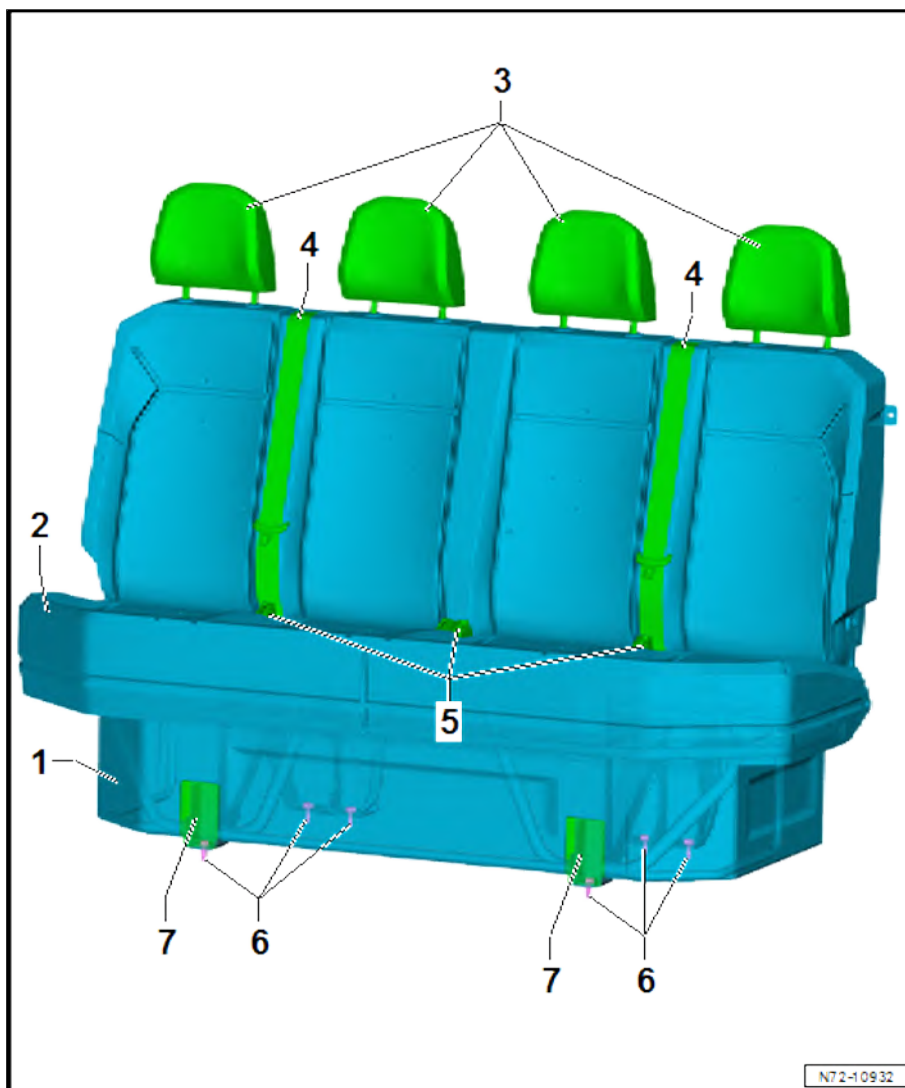



3.1.2 Assembly overview - single seat, passenger compartment

1 - Head restraint

- ☐ Removing and installing
⇒ [page 392](#)

2 - Backrest padding

- ☐ With cover
- ☐ Assembly overview
⇒ [page 424](#)
- ☐ Removing and installing
⇒ [page 426](#)

3 - Seat armrests

- ☐ Qty. 2
- ☐ Removing and installing
⇒ [page 398](#)

4 - Belt buckle

- ☐ Assembly overview
⇒ [page 112](#)
- ☐ Removing and installing
⇒ [page 135](#)

5 - Seat frame


- ☐ Removing and installing
⇒ [page 387](#)

6 - Seat padding

- ☐ With cover
- ☐ Assembly overview
⇒ [page 385](#)
- ☐ Removing and installing
⇒ [page 387](#)

7 - Seat belt

- ☐ Assembly overview
⇒ [page 110](#)
- ☐ Removing and installing
⇒ [page 119](#)

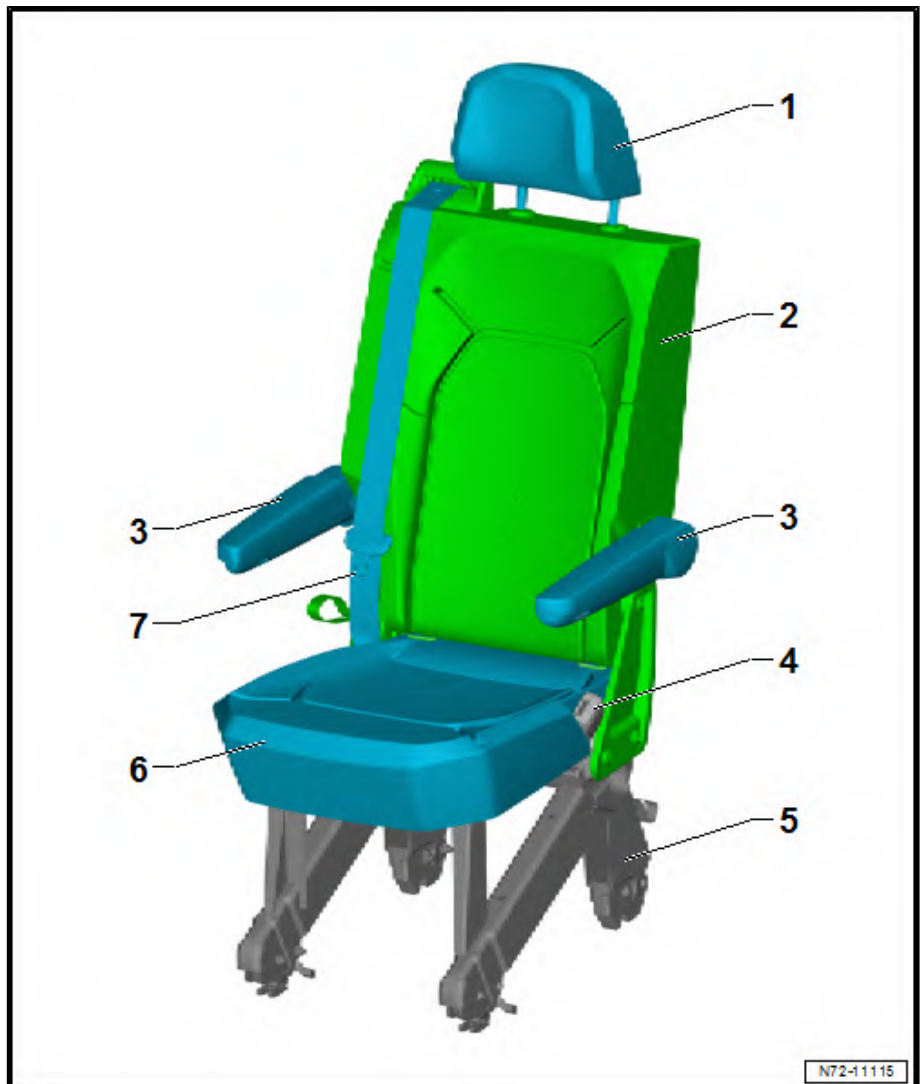



3.2 Assembly overview - head restraint and head restraint guide

1 - Head restraint


- ❑ Removing and installing
⇒ [page 392](#)

2 - Head restraint guide

- ❑ With button
- ❑ Removing and installing
⇒ [page 393](#)

3 - Head restraint guide

- ❑ Without button
- ❑ Removing and installing
⇒ [page 393](#)

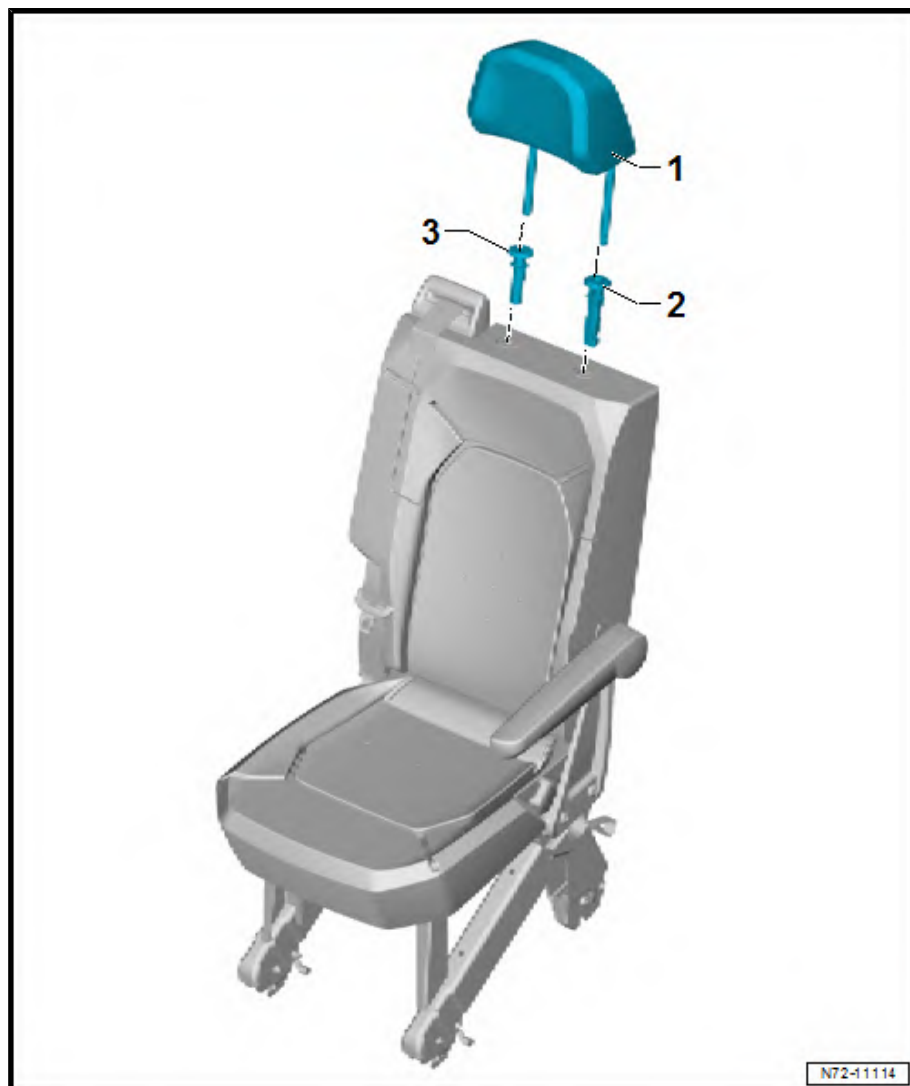

N72-11114

3.3 Assembly overview - rear seat backrest

⇒ [“3.3.1 Assembly overview - rear seat backrest”, page 383](#)

⇒ [“3.3.2 Assembly overview - rear backrest, single seat passenger compartment”, page 384](#)

3.3.1 Assembly overview - rear seat backrest

1 - Seat frame

- ☐ Removing and installing
⇒ [page 387](#)

2 - Seat cushion

- ☐ Assembly overview - seat pan ⇒ [page 385](#)
- ☐ Assembly overview - cover and padding
⇒ [page 424](#)
- ☐ Removing and installing
⇒ [page 387](#)

3 - Bolts

- ☐ Qty. 2
- ☐ 30 Nm

4 - Bolts

- ☐ Qty. 2
- ☐ 40 Nm

5 - Seat belts

- ☐ Qty. 2
- ☐ The outer belt buckles are permanently attached to the belt webbing of the belt inertia reels
- ☐ Assembly overview
⇒ [page 109](#)
- ☐ Removing and installing
⇒ [page 119](#)

6 - Head restraints

- ☐ Qty. 4
- ☐ Removing and installing
⇒ [page 392](#)

7 - Head restraint guides

- ☐ Qty. 8
- ☐ Removing and installing ⇒ [page 393](#)

8 - Belt guides


- ☐ Qty. 2
- ☐ Removing and installing ⇒ [page 125](#)

9 - Backrest padding with cover

- ☐ Assembly overview ⇒ [page 424](#)
- ☐ Removing and installing ⇒ [page 426](#)

10 - Bolts

- ☐ Qty. 4
- ☐ 30 Nm

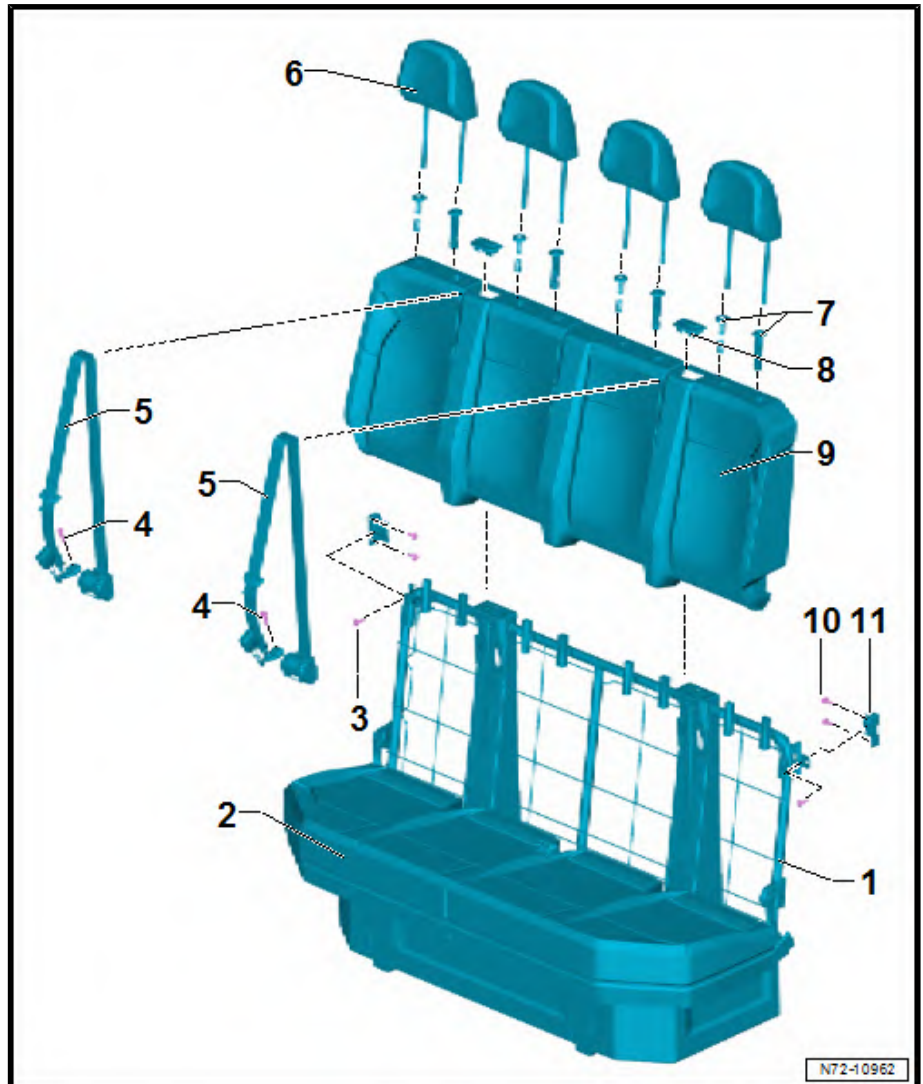



11 - Bracket

- ☐ Qty. 2
- ☐ Removing and installing ⇒ [page 387](#)

3.3.2 Assembly overview - rear backrest, single seat passenger compartment

1 - Rear seat backrest

- ☐ Removing and installing
⇒ [page 394](#)

2 - Belt guide

- ☐ Removing and installing
⇒ [page 395](#)

3 - Bolts

- ☐ Qty. 2
- ☐ 3 Nm

4 - Retainer trim

- ☐ Removing and installing
⇒ [page 395](#)

5 - Bolts

- ☐ Qty. 2
- ☐ 8 Nm

6 - Bolts

- ☐ Qty. 2
- ☐ 4.5 Nm

7 - Cover

- ☐ Removing and installing
⇒ [page 395](#)

8 - Rear section hardboard

- ☐ Removing and installing
⇒ [page 395](#)

9 - Top tether


- ☐ Removing and installing
⇒ [page 395](#)

10 - Pop rivets

- ☐ Qty. 7

11 - Cover

- ☐ Removing and installing ⇒ [page 395](#)

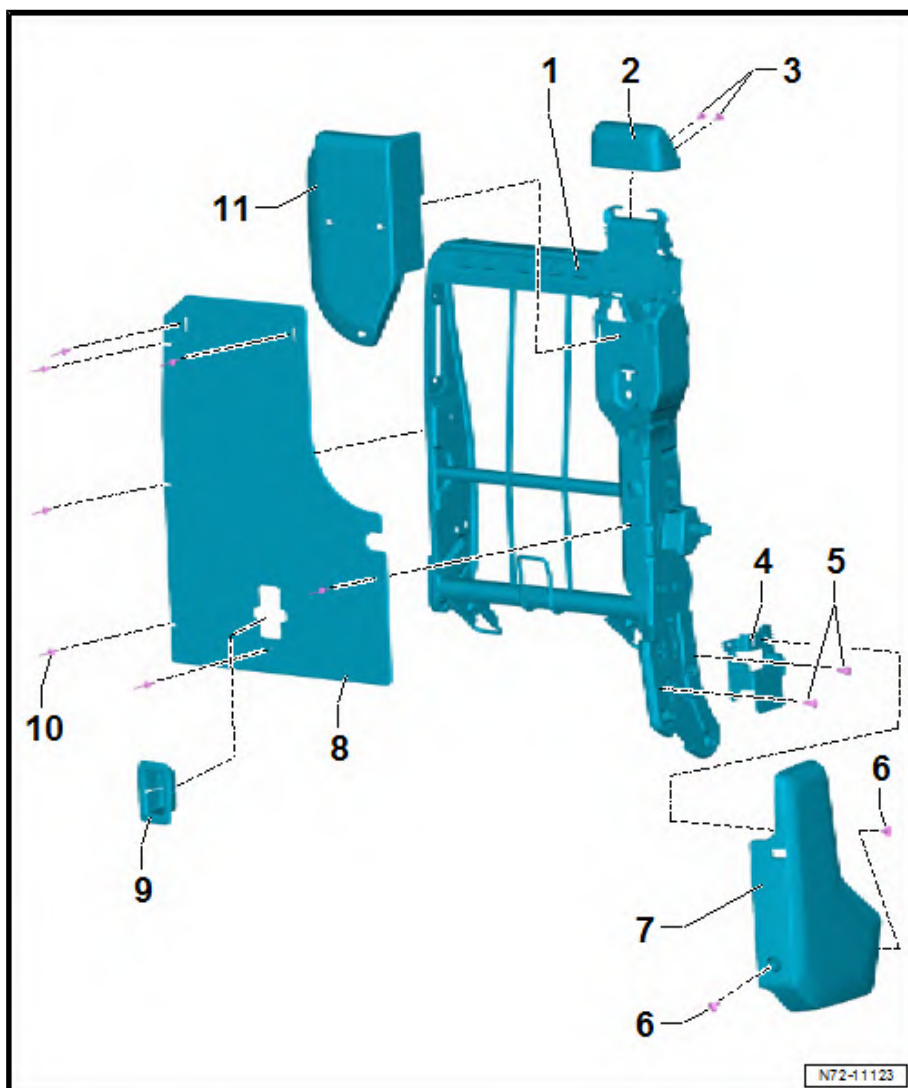

3.4 Assembly overview - seat frame

⇒ ["3.4.1 Assembly overview - seat frame", page 385](#)

⇒ ["3.4.2 Assembly overview - seat frame, single seat passenger compartment", page 386](#)

3.4.1 Assembly overview - seat frame

1 - Seat cushion for seat frame

- ☐ Removing and installing
⇒ [page 387](#)

2 - Bolts

- ☐ Qty. 2
- ☐ 55 Nm

3 - Seat frame

- ☐ Assembly overview - rear seat backrest
⇒ [page 383](#)
- ☐ Removing and installing
⇒ [page 387](#)

4 - Backrest padding with cover

- ☐ Assembly overview
⇒ [page 424](#)
- ☐ Removing and installing
⇒ [page 426](#)

5 - Trim

- ☐ Qty. 2

6 - Bolt


- ☐ 40 Nm

7 - Double belt buckle

- ☐ Centre
- ☐ Assembly overview
⇒ [page 112](#)
- ☐ Removing and installing
⇒ [page 135](#)

8 - Seat padding with cover

- ☐ Assembly overview
⇒ [page 424](#)
- ☐ Removing and installing ⇒ [page 426](#)

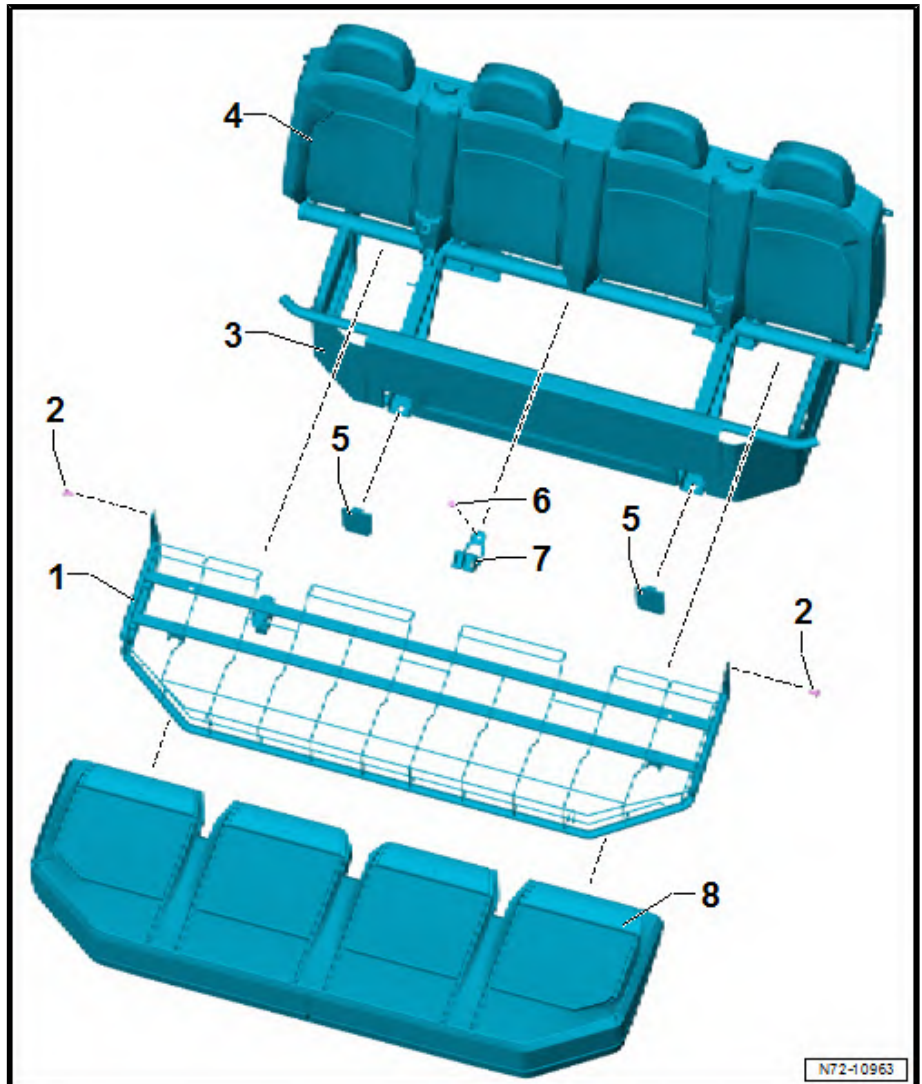

N72-10963

3.4.2 Assembly overview - seat frame, single seat passenger compartment

1 - Seat cushion

- ☐ Removing and installing
⇒ [page 387](#)

2 - Seat frame

- ☐ Removing and installing
⇒ [page 387](#)

3 - Trim

- ☐ Removing and installing
⇒ [page 135](#)

4 - Bolts

- ☐ Qty. 3
- ☐ 55 Nm

5 - Bolts

- ☐ Qty. 2
- ☐ 65 Nm

6 - Nuts


- ☐ Qty. 2
- ☐ 65 Nm

7 - Bolts

- ☐ Qty. 2
- ☐ 12 Nm

8 - Bolts

- ☐ Qty. 2
- ☐ 20 Nm

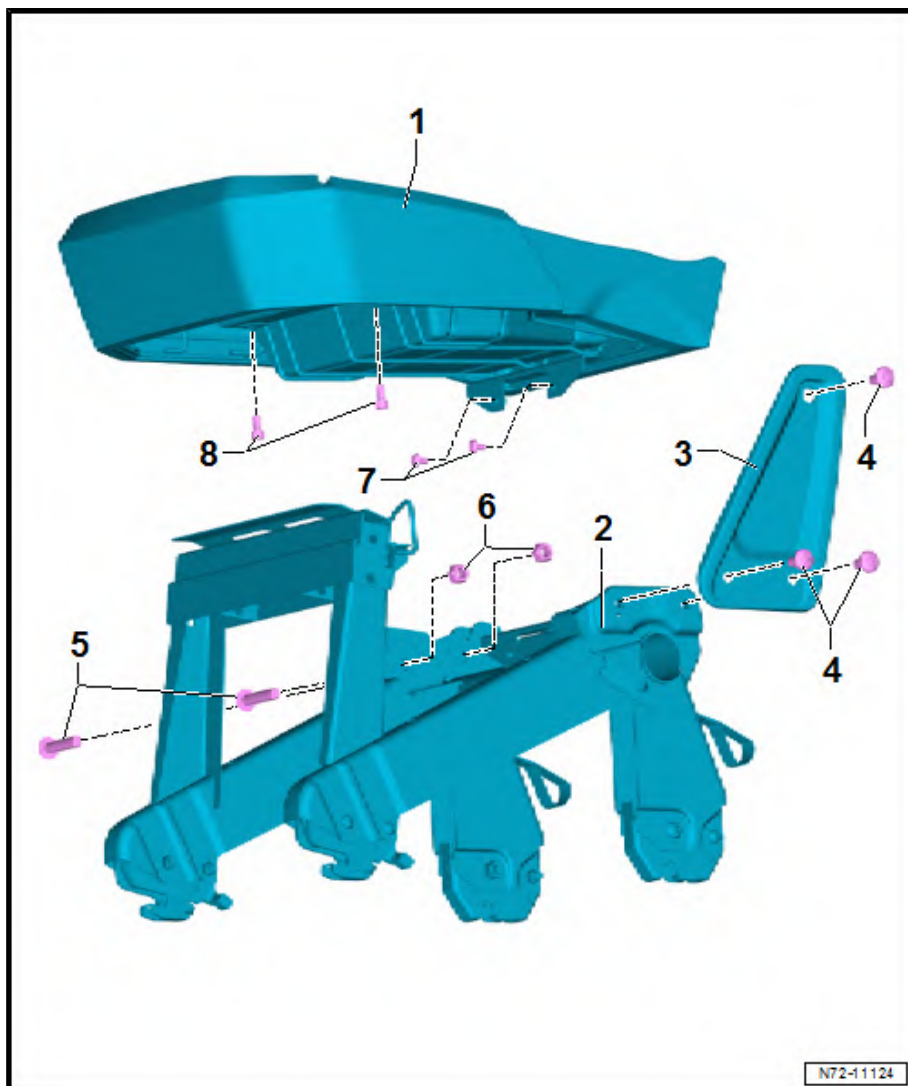



3.5 Assembly overview - centre armrest

1 - Grommets

- ☐ Qty. 2
- ☐ Depending on equipment
- ☐ Removing and installing
⇒ [page 398](#)

2 - Seat armrests


- ☐ Qty. 2
- ☐ Depending on equipment
- ☐ Removing and installing
⇒ [page 398](#)

3 - Bolts

- ☐ Qty. 2
- ☐ 20 Nm

4 - Covers

- ☐ Qty. 2
- ☐ Removing and installing
⇒ [page 398](#)

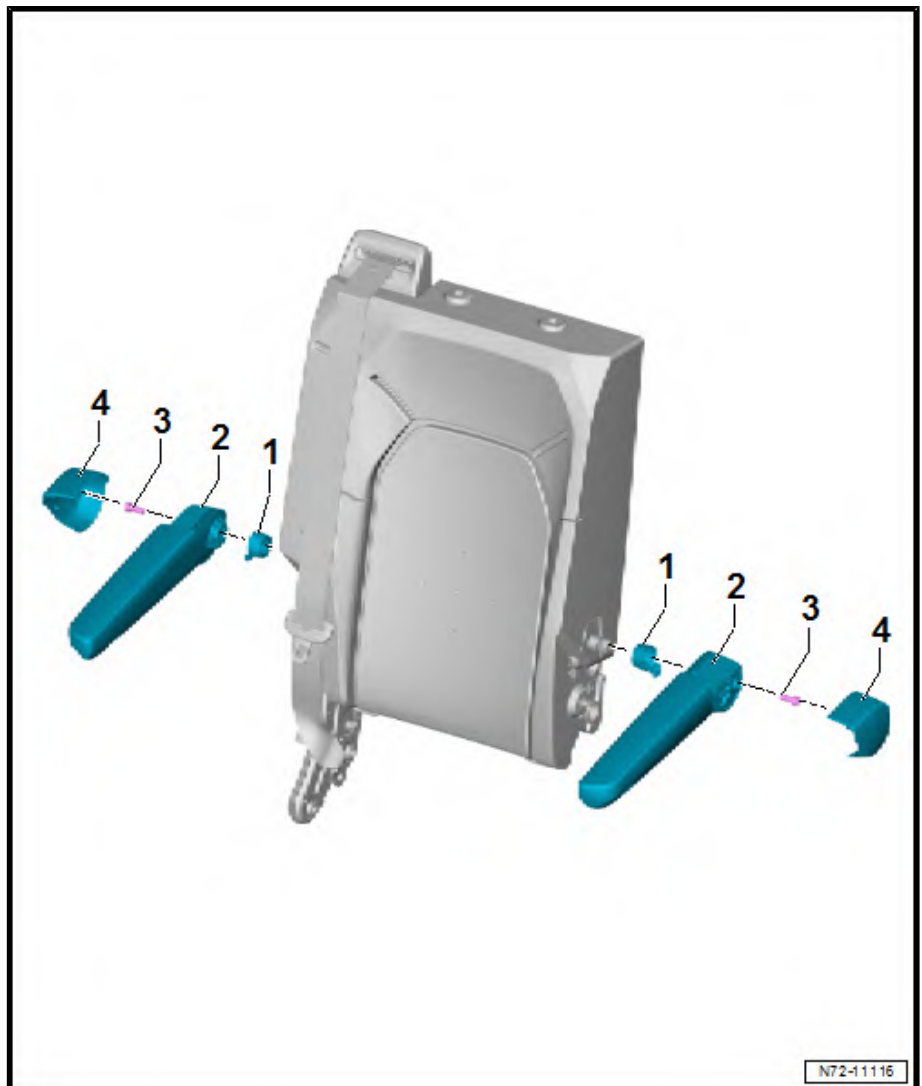

3.6 Removing and installing bench seat / individual seats

⇒ [“3.6.1 Removing and installing bench seat, double cab”, page 387](#)

⇒ [“3.6.2 Removing and installing single seat passenger compartment”, page 389](#)

⇒ [“3.6.3 Removing and installing cover and padding, bench seat double cab”, page 390](#)

⇒ [“3.6.4 Removing and installing cover and padding of backrest, single seat passenger compartment”, page 391](#)

⇒ [“3.6.5 Removing and installing bracket for seat frame of bench seat, double cab”, page 391](#)

3.6.1 Removing and installing bench seat, double cab

Special tools and workshop equipment required




- ◆ Torque wrench - V.A.G 1331-




Removing

- Remove bench seat cushion ⇒ [page 387](#) .
- Detach rear outer belt end fittings from bench seat ⇒ [page 132](#) .
- Unclip trims -3- from bench seat -1-.
- Unscrew bolts -2-.

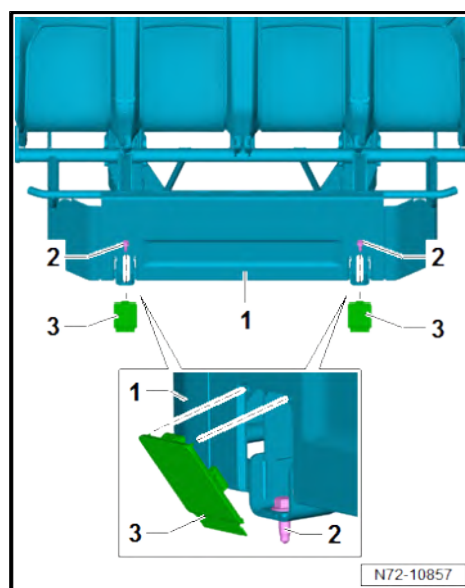

- Unscrew bolts -1- from bench seat -2-.

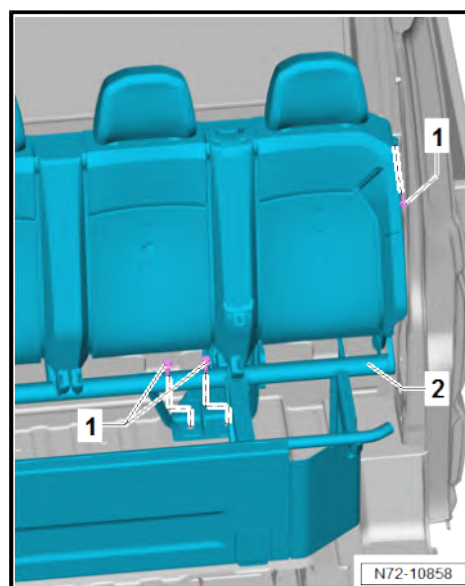



- Unscrew bolts -1- from bench seat -2-.
- Use suitable means to protect body and surrounding components against damage.
- With the aid of second mechanic, remove bench seat -2-.


Installing

Install in reverse order of removal, observing the following:

- Check threads in mounting plate for damage.
- Bring bench seat into position in vehicle.
- Screw in all bolts to stop by hand.
- Tighten bolts.

Specified torques


- ◆ ⇒ ["3.1 Assembly overview - bench seat / individual seats", page 379](#)
- ◆ ⇒ ["3.3 Assembly overview - rear seat backrest", page 383](#)

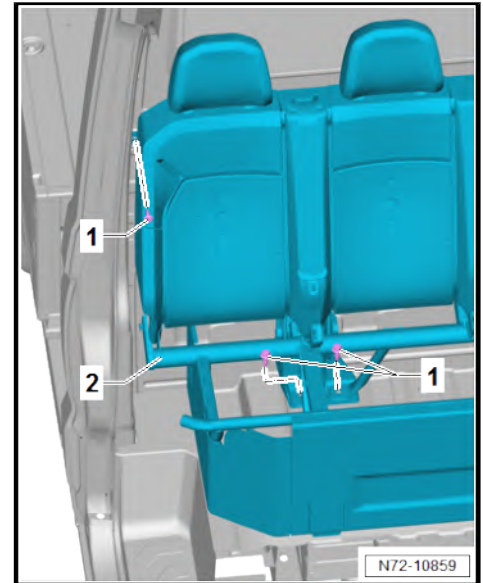

3.6.2 Removing and installing single seat passenger compartment

Removing

- Remove head restraint ⇒ [page 392](#) .
- Fold down backrest forwards by pulling strap.
- Release single seat -1- by pulling strap -2-.
- Lift single seat -1- upwards out of securing pins in direction of -arrow-.

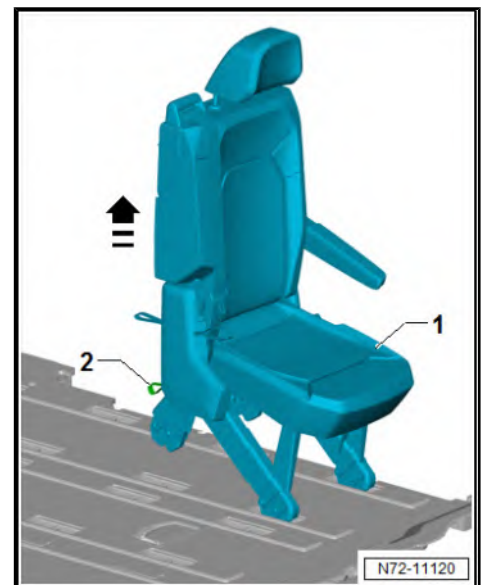




Installing

Install in reverse order of removal, observing the following:

- Attach front section of single seat -1- to pin -arrow A-.
- Attach rear section of single seat -1- to pin -arrow B- and engage in direction of -arrow C-.

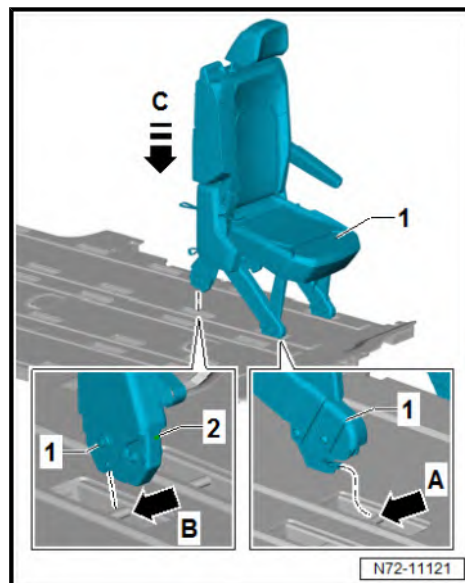

3.6.3 Removing and installing cover and padding, bench seat double cab

Special tools and workshop equipment required

- ♦ Torque wrench - V.A.G 1331-



Removing


- Use suitable means to protect body and surrounding components against damage.
- Unscrew bolts -1-.
- Remove seat cushion -2-, and place them on a clean surface.

Installing

Install in reverse order of removal, observing the following:

Specified torques

- ♦ ⇒ ["3.4 Assembly overview - seat frame", page 385](#)

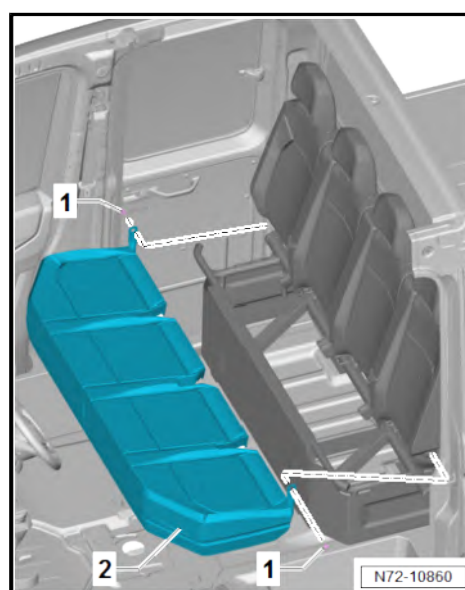



3.6.4 Removing and installing cover and padding of backrest, single seat passenger compartment

Special tools and workshop equipment required

- ◆ Torque wrench - V.A.G 1331-



Removing


- Remove single seat passenger compartment ⇒ [page 387](#) .
- Unscrew bolts -2-.
- Unscrew bolts -3-.
- Remove seat cushion -1- from seat frame.

Installing

Install in reverse order of removal, observing the following:

Specified torques

- ◆ ⇒ [“3.4 Assembly overview - seat frame”, page 385](#)

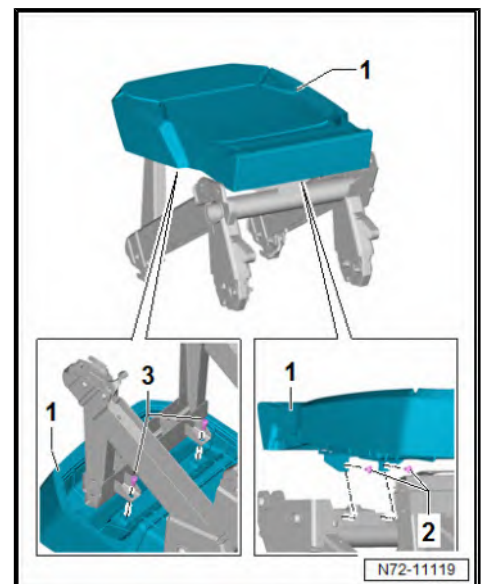

3.6.5 Removing and installing bracket for seat frame of bench seat, double cab

Special tools and workshop equipment required

- ◆ Torque wrench - V.A.G 1331-





Removing


- Remove rear bench seat ⇒ [page 387](#) .
- Unscrew bolts -1-.
- Remove retainer -2-.

Installing

Install in reverse order of removal, observing the following:

Specified torques

- ♦ ⇒ [“3.3 Assembly overview - rear seat backrest”, page 383](#)

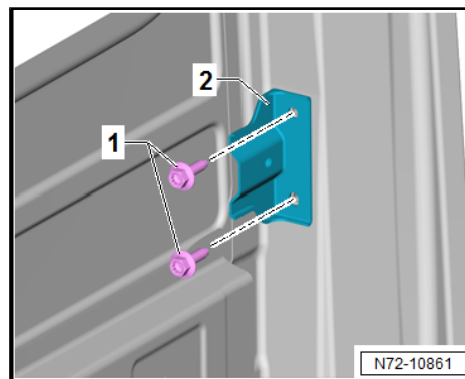

3.7 Removing and installing head restraint

⇒ [“3.7.1 Removing and installing head restraint”, page 392](#)

⇒ [“3.7.2 Removing and installing head restraint, single seat passenger compartment”, page 392](#)

3.7.1 Removing and installing head restraint

Removing




Note

The description is for vehicles with an individual seat. The description for vehicles with a bench seat is analogous.

- Release locking mechanism for head restraint guide -2- in direction of -arrow A-. Pull off head restraint -1- from backrest -3- in direction of -arrow B- when doing this.

Installing

Install in reverse order.

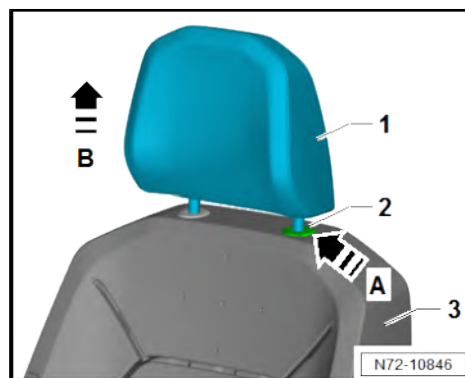


3.7.2 Removing and installing head restraint, single seat passenger compartment

Removing

- Release locking mechanism for head restraint guide -2-. When doing this, pull off head restraint -1- from backrest.

Installing

Install in reverse order.

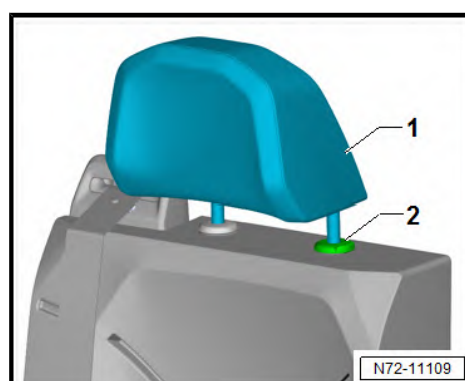



3.8 Removing and installing head restraint guide

⇒ [“3.8.1 Removing and installing head restraint guide”, page 393](#)

⇒ [“3.8.2 Removing and installing head restraint guide, single seat passenger compartment”, page 393](#)

3.8.1 Removing and installing head restraint guide

Removing




Note

The description is for vehicles with an individual seat. The description for vehicles with a bench seat is analogous.

- Remove backrest cover and cushion ⇒ [page 426](#) .
- Release locking lugs of head restraint guides -1- in -direction of arrow-. When doing this, pull head restraint guides out of backrest frame -2-.

Installing

Install in reverse order.

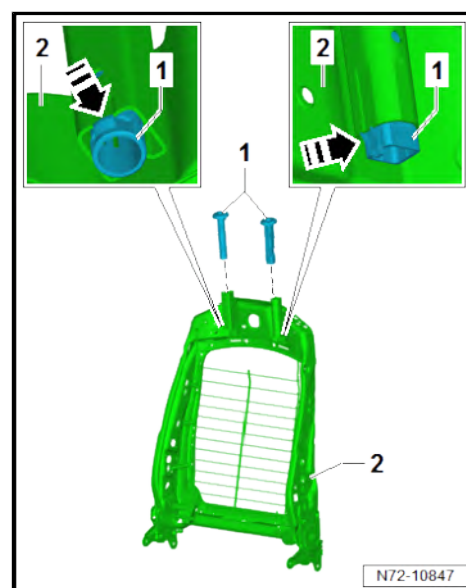

3.8.2 Removing and installing head restraint guide, single seat passenger compartment


Removing

- Remove backrest cover and cushion ⇒ [page 426](#) .
- Release locking lugs of head restraint guides -1- in -direction of arrow-.
- When doing this, pull out head restraint guides -1- from backrest frame -2-.

Installing

Install in reverse order of removal, observing the following:

- Head restraint guides -1- must engage audibly in backrest frame.

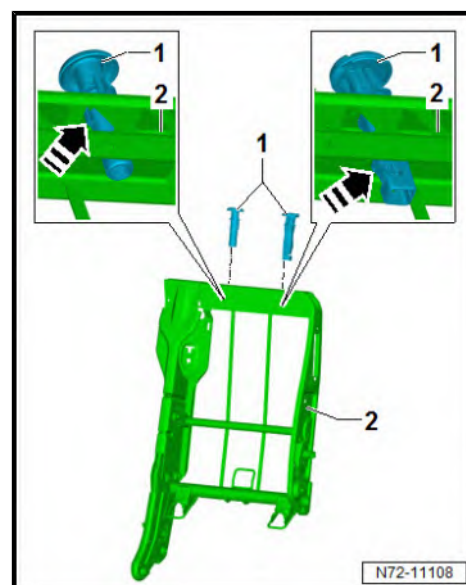



3.9 Removing and installing rear seat backrest

⇒ [“3.9.1 Rear seat backrest of double cab”, page 394](#)

⇒ [“3.9.2 Removing and installing rear seat backrest, single seat passenger compartment”, page 394](#)

3.9.1 Rear seat backrest of double cab

The rear seat backrest is permanently attached to the rear bench seat.

- Removing and installing bench seat ⇒ [page 387](#)
- Removing and installing backrest cover and padding ⇒ [page 426](#) .

3.9.2 Removing and installing rear seat backrest, single seat passenger compartment

Special tools and workshop equipment required

- ◆ Torque wrench - V.A.G 1331-



Removing

- Remove single seat passenger compartment ⇒ [page 389](#) .
- Remove trim ⇒ [page 395](#) .
- Remove belt end fitting ⇒ [page 131](#) .
- Unscrew bolts -3-.
- Unscrew bolts -2-.
- Remove rear seat backrest -1-.


Installing

Install in reverse order of removal, observing the following:

- Bring belt buckle back into correct position.

Specified torques

- ◆ ⇒ [“3.4 Assembly overview - seat frame”, page 385](#)

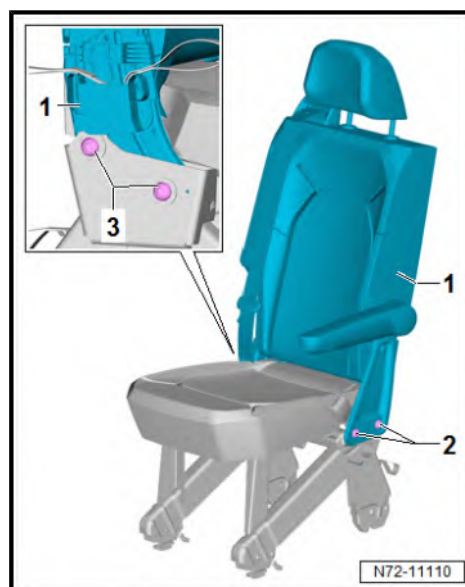



3.10 Removing and installing seat trim, single seat passenger compartment

⇒ ["3.10.1 Removing and installing trim", page 395](#)

⇒ ["3.10.2 Removing and installing bracket trim", page 395](#)

⇒ ["3.10.3 Removing and installing belt guide", page 396](#)

⇒ ["3.10.4 Removing and installing hardboard back panel", page 396](#)

⇒ ["3.10.5 Removing and installing top tether", page 398](#)

3.10.1 Removing and installing trim

Special tools and workshop equipment required

- ◆ Torque wrench - V.A.G 1783-

Removing


- Unscrew bolts -2-.
- Unclip and remove trim -1- from backrest hinge point.
- Guide out strap -3- through respective window of trim -1-.

Installing

Install in reverse order of removal, observing the following:

Specified torques

- ◆ ⇒ ["3.3 Assembly overview - rear seat backrest", page 383](#)

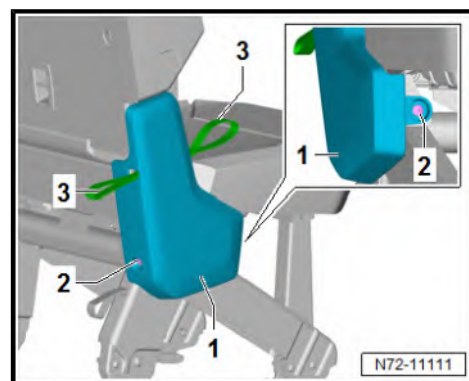

3.10.2 Removing and installing bracket trim

Special tools and workshop equipment required

- ◆ Torque wrench - V.A.G 1783-





Removing


- Remove trim ⇒ [page 395](#) .
- Unscrew bolts -2-.
- Remove bracket trim -1- from backrest hinge point.
- Guide out strap -3- through bracket trim -1-.

Installing

Install in reverse order of removal, observing the following:

Specified torques

- ♦ ⇒ [“3.3 Assembly overview - rear seat backrest”, page 383](#)

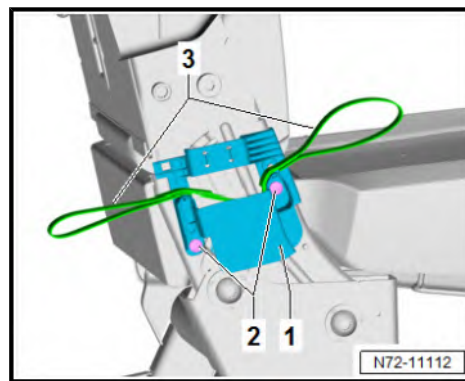

3.10.3 Removing and installing belt guide

Special tools and workshop equipment required

- ♦ Torque wrench - V.A.G 1783-




Removing

- Unscrew bolts -3-.
- Remove belt guide -1-.
- Pull belt webbing -2- out of belt guide -1-.

Installing

Install in reverse order of removal, observing the following:

- Small button -arrow- must be outside belt guide -1- as seen in direction of travel.

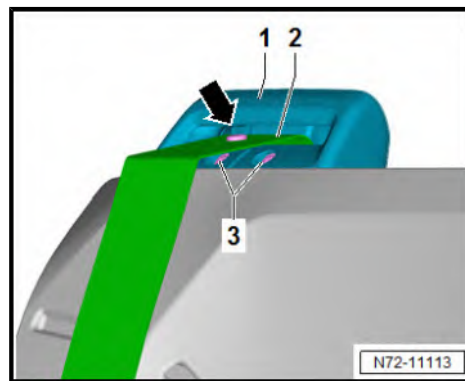


3.10.4 Removing and installing hardboard back panel

Special tools and workshop equipment required



- ◆ Pop rivet pliers - VAS 5072A-


VAS 5072 A

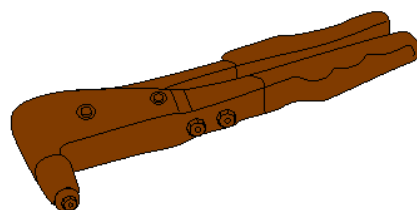

W00-11780

- ◆ Roll pin drift - VAS 5513-

VAS 5513

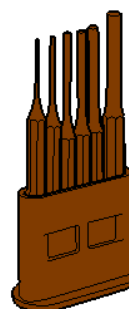

W00-11975

Removing

CAUTION

Risk of injury from swarf being flung into air.
Irritation and injury to skin and eyes possible.


- Wear safety goggles.
- Wear protective gloves.

- Remove backrest cover ➔ [page 426](#) .
- Unclip cap -2-.
- Drill off rivet heads -3- using drill and spiral drill bit with diameter less than 4.5 mm.
- Drive out rivet shanks with drift - VAS 5513- .
- Remove swarf.
- Remove hardboard back panel -1-.

Installing

Install in reverse order of removal, observing the following:

- Use rivet pliers - VAS 5072A- to install new pop rivets.

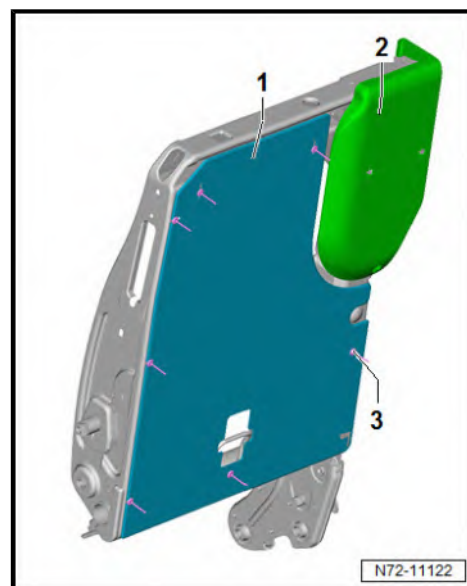

N72-11122




3.10.5 Removing and installing top tether

Removing

- Unclip top tether -1- from bracket -2-.

Installing

Install in reverse order.

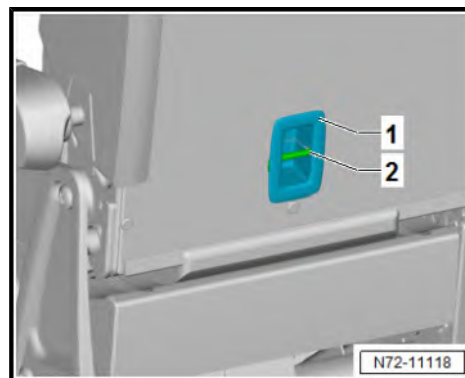

3.11 Removing and installing seat armrest, single seat passenger compartment

Special tools and workshop equipment required

- ◆ Torque wrench - V.A.G 1331-

Removing


- Unclip cover -3-.
- Unscrew bolt -2-.
- Remove seat armrest -1- and grommet -4- in direction of -arrow- from backrest.

Installing

Install in reverse order of removal, observing the following:

Specified torques

- ◆ ⇒ ["3.5 Assembly overview - centre armrest", page 387](#)

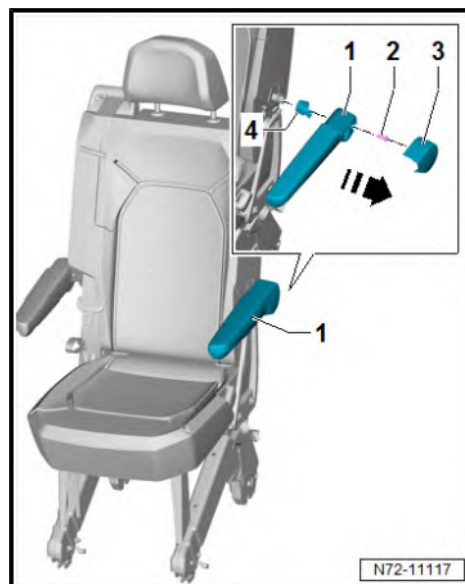



74 – Seat - padding, covers

1 Front seat covers and padding

⇒ [“1.1 Assembly overview - cover and padding for seat pan”, page 399](#)

⇒ [“1.2 Assembly overview - cover and padding for backrest”, page 403](#)

⇒ [“1.3 Assembly overview - seat heating element”, page 405](#)

⇒ [“1.4 Assembly overview - backrest heater element”, page 406](#)

⇒ [“1.5 Removing and installing cover and padding for seat pan”, page 406](#)

⇒ [“1.6 Removing and installing backrest cover and backrest padding”, page 411](#)

⇒ [“1.7 Separating cover and padding on seat pan”, page 416](#)

⇒ [“1.8 Separating cover and padding on backrest”, page 417](#)

⇒ [“1.10 Removing and installing head restraint cover and padding”, page 421](#)

⇒ [“1.11 Removing and installing seat heating element Z6 / Z8 ”, page 422](#)

⇒ [“1.12 Removing and installing backrest heating element Z7 / Z9 ”, page 422](#)

1.1 Assembly overview - cover and padding for seat pan

⇒ [“1.1.1 Assembly overview - cover and padding for seat pan, individual seat, without seat depth adjustment unit”, page 399](#)

⇒ [“1.1.2 Assembly overview - cover and padding for seat pan, individual seat, with seat depth adjustment unit”, page 401](#)

⇒ [“1.1.3 Assembly overview - cover and padding for seat pan, bench seat”, page 402](#)

1.1.1 Assembly overview - cover and padding for seat pan, individual seat, without seat depth adjustment unit



1 - Seat cover


- ☐ Removing and installing seat cover with seat padding ⇒ [page 406](#)
- ☐ Separating seat cover from seat padding ⇒ [page 416](#)
- ☐ Make sure that there are no creases after installing

2 - Seat padding

- ☐ Removing and installing seat cover with seat padding ⇒ [page 406](#)
- ☐ Separating seat cover from seat padding ⇒ [page 416](#)

3 - Seat pan

- ☐ Assembly overview ⇒ [page 338](#)
- ☐ Removing and installing ⇒ [page 417](#)

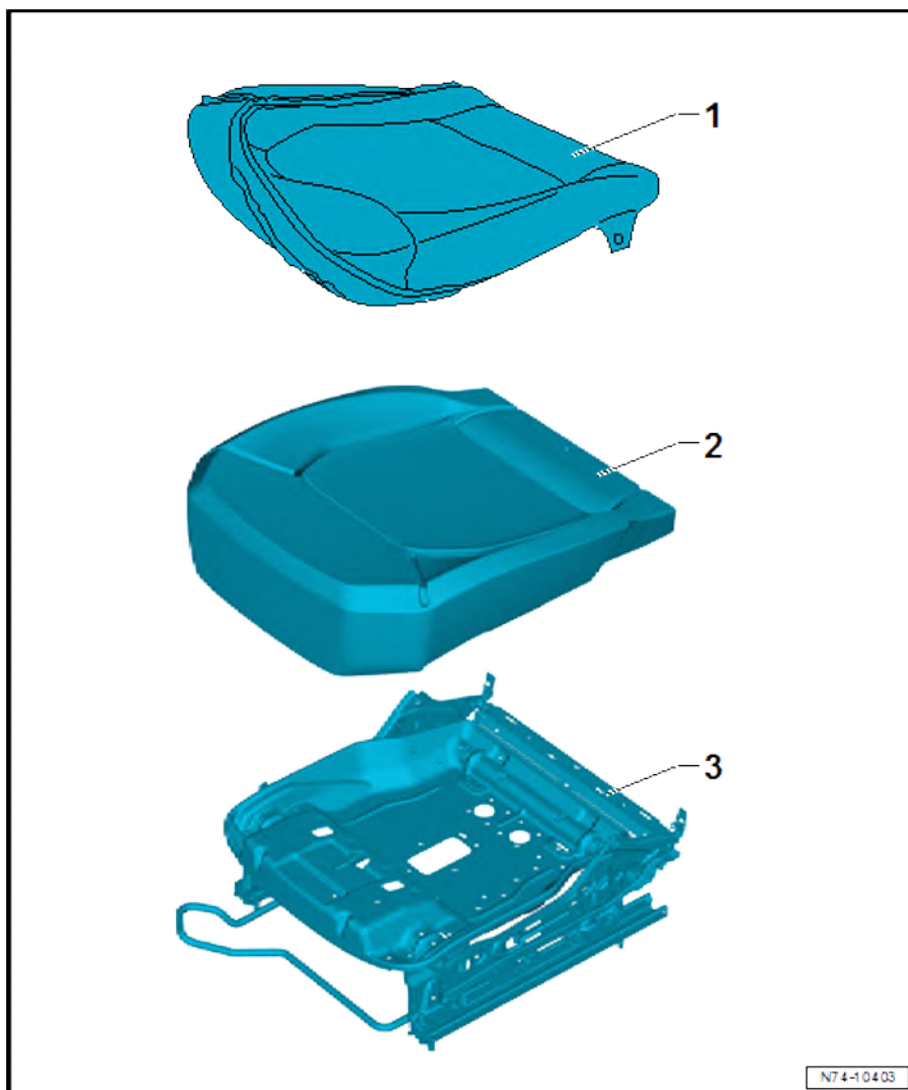

1.1.2 Assembly overview - cover and padding for seat pan, individual seat, with seat depth adjustment unit

1 - Seat cover


- ☐ Removing and installing seat cover with seat padding ⇒ [page 406](#)
- ☐ Separating seat cover from seat padding ⇒ [page 416](#)
- ☐ Make sure that there are no creases after installing

2 - Seat padding

- ☐ Removing and installing seat cover with seat padding ⇒ [page 406](#)
- ☐ Separating seat cover from seat padding ⇒ [page 416](#)

3 - Seat pan

- ☐ Assembly overview ⇒ [page 338](#)
- ☐ Removing and installing ⇒ [page 417](#)

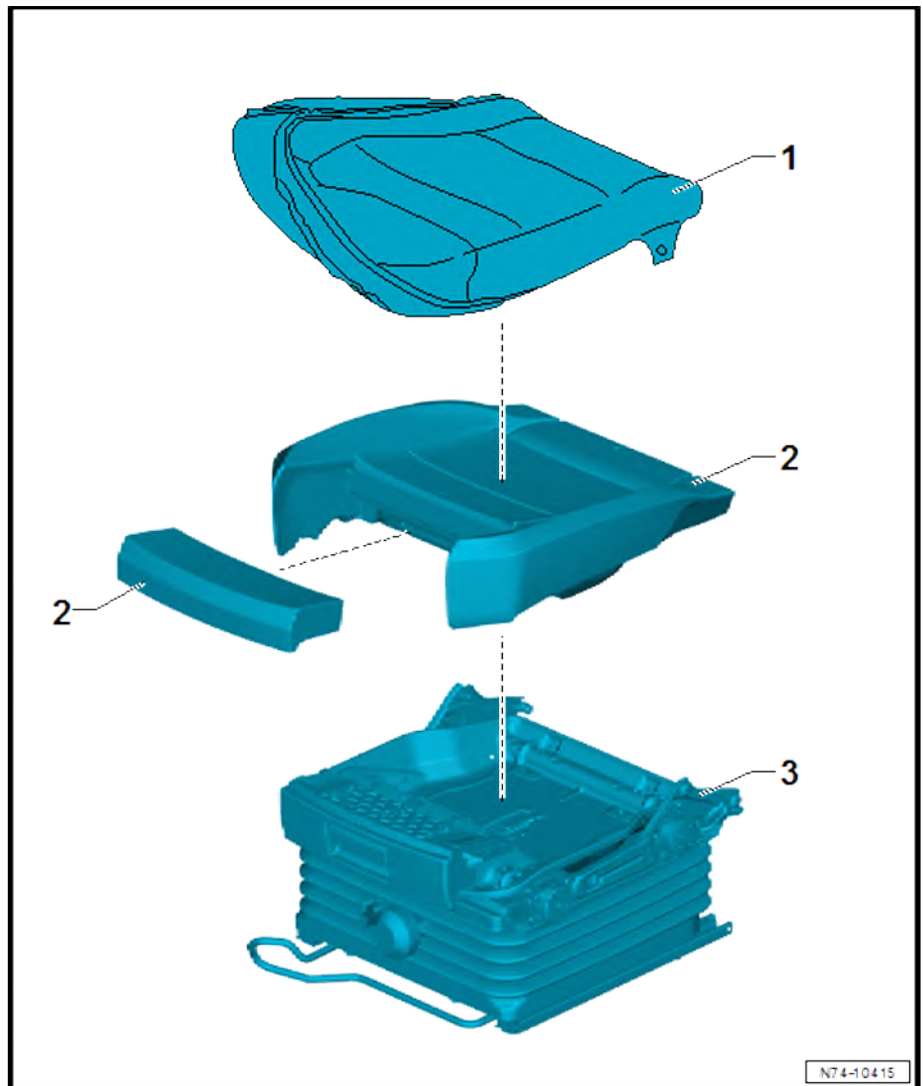

1.1.3 Assembly overview - cover and padding for seat pan, bench seat

1 - Seat covers

- ☐ Removing and installing seat cover with seat padding ⇒ [page 406](#)
- ☐ Separating seat cover from seat padding ⇒ [page 416](#)
- ☐ Make sure that there are no creases after installing

2 - Channel


- ☐ Sewn to cover
- ☐ For attaching cover to seat frame

3 - Seat padding

- ☐ Removing and installing seat cover with seat padding ⇒ [page 406](#)
- ☐ Separating seat cover from seat padding ⇒ [page 416](#)

4 - Seat frame

- ☐ Assembly overview ⇒ [page 338](#)
- ☐ Removing and installing ⇒ [page 343](#)

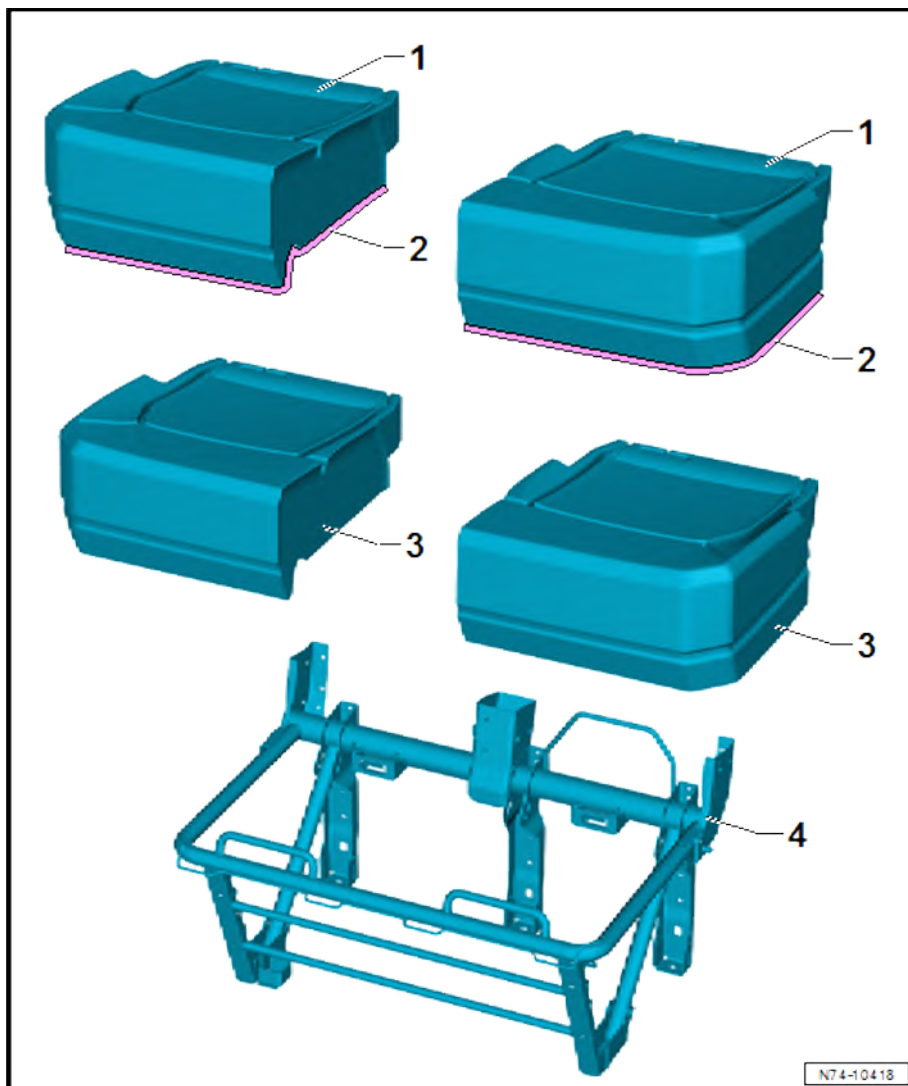

1.2 Assembly overview - cover and padding for backrest

⇒ ["1.2.1 Assembly overview - cover and padding for backrest, individual seat", page 403](#)

⇒ ["1.2.2 Assembly overview - cover and padding for backrest, bench seat", page 404](#)

1.2.1 Assembly overview - cover and padding for backrest, individual seat

1 - Backrest cover

- ☐ Removing and installing backrest cover with backrest padding
⇒ [page 411](#)
- ☐ Separating backrest cover from backrest padding ⇒ [page 417](#)
- ☐ Make sure that there are no creases after installing

2 - Backrest padding


- ☐ Removing and installing backrest cover with backrest padding
⇒ [page 411](#)
- ☐ Separating backrest cover from backrest padding ⇒ [page 417](#)

3 - Backrest frame

- ☐ Assembly overview
⇒ [page 333](#)
- ☐ Removing and installing
⇒ [page 411](#)

4 - Channel

- ☐ Sewn to cover
- ☐ For attaching cover to backrest frame

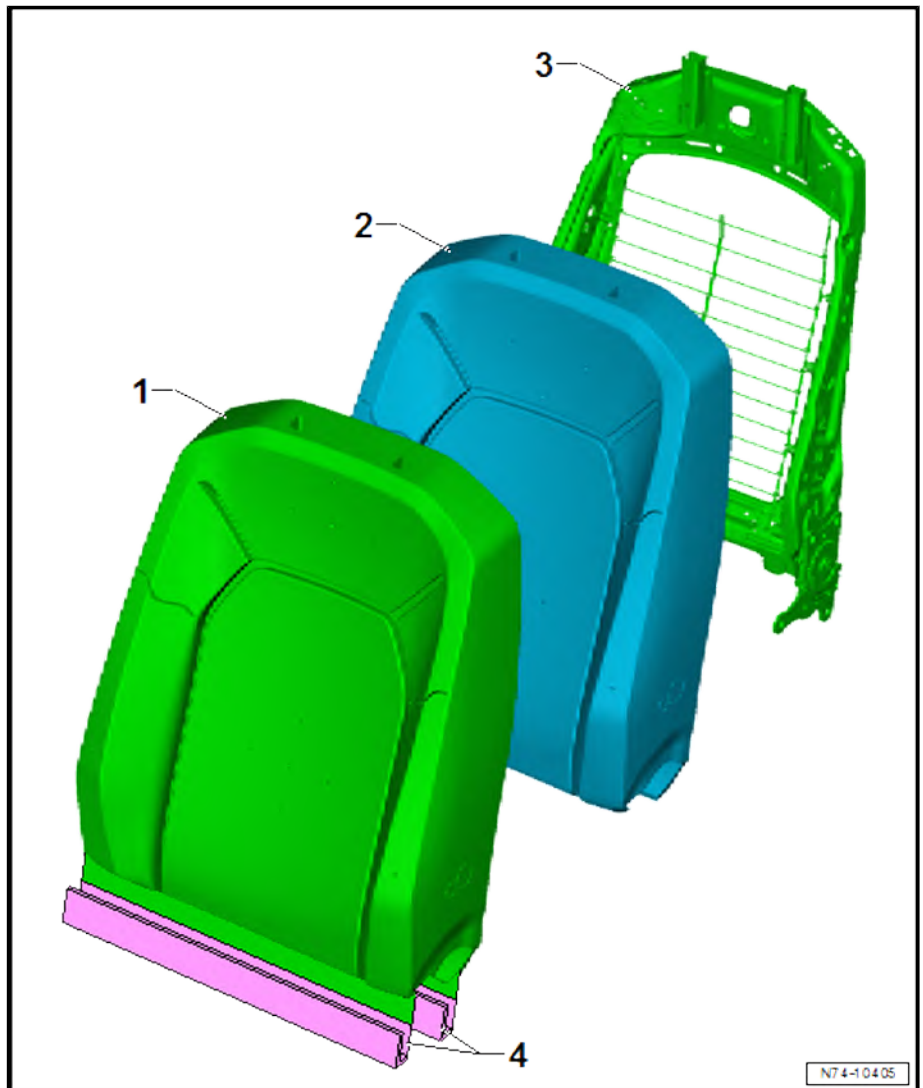

1.2.2 Assembly overview - cover and padding for backrest, bench seat



Note

The description is for vehicles with a folding backrest. Adapt accordingly for vehicles without a backrest.

1 - Backrest cover

- ☐ On outside
- ☐ Removing and installing backrest cover with backrest padding ⇒ [page 411](#)
- ☐ Separating backrest cover from backrest padding ⇒ [page 417](#)
- ☐ Make sure that there are no creases after installing

2 - Backrest cover

- ☐ Centre
- ☐ Removing and installing backrest cover with backrest padding ⇒ [page 411](#)
- ☐ Separating backrest cover from backrest padding ⇒ [page 417](#)
- ☐ Make sure that there are no creases after installing

3 - Backrest cover

- ☐ Intermediate padding
- ☐ Removing and installing backrest cover with backrest padding ⇒ [page 411](#)
- ☐ Make sure that there are no creases after installing

4 - Channel

- ☐ Sewn to cover
- ☐ For attaching cover to backrest frame

5 - Backrest padding


- ☐ On outside
- ☐ Removing and installing backrest cover with backrest padding ⇒ [page 411](#)
- ☐ Separating backrest cover from backrest padding ⇒ [page 417](#)

6 - Backrest padding

- ☐ Centre
- ☐ Removing and installing backrest cover with backrest padding ⇒ [page 411](#)
- ☐ Separating backrest cover from backrest padding ⇒ [page 417](#)

7 - Backrest padding

- ☐ Intermediate padding
- ☐ Removing and installing backrest cover with backrest padding ⇒ [page 411](#)

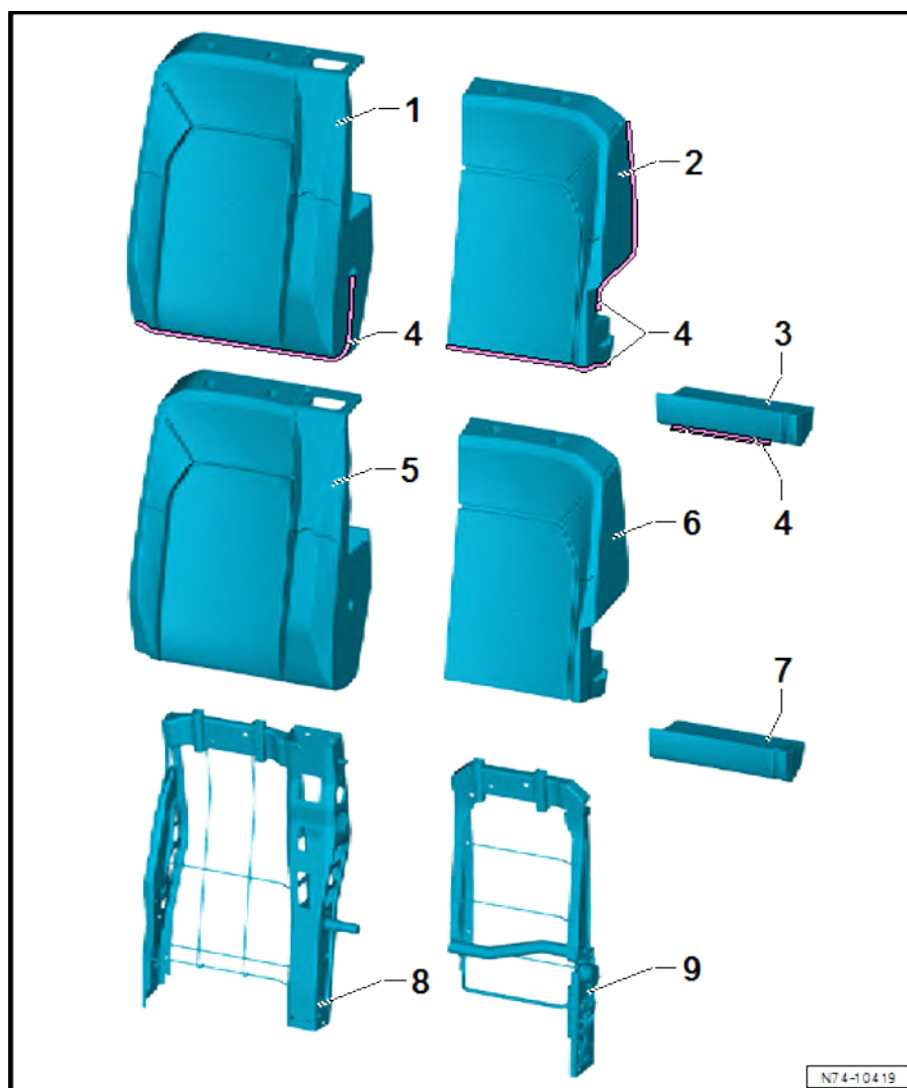



8 - Backrest frame

- ☐ On outside
- ☐ Assembly overview ⇒ [page 333](#)
- ☐ Removing and installing ⇒ [page 411](#)

9 - Backrest frame

- ☐ Centre
- ☐ Assembly overview ⇒ [page 333](#)
- ☐ Removing and installing ⇒ [page 411](#)

1.3 Assembly overview - seat heating element

1 - Seat padding

- ☐ Assembly overview
⇒ [page 399](#)
- ☐ Removing and installing
⇒ [page 406](#)


2 - Heater element

- ☐ Renew after removal
⇒ [page 422](#)
- ☐ Driver seat: heated seat
cushion for front pas-
senger seat - Z6- .
- ☐ Front passenger seat:
heated seat cushion for
front passenger seat -
Z8- .

3 - Electrical connector

4 - Seat frame

- ☐ Assembly overview
⇒ [page 338](#)
- ☐ Removing and installing
⇒ [page 417](#)

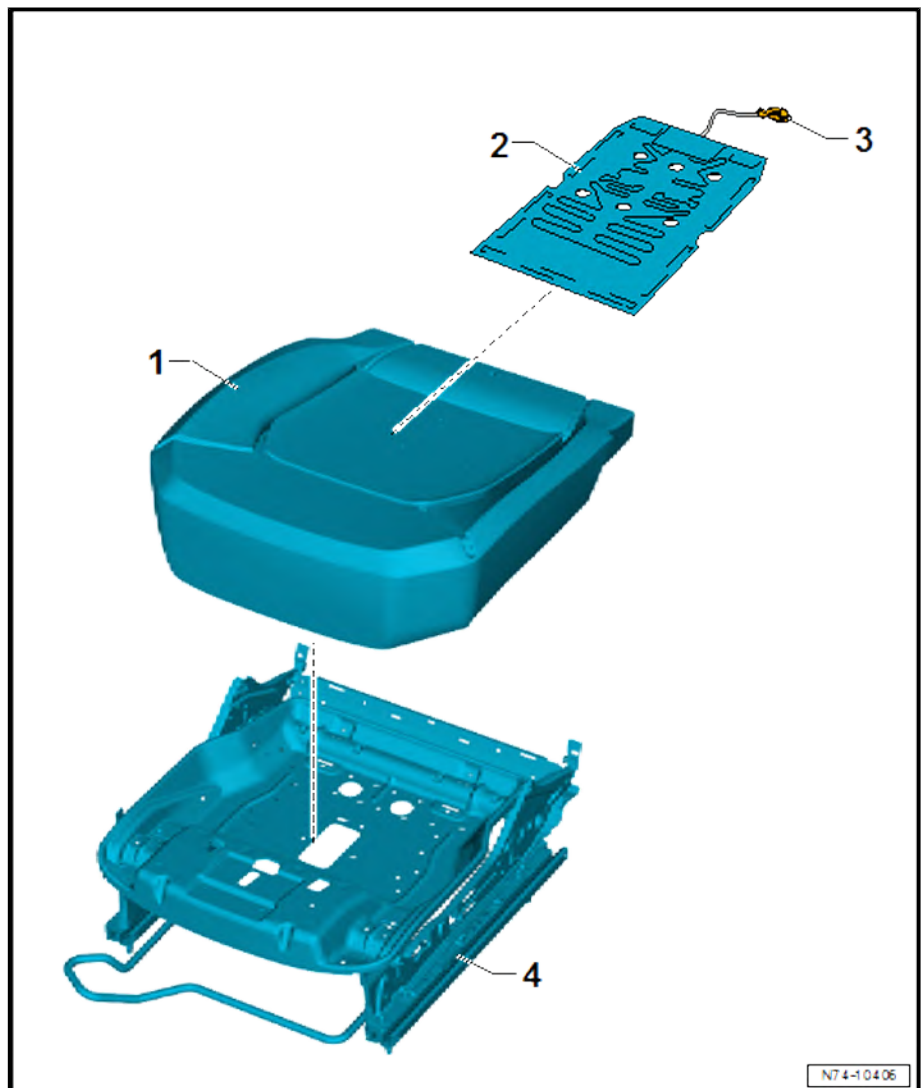

1.4 Assembly overview - backrest heater element

1 - Backrest frame

- ☐ Assembly overview
⇒ [page 333](#)
- ☐ Removing and installing
⇒ [page 417](#)


2 - Backrest padding

- ☐ Assembly overview
⇒ [page 403](#)
- ☐ Removing and installing
⇒ [page 411](#)

3 - Heater element

- ☐ Renew after removal
⇒ [page 422](#)
- ☐ Driver seat: heated backrest for driver seat - Z7- .
- ☐ Front passenger seat: heated backrest for front passenger seat - Z9- .

4 - Electrical connector

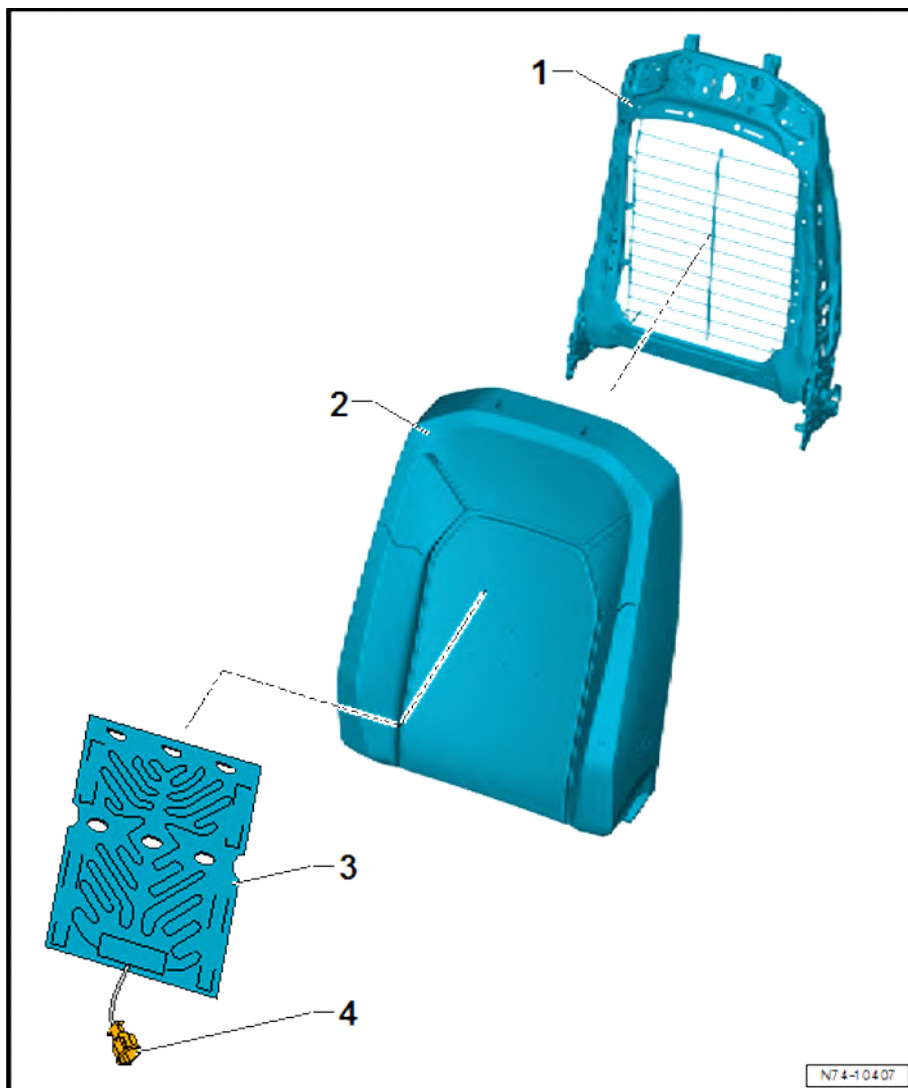

1.5 Removing and installing cover and padding for seat pan

⇒ ["1.5.1 Removing and installing cover and padding for seat pan, individual seat", page 406](#)

⇒ ["1.5.2 Removing and installing cover and padding for seat pan, seat depth adjustment unit", page 408](#)


⇒ ["1.5.3 Removing and installing seat pan cover and padding, bench seat", page 409](#)

1.5.1 Removing and installing cover and padding for seat pan, individual seat

Special tools and workshop equipment required



◆ Front end hook - 3370-

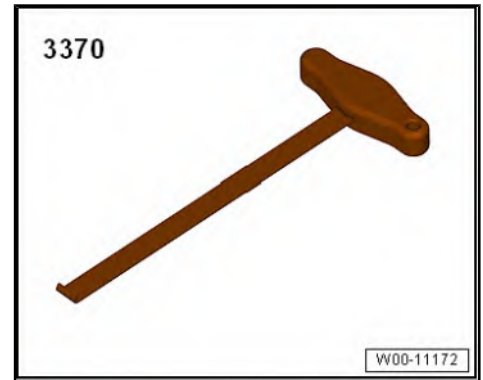

Removing

Vehicles with side airbag

- Connect airbag adapter ➔ [page 350](#) .

Vehicles with partition panel or with PR number K4F (single cab)

- Remove front seat ➔ [page 343](#) .

Vehicles without partition panel or without PR number K4F (single cab)


- Remove rear seat trim ➔ [page 368](#) .

Vehicles with seat depth adjustment unit

- Remove padding for seat depth adjustment unit at seat pan ➔ [page 406](#) .

Vehicles with seat heating element -Z6- / -Z8-

- Unclip clips -2-.
- Separate connector -3-.
- Expose wiring harness of seat -1- and guide out.

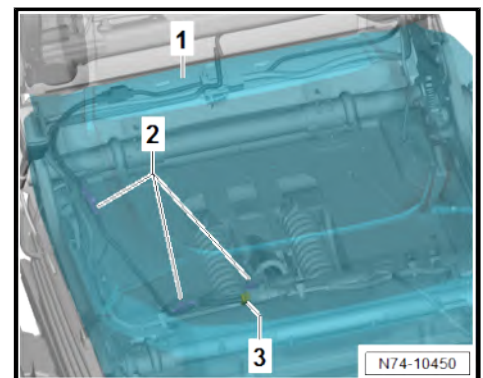



Continued for all vehicles

- Remove seat trim on sill side ⇒ [page 368](#) .
- Remove seat trim on tunnel side ⇒ [page 368](#) .
- Unclip clips -4-.
- Use front end hook - 3370- to detach fastening strips -2- all-round from seat pan -3-.
- Remove cover together with padding -1-.

Installing

Install in reverse order of removal, observing the following:

- Upon installing, make sure that the cover is free of creases.

Vehicles with side airbag



Note

Battery must be connected with ignition switched on. If pyrotechnic components (e.g. airbag, belt tensioners) are repaired incorrectly, they could be accidentally triggered. Ensure that nobody is in vehicle when connecting battery.

- Switch on ignition.
- Connect battery earth cable with ignition switched on ⇒ Electrical system; Rep. gr. 27 ; Battery; Connecting and disconnecting battery .



Note


If the ignition is not switched on after reconnecting the battery, the ignition may only be switched on (key/button) from the driver's seat with the seat set in the rearmost position.

- Use ⇒ Vehicle diagnostic tester to read event memory, clear event memory as necessary, and then read it again.

1.5.2 Removing and installing cover and padding for seat pan, seat depth adjustment unit

Special tools and workshop equipment required

- ♦ Front end hook - 3370-

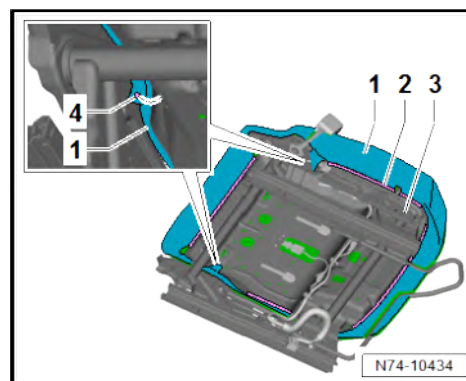




Removing



Note

The cover of the seat depth adjustment unit is permanently attached to the seat pan cover. If it has to be renewed, the entire cover must be renewed ➔ [page 406](#).

- Switch off ignition and all electrical consumers.
- Withdraw ignition key.
- Remove trim for seat depth adjustment unit ➔ [page 377](#).
- If fitted, disconnect electrical connectors under seat.
- If fitted, lay wiring harness from seat depth adjustment unit -2- aside.
- Use front end hook - 3370- to detach fastening strip -4-.
- Detach cover -1- from locking lugs -3-.
- Release locking lugs -arrows- by pulling padding -1- upwards off seat depth adjustment unit -2-.
- Place padding together with cover -1- onto front seat.

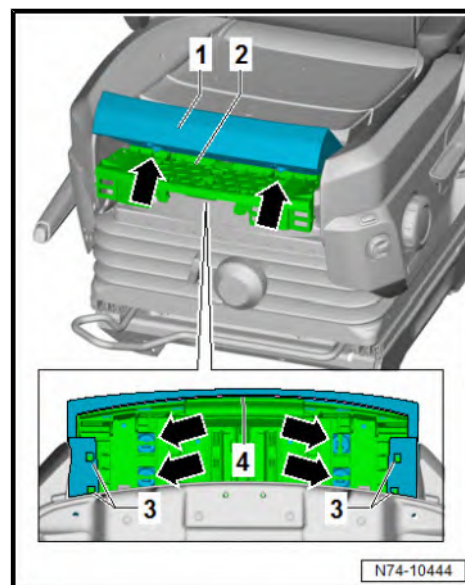


- Use front end hook - 3370- to detach fastening strip -3-.
- Detach cover -1- from locking lugs -2-.

Installing

Install in reverse order of removal, observing the following:

- Upon installing, make sure that the cover is free of creases.

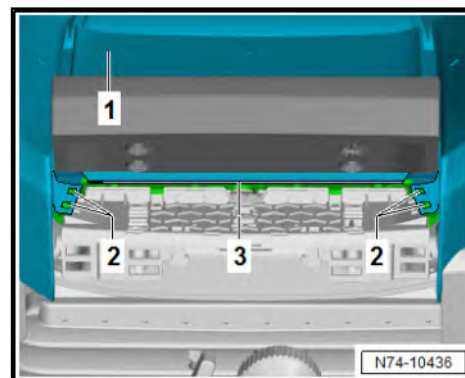

1.5.3 Removing and installing seat pan cover and padding, bench seat

Special tools and workshop equipment required



◆ Torque screwdriver - V.A.G 1624-



◆ Front end hook - VAS 3370-



Removing

- Remove bench seat cushion ⇒ [page 343](#) .
- Unscrew bolt -1- securing retaining loop to cover.
- Unclip clip -4-.
- Use front end hook - 3370- to detach fastening strips -3- all-round from seat pan -2-.
- Remove cover together with padding -1-.


Installing

Install in reverse order of removal, observing the following:

- Upon installing, make sure that the cover is free of creases.

Specified torques

- ◆ ⇒ [“2.4 Assembly overview - seat pan”, page 338](#)

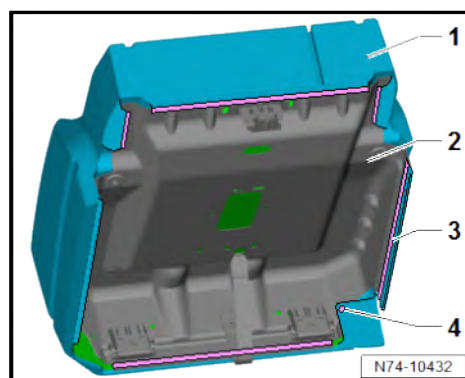

Component	Specified torque
Bolt for retaining loop	1.5 Nm



1.6 Removing and installing backrest cover and backrest padding

⇒ [“1.6.1 Removing and installing backrest cover and padding, individual seat”, page 411](#)

⇒ [“1.6.2 Removing and installing outer backrest cover and padding, folding bench seat”, page 413](#)

⇒ [“1.6.3 Removing and installing centre backrest cover and padding, folding bench seat”, page 413](#)


⇒ [“1.6.4 Removing and installing centre backrest cover and padding, intermediate padding, folding bench seat”, page 414](#)

⇒ [“1.6.5 Removing and installing centre backrest cover and padding, fixed bench seat”, page 414](#)

1.6.1 Removing and installing backrest cover and padding, individual seat

Special tools and workshop equipment required

- ◆ Front end hook - 3370-

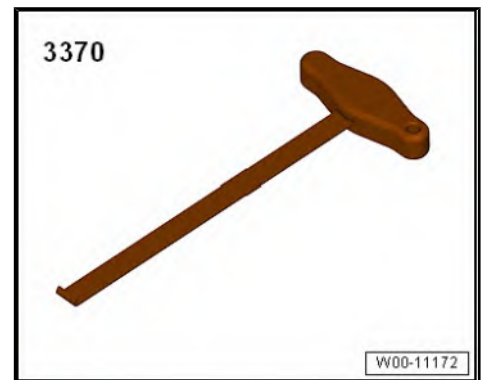

Removing

Vehicles with side airbag

- Connect airbag adapter ⇒ [page 350](#) .

Vehicles with partition panel or with PR number K4F (single cab)

- Remove front seat ⇒ [page 343](#) .

Vehicles without partition panel or without PR number K4F (single cab)

- Remove rear seat trim ⇒ [page 368](#) .



Vehicles with backrest heating element -Z7- / -Z9-

- Push rear seat pan padding to side.
- Unclip clips -2-.
- Separate connector -3-.
- Expose wiring harness of backrest -1- and guide out.

Continued for all vehicles

- Remove seat trim on sill side ⇒ [page 368](#) .
- Remove seat trim on tunnel side ⇒ [page 368](#) .
- Remove head restraint ⇒ [page 361](#) .
- If fitted, remove lumbar support handle ⇒ [page 354](#) .
- If fitted, remove seat arm rest ⇒ [page 360](#) .
- Backrest must be positioned in foremost position.
- Use front end hook - 3370- to detach fastening strips -3-.
- Roll backrest cover upwards at front and rear.
- Guide out cover with padding -1- on seat trim on sill side and tunnel side.
- Guide cover together with padding -1- over head restraint locking mechanism.
- Remove cover together with padding -1- upwards from backrest -2-.

Installing

Install in reverse order of removal, observing the following:

- Upon installing, make sure that the cover is free of creases.

Vehicles with side airbag



Note

Battery must be connected with ignition switched on. If pyrotechnic components (e.g. airbag, belt tensioners) are repaired incorrectly, they could be accidentally triggered. Ensure that nobody is in vehicle when connecting battery.



- Switch on ignition.
- Connect battery earth cable with ignition switched on ⇒ Electrical system; Rep. gr. 27 ; Battery; Connecting and disconnecting battery .



Note

If the ignition is not switched on after reconnecting the battery, the ignition may only be switched on (key/button) from the driver's seat with the seat set in the rearmost position.

- Use ⇒ Vehicle diagnostic tester to read event memory, clear event memory as necessary, and then read it again.

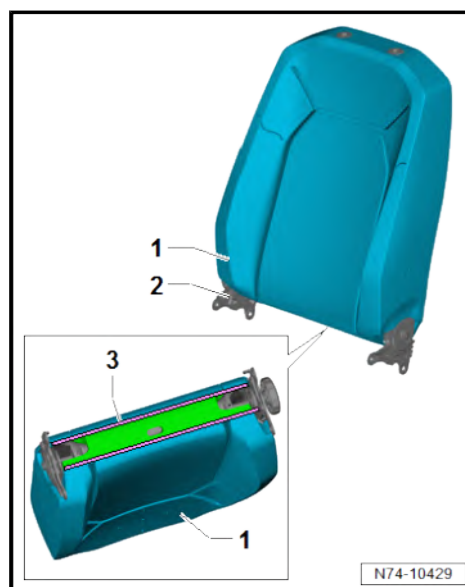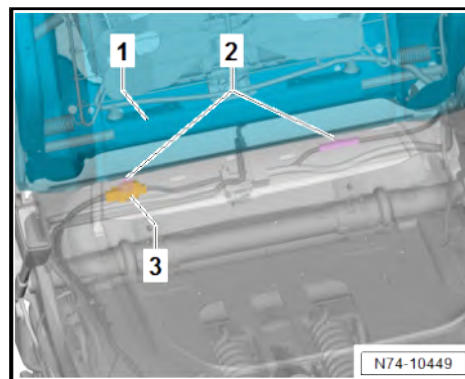



1.6.2 Removing and installing outer backrest cover and padding, folding bench seat


Special tools and workshop equipment required

- ◆ Front end hook - 3370-



Removing

- Remove outer front backrest ➔ [page 355](#) .
- Remove head restraint ➔ [page 361](#) .
- Remove front belt guide ➔ [page 128](#) .
- Use front end hook - 3370- to detach fastening strips -2-.
- Roll backrest cover upwards.
- Guide cover together with padding -1- over backrest -3-.
- Guide cover together with padding -1- at top over head restraint locking mechanism.
- Guide belt buckle with belt webbing out of padding.
- Remove cover together with padding -1- upwards and towards front from backrest -3-.

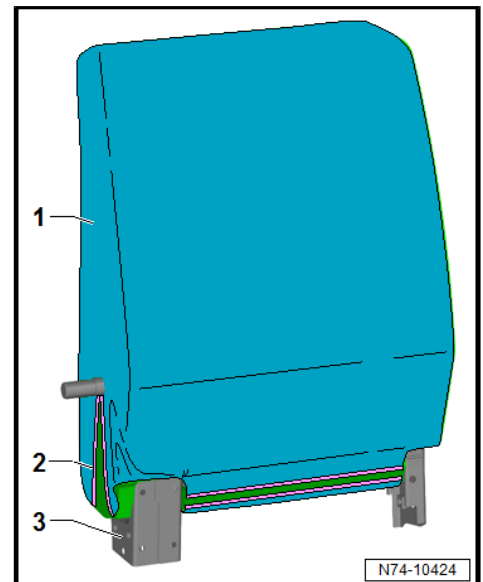

Installing

Install in reverse order of removal, observing the following:

- Upon installing, make sure that the cover is free of creases.

1.6.3 Removing and installing centre backrest cover and padding, folding bench seat

Special tools and workshop equipment required

- ◆ Front end hook - 3370-






Removing

- Remove centre front backrest ➔ [page 355](#) .
- Remove centre seat trim ➔ [page 368](#) .
- Remove head restraint ➔ [page 361](#) .
- Use front end hook - 3370- to detach fastening strips -2-.
- Roll backrest cover upwards.
- Guide cover together with padding -1- at bottom over backrest -3-.
- Guide cover together with padding -1- at top over head restraint locking mechanism.
- Remove cover together with padding -1- upwards and towards front from backrest -3-.

Installing

Install in reverse order of removal, observing the following:

- Upon installing, make sure that the cover is free of creases.

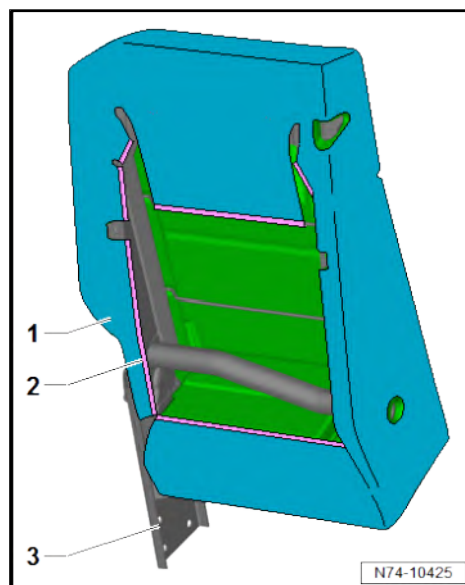

1.6.4 Removing and installing centre backrest cover and padding, intermediate padding, folding bench seat


Removing

- Removing and installing front centre backrest ➔ [page 355](#) .
- Fold up and fix seat cushion.
- Open profiles -2- on cover for intermediate padding -1-.
- Remove intermediate padding together with cover -1- in -direction of arrow- from seat frame, and place it on a clean surface.

Installing

Install in reverse order of removal, observing the following:

- Upon installing, make sure that the cover is free of creases.

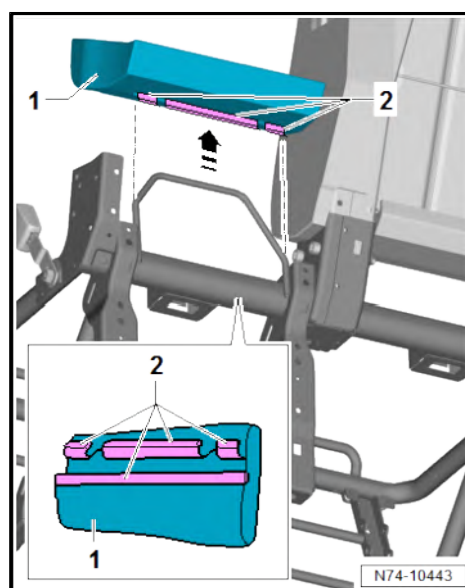


1.6.5 Removing and installing centre backrest cover and padding, fixed bench seat

Special tools and workshop equipment required




◆ Front end hook - 3370-

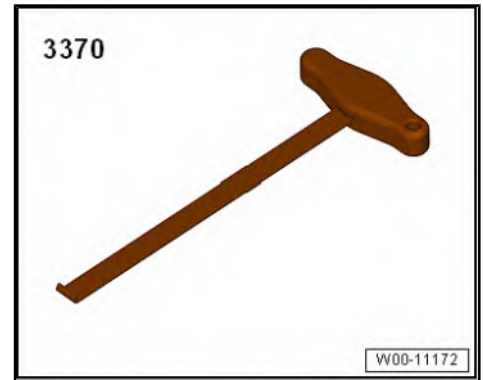

Removing

- Remove front backrest ➔ [page 355](#) .
- Remove front belt guide ➔ [page 128](#) .
- Remove head restraints ➔ [page 361](#) .
- Use front end hook - 3370- to detach fastening strips -2-.
- Roll backrest cover upwards.
- Guide cover together with padding -1- over backrest -3-.
- Guide cover together with padding -1- at top over head restraint locking mechanism.
- Guide belt buckle with belt webbing out of padding.
- Remove cover together with padding -1- upwards and towards front from backrest -3-.

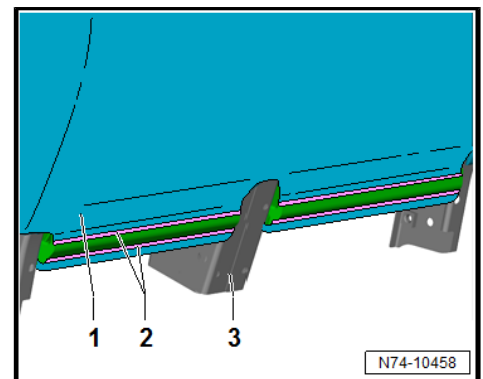

Installing

Install in reverse order of removal, observing the following:

- Upon installing, make sure that the cover is free of creases.



1.7 Separating cover and padding on seat pan

⇒ [“1.7.1 Separating cover and padding on seat pan, individual seat”, page 416](#)

⇒ [“1.7.2 Separating cover and padding on seat pan, bench seat”, page 416](#)

1.7.1 Separating cover and padding on seat pan, individual seat


Removing

- Remove seat pan cover and cushion ⇒ [page 406](#) .
- Roll up cover -1- from padding -4-.
- Pull hook tape -2- off loop tape -3-.
- Use front end hook - 3370- to detach fastening strip -6- all-round from mounting -5-.
- Remove seat cover -1- from seat padding -4-.

Installing

Install in reverse order of removal, observing the following:

- Push fastening strip -6- onto mounting -5-.
- Push hook tape -2- onto loop tape -3-.
- Upon installing, make sure that the cover is free of creases.

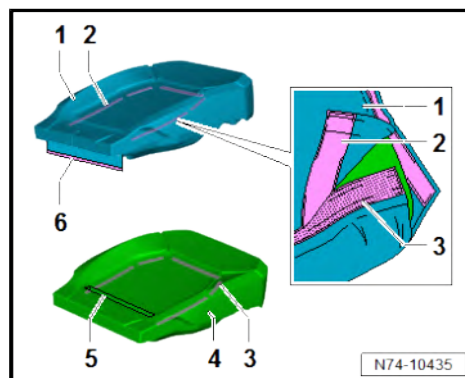

1.7.2 Separating cover and padding on seat pan, bench seat


Removing

- Remove seat pan cover and cushion ⇒ [page 406](#) .
- Roll up cover -1- from padding -4-.
- Pull hook tape -2- off loop tape -3-.
- Use front end hook - 3370- to detach fastening strip -6- all-round from mounting -5-.
- Remove seat cover -1- from seat padding -4-.

Installing

Install in reverse order of removal, observing the following:

- Push fastening strip -6- onto mounting -5-.
- Push hook tape -2- onto loop tape -3-.
- Upon installing, make sure that the cover is free of creases.

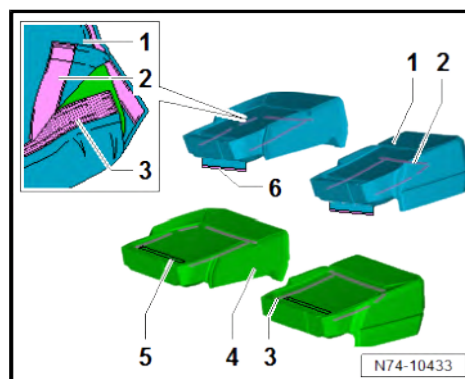



1.8 Separating cover and padding on backrest

⇒ ["1.8.1 Separating cover and padding on backrest, individual seat", page 417](#)

⇒ ["1.8.2 Separating outer cover and padding on backrest, folding bench seat", page 418](#)


⇒ ["1.8.3 Separating centre cover and padding on backrest, folding bench seat", page 420](#)

⇒ ["1.9 Separating centre cover and padding on backrest, fixed bench seat", page 420](#)

1.8.1 Separating cover and padding on backrest, individual seat

Special tools and workshop equipment required

- ◆ Upholstery clip pliers - V.A.G 1634B-

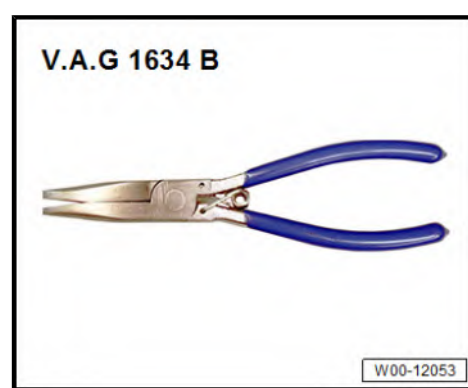


Removing

- Remove backrest cover and cushion ⇒ [page 411](#) .
- Roll cover upwards from padding.

Vehicles without side airbag

- Pull hook tape -2- off loop tape -3-.
- Remove backrest cover -1- from backrest padding -4-.

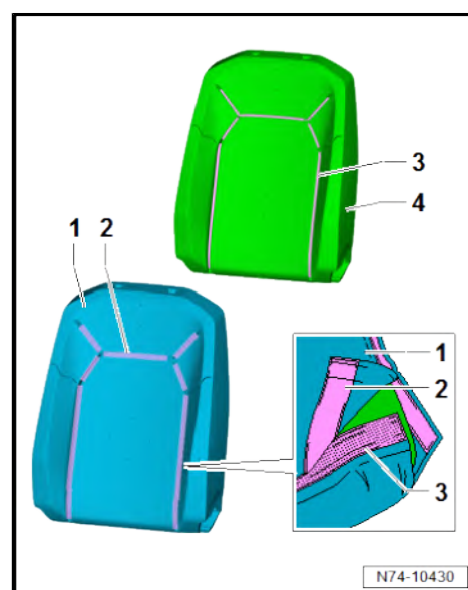



Vehicles with side airbag

- Use pliers to cut through upholstery clips -2- at mountings -3-.
- Remove backrest cover -1- from backrest padding -4-.

Installing

Install in reverse order of removal, observing the following:


- Upon installing, make sure that the cover is free of creases.

Vehicles without side airbag

- Push hook tape onto loop tape.

Vehicles with side airbag

- Use upholstery clip pliers - V.A.G 1634B- to secure upholstery clips.

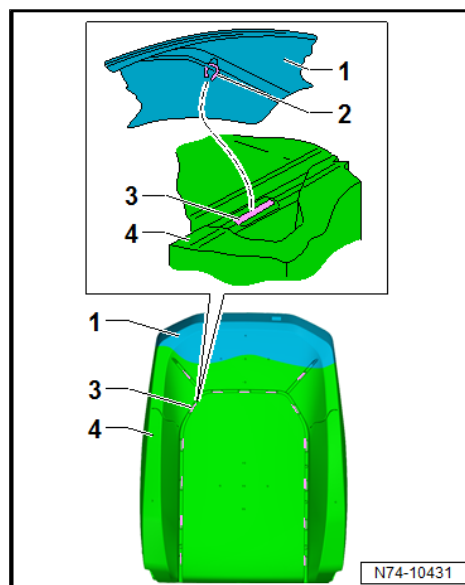

1.8.2 Separating outer cover and padding on backrest, folding bench seat

Special tools and workshop equipment required

- ♦ Upholstery clip pliers - V.A.G 1634B-




Removing

- Remove cover and cushion from outer backrest ⇒ [page 411](#) .
- Roll cover upwards from padding.



Vehicles without side airbag

- Pull hook tape -2- off loop tape -3-.
- Remove backrest cover -1- from backrest padding -4-.

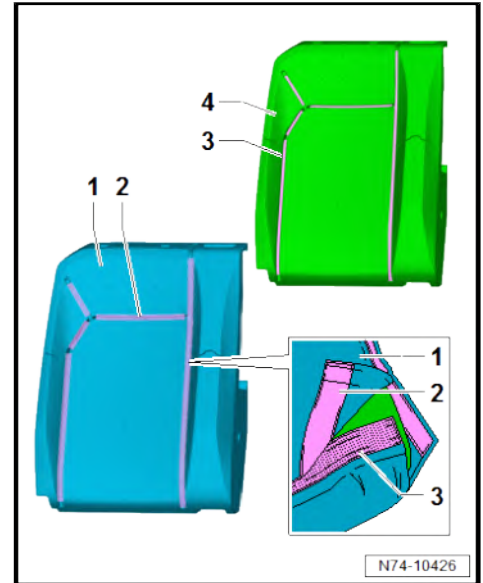

Vehicles with side airbag

- Use pliers to cut through upholstery clips -2- at mountings -3-.
- Remove backrest cover -1- from backrest padding -4-.

Installing

Install in reverse order of removal, observing the following:


- Upon installing, make sure that the cover is free of creases.

Vehicles without side airbag

- Push hook tape onto loop tape.

Vehicles with side airbag

- Use upholstery clip pliers - V.A.G 1634B- to secure upholstery clips.

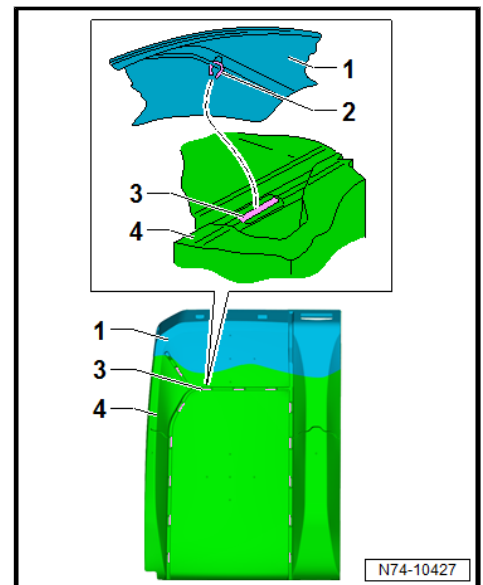



1.8.3 Separating centre cover and padding on backrest, folding bench seat


Removing

- Remove cover and padding from centre backrest
⇒ [page 411](#) .
- Roll cover -1- upwards from padding -4-.
- Pull hook tape -2- off loop tape -3-.
- Remove backrest cover -1- from backrest padding -4-.

Installing

Install in reverse order of removal, observing the following:

- Push hook tape -2- onto loop tape -3-.
- Upon installing, make sure that the cover is free of creases.

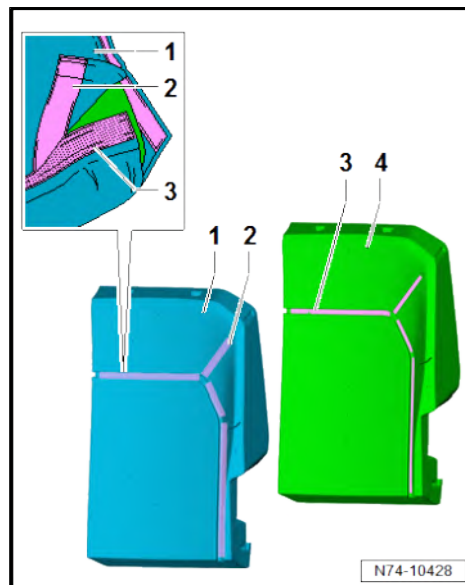

1.9 Separating centre cover and padding on backrest, fixed bench seat

Special tools and workshop equipment required

- ♦ Upholstery clip pliers - V.A.G 1634B-




Removing

- Remove backrest cover and cushion ⇒ [page 411](#) .
- Roll cover upwards from padding.



Vehicles without side airbag

- Pull hook tape -2- off loop tape -3-.
- Remove backrest cover -1- from backrest padding -4-.

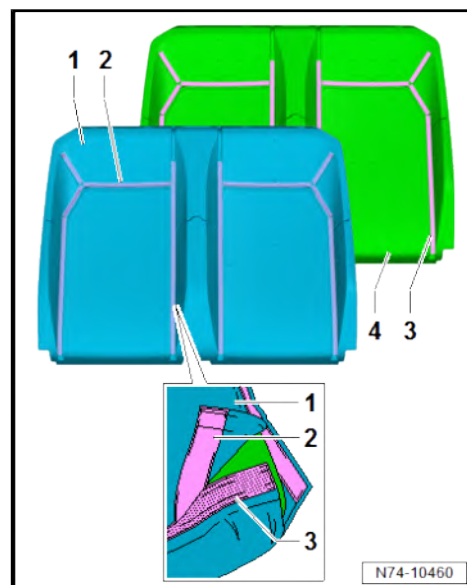

Vehicles with side airbag

- Use pliers to cut through upholstery clips -2- at mountings -3-.
- Remove backrest cover -1- from backrest padding -4-.

Installing

Install in reverse order of removal, observing the following:


- Upon installing, make sure that the cover is free of creases.

Vehicles without side airbag

- Push hook tape onto loop tape.

Vehicles with side airbag

- Use upholstery clip pliers - V.A.G 1634B- to secure upholstery clips.

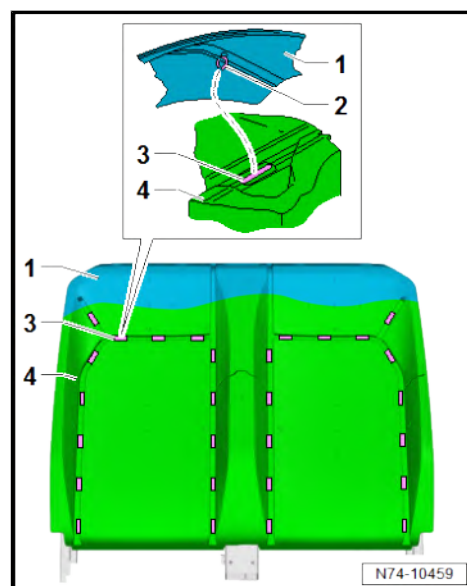

1.10 Removing and installing head restraint cover and padding

Cover and padding are not available as a replacement part.

In the event of a complaint, the whole head restraint must be renewed ➔ [page 361](#) .



1.11 Removing and installing seat heating element -Z6- / -Z8-

Removing



Note

- ♦ *The description is for vehicles with an individual seat. The description for vehicles with a bench seat is analogous.*
- ♦ *The description is for vehicles without seat depth adjuster. The description for vehicles with seat depth adjuster follows the same pattern.*
- ♦ *The old heating element remains on the padding, and the new one is affixed right over it.*

- Separate cover and padding on seat pan ➔ [page 416](#) .
- Cut through wiring harness -5- on old seat heating element -Z6- / -Z8- -1-.

Installing


Install in reverse order of removal, observing the following:



Note

The new heating element is bonded flush and without creases onto the old heating element.

- Guide wiring harness -5- through cable guide.
- Align new heating element -1- on padding -2-. Do not pull off protective films -3- when doing this.
- Pull protective films -3- off adhesive tape -4- one after the other. Do not damage heating element -1- when doing this.

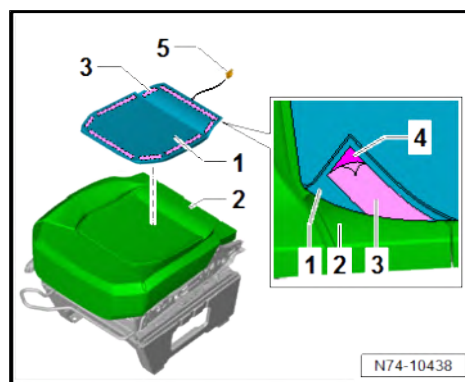

1.12 Removing and installing backrest heating element -Z7- / -Z9-

Removing



Note

- ♦ *The description is for vehicles with an individual seat. The description for vehicles with a bench seat is analogous.*
 - ♦ *The old heating element remains on the padding, and the new one is affixed right over it.*
- Separating cover and padding of backrest ➔ [page 417](#) .



- Cut through wiring harness -5- on old backrest heating element -Z7- / -Z9- -1-.

Installing


Install in reverse order of removal, observing the following:



Note

The new heating element is bonded flush and without creases onto the old heating element.

- Guide wiring harness -5- through cable guide.
- Align new heating element -1- on padding -2-. Do not pull off protective films -3- when doing this.
- Pull protective films -3- off adhesive tape -4- one after the other. Do not damage heating element -1- when doing this.

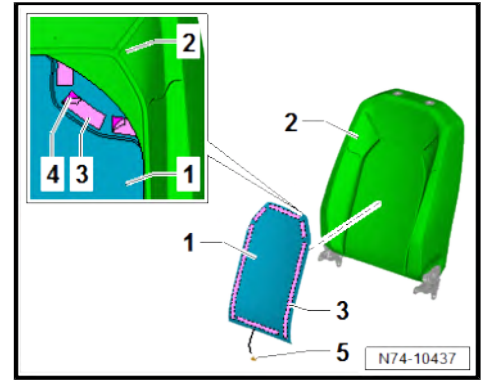

2 Rear seat covers and padding

⇒ [“2.1 Assembly overview - cover and padding”, page 424](#)

⇒ [“2.2 Removing and installing covers and padding”, page 426](#)

⇒ [“2.3 Separating cover and padding”, page 431](#)

⇒ [“2.4 Removing and installing cover and padding of head restraint”, page 431](#)

2.1 Assembly overview - cover and padding

⇒ [“2.1.1 Assembly overview - cover and padding, backrest, rear bench seat, double cab”, page 424](#)

⇒ [“2.1.2 Assembly overview - cover and padding, seat pan, rear bench seat, double cab”, page 425](#)

⇒ [“2.1.3 Assembly overview - cover and padding, single seat passenger compartment”, page 426](#)

2.1.1 Assembly overview - cover and padding, backrest, rear bench seat, double cab

1 - Backrest cover

- ☐ Removing and installing backrest cover with backrest padding
⇒ [page 426](#)
- ☐ Separating backrest cover from backrest padding
⇒ [page 431](#)
- ☐ Make sure that there are no creases after installing

2 - Channel


- ☐ Sewn to cover
- ☐ For attaching cover to backrest frame

3 - Backrest padding

- ☐ Removing and installing backrest cover with backrest padding
⇒ [page 426](#)
- ☐ Separating backrest cover from backrest padding
⇒ [page 431](#)
- ☐ Make sure that there are no creases after installing

4 - Backrest frame

- ☐ Assembly overview
⇒ [page 379](#)
- ☐ Removing and installing seat cushion for bench seat
⇒ [page 387](#)

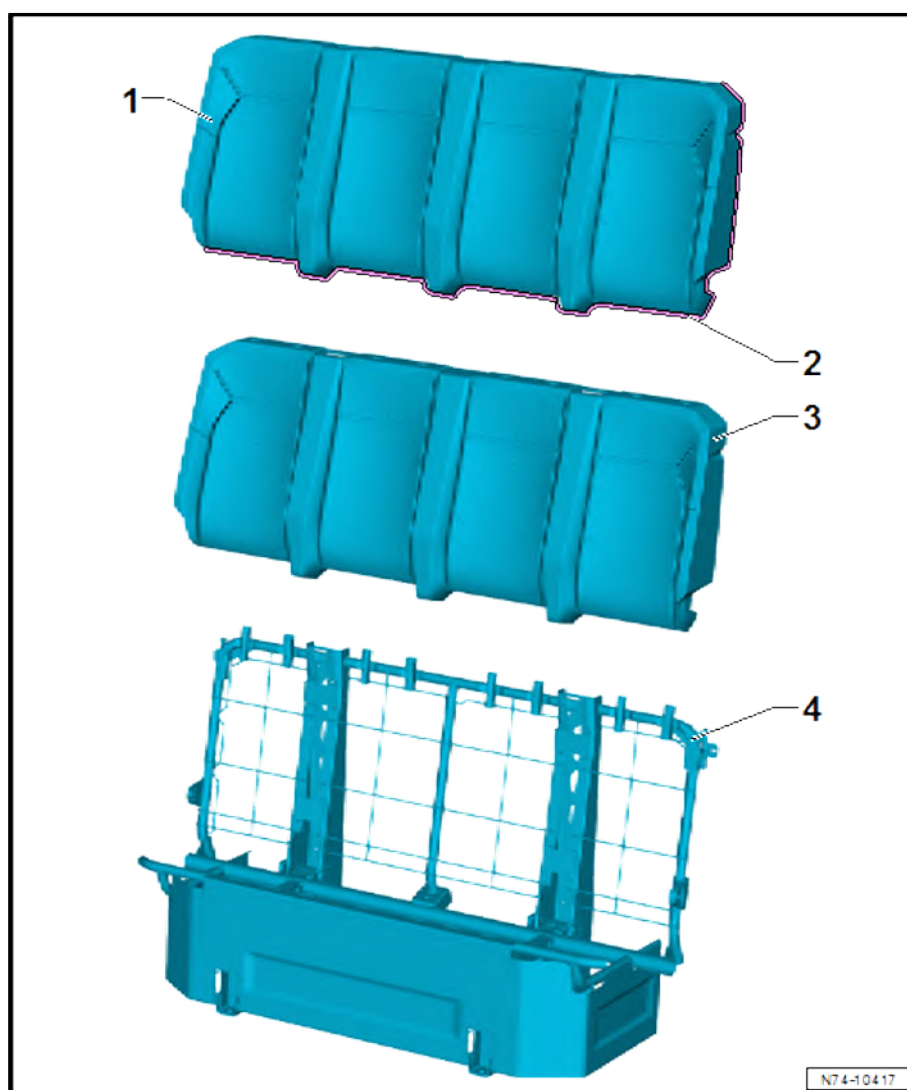



2.1.2 Assembly overview - cover and padding, seat pan, rear bench seat, double cab

1 - Seat cover

- ☐ Removing and installing seat cover with seat padding ⇒ [page 426](#)
- ☐ Separating seat cover from seat padding ⇒ [page 431](#)
- ☐ Make sure that there are no creases after installing

2 - Channel


- ☐ Sewn to cover
- ☐ For attaching cover to seat frame

3 - Seat padding

- ☐ Removing and installing seat cover with seat padding ⇒ [page 426](#)
- ☐ Separating seat cover from seat padding ⇒ [page 431](#)
- ☐ Make sure that there are no creases after installing


4 - Seat frame

- ☐ Assembly overview ⇒ [page 385](#)
- ☐ Removing and installing seat cushion for bench seat ⇒ [page 387](#)

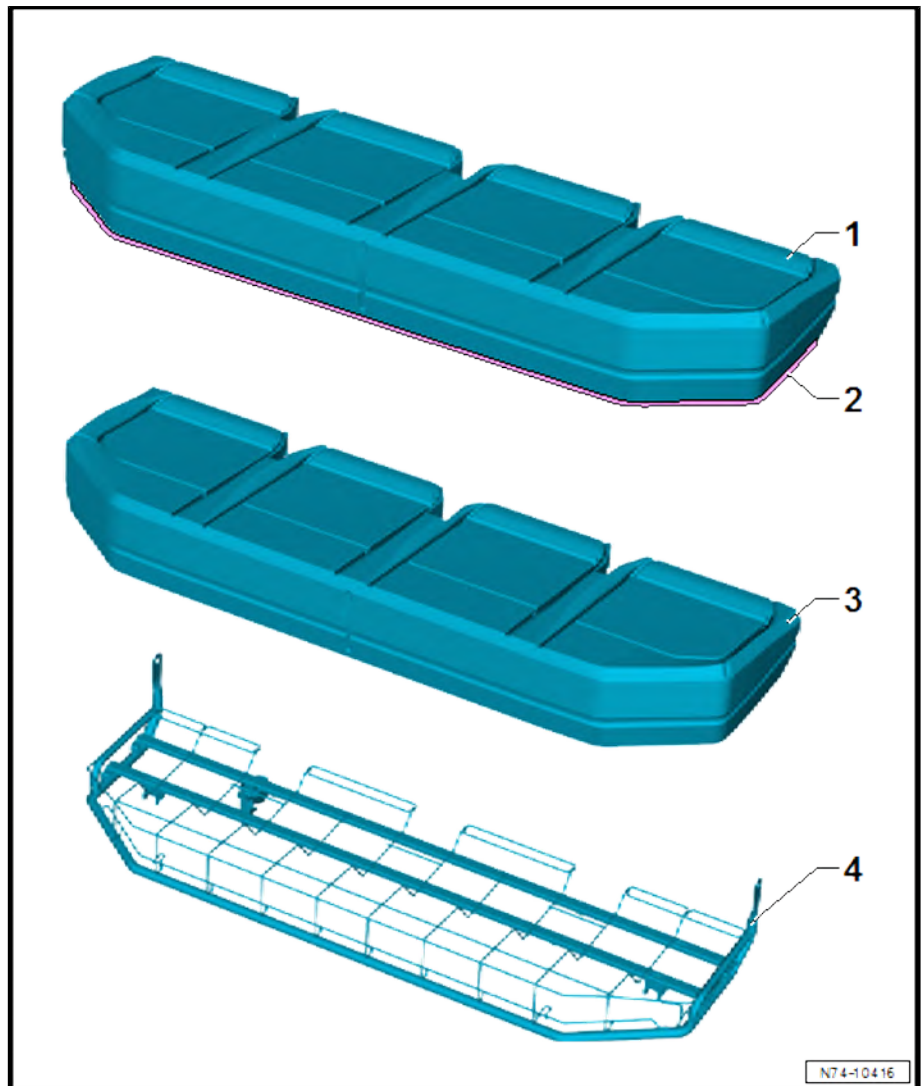

2.1.3 Assembly overview - cover and padding, single seat passenger compartment

- 1 - Backrest cover
 - ❑ Removing and installing
⇒ [page 426](#)
- 2 - Backrest padding
 - ❑ Removing and installing
⇒ [page 426](#)
- 3 - Backrest frame
 - ❑ Removing and installing
⇒ [page 394](#)
- 4 - Seat frame
 - ❑ Removing and installing
⇒ [page 387](#)
- 5 - Seat padding
 - ❑ Removing and installing
⇒ [page 426](#)
- 6 - Seat cover
 - ❑ Removing and installing
⇒ [page 426](#)

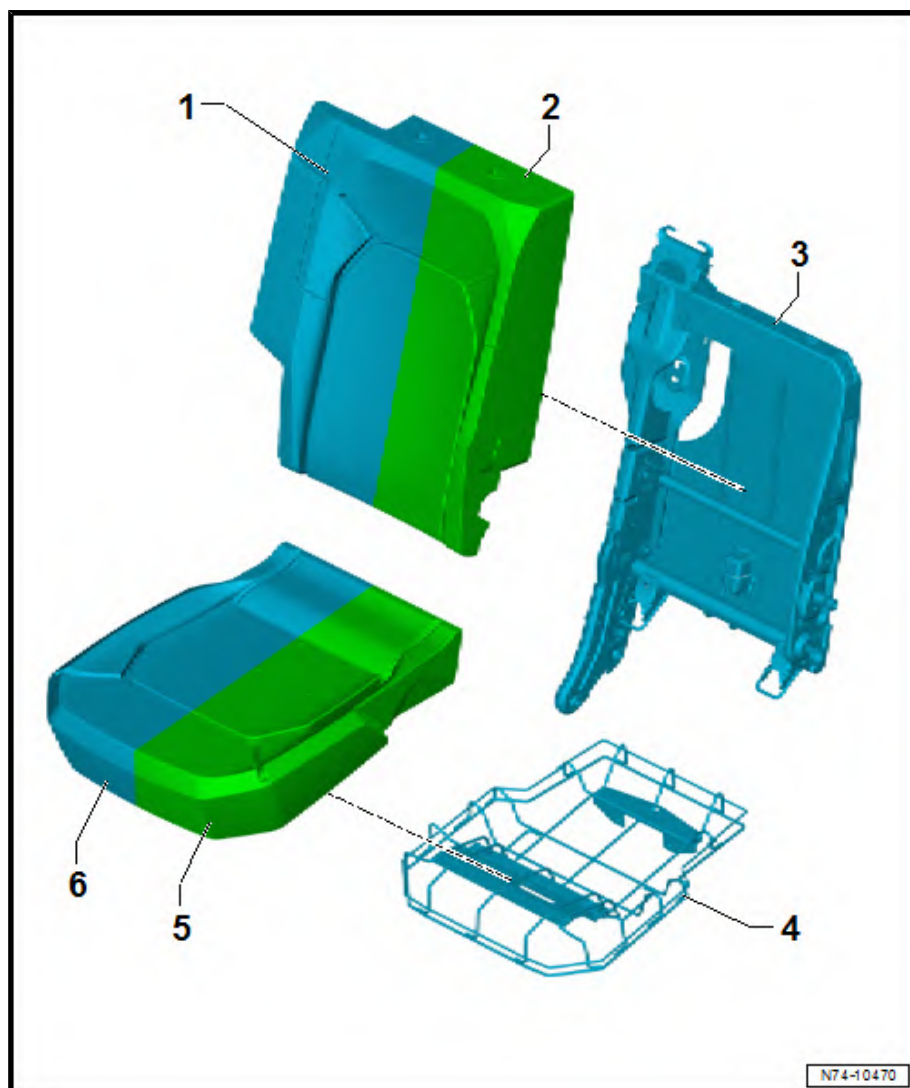

2.2 Removing and installing covers and padding

⇒ [“2.2.1 Removing and installing cover and padding of seat pan, rear bench seat, double cab”](#), page 426

⇒ [“2.2.2 Removing and installing cover and padding of seat pan, single seat passenger compartment”](#), page 427

⇒ [“2.2.3 Removing and installing cover and padding of backrest, rear bench seat, double cab”](#), page 428


⇒ [“2.2.4 Removing and installing cover and padding of backrest, single seat passenger compartment”](#), page 429

2.2.1 Removing and installing cover and padding of seat pan, rear bench seat, double cab

Special tools and workshop equipment required



◆ Front end hook - VAS 3370-

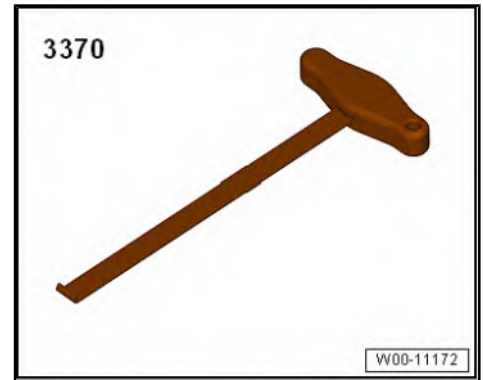


Removing

- Remove bench seat cushion ➔ [page 387](#) .
- Use front end hook - 3370- to detach fastening strips -3- all-round from seat frame -4-.
- Remove cover -1- together with padding -2-.

Installing

Install in reverse order of removal, observing the following:


- After installing, make sure that seat cover is free of creases.

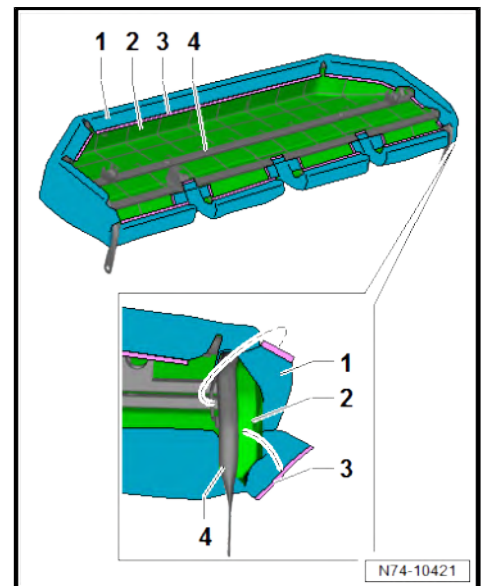

2.2.2 Removing and installing cover and padding of seat pan, single seat passenger compartment


Removing

- Remove seat cushion ➔ [page 387](#) .
- Unhook clips -1-.

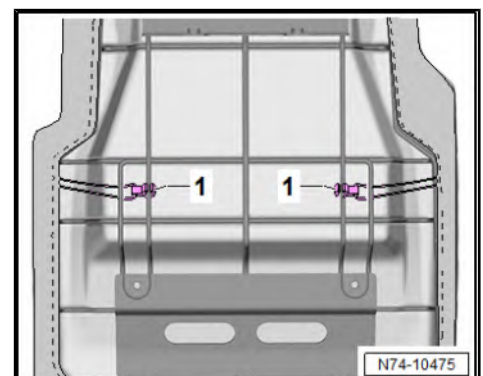




- Detach cover profile sections -1-.

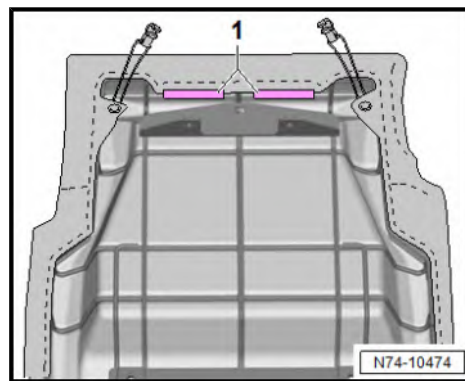


- Unhook clips -1-.

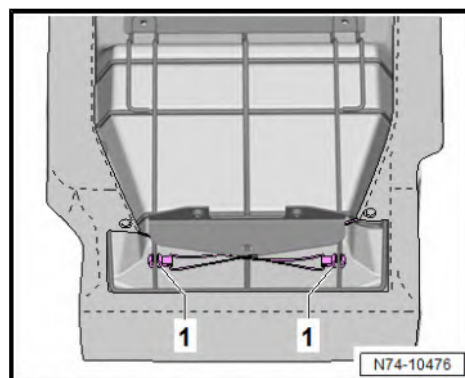

- Fold up seat cover -1- from padding -4-.
- Pull off Velcro top -2- from Velcro base -3-.
- Remove seat cover -1- from seat padding -4-.

Installing

Install in reverse order of removal, observing the following:

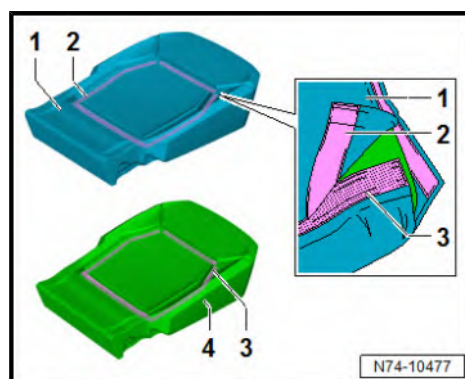

2.2.3 Removing and installing cover and padding of backrest, rear bench seat, double cab

Special tools and workshop equipment required


- ◆ Front end hook - VAS 3370-





Removing

- Remove rear bench seat ➔ [page 387](#) .
- Remove bench seat cushion ➔ [page 387](#) .
- Remove head restraints ➔ [page 392](#) .
- Remove rear belt guides ➔ [page 125](#) .
- Detach rear outer belt buckles from frame ➔ [page 135](#) .
- Use front end hook - 3370- to detach fastening strips -2- all-round from backrest frame -3-.
- Roll up backrest cover -1- from padding.
- Guide cover together with padding -1- over head restraint locking mechanism.
- Guide belt webbing out of padding.
- Remove cover together with padding -1-, and place them on a clean surface.

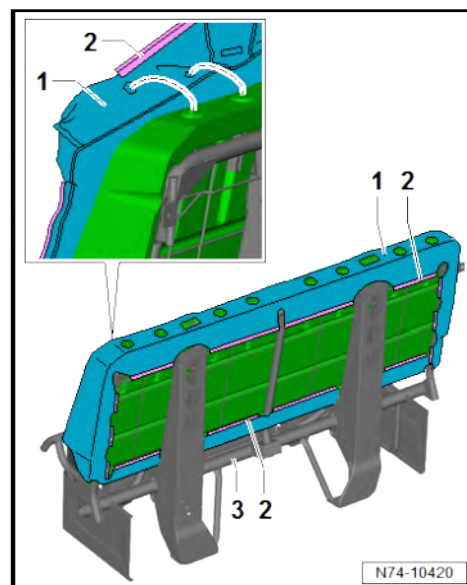

Installing


Install in reverse order of removal, observing the following:

- Upon installing, make sure that the cover is free of creases.

2.2.4 Removing and installing cover and padding of backrest, single seat passenger compartment


Removing

- Remove belt guide ➔ [page 395](#) .
- Remove seat armrest ➔ [page 398](#) .
- Remove rear seat backrest ➔ [page 394](#) .
- Remove top tether ➔ [page 395](#) .
- Open Velcro -2- and -3- on bottom of cover -1-.

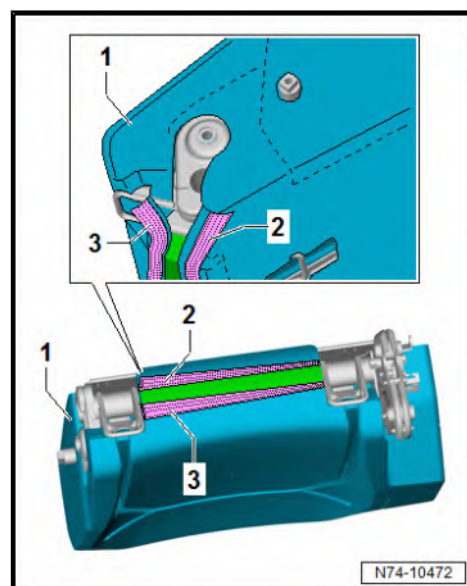




- Hold cover -1- at bottom and open zip fastener -2-.

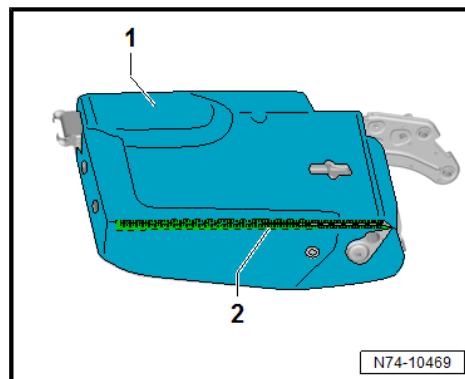

- Pull off Velcro top -2- from Velcro base -3-.
- Remove backrest cover -1- from backrest padding -4-.

Installing

Install in reverse order.

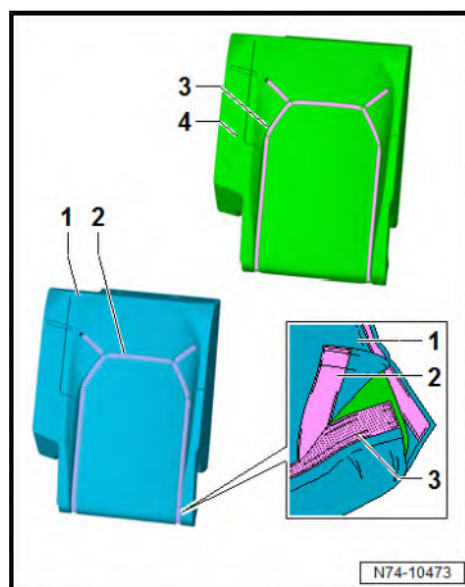



2.3 Separating cover and padding

⇒ [“2.3.1 Separating cover and padding of seat pan, rear bench seat, double cab”, page 431](#)

⇒ [“2.3.2 Separating cover and padding of backrest, rear bench seat, double cab”, page 431](#)

2.3.1 Separating cover and padding of seat pan, rear bench seat, double cab


Removing

- Remove seat pan cover and cushion ⇒ [page 426](#) .
- Roll up cover -1- from padding -4-.
- Pull hook tape -2- off loop tape -3-.
- Remove seat cover -1- from seat padding -4-.

Installing

Install in reverse order of removal, observing the following:

- Push hook tape -2- onto loop tape -3-.
- Upon installing, make sure that the cover is free of creases.

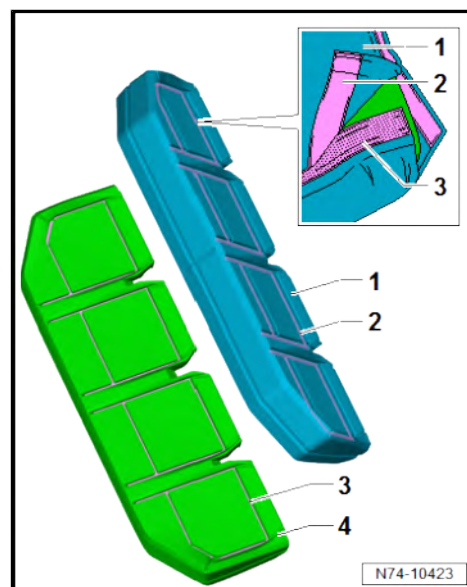

2.3.2 Separating cover and padding of backrest, rear bench seat, double cab


Removing

- Remove backrest cover and cushion ⇒ [page 426](#) .
- Roll cover -1- upwards from padding -4-.
- Pull hook tape -2- off loop tape -3-.
- Remove backrest cover -1- from backrest padding -4-.

Installing

Install in reverse order of removal, observing the following:

- Push hook tape -2- onto loop tape -3-.
- Upon installing, make sure that the cover is free of creases.

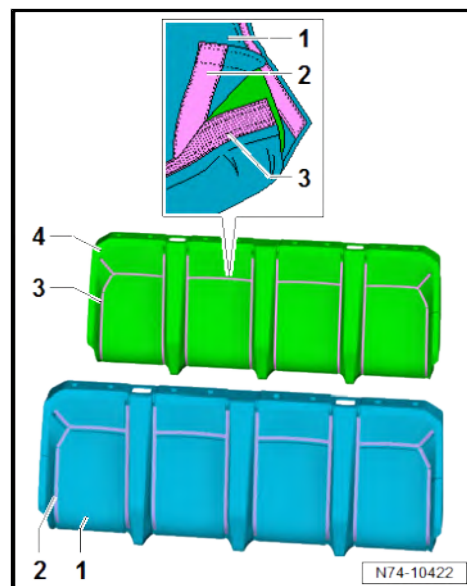

2.4 Removing and installing cover and padding of head restraint

Cover and padding are not available as a replacement part.

In the event of a complaint, the whole head restraint must be renewed ⇒ [page 392](#) .