


Fuse assignment

From September 2016

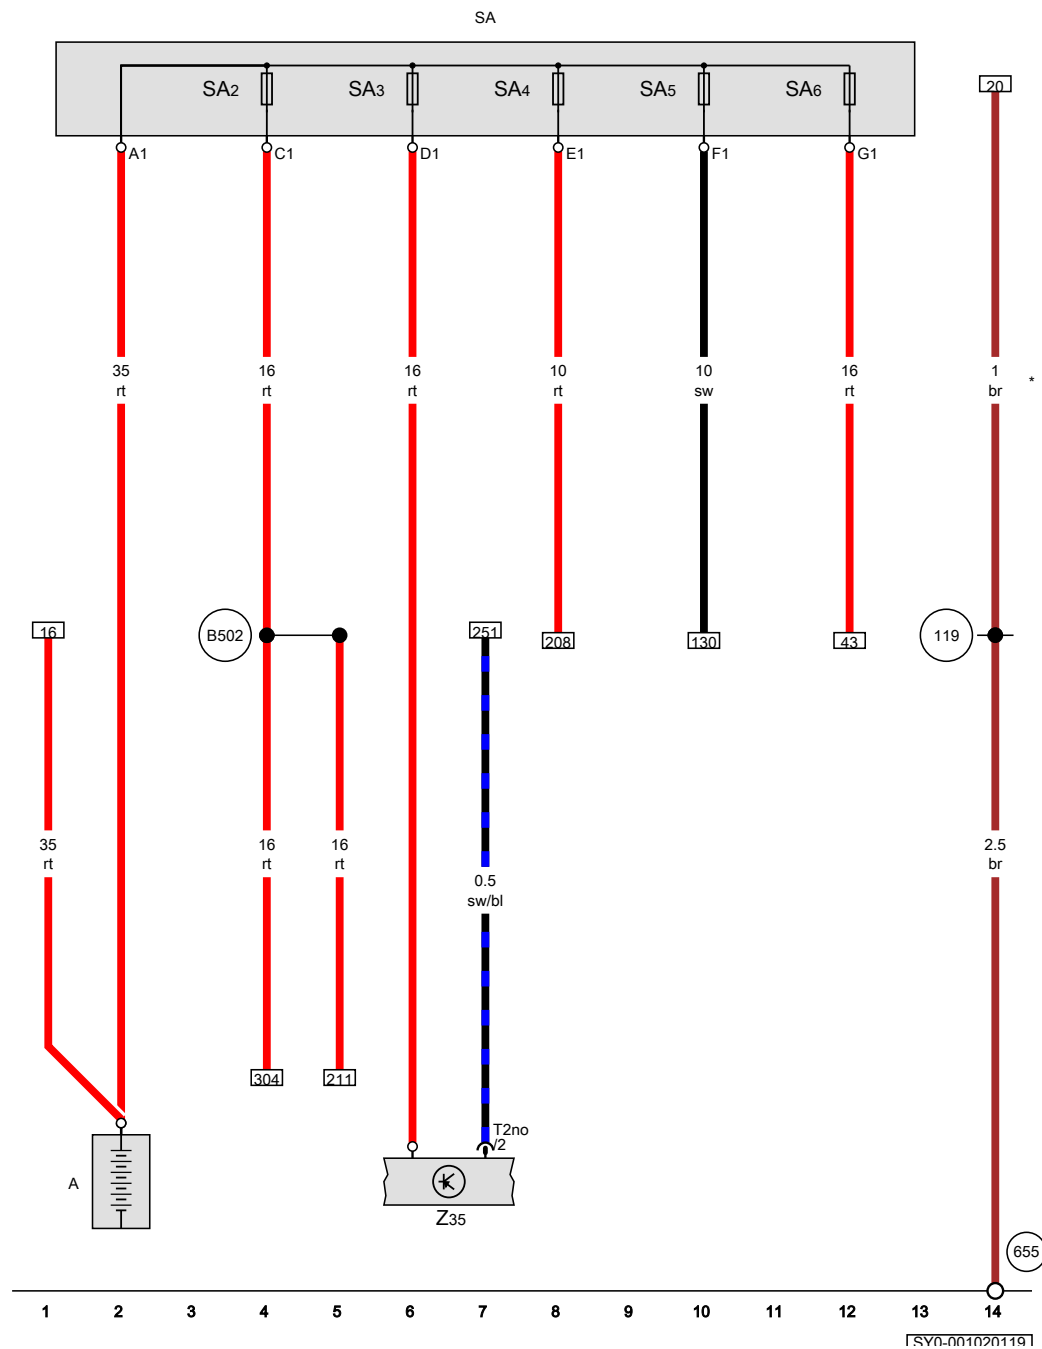


Battery, Fuse holder A

- | | |
|------|---|
| A | Battery |
| SA | Fuse holder A |
| SA2 | Fuse 2 on fuse holder A |
| SA3 | Fuse 3 on fuse holder A |
| SA4 | Fuse 4 on fuse holder A |
| SA5 | Fuse 5 on fuse holder A |
| SA6 | Fuse 6 on fuse holder A |
| T2no | 2-pin connector, black |
| Z35 | Auxiliary air heater element |
| 119 | Earth connection 1, in headlight wiring harness |
| 655 | Earth point, on left headlight |
| B502 | Positive connection (83a), in interior wiring harness |
| * | For models with second battery |

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink

Second battery charging circuit relay, Jump start connection

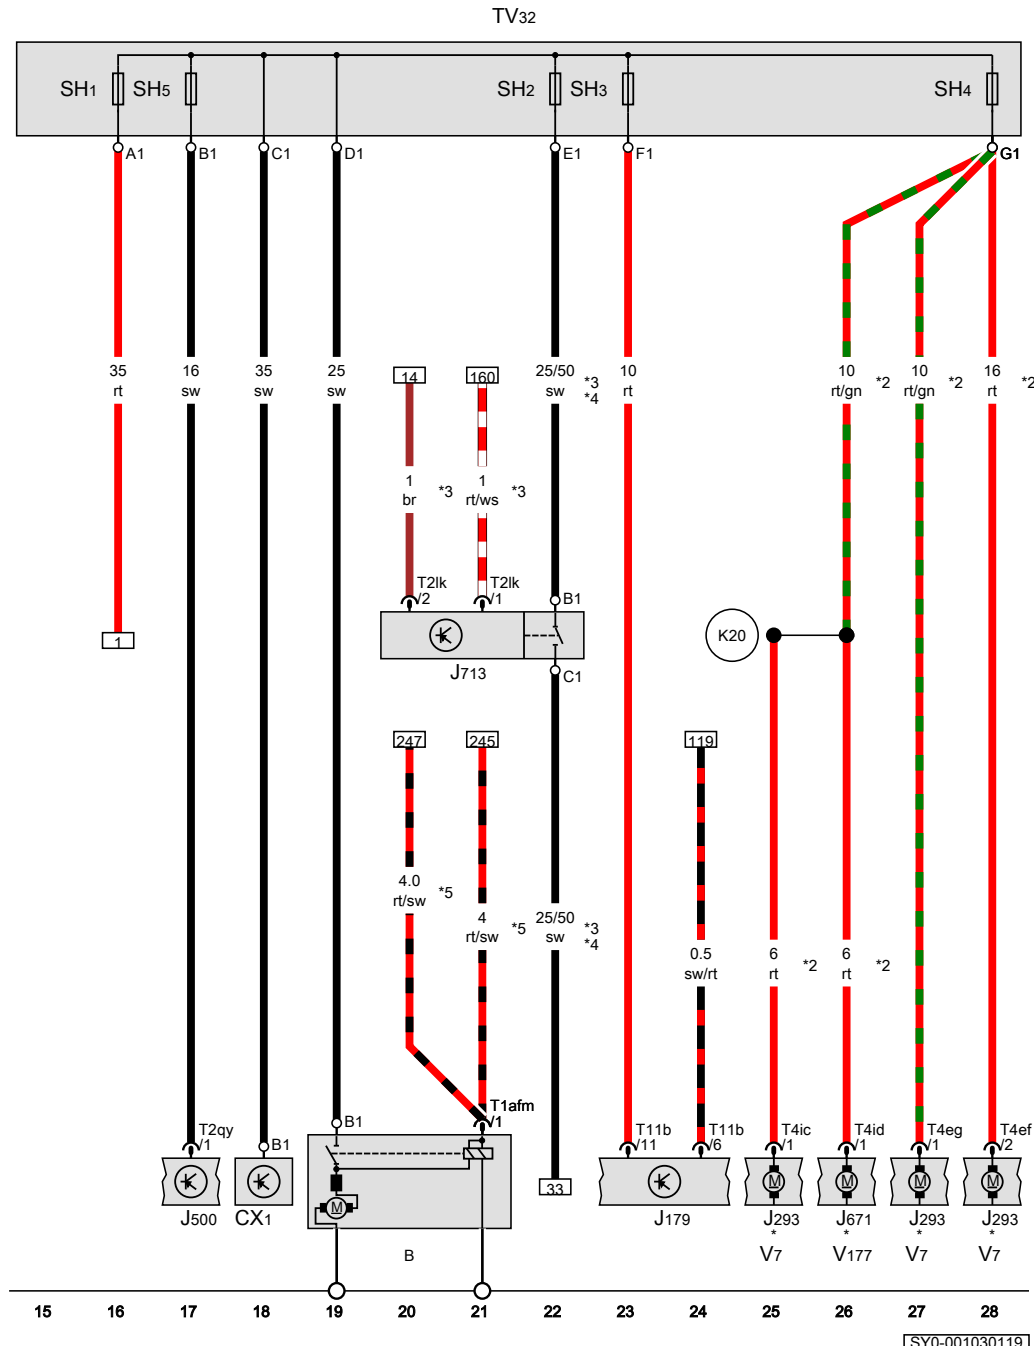


- | | |
|------------|---|
| B | Starter |
| CX1 | Alternator with voltage regulator |
| J179 | Automatic glow period control unit |
| J293 | Radiator fan control unit |
| J500 | Power steering control unit |
| J671 | Radiator fan control unit 2 |
| J713 | Second battery charging circuit relay |
| SH1 | Fuse 1 in fuse holder H |
| SH2 | Fuse 2 in fuse holder H |
| SH3 | Fuse 3 in fuse holder H |
| SH4 | Fuse 4 in fuse holder H |
| SH5 | Fuse 5 in fuse holder H |
| T1afm | 1-pin connector, black |
| T2lk | 2-pin connector, black |
| T2qy | 2-pin connector, black |
| T4ef | 4-pin connector, black |
| T4eg | 4-pin connector, black |
| T4ic | 4-pin connector, black |
| T4id | 4-pin connector, black |
| T11b | 11-pin connector |
| TV32 | Jump start connection |
| V7 | Radiator fan |
| V177 | Radiator fan 2 |
| K20 | Positive connection 1 (30), in radiator fan wiring harness |
| * | Pre-wired component |
| *2 | see applicable current flow diagram for radiator fan |
| *3 | For models with second battery |
| *4 | Cross section depends on equipment |
| *5 | According to equipment |


ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink

Second battery, Fuse holder F

- A1 Second battery
- CX2 Alternator 2 with voltage regulator
- J934 Battery monitor control unit 2
- SF Fuse holder F
- SF1 Fuse 1 in fuse holder F
- SF2 Fuse 2 in fuse holder F
- SF3 Fuse 3 in fuse holder F
- SF4 Fuse 4 in fuse holder F
- T1akx 1-pin connector
- T1alf 1-pin connector
- T2kt 2-pin connector, black
- TLBW1 Coupling point 1 for tail lift
- TDSK1 Coupling point 1 for 3-way tipper
- * For models with tail lift
- *2 For models with 3-way tip function
- *3 For models with second battery
- *4 Cross section depends on equipment
- *5 For models with second battery and alternator 2 with voltage regulator

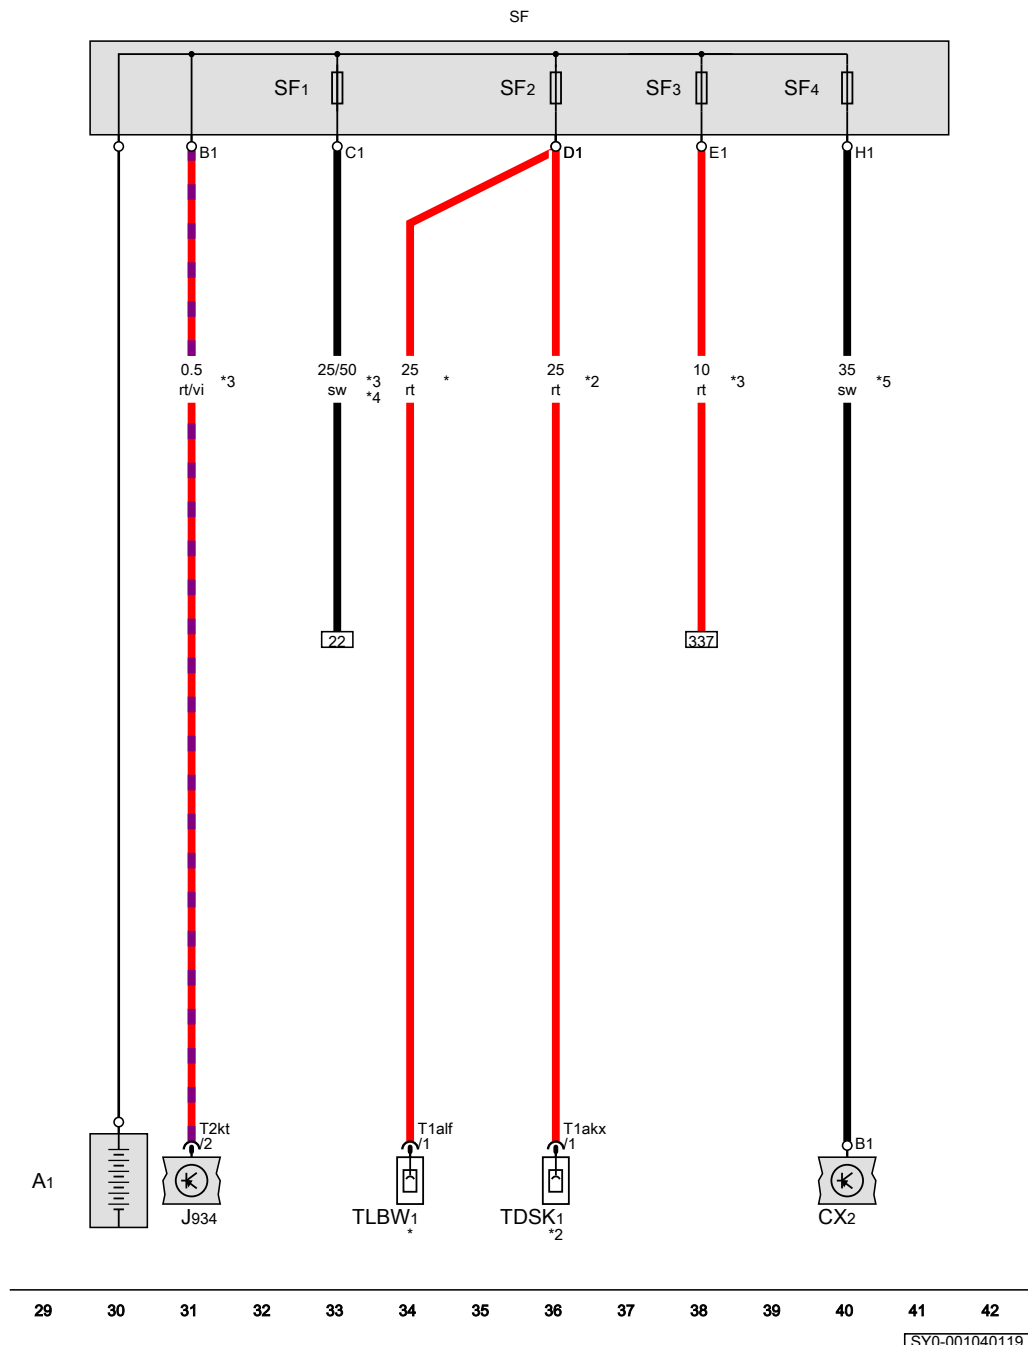

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

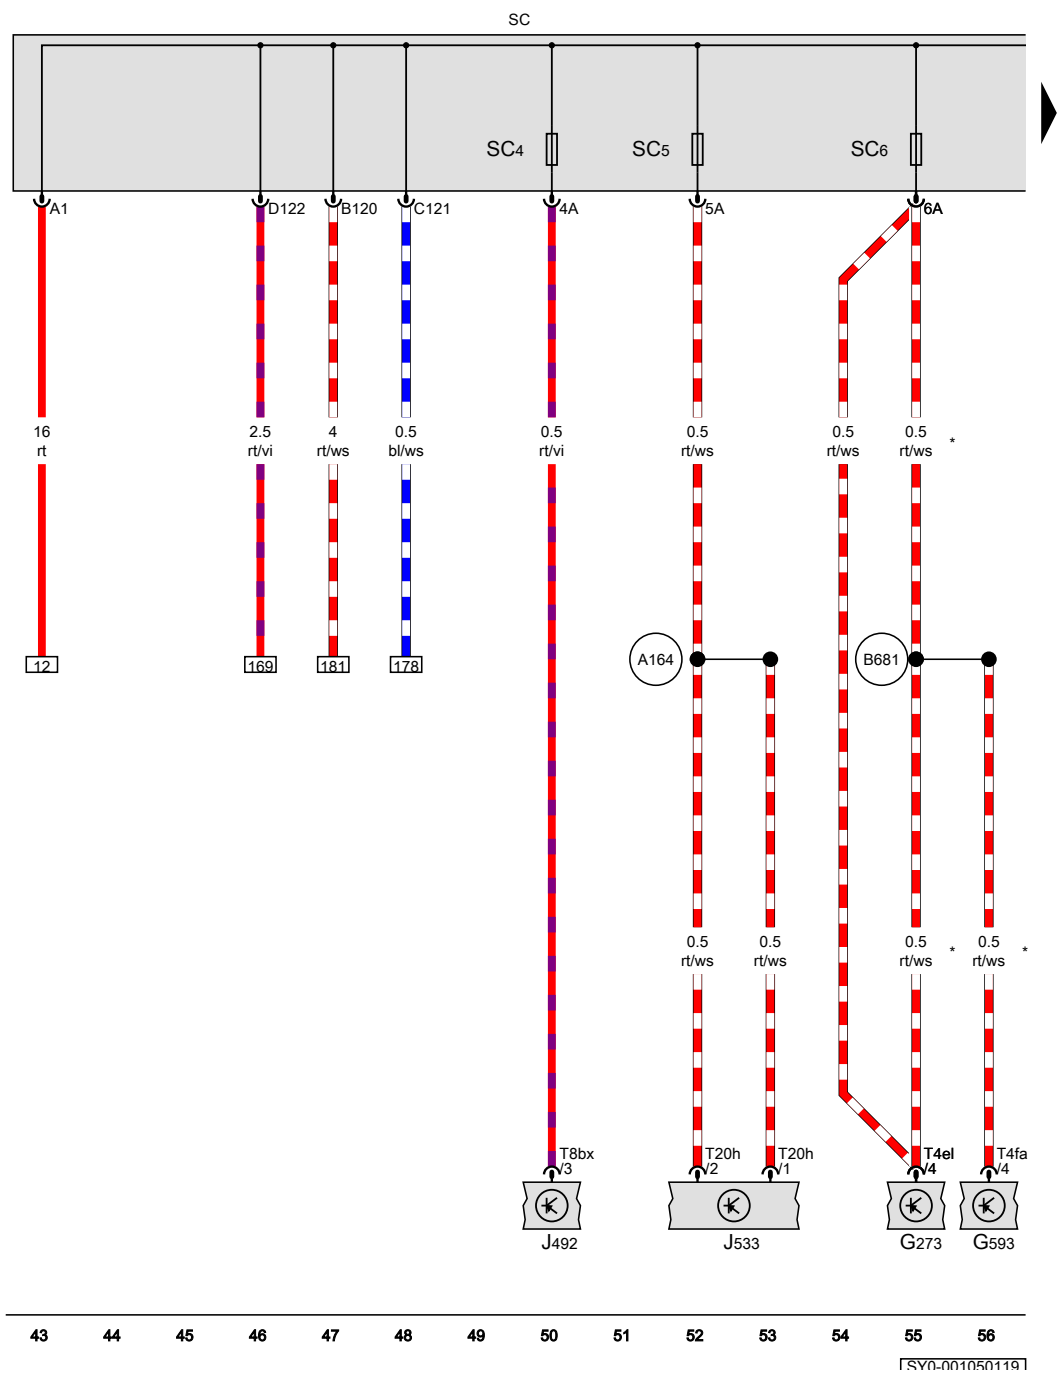

Fuse holder C


- G273 Interior monitoring sensor
- G593 Interior monitoring sensor 3
- J492 All-wheel drive control unit
- J533 Data bus diagnostic interface
- SC Fuse holder C
- SC4 Fuse 4 on fuse holder C
- SC5 Fuse 5 on fuse holder C
- SC6 Fuse 6 on fuse holder C
- T4el 4-pin connector, black
- T4fa 4-pin connector, black
- T8bx 8-pin connector, black
- T20h 20-pin connector, red

A164 Positive connection 2 (30a) in dash panel wiring harness

B681 Positive connection 7 (30), in interior wiring harness

* For models with anti-theft alarm system and front and rear interior monitor

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

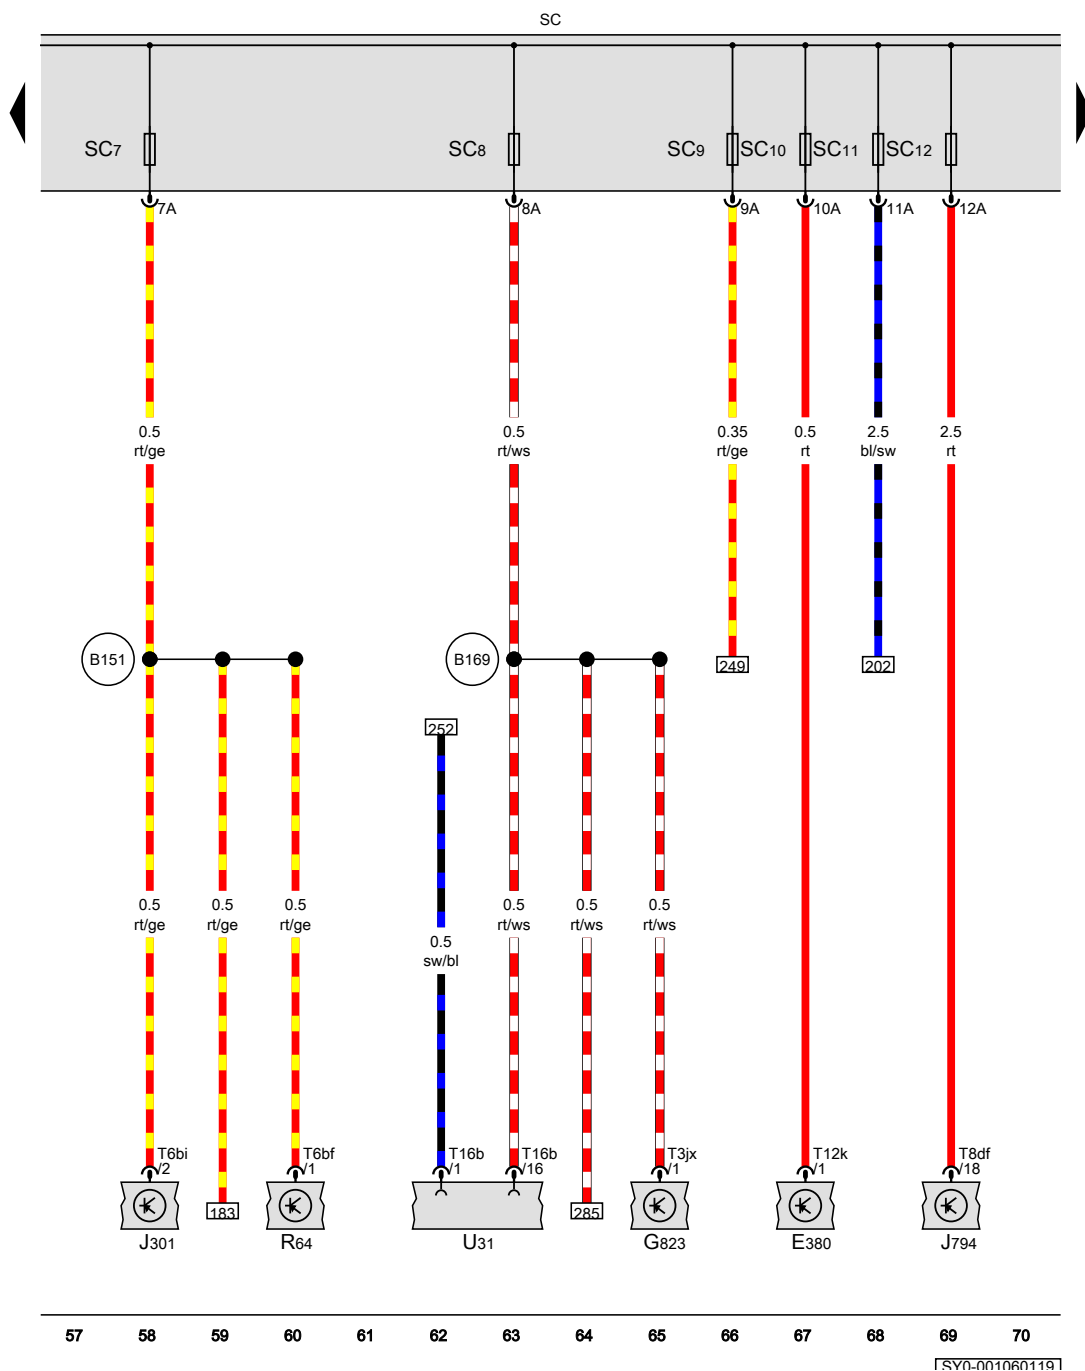

Fuse holder C


- E380 Multimedia system operating unit
- G823 Air humidity, rain and light sensor
- J301 Air conditioning system control unit
- J794 Control unit 1 for information electronics
- R64 Remote control receiver for auxiliary heater
- SC Fuse holder C
- SC7 Fuse 7 on fuse holder C
- SC8 Fuse 8 on fuse holder C
- SC9 Fuse 9 on fuse holder C
- SC10 Fuse 10 on fuse holder C
- SC11 Fuse 11 on fuse holder C
- SC12 Fuse 12 on fuse holder C
- T3jx 3-pin connector, black
- T6bf 6-pin connector, blue
- T6bi 6-pin connector, black
- T8df 8-pin connector, black
- T12k 12-pin connector, black
- T16b 16-pin connector
- U31 Diagnostic connection

B151 Positive connection 3 (30a), in interior wiring harness

B169 Positive connection 1 (30), in interior wiring harness

Volkswagen Technical Site: <https://vwts.ru>

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

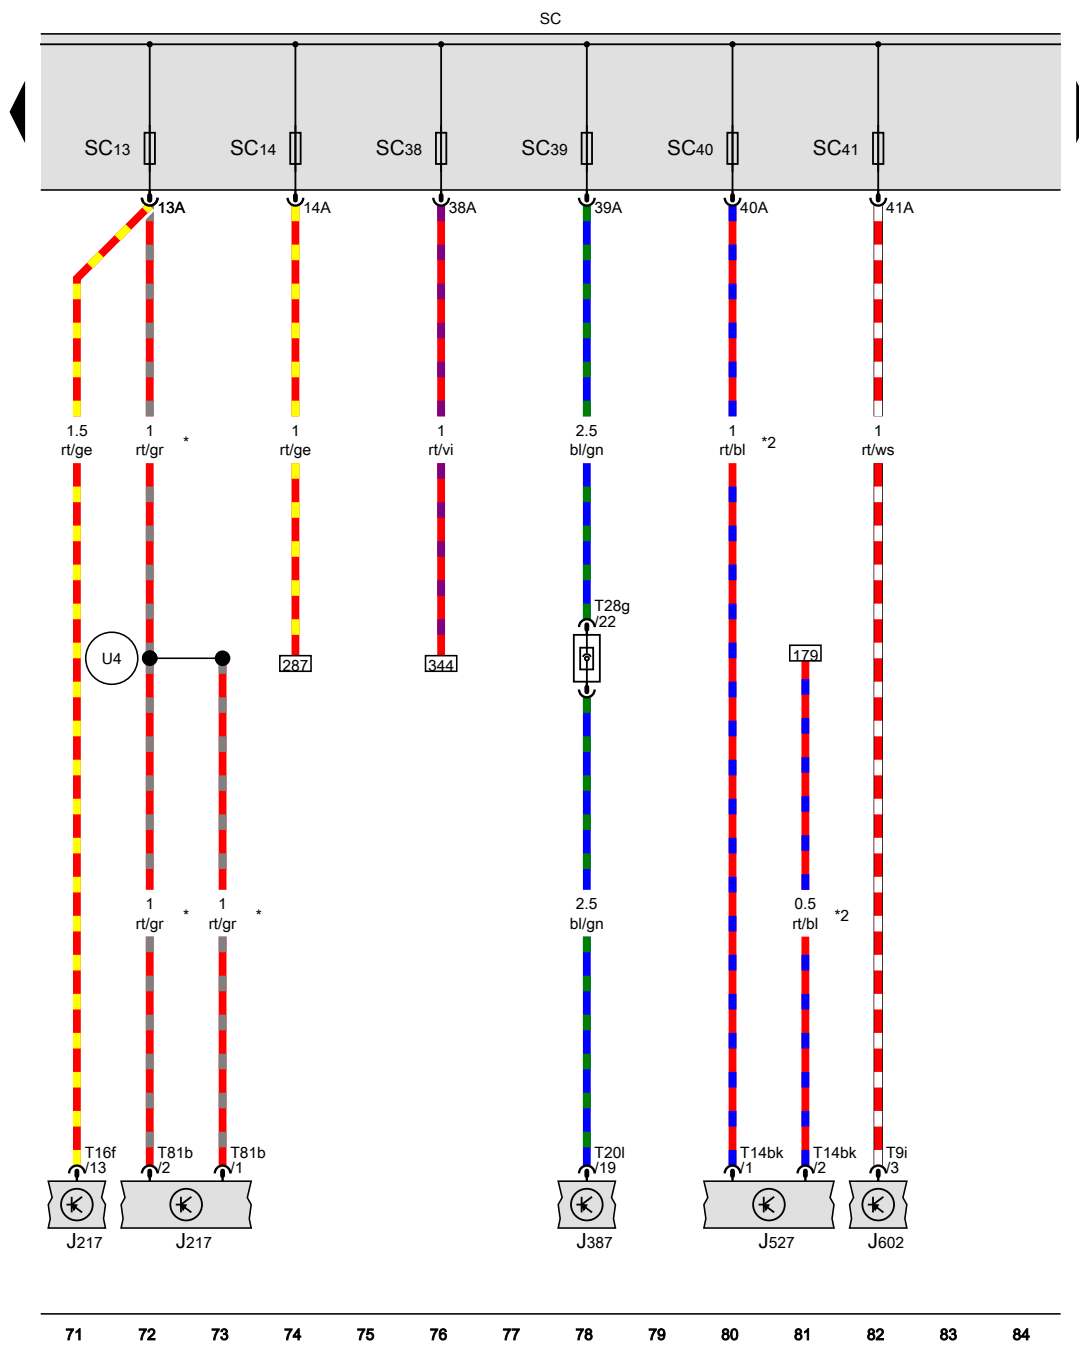

Fuse holder C


- J217 Automatic gearbox control unit
- J387 Front passenger door control unit
- J527 Steering column electronics control unit
- J602 Interior light relay
- SC Fuse holder C
- SC13 Fuse 13 on fuse holder C
- SC14 Fuse 14 on fuse holder C
- SC38 Fuse 38 on fuse holder C
- SC39 Fuse 39 on fuse holder C
- SC40 Fuse 40 on fuse holder C
- SC41 Fuse 41 on fuse holder C
- T9i 9-pin connector, grey
- T14bk 14-pin connector, black
- T16f 16-pin connector, black
- T20i 20-pin connector, black
- T28g 28-pin connector, black
- T81b 81-pin connector, black

U4 Connection (30), in automatic gearbox wiring harness

* For models with front-wheel drive

*2 For models with multifunction steering wheel

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

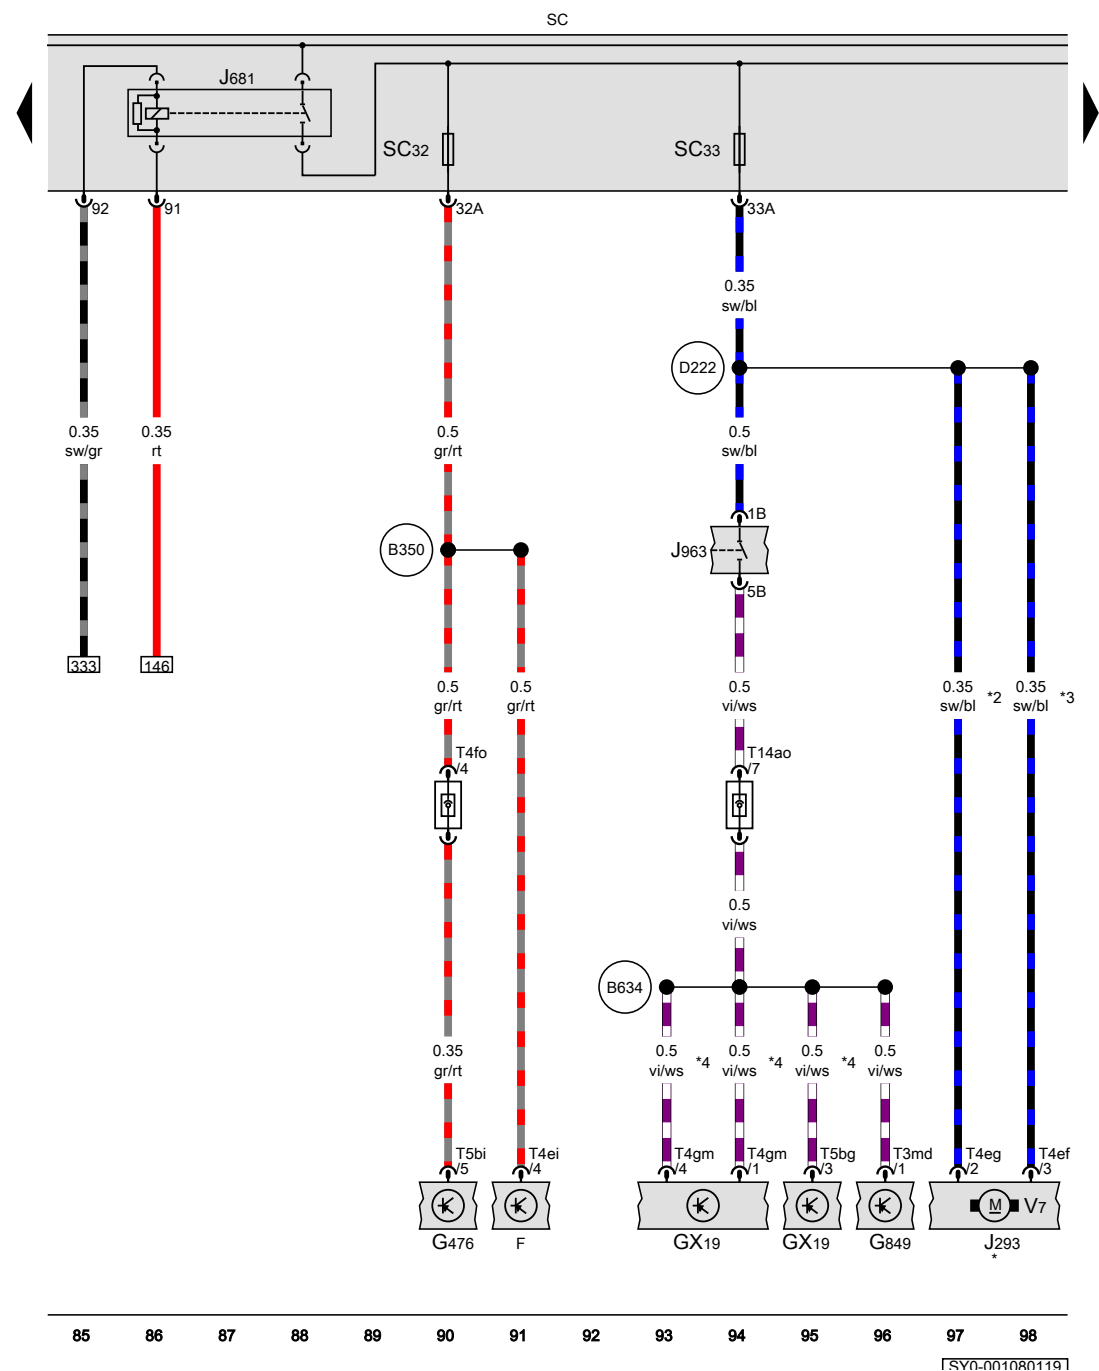


Terminal 15 voltage supply relay 2, Fuse holder C

- F Brake light switch
- GX19 Delivery unit for reducing agent metering system
- G476 Clutch position sender
- G849 Reducing agent quality sensor
- J293 Radiator fan control unit
- J681 Terminal 15 voltage supply relay 2
- J963 Relay for reducing agent metering system
- SC Fuse holder C
- SC32 Fuse 32 on fuse holder C
- SC33 Fuse 33 on fuse holder C
- T3md 3-pin connector, black
- T4ef 4-pin connector, black
- T4eg 4-pin connector, black
- T4ei 4-pin connector, black
- T4fo 4-pin connector, black
- T4gm 4-pin connector, black
- T5bg 5-pin connector, black
- T5bi 5-pin connector, black
- T14ao 14-pin connector, black
- V7 Radiator fan

- B350 Positive connection 1 (87a) in main wiring harness
- B634 Positive connection 2 (87), in main wiring harness
- D222 Connection 10 (87a), in engine compartment wiring harness

- * Pre-wired component
- *2 For models with no towing bracket
- *3 For models with towing bracket
- *4 see applicable current flow diagram for engine

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

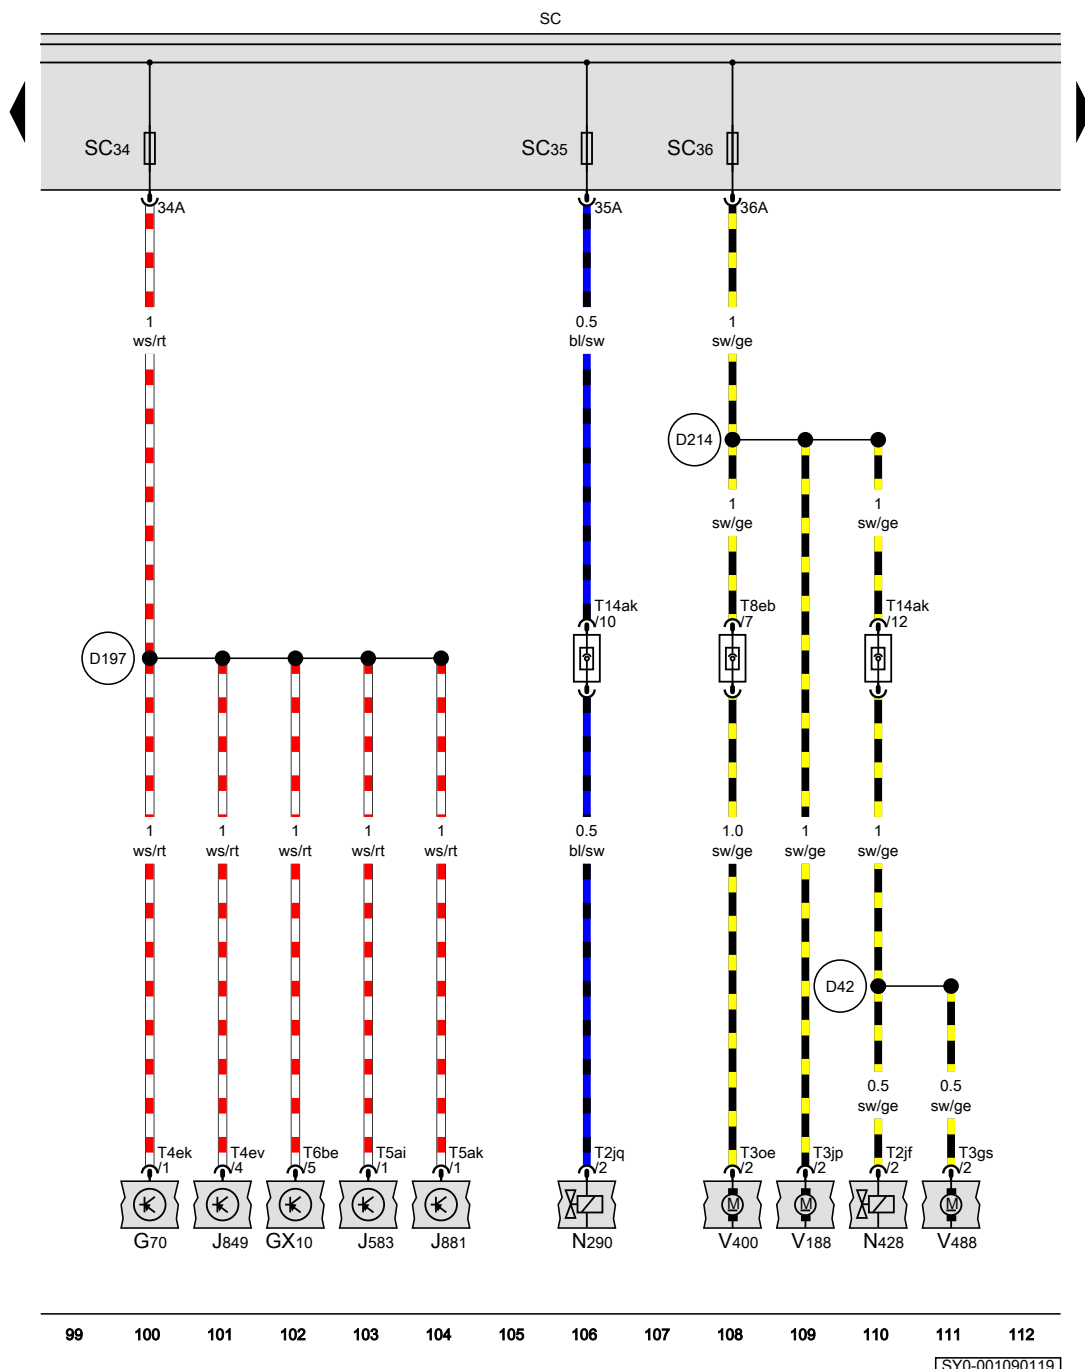


Fuse holder C

- GX10 Lambda probe 1 before catalytic converter
- G70 Air mass meter
- J583 Control unit for NOx sender
- J849 Control unit for sensor electronics
- J881 Control unit for NOx sender 2
- N290 Fuel metering valve
- N428 Valve for oil pressure control
- SC Fuse holder C
- SC34 Fuse 34 on fuse holder C
- SC35 Fuse 35 on fuse holder C
- SC36 Fuse 36 on fuse holder C
- T2jf 2-pin connector, black
- T2jq 2-pin connector, black
- T3gs 3-pin connector, black
- T3jp 3-pin connector, black
- T3oe 3-pin connector, black
- T4ek 4-pin connector, black
- T4ev 4-pin connector, black
- T5ai 5-pin connector, black
- T5ak 5-pin connector, black
- T6be 6-pin connector, black
- T8eb 8-pin connector, black
- T14ak 14-pin connector, grey
- V188 Charge air cooling pump
- V400 Pump for exhaust gas recirculation cooler
- V488 Auxiliary pump for heating

- D42 Connection 4, in engine prewiring harness
- D197 Connection 5 (87a), in engine compartment wiring harness
- D214 Connection 8 (87a), in engine compartment wiring harness

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

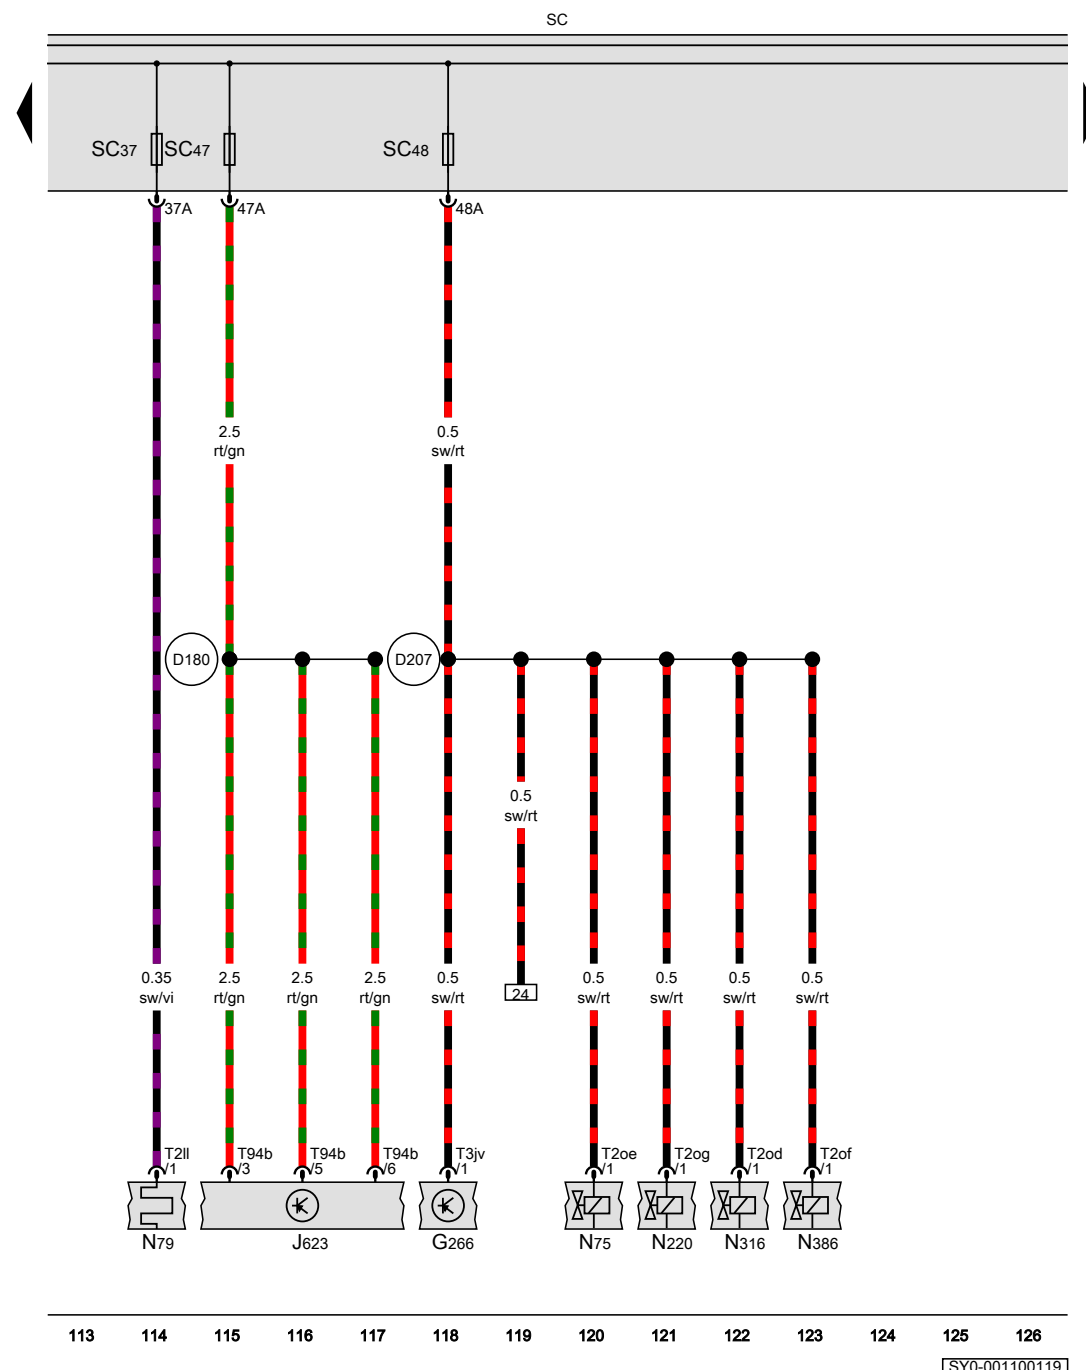


Fuse holder C

- G266 Oil level and oil temperature sender
- J623 Engine/motor control unit
- N75 Charge pressure control solenoid valve
- N79 Heater element for crankcase breather
- N220 Exhaust flap valve
- N316 Intake manifold flap valve
- N386 Exhaust gas recirculation cooling bypass valve
- SC Fuse holder C
- SC37 Fuse 37 on fuse holder C
- SC47 Fuse 47 on fuse holder C
- SC48 Fuse 48 on fuse holder C
- T2II 2-pin connector, black
- T2od 2-pin connector, black
- T2oe 2-pin connector, black
- T2of 2-pin connector, black
- T2og 2-pin connector, black
- T3jv 3-pin connector, black
- T94b 94-pin connector, black

D180 Connection (87a), in engine compartment wiring harness

D207 Connection 7 (87a), in engine compartment wiring harness

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

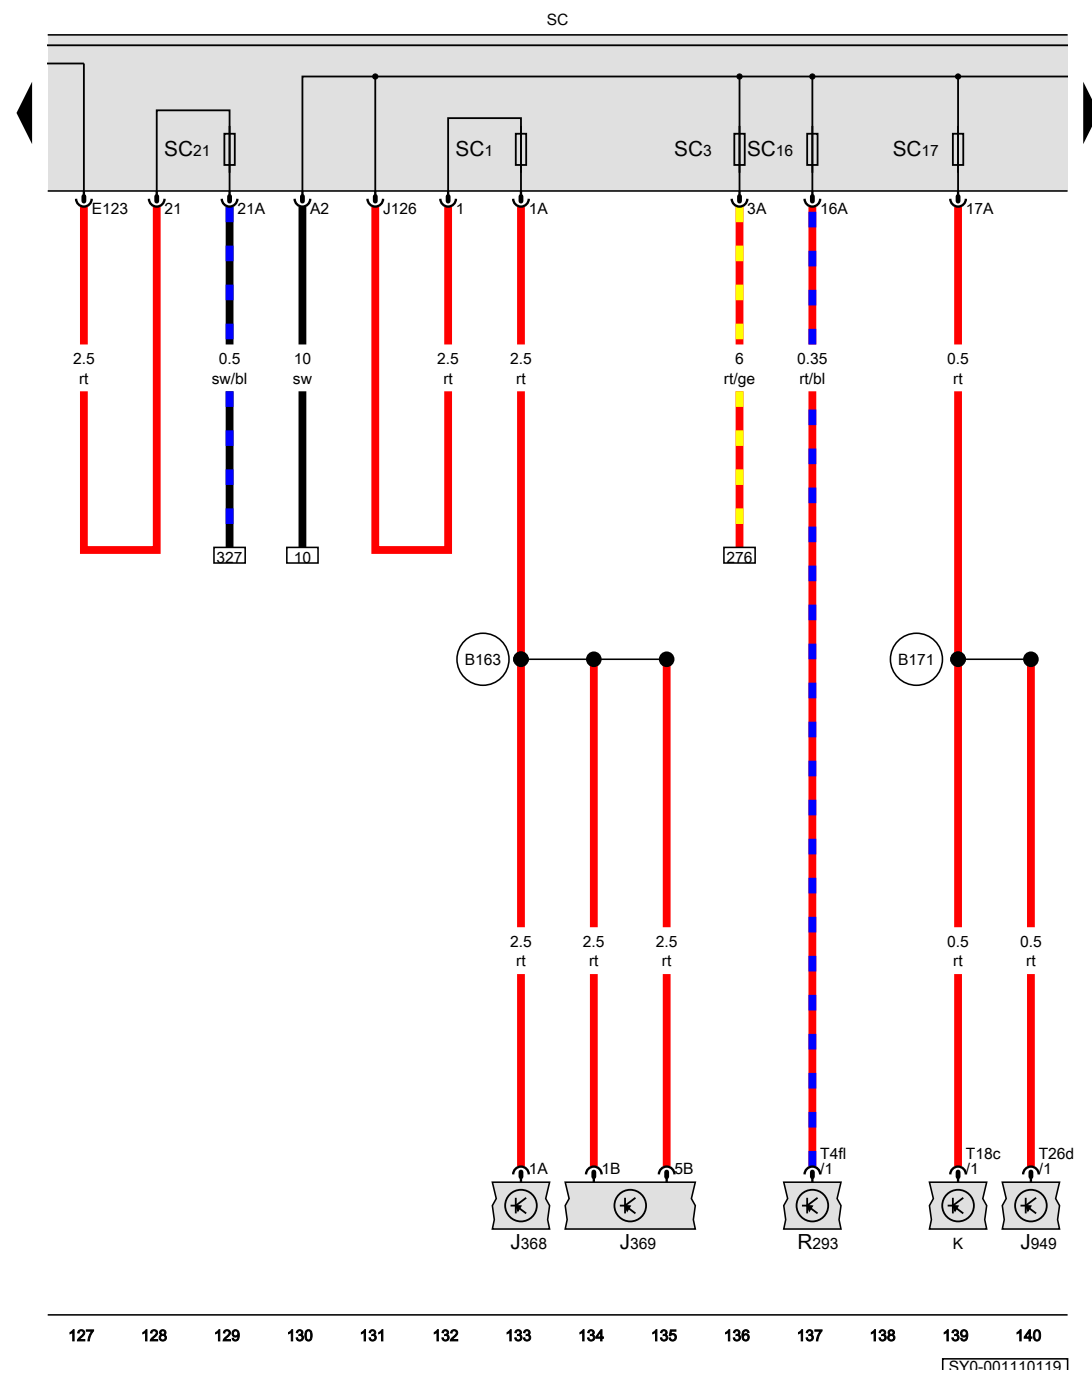


Fuse holder C

- J368 Wiper motor relay 1
- J369 Wiper motor relay 2
- J949 Emergency call module control unit and communication unit
- K Dash panel insert
- R293 USB hub
- SC Fuse holder C
- SC1 Fuse 1 on fuse holder C
- SC3 Fuse 3 on fuse holder C
- SC16 Fuse 16 on fuse holder C
- SC17 Fuse 17 on fuse holder C
- SC21 Fuse 21 on fuse holder C
- T4fl 4-pin connector, red
- T18c 18-pin connector, black
- T26d 26-pin connector, black

B163 Positive connection 1 (15), in interior wiring harness

B171 Positive connection 3 (30), in interior wiring harness

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

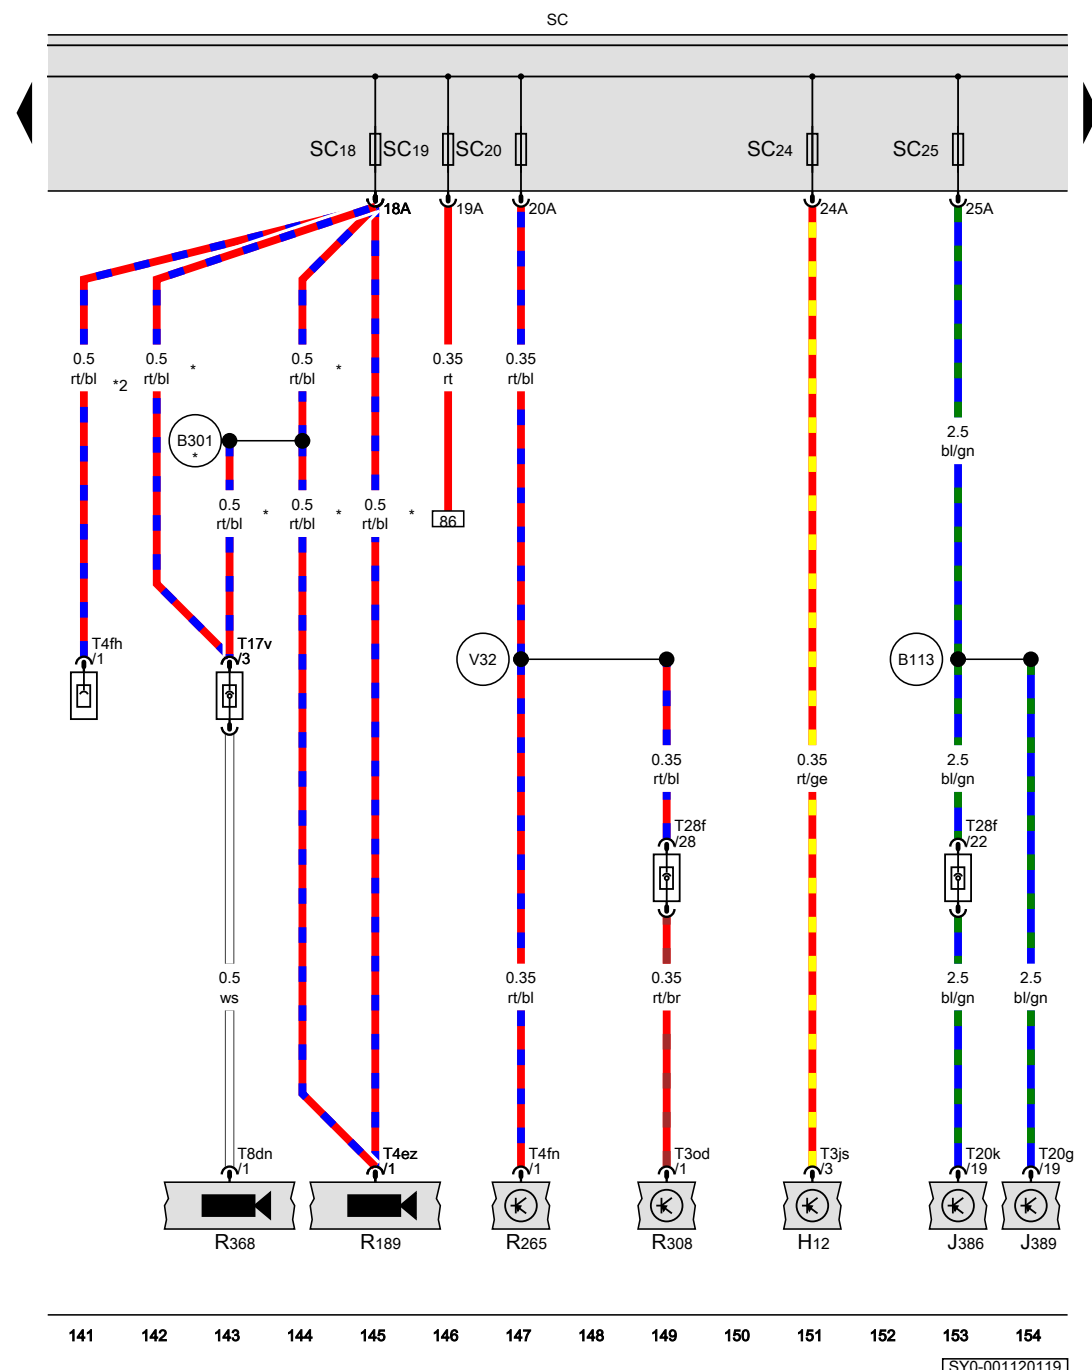

Fuse holder C

- H12 Alarm horn
- J386 Driver door control unit
- J389 Rear right door control unit
- R189 Reversing camera
- R265 Storage compartment with interface for mobile telephone
- R308 Transmission and reception stabilisation control unit
- R368 Camera for trailer manoeuvring system, in rear left wing door
- SC Fuse holder C
- SC18 Fuse 18 on fuse holder C
- SC19 Fuse 19 on fuse holder C
- SC20 Fuse 20 on fuse holder C
- SC24 Fuse 24 on fuse holder C
- SC25 Fuse 25 on fuse holder C
- T3js 3-pin connector, black
- T3od 3-pin connector
- T4ez 4-pin connector, black
- T4fh 4-pin connector, black
- T4fn 4-pin connector, brown
- T8dn 8-pin connector, black
- T17v 17-pin connector, black
- T20g 20-pin connector, black
- T20k 20-pin connector, black
- T28f 28-pin connector, black


B113 Positive connection (30a), in left interior wiring harness

B301 Positive connection 5 (30), in main wiring harness

V32 Positive connection (30), in telephone wiring harness

* According to equipment

*2 For models with double cab/dropside

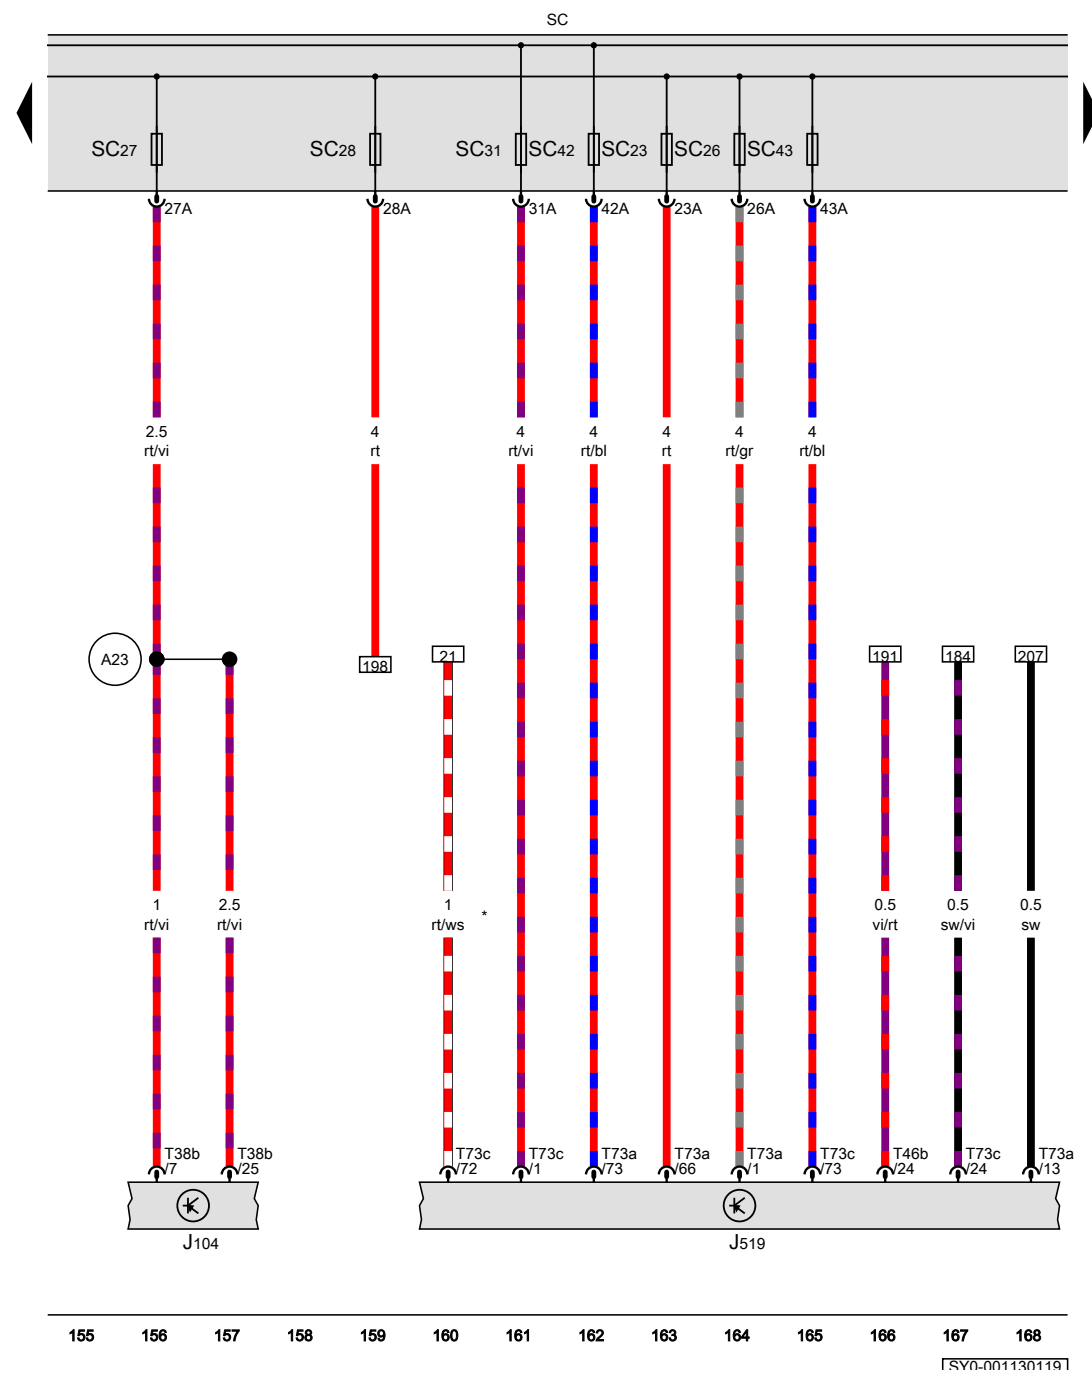


Fuse holder C

- J104 ABS control unit
- J519 Onboard supply control unit
- SC Fuse holder C
- SC23 Fuse 23 on fuse holder C
- SC26 Fuse 26 on fuse holder C
- SC27 Fuse 27 on fuse holder C
- SC28 Fuse 28 on fuse holder C
- SC31 Fuse 31 on fuse holder C
- SC42 Fuse 42 on fuse holder C
- SC43 Fuse 43 on fuse holder C
- T38b 38-pin connector, brown
- T46b 46-pin connector, black
- T73a 73-pin connector, black
- T73c 73-pin connector, black

A23 Connection (30al), in dash panel wiring harness

* For models with second battery

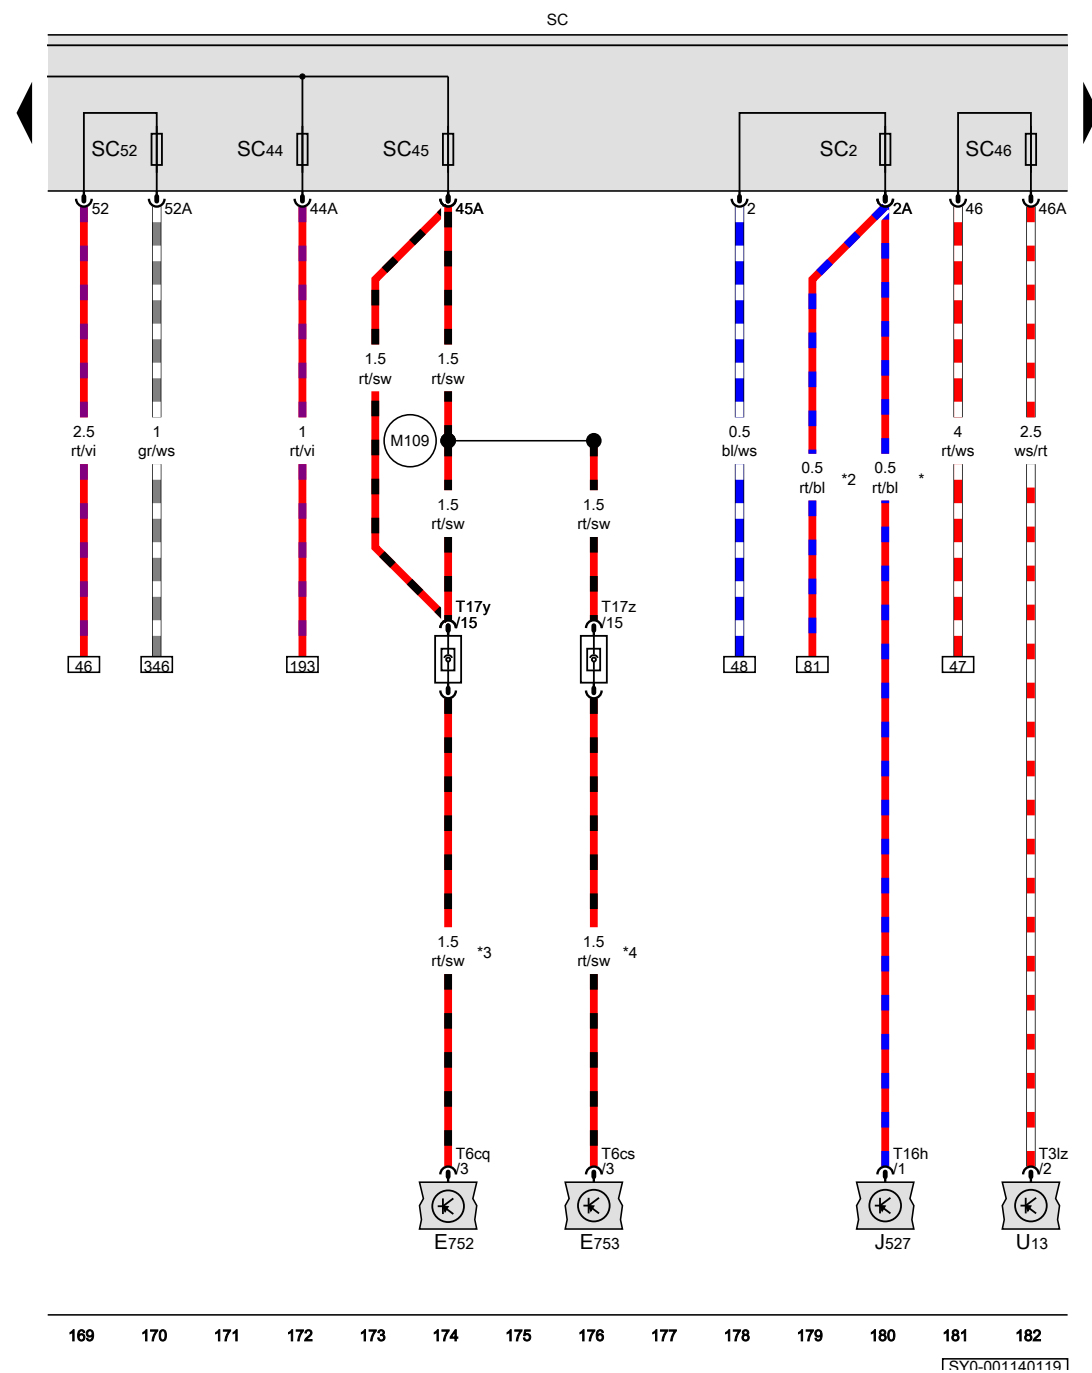


Fuse holder C

- E752 Front left lumbar support adjustment switch
- E753 Front right lumbar support adjustment switch
- J527 Steering column electronics control unit
- SC Fuse holder C
- SC2 Fuse 2 on fuse holder C
- SC44 Fuse 44 on fuse holder C
- SC45 Fuse 45 on fuse holder C
- SC46 Fuse 46 on fuse holder C
- SC52 Fuse 52 on fuse holder C
- T3lz 3-pin connector, brown
- T6cq 6-pin connector, black
- T6cs 6-pin connector, black
- T16h 16-pin connector, black
- T17y 17-pin connector, red
- T17z 17-pin connector, red
- U13 DC/AC converter with socket, 12 V - 230 V

M109 Connection 1 (30), in front left seat wiring harness

- * For models with no multifunction steering wheel
- *2 For models with multifunction steering wheel
- *3 For left-hand drive models
- *4 For right-hand drive models

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

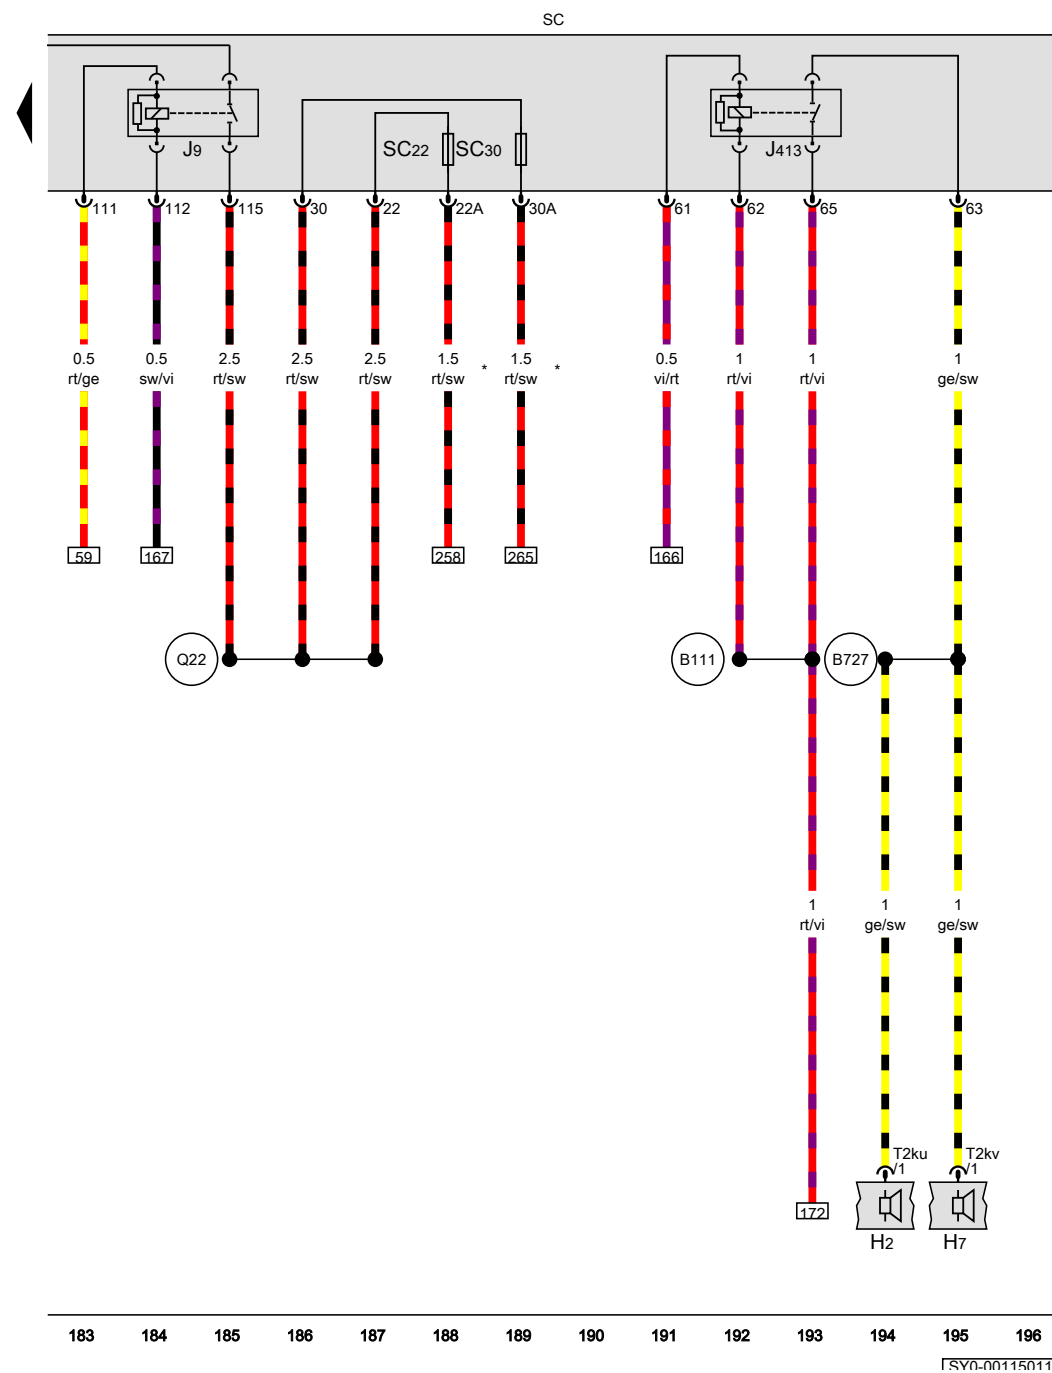

Heated rear window relay, Horn relay, Fuse holder C

- H2 Treble horn
- H7 Bass horn
- J9 Heated rear window relay
- J413 Horn relay
- SC Fuse holder C
- SC22 Fuse 22 on fuse holder C
- SC30 Fuse 30 on fuse holder C
- T2ku 2-pin connector, black
- T2kv 2-pin connector, black

B111 Positive connection 1 (30a), in interior wiring harness

B727 Connection (71a), in main wiring harness

Q22 Connection 1, in rear lid wiring harness

* For panel van and Kombi models


- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

Terminal 15 voltage supply relay, Relay for special installations, terminal 15, Electrical terminal strip for external use

- J329 Terminal 15 voltage supply relay
- J821 Relay for special installations, terminal 15
- T5ax 5-pin connector, red
- T7ah 7-pin connector, green
- T8dj 8-pin connector, black
- TV65 Electrical terminal strip for external use

- 44 Earth point, lower part of left A-pillar
- 151 Earth connection 1, in front wiring harness
- B188 Positive connection 5 (30), in interior wiring harness
- B273 Positive connection (15), in main wiring harness
- C45 Positive connection 1 (15), in front wiring harness

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

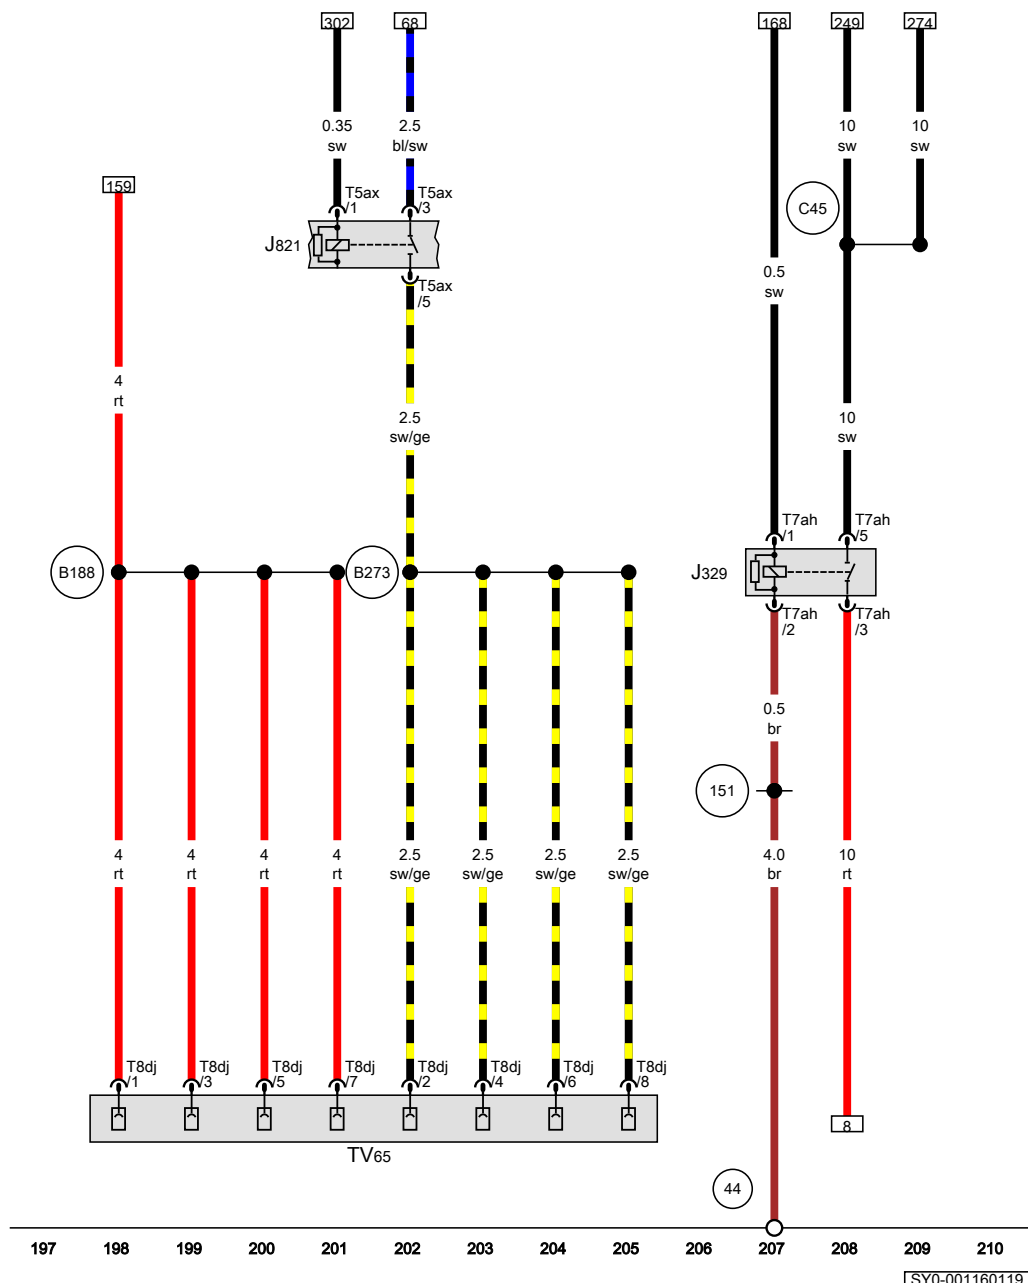


Fuse holder B


- EX21 Heater and air conditioning controls
- J126 Fresh air blower control unit
- J1144 Control unit for supplementary blower for air conditioning
- J1145 Control unit for supplementary blower 2 for air conditioning
- SB Fuse holder B
- SB1 Fuse 1 on fuse holder B
- SB2 Fuse 2 on fuse holder B
- SB3 Fuse 3 on fuse holder B
- SB4 Fuse 4 on fuse holder B
- SB5 Fuse 5 on fuse holder B
- SB6 Fuse 6 on fuse holder B
- SB7 Fuse 7 on fuse holder B
- SB8 Fuse 8 on fuse holder B
- T3nx 3-pin connector, colourless
- T3ob 3-pin connector, colourless
- T3oc 3-pin connector, colourless
- T4er 4-pin connector, black
- T4es 4-pin connector, black
- T4fj 4-pin connector, black
- T20j 20-pin connector, black
- U20 12 V socket 4
- U26 12 V socket 5
- U33 12 V socket 6

X179 Connection 3 (socket) in additional equipment wiring harness

- * For models with no second battery
- *2 For models with second battery

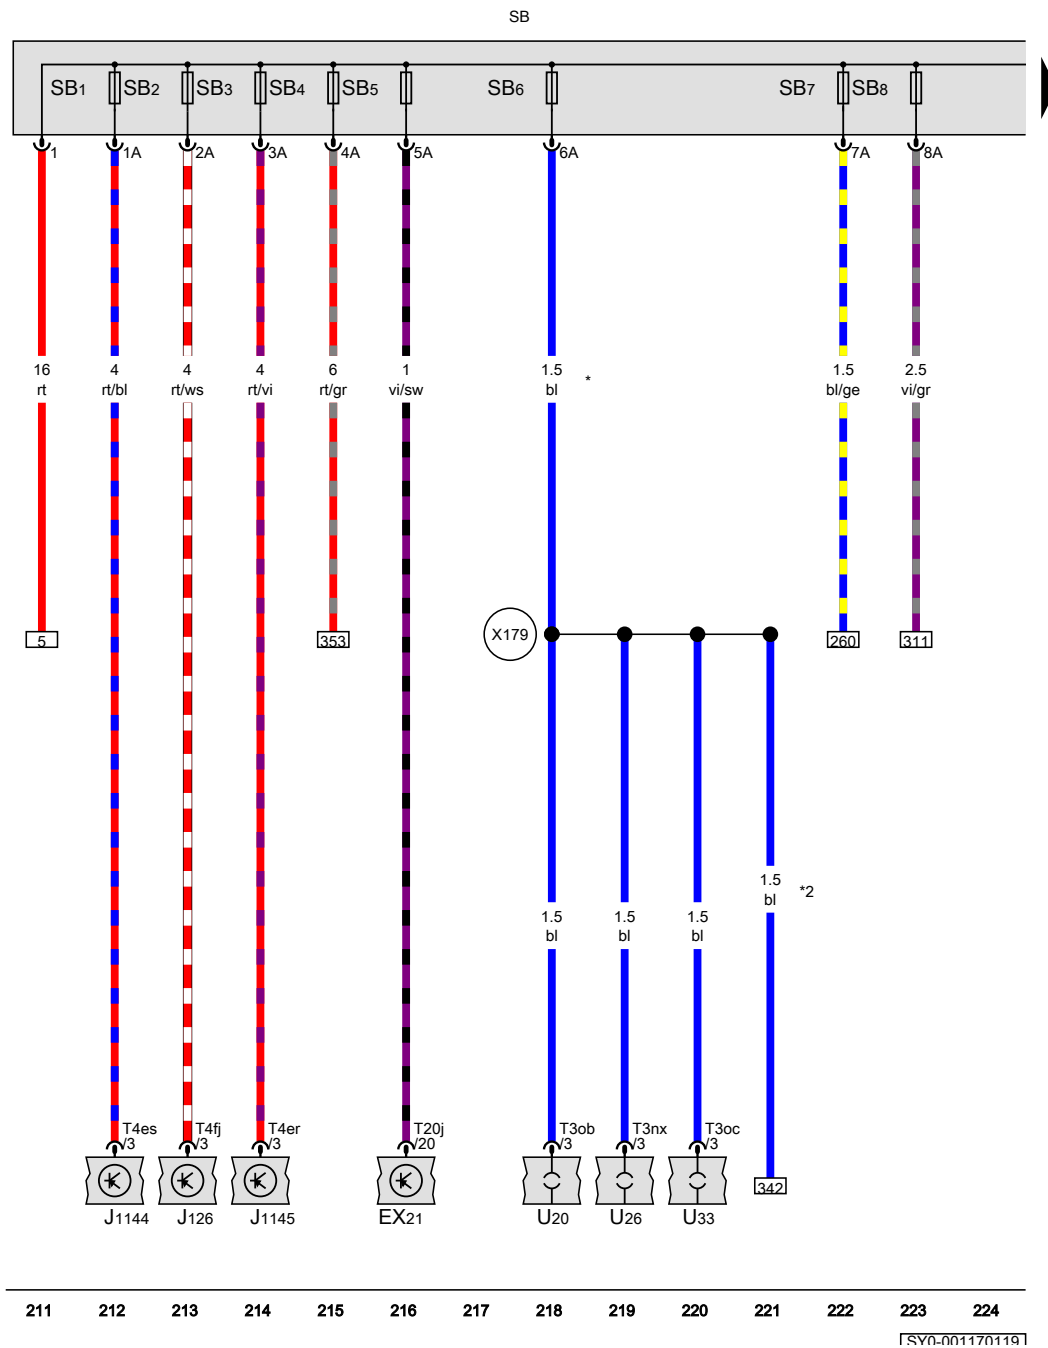


- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = violet
- ge = yellow
- or = orange
- rs = pink

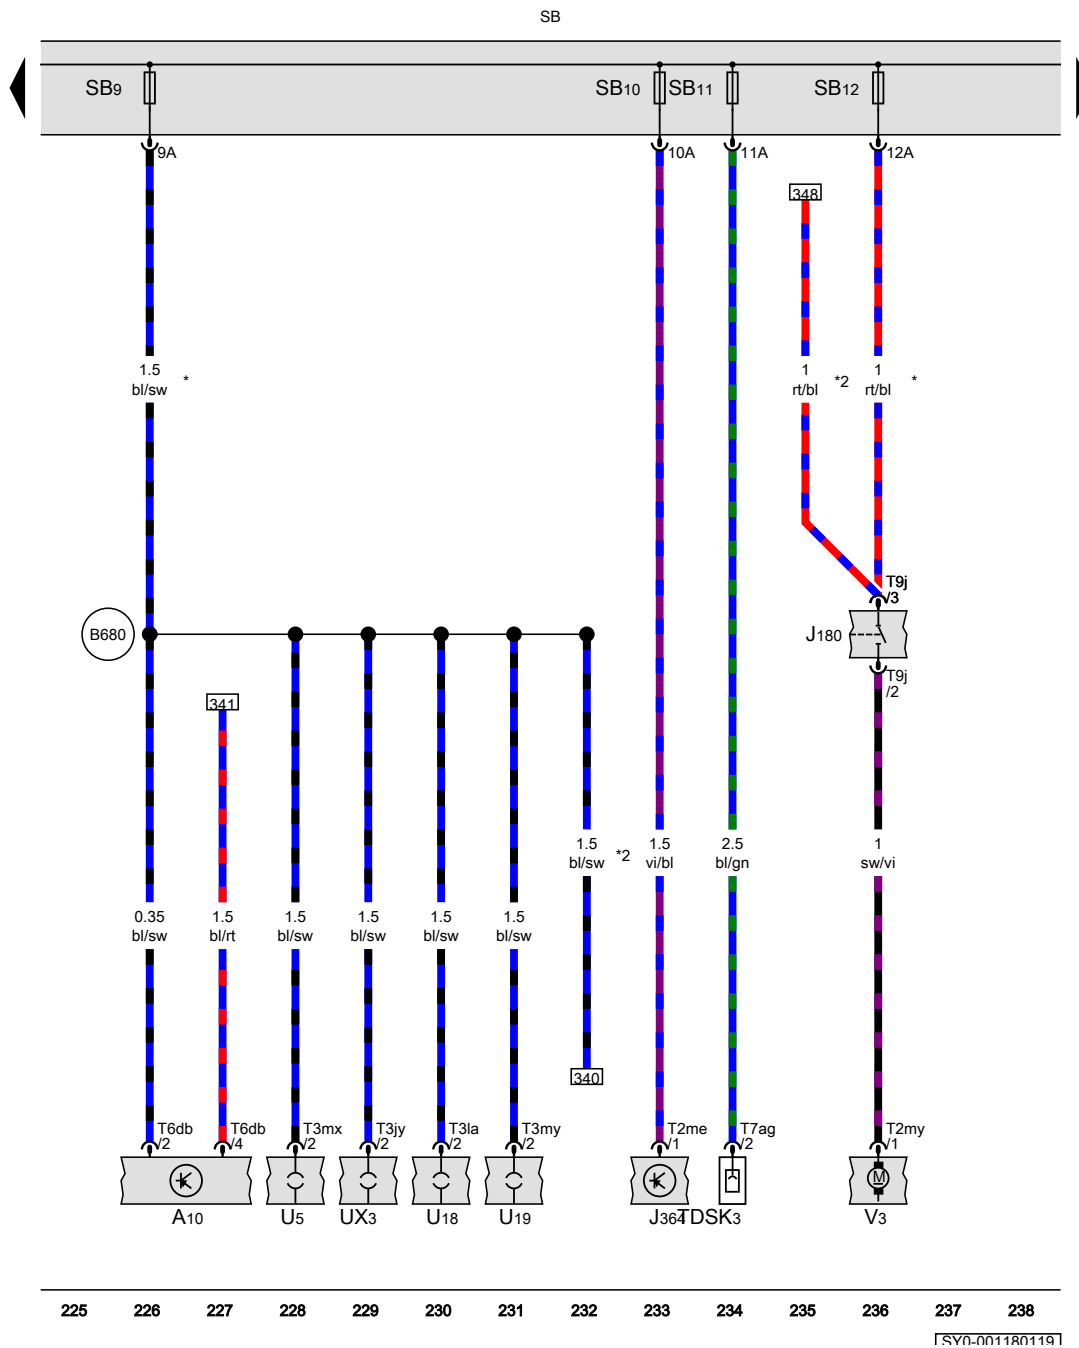

Fuse holder B

- A10 Battery charger, 230 or 110 Volt/12 Volt
- J180 Switch-over relay 1 for roof ventilator
- J364 Auxiliary heater control unit
- SB Fuse holder B
- SB9 Fuse 9 on fuse holder B
- SB10 Fuse 10 on fuse holder B
- SB11 Fuse 11 on fuse holder B
- SB12 Fuse 12 on fuse holder B
- T2me 2-pin connector, black
- T2my 2-pin connector, blue
- T3jy 3-pin connector, colourless
- T3la 3-pin connector, colourless
- T3mx 3-pin connector, colourless
- T3my 3-pin connector, colourless
- T6db 6-pin connector, grey
- T7ag 7-pin connector
- T9j 9-pin connector, grey
- TDSK3 Coupling point 3 for 3-way tipper
- UX3 12 V socket
- U5 12 V socket, in dash panel
- U18 12 V socket 2, in front centre console
- U19 12 V socket 3, in centre of dash panel
- V3 Roof ventilator
- B680 Connection (electric socket), in interior wiring harness
- * For models with no second battery
- *2 For models with second battery

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

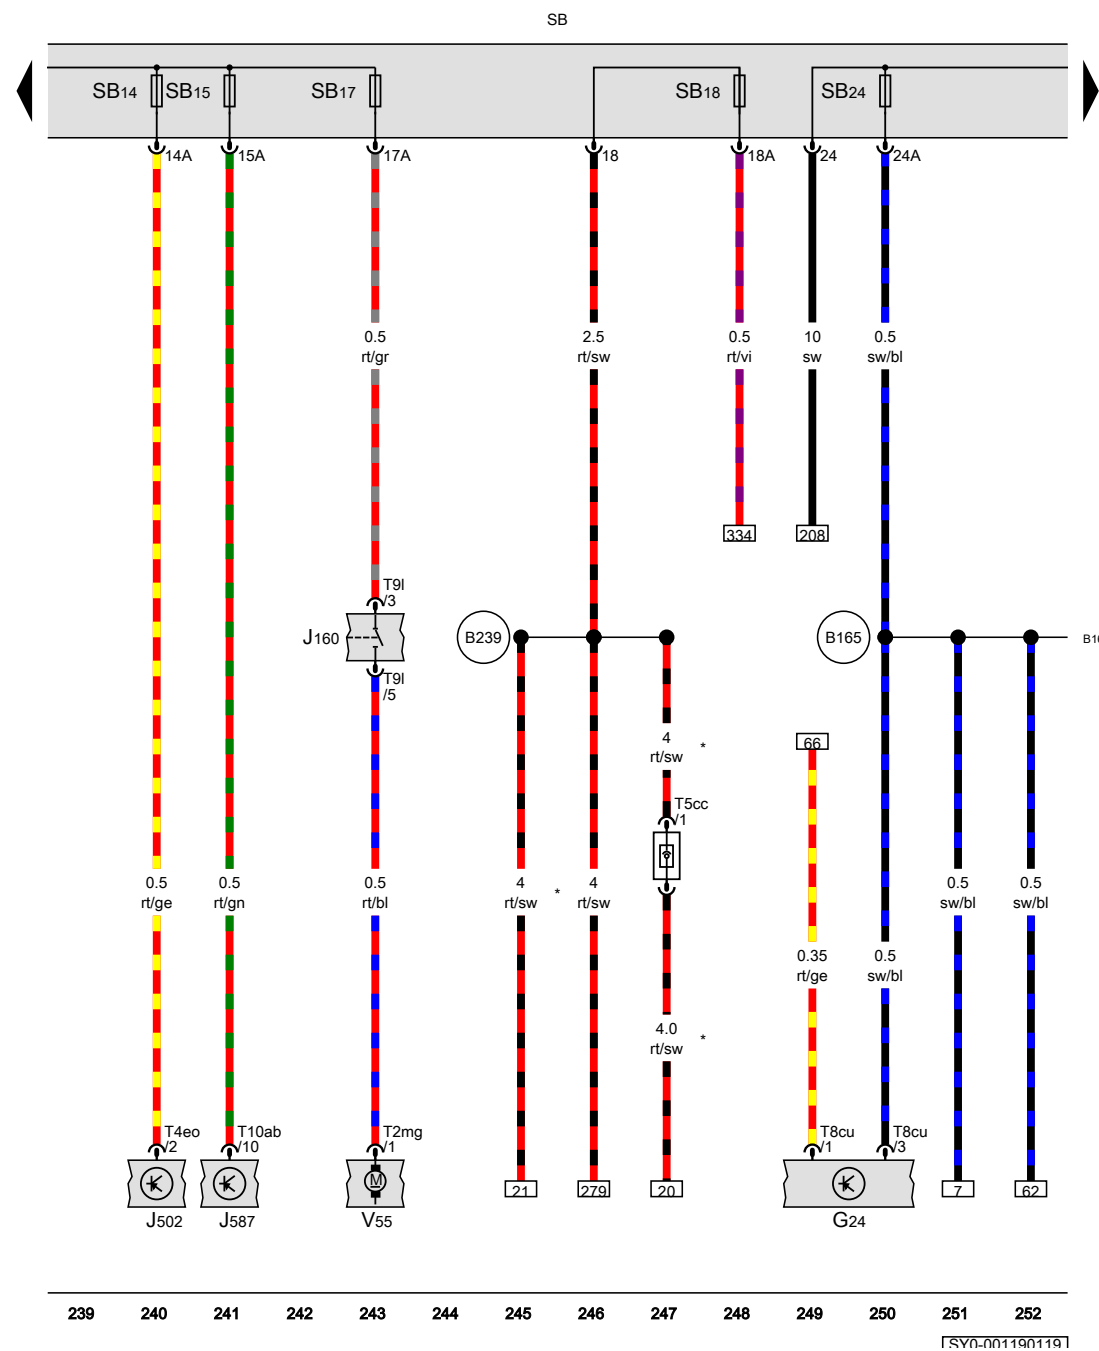


Fuse holder B

- G24 Tachograph
- J160 Circulation pump relay
- J502 Tyre Pressure Monitoring System control unit
- J587 Selector lever sensors control unit
- SB Fuse holder B
- SB14 Fuse 14 on fuse holder B
- SB15 Fuse 15 on fuse holder B
- SB17 Fuse 17 on fuse holder B
- SB18 Fuse 18 on fuse holder B
- SB24 Fuse 24 on fuse holder B
- T2mg 2-pin connector, black
- T4eo 4-pin connector, grey
- T5cc 5-pin connector, black
- T8cu 8-pin connector, colourless
- T9I 9-pin connector, black
- T10ab 10-pin connector, red
- V55 Circulation pump

B165 Positive connection 2 (15), in interior wiring harness

B239 Positive connection 1 (50), in interior wiring harness


* According to equipment

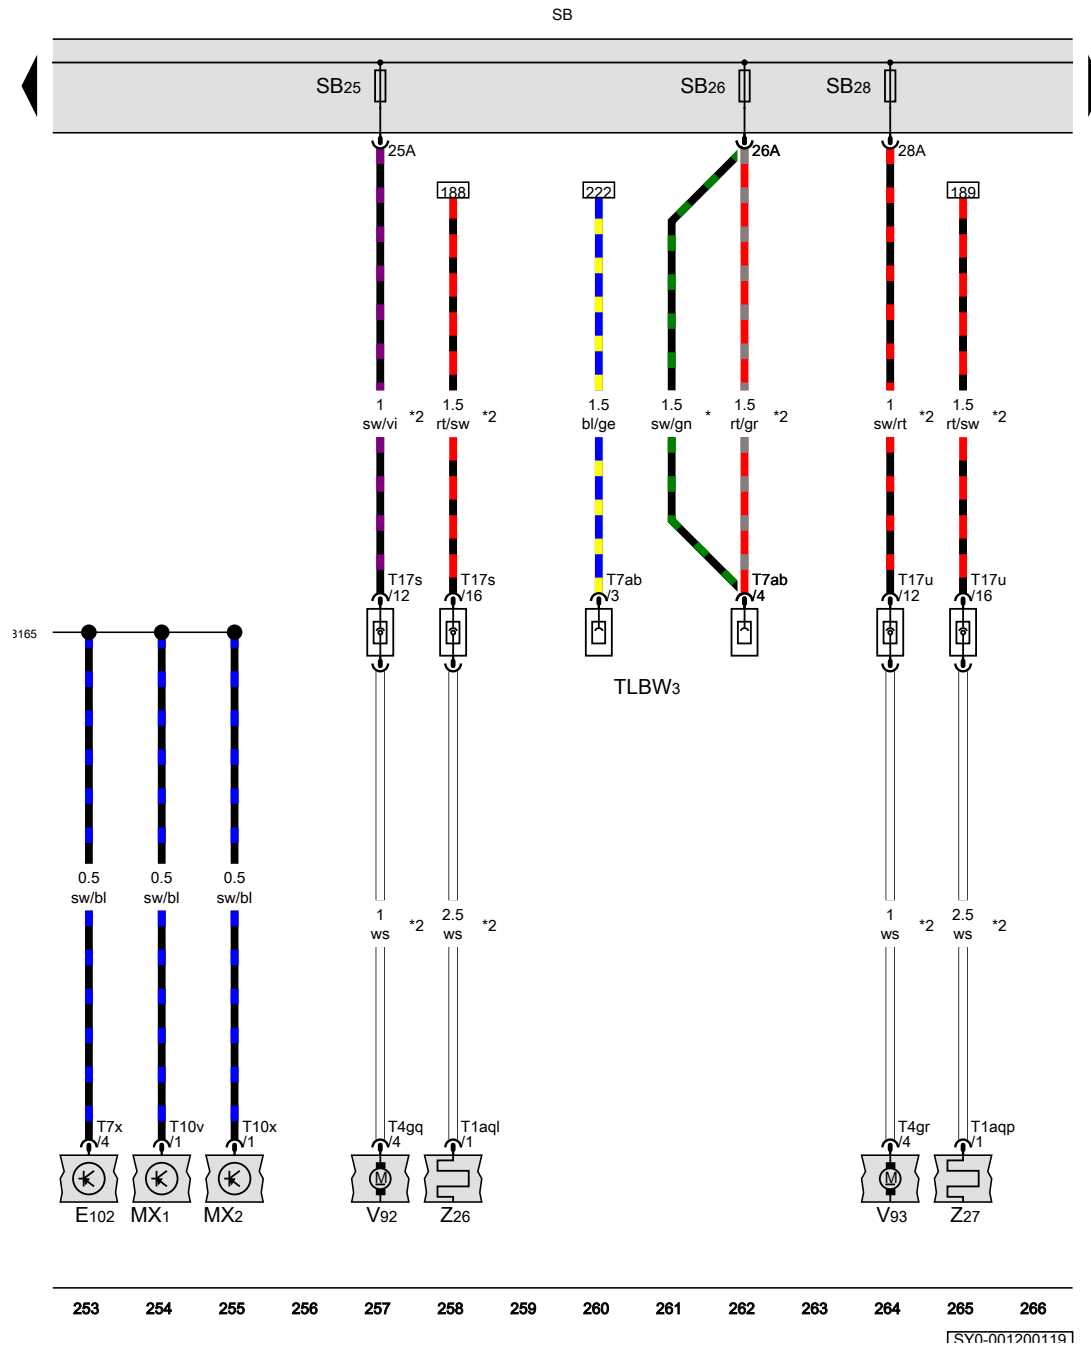

Fuse holder B

- | | |
|-------|--|
| E102 | Headlight range control regulator |
| MX1 | Front left headlight |
| MX2 | Front right headlight |
| SB | Fuse holder B |
| SB25 | Fuse 25 on fuse holder B |
| SB26 | Fuse 26 on fuse holder B |
| SB28 | Fuse 28 on fuse holder B |
| T1aql | 1-pin connector |
| T1aqp | 1-pin connector |
| T4gq | 4-pin connector, black |
| T4gr | 4-pin connector, black |
| T7ab | 7-pin connector |
| T7x | 7-pin connector, black |
| T10v | 10-pin connector, black |
| T10x | 10-pin connector, black |
| T17s | 17-pin connector, black |
| T17u | 17-pin connector, black |
| TLBW3 | Coupling point 3 for tail lift |
| V92 | Rear left wing door window wiper motor |
| V93 | Rear right wing door window wiper motor |
| Z26 | Heated rear window in left wing door |
| Z27 | Heated rear window in right wing door |
| B165 | Positive connection 2 (15), in interior wiring harness |
| * | For models with double cab/dropside |
| *2 | For panel van and Kombi models |

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink

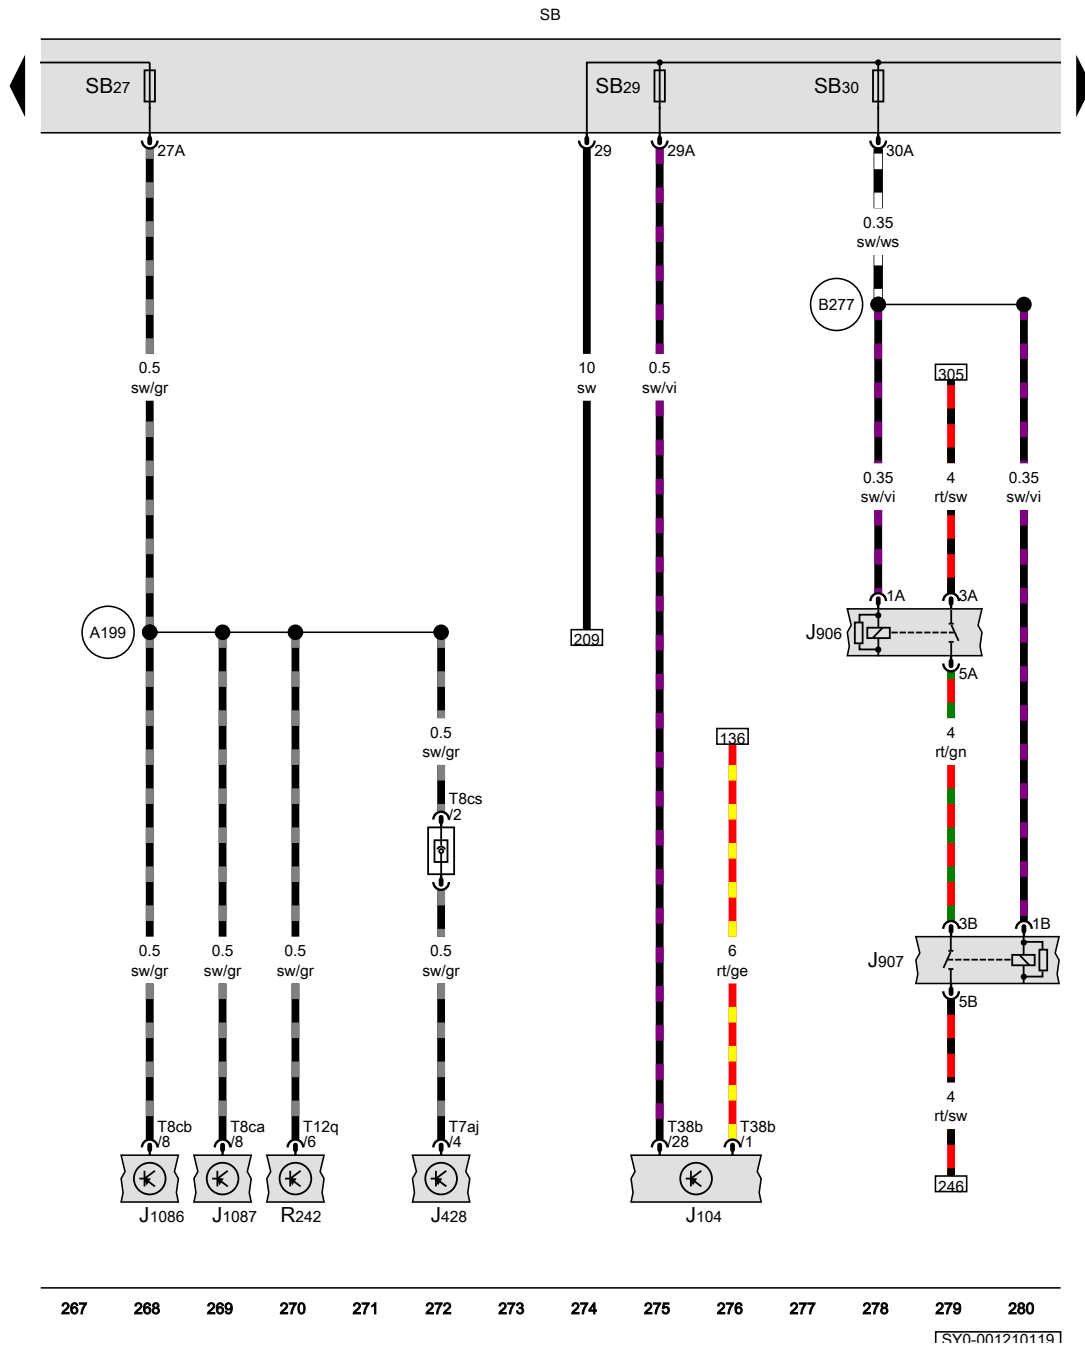


Fuse holder B

- | | |
|-------|--|
| J104 | ABS control unit |
| J428 | Adaptive cruise control unit |
| J906 | Starter relay 1 |
| J907 | Starter relay 2 |
| J1086 | Blind Spot Monitor control unit |
| J1087 | Blind Spot Monitor control unit 2 |
| R242 | Front camera for driver assist systems |
| SB | Fuse holder B |
| SB27 | Fuse 27 on fuse holder B |
| SB29 | Fuse 29 on fuse holder B |
| SB30 | Fuse 30 on fuse holder B |
| T7aj | 7-pin connector, black |
| T8ca | 8-pin connector, black |
| T8cb | 8-pin connector, black |
| T8cs | 8-pin connector, black |
| T12q | 12-pin connector, black |
| T38b | 38-pin connector, brown |

(A199) Positive connection 4 (15a) in dash panel wiring harness


(B277) Positive connection 1 (15a) in main wiring harness

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink

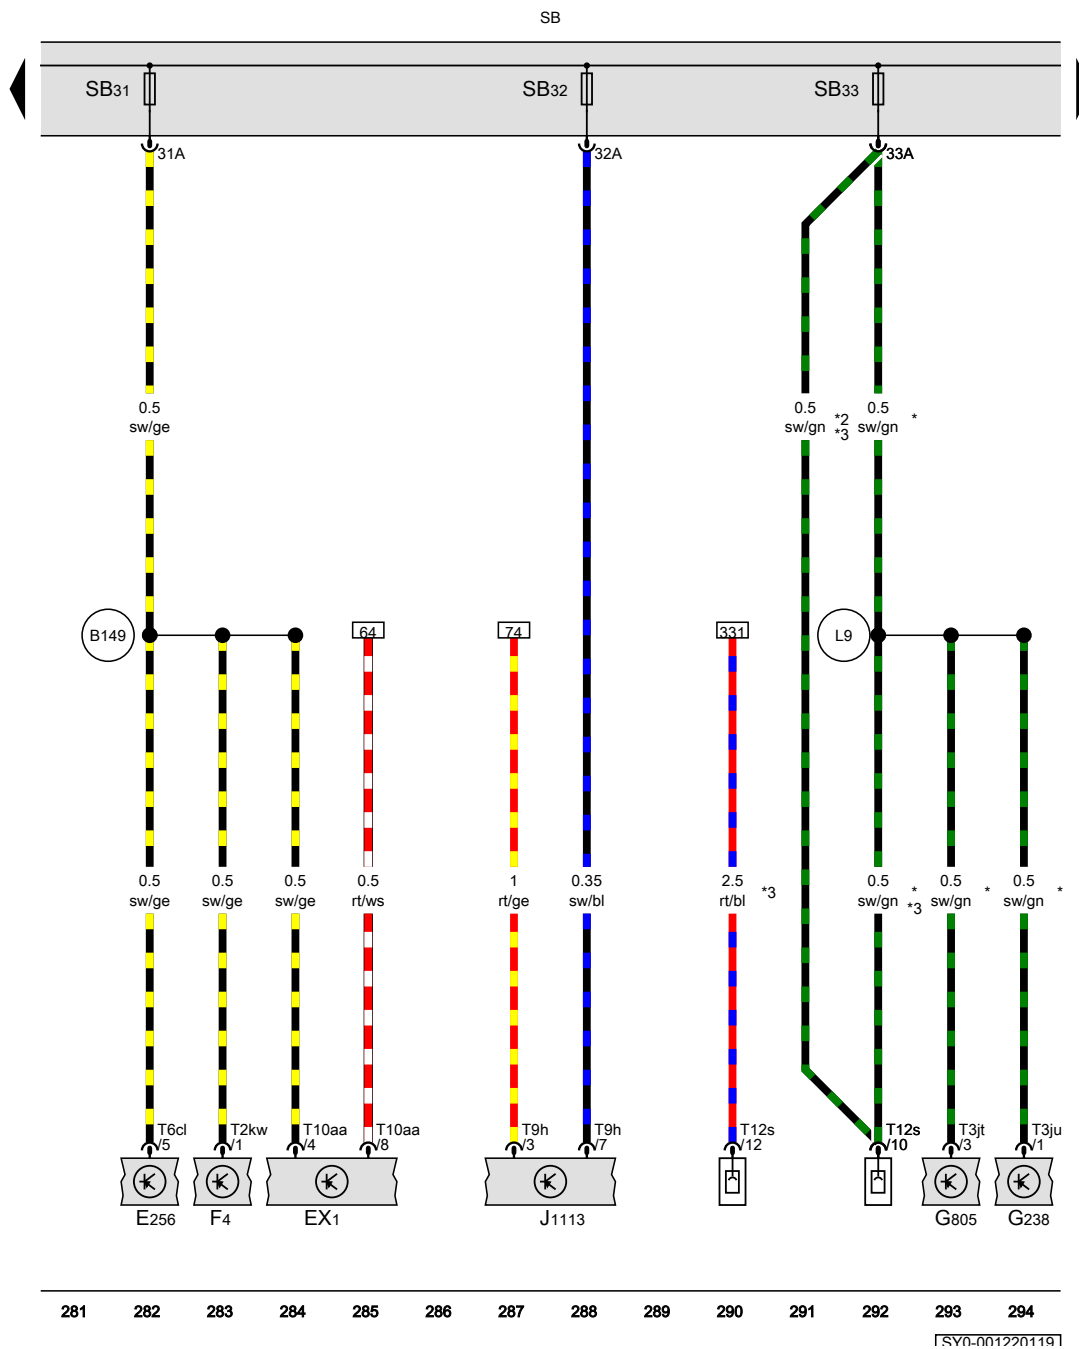

Fuse holder B


- EX1 Rotary light switch
- E256 Button for TCS and electronic stabilisation program
- F4 Reversing light switch
- G238 Air quality sensor
- G805 Pressure sender for refrigerant circuit
- J1113 Reverse warning beeper control unit
- SB Fuse holder B
- SB31 Fuse 31 on fuse holder B
- SB32 Fuse 32 on fuse holder B
- SB33 Fuse 33 on fuse holder B
- T2kw 2-pin connector, black
- T3jt 3-pin connector, black
- T3ju 3-pin connector, grey
- T6cl 6-pin connector, blue
- T9h 9-pin connector, grey
- T10aa 10-pin connector, red
- T12s 12-pin connector, green
- B149 Positive connection 2 (15a), in interior wiring harness
- L9 Connection 1, in air conditioning system wiring harness
- * For models with air conditioning system
- *2 For models with no air conditioning system
- *3 For models with telematics

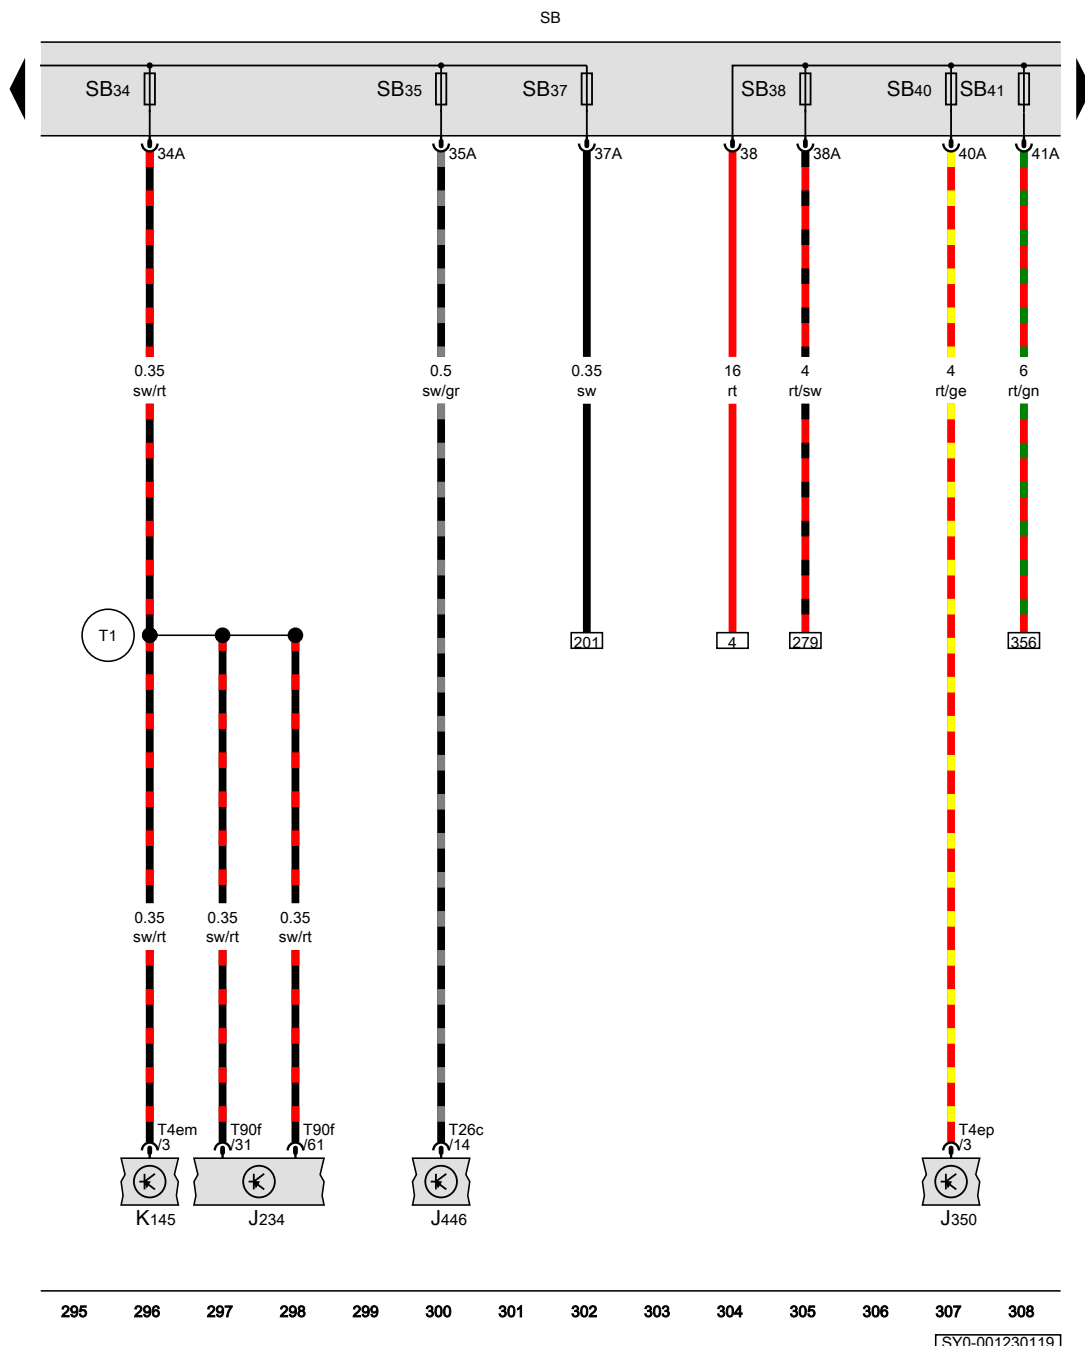

Fuse holder B

- J234 Airbag control unit
- J350 Warm air blower control unit
- J446 Parking aid control unit
- K145 Warning lamp for airbag deactivated on front passenger side
- SB Fuse holder B
- SB34 Fuse 34 on fuse holder B
- SB35 Fuse 35 on fuse holder B
- SB37 Fuse 37 on fuse holder B
- SB38 Fuse 38 on fuse holder B
- SB40 Fuse 40 on fuse holder B
- SB41 Fuse 41 on fuse holder B
- T4em 4-pin connector, black
- T4ep 4-pin connector, black
- T26c 26-pin connector, black
- T90f 90-pin connector, yellow


T1 Positive connection 1, in airbag wiring harness

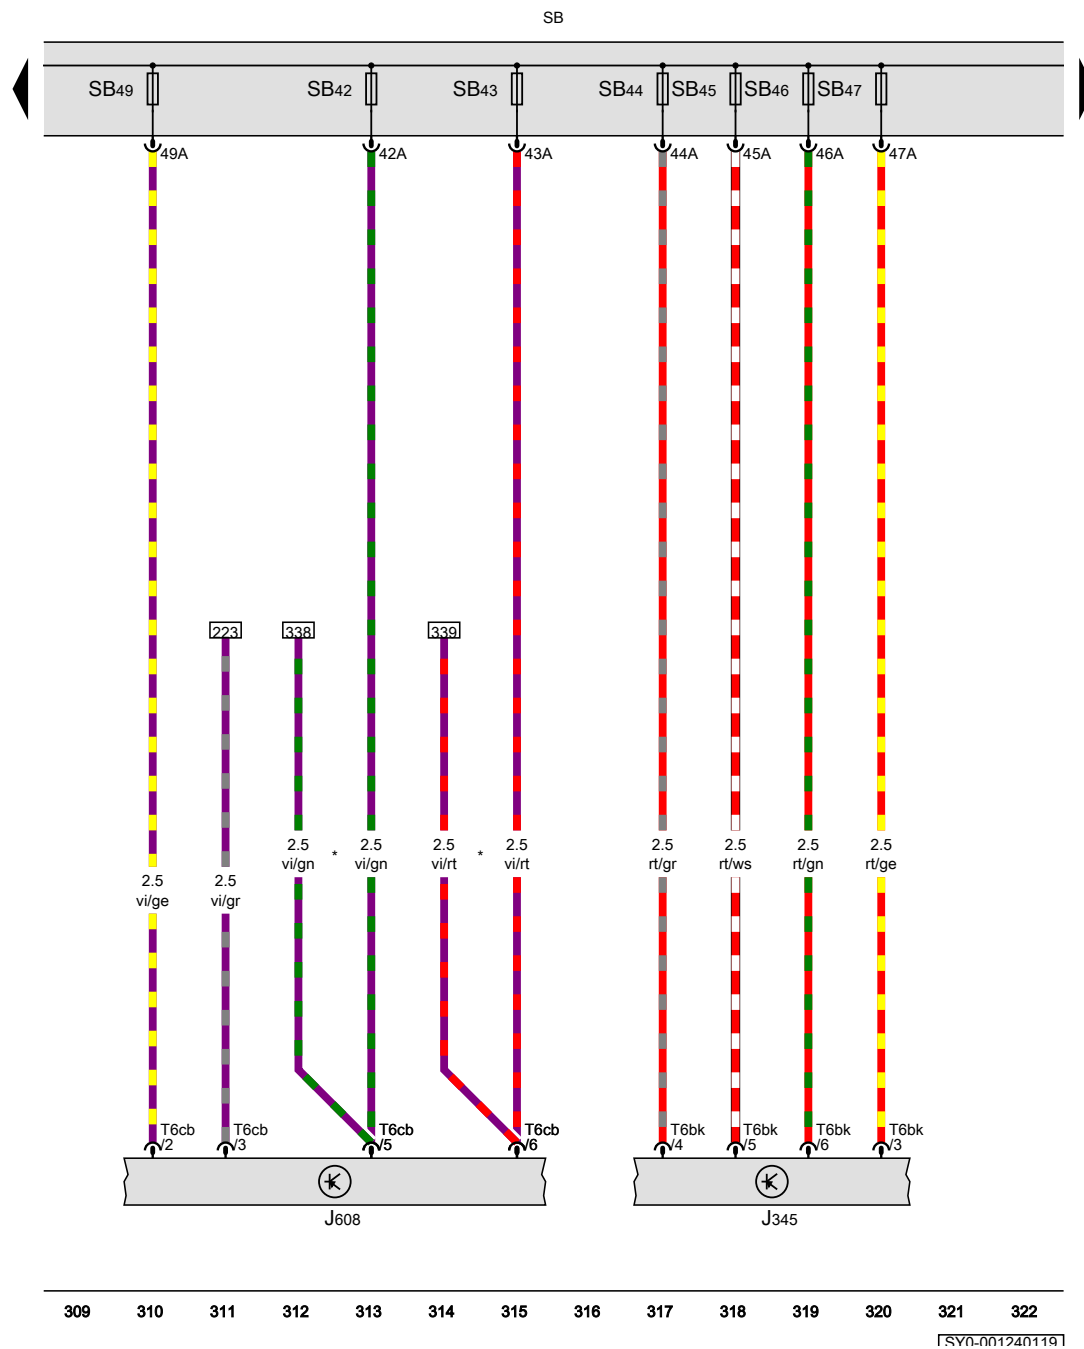

Fuse holder B

- J345 Trailer detector control unit
- J608 Special vehicle control unit
- SB Fuse holder B
- SB42 Fuse 42 on fuse holder B
- SB43 Fuse 43 on fuse holder B
- SB44 Fuse 44 on fuse holder B
- SB45 Fuse 45 on fuse holder B
- SB46 Fuse 46 on fuse holder B
- SB47 Fuse 47 on fuse holder B
- SB49 Fuse 49 on fuse holder B
- T6bk 6-pin connector, black
- T6cb 6-pin connector, blue
- * For models with second battery

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

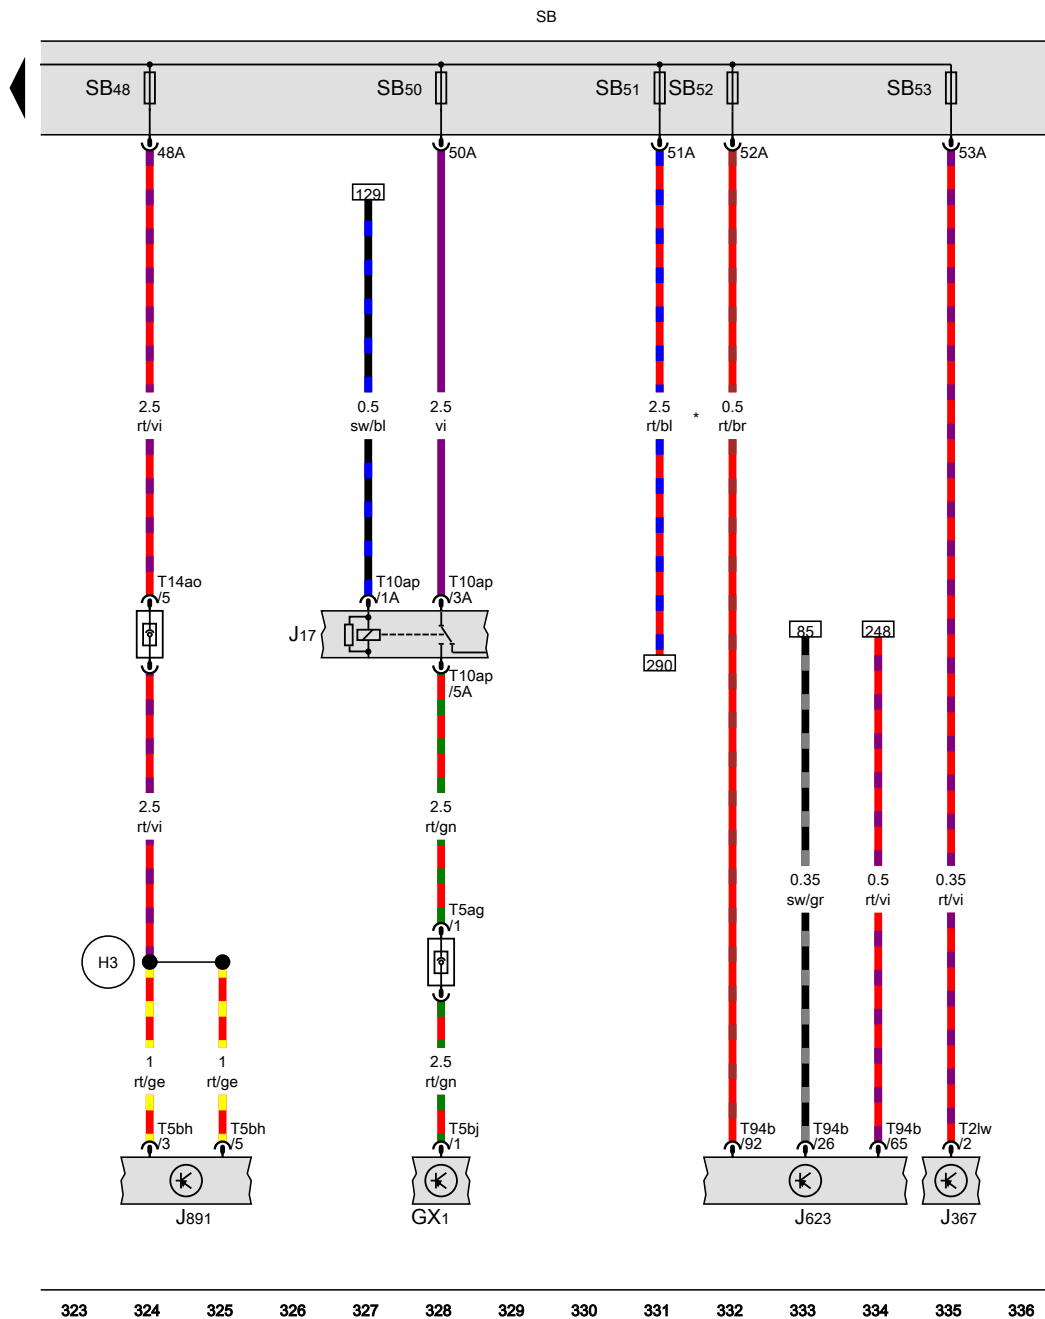

Fuse holder B


- GX1 Fuel delivery unit
- J17 Fuel pump relay
- J367 Battery monitor control unit
- J623 Engine/motor control unit
- J891 Control unit for reducing agent heater
- SB Fuse holder B
- SB48 Fuse 48 on fuse holder B
- SB50 Fuse 50 on fuse holder B
- SB51 Fuse 51 on fuse holder B
- SB52 Fuse 52 on fuse holder B
- SB53 Fuse 53 on fuse holder B
- T2lw 2-pin connector, black
- T5ag 5-pin connector, black
- T5bh 5-pin connector, colourless
- T5bj 5-pin connector, black
- T10ap 10-pin connector, black
- T14ao 14-pin connector, black
- T94b 94-pin connector, black
- H3 Connection 1 in wiring harness for reducing agent tank
- * For models with telematics

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink

1SY0-0012501191

Fuse holder D

- J326 Rotating light relay
- J604 Auxiliary air heater control unit
- J1114 Rotating light control unit
- SD Fuse holder D
- SD1 Fuse 1 on fuse holder D
- SD3 Fuse 3 on fuse holder D
- SD5 Fuse 5 on fuse holder D
- SD6 Fuse 6 on fuse holder D
- SD7 Fuse 7 on fuse holder D
- SD8 Fuse 8 on fuse holder D
- SD9 Fuse 9 on fuse holder D
- SD10 Fuse 10 on fuse holder D
- SD11 Fuse 11 on fuse holder D
- SD12 Fuse 12 on fuse holder D
- T1arq 1-pin connector, colourless
- T5aw 5-pin connector, brown
- T9g 9-pin connector, grey
- T10z 10-pin connector, black
- U4 Two-way radio socket
- * Only applicable to special vehicles
- *2 For models with second battery

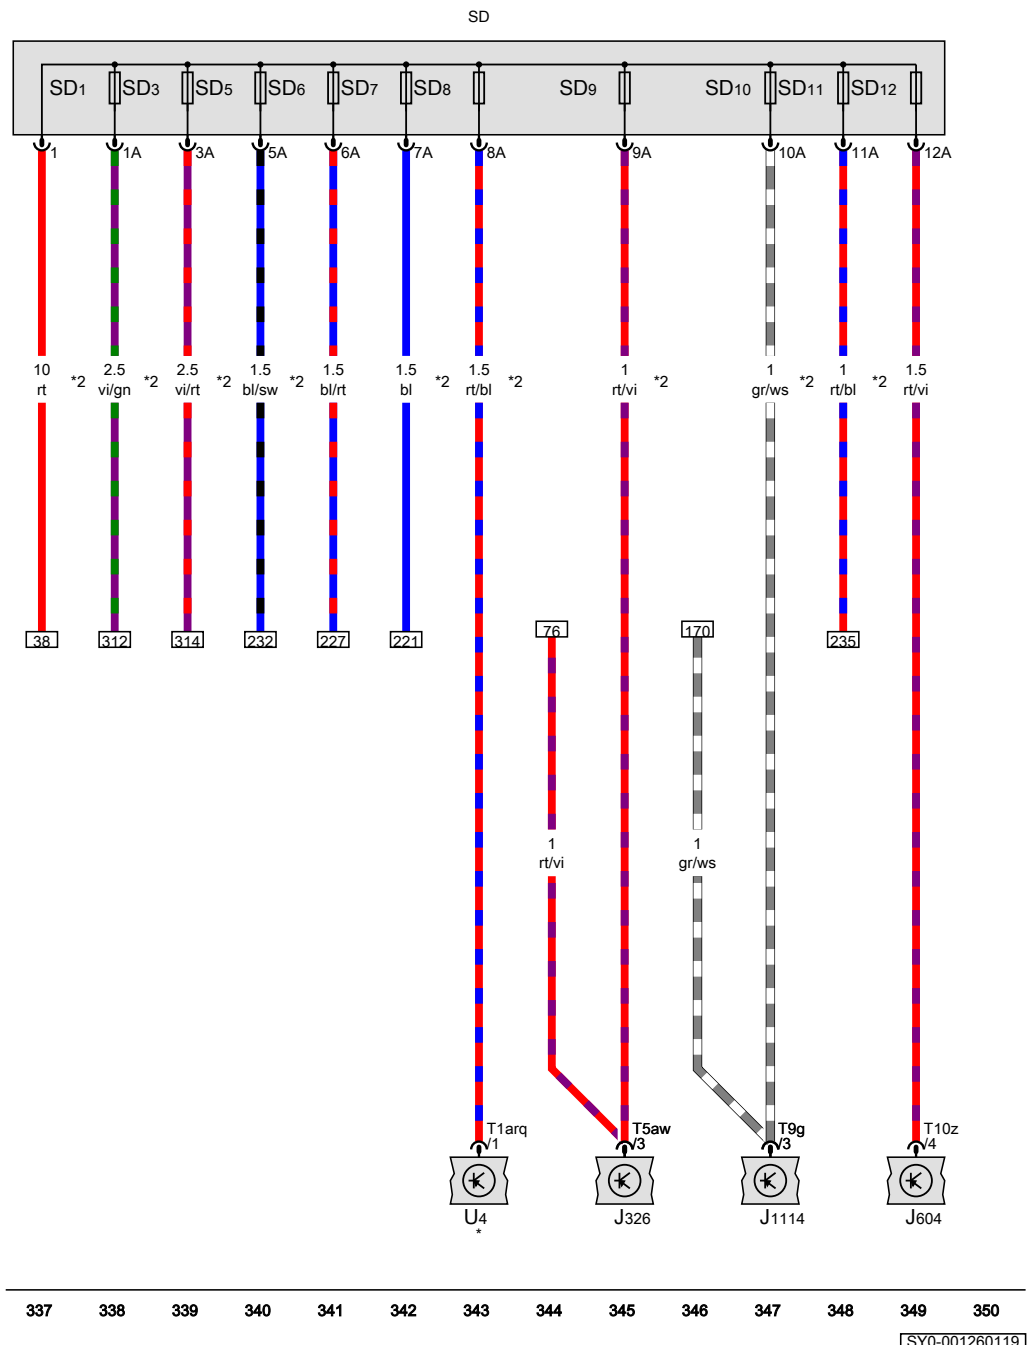


- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

Heated windscreen relay, Heated windscreen relay 2

- J47 Heated windscreen relay
- J611 Heated windscreen relay 2
- T2ny 2-pin connector, black
- T2nz 2-pin connector, black
- T4fr 4-pin connector, black
- T4fs 4-pin connector, black
- Z2 Heated windscreen

B275 Positive connection (87), in main wiring harness

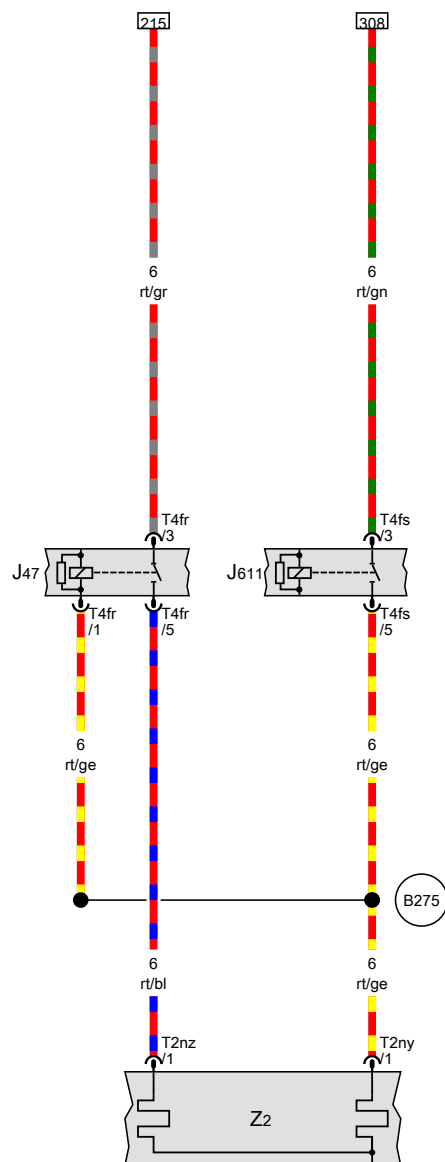


- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

351 352 353 354 355 356 357 358 359 360 361 362 363 364

[SYN-001270119]

CAN and LIN bus networking, powertrain CAN, diagnosis CAN, dash panel CAN, convenience CAN

From September 2016

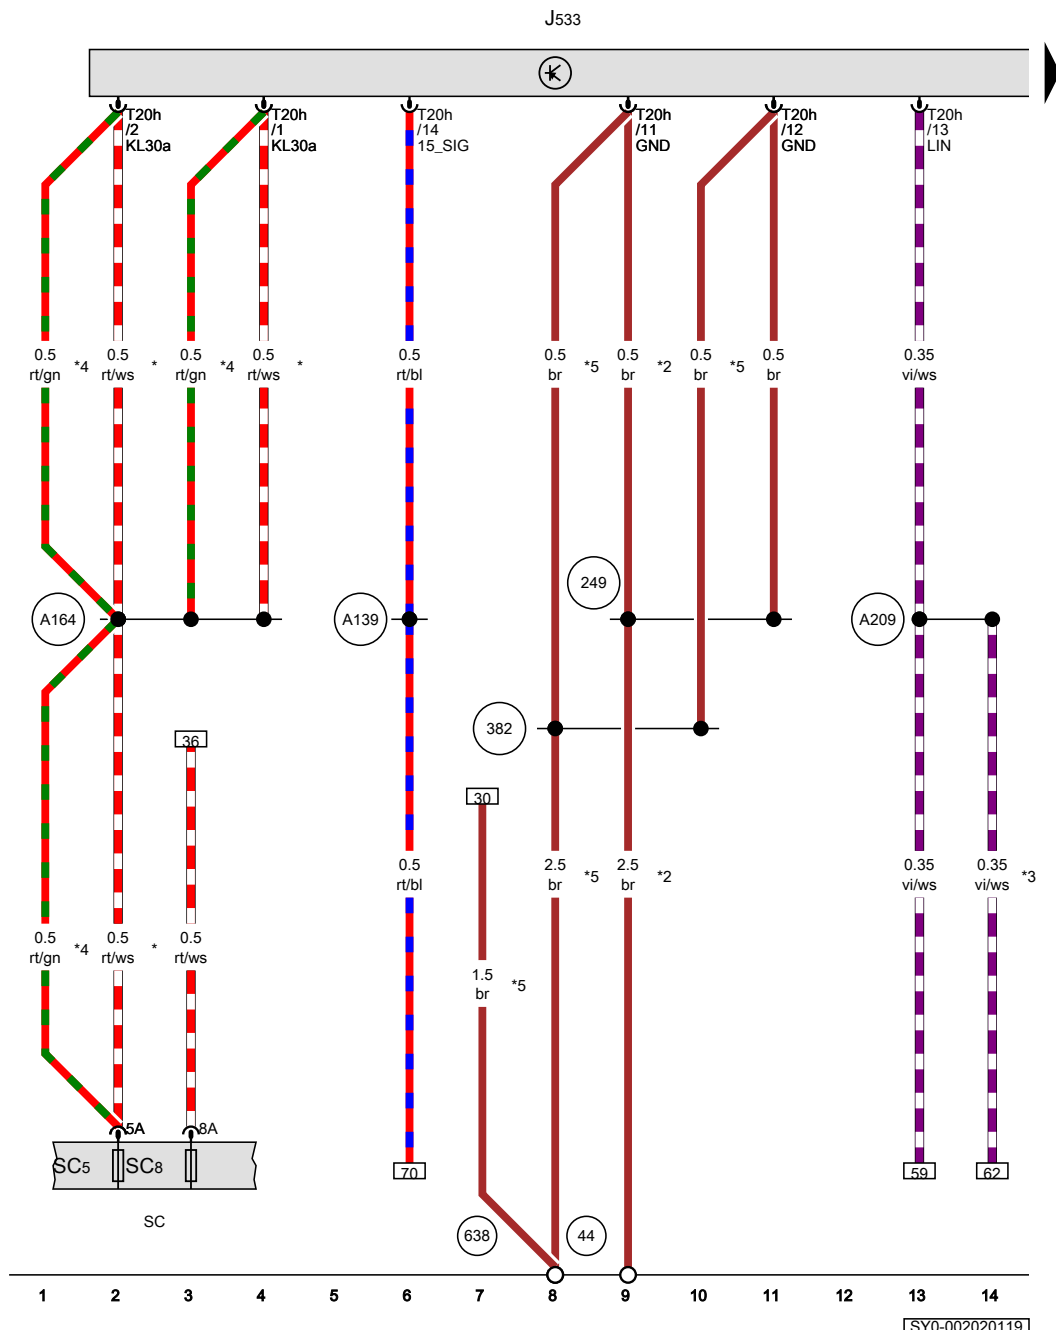

Data bus diagnostic interface

J533 Data bus diagnostic interface

SC Fuse holder C

SC5 Fuse 5 on fuse holder C

SC8 Fuse 8 on fuse holder C

T20h 20-pin connector, red

44 Earth point, lower part of left A-pillar

249 Earth connection 2, in interior wiring harness

382 Earth connection 17, in main wiring harness

638 Earth point, on right A-pillar

A139 Connection 3 (15) in dash panel wiring harness

A164 Positive connection 2 (30a) in dash panel wiring harness

A209 Connection 1 (LIN bus) in dash panel wiring harness

* Up to November 2017

*2 For left-hand drive models

*3 For models with multifunction steering wheel


*4 From November 2017

*5 For right-hand drive models


ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink

Data bus diagnostic interface

J533 Data bus diagnostic interface
T20h 20-pin connector, red

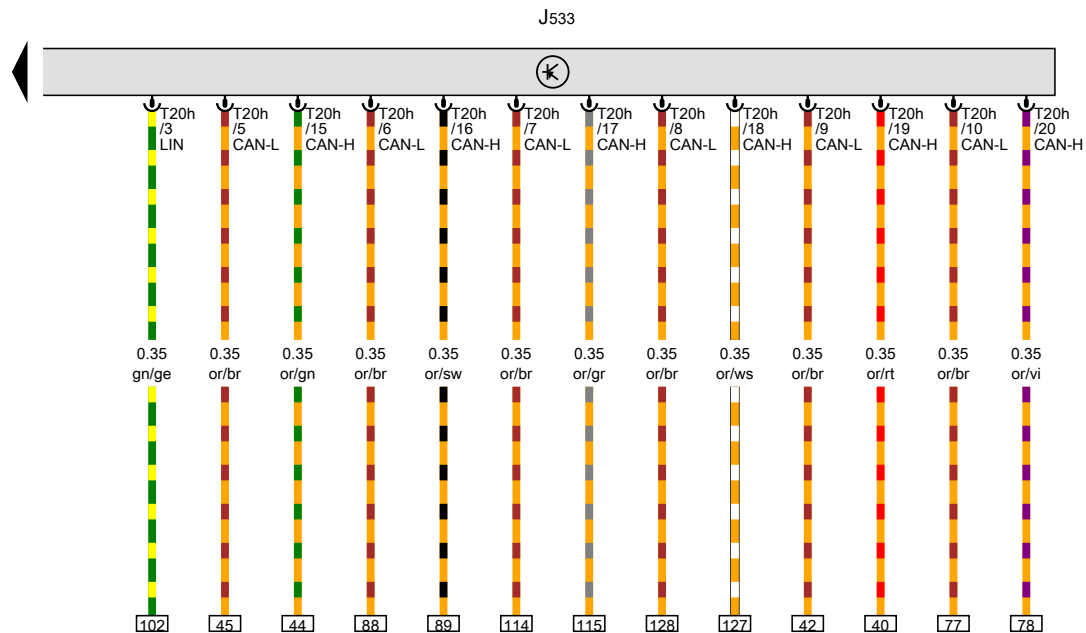

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink

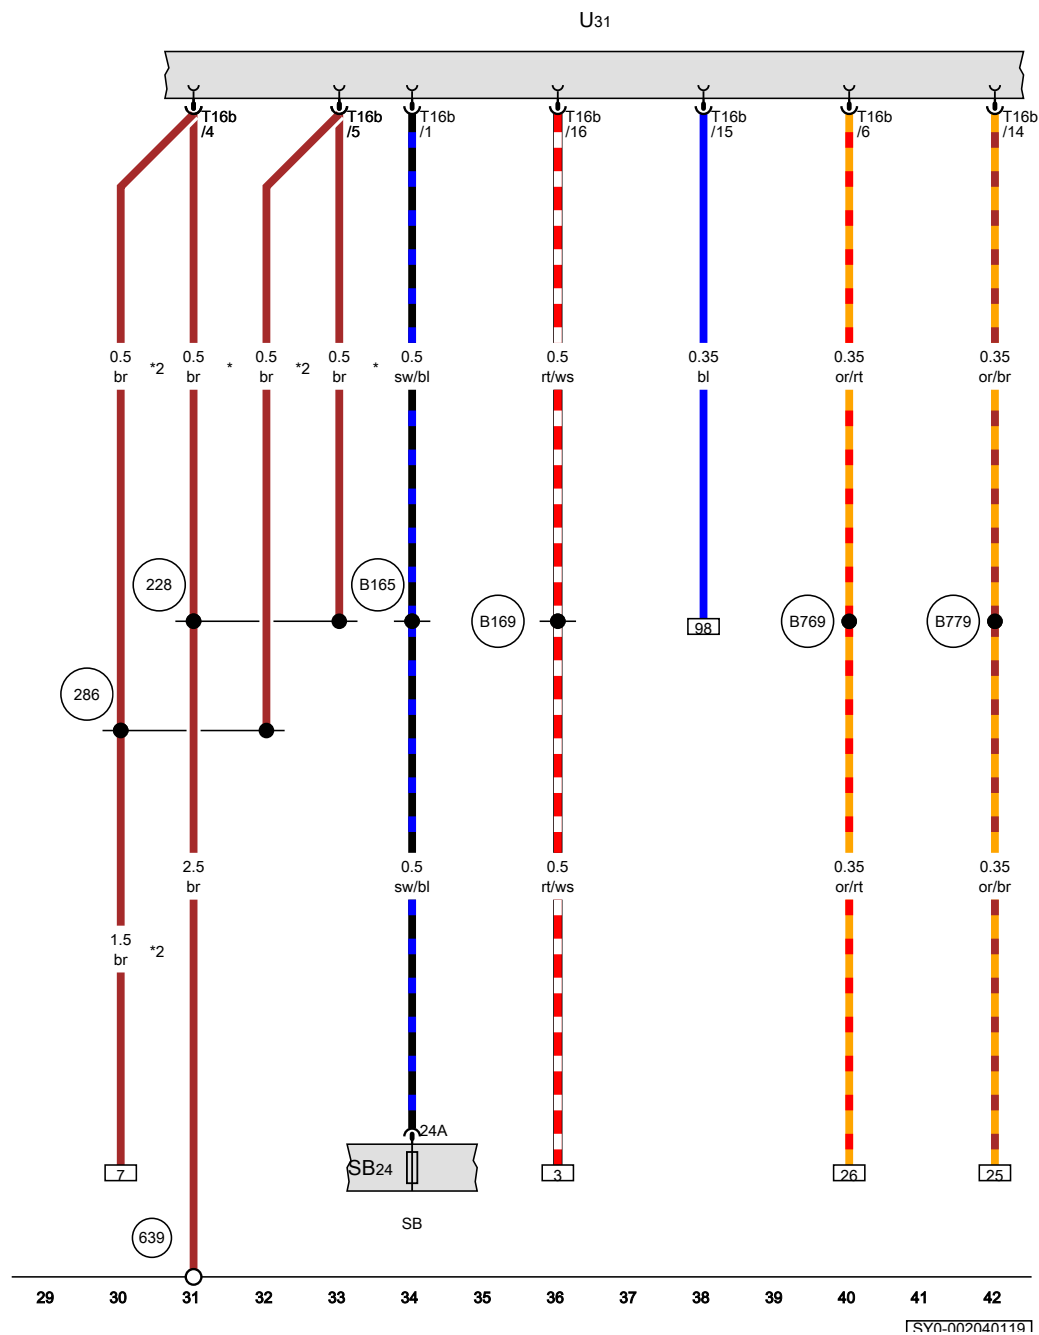

Diagnostic connection


- SB Fuse holder B
- SB24 Fuse 24 on fuse holder B
- T16b 16-pin connector, black
- U31 Diagnostic connection
- 228 Connection, in harness
- 286 Earth connection 8, in interior wiring harness
- 639 Earth point, left A-pillar
- B165 Positive connection 2 (15), in interior wiring harness
- B169 Positive connection 1 (30), in interior wiring harness
- B769 Connection 2 (CAN bus diagnosis, high), in main wiring harness
- B779 Connection 2 (CAN bus diagnosis, low), in main wiring harness
- * For left-hand drive models
- *2 For right-hand drive models

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink


Heater and air conditioning controls, Tachograph, Trailer detector control unit, Special vehicle control unit

- EX21 Heater and air conditioning controls
- G24 Tachograph
- J345 Trailer detector control unit
- J608 Special vehicle control unit
- T8cu 8-pin connector, colourless
- T10y 10-pin connector, black
- T20i 20-pin connector, black
- T20j 20-pin connector, black


- A146 Connection (convenience CAN bus, high), in dash panel wiring harness
- A147 Connection (convenience CAN bus, low), in dash panel wiring harness

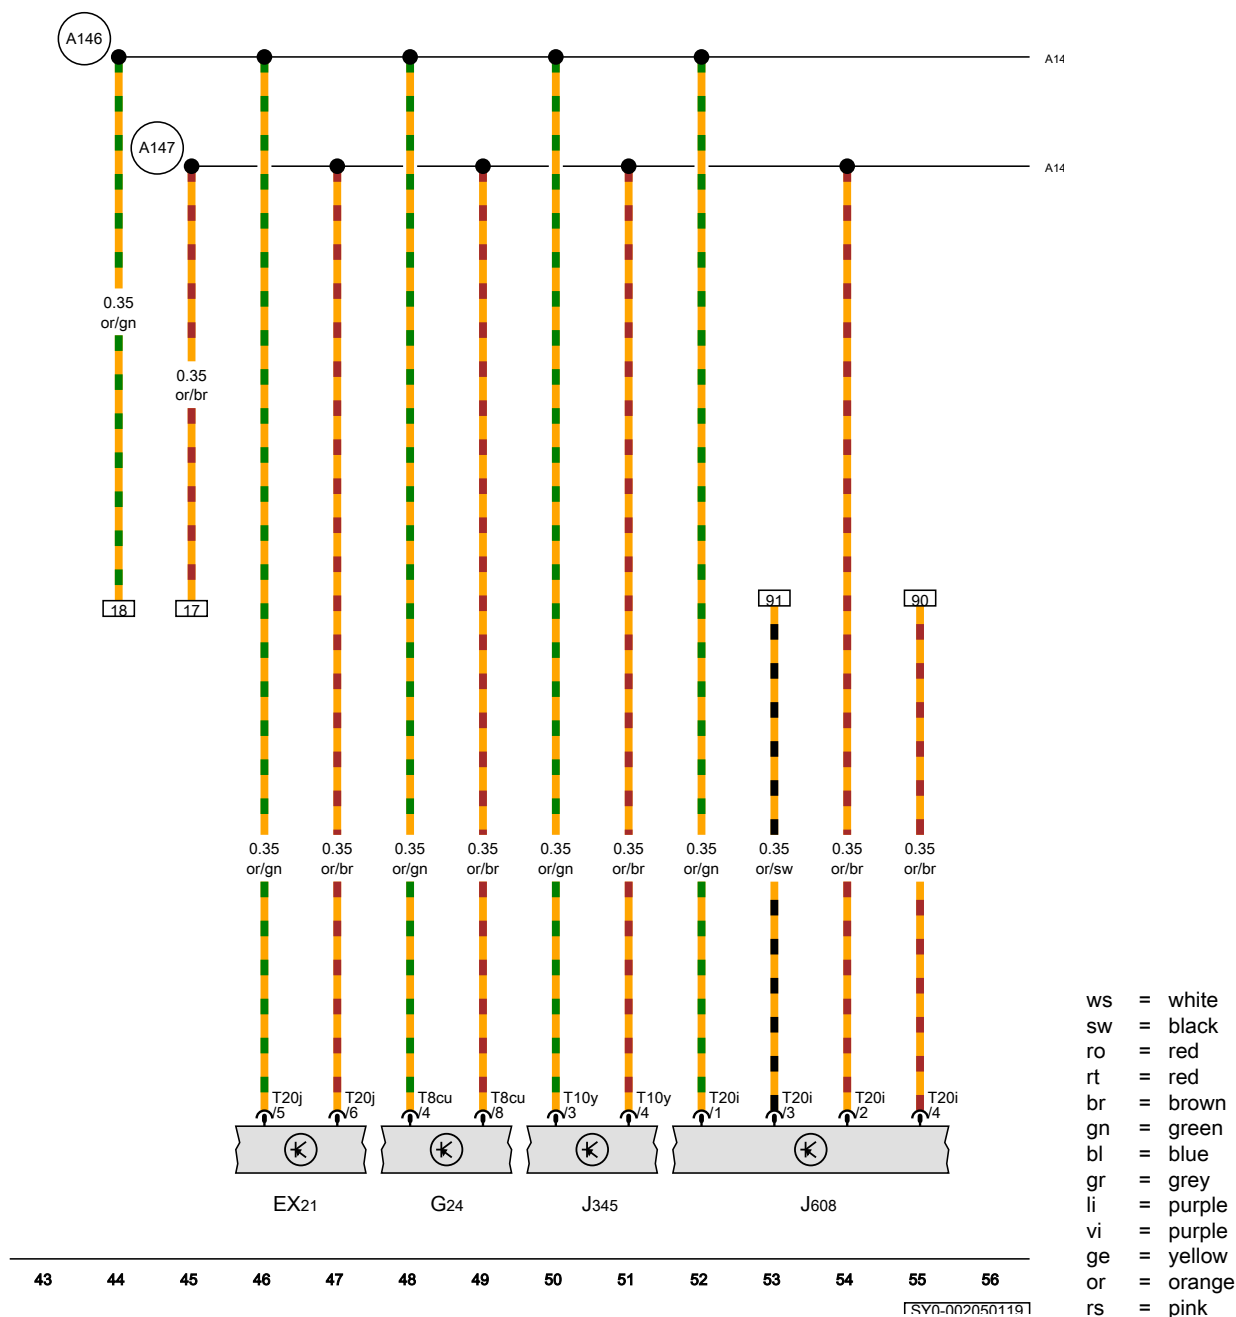

Onboard supply control unit, Steering column electronics control unit, Emergency call module control unit and communication unit, Dash panel insert

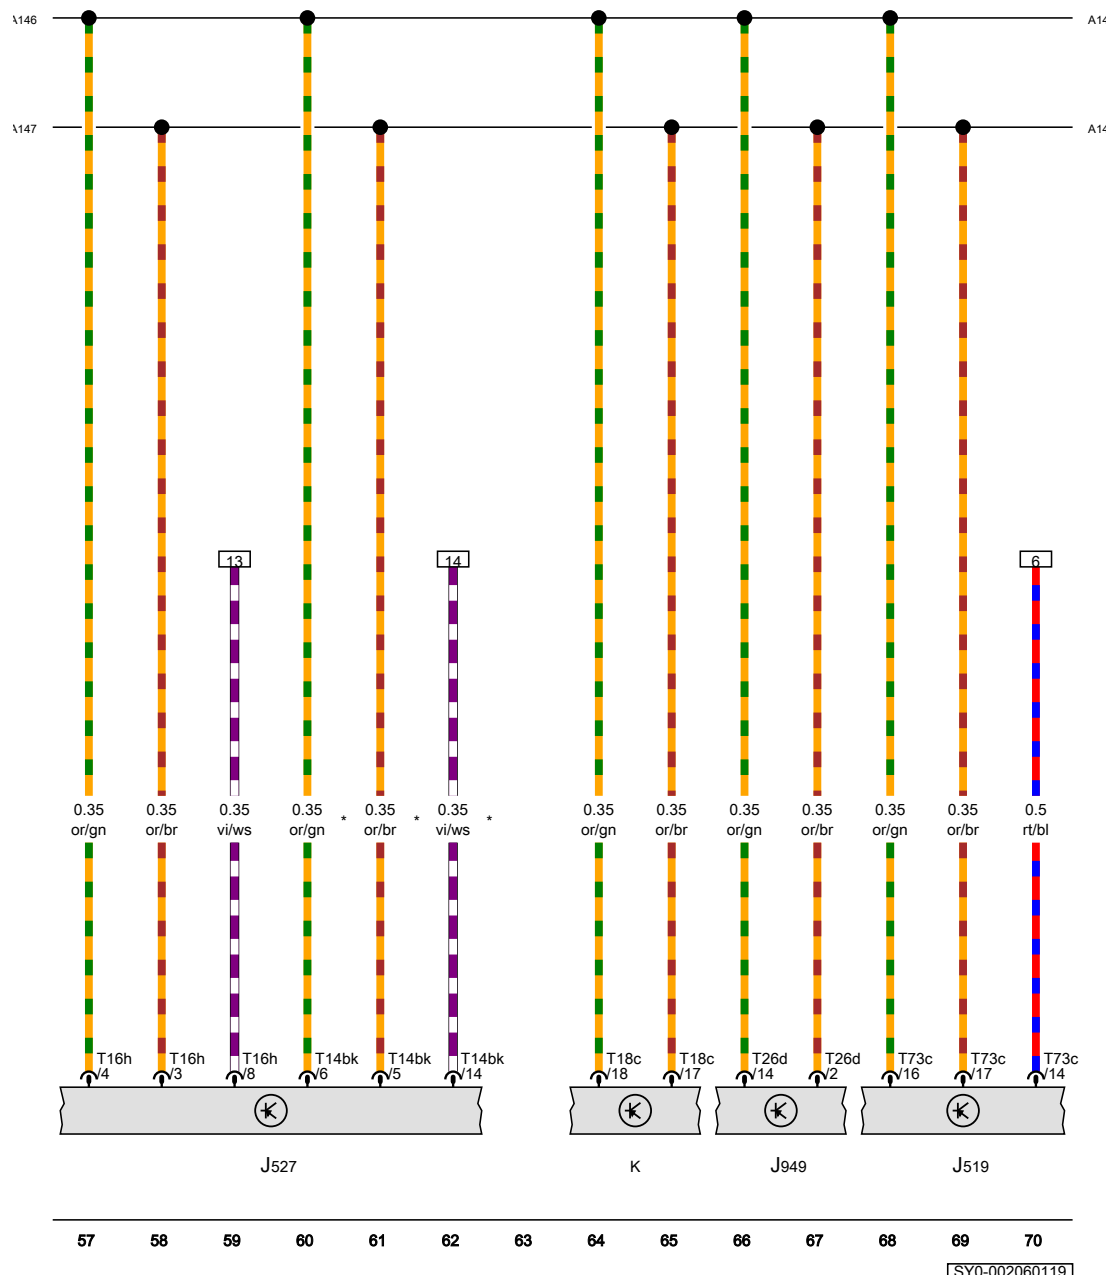

- J519 Onboard supply control unit
- J527 Steering column electronics control unit
- J949 Emergency call module control unit and communication unit
- K Dash panel insert
- T14bk 14-pin connector, black
- T16h 16-pin connector, black
- T18c 18-pin connector, black
- T26d 26-pin connector, black
- T73c 73-pin connector, black
- A146 Connection (convenience CAN bus, high), in dash panel wiring harness
- A147 Connection (convenience CAN bus, low), in dash panel wiring harness
- * For models with multifunction steering wheel

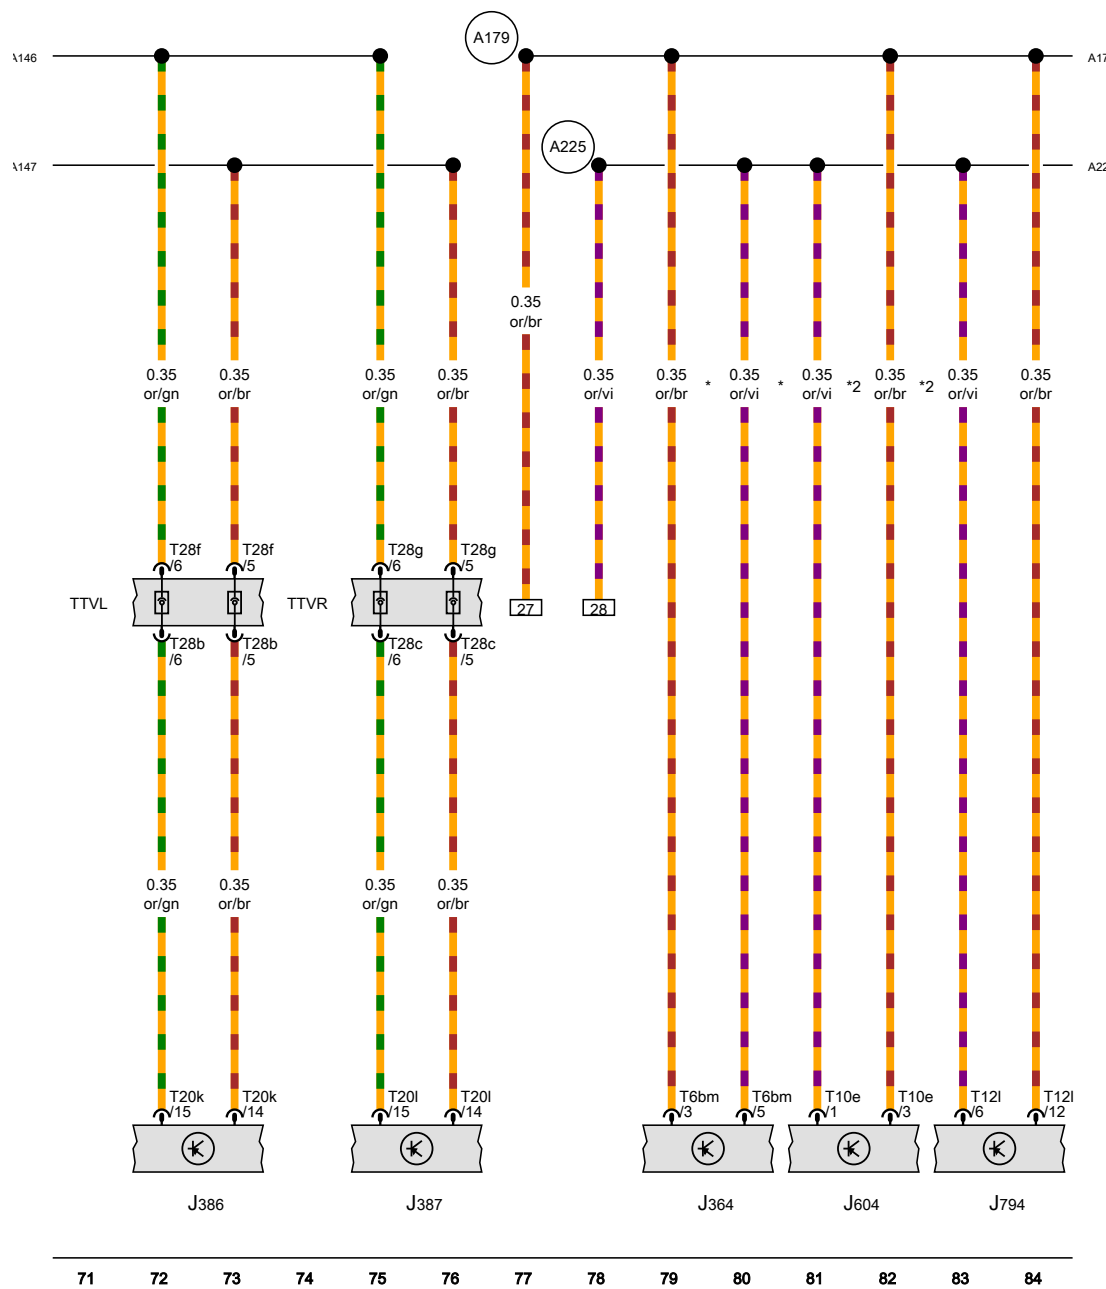

Auxiliary heater control unit, Driver door control unit, Front passenger door control unit, Auxiliary air heater control unit, Control unit 1 for information electronics

- J364 Auxiliary heater control unit
- J386 Driver door control unit
- J387 Front passenger door control unit
- J604 Auxiliary air heater control unit
- J794 Control unit 1 for information electronics
- T6bm 6-pin connector, black
- T10e 10-pin connector, black
- T12l 12-pin connector, grey
- T20k 20-pin connector, black
- T20l 20-pin connector, black
- T28b 28-pin connector, black
- T28c 28-pin connector, black
- T28f 28-pin connector, black
- T28g 28-pin connector, black
- TTVL Coupling point for front left door
- TTVR Coupling point for front right door

A146 Connection (convenience CAN bus, high), in dash panel wiring harness

A147 Connection (convenience CAN bus, low), in dash panel wiring harness

A179 Connection (infotainment CAN bus, low), in dash panel wiring harness

A225 Connection 2 (infotainment CAN bus, high) in dash panel wiring harness

* Only models with auxiliary coolant heater

*2 For models with auxiliary air heater


ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

1SY0-002070119


Automatic gearbox control unit, Airbag control unit, Camera for trailer manoeuvring system

- | | |
|-------|---------------------------------------|
| J217 | Automatic gearbox control unit |
| J234 | Airbag control unit |
| R368 | Camera for trailer manoeuvring system |
| T8dn | 8-pin connector, black |
| T16f | 16-pin connector, black |
| T17aa | 17-pin connector, black |
| T17v | 17-pin connector, black |
| T81b | 81-pin connector, black |
| T90f | 90-pin connector, yellow |
| TTHL | Coupling point for rear left door |

- | | |
|------|--|
| A179 | Connection (infotainment CAN bus, low), in dash panel wiring harness |
| A225 | Connection 2 (infotainment CAN bus, high) in dash panel wiring harness |
| A237 | Connection 1 (powertrain CAN bus, low), in dash panel wiring harness |
| B383 | Connection 1 (powertrain CAN bus, high), in main wiring harness |
| * | According to equipment |

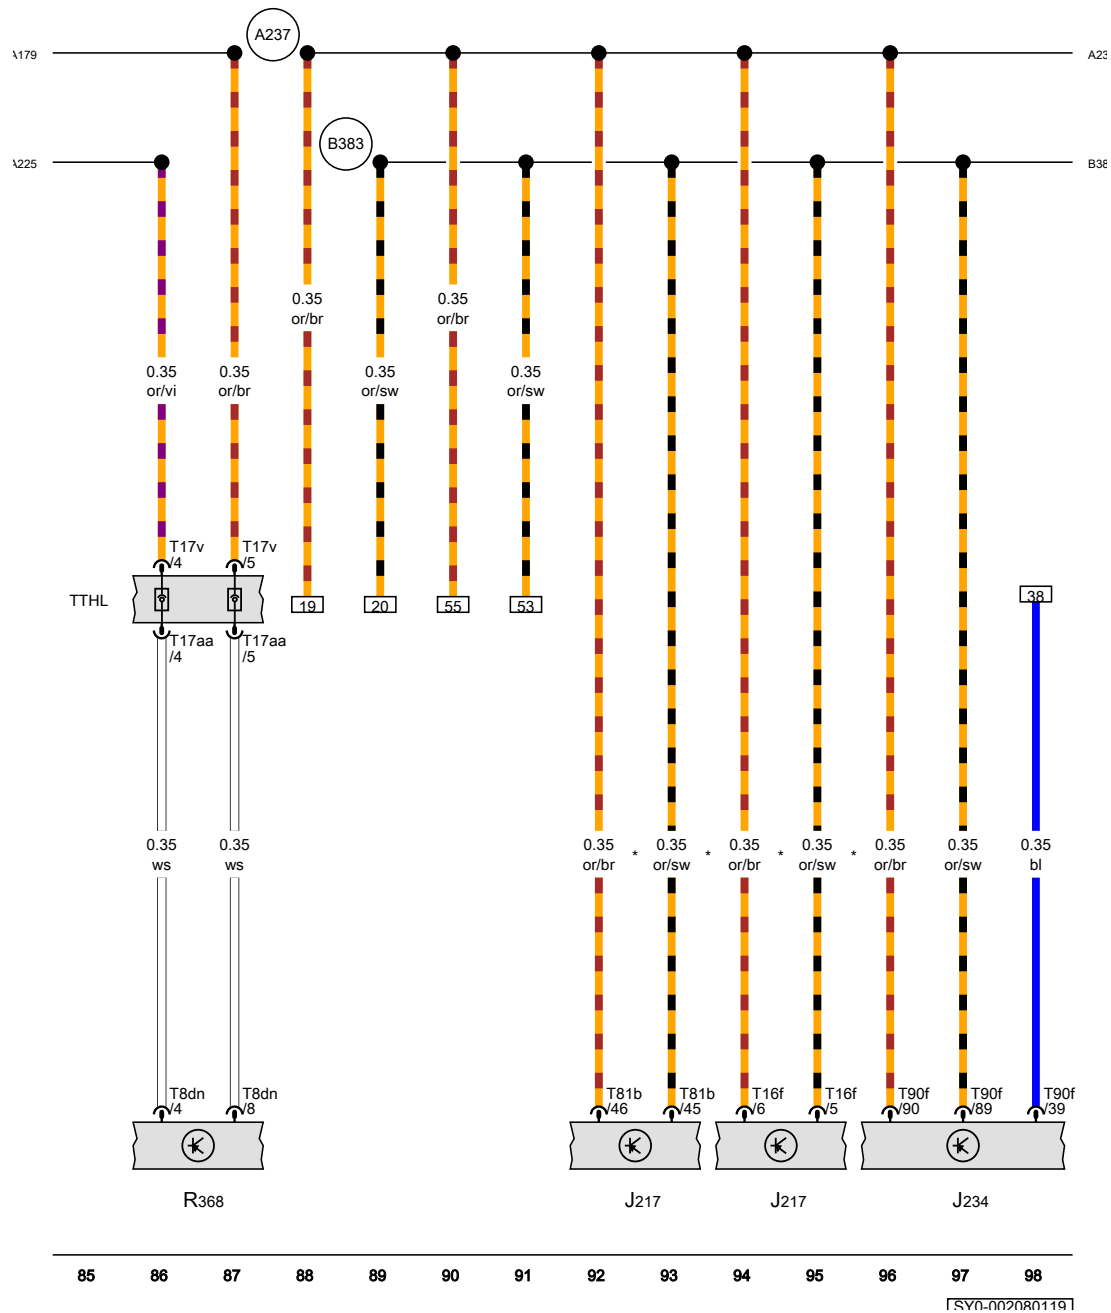

[SYN-002080119]

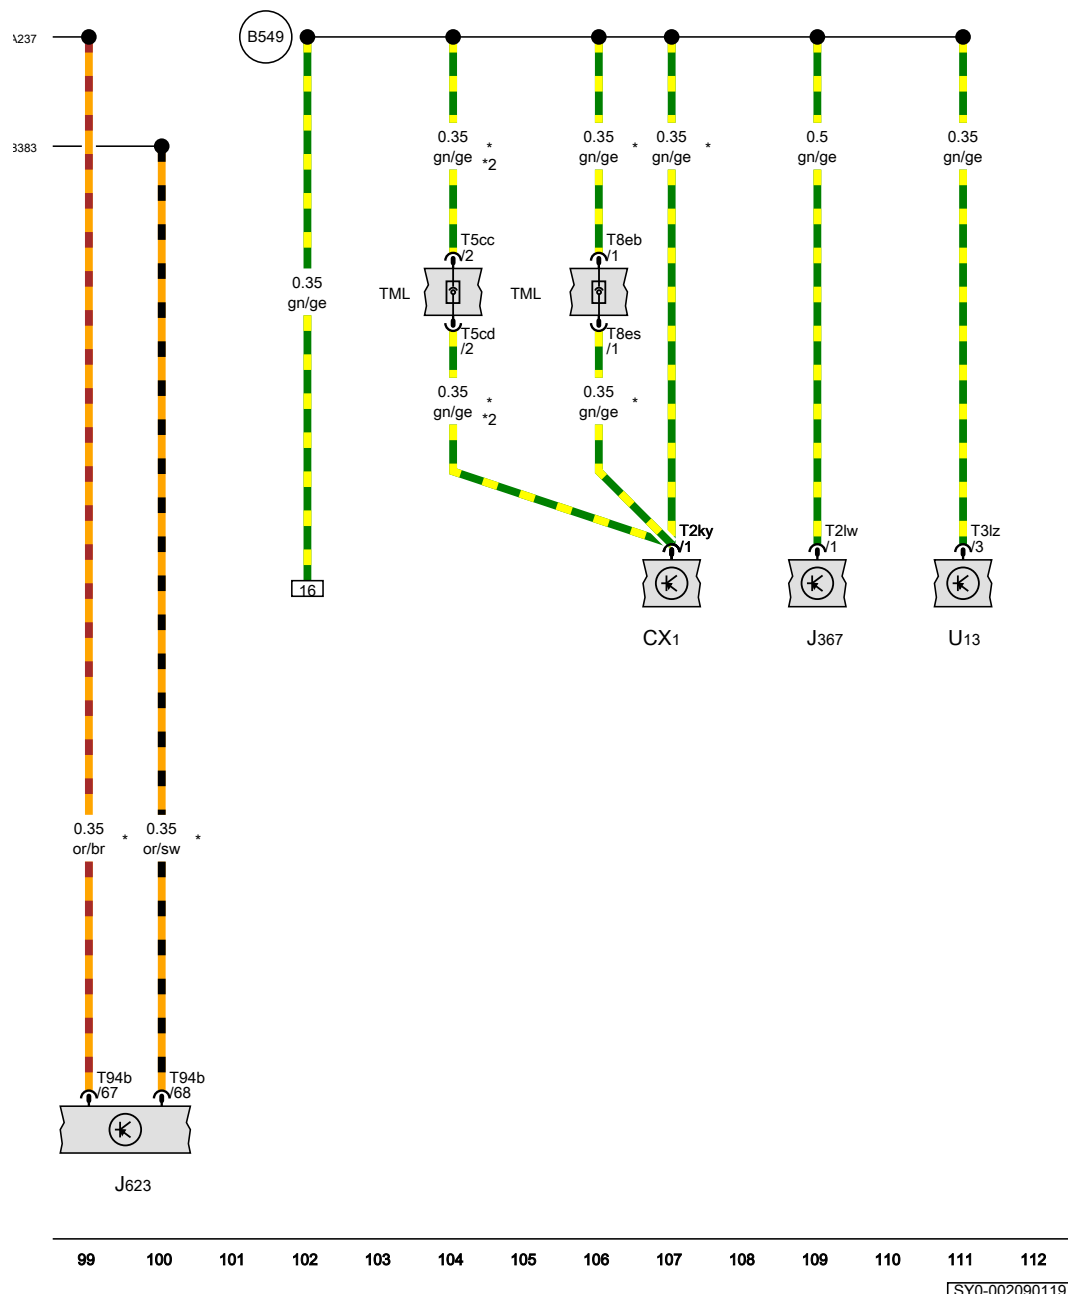

Alternator with voltage regulator, Battery monitor control unit, Engine/motor control unit, DC/AC converter with socket, 12 V - 230 V

- CX1 Alternator with voltage regulator
- J367 Battery monitor control unit
- J623 Engine/motor control unit
- T2ky 2-pin connector, black
- T2lw 2-pin connector, black
- T3lz 3-pin connector, brown
- T5cc 5-pin connector, black
- T5cd 5-pin connector, black
- T8eb 8-pin connector, black
- T8es 8-pin connector, black
- T94b 94-pin connector, black
- TML Coupling point in engine compartment, left
- U13 DC/AC converter with socket, 12 V - 230 V

- A237 Connection 1 (powertrain CAN bus, low), in dash panel wiring harness
- B383 Connection 1 (powertrain CAN bus, high), in main wiring harness
- B549 Connection 2 (LIN bus) in main wiring harness

* According to equipment
*2 From May 2017


ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink


Adaptive cruise control unit, Tyre Pressure Monitoring System control unit, Blind Spot Monitor control unit, Front camera for driver assist systems

- J428 Adaptive cruise control unit
- J502 Tyre Pressure Monitoring System control unit
- J1086 Blind Spot Monitor control unit
- R242 Front camera for driver assist systems
- T4eo 4-pin connector, grey
- T7aj 7-pin connector, black
- T8cb 8-pin connector, black
- T8cs 8-pin connector, black
- T8dx 8-pin connector, black
- T12q 12-pin connector, black
- TMUL Coupling point on engine, bottom left

B109 Connection 1 (CAN bus extended low), in main wiring harness

B668 Connection 2 (CAN bus extended high), in main wiring harness

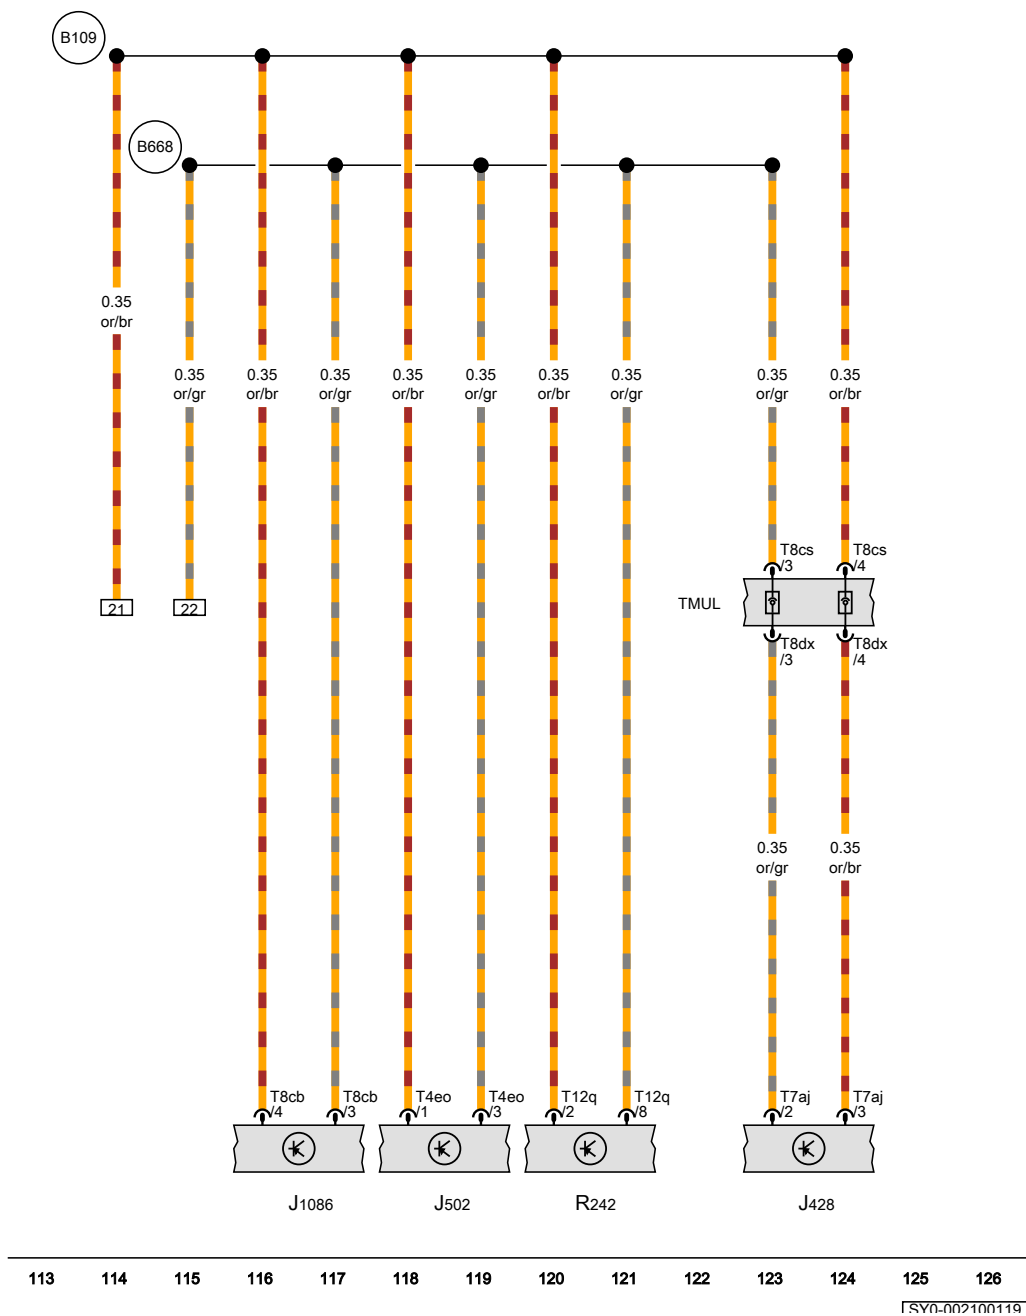

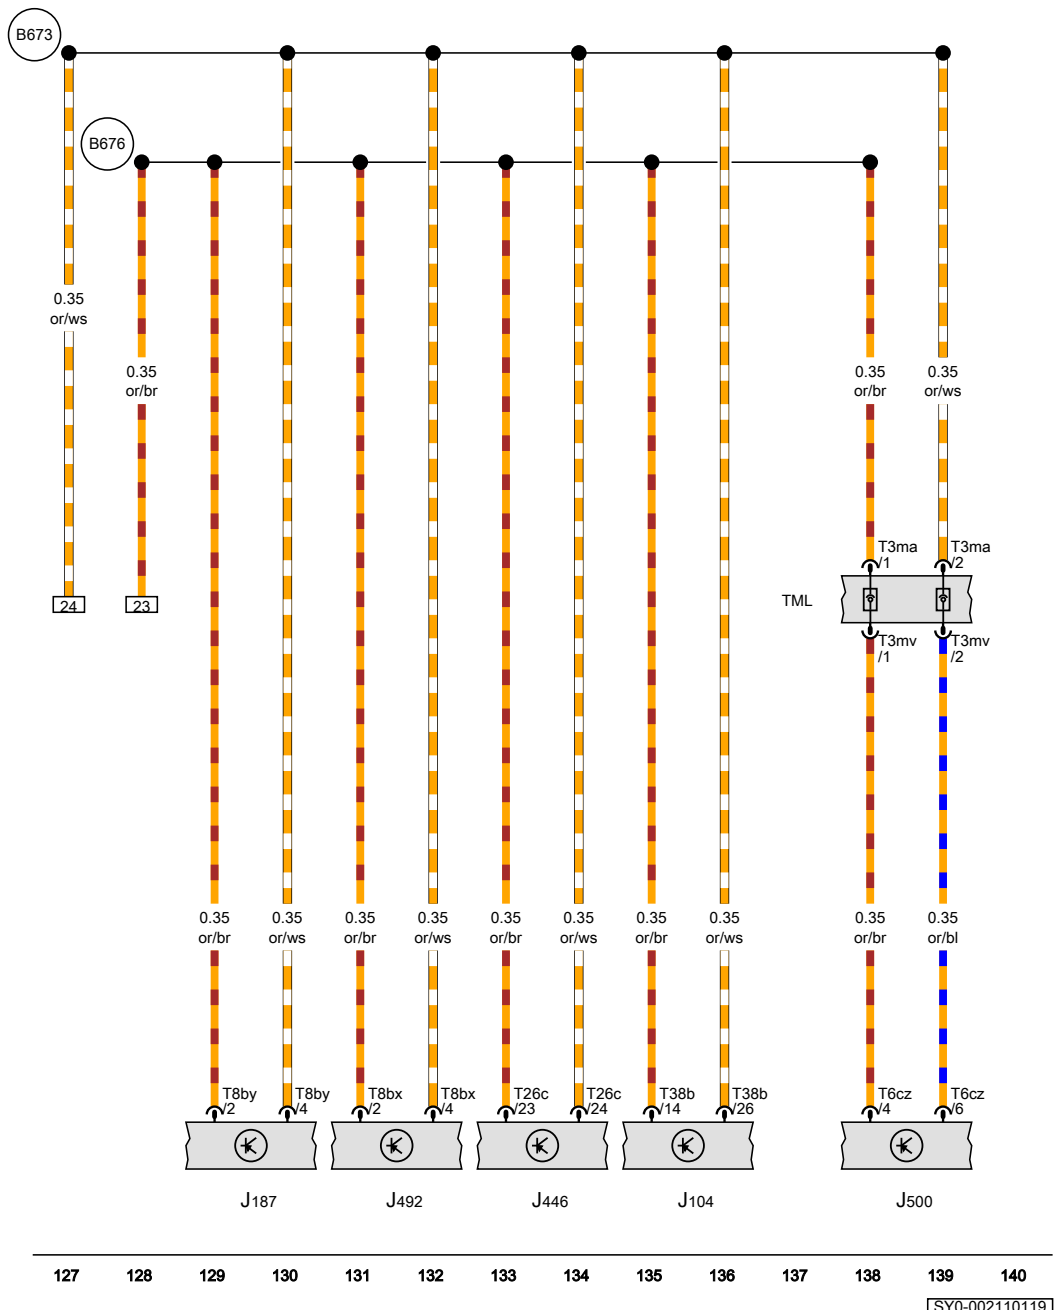

ABS control unit, Differential lock control unit, Parking aid control unit, All-wheel drive control unit, Power steering control unit

J104	ABS control unit
J187	Differential lock control unit
J446	Parking aid control unit
J492	All-wheel drive control unit
J500	Power steering control unit
T3ma	3-pin connector, black
T3mv	3-pin connector, black
T6cz	6-pin connector, black
T8bx	8-pin connector, black
T8by	8-pin connector, black
T26c	26-pin connector, black
T38b	38-pin connector, brown
TML	Coupling point in engine compartment, left

B673 Connection 2 (running gear/dash panel insert CAN bus, high), in main wiring harness


B676 Connection 1 (running gear/dash panel insert CAN bus, low), in main wiring harness

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink

Trailer coupling , (1D1),(1D2),(1D7),(1D8)

From September 2016

Trailer detector control unit, Fuse holder B

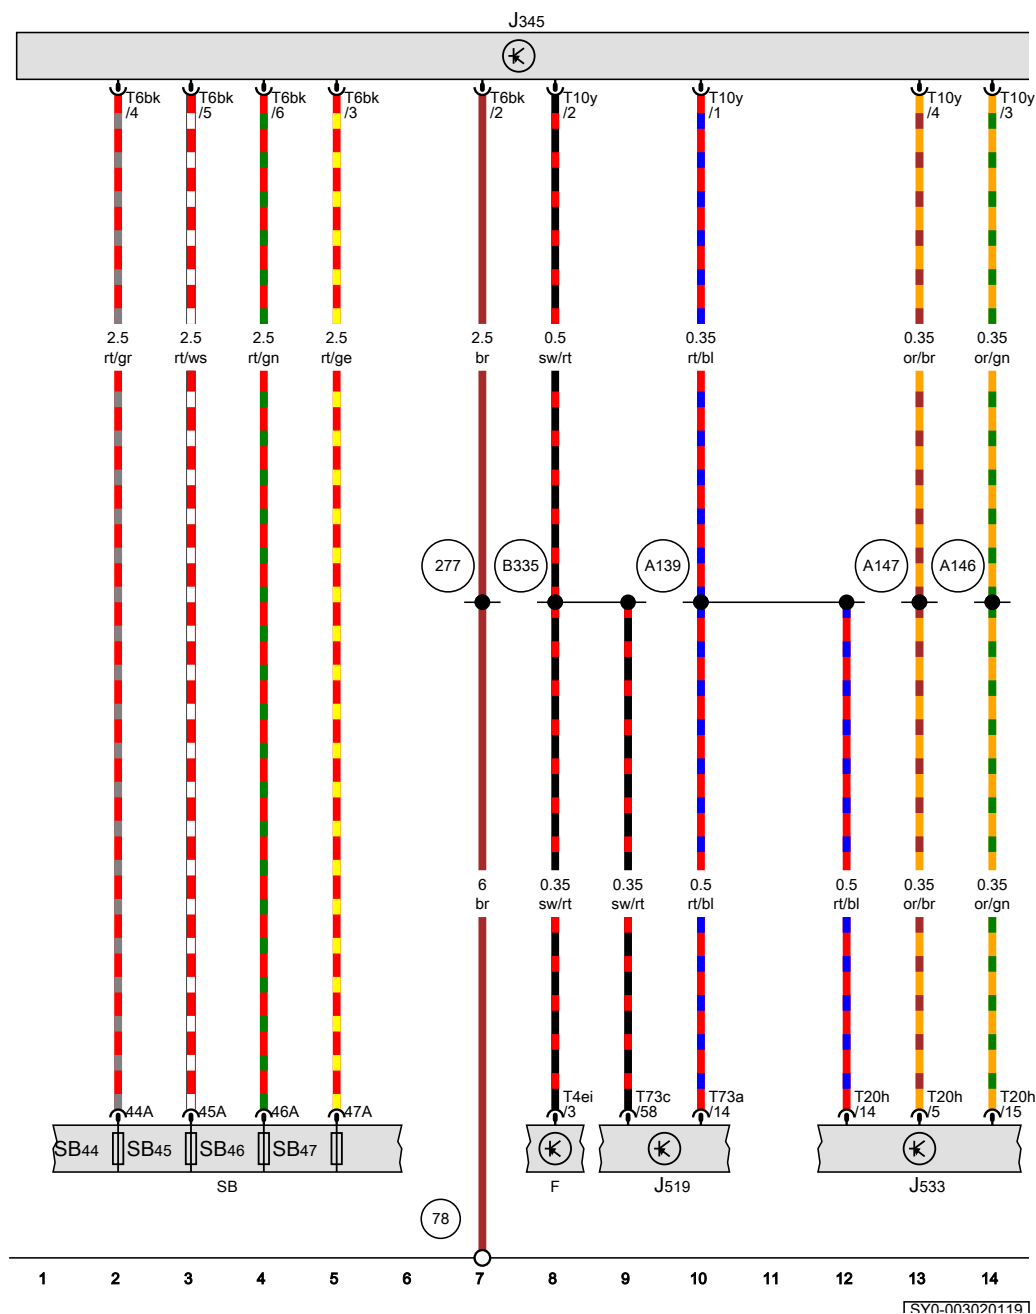

- F Brake light switch
- J345 Trailer detector control unit
- J519 Onboard supply control unit
- J533 Data bus diagnostic interface
- SB Fuse holder B
- SB44 Fuse 44 on fuse holder B
- SB45 Fuse 45 on fuse holder B
- SB46 Fuse 46 on fuse holder B
- SB47 Fuse 47 on fuse holder B
- T4ei 4-pin connector, black
- T6bk 6-pin connector, black
- T10y 10-pin connector, black
- T20h 20-pin connector, red
- T73a 73-pin connector, black
- T73c 73-pin connector, black


- 78 Earth point, lower part of right B-pillar
- 277 Earth connection 3, in interior wiring harness
- A139 Connection 3 (15) in dash panel wiring harness
- A146 Connection (convenience CAN bus, high), in dash panel wiring harness
- A147 Connection (convenience CAN bus, low), in dash panel wiring harness
- B335 Connection 1 (54), in main wiring harness

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

Trailer detector control unit, Trailer socket

J345 Trailer detector control unit
 T13b 13-pin connector, black
 T14aw 14-pin connector, black
 T24e 24-pin connector, black
 U10 Trailer socket

459 Earth connection 15, in interior wiring harness
 711 Earth point 3 on rear left longitudinal member

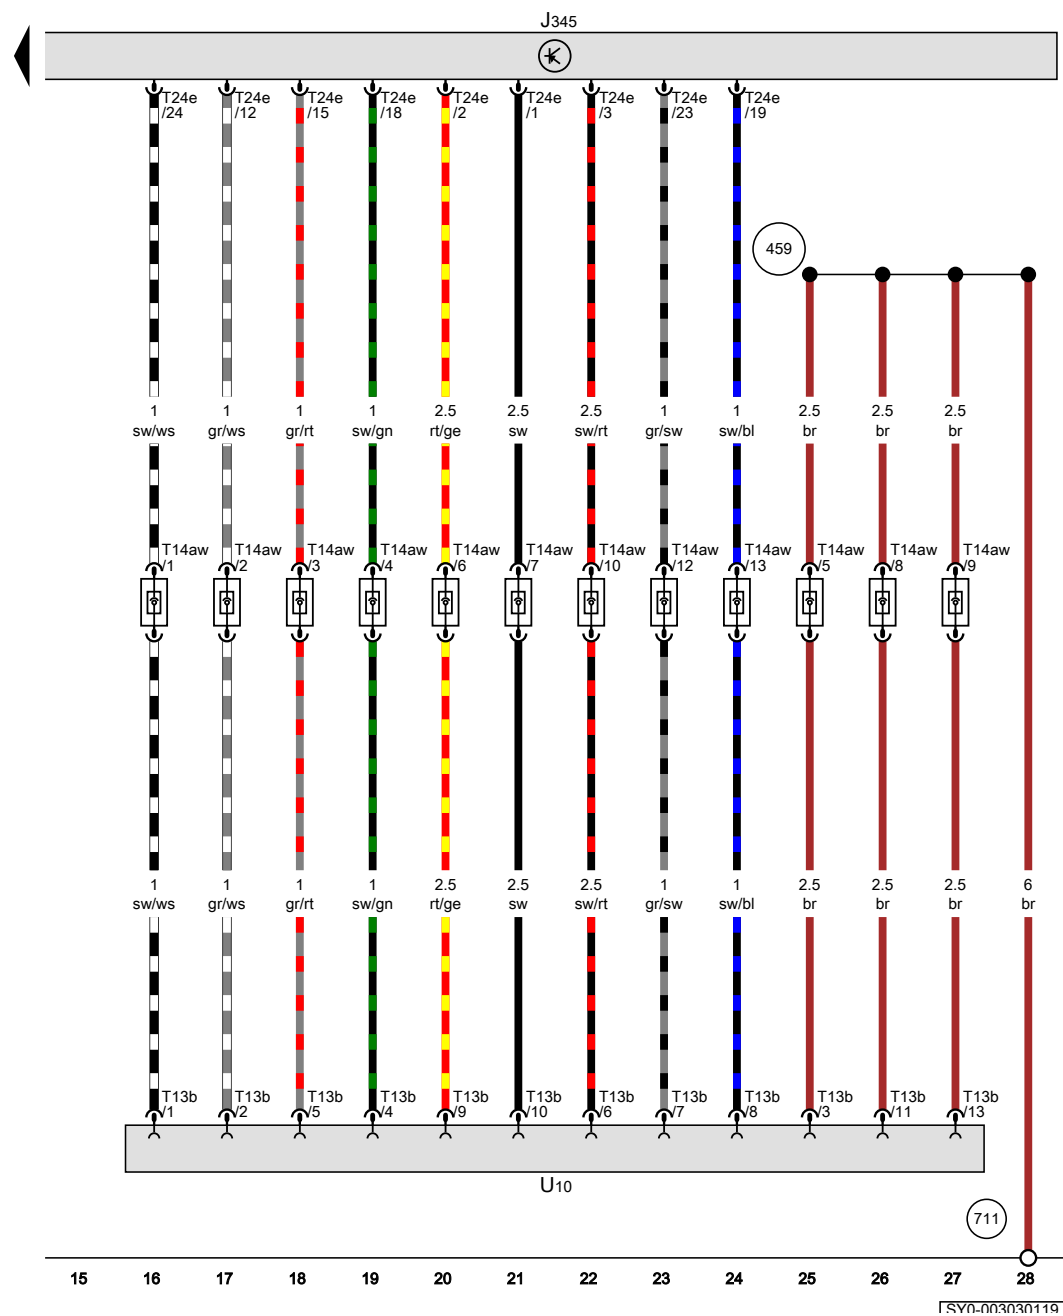


Adaptive cruise control , (6K2),(6K3)

From September 2016

Adaptive cruise control unit, Fuse holder B


- J428 Adaptive cruise control unit
- J533 Data bus diagnostic interface
- R242 Front camera for driver assist systems
- SB Fuse holder B
- SB27 Fuse 27 on fuse holder B
- T7aj 7-pin connector, black
- T8cs 8-pin connector, black
- T8dx 8-pin connector, black
- T12q 12-pin connector, black
- T20h 20-pin connector, red
- TMUL Coupling point on engine, bottom left

- 84 Earth connection, engine block, in front right wiring harness
- 119 Earth connection 1, in headlight wiring harness
- 655 Earth point, on left headlight
- A199 Positive connection 4 (15a) in dash panel wiring harness
- B108 Connection 1 (CAN bus extended high), in main wiring harness
- B109 Connection 1 (CAN bus extended low), in main wiring harness
- B668 Connection 2 (CAN bus extended high), in main wiring harness
- B669 Connection 2 (CAN bus extended low), in main wiring harness
- * According to equipment
- *2 From May 2017

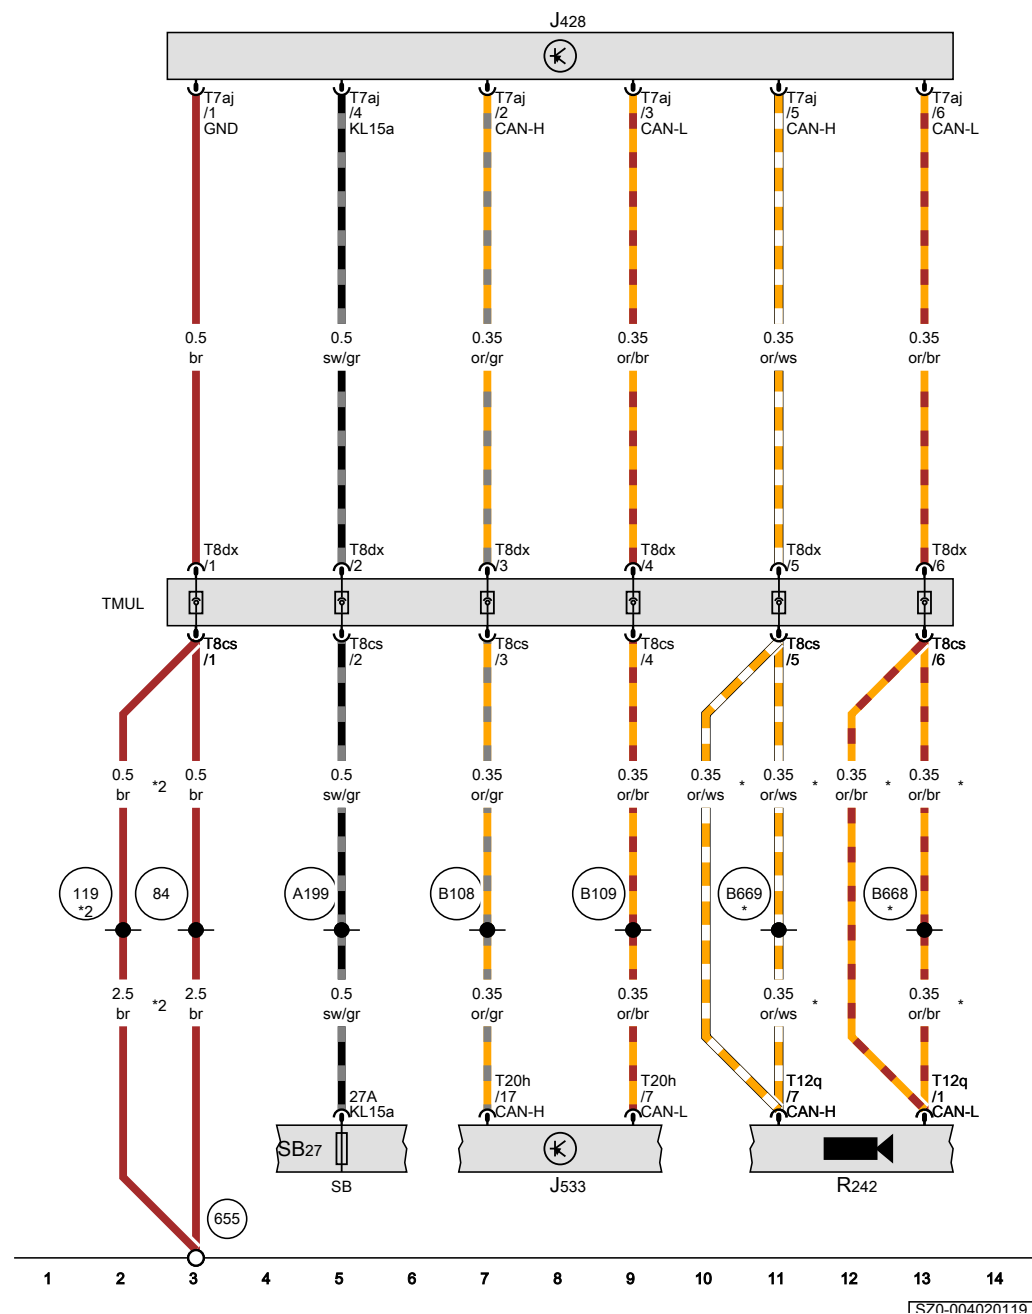


Electronic logbook, chip card reader unit , (9ND),(9NE),(9NZ)

From September 2016

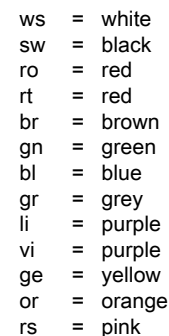

G24	Tachograph
J519	Onboard supply control unit
J533	Data bus diagnostic interface
R999	Wiring open end
SB	Fuse holder B
SC	Fuse holder C
SC9	Fuse 9 on fuse holder C
SB24	Fuse 24 on fuse holder B
T8cu	8-pin connector, colourless
T8cv	8-pin connector, brown
T20h	20-pin connector, red
T73c	73-pin connector, black

- | | |
|------|--|
| 249 | Earth connection 2, in interior wiring harness |
| 638 | Earth point, on right A-pillar |
| 687 | Earth point 1, on centre tunnel |
| A19 | Connection (58d), in dash panel wiring harness |
| A146 | Connection (convenience CAN bus, high), in dash panel wiring harness |
| A147 | Connection (convenience CAN bus, low), in dash panel wiring harness |
| B165 | Positive connection 2 (15), in interior wiring harness |
| * | For left-hand drive models |
| *2 | For right-hand drive models |
| *3 | Only applicable to special vehicles |
| *4 | Up to November 2017 |
| *5 | From November 2017 |

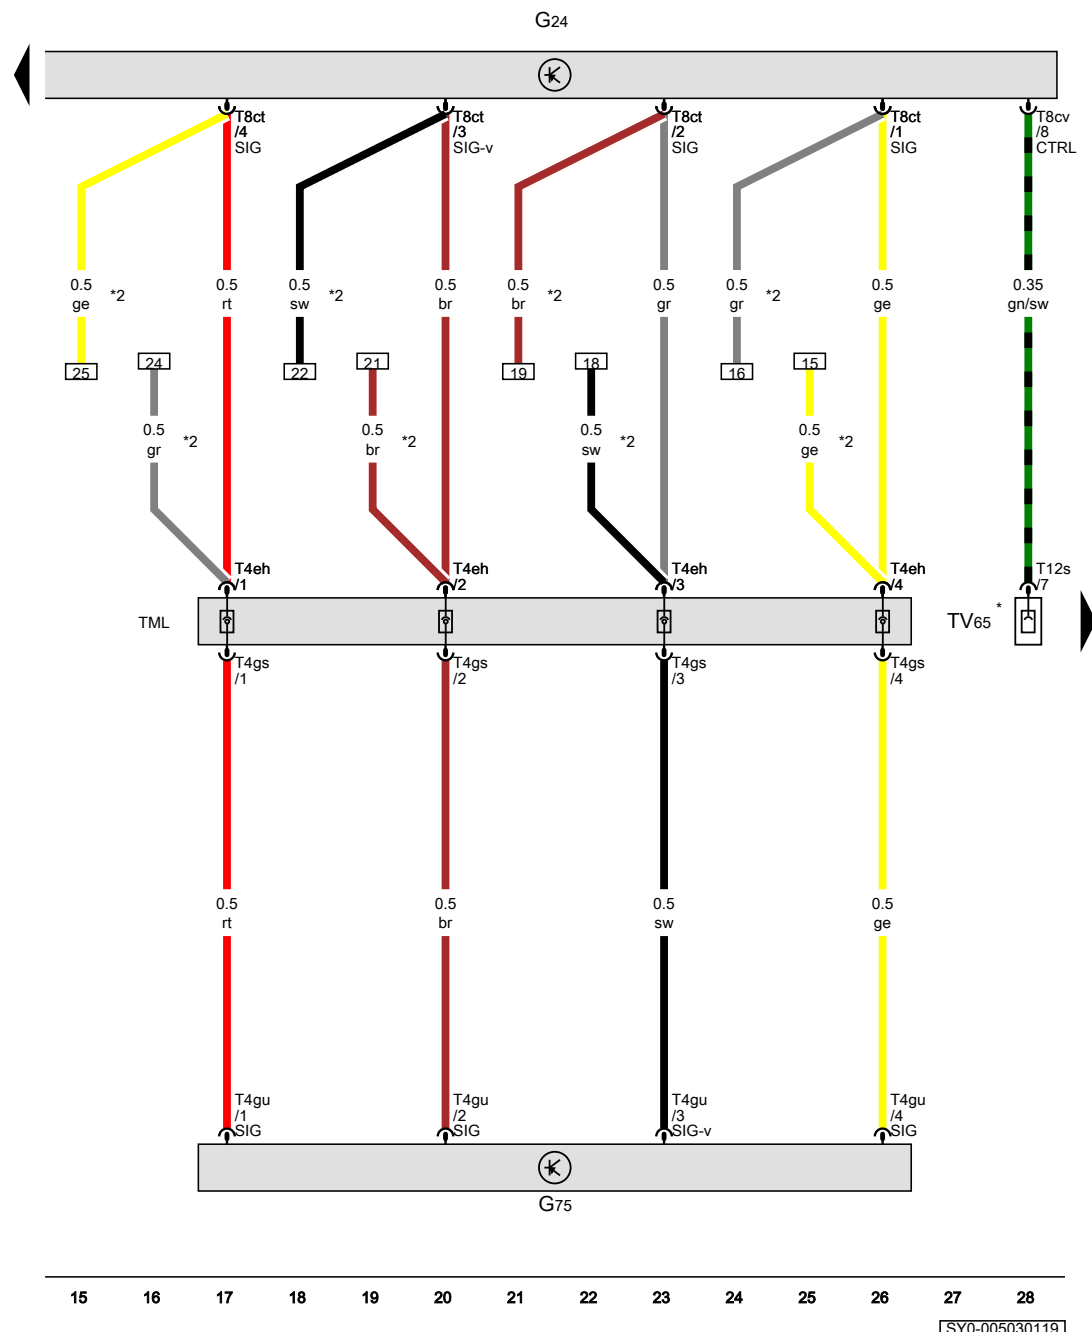

Tachograph, Tachograph sender


- G24 Tachograph
- G75 Tachograph sender
- T4eh 4-pin connector, black
- T4gs 4-pin connector, black
- T4gu 4-pin connector, black
- T8ct 8-pin connector, yellow
- T8cv 8-pin connector, brown
- T12s 12-pin connector, green
- TML Coupling point in engine compartment, left
- TV65 Electrical terminal strip for external use
- * For models with telematics
- *2 From May 2017

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

Front camera for driver assist systems

From September 2016

Front camera for driver assist systems, Windscreen heater for lane departure warning

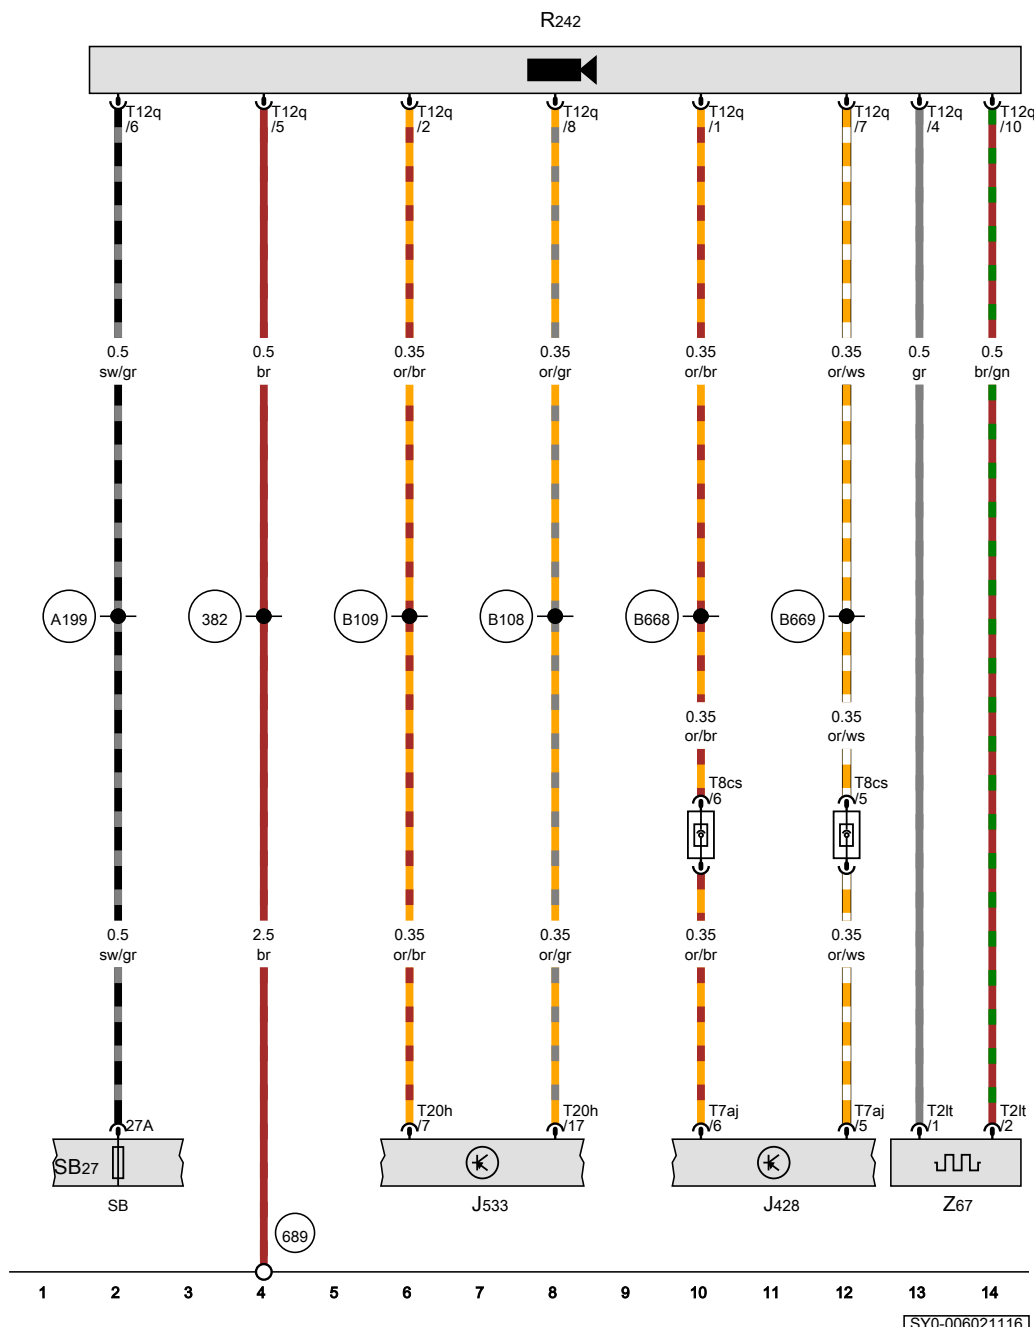


- J428 Adaptive cruise control unit
- J533 Data bus diagnostic interface
- R242 Front camera for driver assist systems
- SB Fuse holder B
- SB27 Fuse 27 on fuse holder B
- T2lt 2-pin connector, black
- T7aj 7-pin connector, black
- T8cs 8-pin connector, black
- T12q 12-pin connector, black
- T20h 20-pin connector, red
- Z67 Windscreen heater for lane departure warning

- 382 Earth connection 17, in main wiring harness
- 689 Earth point, at front, central in roof
- A199 Positive connection 4 (15a) in dash panel wiring harness
- B108 Connection 1 (CAN bus extended high), in main wiring harness
- B109 Connection 1 (CAN bus extended low), in main wiring harness
- B668 Connection 2 (CAN bus extended high), in main wiring harness
- B669 Connection 2 (CAN bus extended low), in main wiring harness


- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

Basic equipment

From September 2016

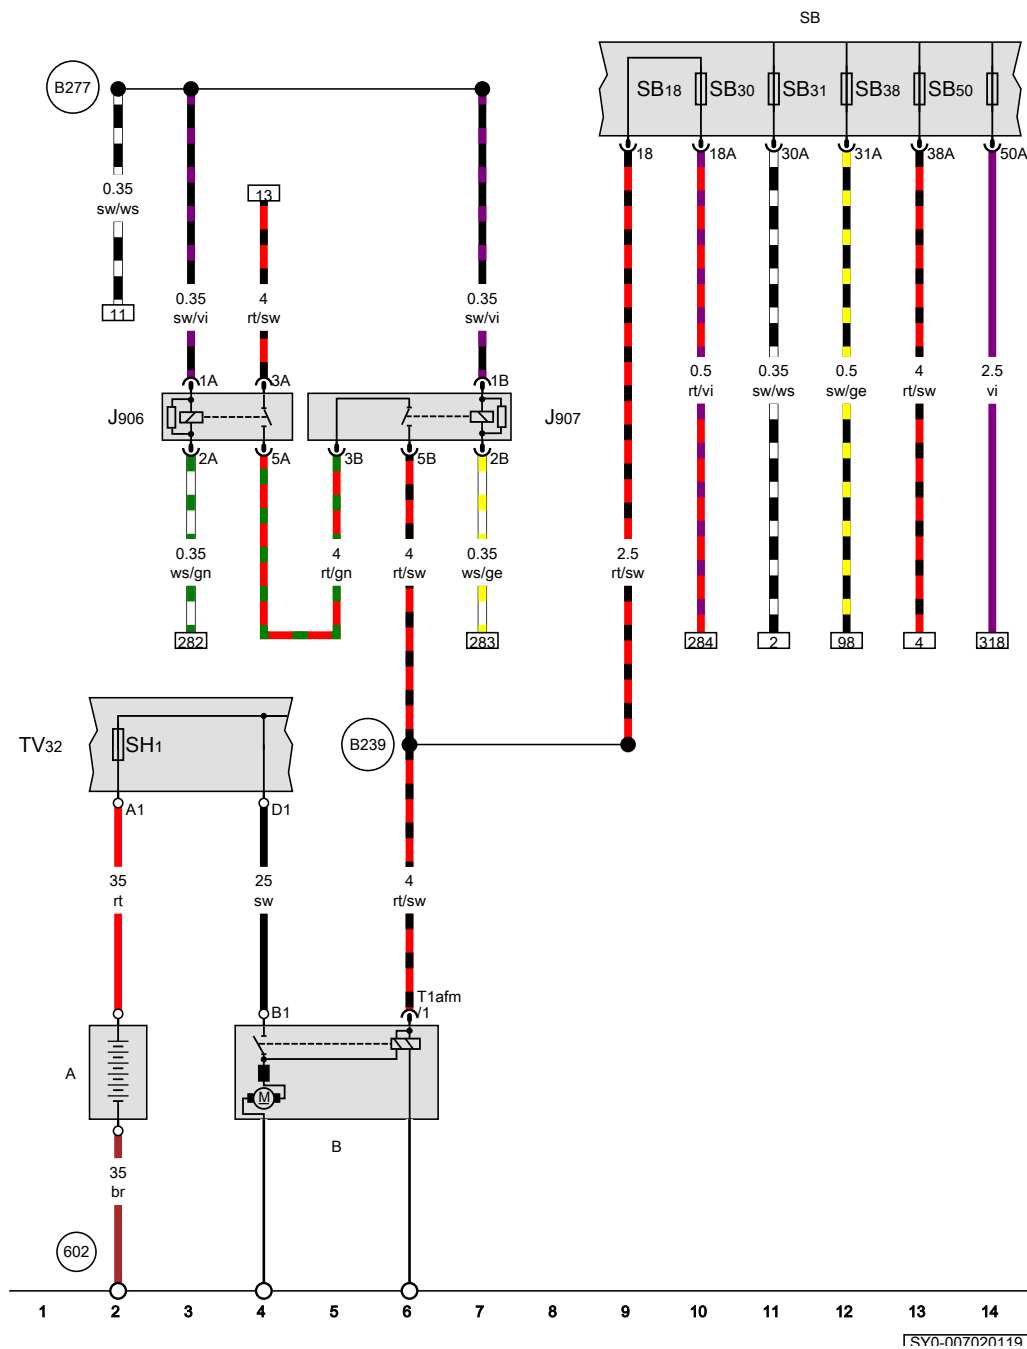


[SYN-007020119]

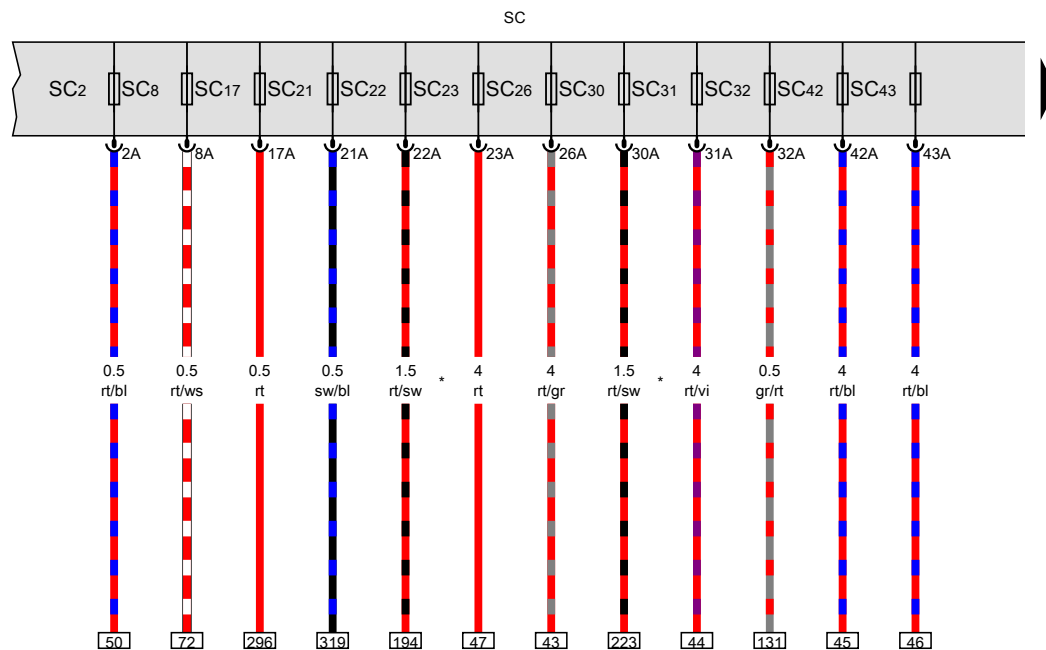

Fuse holder C


- SC Fuse holder C
- SC2 Fuse 2 on fuse holder C
- SC8 Fuse 8 on fuse holder C
- SC17 Fuse 17 on fuse holder C
- SC21 Fuse 21 on fuse holder C
- SC22 Fuse 22 on fuse holder C
- SC23 Fuse 23 on fuse holder C
- SC26 Fuse 26 on fuse holder C
- SC30 Fuse 30 on fuse holder C
- SC31 Fuse 31 on fuse holder C
- SC32 Fuse 32 on fuse holder C
- SC42 Fuse 42 on fuse holder C
- SC43 Fuse 43 on fuse holder C
- * For panel van and Kombi models

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

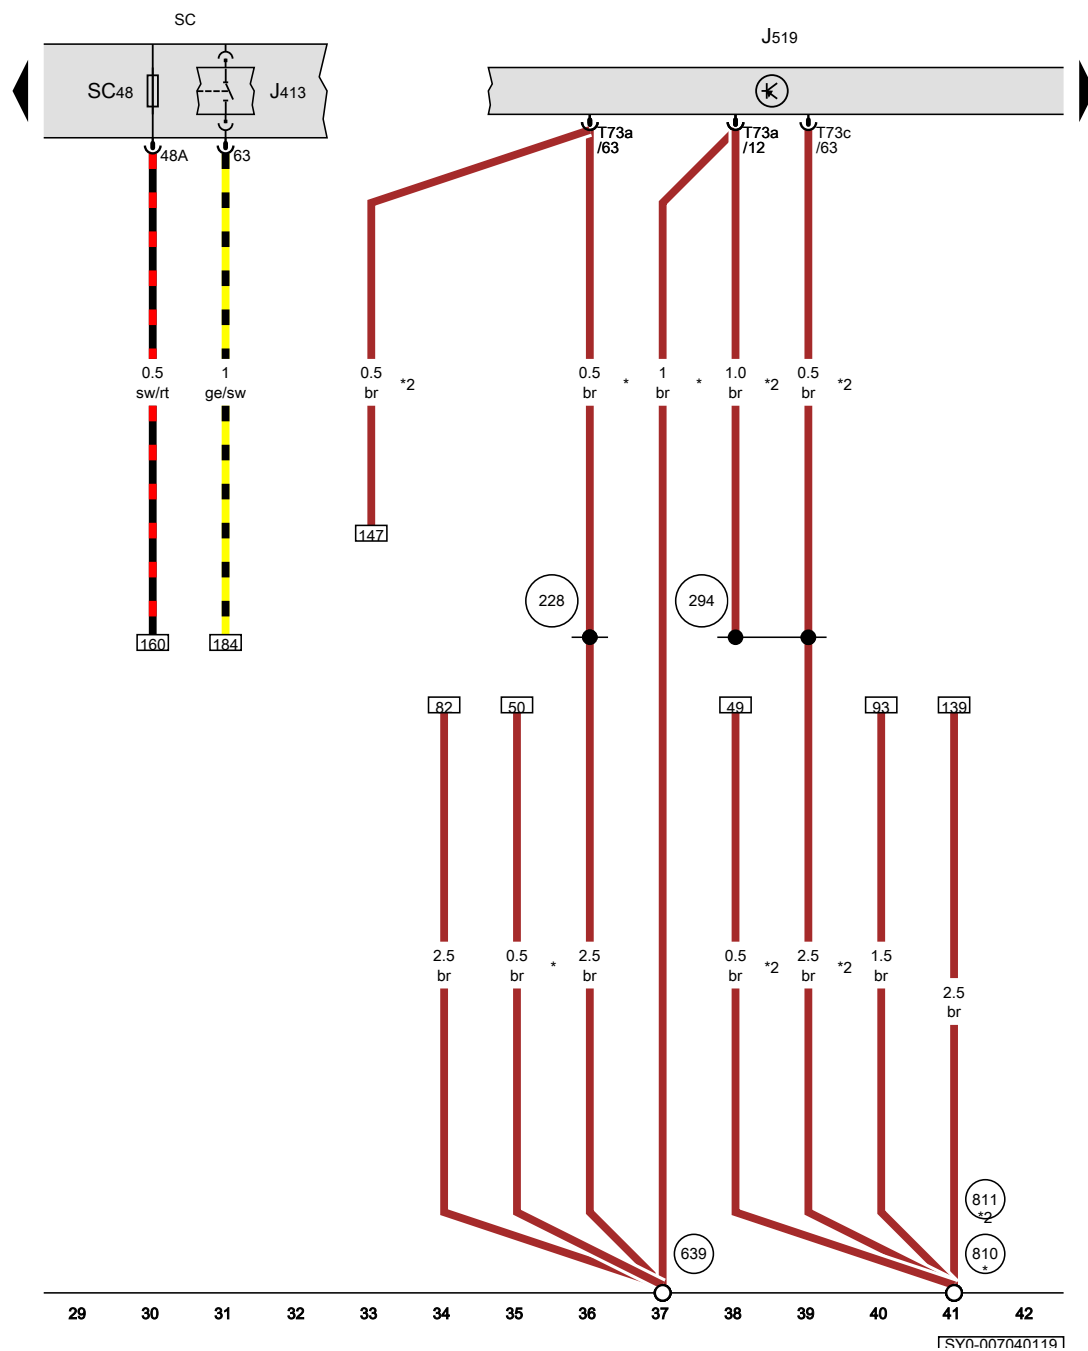

Onboard supply control unit, Fuse holder C


- J413 Horn relay
- J519 Onboard supply control unit
- SC Fuse holder C
- SC48 Fuse 48 on fuse holder C
- T73a 73-pin connector, black
- T73c 73-pin connector, black
- 228 Connection, in harness
- 294 Earth connection 9, in interior wiring harness
- 639 Earth point, left A-pillar
- 810 Earth point on central tube for dash panel, centre left
- 811 Earth point on central tube for dash panel, centre right
- * For left-hand drive models
- *2 For right-hand drive models

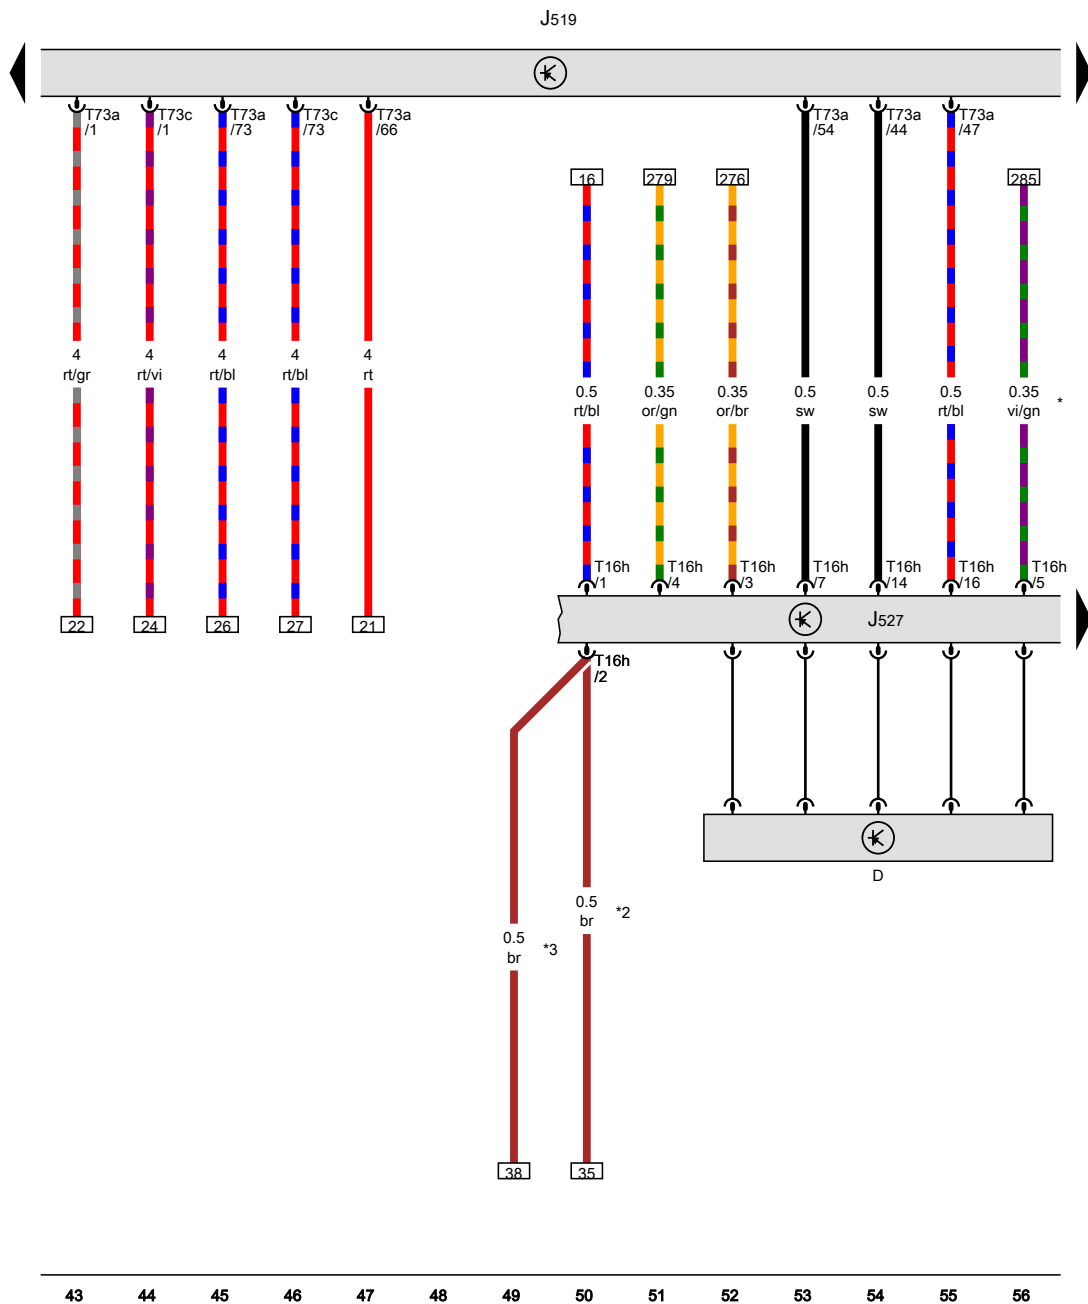

Ignition/starter switch, Onboard supply control unit, Steering column electronics control unit

- D Ignition/starter switch
- J519 Onboard supply control unit
- J527 Steering column electronics control unit
- T16h 16-pin connector, black
- T73a 73-pin connector, black
- T73c 73-pin connector, black
- * For models with cruise control system (CCS)
- *2 For left-hand drive models
- *3 For right-hand drive models

[SYN-007050119]

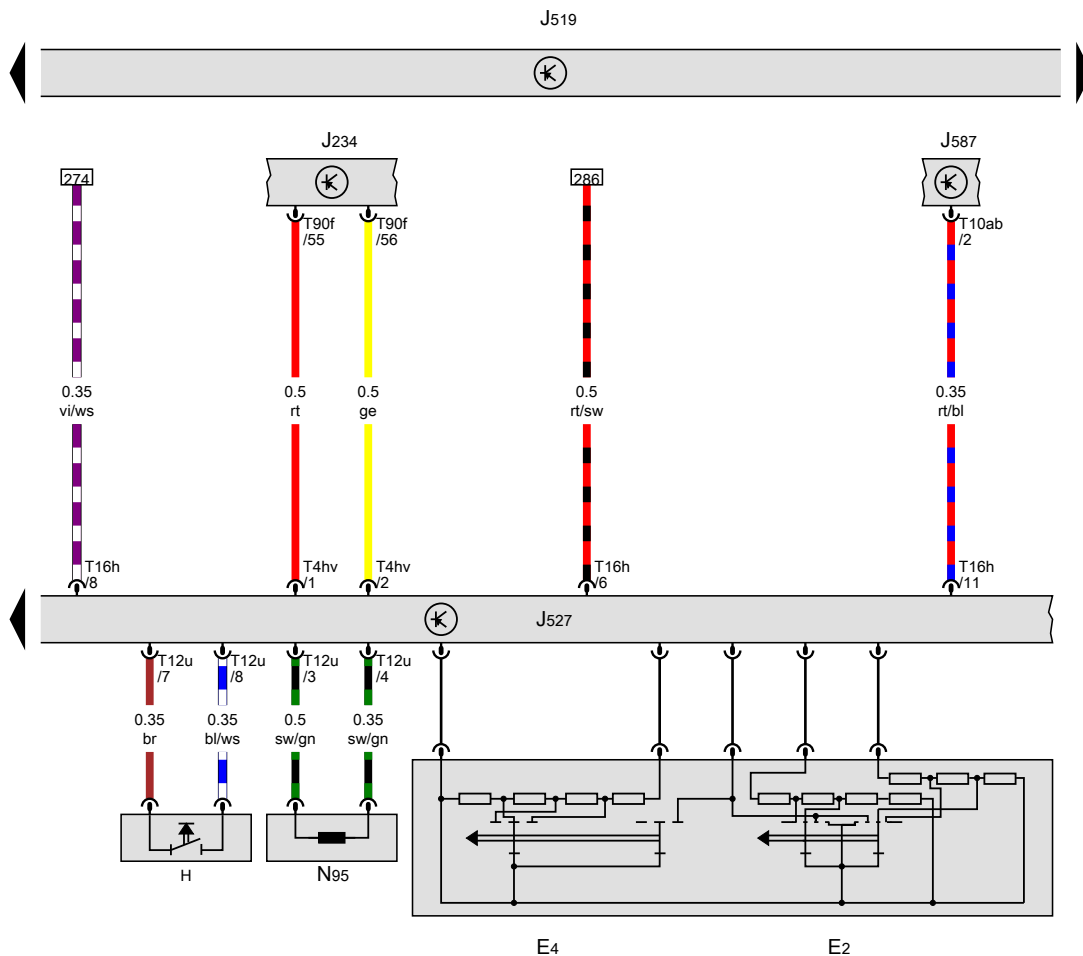

Turn signal switch, Headlight dipper and flasher switch, Horn plate, Onboard supply control unit, Steering column electronics control unit


- E2 Turn signal switch
- E4 Headlight dipper and flasher switch
- H Horn plate
- J234 Airbag control unit
- J519 Onboard supply control unit
- J527 Steering column electronics control unit
- J587 Selector lever sensors control unit
- N95 Airbag igniter on driver side
- T4hv 4-pin connector, yellow
- T10ab 10-pin connector, red
- T12u 12-pin connector
- T16h 16-pin connector, black
- T90f 90-pin connector, yellow


- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

Rotary light switch, Onboard supply control unit

- EX1 Rotary light switch
- J519 Onboard supply control unit
- T10aa 10-pin connector, red
- T73a 73-pin connector, black
- T73c 73-pin connector, black
- 284 Earth connection 6, in interior wiring harness
- 383 Earth connection 18, in main wiring harness
- A19 Connection (58d), in dash panel wiring harness
- B169 Positive connection 1 (30), in interior wiring harness

* For left-hand drive models
 *2 For right-hand drive models

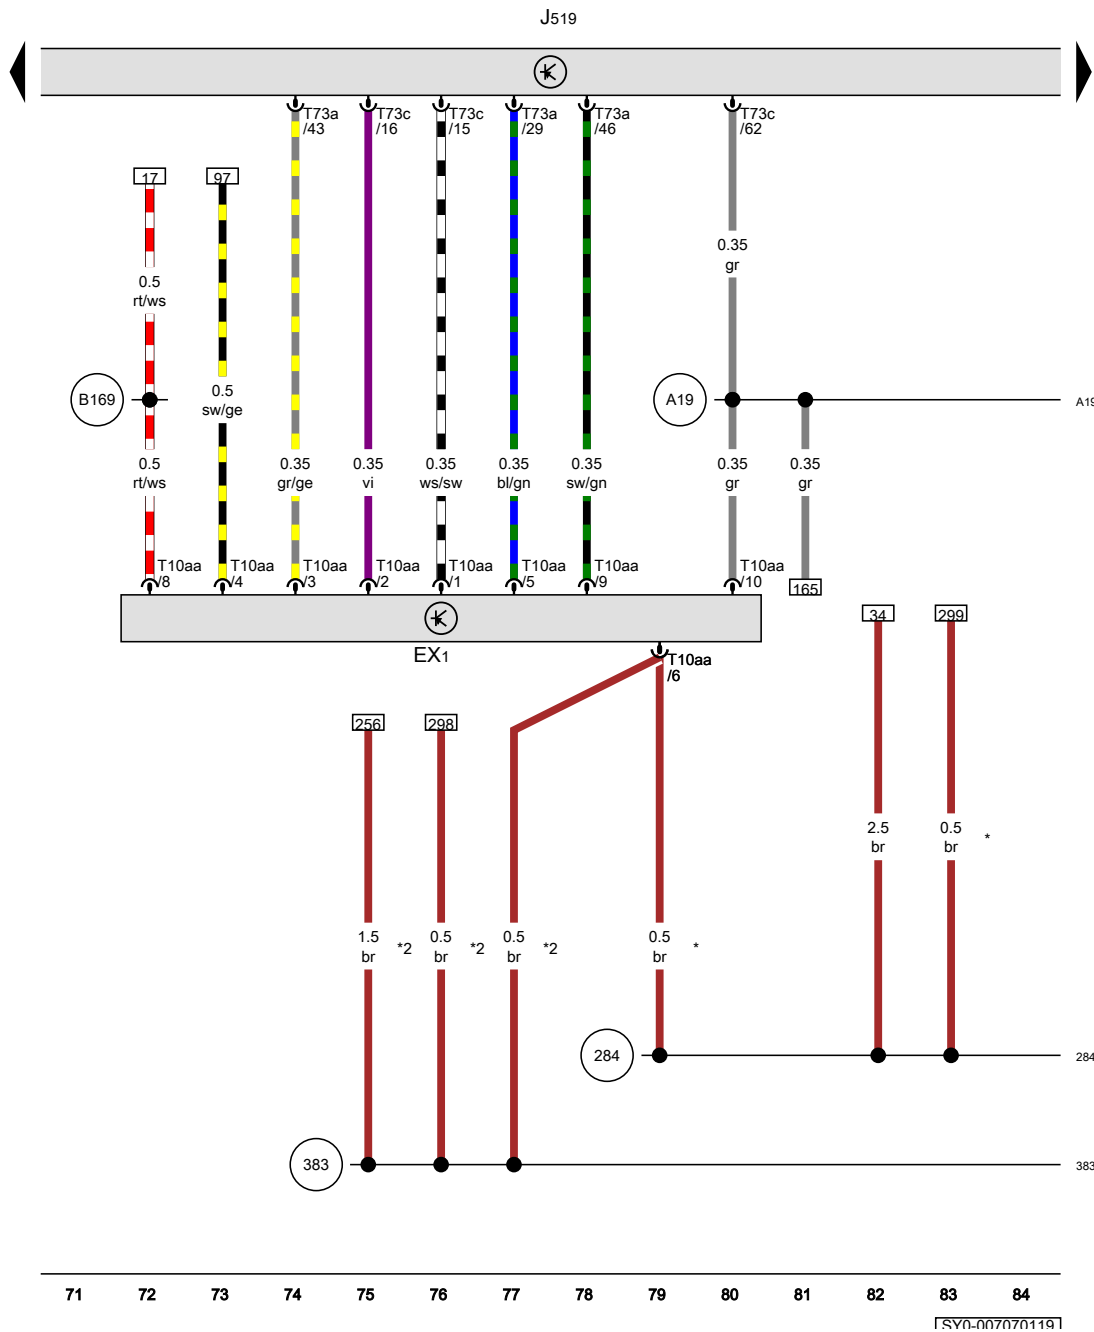

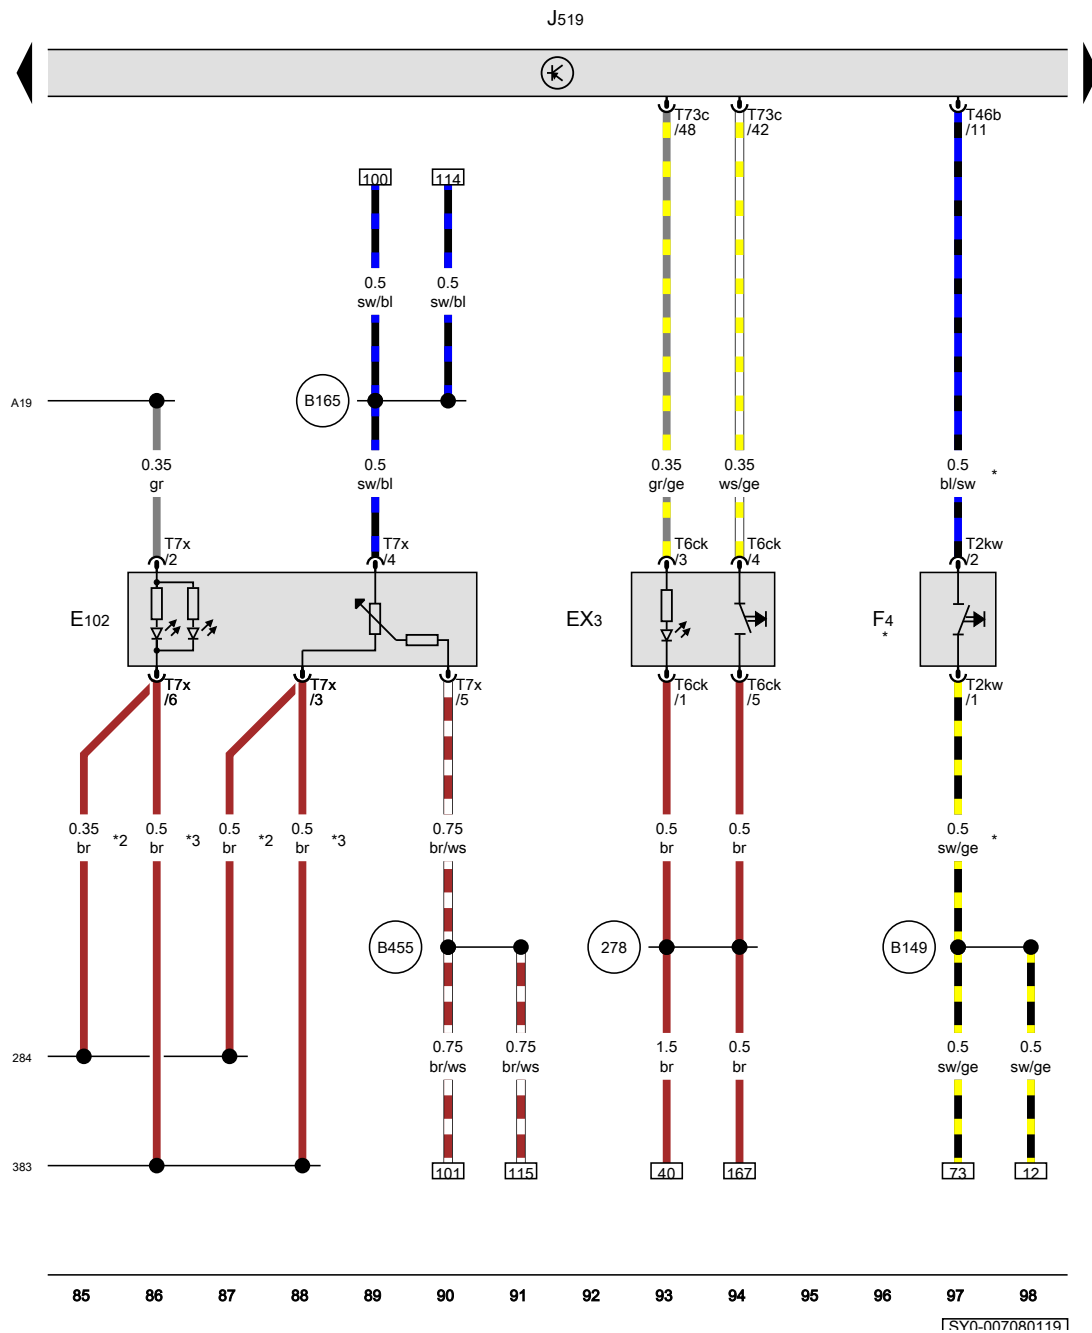


Hazard warning light switch, Headlight range control regulator, Reversing light switch, Onboard supply control unit

- EX3 Hazard warning light switch
- E102 Headlight range control regulator
- F4 Reversing light switch
- J519 Onboard supply control unit
- T2kw 2-pin connector, black
- T6ck 6-pin connector, blue
- T7x 7-pin connector, black
- T46b 46-pin connector, black
- T73c 73-pin connector, black

- 278 Earth connection 4, in interior wiring harness
- 284 Earth connection 6, in interior wiring harness
- 383 Earth connection 18, in main wiring harness
- A19 Connection (58d), in dash panel wiring harness
- B149 Positive connection 2 (15a), in interior wiring harness
- B165 Positive connection 2 (15), in interior wiring harness
- B455 Connection (HRC), in main wiring harness

- * For models with manual gearbox
- *2 For left-hand drive models
- *3 For right-hand drive models

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

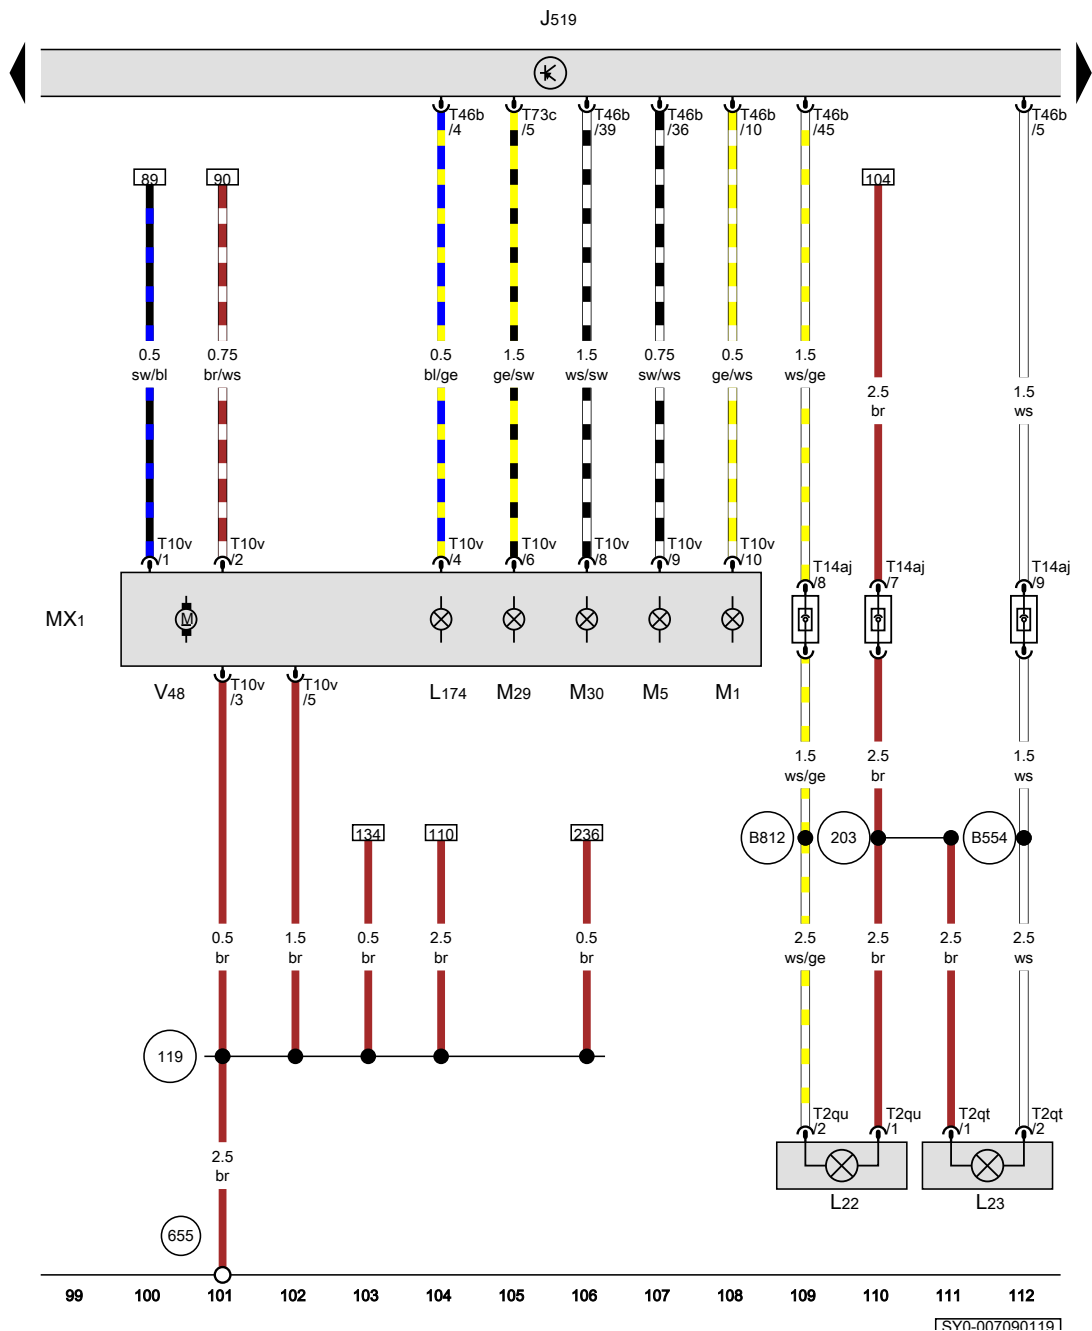


Onboard supply control unit, Left fog light bulb, Right fog light bulb, Front left headlight

- J519 Onboard supply control unit
- L22 Left fog light bulb
- L23 Right fog light bulb
- L174 Left daytime running light bulb
- MX1 Front left headlight
- M1 Left side light bulb
- M5 Front left turn signal bulb
- M29 Left headlight dipped beam bulb
- M30 Left headlight main beam bulb
- T2qt 2-pin connector, black
- T2qu 2-pin connector, black
- T10v 10-pin connector, black
- T14aj 14-pin connector, black
- T46b 46-pin connector, black
- T73c 73-pin connector, black
- V48 Left headlight range control motor


- 119 Earth connection 1, in headlight wiring harness
- 203 Earth connection, in front fog light wiring harness
- 655 Earth point, on left headlight
- B554 Connection (fog light), in main wiring harness
- B812 Connection 2 (fog light), in main wiring harness

Onboard supply control unit, Front right headlight, Left washer jet heater element, Right washer jet heater element

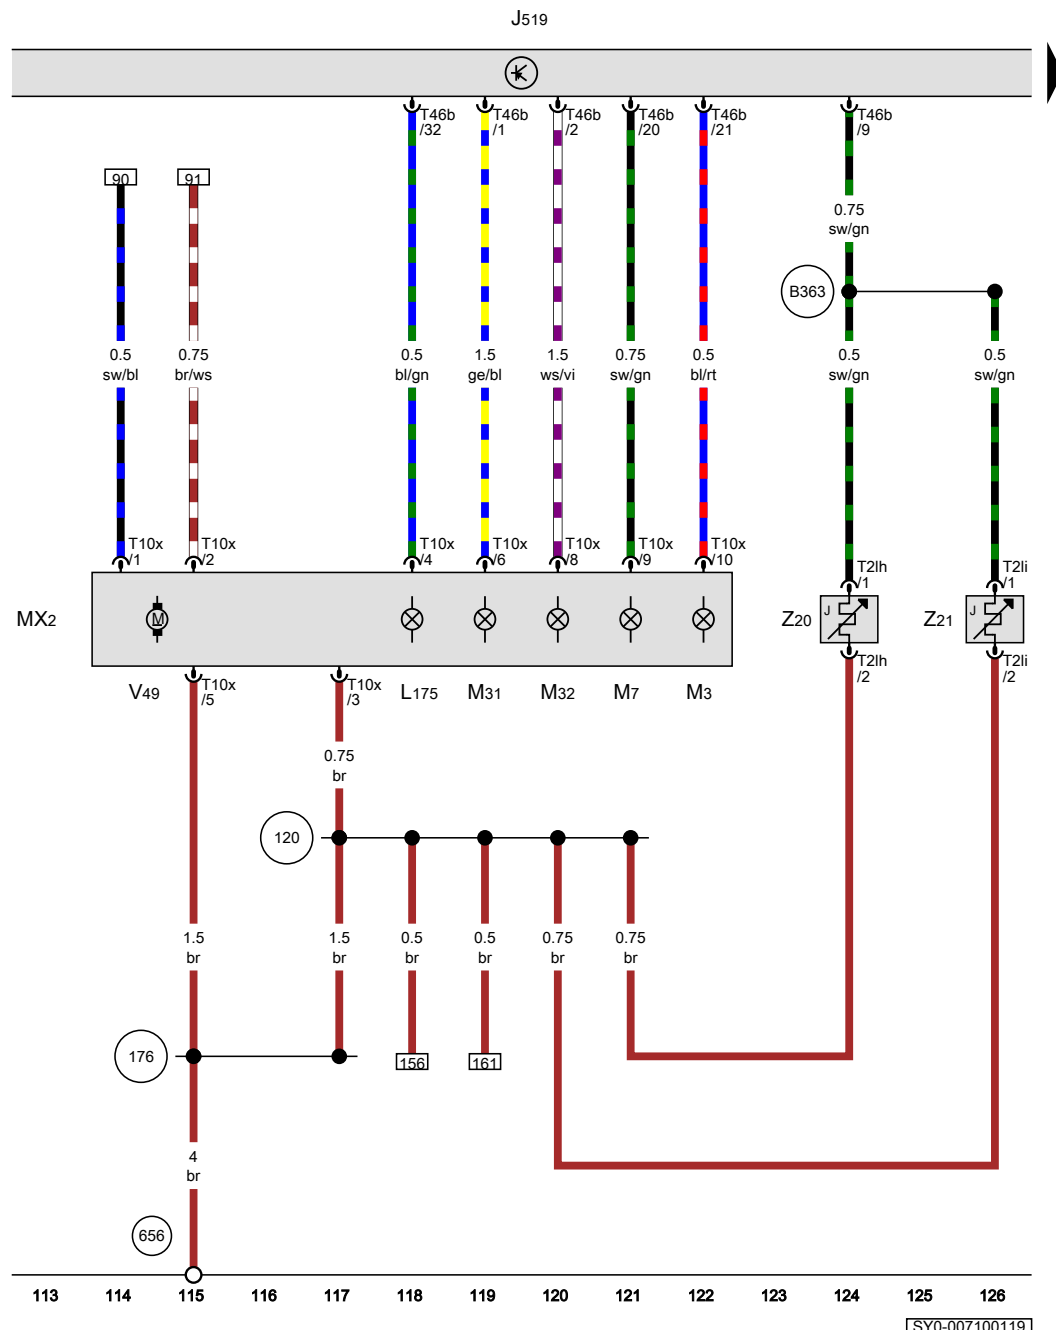

- J519 Onboard supply control unit
- L175 Right daytime running light bulb
- MX2 Front right headlight
- M3 Right side light bulb
- M7 Front right turn signal bulb
- M31 Right headlight dipped beam bulb
- M32 Right headlight main beam bulb
- T2lh 2-pin connector, black
- T2li 2-pin connector, black
- T10x 10-pin connector, black
- T46b 46-pin connector, black
- V49 Right headlight range control motor
- Z20 Left washer jet heater element
- Z21 Right washer jet heater element

- 120 Earth connection 2, in headlight wiring harness
- 176 Earth connection, in right headlight wiring harness
- 656 Earth point, on right headlight
- B363 Positive connection 14 (87a) in main wiring harness

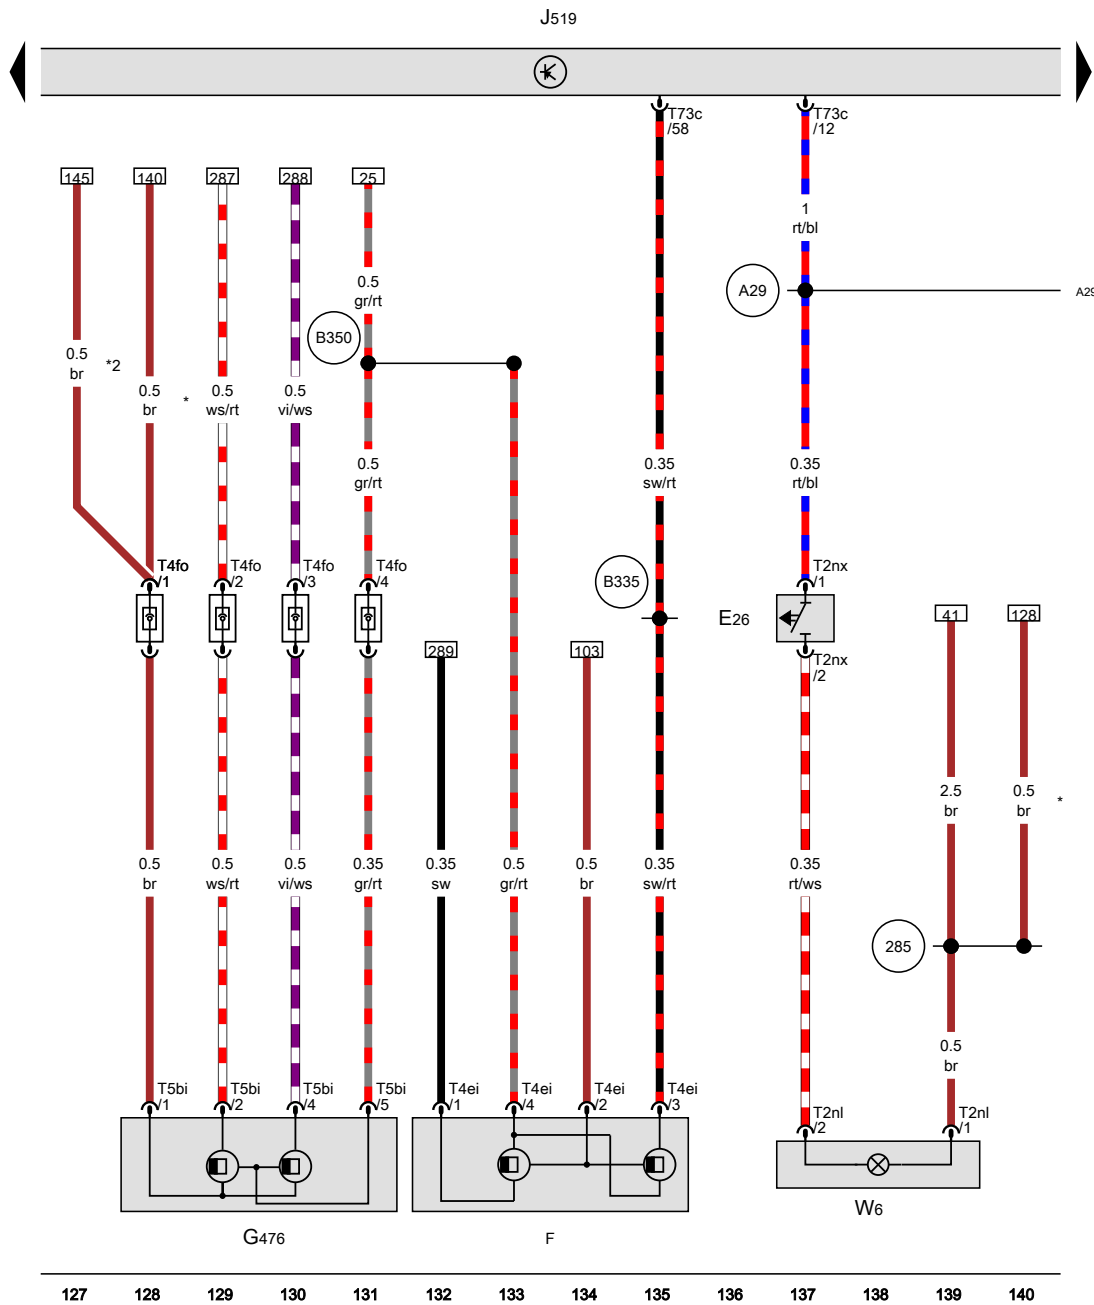


Glove compartment light switch, Brake light switch, Clutch position sender, Onboard supply control unit, Glove compartment light

- E26 Glove compartment light switch
- F Brake light switch
- G476 Clutch position sender
- J519 Onboard supply control unit
- T2nl 2-pin connector, black
- T2nx 2-pin connector, black
- T4ei 4-pin connector, black
- T4fo 4-pin connector, black
- T5bi 5-pin connector, black
- T73c 73-pin connector, black
- W6 Glove compartment light

- 285 Earth connection 7, in interior wiring harness
- A29 Connection (interior light), in dash panel wiring harness
- B335 Connection 1 (54), in main wiring harness
- B350 Positive connection 1 (87a) in main wiring harness
- * For left-hand drive models
- *2 For right-hand drive models


ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

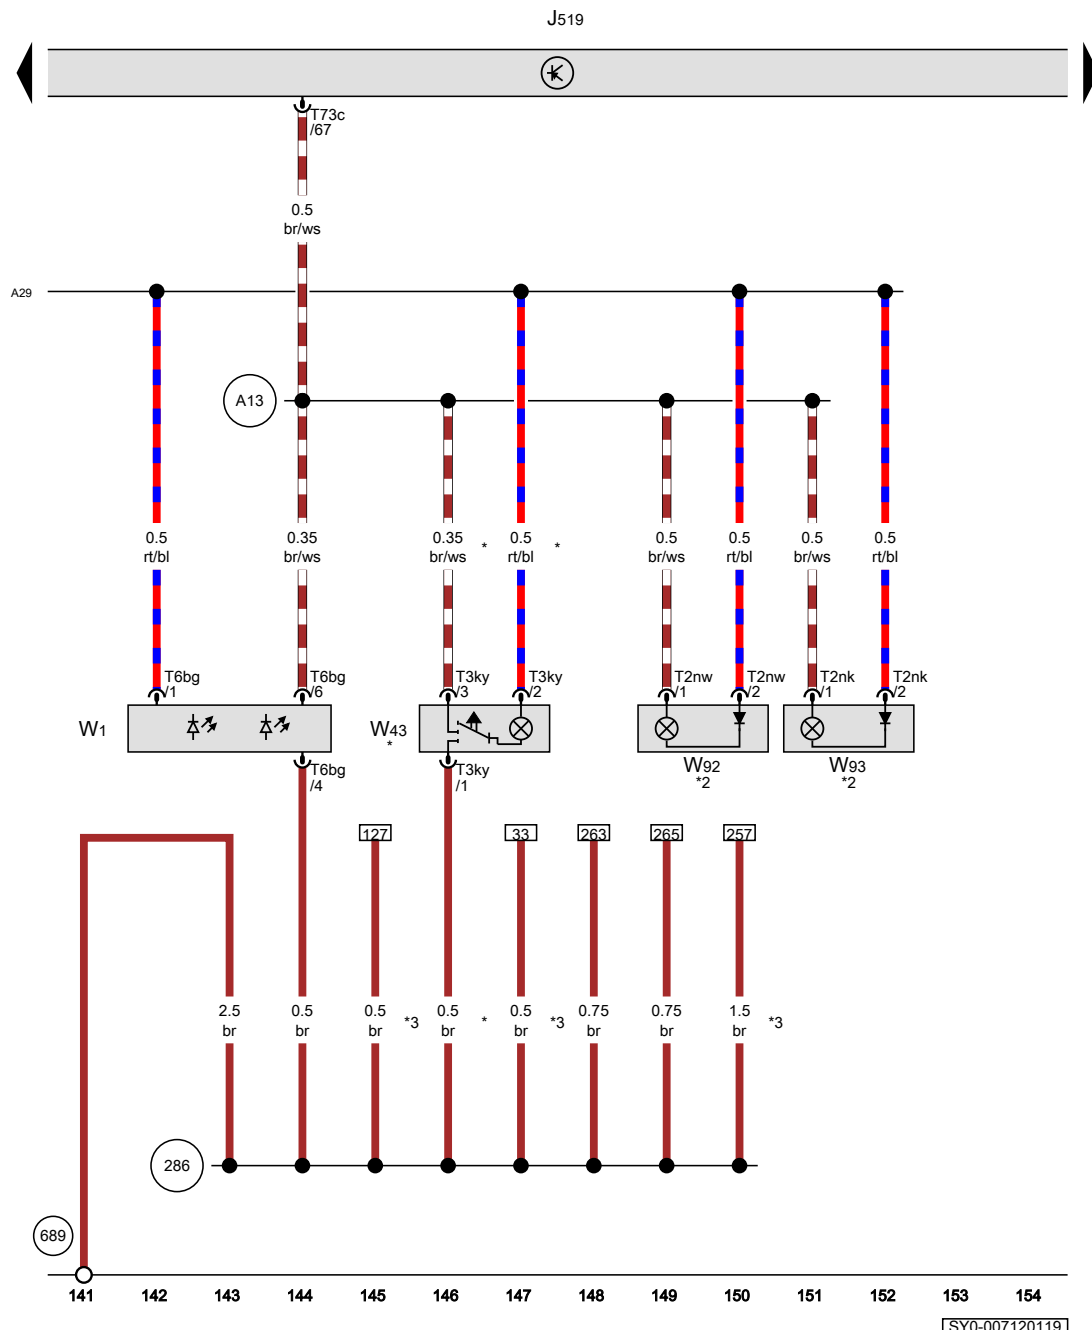

Onboard supply control unit, Front interior light, Rear interior light, Driver side entry light, Passenger side entry light

- J519 Onboard supply control unit
- T2nk 2-pin connector, black
- T2nw 2-pin connector, black
- T3ky 3-pin connector, black
- T6bg 6-pin connector, blue
- T73c 73-pin connector, black
- W1 Front interior light
- W43 Rear interior light
- W92 Driver side entry light
- W93 Passenger side entry light

- 286 Earth connection 8, in interior wiring harness
- 689 Earth point, at front, central in roof
- A13 Connection (door contact switch), in dash panel wiring harness
- A29 Connection (interior light), in dash panel wiring harness
- * For models with double cab
- *2 For models with entry lights
- *3 For right-hand drive models

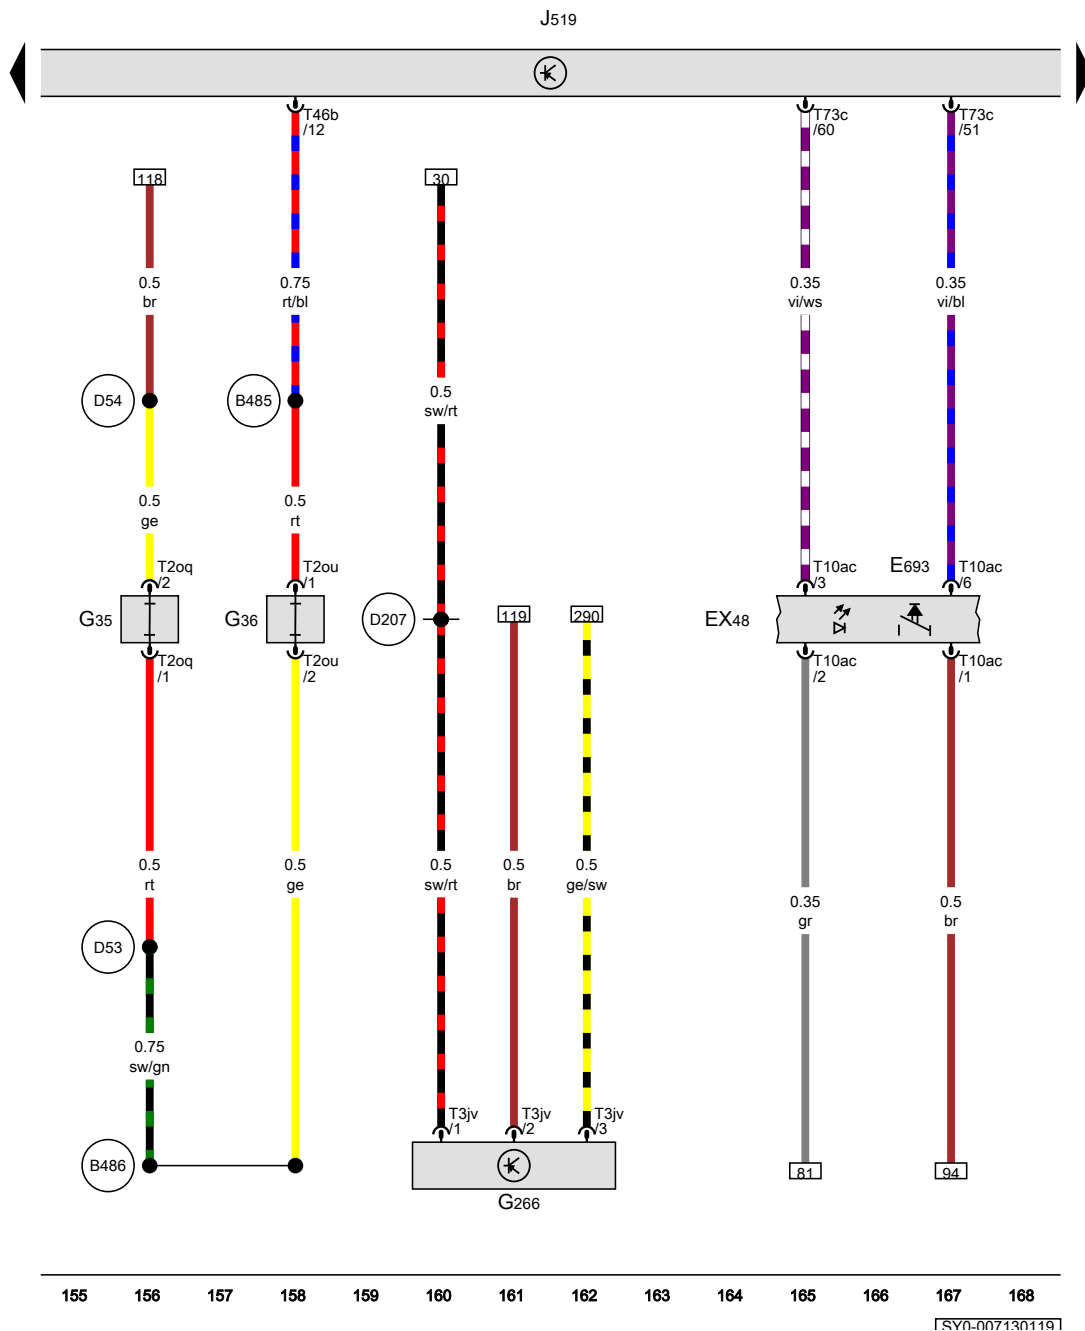


Start/Stop operation button, Front right brake pad wear sender, Rear left brake pad wear sender, Oil level and oil temperature sender, Onboard supply control unit

- EX48 Centre switch module 3 in dash panel
- E693 Start/Stop operation button
- G35 Front right brake pad wear sender
- G36 Rear left brake pad wear sender
- G266 Oil level and oil temperature sender
- J519 Onboard supply control unit
- T2oq 2-pin connector, black
- T2ou 2-pin connector, black
- T3jv 3-pin connector, black
- T10ac 10-pin connector, black
- T46b 46-pin connector, black
- T73c 73-pin connector, black

- B485 Connection 21, in main wiring harness
- B486 Connection 22, in main wiring harness
- D53 Connection (right brake wear indicator), in engine compartment wiring harness
- D54 Connection (right brake wear indicator), in engine compartment wiring harness
- D207 Connection 7 (87a), in engine compartment wiring harness


- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

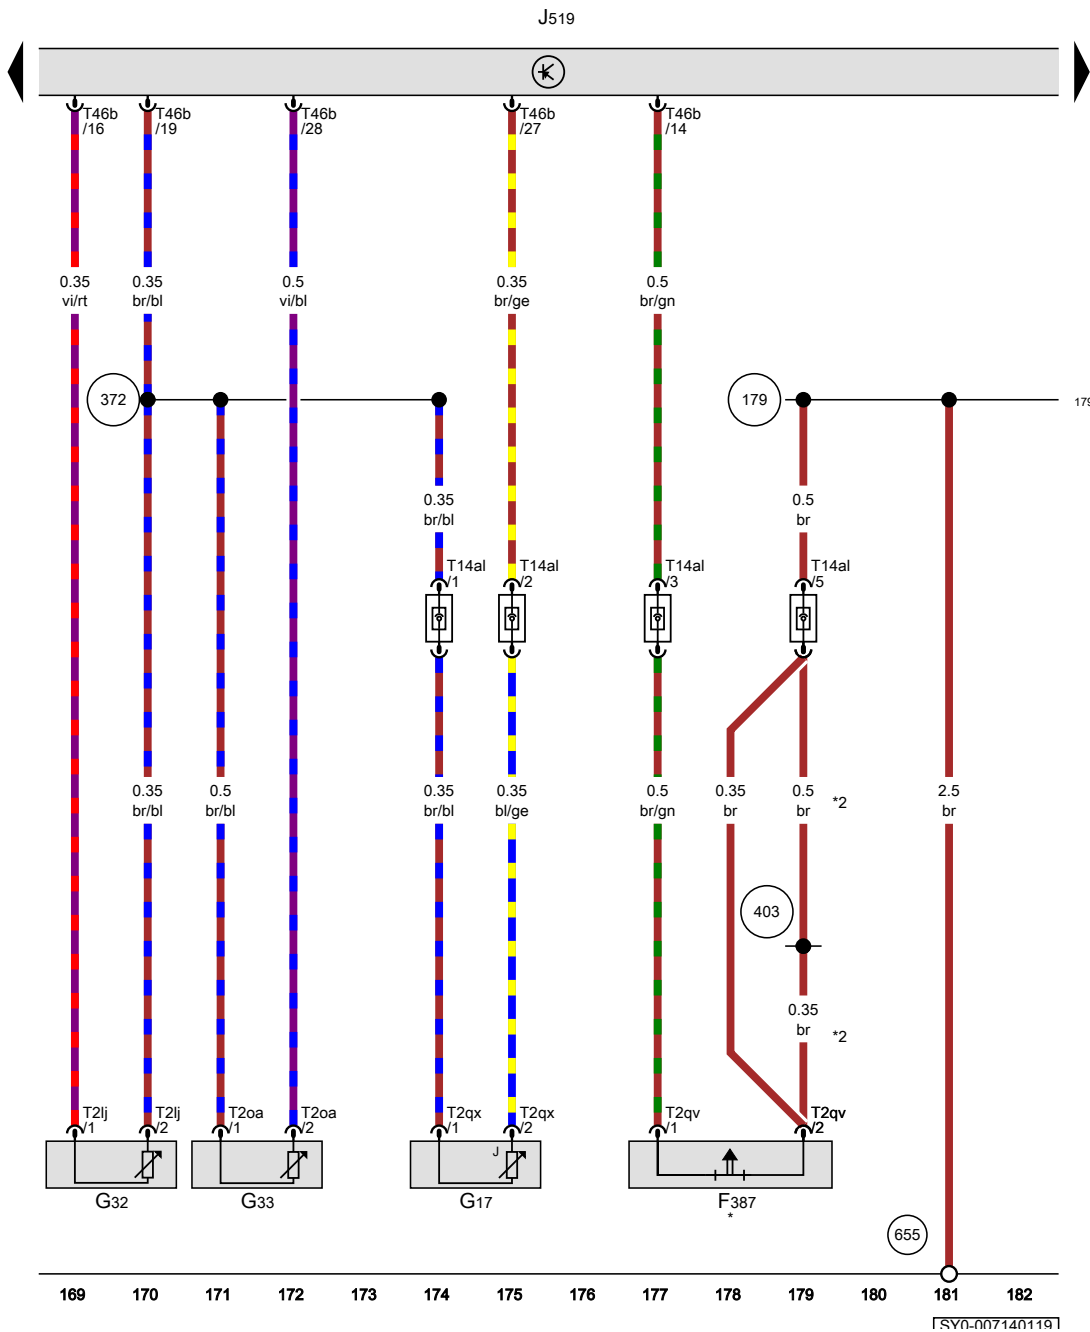

Bonnet contact switch, Ambient temperature sensor, Coolant shortage indicator sender, Windscreen washer fluid level sender, Onboard supply control unit

- F387 Bonnet contact switch
- G17 Ambient temperature sensor
- G32 Coolant shortage indicator sender
- G33 Windscreen washer fluid level sender
- J519 Onboard supply control unit
- T2lj 2-pin connector, black
- T2oa 2-pin connector, black
- T2qv 2-pin connector, black
- T2qx 2-pin connector, black
- T14al 14-pin connector, grey
- T46b 46-pin connector, black
- 179 Earth connection, in left headlight wiring harness
- 372 Earth connection 7, in main wiring harness
- 403 Earth connection, in front end wiring harness
- 655 Earth point, on left headlight
- * Pre-wired component
- *2 For models with BlueMotion equipment


Treble horn, Bass horn, Onboard supply control unit, Left number plate light, Right number plate light, Heated rear window in left wing door

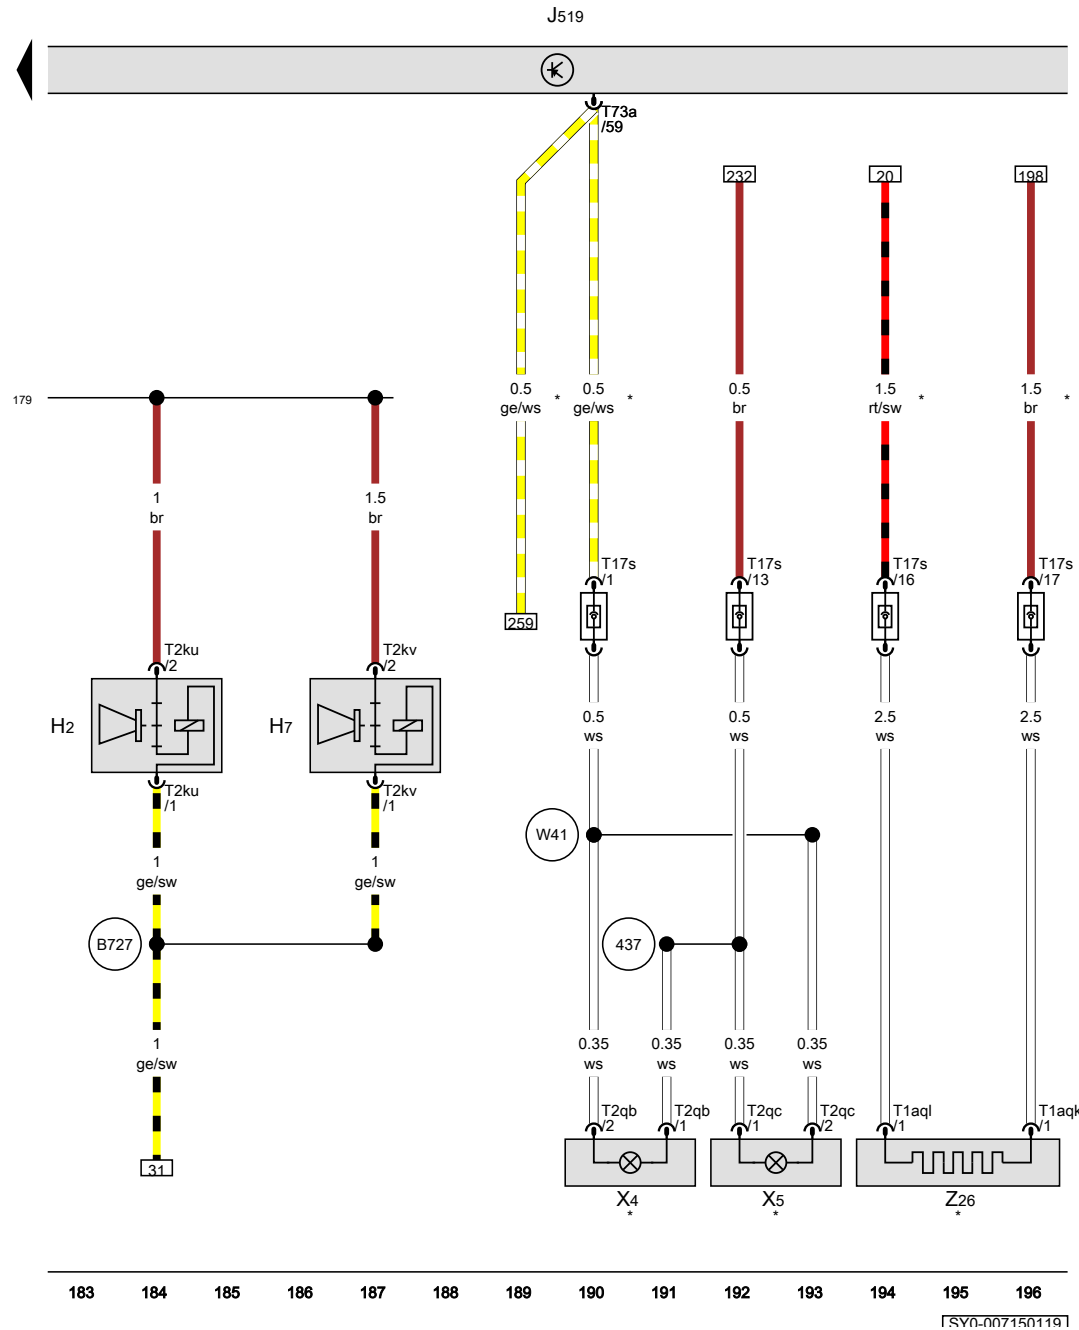

- | | |
|-------|---|
| H2 | Treble horn |
| H7 | Bass horn |
| J519 | Onboard supply control unit |
| T1aqk | 1-pin connector |
| T1aql | 1-pin connector |
| T2ku | 2-pin connector, black |
| T2kv | 2-pin connector, black |
| T2qb | 2-pin connector, black |
| T2qc | 2-pin connector, black |
| T17s | 17-pin connector, black |
| T73a | 73-pin connector, black |
| X4 | Left number plate light |
| X5 | Right number plate light |
| Z26 | Heated rear window in left wing door |
| 179 | Earth connection, in left headlight wiring harness |
| 437 | Earth connection, in number plate wiring harness |
| B727 | Connection (71a), in main wiring harness |
| W41 | Positive connection (58), in number plate lights wiring harness |
| * | For panel van and Kombi models |

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink


Onboard supply control unit, Left tail light cluster

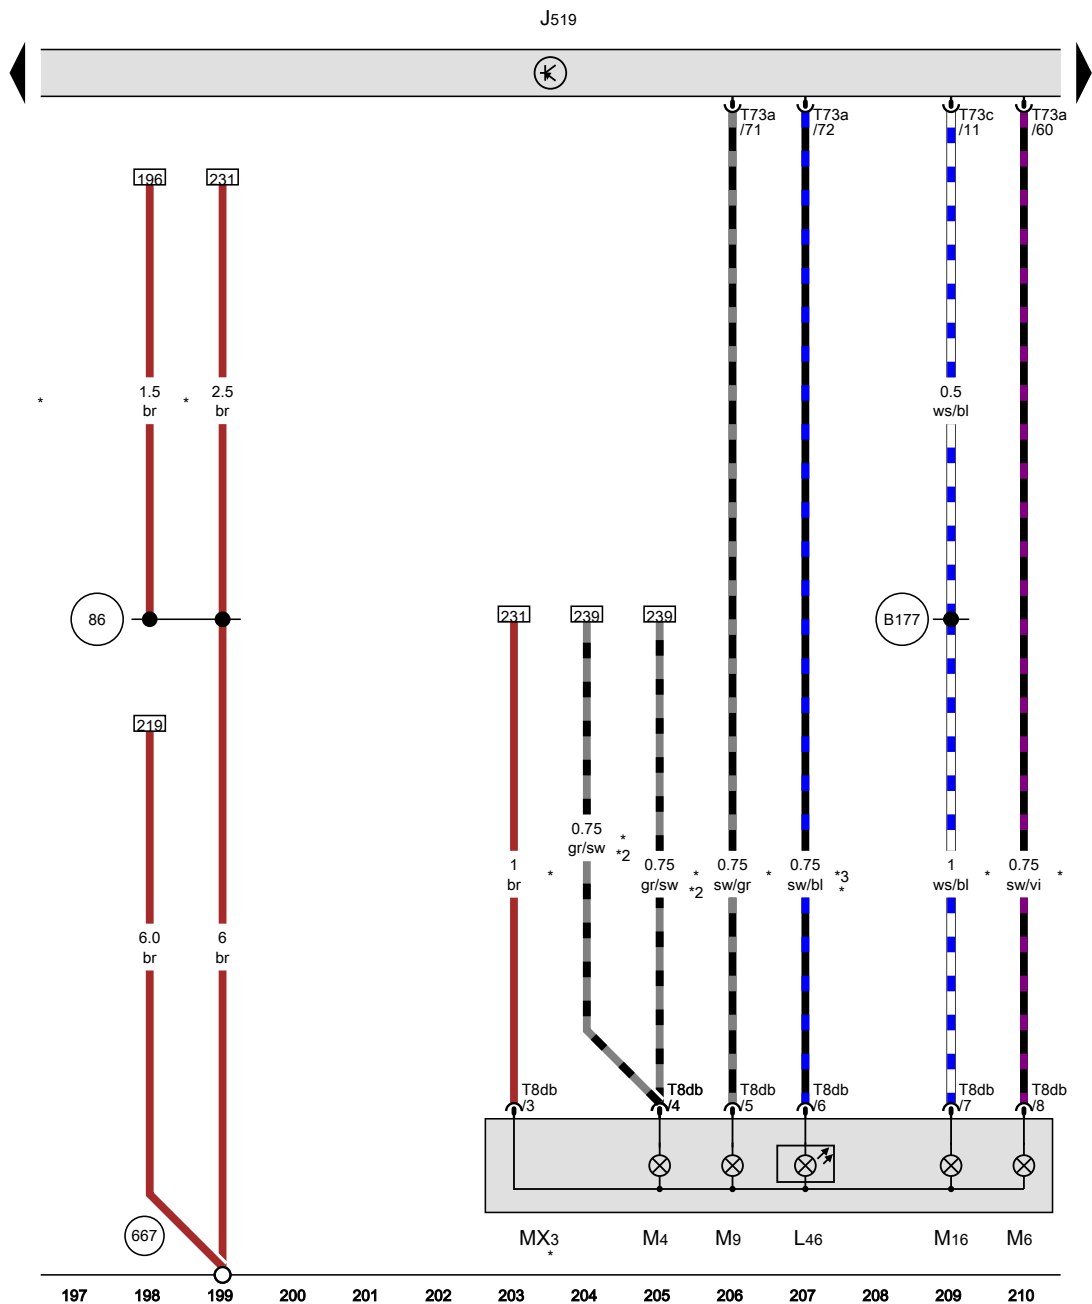

- J519 Onboard supply control unit
- L46 Rear left fog light bulb
- MX3 Left tail light cluster
- M4 Left tail light bulb
- M6 Rear left turn signal bulb
- M9 Left brake light bulb
- M16 Left reversing light bulb
- T8db 8-pin connector, black
- T73a 73-pin connector, black
- T73c 73-pin connector, black

- 86 Earth connection 1, in rear wiring harness
- 667 Earth point, on rear left of roof
- B177 Connection (61), in interior wiring harness
- * For panel van and Kombi models
- *2 According to equipment
- *3 For left-hand drive models

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

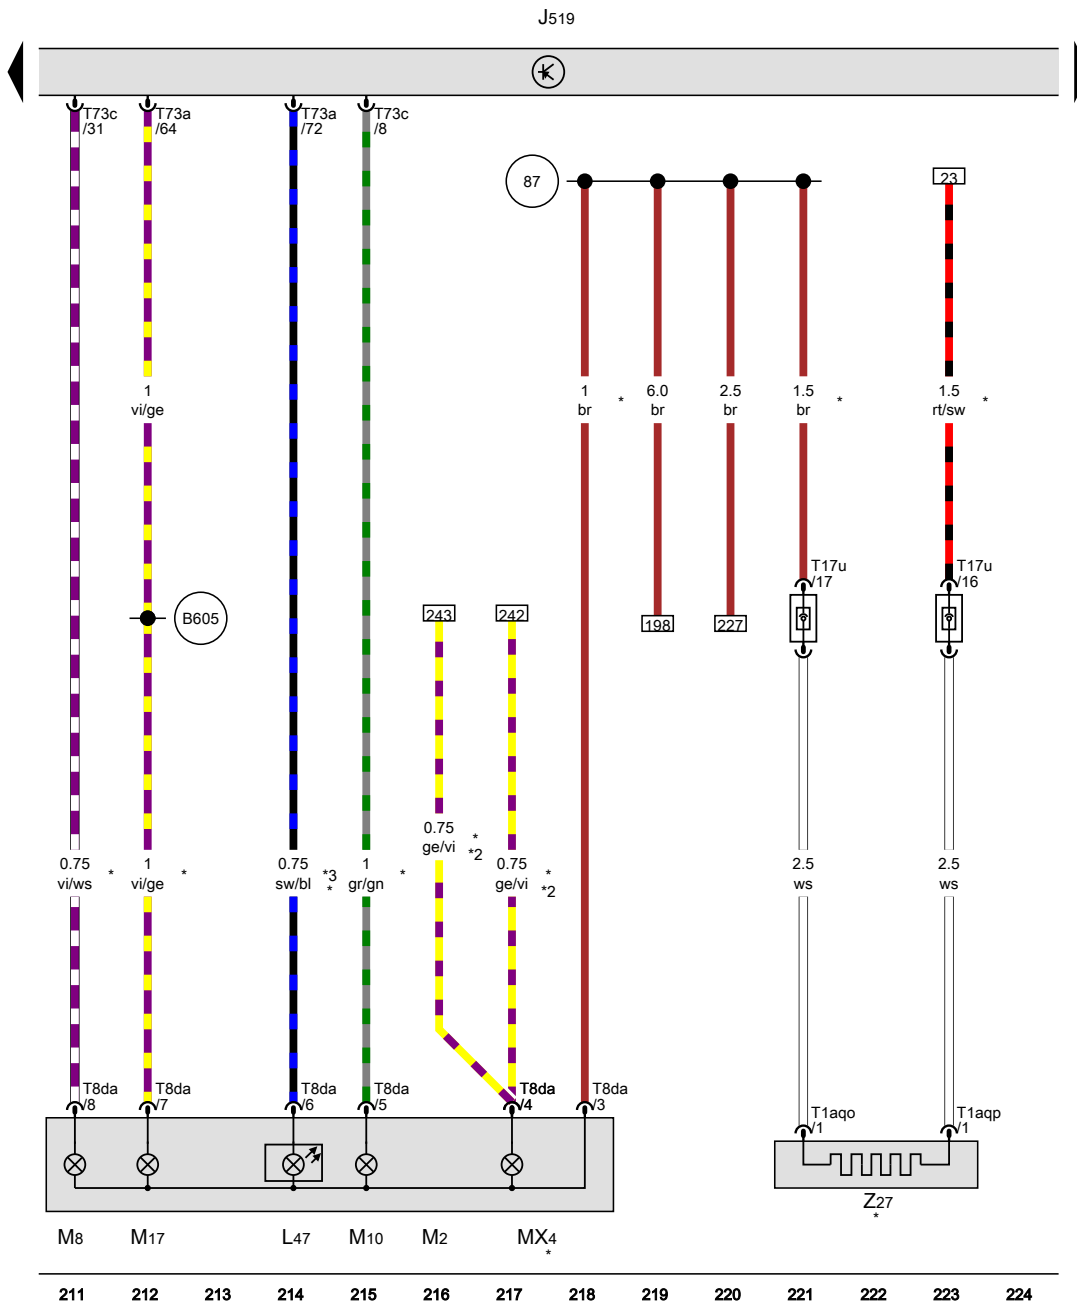

Onboard supply control unit, Right tail light cluster, Heated rear window in right wing door

- J519 Onboard supply control unit
- L47 Rear right fog light bulb
- M2 Right tail light bulb
- MX4 Right tail light cluster
- M8 Rear right turn signal bulb
- M10 Right brake light bulb
- M17 Right reversing light bulb
- T1aqo 1-pin connector
- T1aqp 1-pin connector
- T8da 8-pin connector, black
- T17u 17-pin connector, black
- T73a 73-pin connector, black
- T73c 73-pin connector, black
- Z27 Heated rear window in right wing door

87 Earth connection 2, in rear wiring harness

B605 Connection 1, in interior wiring harness


* For panel van and Kombi models

*2 According to equipment

*3 For right-hand drive models


ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

[SYN-007170119]

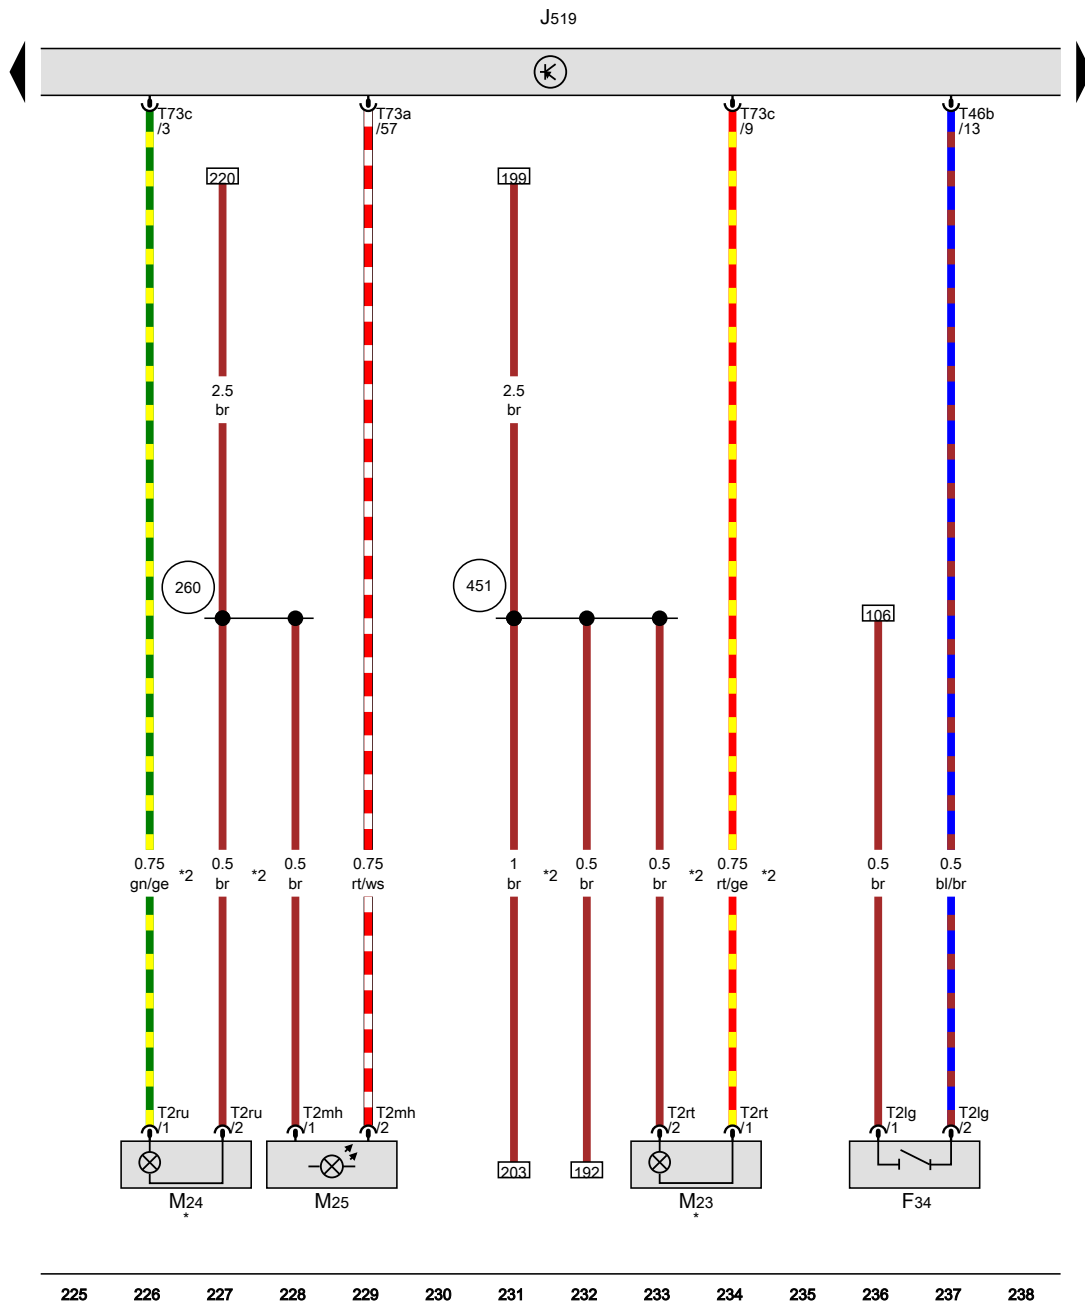

Brake fluid level warning contact, Onboard supply control unit, Left roof mounted turn signal bulb, Right roof mounted turn signal bulb, High-level brake light bulb

- F34 Brake fluid level warning contact
- J519 Onboard supply control unit
- M23 Left roof mounted turn signal bulb
- M24 Right roof mounted turn signal bulb
- M25 High-level brake light bulb
- T2lg 2-pin connector, black
- T2mh 2-pin connector, green
- T2rt 2-pin connector, black
- T2ru 2-pin connector, black
- T46b 46-pin connector, black
- T73a 73-pin connector, black
- T73c 73-pin connector, black
- 260 Earth connection, in tail light cluster wiring harness
- 451 Earth connection 1 in rear right side panel
- * Pre-wired component
- *2 For panel van and Kombi models

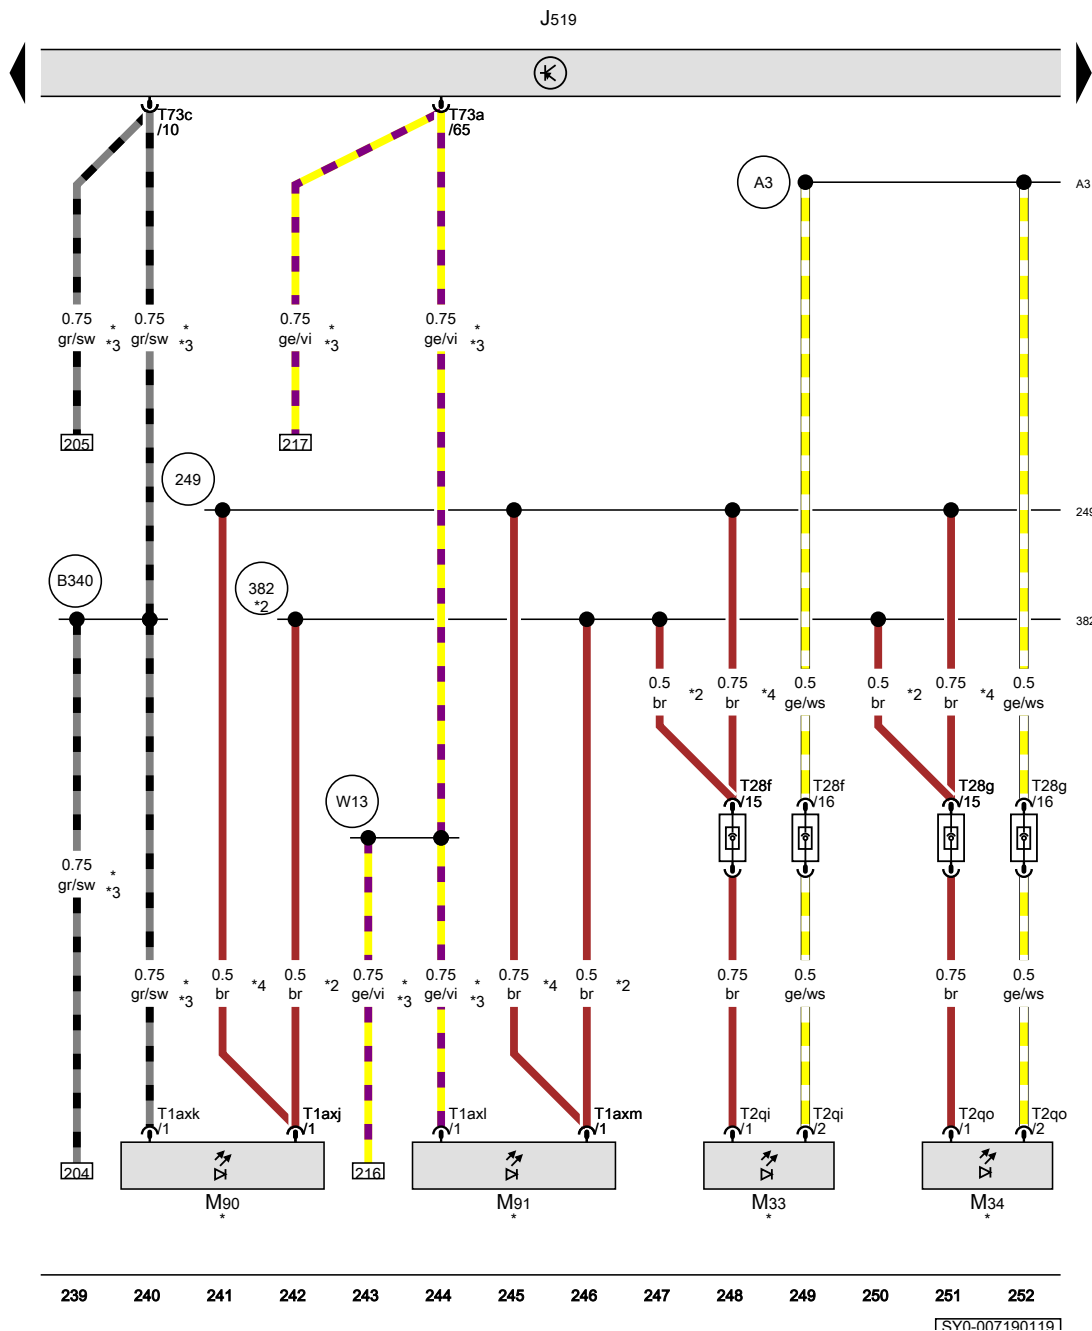


Onboard supply control unit, Front left side marker bulb, Front right side marker bulb, Elevated side light, front left, Elevated side light, front right

- J519 Onboard supply control unit
- M33 Front left side marker bulb
- M34 Front right side marker bulb
- M90 Elevated side light, front left
- M91 Elevated side light, front right
- T1axj 1-pin connector
- T1axk 1-pin connector
- T1axl 1-pin connector
- T1axm 1-pin connector
- T2qi 2-pin connector, black
- T2qo 2-pin connector, black
- T28f 28-pin connector, black
- T28g 28-pin connector, black
- T73a 73-pin connector, black
- T73c 73-pin connector, black

- 249 Earth connection 2, in interior wiring harness
- 382 Earth connection 17, in main wiring harness
- A3 Positive connection (58), in dash panel wiring harness
- B340 Connection 1 (58d), in main wiring harness
- W13 Connection (58L), in rear wiring harness

- * For panel van and Kombi models
- *2 For right-hand drive models
- *3 According to equipment
- *4 For left-hand drive models

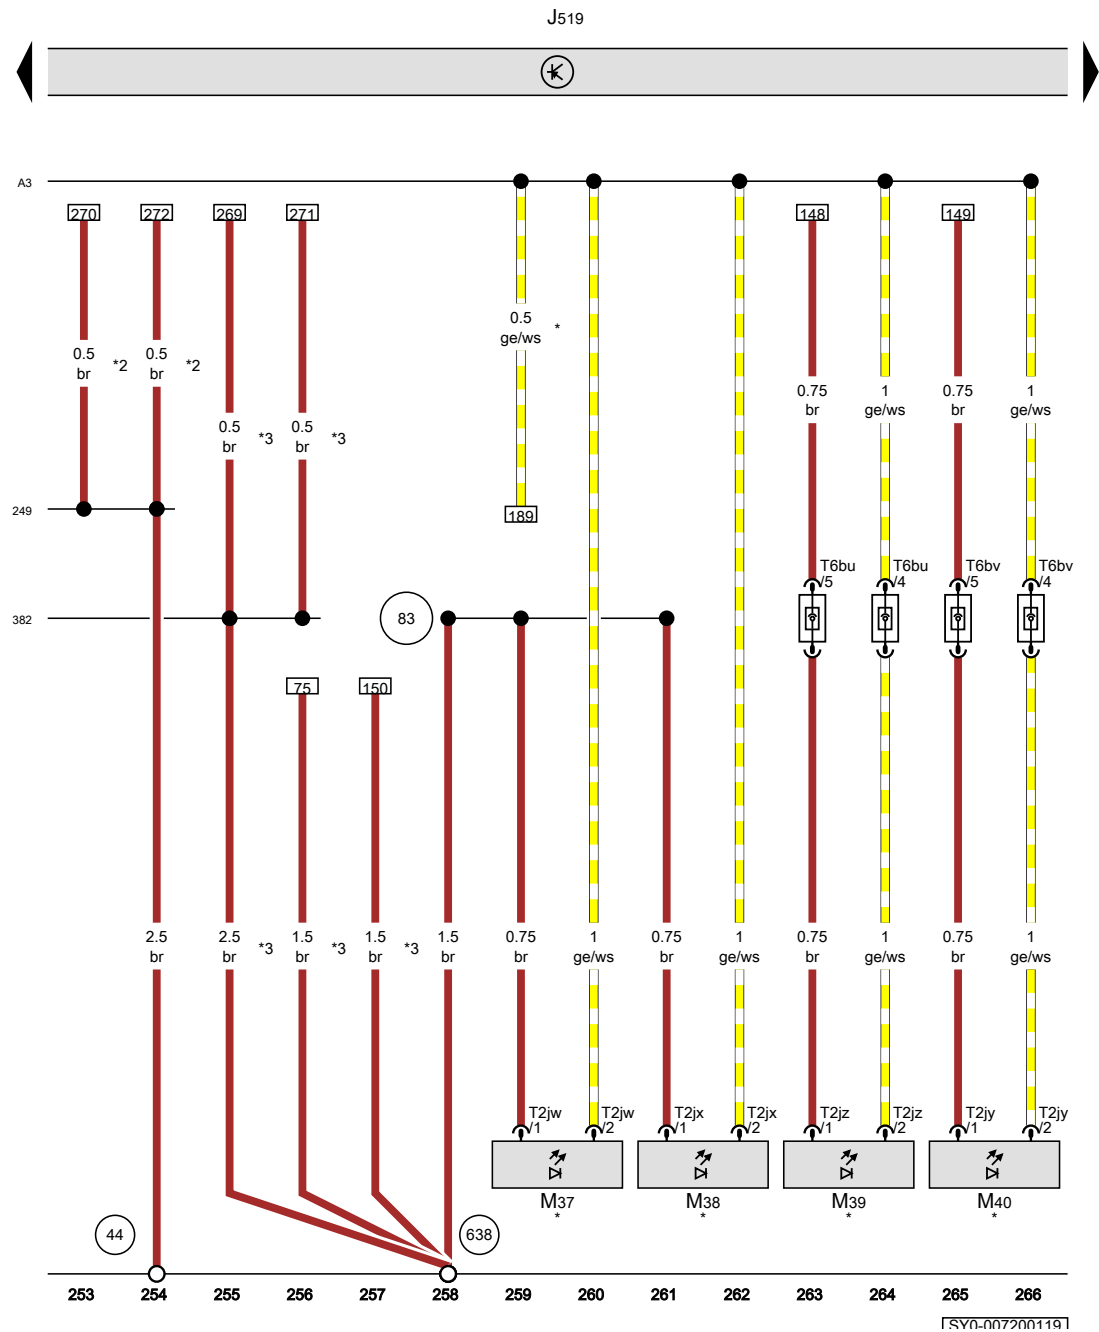


Onboard supply control unit, Rear left side marker bulb,
Rear right side marker bulb, Centre left side marker bulb,
Centre right side marker bulb

- | | |
|------|-------------------------------|
| J519 | Onboard supply control unit |
| M37 | Rear left side marker bulb |
| M38 | Rear right side marker bulb |
| M39 | Centre left side marker bulb |
| M40 | Centre right side marker bulb |
| T2jw | 2-pin connector, black |
| T2jx | 2-pin connector, black |
| T2jy | 2-pin connector, black |
| T2jz | 2-pin connector, black |
| T6bu | 6-pin connector, black |
| T6bv | 6-pin connector, black |

- 44 Earth point, lower part of left A-pillar
- 83 Earth connection 1, in front right wiring harness
- 249 Earth connection 2, in interior wiring harness
- 382 Earth connection 17, in main wiring harness
- 638 Earth point, on right A-pillar
- A3 Positive connection (58), in dash panel wiring harness
 - * For panel van and Kombi models
 - *2 For left-hand drive models
 - *3 For right-hand drive models

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink


Onboard supply control unit, Data bus diagnostic interface

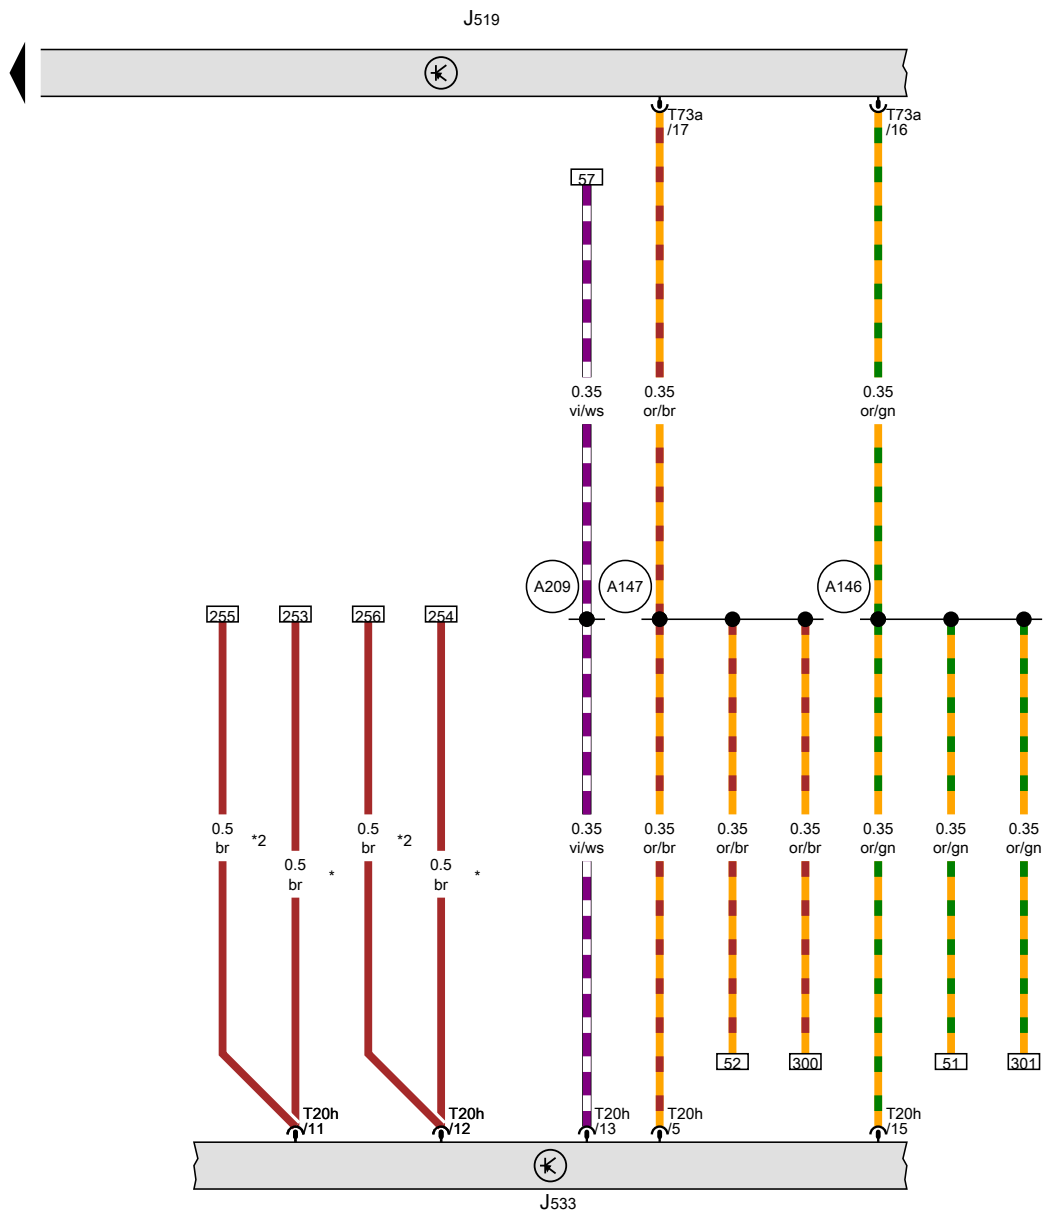


- J519 Onboard supply control unit
- J533 Data bus diagnostic interface
- T20h 20-pin connector, red
- T73a 73-pin connector, black
- A146 Connection (convenience CAN bus, high), in dash panel wiring harness
- A147 Connection (convenience CAN bus, low), in dash panel wiring harness
- A209 Connection 1 (LIN bus) in dash panel wiring harness
- * For left-hand drive models
- *2 For right-hand drive models

Engine/motor control unit

J623 Engine/motor control unit
T94b 94-pin connector, black
* For models with cruise control system (CCS)

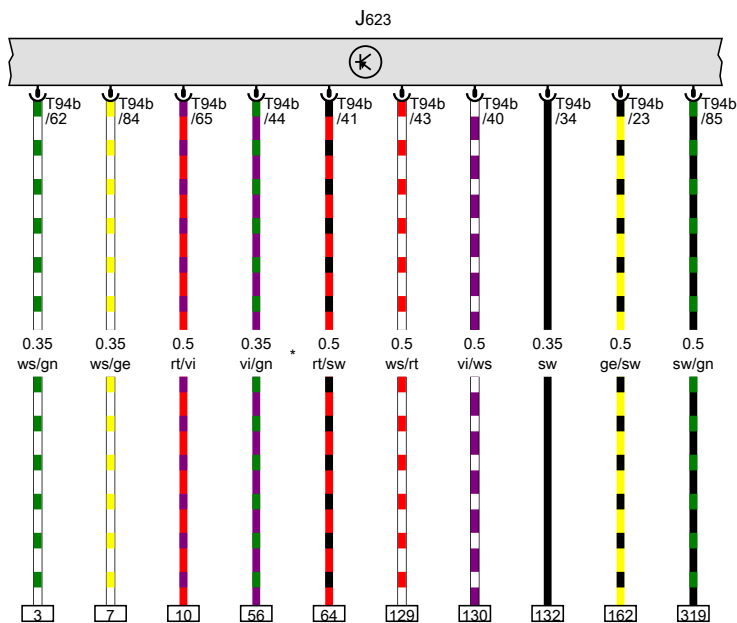

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink

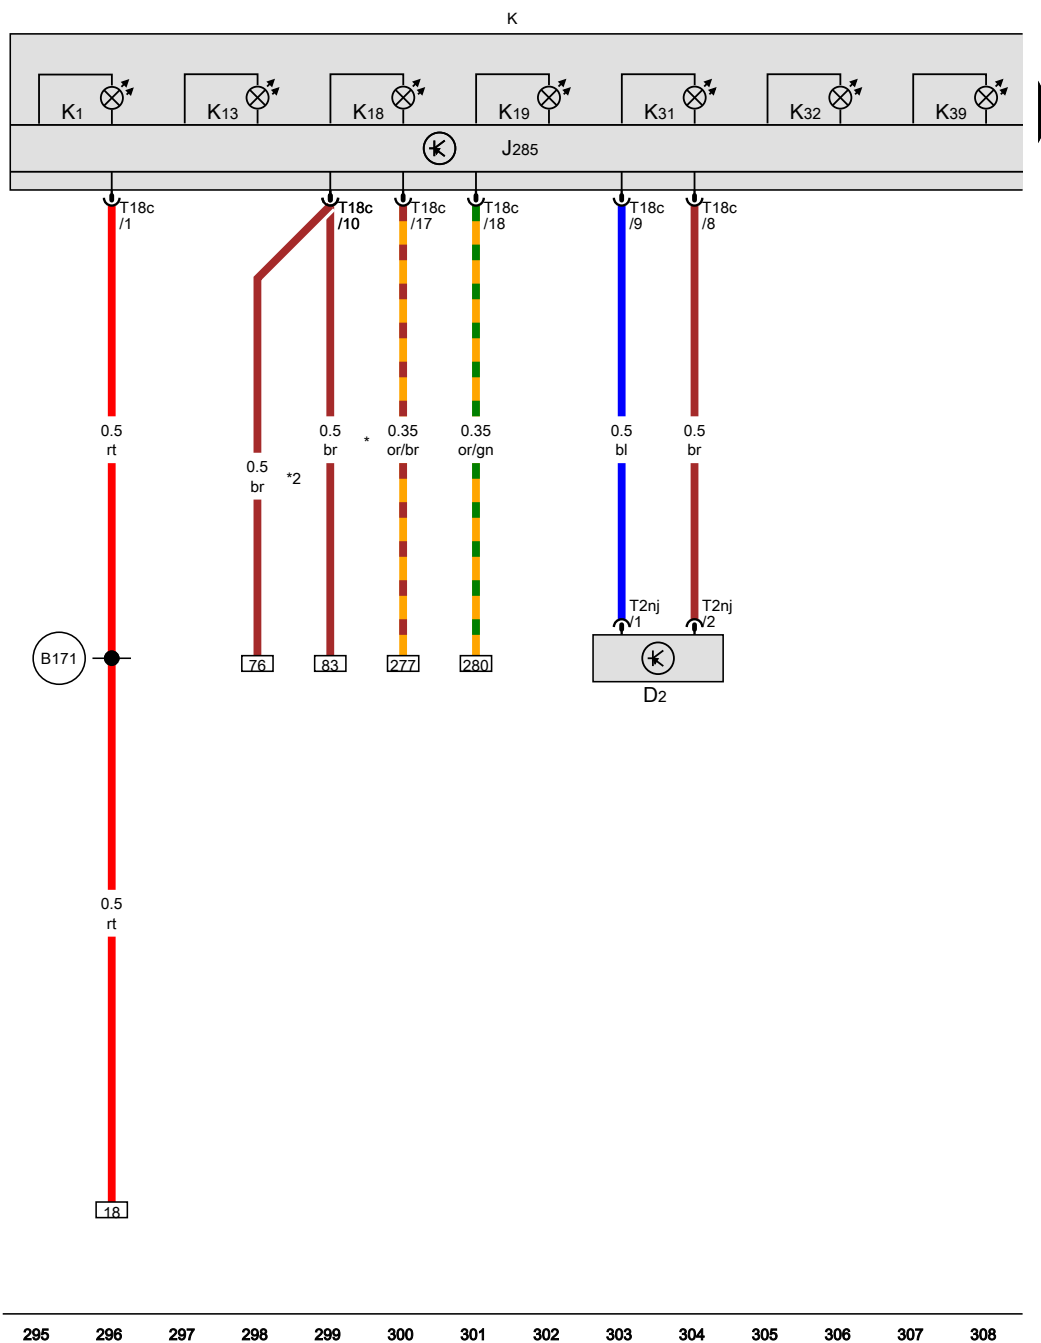


Immobiliser reader coil, Dash panel insert

- D2 Immobiliser reader coil
- J285 Control unit in dash panel insert
- K Dash panel insert
- K1 Main beam warning lamp
- K13 Rear fog light warning lamp
- K18 Trailer operation warning lamp
- K19 Seat belt warning system warning lamp
- K31 Cruise control system warning lamp
- K32 Brake pad warning lamp
- K39 Central warning lamp in display unit
- T2nj 2-pin connector, black
- T18c 18-pin connector, black

B171 Positive connection 3 (30), in interior wiring harness

* For left-hand drive models


*2 For right-hand drive models

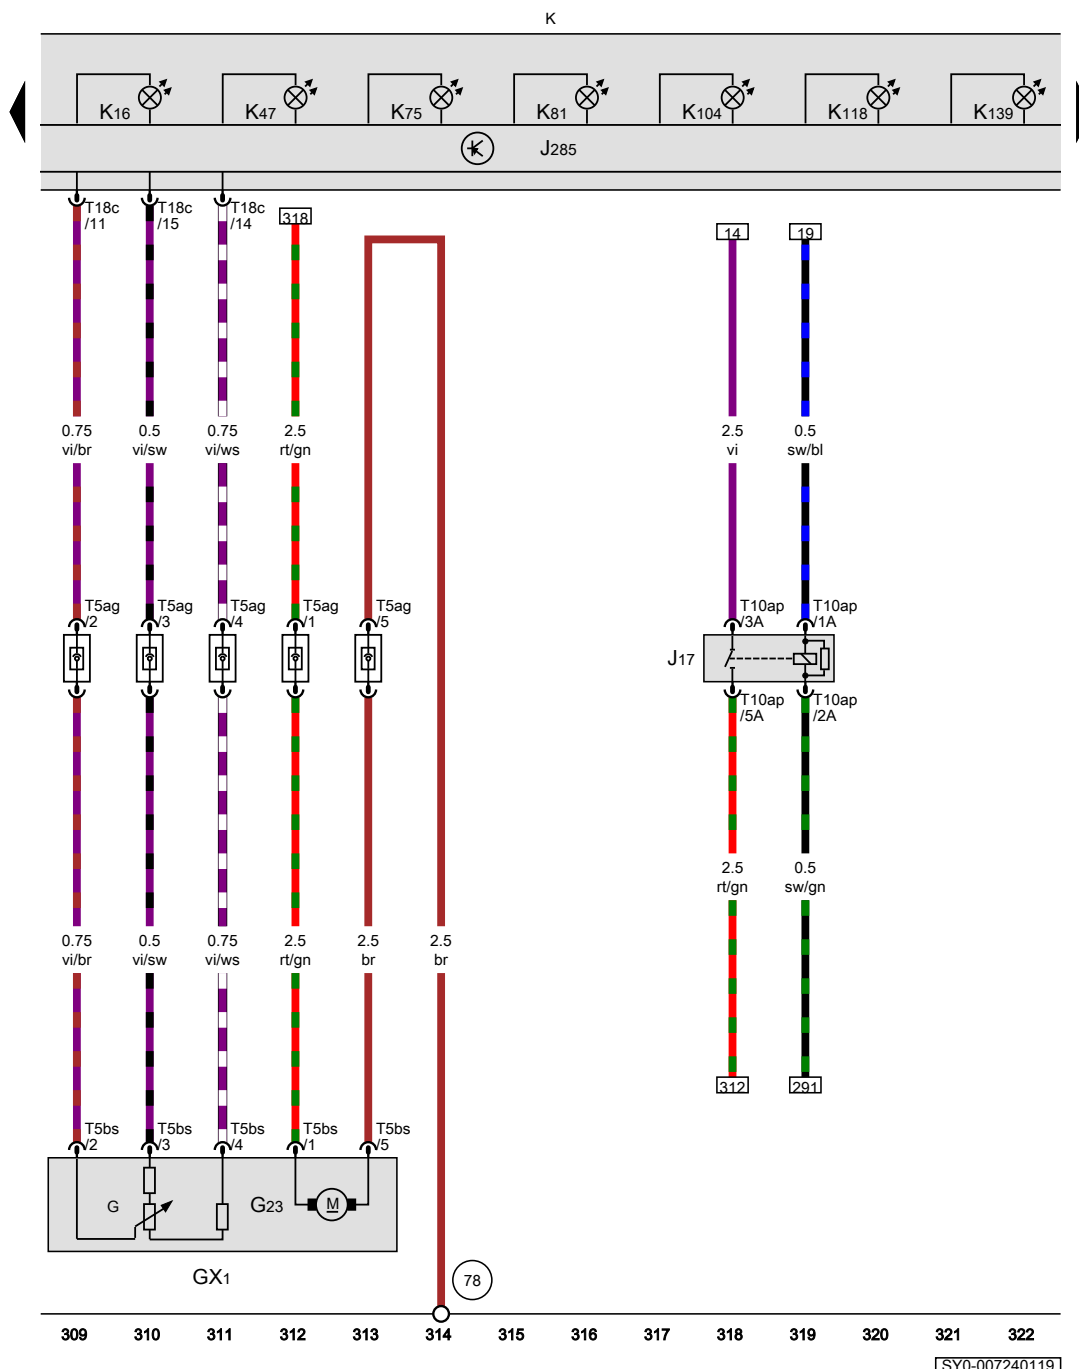

Fuel delivery unit, Fuel pump relay, Dash panel insert

- G Fuel gauge sender
- GX1 Fuel delivery unit
- G23 Fuel pump
- J17 Fuel pump relay
- J285 Control unit in dash panel insert
- K Dash panel insert
- K16 Reserve fuel warning lamp
- K47 ABS warning lamp
- K75 Airbag warning lamp
- K81 Differential lock warning lamp
- K104 Diesel electronics warning lamp
- K118 Brake system warning lamp
- K139 Handbrake warning lamp
- T5ag 5-pin connector, black
- T5bs 5-pin connector, black
- T10ap 10-pin connector, black
- T18c 18-pin connector, black

78 Earth point, lower part of right B-pillar

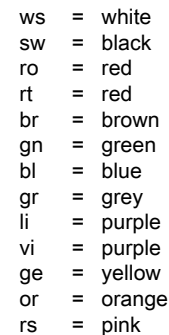


F9	Handbrake warning switch
J285	Control unit in dash panel insert
K	Dash panel insert
K149	Engine electronics warning lamp
K155	Warning lamp for electronic stabilisation program and TCS
K216	Warning lamp 2 for electronic stabilisation program and TCS
K220	Tyre Pressure Loss Indicator warning lamp
K240	Lane departure warning lamp
K273	Brake prompt warning lamp
K279	Electrohydraulic power steering warning lamp
T2ma	2-pin connector, black
T18c	18-pin connector, black


- 78 Earth point, lower part of right B-pillar
- 277 Earth connection 3, in interior wiring harness
- 279 Earth connection 5, in interior wiring harness

2.0l diesel engine , DAVA

From September 2016

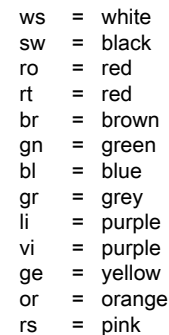

602	Earth point, in front left footwell
B549	Connection 2 (LIN bus) in main wiring harness
*	According to equipment
*2	Earth supply via housing

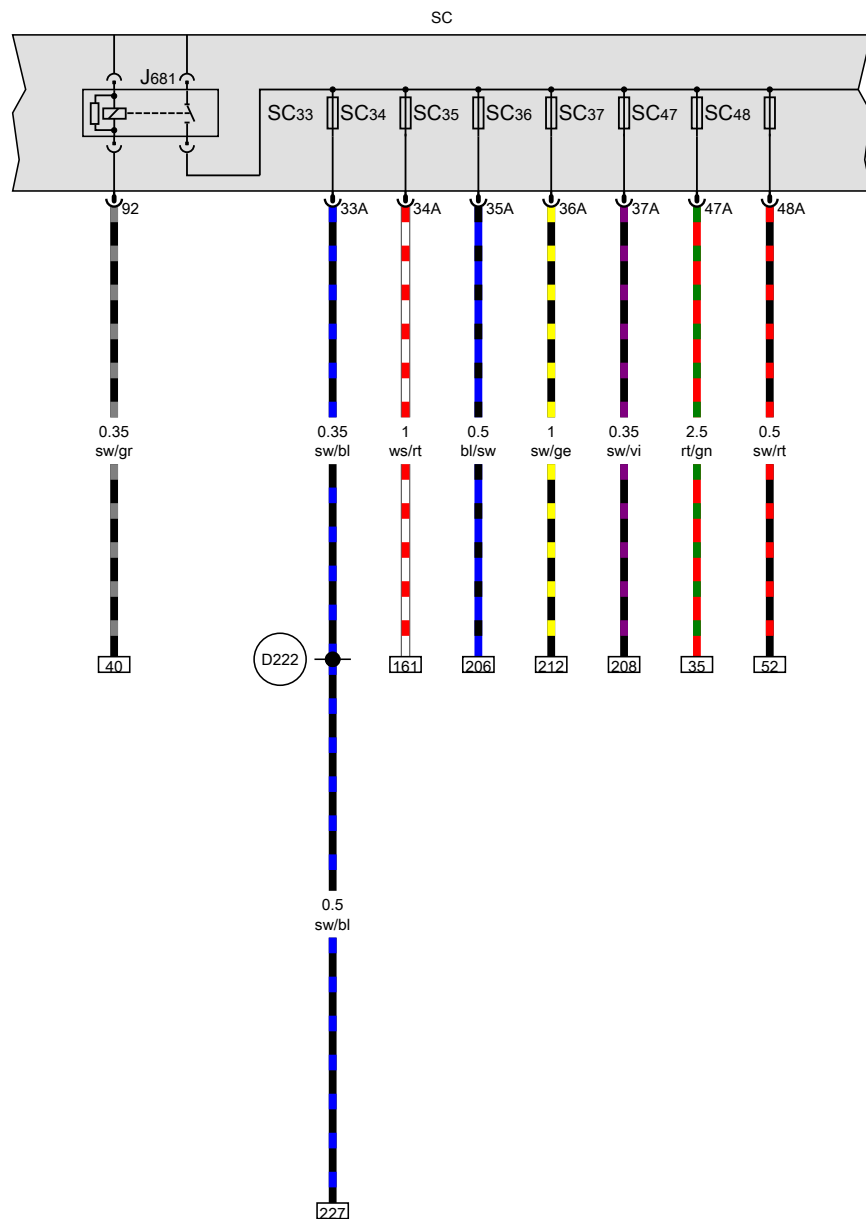

Fuse holder C

J681 Terminal 15 voltage supply relay 2

SC Fuse holder C

SC33 Fuse 33 on fuse holder C

SC34 Fuse 34 on fuse holder C

SC35 Fuse 35 on fuse holder C

SC36 Fuse 36 on fuse holder C

SC37 Fuse 37 on fuse holder C

SC47 Fuse 47 on fuse holder C

SC48 Fuse 48 on fuse holder C

D222 Connection 10 (87a), in engine compartment wiring harness

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink

15 16 17 18 19 20 21 22 23 24 25 26 27 28

13V0-0080301191

Automatic glow period control unit, Engine/motor control unit

J179 Automatic glow period control unit
J623 Engine/motor control unit
T11b 11-pin connector
T94b 94-pin connector, black


84 Earth connection, engine block, in front right wiring harness


179 Earth connection, in left headlight wiring harness

655 Earth point, on left headlight


A23 Connection (30al), in dash panel wiring harness

D180 Connection (87a), in engine compartment wiring harness

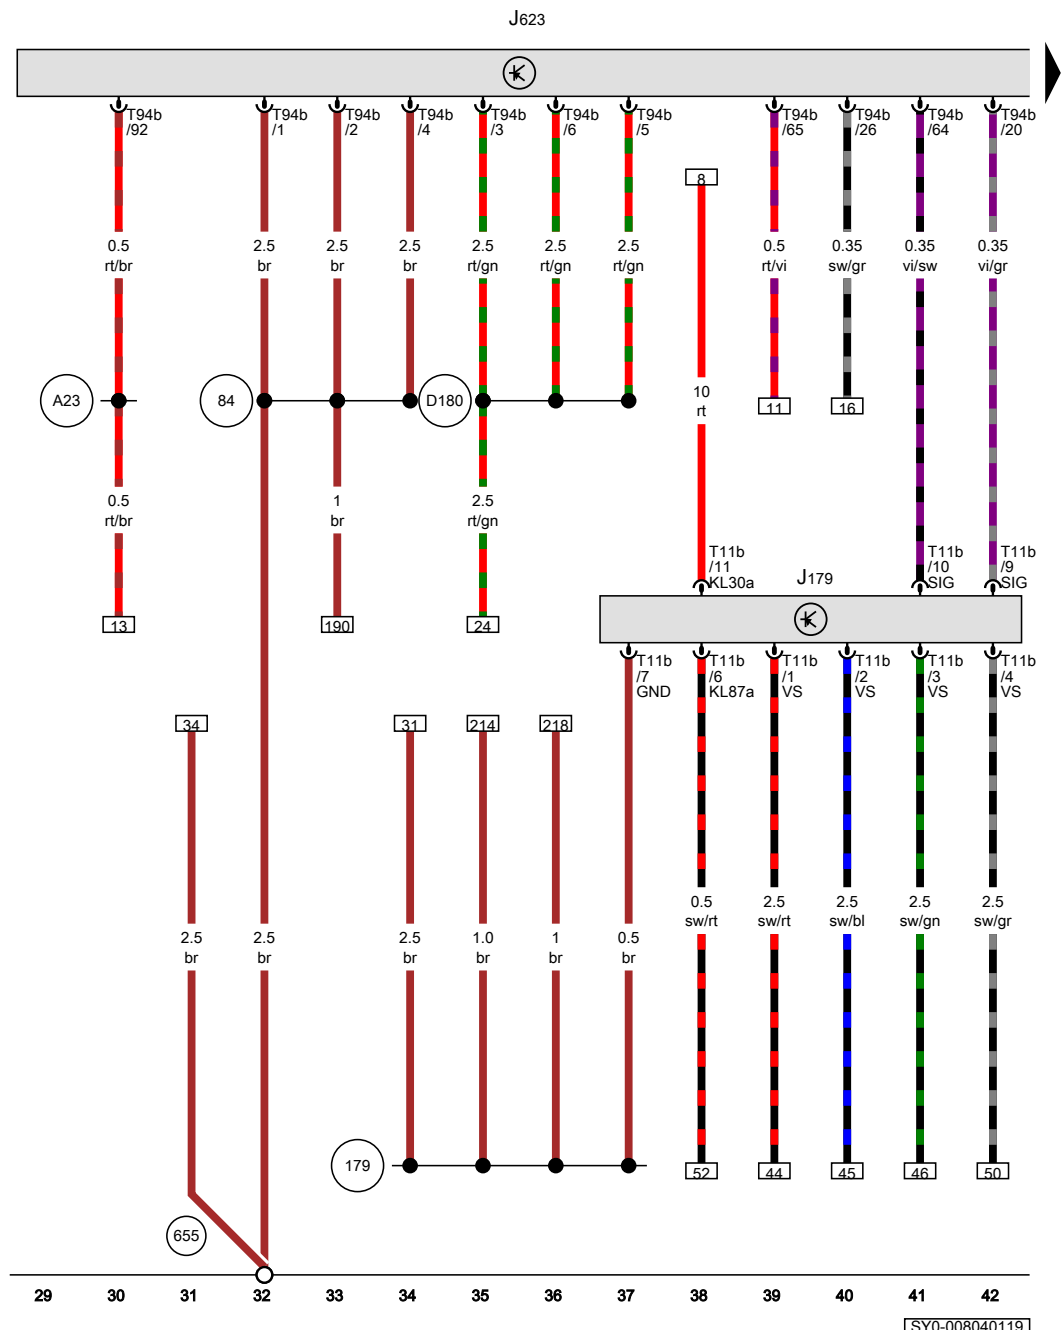

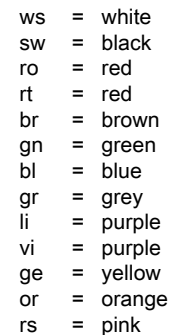


G679	Cylinder 3 combustion chamber pressure sender
J623	Engine/motor control unit
N274	Charge pressure control solenoid valve 2
N316	Intake manifold flap valve
Q10	Glow plug 1
Q11	Glow plug 2
Q12	Glow plug 3
Q13	Glow plug 4
T1yl	1-pin connector
T1ym	1-pin connector
T1yn	1-pin connector
T2od	2-pin connector, black
T2og	2-pin connector, black
T4dx	4-pin connector, black
T14ak	14-pin connector, grey
T60e	60-pin connector, black
D207	Connection 7 (87a), in engine compartment wiring harness
*	Earth supply via housing

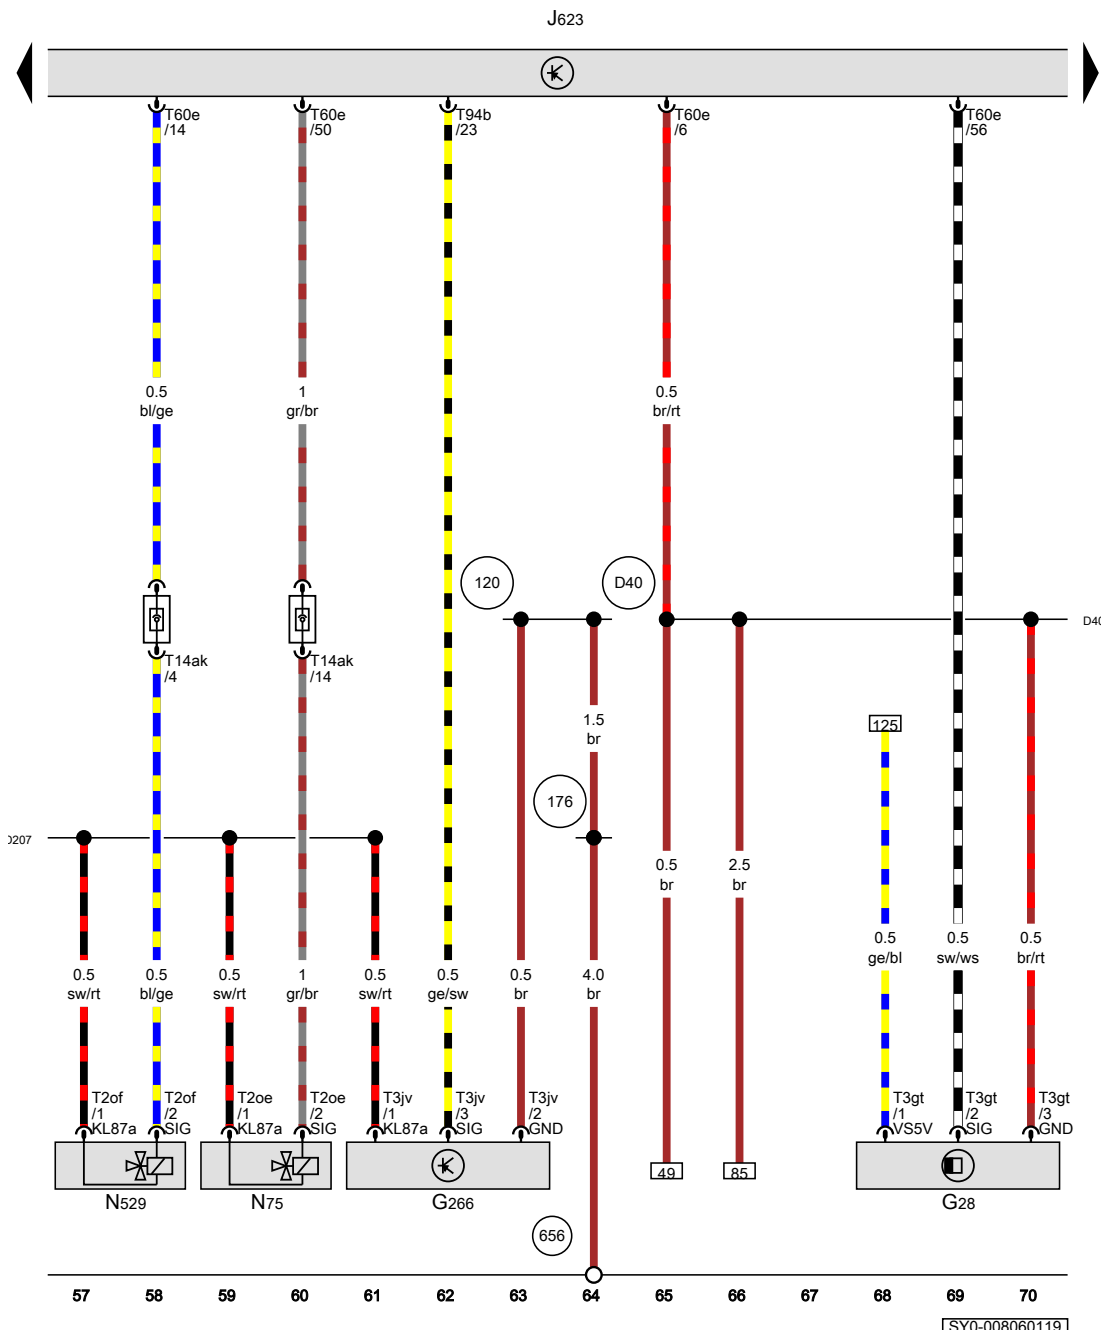

Engine speed sender, Oil level and oil temperature sender, Engine/motor control unit, Charge pressure control solenoid valve, Turbine changeover valve

- G28 Engine speed sender
- G266 Oil level and oil temperature sender
- J623 Engine/motor control unit
- N75 Charge pressure control solenoid valve
- N529 Turbine changeover valve
- T20e 2-pin connector, black
- T20f 2-pin connector, black
- T3gt 3-pin connector, black
- T3jv 3-pin connector, black
- T14ak 14-pin connector, grey
- T60e 60-pin connector, black
- T94b 94-pin connector, black
- 120 Earth connection 2, in headlight wiring harness
- 176 Earth connection, in right headlight wiring harness
- 656 Earth point, on right headlight
- D40 Connection 2, in engine prewiring harness
- D207 Connection 7 (87a), in engine compartment wiring harness

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

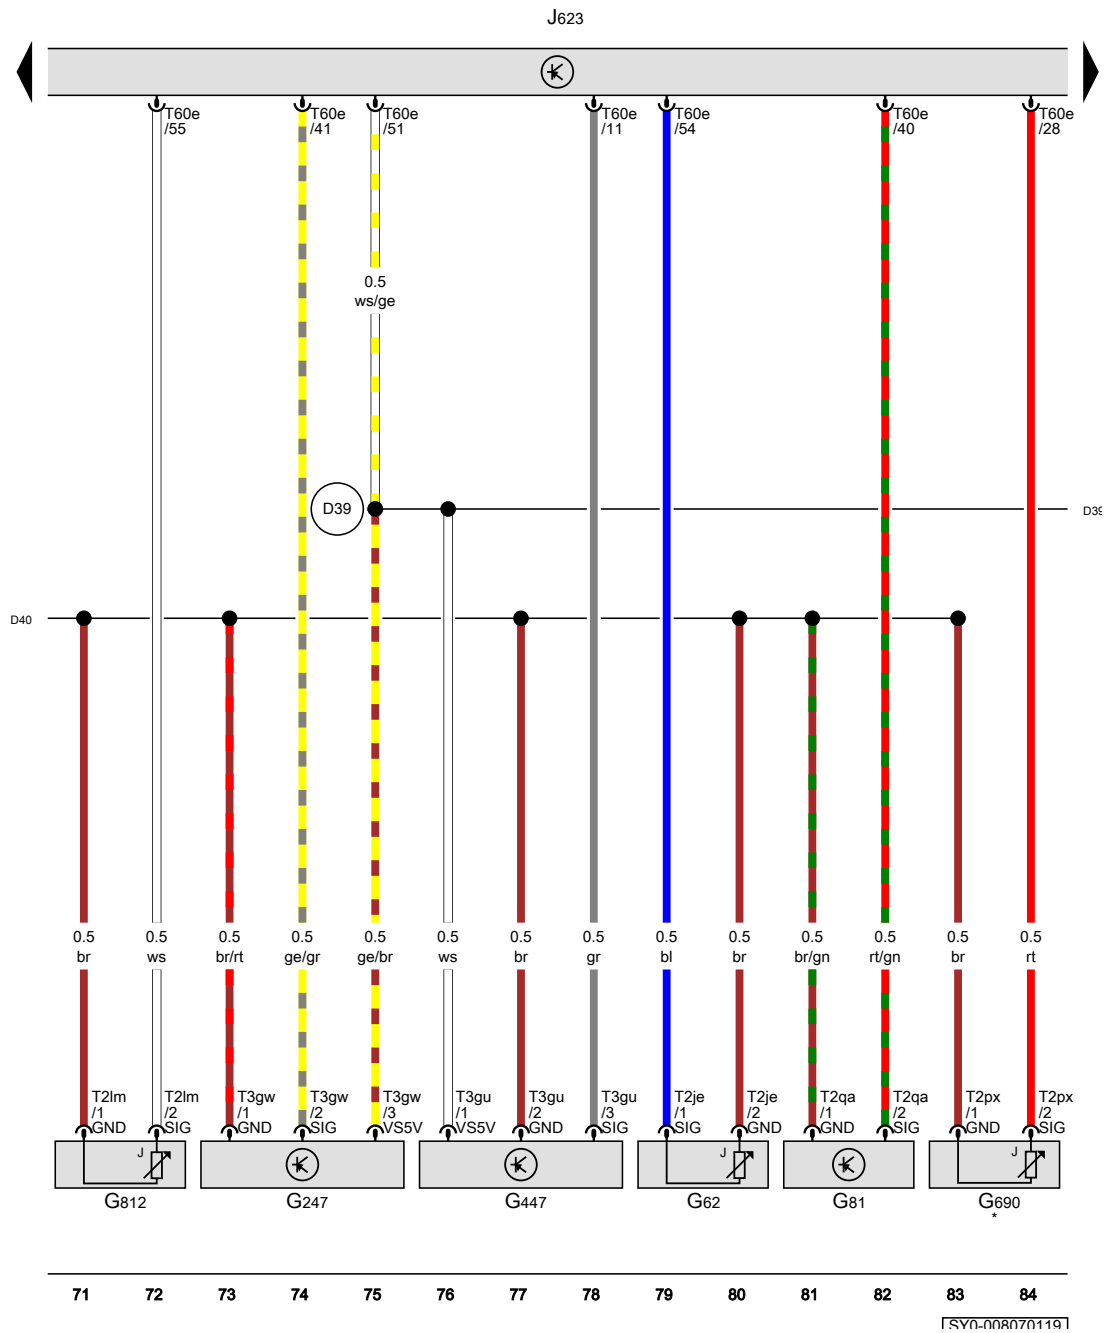


Coolant temperature sender, Fuel temperature sender, Fuel pressure sender, Charge pressure sender 2, Temperature sensor 2 for exhaust recirculation, Coolant temperature sender 3, Engine/motor control unit

- | | |
|------|--|
| G62 | Coolant temperature sender |
| G81 | Fuel temperature sender |
| G247 | Fuel pressure sender |
| G447 | Charge pressure sender 2 |
| G690 | Temperature sensor 2 for exhaust recirculation |
| G812 | Coolant temperature sender 3 |
| J623 | Engine/motor control unit |
| T2je | 2-pin connector, black |
| T2lm | 2-pin connector, black, colourless |
| T2px | 2-pin connector, brown |
| T2qa | 2-pin connector, black |
| T3gu | 3-pin connector, black |
| T3gw | 3-pin connector, black |
| T60e | 60-pin connector, black |

- D39 Connection 1, in engine prewiring harness
- D40 Connection 2, in engine prewiring harness


* Pre-wired component

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink

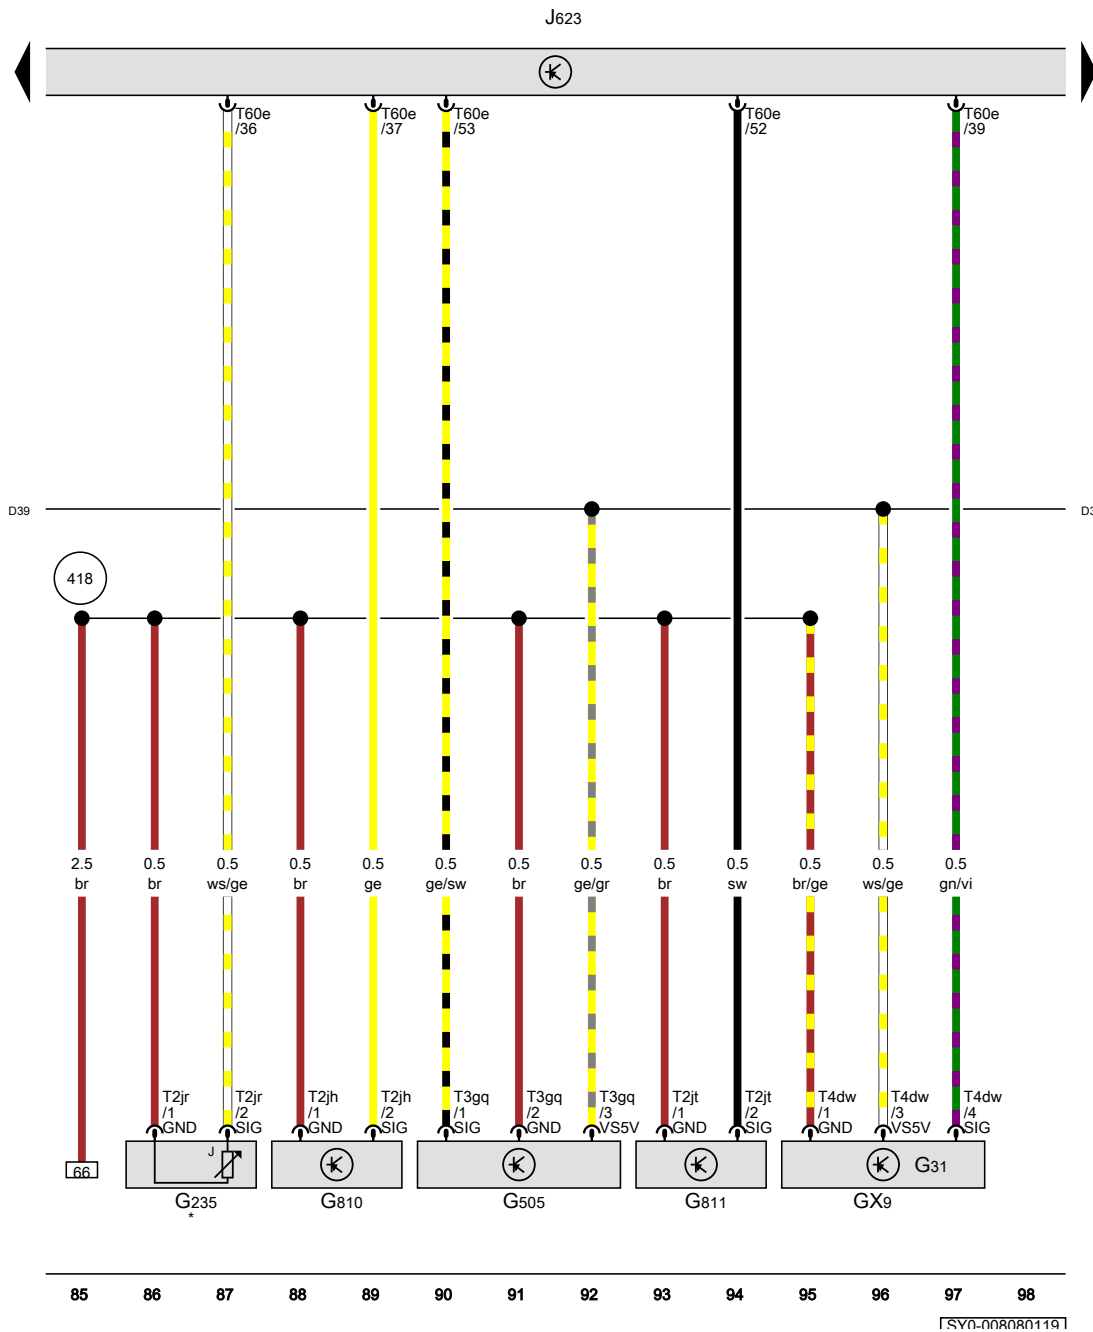

Intake manifold sender, Exhaust gas temperature sender 1, Pressure differential sender, Charge air temperature sender before charge air cooler, Charge air temperature sender after charge air cooler, Engine/motor control unit

- GX9 Intake manifold sender
- G31 Charge pressure sender
- G235 Exhaust gas temperature sender 1
- G505 Pressure differential sender
- G810 Charge air temperature sender before charge air cooler
- G811 Charge air temperature sender after charge air cooler
- J623 Engine/motor control unit
- T2jh 2-pin connector, black
- T2jr 2-pin connector, black
- T2jt 2-pin connector, black
- T3gq 3-pin connector, black
- T4dw 4-pin connector, black
- T60e 60-pin connector, black
- 418 Earth connection 10, in engine compartment wiring harness
- D39 Connection 1, in engine prewiring harness
- * Pre-wired component

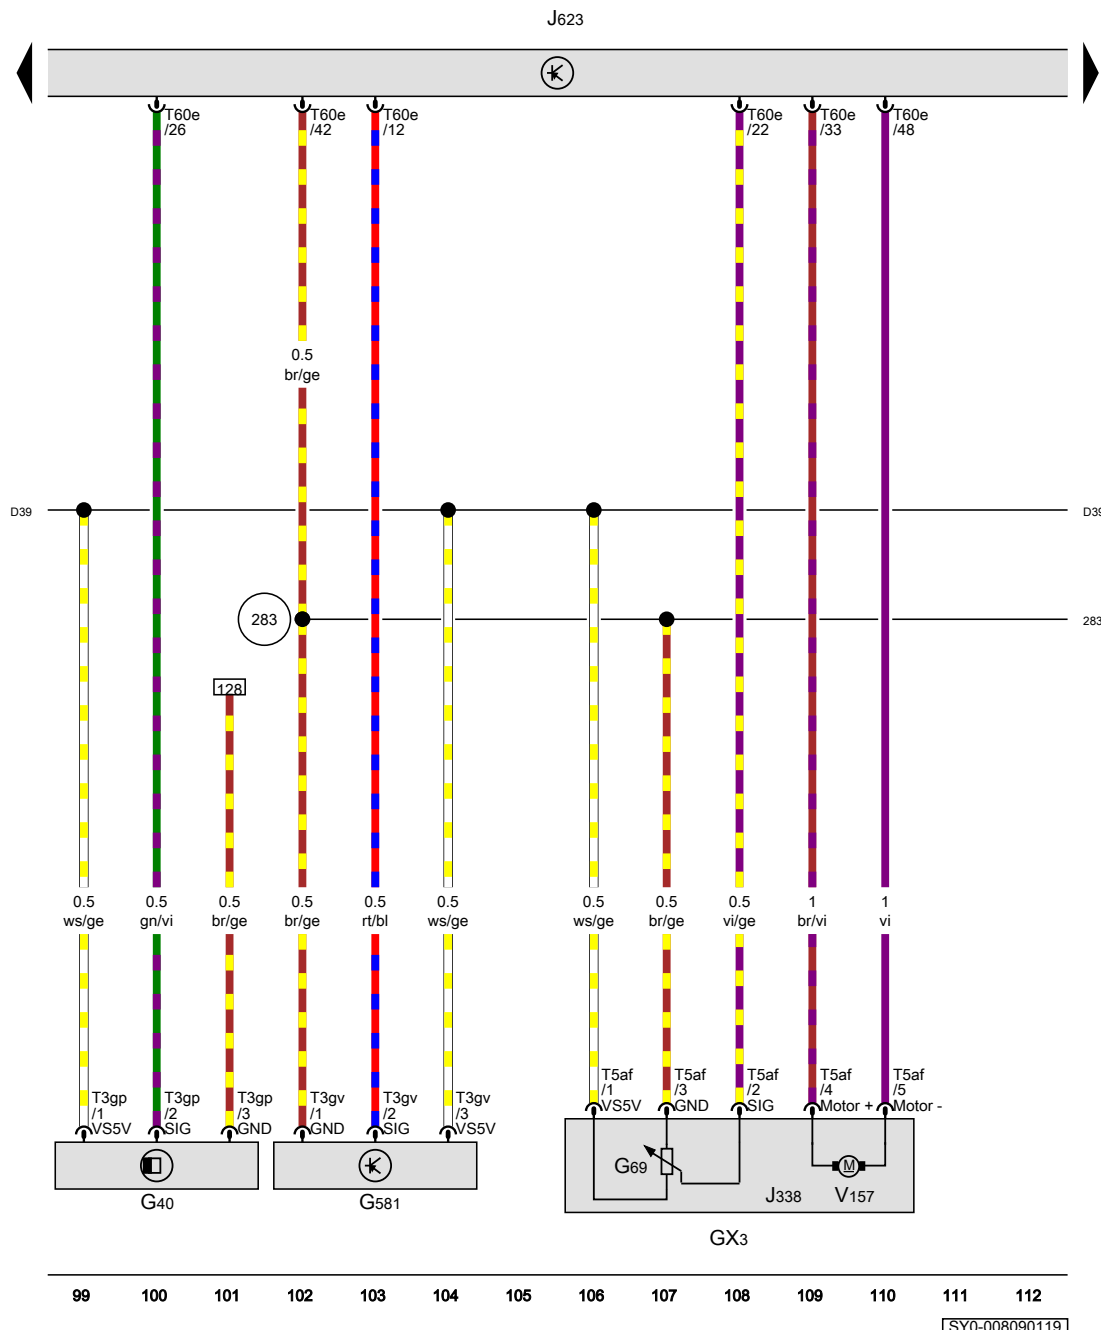


Throttle valve module, Hall sender, Position sender for charge pressure positioner, Engine/motor control unit

- GX3 Throttle valve module
- G40 Hall sender
- G69 Throttle valve potentiometer
- G581 Position sender for charge pressure positioner
- J338 Throttle valve module
- J623 Engine/motor control unit
- T3gp 3-pin connector, black
- T3gv 3-pin connector, brown
- T5af 5-pin connector, black
- T60e 60-pin connector, black
- V157 Intake manifold flap motor

283 Earth point 2, engine prewiring harness

D39 Connection 1, in engine prewiring harness

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

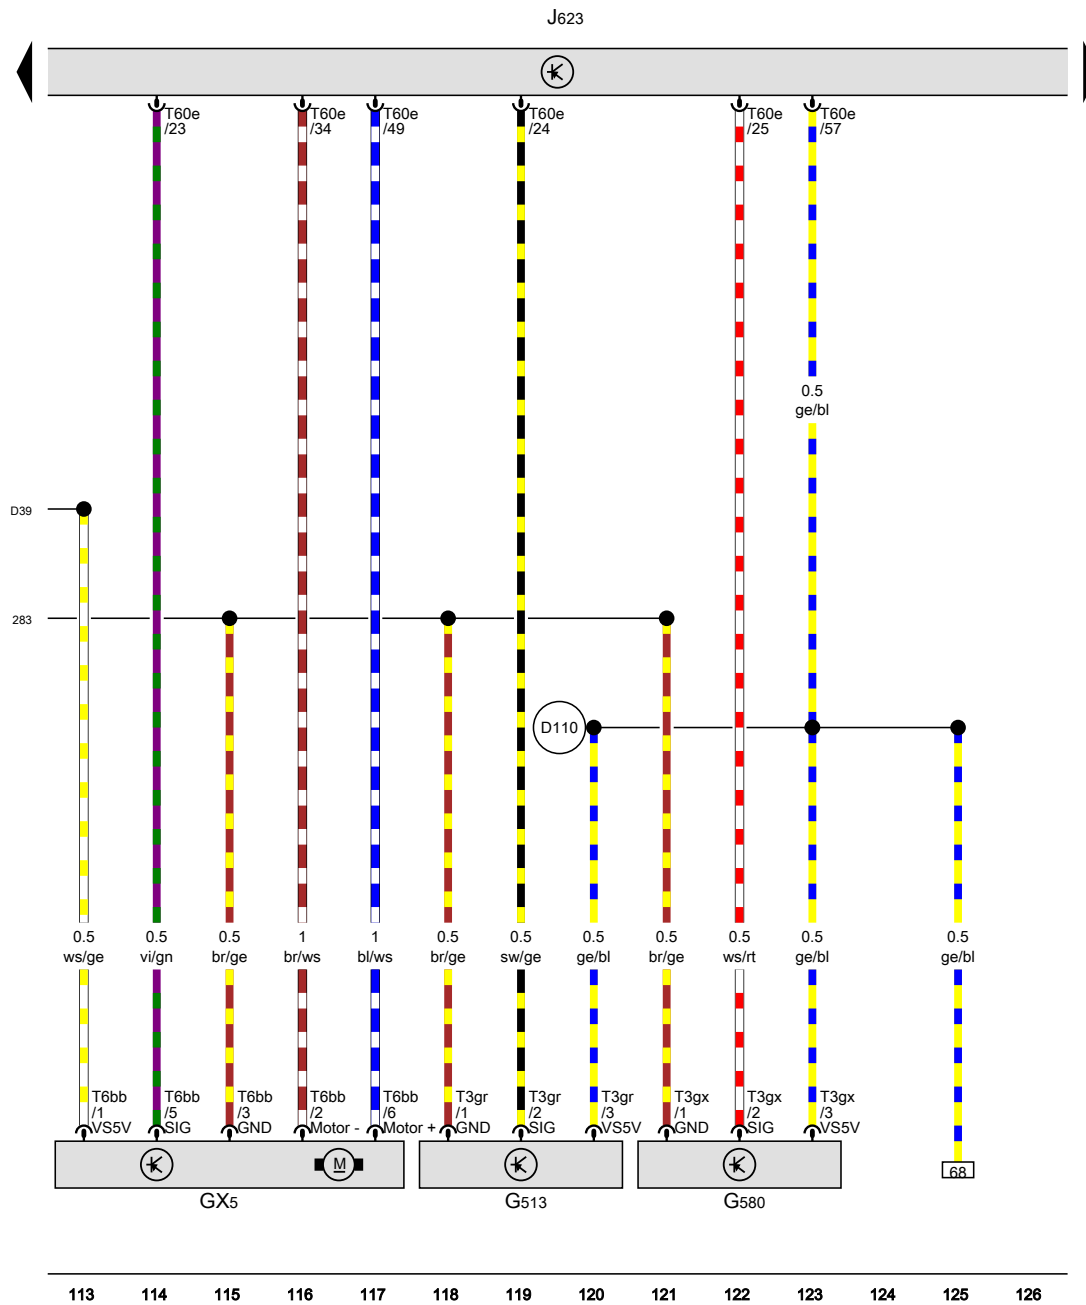


Exhaust gas recirculation valve 1, Variable intake manifold position sender, Position sender 2 for charge pressure positioner, Engine/motor control unit

- GX5 Exhaust gas recirculation valve 1
- G513 Variable intake manifold position sender
- G580 Position sender 2 for charge pressure positioner
- J623 Engine/motor control unit
- T3gr 3-pin connector, brown
- T3gx 3-pin connector, brown
- T6bb 6-pin connector, grey
- T60e 60-pin connector, black
- 283 Earth point 2, engine prewiring harness
- D39 Connection 1, in engine prewiring harness
- D110 Connection 8 in engine compartment wiring harness


ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

1SY0-0081001191

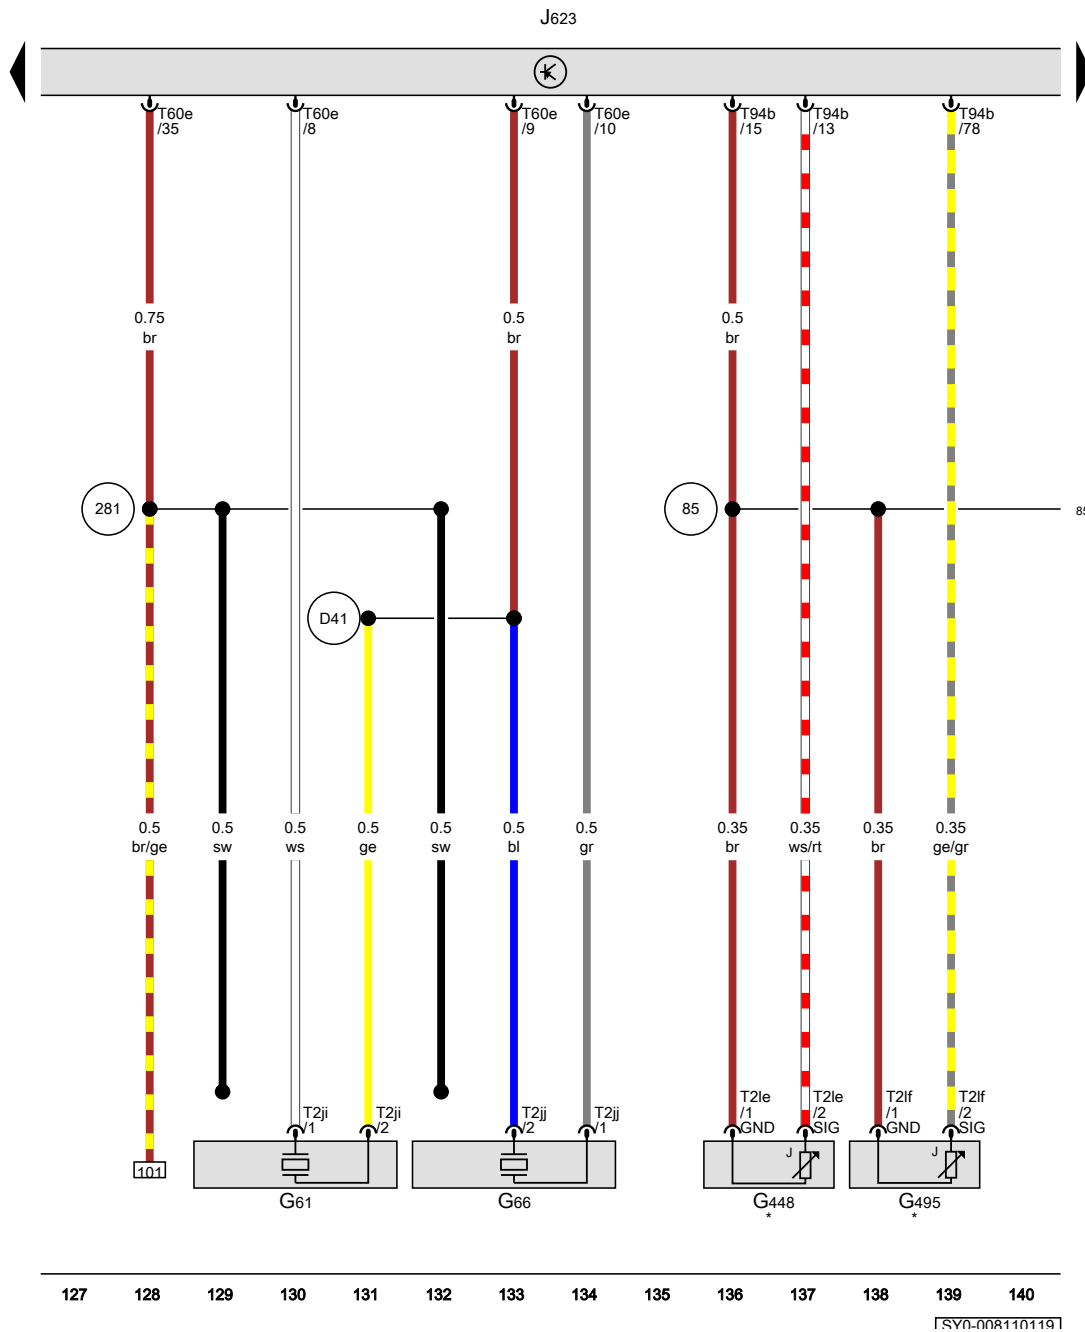

Knock sensor 1, Knock sensor 2, Exhaust gas temperature sender 2, Exhaust gas temperature sender 3, Engine/motor control unit

- G61 Knock sensor 1
- G66 Knock sensor 2
- G448 Exhaust gas temperature sender 2
- G495 Exhaust gas temperature sender 3
- J623 Engine/motor control unit
- T2ji 2-pin connector, black
- T2jj 2-pin connector, black
- T2le 2-pin connector, black
- T2lf 2-pin connector, brown
- T60e 60-pin connector, black
- T94b 94-pin connector, black
- 85 Earth connection 1, in engine compartment wiring harness
- 281 Earth point 1, engine prewiring harness
- D41 Connection 3, in engine prewiring harness
- * Pre-wired component

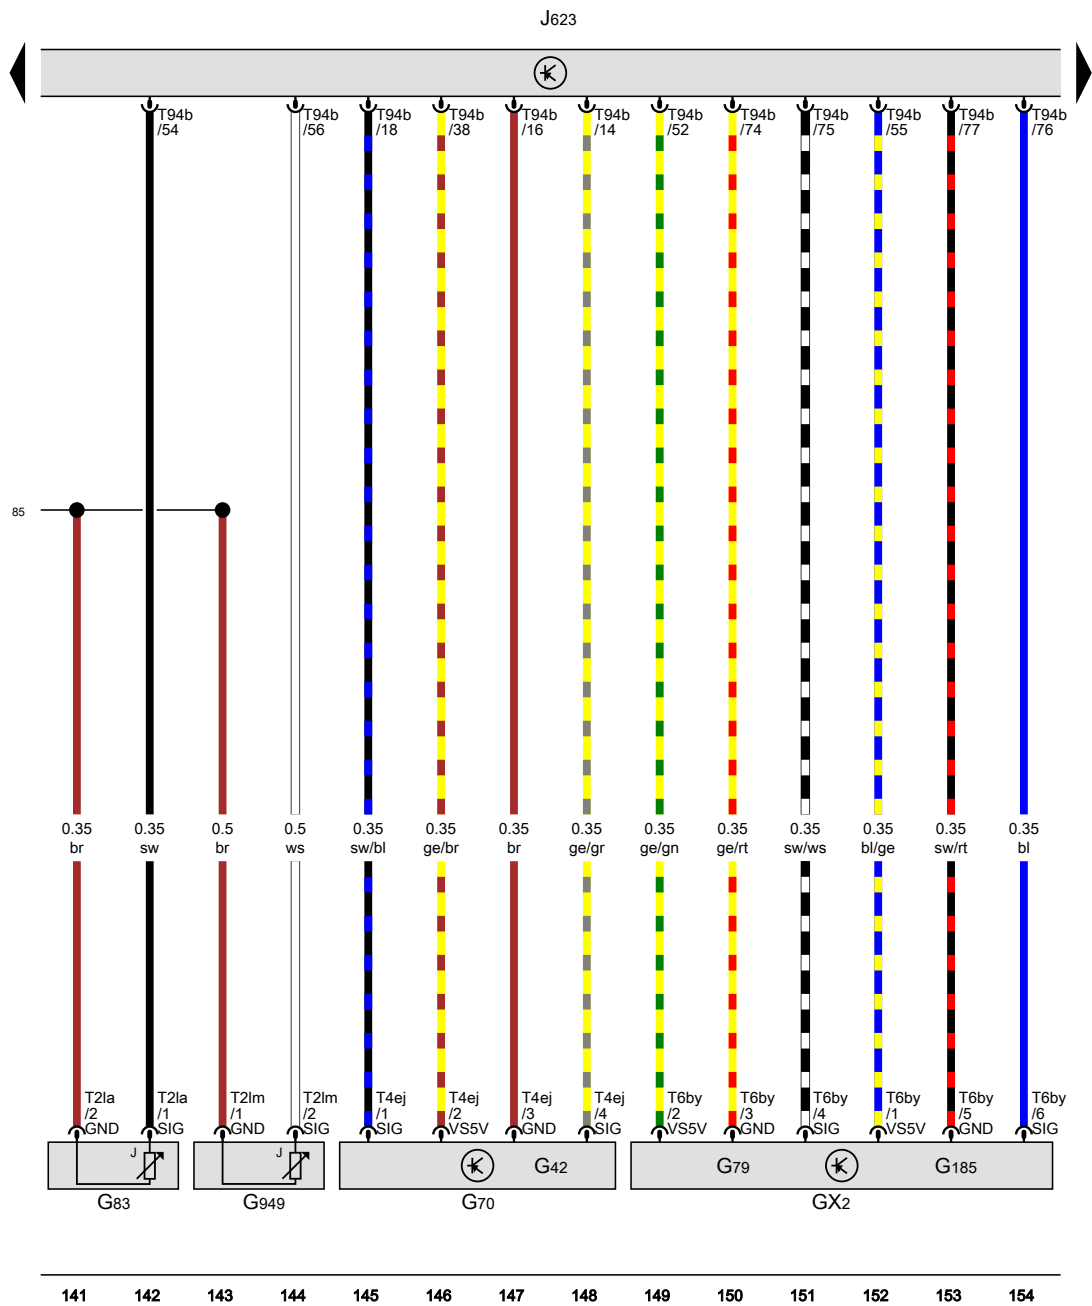

Accelerator pedal module, Air mass meter, Radiator outlet coolant temperature sender, Temperature sensor 3 for exhaust recirculation, Engine/motor control unit


- GX2 Accelerator pedal module
- G42 Intake air temperature sender
- G70 Air mass meter
- G79 Accelerator position sender
- G83 Radiator outlet coolant temperature sender
- G185 Accelerator position sender 2
- G949 Temperature sensor 3 for exhaust recirculation
- J623 Engine/motor control unit
- T2la 2-pin connector, black
- T2lm 2-pin connector, colourless, black
- T4ej 4-pin connector, black
- T6by 6-pin connector, black
- T94b 94-pin connector, black


85 Earth connection 1, in engine compartment wiring harness

Lambda probe 1 before catalytic converter, Particulate sensor, Engine/motor control unit, Control unit for sensor electronics

- GX10 Lambda probe 1 before catalytic converter
- G784 Particulate sensor
- J623 Engine/motor control unit
- J849 Control unit for sensor electronics
- T4ev 4-pin connector, black
- T6be 6-pin connector, black
- T94b 94-pin connector, black

- D197 Connection 5 (87a), in engine compartment wiring harness
- E151 Connection 1 (CAN bus, engine/motor control unit, high)
- E153 Connection 1 (CAN bus, engine/motor control unit, low)
- * Pre-wired component

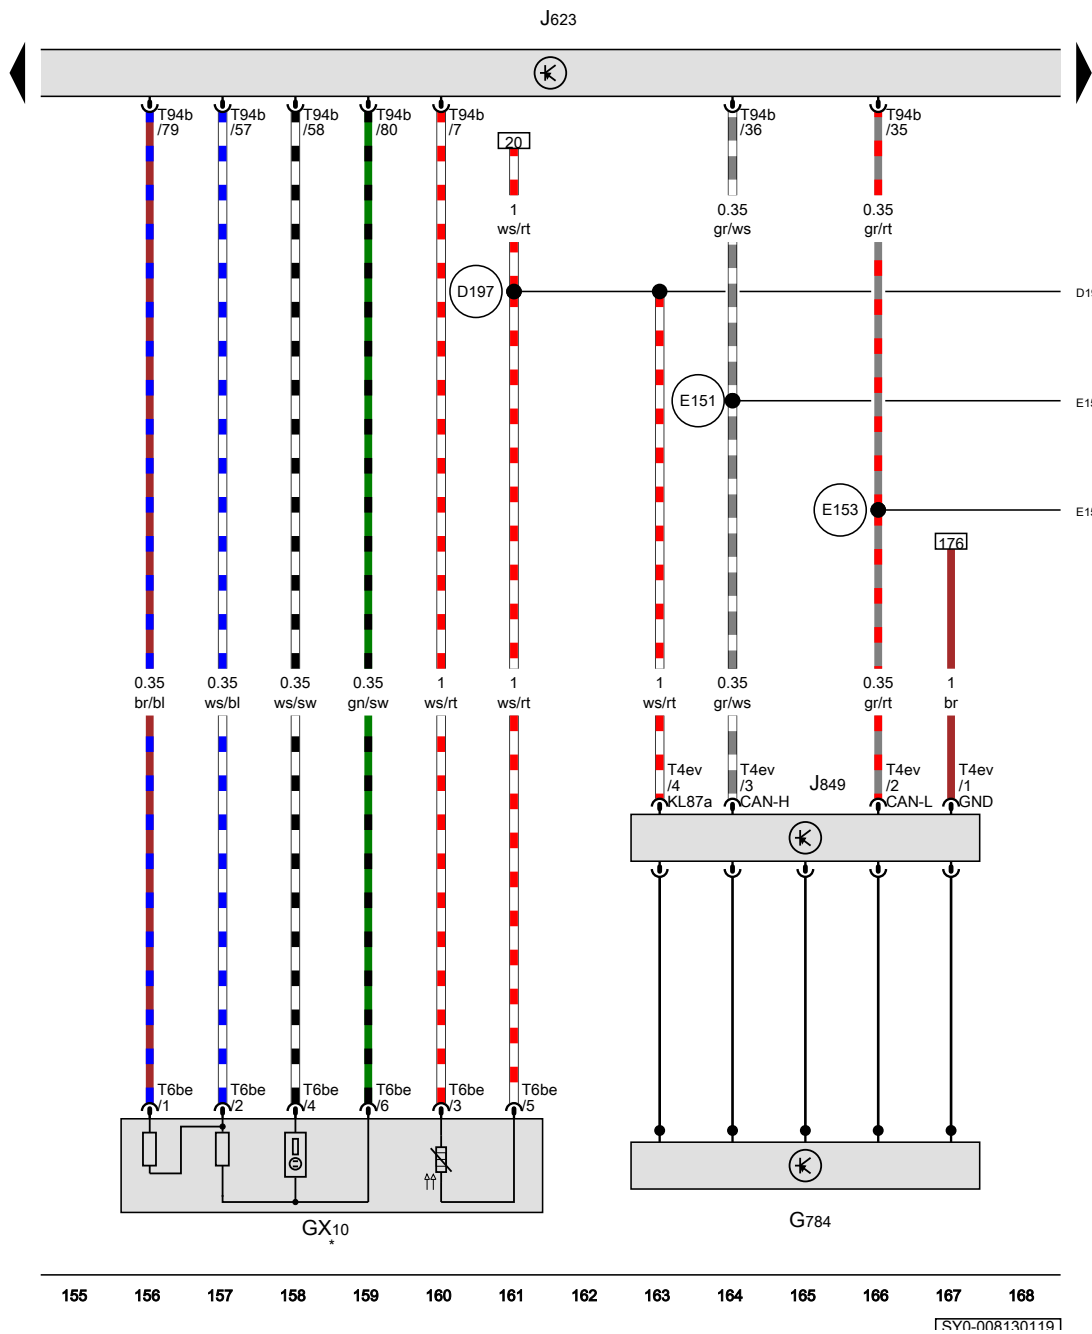

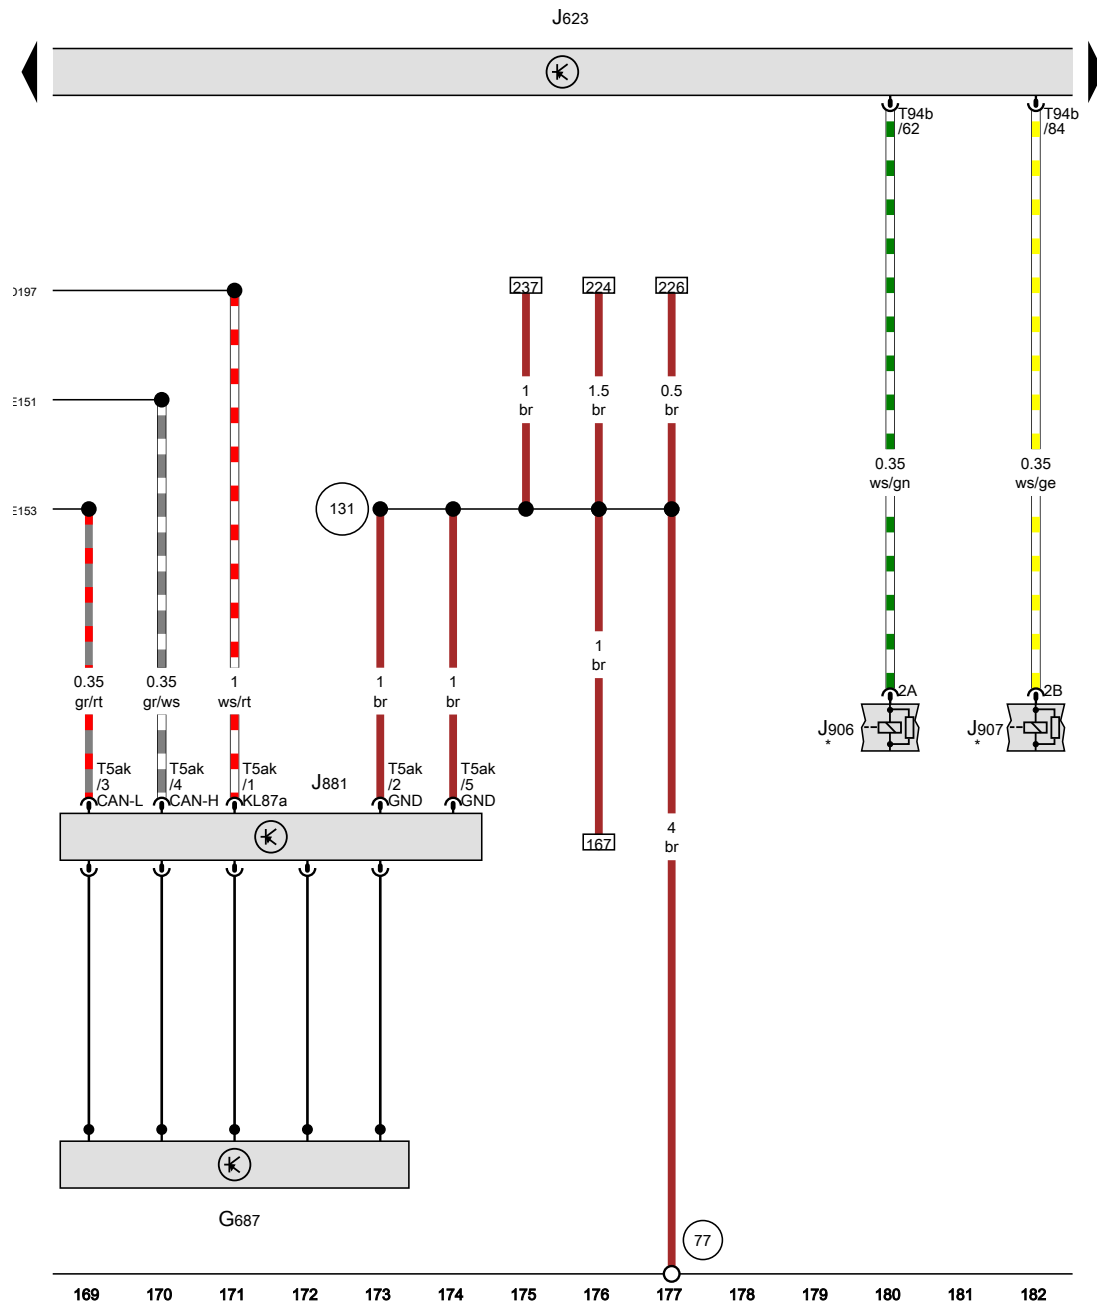


NOx sender 2, Engine/motor control unit, Control unit for NOx sender 2, Starter relay 1, Starter relay 2

- G687 NOx sender 2
- J623 Engine/motor control unit
- J881 Control unit for NOx sender 2
- J906 Starter relay 1
- J907 Starter relay 2
- T5ak 5-pin connector, black
- T94b 94-pin connector, black

- 77 Earth point, lower part of left B-pillar
- 131 Earth connection 2, in engine compartment wiring harness
- D197 Connection 5 (87a), in engine compartment wiring harness
- E151 Connection 1 (CAN bus, engine/motor control unit, high)
- E153 Connection 1 (CAN bus, engine/motor control unit, low)
- * see applicable current flow diagram for basic equipment

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

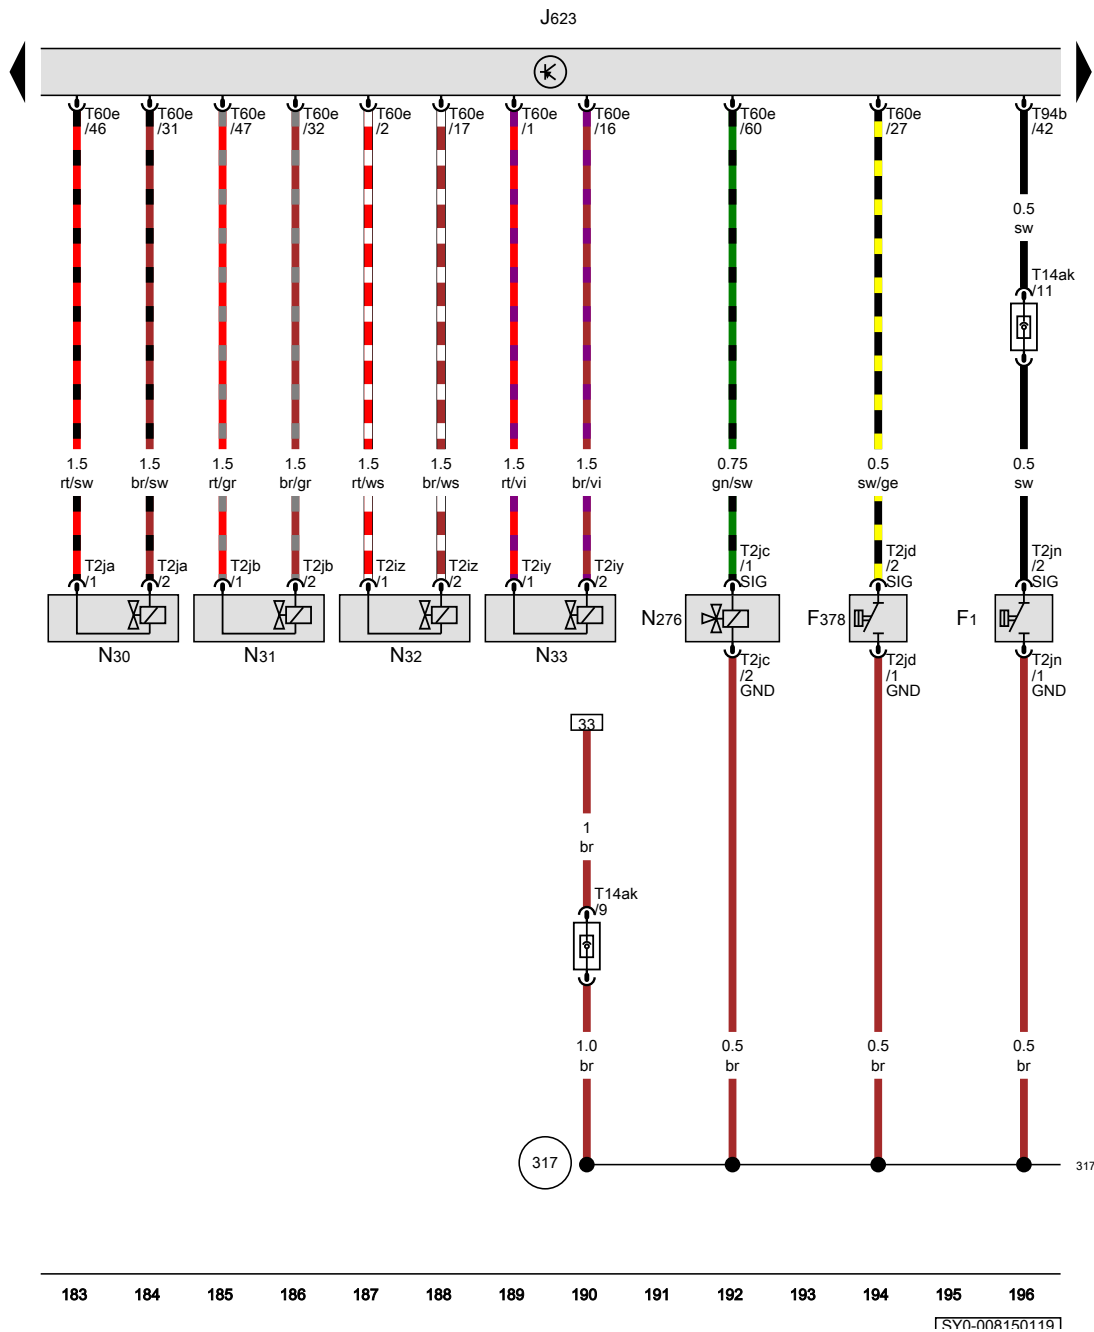


Oil pressure switch, Oil pressure switch for reduced oil pressure, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Fuel pressure regulating valve

- F1 Oil pressure switch
- F378 Oil pressure switch for reduced oil pressure
- J623 Engine/motor control unit
- N30 Injector, cylinder 1
- N31 Injector, cylinder 2
- N32 Injector, cylinder 3
- N33 Injector, cylinder 4
- N276 Fuel pressure regulating valve
- T2iy 2-pin connector, black
- T2iz 2-pin connector, black
- T2ja 2-pin connector, black
- T2jb 2-pin connector, black
- T2jc 2-pin connector, black
- T2jd 2-pin connector, black
- T2jn 2-pin connector, red
- T14ak 14-pin connector, grey
- T60e 60-pin connector, black
- T94b 94-pin connector, black
- 317 Earth connection 7, in engine compartment wiring harness


Engine/motor control unit, Heater element for crankcase breather, Fuel metering valve, Valve for oil pressure control, Auxiliary pump for heating

- | | |
|-------|---------------------------------------|
| J623 | Engine/motor control unit |
| N79 | Heater element for crankcase breather |
| N290 | Fuel metering valve |
| N428 | Valve for oil pressure control |
| T2jf | 2-pin connector, black |
| T2jo | 2-pin connector, black |
| T2ll | 2-pin connector, black |
| T3gs | 3-pin connector, black |
| T14ak | 14-pin connector, grey |
| T60e | 60-pin connector, black |
| T94b | 94-pin connector, black |
| V488 | Auxiliary pump for heating |

- 317 Earth connection 7, in engine compartment wiring harness
- D42 Connection 4, in engine prewiring harness

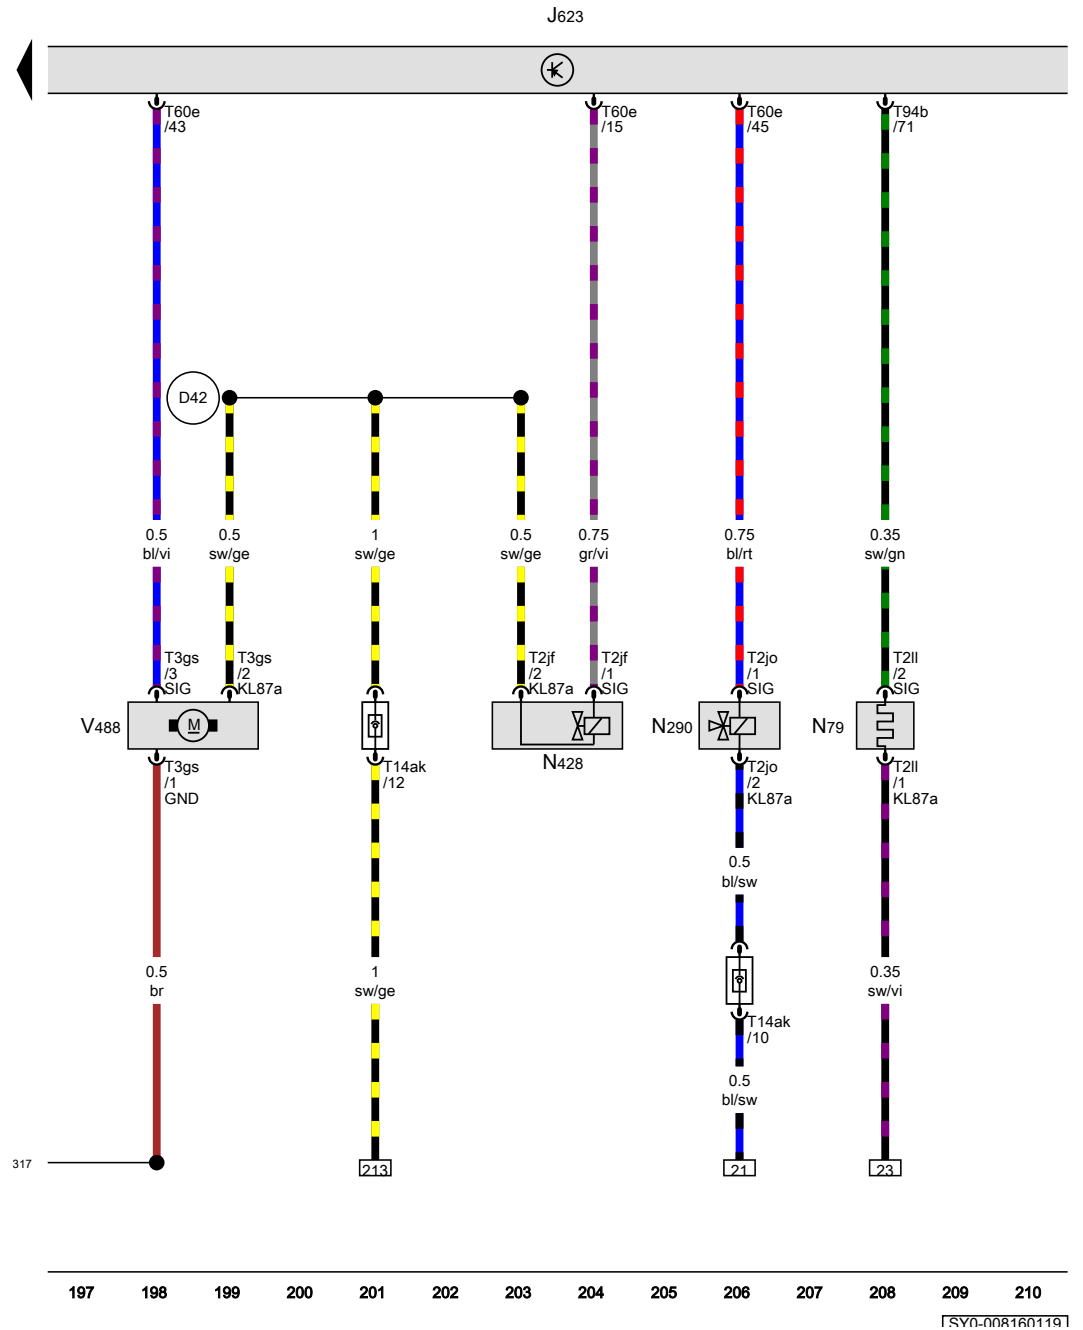


ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink

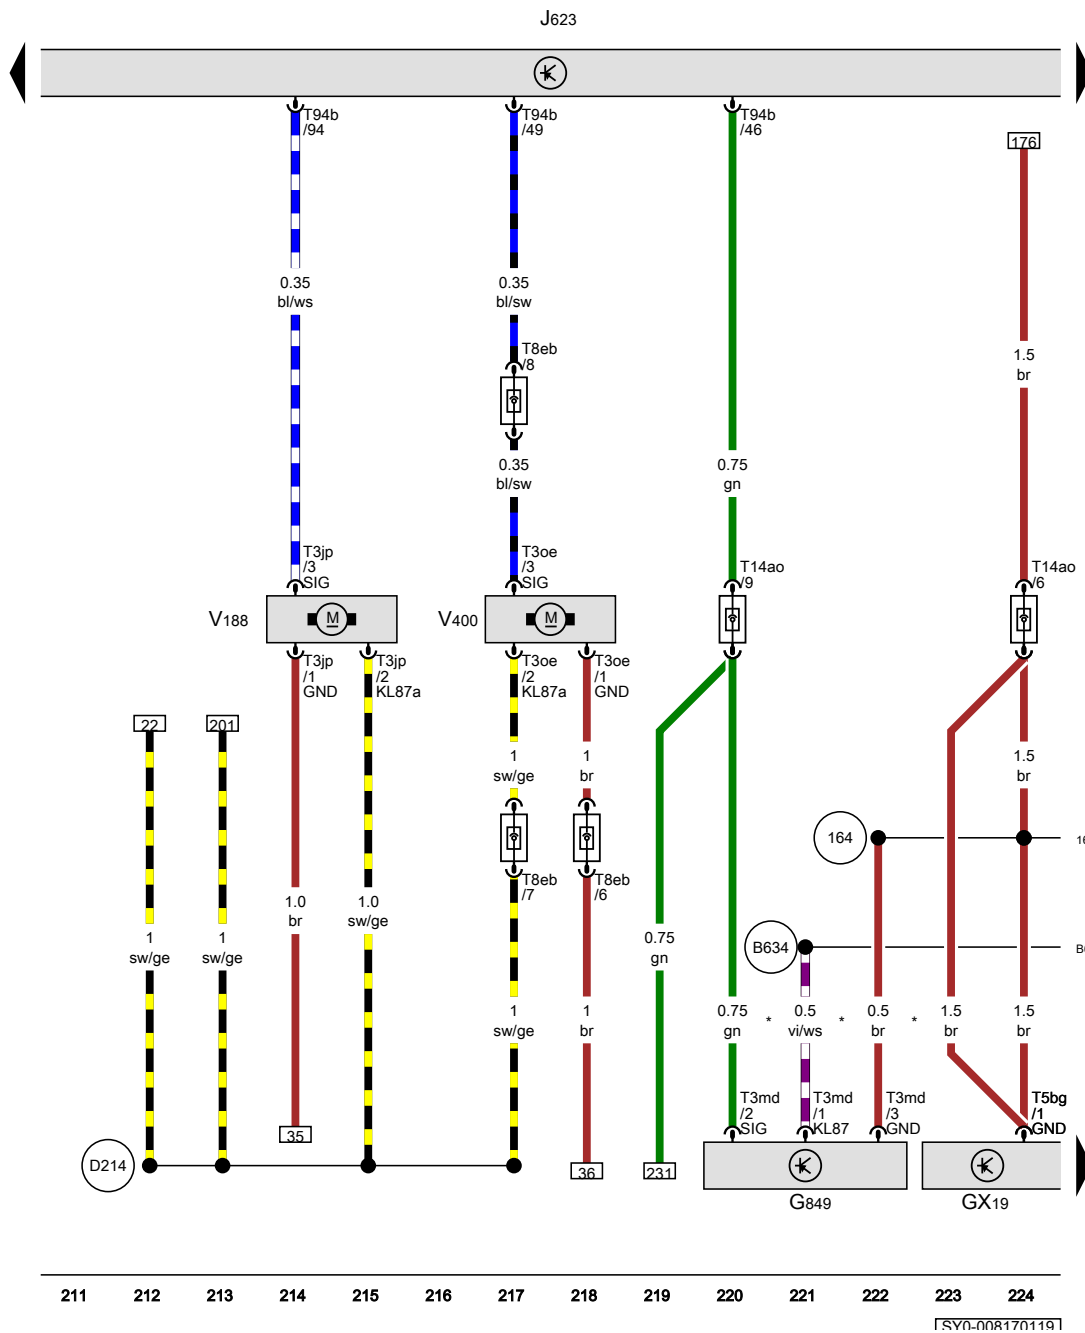

Delivery unit for reducing agent metering system, Reducing agent quality sensor, Engine/motor control unit, Charge air cooling pump, Pump for exhaust gas recirculation cooler

- GX19 Delivery unit for reducing agent metering system
- G849 Reducing agent quality sensor
- J623 Engine/motor control unit
- T3jp 3-pin connector, black
- T3md 3-pin connector, black
- T3oe 3-pin connector, black
- T5bg 5-pin connector, black
- T8eb 8-pin connector, black
- T14ao 14-pin connector, black
- T94b 94-pin connector, black
- V188 Charge air cooling pump
- V400 Pump for exhaust gas recirculation cooler
- 164 Earth connection, in catalytic converter warning circuit wiring harness
- B634 Positive connection 2 (87), in main wiring harness
- D214 Connection 8 (87a), in engine compartment wiring harness
- * According to equipment

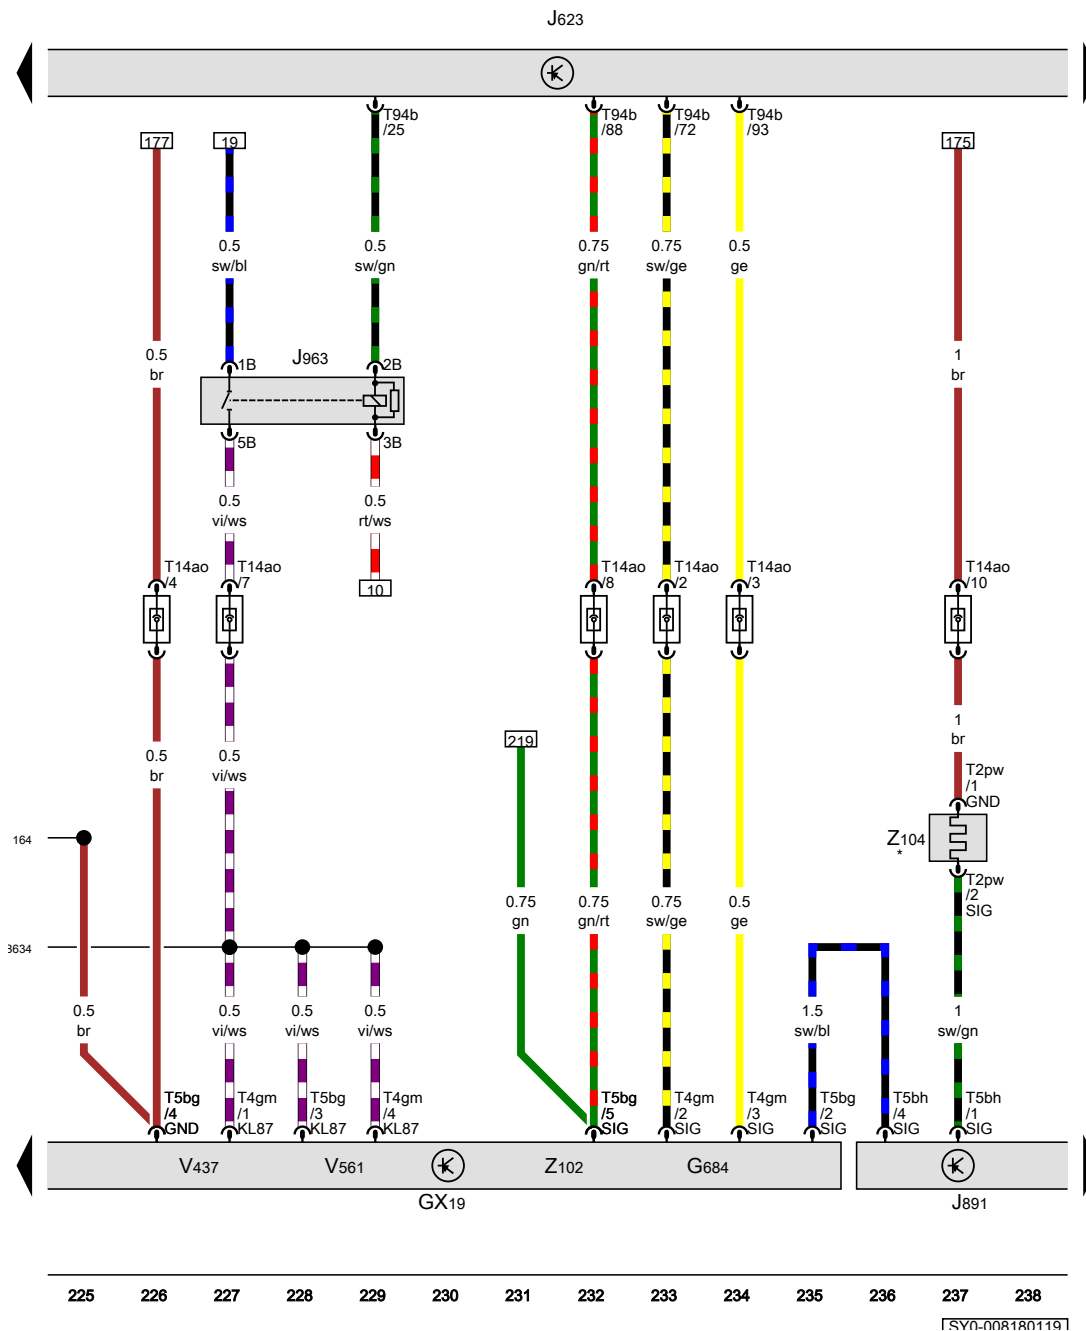

Delivery unit for reducing agent metering system, Engine/motor control unit, Control unit for reducing agent heater, Relay for reducing agent metering system, Heater for reducing agent line (heater circuit 2)


- GX19 Delivery unit for reducing agent metering system
- G684 Tank sender for reducing agent
- J623 Engine/motor control unit
- J891 Control unit for reducing agent heater
- J963 Relay for reducing agent metering system
- T2pw 2-pin connector, black
- T4gm 4-pin connector, black
- T5bg 5-pin connector, black
- T5bh 5-pin connector, colourless
- T14ao 14-pin connector, black
- T94b 94-pin connector, black
- V437 Pump for reducing agent
- V561 Reducing agent return flow pump
- Z102 Heater for reducing agent tank (heater circuit 1)
- Z104 Heater for reducing agent line (heater circuit 2)

164 Earth connection, in catalytic converter warning circuit wiring harness

B634 Positive connection 2 (87), in main wiring harness

* Pre-wired component

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

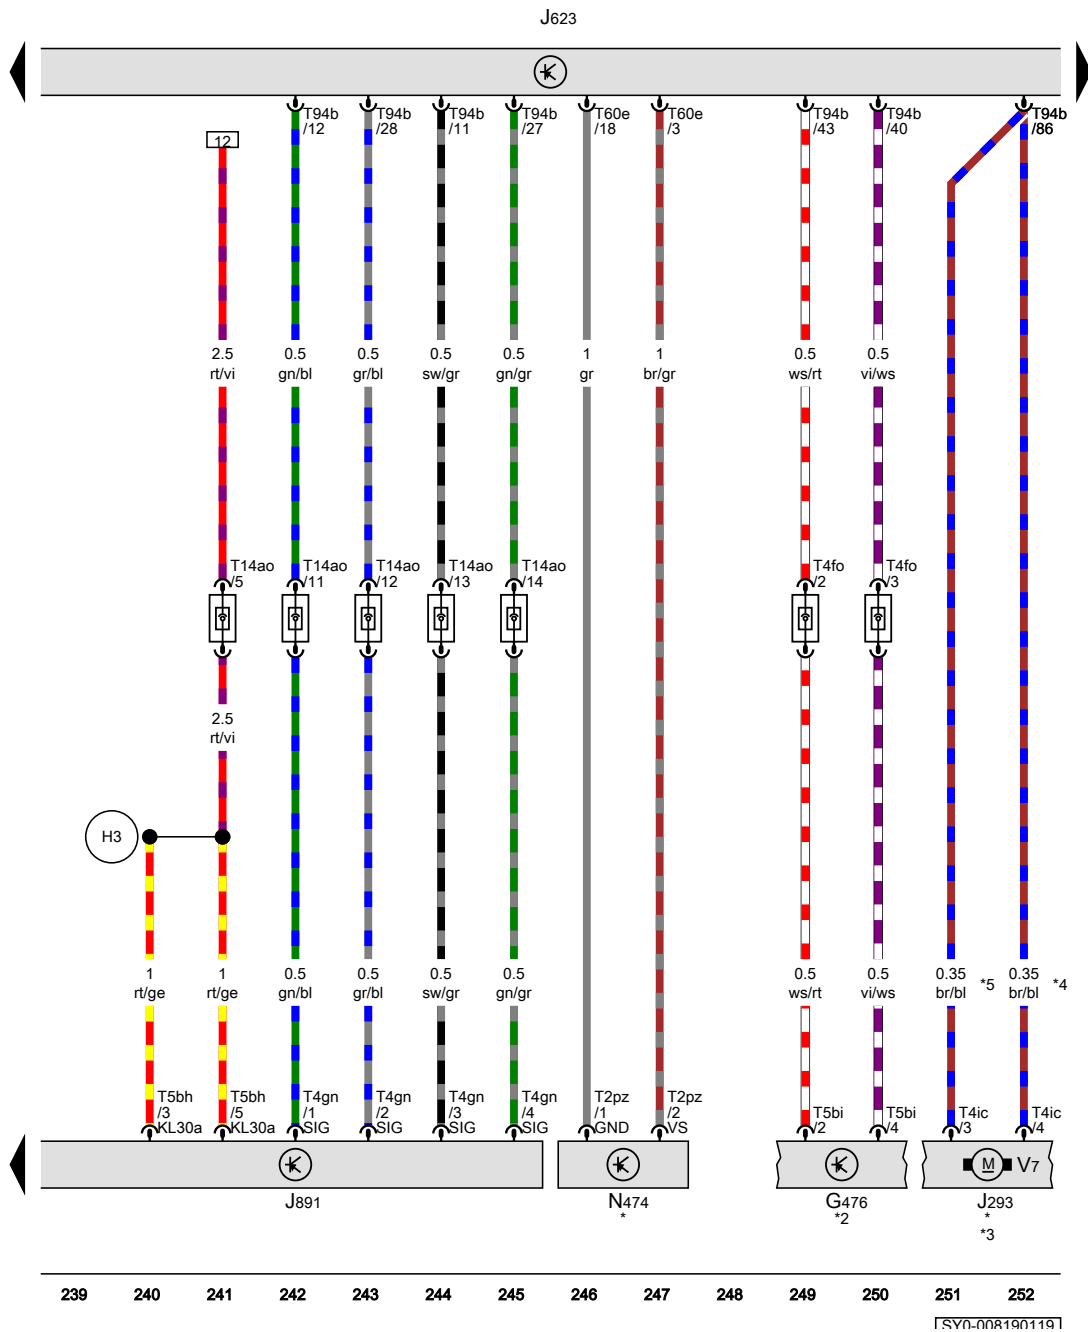


Clutch position sender, Engine/motor control unit, Control unit for reducing agent heater, Injector for reducing agent, Radiator fan

- G476 Clutch position sender
- J293 Radiator fan control unit
- J623 Engine/motor control unit
- J891 Control unit for reducing agent heater
- N474 Injector for reducing agent
- T2pz 2-pin connector, black
- T4fo 4-pin connector, black
- T4gn 4-pin connector, black
- T4ic 4-pin connector, black
- T5bh 5-pin connector, colourless
- T5bi 5-pin connector, black
- T14ao 14-pin connector, black
- T60e 60-pin connector, black
- T94b 94-pin connector, black
- V7 Radiator fan


H3 Connection 1 in wiring harness for reducing agent tank

- * Pre-wired component
- *2 see applicable current flow diagram for basic equipment
- *3 see applicable current flow diagram for radiator fan
- *4 For models with towing bracket
- *5 For models with no towing bracket

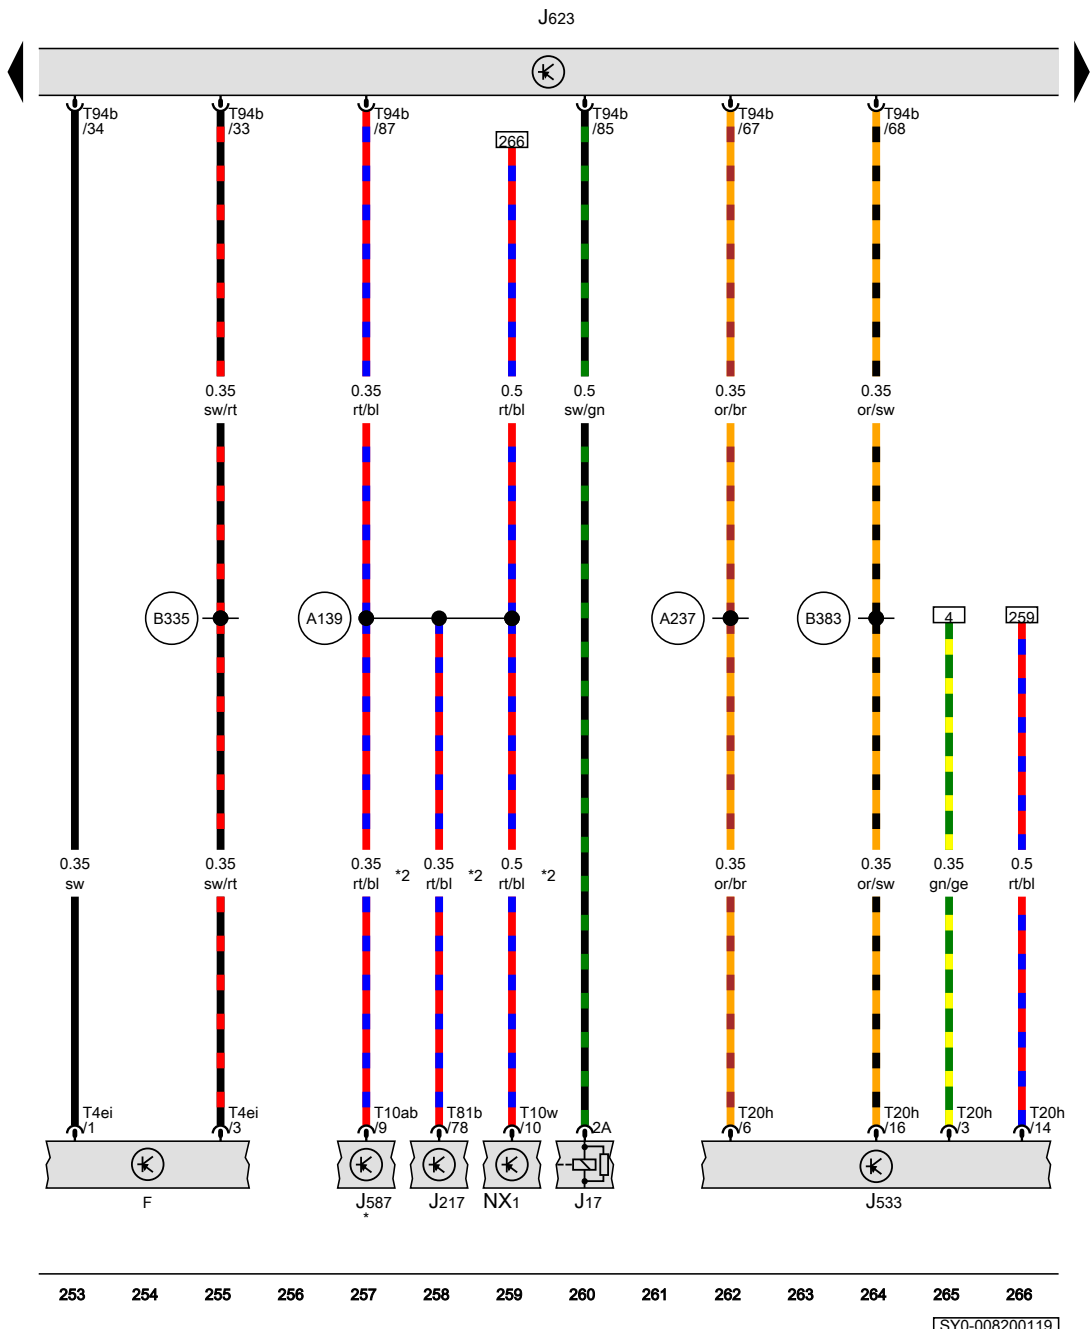

Brake light switch, Data bus diagnostic interface, Engine/motor control unit

- F Brake light switch
- J17 Fuel pump relay
- J217 Automatic gearbox control unit
- J533 Data bus diagnostic interface
- J587 Selector lever sensors control unit
- J623 Engine/motor control unit
- NX1 Gearbox
- T4ei 4-pin connector, black
- T10ab 10-pin connector, red
- T10w 10-pin connector, black
- T20h 20-pin connector, red
- T81b 81-pin connector, black
- T94b 94-pin connector, black
- A139 Connection 3 (15) in dash panel wiring harness
- A237 Connection 1 (powertrain CAN bus, low), in dash panel wiring harness
- B335 Connection 1 (54), in main wiring harness
- B383 Connection 1 (powertrain CAN bus, high), in main wiring harness
- * Pre-wired component
- *2 For models with automatic gearbox

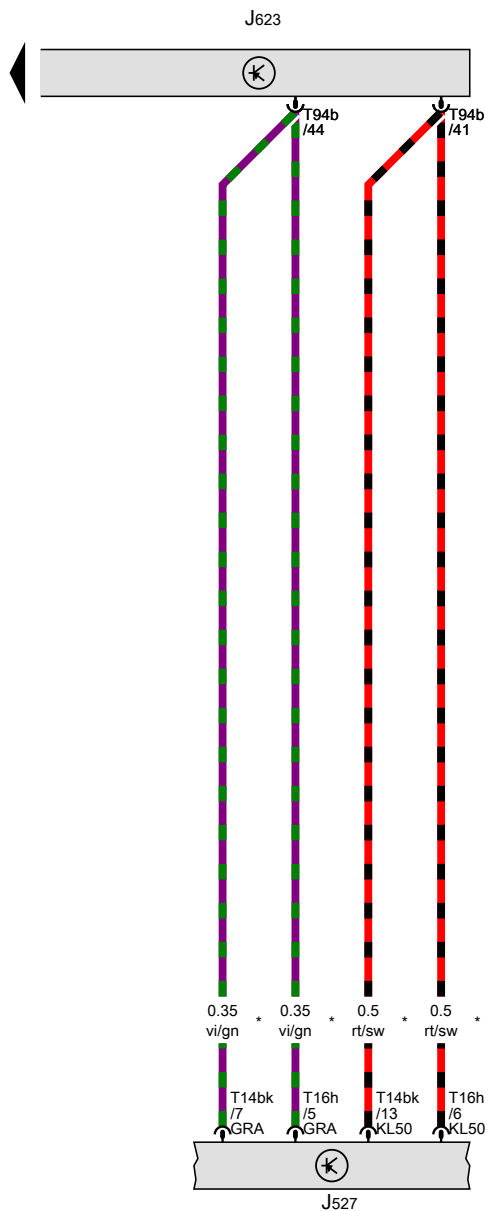

Engine/motor control unit

- J527 Steering column electronics control unit
- J623 Engine/motor control unit
- T14bk 14-pin connector, black
- T16h 16-pin connector, black
- T94b 94-pin connector, black
- * According to equipment


ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

267 268 269 270 271 272 273 274 275 276 277 278 279 280

[SYN-008210119]


2.0l diesel engine , DAUA,DAUB

From September 2016

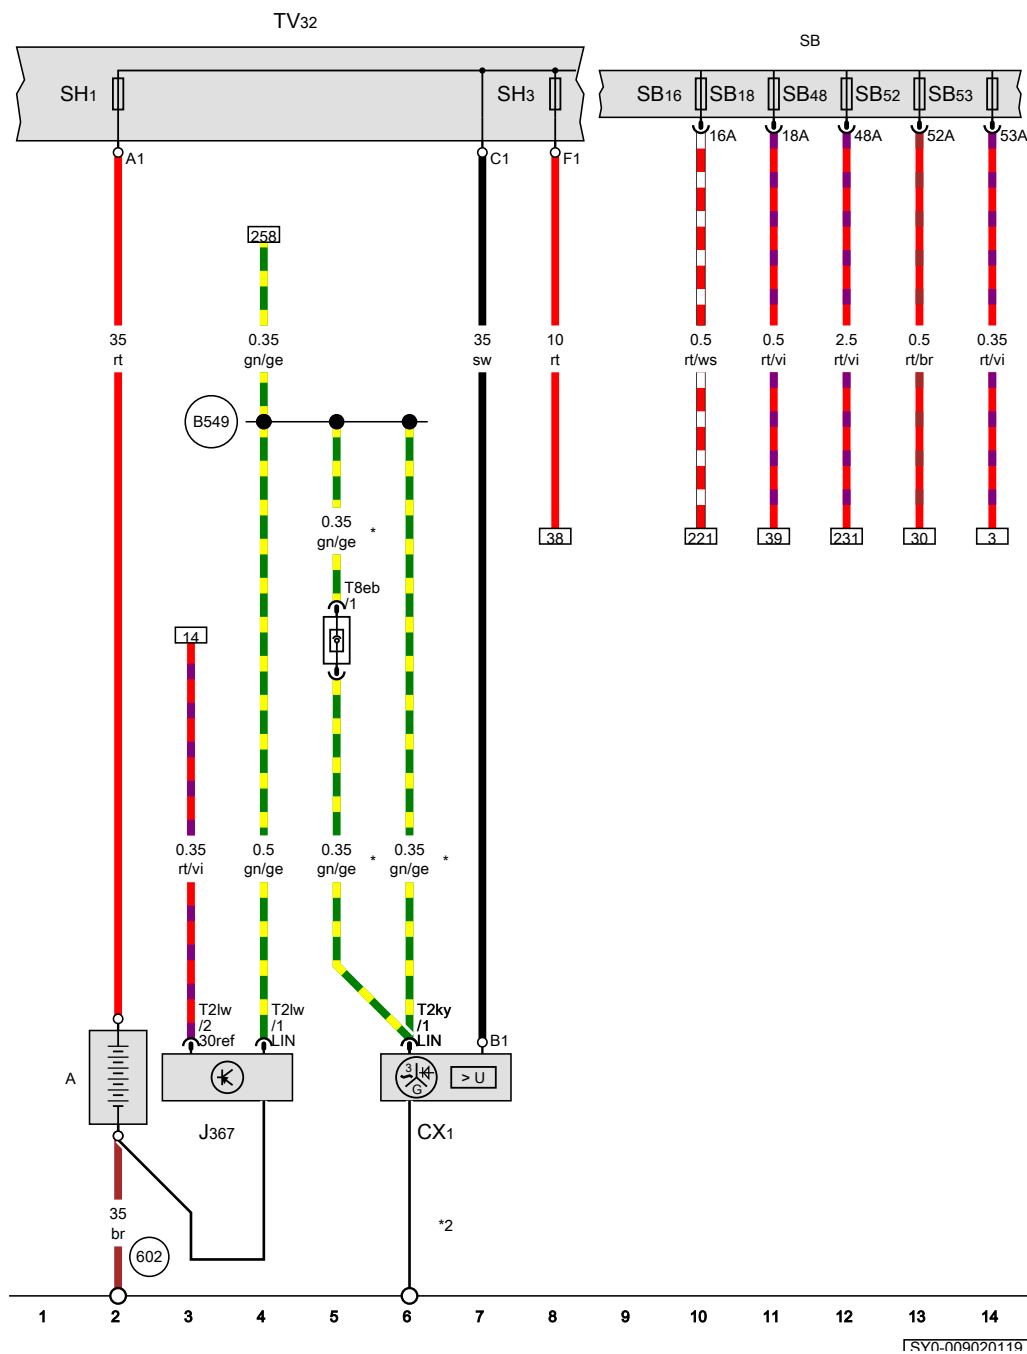

Battery, Alternator with voltage regulator, Battery monitor control unit, Fuse holder B, Jump start connection

- A Battery
- CX1 Alternator with voltage regulator
- J367 Battery monitor control unit
- SB Fuse holder B
- SH1 Fuse 1 in fuse holder H
- SH3 Fuse 3 in fuse holder H
- SB16 Fuse 16 on fuse holder B
- SB18 Fuse 18 on fuse holder B
- SB48 Fuse 48 on fuse holder B
- SB52 Fuse 52 on fuse holder B
- SB53 Fuse 53 on fuse holder B
- T2ky 2-pin connector, black
- T2lw 2-pin connector, black
- T8eb 8-pin connector, black
- TV32 Jump start connection
- 602 Earth point, in front left footwell
- B549 Connection 2 (LIN bus) in main wiring harness
- * According to equipment
- *2 Earth supply via housing

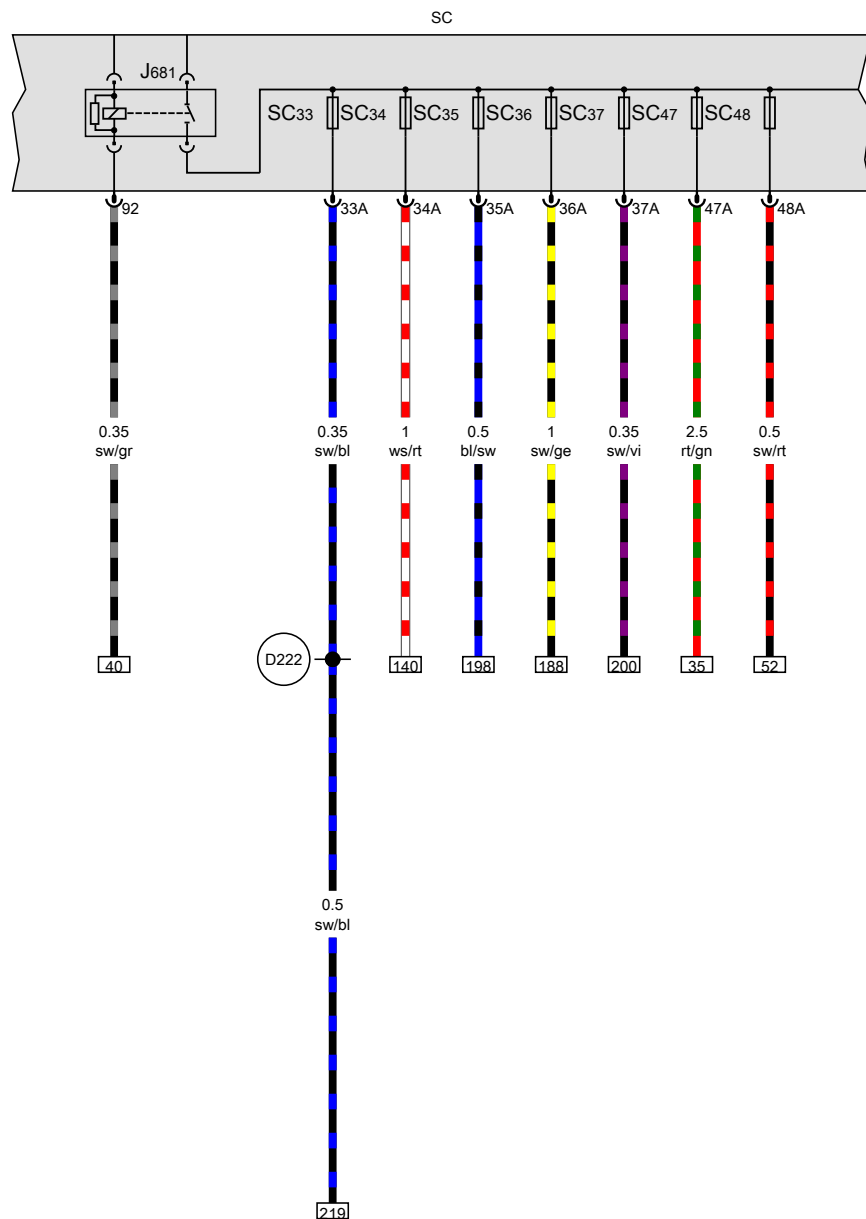

Fuse holder C

J681 Terminal 15 voltage supply relay 2

SC Fuse holder C

SC33 Fuse 33 on fuse holder C

SC34 Fuse 34 on fuse holder C

SC35 Fuse 35 on fuse holder C

SC36 Fuse 36 on fuse holder C

SC37 Fuse 37 on fuse holder C

SC47 Fuse 47 on fuse holder C

SC48 Fuse 48 on fuse holder C


D222 Connection 10 (87a), in engine compartment wiring harness


ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink

Automatic glow period control unit, Engine/motor control unit

J179 Automatic glow period control unit
J623 Engine/motor control unit
T11b 11-pin connector
T94b 94-pin connector, black


- (84) Earth connection, engine block, in front right wiring harness
- (179) Earth connection, in left headlight wiring harness
- (655) Earth point, on left headlight
- (A23) Connection (30al), in dash panel wiring harness
- (D180) Connection (87a), in engine compartment wiring harness

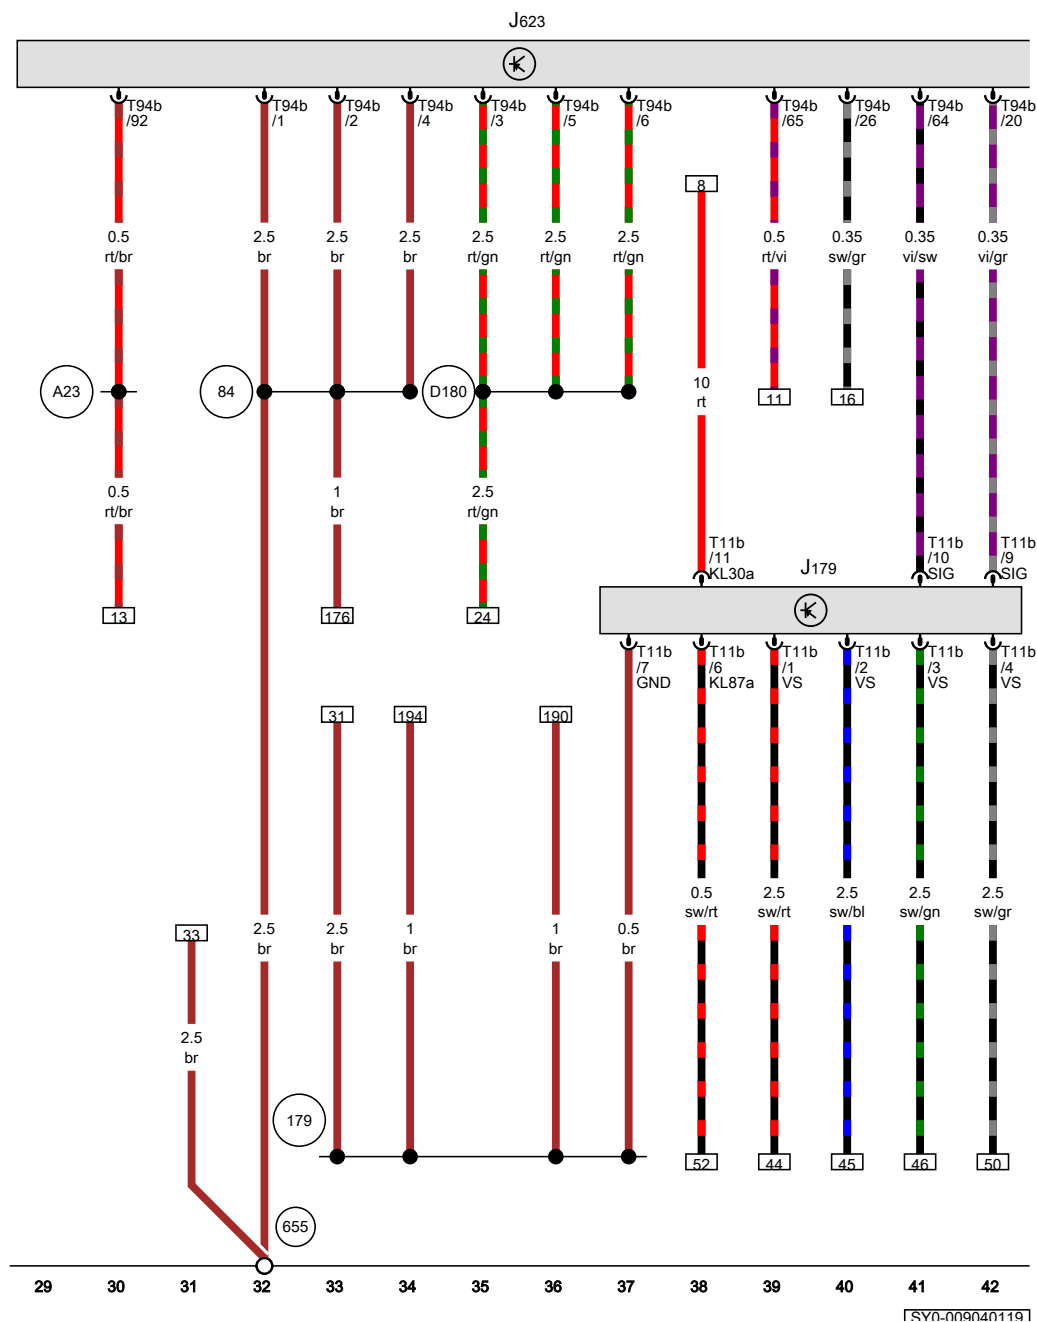

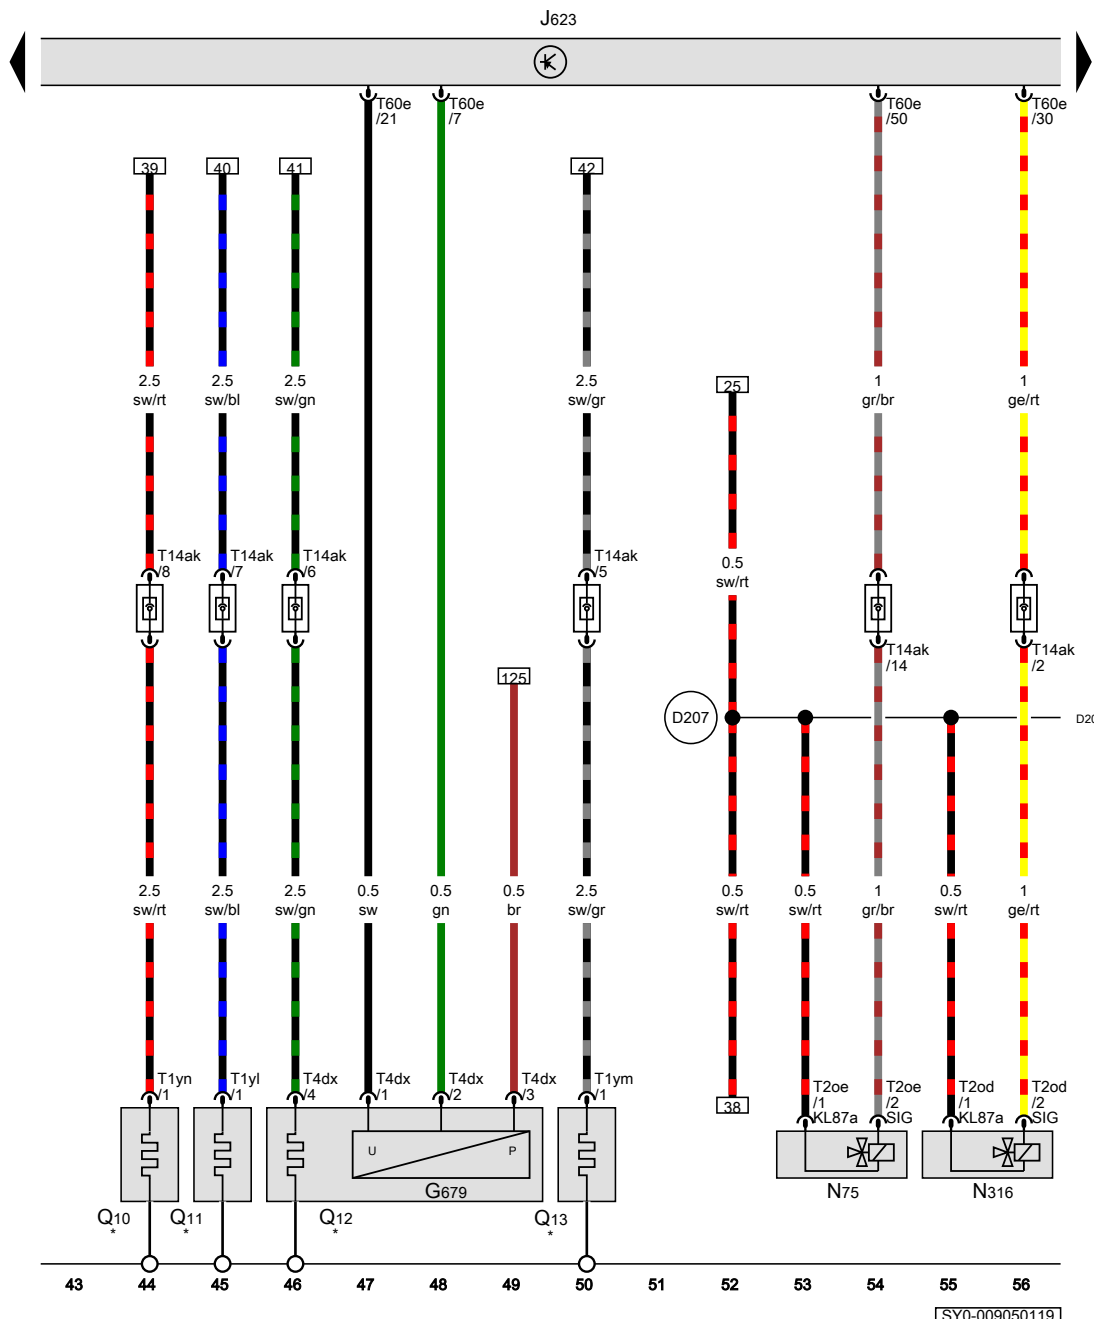

Engine/motor control unit, Charge pressure control solenoid valve, Intake manifold flap valve, Glow plug 1, Glow plug 2, Glow plug 3, Glow plug 4


- G679 Cylinder 3 combustion chamber pressure sender
- J623 Engine/motor control unit
- N75 Charge pressure control solenoid valve
- N316 Intake manifold flap valve
- Q10 Glow plug 1
- Q11 Glow plug 2
- Q12 Glow plug 3
- Q13 Glow plug 4
- T1yl 1-pin connector
- T1ym 1-pin connector
- T1yn 1-pin connector
- T2od 2-pin connector, black
- T2oe 2-pin connector, black
- T4dx 4-pin connector, black
- T14ak 14-pin connector, grey
- T60e 60-pin connector, black
- D207 Connection 7 (87a), in engine compartment wiring harness
- * Earth supply via housing

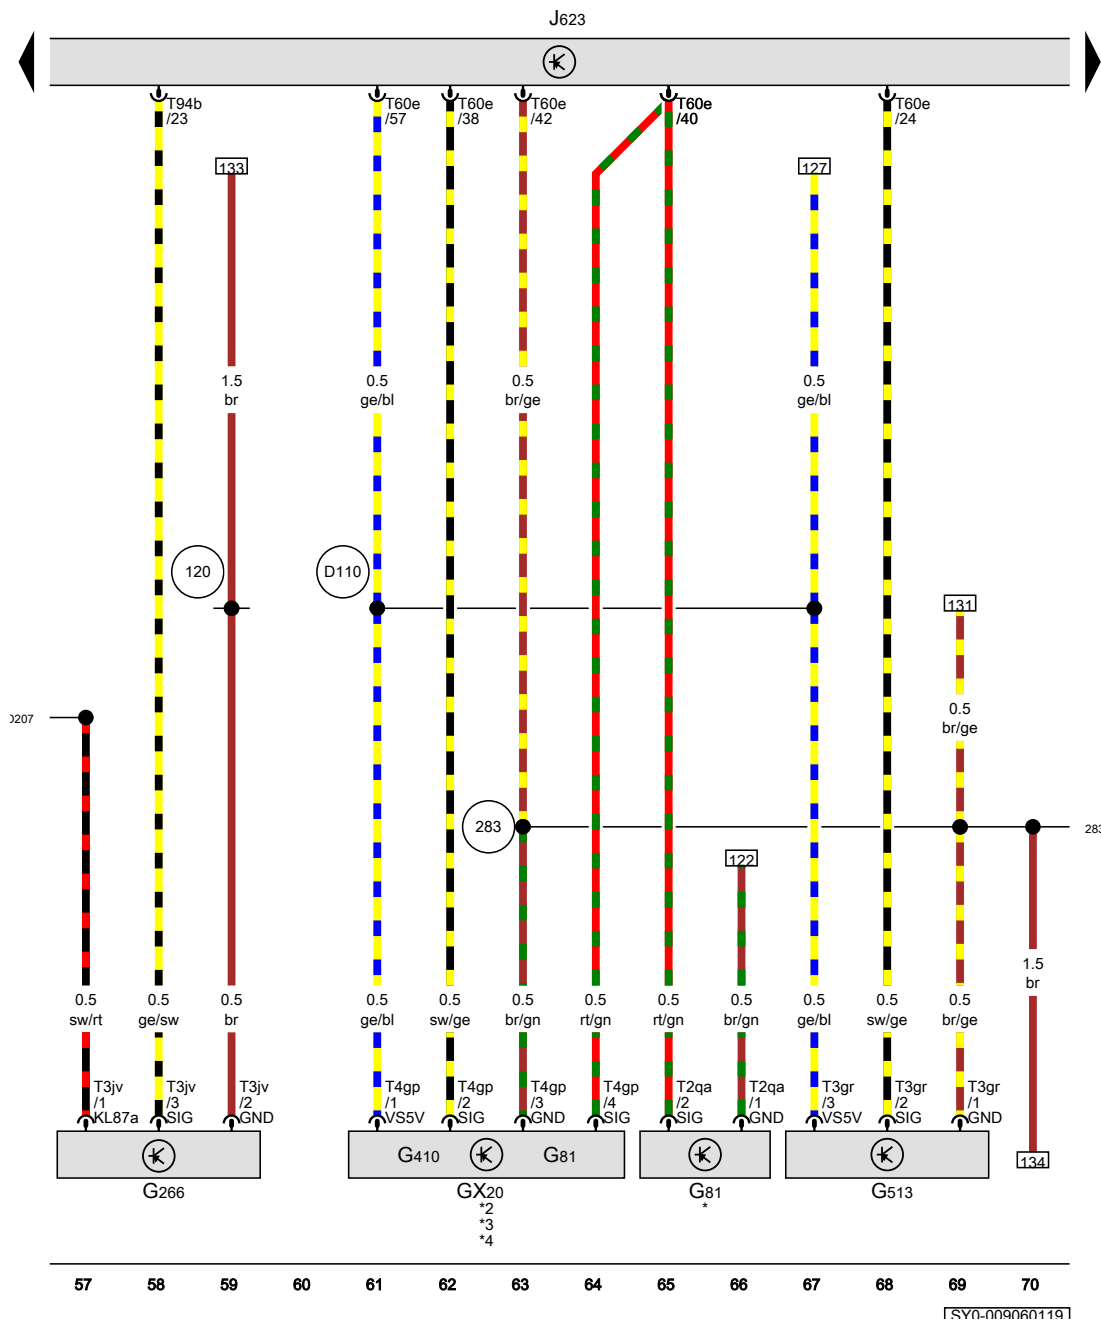

Temperature and pressure sender for low-pressure fuel system, Fuel temperature sender, Oil level and oil temperature sender, Variable intake manifold position sender, Engine/motor control unit

- GX20 Temperature and pressure sender for low-pressure fuel system
- G81 Fuel temperature sender
- G266 Oil level and oil temperature sender
- G410 Fuel pressure sender for low pressure
- G513 Variable intake manifold position sender
- J623 Engine/motor control unit
- T2qa 2-pin connector, black
- T3gr 3-pin connector, brown
- T3jv 3-pin connector, black
- T4gp 4-pin connector, black
- T60e 60-pin connector, black
- T94b 94-pin connector, black

- 120 Earth connection 2, in headlight wiring harness
- 283 Earth point 2, engine prewiring harness
- D110 Connection 8 in engine compartment wiring harness
- D207 Connection 7 (87a), in engine compartment wiring harness
- * For models with Euro 6 plus emission standard
- *2 For models with Euro 3 emission standard
- *3 For models with Euro 4 emission standard
- *4 For models with Euro 5 emission standard

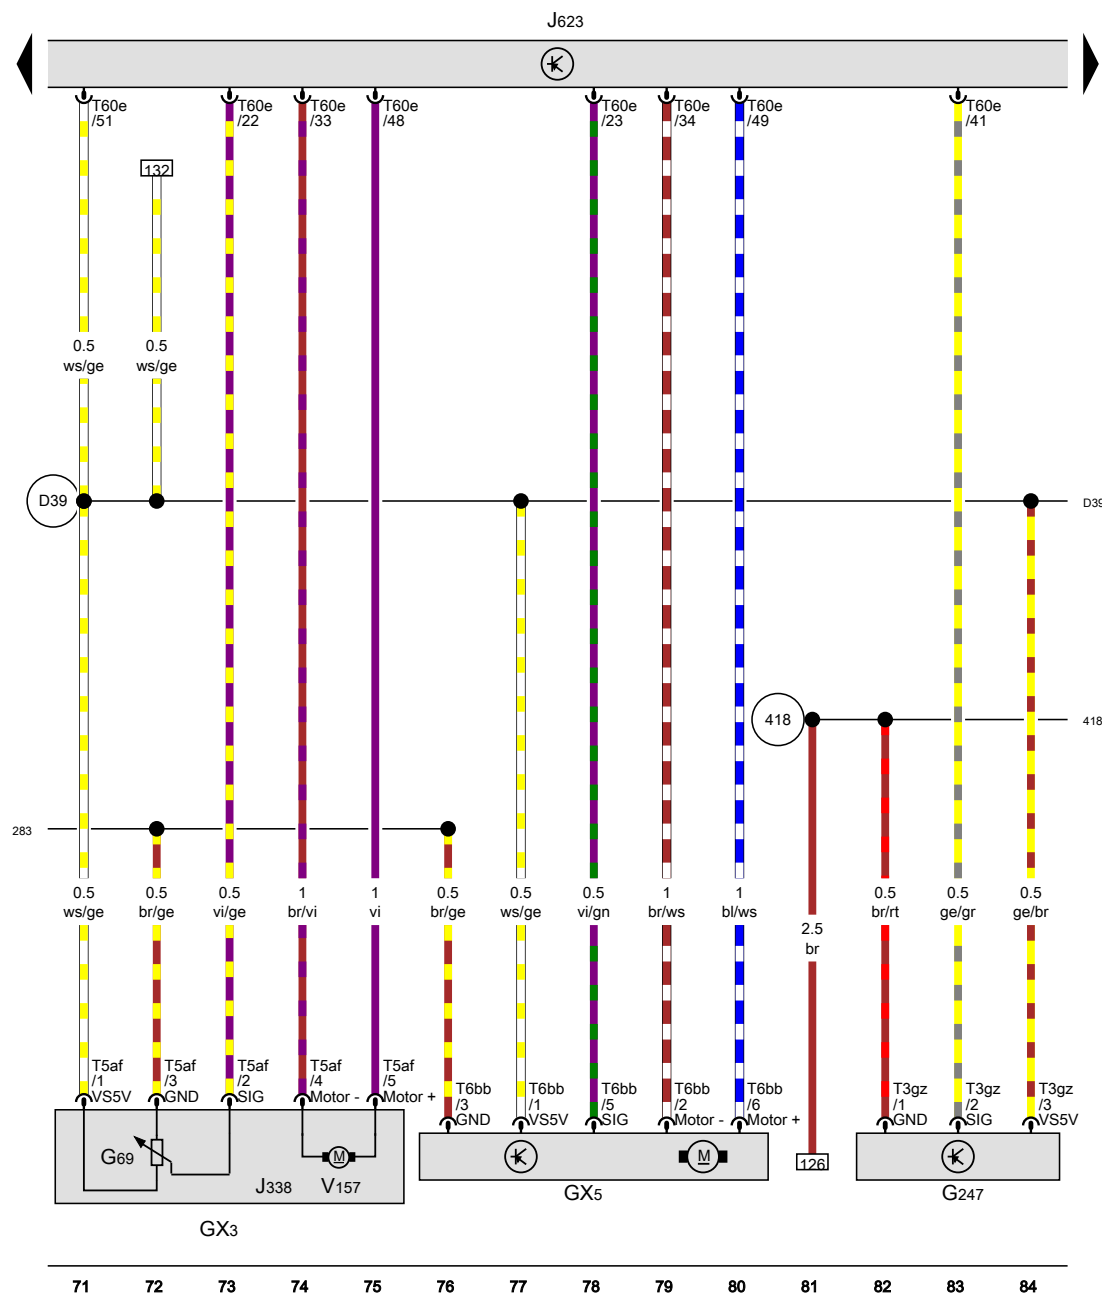


Throttle valve module, Exhaust gas recirculation valve 1, Fuel pressure sender, Engine/motor control unit

- GX3 Throttle valve module
- GX5 Exhaust gas recirculation valve 1
- G69 Throttle valve potentiometer
- G247 Fuel pressure sender
- J338 Throttle valve module
- J623 Engine/motor control unit
- T3gz 3-pin connector, black
- T5af 5-pin connector, black
- T6bb 6-pin connector, grey
- T60e 60-pin connector, black
- V157 Intake manifold flap motor

283 Earth point 2, engine prewiring harness

418 Earth connection 10, in engine compartment wiring harness

D39 Connection 1, in engine prewiring harness

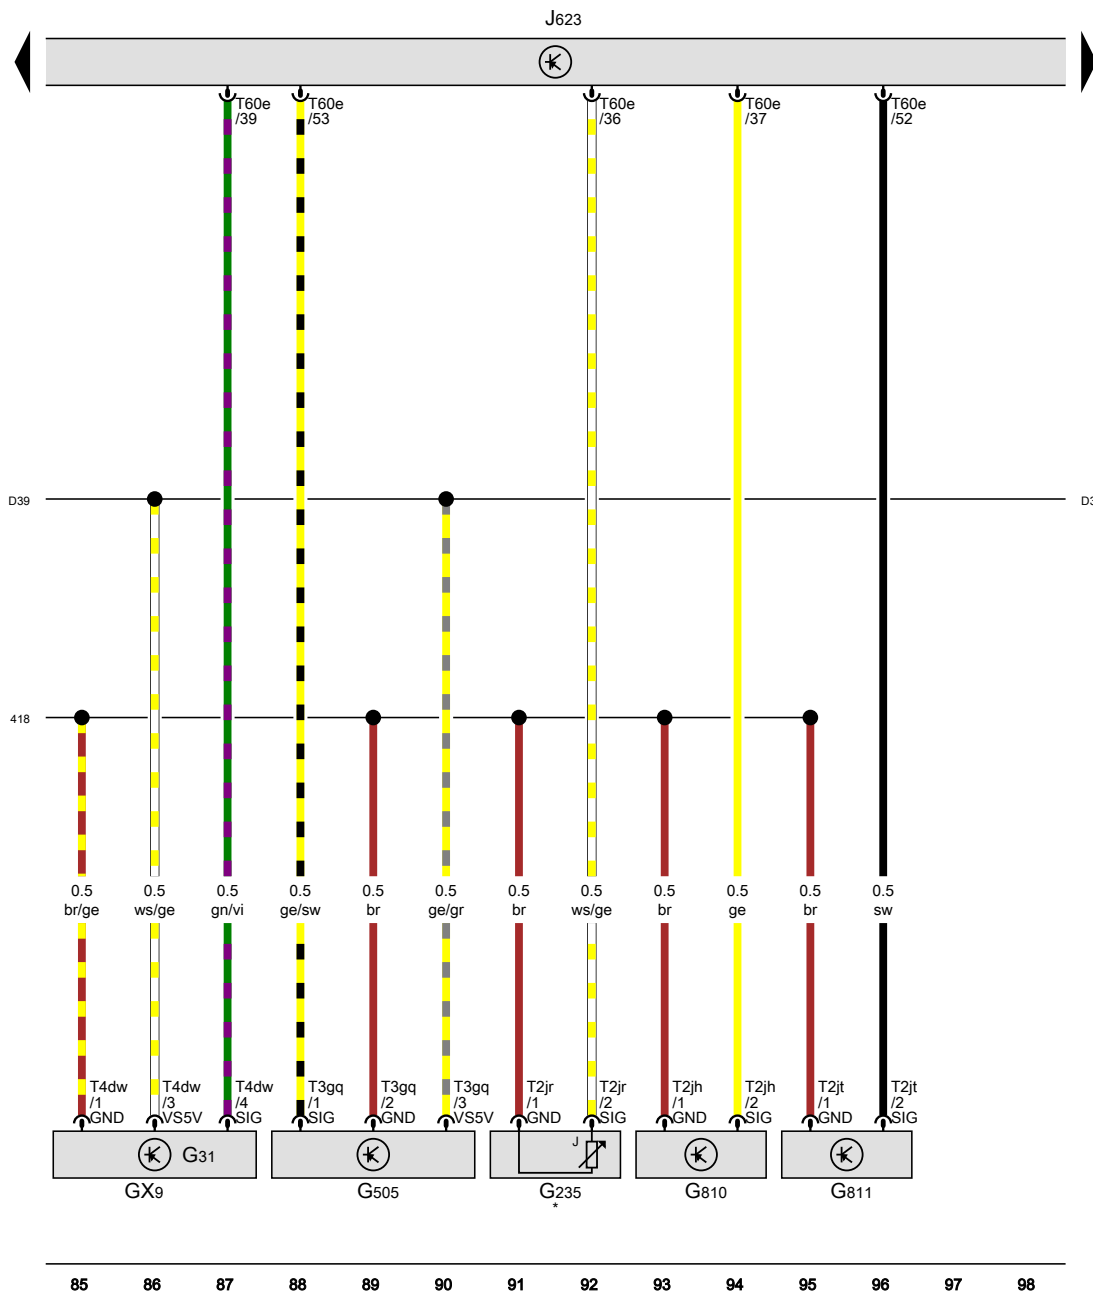

Intake manifold sender, Exhaust gas temperature sender 1, Pressure differential sender, Charge air temperature sender before charge air cooler, Charge air temperature sender after charge air cooler, Engine/motor control unit


- GX9 Intake manifold sender
- G31 Charge pressure sender
- G235 Exhaust gas temperature sender 1
- G505 Pressure differential sender
- G810 Charge air temperature sender before charge air cooler
- G811 Charge air temperature sender after charge air cooler
- J623 Engine/motor control unit
- T2jh 2-pin connector, black
- T2jr 2-pin connector, black
- T2jt 2-pin connector, black
- T3gq 3-pin connector, black
- T4dw 4-pin connector, black
- T60e 60-pin connector, black

418 Earth connection 10, in engine compartment wiring harness

D39 Connection 1, in engine prewiring harness

* Pre-wired component


- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

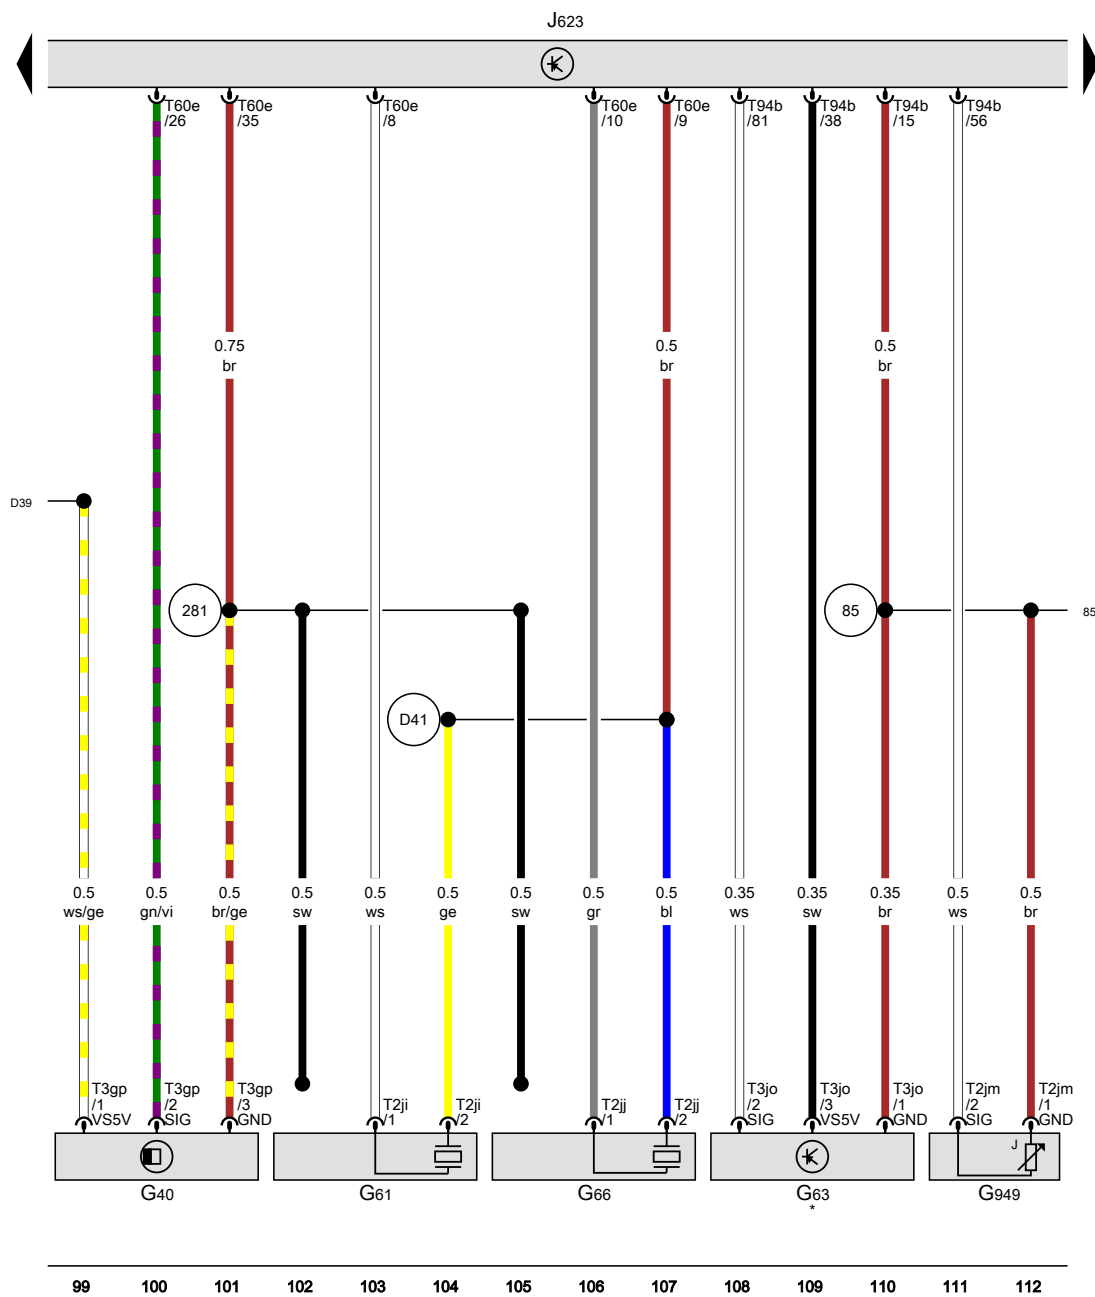

Hall sender, Knock sensor 1, Water separator sender, Knock sensor 2, Temperature sensor 3 for exhaust recirculation, Engine/motor control unit

- G40 Hall sender
- G61 Knock sensor 1
- G63 Water separator sender
- G66 Knock sensor 2
- G949 Temperature sensor 3 for exhaust recirculation
- J623 Engine/motor control unit
- T2ji 2-pin connector, black
- T2jj 2-pin connector, black
- T2jm 2-pin connector, colourless, black
- T3gp 3-pin connector, black
- T3jo 3-pin connector, black
- T60e 60-pin connector, black
- T94b 94-pin connector, black

- 85 Earth connection 1, in engine compartment wiring harness
- 281 Earth point 1, engine prewiring harness
- D39 Connection 1, in engine prewiring harness
- D41 Connection 3, in engine prewiring harness
- * Not for models with Euro 6 plus emission standard

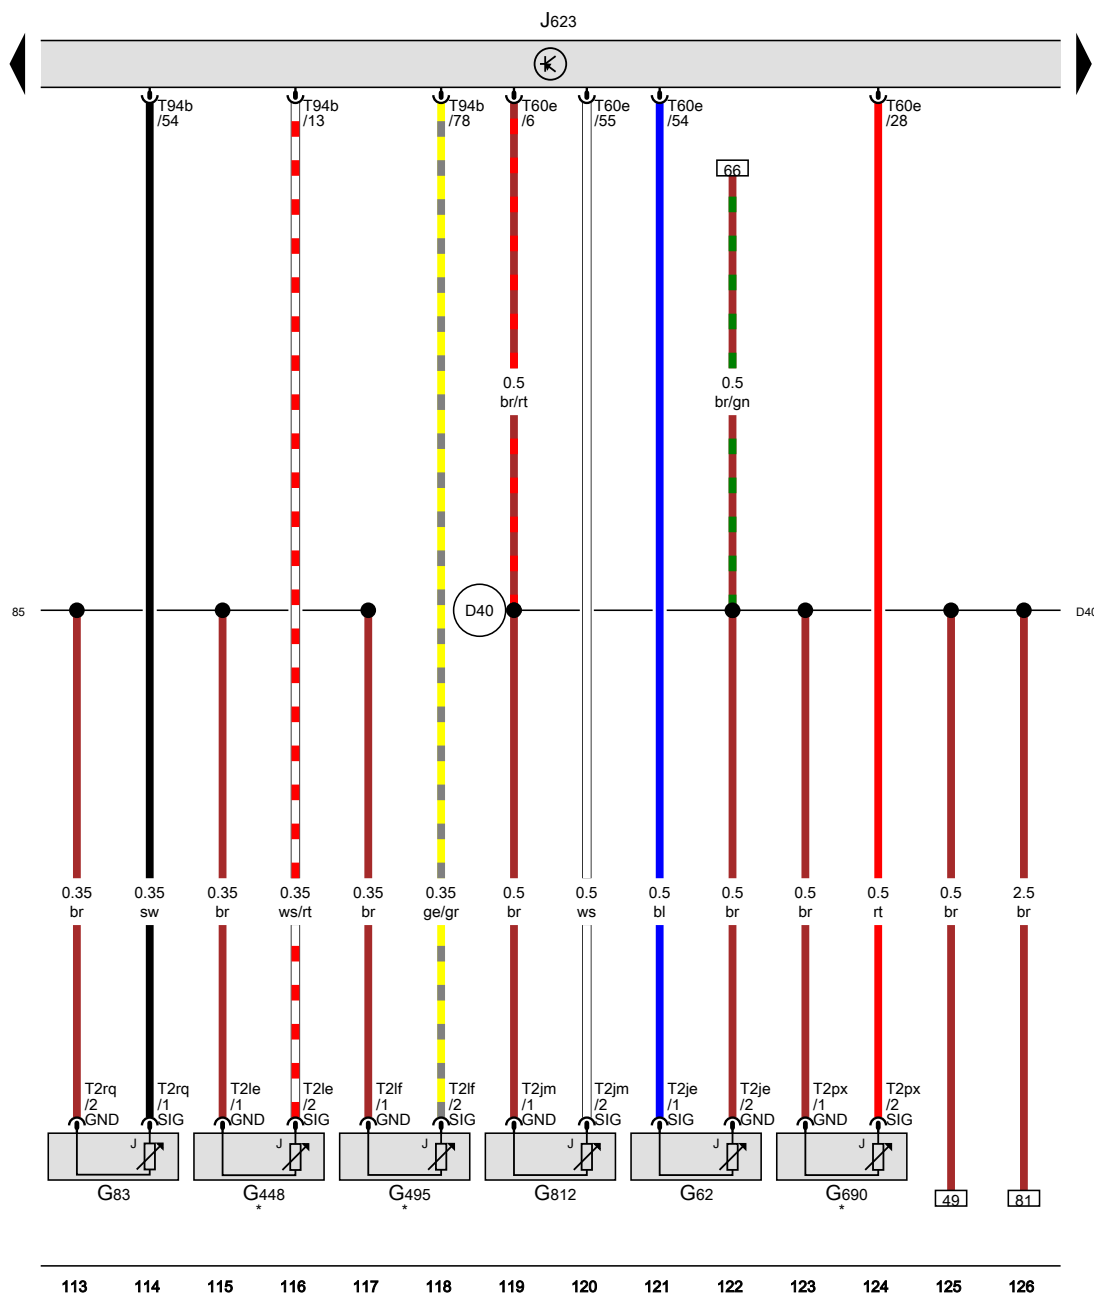

Coolant temperature sender, Radiator outlet coolant temperature sender, Exhaust gas temperature sender 2, Exhaust gas temperature sender 3, Temperature sensor 2 for exhaust recirculation, Coolant temperature sender 3, Engine/motor control unit

- G62 Coolant temperature sender
- G83 Radiator outlet coolant temperature sender
- G448 Exhaust gas temperature sender 2
- G495 Exhaust gas temperature sender 3
- G690 Temperature sensor 2 for exhaust recirculation
- G812 Coolant temperature sender 3
- J623 Engine/motor control unit
- T2je 2-pin connector, black
- T2jm 2-pin connector, black, colourless
- T2le 2-pin connector, black
- T2lf 2-pin connector, brown
- T2px 2-pin connector, brown
- T2rq 2-pin connector, black
- T60e 60-pin connector, black
- T94b 94-pin connector, black


85 Earth connection 1, in engine compartment wiring harness

D40 Connection 2, in engine prewiring harness

* Pre-wired component

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

SYN-009100119

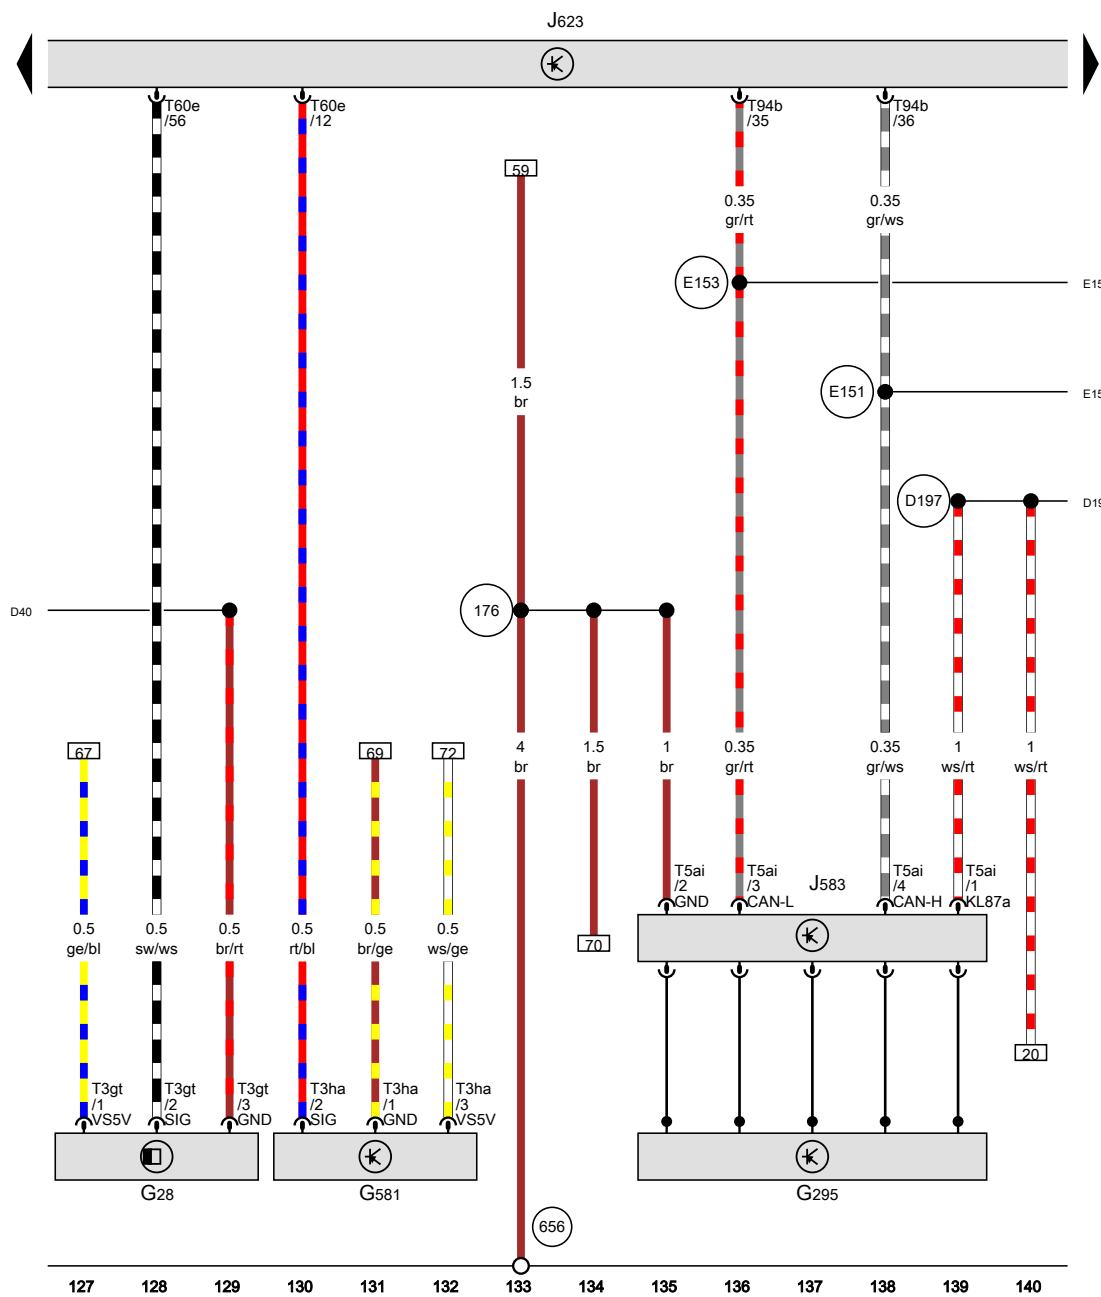


Engine speed sender, Position sender for charge pressure positioner, Control unit for NOx sender, Engine/motor control unit

- G28 Engine speed sender
- G295 NOx sender
- G581 Position sender for charge pressure positioner
- J583 Control unit for NOx sender
- J623 Engine/motor control unit
- T3gt 3-pin connector, black
- T3ha 3-pin connector, brown
- T5ai 5-pin connector, black
- T60e 60-pin connector, black
- T94b 94-pin connector, black

- 176 Earth connection, in right headlight wiring harness
- 656 Earth point, on right headlight
- D40 Connection 2, in engine prewiring harness
- D197 Connection 5 (87a), in engine compartment wiring harness
- E151 Connection 1 (CAN bus, engine/motor control unit, high)
- E153 Connection 1 (CAN bus, engine/motor control unit, low)


ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

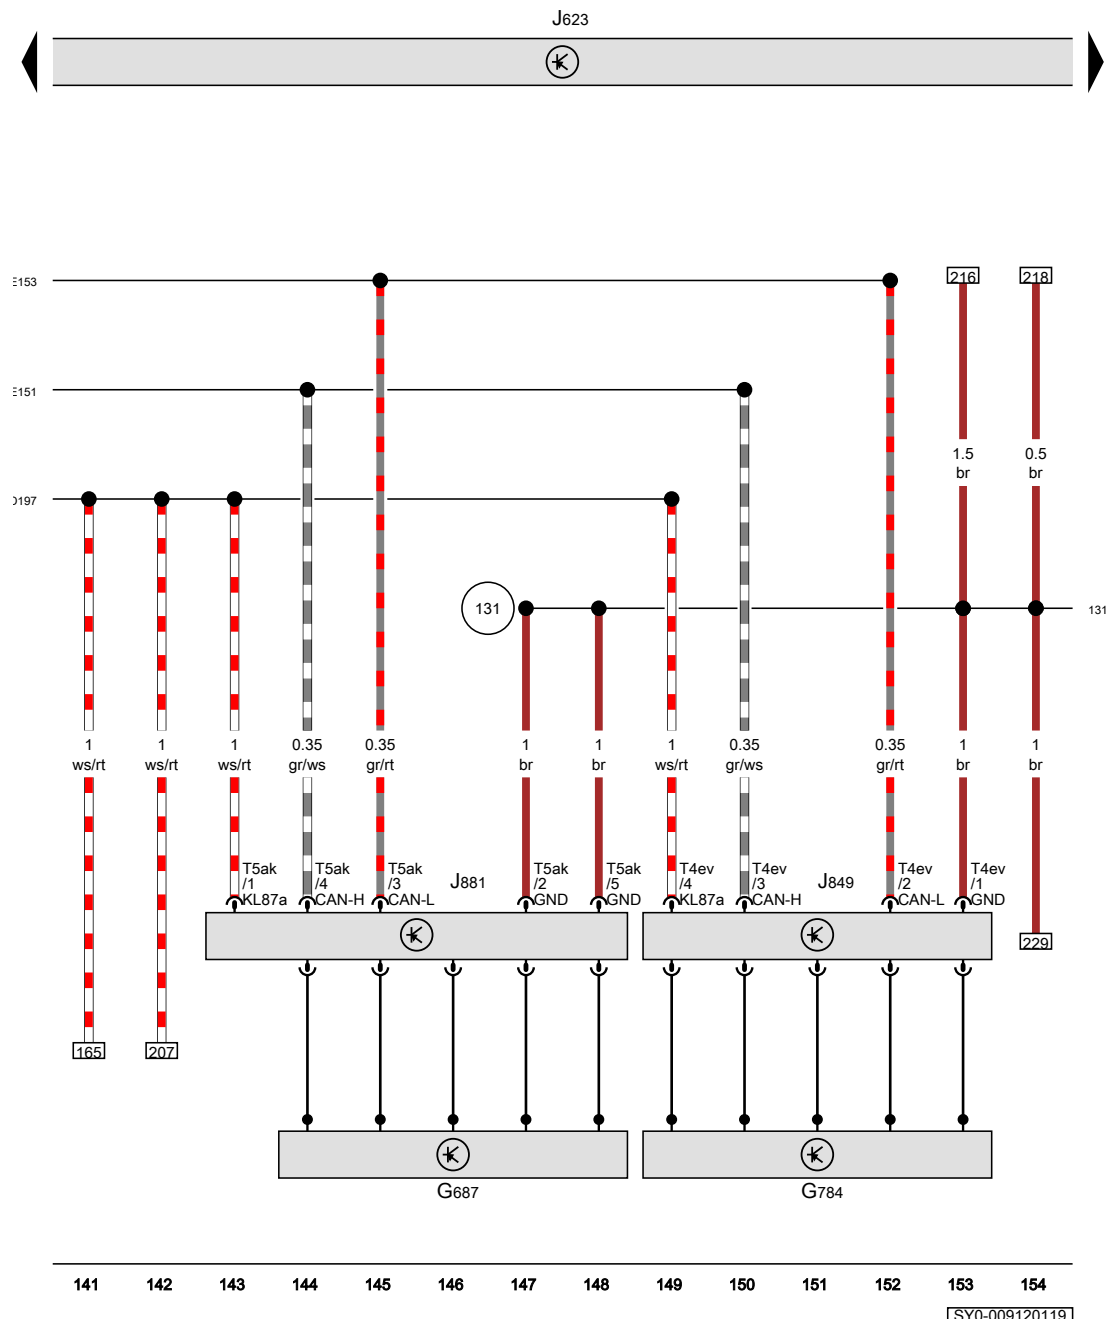

Engine/motor control unit, Control unit for sensor electronics, Control unit for NOx sender 2

- G687 NOx sender 2
- G784 Particulate sensor
- J623 Engine/motor control unit
- J849 Control unit for sensor electronics
- J881 Control unit for NOx sender 2
- T4ev 4-pin connector, black
- T5ak 5-pin connector, black
- 131 Earth connection 2, in engine compartment wiring harness
- D197 Connection 5 (87a), in engine compartment wiring harness
- E151 Connection 1 (CAN bus, engine/motor control unit, high)
- E153 Connection 1 (CAN bus, engine/motor control unit, low)


Air mass meter, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4

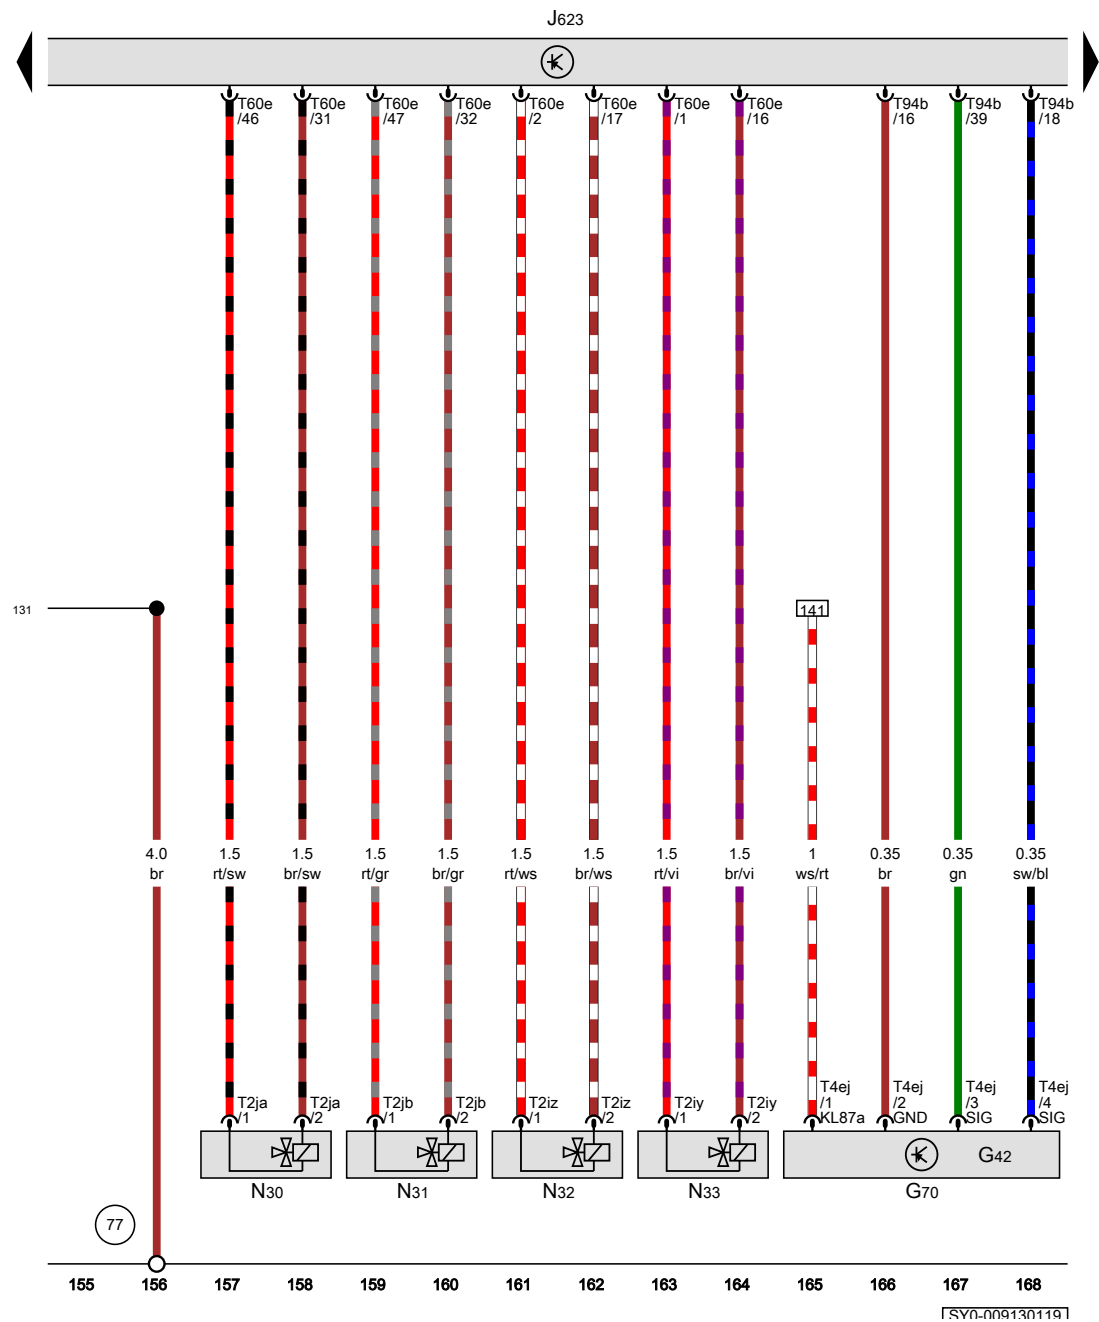

- G42 Intake air temperature sender
- G70 Air mass meter
- J623 Engine/motor control unit
- N30 Injector, cylinder 1
- N31 Injector, cylinder 2
- N32 Injector, cylinder 3
- N33 Injector, cylinder 4
- T2iy 2-pin connector, black
- T2iz 2-pin connector, black
- T2ja 2-pin connector, black
- T2jb 2-pin connector, black
- T4ej 4-pin connector, black
- T60e 60-pin connector, black
- T94b 94-pin connector, black


77 Earth point, lower part of left B-pillar

131 Earth connection 2, in engine compartment wiring harness

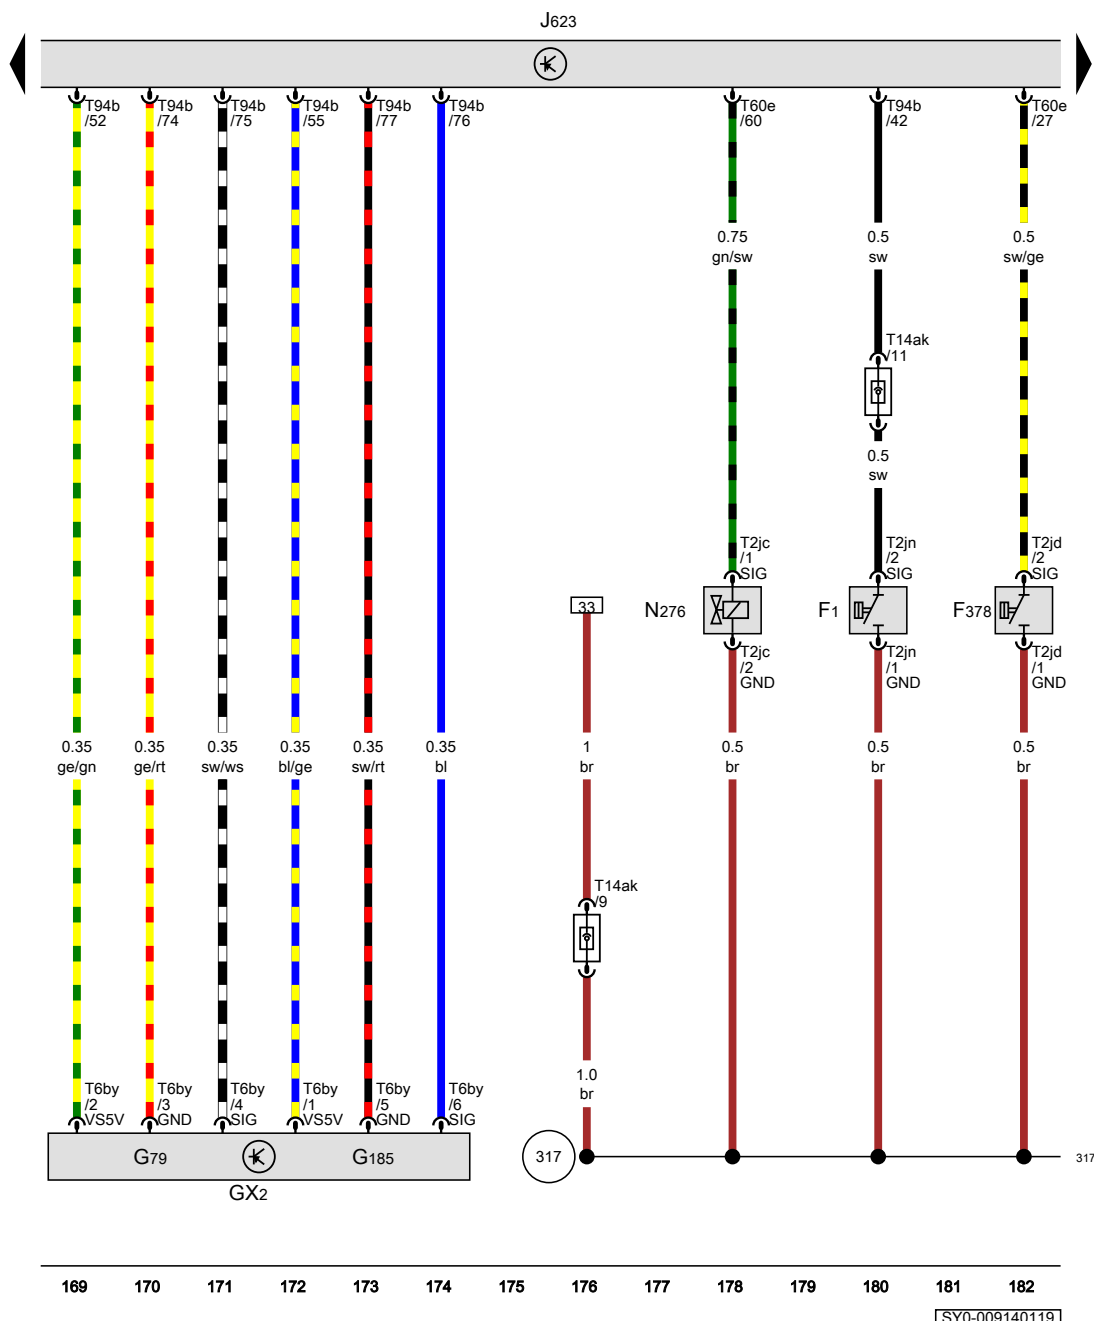

Oil pressure switch, Oil pressure switch for reduced oil pressure, Accelerator pedal module, Engine/motor control unit, Fuel pressure regulating valve

- F1 Oil pressure switch
- F378 Oil pressure switch for reduced oil pressure
- GX2 Accelerator pedal module
- G79 Accelerator position sender
- G185 Accelerator position sender 2
- J623 Engine/motor control unit
- N276 Fuel pressure regulating valve
- T2jc 2-pin connector, black
- T2jd 2-pin connector, black
- T2jn 2-pin connector, red
- T6by 6-pin connector, black
- T14ak 14-pin connector, grey
- T60e 60-pin connector, black
- T94b 94-pin connector, black
- 317 Earth connection 7, in engine compartment wiring harness

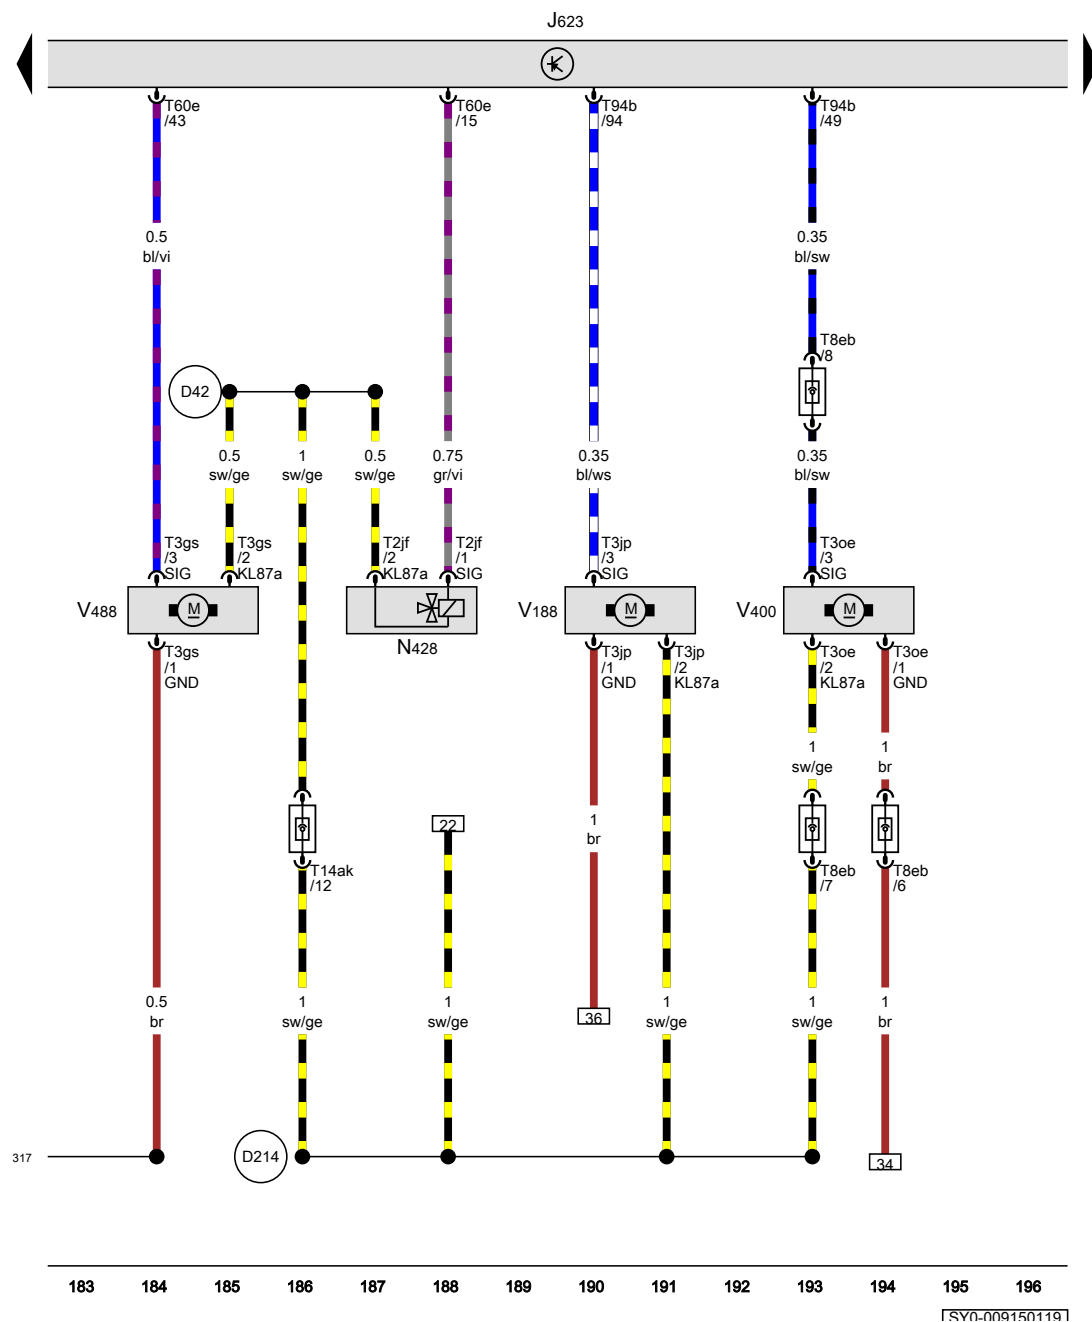

Engine/motor control unit, Valve for oil pressure control, Charge air cooling pump, Pump for exhaust gas recirculation cooler, Auxiliary pump for heating


- J623 Engine/motor control unit
- N428 Valve for oil pressure control
- T2jf 2-pin connector, black
- T3gs 3-pin connector, black
- T3jp 3-pin connector, black
- T3oe 3-pin connector, black
- T8eb 8-pin connector, black
- T14ak 14-pin connector, grey
- T60e 60-pin connector, black
- T94b 94-pin connector, black
- V188 Charge air cooling pump
- V400 Pump for exhaust gas recirculation cooler
- V488 Auxiliary pump for heating

- 317 Earth connection 7, in engine compartment wiring harness
- D42 Connection 4, in engine prewiring harness
- D214 Connection 8 (87a), in engine compartment wiring harness


- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

Lambda probe 1 before catalytic converter, Engine/motor control unit, Heater element for crankcase breather, Fuel metering valve, Injector for reducing agent

- | | |
|-------|---|
| GX10 | Lambda probe 1 before catalytic converter |
| J623 | Engine/motor control unit |
| N79 | Heater element for crankcase breather |
| N290 | Fuel metering valve |
| N474 | Injector for reducing agent |
| T2jq | 2-pin connector, black |
| T2ll | 2-pin connector, black |
| T2pz | 2-pin connector, black |
| T6be | 6-pin connector, black |
| T14ak | 14-pin connector, grey |
| T60e | 60-pin connector, black |
| T94b | 94-pin connector, black |

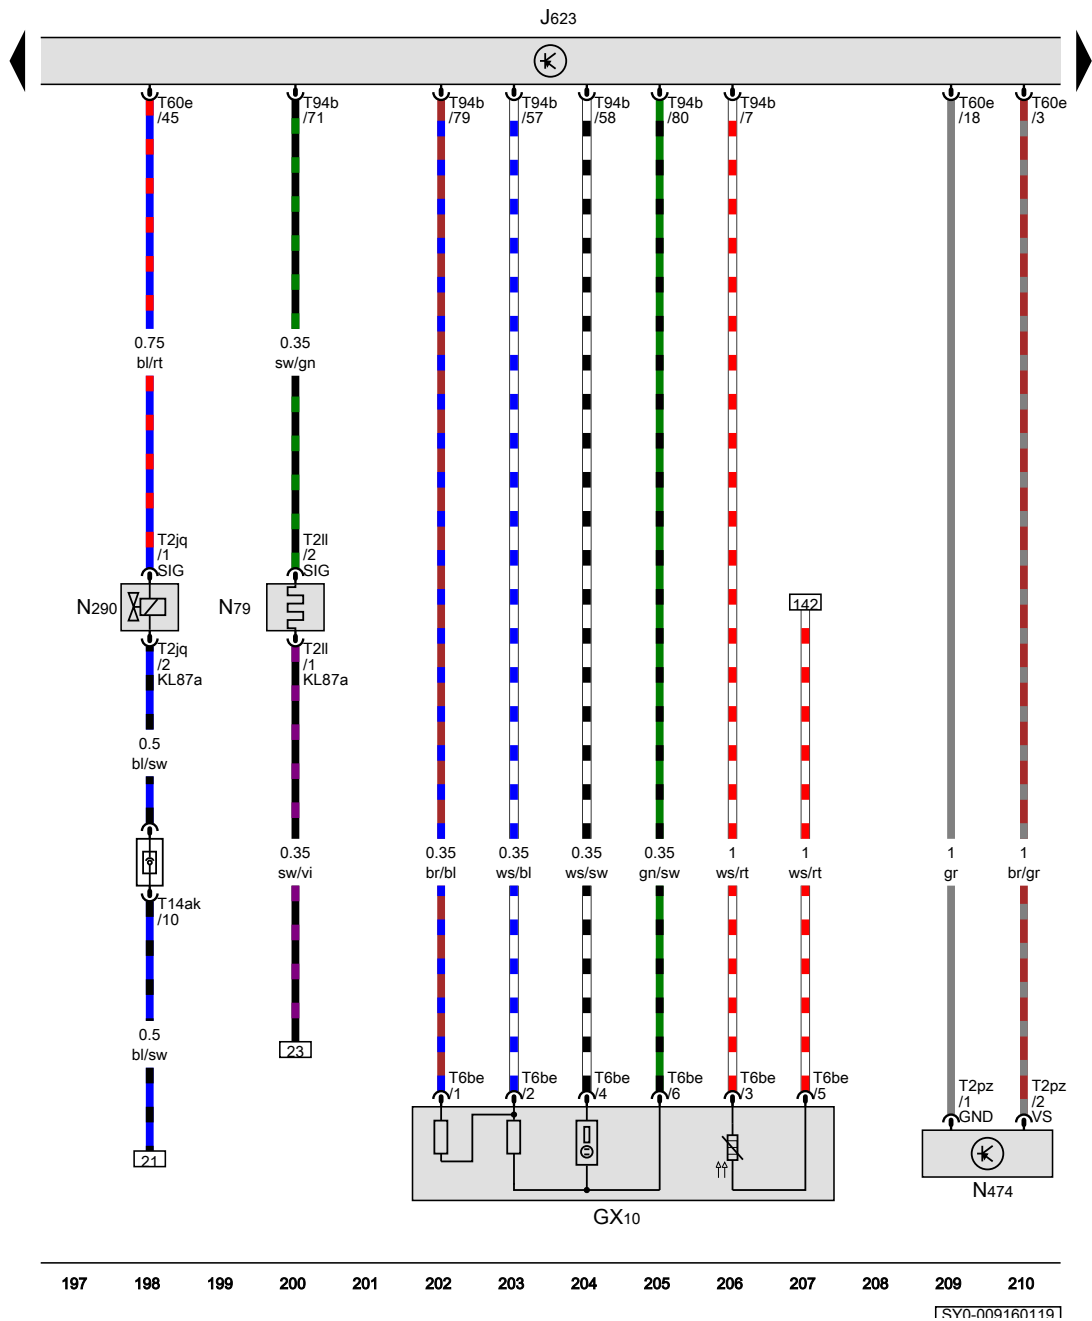

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink

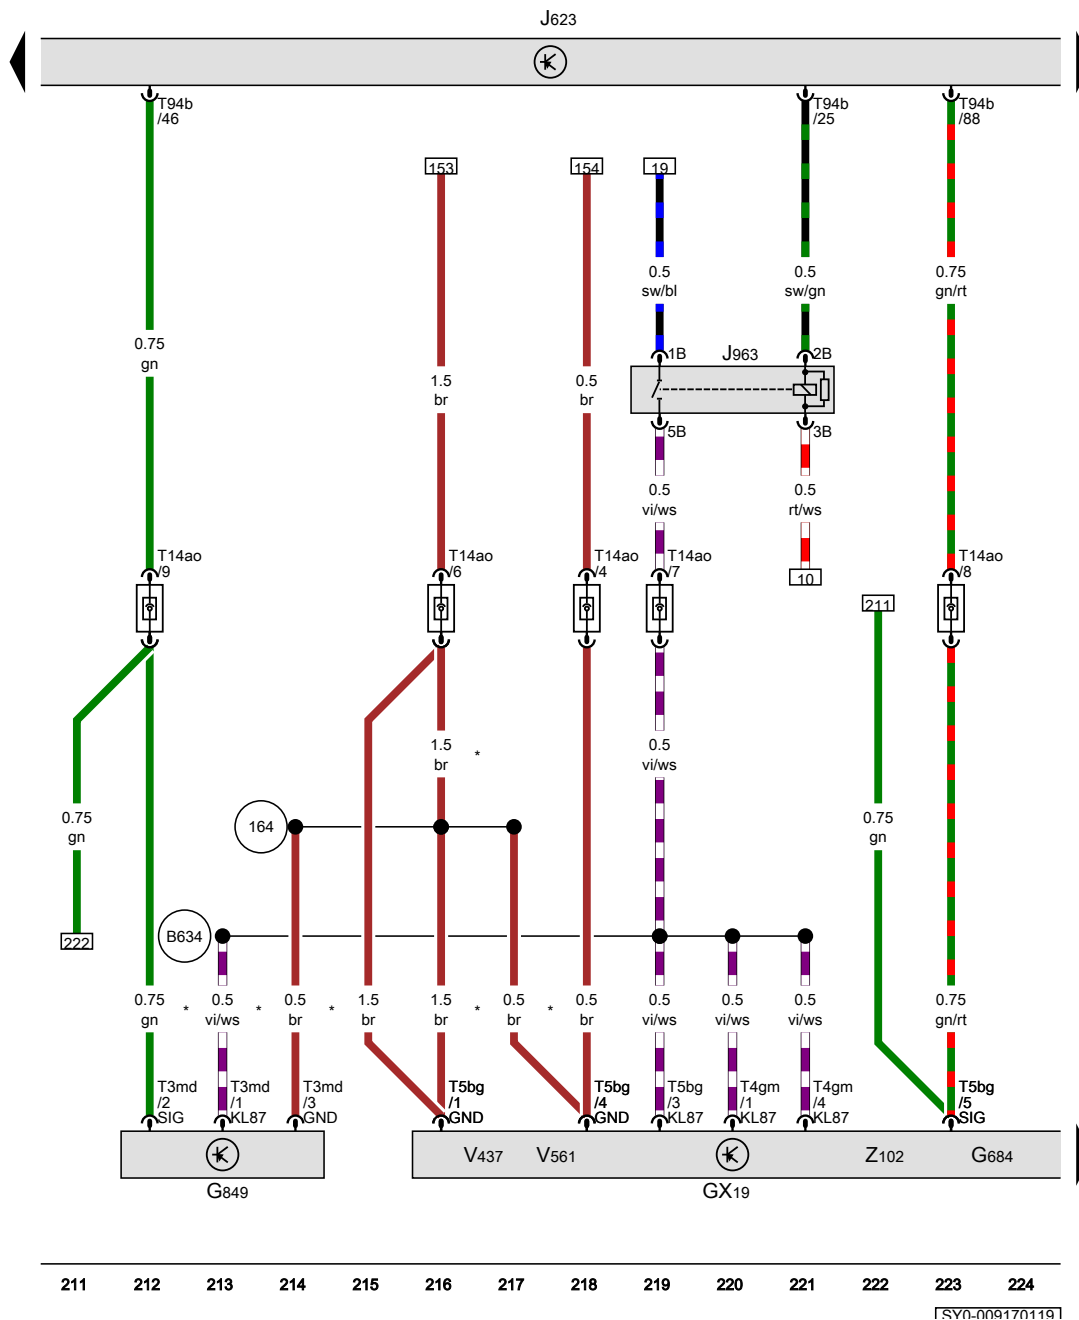


Delivery unit for reducing agent metering system, Reducing agent quality sensor, Engine/motor control unit, Relay for reducing agent metering system

- GX19 Delivery unit for reducing agent metering system
- G684 Tank sender for reducing agent
- G849 Reducing agent quality sensor
- J623 Engine/motor control unit
- J963 Relay for reducing agent metering system
- T3md 3-pin connector, black
- T4gm 4-pin connector, black
- T5bg 5-pin connector, black
- T14ao 14-pin connector, black
- T94b 94-pin connector, black
- V437 Pump for reducing agent
- V561 Reducing agent return flow pump
- Z102 Heater for reducing agent tank (heater circuit 1)

- 164 Earth connection, in catalytic converter warning circuit wiring harness
- B634 Positive connection 2 (87), in main wiring harness
- * According to equipment

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

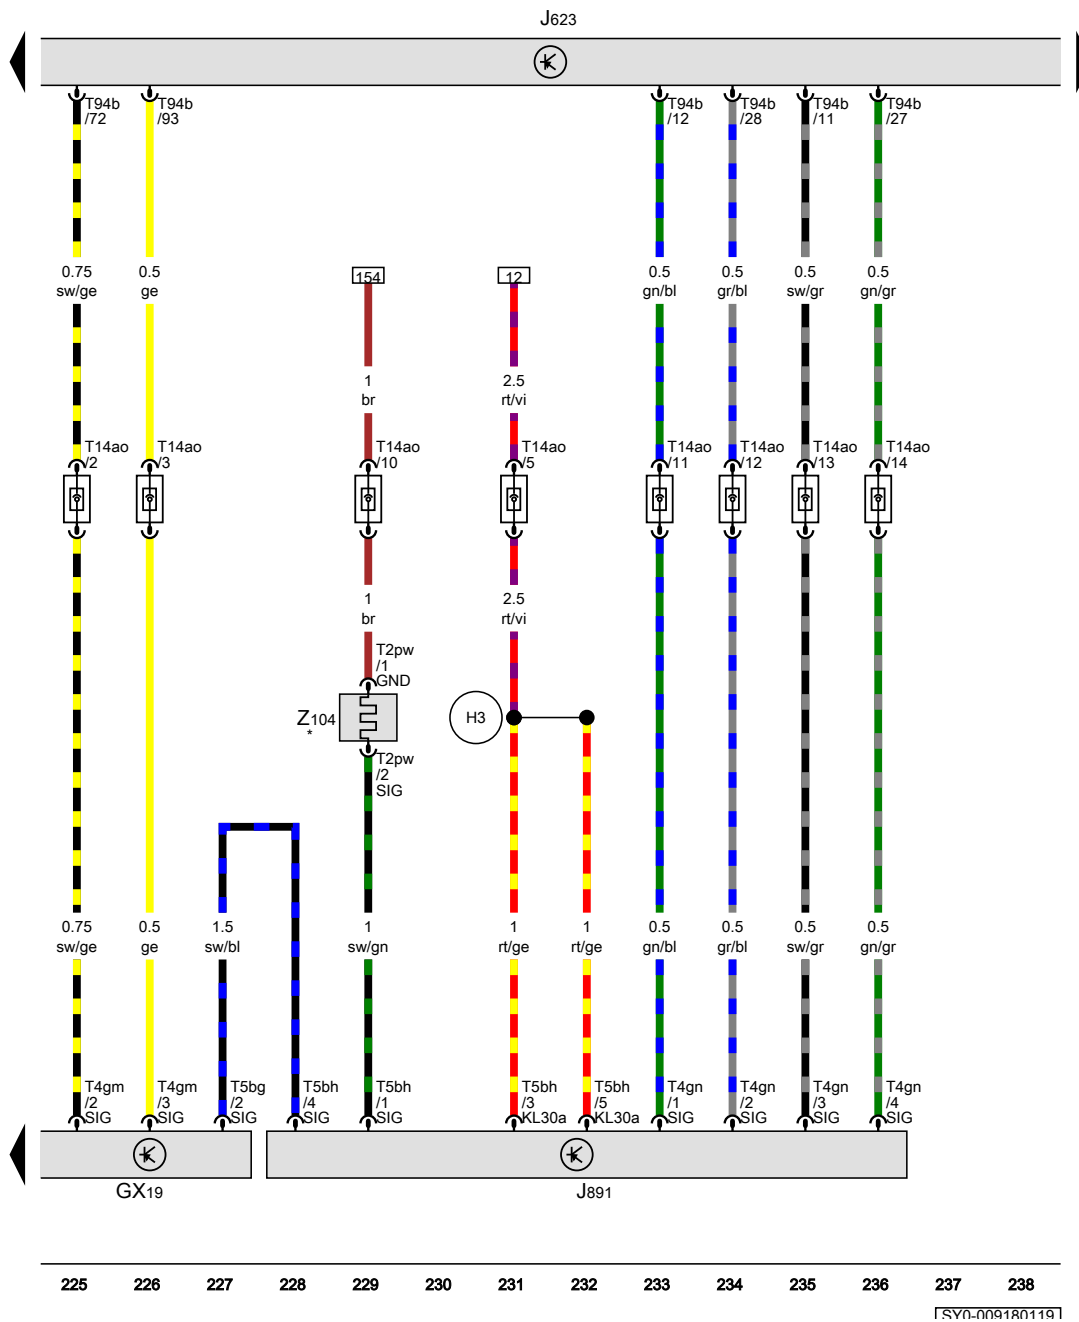


Delivery unit for reducing agent metering system, Engine/motor control unit, Control unit for reducing agent heater, Heater for reducing agent line (heater circuit 2)

- GX19 Delivery unit for reducing agent metering system
- J623 Engine/motor control unit
- J891 Control unit for reducing agent heater
- T2pw 2-pin connector, black
- T4gm 4-pin connector, black
- T4gn 4-pin connector, black
- T5bg 5-pin connector, black
- T5bh 5-pin connector, colourless
- T14ao 14-pin connector, black
- T94b 94-pin connector, black
- Z104 Heater for reducing agent line (heater circuit 2)
- H3 Connection 1 in wiring harness for reducing agent tank
- * Pre-wired component

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

Clutch position sender, Engine/motor control unit

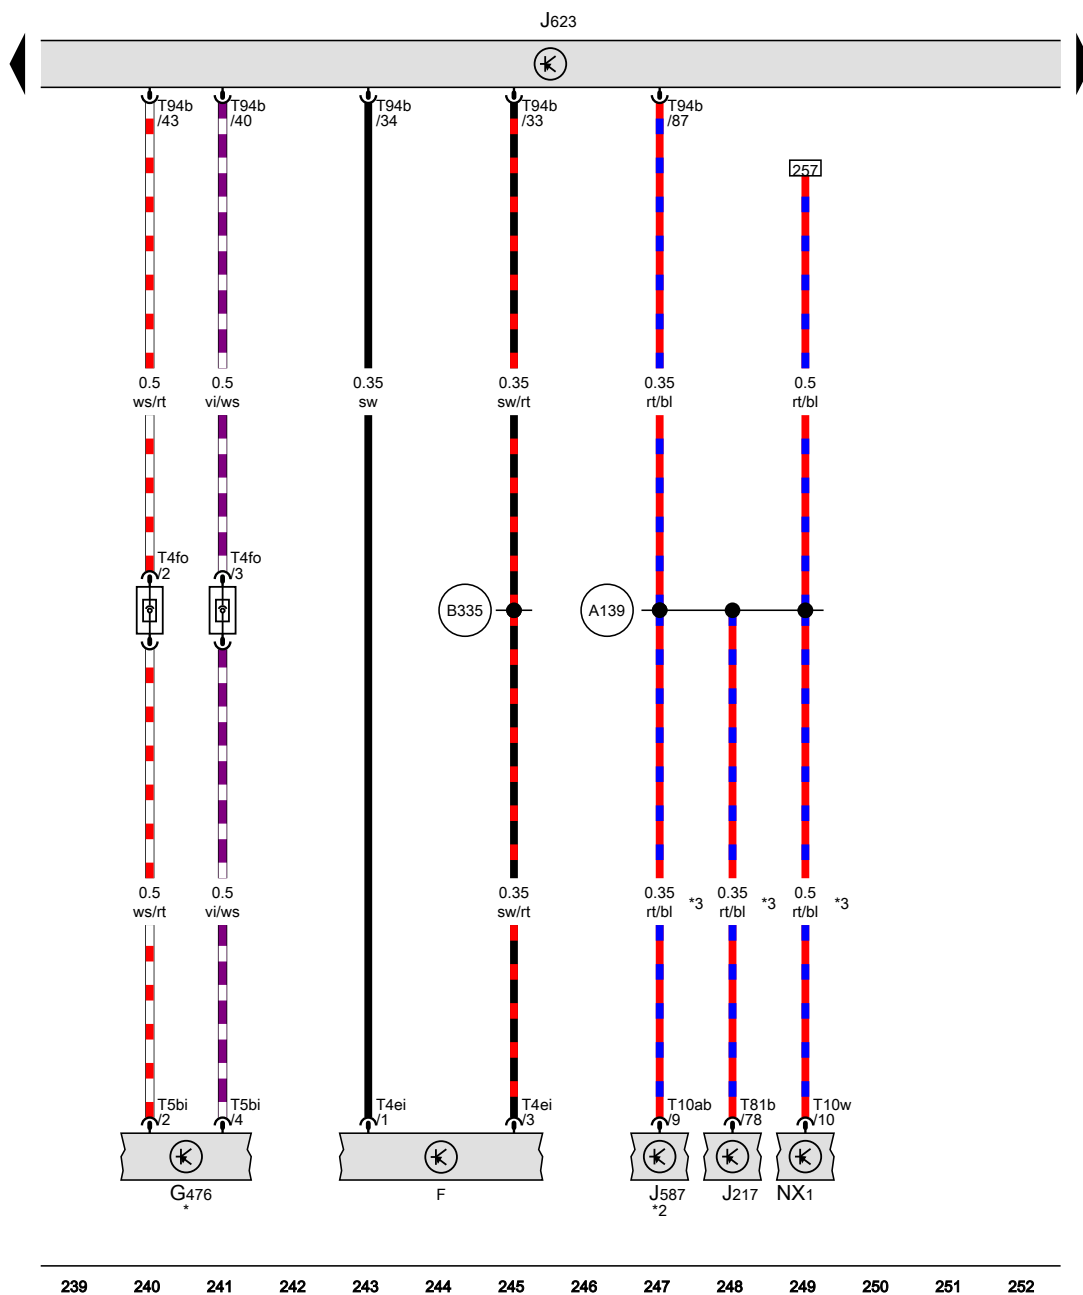


- F Brake light switch
- G476 Clutch position sender
- J217 Automatic gearbox control unit
- J587 Selector lever sensors control unit
- J623 Engine/motor control unit
- NX1 Gearbox
- T4ei 4-pin connector, black
- T4fo 4-pin connector, black
- T5bi 5-pin connector, black
- T10ab 10-pin connector, red
- T10w 10-pin connector, black
- T81b 81-pin connector, black
- T94b 94-pin connector, black

A139 Connection 3 (15) in dash panel wiring harness

B335 Connection 1 (54), in main wiring harness

- * see applicable current flow diagram for basic equipment
- *2 Pre-wired component
- *3 For models with automatic gearbox

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

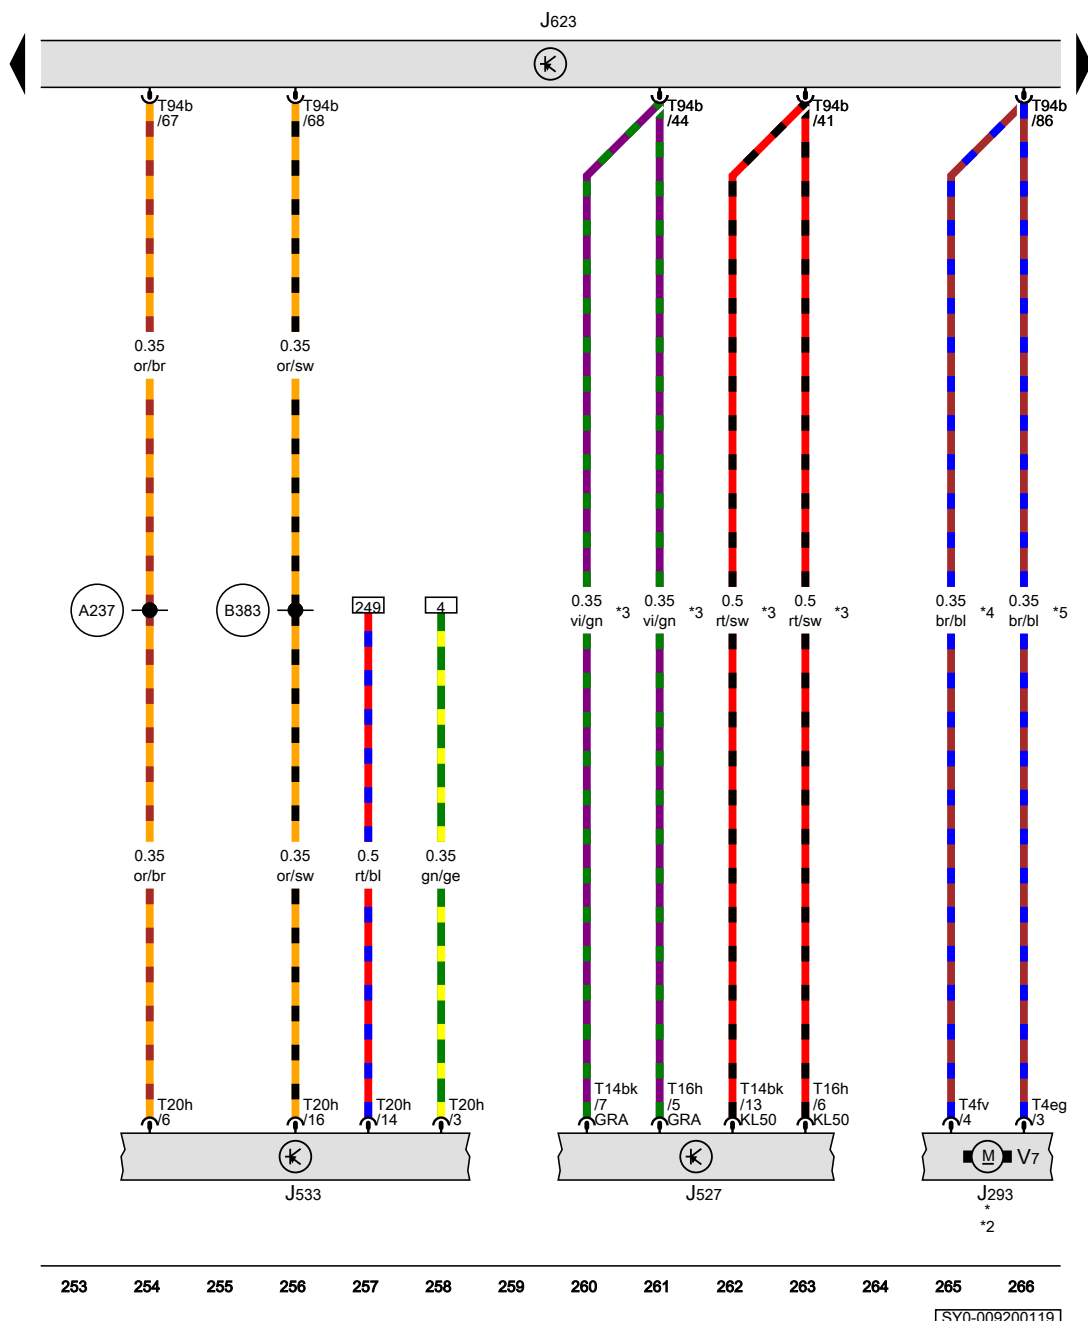

Engine/motor control unit, Radiator fan

- J293 Radiator fan control unit
- J527 Steering column electronics control unit
- J533 Data bus diagnostic interface
- J623 Engine/motor control unit
- T4eg 4-pin connector, black
- T4fv 4-pin connector, black
- T14bk 14-pin connector, black
- T16h 16-pin connector, black
- T20h 20-pin connector, red
- T94b 94-pin connector, black
- V7 Radiator fan


A237 Connection 1 (powertrain CAN bus, low), in dash panel wiring harness

B383 Connection 1 (powertrain CAN bus, high), in main wiring harness

- * Pre-wired component
- *2 see applicable current flow diagram for radiator fan
- *3 According to equipment
- *4 For models with towing bracket
- *5 For models with no towing bracket

Engine/motor control unit, Starter relay 1, Starter relay 2


- J623 Engine/motor control unit
- J906 Starter relay 1
- J907 Starter relay 2
- T94b 94-pin connector, black
- * see applicable current flow diagram for basic equipment

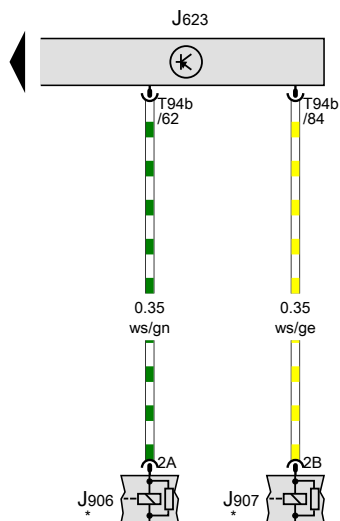

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

Emergency call module

From September 2016

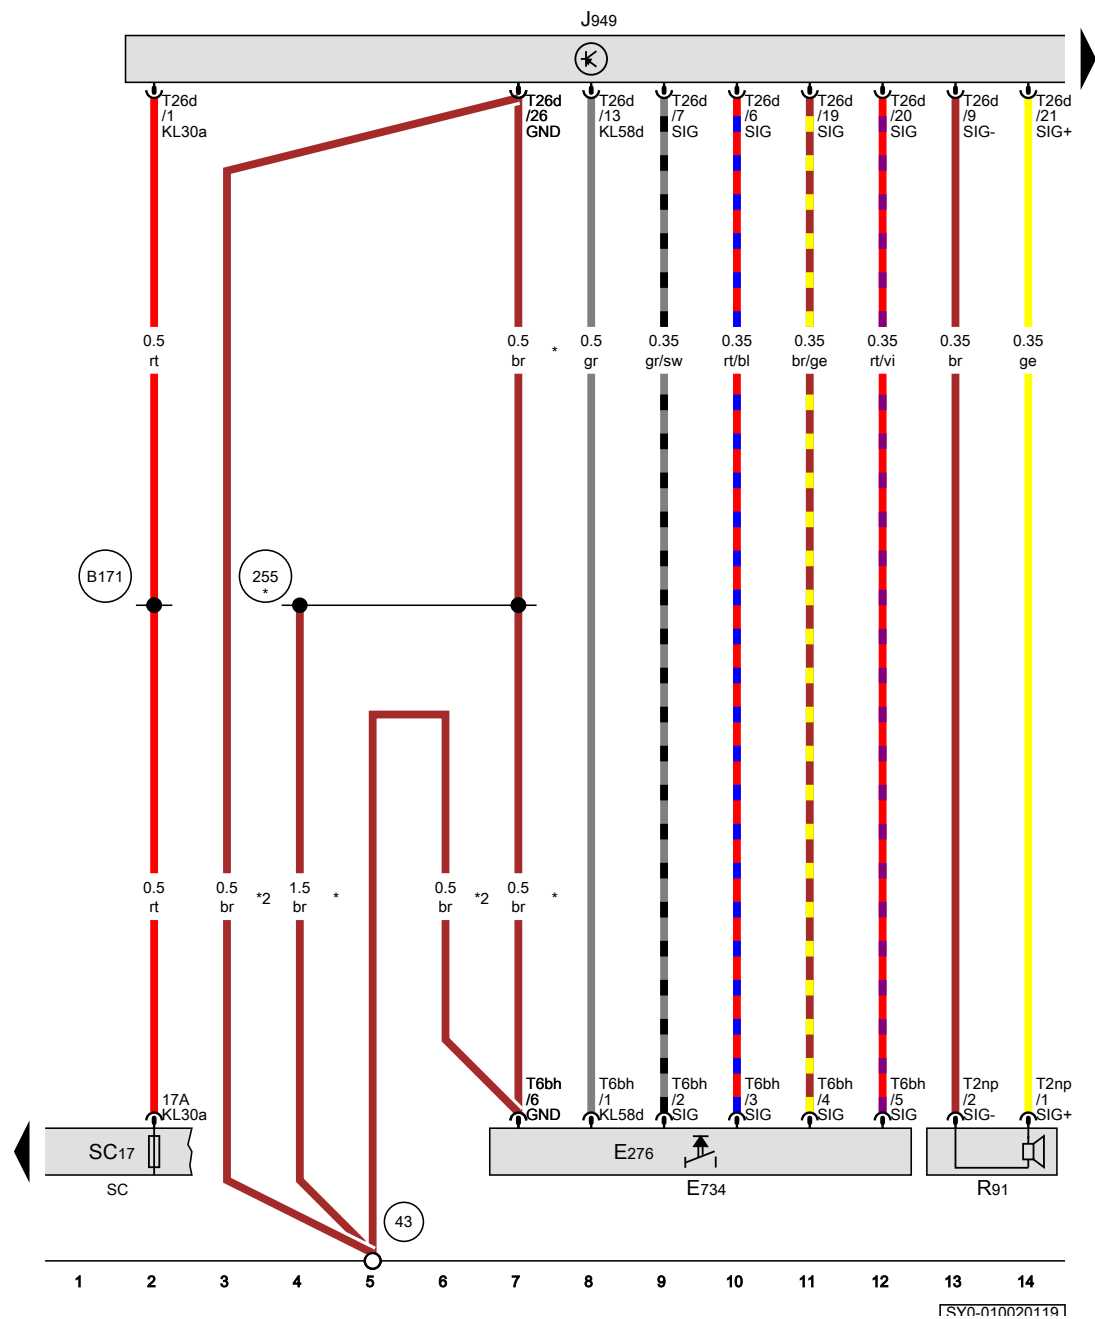

Telematics button module, Emergency call module control unit and communication unit, Additional loudspeaker for telematics, Fuse holder C


- E276 Emergency assistance call button
- E734 Telematics button module
- J949 Emergency call module control unit and communication unit
- R91 Additional loudspeaker for telematics
- SC Fuse holder C
- SC17 Fuse 17 on fuse holder C
- T2np 2-pin connector, black
- T6bh 6-pin connector, brown
- T26d 26-pin connector, black

- 43 Earth point, lower part of right A-pillar
- 255 Earth connection 1, in radio wiring harness
- B171 Positive connection 3 (30), in interior wiring harness

- * Up to May 2017
- *2 From May 2017

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

Emergency call module control unit and communication unit, Internal microphone

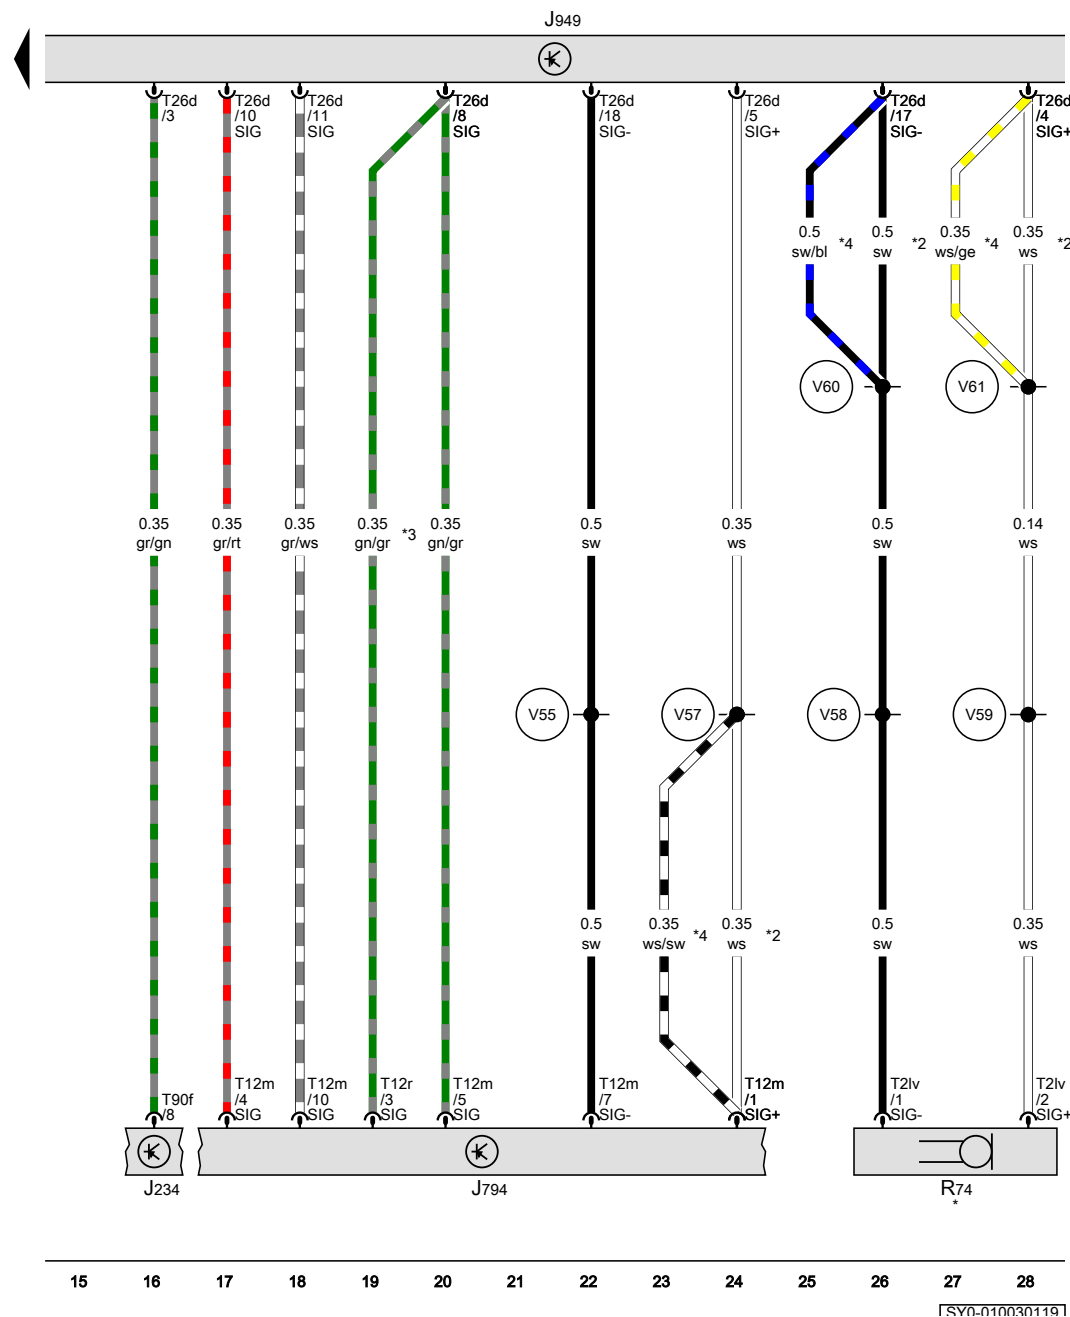

- J234 Airbag control unit
- J794 Control unit 1 for information electronics
- J949 Emergency call module control unit and communication unit
- R74 Internal microphone
- T2lv 2-pin connector, black
- T12m 12-pin connector, blue
- T12r 12-pin connector, blue
- T26d 26-pin connector, black
- T90f 90-pin connector, yellow

V55 Connection 2 (telephone), in main wiring harness

V57 Connection 4 (telephone), in main wiring harness

V58 Connection 5 (telephone), in main wiring harness

V59 Connection 6 (telephone), in main wiring harness

V60 Connection 7 (telephone), in main wiring harness

V61 Connection 8 (telephone), in main wiring harness

* Pre-wired component


*2 Up to November 2017

*3 For models with radio

*4 From November 2017

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

Emergency call module control unit and communication unit, Roof aerial

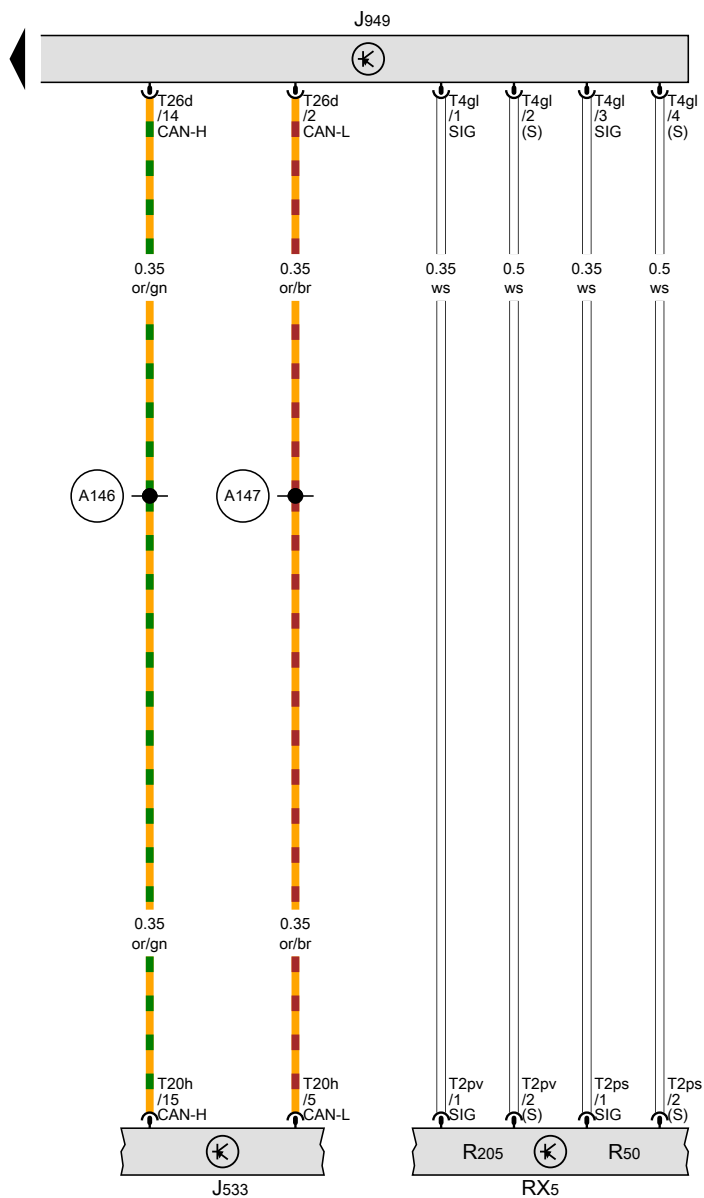


- J533 Data bus diagnostic interface
- J949 Emergency call module control unit and communication unit
- RX5 Roof aerial
- R50 GPS aerial
- R205 GSM aerial
- T2ps 2-pin connector, blue
- T2pv 2-pin connector, purple
- T4gl 4-pin connector, purple
- T20h 20-pin connector, red
- T26d 26-pin connector, black
- A146 Connection (convenience CAN bus, high), in dash panel wiring harness
- A147 Connection (convenience CAN bus, low), in dash panel wiring harness

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

[SYN-010040119]

Convenience system

From September 2016

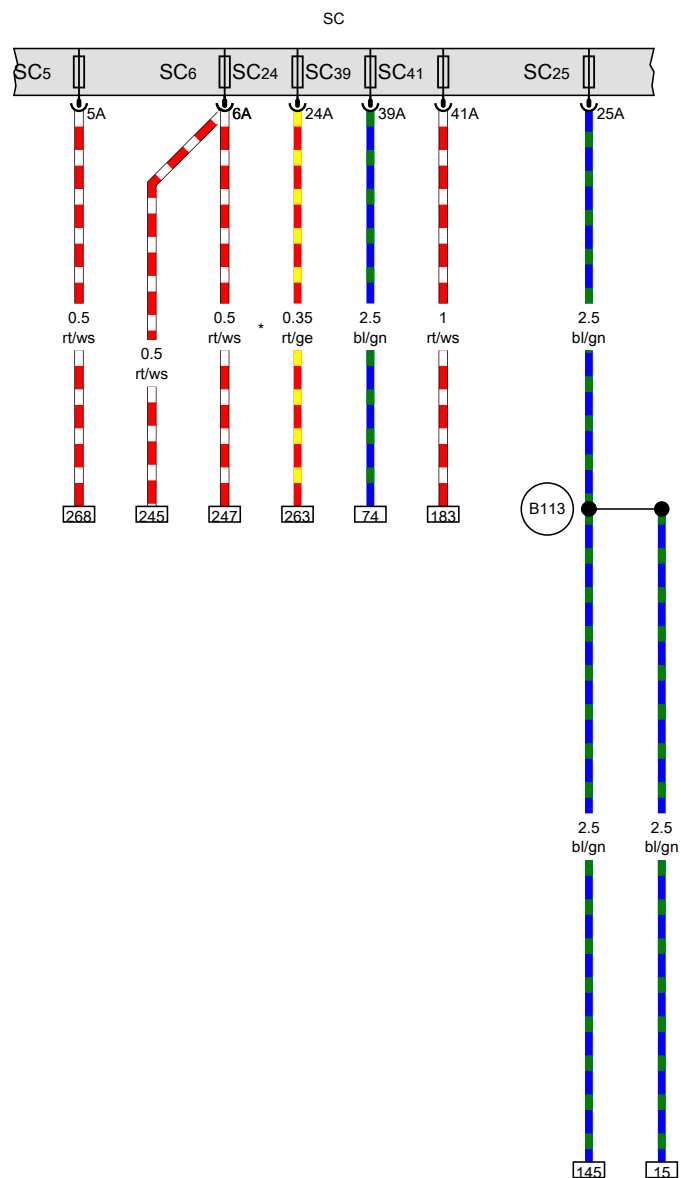

Fuse holder C

- SC Fuse holder C
- SC5 Fuse 5 on fuse holder C
- SC6 Fuse 6 on fuse holder C
- SC24 Fuse 24 on fuse holder C
- SC25 Fuse 25 on fuse holder C
- SC39 Fuse 39 on fuse holder C
- SC41 Fuse 41 on fuse holder C

 Positive connection (30a), in left interior wiring harness


* For models with anti-theft alarm system and front and rear interior monitor

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink


Driver door control unit, Driver door lock unit

J386 Driver door control unit
T8dt 8-pin connector, black
T20k 20-pin connector, black
T28f 28-pin connector, black
VX21 Driver door lock unit

205 Earth connection, in driver door wiring harness

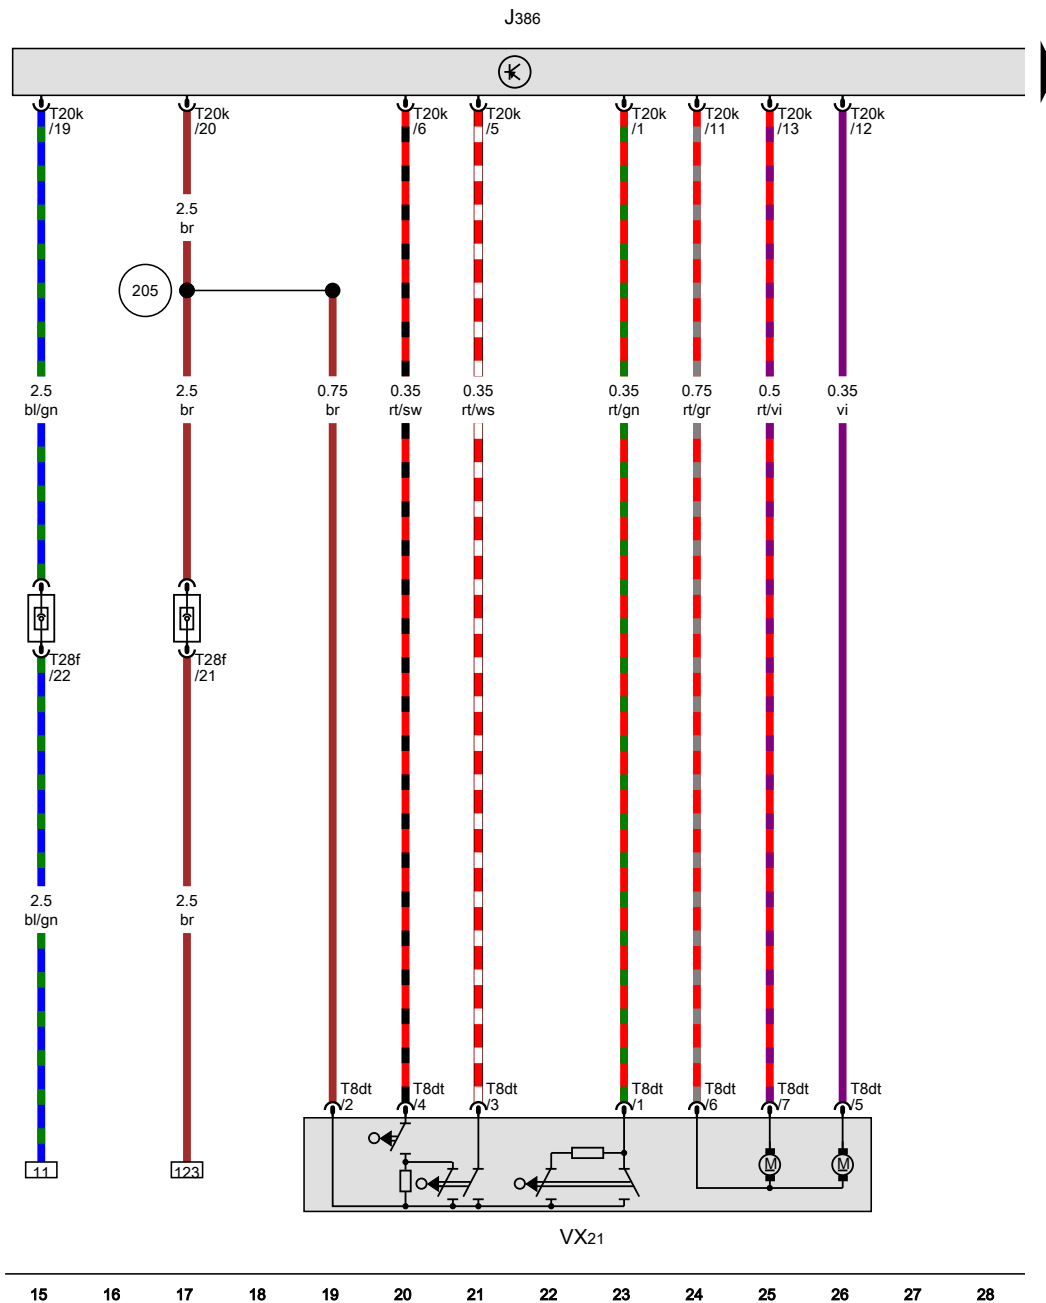


ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink

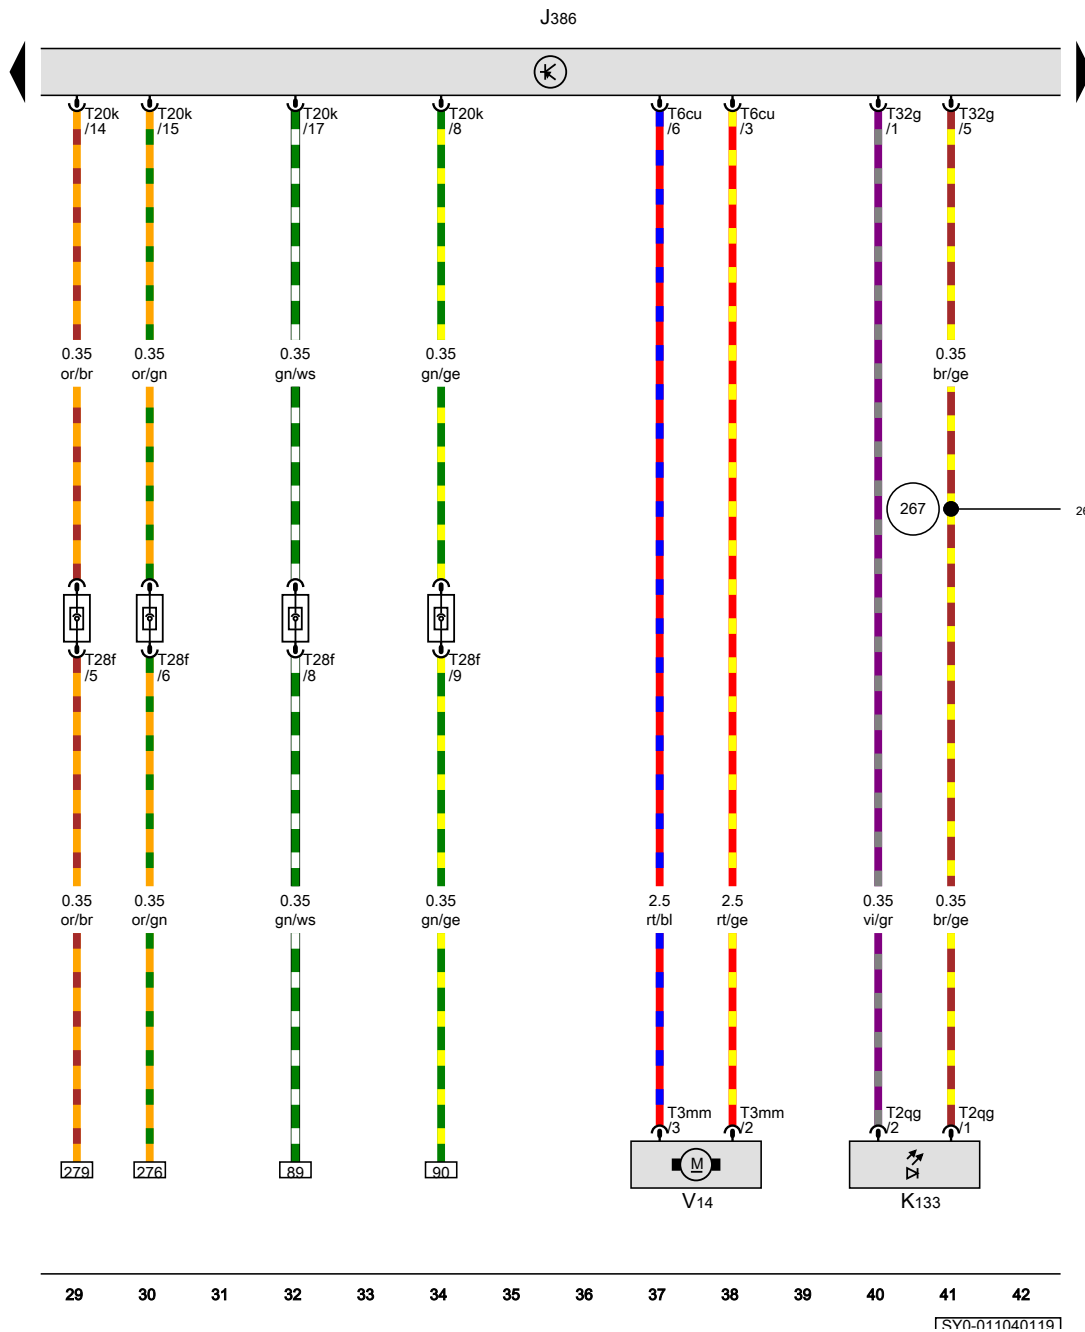

Driver door control unit, Central locking SAFELOCK function warning lamp, Left window regulator motor

- J386 Driver door control unit
- K133 Central locking SAFELOCK function warning lamp
- T2qg 2-pin connector, black
- T3mm 3-pin connector, blue
- T6cu 6-pin connector, black
- T20k 20-pin connector, black
- T28f 28-pin connector, black
- T32g 32-pin connector, blue
- V14 Left window regulator motor

- 267 Earth connection 2, in drive side door wiring harness

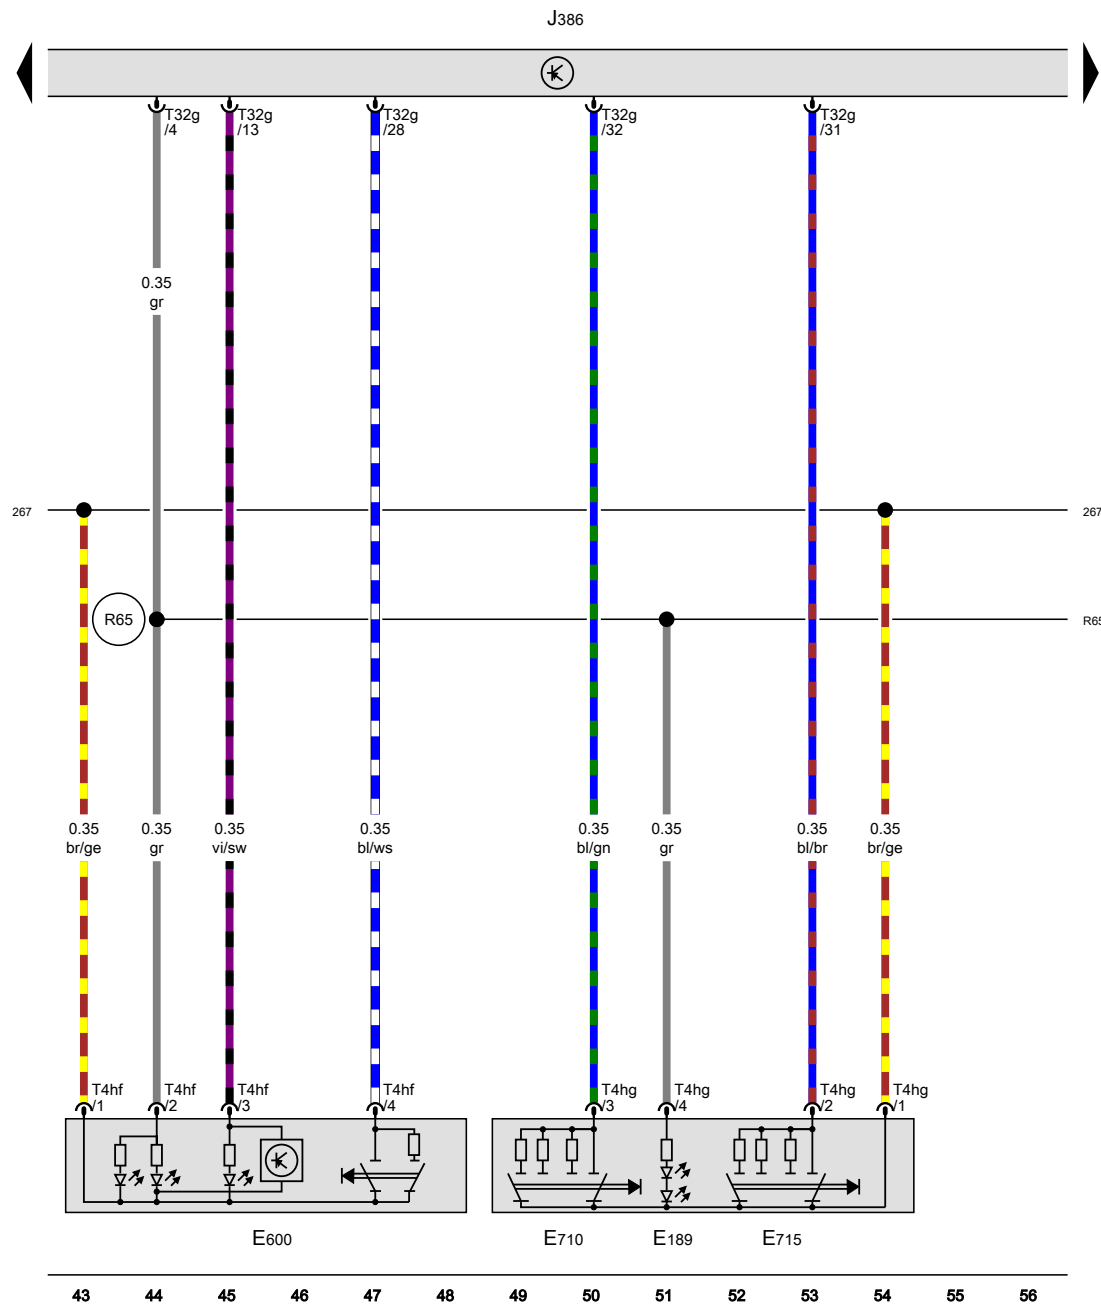

Central switch for window regulators in driver door, Central locking button, Driver door control unit


- E189 Central switch for window regulators in driver door
- E600 Central locking button
- E710 Front driver side window regulator button
- E715 Front passenger side window regulator button, in driver door
- J386 Driver door control unit
- T4hf 4-pin connector, blue
- T4hg 4-pin connector, brown
- T32g 32-pin connector, blue

267 Earth connection 2, in drive side door wiring harness

R65 Positive connection (58), in driver door wiring harness

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

[SYN-011050119]

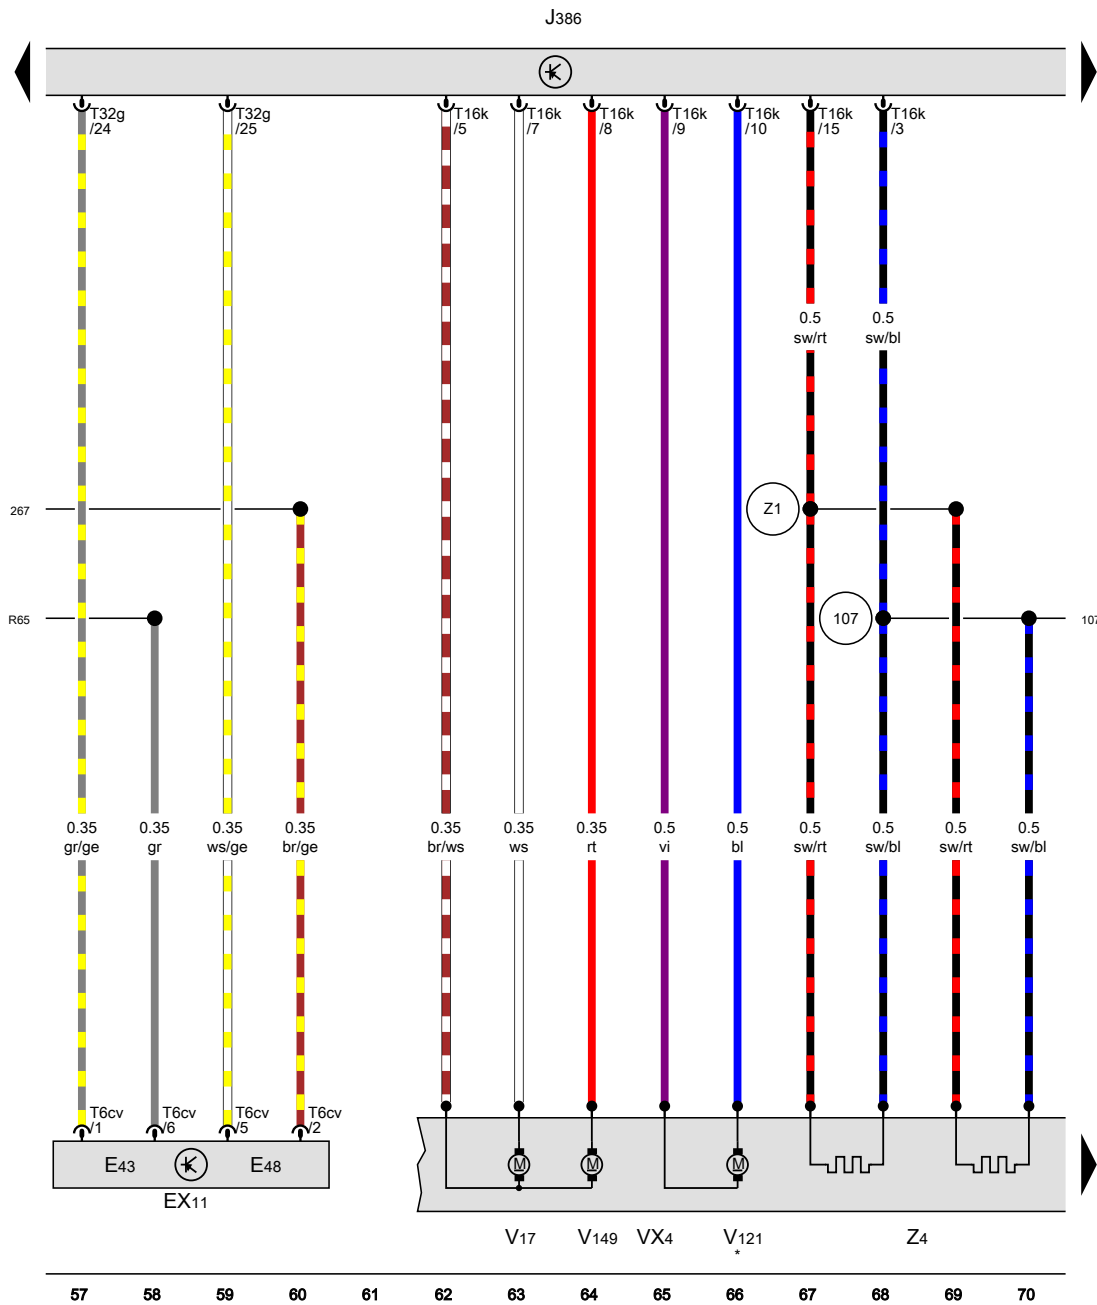


Exterior mirror adjuster, Driver door control unit, Driver side exterior mirror

- EX11 Exterior mirror adjuster
- E43 Mirror adjustment switch
- E48 Mirror adjustment changeover switch
- J386 Driver door control unit
- T6cv 6-pin connector, brown
- T16k 16-pin connector, black
- T32g 32-pin connector, blue
- VX4 Driver side exterior mirror
- V17 Driver side mirror adjustment motor 2
- V121 Driver side fold-in mirror motor
- V149 Driver side mirror adjustment motor
- Z4 Heated exterior mirror on driver side

- 107 Earth connection, in external mirror wiring harness
- 267 Earth connection 2, in drive side door wiring harness
- R65 Positive connection (58), in driver door wiring harness
- Z1 Connection 1, in mirror adjustment/heating wiring harness
- * For models with electric folding exterior mirrors

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

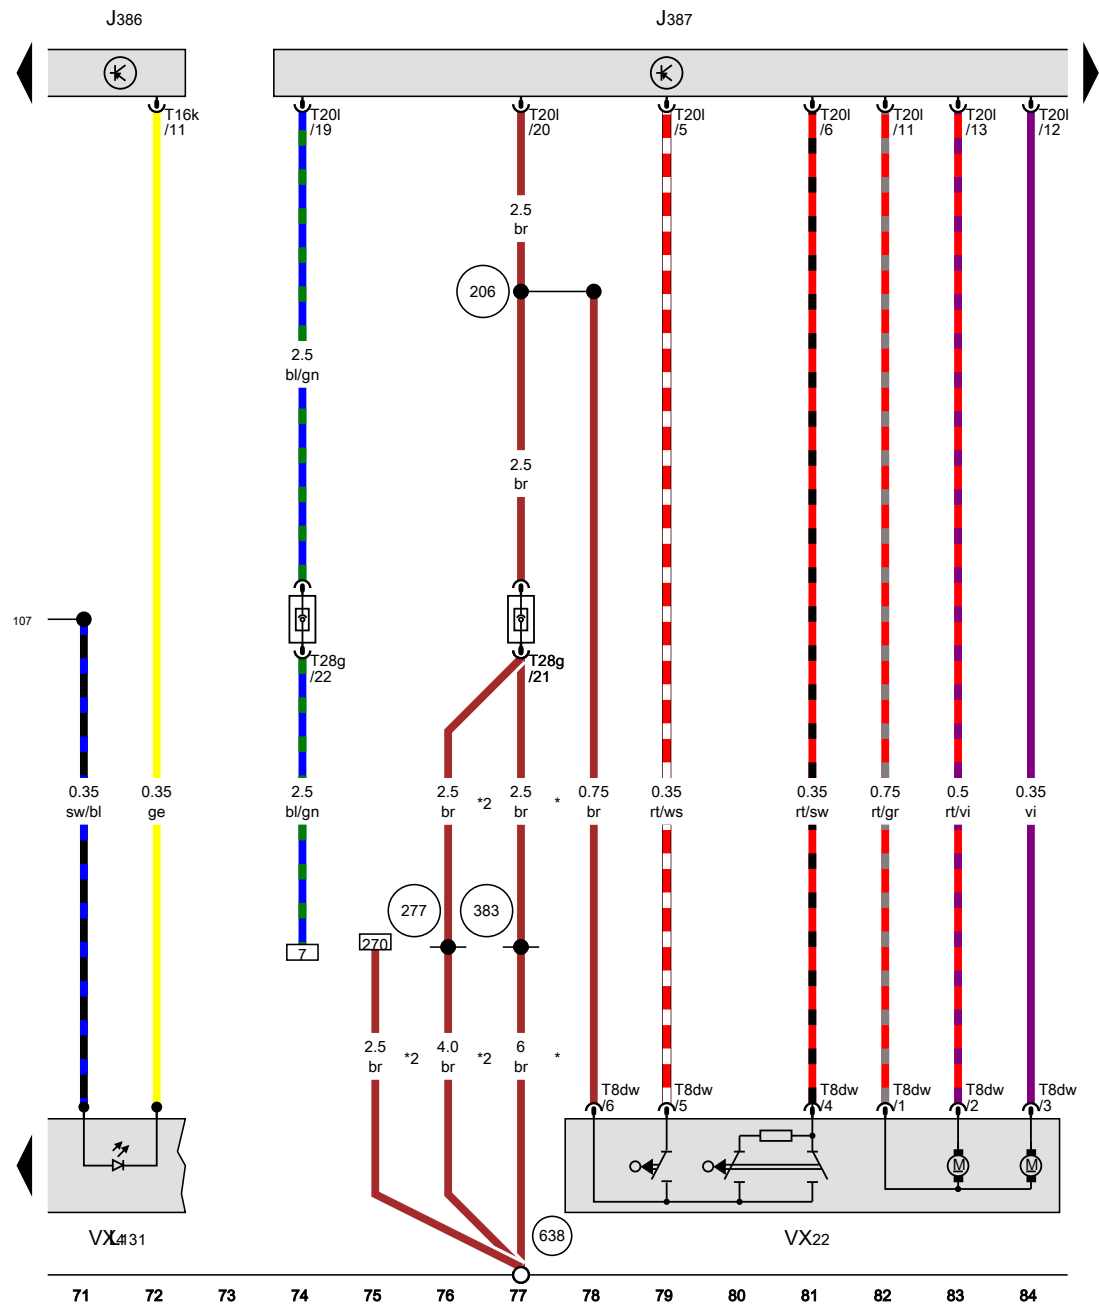


Driver door control unit, Front passenger door control unit,
Driver side exterior mirror, Front passenger door lock unit

- J386 Driver door control unit
- J387 Front passenger door control unit
- L131 Driver side turn signal repeater bulb
- T8dw 8-pin connector, black
- T16k 16-pin connector, black
- T20l 20-pin connector, black
- T28g 28-pin connector, black
- VX4 Driver side exterior mirror
- VX22 Front passenger door lock unit

- 107 Earth connection, in external mirror wiring harness
- 206 Earth connection, in front passenger door wiring harness
- 277 Earth connection 3, in interior wiring harness
- 383 Earth connection 18, in main wiring harness
- 638 Earth point, on right A-pillar
- * For left-hand drive models
- *2 For right-hand drive models

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

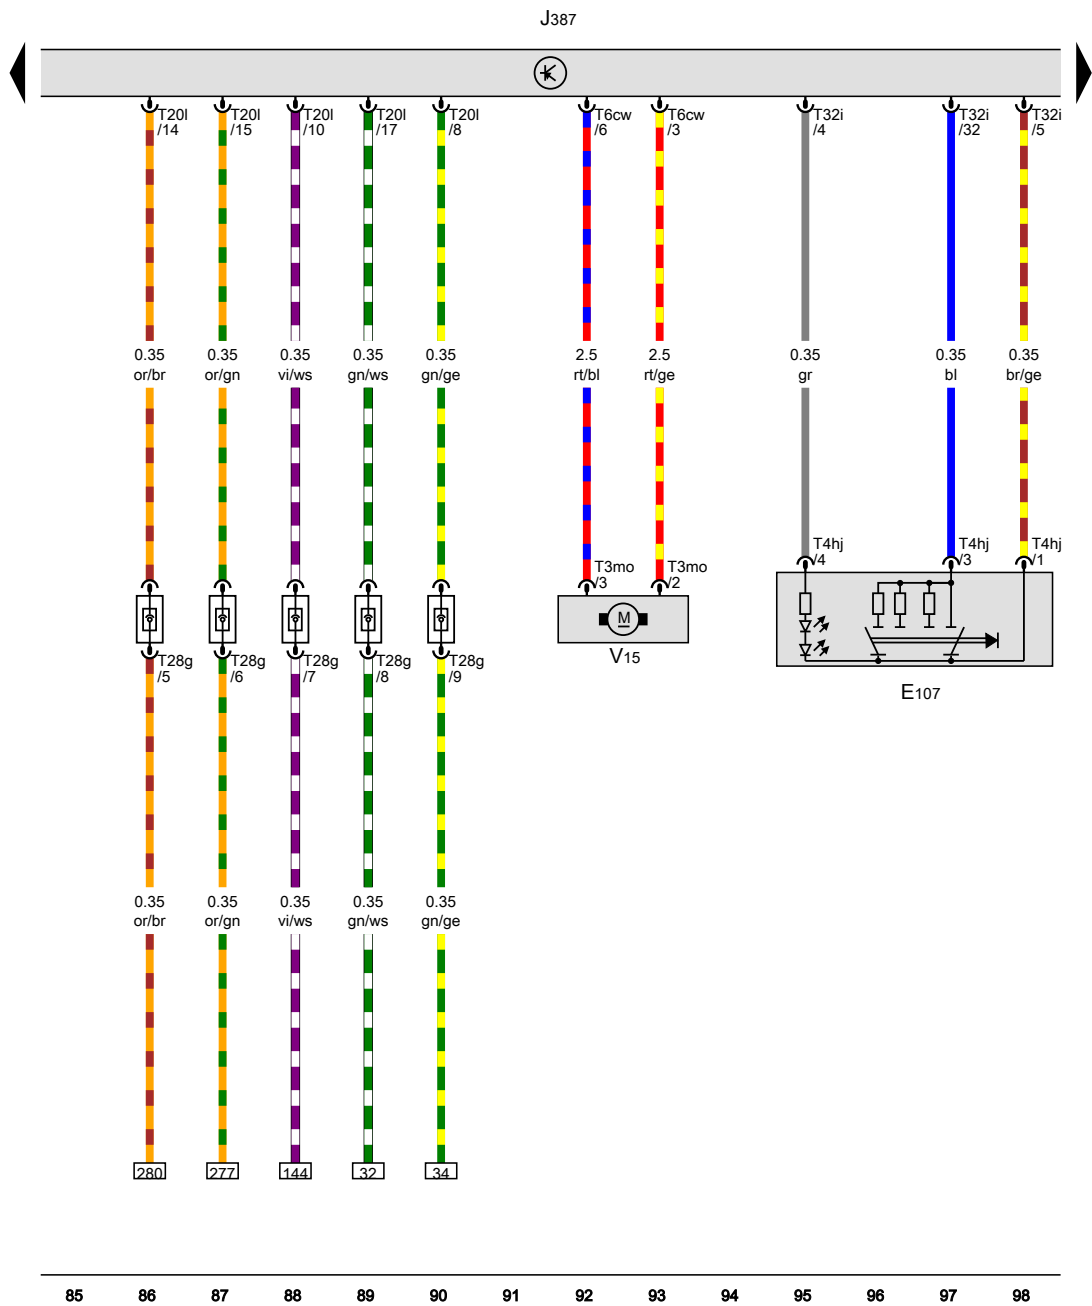


Window regulator switch in front passenger door, Front passenger door control unit, Right window regulator motor

- E107 Window regulator switch in front passenger door
- J387 Front passenger door control unit
- T3mo 3-pin connector, blue
- T4hj 4-pin connector, black
- T6cw 6-pin connector, black
- T20l 20-pin connector, black
- T28g 28-pin connector, black
- T32i 32-pin connector, blue
- V15 Right window regulator motor

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

[SYN-011080119]


Front passenger door control unit, Passenger side exterior mirror

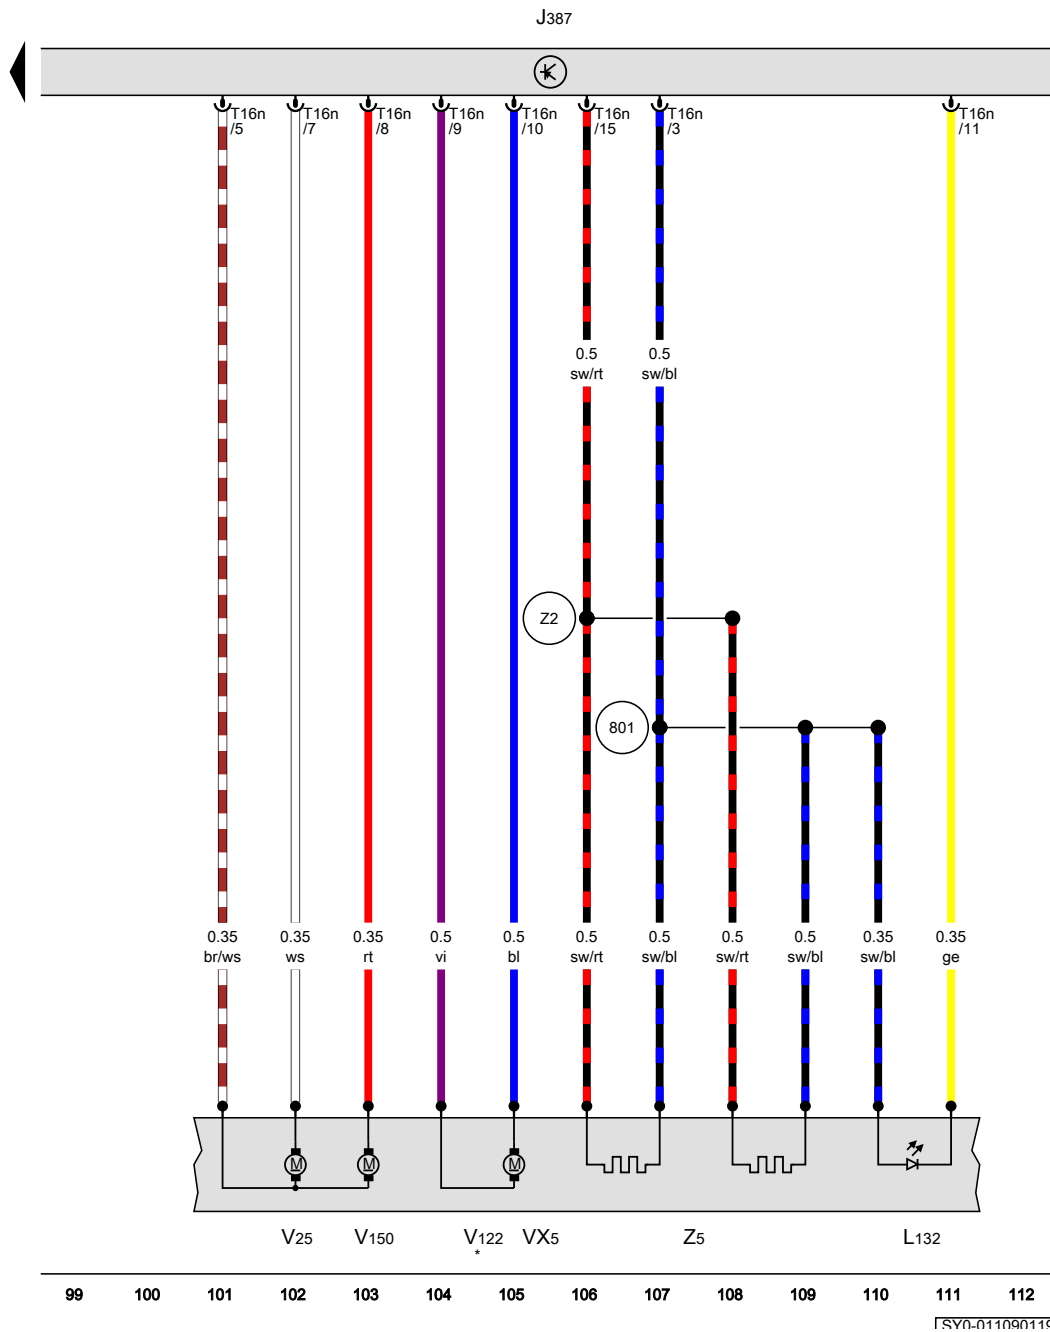

Contact strip in left sliding door, Onboard supply control unit,
Rear left door lock unit

- F353 Contact strip in left sliding door
J519 Onboard supply control unit
T6bq 6-pin connector, black
T6co 6-pin connector, black
T8dp 8-pin connector, black
T73a 73-pin connector, black
T73c 73-pin connector, black
VX23 Rear left door lock unit


- 44 Earth point, lower part of left A-pillar
151 Earth connection 1, in front wiring harness
294 Earth connection 9, in interior wiring harness
* For models with left sliding door
*2 For left-hand drive models
*3 For right-hand drive models

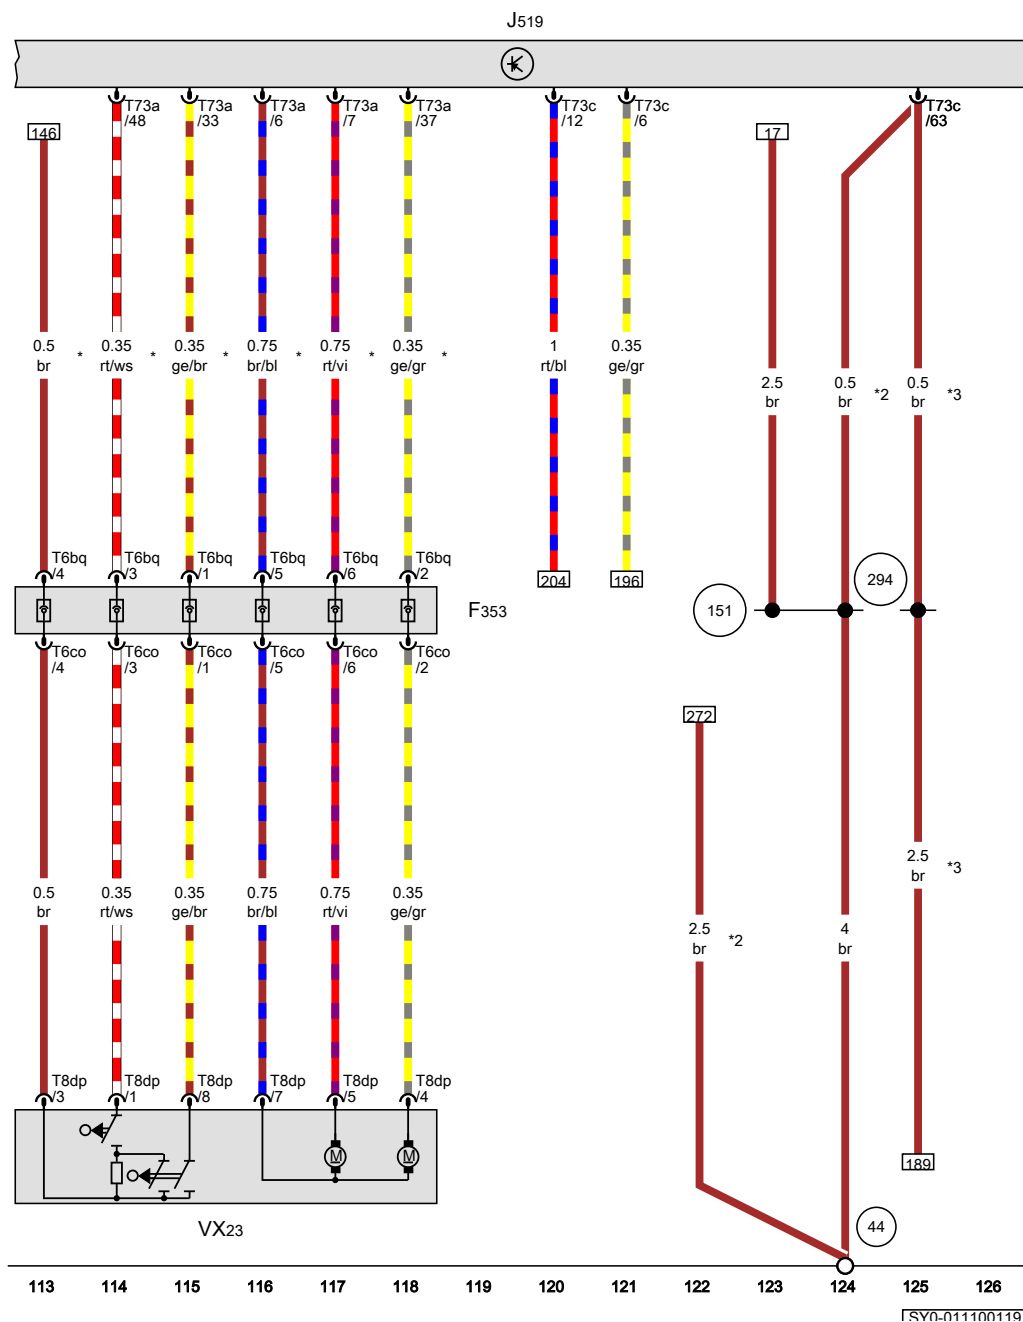


- ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink

Contact strip in right sliding door, Onboard supply control unit, Rear right door lock unit

- F352 Contact strip in right sliding door
- J519 Onboard supply control unit
- T6bn 6-pin connector, black
- T6cp 6-pin connector, black
- T8dq 8-pin connector, black
- T73a 73-pin connector, black
- VX24 Rear right door lock unit
- * For models with right sliding door
- *2 For models with left and right sliding doors

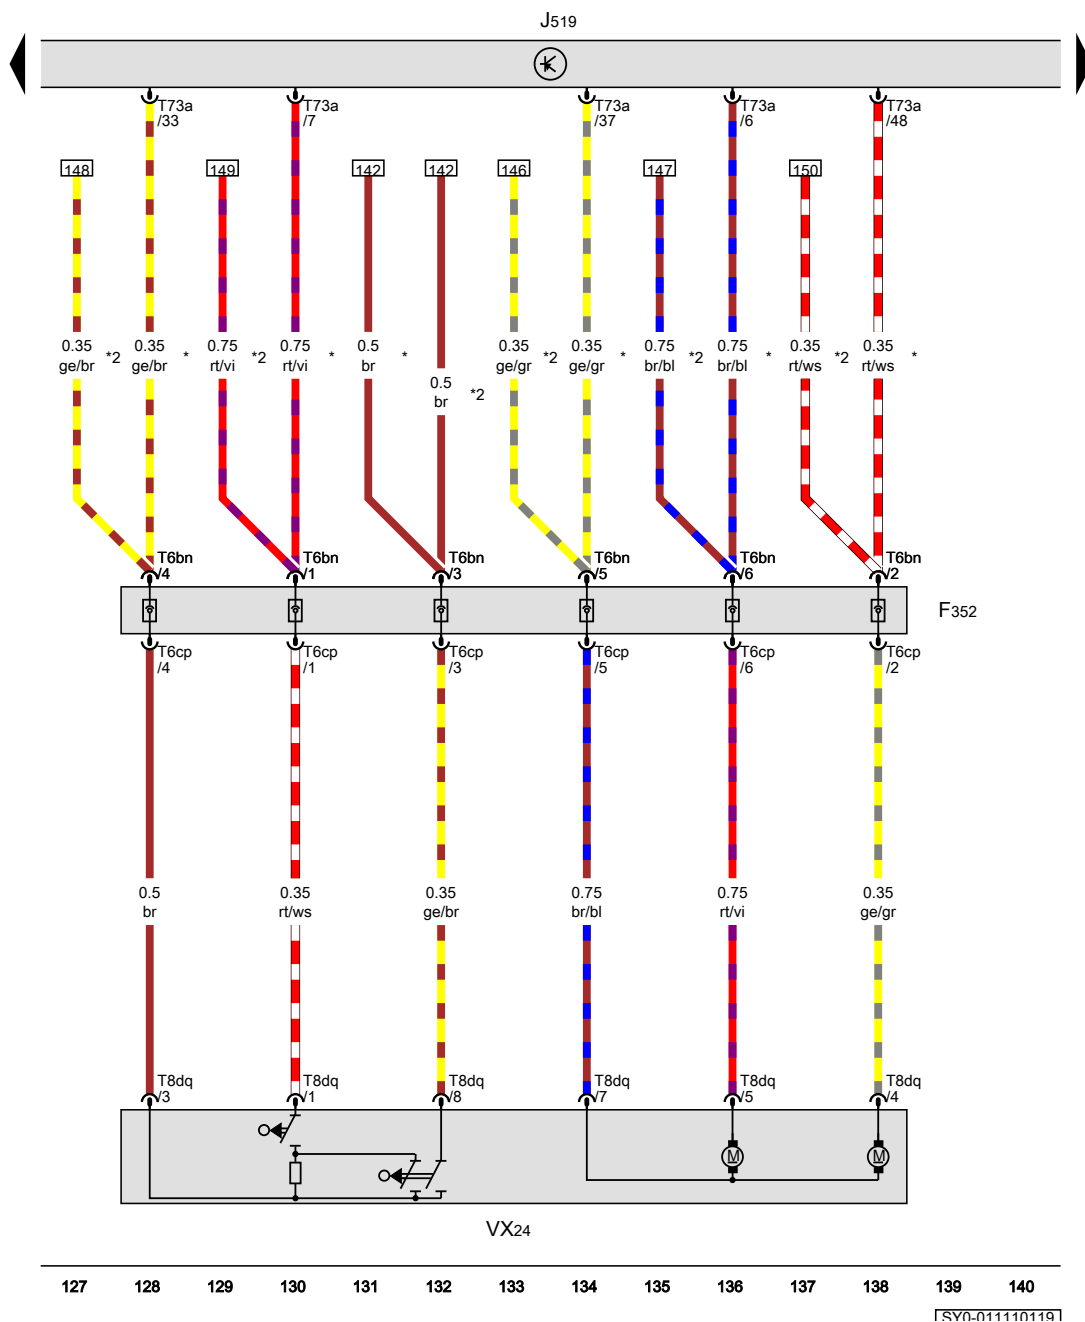


Rear right door control unit, Onboard supply control unit

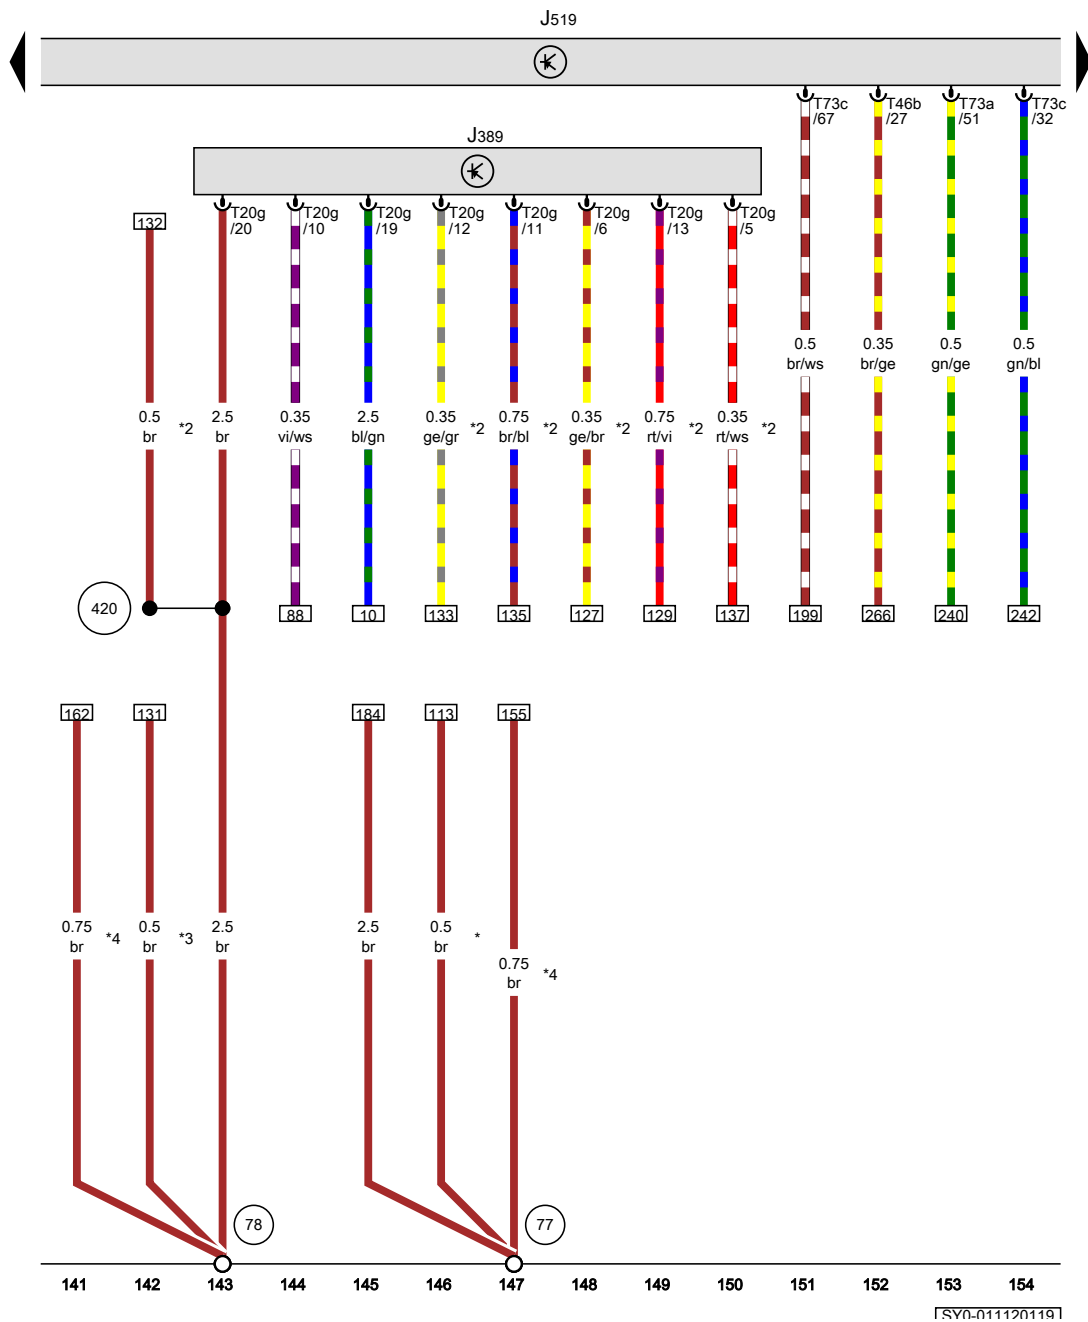


- J389 Rear right door control unit
- J519 Onboard supply control unit
- T20g 20-pin connector, black
- T46b 46-pin connector, black
- T73a 73-pin connector, black
- T73c 73-pin connector, black
- 77 Earth point, lower part of left B-pillar
- 78 Earth point, lower part of right B-pillar
- 420 Earth connection 1, in left sliding door wiring harness
- * For models with left sliding door
- *2 For models with left and right sliding doors
- *3 For models with right sliding door
- *4 For models with double cab

Onboard supply control unit, Rear left door lock unit, Rear right door lock unit

- J519 Onboard supply control unit
- T6bo 6-pin connector, black
- T6bp 6-pin connector, black
- T6cy 6-pin connector, black
- T8dy 8-pin connector, black
- T8dz 8-pin connector, black
- T73a 73-pin connector, black
- VX23 Rear left door lock unit
- VX24 Rear right door lock unit
- * For models with double cab

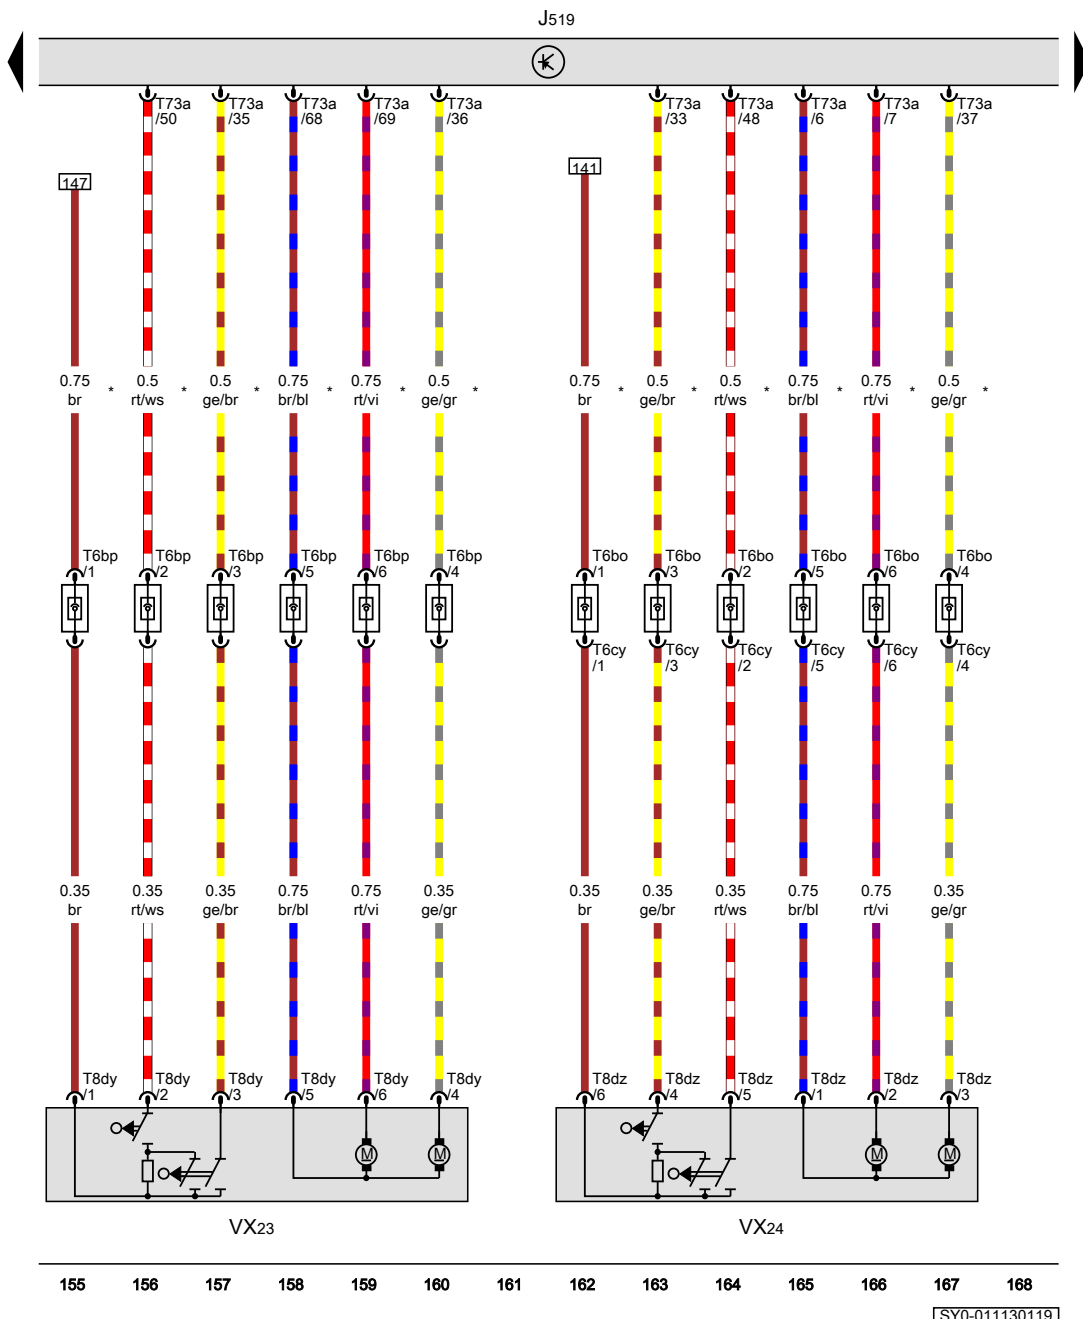

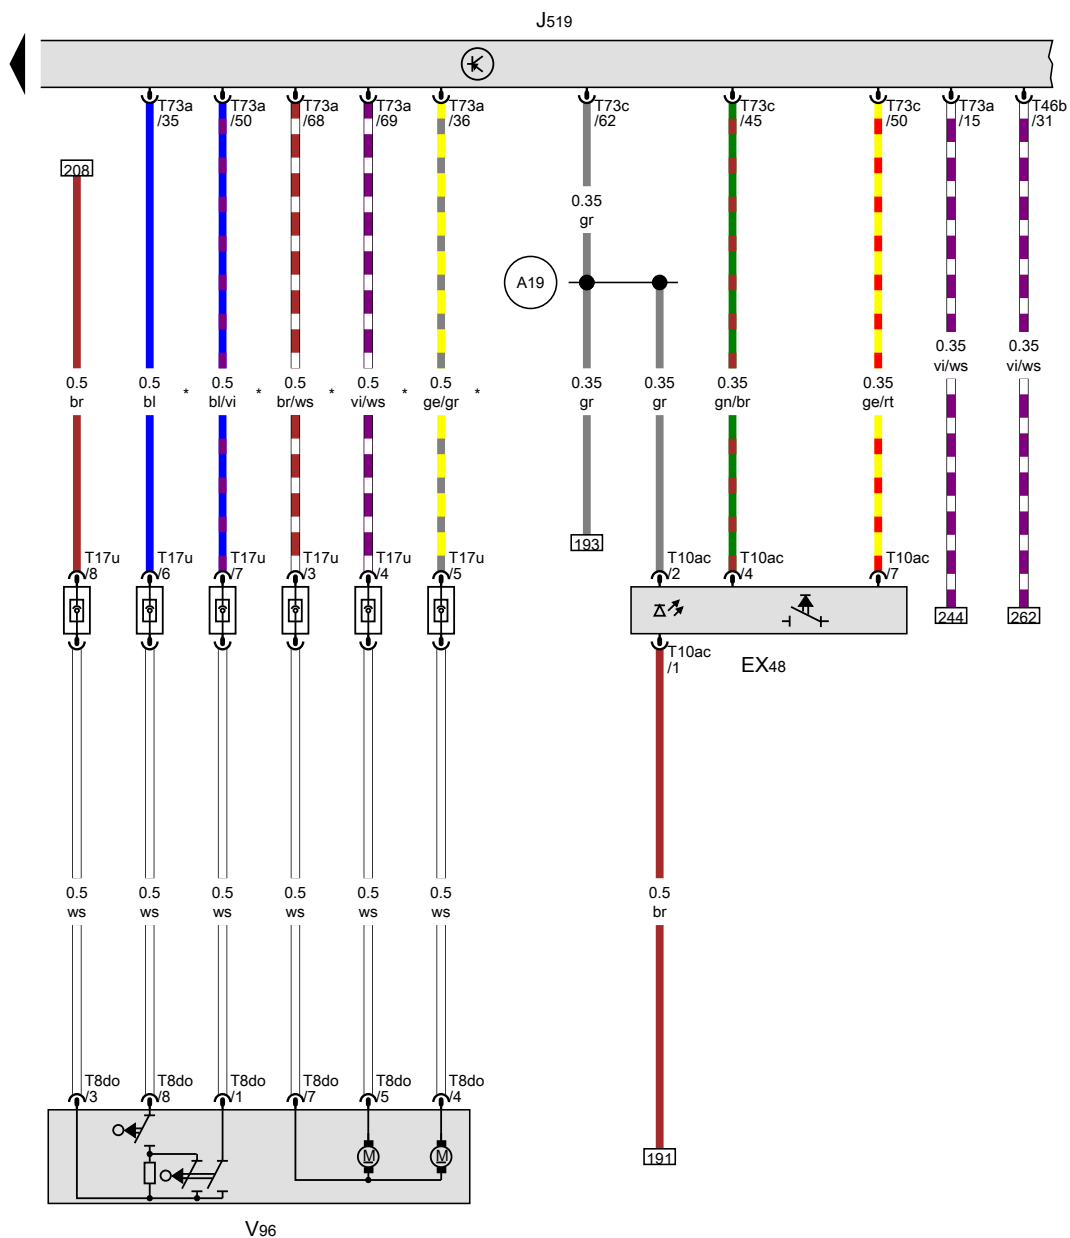

Centre switch module 3 in dash panel, Onboard supply control unit, Rear wing door central locking motor


- EX48 Centre switch module 3 in dash panel
- J519 Onboard supply control unit
- T8do 8-pin connector, black
- T10ac 10-pin connector, black
- T17u 17-pin connector, black
- T46b 46-pin connector, black
- T73a 73-pin connector, black
- T73c 73-pin connector, black
- V96 Rear wing door central locking motor

A19 Connection (58d), in dash panel wiring harness

* For models with wing doors

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

Centre switch module 4 in dash panel, Interior light switch, Interior light relay

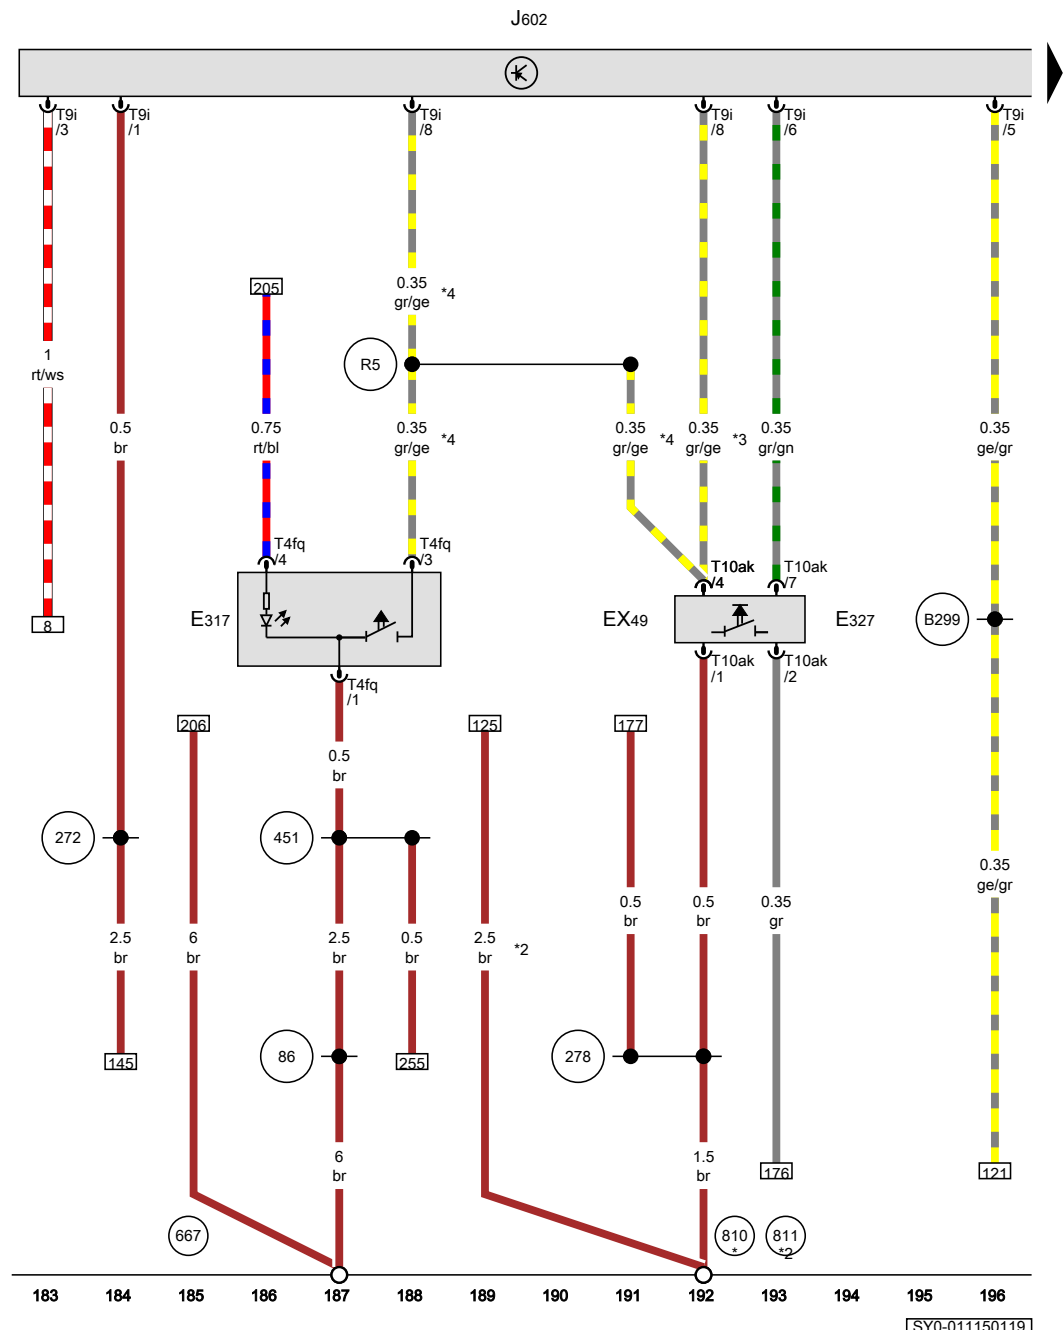


- EX49 Centre switch module 4 in dash panel
- E317 Interior light switch
- E327 Rear interior light button
- J602 Interior light relay
- T4fq 4-pin connector, black
- T9i 9-pin connector, grey
- T10ak 10-pin connector, black

- 86 Earth connection 1, in rear wiring harness
- 272 Earth connection 4, in front wiring harness
- 278 Earth connection 4, in interior wiring harness
- 451 Earth connection 1 in rear right side panel
- 667 Earth point, on rear left of roof
- 810 Earth point on central tube for dash panel, centre left
- 811 Earth point on central tube for dash panel, centre right
- B299 Positive connection 3 (30), in main wiring harness
- R5 Connection 2, in interior light wiring harness

- * For left-hand drive models
- *2 For right-hand drive models
- *3 For models with no LED interior lights
- *4 For models with LED interior lights

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

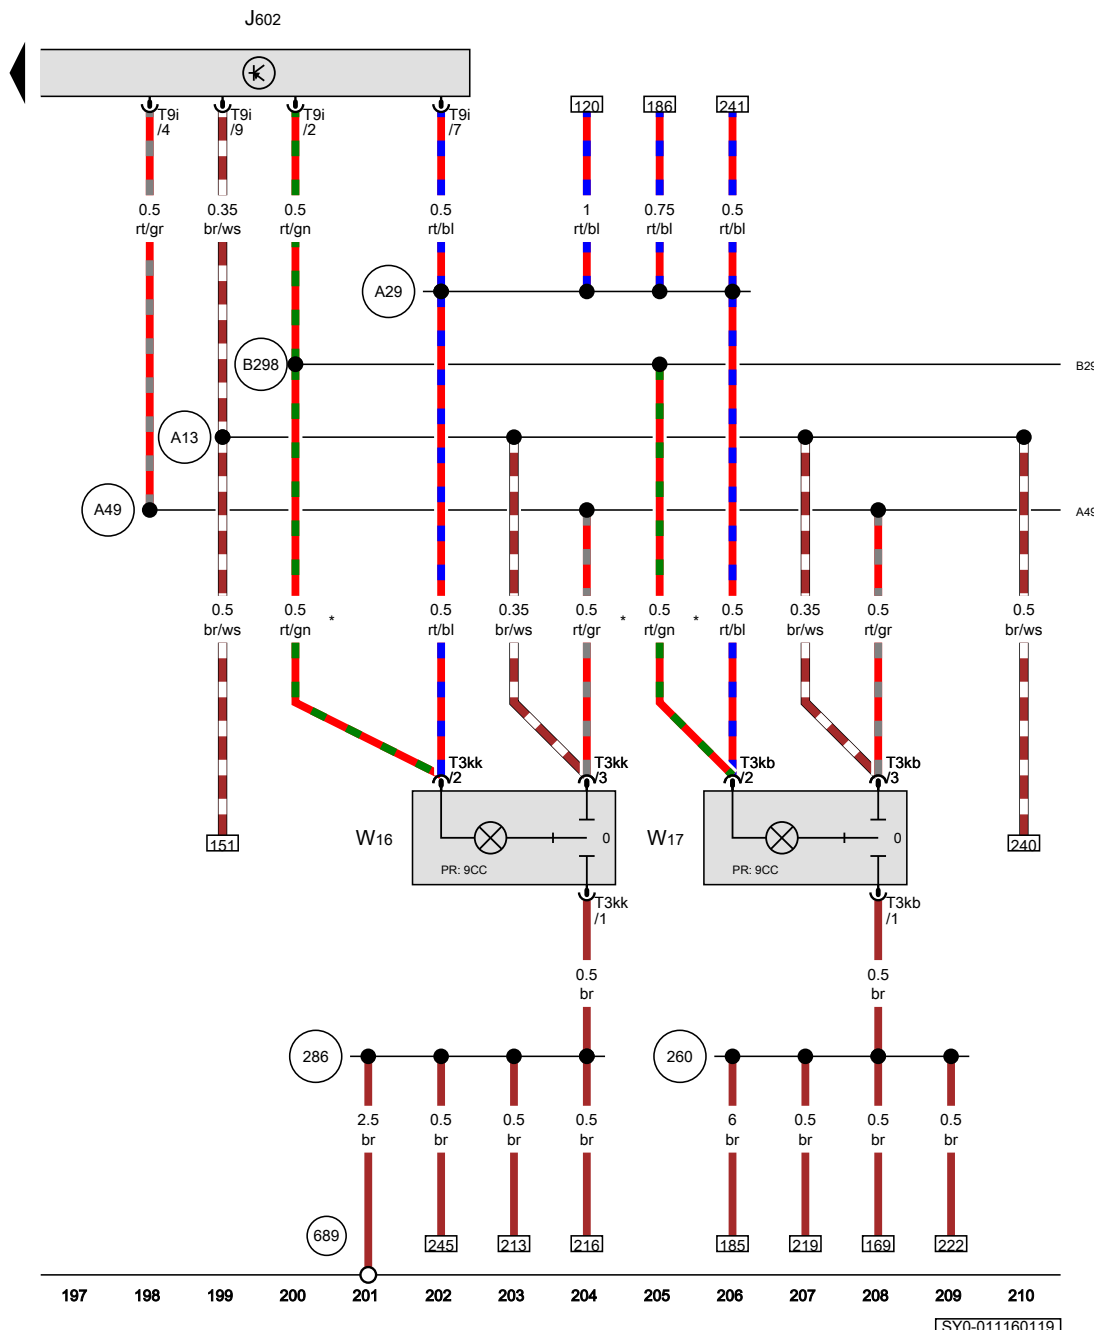

Interior light relay, Left interior light, Right interior light

J602 Interior light relay
T3kb 3-pin connector, black
T3kk 3-pin connector, black
T9i 9-pin connector, grey
W16 Left interior light
W17 Right interior light

- 260 Earth connection, in tail light cluster wiring harness
- 286 Earth connection 8, in interior wiring harness
- 689 Earth point, at front, central in roof
- A13 Connection (door contact switch), in dash panel wiring harness
- A29 Connection (interior light), in dash panel wiring harness
- A49 Connection 1, in dash panel wiring harness
- B298 Positive connection 2 (30), in main wiring harness

* For models with entry lights


ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink

Left interior light, Right interior light, Rear left interior light, Rear right interior light

T3km 3-pin connector, black
T3kn 3-pin connector, black
T3ko 3-pin connector, black
T3kp 3-pin connector, black
W16 Left interior light
W17 Right interior light
W47 Rear left interior light
W48 Rear right interior light

A49 Connection 1, in dash panel wiring harness

B298 Positive connection 2 (30), in main wiring harness

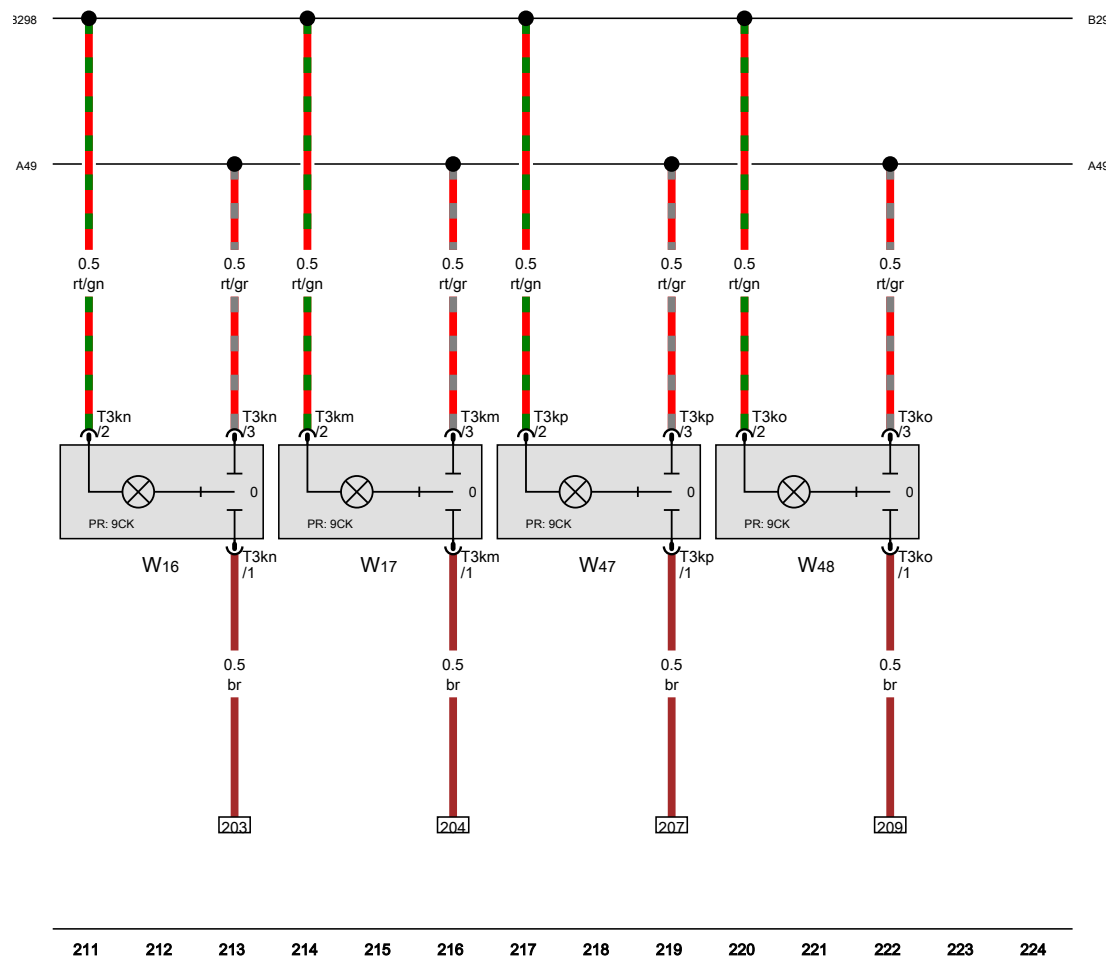

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink

Left interior light, Right interior light, Rear left interior light, Rear right interior light


- T2na 2-pin connector, black
- T3ld 3-pin connector, black
- T3lj 3-pin connector, black
- T3lp 3-pin connector, black
- T3lv 3-pin connector, black
- W16 Left interior light
- W17 Right interior light
- W47 Rear left interior light
- W48 Rear right interior light

A49 Connection 1, in dash panel wiring harness

B298 Positive connection 2 (30), in main wiring harness

* For models with load area lighting

*2 For models with LED interior lights

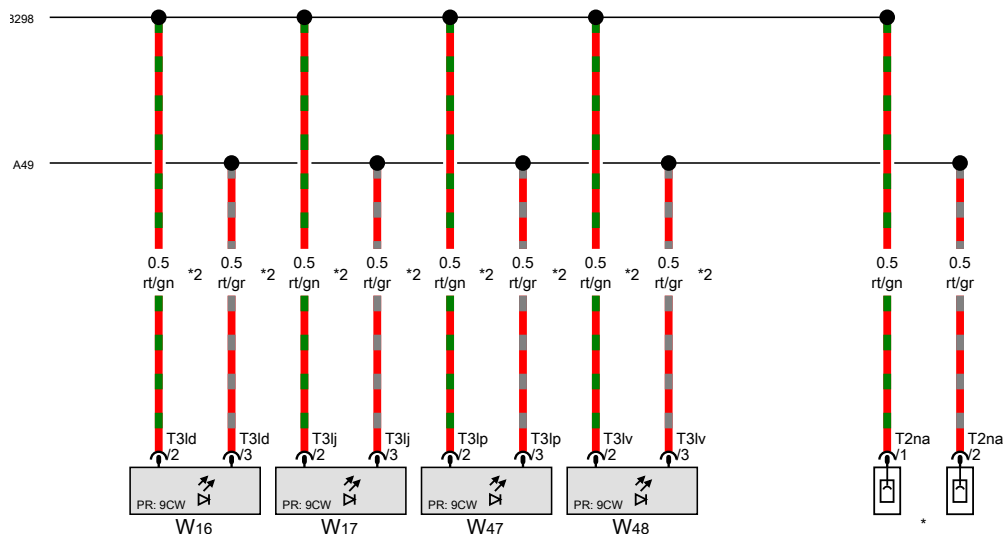

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

Interior monitoring switch, Interior monitoring sensor


- E183 Interior monitoring switch
- G170 Left ultrasonic sensor for anti-theft alarm system
- G171 Right ultrasonic sensor for anti-theft alarm system
- G209 Anti-theft alarm ultrasonic sensor
- G273 Interior monitoring sensor
- T4el 4-pin connector, black
- T4en 4-pin connector, black

B681 Positive connection 7 (30), in interior wiring harness


* For models with anti-theft alarm system and front and rear interior monitor

*2 Sheathed cable, black

*3 Sheathed cable, grey

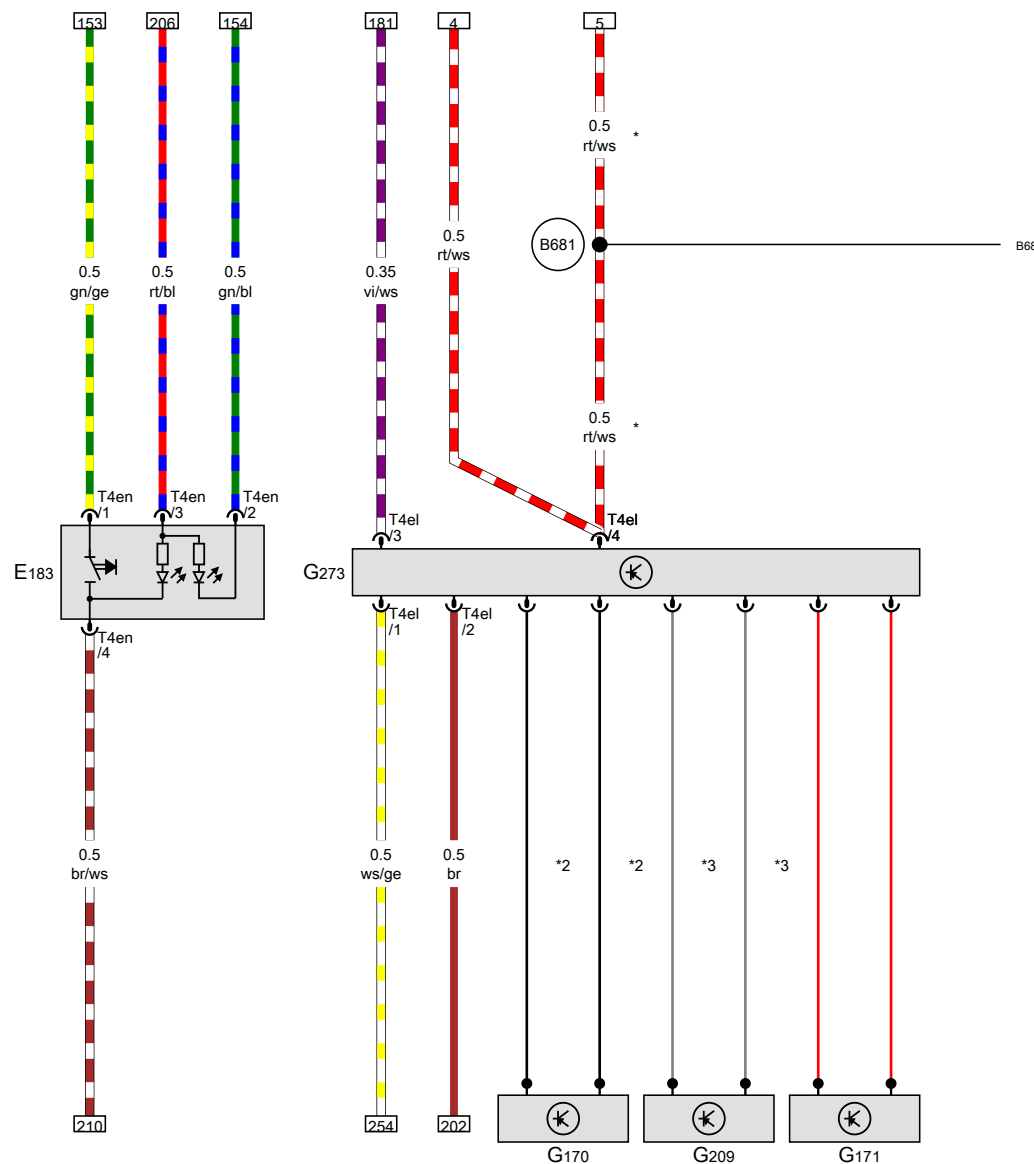

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

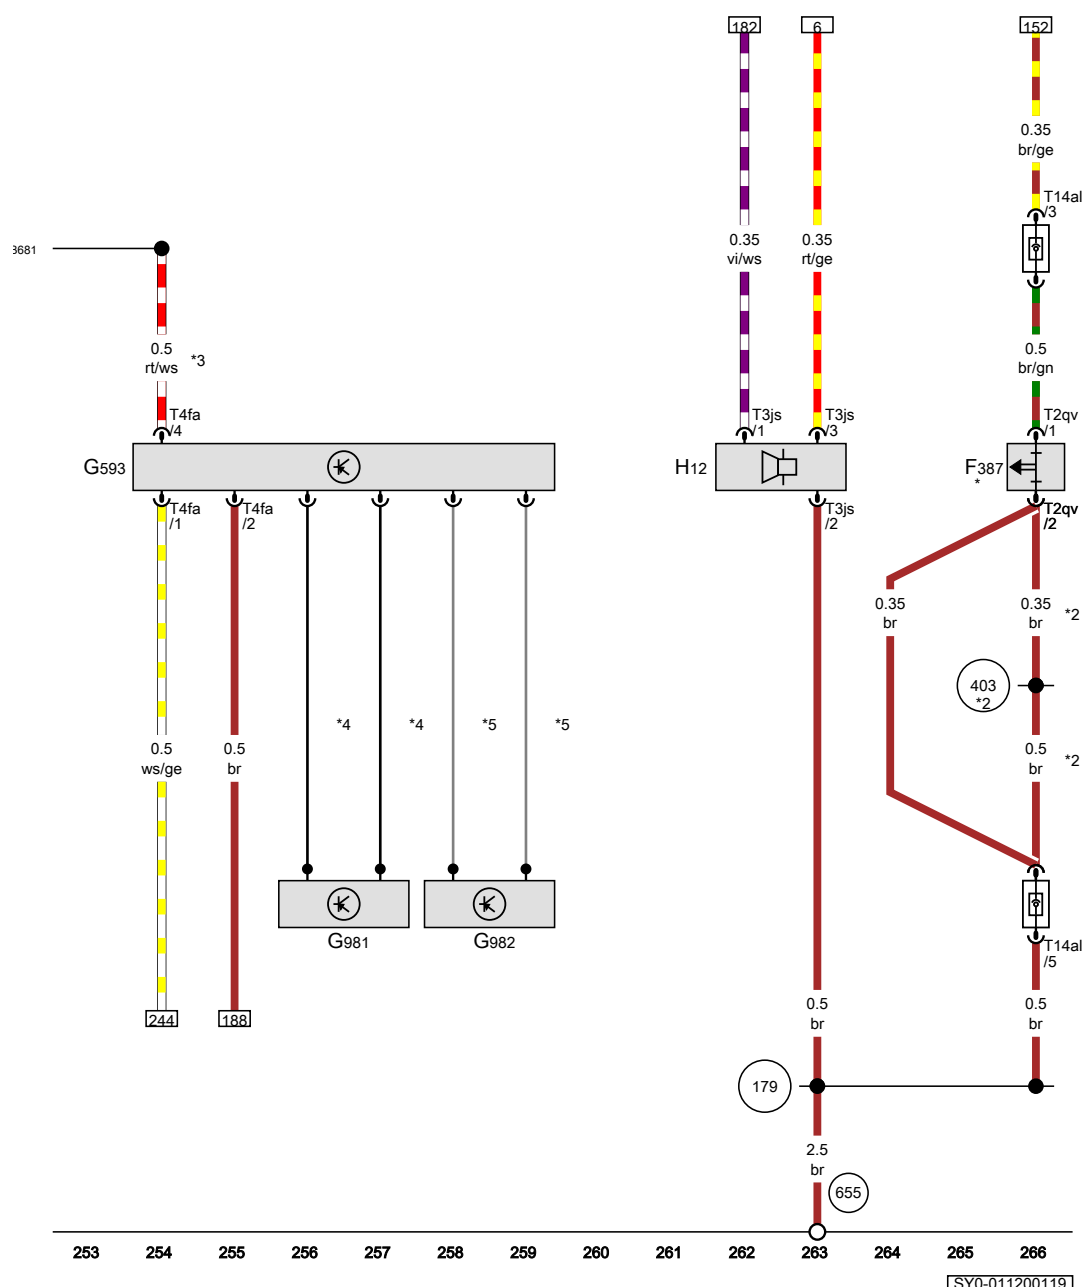

Bonnet contact switch, Interior monitoring sensor 3, Alarm horn

- F387 Bonnet contact switch
- G593 Interior monitoring sensor 3
- G981 Left ultrasonic sensor for passenger compartment monitoring system, rear
- G982 Right ultrasonic sensor for passenger compartment monitoring system, rear
- H12 Alarm horn
- T2qv 2-pin connector, black
- T3js 3-pin connector, black
- T4fa 4-pin connector, black
- T14al 14-pin connector, grey

- 179 Earth connection, in left headlight wiring harness
- 403 Earth connection, in front end wiring harness
- 655 Earth point, on left headlight
- B681 Positive connection 7 (30), in interior wiring harness
- * Pre-wired component
- *2 For models with BlueMotion equipment
- *3 For models with anti-theft alarm system and front and rear interior monitor
- *4 Sheathed cable, black
- *5 Sheathed cable, grey

Data bus diagnostic interface

J533 Data bus diagnostic interface

T20h 20-pin connector, red

249 Earth connection 2, in interior wiring harness

382 Earth connection 17, in main wiring harness


A146 Connection (convenience CAN bus, high), in dash panel wiring harness

A147 Connection (convenience CAN bus, low), in dash panel wiring harness

A164 Positive connection 2 (30a) in dash panel wiring harness

* For left-hand drive models

*2 For right-hand drive models

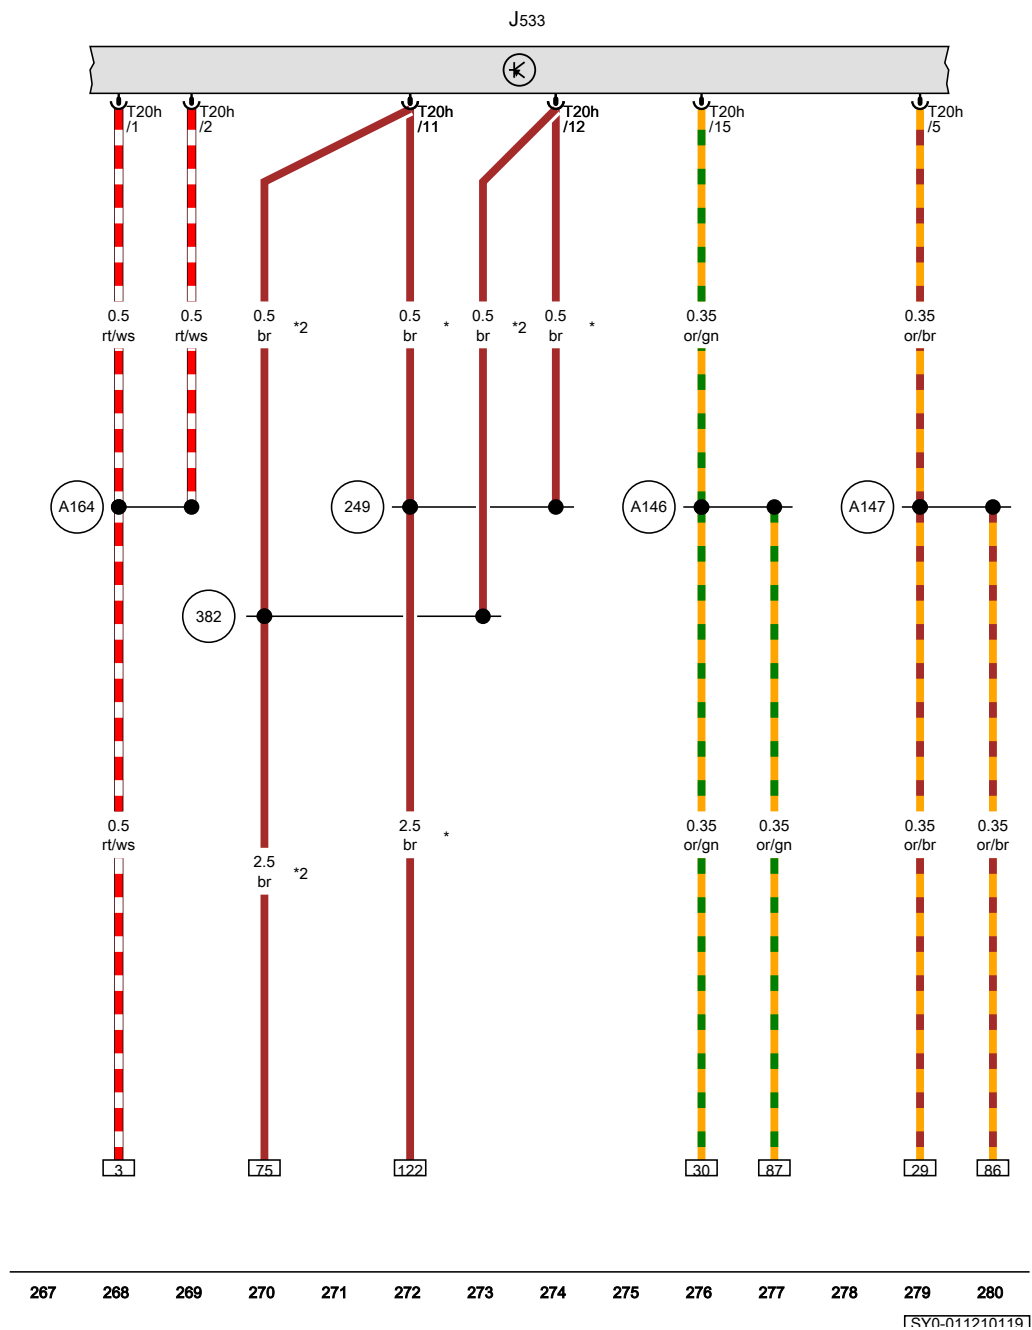

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

Anti-lock brake system (ABS) with electronic stabilisation program (ESP)


From September 2016


Vacuum sender, ABS control unit, Fuse holder B, Fuse holder C

- G608 Vacuum sender
- J104 ABS control unit
- SB Fuse holder B
- SB29 Fuse 29 on fuse holder B
- SB31 Fuse 31 on fuse holder B
- SC Fuse holder C
- SC3 Fuse 3 on fuse holder C
- SB24 Fuse 24 on fuse holder B
- SC27 Fuse 27 on fuse holder C
- SB52 Fuse 52 on fuse holder B
- T3jw 3-pin connector, black
- T38b 38-pin connector, brown

A23 Connection (30al), in dash panel wiring harness


- * According to equipment
- *2 Up to May 2017
- *3 From May 2017

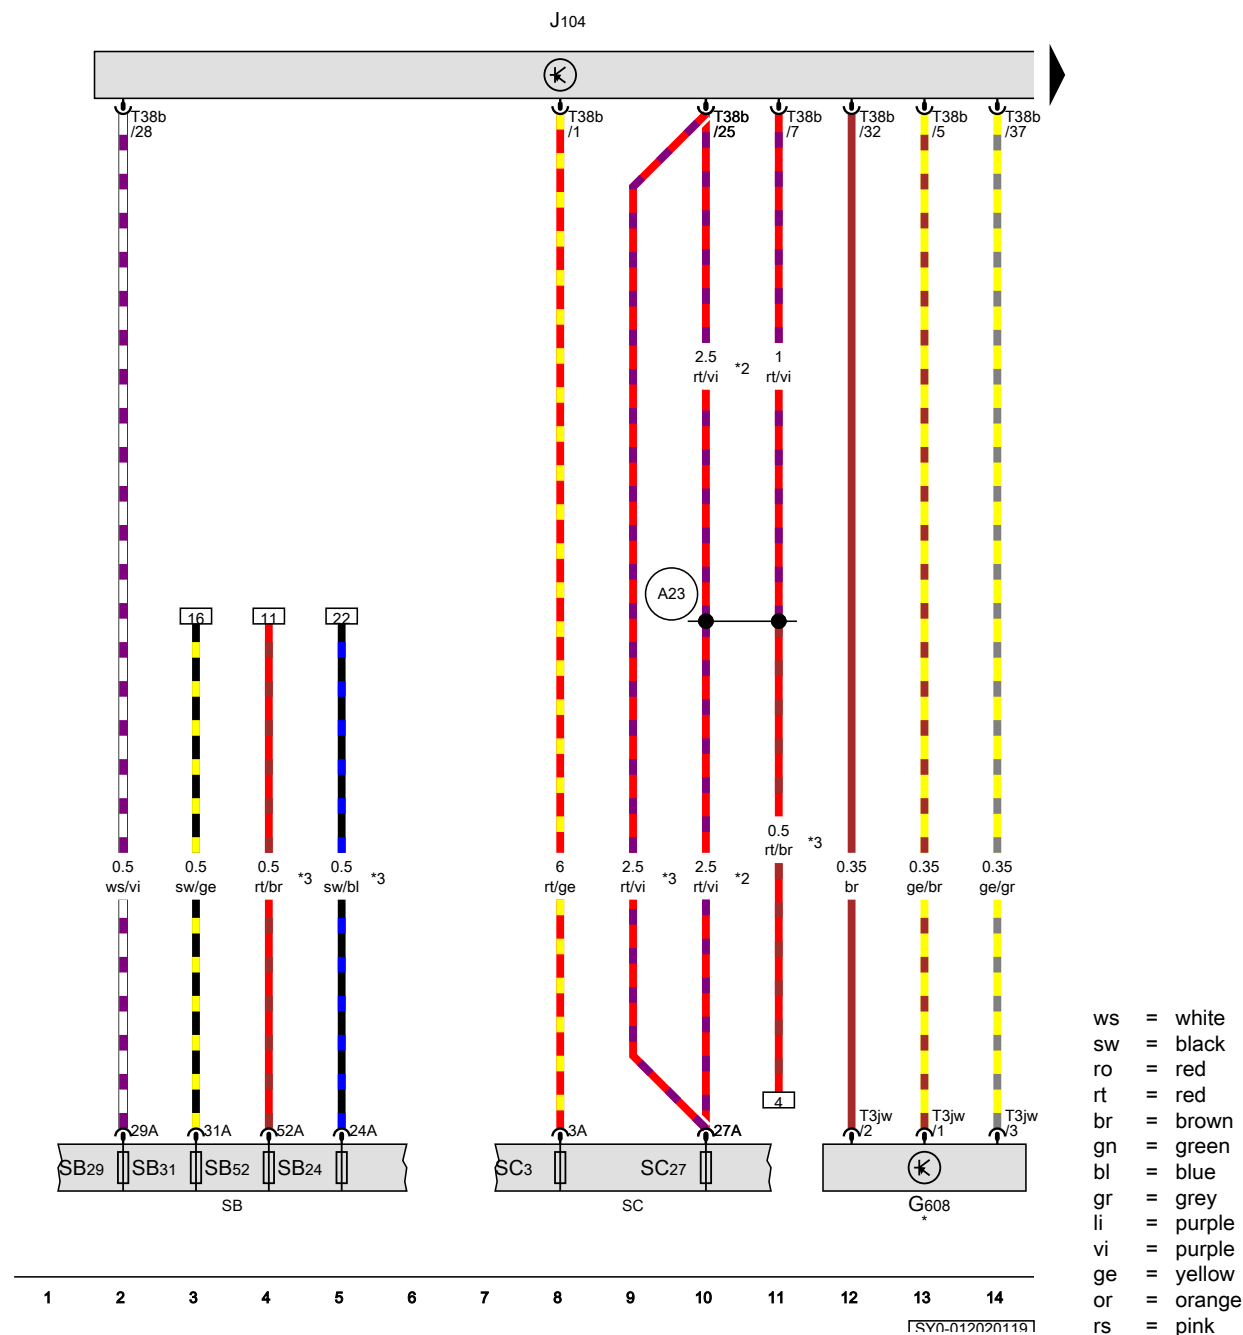

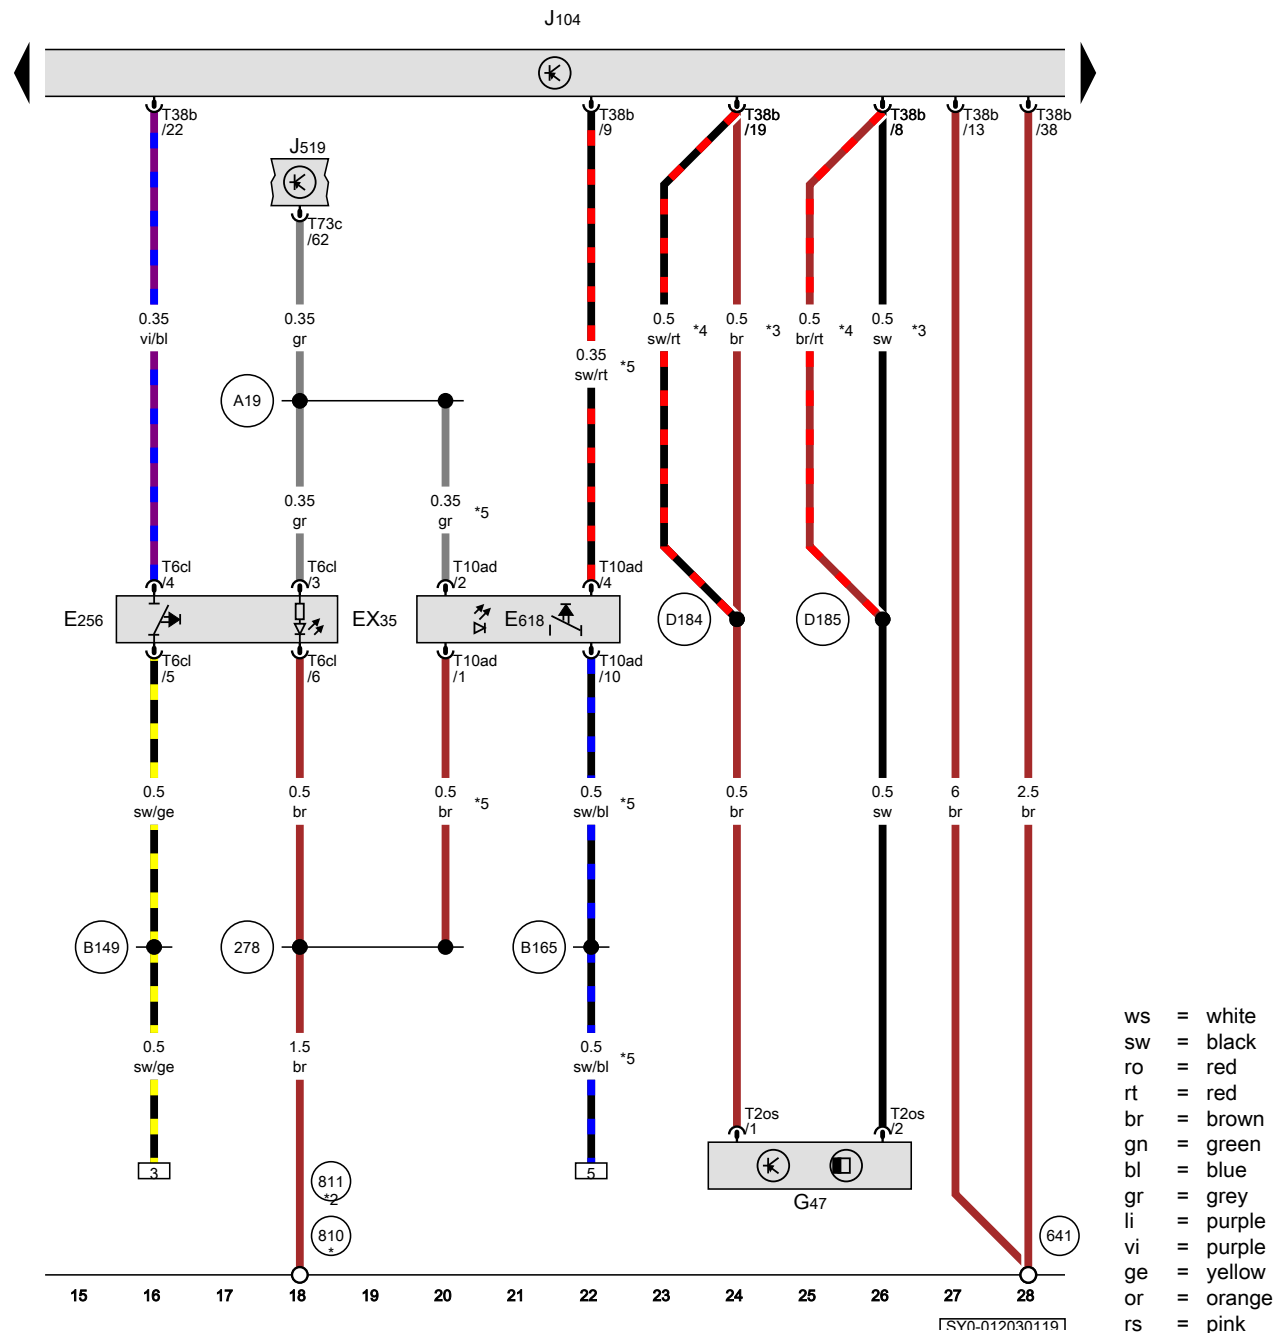

Centre switch module 2 in dash panel, Button for TCS and electronic stabilisation program, Front left speed sensor, ABS control unit

- EX35 Centre switch module 2 in dash panel
- E256 Button for TCS and electronic stabilisation program
- E618 Hill descent control button
- G47 Front left speed sensor
- J104 ABS control unit
- J519 Onboard supply control unit
- T2os 2-pin connector, black
- T6cl 6-pin connector, blue
- T10ad 10-pin connector, black
- T38b 38-pin connector, brown
- T73c 73-pin connector, black
- 278 Earth connection 4, in interior wiring harness
- 641 Earth point 3, left in engine compartment
- 810 Earth point on central tube for dash panel, centre left
- 811 Earth point on central tube for dash panel, centre right
- A19 Connection (58d), in dash panel wiring harness
- B149 Positive connection 2 (15a), in interior wiring harness
- B165 Positive connection 2 (15), in interior wiring harness
- D184 Connection (front left speed sensor +), in engine compartment wiring harness
- D185 Connection (front left speed sensor -), in engine compartment wiring harness
- * For left-hand drive models
- *2 For right-hand drive models
- *3 Up to November 2017
- *4 From November 2017
- *5 From May 2017

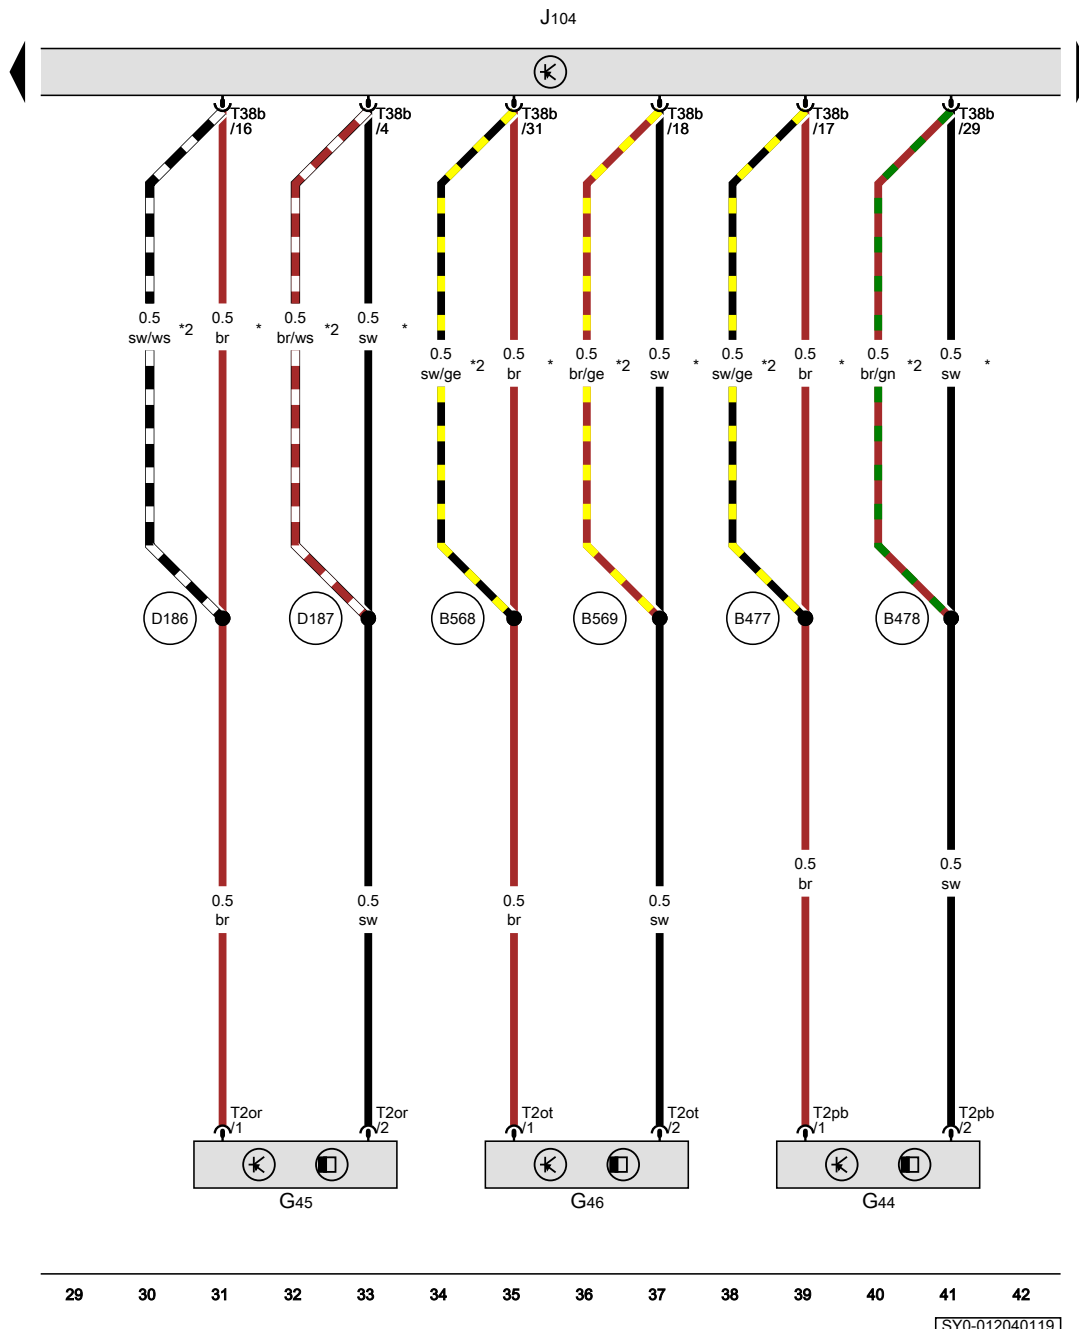

Rear right speed sensor, Front right speed sensor, Rear left speed sensor, ABS control unit

- G44 Rear right speed sensor
- G45 Front right speed sensor
- G46 Rear left speed sensor
- J104 ABS control unit
- T2or 2-pin connector, black
- T2ot 2-pin connector, black
- T2pb 2-pin connector, black
- T38b 38-pin connector, brown

B477 Connection 13, in main wiring harness

B478 Connection 14, in main wiring harness

B568 Connection 35, in main wiring harness


B569 Connection 36, in main wiring harness

D186 Connection (front right speed sensor +), in engine compartment wiring harness

D187 Connection (front right speed sensor -), in engine compartment wiring harness

* Up to November 2017

*2 From November 2017

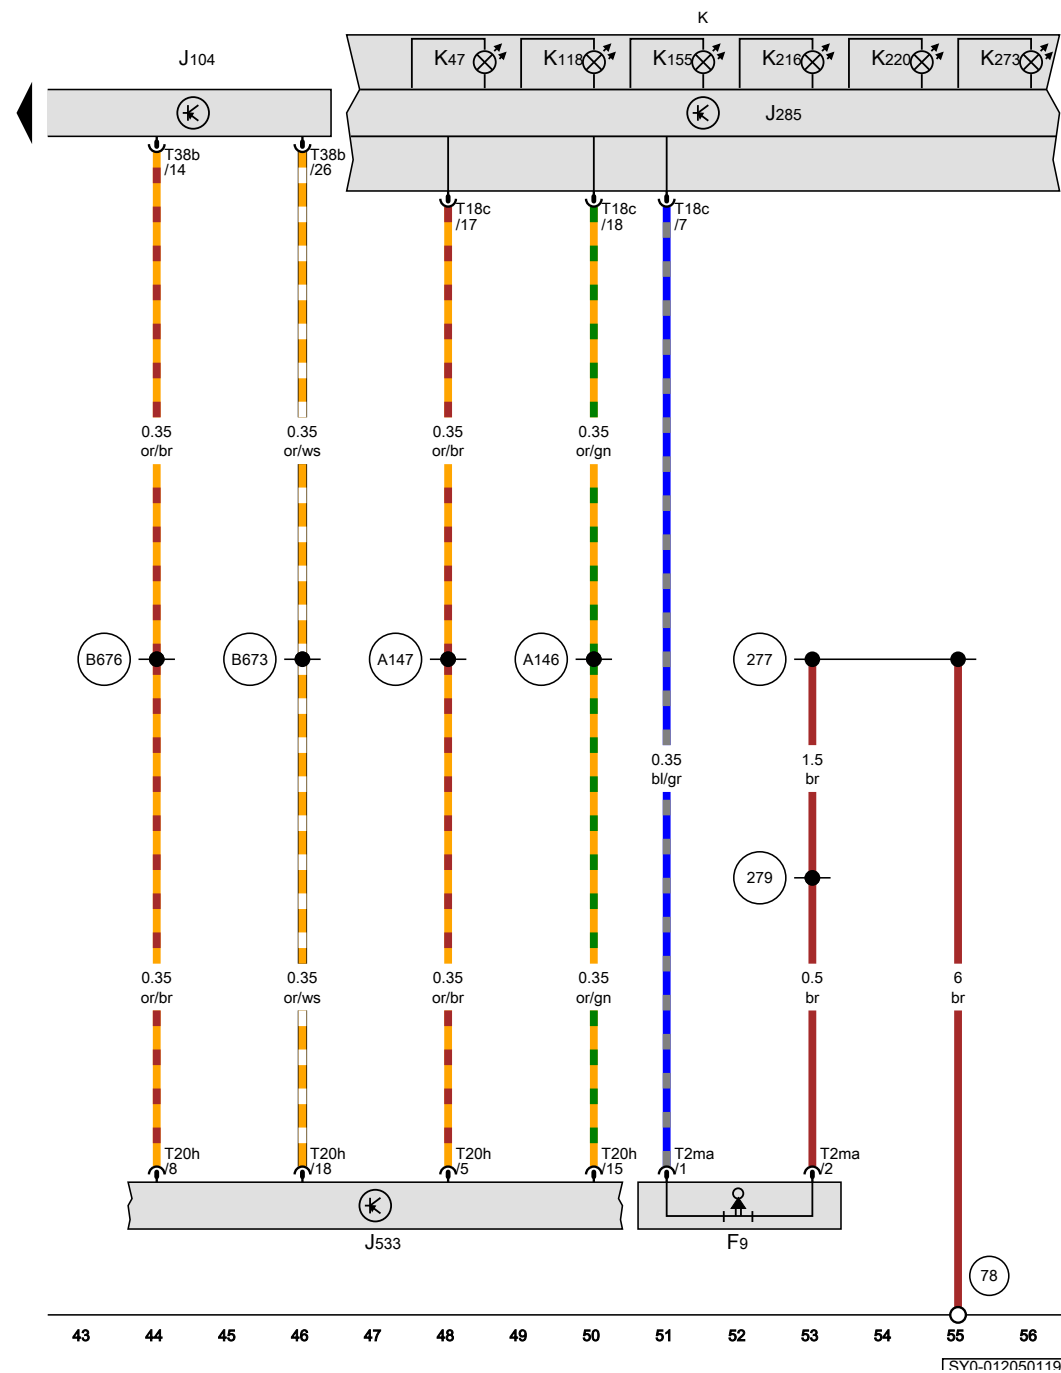

Handbrake warning switch, ABS control unit, Dash panel insert

- F9 Handbrake warning switch
- J104 ABS control unit
- J285 Control unit in dash panel insert
- J533 Data bus diagnostic interface
- K Dash panel insert
- K47 ABS warning lamp
- K118 Brake system warning lamp
- K155 Warning lamp for electronic stabilisation program and TCS
- K216 Warning lamp 2 for electronic stabilisation program and TCS
- K220 Tyre Pressure Loss Indicator warning lamp
- K273 Brake prompt warning lamp
- T2ma 2-pin connector, black
- T18c 18-pin connector, black
- T20h 20-pin connector, red
- T38b 38-pin connector, brown
- 78 Earth point, lower part of right B-pillar
- 277 Earth connection 3, in interior wiring harness
- 279 Earth connection 5, in interior wiring harness
- A146 Connection (convenience CAN bus, high), in dash panel wiring harness
- A147 Connection (convenience CAN bus, low), in dash panel wiring harness
- B673 Connection 2 (running gear/dash panel insert CAN bus, high), in main wiring harness
- B676 Connection 1 (running gear/dash panel insert CAN bus, low), in main wiring harness

Airbag systems

From September 2016

Airbag control unit, Warning lamp for airbag deactivated on front passenger side, Fuse holder B

- J234 Airbag control unit
 J949 Emergency call module control unit and communication unit
 K145 Warning lamp for airbag deactivated on front passenger side
 SB Fuse holder B
 SB34 Fuse 34 on fuse holder B
 T4em 4-pin connector, black
 T16b 16-pin connector
 T26d 26-pin connector, black
 T90f 90-pin connector, yellow
 U31 Diagnostic connection


A237 Connection 1 (powertrain CAN bus, low), in dash panel wiring harness


B383 Connection 1 (powertrain CAN bus, high), in main wiring harness

T1 Positive connection 1, in airbag wiring harness

* For models with key-operated switch to deactivate front passenger airbag

*2 For models with emergency call module

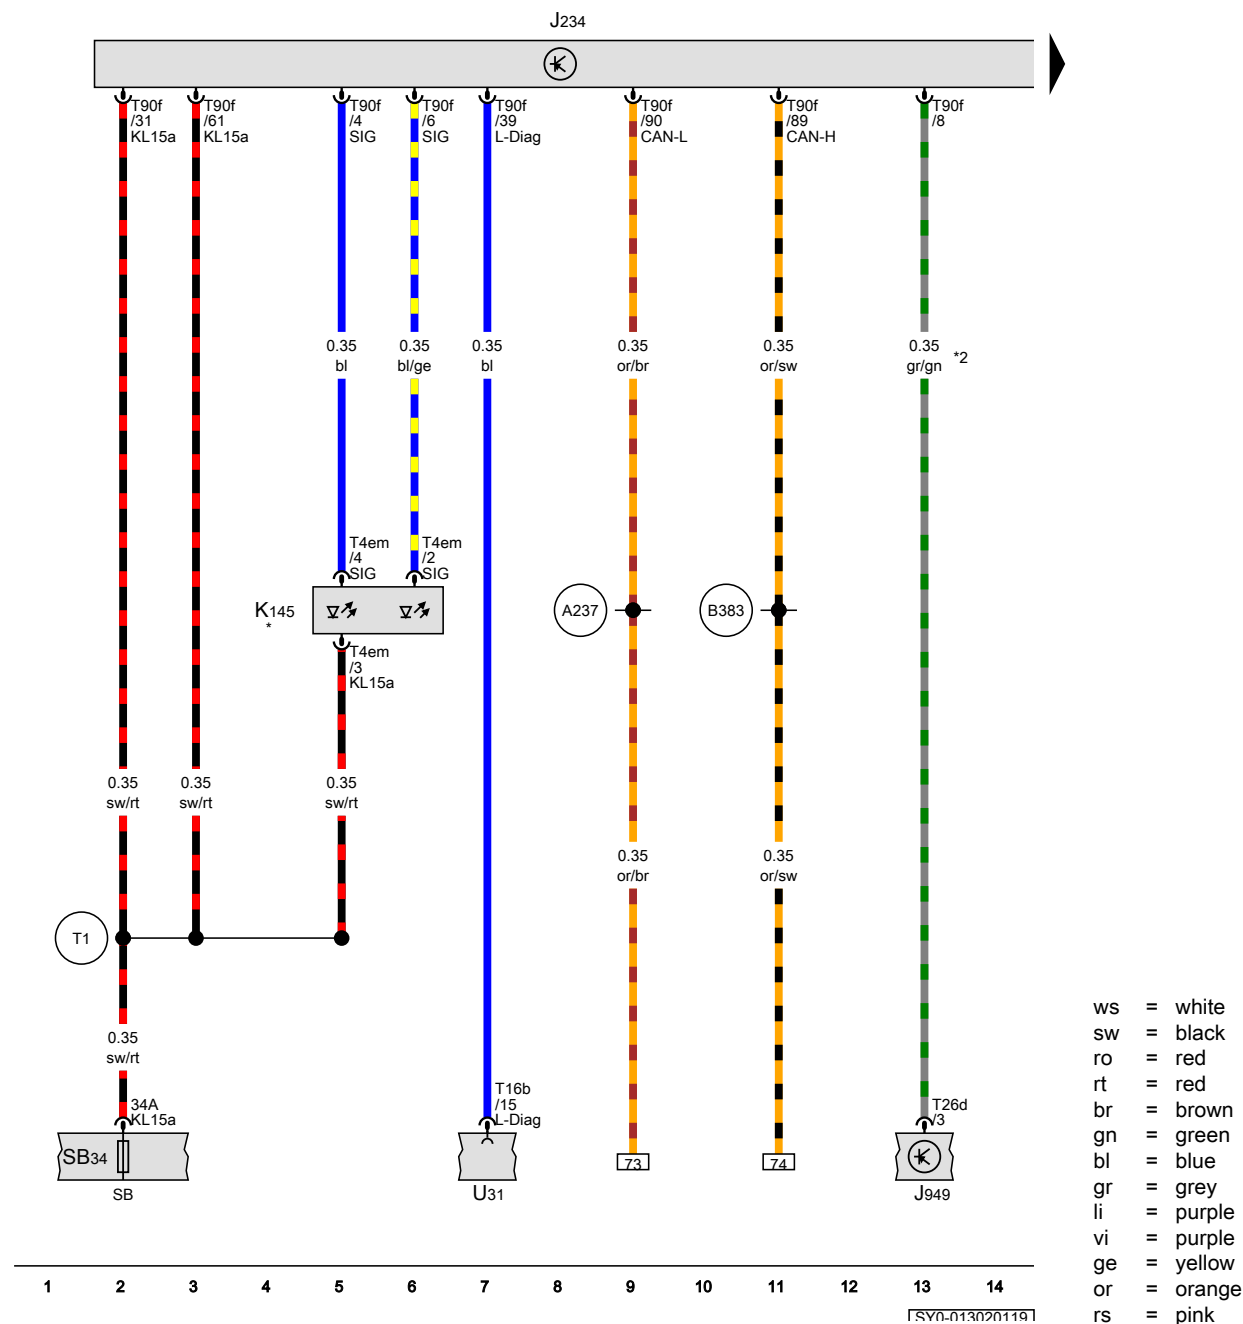

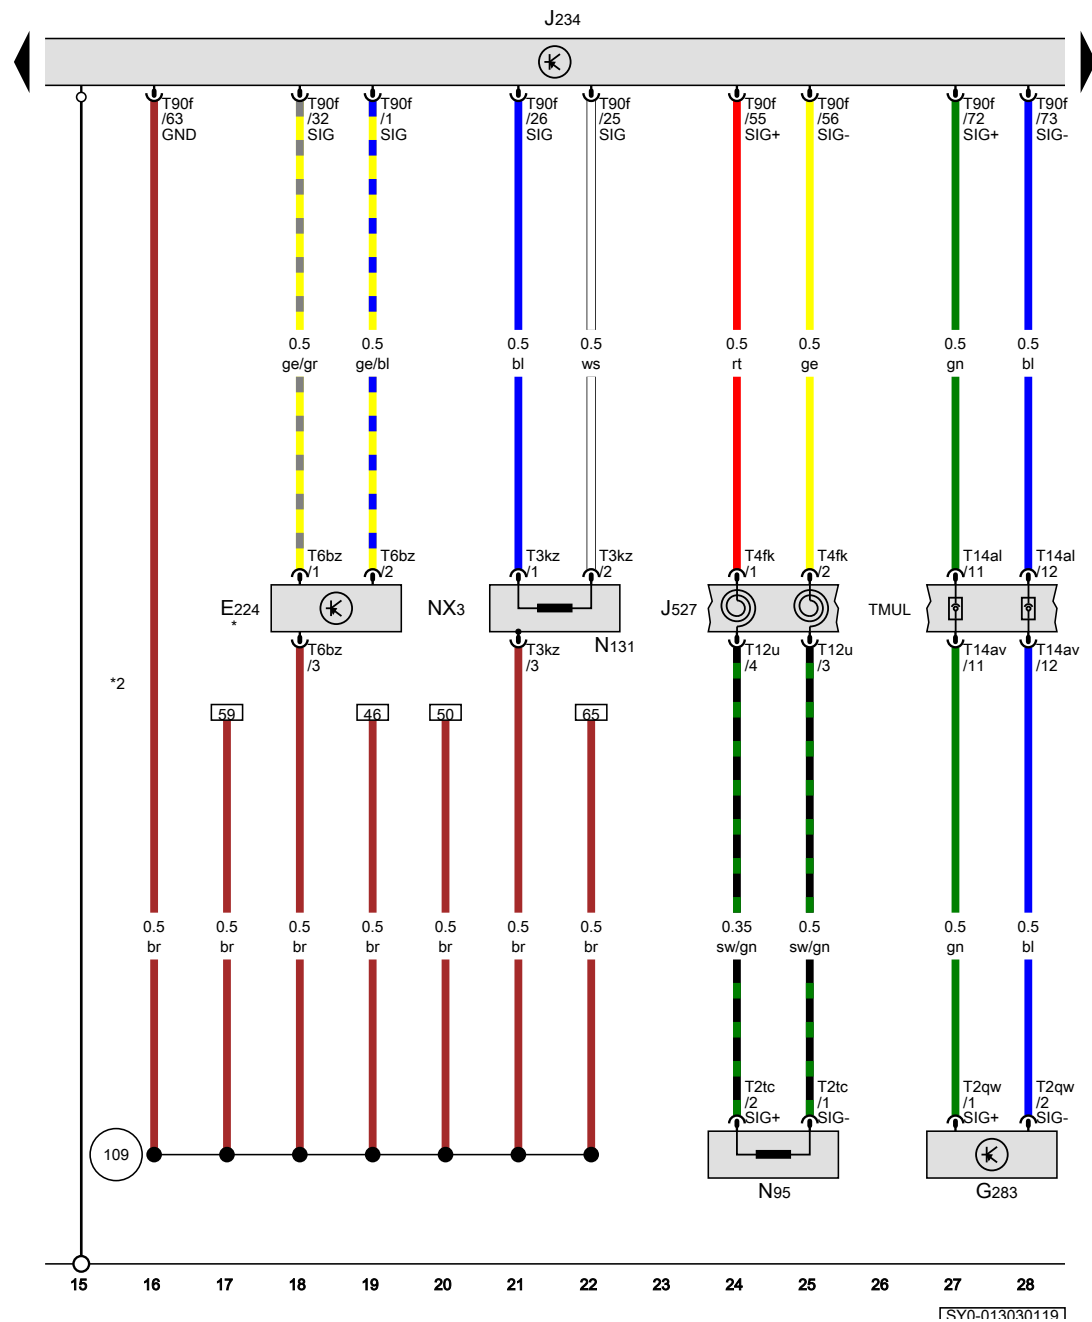

Key operated switch to deactivate airbag on front passenger side, Front airbag crash sensor for driver side, Airbag control unit, Front passenger airbag unit, Airbag igniter on driver side


- E224 Key operated switch to deactivate airbag on front passenger side
- G283 Front airbag crash sensor for driver side
- J234 Airbag control unit
- J527 Steering column electronics control unit
- NX3 Front passenger airbag unit
- N95 Airbag igniter on driver side
- N131 Airbag igniter 1 on front passenger side
- T2qw 2-pin connector, yellow
- T2tc 2-pin connector
- T3kz 3-pin connector
- T4fk 4-pin connector, yellow
- T6bz 6-pin connector, yellow
- T12u 12-pin connector
- T14al 14-pin connector, grey
- T14av 14-pin connector, grey
- T90f 90-pin connector, yellow
- TMUL Coupling point on engine, bottom left

109 Earth connection, in airbag wiring harness

* For models with key-operated switch to deactivate front passenger airbag


*2 Earth supply via housing

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

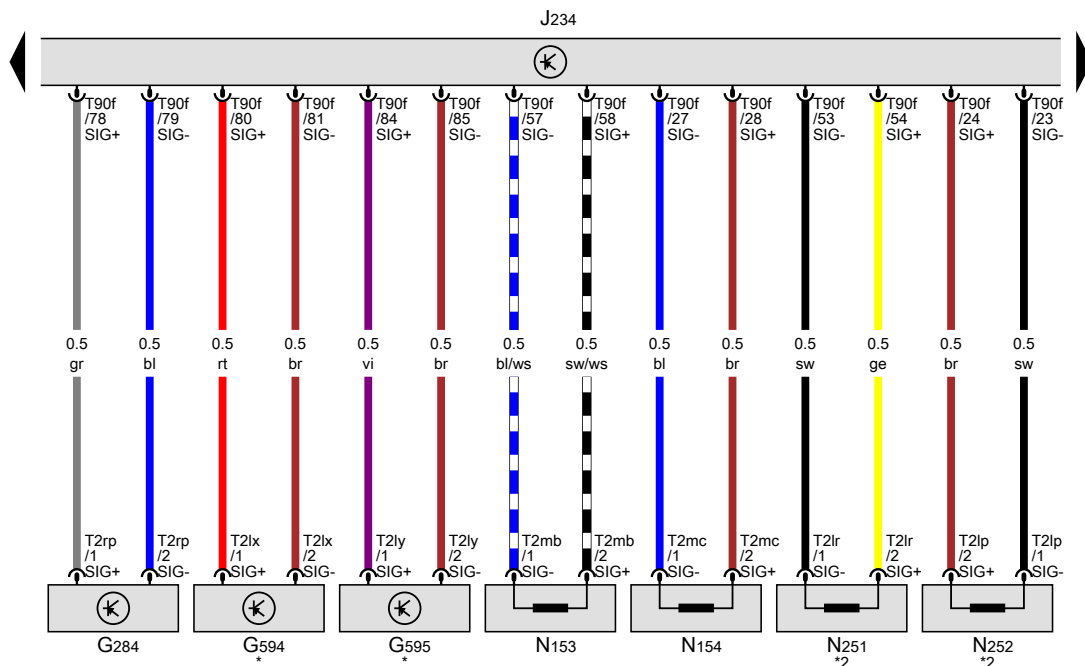

Front airbag crash sensor for front passenger side, Crash sensor for head and side airbags on driver side, Crash sensor for head and side airbags on front passenger side, Airbag control unit, Driver seat belt tensioner igniter 1, Front passenger seat belt tensioner igniter 1, Driver side curtain airbag igniter, Front passenger side curtain airbag igniter

- G284 Front airbag crash sensor for front passenger side
- G594 Crash sensor for head and side airbags on driver side
- G595 Crash sensor for head and side airbags on front passenger side
- J234 Airbag control unit
- N153 Driver seat belt tensioner igniter 1
- N154 Front passenger seat belt tensioner igniter 1
- N251 Driver side curtain airbag igniter
- N252 Front passenger side curtain airbag igniter
- T2lp 2-pin connector, yellow
- T2lr 2-pin connector, yellow
- T2lx 2-pin connector, yellow
- T2ly 2-pin connector, yellow
- T2mb 2-pin connector, yellow
- T2mc 2-pin connector, yellow
- T2rp 2-pin connector, yellow
- T90f 90-pin connector, yellow
- * For models with front side airbags and curtain/head airbags
- *2 For models with curtain airbag

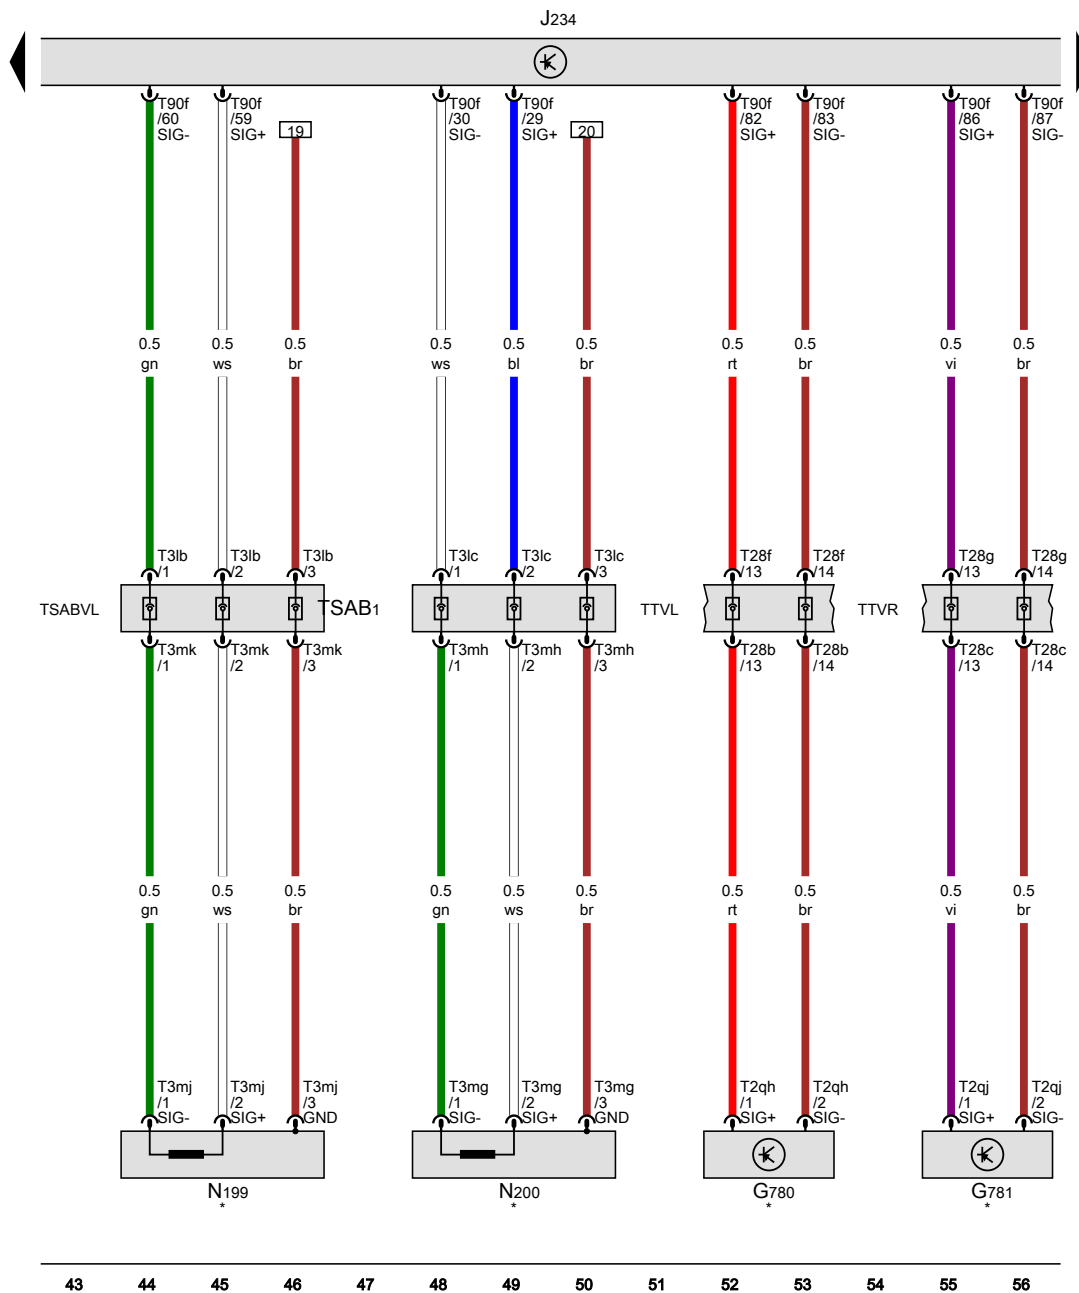


Side airbag pressure sensor on driver side, Side airbag pressure sensor on front passenger side, Airbag control unit, Side airbag igniter on driver side, Side airbag igniter on front passenger side

- G780 Side airbag pressure sensor on driver side
- G781 Side airbag pressure sensor on front passenger side
- J234 Airbag control unit
- N199 Side airbag igniter on driver side
- N200 Side airbag igniter on front passenger side
- T2qh 2-pin connector, yellow
- T2qj 2-pin connector, yellow
- T3lb 3-pin connector, yellow
- T3lc 3-pin connector, yellow
- T3mg 3-pin connector
- T3mh 3-pin connector, yellow
- T3mj 3-pin connector
- T3mk 3-pin connector, yellow
- T28b 28-pin connector, black
- T28c 28-pin connector, black
- T28f 28-pin connector, black
- T28g 28-pin connector, black
- T90f 90-pin connector, yellow
- TSAB1 Coupling point for front side airbag on passenger side
- TSABVL Coupling point for front left side airbag
- TTVL Coupling point for front left door
- TTVR Coupling point for front right door
- * For models with side airbags


- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

[SYN-013050119]

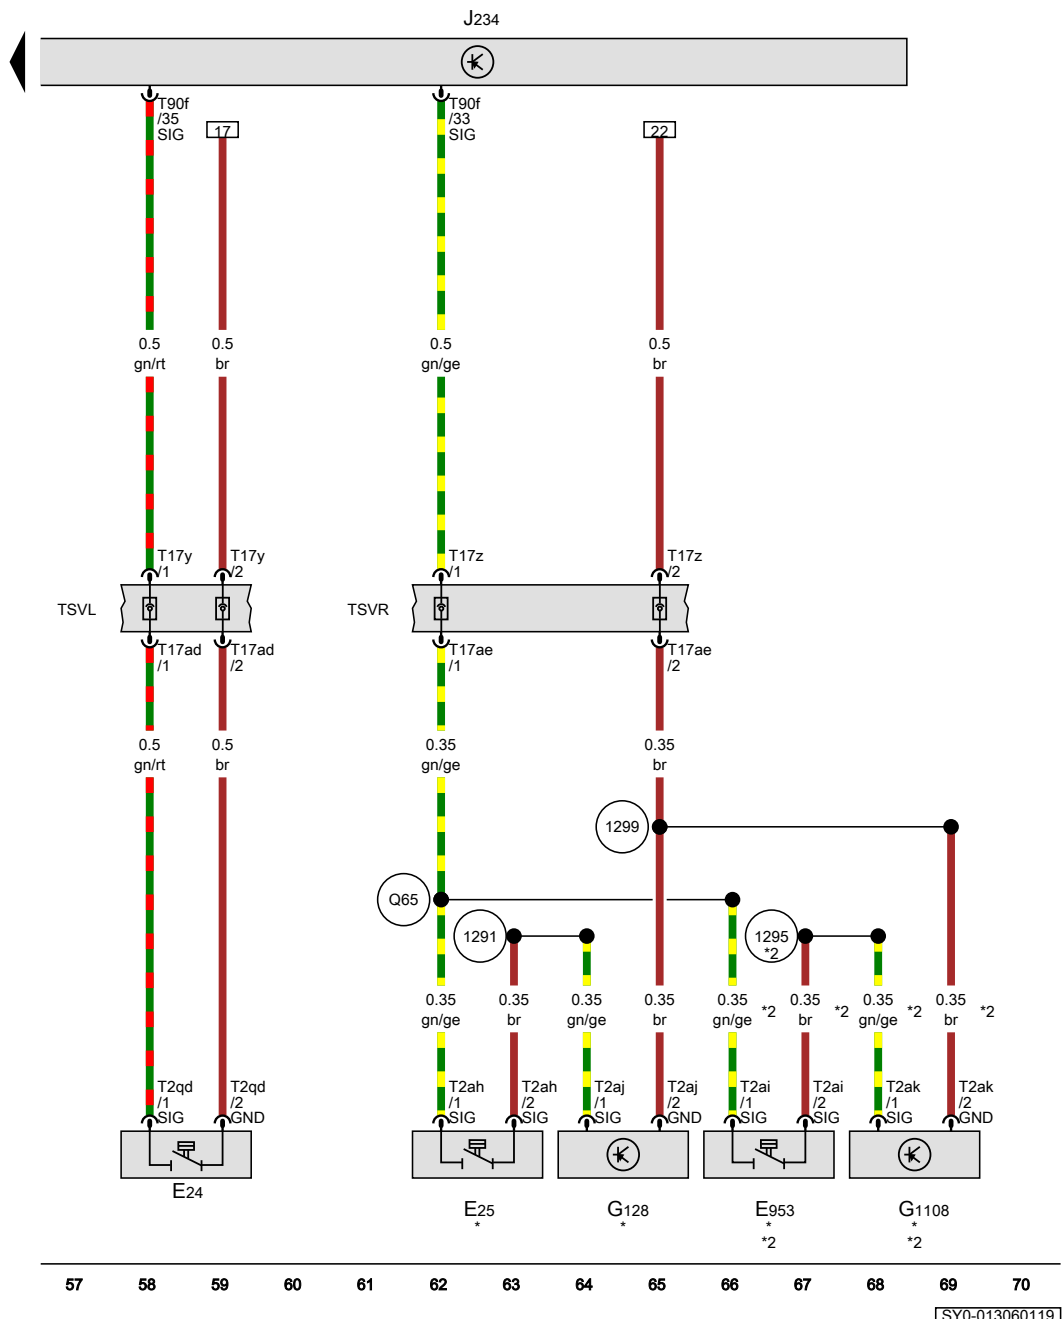

Driver side belt switch, Front passenger side belt switch, Belt switch for seat row 1, middle, Seat occupied sensor, front passenger side, Centre seat occupied sensor, seat row 1, Airbag control unit

- E24 Driver side belt switch
- E25 Front passenger side belt switch
- E953 Belt switch for seat row 1, middle
- G128 Seat occupied sensor, front passenger side
- G1108 Centre seat occupied sensor, seat row 1
- J234 Airbag control unit
- T2ah 2-pin connector, black
- T2ai 2-pin connector, black
- T2aj 2-pin connector, black
- T2ak 2-pin connector, black
- T2qd 2-pin connector, black
- T17ad 17-pin connector, red
- T17ae 17-pin connector, red
- T17y 17-pin connector, red
- T17z 17-pin connector, red
- T90f 90-pin connector, yellow
- TSVL Coupling point for front left seat
- TSVR Coupling point for front right seat
- 1291 Earth connection 1, in front right seat wiring harness
- 1295 Earth connection 2, in front right seat wiring harness
- 1299 Earth connection 3, in front right seat wiring harness
- Q65 Connection, in seat belt warning system wiring harness
- * Pre-wired component
- *2 For models with double seat on front passenger side

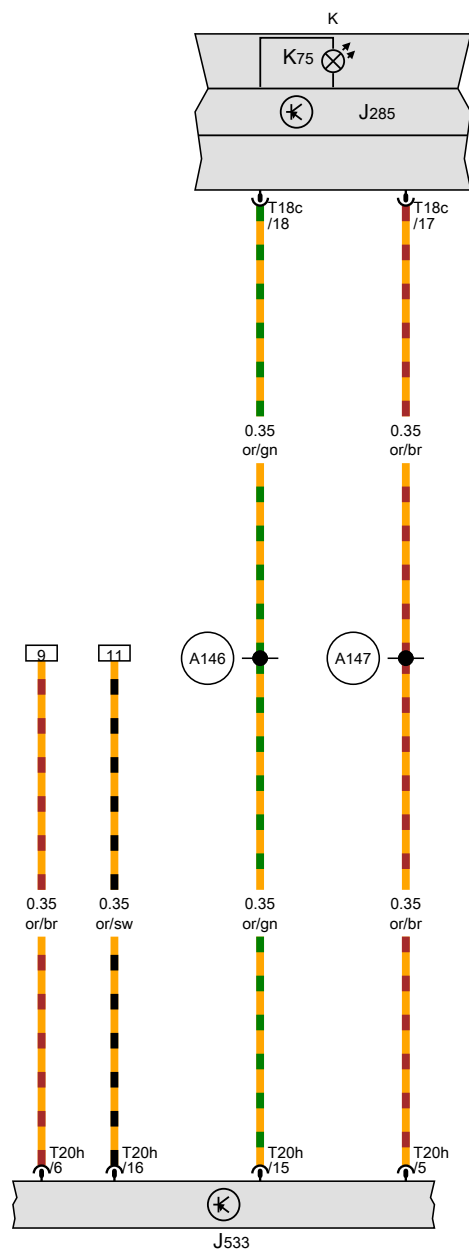

Dash panel insert, Airbag warning lamp


- J285 Control unit in dash panel insert
- J533 Data bus diagnostic interface
- K Dash panel insert
- K75 Airbag warning lamp
- T18c 18-pin connector, black
- T20h 20-pin connector, red
- A146 Connection (convenience CAN bus, high), in dash panel wiring harness
- A147 Connection (convenience CAN bus, low), in dash panel wiring harness

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

Front and rear parking aid (PDC) , (7X2),(8A8)

From September 2016


Centre switch module 4 in dash panel, Parking aid button, Park assist steering button, Parking aid control unit

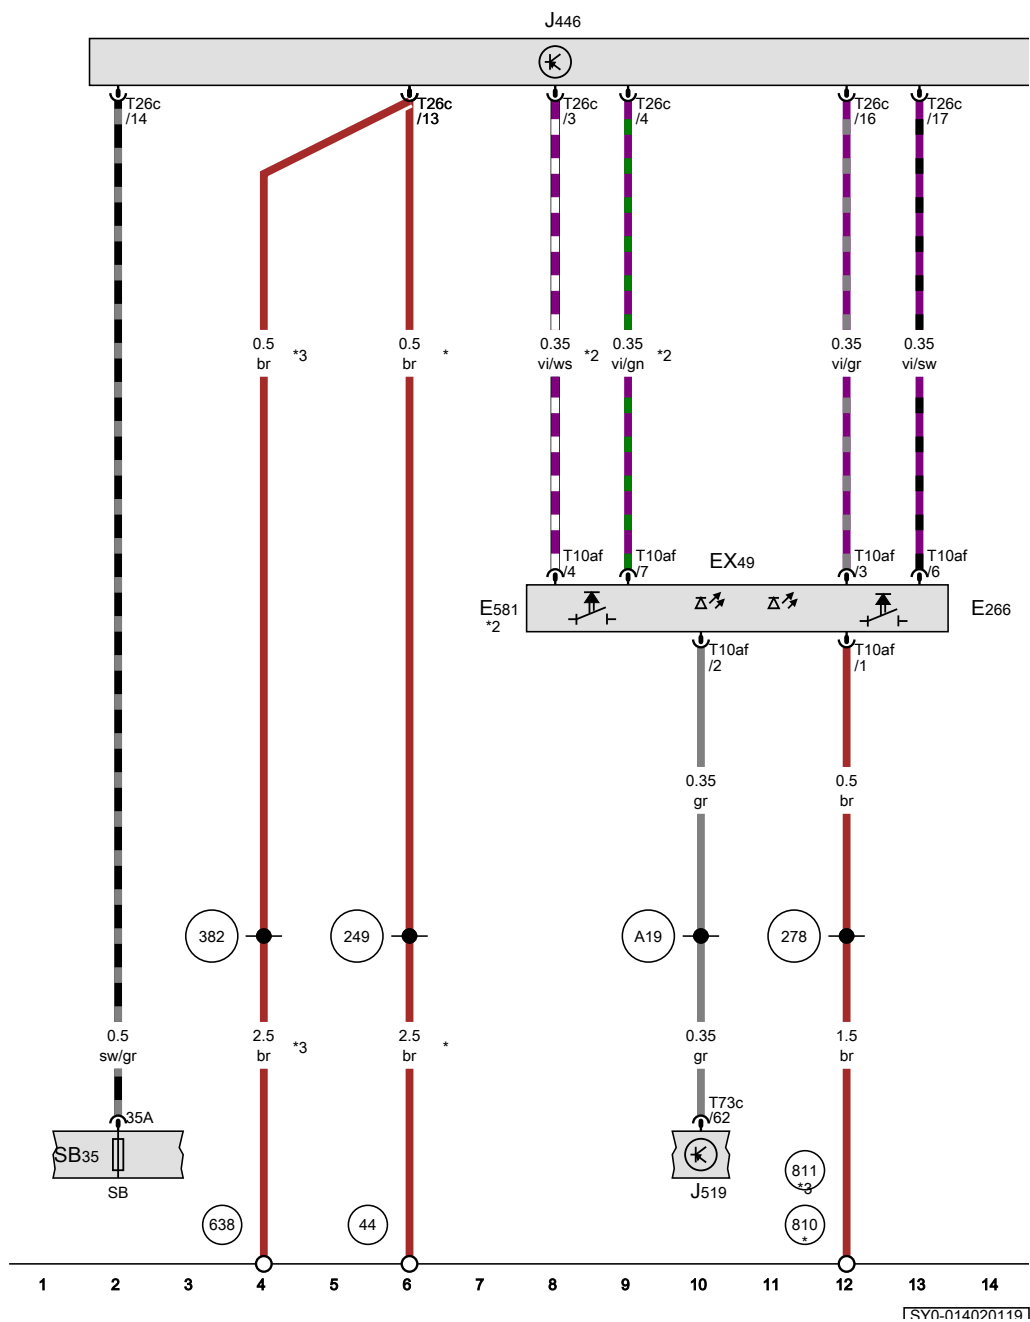

- EX49 Centre switch module 4 in dash panel
- E266 Parking aid button
- E581 Park assist steering button
- J446 Parking aid control unit
- J519 Onboard supply control unit
- SB Fuse holder B
- SB35 Fuse 35 on fuse holder B
- T10af 10-pin connector, red
- T26c 26-pin connector, black
- T73c 73-pin connector, black

- 44 Earth point, lower part of left A-pillar
- 249 Earth connection 2, in interior wiring harness
- 278 Earth connection 4, in interior wiring harness
- 382 Earth connection 17, in main wiring harness
- 638 Earth point, on right A-pillar
- 810 Earth point on central tube for dash panel, centre left
- 811 Earth point on central tube for dash panel, centre right
- A19 Connection (58d), in dash panel wiring harness
- * For left-hand drive models
- *2 For models with park assist steering
- *3 For right-hand drive models


- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

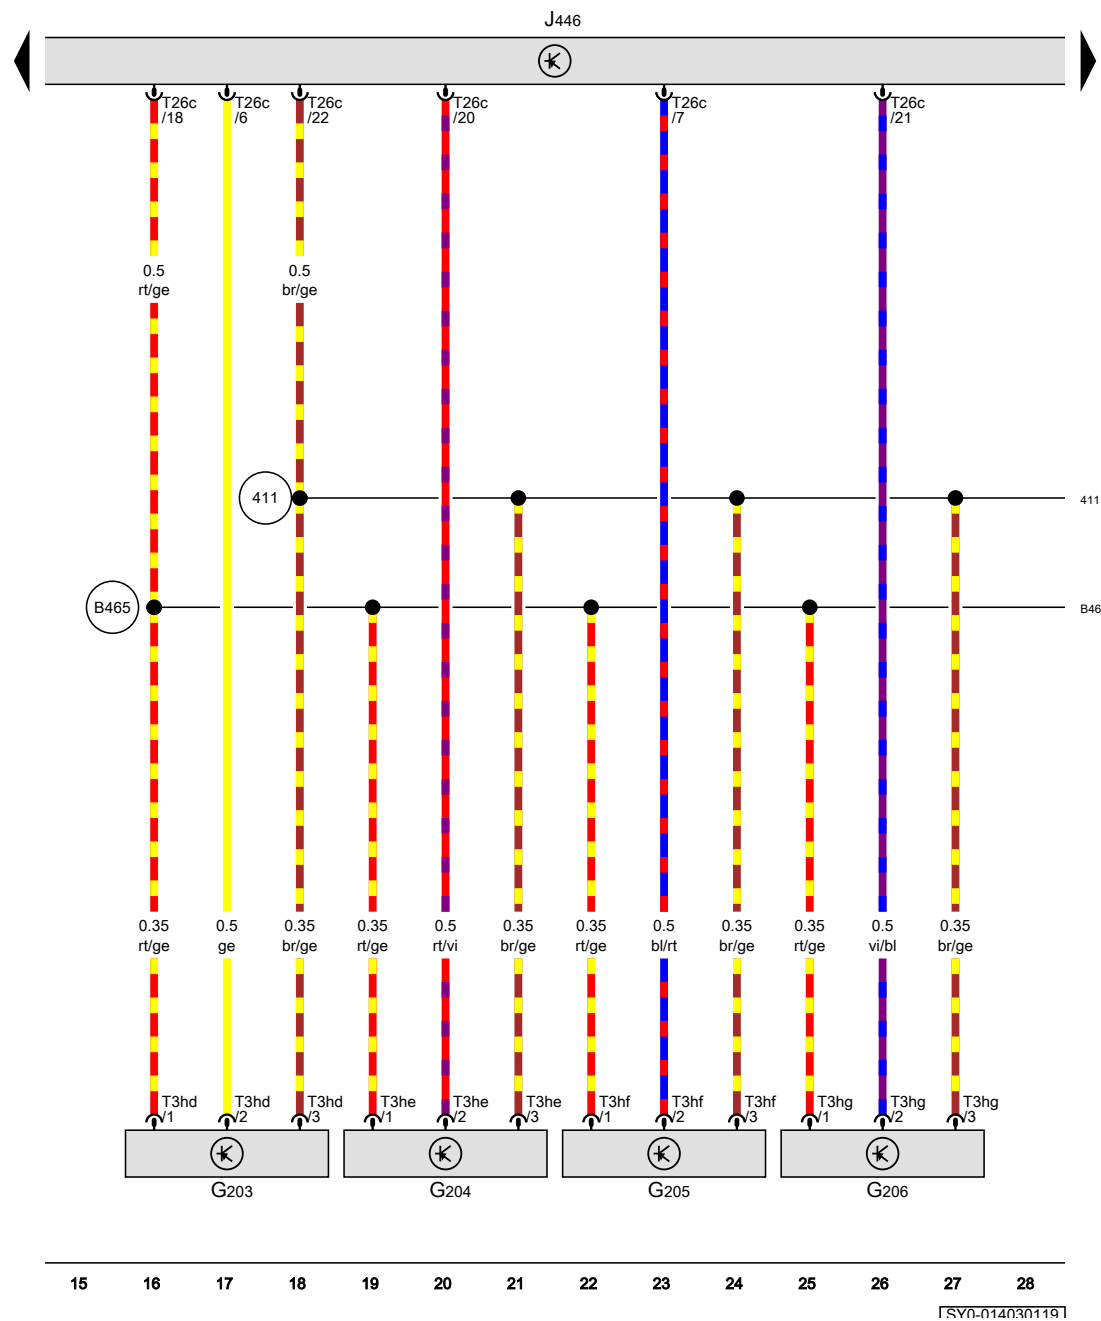

Rear left parking aid sender, Rear centre left parking aid sender, Rear centre right parking aid sender, Rear right parking aid sender, Parking aid control unit

- G203 Rear left parking aid sender
- G204 Rear centre left parking aid sender
- G205 Rear centre right parking aid sender
- G206 Rear right parking aid sender
- J446 Parking aid control unit
- T3hd 3-pin connector, black
- T3he 3-pin connector, black
- T3hf 3-pin connector, black
- T3hg 3-pin connector, black
- T26c 26-pin connector, black

- 411 Earth connection 2 (sender earth) in main wiring harness
- B465 Connection 1, in main wiring harness

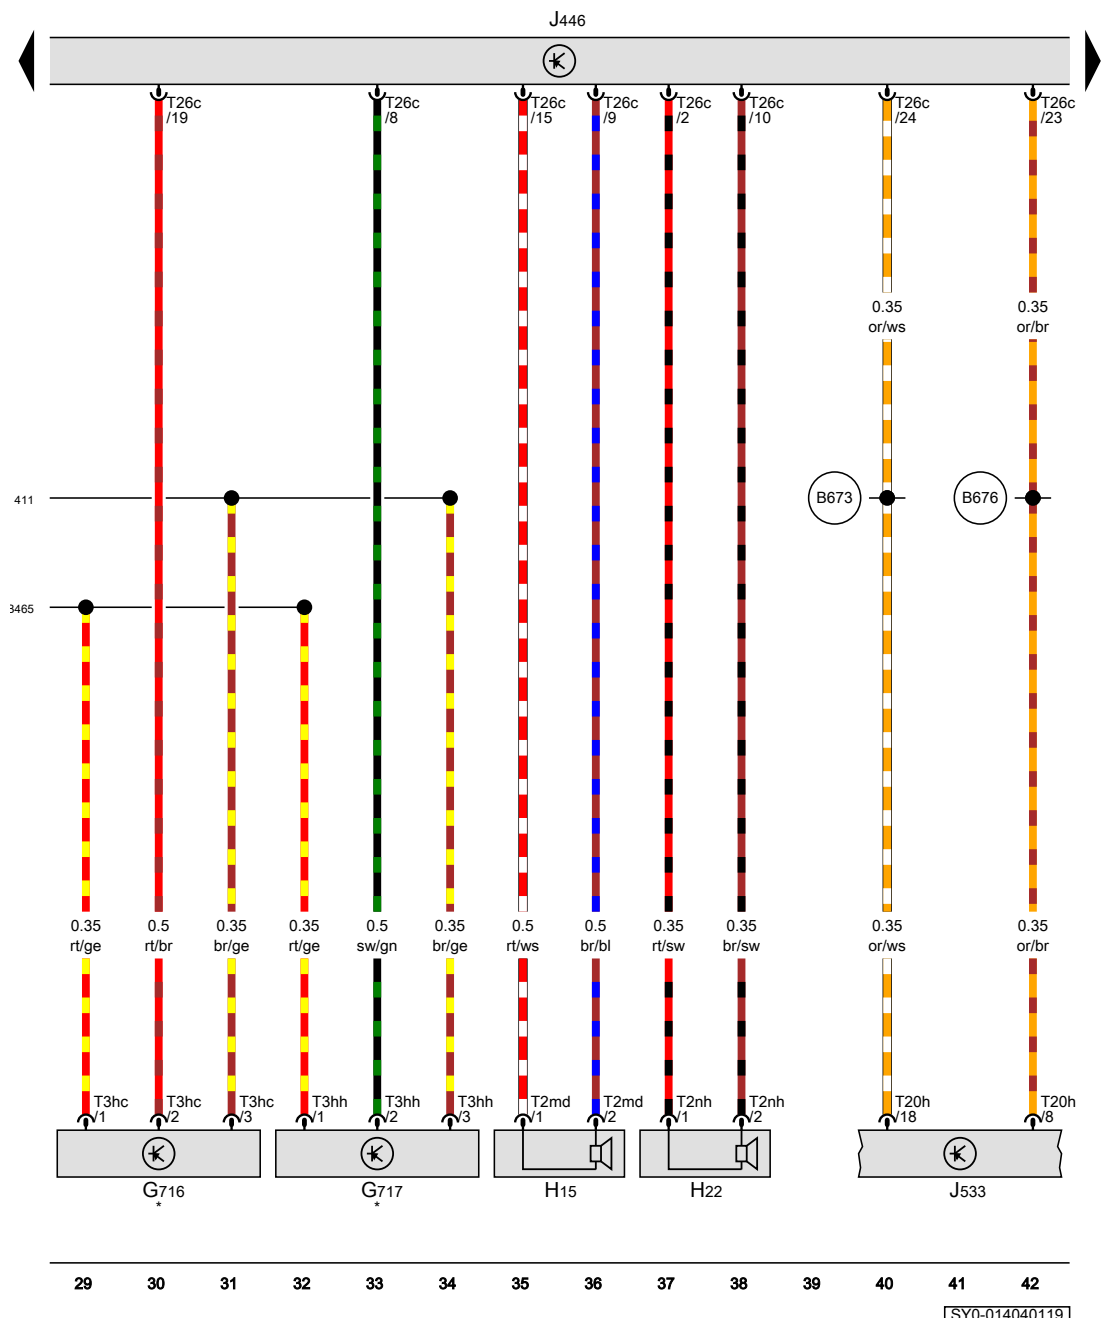


Rear left park assist steering sender, Rear right park assist steering sender, Rear parking aid warning buzzer, Front parking aid warning buzzer, Parking aid control unit

- G716 Rear left park assist steering sender
- G717 Rear right park assist steering sender
- H15 Rear parking aid warning buzzer
- H22 Front parking aid warning buzzer
- J446 Parking aid control unit
- J533 Data bus diagnostic interface
- T2md 2-pin connector, black
- T2nh 2-pin connector, black
- T3hc 3-pin connector, black
- T3hh 3-pin connector, black
- T20h 20-pin connector, red
- T26c 26-pin connector, black

- 411 Earth connection 2 (sender earth) in main wiring harness
- B465 Connection 1, in main wiring harness
- B673 Connection 2 (running gear/dash panel insert CAN bus, high), in main wiring harness
- B676 Connection 1 (running gear/dash panel insert CAN bus, low), in main wiring harness
- * For models with park assist steering

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

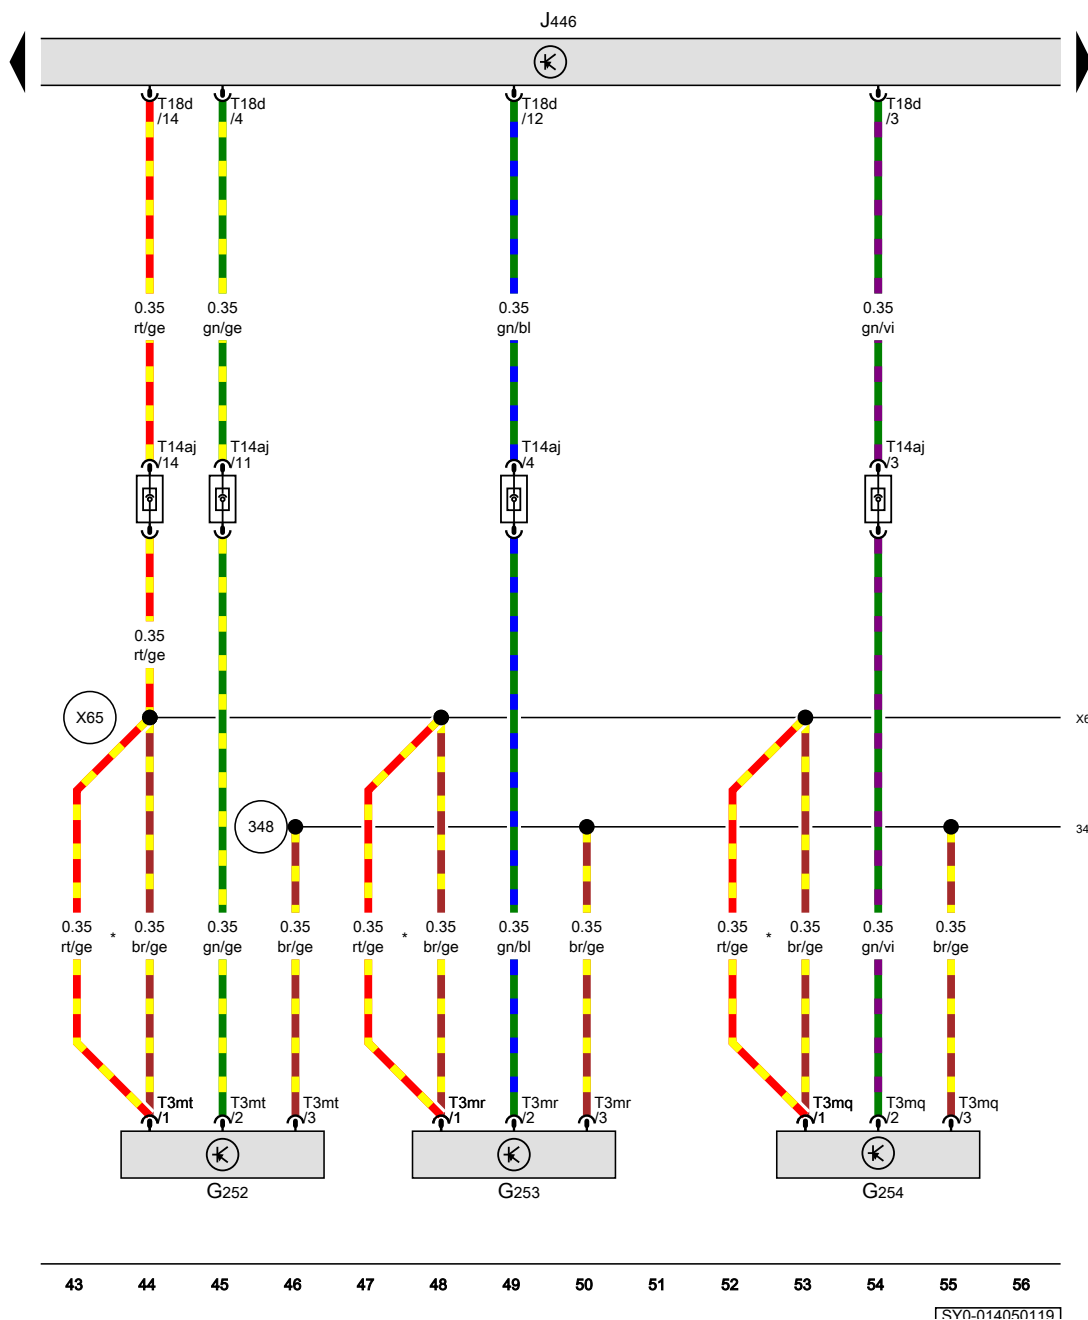

Front right parking aid sender, Front centre right parking aid sender, Front centre left parking aid sender, Parking aid control unit


- G252 Front right parking aid sender
- G253 Front centre right parking aid sender
- G254 Front centre left parking aid sender
- J446 Parking aid control unit
- T3mq 3-pin connector, black
- T3mr 3-pin connector, black
- T3mt 3-pin connector, black
- T14aj 14-pin connector, black
- T18d 18-pin connector, black

348 Earth connection (parking aid), in front bumper wiring harness

X65 Connection (parking aid), in front bumper wiring harness

* gradual introduction

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

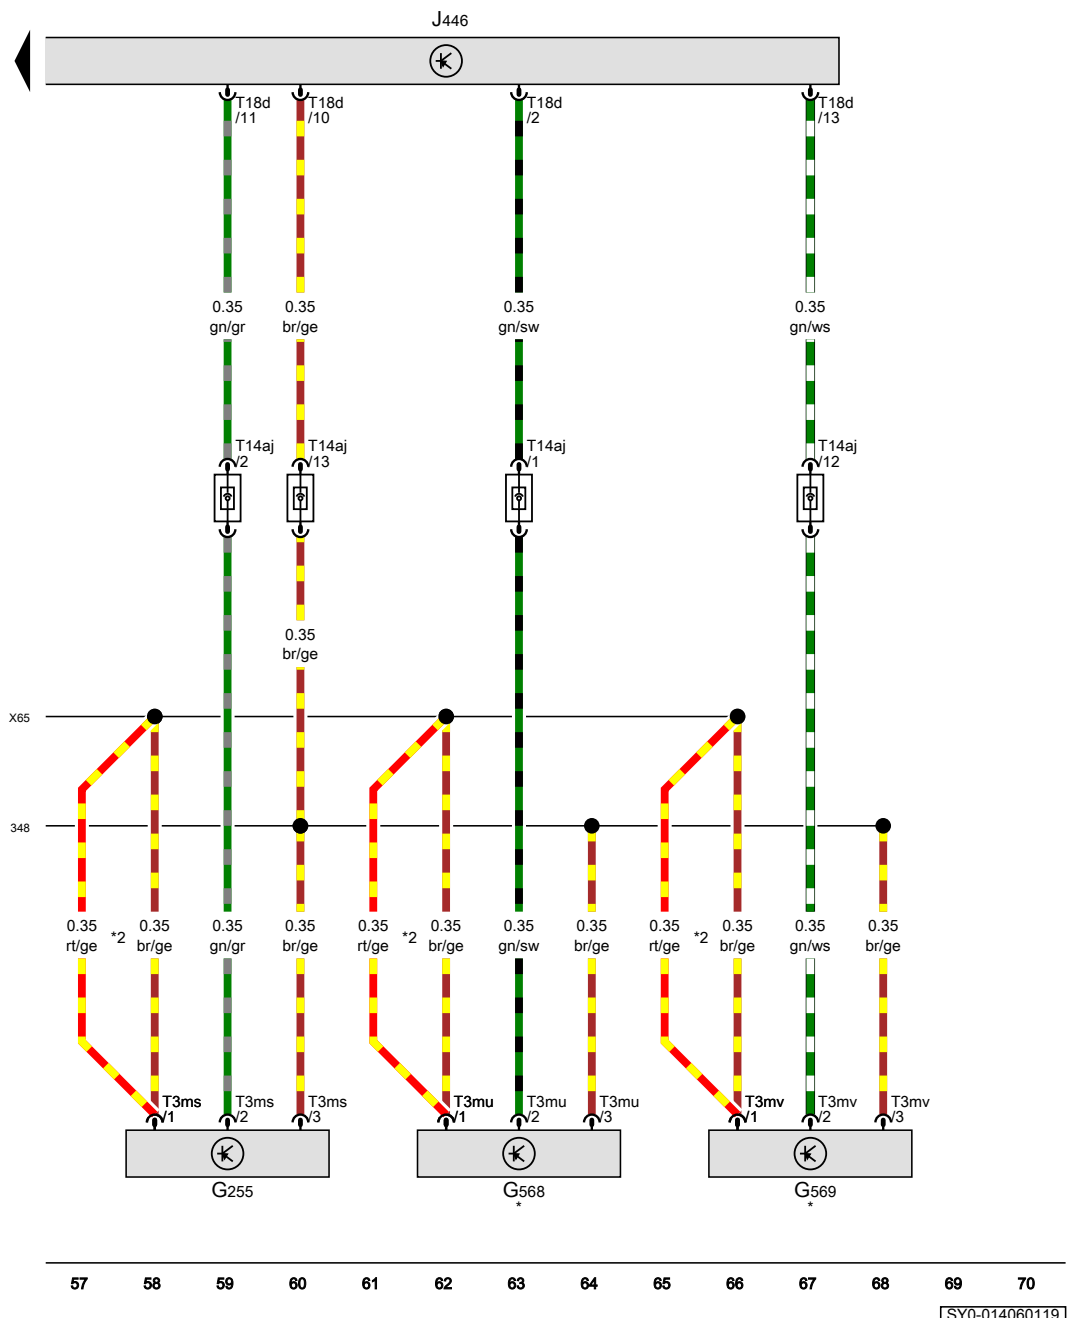

Front left parking aid sender, Front left sender for park assist steering on left side of vehicle, Front right sender for park assist steering on right side of vehicle, Parking aid control unit

- G255 Front left parking aid sender
- G568 Front left sender for park assist steering on left side of vehicle
- G569 Front right sender for park assist steering on right side of vehicle
- J446 Parking aid control unit
- T3ms 3-pin connector, black
- T3mu 3-pin connector, black
- T3mv 3-pin connector, black
- T14aj 14-pin connector, black
- T18d 18-pin connector, black

348 Earth connection (parking aid), in front bumper wiring harness


X65 Connection (parking aid), in front bumper wiring harness

- * For models with park assist steering
- *2 gradual introduction

Front and rear parking aid (PDC) , (9X0),(9X1),(9X2),(9X3)


From September 2016

Centre switch module 4 in dash panel, Parking aid button, Park assist steering button, Parking aid control unit

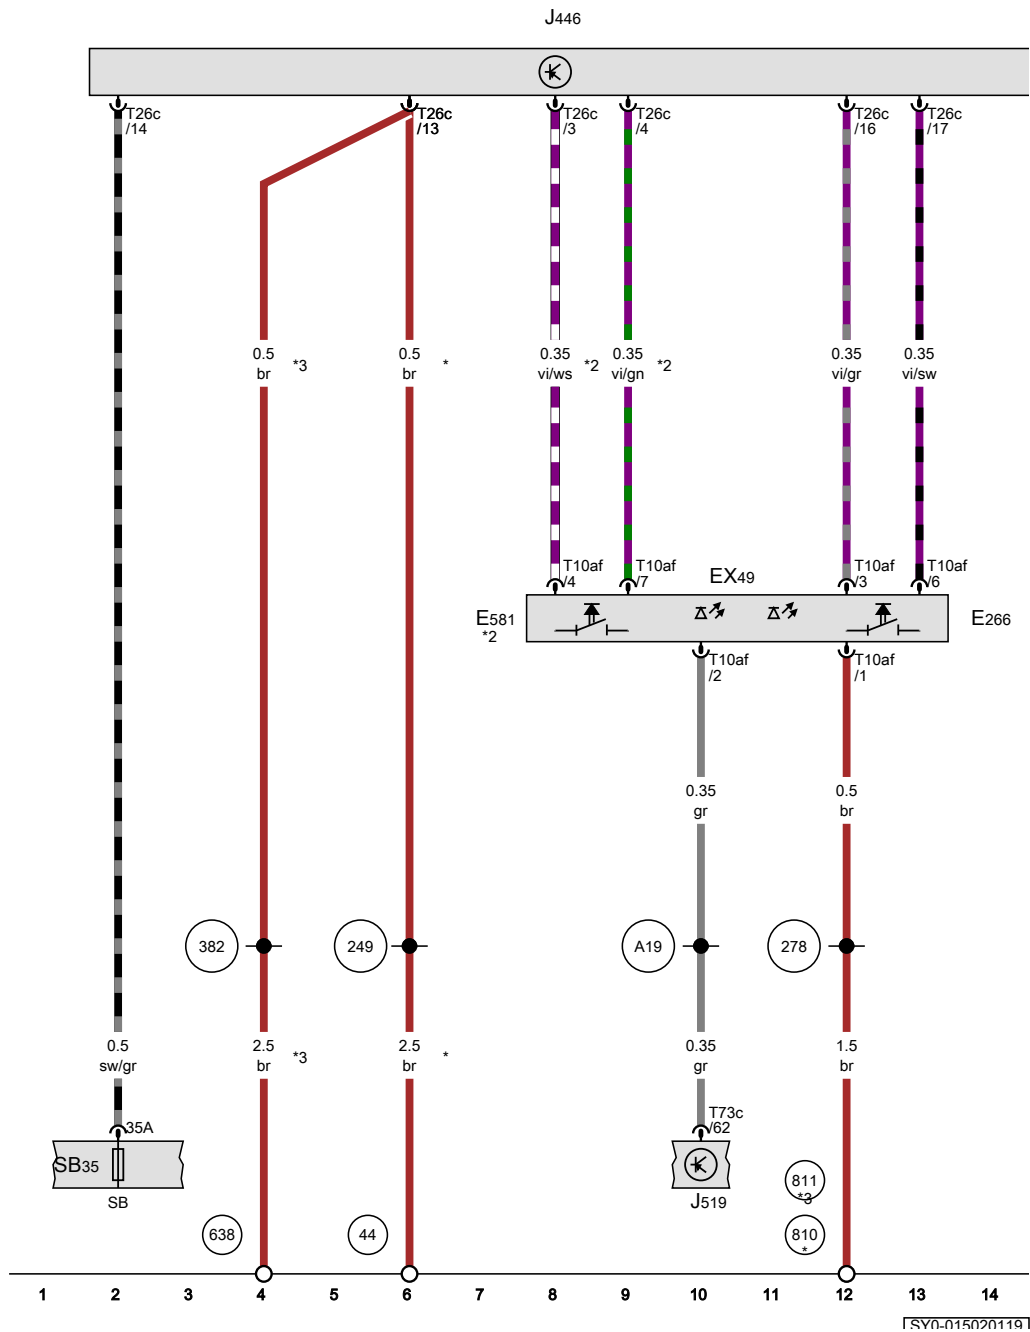

- EX49 Centre switch module 4 in dash panel
- E266 Parking aid button
- E581 Park assist steering button
- J446 Parking aid control unit
- J519 Onboard supply control unit
- SB Fuse holder B
- SB35 Fuse 35 on fuse holder B
- T10af 10-pin connector, red
- T26c 26-pin connector, black
- T73c 73-pin connector, black


- 44 Earth point, lower part of left A-pillar
- 249 Earth connection 2, in interior wiring harness
- 278 Earth connection 4, in interior wiring harness
- 382 Earth connection 17, in main wiring harness
- 638 Earth point, on right A-pillar
- 810 Earth point on central tube for dash panel, centre left
- 811 Earth point on central tube for dash panel, centre right
- A19 Connection (58d), in dash panel wiring harness
- * For left-hand drive models
- *2 For models with park assist steering
- *3 For right-hand drive models

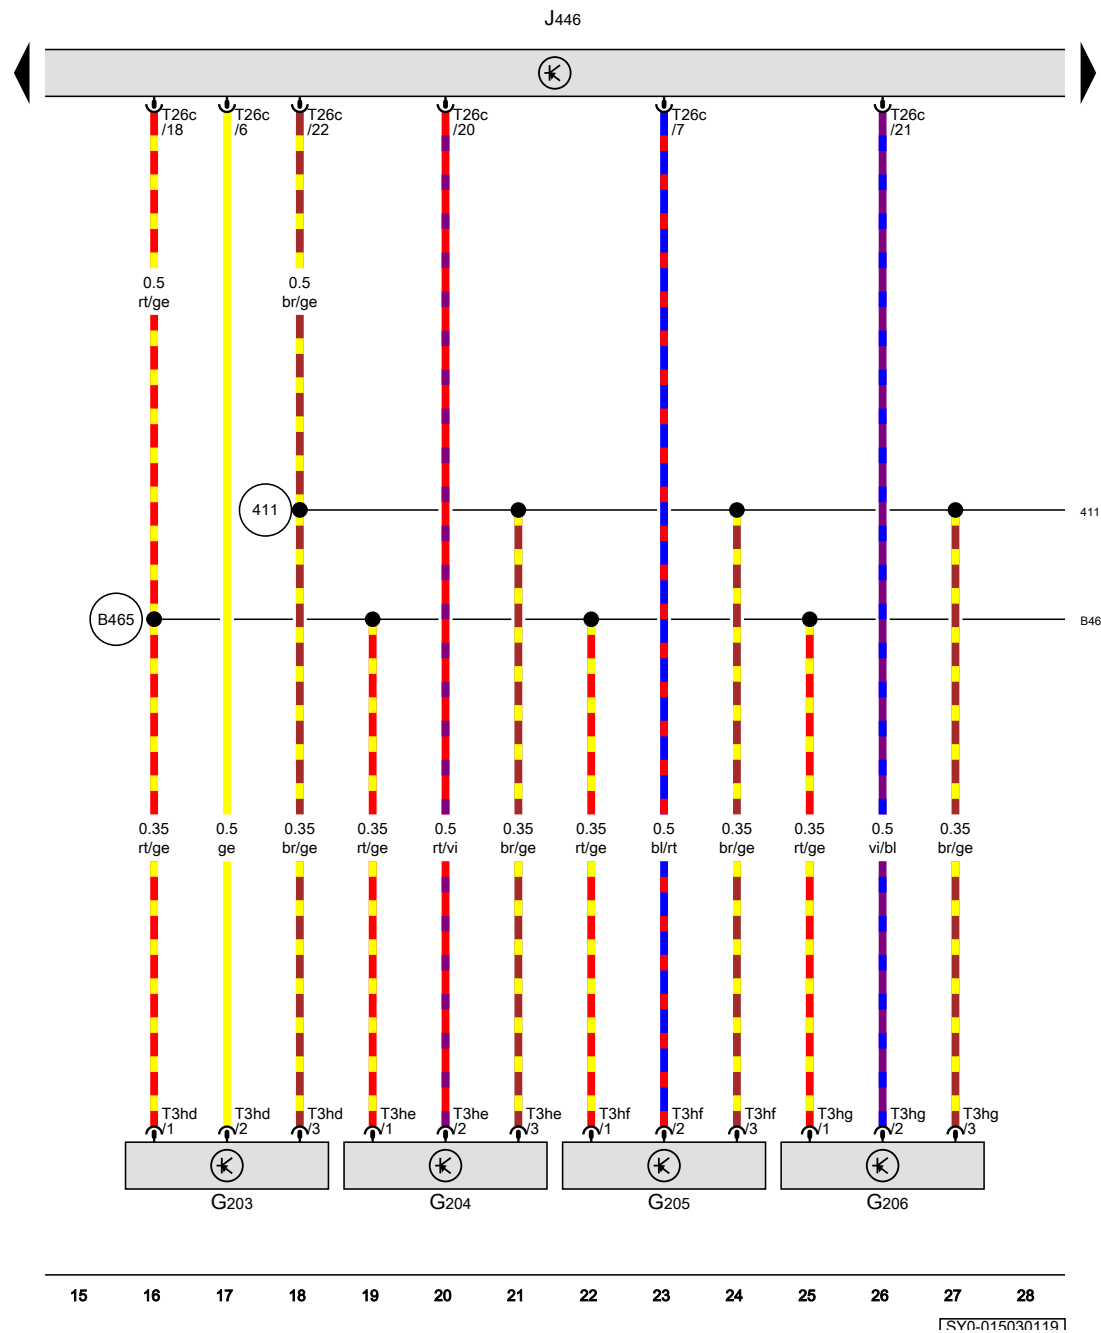

Rear left parking aid sender, Rear centre left parking aid sender, Rear centre right parking aid sender, Rear right parking aid sender, Parking aid control unit

- G203 Rear left parking aid sender
- G204 Rear centre left parking aid sender
- G205 Rear centre right parking aid sender
- G206 Rear right parking aid sender
- J446 Parking aid control unit
- T3hd 3-pin connector, black
- T3he 3-pin connector, black
- T3hf 3-pin connector, black
- T3hg 3-pin connector, black
- T26c 26-pin connector, black

- 411 Earth connection 2 (sender earth) in main wiring harness
- B465 Connection 1, in main wiring harness

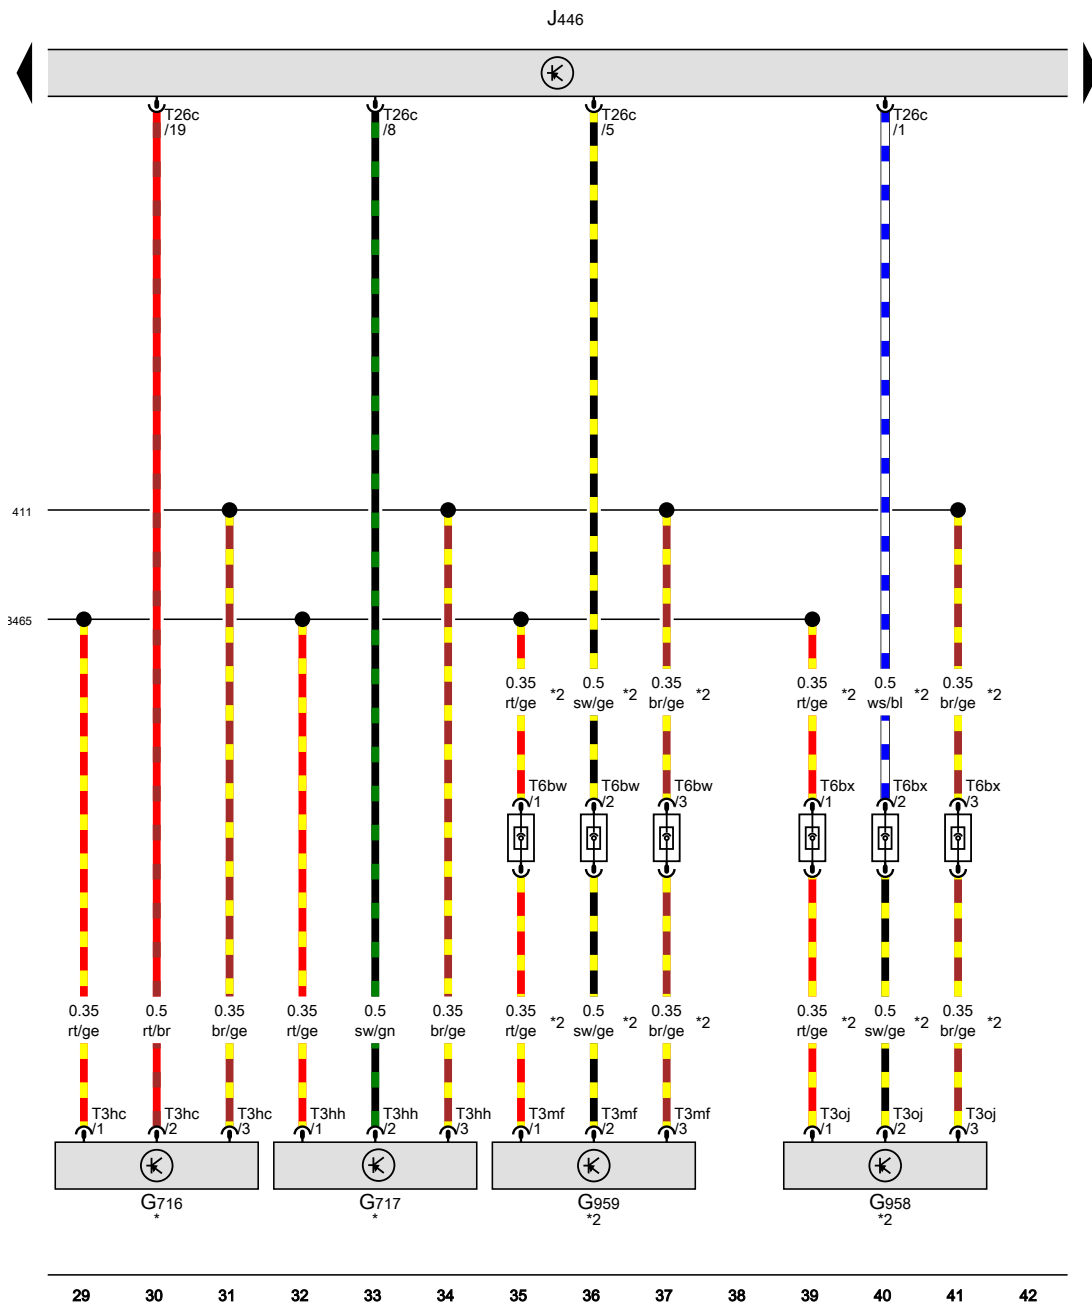


Rear left park assist steering sender, Rear right park assist steering sender, Rear side right parking aid sender 2, Rear side left parking aid sender 2, Parking aid control unit

- G716 Rear left park assist steering sender
- G717 Rear right park assist steering sender
- G958 Rear side right parking aid sender 2
- G959 Rear side left parking aid sender 2
- J446 Parking aid control unit
- T3hc 3-pin connector, black
- T3hh 3-pin connector, black
- T3mf 3-pin connector, black
- T3oj 3-pin connector, black
- T6bw 6-pin connector, black
- T6bx 6-pin connector, black
- T26c 26-pin connector, black

411 Earth connection 2 (sender earth) in main wiring harness

B465 Connection 1, in main wiring harness

- * For models with park assist steering
- *2 For models with side protection

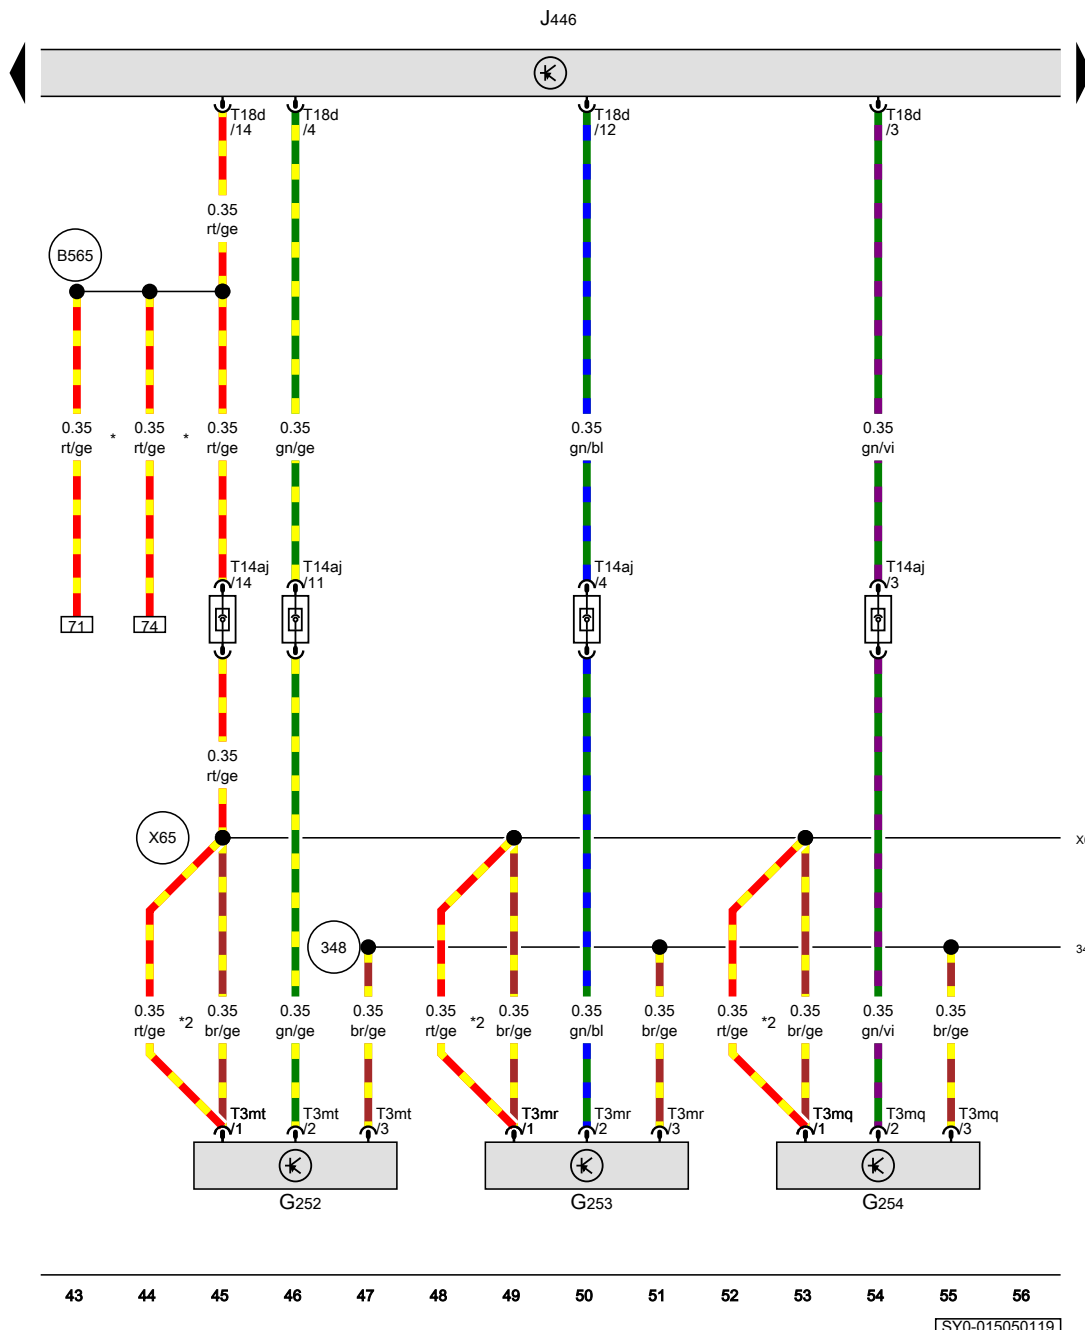

Front right parking aid sender, Front centre right parking aid sender, Front centre left parking aid sender, Parking aid control unit

- G252 Front right parking aid sender
- G253 Front centre right parking aid sender
- G254 Front centre left parking aid sender
- J446 Parking aid control unit
- T3mq 3-pin connector, black
- T3mr 3-pin connector, black
- T3mt 3-pin connector, black
- T14aj 14-pin connector, black
- T18d 18-pin connector, black


348 Earth connection (parking aid), in front bumper wiring harness

B565 Connection 32, in main wiring harness

X65 Connection (parking aid), in front bumper wiring harness

- * For models with side protection
- *2 gradual introduction

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

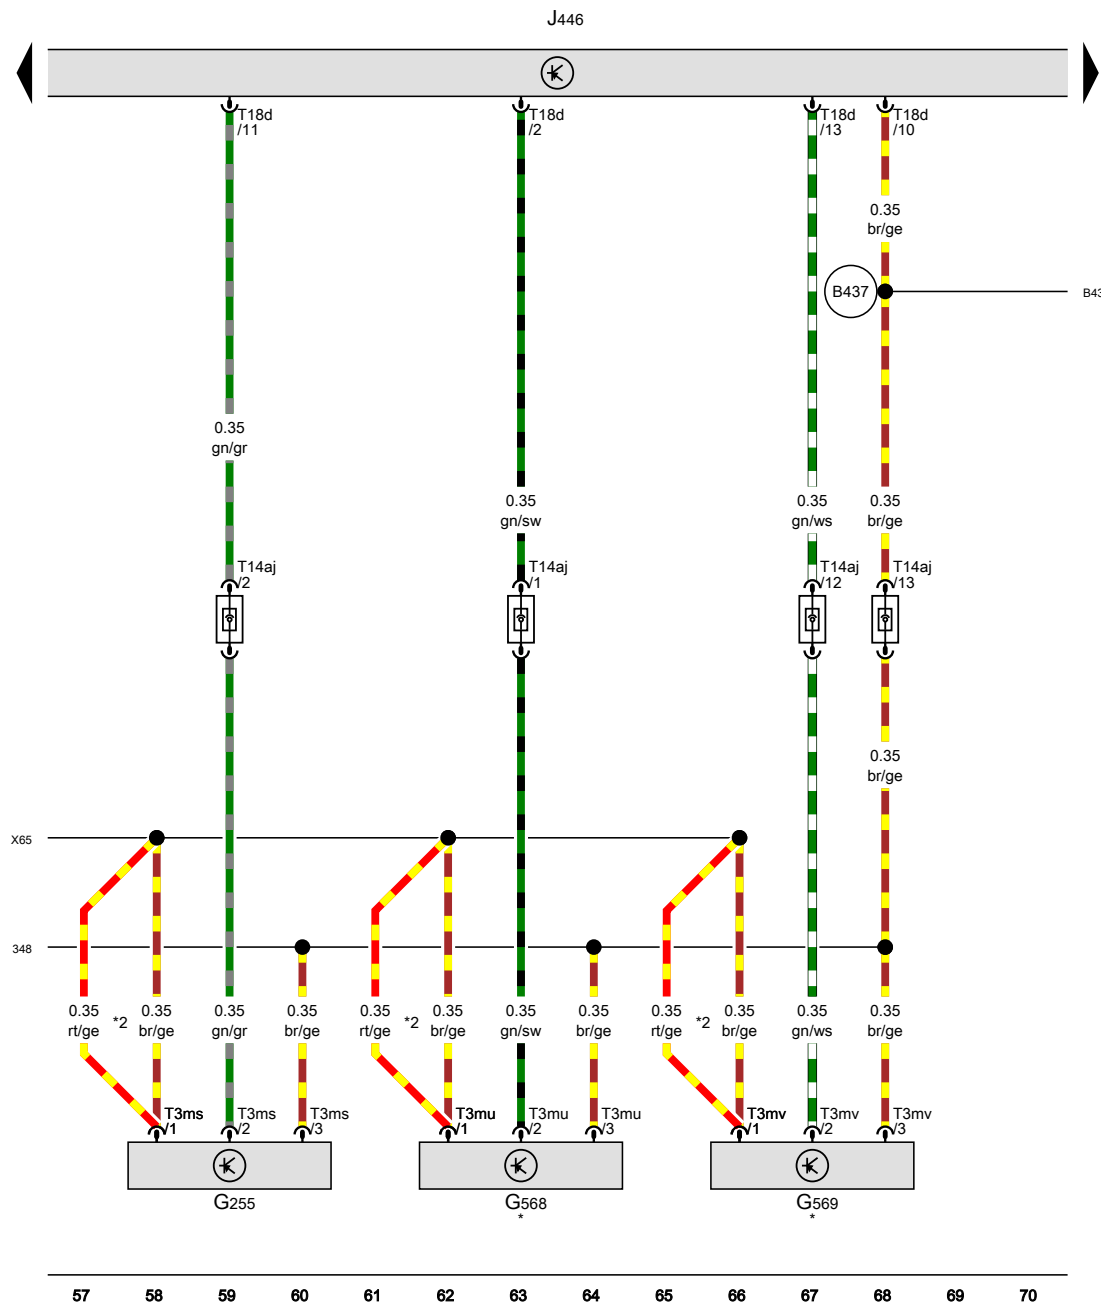

Front left parking aid sender, Front left sender for park assist steering on left side of vehicle, Front right sender for park assist steering on right side of vehicle, Parking aid control unit

- G255 Front left parking aid sender
- G568 Front left sender for park assist steering on left side of vehicle
- G569 Front right sender for park assist steering on right side of vehicle
- J446 Parking aid control unit
- T3ms 3-pin connector, black
- T3mu 3-pin connector, black
- T3mv 3-pin connector, black
- T14aj 14-pin connector, black
- T18d 18-pin connector, black

348 Earth connection (parking aid), in front bumper wiring harness


B437 Connection 1 (GND (earth)), in main wiring harness

X65 Connection (parking aid), in front bumper wiring harness

* For models with park assist steering
*2 gradual introduction

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink

[SYN-015060119]

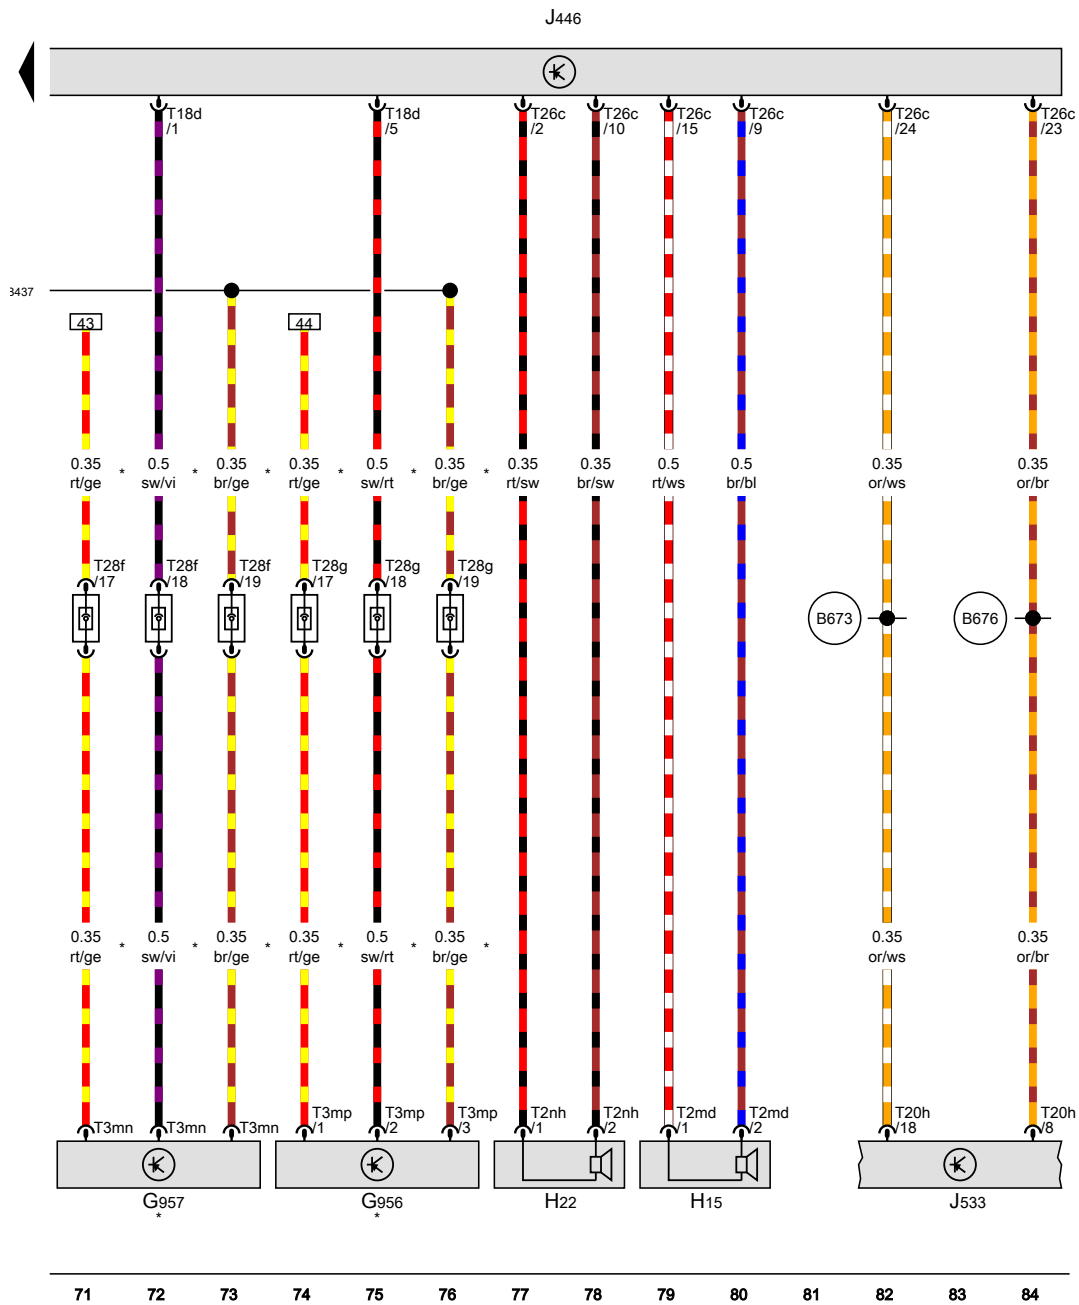

Front side right parking aid sender 2, Front side left parking aid sender 2, Rear parking aid warning buzzer, Front parking aid warning buzzer, Parking aid control unit

- G956 Front side right parking aid sender 2
- G957 Front side left parking aid sender 2
- H15 Rear parking aid warning buzzer
- H22 Front parking aid warning buzzer
- J446 Parking aid control unit
- J533 Data bus diagnostic interface
- T2md 2-pin connector, black
- T2nh 2-pin connector, black
- T3mn 3-pin connector, black
- T3mp 3-pin connector, black
- T18d 18-pin connector, black
- T20h 20-pin connector, red
- T26c 26-pin connector, black
- T28f 28-pin connector, black
- T28g 28-pin connector, black

- B437 Connection 1 (GND (earth)), in main wiring harness
- B673 Connection 2 (running gear/dash panel insert CAN bus, high), in main wiring harness
- B676 Connection 1 (running gear/dash panel insert CAN bus, low), in main wiring harness
- * For models with side protection

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink


Lane change assist


From September 2016

Blind Spot Monitor control unit 2, Blind Spot Monitor warning lamp in left exterior mirror, Blind Spot Monitor warning lamp in right exterior mirror

- J1087 Blind Spot Monitor control unit 2
 K303 Blind Spot Monitor warning lamp in left exterior mirror
 K304 Blind Spot Monitor warning lamp in right exterior mirror
 SB Fuse holder B
 SB27 Fuse 27 on fuse holder B
 T2uw 2-pin connector, black
 T2ux 2-pin connector, black
 T8ca 8-pin connector, black
 T28f 28-pin connector, black
 T28g 28-pin connector, black
 VX4 Driver side exterior mirror
 VX5 Passenger side exterior mirror

- 375 Earth connection 10, in main wiring harness
 A199 Positive connection 4 (15a) in dash panel wiring harness
 B713 Connection 1 (CAN bus diagnosis, high), in main wiring harness
 B714 Connection 1 (CAN bus diagnosis, low), in main wiring harness
 * Pre-wired component

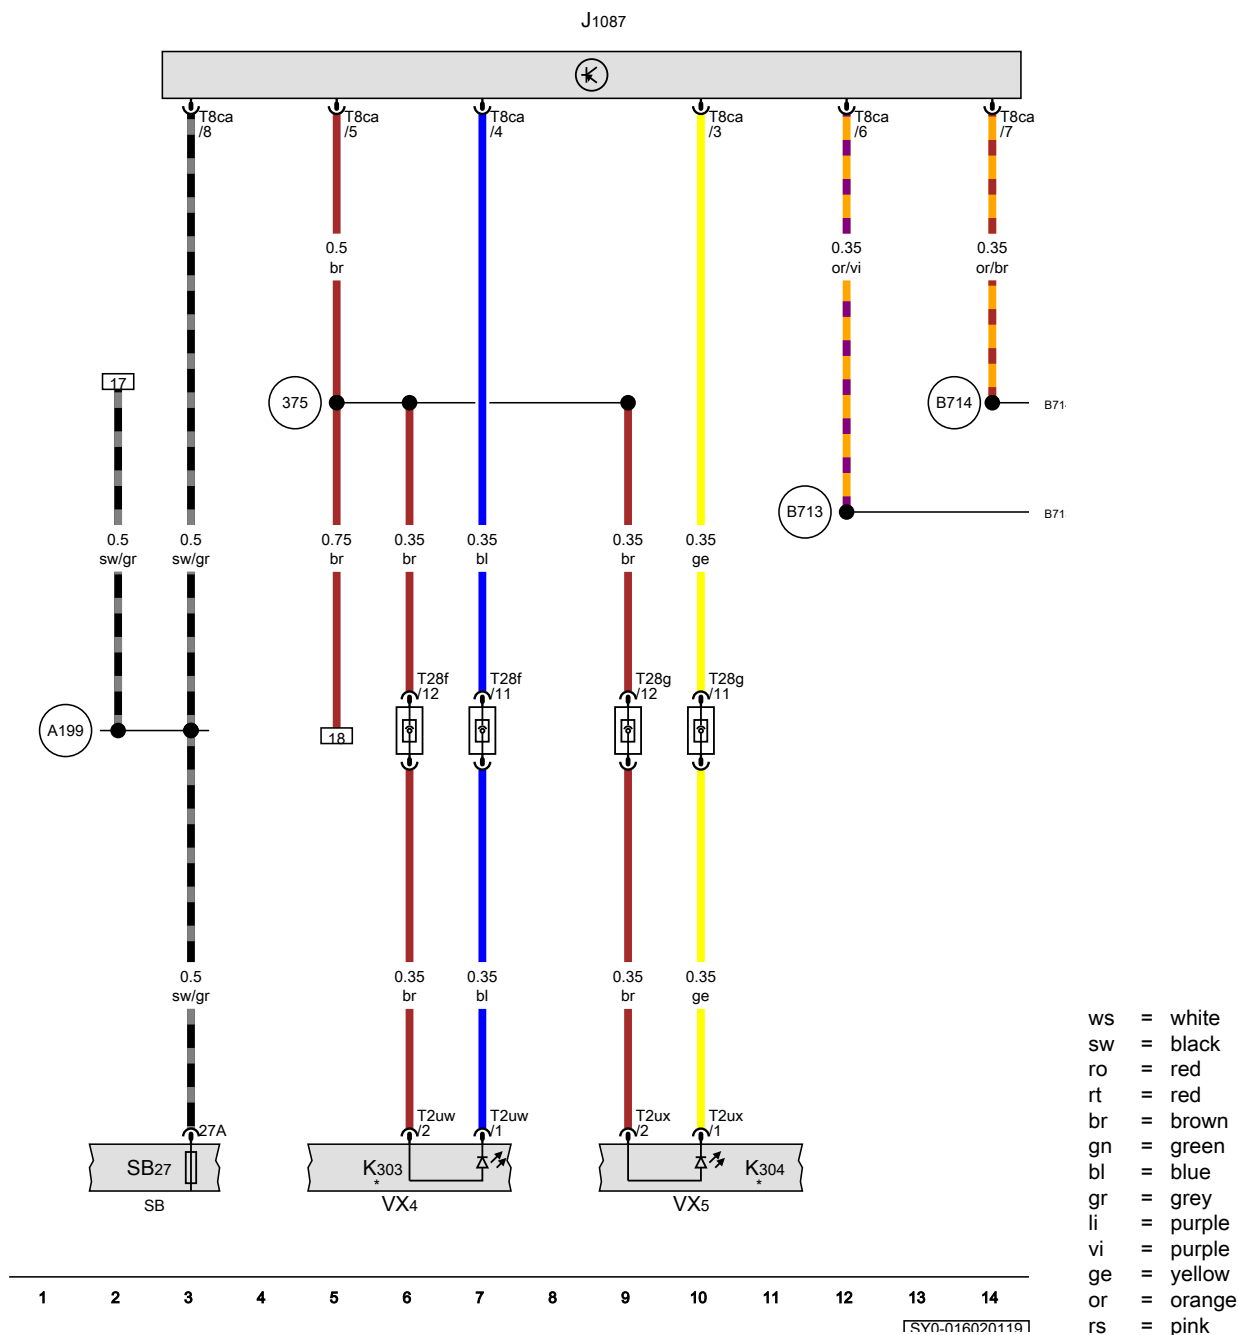

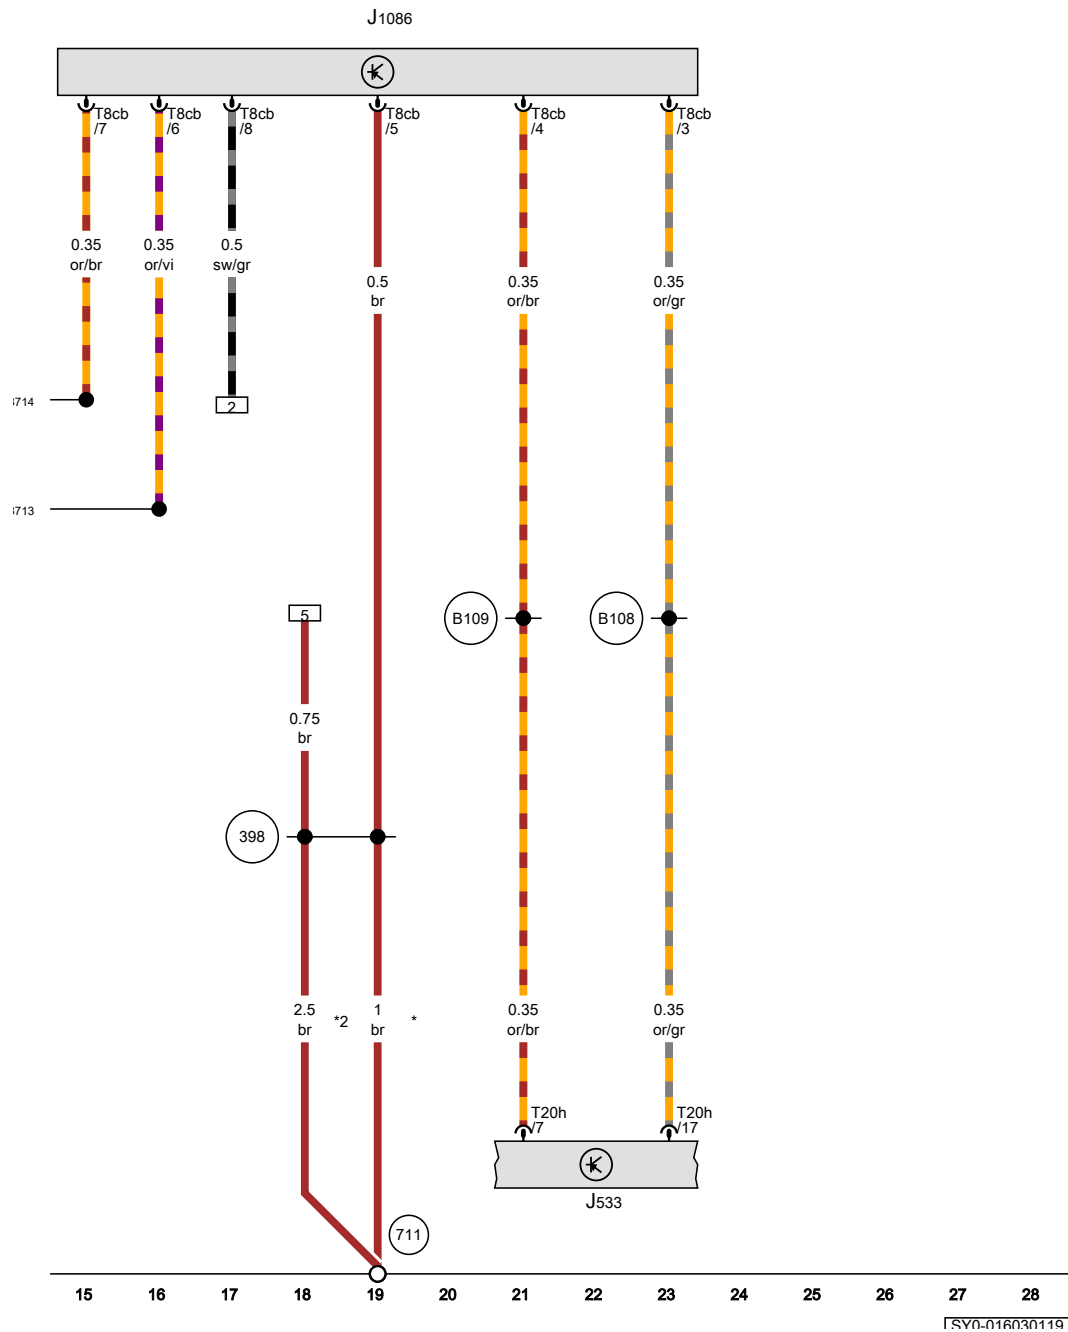


Blind Spot Monitor control unit

J533 Data bus diagnostic interface
J1086 Blind Spot Monitor control unit
T8cb 8-pin connector, black
T20h 20-pin connector, red

- 398 Earth connection 33, in main wiring harness
- 711 Earth point 3 on rear left longitudinal member
- B108 Connection 1 (CAN bus extended high), in main wiring harness
- B109 Connection 1 (CAN bus extended low), in main wiring harness
- B713 Connection 1 (CAN bus diagnosis, high), in main wiring harness
- B714 Connection 1 (CAN bus diagnosis, low), in main wiring harness
- * Up to May 2017
- *2 From May 2017

Reverse warning beeper

From September 2016

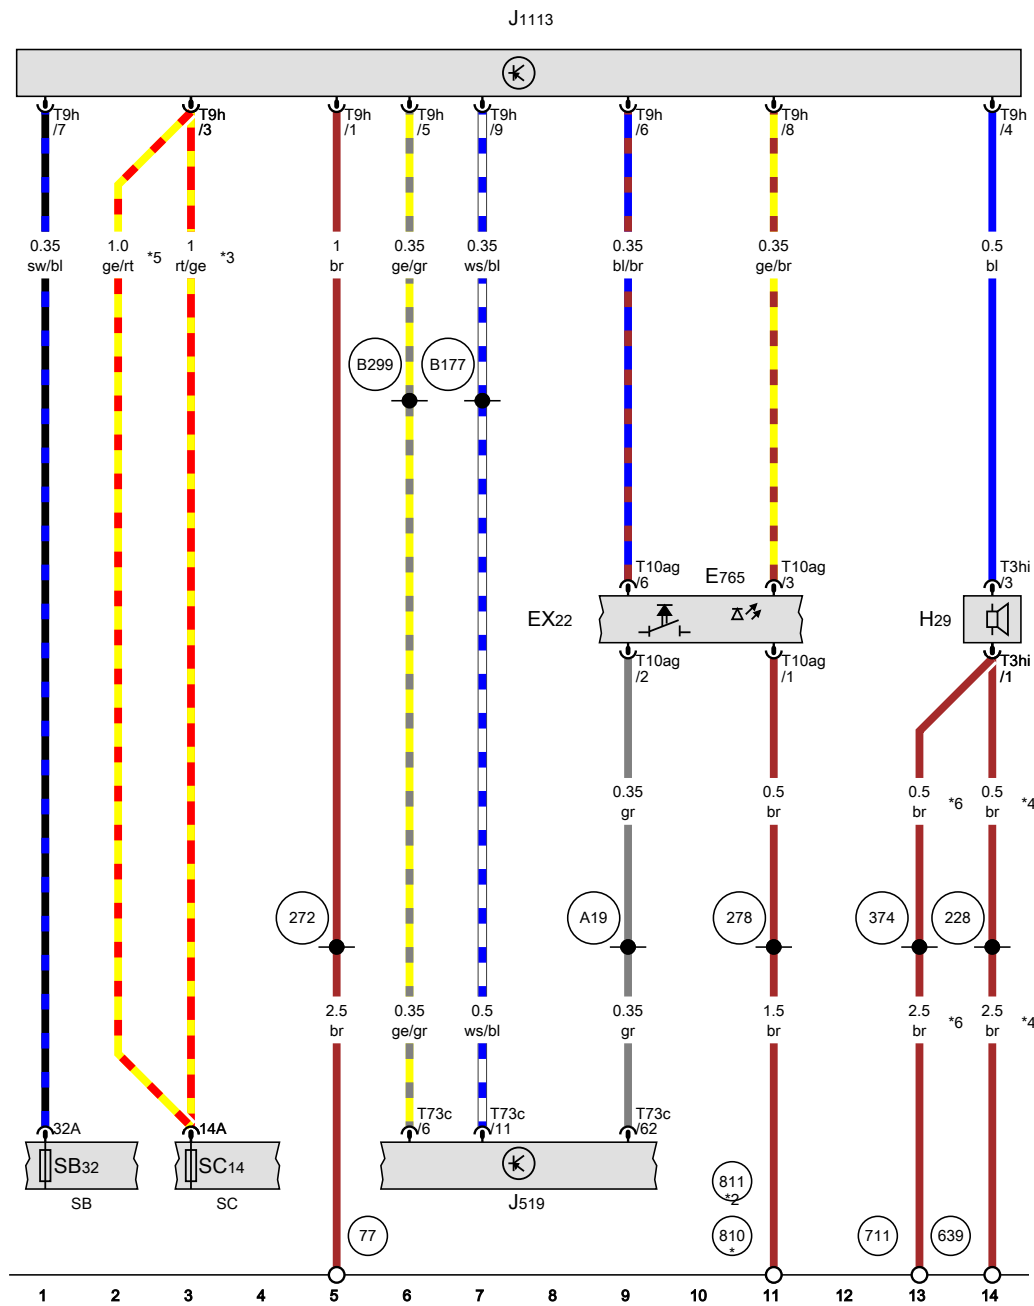

Centre switch module in dash panel, Switch-off button for reverse warning beeper, Reverse warning beeper, Reverse warning beeper control unit

- EX22 Centre switch module in dash panel
- E765 Switch-off button for reverse warning beeper
- H29 Reverse warning beeper
- J519 Onboard supply control unit
- J1113 Reverse warning beeper control unit
- SB Fuse holder B
- SC Fuse holder C
- SC14 Fuse 14 on fuse holder C
- SB32 Fuse 32 on fuse holder B
- T3hi 3-pin connector, black
- T9h 9-pin connector, grey
- T10ag 10-pin connector, red
- T73c 73-pin connector, black
- 77 Earth point, lower part of left B-pillar
- 228 Connection, in harness
- 272 Earth connection 4, in front wiring harness
- 278 Earth connection 4, in interior wiring harness
- 374 Earth connection 9, in main wiring harness
- 639 Earth point, left A-pillar
- 711 Earth point 3 on rear left longitudinal member
- 810 Earth point on central tube for dash panel, centre left
- 811 Earth point on central tube for dash panel, centre right
- A19 Connection (58d), in dash panel wiring harness
- B177 Connection (61), in interior wiring harness
- B299 Positive connection 3 (30), in main wiring harness

* For left-hand drive models
*2 For right-hand drive models

ws = white


sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink

*3 Up to November 2017
*4 Up to May 2017
*5 From November 2017
*6 From May 2017

Marker lights and tail light clusters

From September 2016

Onboard supply control unit, Left tail light cluster, Left end-outline marker lamp bulb, Elevated side light, front left

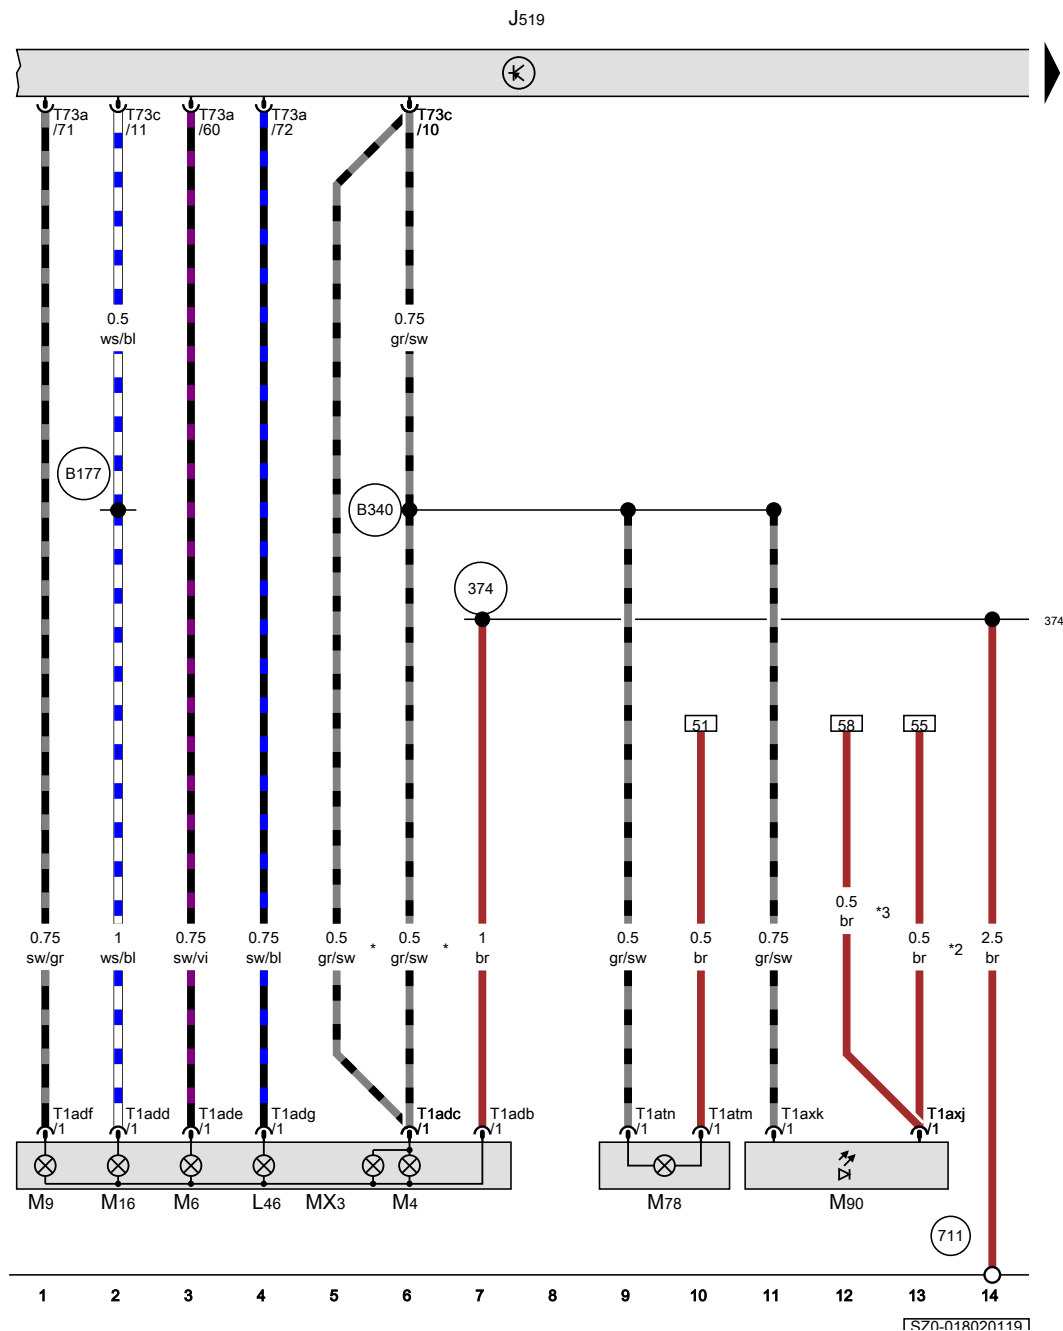


- J519 Onboard supply control unit
- L46 Rear left fog light bulb
- MX3 Left tail light cluster
- M4 Left tail light bulb
- M6 Rear left turn signal bulb
- M9 Left brake light bulb
- M16 Left reversing light bulb
- M78 Left end-outline marker lamp bulb
- M90 Elevated side light, front left
- T1adb 1-pin connector
- T1adc 1-pin connector
- T1add 1-pin connector
- T1ade 1-pin connector
- T1adf 1-pin connector
- T1adg 1-pin connector
- T1atm 1-pin connector
- T1atn 1-pin connector
- T1axj 1-pin connector
- T1axk 1-pin connector
- T73a 73-pin connector, black
- T73c 73-pin connector, black

- 374 Earth connection 9, in main wiring harness
- 711 Earth point 3 on rear left longitudinal member
- B177 Connection (61), in interior wiring harness
- B340 Connection 1 (58d), in main wiring harness

- * According to equipment
- *2 For left-hand drive models
- *3 For right-hand drive models

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

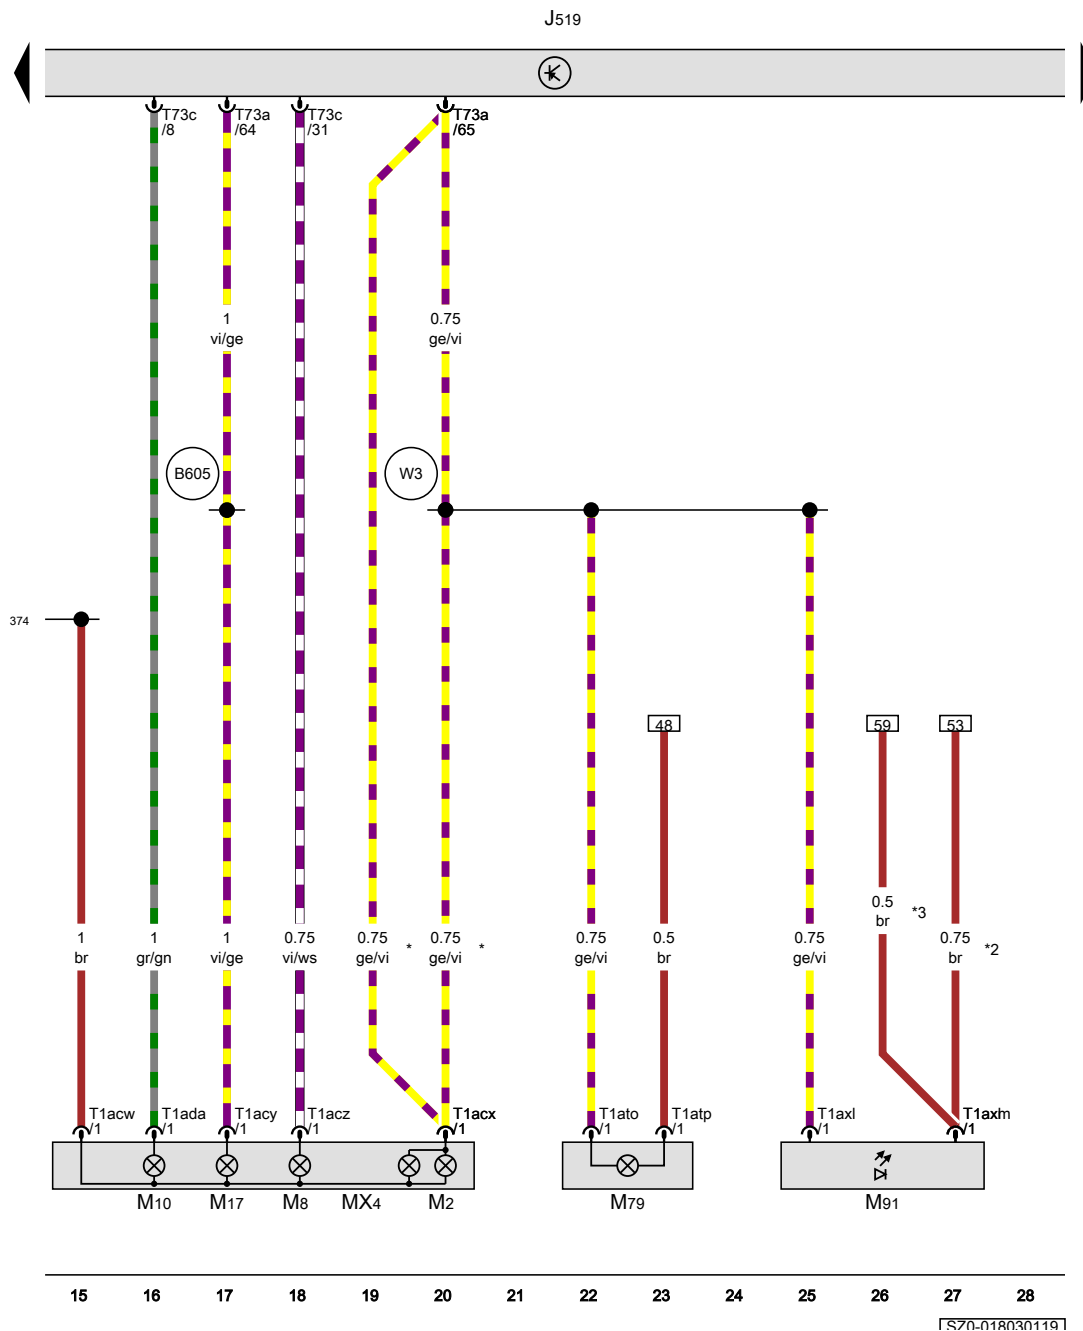

Onboard supply control unit, Right tail light cluster, Right end-outline marker lamp bulb, Elevated side light, front right


- J519 Onboard supply control unit
- M2 Right tail light bulb
- MX4 Right tail light cluster
- M8 Rear right turn signal bulb
- M10 Right brake light bulb
- M17 Right reversing light bulb
- M79 Right end-outline marker lamp bulb
- M91 Elevated side light, front right
- T1acw 1-pin connector
- T1acx 1-pin connector
- T1acy 1-pin connector
- T1acz 1-pin connector
- T1ada 1-pin connector
- T1ato 1-pin connector
- T1atp 1-pin connector
- T1axl 1-pin connector
- T1axm 1-pin connector
- T73a 73-pin connector, black
- T73c 73-pin connector, black

374 Earth connection 9, in main wiring harness

B605 Connection 1, in interior wiring harness

W3 Connection in rear wiring harness

- * According to equipment
- *2 For left-hand drive models
- *3 For right-hand drive models

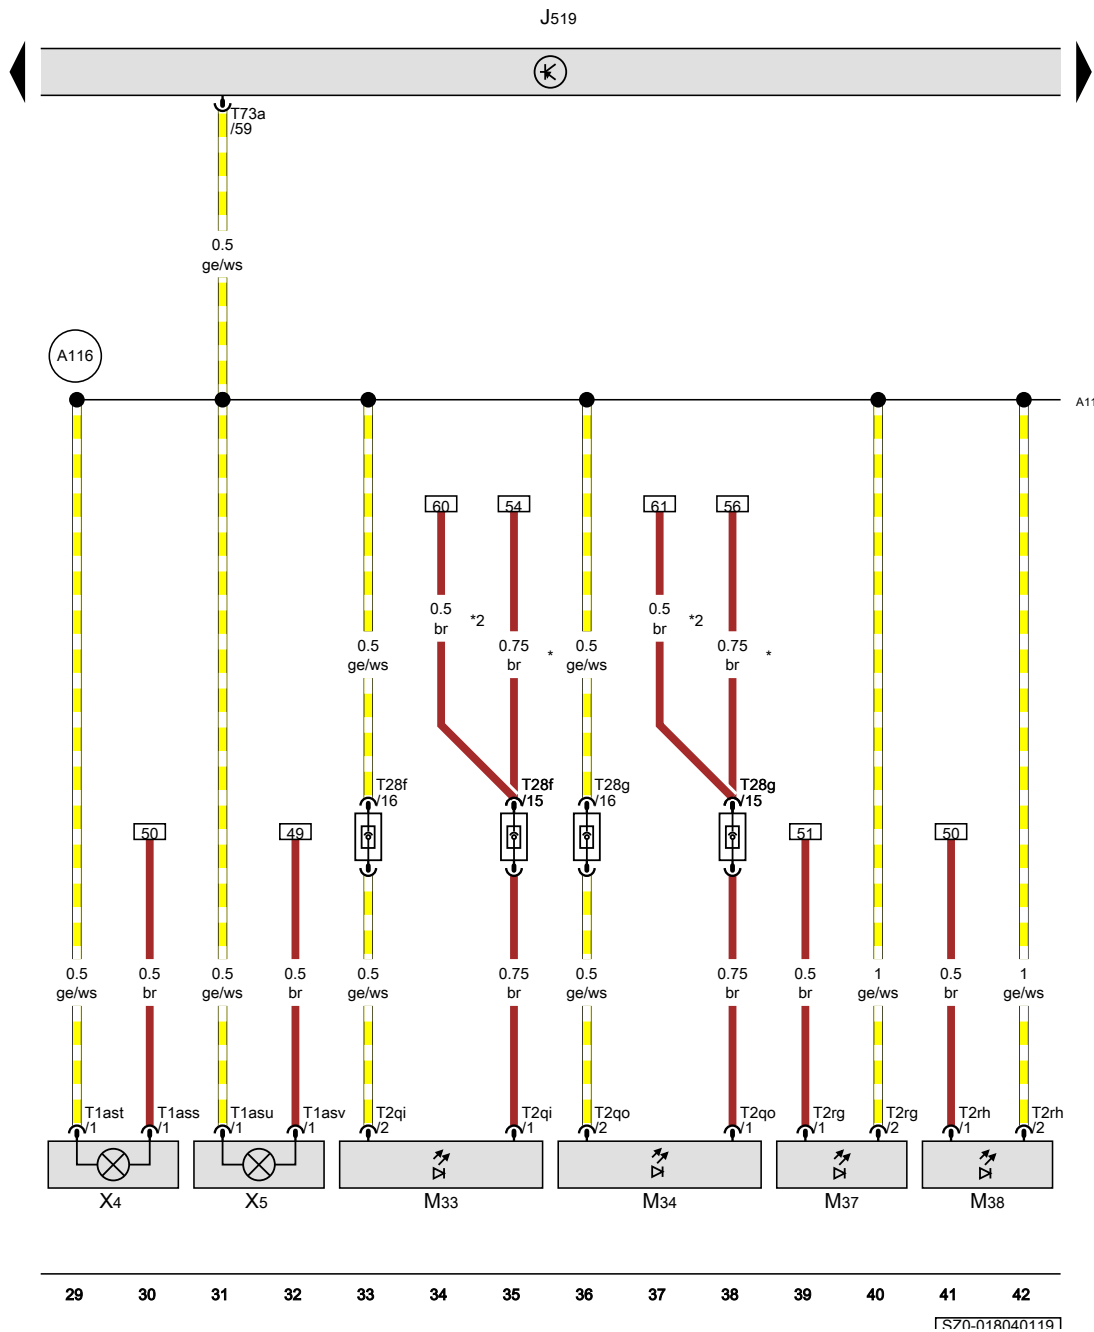


Onboard supply control unit, Front left side marker bulb, Front right side marker bulb, Rear left side marker bulb, Rear right side marker bulb, Left number plate light, Right number plate light

- J519 Onboard supply control unit
- M33 Front left side marker bulb
- M34 Front right side marker bulb
- M37 Rear left side marker bulb
- M38 Rear right side marker bulb
- T1ass 1-pin connector
- T1ast 1-pin connector
- T1asu 1-pin connector
- T1asv 1-pin connector
- T2qi 2-pin connector, black
- T2qo 2-pin connector, black
- T2rg 2-pin connector, black
- T2rh 2-pin connector, black
- T28f 28-pin connector, black
- T28g 28-pin connector, black
- T73a 73-pin connector, black
- X4 Left number plate light
- X5 Right number plate light

A116 Connection 2 (58d), in dash panel wiring harness


- * For left-hand drive models
- *2 For right-hand drive models

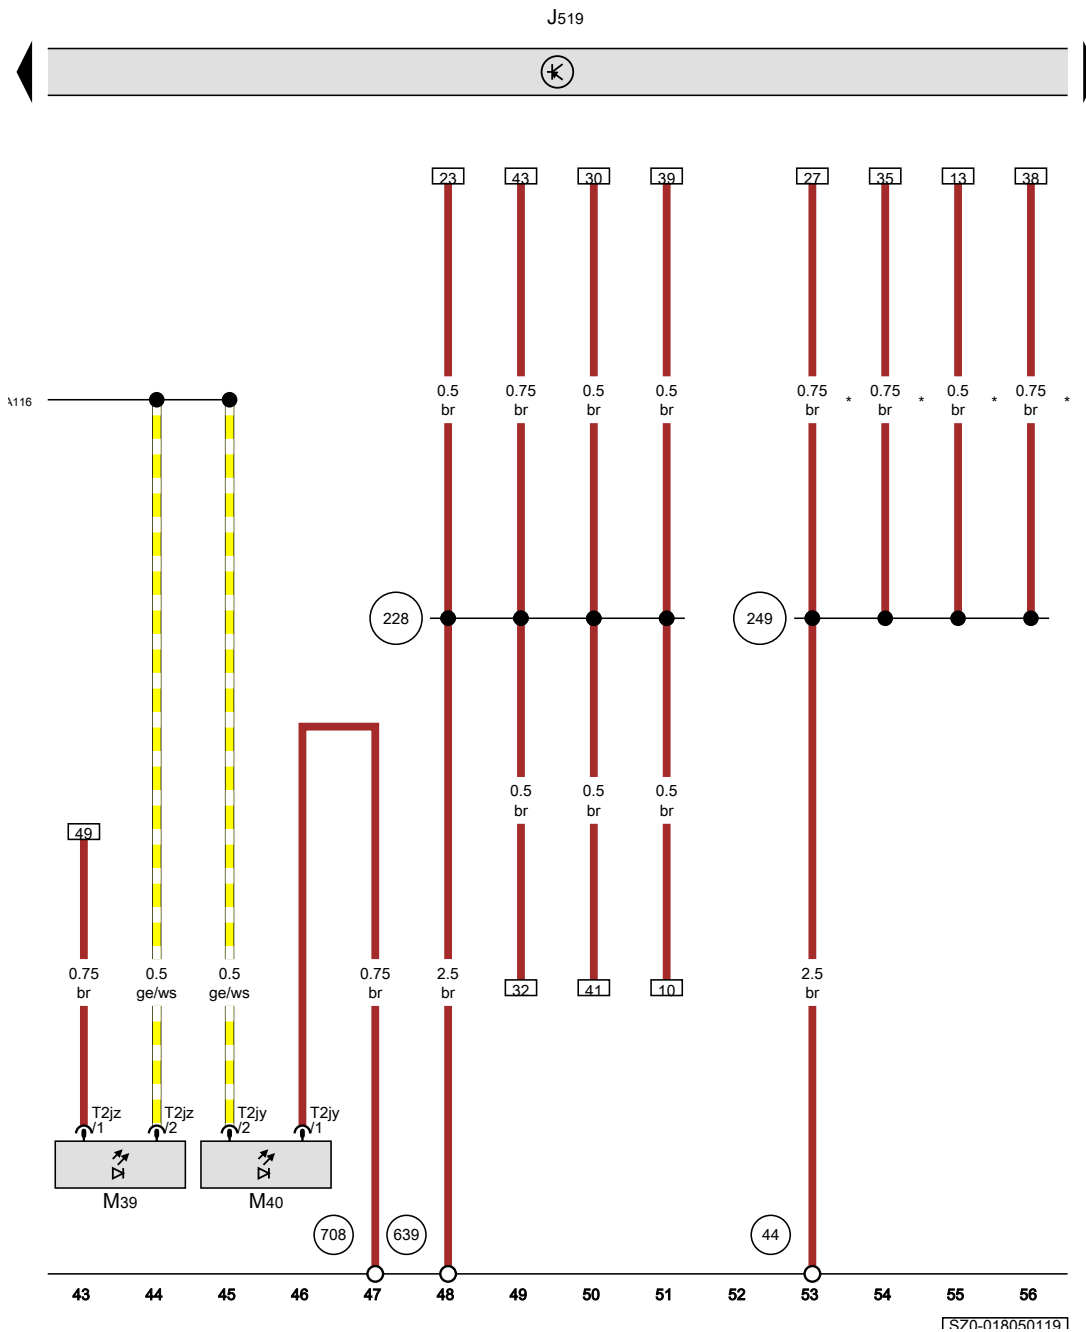

Onboard supply control unit, Centre left side marker bulb, Centre right side marker bulb

- J519 Onboard supply control unit
- M39 Centre left side marker bulb
- M40 Centre right side marker bulb
- T2jy 2-pin connector, black
- T2jz 2-pin connector, black

- 44 Earth point, lower part of left A-pillar
- 228 Connection, in harness
- 249 Earth connection 2, in interior wiring harness
- 639 Earth point, left A-pillar
- 708 Earth point 2 on rear right longitudinal member
- A116 Connection 2 (58d), in dash panel wiring harness
- * For left-hand drive models

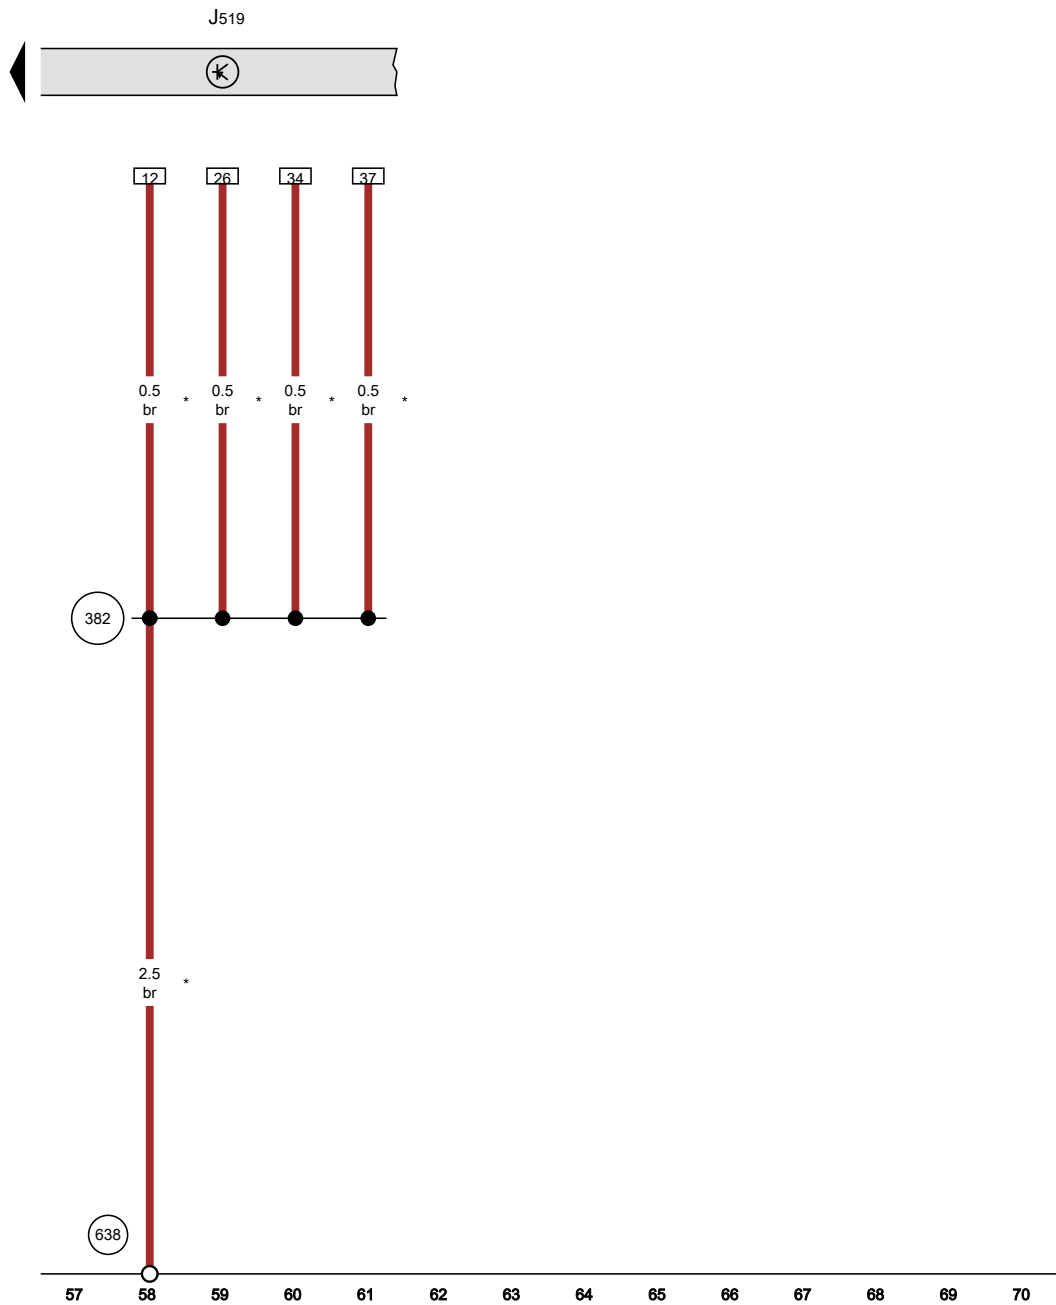

Onboard supply control unit


- J519 Onboard supply control unit
- 382 Earth connection 17, in main wiring harness
- 638 Earth point, on right A-pillar
- * For right-hand drive models


LED headlights

From September 2016

Onboard supply control unit, Front left headlight

- A31 Output module 1 for left LED headlight
- A32 Output module 2 for left LED headlight
- J519 Onboard supply control unit
- J667 Output module for left headlight
- J892 Output module 2 for left headlight
- L176 Left LED module for daytime running light and side light
- MX1 Front left headlight
- M5 Front left turn signal bulb
- T14am 14-pin connector, black
- T46b 46-pin connector, black
- T73c 73-pin connector, black
- V48 Left headlight range control motor
- 414 Earth connection (headlight range control), in interior wiring harness
- C12 Positive connection 1, in headlight wiring harness
- C15 Connection 1, in headlight wiring harness
- * Up to November 2017
- *2 Up to May 2017
- *3 From May 2017
- *4 From November 2017

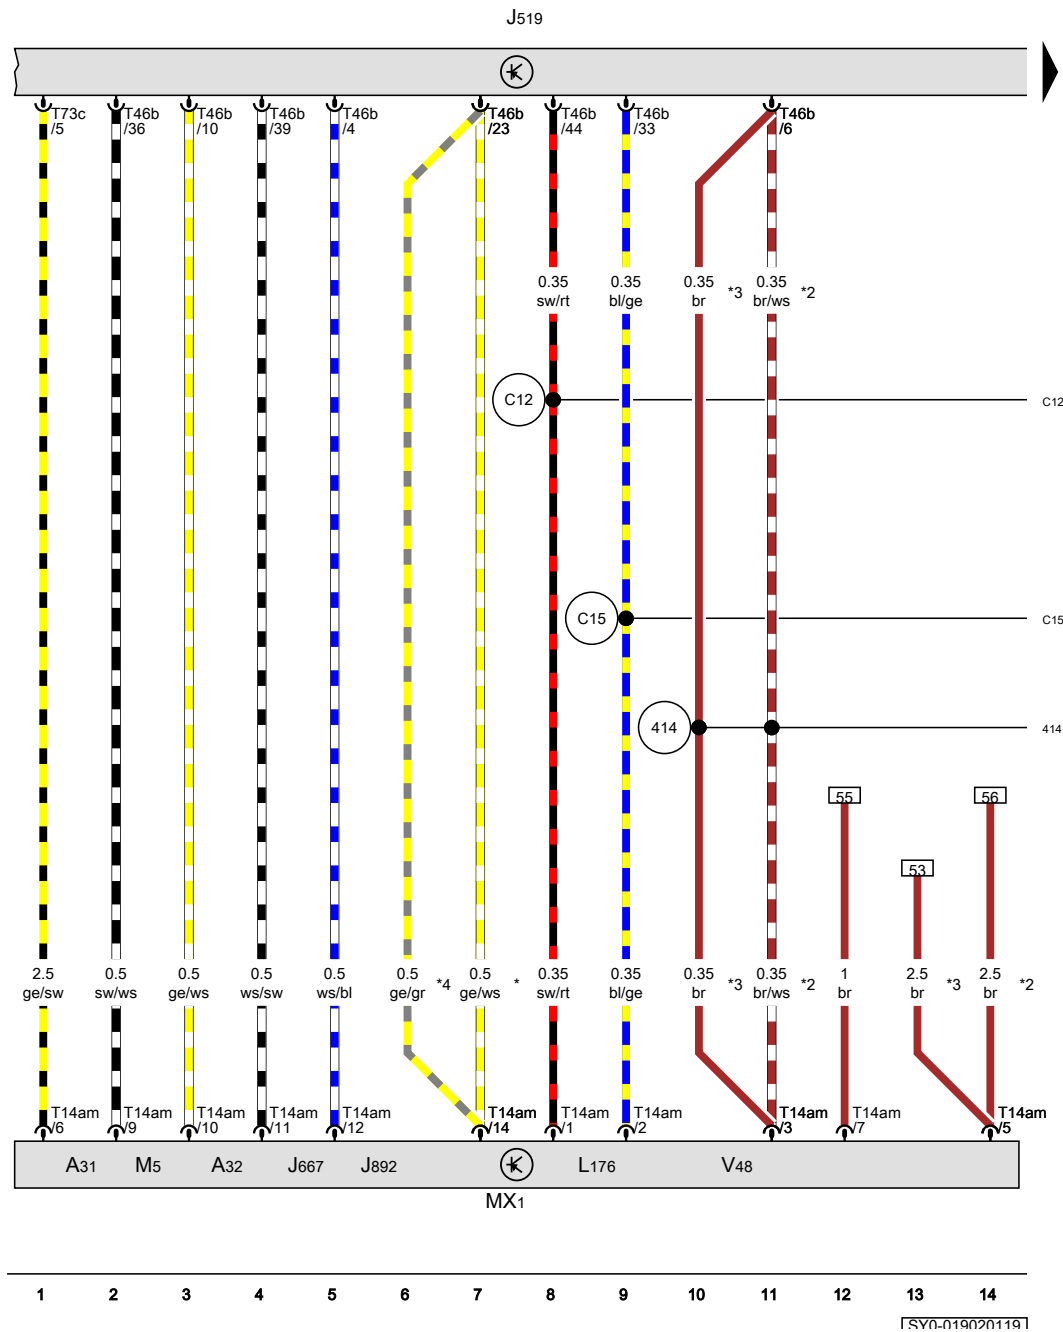

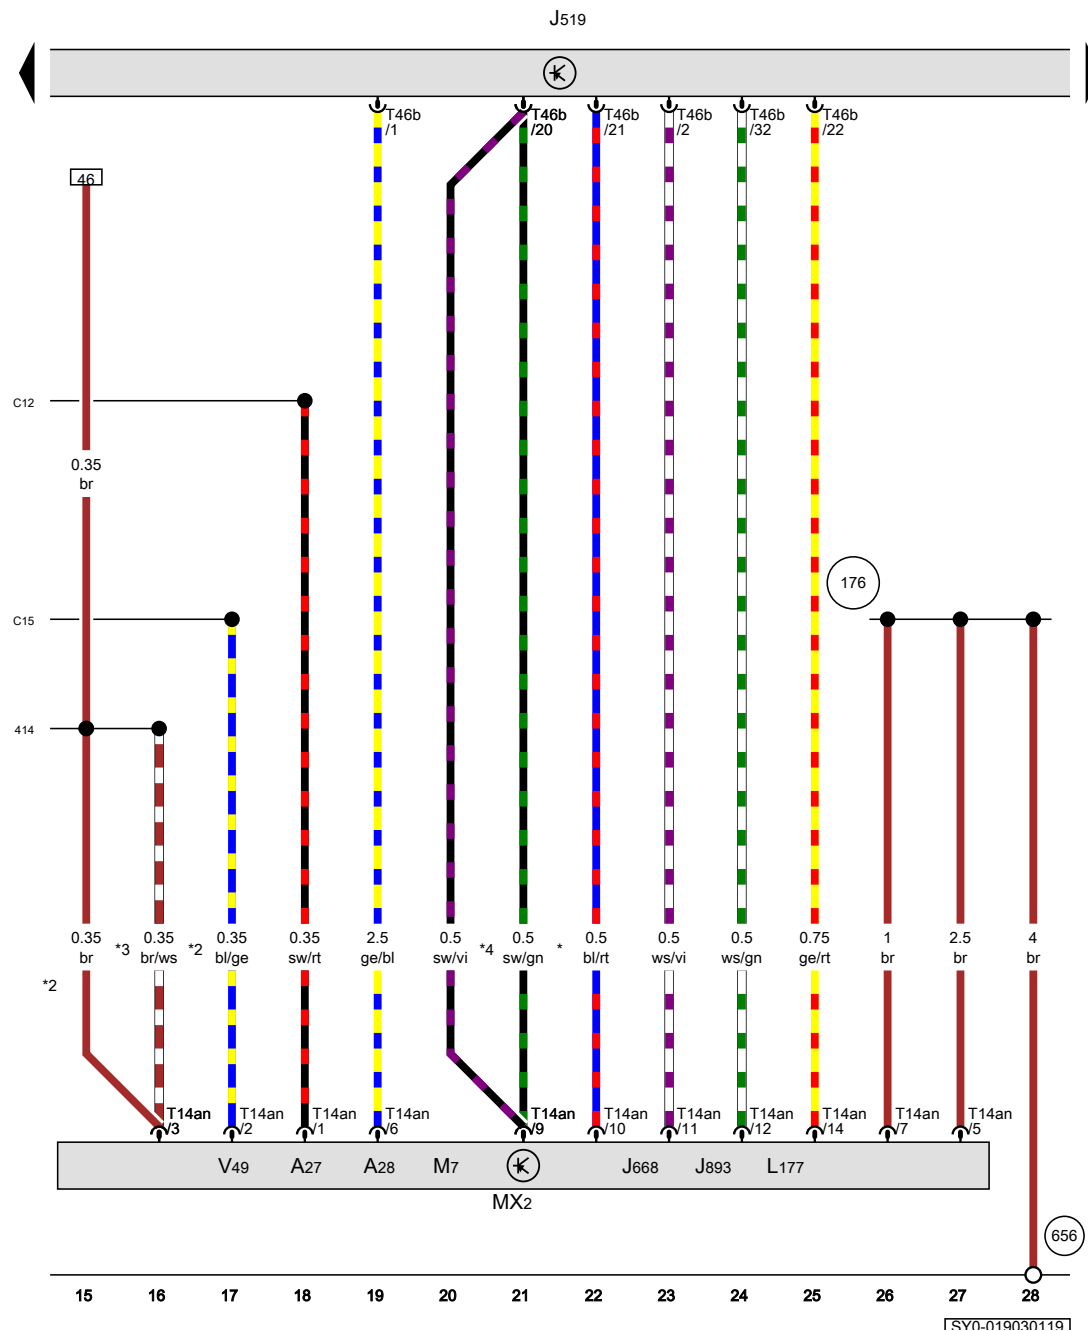


Onboard supply control unit, Front right headlight

- A27 Output module 1 for right LED headlight
- A28 Output module 2 for right LED headlight
- J519 Onboard supply control unit
- J668 Output module for right headlight
- J893 Output module 2 for right headlight
- L177 Right LED module for daytime running light and side light
- MX2 Front right headlight
- M7 Front right turn signal bulb
- T14an 14-pin connector, black
- T46b 46-pin connector, black
- V49 Right headlight range control motor

- 176 Earth connection, in right headlight wiring harness
- 414 Earth connection (headlight range control), in interior wiring harness
- 656 Earth point, on right headlight
- C12 Positive connection 1, in headlight wiring harness
- C15 Connection 1, in headlight wiring harness
- * Up to November 2017
- *2 Up to May 2017
- *3 From May 2017
- *4 From November 2017


ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

Rotary light switch, Onboard supply control unit

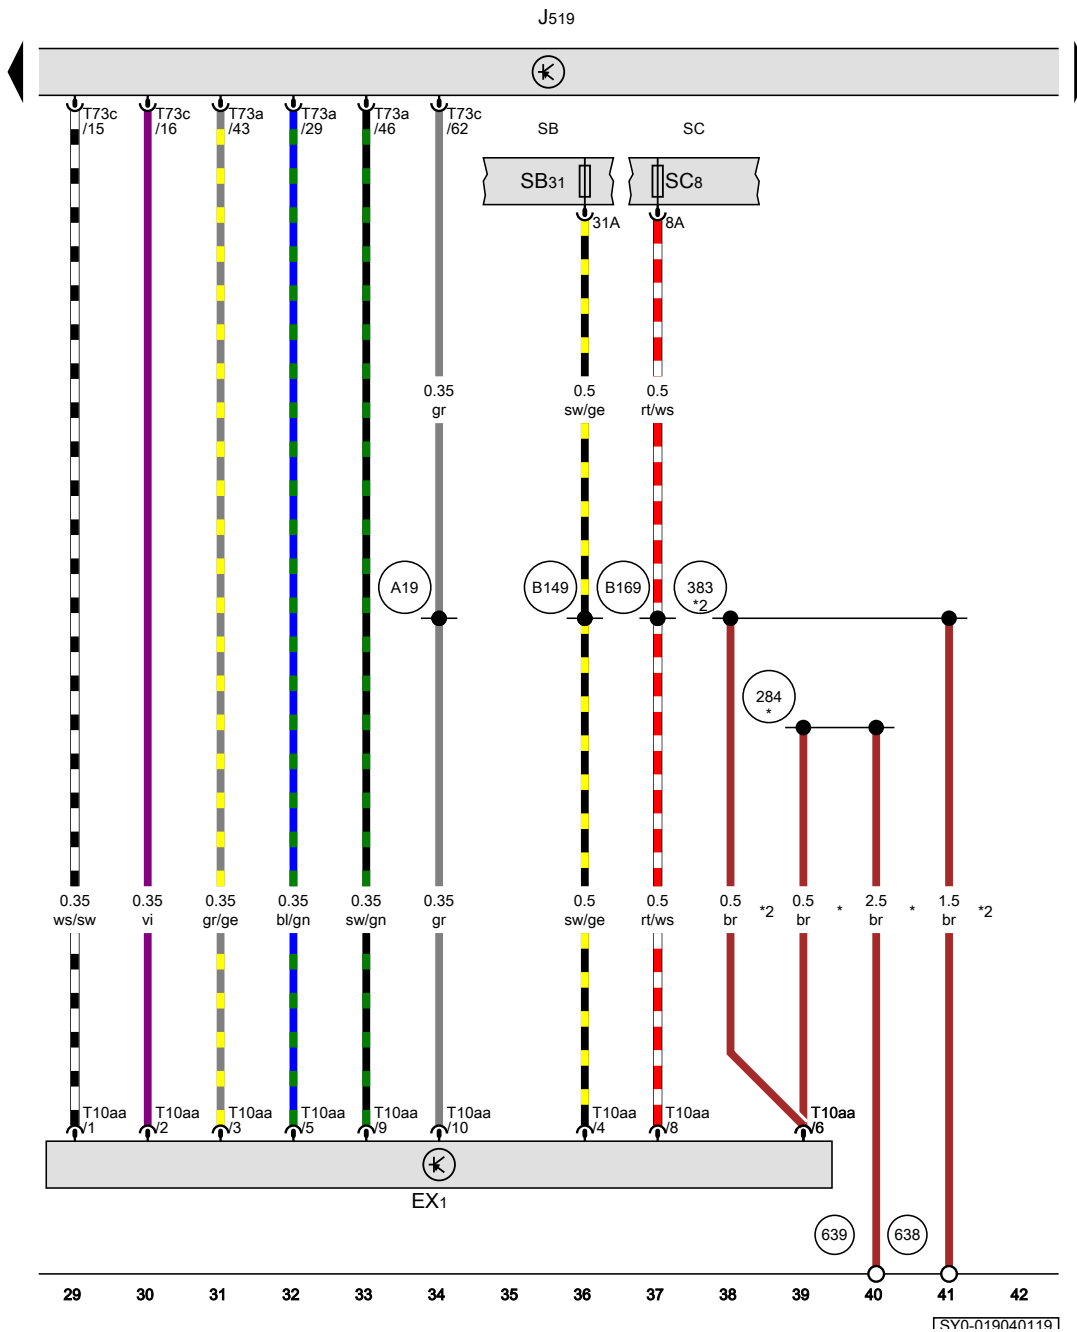

- EX1 Rotary light switch
- J519 Onboard supply control unit
- SB Fuse holder B
- SB31 Fuse 31 on fuse holder B
- SC Fuse holder C
- SC8 Fuse 8 on fuse holder C
- T10aa 10-pin connector, red
- T73a 73-pin connector, black
- T73c 73-pin connector, black
- 284 Earth connection 6, in interior wiring harness
- 383 Earth connection 18, in main wiring harness
- 638 Earth point, on right A-pillar
- 639 Earth point, left A-pillar
- A19 Connection (58d), in dash panel wiring harness
- B149 Positive connection 2 (15a), in interior wiring harness
- B169 Positive connection 1 (30), in interior wiring harness
- * For left-hand drive models
- *2 For right-hand drive models

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

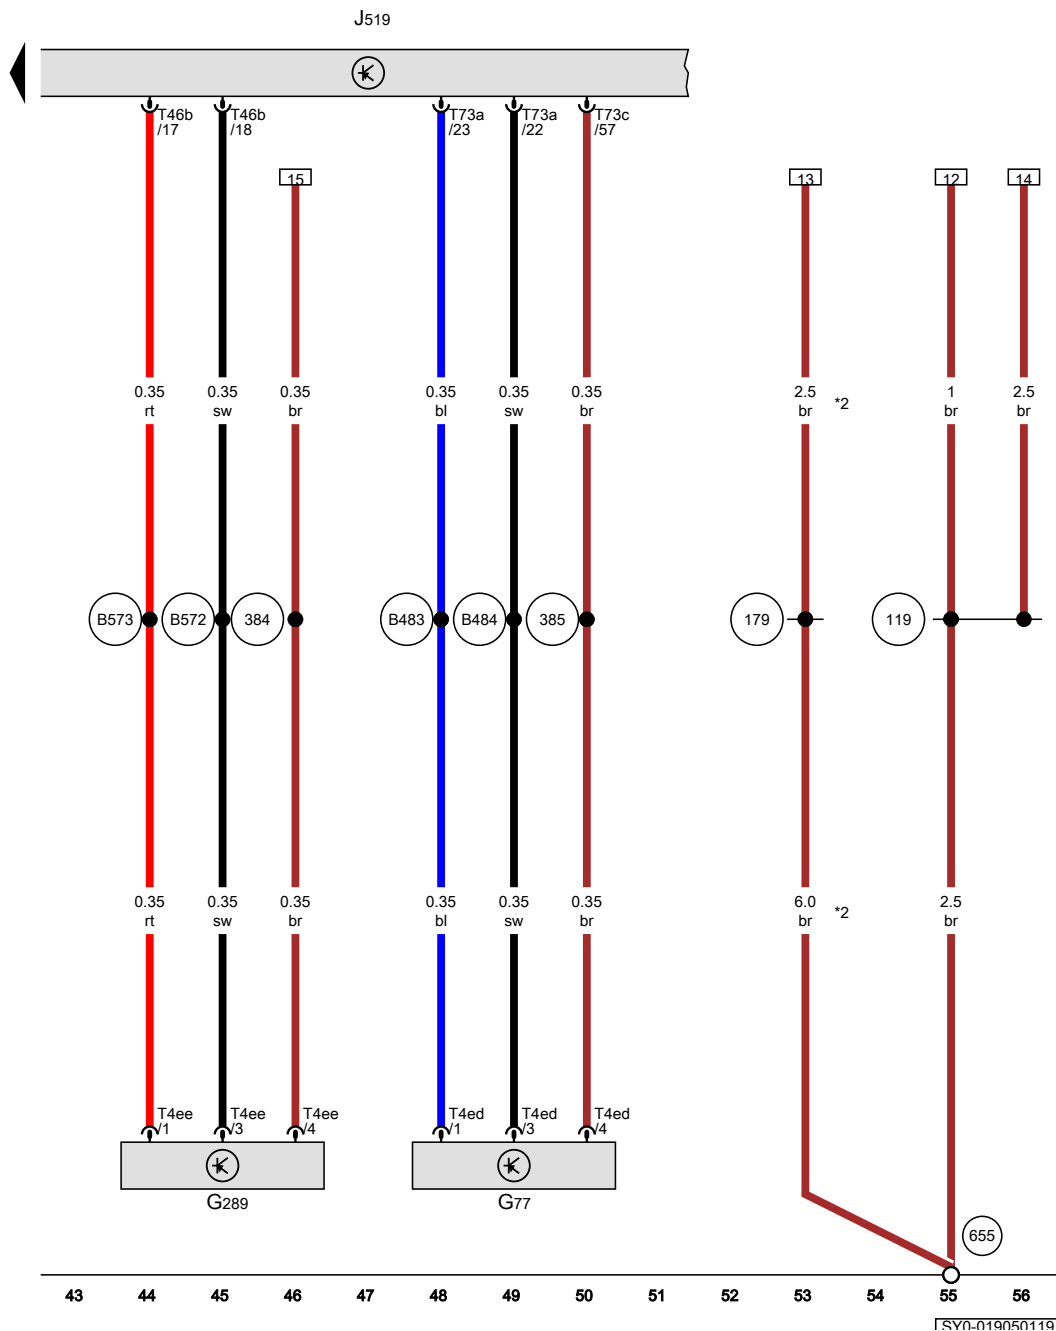

Rear right vehicle level sender, Front right vehicle level sender, Onboard supply control unit

- G77 Rear right vehicle level sender
- G289 Front right vehicle level sender
- J519 Onboard supply control unit
- T4ed 4-pin connector, black
- T4ee 4-pin connector, black
- T46b 46-pin connector, black
- T73a 73-pin connector, black
- T73c 73-pin connector, black


- 119 Earth connection 1, in headlight wiring harness
- 179 Earth connection, in left headlight wiring harness
- 384 Earth connection 19, in main wiring harness
- 385 Earth connection 20, in main wiring harness
- 655 Earth point, on left headlight
- B483 Connection 19, in main wiring harness
- B484 Connection 20, in main wiring harness
- B572 Connection 39, in main wiring harness
- B573 Connection 40, in main wiring harness

* Up to May 2017
*2 From May 2017

Reversing camera (Rear Assist)

From September 2016

Control unit 1 for information electronics, Reversing camera

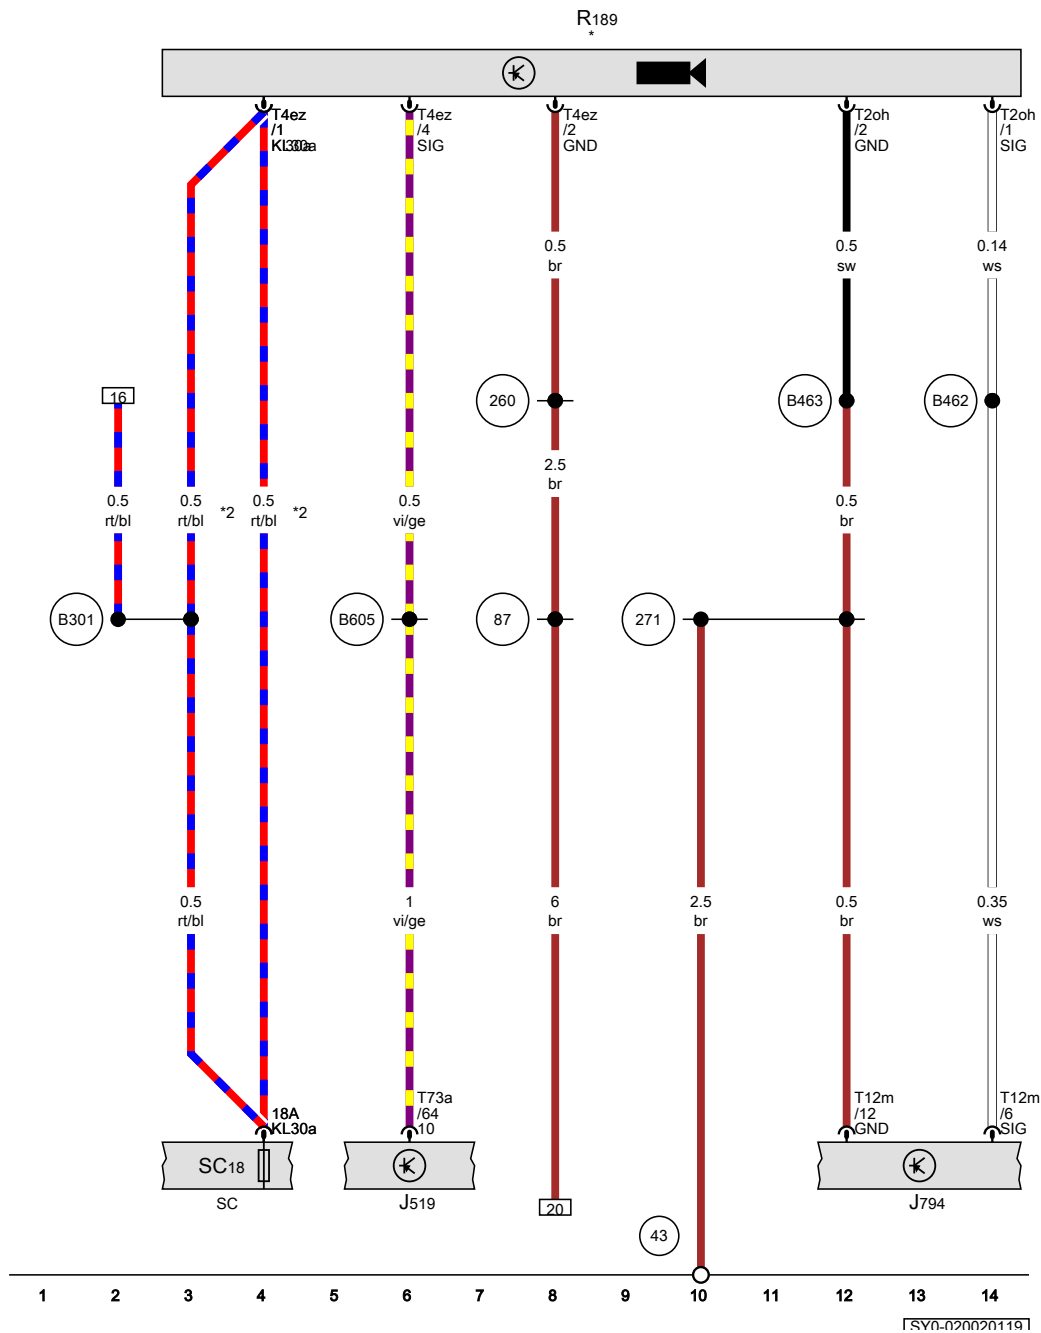


- J519 Onboard supply control unit
- J794 Control unit 1 for information electronics
- R189 Reversing camera, in roof
- SC Fuse holder C
- SC18 Fuse 18 on fuse holder C
- T2oh 2-pin connector, grey
- T4ez 4-pin connector, black
- T12m 12-pin connector, blue
- T73a 73-pin connector, black

- 43 Earth point, lower part of right A-pillar
- 87 Earth connection 2, in rear wiring harness
- 260 Earth connection, in tail light cluster wiring harness
- 271 Earth connection 3, in front wiring harness
- B301 Positive connection 5 (30), in main wiring harness
- B462 Connection 1 (video), in main wiring harness
- B463 Connection 2 (video), in main wiring harness
- B605 Connection 1, in interior wiring harness

- * Pre-wired component
- *2 According to equipment

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink


Centre switch module 4 in dash panel, Park assist steering button, Parking aid control unit, Camera for trailer manoeuvring system

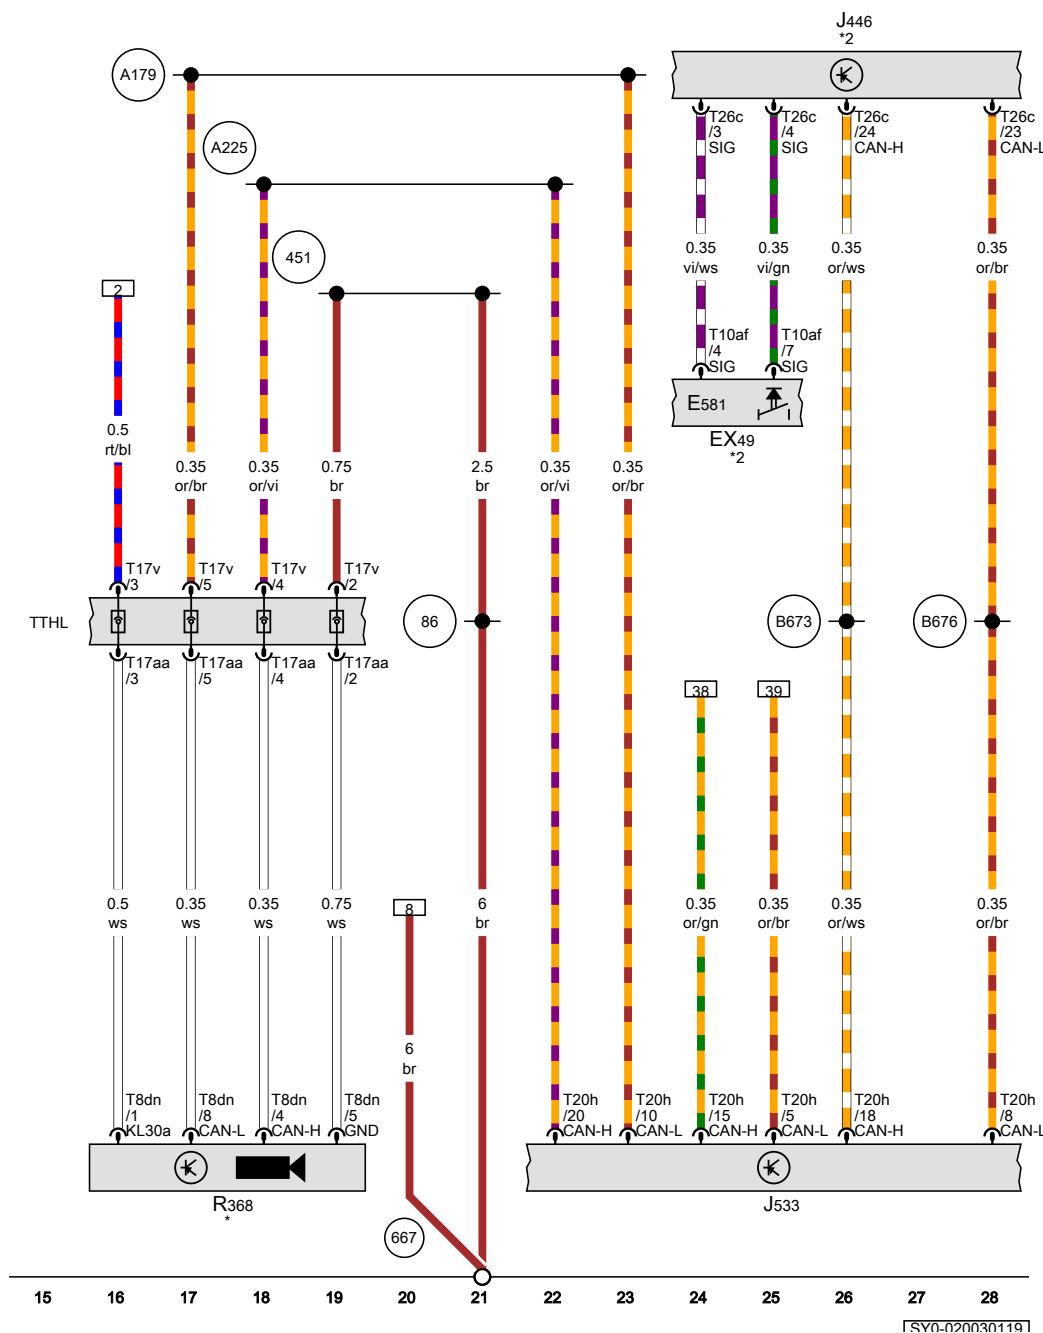

- EX49 Centre switch module 4 in dash panel
- E581 Park assist steering button
- J446 Parking aid control unit
- J533 Data bus diagnostic interface
- R368 Camera for trailer manoeuvring system, Left rear wing door
- T8dn 8-pin connector, black
- T10af 10-pin connector, red
- T17aa 17-pin connector, black
- T17v 17-pin connector, black
- T20h 20-pin connector, red
- T26c 26-pin connector, black
- TTHL Coupling point for rear left door
- 86 Earth connection 1, in rear wiring harness
- 451 Earth connection 1 in rear right side panel
- 667 Earth point, on rear left of roof
- A179 Connection (infotainment CAN bus, low), in dash panel wiring harness
- A225 Connection 2 (infotainment CAN bus, high) in dash panel wiring harness
- B673 Connection 2 (running gear/dash panel insert CAN bus, high), in main wiring harness
- B676 Connection 1 (running gear/dash panel insert CAN bus, low), in main wiring harness
- * Pre-wired component
- *2 see applicable current flow diagram for parking aid (PDC)

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

Exterior mirror adjuster, Trailer detector control unit, Driver door control unit, Dash panel insert

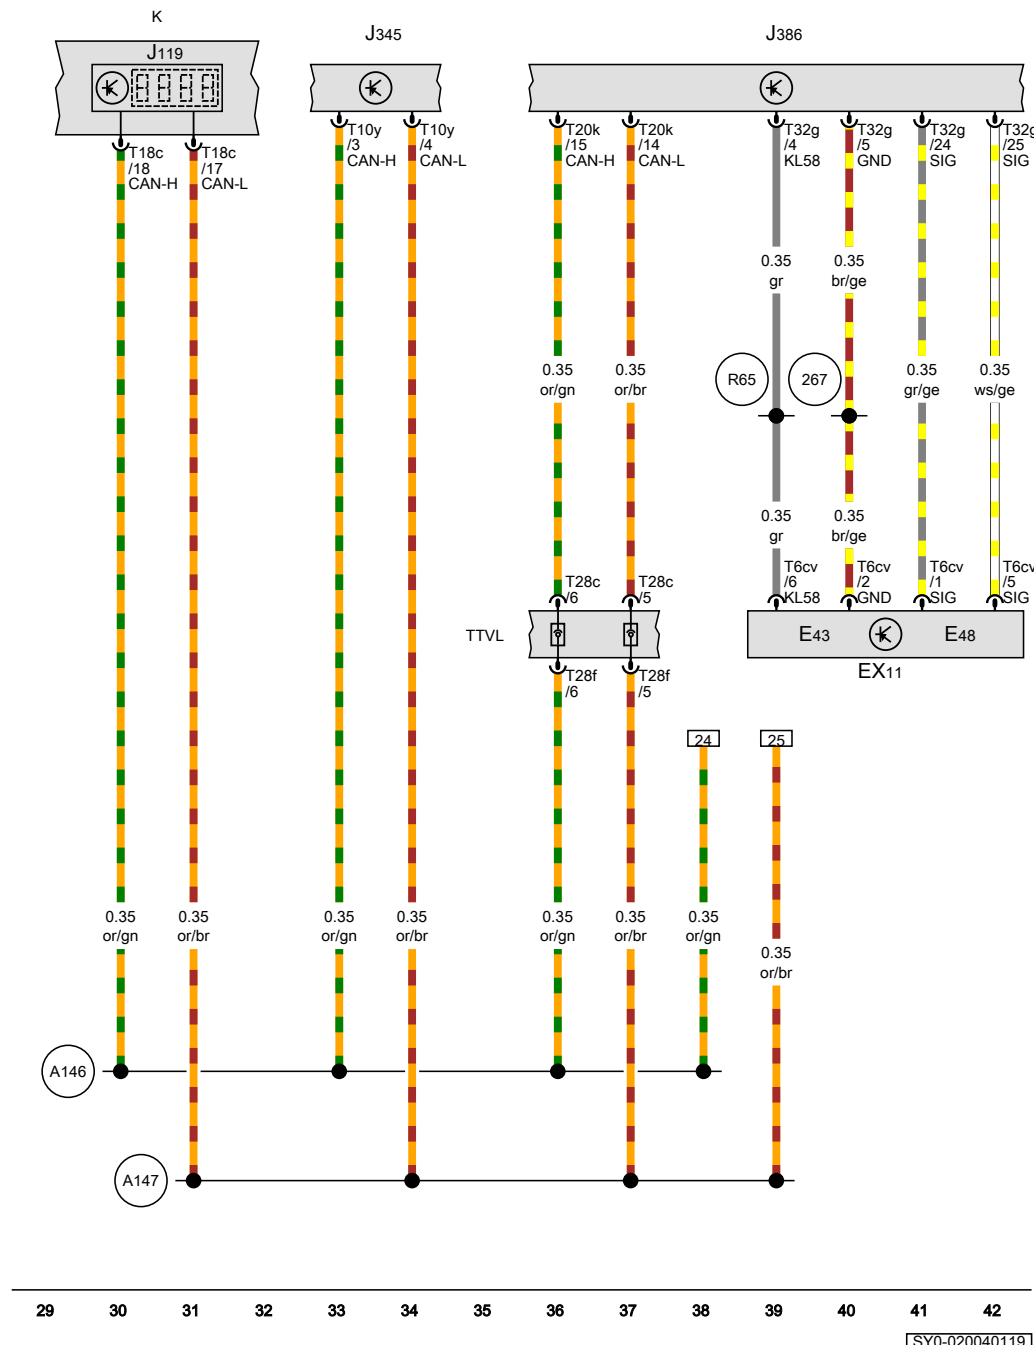

- EX11 Exterior mirror adjuster
- E43 Mirror adjustment switch
- E48 Mirror adjustment changeover switch
- J119 Multifunction indicator
- J345 Trailer detector control unit
- J386 Driver door control unit
- K Dash panel insert
- T6cv 6-pin connector, brown
- T10y 10-pin connector, black
- T18c 18-pin connector, black
- T20k 20-pin connector, black
- T28c 28-pin connector, black
- T28f 28-pin connector, black
- T32g 32-pin connector, blue
- TTVL Coupling point for front left door
- 267 Earth connection 2, in drive side door wiring harness
- A146 Connection (convenience CAN bus, high), in dash panel wiring harness
- A147 Connection (convenience CAN bus, low), in dash panel wiring harness
- R65 Positive connection (58), in driver door wiring harness

Preparation for reversing camera system , (KA8)


From September 2016

Onboard supply control unit, Control unit 1 for information electronics, Fuse holder C

- J519 Onboard supply control unit
- J794 Control unit 1 for information electronics
- SC Fuse holder C
- SC18 Fuse 18 on fuse holder C
- T200 2-pin connector, grey, on coupling point for roof, on left B-pillar
- T4fh 4-pin connector, black, on coupling point for roof, on left B-pillar
- T12m 12-pin connector, blue
- T73a 73-pin connector, black


- 43 Earth point, lower part of right A-pillar
- 271 Earth connection 3, in front wiring harness
- 284 Earth connection 6, in interior wiring harness
- 639 Earth point, left A-pillar
- B462 Connection 1 (video), in main wiring harness
- B463 Connection 2 (video), in main wiring harness
- B605 Connection 1, in interior wiring harness

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

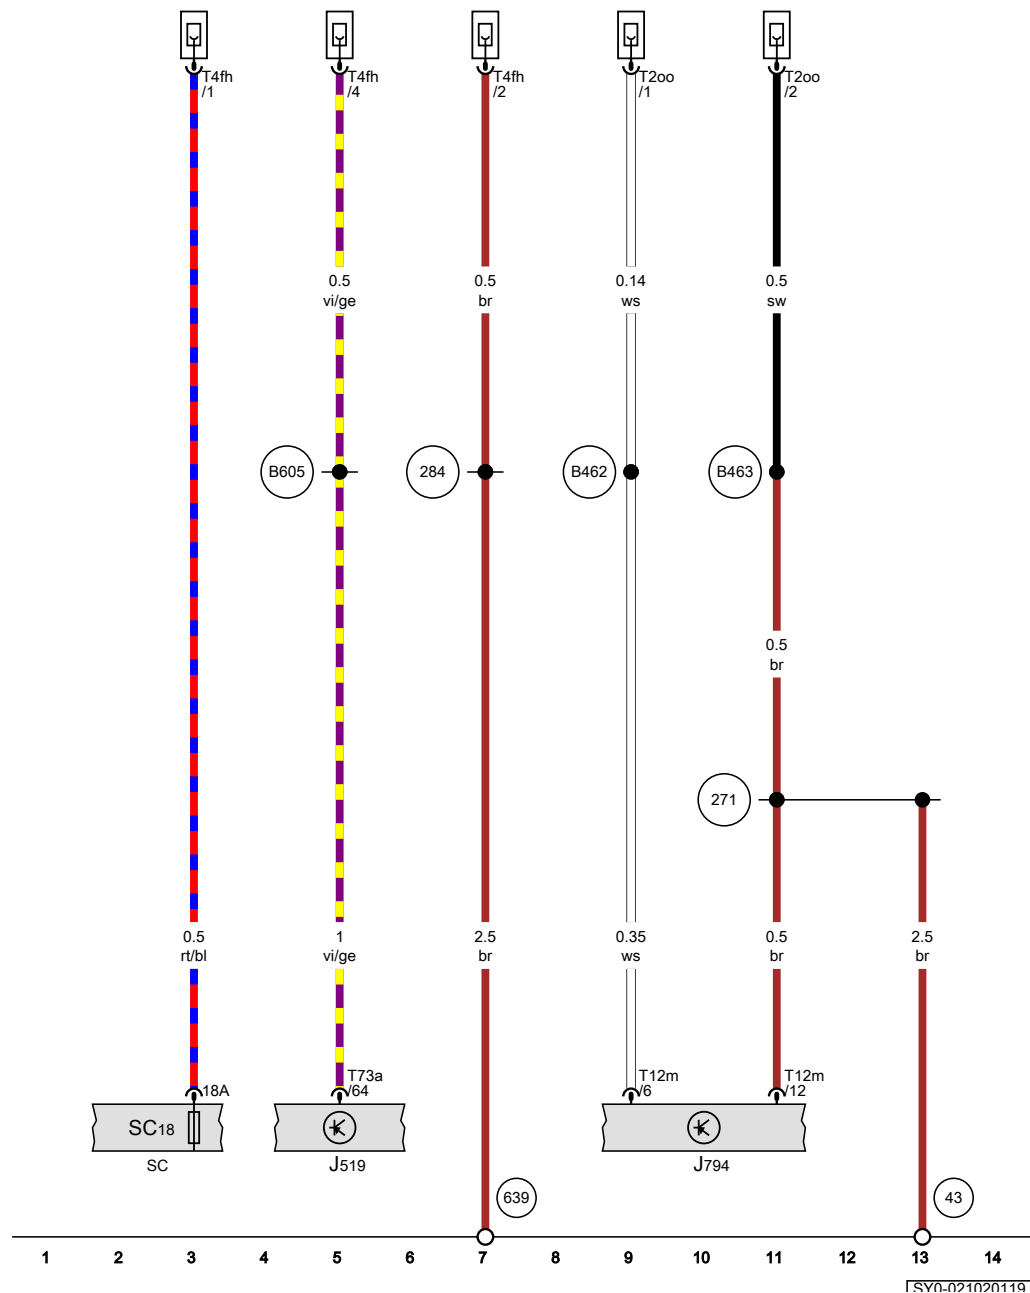

Tyre Pressure Monitoring System

From September 2016

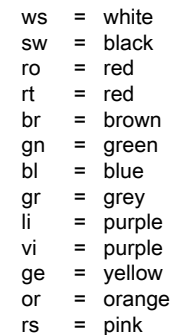


- 374 Earth connection 9, in main wiring harness
- 711 Earth point 3 on rear left longitudinal member
- B108 Connection 1 (CAN bus extended high), in main wiring harness
- B109 Connection 1 (CAN bus extended low), in main wiring harness

Passenger compartment heater and ventilation system

From September 2016


Heater and air conditioning controls, Fresh air blower control unit, Fresh air blower

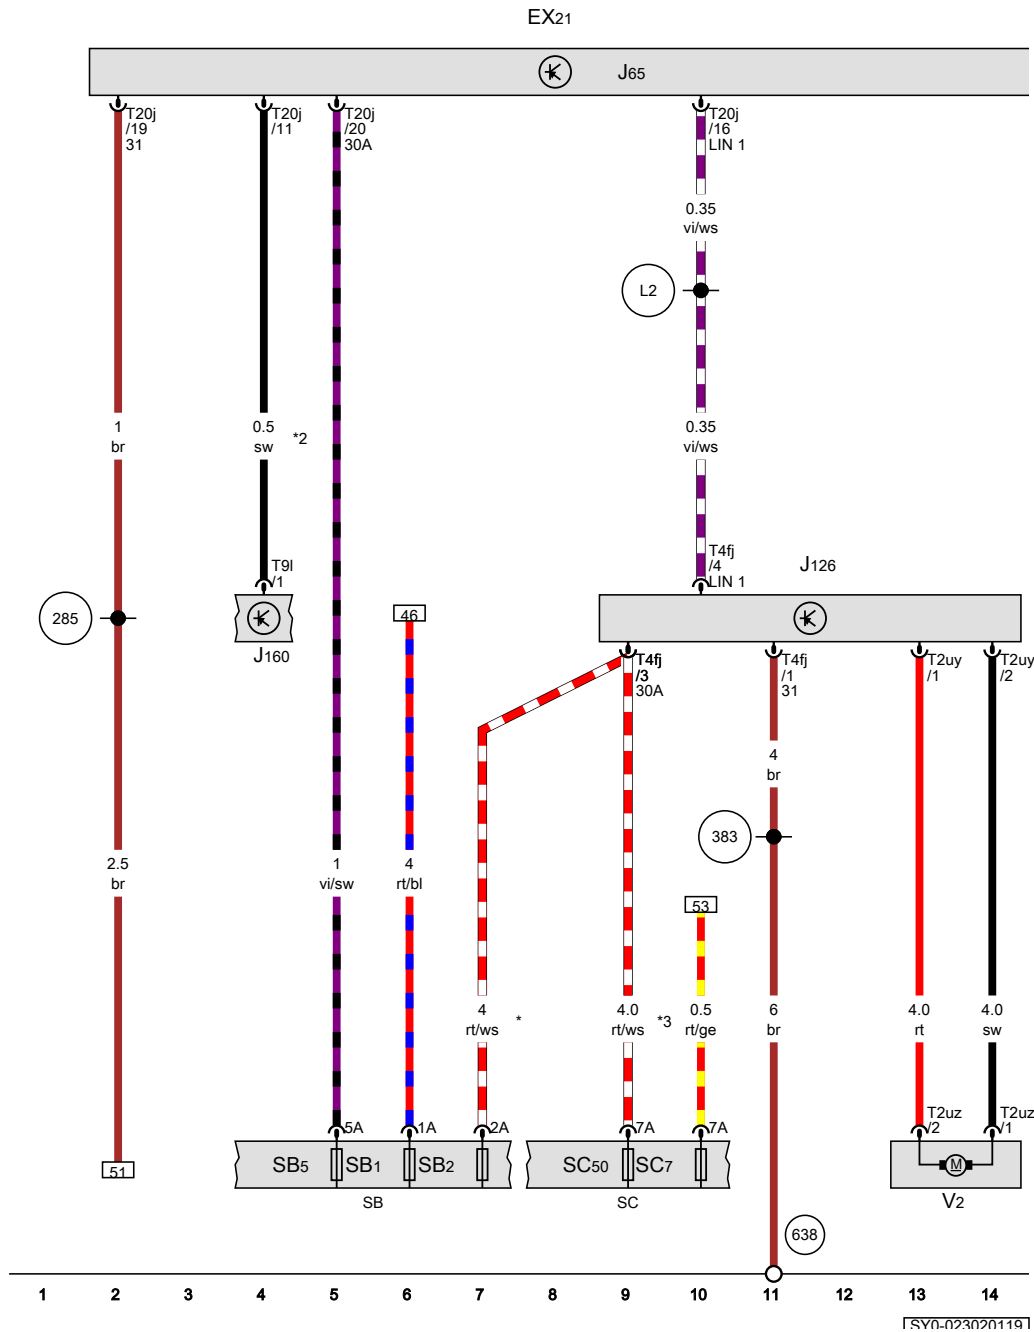

- | | |
|------|--------------------------------------|
| EX21 | Heater and air conditioning controls |
| J65 | Heater control unit |
| J126 | Fresh air blower control unit |
| J160 | Circulation pump relay |
| SB | Fuse holder B |
| SB1 | Fuse 1 on fuse holder B |
| SB2 | Fuse 2 on fuse holder B |
| SB5 | Fuse 5 on fuse holder B |
| SC | Fuse holder C |
| SC7 | Fuse 7 on fuse holder C |
| SC50 | Fuse 50 on fuse holder C |
| T2uy | 2-pin connector, black |
| T2uz | 2-pin connector |
| T4fj | 4-pin connector, black |
| T9l | 9-pin connector, black |
| T20j | 20-pin connector, black |
| V2 | Fresh air blower |

- 285 Earth connection 7, in interior wiring harness
 - 383 Earth connection 18, in main wiring harness
 - 638 Earth point, on right A-pillar
 - L2 Connection in air conditioning system wiring harness
- * Up to May 2017
*2 Only models with auxiliary coolant heater
*3 From May 2017


- ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink

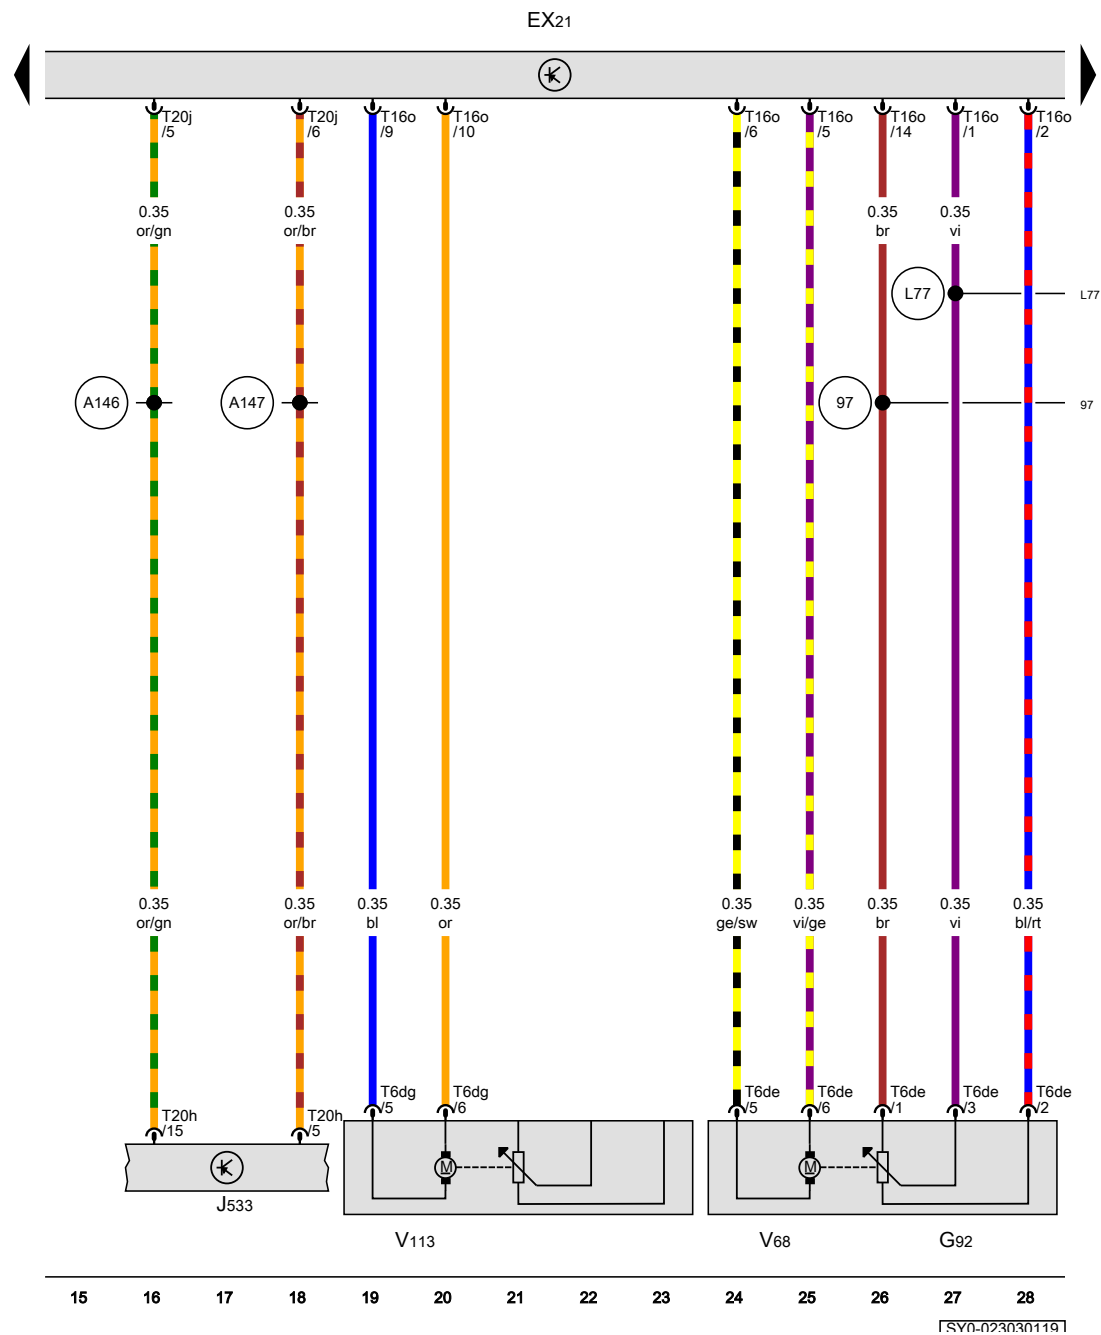

Heater and air conditioning controls, Temperature flap control motor, Air recirculation flap control motor

- EX21 Heater and air conditioning controls
- G92 Potentiometer for temperature flap control motor
- J533 Data bus diagnostic interface
- T6de 6-pin connector, black
- T6dg 6-pin connector, black
- T16o 16-pin connector
- T20h 20-pin connector, red
- T20j 20-pin connector, black
- V68 Temperature flap control motor
- V113 Air recirculation flap control motor

- 97 Earth connection 1, in air conditioning system wiring harness
- A146 Connection (convenience CAN bus, high), in dash panel wiring harness
- A147 Connection (convenience CAN bus, low), in dash panel wiring harness
- L77 Connection, in fresh air blower wiring harness

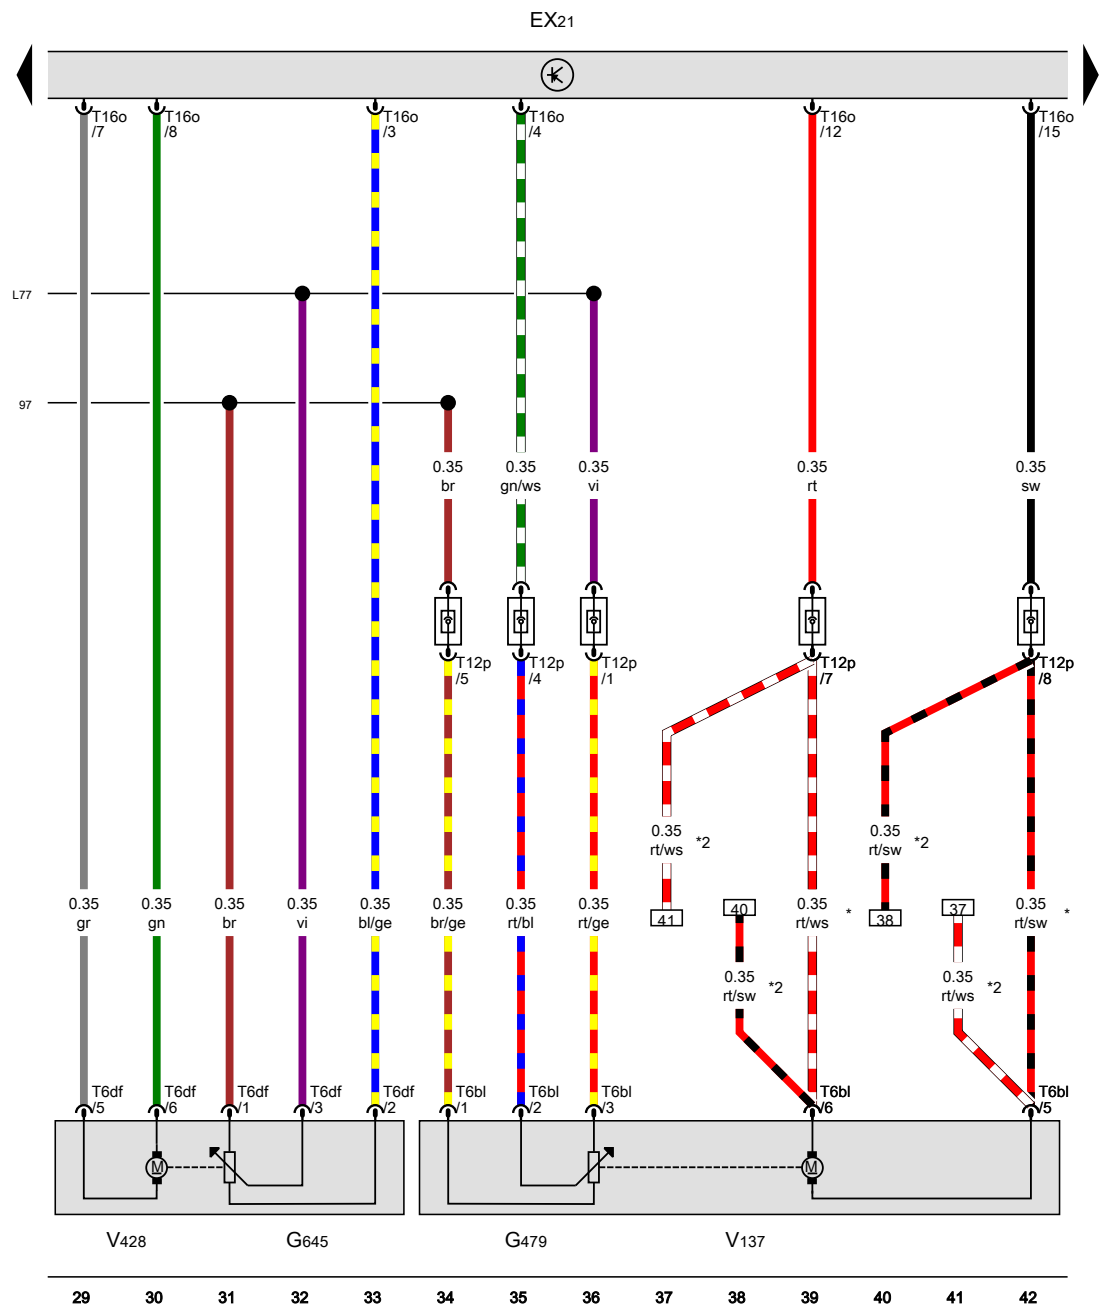


Heater and air conditioning controls, Rear temperature flap control motor, Air distribution flap control motor

- EX21 Heater and air conditioning controls
- G479 Potentiometer for rear temperature flap motor
- G645 Potentiometer for air distribution flap control motor
- T6bl 6-pin connector, blue
- T6df 6-pin connector, black
- T12p 12-pin connector, black
- T16o 16-pin connector
- V137 Rear temperature flap control motor
- V428 Air distribution flap control motor

- 97 Earth connection 1, in air conditioning system wiring harness
- L77 Connection, in fresh air blower wiring harness
- * Up to May 2017
- *2 From May 2017

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

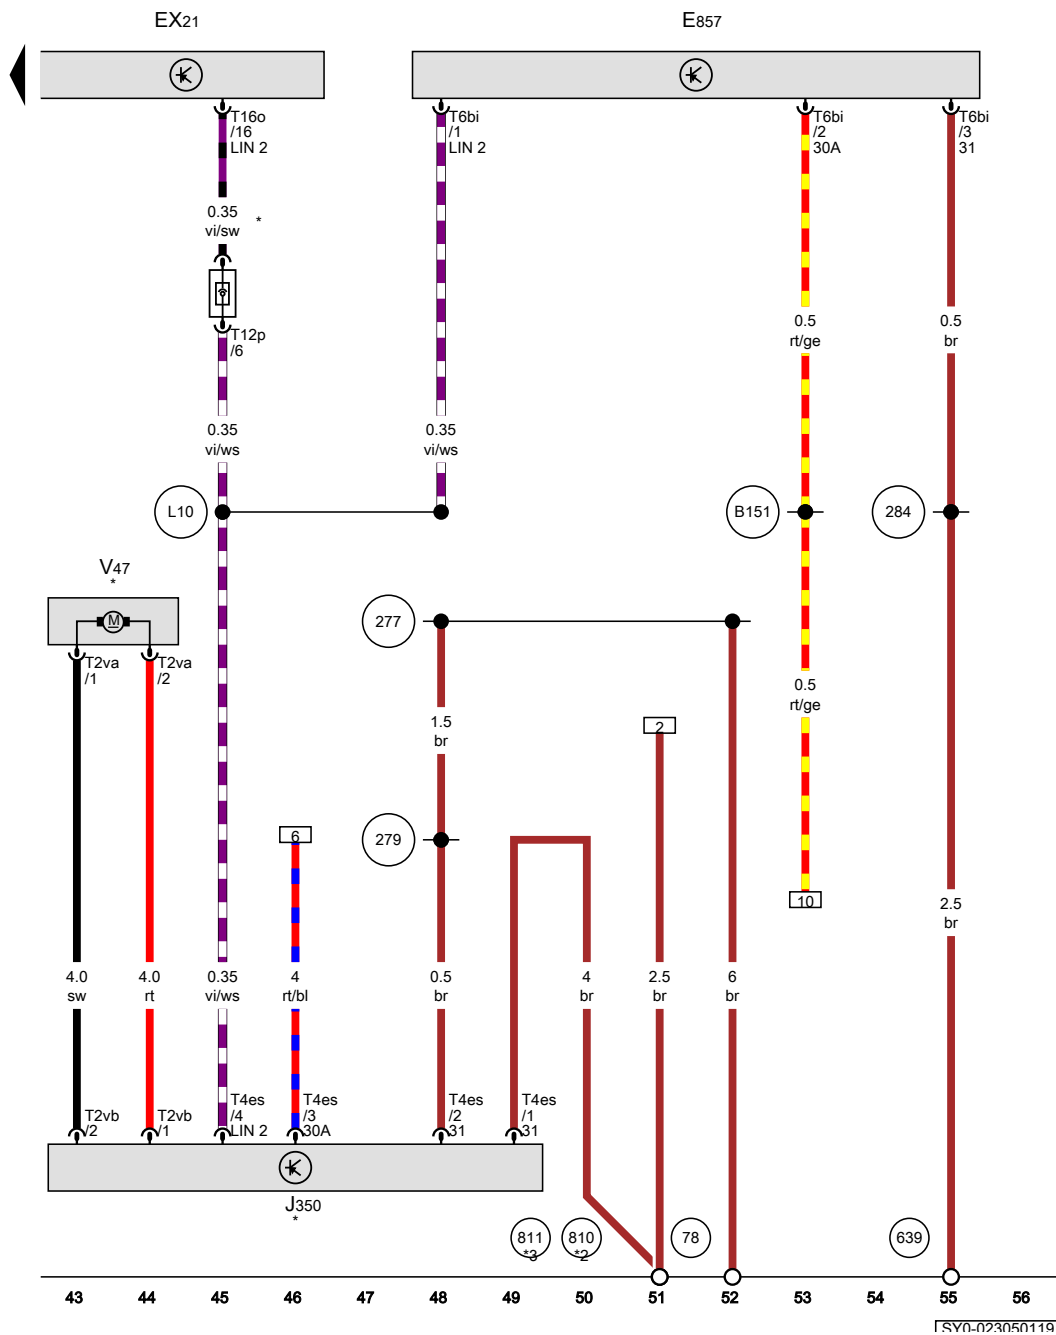


Heater and air conditioning controls, Additional display and operating unit 1, Warm air blower control unit, Rear warm air blower

- EX21 Heater and air conditioning controls
- E857 Additional display and operating unit 1
- J350 Warm air blower control unit
- T2va 2-pin connector, black
- T2vb 2-pin connector, black
- T4es 4-pin connector, black
- T6bi 6-pin connector, black
- T12p 12-pin connector, black
- T16o 16-pin connector
- V47 Rear warm air blower
- 78 Earth point, lower part of right B-pillar
- 277 Earth connection 3, in interior wiring harness
- 279 Earth connection 5, in interior wiring harness
- 284 Earth connection 6, in interior wiring harness
- 639 Earth point, left A-pillar
- 810 Earth point on central tube for dash panel, centre left
- 811 Earth point on central tube for dash panel, centre right
- B151 Positive connection 3 (30a), in interior wiring harness
- L10 Connection 2, in air conditioning system wiring harness
- * For models with 2nd heat exchanger
- *2 For left-hand drive models
- *3 For right-hand drive models

Air conditioning system

From September 2016

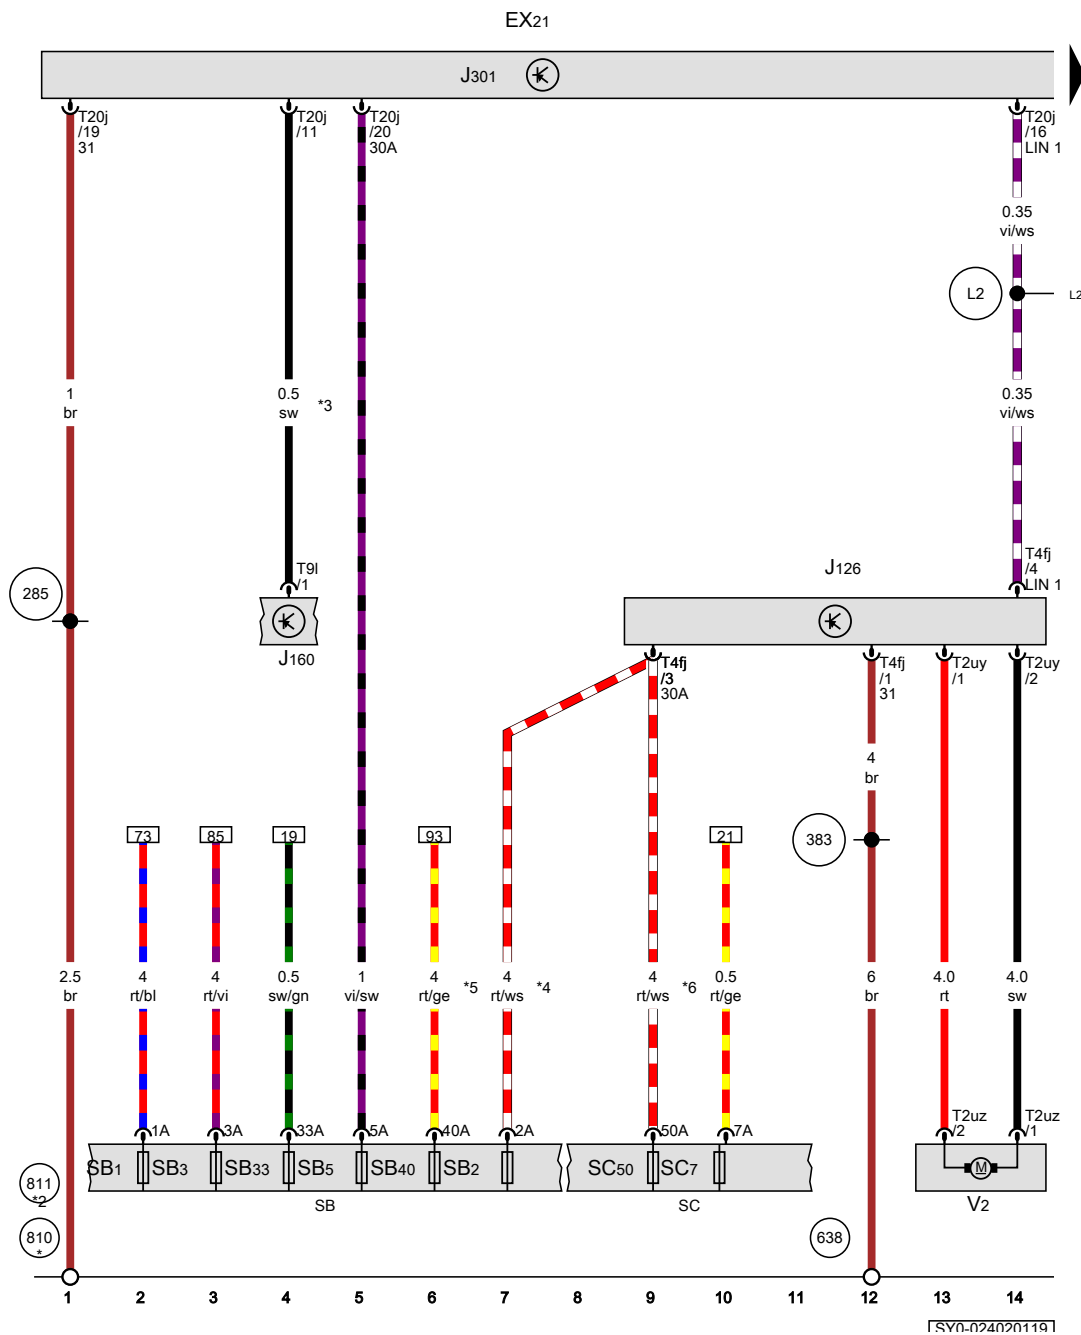


Heater and air conditioning controls, Fresh air blower control unit, Air conditioning system control unit, Fresh air blower

- EX21 Heater and air conditioning controls
- J126 Fresh air blower control unit
- J160 Circulation pump relay
- J301 Air conditioning system control unit
- SB Fuse holder B
- SB1 Fuse 1 on fuse holder B
- SB2 Fuse 2 on fuse holder B
- SB3 Fuse 3 on fuse holder B
- SB5 Fuse 5 on fuse holder B
- SC7 Fuse 7 on fuse holder C
- SB33 Fuse 33 on fuse holder B
- SB40 Fuse 40 on fuse holder B
- SC Fuse holder C
- SC50 Fuse 50 on fuse holder C
- T2uy 2-pin connector, black
- T2uz 2-pin connector
- T4fj 4-pin connector, black
- T9i 9-pin connector, black
- T20j 20-pin connector, black
- V2 Fresh air blower

- 285 Earth connection 7, in interior wiring harness
- 383 Earth connection 18, in main wiring harness
- 638 Earth point, on right A-pillar
- 810 Earth point on central tube for dash panel, centre left
- 811 Earth point on central tube for dash panel, centre right
- L2 Connection in air conditioning system wiring harness

- * For left-hand drive models
- *2 For right-hand drive models
- *3 Only models with auxiliary coolant heater
- *4 Up to May 2017
- *5 For models with 2nd heat exchanger
- *6 From May 2017

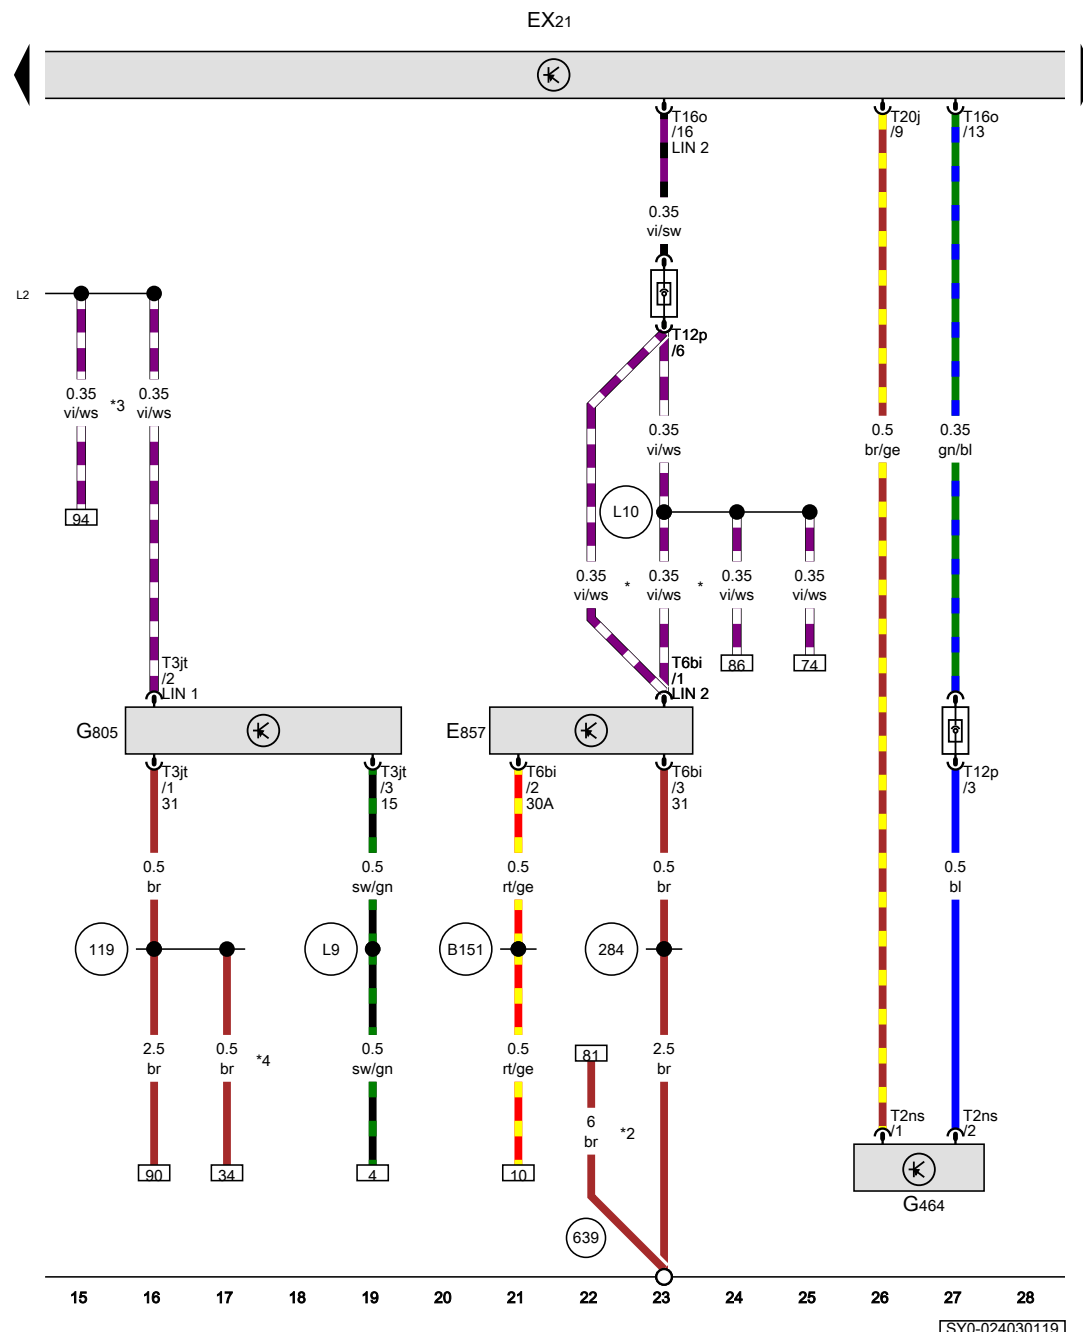


Heater and air conditioning controls, Additional display and operating unit 1, Rear evaporator temperature sender, Pressure sender for refrigerant circuit

- EX21 Heater and air conditioning controls
- E857 Additional display and operating unit 1
- G464 Rear evaporator temperature sender
- G805 Pressure sender for refrigerant circuit
- T2ns 2-pin connector, black
- T3jt 3-pin connector, black
- T6bi 6-pin connector, black
- T12p 12-pin connector, black
- T16o 16-pin connector
- T20j 20-pin connector, black

- 119 Earth connection 1, in headlight wiring harness
- 284 Earth connection 6, in interior wiring harness
- 639 Earth point, left A-pillar
- B151 Positive connection 3 (30a), in interior wiring harness
- L2 Connection in air conditioning system wiring harness
- L9 Connection 1, in air conditioning system wiring harness
- L10 Connection 2, in air conditioning system wiring harness

- * According to equipment
- *2 Up to July 2018
- *3 For models with 2nd heat exchanger
- *4 From May 2017

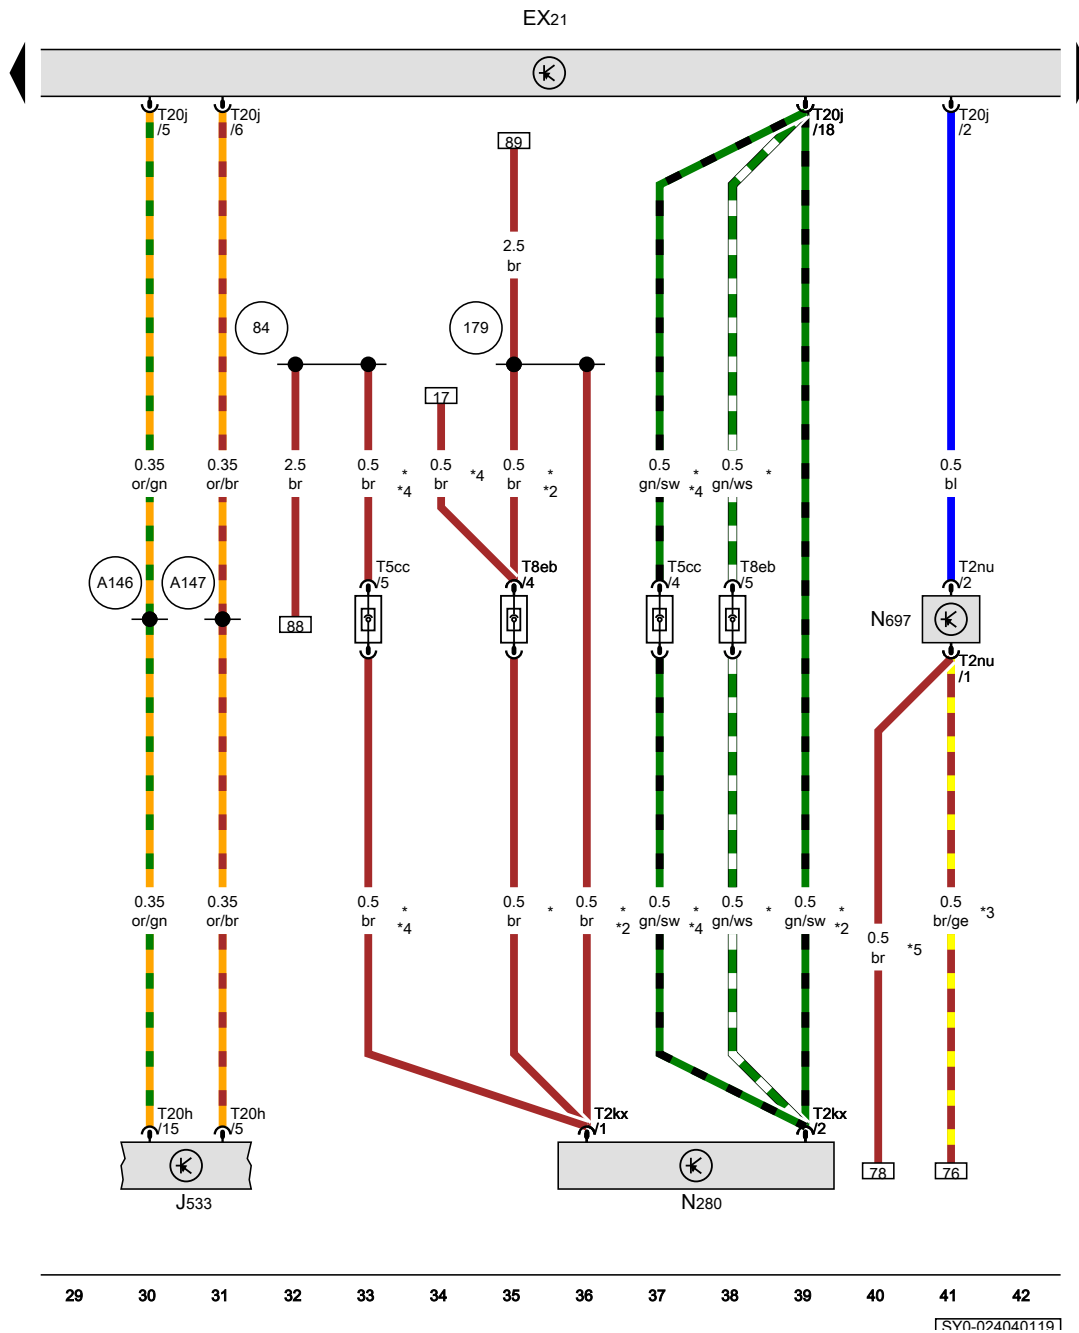


Heater and air conditioning controls, Air conditioner compressor regulating valve, Expansion valve for air conditioner refrigerant

- EX21 Heater and air conditioning controls
- J533 Data bus diagnostic interface
- N280 Air conditioner compressor regulating valve
- N697 Expansion valve for air conditioner refrigerant
- T2kx 2-pin connector, black
- T2nu 2-pin connector, black
- T5cc 5-pin connector, black
- T8eb 8-pin connector, black
- T20h 20-pin connector, red
- T20j 20-pin connector, black

- 84 Earth connection, engine block, in front right wiring harness
- 179 Earth connection, in left headlight wiring harness
- A146 Connection (convenience CAN bus, high), in dash panel wiring harness
- A147 Connection (convenience CAN bus, low), in dash panel wiring harness
- * According to equipment
- *2 Up to May 2017
- *3 Up to July 2018
- *4 From May 2017
- *5 From July 2018

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

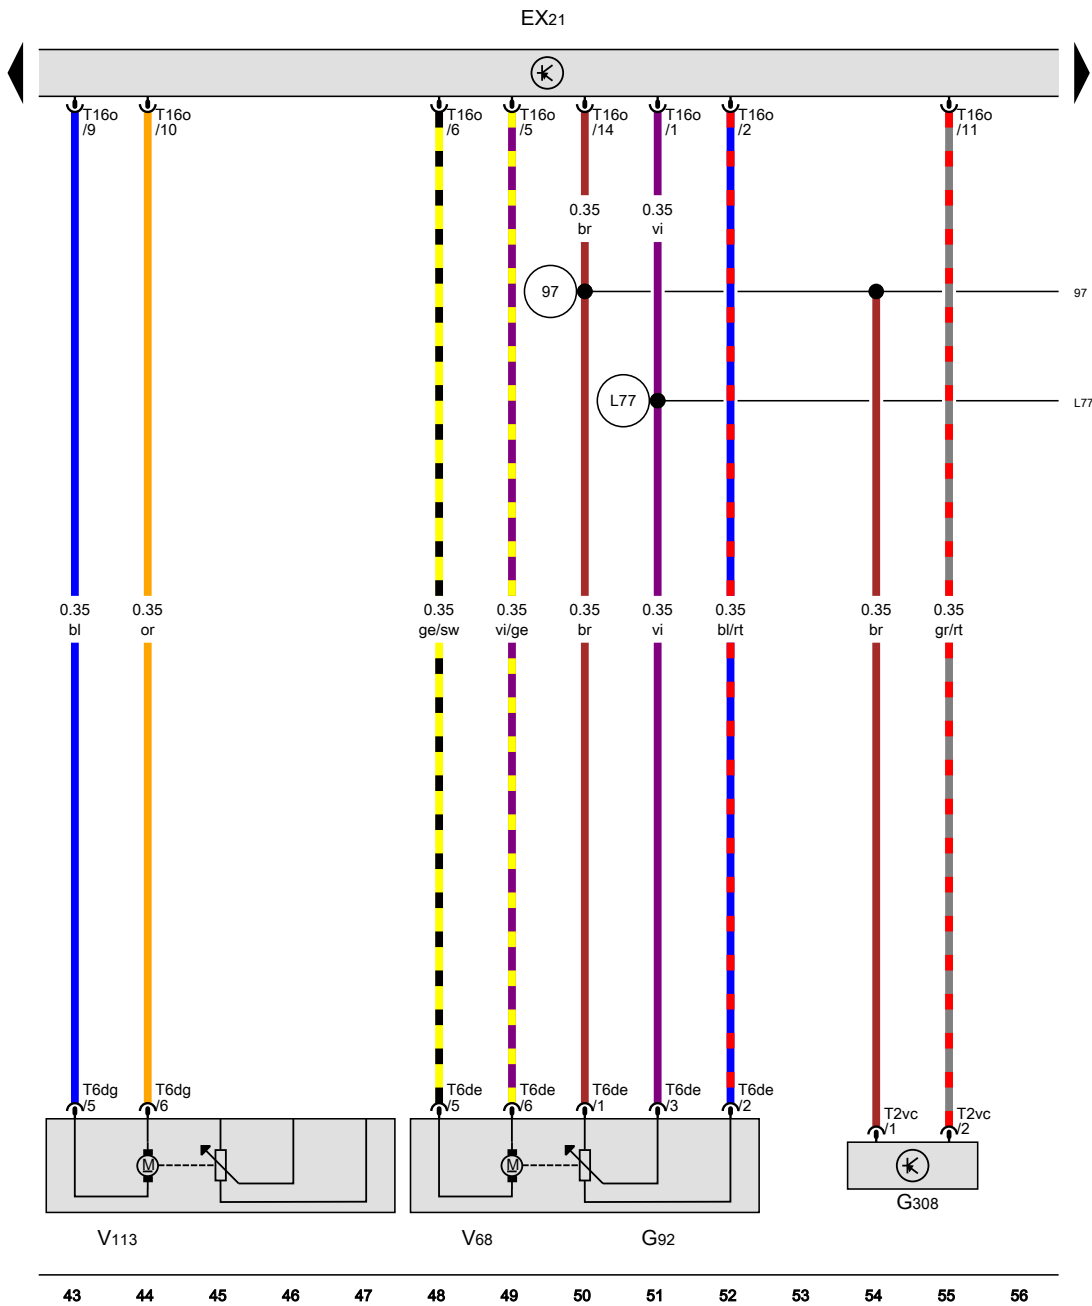

Heater and air conditioning controls, Evaporator temperature sensor, Temperature flap control motor, Air recirculation flap control motor


- EX21 Heater and air conditioning controls
- G92 Potentiometer for temperature flap control motor
- G308 Evaporator temperature sensor
- T2vc 2-pin connector, black
- T6de 6-pin connector, black
- T6dg 6-pin connector, black
- T16o 16-pin connector
- V68 Temperature flap control motor
- V113 Air recirculation flap control motor

97 Earth connection 1, in air conditioning system wiring harness

L77 Connection, in fresh air blower wiring harness

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

Heater and air conditioning controls, Rear temperature flap control motor, Air distribution flap control motor

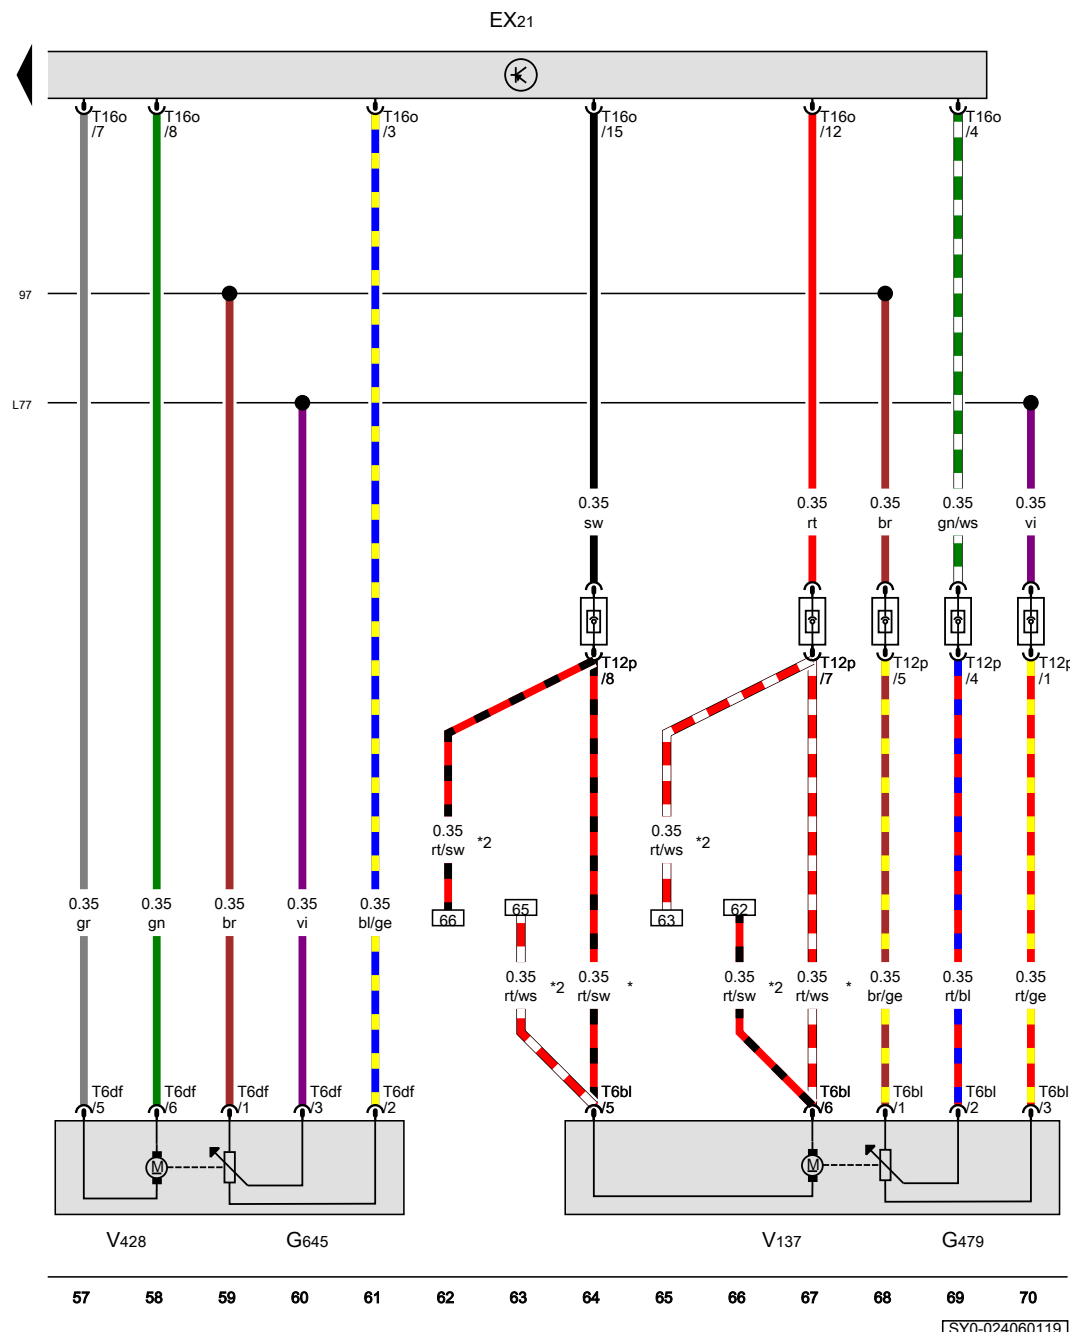

- EX21 Heater and air conditioning controls
- G479 Potentiometer for rear temperature flap motor
- G645 Potentiometer for air distribution flap control motor
- T6bl 6-pin connector, blue
- T6df 6-pin connector, black
- T12p 12-pin connector, black
- T16o 16-pin connector
- V137 Rear temperature flap control motor
- V428 Air distribution flap control motor


97 Earth connection 1, in air conditioning system wiring harness

L77 Connection, in fresh air blower wiring harness

* Up to May 2017

*2 From May 2017


ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

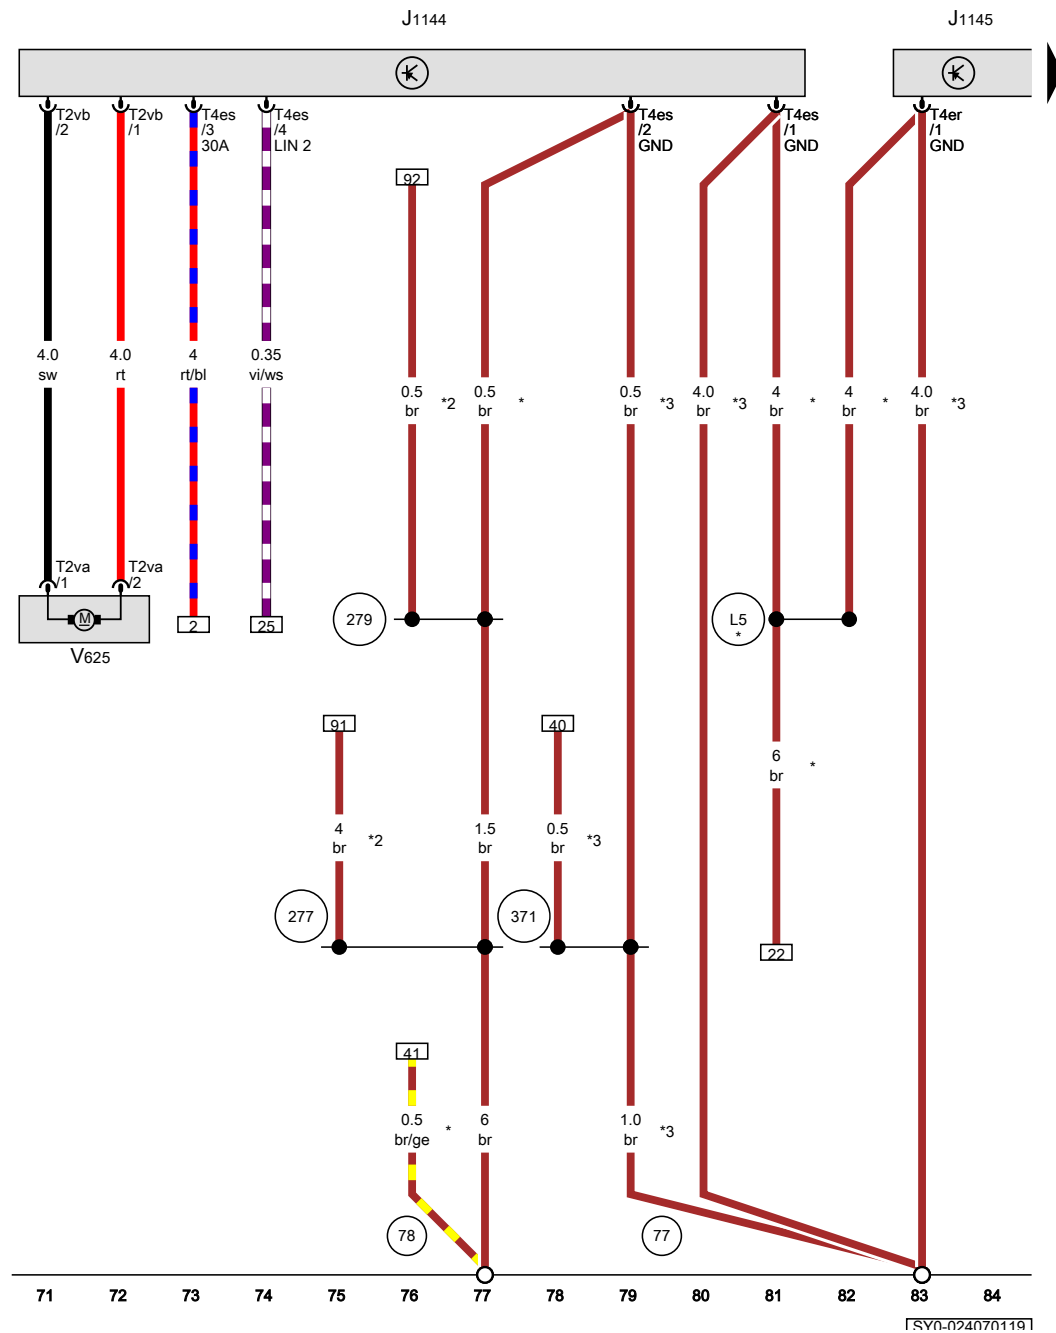

Control unit for supplementary blower for air conditioning,
Control unit for supplementary blower 2 for air conditioning,
Supplementary blower for air conditioning

- J1144 Control unit for supplementary blower for air conditioning
- J1145 Control unit for supplementary blower 2 for air conditioning
- T2va 2-pin connector, black
- T2vb 2-pin connector, black
- T4er 4-pin connector, black
- T4es 4-pin connector, black
- V625 Supplementary blower for air conditioning

- 77 Earth point, lower part of left B-pillar
- 78 Earth point, lower part of right B-pillar
- 277 Earth connection 3, in interior wiring harness
- 279 Earth connection 5, in interior wiring harness
- 371 Earth connection 6, in main wiring harness
- L5 Connection 1, in evaporator housing unit wiring harness
- * Up to July 2018
- *2 For models with 2nd heat exchanger
- *3 From July 2018

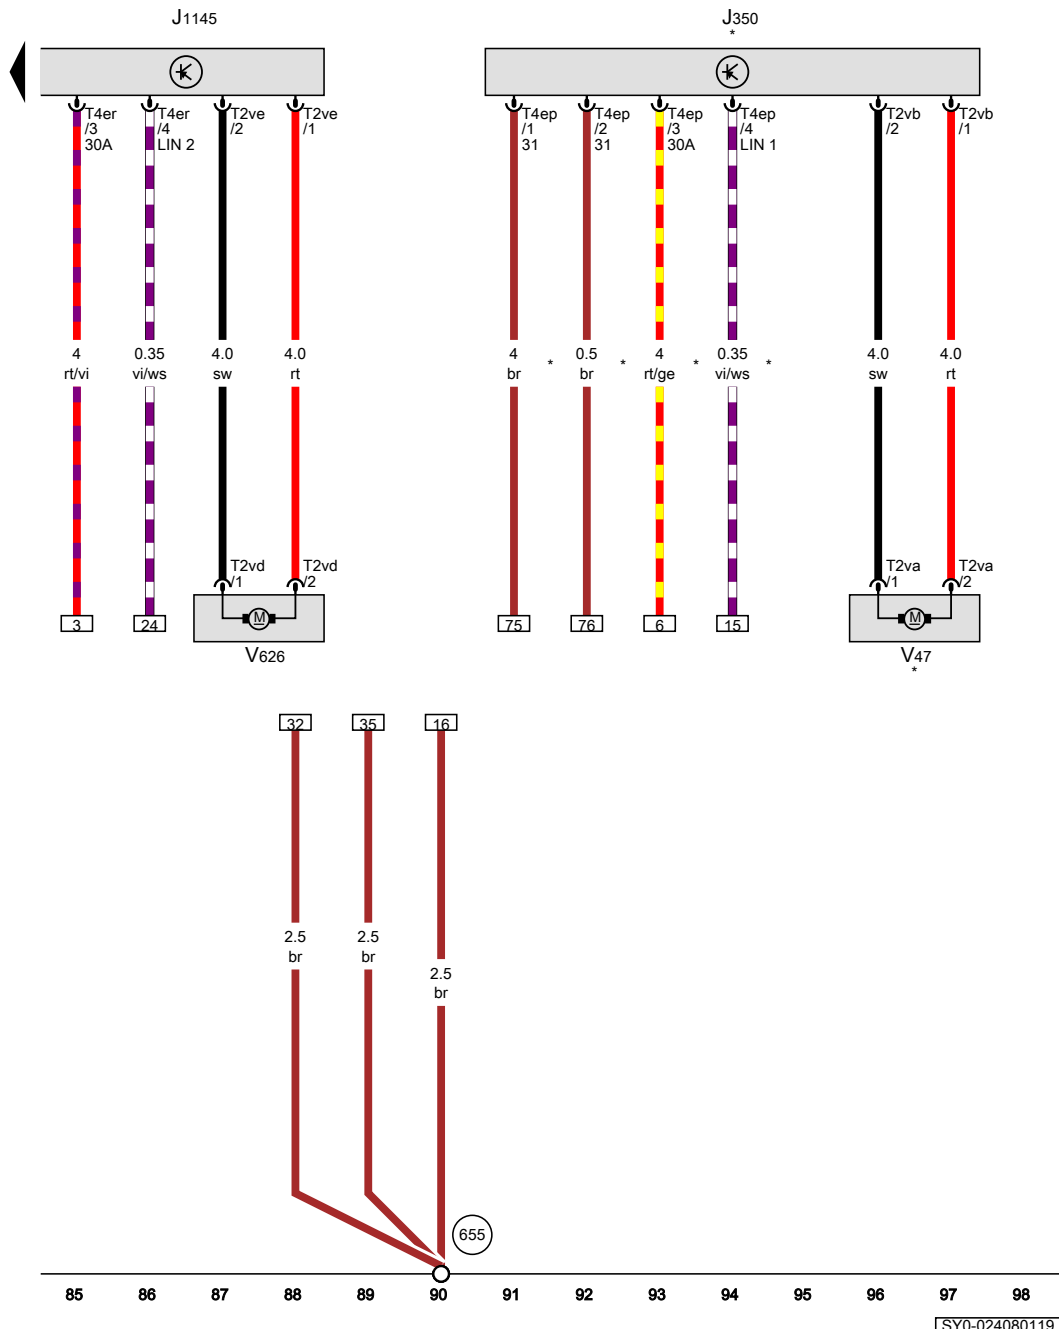

Warm air blower control unit, Control unit for supplementary blower 2 for air conditioning, Rear warm air blower, Supplementary blower 2 for air conditioning

- J350 Warm air blower control unit
- J1145 Control unit for supplementary blower 2 for air conditioning
- T2va 2-pin connector, black
- T2vb 2-pin connector, black
- T2vd 2-pin connector, black
- T2ve 2-pin connector, black
- T4ep 4-pin connector, black
- T4er 4-pin connector, black
- V47 Rear warm air blower
- V626 Supplementary blower 2 for air conditioning


655 Earth point, on left headlight

* For models with 2nd heat exchanger

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

Climatronic

From September 2016

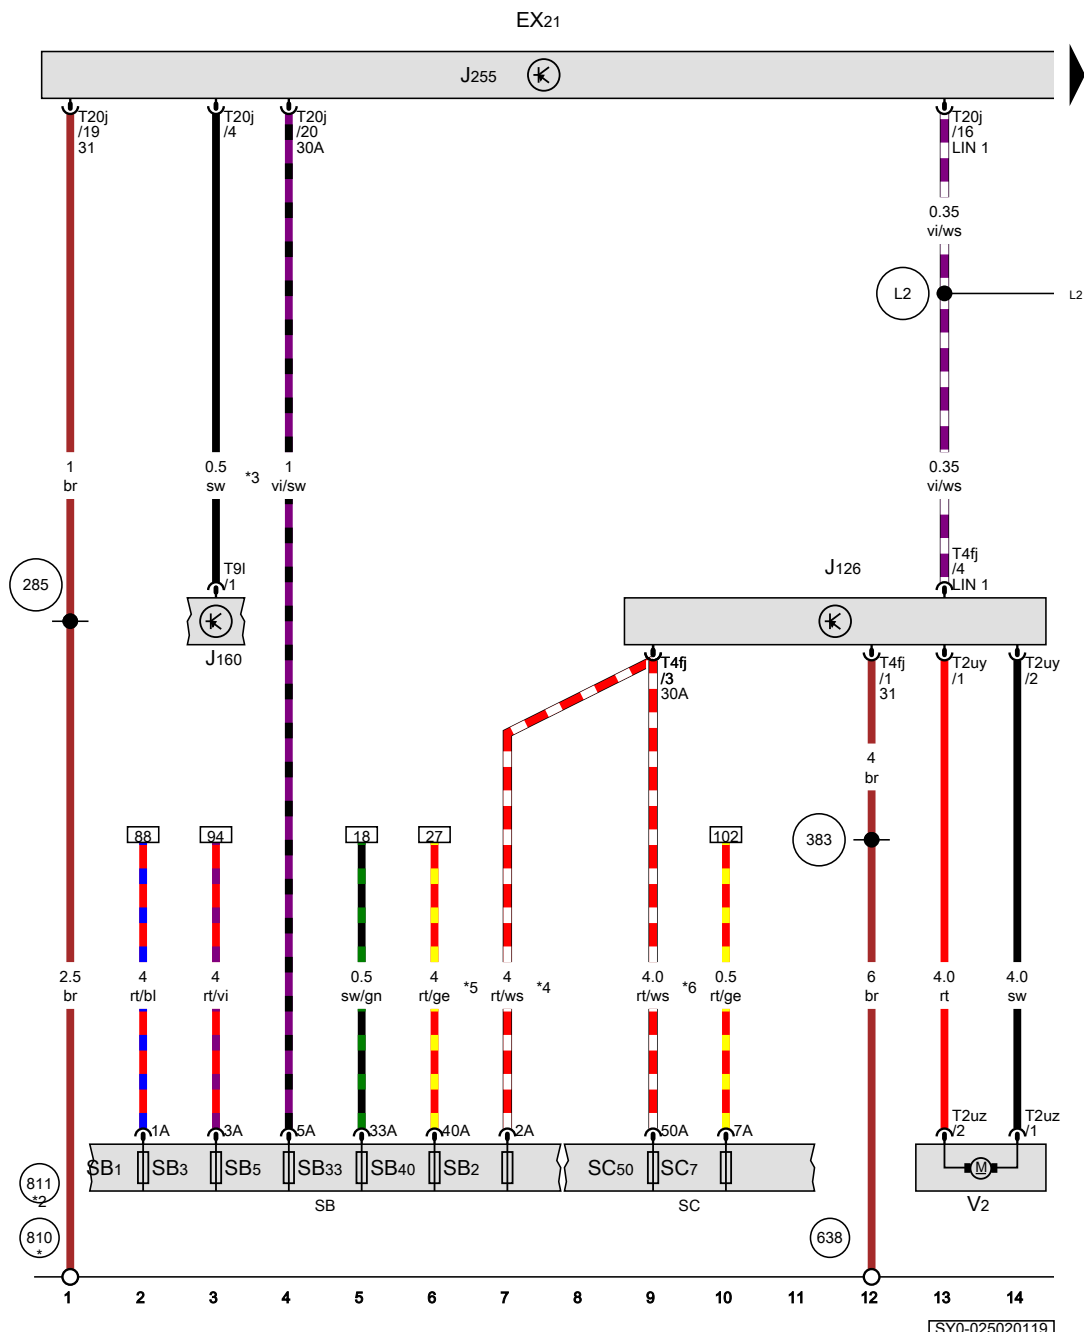


ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

Heater and air conditioning controls, Fresh air blower control unit, Climatronic control unit, Fresh air blower

- EX21 Heater and air conditioning controls
- J126 Fresh air blower control unit
- J160 Circulation pump relay
- J255 Climatronic control unit
- SB Fuse holder B
- SB1 Fuse 1 on fuse holder B
- SB2 Fuse 2 on fuse holder B
- SB3 Fuse 3 on fuse holder B
- SB5 Fuse 5 on fuse holder B
- SB33 Fuse 33 on fuse holder B
- SB40 Fuse 40 on fuse holder B
- SC Fuse holder C
- SC7 Fuse 7 on fuse holder C
- SC50 Fuse 50 on fuse holder C
- T2uy 2-pin connector, black
- T2uz 2-pin connector
- T4fj 4-pin connector, black
- T9I 9-pin connector, black
- T20j 20-pin connector, black
- V2 Fresh air blower

- 285 Earth connection 7, in interior wiring harness
- 383 Earth connection 18, in main wiring harness
- 638 Earth point, on right A-pillar
- 810 Earth point on central tube for dash panel, centre left
- 811 Earth point on central tube for dash panel, centre right
- L2 Connection in air conditioning system wiring harness

- * For left-hand drive models
- *2 For right-hand drive models
- *3 Only models with auxiliary coolant heater
- *4 Up to May 2017
- *5 For models with 2nd heat exchanger
- *6 From May 2017

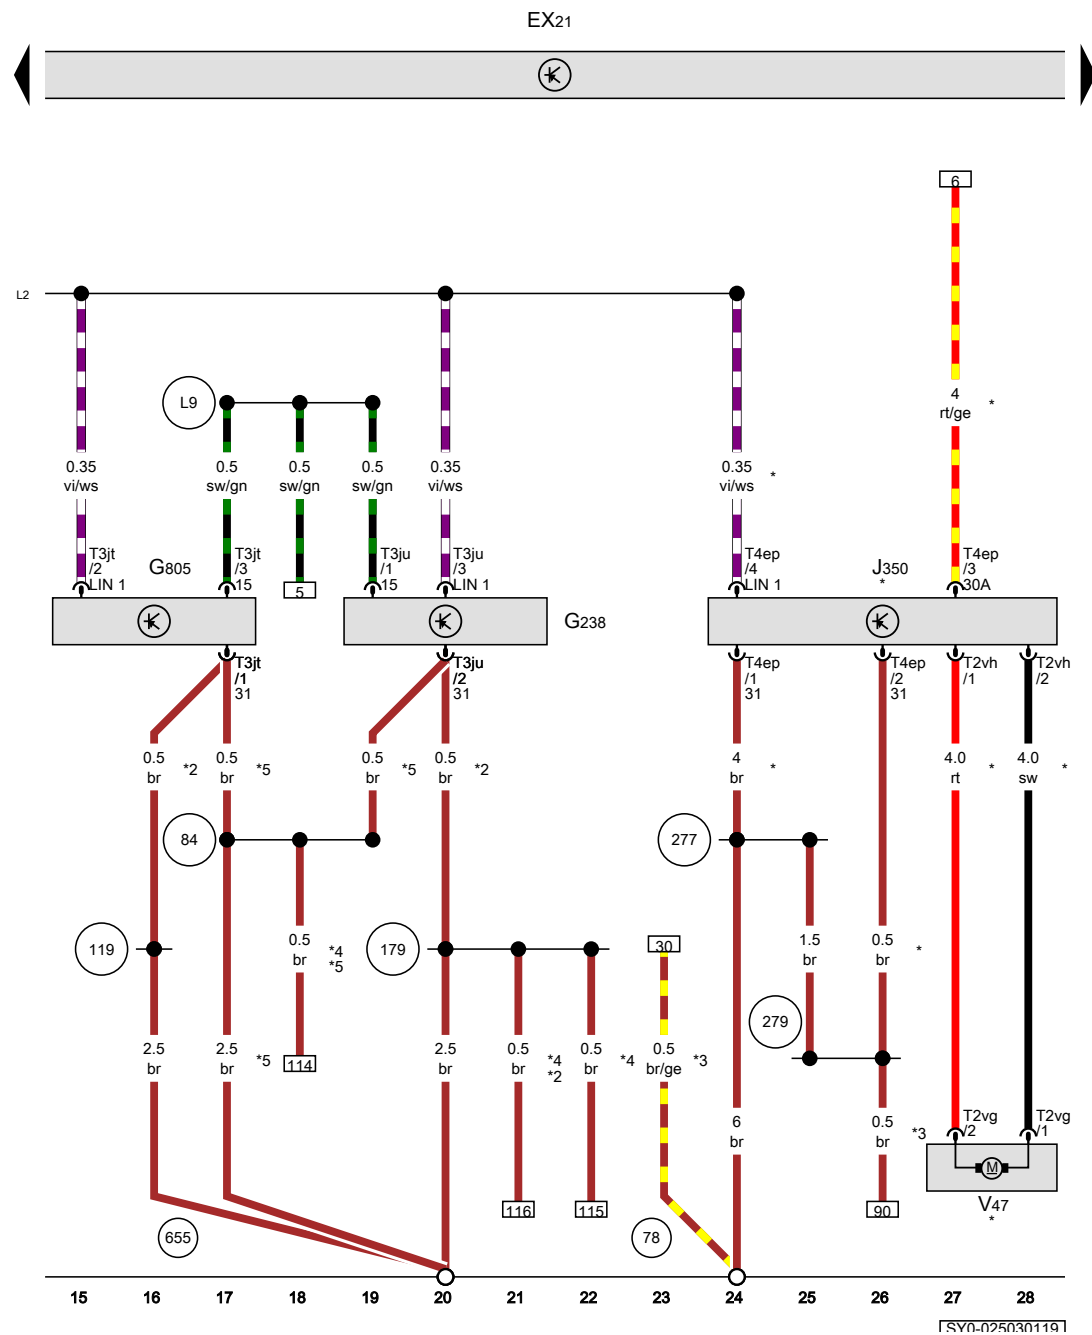


Heater and air conditioning controls, Air quality sensor, Pressure sender for refrigerant circuit, Warm air blower control unit, Rear warm air blower

- EX21 Heater and air conditioning controls
- G238 Air quality sensor
- G805 Pressure sender for refrigerant circuit
- J350 Warm air blower control unit
- T2vg 2-pin connector, black
- T2vh 2-pin connector, black
- T3jt 3-pin connector, black
- T3ju 3-pin connector, grey
- T4ep 4-pin connector, black
- V47 Rear warm air blower

- 78 Earth point, lower part of right B-pillar
- 84 Earth connection, engine block, in front right wiring harness
- 119 Earth connection 1, in headlight wiring harness
- 179 Earth connection, in left headlight wiring harness
- 277 Earth connection 3, in interior wiring harness
- 279 Earth connection 5, in interior wiring harness
- 655 Earth point, on left headlight
- L2 Connection in air conditioning system wiring harness
- L9 Connection 1, in air conditioning system wiring harness

- * For models with 2nd heat exchanger
- *2 Up to May 2017
- *3 Up to July 2018
- *4 According to equipment
- *5 From May 2017

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

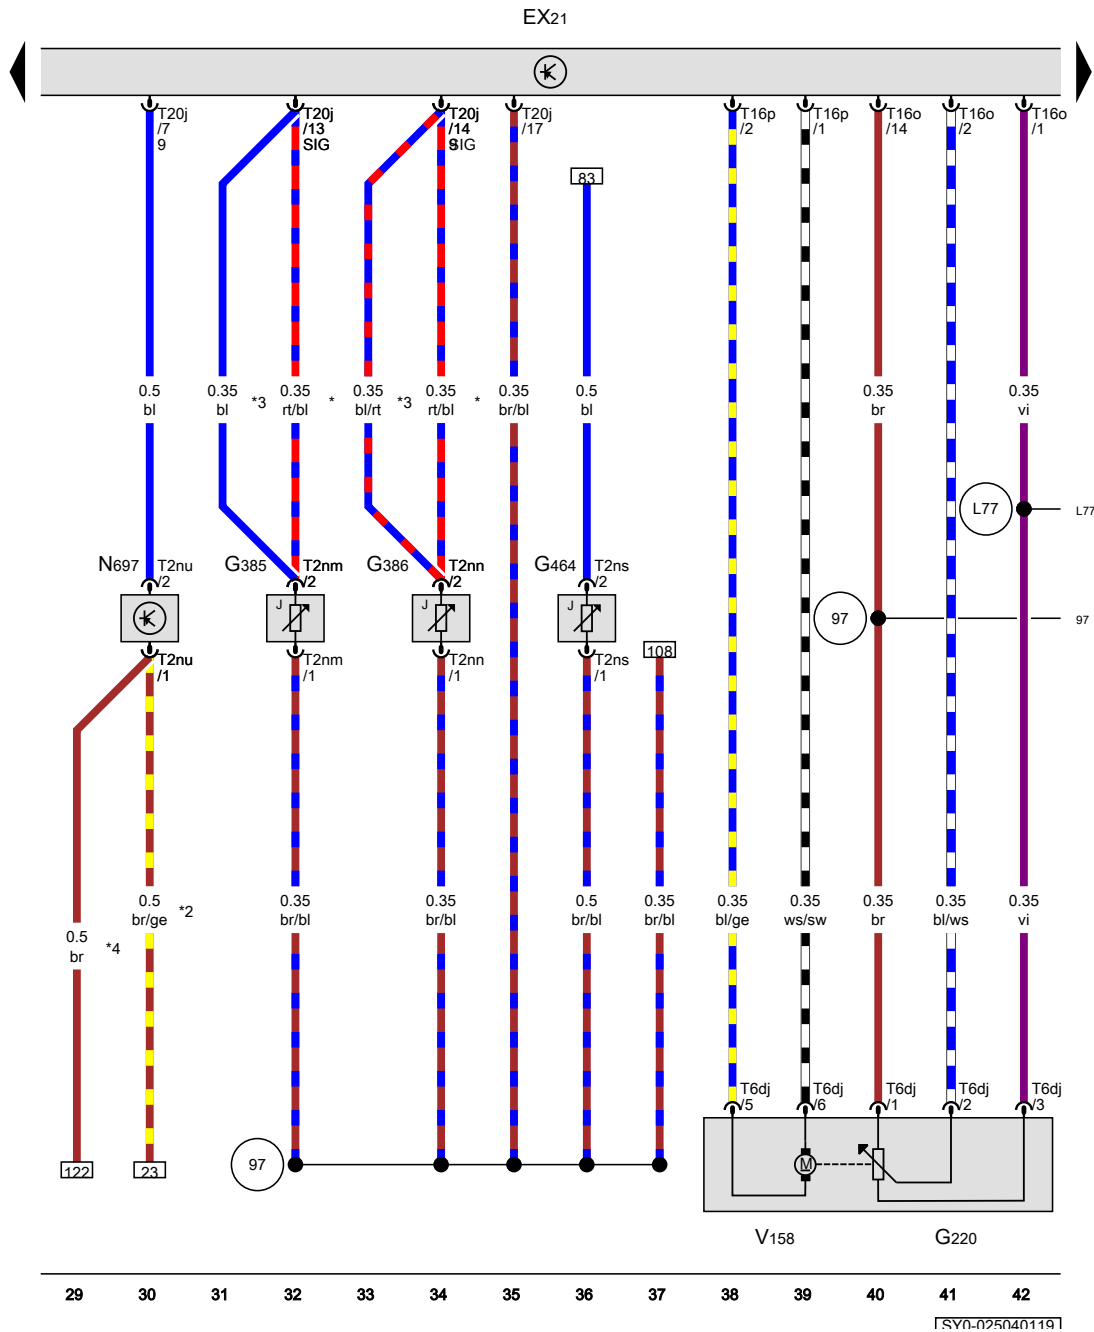

Heater and air conditioning controls, Front left chest vent temperature sensor, Front right chest vent temperature sensor, Rear evaporator temperature sender, Expansion valve for air conditioner refrigerant, Left temperature flap control motor


EX21	Heater and air conditioning controls
G220	Potentiometer for left temperature flap control motor
G385	Front left chest vent temperature sensor
G386	Front right chest vent temperature sensor
G464	Rear evaporator temperature sender
N697	Expansion valve for air conditioner refrigerant
T2nm	2-pin connector, black
T2nn	2-pin connector, black
T2ns	2-pin connector, black
T2nu	2-pin connector, black
T6dj	6-pin connector
T16o	16-pin connector
T16p	16-pin connector, black
T20j	20-pin connector, black
V158	Left temperature flap control motor

(97) Earth connection 1, in air conditioning system wiring harness

(L77) Connection, in fresh air blower wiring harness

* Up to November 2017
*2 Up to July 2018
*3 From November 2017
*4 From July 2018

ws	=	white
sw	=	black
ro	=	red
rt	=	red
br	=	brown
gn	=	green
bl	=	blue
gr	=	grey
li	=	purple
vi	=	purple
ge	=	yellow
or	=	orange
rs	=	pink

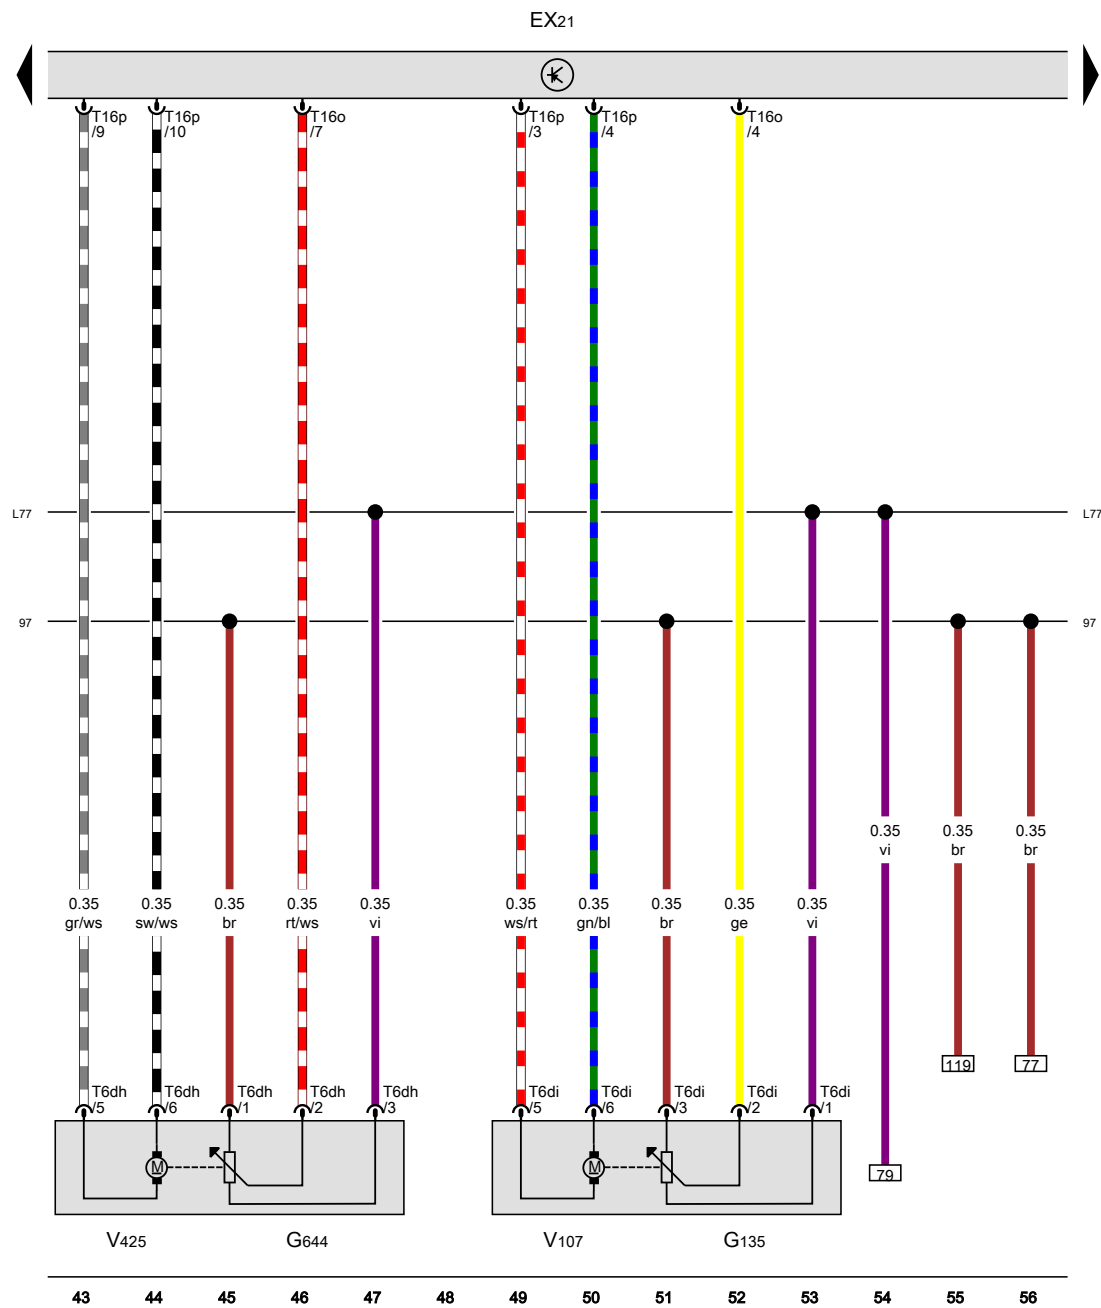


Heater and air conditioning controls, Defroster flap control motor, Fresh air/air recirculation, air flow flap control motor

- EX21 Heater and air conditioning controls
- G135 Potentiometer for defroster flap control motor
- G644 Potentiometer for fresh air/air recirculation, air flow flap control motor
- T6dh 6-pin connector, black
- T6di 6-pin connector
- T16o 16-pin connector
- T16p 16-pin connector, black
- V107 Defroster flap control motor
- V425 Fresh air/air recirculation, air flow flap control motor

- 97 Earth connection 1, in air conditioning system wiring harness
- L77 Connection, in fresh air blower wiring harness

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

SYN-025050119

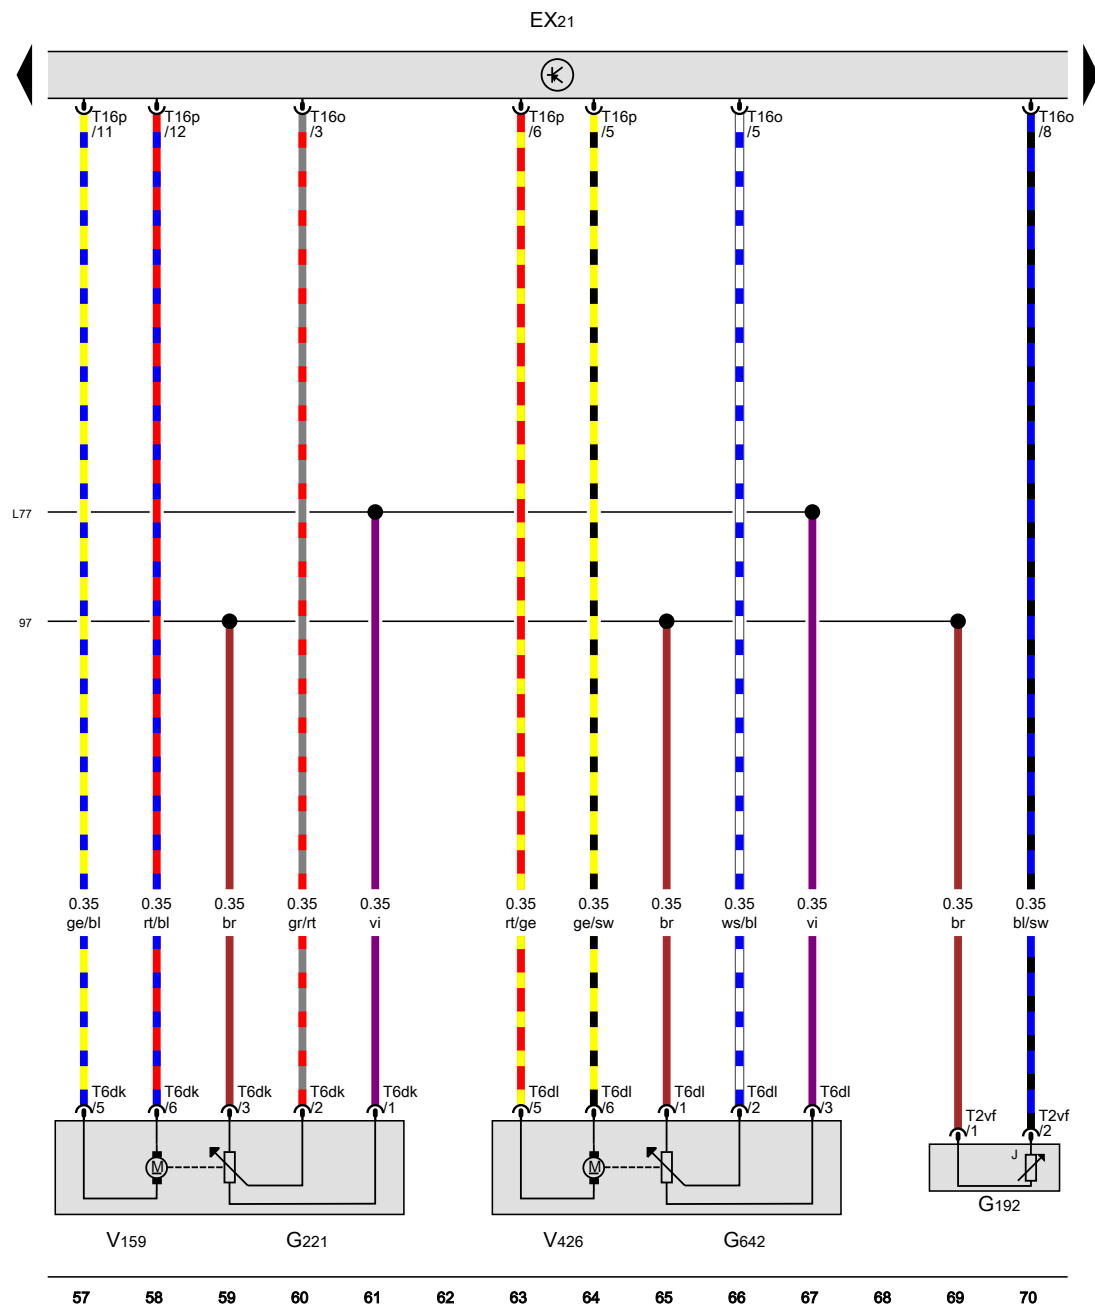

Heater and air conditioning controls, Footwell vent temperature sender, Right temperature flap control motor, Front air distribution flap control motor


- EX21 Heater and air conditioning controls
- G192 Footwell vent temperature sender
- G221 Potentiometer for right temperature flap control motor
- G642 Potentiometer for front air distribution flap control motor
- T2vf 2-pin connector, black
- T6dk 6-pin connector, black
- T6dl 6-pin connector, black
- T16o 16-pin connector
- T16p 16-pin connector, black
- V159 Right temperature flap control motor
- V426 Front air distribution flap control motor

97 Earth connection 1, in air conditioning system wiring harness

L77 Connection, in fresh air blower wiring harness


- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

Heater and air conditioning controls, Rear vent temperature sender, Rear temperature flap control motor

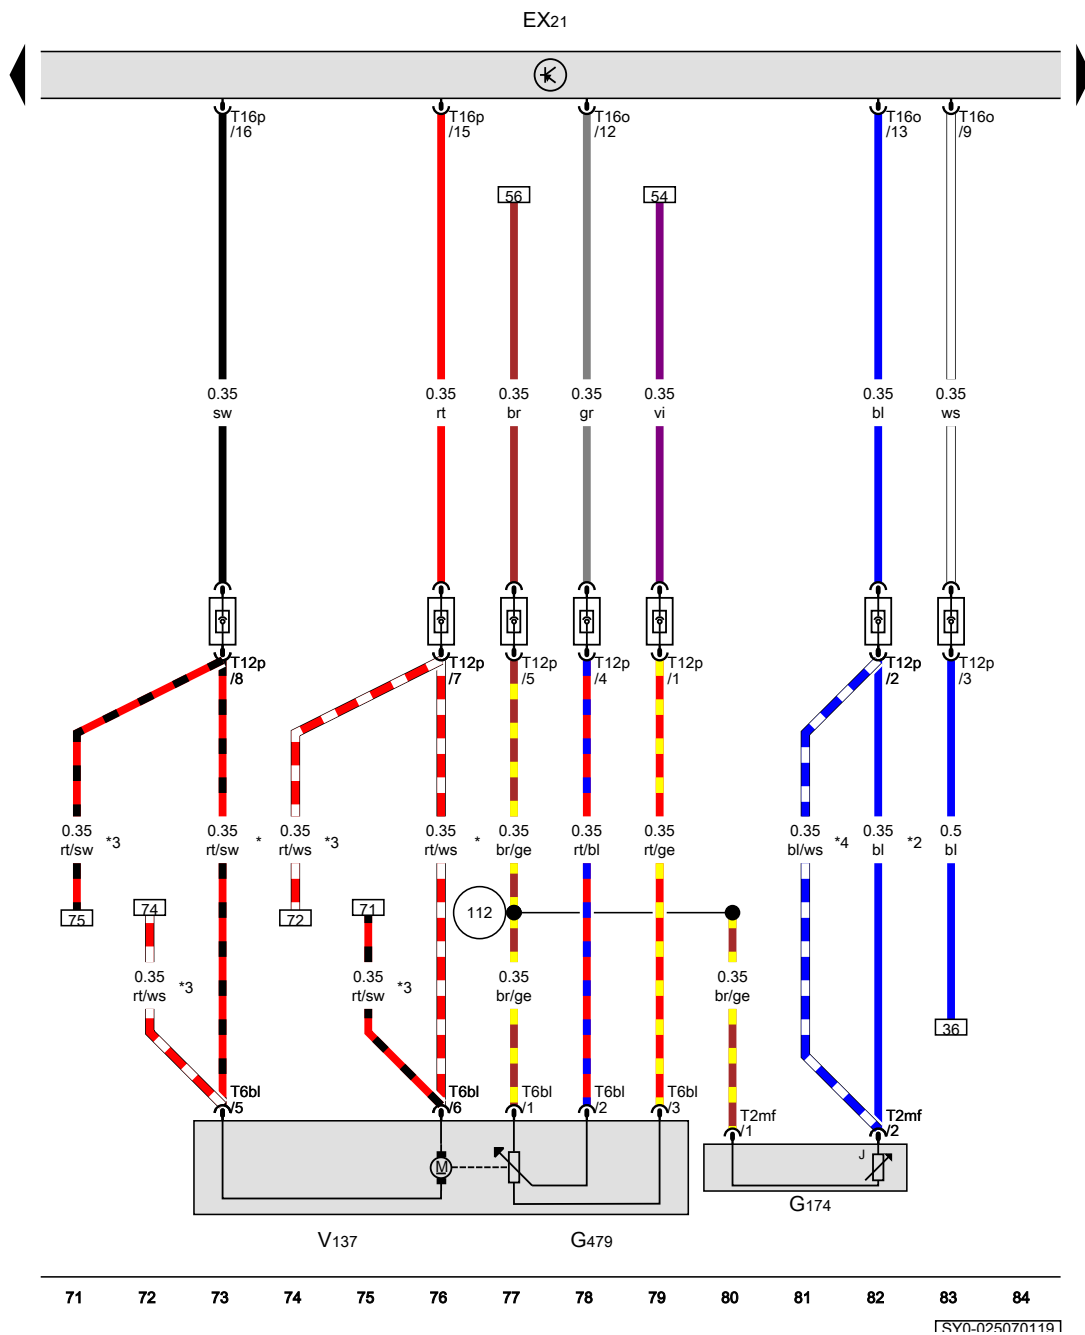

- EX21 Heater and air conditioning controls
- G174 Rear vent temperature sender
- G479 Potentiometer for rear temperature flap motor
- T2mf 2-pin connector, black
- T6bl 6-pin connector, blue
- T12p 12-pin connector, black
- T16p 16-pin connector
- T16o 16-pin connector, black
- V137 Rear temperature flap control motor
- 112 Earth connection 2, in air conditioning system wiring harness
- * Up to May 2017
- *2 Up to November 2017
- *3 From May 2017
- *4 From November 2017


ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

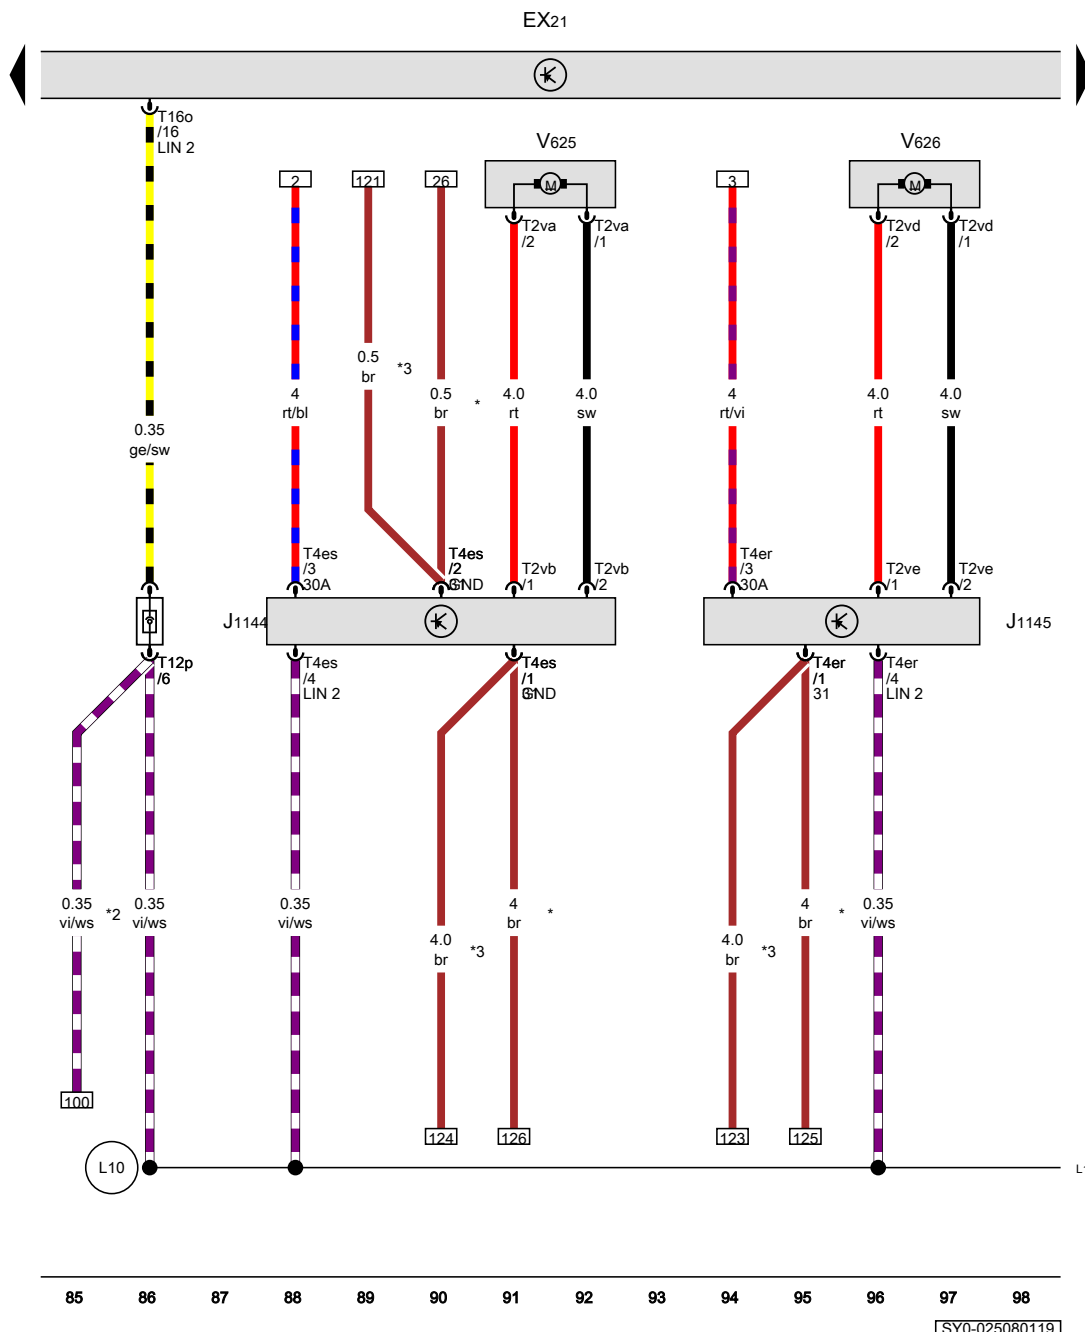

Heater and air conditioning controls, Control unit for supplementary blower for air conditioning, Control unit for supplementary blower 2 for air conditioning, Supplementary blower for air conditioning, Supplementary blower 2 for air conditioning

- EX21 Heater and air conditioning controls
- J1144 Control unit for supplementary blower for air conditioning
- J1145 Control unit for supplementary blower 2 for air conditioning
- T2va 2-pin connector, black
- T2vb 2-pin connector, black
- T2vd 2-pin connector, black
- T2ve 2-pin connector, black
- T4er 4-pin connector, black
- T4es 4-pin connector, black
- T12p 12-pin connector, black
- T16o 16-pin connector
- V625 Supplementary blower for air conditioning
- V626 Supplementary blower 2 for air conditioning
- L10 Connection 2, in air conditioning system wiring harness
- * Up to July 2018
- *2 According to equipment
- *3 From July 2018


ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink

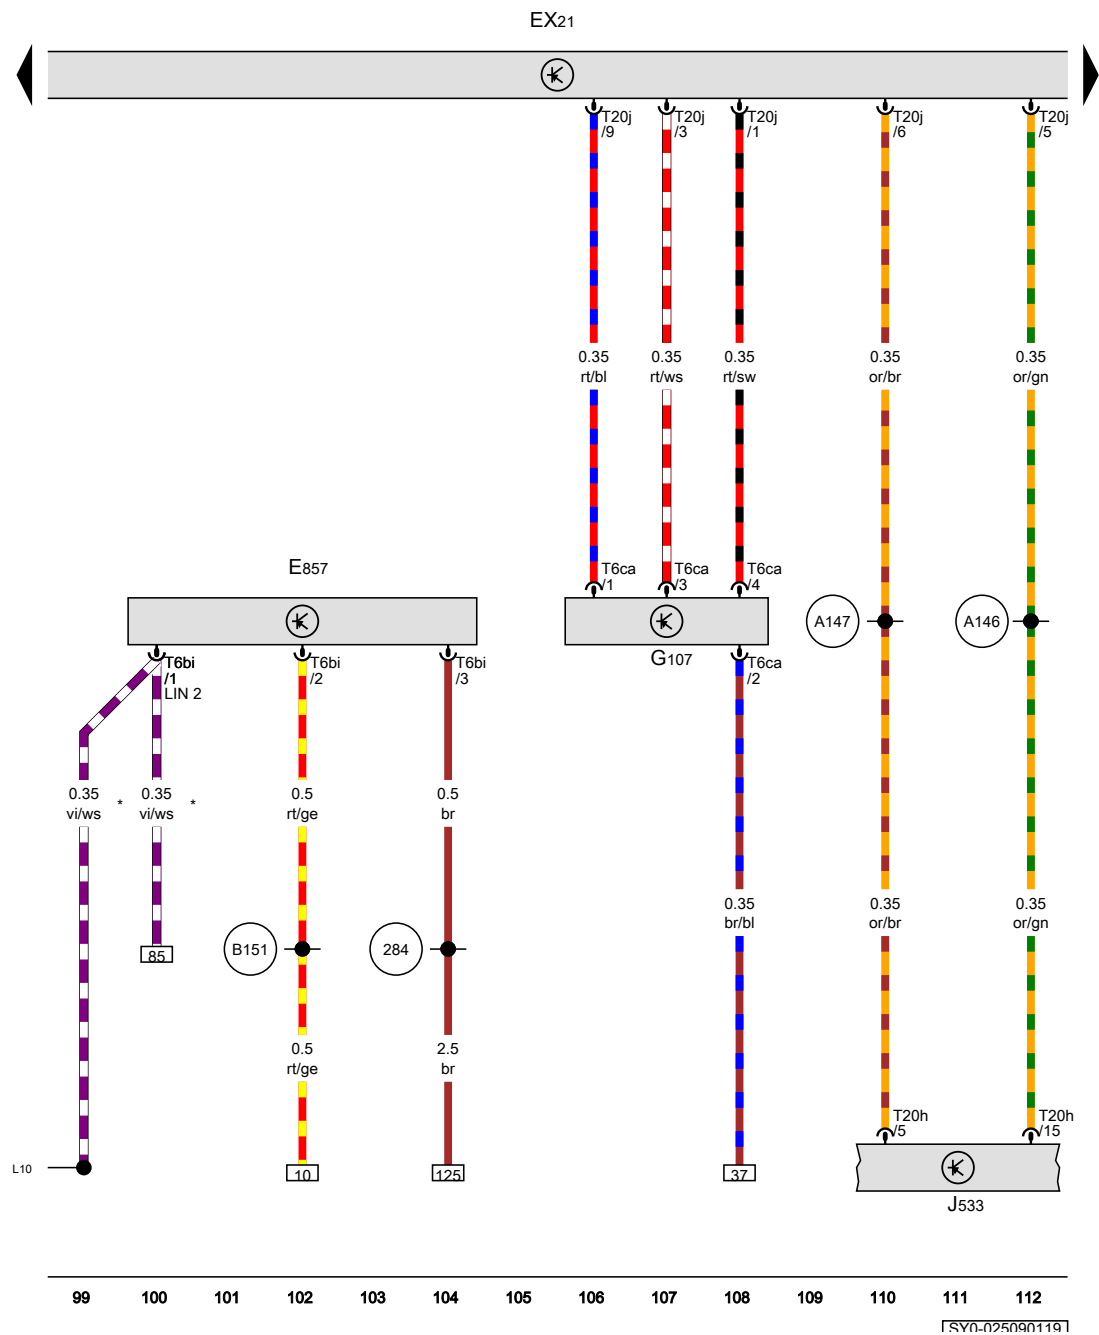

Heater and air conditioning controls, Additional display and operating unit 1, Sunlight penetration photosensor

- EX21 Heater and air conditioning controls
- E857 Additional display and operating unit 1
- G107 Sunlight penetration photosensor
- J533 Data bus diagnostic interface
- T6bi 6-pin connector, black
- T6ca 6-pin connector, black
- T20h 20-pin connector, red
- T20j 20-pin connector, black

- 284 Earth connection 6, in interior wiring harness
- A146 Connection (convenience CAN bus, high), in dash panel wiring harness
- A147 Connection (convenience CAN bus, low), in dash panel wiring harness
- B151 Positive connection 3 (30a), in interior wiring harness
- L10 Connection 2, in air conditioning system wiring harness
- * According to equipment

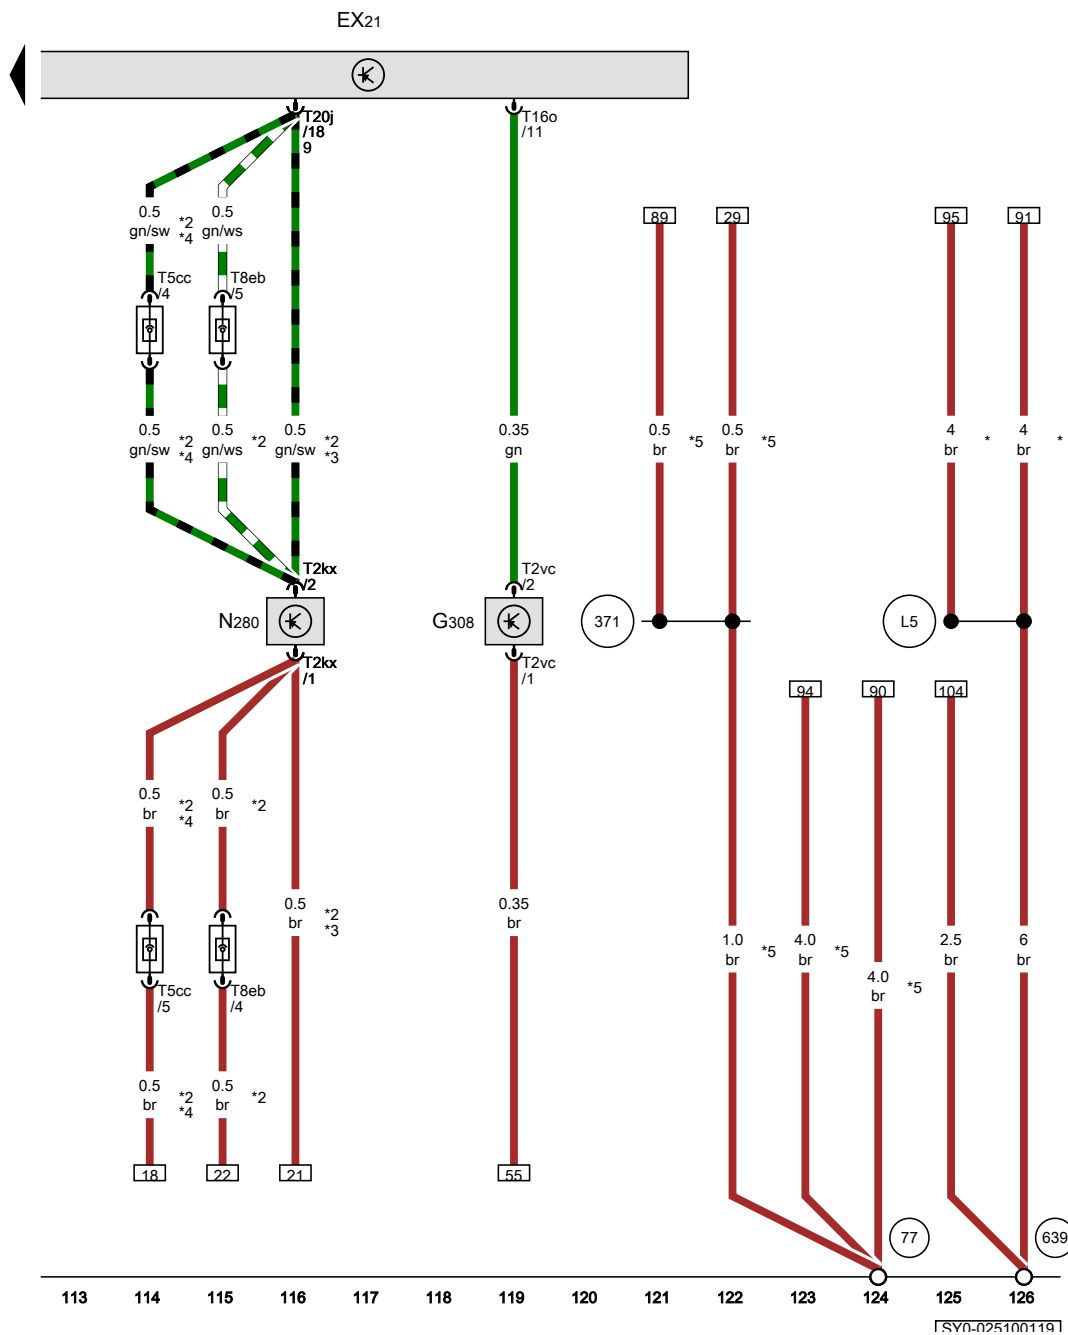

Heater and air conditioning controls, Evaporator temperature sensor, Air conditioner compressor regulating valve

- EX21 Heater and air conditioning controls
- G308 Evaporator temperature sensor
- N280 Air conditioner compressor regulating valve
- T2kx 2-pin connector, black
- T2vc 2-pin connector, black
- T5cc 5-pin connector, black
- T8eb 8-pin connector, black
- T16o 16-pin connector
- T20j 20-pin connector, black


- 77 Earth point, lower part of left B-pillar
- 371 Earth connection 6, in main wiring harness
- 639 Earth point, left A-pillar
- L5 Connection 1, in evaporator housing unit wiring harness
- * Up to July 2018
- *2 According to equipment
- *3 Up to May 2017
- *4 From May 2017
- *5 From July 2018

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

Auxiliary air heater (PTC)

From September 2016

Fuse holder A, Fuse holder B, Auxiliary air heater element

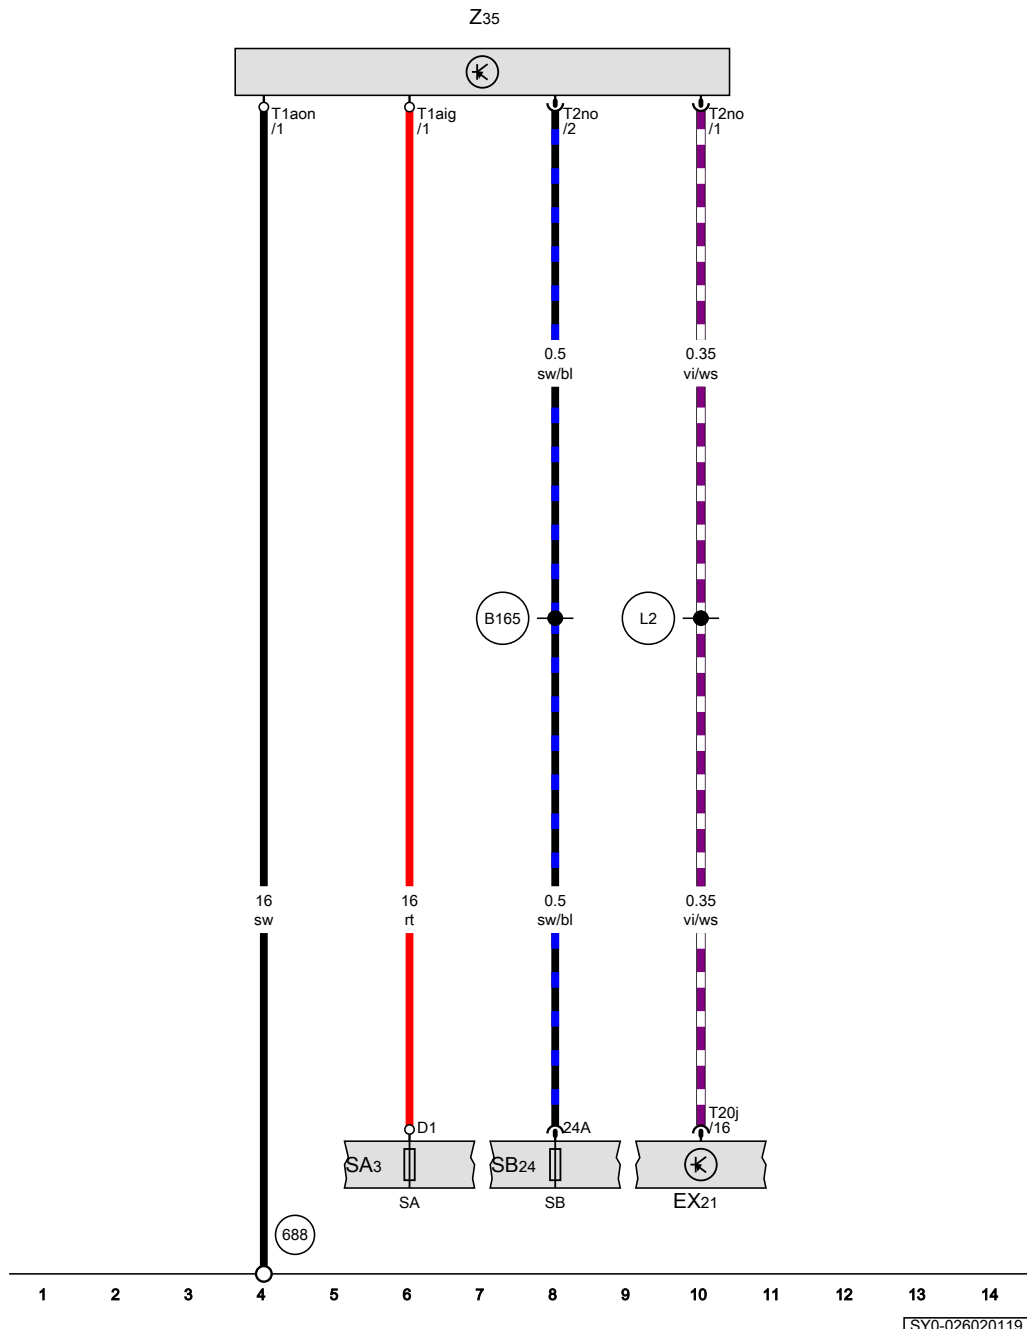


- EX21 Heater and air conditioning controls
- SA Fuse holder A
- SA3 Fuse 3 on fuse holder A
- SB Fuse holder B
- SB24 Fuse 24 on fuse holder B
- T1aig 1-pin connector, black
- T1aon 1-pin connector
- T2no 2-pin connector, black
- T20j 20-pin connector, black
- Z35 Auxiliary air heater element

- 688 Earth point 2, on centre tunnel
- B165 Positive connection 2 (15), in interior wiring harness
- L2 Connection in air conditioning system wiring harness

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

Auxiliary heater , (9M4),(7VF),(7VM)

From September 2016

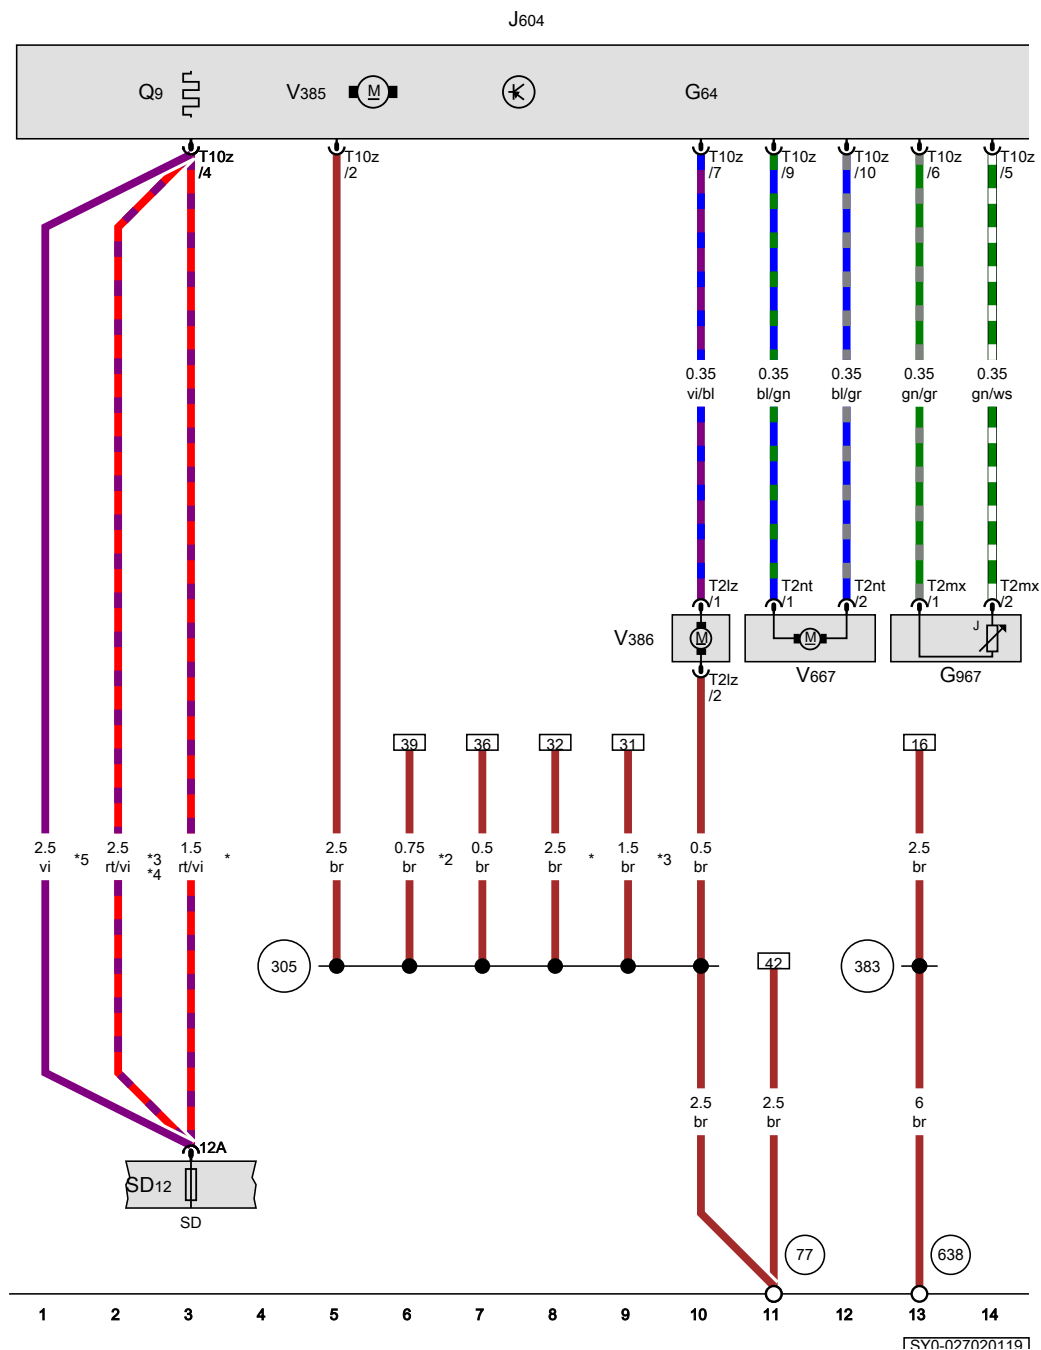


Temperature sensor on roof for air inlet on auxiliary air heater, Auxiliary air heater control unit, Metering pump 2, Air distribution flap control motor 2

- G64 Flame monitor
- G967 Temperature sensor on roof for air inlet on auxiliary air heater
- J604 Auxiliary air heater control unit
- Q9 Glow plug for heater
- SD Fuse holder D
- SD12 Fuse 12 on fuse holder D
- T2lz 2-pin connector, black
- T2mx 2-pin connector, black
- T2nt 2-pin connector, black
- T10z 10-pin connector, black
- V385 Combustion air blower 2
- V386 Metering pump 2
- V667 Air distribution flap control motor 2

- 77 Earth point, lower part of left B-pillar
- 305 Earth connection (auxiliary heater), in interior wiring harness
- 383 Earth connection 18, in main wiring harness
- 638 Earth point, on right A-pillar

- * Up to May 2017
- *2 For models with 2nd heat exchanger
- *3 From May 2017
- *4 Up to November 2017
- *5 From November 2017

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

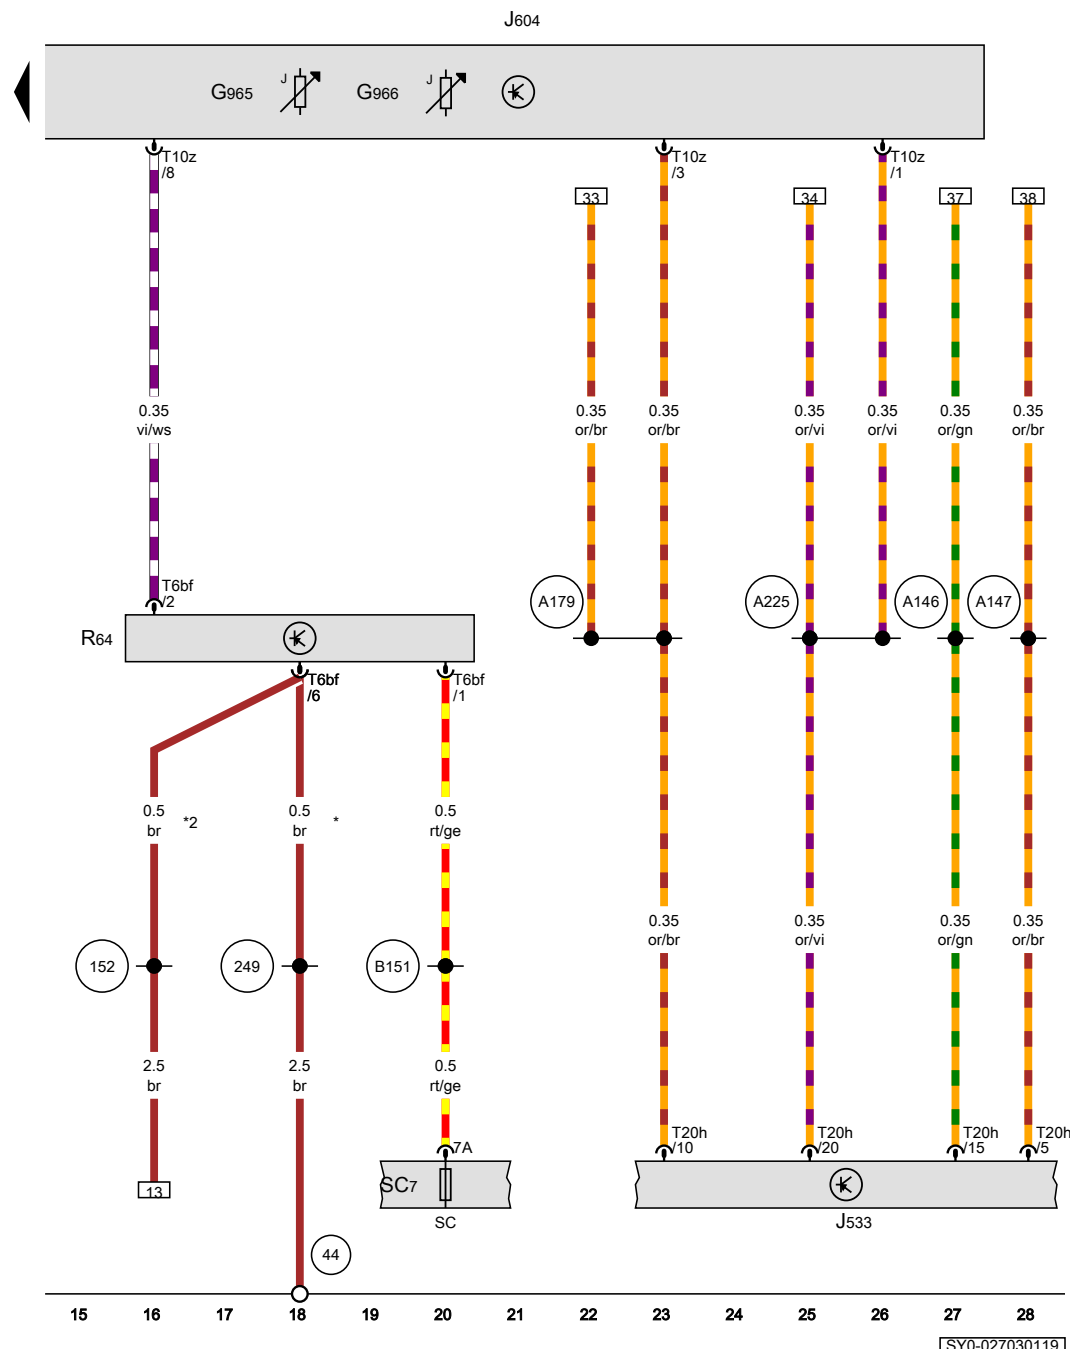

Auxiliary air heater control unit, Remote control receiver for auxiliary heater, Earth connection 2, in interior wiring harness, Positive connection 3 (30a), in interior wiring harness


- G965 Temperature sensor for air inlet on auxiliary air heater
- G966 Temperature sensor for air outlet on auxiliary air heater
- J533 Data bus diagnostic interface
- J604 Auxiliary air heater control unit
- R64 Remote control receiver for auxiliary heater
- SC Fuse holder C
- SC7 Fuse 7 on fuse holder C
- T6bf 6-pin connector, blue
- T10z 10-pin connector, black
- T20h 20-pin connector, red

- 44 Earth point, lower part of left A-pillar
- 152 Earth connection 2, in front wiring harness
- 249 Earth connection 2, in interior wiring harness
- A146 Connection (convenience CAN bus, high), in dash panel wiring harness
- A147 Connection (convenience CAN bus, low), in dash panel wiring harness
- A179 Connection (infotainment CAN bus, low), in dash panel wiring harness
- A225 Connection 2 (infotainment CAN bus, high) in dash panel wiring harness
- B151 Positive connection 3 (30a), in interior wiring harness

* Up to May 2017
*2 From May 2017

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

Circulation pump relay, Auxiliary heater control unit,
Metering pump, Circulation pump

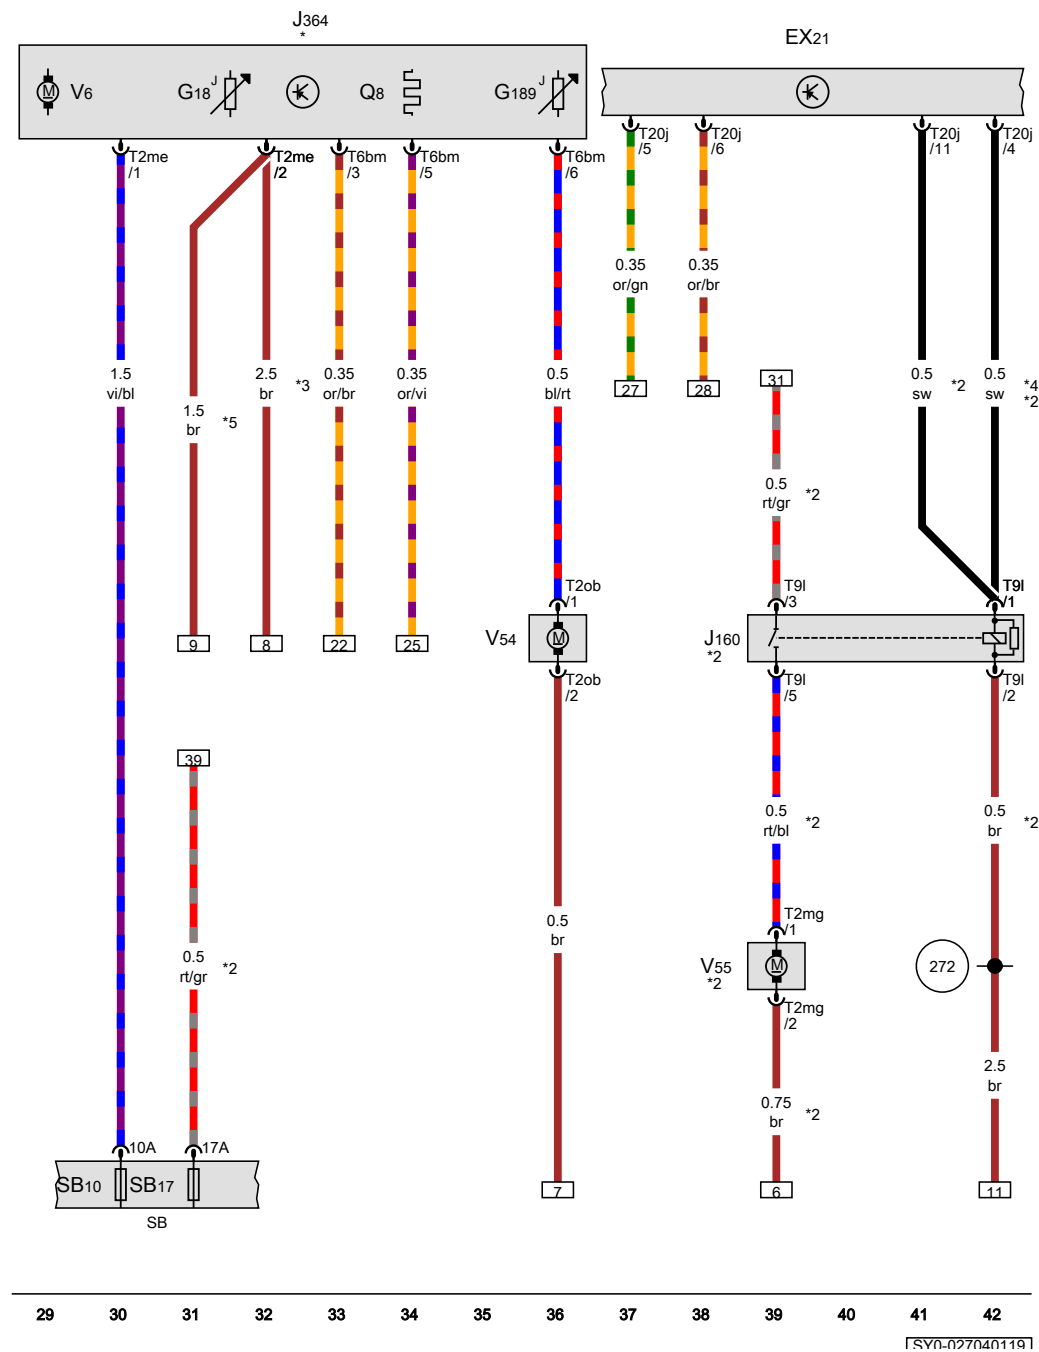

- EX21 Heater and air conditioning controls
- G18 Temperature sensor
- G189 Overheating sensor
- J160 Circulation pump relay
- J364 Auxiliary heater control unit
- Q8 Glow plug with flame monitor
- SB Fuse holder B
- SB10 Fuse 10 on fuse holder B
- SB17 Fuse 17 on fuse holder B
- T2me 2-pin connector, black
- T2mg 2-pin connector, black
- T2ob 2-pin connector, black
- T6bm 6-pin connector, black
- T9l 9-pin connector, black
- T20j 20-pin connector, black
- V6 Combustion air blower
- V54 Metering pump
- V55 Circulation pump


272 Earth connection 4, in front wiring harness

- * For models with auxiliary coolant heater (supplementary heater)
- *2 For models with 2nd heat exchanger
- *3 Up to May 2017
- *4 For models with Climatronic
- *5 From May 2017

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

Auxiliary coolant heater, supplementary heater, supplementary heater which can be operated independently , (9M5),(7VL)

From September 2016

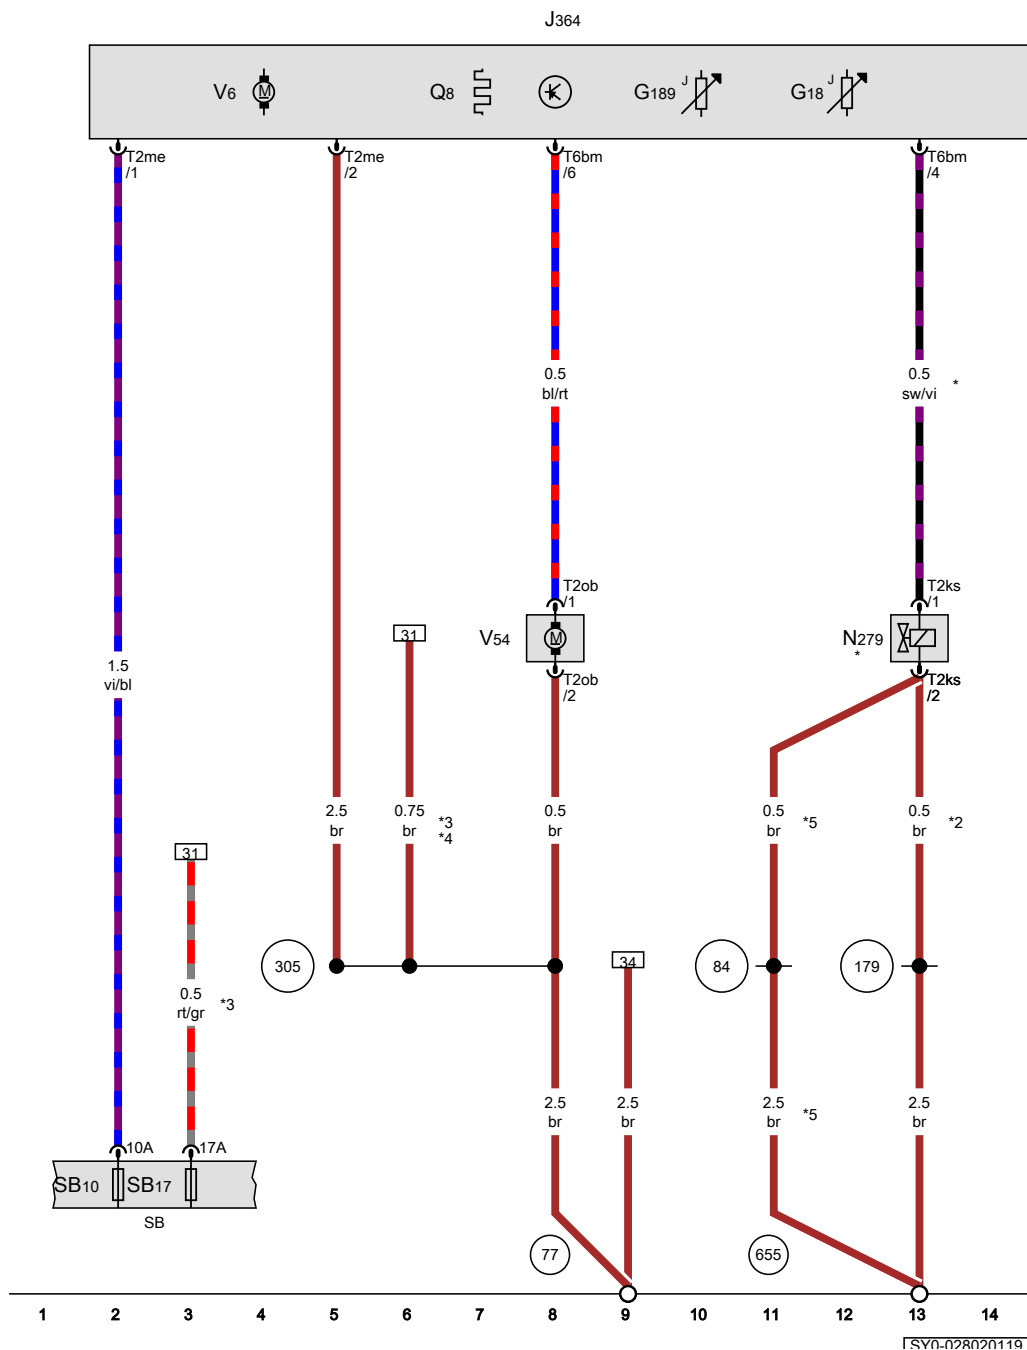


Auxiliary heater control unit, Heater coolant shut-off valve, Fuse holder B, Metering pump

- G18 Temperature sensor
- G189 Overheating sensor
- J364 Auxiliary heater control unit
- N279 Heater coolant shut-off valve
- Q8 Glow plug with flame monitor
- SB Fuse holder B
- SB10 Fuse 10 on fuse holder B
- SB17 Fuse 17 on fuse holder B
- T2ks 2-pin connector, black
- T2me 2-pin connector, black
- T2ob 2-pin connector, black
- T6bm 6-pin connector, black
- V6 Combustion air blower
- V54 Metering pump

- 77 Earth point, lower part of left B-pillar
- 84 Earth connection, engine block, in front right wiring harness
- 179 Earth connection, in left headlight wiring harness
- 305 Earth connection (auxiliary heater), in interior wiring harness
- 655 Earth point, on left headlight
- * For models with auxiliary heating
- *2 Up to May 2017
- *3 For models with 2nd heat exchanger
- *4 Up to July 2018
- *5 From May 2017

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

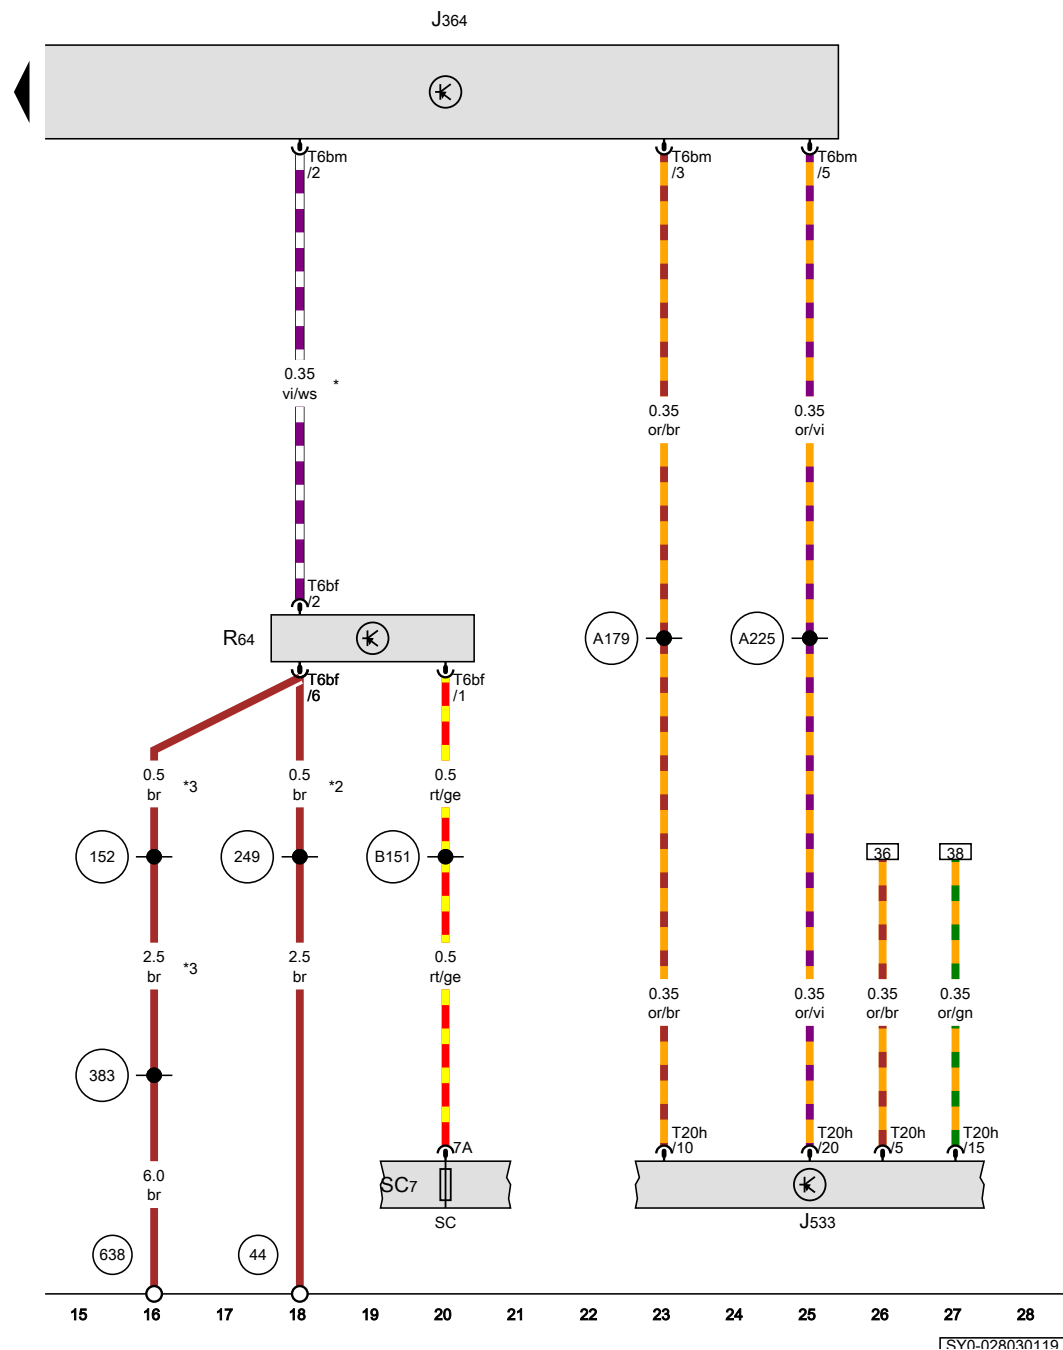

Auxiliary heater control unit, Remote control receiver for auxiliary heater

- J364 Auxiliary heater control unit
- J533 Data bus diagnostic interface
- R64 Remote control receiver for auxiliary heater
- SC Fuse holder C
- SC7 Fuse 7 on fuse holder C
- T6bf 6-pin connector, blue
- T6bm 6-pin connector, black
- T20h 20-pin connector, red

- 44 Earth point, lower part of left A-pillar
- 152 Earth connection 2, in front wiring harness
- 249 Earth connection 2, in interior wiring harness
- 383 Earth connection 18, in main wiring harness
- 638 Earth point, on right A-pillar
- A179 Connection (infotainment CAN bus, low), in dash panel wiring harness
- A225 Connection 2 (infotainment CAN bus, high) in dash panel wiring harness
- B151 Positive connection 3 (30a), in interior wiring harness

- * For models with remote control receiver for auxiliary heater
- *2 Up to May 2017
- *3 From May 2017

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

Circulation pump relay, Circulation pump

EX21 Heater and air conditioning controls
J160 Circulation pump relay
T2mg 2-pin connector, black
T9l 9-pin connector, black
T20j 20-pin connector, black
V55 Circulation pump

272 Earth connection 4, in front wiring harness

373 Earth connection 8, in main wiring harness

672 Earth point 2, on front of left longitudinal member

A146 Connection (convenience CAN bus, high), in dash panel wiring harness


A147 Connection (convenience CAN bus, low), in dash panel wiring harness

* For models with 2nd heat exchanger

*2 For models with Climatronic

*3 Up to July 2018

*4 From July 2018

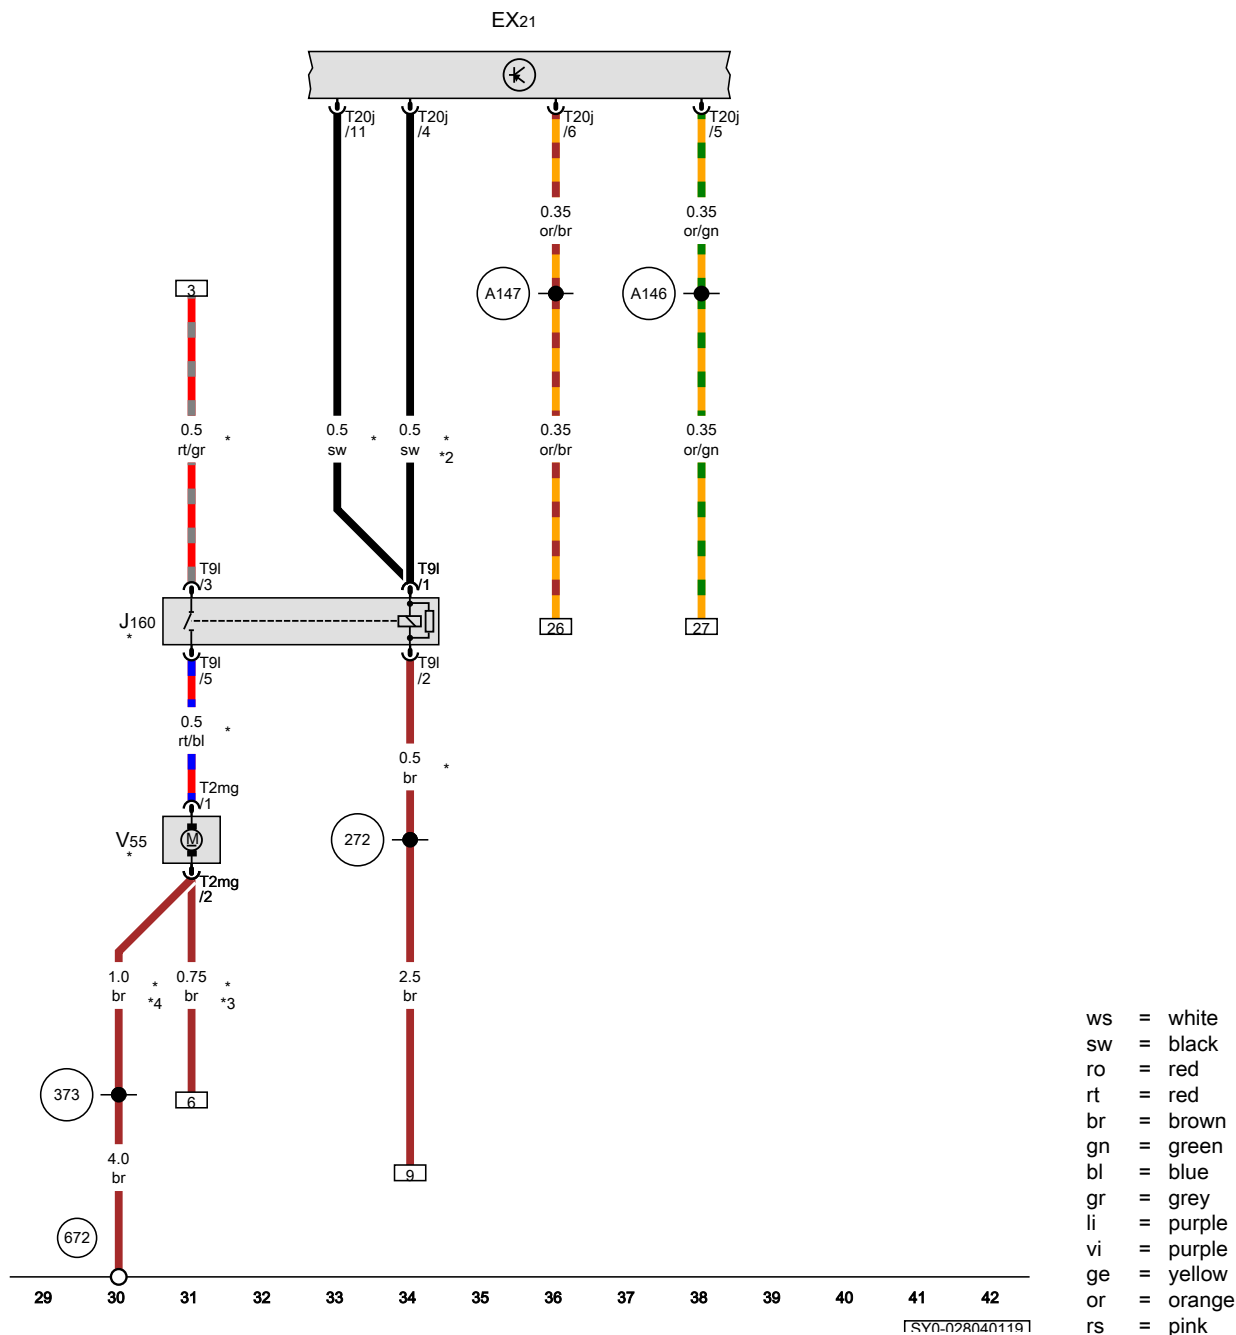


Roof ventilator


From September 2016

Switch-over relay 1 for roof ventilator, Roof ventilator

- J180 Switch-over relay 1 for roof ventilator
- J519 Onboard supply control unit
- SB Fuse holder B
- SB12 Fuse 12 on fuse holder B
- SD Fuse holder D
- SD11 Fuse 11 on fuse holder D
- T2my 2-pin connector, blue
- T9j 9-pin connector, grey
- T73c 73-pin connector, black
- V3 Roof ventilator

- 77 Earth point, lower part of left B-pillar
- 272 Earth connection 4, in front wiring harness
- B264 Connection 1, in roof wiring harness
- B299 Positive connection 3 (30), in main wiring harness
- * For models with no second battery
- *2 For models with second battery
- *3 Up to November 2017
- *4 From November 2017

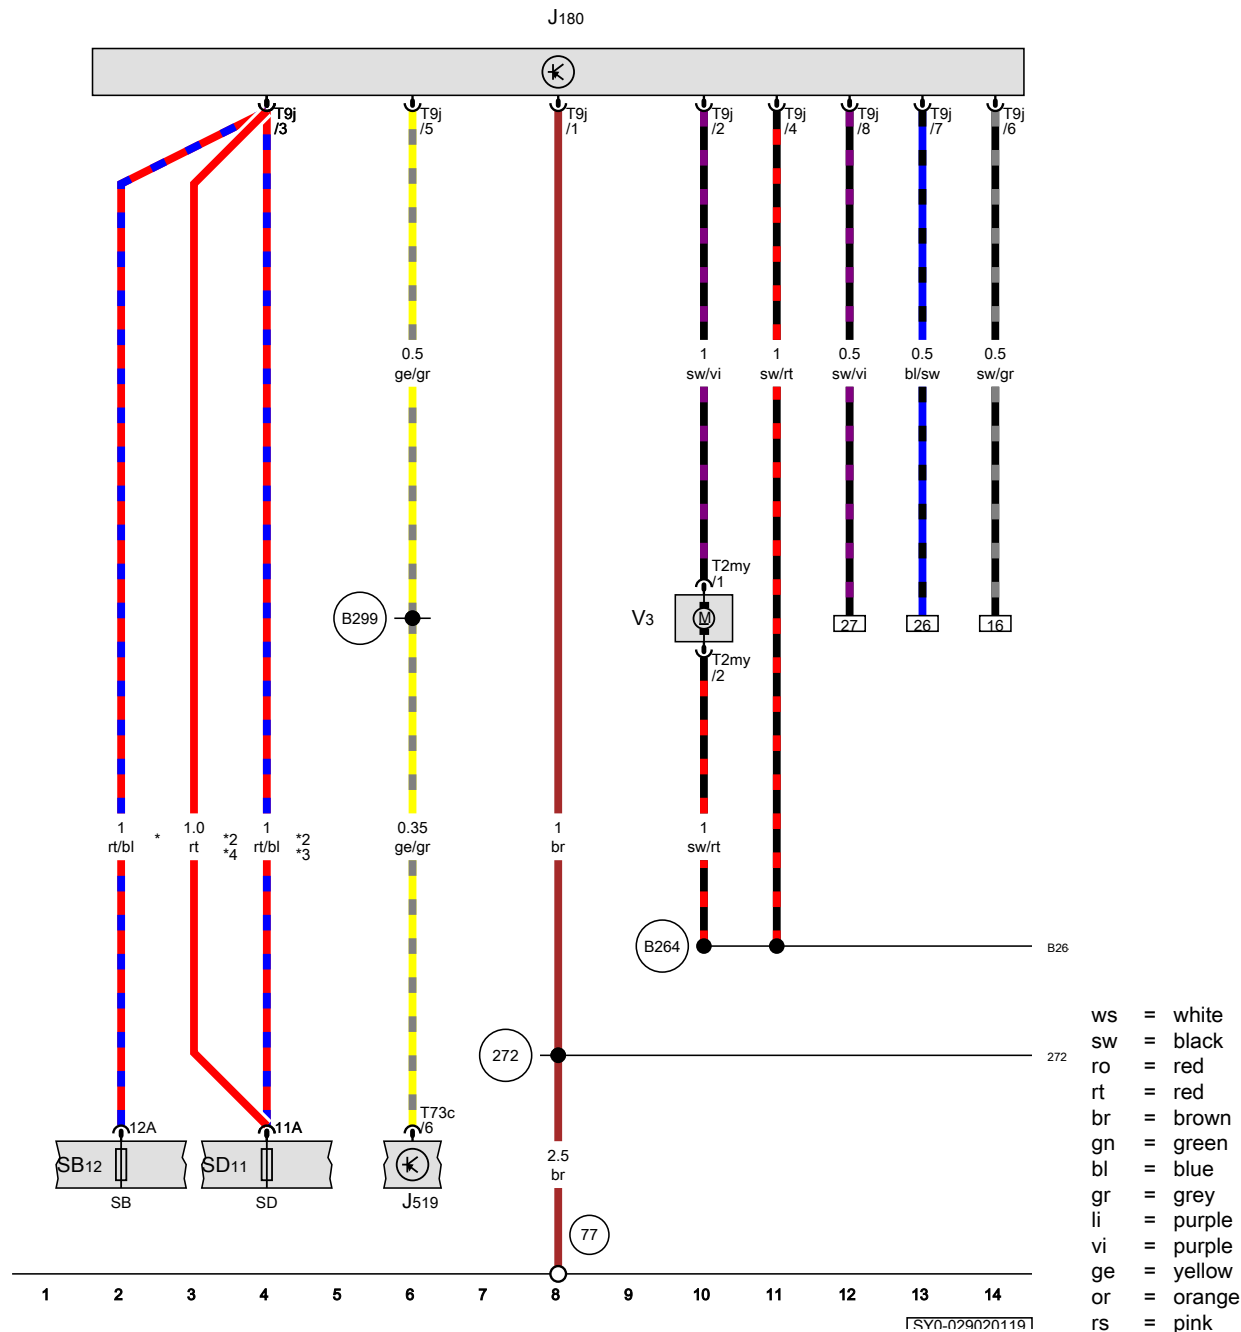

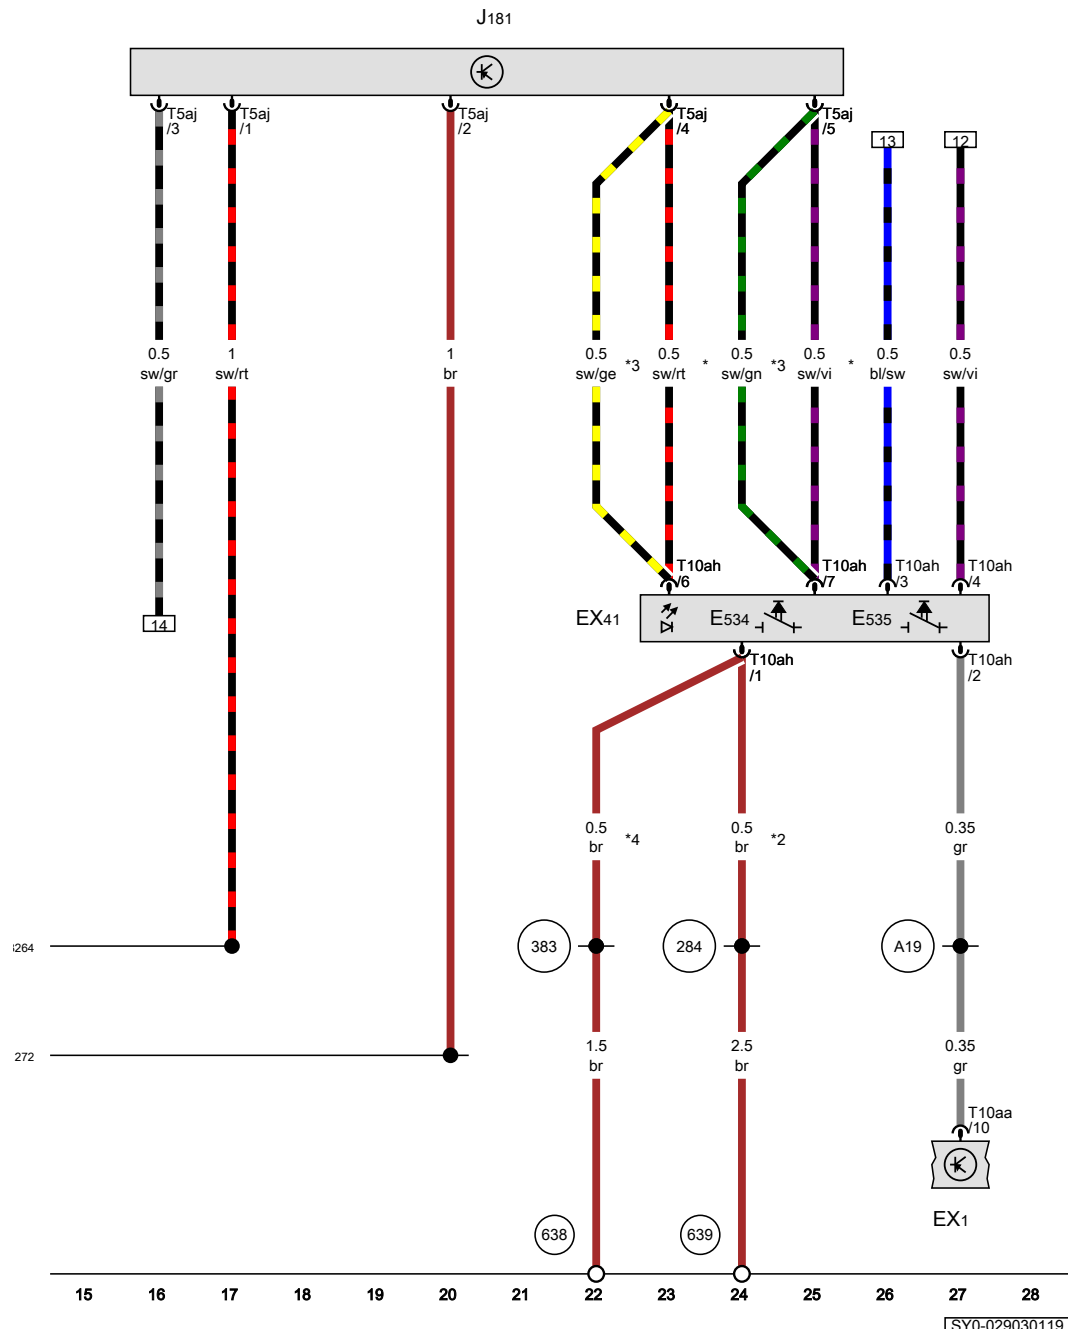

Switch module on left of dash panel, Switch for roof ventilator to ventilate load area, Switch for roof ventilator to extract air from load area, Switch-over relay 2 for roof ventilator

- EX1 Rotary light switch
- EX41 Switch module on left of dash panel
- E534 Switch for roof ventilator to ventilate load area
- E535 Switch for roof ventilator to extract air from load area
- J181 Switch-over relay 2 for roof ventilator
- T5aj 5-pin connector, black
- T10aa 10-pin connector, red
- T10ah 10-pin connector, red

- 272 Earth connection 4, in front wiring harness
- 284 Earth connection 6, in interior wiring harness
- 383 Earth connection 18, in main wiring harness
- 638 Earth point, on right A-pillar
- 639 Earth point, left A-pillar
- A19 Connection (58d), in dash panel wiring harness
- B264 Connection 1, in roof wiring harness

Seat heating , (4A1),(4A3)

From September 2016


Heated seat cushion for driver seat, Heated backrest for driver seat


- G344 Front left seat temperature sender
- J519 Onboard supply control unit
- T2vq 2-pin connector, black
- T4gw 4-pin connector, black
- T17y 17-pin connector, red
- T73a 73-pin connector, black
- T73c 73-pin connector, black
- Z6 Heated seat cushion for driver seat
- Z7 Heated backrest for driver seat

- 96 Earth connection 1, in seat heating wiring harness
- 136 Earth connection 2, in seat heating wiring harness
- 810 Earth point on central tube for dash panel, centre left
- 811 Earth point on central tube for dash panel, centre right

- * Pre-wired component
- *2 For left-hand drive models
- *3 For right-hand drive models
- *4 Up to November 2017
- *5 For models with heated driver and front passenger seat
- *6 For models with heated driver seat
- *7 According to equipment
- *8 From November 2017
- *9 For models with heated front passenger seat


- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

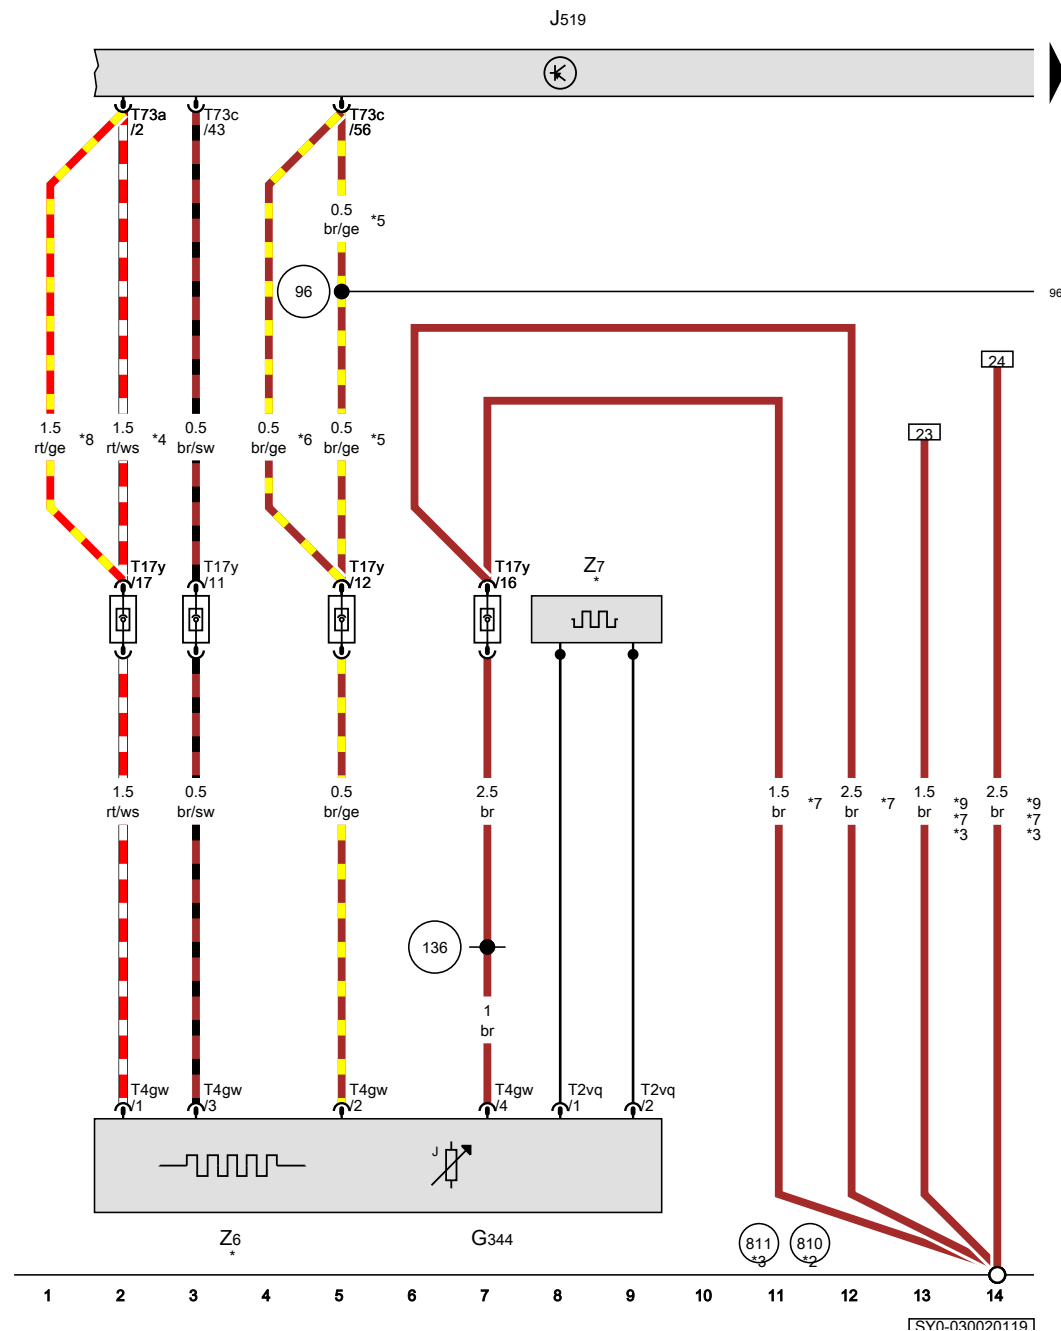

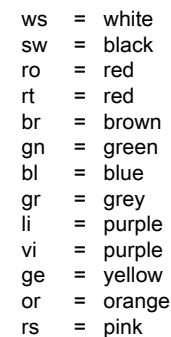

G345	Front right seat temperature sender
J519	Onboard supply control unit
T2vs	2-pin connector, black
T4ha	4-pin connector, black
T17z	17-pin connector, red
T73a	73-pin connector, black
T73c	73-pin connector, black
Z8	Heated seat cushion for front passenger seat
Z9	Heated backrest for front passenger seat

- 78 Earth point, lower part of right B-pillar
 - 96 Earth connection 1, in seat heating wiring harness
 - 318 Earth connection 4, in seat heating wiring harness
 - 319 Earth connection 5, in seat heating wiring harness
- * For models with heated front passenger seat
 - *2 Pre-wired component
 - *3 Up to November 2017
 - *4 According to equipment
 - *5 For left-hand drive models
 - *6 For right-hand drive models
 - *7 From November 2017

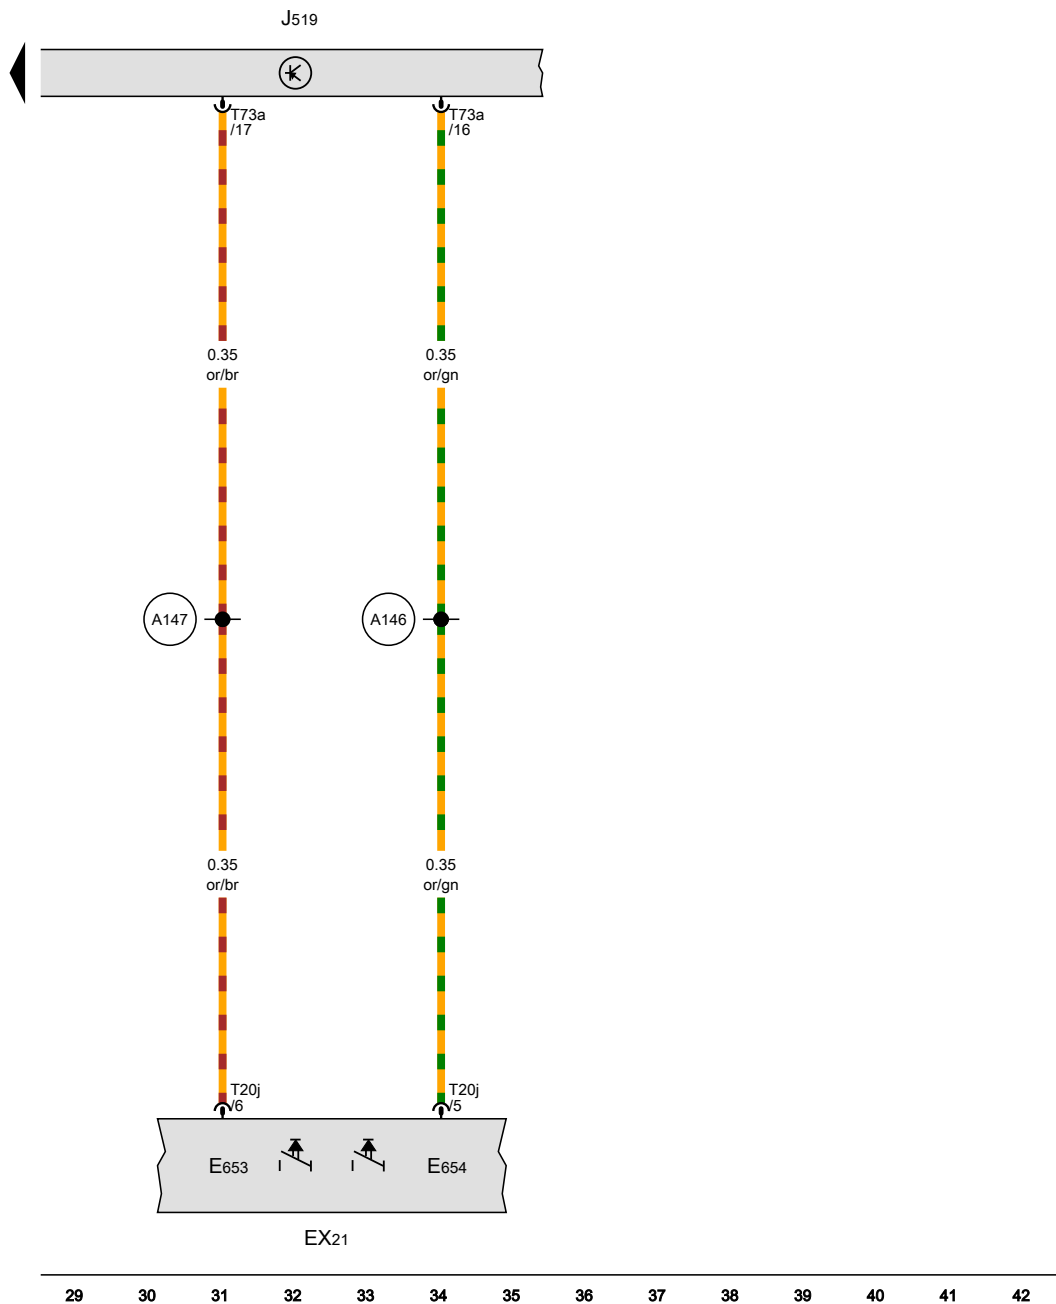

Button for left seat heating, Button for right seat heating

- EX21 Heater and air conditioning controls
- E653 Button for left seat heating
- E654 Button for right seat heating
- J519 Onboard supply control unit
- T20j 20-pin connector, black
- T73a 73-pin connector, black
- A146 Connection (convenience CAN bus, high), in dash panel wiring harness
- A147 Connection (convenience CAN bus, low), in dash panel wiring harness

Programmable special functions , (IS1),(IS2),(IS3),(IS4),(IS5),(IS6)

From September 2016


Special vehicle control unit, Fuse holder B, Fuse holder D

J608 Special vehicle control unit
 SB Fuse holder B
 SB8 Fuse 8 on fuse holder B
 SB33 Fuse 33 on fuse holder B
 SB42 Fuse 42 on fuse holder B
 SB43 Fuse 43 on fuse holder B
 SB49 Fuse 49 on fuse holder B
 SB51 Fuse 51 on fuse holder B
 SD Fuse holder D
 SD1 Fuse 1 on fuse holder D
 SD3 Fuse 3 on fuse holder D
 T6cb 6-pin connector, blue

382 Earth connection 17, in main wiring harness

638 Earth point, on right A-pillar


* For models with no second battery
 *2 For models with second battery
 *3 For models with no air conditioning system
 *4 For models with telematics
 *5 For models with air conditioning system
 *6 For right-hand drive models

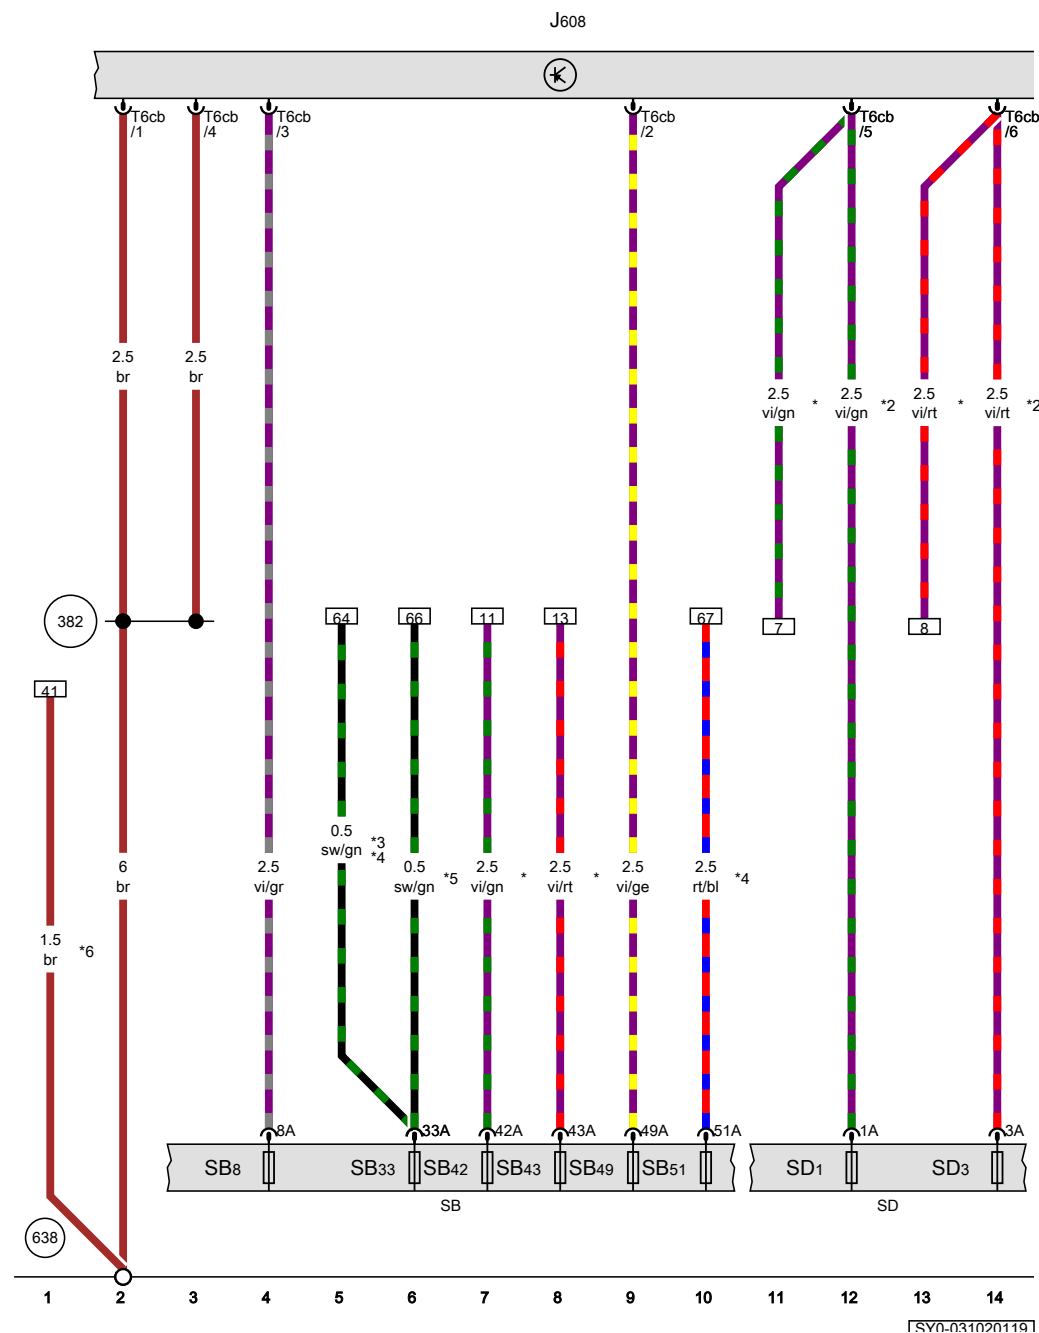


ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

Special vehicle control unit, Power take-off valve

- J519 Onboard supply control unit
- J533 Data bus diagnostic interface
- J608 Special vehicle control unit
- N254 Power take-off valve, on underbody, next to auxiliary heater
- T4eq 4-pin connector, green
- T12o 12-pin connector, green
- T20h 20-pin connector, red
- T20i 20-pin connector, black
- T40b 40-pin connector, black
- T73a 73-pin connector, black
- (77) Earth point, lower part of left B-pillar
- (305) Earth connection (auxiliary heater), in interior wiring harness
- (A139) Connection 3 (15) in dash panel wiring harness
- (A146) Connection (convenience CAN bus, high), in dash panel wiring harness
- (A147) Connection (convenience CAN bus, low), in dash panel wiring harness
- (A237) Connection 1 (powertrain CAN bus, low), in dash panel wiring harness
- (B383) Connection 1 (powertrain CAN bus, high), in main wiring harness
- * For models with auxiliary drive
- *2 Pre-wired component

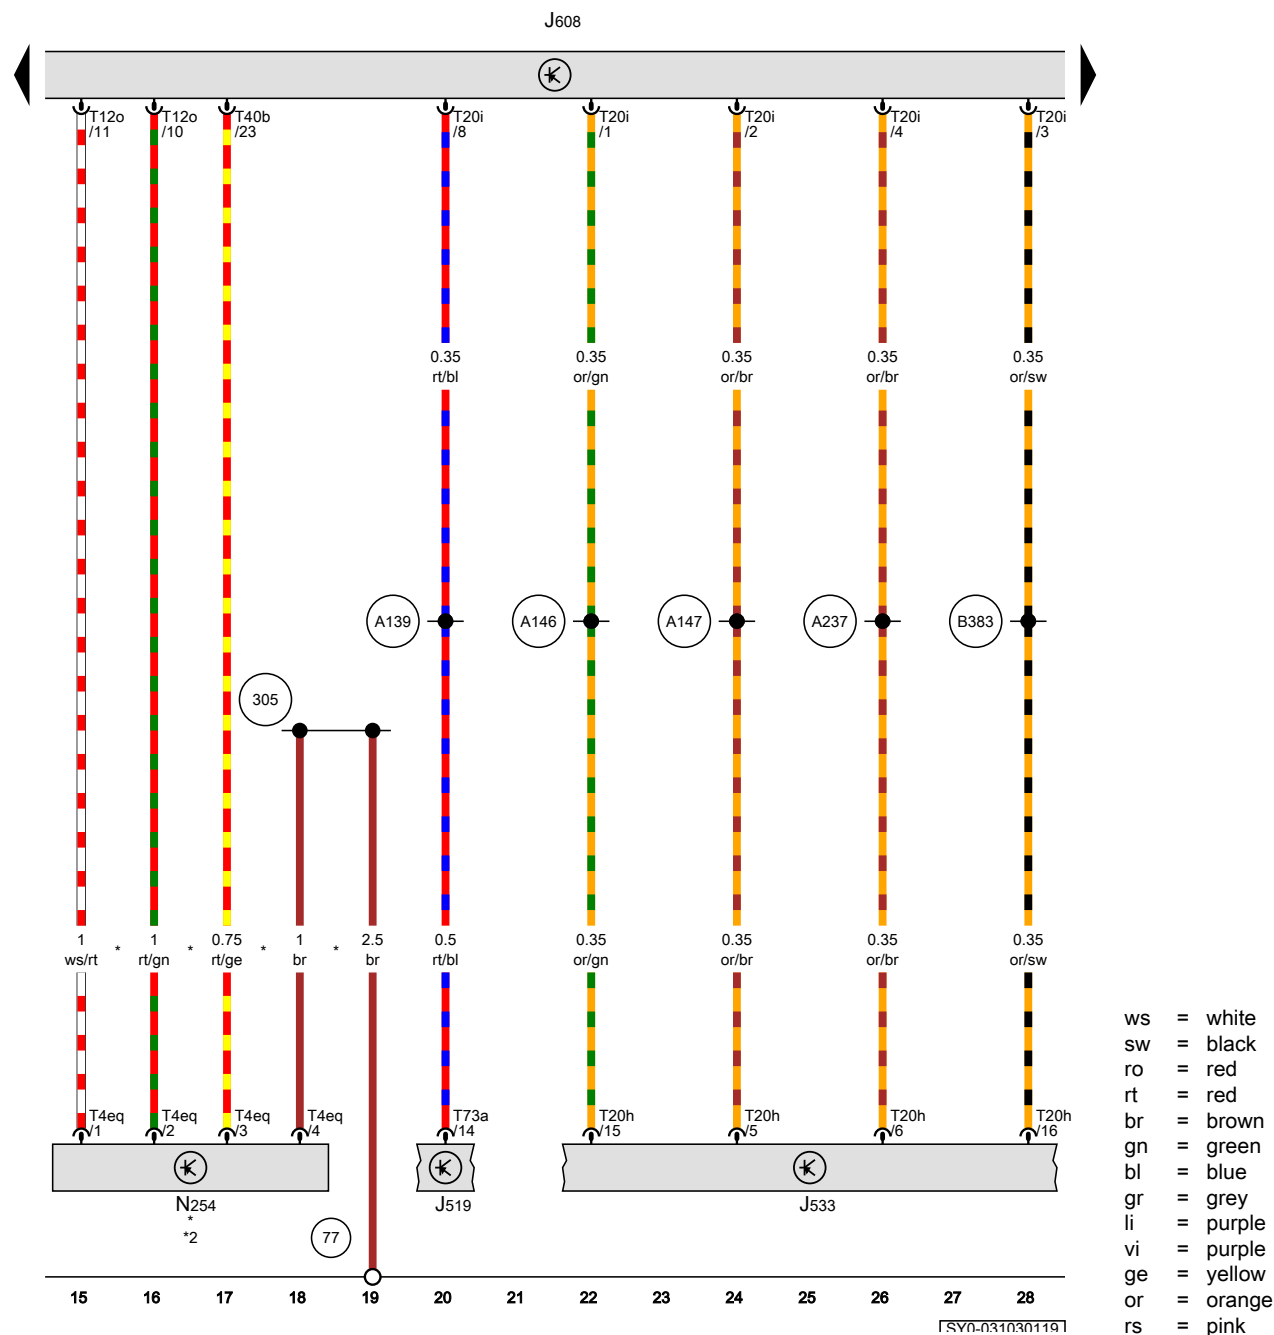


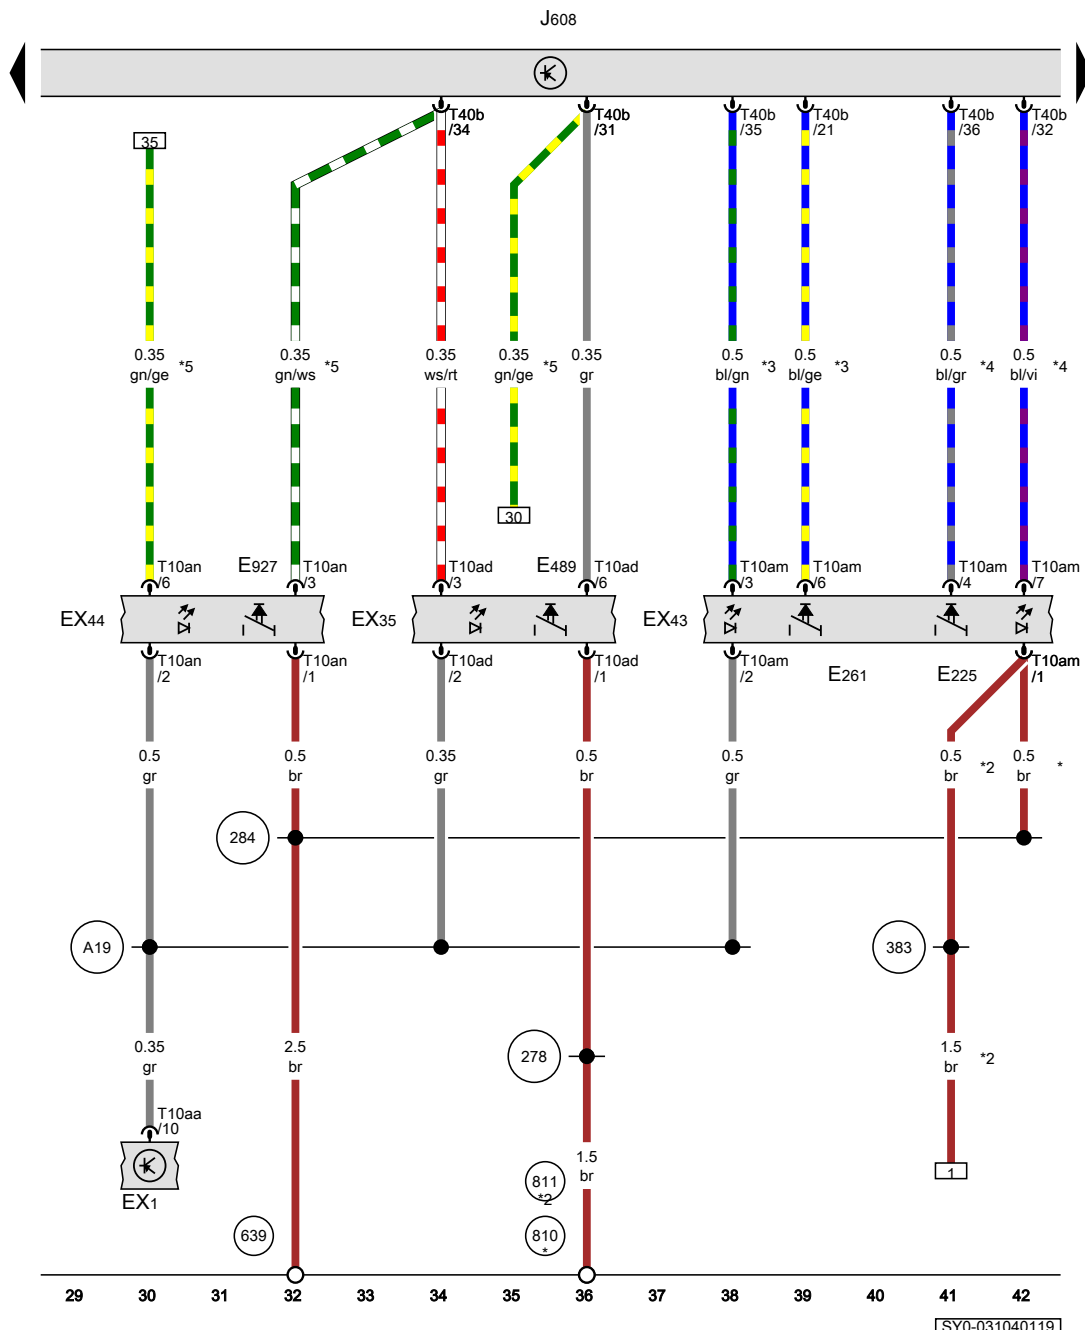

Power take-off switch, Working speed control switch, Ignition bypass button, Remote engine start button, Special vehicle control unit

- EX1 Rotary light switch
- EX35 Centre switch module 2 in dash panel
- EX43 Switch module 1 in dash panel, next to steering wheel
- EX44 Switch module 2 in dash panel, next to steering wheel
- E225 Power take-off switch
- E261 Working speed control switch
- E489 Ignition bypass button
- E927 Remote engine start button
- J608 Special vehicle control unit
- T10aa 10-pin connector, red
- T10ad 10-pin connector, black
- T10am 10-pin connector, red
- T10an 10-pin connector, black
- T40b 40-pin connector, black

- 278 Earth connection 4, in interior wiring harness
- 284 Earth connection 6, in interior wiring harness
- 383 Earth connection 18, in main wiring harness
- 639 Earth point, left A-pillar
- 810 Earth point on central tube for dash panel, centre left
- 811 Earth point on central tube for dash panel, centre right
- A19 Connection (58d), in dash panel wiring harness
- * For left-hand drive models
- *2 For right-hand drive models
- *3 For models with electronic engine speed regulation
- *4 For models with auxiliary drive
- *5 For models with remote engine start

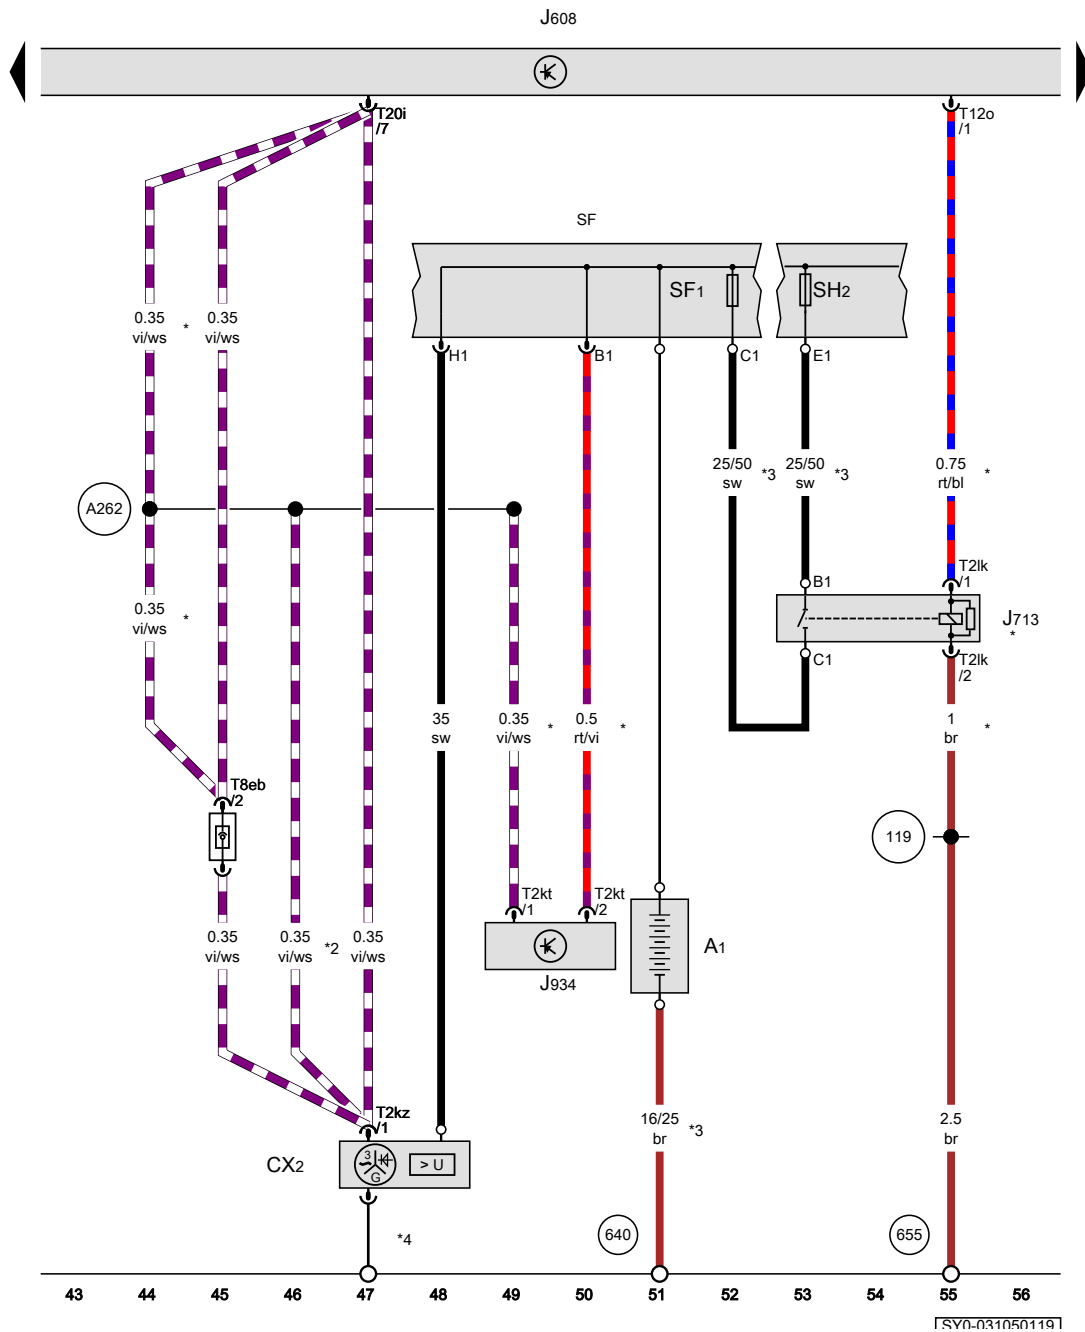


Second battery, Alternator 2 with voltage regulator, Special vehicle control unit, Second battery charging circuit relay, Battery monitor control unit 2

- A1 Second battery
- CX2 Alternator 2 with voltage regulator
- J608 Special vehicle control unit
- J713 Second battery charging circuit relay
- J934 Battery monitor control unit 2
- SF Fuse holder F
- SF1 Fuse 1 in fuse holder F
- SH2 Fuse 2 in fuse holder H
- T2kt 2-pin connector, black
- T2kz 2-pin connector, black
- T2lk 2-pin connector, black
- T8eb 8-pin connector, black
- T12o 12-pin connector, green
- T20i 20-pin connector, black

- 119 Earth connection 1, in headlight wiring harness
- 640 Earth point 2, left in engine compartment
- 655 Earth point, on left headlight
- A262 Connection 3 (LIN bus) in dash panel wiring harness

- * For models with second battery
- *2 For models with second battery and alternator 2 with voltage regulator
- *3 Cross section depends on equipment
- *4 Earth supply via housing


ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

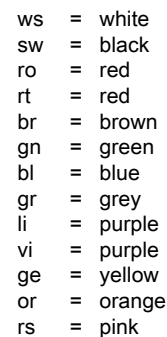

J608	Special vehicle control unit
T12s	12-pin connector, green
T20i	20-pin connector, black
TSF1	Coupling point for special vehicles

- 78 Earth point, lower part of right B-pillar
- 83 Earth connection 1, in front right wiring harness
- 319 Earth connection 5, in seat heating wiring harness
- L9 Connection 1, in air conditioning system wiring harness
 - * For models with telematics
 - *2 For models with no air conditioning system
 - *3 For models with air conditioning system

GPS aerial, LTE aerial 1, Coupling point for special vehicles

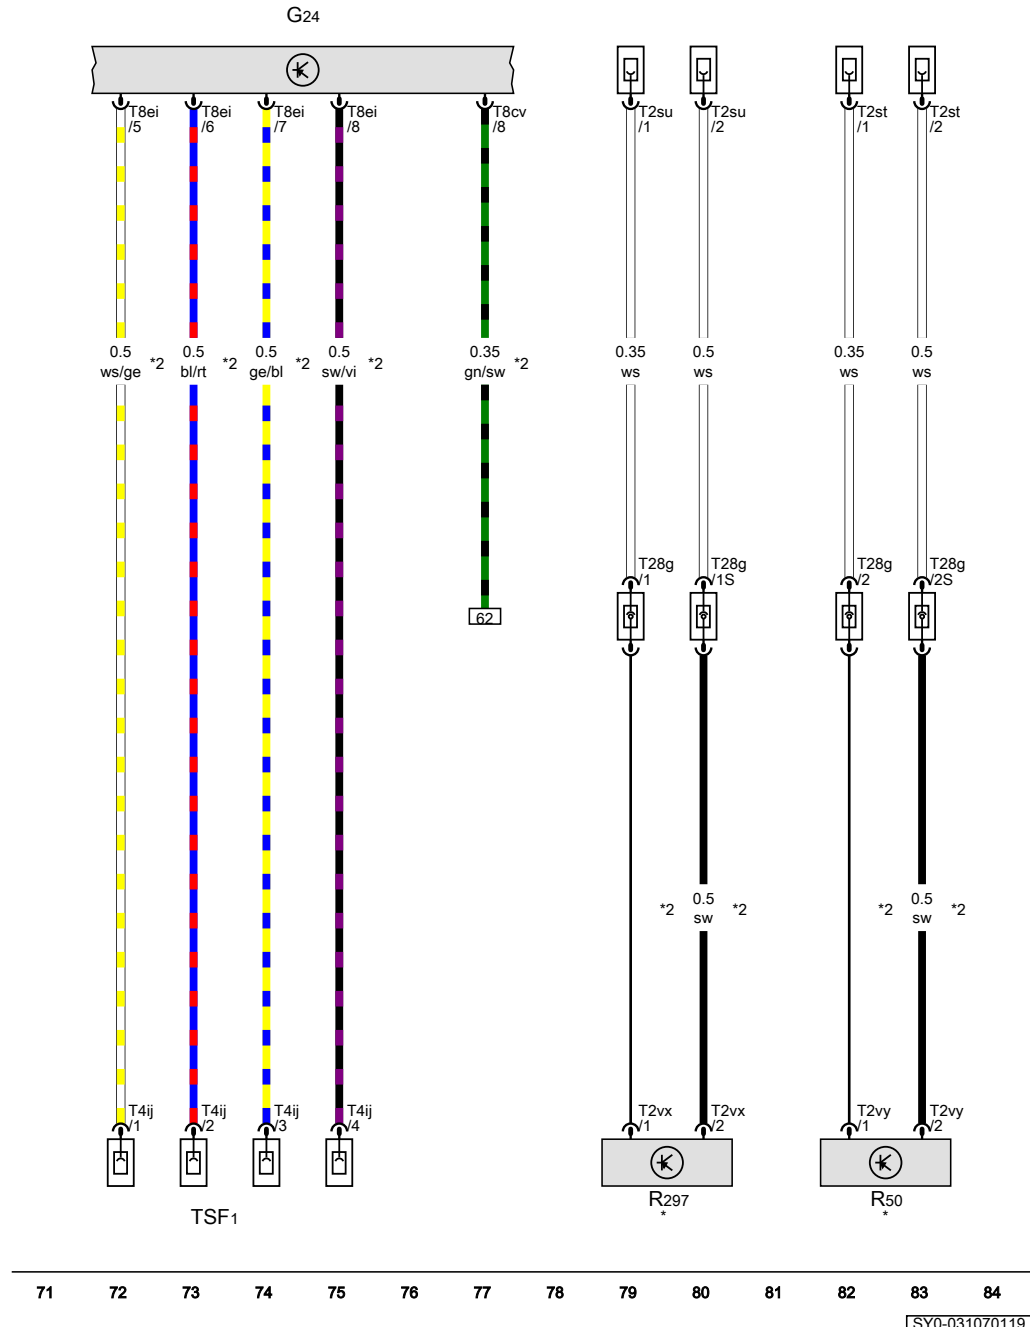


- G24 Tachograph
- R50 GPS aerial, in passenger side exterior mirror housing
- R297 LTE aerial 1, in passenger side exterior mirror housing
- T2st 2-pin connector, blue
- T2su 2-pin connector, purple
- T2vx 2-pin connector
- T2vy 2-pin connector
- T4ij 4-pin connector, black
- T8cv 8-pin connector, brown
- T8ei 8-pin connector, red
- T28g 28-pin connector, black
- TSF1 Coupling point for special vehicles
- * Pre-wired component
- *2 For models with telematics

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

Interface for external use

From September 2016

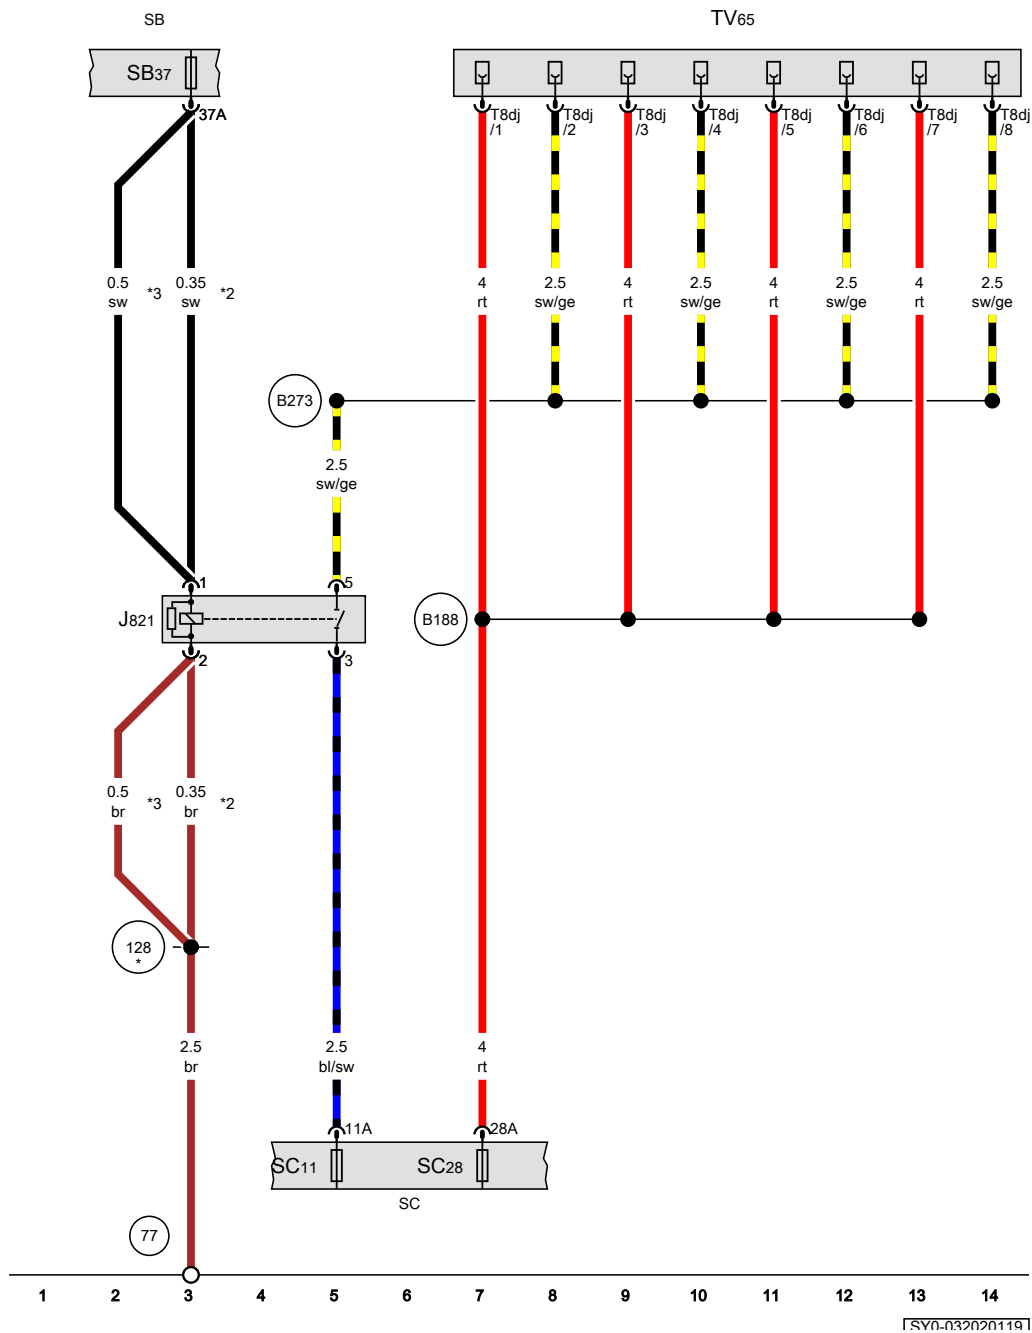

Relay for special installations, terminal 15, Electrical terminal strip for external use

- J821 Relay for special installations, terminal 15
- SB Fuse holder B
- SB37 Fuse 37 on fuse holder B
- SC Fuse holder C
- SC11 Fuse 11 on fuse holder C
- SC28 Fuse 28 on fuse holder C
- T8dj 8-pin connector, black
- TV65 Electrical terminal strip for external use

- 77 Earth point, lower part of left B-pillar
- 128 Earth connection 1, in interior light wiring harness
- B188 Positive connection 5 (30), in interior wiring harness
- B273 Positive connection (15), in main wiring harness
- * For models with exhaust flap valve
- *2 Up to May 2017
- *3 From May 2017


- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink


Preparation for 3-way tip function

From September 2016

Special vehicle control unit

- J608 Special vehicle control unit
- SB Fuse holder B
- SD Fuse holder D
- SD1 Fuse 1 on fuse holder D
- SD3 Fuse 3 on fuse holder D
- SB8 Fuse 8 on fuse holder B
- SB11 Fuse 11 on fuse holder B
- SB26 Fuse 26 on fuse holder B
- SB42 Fuse 42 on fuse holder B
- SB43 Fuse 43 on fuse holder B
- SB49 Fuse 49 on fuse holder B
- T6cb 6-pin connector, blue
- * Up to July 2017
- *2 For models with no second battery
- *3 Up to May 2017
- *4 For models with second battery
- *5 From May 2017
- *6 gradual introduction

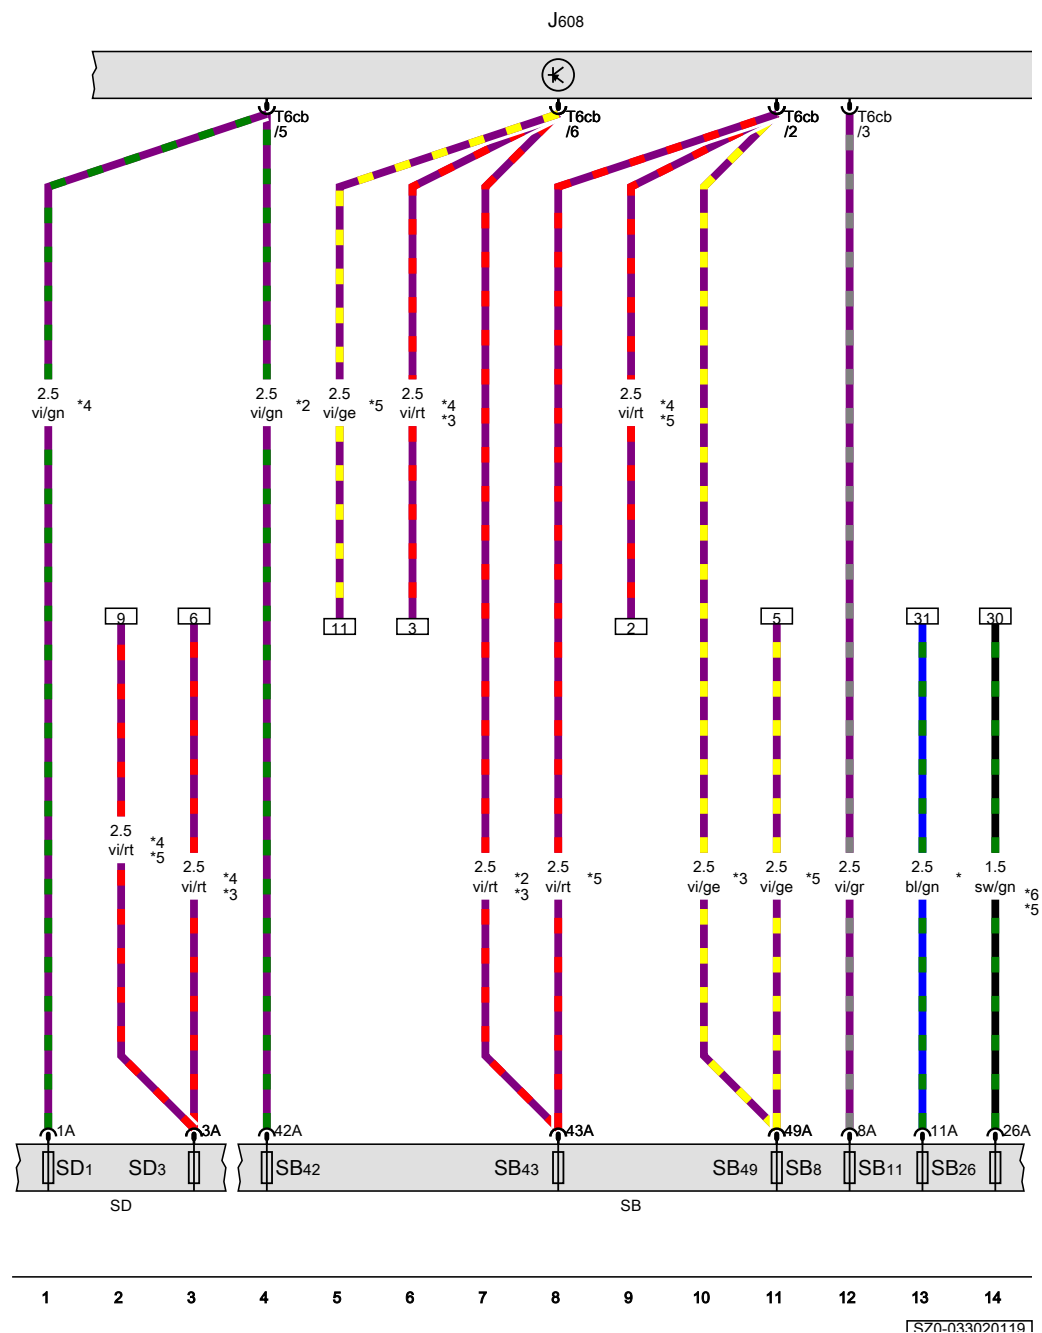


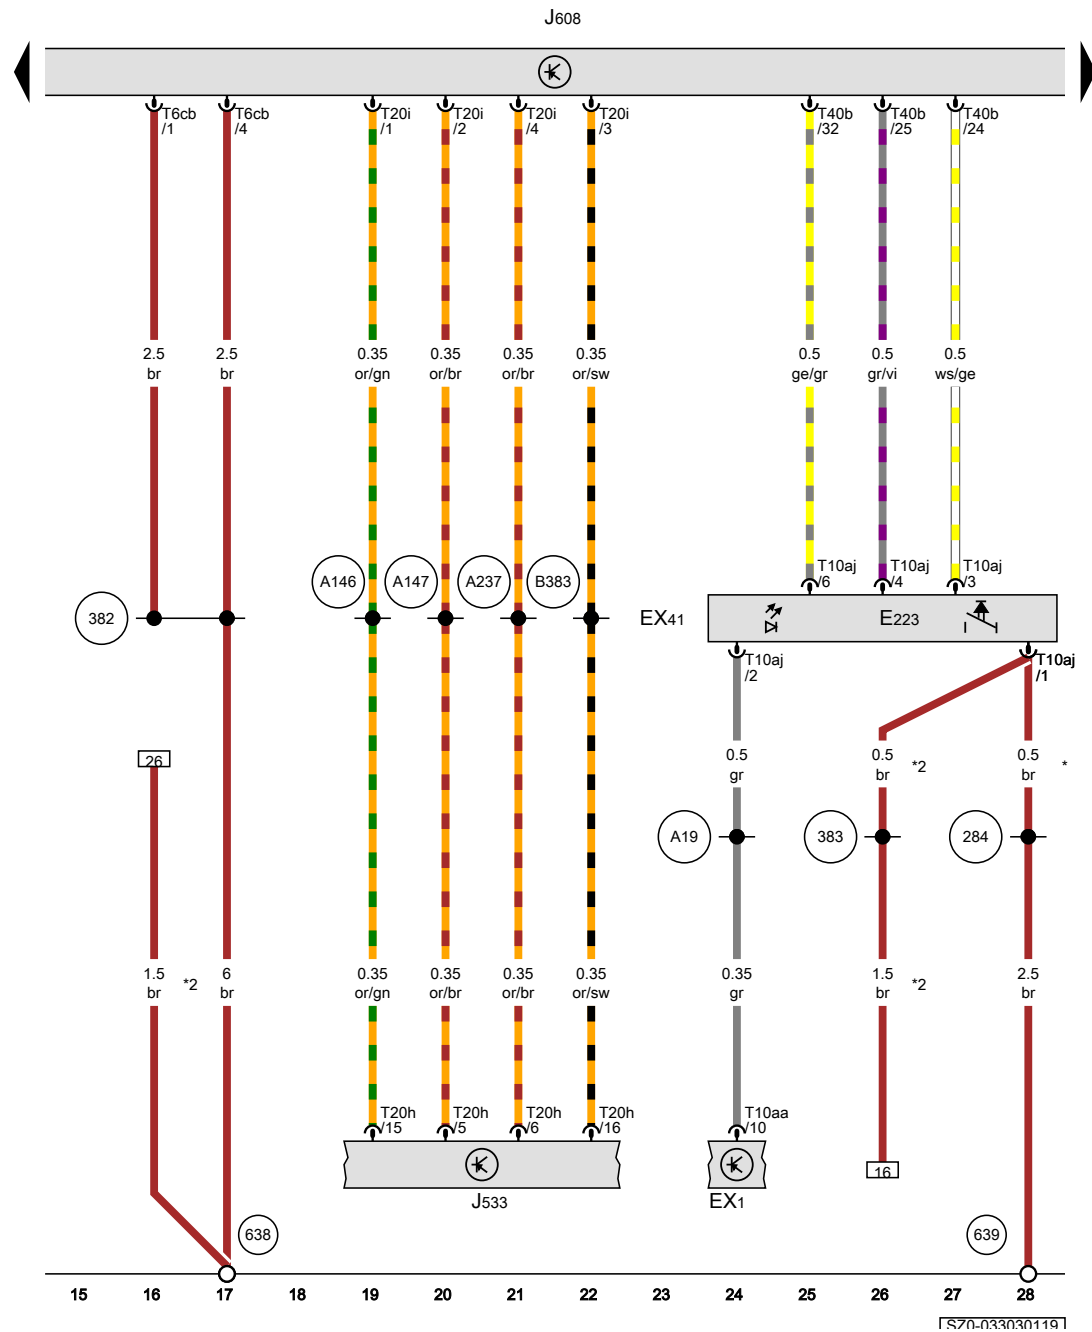

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

Switch module on left of dash panel, Tilting mechanism button, Special vehicle control unit

- EX1 Rotary light switch
- EX41 Switch module on left of dash panel
- E223 Tilting mechanism button
- J533 Data bus diagnostic interface
- J608 Special vehicle control unit
- T6cb 6-pin connector, blue
- T10aa 10-pin connector, red
- T10aj 10-pin connector, red
- T20h 20-pin connector, red
- T20i 20-pin connector, black
- T40b 40-pin connector, black
- 284 Earth connection 6, in interior wiring harness
- 382 Earth connection 17, in main wiring harness
- 383 Earth connection 18, in main wiring harness
- 638 Earth point, on right A-pillar
- 639 Earth point, left A-pillar
- A19 Connection (58d), in dash panel wiring harness
- A146 Connection (convenience CAN bus, high), in dash panel wiring harness
- A147 Connection (convenience CAN bus, low), in dash panel wiring harness
- A237 Connection 1 (powertrain CAN bus, low), in dash panel wiring harness
- B383 Connection 1 (powertrain CAN bus, high), in main wiring harness
- * For left-hand drive models
- *2 For right-hand drive models

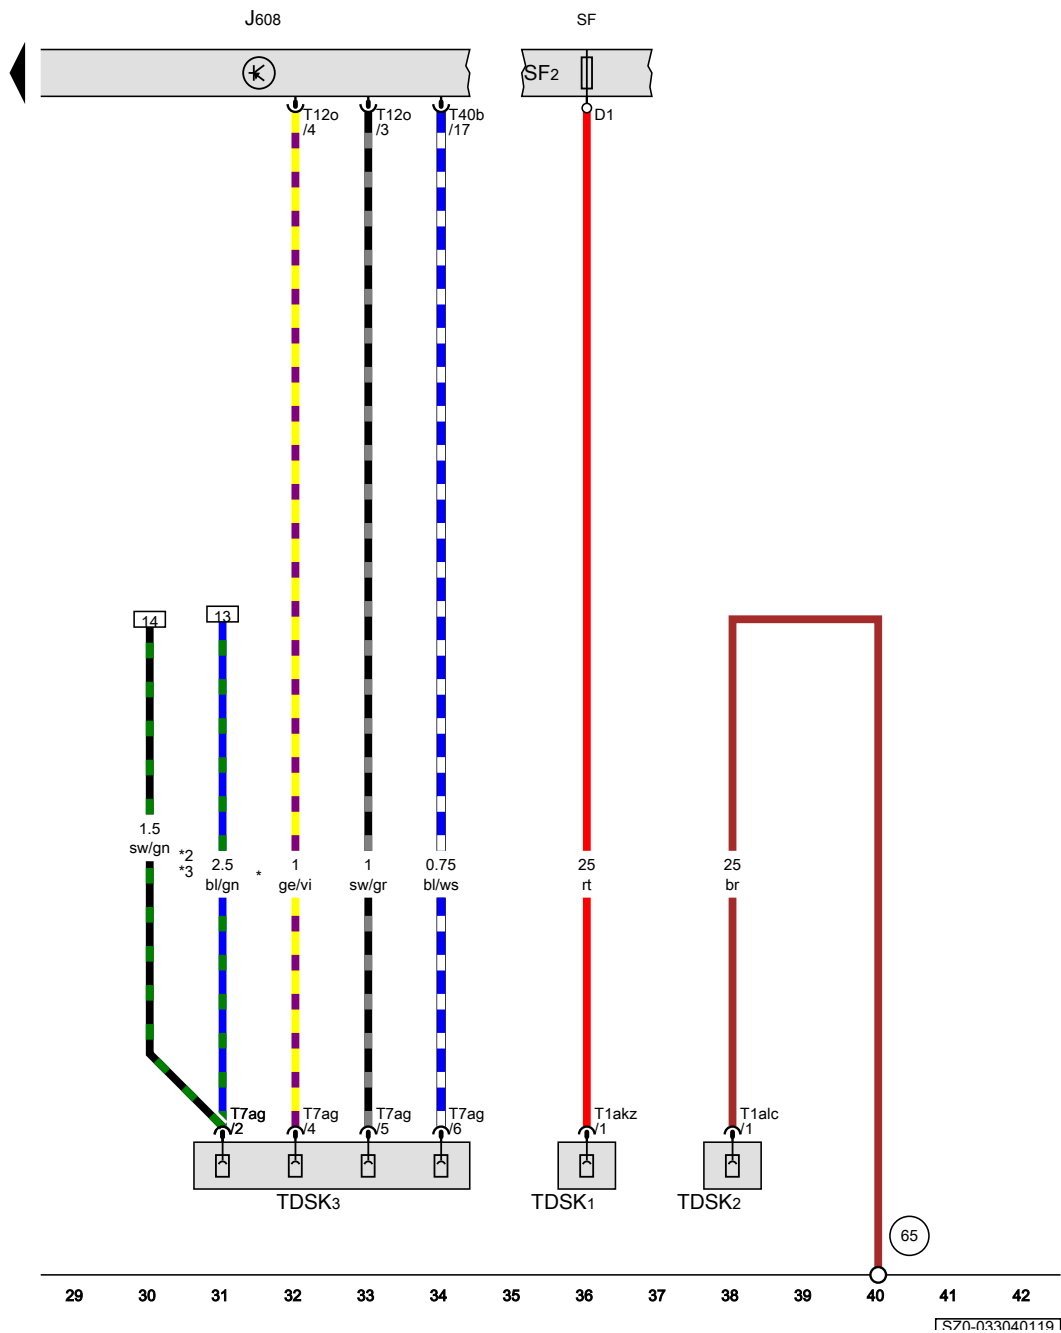

Special vehicle control unit

J608	Special vehicle control unit
SF	Fuse holder F
SF2	Fuse 2 in fuse holder F
T1akz	1-pin connector
T1alc	1-pin connector
T7ag	7-pin connector
T12o	12-pin connector, green
T40b	40-pin connector, black
TDSK1	Coupling point 1 for 3-way tipper
TDSK2	Coupling point 2 for 3-way tipper
TDSK3	Coupling point 3 for 3-way tipper
65	Earth point, on rear of left longitudinal member
*	Up to July 2017
*2	gradual introduction
*3	From May 2017

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink

Preparation for tail lift

From September 2016

Relay for tail lift

J519 Onboard supply control unit

J823 Relay for tail lift

SB Fuse holder B

SB7 Fuse 7 on fuse holder B

SB26 Fuse 26 on fuse holder B

T9k 9-pin connector, grey

T73c 73-pin connector, black

(77) Earth point, lower part of left B-pillar

(427) Earth connection 3, in right rear end wiring harness

(B299) Positive connection 3 (30), in main wiring harness


(B308) Positive connection 12 (30), in main wiring harness

* For models with double cab/dropside

*2 For panel van and Kombi models


*3 Up to May 2017

*4 From May 2017

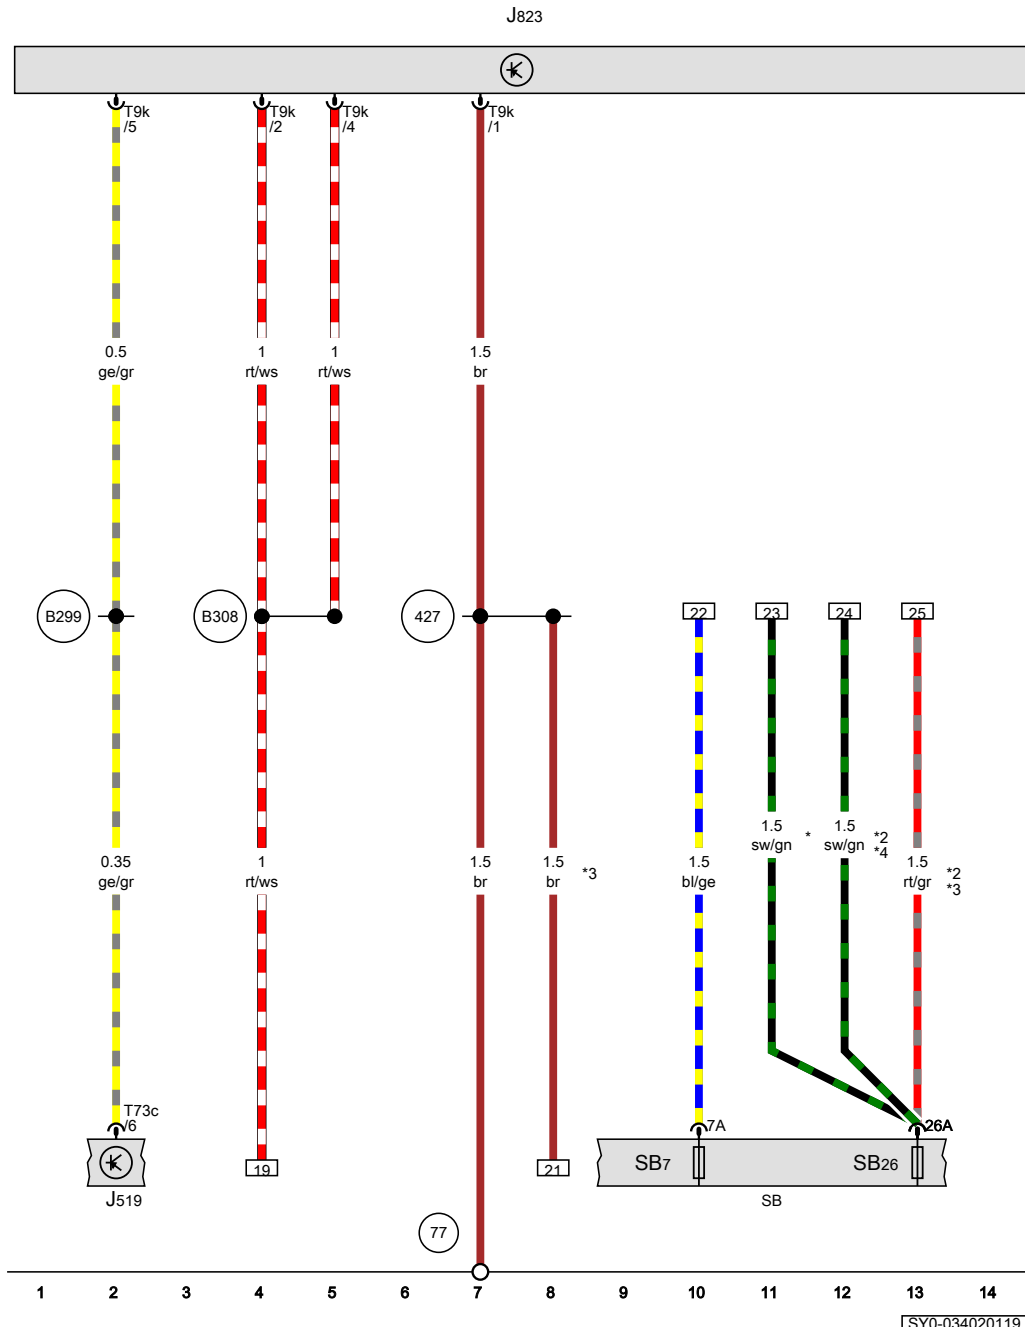

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink


Centre switch module 2 in dash panel, Tail lift switch, Relay for tail lift, Coupling point 3 for tail lift

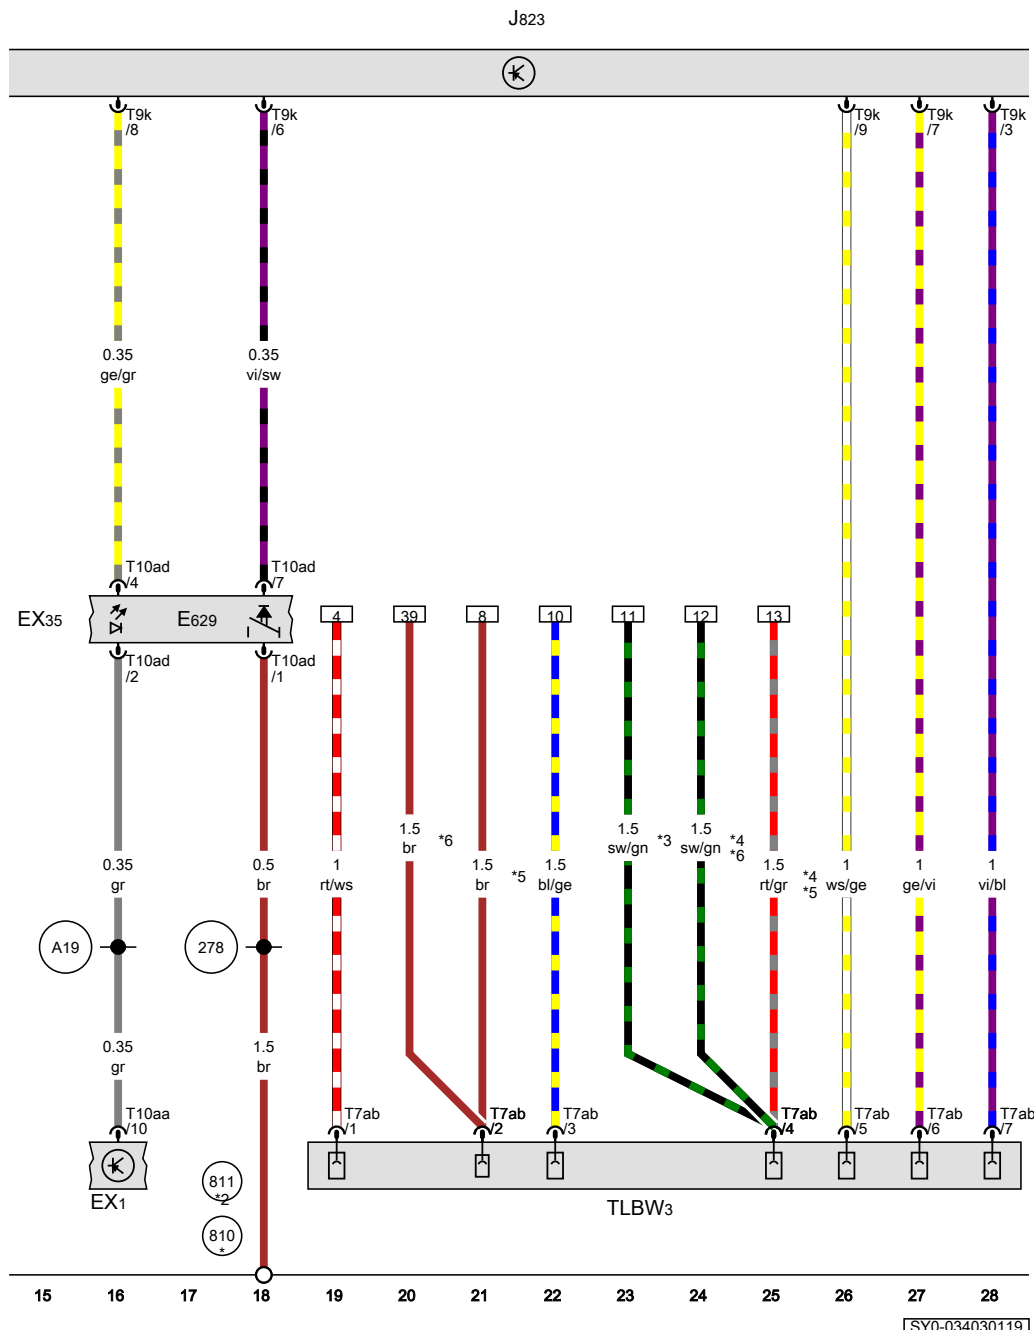

- EX1 Rotary light switch
- EX35 Centre switch module 2 in dash panel
- E629 Tail lift switch
- J823 Relay for tail lift
- T7ab 7-pin connector
- T9k 9-pin connector, grey
- T10aa 10-pin connector, red
- T10ad 10-pin connector, black
- TLBW3 Coupling point 3 for tail lift

- 278 Earth connection 4, in interior wiring harness
- 810 Earth point on central tube for dash panel, centre left
- 811 Earth point on central tube for dash panel, centre right
- A19 Connection (58d), in dash panel wiring harness
- * For left-hand drive models
- *2 For right-hand drive models
- *3 For models with double cab/dropside
- *4 For panel van and Kombi models
- *5 Up to May 2017
- *6 From May 2017

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

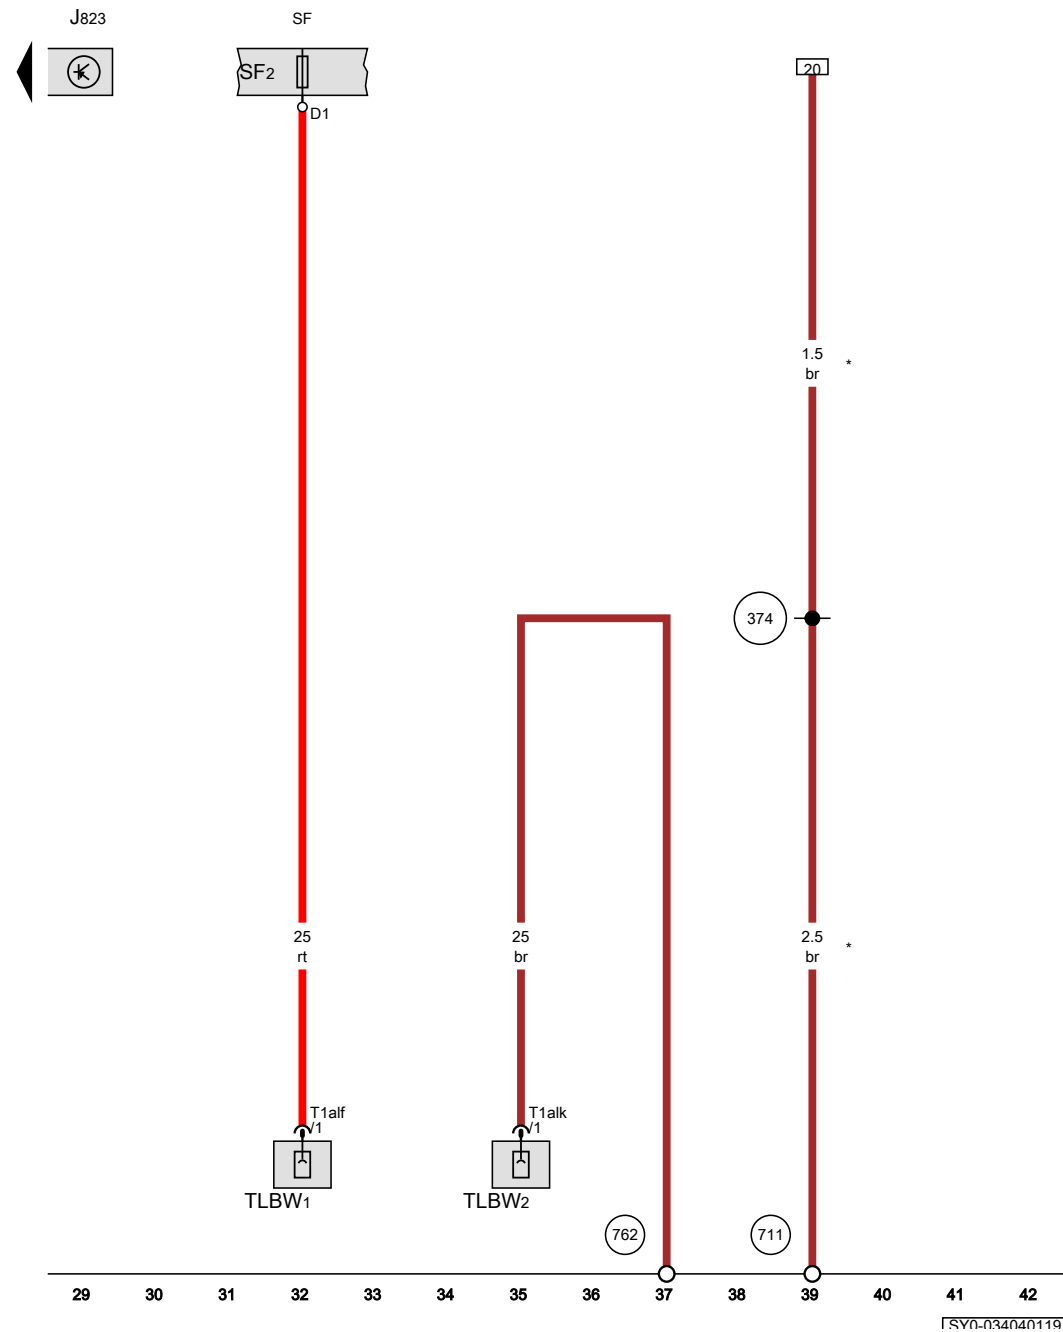

Relay for tail lift, Coupling point 1 for tail lift, Coupling point 2 for tail lift

J823 Relay for tail lift
 SF Fuse holder F
 SF2 Fuse 2 in fuse holder F
 T1alf 1-pin connector
 T1alk 1-pin connector
 TLBW1 Coupling point 1 for tail lift
 TLBW2 Coupling point 2 for tail lift

374 Earth connection 9, in main wiring harness
 711 Earth point 3 on rear left longitudinal member
 762 Earth point 4 on rear left longitudinal member


* From May 2017

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink


Rotating lights (yellow) , (9LN),(9LP)

From September 2016

Rotating light switch, Rotating light control unit

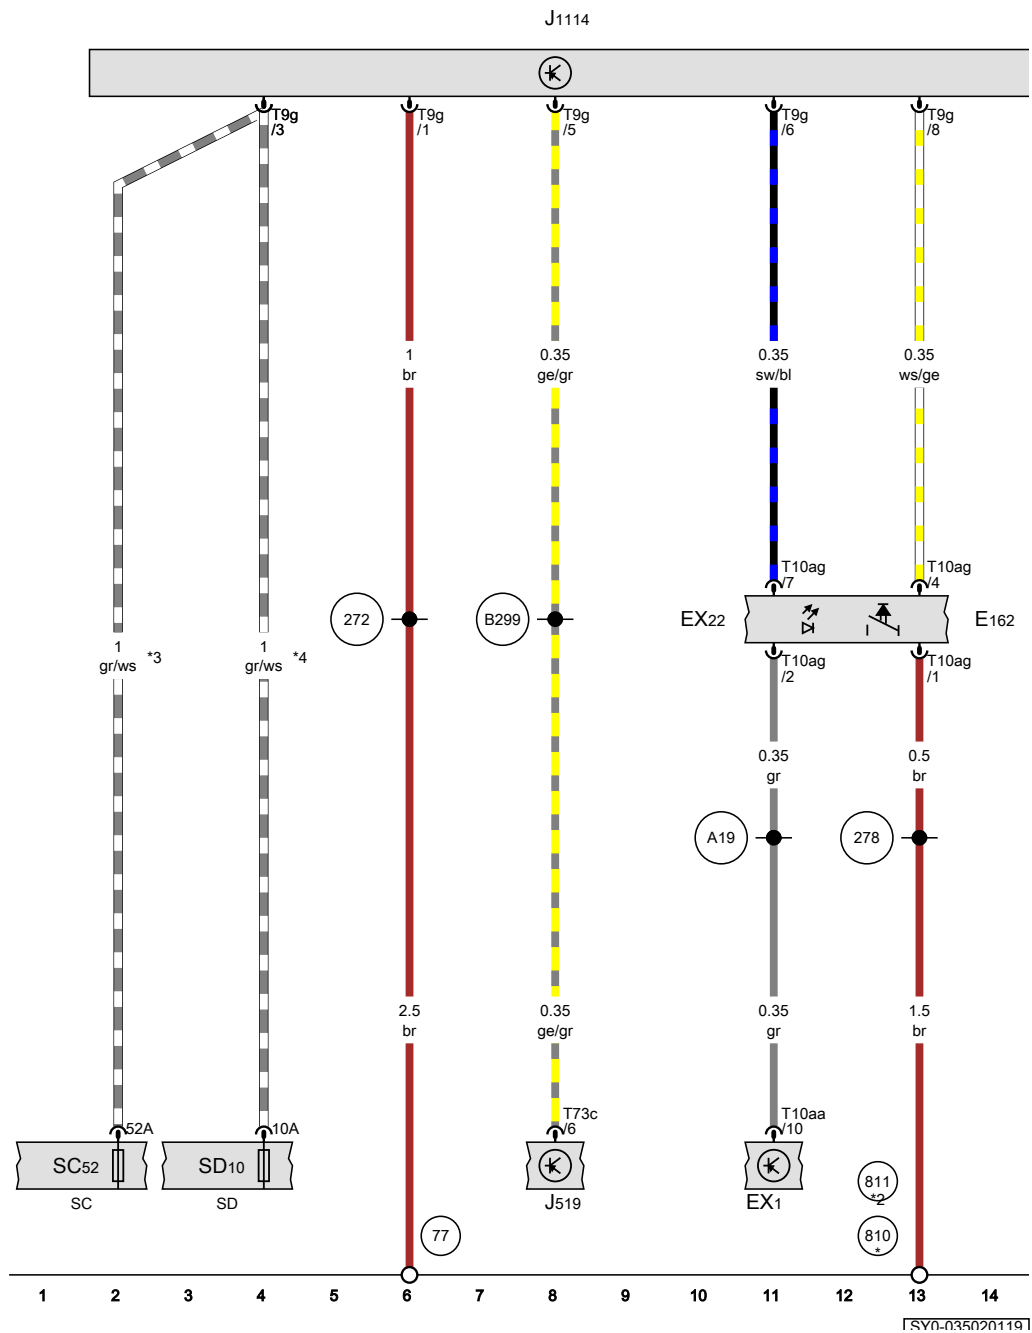

- EX1 Rotary light switch
- EX22 Centre switch module in dash panel
- E162 Rotating light switch
- J519 Onboard supply control unit
- J1114 Rotating light control unit
- SC Fuse holder C
- SD Fuse holder D
- SD10 Fuse 10 on fuse holder D
- SC52 Fuse 52 on fuse holder C
- T9g 9-pin connector, grey
- T10aa 10-pin connector, red
- T10ag 10-pin connector, red
- T73c 73-pin connector, black
- 77 Earth point, lower part of left B-pillar
- 272 Earth connection 4, in front wiring harness
- 278 Earth connection 4, in interior wiring harness
- 810 Earth point on central tube for dash panel, centre left
- 811 Earth point on central tube for dash panel, centre right
- A19 Connection (58d), in dash panel wiring harness
- B299 Positive connection 3 (30), in main wiring harness
- * For left-hand drive models
- *2 For right-hand drive models
- *3 For models with no second battery
- *4 For models with second battery

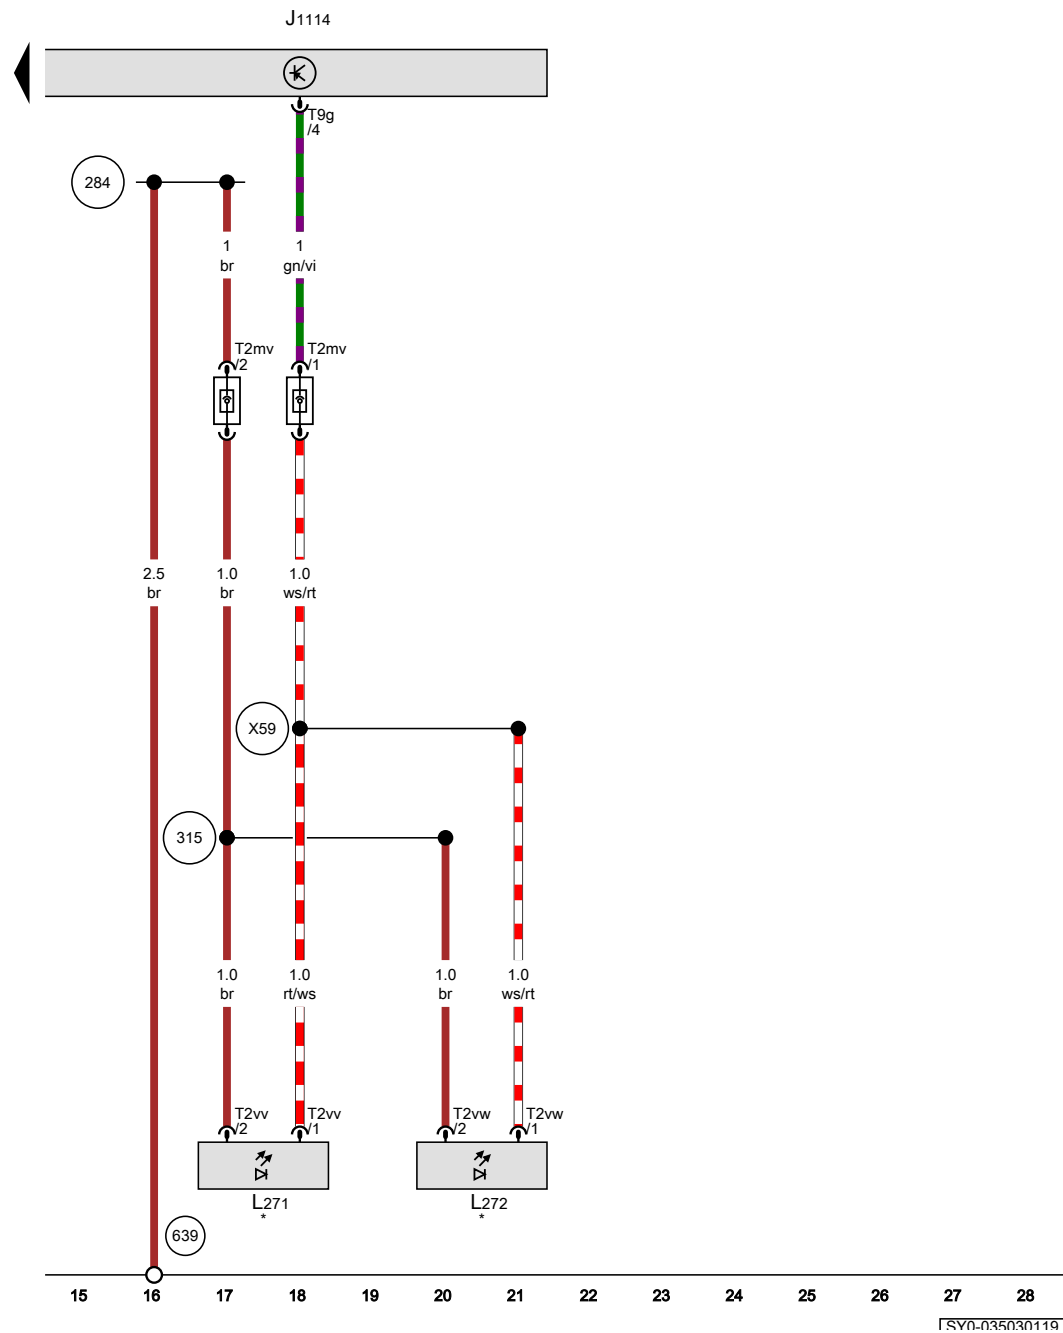

Rotating light control unit, Front left rotating light bulb, Rear right rotating light bulb


- J1114 Rotating light control unit
- L271 Front left rotating light bulb
- L272 Rear right rotating light bulb
- T2mv 2-pin connector, black
- T2vv 2-pin connector, black
- T2vw 2-pin connector, black
- T9g 9-pin connector, grey
- 284 Earth connection 6, in interior wiring harness
- 315 Earth connection, in rotating light wiring harness
- 639 Earth point, left A-pillar
- X59 Connection (rotating beacon), in sunroof wiring harness
- * Pre-wired component

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

Rotating light , (9LX)

From September 2016

Rotating light control unit, Fuse holder C, Fuse holder D

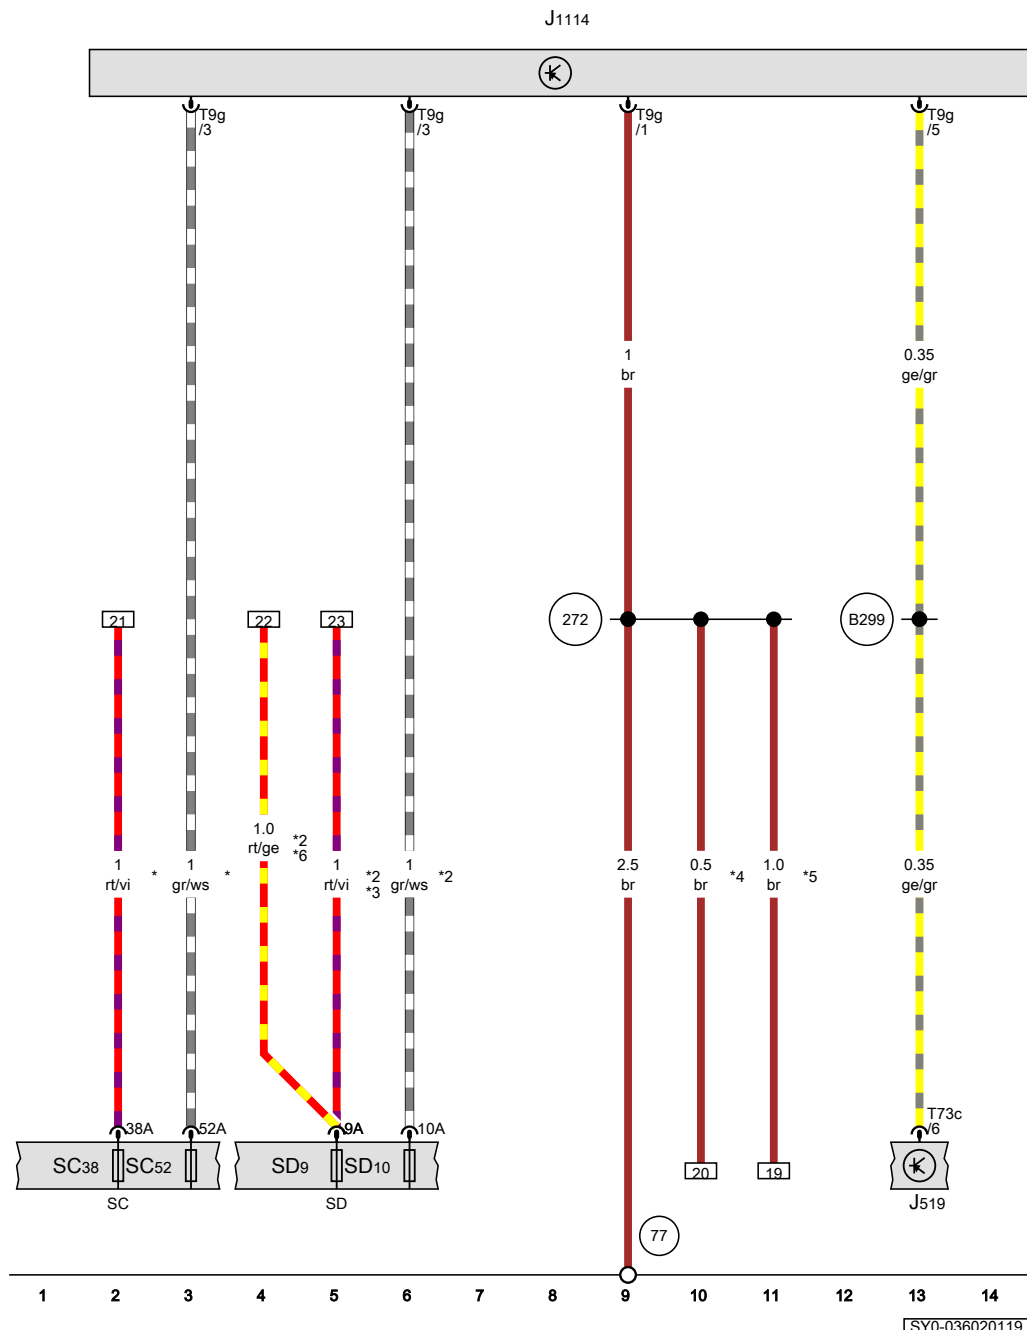


- J519 Onboard supply control unit
- J1114 Rotating light control unit
- SC Fuse holder C
- SC38 Fuse 38 on fuse holder C
- SC52 Fuse 52 on fuse holder C
- SD Fuse holder D
- SD9 Fuse 9 on fuse holder D
- SD10 Fuse 10 on fuse holder D
- T9g 9-pin connector, grey
- T73c 73-pin connector, black
- 77 Earth point, lower part of left B-pillar
- 272 Earth connection 4, in front wiring harness
- B299 Positive connection 3 (30), in main wiring harness
- * For models with no second battery
- *2 For models with second battery
- *3 Up to November 2017
- *4 Up to May 2017
- *5 From May 2017
- *6 From November 2017

Rotating light relay, Rotating light control unit

- EX1 Rotary light switch
- EX22 Centre switch module in dash panel
- E162 Rotating light switch
- J326 Rotating light relay
- J1114 Rotating light control unit
- T2mv 2-pin connector, black
- T5aw 5-pin connector, brown
- T9g 9-pin connector, grey
- T10aa 10-pin connector, red
- T10ag 10-pin connector, red

- 278 Earth connection 4, in interior wiring harness
- 284 Earth connection 6, in interior wiring harness
- 639 Earth point, left A-pillar
- 810 Earth point on central tube for dash panel, centre left
- 811 Earth point on central tube for dash panel, centre right
- A19 Connection (58d), in dash panel wiring harness
- * For left-hand drive models
- *2 For right-hand drive models
- *3 For models with no second battery
- *4 For models with second battery
- *5 Up to November 2017
- *6 Up to May 2017
- *7 From May 2017
- *8 From November 2017

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

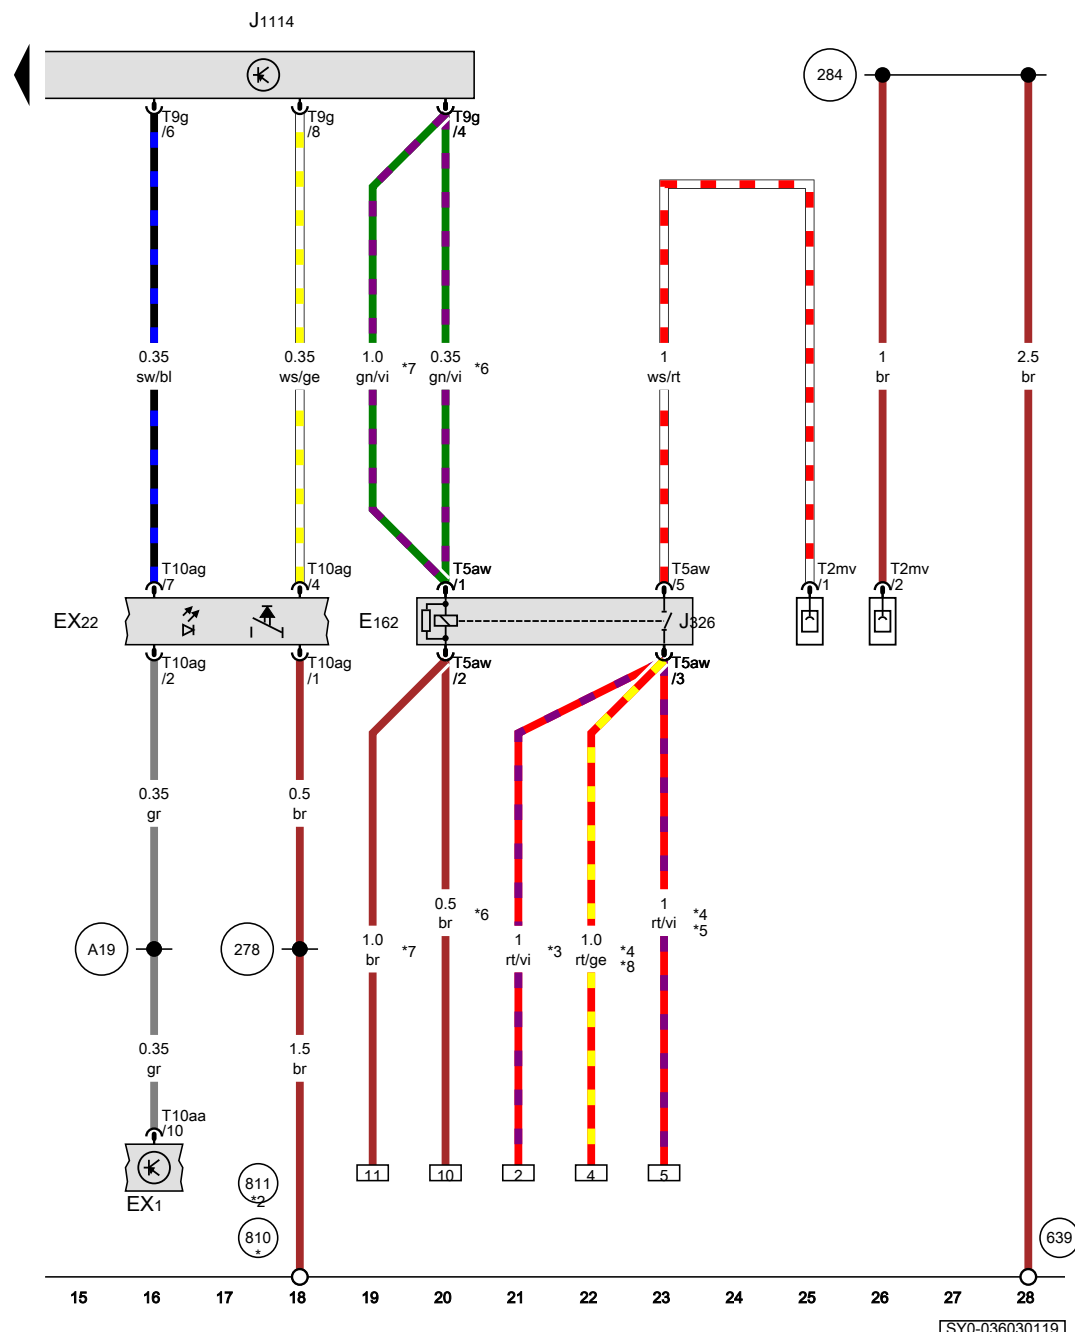


Window wash/wipe system, headlight washer system


From September 2016

Onboard supply control unit, Fuse holder B, Fuse holder C, Windscreen wiper motor, Washer pump, Headlight washer system pump

- J519 Onboard supply control unit
- SB Fuse holder B
- SC Fuse holder C
- SC1 Fuse 1 on fuse holder C
- SC8 Fuse 8 on fuse holder C
- SB25 Fuse 25 on fuse holder B
- SB28 Fuse 28 on fuse holder B
- T2lc 2-pin connector, black
- T2ld 2-pin connector, black
- T4fu 4-pin connector, black
- T46b 46-pin connector, black
- V Windscreen wiper motor
- V5 Washer pump
- V11 Headlight washer system pump

- 119 Earth connection 1, in headlight wiring harness
- 176 Earth connection, in right headlight wiring harness
- 655 Earth point, on left headlight
- 656 Earth point, on right headlight
- * For models with headlight washer system

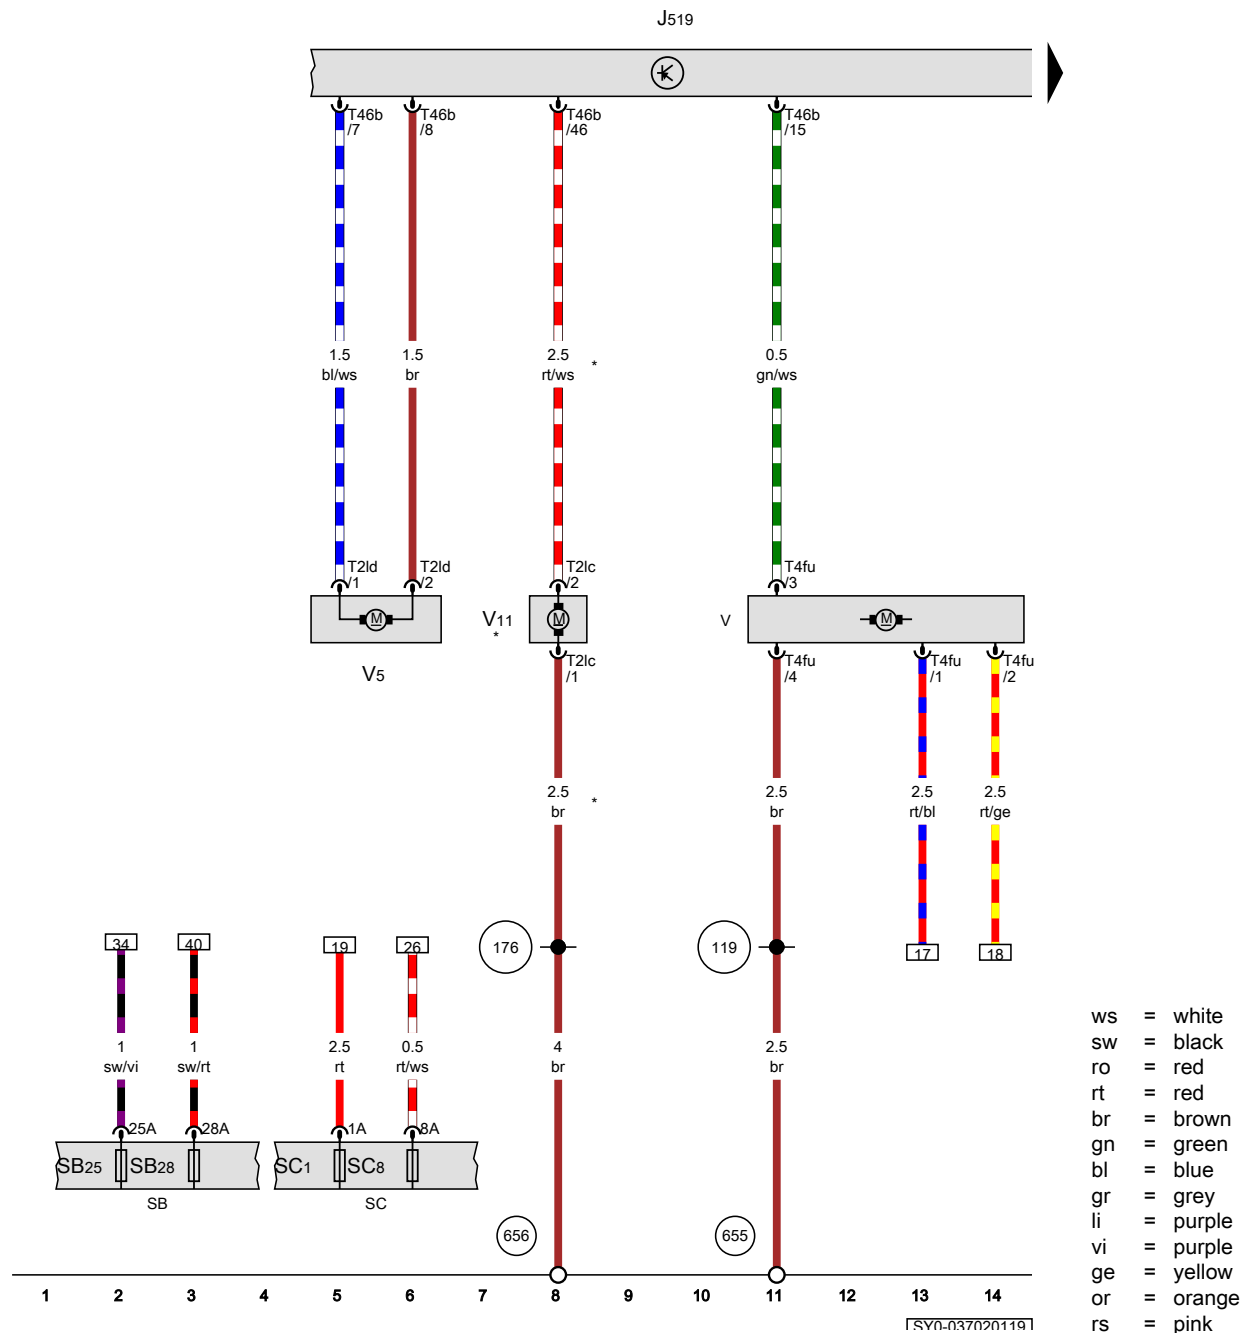

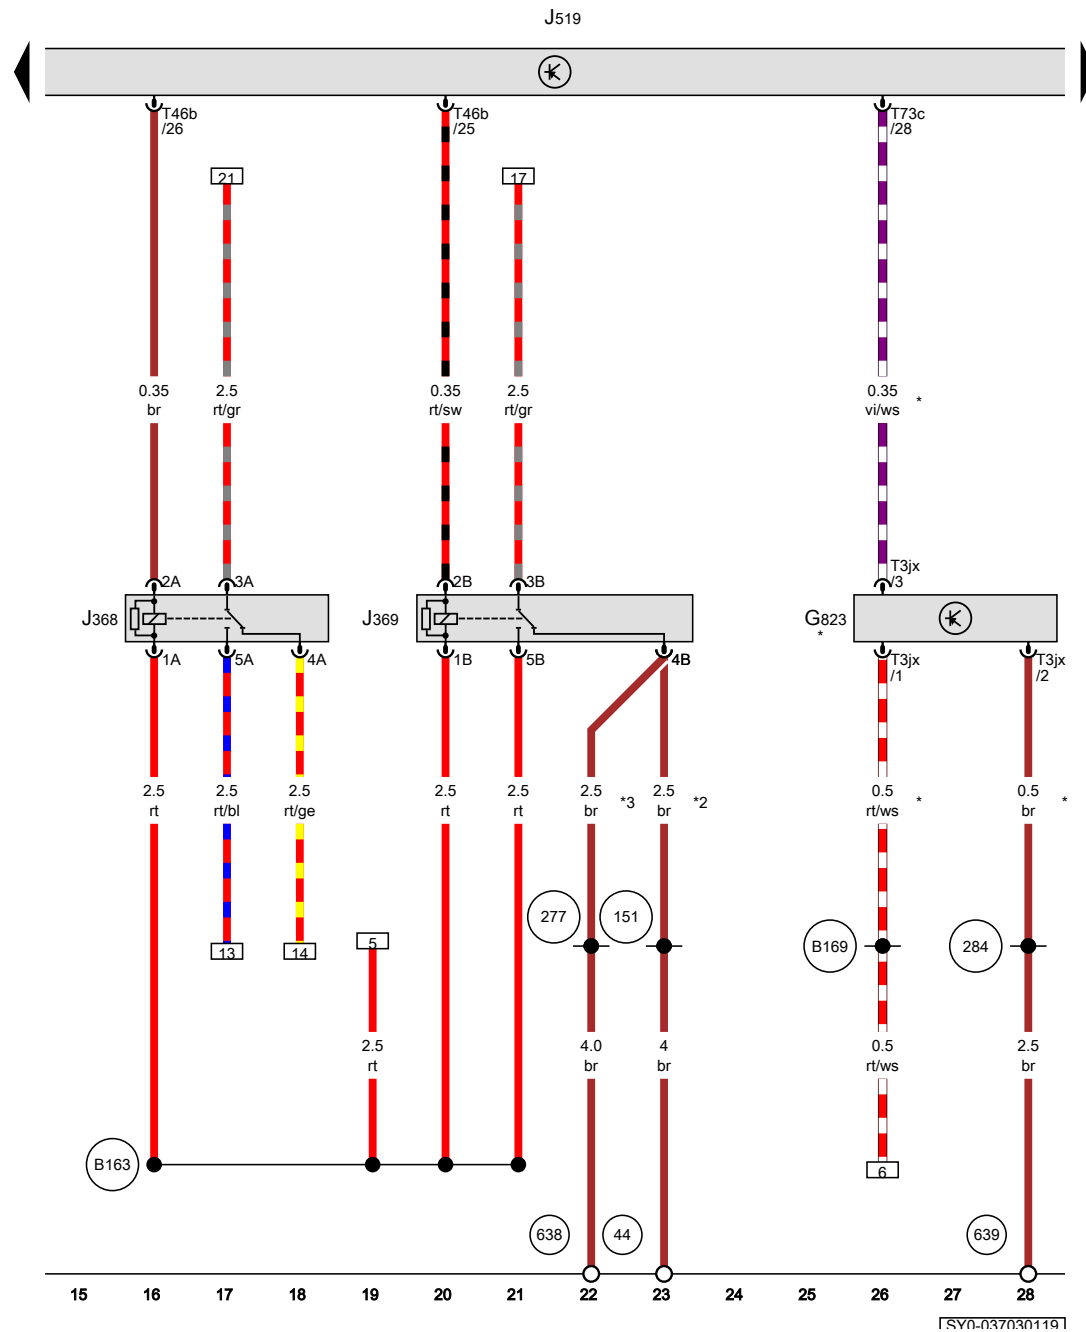


Air humidity, rain and light sensor, Wiper motor relay 1, Wiper motor relay 2, Onboard supply control unit

- G823 Air humidity, rain and light sensor
- J368 Wiper motor relay 1
- J369 Wiper motor relay 2
- J519 Onboard supply control unit
- T3jx 3-pin connector, black
- T46b 46-pin connector, black
- T73c 73-pin connector, black

- 44 Earth point, lower part of left A-pillar
- 151 Earth connection 1, in front wiring harness
- 277 Earth connection 3, in interior wiring harness
- 284 Earth connection 6, in interior wiring harness
- 638 Earth point, on right A-pillar
- 639 Earth point, left A-pillar
- B163 Positive connection 1 (15), in interior wiring harness
- B169 Positive connection 1 (30), in interior wiring harness


- * For models with rain and light sensor
- *2 For left-hand drive models
- *3 For right-hand drive models

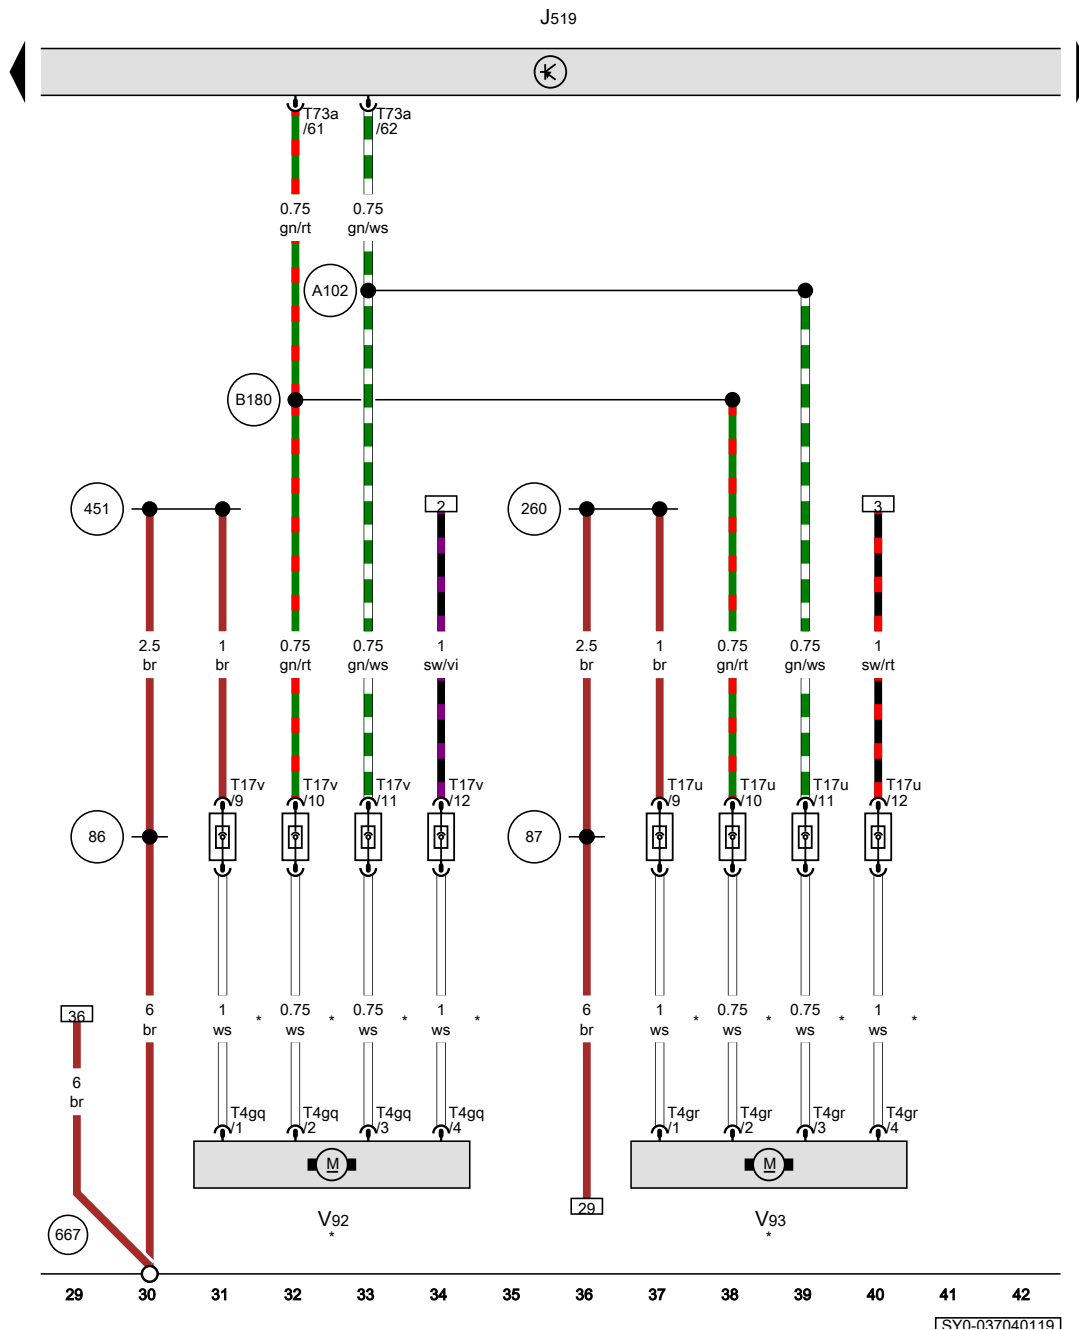

Onboard supply control unit, Rear left wing door window wiper motor, Rear right wing door window wiper motor

- J519 Onboard supply control unit
- T4gq 4-pin connector, black
- T4gr 4-pin connector, black
- T17u 17-pin connector, black
- T17v 17-pin connector, black
- T73a 73-pin connector, black
- V92 Rear left wing door window wiper motor
- V93 Rear right wing door window wiper motor

- 86 Earth connection 1, in rear wiring harness
- 87 Earth connection 2, in rear wiring harness
- 260 Earth connection, in tail light cluster wiring harness
- 451 Earth connection 1 in rear right side panel
- 667 Earth point, on rear left of roof
- A102 Connection (windscreen wiper), in dash panel wiring harness
- B180 Connection (heated rear window), in interior wiring harness
- * For models with rear window wiper

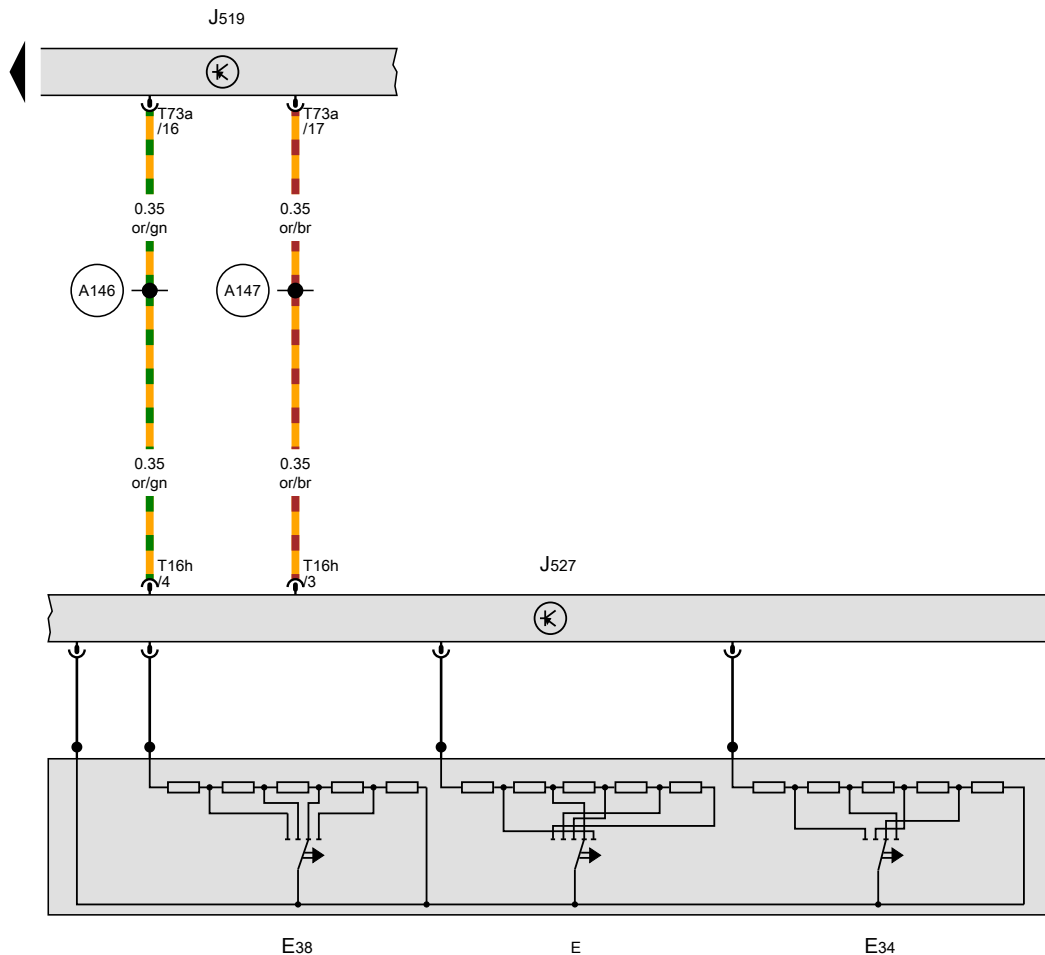

Windscreen wiper switch, Rear wiper switch, Intermittent wiper regulator, Onboard supply control unit, Steering column electronics control unit

- E Windscreen wiper switch
- E34 Rear wiper switch
- E38 Intermittent wiper regulator
- J519 Onboard supply control unit
- J527 Steering column electronics control unit
- T16h 16-pin connector, black
- T73a 73-pin connector, black
- A146 Connection (convenience CAN bus, high), in dash panel wiring harness
- A147 Connection (convenience CAN bus, low), in dash panel wiring harness

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink


43 44 45 46 47 48 49 50 51 52 53 54 55 56

[SYN-037050119]

Windscreen heater

From September 2016

Heated windscreen switch, Heated windscreen relay,
Heated windscreen relay 2, Heated windscreen

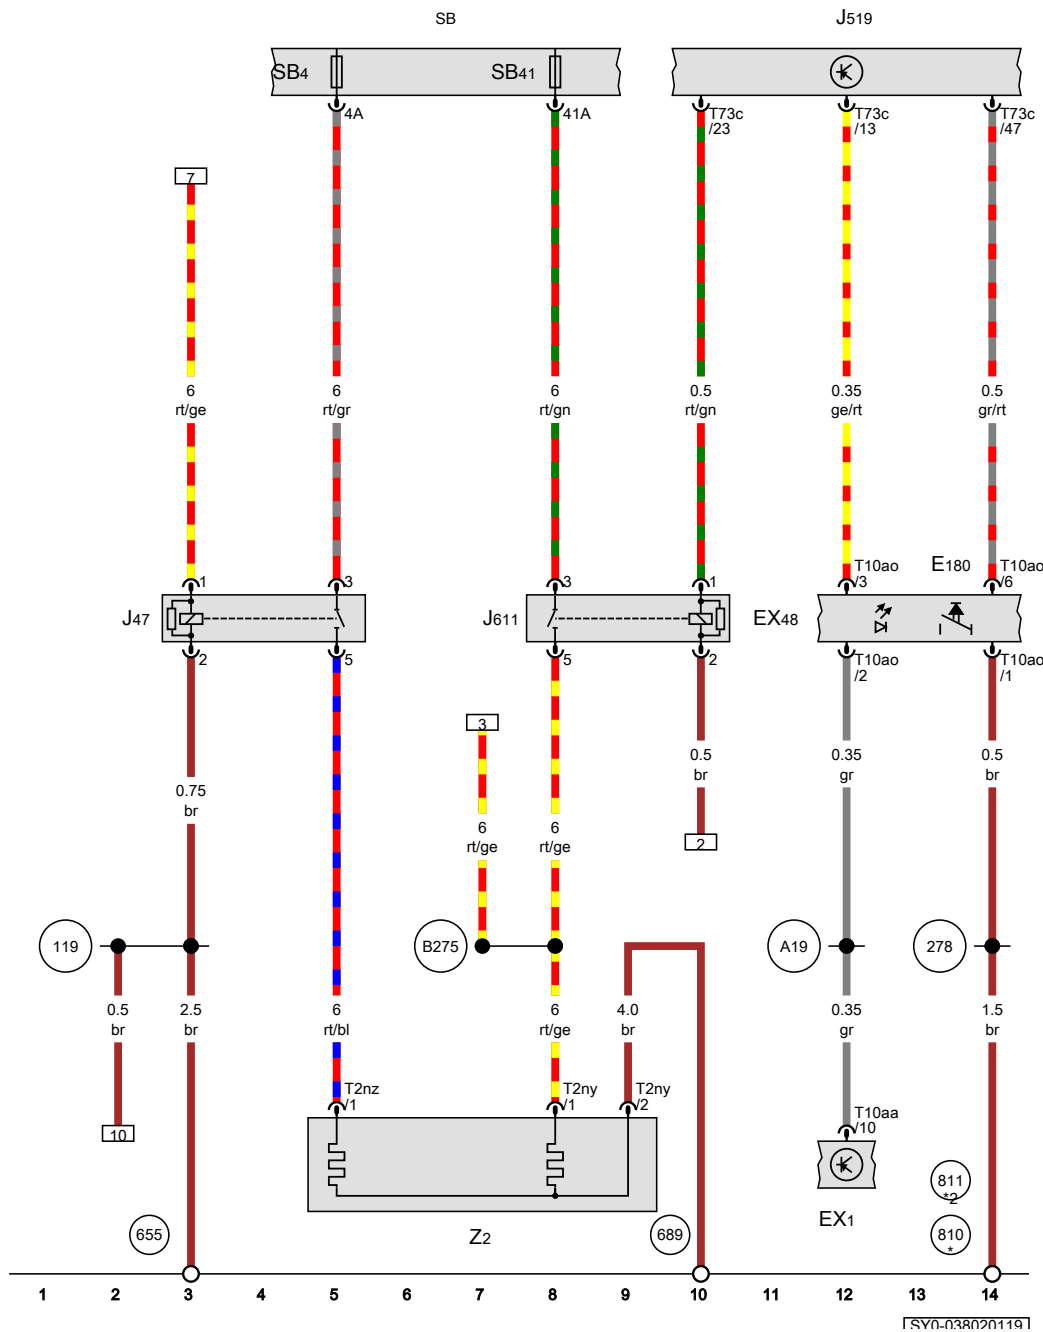

- EX1 Rotary light switch
- EX48 Centre switch module 3 in dash panel
- E180 Heated windscreen switch
- J47 Heated windscreen relay
- J519 Onboard supply control unit
- J611 Heated windscreen relay 2
- SB Fuse holder B
- SB4 Fuse 4 on fuse holder B
- SB41 Fuse 41 on fuse holder B
- T2ny 2-pin connector, black
- T2nz 2-pin connector, black
- T10aa 10-pin connector, red
- T10ao 10-pin connector, red
- T73c 73-pin connector, black
- Z2 Heated windscreen

- 119 Earth connection 1, in headlight wiring harness
- 278 Earth connection 4, in interior wiring harness
- 655 Earth point, on left headlight
- 689 Earth point, at front, central in roof
- 810 Earth point on central tube for dash panel, centre left
- 811 Earth point on central tube for dash panel, centre right
- A19 Connection (58d), in dash panel wiring harness
- B275 Positive connection (87), in main wiring harness

- * For left-hand drive models
- *2 For right-hand drive models

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

Programmable special functions , (IS7),(IS8)

From September 2016

Special vehicle control unit, Fuse holder B, Fuse holder D


J608 Special vehicle control unit
 SB Fuse holder B
 SB8 Fuse 8 on fuse holder B
 SB33 Fuse 33 on fuse holder B
 SB42 Fuse 42 on fuse holder B
 SB43 Fuse 43 on fuse holder B
 SB49 Fuse 49 on fuse holder B
 SB51 Fuse 51 on fuse holder B
 SD Fuse holder D
 SD1 Fuse 1 on fuse holder D
 SD3 Fuse 3 on fuse holder D
 T6cb 6-pin connector, blue


382 Earth connection 17, in main wiring harness

638 Earth point, on right A-pillar

* For models with no second battery
 *2 For models with second battery
 *3 For models with no air conditioning system
 *4 For models with telematics
 *5 For models with air conditioning system
 *6 For right-hand drive models

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

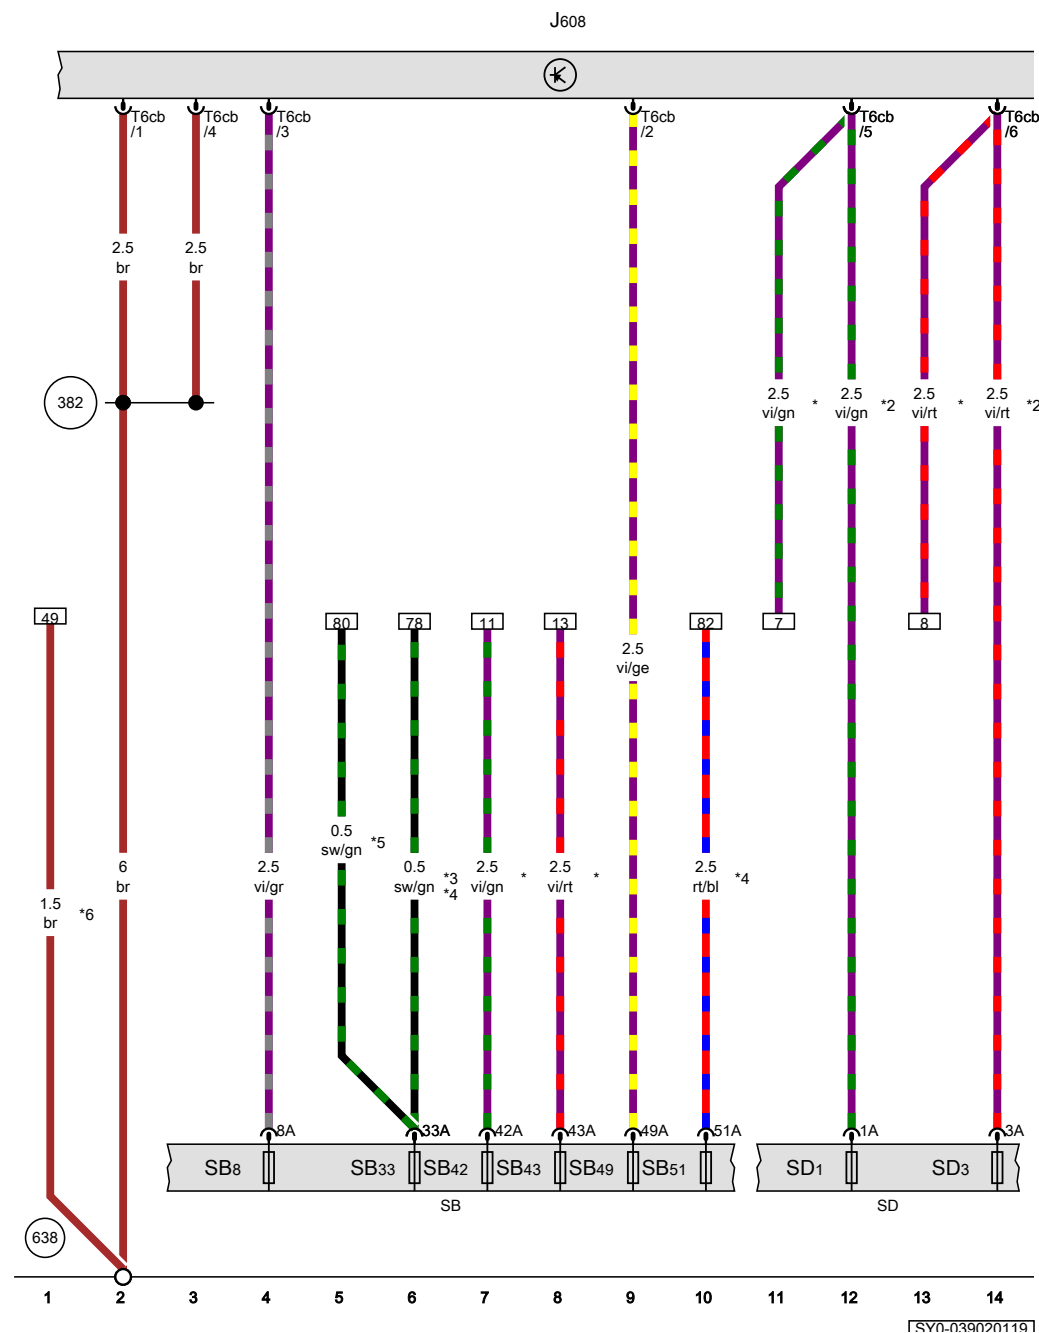

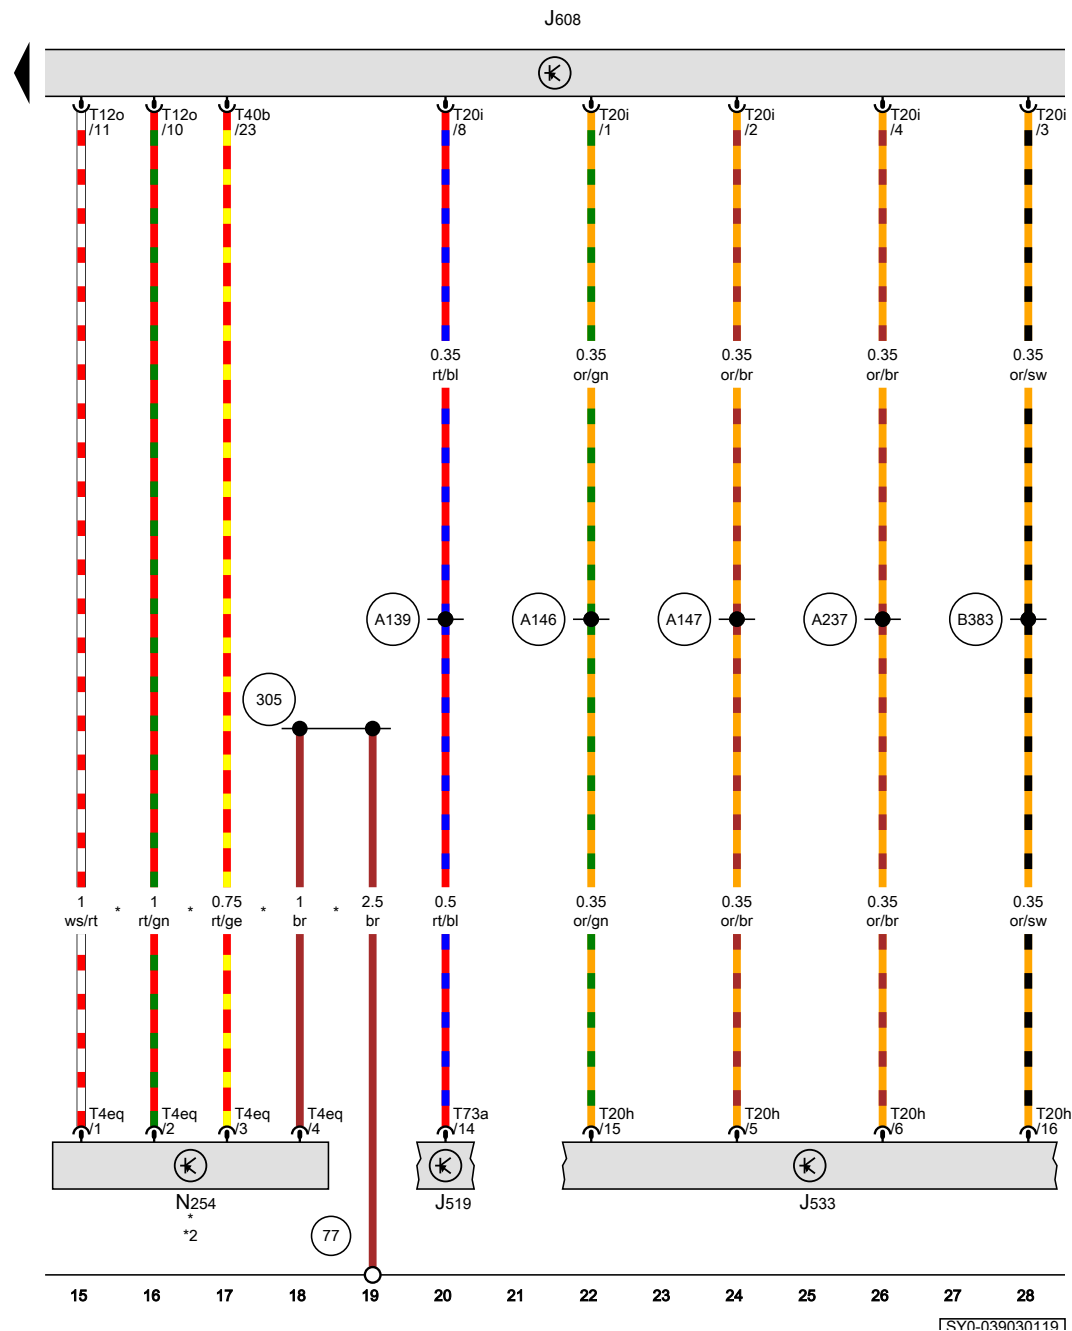


Special vehicle control unit, Power take-off valve

- J519 Onboard supply control unit
- J533 Data bus diagnostic interface
- J608 Special vehicle control unit
- N254 Power take-off valve
- T4eq 4-pin connector, green
- T12o 12-pin connector, green
- T20h 20-pin connector, red
- T20i 20-pin connector, black
- T40b 40-pin connector, black
- T73a 73-pin connector, black

- 77 Earth point, lower part of left B-pillar
- 305 Earth connection (auxiliary heater), in interior wiring harness
- A139 Connection 3 (15) in dash panel wiring harness
- A146 Connection (convenience CAN bus, high), in dash panel wiring harness
- A147 Connection (convenience CAN bus, low), in dash panel wiring harness
- A237 Connection 1 (powertrain CAN bus, low), in dash panel wiring harness
- B383 Connection 1 (powertrain CAN bus, high), in main wiring harness
- * For models with auxiliary drive
- *2 Pre-wired component

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink

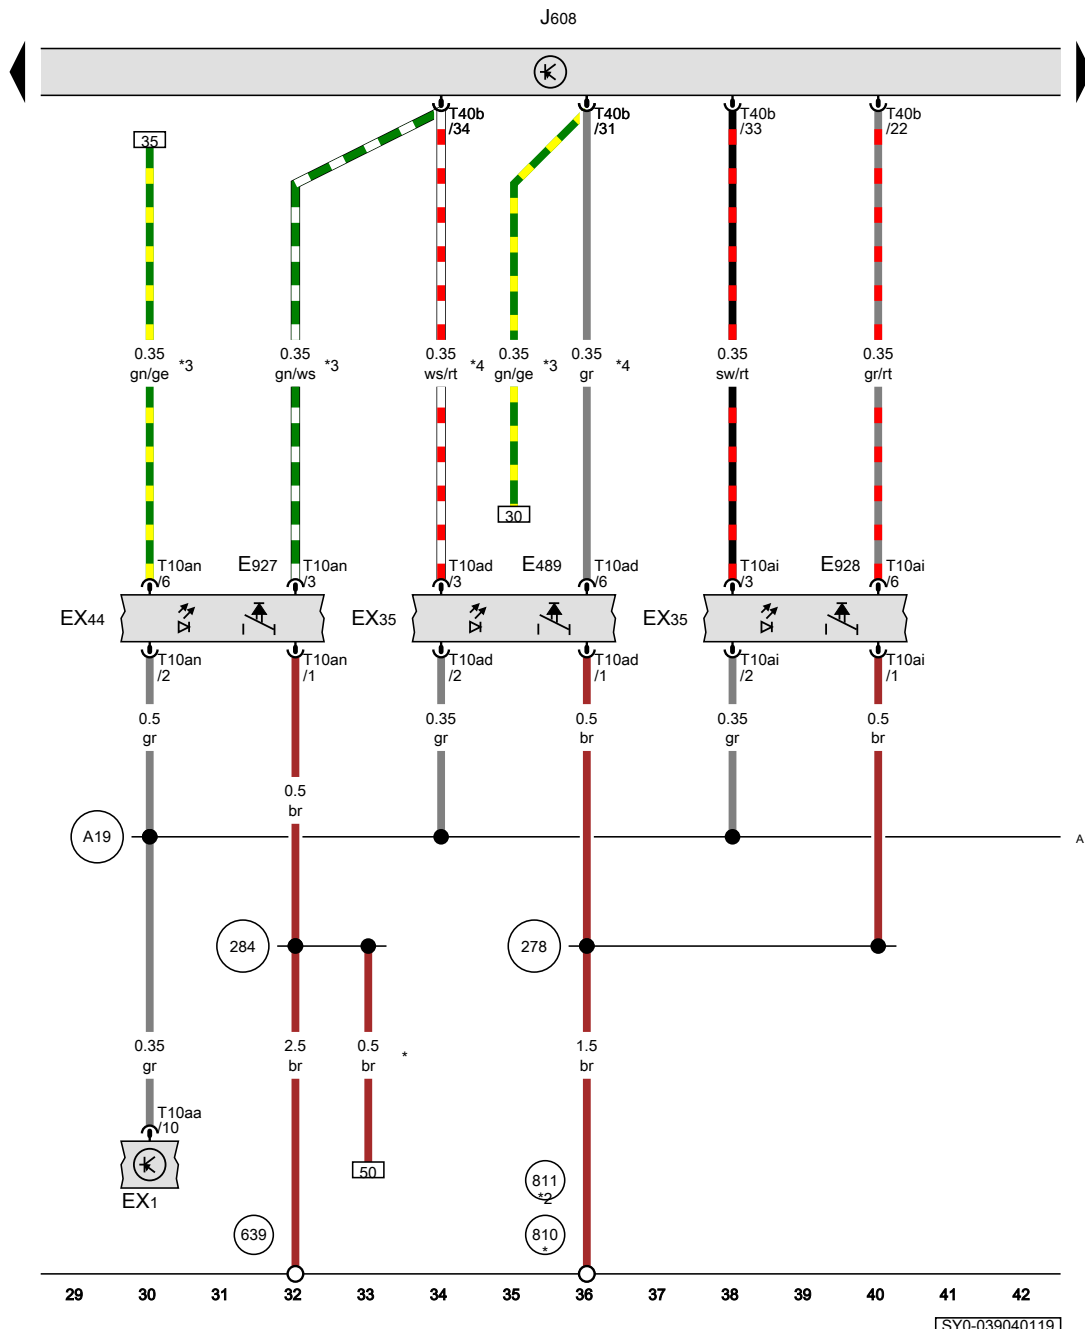


Ignition bypass button, Remote engine start button,
Wireless data transfer button, Special vehicle control unit

- EX1 Rotary light switch
- EX35 Centre switch module 2 in dash panel
- EX44 Switch module 2 in dash panel, next to steering wheel
- E489 Ignition bypass button
- E927 Remote engine start button
- E928 Wireless data transfer button
- J608 Special vehicle control unit
- T10aa 10-pin connector, red
- T10ad 10-pin connector, black
- T10ai 10-pin connector, red
- T10an 10-pin connector, black
- T40b 40-pin connector, black

- 278 Earth connection 4, in interior wiring harness
- 284 Earth connection 6, in interior wiring harness
- 639 Earth point, left A-pillar
- 810 Earth point on central tube for dash panel, centre left
- 811 Earth point on central tube for dash panel, centre right
- A19 Connection (58d), in dash panel wiring harness

- * For left-hand drive models
- *2 For right-hand drive models
- *3 For models with remote engine start
- *4 According to equipment

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

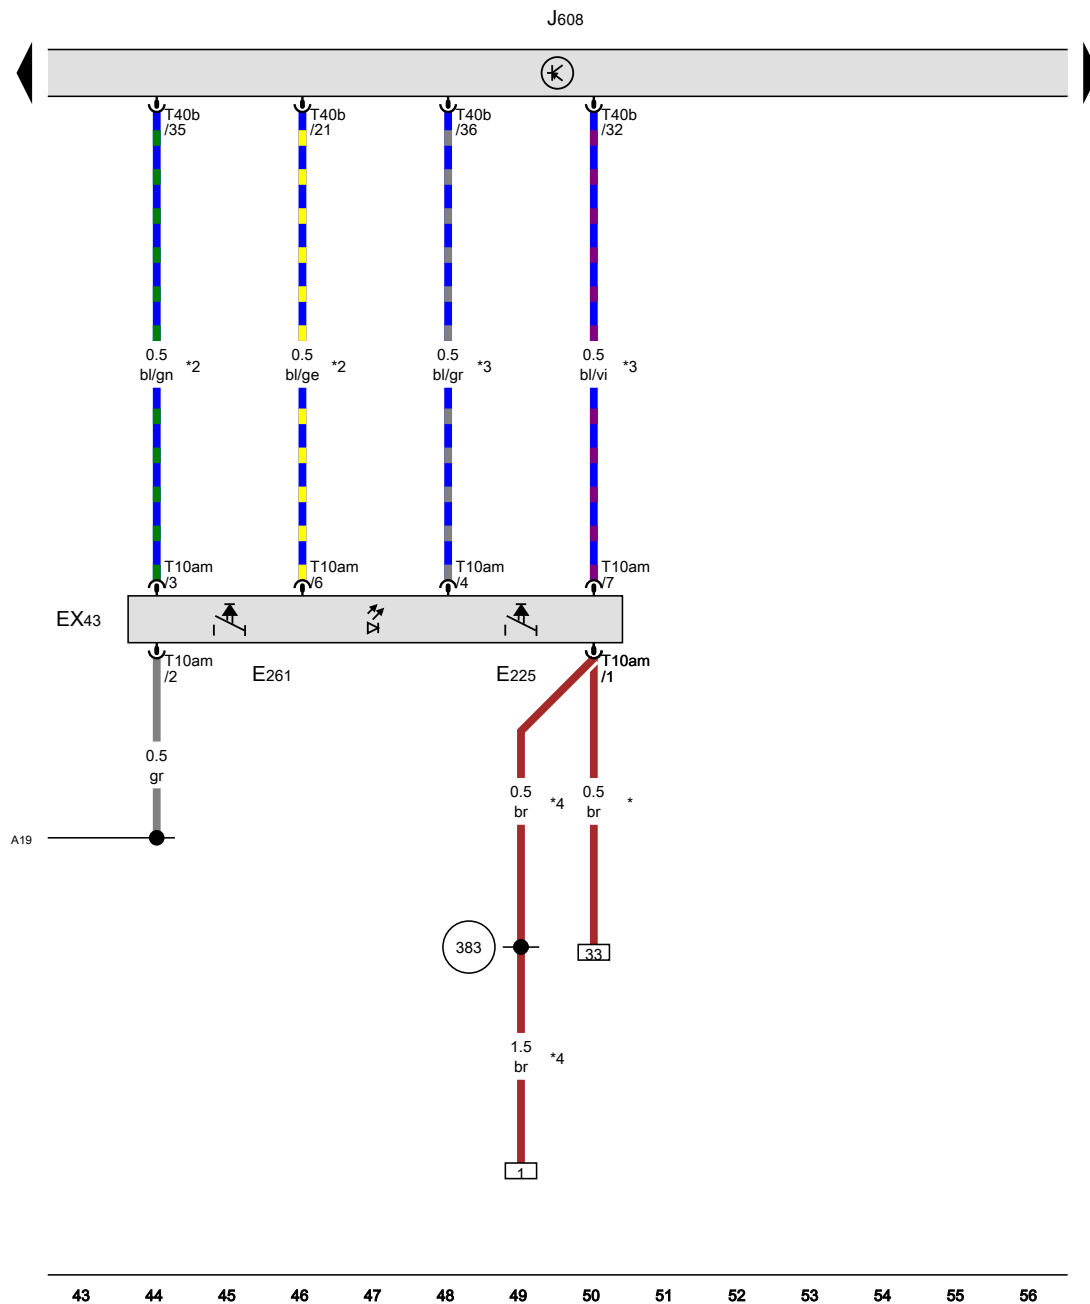

Switch module 1 in dash panel, next to steering wheel,
Power take-off switch, Special vehicle control unit

- EX43 Switch module 1 in dash panel, next to steering wheel
- E225 Power take-off switch
- E261 Working speed control switch
- J608 Special vehicle control unit
- T10am 10-pin connector, red
- T40b 40-pin connector, black


383 Earth connection 18, in main wiring harness

A19 Connection (58d), in dash panel wiring harness

- * For left-hand drive models
- *2 For models with electronic engine speed regulation
- *3 For models with auxiliary drive
- *4 For right-hand drive models

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

SYN-039050119

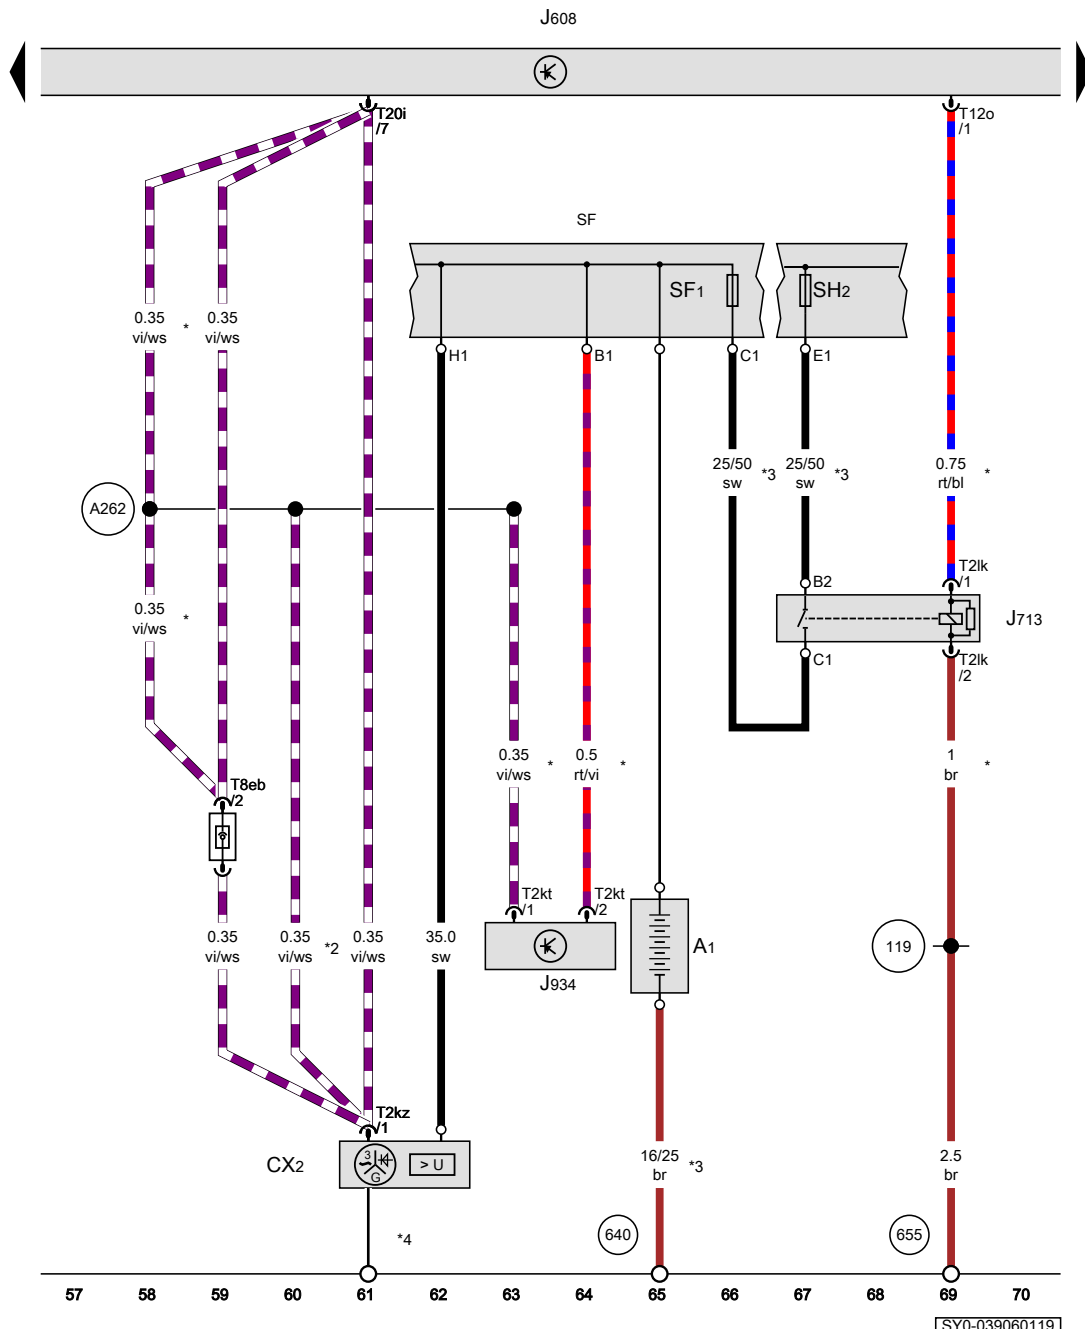


Second battery, Alternator 2 with voltage regulator, Special vehicle control unit, Second battery charging circuit relay, Battery monitor control unit 2

- A1 Second battery
- CX2 Alternator 2 with voltage regulator
- J608 Special vehicle control unit
- J713 Second battery charging circuit relay
- J934 Battery monitor control unit 2
- SF Fuse holder F
- SF1 Fuse 1 in fuse holder F
- SH2 Fuse 2 in fuse holder H
- T2kt 2-pin connector, black
- T2kz 2-pin connector, black
- T2lk 2-pin connector, black
- T8eb 8-pin connector, black
- T12o 12-pin connector, green
- T20i 20-pin connector, black

- 119 Earth connection 1, in headlight wiring harness
- 640 Earth point 2, left in engine compartment
- 655 Earth point, on left headlight
- A262 Connection 3 (LIN bus) in dash panel wiring harness

- * For models with second battery
- *2 For models with second battery and alternator 2 with voltage regulator
- *3 Cross section depends on equipment
- *4 Earth supply via housing

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

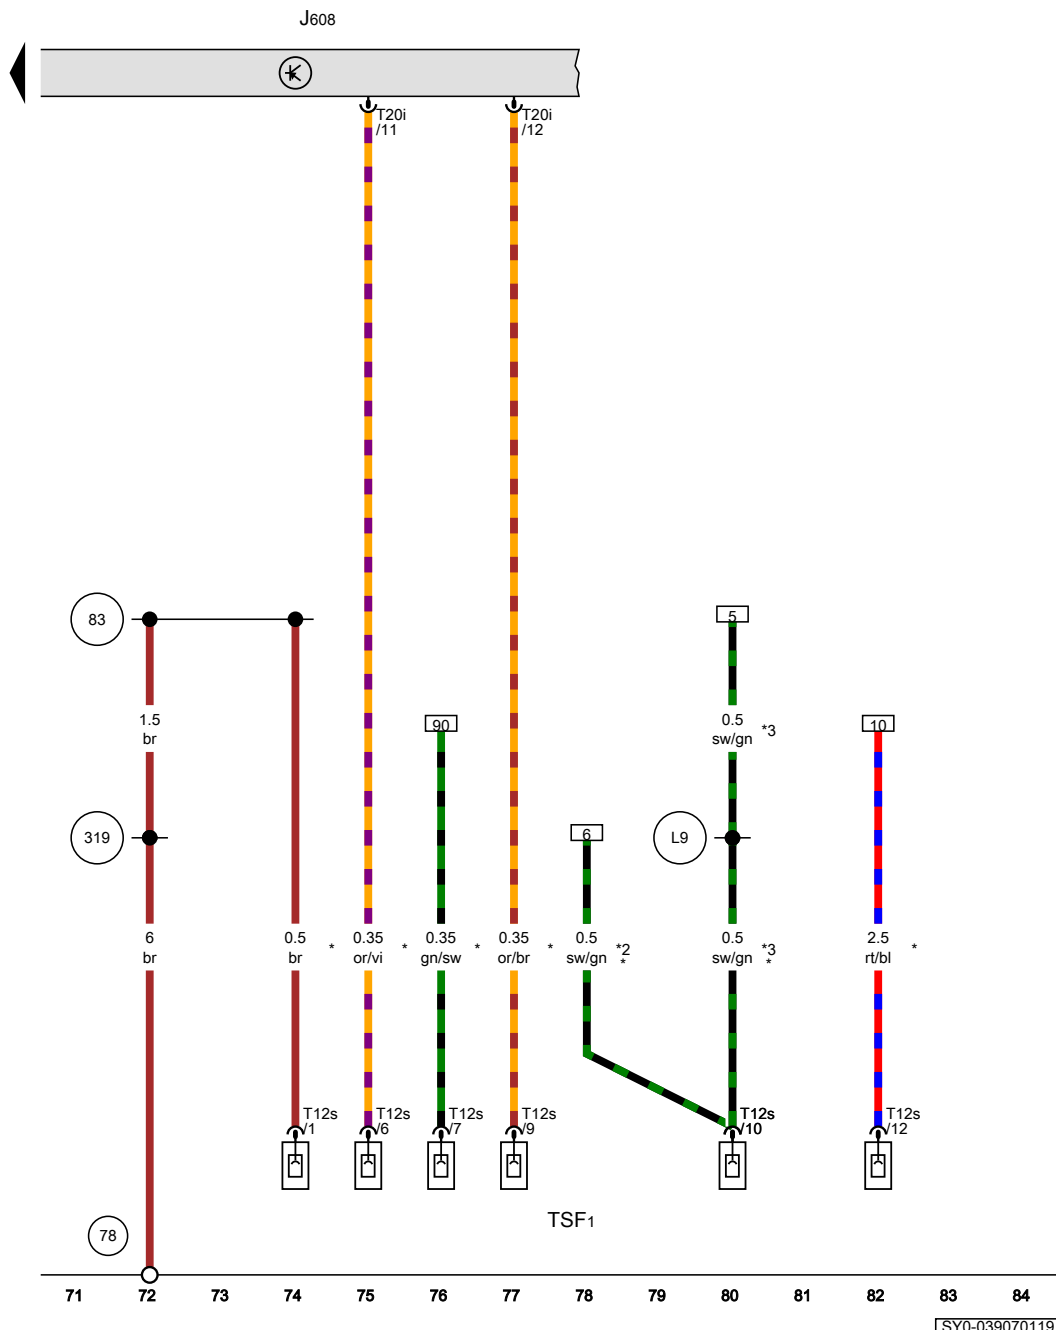

Special vehicle control unit, Coupling point for special vehicles

J608	Special vehicle control unit
T12s	12-pin connector, green
T20i	20-pin connector, black
TSF1	Coupling point for special vehicles


- 78 Earth point, lower part of right B-pillar
- 83 Earth connection 1, in front right wiring harness
- 319 Earth connection 5, in seat heating wiring harness
- L9 Connection 1, in air conditioning system wiring harness

* For models with telematics
*2 For models with no air conditioning system
*3 For models with air conditioning system

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink

Tachograph, GPS aerial, LTE aerial 1, Coupling point for special vehicles

- G24 Tachograph
- R50 GPS aerial, in passenger side exterior mirror housing
- R297 LTE aerial 1, in passenger side exterior mirror housing
- T2st 2-pin connector, blue
- T2su 2-pin connector, purple
- T2vx 2-pin connector
- T2vy 2-pin connector
- T4ij 4-pin connector, black
- T8cv 8-pin connector, brown
- T8ei 8-pin connector, red
- T28g 28-pin connector, black
- TSF1 Coupling point for special vehicles
- * Pre-wired component
- *2 For models with telematics

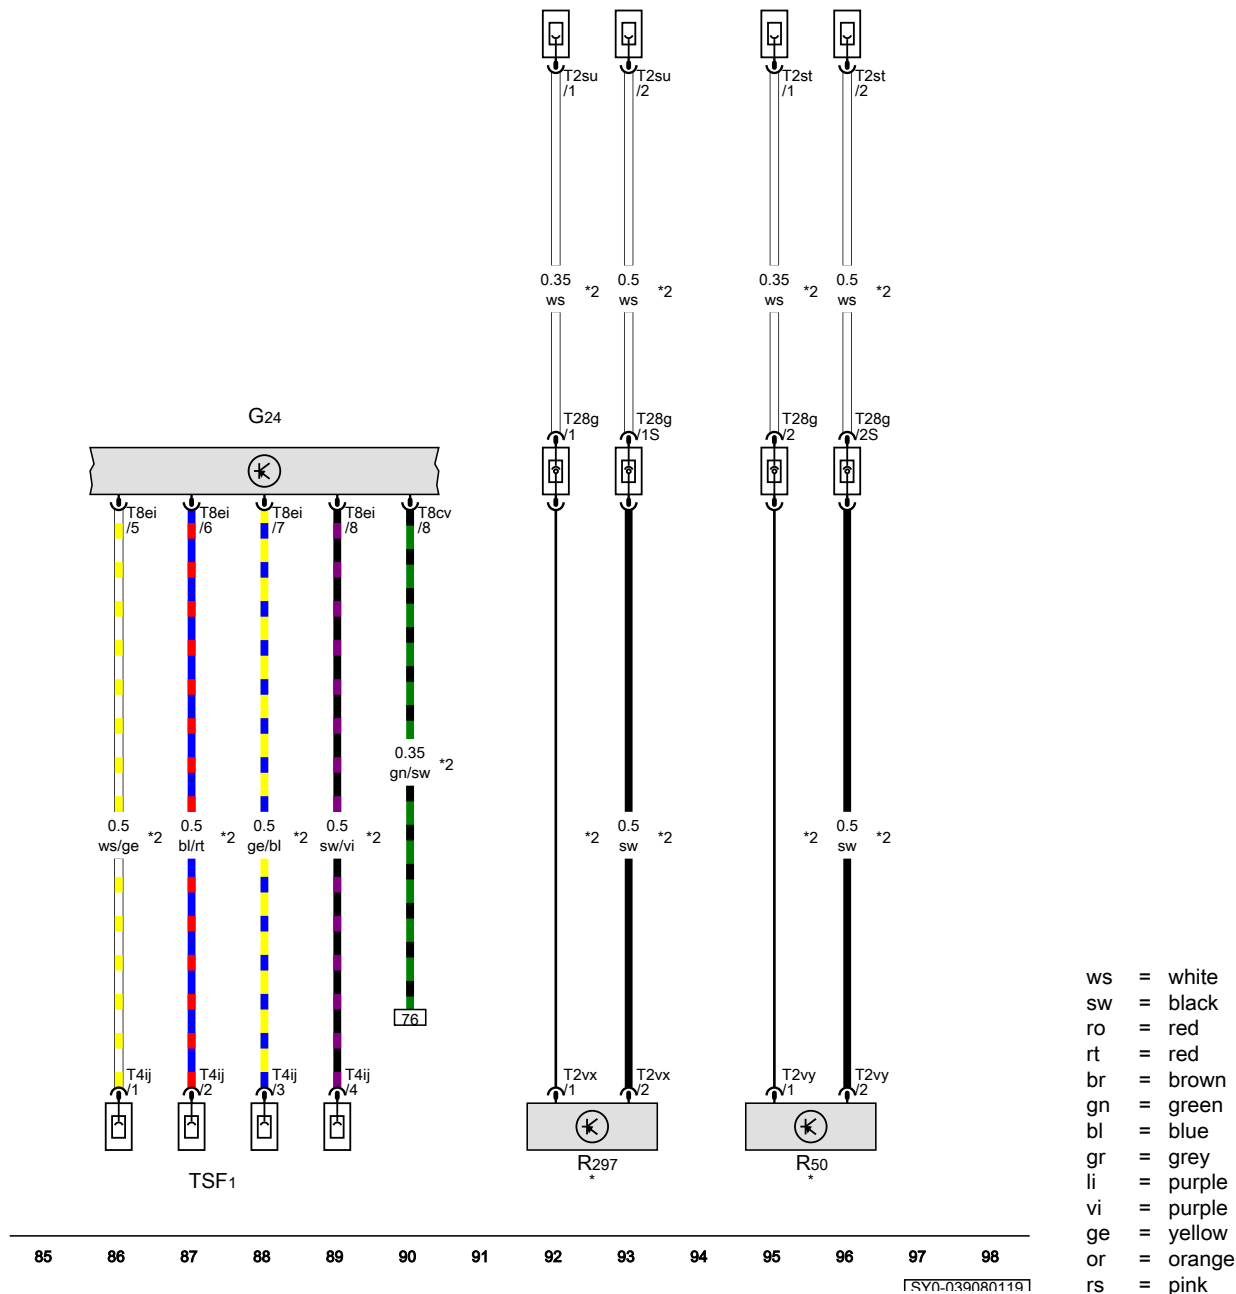

Interior socket, 230 V, 110 V and 12 V socket, cigarette lighter , (EU1),(EU4),(7B3),(7B5),(7B6),(7B7)

From September 2016

12 V socket

- EX1 Rotary light switch
- SB Fuse holder B
- SB6 Fuse 6 on fuse holder B
- SB9 Fuse 9 on fuse holder B
- SD Fuse holder D
- SD5 Fuse 5 on fuse holder D
- SD6 Fuse 6 on fuse holder D
- SD7 Fuse 7 on fuse holder D
- T3mx 3-pin connector, colourless
- T10aa 10-pin connector, red
- U5 12 V socket


639 Earth point, left A-pillar

A19 Connection (58d), in dash panel wiring harness


B680 Connection (electric socket), in interior wiring harness

* For models with second battery

*2 According to equipment

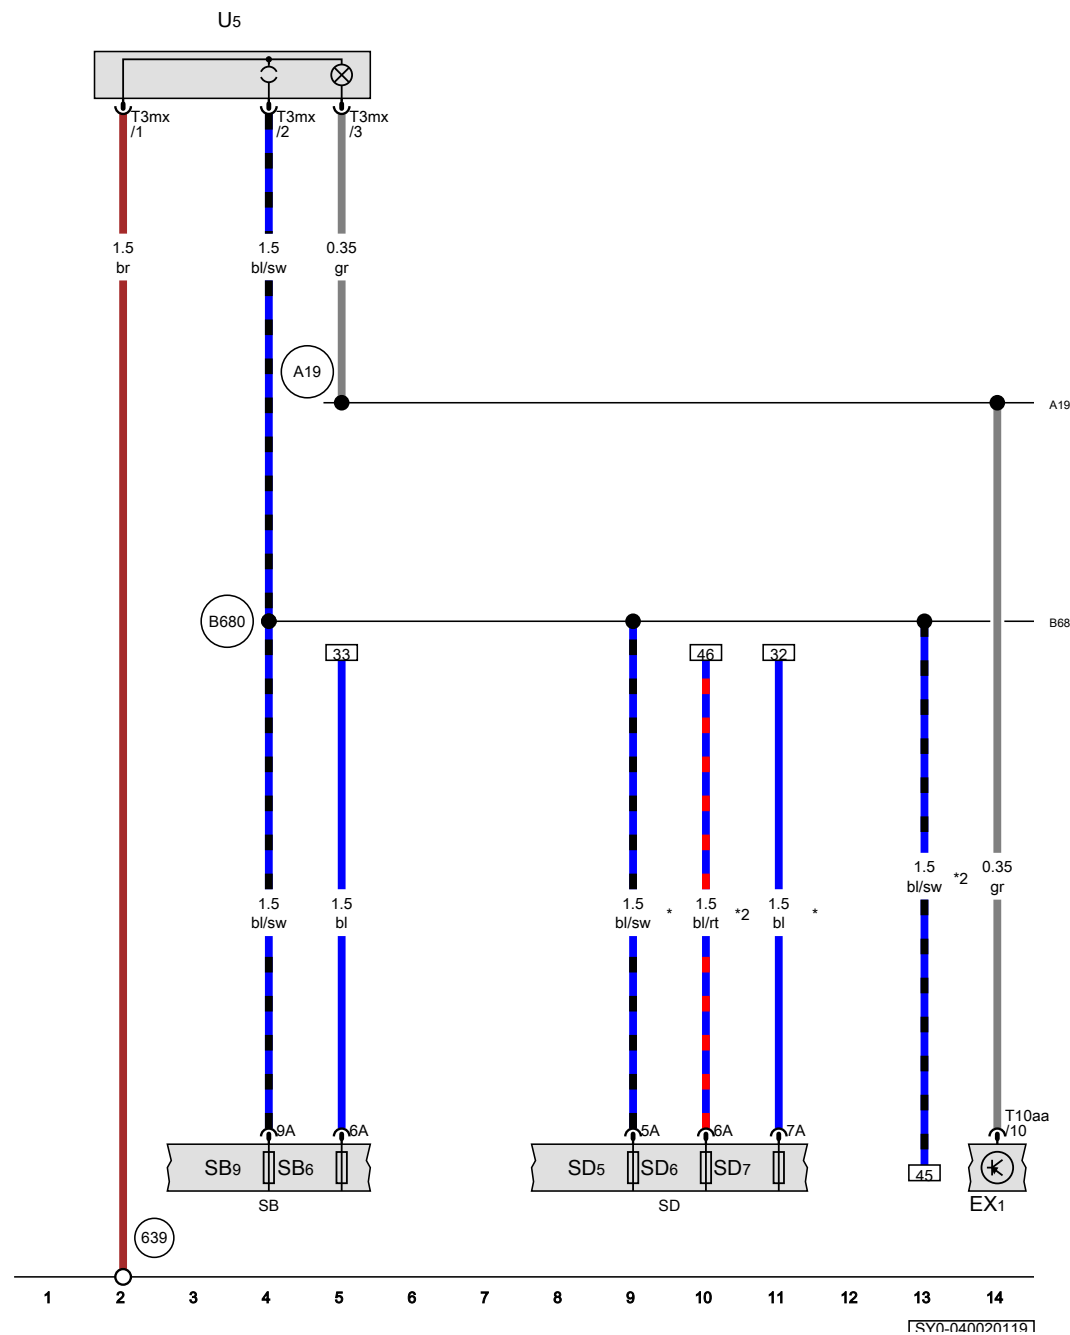

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

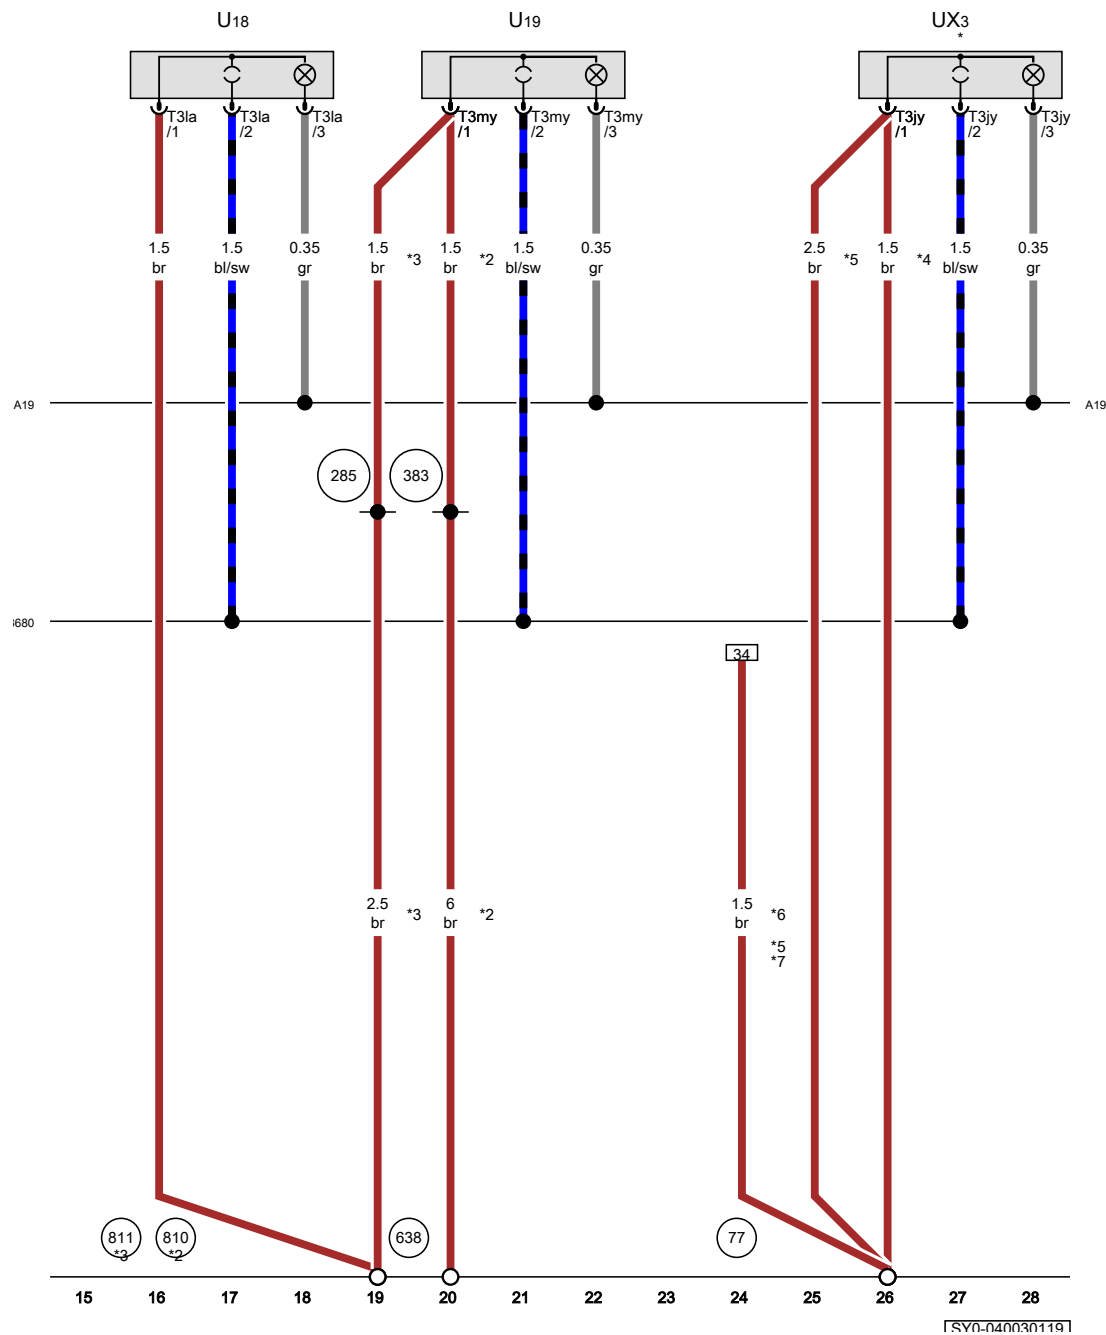

12 V socket, 12 V socket 2, 12 V socket 3

T3jy 3-pin connector, colourless

T3la 3-pin connector, colourless

T3my 3-pin connector, colourless

UX3 12 V socket

U18 12 V socket 2

U19 12 V socket 3

77 Earth point, lower part of left B-pillar

285 Earth connection 7, in interior wiring harness

383 Earth connection 18, in main wiring harness

638 Earth point, on right A-pillar

810 Earth point on central tube for dash panel, centre left

811 Earth point on central tube for dash panel, centre right

A19 Connection (58d), in dash panel wiring harness

B680 Connection (electric socket), in interior wiring harness

* According to equipment

*2 For left-hand drive models


*3 For right-hand drive models

*4 Up to July 2018

*5 From July 2018

*6 For panel van and Kombi models

*7 For models with extra-high roof

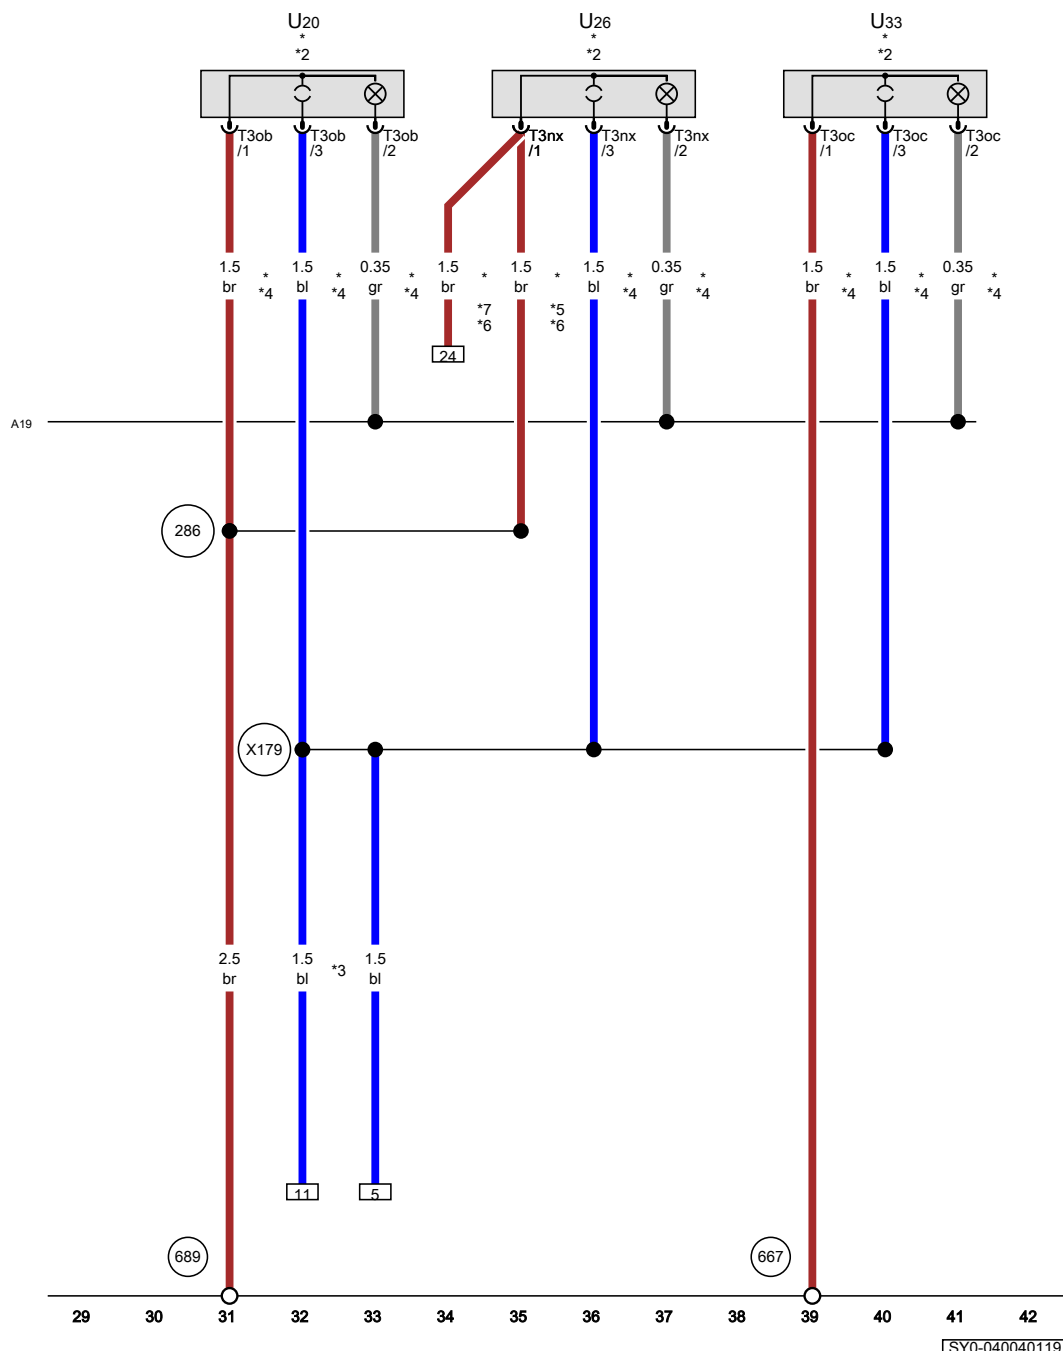

12 V socket 4, 12 V socket 5, 12 V socket 6

T3nx 3-pin connector, colourless

T3ob 3-pin connector, colourless

T3oc 3-pin connector, colourless

U20 12 V socket 4

U26 12 V socket 5

U33 12 V socket 6

286 Earth connection 8, in interior wiring harness

667 Earth point, on rear left of roof

689 Earth point, at front, central in roof

A19 Connection (58d), in dash panel wiring harness

X179 Connection 3 (socket) in additional equipment wiring harness

* For panel van and Kombi models

*2 Pre-wired component

*3 For models with second battery


*4 According to equipment

*5 Up to July 2018

*6 For models with extra-high roof

*7 From July 2018

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink

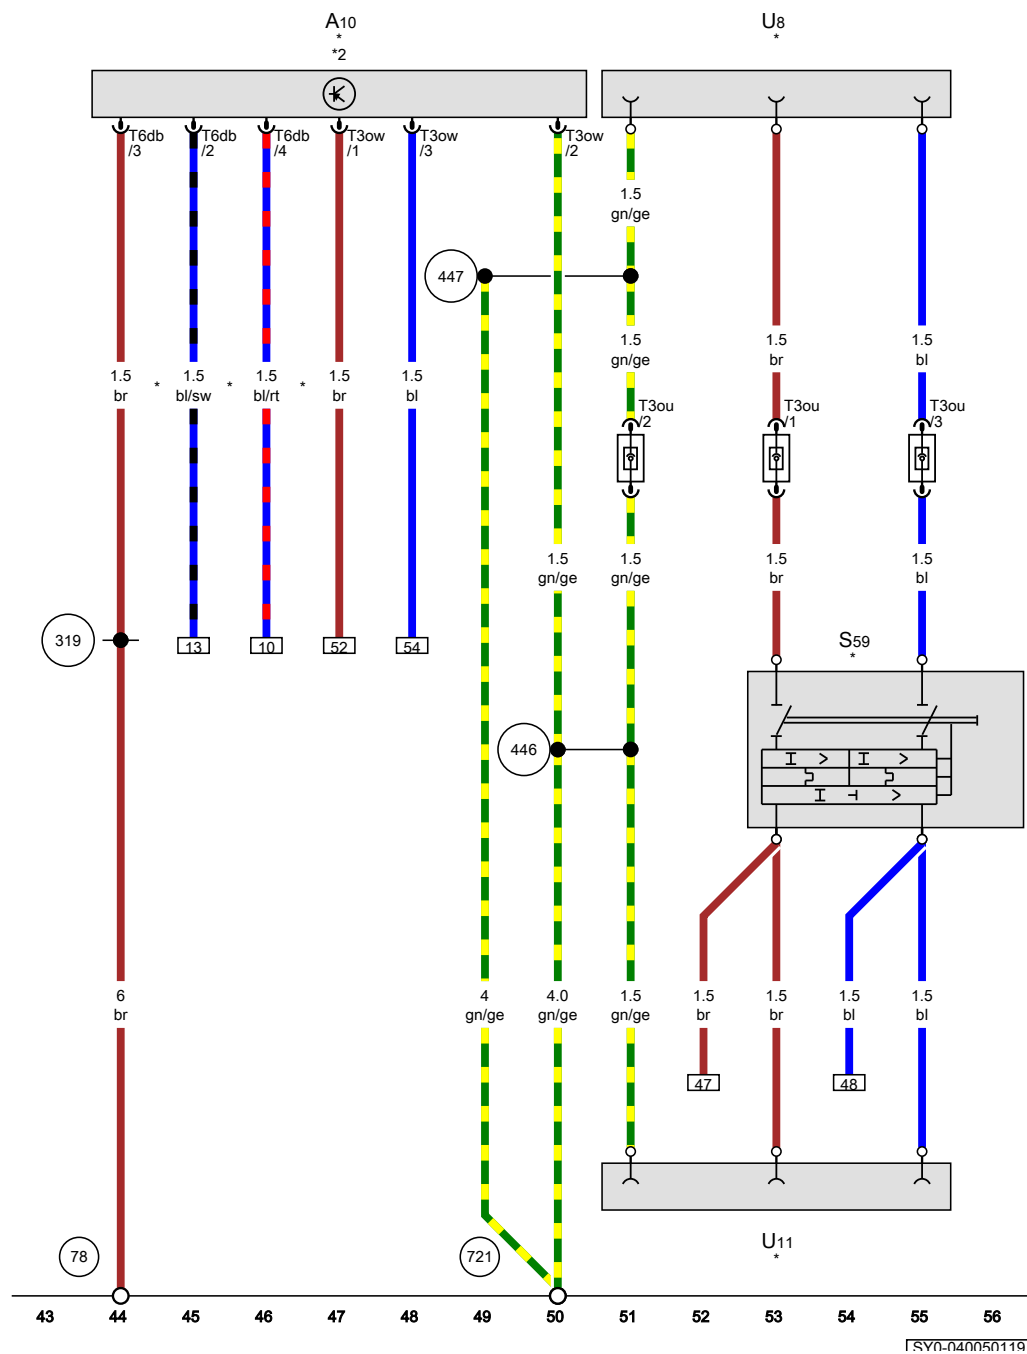

Battery charger, 230 or 110 Volt/12 Volt, 220 V automatic personnel protection circuit breaker, Exterior socket, 230 V, 110 V, Interior socket, 230 V, 110 V

- A10 Battery charger, 230 or 110 Volt/12 Volt
- S59 220 V automatic personnel protection circuit breaker, in rear left side panel
- T3ou 3-pin connector, white
- T3ow 3-pin connector, black
- T6db 6-pin connector, grey
- U8 Exterior socket, 230 V, 110 V, in rear left side panel
- U11 Interior socket, 230 V, 110 V, in rear left side panel

- 78 Earth point, lower part of right B-pillar
- 319 Earth connection 5, in seat heating wiring harness
- 446 Earth conductor connection 1
- 447 Earth conductor connection 2
- 721 Earth point 1, for special installations, in rear left side panel


- * According to equipment
- *2 Pre-wired component

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

230 V socket , (9Z3)

From September 2016

Interior socket, 230 V, 110 V, DC/AC converter with socket, 12 V - 230 V

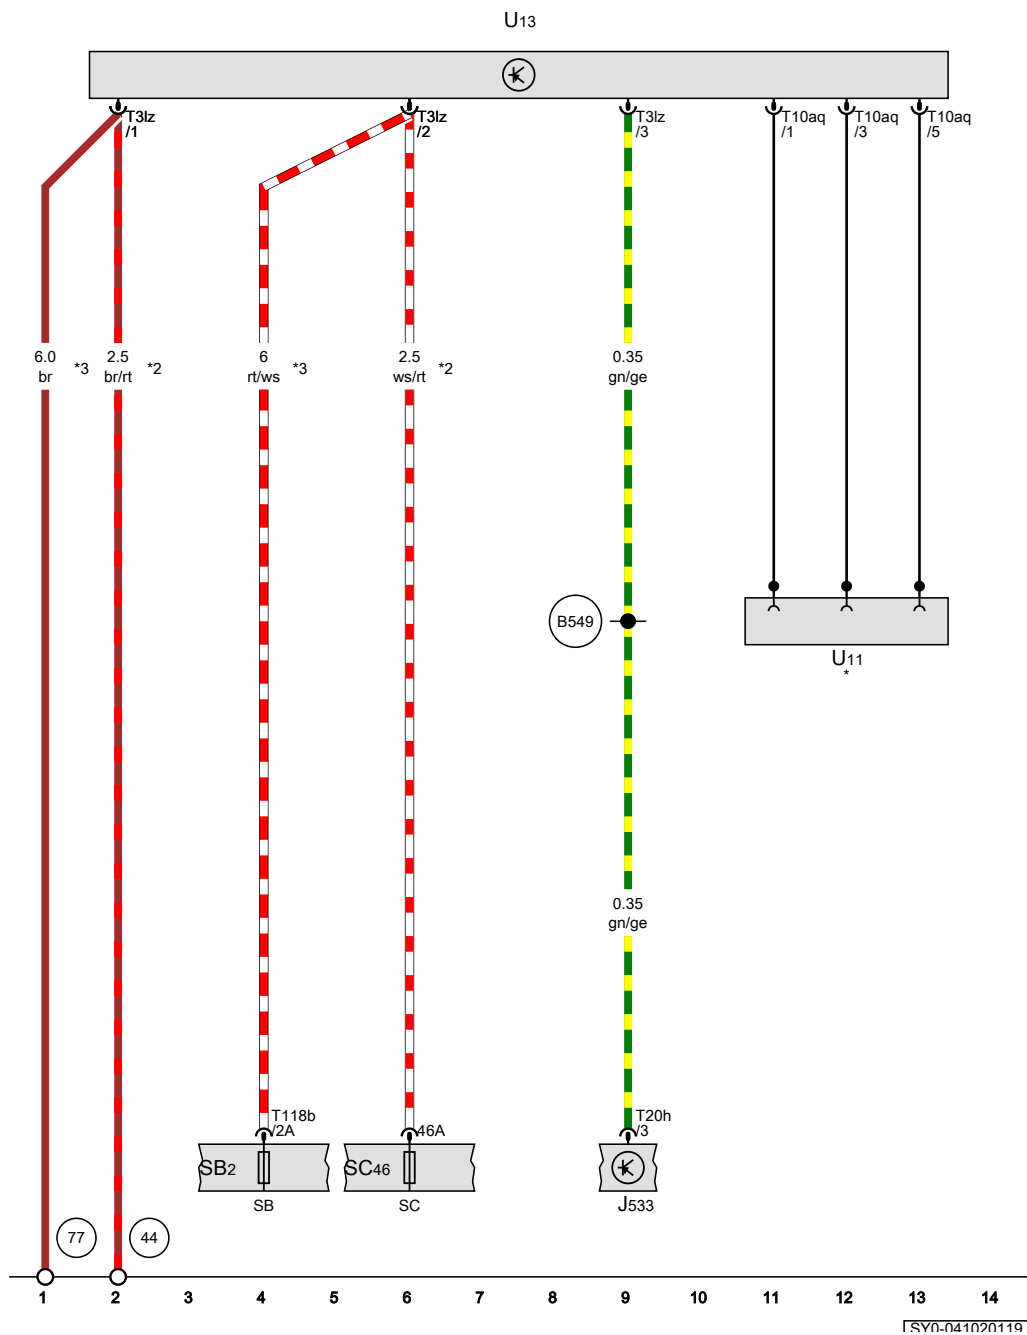



- J533 Data bus diagnostic interface
- SB Fuse holder B
- SB2 Fuse 2 on fuse holder B
- SC Fuse holder C
- SC46 Fuse 46 on fuse holder C
- T3lz 3-pin connector, brown
- T10aq 10-pin connector
- T20h 20-pin connector, red
- T118b 118-pin connector, black
- U11 Interior socket, 230 V, 110 V
- U13 DC/AC converter with socket, 12 V - 230 V
- 44 Earth point, lower part of left A-pillar
- 77 Earth point, lower part of left B-pillar
- B549 Connection 2 (LIN bus) in main wiring harness
- * Pre-wired component
- *2 Up to May 2017
- *3 From May 2017

Multifunction steering wheel , (2ZA),(2ZW)

From September 2016

Steering column electronics control unit, Heated steering wheel

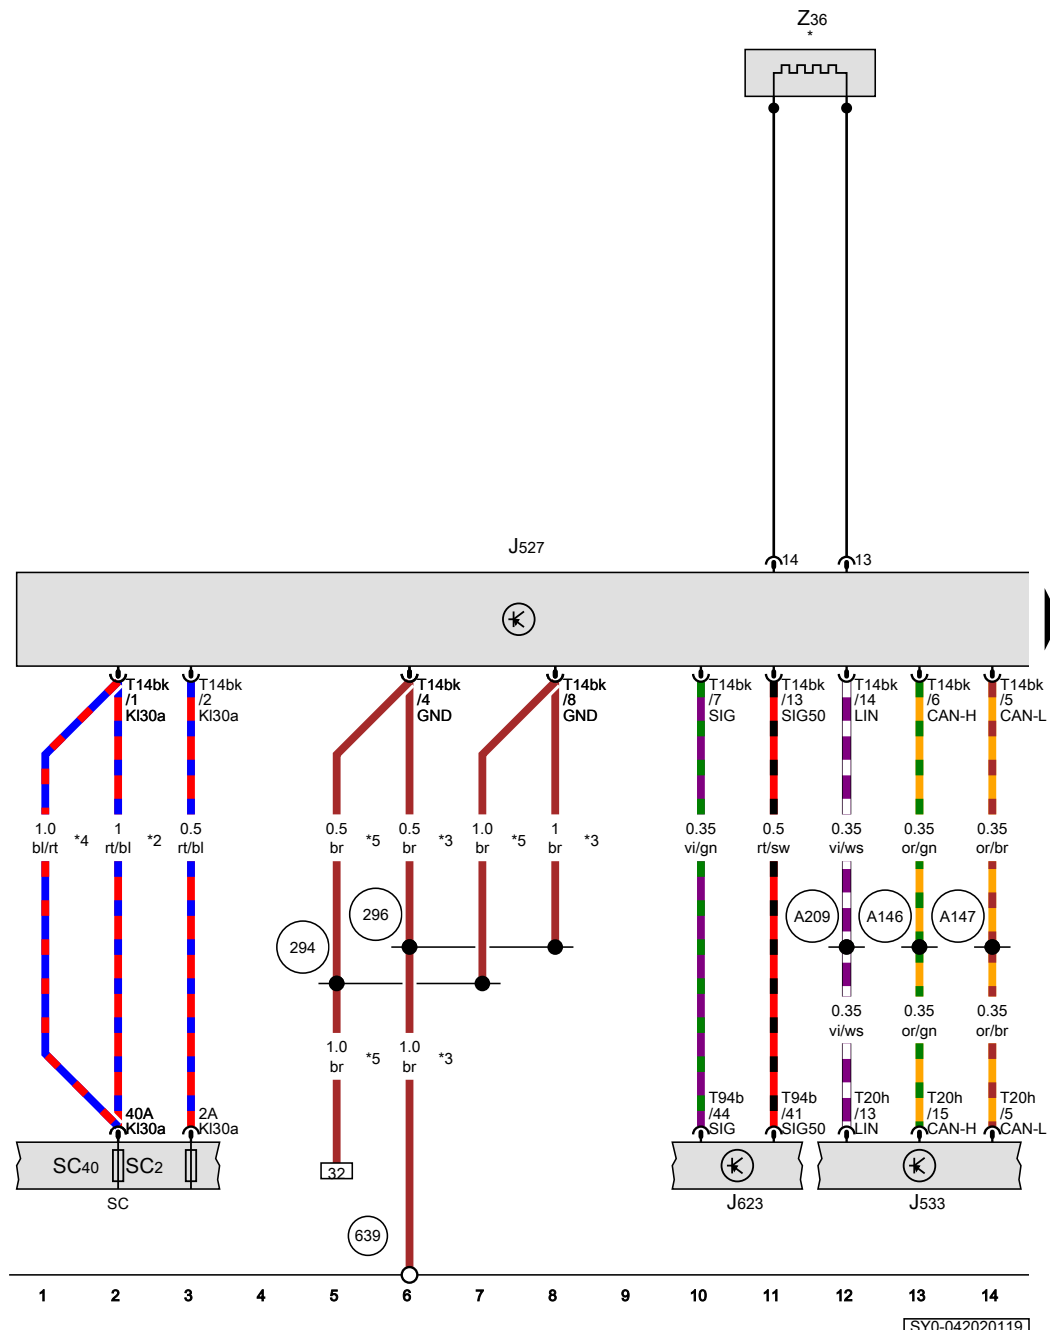

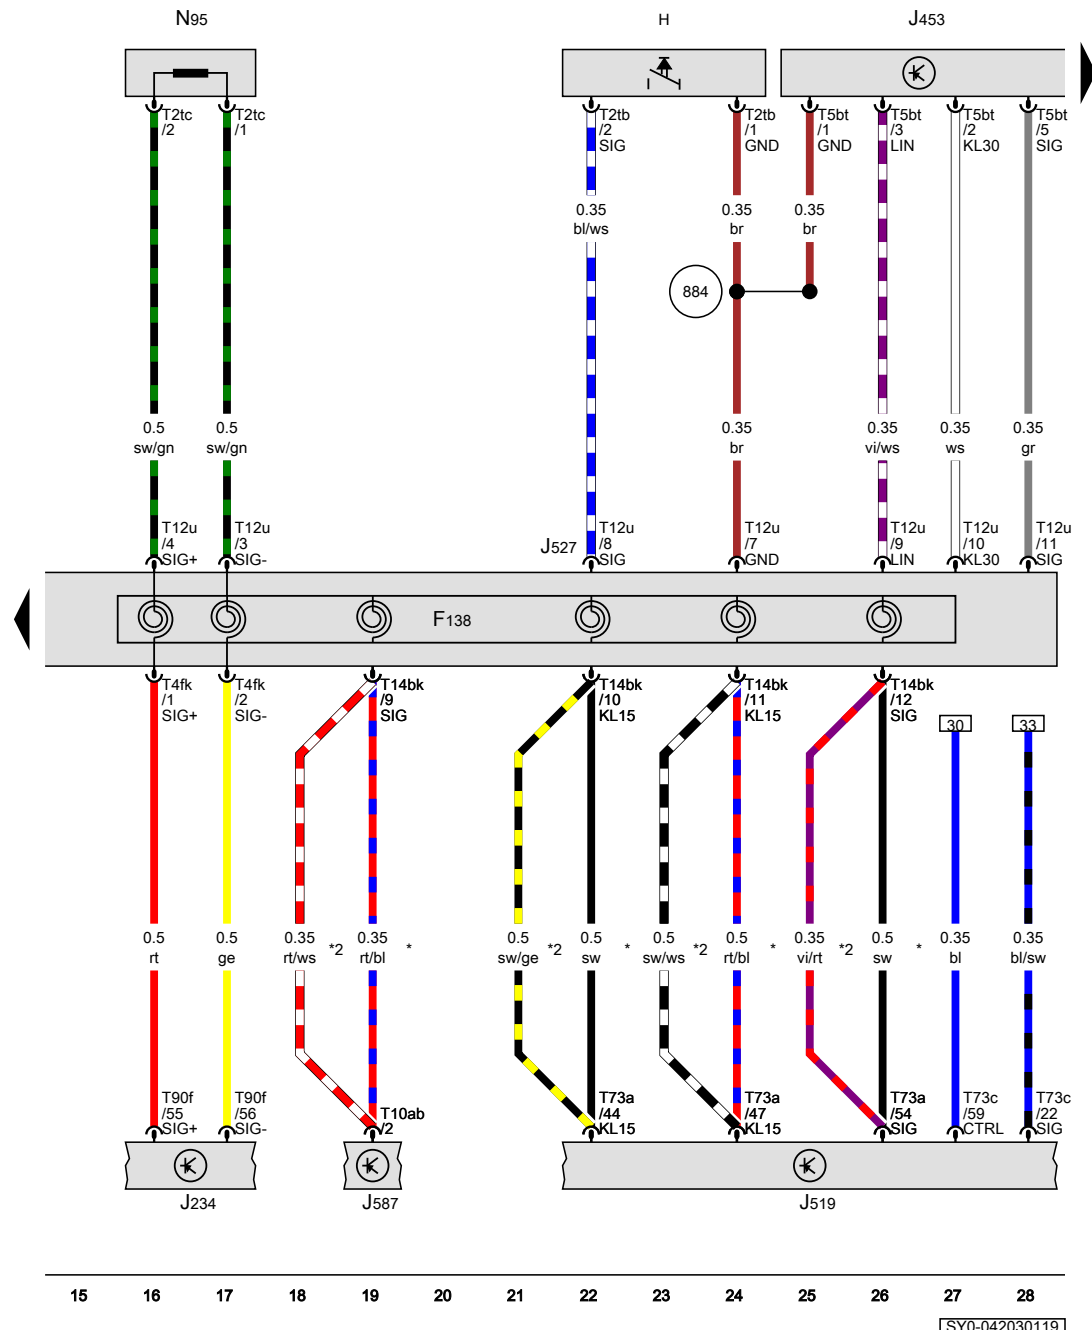


Horn plate, Multifunction steering wheel control unit,
Steering column electronics control unit, Airbag igniter on
driver side

- F138 Airbag coil connector and return ring with slip ring
- H Horn plate
- J234 Airbag control unit
- J453 Multifunction steering wheel control unit
- J519 Onboard supply control unit
- J527 Steering column electronics control unit
- J587 Selector lever sensors control unit
- N95 Airbag igniter on driver side
- T2tb 2-pin connector
- T2tc 2-pin connector
- T4fk 4-pin connector, yellow
- T5bt 5-pin connector, black
- T10ab 10-pin connector, red
- T12u 12-pin connector
- T14bk 14-pin connector, black
- T73a 73-pin connector, black
- T73c 73-pin connector, black
- T90f 90-pin connector, yellow

884 Earth connection 1 in steering wheel wiring harness

- * Up to November 2017
- *2 From November 2017

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

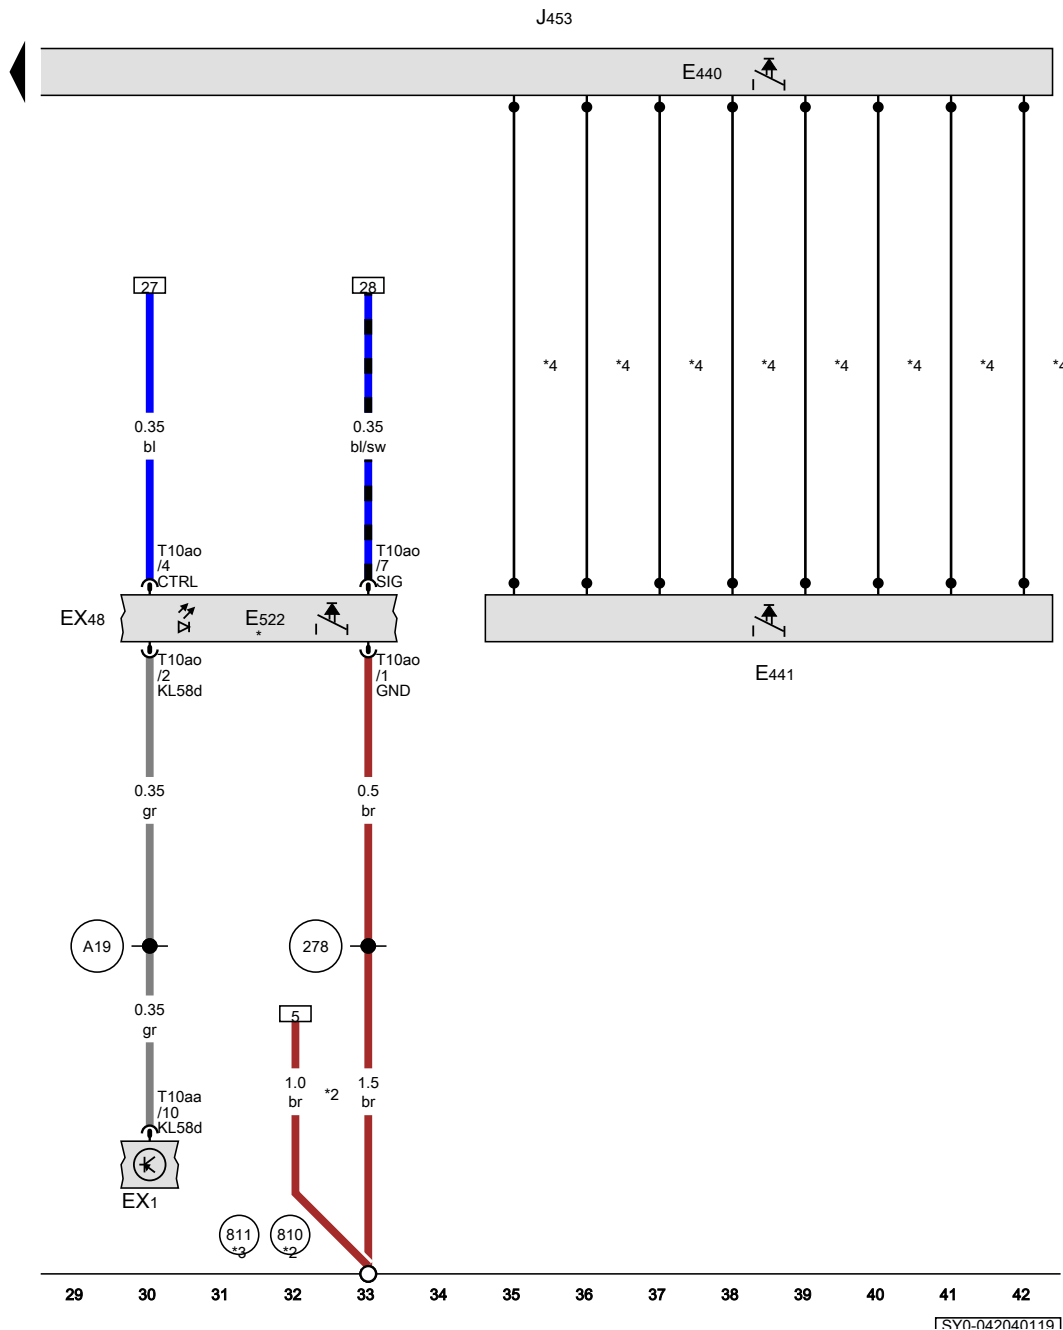


Multifunction buttons on left in steering wheel, Multifunction buttons on right in steering wheel, Steering wheel heater button, Multifunction steering wheel control unit

- EX1 Rotary light switch
- EX48 Centre switch module 3 in dash panel
- E440 Multifunction buttons on left in steering wheel
- E441 Multifunction buttons on right in steering wheel
- E522 Steering wheel heater button
- J453 Multifunction steering wheel control unit
- T10aa 10-pin connector, red
- T10ao 10-pin connector, red
- 278 Earth connection 4, in interior wiring harness
- 810 Earth point on central tube for dash panel, centre left
- 811 Earth point on central tube for dash panel, centre right
- A19 Connection (58d), in dash panel wiring harness
- * For models with heated steering wheel
- *2 For left-hand drive models
- *3 For right-hand drive models
- *4 Adapter wire

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink

Radiator fan

From September 2016

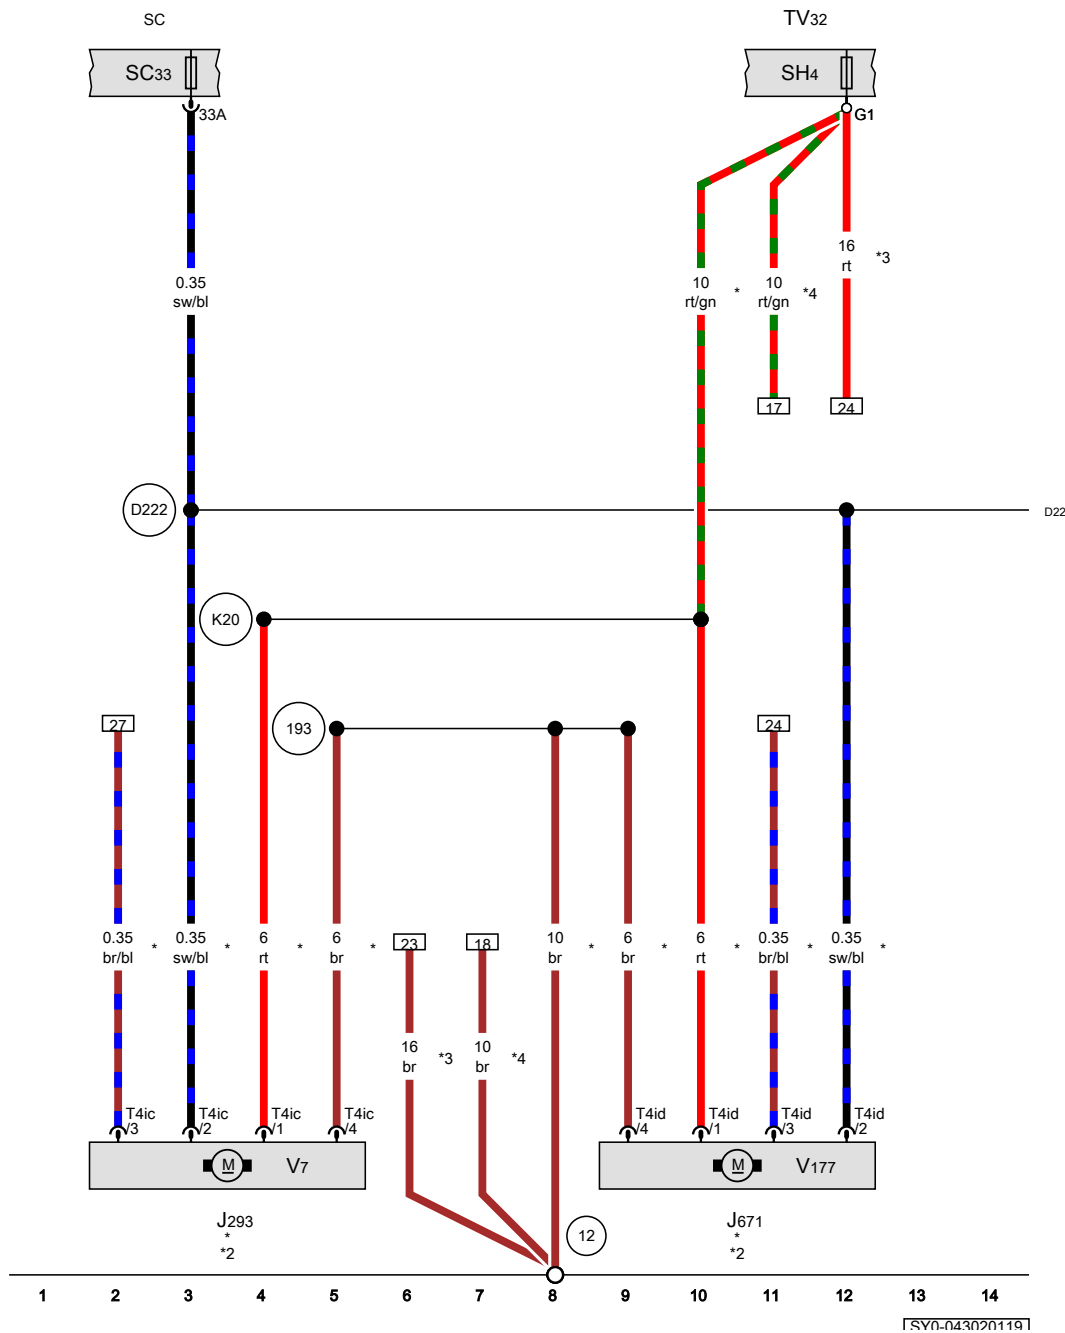


Fuse holder C, Jump start connection, Radiator fan, Radiator fan 2

- J293 Radiator fan control unit
- J671 Radiator fan control unit 2
- SC Fuse holder C
- SH4 Fuse 4 in fuse holder H
- SC33 Fuse 33 on fuse holder C
- T4ic 4-pin connector, black
- T4id 4-pin connector, black
- TV32 Jump start connection
- V7 Radiator fan
- V177 Radiator fan 2

- 12 Earth point, on left in engine compartment
- 193 Earth connection 1, in coolant fan wiring harness
- D222 Connection 10 (87a), in engine compartment wiring harness
- K20 Positive connection 1 (30), in radiator fan wiring harness
- * For models with two radiator fans
- *2 Pre-wired component
- *3 For models with towing bracket
- *4 For models with no towing bracket

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

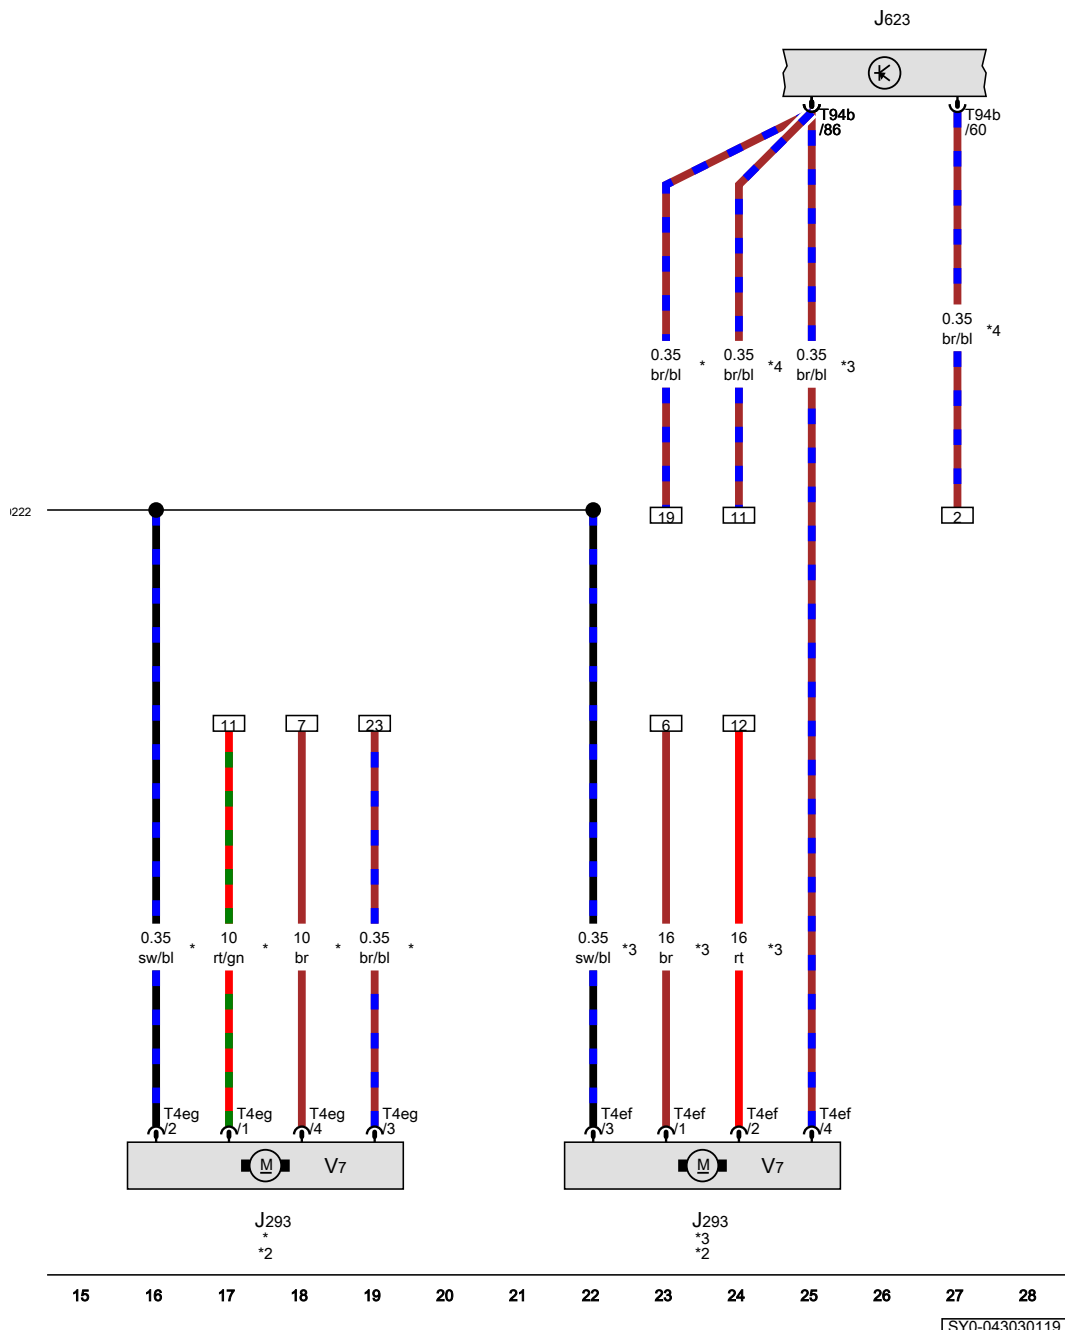


Engine/motor control unit, Radiator fan

- J293 Radiator fan control unit
- J623 Engine/motor control unit
- T4ef 4-pin connector, black
- T4eg 4-pin connector, black
- T94b 94-pin connector, black
- V7 Radiator fan
- D222 Connection 10 (87a), in engine compartment wiring harness

- * For models with no towing bracket
- *2 Pre-wired component
- *3 For models with towing bracket
- *4 For models with two radiator fans

Transfer box (centre differential lock, all-wheel drive), differential lock (axle differential lock, rear final drive) , (1Y4)

From September 2016

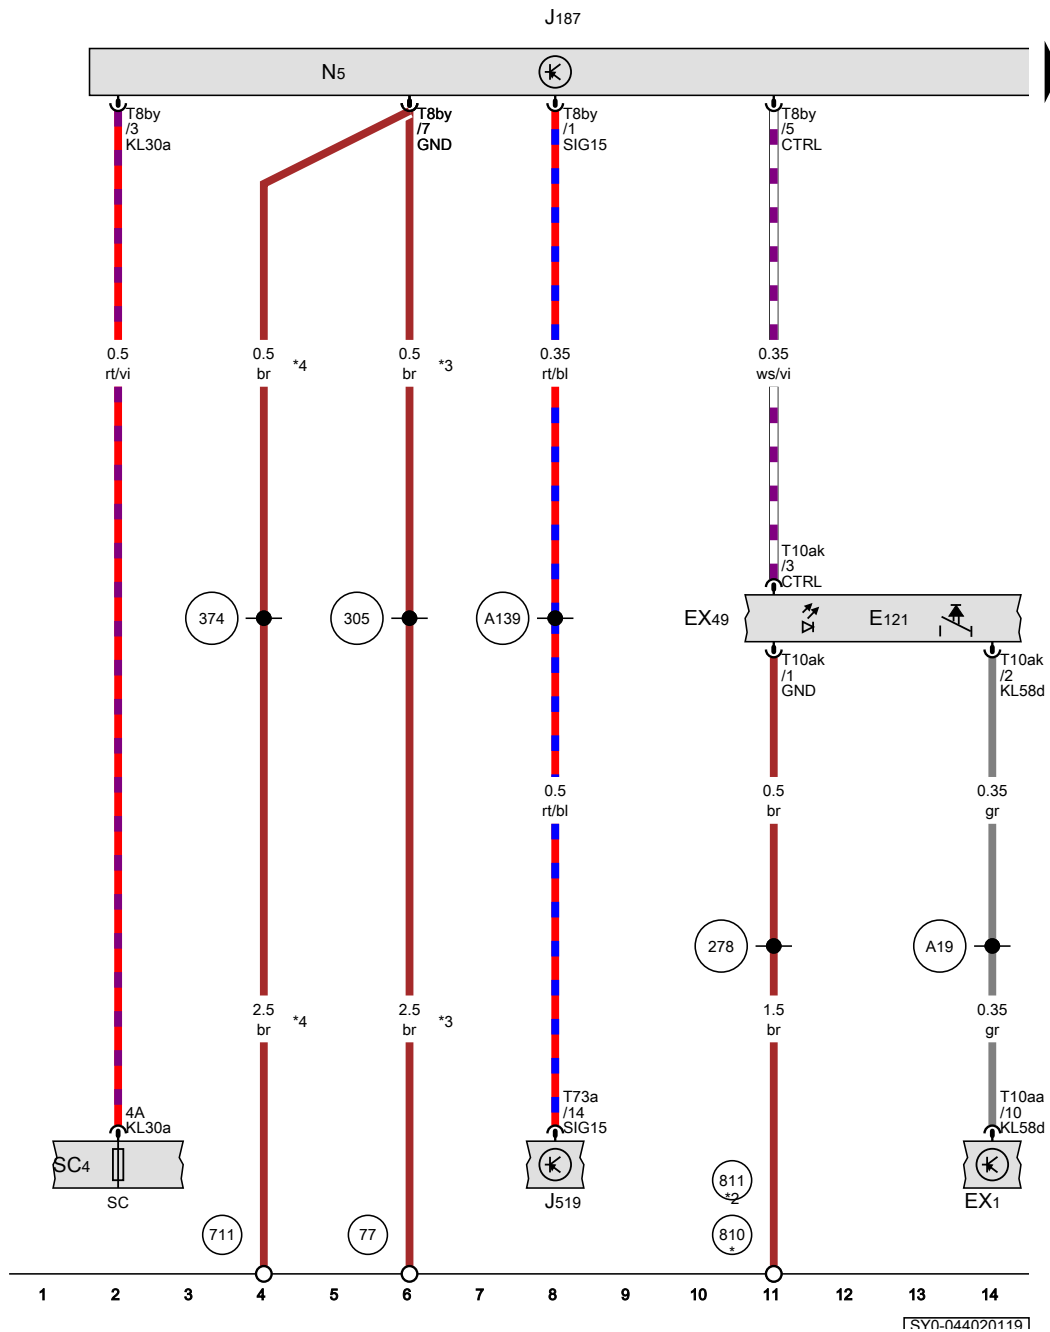

Rear differential lock switch, Differential lock control unit

- EX1 Rotary light switch
- EX49 Centre switch module 4 in dash panel
- E121 Rear differential lock switch
- J187 Differential lock control unit
- J519 Onboard supply control unit
- N5 Control solenoid
- SC Fuse holder C
- SC4 Fuse 4 on fuse holder C
- T8by 8-pin connector, black
- T10aa 10-pin connector, red
- T10ak 10-pin connector, black
- T73a 73-pin connector, black


- 77 Earth point, lower part of left B-pillar
- 278 Earth connection 4, in interior wiring harness
- 305 Earth connection (auxiliary heater), in interior wiring harness
- 374 Earth connection 9, in main wiring harness
- 711 Earth point 3 on rear left longitudinal member
- 810 Earth point on central tube for dash panel, centre left
- 811 Earth point on central tube for dash panel, centre right
- A19 Connection (58d), in dash panel wiring harness
- A139 Connection 3 (15) in dash panel wiring harness

- * For left-hand drive models
- *2 For right-hand drive models
- *3 Up to May 2017
- *4 From May 2017

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

Axle differential lock Hall sender 1, Differential lock control unit

- G460 Axle differential lock Hall sender 1
- J187 Differential lock control unit
- J533 Data bus diagnostic interface
- T6bd 6-pin connector, black
- T8by 8-pin connector, black
- T8bz 8-pin connector, black
- T20h 20-pin connector, red
- B673 Connection 2 (running gear/dash panel insert CAN bus, high), in main wiring harness
- B676 Connection 1 (running gear/dash panel insert CAN bus, low), in main wiring harness

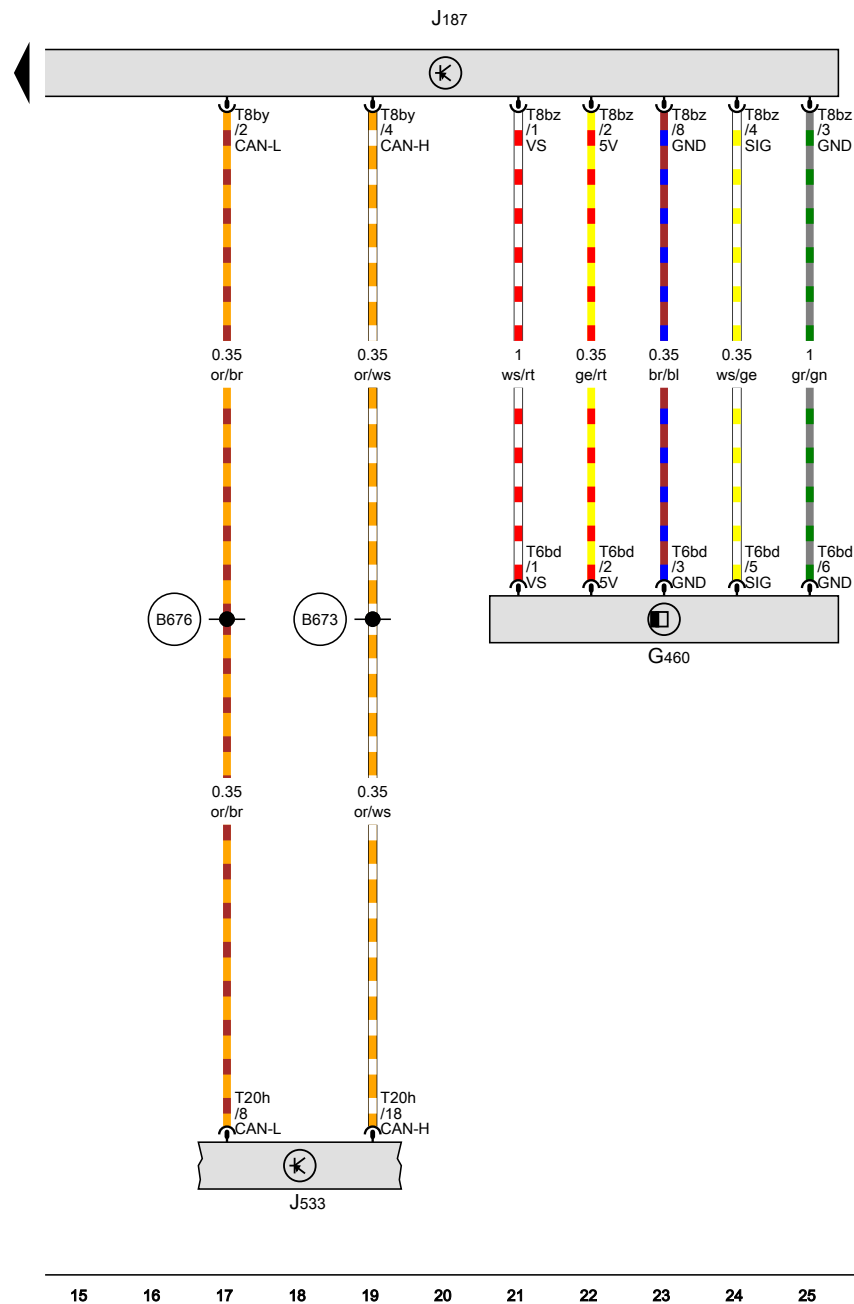

15 16 17 18 19 20 21 22 23 24 25 26 27 28

All-wheel drive , (1X1)


From September 2016

All-wheel drive control unit, All-wheel drive coupling pump

J492 All-wheel drive control unit
 J519 Onboard supply control unit
 J533 Data bus diagnostic interface
 SC Fuse holder C
 SC4 Fuse 4 on fuse holder C
 T2wc 2-pin connector, black
 T8bx 8-pin connector, black
 T20h 20-pin connector, red
 T73a 73-pin connector, black
 V181 All-wheel drive coupling pump


- 77 Earth point, lower part of left B-pillar
- 305 Earth connection (auxiliary heater), in interior wiring harness
- 374 Earth connection 9, in main wiring harness
- 711 Earth point 3 on rear left longitudinal member
- A139 Connection 3 (15) in dash panel wiring harness
- B673 Connection 2 (running gear/dash panel insert CAN bus, high), in main wiring harness
- B676 Connection 1 (running gear/dash panel insert CAN bus, low), in main wiring harness
- * Up to May 2017
- *2 From May 2017

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

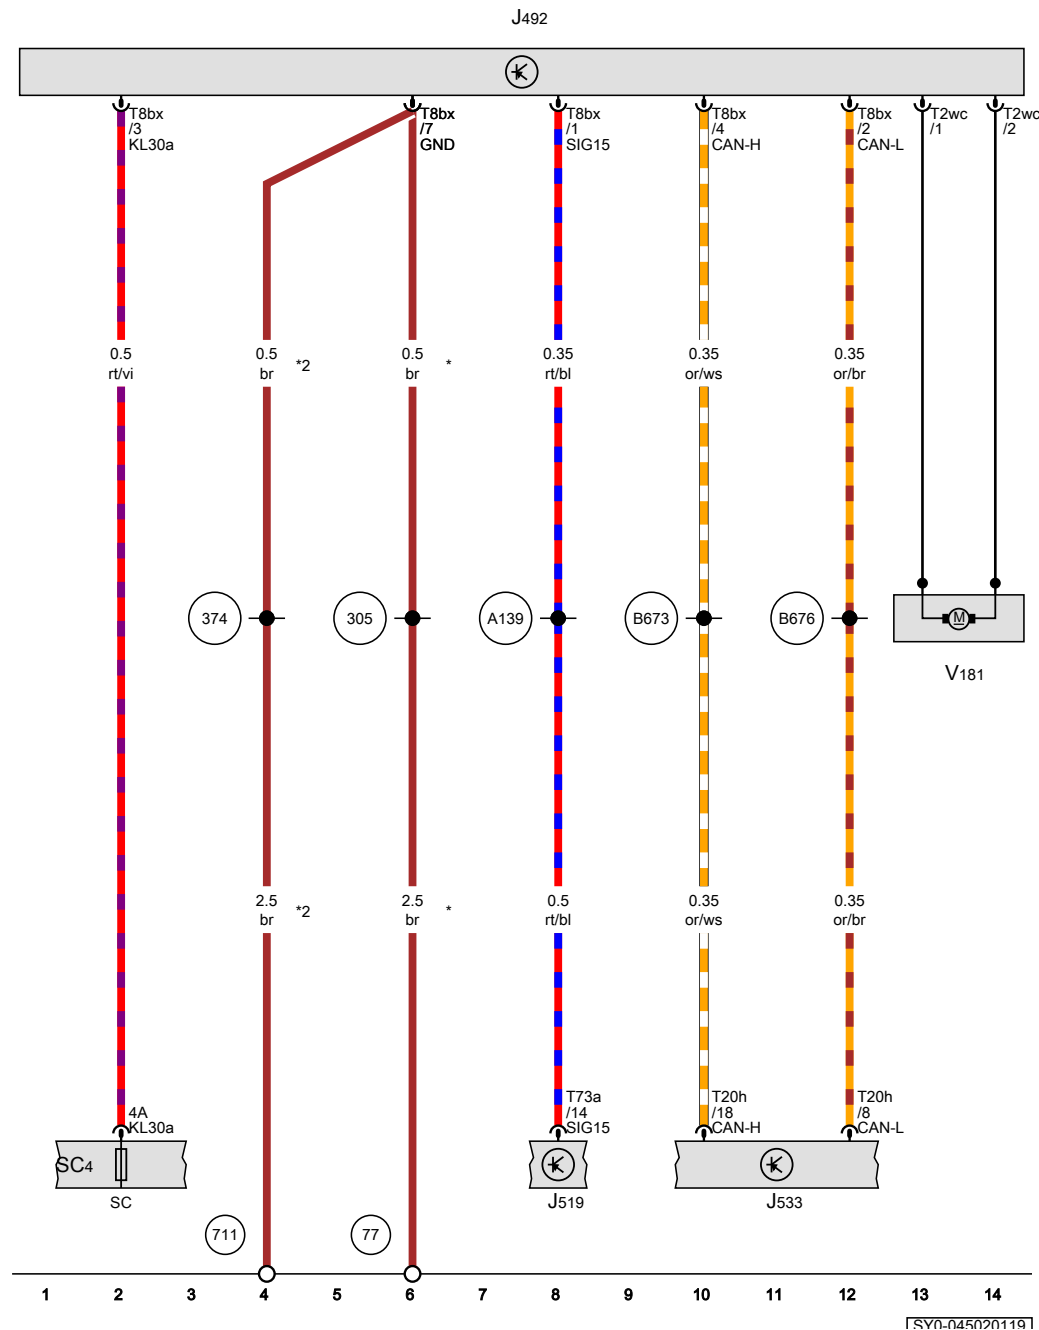

Electromechanical steering

From September 2016

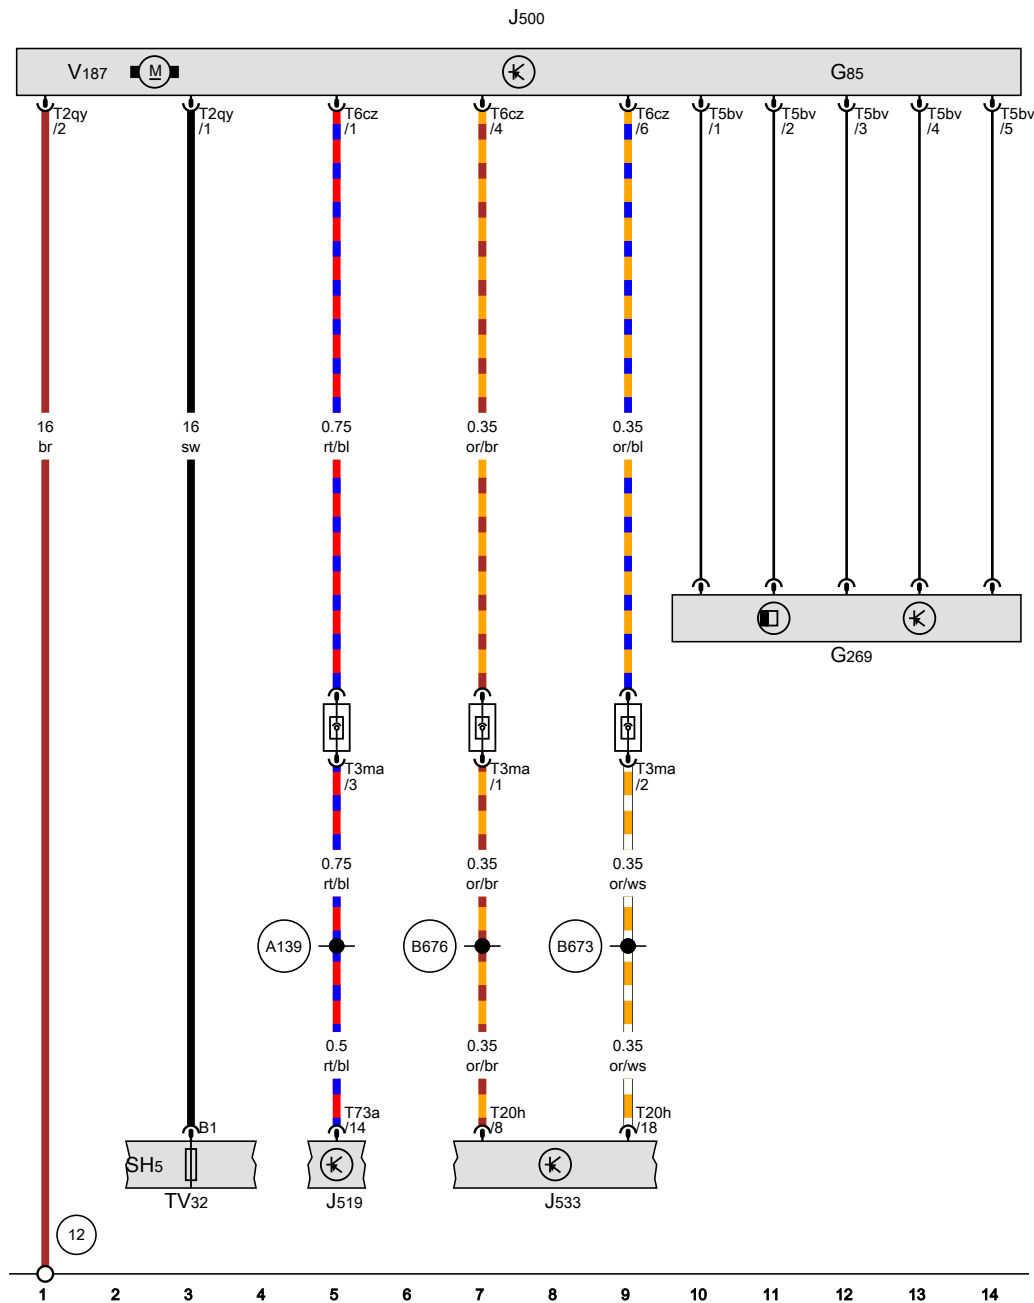

Steering angle sender, Steering moment sender, Power steering control unit, Electromechanical power steering motor

- G85 Steering angle sender
- G269 Steering moment sender
- J500 Power steering control unit
- J519 Onboard supply control unit
- J533 Data bus diagnostic interface
- SH5 Fuse 5 in fuse holder H
- T2qy 2-pin connector, black
- T3ma 3-pin connector, black
- T5bv 5-pin connector, black
- T6cz 6-pin connector, black
- T20h 20-pin connector, red
- T73a 73-pin connector, black
- TV32 Jump start connection
- V187 Electromechanical power steering motor

- 12 Earth point, on left in engine compartment
- A139 Connection 3 (15) in dash panel wiring harness
- B673 Connection 2 (running gear/dash panel insert CAN bus, high), in main wiring harness
- B676 Connection 1 (running gear/dash panel insert CAN bus, low), in main wiring harness


ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink


Radio navigation system , (7UF),(I8E)

From September 2016

Multimedia system operating unit, Control unit 1 for information electronics

- E380 Multimedia system operating unit
- J685 Display unit for front information display and operating unit control unit
- J794 Control unit 1 for information electronics
- SC Fuse holder C
- SC10 Fuse 10 on fuse holder C
- SC12 Fuse 12 on fuse holder C
- SC16 Fuse 16 on fuse holder C
- T5ay 5-pin connector, purple
- T5az 5-pin connector, black
- T8df 8-pin connector, black
- T12k 12-pin connector, black
- T12l 12-pin connector, grey
- * Up to May 2017
- *2 Up to November 2017
- *3 From May 2017
- *4 From November 2017

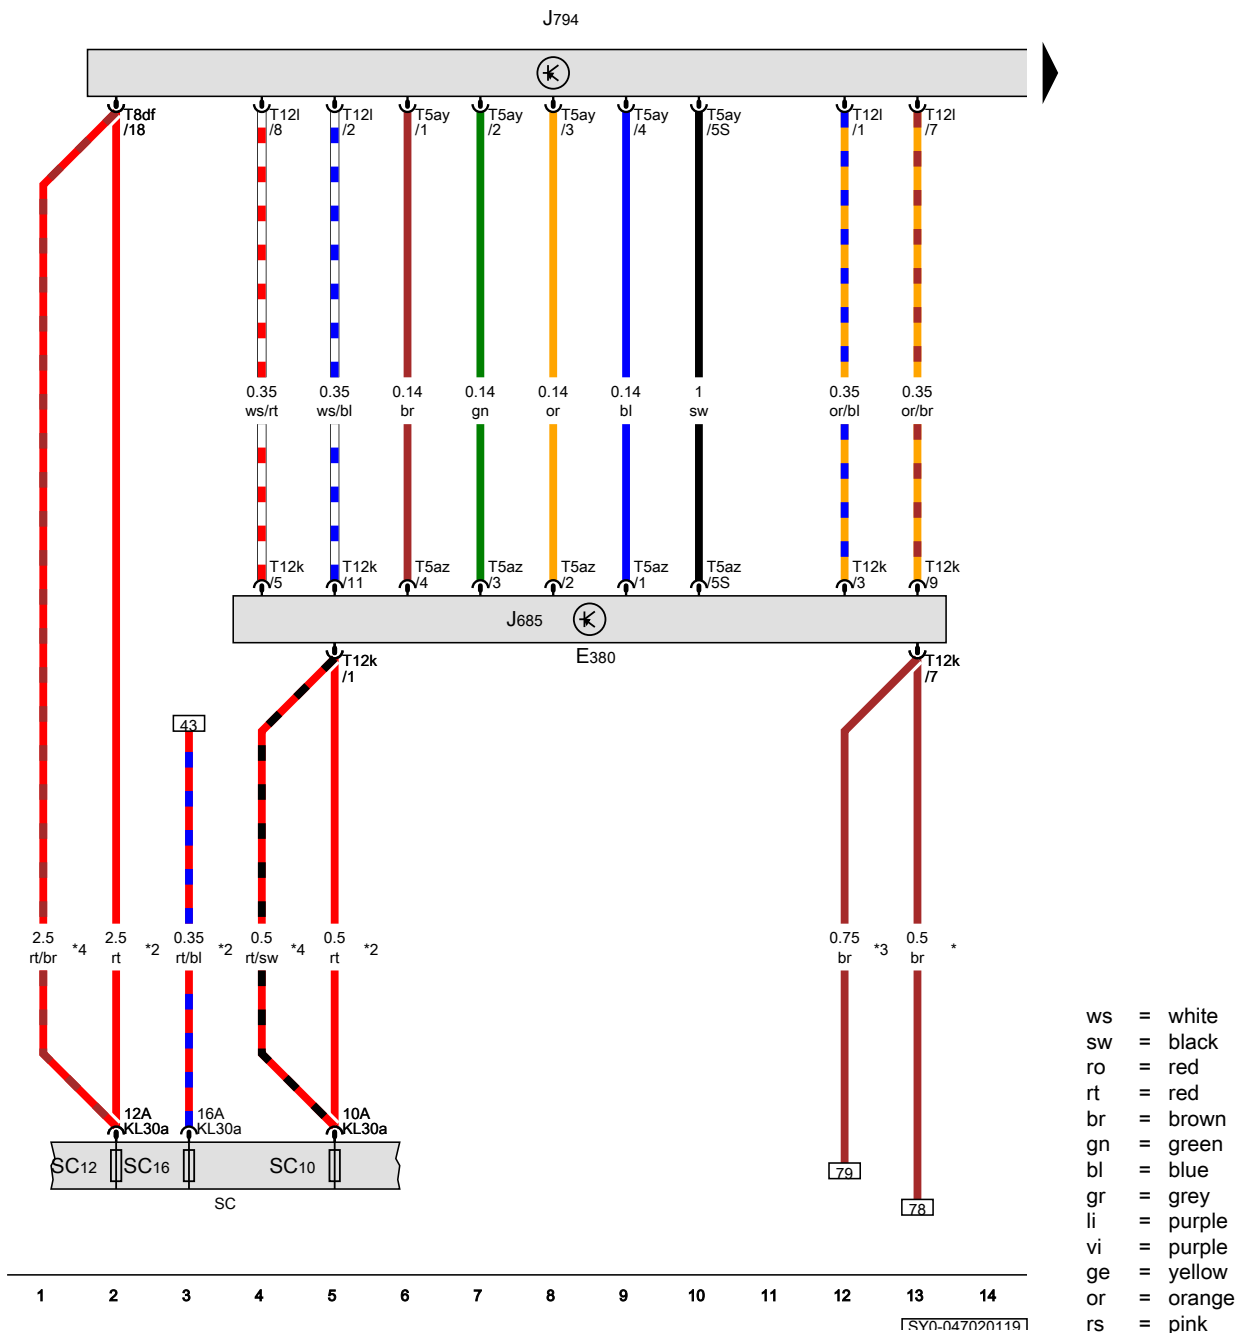

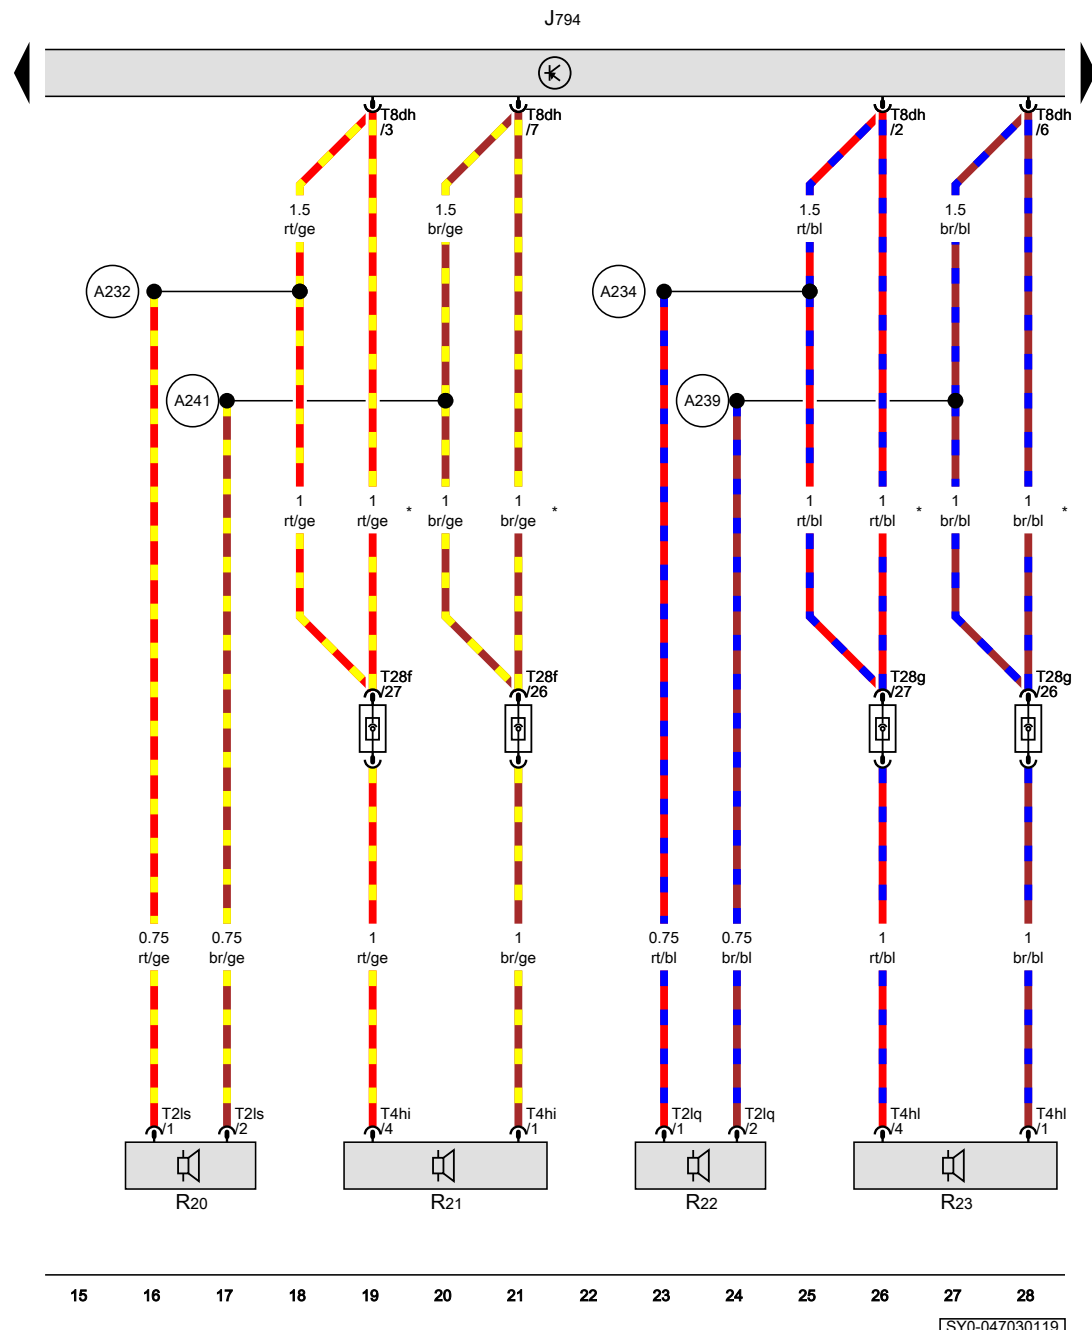

Control unit 1 for information electronics, Front left treble loudspeaker, Front left bass loudspeaker, Front right treble loudspeaker, Front right bass loudspeaker

J794 Control unit 1 for information electronics

R20 Front left treble loudspeaker

R21 Front left bass loudspeaker

R22 Front right treble loudspeaker

R23 Front right bass loudspeaker

T2lq 2-pin connector, black

T2ls 2-pin connector, black

T4hi 4-pin connector, black

T4hl 4-pin connector, black

T8dh 8-pin connector, brown

T28f 28-pin connector, black

T28g 28-pin connector, black


A232 Connection 1 (positive, left loudspeaker), in dash panel wiring harness

A234 Connection 1 (positive, right loudspeaker), in dash panel wiring harness

A239 Connection 2 (negative, right loudspeaker), in dash panel wiring harness

A241 Connection 2 (negative, left loudspeaker), in dash panel wiring harness


* For models with 2 loudspeakers (8RD)

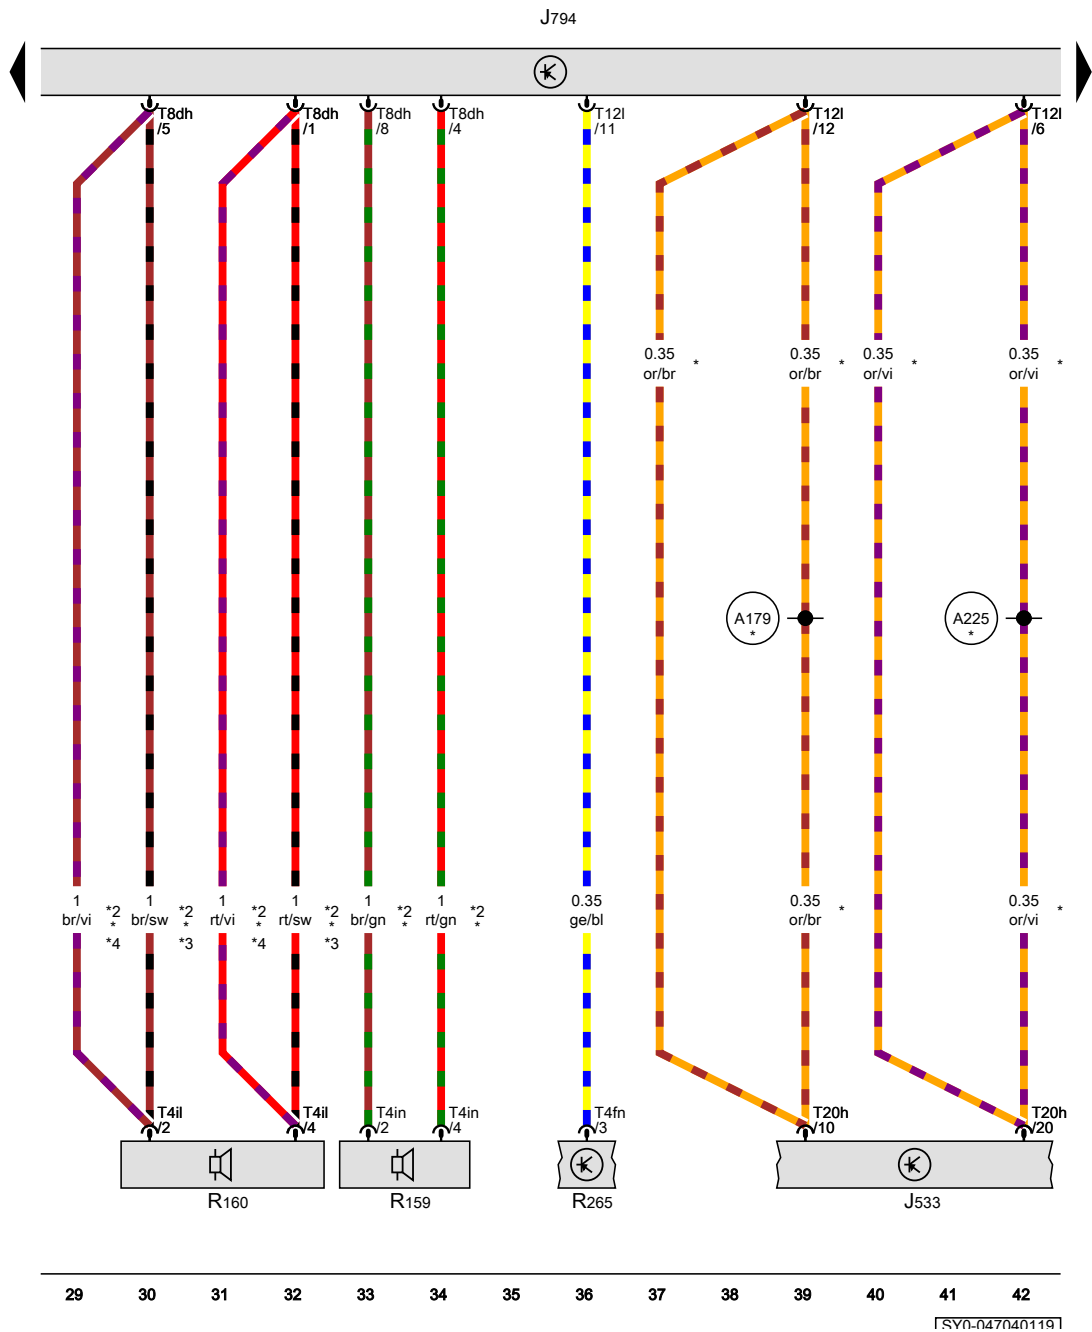

Control unit 1 for information electronics, Rear left mid-range and bass loudspeaker, Rear right mid-range and bass loudspeaker


- J533 Data bus diagnostic interface
- J794 Control unit 1 for information electronics
- R159 Rear left mid-range and bass loudspeaker
- R160 Rear right mid-range and bass loudspeaker
- R265 Storage compartment with interface for mobile telephone
- T4fn 4-pin connector, brown
- T4il 4-pin connector, black
- T4in 4-pin connector, black
- T8dh 8-pin connector, brown
- T12l 12-pin connector, grey
- T20h 20-pin connector, red
- A179 Connection (infotainment CAN bus, low), in dash panel wiring harness
- A225 Connection 2 (infotainment CAN bus, high) in dash panel wiring harness
- * According to equipment
- *2 For panel van and Kombi models
- *3 Up to May 2017
- *4 From May 2017

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

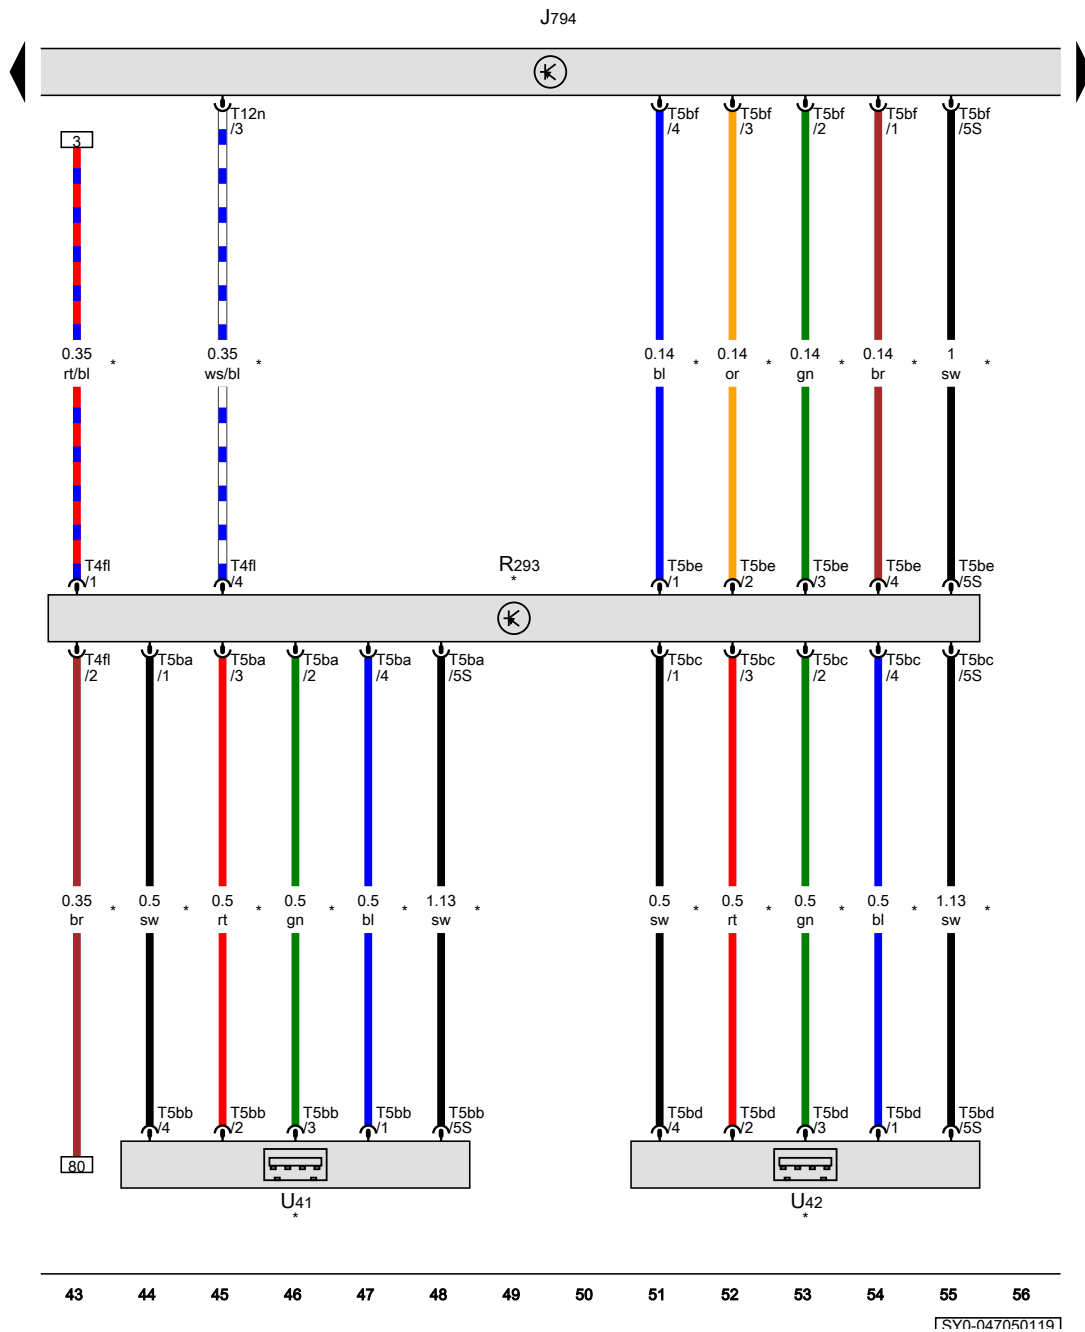

Control unit 1 for information electronics, USB hub, USB connection 1, USB connection 2


- J794 Control unit 1 for information electronics
- R293 USB hub
- T4fl 4-pin connector, red
- T5ba 5-pin connector, brown
- T5bb 5-pin connector, green
- T5bc 5-pin connector, purple
- T5bd 5-pin connector, green
- T5be 5-pin connector, green
- T5bf 5-pin connector, yellow
- T12n 12-pin connector, green
- U41 USB connection 1
- U42 USB connection 2
- * Up to November 2017

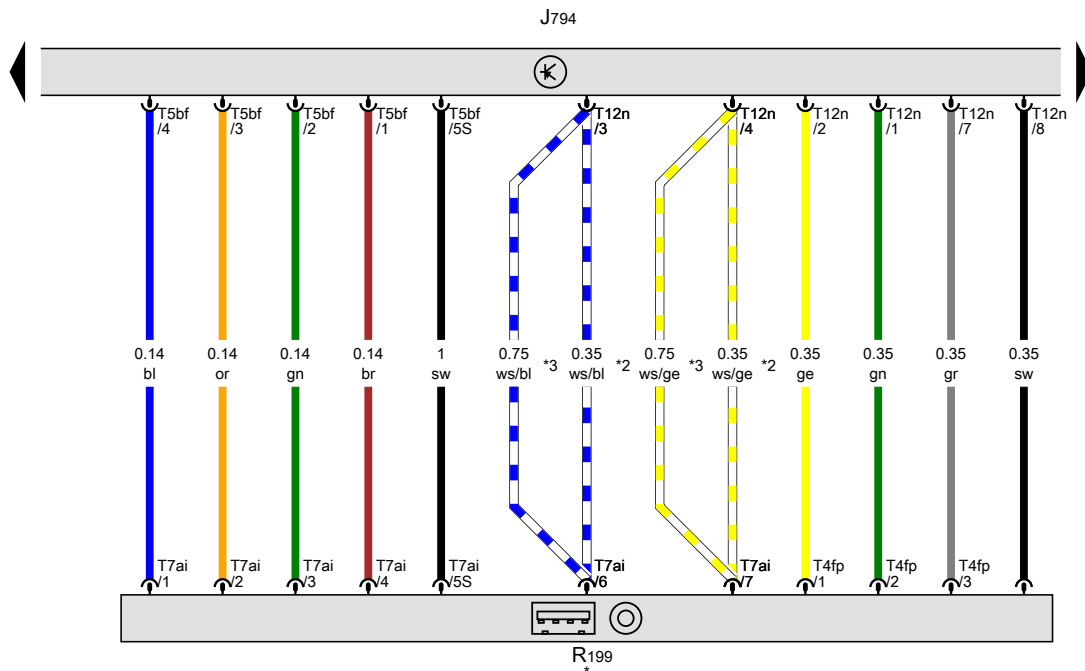

Control unit 1 for information electronics, Connection for external audio sources

- J794 Control unit 1 for information electronics
- R199 Connection for external audio sources
- T4fp 4-pin connector, black
- T5bf 5-pin connector, yellow
- T7ai 7-pin connector, green
- T12n 12-pin connector, green
- * According to equipment
- *2 Up to May 2017
- *3 From May 2017

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

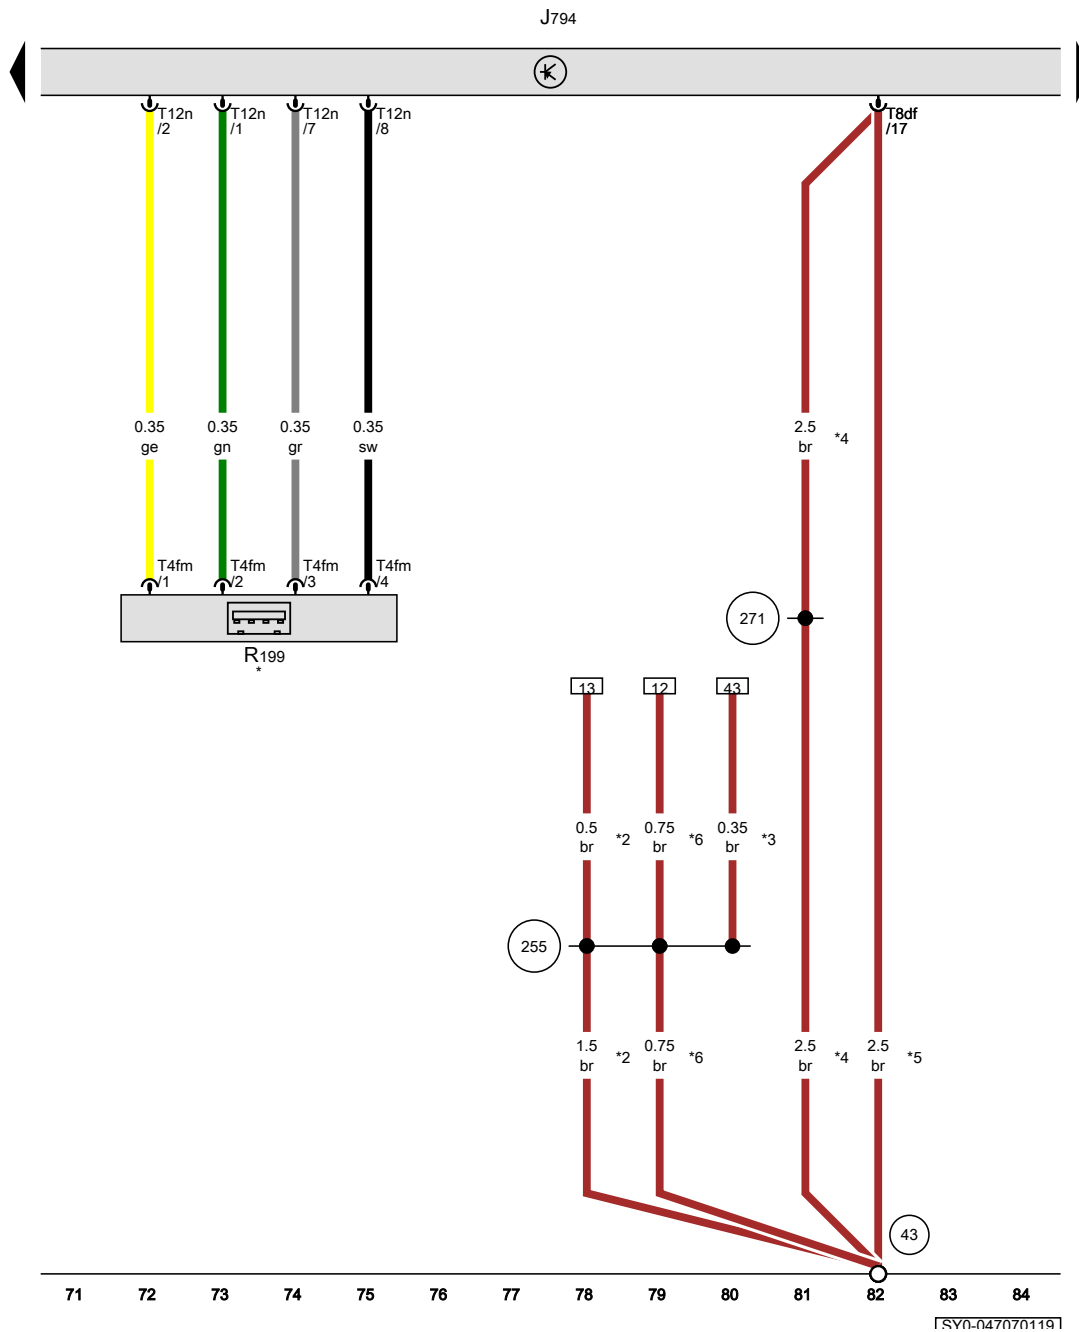

Control unit 1 for information electronics, Connection for external audio sources

J794 Control unit 1 for information electronics
 R199 Connection for external audio sources
 T4fm 4-pin connector, black
 T8df 8-pin connector, black
 T12n 12-pin connector, green

43 Earth point, lower part of right A-pillar

255 Earth connection 1, in radio wiring harness

271 Earth connection 3, in front wiring harness

* According to equipment

*2 Up to May 2017

*3 Up to November 2017


*4 For models with reversing camera system

*5 For models with no reversing camera system

*6 From May 2017

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

[SYN-047070119]

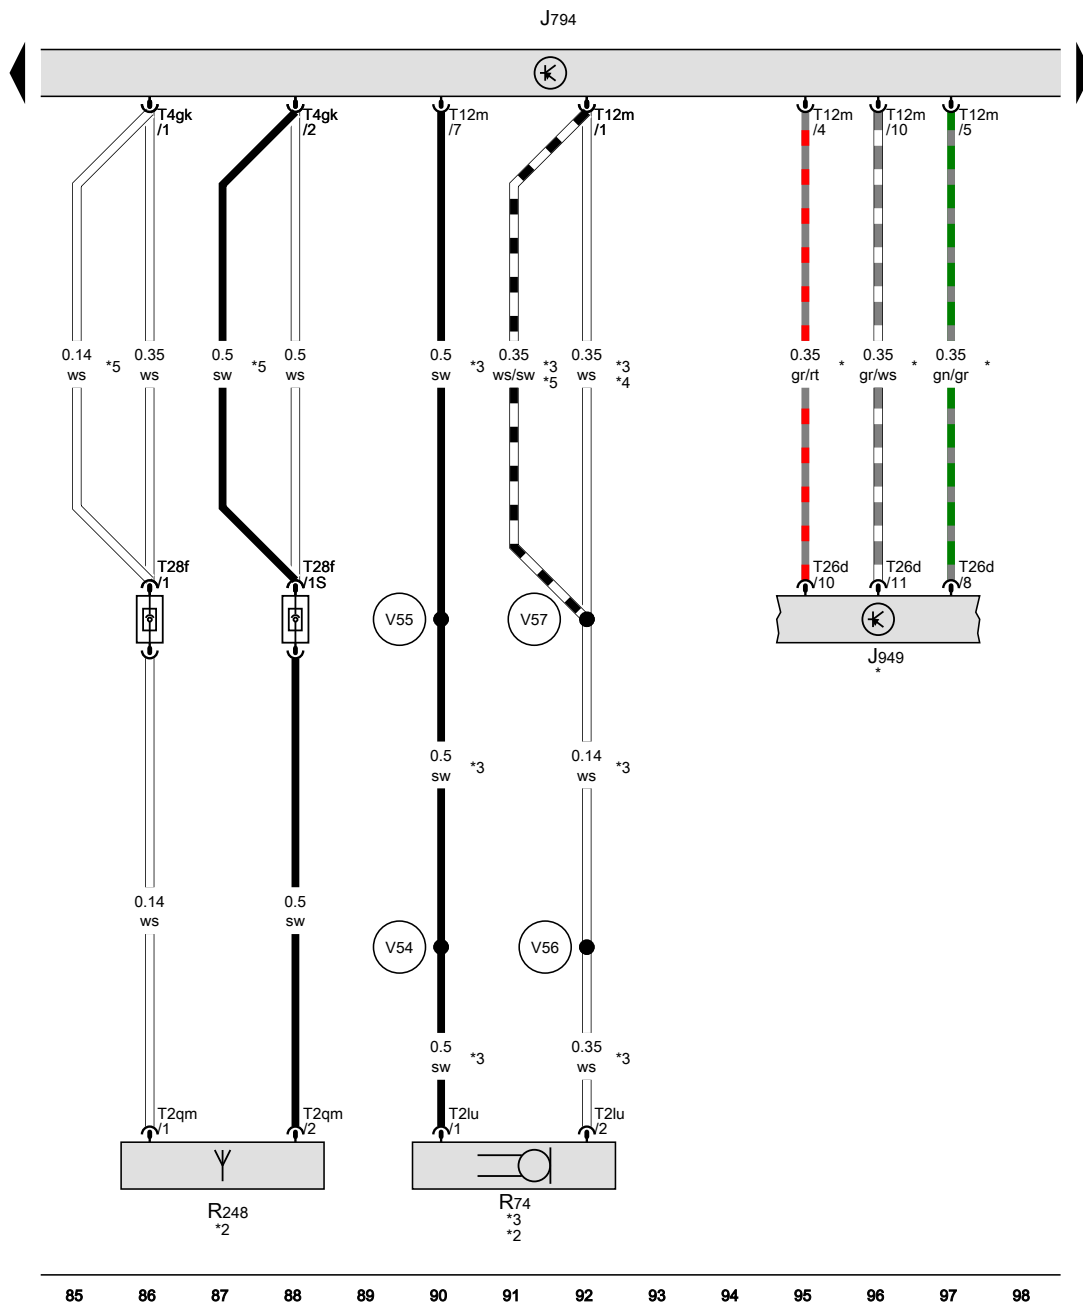

Control unit 1 for information electronics, Internal microphone, Radio aerial

- J794 Control unit 1 for information electronics
- J949 Emergency call module control unit and communication unit
- R74 Internal microphone
- R248 Radio aerial, in driver side exterior mirror housing
- T2lu 2-pin connector, black
- T2qm 2-pin connector, colourless
- T4gk 4-pin connector, white
- T12m 12-pin connector, blue
- T26d 26-pin connector, black
- T28f 28-pin connector, black

V54 Connection 1 (telephone), in main wiring harness


V55 Connection 2 (telephone), in main wiring harness

V56 Connection 3 (telephone), in main wiring harness

V57 Connection 4 (telephone), in main wiring harness

- * For models with emergency call module
- *2 Pre-wired component
- *3 For models with mobile telephone/preparation for mobile telephone
- *4 Up to November 2017
- *5 From November 2017

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

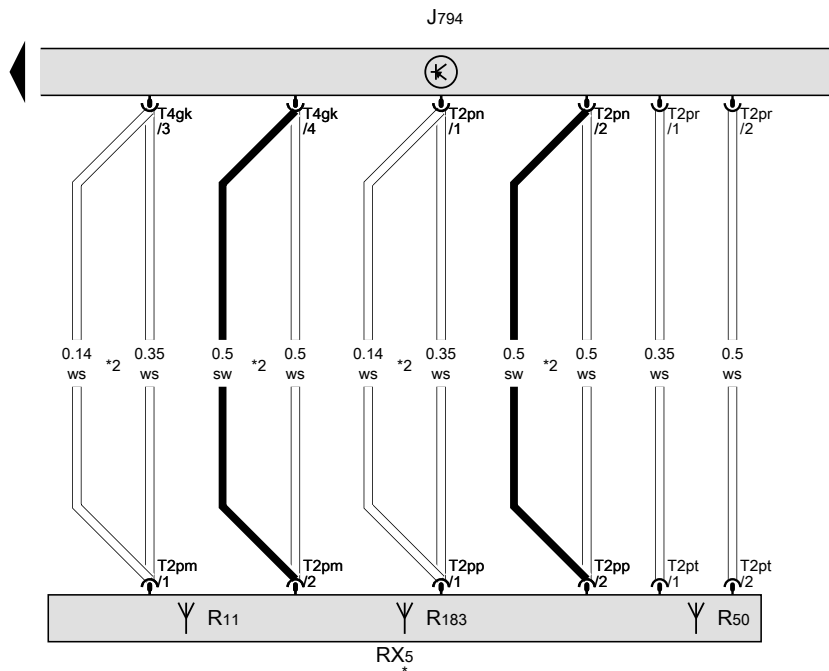


Control unit 1 for information electronics, Roof aerial, GPS aerial

- J794 Control unit 1 for information electronics
- RX5 Roof aerial
- R11 Aerial
- R50 GPS aerial
- R183 Digital radio aerial
- T2pm 2-pin connector, white
- T2pn 2-pin connector, black
- T2pp 2-pin connector, black
- T2pr 2-pin connector, blue
- T2pt 2-pin connector, blue
- T4gk 4-pin connector, white
- * Pre-wired component
- *2 From November 2017

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink


Radio system , (I7D)

From September 2016

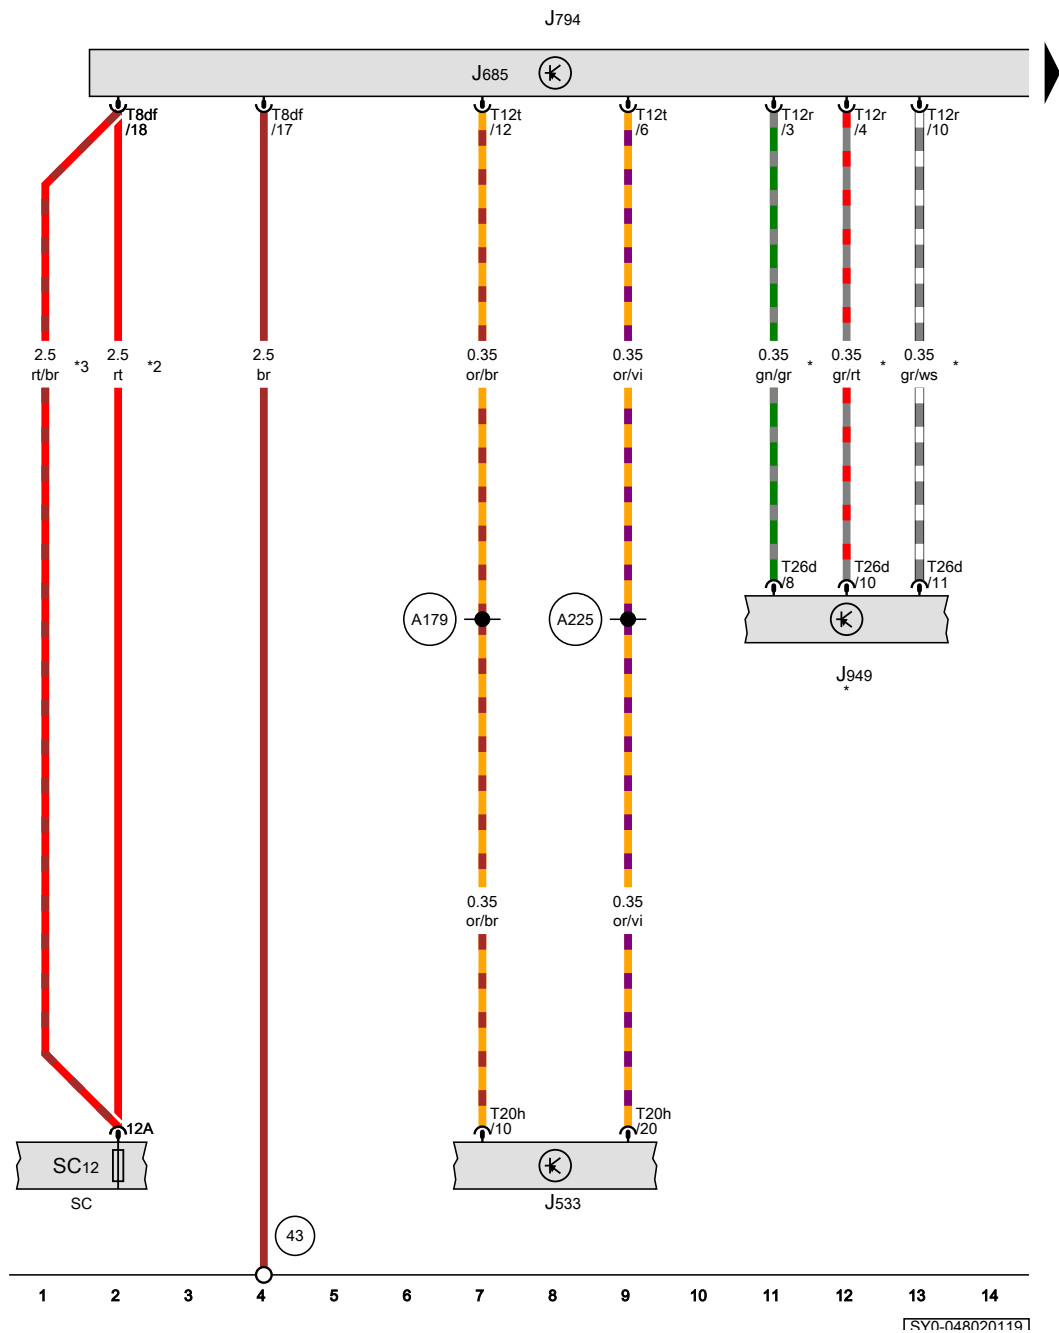

Control unit 1 for information electronics


- J533 Data bus diagnostic interface
- J685 Display unit for front information display and operating unit control unit
- J794 Control unit 1 for information electronics
- J949 Emergency call module control unit and communication unit
- SC Fuse holder C
- SC12 Fuse 12 on fuse holder C
- T8df 8-pin connector, black
- T12r 12-pin connector, blue
- T12t 12-pin connector, grey
- T20h 20-pin connector, red
- T26d 26-pin connector, black
- 43 Earth point, lower part of right A-pillar
- A179 Connection (infotainment CAN bus, low), in dash panel wiring harness
- A225 Connection 2 (infotainment CAN bus, high) in dash panel wiring harness
- * For models with emergency call module
- *2 Up to November 2017
- *3 From November 2017

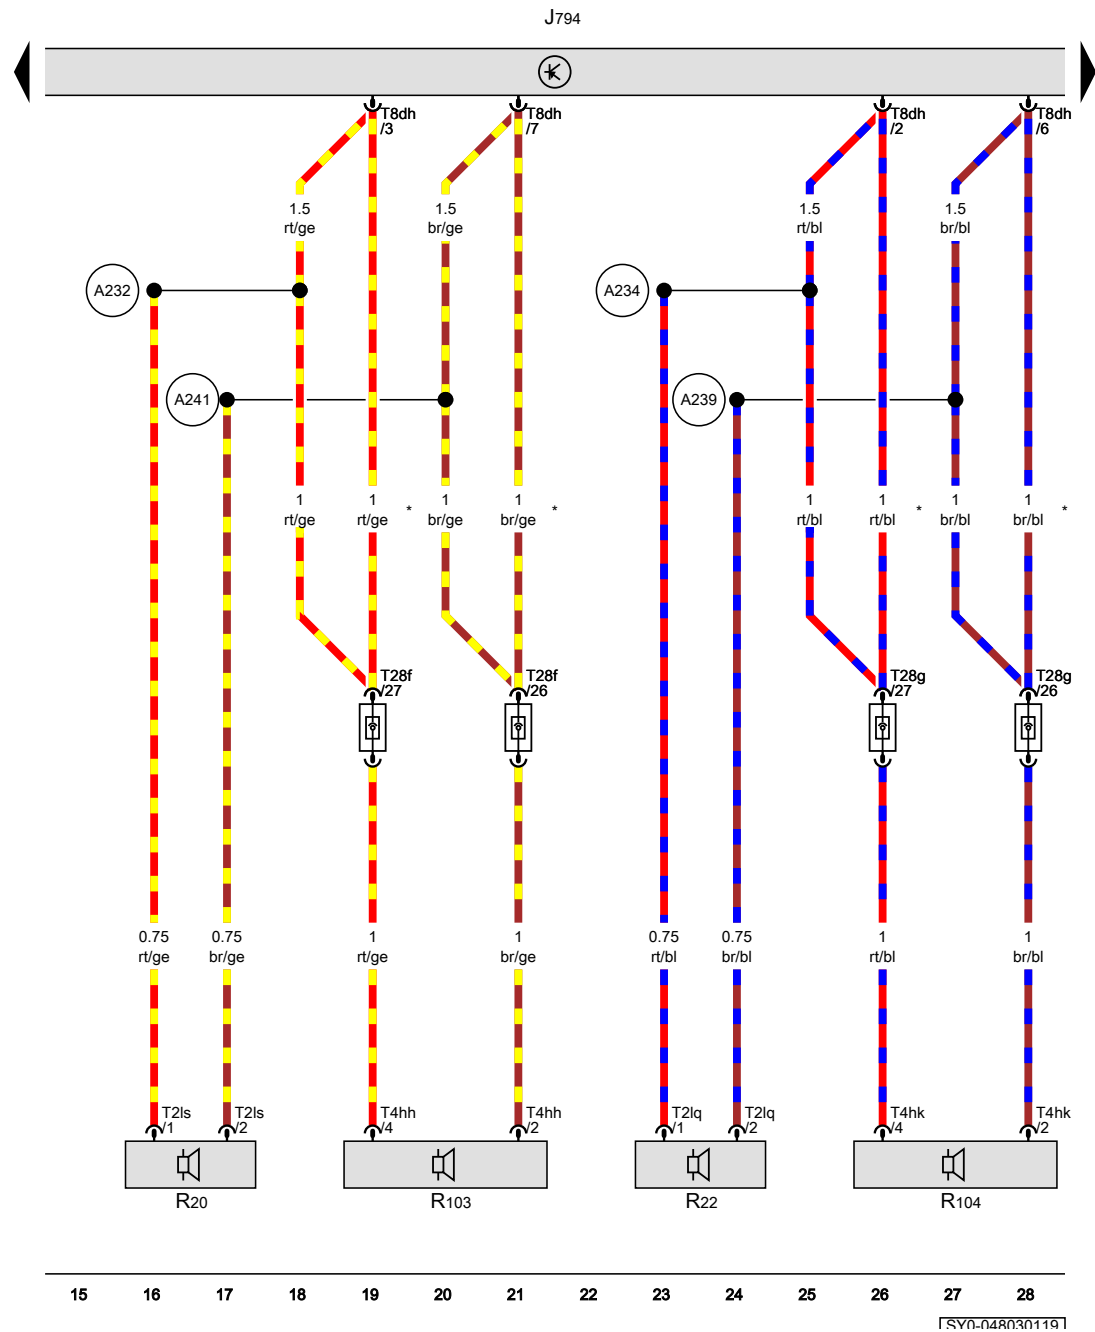

Control unit 1 for information electronics, Front left treble loudspeaker, Front right treble loudspeaker, Front left mid-range loudspeaker, Front right mid-range loudspeaker

- | | |
|------|--|
| J794 | Control unit 1 for information electronics |
| R20 | Front left treble loudspeaker |
| R22 | Front right treble loudspeaker |
| R103 | Front left mid-range loudspeaker |
| R104 | Front right mid-range loudspeaker |
| T2lq | 2-pin connector, black |
| T2ls | 2-pin connector, black |
| T4hh | 4-pin connector, black |
| T4hk | 4-pin connector, black |
| T8dh | 8-pin connector, brown |
| T28f | 28-pin connector, black |
| T28g | 28-pin connector, black |
| A232 | Connection 1 (positive, left loudspeaker), in dash panel wiring harness |
| A234 | Connection 1 (positive, right loudspeaker), in dash panel wiring harness |
| A239 | Connection 2 (negative, right loudspeaker), in dash panel wiring harness |
| A241 | Connection 2 (negative, left loudspeaker), in dash panel wiring harness |
| * | According to equipment |

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink

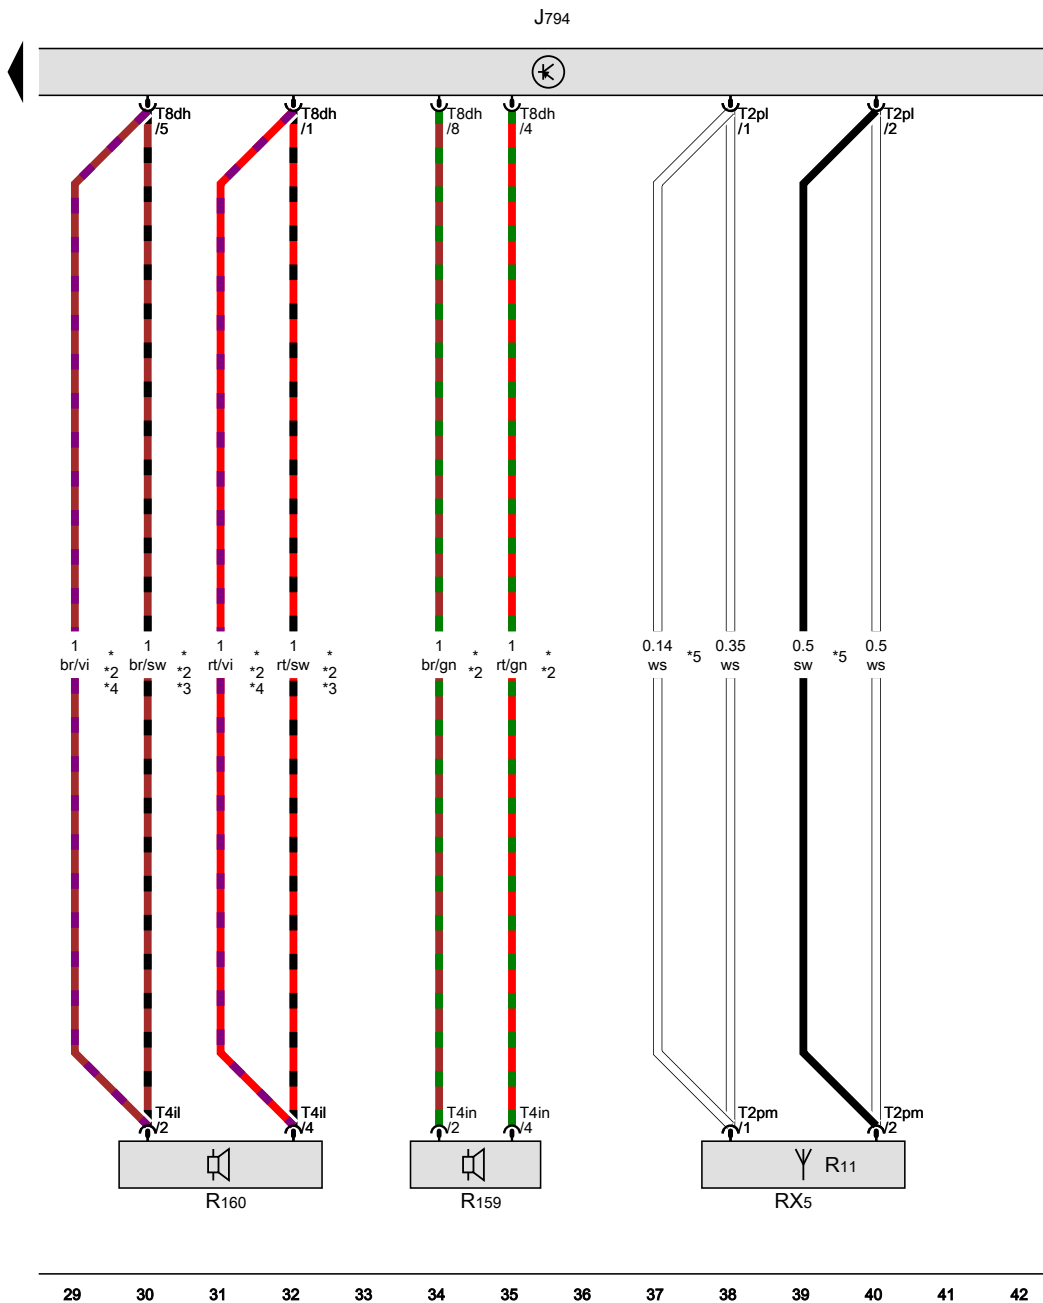

Control unit 1 for information electronics, Roof aerial, Aerial, Rear left mid-range and bass loudspeaker, Rear right mid-range and bass loudspeaker

- J794 Control unit 1 for information electronics
- RX5 Roof aerial
- R11 Aerial
- R159 Rear left mid-range and bass loudspeaker
- R160 Rear right mid-range and bass loudspeaker
- T2pl 2-pin connector, white
- T2pm 2-pin connector, white
- T4il 4-pin connector, black
- T4in 4-pin connector, black
- T8dh 8-pin connector, brown
- * For panel van and Kombi models
- *2 According to equipment
- *3 Up to May 2017
- *4 From May 2017
- *5 From November 2017

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink

Mobile telephone systems , (9ZX)

From September 2016


Control unit 1 for information electronics, Emergency call module control unit and communication unit, Internal microphone

- J794 Control unit 1 for information electronics
- J949 Emergency call module control unit and communication unit
- R74 Internal microphone
- T2lu 2-pin connector, black
- T12m 12-pin connector, blue
- T26d 26-pin connector, black

- V54 Connection 1 (telephone), in main wiring harness
- V55 Connection 2 (telephone), in main wiring harness
- V56 Connection 3 (telephone), in main wiring harness
- V57 Connection 4 (telephone), in main wiring harness
- V58 Connection 5 (telephone), in main wiring harness
- V59 Connection 6 (telephone), in main wiring harness
- V60 Connection 7 (telephone), in main wiring harness
- V61 Connection 8 (telephone), in main wiring harness


- * Pre-wired component
- *2 Up to November 2017
- *3 For models with emergency call module
- *4 From November 2017

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

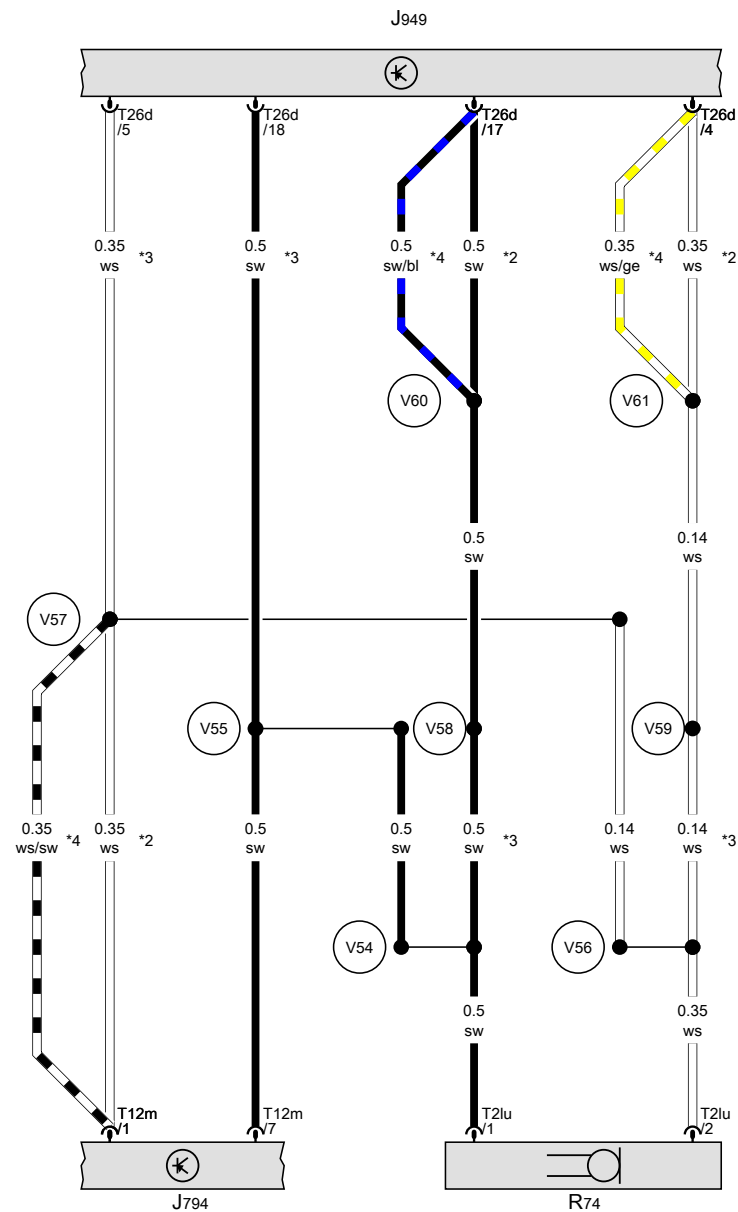

Fuse assignment

From May 2017

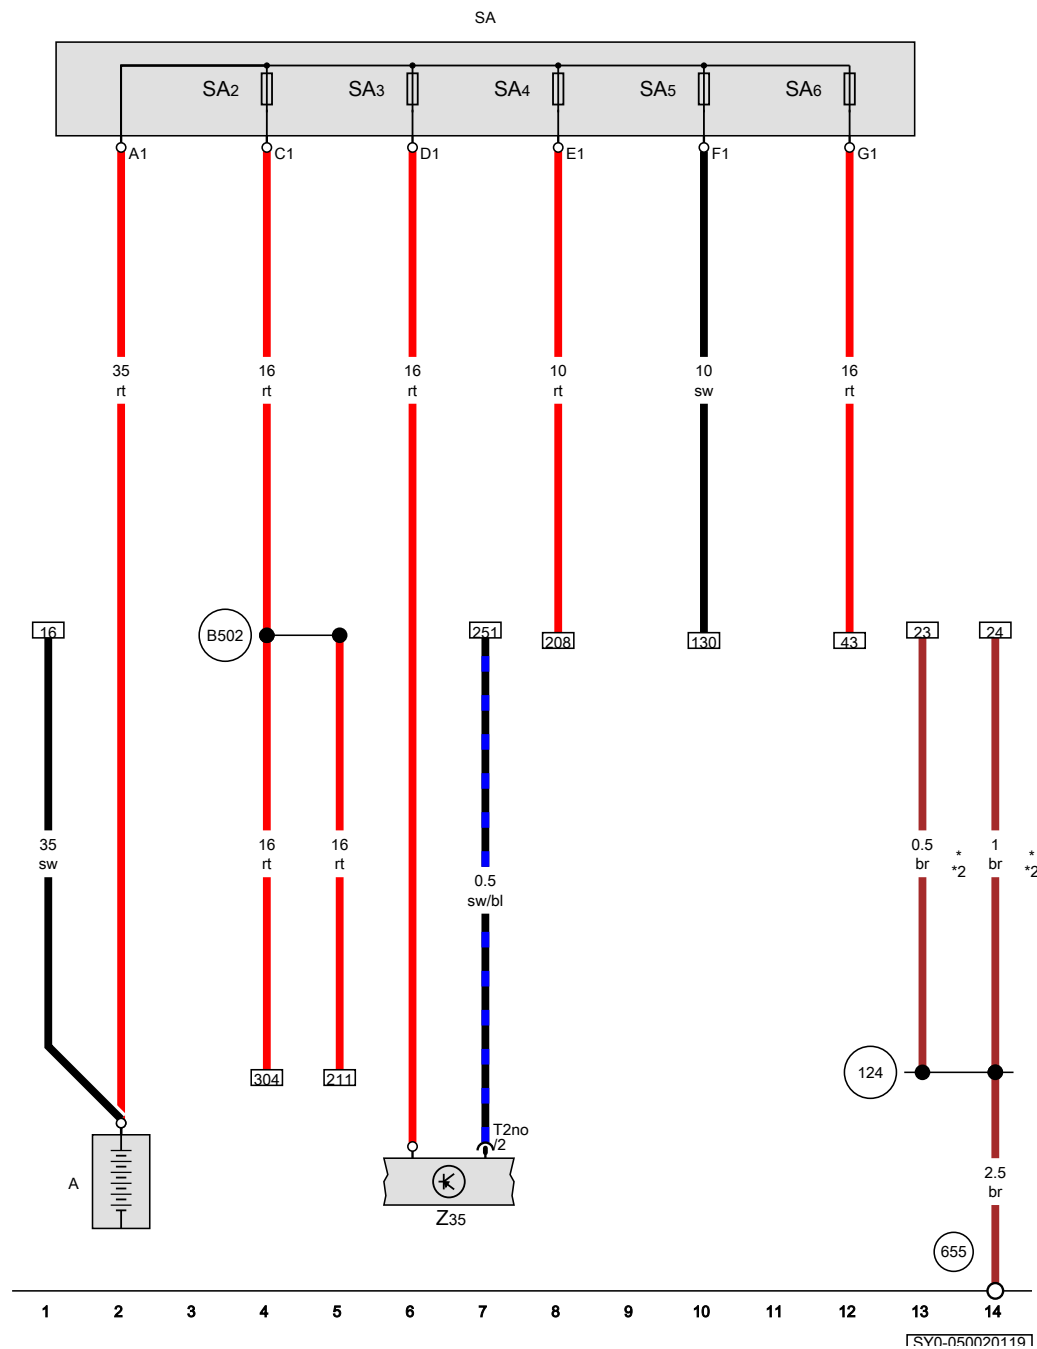


Battery, Fuse holder A

- | | |
|------|---|
| A | Battery |
| SA | Fuse holder A |
| SA2 | Fuse 2 on fuse holder A |
| SA3 | Fuse 3 on fuse holder A |
| SA4 | Fuse 4 on fuse holder A |
| SA5 | Fuse 5 on fuse holder A |
| SA6 | Fuse 6 on fuse holder A |
| T2ho | 2-pin connector, black |
| Z35 | Auxiliary air heater element |
| 124 | Earth connection, in right side engine compartment wiring harness |
| 655 | Earth point, on left headlight |
| B502 | Positive connection (83a), in interior wiring harness |
| * | For models with no special vehicle control unit |
| *2 | According to equipment |


ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink

Second battery charging circuit relay, Jump start connection

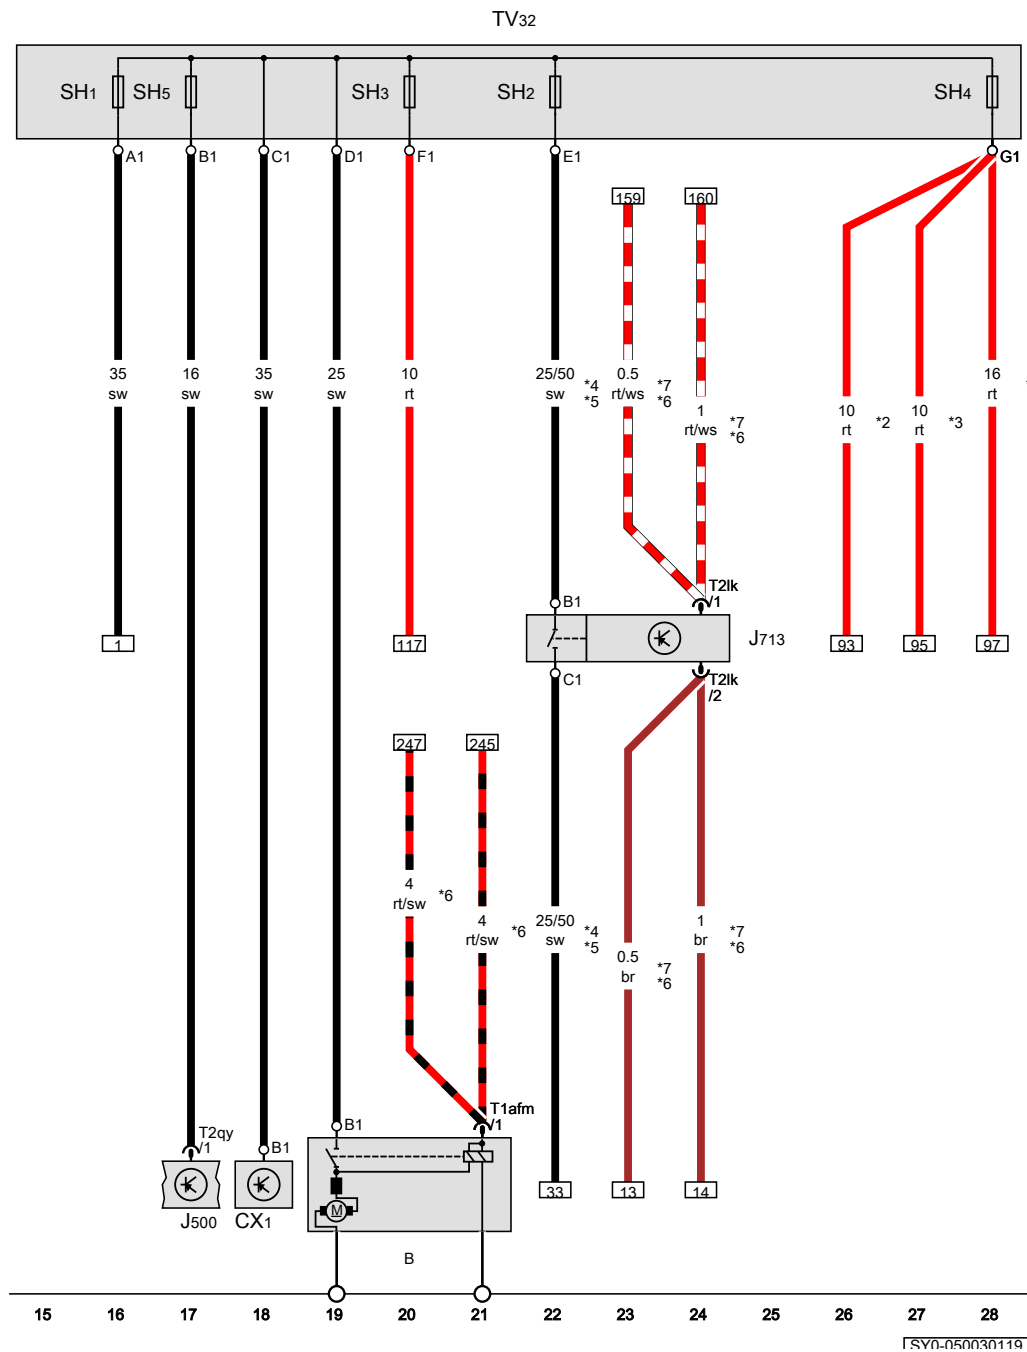


- B Starter
- CX1 Alternator with voltage regulator
- J500 Power steering control unit
- J713 Second battery charging circuit relay
- SH1 Fuse 1 in fuse holder H
- SH2 Fuse 2 in fuse holder H
- SH3 Fuse 3 in fuse holder H
- SH4 Fuse 4 in fuse holder H
- SH5 Fuse 5 in fuse holder H
- T1afm 1-pin connector, black
- T2lk 2-pin connector, black
- T2qy 2-pin connector, black
- TV32 Jump start connection
- * For models with towing bracket
- *2 see applicable current flow diagram for radiator fan
- *3 For models with no towing bracket
- *4 For models with second battery
- *5 Cross section depends on equipment
- *6 According to equipment
- *7 For models with no special vehicle control unit

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

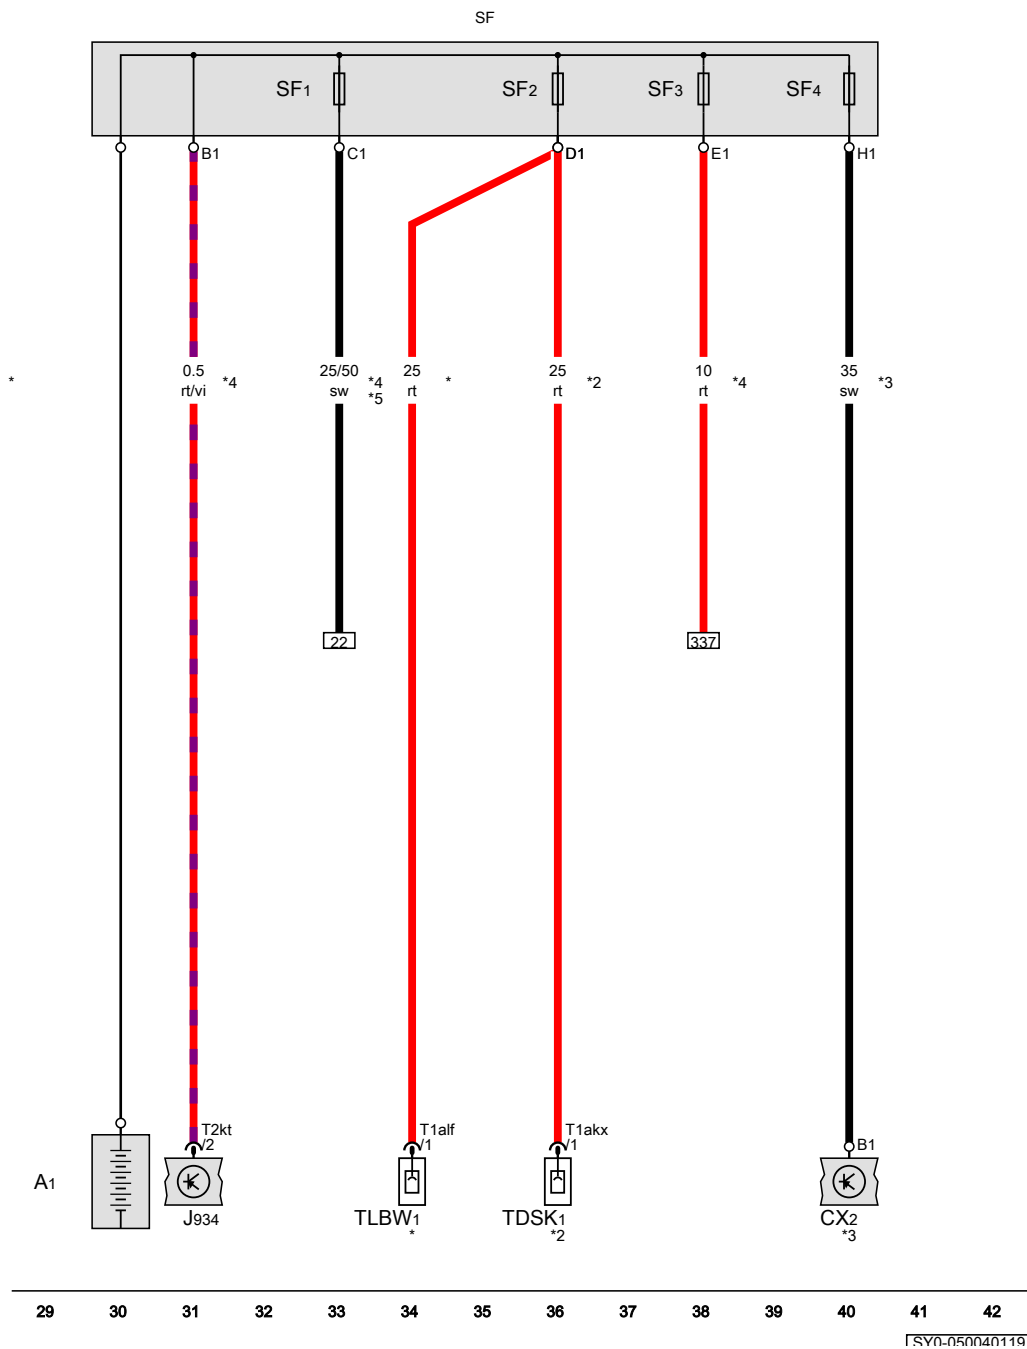

Second battery, Fuse holder F

- A1 Second battery
- CX2 Alternator 2 with voltage regulator
- J934 Battery monitor control unit 2
- SF Fuse holder F
- SF1 Fuse 1 in fuse holder F
- SF2 Fuse 2 in fuse holder F
- SF3 Fuse 3 in fuse holder F
- SF4 Fuse 4 in fuse holder F
- T1akx 1-pin connector
- T1alf 1-pin connector
- T2kt 2-pin connector, black
- TLBW1 Coupling point 1 for tail lift
- TDSK1 Coupling point 1 for 3-way tipper
- * For models with tail lift
- *2 For models with 3-way tip function
- *3 For models with second battery and alternator 2 with voltage regulator
- *4 For models with second battery
- *5 Cross section depends on equipment

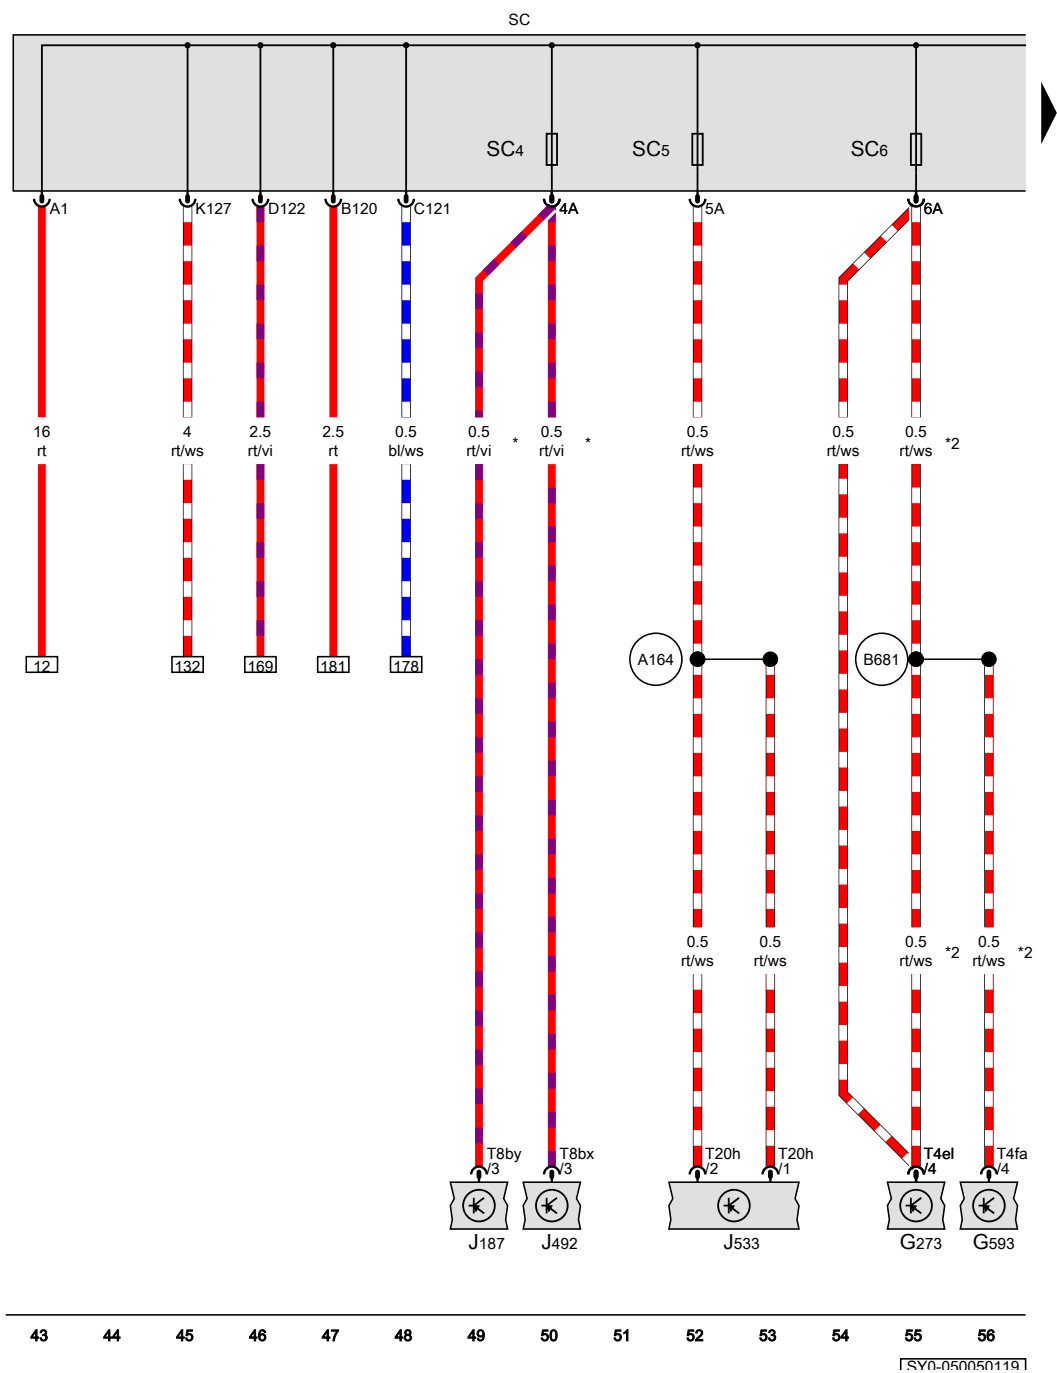

Fuse holder C

- | | |
|------|--------------------------------|
| G273 | Interior monitoring sensor |
| G593 | Interior monitoring sensor 3 |
| J187 | Differential lock control unit |
| J492 | All-wheel drive control unit |
| J533 | Data bus diagnostic interface |
| SC | Fuse holder C |
| SC4 | Fuse 4 on fuse holder C |
| SC5 | Fuse 5 on fuse holder C |
| SC6 | Fuse 6 on fuse holder C |
| T4el | 4-pin connector, black |
| T4fa | 4-pin connector, black |
| T8bx | 8-pin connector, black |
| T8by | 8-pin connector, black |
| T20h | 20-pin connector, red |


- A164 Positive connection 2 (30a) in dash panel wiring harness

- (B681) Positive connection 7 (30), in interior wiring harness

* According to equipment

*2 For models with anti-theft alarm system and front and rear interior monitor

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink

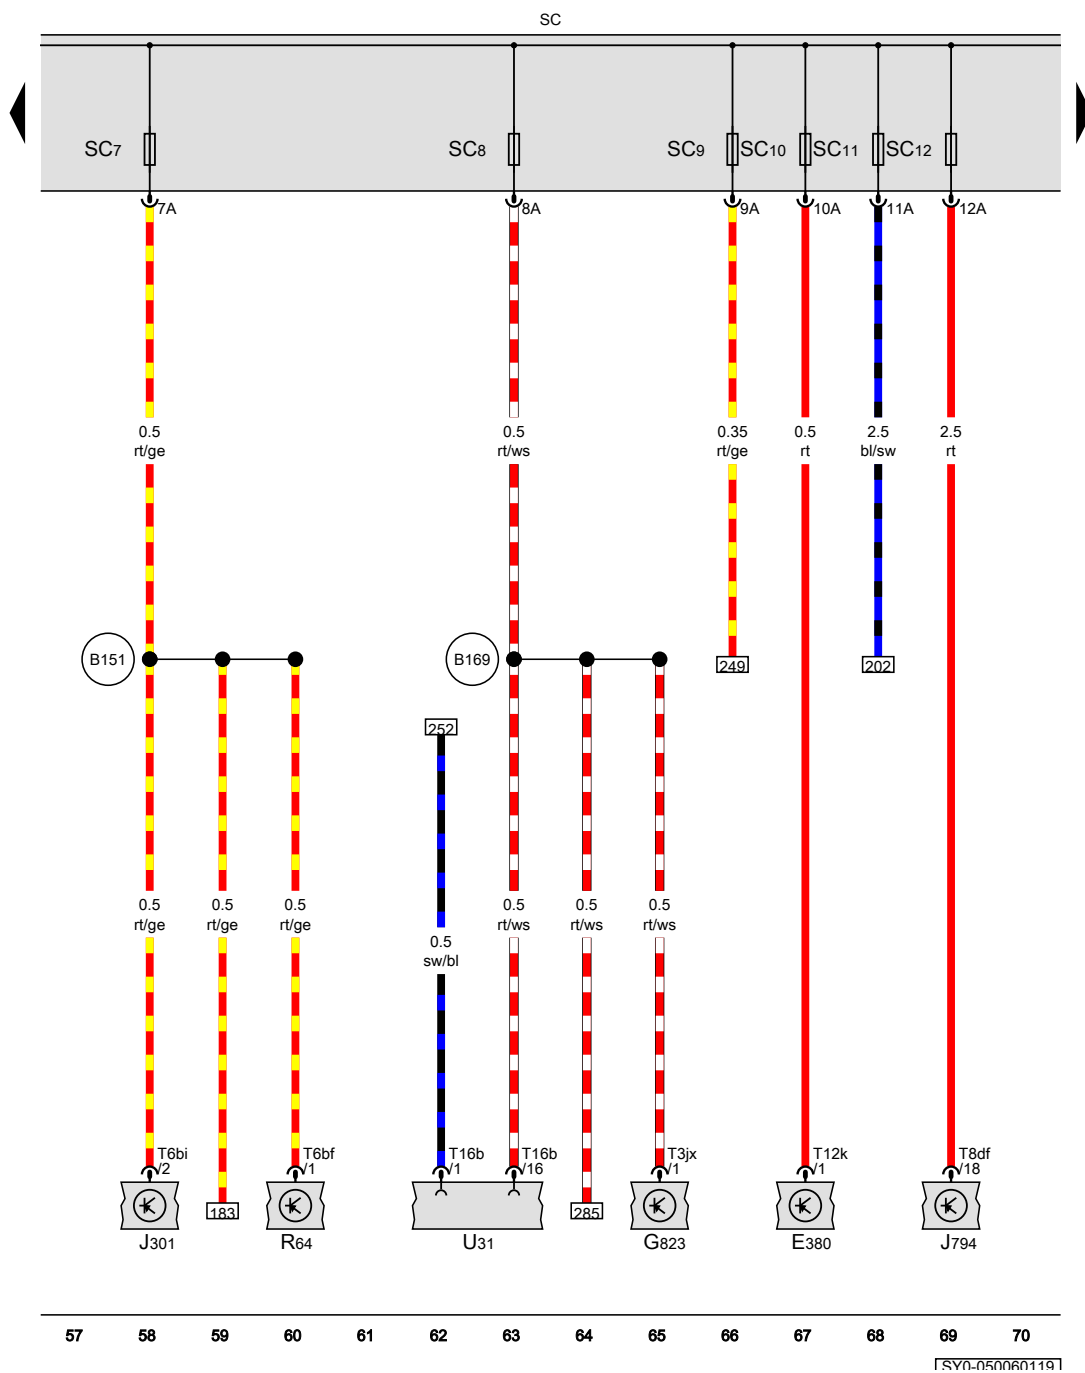


Fuse holder C

- E380 Multimedia system operating unit
- G823 Air humidity, rain and light sensor
- J301 Air conditioning system control unit
- J794 Control unit 1 for information electronics
- R64 Remote control receiver for auxiliary heater
- SC Fuse holder C
- SC7 Fuse 7 on fuse holder C
- SC8 Fuse 8 on fuse holder C
- SC9 Fuse 9 on fuse holder C
- SC10 Fuse 10 on fuse holder C
- SC11 Fuse 11 on fuse holder C
- SC12 Fuse 12 on fuse holder C
- T3jx 3-pin connector, black
- T6bf 6-pin connector, blue
- T6bi 6-pin connector, black
- T8df 8-pin connector, black
- T12k 12-pin connector, black
- T16b 16-pin connector
- U31 Diagnostic connection

B151 Positive connection 3 (30a), in interior wiring harness

B169 Positive connection 1 (30), in interior wiring harness

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

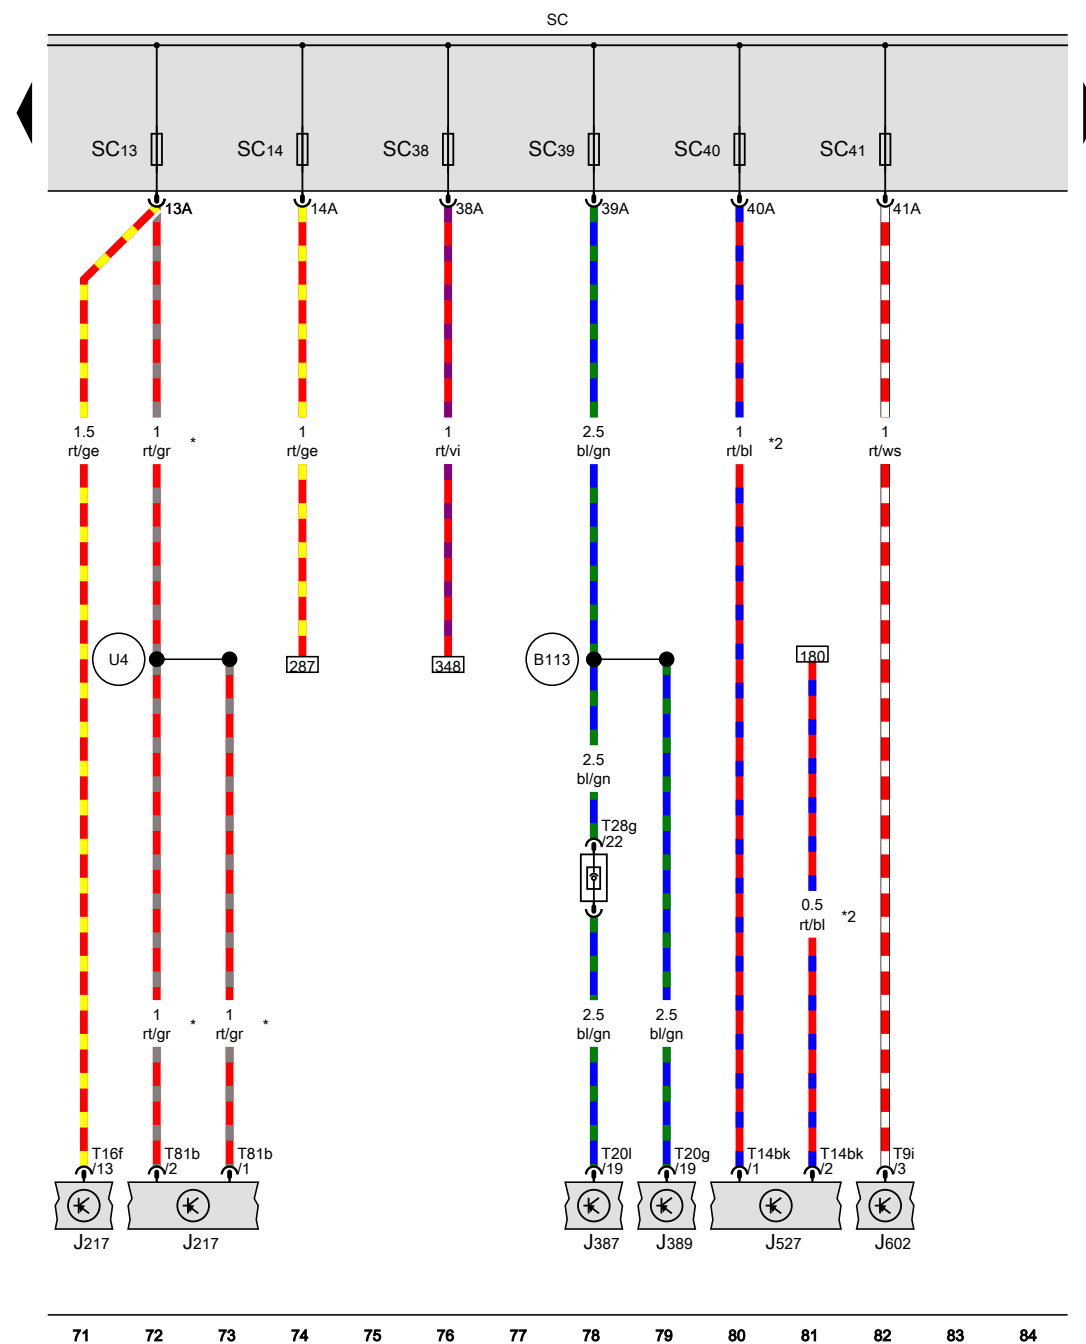

Fuse holder C

- J217 Automatic gearbox control unit
- J387 Front passenger door control unit
- J389 Rear right door control unit
- J527 Steering column electronics control unit
- J602 Interior light relay
- SC Fuse holder C
- SC13 Fuse 13 on fuse holder C
- SC14 Fuse 14 on fuse holder C
- SC38 Fuse 38 on fuse holder C
- SC39 Fuse 39 on fuse holder C
- SC40 Fuse 40 on fuse holder C
- SC41 Fuse 41 on fuse holder C
- T9i 9-pin connector, grey
- T14bk 14-pin connector, black
- T16f 16-pin connector, black
- T20g 20-pin connector, black
- T20l 20-pin connector, black
- T28g 28-pin connector, black
- T81b 81-pin connector, black


B113 Positive connection (30a), in left interior wiring harness

U4 Connection (30), in automatic gearbox wiring harness

* For models with front-wheel drive

*2 For models with multifunction steering wheel

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

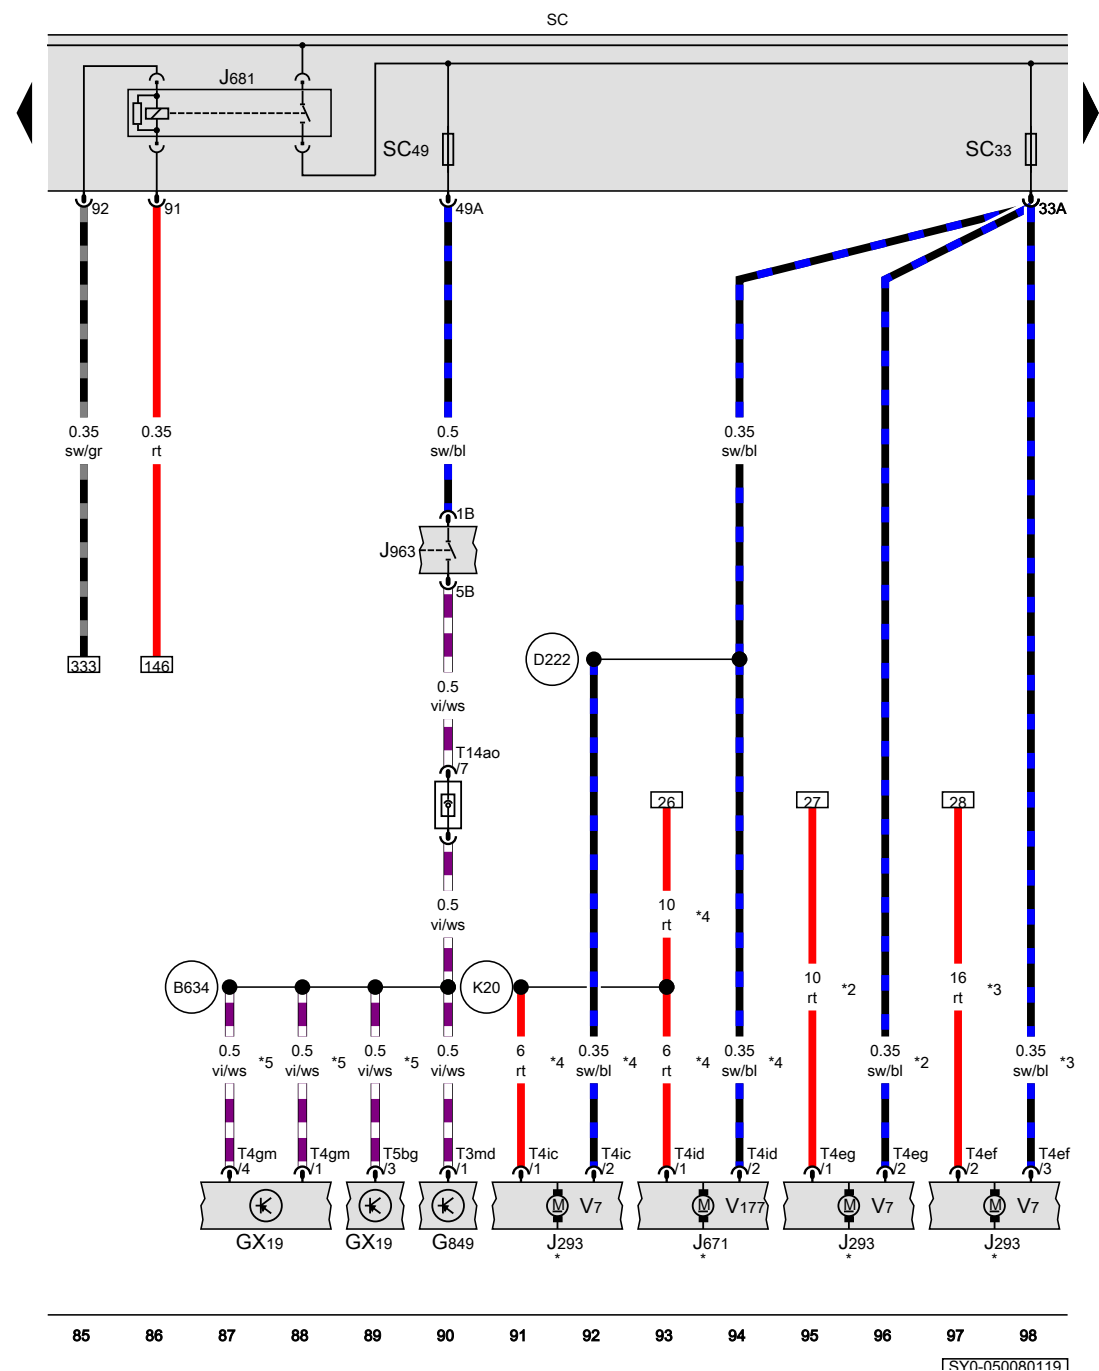


Terminal 15 voltage supply relay 2, Fuse holder C

- GX19 Delivery unit for reducing agent metering system
- G849 Reducing agent quality sensor
- J293 Radiator fan control unit
- J671 Radiator fan control unit 2
- J681 Terminal 15 voltage supply relay 2
- J963 Relay for reducing agent metering system
- SC Fuse holder C
- SC33 Fuse 33 on fuse holder C
- SC49 Fuse 49 on fuse holder C
- T3md 3-pin connector, black
- T4ef 4-pin connector, black
- T4eg 4-pin connector, black
- T4gm 4-pin connector, black
- T4ic 4-pin connector, black
- T4id 4-pin connector, black
- T5bg 5-pin connector, black
- T14ao 14-pin connector, black
- V7 Radiator fan
- V177 Radiator fan 2

- B634 Positive connection 2 (87), in main wiring harness
- D222 Connection 10 (87a), in engine compartment wiring harness
- K20 Positive connection 1 (30), in radiator fan wiring harness

- * Pre-wired component
- *2 For models with no towing bracket
- *3 For models with towing bracket
- *4 see applicable current flow diagram for radiator fan
- *5 see applicable current flow diagram for engine

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink

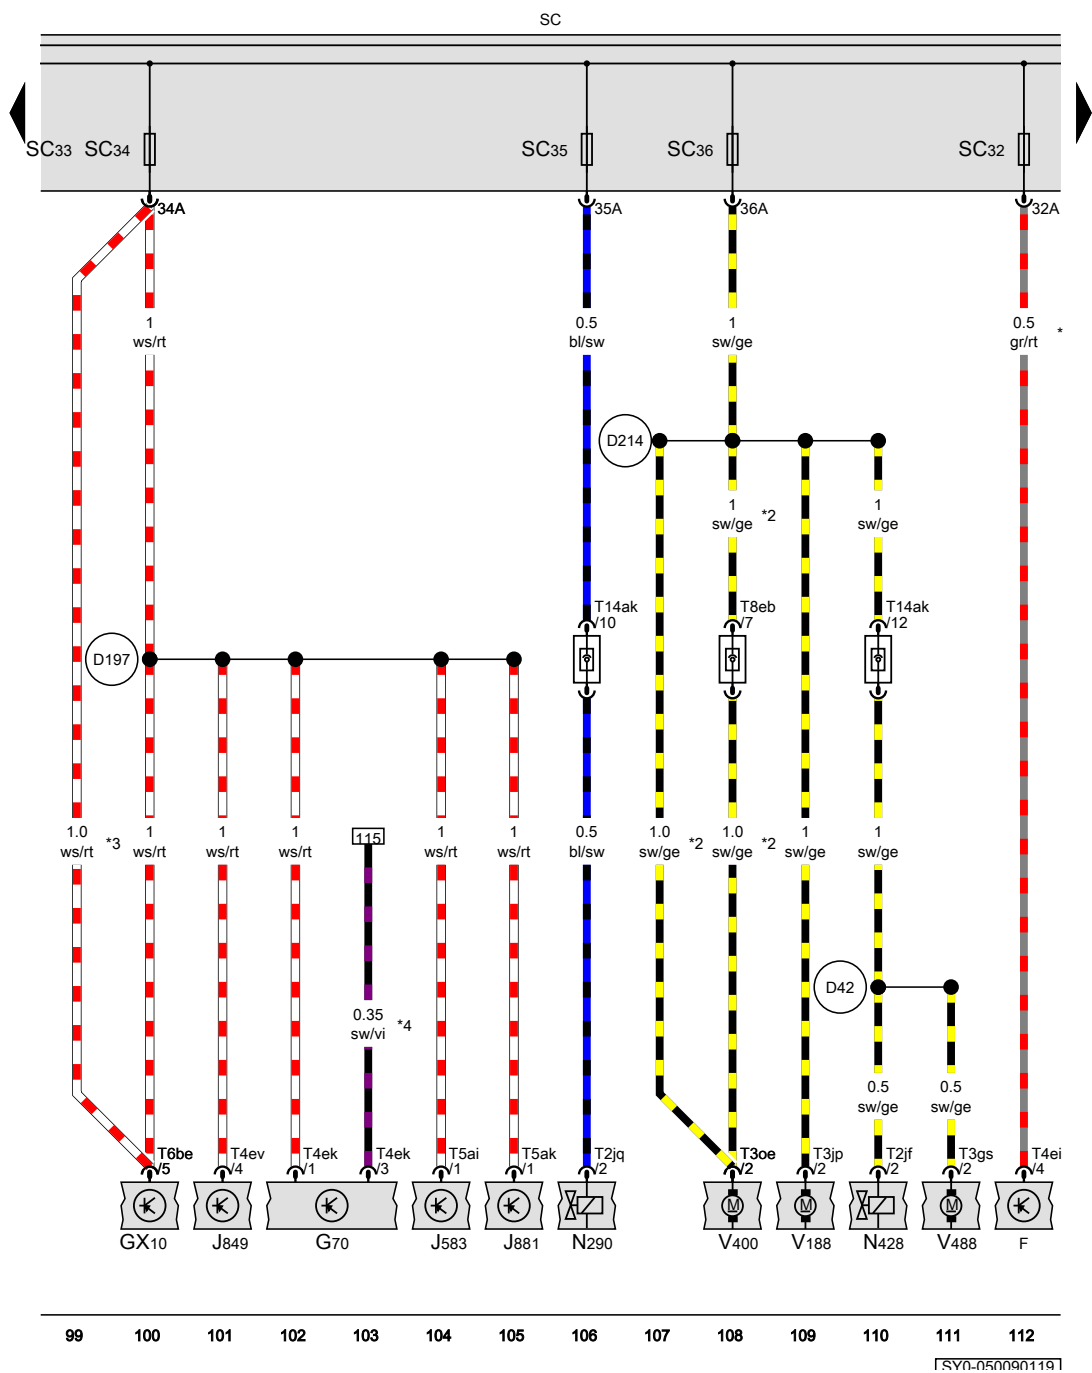


Fuse holder C

- F Brake light switch
- GX10 Lambda probe 1 before catalytic converter
- G70 Air mass meter
- J583 Control unit for NOx sender
- J849 Control unit for sensor electronics
- J881 Control unit for NOx sender 2
- N290 Fuel metering valve
- N428 Valve for oil pressure control
- SC Fuse holder C
- SC32 Fuse 32 on fuse holder C
- SC33 Fuse 33 on fuse holder C
- SC34 Fuse 34 on fuse holder C
- SC35 Fuse 35 on fuse holder C
- SC36 Fuse 36 on fuse holder C
- T2jf 2-pin connector, black
- T2jq 2-pin connector, black
- T3gs 3-pin connector, black
- T3jp 3-pin connector, black
- T3oe 3-pin connector, black
- T4ei 4-pin connector, black
- T4ek 4-pin connector, black
- T4ev 4-pin connector, black
- T5ai 5-pin connector, black
- T5ak 5-pin connector, black
- T6be 6-pin connector, black
- T8eb 8-pin connector, black
- T14ak 14-pin connector, grey
- V188 Charge air cooling pump
- V400 Pump for exhaust gas recirculation cooler
- V488 Auxiliary pump for heating

- D42 Connection 4, in engine prewiring harness
- D197 Connection 5 (87a), in engine compartment wiring harness
- D214 Connection 8 (87a), in engine compartment wiring harness

- * For models with manual gearbox
- *2 According to equipment
- *3 For models with Euro 5 plus emission standard
- *4 see applicable current flow diagram for engine

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

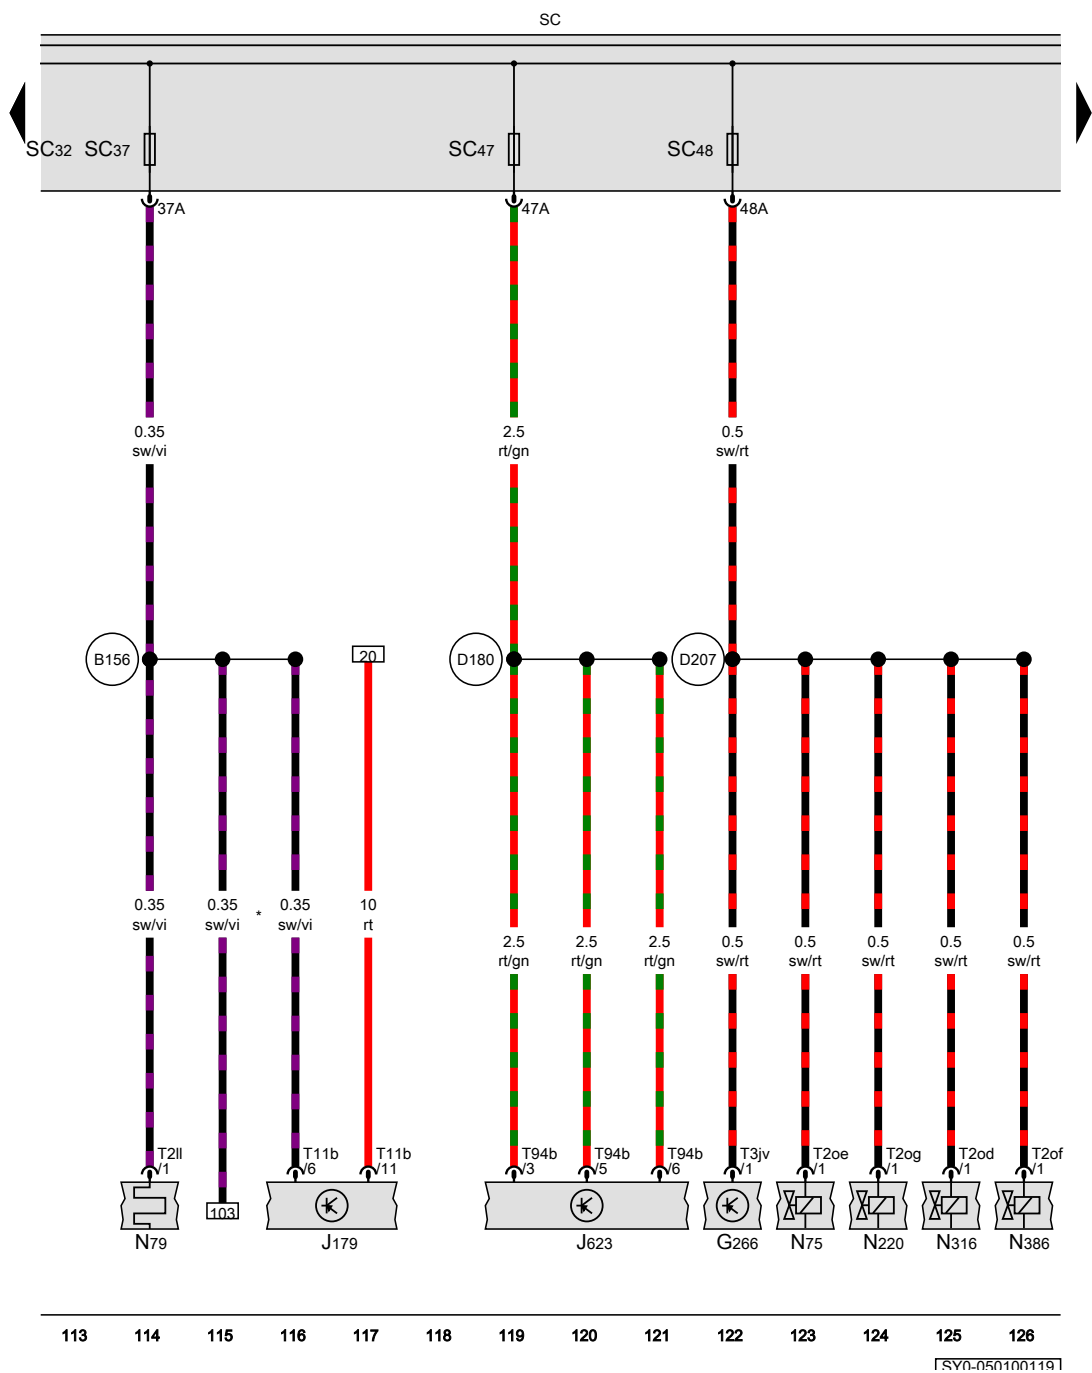


Fuse holder C

- G266 Oil level and oil temperature sender
- J179 Automatic glow period control unit
- J623 Engine/motor control unit
- N75 Charge pressure control solenoid valve
- N79 Heater element for crankcase breather
- N220 Exhaust flap valve
- N316 Intake manifold flap valve
- N386 Exhaust gas recirculation cooling bypass valve
- SC Fuse holder C
- SC32 Fuse 32 on fuse holder C
- SC37 Fuse 37 on fuse holder C
- SC47 Fuse 47 on fuse holder C
- SC48 Fuse 48 on fuse holder C
- T2II 2-pin connector, black
- T2od 2-pin connector, black
- T2oe 2-pin connector, black
- T2of 2-pin connector, black
- T2og 2-pin connector, black
- T3jv 3-pin connector, black
- T11b 11-pin connector, black
- T94b 94-pin connector, black

- B156 Positive connection (30a), in interior wiring harness
- D180 Connection (87a), in engine compartment wiring harness
- D207 Connection 7 (87a), in engine compartment wiring harness
- * see applicable current flow diagram for engine

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

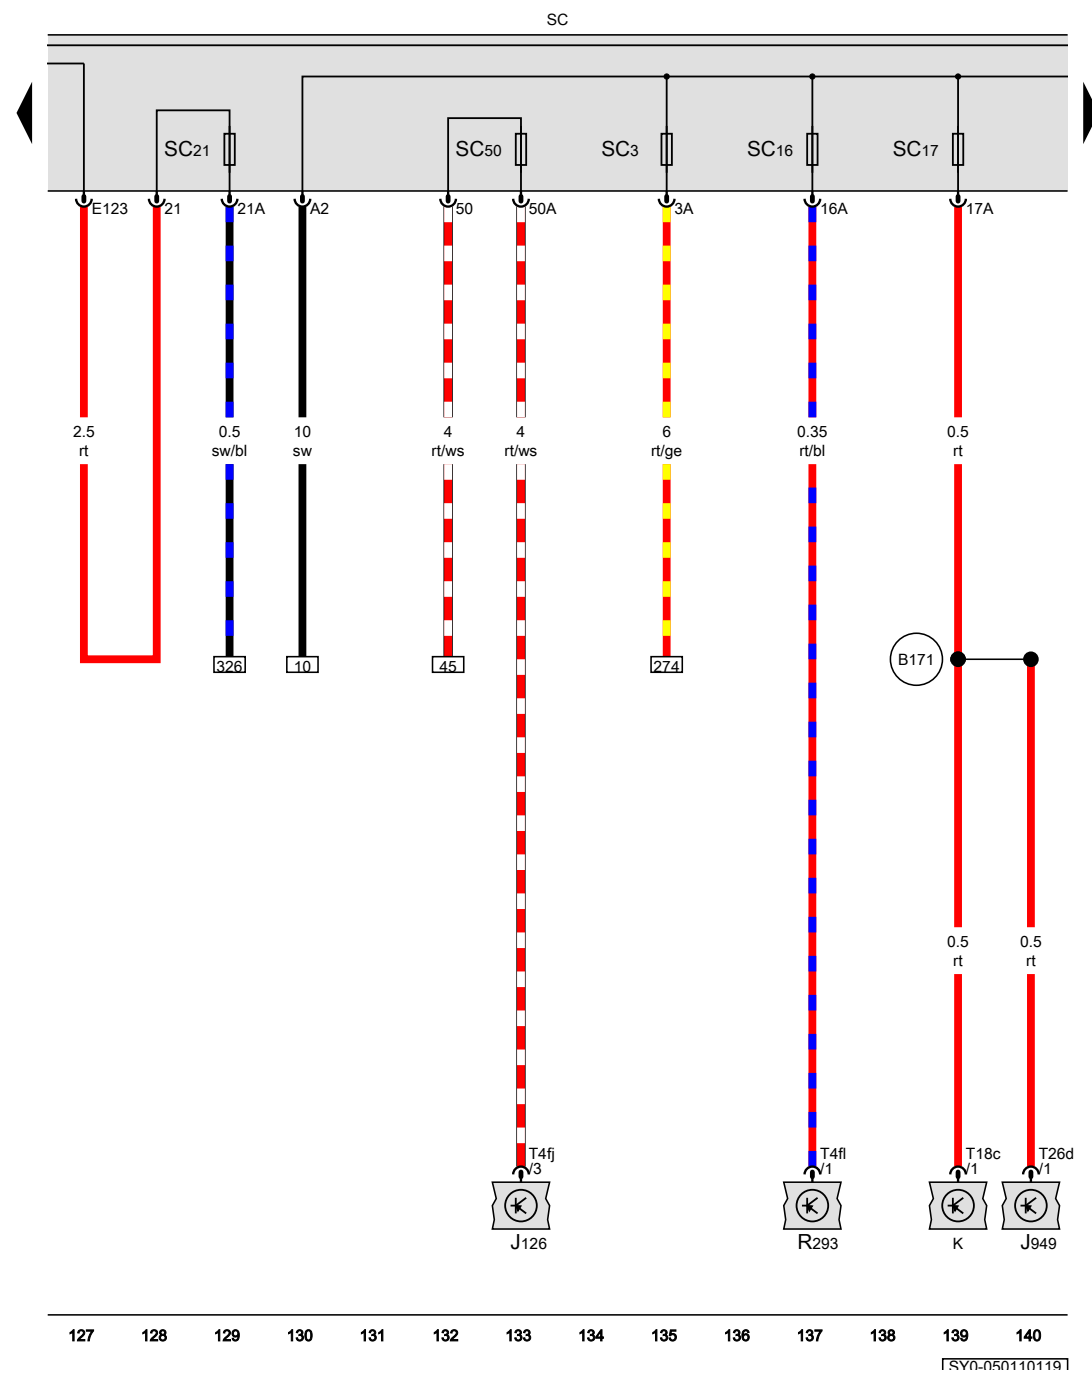


Fuse holder C

- J126 Fresh air blower control unit
- J949 Emergency call module control unit and communication unit
- K Dash panel insert
- R293 USB hub
- SC Fuse holder C
- SC3 Fuse 3 on fuse holder C
- SC16 Fuse 16 on fuse holder C
- SC17 Fuse 17 on fuse holder C
- SC21 Fuse 21 on fuse holder C
- SC50 Fuse 50 on fuse holder C
- T4fj 4-pin connector, black
- T4fl 4-pin connector, red
- T18c 18-pin connector, black
- T26d 26-pin connector, black

B171 Positive connection 3 (30), in interior wiring harness

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

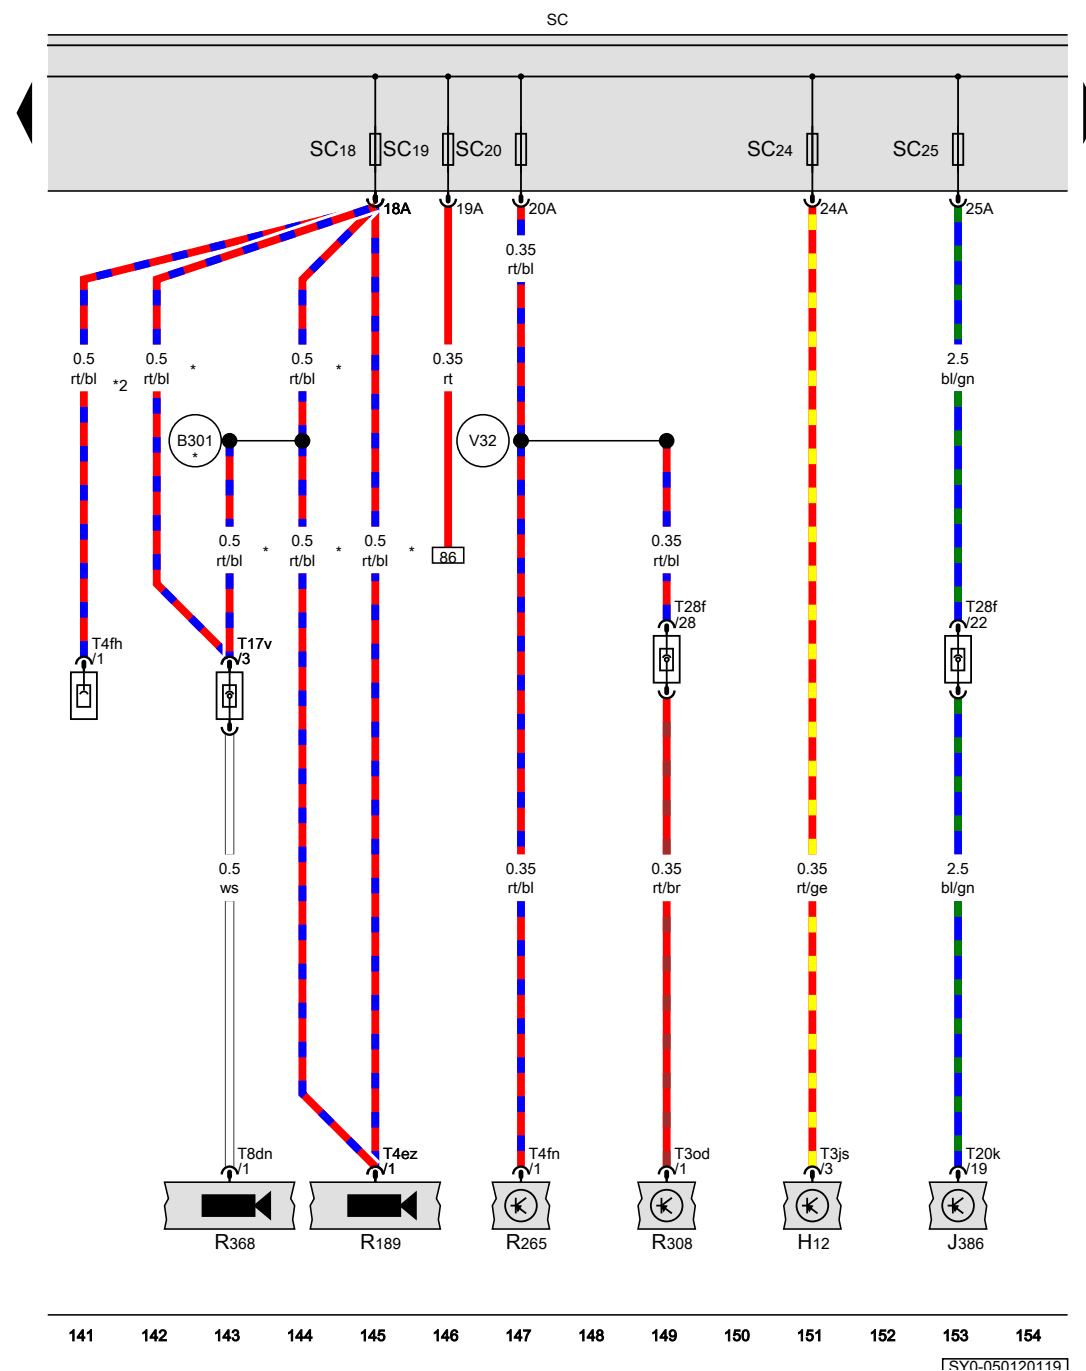

Fuse holder C

- H12 Alarm horn
- J386 Driver door control unit
- R189 Reversing camera
- R265 Storage compartment with interface for mobile telephone
- R308 Transmission and reception stabilisation control unit
- R368 Camera for trailer manoeuvring system, in rear left wing door
- SC Fuse holder C
- SC18 Fuse 18 on fuse holder C
- SC19 Fuse 19 on fuse holder C
- SC20 Fuse 20 on fuse holder C
- SC24 Fuse 24 on fuse holder C
- SC25 Fuse 25 on fuse holder C
- T3js 3-pin connector, black
- T3od 3-pin connector
- T4ez 4-pin connector, black
- T4fh 4-pin connector, black
- T4fn 4-pin connector, brown
- T8dn 8-pin connector, black
- T17v 17-pin connector, black
- T20k 20-pin connector, black
- T28f 28-pin connector, black


(B301) Positive connection 5 (30), in main wiring harness

(V32) Positive connection (30), in telephone wiring harness

* According to equipment

*2 For models with double cab/dropside


ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

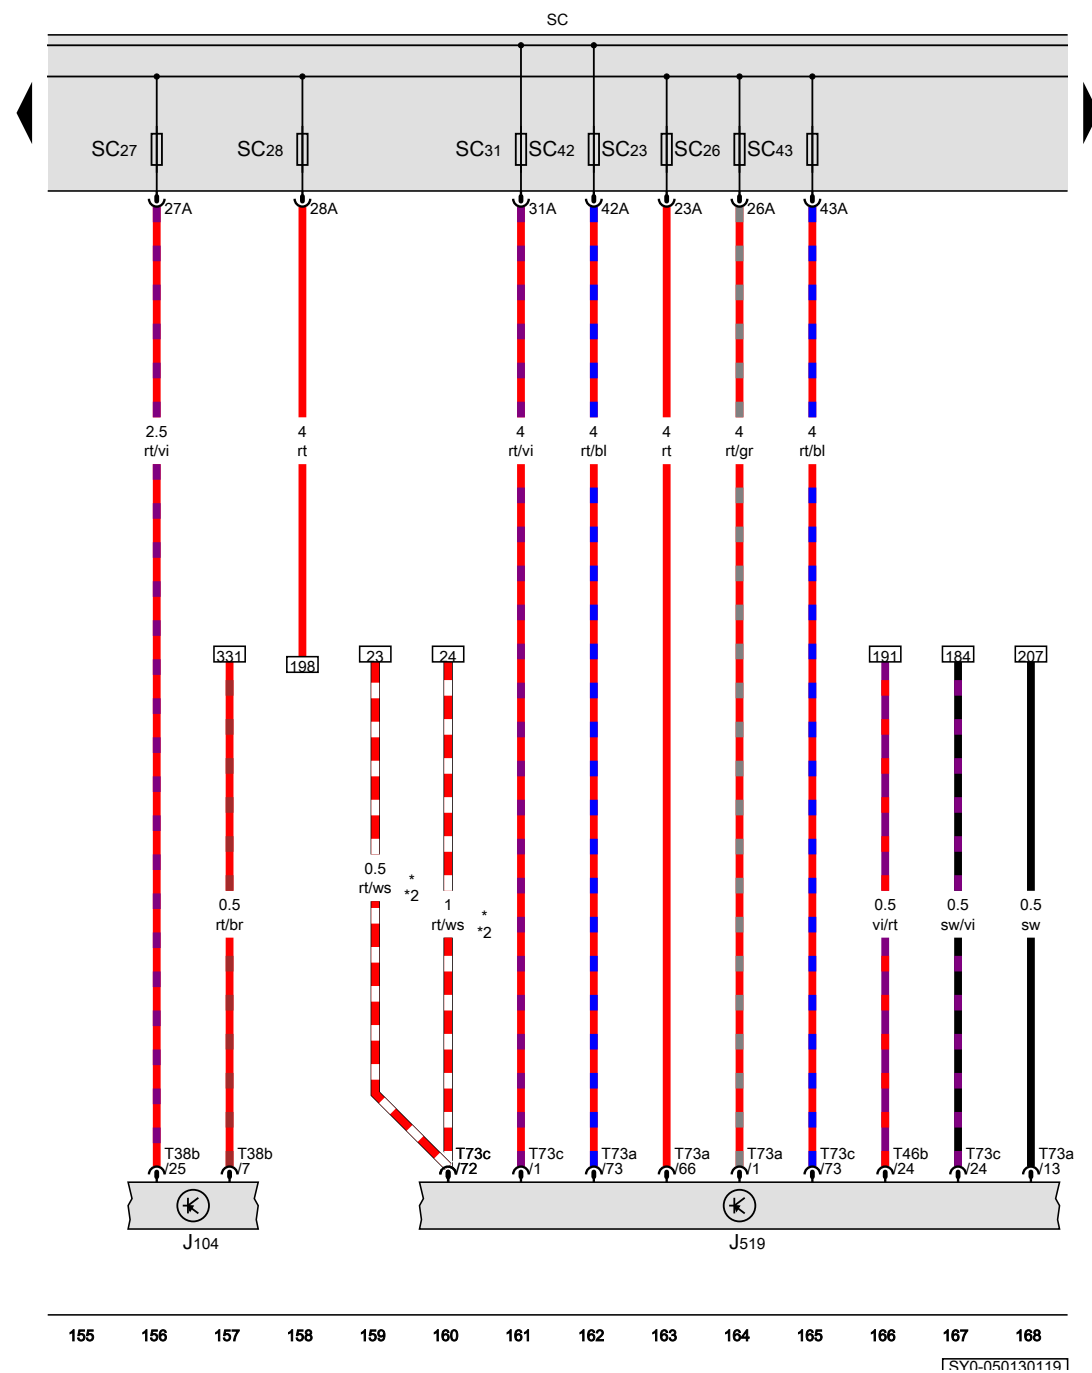

Fuse holder C

- J104 ABS control unit
- J519 Onboard supply control unit
- SC Fuse holder C
- SC23 Fuse 23 on fuse holder C
- SC26 Fuse 26 on fuse holder C
- SC27 Fuse 27 on fuse holder C
- SC28 Fuse 28 on fuse holder C
- SC31 Fuse 31 on fuse holder C
- SC42 Fuse 42 on fuse holder C
- SC43 Fuse 43 on fuse holder C
- T38b 38-pin connector, brown
- T46b 46-pin connector, black
- T73a 73-pin connector, black
- T73c 73-pin connector, black
- * For models with no special vehicle control unit
- *2 According to equipment

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

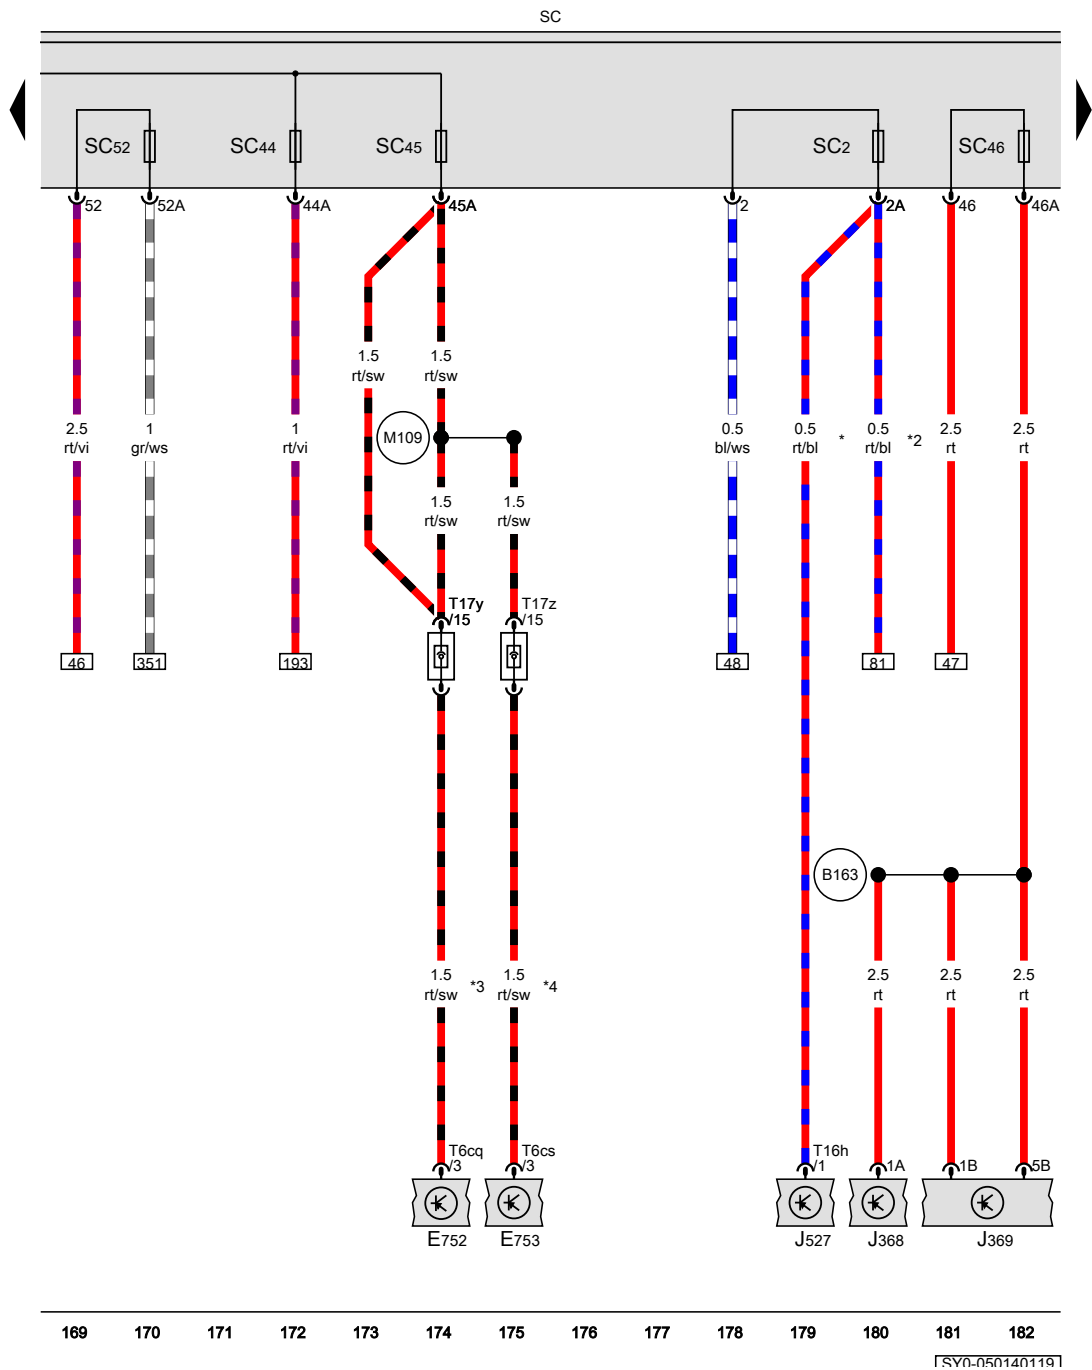

Fuse holder C

- | | |
|------|--|
| E752 | Front left lumbar support adjustment switch |
| E753 | Front right lumbar support adjustment switch |
| J368 | Wiper motor relay 1 |
| J369 | Wiper motor relay 2 |
| J527 | Steering column electronics control unit |
| SC | Fuse holder C |
| SC2 | Fuse 2 on fuse holder C |
| SC44 | Fuse 44 on fuse holder C |
| SC45 | Fuse 45 on fuse holder C |
| SC46 | Fuse 46 on fuse holder C |
| SC52 | Fuse 52 on fuse holder C |
| T6cq | 6-pin connector, black |
| T6cs | 6-pin connector, black |
| T16h | 16-pin connector, black |
| T17y | 17-pin connector, red |
| T17z | 17-pin connector, red |

(B163) Positive connection 1 (15), in interior wiring harness

(M109) Connection 1 (30), in front left seat wiring harness


* For models with no multifunction steering wheel

*2 For models with multifunction steering wheel

*3 For left-hand drive models

*4 For right-hand drive models

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink

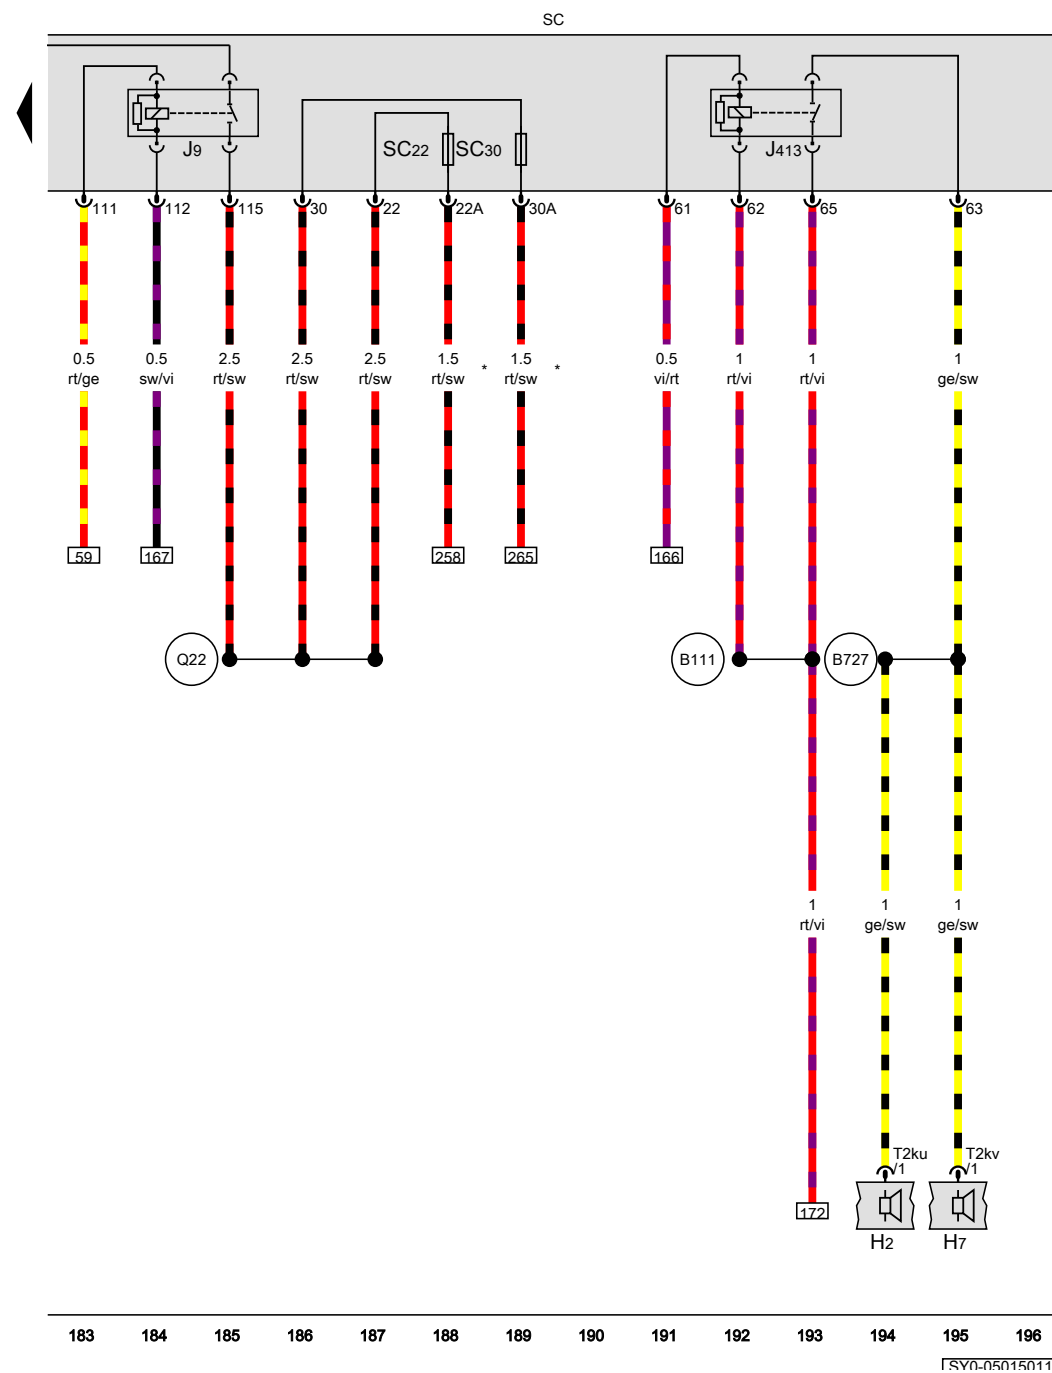

Heated rear window relay, Horn relay, Fuse holder C

- H2 Treble horn
- H7 Bass horn
- J9 Heated rear window relay
- J413 Horn relay
- SC Fuse holder C
- SC22 Fuse 22 on fuse holder C
- SC30 Fuse 30 on fuse holder C
- T2ku 2-pin connector, black
- T2kv 2-pin connector, black

B111 Positive connection 1 (30a), in interior wiring harness


B727 Connection (71a), in main wiring harness

Q22 Connection 1, in rear lid wiring harness

* For panel van and Kombi models

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink

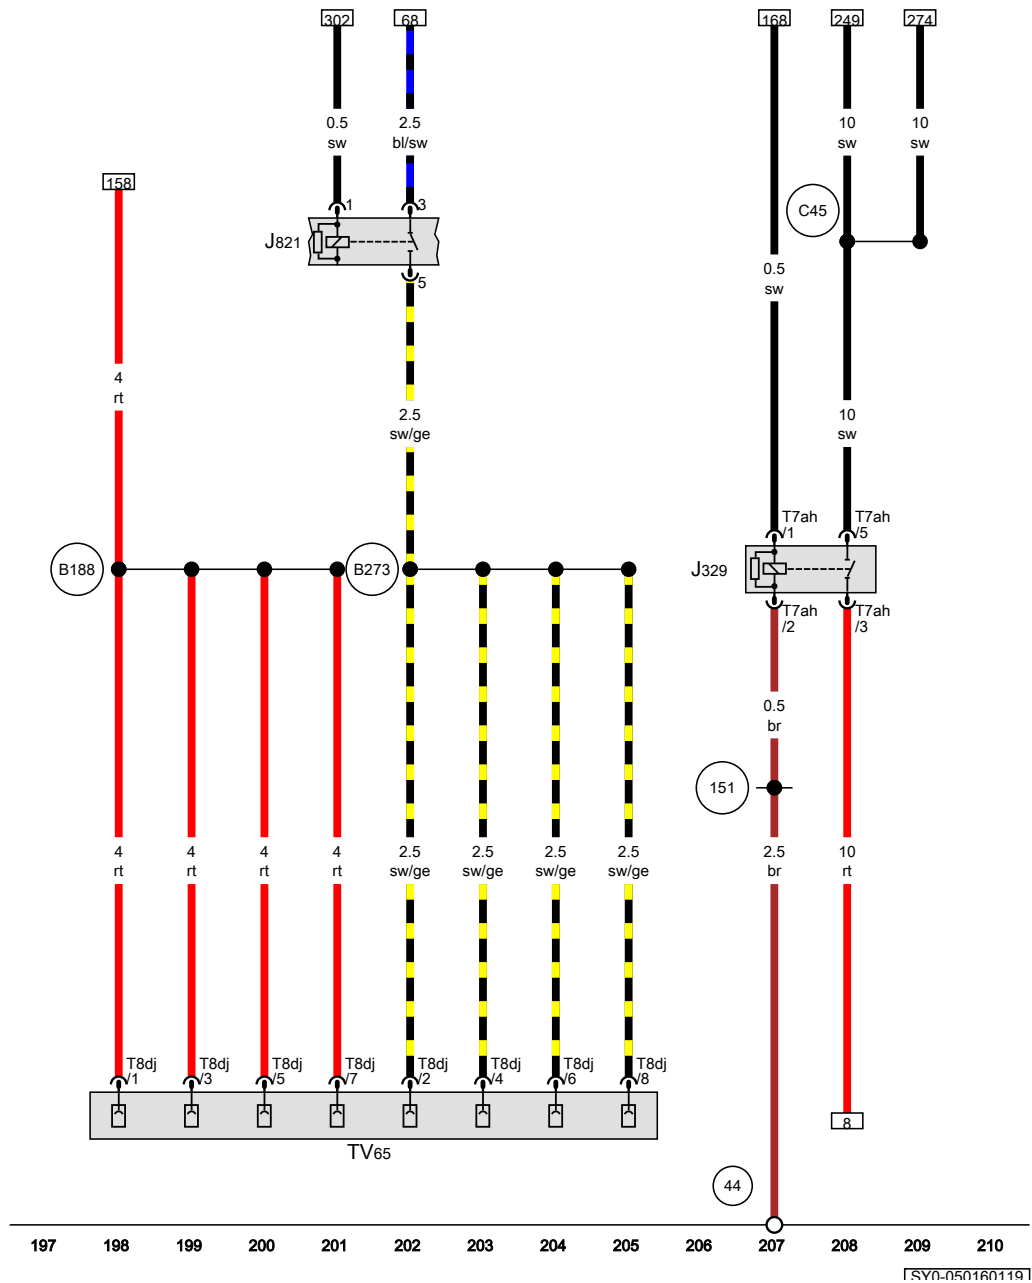


Fuse holder B


- EX21 Heater and air conditioning controls
- J1144 Control unit for supplementary blower for air conditioning
- J1145 Control unit for supplementary blower 2 for air conditioning
- SB Fuse holder B
- SB1 Fuse 1 on fuse holder B
- SB2 Fuse 2 on fuse holder B
- SB3 Fuse 3 on fuse holder B
- SB4 Fuse 4 on fuse holder B
- SB5 Fuse 5 on fuse holder B
- SB6 Fuse 6 on fuse holder B
- SB7 Fuse 7 on fuse holder B
- SB8 Fuse 8 on fuse holder B
- T3lz 3-pin connector, brown
- T3nx 3-pin connector, colourless
- T3ob 3-pin connector, colourless
- T3oc 3-pin connector, colourless
- T4er 4-pin connector, black
- T4es 4-pin connector, black
- T20j 20-pin connector, black
- U13 DC/AC converter with socket, 12 V - 230 V
- U20 12 V socket 4
- U26 12 V socket 5
- U33 12 V socket 6

X179 Connection 3 (socket) in additional equipment wiring harness

- * For models with no second battery
- *2 For models with second battery
- *3 According to equipment
- *4 For models with tail lift

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

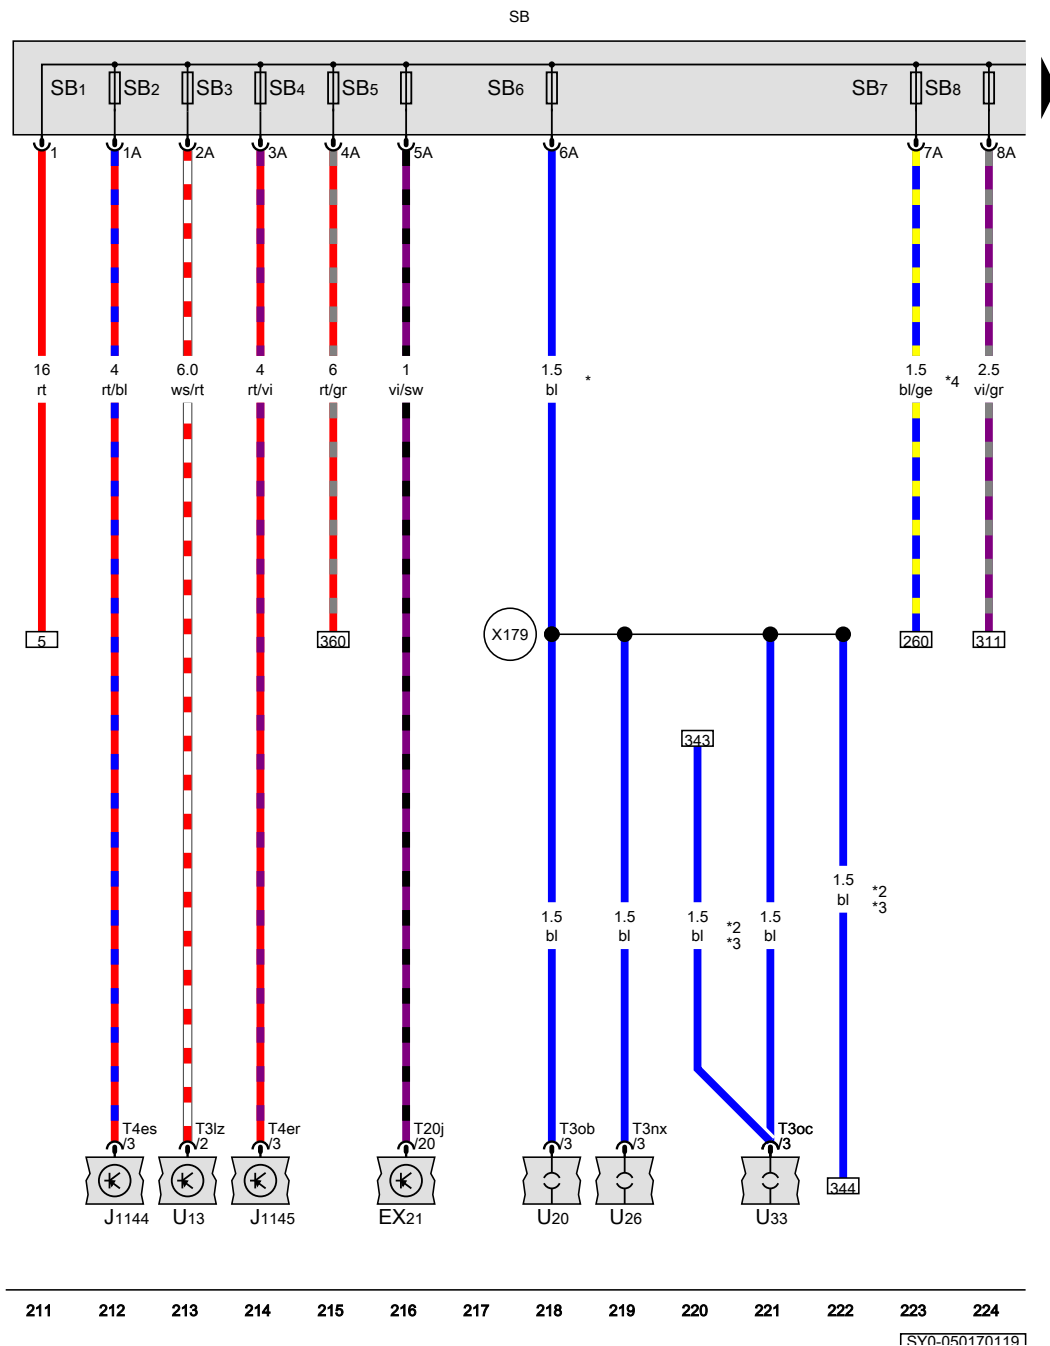

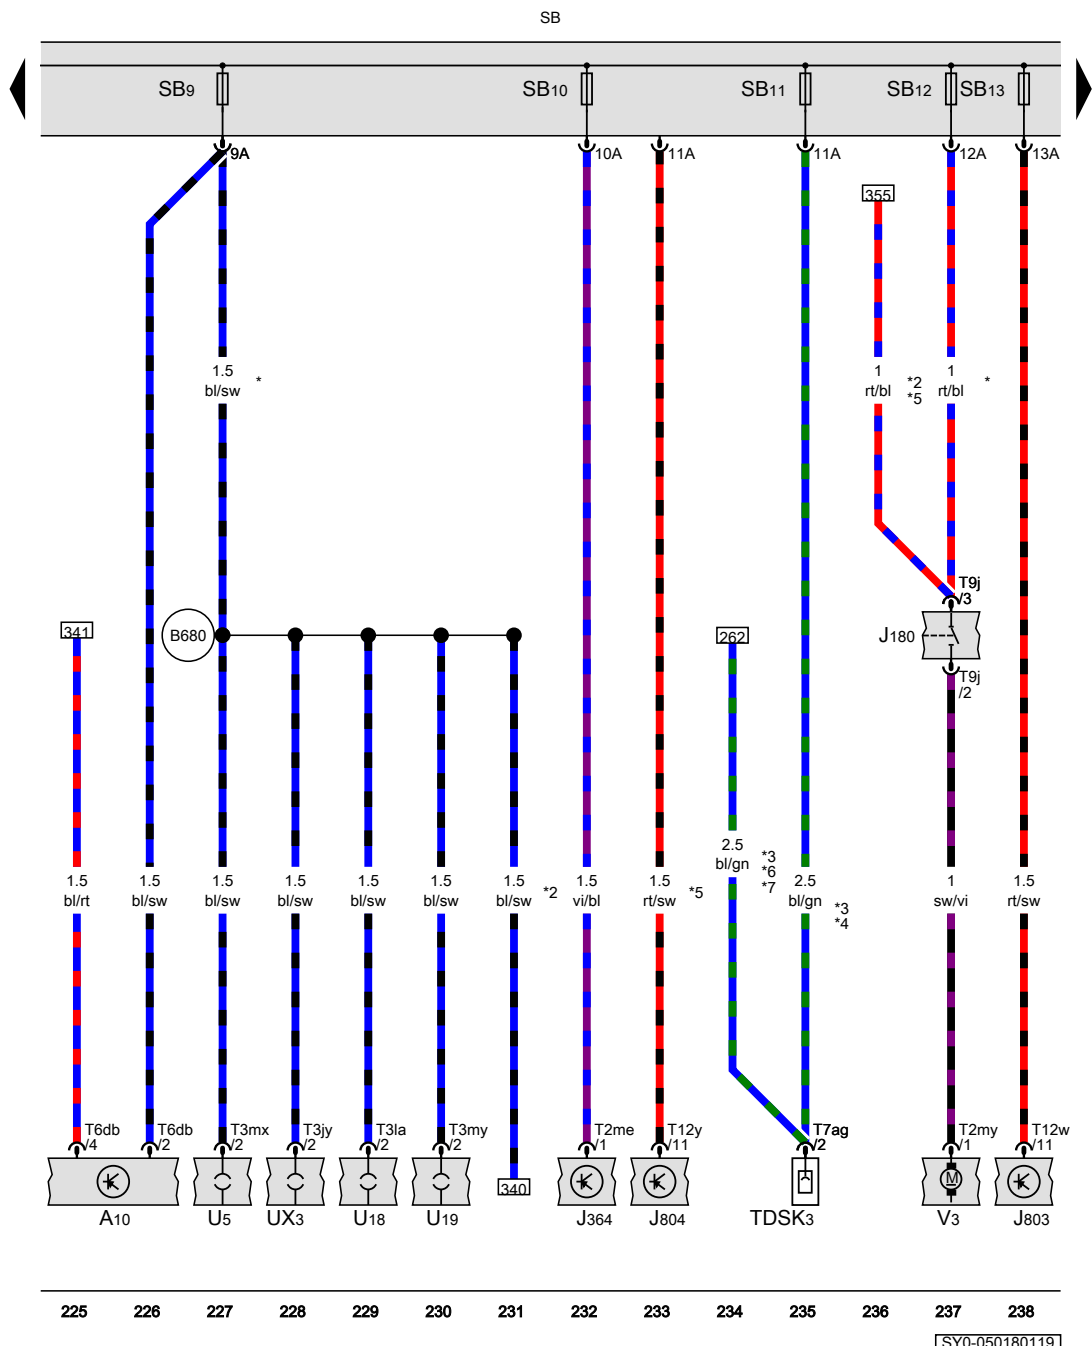


Fuse holder B

- A10 Battery charger, 230 or 110 Volt/12 Volt
- J180 Switch-over relay 1 for roof ventilator
- J364 Auxiliary heater control unit
- J803 Control unit for front left massage seat
- J804 Control unit for front right massage seat
- SB Fuse holder B
- SB9 Fuse 9 on fuse holder B
- SB10 Fuse 10 on fuse holder B
- SB11 Fuse 11 on fuse holder B
- SB12 Fuse 12 on fuse holder B
- SB13 Fuse 13 on fuse holder B
- T2me 2-pin connector, black
- T2my 2-pin connector, blue
- T3jy 3-pin connector, colourless
- T3la 3-pin connector, colourless
- T3mx 3-pin connector, colourless
- T3my 3-pin connector, colourless
- T6db 6-pin connector, grey
- T7ag 7-pin connector
- T9j 9-pin connector, grey
- T12w 12-pin connector, black
- T12y 12-pin connector, black
- TDSK3 Coupling point 3 for 3-way tipper
- UX3 12 V socket
- U5 12 V socket, in dash panel
- U18 12 V socket 2, in front centre console
- U19 12 V socket 3, in centre of dash panel
- V3 Roof ventilator

B680 Connection (electric socket), in interior wiring harness

- * For models with no second battery
- *2 For models with second battery
- *3 For models with 3-way tip function
- *4 Up to July 2017
- *5 According to equipment
- *6 From June 2017
- *7 gradual introduction

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

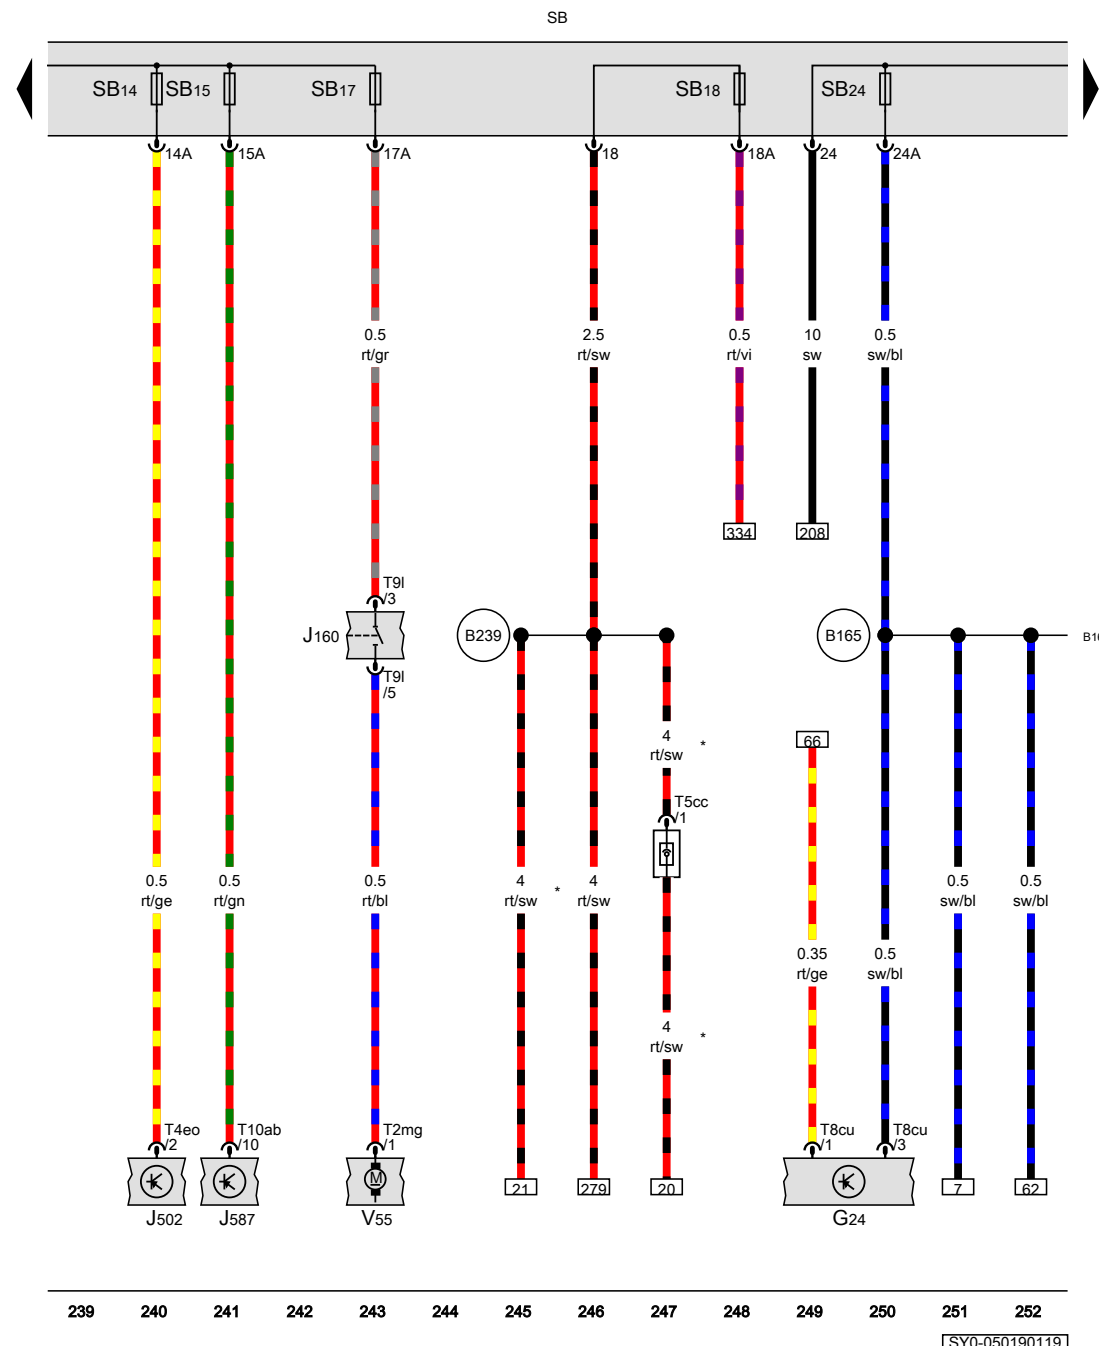

Fuse holder B


- G24 Tachograph
- J160 Circulation pump relay
- J502 Tyre Pressure Monitoring System control unit
- J587 Selector lever sensors control unit
- SB Fuse holder B
- SB14 Fuse 14 on fuse holder B
- SB15 Fuse 15 on fuse holder B
- SB17 Fuse 17 on fuse holder B
- SB18 Fuse 18 on fuse holder B
- SB24 Fuse 24 on fuse holder B
- T2mg 2-pin connector, black
- T4eo 4-pin connector, grey
- T5cc 5-pin connector, black
- T8cu 8-pin connector, colourless
- T9l 9-pin connector, black
- T10ab 10-pin connector, red
- V55 Circulation pump

B165 Positive connection 2 (15), in interior wiring harness

B239 Positive connection 1 (50), in interior wiring harness

* According to equipment


- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

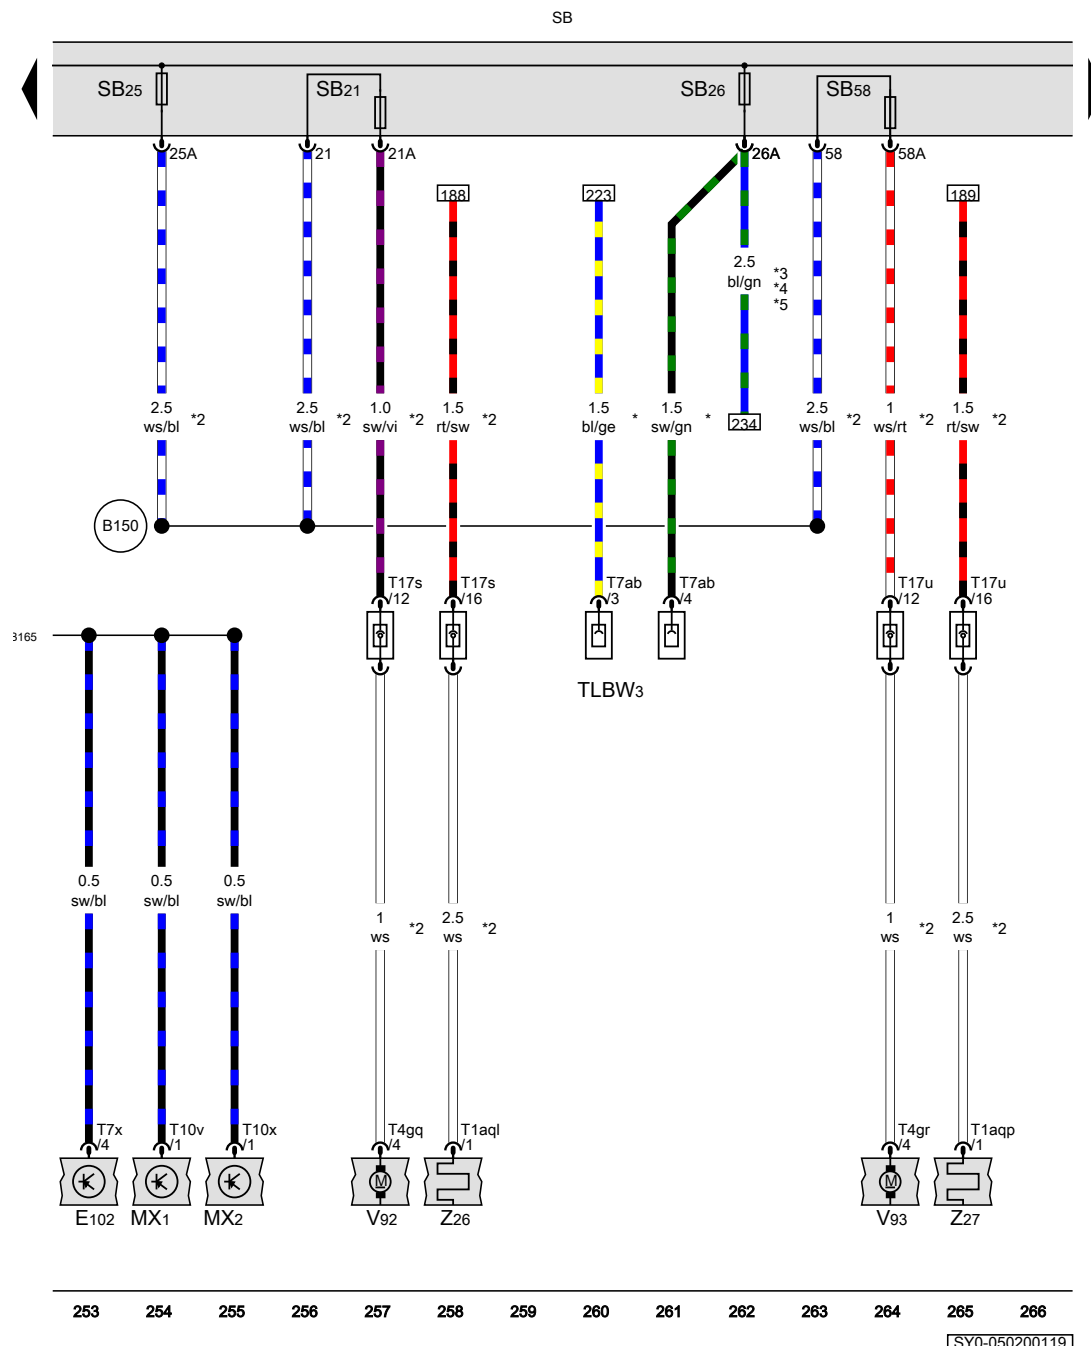

Fuse holder B

- E102 Headlight range control regulator
- MX1 Front left headlight
- MX2 Front right headlight
- SB Fuse holder B
- SB21 Fuse 21 on fuse holder B
- SB25 Fuse 25 on fuse holder B
- SB26 Fuse 26 on fuse holder B
- SB58 Fuse 58 on fuse holder B
- T1aql 1-pin connector
- T1aqp 1-pin connector
- T4gq 4-pin connector, black
- T4gr 4-pin connector, black
- T7ab 7-pin connector
- T7x 7-pin connector, black
- T10v 10-pin connector, black
- T10x 10-pin connector, black
- T17s 17-pin connector, black
- T17u 17-pin connector, black
- TLBW3 Coupling point 3 for tail lift
- V92 Rear left wing door window wiper motor
- V93 Rear right wing door window wiper motor
- Z26 Heated rear window in left wing door
- Z27 Heated rear window in right wing door
- B150 Positive connection 2 (30a), in interior wiring harness
- B165 Positive connection 2 (15), in interior wiring harness
- * For models with tail lift
- *2 For panel van and Kombi models
- *3 For models with 3-way tip function
- *4 From June 2017
- *5 gradual introduction

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

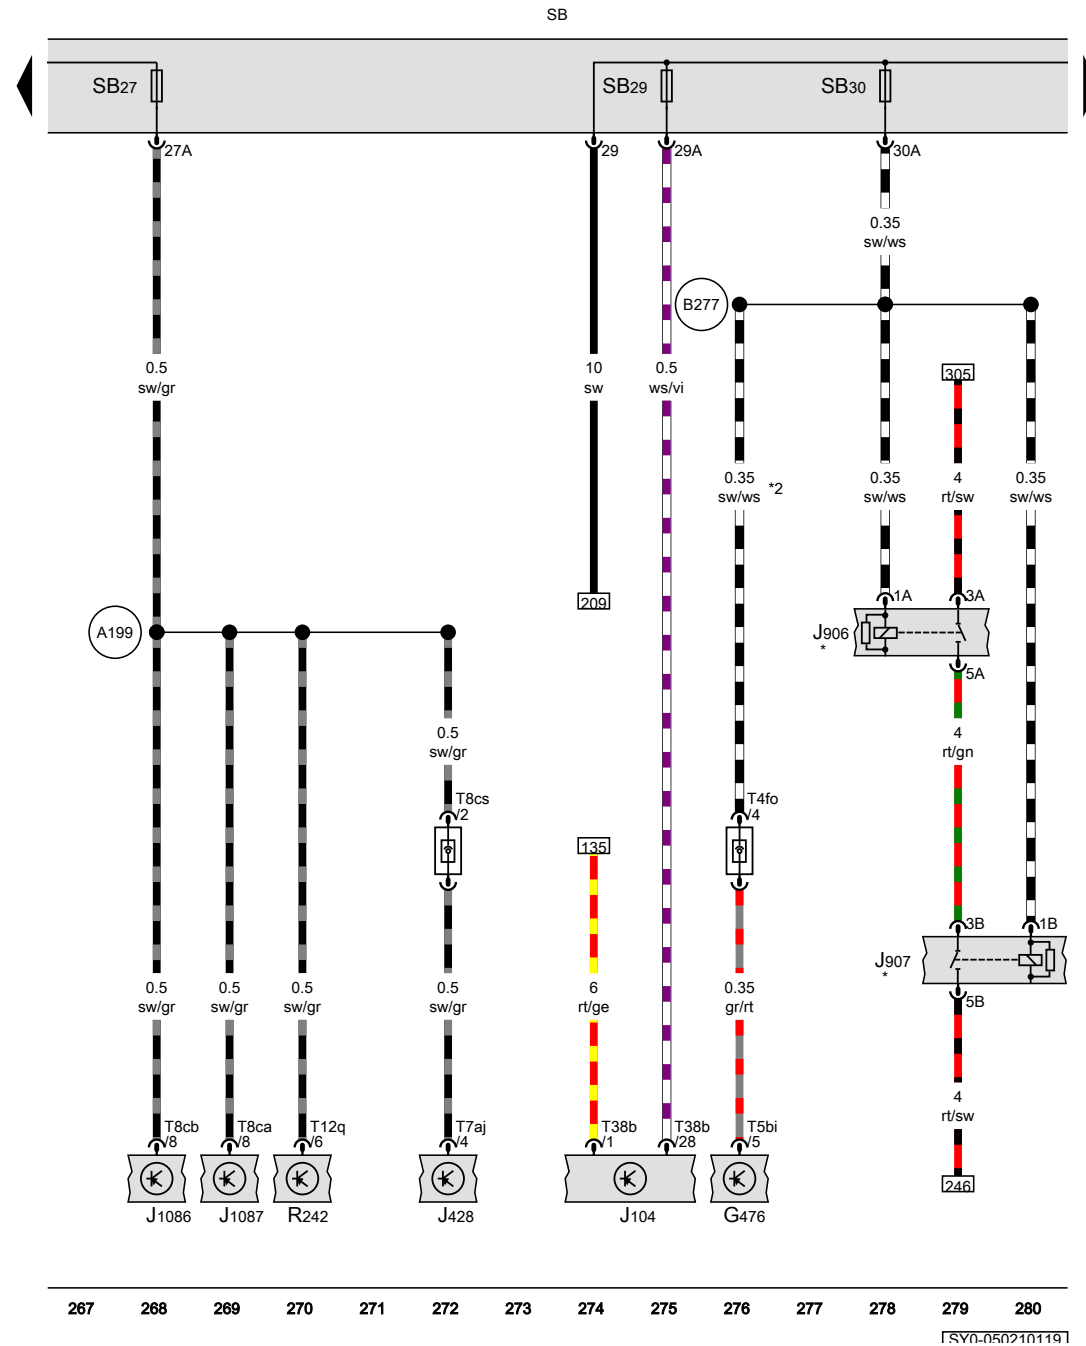

Fuse holder B

- G476 Clutch position sender
- J104 ABS control unit
- J428 Adaptive cruise control unit
- J906 Starter relay 1
- J907 Starter relay 2
- J1086 Blind Spot Monitor control unit
- J1087 Blind Spot Monitor control unit 2
- R242 Front camera for driver assist systems
- SB Fuse holder B
- SB27 Fuse 27 on fuse holder B
- SB29 Fuse 29 on fuse holder B
- SB30 Fuse 30 on fuse holder B
- T4fo 4-pin connector, black
- T5bi 5-pin connector, black
- T7aj 7-pin connector, black
- T8ca 8-pin connector, black
- T8cb 8-pin connector, black
- T8cs 8-pin connector, black
- T12q 12-pin connector, black
- T38b 38-pin connector, brown


A199 Positive connection 4 (15a) in dash panel wiring harness

B277 Positive connection 1 (15a) in main wiring harness

* see applicable current flow diagram for engine

*2 For models with manual gearbox

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

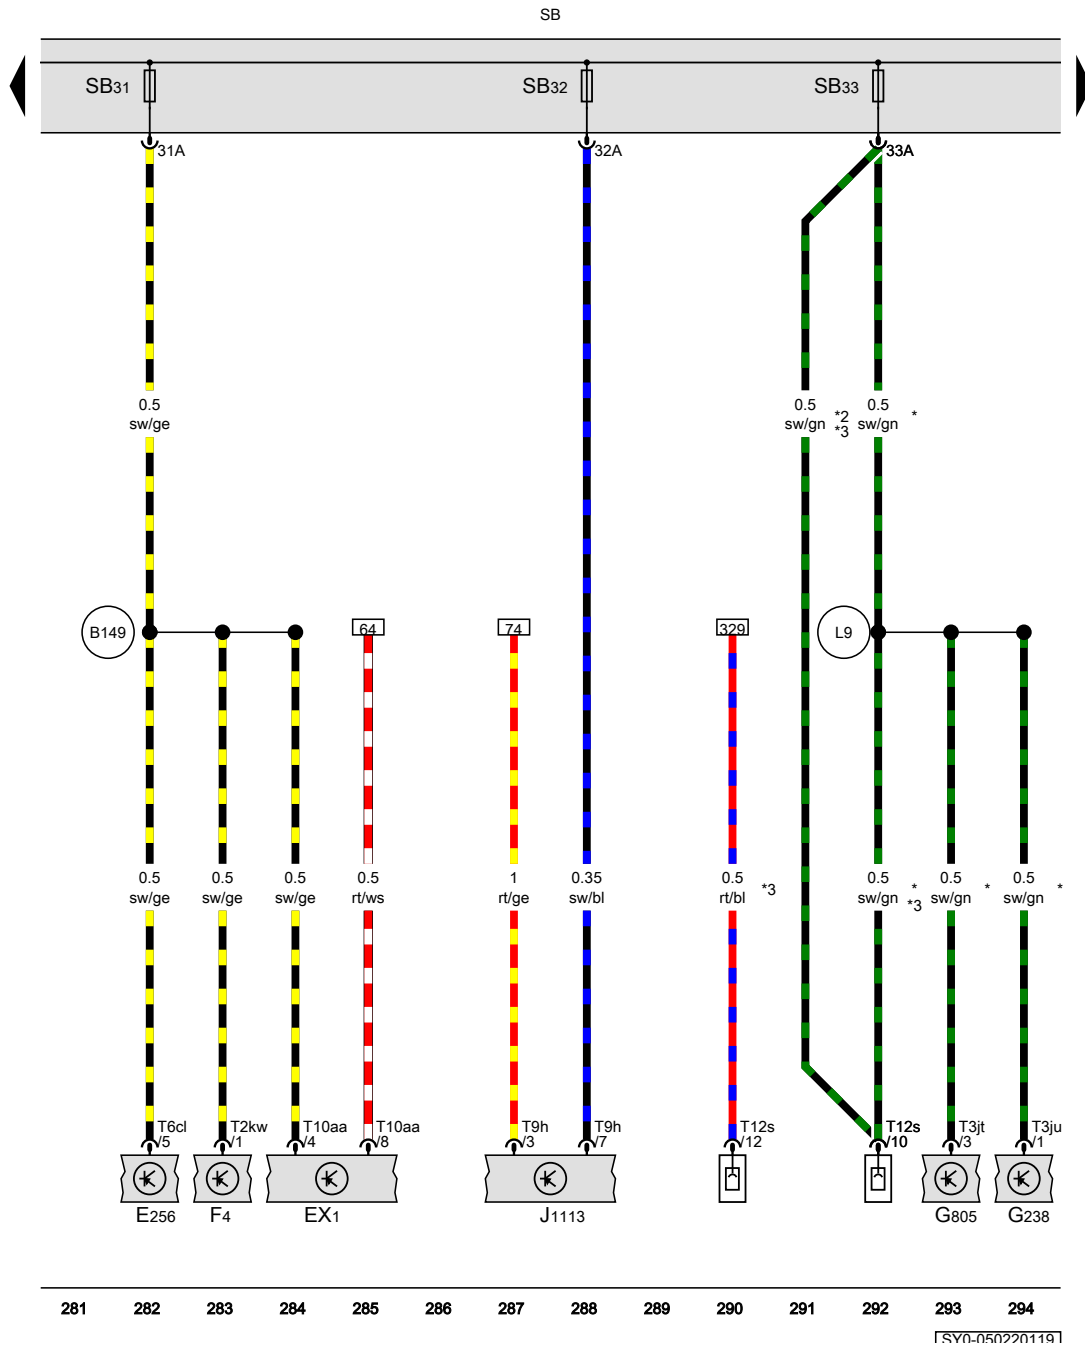

Fuse holder B


- | | |
|-------|---|
| EX1 | Rotary light switch |
| E256 | Button for TCS and electronic stabilisation program |
| F4 | Reversing light switch |
| G238 | Air quality sensor |
| G805 | Pressure sender for refrigerant circuit |
| J1113 | Reverse warning beeper control unit |
| SB | Fuse holder B |
| SB31 | Fuse 31 on fuse holder B |
| SB32 | Fuse 32 on fuse holder B |
| SB33 | Fuse 33 on fuse holder B |
| T2kw | 2-pin connector, black |
| T3jt | 3-pin connector, black |
| T3ju | 3-pin connector, grey |
| T6cl | 6-pin connector, blue |
| T9h | 9-pin connector, grey |
| T10aa | 10-pin connector, red |
| T12s | 12-pin connector, green |

(B149) Positive connection 2 (15a), in interior wiring harness

(L9) Connection 1, in air conditioning system wiring harness

* For models with air conditioning system
*2 For models with no air conditioning system
*3 For models with telematics


ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink

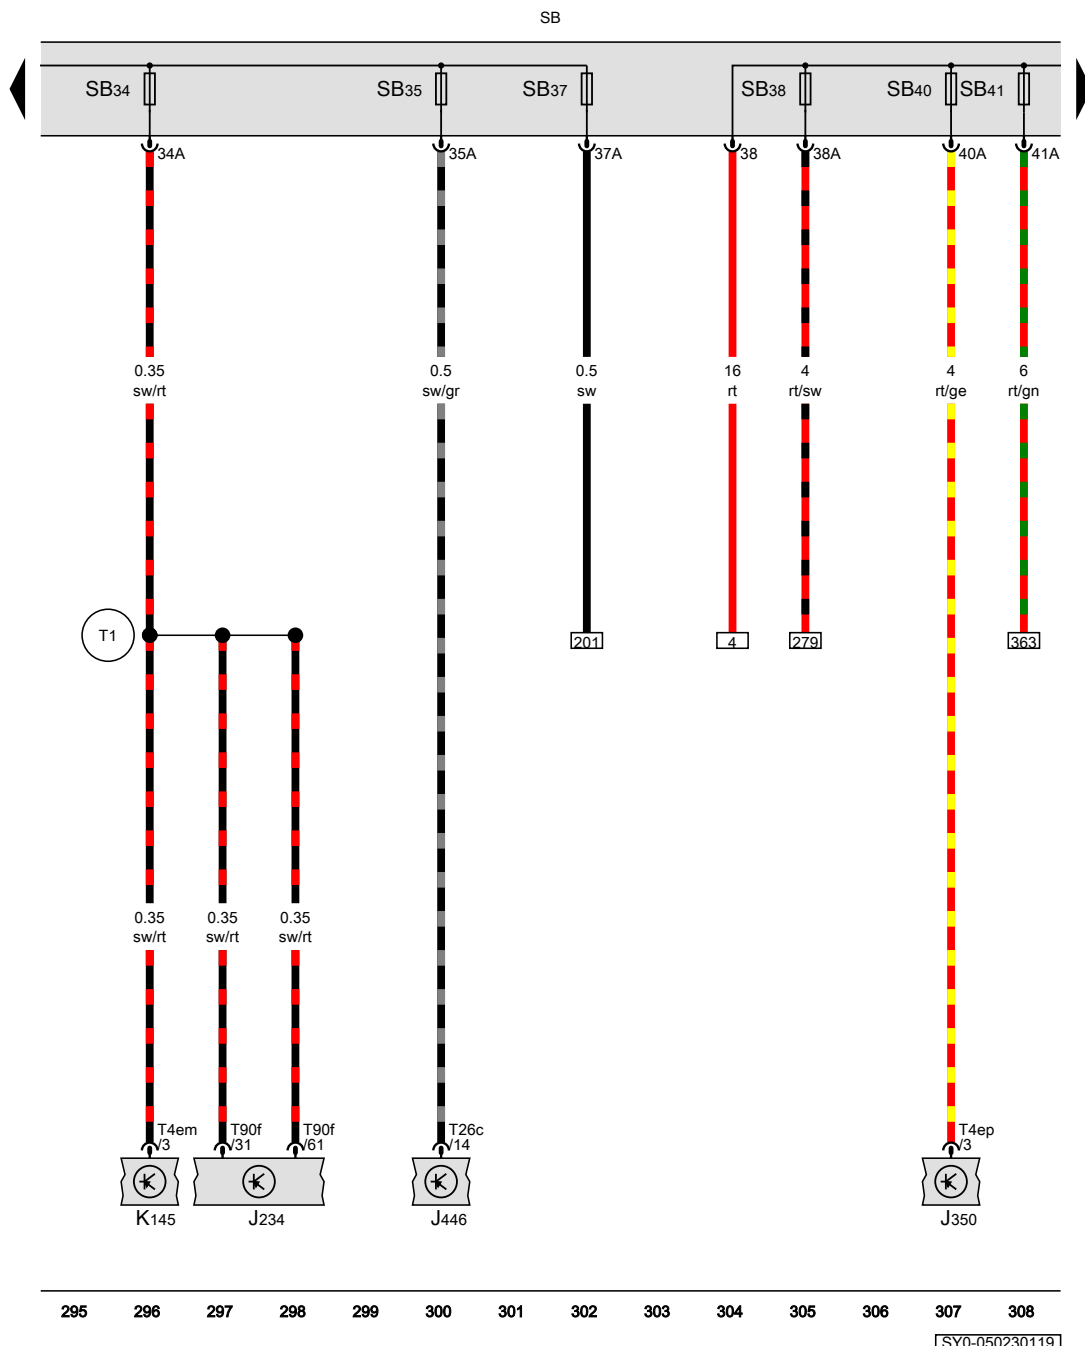

Fuse holder B

- J234 Airbag control unit
- J350 Warm air blower control unit
- J446 Parking aid control unit
- K145 Warning lamp for airbag deactivated on front passenger side
- SB Fuse holder B
- SB34 Fuse 34 on fuse holder B
- SB35 Fuse 35 on fuse holder B
- SB37 Fuse 37 on fuse holder B
- SB38 Fuse 38 on fuse holder B
- SB40 Fuse 40 on fuse holder B
- SB41 Fuse 41 on fuse holder B
- T4em 4-pin connector, black
- T4ep 4-pin connector, black
- T26c 26-pin connector, black
- T90f 90-pin connector, yellow


T1 Positive connection 1, in airbag wiring harness

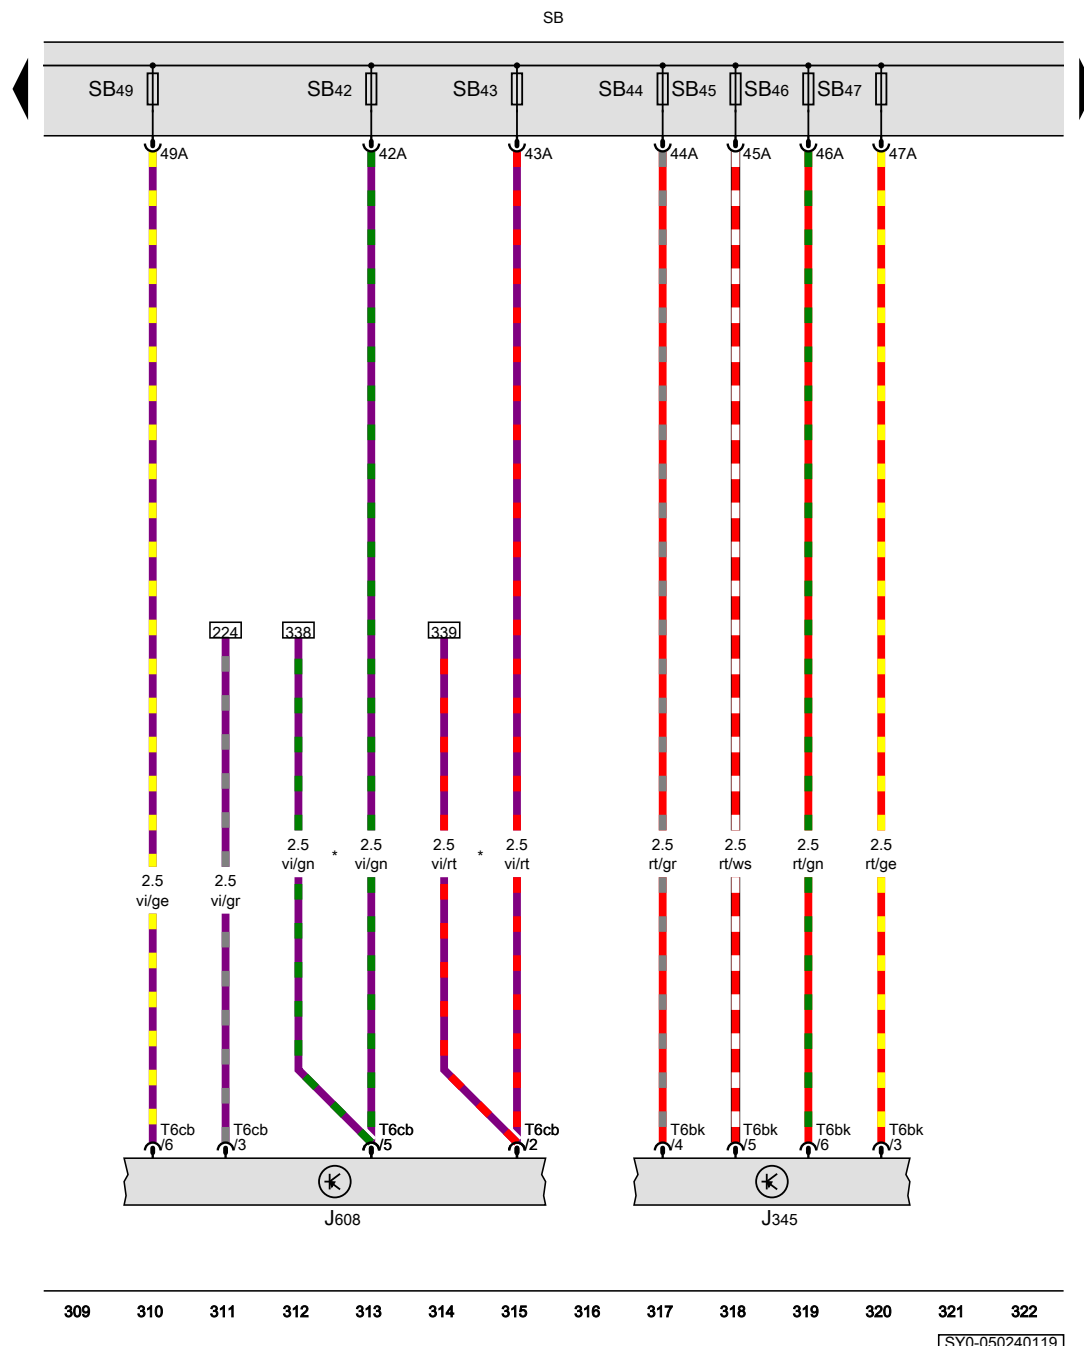

Fuse holder B

- J345 Trailer detector control unit
- J608 Special vehicle control unit
- SB Fuse holder B
- SB42 Fuse 42 on fuse holder B
- SB43 Fuse 43 on fuse holder B
- SB44 Fuse 44 on fuse holder B
- SB45 Fuse 45 on fuse holder B
- SB46 Fuse 46 on fuse holder B
- SB47 Fuse 47 on fuse holder B
- SB49 Fuse 49 on fuse holder B
- T6bk 6-pin connector, black
- T6cb 6-pin connector, blue
- * For models with second battery

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

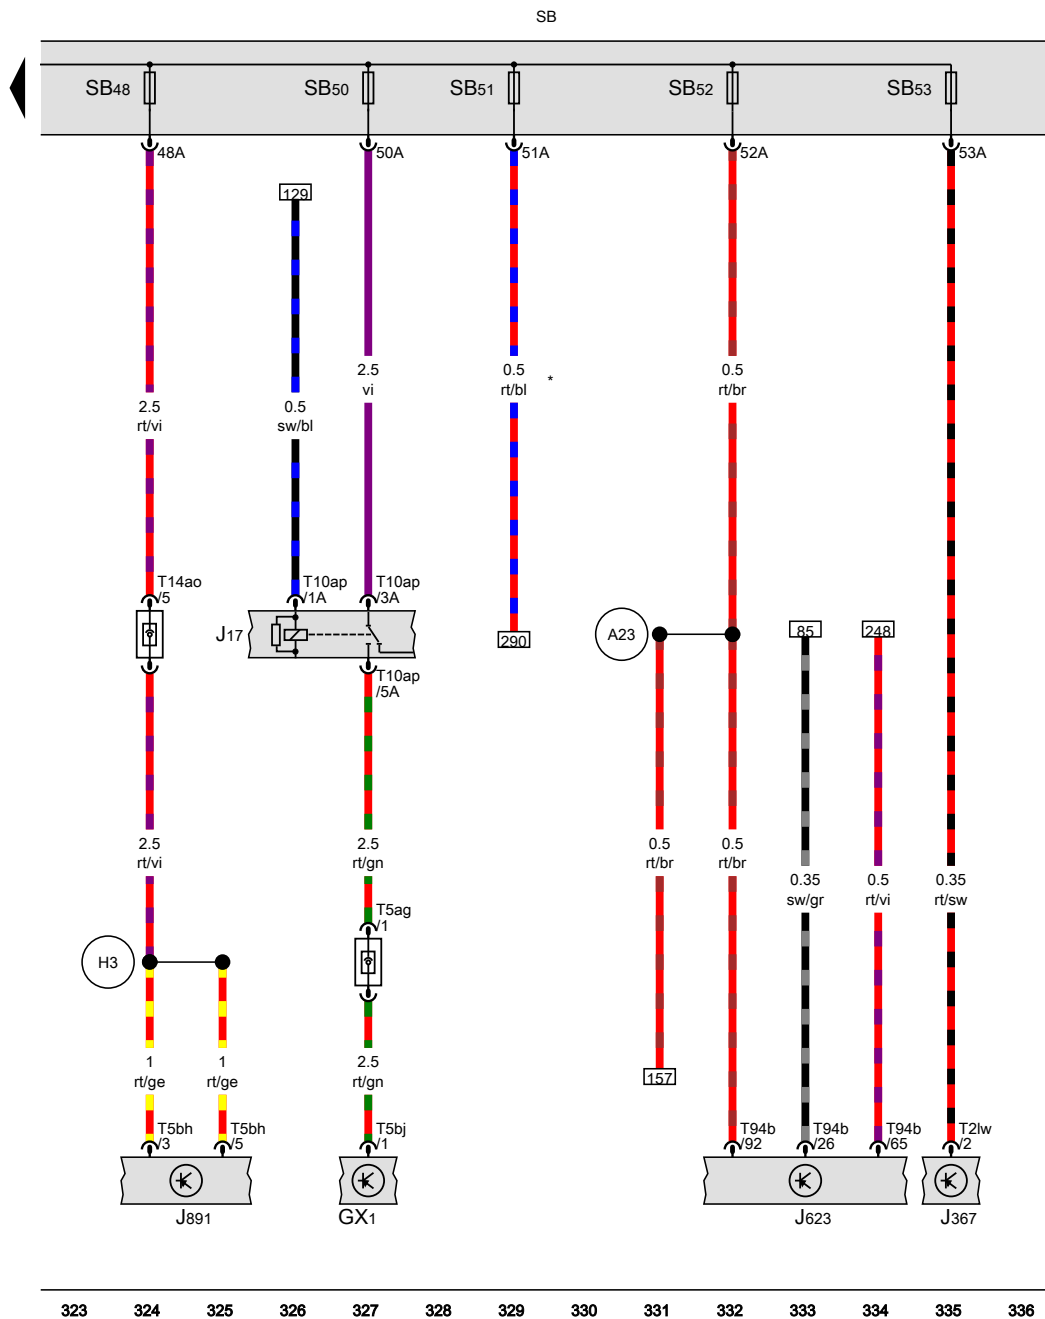


Fuse holder B

- GX1 Fuel delivery unit
- J17 Fuel pump relay
- J367 Battery monitor control unit
- J623 Engine/motor control unit
- J891 Control unit for reducing agent heater
- SB Fuse holder B
- SB48 Fuse 48 on fuse holder B
- SB50 Fuse 50 on fuse holder B
- SB51 Fuse 51 on fuse holder B
- SB52 Fuse 52 on fuse holder B
- SB53 Fuse 53 on fuse holder B
- T2lw 2-pin connector, black
- T5ag 5-pin connector, black
- T5bh 5-pin connector, colourless
- T5bj 5-pin connector, black
- T10ap 10-pin connector
- T14ao 14-pin connector, black
- T94b 94-pin connector, black
- A23 Connection (30al), in dash panel wiring harness
- H3 Connection 1 in wiring harness for reducing agent tank
- * For models with telematics

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink


1500-0502501191

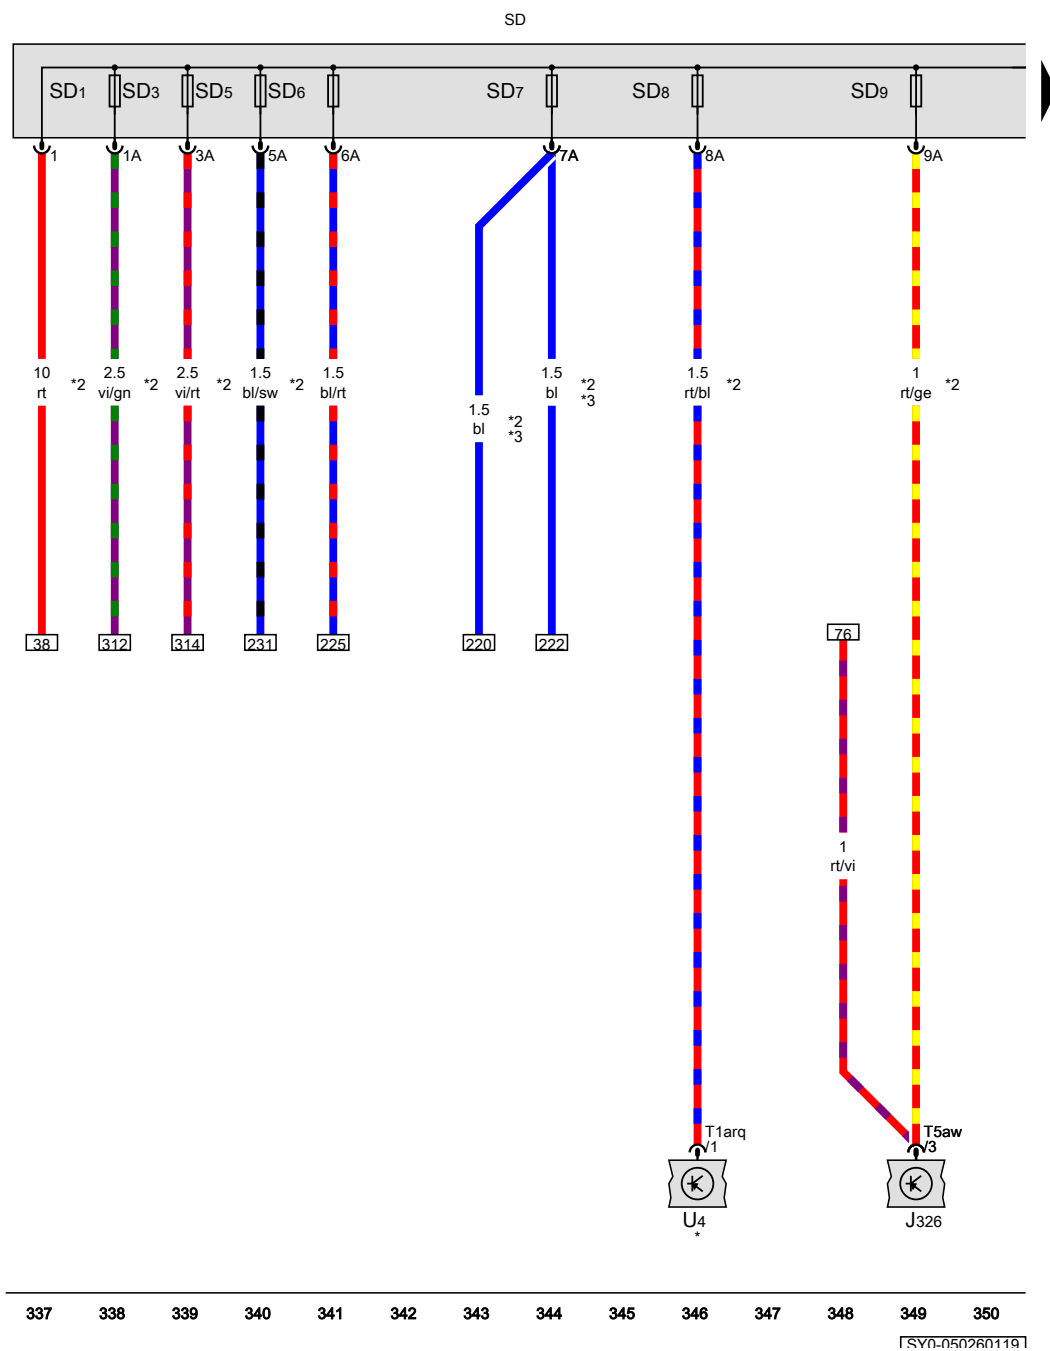

Fuse holder D

- J326 Rotating light relay
- SD Fuse holder D
- SD1 Fuse 1 on fuse holder D
- SD3 Fuse 3 on fuse holder D
- SD5 Fuse 5 on fuse holder D
- SD6 Fuse 6 on fuse holder D
- SD7 Fuse 7 on fuse holder D
- SD8 Fuse 8 on fuse holder D
- SD9 Fuse 9 on fuse holder D
- T1arq 1-pin connector, colourless
- T5aw 5-pin connector, brown
- U4 Two-way radio socket
- * Only applicable to special vehicles
- *2 For models with second battery
- *3 According to equipment

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

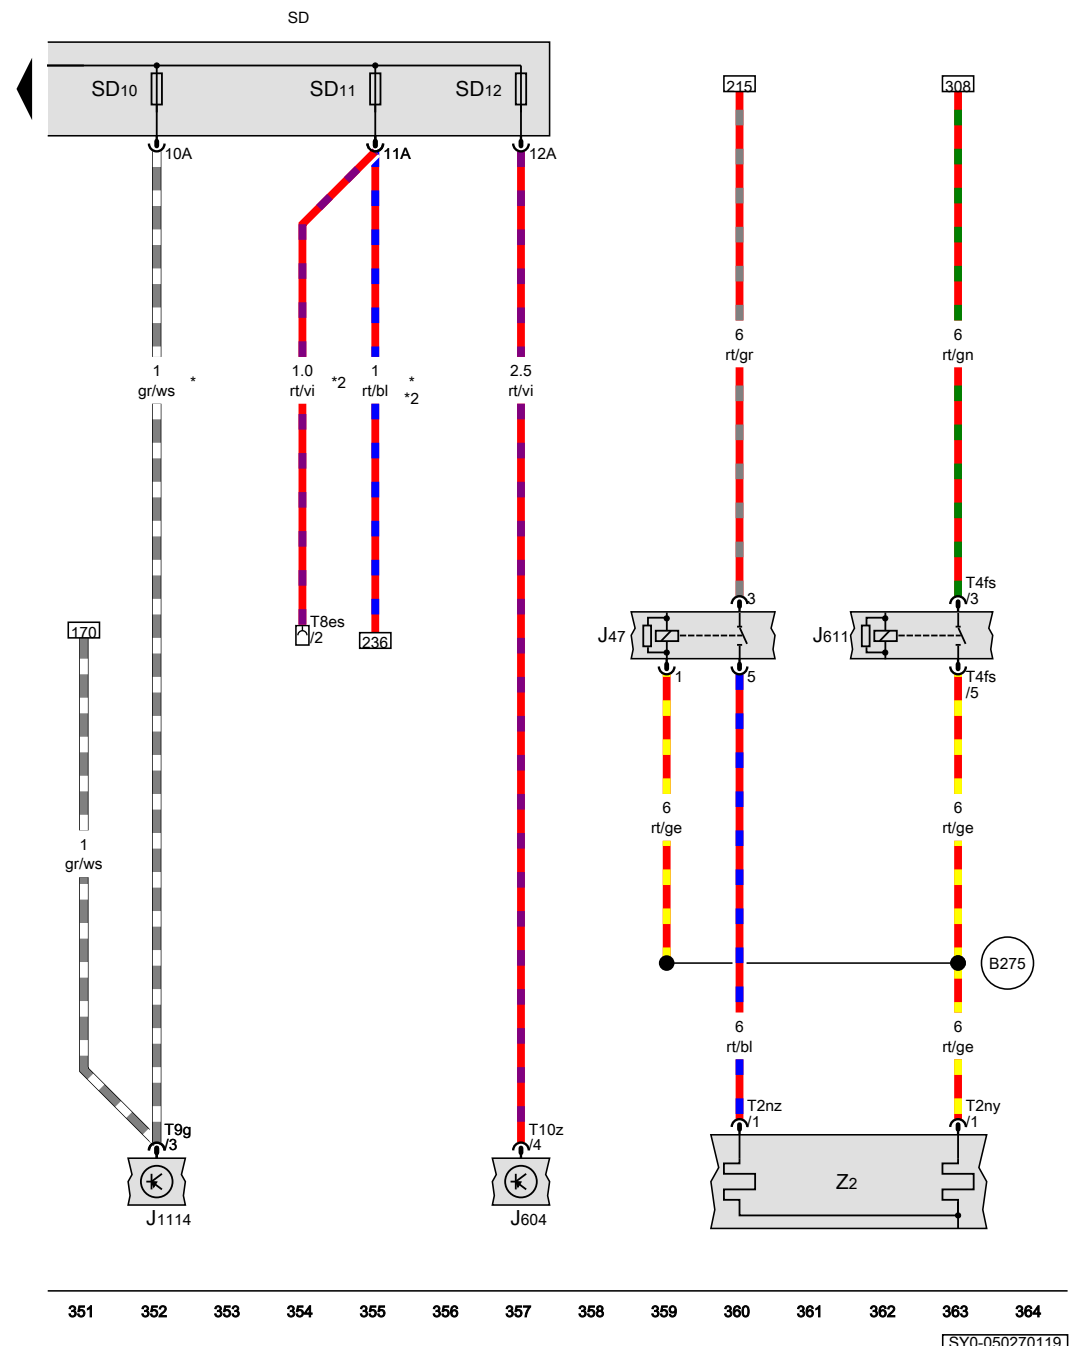

Heated windscreen relay, Heated windscreen relay 2, Fuse holder D

- J47 Heated windscreen relay
- J604 Auxiliary air heater control unit
- J611 Heated windscreen relay 2
- J1114 Rotating light control unit
- SD Fuse holder D
- SD10 Fuse 10 on fuse holder D
- SD11 Fuse 11 on fuse holder D
- SD12 Fuse 12 on fuse holder D
- T2ny 2-pin connector, black
- T2nz 2-pin connector, black
- T4fs 4-pin connector, black
- T8es 8-pin connector, black
- T9g 9-pin connector, grey
- T10z 10-pin connector, black
- Z2 Heated windscreen

B275 Positive connection (87), in main wiring harness


- * For models with second battery
- *2 According to equipment

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

Trailer coupling , (1D1),(1D2),(1D7),(1D8)

From May 2017


Trailer detector control unit, Fuse holder B

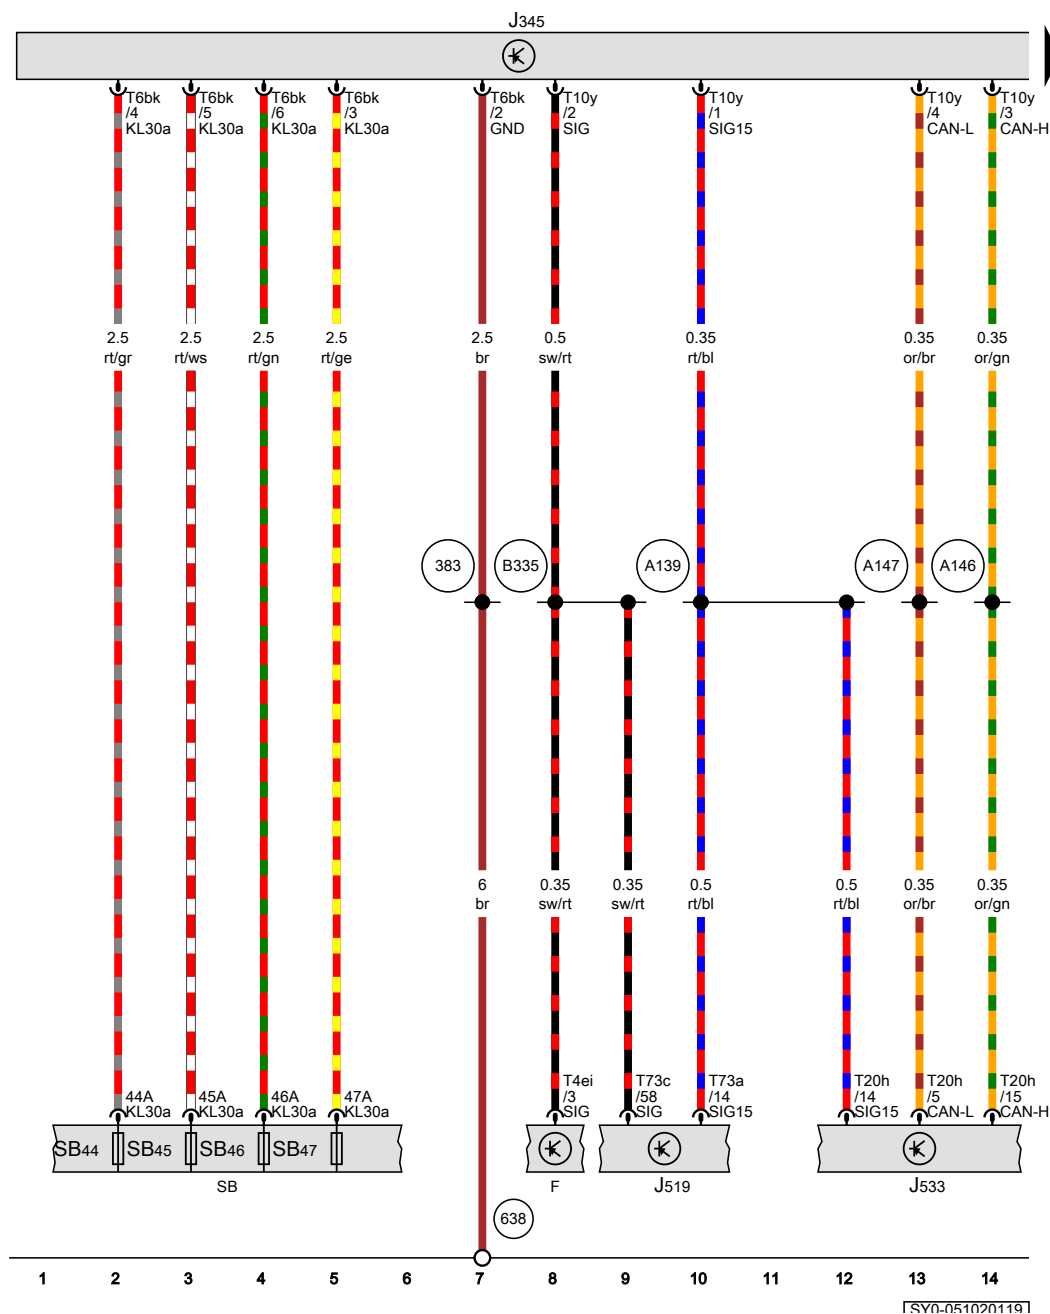

- F Brake light switch
- J345 Trailer detector control unit
- J519 Onboard supply control unit
- J533 Data bus diagnostic interface
- SB Fuse holder B
- SB44 Fuse 44 on fuse holder B
- SB45 Fuse 45 on fuse holder B
- SB46 Fuse 46 on fuse holder B
- SB47 Fuse 47 on fuse holder B
- T4ei 4-pin connector, black
- T6bk 6-pin connector, black
- T10y 10-pin connector, black
- T20h 20-pin connector, red
- T73a 73-pin connector, black
- T73c 73-pin connector, black
- 383 Earth connection 18, in main wiring harness
- 638 Earth point, on right A-pillar
- A139 Connection 3 (15) in dash panel wiring harness
- A146 Connection (convenience CAN bus, high), in dash panel wiring harness
- A147 Connection (convenience CAN bus, low), in dash panel wiring harness
- B335 Connection 1 (54), in main wiring harness

Trailer detector control unit, Trailer socket


- J345 Trailer detector control unit
 T13b 13-pin connector, black
 T14ar 14-pin connector, black
 T14aw 14-pin connector, black
 T24e 24-pin connector, black
 TAHLS Coupling point for trailer harness
 U10 Trailer socket
 (459) Earth connection 15, in interior wiring harness
 (711) Earth point 3 on rear left longitudinal member
 * Up to November 2017
 *2 From November 2017

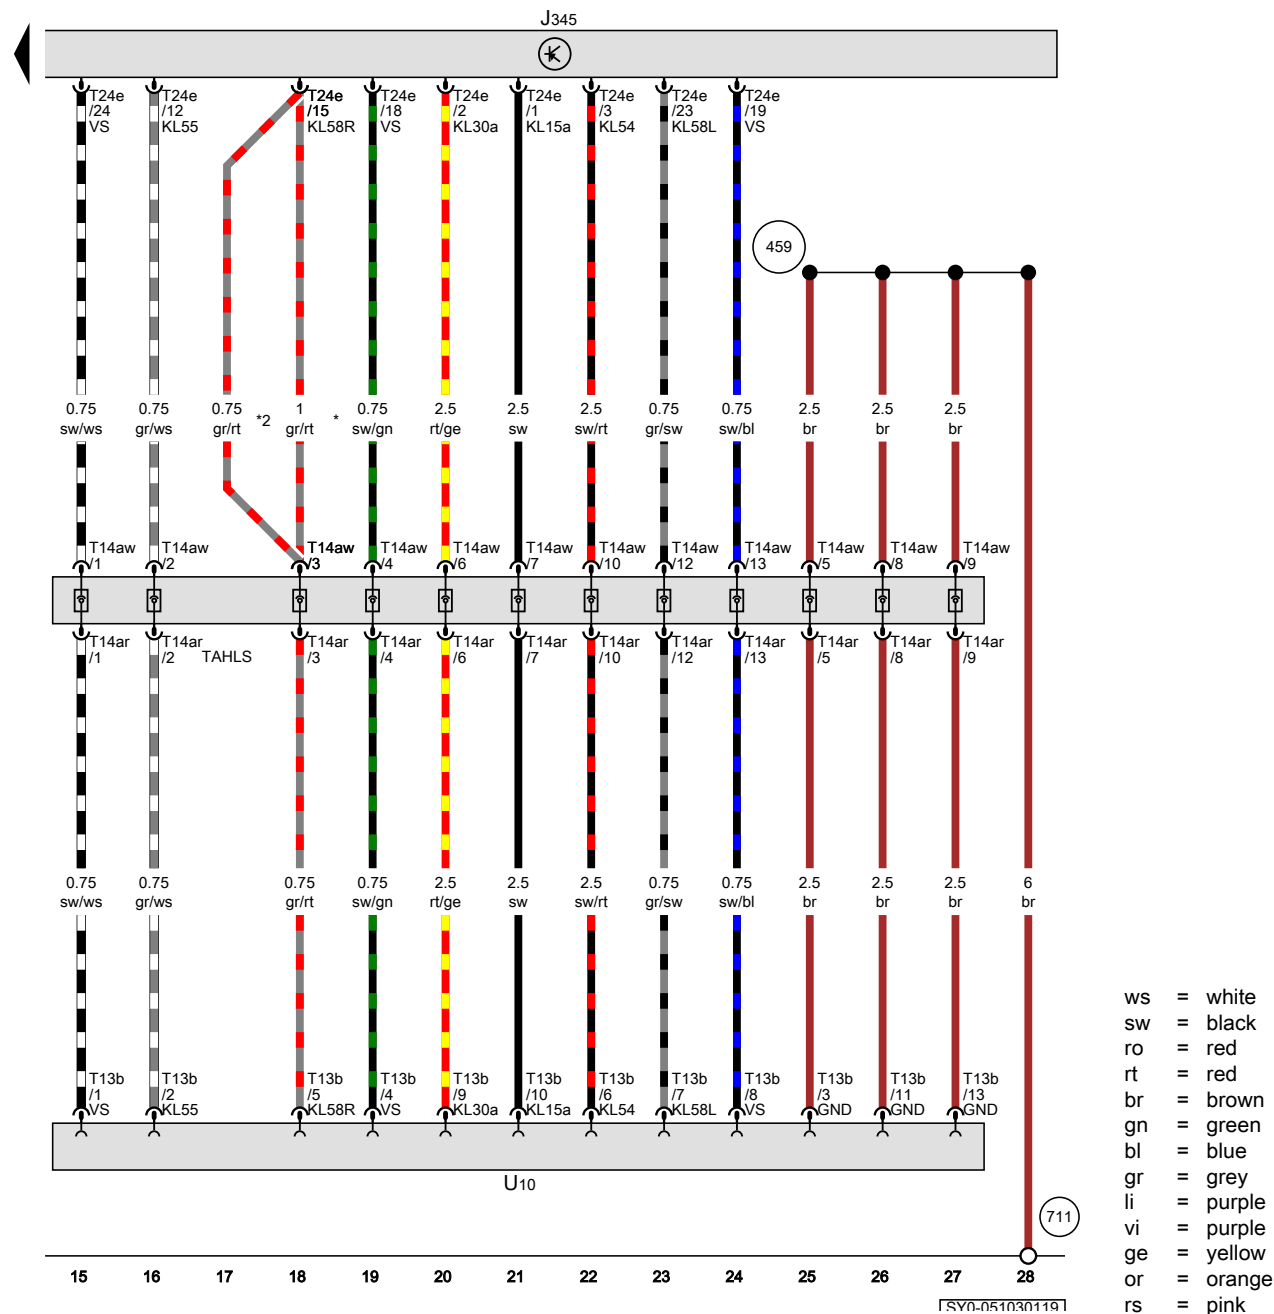

Basic equipment

From May 2017


Battery, Starter relay 1, Starter relay 2, Fuse holder B

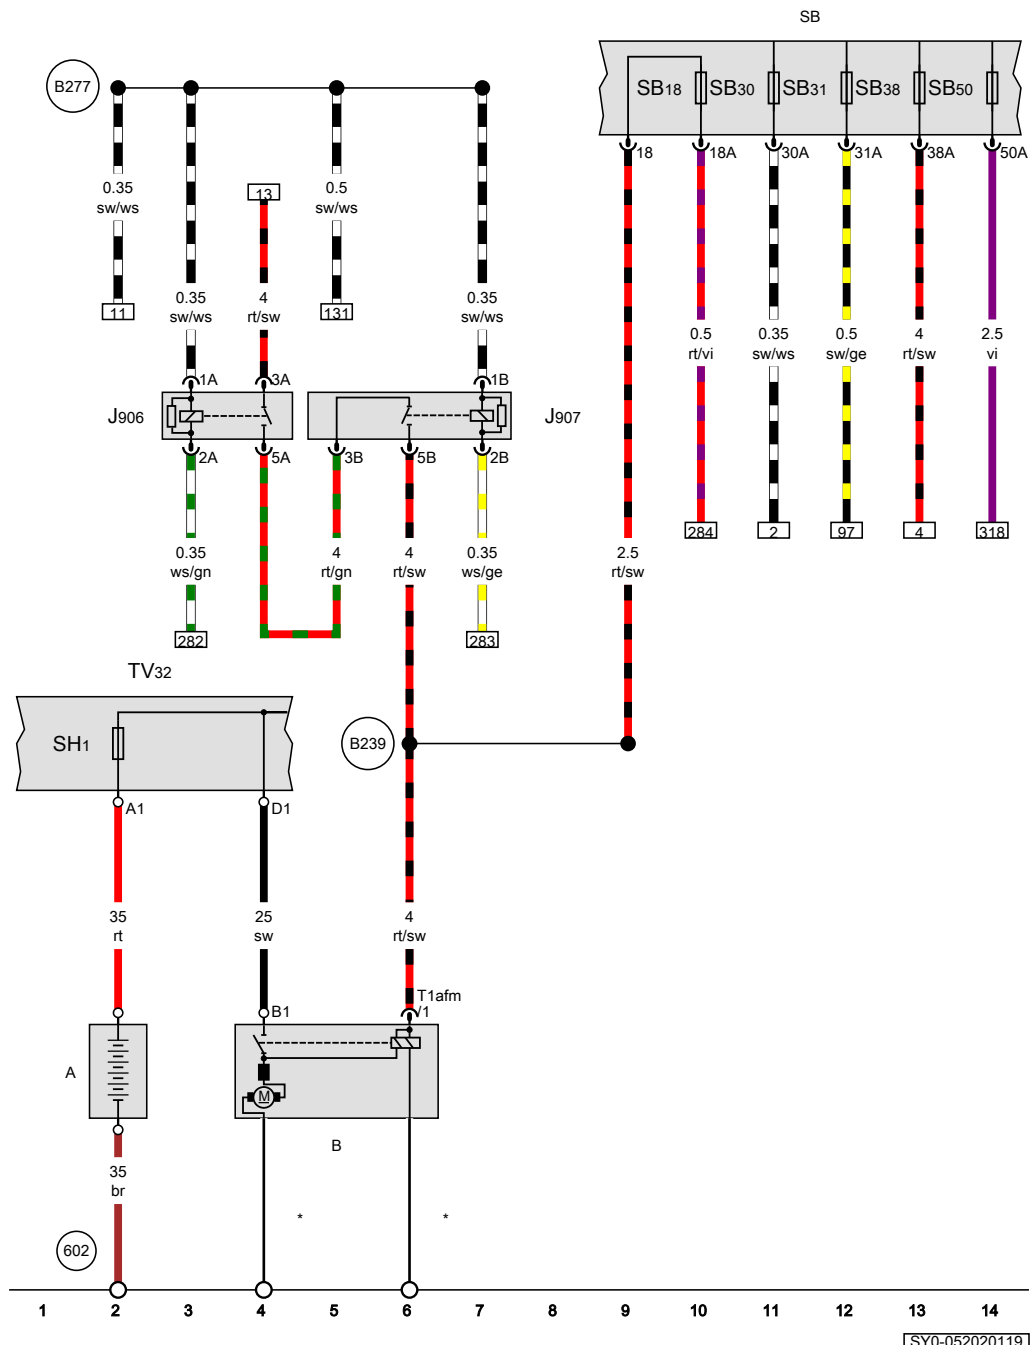


- A Battery
- B Starter
- J906 Starter relay 1
- J907 Starter relay 2
- SB Fuse holder B
- SH1 Fuse 1 in fuse holder H
- SB18 Fuse 18 on fuse holder B
- SB30 Fuse 30 on fuse holder B
- SB31 Fuse 31 on fuse holder B
- SB38 Fuse 38 on fuse holder B
- SB50 Fuse 50 on fuse holder B
- T1afm 1-pin connector, black
- TV32 Jump start connection
- 602 Earth point, in front left footwell
- B239 Positive connection 1 (50), in interior wiring harness
- B277 Positive connection 1 (15a) in main wiring harness
- * Earth supply via housing

Fuse holder C


- SC Fuse holder C
 SC2 Fuse 2 on fuse holder C
 SC8 Fuse 8 on fuse holder C
 SC17 Fuse 17 on fuse holder C
 SC21 Fuse 21 on fuse holder C
 SC22 Fuse 22 on fuse holder C
 SC23 Fuse 23 on fuse holder C
 SC26 Fuse 26 on fuse holder C
 SC30 Fuse 30 on fuse holder C
 SC31 Fuse 31 on fuse holder C
 SC32 Fuse 32 on fuse holder C
 SC42 Fuse 42 on fuse holder C
 SC43 Fuse 43 on fuse holder C
 SC48 Fuse 48 on fuse holder C
 * For panel van and Kombi models

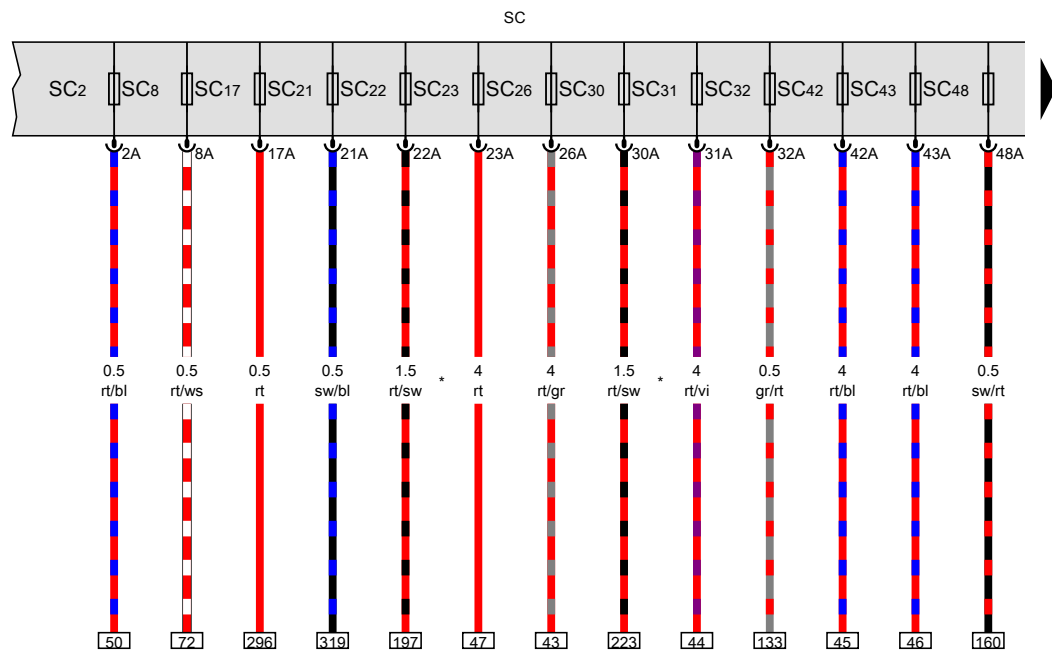

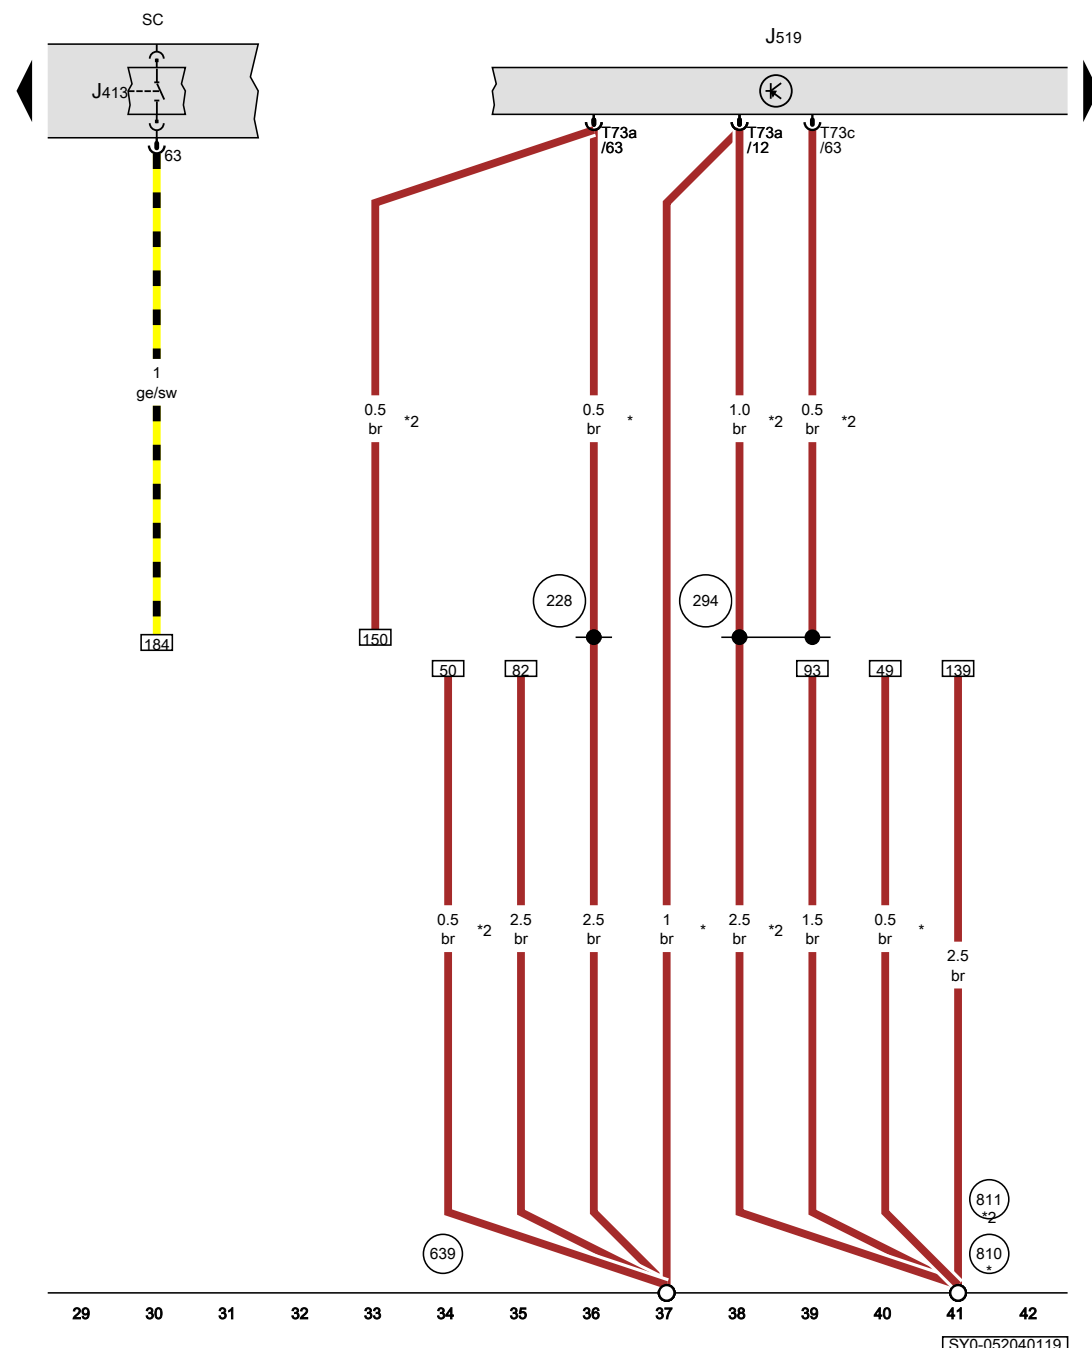


Onboard supply control unit, Fuse holder C

- J413 Horn relay
- J519 Onboard supply control unit
- SC Fuse holder C
- T73a 73-pin connector, black
- T73c 73-pin connector, black
- (228) Connection, in harness
- (294) Earth connection 9, in interior wiring harness
- (639) Earth point, left A-pillar
- (810) Earth point on central tube for dash panel, centre left
- (811) Earth point on central tube for dash panel, centre right
- * For left-hand drive models
- *2 For right-hand drive models

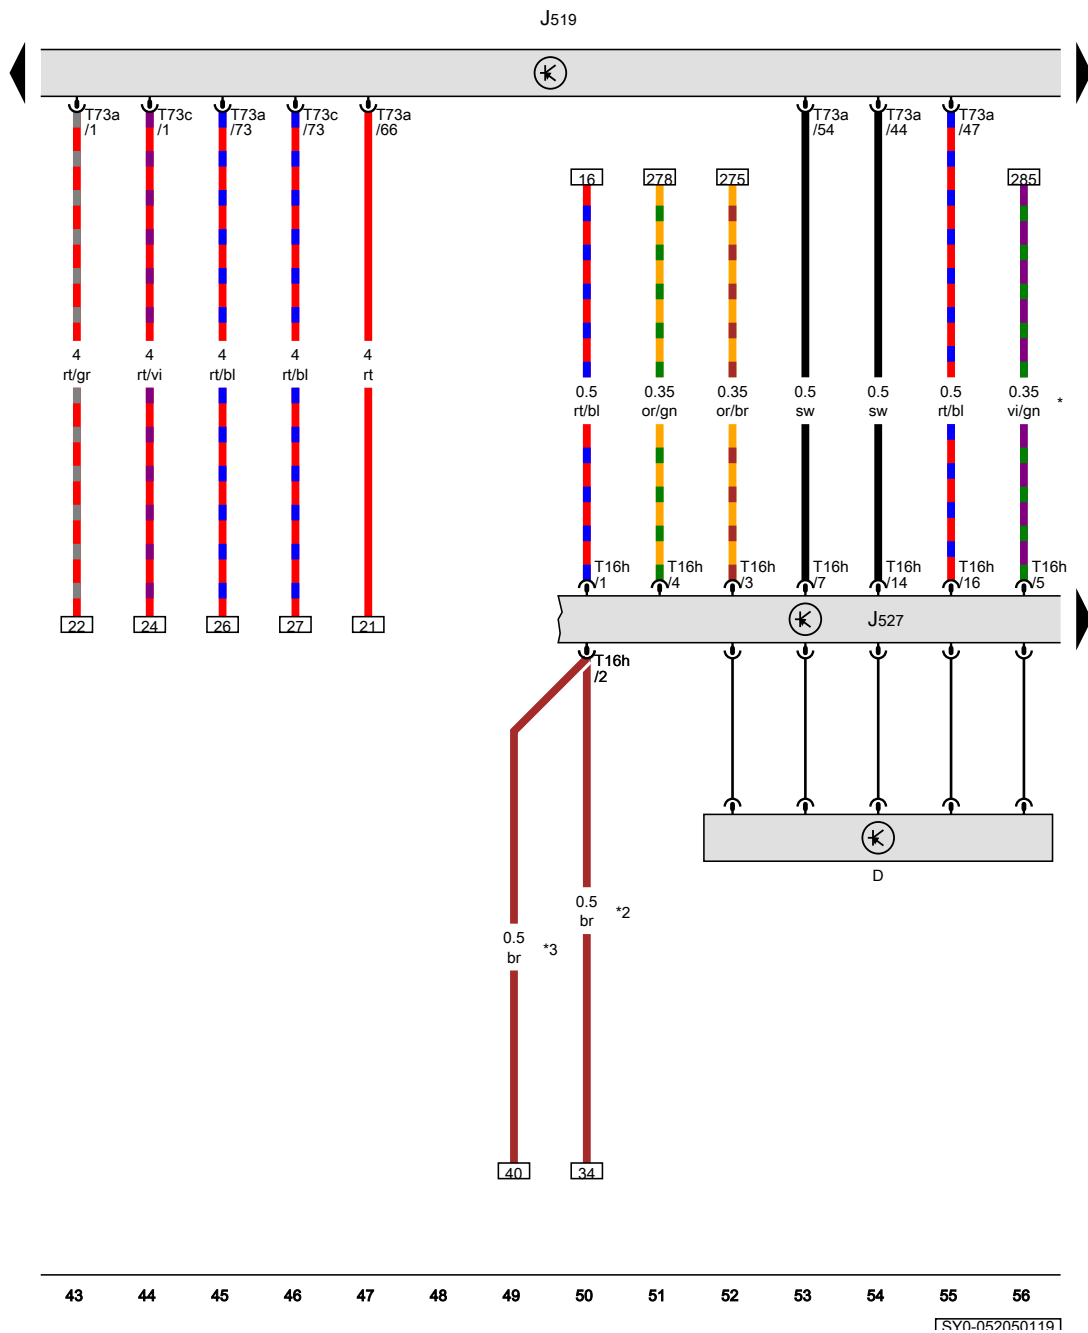

Ignition/starter switch, Onboard supply control unit, Steering column electronics control unit

- D Ignition/starter switch
- J519 Onboard supply control unit
- J527 Steering column electronics control unit
- T16h 16-pin connector, black
- T73a 73-pin connector, black
- T73c 73-pin connector, black
- * For models with cruise control system (CCS)
- *2 For right-hand drive models
- *3 For left-hand drive models

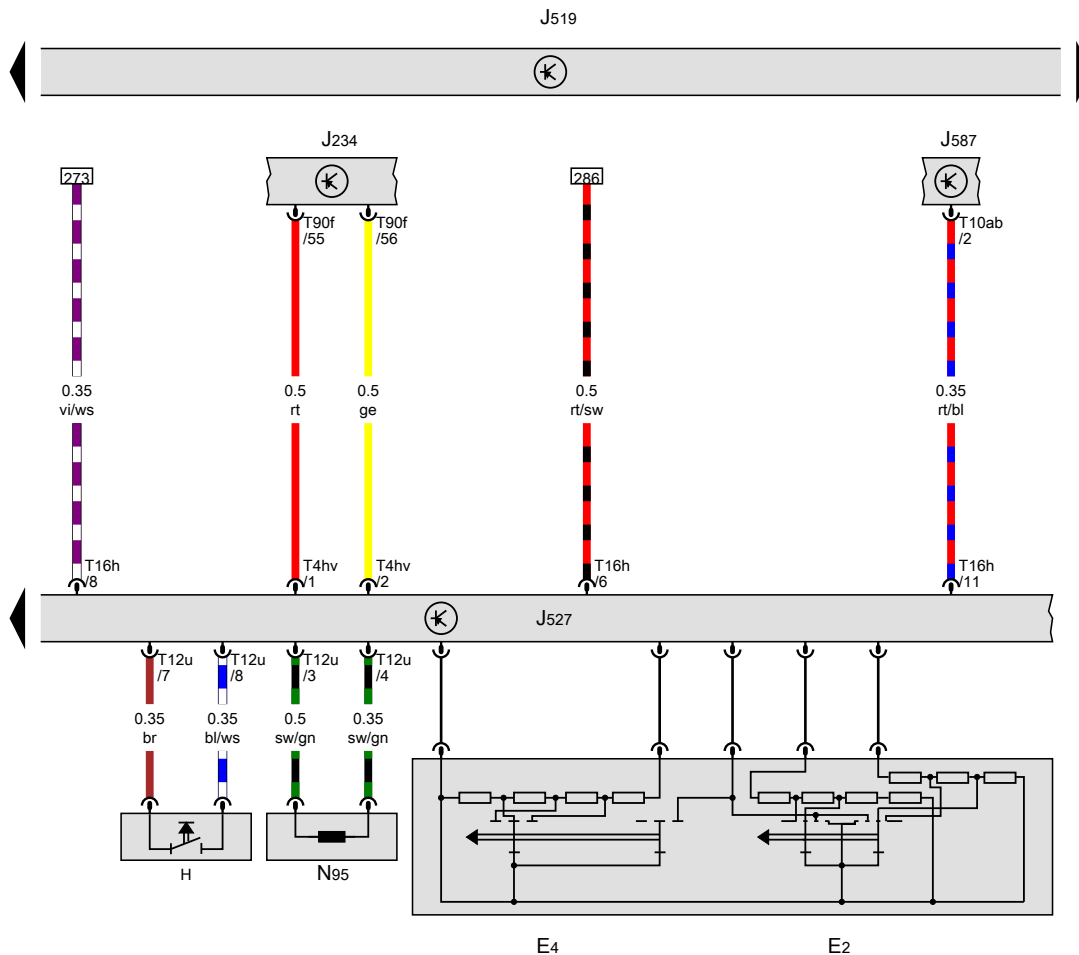

Turn signal switch, Headlight dipper and flasher switch, Horn plate, Onboard supply control unit, Steering column electronics control unit


- E2 Turn signal switch
- E4 Headlight dipper and flasher switch
- H Horn plate
- J234 Airbag control unit
- J519 Onboard supply control unit
- J527 Steering column electronics control unit
- J587 Selector lever sensors control unit
- N95 Airbag igniter on driver side
- T4hv 4-pin connector, yellow
- T10ab 10-pin connector, red
- T12u 12-pin connector
- T16h 16-pin connector, black
- T90f 90-pin connector, yellow

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

57 58 59 60 61 62 63 64 65 66 67 68 69 70

[SYN-052060119]

Rotary light switch, Onboard supply control unit

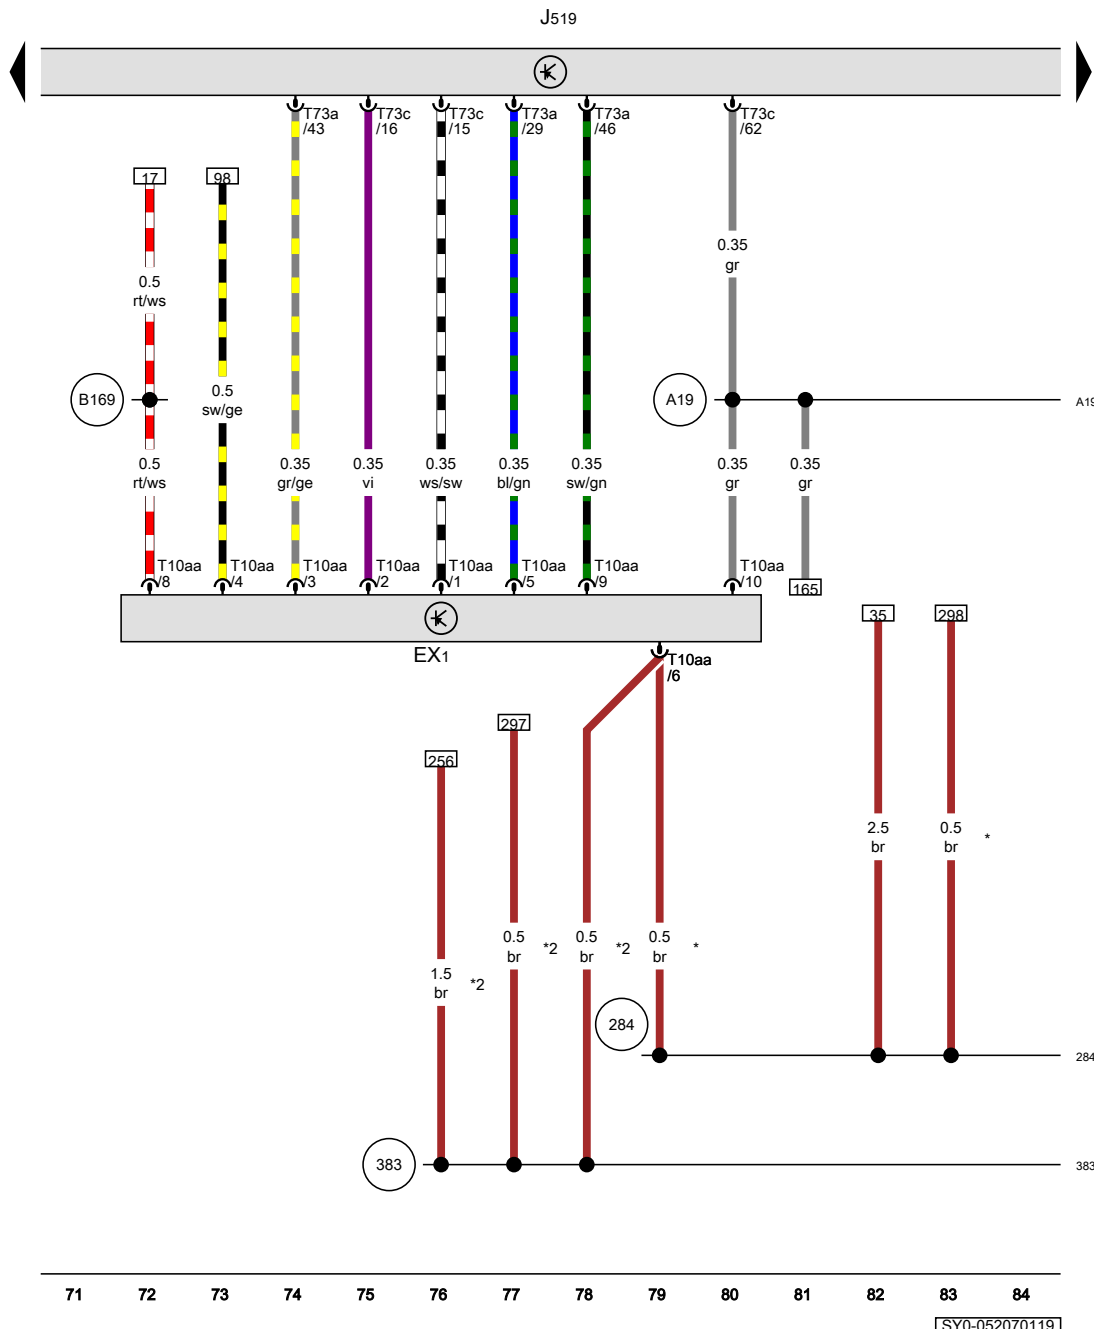


- EX1 Rotary light switch
- J519 Onboard supply control unit
- T10aa 10-pin connector, red
- T73a 73-pin connector, black
- T73c 73-pin connector, black
- 284 Earth connection 6, in interior wiring harness
- 383 Earth connection 18, in main wiring harness
- A19 Connection (58d), in dash panel wiring harness
- B169 Positive connection 1 (30), in interior wiring harness

* For left-hand drive models

*2 For right-hand drive models

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

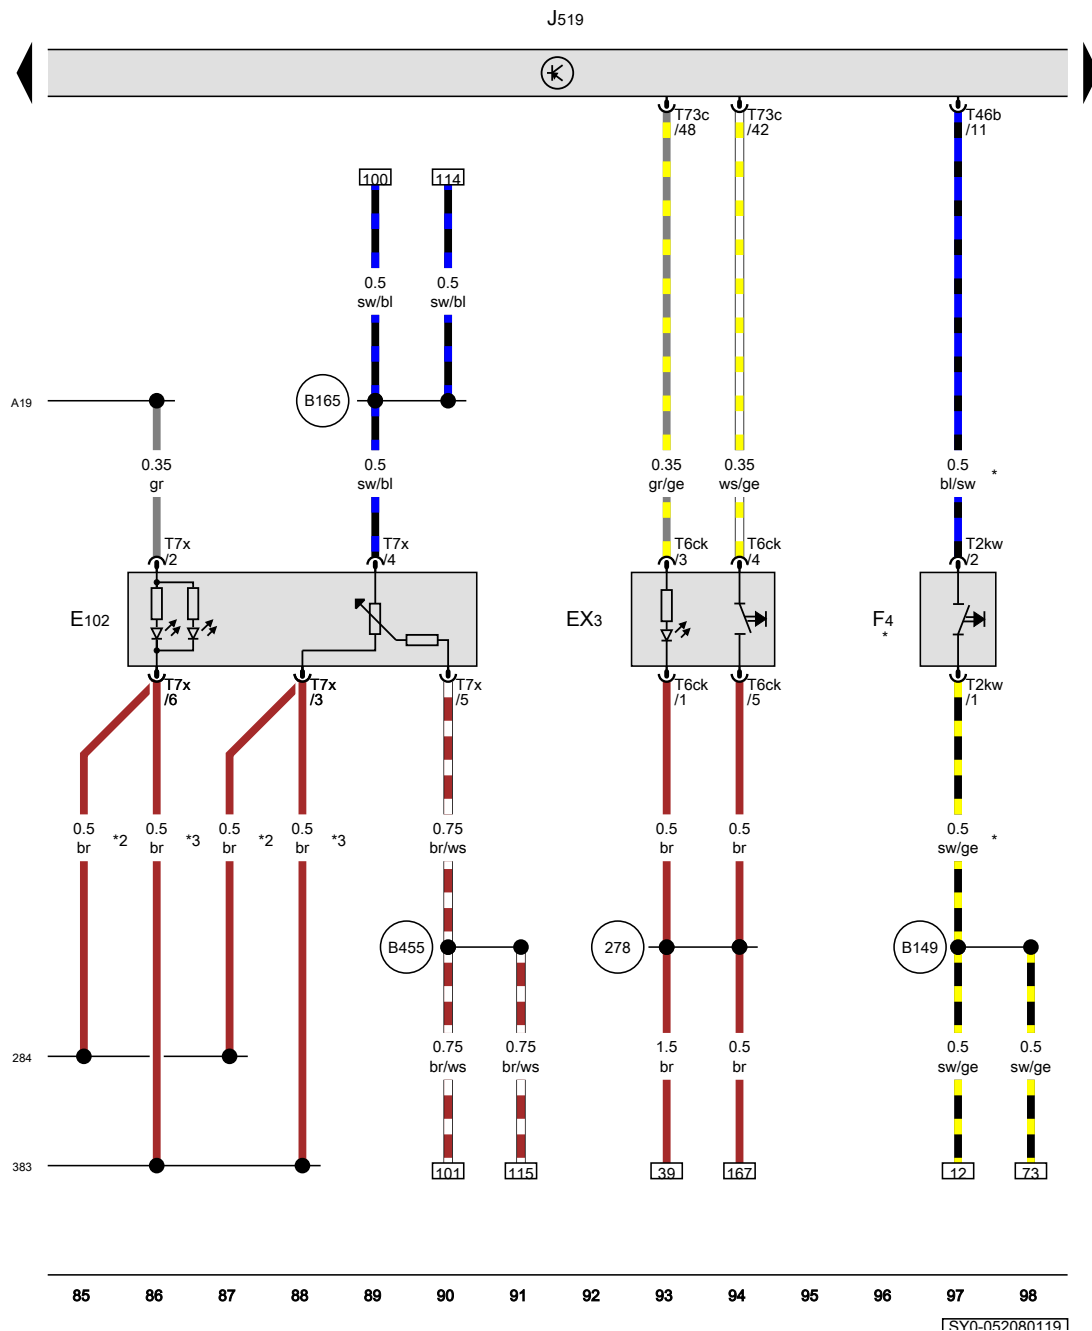


Hazard warning light switch, Headlight range control regulator, Reversing light switch, Onboard supply control unit

- EX3 Hazard warning light switch
- E102 Headlight range control regulator
- F4 Reversing light switch
- J519 Onboard supply control unit
- T2kw 2-pin connector, black
- T6ck 6-pin connector, blue
- T7x 7-pin connector, black
- T46b 46-pin connector, black
- T73c 73-pin connector, black

- 278 Earth connection 4, in interior wiring harness
- 284 Earth connection 6, in interior wiring harness
- 383 Earth connection 18, in main wiring harness
- A19 Connection (58d), in dash panel wiring harness
- B149 Positive connection 2 (15a), in interior wiring harness
- B165 Positive connection 2 (15), in interior wiring harness
- B455 Connection (HRC), in main wiring harness

- * For models with manual gearbox
- *2 For left-hand drive models
- *3 For right-hand drive models

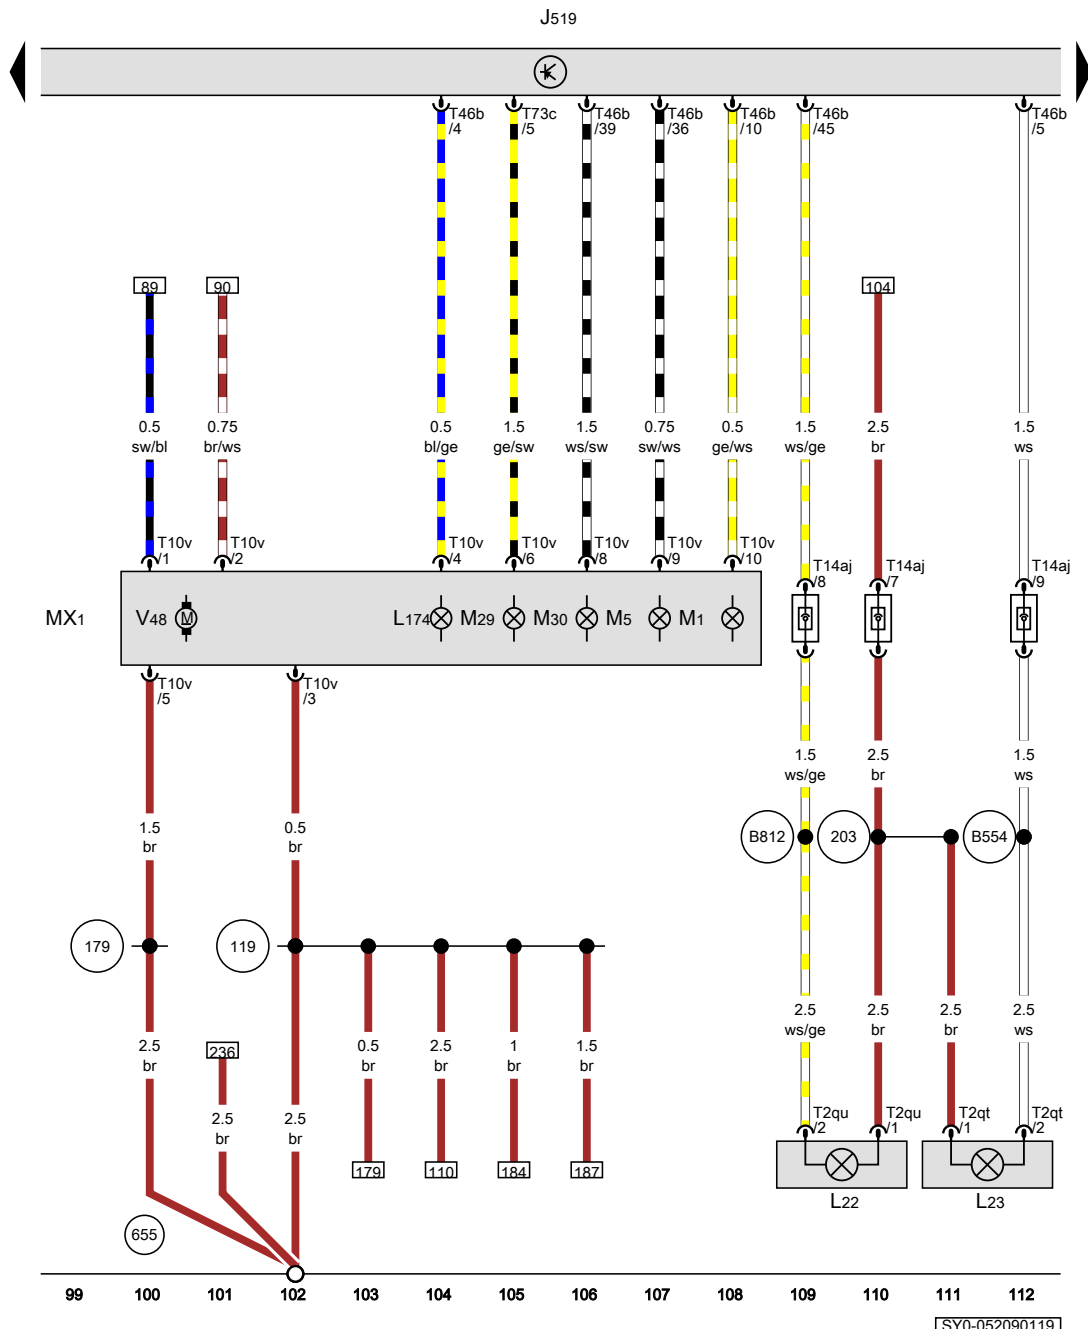


Onboard supply control unit, Left fog light bulb, Right fog light bulb, Front left headlight

- J519 Onboard supply control unit
- L22 Left fog light bulb
- L23 Right fog light bulb
- L174 Left daytime running light bulb
- MX1 Front left headlight
- M1 Left side light bulb
- M5 Front left turn signal bulb
- M29 Left headlight dipped beam bulb
- M30 Left headlight main beam bulb
- T2qt 2-pin connector, black
- T2qu 2-pin connector, black
- T10v 10-pin connector, black
- T14aj 14-pin connector, black
- T46b 46-pin connector, black
- T73c 73-pin connector, black
- V48 Left headlight range control motor

- 119 Earth connection 1, in headlight wiring harness
- 179 Earth connection, in left headlight wiring harness
- 203 Earth connection, in front fog light wiring harness
- 655 Earth point, on left headlight
- B554 Connection (fog light), in main wiring harness
- B812 Connection 2 (fog light), in main wiring harness

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink


Onboard supply control unit, Front right headlight, Left washer jet heater element, Right washer jet heater element

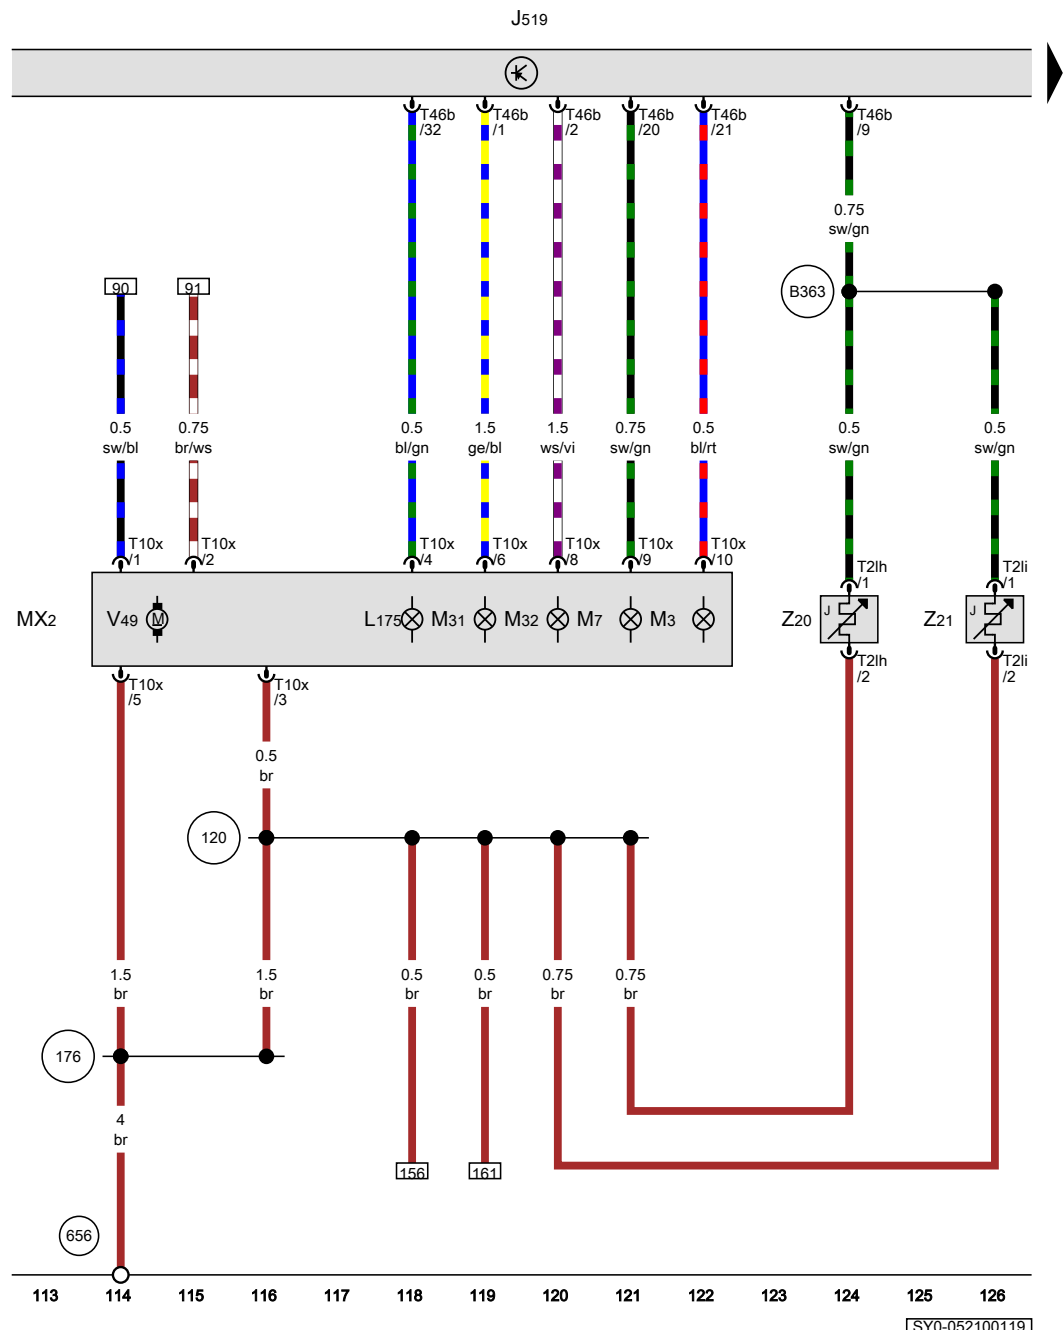

- J519 Onboard supply control unit
- L175 Right daytime running light bulb
- MX2 Front right headlight
- M3 Right side light bulb
- M7 Front right turn signal bulb
- M31 Right headlight dipped beam bulb
- M32 Right headlight main beam bulb
- T2lh 2-pin connector, black
- T2li 2-pin connector, black
- T10x 10-pin connector, black
- T46b 46-pin connector, black
- V49 Right headlight range control motor
- Z20 Left washer jet heater element
- Z21 Right washer jet heater element

- 120 Earth connection 2, in headlight wiring harness
- 176 Earth connection, in right headlight wiring harness
- 656 Earth point, on right headlight
- B363 Positive connection 14 (87a) in main wiring harness

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

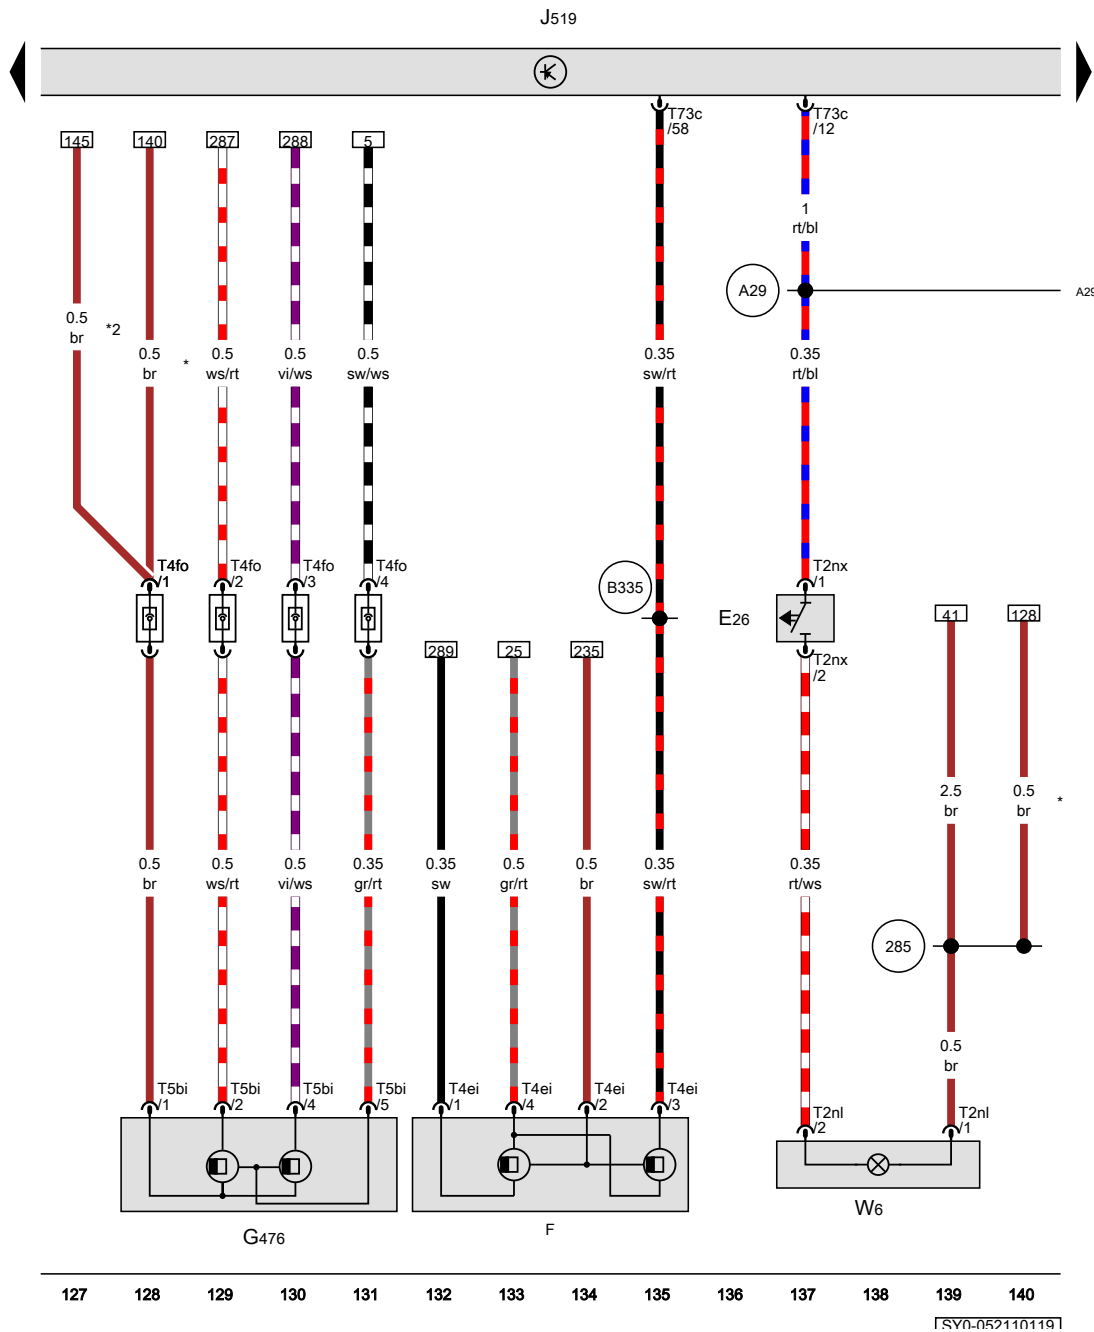


Glove compartment light switch, Brake light switch, Clutch position sender, Onboard supply control unit, Glove compartment light

- E26 Glove compartment light switch
- F Brake light switch
- G476 Clutch position sender
- J519 Onboard supply control unit
- T2nl 2-pin connector, black
- T2nx 2-pin connector, black
- T4ei 4-pin connector, black
- T4fo 4-pin connector, black
- T5bi 5-pin connector, black
- T73c 73-pin connector, black
- W6 Glove compartment light

- 285 Earth connection 7, in interior wiring harness
- A29 Connection (interior light), in dash panel wiring harness
- B335 Connection 1 (54), in main wiring harness
- * For left-hand drive models
- *2 For right-hand drive models

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

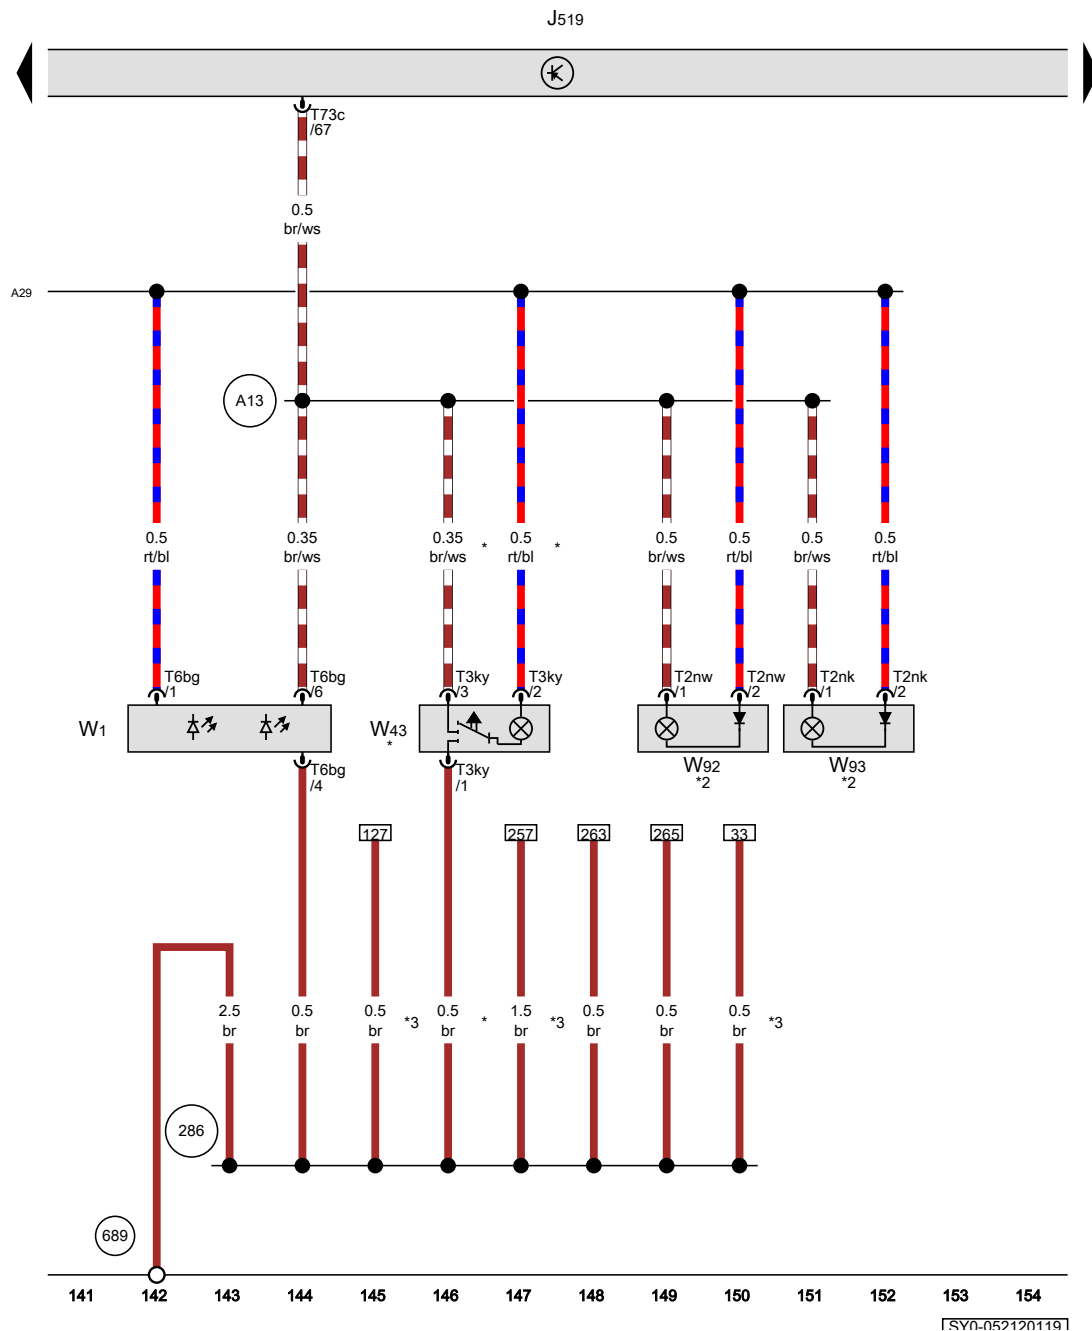


Onboard supply control unit, Front interior light, Rear interior light, Driver side entry light, Passenger side entry light


- J519 Onboard supply control unit
- T2nk 2-pin connector, black
- T2nw 2-pin connector, black
- T3ky 3-pin connector, black
- T6bg 6-pin connector, blue
- T73c 73-pin connector, black
- W1 Front interior light
- W43 Rear interior light
- W92 Driver side entry light
- W93 Passenger side entry light

- 286 Earth connection 8, in interior wiring harness
- 689 Earth point, at front, central in roof
- A13 Connection (door contact switch), in dash panel wiring harness
- A29 Connection (interior light), in dash panel wiring harness
- * For models with double cab
- *2 For models with entry lights
- *3 For right-hand drive models

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

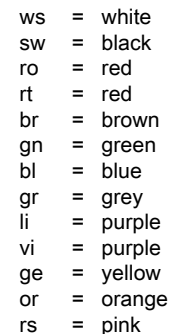

(D207) Connection 7 (87a), in engine compartment wiring harness

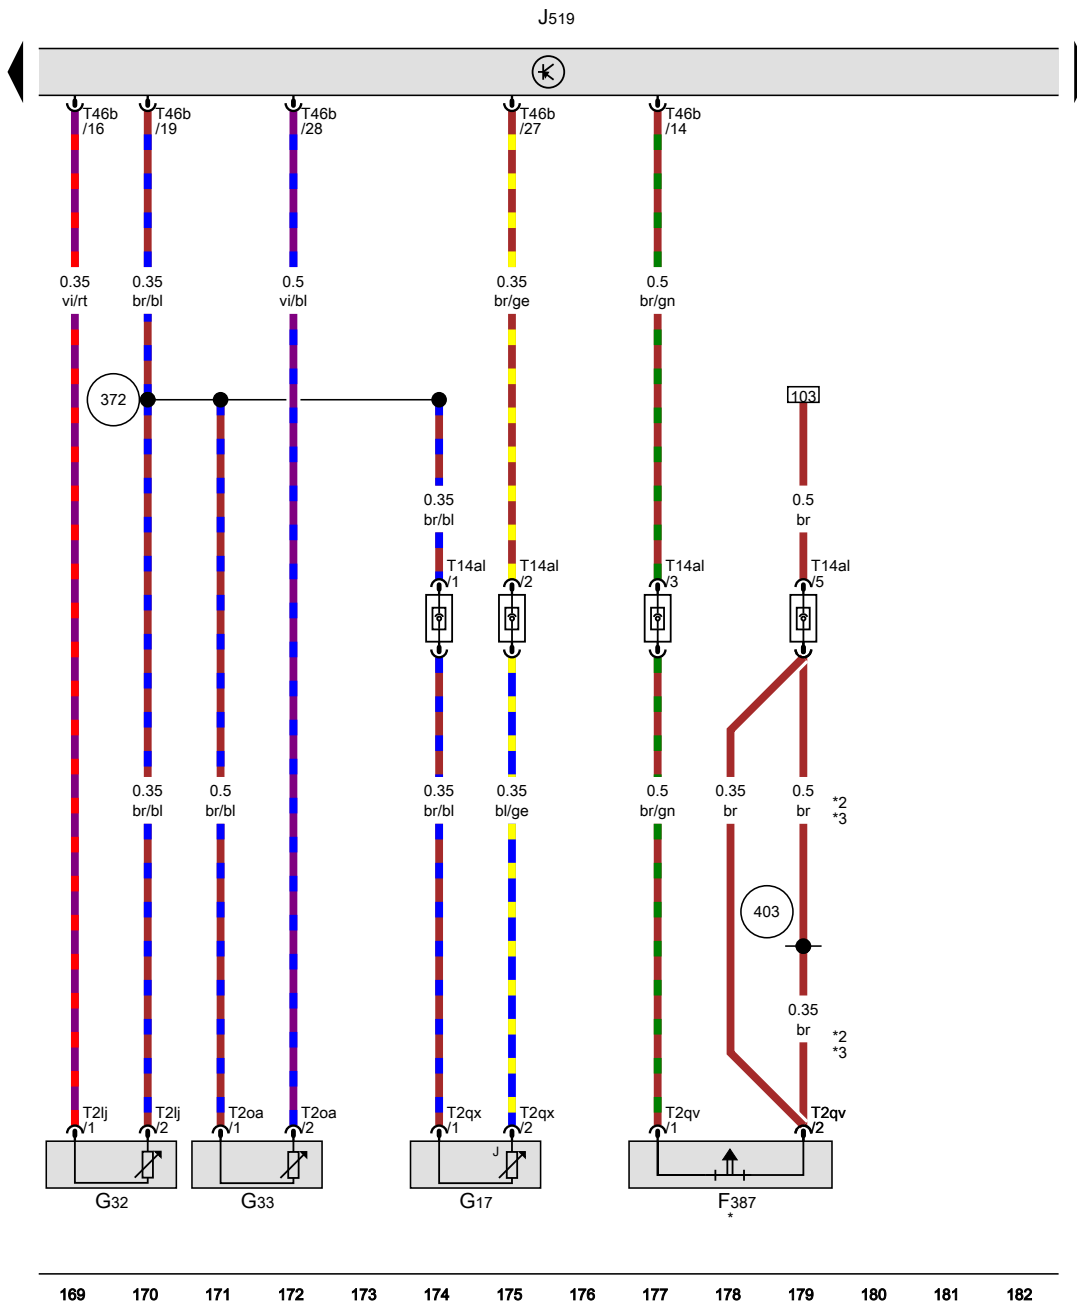

Bonnet contact switch, Ambient temperature sensor, Coolant shortage indicator sender, Windscreen washer fluid level sender, Onboard supply control unit


- F387 Bonnet contact switch
- G17 Ambient temperature sensor
- G32 Coolant shortage indicator sender
- G33 Windscreen washer fluid level sender
- J519 Onboard supply control unit
- T2lj 2-pin connector, black
- T2oa 2-pin connector, black
- T2qv 2-pin connector, black
- T2qx 2-pin connector, black
- T14al 14-pin connector, grey
- T46b 46-pin connector, black

372 Earth connection 7, in main wiring harness

403 Earth connection, in front end wiring harness

- * Pre-wired component
- *2 For models with BlueMotion equipment
- *3 Up to May 2017

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

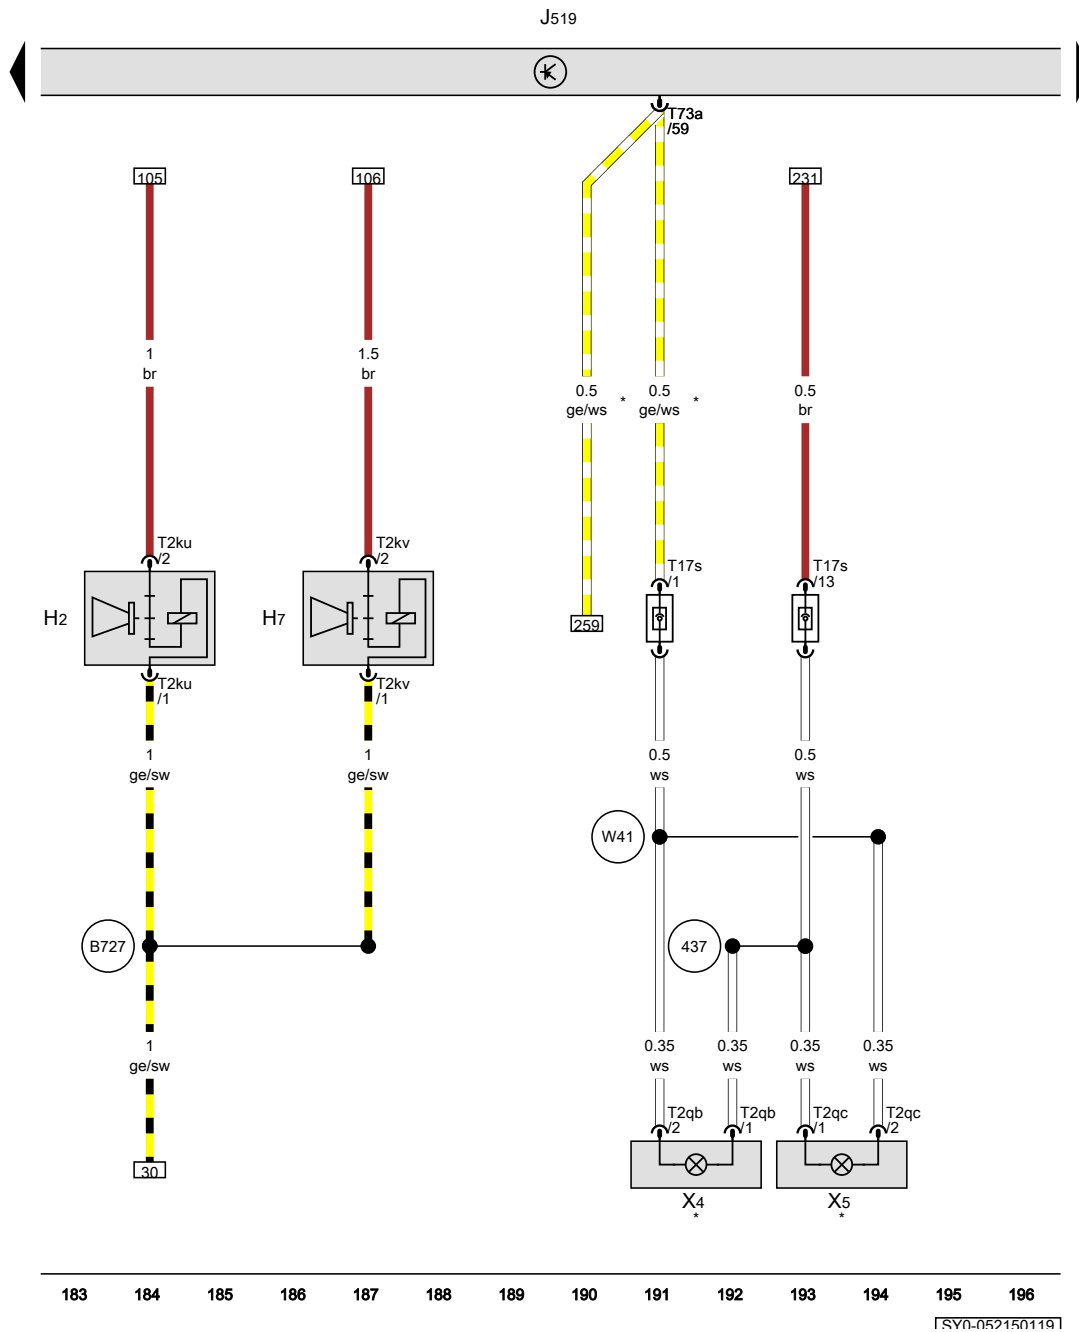


Treble horn, Bass horn, Onboard supply control unit, Left number plate light, Right number plate light

- H2 Treble horn
- H7 Bass horn
- J519 Onboard supply control unit
- T2ku 2-pin connector, black
- T2kv 2-pin connector, black
- T2qb 2-pin connector, black
- T2qc 2-pin connector, black
- T17s 17-pin connector, black
- T73a 73-pin connector, black
- X4 Left number plate light
- X5 Right number plate light

- 437 Earth connection, in number plate wiring harness
- B727 Connection (71a), in main wiring harness
- W41 Positive connection (58), in number plate lights wiring harness
- * For panel van and Kombi models


- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

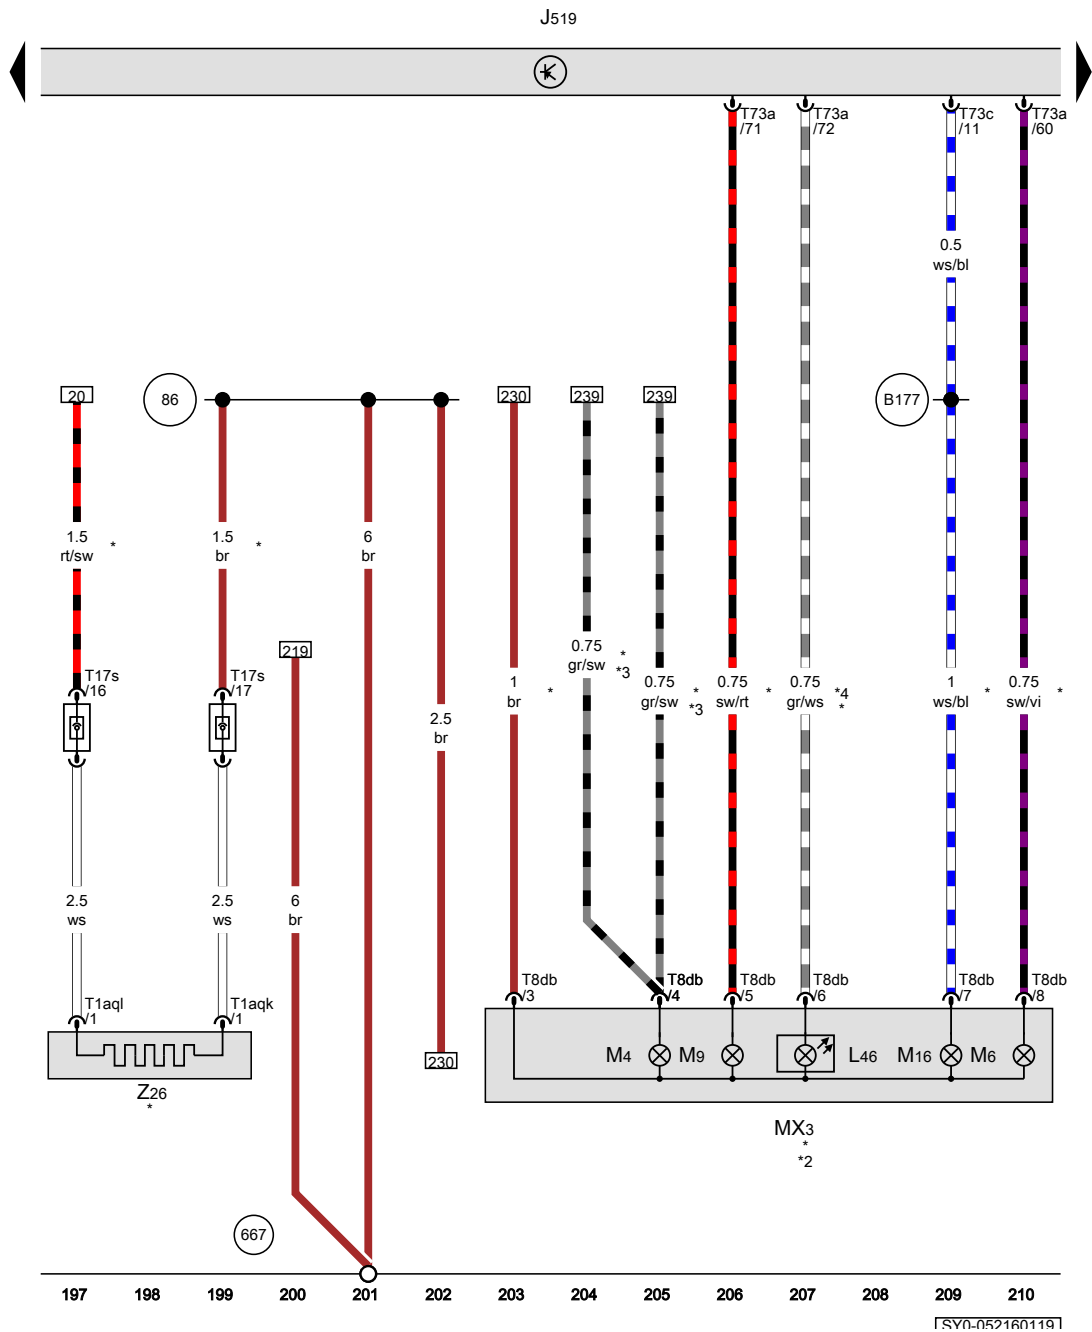

Onboard supply control unit, Left tail light cluster, Heated rear window in left wing door

- J519 Onboard supply control unit
- L46 Rear left fog light bulb
- MX3 Left tail light cluster
- M4 Left tail light bulb
- M6 Rear left turn signal bulb
- M9 Left brake light bulb
- M16 Left reversing light bulb
- T1aqk 1-pin connector
- T1aql 1-pin connector
- T8db 8-pin connector, black
- T17s 17-pin connector, black
- T73a 73-pin connector, black
- T73c 73-pin connector, black
- Z26 Heated rear window in left wing door
- 86 Earth connection 1, in rear wiring harness
- 667 Earth point, on rear left of roof
- B177 Connection (61), in interior wiring harness
- * For panel van and Kombi models
- *2 Not for models with double cab/ dropside
- *3 According to equipment
- *4 For left-hand drive models


- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

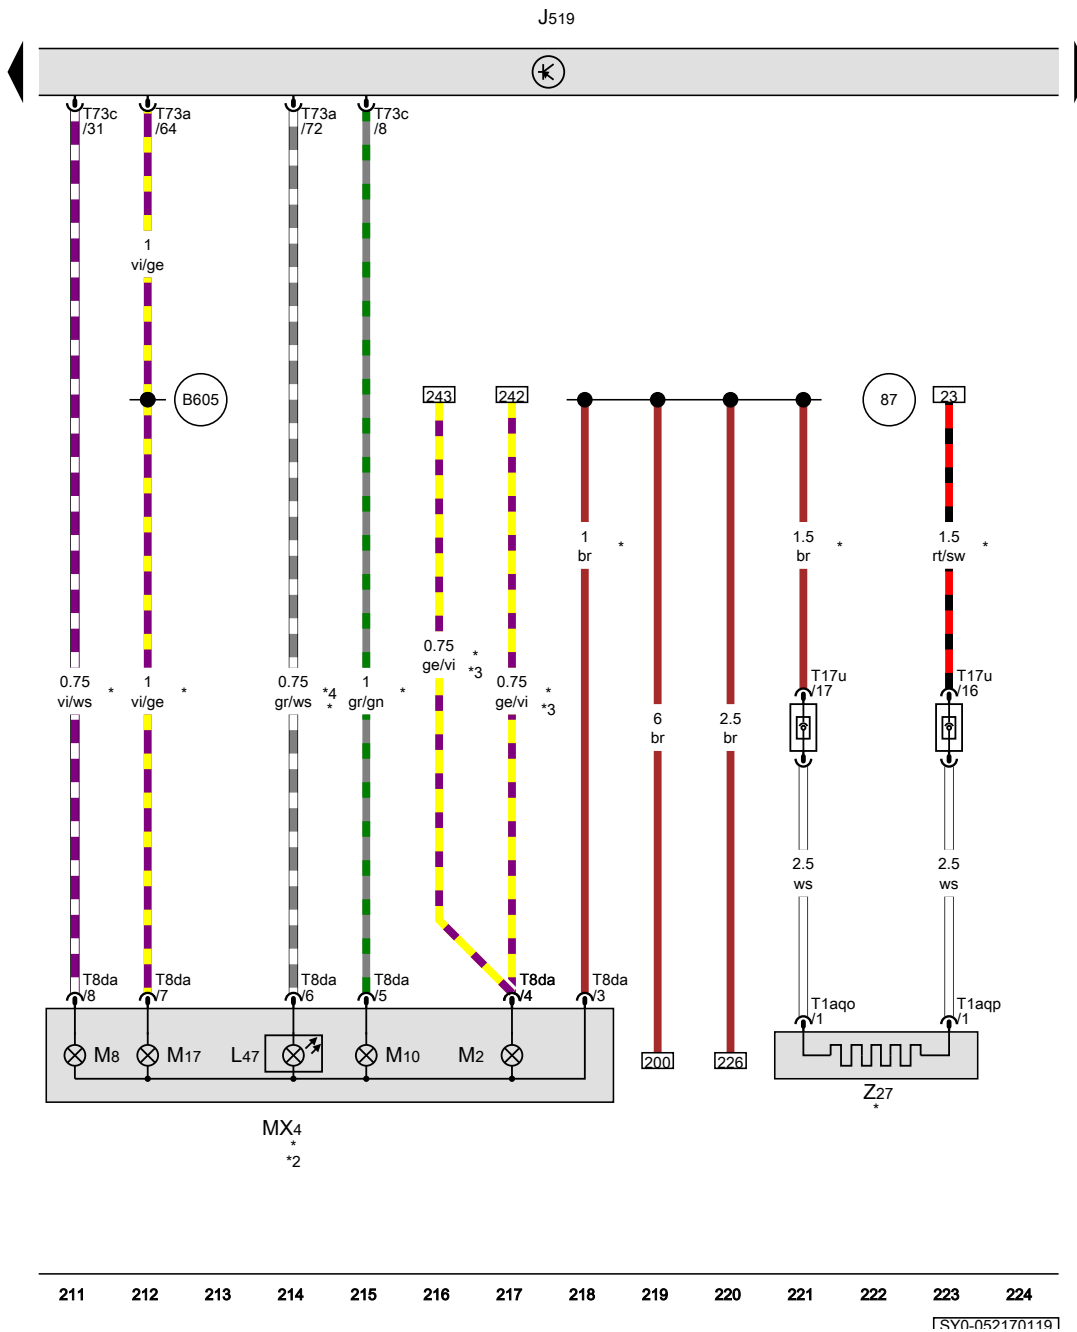

Onboard supply control unit, Right tail light cluster, Heated rear window in right wing door

- J519 Onboard supply control unit
- L47 Rear right fog light bulb
- M2 Right tail light bulb
- MX4 Right tail light cluster
- M8 Rear right turn signal bulb
- M10 Right brake light bulb
- M17 Right reversing light bulb
- T1aqp 1-pin connector
- T1aqp 1-pin connector
- T8da 8-pin connector, black
- T17u 17-pin connector, black
- T73a 73-pin connector, black
- T73c 73-pin connector, black
- Z27 Heated rear window in right wing door
- 87 Earth connection 2, in rear wiring harness
- B605 Connection 1, in interior wiring harness
- * For panel van and Kombi models
- *2 Not for models with double cab/ dropside
- *3 According to equipment
- *4 For right-hand drive models

Brake fluid level warning contact, Onboard supply control unit, Left roof mounted turn signal bulb, Right roof mounted turn signal bulb, High-level brake light bulb

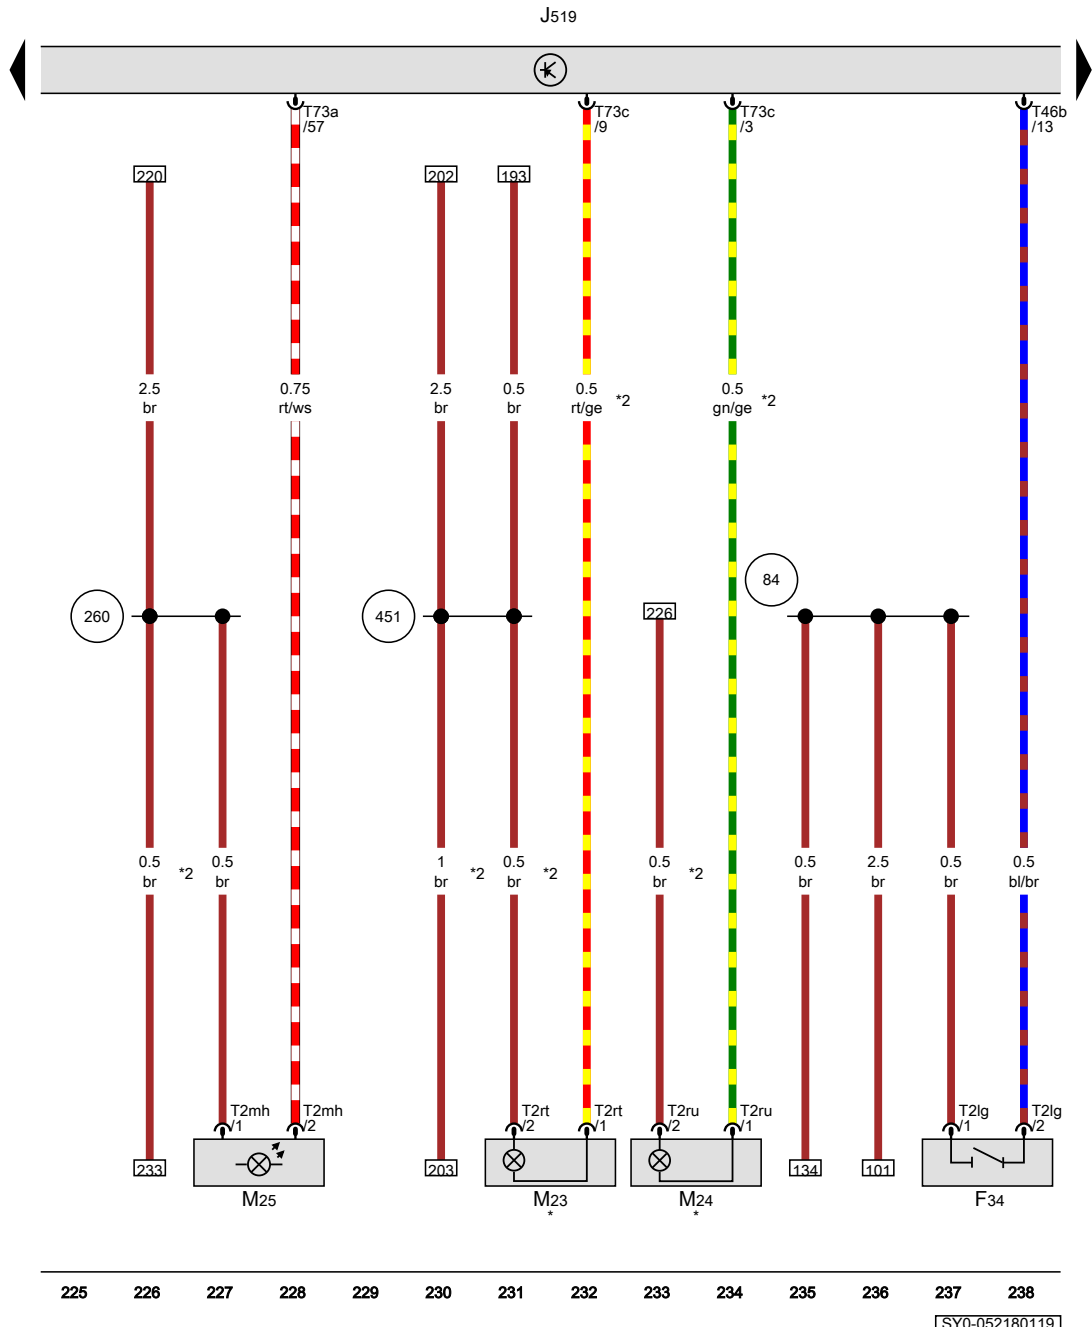


- | | |
|------|-------------------------------------|
| F34 | Brake fluid level warning contact |
| J519 | Onboard supply control unit |
| M23 | Left roof mounted turn signal bulb |
| M24 | Right roof mounted turn signal bulb |
| M25 | High-level brake light bulb |
| T2lg | 2-pin connector, black |
| T2mh | 2-pin connector, green |
| T2rt | 2-pin connector, black |
| T2ru | 2-pin connector, black |
| T46b | 46-pin connector, black |
| T73a | 73-pin connector, black |
| T73c | 73-pin connector, black |

- 84 Earth connection, engine block, in front right wiring harness
- 260 Earth connection, in tail light cluster wiring harness
- 451 Earth connection 1 in rear right side panel

- * Pre-wired component
*2 For panel van and Kombi models

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink

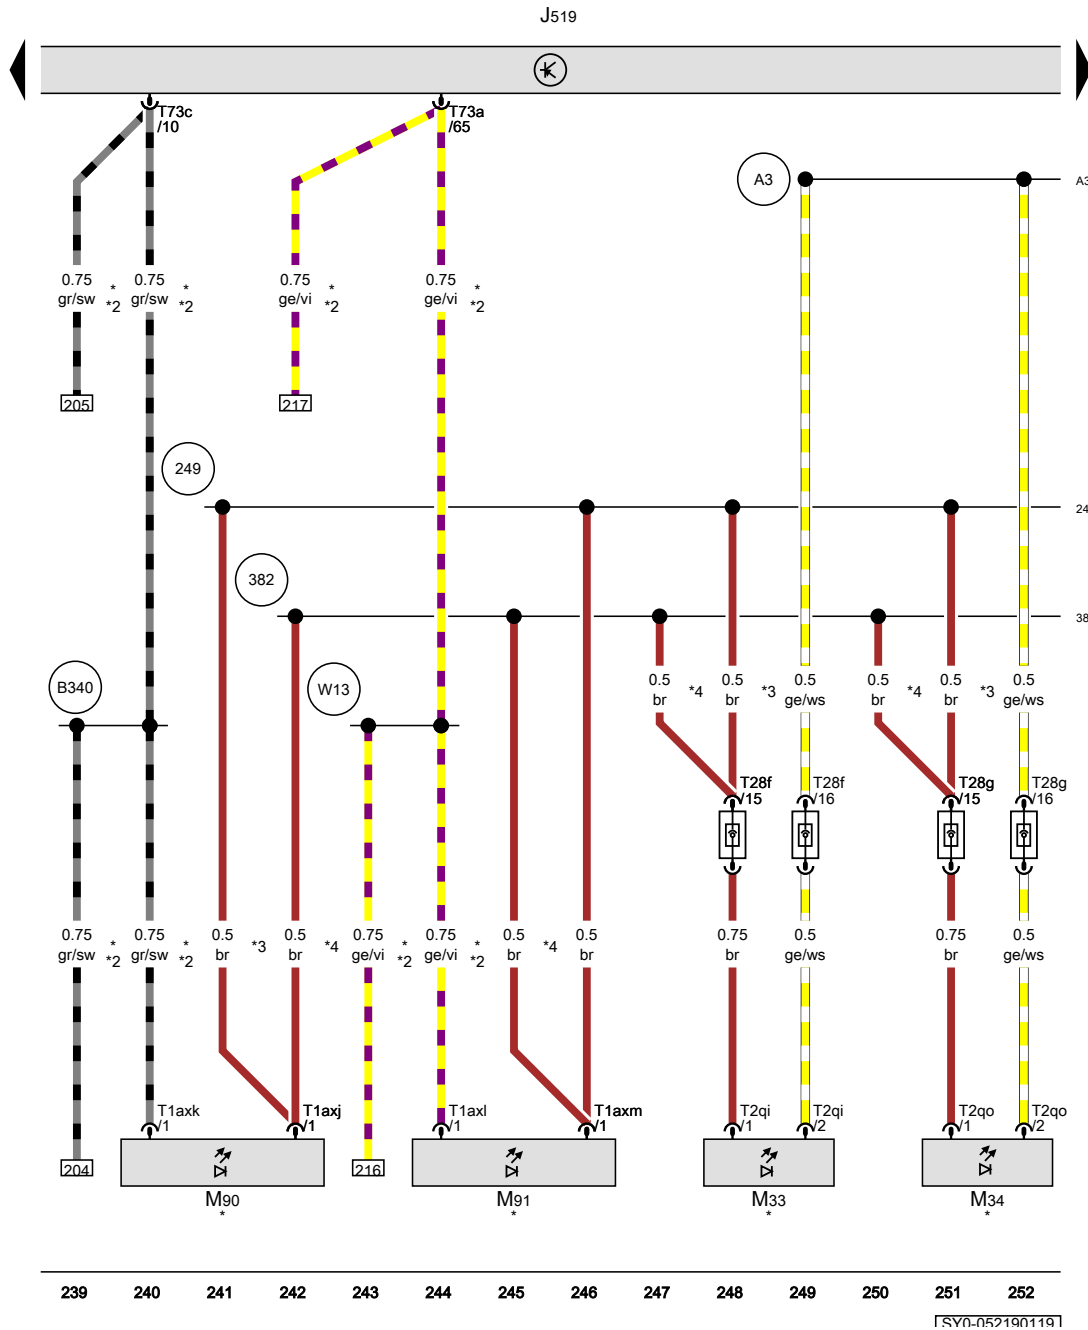


Onboard supply control unit, Front left side marker bulb, Front right side marker bulb, Elevated side light, front left, Elevated side light, front right

- J519 Onboard supply control unit
- M33 Front left side marker bulb
- M34 Front right side marker bulb
- M90 Elevated side light, front left
- M91 Elevated side light, front right
- T1axj 1-pin connector
- T1axk 1-pin connector
- T1axl 1-pin connector
- T1axm 1-pin connector
- T2qi 2-pin connector, black
- T2qo 2-pin connector, black
- T28f 28-pin connector, black
- T28g 28-pin connector, black
- T73a 73-pin connector, black
- T73c 73-pin connector, black

- 249 Earth connection 2, in interior wiring harness
- 382 Earth connection 17, in main wiring harness
- A3 Positive connection (58), in dash panel wiring harness
- B340 Connection 1 (58d), in main wiring harness
- W13 Connection (58L), in rear wiring harness

- * For panel van and Kombi models
- *2 According to equipment
- *3 For left-hand drive models
- *4 For right-hand drive models

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink

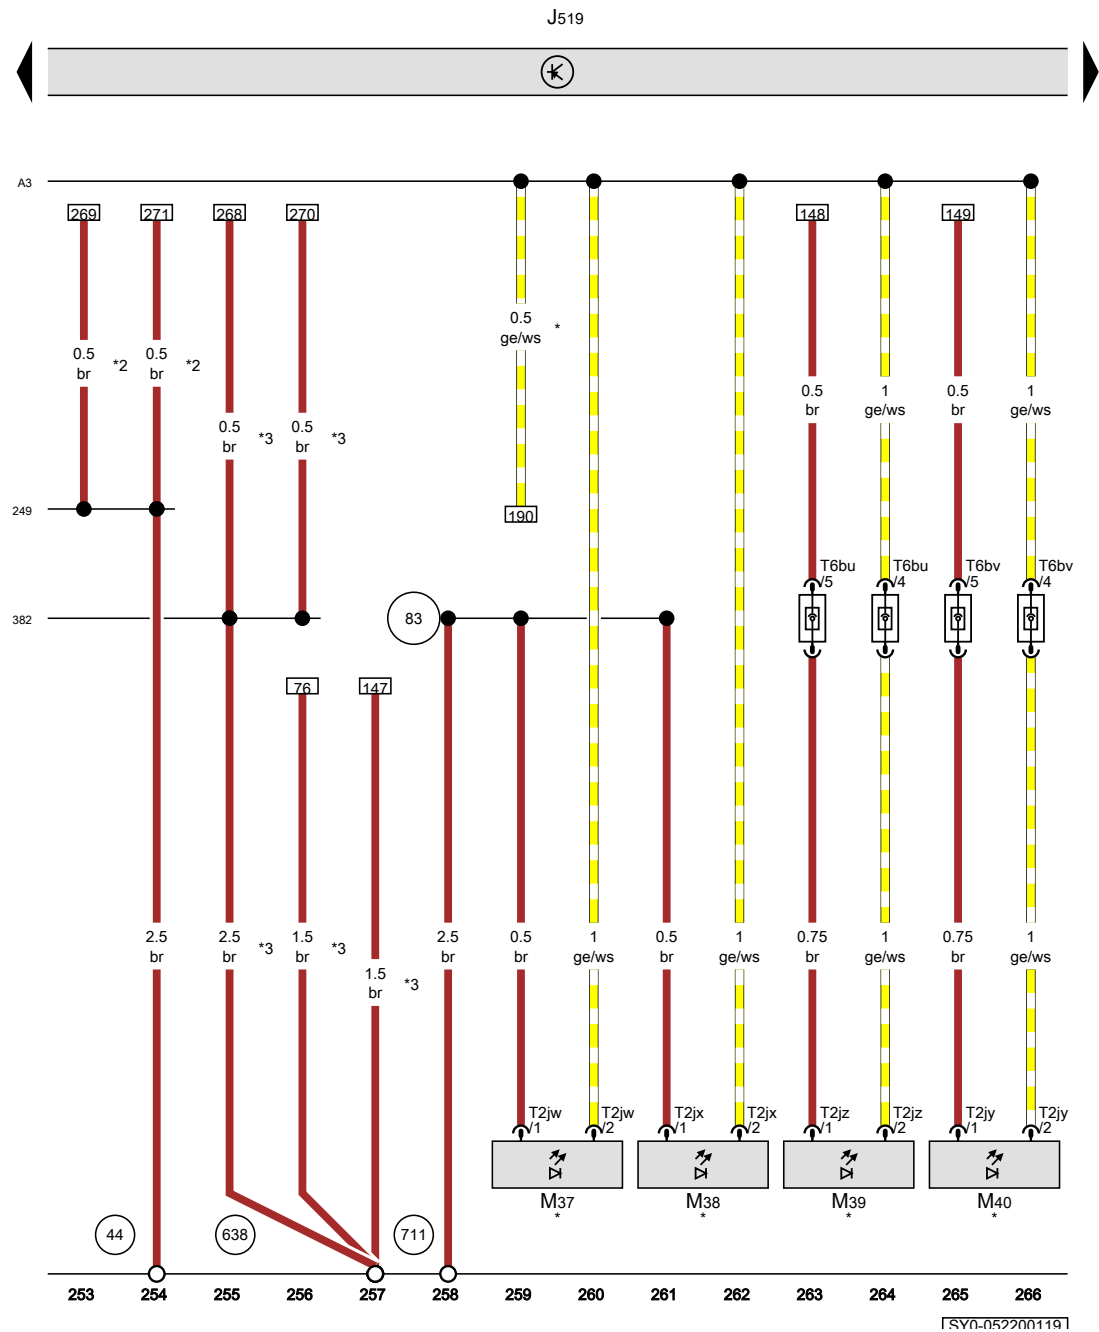

Onboard supply control unit, Rear left side marker bulb, Rear right side marker bulb, Centre left side marker bulb, Centre right side marker bulb


- J519 Onboard supply control unit
- M37 Rear left side marker bulb
- M38 Rear right side marker bulb
- M39 Centre left side marker bulb
- M40 Centre right side marker bulb
- T2jw 2-pin connector, black
- T2jx 2-pin connector, black
- T2jy 2-pin connector, black
- T2jz 2-pin connector, black
- T6bu 6-pin connector, black
- T6bv 6-pin connector, black

- 44 Earth point, lower part of left A-pillar
- 83 Earth connection 1, in front right wiring harness
- 249 Earth connection 2, in interior wiring harness
- 382 Earth connection 17, in main wiring harness
- 638 Earth point, on right A-pillar
- 711 Earth point 3 on rear left longitudinal member
- A3 Positive connection (58), in dash panel wiring harness
- * For panel van and Kombi models
- *2 For left-hand drive models
- *3 For right-hand drive models

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

Onboard supply control unit, Data bus diagnostic interface


- J519 Onboard supply control unit
- J533 Data bus diagnostic interface
- T20h 20-pin connector, red
- T73a 73-pin connector, black
- A146 Connection (convenience CAN bus, high), in dash panel wiring harness
- A147 Connection (convenience CAN bus, low), in dash panel wiring harness
- A209 Connection 1 (LIN bus) in dash panel wiring harness
- * For left-hand drive models
- *2 For right-hand drive models

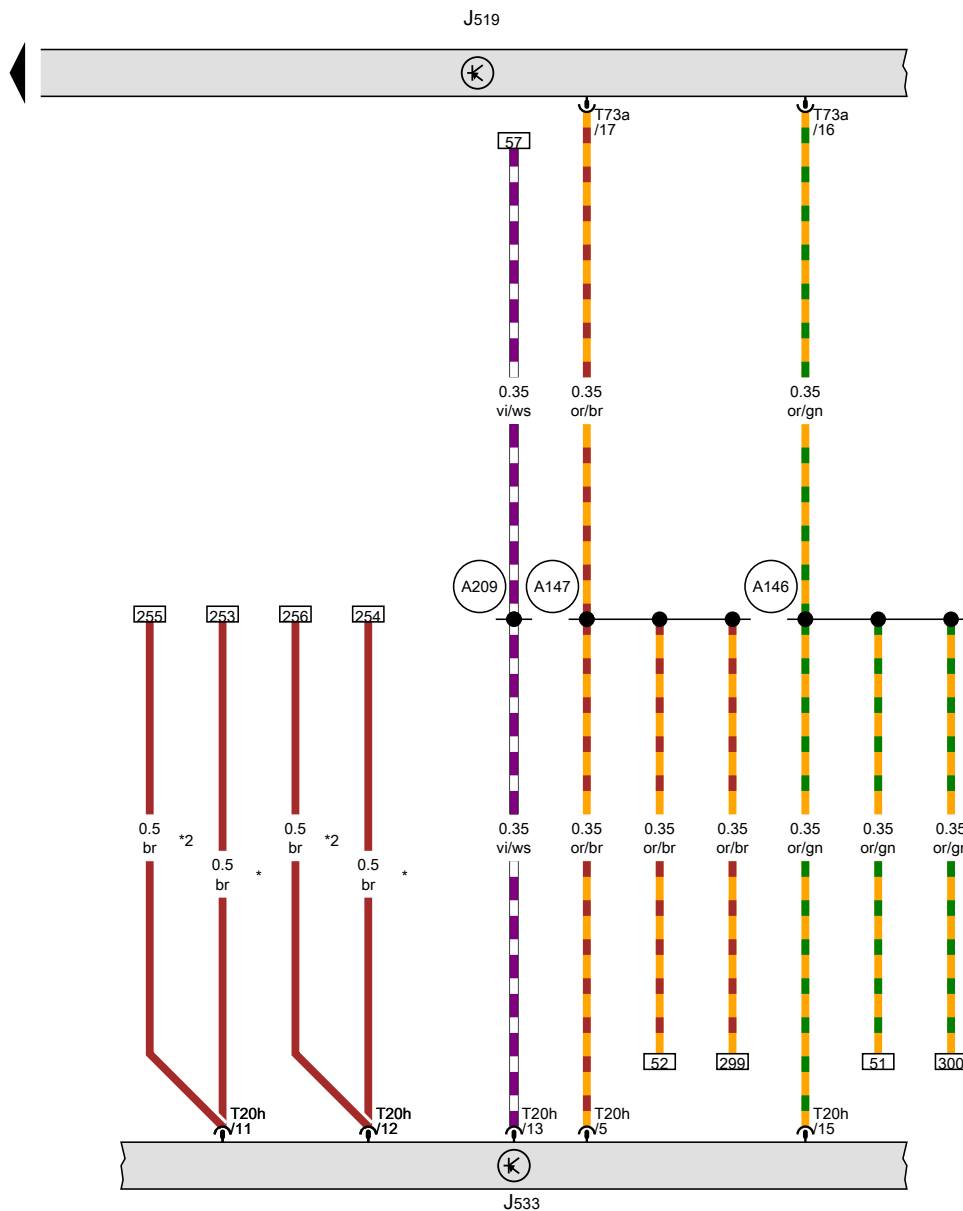


ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

Engine/motor control unit

J623 Engine/motor control unit
 T94b 94-pin connector, black
 * For models with cruise control system (CCS)

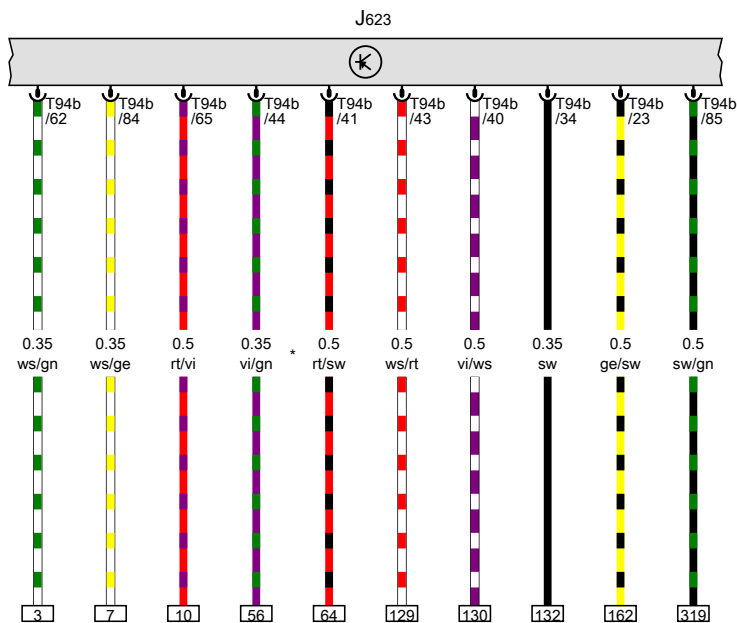

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

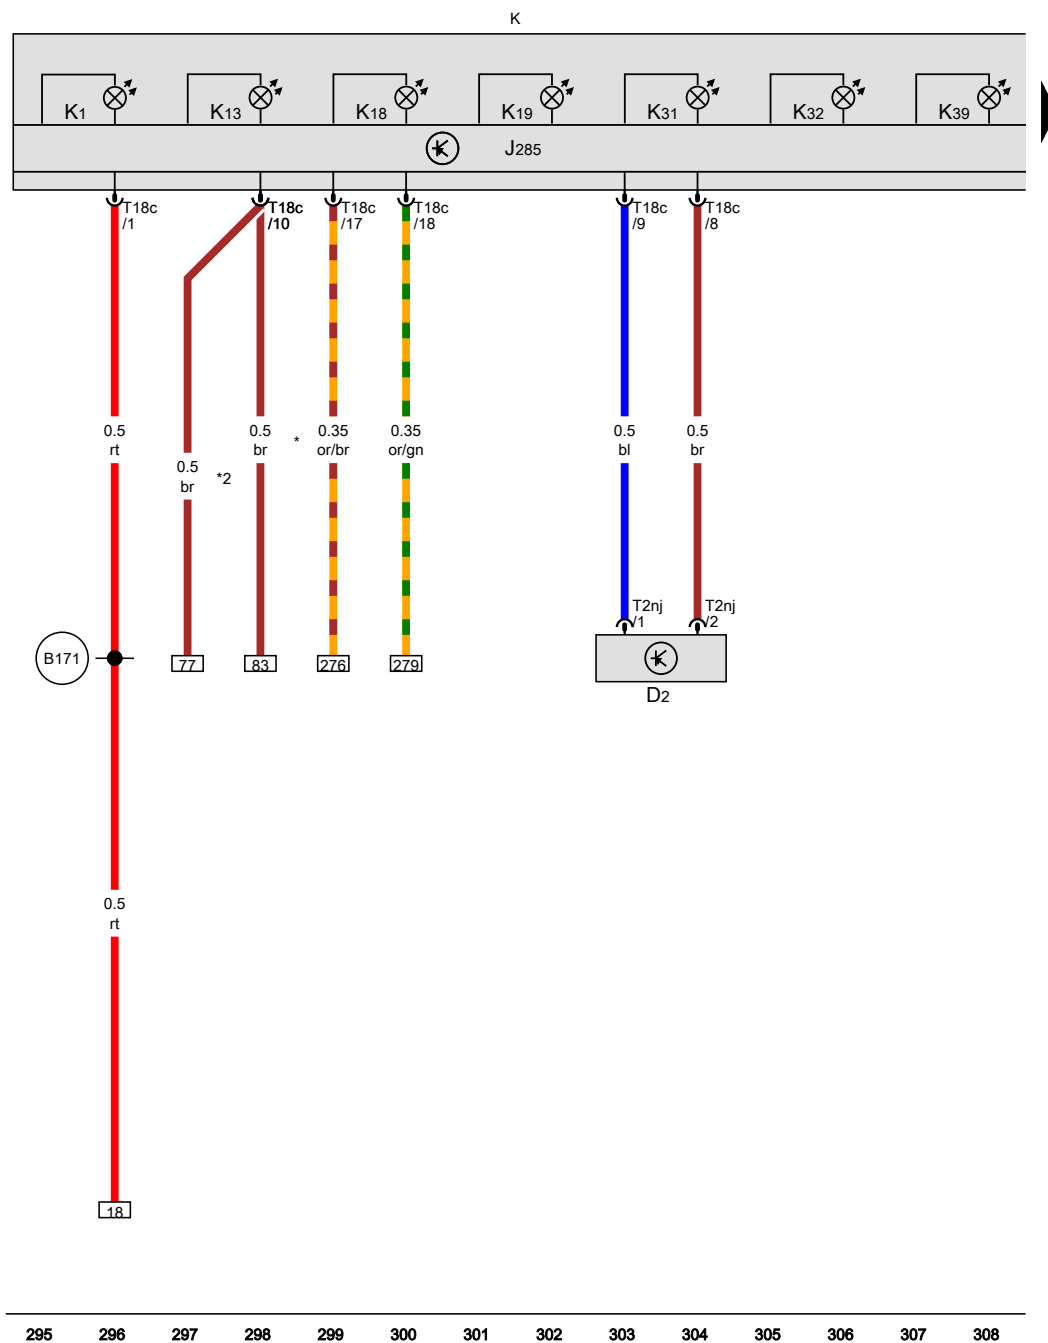


Immobiliser reader coil, Dash panel insert

- D2 Immobiliser reader coil
- J285 Control unit in dash panel insert
- K Dash panel insert
- K1 Main beam warning lamp
- K13 Rear fog light warning lamp
- K18 Trailer operation warning lamp
- K19 Seat belt warning system warning lamp
- K31 Cruise control system warning lamp
- K32 Brake pad warning lamp
- K39 Central warning lamp in display unit
- T2nj 2-pin connector, black
- T18c 18-pin connector, black

B171 Positive connection 3 (30), in interior wiring harness

- * For left-hand drive models
- *2 For right-hand drive models

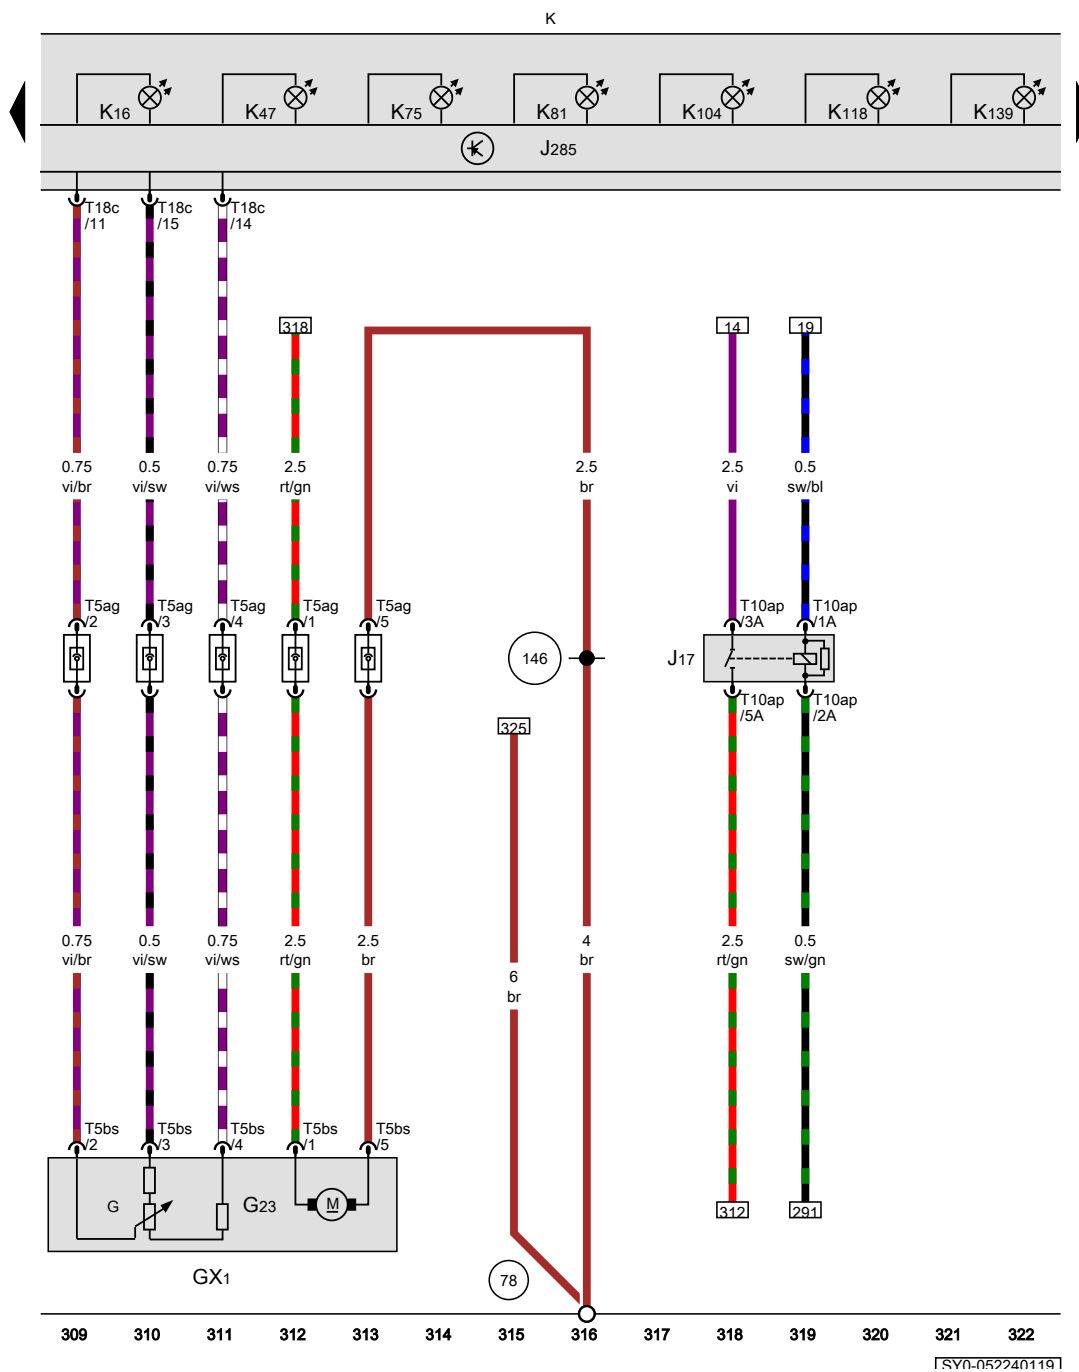


Fuel delivery unit, Fuel pump relay, Dash panel insert

- G Fuel gauge sender
- GX1 Fuel delivery unit
- G23 Fuel pump
- J17 Fuel pump relay
- J285 Control unit in dash panel insert
- K Dash panel insert
- K16 Reserve fuel warning lamp
- K47 ABS warning lamp
- K75 Airbag warning lamp
- K81 Differential lock warning lamp
- K104 Diesel electronics warning lamp
- K118 Brake system warning lamp
- K139 Handbrake warning lamp
- T5ag 5-pin connector, black
- T5bs 5-pin connector, black
- T10ap 10-pin connector, black
- T18c 18-pin connector, black

78 Earth point, lower part of right B-pillar

146 Earth connection 1, in auxiliary heater wiring harness

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

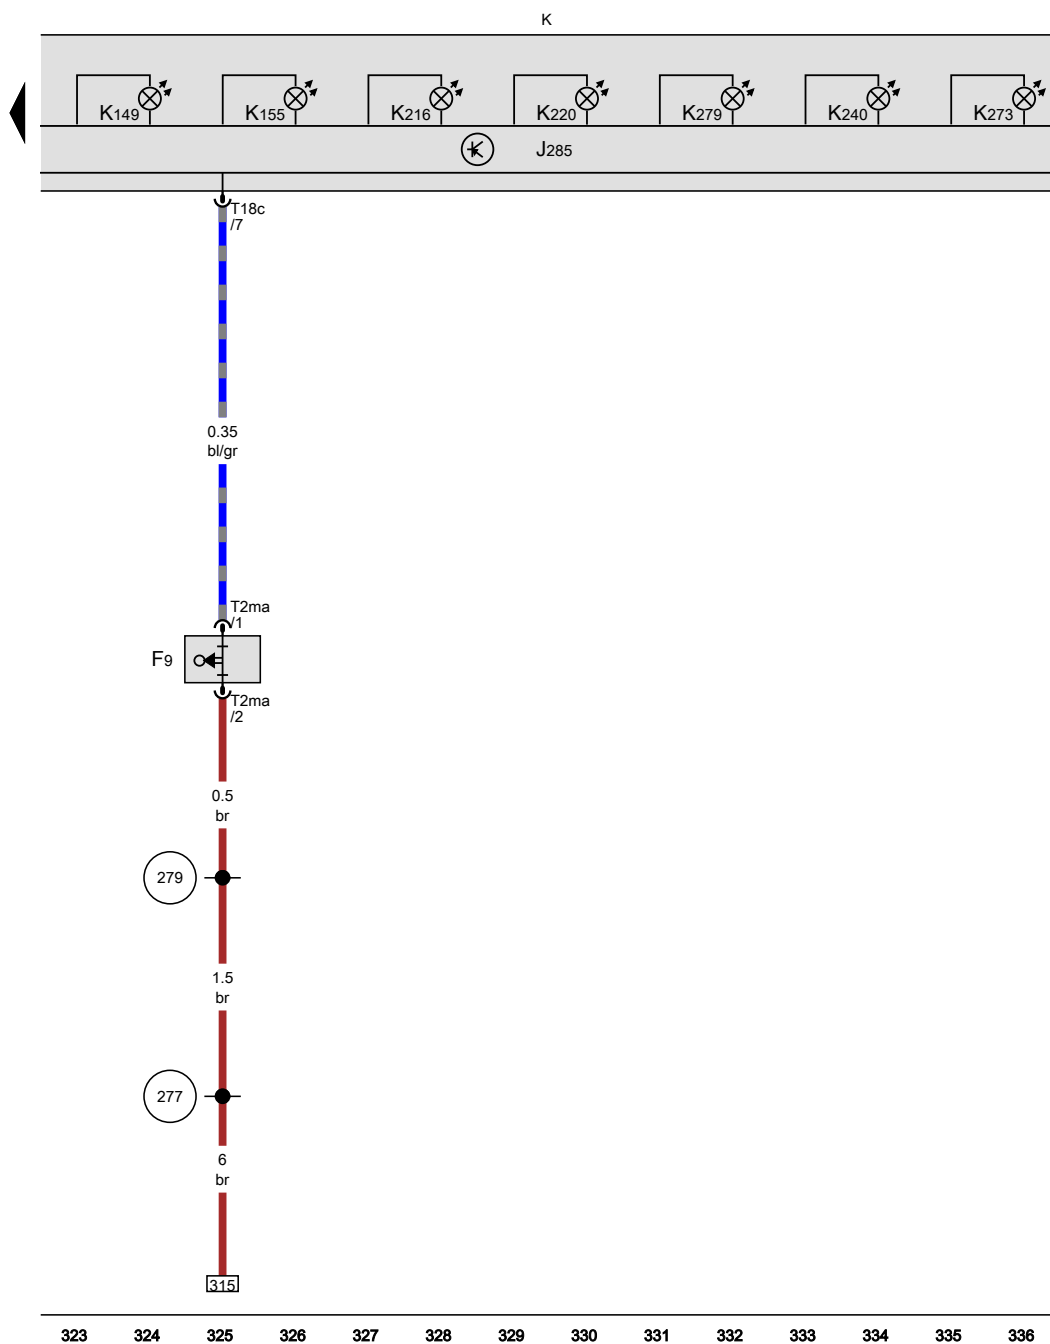

Handbrake warning switch, Dash panel insert

- F9 Handbrake warning switch
- J285 Control unit in dash panel insert
- K Dash panel insert
- K149 Engine electronics warning lamp
- K155 Warning lamp for electronic stabilisation program and TCS
- K216 Warning lamp 2 for electronic stabilisation program and TCS
- K220 Tyre Pressure Loss Indicator warning lamp
- K240 Lane departure warning lamp
- K273 Brake prompt warning lamp
- K279 Electrohydraulic power steering warning lamp
- T2ma 2-pin connector, black
- T18c 18-pin connector, black


277 Earth connection 3, in interior wiring harness

279 Earth connection 5, in interior wiring harness

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

2.0l diesel engine , DAVA

From May 2017

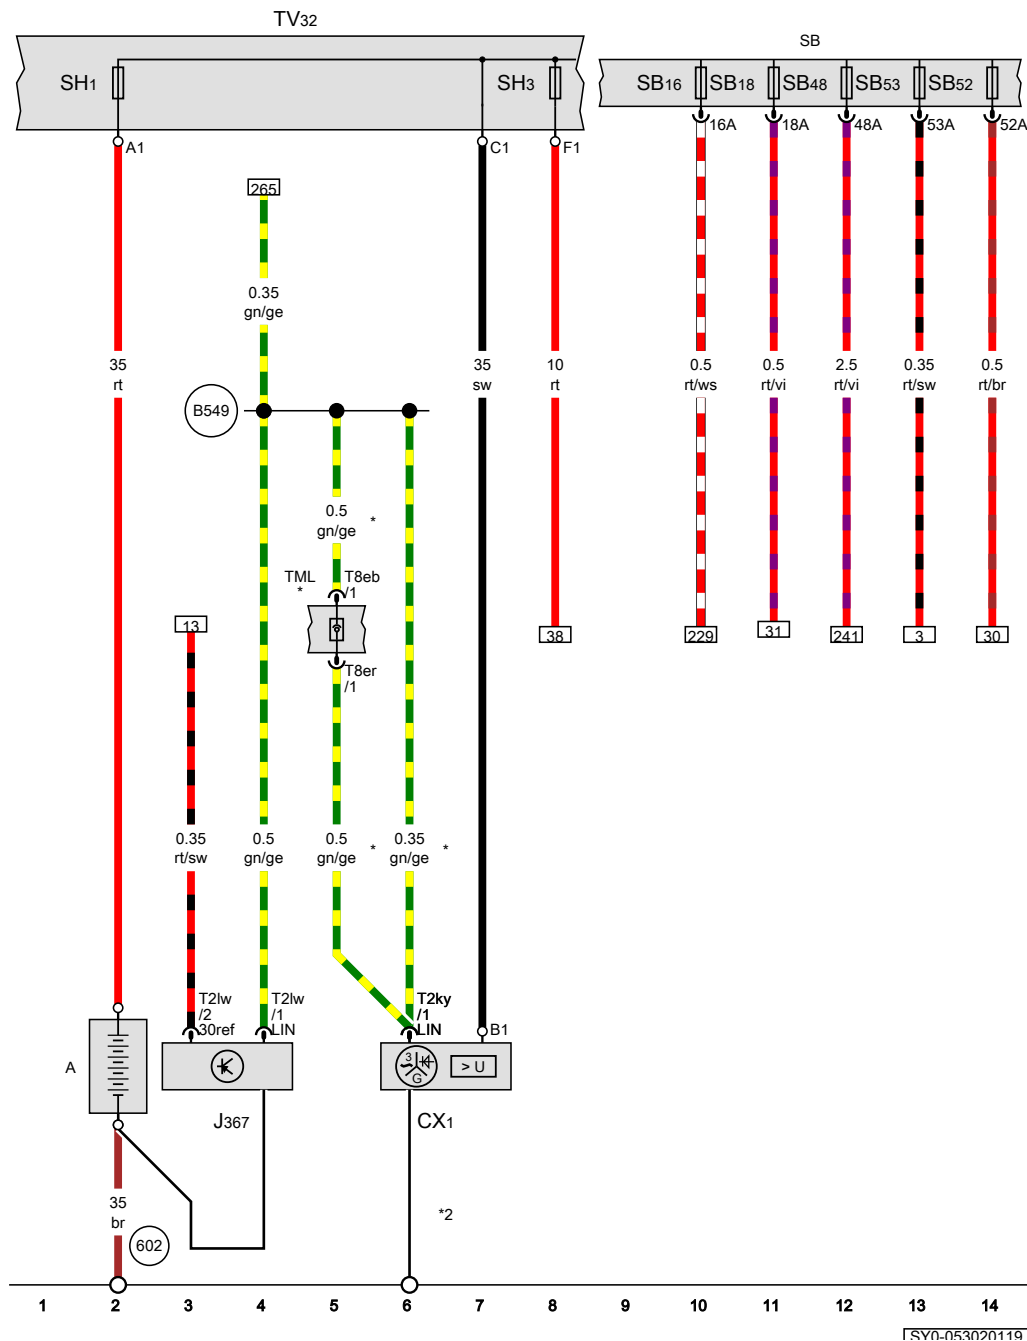

Battery, Alternator with voltage regulator, Fuse holder B, Jump start connection

- A Battery
- CX1 Alternator with voltage regulator
- J367 Battery monitor control unit
- SB Fuse holder B
- SH1 Fuse 1 in fuse holder H
- SH3 Fuse 3 in fuse holder H
- SB16 Fuse 16 on fuse holder B
- SB18 Fuse 18 on fuse holder B
- SB48 Fuse 48 on fuse holder B
- SB52 Fuse 52 on fuse holder B
- SB53 Fuse 53 on fuse holder B
- T2ky 2-pin connector, black
- T2lw 2-pin connector, black
- T8eb 8-pin connector, black
- T8er 8-pin connector, black
- TML Coupling point in engine compartment, left
- TV32 Jump start connection


602 Earth point, in front left footwell

B549 Connection 2 (LIN bus) in main wiring harness

* According to equipment

*2 Earth supply via housing

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink

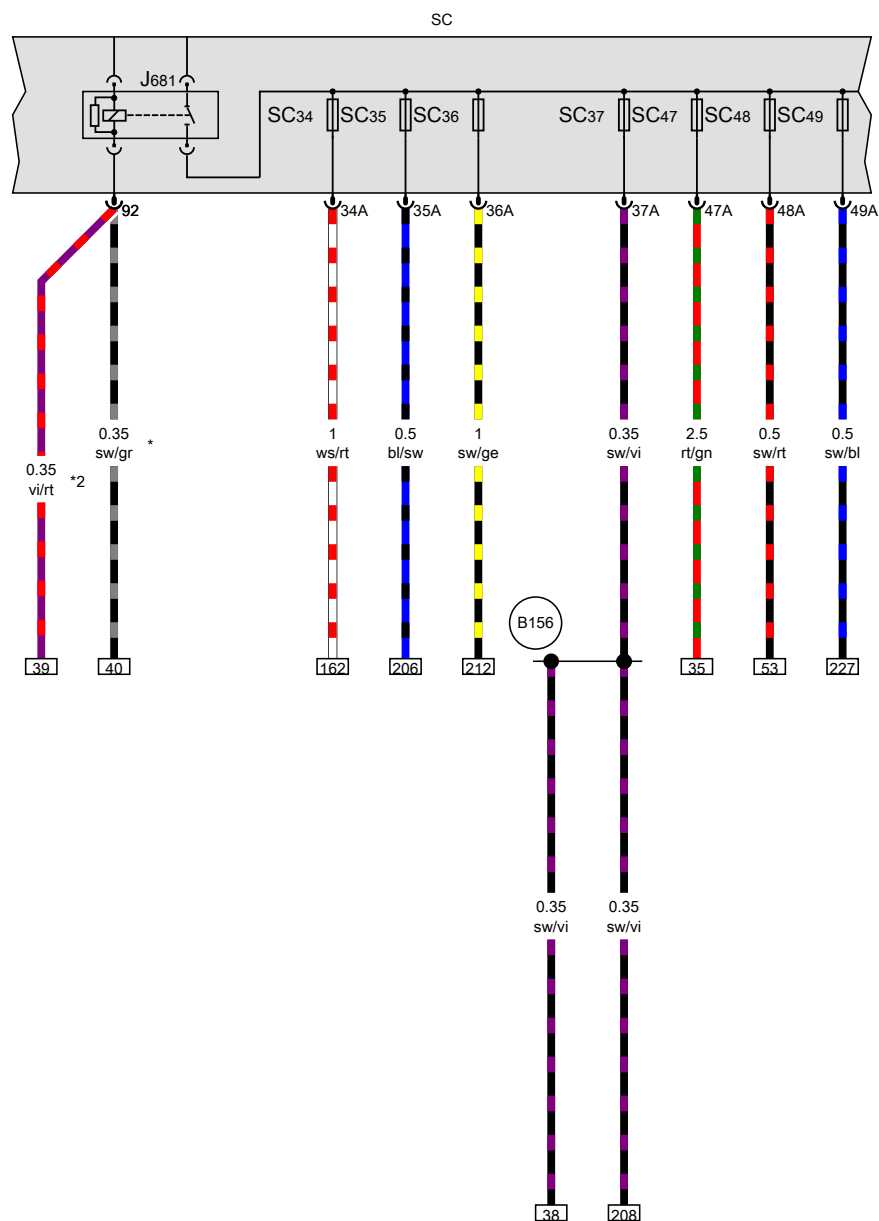

Fuse holder C

J681 Terminal 15 voltage supply relay 2

SC Fuse holder C

SC34 Fuse 34 on fuse holder C

SC35 Fuse 35 on fuse holder C

SC36 Fuse 36 on fuse holder C

SC37 Fuse 37 on fuse holder C

SC47 Fuse 47 on fuse holder C

SC48 Fuse 48 on fuse holder C

SC49 Fuse 49 on fuse holder C

B156 Positive connection (30a), in interior wiring harness

* Up to November 2017

*2 From November 2017

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink

Automatic glow period control unit, Engine/motor control unit

J179 Automatic glow period control unit
J623 Engine/motor control unit
T11b 11-pin connector
T94b 94-pin connector, black

84 Earth connection, engine block, in front right wiring harness

179 Earth connection, in left headlight wiring harness


655 Earth point, on left headlight

A23 Connection (30al), in dash panel wiring harness


D180 Connection (87a), in engine compartment wiring harness

* Up to November 2017

*2 From November 2017

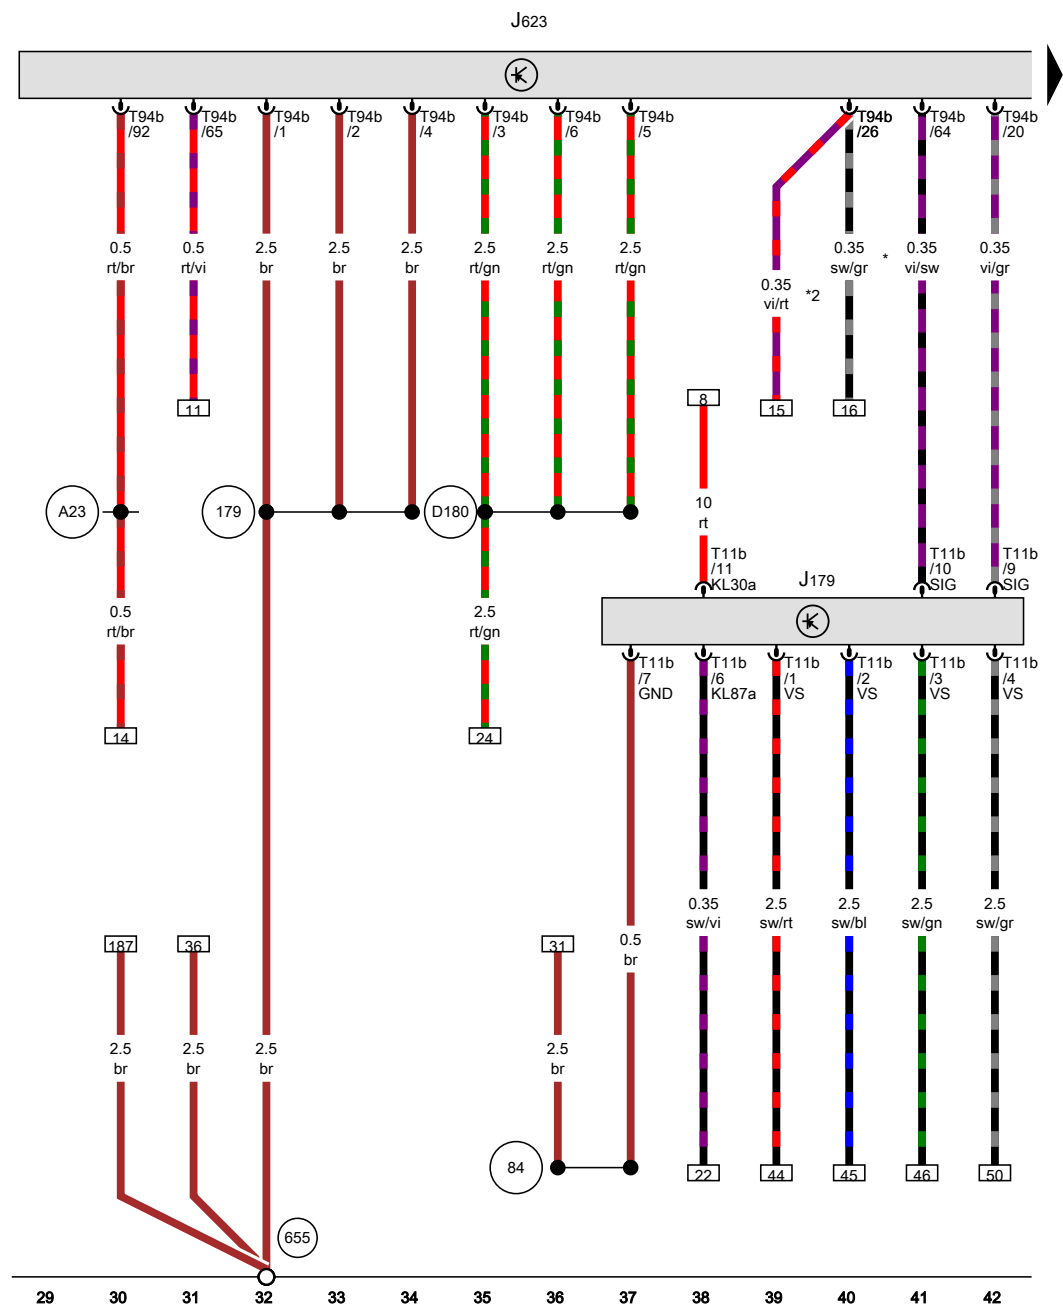


ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink

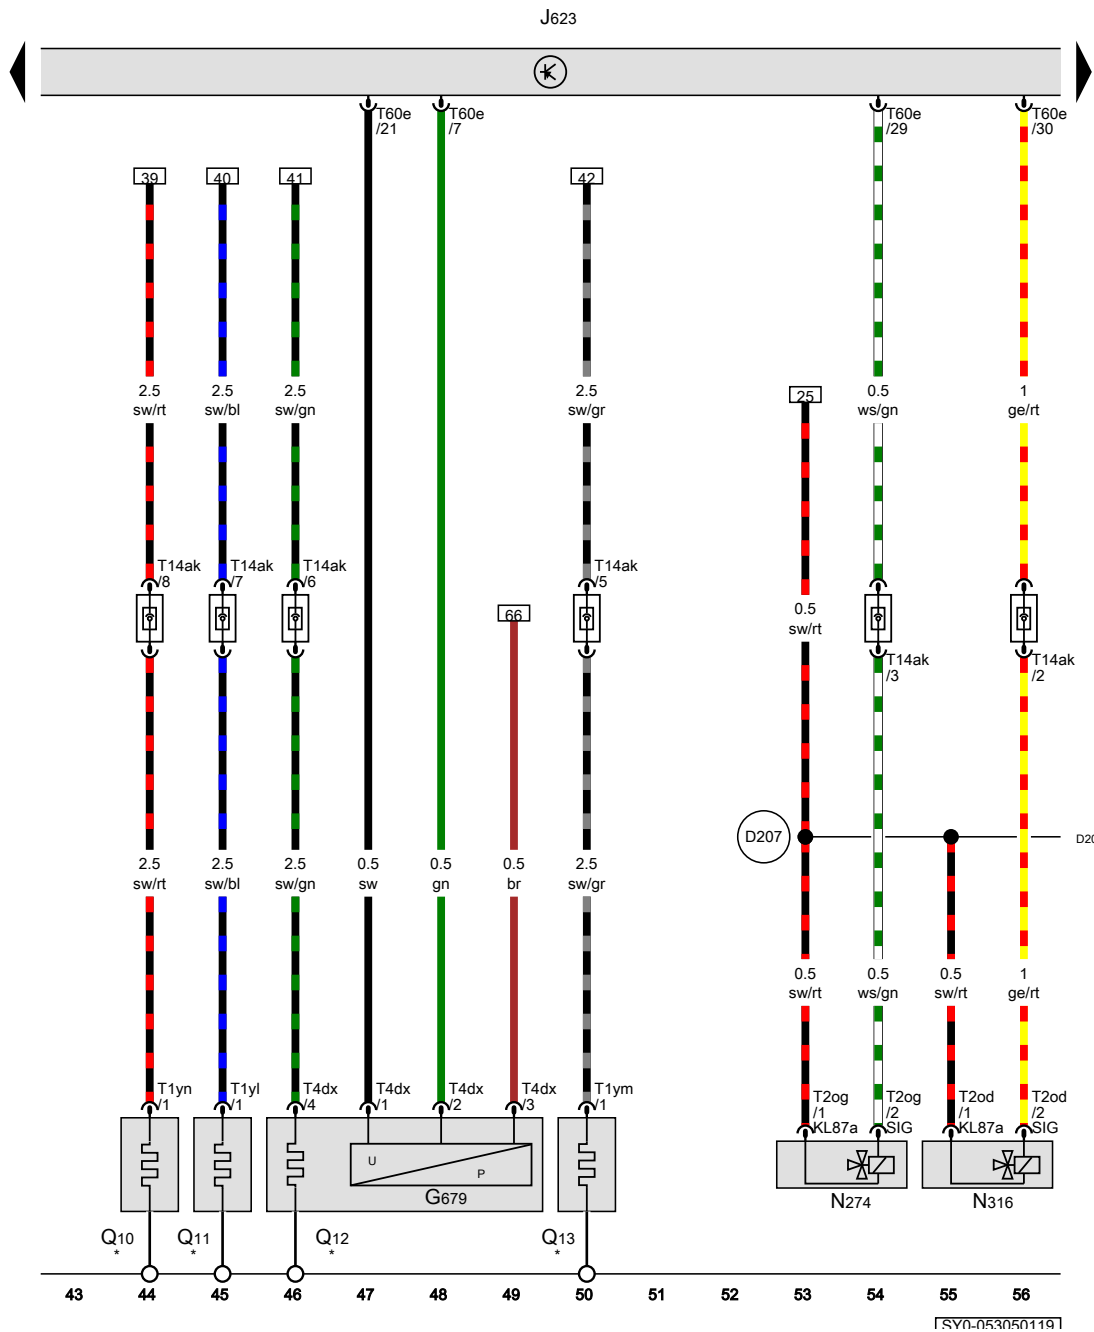

Engine/motor control unit, Charge pressure control solenoid valve 2, Intake manifold flap valve, Glow plug 1, Glow plug 2, Glow plug 3, Glow plug 4

- G679 Cylinder 3 combustion chamber pressure sender
- J623 Engine/motor control unit
- N274 Charge pressure control solenoid valve 2
- N316 Intake manifold flap valve
- Q10 Glow plug 1
- Q11 Glow plug 2
- Q12 Glow plug 3
- Q13 Glow plug 4
- T1yl 1-pin connector
- T1ym 1-pin connector
- T1yn 1-pin connector
- T2od 2-pin connector, black
- T2og 2-pin connector, black
- T4dx 4-pin connector, black
- T14ak 14-pin connector, grey
- T60e 60-pin connector, black
- D207 Connection 7 (87a), in engine compartment wiring harness
- * Earth supply via housing

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

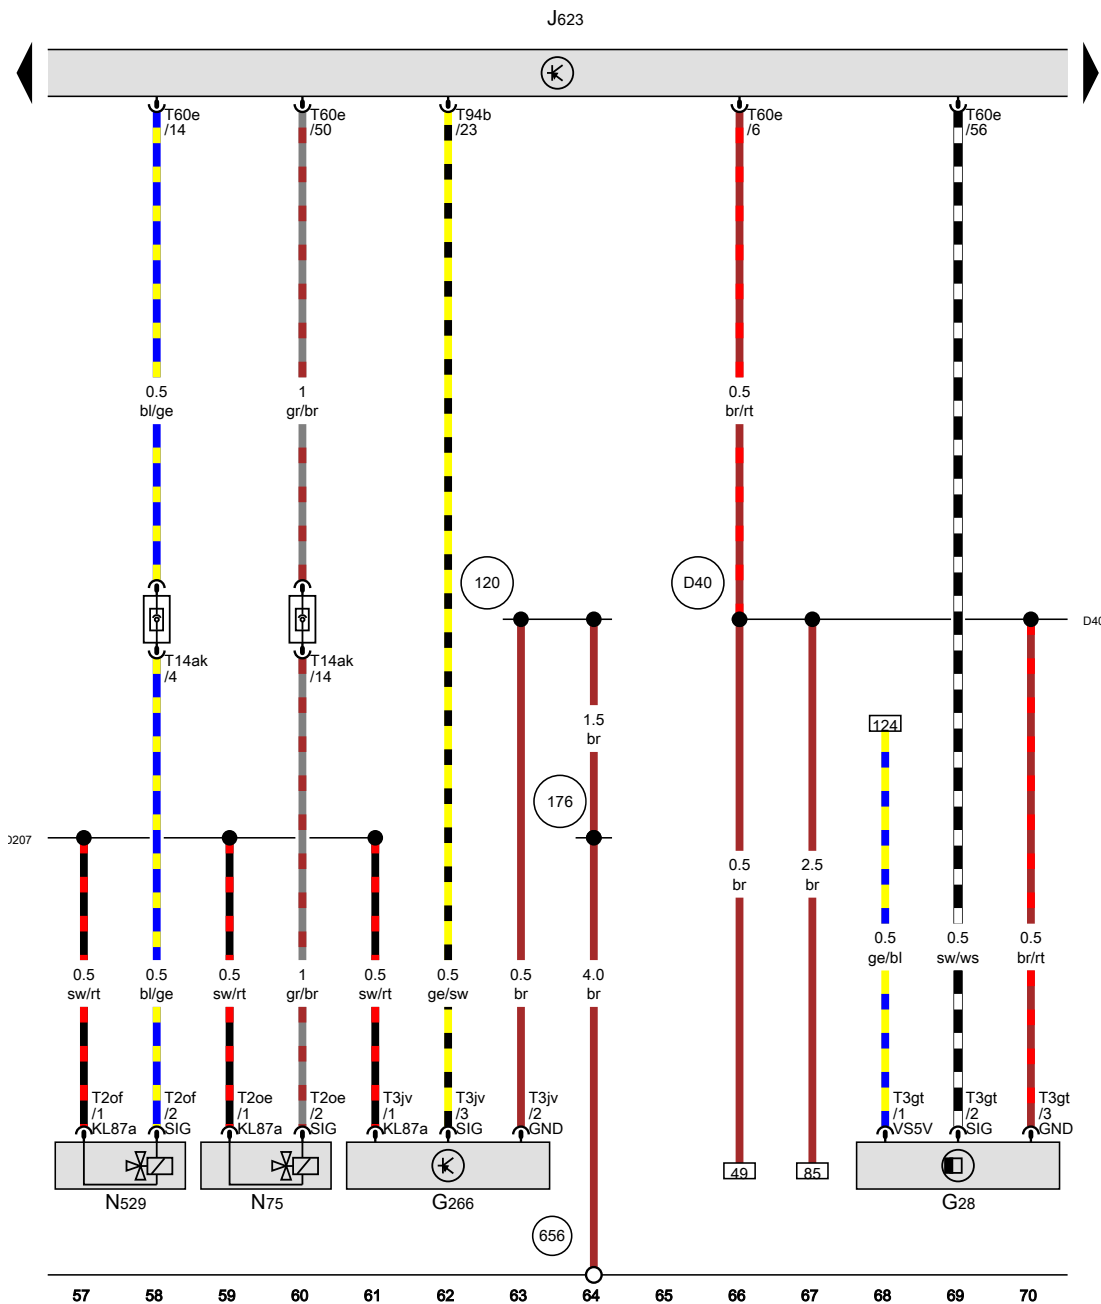


Engine speed sender, Oil level and oil temperature sender, Engine/motor control unit, Charge pressure control solenoid valve, Turbine changeover valve

- G28 Engine speed sender
- G266 Oil level and oil temperature sender
- J623 Engine/motor control unit
- N75 Charge pressure control solenoid valve
- N529 Turbine changeover valve
- T2oe 2-pin connector, black
- T2of 2-pin connector, black
- T3gt 3-pin connector, black
- T3jv 3-pin connector, black
- T14ak 14-pin connector, grey
- T60e 60-pin connector, black
- T94b 94-pin connector, black

- 120 Earth connection 2, in headlight wiring harness
- 176 Earth connection, in right headlight wiring harness
- 656 Earth point, on right headlight
- D40 Connection 2, in engine prewiring harness
- D207 Connection 7 (87a), in engine compartment wiring harness

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

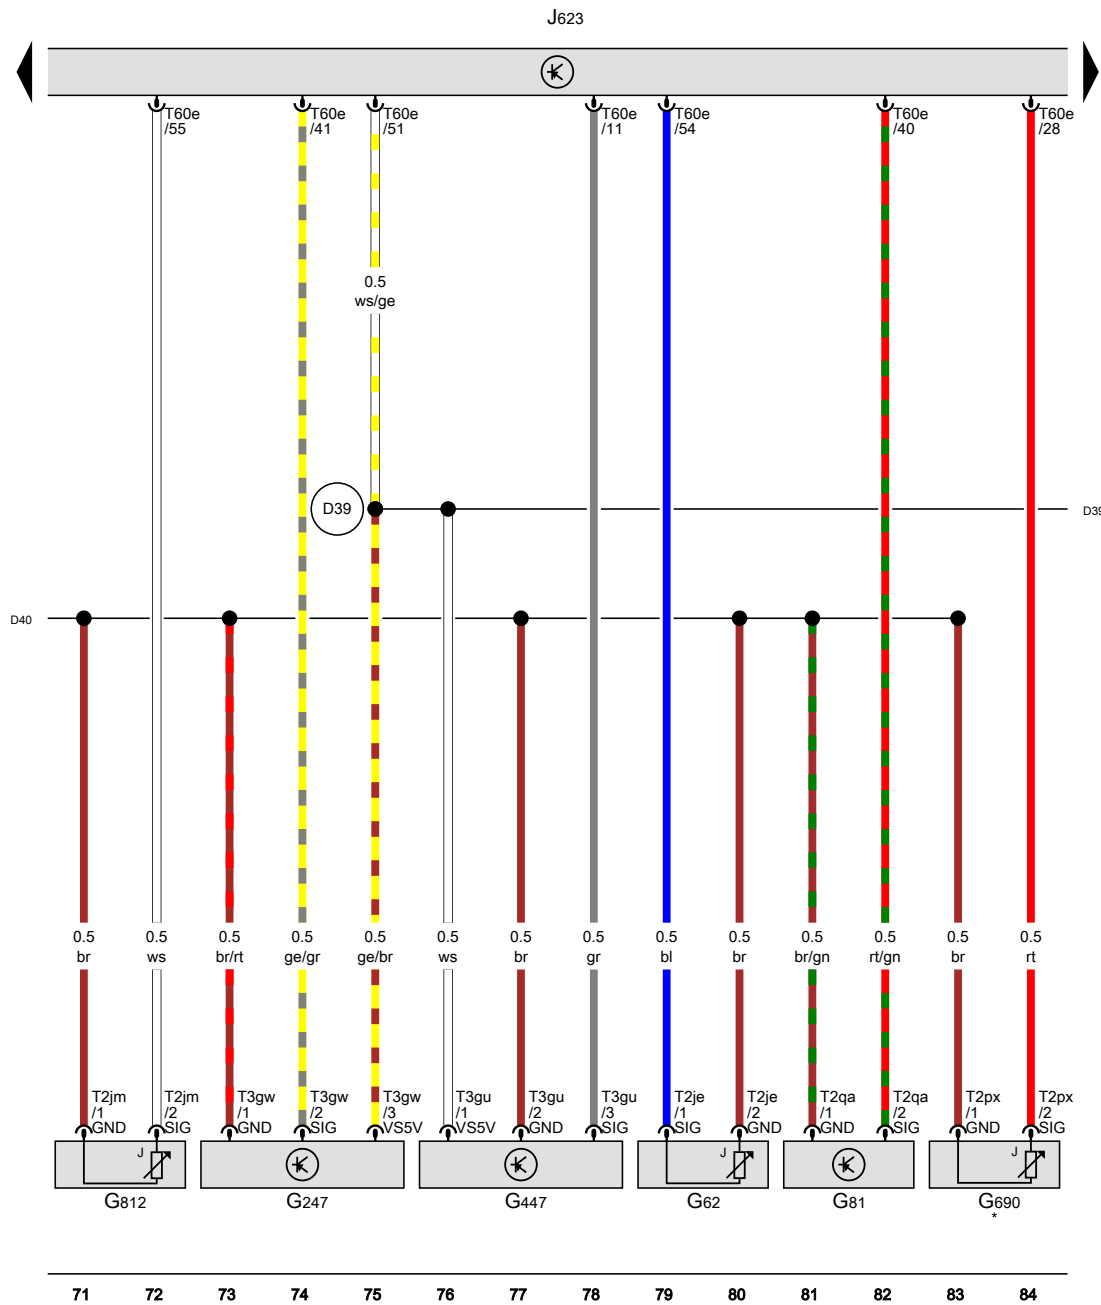

Coolant temperature sender, Fuel temperature sender, Fuel pressure sender, Charge pressure sender 2, Temperature sensor 2 for exhaust recirculation, Coolant temperature sender 3, Engine/motor control unit

- G62 Coolant temperature sender
- G81 Fuel temperature sender
- G247 Fuel pressure sender
- G447 Charge pressure sender 2
- G690 Temperature sensor 2 for exhaust recirculation
- G812 Coolant temperature sender 3
- J623 Engine/motor control unit
- T2je 2-pin connector, black
- T2jm 2-pin connector, black, colourless
- T2px 2-pin connector, brown
- T2qa 2-pin connector, black
- T3gu 3-pin connector, black
- T3gw 3-pin connector, black
- T60e 60-pin connector, black


D39 Connection 1, in engine prewiring harness

D40 Connection 2, in engine prewiring harness

* Pre-wired component

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

1SY0-053070119

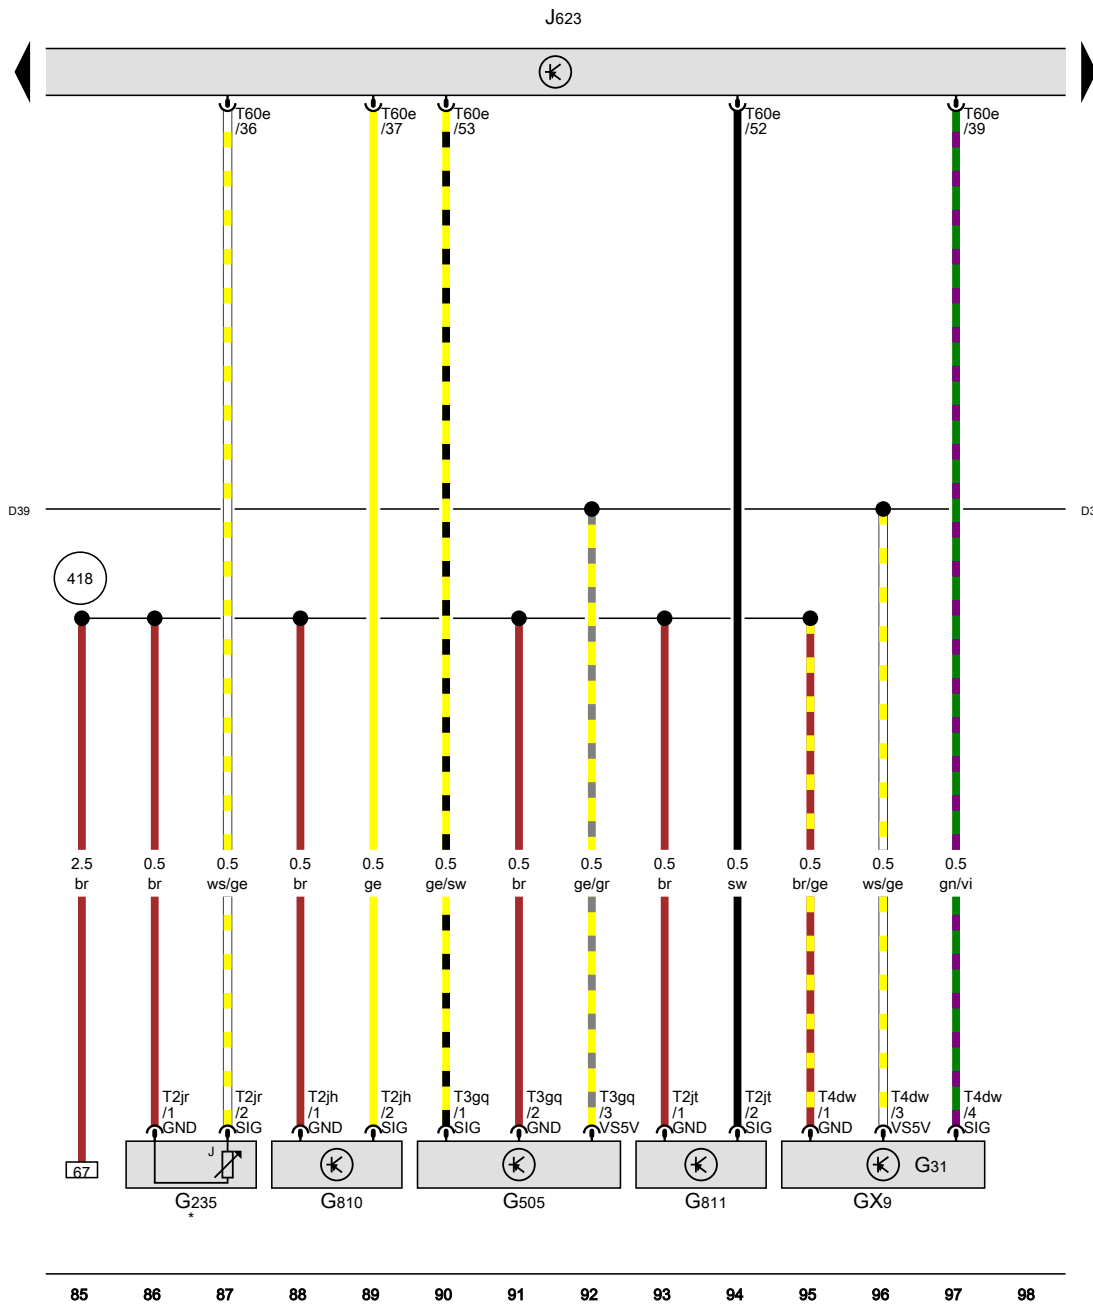


Intake manifold sender, Exhaust gas temperature sender 1, Pressure differential sender, Charge air temperature sender before charge air cooler, Charge air temperature sender after charge air cooler, Engine/motor control unit

- GX9 Intake manifold sender
- G31 Charge pressure sender
- G235 Exhaust gas temperature sender 1
- G505 Pressure differential sender
- G810 Charge air temperature sender before charge air cooler
- G811 Charge air temperature sender after charge air cooler
- J623 Engine/motor control unit
- T2jh 2-pin connector, black
- T2jr 2-pin connector, black
- T2jt 2-pin connector, black
- T3gq 3-pin connector, black
- T4dw 4-pin connector, black
- T60e 60-pin connector, black
- 418 Earth connection 10, in engine compartment wiring harness
- D39 Connection 1, in engine prewiring harness
- * Pre-wired component

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

[SYN-053080119]

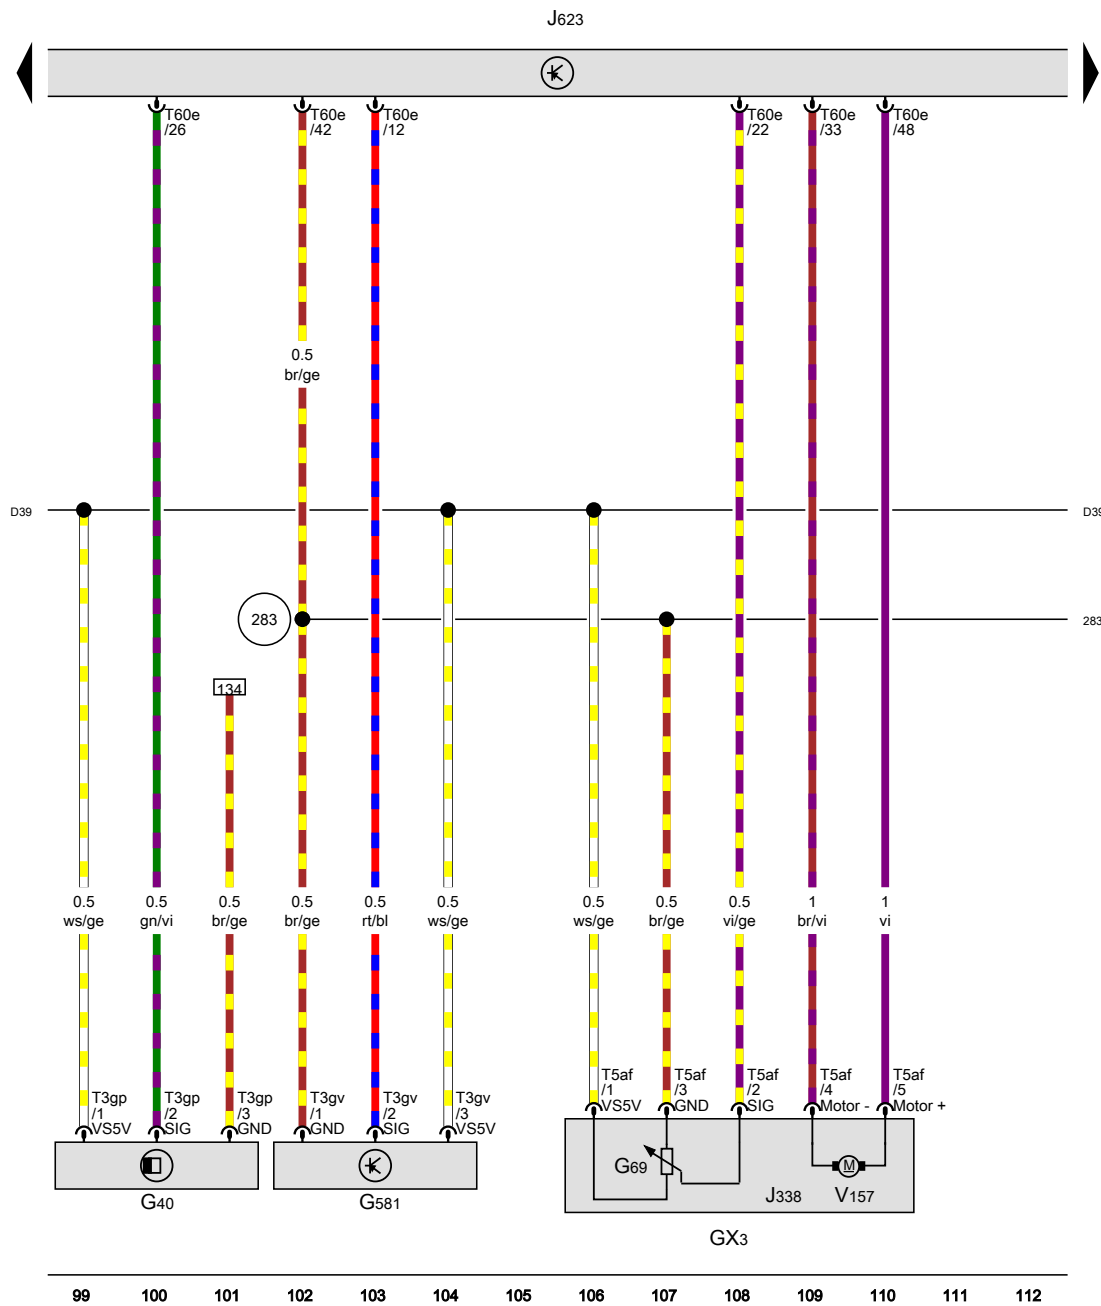


Throttle valve module, Hall sender, Position sender for charge pressure positioner, Engine/motor control unit

- GX3 Throttle valve module
- G40 Hall sender
- G69 Throttle valve potentiometer
- G581 Position sender for charge pressure positioner
- J338 Throttle valve module
- J623 Engine/motor control unit
- T3gp 3-pin connector, black
- T3gv 3-pin connector, brown
- T5af 5-pin connector, black
- T60e 60-pin connector, black
- V157 Intake manifold flap motor

283 Earth point 2, engine prewiring harness


D39 Connection 1, in engine prewiring harness

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

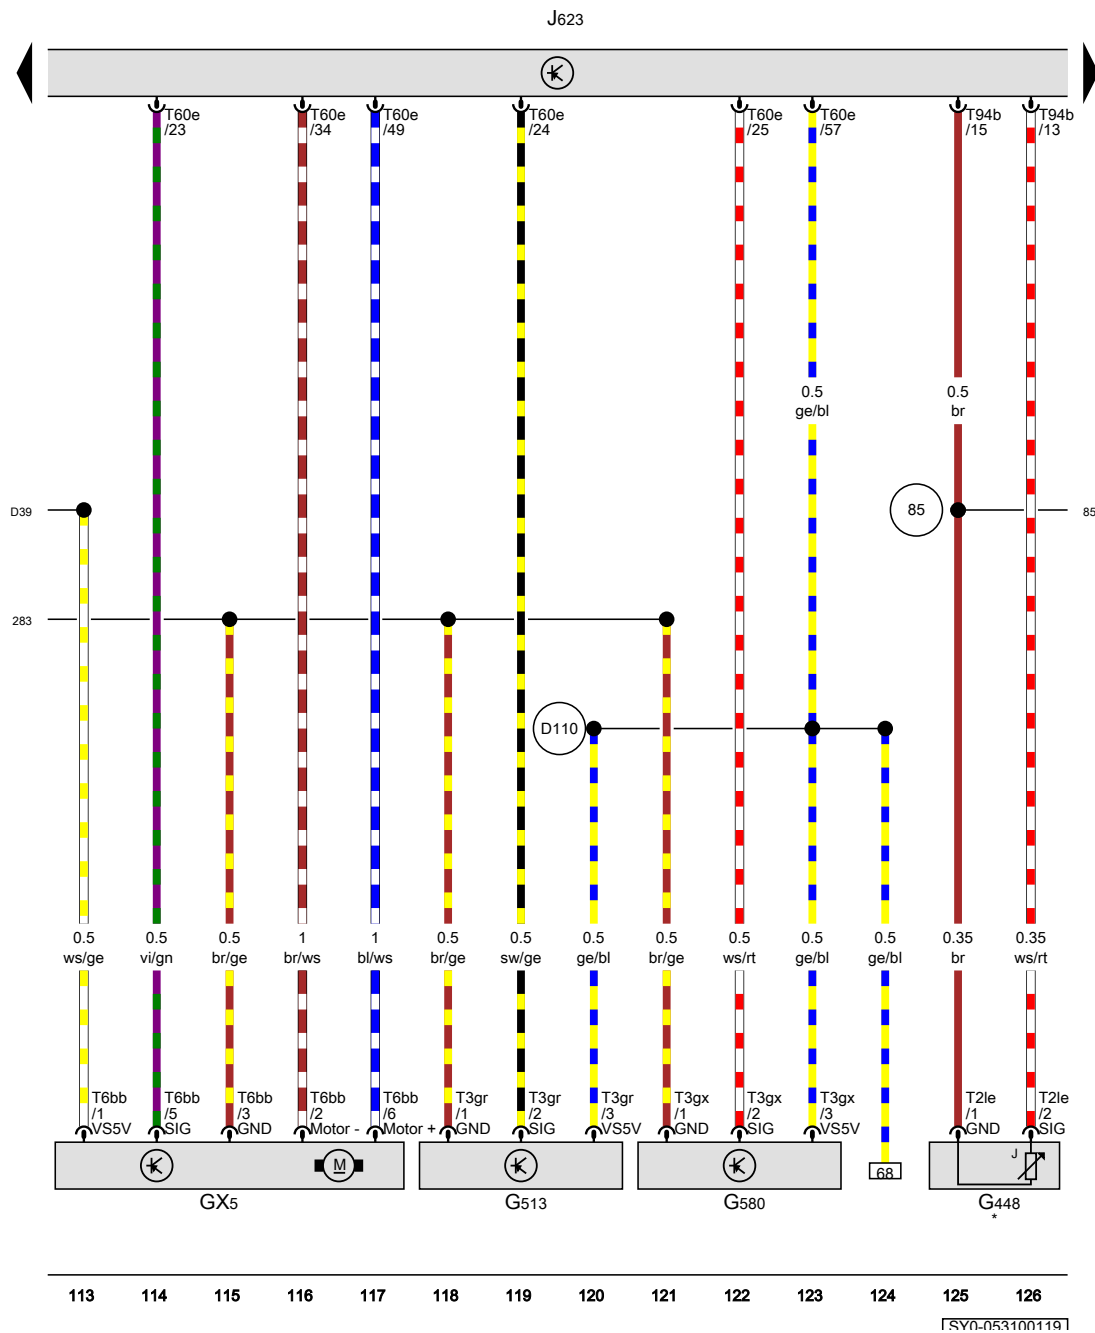

Exhaust gas recirculation valve 1, Exhaust gas temperature sender 2, Variable intake manifold position sender, Position sender 2 for charge pressure positioner, Engine/motor control unit

- GX5 Exhaust gas recirculation valve 1
- G448 Exhaust gas temperature sender 2
- G513 Variable intake manifold position sender
- G580 Position sender 2 for charge pressure positioner
- J623 Engine/motor control unit
- T2le 2-pin connector, black
- T3gr 3-pin connector, brown
- T3gx 3-pin connector, brown
- T6bb 6-pin connector, grey
- T60e 60-pin connector, black
- T94b 94-pin connector, black
- 85 Earth connection 1, in engine compartment wiring harness
- 283 Earth point 2, engine prewiring harness
- D39 Connection 1, in engine prewiring harness
- D110 Connection 8 in engine compartment wiring harness
- * Pre-wired component

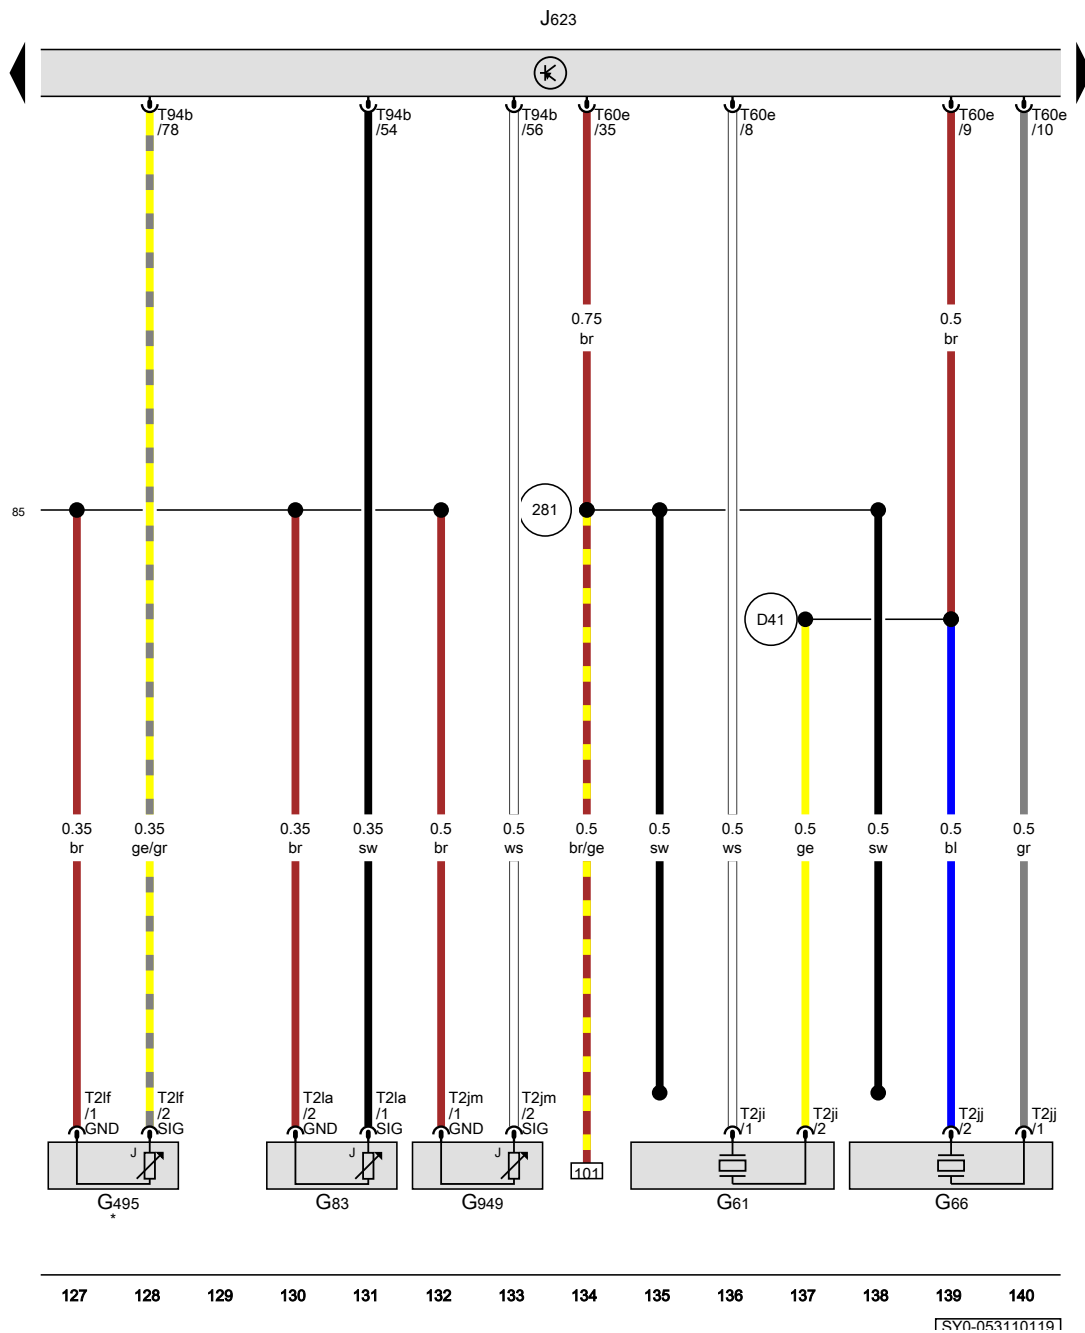

Knock sensor 1, Knock sensor 2, Radiator outlet coolant temperature sender, Exhaust gas temperature sender 3, Temperature sensor 3 for exhaust recirculation, Engine/motor control unit

- G61 Knock sensor 1
- G66 Knock sensor 2
- G83 Radiator outlet coolant temperature sender
- G495 Exhaust gas temperature sender 3
- G949 Temperature sensor 3 for exhaust recirculation
- J623 Engine/motor control unit
- T2ji 2-pin connector, black
- T2jj 2-pin connector, black
- T2jm 2-pin connector, colourless, black
- T2la 2-pin connector, black
- T2lf 2-pin connector, brown
- T60e 60-pin connector, black
- T94b 94-pin connector, black

85 Earth connection 1, in engine compartment wiring harness


281 Earth point 1, engine prewiring harness

D41 Connection 3, in engine prewiring harness

* Pre-wired component

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

Accelerator pedal module, Air mass meter, Engine/motor control unit

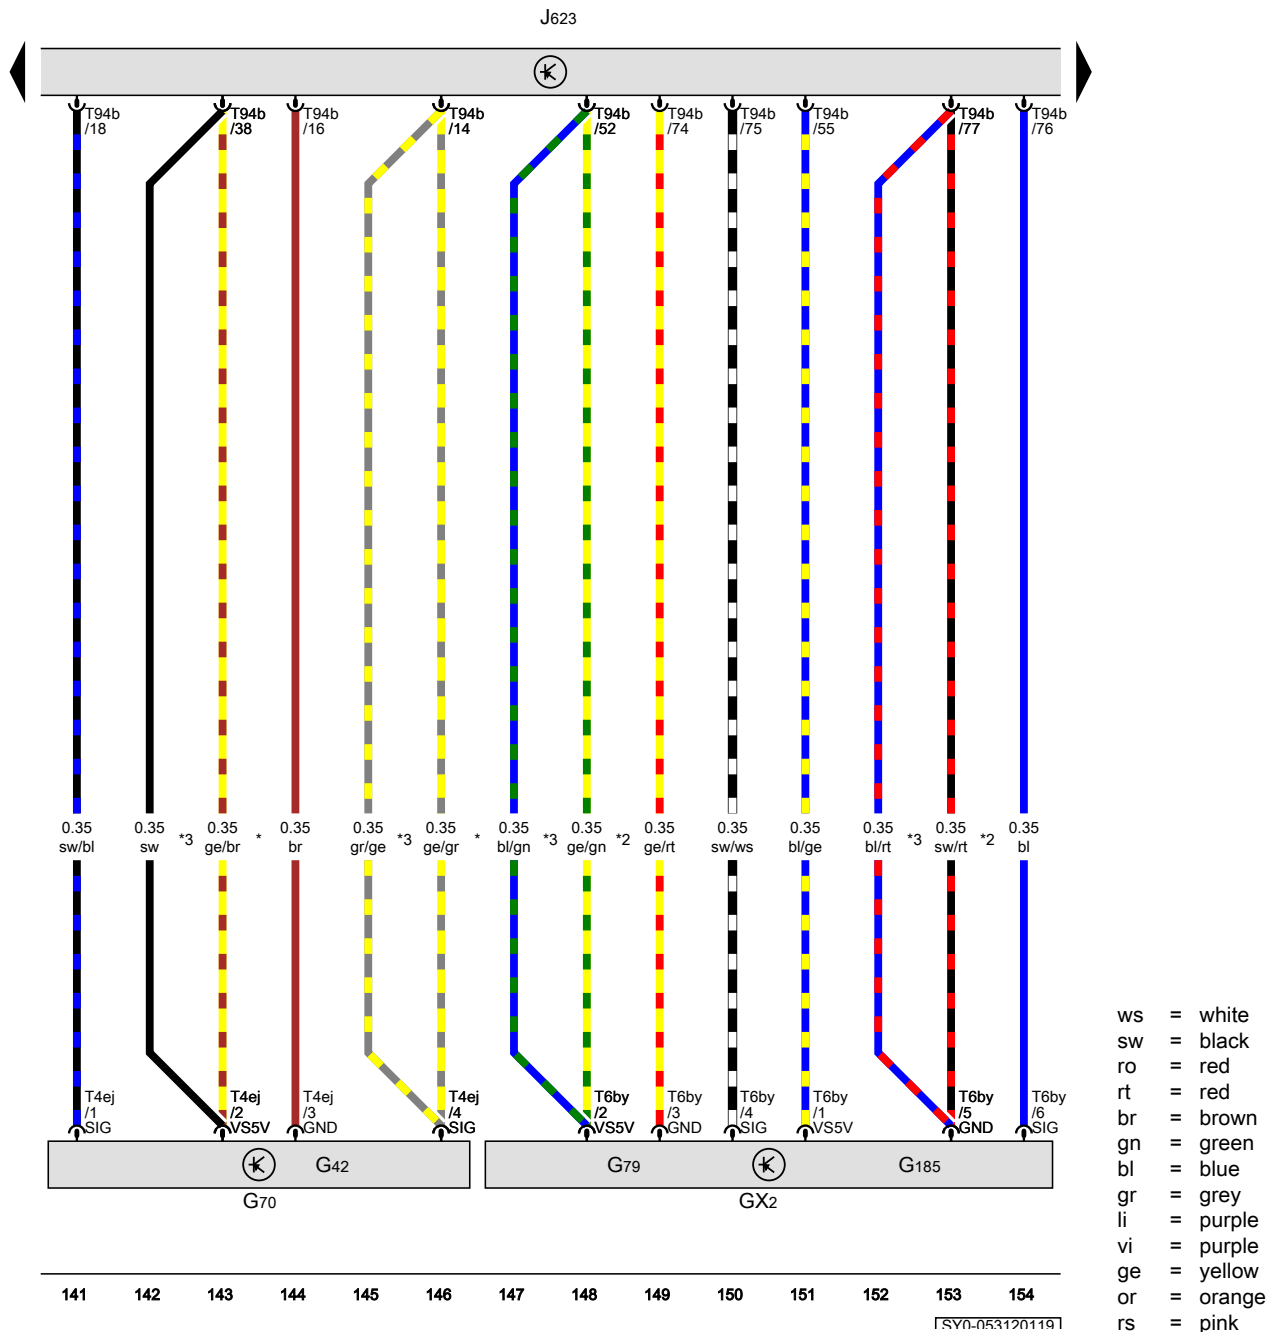


Lambda probe 1 before catalytic converter, Particulate sensor, Engine/motor control unit, Control unit for sensor electronics


- GX10 Lambda probe 1 before catalytic converter
- G784 Particulate sensor
- J623 Engine/motor control unit
- J849 Control unit for sensor electronics
- T4ev 4-pin connector, black
- T6be 6-pin connector, black
- T94b 94-pin connector, black

- D197 Connection 5 (87a), in engine compartment wiring harness
- E151 Connection 1 (CAN bus, engine/motor control unit, high)
- E153 Connection 1 (CAN bus, engine/motor control unit, low)

- * Pre-wired component
- *2 Up to November 2017
- *3 From November 2017

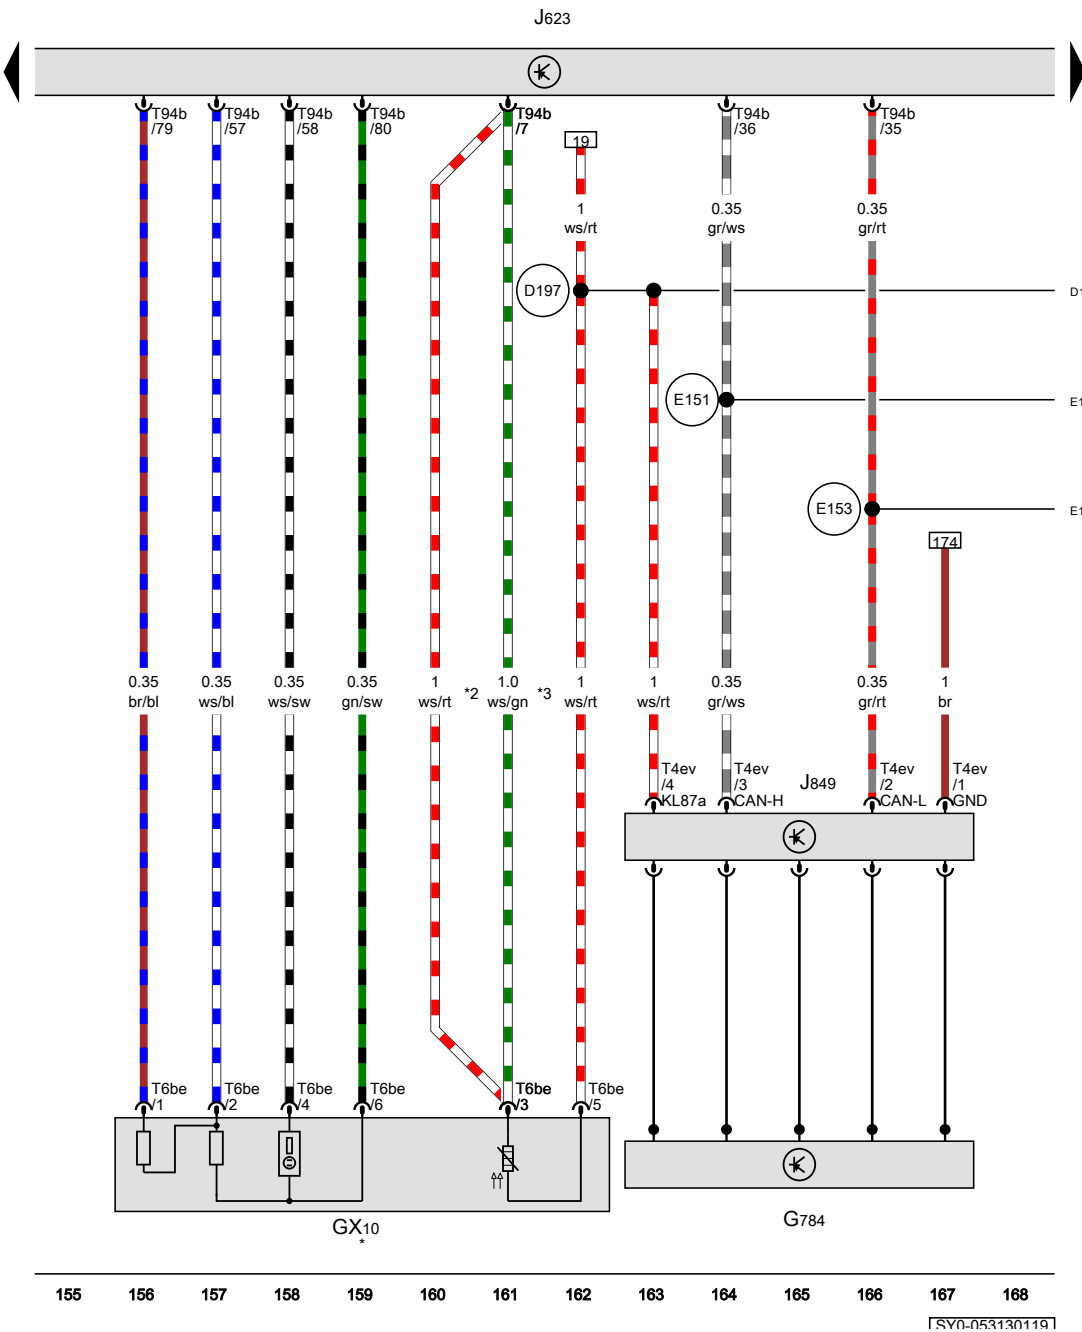

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

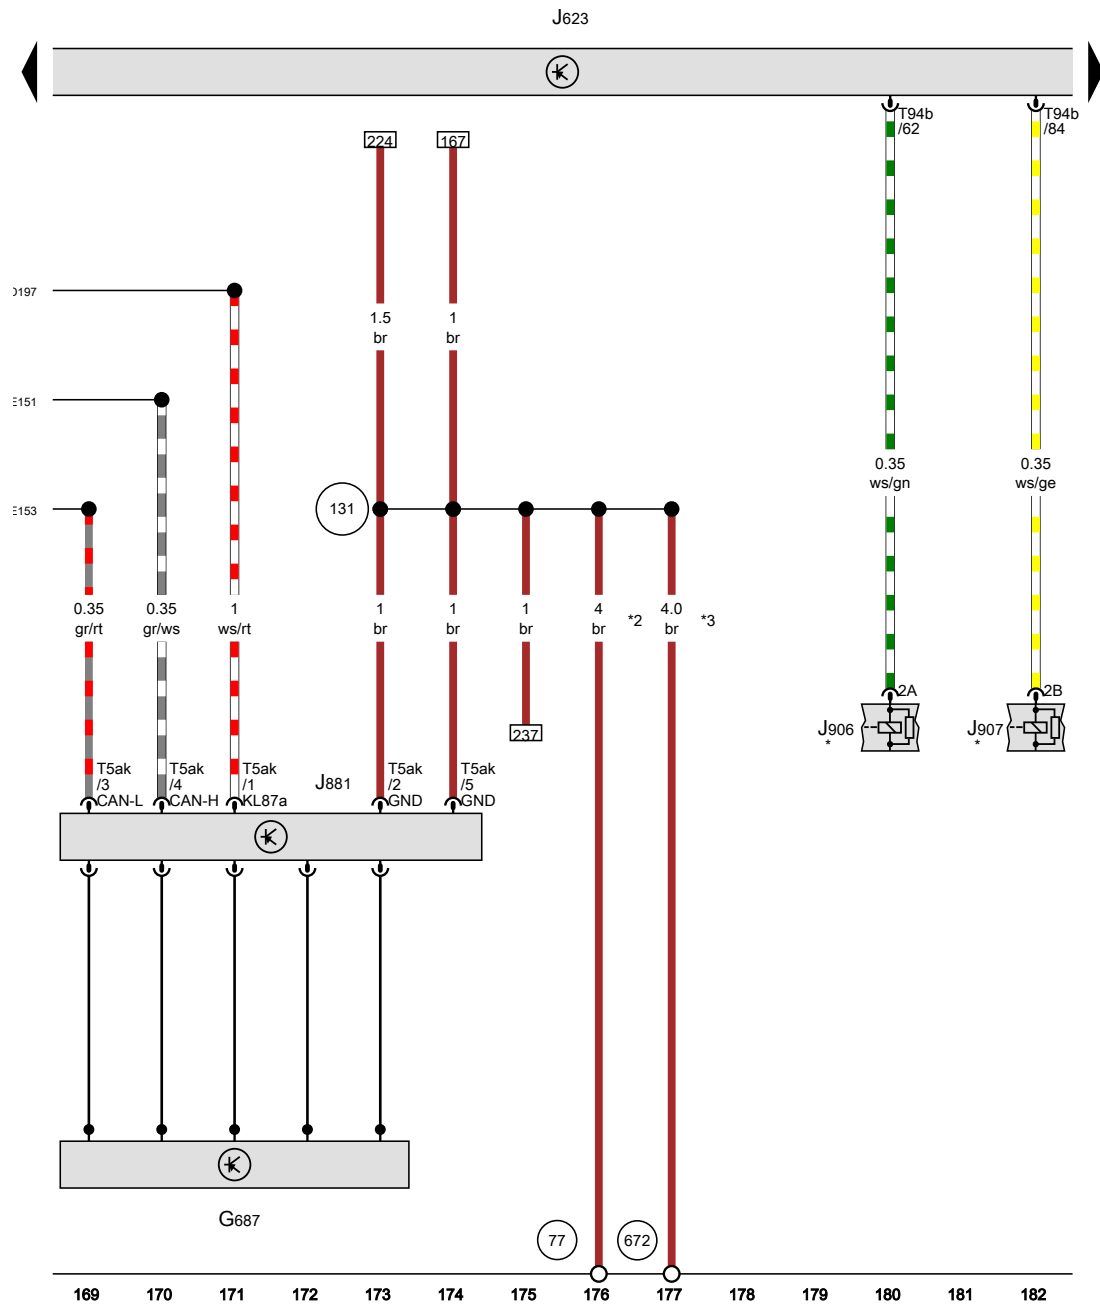


NOx sender 2, Engine/motor control unit, Control unit for NOx sender 2, Starter relay 1, Starter relay 2

- G687 NOx sender 2
- J623 Engine/motor control unit
- J881 Control unit for NOx sender 2
- J906 Starter relay 1
- J907 Starter relay 2
- T5ak 5-pin connector, black
- T94b 94-pin connector, black

- 77 Earth point, lower part of left B-pillar
- 131 Earth connection 2, in engine compartment wiring harness
- 672 Earth point 2, on front of left longitudinal member
- D197 Connection 5 (87a), in engine compartment wiring harness
- E151 Connection 1 (CAN bus, engine/motor control unit, high)
- E153 Connection 1 (CAN bus, engine/motor control unit, low)
- * see applicable current flow diagram for basic equipment
- *2 Up to July 2018
- *3 From July 2018

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

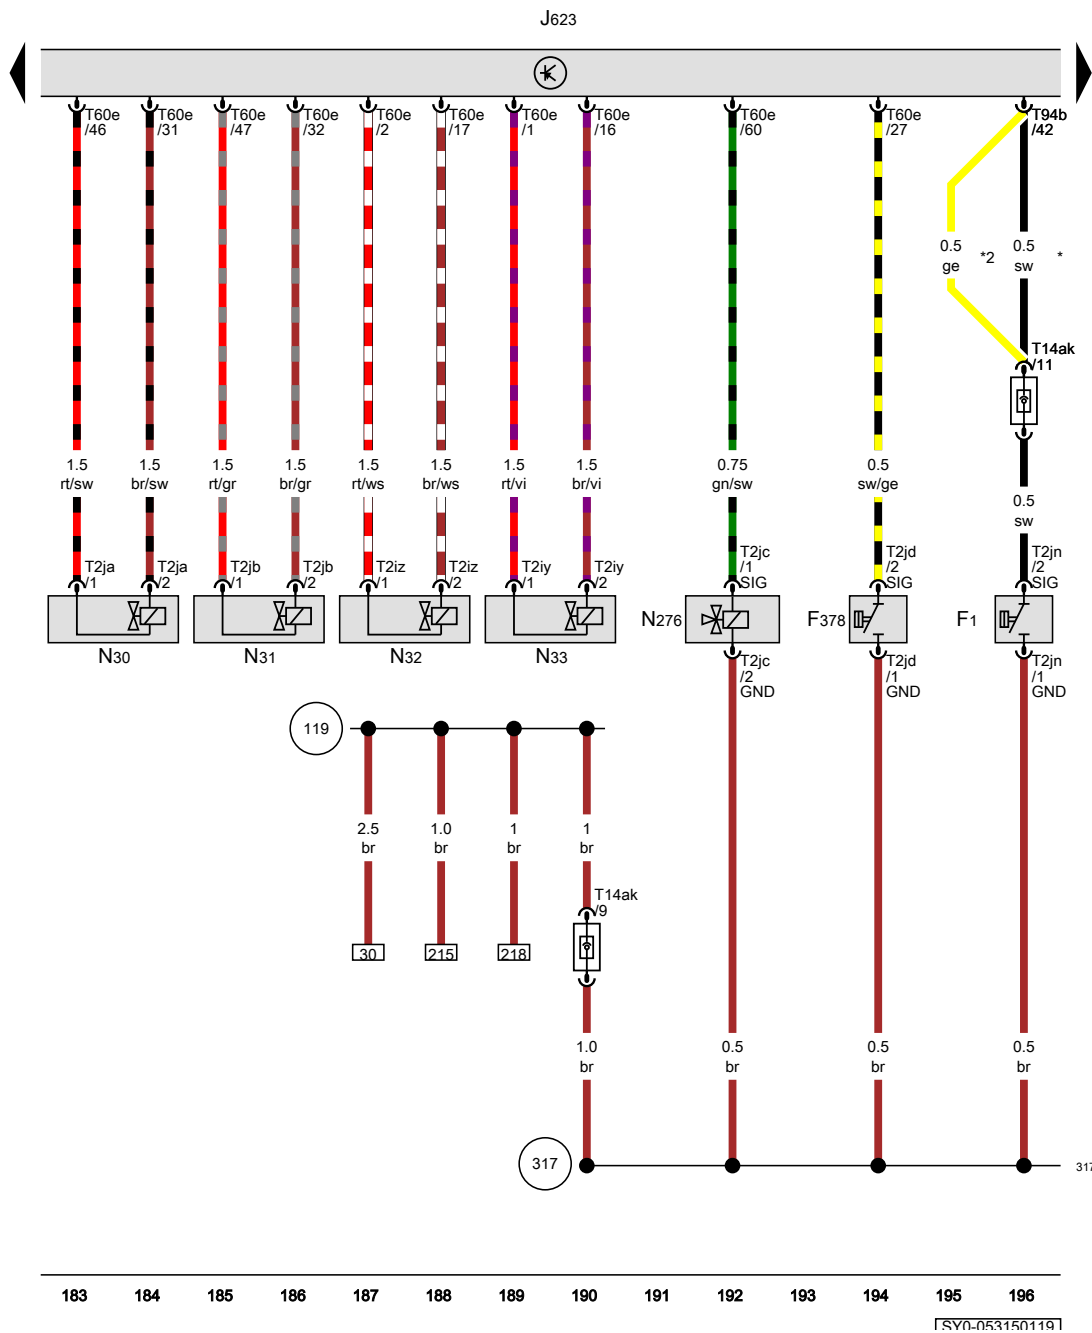

Oil pressure switch, Oil pressure switch for reduced oil pressure, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Fuel pressure regulating valve


- F1 Oil pressure switch
- F378 Oil pressure switch for reduced oil pressure
- J623 Engine/motor control unit
- N30 Injector, cylinder 1
- N31 Injector, cylinder 2
- N32 Injector, cylinder 3
- N33 Injector, cylinder 4
- N276 Fuel pressure regulating valve
- T2iy 2-pin connector, black
- T2iz 2-pin connector, black
- T2ja 2-pin connector, black
- T2jb 2-pin connector, black
- T2jc 2-pin connector, black
- T2jd 2-pin connector, black
- T2jn 2-pin connector, red
- T14ak 14-pin connector, grey
- T60e 60-pin connector, black
- T94b 94-pin connector, black

119 Earth connection 1, in headlight wiring harness

317 Earth connection 7, in engine compartment wiring harness

* Up to November 2017

*2 From November 2017

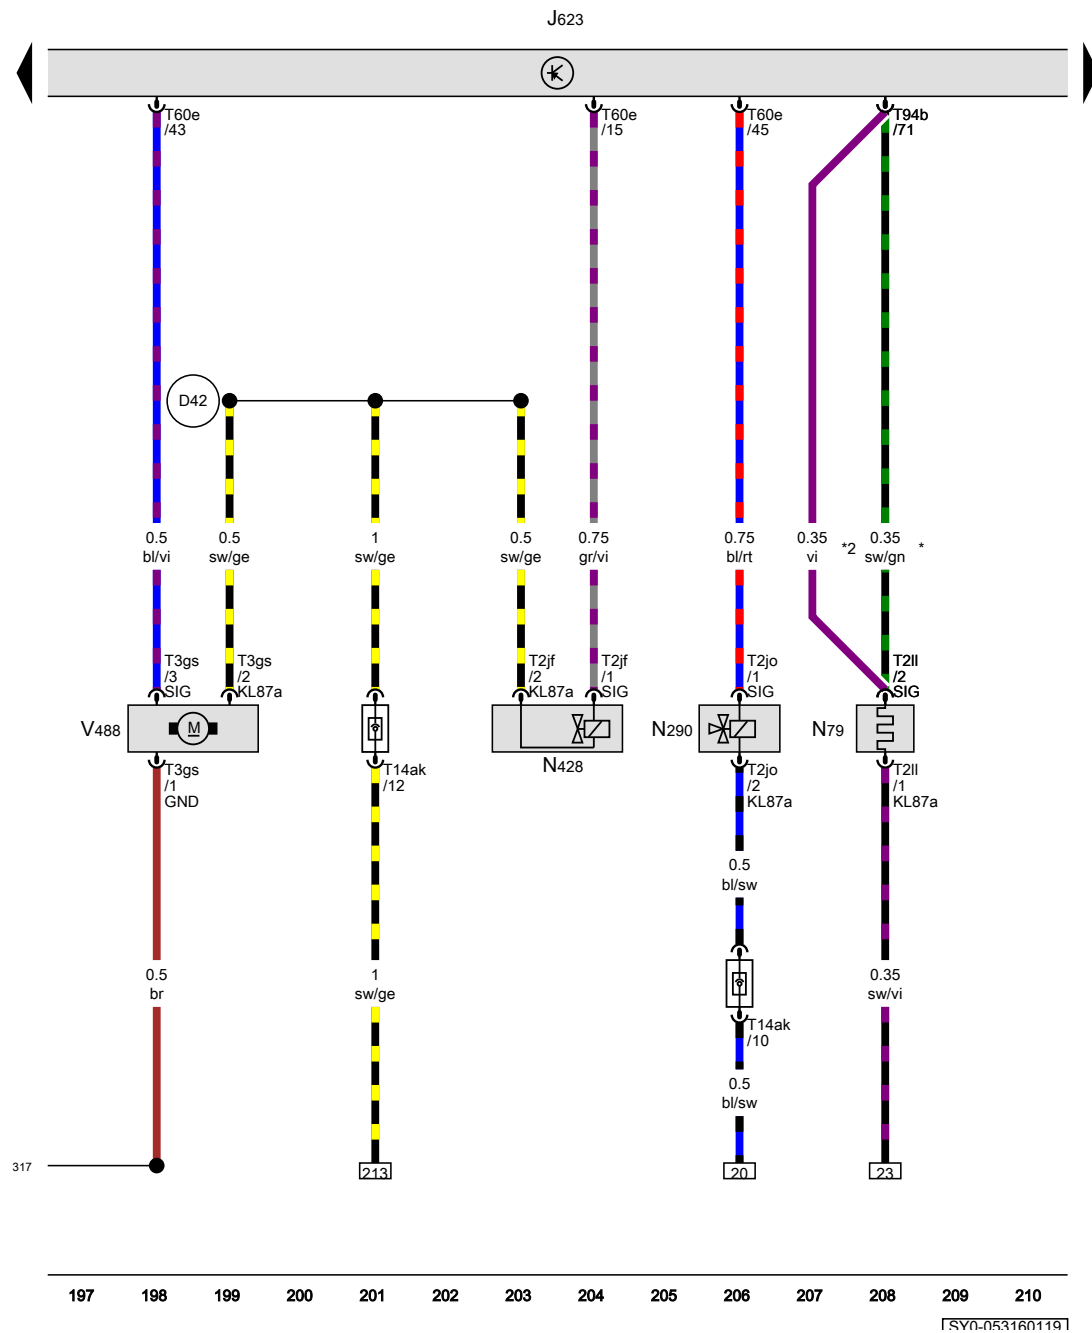

Engine/motor control unit, Heater element for crankcase breather, Fuel metering valve, Valve for oil pressure control, Auxiliary pump for heating

- J623 Engine/motor control unit
- N79 Heater element for crankcase breather
- N290 Fuel metering valve
- N428 Valve for oil pressure control
- T2jf 2-pin connector, black
- T2jo 2-pin connector, black
- T2II 2-pin connector, black
- T3gs 3-pin connector, black
- T14ak 14-pin connector, grey
- T60e 60-pin connector, black
- T94b 94-pin connector, black
- V488 Auxiliary pump for heating


317 Earth connection 7, in engine compartment wiring harness

D42 Connection 4, in engine prewiring harness

* Up to November 2017

*2 From November 2017

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

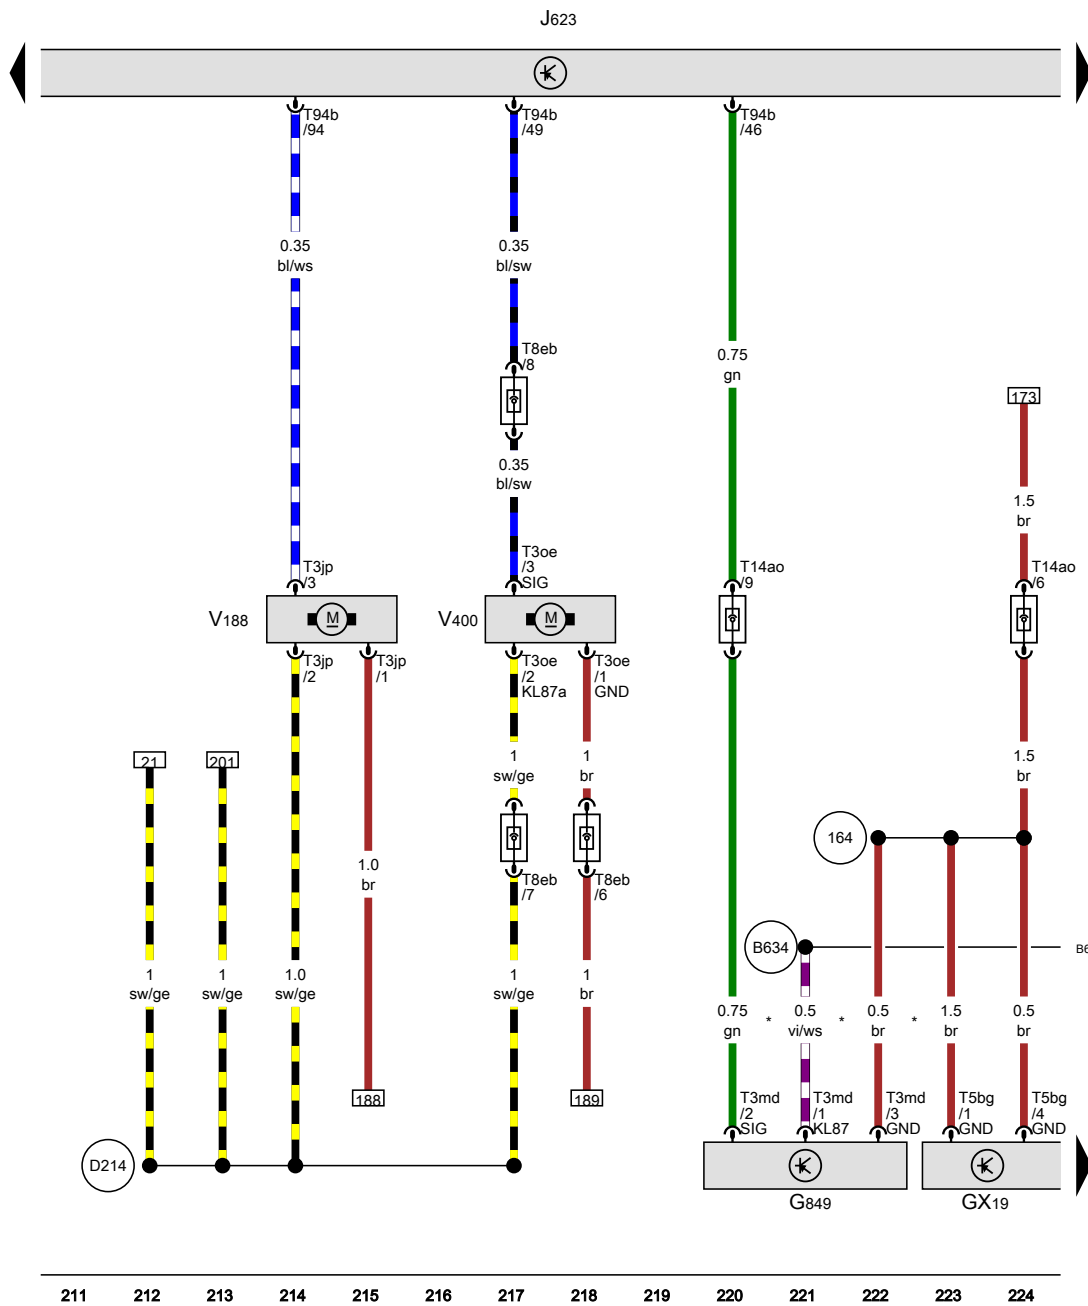


Delivery unit for reducing agent metering system, Reducing agent quality sensor, Engine/motor control unit, Pump for exhaust gas recirculation cooler

- GX19 Delivery unit for reducing agent metering system
- G849 Reducing agent quality sensor
- J623 Engine/motor control unit
- T3jp 3-pin connector, black
- T3md 3-pin connector, black
- T3oe 3-pin connector, black
- T5bg 5-pin connector, black
- T8eb 8-pin connector, black
- T14ao 14-pin connector, black
- T94b 94-pin connector, black
- V188 Charge air cooling pump
- V400 Pump for exhaust gas recirculation cooler

- 164 Earth connection, in catalytic converter warning circuit wiring harness
- B634 Positive connection 2 (87), in main wiring harness
- D214 Connection 8 (87a), in engine compartment wiring harness
- * According to equipment

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

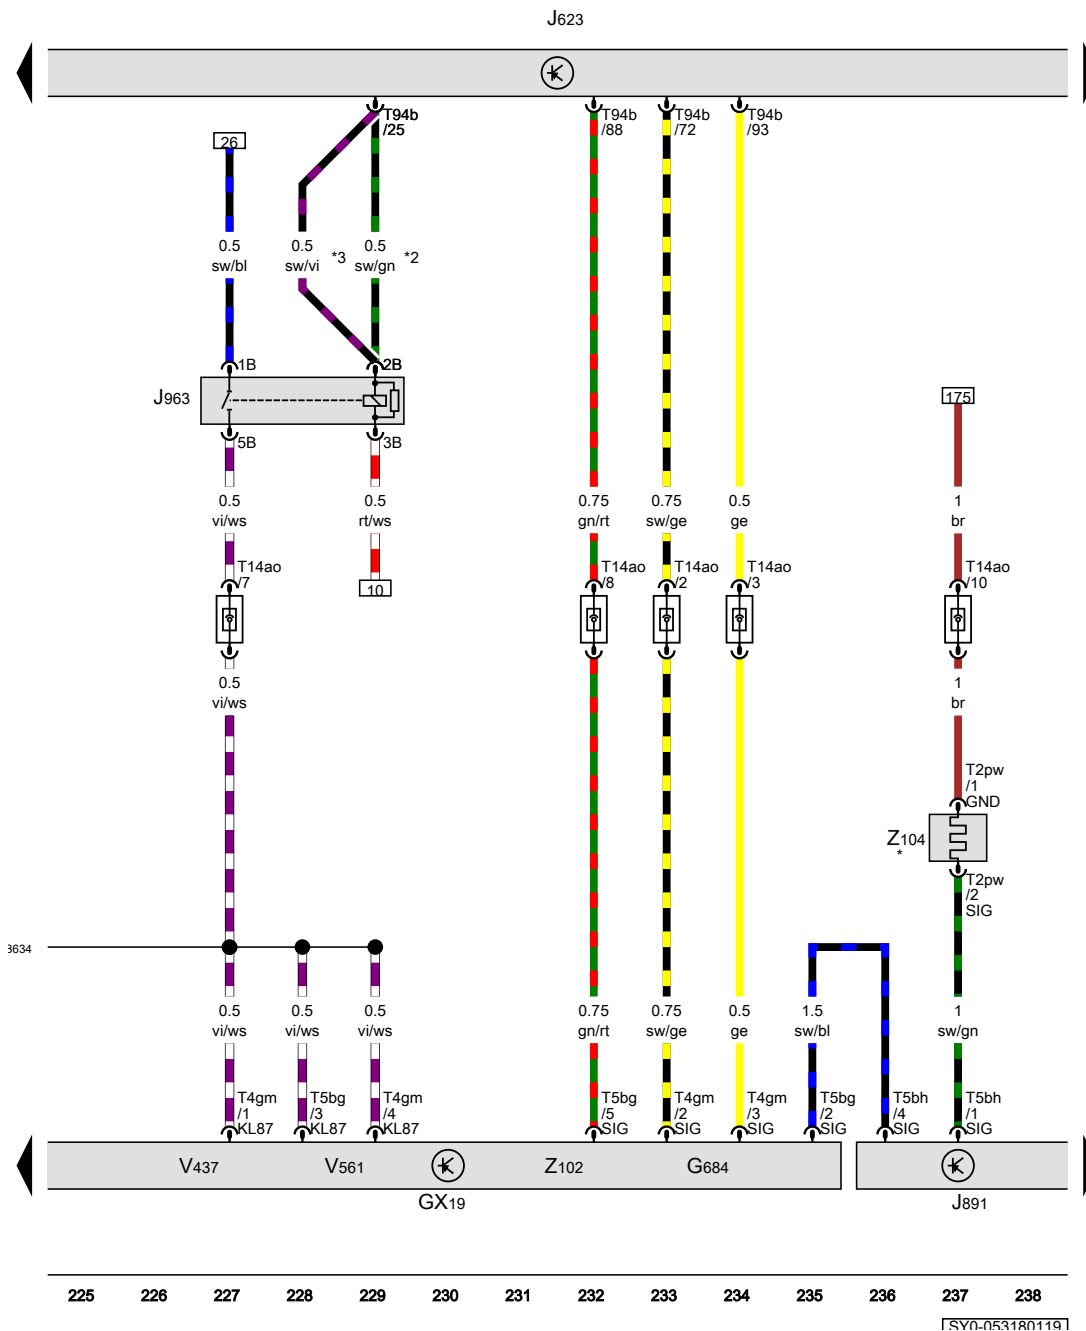


Delivery unit for reducing agent metering system, Engine/motor control unit, Control unit for reducing agent heater, Relay for reducing agent metering system, Heater for reducing agent line (heater circuit 2)

- GX19 Delivery unit for reducing agent metering system
- G684 Tank sender for reducing agent
- J623 Engine/motor control unit
- J891 Control unit for reducing agent heater
- J963 Relay for reducing agent metering system
- T2pw 2-pin connector, black
- T4gm 4-pin connector, black
- T5bg 5-pin connector, black
- T5bh 5-pin connector, colourless
- T14ao 14-pin connector, black
- T94b 94-pin connector, black
- V437 Pump for reducing agent
- V561 Reducing agent return flow pump
- Z102 Heater for reducing agent tank (heater circuit 1)
- Z104 Heater for reducing agent line (heater circuit 2)

B634 Positive connection 2 (87), in main wiring harness

- * Pre-wired component
- *2 Up to November 2017
- *3 From November 2017

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

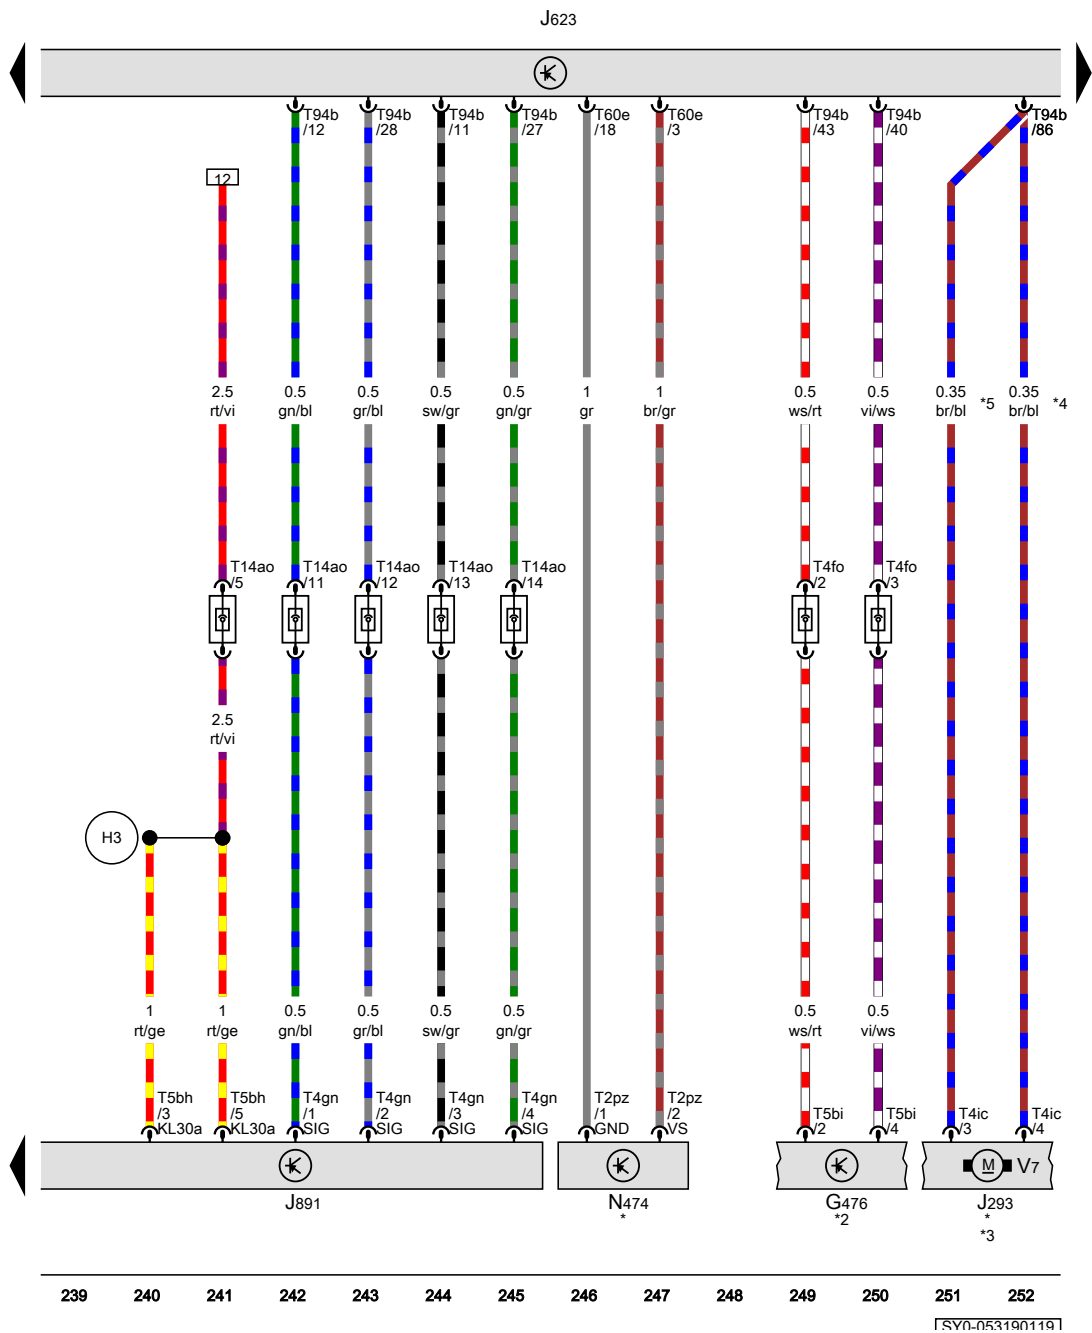


Clutch position sender, Engine/motor control unit, Control unit for reducing agent heater, Injector for reducing agent, Radiator fan

- G476 Clutch position sender
- J293 Radiator fan control unit
- J623 Engine/motor control unit
- J891 Control unit for reducing agent heater
- N474 Injector for reducing agent
- T2pz 2-pin connector, black
- T4fo 4-pin connector, black
- T4gn 4-pin connector, black
- T4ic 4-pin connector, black
- T5bh 5-pin connector, colourless
- T5bi 5-pin connector, black
- T14ao 14-pin connector, black
- T60e 60-pin connector, black
- T94b 94-pin connector, black
- V7 Radiator fan

H3 Connection 1 in wiring harness for reducing agent tank

- * Pre-wired component
- *2 see applicable current flow diagram for basic equipment
- *3 see applicable current flow diagram for radiator fan
- *4 For models with towing bracket
- *5 For models with no towing bracket

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

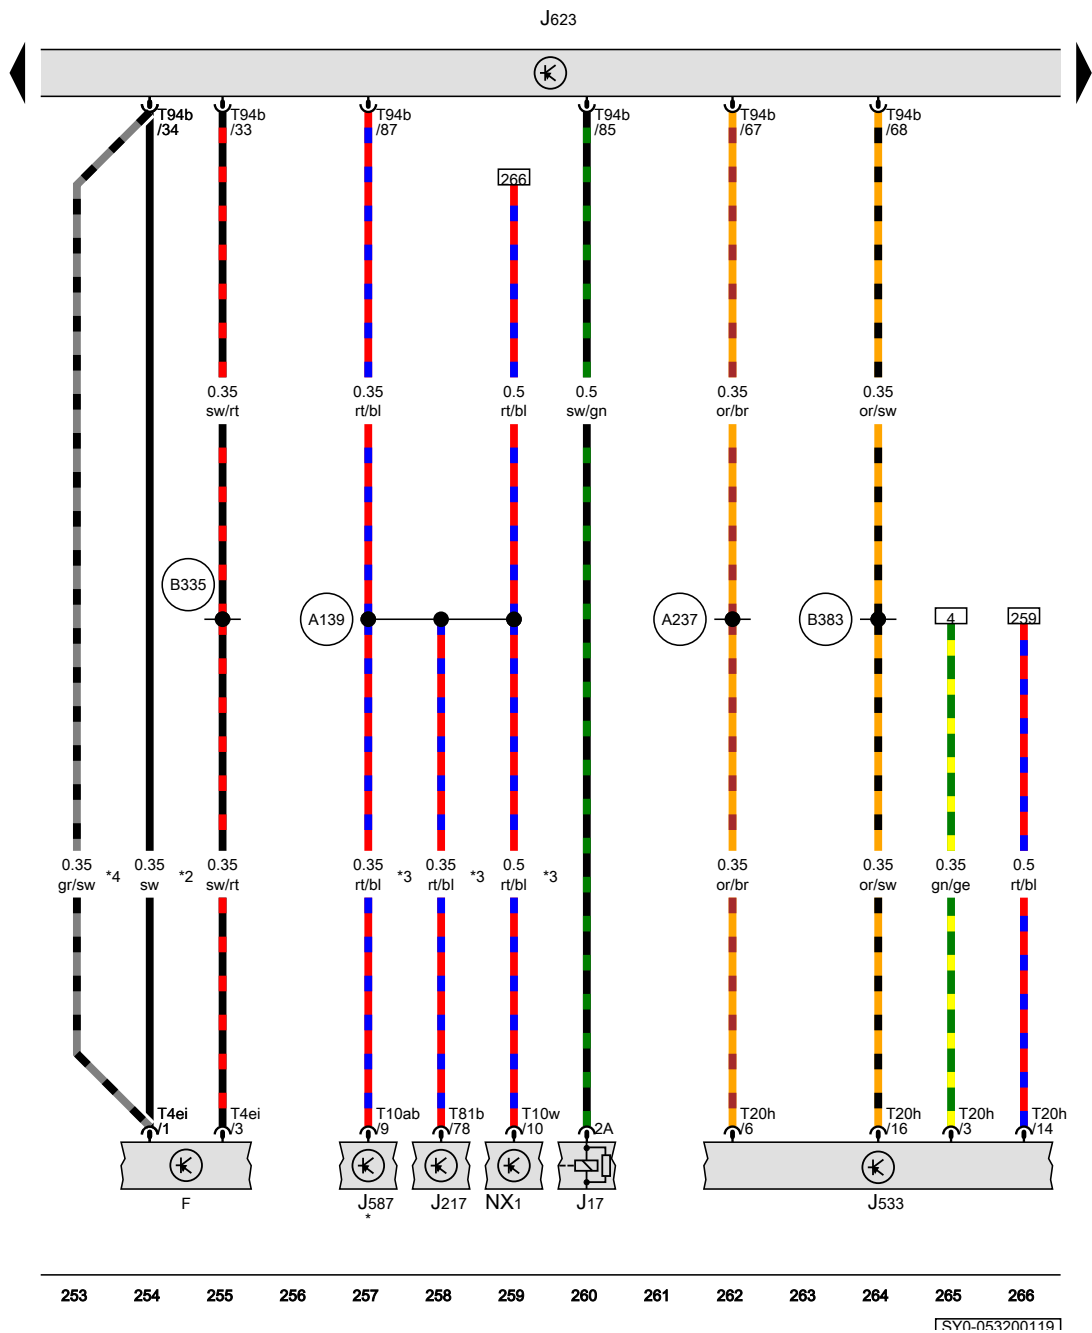


Brake light switch, Data bus diagnostic interface, Engine/ motor control unit

- F Brake light switch
- J17 Fuel pump relay
- J217 Automatic gearbox control unit
- J533 Data bus diagnostic interface
- J587 Selector lever sensors control unit
- J623 Engine/motor control unit
- NX1 Gearbox
- T4ei 4-pin connector, black
- T10ab 10-pin connector, red
- T10w 10-pin connector, black
- T20h 20-pin connector, red
- T81b 81-pin connector, black
- T94b 94-pin connector, black
- A139 Connection 3 (15) in dash panel wiring harness
- A237 Connection 1 (powertrain CAN bus, low), in dash panel wiring harness
- B335 Connection 1 (54), in main wiring harness
- B383 Connection 1 (powertrain CAN bus, high), in main wiring harness
- * Pre-wired component
- *2 Up to November 2017
- *3 For models with automatic gearbox
- *4 From November 2017

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

Steering column electronics control unit, Engine/motor control unit

- J527 Steering column electronics control unit
- J623 Engine/motor control unit
- T14bk 14-pin connector, black
- T16h 16-pin connector, black
- T94b 94-pin connector, black
- * According to equipment

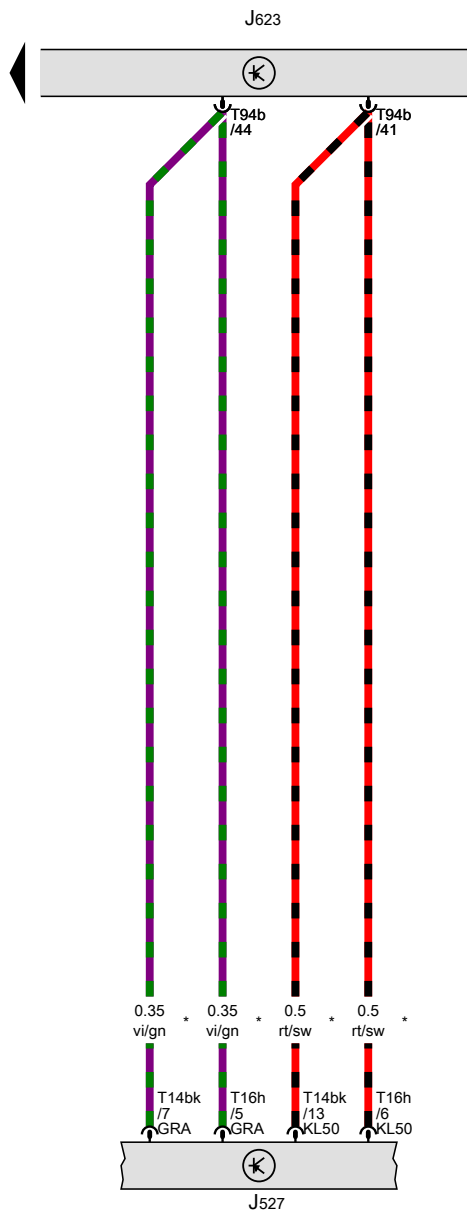


267 268 269 270 271 272 273 274 275 276 277 278 279 280

[SYN-053210119]

2.0l diesel engine , DAUA,DAUB

From May 2017

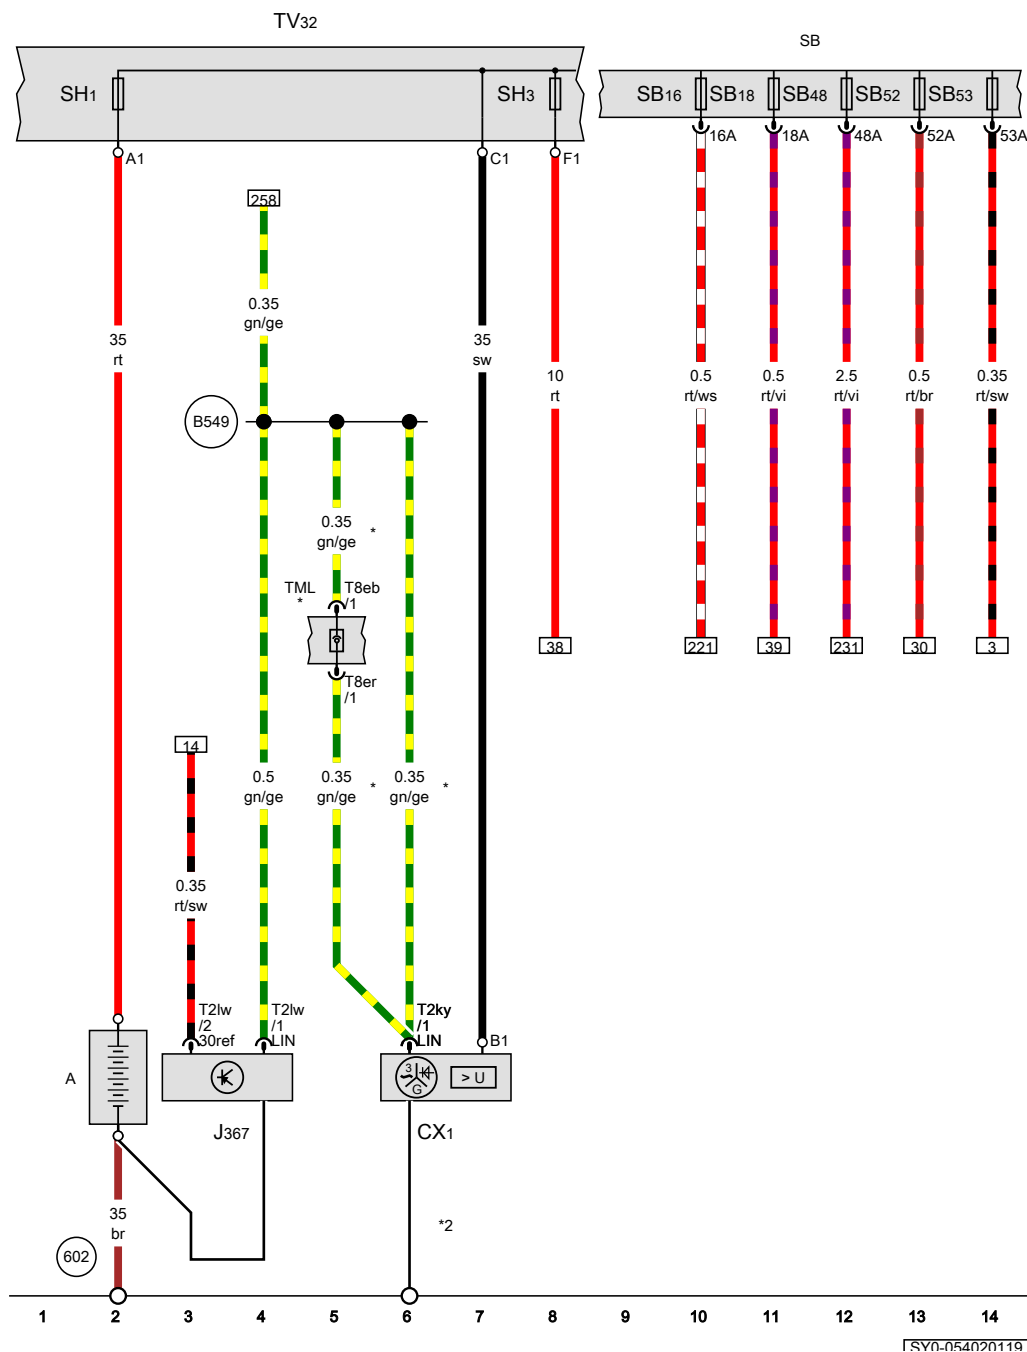

Battery, Alternator with voltage regulator, Battery monitor control unit, Fuse holder B, Jump start connection

- A Battery
- CX1 Alternator with voltage regulator
- J367 Battery monitor control unit
- SB Fuse holder B
- SH1 Fuse 1 in fuse holder H
- SH3 Fuse 3 in fuse holder H
- SB16 Fuse 16 on fuse holder B
- SB18 Fuse 18 on fuse holder B
- SB48 Fuse 48 on fuse holder B
- SB52 Fuse 52 on fuse holder B
- SB53 Fuse 53 on fuse holder B
- T2ky 2-pin connector, black
- T2lw 2-pin connector, black
- T8eb 8-pin connector, black
- T8er 8-pin connector, black
- TML Coupling point in engine compartment, left
- TV32 Jump start connection


602 Earth point, in front left footwell

B549 Connection 2 (LIN bus) in main wiring harness

* According to equipment

*2 Earth supply via housing

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

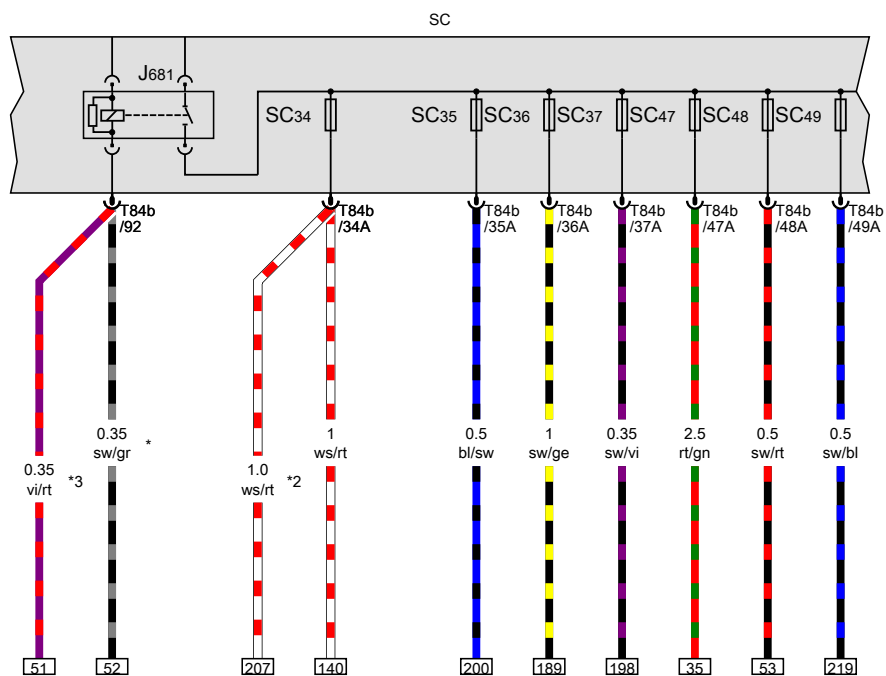

Fuse holder C


- J681 Terminal 15 voltage supply relay 2
- SC Fuse holder C
- SC34 Fuse 34 on fuse holder C
- SC35 Fuse 35 on fuse holder C
- SC36 Fuse 36 on fuse holder C
- SC37 Fuse 37 on fuse holder C
- SC47 Fuse 47 on fuse holder C
- SC48 Fuse 48 on fuse holder C
- SC49 Fuse 49 on fuse holder C
- T84b 84-pin connector
- * Up to November 2017
- *2 For models with Euro 5 plus emission standard
- *3 From November 2017


ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

Automatic glow period control unit, Engine/motor control unit

J179 Automatic glow period control unit
J623 Engine/motor control unit
T11b 11-pin connector
T94b 94-pin connector, black

- (84) Earth connection, engine block, in front right wiring harness
- (179) Earth connection, in left headlight wiring harness
- (655) Earth point, on left headlight
- (A23) Connection (30al), in dash panel wiring harness
- (D180) Connection (87a), in engine compartment wiring harness

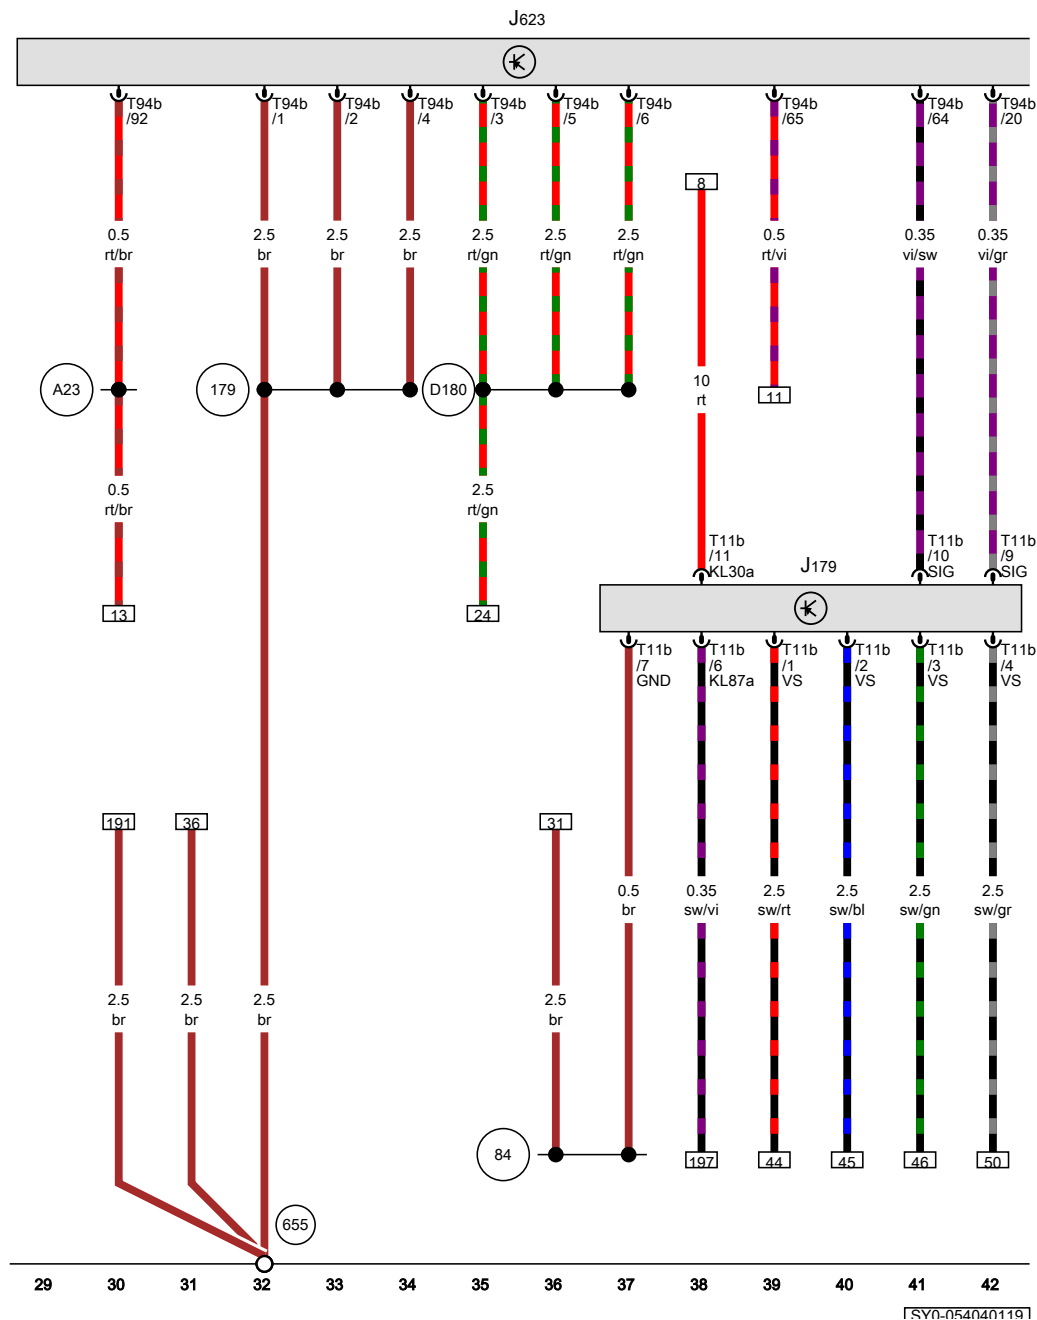

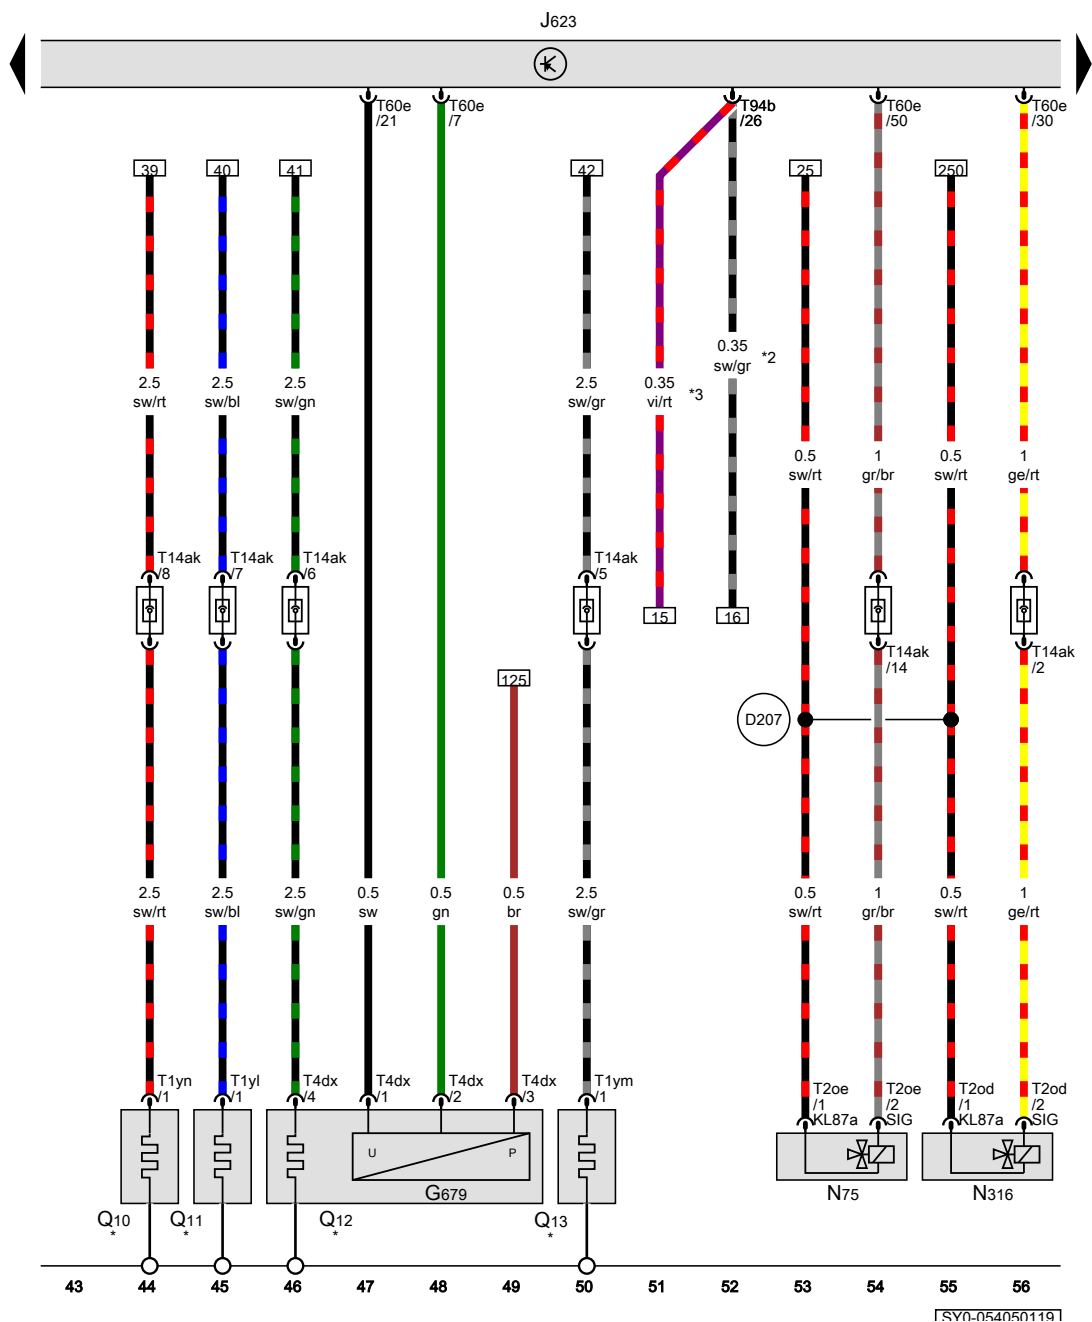


Engine/motor control unit, Charge pressure control solenoid valve, Intake manifold flap valve, Glow plug 1, Glow plug 2, Glow plug 3, Glow plug 4

- G679 Cylinder 3 combustion chamber pressure sender
- J623 Engine/motor control unit
- N75 Charge pressure control solenoid valve
- N316 Intake manifold flap valve
- Q10 Glow plug 1
- Q11 Glow plug 2
- Q12 Glow plug 3
- Q13 Glow plug 4
- T1yl 1-pin connector
- T1ym 1-pin connector
- T1yn 1-pin connector
- T2od 2-pin connector, black
- T2oe 2-pin connector, black
- T4dx 4-pin connector, black
- T14ak 14-pin connector, grey
- T60e 60-pin connector, black
- T94b 94-pin connector, black

D207 Connection 7 (87a), in engine compartment wiring harness


- * Earth supply via housing
- *2 Up to November 2017
- *3 From November 2017

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

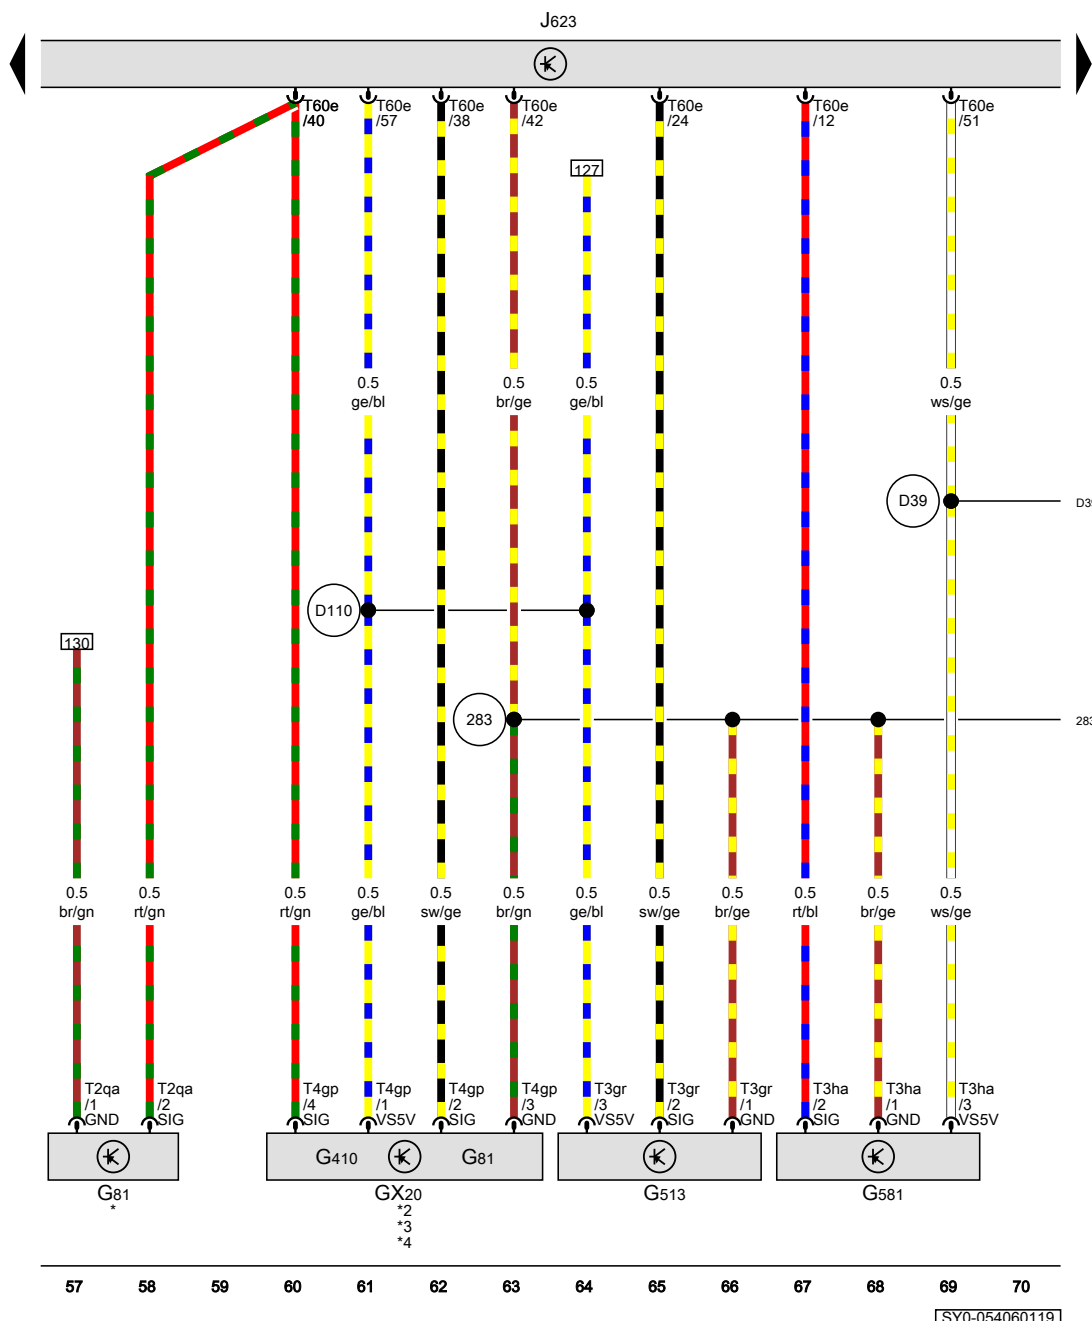

Temperature and pressure sender for low-pressure fuel system, Fuel temperature sender, Variable intake manifold position sender, Position sender for charge pressure positioner, Engine/motor control unit

- GX20 Temperature and pressure sender for low-pressure fuel system
- G81 Fuel temperature sender
- G410 Fuel pressure sender for low pressure
- G513 Variable intake manifold position sender
- G581 Position sender for charge pressure positioner
- J623 Engine/motor control unit
- T2qa 2-pin connector, black
- T3gr 3-pin connector, brown
- T3ha 3-pin connector, brown
- T4gp 4-pin connector, black
- T60e 60-pin connector, black
- 283 Earth point 2, engine prewiring harness
- D39 Connection 1, in engine prewiring harness
- D110 Connection 8 in engine compartment wiring harness
- * For models with Euro 6 plus emission standard
- *2 For models with Euro 3 emission standard
- *3 For models with Euro 4 emission standard
- *4 For models with Euro 5 plus emission standard

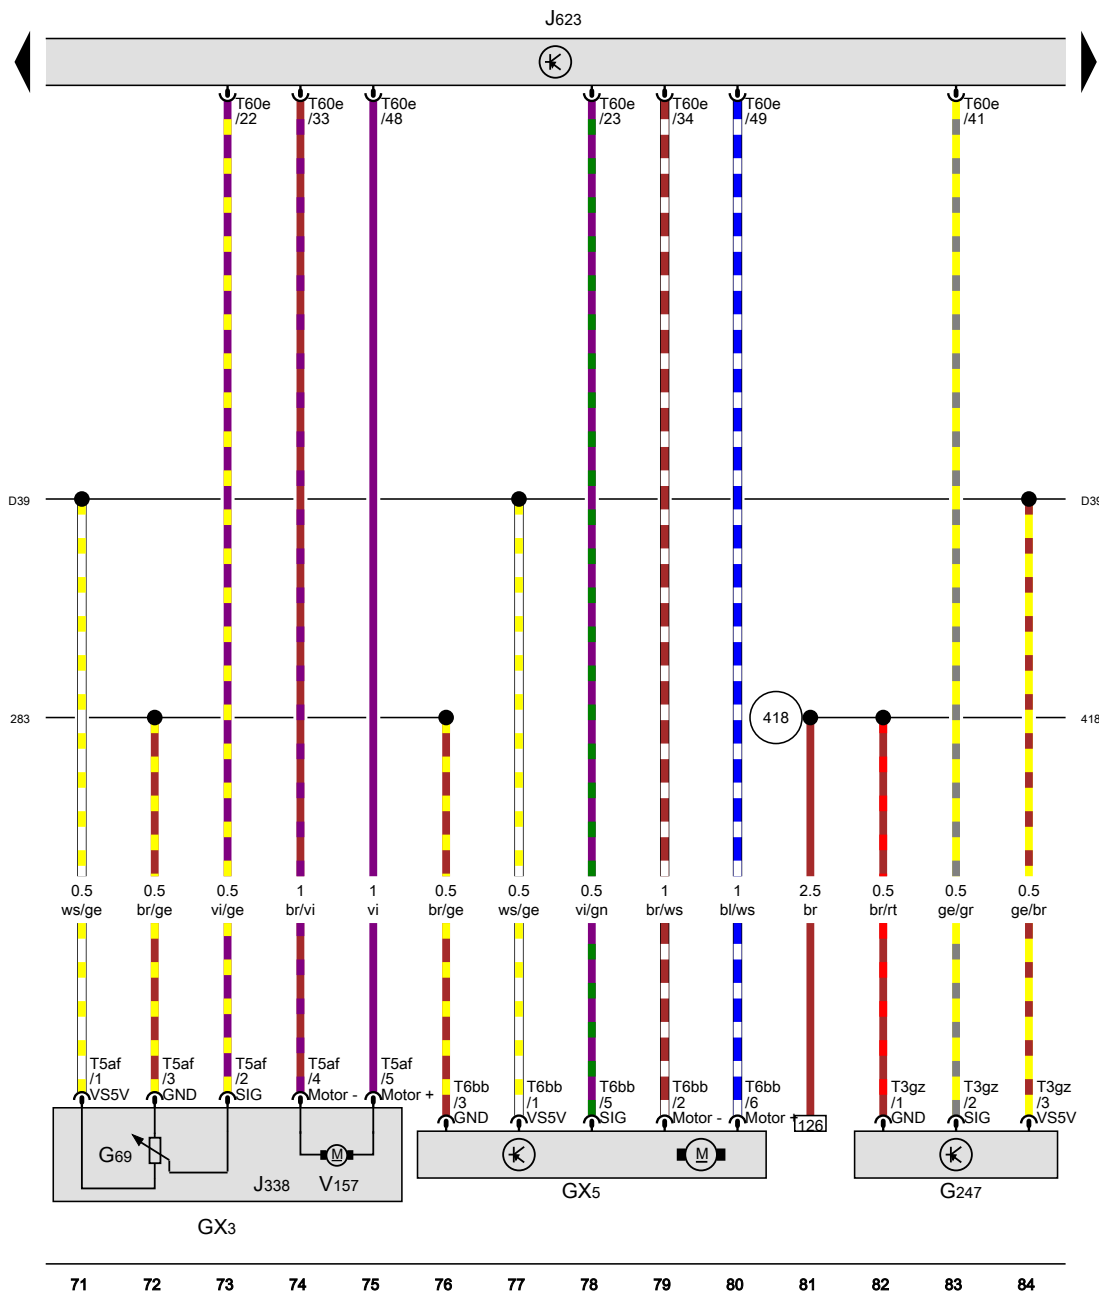

Throttle valve module, Exhaust gas recirculation valve 1,
Fuel pressure sender, Engine/motor control unit

- GX3 Throttle valve module
- GX5 Exhaust gas recirculation valve 1
- G69 Throttle valve potentiometer
- G247 Fuel pressure sender
- J338 Throttle valve module
- J623 Engine/motor control unit
- T3gz 3-pin connector, black
- T5af 5-pin connector, black
- T6bb 6-pin connector, grey
- T60e 60-pin connector, black
- V157 Intake manifold flap motor


- 283 Earth point 2, engine prewiring harness
- 418 Earth connection 10, in engine compartment wiring harness
- D39 Connection 1, in engine prewiring harness

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink



Intake manifold sender, Exhaust gas temperature sender 1, Pressure differential sender, Charge air temperature sender before charge air cooler, Charge air temperature sender after charge air cooler, Engine/motor control unit

- GX9 Intake manifold sender
- G31 Charge pressure sender
- G235 Exhaust gas temperature sender 1
- G505 Pressure differential sender
- G810 Charge air temperature sender before charge air cooler
- G811 Charge air temperature sender after charge air cooler
- J623 Engine/motor control unit
- T2jh 2-pin connector, black
- T2jr 2-pin connector, black
- T2jt 2-pin connector, black
- T3gq 3-pin connector, black
- T4dw 4-pin connector, black
- T60e 60-pin connector, black
- 418 Earth connection 10, in engine compartment wiring harness
- D39 Connection 1, in engine prewiring harness
- * Pre-wired component

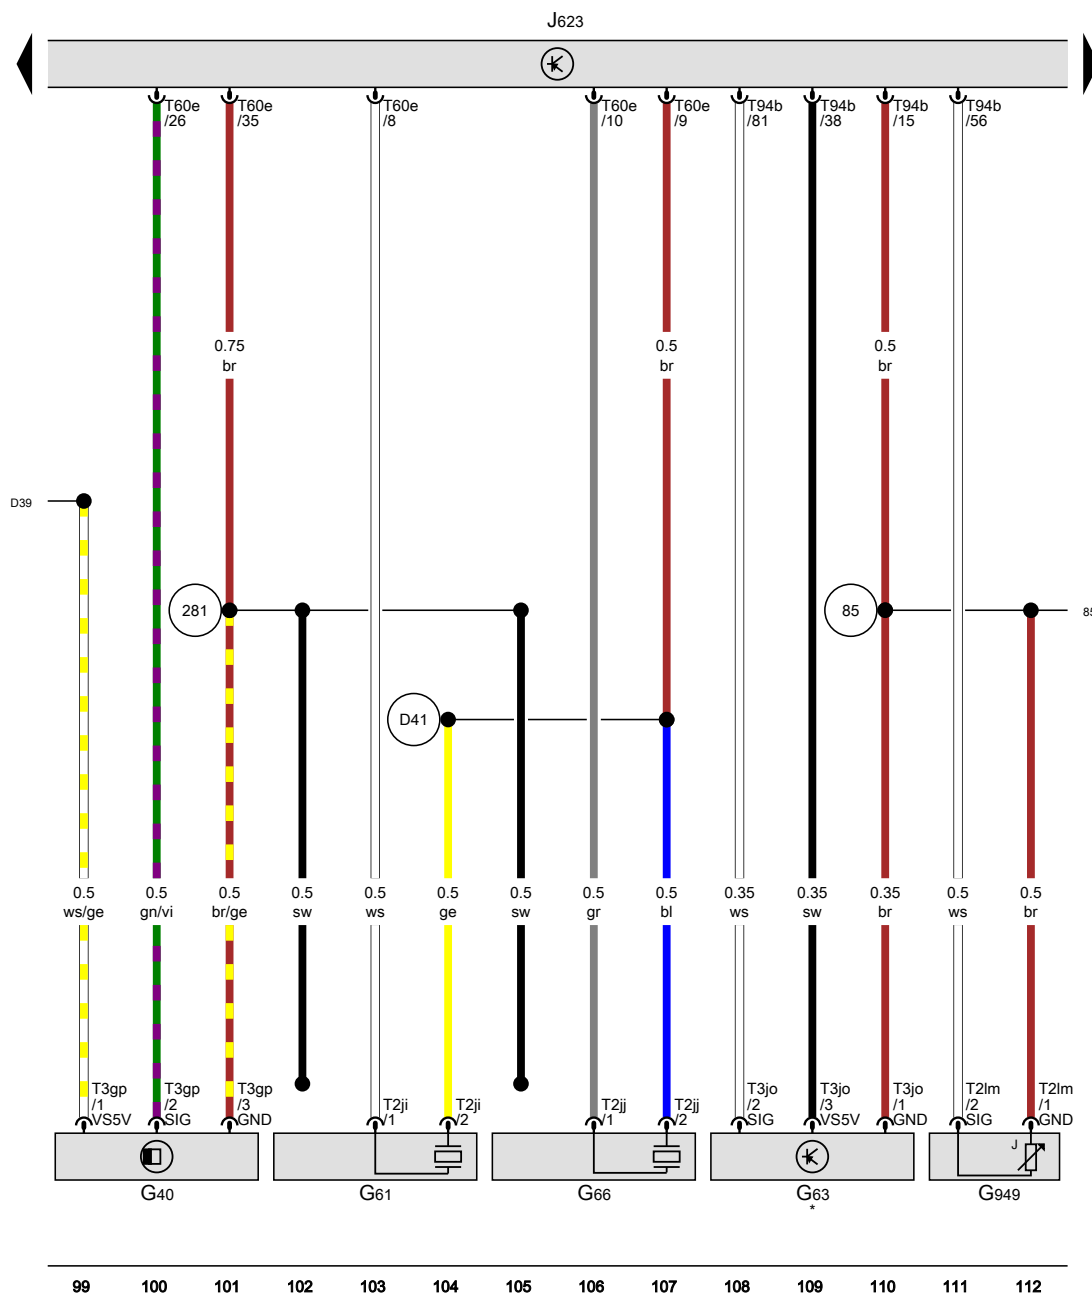


Hall sender, Knock sensor 1, Water separator sender, Knock sensor 2, Temperature sensor 3 for exhaust recirculation, Engine/motor control unit

- G40 Hall sender
- G61 Knock sensor 1
- G63 Water separator sender
- G66 Knock sensor 2
- G949 Temperature sensor 3 for exhaust recirculation
- J623 Engine/motor control unit
- T2ji 2-pin connector, black
- T2jj 2-pin connector, black
- T2lm 2-pin connector, colourless, black
- T3gp 3-pin connector, black
- T3jo 3-pin connector, black
- T60e 60-pin connector, black
- T94b 94-pin connector, black

- 85 Earth connection 1, in engine compartment wiring harness
- 281 Earth point 1, engine prewiring harness
- D39 Connection 1, in engine prewiring harness
- D41 Connection 3, in engine prewiring harness
- * Not for models with Euro 6 plus emission standard

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink

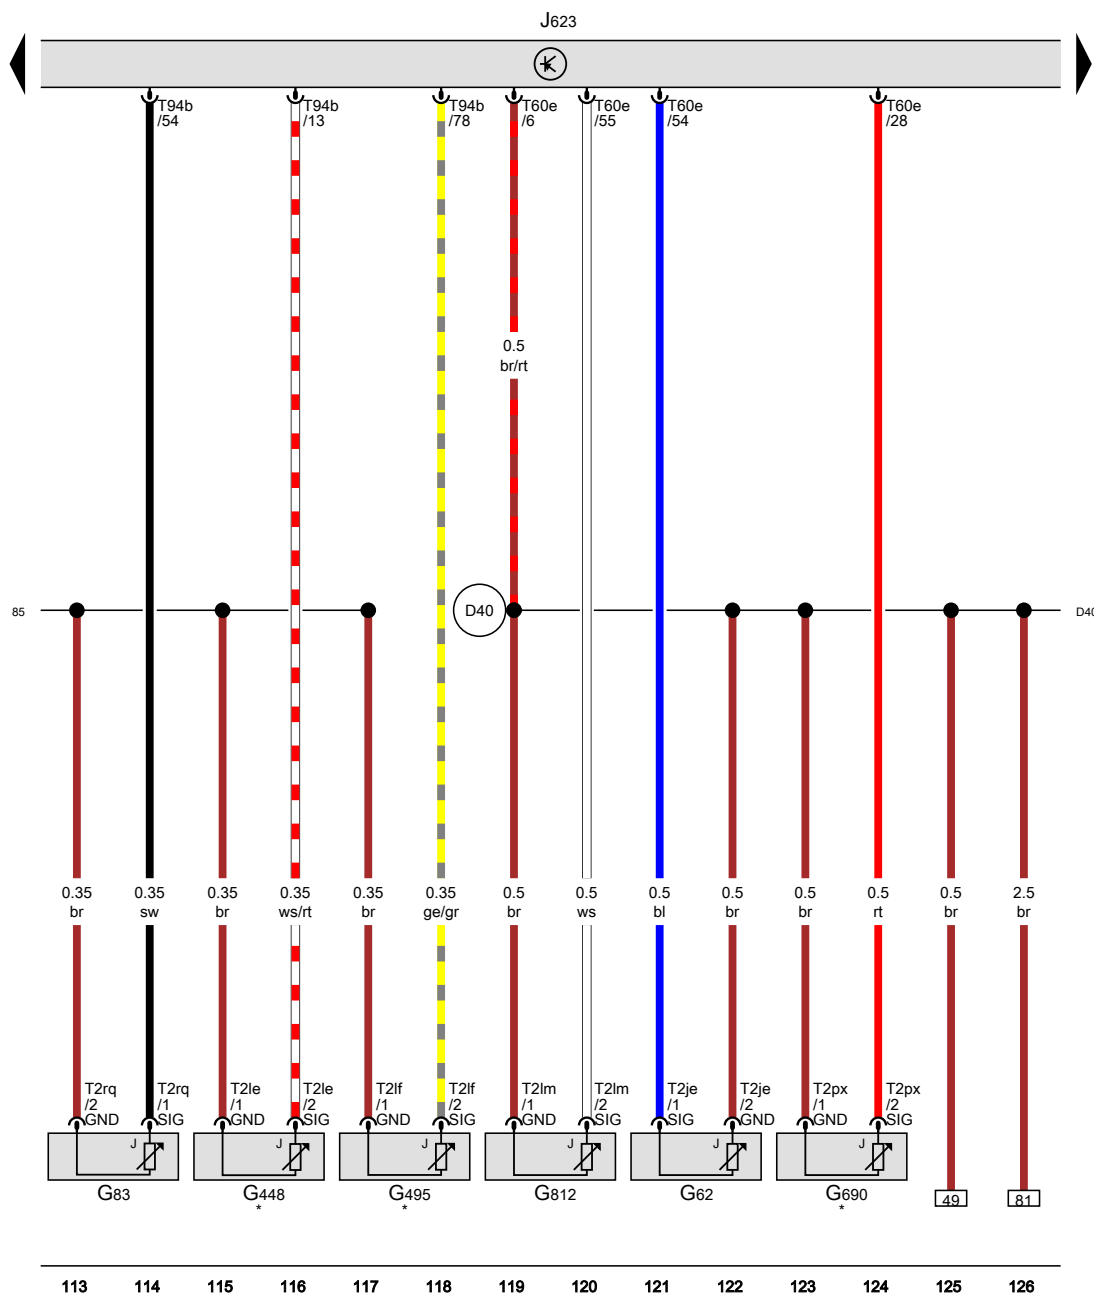

Coolant temperature sender, Radiator outlet coolant temperature sender, Exhaust gas temperature sender 2, Exhaust gas temperature sender 3, Temperature sensor 2 for exhaust recirculation, Coolant temperature sender 3, Engine/motor control unit

- G62 Coolant temperature sender
- G83 Radiator outlet coolant temperature sender
- G448 Exhaust gas temperature sender 2
- G495 Exhaust gas temperature sender 3
- G690 Temperature sensor 2 for exhaust recirculation
- G812 Coolant temperature sender 3
- J623 Engine/motor control unit
- T2je 2-pin connector, black
- T2le 2-pin connector, black
- T2lf 2-pin connector, brown
- T2lm 2-pin connector, black, colourless
- T2px 2-pin connector, brown
- T2rq 2-pin connector, black
- T60e 60-pin connector, black
- T94b 94-pin connector, black


85 Earth connection 1, in engine compartment wiring harness

D40 Connection 2, in engine prewiring harness

* Pre-wired component

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink


[SYN-054100119]

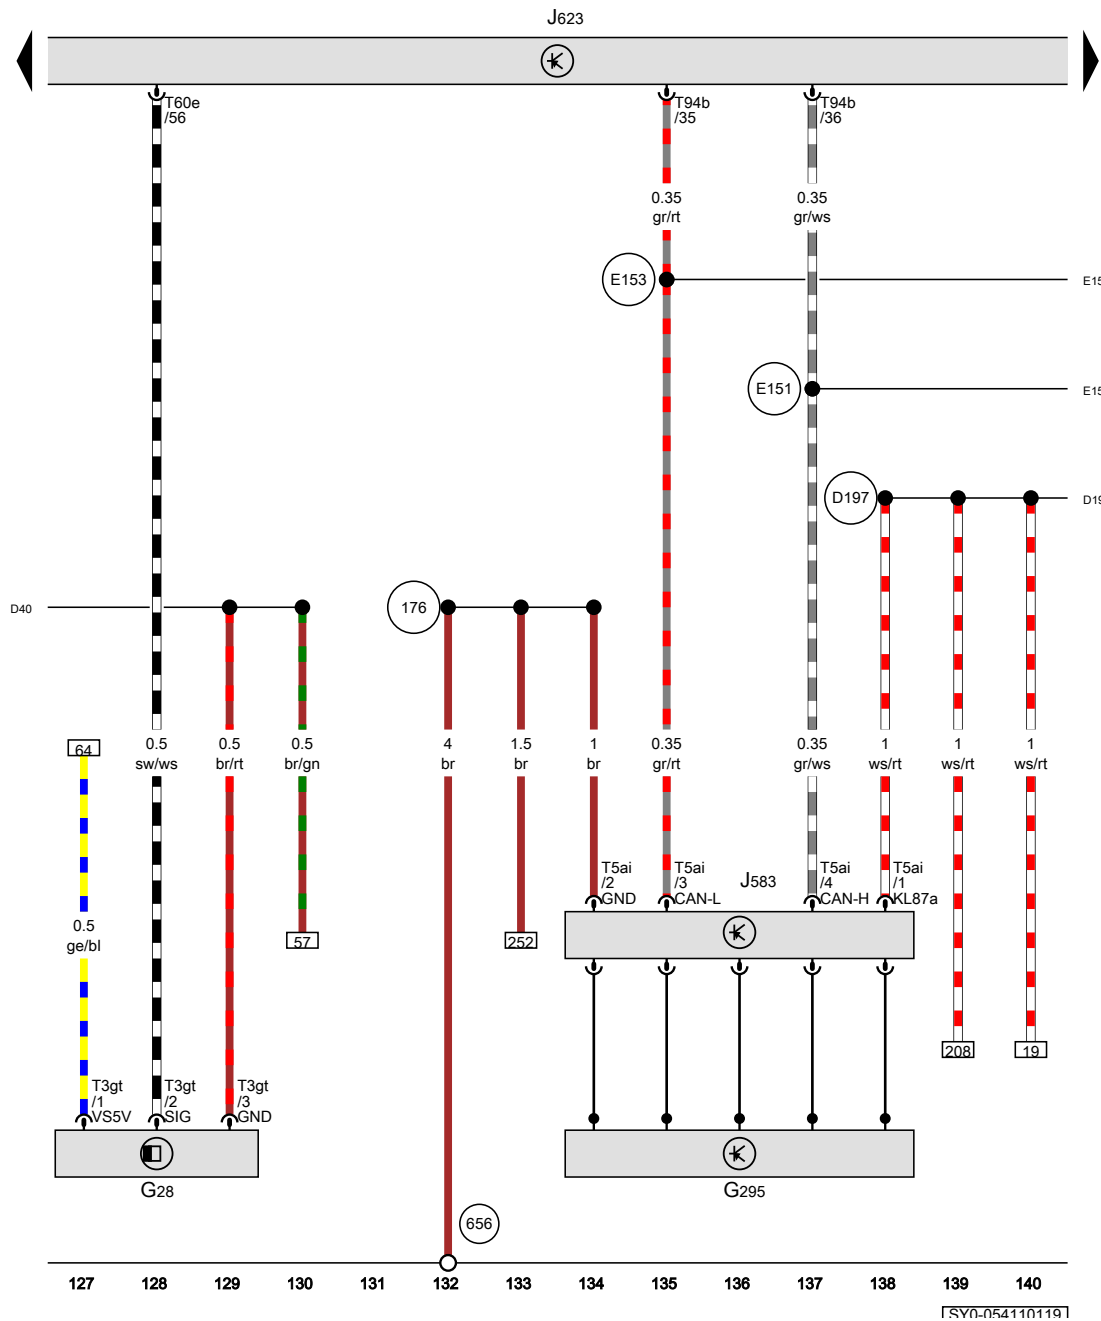


Engine speed sender, Control unit for NOx sender, Engine/motor control unit

- G28 Engine speed sender
- G295 NOx sender
- J583 Control unit for NOx sender
- J623 Engine/motor control unit
- T3gt 3-pin connector, black
- T5ai 5-pin connector, black
- T60e 60-pin connector, black
- T94b 94-pin connector, black
- 176 Earth connection, in right headlight wiring harness
- 656 Earth point, on right headlight
- D40 Connection 2, in engine prewiring harness
- D197 Connection 5 (87a), in engine compartment wiring harness
- E151 Connection 1 (CAN bus, engine/motor control unit, high)
- E153 Connection 1 (CAN bus, engine/motor control unit, low)

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink

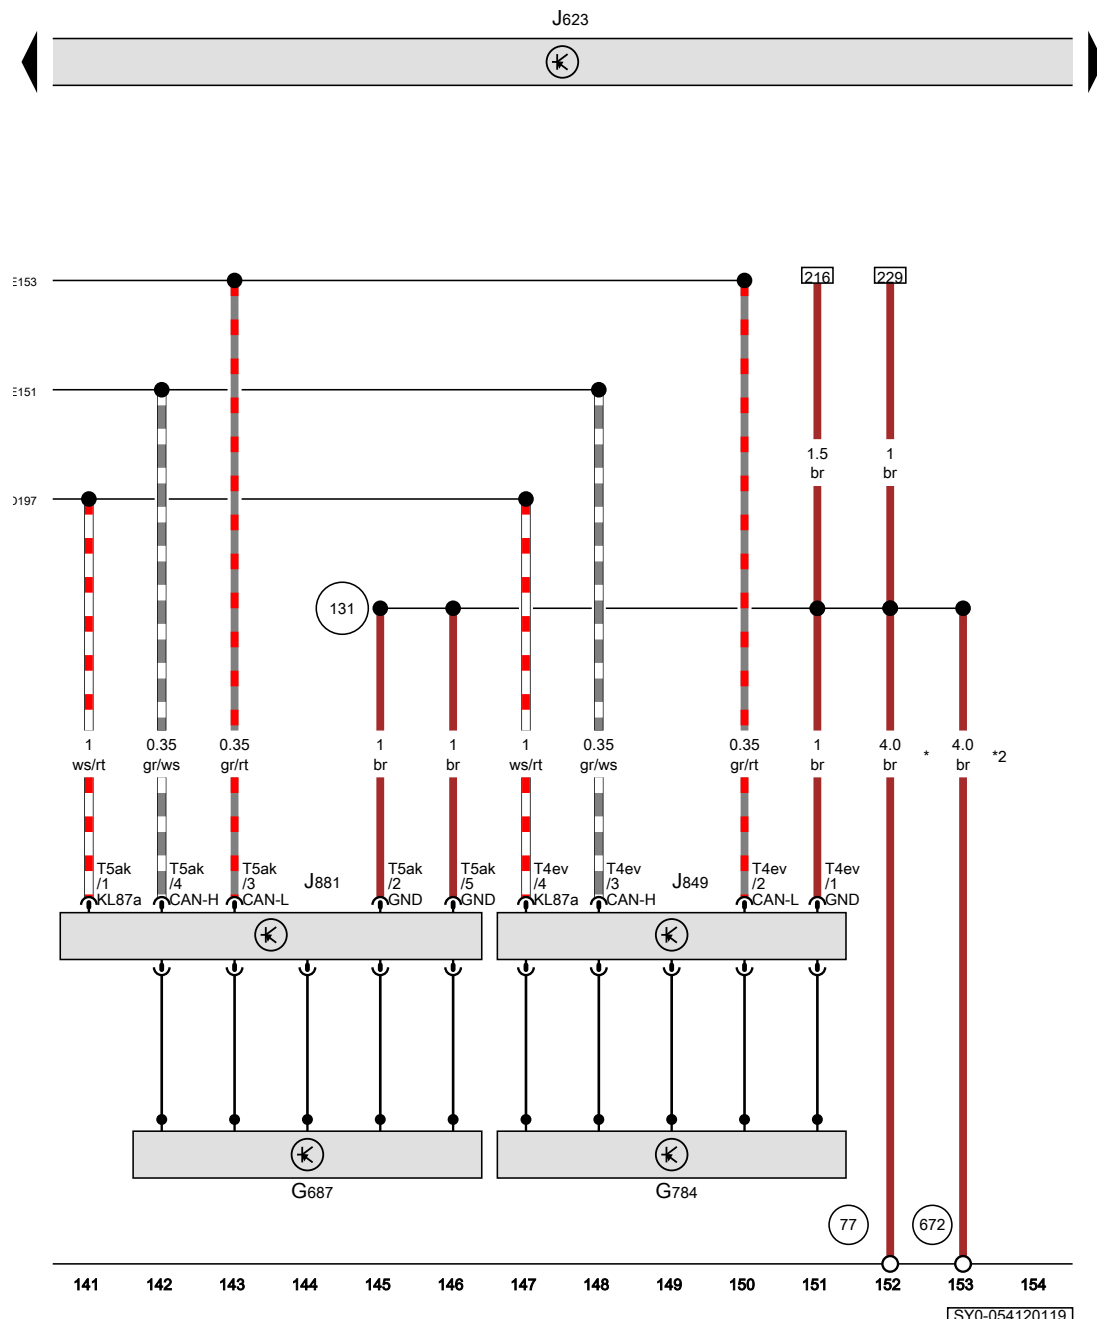


Air mass meter, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4

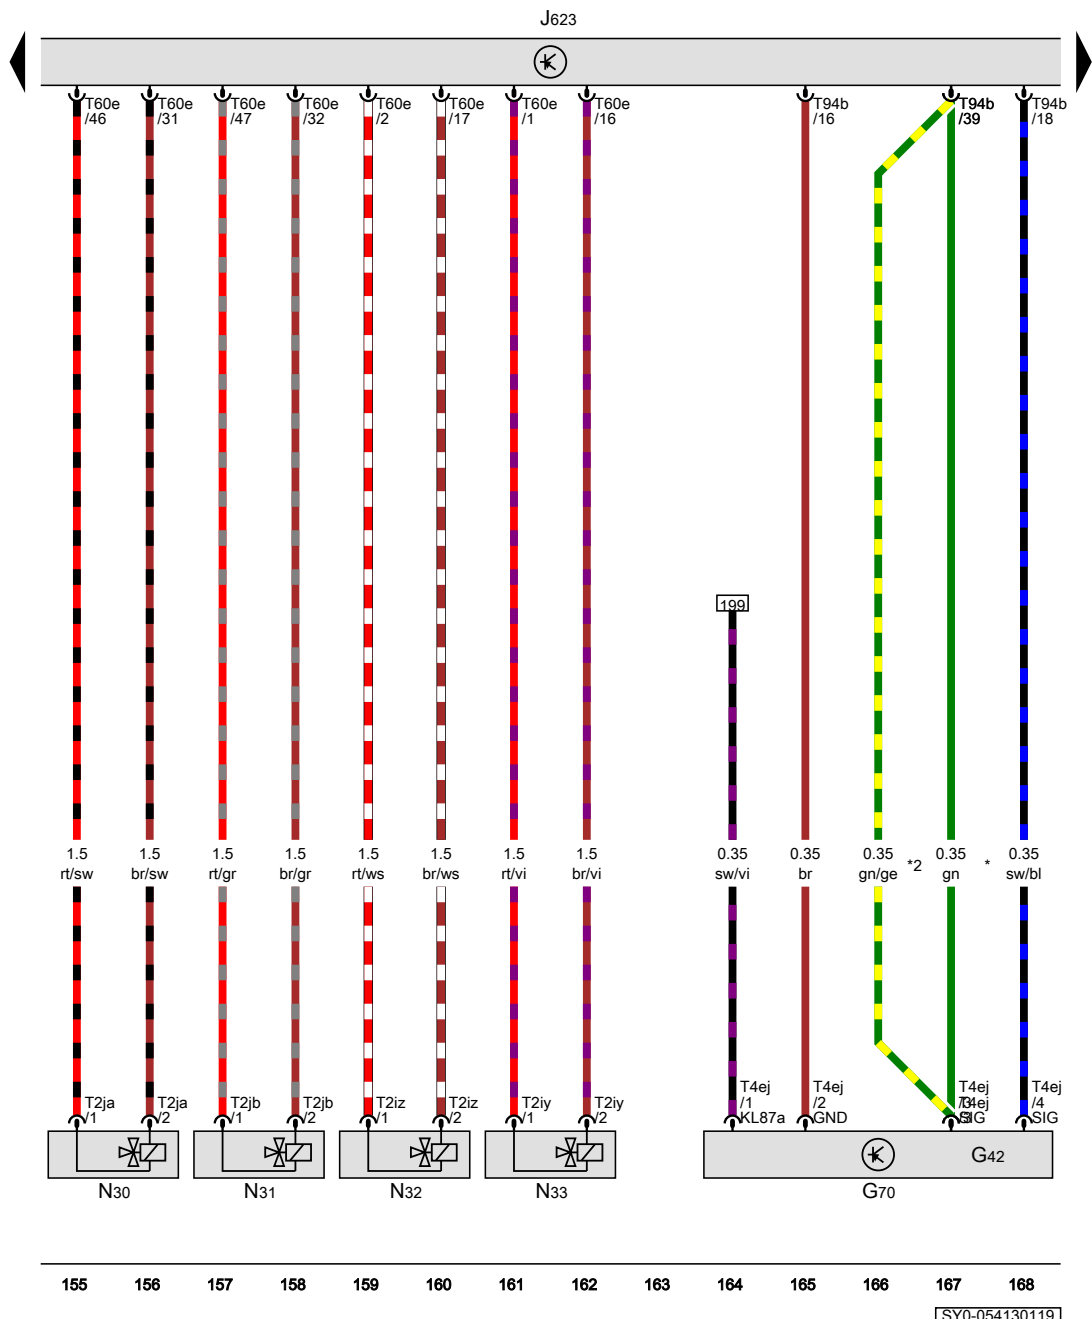


- G42 Intake air temperature sender
- G70 Air mass meter
- J623 Engine/motor control unit
- N30 Injector, cylinder 1
- N31 Injector, cylinder 2
- N32 Injector, cylinder 3
- N33 Injector, cylinder 4
- T2iy 2-pin connector, black
- T2iz 2-pin connector, black
- T2ja 2-pin connector, black
- T2jb 2-pin connector, black
- T4ej 4-pin connector, black
- T60e 60-pin connector, black
- T94b 94-pin connector, black
- * Up to November 2017
- *2 From November 2017

Oil pressure switch, Accelerator pedal module, Engine/ motor control unit, Fuel pressure regulating valve

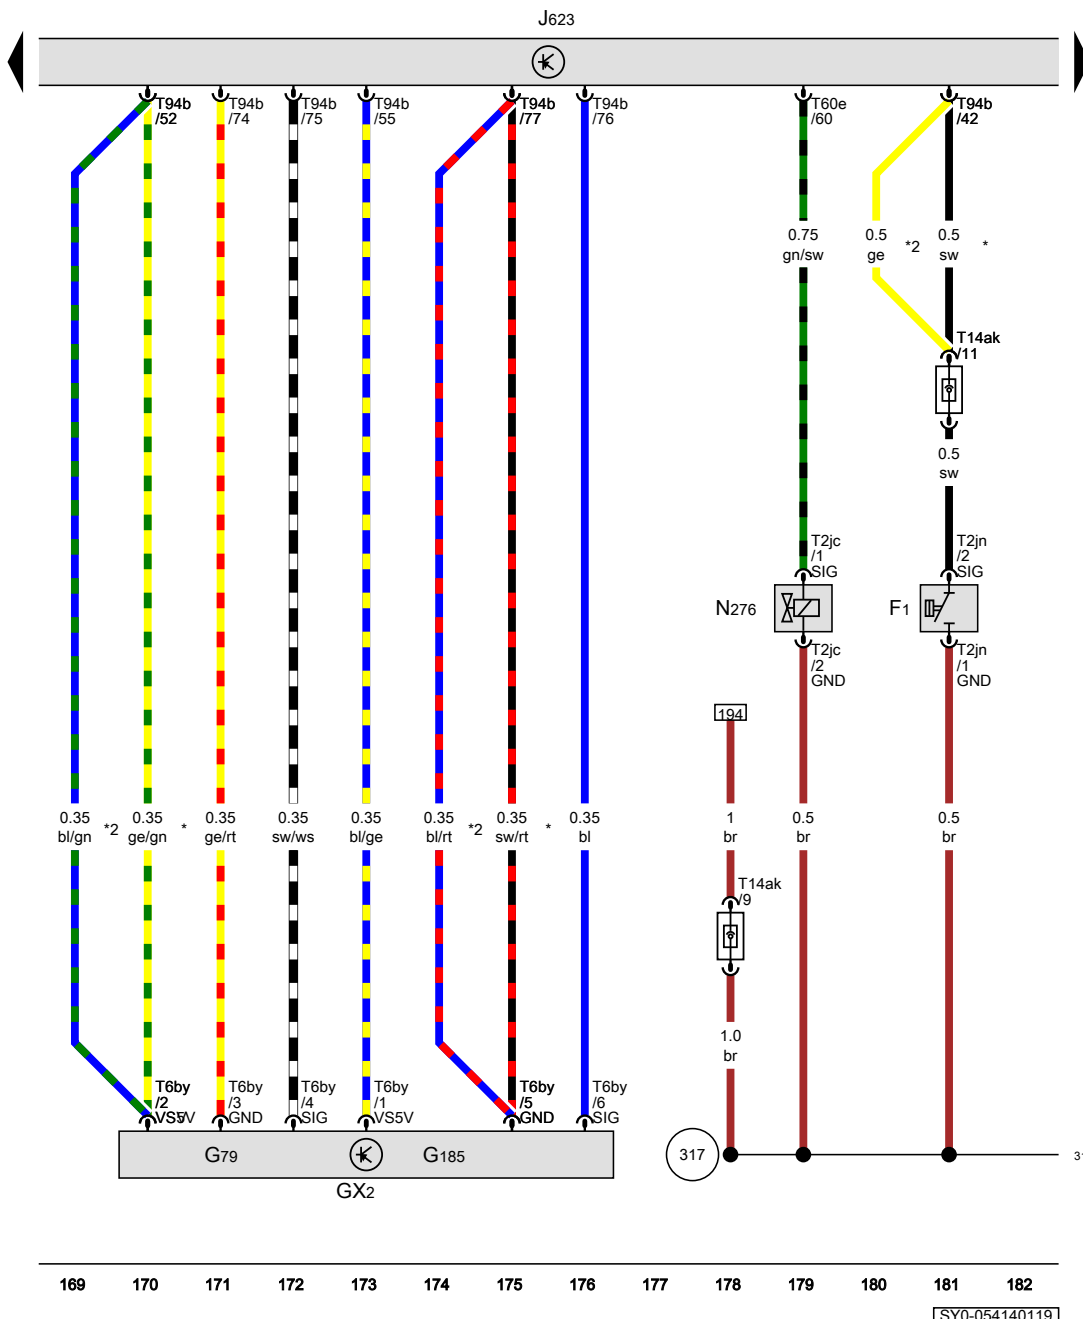

- F1 Oil pressure switch
- GX2 Accelerator pedal module
- G79 Accelerator position sender
- G185 Accelerator position sender 2
- J623 Engine/motor control unit
- N276 Fuel pressure regulating valve
- T2jc 2-pin connector, black
- T2jn 2-pin connector, red
- T6by 6-pin connector, black
- T14ak 14-pin connector, grey
- T60e 60-pin connector, black
- T94b 94-pin connector, black
- 317 Earth connection 7, in engine compartment wiring harness
- * Up to November 2017
- *2 From November 2017

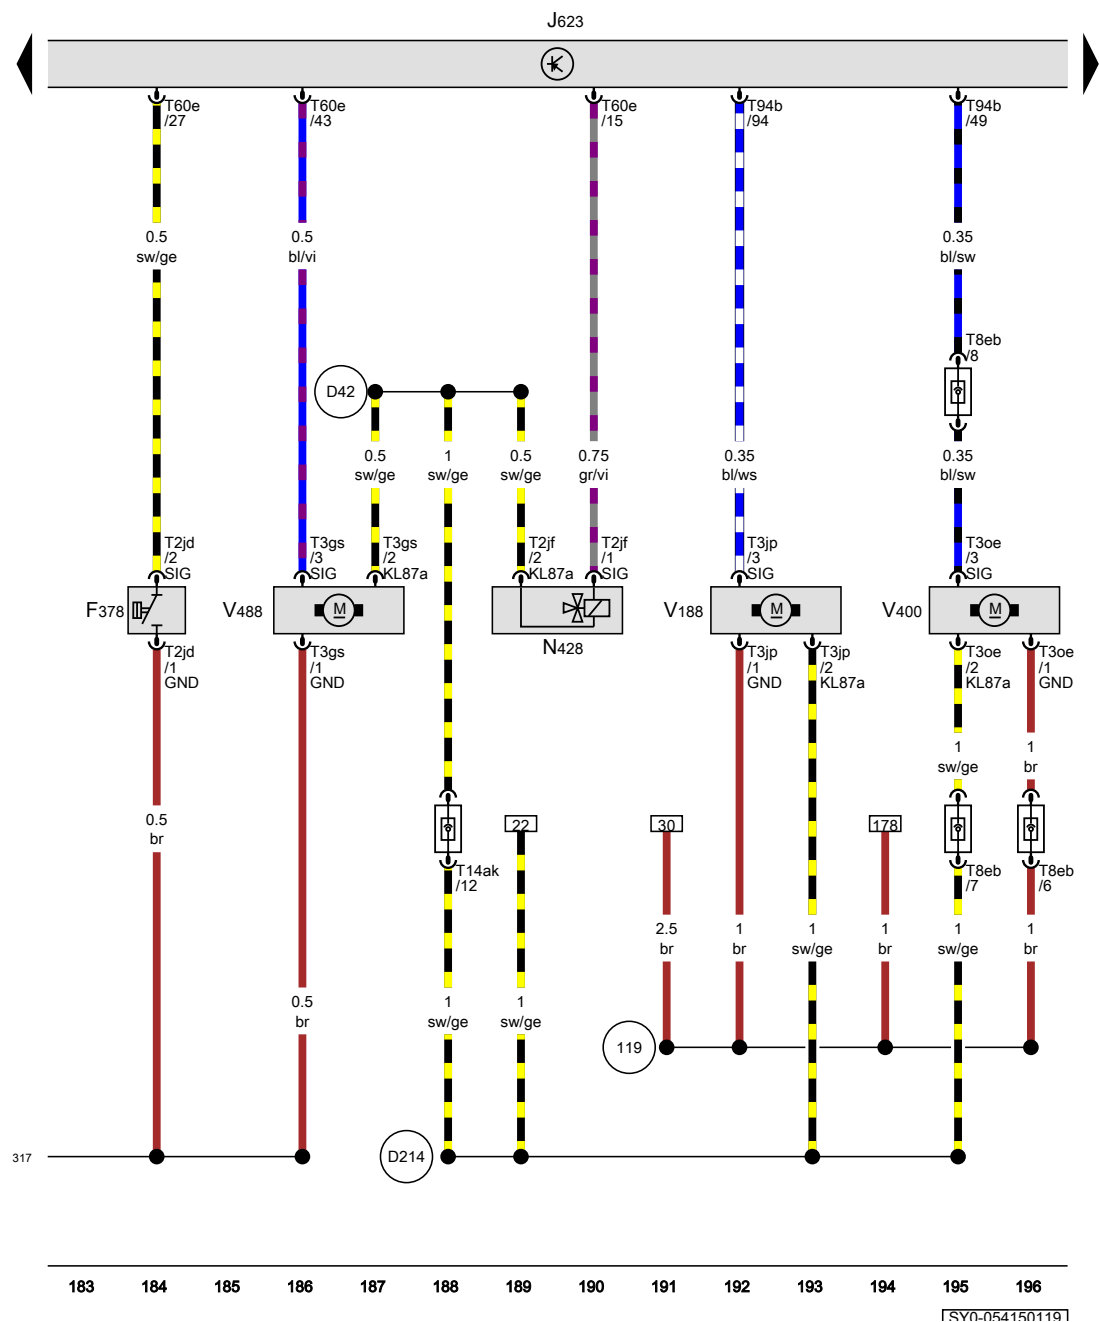


Oil pressure switch for reduced oil pressure, Engine/motor control unit, Valve for oil pressure control, Charge air cooling pump, Pump for exhaust gas recirculation cooler, Auxiliary pump for heating

- F378 Oil pressure switch for reduced oil pressure
- J623 Engine/motor control unit
- N428 Valve for oil pressure control
- T2jd 2-pin connector, black
- T2jf 2-pin connector, black
- T3gs 3-pin connector, black
- T3jp 3-pin connector, black
- T3oe 3-pin connector, black
- T8eb 8-pin connector, black
- T14ak 14-pin connector, grey
- T60e 60-pin connector, black
- T94b 94-pin connector, black
- V188 Charge air cooling pump
- V400 Pump for exhaust gas recirculation cooler
- V488 Auxiliary pump for heating

- 119 Earth connection 1, in headlight wiring harness
- 317 Earth connection 7, in engine compartment wiring harness
- D42 Connection 4, in engine prewiring harness
- D214 Connection 8 (87a), in engine compartment wiring harness

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

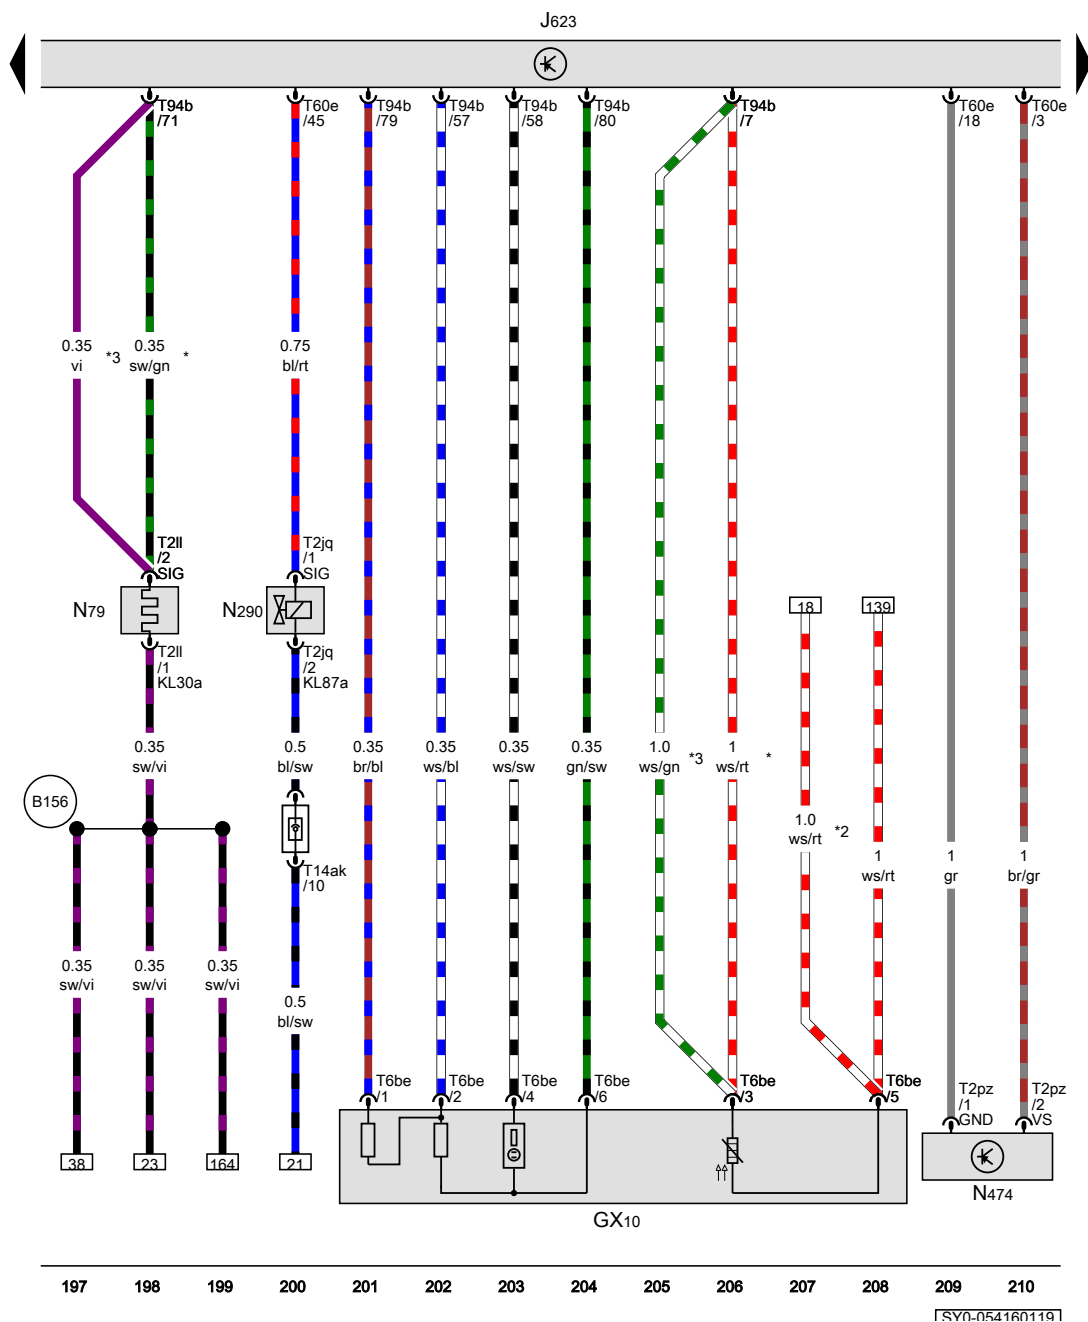


Lambda probe 1 before catalytic converter, Engine/motor control unit, Heater element for crankcase breather, Fuel metering valve, Injector for reducing agent

- GX10 Lambda probe 1 before catalytic converter
- J623 Engine/motor control unit
- N79 Heater element for crankcase breather
- N290 Fuel metering valve
- N474 Injector for reducing agent
- T2jq 2-pin connector, black
- T2ll 2-pin connector, black
- T2pz 2-pin connector, black
- T6be 6-pin connector, black
- T14ak 14-pin connector, grey
- T60e 60-pin connector, black
- T94b 94-pin connector, black

B156 Positive connection (30a), in interior wiring harness

- * Up to November 2017
- *2 For models with Euro 5 plus emission standard
- *3 From November 2017

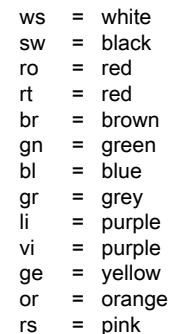


*3 From November 2017

Delivery unit for reducing agent metering system, Engine/
motor control unit, Control unit for reducing agent heater,
Heater for reducing agent line (heater circuit 2)


- GX19 Delivery unit for reducing agent metering system
- J623 Engine/motor control unit
- J891 Control unit for reducing agent heater
- T2pw 2-pin connector, black
- T4gm 4-pin connector, black
- T4gn 4-pin connector, black
- T5bg 5-pin connector, black
- T5bh 5-pin connector, colourless
- T14ao 14-pin connector, black
- T94b 94-pin connector, black
- Z104 Heater for reducing agent line (heater circuit 2)

H3 Connection 1 in wiring harness for reducing agent tank

* Pre-wired component

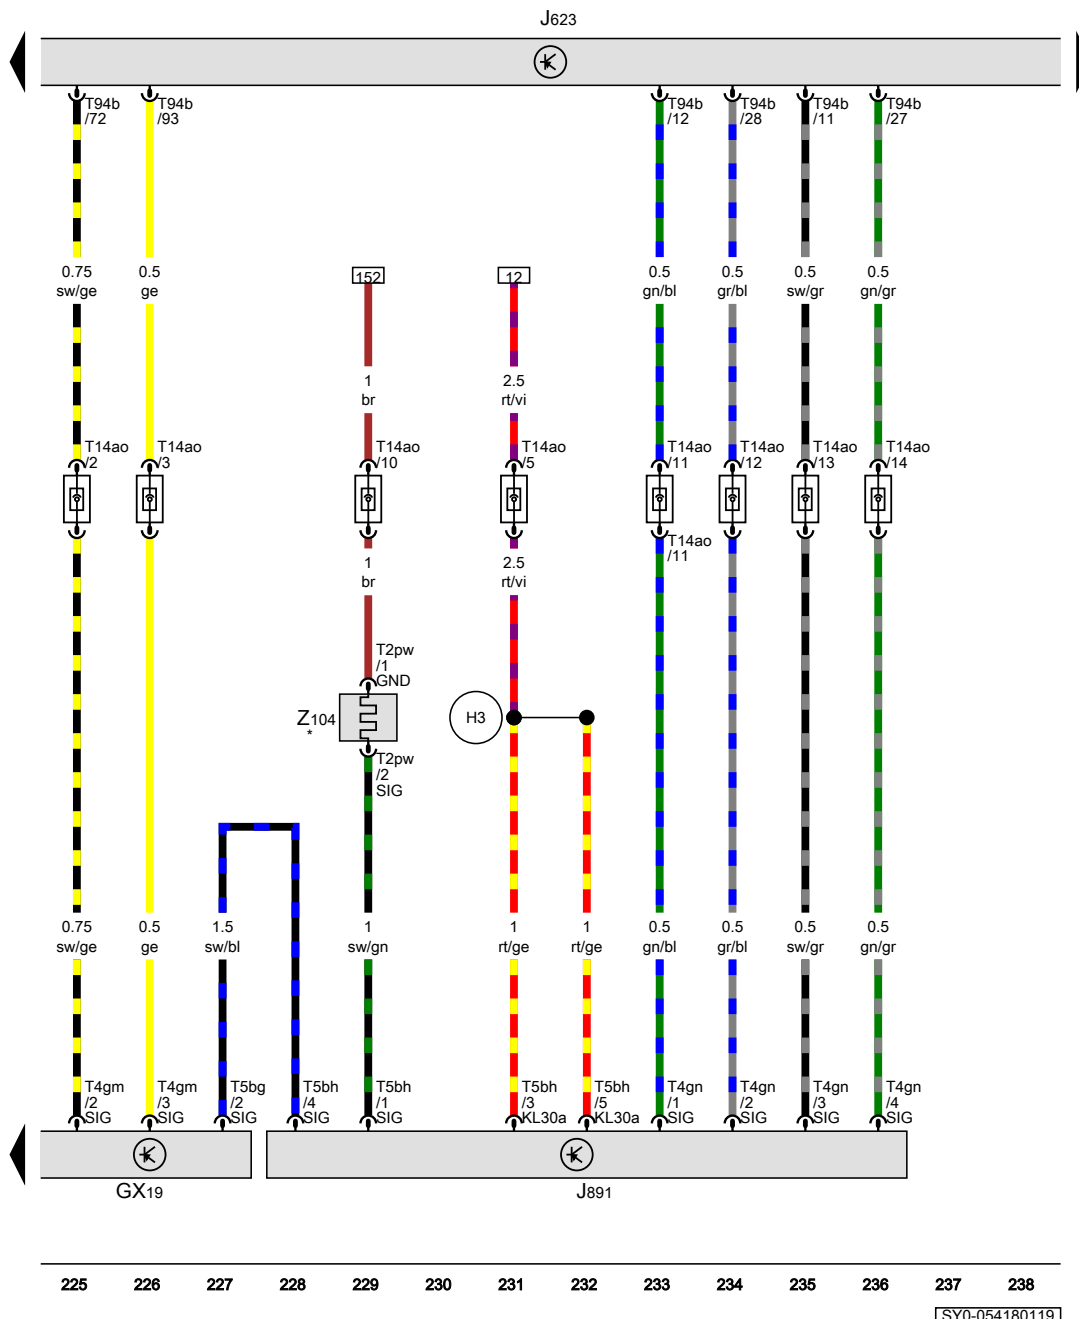

Oil level and oil temperature sender, Clutch position sender, Engine/motor control unit

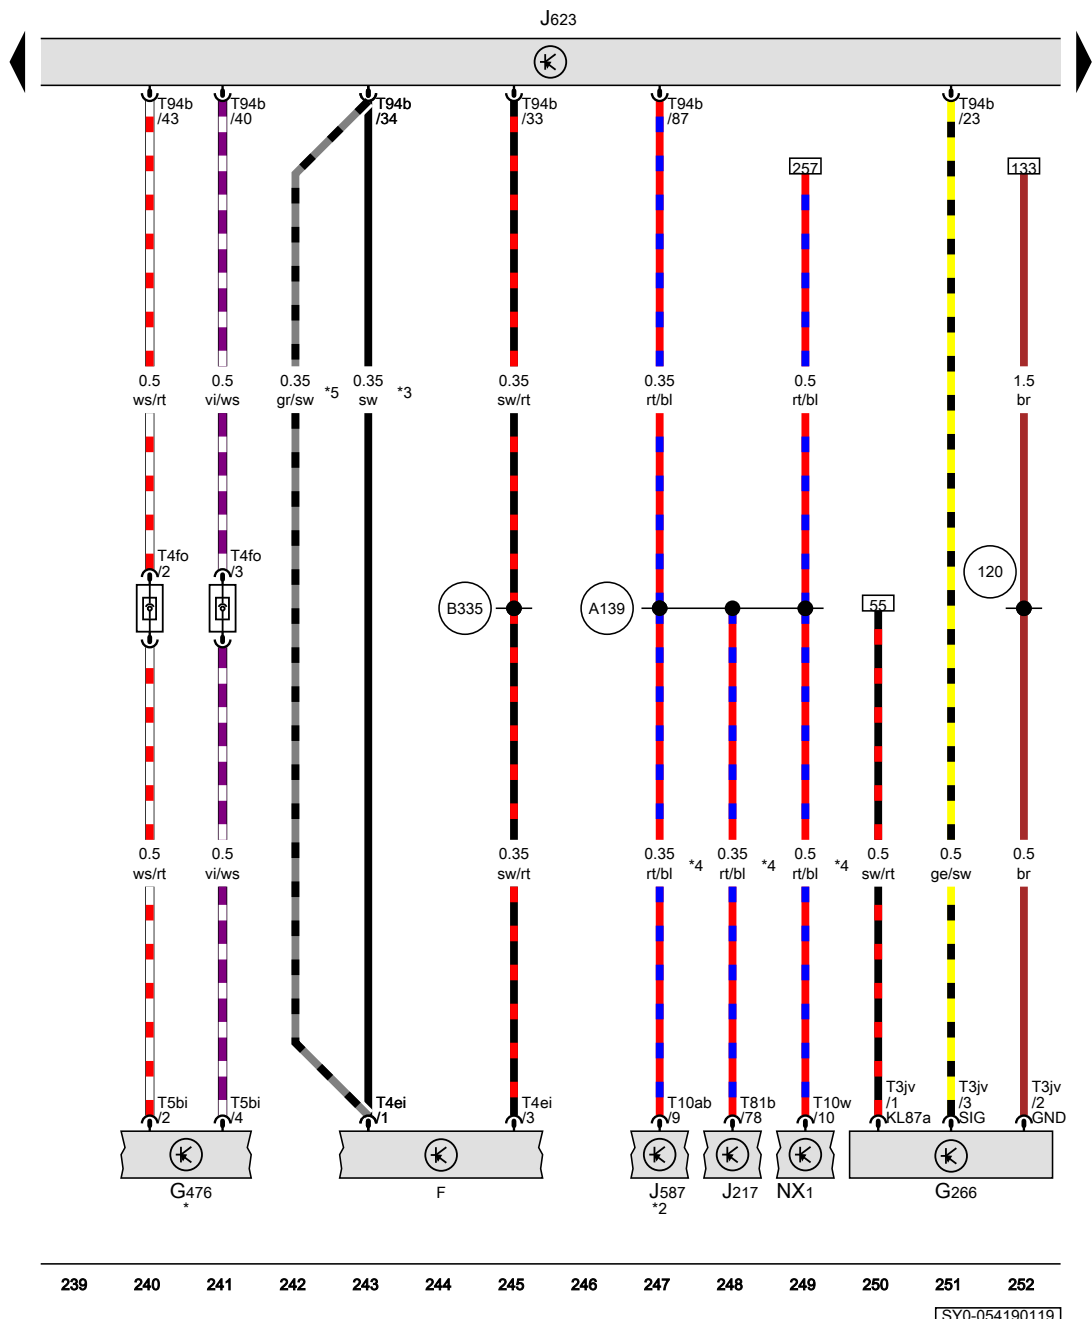

- F Brake light switch
- G266 Oil level and oil temperature sender
- G476 Clutch position sender
- J217 Automatic gearbox control unit
- J587 Selector lever sensors control unit
- J623 Engine/motor control unit
- NX1 Gearbox
- T3jv 3-pin connector, black
- T4ei 4-pin connector, black
- T4fo 4-pin connector, black
- T5bi 5-pin connector, black
- T10ab 10-pin connector, red
- T10w 10-pin connector, black
- T81b 81-pin connector, black
- T94b 94-pin connector, black


120 Earth connection 2, in headlight wiring harness

A139 Connection 3 (15) in dash panel wiring harness

B335 Connection 1 (54), in main wiring harness

- * see applicable current flow diagram for basic equipment
- *2 Pre-wired component
- *3 Up to November 2017
- *4 For models with automatic gearbox
- *5 From November 2017

Engine/motor control unit, Radiator fan

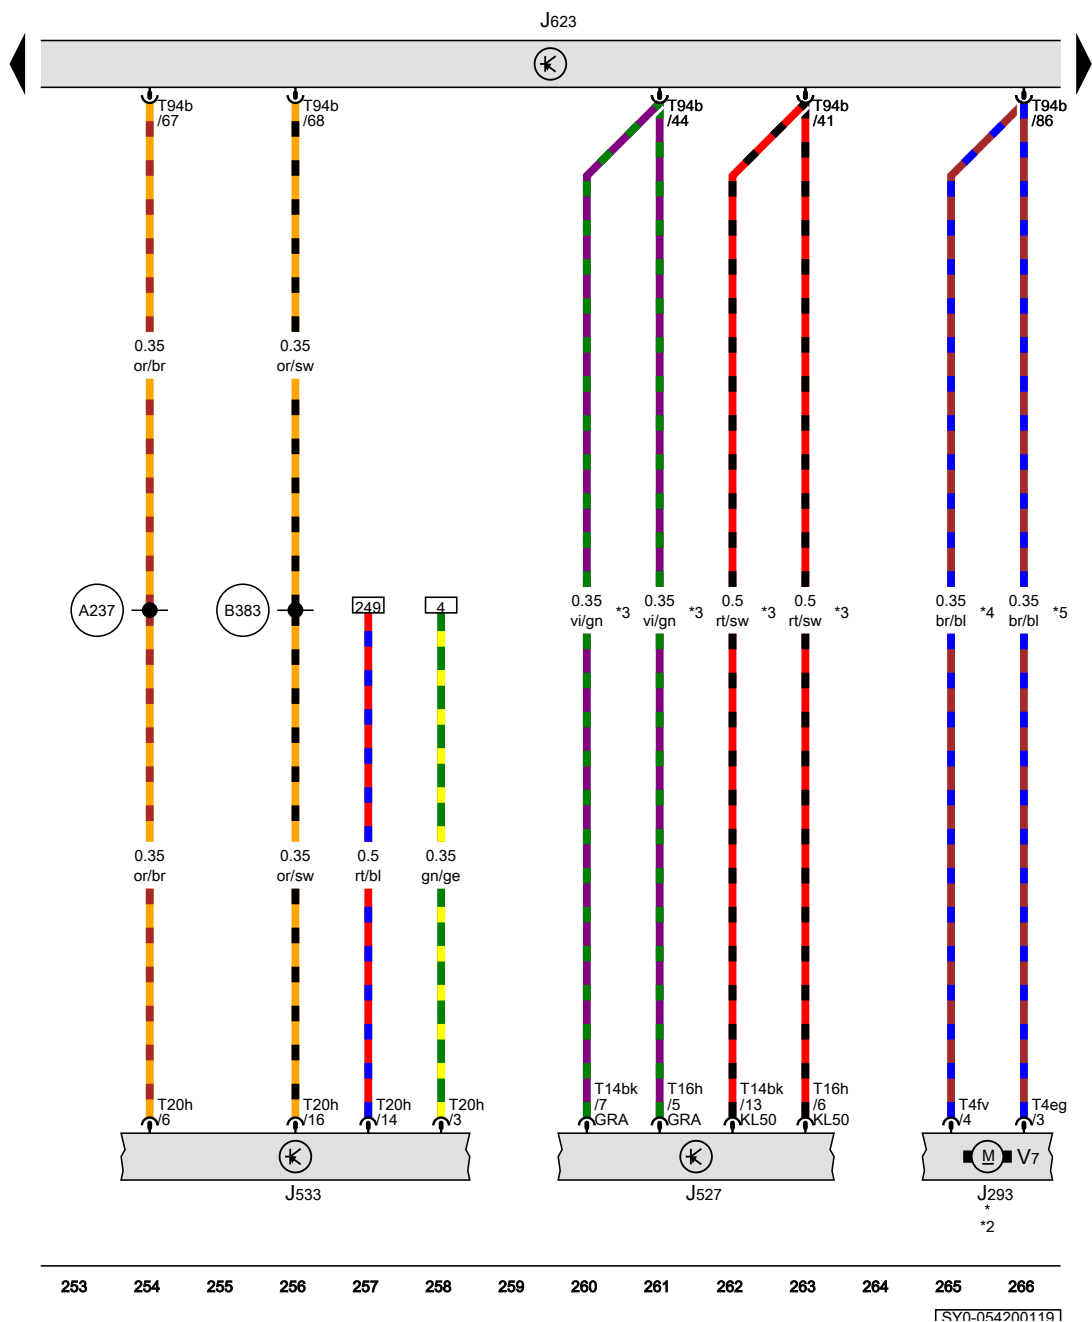


- J293 Radiator fan control unit
- J527 Steering column electronics control unit
- J533 Data bus diagnostic interface
- J623 Engine/motor control unit
- T4eg 4-pin connector, black
- T4fv 4-pin connector, black
- T14bk 14-pin connector, black
- T16h 16-pin connector, black
- T20h 20-pin connector, red
- T94b 94-pin connector, black
- V7 Radiator fan
- A237 Connection 1 (powertrain CAN bus, low), in dash panel wiring harness
- B383 Connection 1 (powertrain CAN bus, high), in main wiring harness
- * Pre-wired component
- *2 see applicable current flow diagram for radiator fan
- *3 According to equipment
- *4 For models with towing bracket
- *5 For models with no towing bracket

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

Engine/motor control unit, Starter relay 1, Starter relay 2

- J623 Engine/motor control unit
- J906 Starter relay 1
- J907 Starter relay 2
- T94b 94-pin connector, black
- * see applicable current flow diagram for basic equipment

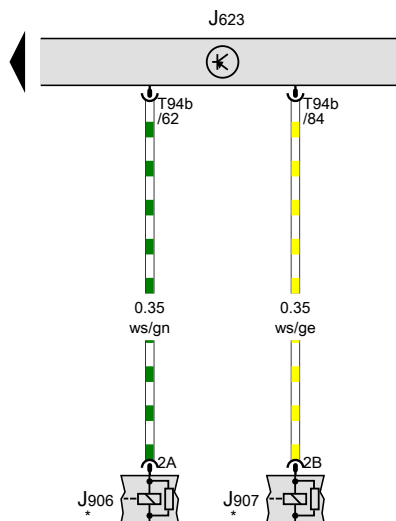


ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

267 268 269 270 271 272 273 274 275 276 277 278 279 280

[SYN-054210119]

2.0l diesel engine , DAWA,DAWB

From May 2017

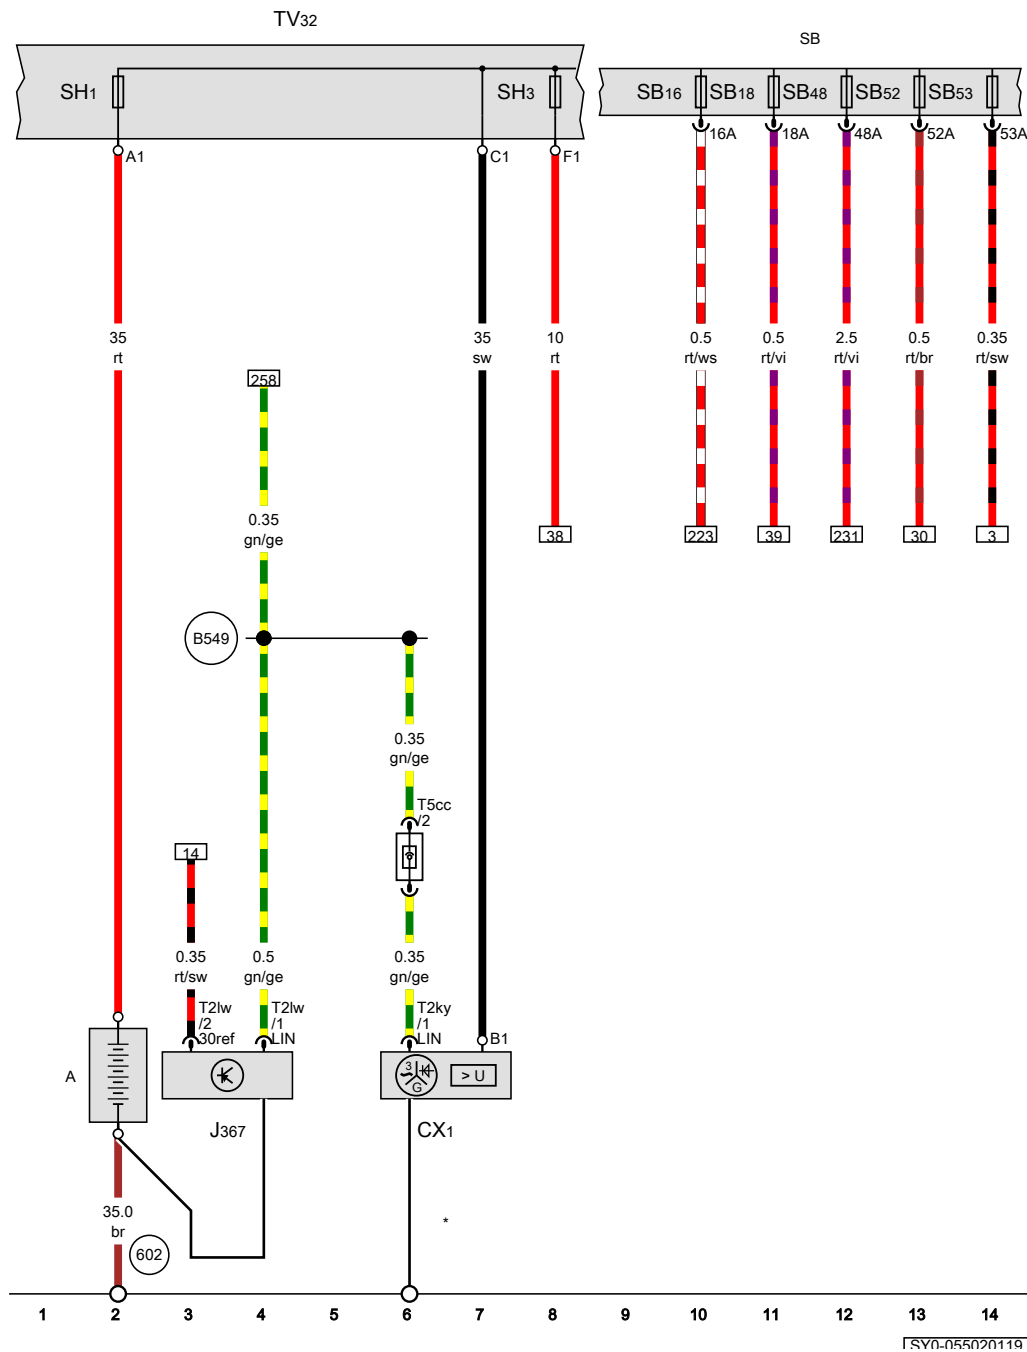

Battery, Alternator with voltage regulator, Battery monitor control unit, Fuse holder B, Jump start connection


- A Battery
- CX1 Alternator with voltage regulator
- J367 Battery monitor control unit
- SB Fuse holder B
- SH1 Fuse 1 in fuse holder H
- SH3 Fuse 3 in fuse holder H
- SB16 Fuse 16 on fuse holder B
- SB18 Fuse 18 on fuse holder B
- SB48 Fuse 48 on fuse holder B
- SB52 Fuse 52 on fuse holder B
- SB53 Fuse 53 on fuse holder B
- T2ky 2-pin connector, black
- T2lw 2-pin connector, black
- T5cc 5-pin connector, black
- TV32 Jump start connection

602 Earth point, in front left footwell

B549 Connection 2 (LIN bus) in main wiring harness

* Earth supply via housing

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

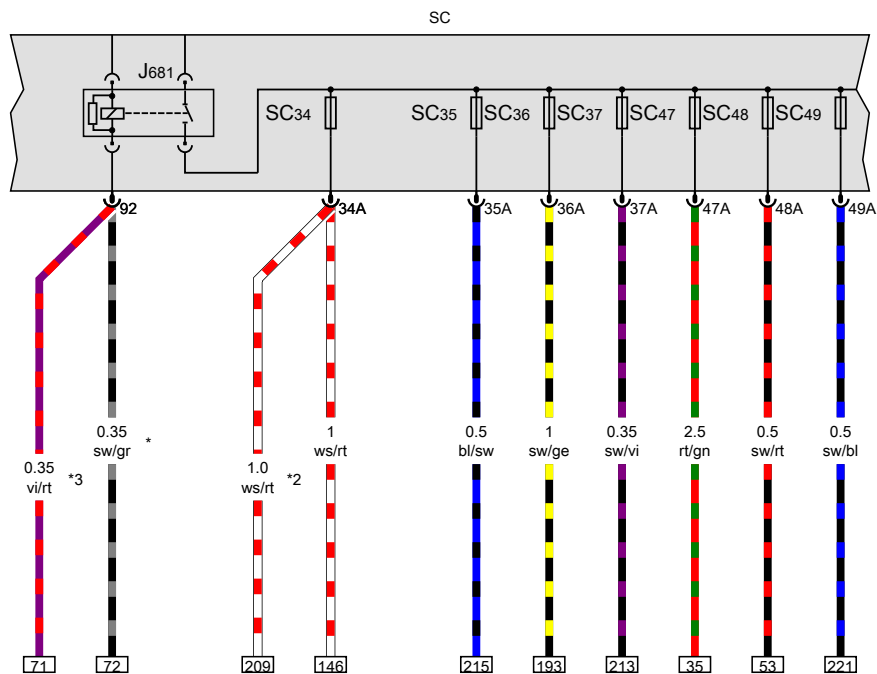

Fuse holder C

- J681 Terminal 15 voltage supply relay 2
- SC Fuse holder C
- SC34 Fuse 34 on fuse holder C
- SC35 Fuse 35 on fuse holder C
- SC36 Fuse 36 on fuse holder C
- SC37 Fuse 37 on fuse holder C
- SC47 Fuse 47 on fuse holder C
- SC48 Fuse 48 on fuse holder C
- SC49 Fuse 49 on fuse holder C
- * Up to November 2017
- *2 For models with Euro 5 emission standard
- *3 From November 2017

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink

Automatic glow period control unit, Engine/motor control unit

J179 Automatic glow period control unit
J623 Engine/motor control unit
T11b 11-pin connector
T94b 94-pin connector, black


84 Earth connection, engine block, in front right wiring harness


179 Earth connection, in left headlight wiring harness

655 Earth point, on left headlight

A23 Connection (30al), in dash panel wiring harness


D180 Connection (87a), in engine compartment wiring harness

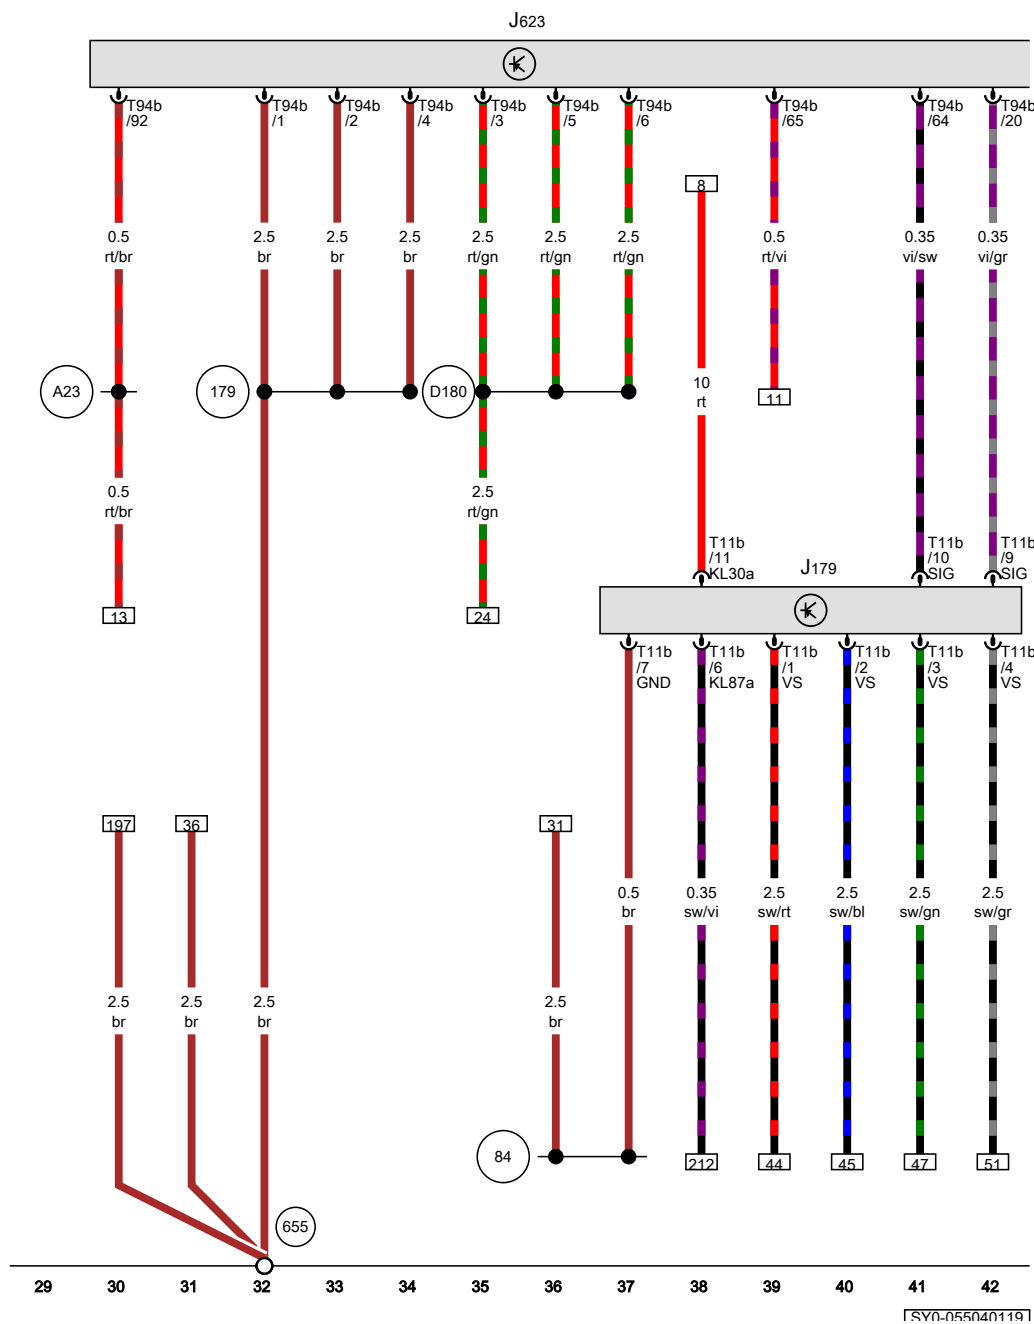

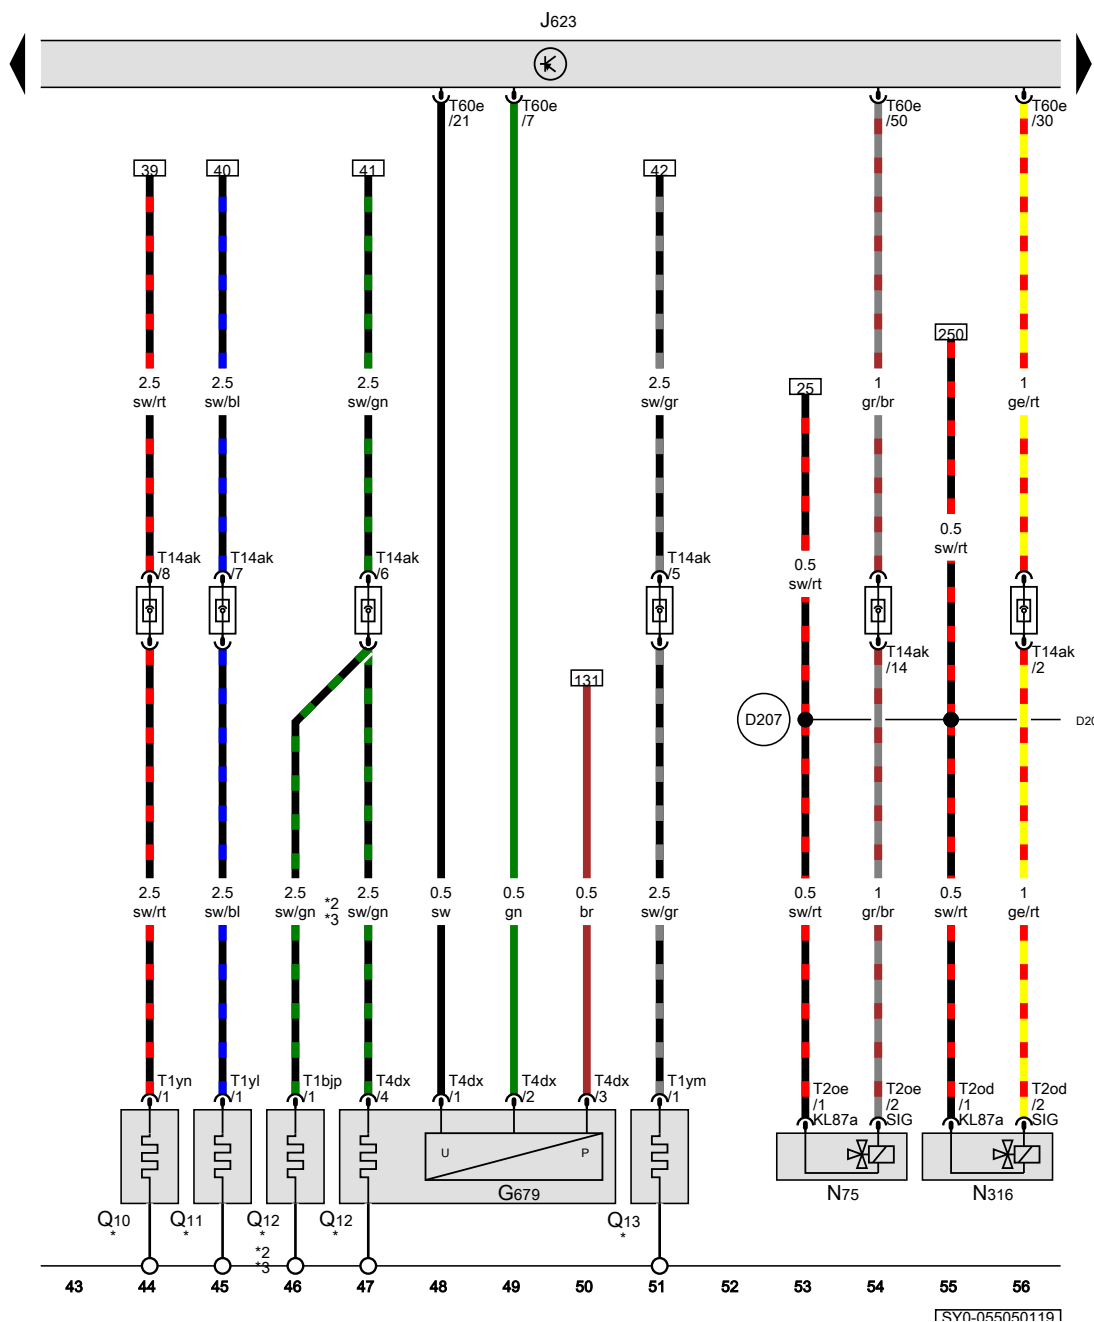

Engine/motor control unit, Charge pressure control solenoid valve, Intake manifold flap valve, Glow plug 1, Glow plug 2, Glow plug 3, Glow plug 4

- G679 Cylinder 3 combustion chamber pressure sender
- J623 Engine/motor control unit
- N75 Charge pressure control solenoid valve
- N316 Intake manifold flap valve
- Q10 Glow plug 1
- Q11 Glow plug 2
- Q12 Glow plug 3
- Q13 Glow plug 4
- T1byp 1-pin connector, black
- T1yl 1-pin connector
- T1ym 1-pin connector
- T1yn 1-pin connector
- T2od 2-pin connector, black
- T2oe 2-pin connector, black
- T4dx 4-pin connector, black
- T14ak 14-pin connector, grey
- T60e 60-pin connector, black
- D207 Connection 7 (87a), in engine compartment wiring harness
- * Earth supply via housing
- *2 For models with Euro 3 emission standard
- *3 For models with Euro 4 emission standard

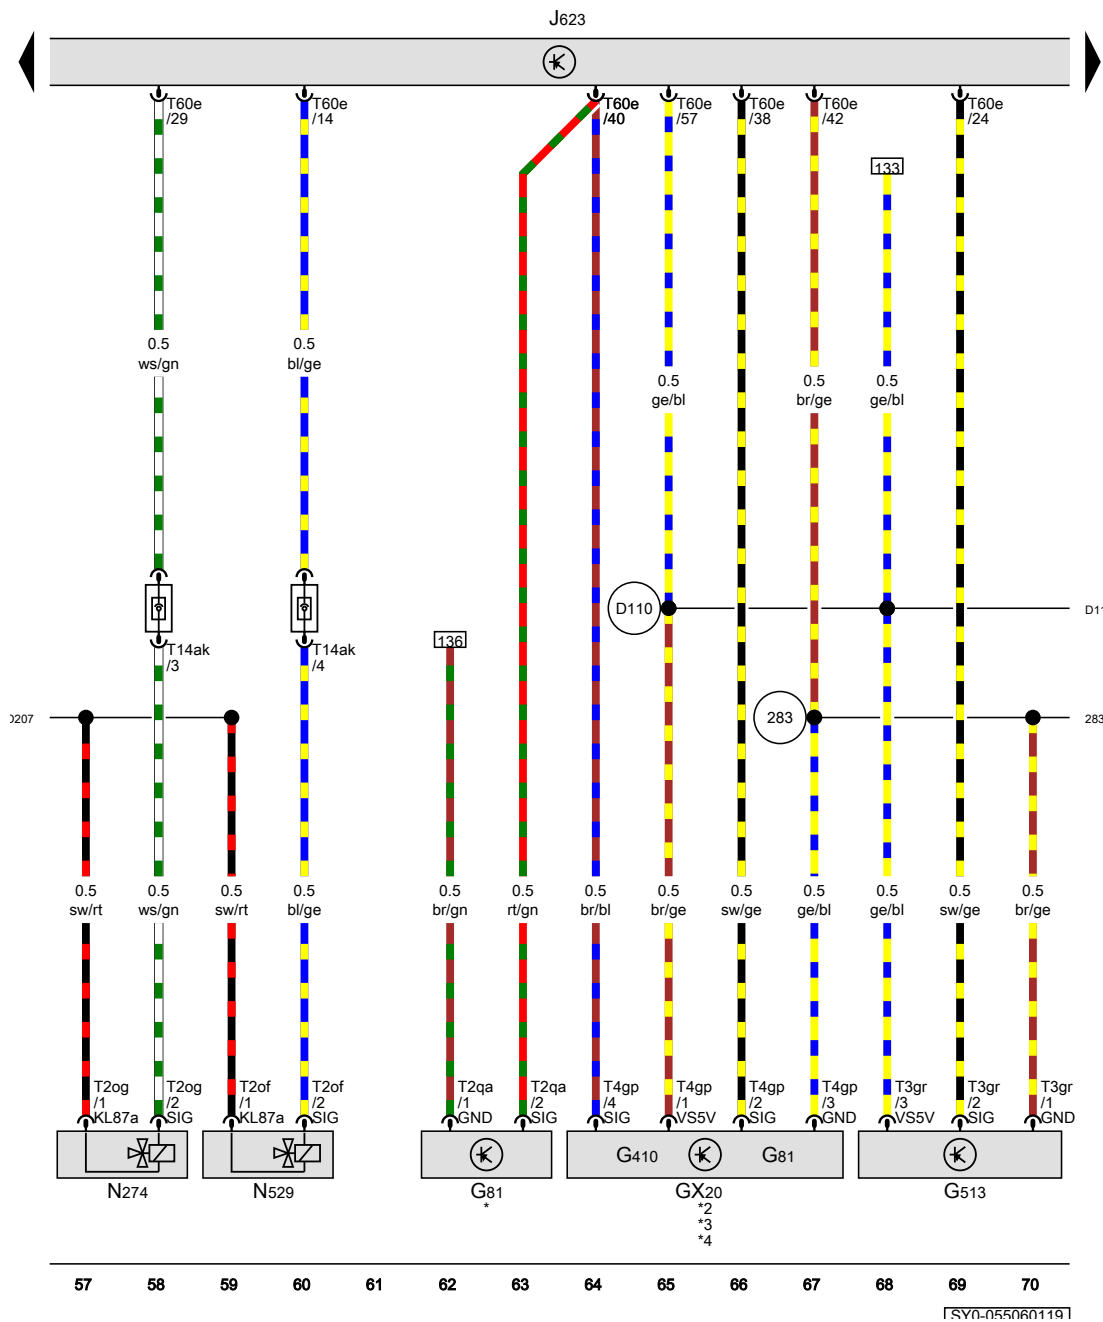


Temperature and pressure sender for low-pressure fuel system, Fuel temperature sender, Variable intake manifold position sender, Engine/motor control unit, Charge pressure control solenoid valve 2, Turbine changeover valve

- GX20 Temperature and pressure sender for low-pressure fuel system
- G81 Fuel temperature sender
- G410 Fuel pressure sender for low pressure
- G513 Variable intake manifold position sender
- J623 Engine/motor control unit
- N274 Charge pressure control solenoid valve 2
- N529 Turbine changeover valve
- T2of 2-pin connector, black
- T2og 2-pin connector, black
- T2qa 2-pin connector, black
- T3gr 3-pin connector, brown
- T4gp 4-pin connector, black
- T14ak 14-pin connector, grey
- T60e 60-pin connector, black

- 283 Earth point 2, engine prewiring harness
- D110 Connection 8 in engine compartment wiring harness
- D207 Connection 7 (87a), in engine compartment wiring harness
- * For models with Euro 6 plus emission standard
- *2 For models with Euro 3 emission standard
- *3 For models with Euro 4 emission standard
- *4 For models with Euro 5 plus emission standard

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

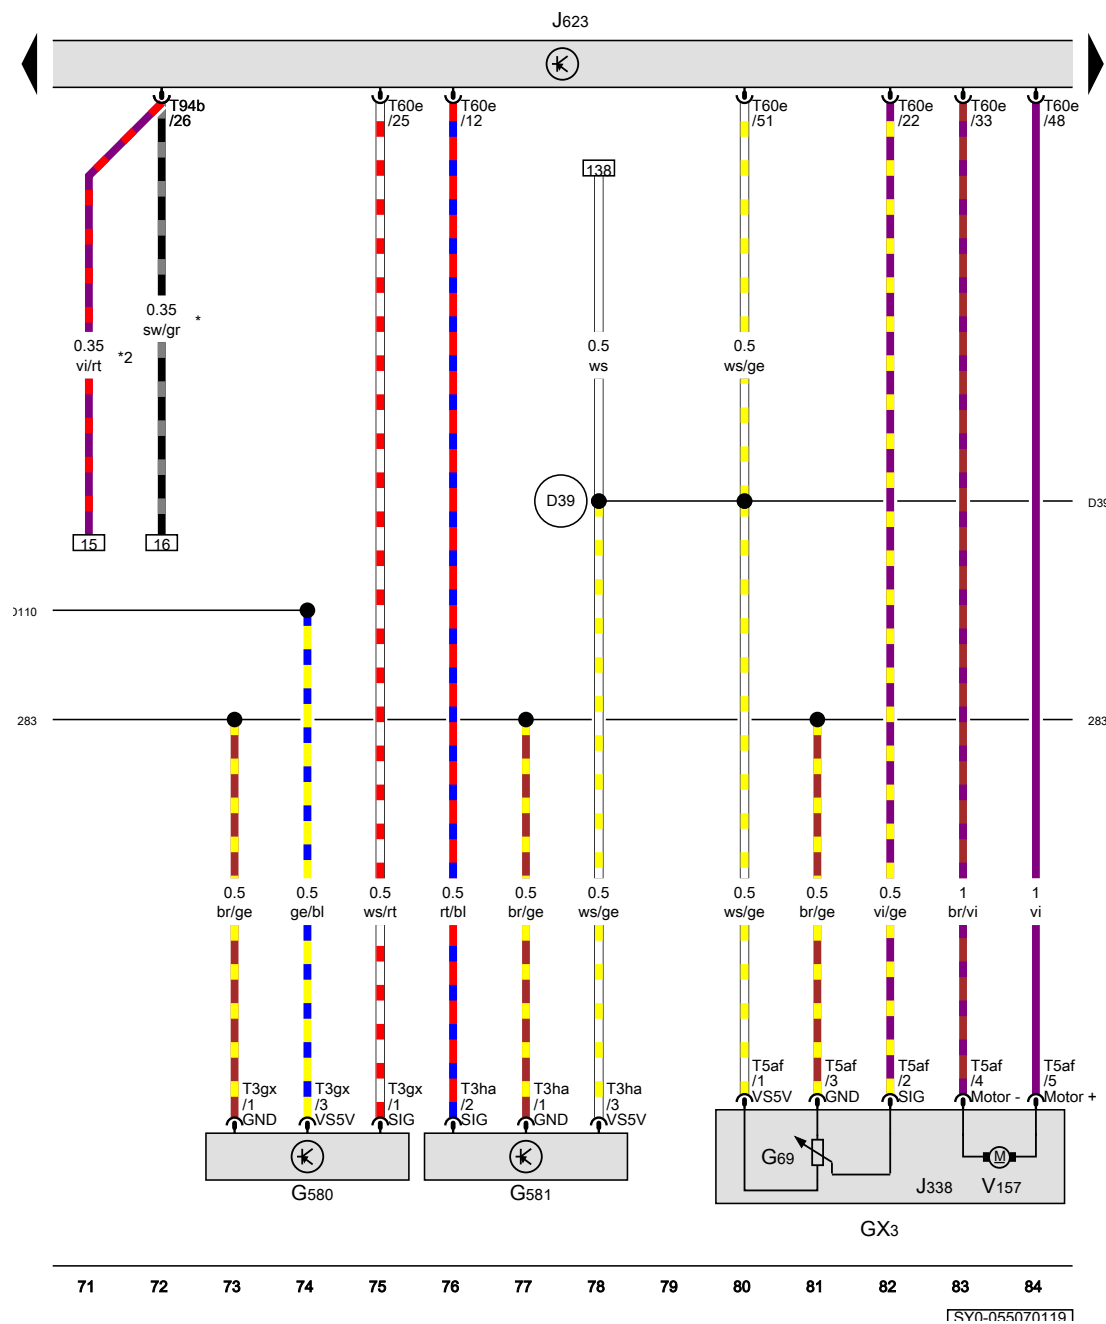


Throttle valve module, Position sender 2 for charge pressure positioner, Position sender for charge pressure positioner, Engine/motor control unit

- GX3 Throttle valve module
- G69 Throttle valve potentiometer
- G580 Position sender 2 for charge pressure positioner
- G581 Position sender for charge pressure positioner
- J338 Throttle valve module
- J623 Engine/motor control unit
- T3gx 3-pin connector, brown
- T3ha 3-pin connector, brown
- T5af 5-pin connector, black
- T60e 60-pin connector, black
- T94b 94-pin connector, black
- V157 Intake manifold flap motor

- 283 Earth point 2, engine prewiring harness
- D39 Connection 1, in engine prewiring harness
- D110 Connection 8 in engine compartment wiring harness

* Up to November 2017
*2 From November 2017


- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

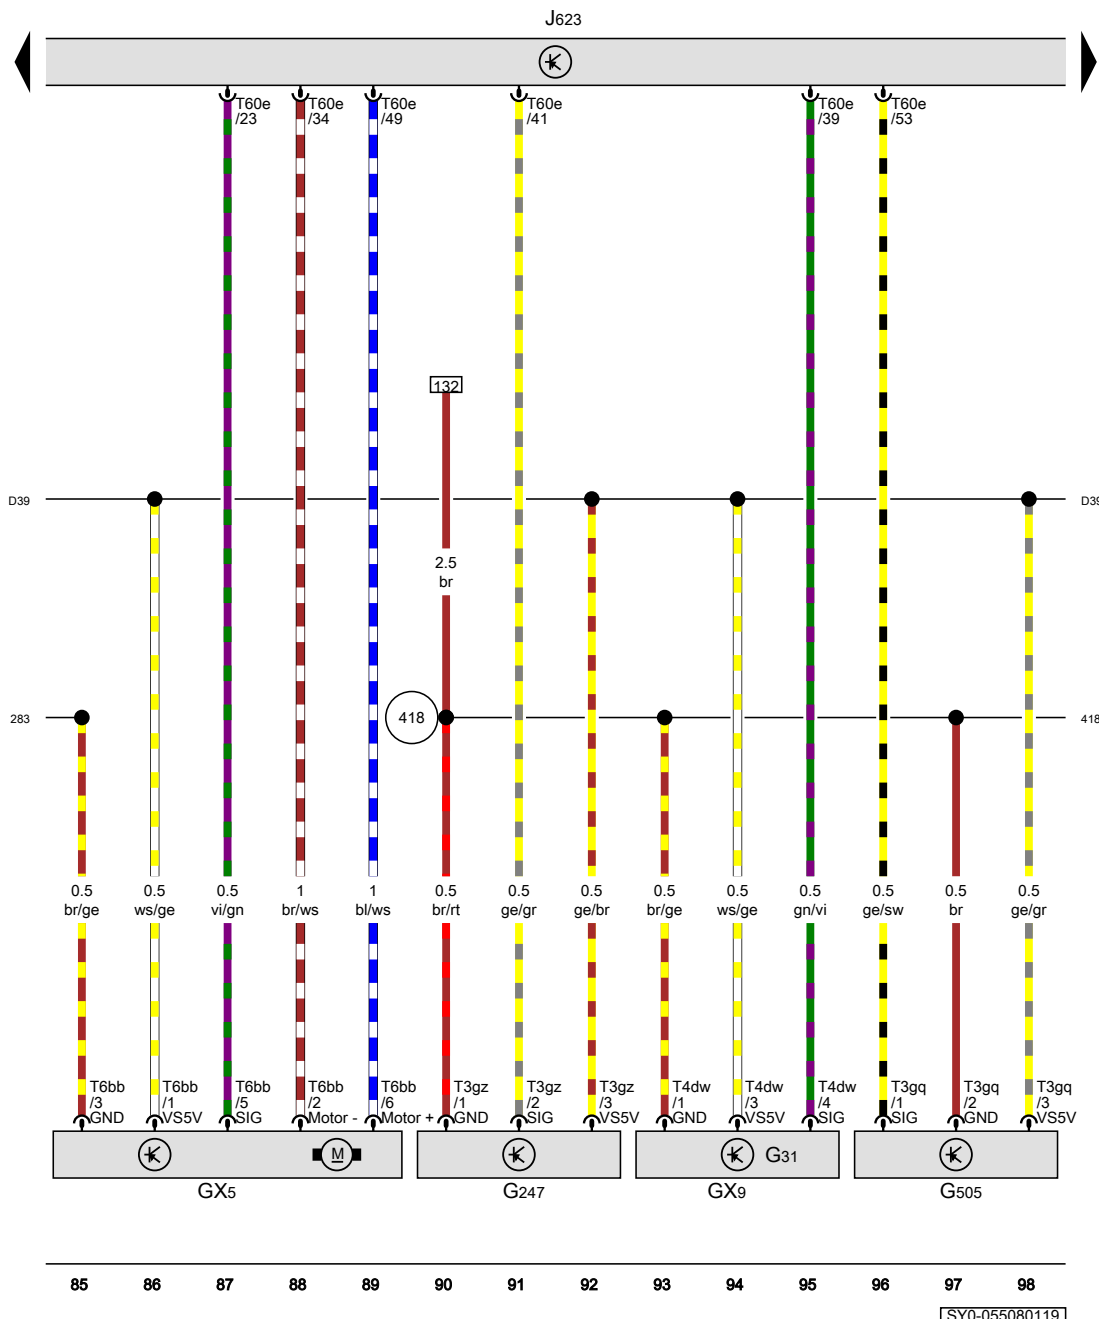

Exhaust gas recirculation valve 1, Intake manifold sender, Fuel pressure sender, Pressure differential sender, Engine/motor control unit

- GX5 Exhaust gas recirculation valve 1
- GX9 Intake manifold sender
- G31 Charge pressure sender
- G247 Fuel pressure sender
- G505 Pressure differential sender
- J623 Engine/motor control unit
- T3gq 3-pin connector, black
- T3gz 3-pin connector, black
- T4dw 4-pin connector, black
- T6bb 6-pin connector, grey
- T60e 60-pin connector, black

- 283 Earth point 2, engine prewiring harness
- 418 Earth connection 10, in engine compartment wiring harness
- D39 Connection 1, in engine prewiring harness

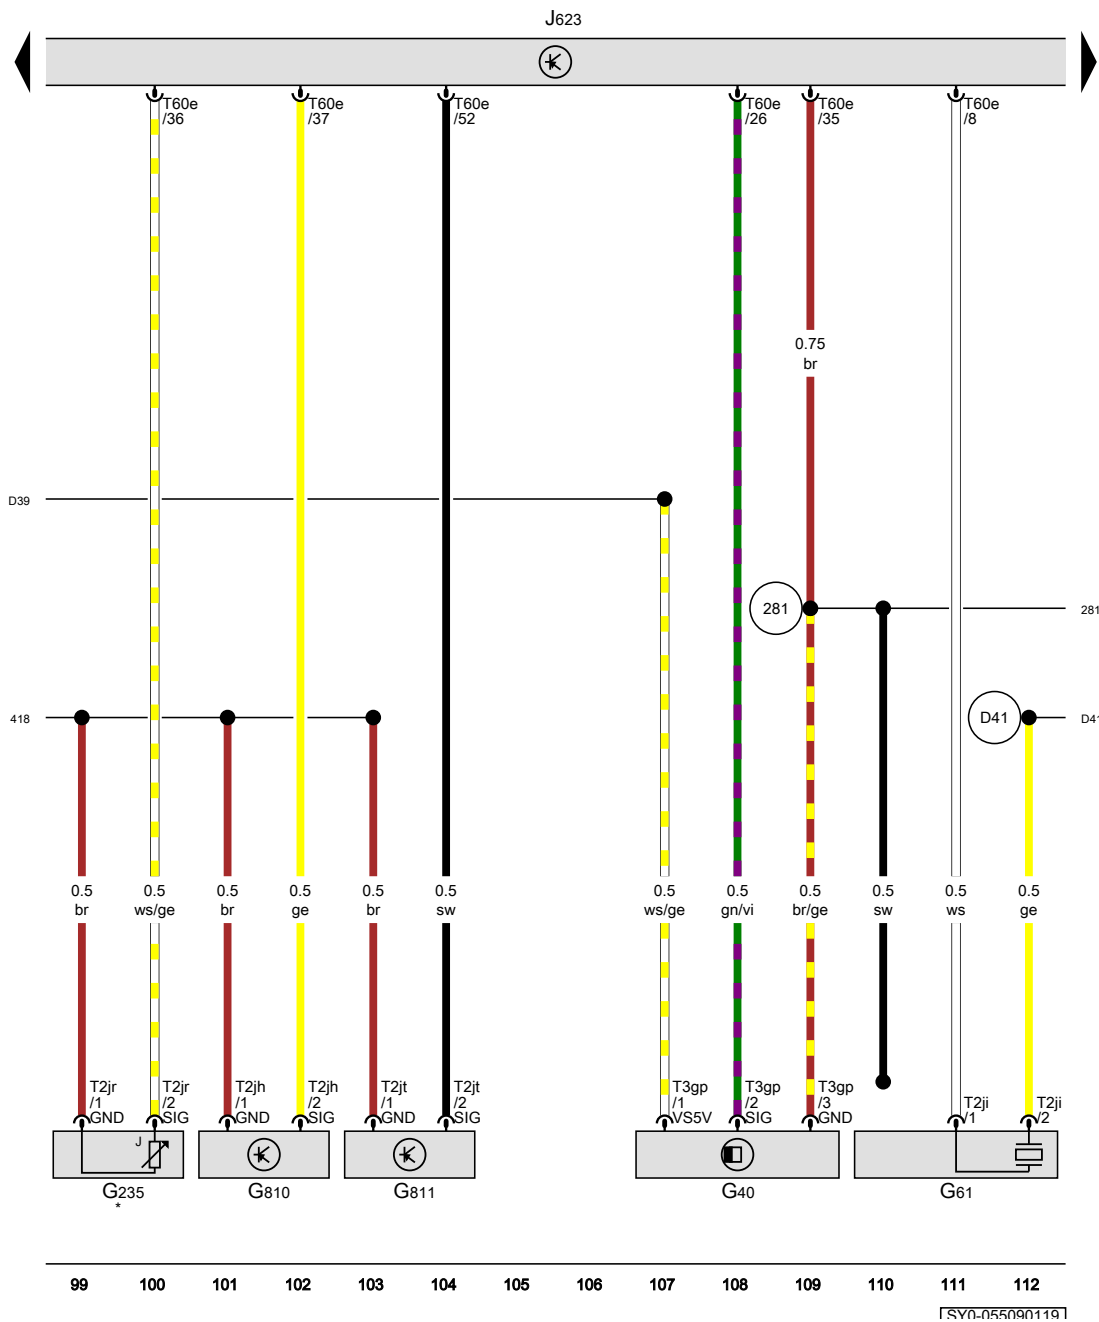


Hall sender, Knock sensor 1, Exhaust gas temperature sender 1, Charge air temperature sender before charge air cooler, Charge air temperature sender after charge air cooler, Engine/motor control unit

- G40 Hall sender
- G61 Knock sensor 1
- G235 Exhaust gas temperature sender 1
- G810 Charge air temperature sender before charge air cooler
- G811 Charge air temperature sender after charge air cooler
- J623 Engine/motor control unit
- T2jh 2-pin connector, black
- T2ji 2-pin connector, black
- T2jr 2-pin connector, black
- T2jt 2-pin connector, black
- T3gp 3-pin connector, black
- T60e 60-pin connector, black

- 281 Earth point 1, engine prewiring harness
- 418 Earth connection 10, in engine compartment wiring harness
- D39 Connection 1, in engine prewiring harness
- D41 Connection 3, in engine prewiring harness
- * Pre-wired component

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

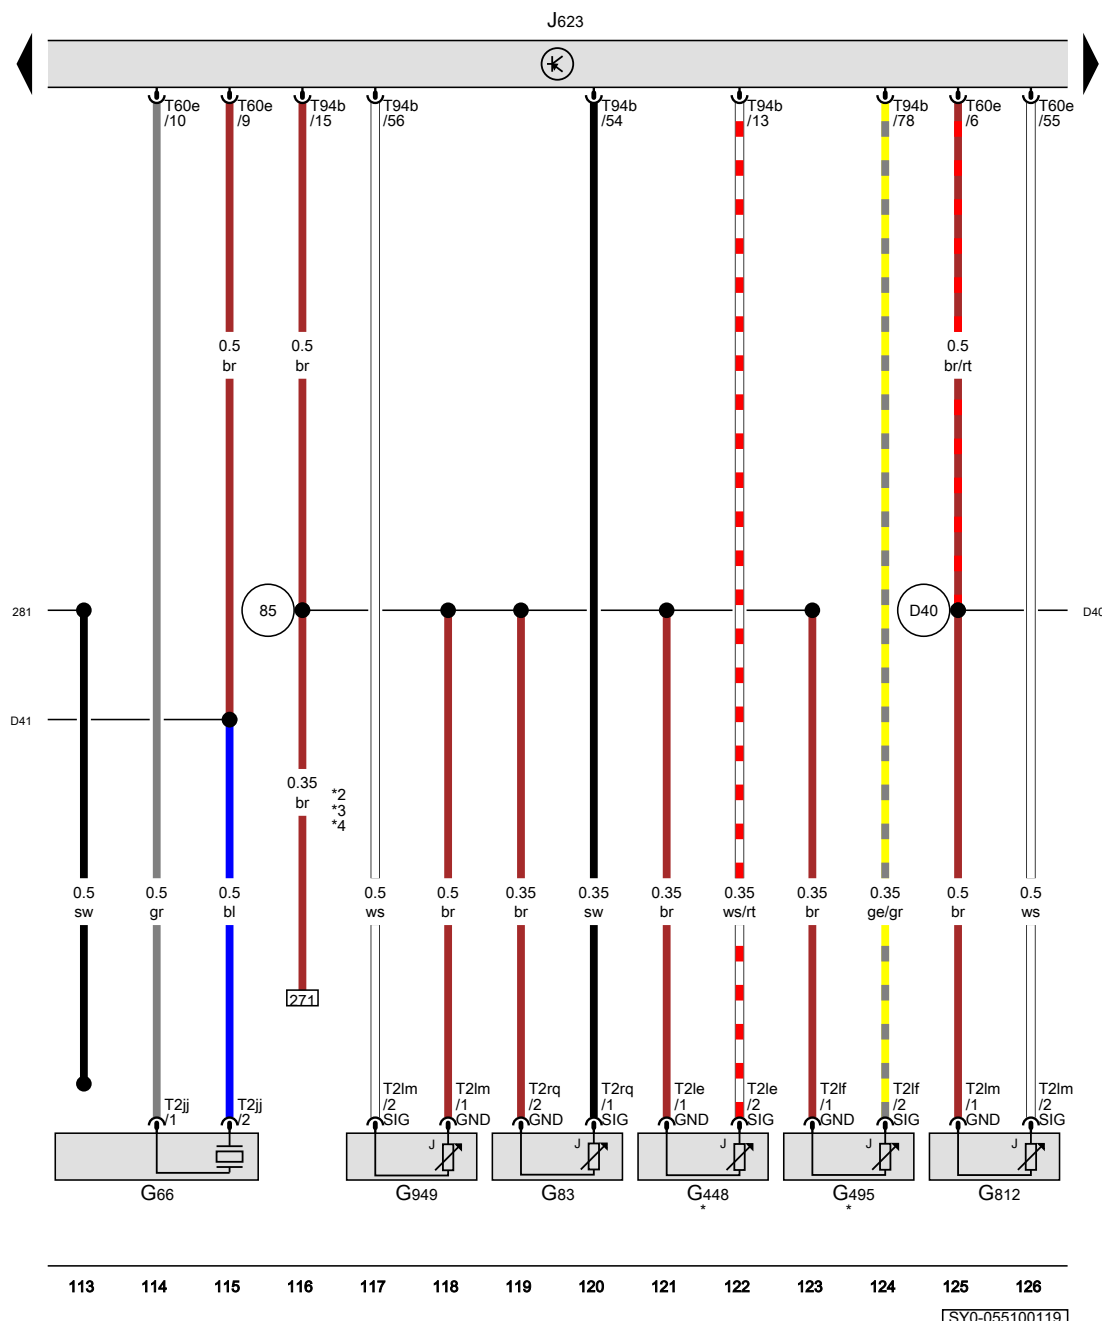

Knock sensor 2, Radiator outlet coolant temperature sender, Exhaust gas temperature sender 2, Exhaust gas temperature sender 3, Coolant temperature sender 3, Temperature sensor 3 for exhaust recirculation, Engine/motor control unit

- G66 Knock sensor 2
- G83 Radiator outlet coolant temperature sender
- G448 Exhaust gas temperature sender 2
- G495 Exhaust gas temperature sender 3
- G812 Coolant temperature sender 3
- G949 Temperature sensor 3 for exhaust recirculation
- J623 Engine/motor control unit
- T2jj 2-pin connector, black
- T2le 2-pin connector, black
- T2lf 2-pin connector, brown
- T2lm 2-pin connector, colourless, black
- T2rq 2-pin connector, black
- T60e 60-pin connector, black
- T94b 94-pin connector, black

85 Earth connection 1, in engine compartment wiring harness


281 Earth point 1, engine prewiring harness

D40 Connection 2, in engine prewiring harness

D41 Connection 3, in engine prewiring harness

- * Pre-wired component
- *2 For models with Euro 3 emission standard
- *3 For models with Euro 4 emission standard
- *4 For models with Euro 5 emission standard

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

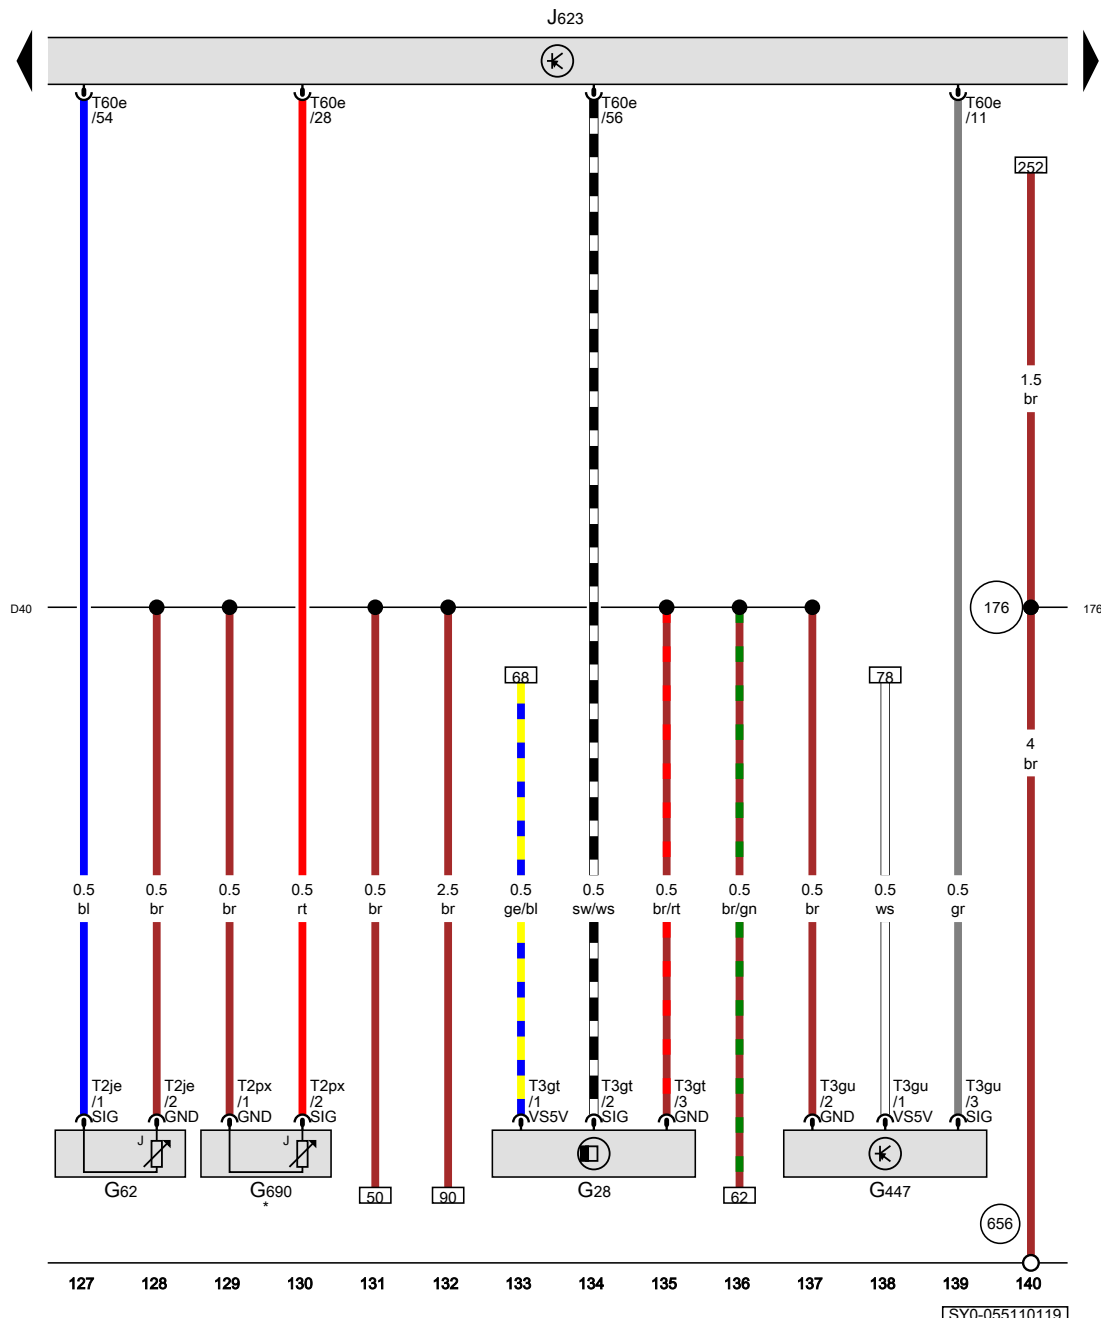

Engine speed sender, Coolant temperature sender, Charge pressure sender 2, Temperature sensor 2 for exhaust recirculation, Engine/motor control unit

- G28 Engine speed sender
- G62 Coolant temperature sender
- G447 Charge pressure sender 2
- G690 Temperature sensor 2 for exhaust recirculation
- J623 Engine/motor control unit
- T2je 2-pin connector, black
- T2px 2-pin connector, brown
- T3gt 3-pin connector, black
- T3gu 3-pin connector, black
- T60e 60-pin connector, black


176 Earth connection, in right headlight wiring harness

656 Earth point, on right headlight

D40 Connection 2, in engine prewiring harness

* Pre-wired component

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

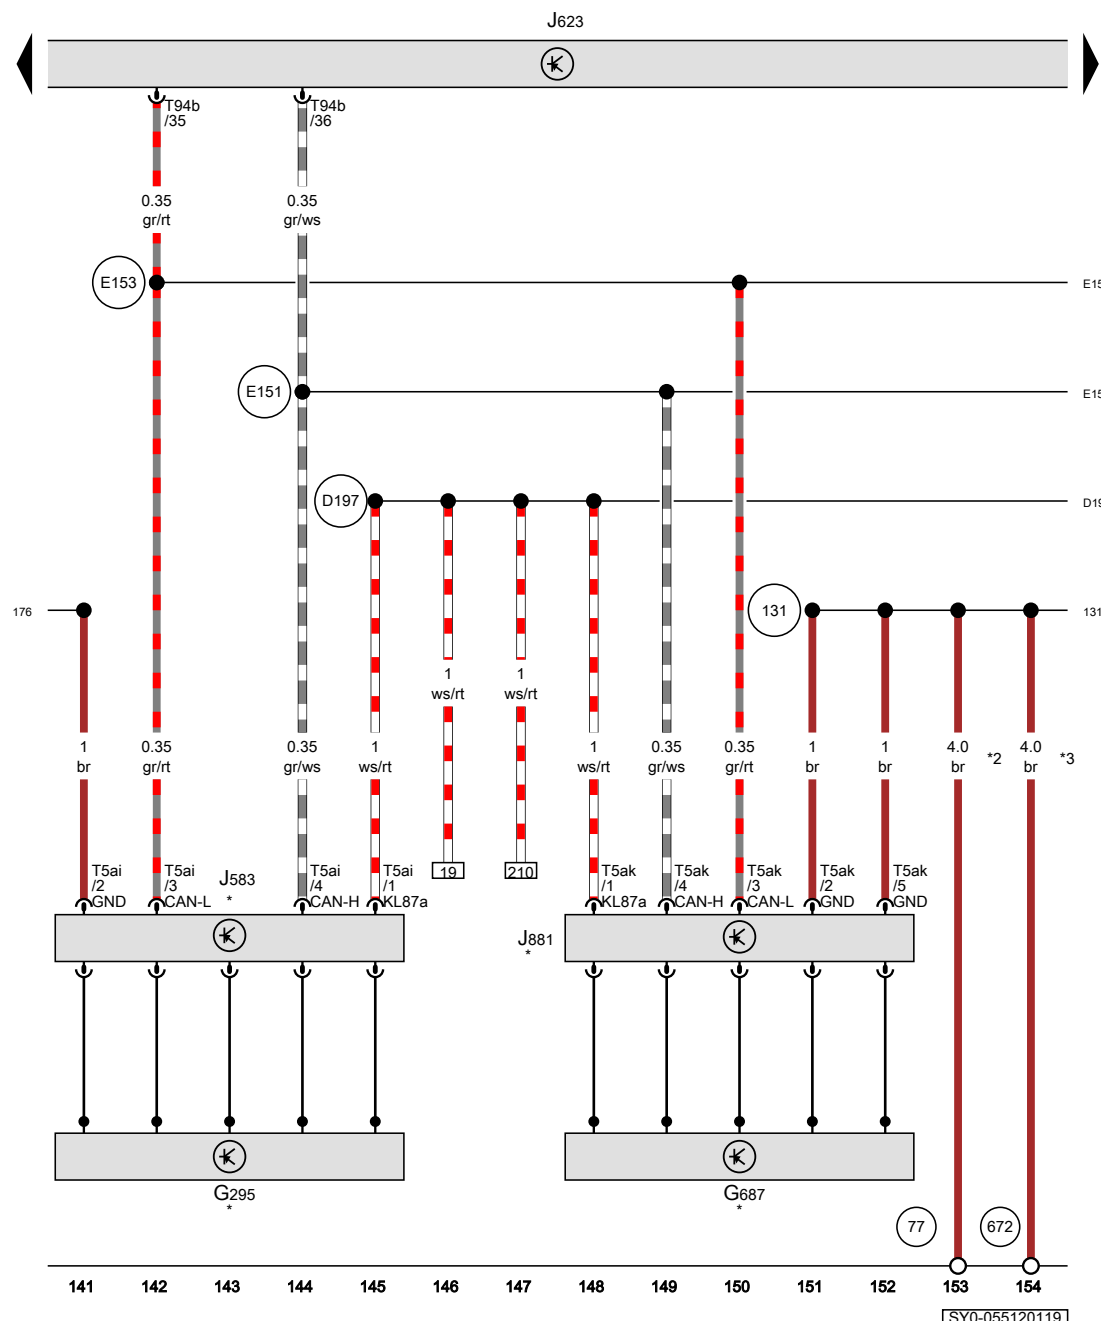


Control unit for NOx sender, Engine/motor control unit,
Control unit for NOx sender 2

- G295 NOx sender
- G687 NOx sender 2
- J583 Control unit for NOx sender
- J623 Engine/motor control unit
- J881 Control unit for NOx sender 2
- T5ai 5-pin connector, black
- T5ak 5-pin connector, black
- T94b 94-pin connector, black

- 77 Earth point, lower part of left B-pillar
- 131 Earth connection 2, in engine compartment wiring harness
- 176 Earth connection, in right headlight wiring harness
- 672 Earth point 2, on front of left longitudinal member
- D197 Connection 5 (87a), in engine compartment wiring harness
- E151 Connection 1 (CAN bus, engine/motor control unit, high)
- E153 Connection 1 (CAN bus, engine/motor control unit, low)

- * For models with Euro 6 plus emission standard
- *2 Up to July 2018
- *3 From July 2018

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

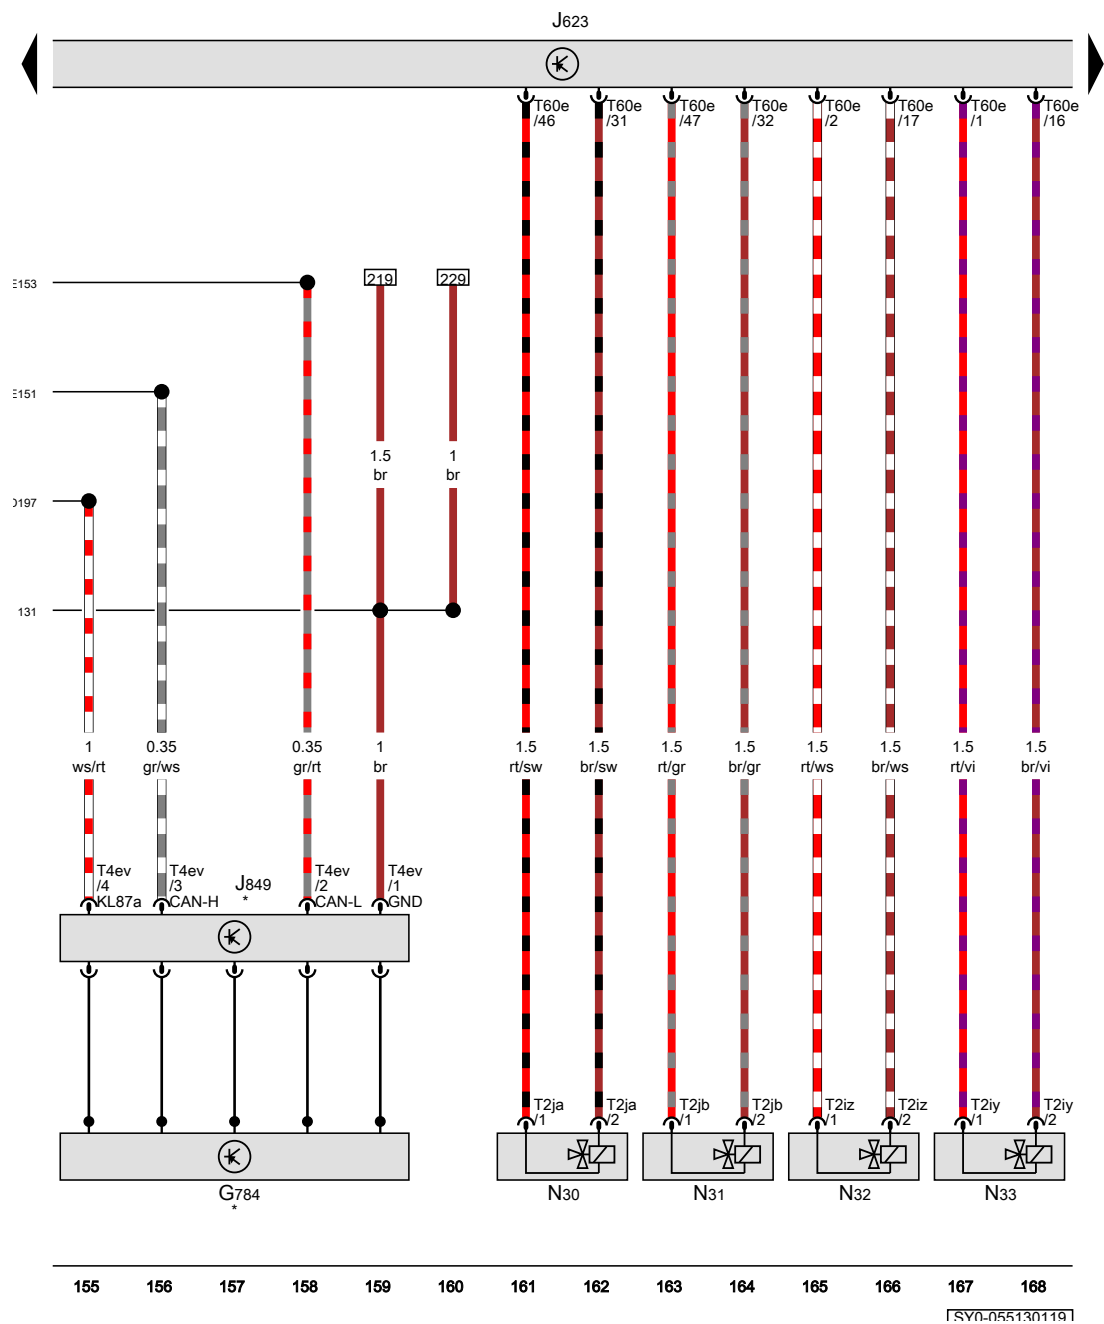


Engine/motor control unit, Control unit for sensor electronics, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4


- G784 Particulate sensor
- J623 Engine/motor control unit
- J849 Control unit for sensor electronics
- N30 Injector, cylinder 1
- N31 Injector, cylinder 2
- N32 Injector, cylinder 3
- N33 Injector, cylinder 4
- T2iy 2-pin connector, black
- T2iz 2-pin connector, black
- T2ja 2-pin connector, black
- T2jb 2-pin connector, black
- T4ev 4-pin connector, black
- T60e 60-pin connector, black

- 131 Earth connection 2, in engine compartment wiring harness
- D197 Connection 5 (87a), in engine compartment wiring harness
- E151 Connection 1 (CAN bus, engine/motor control unit, high)
- E153 Connection 1 (CAN bus, engine/motor control unit, low)
- * For models with Euro 6 plus emission standard


Accelerator pedal module, Engine/motor control unit,
Starter relay 1, Starter relay 2

- GX2 Accelerator pedal module
- G79 Accelerator position sender
- G185 Accelerator position sender 2
- J623 Engine/motor control unit
- J906 Starter relay 1
- J907 Starter relay 2
- T6by 6-pin connector, black
- T94b 94-pin connector, black
- * see applicable current flow diagram for basic equipment
- *2 Up to November 2017
- *3 From November 2017

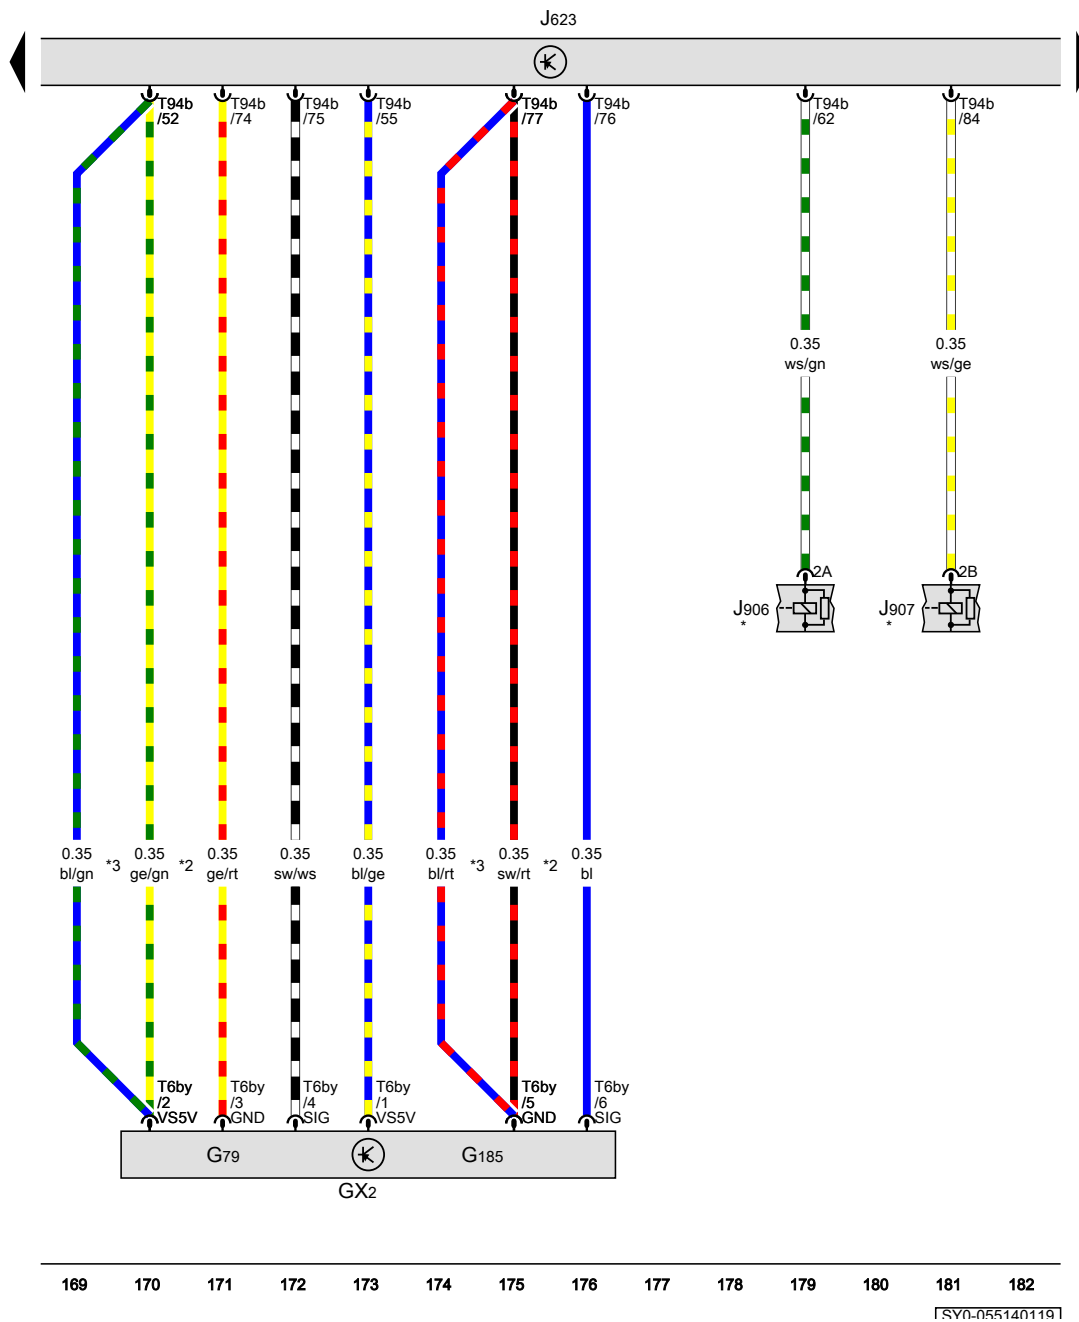

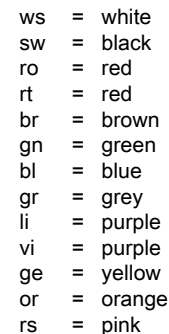

* Up to November 2017
*2 From November 2017

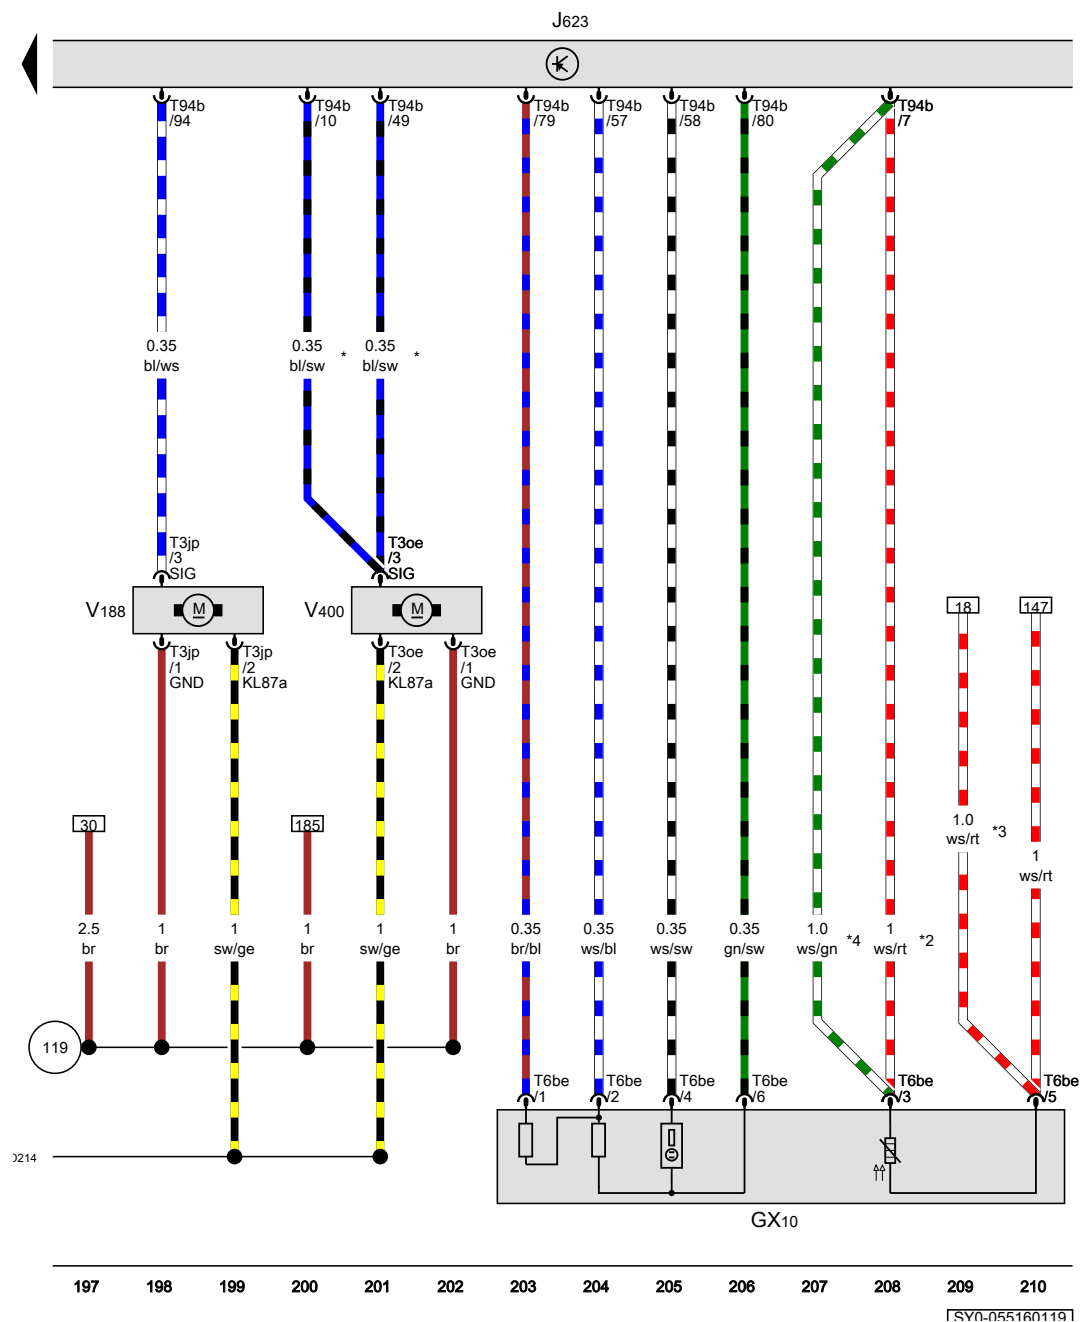


Lambda probe 1 before catalytic converter, Engine/motor control unit, Charge air cooling pump, Pump for exhaust gas recirculation cooler

- GX10 Lambda probe 1 before catalytic converter
- J623 Engine/motor control unit
- T3jp 3-pin connector, black
- T3oe 3-pin connector, black
- T6be 6-pin connector, black
- T94b 94-pin connector, black
- V188 Charge air cooling pump
- V400 Pump for exhaust gas recirculation cooler

- 119 Earth connection 1, in headlight wiring harness
- D214 Connection 8 (87a), in engine compartment wiring harness

- * According to equipment
- *2 Up to November 2017
- *3 For models with Euro 5 emission standard
- *4 From November 2017


- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

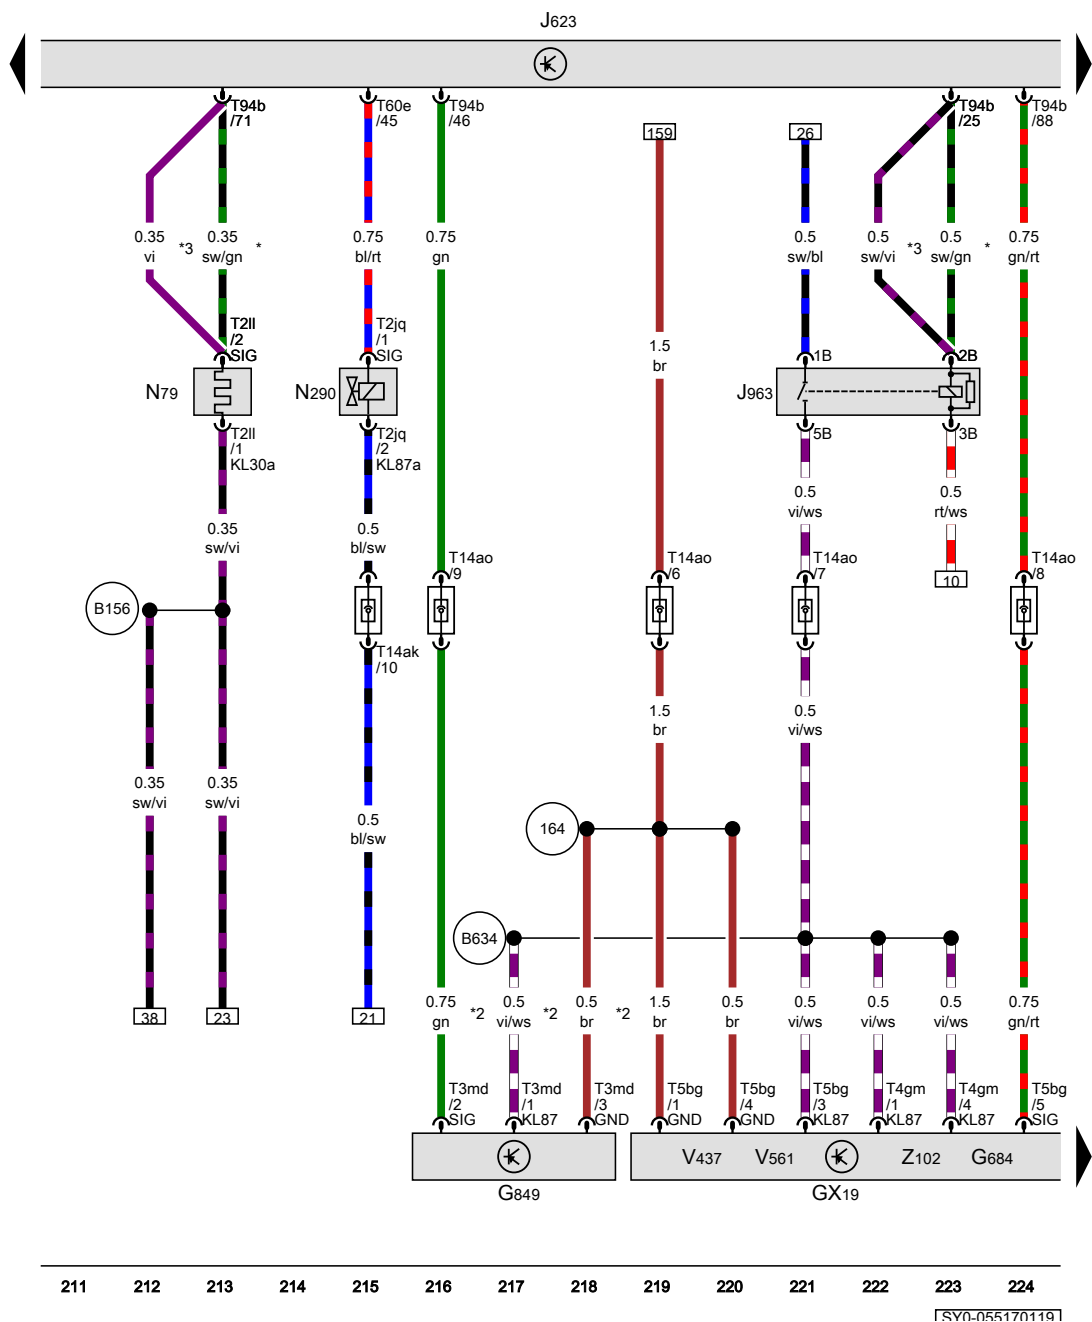

Delivery unit for reducing agent metering system, Reducing agent quality sensor, Engine/motor control unit, Relay for reducing agent metering system, Heater element for crankcase breather, Fuel metering valve

- GX19 Delivery unit for reducing agent metering system
- G684 Tank sender for reducing agent
- G849 Reducing agent quality sensor
- J623 Engine/motor control unit
- J963 Relay for reducing agent metering system
- N79 Heater element for crankcase breather
- N290 Fuel metering valve
- T2j 2-pin connector, black
- T2l 2-pin connector, black
- T3md 3-pin connector, black
- T4gm 4-pin connector, black
- T5bg 5-pin connector, black
- T14ak 14-pin connector, grey
- T14ao 14-pin connector, black
- T60e 60-pin connector, black
- T94b 94-pin connector, black
- V437 Pump for reducing agent
- V561 Reducing agent return flow pump
- Z102 Heater for reducing agent tank (heater circuit 1)
- 164 Earth connection, in catalytic converter warning circuit wiring harness
- B156 Positive connection (30a), in interior wiring harness
- B634 Positive connection 2 (87), in main wiring harness
- * Up to November 2017
- *2 According to equipment
- *3 From November 2017

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink

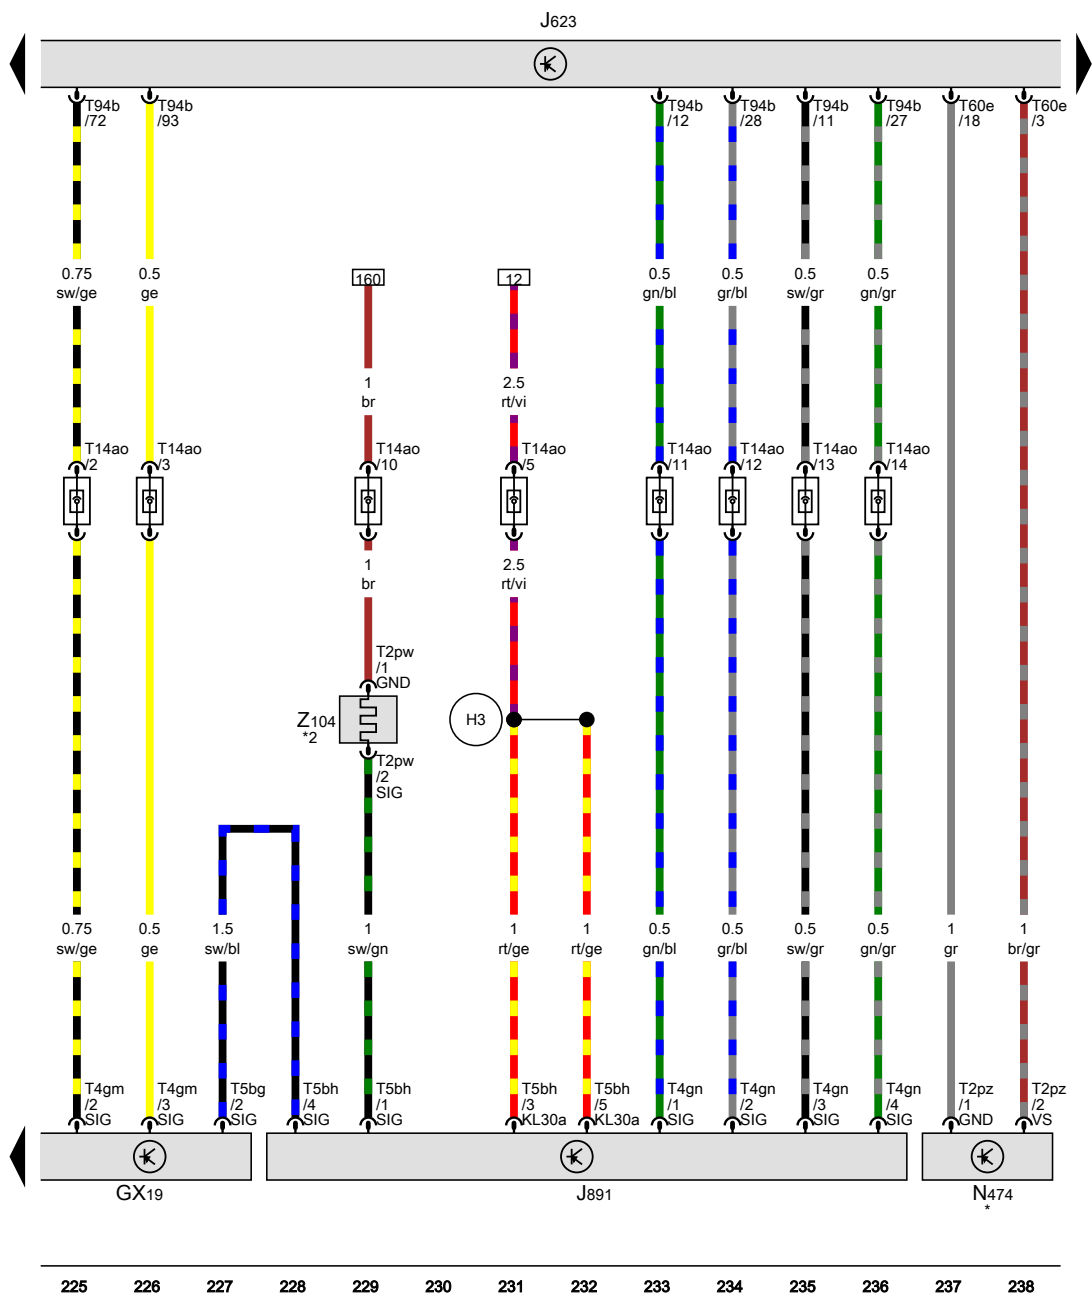

Delivery unit for reducing agent metering system, Engine/motor control unit, Control unit for reducing agent heater, Injector for reducing agent, Heater for reducing agent line (heater circuit 2)

- GX19 Delivery unit for reducing agent metering system
- J623 Engine/motor control unit
- J891 Control unit for reducing agent heater
- N474 Injector for reducing agent
- T2pw 2-pin connector, black
- T2pz 2-pin connector, black
- T4gm 4-pin connector, black
- T4gn 4-pin connector, black
- T5bg 5-pin connector, black
- T5bh 5-pin connector, colourless
- T14ao 14-pin connector, black
- T60e 60-pin connector, black
- T94b 94-pin connector, black
- Z104 Heater for reducing agent line (heater circuit 2)


H3 Connection 1 in wiring harness for reducing agent tank

* For models with Euro 6 plus emission standard

*2 Pre-wired component

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

Oil level and oil temperature sender, Clutch position sender, Engine/motor control unit

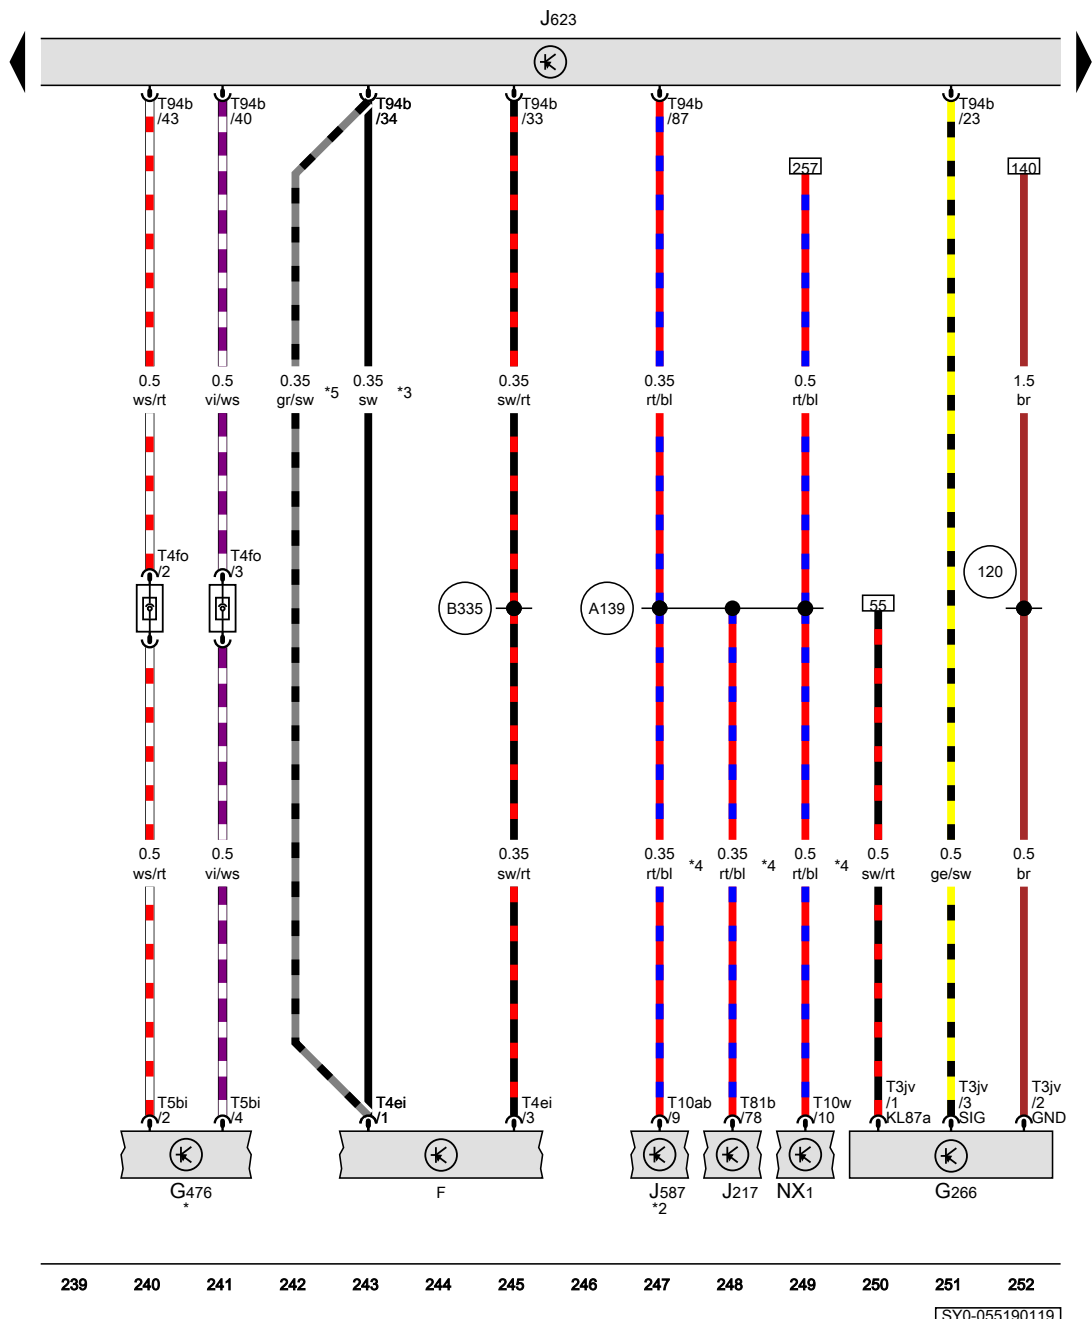

- F Brake light switch
- G266 Oil level and oil temperature sender
- G476 Clutch position sender
- J217 Automatic gearbox control unit
- J587 Selector lever sensors control unit
- J623 Engine/motor control unit
- NX1 Gearbox
- T3jv 3-pin connector, black
- T4ei 4-pin connector, black
- T4fo 4-pin connector, black
- T5bi 5-pin connector, black
- T10ab 10-pin connector, red
- T10w 10-pin connector, black
- T81b 81-pin connector, black
- T94b 94-pin connector, black

120 Earth connection 2, in headlight wiring harness


A139 Connection 3 (15) in dash panel wiring harness

B335 Connection 1 (54), in main wiring harness

- * see applicable current flow diagram for basic equipment
- *2 Pre-wired component
- *3 Up to November 2017
- *4 For models with automatic gearbox
- *5 From November 2017


- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

Engine/motor control unit, Radiator fan

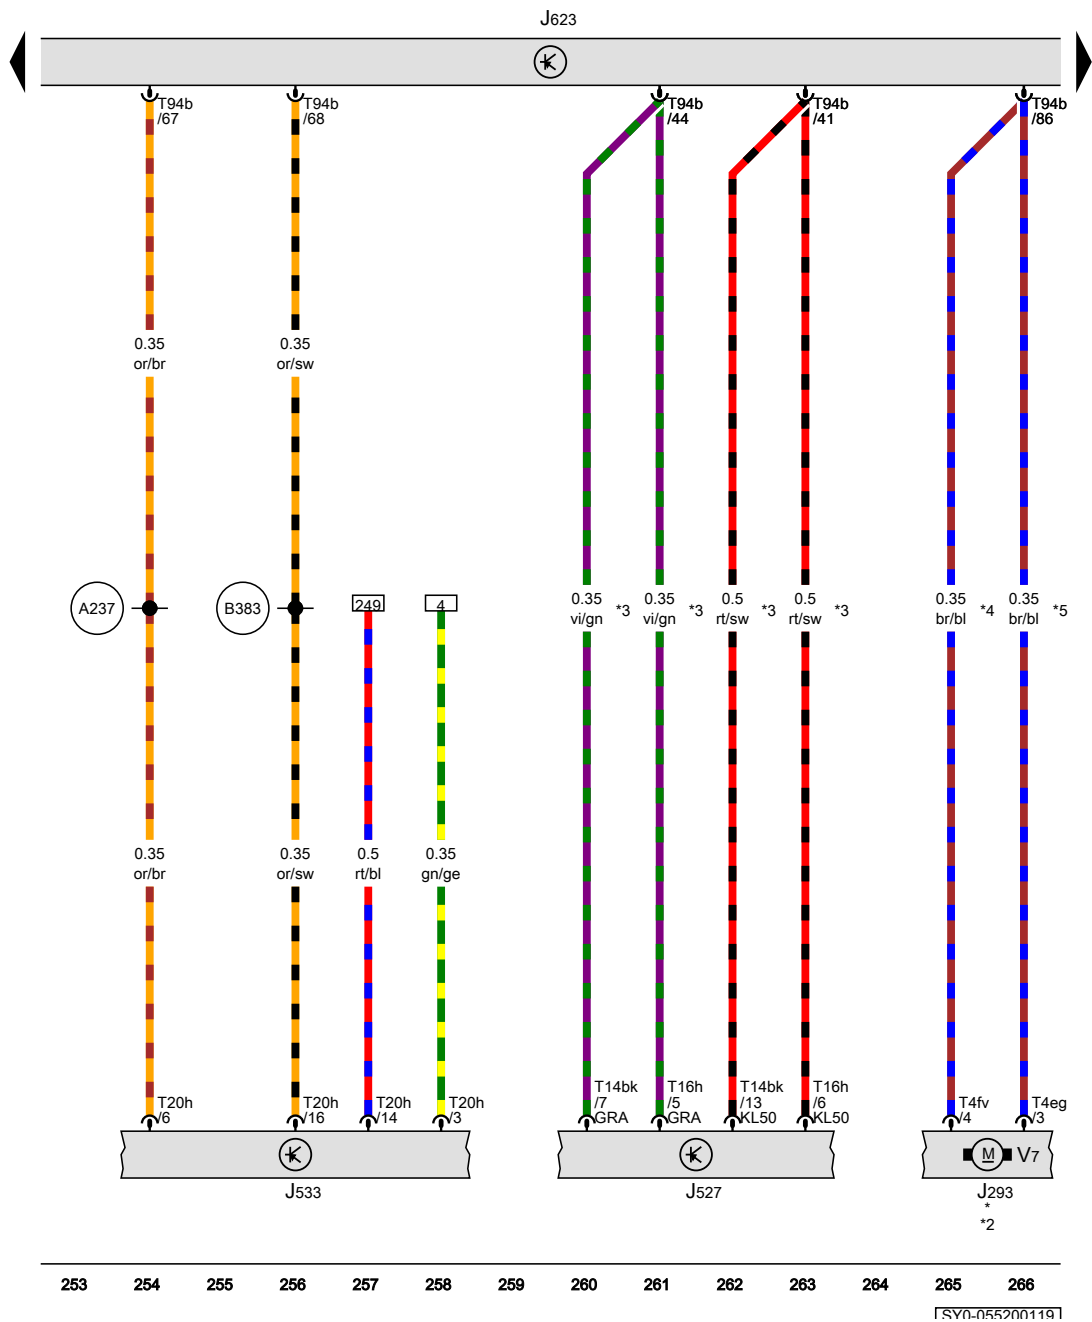

- J293 Radiator fan control unit
- J527 Steering column electronics control unit
- J533 Data bus diagnostic interface
- J623 Engine/motor control unit
- T4eg 4-pin connector, black
- T4fv 4-pin connector, black
- T14bk 14-pin connector, black
- T16h 16-pin connector, black
- T20h 20-pin connector, red
- T94b 94-pin connector, black
- V7 Radiator fan
- A237 Connection 1 (powertrain CAN bus, low), in dash panel wiring harness
- B383 Connection 1 (powertrain CAN bus, high), in main wiring harness
- * Pre-wired component
- *2 see applicable current flow diagram for radiator fan
- *3 According to equipment
- *4 For models with towing bracket
- *5 For models with no towing bracket

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

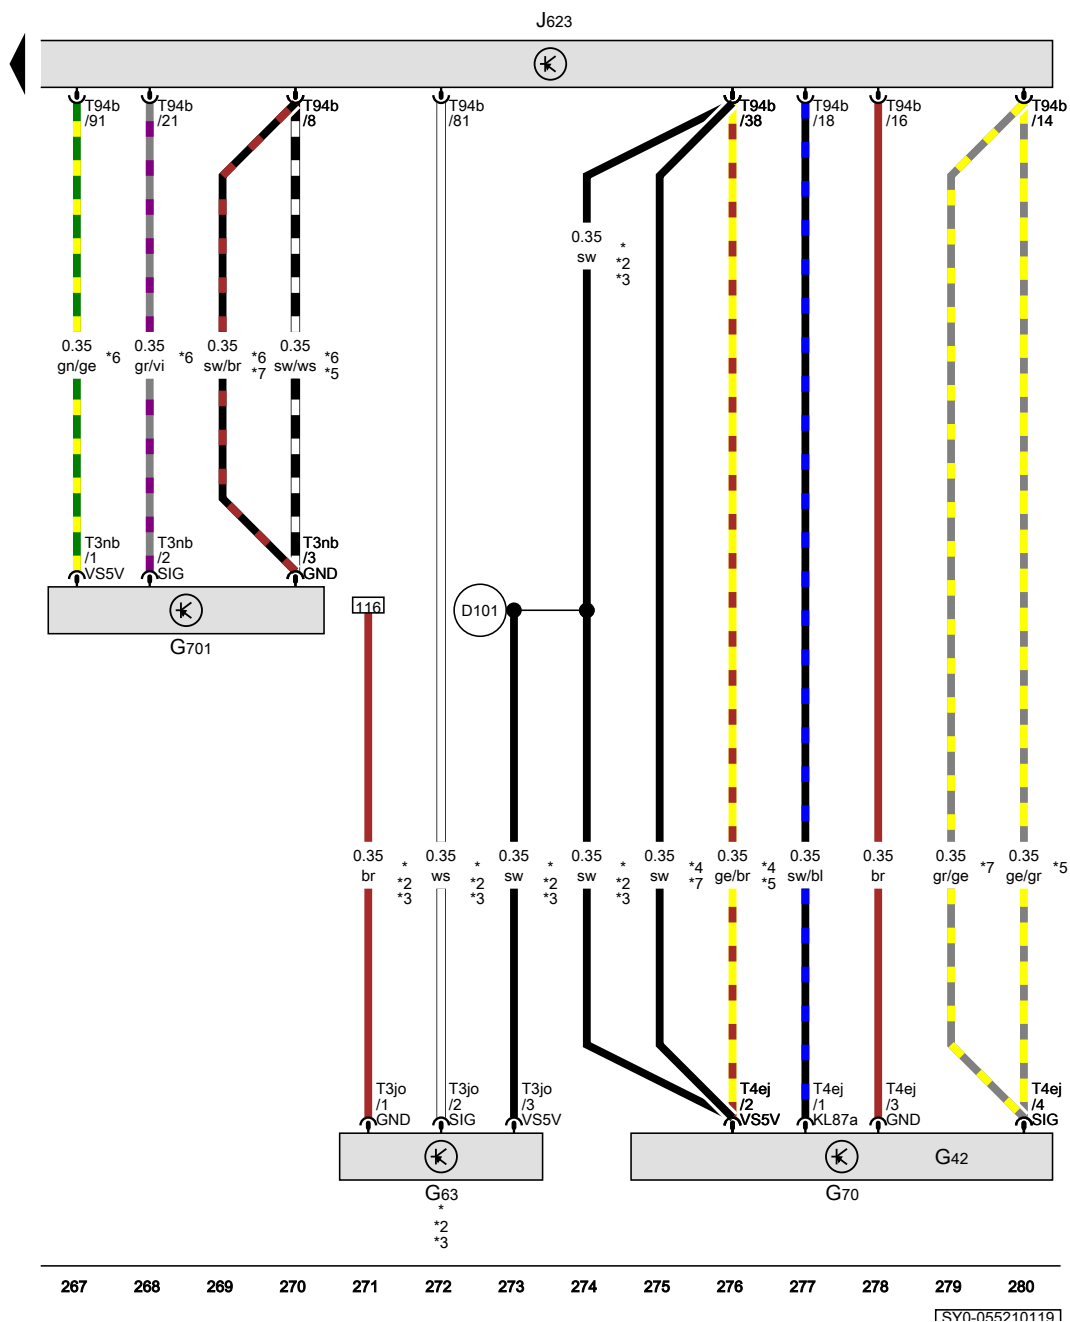


Water separator sender, Air mass meter, Gearbox neutral position sender, Engine/motor control unit

- G42 Intake air temperature sender
- G63 Water separator sender
- G70 Air mass meter
- G701 Gearbox neutral position sender
- J623 Engine/motor control unit
- T3jo 3-pin connector, black
- T3nb 3-pin connector, black, on right wheel housing
- T4ej 4-pin connector, black
- T94b 94-pin connector, black
- D101 Connection 1 in engine compartment wiring harness
- * For models with Euro 3 emission standard
- *2 For models with Euro 4 emission standard
- *3 For models with Euro 5 emission standard
- *4 For models with Euro 6 plus emission standard
- *5 Up to November 2017
- *6 For models with manual gearbox
- *7 From November 2017

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

2.0l diesel engine , DASA,DASB

From August 2017

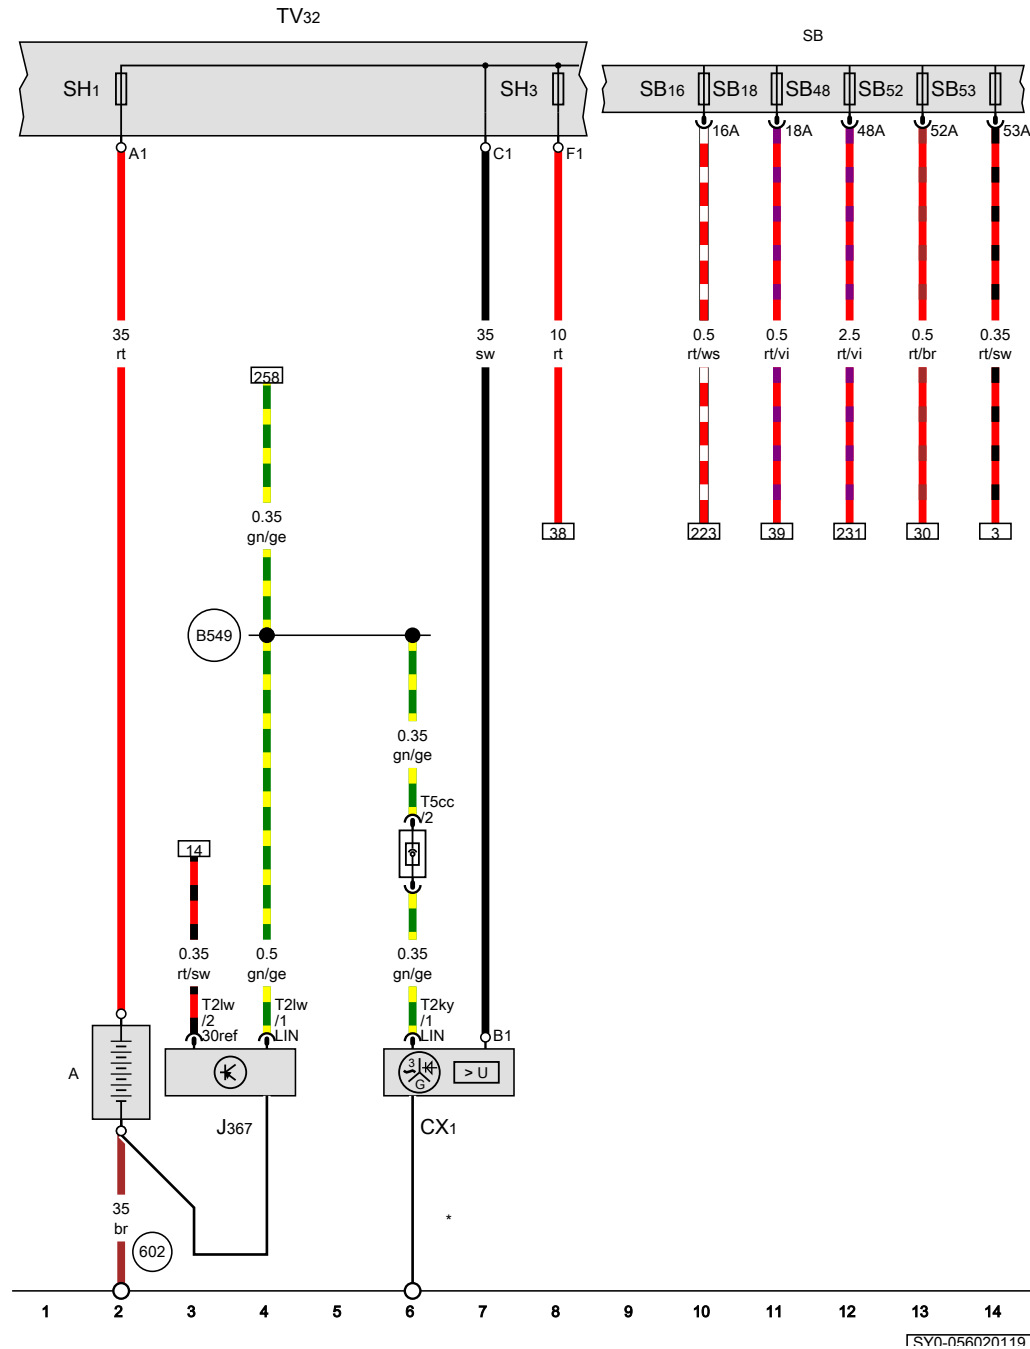


Battery, Alternator with voltage regulator, Battery monitor control unit, Fuse holder B, Jump start connection

- | | |
|------|---|
| A | Battery |
| CX1 | Alternator with voltage regulator |
| J367 | Battery monitor control unit |
| SB | Fuse holder B |
| SH1 | Fuse 1 in fuse holder H |
| SH3 | Fuse 3 in fuse holder H |
| SB16 | Fuse 16 on fuse holder B |
| SB18 | Fuse 18 on fuse holder B |
| SB48 | Fuse 48 on fuse holder B |
| SB52 | Fuse 52 on fuse holder B |
| SB53 | Fuse 53 on fuse holder B |
| T2ky | 2-pin connector, black |
| T2lw | 2-pin connector, black |
| T5cc | 5-pin connector, black |
| TV32 | Jump start connection |
| 602 | Earth point, in front left footwell |
| B549 | Connection 2 (LIN bus) in main wiring harness |
| * | Earth supply via housing |

Volkswagen Technical Site: <https://vwts.ru>

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink

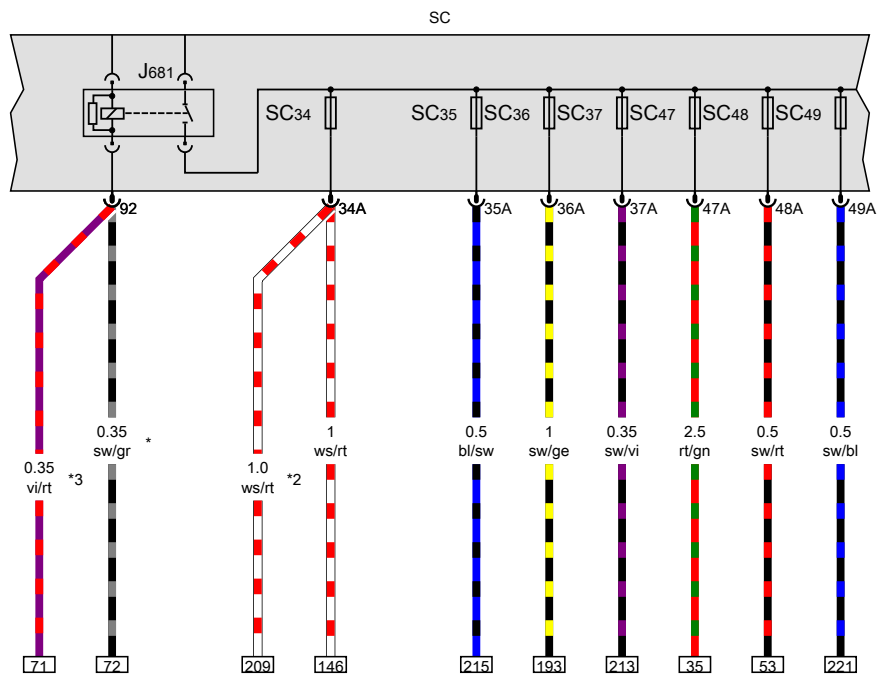

Fuse holder C


- J681 Terminal 15 voltage supply relay 2
- SC Fuse holder C
- SC34 Fuse 34 on fuse holder C
- SC35 Fuse 35 on fuse holder C
- SC36 Fuse 36 on fuse holder C
- SC37 Fuse 37 on fuse holder C
- SC47 Fuse 47 on fuse holder C
- SC48 Fuse 48 on fuse holder C
- SC49 Fuse 49 on fuse holder C
- * Up to November 2017
- *2 For models with Euro 5 emission standard
- *3 From November 2017


ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

Automatic glow period control unit, Engine/motor control unit

J179 Automatic glow period control unit
J623 Engine/motor control unit
T11b 11-pin connector
T94b 94-pin connector, black

- (84) Earth connection, engine block, in front right wiring harness
- (179) Earth connection, in left headlight wiring harness
- (655) Earth point, on left headlight
- (A23) Connection (30al), in dash panel wiring harness
- (D180) Connection (87a), in engine compartment wiring harness

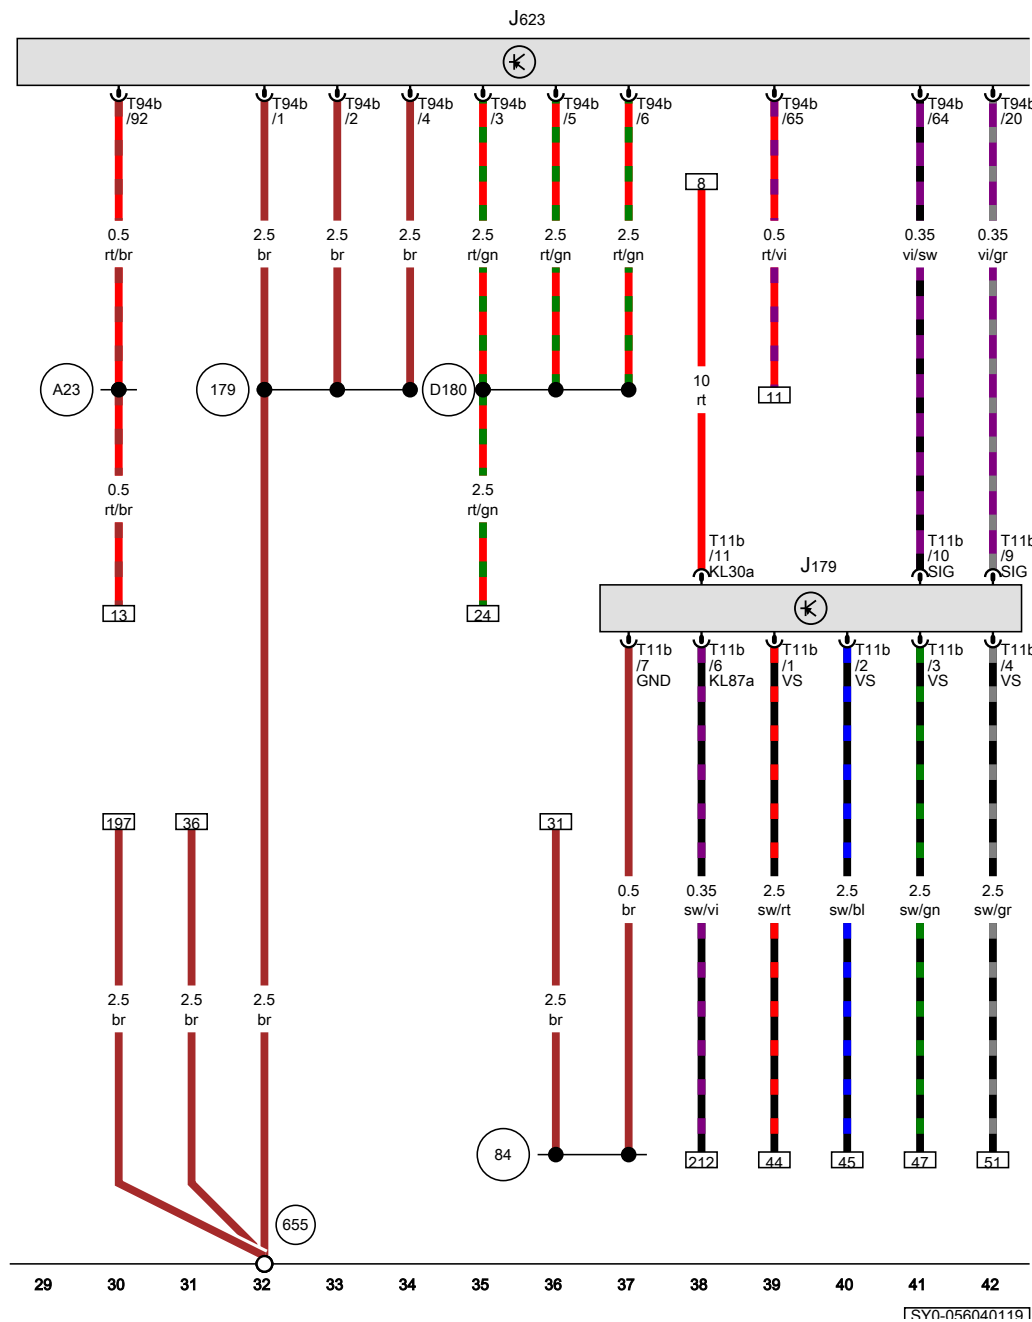

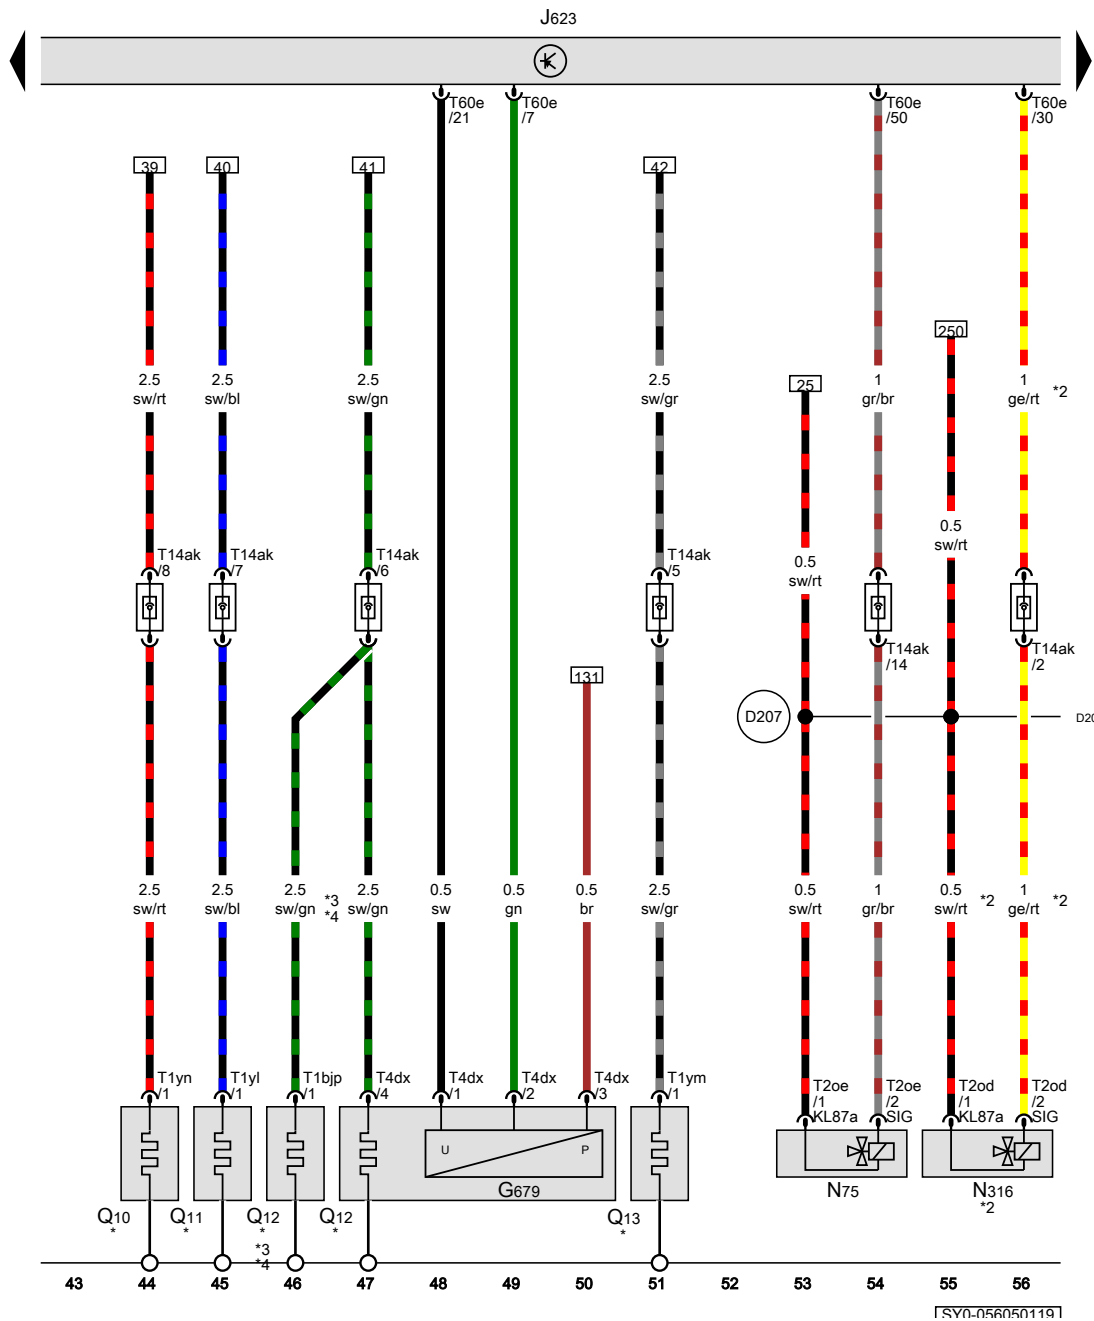


Engine/motor control unit, Charge pressure control solenoid valve, Intake manifold flap valve, Glow plug 1, Glow plug 2, Glow plug 3, Glow plug 4

G679	Cylinder 3 combustion chamber pressure sender
J623	Engine/motor control unit
N75	Charge pressure control solenoid valve
N316	Intake manifold flap valve
Q10	Glow plug 1
Q11	Glow plug 2
Q12	Glow plug 3
Q13	Glow plug 4
T1bjp	1-pin connector, black
T1yl	1-pin connector
T1ym	1-pin connector
T1yn	1-pin connector
T2od	2-pin connector, black
T2oe	2-pin connector, black
T4dx	4-pin connector, black
T14ak	14-pin connector, grey
T60e	60-pin connector, black

(D207) Connection 7 (87a), in engine compartment wiring harness

- * Earth supply via housing
- *2 For models with Euro 6 plus emission standard
- *3 For models with Euro 3 emission standard
- *4 For models with Euro 4 emission standard

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink

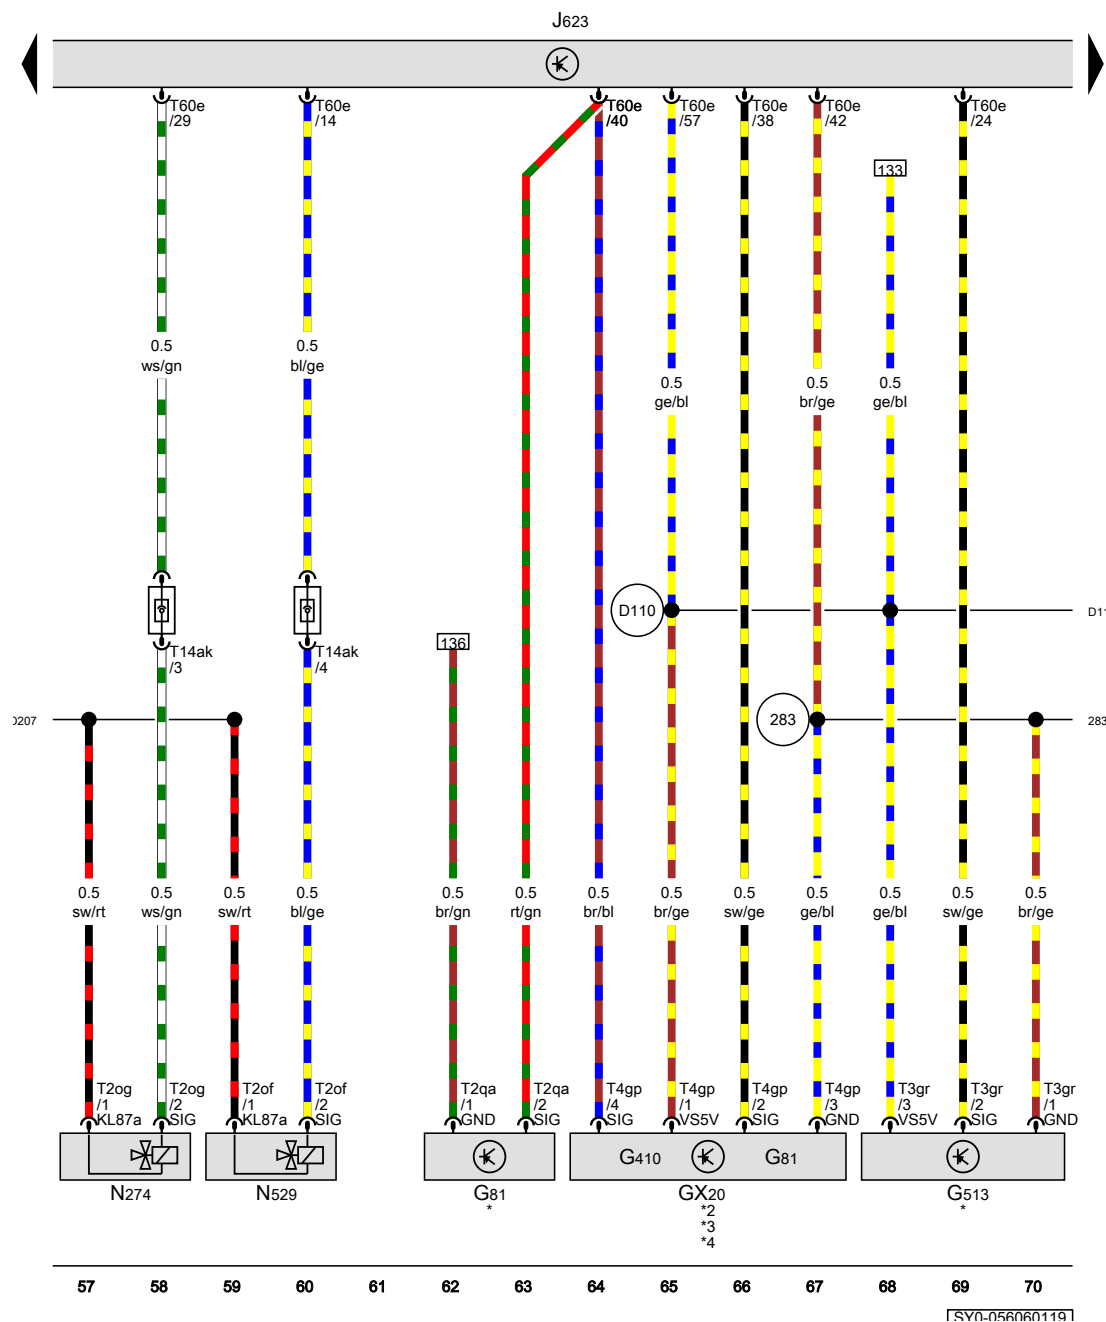


Temperature and pressure sender for low-pressure fuel system, Fuel temperature sender, Variable intake manifold position sender, Engine/motor control unit, Charge pressure control solenoid valve 2, Turbine changeover valve

- GX20 Temperature and pressure sender for low-pressure fuel system
- G81 Fuel temperature sender
- G410 Fuel pressure sender for low pressure
- G513 Variable intake manifold position sender
- J623 Engine/motor control unit
- N274 Charge pressure control solenoid valve 2
- N529 Turbine changeover valve
- T2of 2-pin connector, black
- T2og 2-pin connector, black
- T2qa 2-pin connector, black
- T3gr 3-pin connector, brown
- T4gp 4-pin connector, black
- T14ak 14-pin connector, grey
- T60e 60-pin connector, black

- 283 Earth point 2, engine prewiring harness
- D110 Connection 8 in engine compartment wiring harness
- D207 Connection 7 (87a), in engine compartment wiring harness
- * For models with Euro 6 plus emission standard
- *2 For models with Euro 3 emission standard
- *3 For models with Euro 4 emission standard
- *4 For models with Euro 5 plus emission standard

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

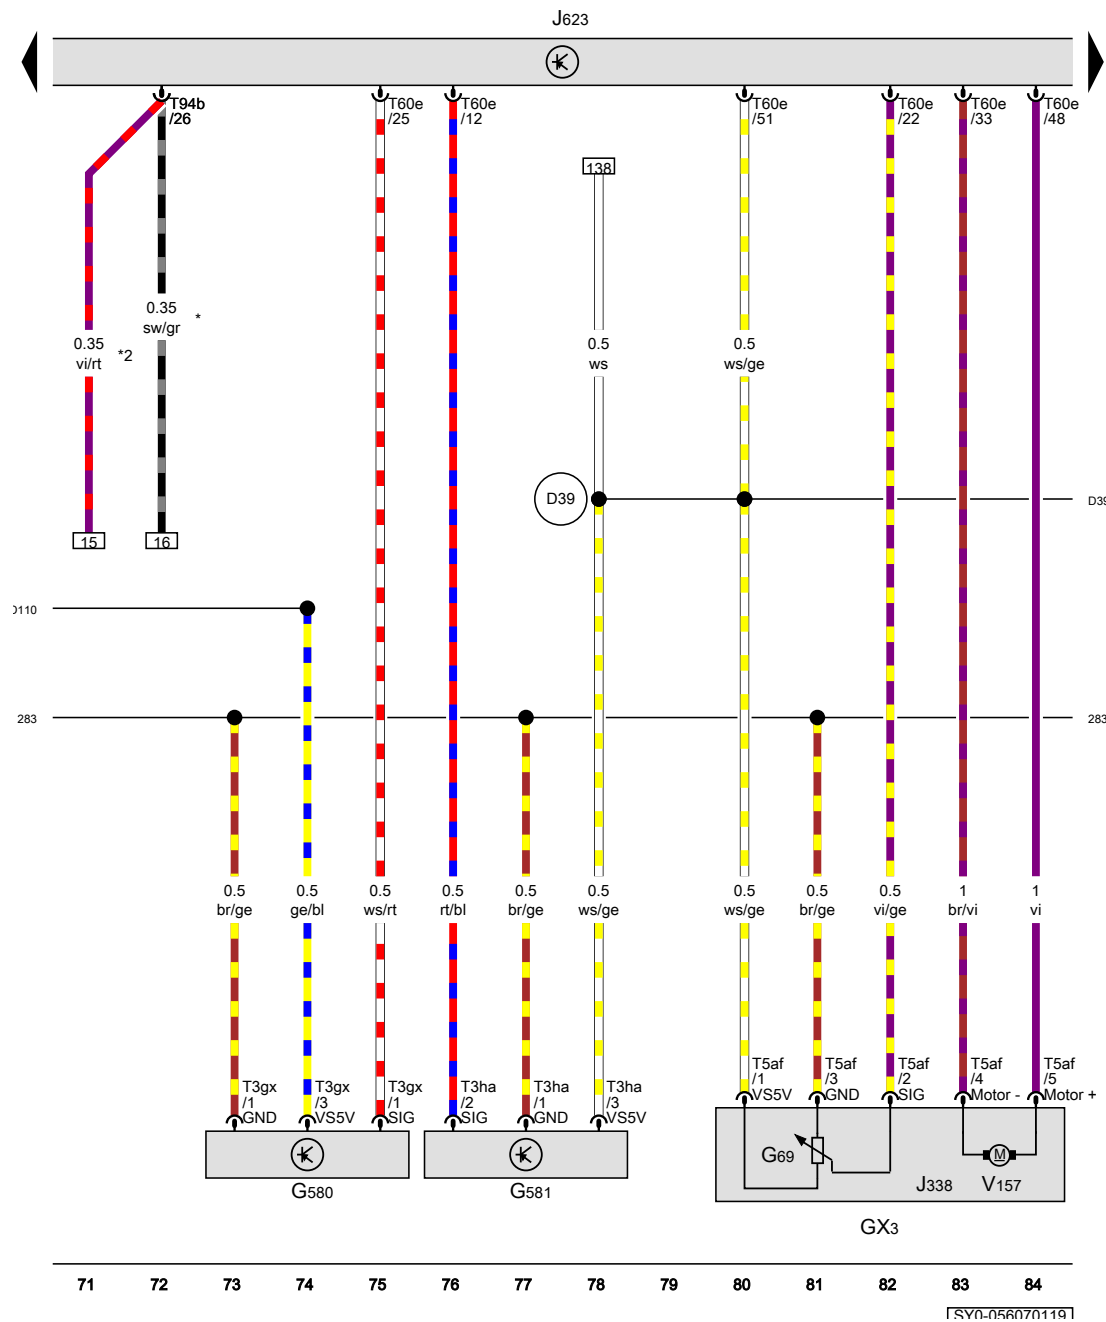

Throttle valve module, Position sender 2 for charge pressure positioner, Position sender for charge pressure positioner, Engine/motor control unit

- GX3 Throttle valve module
- G69 Throttle valve potentiometer
- G580 Position sender 2 for charge pressure positioner
- G581 Position sender for charge pressure positioner
- J338 Throttle valve module
- J623 Engine/motor control unit
- T3gx 3-pin connector, brown
- T3ha 3-pin connector, brown
- T5af 5-pin connector, black
- T60e 60-pin connector, black
- T94b 94-pin connector, black
- V157 Intake manifold flap motor

283 Earth point 2, engine prewiring harness


D39 Connection 1, in engine prewiring harness

D110 Connection 8 in engine compartment wiring harness

* Up to November 2017

*2 From November 2017

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

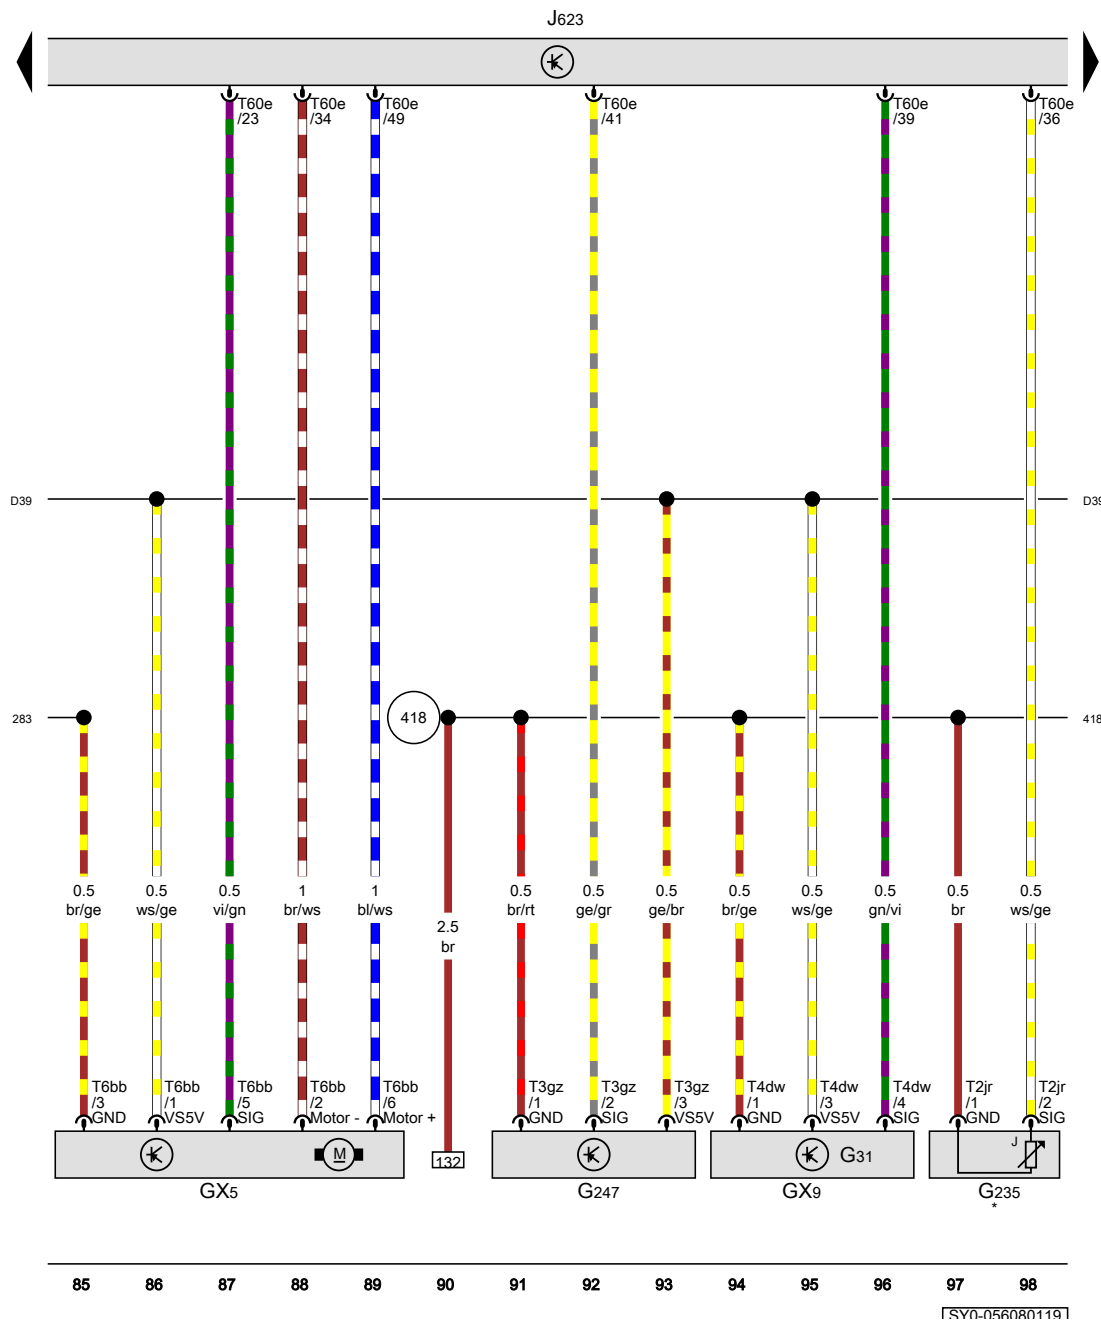

Exhaust gas recirculation valve 1, Intake manifold sender, Exhaust gas temperature sender 1, Fuel pressure sender, Engine/motor control unit


- GX5 Exhaust gas recirculation valve 1
- GX9 Intake manifold sender
- G31 Charge pressure sender
- G235 Exhaust gas temperature sender 1
- G247 Fuel pressure sender
- J623 Engine/motor control unit
- T2jr 2-pin connector, black
- T3gz 3-pin connector, black
- T4dw 4-pin connector, black
- T6bb 6-pin connector, grey
- T60e 60-pin connector, black

283 Earth point 2, engine prewiring harness

418 Earth connection 10, in engine compartment wiring harness


D39 Connection 1, in engine prewiring harness

* Pre-wired component

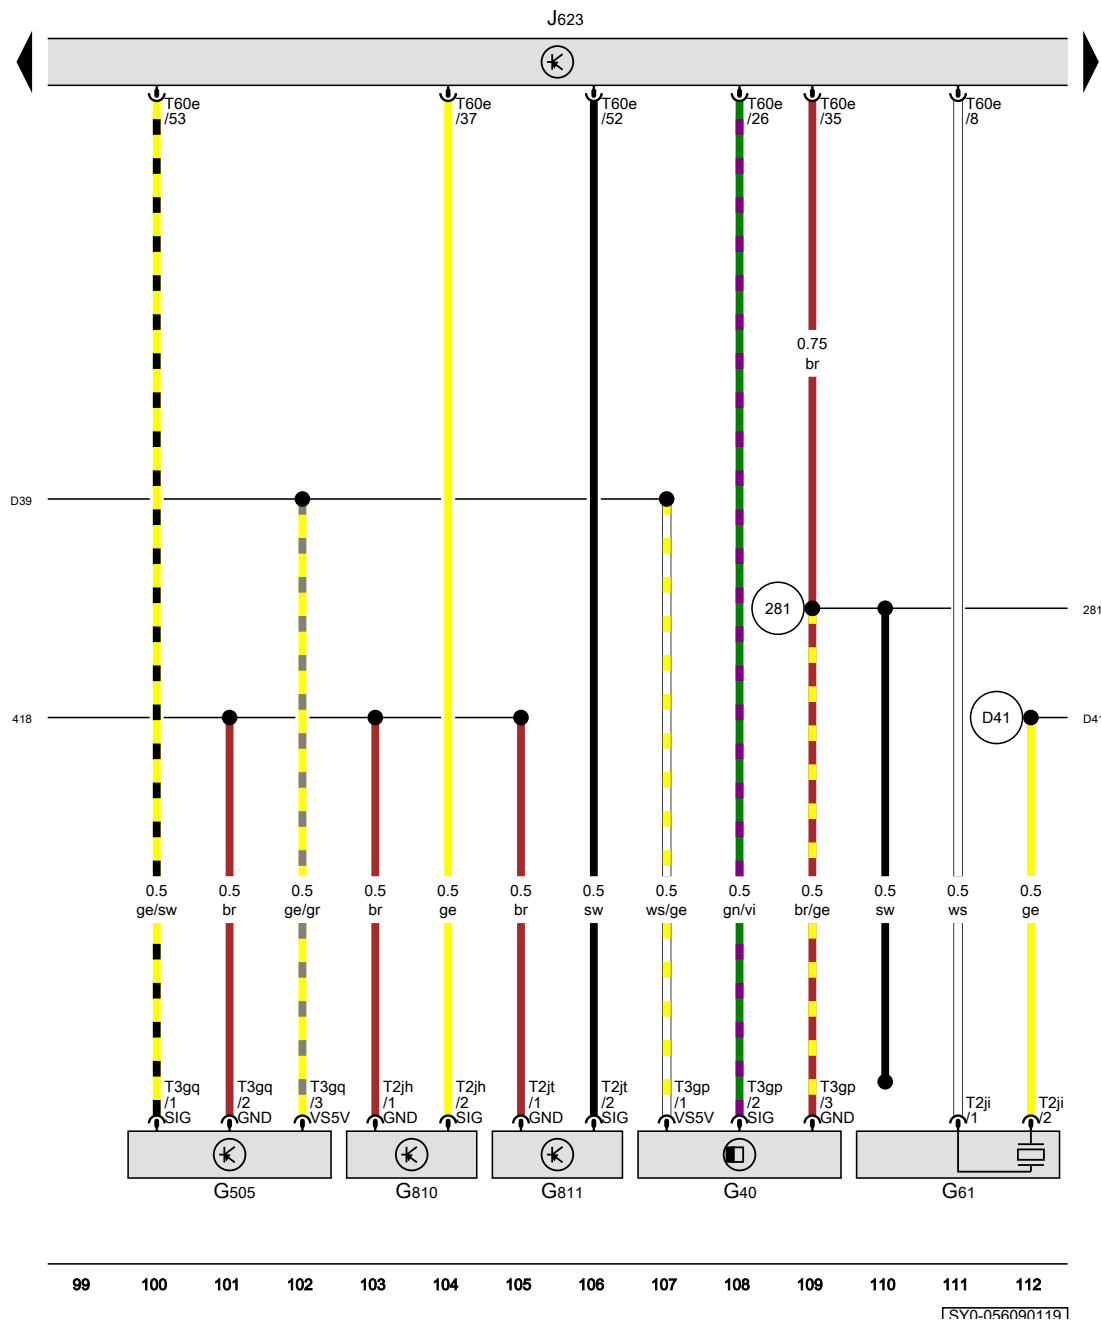

Hall sender, Knock sensor 1, Pressure differential sender, Charge air temperature sender before charge air cooler, Charge air temperature sender after charge air cooler, Engine/motor control unit

- G40 Hall sender
- G61 Knock sensor 1
- G505 Pressure differential sender
- G810 Charge air temperature sender before charge air cooler
- G811 Charge air temperature sender after charge air cooler
- J623 Engine/motor control unit
- T2jh 2-pin connector, black
- T2ji 2-pin connector, black
- T2jt 2-pin connector, black
- T3gp 3-pin connector, black
- T3gq 3-pin connector, black
- T60e 60-pin connector, black
- 281 Earth point 1, engine prewiring harness
- 418 Earth connection 10, in engine compartment wiring harness
- D39 Connection 1, in engine prewiring harness
- D41 Connection 3, in engine prewiring harness

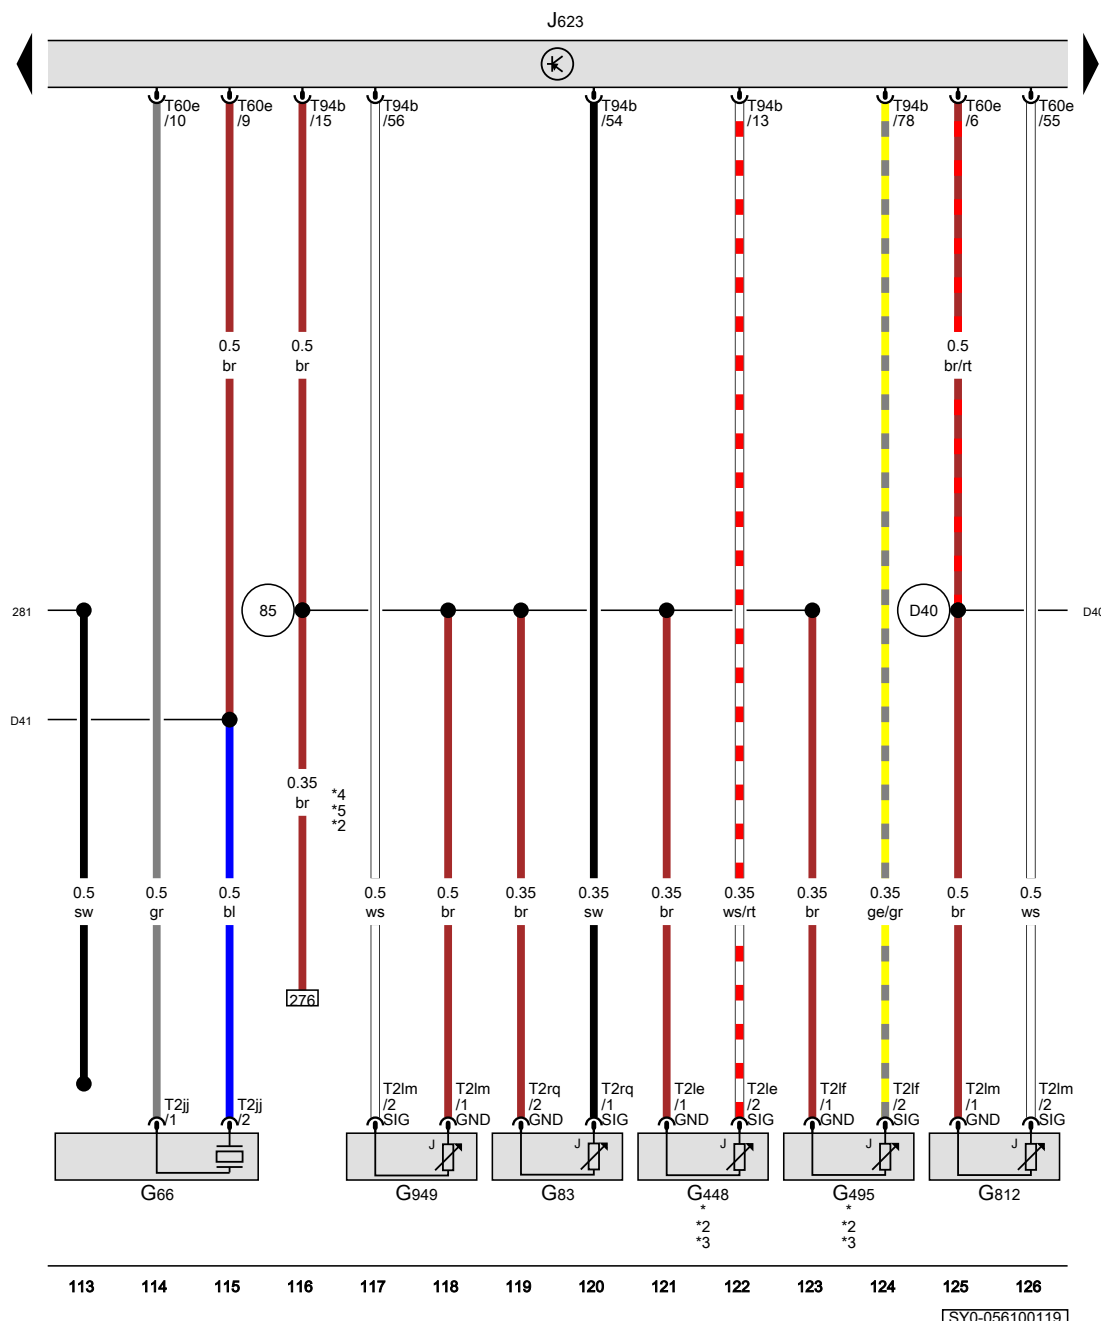

Knock sensor 2, Radiator outlet coolant temperature sender, Exhaust gas temperature sender 2, Exhaust gas temperature sender 3, Coolant temperature sender 3, Temperature sensor 3 for exhaust recirculation, Engine/motor control unit

- G66 Knock sensor 2
- G83 Radiator outlet coolant temperature sender
- G448 Exhaust gas temperature sender 2
- G495 Exhaust gas temperature sender 3
- G812 Coolant temperature sender 3
- G949 Temperature sensor 3 for exhaust recirculation
- J623 Engine/motor control unit
- T2jj 2-pin connector, black
- T2le 2-pin connector, black
- T2lf 2-pin connector, brown
- T2lm 2-pin connector, colourless, black
- T2rq 2-pin connector, black
- T60e 60-pin connector, black
- T94b 94-pin connector, black

85 Earth connection 1, in engine compartment wiring harness


281 Earth point 1, engine prewiring harness

D40 Connection 2, in engine prewiring harness

D41 Connection 3, in engine prewiring harness

- * Pre-wired component
- *2 For models with Euro 5 emission standard
- *3 For models with Euro 6 emission standard
- *4 For models with Euro 3 emission standard
- *5 For models with Euro 4 emission standard

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

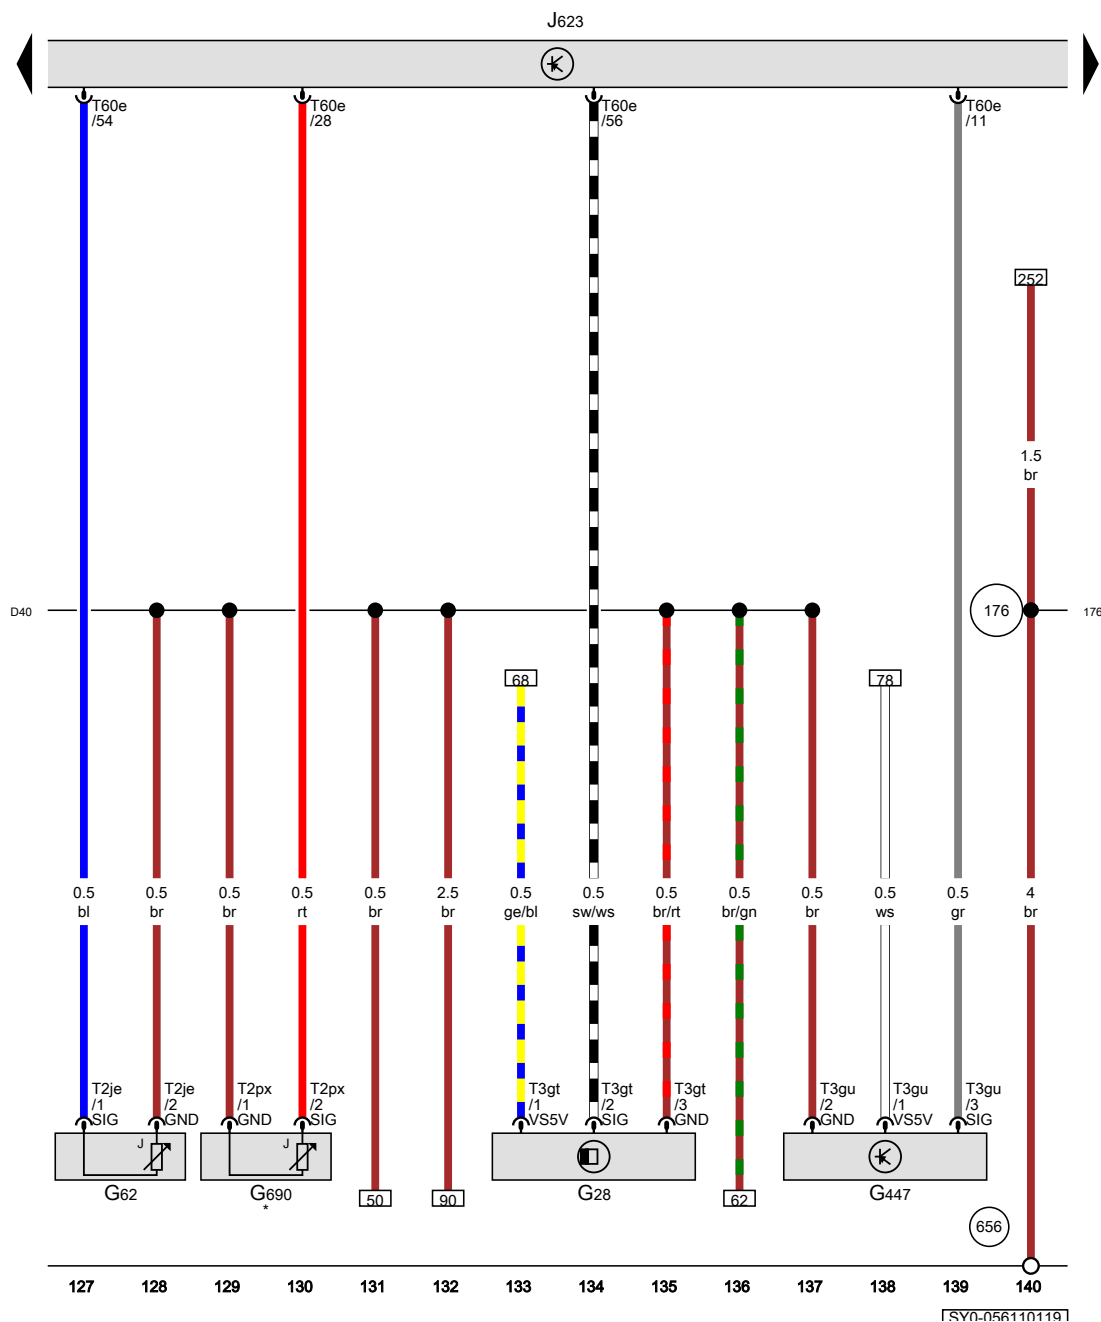

Engine speed sender, Coolant temperature sender, Charge pressure sender 2, Temperature sensor 2 for exhaust recirculation, Engine/motor control unit

- G28 Engine speed sender
- G62 Coolant temperature sender
- G447 Charge pressure sender 2
- G690 Temperature sensor 2 for exhaust recirculation
- J623 Engine/motor control unit
- T2je 2-pin connector, black
- T2px 2-pin connector, brown
- T3gt 3-pin connector, black
- T3gu 3-pin connector, black
- T60e 60-pin connector, black


176 Earth connection, in right headlight wiring harness

656 Earth point, on right headlight

D40 Connection 2, in engine prewiring harness

* Pre-wired component

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

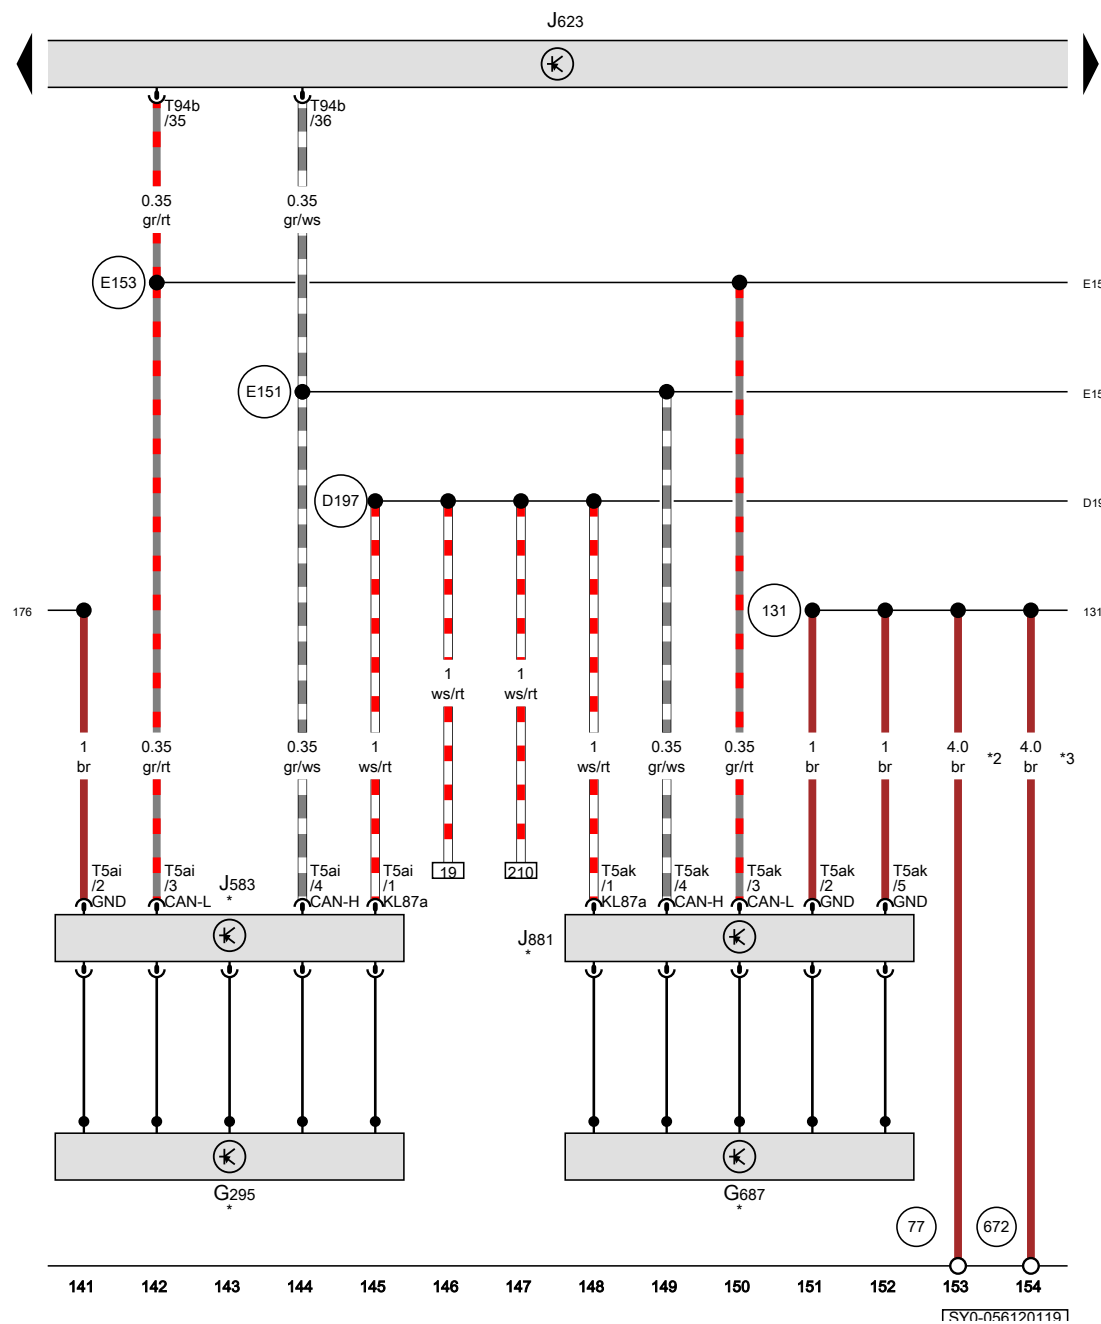


Control unit for NOx sender, Engine/motor control unit,
Control unit for NOx sender 2

G295 NOx sender
G687 NOx sender 2
J583 Control unit for NOx sender
J623 Engine/motor control unit
J881 Control unit for NOx sender 2
T5ai 5-pin connector, black
T5ak 5-pin connector, black
T94b 94-pin connector, black

- 77 Earth point, lower part of left B-pillar
- 131 Earth connection 2, in engine compartment wiring harness
- 176 Earth connection, in right headlight wiring harness
- 672 Earth point 2, on front of left longitudinal member
- D197 Connection 5 (87a), in engine compartment wiring harness
- E151 Connection 1 (CAN bus, engine/motor control unit, high)
- E153 Connection 1 (CAN bus, engine/motor control unit, low)

* For models with Euro 6 plus emission standard
*2 Up to July 2018
*3 From July 2018

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink

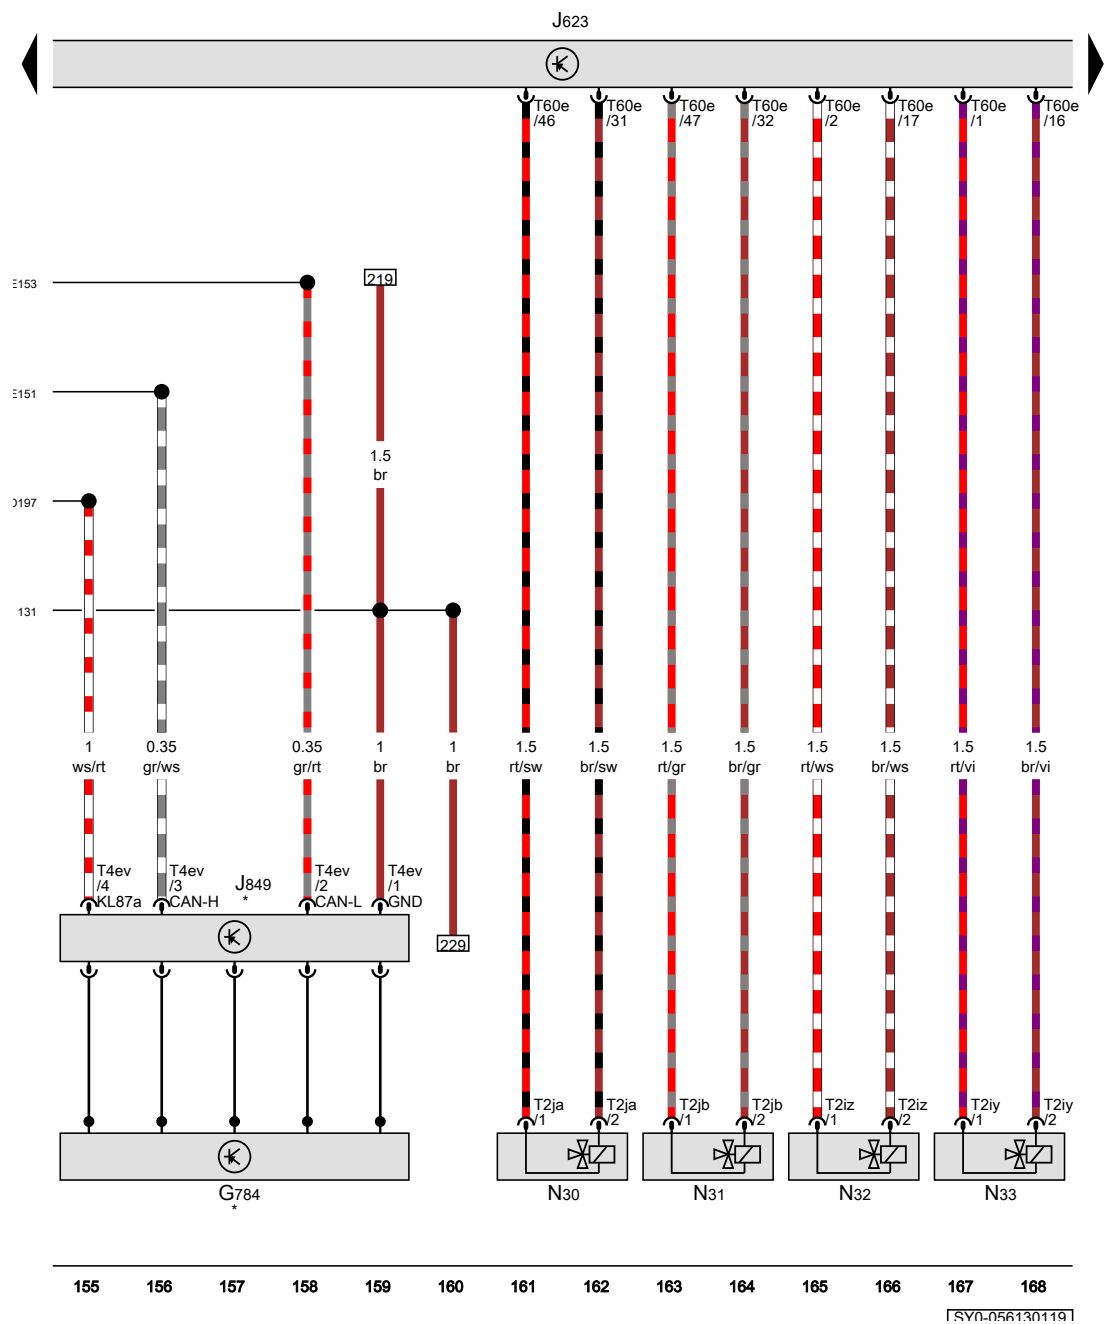



Engine/motor control unit, Control unit for sensor electronics, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4

- G784 Particulate sensor
- J623 Engine/motor control unit
- J849 Control unit for sensor electronics
- N30 Injector, cylinder 1
- N31 Injector, cylinder 2
- N32 Injector, cylinder 3
- N33 Injector, cylinder 4
- T2iy 2-pin connector, black
- T2iz 2-pin connector, black
- T2ja 2-pin connector, black
- T2jb 2-pin connector, black
- T4ev 4-pin connector, black
- T60e 60-pin connector, black


- 131 Earth connection 2, in engine compartment wiring harness
- D197 Connection 5 (87a), in engine compartment wiring harness
- E151 Connection 1 (CAN bus, engine/motor control unit, high)
- E153 Connection 1 (CAN bus, engine/motor control unit, low)
- * For models with Euro 6 plus emission standard

Accelerator pedal module, Air mass meter, Engine/motor control unit

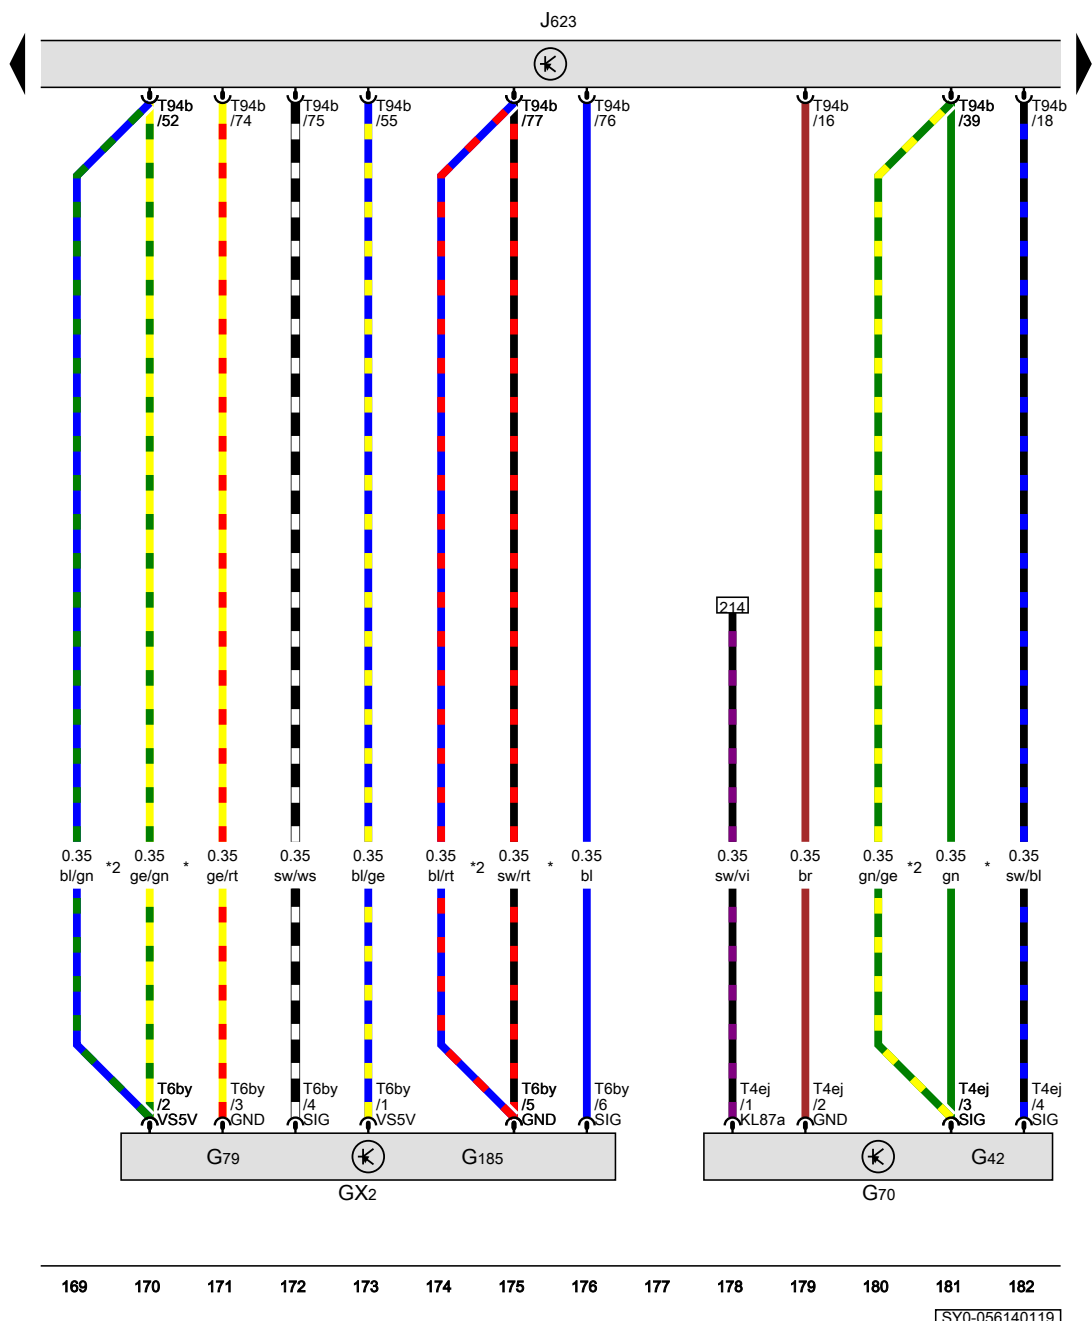

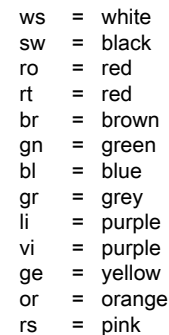


*2 From November 2017

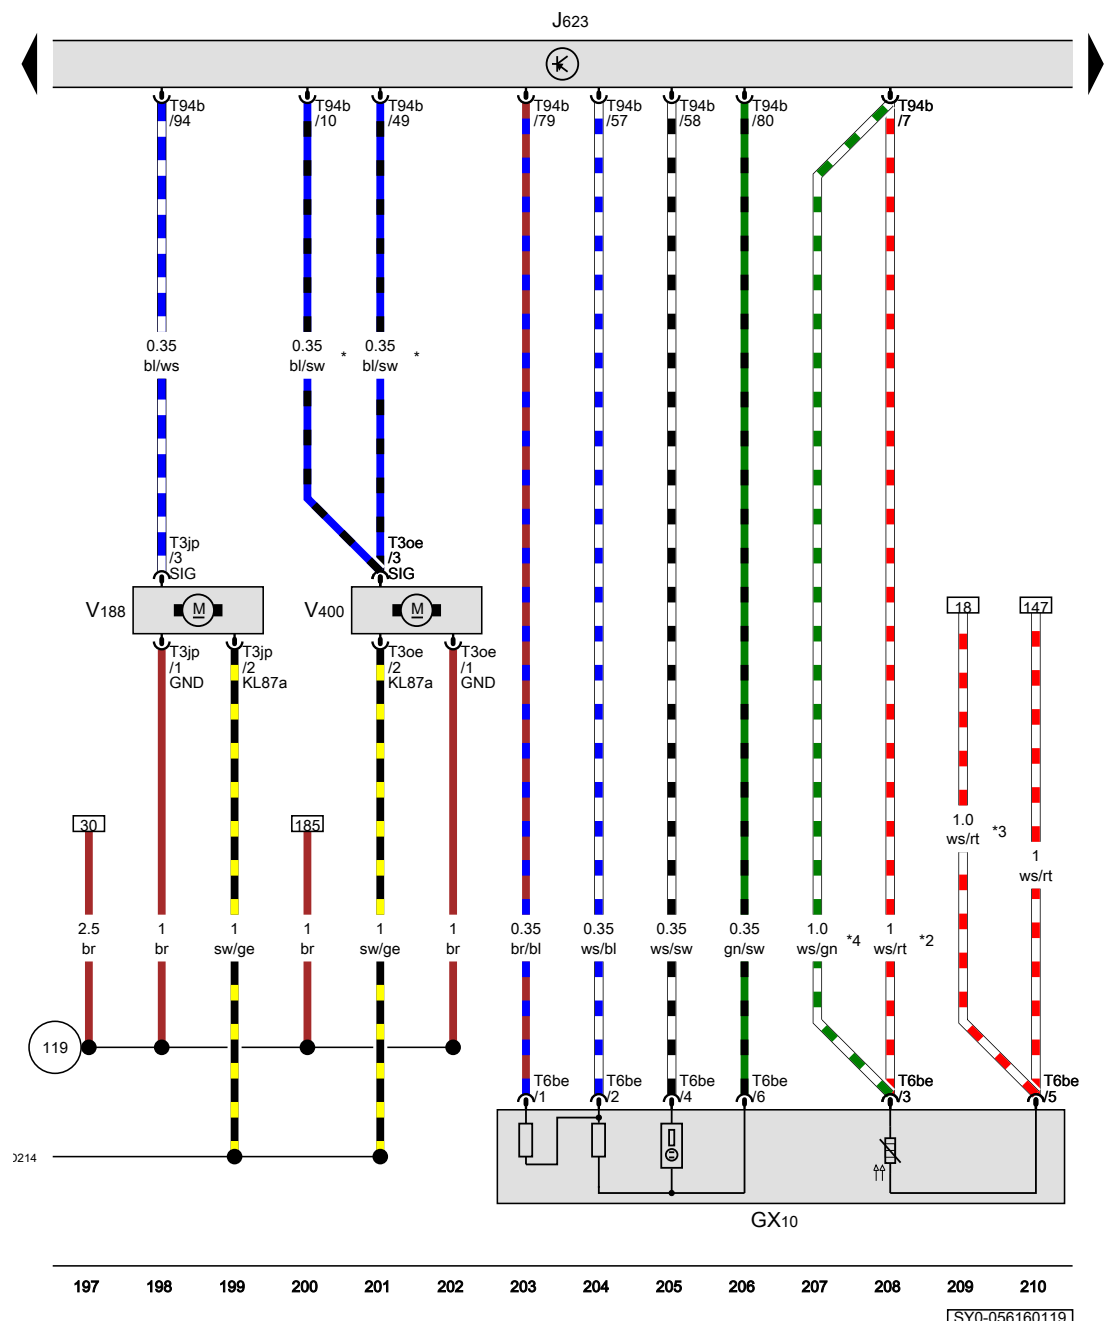

Lambda probe 1 before catalytic converter, Engine/motor control unit, Charge air cooling pump, Pump for exhaust gas recirculation cooler

- GX10 Lambda probe 1 before catalytic converter
- J623 Engine/motor control unit
- T3jp 3-pin connector, black
- T3oe 3-pin connector, black
- T6be 6-pin connector, black
- T94b 94-pin connector, black
- V188 Charge air cooling pump
- V400 Pump for exhaust gas recirculation cooler
- 119 Earth connection 1, in headlight wiring harness
- D214 Connection 8 (87a), in engine compartment wiring harness
- * According to equipment
- *2 Up to November 2017
- *3 For models with Euro 5 emission standard
- *4 From November 2017

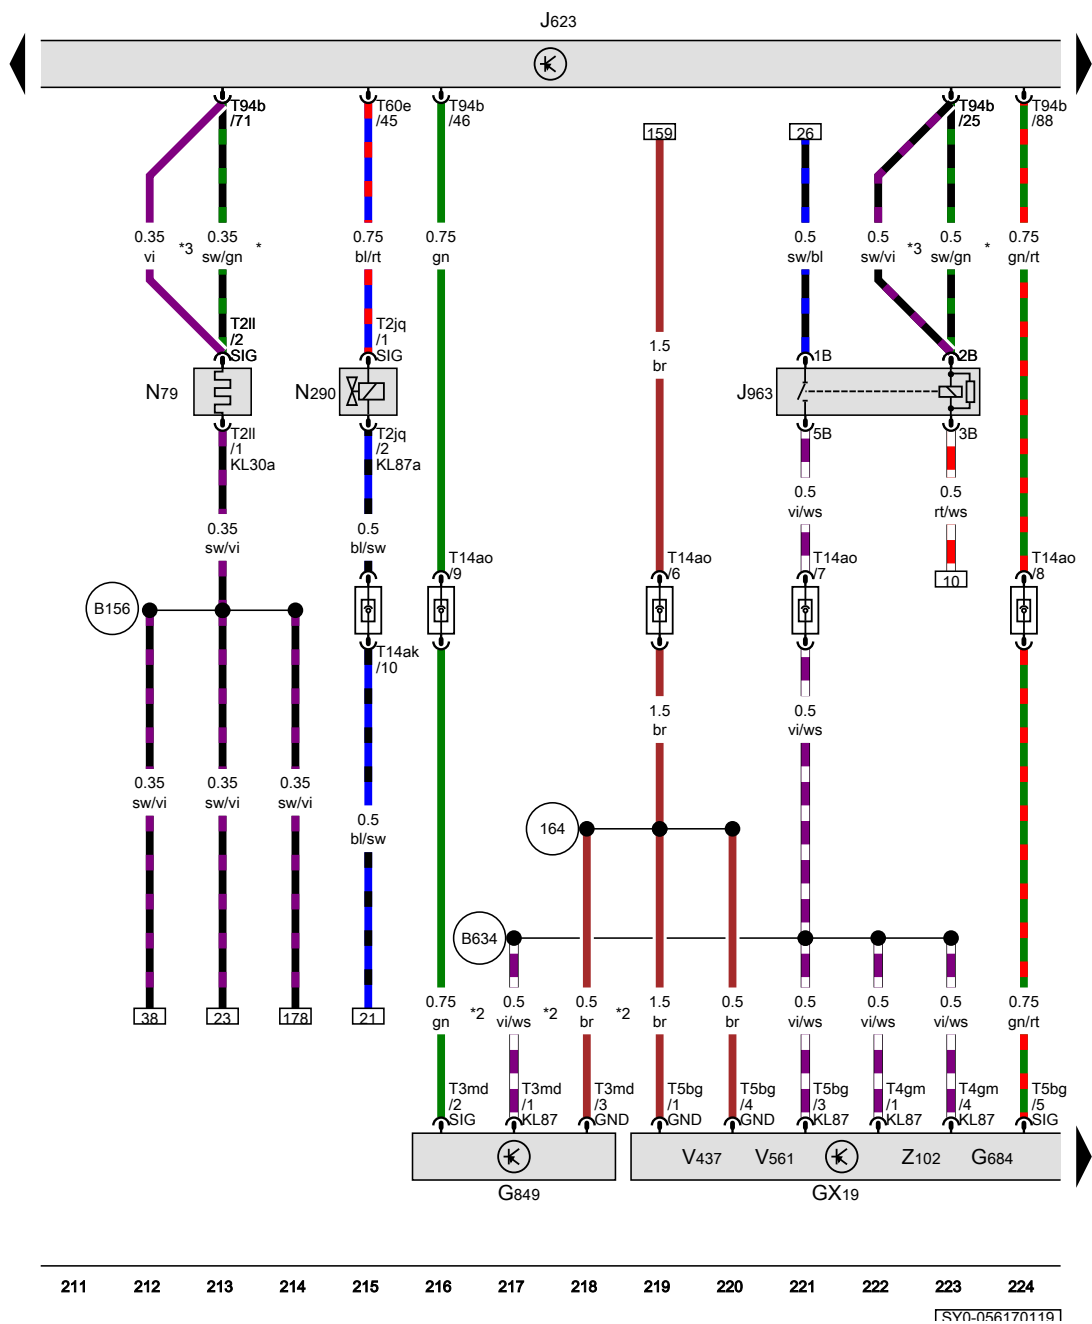

Delivery unit for reducing agent metering system, Reducing agent quality sensor, Engine/motor control unit, Relay for reducing agent metering system, Heater element for crankcase breather, Fuel metering valve

- GX19 Delivery unit for reducing agent metering system
- G684 Tank sender for reducing agent
- G849 Reducing agent quality sensor
- J623 Engine/motor control unit
- J963 Relay for reducing agent metering system
- N79 Heater element for crankcase breather
- N290 Fuel metering valve
- T2jq 2-pin connector, black
- T2l 2-pin connector, black
- T3md 3-pin connector, black
- T4gm 4-pin connector, black
- T5bg 5-pin connector, black
- T14ak 14-pin connector, grey
- T14ao 14-pin connector, black
- T60e 60-pin connector, black
- T94b 94-pin connector, black
- V437 Pump for reducing agent
- V561 Reducing agent return flow pump
- Z102 Heater for reducing agent tank (heater circuit 1)


164 Earth connection, in catalytic converter warning circuit wiring harness

B156 Positive connection (30a), in interior wiring harness

B634 Positive connection 2 (87), in main wiring harness

- * Up to November 2017
- *2 According to equipment
- *3 From November 2017

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink

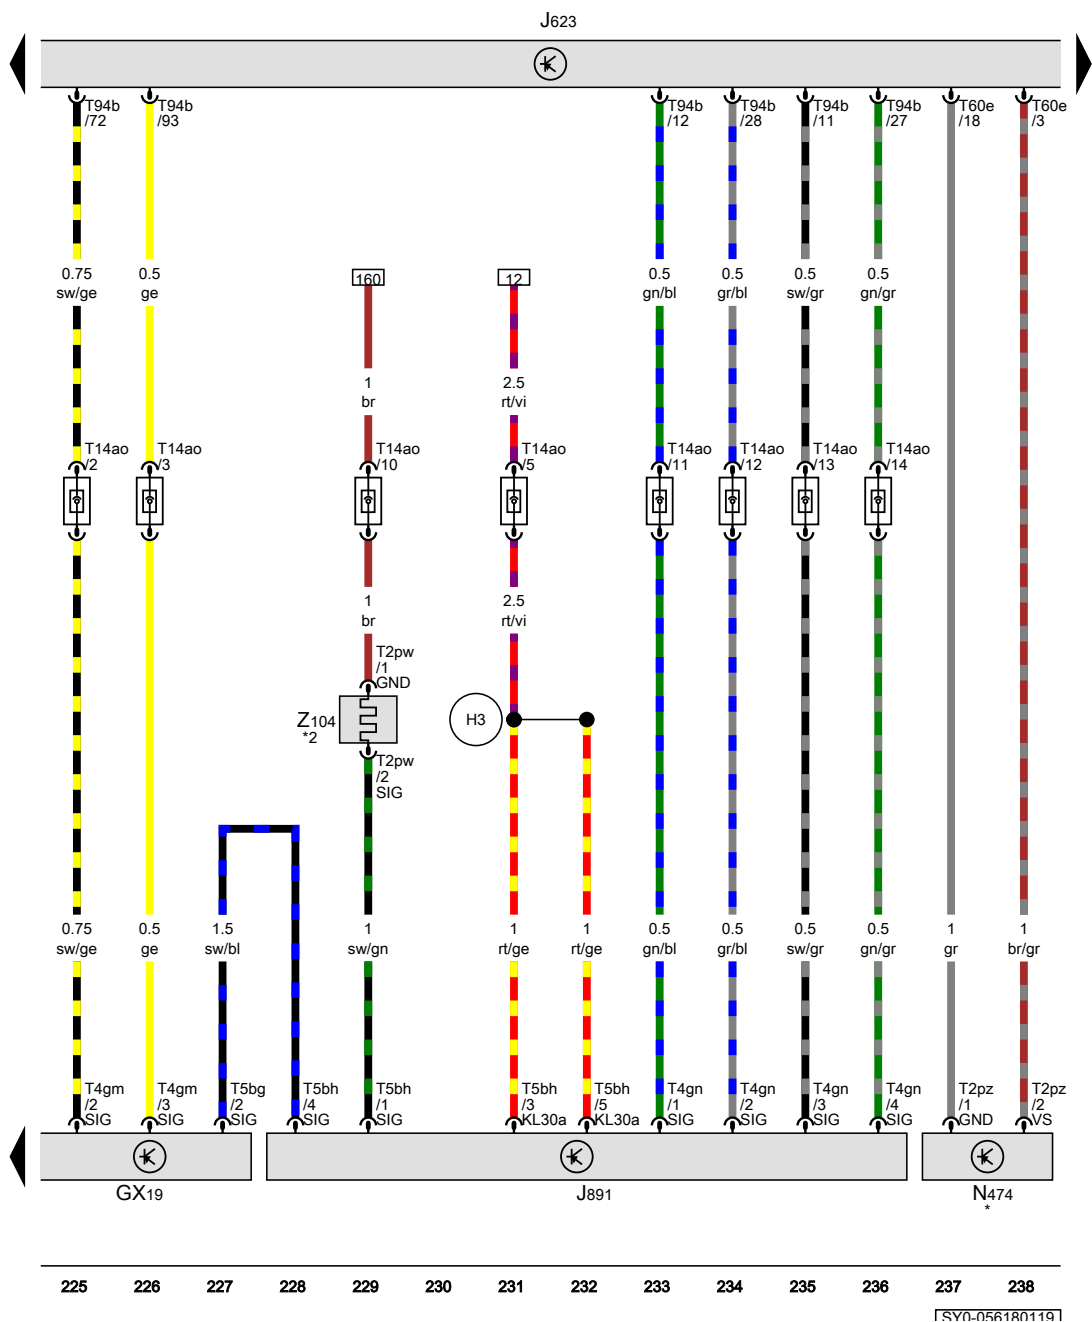


Delivery unit for reducing agent metering system, Engine/motor control unit, Control unit for reducing agent heater, Injector for reducing agent, Heater for reducing agent line (heater circuit 2)

- GX19 Delivery unit for reducing agent metering system
- J623 Engine/motor control unit
- J891 Control unit for reducing agent heater
- N474 Injector for reducing agent
- T2pw 2-pin connector, black
- T2pz 2-pin connector, black
- T4gm 4-pin connector, black
- T4gn 4-pin connector, black
- T5bg 5-pin connector, black
- T5bh 5-pin connector, colourless
- T14ao 14-pin connector, black
- T60e 60-pin connector, black
- T94b 94-pin connector, black
- Z104 Heater for reducing agent line (heater circuit 2)

H3 Connection 1 in wiring harness for reducing agent tank


- * For models with Euro 6 plus emission standard
- *2 Pre-wired component

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

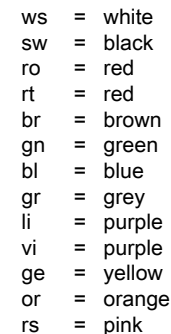


- * see applicable current flow diagram for basic equipment
- *2 Pre-wired component
- *3 Up to November 2017
- *4 For models with automatic gearbox
- *5 From November 2017

Engine/motor control unit, Radiator fan

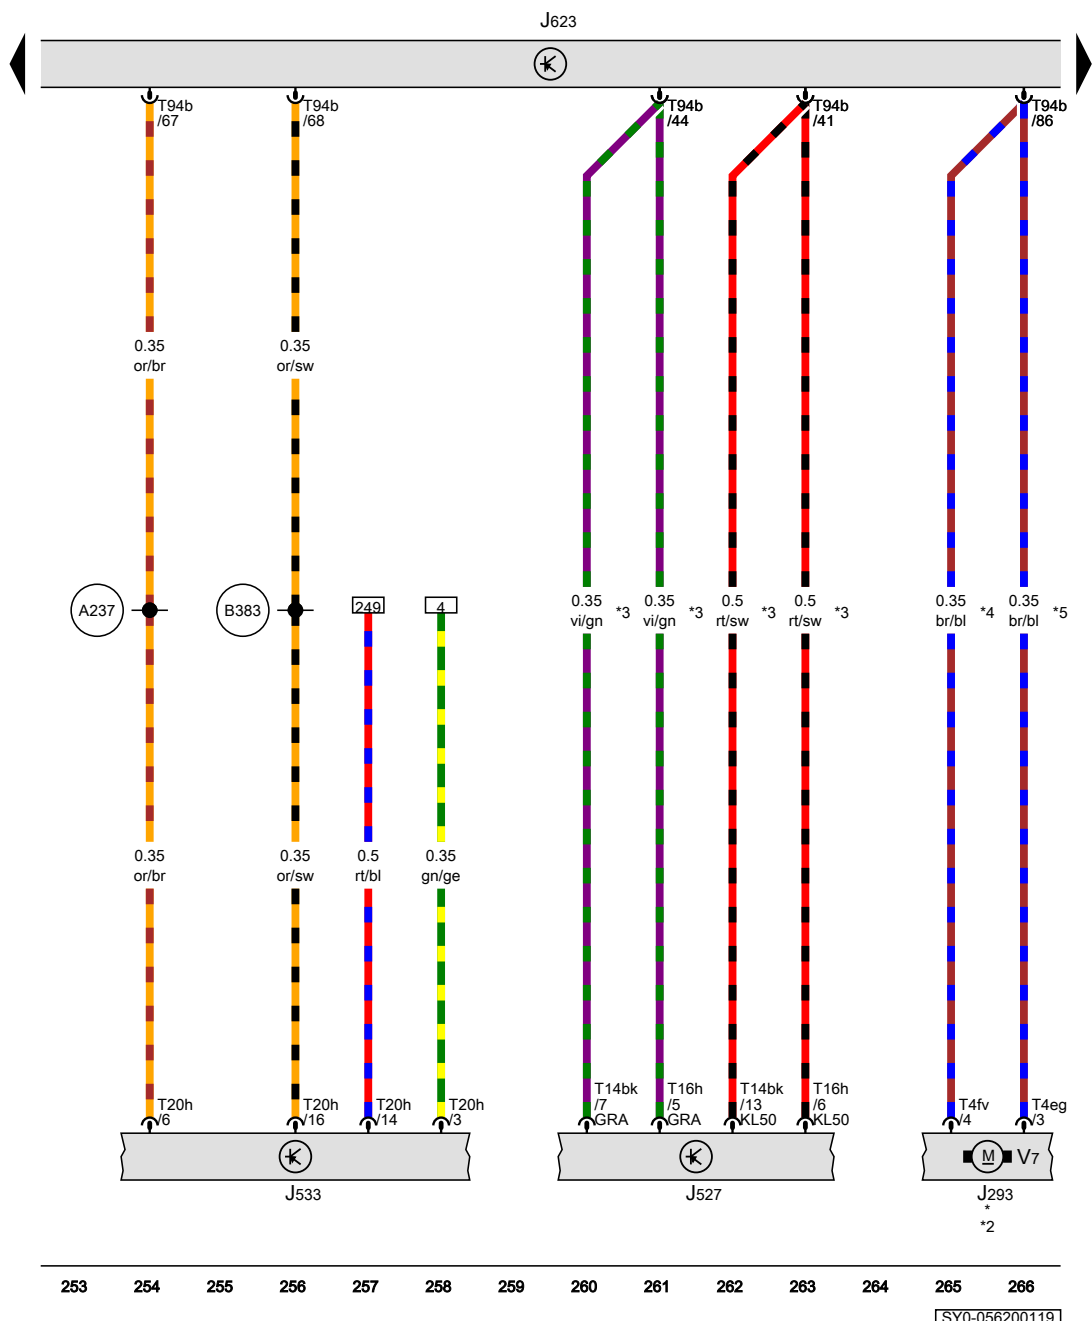

- J293 Radiator fan control unit
- J527 Steering column electronics control unit
- J533 Data bus diagnostic interface
- J623 Engine/motor control unit
- T4eg 4-pin connector, black
- T4fv 4-pin connector, black
- T14bk 14-pin connector, black
- T16h 16-pin connector, black
- T20h 20-pin connector, red
- T94b 94-pin connector, black
- V7 Radiator fan
- A237 Connection 1 (powertrain CAN bus, low), in dash panel wiring harness
- B383 Connection 1 (powertrain CAN bus, high), in main wiring harness
- * Pre-wired component
- *2 see applicable current flow diagram for radiator fan
- *3 According to equipment
- *4 For models with towing bracket
- *5 For models with no towing bracket

Water separator sender, Gearbox neutral position sender, Engine/motor control unit, Starter relay 1, Starter relay 2

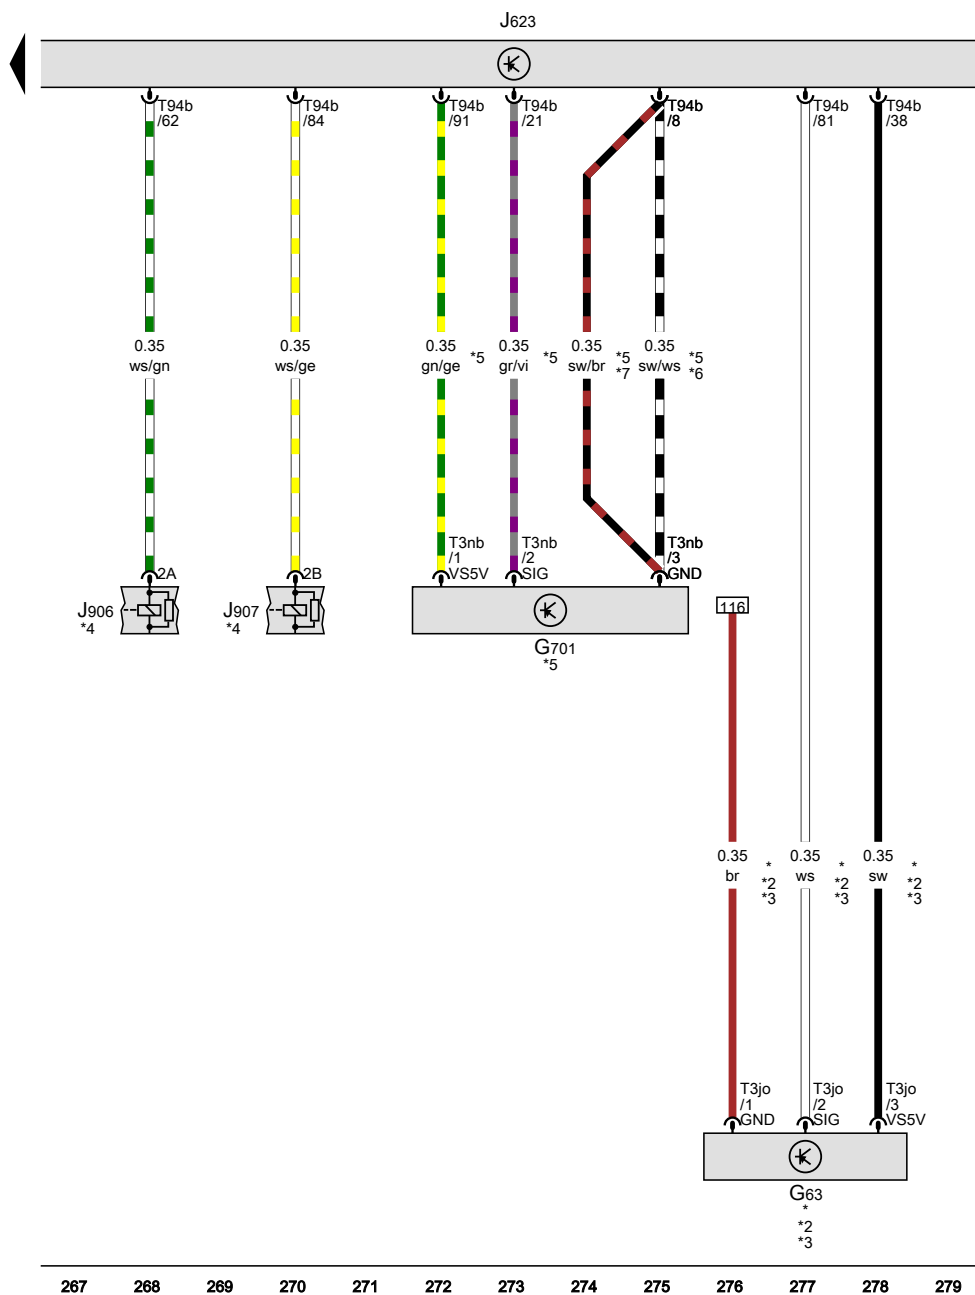


- G63 Water separator sender
- G701 Gearbox neutral position sender
- J623 Engine/motor control unit
- J906 Starter relay 1
- J907 Starter relay 2
- T3jo 3-pin connector, black
- T3nb 3-pin connector, black
- T94b 94-pin connector, black
- * For models with Euro 3 emission standard
- *2 For models with Euro 4 emission standard
- *3 For models with Euro 5 emission standard
- *4 see applicable current flow diagram for basic equipment
- *5 For models with manual gearbox
- *6 Up to November 2017
- *7 From November 2017

[SYN-056210119]

Convenience system

From May 2017

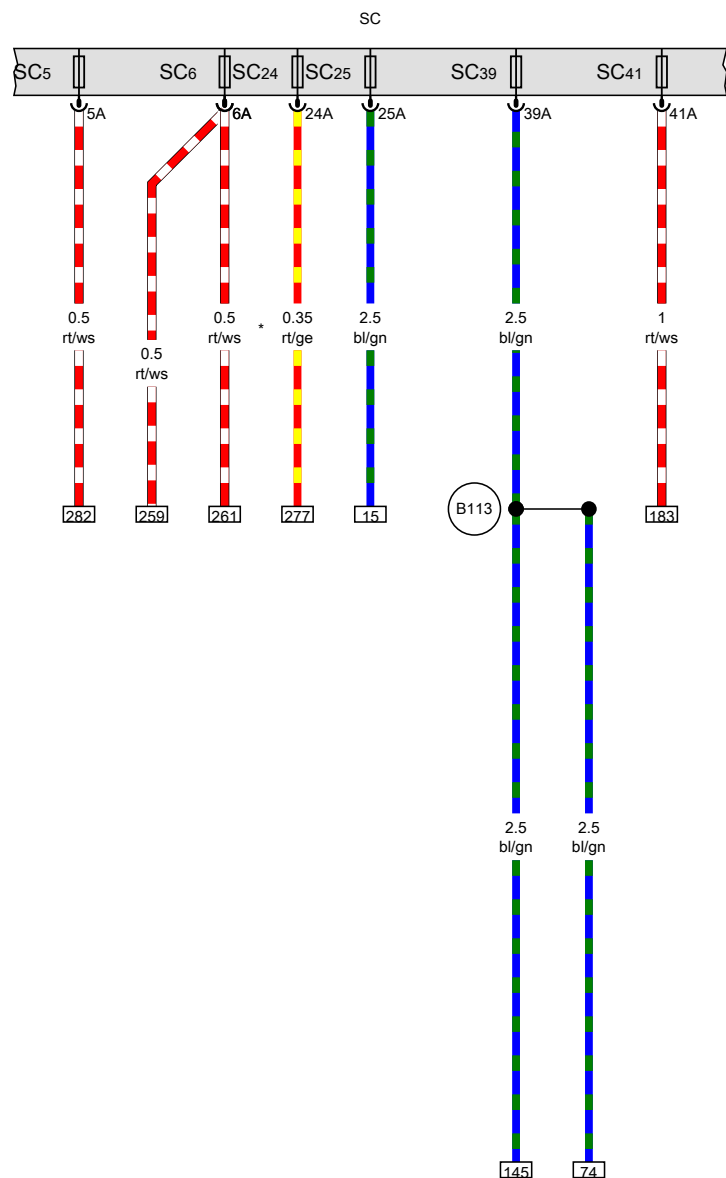

Fuse holder C

- SC Fuse holder C
- SC5 Fuse 5 on fuse holder C
- SC6 Fuse 6 on fuse holder C
- SC24 Fuse 24 on fuse holder C
- SC25 Fuse 25 on fuse holder C
- SC39 Fuse 39 on fuse holder C
- SC41 Fuse 41 on fuse holder C

 Positive connection (30a), in left interior wiring harness


* For models with anti-theft alarm system and front and rear interior monitor

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

Driver door control unit, Driver door lock unit

J386 Driver door control unit
T8dt 8-pin connector, black
T20k 20-pin connector, black
T28f 28-pin connector, black
VX21 Driver door lock unit


205 Earth connection, in driver door wiring harness

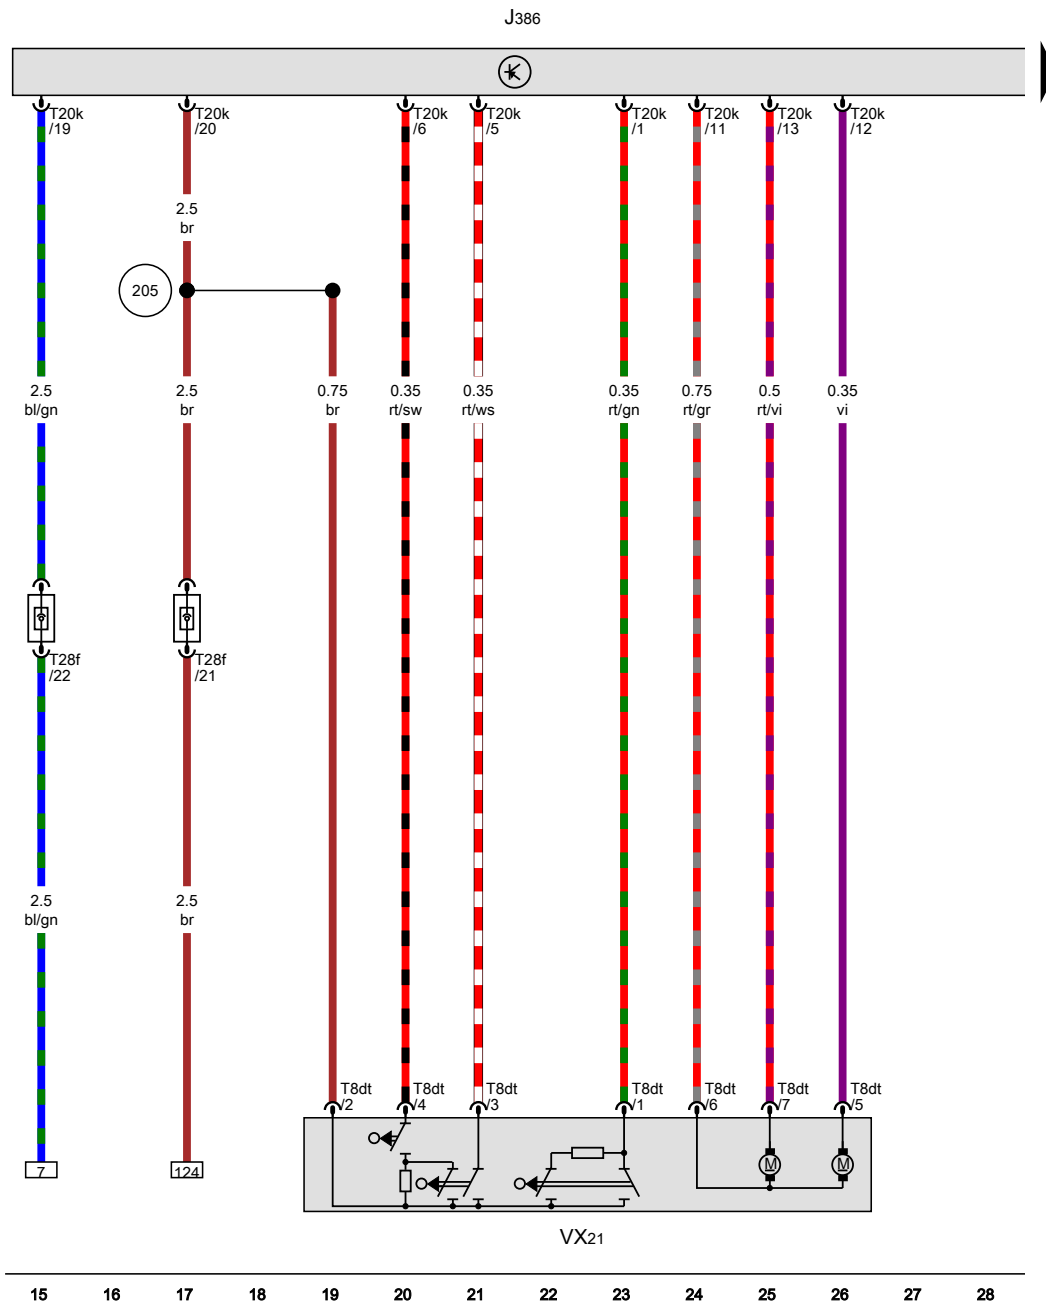


ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink

1SV0-0570301191

Driver door control unit, Central locking SAFELOCK function warning lamp, Left window regulator motor

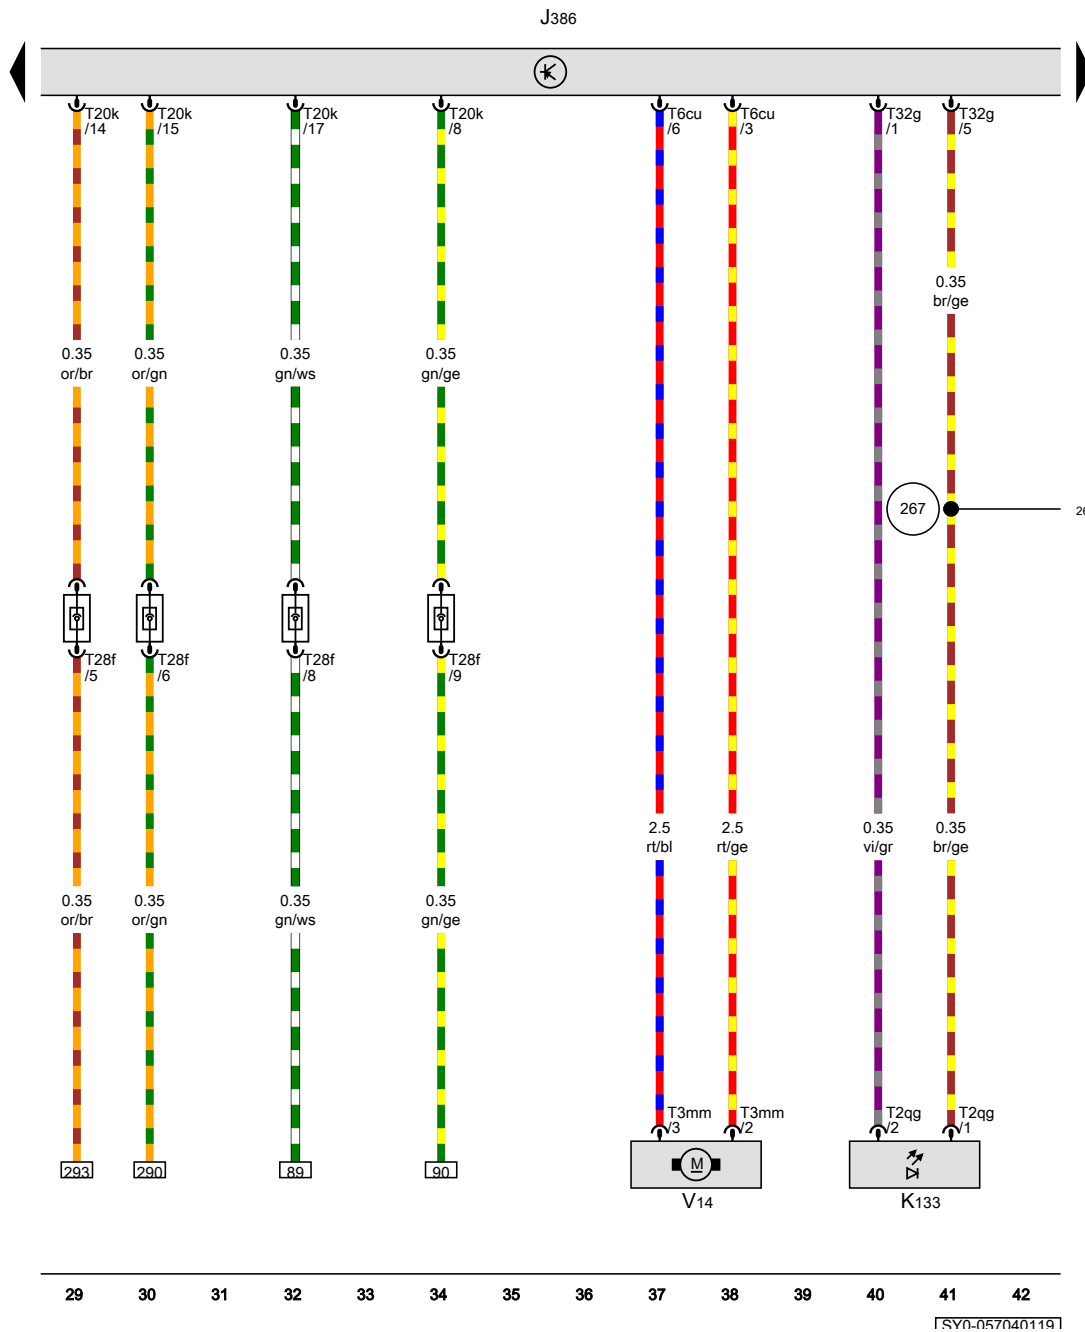

- J386 Driver door control unit
- K133 Central locking SAFELOCK function warning lamp
- T2qg 2-pin connector, black
- T3mm 3-pin connector, blue
- T6cu 6-pin connector, black
- T20k 20-pin connector, black
- T28f 28-pin connector, black
- T32g 32-pin connector, blue
- V14 Left window regulator motor
- 267 Earth connection 2, in drive side door wiring harness

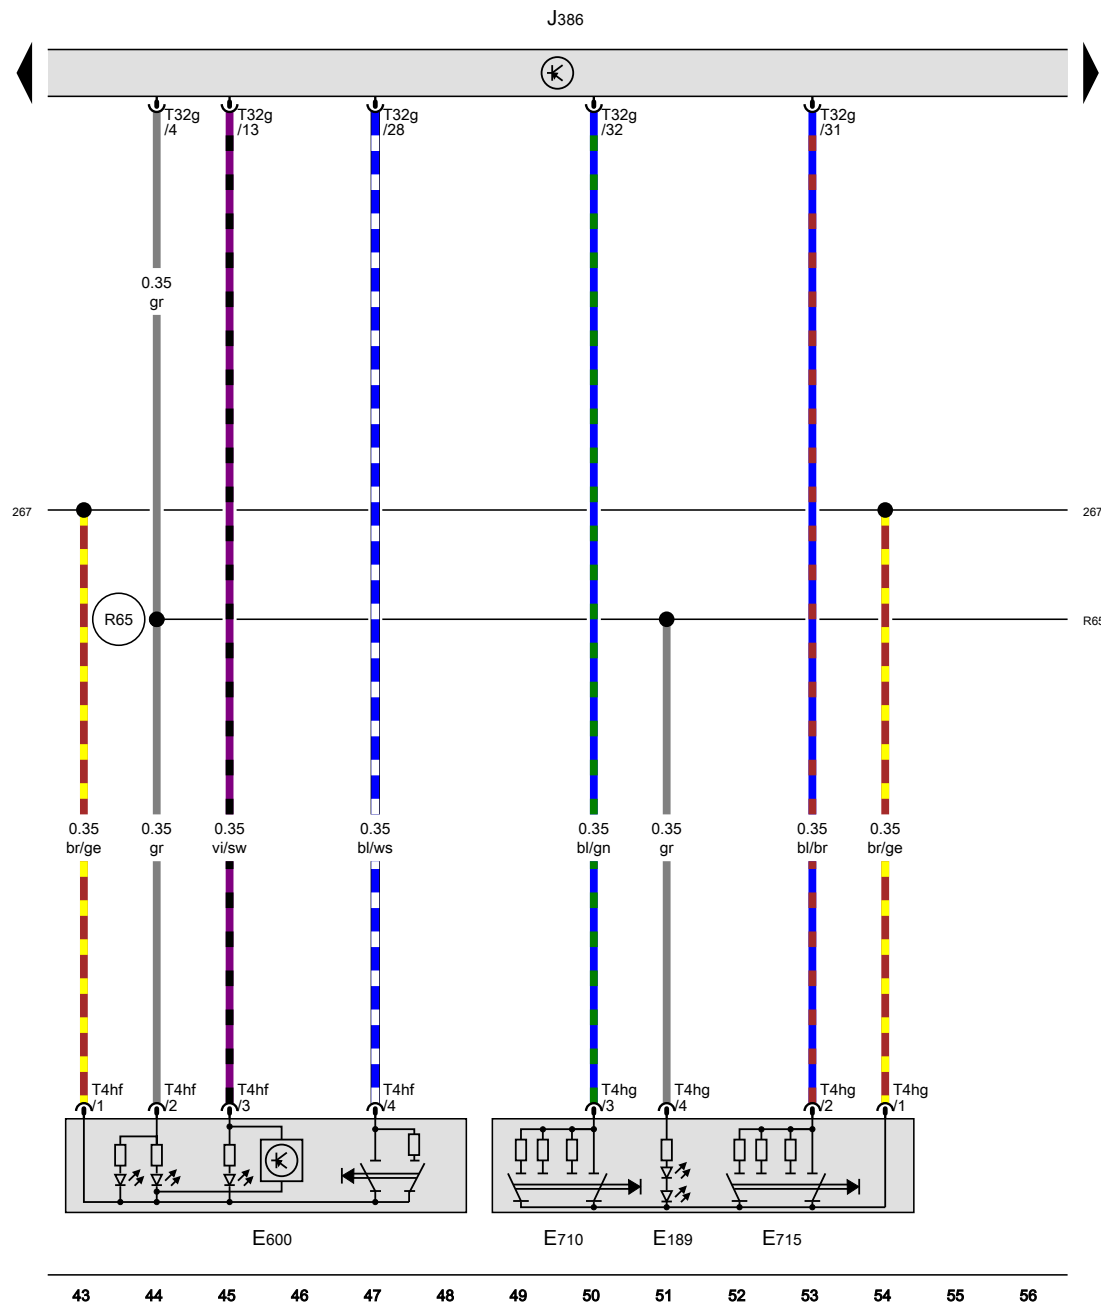


Central switch for window regulators in driver door, Central locking button, Driver door control unit

- E189 Central switch for window regulators in driver door
- E600 Central locking button
- E710 Front driver side window regulator button
- E715 Front passenger side window regulator button, in driver door
- J386 Driver door control unit
- T4hf 4-pin connector, blue
- T4hg 4-pin connector, brown
- T32g 32-pin connector, blue

267 Earth connection 2, in drive side door wiring harness

R65 Positive connection (58), in driver door wiring harness

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

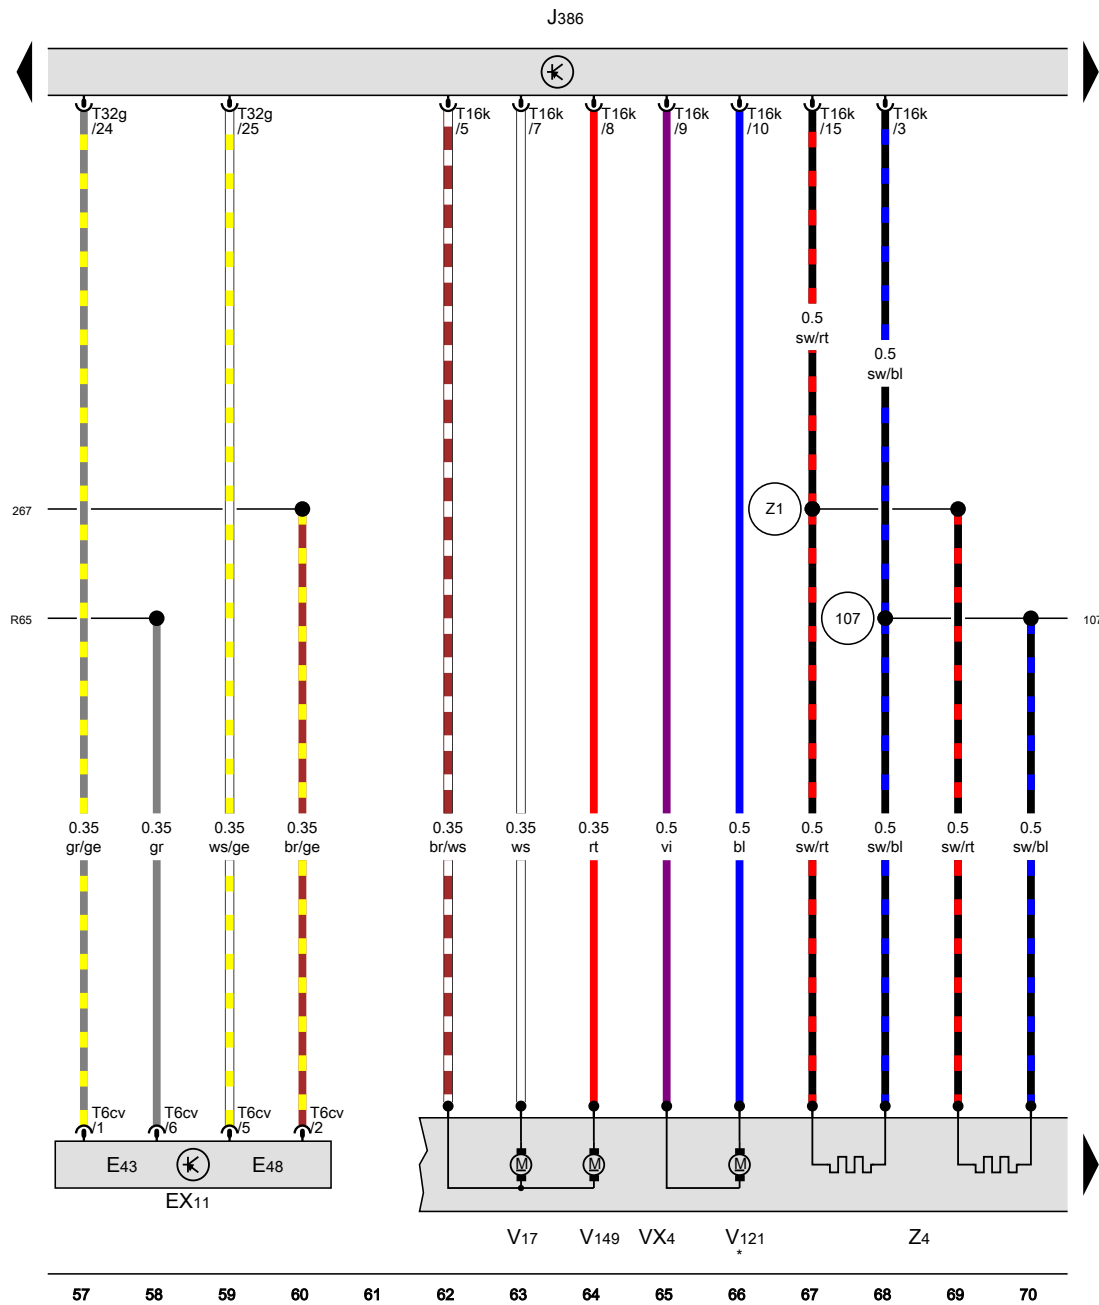


Exterior mirror adjuster, Driver door control unit, Driver side exterior mirror

- EX11 Exterior mirror adjuster
- E43 Mirror adjustment switch
- E48 Mirror adjustment changeover switch
- J386 Driver door control unit
- T6cv 6-pin connector, brown
- T16k 16-pin connector, black
- T32g 32-pin connector, blue
- VX4 Driver side exterior mirror
- V17 Driver side mirror adjustment motor 2
- V121 Driver side fold-in mirror motor
- V149 Driver side mirror adjustment motor
- Z4 Heated exterior mirror on driver side

- 107 Earth connection, in external mirror wiring harness
- 267 Earth connection 2, in drive side door wiring harness
- R65 Positive connection (58), in driver door wiring harness
- Z1 Connection 1, in mirror adjustment/heating wiring harness
- * For models with electric folding exterior mirrors

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

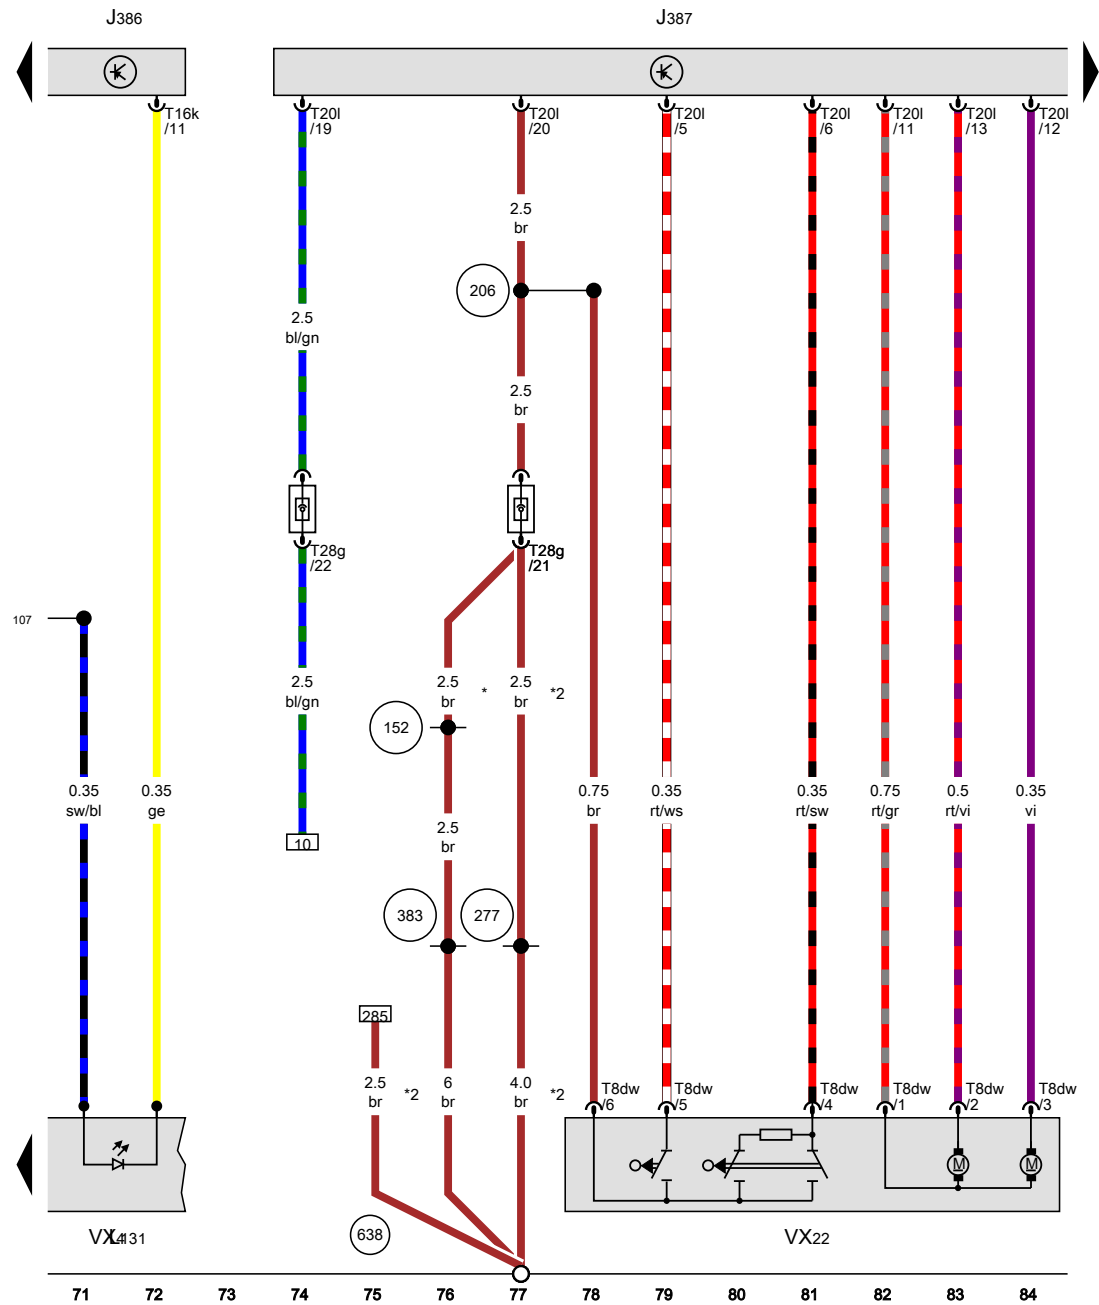


Driver door control unit, Front passenger door control unit,
Driver side exterior mirror, Front passenger door lock unit

- J386 Driver door control unit
- J387 Front passenger door control unit
- L131 Driver side turn signal repeater bulb
- T8dw 8-pin connector, black
- T16k 16-pin connector, black
- T20l 20-pin connector, black
- T28g 28-pin connector, black
- VX4 Driver side exterior mirror
- VX22 Front passenger door lock unit

- 107 Earth connection, in external mirror wiring harness
- 152 Earth connection 2, in front wiring harness
- 206 Earth connection, in front passenger door wiring harness
- 277 Earth connection 3, in interior wiring harness
- 383 Earth connection 18, in main wiring harness
- 638 Earth point, on right A-pillar
- * For left-hand drive models
- *2 For right-hand drive models


- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink



E107	Window regulator switch in front passenger door
J387	Front passenger door control unit
T3mo	3-pin connector, blue
T4hj	4-pin connector, black
T6cw	6-pin connector, black
T20l	20-pin connector, black
T28g	28-pin connector, black
T32i	32-pin connector, blue
V15	Right window regulator motor

01.2019

Front passenger door control unit, Passenger side exterior mirror

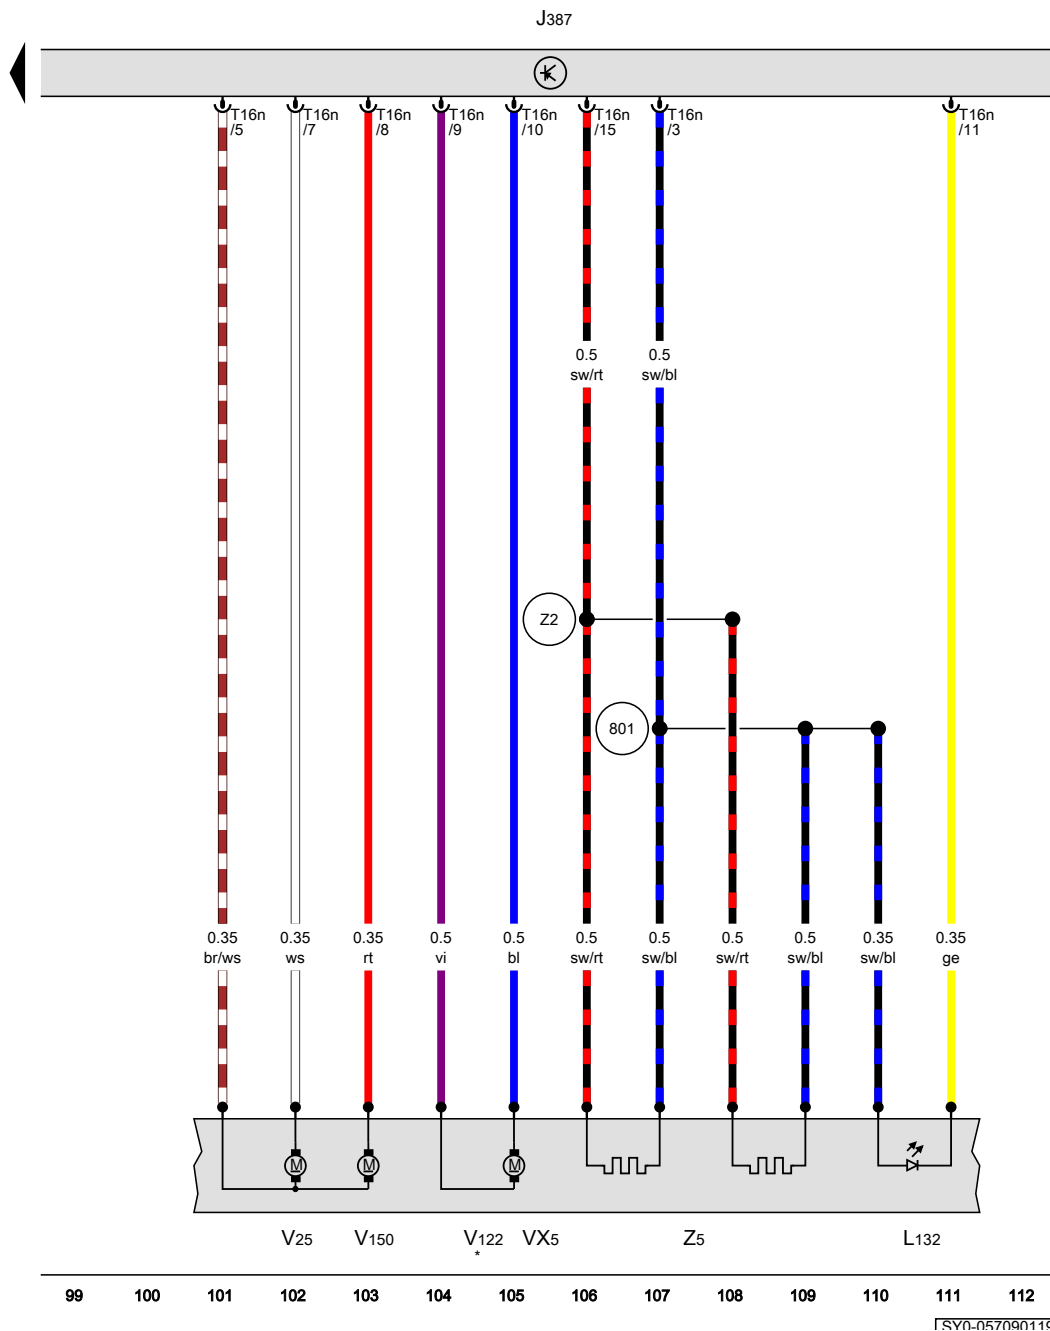

- J387 Front passenger door control unit
- L132 Front passenger side turn signal repeater bulb
- T16n 16-pin connector
- VX5 Passenger side exterior mirror
- V25 Front passenger side mirror adjustment motor 2
- V122 Front passenger side fold-in mirror motor
- V150 Front passenger side mirror adjustment motor
- Z5 Heated exterior mirror on passenger side
- 801 Earth connection 2, in external mirror wiring harness
- Z2 Connection 2, in mirror adjustment/heating wiring harness
- * For models with electric folding exterior mirrors

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

Contact strip in left sliding door, Onboard supply control unit,
Rear left door lock unit

F353 Contact strip in left sliding door
J519 Onboard supply control unit
T6bq 6-pin connector, black
T6co 6-pin connector, black
T8dp 8-pin connector, black
T73a 73-pin connector, black
T73c 73-pin connector, black
VX23 Rear left door lock unit

44 Earth point, lower part of left A-pillar

77 Earth point, lower part of left B-pillar

151 Earth connection 1, in front wiring harness


294 Earth connection 9, in interior wiring harness

* For models with left sliding door

*2 For models with double cab

*3 For left-hand drive models


*4 For right-hand drive models

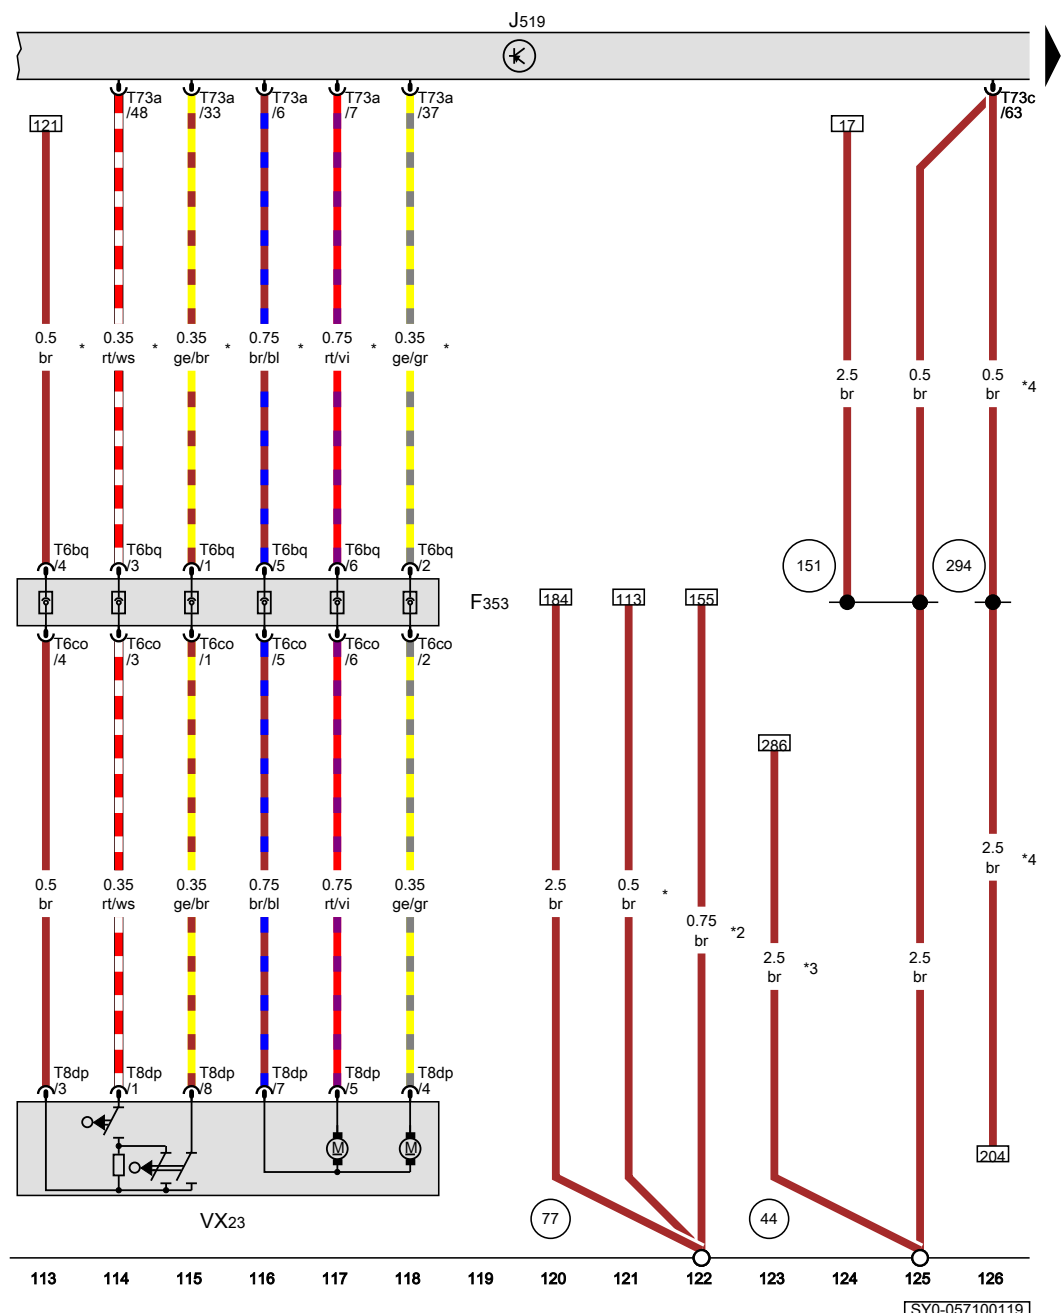


ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink

Contact strip in right sliding door, Onboard supply control unit, Rear right door lock unit

- F352 Contact strip in right sliding door
- J519 Onboard supply control unit
- T6bn 6-pin connector, black
- T6cp 6-pin connector, black
- T8dq 8-pin connector, black
- T73a 73-pin connector, black
- VX24 Rear right door lock unit
- * For models with right sliding door
- *2 For models with left and right sliding doors

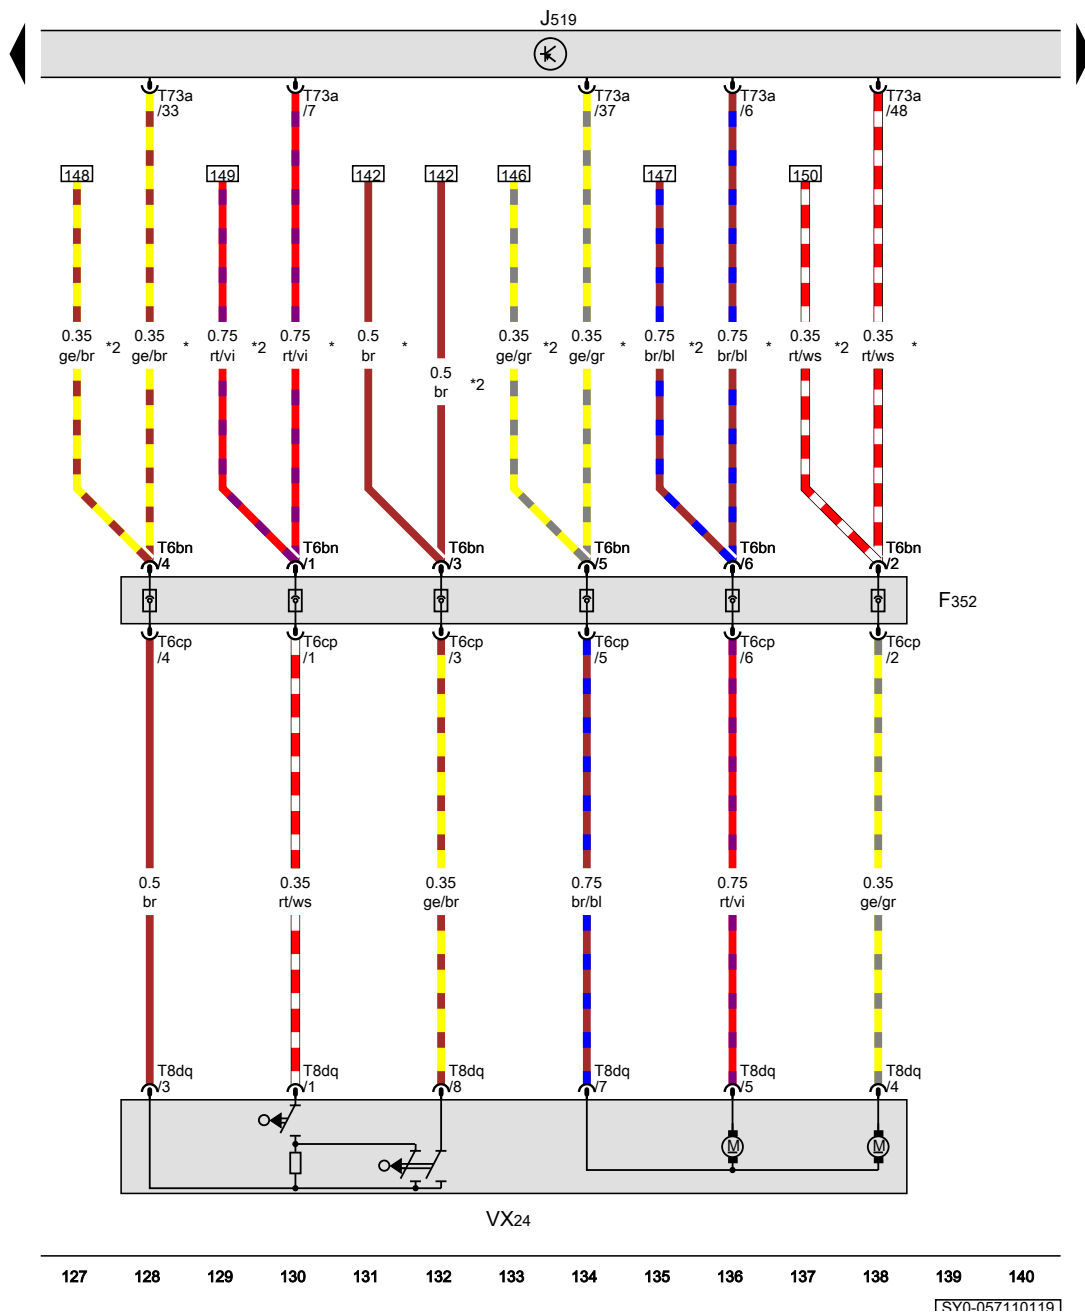

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

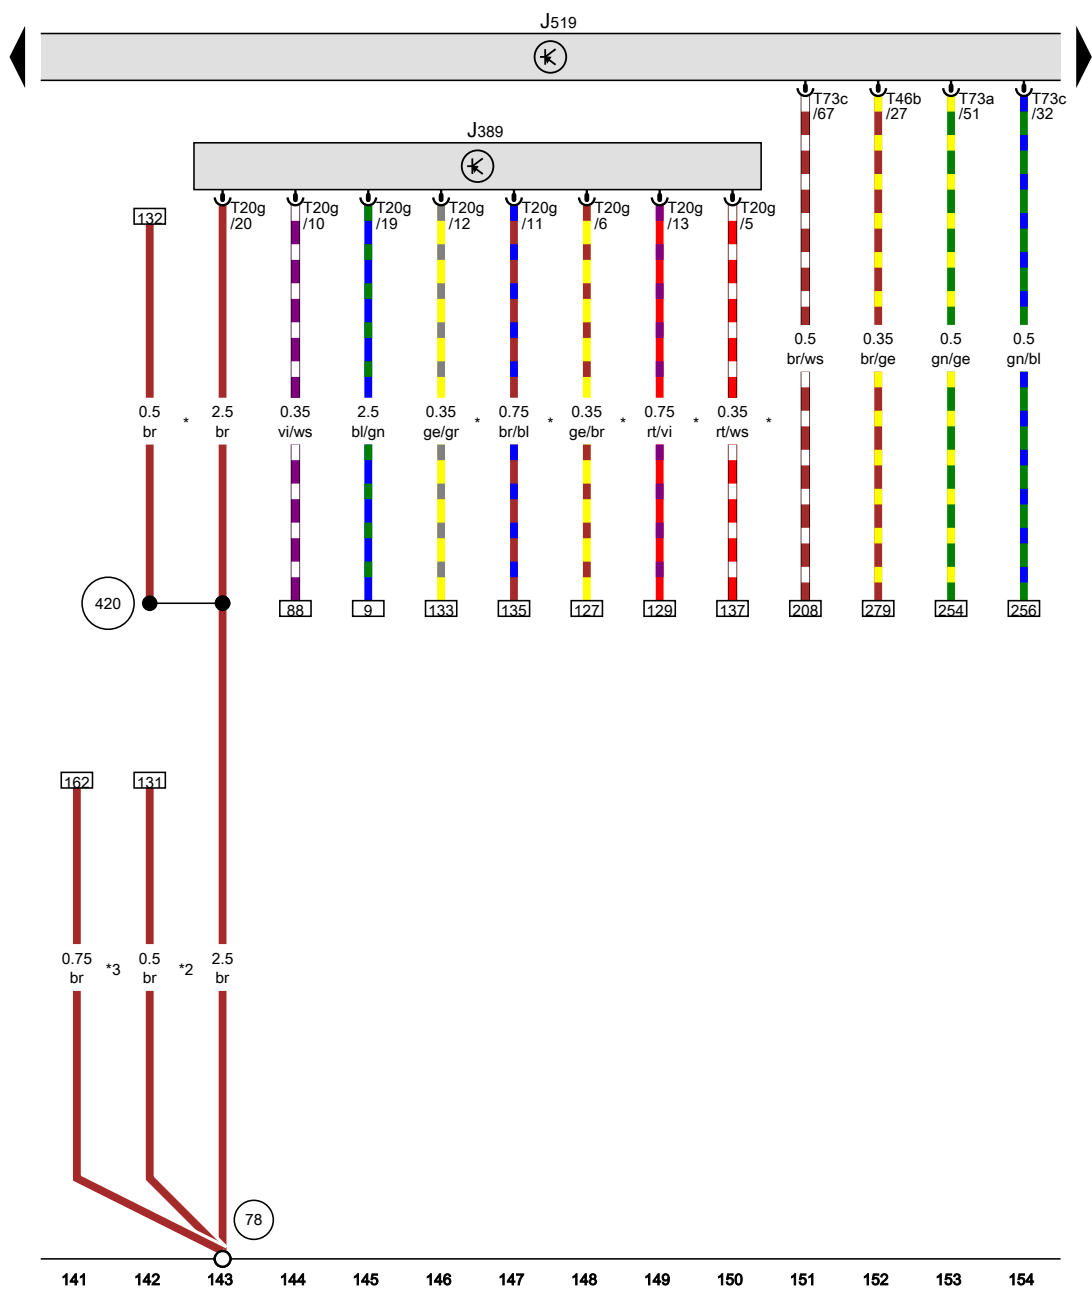

Rear right door control unit, Onboard supply control unit

J389 Rear right door control unit, behind lower section of right B-pillar trim

J519 Onboard supply control unit

T20g 20-pin connector, black

T46b 46-pin connector, black

T73a 73-pin connector, black

T73c 73-pin connector, black

78 Earth point, lower part of right B-pillar

420 Earth connection 1, in left sliding door wiring harness


* For models with left and right sliding doors


*2 For models with right sliding door

*3 For models with double cab

Onboard supply control unit, Rear left door lock unit, Rear right door lock unit

- J519 Onboard supply control unit
- T6bo 6-pin connector, black
- T6bp 6-pin connector, black
- T6cy 6-pin connector, black
- T8dy 8-pin connector, black
- T8dz 8-pin connector, black
- T73a 73-pin connector, black
- VX23 Rear left door lock unit
- VX24 Rear right door lock unit
- * For models with double cab

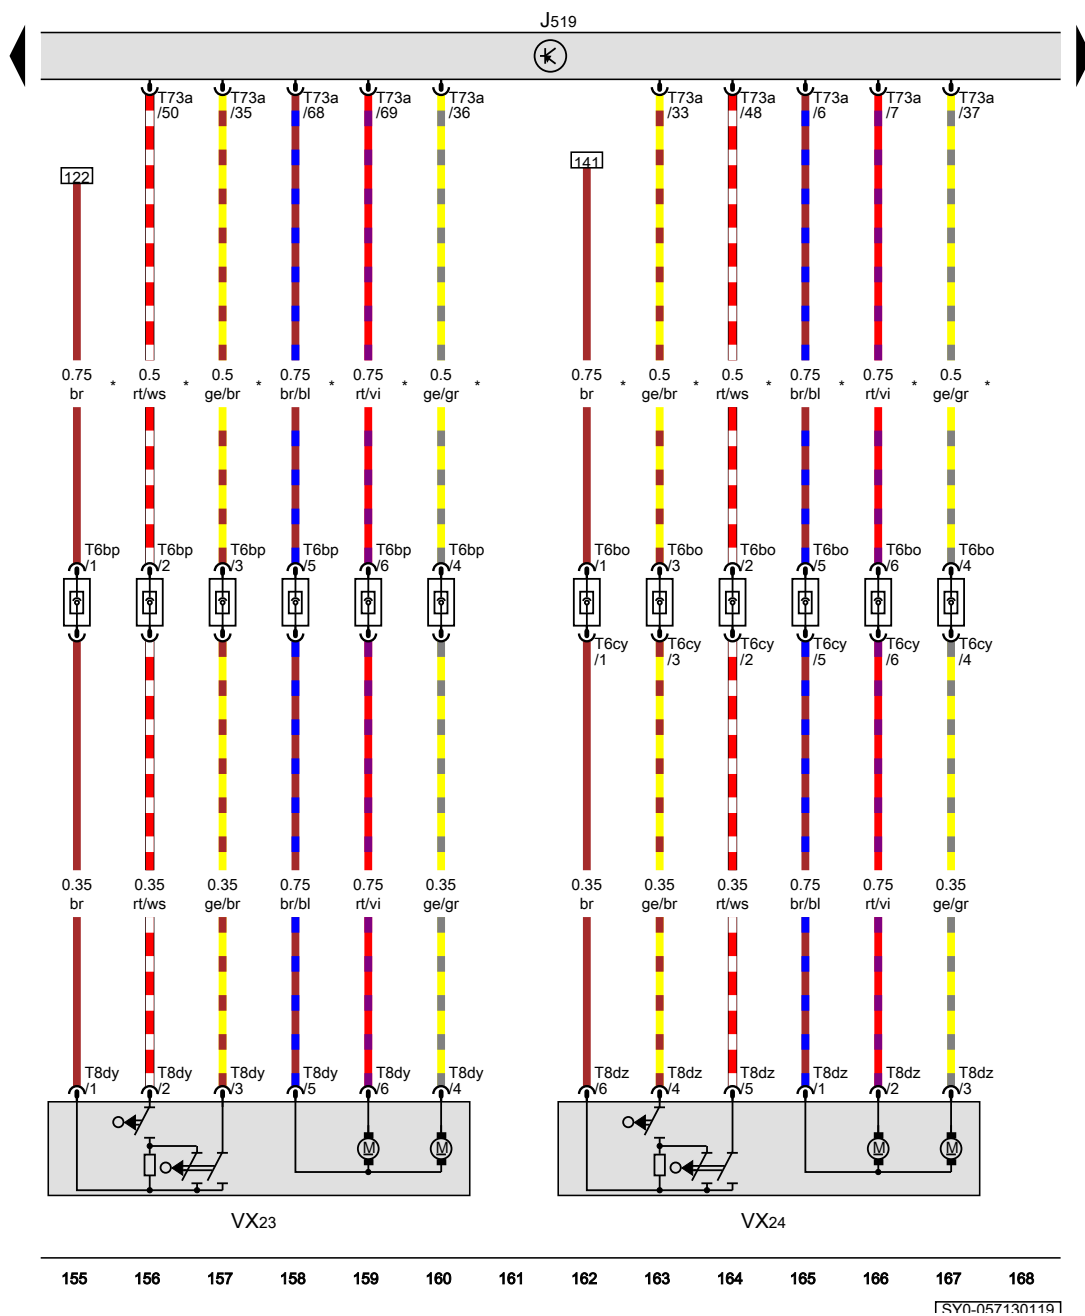

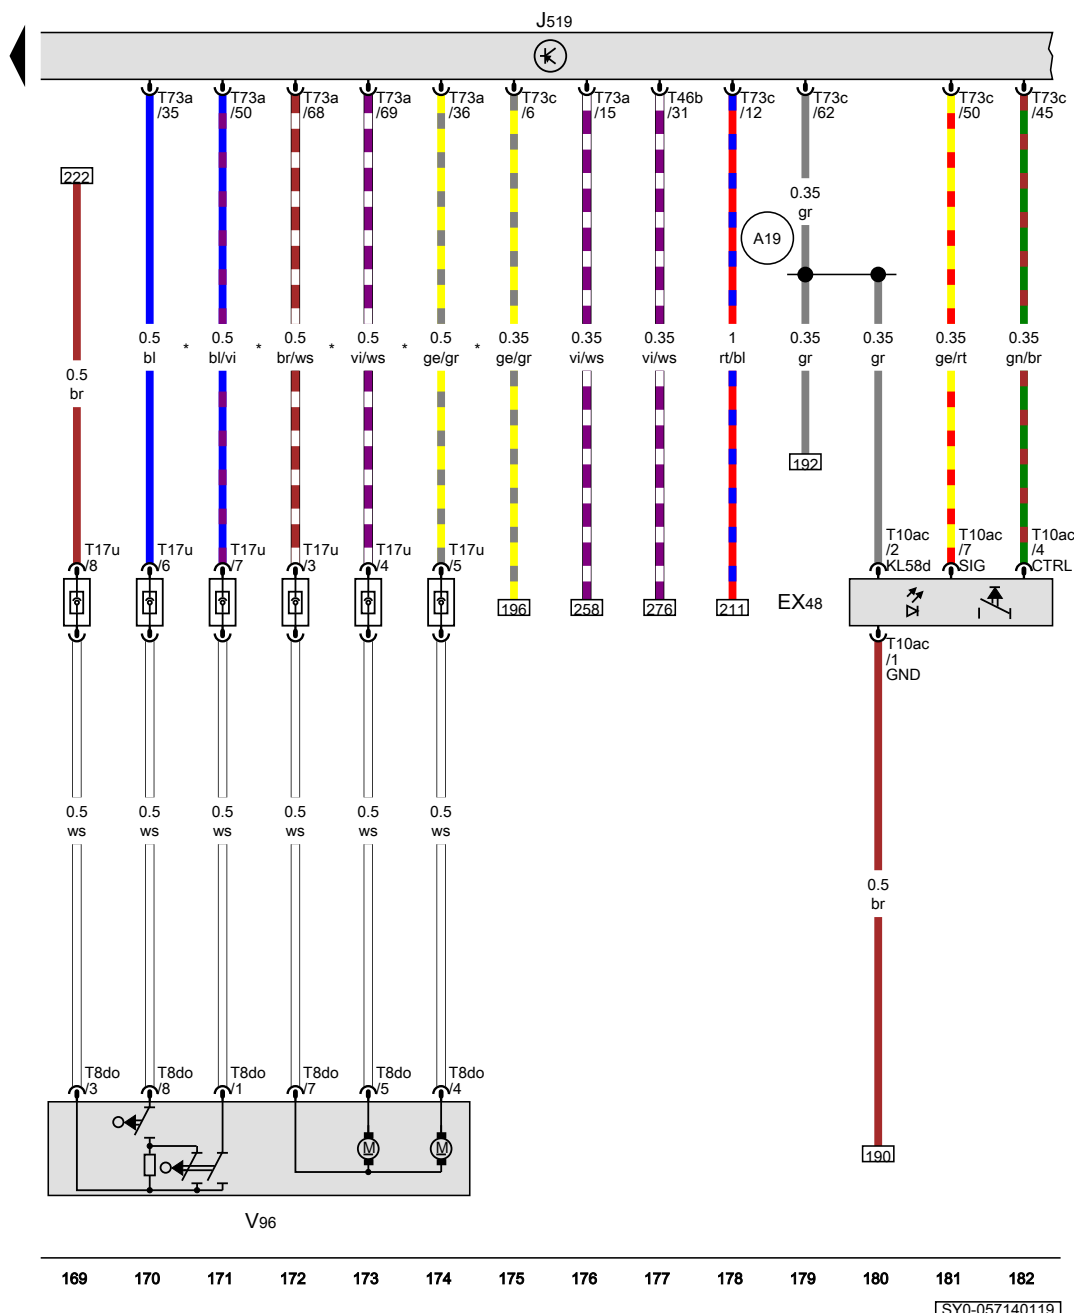


Centre switch module 3 in dash panel, Onboard supply control unit, Rear wing door central locking motor

- EX48 Centre switch module 3 in dash panel
- J519 Onboard supply control unit
- T8do 8-pin connector, black
- T10ac 10-pin connector, black
- T17u 17-pin connector, black
- T46b 46-pin connector, black
- T73a 73-pin connector, black
- T73c 73-pin connector, black
- V96 Rear wing door central locking motor
- A19 Connection (58d), in dash panel wiring harness
- * For models with wing doors

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink


Centre switch module 4 in dash panel, Interior light switch, Interior light relay

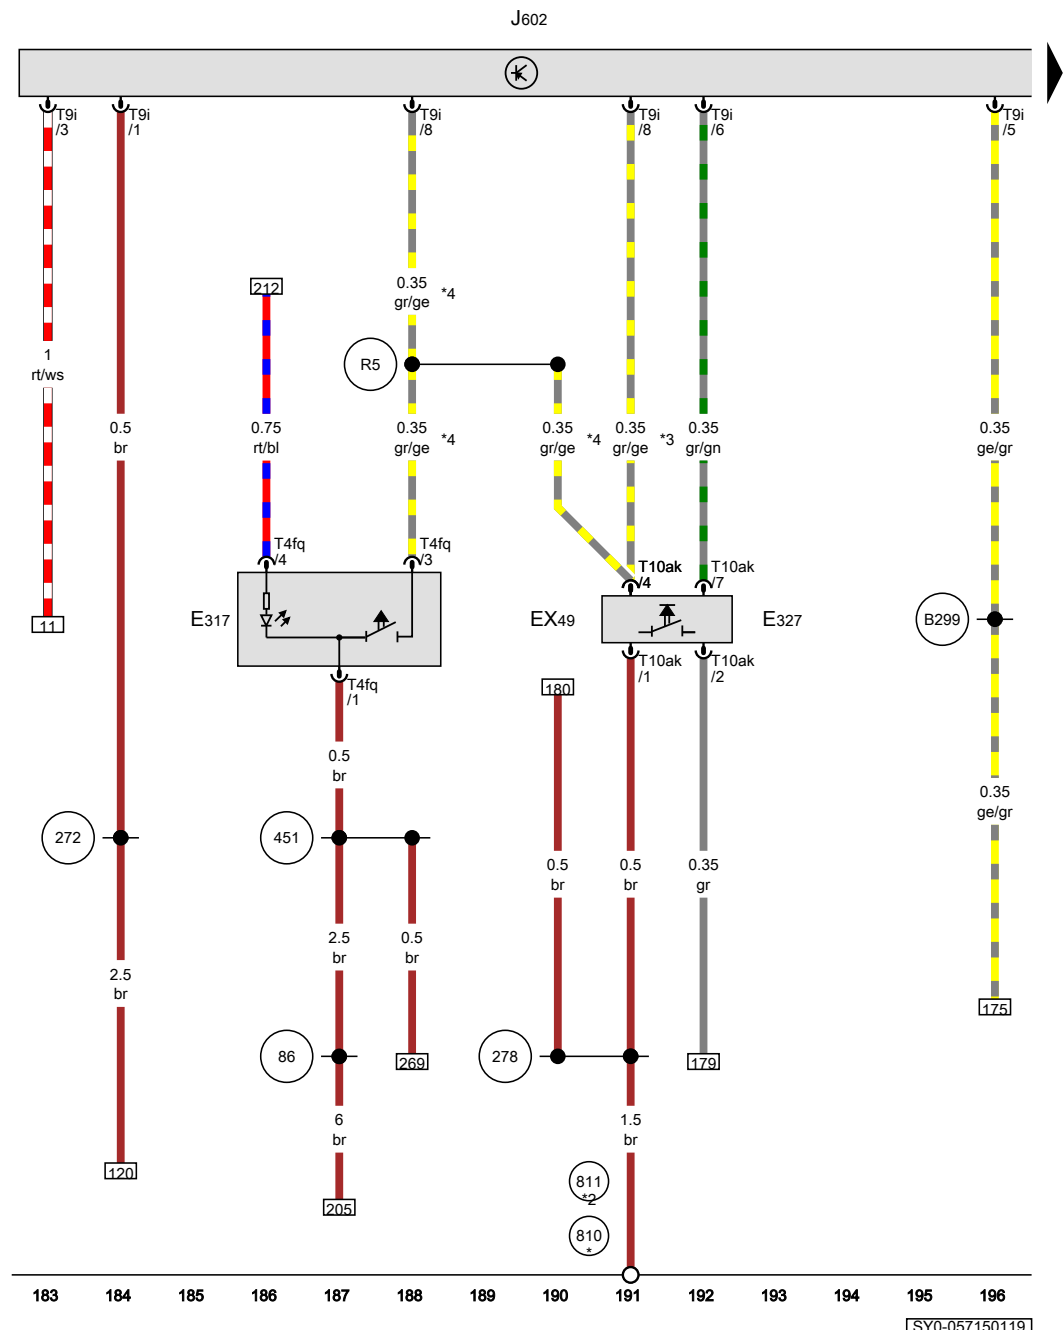

- EX49 Centre switch module 4 in dash panel
- E317 Interior light switch
- E327 Rear interior light button
- J602 Interior light relay
- T4fq 4-pin connector, black
- T9i 9-pin connector, grey
- T10ak 10-pin connector, black

- 86 Earth connection 1, in rear wiring harness
- 272 Earth connection 4, in front wiring harness
- 278 Earth connection 4, in interior wiring harness
- 451 Earth connection 1 in rear right side panel
- 810 Earth point on central tube for dash panel, centre left
- 811 Earth point on central tube for dash panel, centre right
- B299 Positive connection 3 (30), in main wiring harness
- R5 Connection 2, in interior light wiring harness
- * For left-hand drive models
- *2 For right-hand drive models
- *3 For models with no LED interior lights
- *4 For models with LED interior lights

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

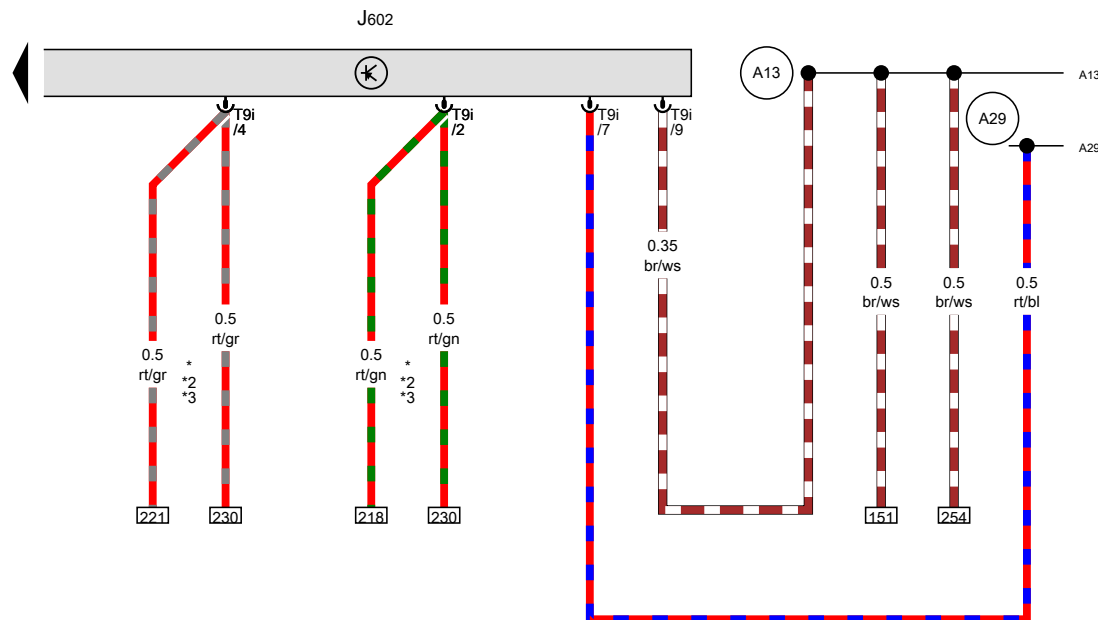

Interior light relay

J602 Interior light relay


T9i 9-pin connector, grey

667 Earth point, on rear left of roof


A13 Connection (door contact switch), in dash panel wiring harness

A29 Connection (interior light), in dash panel wiring harness

- * For models with no left sliding door and rear loudspeakers
- *2 For models with no right sliding door and rear loudspeakers
- *3 For models with entry lights
- *4 For right-hand drive models

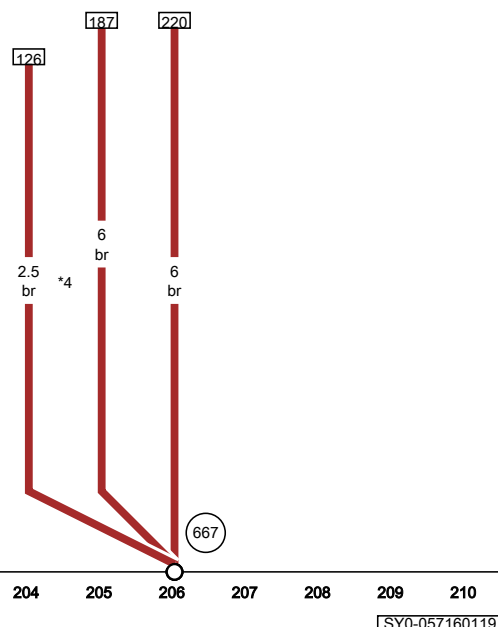

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

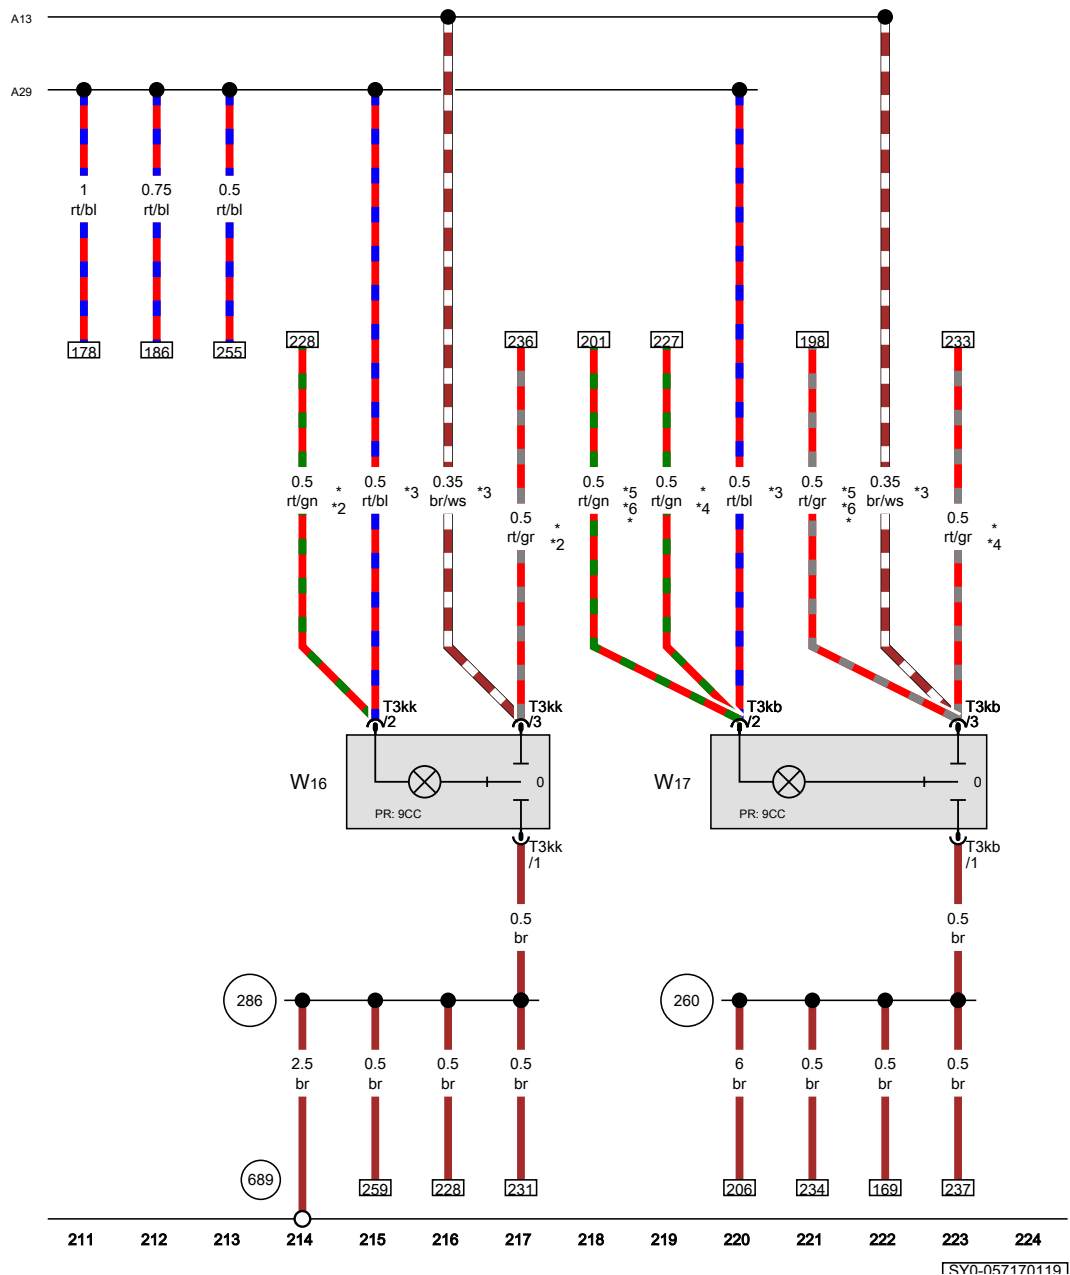

Left interior light, Right interior light

T3kb 3-pin connector, black

T3kk 3-pin connector, black

W16 Left interior light

W17 Right interior light

260 Earth connection, in tail light cluster wiring harness

286 Earth connection 8, in interior wiring harness

689 Earth point, at front, central in roof

A13 Connection (door contact switch), in dash panel wiring harness

A29 Connection (interior light), in dash panel wiring harness

* For models with entry lights

*2 For models with left sliding door

*3 For models with no entry lights

*4 For models with right sliding door

*5 For models with no left sliding door and rear loudspeakers

*6 For models with no right sliding door and rear loudspeakers


Left interior light, Right interior light, Rear left interior light, Rear right interior light

T3km 3-pin connector, black
 T3kn 3-pin connector, black
 T3ko 3-pin connector, black
 T3kp 3-pin connector, black
 W16 Left interior light
 W17 Right interior light
 W47 Rear left interior light
 W48 Rear right interior light


A49 Connection 1, in dash panel wiring harness

B298 Positive connection 2 (30), in main wiring harness

* For models with entry lights
 *2 For models with left sliding door
 *3 For models with right sliding door

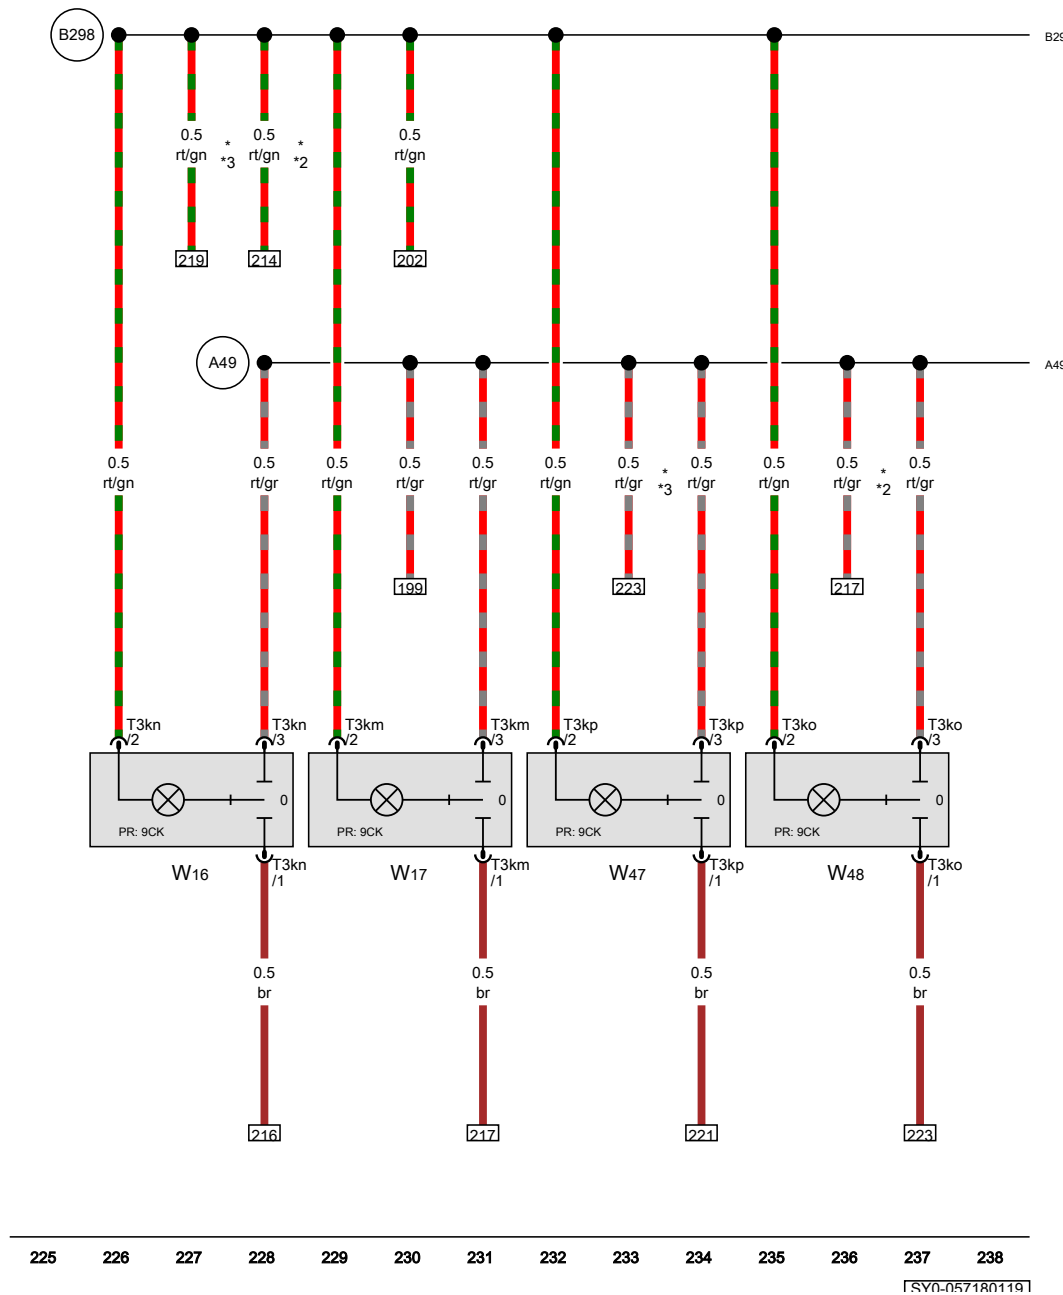

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

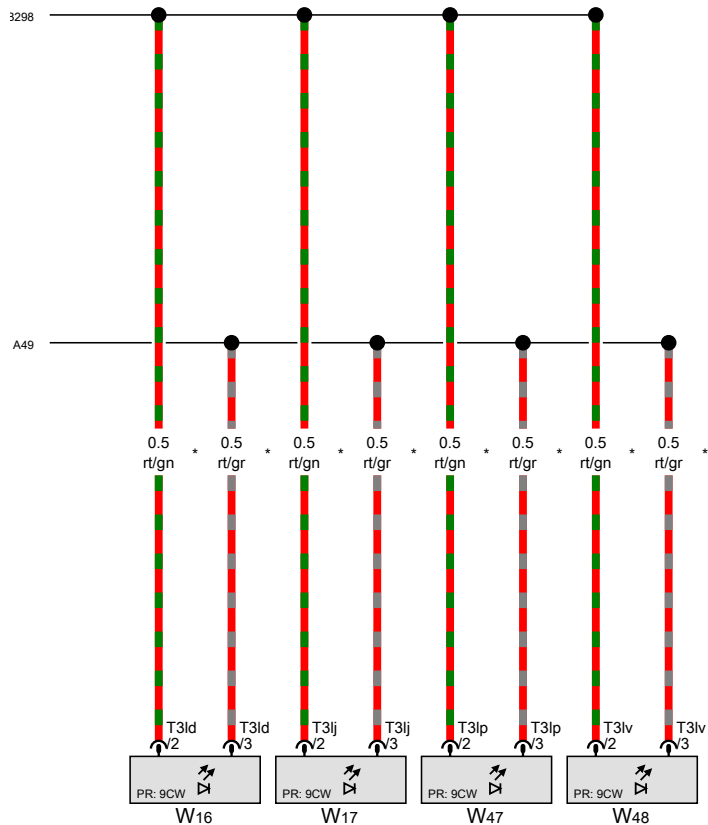

Left interior light, Right interior light, Rear left interior light, Rear right interior light

- T3ld 3-pin connector, black
- T3lj 3-pin connector, black
- T3lp 3-pin connector, black
- T3lv 3-pin connector, black
- W16 Left interior light
- W17 Right interior light
- W47 Rear left interior light
- W48 Rear right interior light

A49 Connection 1, in dash panel wiring harness

B298 Positive connection 2 (30), in main wiring harness

* For models with LED interior lights

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

Interior monitoring switch, Interior monitoring sensor


- E183 Interior monitoring switch
- G170 Left ultrasonic sensor for anti-theft alarm system
- G171 Right ultrasonic sensor for anti-theft alarm system
- G209 Anti-theft alarm ultrasonic sensor
- G273 Interior monitoring sensor
- T4el 4-pin connector, black
- T4en 4-pin connector, black

B681 Positive connection 7 (30), in interior wiring harness

* For models with anti-theft alarm system and front and rear interior monitor

*2 Sheathed cable, black


*3 Sheathed cable, grey

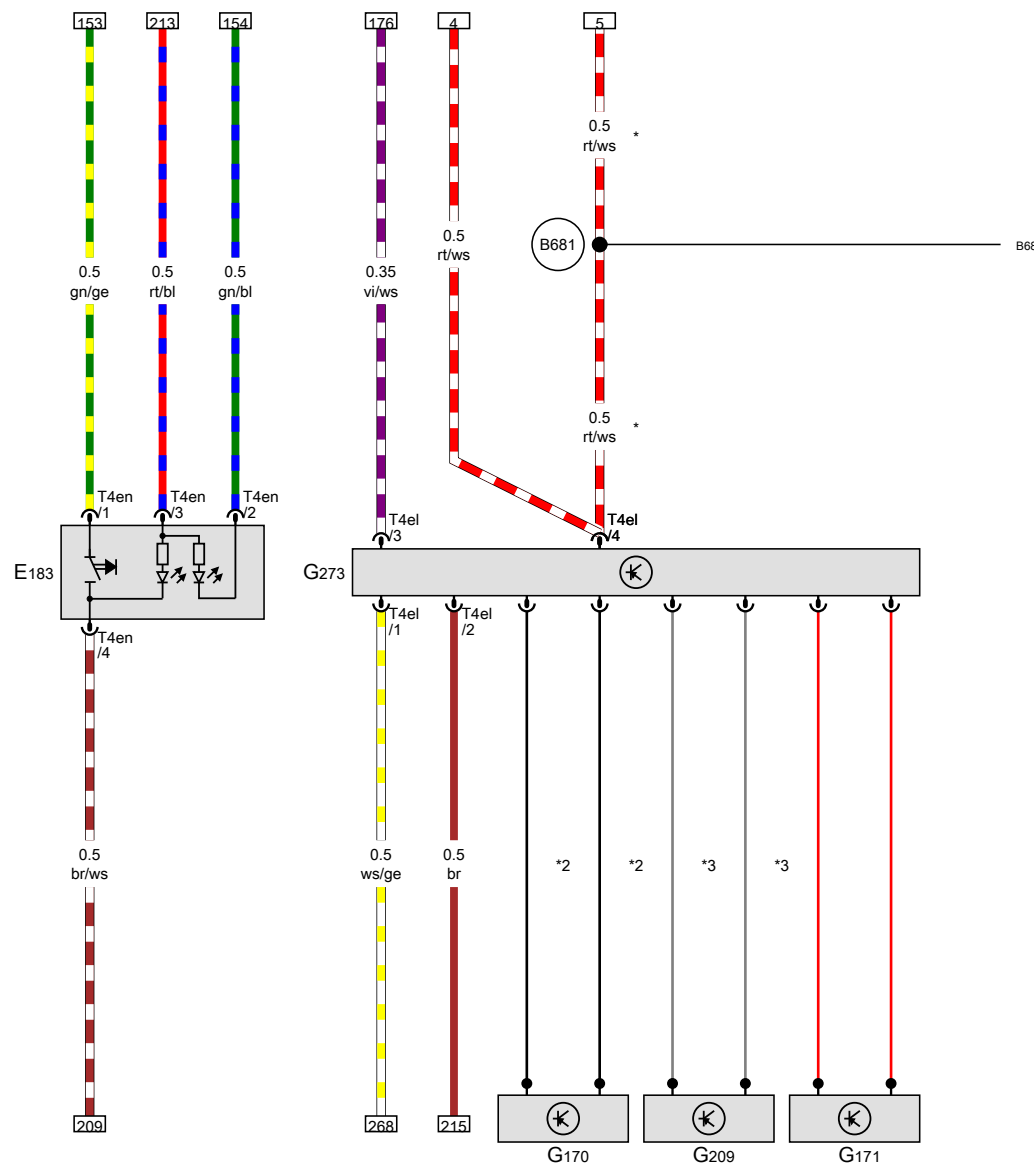

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

253 254 255 256 257 258 259 260 261 262 263 264 265 266

[SYN-057200119]

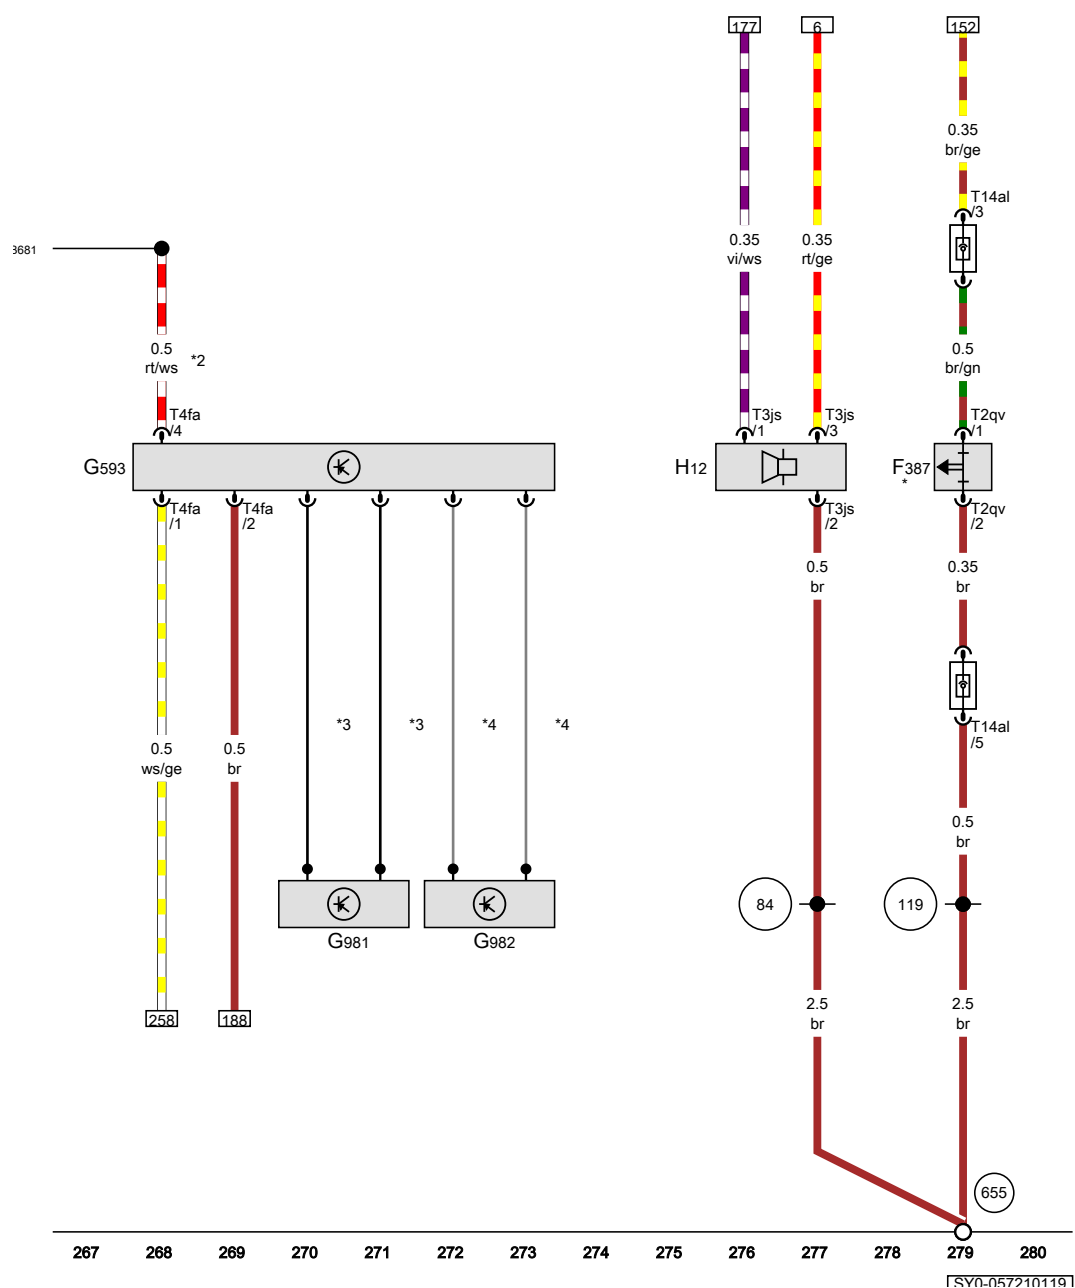

Bonnet contact switch, Interior monitoring sensor 3, Alarm horn

- F387 Bonnet contact switch
- G593 Interior monitoring sensor 3
- G981 Left ultrasonic sensor for passenger compartment monitoring system, rear
- G982 Right ultrasonic sensor for passenger compartment monitoring system, rear
- H12 Alarm horn
- T2qv 2-pin connector, black
- T3js 3-pin connector, black
- T4fa 4-pin connector, black
- T14al 14-pin connector, grey

- 84 Earth connection, engine block, in front right wiring harness
- 119 Earth connection 1, in headlight wiring harness
- 655 Earth point, on left headlight
- B681 Positive connection 7 (30), in interior wiring harness


- * Pre-wired component
- *2 For models with anti-theft alarm system and front and rear interior monitor
- *3 Sheathed cable, black
- *4 Sheathed cable, grey

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

Marker lights and tail light clusters


From May 2017

Left tail light cluster, Left end-outline marker lamp bulb, Elevated side light, front left

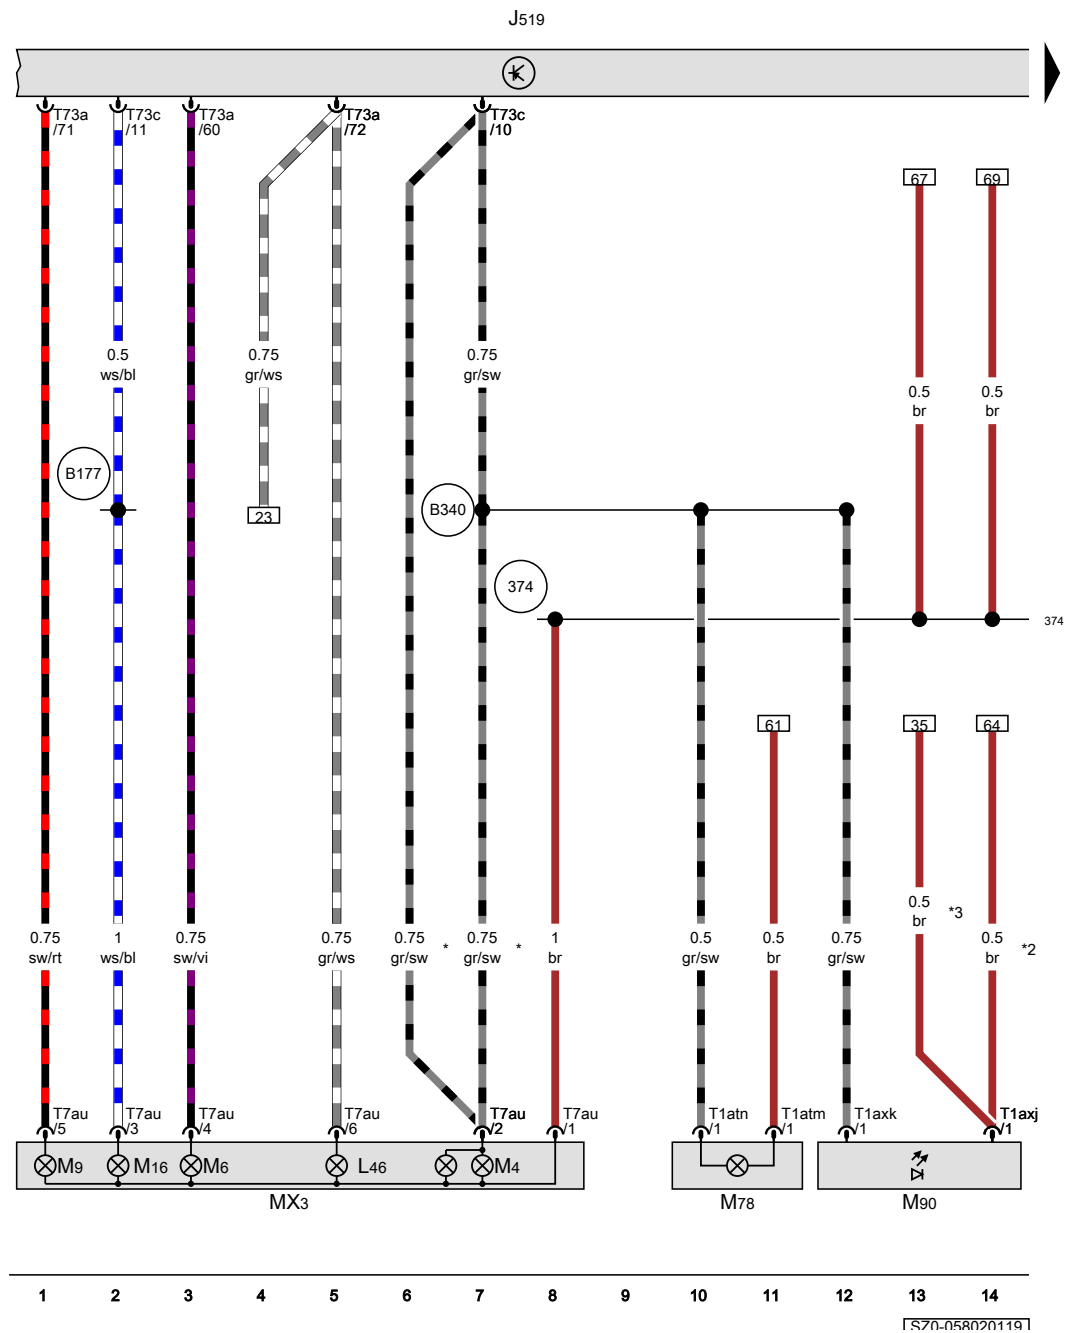

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

- J519 Onboard supply control unit
- L46 Rear left fog light bulb
- MX3 Left tail light cluster
- M4 Left tail light bulb
- M6 Rear left turn signal bulb
- M9 Left brake light bulb
- M16 Left reversing light bulb
- M78 Left end-outline marker lamp bulb
- M90 Elevated side light, front left
- T1atm 1-pin connector
- T1atn 1-pin connector
- T1axj 1-pin connector
- T1axk 1-pin connector
- T7au 7-pin connector, black
- T73a 73-pin connector, black
- T73c 73-pin connector, black
- 374 Earth connection 9, in main wiring harness
- B177 Connection (61), in interior wiring harness
- B340 Connection 1 (58d), in main wiring harness
- * According to equipment
- *2 For left-hand drive models
- *3 For right-hand drive models

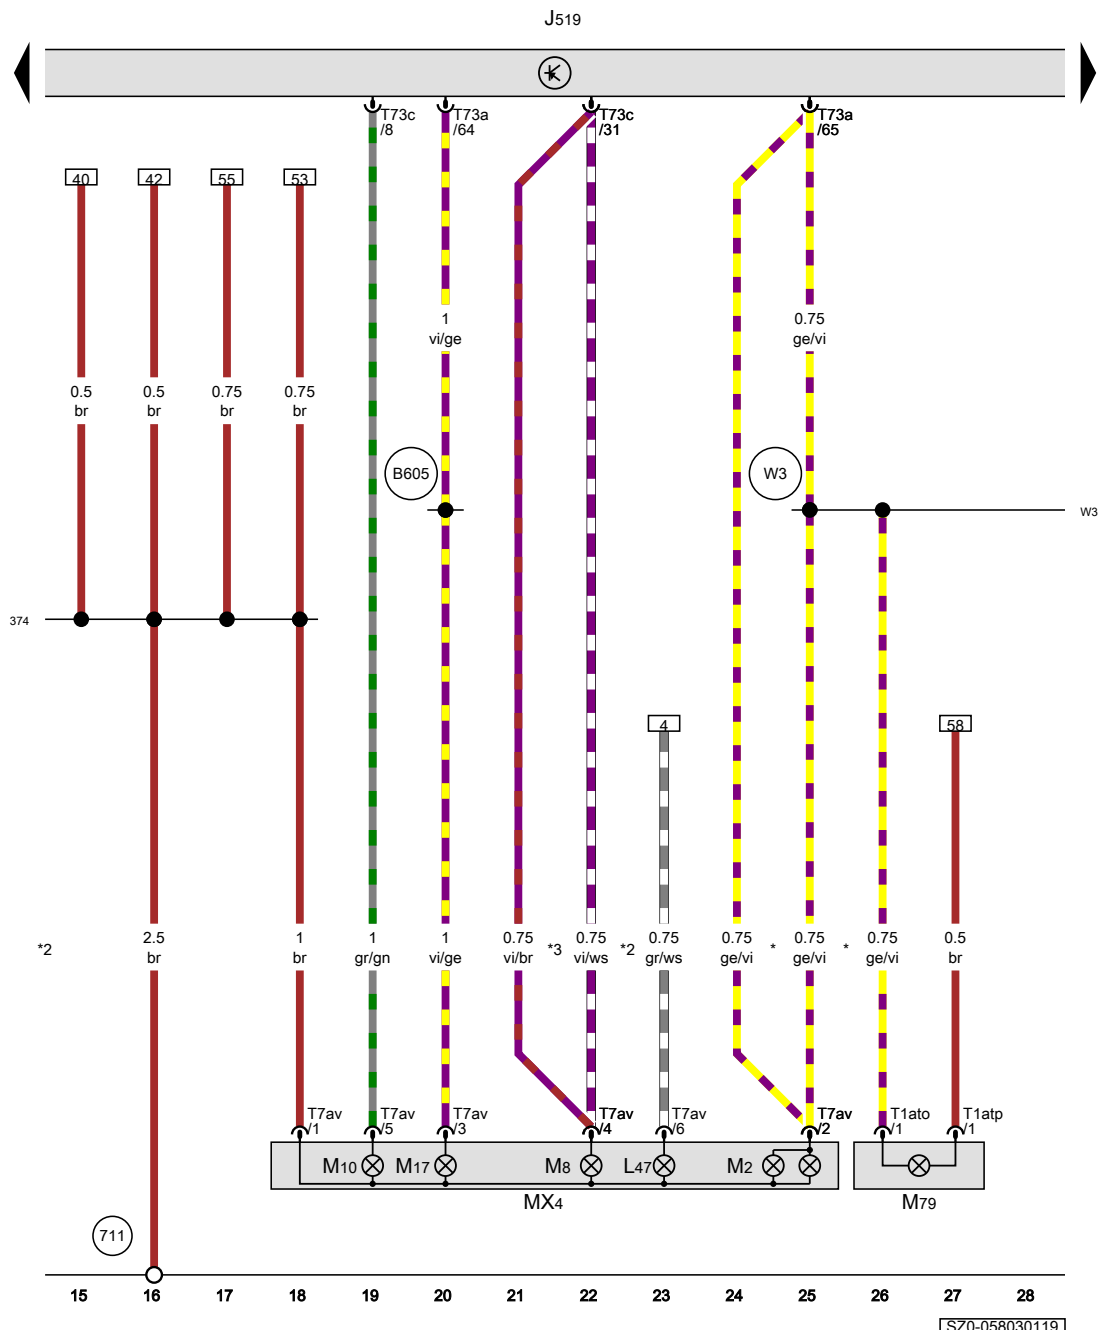


Right tail light cluster, Right end-outline marker lamp bulb

- J519 Onboard supply control unit
- L47 Rear right fog light bulb
- M2 Right tail light bulb
- MX4 Right tail light cluster
- M8 Rear right turn signal bulb
- M10 Right brake light bulb
- M17 Right reversing light bulb
- M79 Right end-outline marker lamp bulb
- T1ato 1-pin connector
- T1atp 1-pin connector
- T7av 7-pin connector, black
- T73a 73-pin connector, black
- T73c 73-pin connector, black

- 374 Earth connection 9, in main wiring harness
- 711 Earth point 3 on rear left longitudinal member
- B605 Connection 1, in interior wiring harness
- W3 Connection in rear wiring harness
- * According to equipment
- *2 Up to November 2017
- *3 From November 2017

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

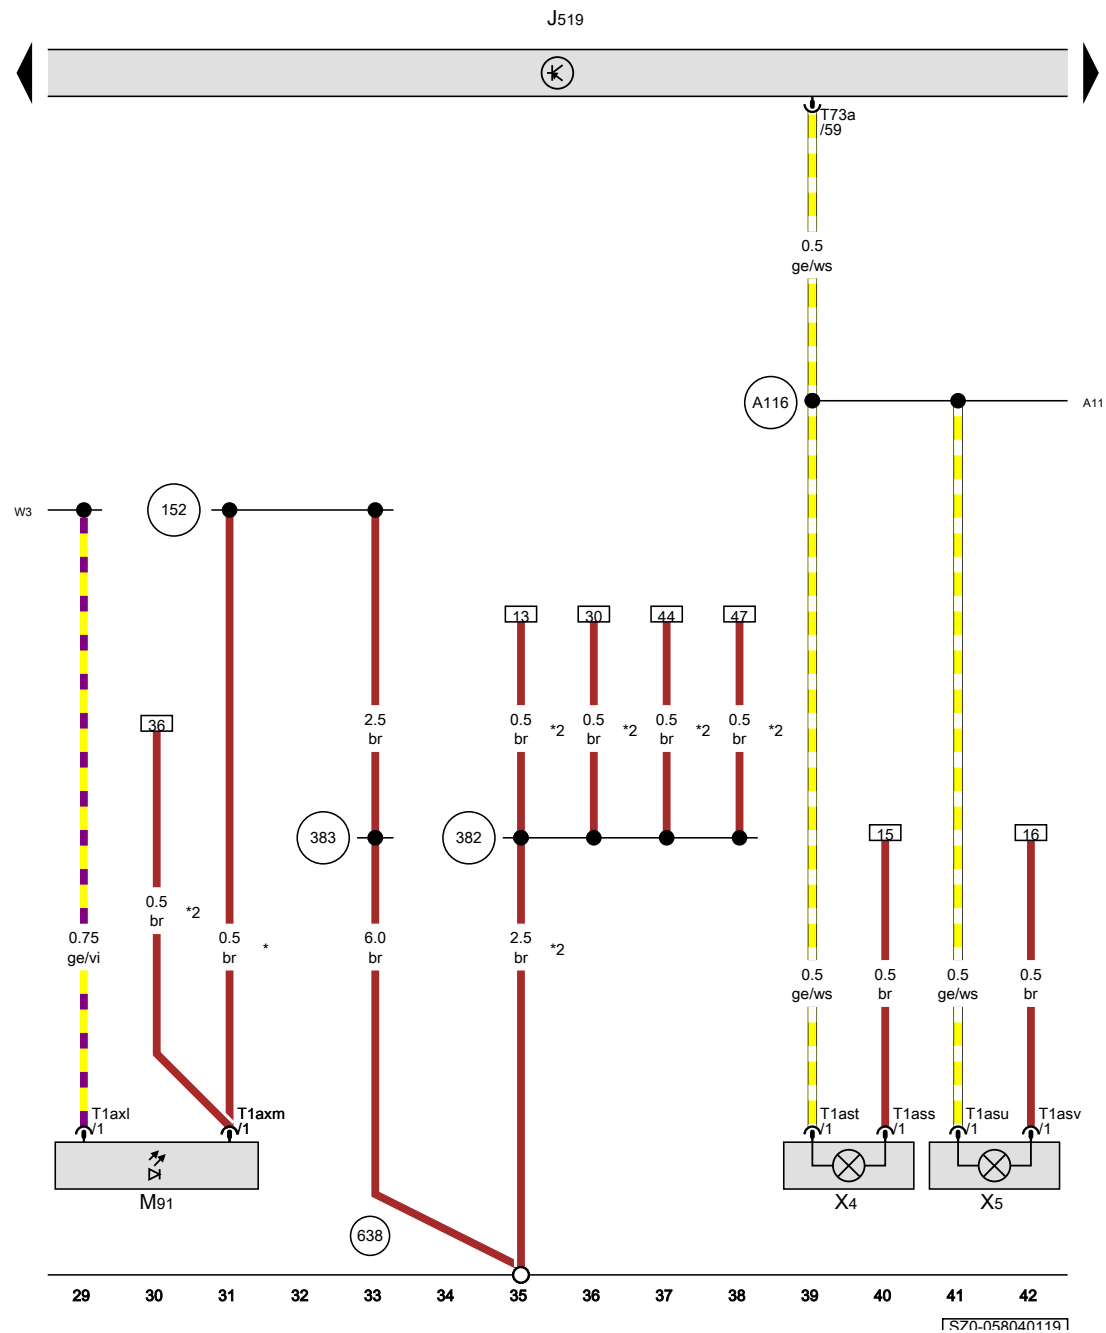


Elevated side light, front right, Left number plate light, Right number plate light

- J519 Onboard supply control unit
- M91 Elevated side light, front right
- T1ass 1-pin connector
- T1ast 1-pin connector
- T1asu 1-pin connector
- T1asv 1-pin connector
- T1axl 1-pin connector
- T1axm 1-pin connector
- T73a 73-pin connector, black
- X4 Left number plate light
- X5 Right number plate light

- 152 Earth connection 2, in front wiring harness
- 382 Earth connection 17, in main wiring harness
- 383 Earth connection 18, in main wiring harness
- 638 Earth point, on right A-pillar
- A116 Connection 2 (58d), in dash panel wiring harness
- W3 Connection in rear wiring harness

- * For left-hand drive models
- *2 For right-hand drive models

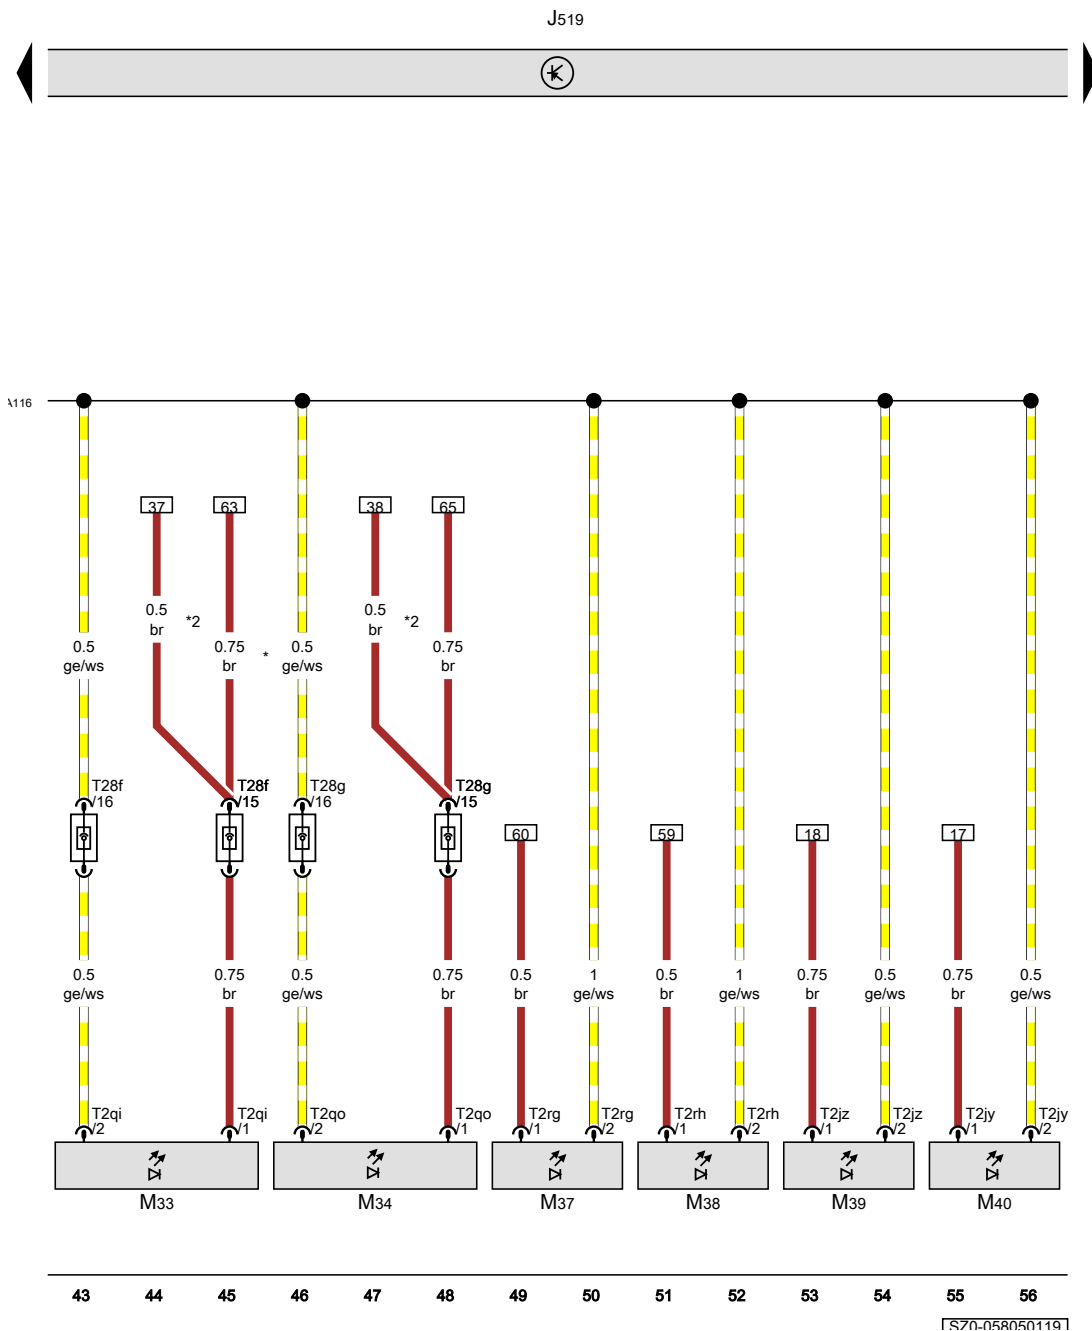


Front left side marker bulb, Front right side marker bulb,
Rear left side marker bulb, Rear right side marker bulb,
Centre left side marker bulb, Centre right side marker bulb

- J519 Onboard supply control unit
- M33 Front left side marker bulb
- M34 Front right side marker bulb
- M37 Rear left side marker bulb
- M38 Rear right side marker bulb
- M39 Centre left side marker bulb
- M40 Centre right side marker bulb
- T2jy 2-pin connector, black
- T2jz 2-pin connector, black
- T2qi 2-pin connector, black
- T2qo 2-pin connector, black
- T2rg 2-pin connector, black
- T2rh 2-pin connector, black
- T28f 28-pin connector, black
- T28g 28-pin connector, black

A116 Connection 2 (58d), in dash panel wiring harness

- * For left-hand drive models
- *2 For right-hand drive models

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink

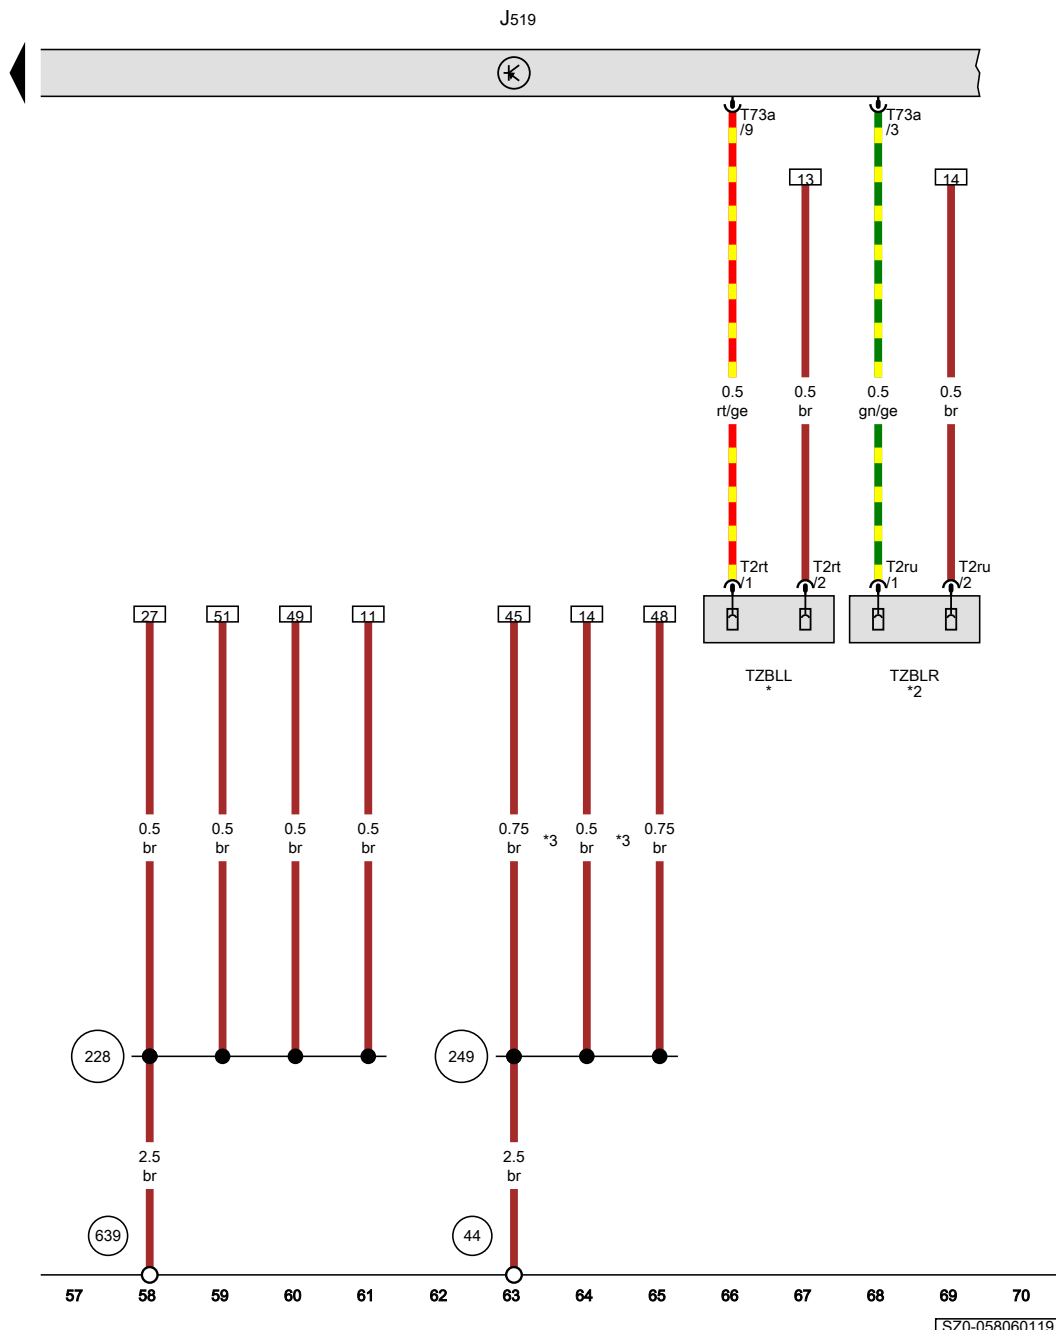

Coupling point for additional turn signal, left-side, Coupling point for additional turn signal, right-side

- J519 Onboard supply control unit
- T2rt 2-pin connector, black
- T2ru 2-pin connector
- T73a 73-pin connector, black
- TZBLL Coupling point for additional turn signal, left-side
- TZBLR Coupling point for additional turn signal, right-side

- 44 Earth point, lower part of left A-pillar
- 228 Connection, in harness
- 249 Earth connection 2, in interior wiring harness
- 639 Earth point, left A-pillar


- * Connection 1 for additional turn signal
- *2 Connection 2 for additional turn signal
- *3 For left-hand drive models

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

Preparation for reversing camera system , (9CP),(KA5)

From May 2017

Onboard supply control unit, Control unit 1 for information electronics, Fuse holder B, Fuse 12 on fuse holder B

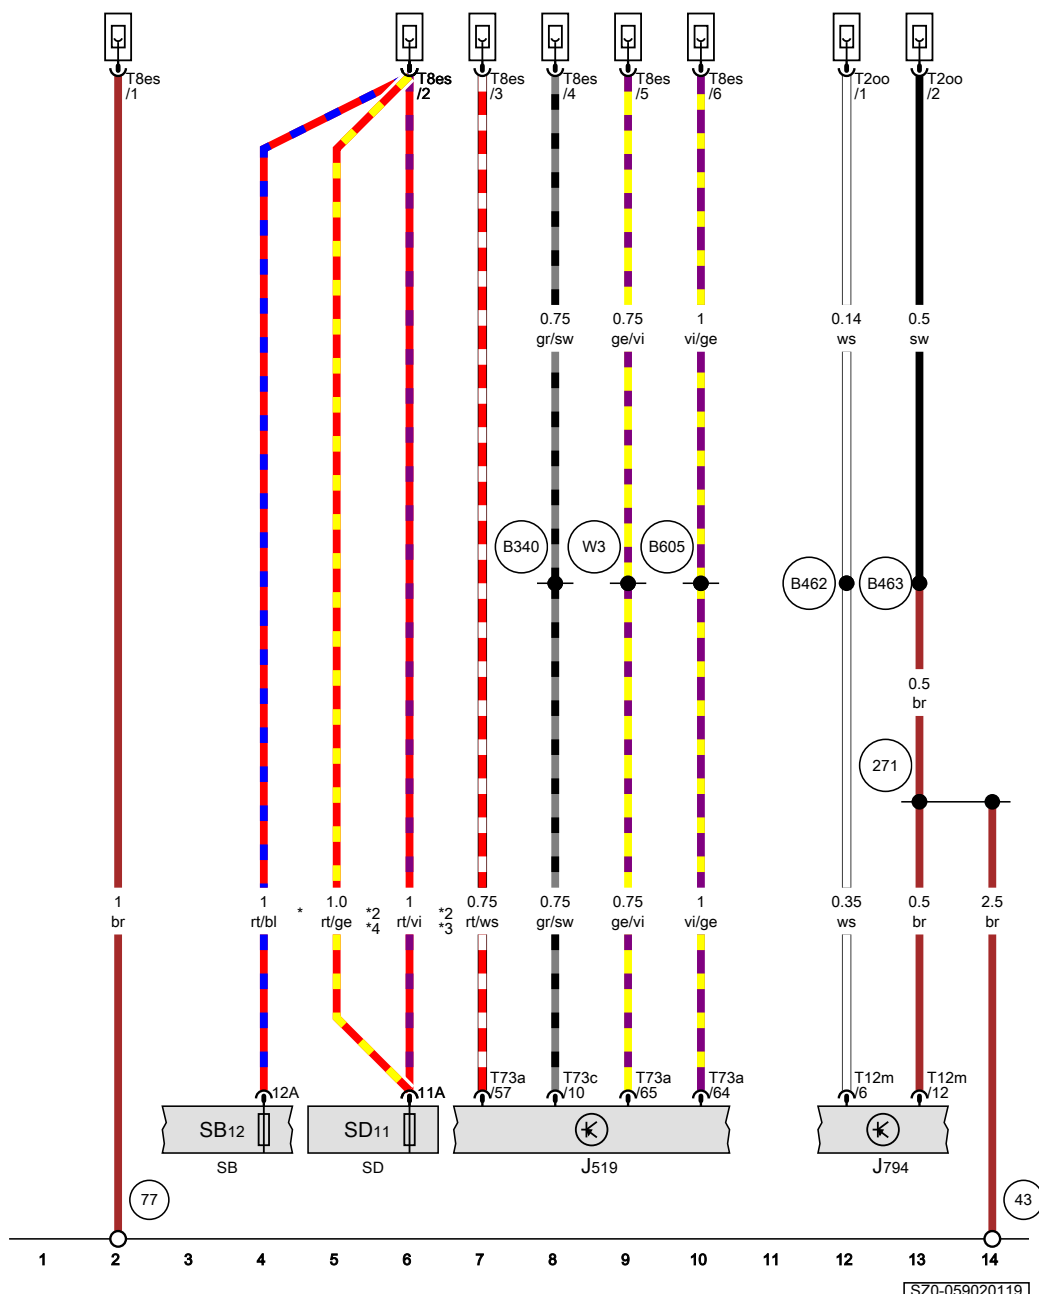

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink

- J519 Onboard supply control unit
- J794 Control unit 1 for information electronics
- SB Fuse holder B
- SD Fuse holder D
- SD11 Fuse 11 on fuse holder D
- SB12 Fuse 12 on fuse holder B
- T200 2-pin connector, grey, on coupling point for roof, on left B-pillar
- T8es 8-pin connector, black
- T12m 12-pin connector, blue
- T73a 73-pin connector, black
- T73c 73-pin connector, black

- 43 Earth point, lower part of right A-pillar
- 77 Earth point, lower part of left B-pillar
- 271 Earth connection 3, in front wiring harness
- B340 Connection 1 (58d), in main wiring harness
- B462 Connection 1 (video), in main wiring harness
- B463 Connection 2 (video), in main wiring harness
- B605 Connection 1, in interior wiring harness
- W3 Connection in rear wiring harness


- * For models with no second battery
- *2 For models with second battery
- *3 Up to November 2017
- *4 From November 2017


Programmable special functions , (IS1),(IS2),(IS3),(IS4),(IS5),(IS6)

From May 2017

Special vehicle control unit, Fuse holder B, Fuse holder D

- J608 Special vehicle control unit
 SB Fuse holder B
 SB8 Fuse 8 on fuse holder B
 SB33 Fuse 33 on fuse holder B
 SB42 Fuse 42 on fuse holder B
 SB43 Fuse 43 on fuse holder B
 SB49 Fuse 49 on fuse holder B
 SB51 Fuse 51 on fuse holder B
 SD Fuse holder D
 SD1 Fuse 1 on fuse holder D
 SD3 Fuse 3 on fuse holder D
 T6cb 6-pin connector, blue
 * For models with no second battery
 *2 For models with second battery
 *3 For models with no air conditioning system
 *4 For models with telematics
 *5 For models with air conditioning system

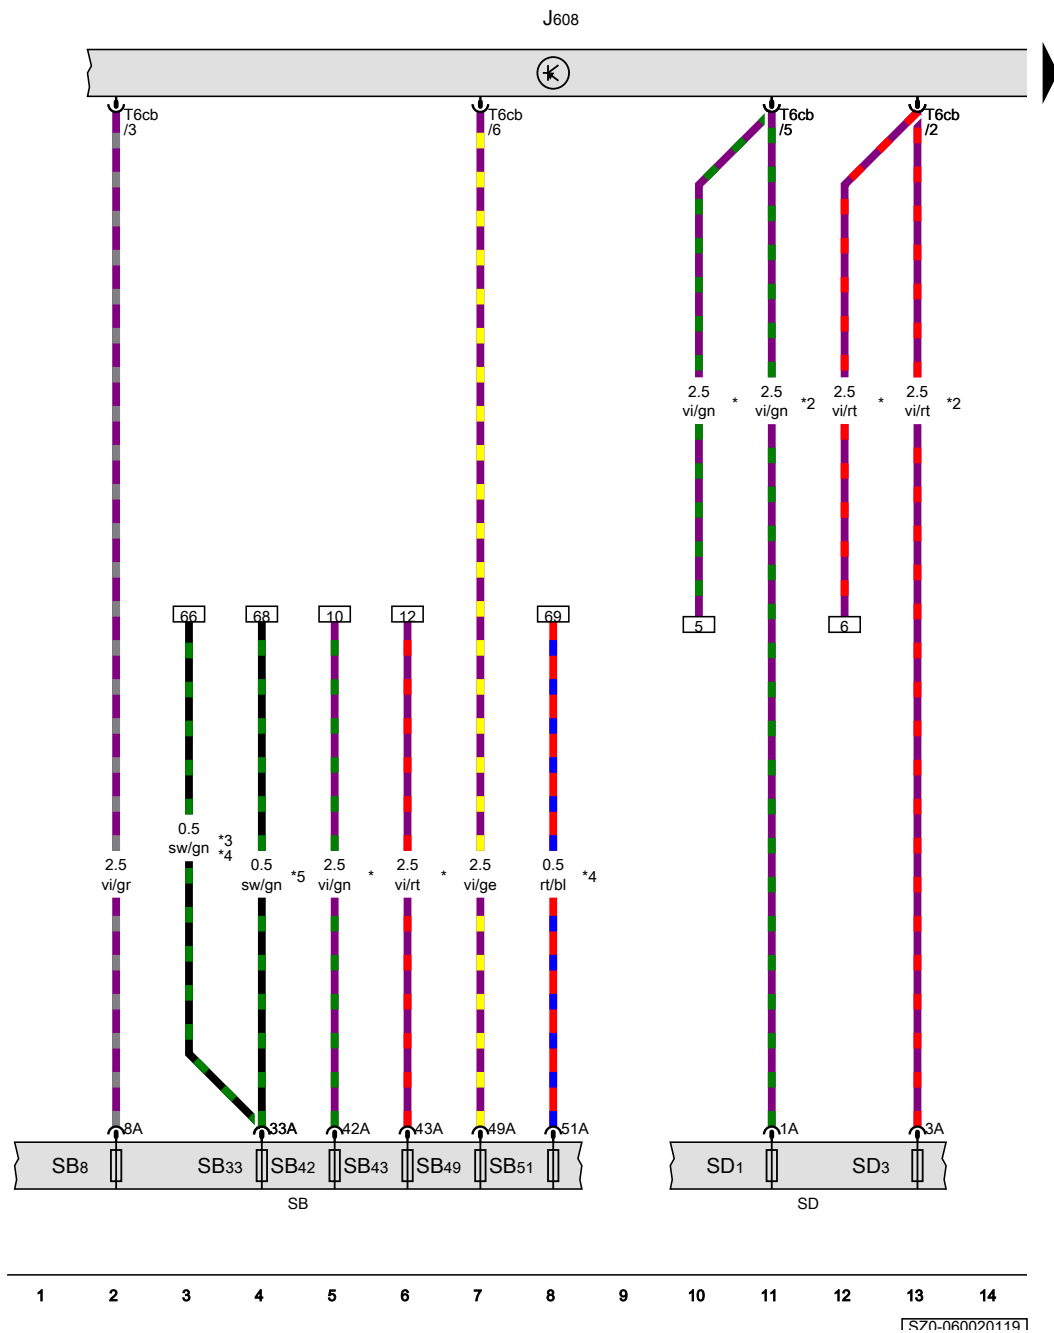

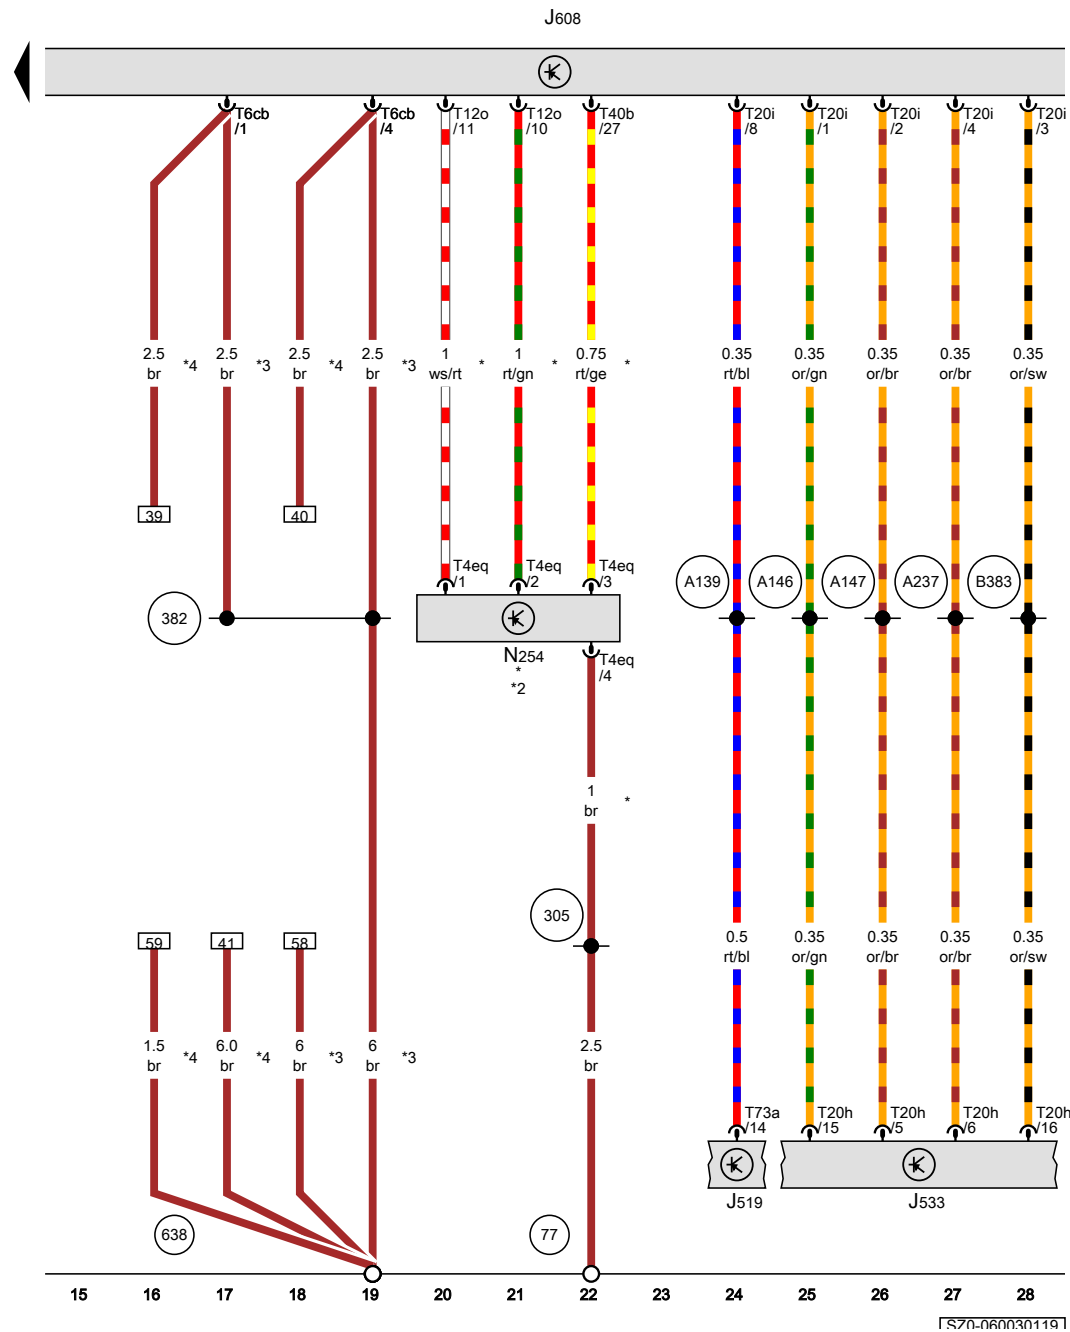


Special vehicle control unit, Power take-off valve

- J519 Onboard supply control unit
- J533 Data bus diagnostic interface
- J608 Special vehicle control unit
- N254 Power take-off valve, on underbody, next to auxiliary heater
- T4eq 4-pin connector, green
- T6cb 6-pin connector, blue
- T12o 12-pin connector, green
- T20h 20-pin connector, red
- T20i 20-pin connector, black
- T40b 40-pin connector, black
- T73a 73-pin connector, black

- 77 Earth point, lower part of left B-pillar
- 305 Earth connection (auxiliary heater), in interior wiring harness
- 382 Earth connection 17, in main wiring harness
- 638 Earth point, on right A-pillar
- A139 Connection 3 (15) in dash panel wiring harness
- A146 Connection (convenience CAN bus, high), in dash panel wiring harness
- A147 Connection (convenience CAN bus, low), in dash panel wiring harness
- A237 Connection 1 (powertrain CAN bus, low), in dash panel wiring harness
- B383 Connection 1 (powertrain CAN bus, high), in main wiring harness
- * For models with auxiliary drive
- *2 Pre-wired component
- *3 For left-hand drive models
- *4 For right-hand drive models

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

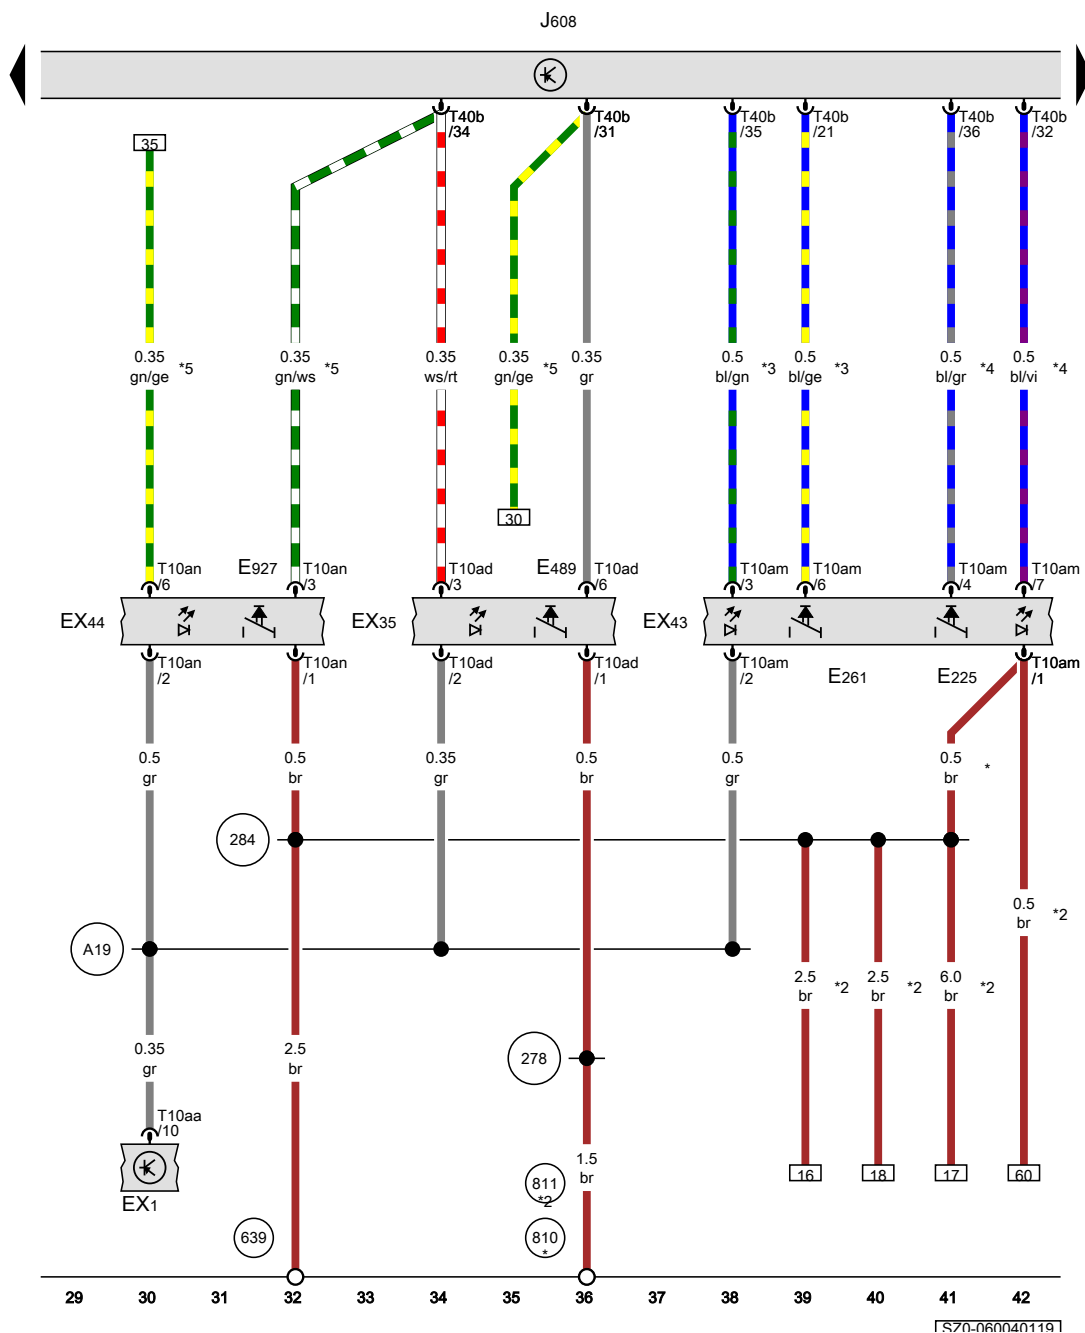


Power take-off switch, Working speed control switch, Ignition bypass button, Remote engine start button, Special vehicle control unit


- EX1 Rotary light switch
- EX35 Centre switch module 2 in dash panel
- EX43 Switch module 1 in dash panel, next to steering wheel
- EX44 Switch module 2 in dash panel, next to steering wheel
- E225 Power take-off switch
- E261 Working speed control switch
- E489 Ignition bypass button
- E927 Remote engine start button
- J608 Special vehicle control unit
- T10aa 10-pin connector, red
- T10ad 10-pin connector, black
- T10am 10-pin connector, red
- T10an 10-pin connector, black
- T40b 40-pin connector, black

- 278 Earth connection 4, in interior wiring harness
- 284 Earth connection 6, in interior wiring harness
- 639 Earth point, left A-pillar
- 810 Earth point on central tube for dash panel, centre left
- 811 Earth point on central tube for dash panel, centre right
- A19 Connection (58d), in dash panel wiring harness
- * For left-hand drive models
- *2 For right-hand drive models
- *3 For models with electronic engine speed regulation
- *4 For models with auxiliary drive
- *5 For models with remote engine start

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

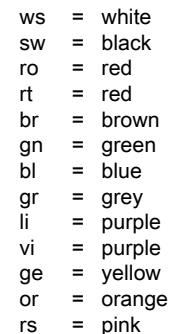

- * For models with second battery
- *2 According to equipment
- *3 Cross section depends on equipment
- *4 Earth supply via housing

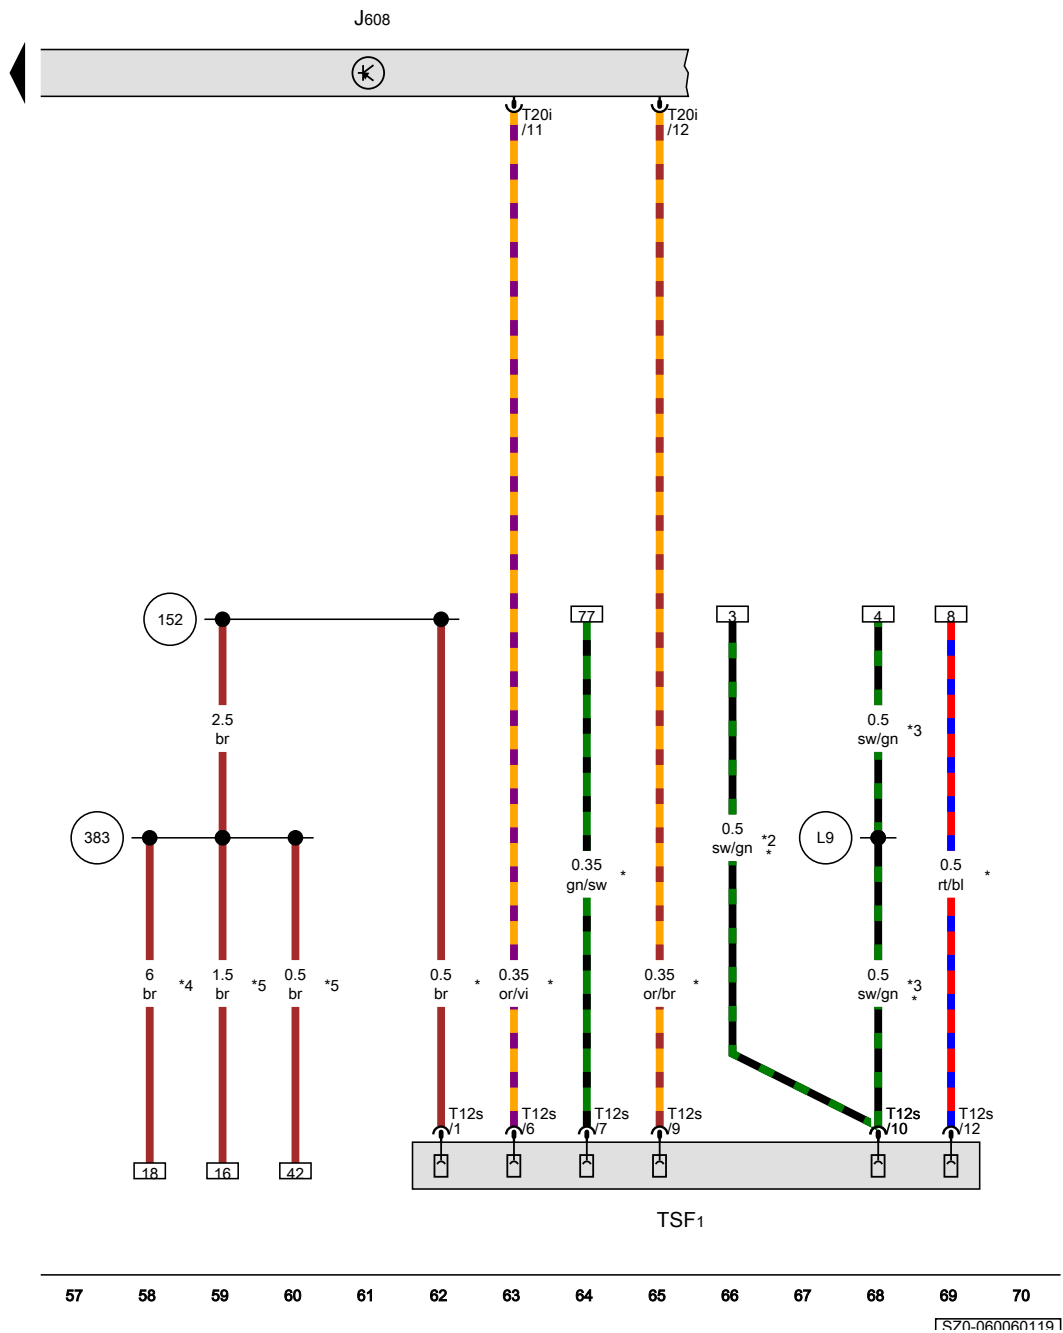


Special vehicle control unit, Coupling point for special vehicles

- J608 Special vehicle control unit
- T12s 12-pin connector, green
- T20i 20-pin connector, black
- TSF1 Coupling point for special vehicles

- 152 Earth connection 2, in front wiring harness
- 383 Earth connection 18, in main wiring harness
- L9 Connection 1, in air conditioning system wiring harness
- * For models with telematics
- *2 For models with no air conditioning system
- *3 For models with air conditioning system
- *4 For left-hand drive models
- *5 For right-hand drive models

GPS aerial, LTE aerial 1, Coupling point for special vehicles

- G24 Tachograph
R50 GPS aerial, in passenger side exterior mirror housing
R297 LTE aerial 1, in passenger side exterior mirror housing
T2st 2-pin connector, blue
T2su 2-pin connector, purple
T2vx 2-pin connector
T2vy 2-pin connector
T4ij 4-pin connector, black
T8cv 8-pin connector, brown
T8ei 8-pin connector, red
T28g 28-pin connector, black
TSF1 Coupling point for special vehicles
* Pre-wired component
*2 For models with telematics

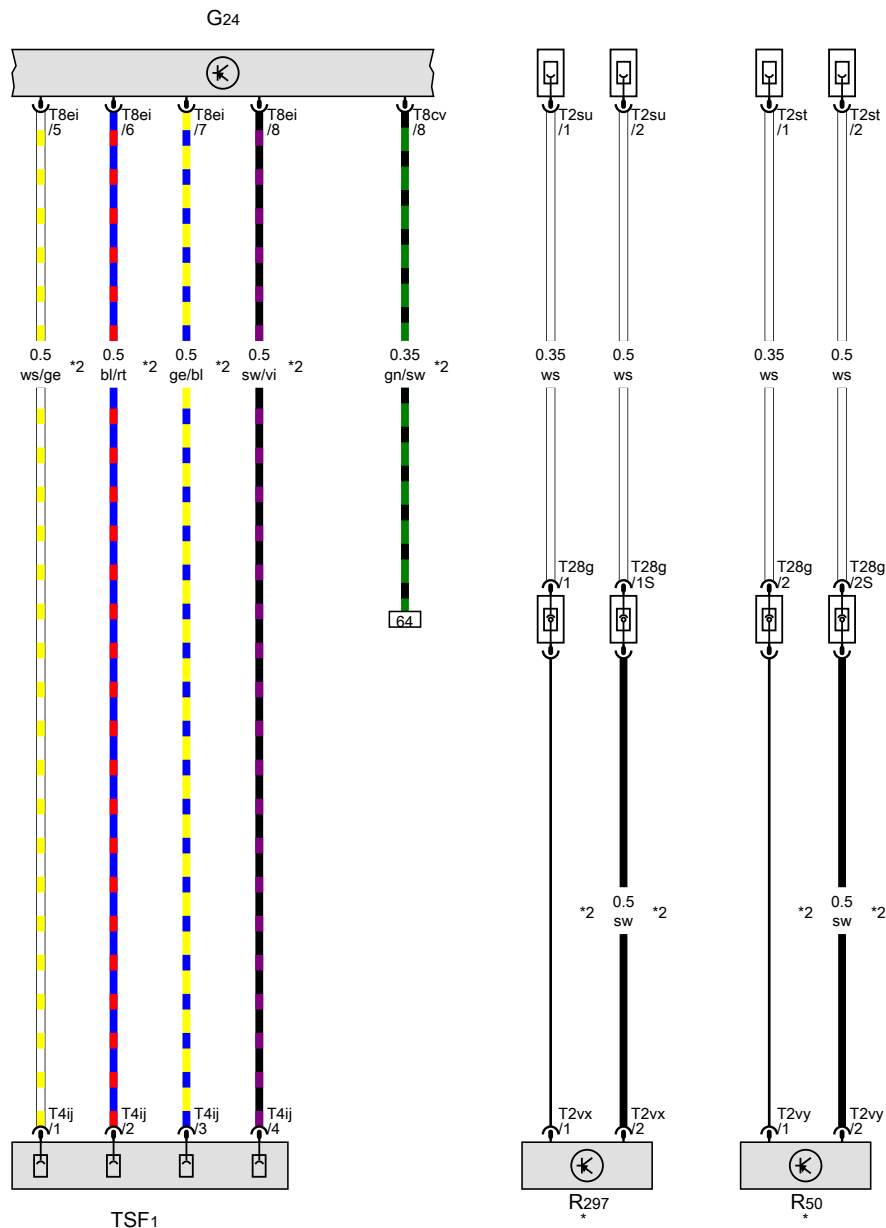


1S70-0600701191

Window wash/wipe system, headlight washer system

From May 2017


Air humidity, rain and light sensor, Onboard supply control unit, Fuse holder B, Fuse holder C, Windscreen wiper motor, Washer pump, Headlight washer system pump

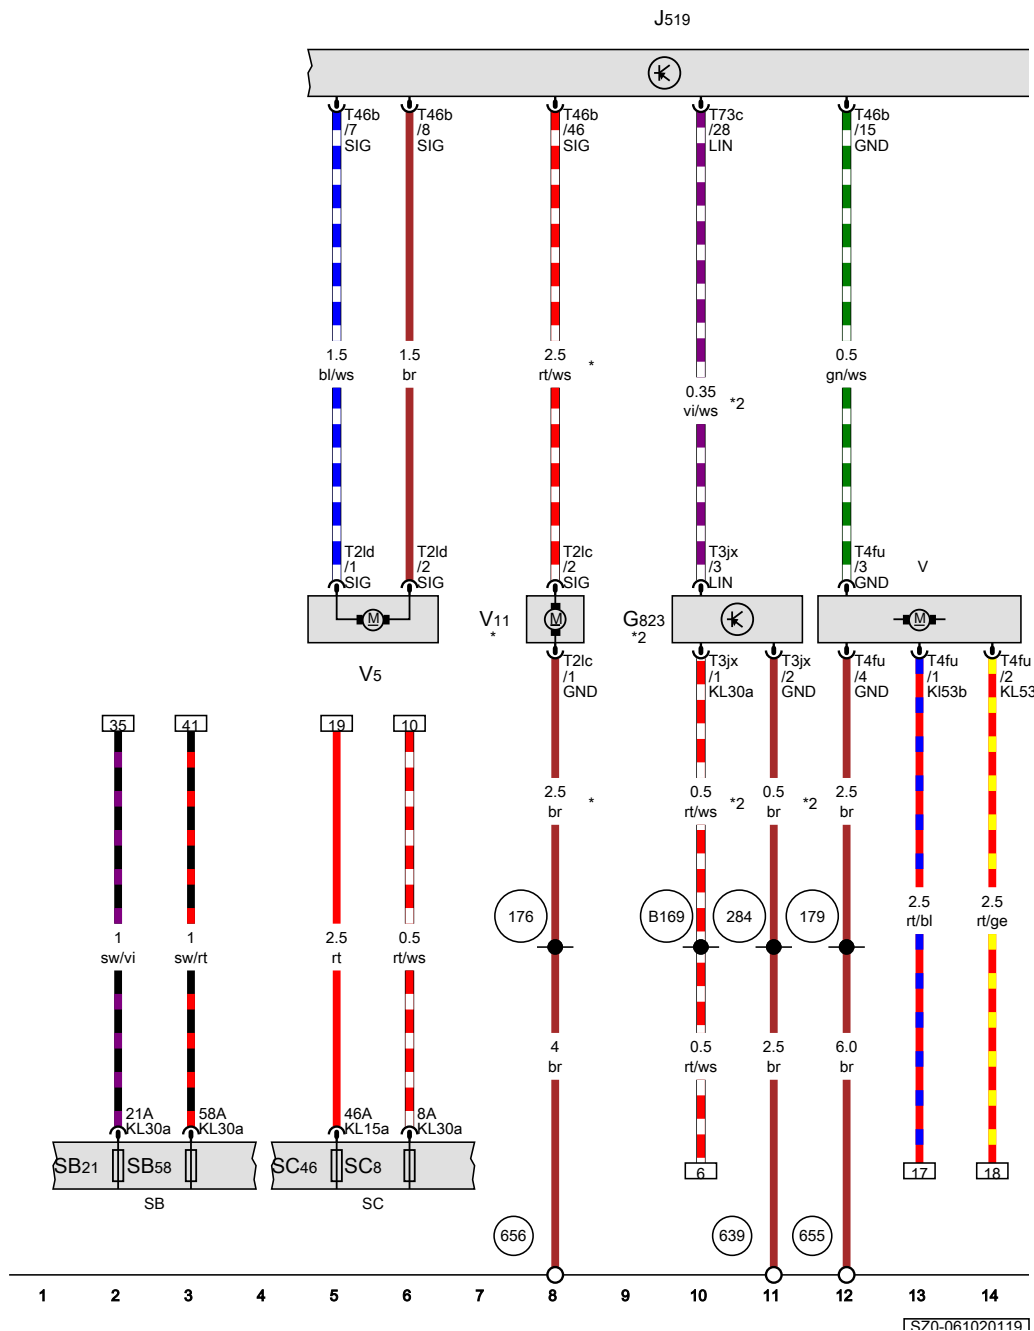

- G823 Air humidity, rain and light sensor
- J519 Onboard supply control unit
- SB Fuse holder B
- SC Fuse holder C
- SC8 Fuse 8 on fuse holder C
- SB21 Fuse 21 on fuse holder B
- SC46 Fuse 46 on fuse holder C
- SB58 Fuse 58 on fuse holder B
- T2lc 2-pin connector, black
- T2ld 2-pin connector, black
- T3jx 3-pin connector, black
- T4fu 4-pin connector, black
- T46b 46-pin connector, black
- T73c 73-pin connector, black
- V Windscreen wiper motor
- V5 Washer pump
- V11 Headlight washer system pump

- 176 Earth connection, in right headlight wiring harness
- 179 Earth connection, in left headlight wiring harness
- 284 Earth connection 6, in interior wiring harness
- 639 Earth point, left A-pillar
- 655 Earth point, on left headlight
- 656 Earth point, on right headlight
- B169 Positive connection 1 (30), in interior wiring harness

- * For models with headlight washer system
- *2 For models with rain and light sensor

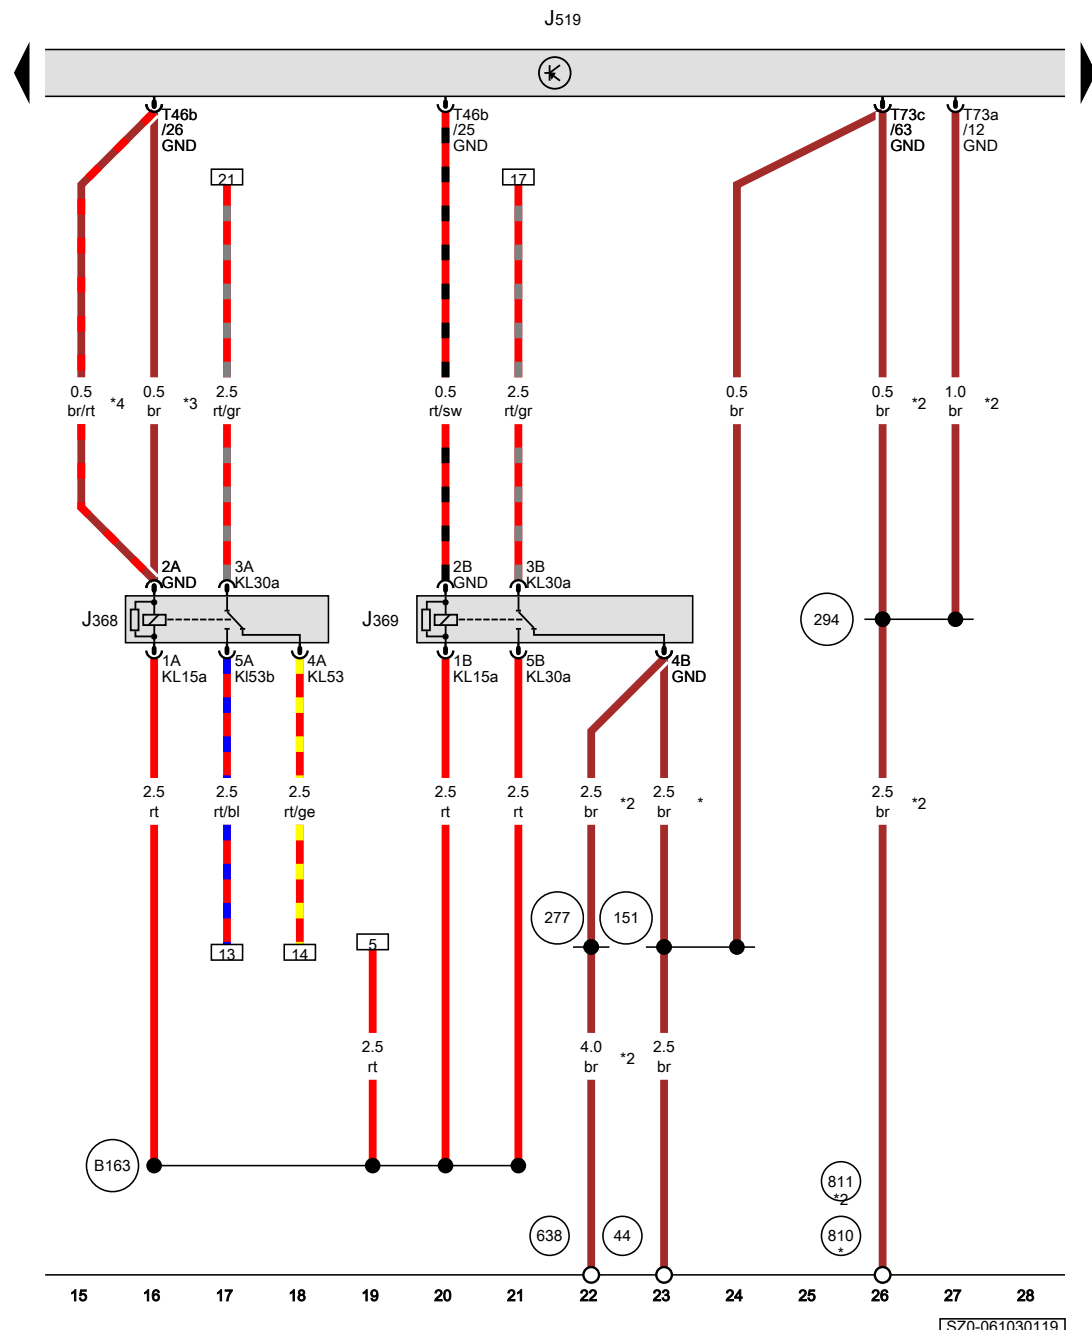


Wiper motor relay 1, Wiper motor relay 2, Onboard supply control unit

J368 Wiper motor relay 1
 J369 Wiper motor relay 2
 J519 Onboard supply control unit
 T46b 46-pin connector, black
 T73a 73-pin connector, black
 T73c 73-pin connector, black

- 44 Earth point, lower part of left A-pillar
- 151 Earth connection 1, in front wiring harness
- 277 Earth connection 3, in interior wiring harness
- 294 Earth connection 9, in interior wiring harness
- 638 Earth point, on right A-pillar
- 810 Earth point on central tube for dash panel, centre left
- 811 Earth point on central tube for dash panel, centre right
- B163 Positive connection 1 (15), in interior wiring harness

* For left-hand drive models
 *2 For right-hand drive models
 *3 Up to November 2017
 *4 From November 2017

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

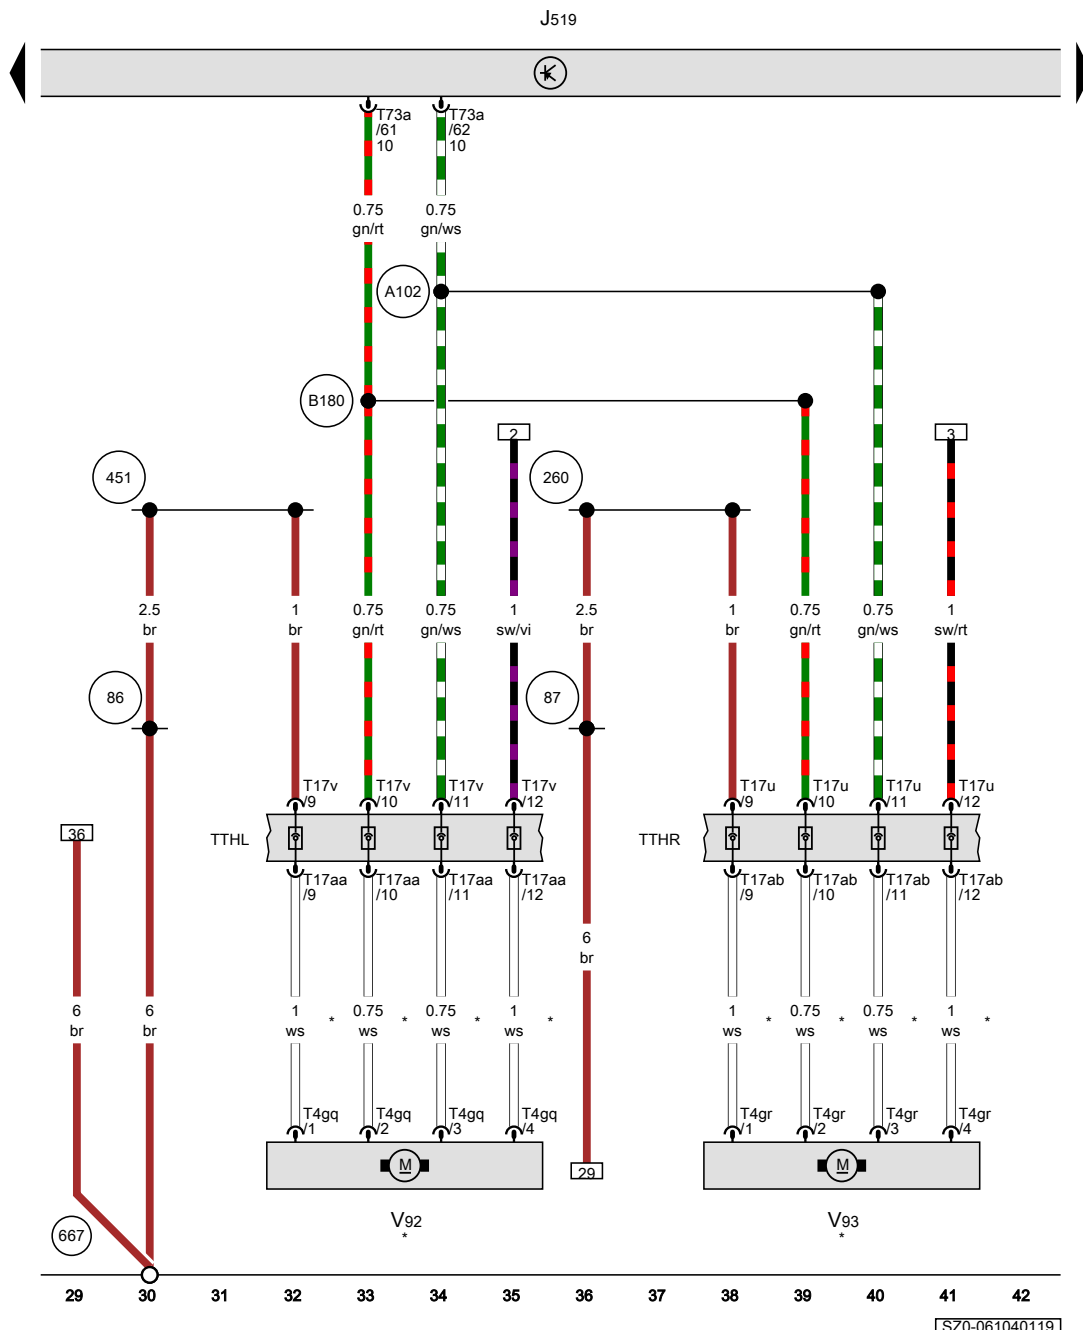


Onboard supply control unit, Rear left wing door window wiper motor, Rear right wing door window wiper motor

- J519 Onboard supply control unit
- T4gq 4-pin connector, black
- T4gr 4-pin connector, black
- T17aa 17-pin connector, black
- T17ab 17-pin connector, black
- T17u 17-pin connector, black
- T17v 17-pin connector, black
- T73a 73-pin connector, black
- TTHL Coupling point for rear left door
- TTHR Coupling point for rear right door
- V92 Rear left wing door window wiper motor
- V93 Rear right wing door window wiper motor

- 86 Earth connection 1, in rear wiring harness
- 87 Earth connection 2, in rear wiring harness
- 260 Earth connection, in tail light cluster wiring harness
- 451 Earth connection 1 in rear right side panel
- 667 Earth point, on rear left of roof
- A102 Connection (windscreen wiper), in dash panel wiring harness
- B180 Connection (heated rear window), in interior wiring harness

* For models with rear window wiper

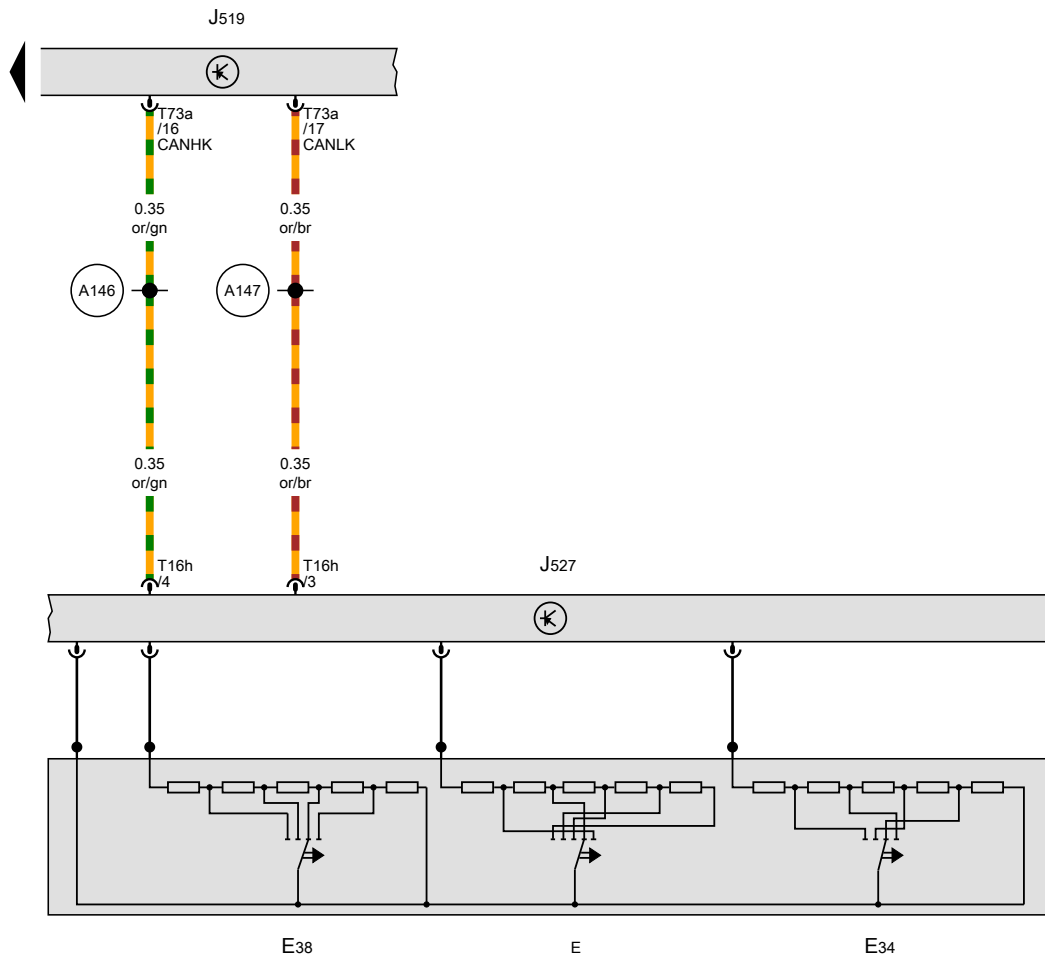

Windscreen wiper switch, Rear wiper switch, Intermittent wiper regulator, Onboard supply control unit, Steering column electronics control unit

- E Windscreen wiper switch
- E34 Rear wiper switch
- E38 Intermittent wiper regulator
- J519 Onboard supply control unit
- J527 Steering column electronics control unit
- T16h 16-pin connector, black
- T73a 73-pin connector, black
- A146 Connection (convenience CAN bus, high), in dash panel wiring harness
- A147 Connection (convenience CAN bus, low), in dash panel wiring harness

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

43 44 45 46 47 48 49 50 51 52 53 54 55 56


[S70-061050119]


Programmable special functions , (IS7),(IS8)

From May 2017

Special vehicle control unit, Fuse holder B, Fuse holder D

- J608 Special vehicle control unit
 SB Fuse holder B
 SB8 Fuse 8 on fuse holder B
 SB33 Fuse 33 on fuse holder B
 SB42 Fuse 42 on fuse holder B
 SB43 Fuse 43 on fuse holder B
 SB49 Fuse 49 on fuse holder B
 SB51 Fuse 51 on fuse holder B
 SD Fuse holder D
 SD1 Fuse 1 on fuse holder D
 SD3 Fuse 3 on fuse holder D
 T6cb 6-pin connector, blue
 * For models with no second battery
 *2 For models with second battery
 *3 For models with no air conditioning system
 *4 For models with telematics
 *5 For models with air conditioning system

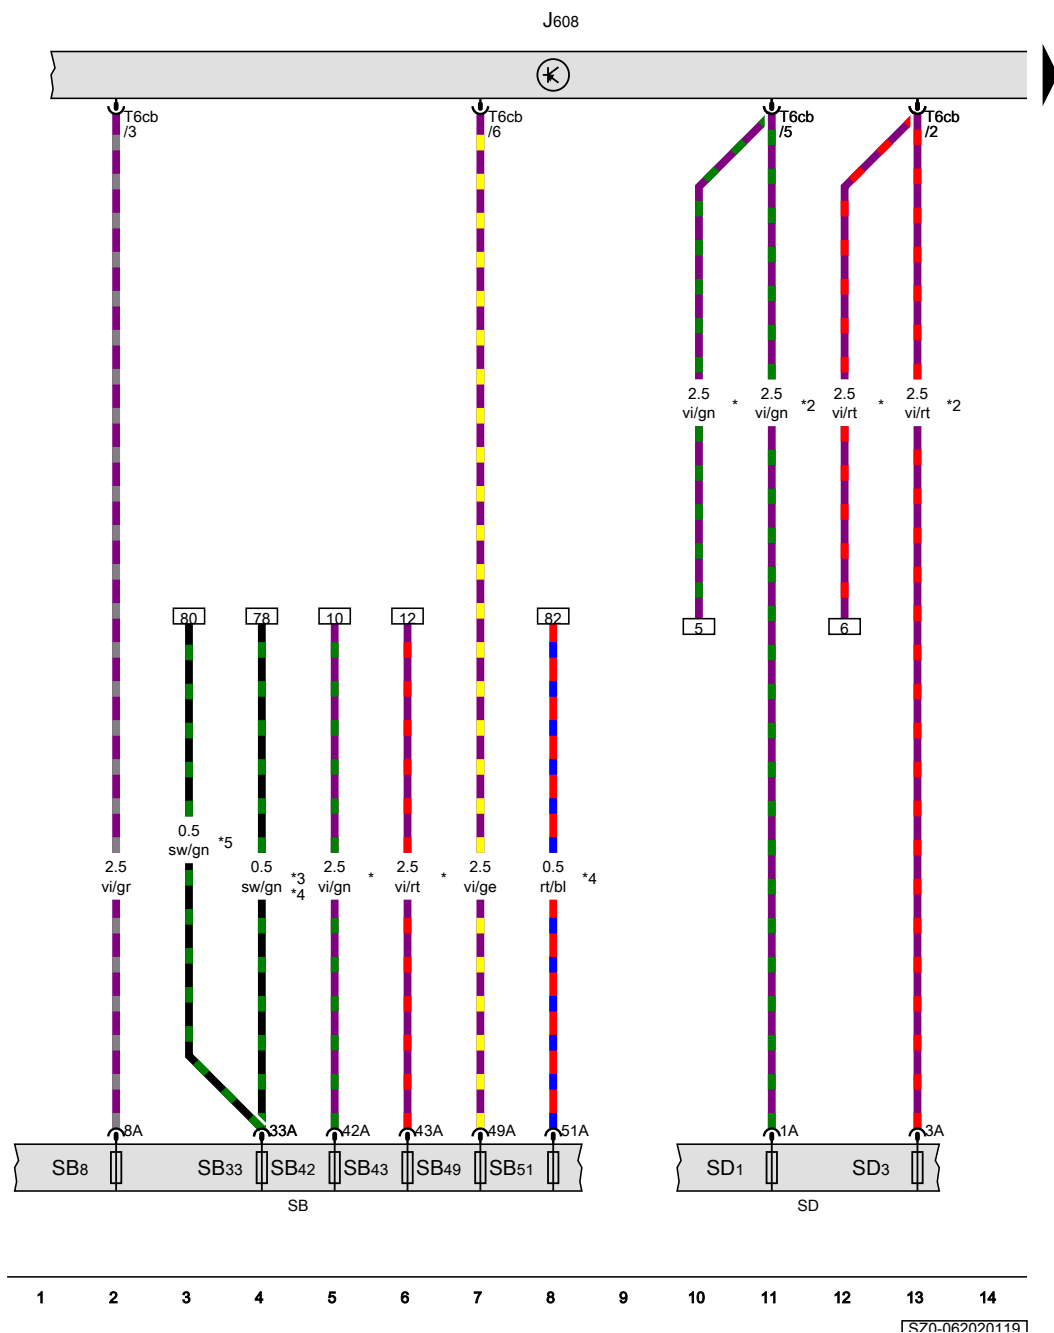

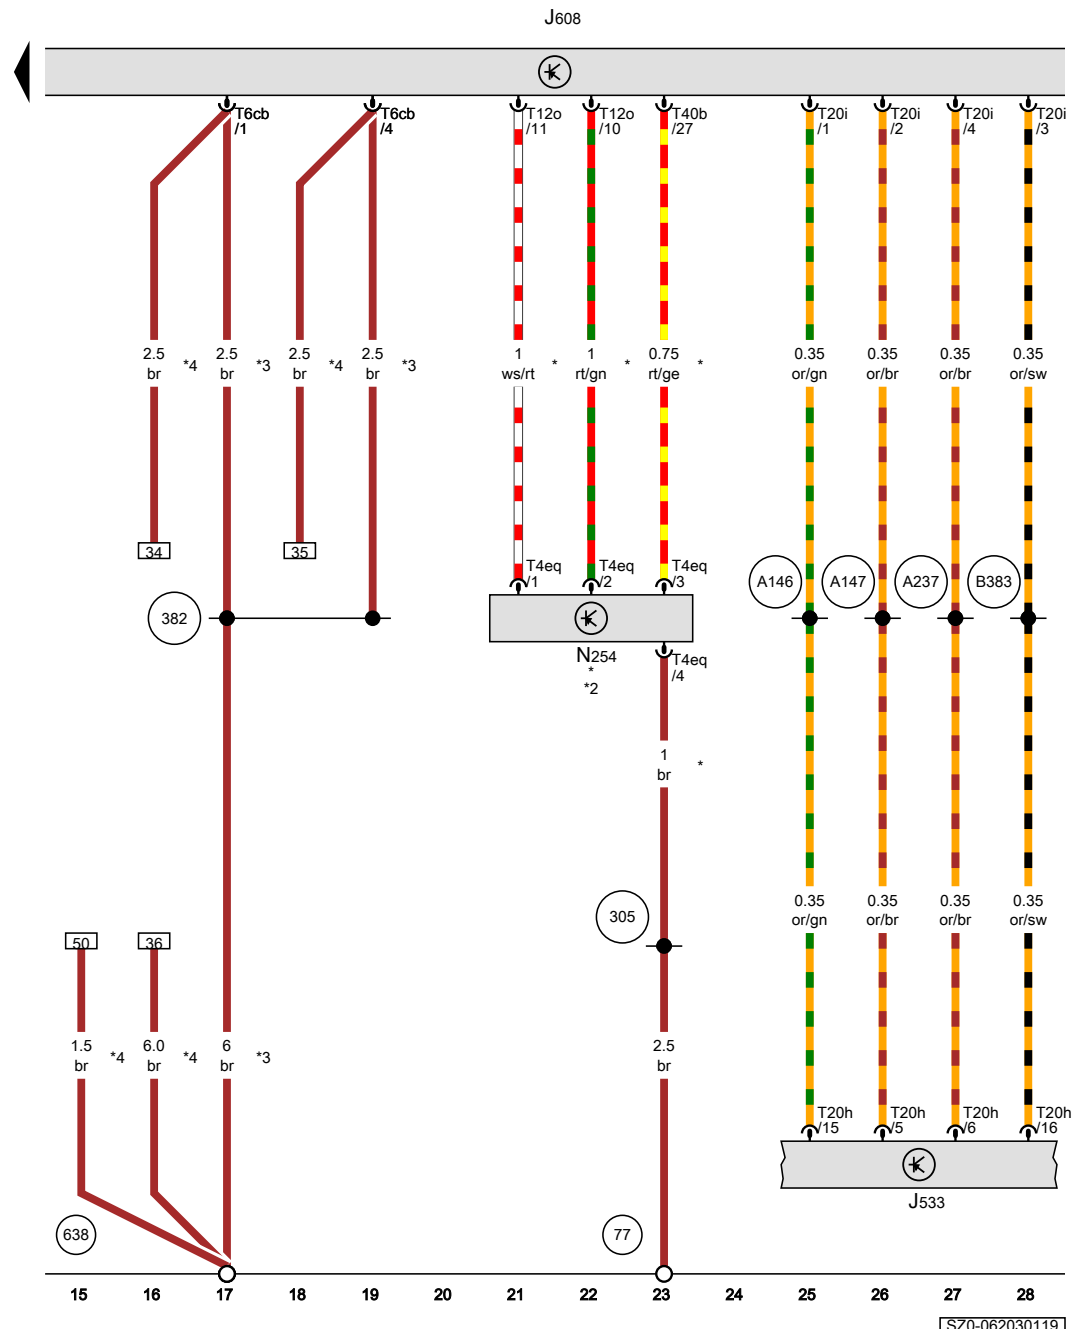


Special vehicle control unit, Power take-off valve

J533 Data bus diagnostic interface
 J608 Special vehicle control unit
 N254 Power take-off valve
 T4eq 4-pin connector, green
 T6cb 6-pin connector, blue
 T12o 12-pin connector, green
 T20h 20-pin connector, red
 T20i 20-pin connector, black
 T40b 40-pin connector, black

- 77 Earth point, lower part of left B-pillar
- 305 Earth connection (auxiliary heater), in interior wiring harness
- 382 Earth connection 17, in main wiring harness
- 638 Earth point, on right A-pillar
- A146 Connection (convenience CAN bus, high), in dash panel wiring harness
- A147 Connection (convenience CAN bus, low), in dash panel wiring harness
- A237 Connection 1 (powertrain CAN bus, low), in dash panel wiring harness
- B383 Connection 1 (powertrain CAN bus, high), in main wiring harness
- * For models with auxiliary drive
- *2 Pre-wired component
- *3 For left-hand drive models
- *4 For right-hand drive models

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

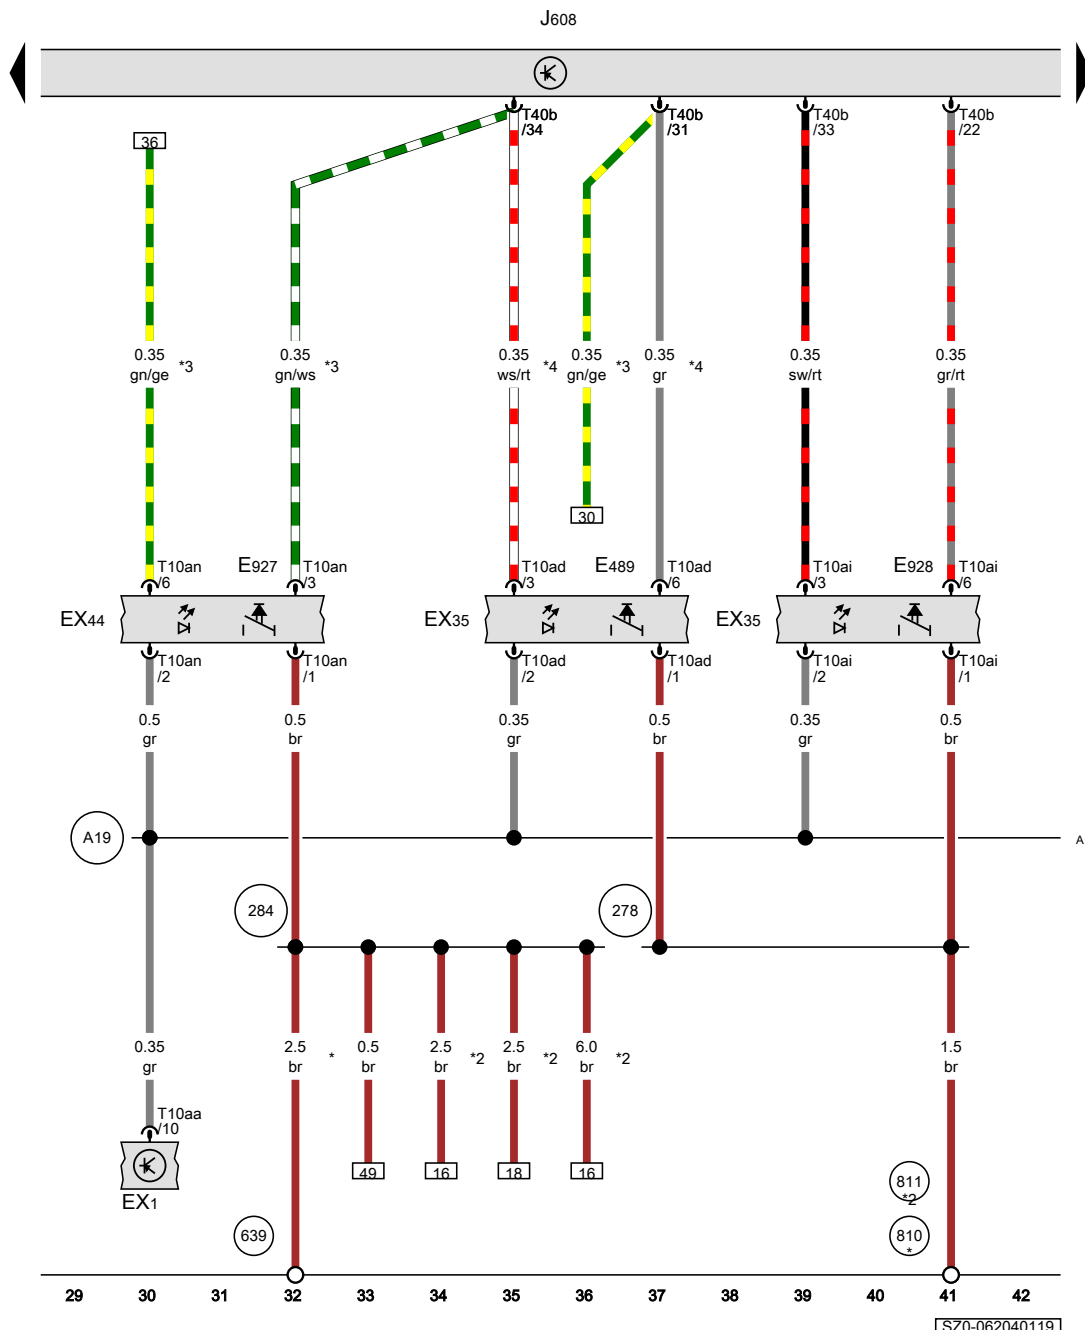


Ignition bypass button, Remote engine start button,
Wireless data transfer button, Special vehicle control unit

- EX1 Rotary light switch
- EX35 Centre switch module 2 in dash panel
- EX44 Switch module 2 in dash panel, next to steering wheel
- E489 Ignition bypass button
- E927 Remote engine start button
- E928 Wireless data transfer button
- J608 Special vehicle control unit
- T10aa 10-pin connector, red
- T10ad 10-pin connector, black
- T10ai 10-pin connector, red
- T10an 10-pin connector, black
- T40b 40-pin connector, black

- 278 Earth connection 4, in interior wiring harness
- 284 Earth connection 6, in interior wiring harness
- 639 Earth point, left A-pillar
- 810 Earth point on central tube for dash panel, centre left
- 811 Earth point on central tube for dash panel, centre right
- A19 Connection (58d), in dash panel wiring harness

- * For left-hand drive models
- *2 For right-hand drive models
- *3 For models with remote engine start
- *4 According to equipment

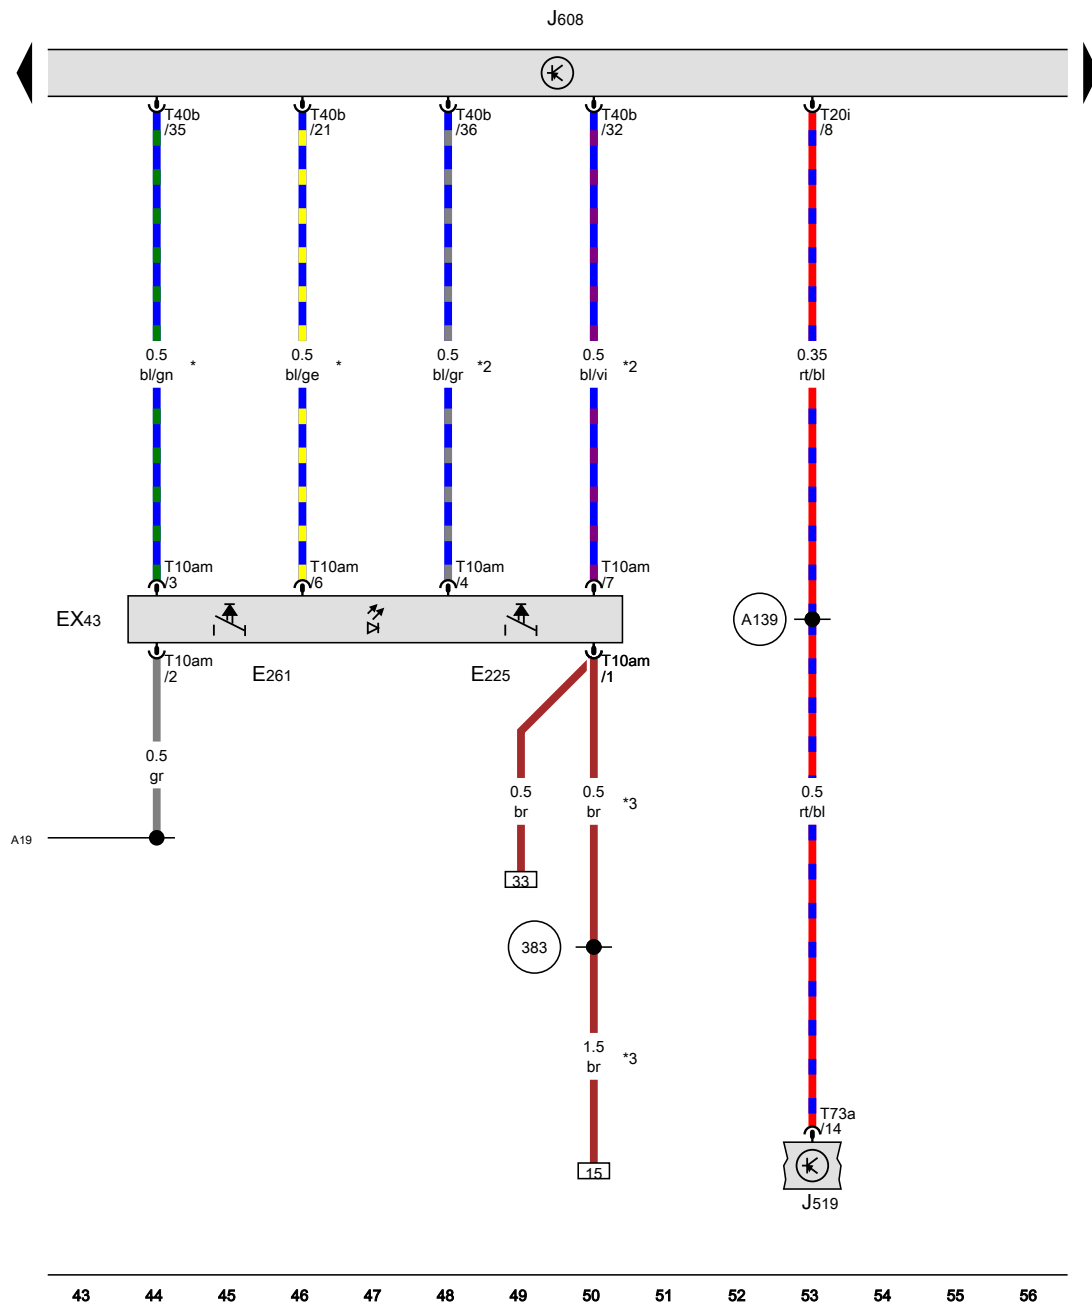


Switch module 1 in dash panel, next to steering wheel,
Power take-off switch, Special vehicle control unit

- EX43 Switch module 1 in dash panel, next to steering wheel
- E225 Power take-off switch
- E261 Working speed control switch
- J519 Onboard supply control unit
- J608 Special vehicle control unit
- T10am 10-pin connector, red
- T20i 20-pin connector, black
- T40b 40-pin connector, black
- T73a 73-pin connector, black

- 383 Earth connection 18, in main wiring harness
- A19 Connection (58d), in dash panel wiring harness
- A139 Connection 3 (15) in dash panel wiring harness

- * For models with electronic engine speed regulation
- *2 For models with auxiliary drive
- *3 For right-hand drive models

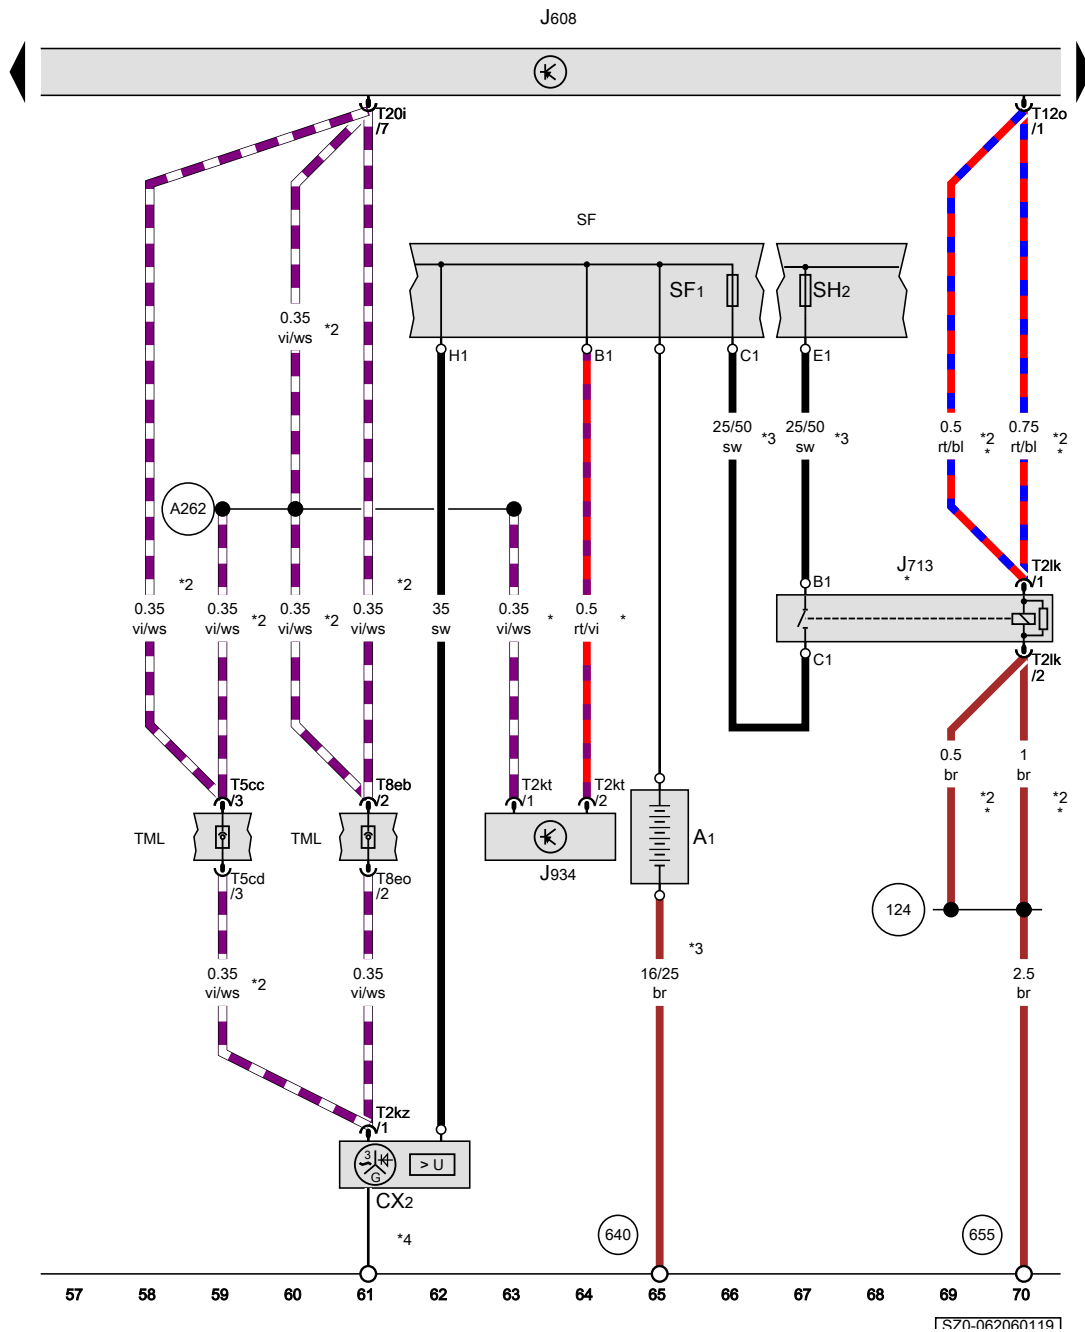

Second battery, Alternator 2 with voltage regulator, Special vehicle control unit, Second battery charging circuit relay, Battery monitor control unit 2

- A1 Second battery
- CX2 Alternator 2 with voltage regulator
- J608 Special vehicle control unit
- J713 Second battery charging circuit relay
- J934 Battery monitor control unit 2
- SF Fuse holder F
- SF1 Fuse 1 in fuse holder F
- SH2 Fuse 2 in fuse holder H
- T2kt 2-pin connector, black
- T2kz 2-pin connector, black
- T2lk 2-pin connector, black
- T5cc 5-pin connector, black
- T5cd 5-pin connector, black
- T8eb 8-pin connector, black
- T8eo 8-pin connector, black
- T12o 12-pin connector, green
- T20i 20-pin connector, black
- TML Coupling point in engine compartment, left

124 Earth connection, in right side engine compartment wiring harness

640 Earth point 2, left in engine compartment

655 Earth point, on left headlight

A262 Connection 3 (LIN bus) in dash panel wiring harness


* For models with second battery

*2 According to equipment

*3 Cross section depends on equipment

*4 Earth supply via housing

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

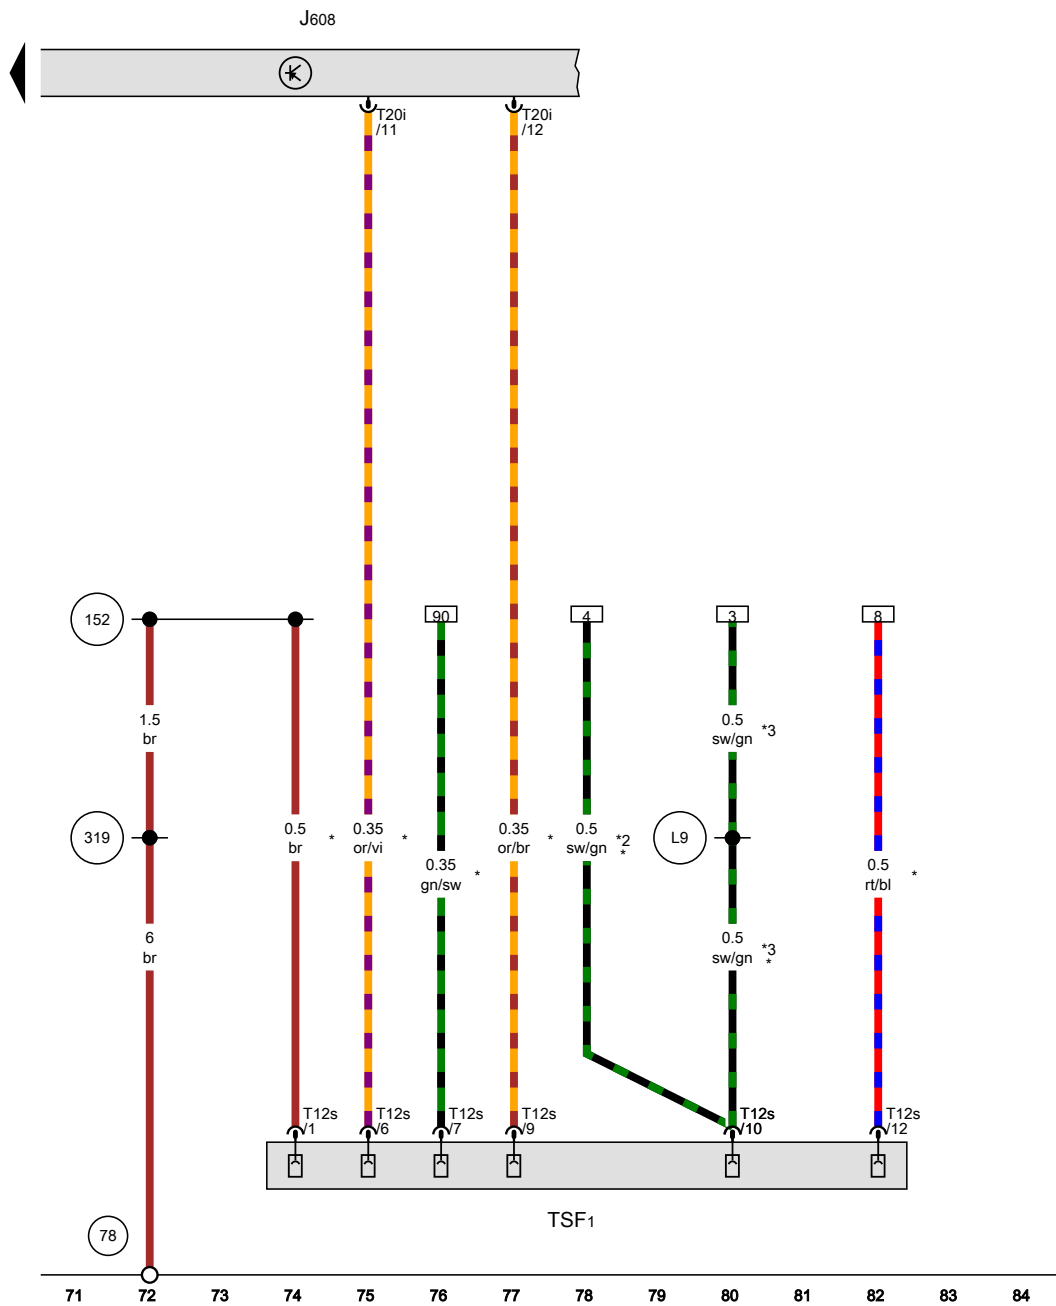

Special vehicle control unit, Coupling point for special vehicles

- J608 Special vehicle control unit
- T12s 12-pin connector, green
- T20i 20-pin connector, black
- TSF1 Coupling point for special vehicles


- 78 Earth point, lower part of right B-pillar
- 152 Earth connection 2, in front wiring harness
- 319 Earth connection 5, in seat heating wiring harness
- L9 Connection 1, in air conditioning system wiring harness

- * For models with telematics
- *2 For models with no air conditioning system
- *3 For models with air conditioning system

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

Tachograph, GPS aerial, LTE aerial 1, Coupling point for special vehicles


- G24 Tachograph
- R50 GPS aerial, in passenger side exterior mirror housing
- R297 LTE aerial 1, in passenger side exterior mirror housing
- T2st 2-pin connector, blue
- T2su 2-pin connector, purple
- T2vx 2-pin connector
- T2vy 2-pin connector
- T4ij 4-pin connector, black
- T8cv 8-pin connector, brown
- T8ei 8-pin connector, red
- T28g 28-pin connector, black
- TSF1 Coupling point for special vehicles
- * Pre-wired component
- *2 For models with telematics

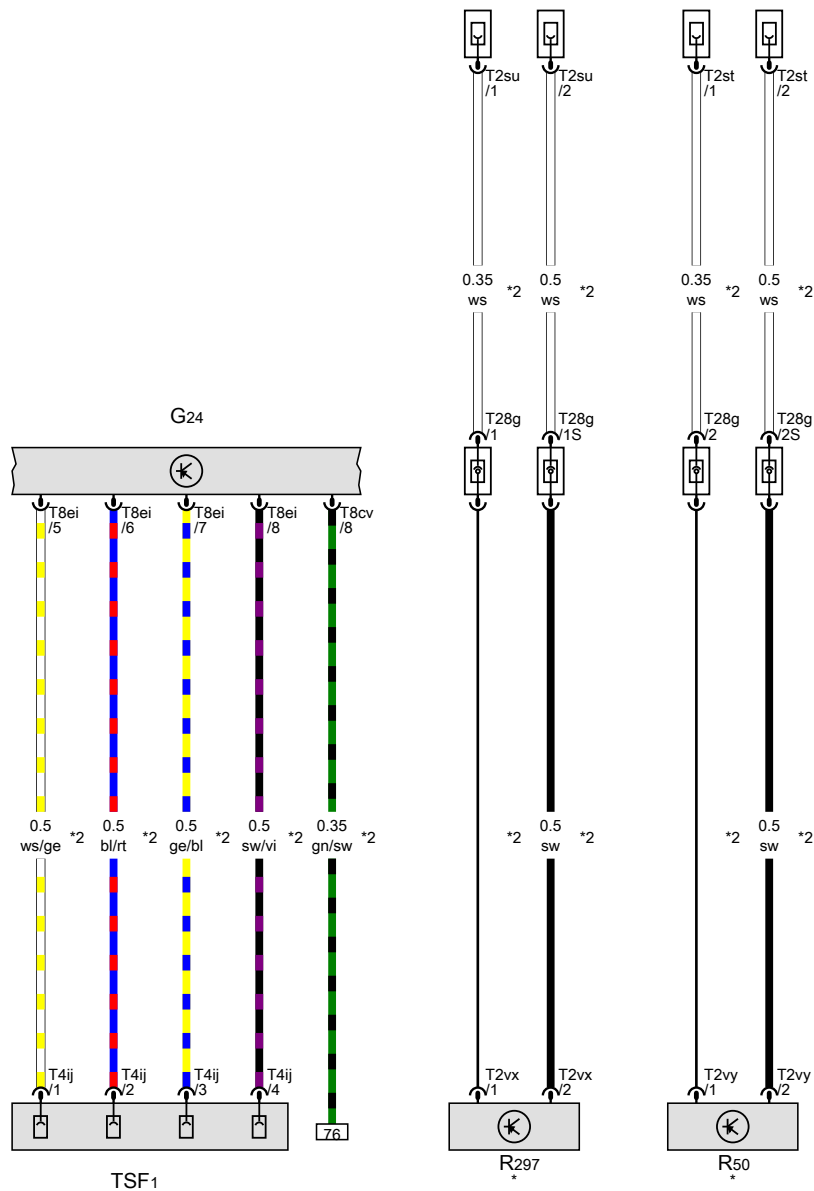

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

Radiator fan

From May 2017

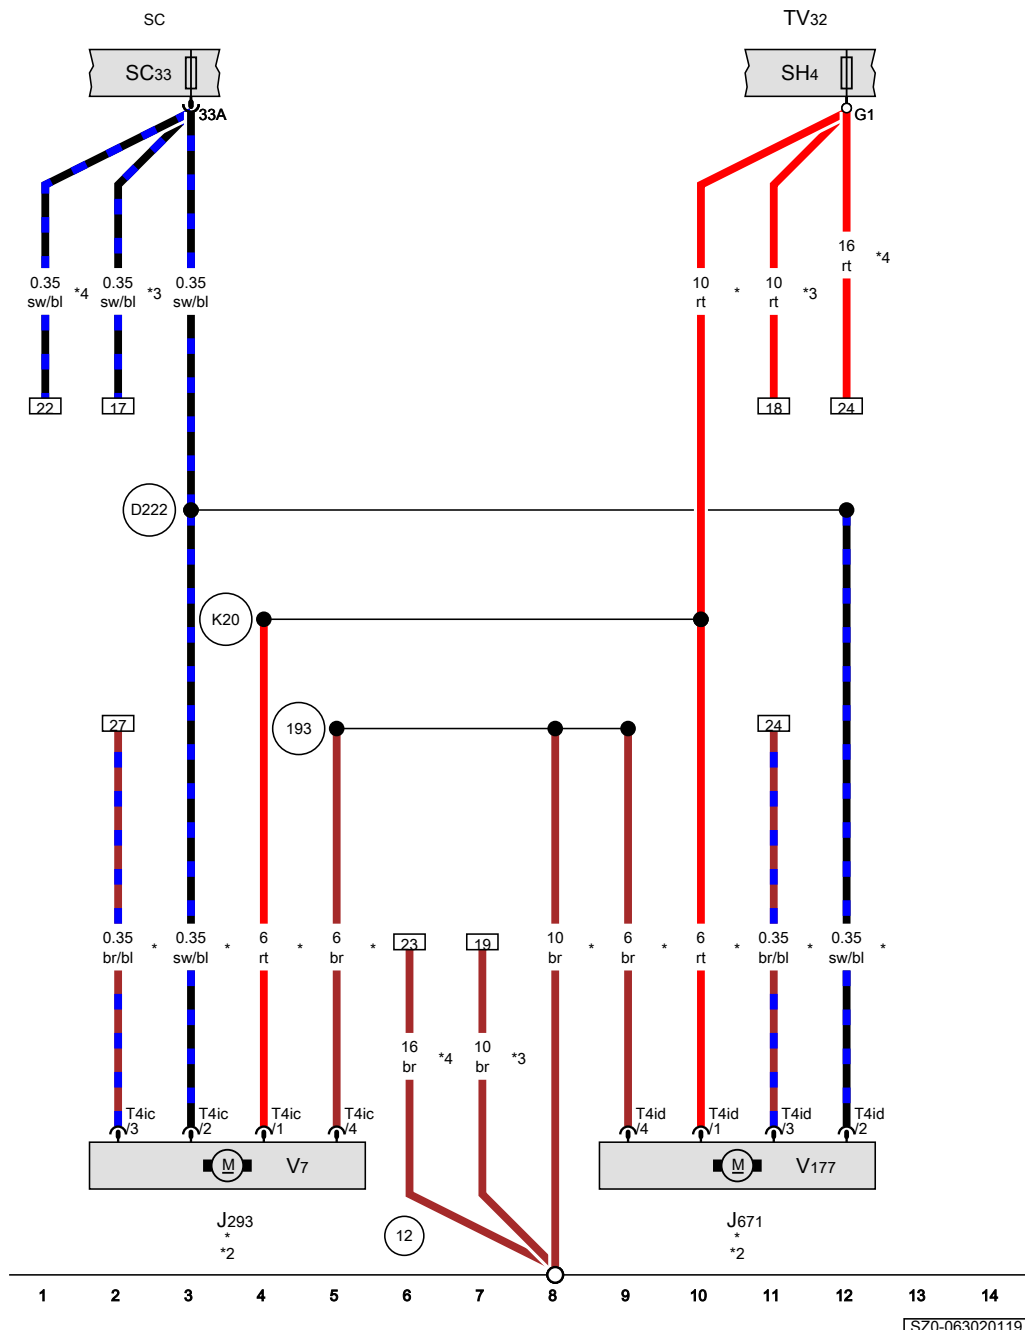

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink


Fuse holder C, Jump start connection, Radiator fan, Radiator fan 2

- J293 Radiator fan control unit
- J671 Radiator fan control unit 2
- SC Fuse holder C
- SH4 Fuse 4 in fuse holder H
- SC33 Fuse 33 on fuse holder C
- T4ic 4-pin connector, black
- T4id 4-pin connector, black
- TV32 Jump start connection
- V7 Radiator fan
- V177 Radiator fan 2

- 12 Earth point, on left in engine compartment
- 193 Earth connection 1, in coolant fan wiring harness
- D222 Connection 10 (87a), in engine compartment wiring harness
- K20 Positive connection 1 (30), in radiator fan wiring harness
- * For models with two radiator fans
- *2 Pre-wired component
- *3 For models with no towing bracket
- *4 For models with towing bracket

Engine/motor control unit, Radiator fan


- J293 Radiator fan control unit
- J623 Engine/motor control unit
- T4ef 4-pin connector, black
- T4eg 4-pin connector, black
- T94b 94-pin connector, black
- V7 Radiator fan
- * For models with no towing bracket
- *2 Pre-wired component
- *3 For models with towing bracket
- *4 For models with two radiator fans

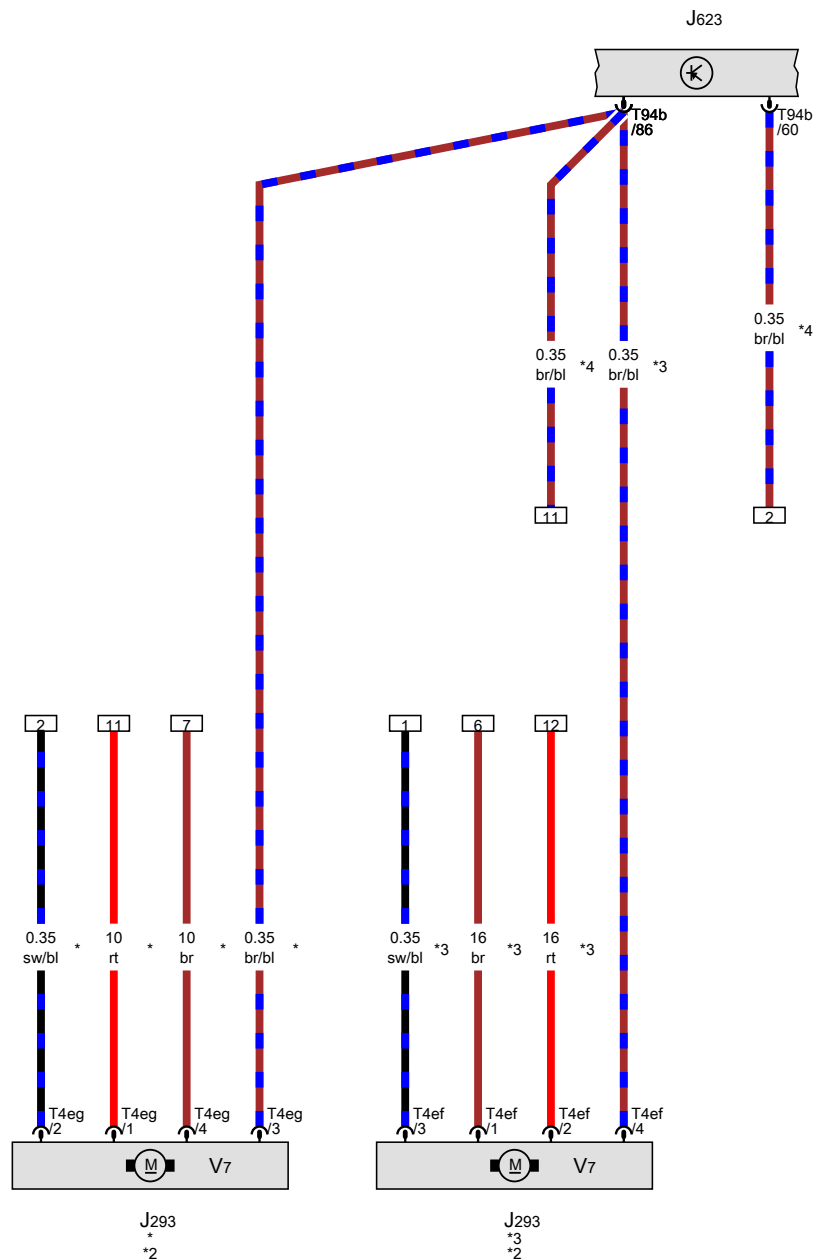

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

Electrically adjustable lumbar support on seat without electric adjustment , (3TF),(3TC),(3TP)

From September 2016

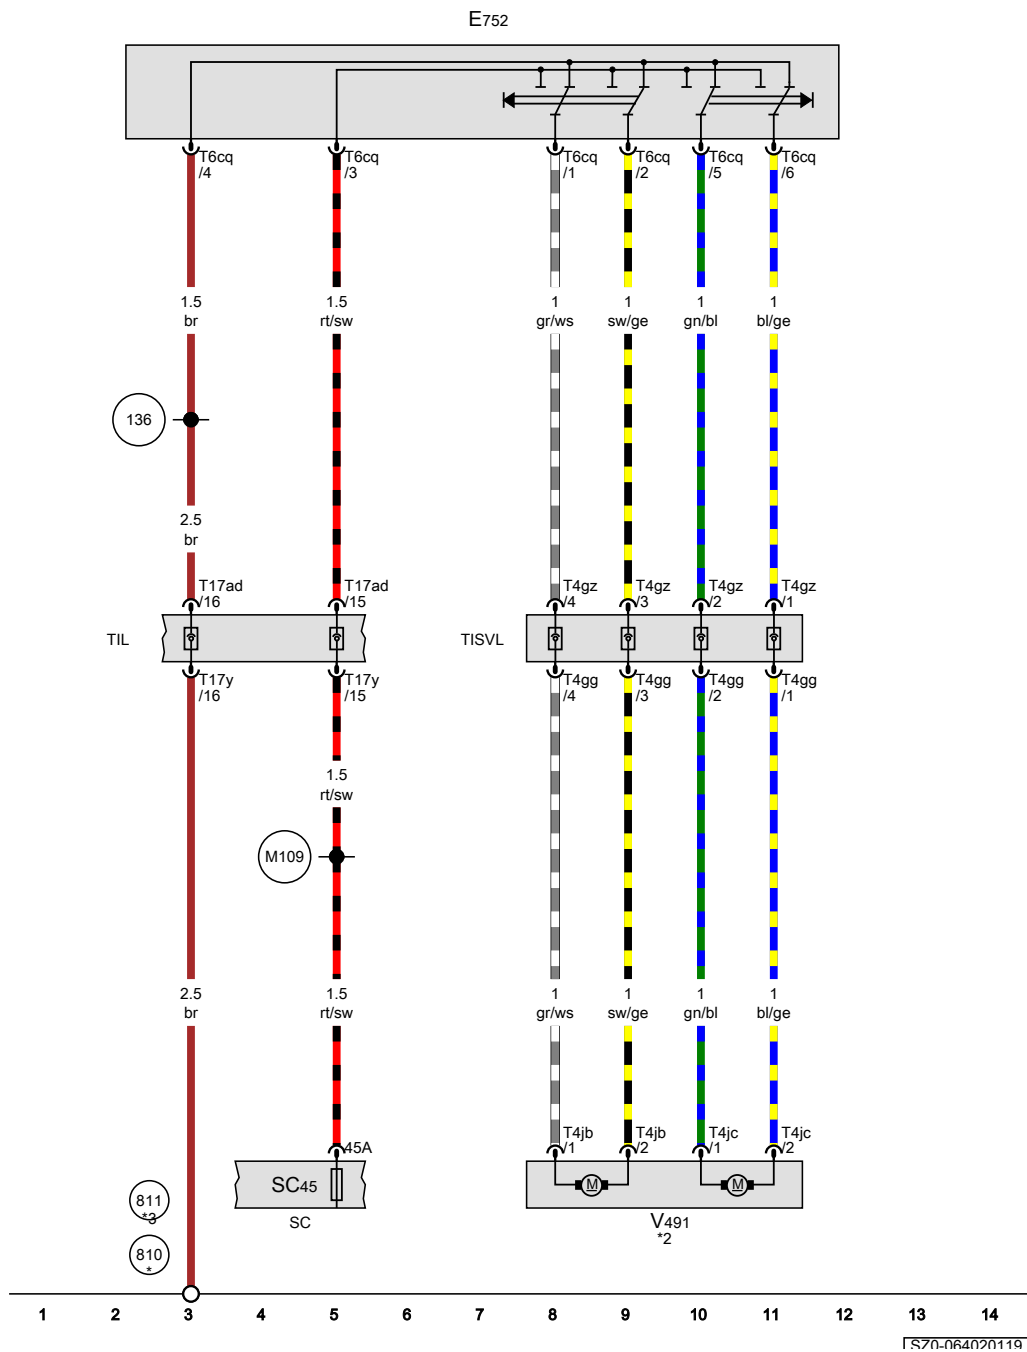

Front left lumbar support adjustment switch, Fuse holder C, Front left lumbar support adjustment motor

- E752 Front left lumbar support adjustment switch
- SC Fuse holder C
- SC45 Fuse 45 on fuse holder C
- T4gg 4-pin connector, black
- T4gz 4-pin connector, black
- T4jb 4-pin connector, black
- T4jc 4-pin connector, black
- T6cq 6-pin connector, black
- T17ad 17-pin connector, red
- T17y 17-pin connector, red
- TIL Coupling point in interior, left
- TISVL Coupling point in front left seat, in seat
- V491 Front left lumbar support adjustment motor

- 136 Earth connection 2, in seat heating wiring harness
- 810 Earth point on central tube for dash panel, centre left
- 811 Earth point on central tube for dash panel, centre right
- M109 Connection 1 (30), in front left seat wiring harness
- * For left-hand drive models
- *2 Pre-wired component
- *3 For right-hand drive models

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink


Electrically adjustable lumbar support , (3TK),(3SK)


From May 2017

Driver seat lumbar support adjustment switch, Driver seat massage function button, Control unit for front left massage seat, Fuse holder B

- E176 Driver seat lumbar support adjustment switch
- E670 Driver seat massage function button
- J803 Control unit for front left massage seat
- SB Fuse holder B
- SB11 Fuse 11 on fuse holder B
- SB13 Fuse 13 on fuse holder B
- T4gx 4-pin connector, black
- T6cr 6-pin connector, black
- T12w 12-pin connector, black
- T16q 16-pin connector, black

- 412 Earth connection 3, in seat adjustment wiring harness
- 810 Earth point on central tube for dash panel, centre left
- 811 Earth point on central tube for dash panel, centre right
- M9 Connection, in seat adjustment wiring harness
- * For left-hand drive models
- *2 For right-hand drive models

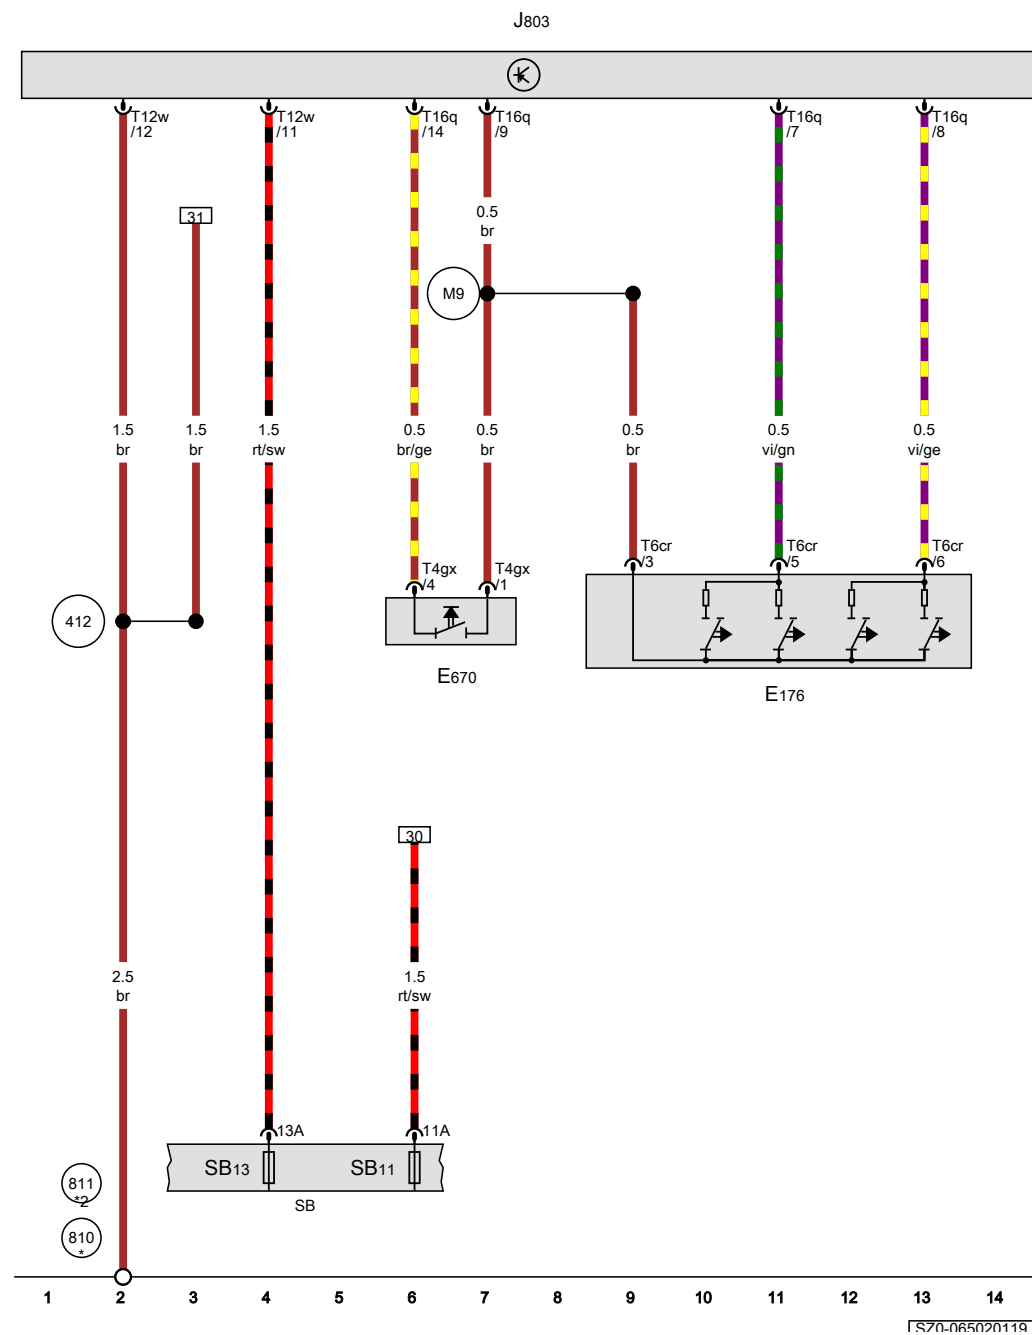


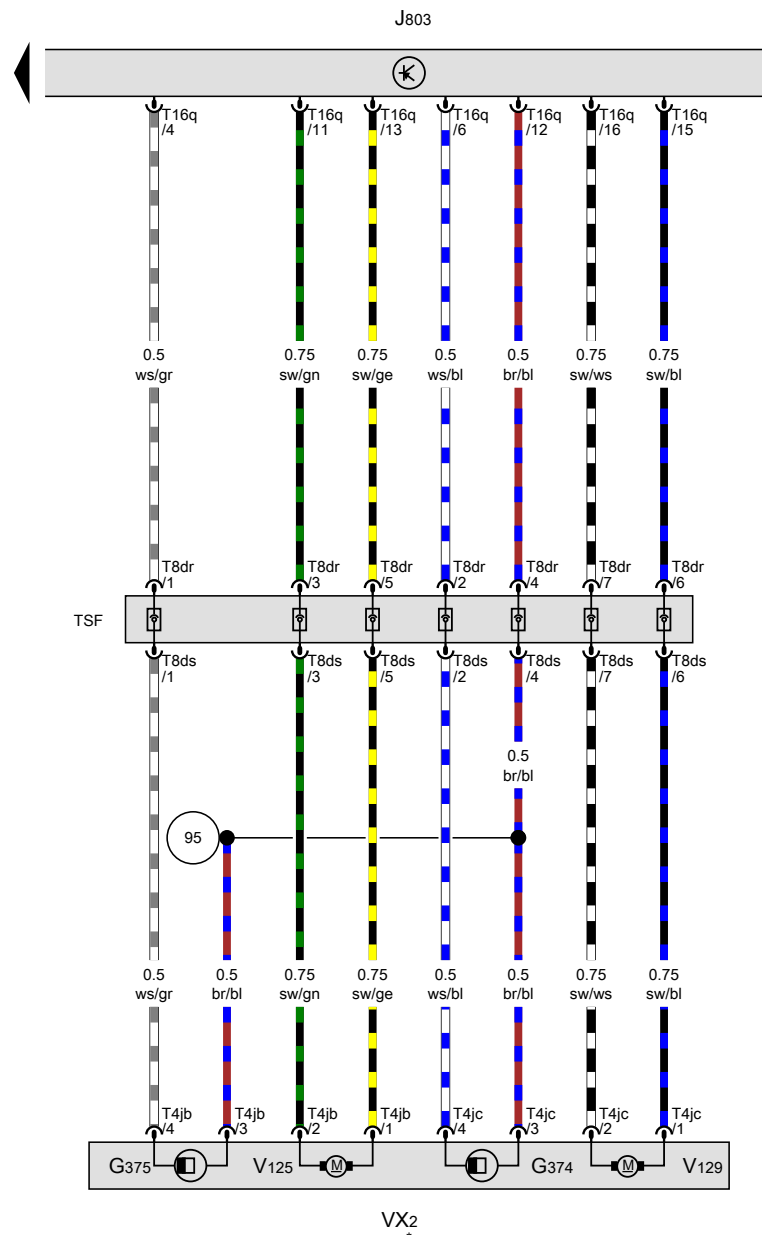

Control unit for front left mass seat, Lumbar support for driver seat, Driver seat lumbar support longitudinal adjustment motor, Driver seat lumbar support height adjustment motor

- G374 Lumbar support height adjustment sender
- G375 Lumbar support longitudinal adjustment sender
- J803 Control unit for front left mass seat
- T4jb 4-pin connector, black
- T4jc 4-pin connector, black
- T8dr 8-pin connector, black
- T8ds 8-pin connector, black
- T16q 16-pin connector, black
- TSF Coupling point for driver seat backrest
- VX2 Lumbar support for driver seat
- V125 Driver seat lumbar support longitudinal adjustment motor
- V129 Driver seat lumbar support height adjustment motor


- 95 Earth connection 1, in seat adjustment wiring harness
- * Pre-wired component

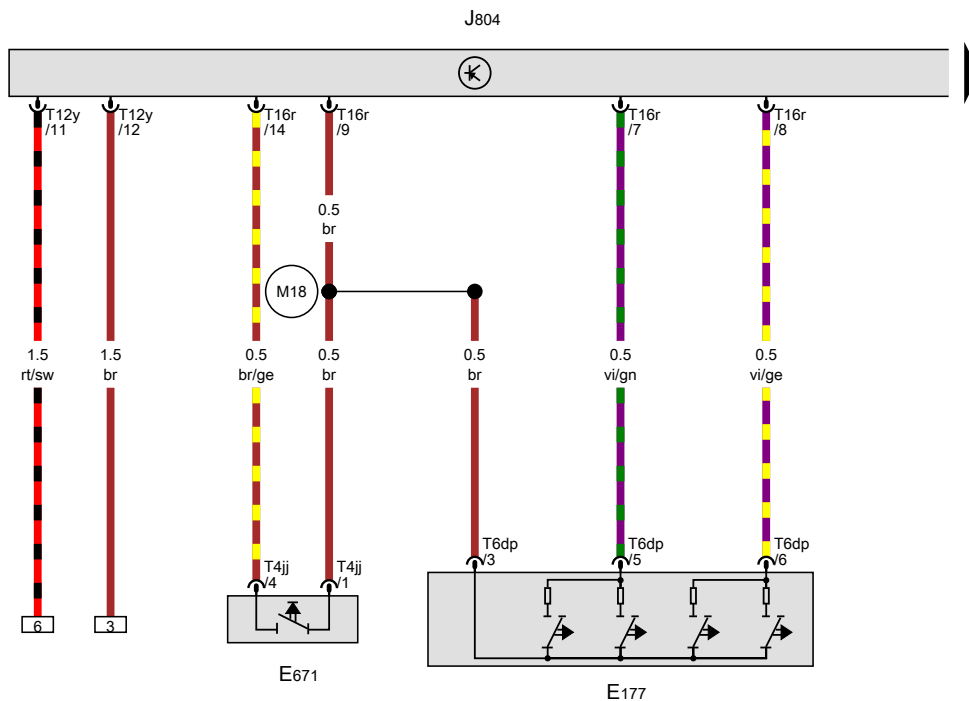

Front passenger seat lumbar support adjustment switch,
Front passenger seat massage function button, Control unit
for front right massage seat

- E177 Front passenger seat lumbar support adjustment switch
- E671 Front passenger seat massage function button
- J804 Control unit for front right massage seat
- T4jj 4-pin connector, black
- T6dp 6-pin connector, black
- T12y 12-pin connector, black
- T16r 16-pin connector, black
- M18 Connection 1, in front passenger seat adjustment wiring harness

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink

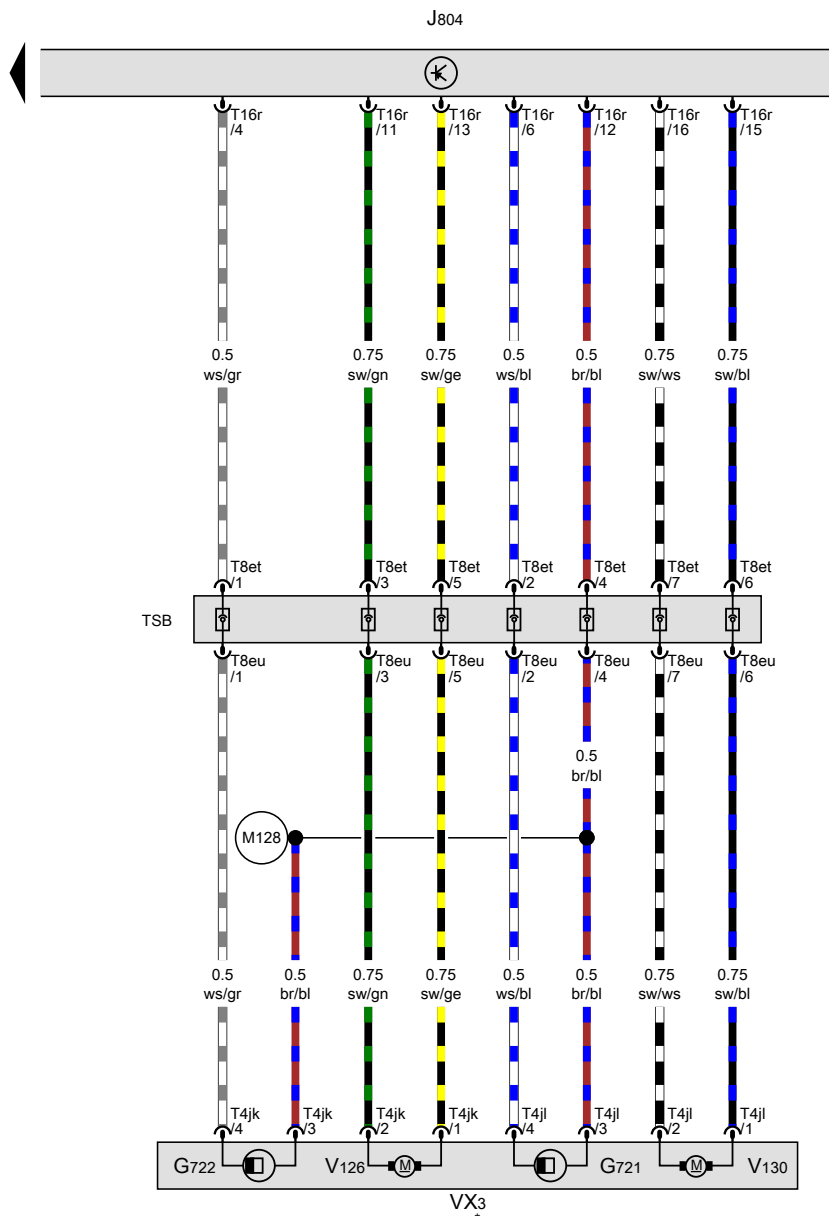


Front passenger lumbar support height adjustment sender, Front passenger lumbar support longitudinal adjustment sender, Control unit for front right massage seat, Lumbar support for front passenger seat, Front passenger seat lumbar support longitudinal adjustment motor, Front passenger seat lumbar support height adjustment motor

- G721 Front passenger lumbar support height adjustment sender
- G722 Front passenger lumbar support longitudinal adjustment sender
- J804 Control unit for front right massage seat
- T4jk 4-pin connector, black
- T4jl 4-pin connector, black
- T8et 8-pin connector, black
- T8eu 8-pin connector, black
- T16r 16-pin connector, black
- TSB Coupling point for front passenger seat backrest
- VX3 Lumbar support for front passenger seat
- V126 Front passenger seat lumbar support longitudinal adjustment motor
- V130 Front passenger seat lumbar support height adjustment motor
- M128 Earth connection 1, in front passenger seat backrest wiring harness
- * Pre-wired component

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

8-speed automatic gearbox 0DR , (G1F@1X2)


From May 2017

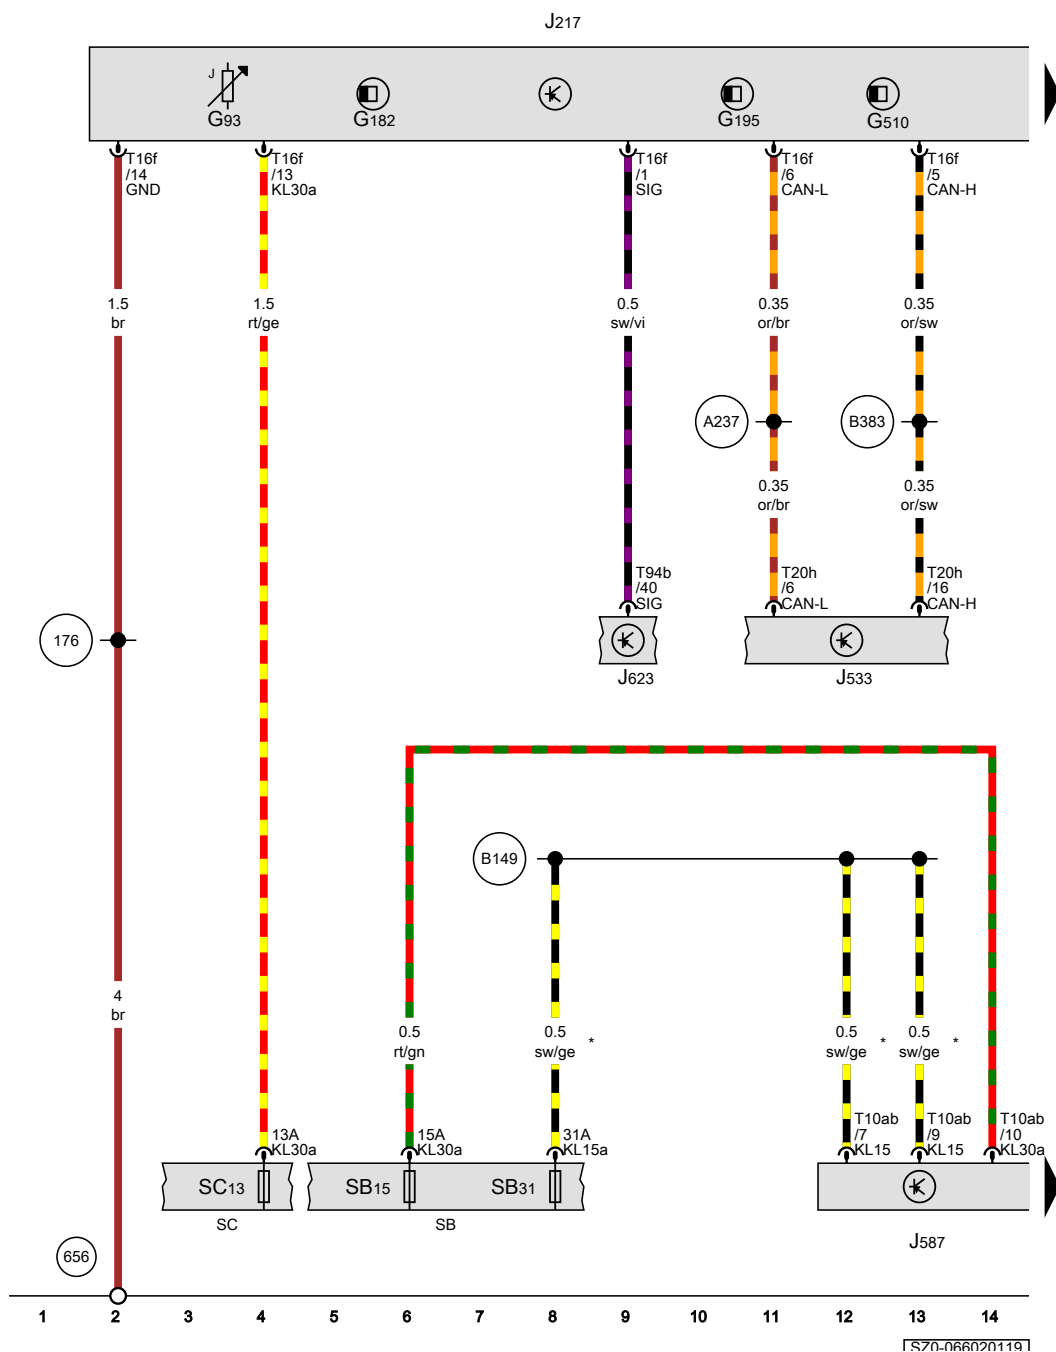

Automatic gearbox control unit, Selector lever sensors control unit, Fuse holder B, Fuse holder C

- G93 Gearbox oil temperature sender
- G182 Gearbox input speed sender
- G195 Gearbox output speed sender
- G510 Temperature sender in control unit
- J217 Automatic gearbox control unit
- J533 Data bus diagnostic interface
- J587 Selector lever sensors control unit
- J623 Engine/motor control unit
- SB Fuse holder B
- SC13 Fuse 13 on fuse holder C
- SB15 Fuse 15 on fuse holder B
- SB31 Fuse 31 on fuse holder B
- SC Fuse holder C
- T10ab 10-pin connector, red
- T16f 16-pin connector, black
- T20h 20-pin connector, red
- T94b 94-pin connector, black
- 176 Earth connection, in right headlight wiring harness
- 656 Earth point, on right headlight
- A237 Connection 1 (powertrain CAN bus, low), in dash panel wiring harness
- B149 Positive connection 2 (15a), in interior wiring harness
- B383 Connection 1 (powertrain CAN bus, high), in main wiring harness
- * From November 2017

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

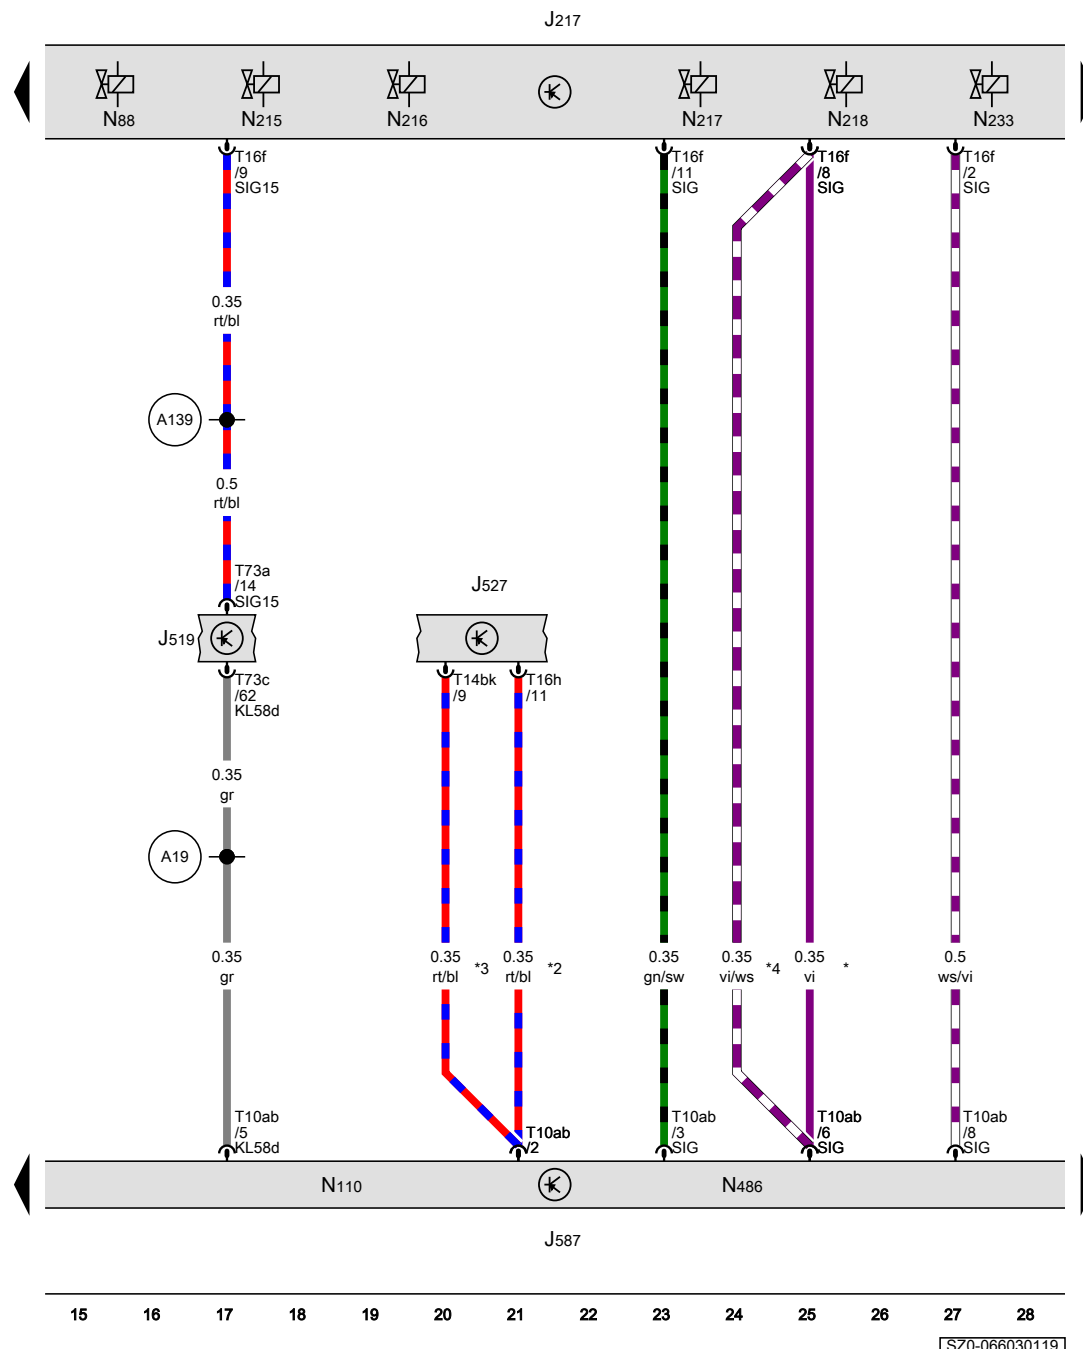

Automatic gearbox control unit, Selector lever sensors control unit

- J217 Automatic gearbox control unit
- J519 Onboard supply control unit
- J527 Steering column electronics control unit
- J587 Selector lever sensors control unit
- N88 Solenoid valve 1
- N110 Selector lever lock solenoid
- N215 Automatic gearbox pressure regulating valve 1
- N216 Automatic gearbox pressure regulating valve 2
- N217 Automatic gearbox pressure regulating valve 3
- N218 Automatic gearbox pressure regulating valve 4
- N233 Automatic gearbox pressure regulating valve 5
- N486 Parking lock solenoid
- T10ab 10-pin connector, red
- T14bk 14-pin connector, black
- T16f 16-pin connector, black
- T16h 16-pin connector, black
- T73a 73-pin connector, black
- T73c 73-pin connector, black
- A19 Connection (58d), in dash panel wiring harness
- A139 Connection 3 (15) in dash panel wiring harness
- * Up to November 2017
- *2 For models with no multifunction steering wheel
- *3 For models with multifunction steering wheel
- *4 From November 2017

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink

J217




Automatic gearbox control unit, Selector lever sensors control unit, Selector lever position display

- G676 Gear sensor
- G747 Parking lock sender
- J217 Automatic gearbox control unit
- J587 Selector lever sensors control unit
- N371 Automatic gearbox pressure regulating valve 6
- N443 Automatic gearbox pressure regulating valve 7
- N485 Accumulator solenoid
- N509 Gearbox oil cooling valve
- T10ab 10-pin connector, red
- T10as 10-pin connector, black
- V475 Auxiliary hydraulic pump 1 for gearbox oil
- Y6 Selector lever position display

285 Earth connection 7, in interior wiring harness

685 Earth point 1, on front of right longitudinal member

Y6

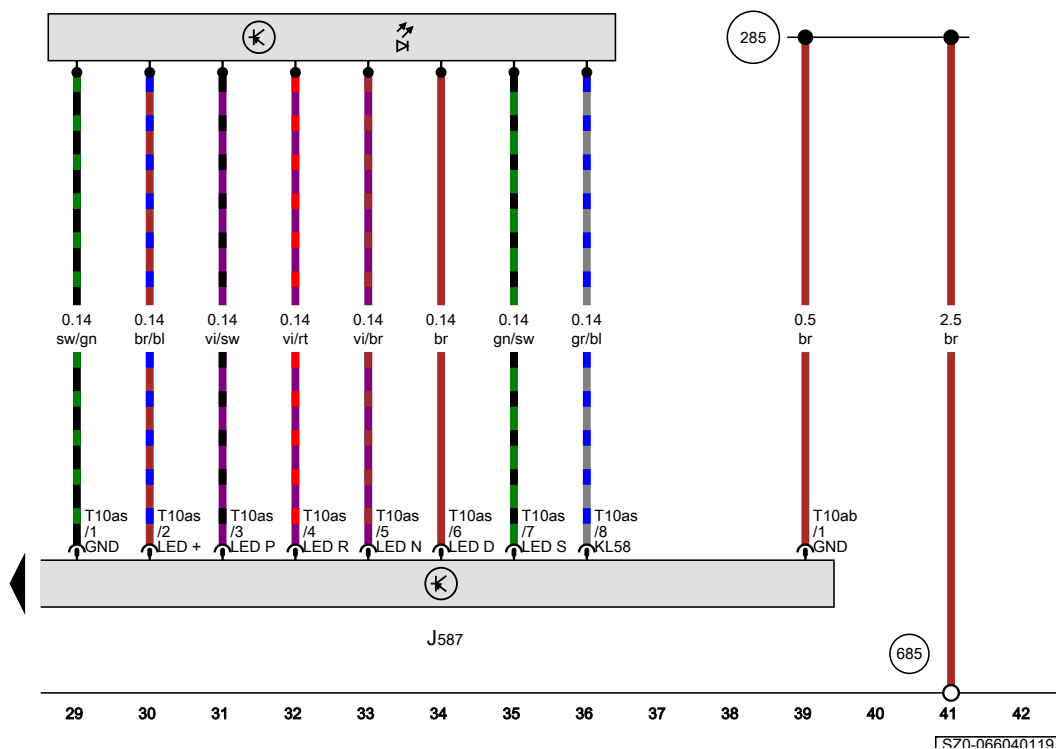

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

8-speed automatic gearbox 09Q , (G1F@1X0@G1G@1X1)

From May 2017


Automatic gearbox control unit, Selector lever sensors control unit, Fuse holder B, Fuse holder C


- | | |
|-------|-------------------------------------|
| E313 | Selector lever |
| F125 | Multifunction switch |
| J217 | Automatic gearbox control unit |
| J519 | Onboard supply control unit |
| J587 | Selector lever sensors control unit |
| SB | Fuse holder B |
| SC13 | Fuse 13 on fuse holder C |
| SB15 | Fuse 15 on fuse holder B |
| SC | Fuse holder C |
| T10ab | 10-pin connector, red |
| T73a | 73-pin connector, black |
| T73c | 73-pin connector, black |
| T81b | 81-pin connector, black |

- 84 Earth connection, engine block, in front right wiring harness
- 655 Earth point, on left headlight
- A19 Connection (58d), in dash panel wiring harness
- A139 Connection 3 (15) in dash panel wiring harness
- U4 Connection (30), in automatic gearbox wiring harness

* Up to November 2017
*2 From November 2017

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink

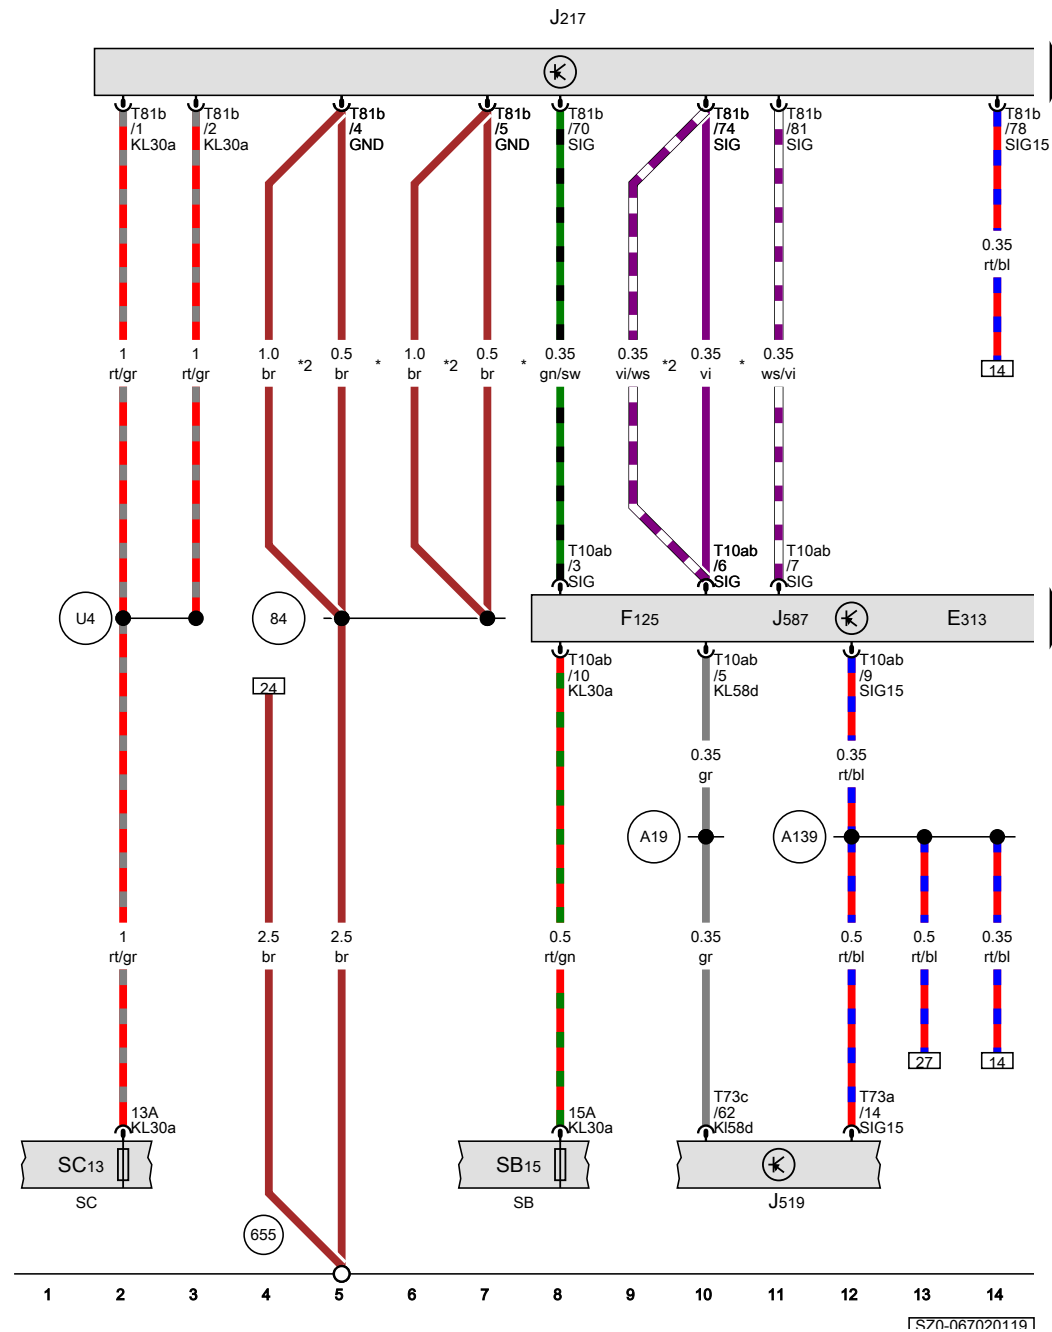

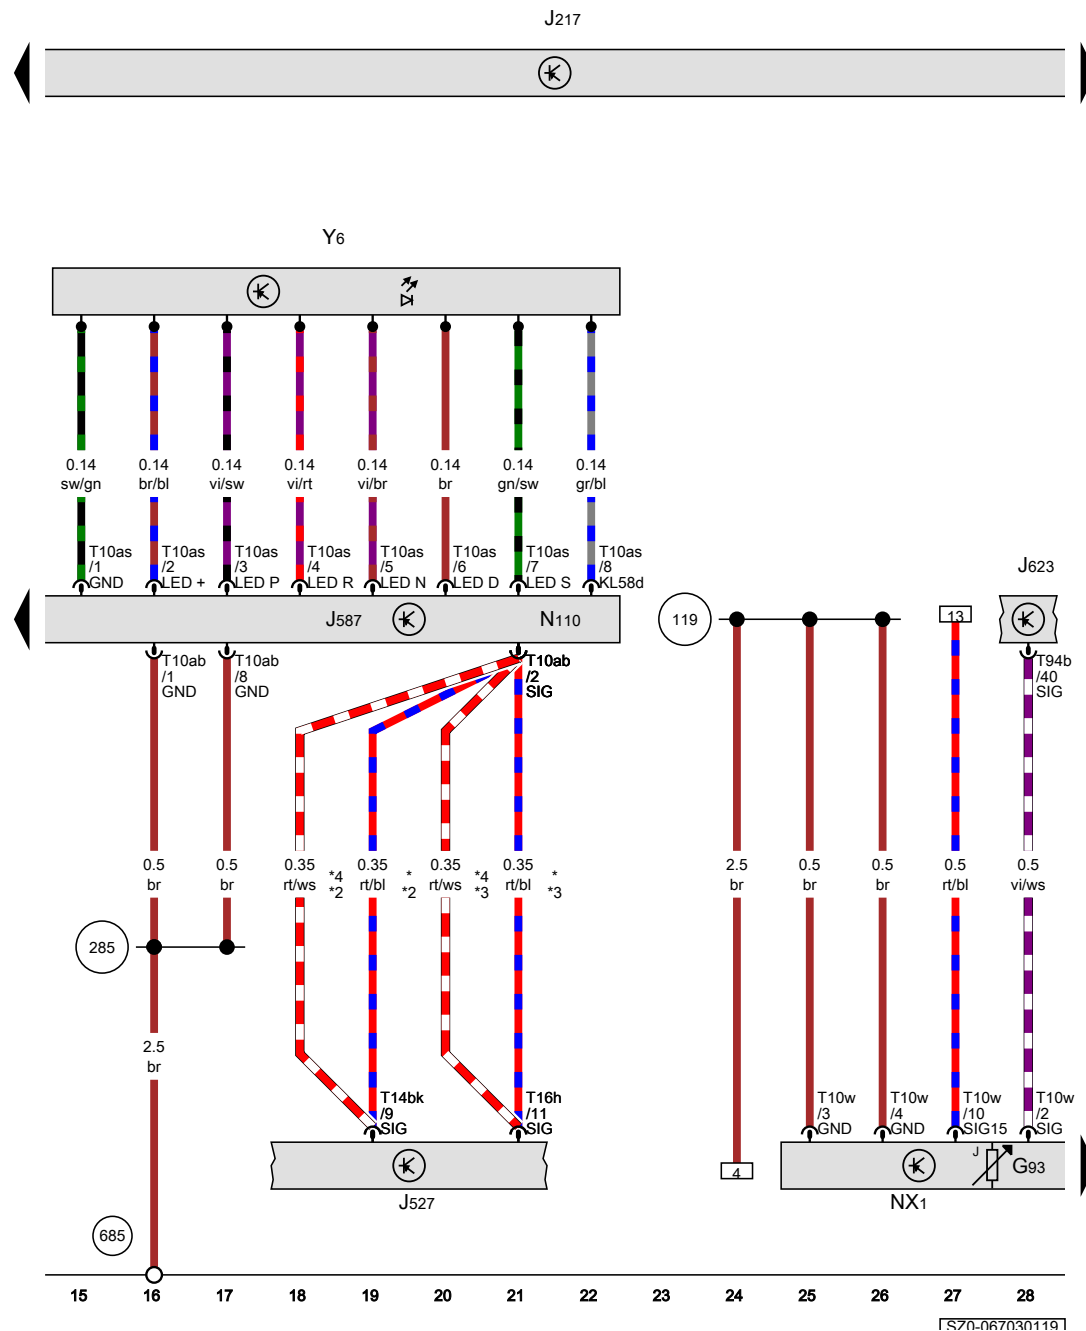


Automatic gearbox control unit, Selector lever sensors control unit, Gearbox

- G93 Gearbox oil temperature sender
- J217 Automatic gearbox control unit
- J527 Steering column electronics control unit
- J587 Selector lever sensors control unit
- J623 Engine/motor control unit
- NX1 Gearbox
- N110 Selector lever lock solenoid
- T10ab 10-pin connector, red
- T10as 10-pin connector, black
- T10w 10-pin connector, black
- T14bk 14-pin connector, black
- T16h 16-pin connector, black
- T94b 94-pin connector, black
- Y6 Selector lever position display

- 119 Earth connection 1, in headlight wiring harness
- 285 Earth connection 7, in interior wiring harness
- 685 Earth point 1, on front of right longitudinal member
- * Up to November 2017
- *2 For models with multifunction steering wheel
- *3 For models with no multifunction steering wheel
- *4 From November 2017


Automatic gearbox control unit, Gearbox

- J217 Automatic gearbox control unit
- NX1 Gearbox
- N88 Solenoid valve 1
- N89 Solenoid valve 2
- N215 Automatic gearbox pressure regulating valve 1
- N216 Automatic gearbox pressure regulating valve 2
- T10w 10-pin connector, black
- T28b 28-pin connector, black
- T81b 81-pin connector, black

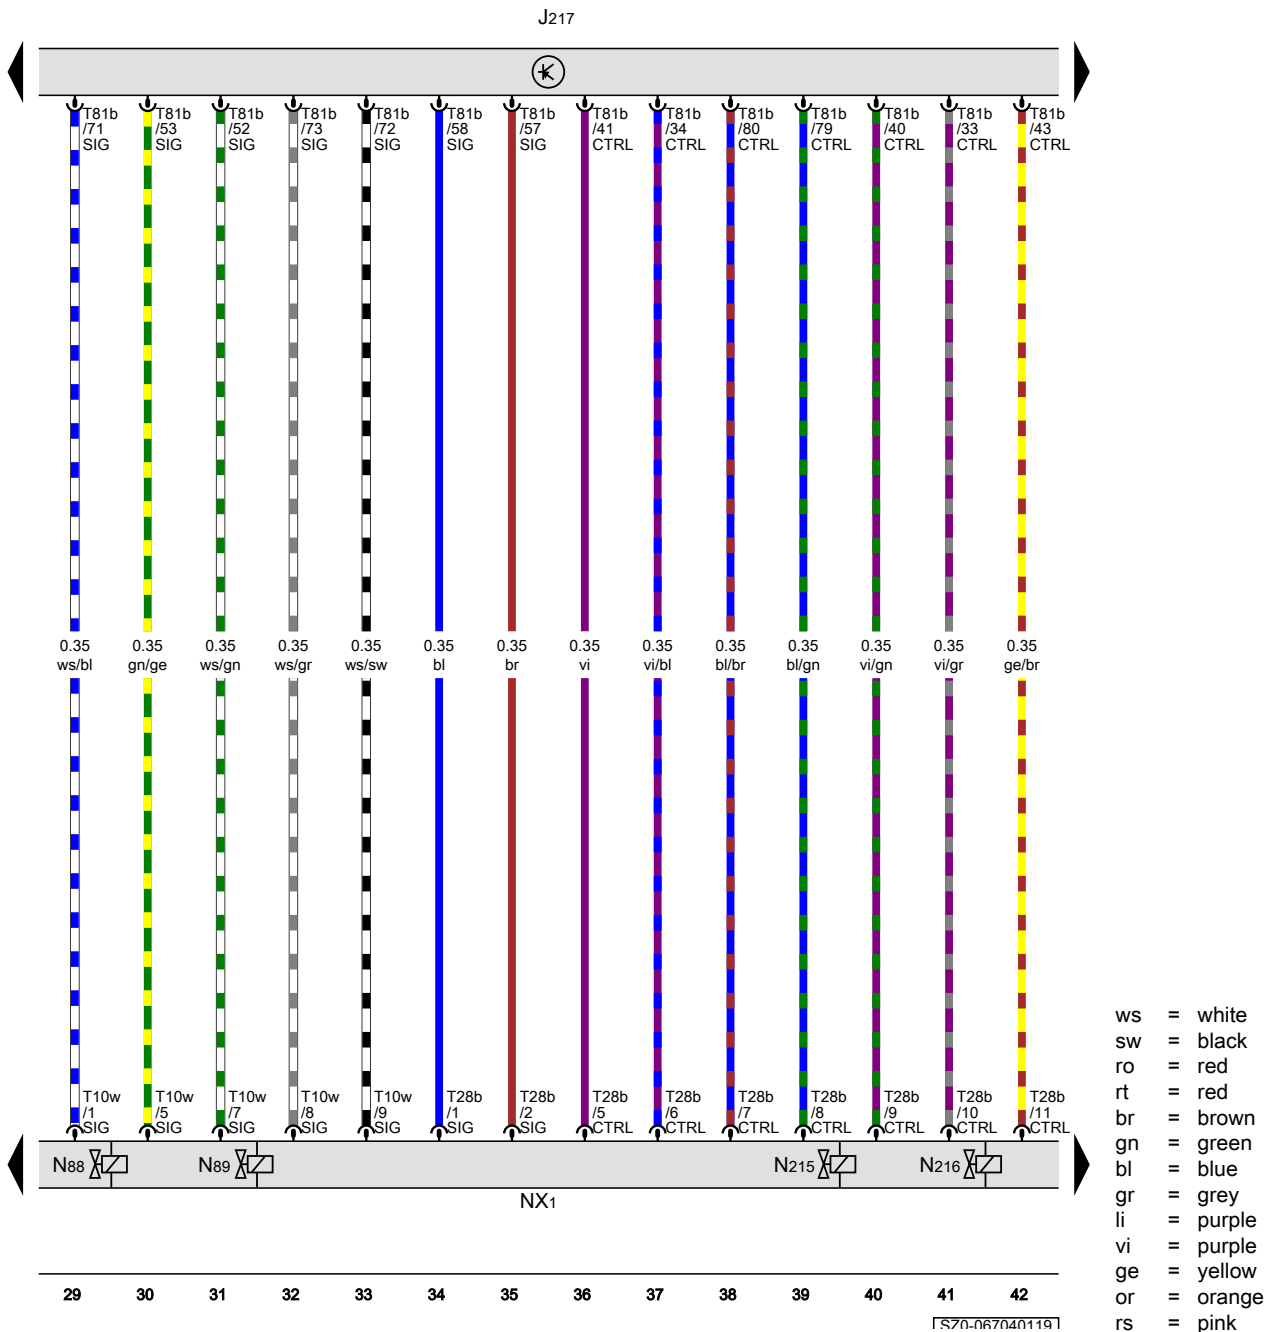


Automatic gearbox control unit, Gearbox

- G632 Gearbox input speed sender 1
- J217 Automatic gearbox control unit
- NX1 Gearbox
- N217 Automatic gearbox pressure regulating valve 3
- N218 Automatic gearbox pressure regulating valve 4
- N233 Automatic gearbox pressure regulating valve 5
- N371 Automatic gearbox pressure regulating valve 6
- N510 Automatic gearbox pressure regulating valve 8
- T28b 28-pin connector, black
- T81b 81-pin connector, black
- * Up to November 2017
- *2 From November 2017

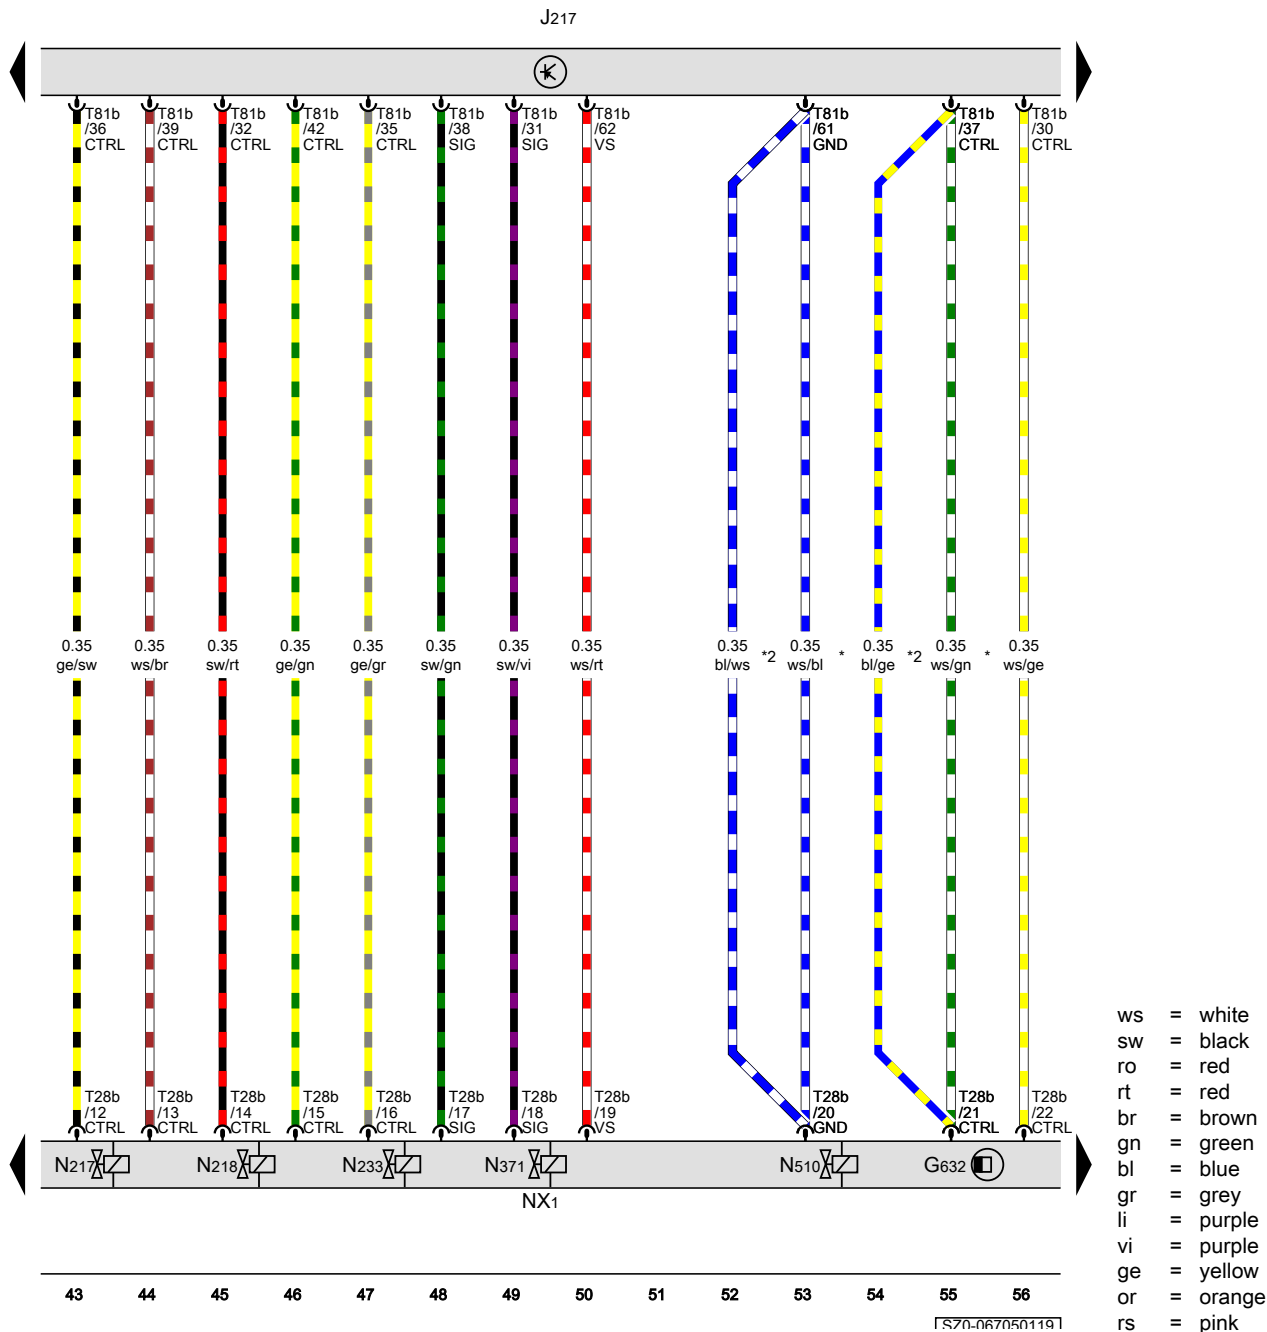

Automatic gearbox control unit, Gearbox

- G195 Gearbox output speed sender
- J217 Automatic gearbox control unit
- J533 Data bus diagnostic interface
- NX1 Gearbox
- T20h 20-pin connector, red
- T28b 28-pin connector, black
- T81b 81-pin connector, black
- V475 Auxiliary hydraulic pump 1 for gearbox oil
- A237 Connection 1 (powertrain CAN bus, low), in dash panel wiring harness
- B383 Connection 1 (powertrain CAN bus, high), in main wiring harness

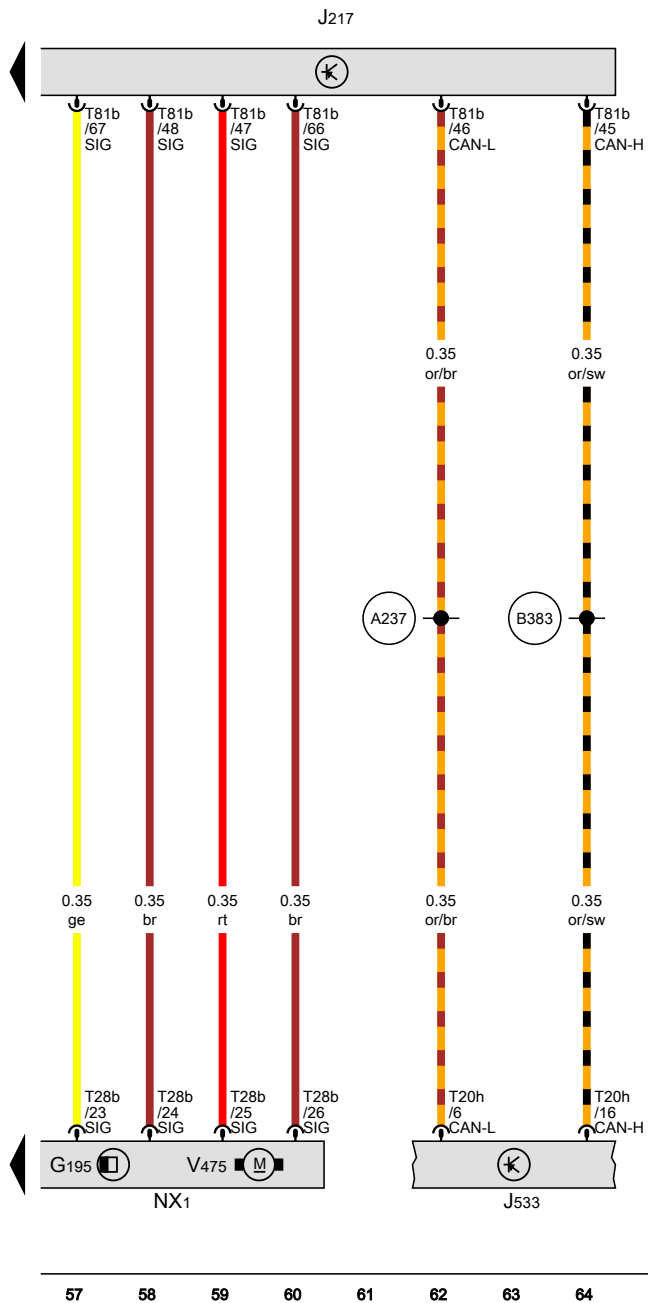


Preparation for 3-way tip function , (Henschel)

From March 2017

Main switch for hydraulic system, Switch with approach function for zero position of tipper mechanism, Tipping mechanism limitation switch, Warning buzzer for hydraulic system, Hydraulic system, Hydraulic pump for tilting/tipping mechanism


- E950 Main switch for hydraulic system
- E951 Switch with approach function for zero position of tipper mechanism
- F239 Tipping mechanism limitation switch
- H35 Warning buzzer for hydraulic system
- N248 Tipping mechanism valve
- T1akx 1-pin connector
- T1alc 1-pin connector
- T2xz 2-pin connector
- T2ya 2-pin connector
- T2yb 2-pin connector
- T2yc 2-pin connector
- T7ag 7-pin connector, black
- TDSK1 Coupling point 1 for 3-way tipper, on longitudinal member
- TDSK2 Coupling point 2 for 3-way tipper, on longitudinal member
- TDSK3 Coupling point 3 for 3-way tipper, on longitudinal member
- VX88 Hydraulic system
- V160 Hydraulic pump for tilting/tipping mechanism
- * see applicable current flow diagram for preparation for 3-way tip function

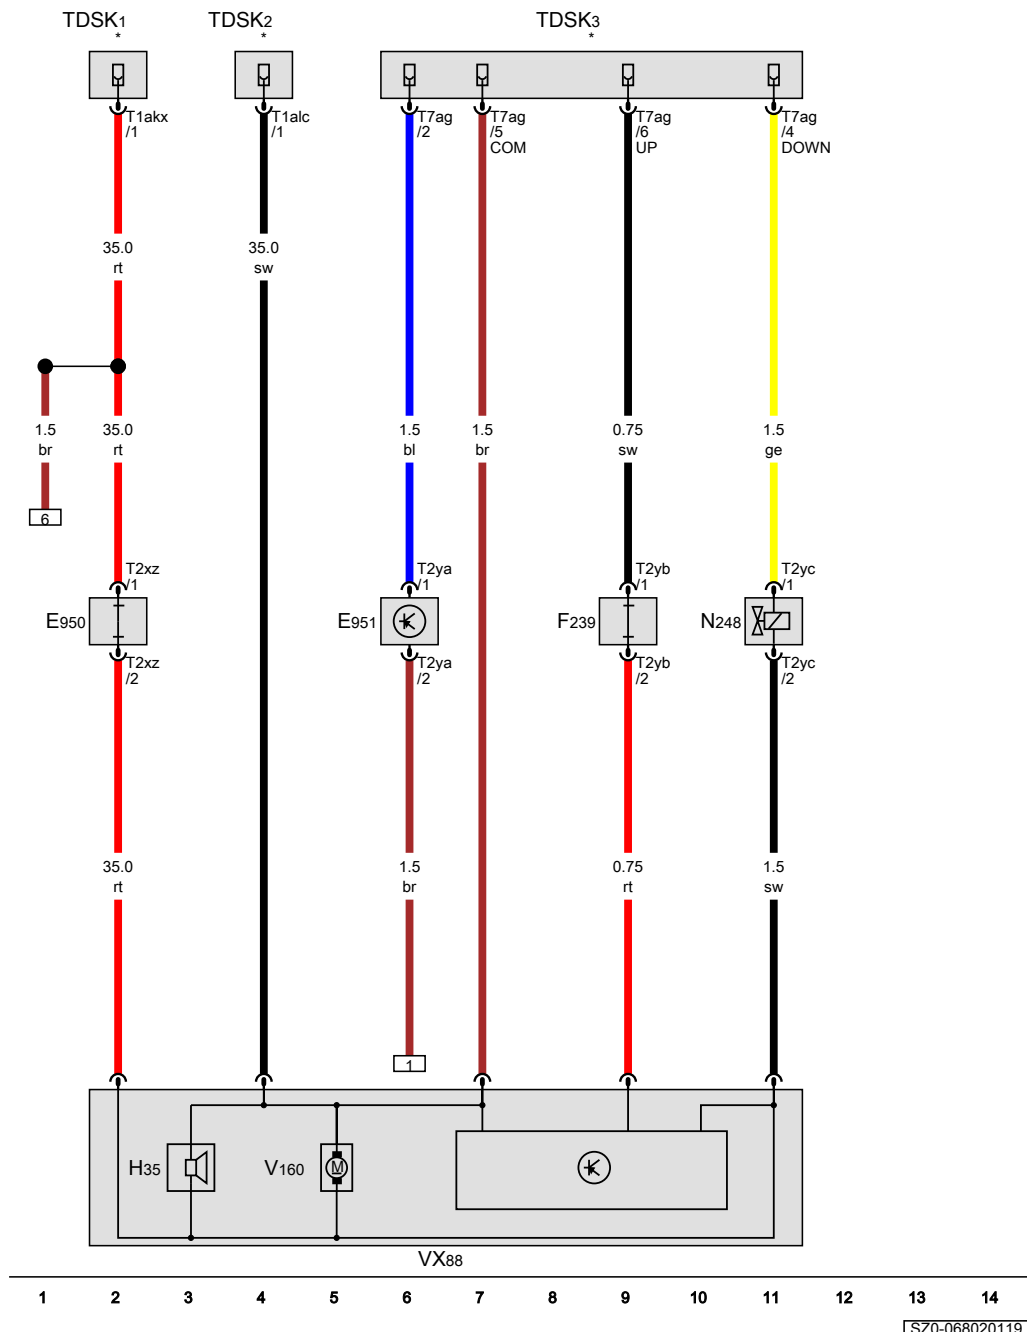

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

Preparation for 3-way tip function , (Schoon)

From March 2017

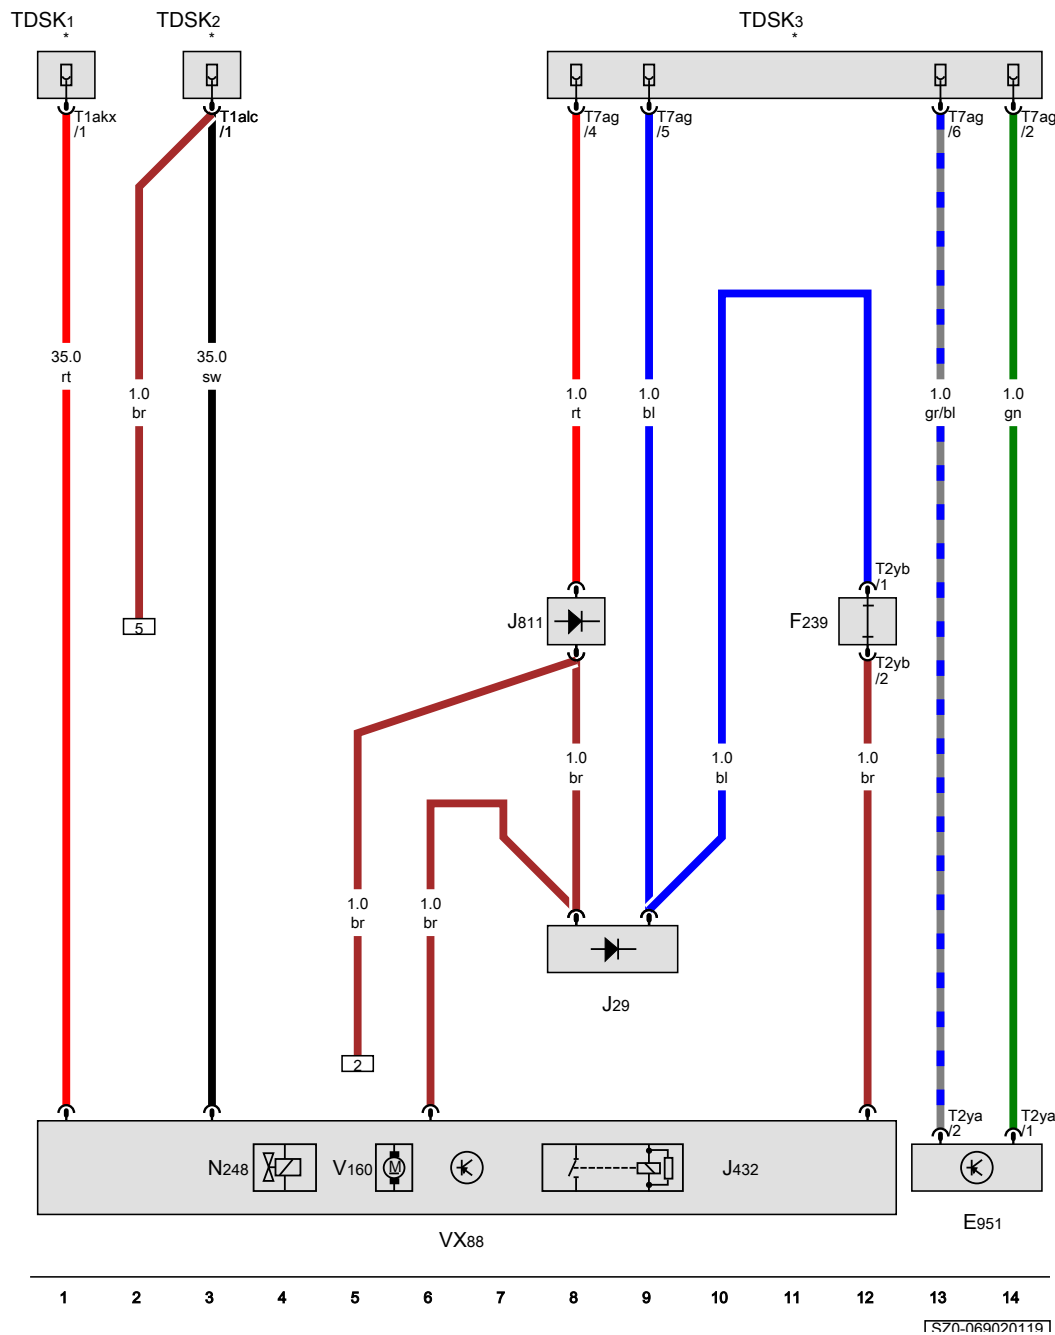

Switch with approach function for zero position of tipper mechanism, Tipping mechanism limitation switch, Blocking diode, Blocking diode 2, Hydraulic system

- E951 Switch with approach function for zero position of tipper mechanism
- F239 Tipping mechanism limitation switch
- J29 Blocking diode
- J432 Tipping mechanism relay
- J811 Blocking diode 2
- N248 Tipping mechanism valve
- T1akx 1-pin connector
- T1alc 1-pin connector
- T2ya 2-pin connector
- T2yb 2-pin connector
- T7ag 7-pin connector, black
- TDSK1 Coupling point 1 for 3-way tipper, on longitudinal member
- TDSK2 Coupling point 2 for 3-way tipper, on longitudinal member
- TDSK3 Coupling point 3 for 3-way tipper, on longitudinal member
- VX88 Hydraulic system
- V160 Hydraulic pump for tilting/tipping mechanism
- * see applicable current flow diagram for preparation for 3-way tip function

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink


Box body , (9CP),(KA5),(Schmitz Cargobull)

From May 2017

Reversing camera

R189 Reversing camera
T2oh 2-pin connector, grey
T2oo 2-pin connector, grey
T3pc 3-pin connector, black
T4ez 4-pin connector, black
T4ji 4-pin connector, black
T8es 8-pin connector, black

252 Earth connection, in optional equipment wiring harness
259 Earth connection 2, in optional equipment wiring harness
X61 Positive connection (30), in optional equipment wiring harness
* Pre-wired component
*2 For models with reversing camera system
*3 For models with no reversing camera system

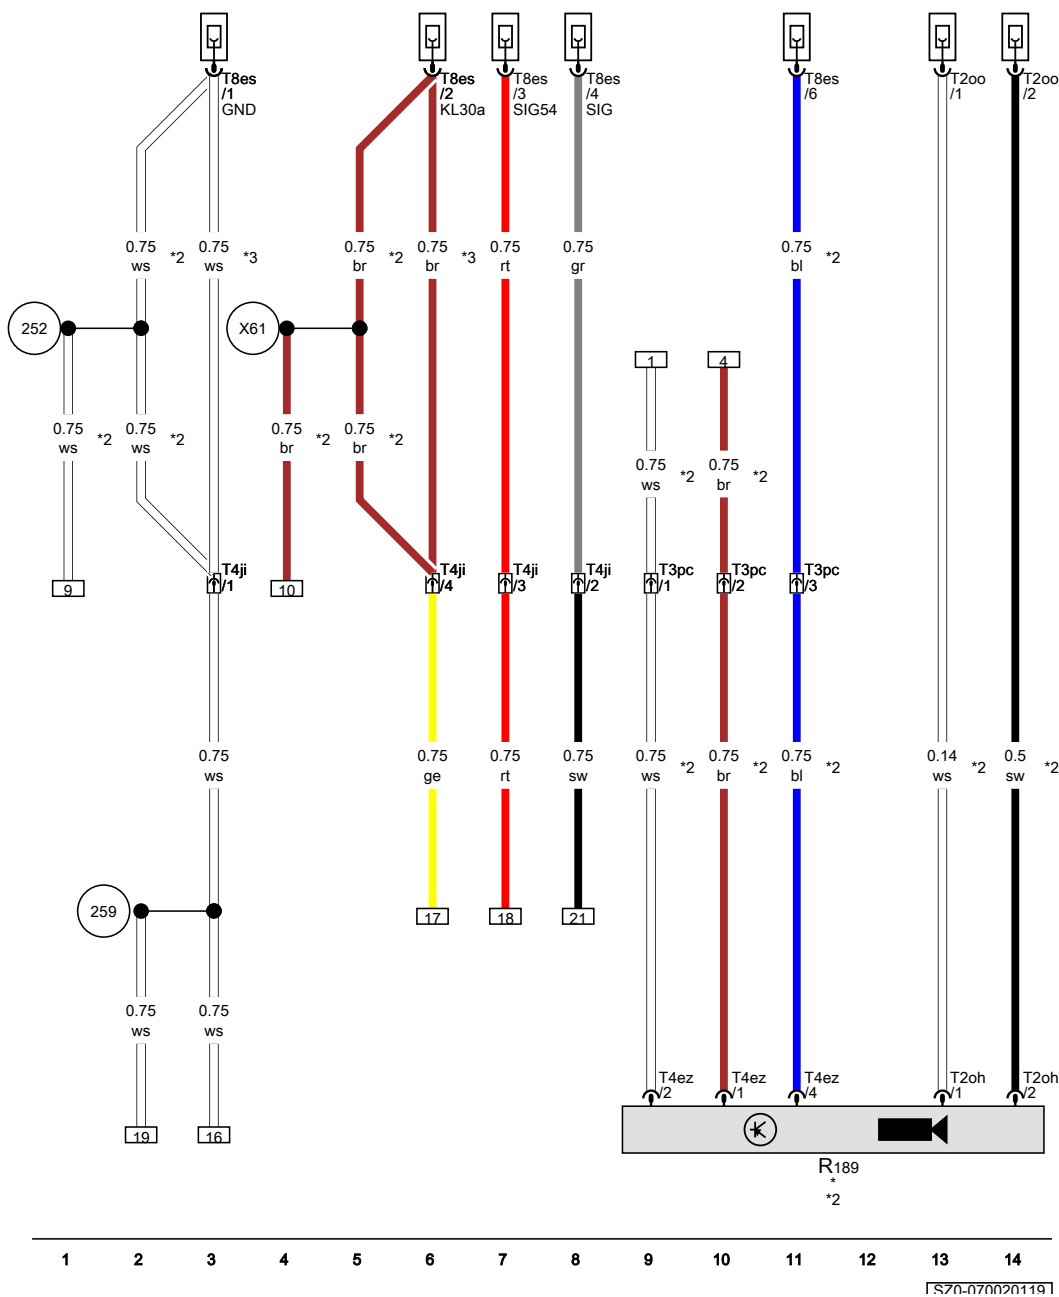

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink


High-level brake light bulb, Load area illumination bulb, Left end-outline marker lamp bulb, Right end-outline marker lamp bulb, Elevated side light, front left, Elevated side light, front right

- M25 High-level brake light bulb
- M53 Load area illumination bulb
- M78 Left end-outline marker lamp bulb
- M79 Right end-outline marker lamp bulb
- M90 Elevated side light, front left
- M91 Elevated side light, front right
- T2xq 2-pin connector, black
- T2xr 2-pin connector, black
- T2xs 2-pin connector, black
- T2xt 2-pin connector, black
- T2xu 2-pin connector, black
- T2xv 2-pin connector
- T3pd 3-pin connector

453 Earth connection 3, in optional equipment wiring harness

X78 Connection 1, in optional equipment wiring harness


* Pre-wired component

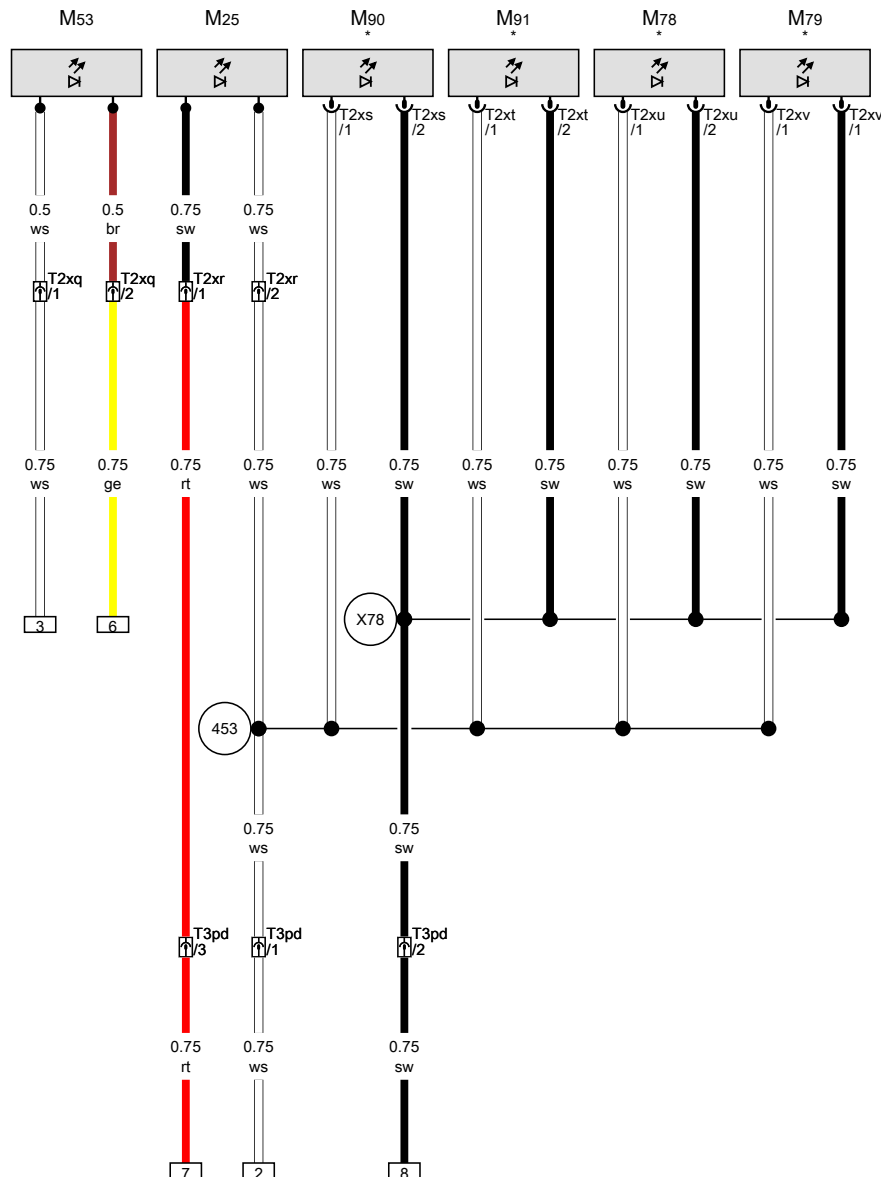

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

Box body , (Junge)

From May 2017

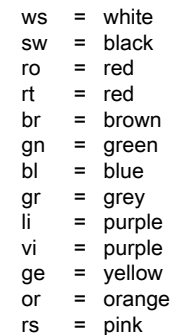


* Pre-wired component
*2 see applicable current flow diagram for convenience system
*3 see applicable current flow diagram for tail light clusters for dropside

Right tail light cluster, Left end-outline marker lamp bulb,
Right end-outline marker lamp bulb


- L47 Rear right fog light bulb
- M2 Right tail light bulb
- MX4 Right tail light cluster
- M8 Rear right turn signal bulb
- M10 Right brake light bulb
- M17 Right reversing light bulb
- M78 Left end-outline marker lamp bulb
- M79 Right end-outline marker lamp bulb
- T2xl 2-pin connector, black
- T2xm 2-pin connector
- T7av 7-pin connector, black
- T7ax 7-pin connector

- 259 Earth connection 2, in optional equipment wiring harness
- X54 Positive connection (58), in optional equipment wiring harness
- * see applicable current flow diagram for tail light clusters for dropside
- *2 Pre-wired component

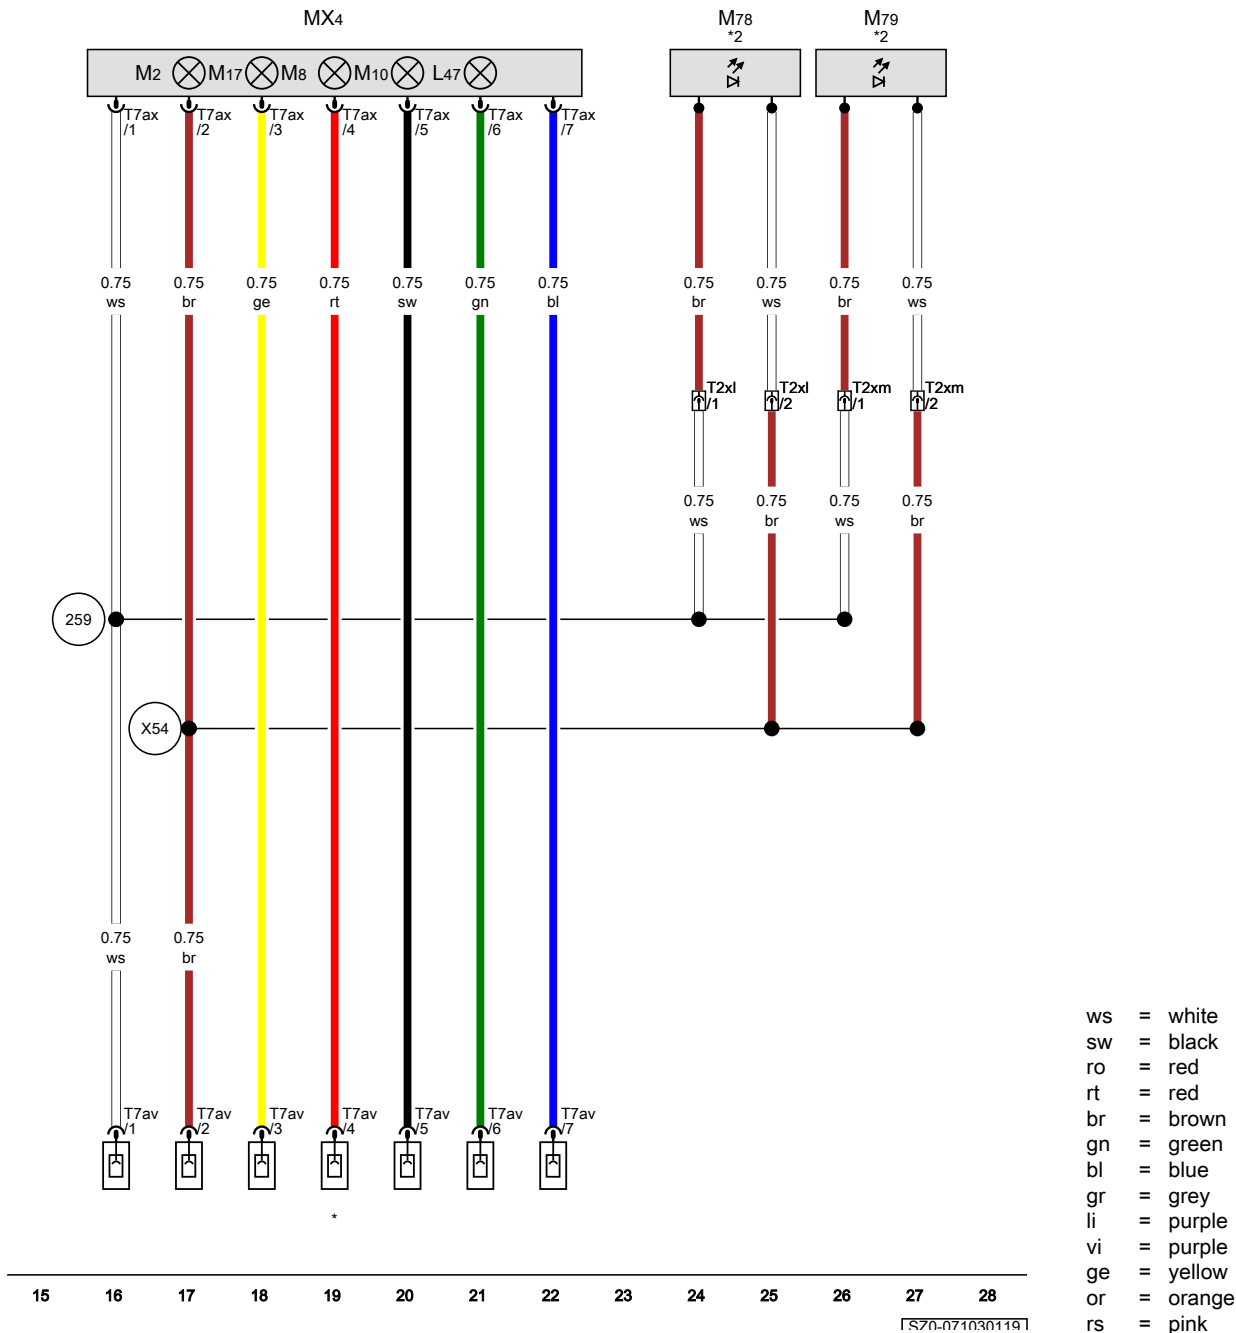

Box body , (Spi)


From May 2017

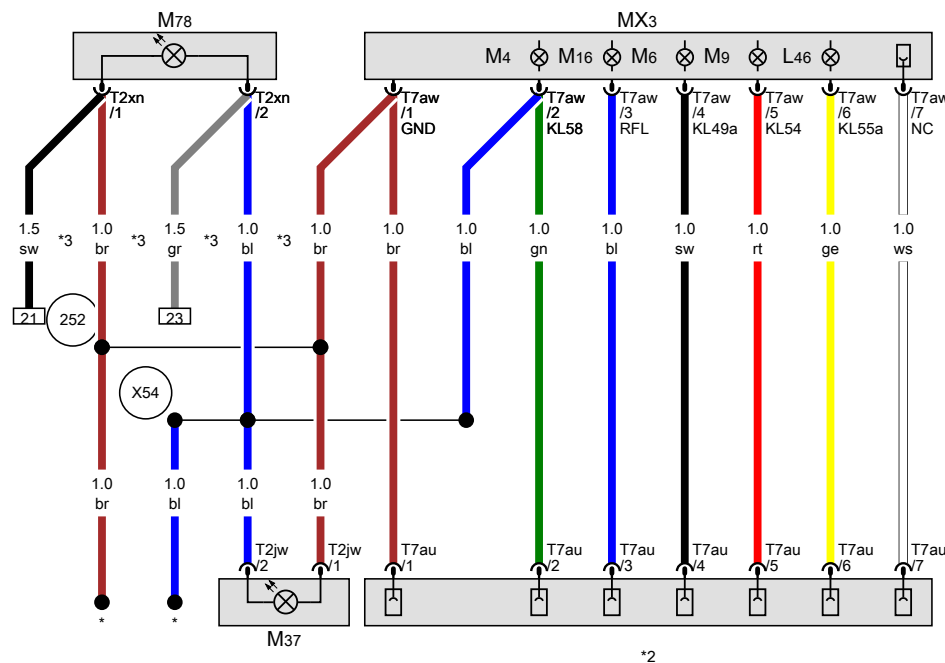

Left tail light cluster, Rear left side marker bulb, Left end-outline marker lamp bulb

- L46 Rear left fog light bulb
- MX3 Left tail light cluster
- M4 Left tail light bulb
- M6 Rear left turn signal bulb
- M9 Left brake light bulb
- M16 Left reversing light bulb
- M37 Rear left side marker bulb
- M78 Left end-outline marker lamp bulb
- T2jw 2-pin connector, black
- T2xn 2-pin connector, black
- T7au 7-pin connector, black
- T7aw 7-pin connector, black
- 252 Earth connection, in optional equipment wiring harness
- X54 Positive connection (58), in optional equipment wiring harness
- * Wiring open end
- *2 see applicable current flow diagram for tail light clusters for dropside
- *3 According to equipment

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

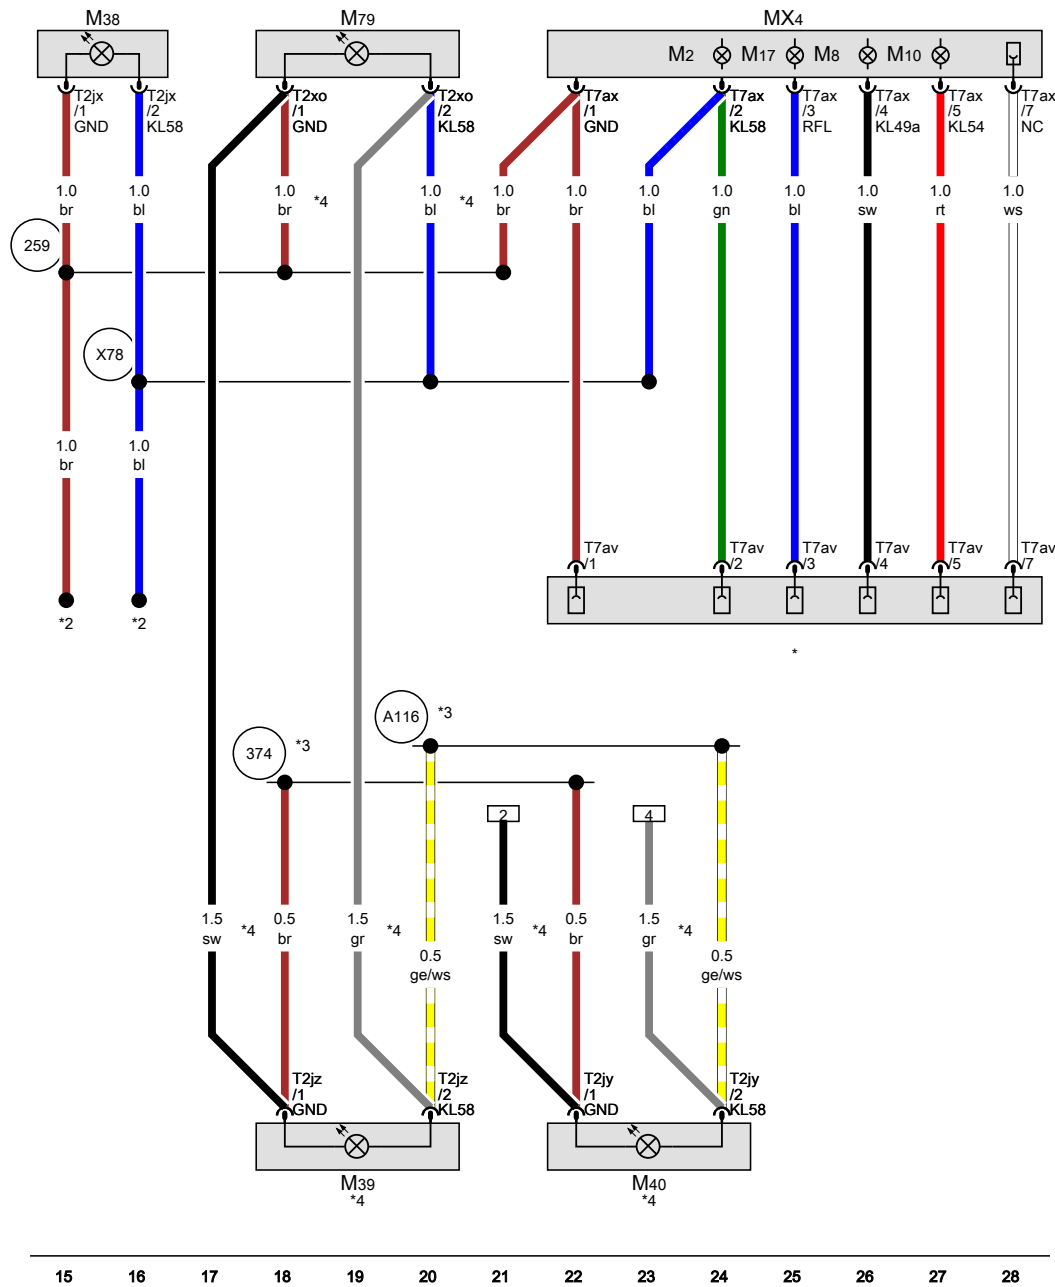

Right tail light cluster, Rear right side marker bulb, Centre left side marker bulb, Centre right side marker bulb, Right end-outline marker lamp bulb

- M2 Right tail light bulb
- MX4 Right tail light cluster
- M8 Rear right turn signal bulb
- M10 Right brake light bulb
- M17 Right reversing light bulb
- M38 Rear right side marker bulb
- M39 Centre left side marker bulb
- M40 Centre right side marker bulb
- M79 Right end-outline marker lamp bulb
- T2jx 2-pin connector, black
- T2jy 2-pin connector, black
- T2jz 2-pin connector, black
- T2xo 2-pin connector, black
- T7av 7-pin connector, black
- T7ax 7-pin connector, black

259 Earth connection 2, in optional equipment wiring harness

374 Earth connection 9, in main wiring harness

A116 Connection 2 (58d), in dash panel wiring harness

X78 Connection 1, in optional equipment wiring harness


* see applicable current flow diagram for tail light clusters for dropside

*2 Wiring open end

*3 see applicable current flow diagram for basic equipment

*4 According to equipment

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

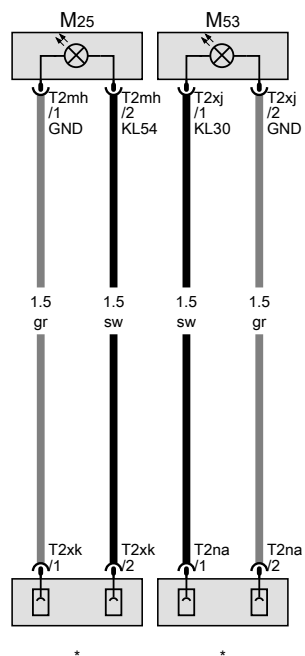

High-level brake light bulb, Load area illumination bulb

- M25 High-level brake light bulb
- M53 Load area illumination bulb
- T2mh 2-pin connector, black
- T2na 2-pin connector, black
- T2xj 2-pin connector, black
- T2xk 2-pin connector, black
- * see applicable current flow diagram for convenience system


ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

Tail lift , (Bär)


From May 2017

Tail lift control unit, Hydraulic system valve 1, Fuse 1 in fuse holder, Coupling point 3 for tail lift

- J1161 Tail lift control unit
- N461 Hydraulic system valve 1
- S1 Fuse 1 in fuse holder
- T7ab 7-pin connector, black
- TLBW3 Coupling point 3 for tail lift, on underbody, near cross panel

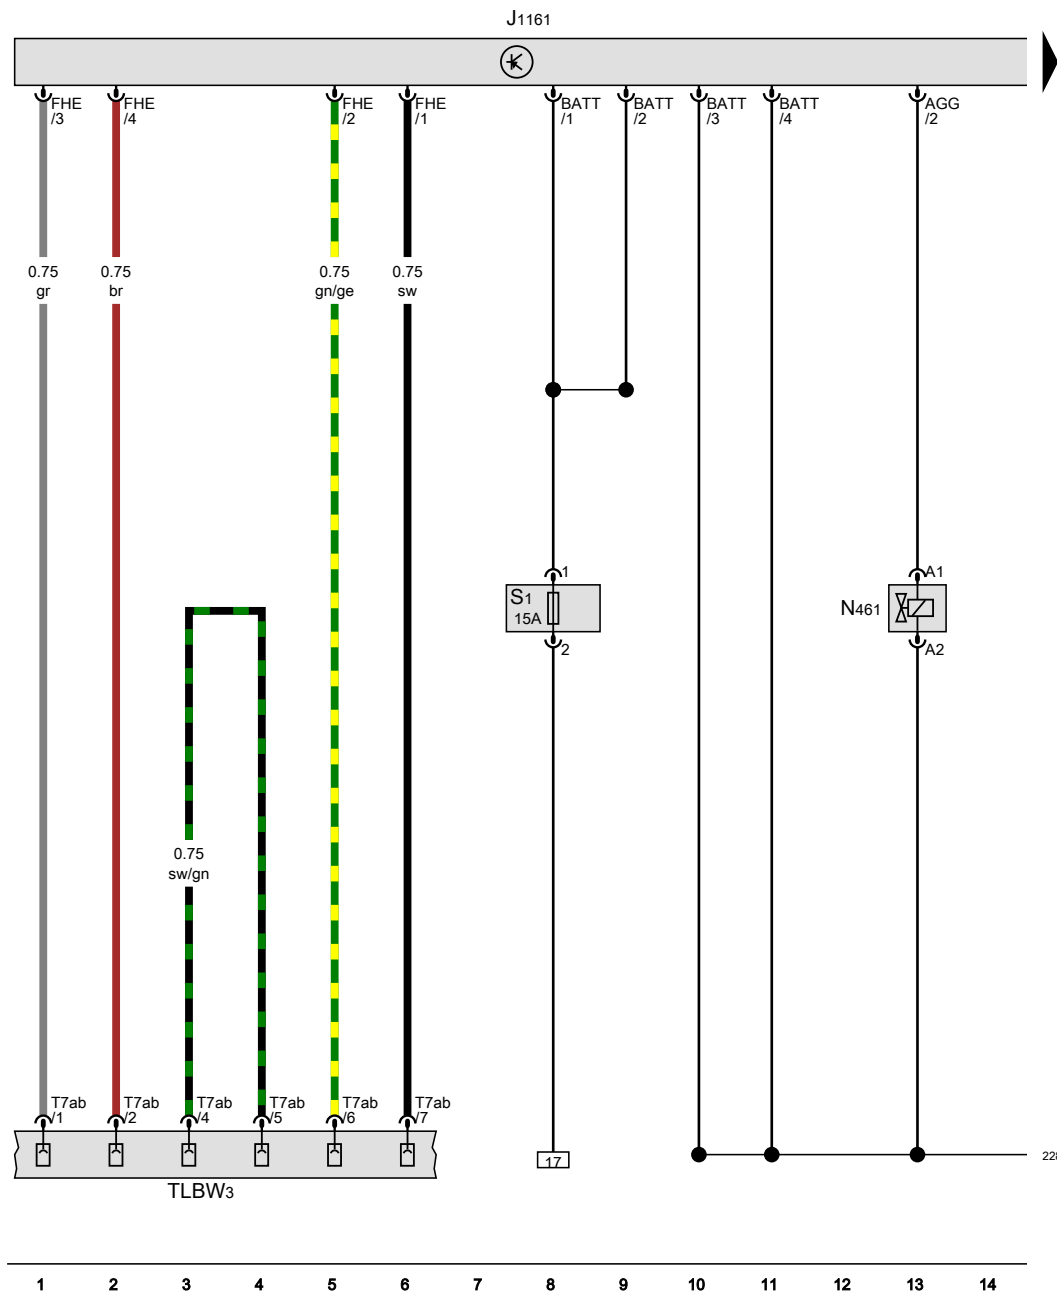

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

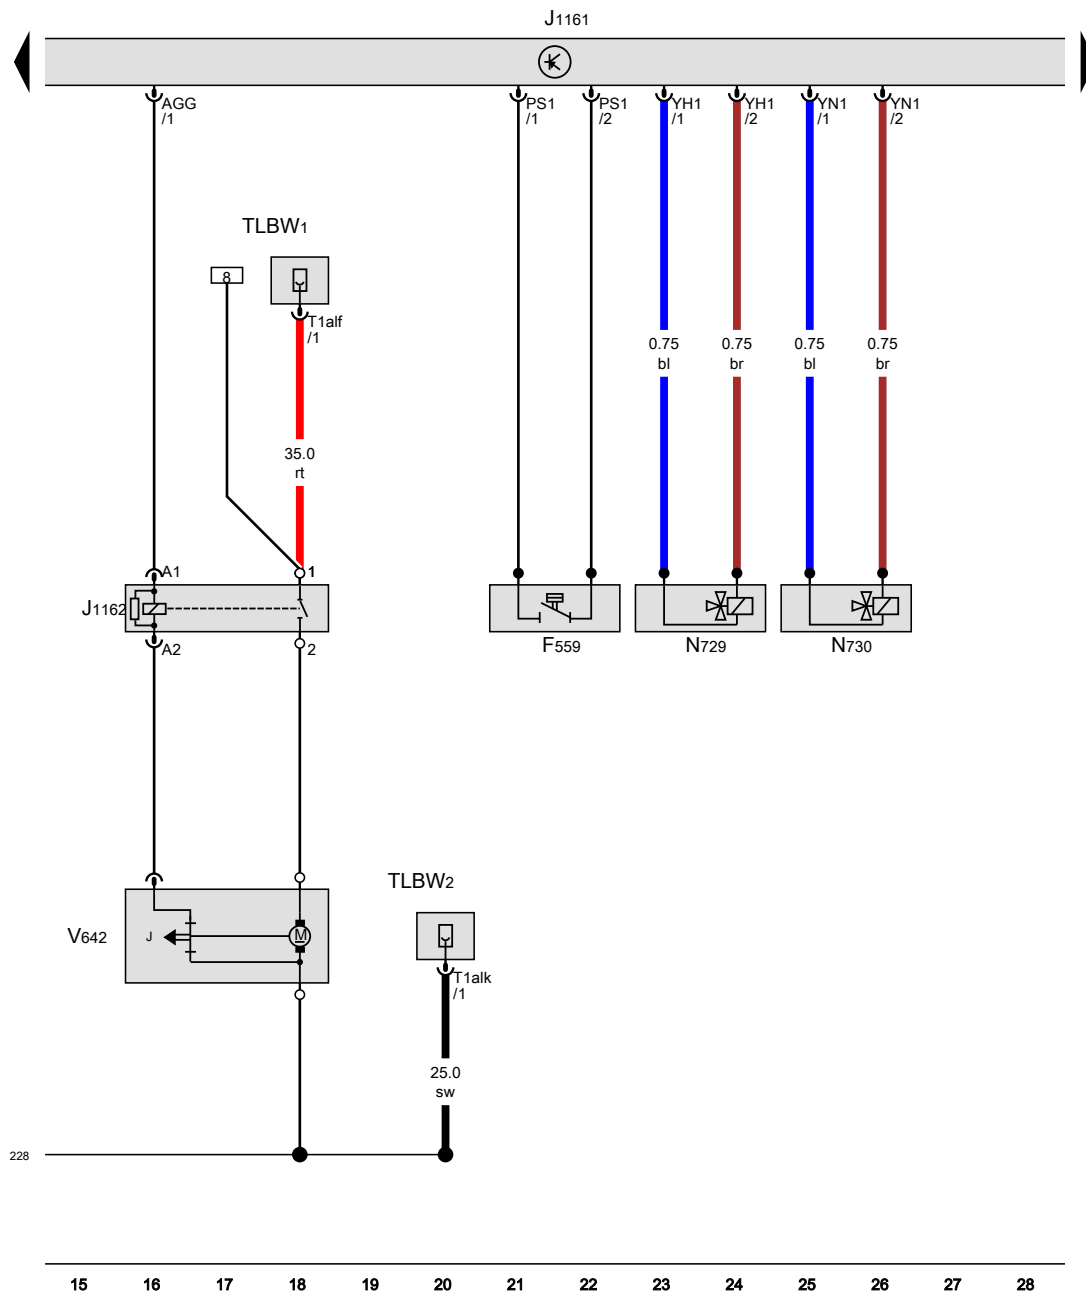

[S70-073030119]


ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink


Tail lift pressure switch, Tail lift control unit, Hydraulics motor relay, Pop-up cylinder solenoid valve, Lock cylinder solenoid valve, Tail lift hydraulics motor

- F559 Tail lift pressure switch
- J1161 Tail lift control unit
- J1162 Hydraulics motor relay
- N729 Pop-up cylinder solenoid valve
- N730 Lock cylinder solenoid valve
- T1alf 1-pin connector, black
- T1alk 1-pin connector, black
- TLBW1 Coupling point 1 for tail lift
- TLBW2 Coupling point 2 for tail lift
- V642 Tail lift hydraulics motor

Tail lift operating unit, Tail lift control unit

EX56 Tail lift operating unit
F560 Switch 1 for tail lift operating unit
F561 Switch 2 for tail lift operating unit
J1161 Tail lift control unit

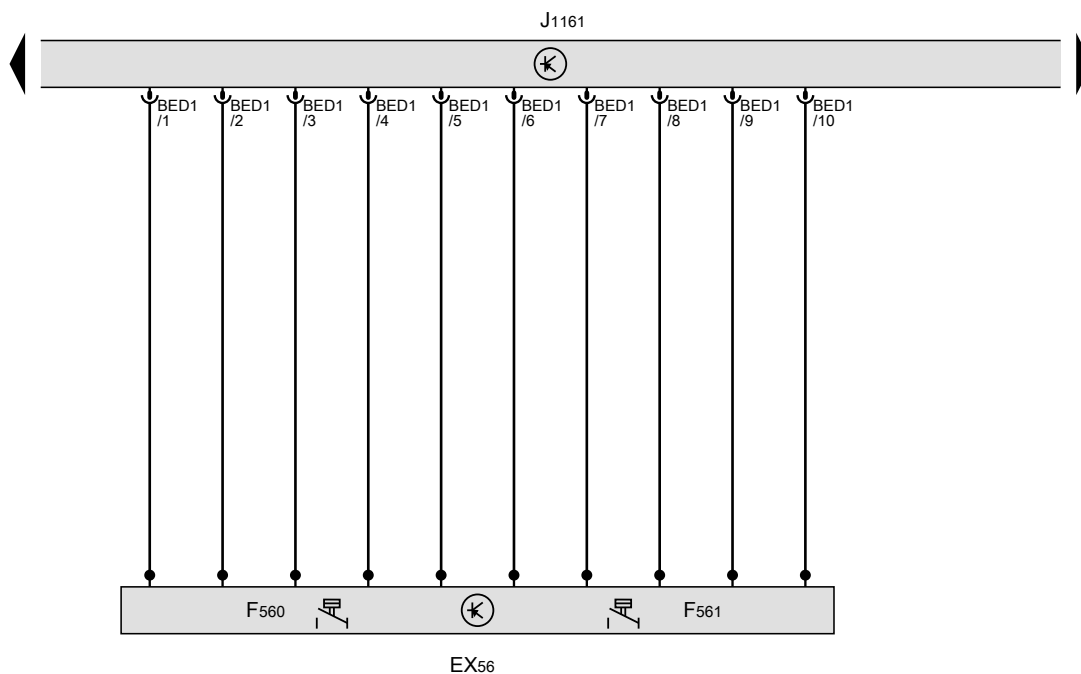

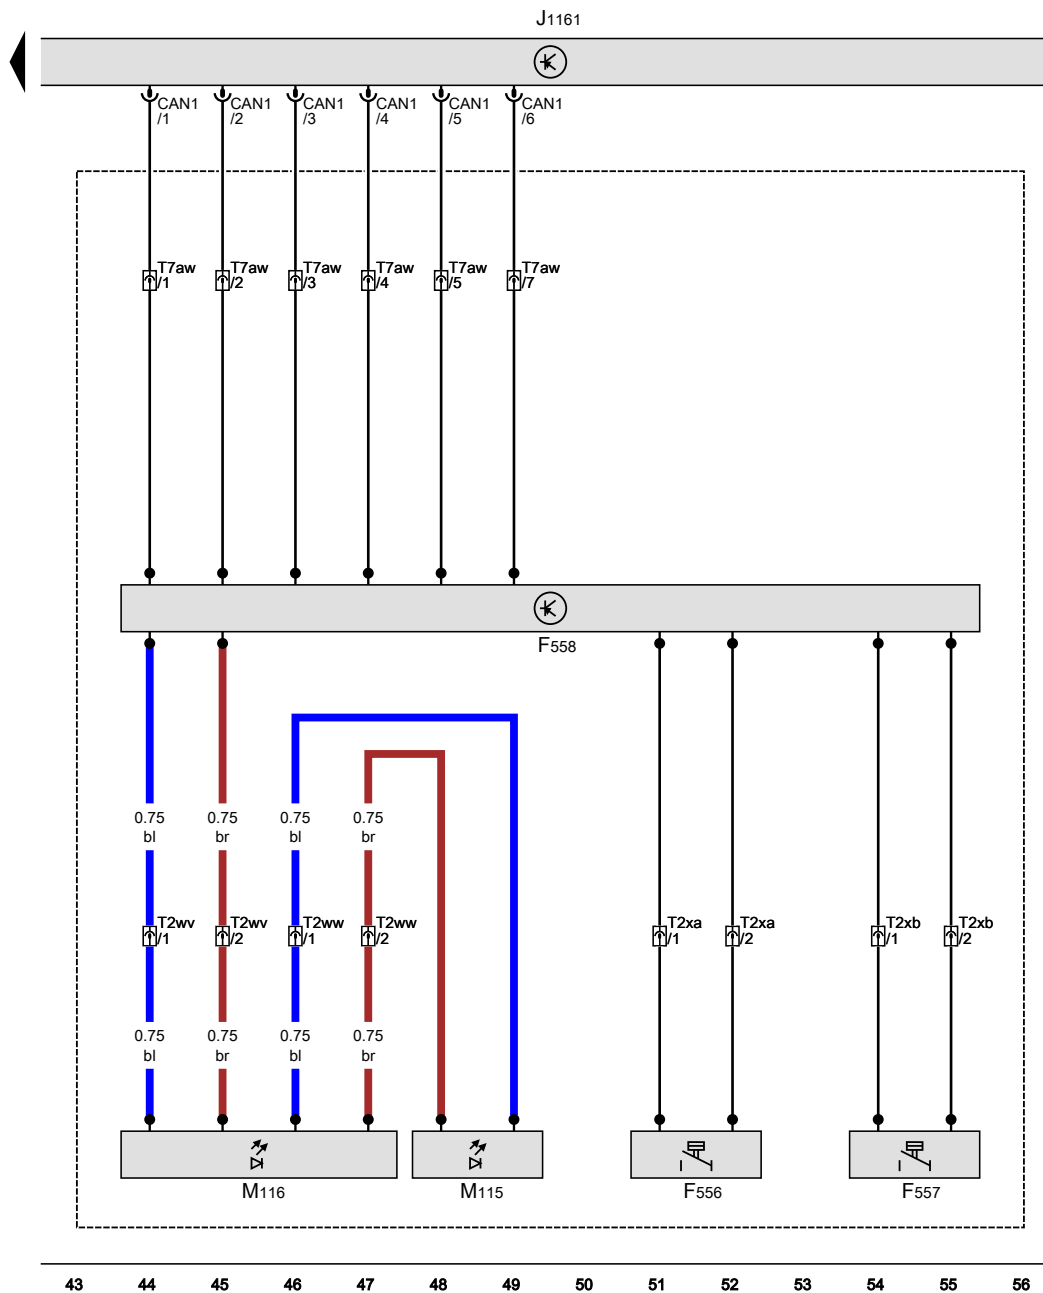


Foot-operated switch 1 for tail lift, Foot-operated switch 2 for tail lift, Foot-operated switch unit for tail lift, Tail lift control unit, Left additional turn signal, Right additional turn signal

- F556 Foot-operated switch 1 for tail lift, Tail lift
- F557 Foot-operated switch 2 for tail lift, Tail lift
- F558 Foot-operated switch unit for tail lift, Tail lift
- J1161 Tail lift control unit
- M115 Left additional turn signal, Tail lift
- M116 Right additional turn signal, Tail lift
- T2wv 2-pin connector, black
- T2ww 2-pin connector, black
- T2xa 2-pin connector, black
- T2xb 2-pin connector, black
- T7aw 7-pin connector, Coupling point for tail lift, black

Tail lift , (Sörensen)


From May 2017

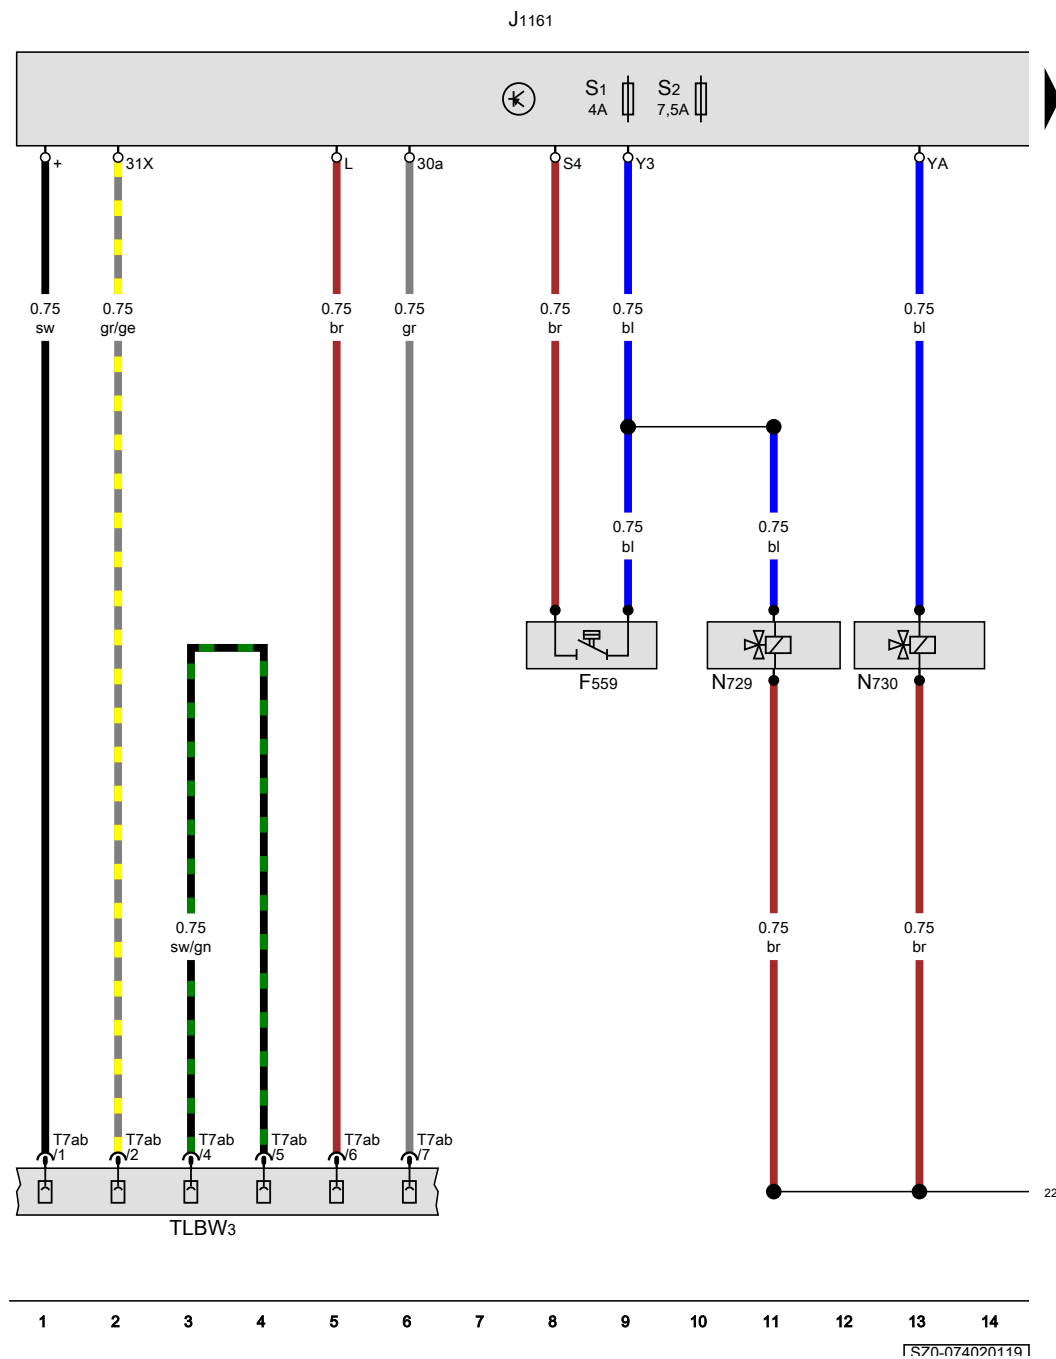

Tail lift pressure switch, Tail lift control unit, Pop-up cylinder solenoid valve, Lock cylinder solenoid valve, Fuse 1 in fuse holder, Fuse 2 in fuse holder, Coupling point 3 for tail lift

- F559 Tail lift pressure switch
- J1161 Tail lift control unit
- N729 Pop-up cylinder solenoid valve
- N730 Lock cylinder solenoid valve
- S1 Fuse 1 in fuse holder
- S2 Fuse 2 in fuse holder
- T7ab 7-pin connector, black
- TLBW3 Coupling point 3 for tail lift, on underbody, near cross panel


ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

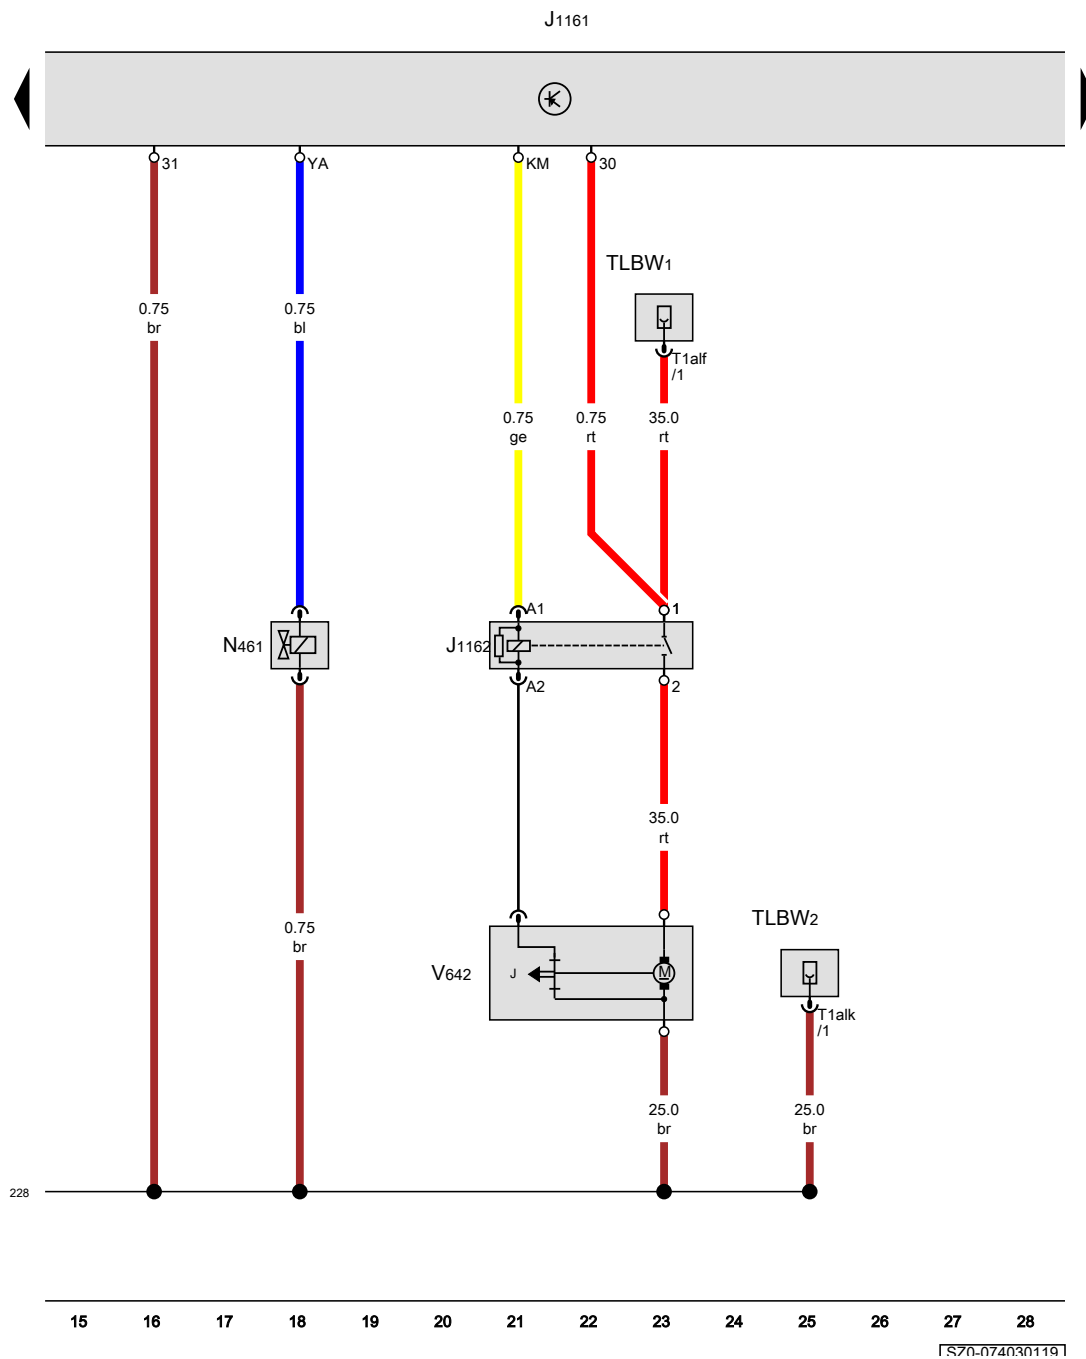


Tail lift control unit, Hydraulics motor relay, Hydraulic system valve 1, Tail lift hydraulics motor

- J1161 Tail lift control unit
- J1162 Hydraulics motor relay
- N461 Hydraulic system valve 1
- T1alf 1-pin connector, black
- T1alk 1-pin connector, black
- TLBW1 Coupling point 1 for tail lift
- TLBW2 Coupling point 2 for tail lift
- V642 Tail lift hydraulics motor

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

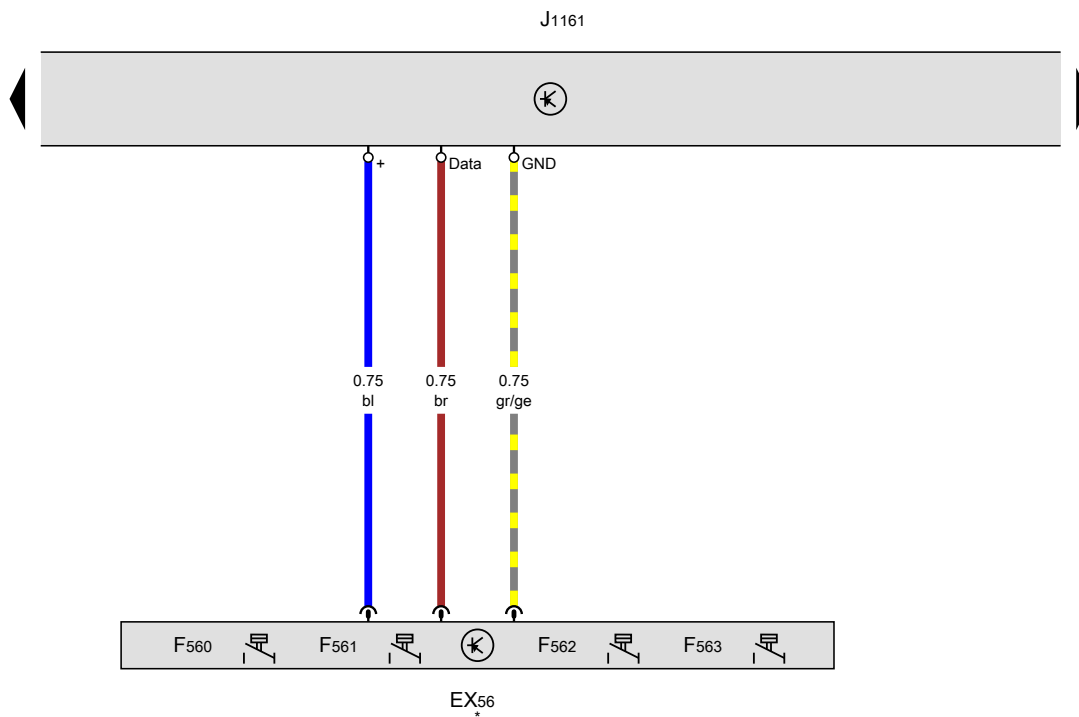

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

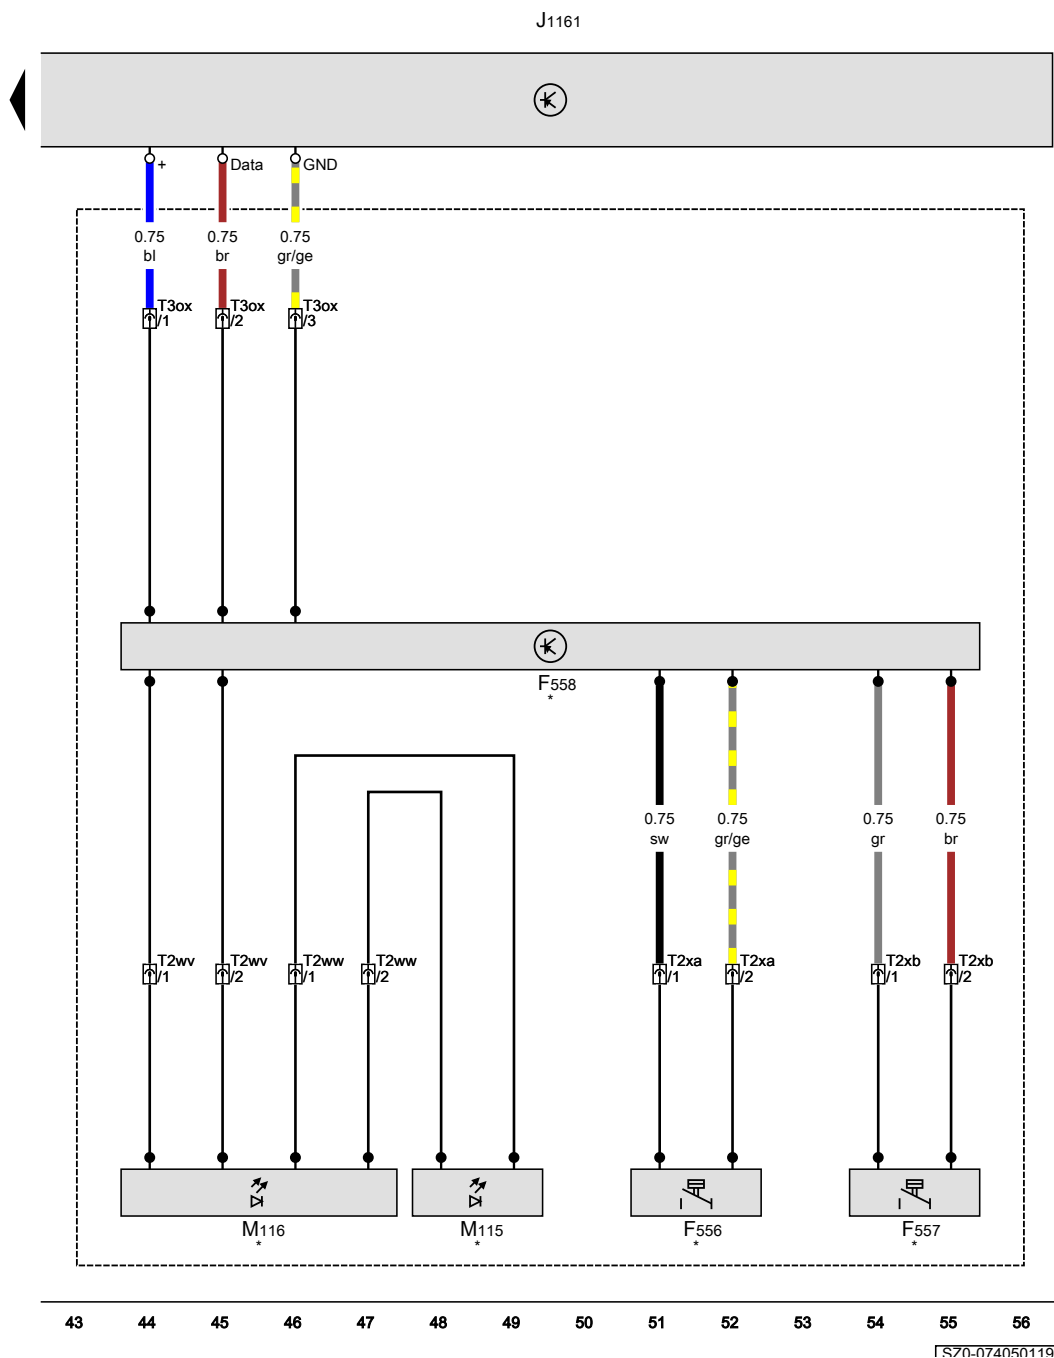


Foot-operated switch 1 for tail lift, Foot-operated switch 2 for tail lift, Foot-operated switch unit for tail lift, Tail lift control unit, Left additional turn signal, Right additional turn signal

- F556 Foot-operated switch 1 for tail lift, Tail lift
- F557 Foot-operated switch 2 for tail lift, Tail lift
- F558 Foot-operated switch unit for tail lift, Tail lift
- J1161 Tail lift control unit
- M115 Left additional turn signal, Tail lift
- M116 Right additional turn signal, Tail lift
- T2wv 2-pin connector, Tail lift, black
- T2ww 2-pin connector, Tail lift, black
- T2xa 2-pin connector, Tail lift, black
- T2xb 2-pin connector, Tail lift, black
- T3ox 3-pin connector, Coupling point for tail lift, black
- * Pre-wired component

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

Tail lift , (Dautel)


From May 2017

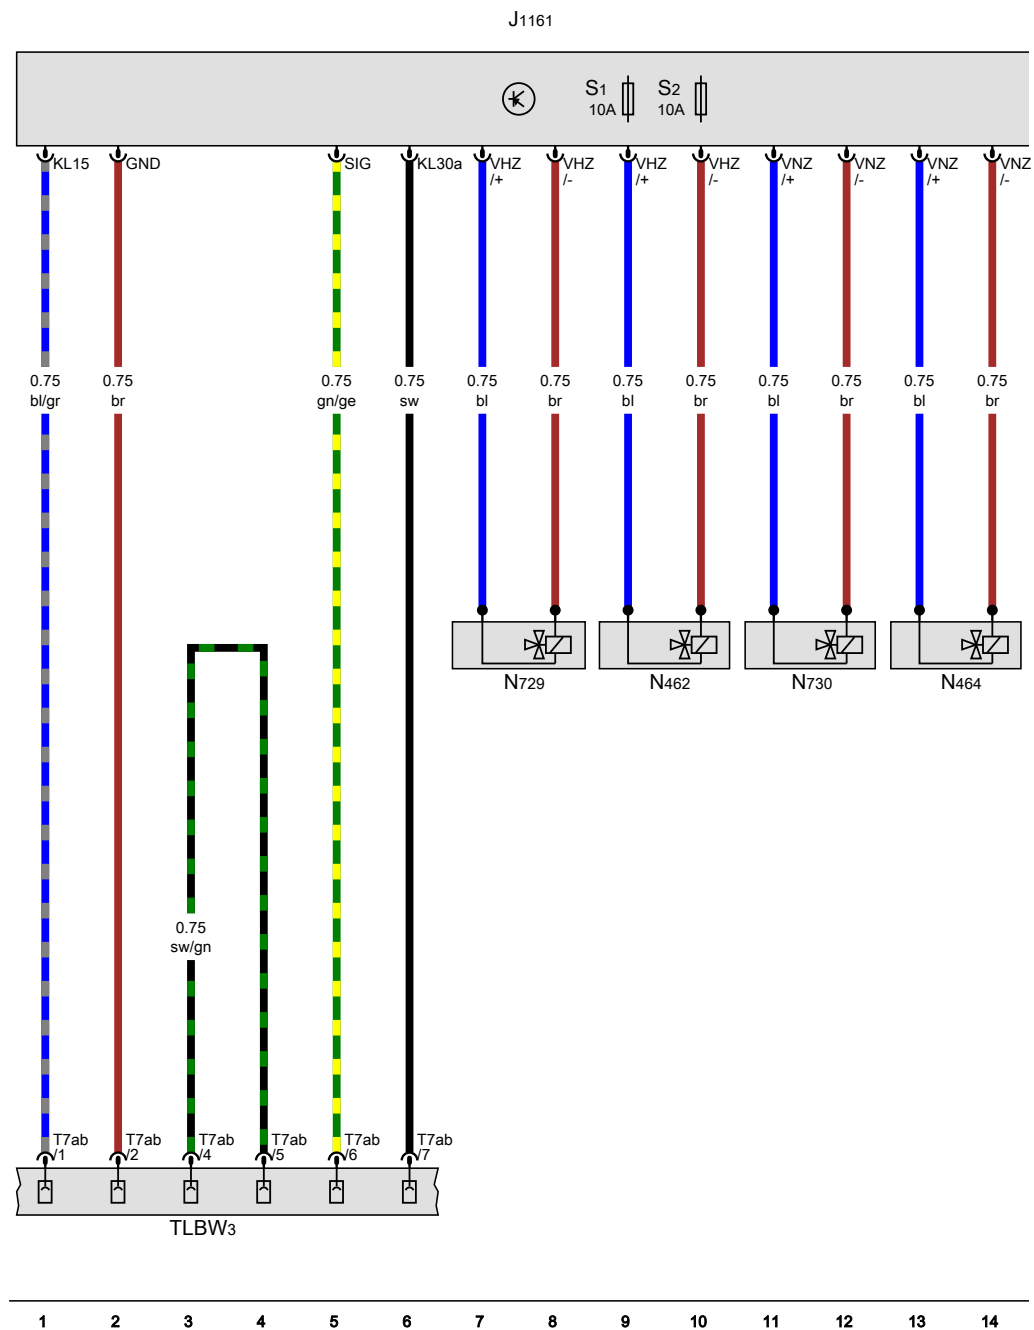

Tail lift control unit, Hydraulic system valve 2, Hydraulic system valve 4, Pop-up cylinder solenoid valve, Lock cylinder solenoid valve, Fuse 1 in fuse holder, Fuse 2 in fuse holder, Coupling point 3 for tail lift

- J1161 Tail lift control unit
- N462 Hydraulic system valve 2
- N464 Hydraulic system valve 4
- N729 Pop-up cylinder solenoid valve
- N730 Lock cylinder solenoid valve
- S1 Fuse 1 in fuse holder
- S2 Fuse 2 in fuse holder
- T7ab 7-pin connector, black
- TLBW3 Coupling point 3 for tail lift, on underbody, near cross panel


- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

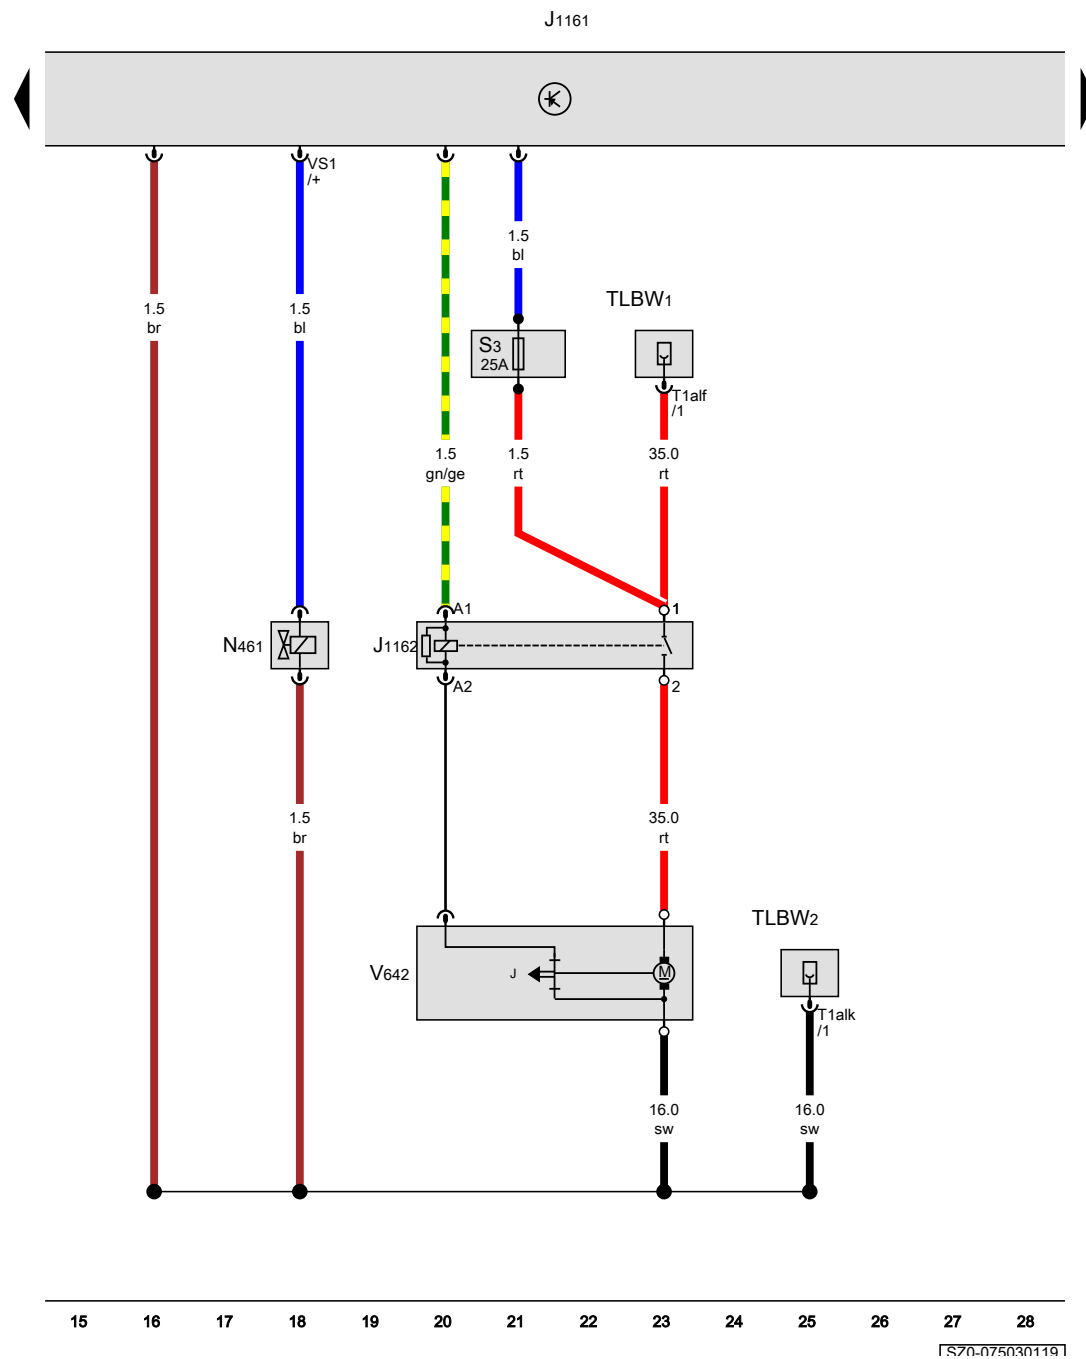

Tail lift control unit, Hydraulics motor relay, Hydraulic system valve 1, Fuse 3 in fuse holder, Tail lift hydraulics motor

- J1161 Tail lift control unit
- J1162 Hydraulics motor relay
- N461 Hydraulic system valve 1
- S3 Fuse 3 in fuse holder
- T1alf 1-pin connector, black
- T1alk 1-pin connector, black
- TLBW1 Coupling point 1 for tail lift
- TLBW2 Coupling point 2 for tail lift
- V642 Tail lift hydraulics motor


- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

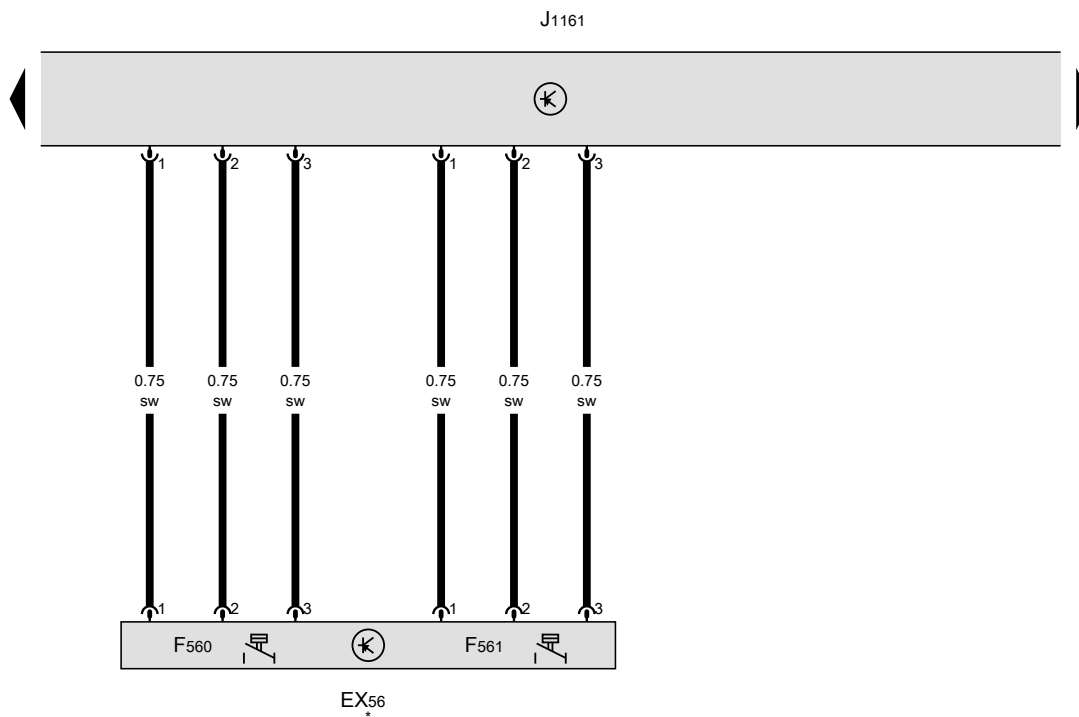

Tail lift operating unit, Tail lift control unit

- EX56 Tail lift operating unit
- F560 Switch 1 for tail lift operating unit
- F561 Switch 2 for tail lift operating unit
- J1161 Tail lift control unit
- * Pre-wired component

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

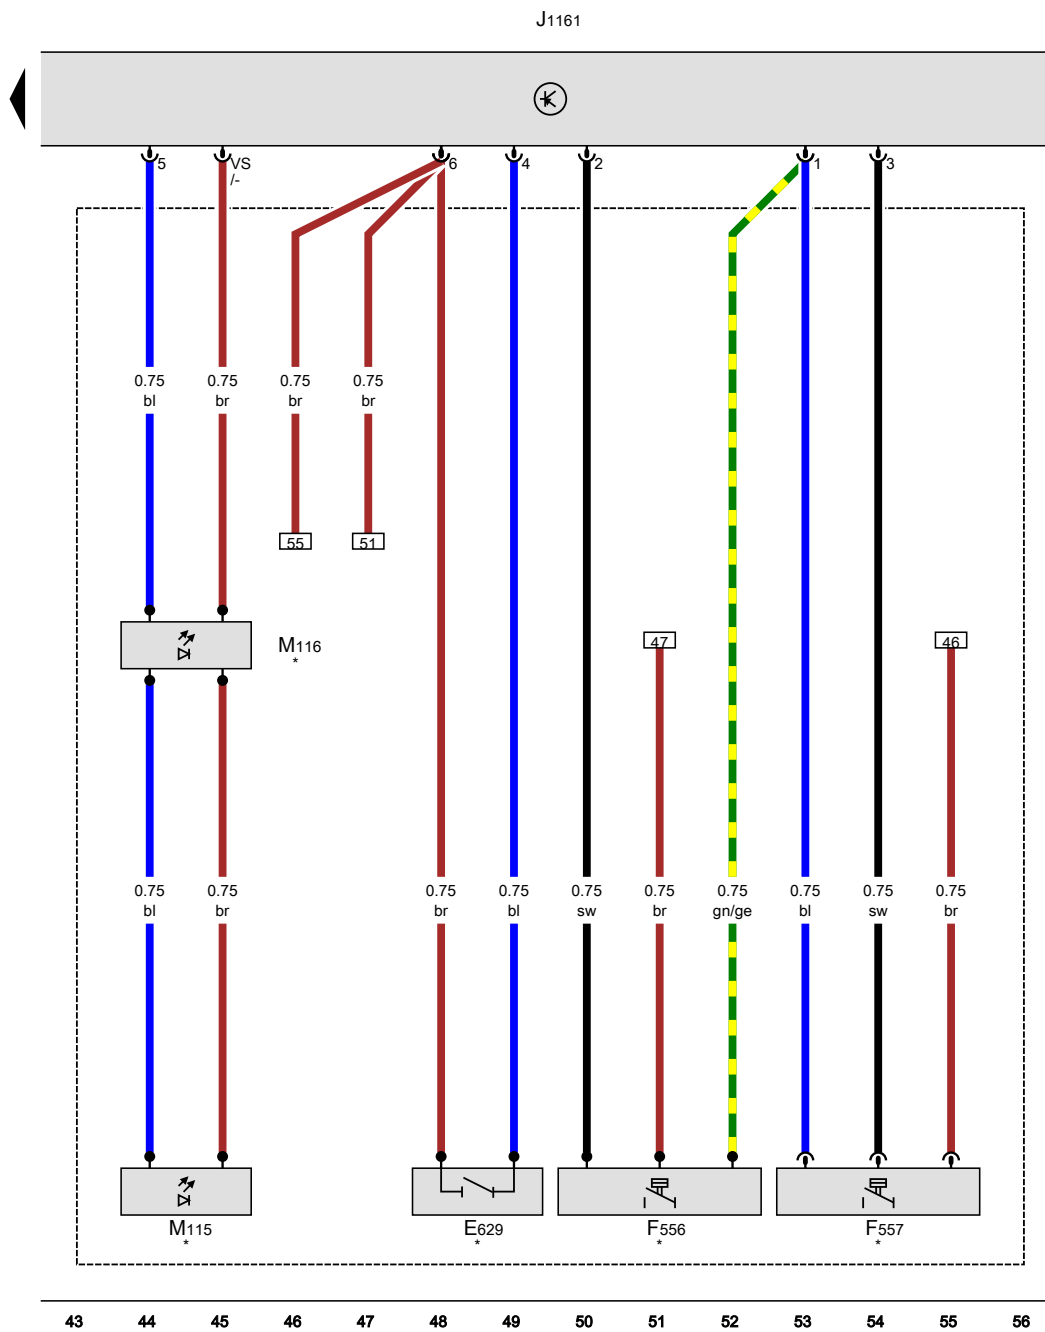

Tail lift switch, Foot-operated switch 1 for tail lift, Foot-operated switch 2 for tail lift, Tail lift control unit, Left additional turn signal, Right additional turn signal


- E629 Tail lift switch, Tail lift
- F556 Foot-operated switch 1 for tail lift, Tail lift
- F557 Foot-operated switch 2 for tail lift, Tail lift
- J1161 Tail lift control unit
- M115 Left additional turn signal, Tail lift
- M116 Right additional turn signal, Tail lift
- * Pre-wired component

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

[S70-075050119]

Tail lift , (Palfinger)


From May 2017

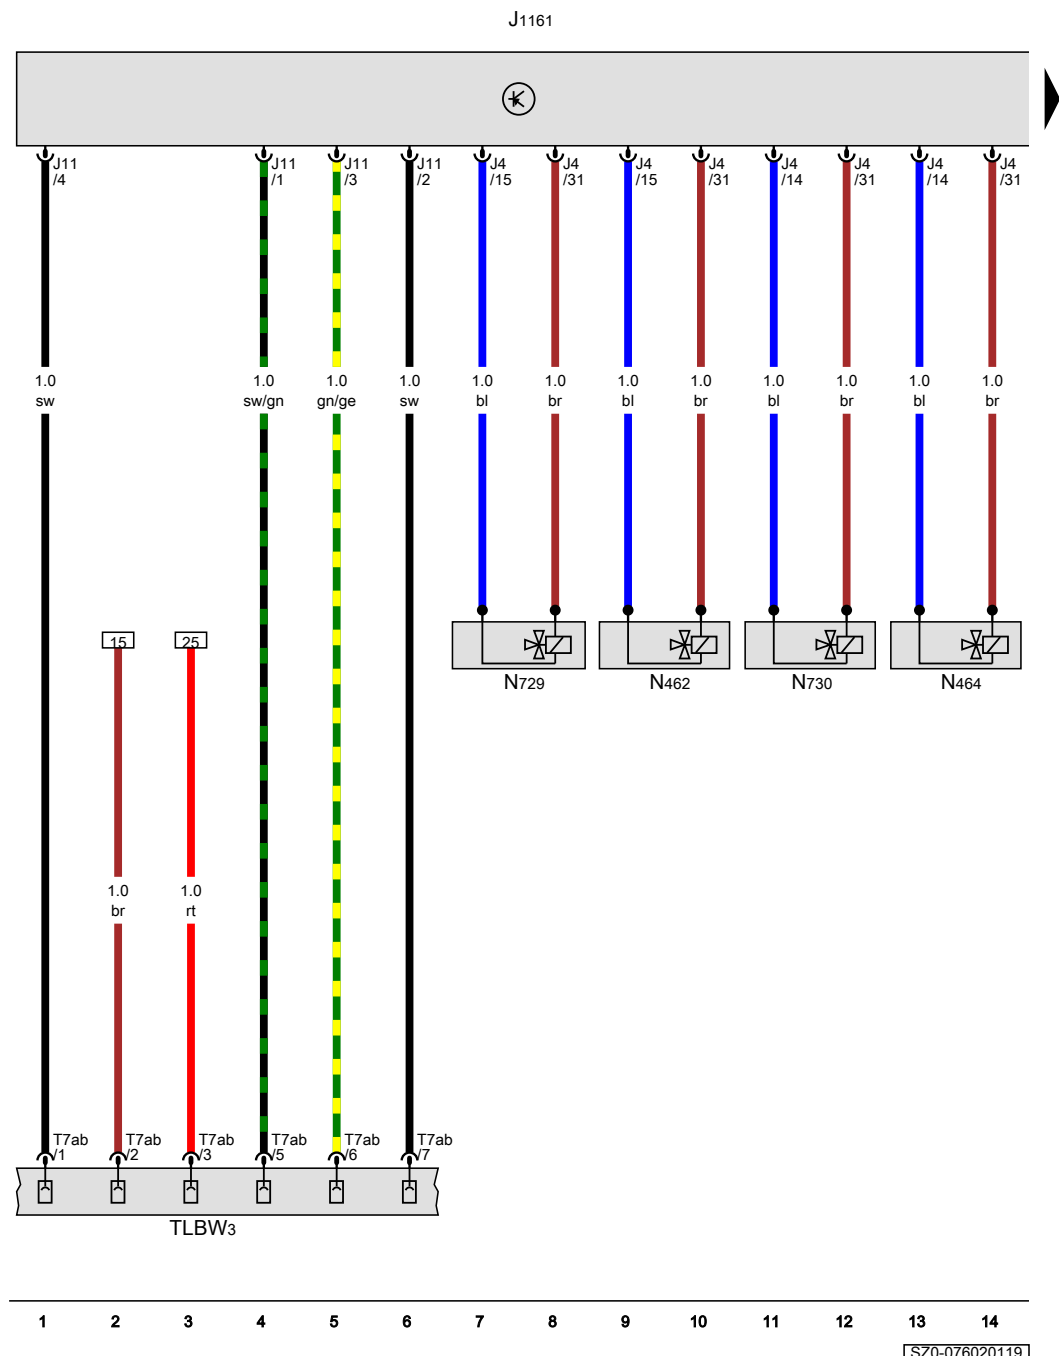

Tail lift control unit, Hydraulic system valve 2, Hydraulic system valve 4, Pop-up cylinder solenoid valve, Lock cylinder solenoid valve, Coupling point 3 for tail lift

- J1161 Tail lift control unit
- N462 Hydraulic system valve 2
- N464 Hydraulic system valve 4
- N729 Pop-up cylinder solenoid valve
- N730 Lock cylinder solenoid valve
- T7ab 7-pin connector, black
- TLBW3 Coupling point 3 for tail lift, on underbody, near cross panel


- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

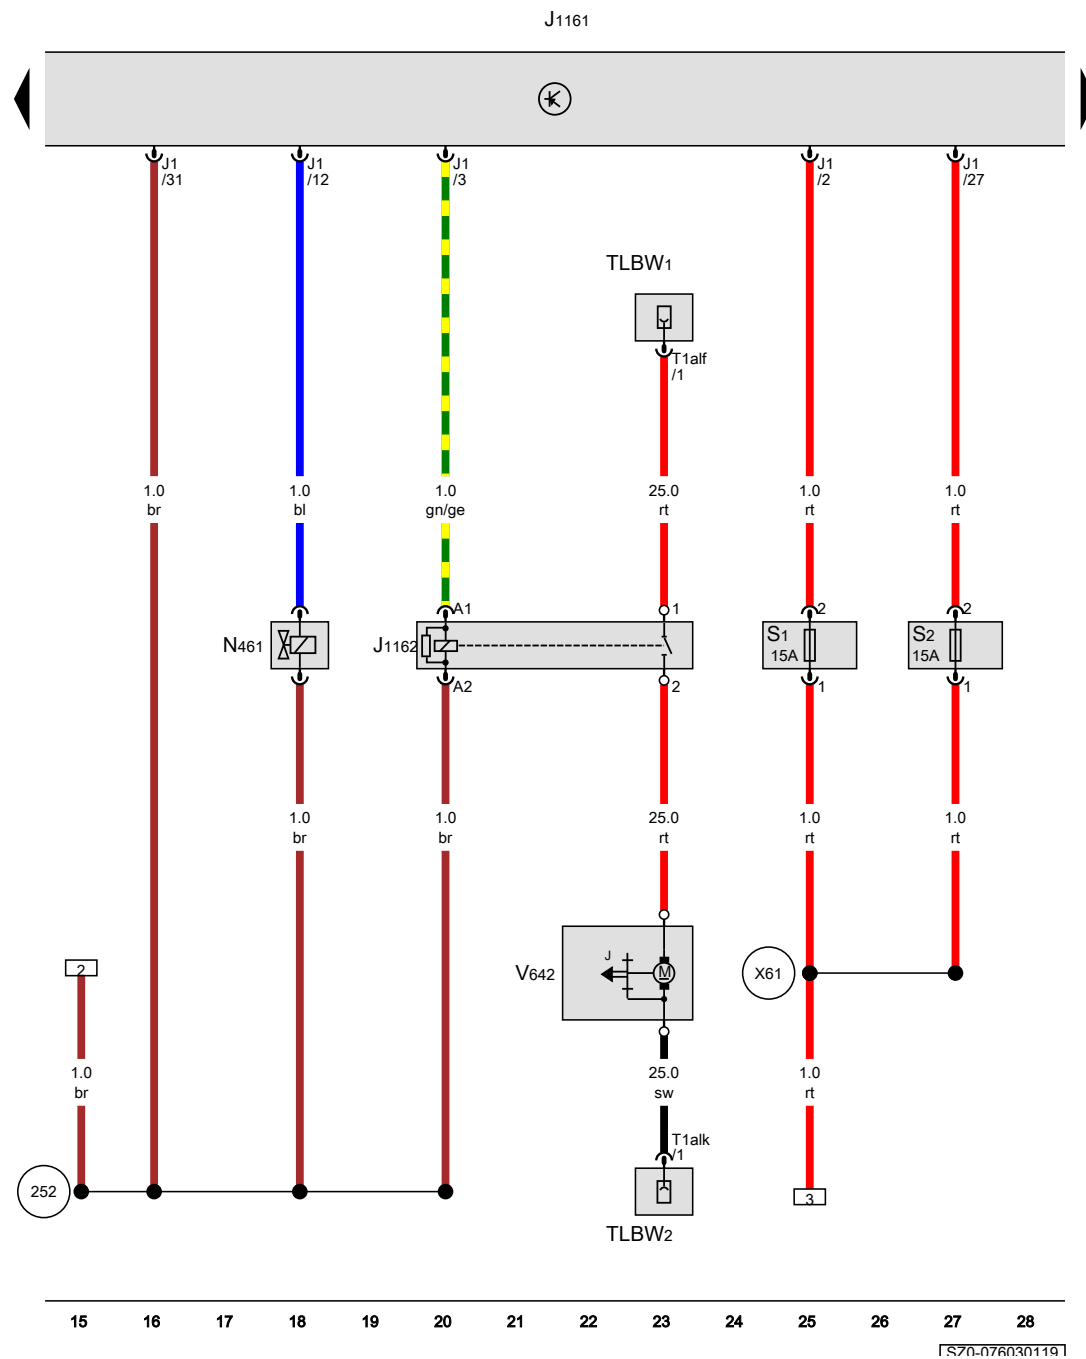

Tail lift control unit, Hydraulics motor relay, Hydraulic system valve 1, Fuse 1 in fuse holder, Fuse 2 in fuse holder, Tail lift hydraulics motor

- J1161 Tail lift control unit
- J1162 Hydraulics motor relay
- N461 Hydraulic system valve 1
- S1 Fuse 1 in fuse holder
- S2 Fuse 2 in fuse holder
- T1alf 1-pin connector, black
- T1alk 1-pin connector, black
- TLBW1 Coupling point 1 for tail lift
- TLBW2 Coupling point 2 for tail lift
- V642 Tail lift hydraulics motor


- 252 Earth connection, in optional equipment wiring harness
- X61 Positive connection (30), in optional equipment wiring harness

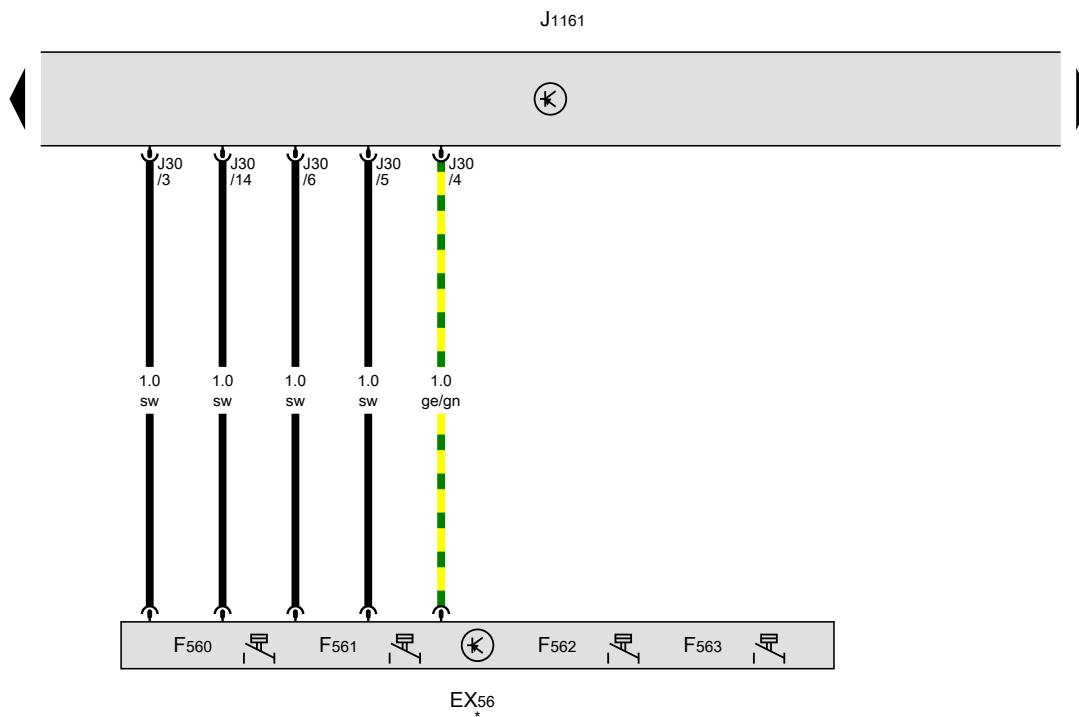

Tail lift operating unit, Tail lift control unit

- EX56 Tail lift operating unit
- F560 Switch 1 for tail lift operating unit
- F561 Switch 2 for tail lift operating unit
- F562 Switch 3 for tail lift operating unit
- F563 Switch 4 for tail lift operating unit
- J1161 Tail lift control unit
- * Pre-wired component

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

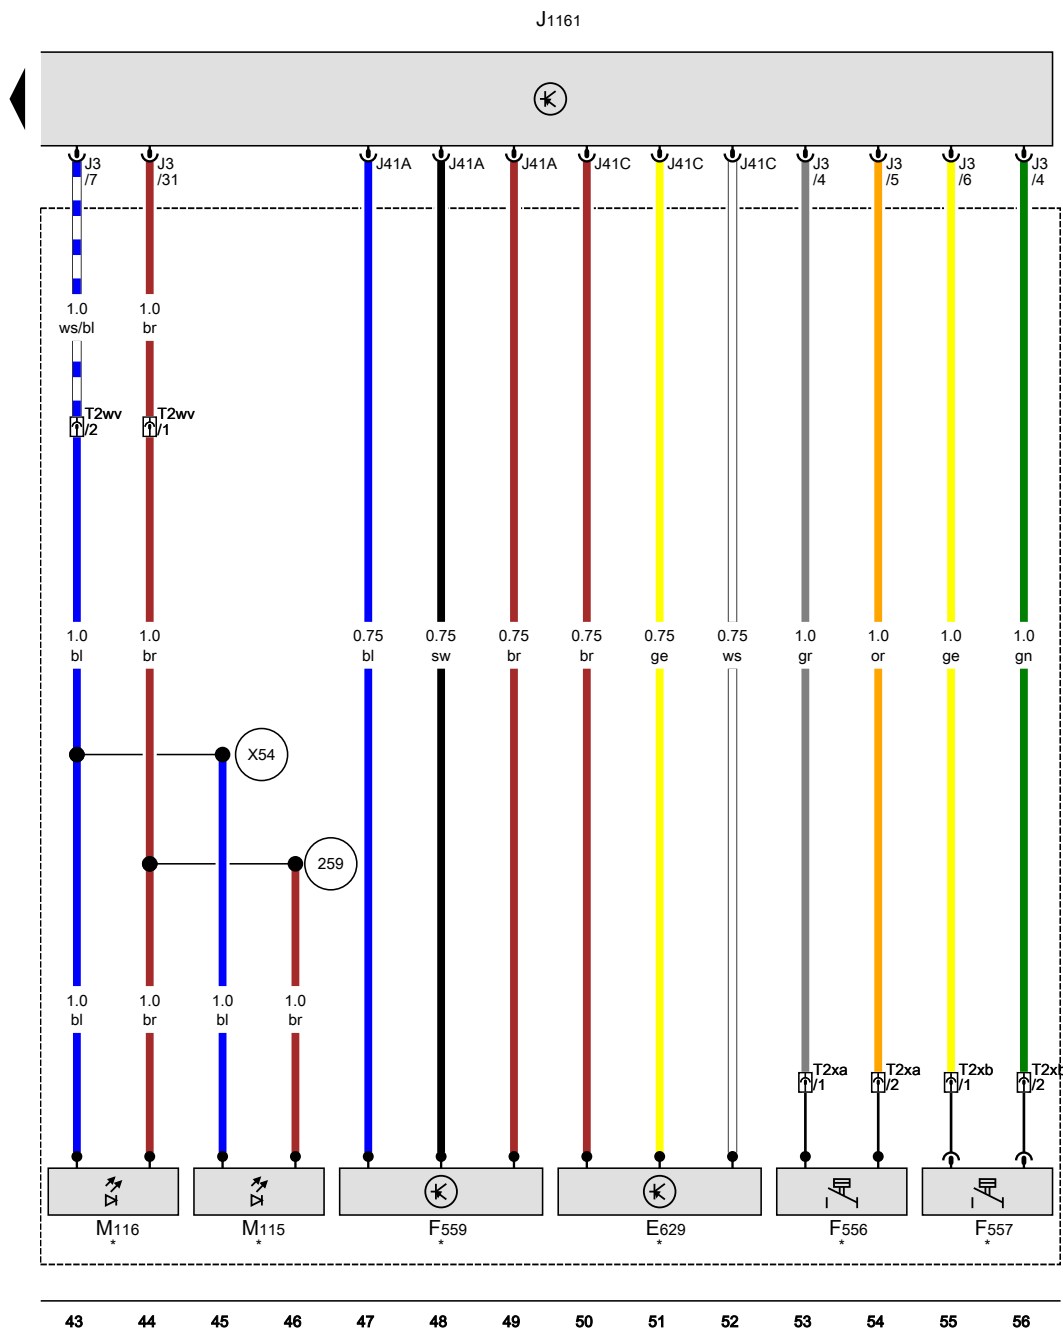


Tail lift switch, Foot-operated switch 1 for tail lift, Foot-operated switch 2 for tail lift, Tail lift pressure switch, Tail lift control unit, Left additional turn signal, Right additional turn signal

- E629 Tail lift switch
- F556 Foot-operated switch 1 for tail lift
- F557 Foot-operated switch 2 for tail lift
- F559 Tail lift pressure switch
- J1161 Tail lift control unit
- M115 Left additional turn signal, Tail lift
- M116 Right additional turn signal, Tail lift
- T2wv 2-pin connector, Tail lift, black
- T2xa 2-pin connector, Tail lift, black
- T2xb 2-pin connector, Tail lift, black
- 259 Earth connection 2, in optional equipment wiring harness
- X54 Positive connection (58), in optional equipment wiring harness
- * Pre-wired component

High-voltage battery system

From December 2017

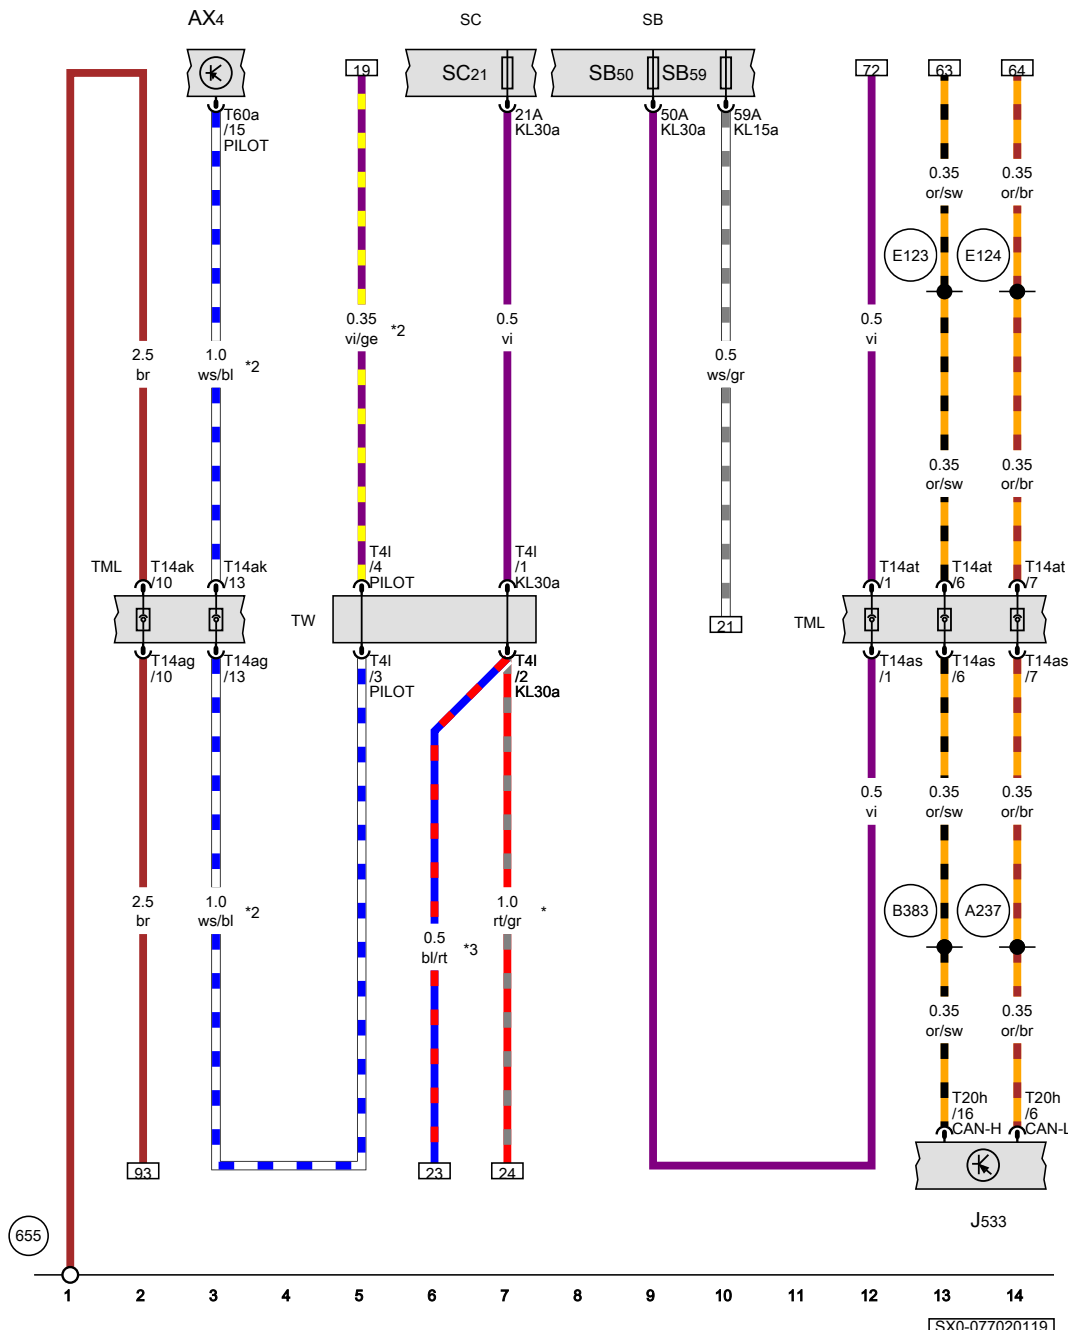

Charging unit 1 for high-voltage battery, Data bus diagnostic interface, Fuse holder B, Fuse holder C, Maintenance connector for high-voltage system


- AX4 Charging unit 1 for high-voltage battery
- J533 Data bus diagnostic interface
- SB Fuse holder B
- SB50 Fuse 50 on fuse holder B
- SB59 Fuse 59 on fuse holder B
- SC Fuse holder C
- SC21 Fuse 21 on fuse holder C
- T4I 4-pin connector, green
- T14ag 14-pin connector, grey
- T14ak 14-pin connector, grey
- T14as 14-pin connector, black
- T14at 14-pin connector, black
- T20h 20-pin connector, red
- T60a 60-pin connector, black
- TML Coupling point in engine compartment, left
- TW Maintenance connector for high-voltage system

- 655 Earth point, on left headlight
- A237 Connection 1 (powertrain CAN bus, low), in dash panel wiring harness
- B383 Connection 1 (powertrain CAN bus, high), in main wiring harness
- E123 Connection 1 (powertrain CAN bus, high), in engine wiring harness
- E124 Connection 1 (powertrain CAN bus, low), in engine wiring harness
- * Up to July 2018
- *2 Pilot line
- *3 From July 2018


- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

Airbag control unit

- J234 Airbag control unit
- J623 Engine/motor control unit
- T14ai 14-pin connector, grey
- T14aj 14-pin connector, grey
- T90f 90-pin connector, yellow
- T94b 94-pin connector, black
- TML Coupling point in engine compartment, left
- X4 Connection 1 (CAN bus hybrid, high), in engine compartment wiring harness
- X5 Connection 1 (CAN bus hybrid, low), in engine compartment wiring harness
- * Up to July 2018
- *2 Pilot line
- *3 From July 2018

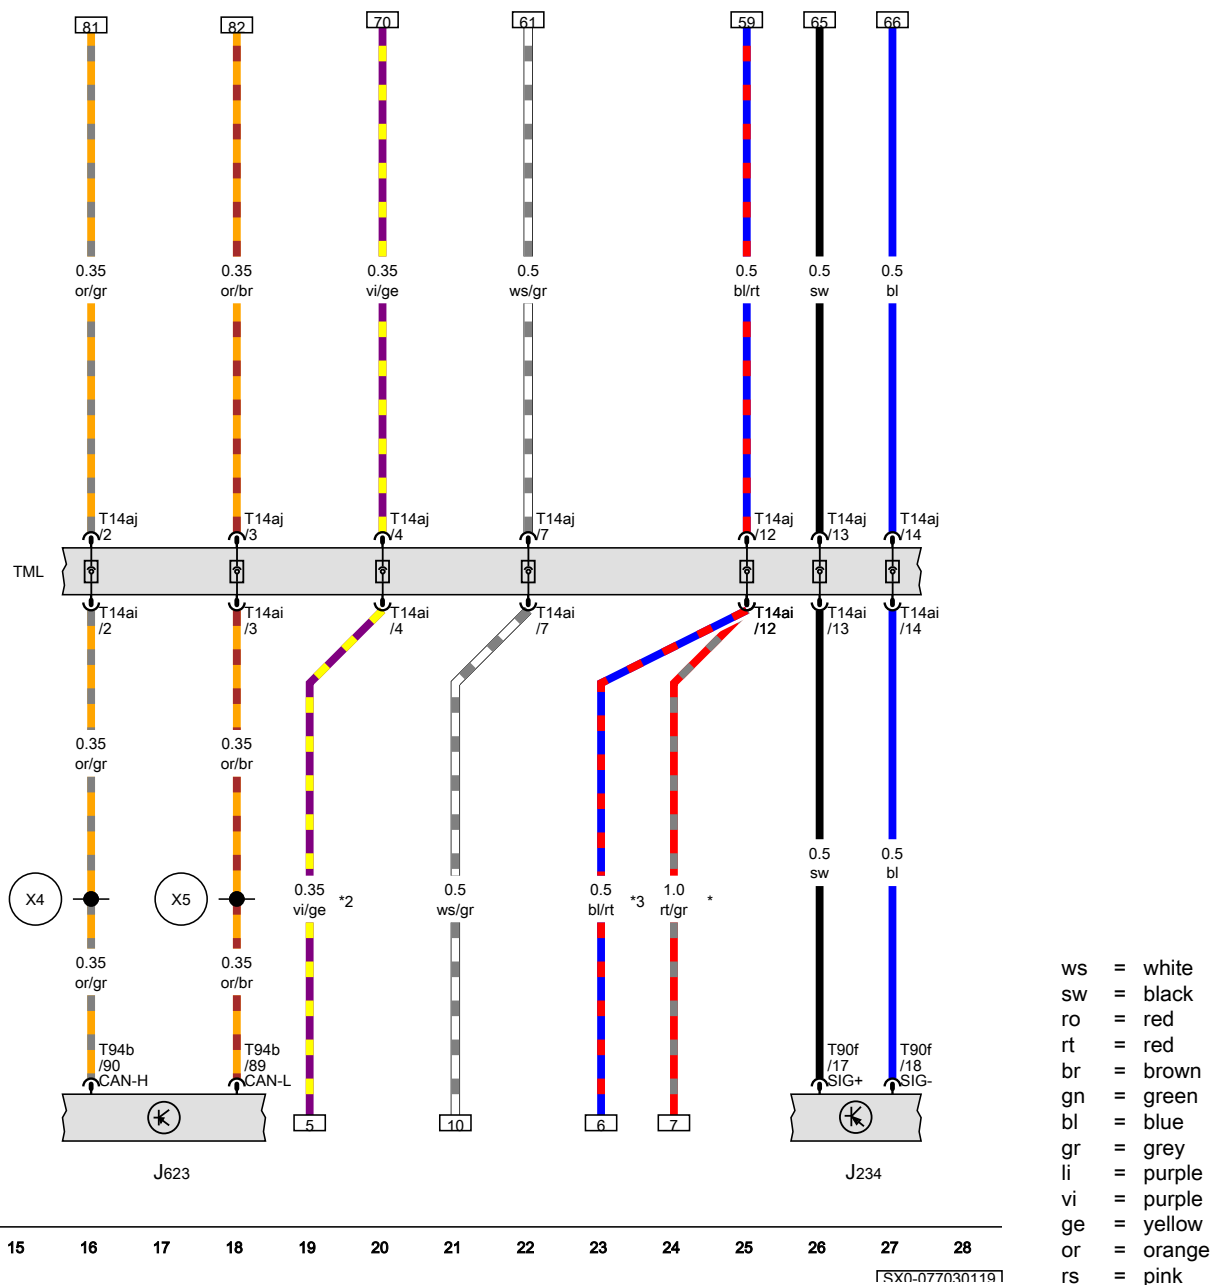

[SX0-077030119]

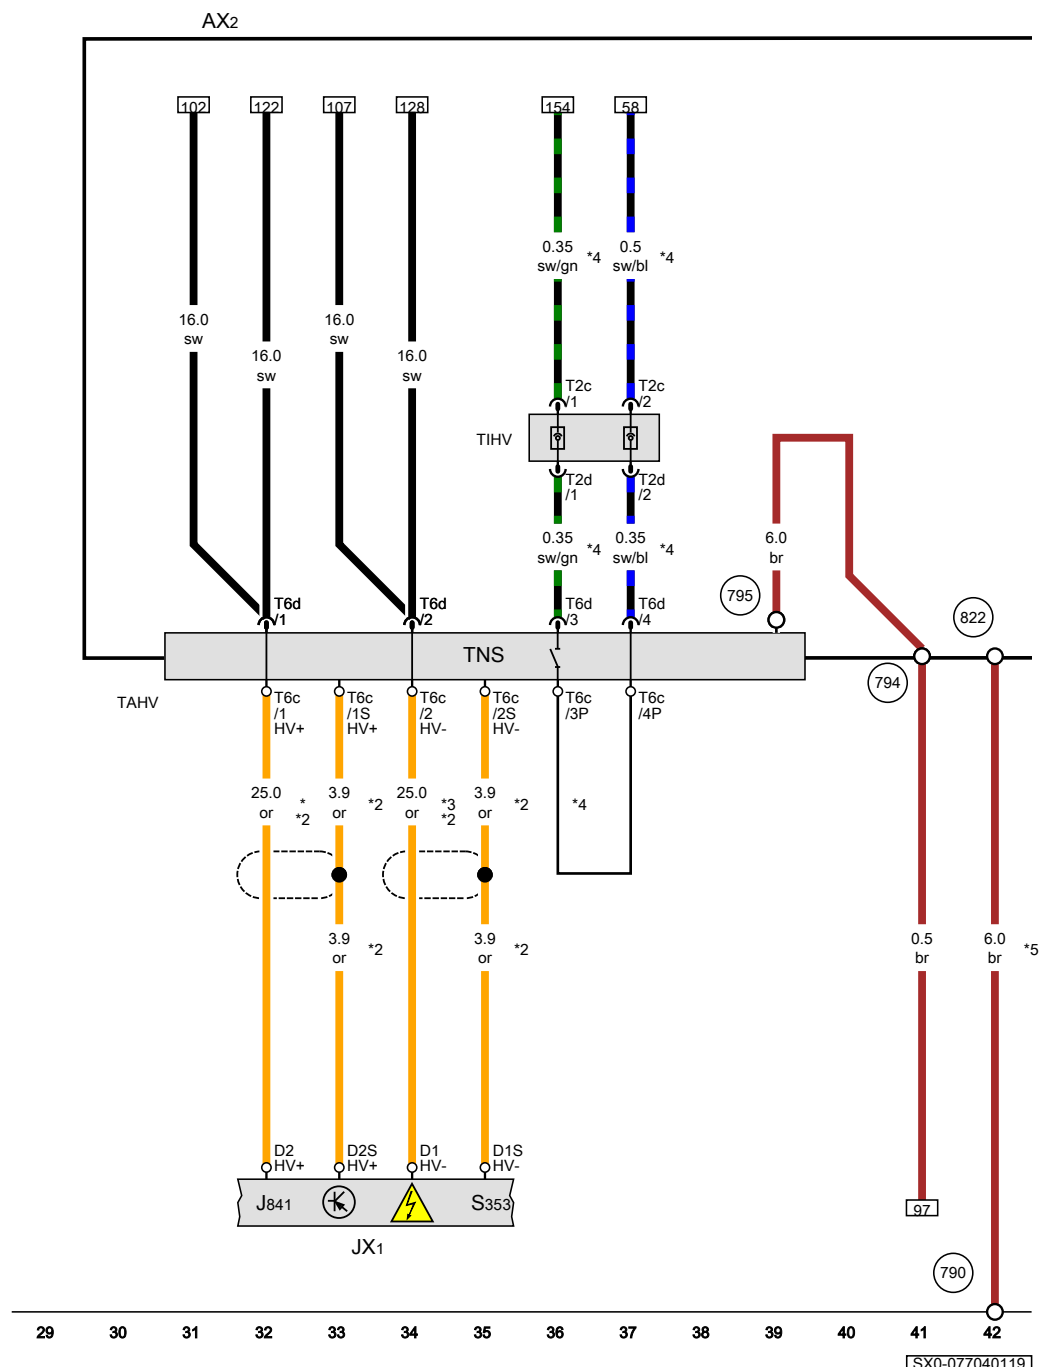


High-voltage battery 1, Power and control electronics for electric drive, Electric drive control unit, High-voltage system fuse 3

- AX2 High-voltage battery 1
- JX1 Power and control electronics for electric drive
- J841 Electric drive control unit
- S353 High-voltage system fuse 3
- T2c 2-pin connector, black
- T2d 2-pin connector, black
- T6c 6-pin connector, orange
- T6d 6-pin connector, orange
- TAHV Coupling point on high-voltage battery
- TIHV Coupling point in high-voltage battery

- 790 Earth point on front left of underbody
- 794 Earth point 1, in high-voltage battery
- 795 Earth point 2, in high-voltage battery
- 822 Earth point 5, on high-voltage battery

- * High-voltage wire for hybrid battery, positive terminal (P1)
- *2 High-voltage wiring harness for high-voltage battery (PX1)
- *3 High-voltage wire for hybrid battery, negative terminal (P2)
- *4 Pilot line
- *5 Potential equalisation line for high-voltage battery 1 (P73)

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

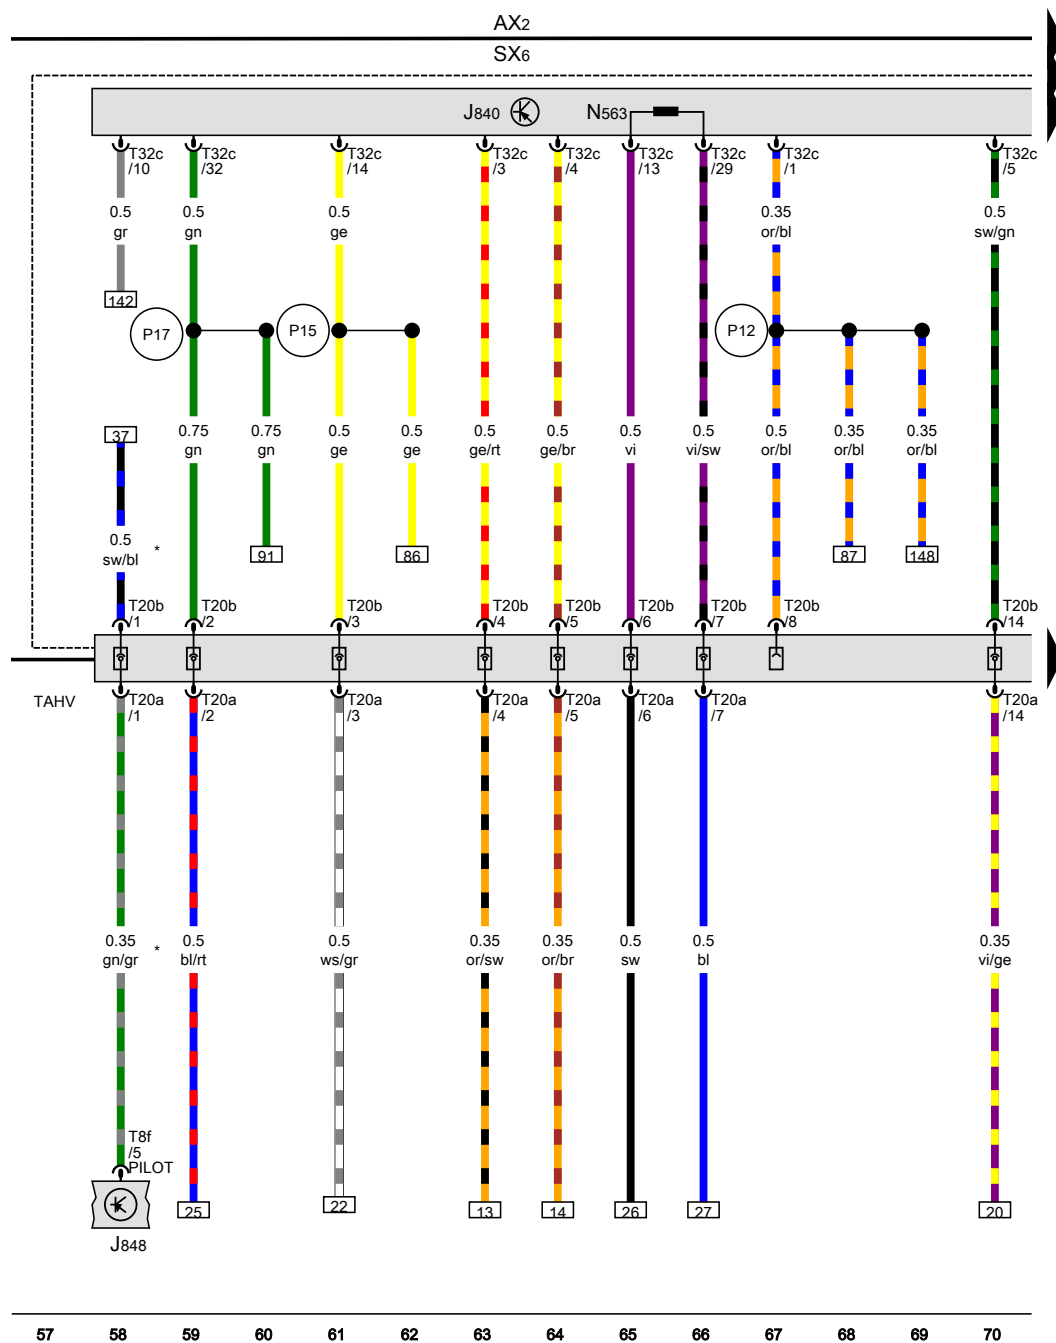


High-voltage battery 1, Battery regulation control unit, High-voltage heater (PTC) control unit, Switching unit for high-voltage battery, Coupling point on high-voltage battery

- AX2 High-voltage battery 1
- J840 Battery regulation control unit
- J848 High-voltage heater (PTC) control unit
- N563 High-voltage battery isolation igniter
- SX6 Switching unit for high-voltage battery
- T8f 8-pin connector, black
- T20a 20-pin connector, black
- T20b 20-pin connector, black
- T32c 32-pin connector, black
- TAHV Coupling point on high-voltage battery


- P12 Connection 6, in high-voltage battery wiring harness
- P15 Positive connection 3, in high-voltage battery wiring harness
- P17 Positive connection 5, in high-voltage battery wiring harness
- * Pilot line

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

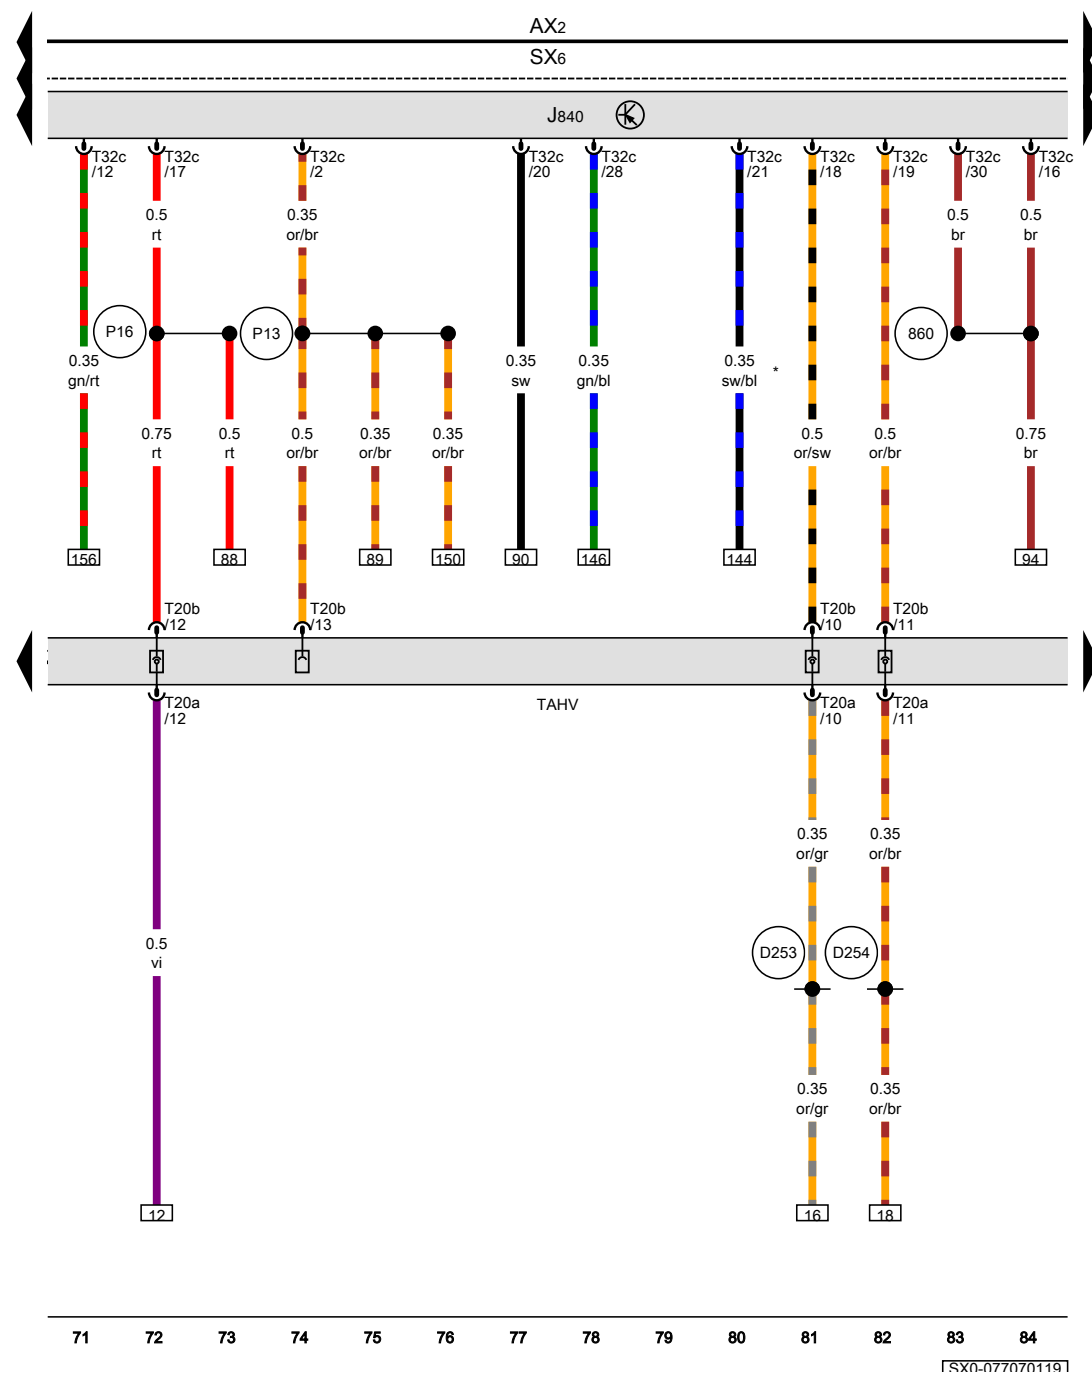

High-voltage battery 1, Battery regulation control unit, Switching unit for high-voltage battery, Coupling point on high-voltage battery

- AX2 High-voltage battery 1
- J840 Battery regulation control unit
- SX6 Switching unit for high-voltage battery
- T20a 20-pin connector, black
- T20b 20-pin connector, black
- T32c 32-pin connector, black
- TAHV Coupling point on high-voltage battery
- 860 Earth connection 2, in high-voltage battery wiring harness
- D253 Connection 1 (CAN bus hybrid, high), in engine prewiring harness
- D254 Connection 1 (CAN bus hybrid, low), in engine prewiring harness
- P13 Connection 7, in high-voltage battery wiring harness
- P16 Positive connection 4, in high-voltage battery wiring harness
- * Pilot line

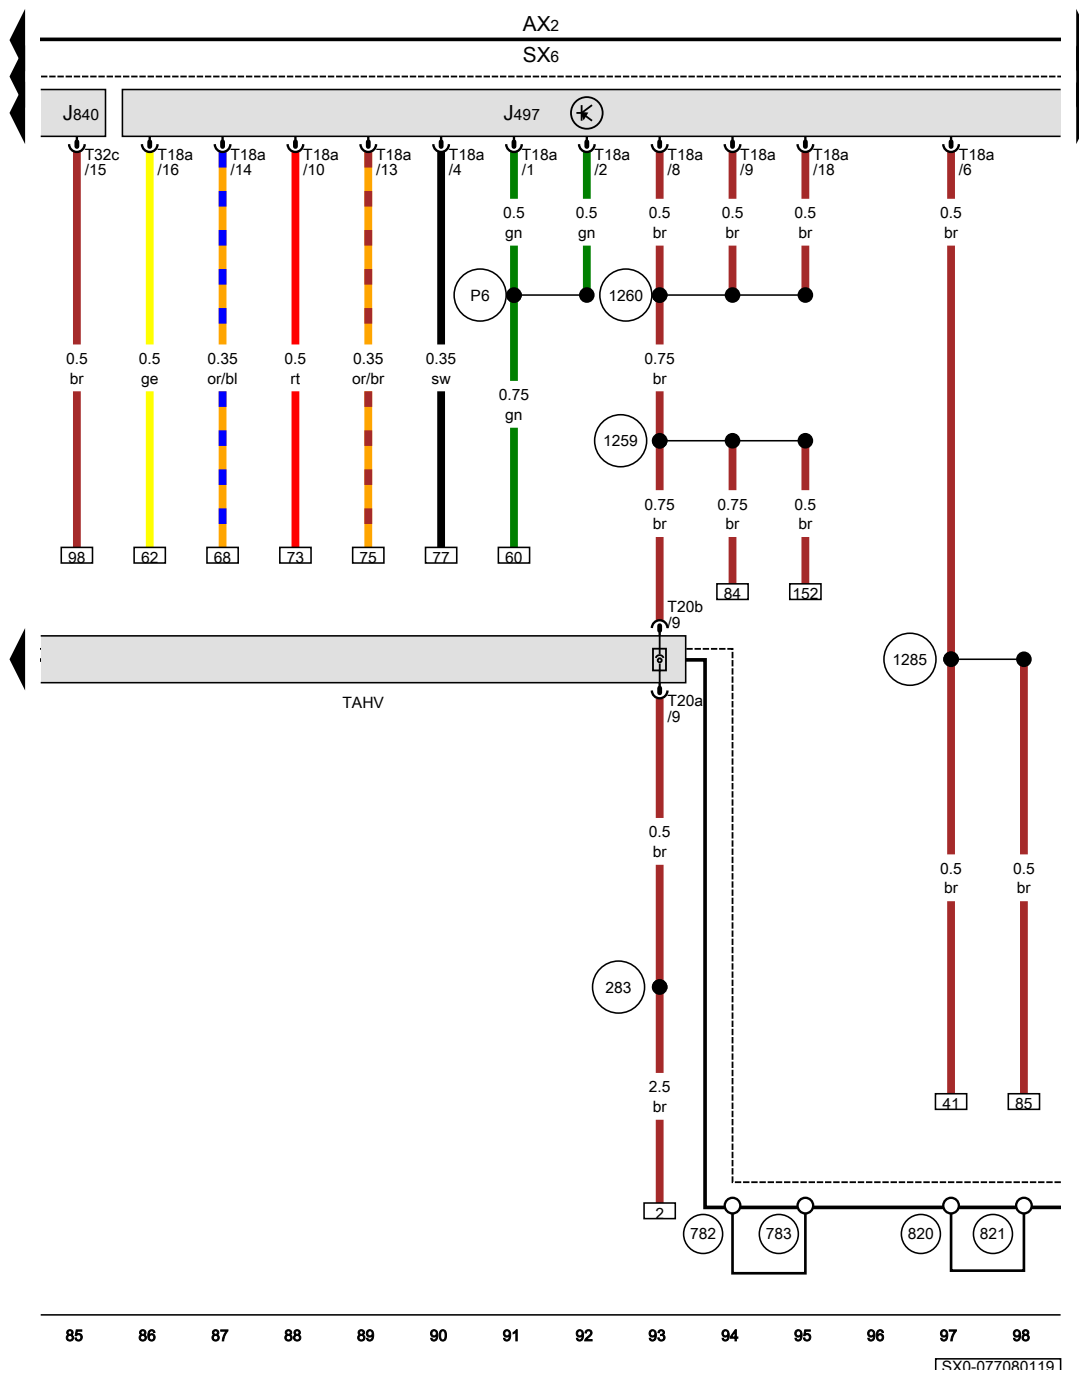


High-voltage battery 1, Module monitor control unit for batteries, Battery regulation control unit, Switching unit for high-voltage battery, Coupling point on high-voltage battery

- AX2 High-voltage battery 1
- J497 Module monitor control unit for batteries
- J840 Battery regulation control unit
- SX6 Switching unit for high-voltage battery
- T18a 18-pin connector, black
- T20a 20-pin connector, black
- T20b 20-pin connector, black
- T32c 32-pin connector, black
- TAHV Coupling point on high-voltage battery

- (283) Earth point 2, engine prewiring harness
- (782) Earth point 1, on high-voltage battery
- (783) Earth point 2, on high-voltage battery
- (820) Earth point 3, on high-voltage battery
- (821) Earth point 4, on high-voltage battery
- (1259) Earth connection 1, in high-voltage battery wiring harness
- (1260) Earth connection 2, in high-voltage battery wiring harness
- (1285) Earth connection 3, in high-voltage battery wiring harness
- (P6) Positive connection 2, in high-voltage battery wiring harness

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

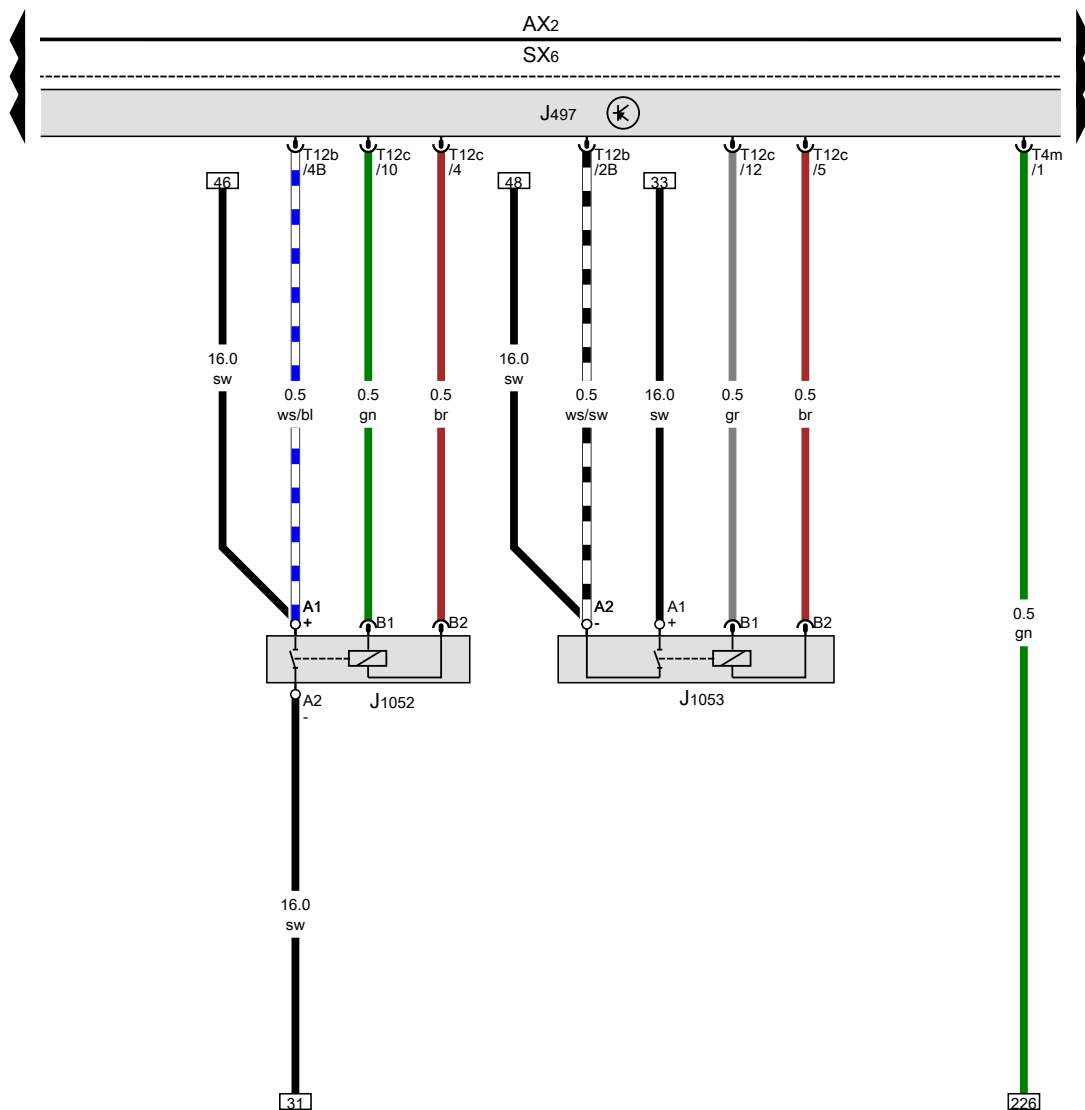


High-voltage battery 1, Module monitor control unit for batteries, DC charge contactor 1, DC charge contactor 2, Switching unit for high-voltage battery

- AX2 High-voltage battery 1
- J497 Module monitor control unit for batteries
- J1052 DC charge contactor 1
- J1053 DC charge contactor 2
- SX6 Switching unit for high-voltage battery
- T4m 4-pin connector, black
- T12b 12-pin connector, black
- T12c 12-pin connector, black

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

[SX6-077090119]

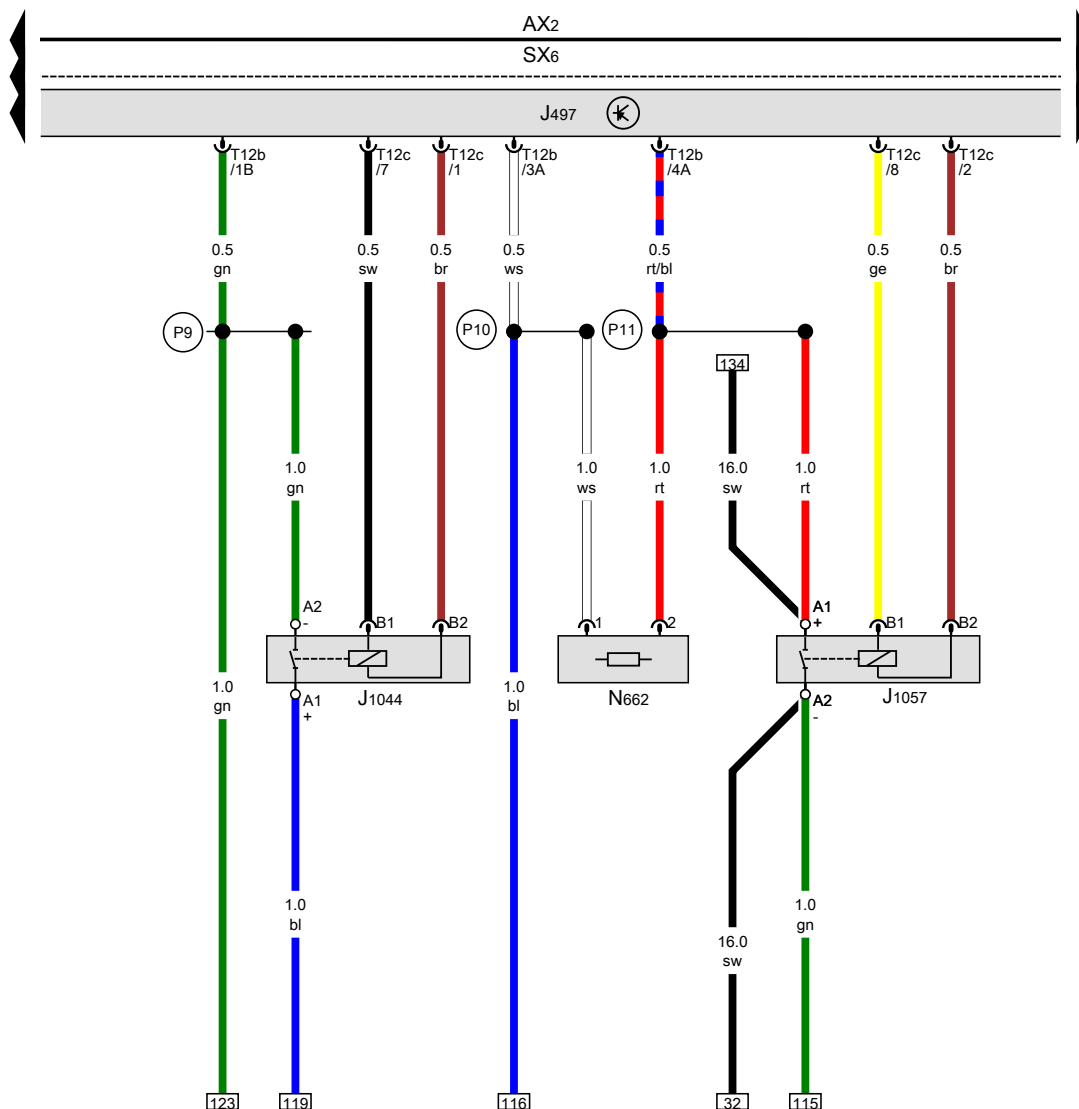


High-voltage battery 1, Module monitor control unit for batteries, Precharge contactor for high-voltage battery, High-voltage battery power contactor 1, Protection resistor for high-voltage battery, Switching unit for high-voltage battery

- AX2 High-voltage battery 1
- J497 Module monitor control unit for batteries
- J1044 Precharge contactor for high-voltage battery
- J1057 High-voltage battery power contactor 1
- N662 Protection resistor for high-voltage battery
- SX6 Switching unit for high-voltage battery
- T12b 12-pin connector, black
- T12c 12-pin connector, black

- P9 Connection 3, in high-voltage battery wiring harness
- P10 Connection 4, in high-voltage battery wiring harness
- P11 Connection 5, in high-voltage battery wiring harness

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

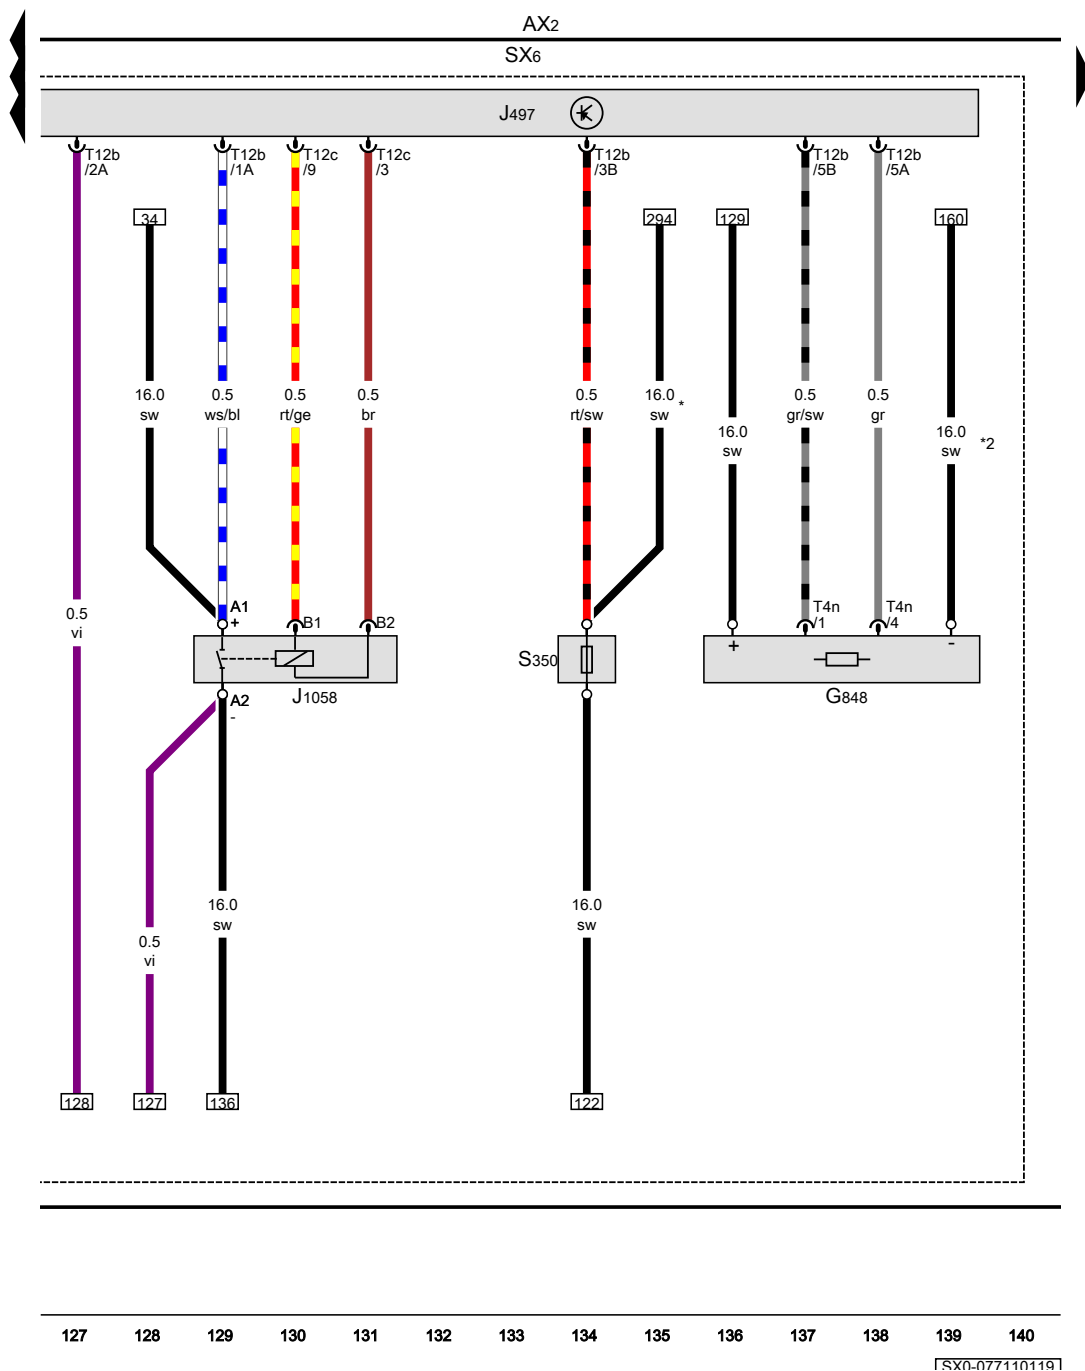


High-voltage battery 1, Current sensor for high-voltage battery, Module monitor control unit for batteries, High-voltage battery power contactor 2, Switching unit for high-voltage battery, High-voltage system fuse 1

- AX2 High-voltage battery 1
- G848 Current sensor for high-voltage battery
- J497 Module monitor control unit for batteries
- J1058 High-voltage battery power contactor 2
- SX6 Switching unit for high-voltage battery
- S350 High-voltage system fuse 1
- T4n 4-pin connector, black
- T12b 12-pin connector, black
- T12c 12-pin connector, black
- * Connecting cable 28 for battery module (P55)
- *2 Connecting cable 1 for battery module (P26)

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink


High-voltage battery 1

AX2 High-voltage battery 1
T16ac 16-pin connector, black
T16ad 16-pin connector, black
TIHV Coupling point in high-voltage battery
* Pilot line

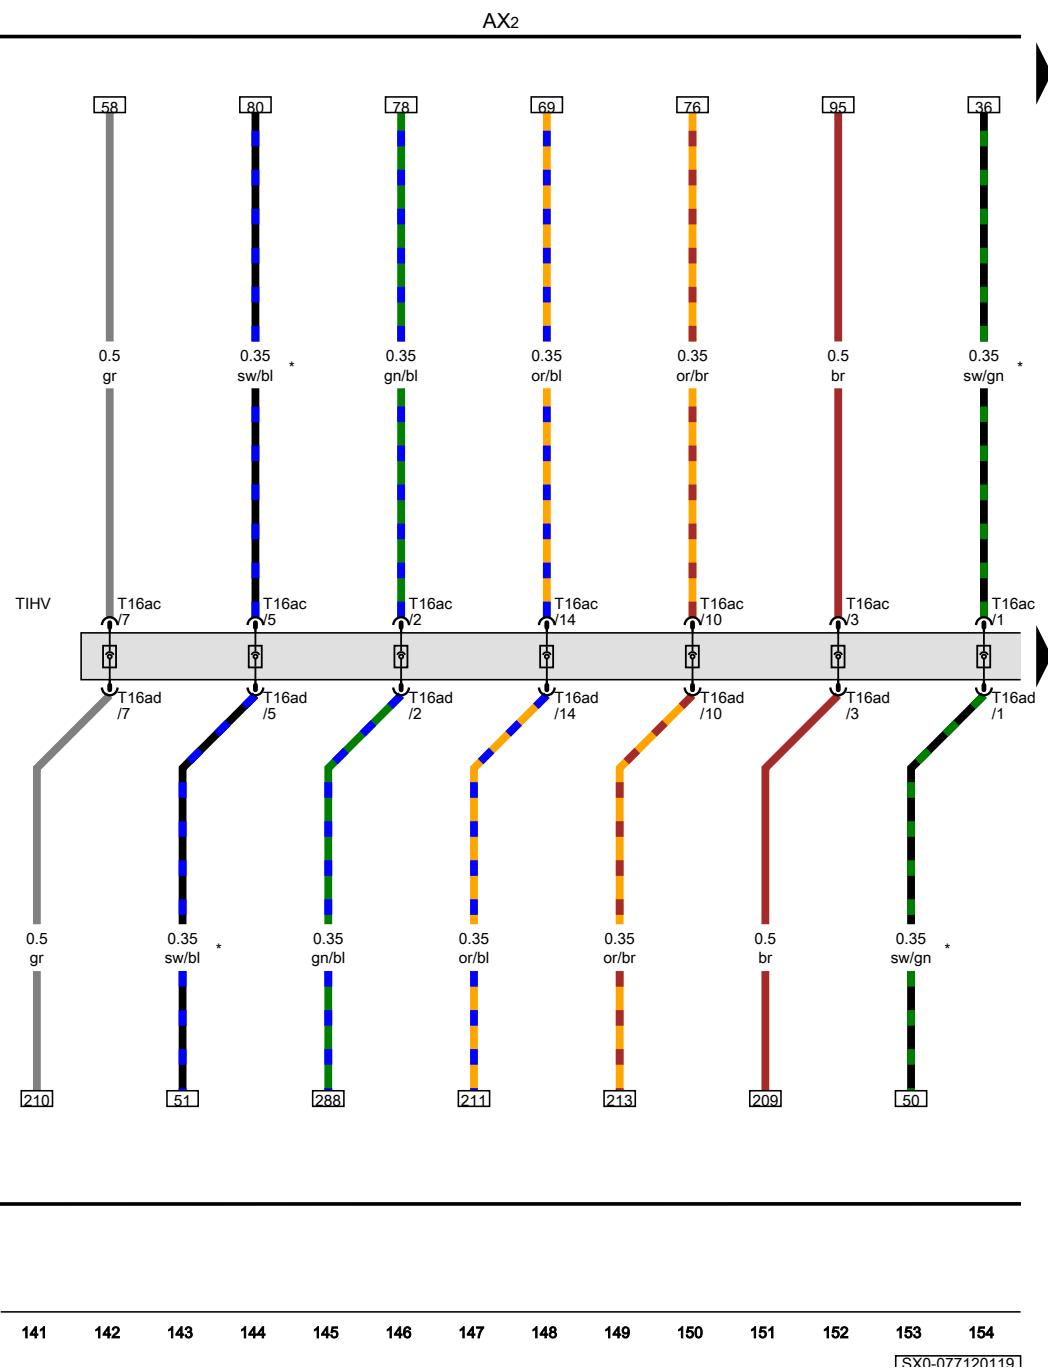

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink


[SX0-077120119]

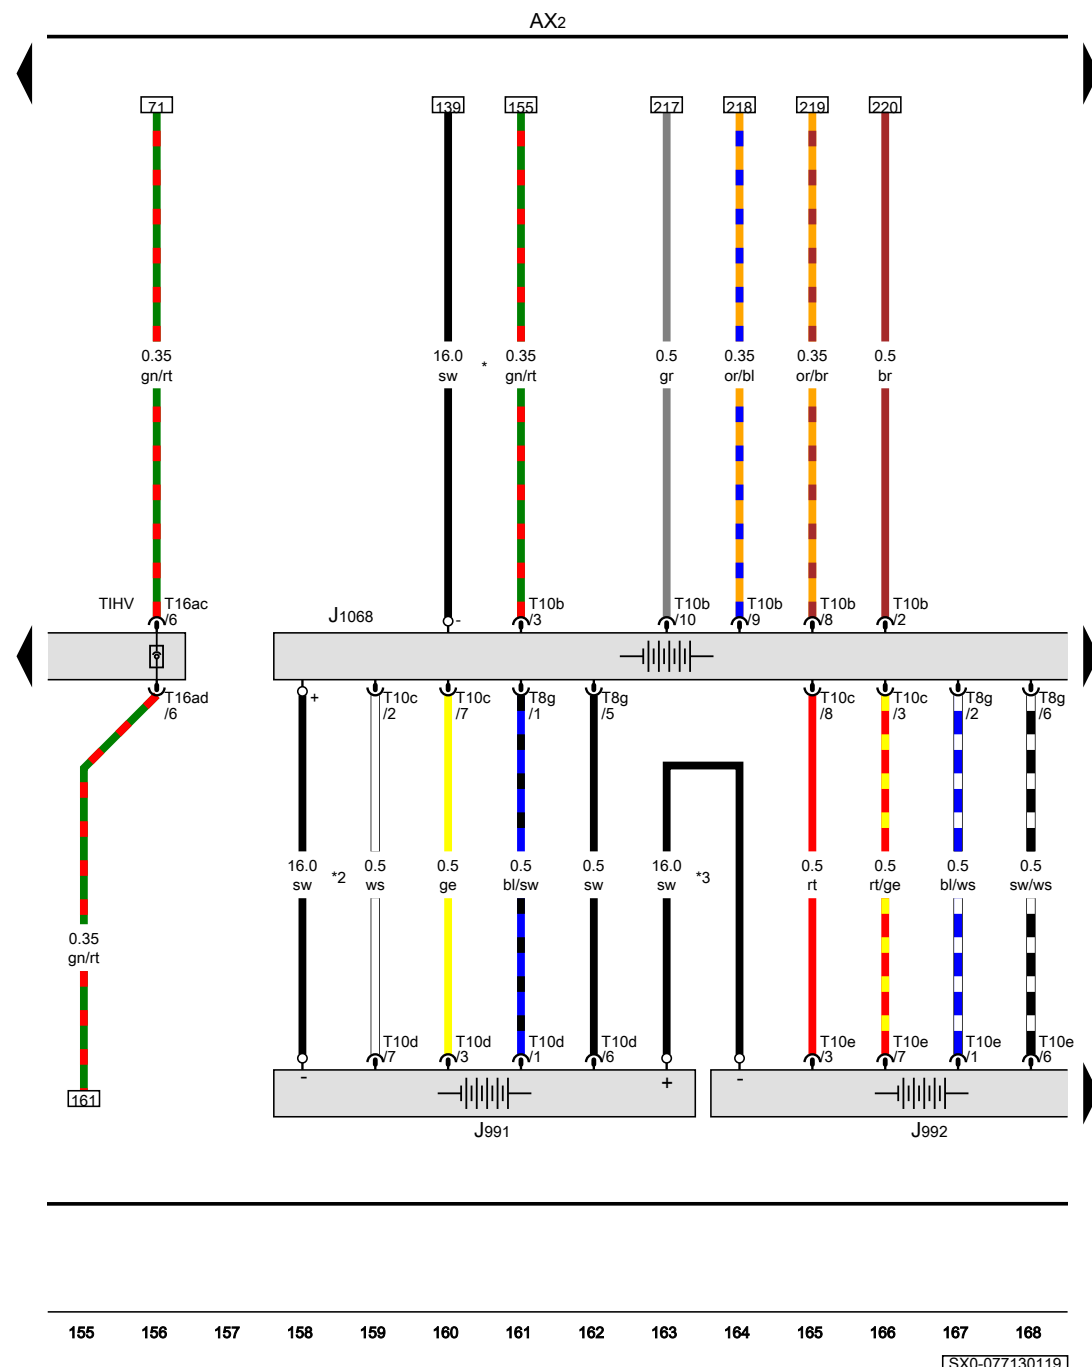

High-voltage battery 1, Battery module 1, Battery module 2, Battery module 0

- AX2 High-voltage battery 1
- J991 Battery module 1
- J992 Battery module 2
- J1068 Battery module 0
- T8g 8-pin connector, black
- T10b 10-pin connector, black
- T10c 10-pin connector, black
- T10d 10-pin connector, black
- T10e 10-pin connector, black
- T16ac 16-pin connector, black
- T16ad 16-pin connector, black
- TIHV Coupling point in high-voltage battery
- * Connecting cable 1 for battery module (P26)
- *2 Connecting cable 2 for battery module (P27)
- *3 Connecting cable 3 for battery module (P28)


ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink

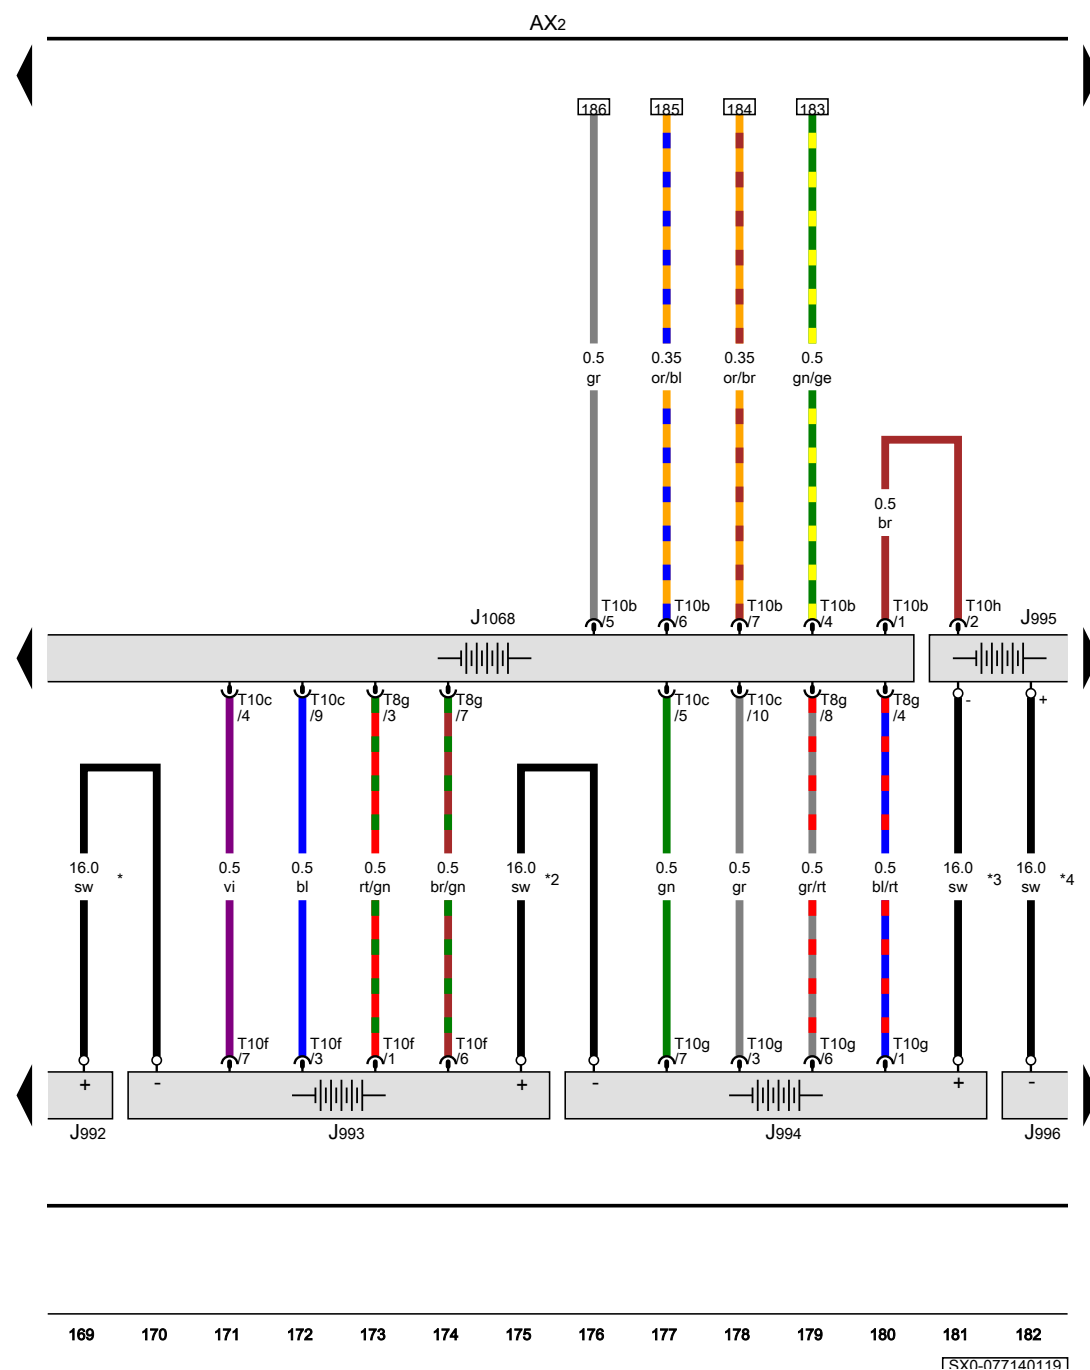

High-voltage battery 1, Battery module 2, Battery module 3, Battery module 4, Battery module 5, Battery module 6, Battery module 0

- AX2 High-voltage battery 1
- J992 Battery module 2
- J993 Battery module 3
- J994 Battery module 4
- J995 Battery module 5
- J996 Battery module 6
- J1068 Battery module 0
- T8g 8-pin connector, black
- T10b 10-pin connector, black
- T10c 10-pin connector, black
- T10f 10-pin connector, black
- T10g 10-pin connector, black
- T10h 10-pin connector, black
- * Connecting cable 4 for battery module (P29)
- *2 Connecting cable 5 for battery module (P30)
- *3 Connecting cable 6 for battery module (P31)
- *4 Connecting cable 7 for battery module (P32)


ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

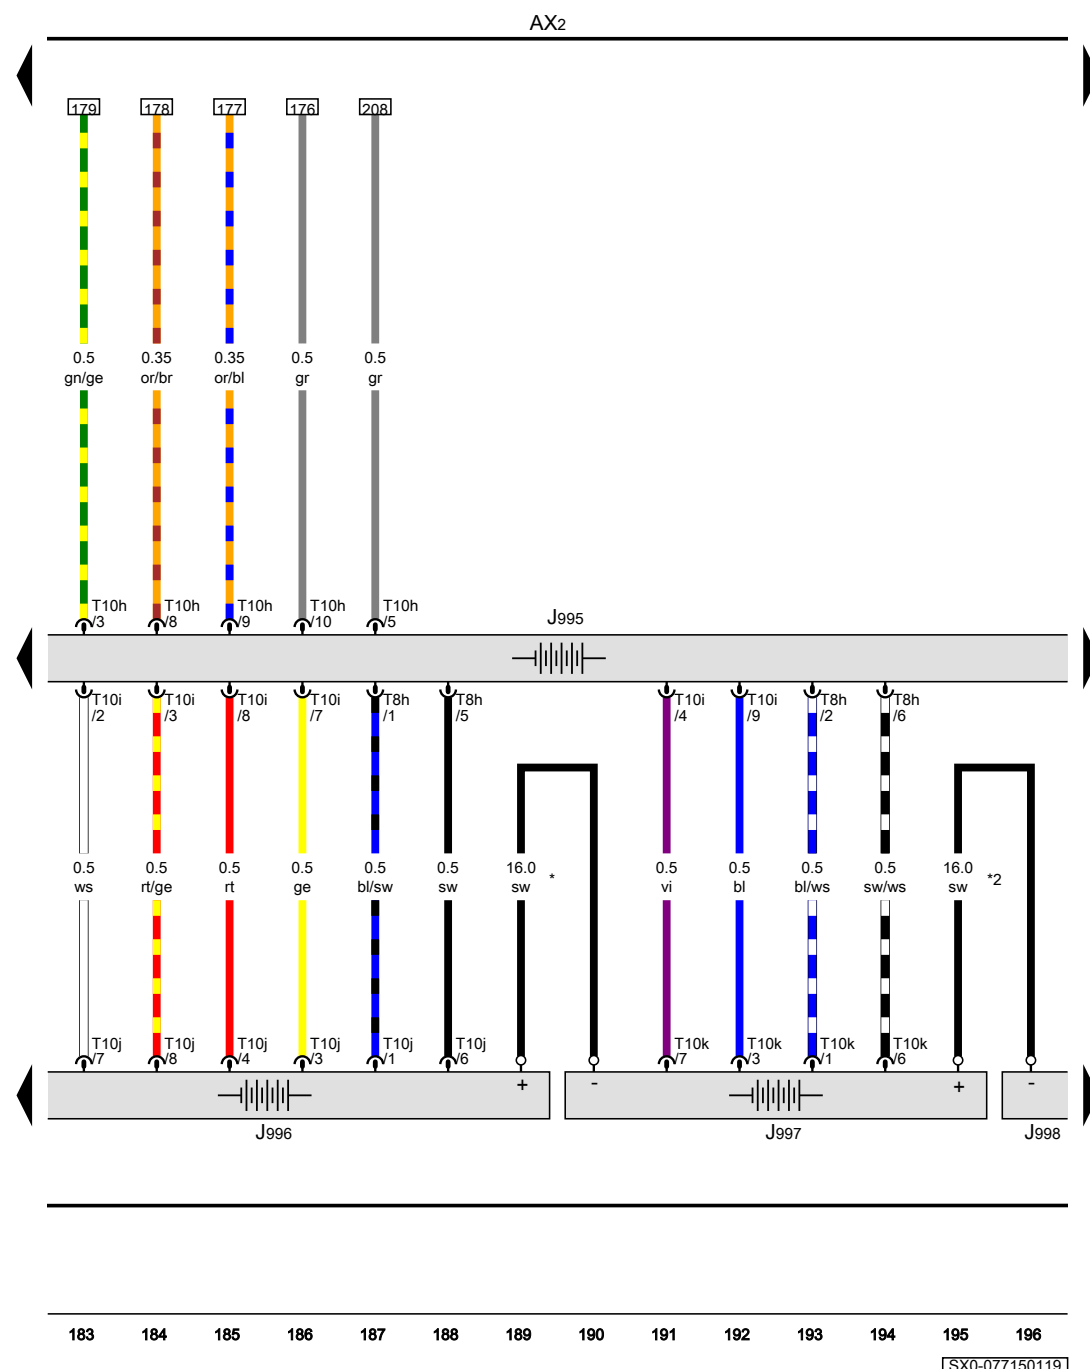


High-voltage battery 1, Battery module 5, Battery module 6, Battery module 7, Battery module 8

- AX2 High-voltage battery 1
- J995 Battery module 5
- J996 Battery module 6
- J997 Battery module 7
- J998 Battery module 8
- T8h 8-pin connector, black
- T10h 10-pin connector, black
- T10i 10-pin connector, black
- T10j 10-pin connector, black
- T10k 10-pin connector, black
- * Connecting cable 8 for battery module (P33)
- *2 Connecting cable 9 for battery module (P34)

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

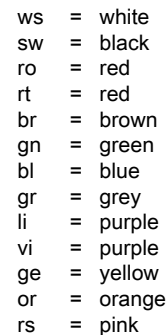

AX2	High-voltage battery 1
J995	Battery module 5
J998	Battery module 8
J999	Battery module 9
J1000	Battery module 10
J1001	Battery module 11
T8h	8-pin connector, black
T8i	8-pin connector, black
T10h	10-pin connector, black
T10i	10-pin connector, black
T10l	10-pin connector, black
T10m	10-pin connector, black
T10n	10-pin connector, black
T10o	10-pin connector, black
T10p	10-pin connector, black
*	Connecting cable 10 for battery module (P35)
*2	Connecting cable 11 for battery module (P36)
*3	Connecting cable 12 for battery module (P37)

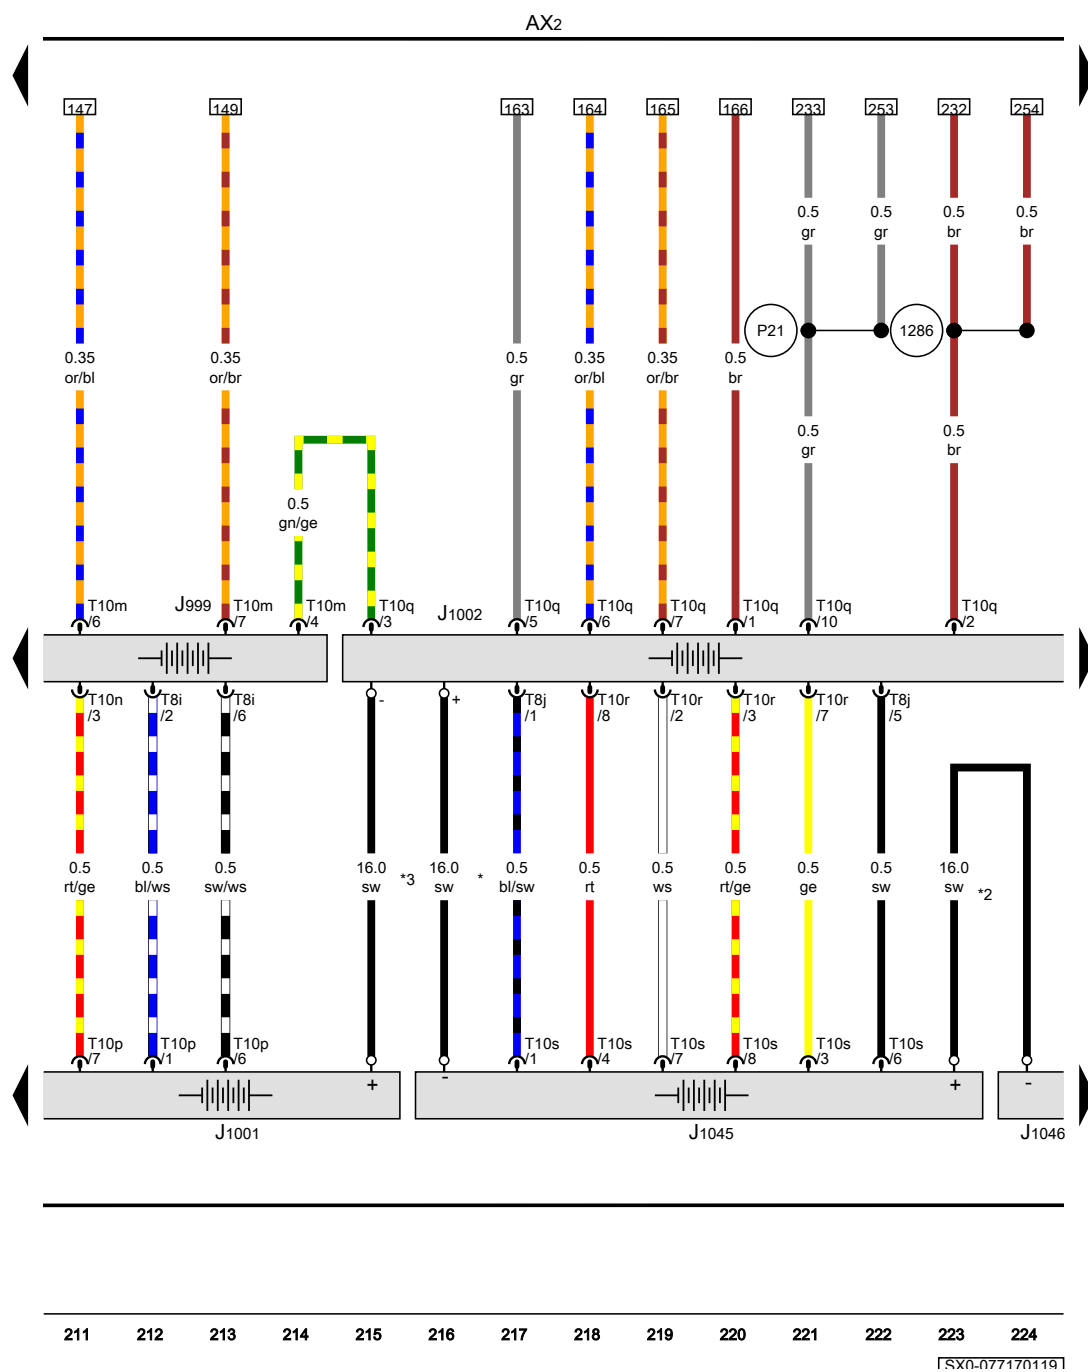

High-voltage battery 1, Battery module 9, Battery module 11, Battery module 12, Battery module 13, Battery module 14


- AX2 High-voltage battery 1
- J999 Battery module 9
- J1001 Battery module 11
- J1002 Battery module 12
- J1045 Battery module 13
- J1046 Battery module 14
- T8i 8-pin connector, black
- T8j 8-pin connector, black
- T10m 10-pin connector, black
- T10n 10-pin connector, black
- T10p 10-pin connector, black
- T10q 10-pin connector, black
- T10r 10-pin connector, black
- T10s 10-pin connector, black

1286 Earth connection 4, in high-voltage battery wiring harness

P21 Connection 12, in high-voltage battery wiring harness

- * Connecting cable 14 for battery module (P39)
- *2 Connecting cable 15 for battery module (P40)
- *3 Connecting cable 13 for battery module (P38)


- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

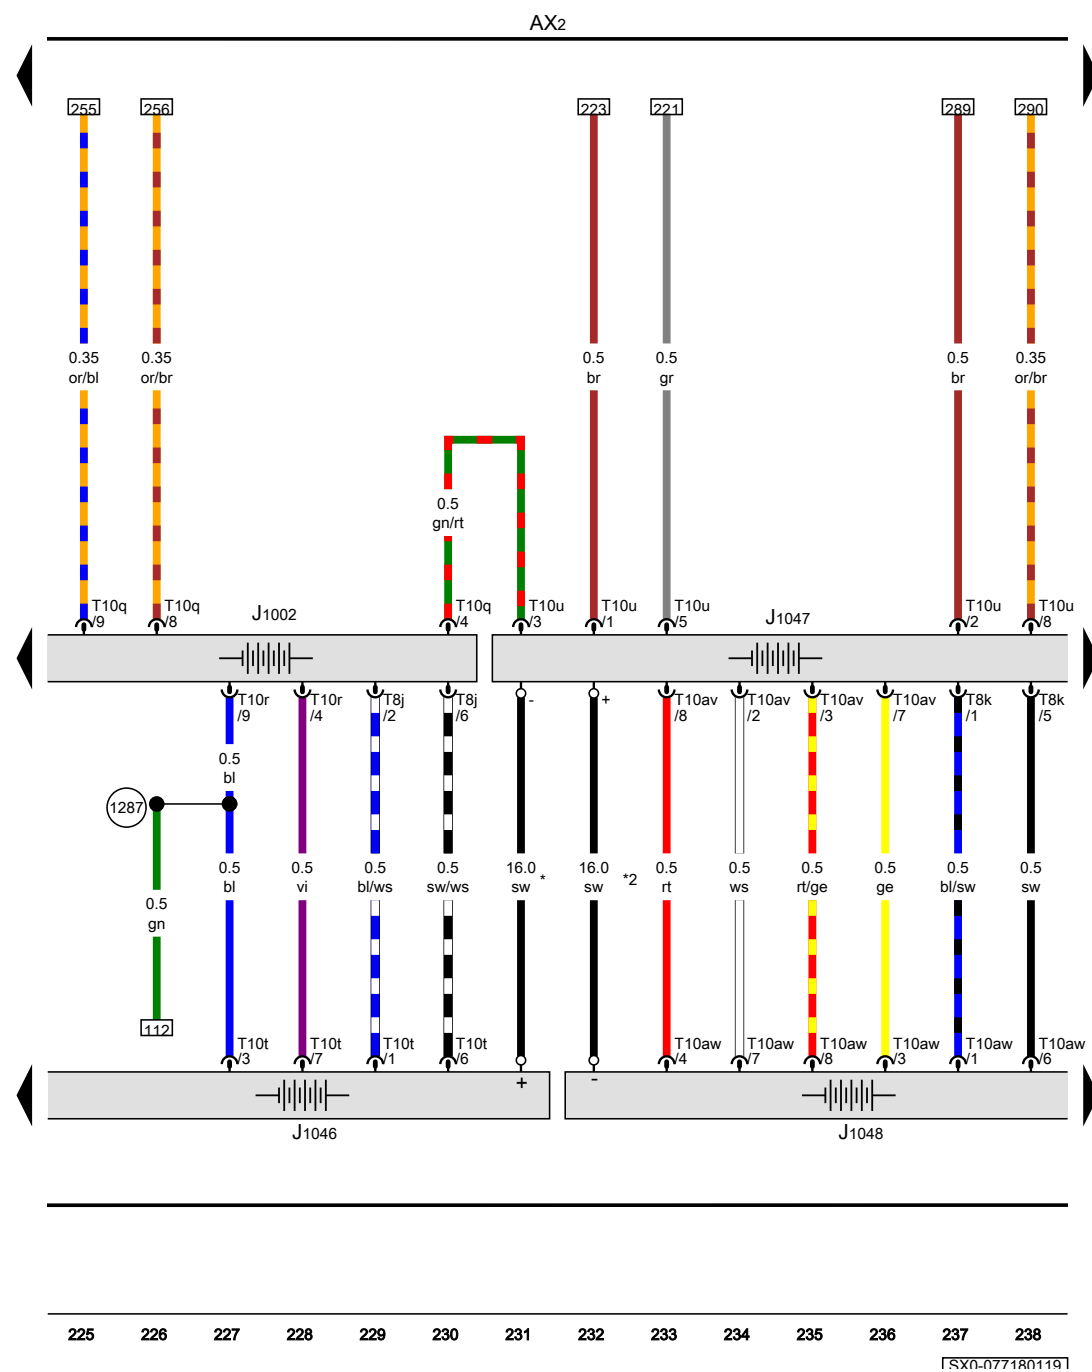

High-voltage battery 1, Battery module 12, Battery module 14, Battery module 15, Battery module 16

- AX2 High-voltage battery 1
- J1002 Battery module 12
- J1046 Battery module 14
- J1047 Battery module 15
- J1048 Battery module 16
- T8j 8-pin connector, black
- T8k 8-pin connector, black
- T10av 10-pin connector, black
- T10aw 10-pin connector, black
- T10q 10-pin connector, black
- T10r 10-pin connector, black
- T10t 10-pin connector, black
- T10u 10-pin connector, black
- 1287 Earth connection 5, in high-voltage battery wiring harness
- * Connecting cable 16 for battery module (P41)
- *2 Connecting cable 17 for battery module (P42)


ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

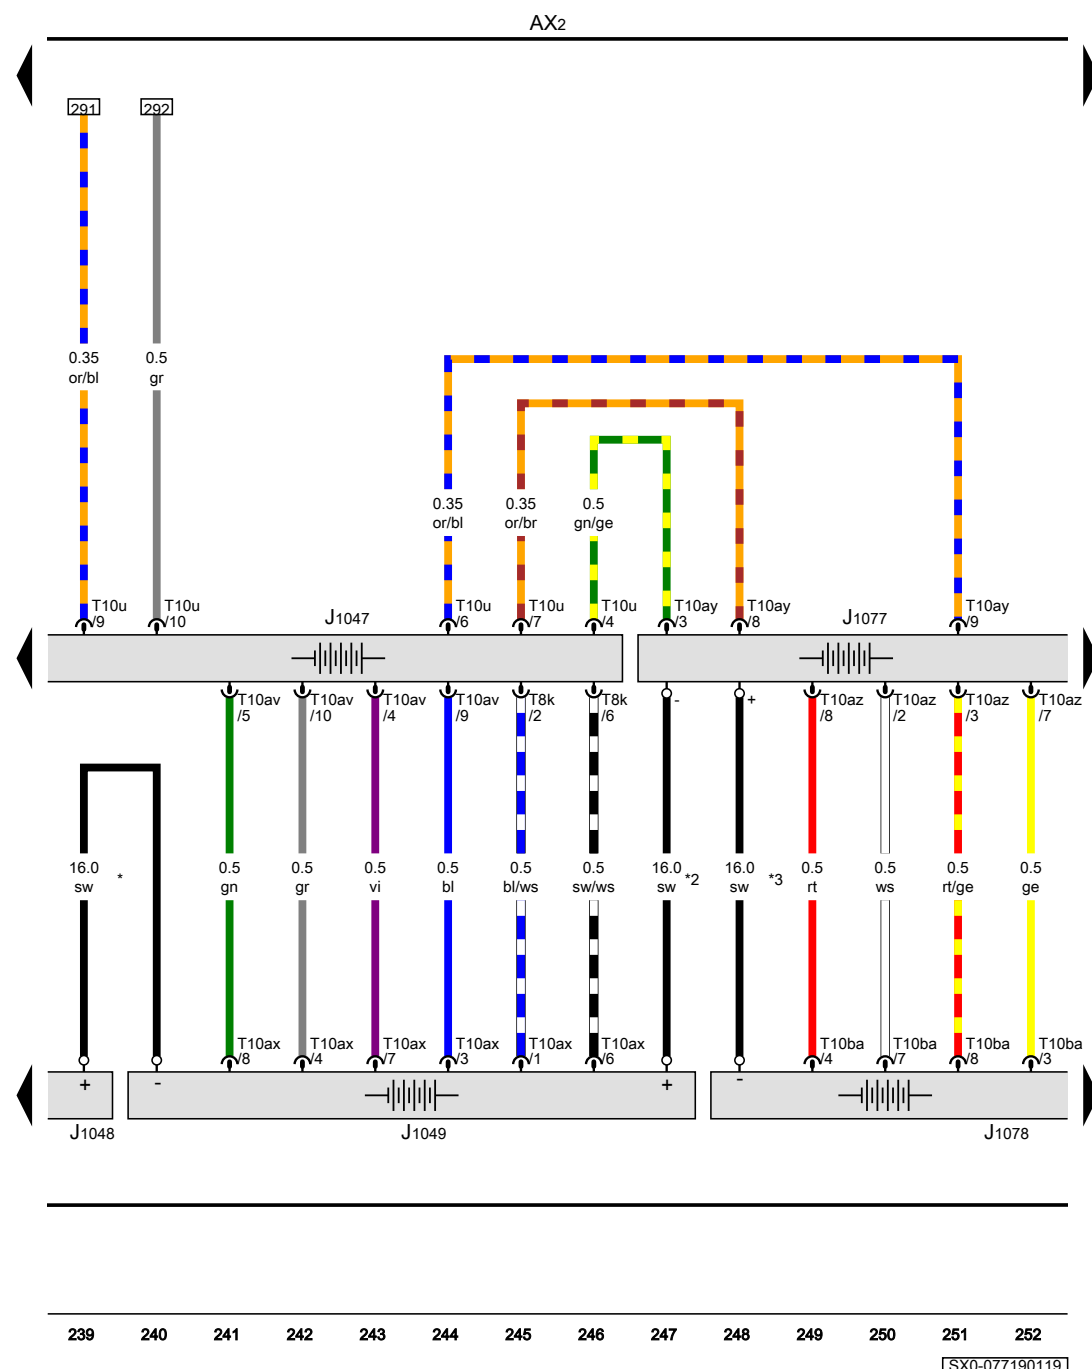

High-voltage battery 1, Battery module 15, Battery module 16, Battery module 17, Battery module 18, Battery module 19

- AX2 High-voltage battery 1
- J1047 Battery module 15
- J1048 Battery module 16
- J1049 Battery module 17
- J1077 Battery module 18
- J1078 Battery module 19
- T8k 8-pin connector, black
- T10av 10-pin connector, black
- T10ax 10-pin connector, black
- T10ay 10-pin connector, black
- T10az 10-pin connector, black
- T10ba 10-pin connector, black
- T10u 10-pin connector, black
- * Connecting cable 18 for battery module (P43)
- *2 Connecting cable 19 for battery module (P44)
- *3 Connecting cable 20 for battery module (P45)


ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink

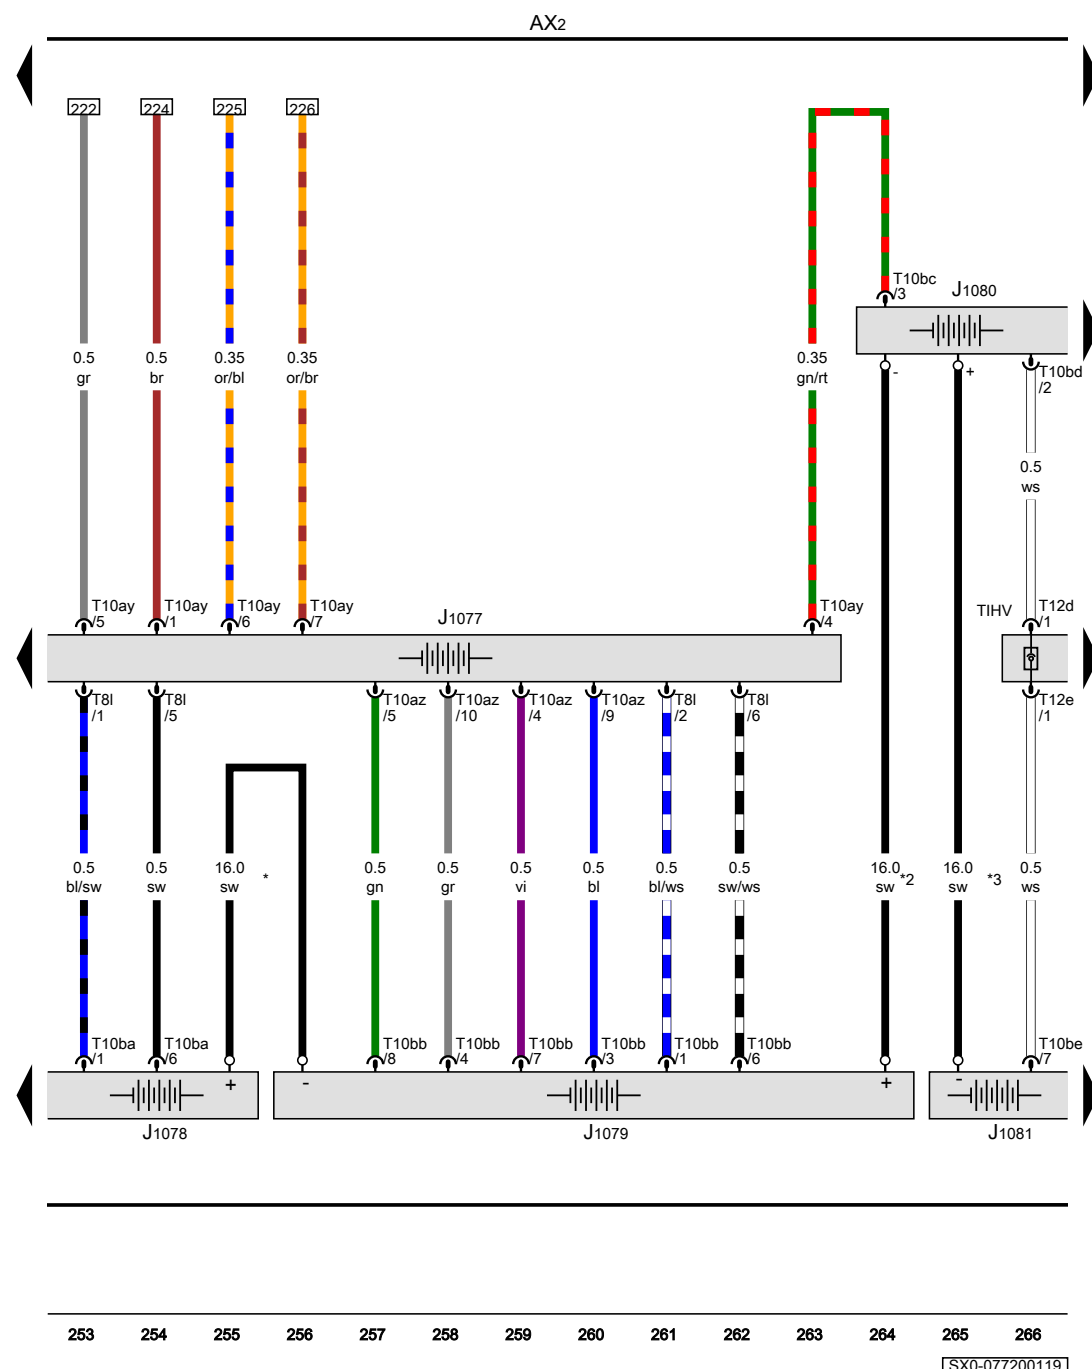

High-voltage battery 1, Battery module 18, Battery module 19, Battery module 20, Battery module 21, Battery module 22

- AX2 High-voltage battery 1
- J1077 Battery module 18
- J1078 Battery module 19
- J1079 Battery module 20
- J1080 Battery module 21
- J1081 Battery module 22
- T8l 8-pin connector, black
- T10ay 10-pin connector, black
- T10az 10-pin connector, black
- T10ba 10-pin connector, black
- T10bb 10-pin connector, black
- T10bc 10-pin connector, black
- T10bd 10-pin connector, black
- T10be 10-pin connector, black
- T12d 12-pin connector, black
- T12e 12-pin connector, black
- TIHV Coupling point in high-voltage battery
- * Connecting cable 21 for battery module (P46)
- *2 Connecting cable 22 for battery module (P47)
- *3 Connecting cable 23 for battery module (P48)


- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

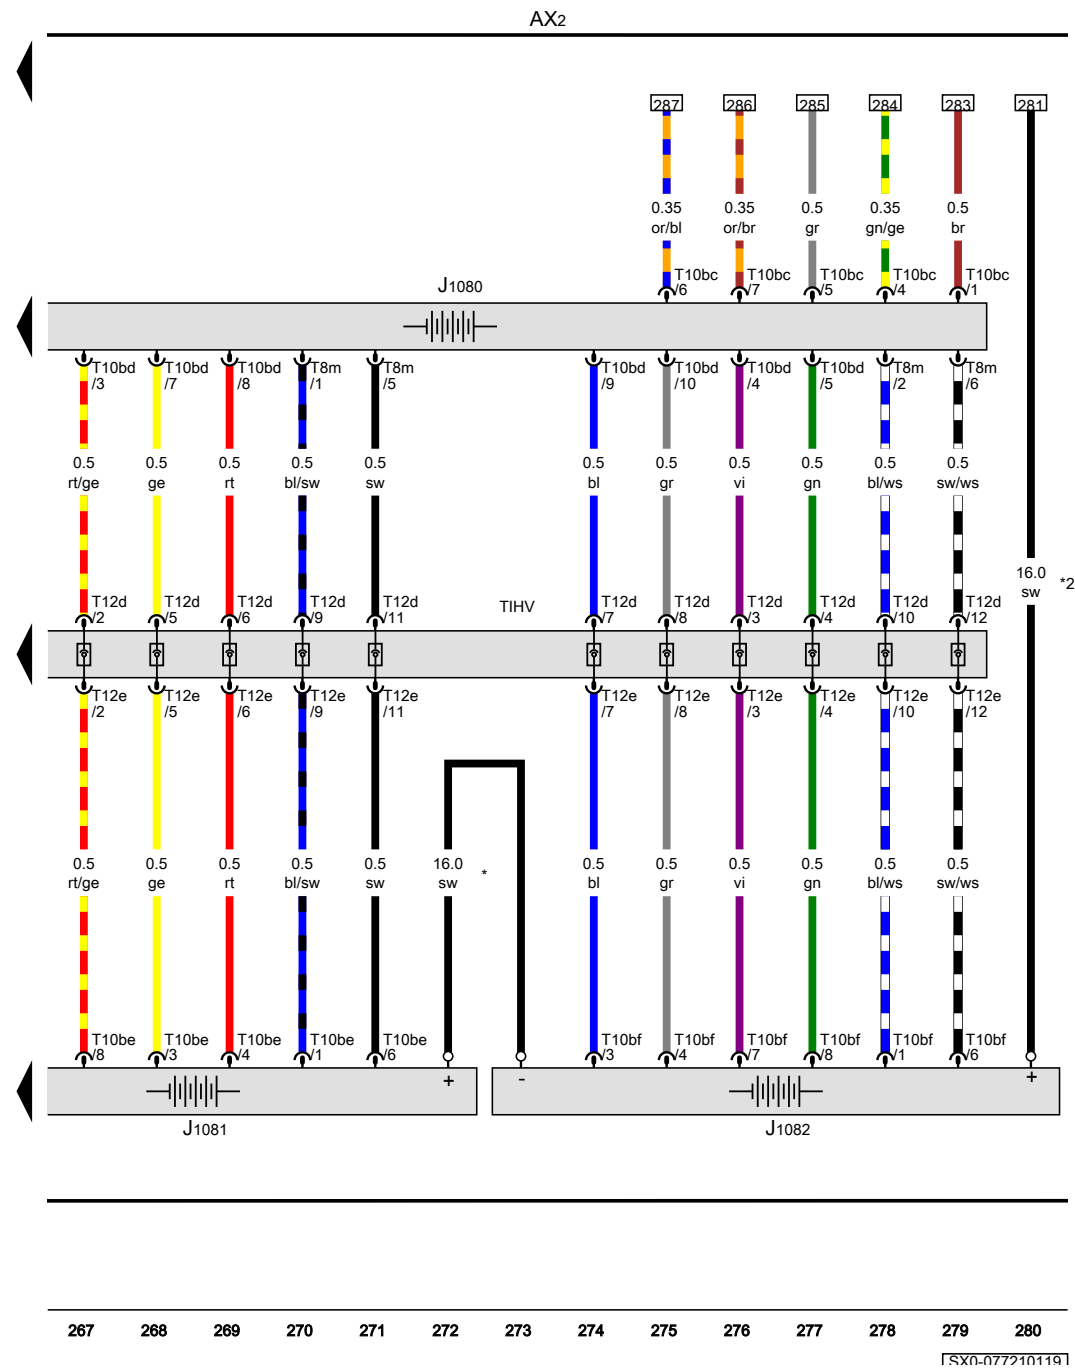

High-voltage battery 1, Battery module 21, Battery module 22

- AX2 High-voltage battery 1
- J1080 Battery module 21
- J1081 Battery module 22
- J1082 Battery module 23
- T8m 8-pin connector, black
- T10bc 10-pin connector, black
- T10bd 10-pin connector, black
- T10be 10-pin connector, black
- T10bf 10-pin connector, black
- T12d 12-pin connector, black
- T12e 12-pin connector, black
- TIHV Coupling point in high-voltage battery
- * Connecting cable 24 for battery module (P49)
- *2 Connecting cable 25 for battery module (P50)

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

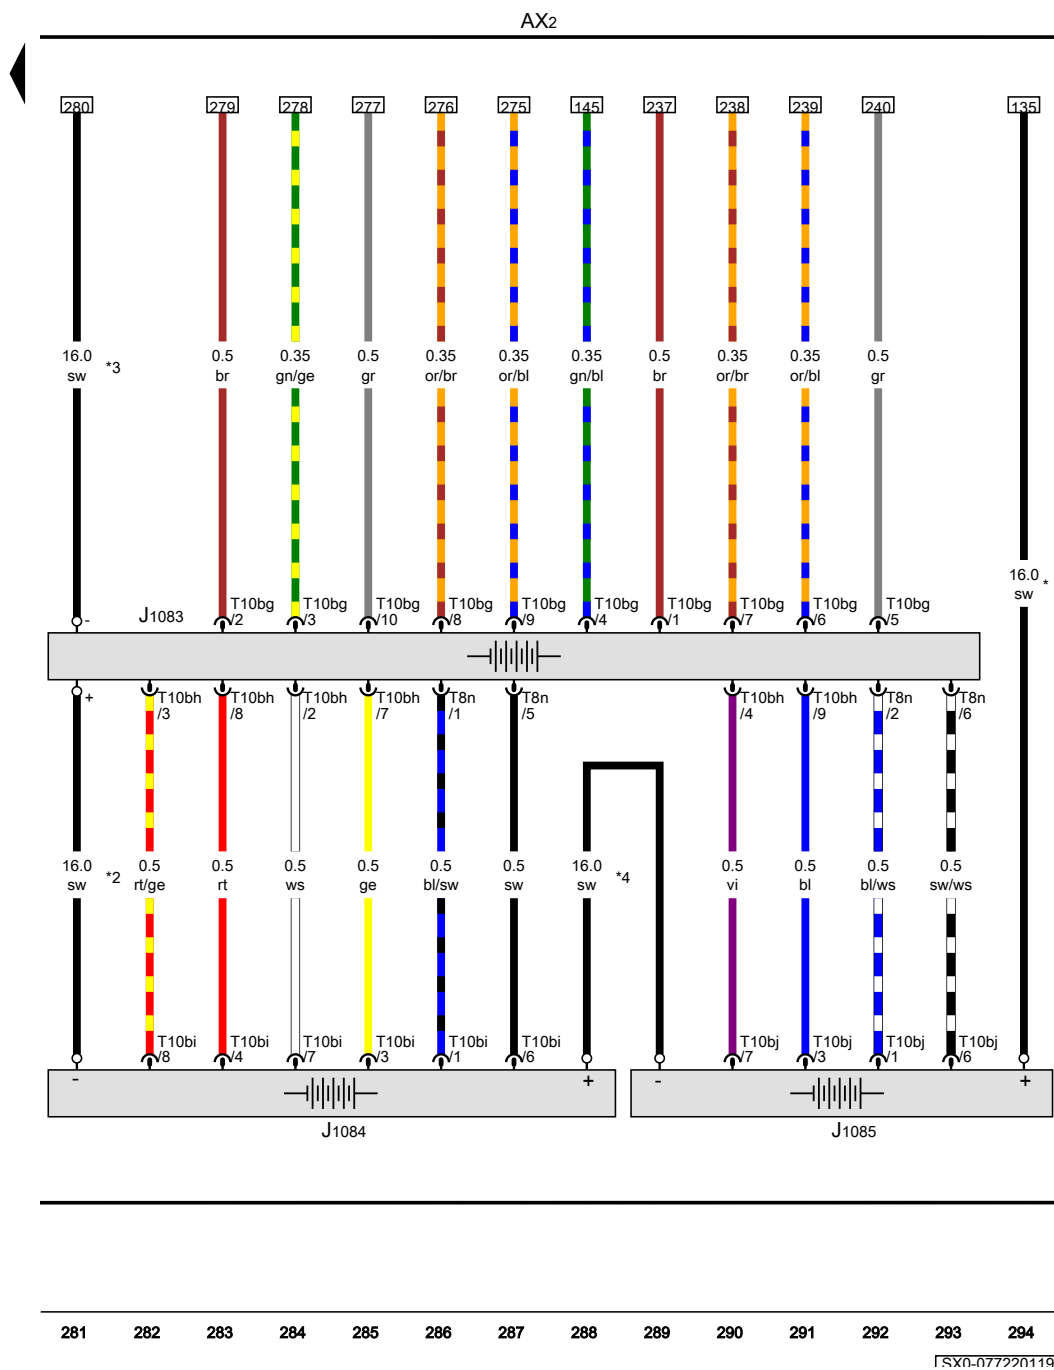

High-voltage battery 1, Battery module 24, Battery module 25


- AX2 High-voltage battery 1
- J1083 Battery module 24
- J1084 Battery module 25
- J1085 Battery module 26
- T8n 8-pin connector, black
- T10bg 10-pin connector, black
- T10bh 10-pin connector, black
- T10bi 10-pin connector, black
- T10bj 10-pin connector, black
- * Connecting cable 28 for battery module (P55)
- *2 Connecting cable 26 for battery module (P51)
- *3 Connecting cable 25 for battery module (P50)
- *4 Connecting cable 27 for battery module (P54)

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

Pilot line for high-voltage system

From December 2017

Charging unit 1 for high-voltage battery, Power and control electronics for electric drive, Control unit for air conditioning compressor, High-voltage heater (PTC) control unit, Maintenance connector for high-voltage system, Three-phase current drive

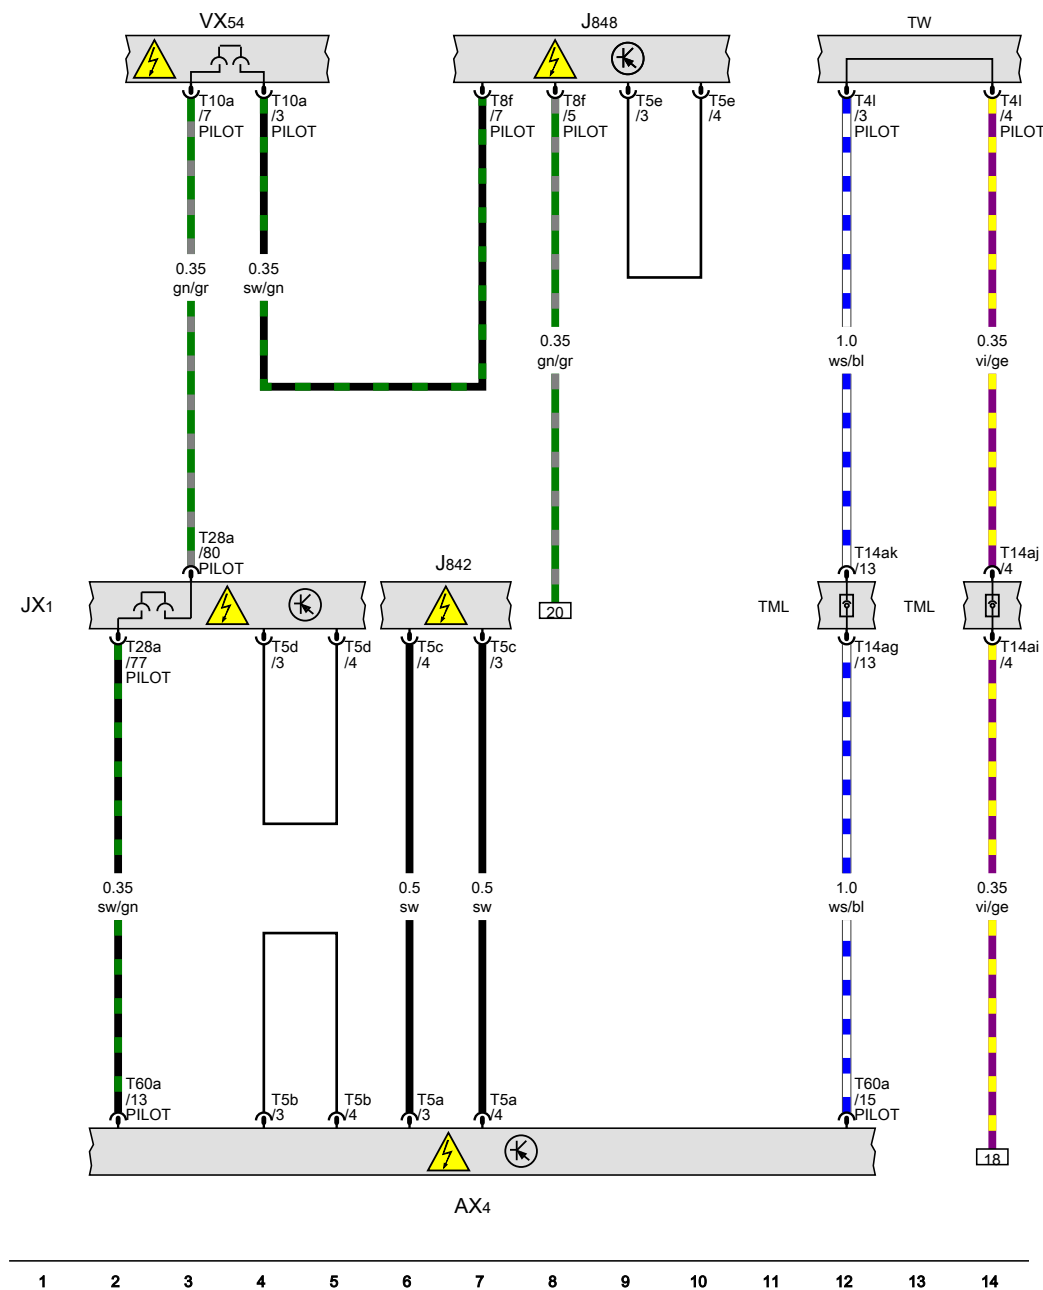


ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

15X0-0780201191

High-voltage battery 1, Battery regulation control unit

- AX2 High-voltage battery 1
- J840 Battery regulation control unit
- T2c 2-pin connector, black
- T2d 2-pin connector, black
- T2e 2-pin connector, black
- T2f 2-pin connector, black
- T6a 6-pin connector, orange
- T6b 6-pin connector, orange
- T6c 6-pin connector, orange
- T6d 6-pin connector, orange
- T16ac 16-pin connector, black
- T16ad 16-pin connector, black
- T20a 20-pin connector, black
- T20q 20-pin connector, black
- T32c 32-pin connector, black
- TAHV Coupling point on high-voltage battery
- TIHV Coupling point in high-voltage battery

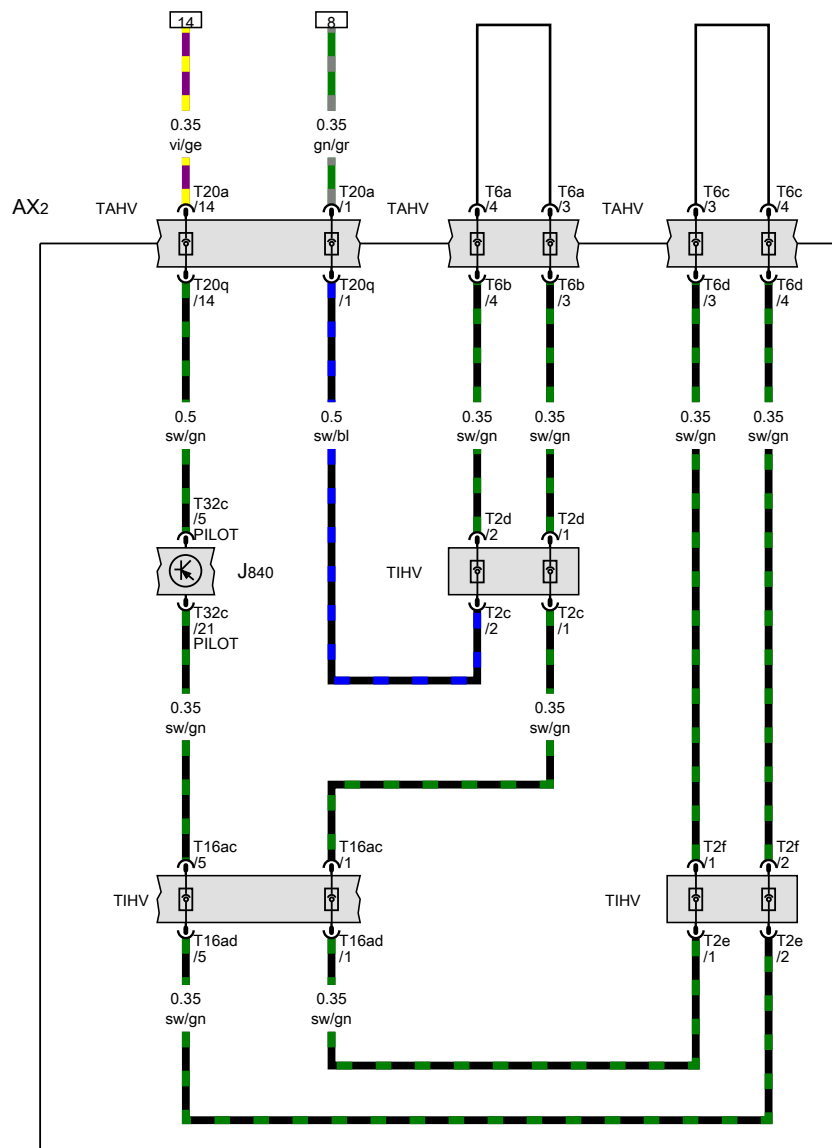

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

Charging sockets for high-voltage system , (ES7)


From December 2017


Module for battery charge selector buttons, Immediate charge button, Charge voltage control unit for high-voltage battery, Fuse holder B

- EX32 Module for battery charge selector buttons, near tank filler neck
- E766 Immediate charge button
- J966 Charge voltage control unit for high-voltage battery
- SB Fuse holder B
- SB30 Fuse 30 on fuse holder B
- SB48 Fuse 48 on fuse holder B
- T8a 8-pin connector, black
- T8b 8-pin connector, black
- T8c 8-pin connector, black
- T32a 32-pin connector, grey
- T32b 32-pin connector, black
- TCR Coupling point on right C-pillar

- 77 Earth point, lower part of left B-pillar
- A2 Positive connection (15), in dash panel wiring harness
- * Up to July 2018
- *2 Pre-wired component
- *3 From July 2018

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink

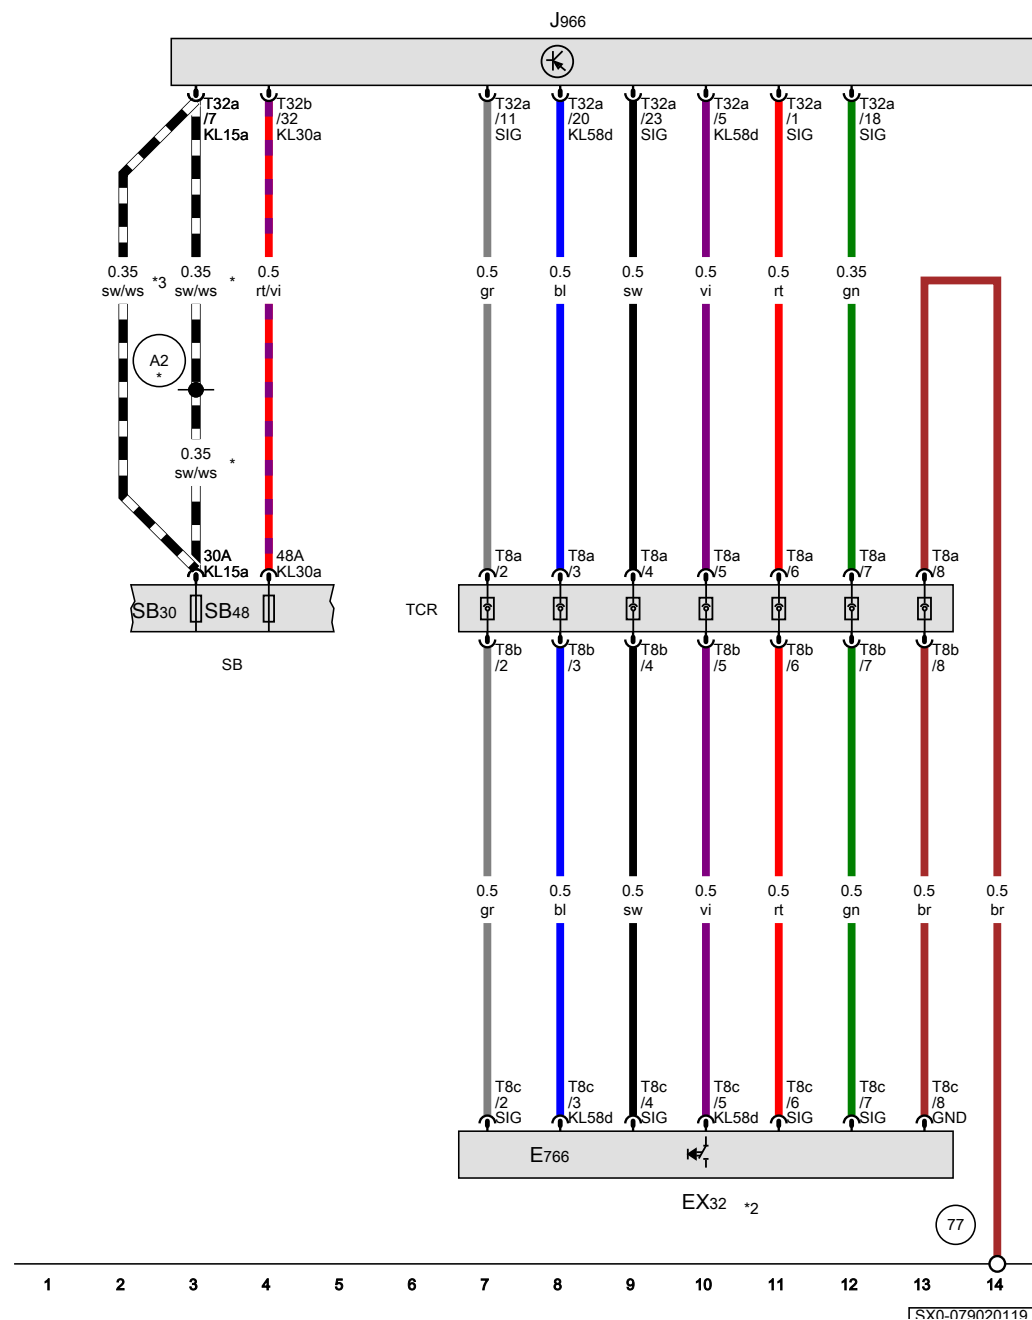

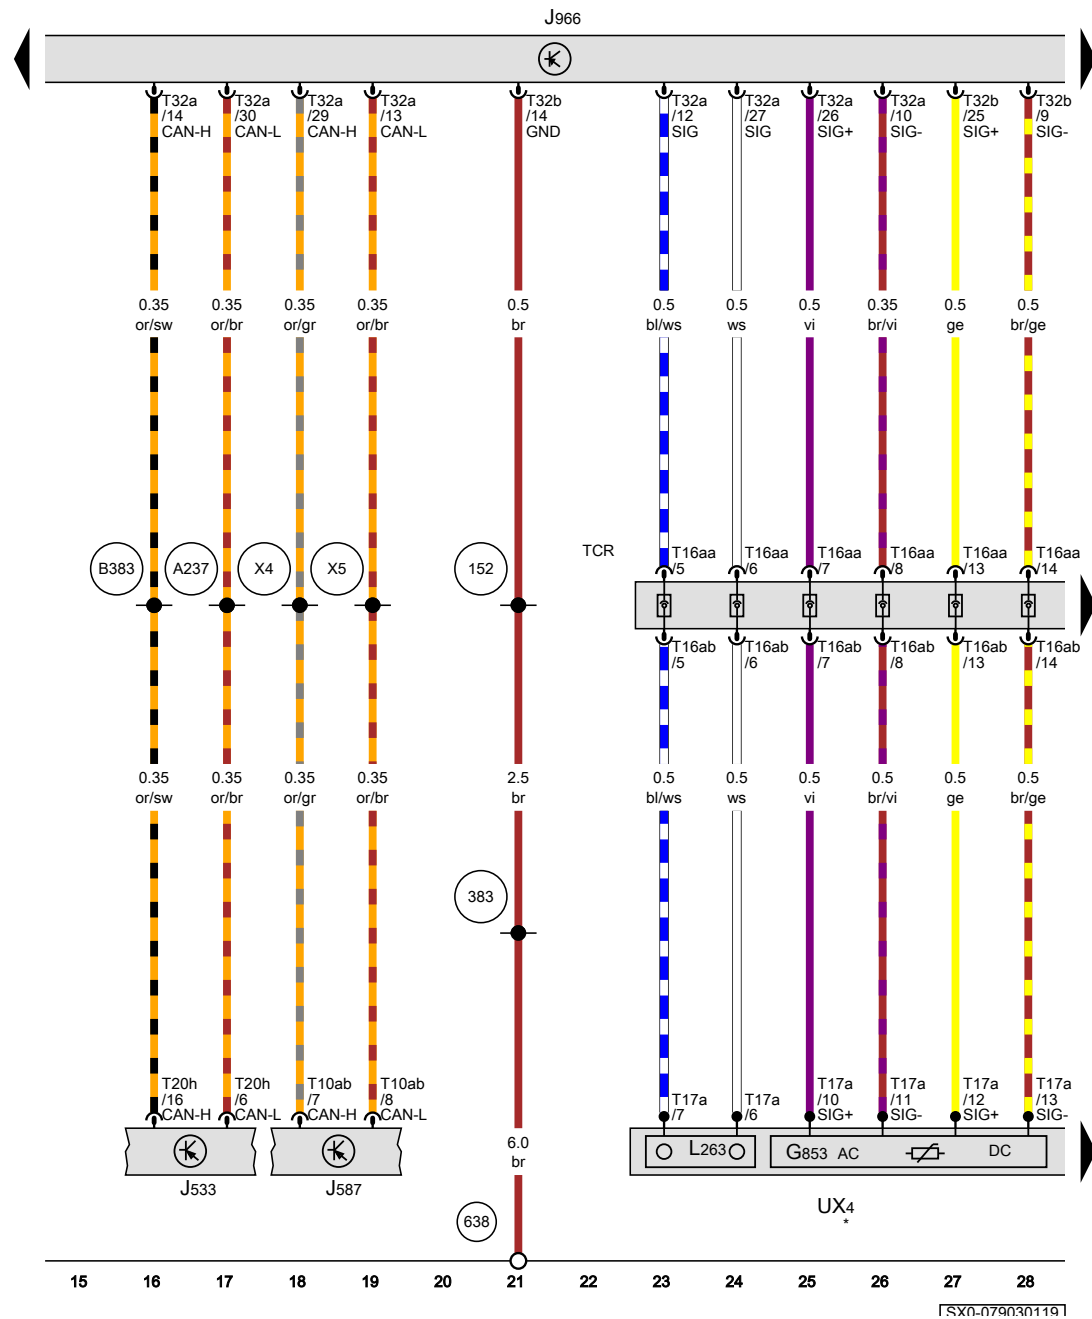

Data bus diagnostic interface, Selector lever sensors control unit, Charge voltage control unit for high-voltage battery, High-voltage battery charging socket 1

G853 Temperature sender for charging socket 1

J533 Data bus diagnostic interface

J587 Selector lever sensors control unit

J966 Charge voltage control unit for high-voltage battery

L263 LED module for charging socket 1

T10ab 10-pin connector, red

T16aa 16-pin connector, black

T16ab 16-pin connector, black

T17a 17-pin connector, black

T20h 20-pin connector, red

T32a 32-pin connector, grey

T32b 32-pin connector, black

TCR	Coupling point on right C-pillar
-----	----------------------------------

UX4	High-voltage battery charging socket 1
-----	--

(152) Earth connection 2, in front wiring harness

(383) Earth connection 18, in main wiring harness

(638) Earth point, on right A-pillar

A237 Connection 1 (powertrain CAN bus, low), in dash panel wiring harness


(B383) Connection 1 (powertrain CAN bus, high), in main wiring harness

X4 Connection 1 (CAN bus hybrid, high), in engine compartment wiring harness

X5 Connection 1 (CAN bus hybrid, low), in engine compartment wiring harness

* Pre-wired component

ws	=	white
sw	=	black
ro	=	red
rt	=	red
br	=	brown
gn	=	green
bl	=	blue
gr	=	grey
li	=	purple
vi	=	purple
ge	=	yellow
or	=	orange
rs	=	pink

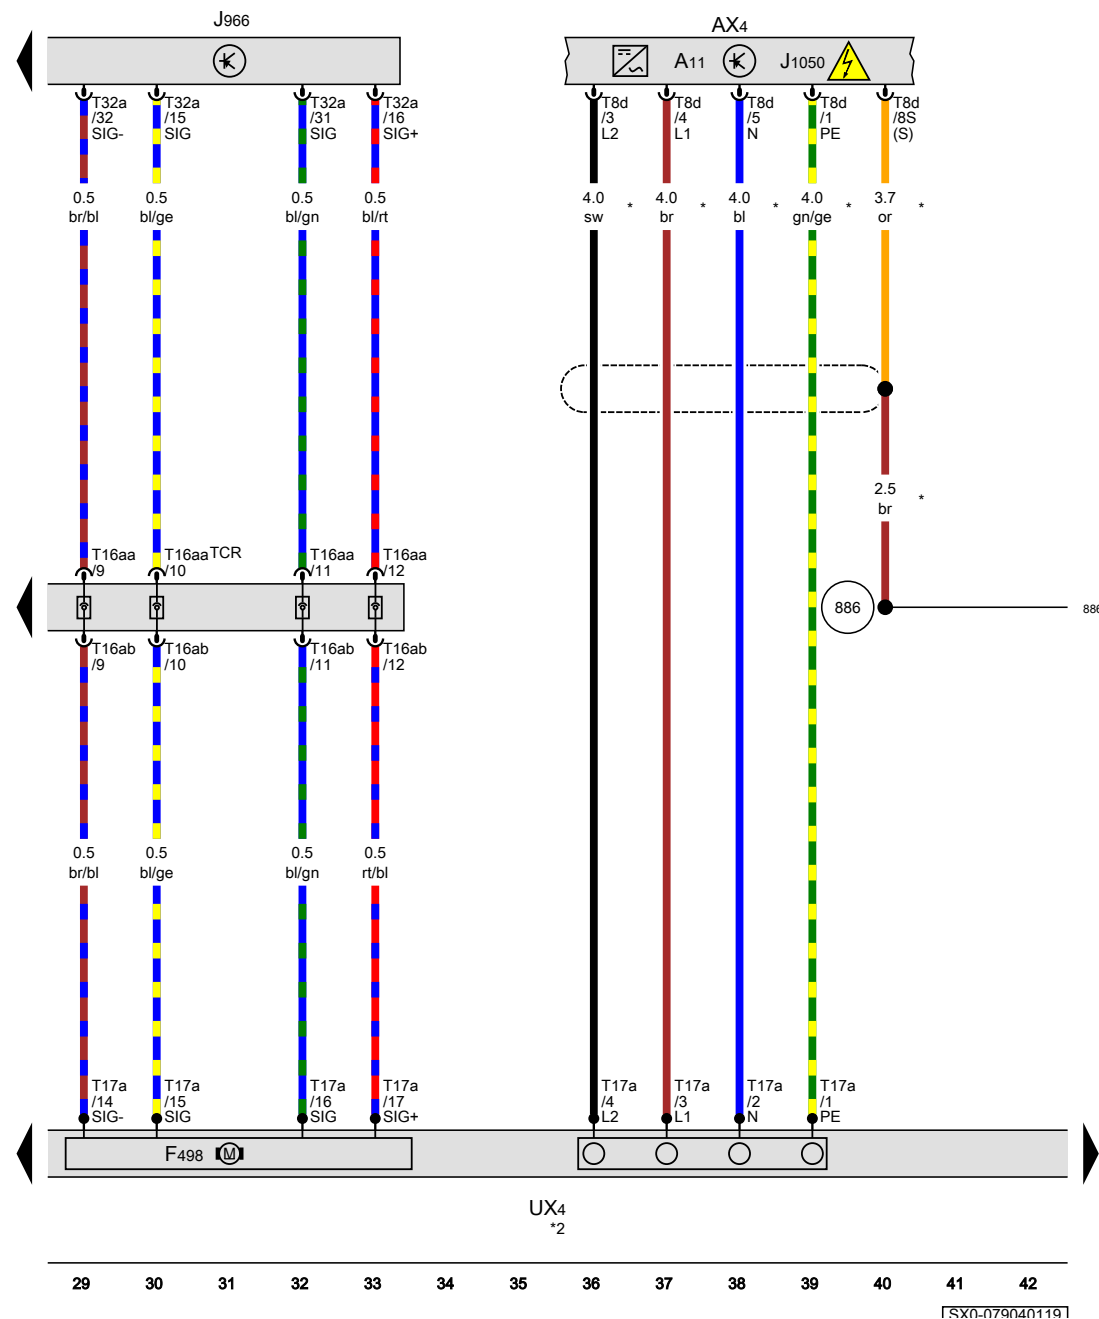


Onboard charging unit, Charge voltage control unit for high-voltage battery, High-voltage battery charging socket 1

- AX4 Charging unit 1 for high-voltage battery
- A11 Onboard charging unit
- F498 Actuator for high-voltage charging socket lock 1
- J966 Charge voltage control unit for high-voltage battery
- J1050 Control unit for high-voltage battery charging unit
- T8d 8-pin connector, orange
- T16aa 16-pin connector, black
- T16ab 16-pin connector, black
- T17a 17-pin connector, black
- T32a 32-pin connector, grey
- TCR Coupling point on right C-pillar
- UX4 High-voltage battery charging socket 1

886 Earth connection 4, in high-voltage battery wiring harness

- * High-voltage wire 1 for high-voltage charge current distributor/ high-voltage charging socket (P18)
- *2 Pre-wired component

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

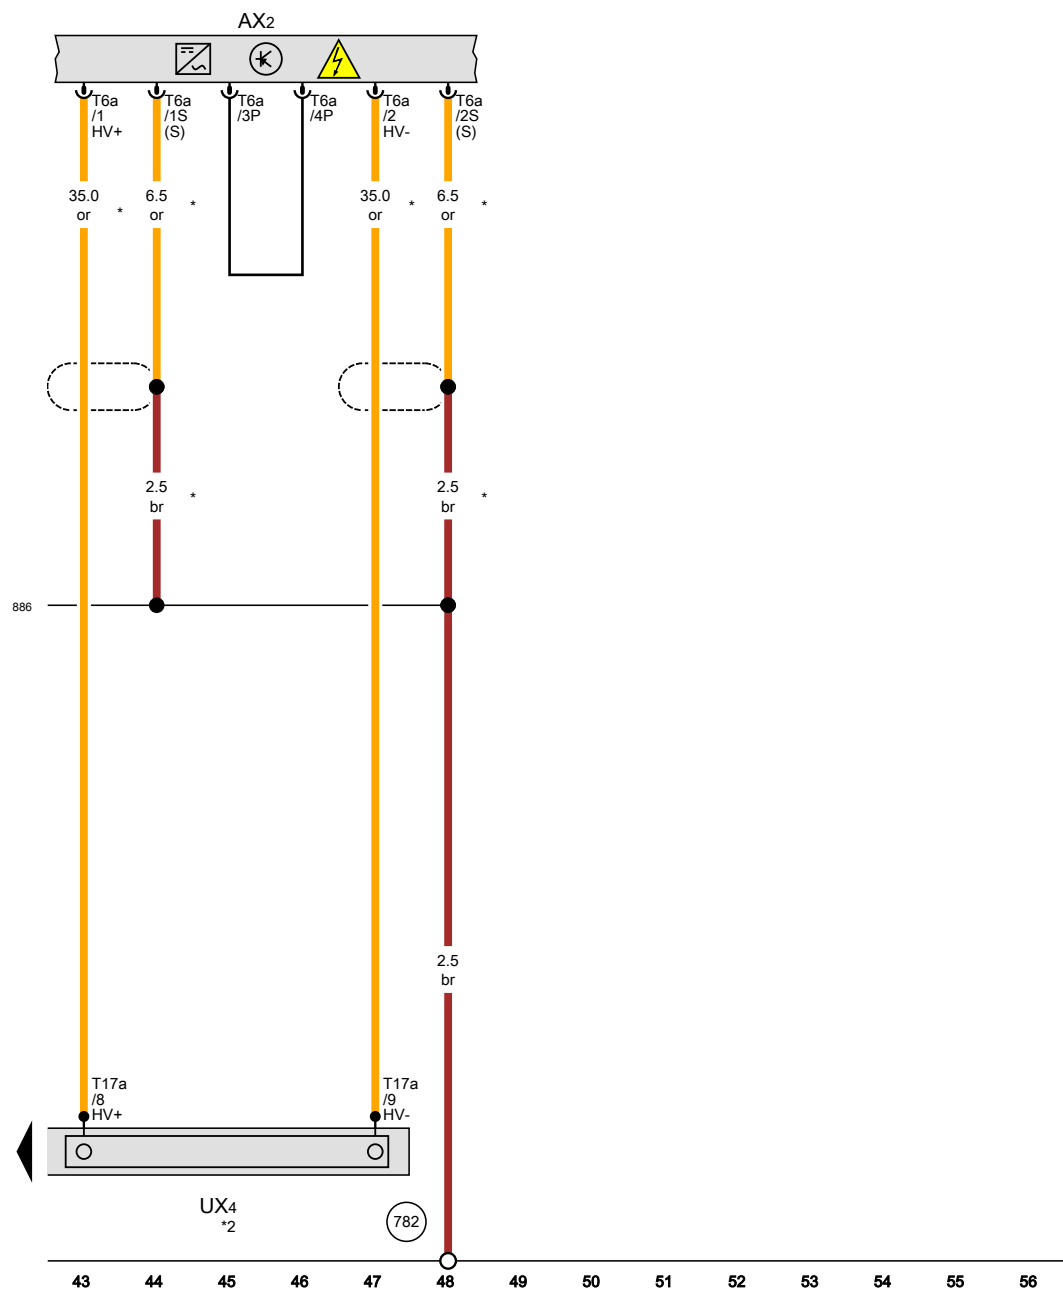

High-voltage battery 1, High-voltage battery charging socket 1

- AX2 High-voltage battery 1
- T6a 6-pin connector, black
- T17a 17-pin connector, black
- UX4 High-voltage battery charging socket 1

- 782 Earth point 1, on high-voltage battery
- 886 Earth connection 4, in high-voltage battery wiring harness

- * High-voltage wire for high-voltage battery charging (P52)
- *2 Pre-wired component


- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

[SX0-079050119]


Electric drive system , EBHA

From December 2017

Vacuum pump relay, Battery monitor control unit, Fuse holder B, Vacuum pump

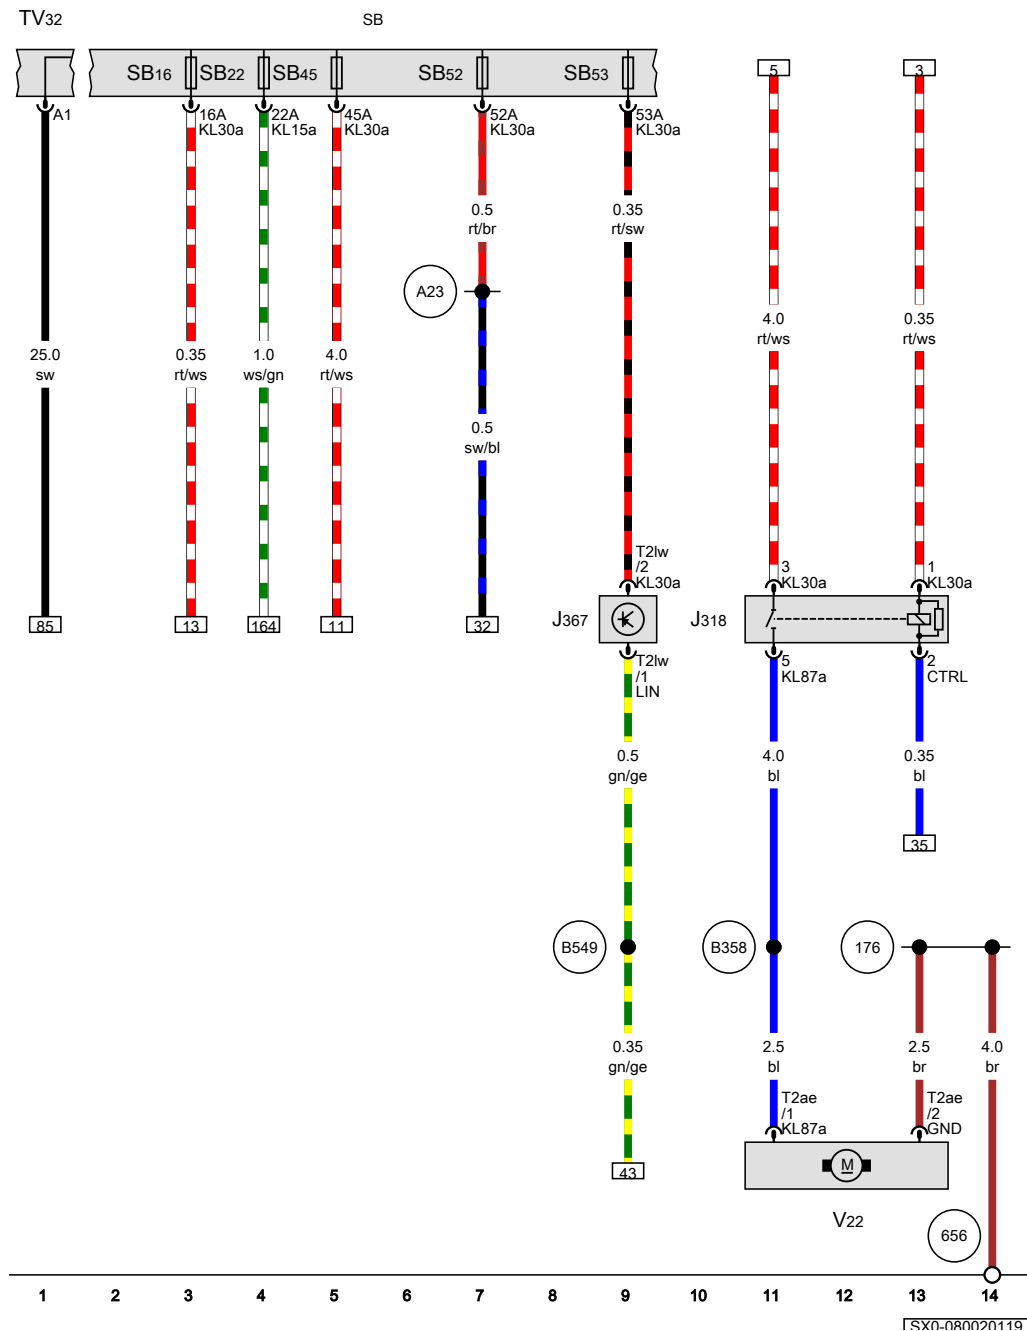

- J318 Vacuum pump relay
- J367 Battery monitor control unit
- SB Fuse holder B
- SB16 Fuse 16 on fuse holder B
- SB22 Fuse 22 on fuse holder B
- SB45 Fuse 45 on fuse holder B
- SB52 Fuse 52 on fuse holder B
- SB53 Fuse 53 on fuse holder B
- T2ae 2-pin connector, black
- T2lw 2-pin connector, black
- TV32 Jump start connection
- V22 Vacuum pump
- 176 Earth connection, in right headlight wiring harness
- 656 Earth point, on right headlight
- A23 Connection (30al), in dash panel wiring harness
- B358 Positive connection 9 (87a) in main wiring harness
- B549 Connection 2 (LIN bus) in main wiring harness

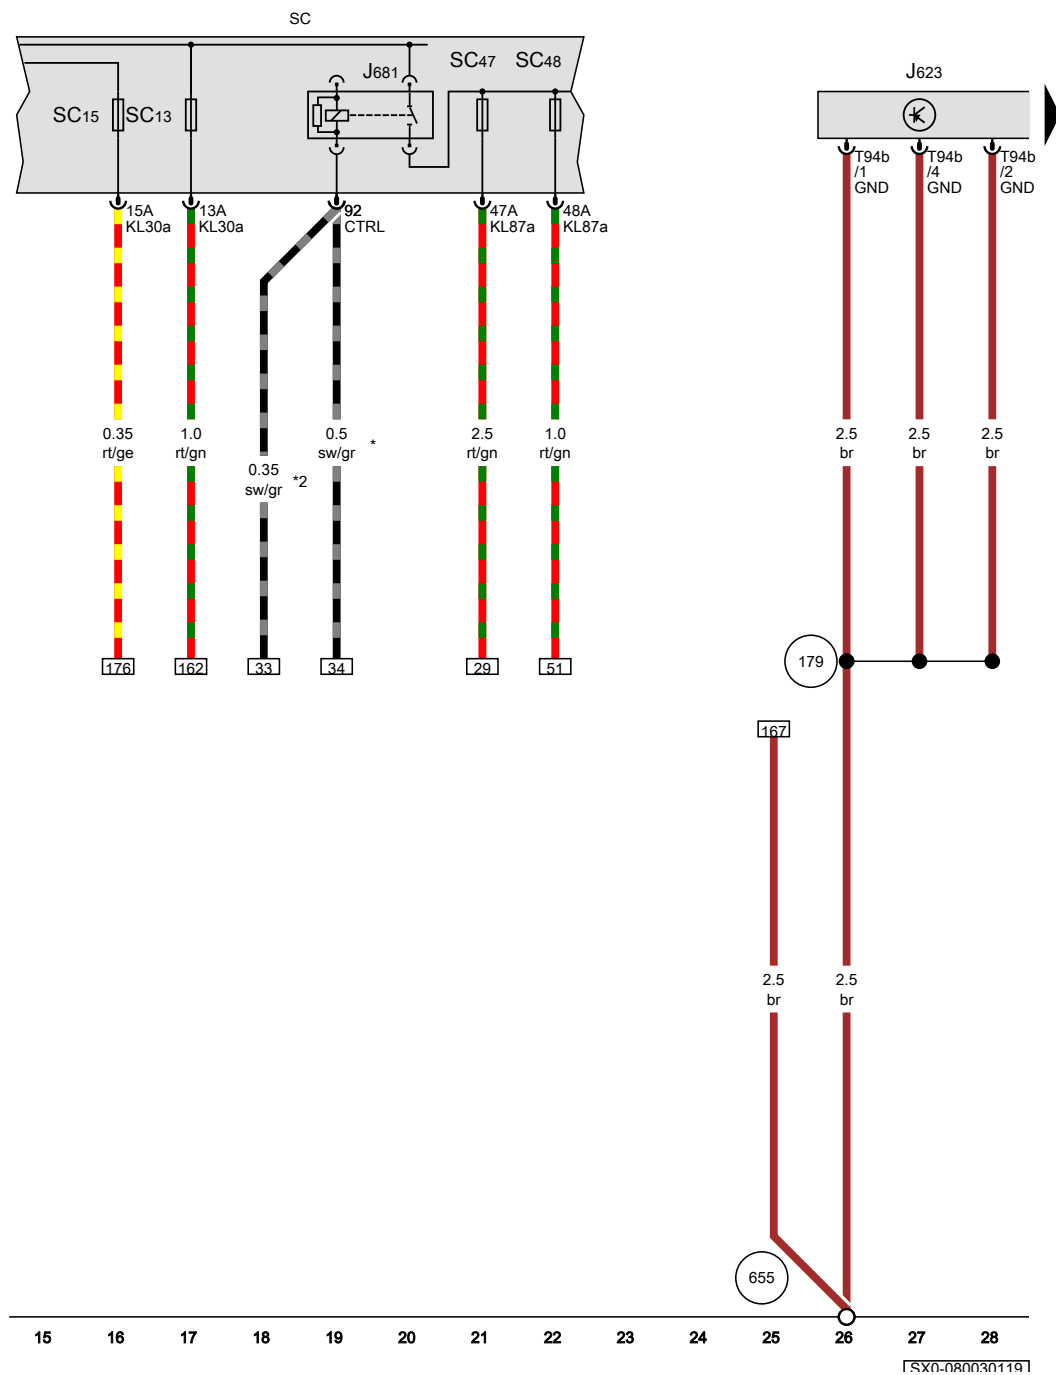

Engine/motor control unit, Fuse holder C


- J623 Engine/motor control unit
- J681 Terminal 15 voltage supply relay 2
- SC Fuse holder C
- SC13 Fuse 13 on fuse holder C
- SC15 Fuse 15 on fuse holder C
- SC47 Fuse 47 on fuse holder C
- SC48 Fuse 48 on fuse holder C
- T94b 94-pin connector, black

179 Earth connection, in left headlight wiring harness

655 Earth point, on left headlight


* Up to July 2018

*2 From July 2018

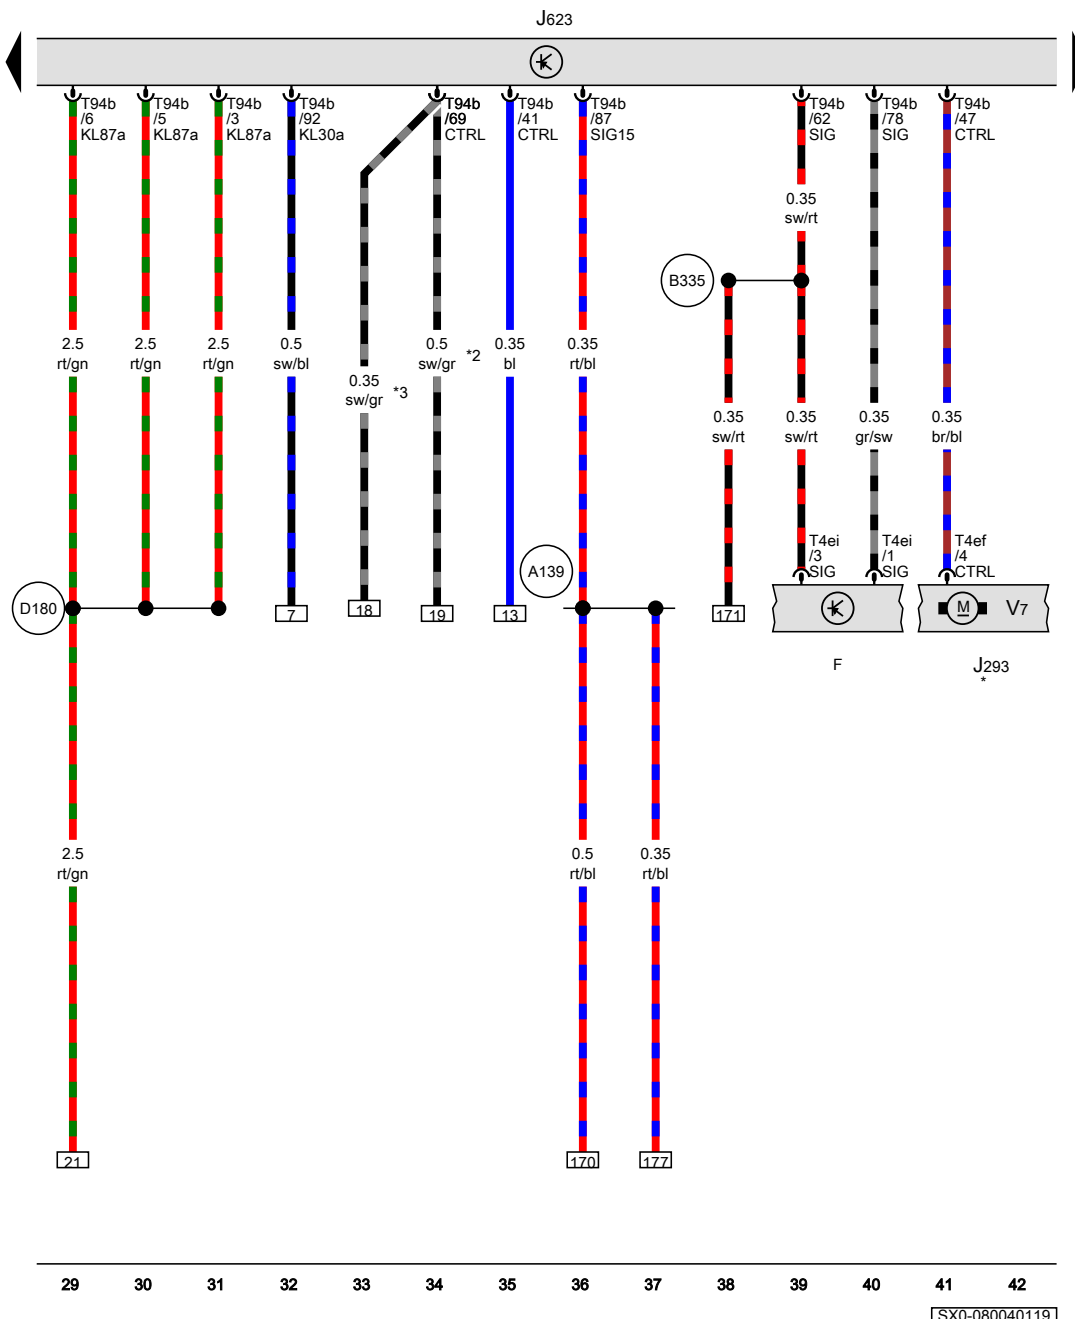

Brake light switch, Radiator fan control unit, Engine/motor control unit


- F Brake light switch
- J293 Radiator fan control unit
- J623 Engine/motor control unit
- T4ef 4-pin connector, black
- T4ei 4-pin connector, black
- T94b 94-pin connector, black
- V7 Radiator fan
- A139 Connection 3 (15) in dash panel wiring harness
- B335 Connection 1 (54), in main wiring harness
- D180 Connection (87a), in engine compartment wiring harness
- * Pre-wired component
- *2 Up to July 2018
- *3 From July 2018

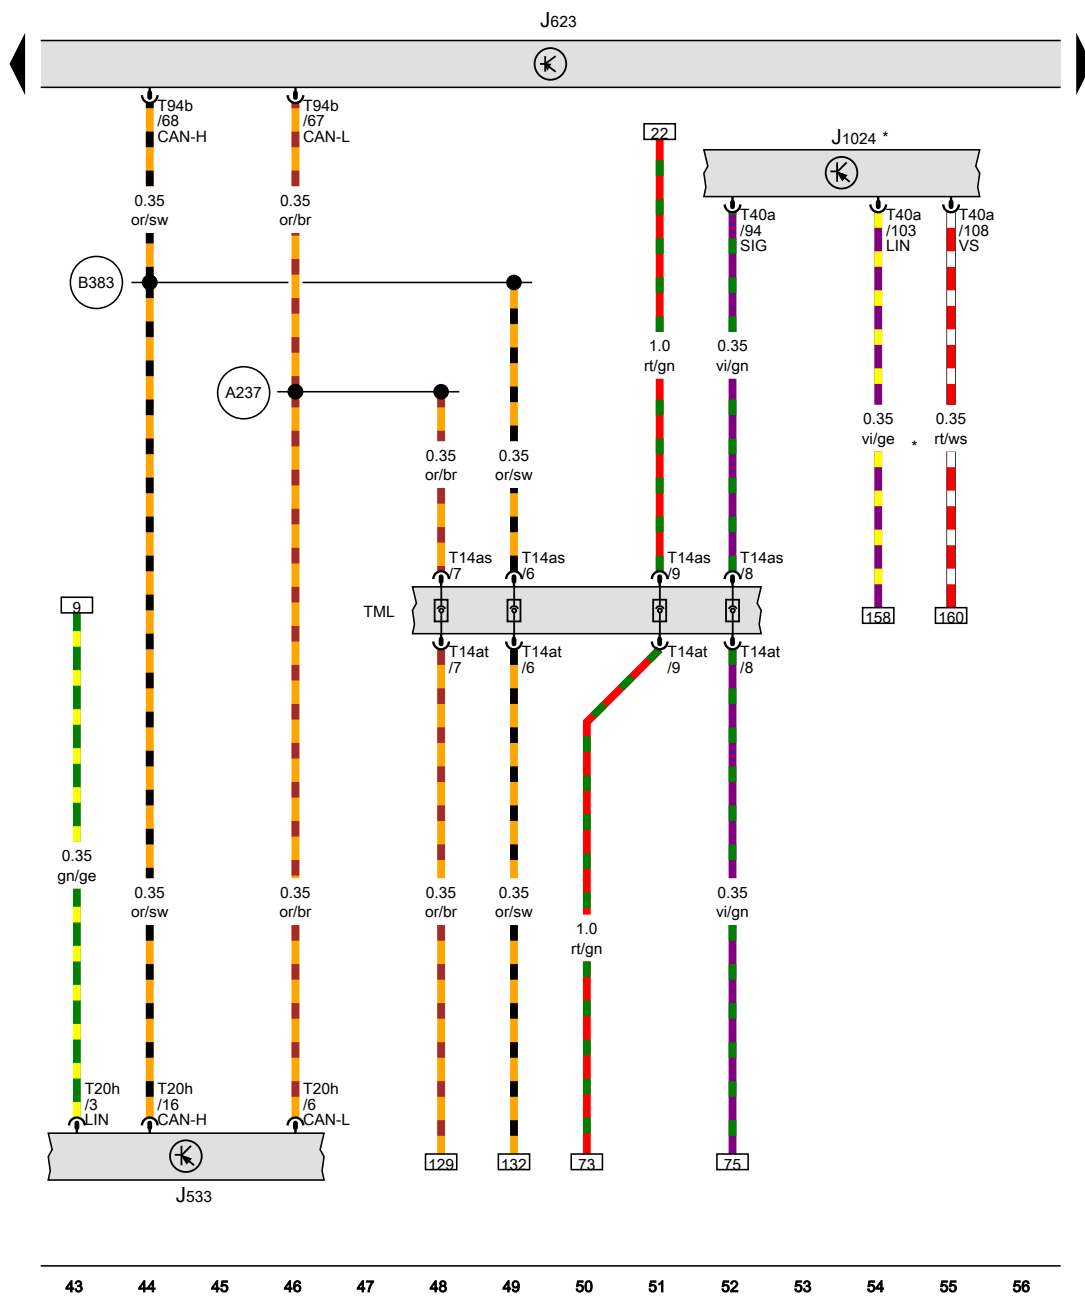

Data bus diagnostic interface, Engine/motor control unit, Thermal management control unit

- J533 Data bus diagnostic interface
- J623 Engine/motor control unit
- J1024 Thermal management control unit
- T14as 14-pin connector, black
- T14at 14-pin connector, black
- T20h 20-pin connector, red
- T40a 40-pin connector, black
- T94b 94-pin connector, black
- TML Coupling point in engine compartment, left
- A237 Connection 1 (powertrain CAN bus, low), in dash panel wiring harness
- B383 Connection 1 (powertrain CAN bus, high), in main wiring harness
- * see applicable current flow diagram for heat pump


ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

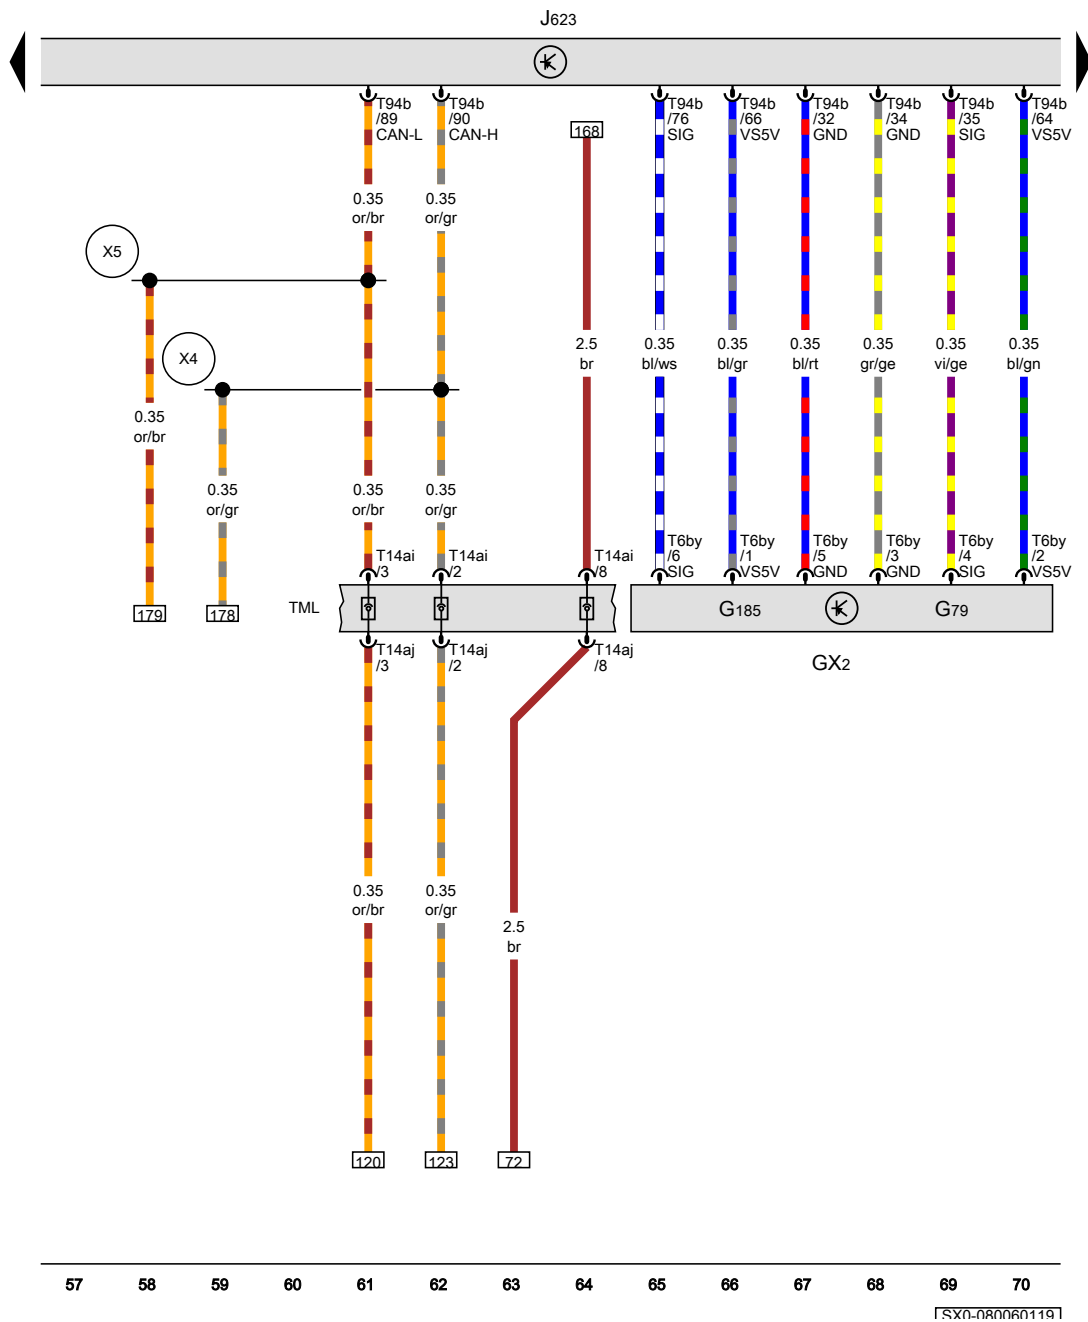

Accelerator pedal module, Accelerator position sender, Accelerator position sender 2, Engine/motor control unit


- GX2 Accelerator pedal module
- G79 Accelerator position sender
- G185 Accelerator position sender 2
- J623 Engine/motor control unit
- T6by 6-pin connector, black
- T14ai 14-pin connector, black
- T14aj 14-pin connector, black
- T94b 94-pin connector, black
- TML Coupling point in engine compartment, left
- X4 Connection 1 (CAN bus hybrid, high), in engine compartment wiring harness
- X5 Connection 1 (CAN bus hybrid, low), in engine compartment wiring harness

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

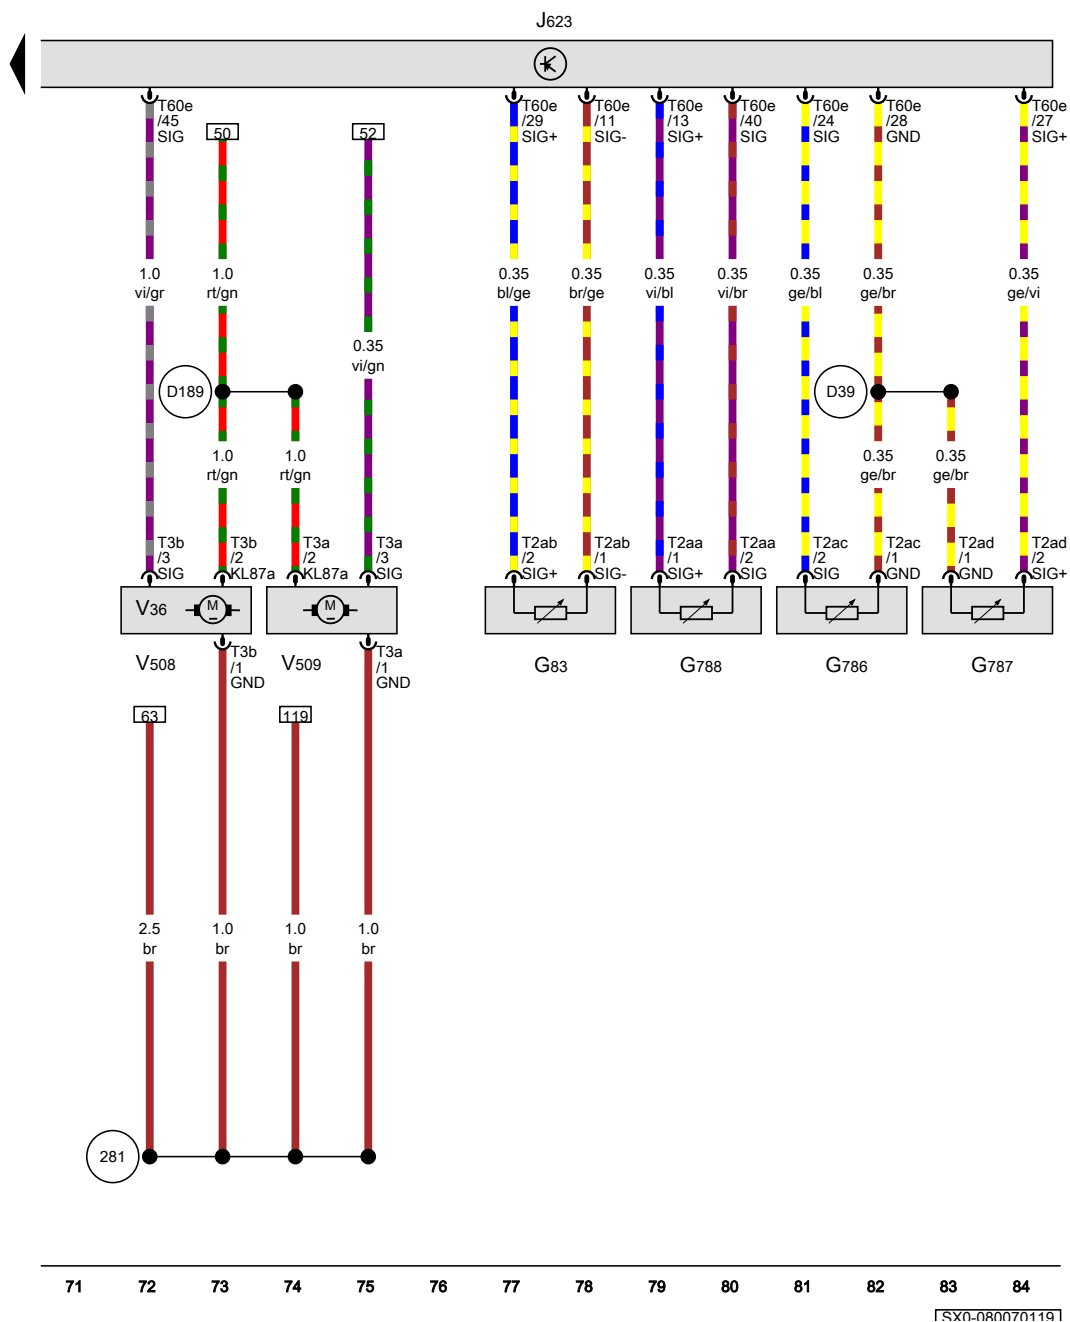

Radiator outlet coolant temperature sender, Temperature sender after heat exchanger for high-voltage battery, Temperature sender after heat exchanger, Temperature sender after electric drive motor, Engine/motor control unit, Coolant circulation pump before power and control electronics for electric drive, Coolant circulation pump before high-voltage heater (PTC)

- G83 Radiator outlet coolant temperature sender
- G786 Temperature sender after heat exchanger for high-voltage battery
- G787 Temperature sender after heat exchanger
- G788 Temperature sender after electric drive motor
- J623 Engine/motor control unit
- T2aa 2-pin connector, black
- T2ab 2-pin connector, black
- T2ac 2-pin connector, black
- T2ad 2-pin connector, black
- T3a 3-pin connector, black
- T3b 3-pin connector, black
- T60e 60-pin connector, black
- V36 Coolant pump
- V508 Coolant circulation pump before power and control electronics for electric drive
- V509 Coolant circulation pump before high-voltage heater (PTC)
- 281 Earth point 1, engine prewiring harness
- D39 Connection 1, in engine prewiring harness
- D189 Connection (87a) in engine prewiring harness

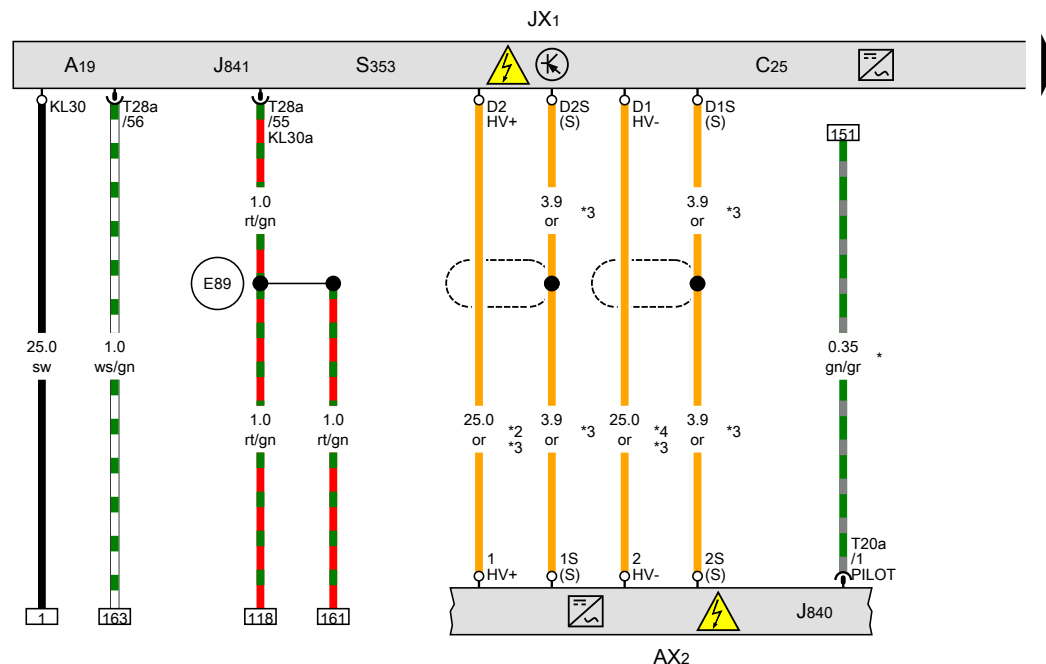


High-voltage battery 1, Voltage converter, Power and control electronics for electric drive, Battery regulation control unit, Electric drive control unit, High-voltage system fuse 3

- AX2 High-voltage battery 1
- A19 Voltage converter
- C25 Intermediate circuit capacitor 1
- JX1 Power and control electronics for electric drive
- J840 Battery regulation control unit
- J841 Electric drive control unit
- S353 High-voltage system fuse 3
- T20a 20-pin connector, black
- T28a 28-pin connector, black

E89 Positive connection (30a) in engine wiring harness

- * Pilot line
- *2 High-voltage wire for hybrid battery, positive terminal (P1)
- *3 High-voltage wiring harness for high-voltage battery (PX1)
- *4 High-voltage wire for hybrid battery, negative terminal (P2)

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

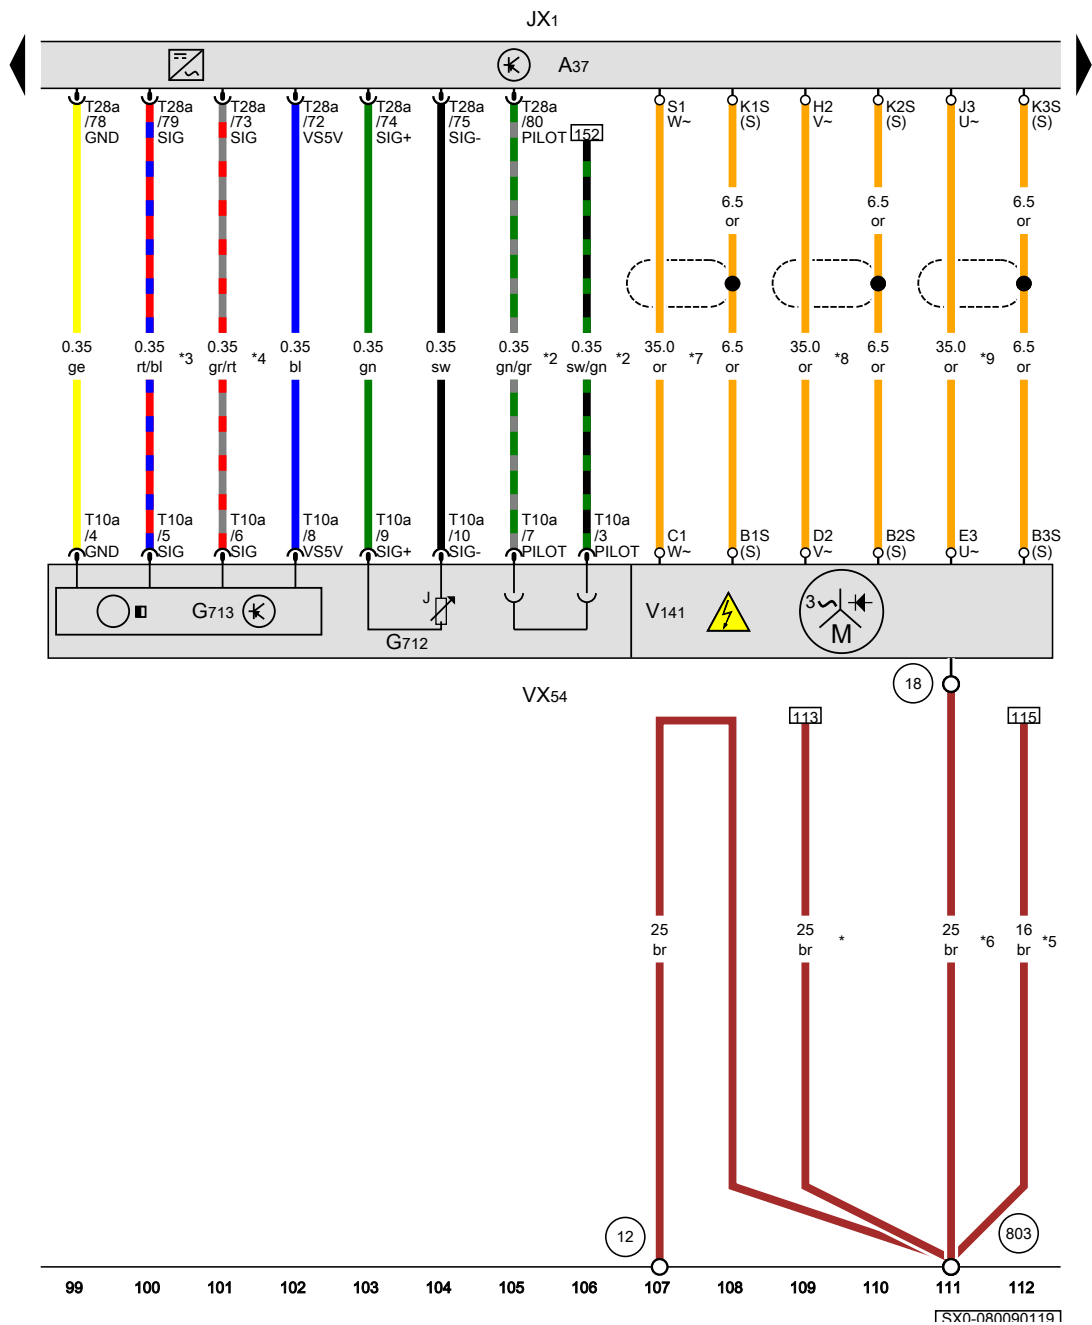

DC/AC converter for drive motor, Power and control electronics for electric drive, Three-phase current drive, Electric drive motor

- A37 DC/AC converter for drive motor
- G712 Drive motor temperature sender
- G713 Drive motor rotor position sender 1
- JX1 Power and control electronics for electric drive
- T10a 10-pin connector, black
- T28a 28-pin connector, black
- VX54 Three-phase current drive
- V141 Electric drive motor


12 Earth point, on left in engine compartment

18 Earth point, on cylinder block

803 Earth point on cross member for drive motor

- * Potential equalisation line 2 for power and control electronics for electric drive (P66)
- *2 Pilot line
- *3 Cosine wave signal
- *4 Sine wave signal
- *5 Potential equalisation line for power and control electronics for electric drive (P65)
- *6 Potential equalisation line for three-phase current drive (P71)
- *7 High-voltage wire 1 for drive motor (P4)
- *8 High-voltage wire 2 for drive motor (P5)
- *9 High-voltage wire 3 for drive motor (P6)

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

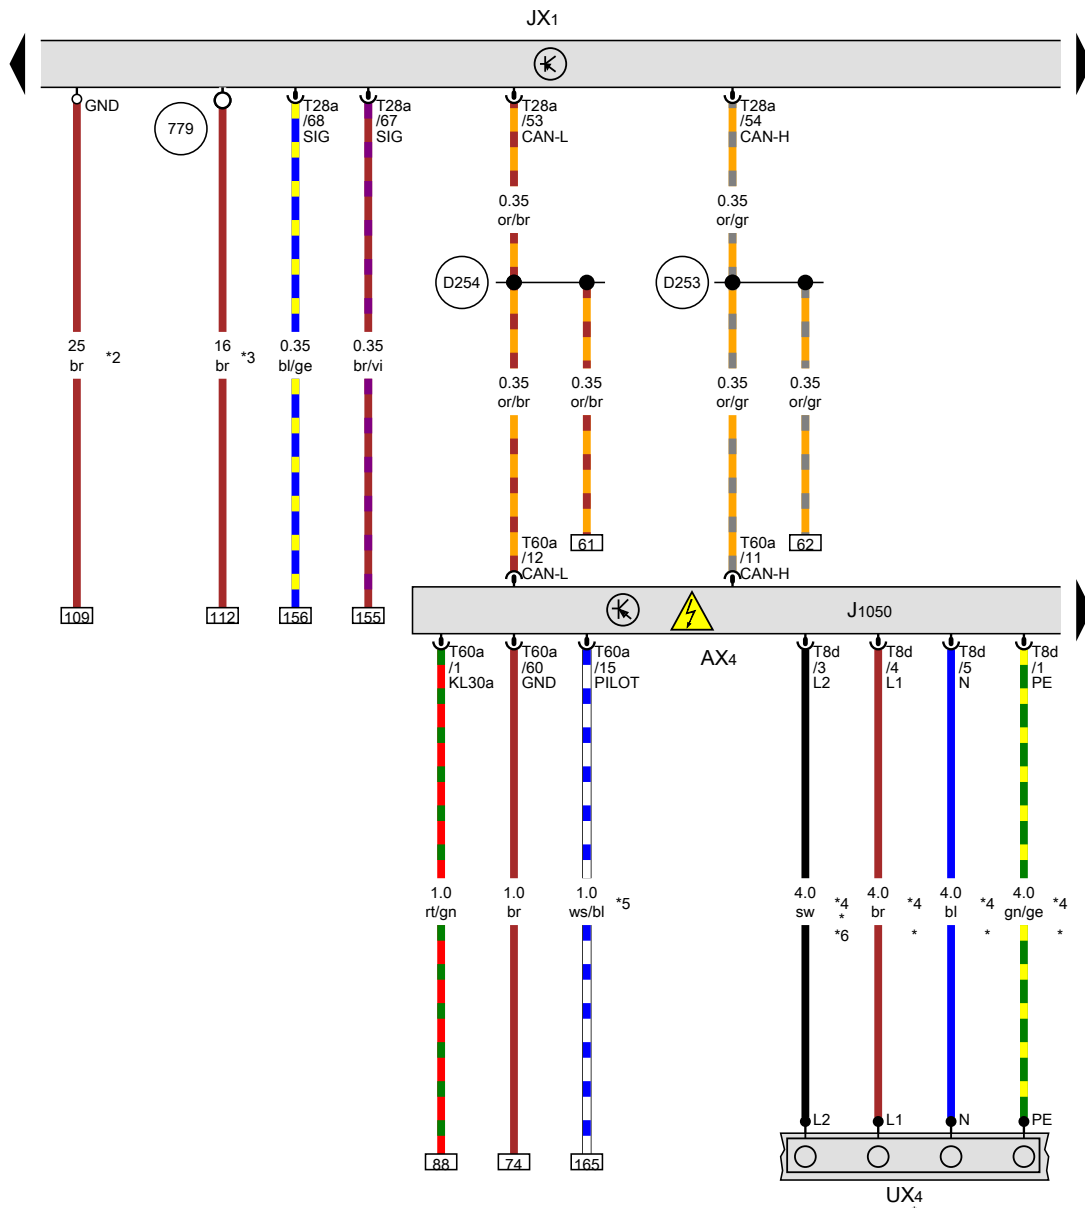


Charging unit 1 for high-voltage battery, Power and control electronics for electric drive, Control unit for high-voltage battery charging unit

- AX4 Charging unit 1 for high-voltage battery
- JX1 Power and control electronics for electric drive
- J1050 Control unit for high-voltage battery charging unit
- T8d 8-pin connector, orange
- T28a 28-pin connector, black
- T60a 60-pin connector, black
- UX4 High-voltage battery charging socket 1

- 779 Earth point 1 for power and control electronics for electric drive
- D253 Connection 1 (CAN bus hybrid, high), in engine prewiring harness
- D254 Connection 1 (CAN bus hybrid, low), in engine prewiring harness

- * see applicable current flow diagram
- *2 Potential equalisation line 2 for power and control electronics for electric drive (P66)
- *3 Potential equalisation line for power and control electronics for electric drive (P65)
- *4 High-voltage wire 1 for high-voltage charge current distributor/ high-voltage charging socket (P18)
- *5 Pilot line
- *6 Not for American markets

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

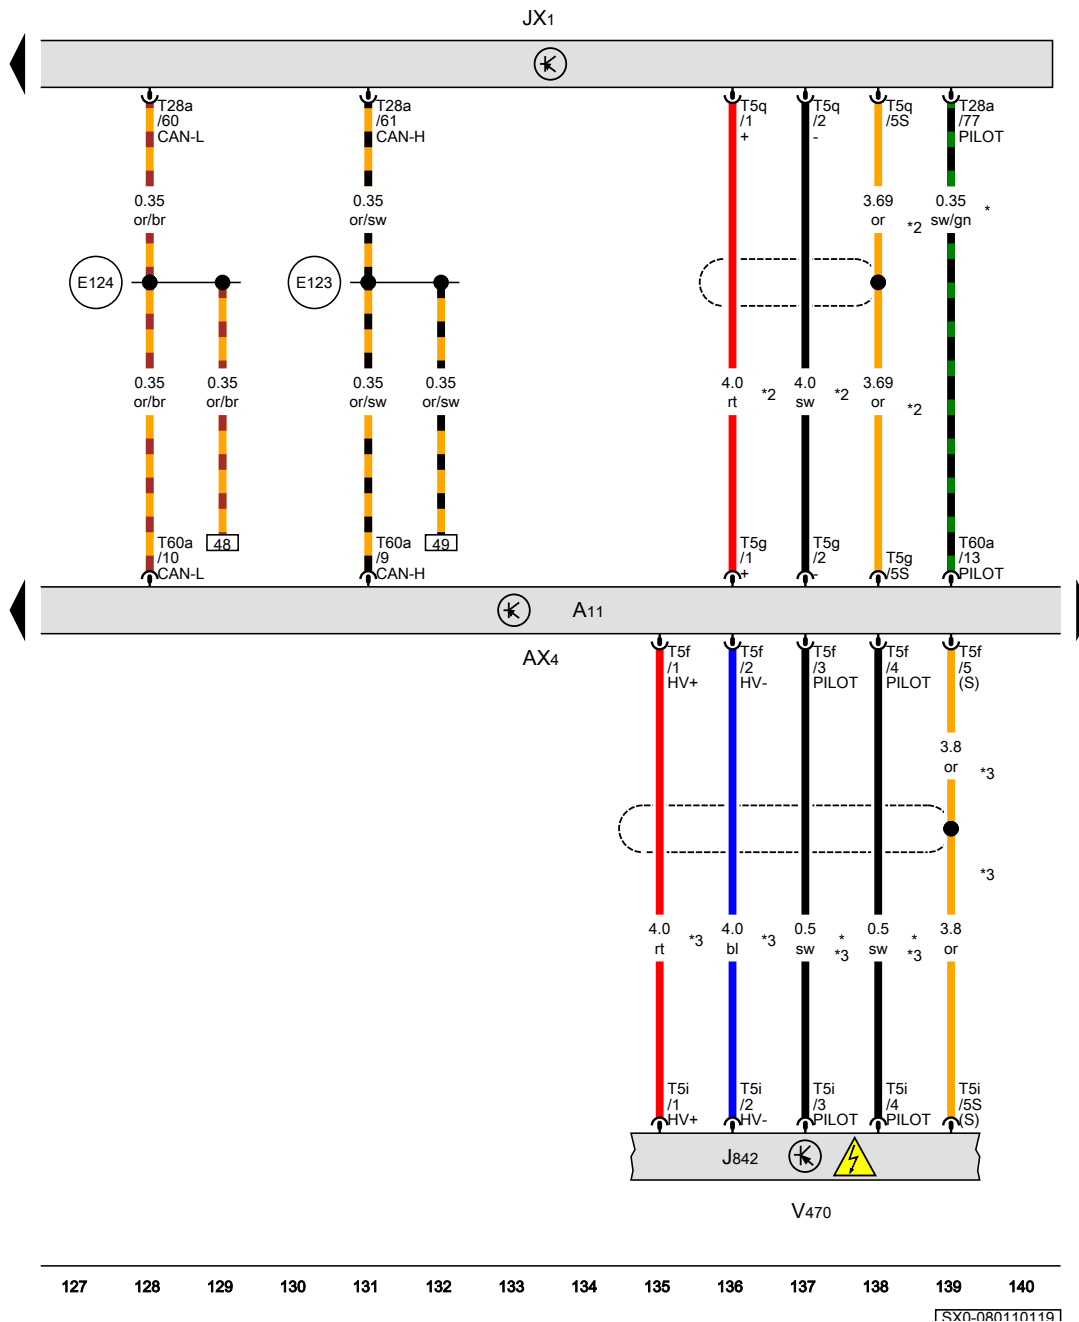

Charging unit 1 for high-voltage battery, Onboard charging unit, Power and control electronics for electric drive, Electrical air conditioner compressor

AX4 Charging unit 1 for high-voltage battery

A11 Onboard charging unit

JX1 Power and control electronics for electric drive

J842 Control unit for air conditioning compressor

T5f 5-pin connector, orange

T5g 5-pin connector, black

T5i 5-pin connector, orange

T5q 5-pin connector, orange

T28a 28-pin connector, black

T60a 60-pin connector, black

V470 Electrical air conditioner compressor

E123 Connection 1 (powertrain CAN bus, high), in engine wiring harness


E124 Connection 1 (powertrain CAN bus, low), in engine wiring harness

* Pilot line

*2 High-voltage wire for charging unit 1/wiring junction (P12)

*3 High-voltage wire for electrical air conditioner compressor (P3)

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink

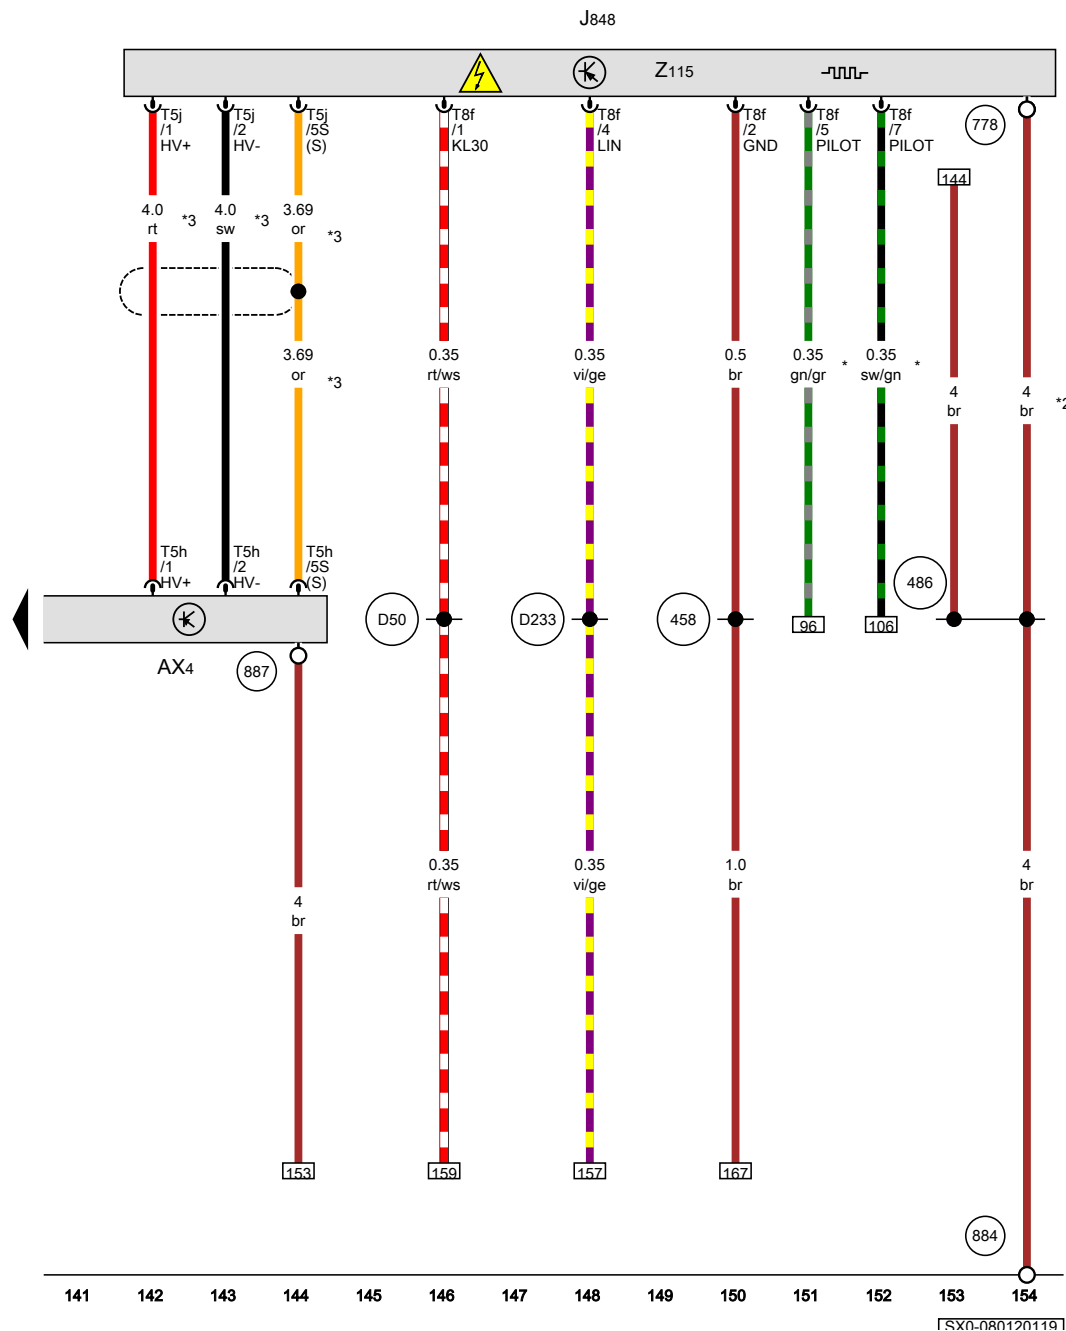


Charging unit 1 for high-voltage battery, High-voltage heater (PTC) control unit

- AX4 Charging unit 1 for high-voltage battery
- J848 High-voltage heater (PTC) control unit
- T5h 5-pin connector, black
- T5j 5-pin connector, black
- T8f 8-pin connector, black
- Z115 High-voltage heater (PTC)

- 458 Earth point 3, engine prewiring harness
- 486 Earth point 4, engine prewiring harness
- 778 Earth point for high-voltage heater (PTC)
- 884 Earth point 3, on drive motor mounting
- 887 Earth point on charge voltage control unit for high-voltage battery
- D50 Positive connection (30), in engine compartment wiring harness
- D233 Connection 2 (LIN bus) in engine compartment wiring harness
- * Pilot line
- *2 Potential equalisation line for high-voltage heater (PTC) (P84)
- *3 High-voltage wire for high-voltage heater (PTC) (P11)


ABS control unit, Coupling point in engine compartment, left,
Maintenance connector for high-voltage system

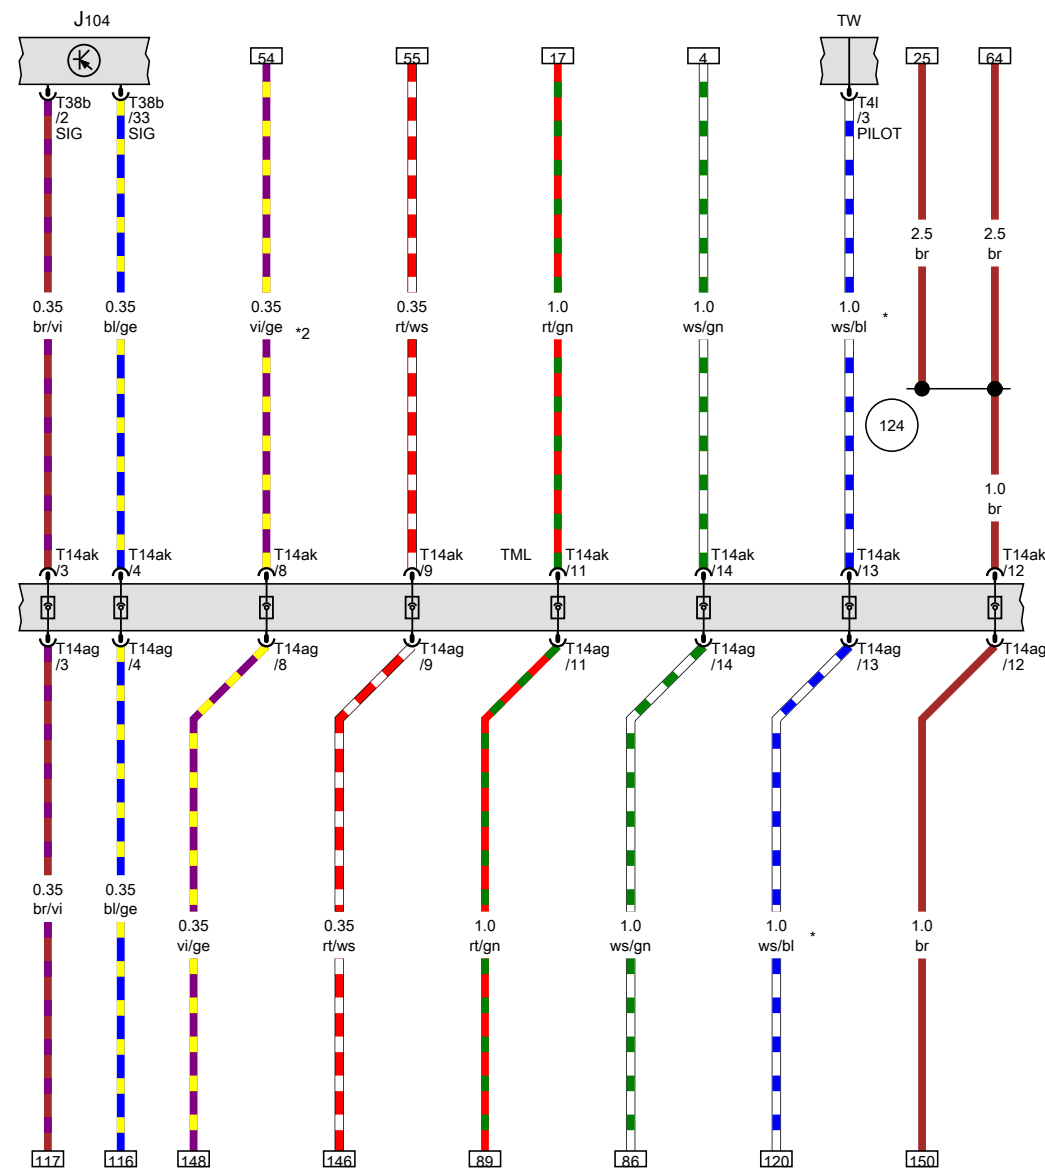


- J104 ABS control unit
- T4I 4-pin connector, green
- T14ag 14-pin connector, grey
- T14ak 14-pin connector, grey
- T38b 38-pin connector, black
- TML Coupling point in engine compartment, left
- TW Maintenance connector for high-voltage system
- 124 Earth connection, in right side engine compartment wiring harness
- * Pilot line
- *2 see applicable current flow diagram for heat pump

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

Onboard supply control unit, Selector lever sensors control unit

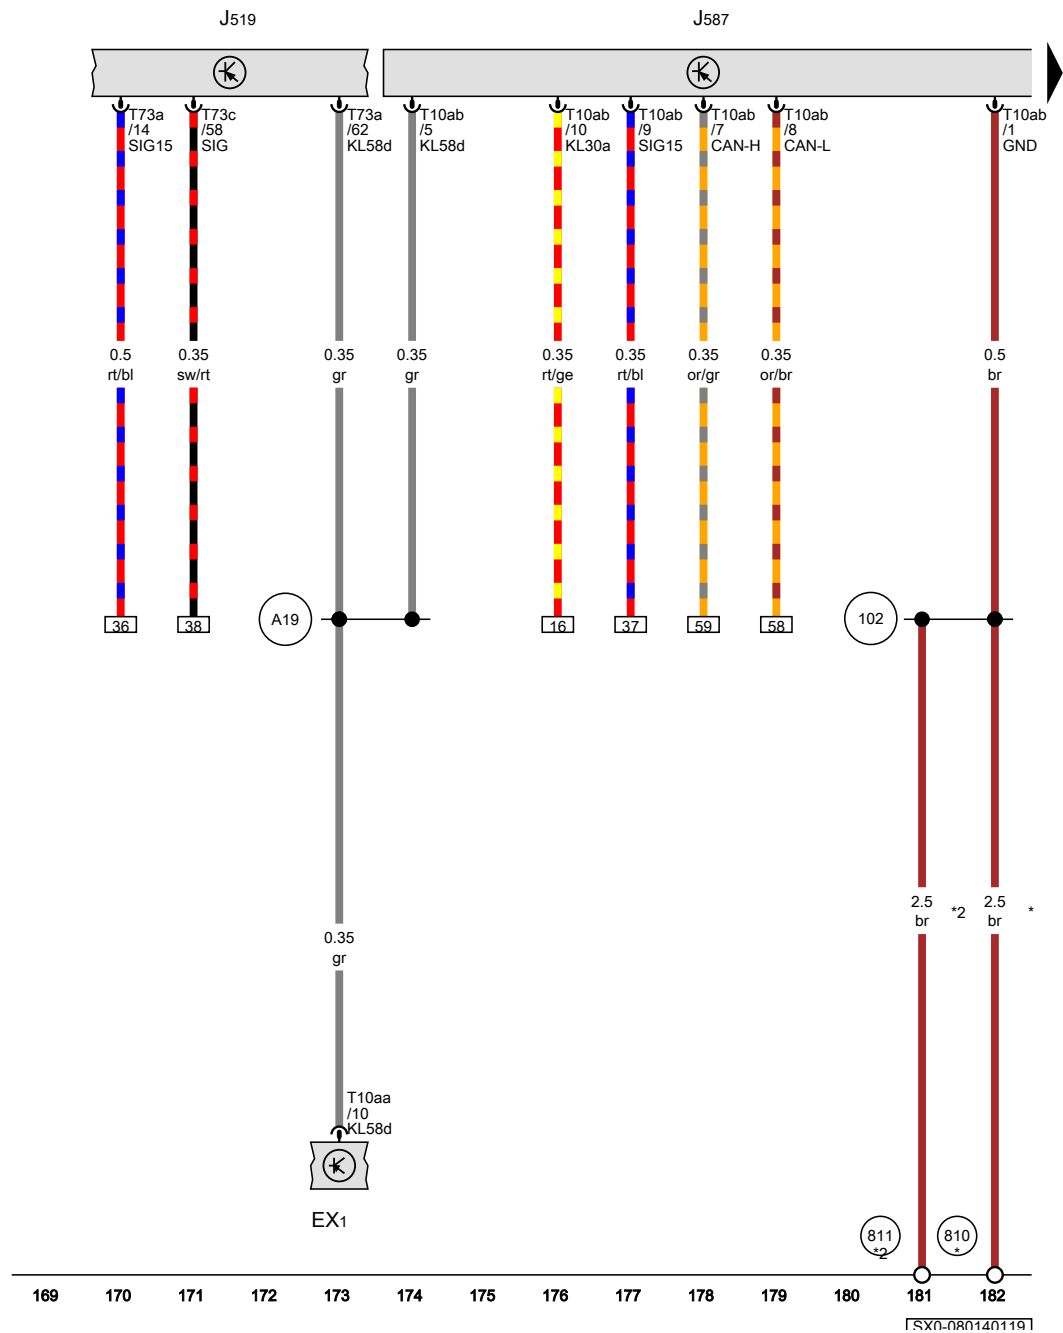

- EX1 Rotary light switch
- J519 Onboard supply control unit
- J587 Selector lever sensors control unit
- T10aa 10-pin connector, red
- T10ab 10-pin connector, red
- T73a 73-pin connector, black
- T73c 73-pin connector, black
- 102 Earth connection, in gearbox wiring harness
- 810 Earth point on central tube for dash panel, centre left
- 811 Earth point on central tube for dash panel, centre right
- A19 Connection (58d), in dash panel wiring harness
- * For left-hand drive models
- *2 For right-hand drive models

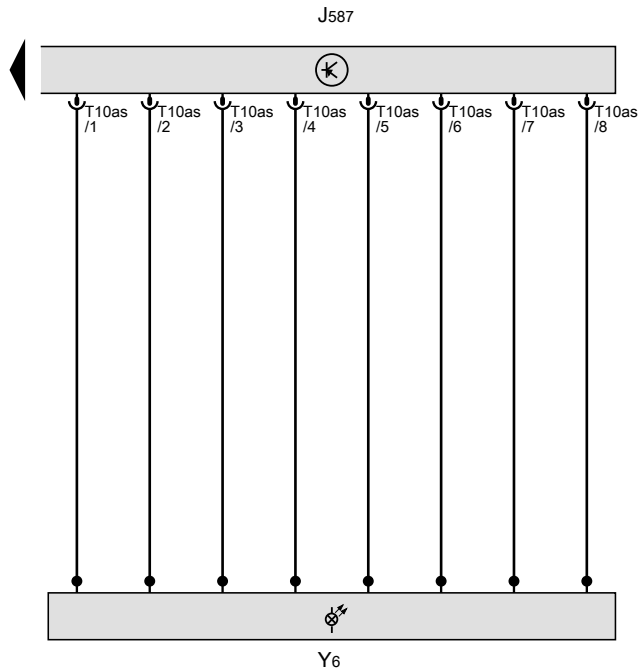

Selector lever sensors control unit, Selector lever position display


- J587 Selector lever sensors control unit
- T10as 10-pin connector, black
- Y6 Selector lever position display

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

Engine sound generator

From December 2017


Engine sound generator control unit, Actuator 1 for engine sound generator, Fuse 30 on fuse holder B

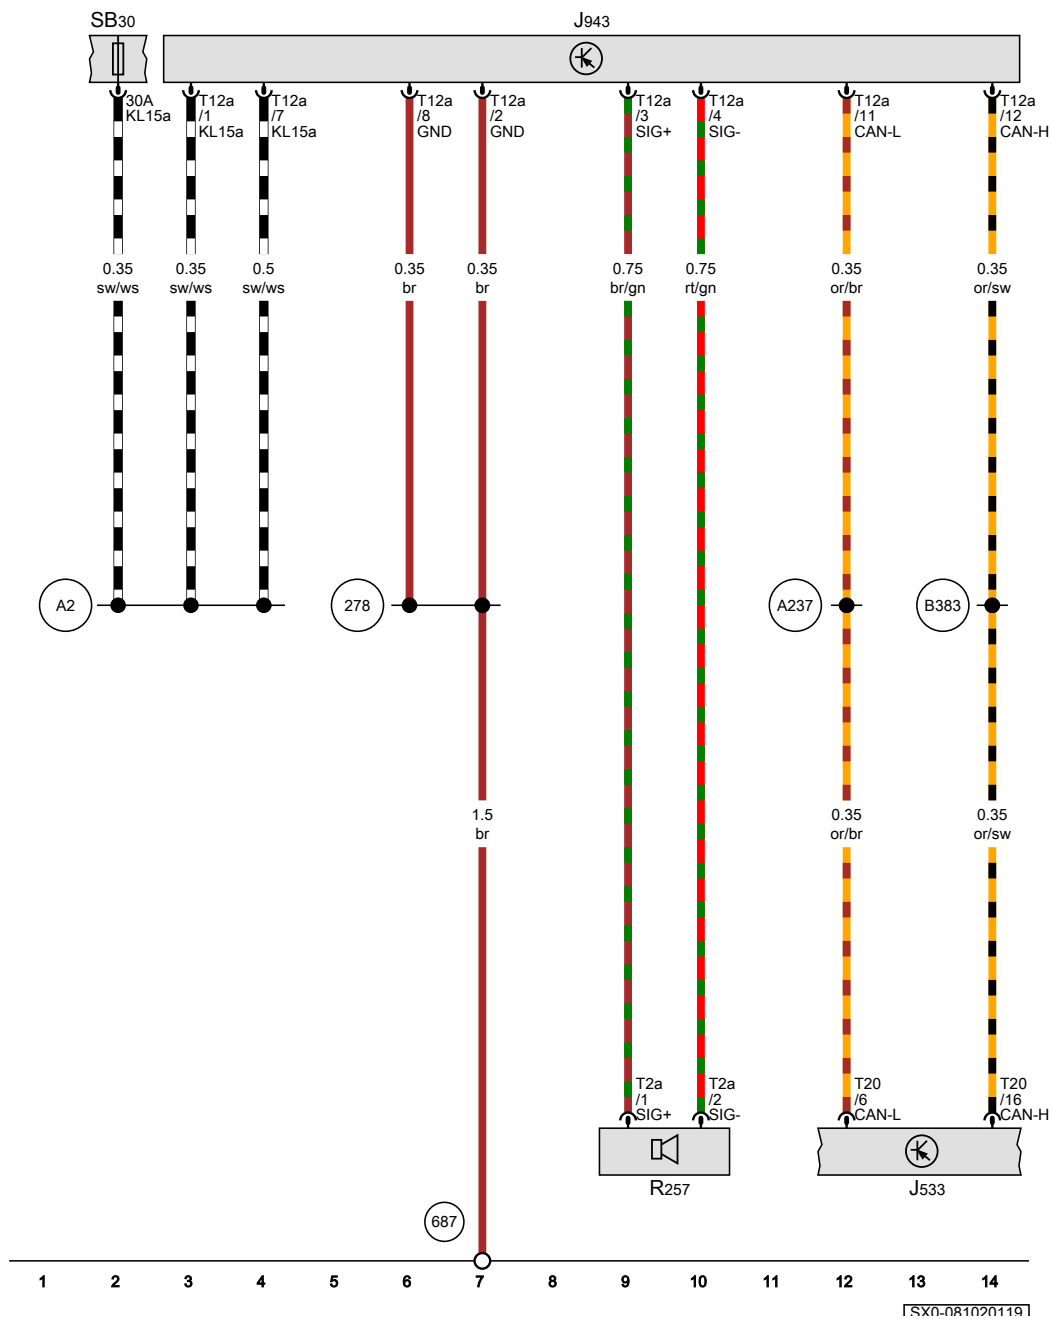

- J533 Data bus diagnostic interface
- J943 Engine sound generator control unit
- R257 Actuator 1 for engine sound generator
- SB30 Fuse 30 on fuse holder B
- T2a 2-pin connector, black
- T12a 12-pin connector, black
- T20 20-pin connector, red
- 278 Earth connection 4, in interior wiring harness
- 687 Earth point 1, on centre tunnel
- A2 Positive connection (15), in dash panel wiring harness
- A237 Connection 1 (powertrain CAN bus, low), in dash panel wiring harness
- B383 Connection 1 (powertrain CAN bus, high), in main wiring harness

Heat pump

From December 2017

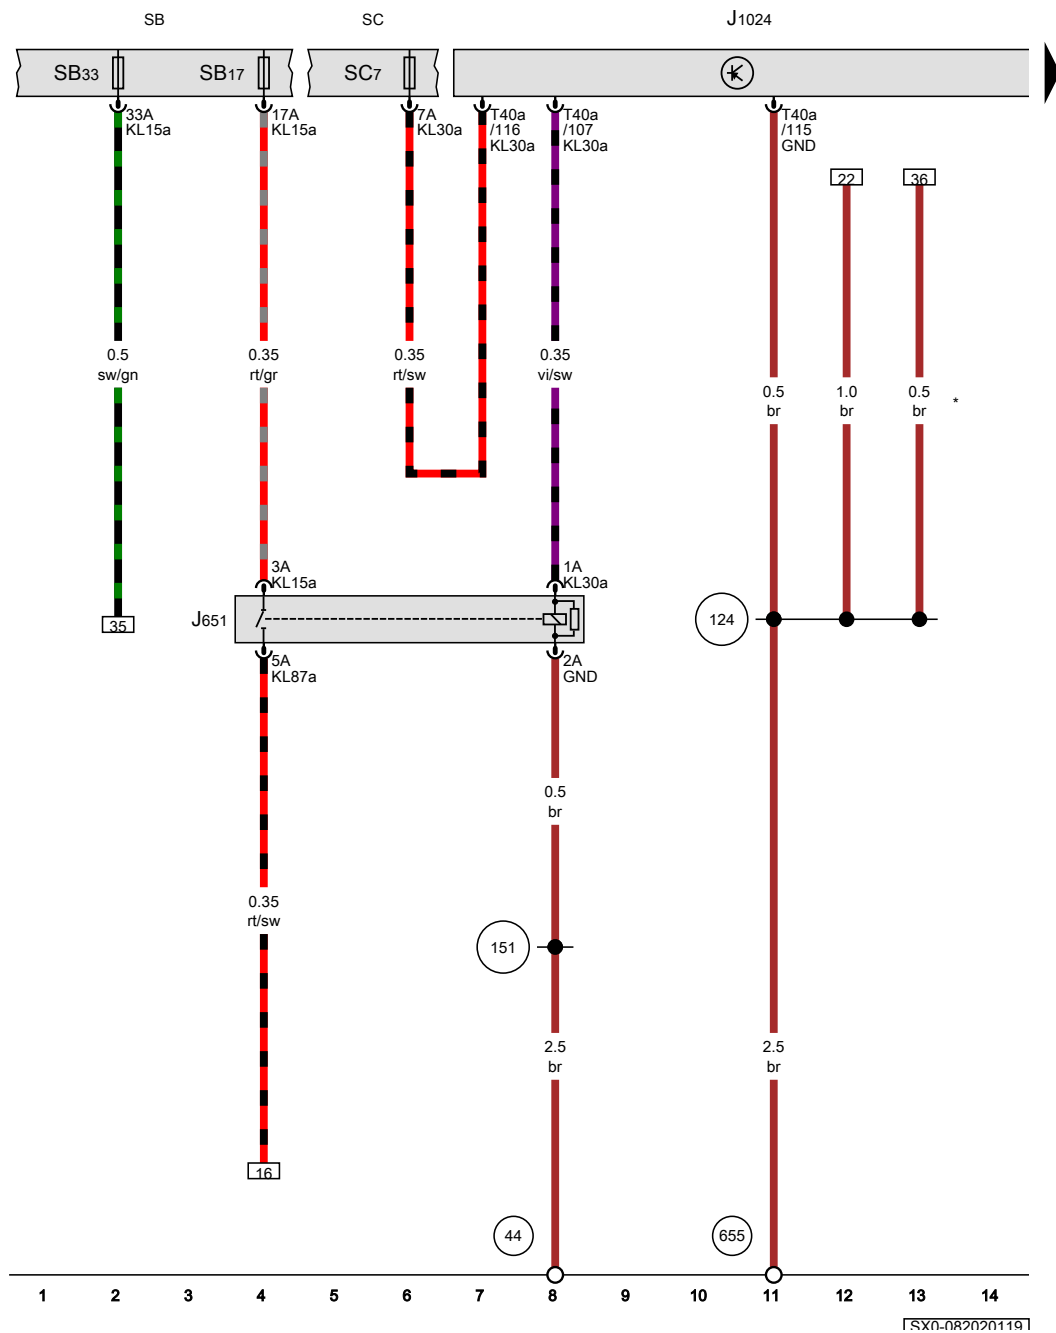


Shut-off valve relay 1, Thermal management control unit, Fuse holder B, Fuse holder C

- J651 Shut-off valve relay 1
- J1024 Thermal management control unit
- SB Fuse holder B
- SB33 Fuse 33 on fuse holder B
- SC Fuse holder C
- SC7 Fuse 7 on fuse holder C
- SB17 Fuse 17 on fuse holder B
- T40a 40-pin connector, black


- 44 Earth point, lower part of left A-pillar
- 124 Earth connection, in right side engine compartment wiring harness
- 151 Earth connection 1, in front wiring harness
- 655 Earth point, on left headlight
- * Up to July 2018

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

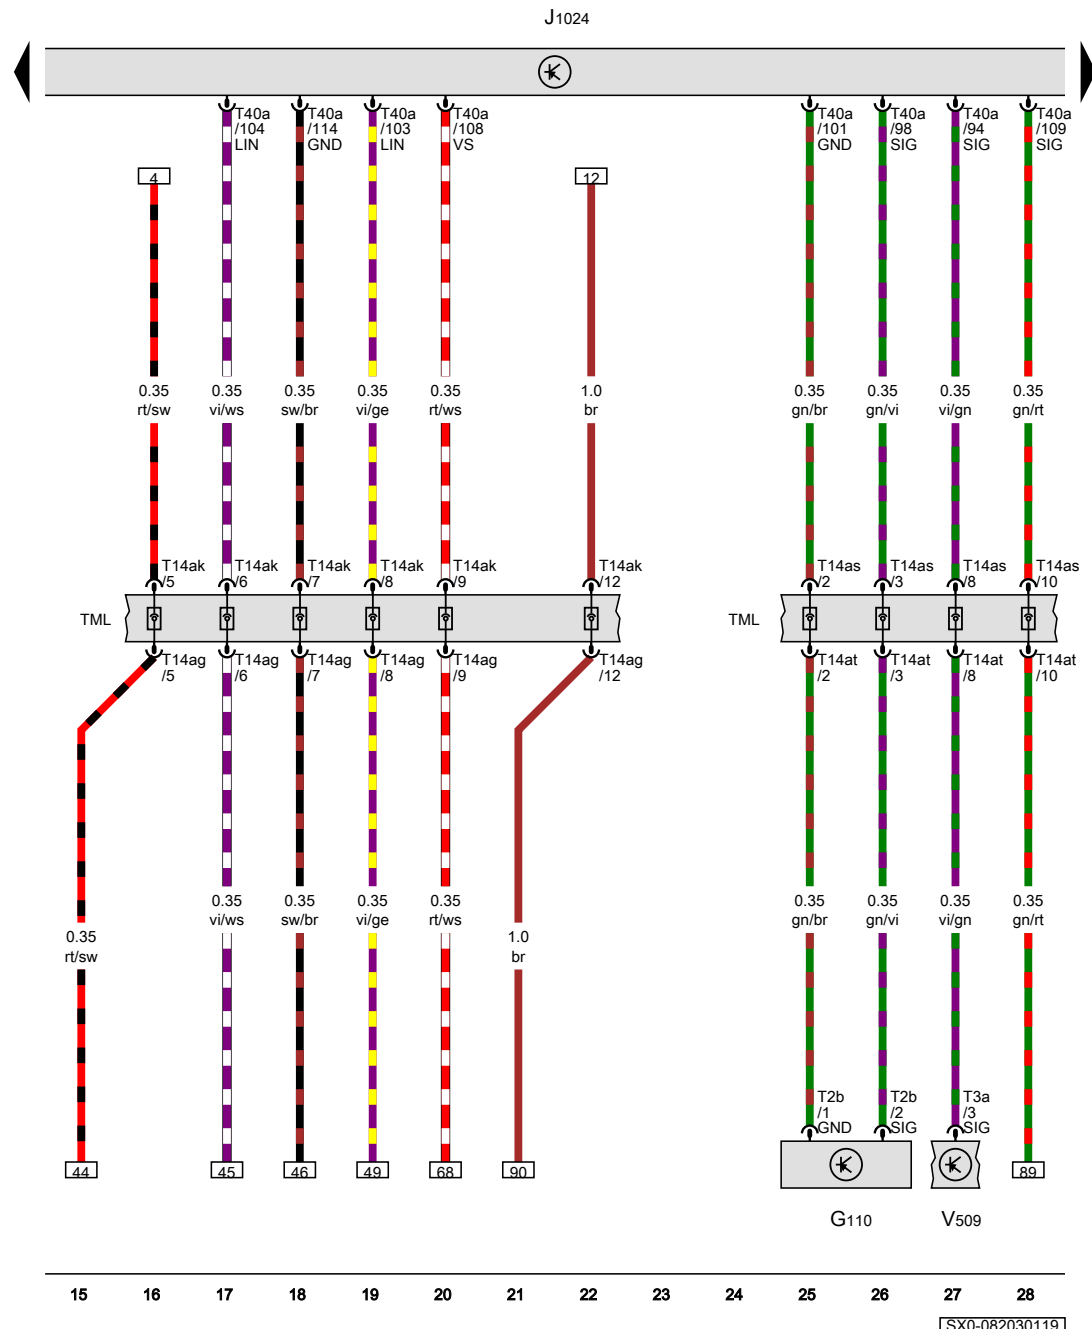

Air conditioning system coolant temperature sender,
Thermal management control unit, Coolant circulation pump
before high-voltage heater (PTC)

- G110 Air conditioning system coolant temperature sender
- J1024 Thermal management control unit
- T2b 2-pin connector, black
- T3a 3-pin connector, black
- T14ag 14-pin connector, grey
- T14ak 14-pin connector, grey
- T14as 14-pin connector, black
- T14at 14-pin connector, black
- T40a 40-pin connector, black
- TML Coupling point in engine compartment, left
- V509 Coolant circulation pump before high-voltage heater (PTC)

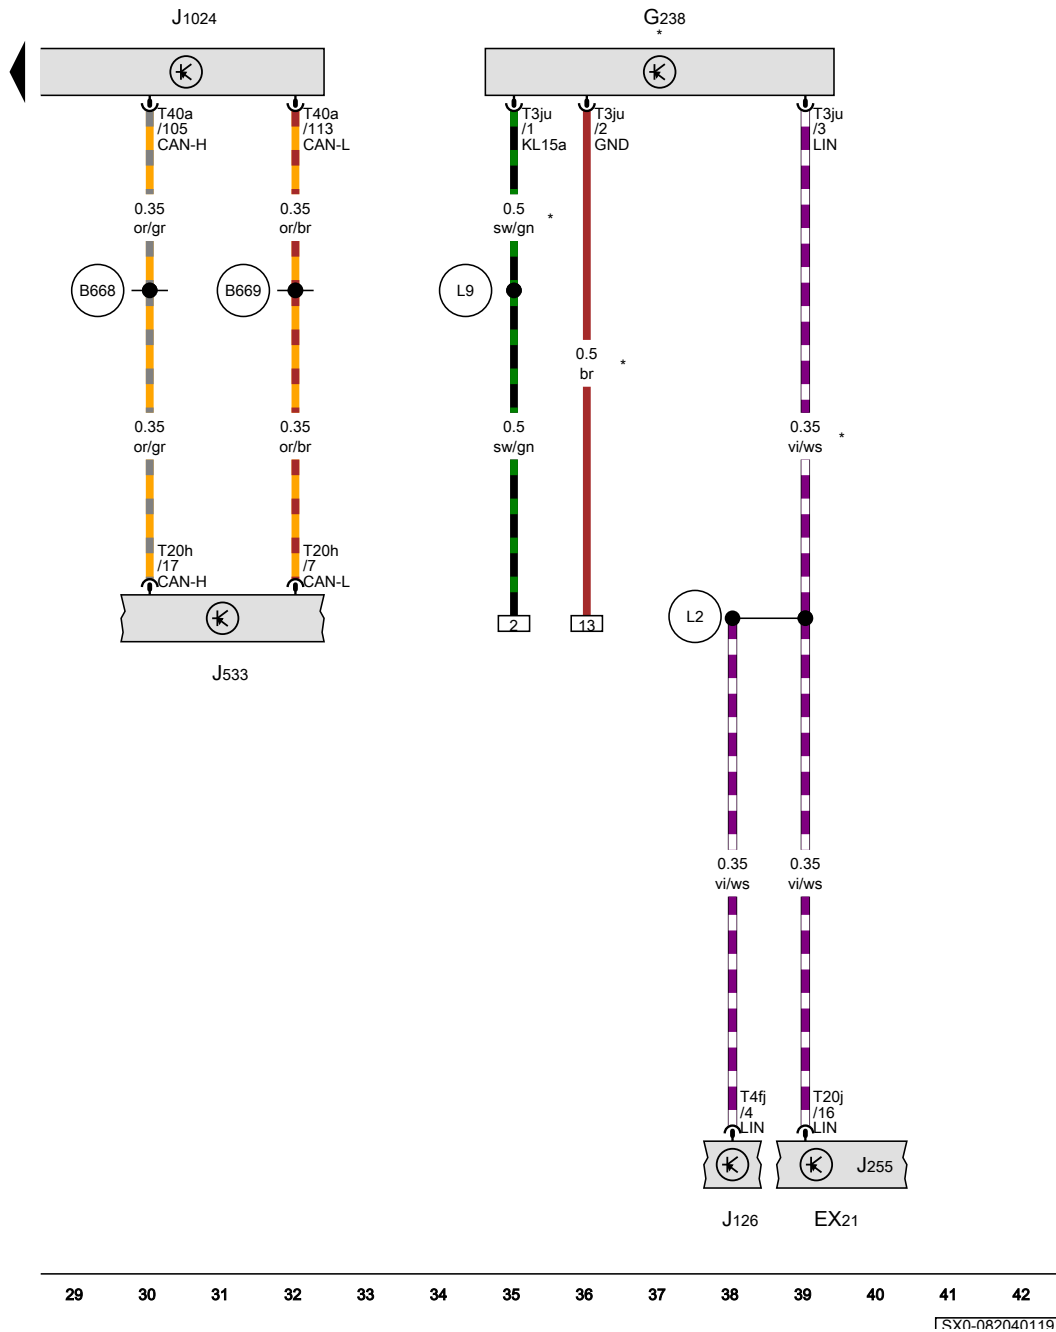


Heater and air conditioning controls, Air quality sensor, Fresh air blower control unit, Climatronic control unit, Data bus diagnostic interface, Thermal management control unit

- EX21 Heater and air conditioning controls
- G238 Air quality sensor
- J126 Fresh air blower control unit
- J255 Climatronic control unit
- J533 Data bus diagnostic interface
- J1024 Thermal management control unit
- T3ju 3-pin connector, black
- T4fj 4-pin connector, black
- T20h 20-pin connector, red
- T20j 20-pin connector, black
- T40a 40-pin connector, black
- B668 Connection 2 (CAN bus extended high), in main wiring harness
- B669 Connection 2 (CAN bus extended low), in main wiring harness
- L2 Connection in air conditioning system wiring harness
- L9 Connection 1, in air conditioning system wiring harness
- * Up to July 2018

Refrigerant expansion valve 1, Refrigerant expansion valve 2, Refrigerant expansion valve 3, Refrigerant shut-off valve 1

- N636 Refrigerant expansion valve 1
- N637 Refrigerant expansion valve 2
- N638 Refrigerant expansion valve 3
- N696 Refrigerant shut-off valve 1
- T4a 4-pin connector, black
- T4b 4-pin connector, black
- T4c 4-pin connector, black
- T4d 4-pin connector, black


- 283 Earth point 2, engine prewiring harness
- D196 Connection 2 (87a) in engine prewiring harness
- D218 Connection 1 (LIN bus) in engine compartment wiring harness
- D233 Connection 2 (LIN bus) in engine compartment wiring harness

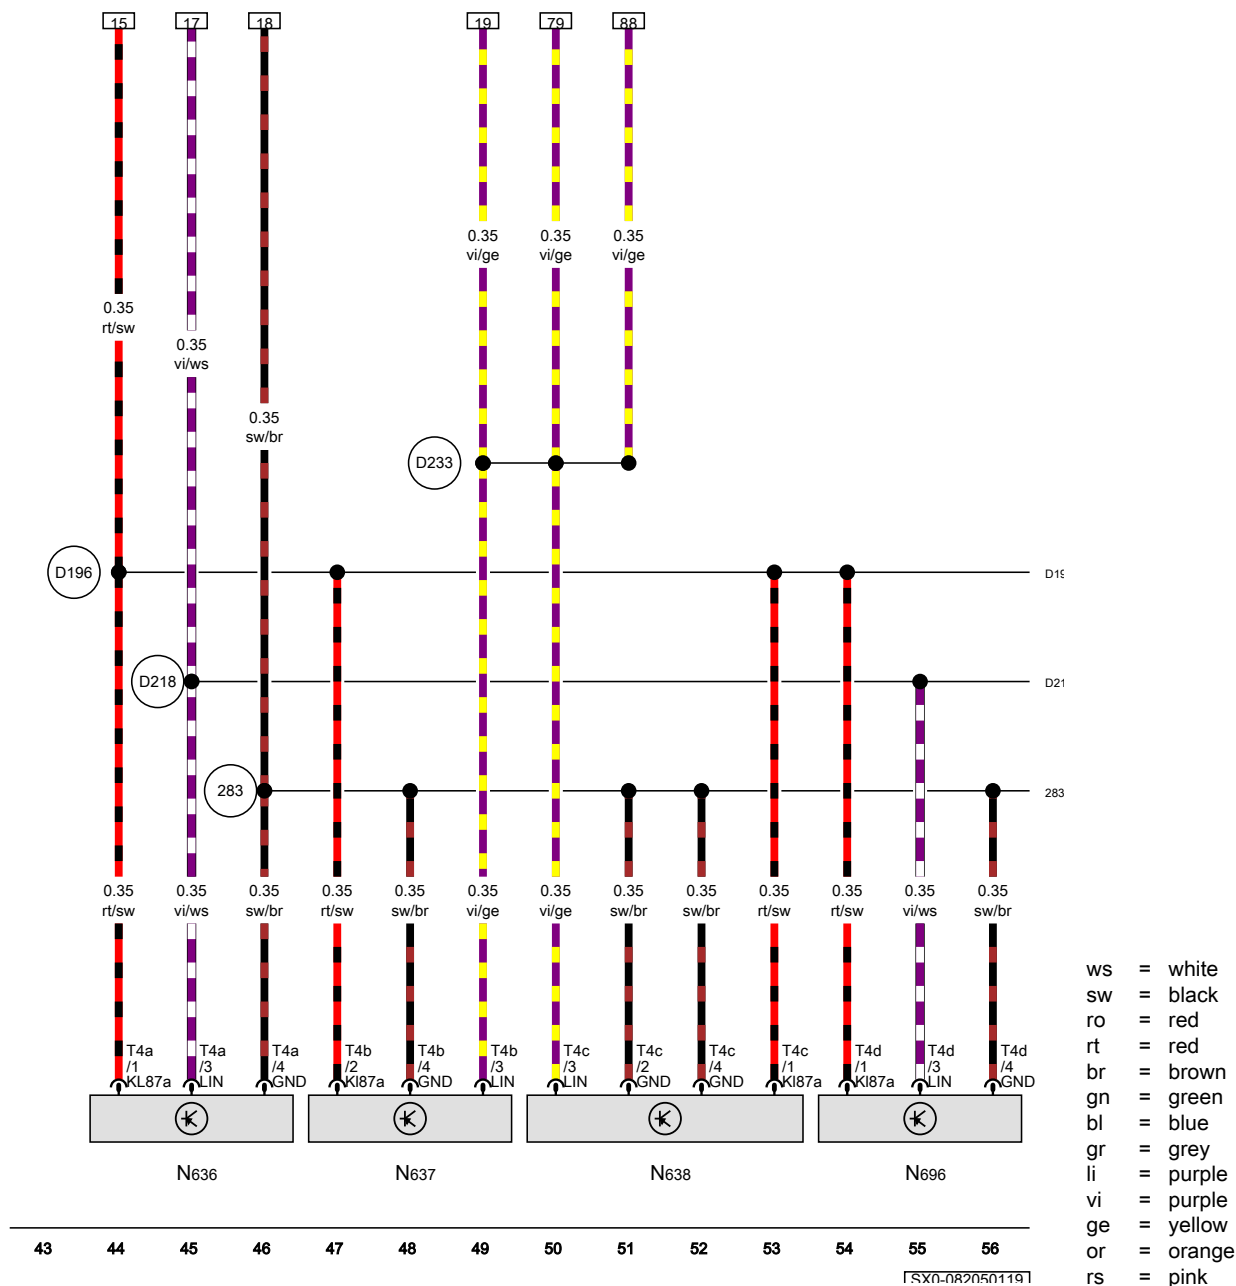

Refrigerant pressure and temperature sender 2, Refrigerant shut-off valve 4, Refrigerant shut-off valve 5

- G826 Refrigerant pressure and temperature sender 2
- N642 Refrigerant shut-off valve 4
- N643 Refrigerant shut-off valve 5
- T4e 4-pin connector, black
- T4f 4-pin connector, black
- T4g 4-pin connector, black

- 283 Earth point 2, engine prewiring harness
- D50 Positive connection (30), in engine compartment wiring harness
- D196 Connection 2 (87a) in engine prewiring harness
- D218 Connection 1 (LIN bus) in engine compartment wiring harness

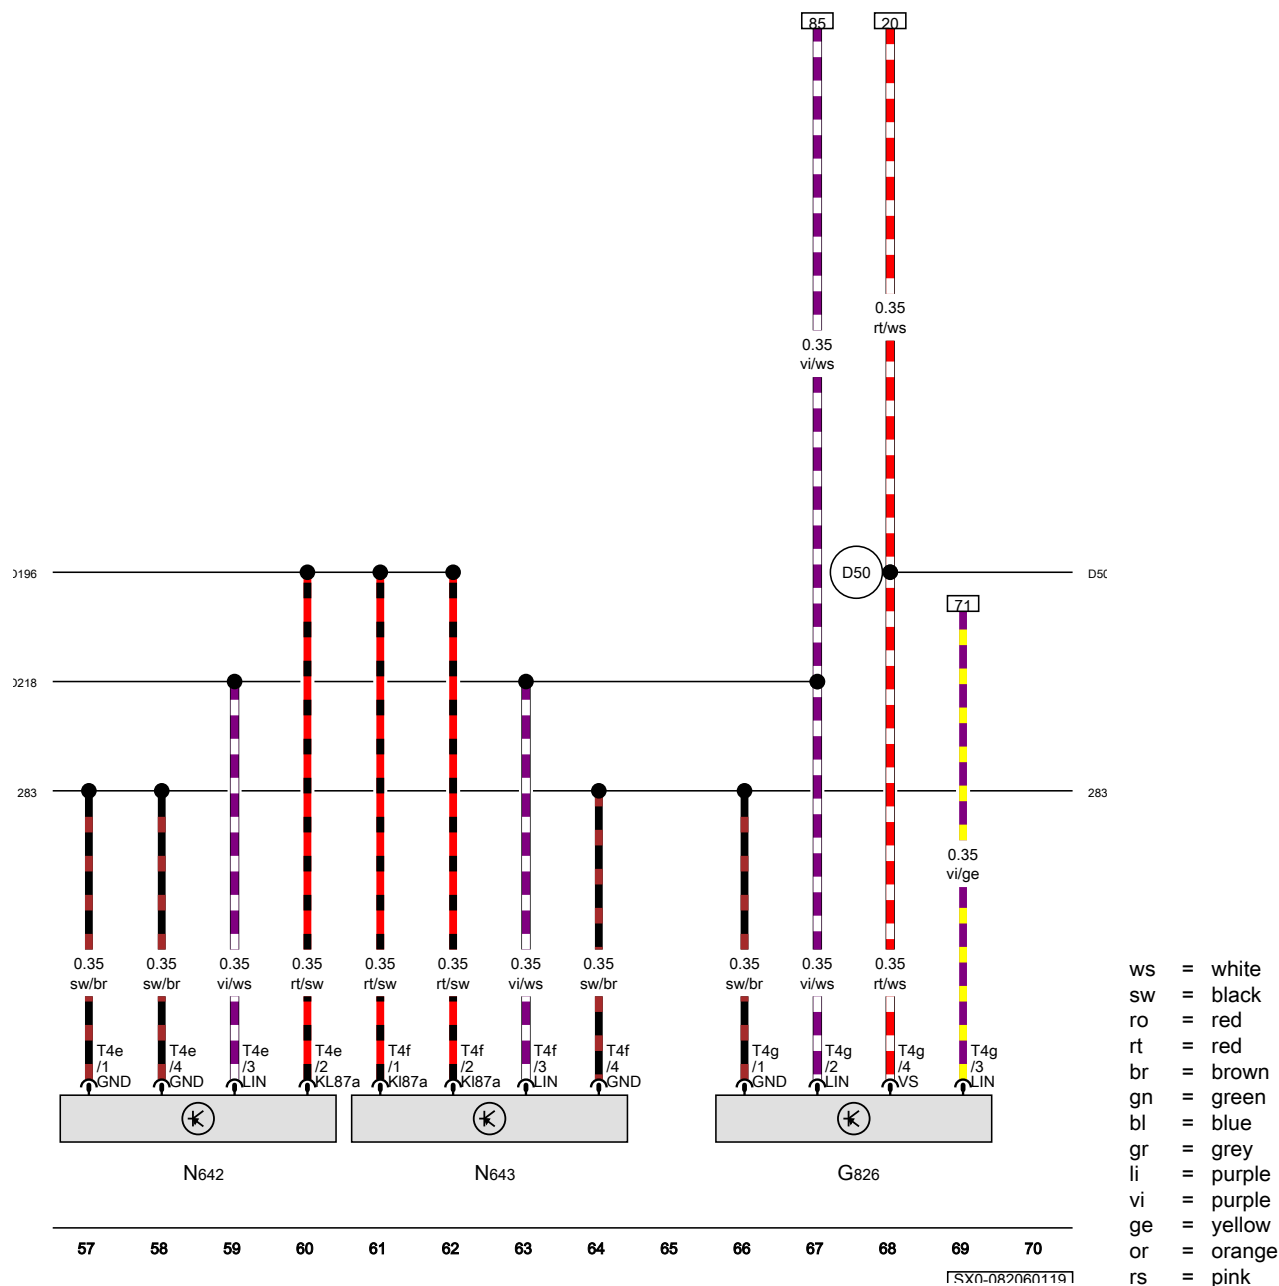


Refrigerant pressure and temperature sender 3, Refrigerant pressure and temperature sender 4, Refrigerant pressure and temperature sender 5, Refrigerant pressure and temperature sender 6

- G827 Refrigerant pressure and temperature sender 3
- G828 Refrigerant pressure and temperature sender 4
- G829 Refrigerant pressure and temperature sender 5
- G830 Refrigerant pressure and temperature sender 6
- T4h 4-pin connector, black
- T4i 4-pin connector, brown
- T4j 4-pin connector, brown
- T4k 4-pin connector, brown

283 Earth point 2, engine prewiring harness

D50 Positive connection (30), in engine compartment wiring harness

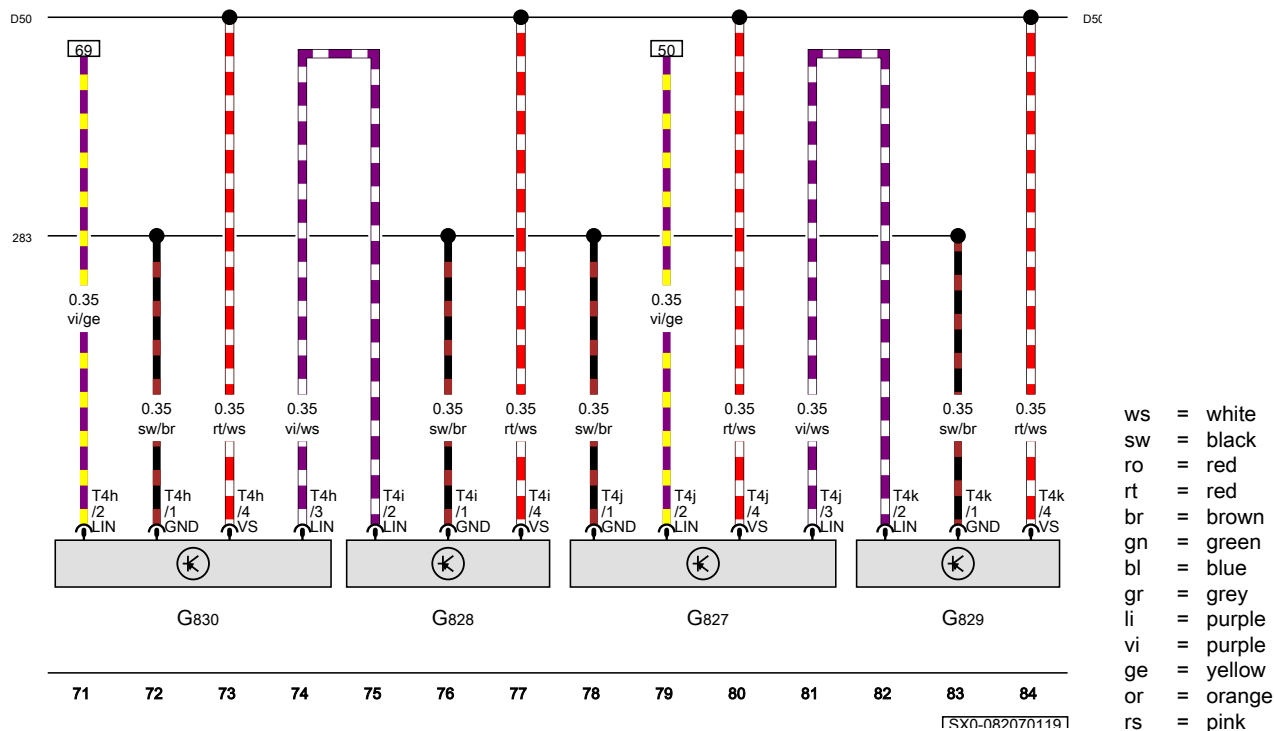


Control unit for air conditioning compressor, High-voltage heater (PTC) control unit, Heater coolant shut-off valve, Electrical air conditioner compressor, High-voltage heater (PTC)

J842 Control unit for air conditioning compressor
J848 High-voltage heater (PTC) control unit
N279 Heater coolant shut-off valve
T2ks 2-pin connector, black
T8e 8-pin connector, black
T8f 8-pin connector, black
V470 Electrical air conditioner compressor
Z115 High-voltage heater (PTC)

458 Earth point 3, engine prewiring harness

D50 Positive connection (30), in engine compartment wiring harness

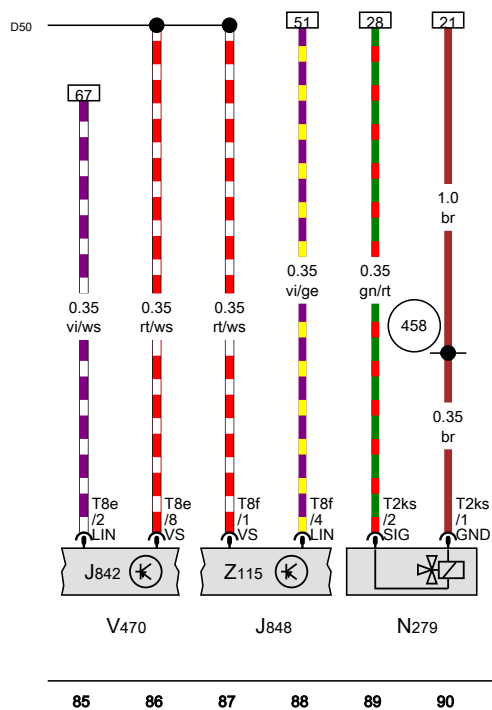


ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink

[SX0-082080119]

Earthing concept

From December 2017

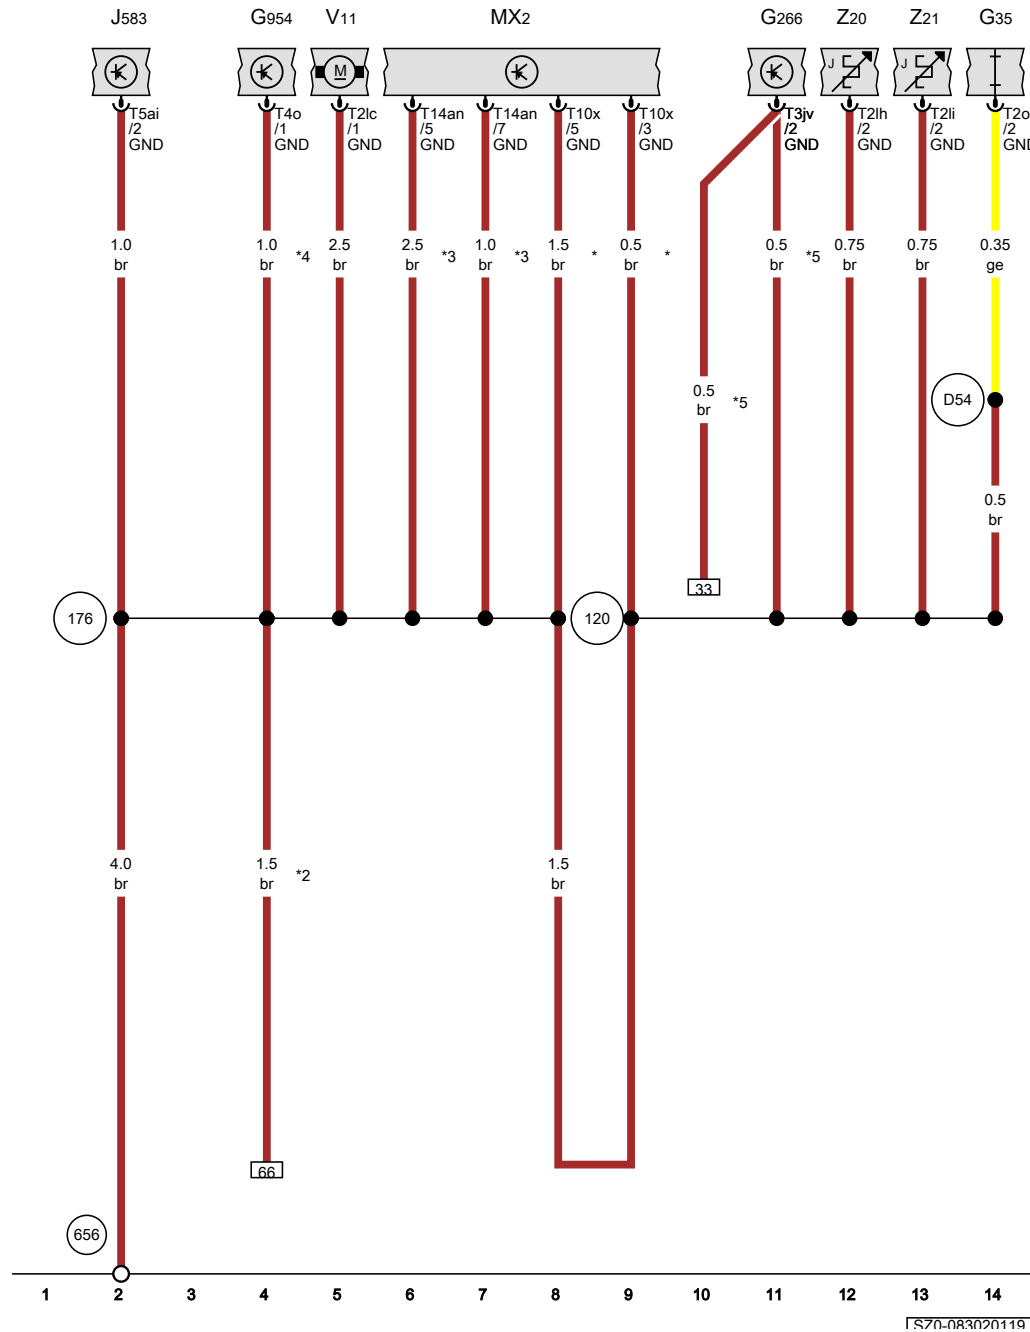

Front right brake pad wear sender, Oil level and oil temperature sender, Front stop command light, Control unit for NOx sender, Front right headlight, Headlight washer system pump, Left washer jet heater element, Right washer jet heater element


- | | |
|-------|--------------------------------------|
| G35 | Front right brake pad wear sender |
| G266 | Oil level and oil temperature sender |
| G954 | Front stop command light |
| J583 | Control unit for NOx sender |
| MX2 | Front right headlight |
| T2lc | 2-pin connector, black |
| T2lh | 2-pin connector, black |
| T2li | 2-pin connector, black |
| T2oq | 2-pin connector, black |
| T3jv | 3-pin connector, black |
| T4o | 4-pin connector, black |
| T5ai | 5-pin connector, black |
| T10x | 10-pin connector, black |
| T14an | 14-pin connector, black |
| V11 | Headlight washer system pump |
| Z20 | Left washer jet heater element |
| Z21 | Right washer jet heater element |


- 120 Earth connection 2, in headlight wiring harness
- 176 Earth connection, in right headlight wiring harness
- 656 Earth point, on right headlight
- D54 Connection (right brake wear indicator), in engine compartment wiring harness
 - * For models with halogen headlights
 - *2 see applicable current flow diagram for automatic gearbox
 - *3 For models with LED headlights
 - *4 For models with special police equipment
 - *5 According to equipment

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink

Bonnet contact switch, Adaptive cruise control unit, Engine/motor control unit, Front left headlight, Coupling point for front flashing lights in special vehicle, Windscreen wiper motor

- F387 Bonnet contact switch
- J428 Adaptive cruise control unit
- J623 Engine/motor control unit
- MX1 Front left headlight
- T2qv 2-pin connector, black
- T4fu 4-pin connector, black
- T7aj 7-pin connector, black
- T8cs 8-pin connector, black
- T8dx 8-pin connector, black
- T8o 8-pin connector, black
- T10v 10-pin connector, black
- T14al 14-pin connector, grey
- T14am 14-pin connector, black
- T14av 14-pin connector, grey
- T94b 94-pin connector, black
- TBLSFV Coupling point for front flashing lights in special vehicle
- TMUL Coupling point on engine, bottom left
- V Windscreen wiper motor
- 119 Earth connection 1, in headlight wiring harness
- 179 Earth connection, in left headlight wiring harness
- 655 Earth point, on left headlight
- * Pre-wired component
- *2 For models with halogen headlights
- *3 For models with LED headlights

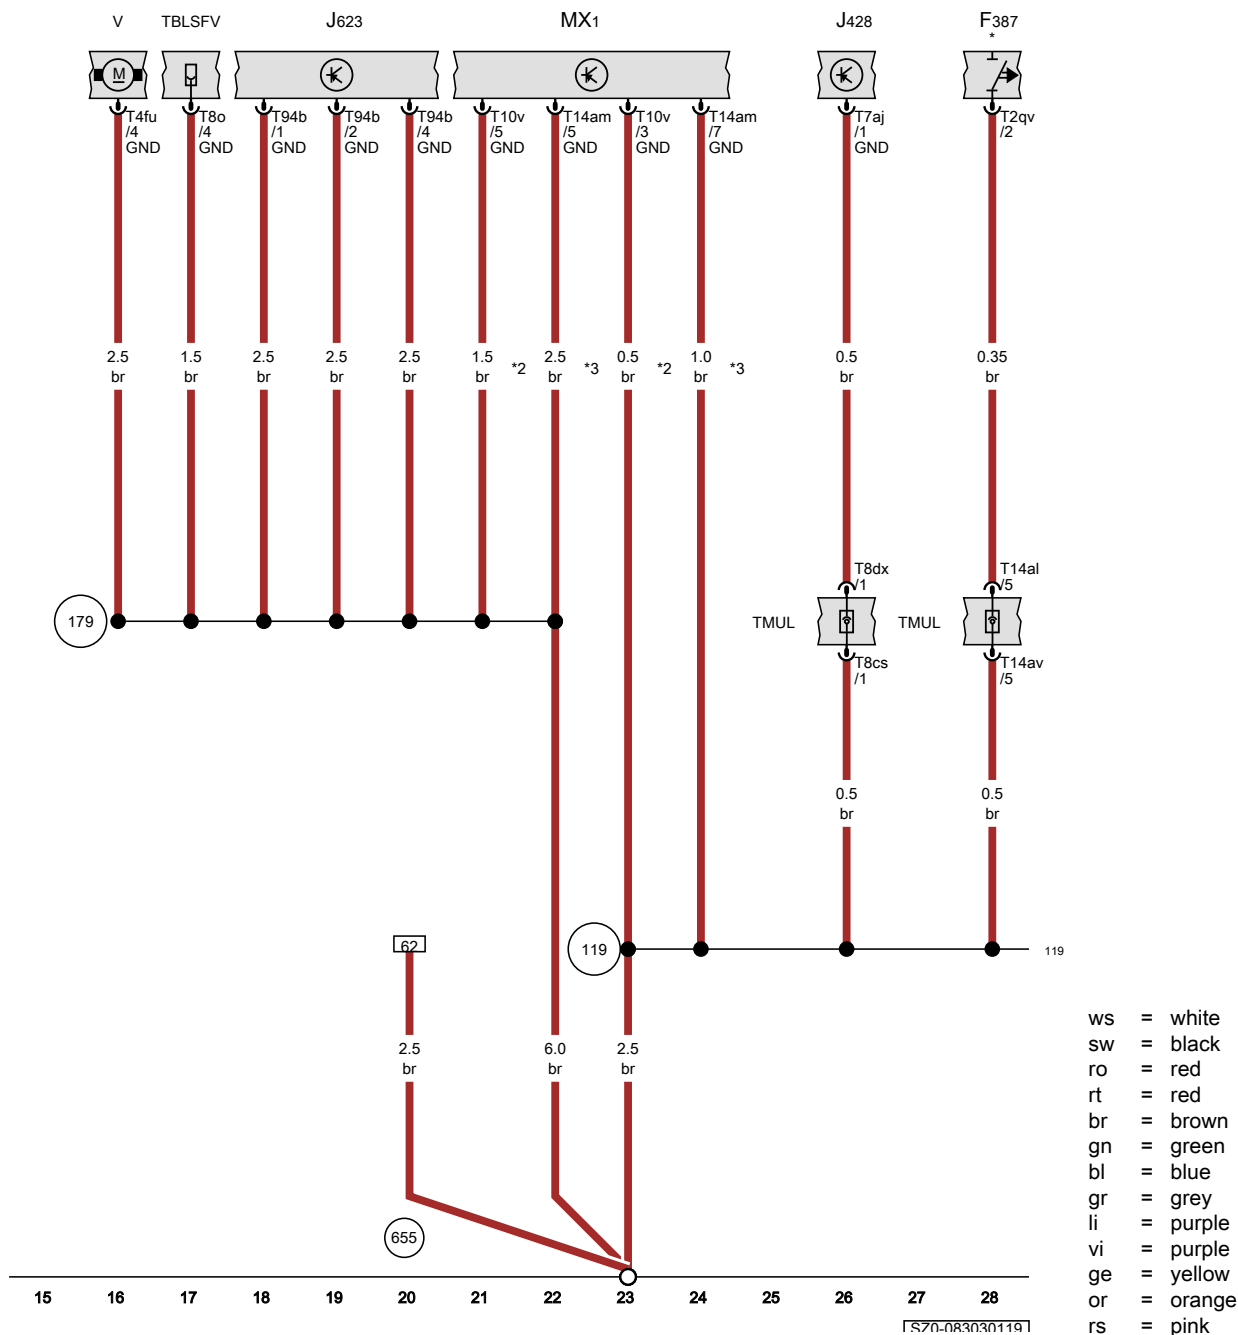


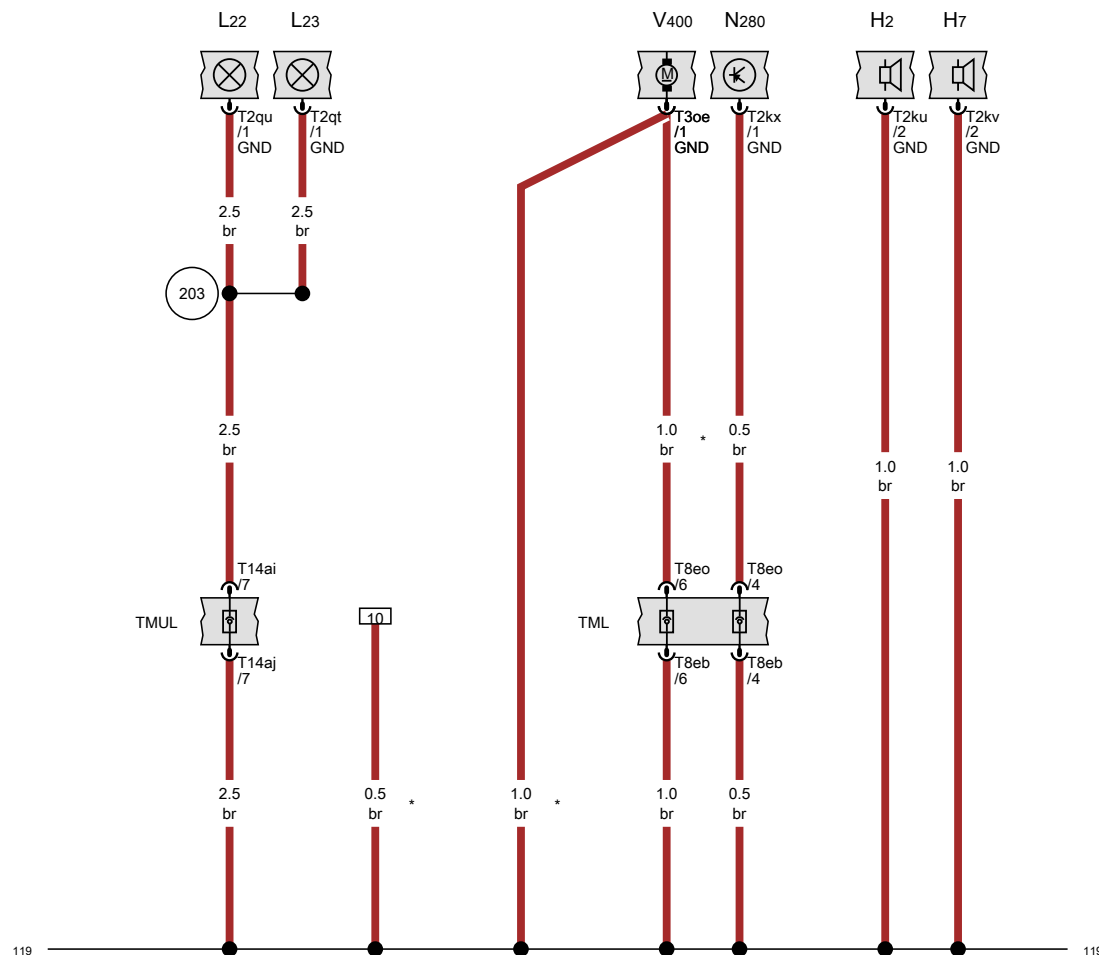

Treble horn, Bass horn, Left fog light bulb, Right fog light bulb, Air conditioner compressor regulating valve, Pump for exhaust gas recirculation cooler

- H2 Treble horn
- H7 Bass horn
- L22 Left fog light bulb
- L23 Right fog light bulb
- N280 Air conditioner compressor regulating valve
- T2ku 2-pin connector, black
- T2kv 2-pin connector, black
- T2kx 2-pin connector, black
- T2qt 2-pin connector, black
- T2qu 2-pin connector, black
- T3oe 3-pin connector, black
- T8eb 8-pin connector, black
- T8eo 8-pin connector, black
- T14ai 14-pin connector, black
- T14aj 14-pin connector, black
- TML Coupling point in engine compartment, left
- TMUL Coupling point on engine, bottom left
- V400 Pump for exhaust gas recirculation cooler
- 119 Earth connection 1, in headlight wiring harness
- 203 Earth connection, in front fog light wiring harness
- * According to equipment

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

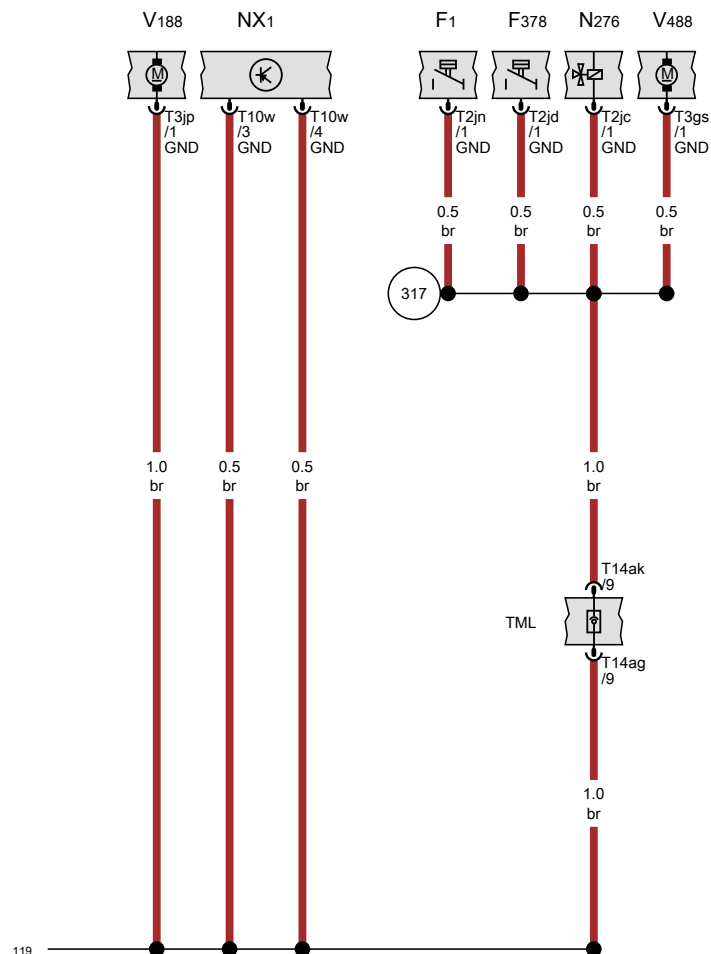


Oil pressure switch, Oil pressure switch for reduced oil pressure, Gearbox, Fuel pressure regulating valve, Charge air cooling pump, Auxiliary pump for heating

- F1 Oil pressure switch
- F378 Oil pressure switch for reduced oil pressure
- NX1 Gearbox
- N276 Fuel pressure regulating valve
- T2jc 2-pin connector, black
- T2jd 2-pin connector, black
- T2jn 2-pin connector, black
- T3gs 3-pin connector, black
- T3jp 3-pin connector, black
- T10w 10-pin connector, black
- T14ag 14-pin connector, grey
- T14ak 14-pin connector, black
- TML Coupling point in engine compartment, left
- V188 Charge air cooling pump
- V488 Auxiliary pump for heating

119 Earth connection 1, in headlight wiring harness

317 Earth connection 7, in engine compartment wiring harness


- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

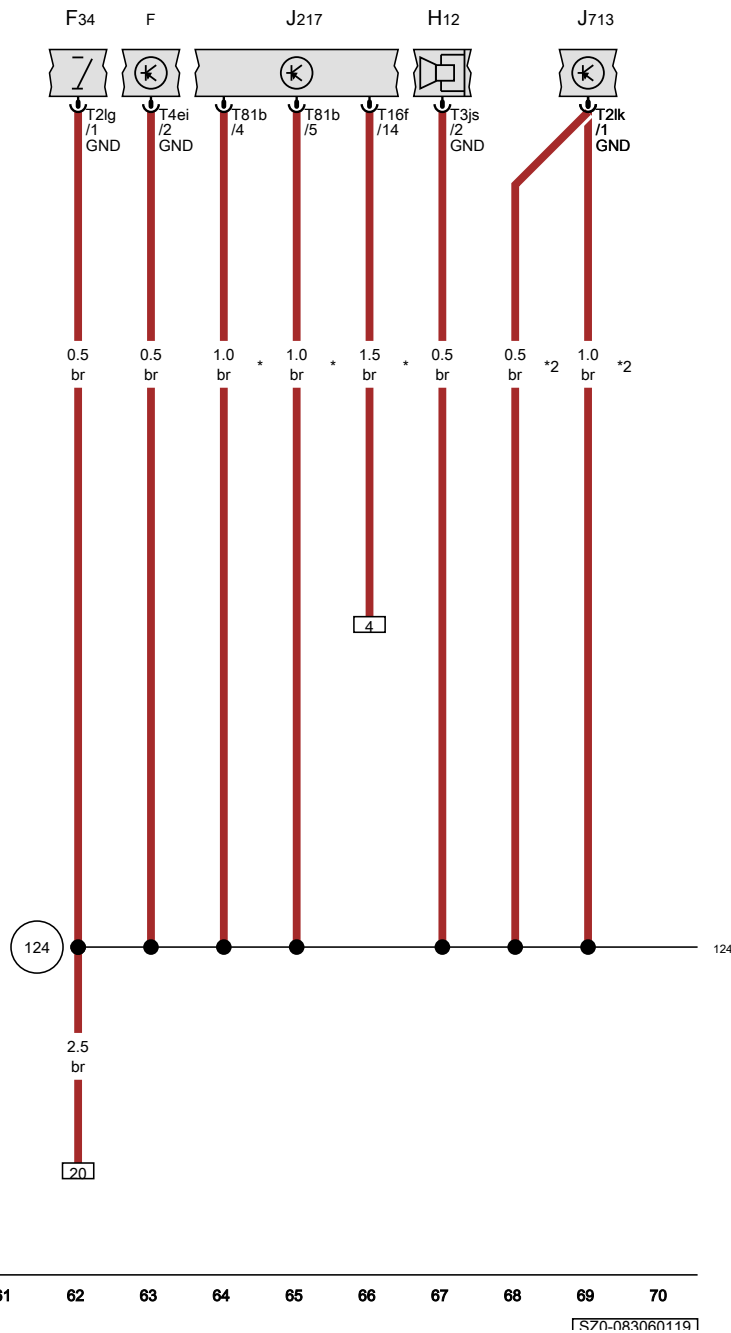

Brake light switch, Brake fluid level warning contact, Alarm horn, Automatic gearbox control unit, Second battery charging circuit relay

- F Brake light switch
- F34 Brake fluid level warning contact
- H12 Alarm horn
- J217 Automatic gearbox control unit
- J713 Second battery charging circuit relay
- T2lg 2-pin connector, black
- T2lk 2-pin connector, black
- T3js 3-pin connector, black
- T4ei 4-pin connector, black
- T16f 16-pin connector, black
- T81b 81-pin connector, black
- 124 Earth connection, in right side engine compartment wiring harness
- * see applicable current flow diagram for automatic gearbox
- *2 According to equipment

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

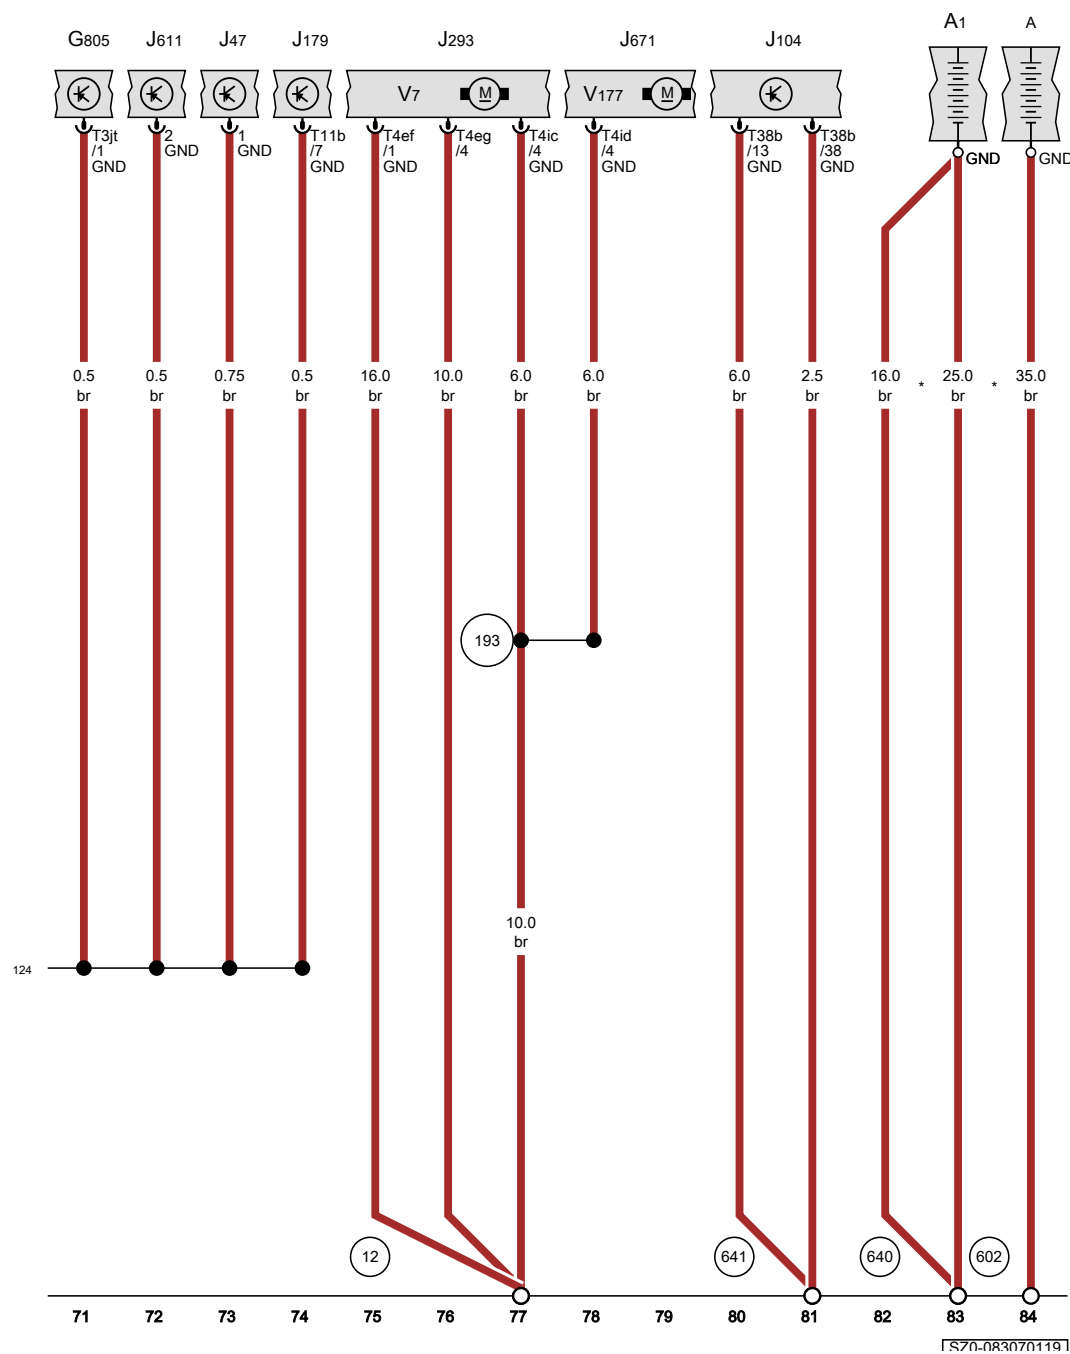


Battery, Second battery, Pressure sender for refrigerant circuit, Heated windscreen relay, ABS control unit, Automatic glow period control unit, Radiator fan control unit, Heated windscreen relay 2, Radiator fan control unit 2

- A Battery
- A1 Second battery
- G805 Pressure sender for refrigerant circuit
- J47 Heated windscreen relay
- J104 ABS control unit
- J179 Automatic glow period control unit
- J293 Radiator fan control unit
- J611 Heated windscreen relay 2
- J671 Radiator fan control unit 2
- T3jt 3-pin connector, black
- T4ef 4-pin connector, black
- T4eg 4-pin connector, black
- T4ic 4-pin connector, black
- T4id 4-pin connector, black
- T11b 11-pin connector, black
- T38b 38-pin connector, brown
- V7 Radiator fan
- V177 Radiator fan 2
- 12 Earth point, on left in engine compartment
- 124 Earth connection, in right side engine compartment wiring harness
- 193 Earth connection 1, in coolant fan wiring harness
- 602 Earth point, in front left footwell
- 640 Earth point 2, left in engine compartment
- 641 Earth point 3, left in engine compartment
- * According to equipment


ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

Fuel delivery unit, Oil temperature sender 2, Auxiliary heater control unit, Auxiliary air heater control unit, Control unit for NOx sender 2, Power take-off valve, Metering pump, Circulation pump, Metering pump 2

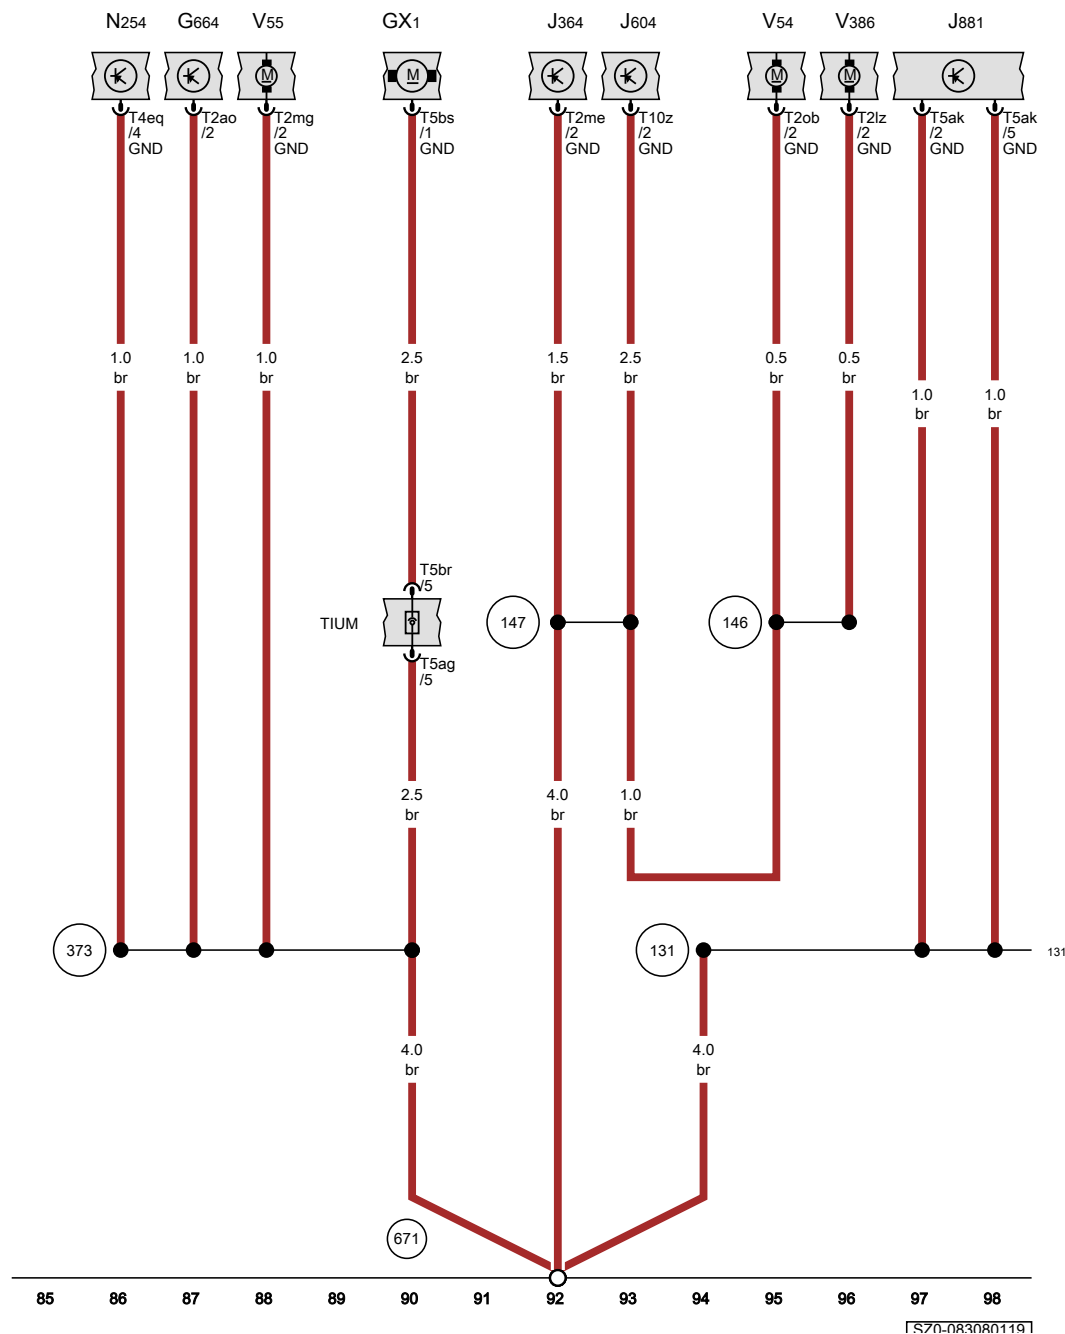

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink


- GX1 Fuel delivery unit
- G664 Oil temperature sender 2
- J364 Auxiliary heater control unit
- J604 Auxiliary air heater control unit
- J881 Control unit for NOx sender 2
- N254 Power take-off valve
- T2ao 2-pin connector, black
- T2lz 2-pin connector, black
- T2me 2-pin connector, black
- T2mg 2-pin connector, black
- T2ob 2-pin connector, black
- T4eq 4-pin connector, green
- T5ag 5-pin connector, black
- T5ak 5-pin connector, black
- T5br 5-pin connector, black
- T5bs 5-pin connector, black
- T10z 10-pin connector, black
- TIUM Coupling point in interior, below centre
- V54 Metering pump
- V55 Circulation pump
- V386 Metering pump 2
- 131 Earth connection 2, in engine compartment wiring harness
- 146 Earth connection 1, in auxiliary heater wiring harness
- 147 Earth connection 2, in auxiliary heater wiring harness
- 373 Earth connection 8, in main wiring harness
- 671 Earth point 1, on front of left longitudinal member

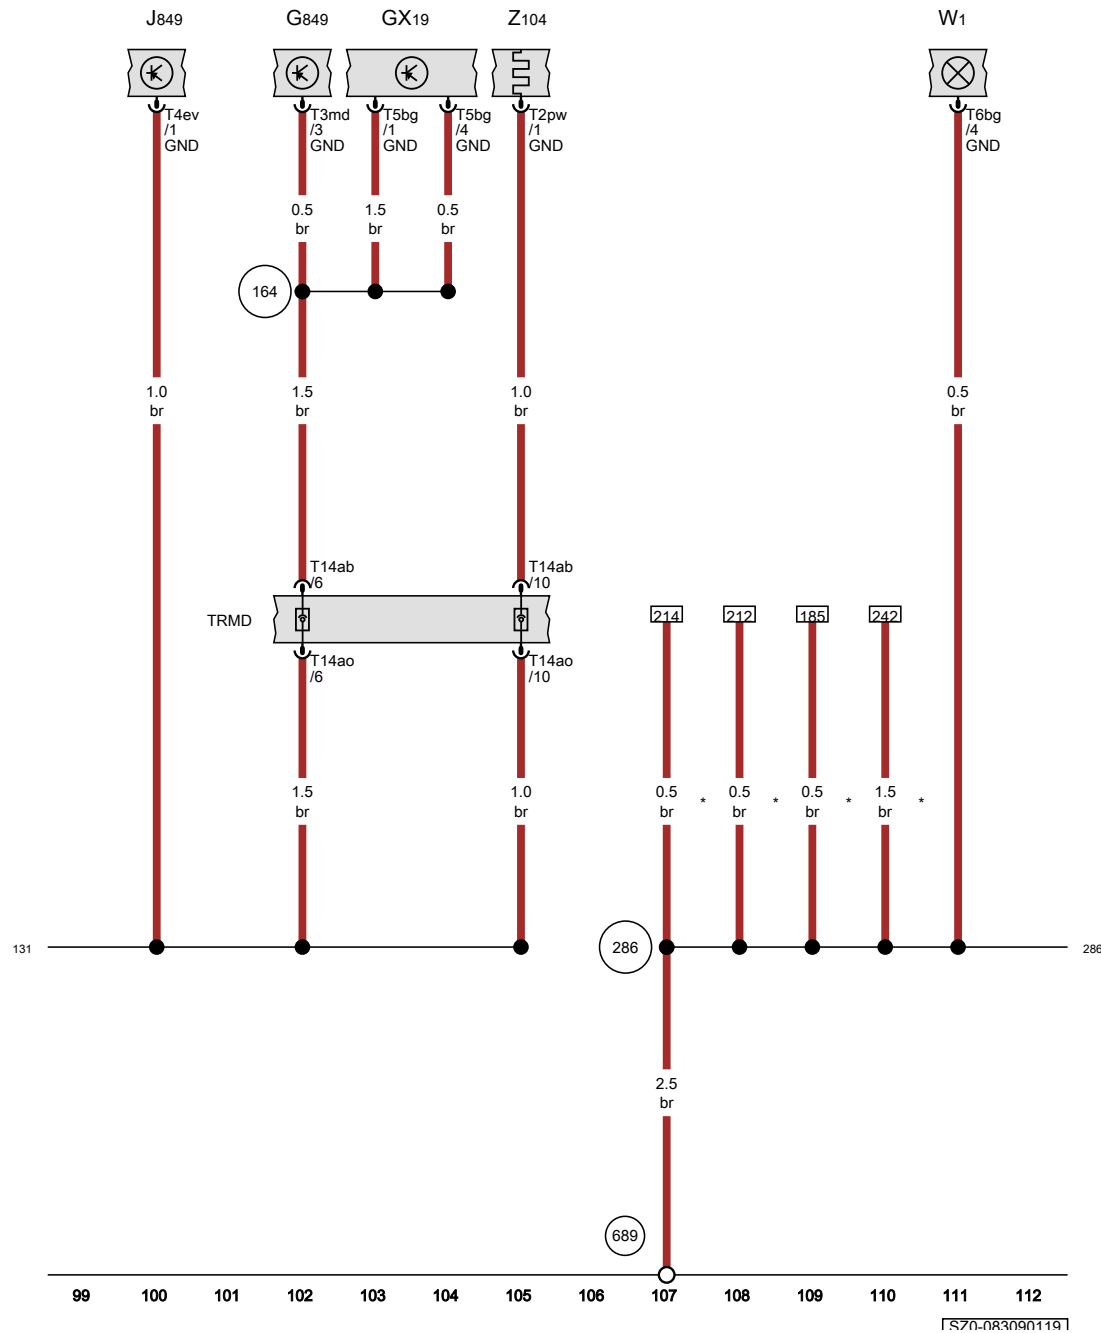

Delivery unit for reducing agent metering system, Reducing agent quality sensor, Control unit for sensor electronics, Front interior light, Heater for reducing agent line (heater circuit 2)

- GX19 Delivery unit for reducing agent metering system
- G849 Reducing agent quality sensor
- J849 Control unit for sensor electronics
- T2pw 2-pin connector, black
- T3md 3-pin connector, black
- T4ev 4-pin connector, black
- T5bg 5-pin connector, black
- T6bg 6-pin connector, black
- T14ab 14-pin connector, black
- T14ao 14-pin connector, black
- TRMD Coupling point for reducing agent metering system
- W1 Front interior light
- Z104 Heater for reducing agent line (heater circuit 2)

- 131 Earth connection 2, in engine compartment wiring harness
- 164 Earth connection, in catalytic converter warning circuit wiring harness
- 286 Earth connection 8, in interior wiring harness
- 689 Earth point, at front, central in roof
- * For right-hand drive models

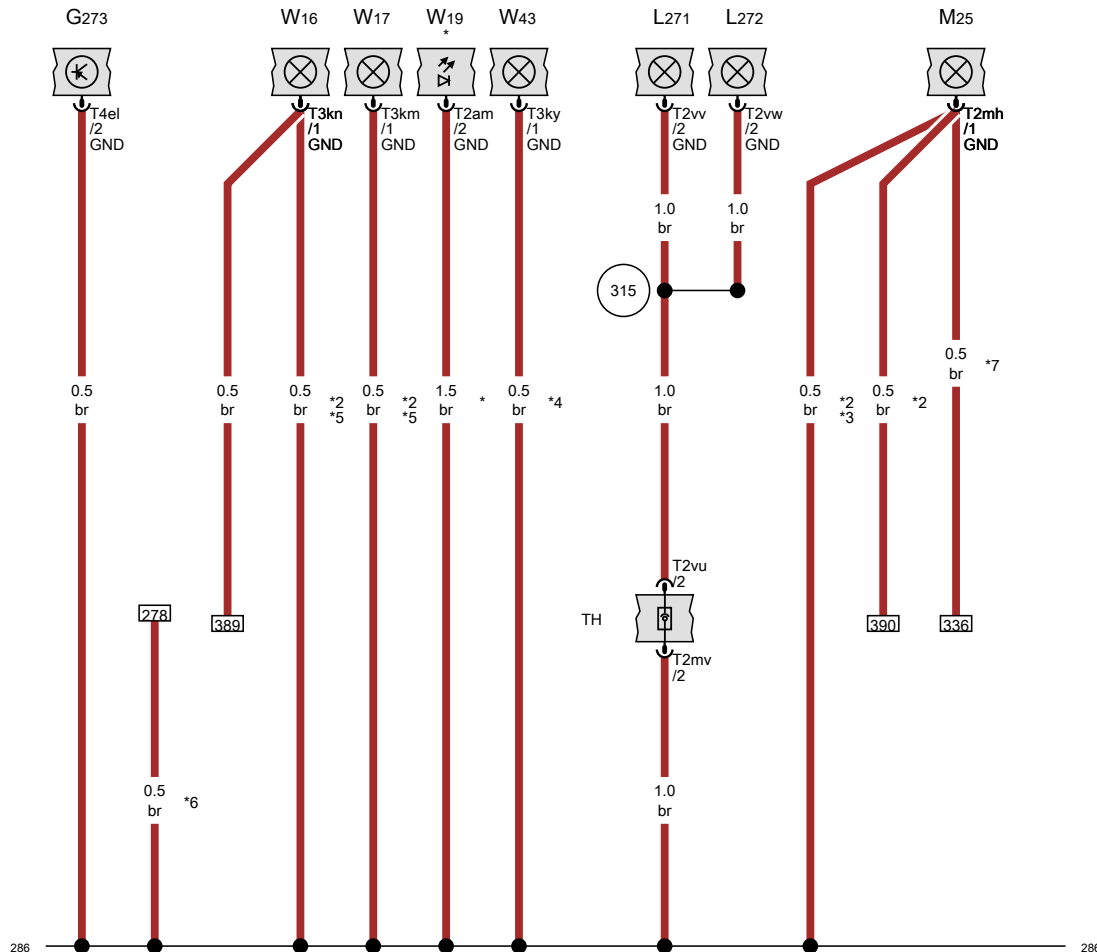

Interior monitoring sensor, Front left rotating light bulb, Rear right rotating light bulb, High-level brake light bulb, Left interior light, Right interior light, Driver side reading light, Rear interior light

- G273 Interior monitoring sensor
- L271 Front left rotating light bulb
- L272 Rear right rotating light bulb
- M25 High-level brake light bulb
- T2am 2-pin connector, black
- T2mh 2-pin connector, black
- T2mv 2-pin connector, black
- T2vu 2-pin connector, black
- T2vv 2-pin connector, black
- T2vw 2-pin connector, black
- T3km 3-pin connector, black
- T3kn 3-pin connector, black
- T3ky 3-pin connector, black
- T4el 4-pin connector, black
- TH Coupling point for roof
- W16 Left interior light
- W17 Right interior light
- W19 Driver side reading light
- W43 Rear interior light

286 Earth connection 8, in interior wiring harness


315 Earth connection, in rotating light wiring harness

- * For models with special police equipment
- *2 For panel van and Kombi models
- *3 For models with extra-high roof
- *4 For models with double cab
- *5 For models with right sliding door
- *6 For right-hand drive models
- *7 For models with double cab/dropside

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

113 114 115 116 117 118 119 120 121 122 123 124 125 126

[S70-083100119]

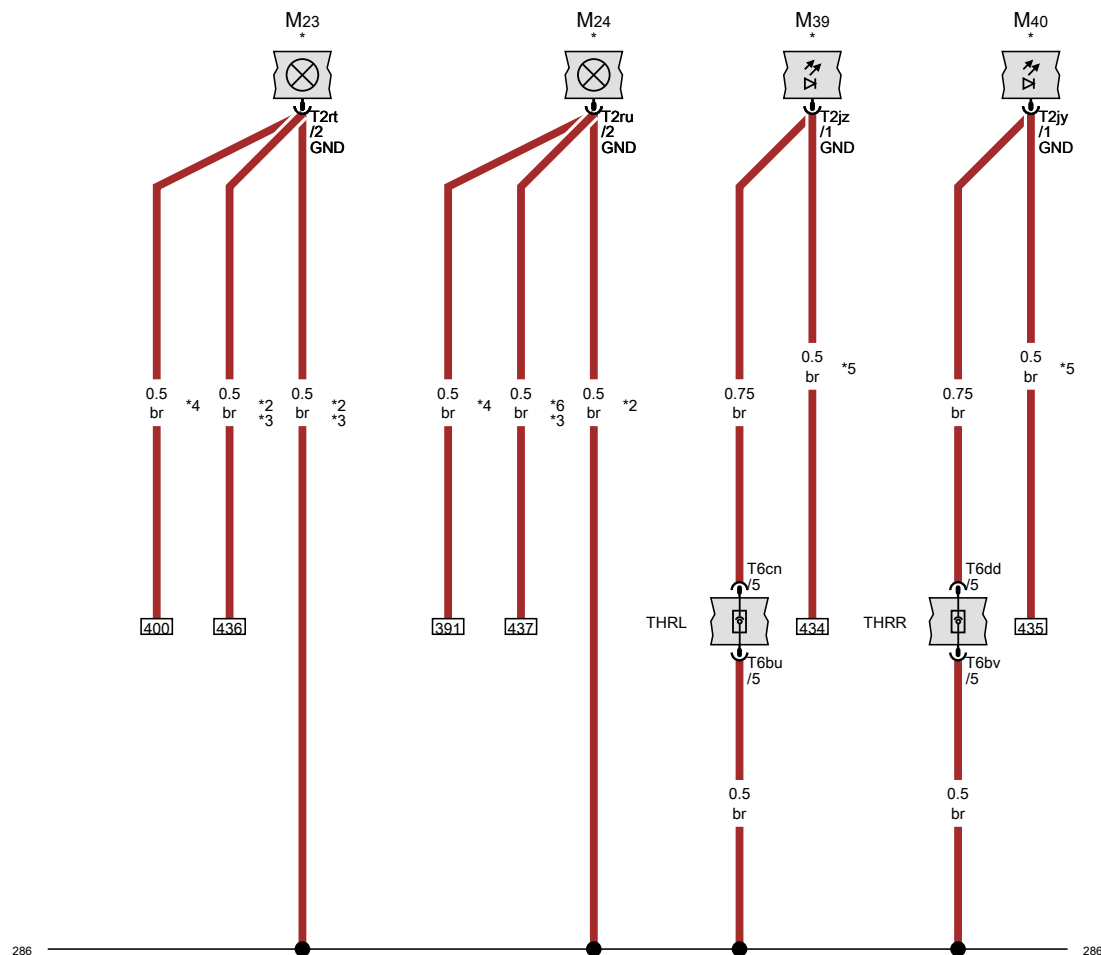

Right roof mounted turn signal bulb, Centre left side marker bulb, Centre right side marker bulb

- M23 Left roof mounted turn signal bulb
- M24 Right roof mounted turn signal bulb
- M39 Centre left side marker bulb
- M40 Centre right side marker bulb
- T2jy 2-pin connector, black
- T2jz 2-pin connector, black
- T2rt 2-pin connector, black
- T2ru 2-pin connector, black
- T6bu 6-pin connector, black
- T6bv 6-pin connector, black
- T6cn 6-pin connector, black
- T6dd 6-pin connector, black
- THRL Coupling point in luggage compartment, left
- THRR Coupling point in luggage compartment, right


286 Earth connection 8, in interior wiring harness

- * Pre-wired component
- *2 For models with double cab/dropside
- *3 According to equipment
- *4 For panel van and Kombi models
- *5 For models with double cab
- *6 Not for models with double cab/ dropside

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

127 128 129 130 131 132 133 134 135 136 137 138 139 140

[S70-083110119]

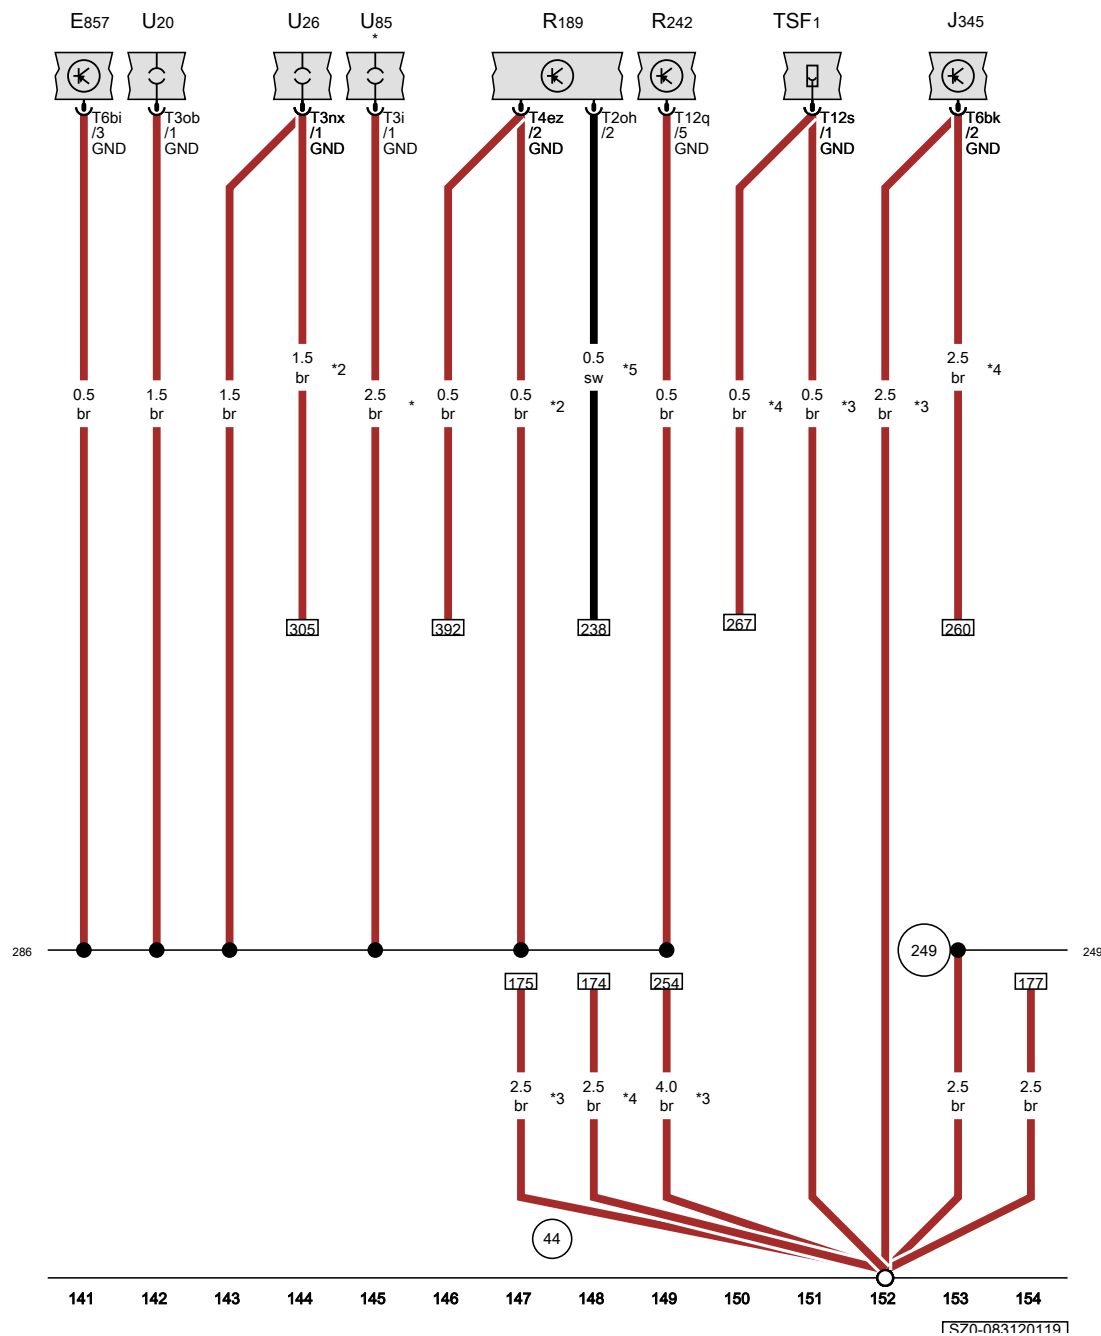

Additional display and operating unit 1, Trailer detector control unit, Reversing camera, Front camera for driver assist systems, Coupling point for special vehicles, 12 V socket 4, 12 V socket 5, 12 V socket 3 for special vehicles

- E857 Additional display and operating unit 1
- J345 Trailer detector control unit
- R189 Reversing camera
- R242 Front camera for driver assist systems
- T2oh 2-pin connector, grey
- T3i 3-pin connector, colourless
- T3nx 3-pin connector, colourless
- T3ob 3-pin connector, colourless
- T4ez 4-pin connector, black
- T6bi 6-pin connector, black
- T6bk 6-pin connector, black
- T12q 12-pin connector, black
- T12s 12-pin connector, black
- TSF1 Coupling point for special vehicles
- U20 12 V socket 4
- U26 12 V socket 5
- U85 12 V socket 3 for special vehicles
- 44 Earth point, lower part of left A-pillar
- 249 Earth connection 2, in interior wiring harness
- 286 Earth connection 8, in interior wiring harness
- * For models with special police equipment
- *2 For models with extra-high roof
- *3 For right-hand drive models
- *4 For left-hand drive models
- *5 According to equipment


Parking aid control unit, Data bus diagnostic interface,
Elevated side light, front left

- J446 Parking aid control unit
- J533 Data bus diagnostic interface
- M90 Elevated side light, front left
- T1axj 1-pin connector, black
- T20h 20-pin connector, red
- T26c 26-pin connector, black

249 Earth connection 2, in interior wiring harness

* For left-hand drive models


*2 For right-hand drive models

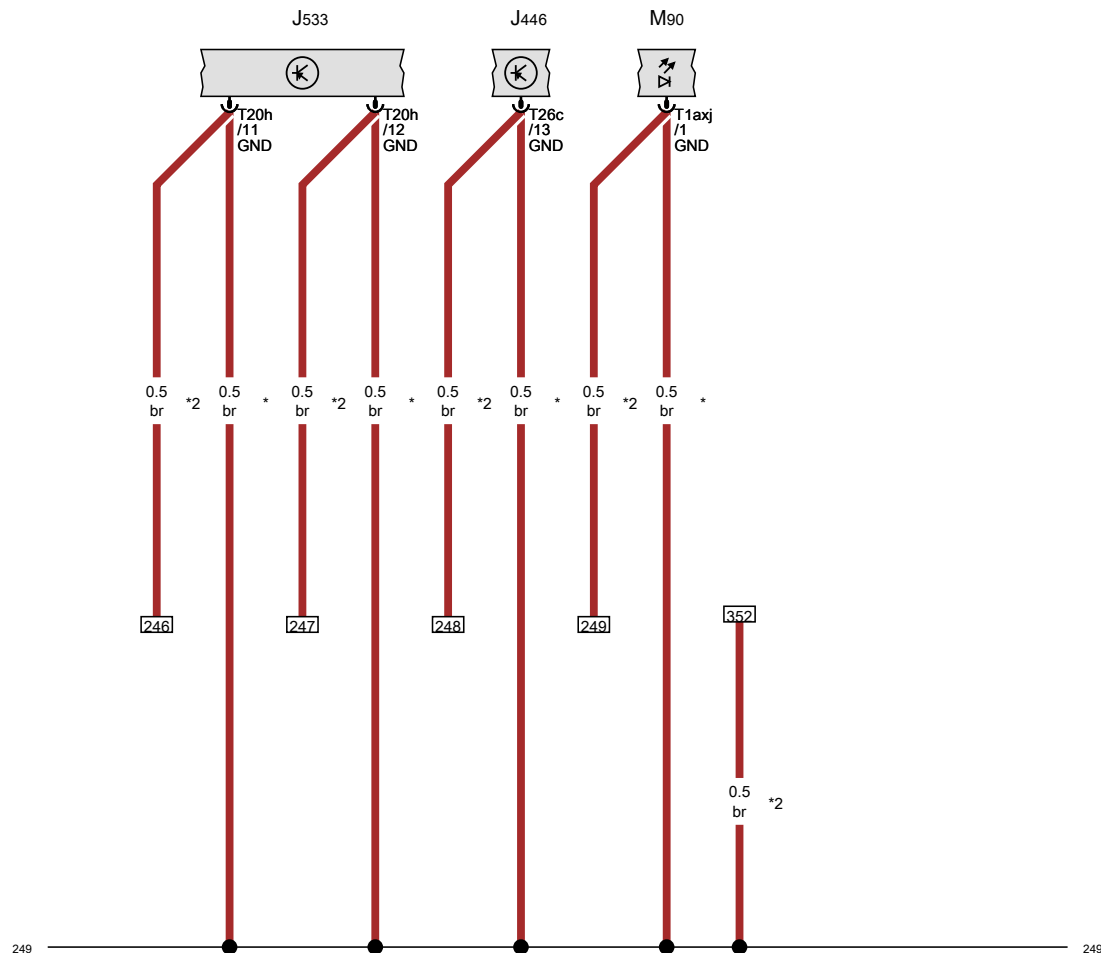


- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

155 156 157 158 159 160 161 162 163 164 165 166 167 168

[S70-083130119]

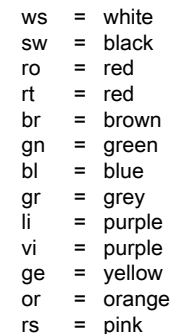

- 151 Earth connection 1, in front wiring harness
- 205 Earth connection, in driver door wiring harness
- 249 Earth connection 2, in interior wiring harness
- 734 Earth point in front left door
 - * For left-hand drive models
 - *2 For right-hand drive models

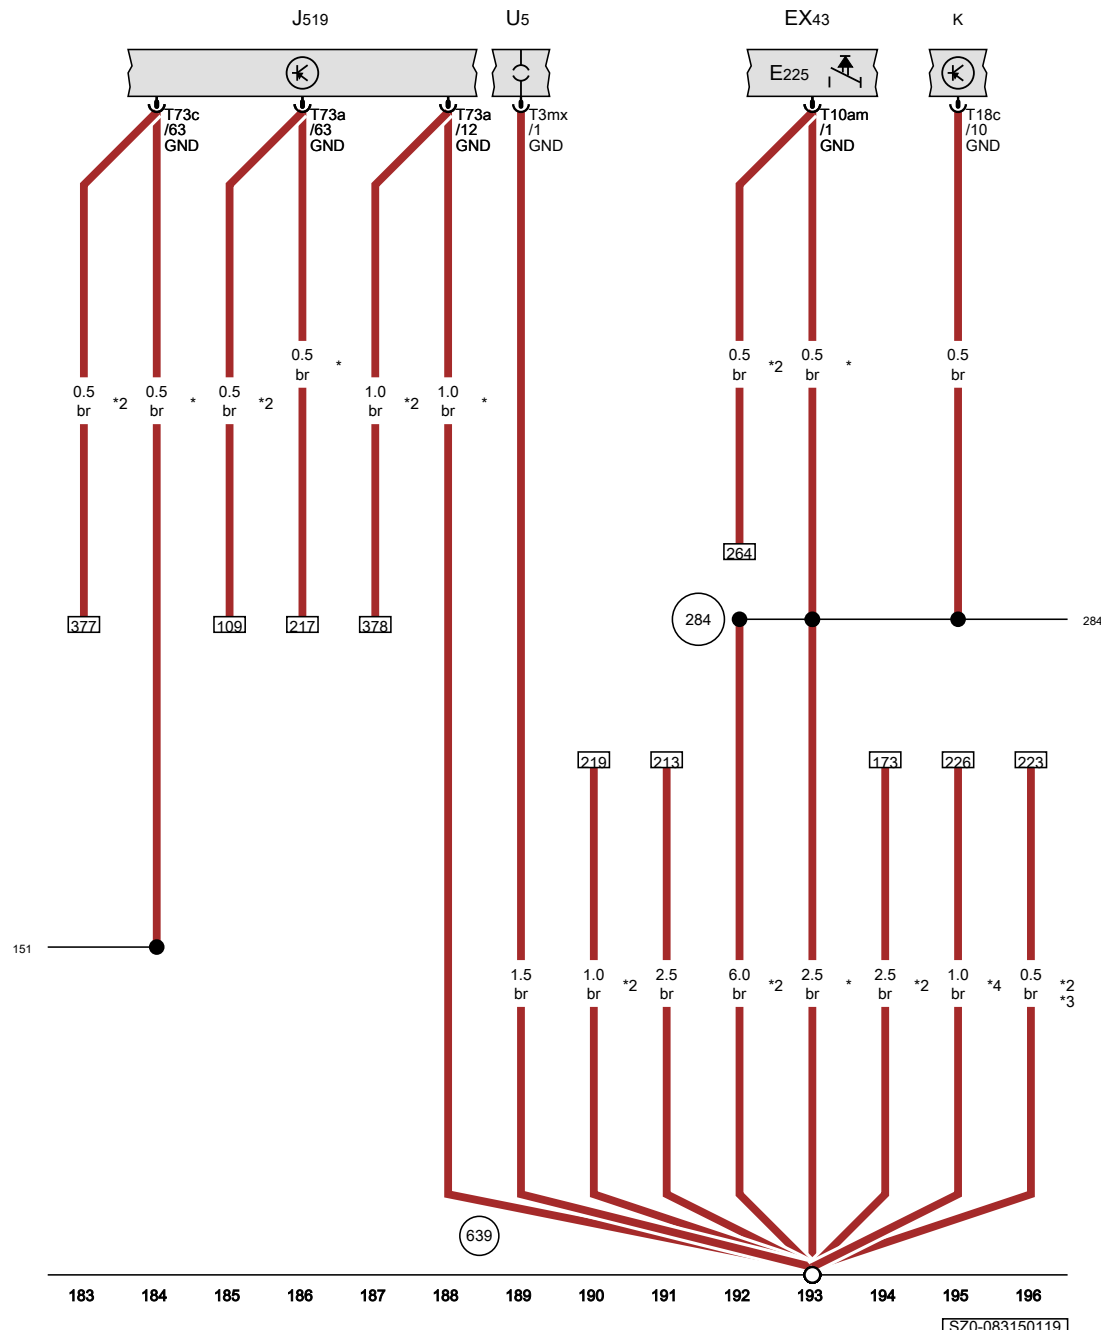


Switch module 1 in dash panel, next to steering wheel,
Onboard supply control unit, Dash panel insert, 12 V socket

- EX43 Switch module 1 in dash panel, next to steering wheel
- E225 Power take-off switch
- J519 Onboard supply control unit
- K Dash panel insert
- T3mx 3-pin connector, colourless
- T10am 10-pin connector, black
- T18c 18-pin connector, black
- T73a 73-pin connector, black
- T73c 73-pin connector, black
- U5 12 V socket

- 151 Earth connection 1, in front wiring harness
- 284 Earth connection 6, in interior wiring harness
- 639 Earth point, left A-pillar
- * For left-hand drive models
- *2 For right-hand drive models
- *3 According to equipment
- *4 For models with special police equipment

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

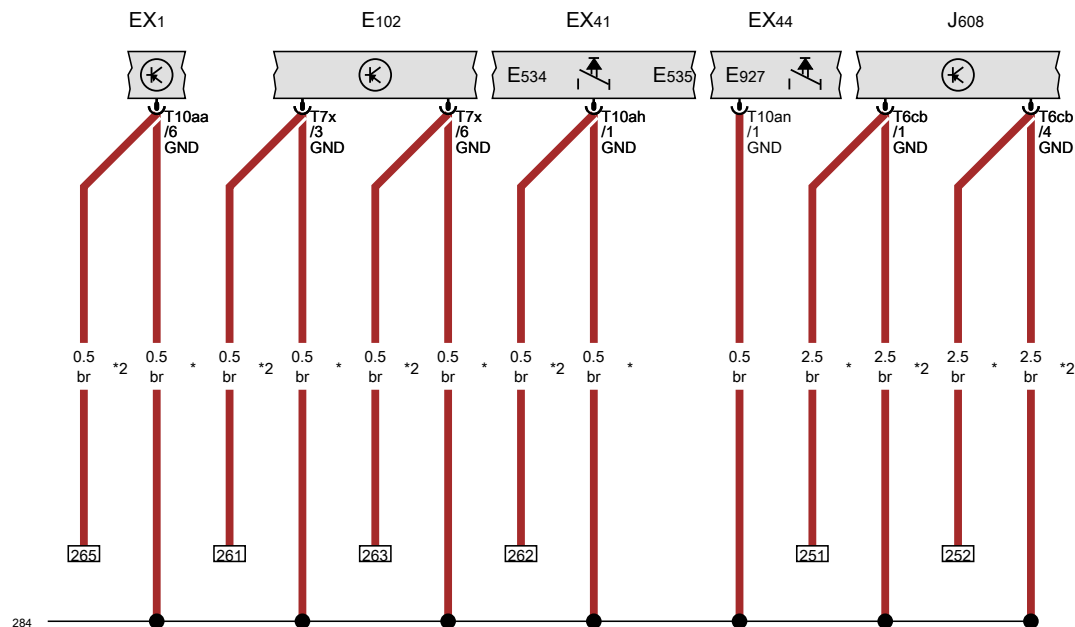

Rotary light switch, Switch module on left of dash panel, Switch module 2 in dash panel, next to steering wheel, Headlight range control regulator, Special vehicle control unit

- EX1 Rotary light switch
- EX41 Switch module on left of dash panel
- EX44 Switch module 2 in dash panel, next to steering wheel
- E102 Headlight range control regulator
- E534 Switch for roof ventilator to ventilate load area
- E535 Switch for roof ventilator to extract air from load area
- E927 Remote engine start button
- J608 Special vehicle control unit
- T6cb 6-pin connector, blue
- T7x 7-pin connector, black
- T10aa 10-pin connector, black
- T10ah 10-pin connector, black
- T10an 10-pin connector, black

284 Earth connection 6, in interior wiring harness

* For left-hand drive models

*2 For right-hand drive models

*2
*3

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink

197 198 199 200 201 202 203 204 205 206 207 208 209 210

1S70-083160119

Steering column electronics control unit, Diagnostic connection

J527 Steering column electronics control unit
 T14bk 14-pin connector, black
 T16b 16-pin connector, black
 T16h 16-pin connector, black
 U31 Diagnostic connection


228 Connection, in harness

296 Earth connection 11, in interior wiring harness

* For left-hand drive models

*2 For right-hand drive models


*3 According to equipment

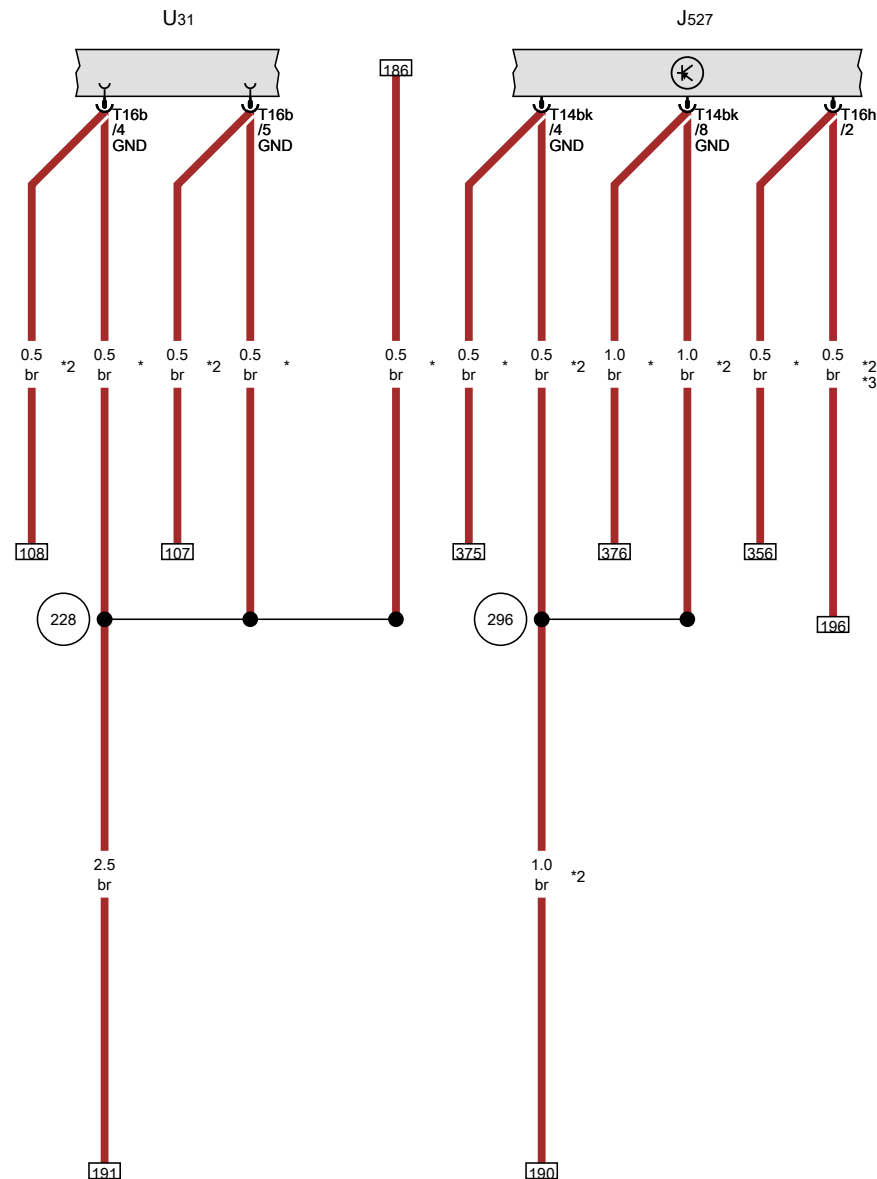

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

211 212 213 214 215 216 217 218 219 220 221 222 223 224

[S70-083170119]

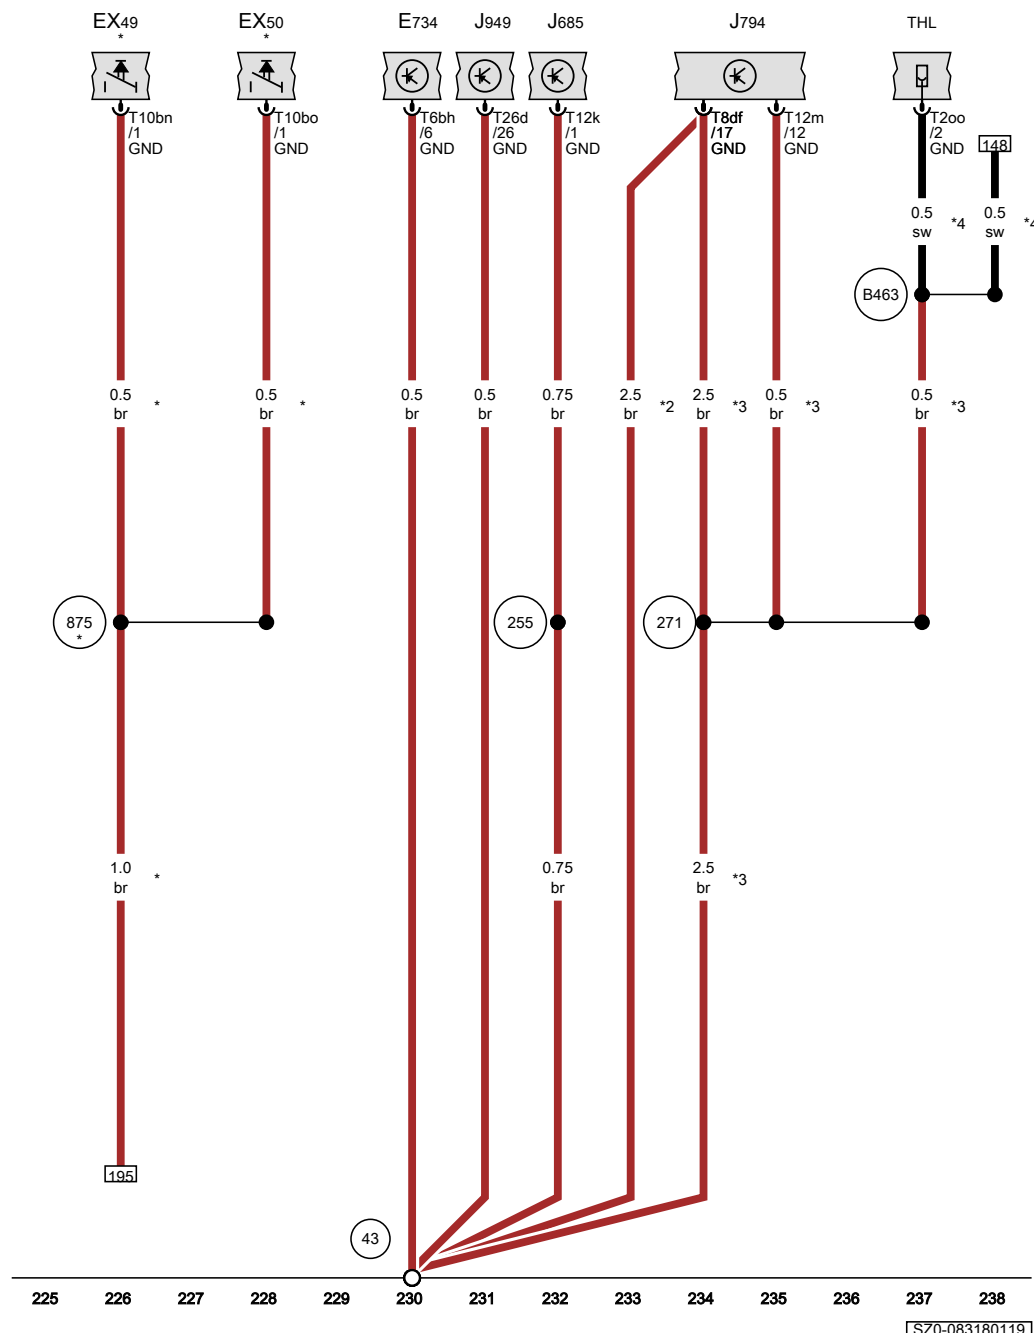

Centre switch module 4 in dash panel, Centre switch module 1 in dash panel, Telematics button module, Display unit for front information display and operating unit control unit, Control unit 1 for information electronics, Emergency call module control unit and communication unit, Coupling point for roof, left

- EX49 Centre switch module 4 in dash panel
- EX50 Centre switch module 1 in dash panel
- E734 Telematics button module
- J685 Display unit for front information display and operating unit control unit
- J794 Control unit 1 for information electronics
- J949 Emergency call module control unit and communication unit
- T2oo 2-pin connector, grey
- T6bh 6-pin connector, brown
- T8df 8-pin connector, black
- T10bn 10-pin connector, red
- T10bo 10-pin connector, black
- T12k 12-pin connector, black
- T12m 12-pin connector, blue
- T26d 26-pin connector, black
- THL Coupling point for roof, left

- 43 Earth point, lower part of right A-pillar
- 255 Earth connection 1, in radio wiring harness
- 271 Earth connection 3, in front wiring harness
- 875 Earth connection 12 in special vehicle wiring harness
- B463 Connection 2 (video), in main wiring harness

- * For models with special police equipment
- *2 For models with no reversing camera system
- *3 For models with reversing camera system
- *4 According to equipment

Tachograph


G24 Tachograph
T8cu 8-pin connector

377 Earth connection 12, in main wiring harness

382 Earth connection 17, in main wiring harness

638 Earth point, on right A-pillar

* For right-hand drive models
*2 For left-hand drive models
*3 For models with special police equipment

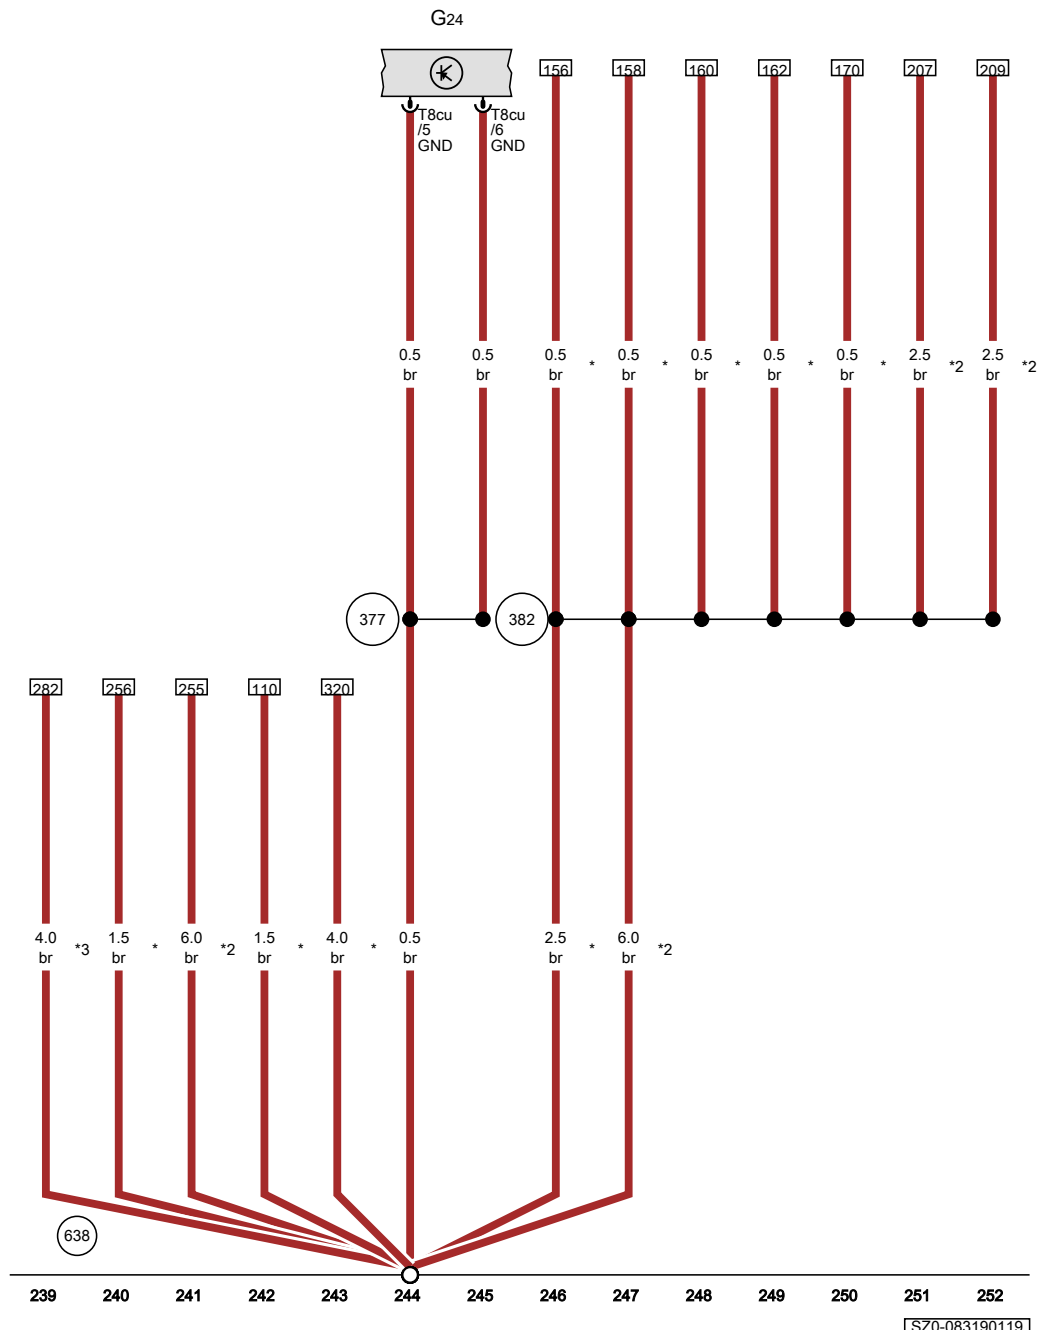

[S70-083190119]

Fresh air blower control unit, 12 V socket 3


J126 Fresh air blower control unit
T3my 3-pin connector, colourless
T4j 4-pin connector, black
U19 12 V socket 3


152 Earth connection 2, in front wiring harness

383 Earth connection 18, in main wiring harness

* For right-hand drive models

*2 For left-hand drive models

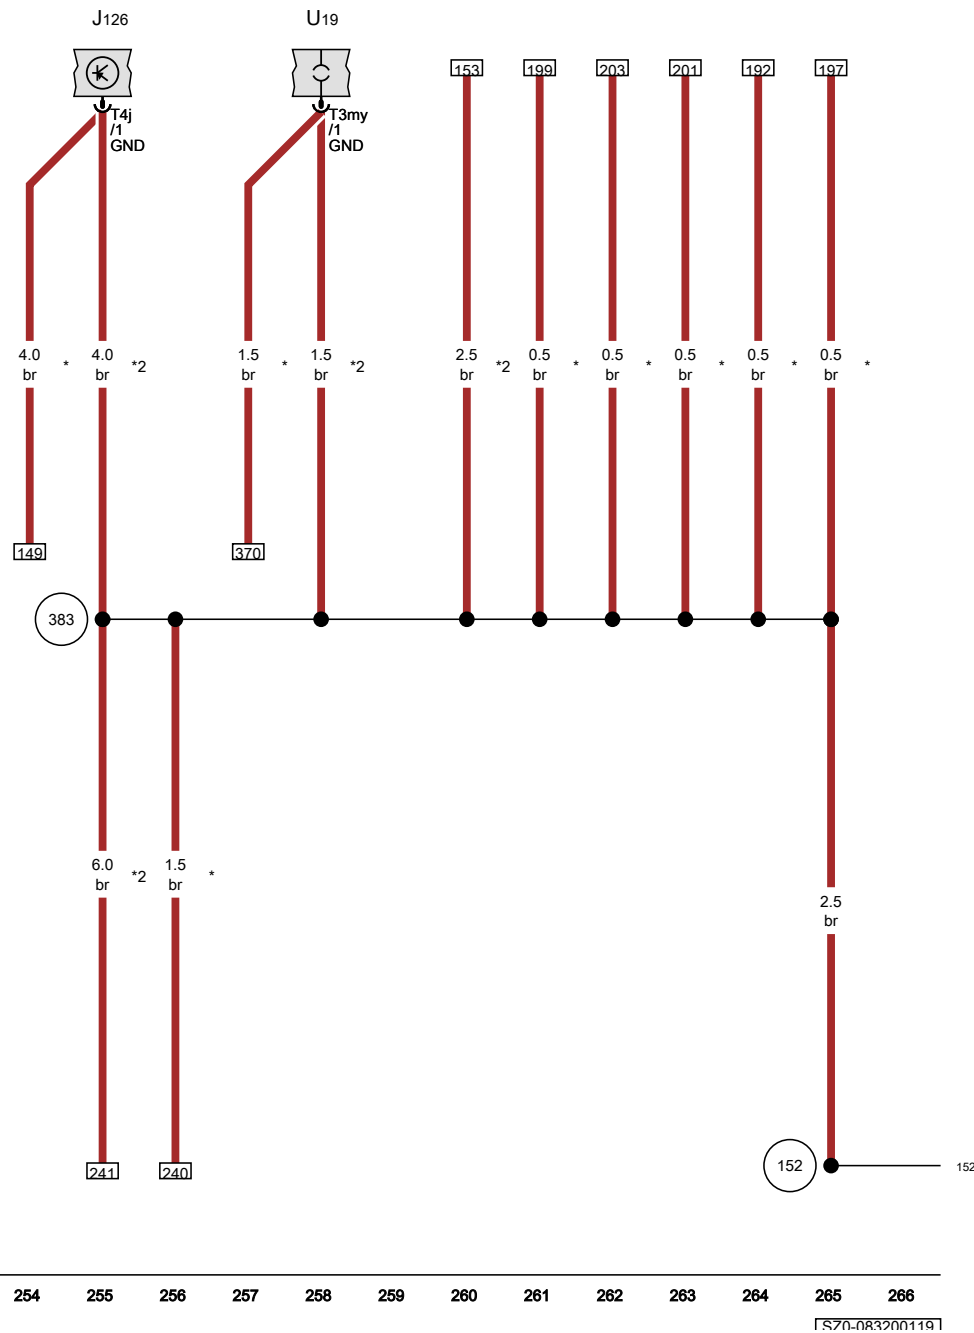

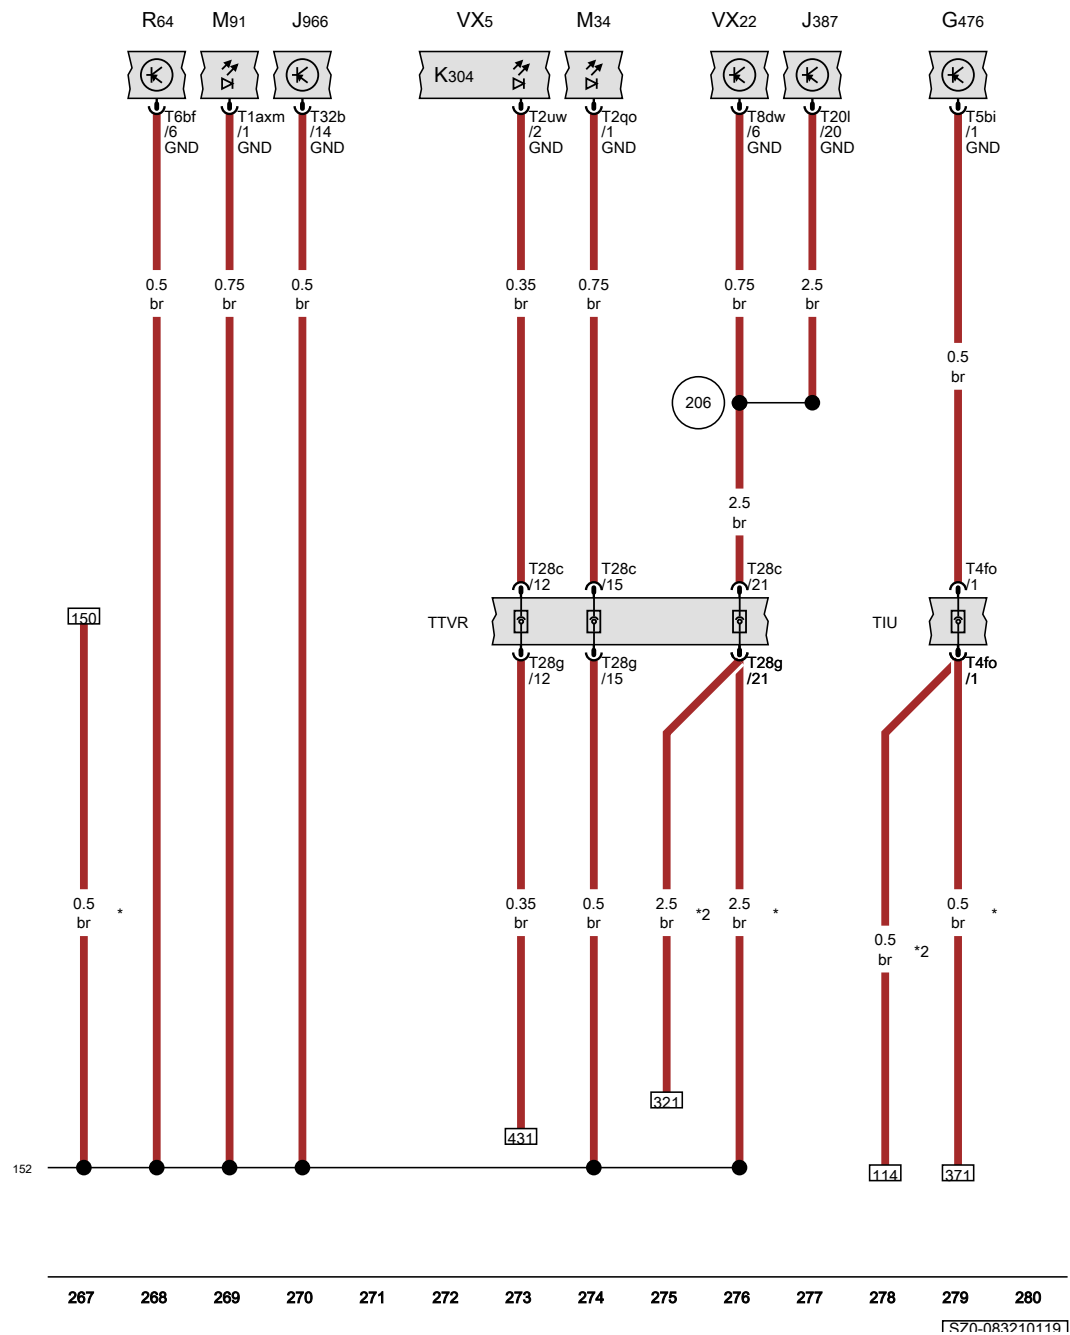

Clutch position sender, Front passenger door control unit, Front right side marker bulb, Remote control receiver for auxiliary heater, Passenger side exterior mirror, Front passenger door lock unit

- G476 Clutch position sender
- J387 Front passenger door control unit
- J966 Charge voltage control unit for high-voltage battery
- K304 Blind Spot Monitor warning lamp in right exterior mirror
- M34 Front right side marker bulb
- M91 Elevated side light, front right
- R64 Remote control receiver for auxiliary heater
- T1axm 1-pin connector, black
- T2qo 2-pin connector, black
- T2uw 2-pin connector, black
- T4fo 4-pin connector, black
- T5bi 5-pin connector, black
- T6bf 6-pin connector, blue
- T8dw 8-pin connector, black
- T20l 20-pin connector, black
- T28c 28-pin connector, black
- T28g 28-pin connector, black
- T32b 32-pin connector, black
- TIU Coupling point in interior, below
- TTVR Coupling point for front right door
- VX5 Passenger side exterior mirror
- VX22 Front passenger door lock unit


152 Earth connection 2, in front wiring harness

206 Earth connection, in front passenger door wiring harness

* For left-hand drive models

*2 For right-hand drive models

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink

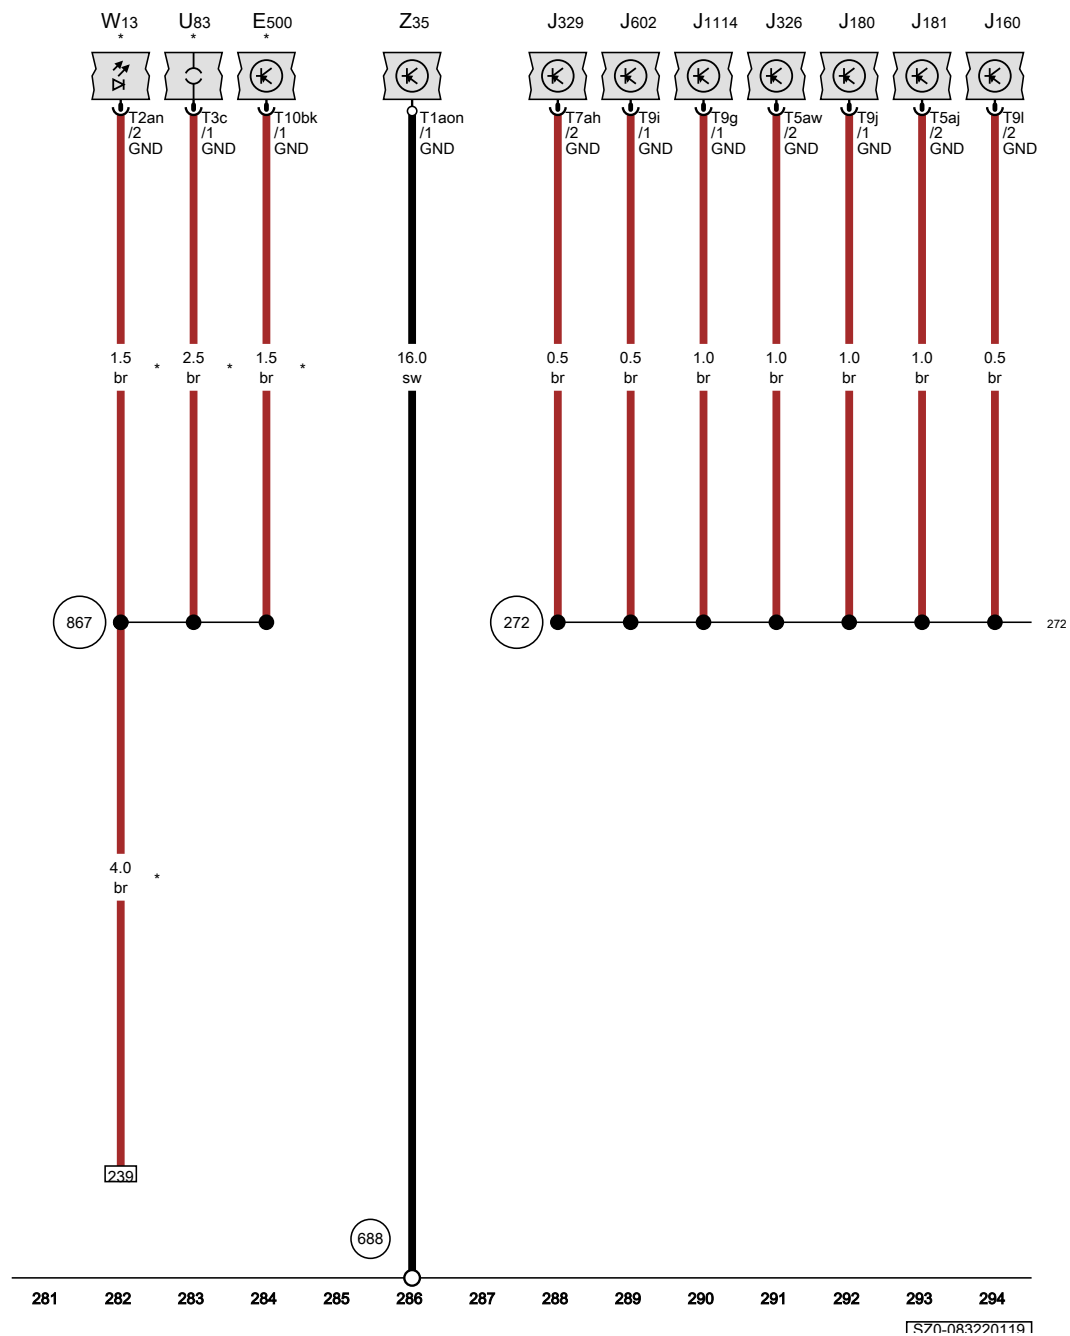

Alarm rotary and pull switch, Circulation pump relay, Switch-over relay 1 for roof ventilator, Switch-over relay 2 for roof ventilator, Rotating light relay, Terminal 15 voltage supply relay, Interior light relay, Rotating light control unit, 12 V socket for special vehicles, Front passenger reading light, Auxiliary air heater element

- E500 Alarm rotary and pull switch
- J160 Circulation pump relay
- J180 Switch-over relay 1 for roof ventilator
- J181 Switch-over relay 2 for roof ventilator
- J326 Rotating light relay
- J329 Terminal 15 voltage supply relay
- J602 Interior light relay
- J1114 Rotating light control unit
- T1aon 1-pin connector, black
- T2an 2-pin connector, black
- T3c 3-pin connector, black
- T5aj 5-pin connector, black
- T5aw 5-pin connector, brown
- T7ah 7-pin connector, green
- T9g 9-pin connector, grey
- T9i 9-pin connector, grey
- T9j 9-pin connector, grey
- T9l 9-pin connector, black
- T10bk 10-pin connector, black
- U83 12 V socket for special vehicles
- W13 Front passenger reading light
- Z35 Auxiliary air heater element


272 Earth connection 4, in front wiring harness

688 Earth point 2, on centre tunnel

867 Earth connection 4 in special vehicle wiring harness

* For models with special police equipment

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

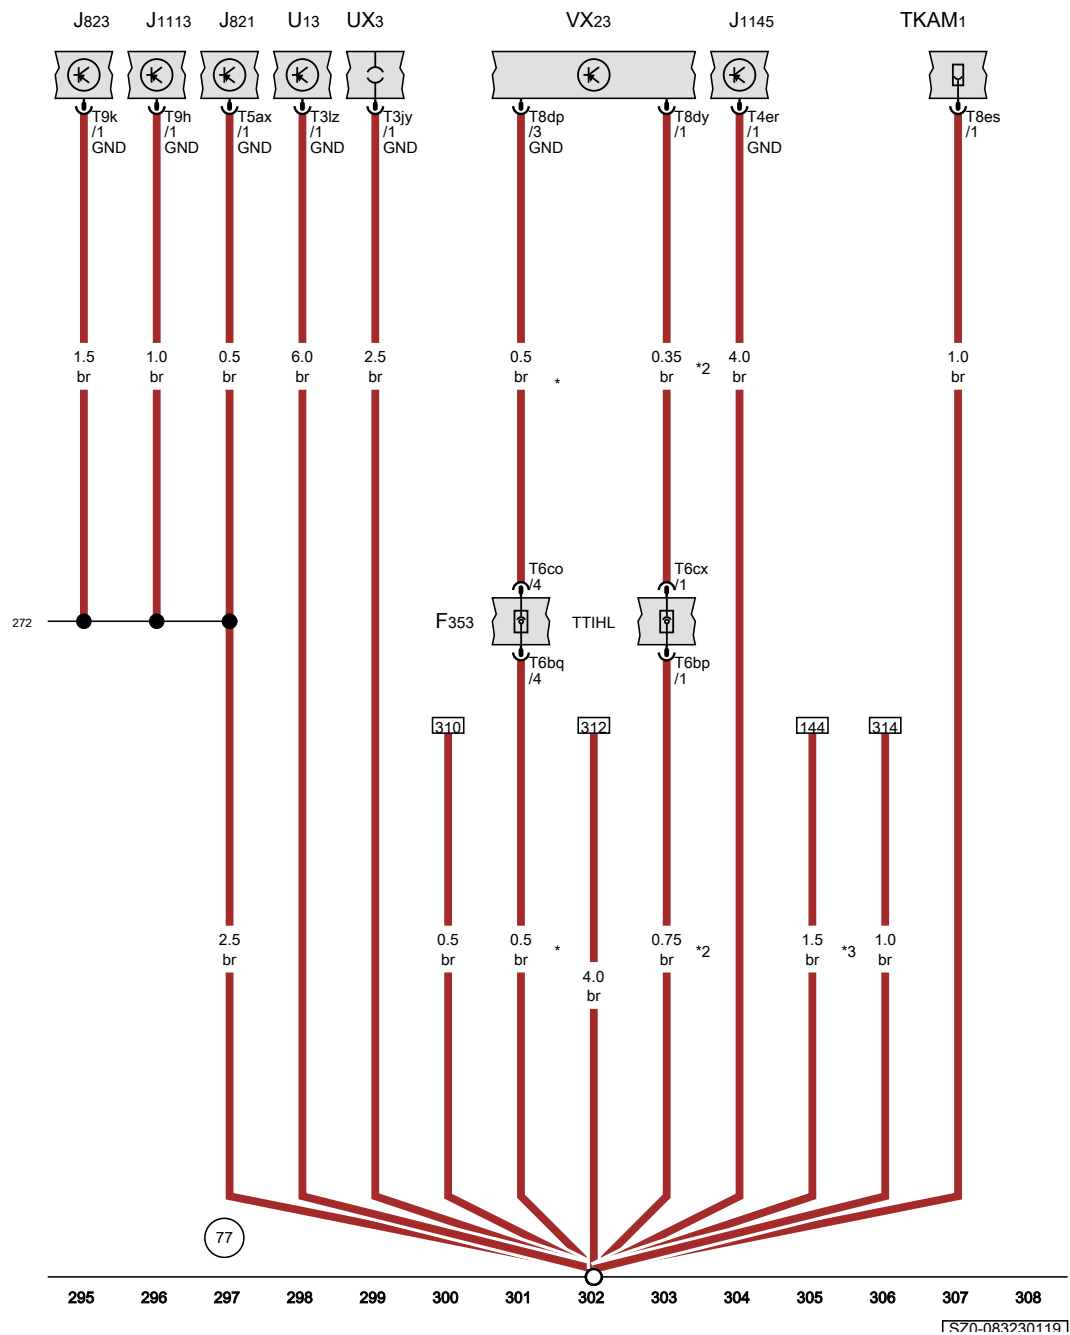

Relay for special installations, terminal 15, Relay for tail lift, Reverse warning beeper control unit, Control unit for supplementary blower 2 for air conditioning, Coupling point for reversing camera, 12 V socket, DC/AC converter with socket, 12 V - 230 V, Rear left door lock unit

- F353 Contact strip in left sliding door
- J821 Relay for special installations, terminal 15
- J823 Relay for tail lift
- J1113 Reverse warning beeper control unit
- J1145 Control unit for supplementary blower 2 for air conditioning
- T3jy 3-pin connector, colourless
- T3lz 3-pin connector, brown
- T4er 4-pin connector, black
- T5ax 5-pin connector, red
- T6bp 6-pin connector, black
- T6bq 6-pin connector, black
- T6co 6-pin connector, black
- T6cx 6-pin connector, black
- T8dp 8-pin connector, black
- T8dy 8-pin connector, black
- T8es 8-pin connector, black
- T9h 9-pin connector, grey
- T9k 9-pin connector, grey
- TKAM1 Coupling point for reversing camera
- TTIHL Coupling point in rear left door
- UX3 12 V socket
- U13 DC/AC converter with socket, 12 V - 230 V
- VX23 Rear left door lock unit

77 Earth point, lower part of left B-pillar

272 Earth connection 4, in front wiring harness

* For panel van and Kombi models

*2 For models with double cab


*3 For models with extra-high roof


ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink

Module for battery charge selector buttons, Control unit for supplementary blower for air conditioning, Expansion valve for air conditioner refrigerant

- EX32 Module for battery charge selector buttons
- J1144 Control unit for supplementary blower for air conditioning
- N697 Expansion valve for air conditioner refrigerant
- T2nu 2-pin connector, black
- T4es 4-pin connector, black
- T8a 8-pin connector, black
- T8b 8-pin connector, black
- T8c 8-pin connector, black
- TCR Coupling point on right C-pillar

- 78 Earth point, lower part of right B-pillar
- 277 Earth connection 3, in interior wiring harness
- 371 Earth connection 6, in main wiring harness
- * For right-hand drive models
- *2 For left-hand drive models
- *3 For models with right sliding door
- *4 For models with double cab

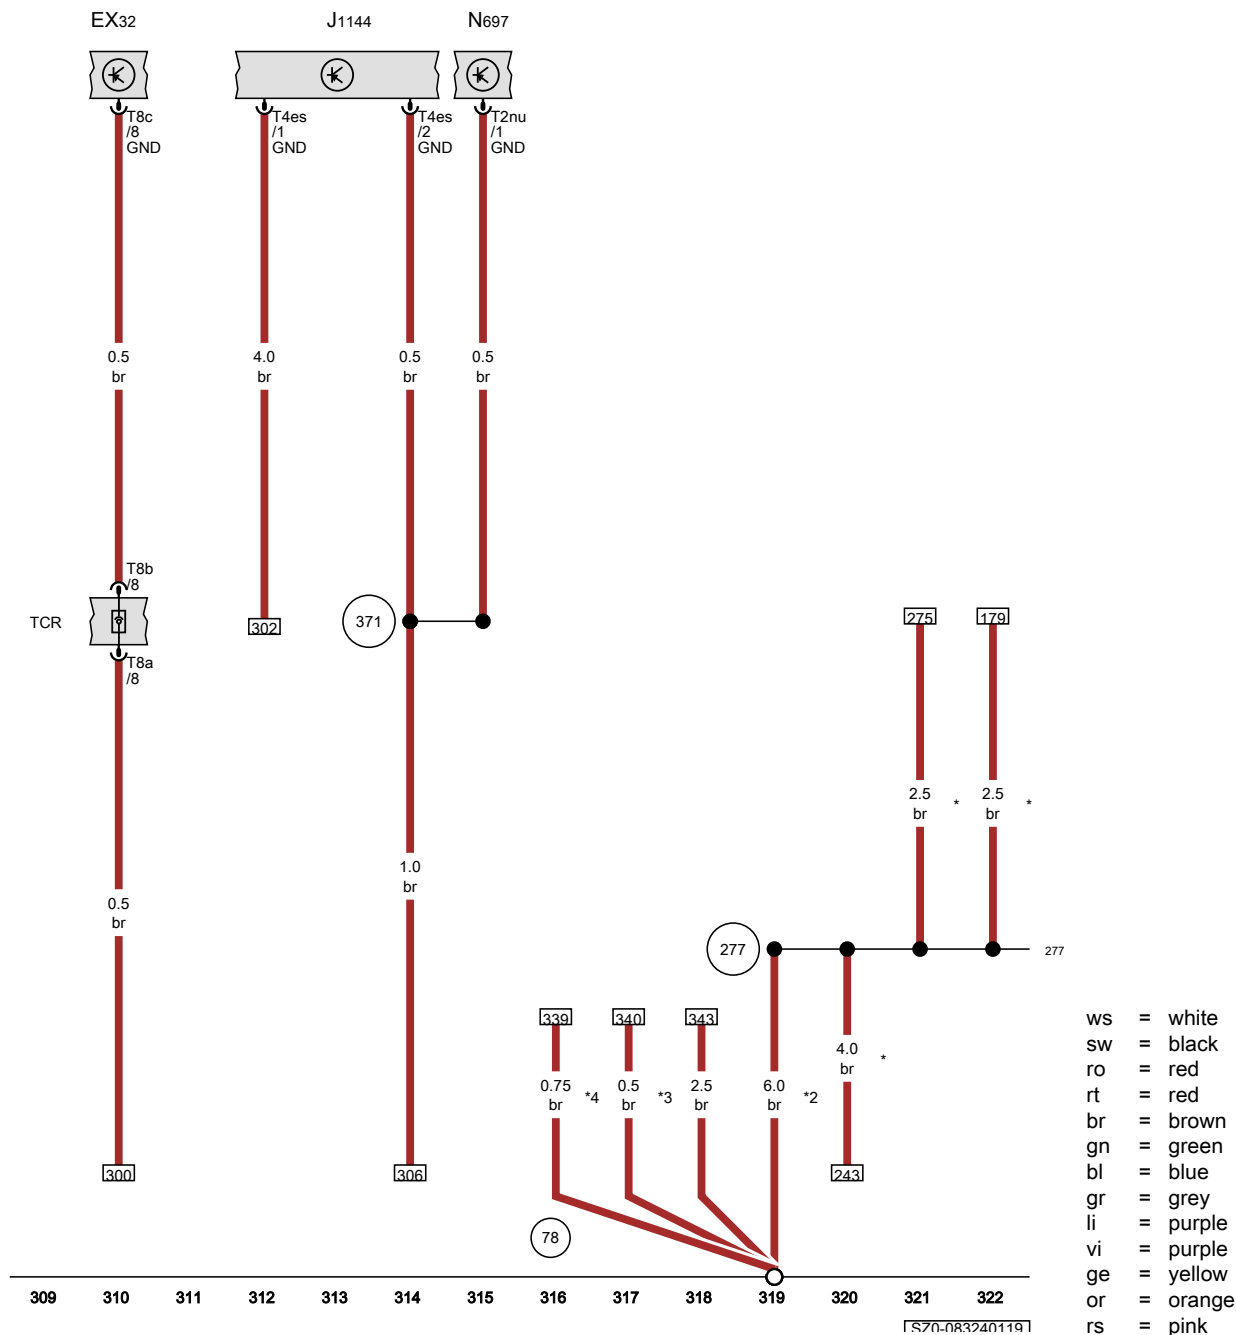

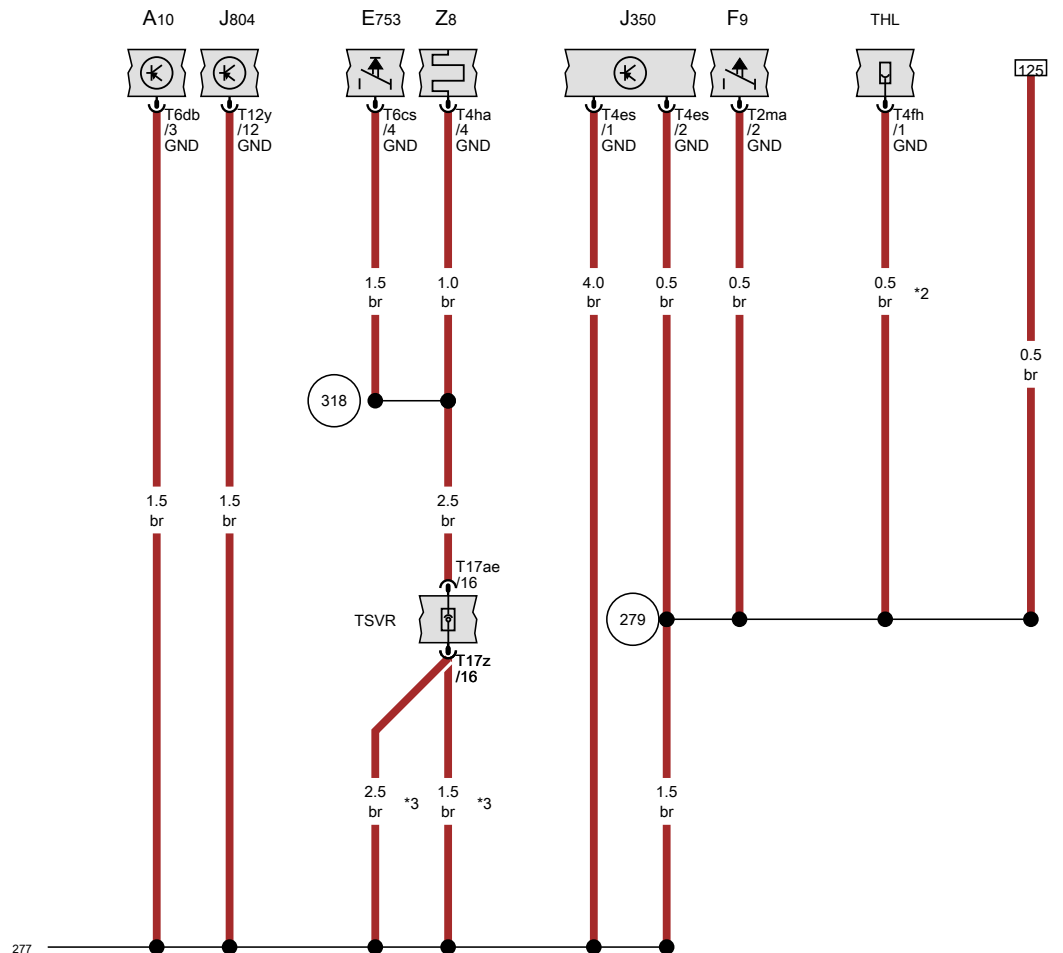


Battery charger, 230 or 110 Volt/12 Volt, Front right lumbar support adjustment switch, Handbrake warning switch, Control unit for front right massage seat, Heated seat cushion for front passenger seat

- A10 Battery charger, 230 or 110 Volt/12 Volt
- E753 Front right lumbar support adjustment switch
- F9 Handbrake warning switch
- J350 Warm air blower control unit
- J804 Control unit for front right massage seat
- T2ma 2-pin connector, black
- T4es 4-pin connector, black
- T4fh 4-pin connector, black
- T4ha 4-pin connector, black
- T6cs 6-pin connector, black
- T6db 6-pin connector, grey
- T12y 12-pin connector, black
- T17ae 17-pin connector, red
- T17z 17-pin connector, red
- THL Coupling point for roof, left
- TSVR Coupling point for front right seat
- Z8 Heated seat cushion for front passenger seat
- 277 Earth connection 3, in interior wiring harness
- 279 Earth connection 5, in interior wiring harness
- 318 Earth connection 4, in seat heating wiring harness
- * For models with double cab/dropside
- *2 For models with reversing camera system
- *3 According to equipment


ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink

323 324 325 326 327 328 329 330 331 332 333 334 335 336

1570-083250119

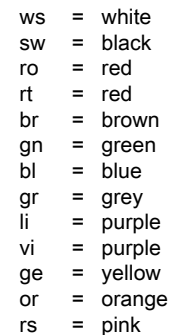

* For models with left and right sliding doors
*2 For models with right sliding door
*3 For models with double cab

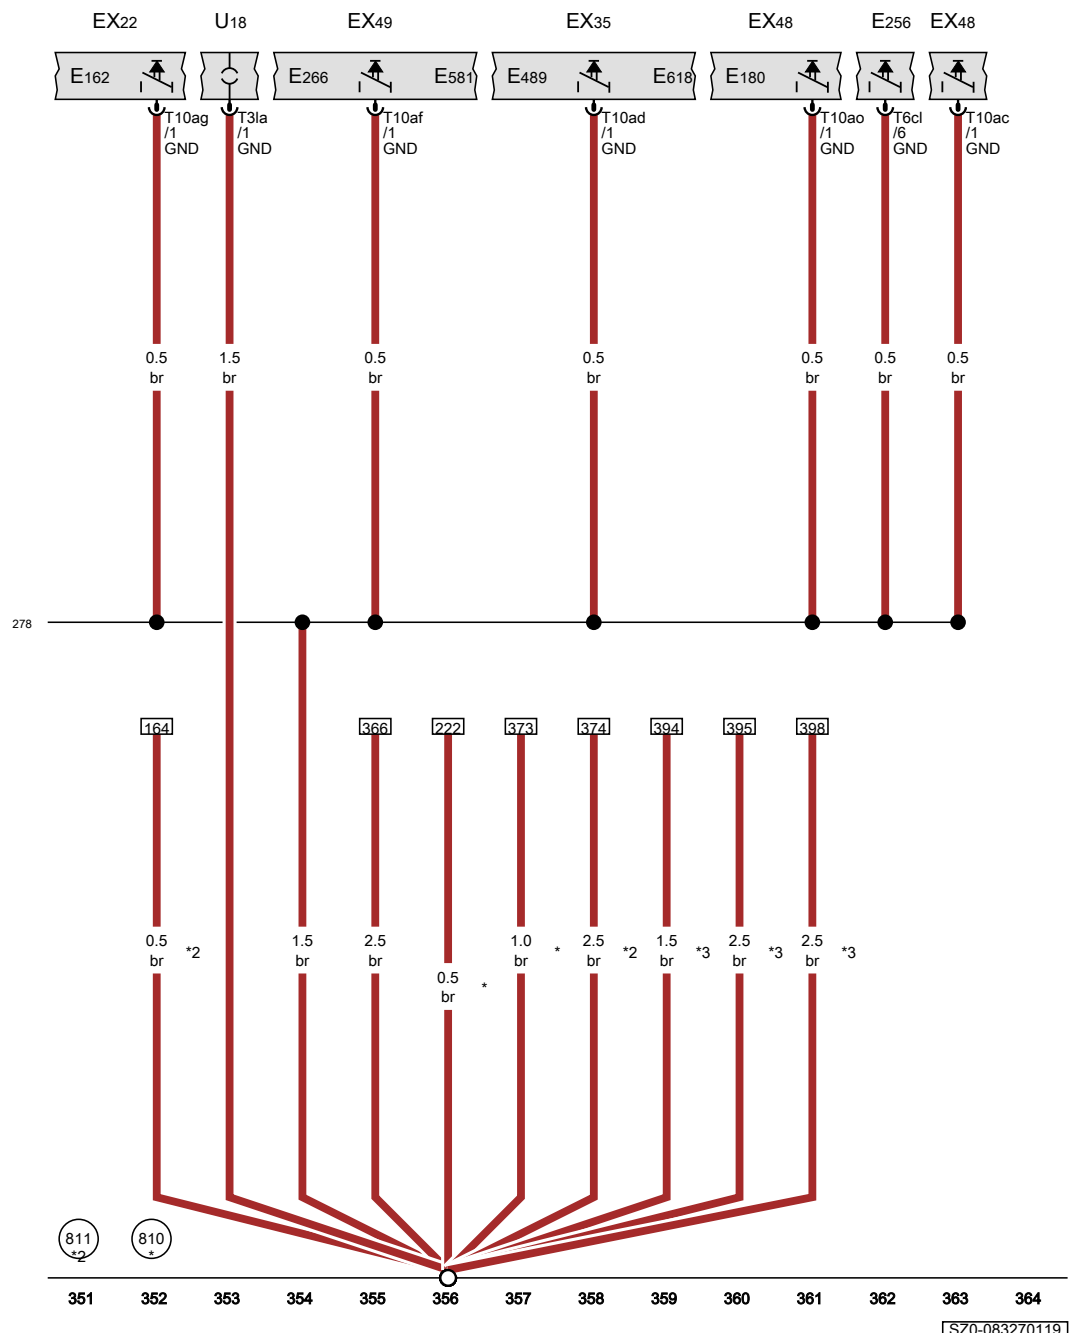

Centre switch module in dash panel, Centre switch module 2 in dash panel, Centre switch module 3 in dash panel, Centre switch module 4 in dash panel, Heated windscreen switch, Button for TCS and electronic stabilisation program

- EX22 Centre switch module in dash panel
- EX35 Centre switch module 2 in dash panel
- EX48 Centre switch module 3 in dash panel
- EX49 Centre switch module 4 in dash panel
- E162 Rotating light switch
- E180 Heated windscreen switch
- E256 Button for TCS and electronic stabilisation program
- E266 Parking aid button
- E489 Ignition bypass button
- E581 Park assist steering button
- E618 Hill descent control button
- T3la 3-pin connector, colourless
- T6cl 6-pin connector, blue
- T10ac 10-pin connector, black
- T10ad 10-pin connector, black
- T10af 10-pin connector, red
- T10ag 10-pin connector, red
- T10ao 10-pin connector, red
- U18 12 V socket 2
- 278 Earth connection 4, in interior wiring harness
- 810 Earth point on central tube for dash panel, centre left
- 811 Earth point on central tube for dash panel, centre right
- * For left-hand drive models
- *2 For right-hand drive models
- *3 According to equipment

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink


Heater and air conditioning controls, Selector lever sensors control unit, Glove compartment light

- EX21 Heater and air conditioning controls
J587 Selector lever sensors control unit
T2nl 2-pin connector, black
T10ab 10-pin connector, red
T20j 20-pin connector, black
W6 Glove compartment light

285 Earth connection 7, in interior wiring harness

294 Earth connection 9, in interior wiring harness

- * For left-hand drive models
*2 For right-hand drive models

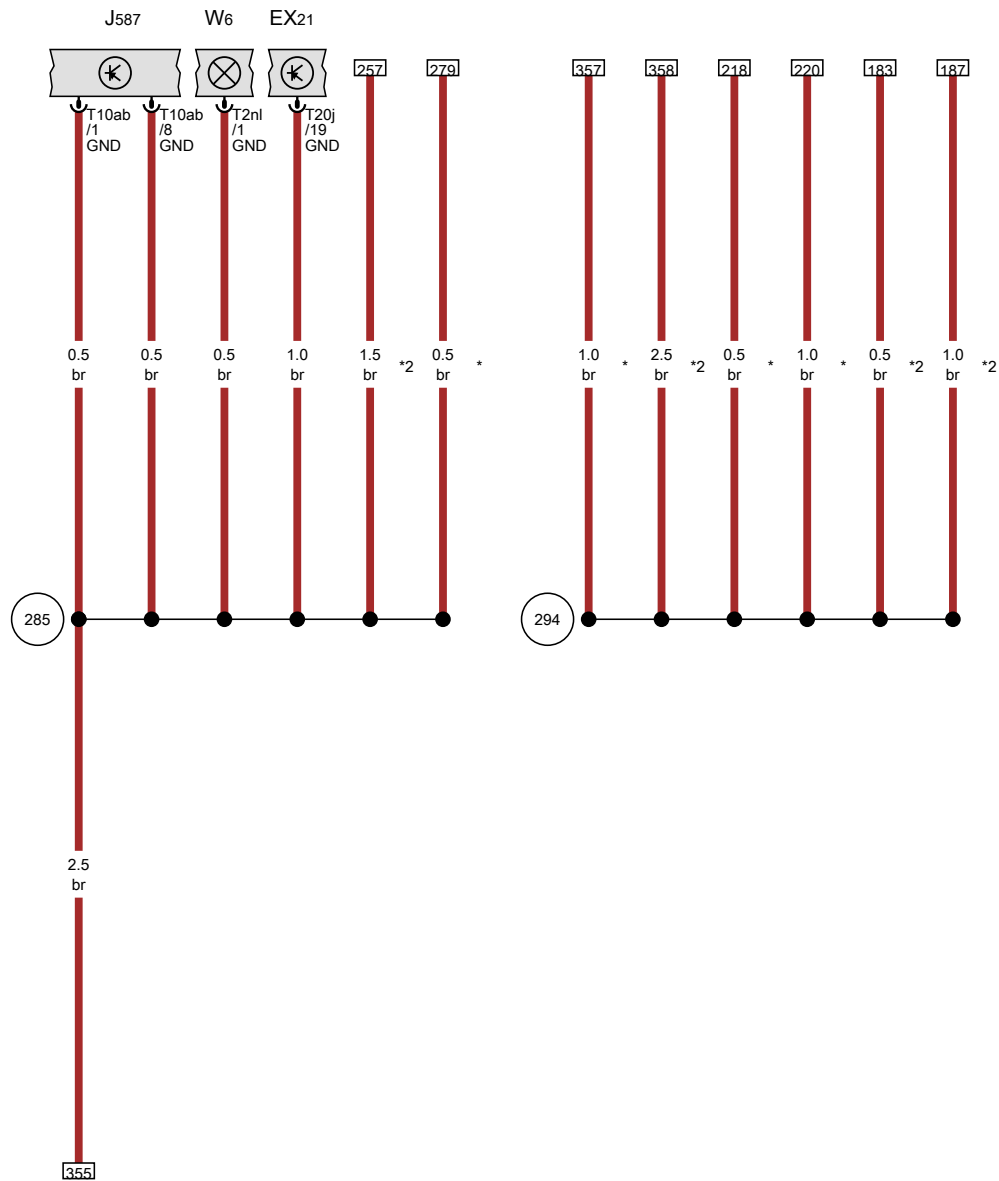

365 366 367 368 369 370 371 372 373 374 375 376 377 378

[S70-083280119]

Right tail light cluster, Rear right wing door window wiper motor, Rear wing door central locking motor, Rear left interior light, Rear right interior light, Heated rear window in right wing door


- MX4 Right tail light cluster
- T1acw 1-pin connector, black
- T1aqo 1-pin connector
- T2ar 2-pin connector, colourless
- T3ko 3-pin connector, black
- T3kp 3-pin connector, black
- T4gr 4-pin connector, black
- T8da 8-pin connector, black
- T8do 8-pin connector, black
- T17ab 17-pin connector, black
- T17u 17-pin connector, black
- TDR Coupling point on right D-pillar
- U Electric socket
- V93 Rear right wing door window wiper motor
- V96 Rear wing door central locking motor
- W47 Rear left interior light
- W48 Rear right interior light
- Z27 Heated rear window in right wing door

87 Earth connection 2, in rear wiring harness


260 Earth connection, in tail light cluster wiring harness

- * For panel van and Kombi models
- *2 For models with special police equipment
- *3 For models with double cab/dropside

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

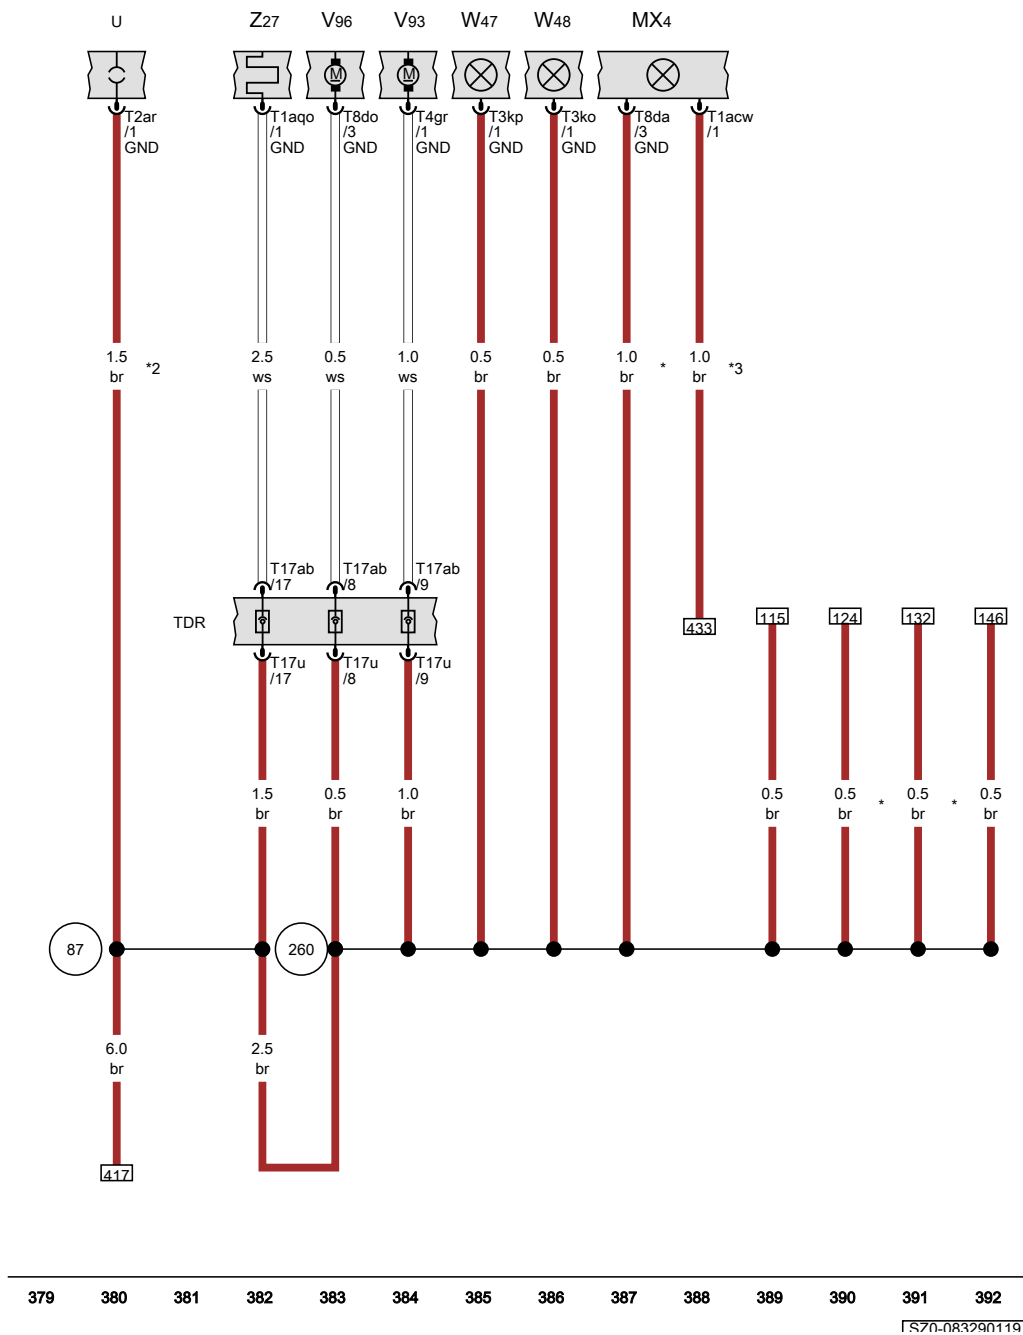

379 380 381 382 383 384 385 386 387 388 389 390 391 392
 [S70-083290119]

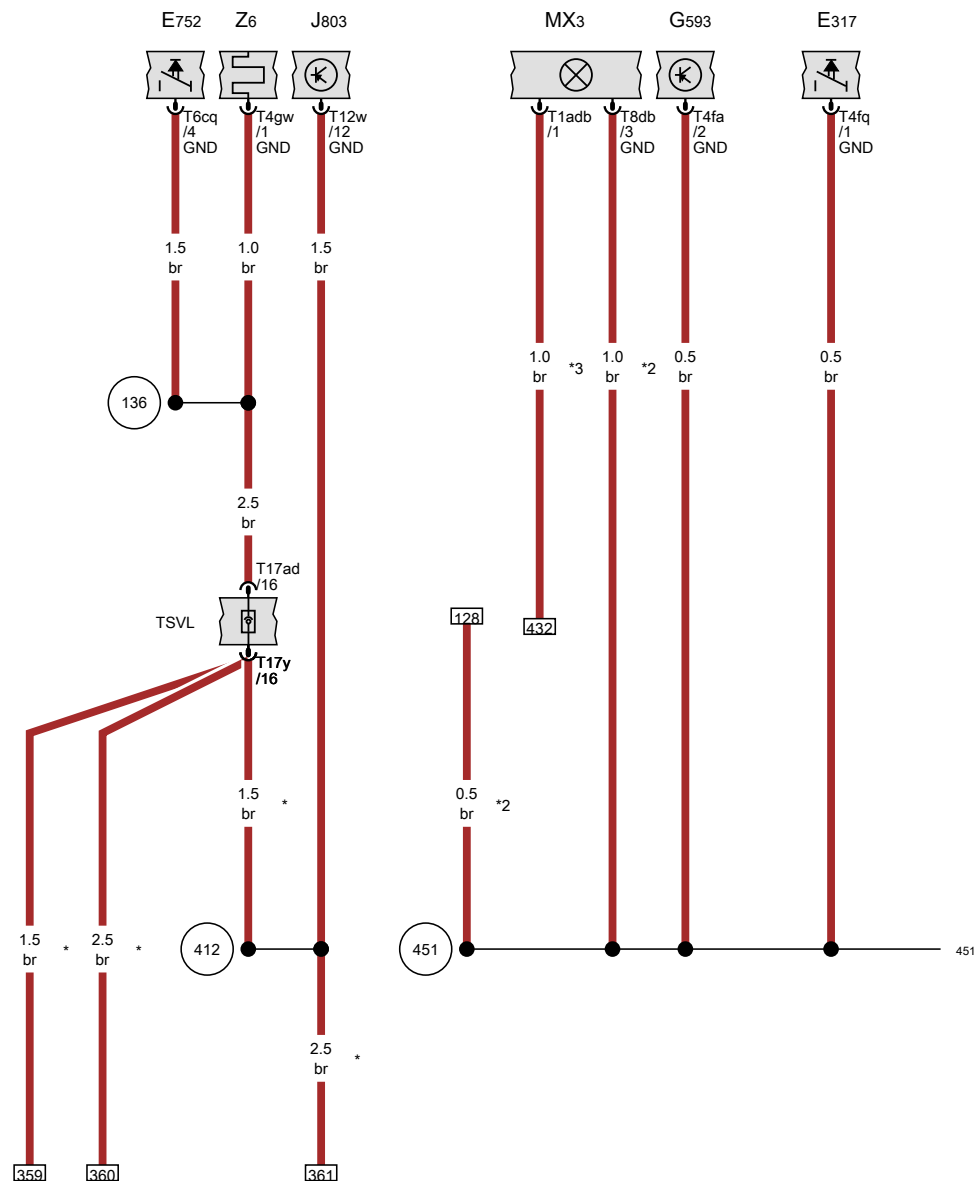

Interior light switch, Front left lumbar support adjustment switch, Interior monitoring sensor 3, Control unit for front left massage seat, Left tail light cluster, Heated seat cushion for driver seat

- E317 Interior light switch
- E752 Front left lumbar support adjustment switch
- G593 Interior monitoring sensor 3
- J803 Control unit for front left massage seat
- MX3 Left tail light cluster
- T1adb 1-pin connector, black
- T4fa 4-pin connector, black
- T4fq 4-pin connector, black
- T4gw 4-pin connector, black
- T6cq 6-pin connector, black
- T8db 8-pin connector, black
- T12w 12-pin connector, black
- T17ad 17-pin connector, red
- T17y 17-pin connector, red
- TSVL Coupling point for front left seat
- Z6 Heated seat cushion for driver seat


- 136 Earth connection 2, in seat heating wiring harness
- 412 Earth connection 3, in seat adjustment wiring harness
- 451 Earth connection 1 in rear right side panel

- * According to equipment
- *2 For panel van and Kombi models
- *3 For models with double cab/dropside

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

393 394 395 396 397 398 399 400 401 402 403 404 405 406

[S70-083300119]

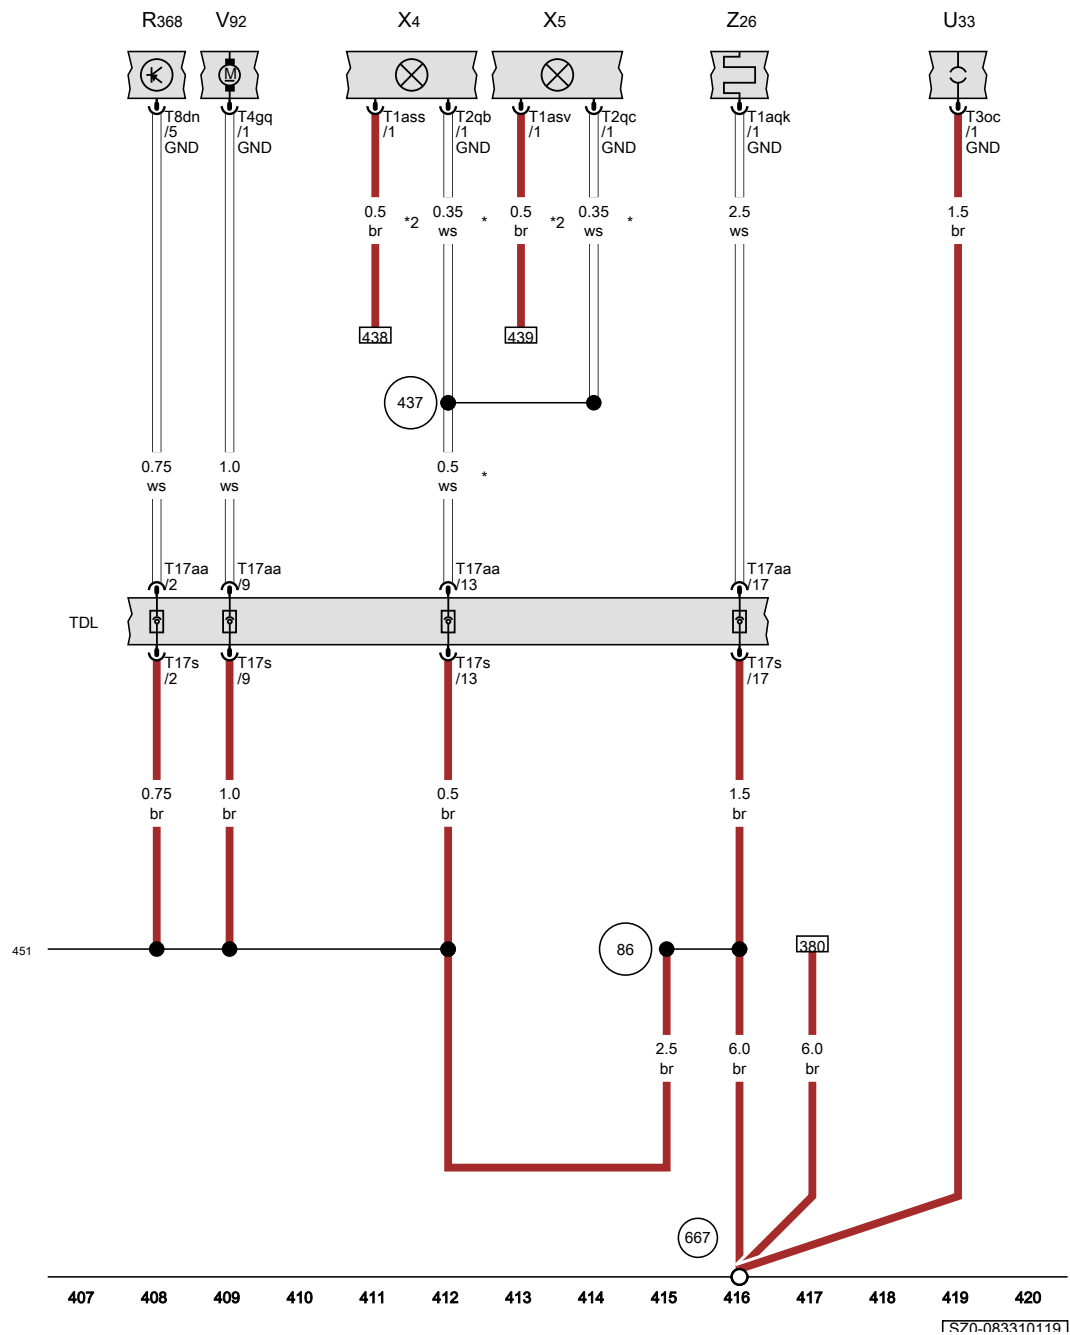

Camera for trailer manoeuvring system, 12 V socket 6, Rear left wing door window wiper motor, Left number plate light, Right number plate light, Heated rear window in left wing door


- R368 Camera for trailer manoeuvring system
- T1aqk 1-pin connector
- T1ass 1-pin connector, black
- T1asv 1-pin connector, black
- T2qb 2-pin connector, black
- T2qc 2-pin connector, black
- T3oc 3-pin connector, colourless
- T4gq 4-pin connector, black
- T8dn 8-pin connector, black
- T17aa 17-pin connector, black
- T17s 17-pin connector, black
- TDL Coupling point on left D-pillar
- U33 12 V socket 6
- V92 Rear left wing door window wiper motor
- X4 Left number plate light
- X5 Right number plate light
- Z26 Heated rear window in left wing door


- 86 Earth connection 1, in rear wiring harness
- 437 Earth connection, in number plate wiring harness
- 451 Earth connection 1 in rear right side panel
- 667 Earth point, on rear left of roof
- * For panel van and Kombi models
- *2 For models with double cab/dropside

Blind Spot Monitor control unit, Blind Spot Monitor control unit 2, Trailer socket

J1086 Blind Spot Monitor control unit
J1087 Blind Spot Monitor control unit 2
T8ca 8-pin connector, black
T8cb 8-pin connector, black
T13b 13-pin connector, black
T14ar 14-pin connector, black
T14aw 14-pin connector, black
TAHLS Coupling point for trailer harness
U10 Trailer socket

- 374 Earth connection 9, in main wiring harness
- 375 Earth connection 10, in main wiring harness
- 398 Earth connection 33, in main wiring harness
- 459 Earth connection 15, in interior wiring harness
- 711 Earth point 3 on rear left longitudinal member
- * For models with double cab/dropside
- *2 For models with double cab

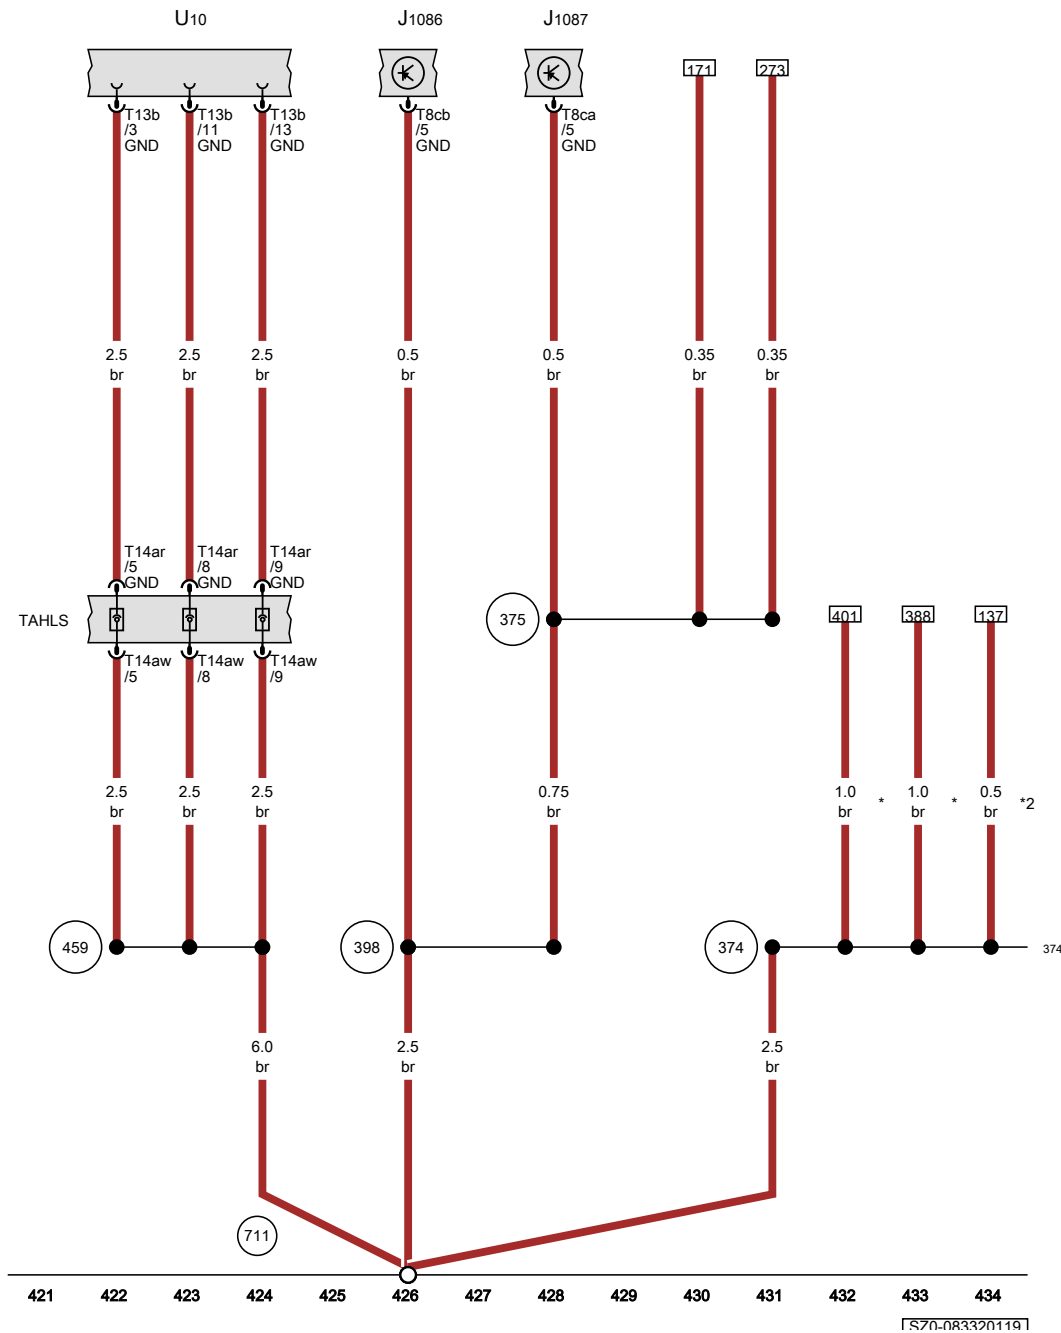

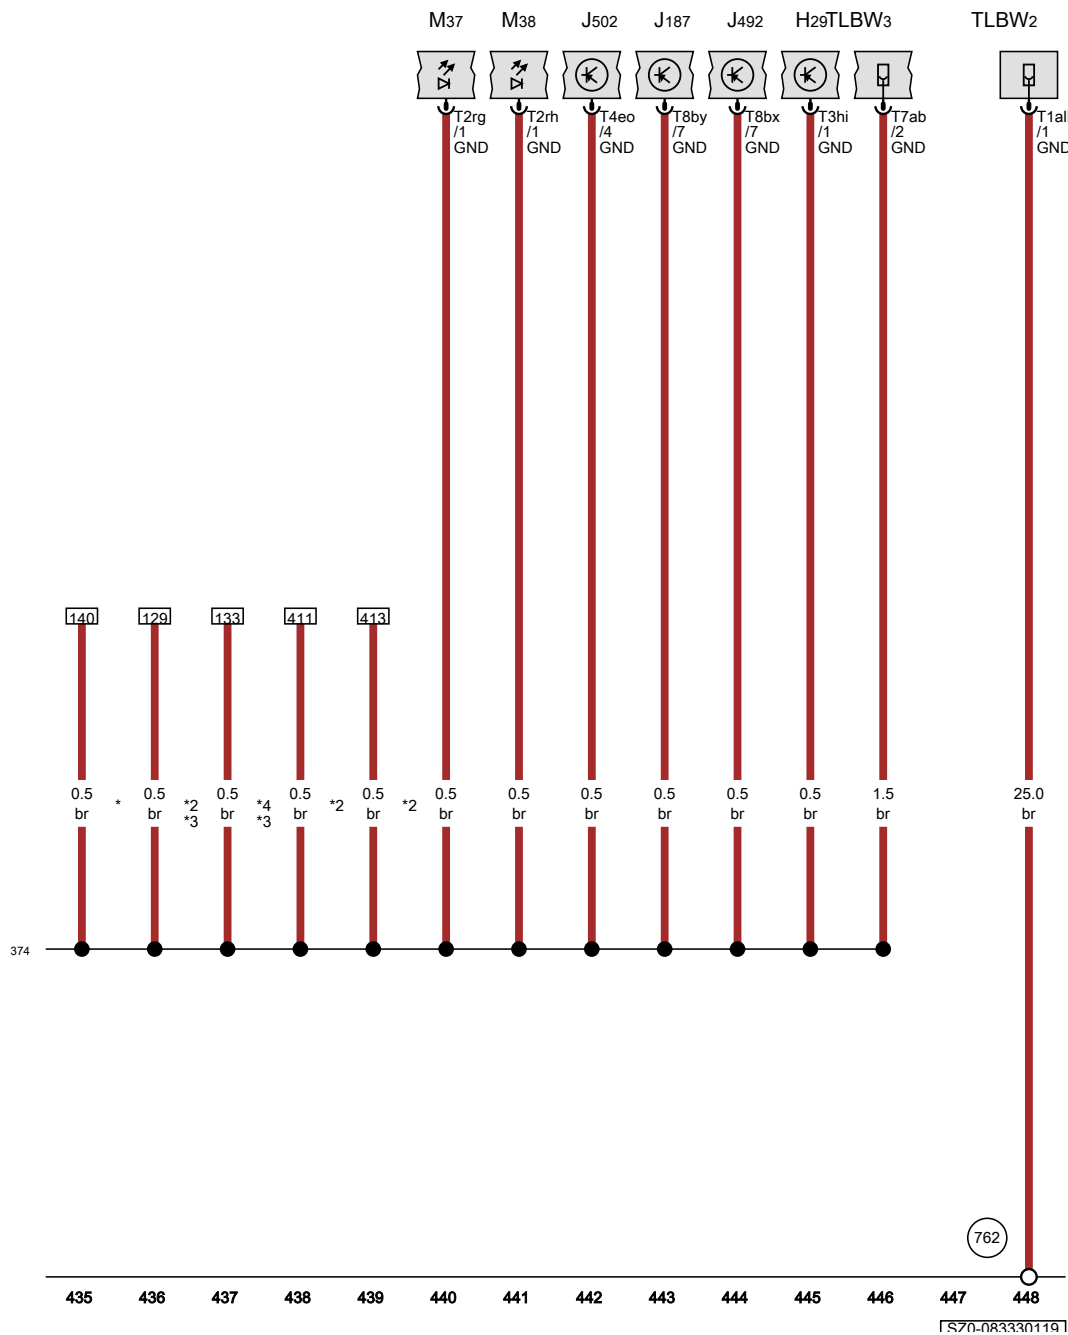


Reverse warning beeper, Differential lock control unit, All-wheel drive control unit, Tyre Pressure Monitoring System control unit, Rear left side marker bulb, Rear right side marker bulb, Coupling point 2 for tail lift, Coupling point 3 for tail lift

- H29 Reverse warning beeper
- J187 Differential lock control unit
- J492 All-wheel drive control unit
- J502 Tyre Pressure Monitoring System control unit
- M37 Rear left side marker bulb
- M38 Rear right side marker bulb
- T1alk 1-pin connector
- T2rg 2-pin connector, black
- T2rh 2-pin connector, black
- T3hi 3-pin connector, black
- T4eo 4-pin connector, grey
- T7ab 7-pin connector, black
- T8bx 8-pin connector, black
- T8by 8-pin connector, black
- TLBW2 Coupling point 2 for tail lift
- TLBW3 Coupling point 3 for tail lift

374 Earth connection 9, in main wiring harness


762 Earth point 4 on rear left longitudinal member

- * For models with double cab
- *2 For models with double cab/dropside
- *3 According to equipment
- *4 Not for models with double cab/ dropside

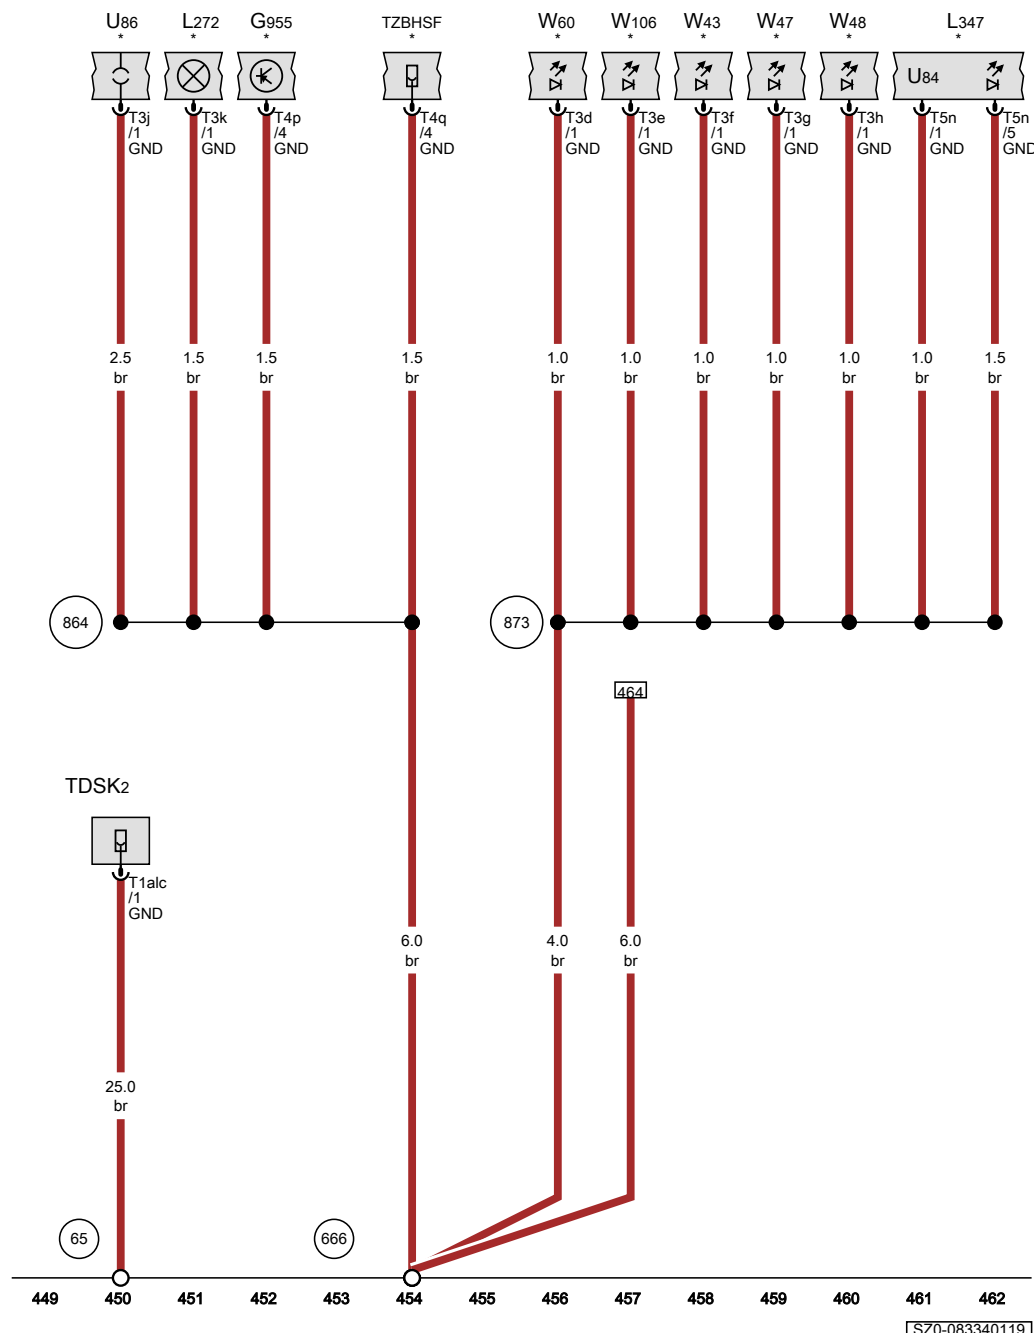

Rear stop command light, Rear right rotating light bulb, LED module for additional reading light, special vehicles, Coupling point 2 for 3-way tipper, 12 V socket 4 for special vehicles, Rear interior light, Rear left interior light, Rear right interior light, Folding table light, Folding table light 2

- G955 Rear stop command light
- L272 Rear right rotating light bulb
- L347 LED module for additional reading light, special vehicles
- T1alc 1-pin connector
- T3d 3-pin connector, black
- T3e 3-pin connector, black
- T3f 3-pin connector, black
- T3g 3-pin connector, black
- T3h 3-pin connector, black
- T3j 3-pin connector, colourless
- T3k 3-pin connector, black
- T4p 4-pin connector, black
- T4q 4-pin connector, black
- T5n 5-pin connector, black
- TDSK2 Coupling point 2 for 3-way tipper
- TZBHSF Coupling point for rear additional lighting on special vehicle
- U84 12 V socket 2 for special vehicles
- U86 12 V socket 4 for special vehicles
- W43 Rear interior light
- W47 Rear left interior light
- W48 Rear right interior light
- W60 Folding table light
- W106 Folding table light 2
- 65 Earth point, on rear of left longitudinal member
- 666 Earth point, on rear right of roof
- 864 Earth connection 1 in special vehicle wiring harness
- 873 Earth connection 10 in special vehicle wiring harness
- * For models with special police equipment

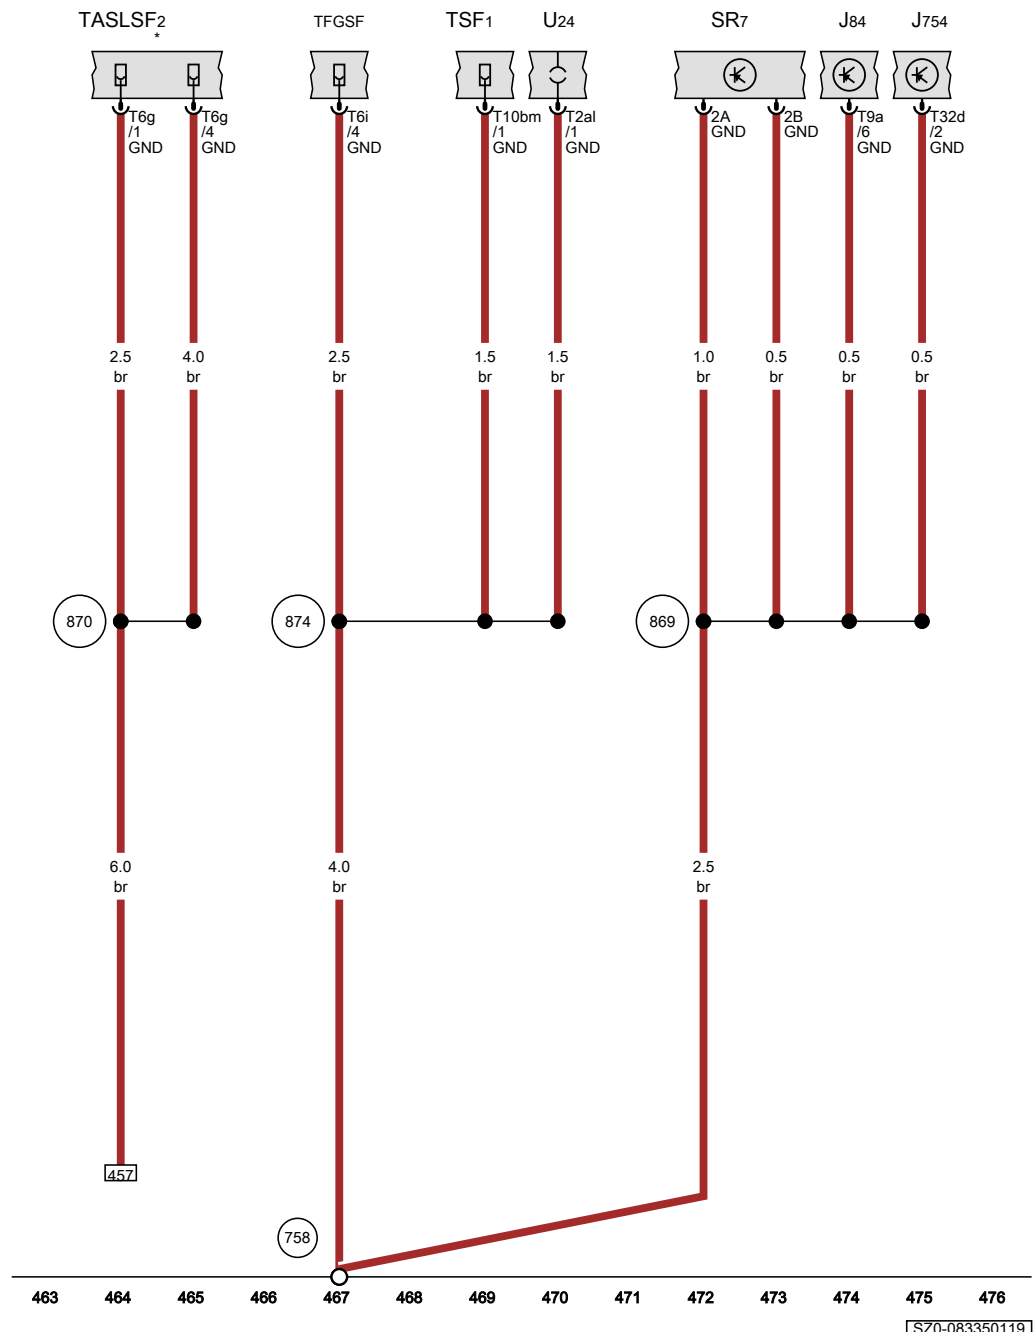


Two-way radio voltage relay, Accident data memory, Relay and fuse carrier 7, Coupling point for two-way radio in special vehicle, Coupling point for special vehicles, Coupling point 2 on left A-pillar for special vehicles, Charging station for hand-held 2-way radio

- J84 Two-way radio voltage relay
- J754 Accident data memory
- SR7 Relay and fuse carrier 7
- T2al 2-pin connector, black
- T6g 6-pin connector, black
- T6i 6-pin connector, black
- T9a 9-pin connector, black
- T10bm 10-pin connector, black
- T32d 32-pin connector, black
- TFGSF Coupling point for two-way radio in special vehicle
- TSF1 Coupling point for special vehicles
- TASLSF Coupling point 2 on left A-pillar for special vehicles
- 2
- U24 Charging station for hand-held 2-way radio
- 758 Earth point 3, on centre tunnel
- 869 Earth connection 6 in special vehicle wiring harness
- 870 Earth connection 7 in special vehicle wiring harness
- 874 Earth connection 11 in special vehicle wiring harness
- * For models with special police equipment

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

Fuse assignment


From November 2017

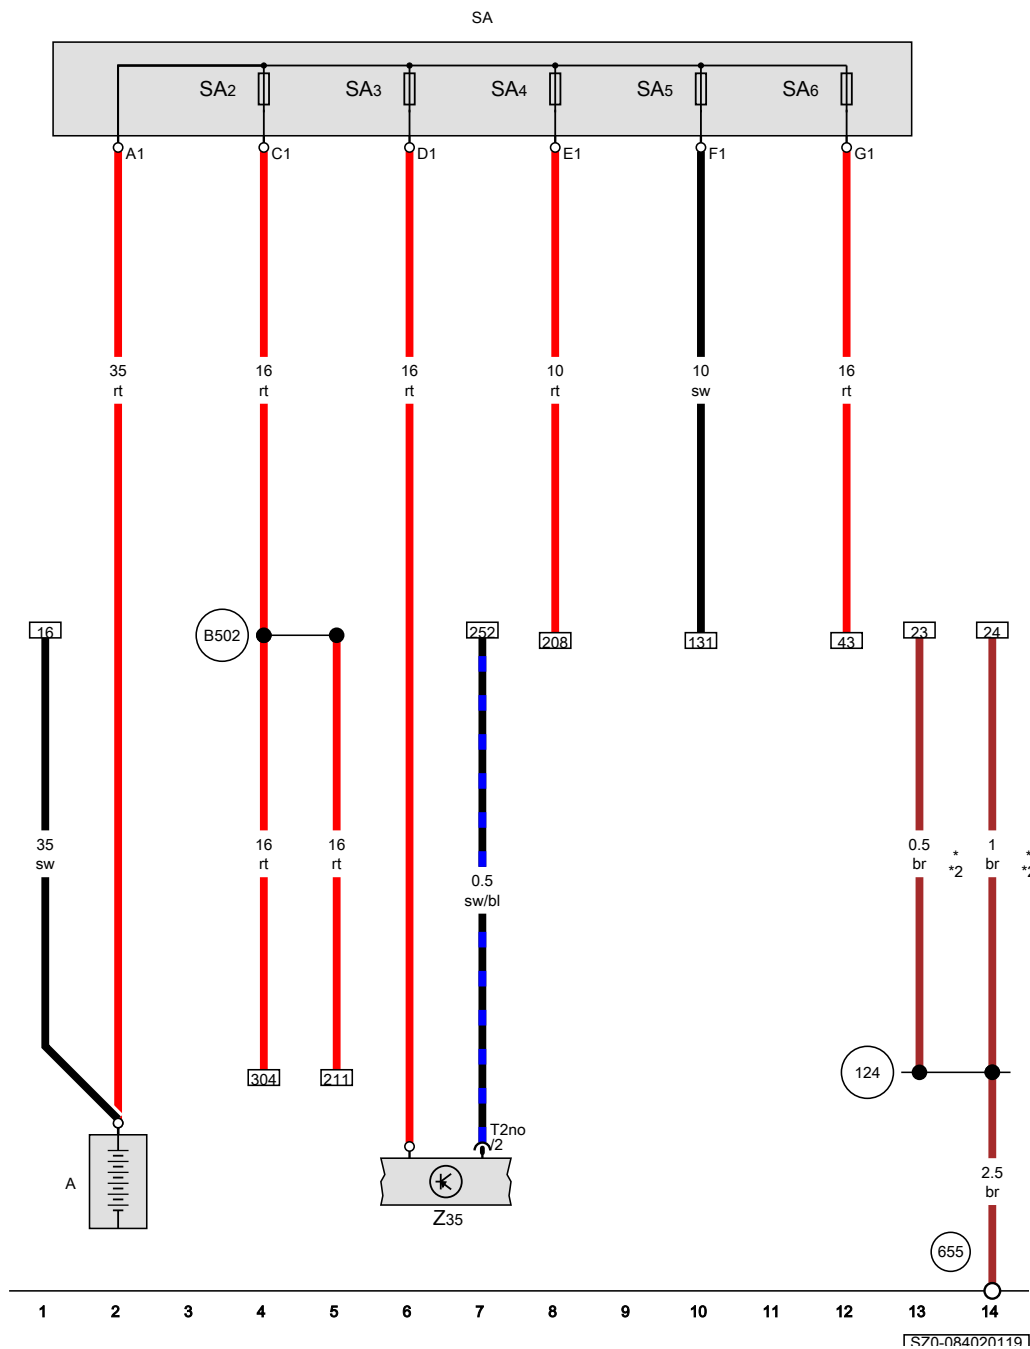

Battery, Fuse holder A


- A Battery
- SA Fuse holder A
- SA2 Fuse 2 on fuse holder A
- SA3 Fuse 3 on fuse holder A
- SA4 Fuse 4 on fuse holder A
- SA5 Fuse 5 on fuse holder A
- SA6 Fuse 6 on fuse holder A
- T2no 2-pin connector, black
- Z35 Auxiliary air heater element
- 124 Earth connection, in right side engine compartment wiring harness
- 655 Earth point, on left headlight
- B502 Positive connection (83a), in interior wiring harness
- * For models with no special vehicle control unit
- *2 According to equipment

Second battery charging circuit relay, Jump start connection

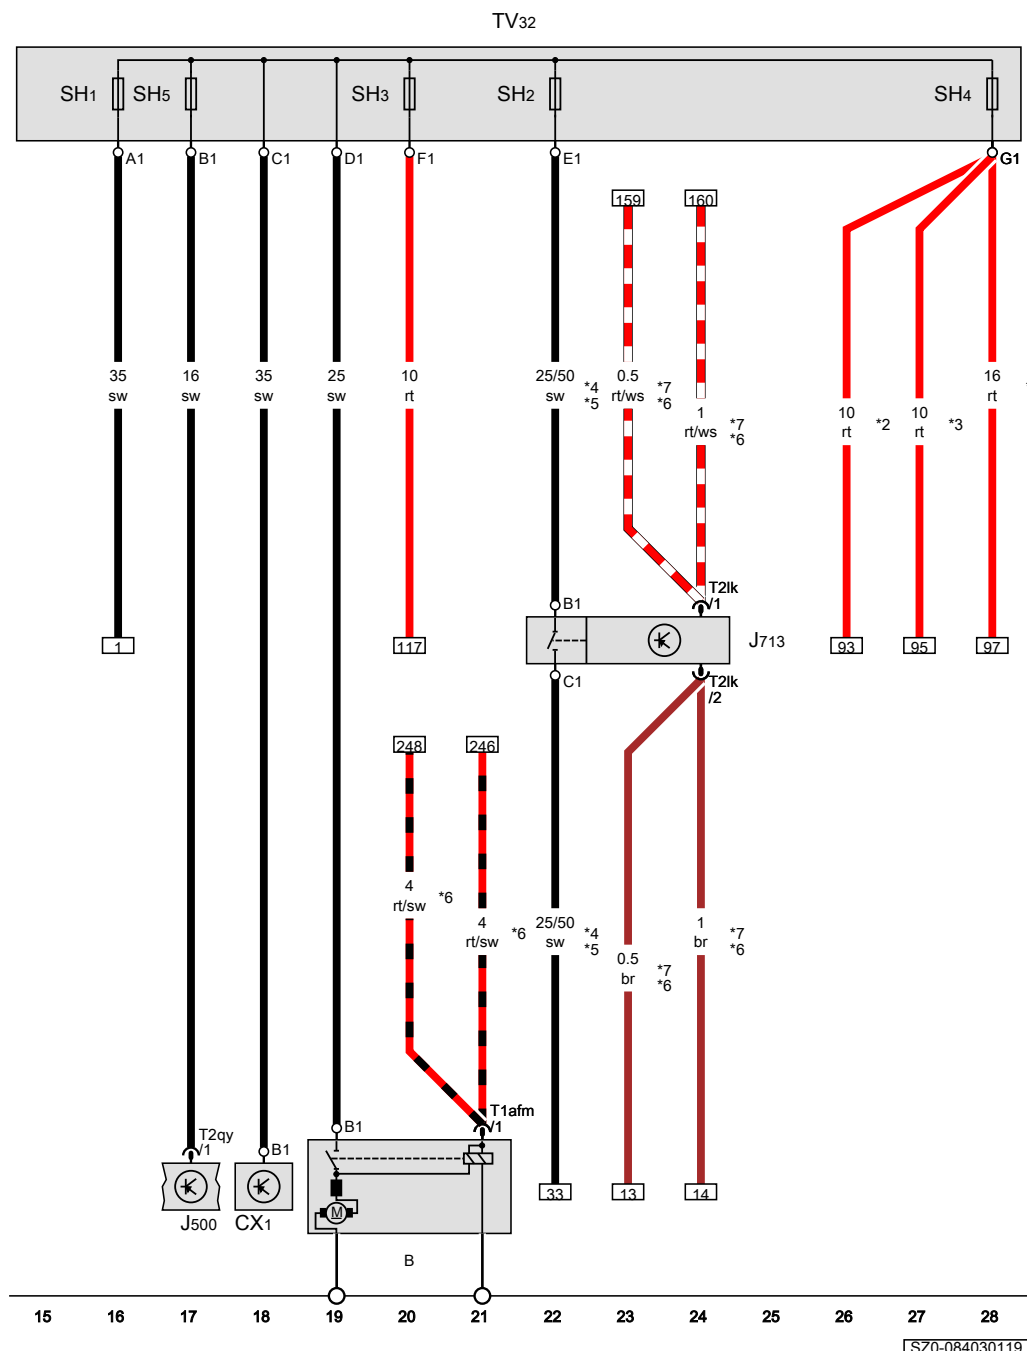

- B Starter
- CX1 Alternator with voltage regulator
- J500 Power steering control unit
- J713 Second battery charging circuit relay
- SH1 Fuse 1 in fuse holder H
- SH2 Fuse 2 in fuse holder H
- SH3 Fuse 3 in fuse holder H
- SH4 Fuse 4 in fuse holder H
- SH5 Fuse 5 in fuse holder H
- T1afm 1-pin connector, black
- T2lk 2-pin connector, black
- T2qy 2-pin connector, black
- TV32 Jump start connection
- * For models with towing bracket
- *2 see applicable current flow diagram for radiator fan
- *3 For models with no towing bracket
- *4 For models with second battery
- *5 Cross section depends on equipment
- *6 According to equipment
- *7 For models with no special vehicle control unit

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

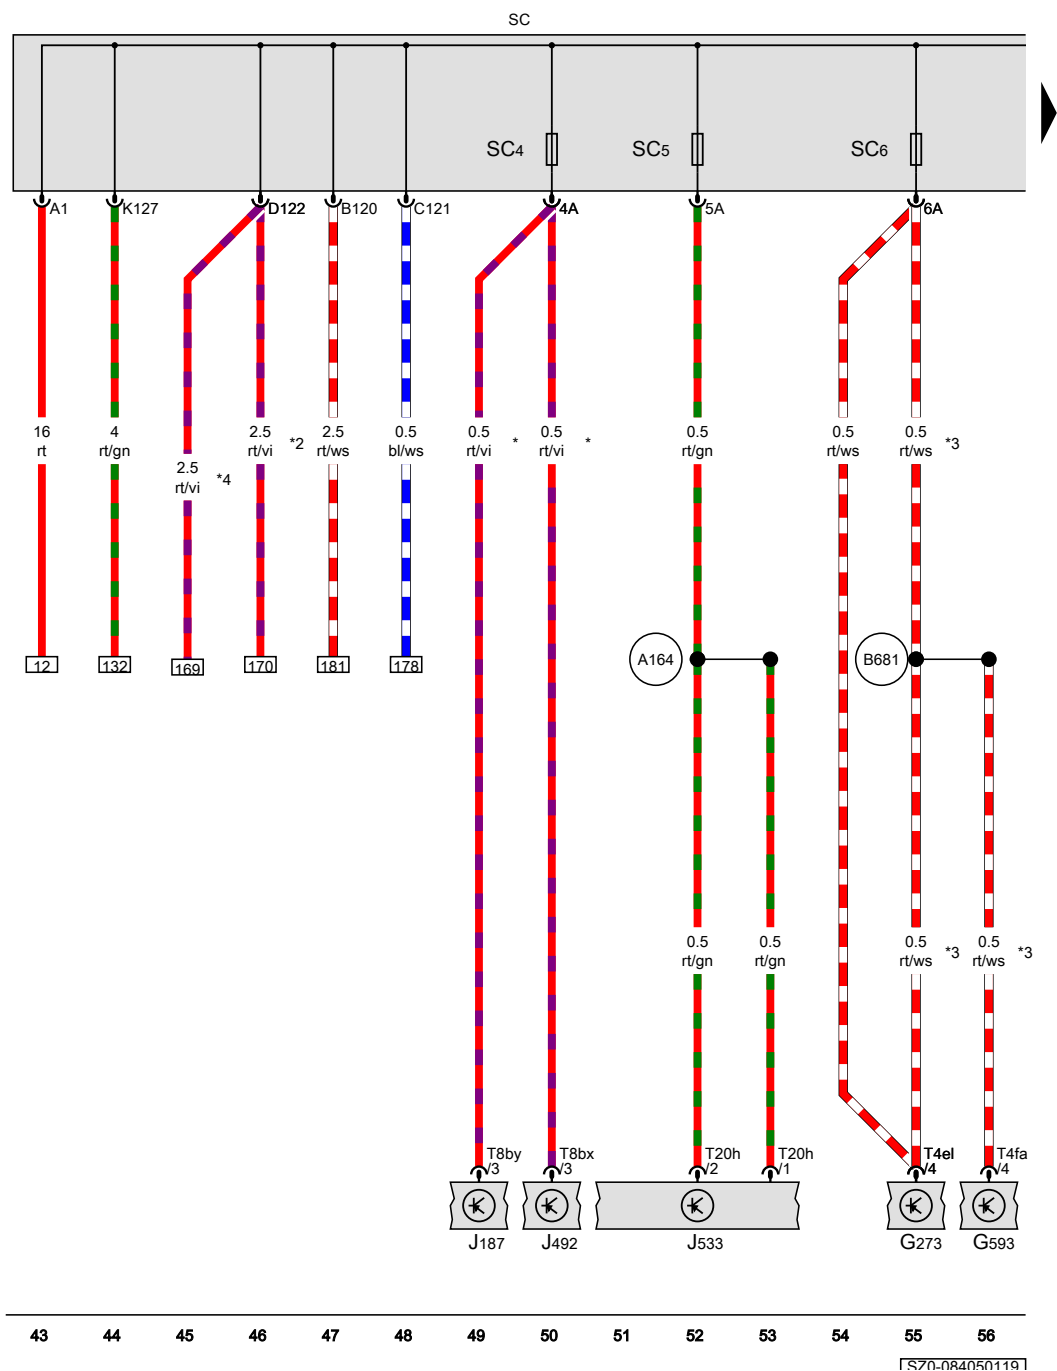

Fuse holder C

- G273 Interior monitoring sensor
- G593 Interior monitoring sensor 3
- J187 Differential lock control unit
- J492 All-wheel drive control unit
- J533 Data bus diagnostic interface
- SC Fuse holder C
- SC4 Fuse 4 on fuse holder C
- SC5 Fuse 5 on fuse holder C
- SC6 Fuse 6 on fuse holder C
- T4el 4-pin connector, black
- T4fa 4-pin connector, black
- T8bx 8-pin connector, black
- T8by 8-pin connector, black
- T20h 20-pin connector, red

A164 Positive connection 2 (30a) in dash panel wiring harness


B681 Positive connection 7 (30), in interior wiring harness

* According to equipment

*2 Up to July 2018

*3 For models with anti-theft alarm system and front and rear interior monitor

*4 From July 2018

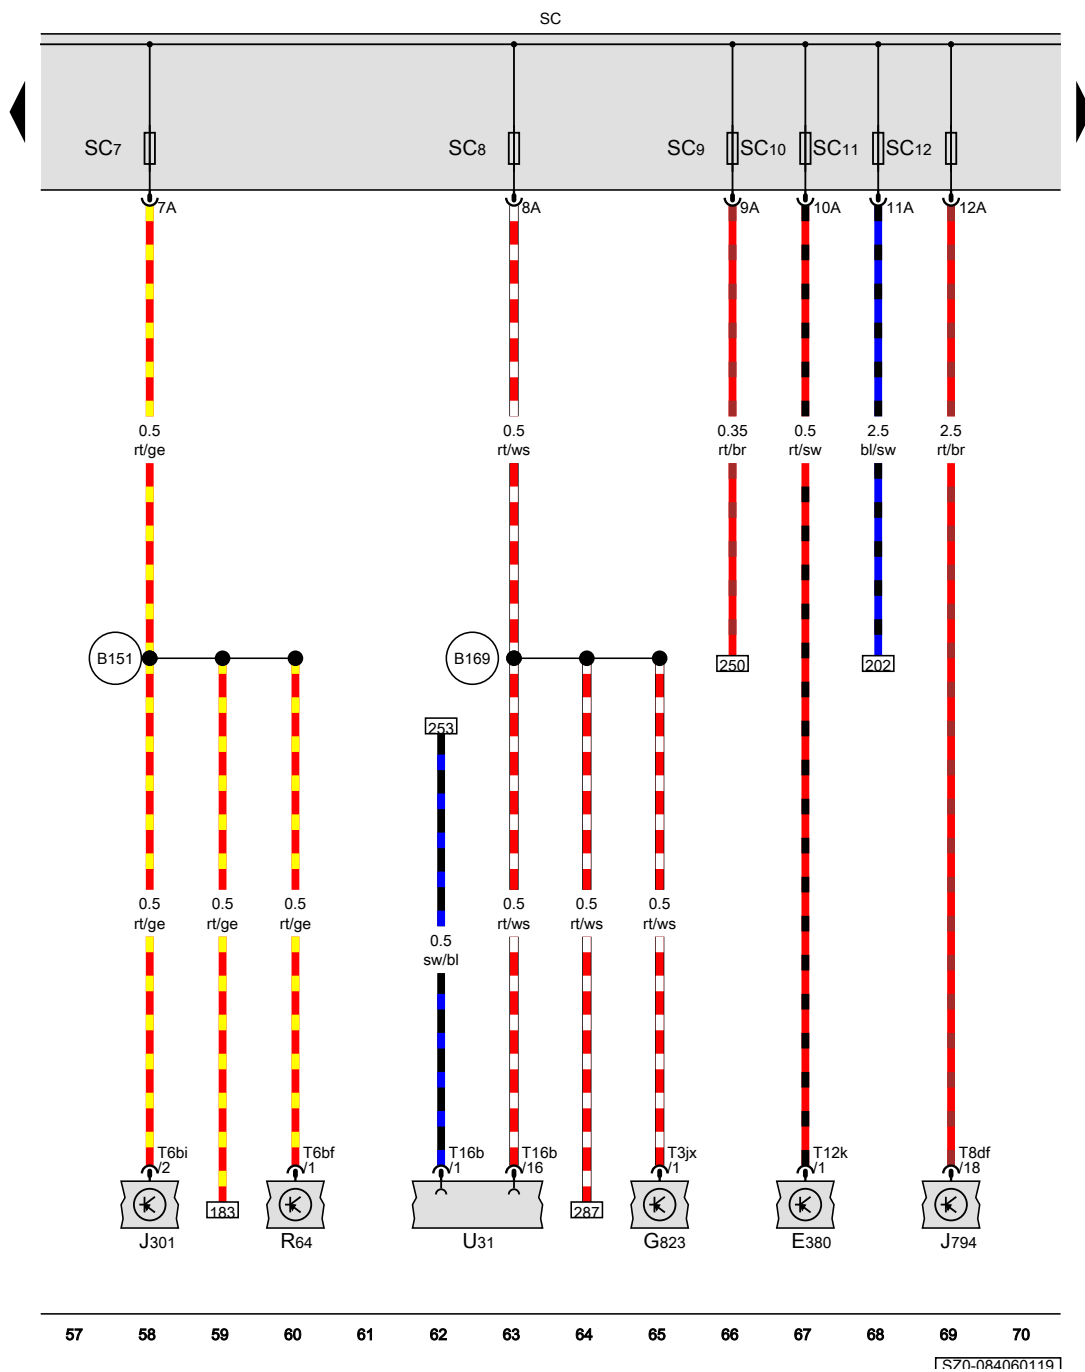


Fuse holder C

- E380 Multimedia system operating unit
- G823 Air humidity, rain and light sensor
- J301 Air conditioning system control unit
- J794 Control unit 1 for information electronics
- R64 Remote control receiver for auxiliary heater
- SC Fuse holder C
- SC7 Fuse 7 on fuse holder C
- SC8 Fuse 8 on fuse holder C
- SC9 Fuse 9 on fuse holder C
- SC10 Fuse 10 on fuse holder C
- SC11 Fuse 11 on fuse holder C
- SC12 Fuse 12 on fuse holder C
- T3jx 3-pin connector, black
- T6bf 6-pin connector, blue
- T6bi 6-pin connector, black
- T8df 8-pin connector, black
- T12k 12-pin connector, black
- T16b 16-pin connector
- U31 Diagnostic connection

B151 Positive connection 3 (30a), in interior wiring harness

B169 Positive connection 1 (30), in interior wiring harness

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

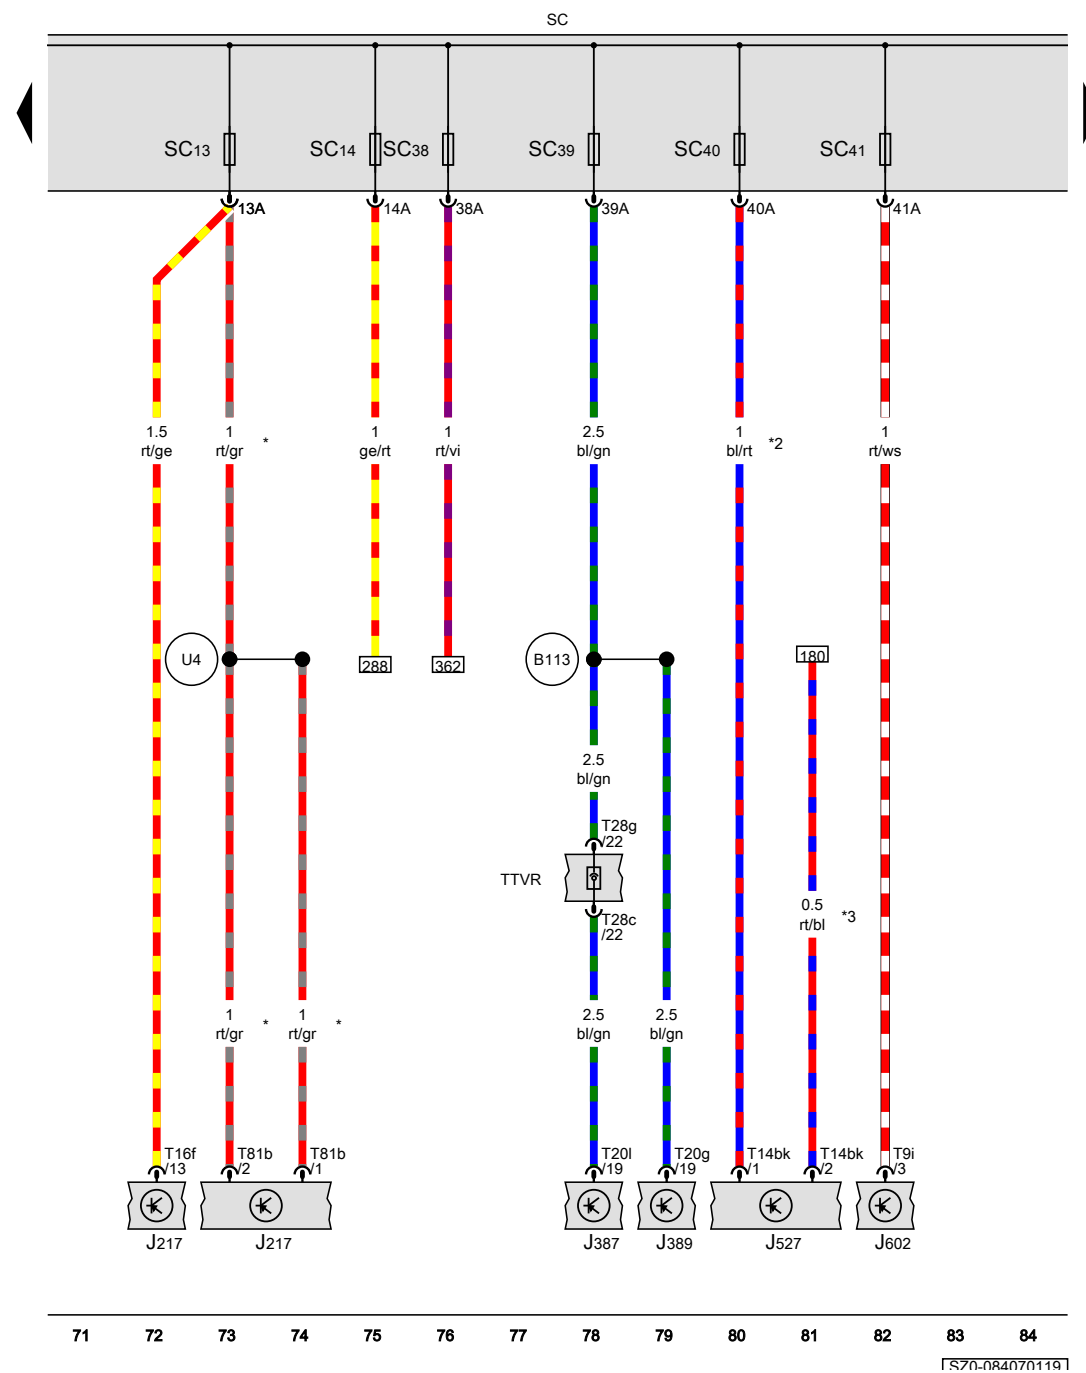

Fuse holder C

- J217 Automatic gearbox control unit
- J387 Front passenger door control unit
- J389 Rear right door control unit
- J527 Steering column electronics control unit
- J602 Interior light relay
- SC Fuse holder C
- SC13 Fuse 13 on fuse holder C
- SC14 Fuse 14 on fuse holder C
- SC38 Fuse 38 on fuse holder C
- SC39 Fuse 39 on fuse holder C
- SC40 Fuse 40 on fuse holder C
- SC41 Fuse 41 on fuse holder C
- T9i 9-pin connector, grey
- T14bk 14-pin connector, black
- T16f 16-pin connector, black
- T20g 20-pin connector, black
- T20l 20-pin connector, black
- T28c 28-pin connector, black
- T28g 28-pin connector, black
- T81b 81-pin connector, black
- TTVR Coupling point for front right door

B113 Positive connection (30a), in left interior wiring harness


U4 Connection (30), in automatic gearbox wiring harness

* For models with front-wheel drive

*2 For models with multifunction steering wheel

*3 For models with heated steering wheel

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

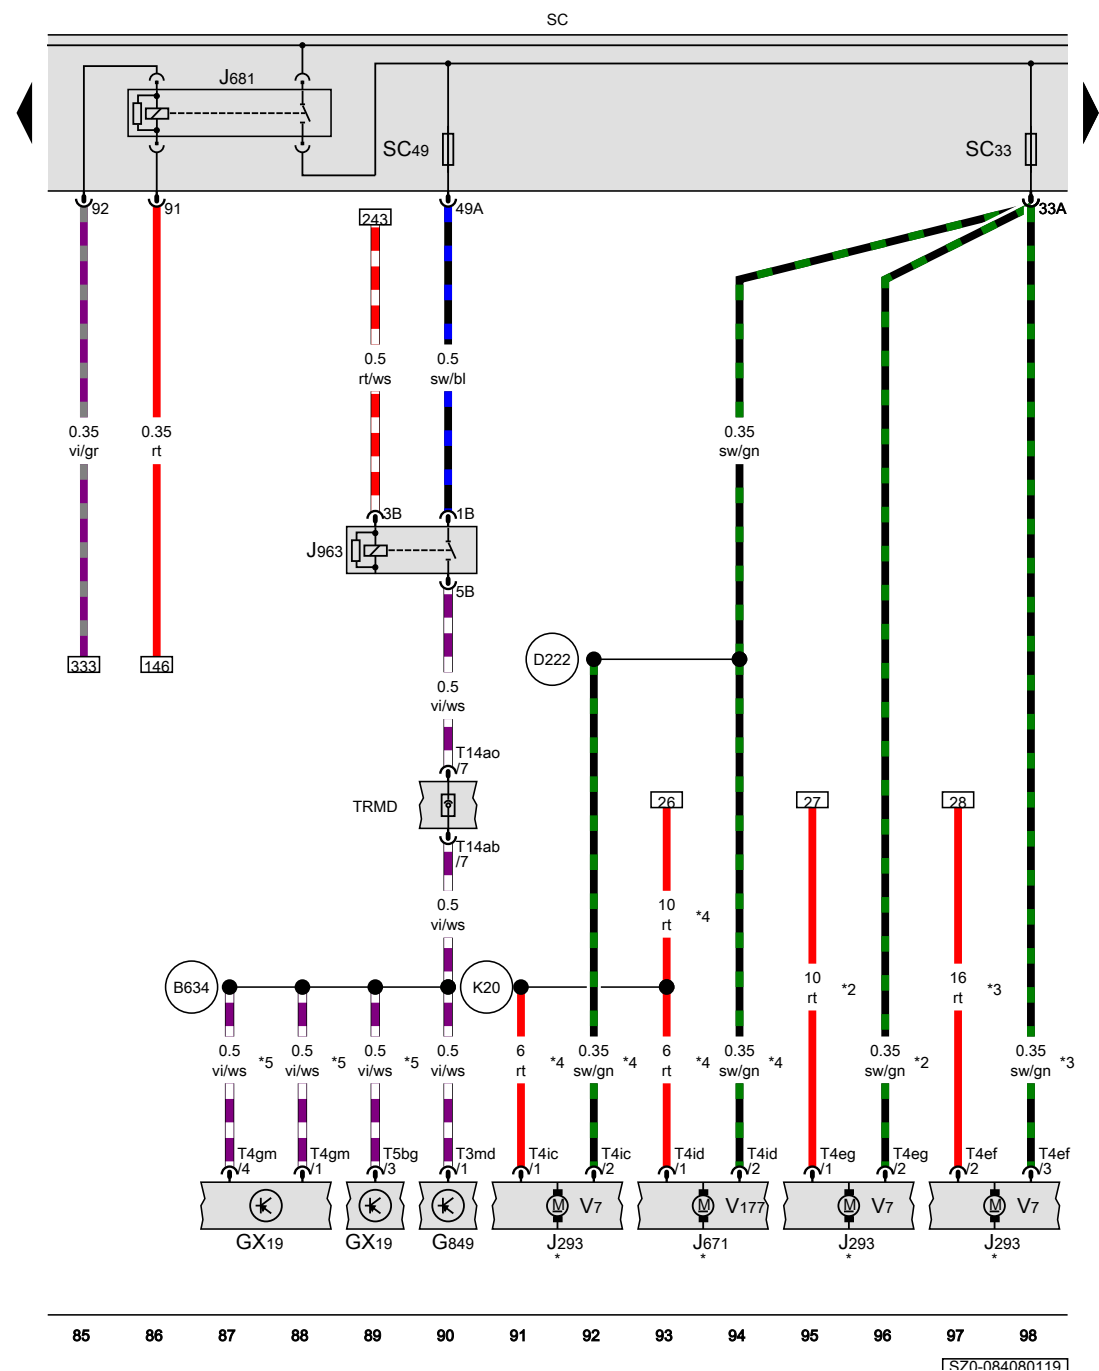


Terminal 15 voltage supply relay 2, Fuse holder C

- GX19 Delivery unit for reducing agent metering system
- G849 Reducing agent quality sensor
- J293 Radiator fan control unit
- J671 Radiator fan control unit 2
- J681 Terminal 15 voltage supply relay 2
- J963 Relay for reducing agent metering system
- SC Fuse holder C
- SC33 Fuse 33 on fuse holder C
- SC49 Fuse 49 on fuse holder C
- T3md 3-pin connector, black
- T4ef 4-pin connector, black
- T4eg 4-pin connector, black
- T4gm 4-pin connector, black
- T4ic 4-pin connector, black
- T4id 4-pin connector, black
- T5bg 5-pin connector, black
- T14ab 14-pin connector, black
- T14ao 14-pin connector, black
- TRMD Coupling point for reducing agent metering system
- V7 Radiator fan
- V177 Radiator fan 2

- B634 Positive connection 2 (87), in main wiring harness
- D222 Connection 10 (87a), in engine compartment wiring harness
- K20 Positive connection 1 (30), in radiator fan wiring harness

- * Pre-wired component
- *2 For models with no towing bracket
- *3 For models with towing bracket
- *4 see applicable current flow diagram for radiator fan
- *5 see applicable current flow diagram for engine

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

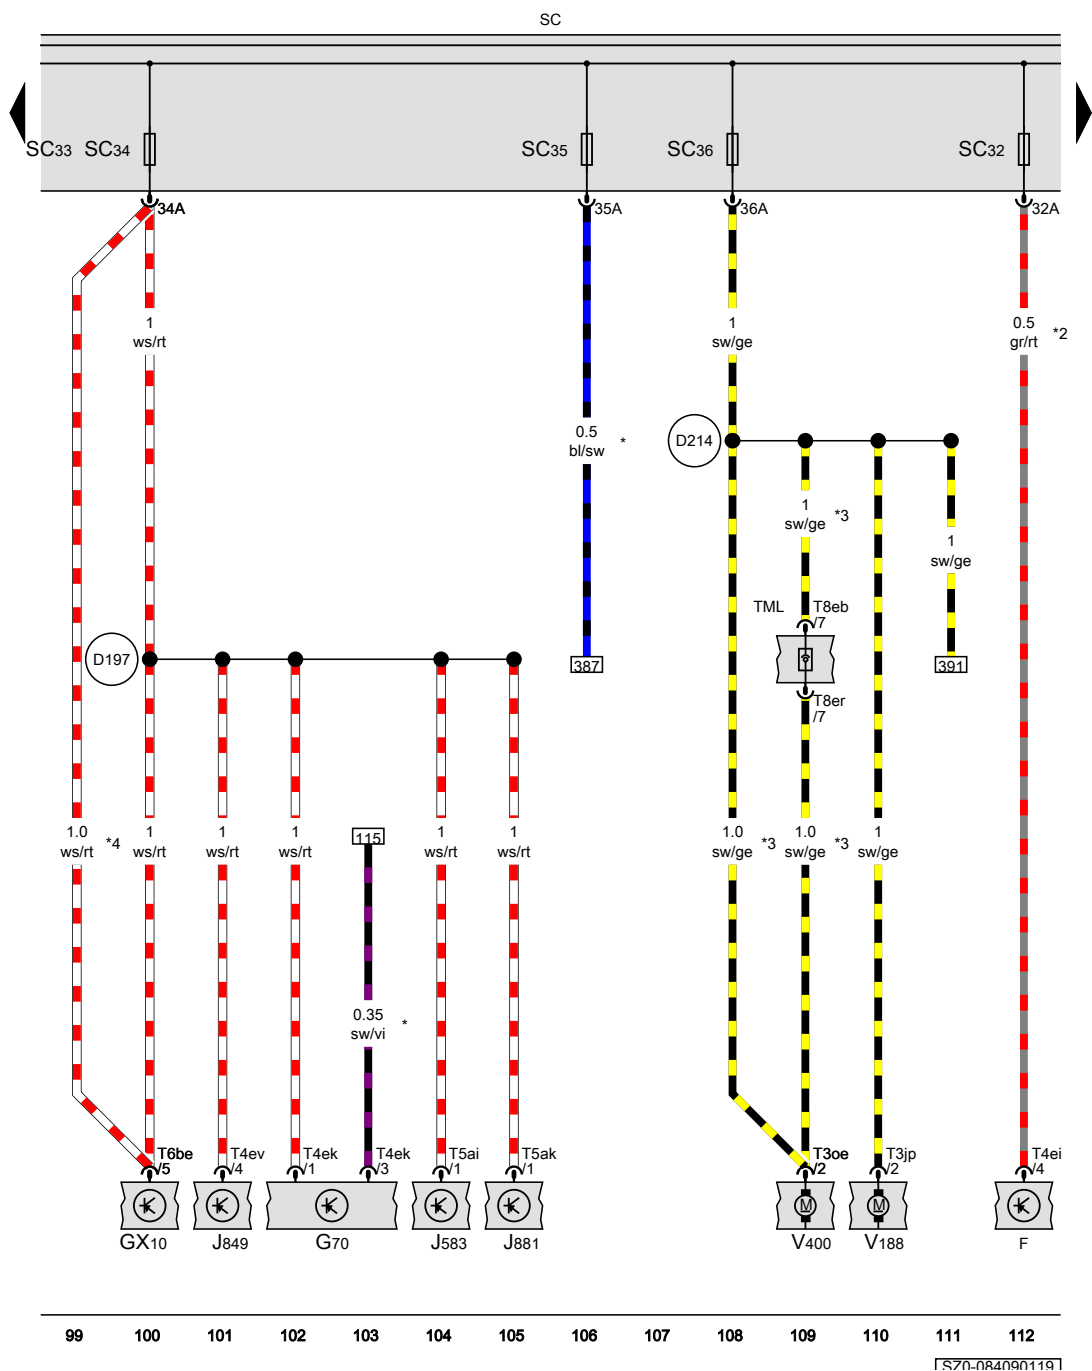

Fuse holder C

- F Brake light switch
- GX10 Lambda probe 1 before catalytic converter
- G70 Air mass meter
- J583 Control unit for NOx sender
- J849 Control unit for sensor electronics
- J881 Control unit for NOx sender 2
- SC Fuse holder C
- SC32 Fuse 32 on fuse holder C
- SC33 Fuse 33 on fuse holder C
- SC34 Fuse 34 on fuse holder C
- SC35 Fuse 35 on fuse holder C
- SC36 Fuse 36 on fuse holder C
- T3jp 3-pin connector, black
- T3oe 3-pin connector, black
- T4ei 4-pin connector, black
- T4ek 4-pin connector, black
- T4ev 4-pin connector, black
- T5ai 5-pin connector, black
- T5ak 5-pin connector, black
- T6be 6-pin connector, black
- T8eb 8-pin connector, black
- T8er 8-pin connector, black
- TML Coupling point in engine compartment, left
- V188 Charge air cooling pump
- V400 Pump for exhaust gas recirculation cooler

D197 Connection 5 (87a), in engine compartment wiring harness

D214 Connection 8 (87a), in engine compartment wiring harness


* see applicable current flow diagram for engine

*2 For models with manual gearbox

*3 According to equipment

*4 For models with Euro 5 plus emission standard

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

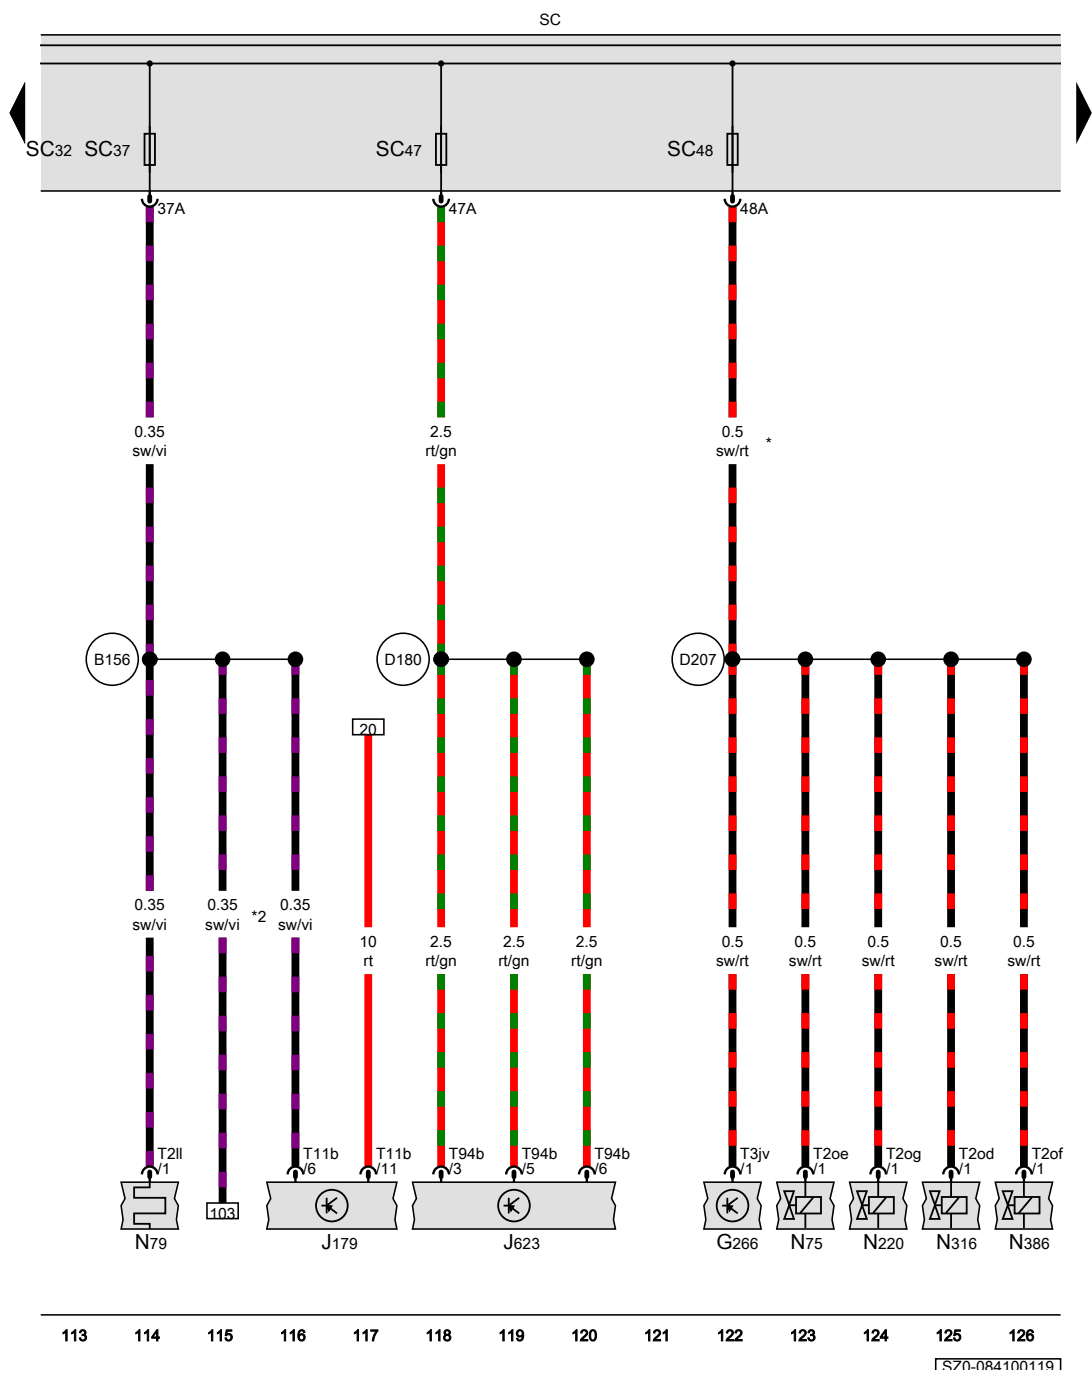


Fuse holder C

- G266 Oil level and oil temperature sender
- J179 Automatic glow period control unit
- J623 Engine/motor control unit
- N75 Charge pressure control solenoid valve
- N79 Heater element for crankcase breather
- N220 Exhaust flap valve
- N316 Intake manifold flap valve
- N386 Exhaust gas recirculation cooling bypass valve
- SC Fuse holder C
- SC32 Fuse 32 on fuse holder C
- SC37 Fuse 37 on fuse holder C
- SC47 Fuse 47 on fuse holder C
- SC48 Fuse 48 on fuse holder C
- T2II 2-pin connector, black
- T2od 2-pin connector, black
- T2oe 2-pin connector, black
- T2of 2-pin connector, black
- T2og 2-pin connector, black
- T3jv 3-pin connector, black
- T11b 11-pin connector, black
- T94b 94-pin connector, black

- B156 Positive connection (30a), in interior wiring harness
- D180 Connection (87a), in engine compartment wiring harness
- D207 Connection 7 (87a), in engine compartment wiring harness

- * According to equipment
- *2 see applicable current flow diagram for engine

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

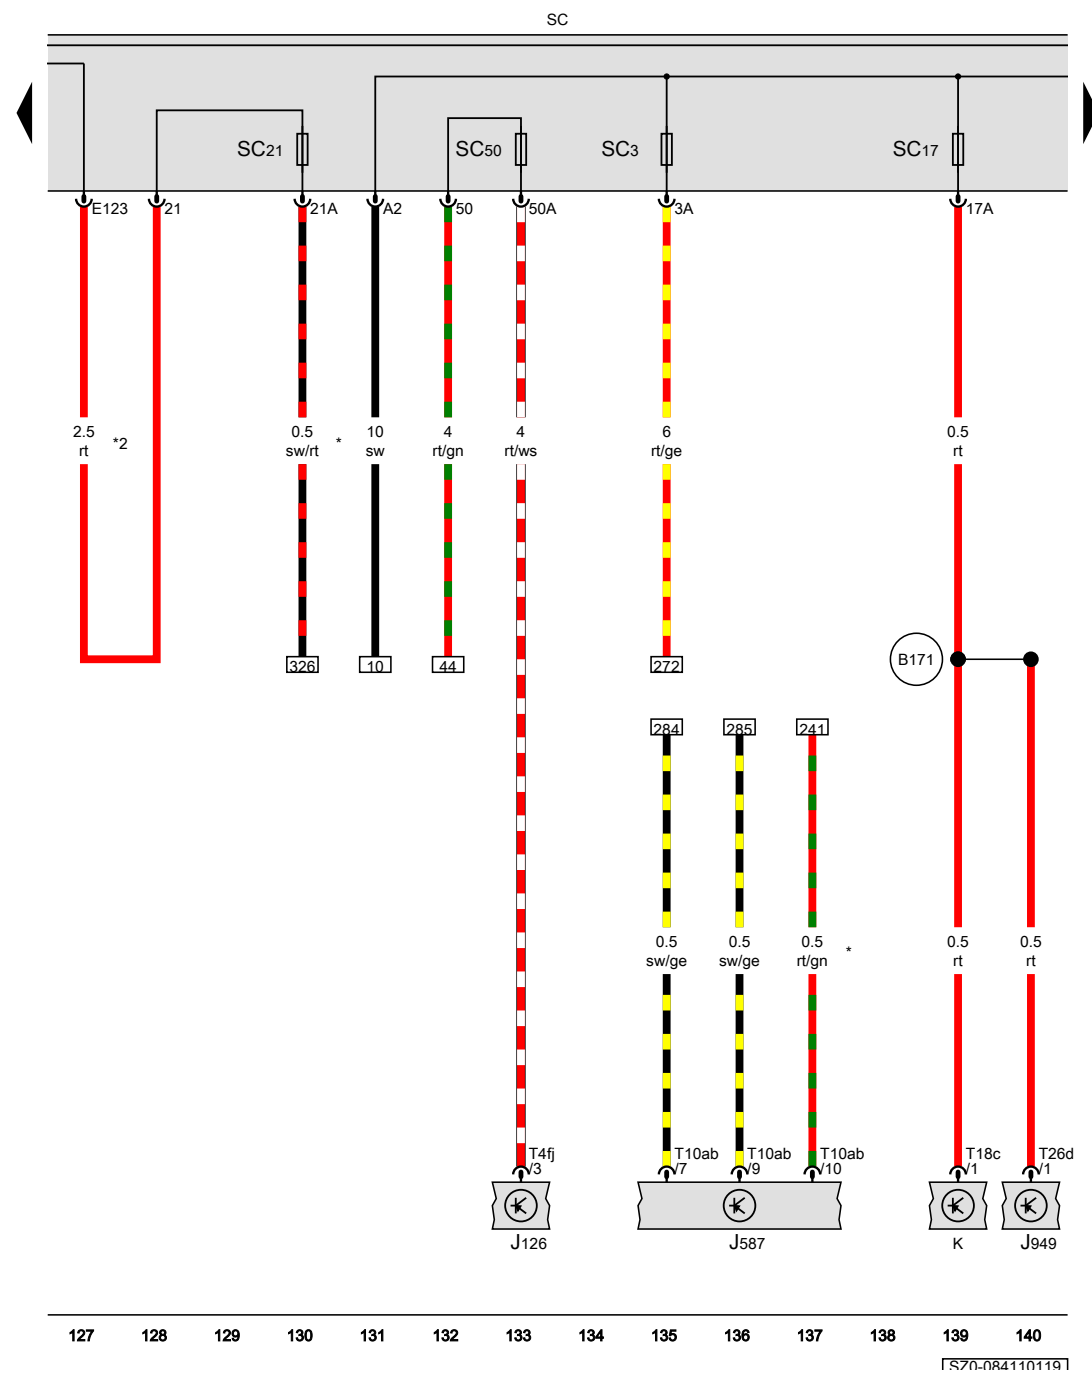


Fuse holder C

- J126 Fresh air blower control unit
- J587 Selector lever sensors control unit
- J949 Emergency call module control unit and communication unit
- K Dash panel insert
- SC Fuse holder C
- SC3 Fuse 3 on fuse holder C
- SC17 Fuse 17 on fuse holder C
- SC21 Fuse 21 on fuse holder C
- SC50 Fuse 50 on fuse holder C
- T4fj 4-pin connector, black
- T10ab 10-pin connector, red
- T18c 18-pin connector, black
- T26d 26-pin connector, black

B171 Positive connection 3 (30), in interior wiring harness

- * According to equipment
- *2 Cross section depends on equipment

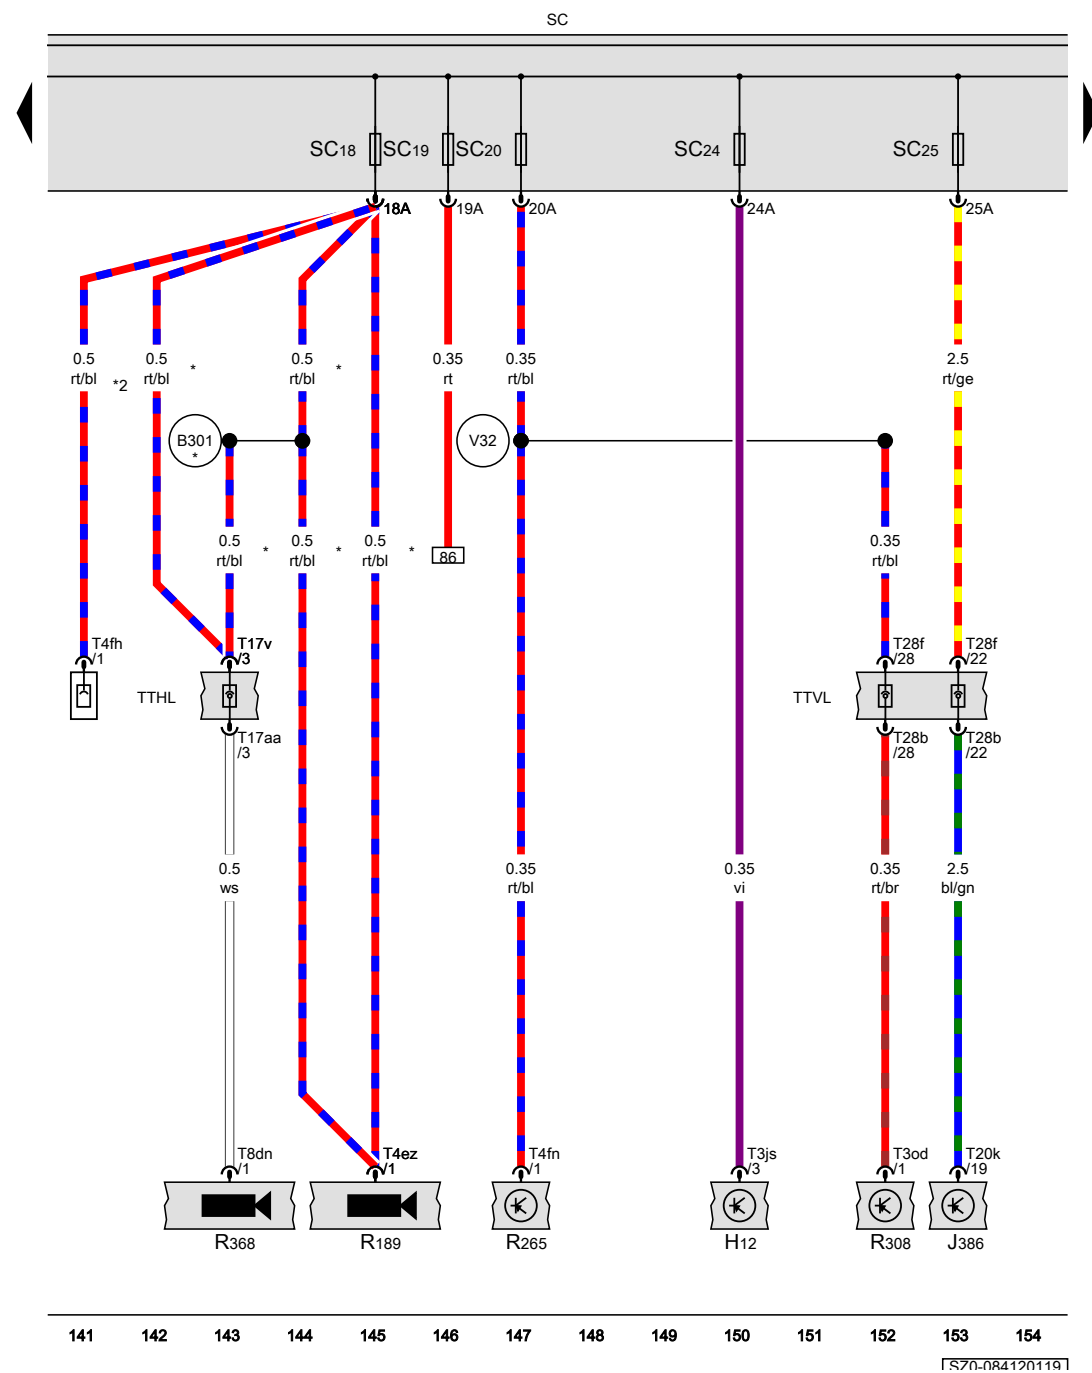

Fuse holder C

- H12 Alarm horn
- J386 Driver door control unit
- R189 Reversing camera
- R265 Storage compartment with interface for mobile telephone
- R308 Transmission and reception stabilisation control unit
- R368 Camera for trailer manoeuvring system, in rear left wing door
- SC Fuse holder C
- SC18 Fuse 18 on fuse holder C
- SC19 Fuse 19 on fuse holder C
- SC20 Fuse 20 on fuse holder C
- SC24 Fuse 24 on fuse holder C
- SC25 Fuse 25 on fuse holder C
- T3js 3-pin connector, black
- T3od 3-pin connector
- T4ez 4-pin connector, black
- T4fn 4-pin connector, black
- T4fn 4-pin connector, brown
- T8dn 8-pin connector, black
- T17aa 17-pin connector, black
- T17v 17-pin connector, black
- T20k 20-pin connector, black
- T28b 28-pin connector, black
- T28f 28-pin connector, black
- TTHL Coupling point for rear left door
- TTVL Coupling point for front left door


B301 Positive connection 5 (30), in main wiring harness

V32 Positive connection (30), in telephone wiring harness

* According to equipment

*2 For models with double cab/dropside


- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

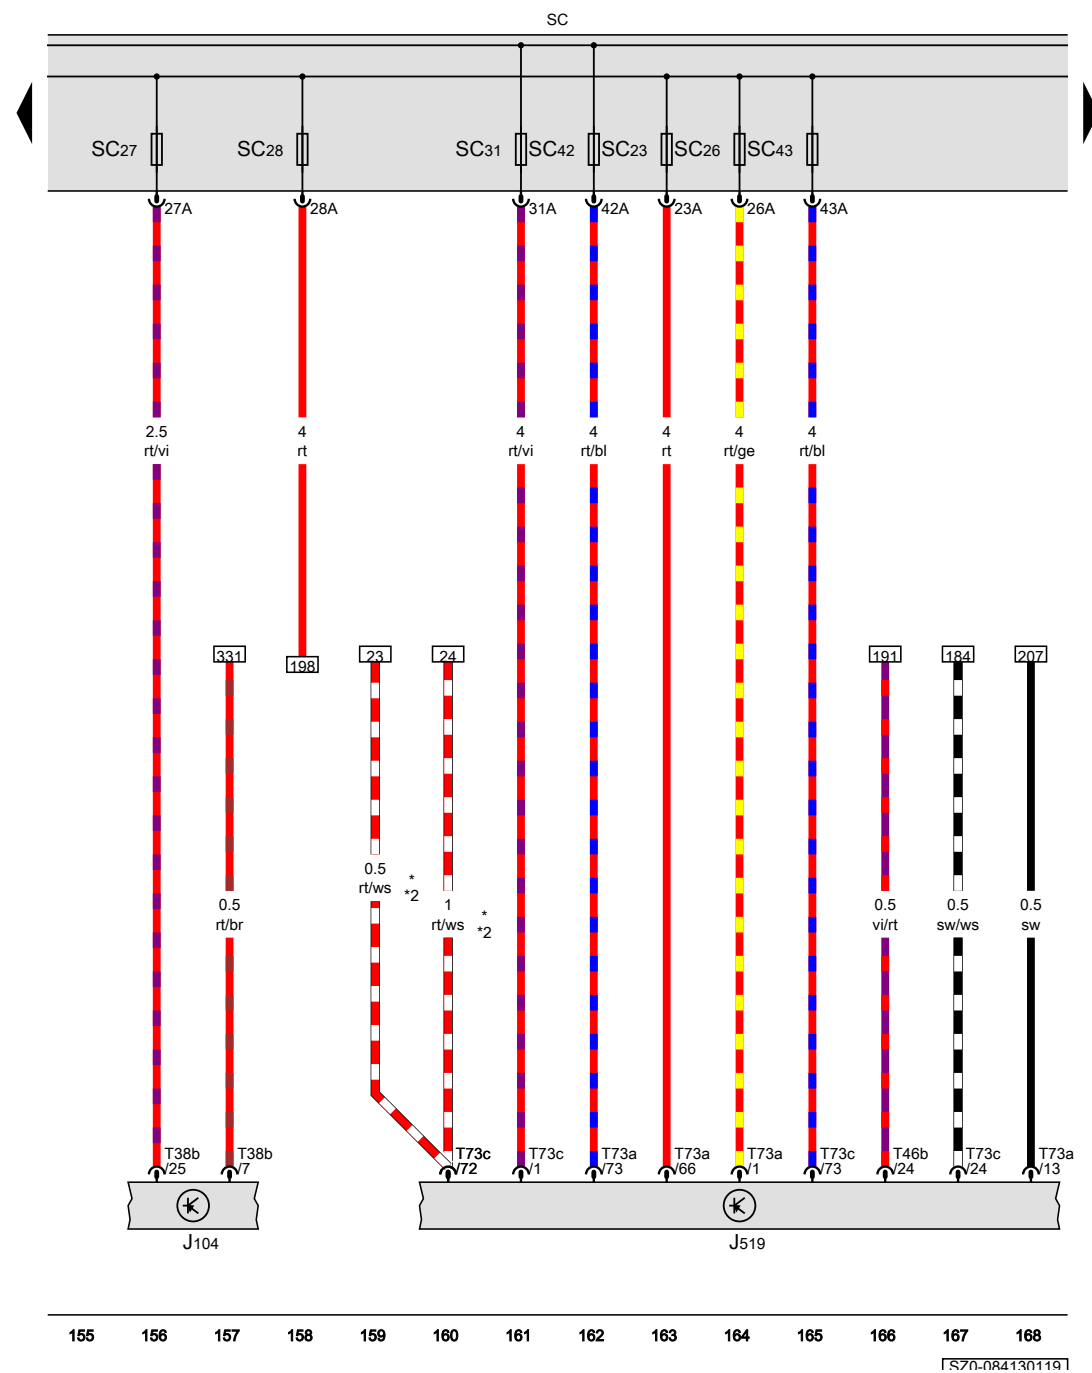

Fuse holder C

- J104 ABS control unit
- J519 Onboard supply control unit
- SC Fuse holder C
- SC23 Fuse 23 on fuse holder C
- SC26 Fuse 26 on fuse holder C
- SC27 Fuse 27 on fuse holder C
- SC28 Fuse 28 on fuse holder C
- SC31 Fuse 31 on fuse holder C
- SC42 Fuse 42 on fuse holder C
- SC43 Fuse 43 on fuse holder C
- T38b 38-pin connector, brown
- T46b 46-pin connector, black
- T73a 73-pin connector, black
- T73c 73-pin connector, black
- * For models with no special vehicle control unit
- *2 According to equipment

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

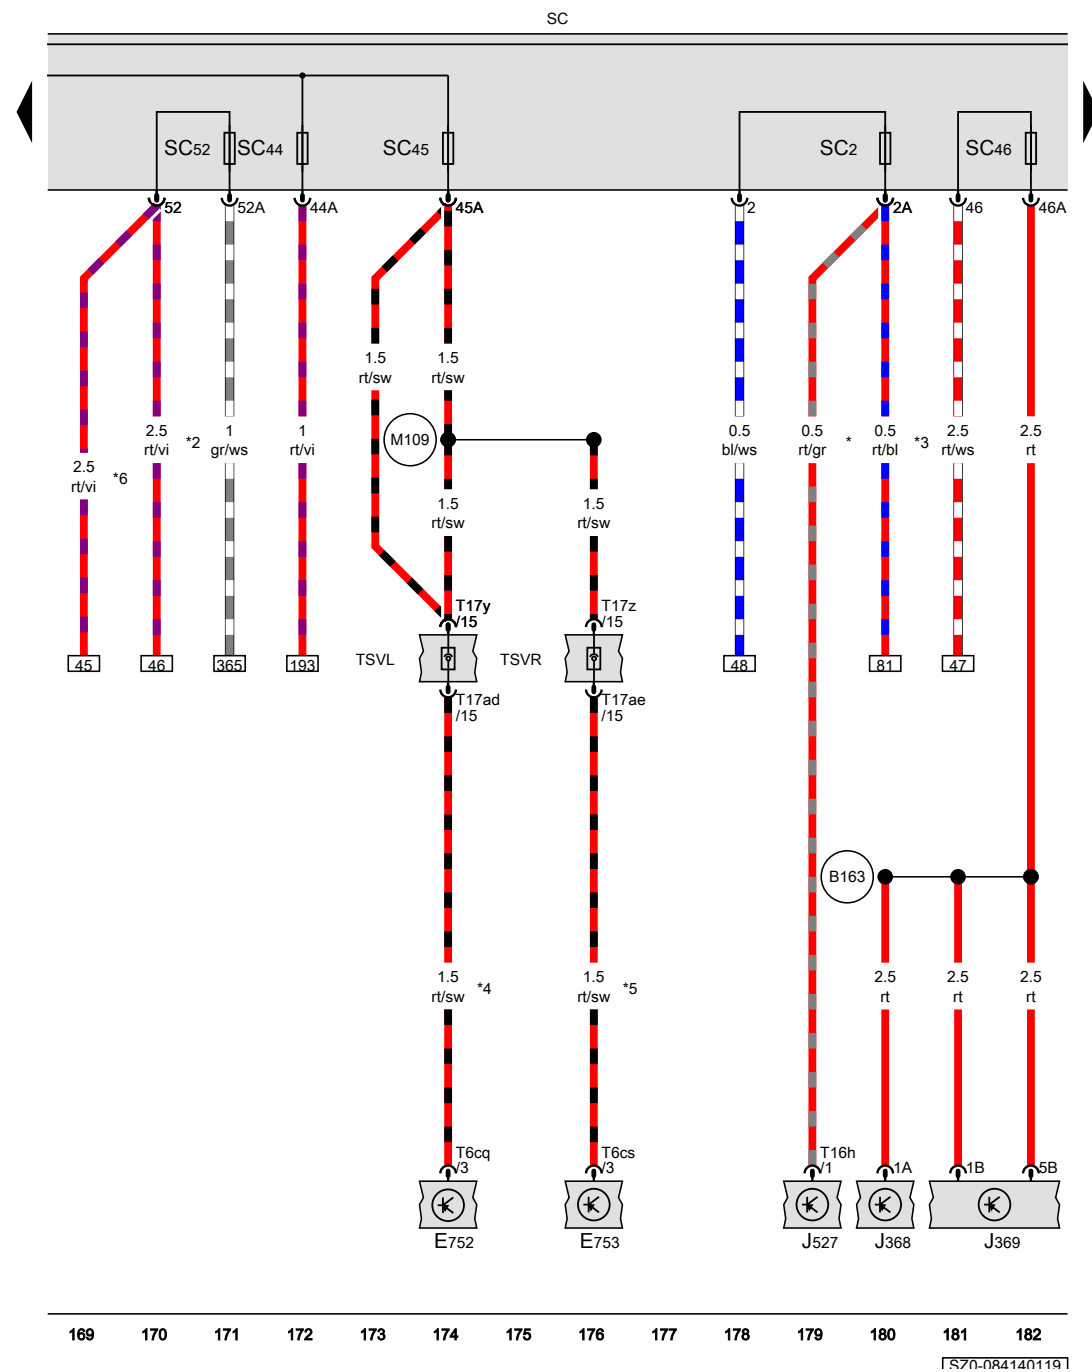

Fuse holder C


- E752 Front left lumbar support adjustment switch
- E753 Front right lumbar support adjustment switch
- J368 Wiper motor relay 1
- J369 Wiper motor relay 2
- J527 Steering column electronics control unit
- SC Fuse holder C
- SC2 Fuse 2 on fuse holder C
- SC44 Fuse 44 on fuse holder C
- SC45 Fuse 45 on fuse holder C
- SC46 Fuse 46 on fuse holder C
- SC52 Fuse 52 on fuse holder C
- T6cq 6-pin connector, black
- T6cs 6-pin connector, black
- T16h 16-pin connector, black
- T17ad 17-pin connector, black
- T17ae 17-pin connector, black
- T17y 17-pin connector, black
- T17z 17-pin connector, black
- TSVL Coupling point for front left seat
- TSVR Coupling point for front right seat

B163 Positive connection 1 (15), in interior wiring harness

M109 Connection 1 (30), in front left seat wiring harness

- * For models with no heated steering wheel
- *2 Up to July 2018
- *3 For models with heated steering wheel
- *4 For left-hand drive models
- *5 For right-hand drive models
- *6 From July 2018

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

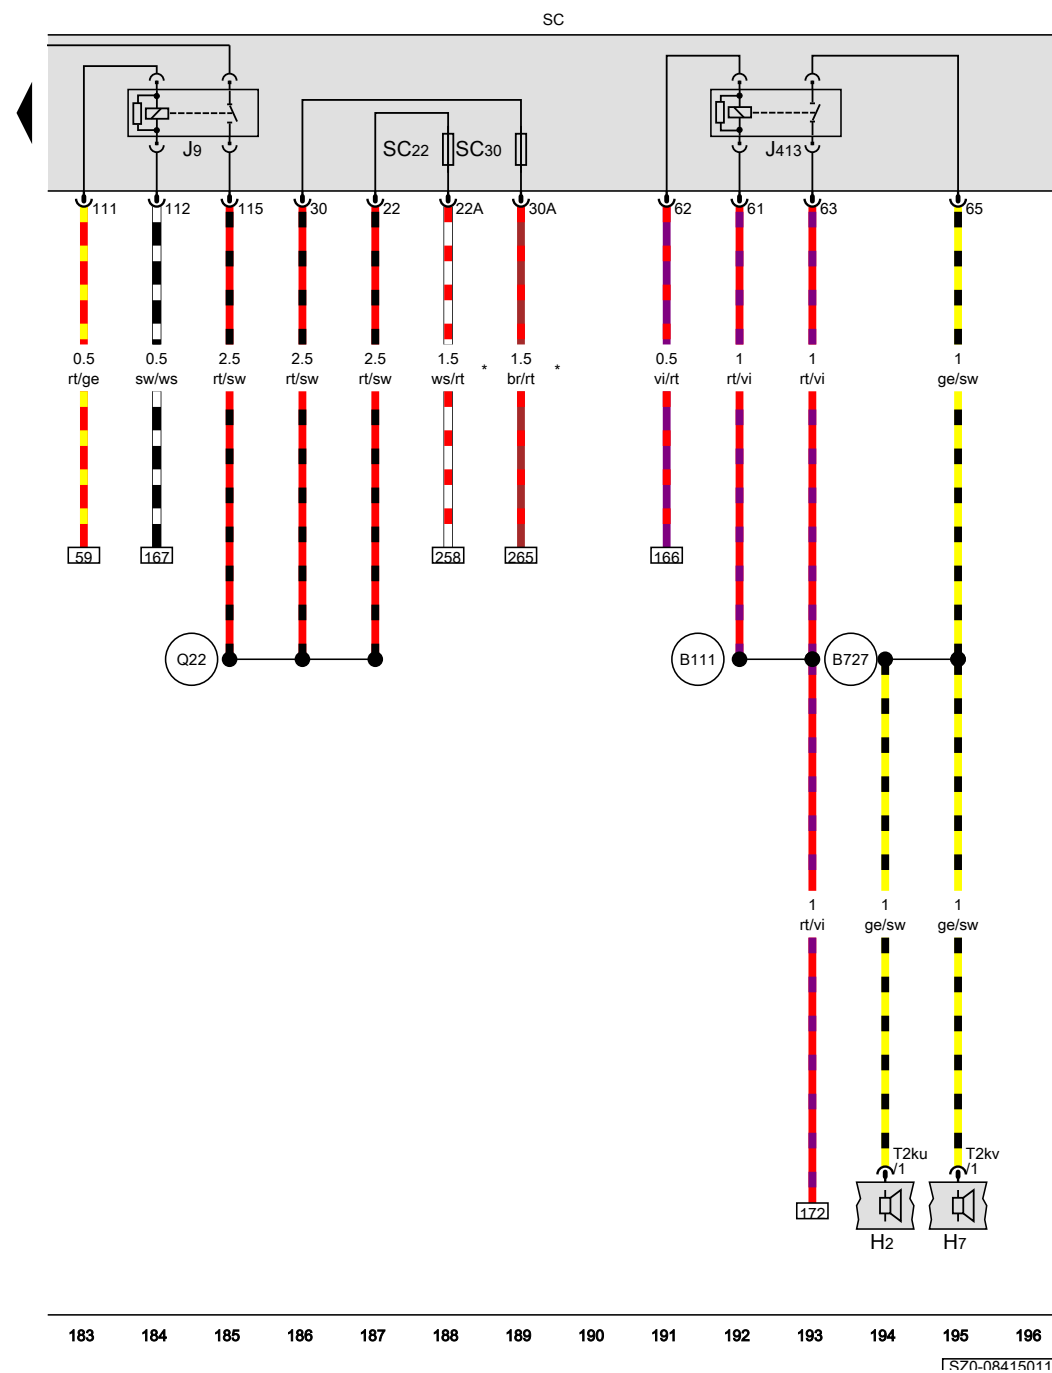

Heated rear window relay, Horn relay, Fuse holder C

- H2 Treble horn
- H7 Bass horn
- J9 Heated rear window relay
- J413 Horn relay
- SC Fuse holder C
- SC22 Fuse 22 on fuse holder C
- SC30 Fuse 30 on fuse holder C
- T2ku 2-pin connector, black
- T2kv 2-pin connector, black

B111 Positive connection 1 (30a), in interior wiring harness

B727 Connection (71a), in main wiring harness

Q22 Connection 1, in rear lid wiring harness

* For panel van and Kombi models


- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

Terminal 15 voltage supply relay, Relay for special installations, terminal 15, Electrical terminal strip for external use

- J329 Terminal 15 voltage supply relay
- J821 Relay for special installations, terminal 15
- T7ah 7-pin connector, green
- T8dj 8-pin connector, black
- TV65 Electrical terminal strip for external use

- 44 Earth point, lower part of left A-pillar
- 151 Earth connection 1, in front wiring harness
- B188 Positive connection 5 (30), in interior wiring harness
- B273 Positive connection (15), in main wiring harness
- C45 Positive connection 1 (15), in front wiring harness

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

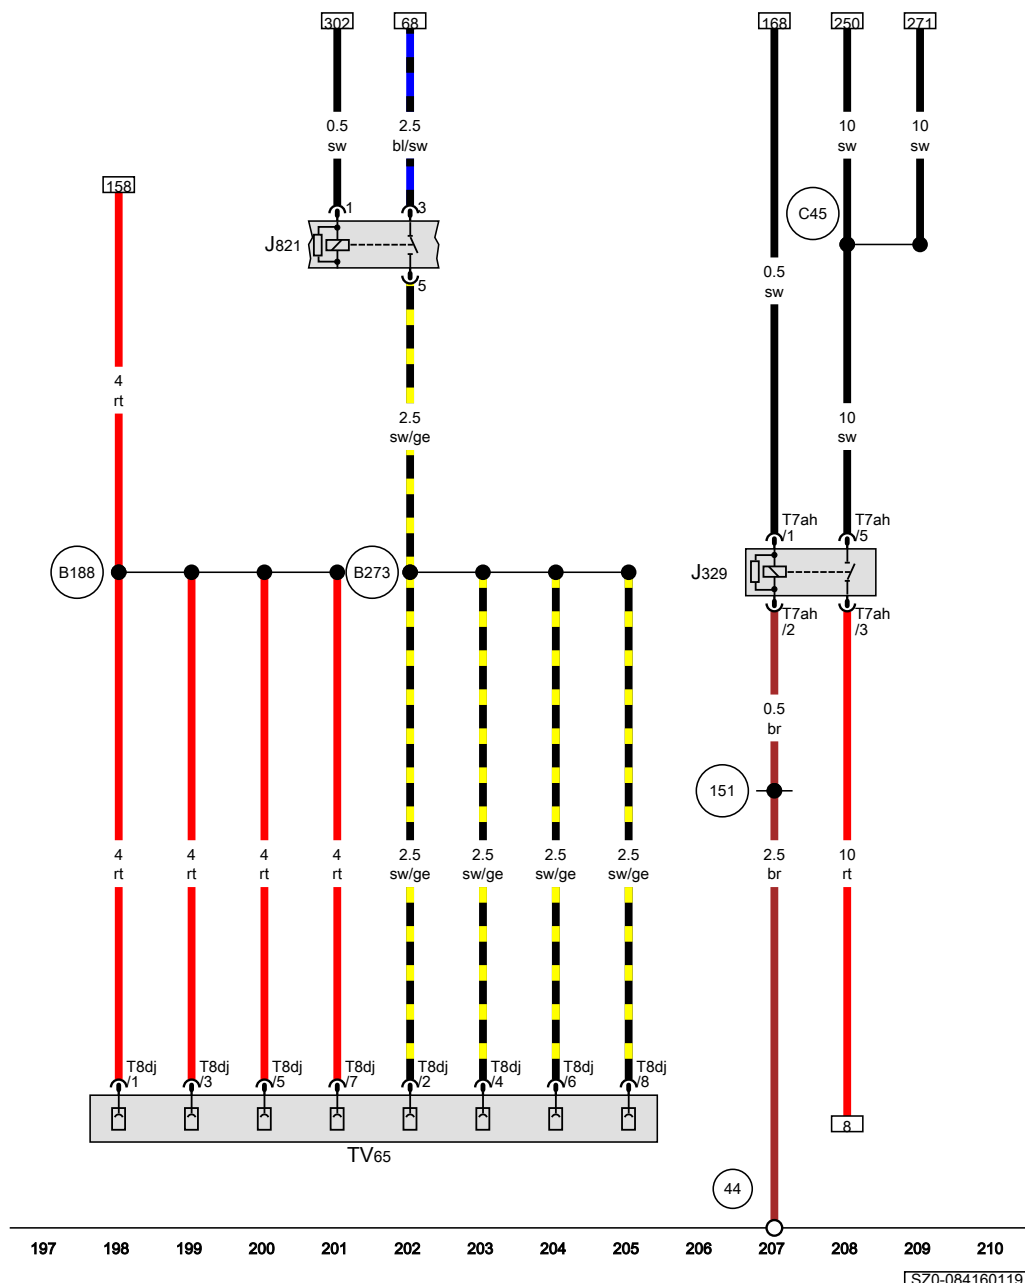


Fuse holder B

- EX21 Heater and air conditioning controls
- J1144 Control unit for supplementary blower for air conditioning
- J1145 Control unit for supplementary blower 2 for air conditioning
- SB Fuse holder B
- SB1 Fuse 1 on fuse holder B
- SB2 Fuse 2 on fuse holder B
- SB3 Fuse 3 on fuse holder B
- SB4 Fuse 4 on fuse holder B
- SB5 Fuse 5 on fuse holder B
- SB6 Fuse 6 on fuse holder B
- SB7 Fuse 7 on fuse holder B
- SB8 Fuse 8 on fuse holder B
- T3lz 3-pin connector, brown
- T3nx 3-pin connector, colourless
- T3ob 3-pin connector, colourless
- T3oc 3-pin connector, colourless
- T4er 4-pin connector, black
- T4es 4-pin connector, black
- T20j 20-pin connector, black
- U13 DC/AC converter with socket, 12 V - 230 V
- U20 12 V socket 4
- U26 12 V socket 5
- U33 12 V socket 6


X179 Connection 3 (socket) in additional equipment wiring harness

- * For models with no second battery
- *2 For models with second battery
- *3 According to equipment
- *4 For models with tail lift

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

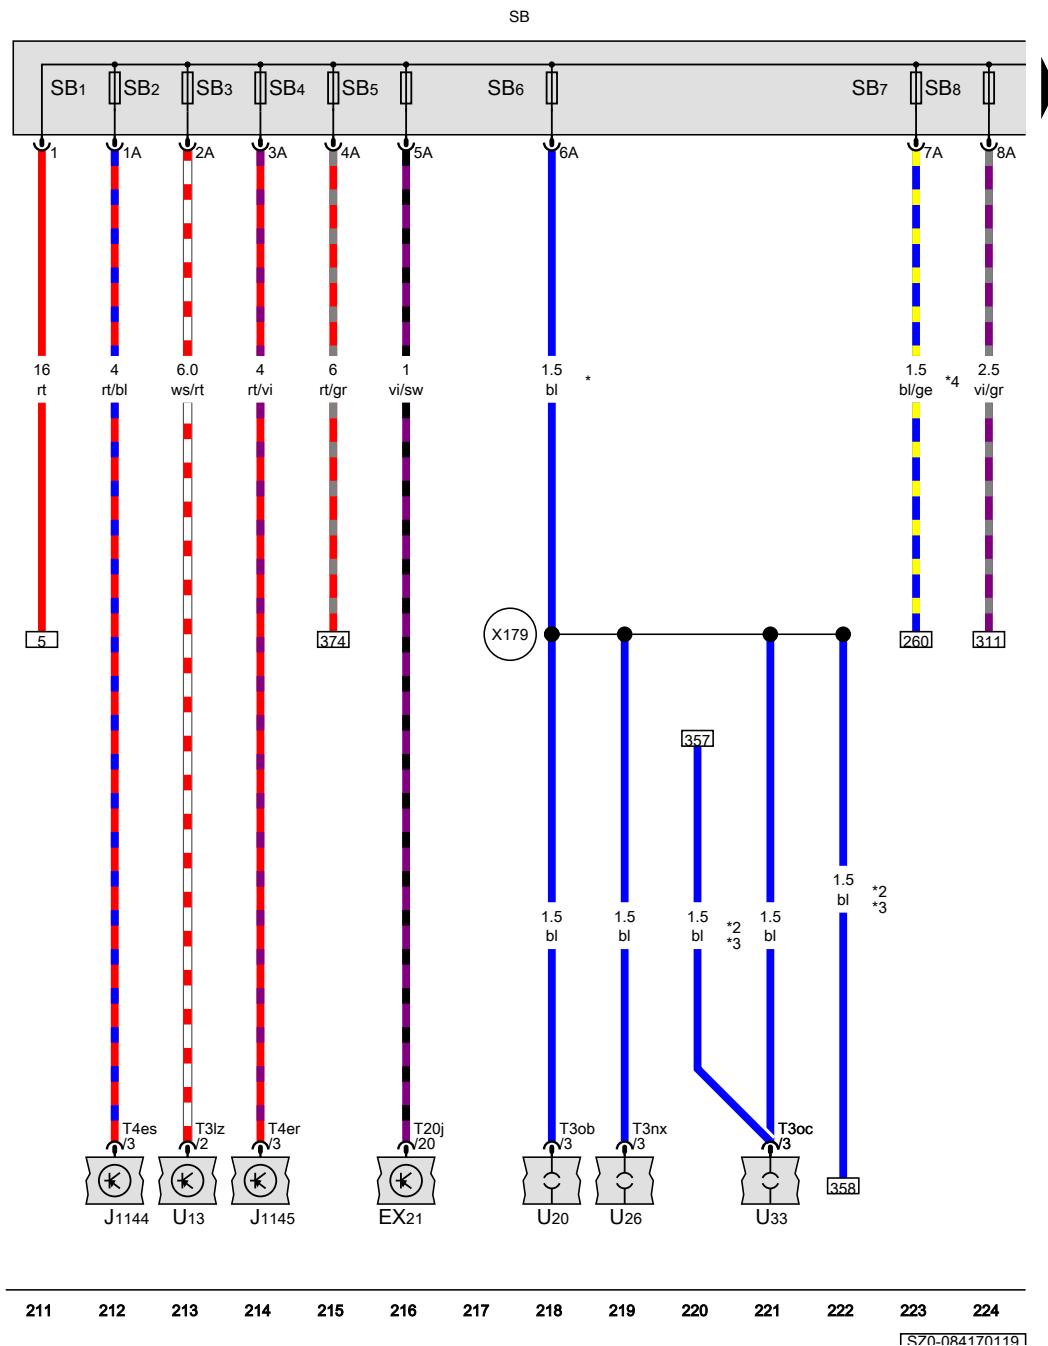

1S70-084170119

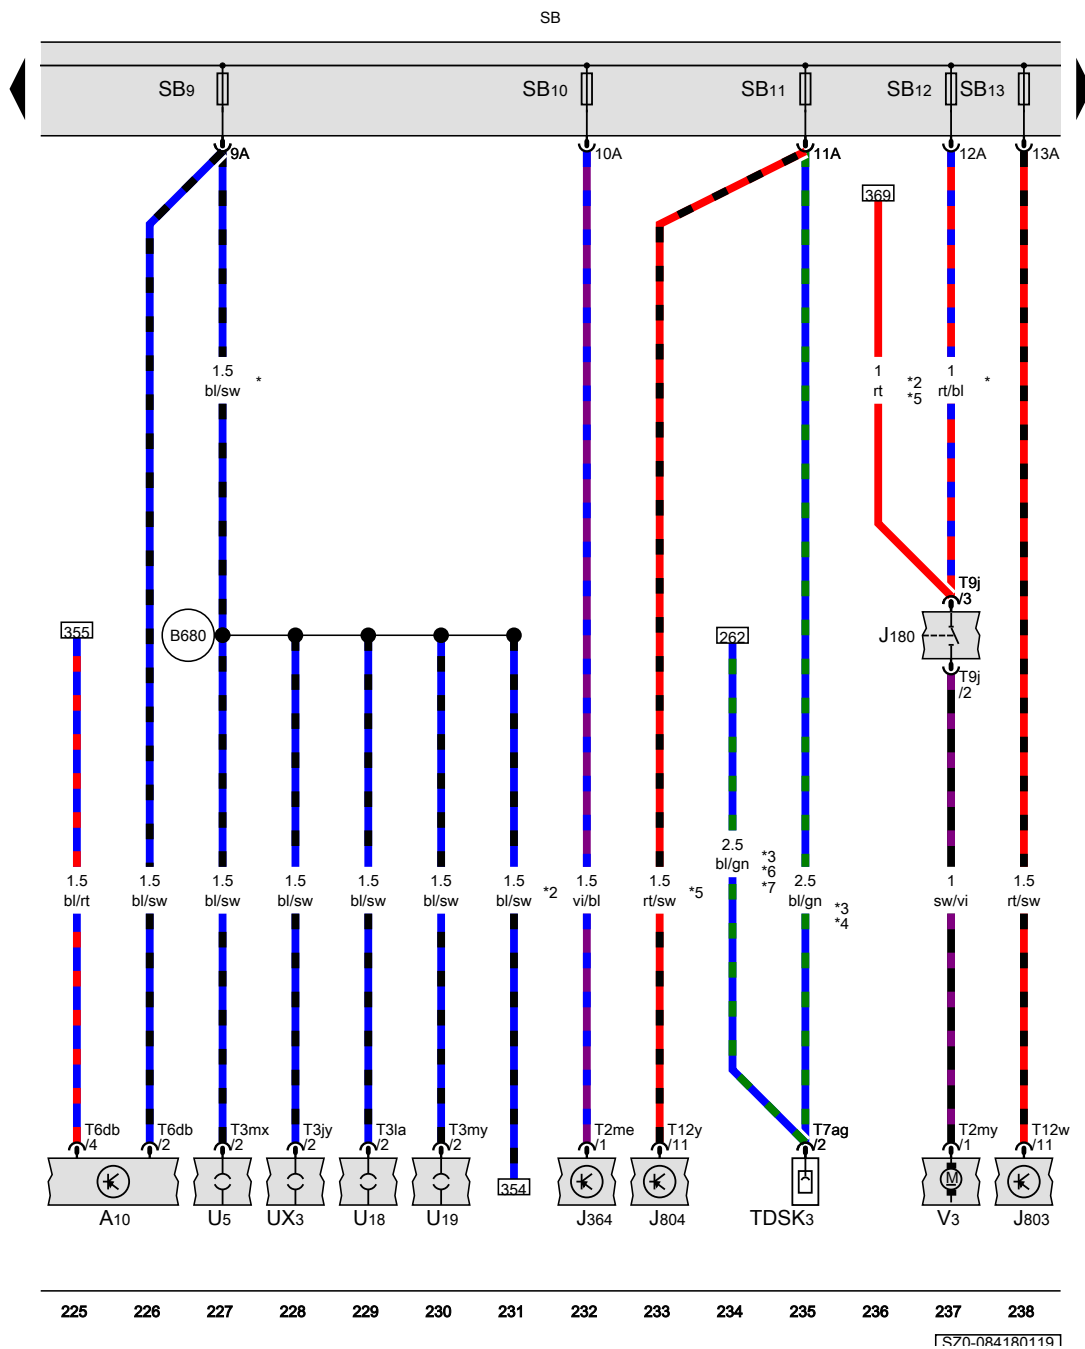


Fuse holder B

- A10 Battery charger, 230 or 110 Volt/12 Volt
- J180 Switch-over relay 1 for roof ventilator
- J364 Auxiliary heater control unit
- J803 Control unit for front left massage seat
- J804 Control unit for front right massage seat
- SB Fuse holder B
- SB9 Fuse 9 on fuse holder B
- SB10 Fuse 10 on fuse holder B
- SB11 Fuse 11 on fuse holder B
- SB12 Fuse 12 on fuse holder B
- SB13 Fuse 13 on fuse holder B
- T2me 2-pin connector, black
- T2my 2-pin connector, blue
- T3jy 3-pin connector, colourless
- T3la 3-pin connector, colourless
- T3mx 3-pin connector, colourless
- T3my 3-pin connector, colourless
- T6db 6-pin connector, grey
- T7ag 7-pin connector
- T9j 9-pin connector, grey
- T12w 12-pin connector, black
- T12y 12-pin connector, black
- TDSK3 Coupling point 3 for 3-way tipper
- UX3 12 V socket
- U5 12 V socket, in dash panel
- U18 12 V socket 2, in front centre console
- U19 12 V socket 3, in centre of dash panel
- V3 Roof ventilator

B680 Connection (electric socket), in interior wiring harness

- * For models with no second battery
- *2 For models with second battery
- *3 For models with 3-way tip function
- *4 Up to July 2017
- *5 According to equipment
- *6 From June 2017
- *7 gradual introduction

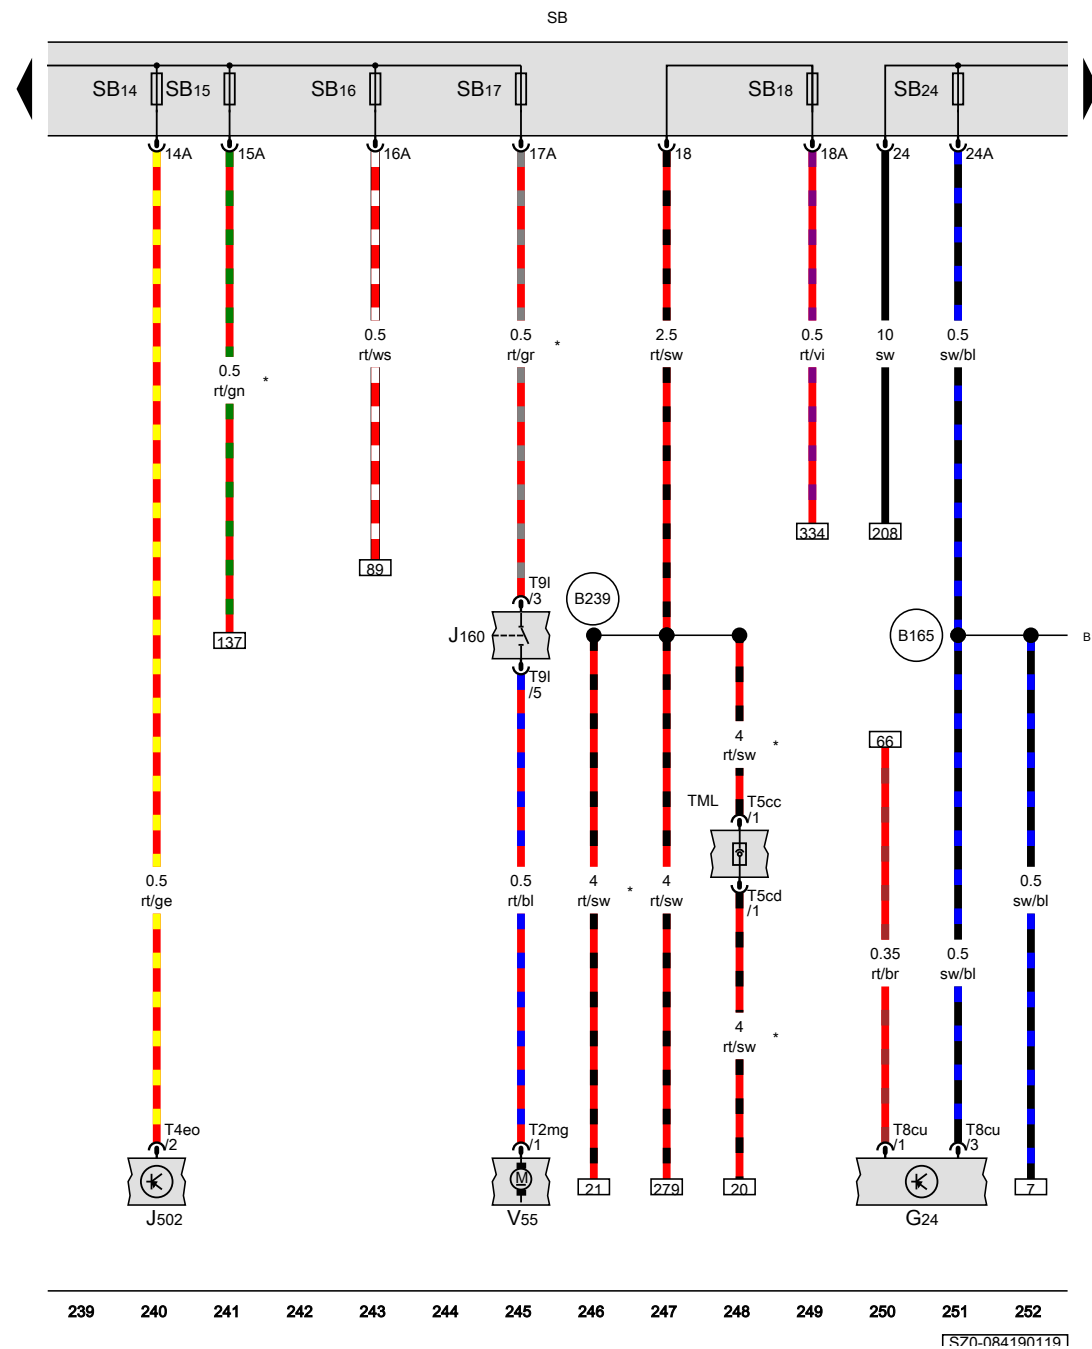

Fuse holder B


- G24 Tachograph
- J160 Circulation pump relay
- J502 Tyre Pressure Monitoring System control unit
- SB Fuse holder B
- SB14 Fuse 14 on fuse holder B
- SB15 Fuse 15 on fuse holder B
- SB16 Fuse 16 on fuse holder B
- SB17 Fuse 17 on fuse holder B
- SB18 Fuse 18 on fuse holder B
- SB24 Fuse 24 on fuse holder B
- T2mg 2-pin connector, black
- T4eo 4-pin connector, grey
- T5cc 5-pin connector, black
- T5cd 5-pin connector, black
- T8cu 8-pin connector, colourless
- T9l 9-pin connector, black
- TML Coupling point in engine compartment, left
- V55 Circulation pump

B165 Positive connection 2 (15), in interior wiring harness

B239 Positive connection 1 (50), in interior wiring harness

* According to equipment

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

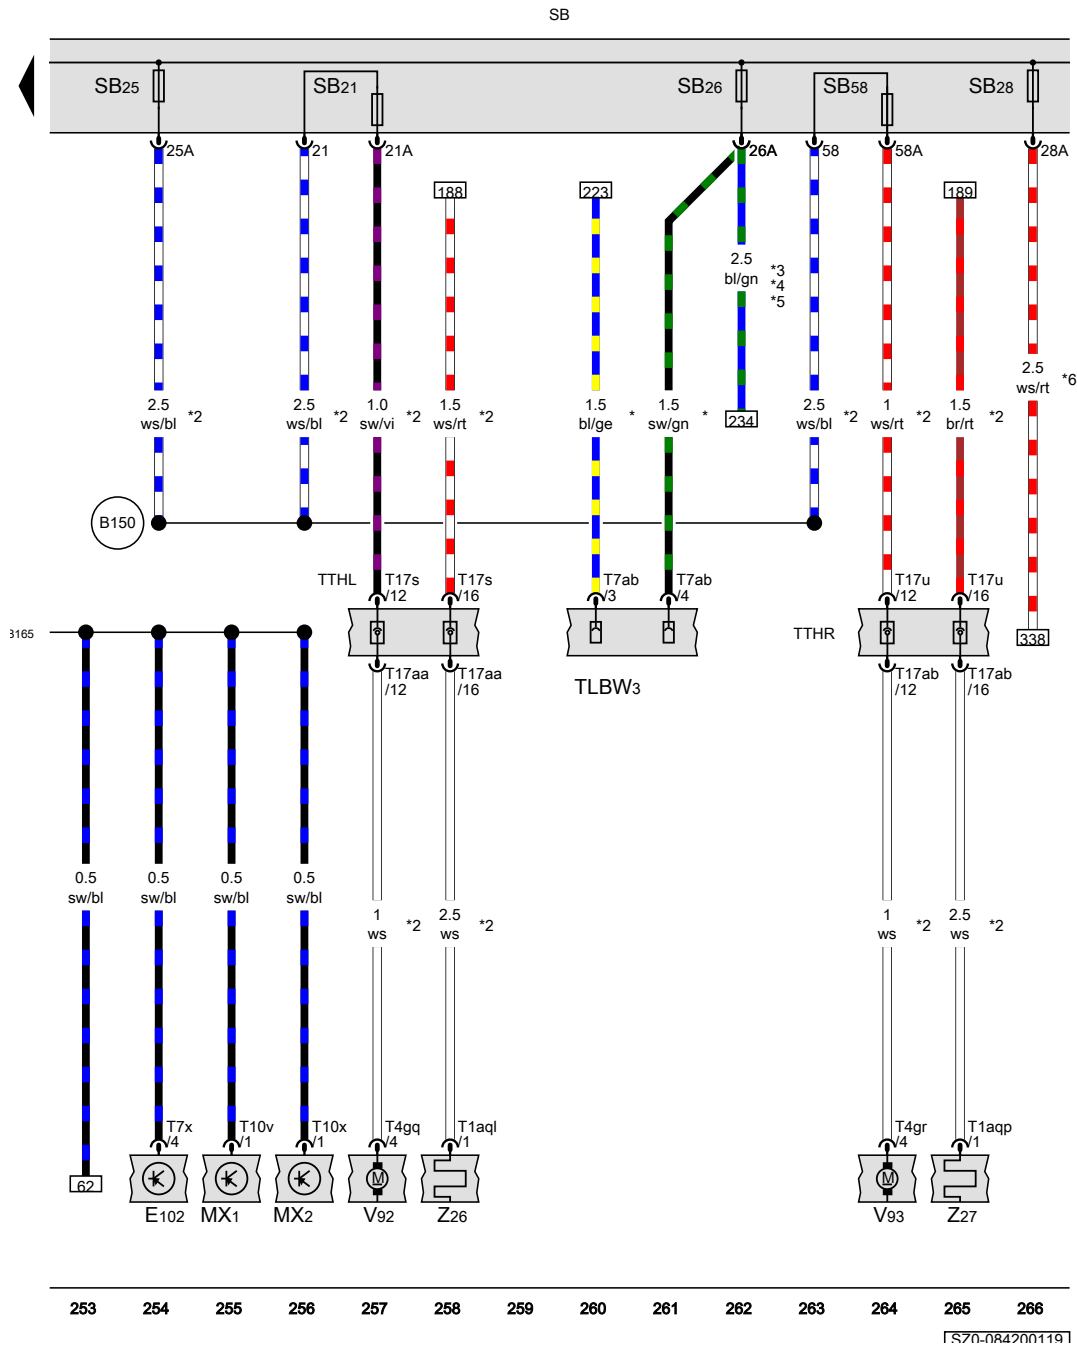


Fuse holder B

- E102 Headlight range control regulator
- MX1 Front left headlight
- MX2 Front right headlight
- SB Fuse holder B
- SB21 Fuse 21 on fuse holder B
- SB25 Fuse 25 on fuse holder B
- SB26 Fuse 26 on fuse holder B
- SB28 Fuse 28 on fuse holder B
- SB58 Fuse 58 on fuse holder B
- T1aql 1-pin connector
- T1aqp 1-pin connector
- T4gq 4-pin connector, black
- T4gr 4-pin connector, black
- T7ab 7-pin connector
- T7x 7-pin connector, black
- T10v 10-pin connector, black
- T10x 10-pin connector, black
- T17aa 17-pin connector, black
- T17ab 17-pin connector, black
- T17s 17-pin connector, black
- T17u 17-pin connector, black
- TLBW3 Coupling point 3 for tail lift
- TTHL Coupling point for rear left door
- TTHR Coupling point for rear right door
- V92 Rear left wing door window wiper motor
- V93 Rear right wing door window wiper motor
- Z26 Heated rear window in left wing door
- Z27 Heated rear window in right wing door

B150 Positive connection 2 (30a), in interior wiring harness

B165 Positive connection 2 (15), in interior wiring harness

- * For models with tail lift
- *2 For panel van and Kombi models
- *3 For models with 3-way tip function
- *4 From June 2017
- *5 gradual introduction
- *6 From December 2017

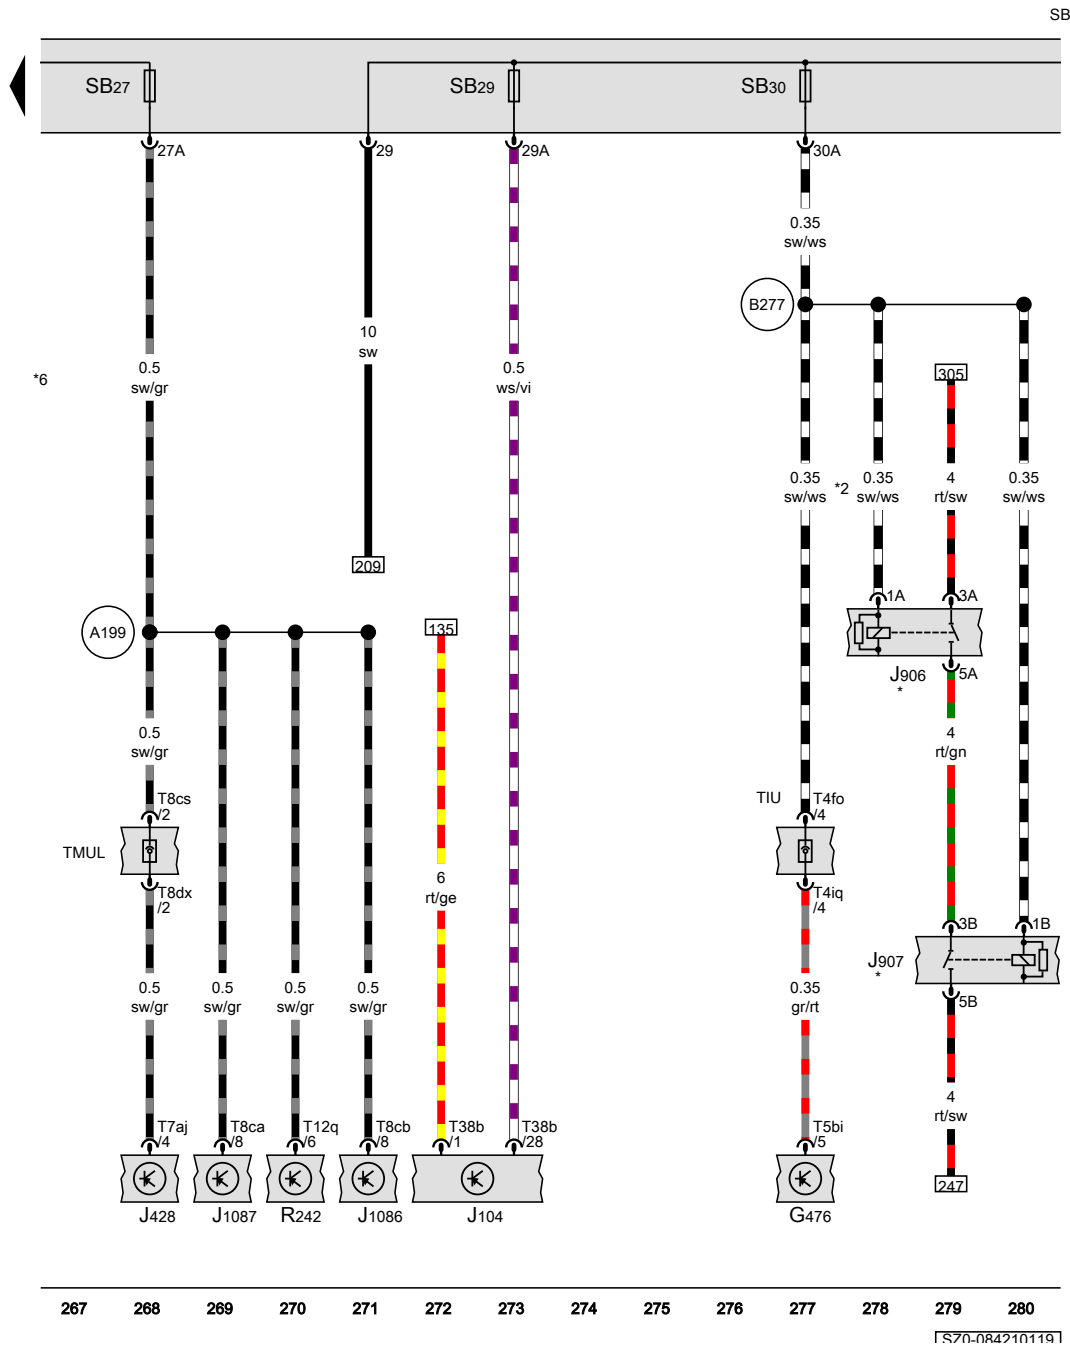

Fuse holder B


- | | |
|-------|--|
| G476 | Clutch position sender |
| J104 | ABS control unit |
| J428 | Adaptive cruise control unit |
| J906 | Starter relay 1 |
| J907 | Starter relay 2 |
| J1086 | Blind Spot Monitor control unit |
| J1087 | Blind Spot Monitor control unit 2 |
| R242 | Front camera for driver assist systems |
| SB | Fuse holder B |
| SB27 | Fuse 27 on fuse holder B |
| SB29 | Fuse 29 on fuse holder B |
| SB30 | Fuse 30 on fuse holder B |
| T4fo | 4-pin connector, black |
| T4iq | 4-pin connector, black |
| T5bi | 5-pin connector, black |
| T7aj | 7-pin connector, black |
| T8ca | 8-pin connector, black |
| T8cb | 8-pin connector, black |
| T8cs | 8-pin connector, black |
| T8dx | 8-pin connector, black |
| T12q | 12-pin connector, black |
| T38b | 38-pin connector, brown |
| TIU | Coupling point in interior, below |
| TMUL | Coupling point on engine, bottom left |

- (A199) Positive connection 4 (15a) in dash panel wiring harness

- (B277) Positive connection 1 (15a) in main wiring harness

- * see applicable current flow diagram for engine
*2 For models with manual gearbox

- | | | |
|----|---|--------|
| ws | = | white |
| sw | = | black |
| ro | = | red |
| rt | = | red |
| br | = | brown |
| gn | = | green |
| bl | = | blue |
| gr | = | grey |
| li | = | purple |
| vi | = | purple |
| ge | = | yellow |
| or | = | orange |
| rs | = | pink |

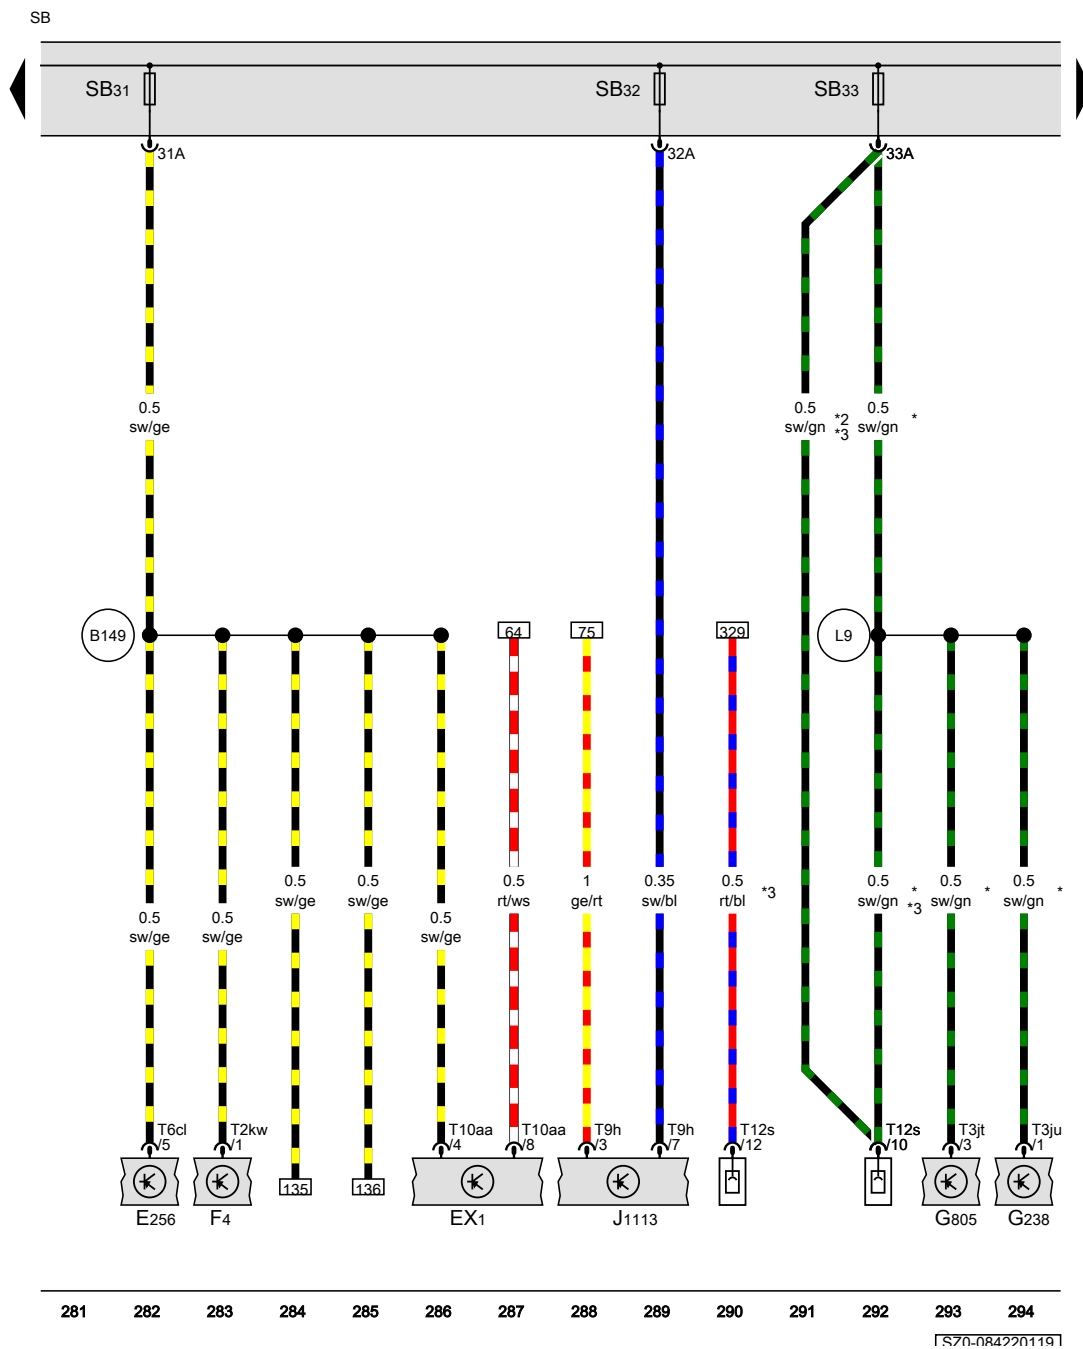

Fuse holder B


- EX1 Rotary light switch
- E256 Button for TCS and electronic stabilisation program
- F4 Reversing light switch
- G238 Air quality sensor
- G805 Pressure sender for refrigerant circuit
- J1113 Reverse warning beeper control unit
- SB Fuse holder B
- SB31 Fuse 31 on fuse holder B
- SB32 Fuse 32 on fuse holder B
- SB33 Fuse 33 on fuse holder B
- T2kw 2-pin connector, black
- T3jt 3-pin connector, black
- T3ju 3-pin connector, grey
- T6cl 6-pin connector, blue
- T9h 9-pin connector, grey
- T10aa 10-pin connector, red
- T12s 12-pin connector, green

B149 Positive connection 2 (15a), in interior wiring harness

L9 Connection 1, in air conditioning system wiring harness

- * For models with air conditioning system
- *2 For models with no air conditioning system
- *3 For models with telematics

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

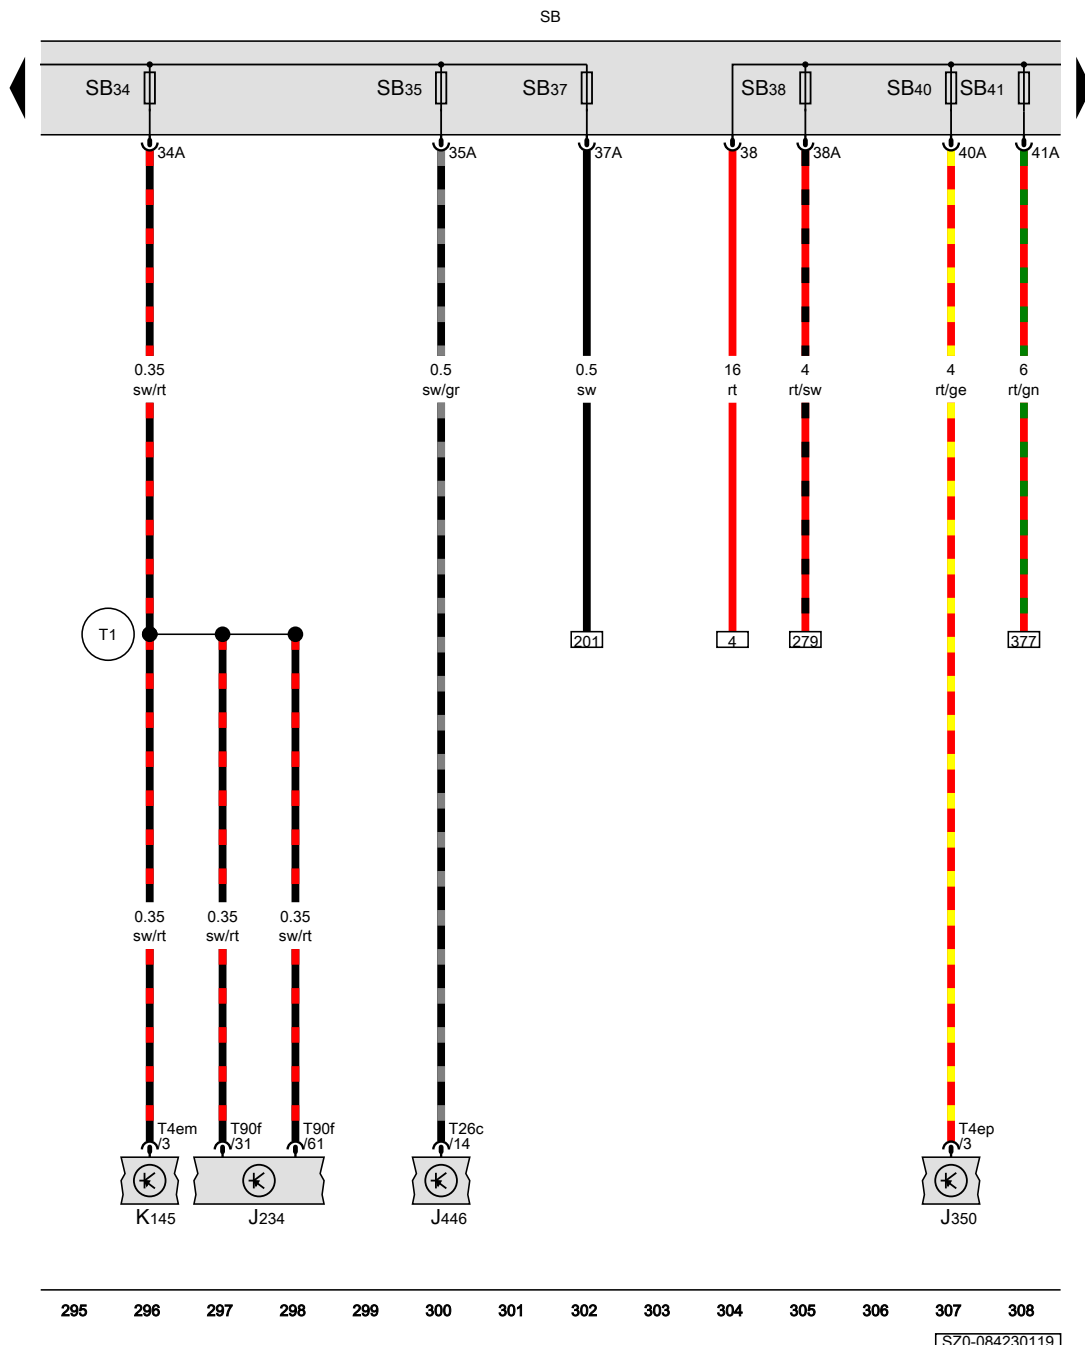


Fuse holder B

- J234 Airbag control unit
- J350 Warm air blower control unit
- J446 Parking aid control unit
- K145 Warning lamp for airbag deactivated on front passenger side
- SB Fuse holder B
- SB34 Fuse 34 on fuse holder B
- SB35 Fuse 35 on fuse holder B
- SB37 Fuse 37 on fuse holder B
- SB38 Fuse 38 on fuse holder B
- SB40 Fuse 40 on fuse holder B
- SB41 Fuse 41 on fuse holder B
- T4em 4-pin connector, black
- T4ep 4-pin connector, black
- T26c 26-pin connector, black
- T90f 90-pin connector, yellow


T1 Positive connection 1, in airbag wiring harness

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

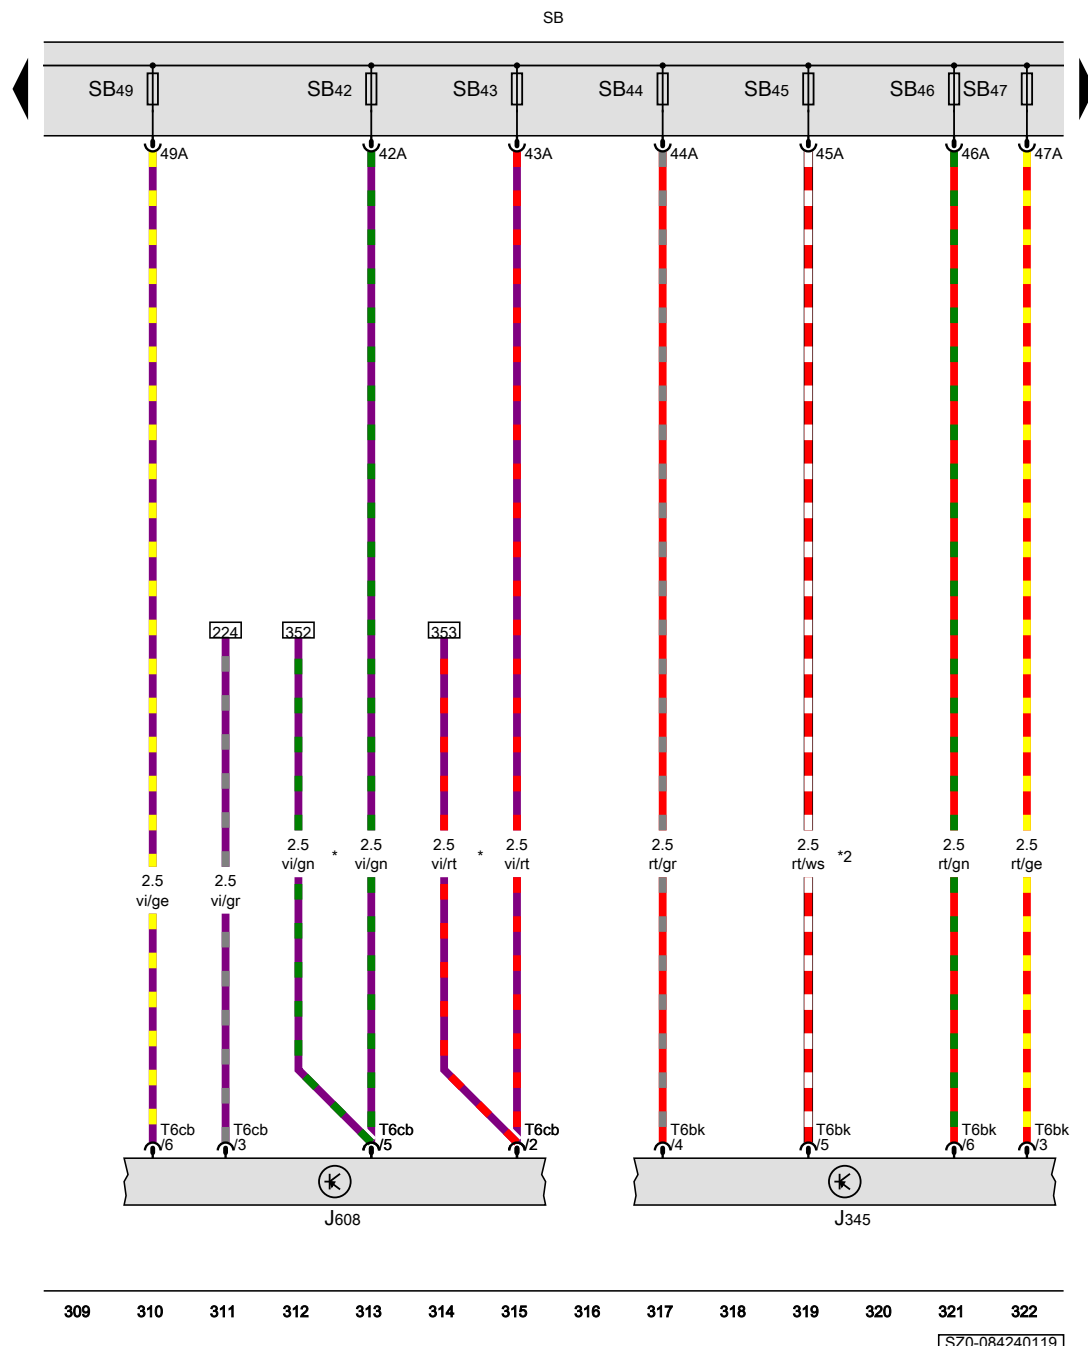

Fuse holder B

- J345 Trailer detector control unit
- J608 Special vehicle control unit
- SB Fuse holder B
- SB42 Fuse 42 on fuse holder B
- SB43 Fuse 43 on fuse holder B
- SB44 Fuse 44 on fuse holder B
- SB45 Fuse 45 on fuse holder B
- SB46 Fuse 46 on fuse holder B
- SB47 Fuse 47 on fuse holder B
- SB49 Fuse 49 on fuse holder B
- T6bk 6-pin connector, black
- T6cb 6-pin connector, blue
- * For models with second battery
- *2 According to equipment

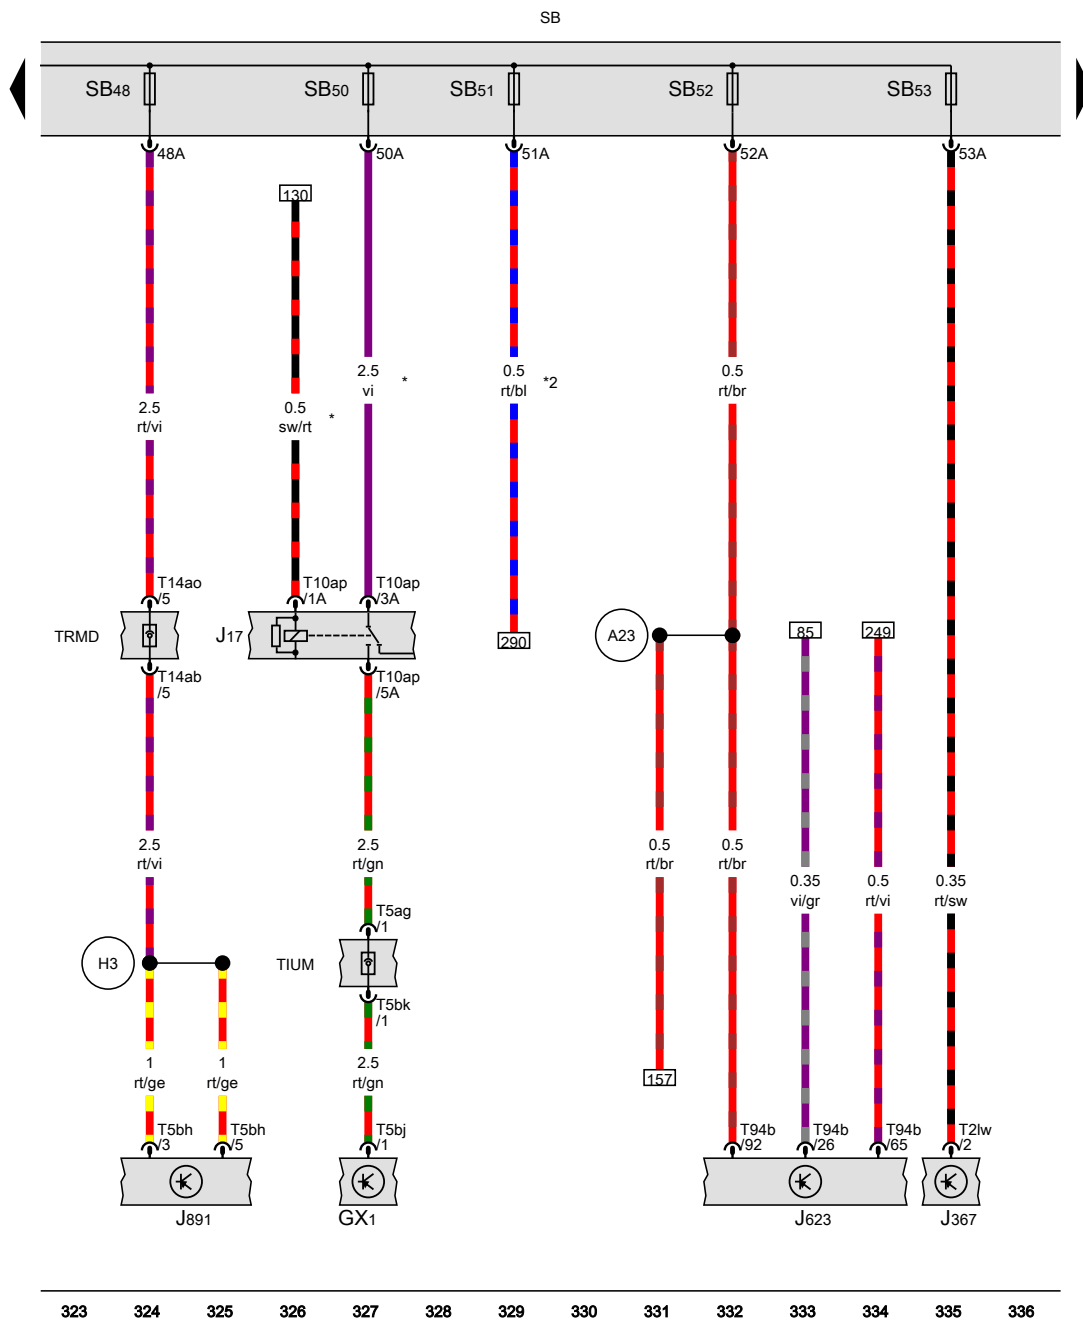

Fuse holder B


- GX1 Fuel delivery unit
- J17 Fuel pump relay
- J367 Battery monitor control unit
- J623 Engine/motor control unit
- J891 Control unit for reducing agent heater
- SB Fuse holder B
- SB48 Fuse 48 on fuse holder B
- SB50 Fuse 50 on fuse holder B
- SB51 Fuse 51 on fuse holder B
- SB52 Fuse 52 on fuse holder B
- SB53 Fuse 53 on fuse holder B
- T2lw 2-pin connector, black
- T5ag 5-pin connector, black
- T5bh 5-pin connector, colourless
- T5bj 5-pin connector, black
- T5bk 5-pin connector
- T10ap 10-pin connector
- T14ab 14-pin connector, black
- T14ao 14-pin connector, black
- T94b 94-pin connector, black
- TIUM Coupling point in interior, below centre
- TRMD Coupling point for reducing agent metering system

- A23 Connection (30al), in dash panel wiring harness
- H3 Connection 1 in wiring harness for reducing agent tank

- * According to equipment
- *2 For models with telematics

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

1570-0842501191

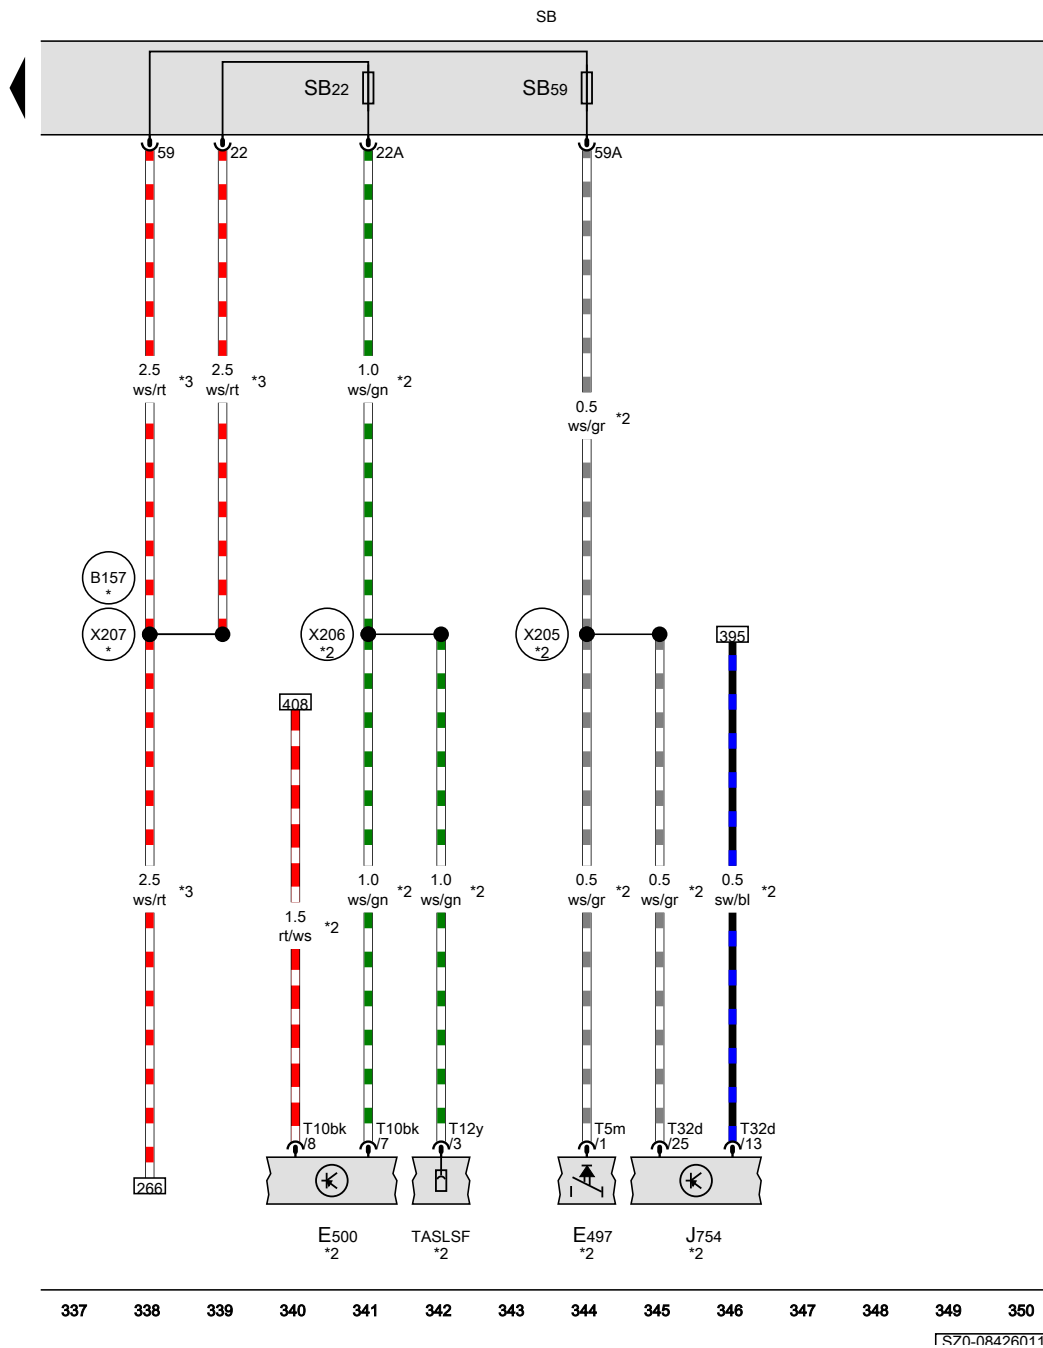

Fuse holder B

- E497 Accident data recorder button
- E500 Alarm rotary and pull switch
- J754 Accident data memory
- SB Fuse holder B
- SB22 Fuse 22 on fuse holder B
- SB59 Fuse 59 on fuse holder B
- T5m 5-pin connector, black
- T10bk 10-pin connector, black
- T12y 12-pin connector, black
- T32d 32-pin connector, black

TASLSF Coupling point on left A-pillar for special vehicles

B157 Positive connection 3 (15a), in interior wiring harness

X205 Connection 1 (15a), in special vehicle wiring harness

X206 Connection 2 (15a), in special vehicle wiring harness


X207 Connection 3 (15a), in special vehicle wiring harness

* According to equipment

*2 For models with special police equipment

*3 From December 2017


ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink

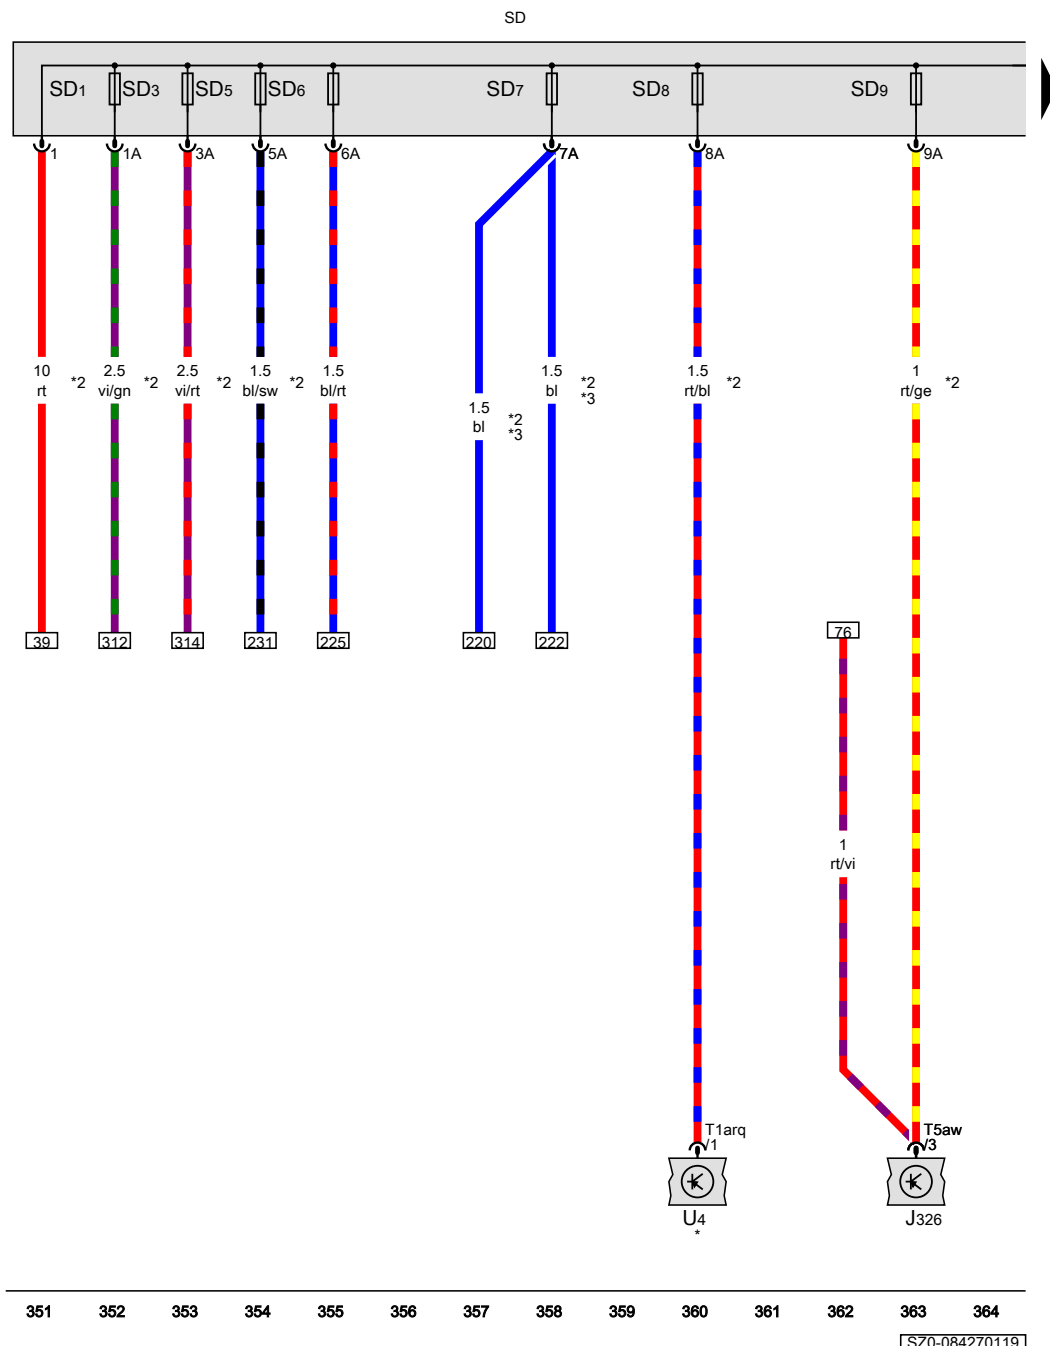

Fuse holder D

- J326 Rotating light relay
- SD Fuse holder D
- SD1 Fuse 1 on fuse holder D
- SD3 Fuse 3 on fuse holder D
- SD5 Fuse 5 on fuse holder D
- SD6 Fuse 6 on fuse holder D
- SD7 Fuse 7 on fuse holder D
- SD8 Fuse 8 on fuse holder D
- SD9 Fuse 9 on fuse holder D
- T1arq 1-pin connector, colourless
- T5aw 5-pin connector, brown
- U4 Two-way radio socket
- * Only applicable to special vehicles
- *2 For models with second battery
- *3 According to equipment

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

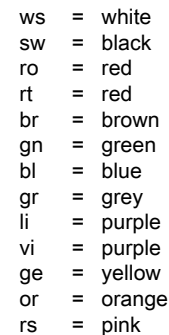

J47	Heated windscreen relay
J604	Auxiliary air heater control unit
J611	Heated windscreen relay 2
J1114	Rotating light control unit
SD	Fuse holder D
SD10	Fuse 10 on fuse holder D
SD11	Fuse 11 on fuse holder D
SD12	Fuse 12 on fuse holder D
T2ny	2-pin connector, black
T2nz	2-pin connector, black
T4fs	4-pin connector, black
T8es	8-pin connector, black
T9g	9-pin connector, grey
T10z	10-pin connector, black
Z2	Heated windscreen


* For models with second battery
*2 According to equipment

Coupling point in engine compartment, left

- N290 Fuel metering valve
- N428 Valve for oil pressure control
- T2jf 2-pin connector, black
- T2jq 2-pin connector, black
- T3gs 3-pin connector, black
- T14ag 14-pin connector, black
- T14ak 14-pin connector, black
- TML Coupling point in engine compartment, left
- V488 Auxiliary pump for heating

D42 Connection 4, in engine prewiring harness


* see applicable current flow diagram for engine

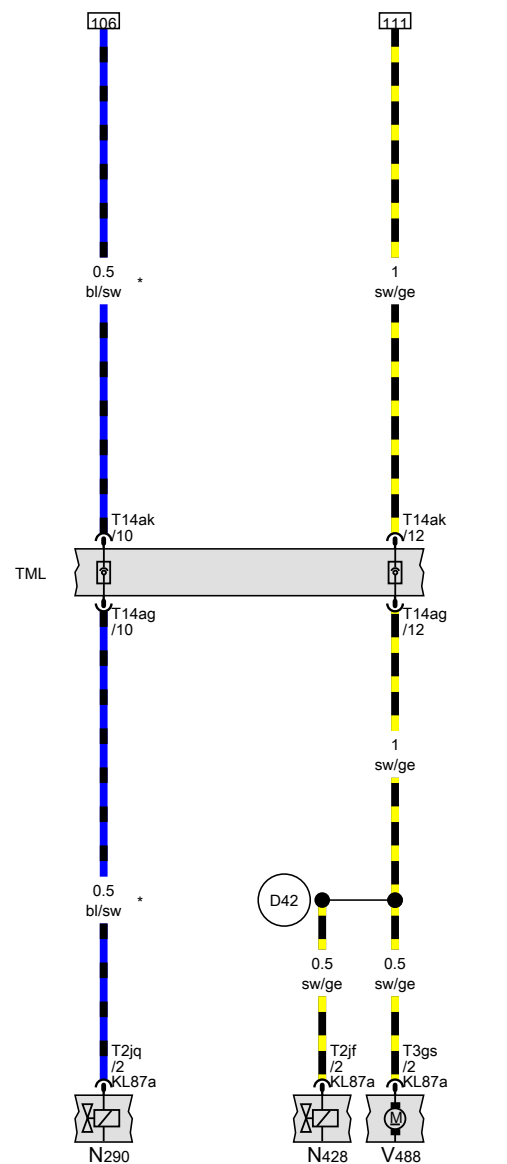


- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

Fuse holder J

- J84 Two-way radio voltage relay
- L347 LED module for additional reading light, special vehicles
- SJ Fuse holder J
- SJ1 Fuse 1 on fuse holder J
- SJ2 Fuse 2 on fuse holder J
- SJ4 Fuse 4 on fuse holder J
- SJ6 Fuse 6 on fuse holder J
- SR7 Relay and fuse carrier 7
- SJ9 Fuse 9 on fuse holder J
- T3c 3-pin connector, black
- T3d 3-pin connector, black
- T3e 3-pin connector, black
- T3f 3-pin connector, black
- T3g 3-pin connector, black
- T3h 3-pin connector, black
- T5n 5-pin connector, black
- T9a 9-pin connector, black
- U83 12 V socket for special vehicles
- W43 Rear interior light
- W47 Rear left interior light
- W48 Rear right interior light
- W60 Folding table light
- W106 Folding table light 2
- X220 Positive connection 1 (30a) in special vehicle wiring harness
- X224 Positive connection 5 (30a) in special vehicle wiring harness
- * For models with special police equipment

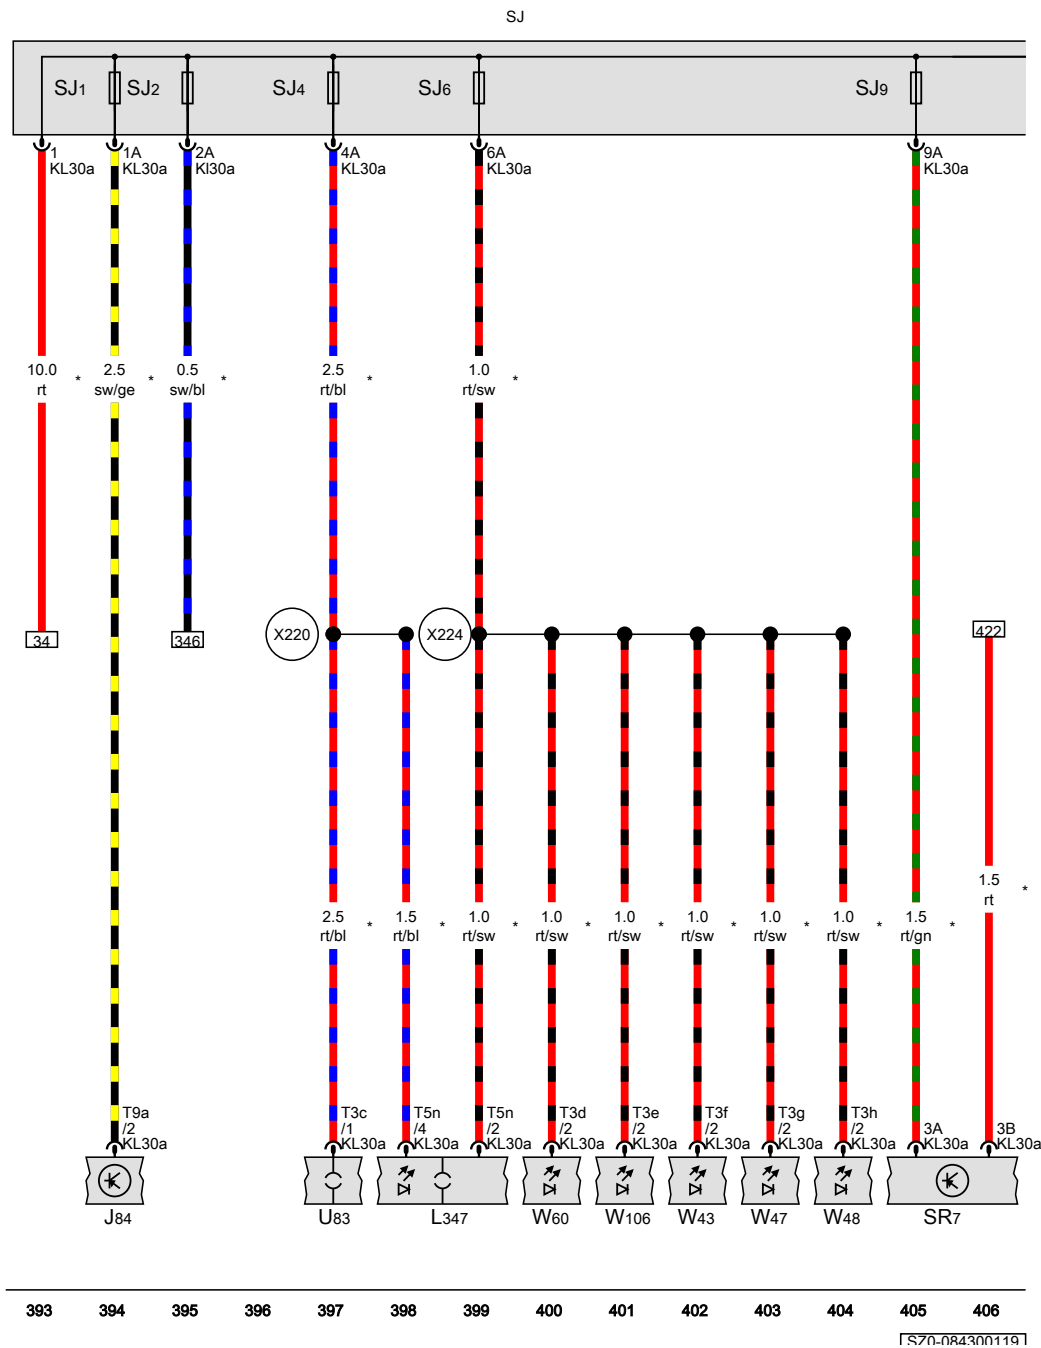


17S70-084300119

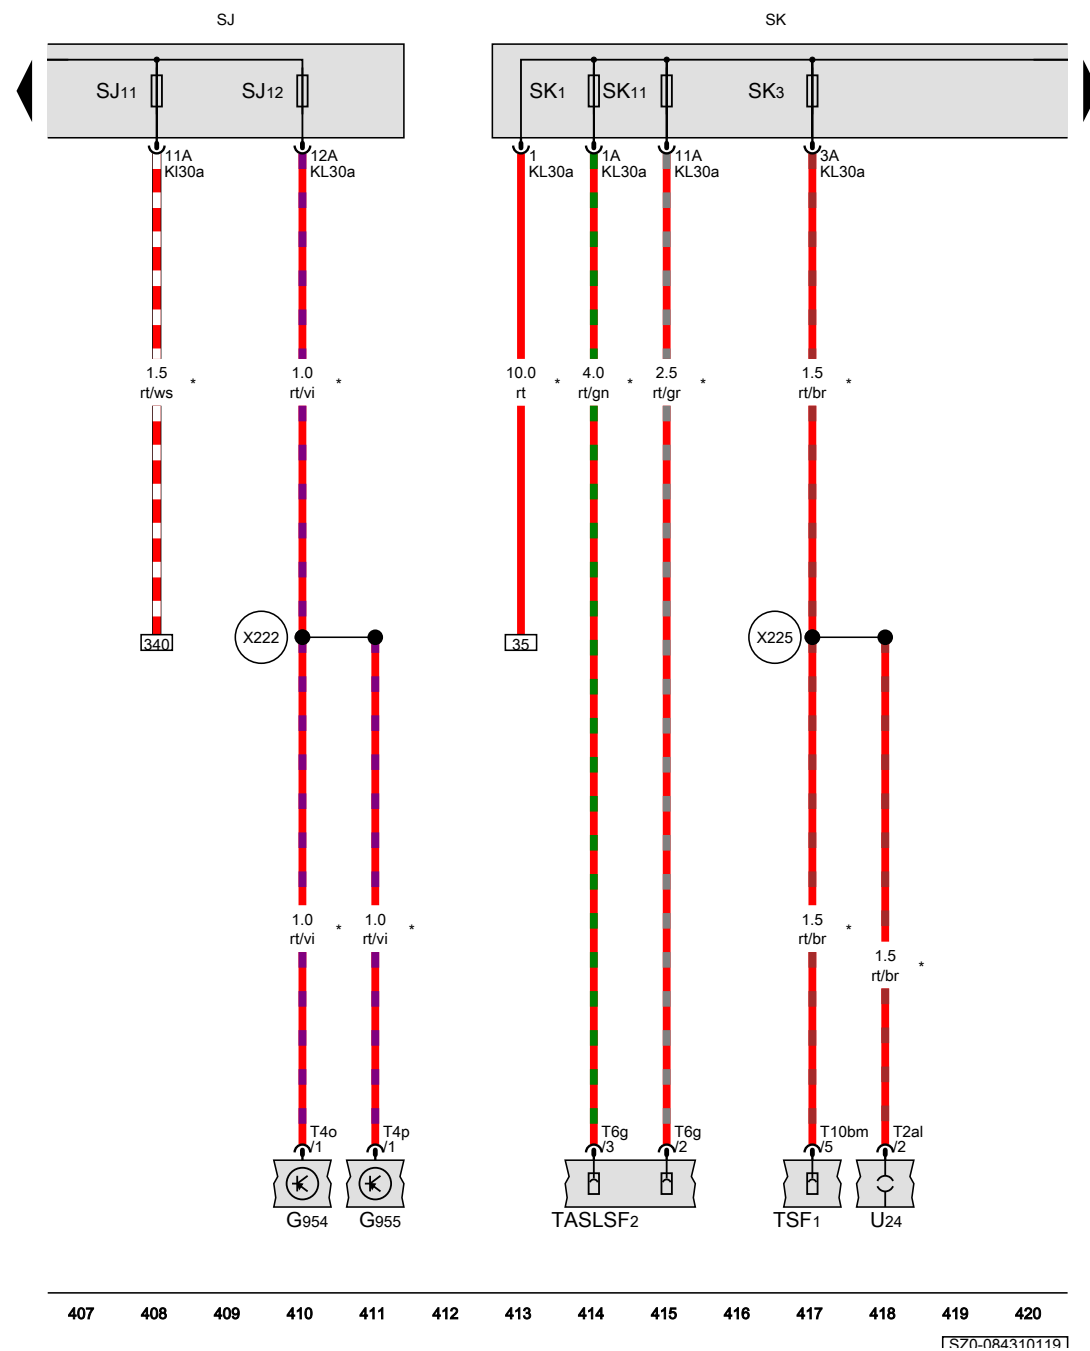

Fuse holder J, Fuse holder K

- G954 Front stop command light
- G955 Rear stop command light
- SJ Fuse holder J
- SK1 Fuse 1 on fuse holder K
- SK3 Fuse 3 on fuse holder K
- SK11 Fuse 11 on fuse holder K
- SJ11 Fuse 11 on fuse holder J
- SJ12 Fuse 12 on fuse holder J
- SK Fuse holder K
- T2al 2-pin connector, black
- T4o 4-pin connector, black
- T4p 4-pin connector, black
- T6g 6-pin connector, black
- T10bm 10-pin connector, black
- TSF1 Coupling point for special vehicles
- TASLSF Coupling point 2 on left A-pillar for special vehicles
- 2
- U24 Charging station for hand-held 2-way radio
- X222 Positive connection 3 (30a) in special vehicle wiring harness
- X225 Positive connection 6 (30a) in special vehicle wiring harness
- * For models with special police equipment

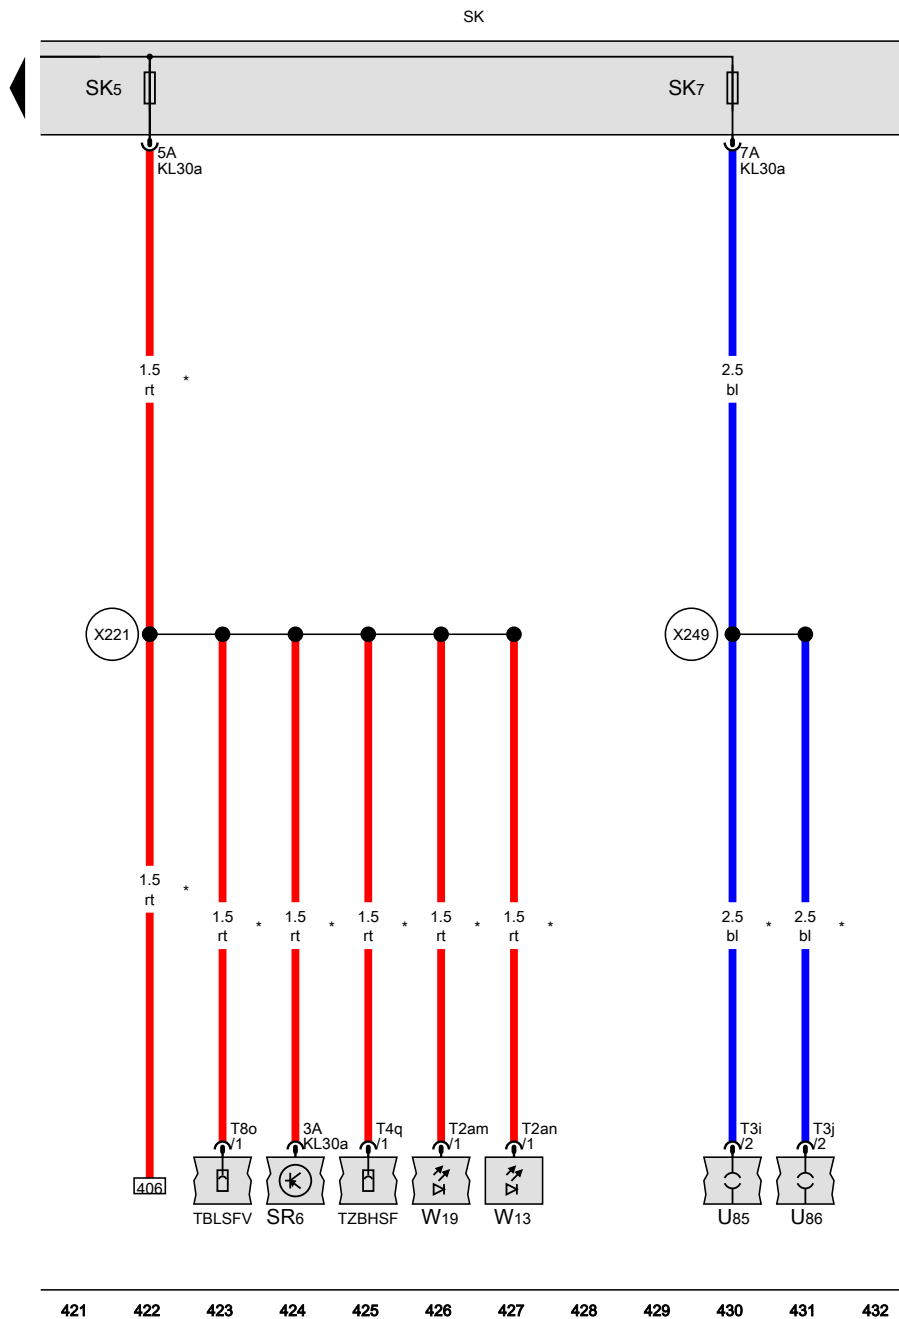

Fuse holder K

- SK Fuse holder K
- SK5 Fuse 5 on fuse holder K
- SR6 Relay and fuse carrier 6
- SK7 Fuse 7 on fuse holder K
- T2am 2-pin connector, black
- T2an 2-pin connector, black
- T3i 3-pin connector, black
- T3j 3-pin connector, black
- T4q 4-pin connector, black
- T8o 8-pin connector, black
- TBLSFV Coupling point for front flashing lights in special vehicle
- TZBHSF Coupling point for rear additional lighting on special vehicle
- U85 12 V socket 3 for special vehicles
- U86 12 V socket 4 for special vehicles
- W13 Front passenger reading light
- W19 Driver side reading light
- X221 Positive connection 2 (30a) in special vehicle wiring harness
- X249 Connection 5 in special vehicle wiring harness
- * For models with special police equipment


ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

1S70-084320119

Climatronic , EBHA

From December 2017


Heater and air conditioning controls, Fresh air blower control unit, Climatronic control unit, Fresh air blower

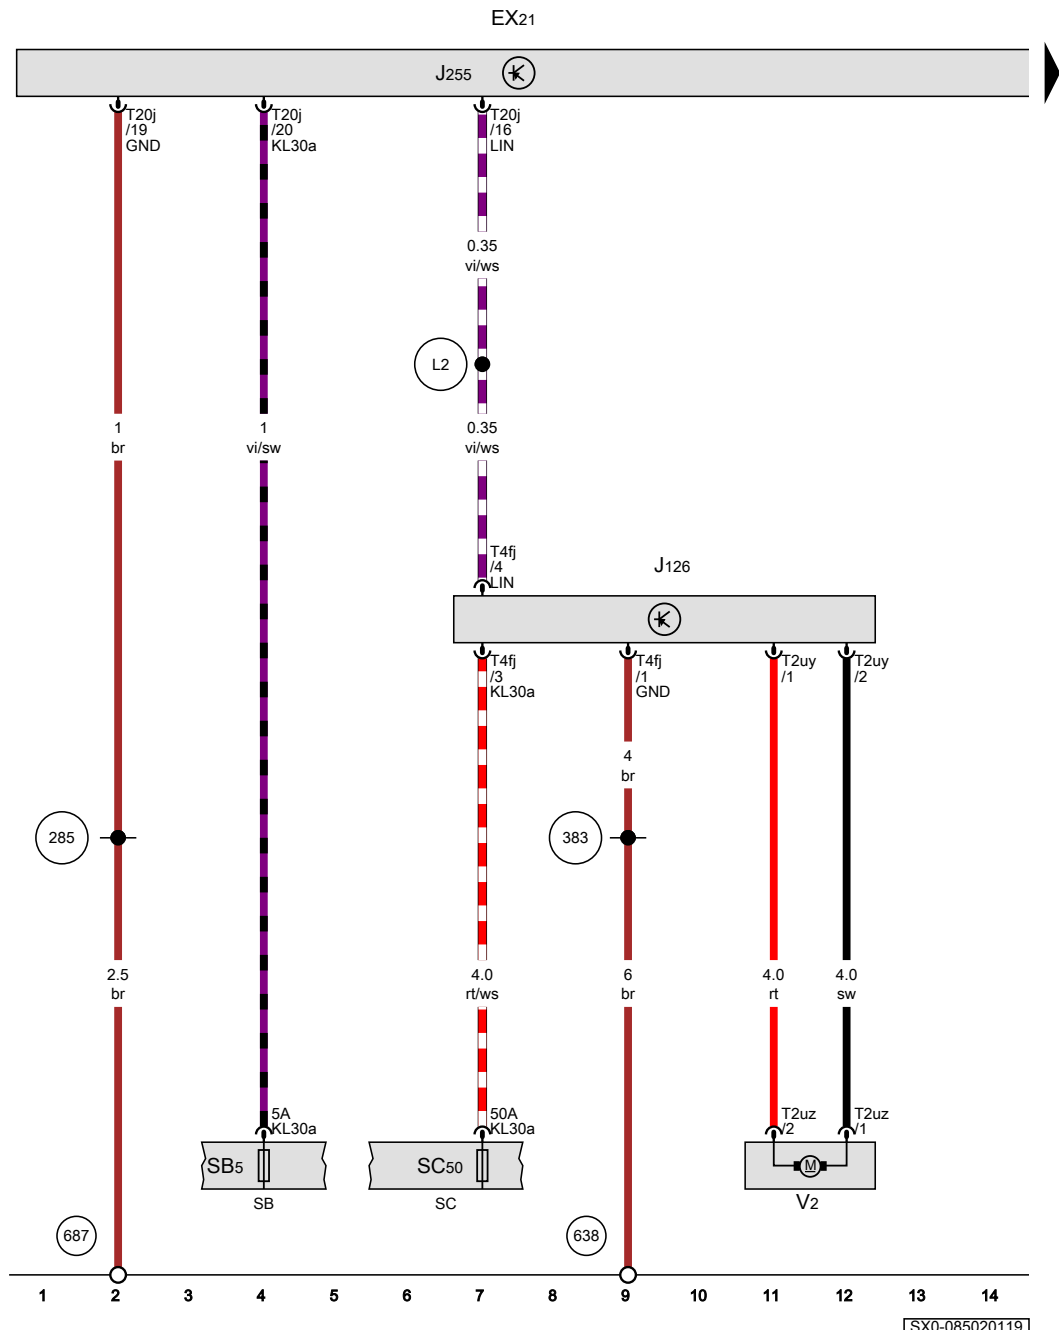

- EX21 Heater and air conditioning controls
- J126 Fresh air blower control unit
- J255 Climatronic control unit
- SB Fuse holder B
- SB5 Fuse 5 on fuse holder B
- SC Fuse holder C
- SC50 Fuse 50 on fuse holder C
- T2uy 2-pin connector, black
- T2uz 2-pin connector
- T4fj 4-pin connector, black
- T20j 20-pin connector, black
- V2 Fresh air blower

- 285 Earth connection 7, in interior wiring harness
- 383 Earth connection 18, in main wiring harness
- 638 Earth point, on right A-pillar
- 687 Earth point 1, on centre tunnel
- L2 Connection in air conditioning system wiring harness


- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

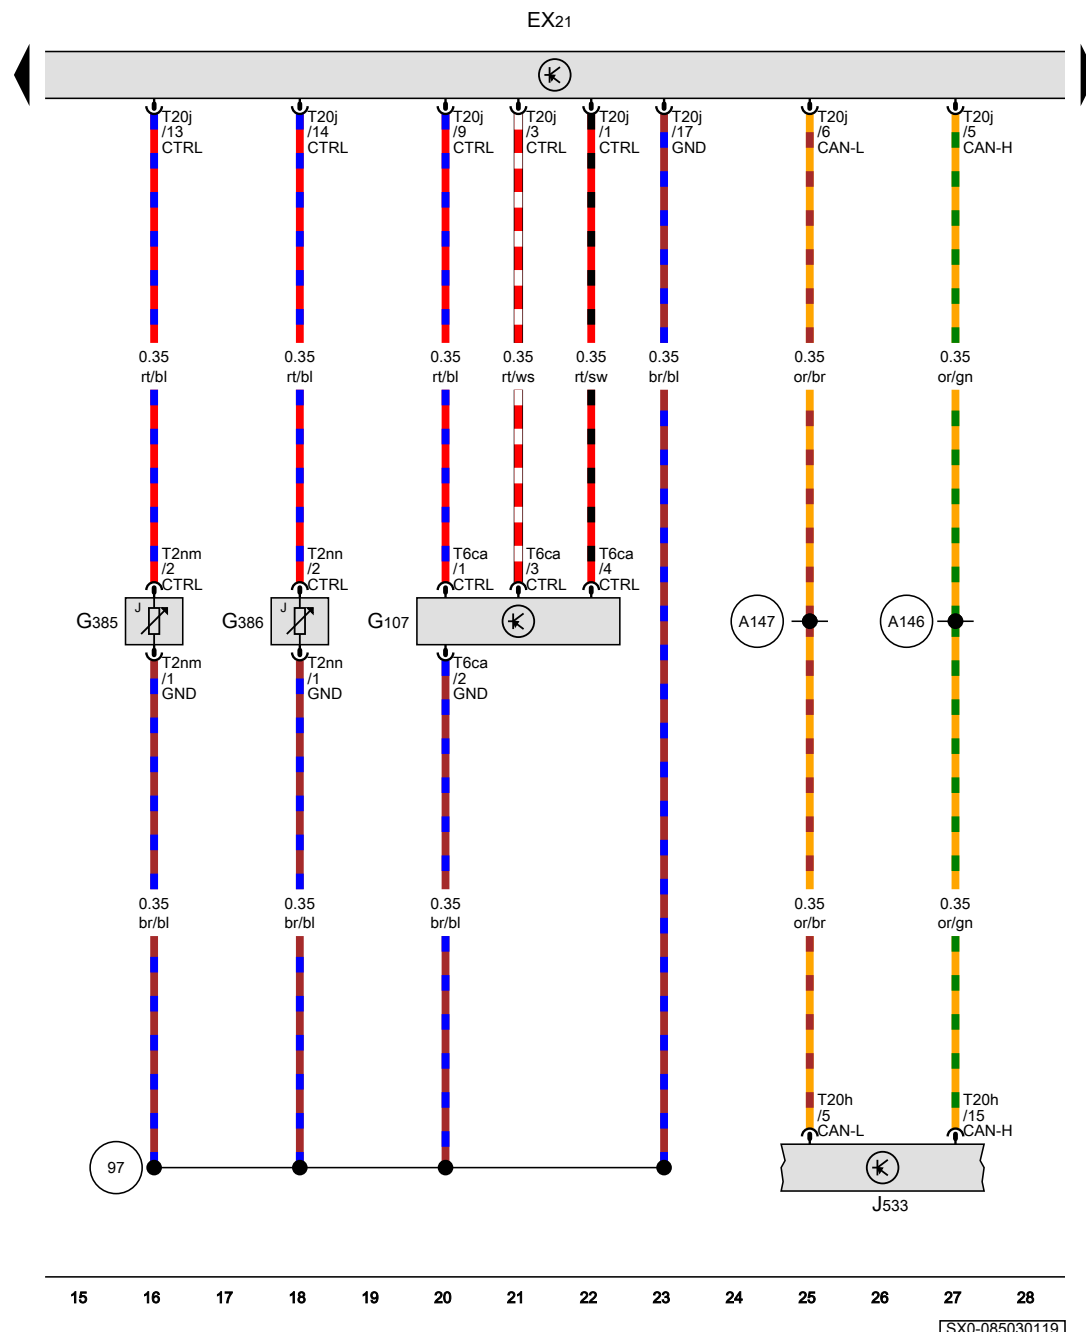

Heater and air conditioning controls, Sunlight penetration photosensor, Front left chest vent temperature sensor, Front right chest vent temperature sensor

- EX21 Heater and air conditioning controls
- G107 Sunlight penetration photosensor
- G385 Front left chest vent temperature sensor
- G386 Front right chest vent temperature sensor
- J533 Data bus diagnostic interface
- T2nm 2-pin connector, black
- T2nn 2-pin connector, black
- T6ca 6-pin connector, black
- T20h 20-pin connector, red
- T20j 20-pin connector, black

- 97 Earth connection 1, in air conditioning system wiring harness
- A146 Connection (convenience CAN bus, high), in dash panel wiring harness
- A147 Connection (convenience CAN bus, low), in dash panel wiring harness

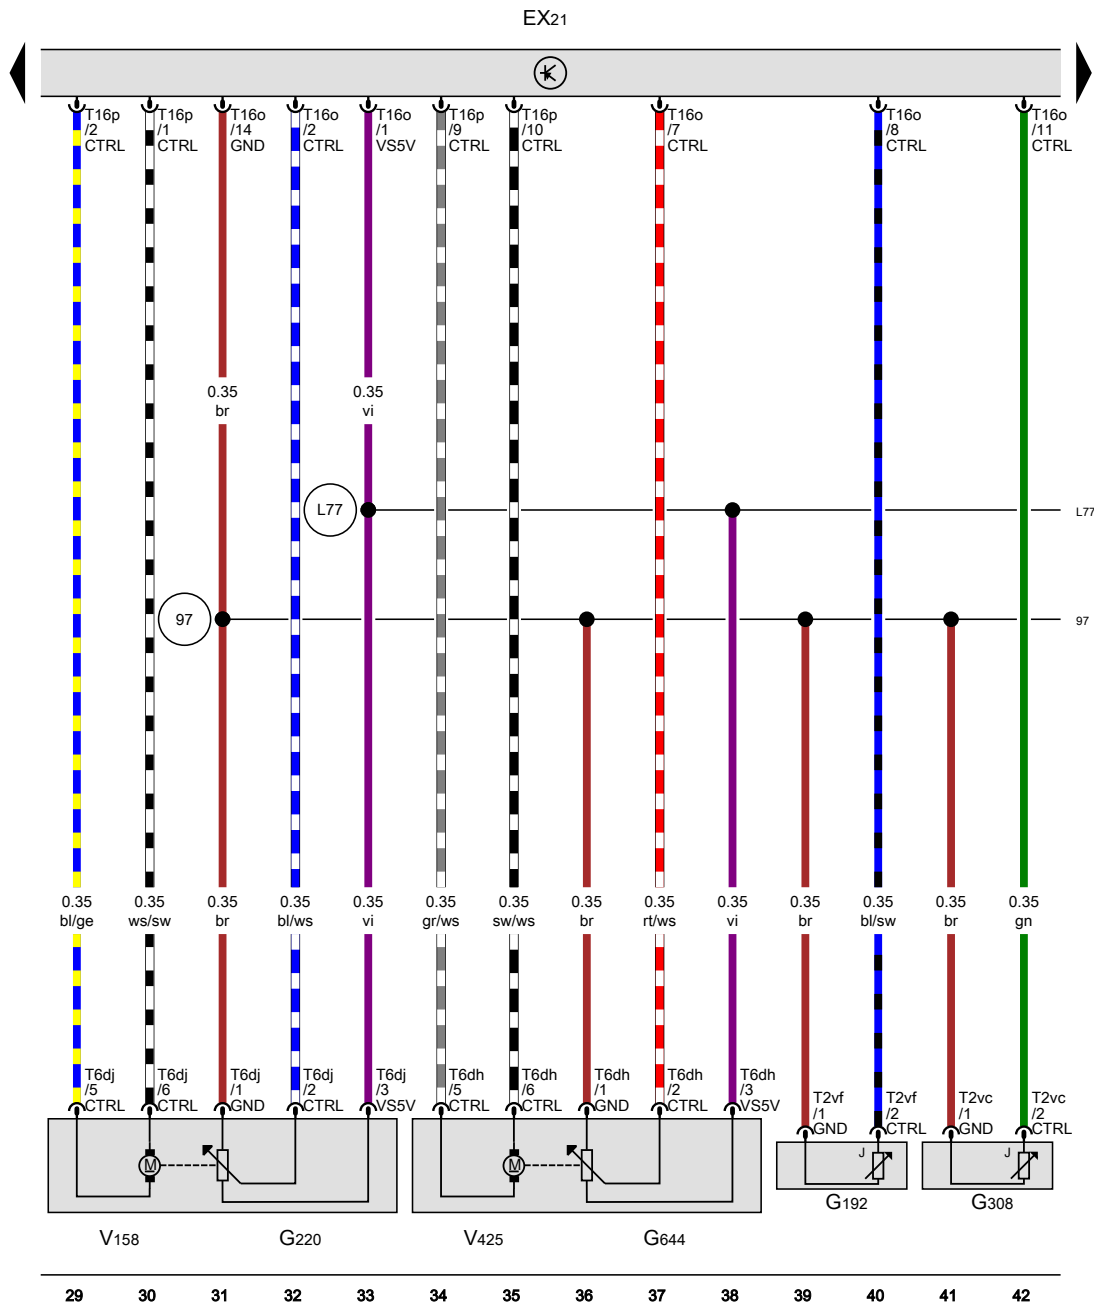

Heater and air conditioning controls, Footwell vent temperature sender, Evaporator temperature sensor, Left temperature flap control motor, Fresh air/air recirculation, air flow flap control motor


- EX21 Heater and air conditioning controls
- G192 Footwell vent temperature sender
- G220 Potentiometer for left temperature flap control motor
- G308 Evaporator temperature sensor
- G644 Potentiometer for fresh air/air recirculation, air flow flap control motor
- T2vc 2-pin connector, black
- T2vf 2-pin connector, black
- T6dh 6-pin connector, black
- T6dj 6-pin connector
- T16o 16-pin connector
- T16p 16-pin connector, black
- V158 Left temperature flap control motor
- V425 Fresh air/air recirculation, air flow flap control motor

97 Earth connection 1, in air conditioning system wiring harness

L77 Connection, in fresh air blower wiring harness

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

191140508-01

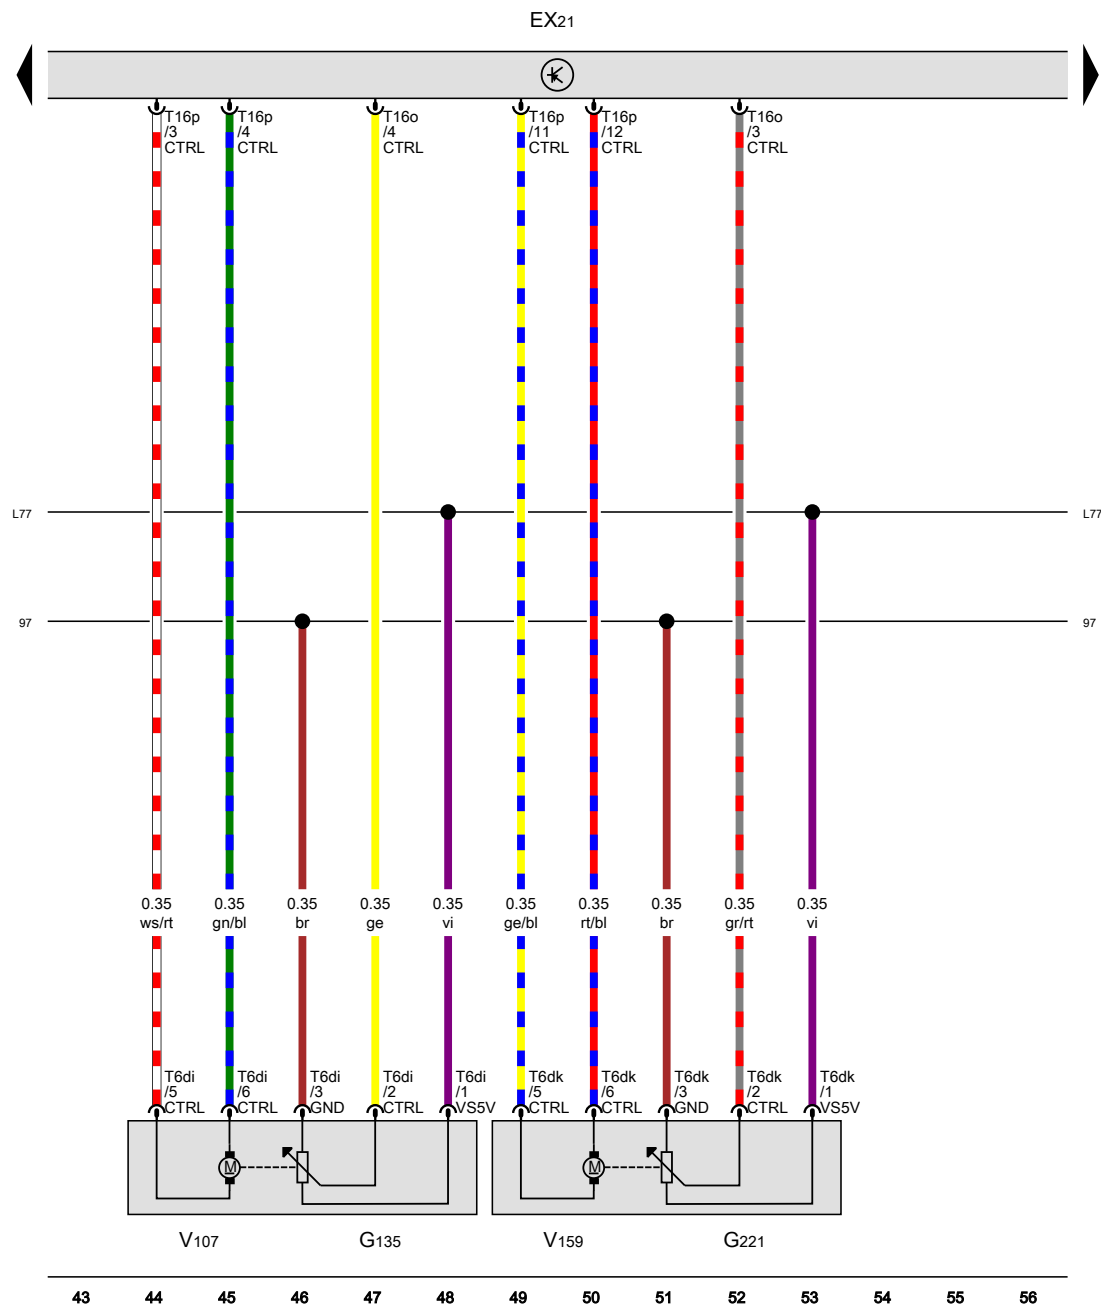


Heater and air conditioning controls, Defroster flap control motor, Right temperature flap control motor

- EX21 Heater and air conditioning controls
- G135 Potentiometer for defroster flap control motor
- G221 Potentiometer for right temperature flap control motor
- T6di 6-pin connector
- T6dk 6-pin connector, black
- T16o 16-pin connector
- T16p 16-pin connector, black
- V107 Defroster flap control motor
- V159 Right temperature flap control motor

- 97 Earth connection 1, in air conditioning system wiring harness
- L77 Connection, in fresh air blower wiring harness

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink


15X0-085050119

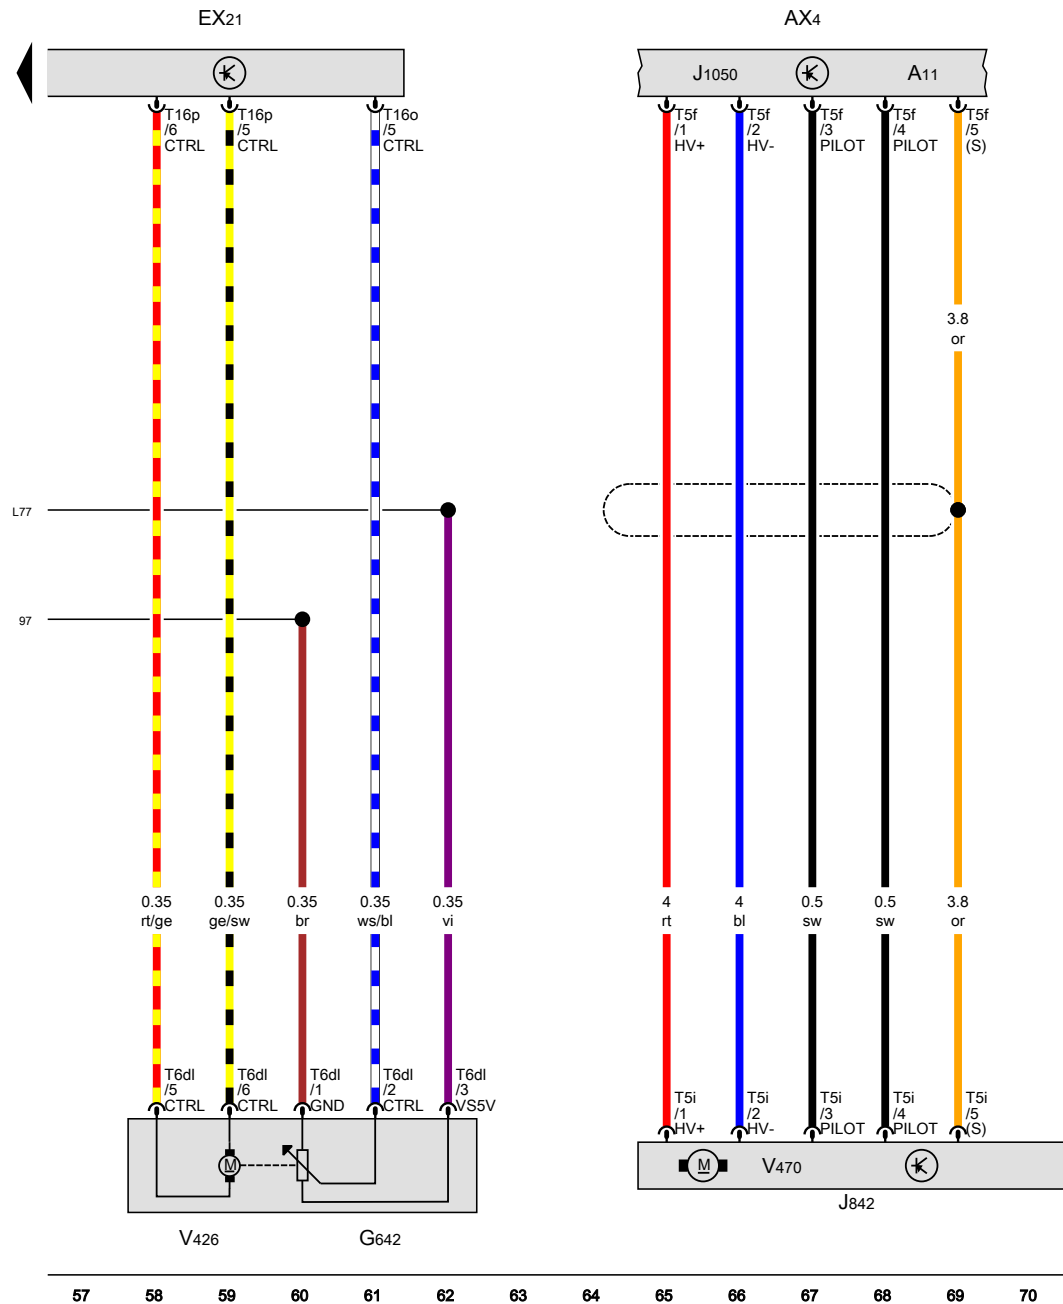

Charging unit 1 for high-voltage battery, Heater and air conditioning controls, Control unit for air conditioning compressor, Front air distribution flap control motor

- AX4 Charging unit 1 for high-voltage battery
- A11 Onboard charging unit
- EX21 Heater and air conditioning controls
- G642 Potentiometer for front air distribution flap control motor
- J842 Control unit for air conditioning compressor
- J1050 Control unit for high-voltage battery charging unit
- T5f 5-pin connector, black
- T5i 5-pin connector, black
- T6dl 6-pin connector, black
- T16o 16-pin connector
- T16p 16-pin connector, black
- V426 Front air distribution flap control motor
- V470 Electrical air conditioner compressor

- 97 Earth connection 1, in air conditioning system wiring harness
- L77 Connection, in fresh air blower wiring harness

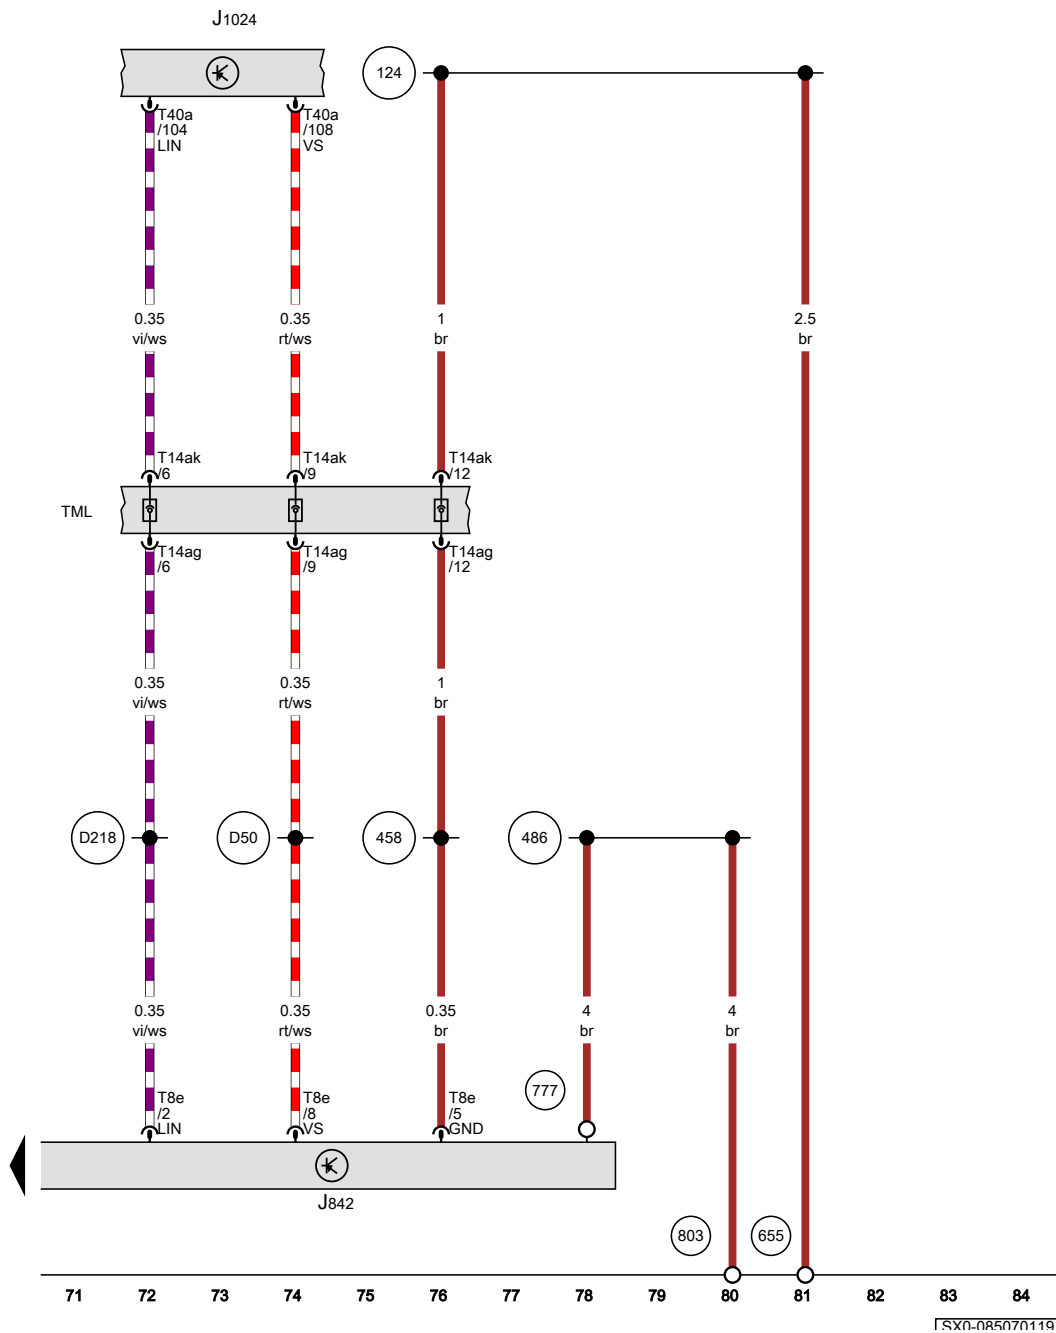


ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

Control unit for air conditioning compressor, Thermal management control unit

- J842 Control unit for air conditioning compressor
- J1024 Thermal management control unit
- T8e 8-pin connector, black
- T14ag 14-pin connector, grey
- T14ak 14-pin connector, grey
- T40a 40-pin connector
- TML Coupling point in engine compartment, left
- 124 Earth connection, in right side engine compartment wiring harness
- 458 Earth point 3, engine prewiring harness
- 486 Earth point 4, engine prewiring harness
- 655 Earth point, on left headlight
- 777 Earth point for air conditioner compressor
- 803 Earth point on cross member for drive motor
- D50 Positive connection (30), in engine compartment wiring harness
- D218 Connection 1 (LIN bus) in engine compartment wiring harness

Auxiliary heater , (7VF),(7VM),(9M4)

From July 2018

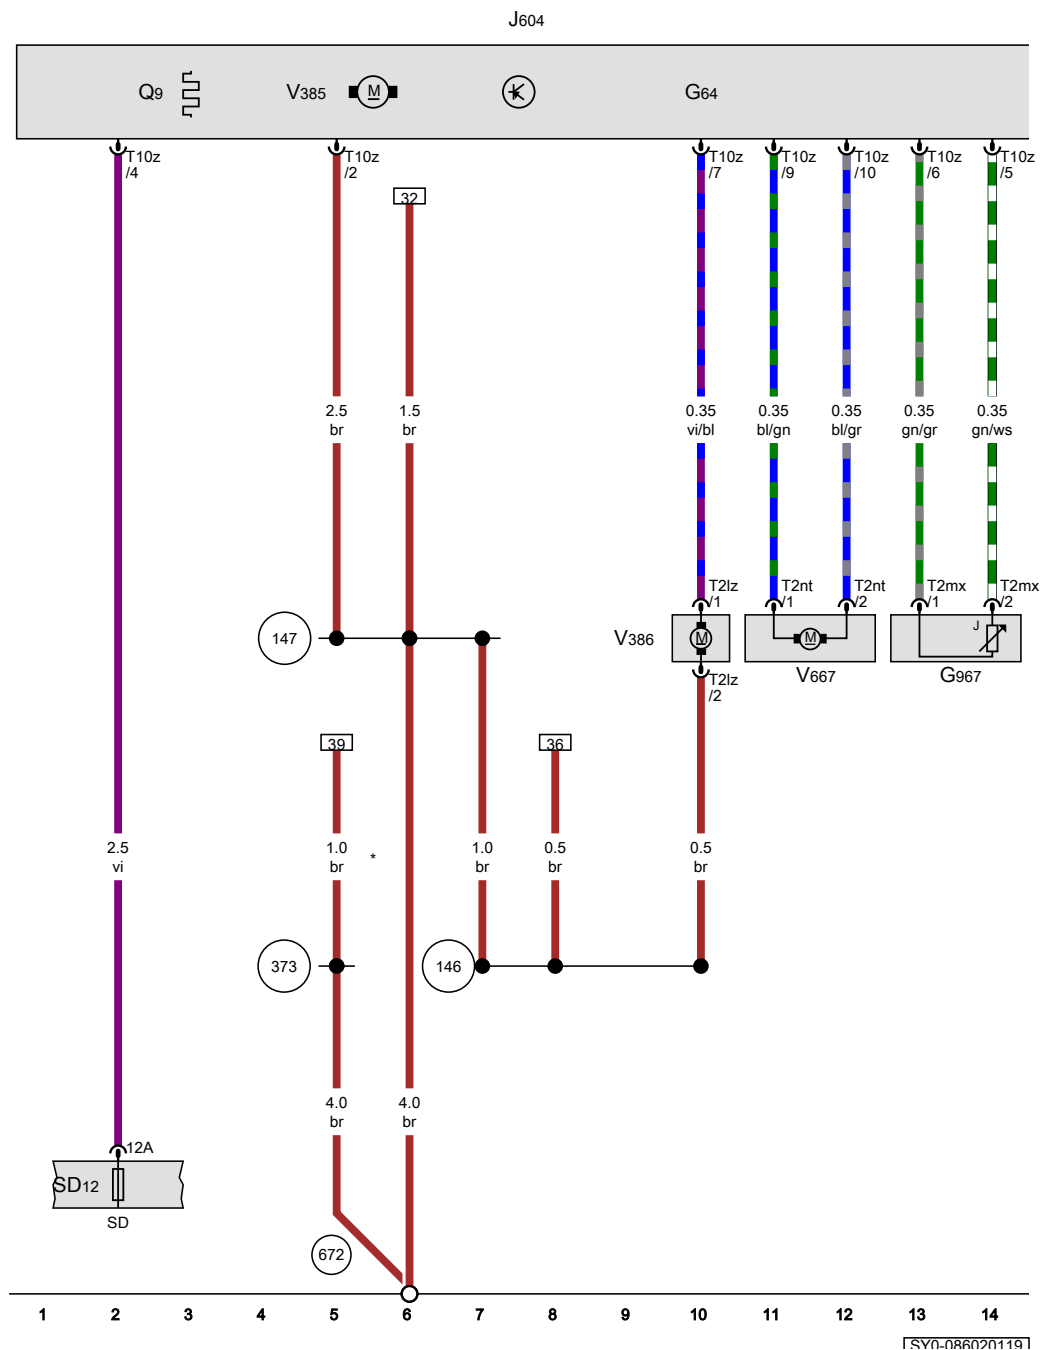


Temperature sensor on roof for air inlet on auxiliary air heater, Auxiliary air heater control unit, Metering pump 2, Air distribution flap control motor 2

- G64 Flame monitor
- G967 Temperature sensor on roof for air inlet on auxiliary air heater
- J604 Auxiliary air heater control unit
- Q9 Glow plug for heater
- SD Fuse holder D
- SD12 Fuse 12 on fuse holder D
- T2lz 2-pin connector, black
- T2mx 2-pin connector, black
- T2nt 2-pin connector, black
- T10z 10-pin connector, black
- V385 Combustion air blower 2
- V386 Metering pump 2
- V667 Air distribution flap control motor 2

- 146 Earth connection 1, in auxiliary heater wiring harness
- 147 Earth connection 2, in auxiliary heater wiring harness
- 373 Earth connection 8, in main wiring harness
- 672 Earth point 2, on front of left longitudinal member
- * For models with 2nd heat exchanger


- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

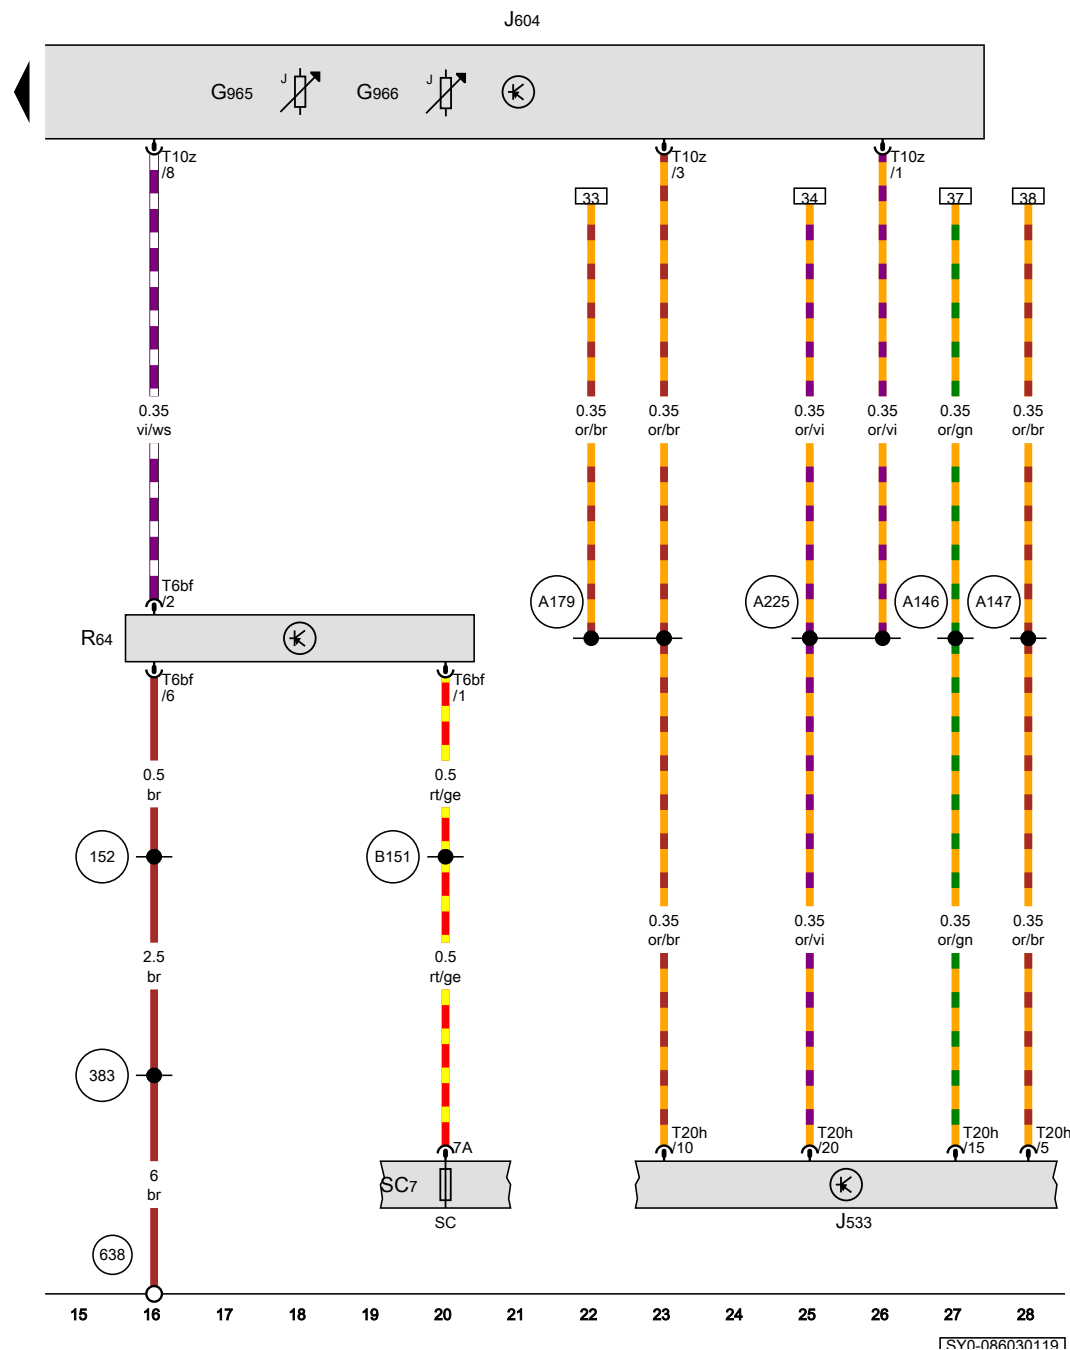

Auxiliary air heater control unit, Remote control receiver for auxiliary heater, Positive connection 3 (30a), in interior wiring harness

- G965 Temperature sensor for air inlet on auxiliary air heater
- G966 Temperature sensor for air outlet on auxiliary air heater
- J533 Data bus diagnostic interface
- J604 Auxiliary air heater control unit
- R64 Remote control receiver for auxiliary heater
- SC Fuse holder C
- SC7 Fuse 7 on fuse holder C
- T6bf 6-pin connector, blue
- T10z 10-pin connector, black
- T20h 20-pin connector, red

- 152 Earth connection 2, in front wiring harness
- 383 Earth connection 18, in main wiring harness
- 638 Earth point, on right A-pillar
- A146 Connection (convenience CAN bus, high), in dash panel wiring harness
- A147 Connection (convenience CAN bus, low), in dash panel wiring harness
- A179 Connection (infotainment CAN bus, low), in dash panel wiring harness
- A225 Connection 2 (infotainment CAN bus, high) in dash panel wiring harness
- B151 Positive connection 3 (30a), in interior wiring harness

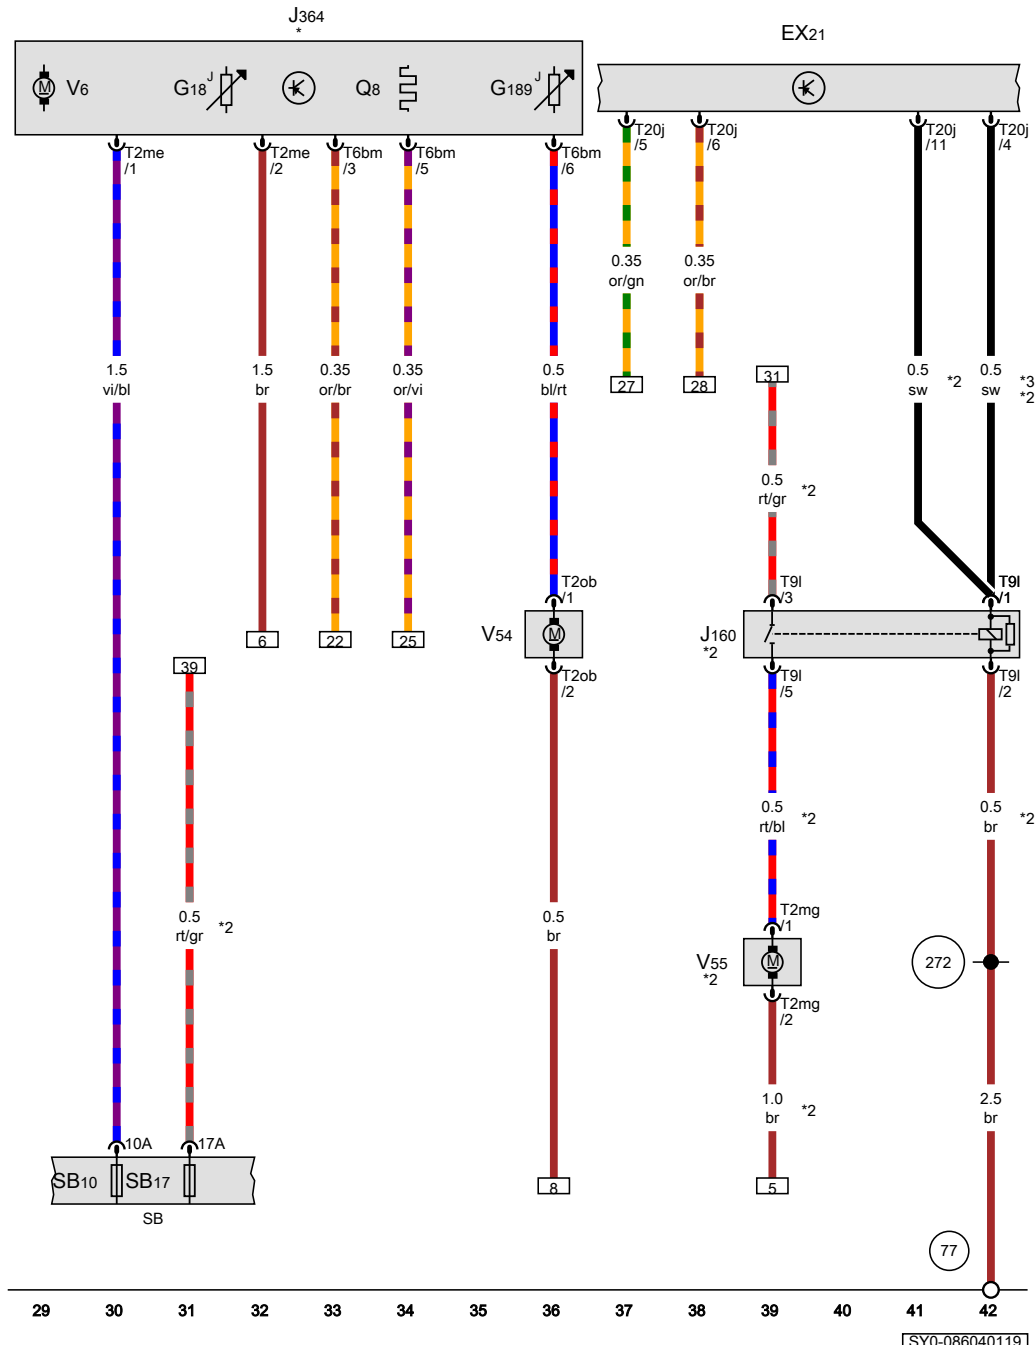

**Circulation pump relay, Auxiliary heater control unit,
Metering pump, Circulation pump**

- | | |
|------|--------------------------------------|
| EX21 | Heater and air conditioning controls |
| G18 | Temperature sensor |
| G189 | Overheating sensor |
| J160 | Circulation pump relay |
| J364 | Auxiliary heater control unit |
| Q8 | Glow plug with flame monitor |
| SB | Fuse holder B |
| SB10 | Fuse 10 on fuse holder B |
| SB17 | Fuse 17 on fuse holder B |
| T2me | 2-pin connector, black |
| T2mg | 2-pin connector, black |
| T2ob | 2-pin connector, black |
| T6bm | 6-pin connector, black |
| T9l | 9-pin connector, black |
| T20j | 20-pin connector, black |
| V6 | Combustion air blower |
| V54 | Metering pump |
| V55 | Circulation pump |

(77) Earth point, lower part of left B-pillar

(272) Earth connection 4, in front wiring harness

* For models with auxiliary coolant heater (supplementary heater)

*2 For models with 2nd heat exchanger


*3 For models with Climatronic

ws	=	white
sw	=	black
ro	=	red
rt	=	red
br	=	brown
gn	=	green
bl	=	blue
gr	=	grey
li	=	purple
vi	=	purple
ge	=	yellow
or	=	orange
rs	=	pink


Basic equipment

From November 2017

Battery, Starter relay 1, Starter relay 2, Fuse holder B

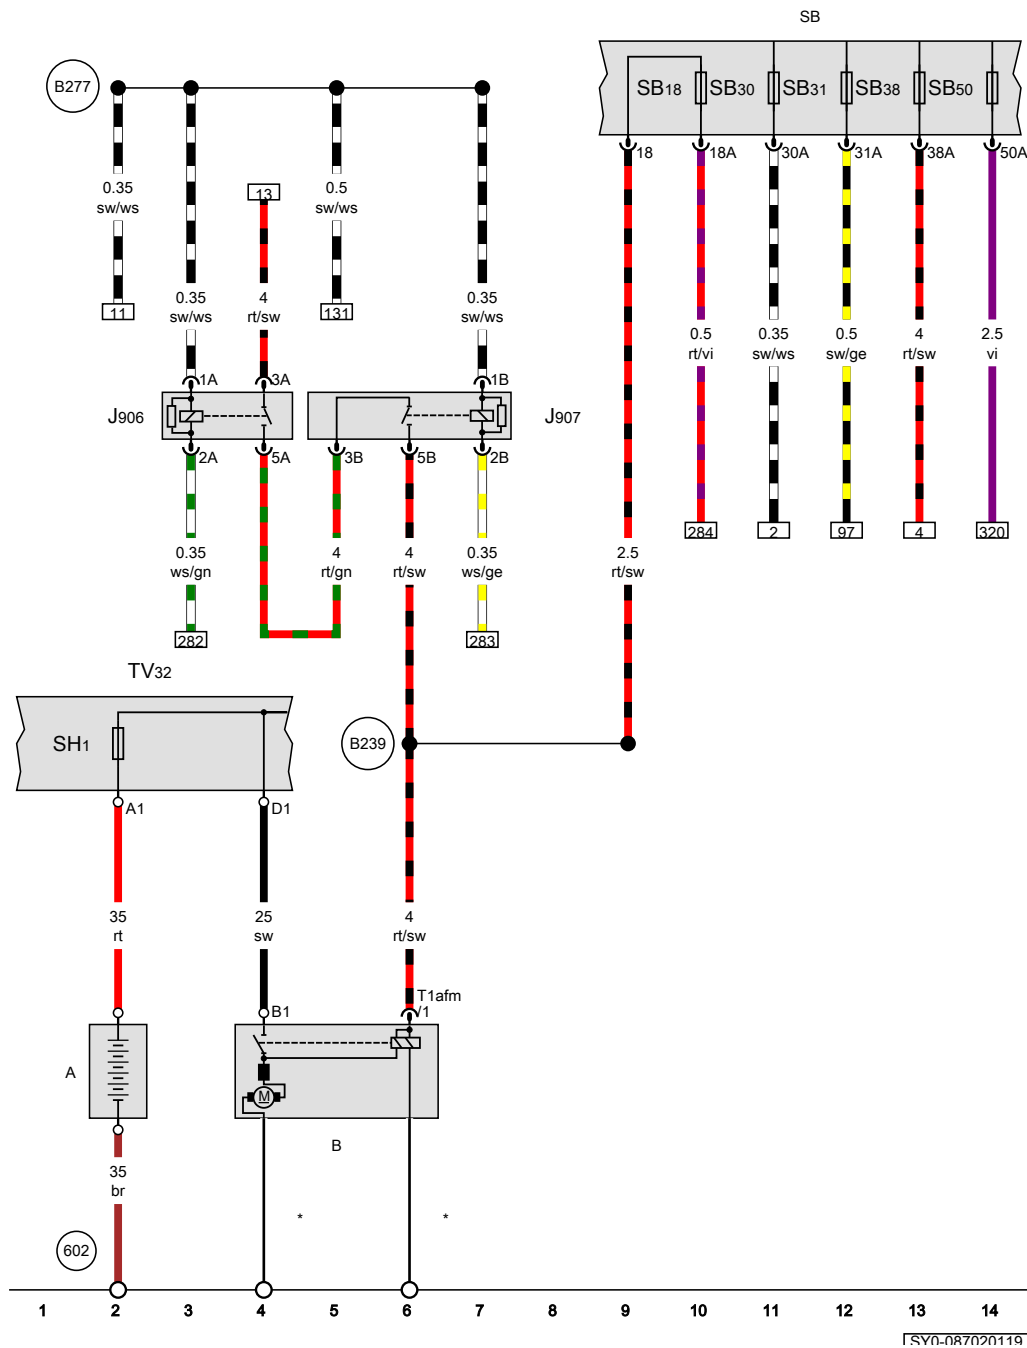


- A Battery
- B Starter
- J906 Starter relay 1
- J907 Starter relay 2
- SB Fuse holder B
- SH1 Fuse 1 in fuse holder H
- SB18 Fuse 18 on fuse holder B
- SB30 Fuse 30 on fuse holder B
- SB31 Fuse 31 on fuse holder B
- SB38 Fuse 38 on fuse holder B
- SB50 Fuse 50 on fuse holder B
- T1afm 1-pin connector, black
- TV32 Jump start connection
- 602 Earth point, in front left footwell
- B239 Positive connection 1 (50), in interior wiring harness
- B277 Positive connection 1 (15a) in main wiring harness
- * Earth supply via housing

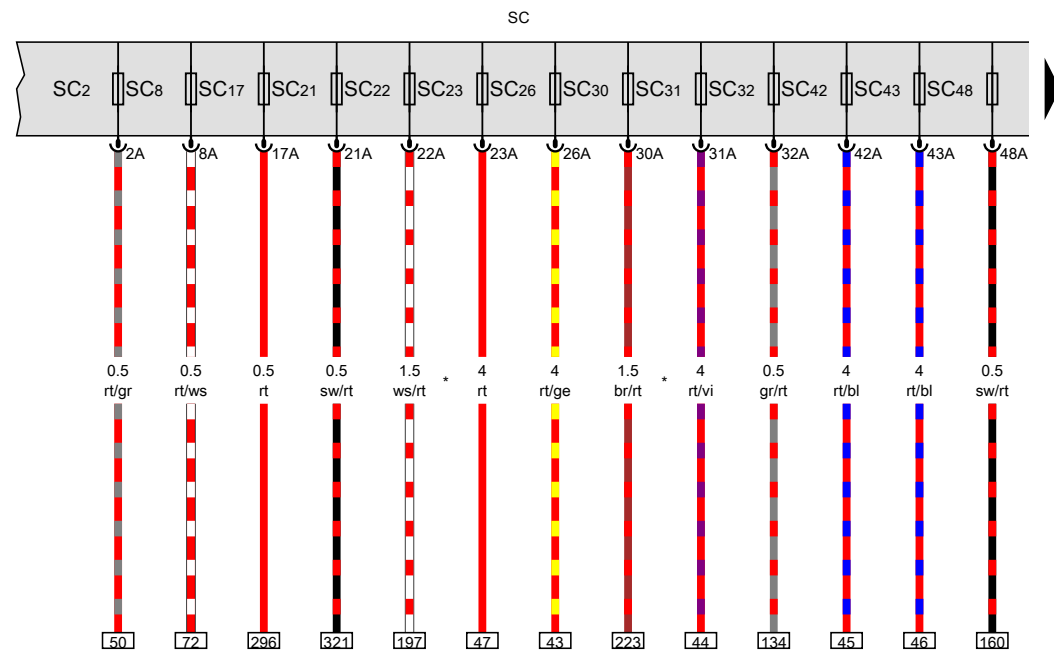

Fuse holder C


- SC Fuse holder C
- SC2 Fuse 2 on fuse holder C
- SC8 Fuse 8 on fuse holder C
- SC17 Fuse 17 on fuse holder C
- SC21 Fuse 21 on fuse holder C
- SC22 Fuse 22 on fuse holder C
- SC23 Fuse 23 on fuse holder C
- SC26 Fuse 26 on fuse holder C
- SC30 Fuse 30 on fuse holder C
- SC31 Fuse 31 on fuse holder C
- SC32 Fuse 32 on fuse holder C
- SC42 Fuse 42 on fuse holder C
- SC43 Fuse 43 on fuse holder C
- SC48 Fuse 48 on fuse holder C
- * For panel van and Kombi models

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

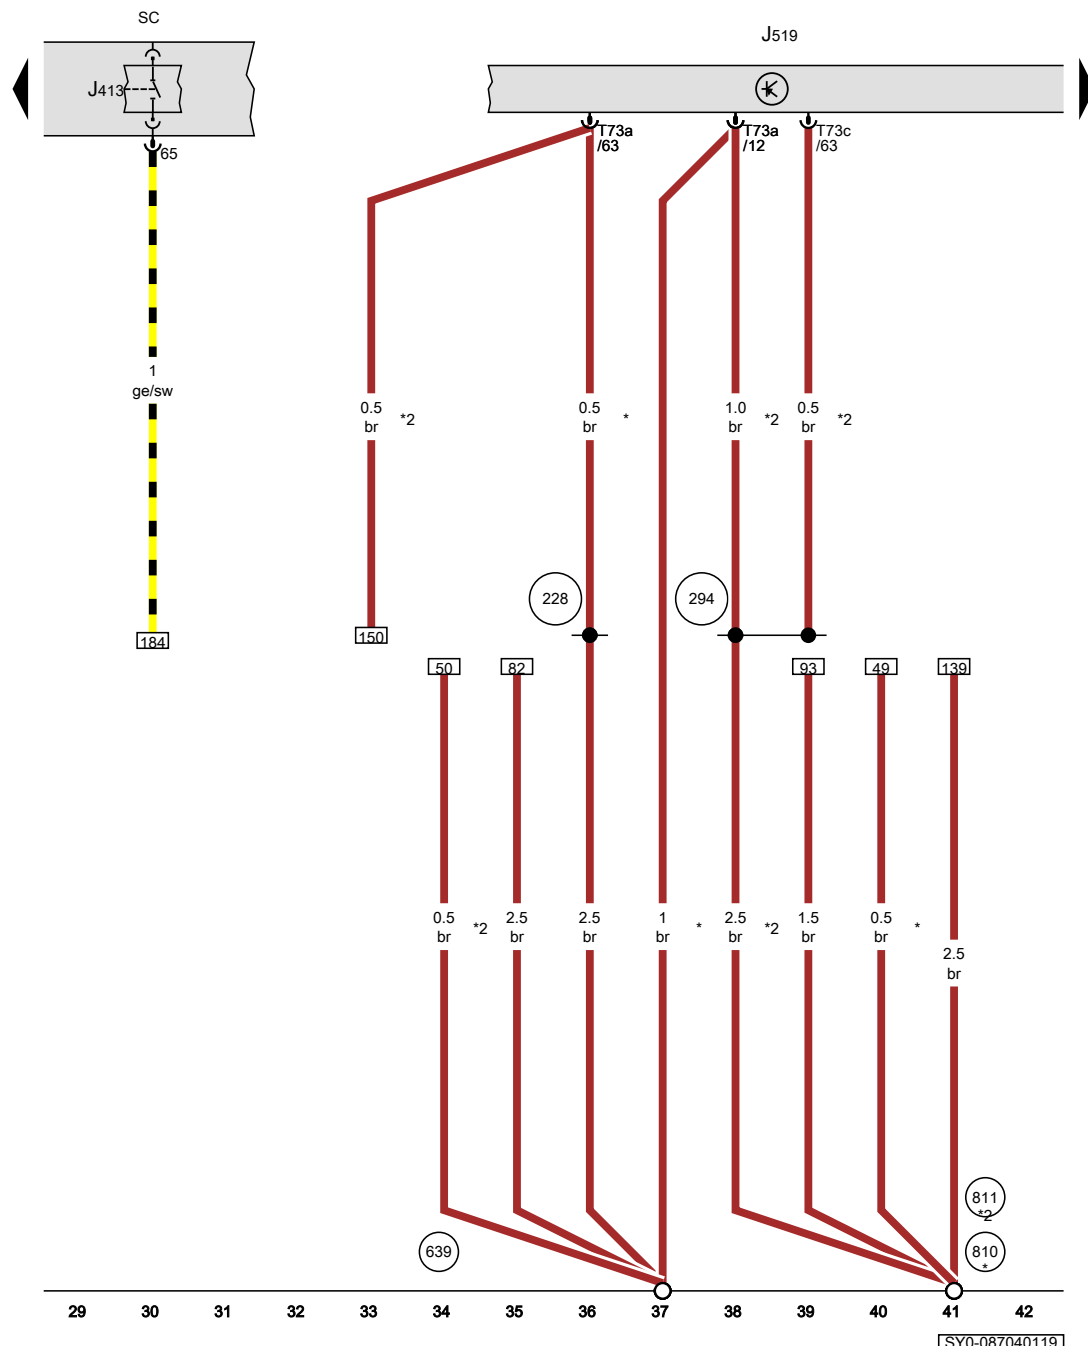

Onboard supply control unit, Fuse holder C


- J413 Horn relay
- J519 Onboard supply control unit
- SC Fuse holder C
- T73a 73-pin connector, black
- T73c 73-pin connector, black
- 228 Connection, in harness
- 294 Earth connection 9, in interior wiring harness
- 639 Earth point, left A-pillar
- 810 Earth point on central tube for dash panel, centre left
- 811 Earth point on central tube for dash panel, centre right
- * For left-hand drive models
- *2 For right-hand drive models

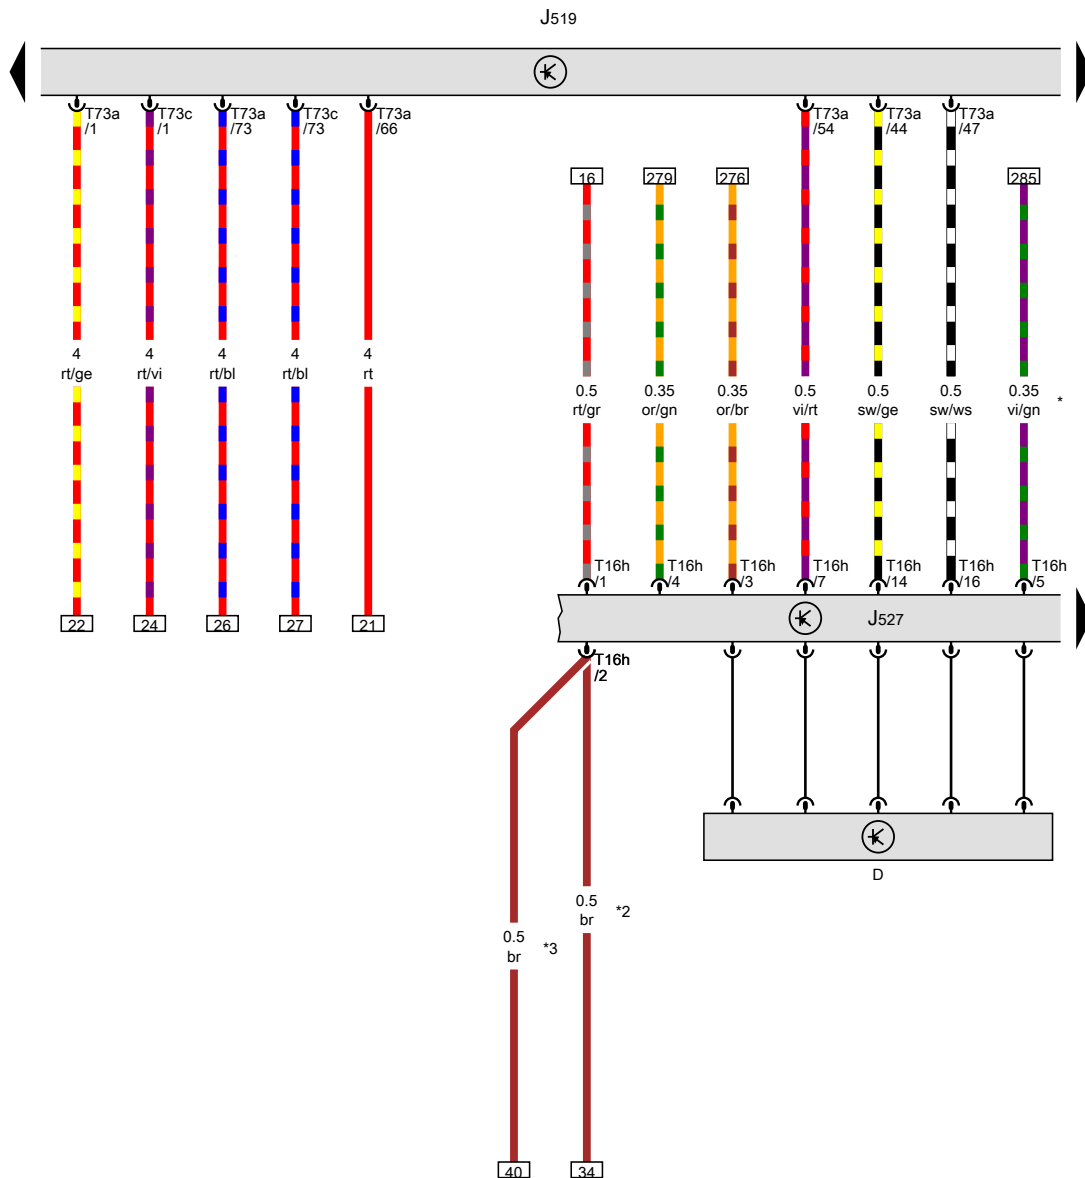

Ignition/starter switch, Onboard supply control unit, Steering column electronics control unit

- D Ignition/starter switch
- J519 Onboard supply control unit
- J527 Steering column electronics control unit
- T16h 16-pin connector, black
- T73a 73-pin connector, black
- T73c 73-pin connector, black
- * For models with cruise control system (CCS)
- *2 For right-hand drive models
- *3 For left-hand drive models

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink

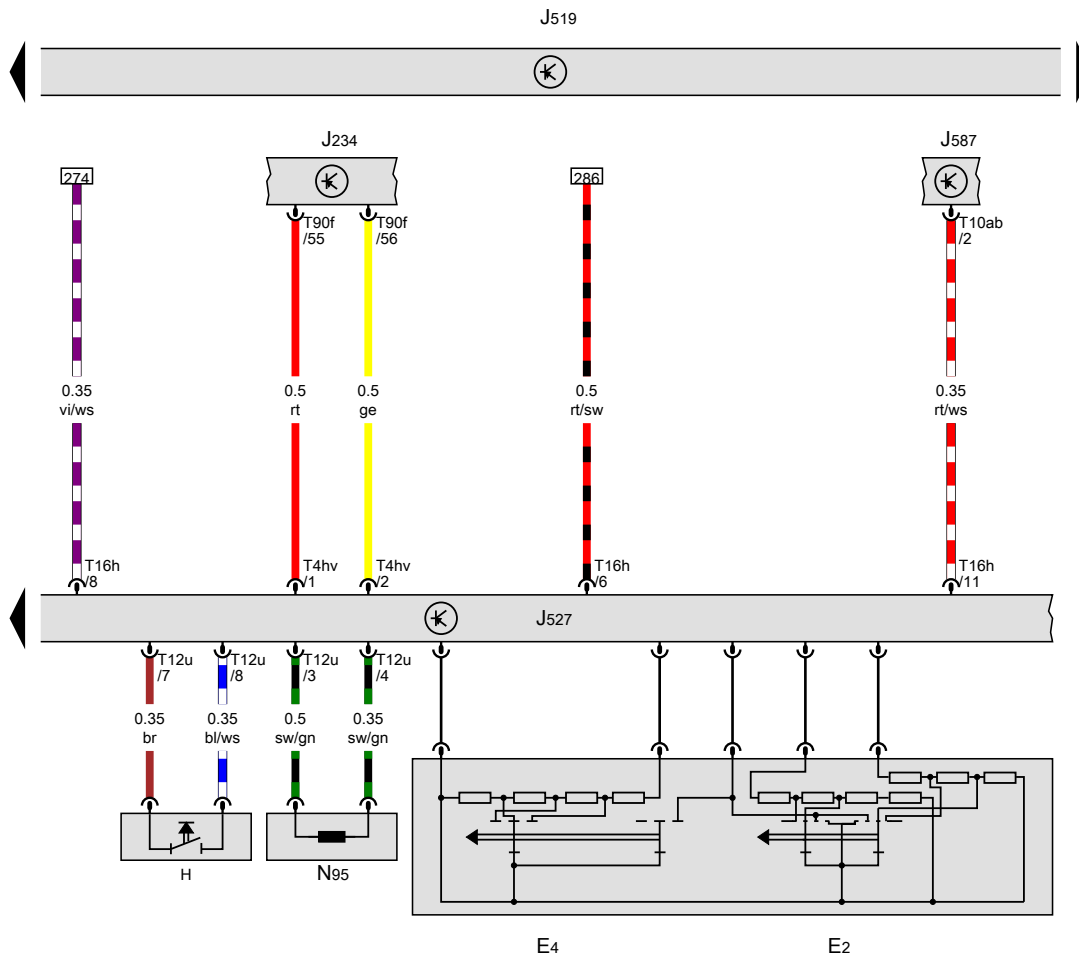


Turn signal switch, Headlight dipper and flasher switch, Horn plate, Onboard supply control unit, Steering column electronics control unit

- E2 Turn signal switch
- E4 Headlight dipper and flasher switch
- H Horn plate
- J234 Airbag control unit
- J519 Onboard supply control unit
- J527 Steering column electronics control unit
- J587 Selector lever sensors control unit
- N95 Airbag igniter on driver side
- T4hv 4-pin connector, yellow
- T10ab 10-pin connector, red
- T12u 12-pin connector
- T16h 16-pin connector, black
- T90f 90-pin connector, yellow

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink


Rotary light switch, Onboard supply control unit

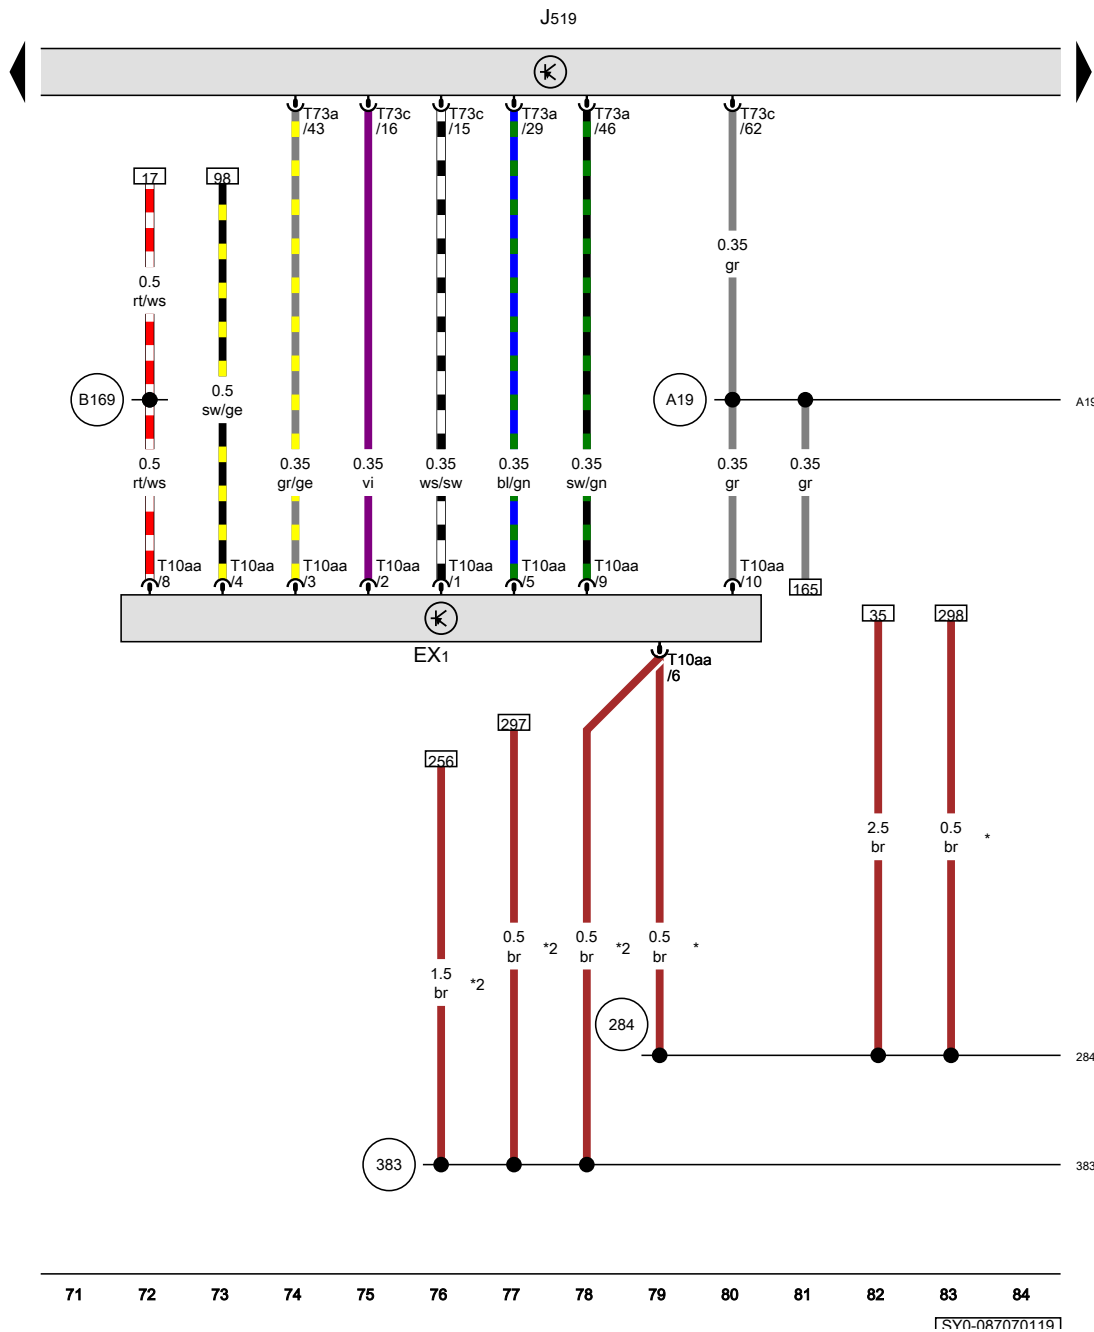

- EX1 Rotary light switch
- J519 Onboard supply control unit
- T10aa 10-pin connector, red
- T73a 73-pin connector, black
- T73c 73-pin connector, black
- 284 Earth connection 6, in interior wiring harness
- 383 Earth connection 18, in main wiring harness
- A19 Connection (58d), in dash panel wiring harness
- B169 Positive connection 1 (30), in interior wiring harness

* For left-hand drive models

*2 For right-hand drive models

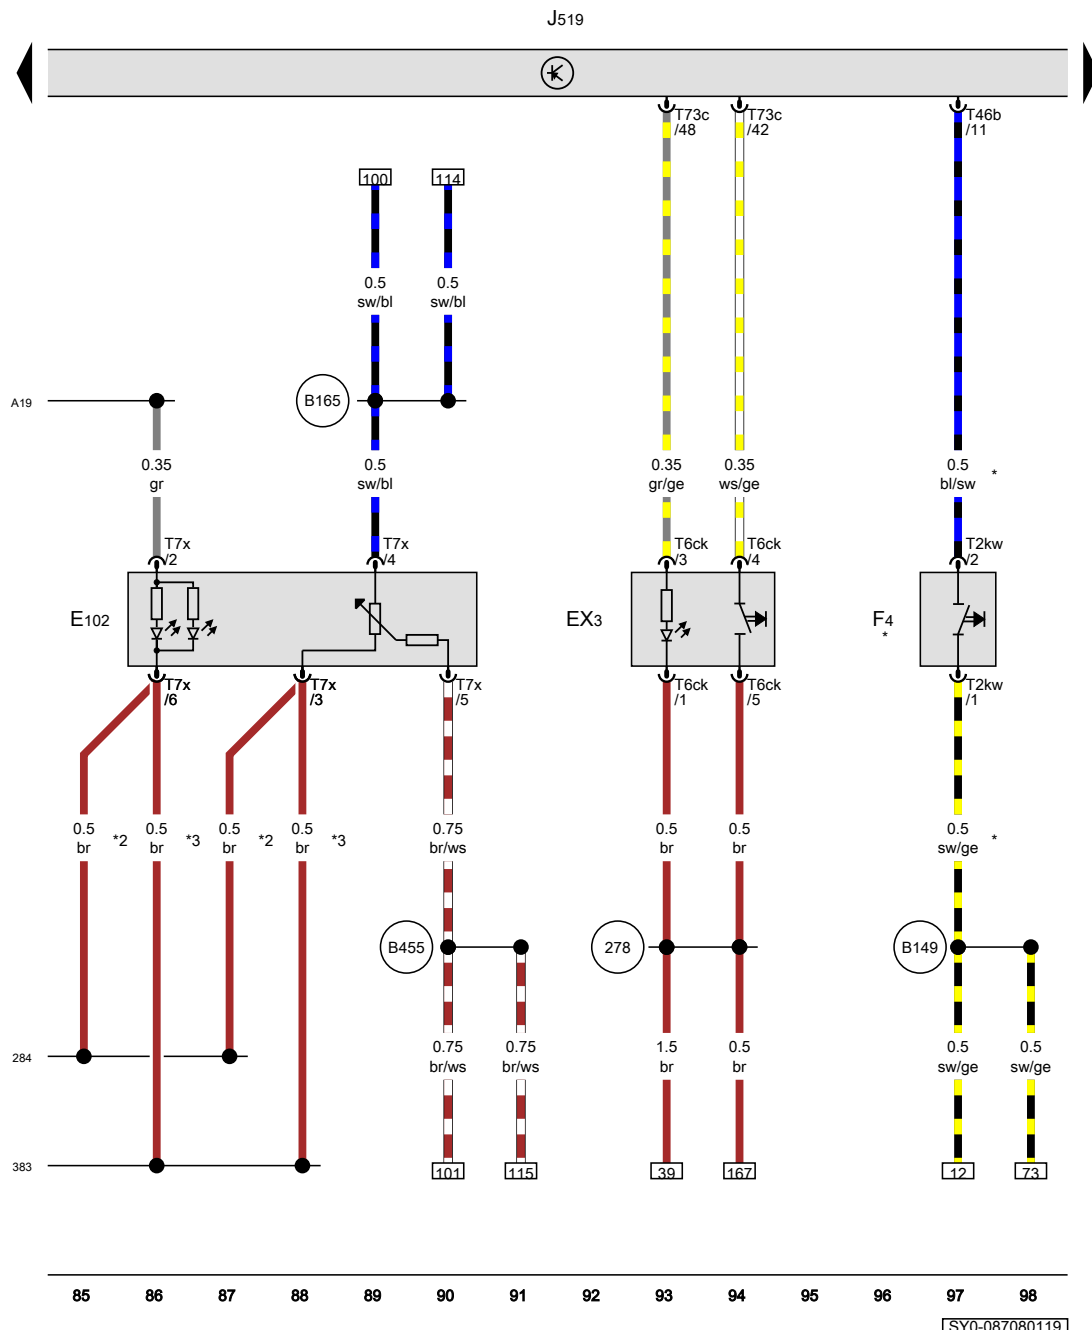

Hazard warning light switch, Headlight range control regulator, Reversing light switch, Onboard supply control unit

- EX3 Hazard warning light switch
- E102 Headlight range control regulator
- F4 Reversing light switch
- J519 Onboard supply control unit
- T2kw 2-pin connector, black
- T6ck 6-pin connector, blue
- T7x 7-pin connector, black
- T46b 46-pin connector, black
- T73c 73-pin connector, black

- 278 Earth connection 4, in interior wiring harness
- 284 Earth connection 6, in interior wiring harness
- 383 Earth connection 18, in main wiring harness
- A19 Connection (58d), in dash panel wiring harness
- B149 Positive connection 2 (15a), in interior wiring harness
- B165 Positive connection 2 (15), in interior wiring harness
- B455 Connection (HRC), in main wiring harness

- * For models with manual gearbox
- *2 For left-hand drive models
- *3 For right-hand drive models


- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

Onboard supply control unit, Left fog light bulb, Right fog light bulb, Front left headlight


- J519 Onboard supply control unit
- L22 Left fog light bulb
- L23 Right fog light bulb
- L174 Left daytime running light bulb
- MX1 Front left headlight
- M1 Left side light bulb
- M5 Front left turn signal bulb
- M29 Left headlight dipped beam bulb
- M30 Left headlight main beam bulb
- T2qt 2-pin connector, black
- T2qu 2-pin connector, black
- T10v 10-pin connector, black
- T14aj 14-pin connector, black
- T46b 46-pin connector, black
- T73c 73-pin connector, black
- V48 Left headlight range control motor

- 119 Earth connection 1, in headlight wiring harness
- 179 Earth connection, in left headlight wiring harness
- 203 Earth connection, in front fog light wiring harness
- 655 Earth point, on left headlight
- B554 Connection (fog light), in main wiring harness
- B812 Connection 2 (fog light), in main wiring harness

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

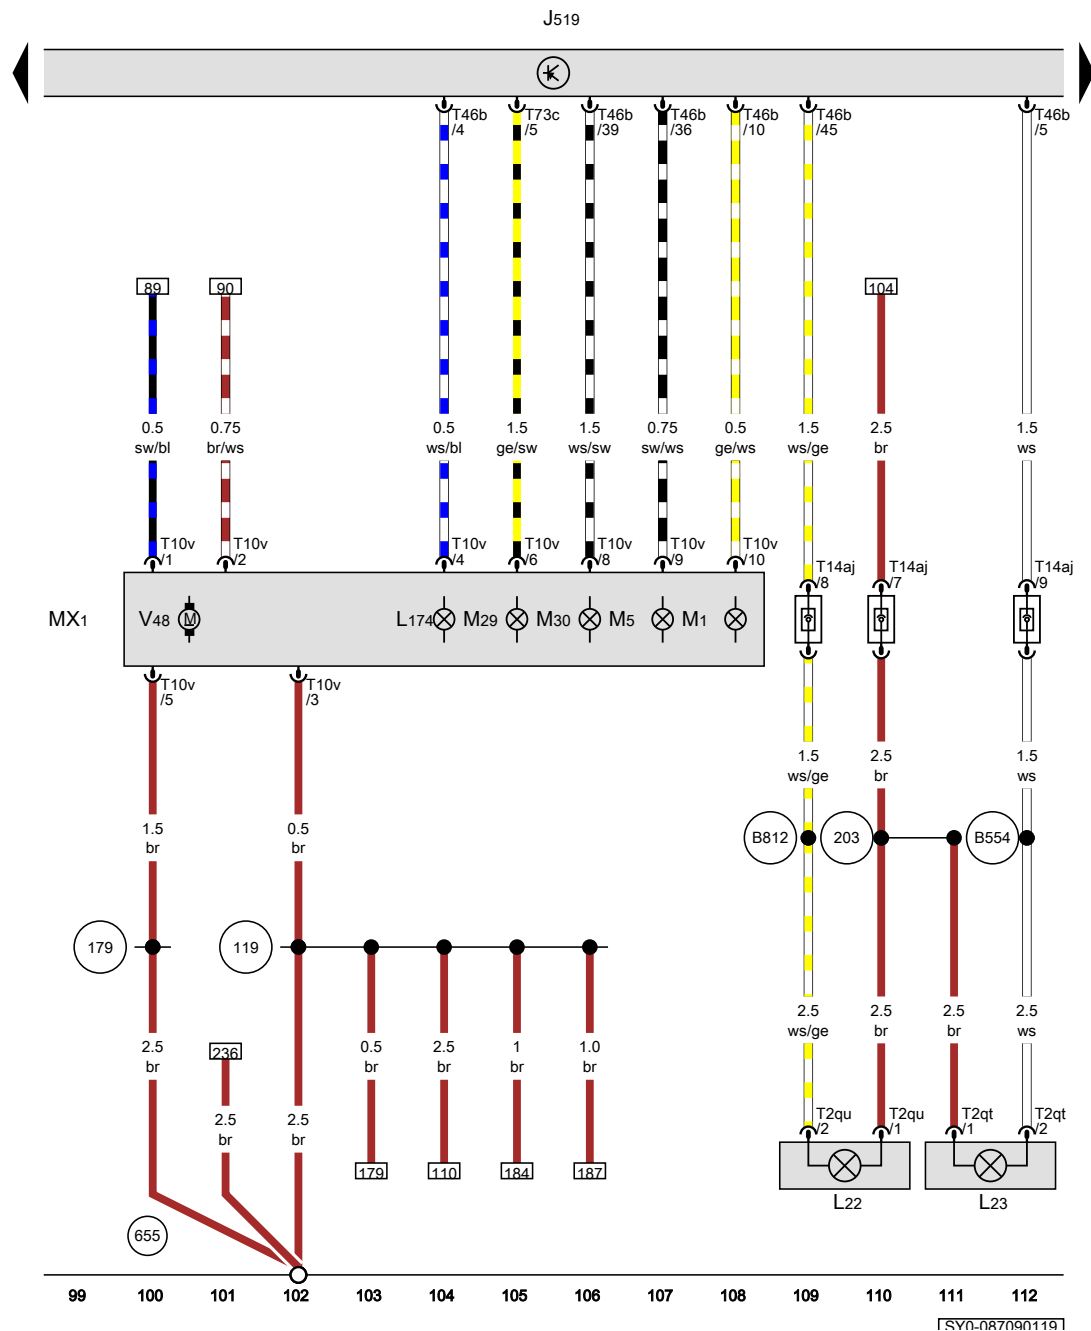


Onboard supply control unit, Front right headlight, Left washer jet heater element, Right washer jet heater element

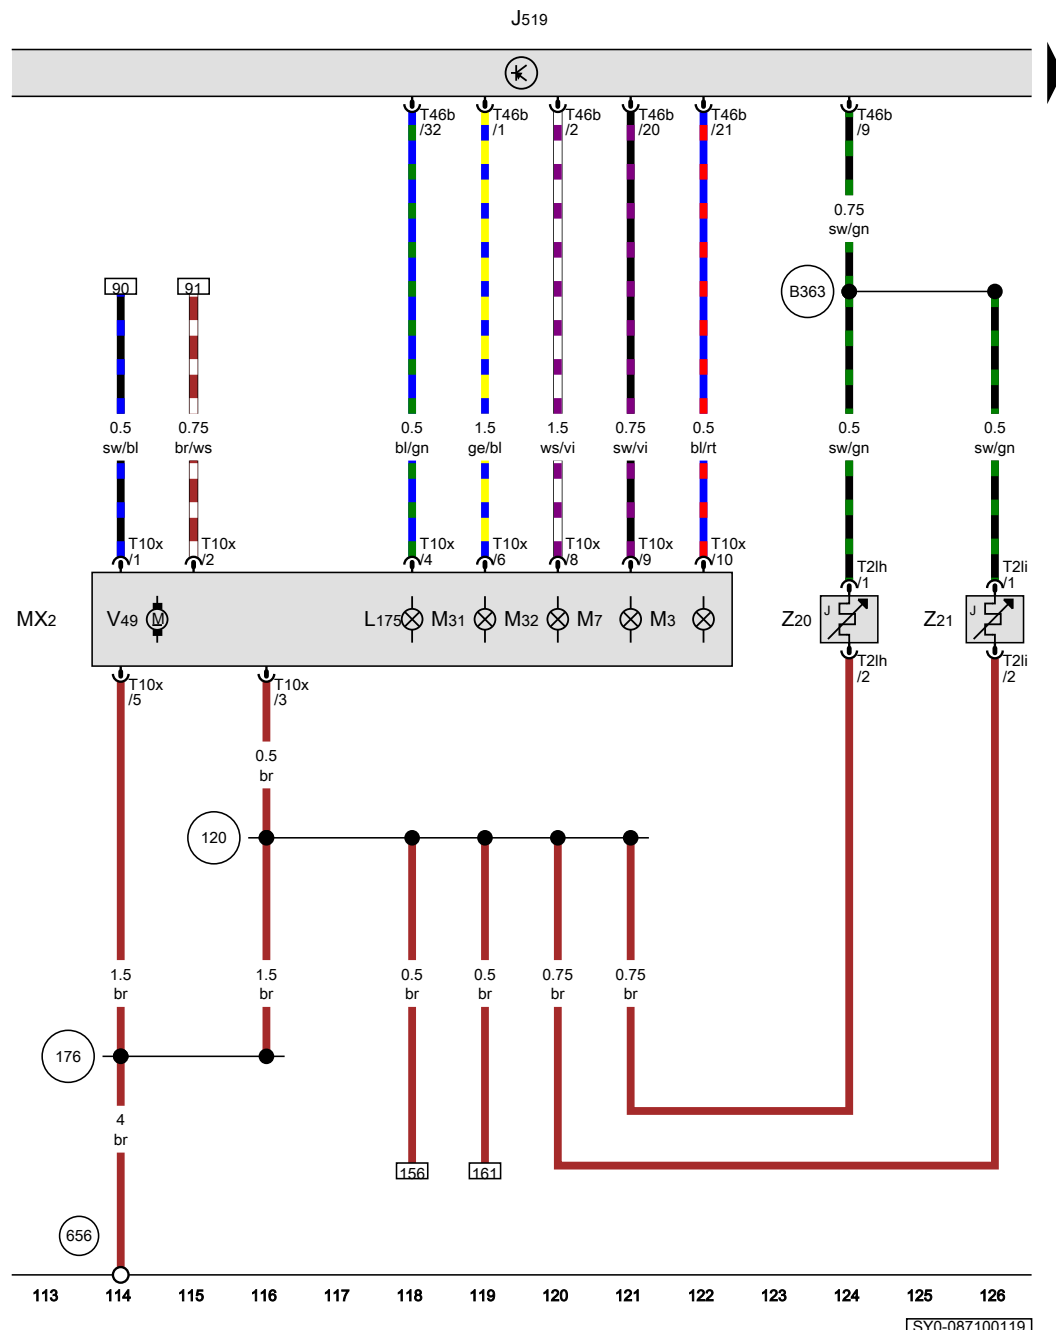


- J519 Onboard supply control unit
- L175 Right daytime running light bulb
- MX2 Front right headlight
- M3 Right side light bulb
- M7 Front right turn signal bulb
- M31 Right headlight dipped beam bulb
- M32 Right headlight main beam bulb
- T2lh 2-pin connector, black
- T2li 2-pin connector, black
- T10x 10-pin connector, black
- T46b 46-pin connector, black
- V49 Right headlight range control motor
- Z20 Left washer jet heater element
- Z21 Right washer jet heater element

- 120 Earth connection 2, in headlight wiring harness
- 176 Earth connection, in right headlight wiring harness
- 656 Earth point, on right headlight
- B363 Positive connection 14 (87a) in main wiring harness

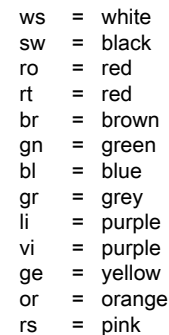


* According to equipment
*2 For left-hand drive models
*3 For right-hand drive models
*4 From December 2017

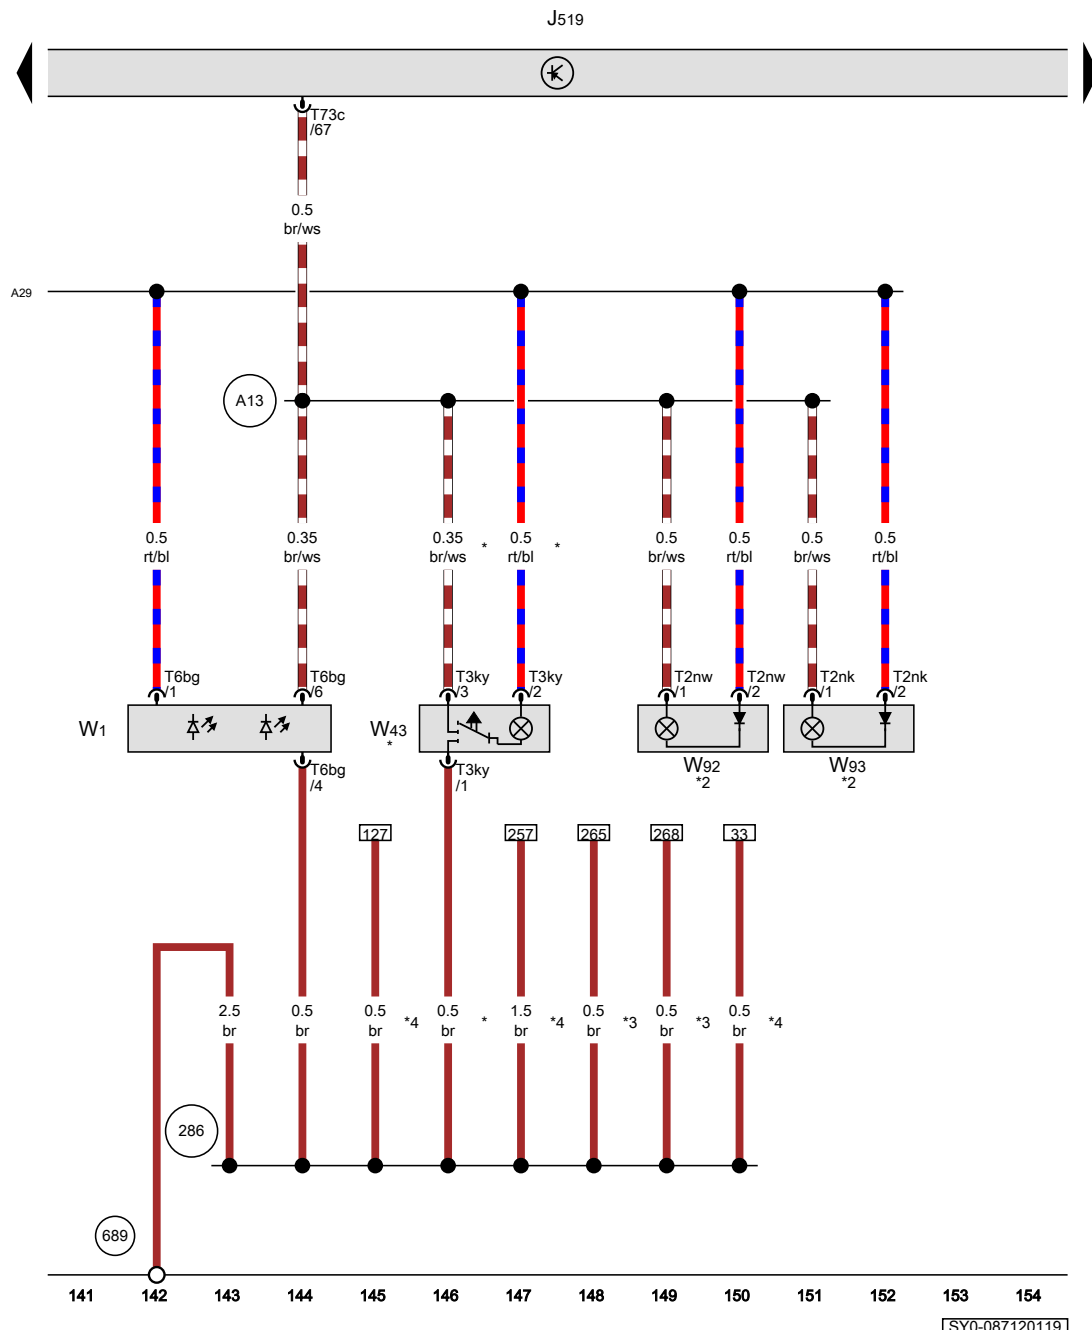

Onboard supply control unit, Front interior light, Rear interior light, Driver side entry light, Passenger side entry light


- J519 Onboard supply control unit
- T2nk 2-pin connector, black
- T2nw 2-pin connector, black
- T3ky 3-pin connector, black
- T6bg 6-pin connector, blue
- T73c 73-pin connector, black
- W1 Front interior light
- W43 Rear interior light
- W92 Driver side entry light
- W93 Passenger side entry light

- 286 Earth connection 8, in interior wiring harness
- 689 Earth point, at front, central in roof
- A13 Connection (door contact switch), in dash panel wiring harness
- A29 Connection (interior light), in dash panel wiring harness
- * For models with double cab
- *2 For models with entry lights
- *3 Up to July 2018
- *4 For right-hand drive models

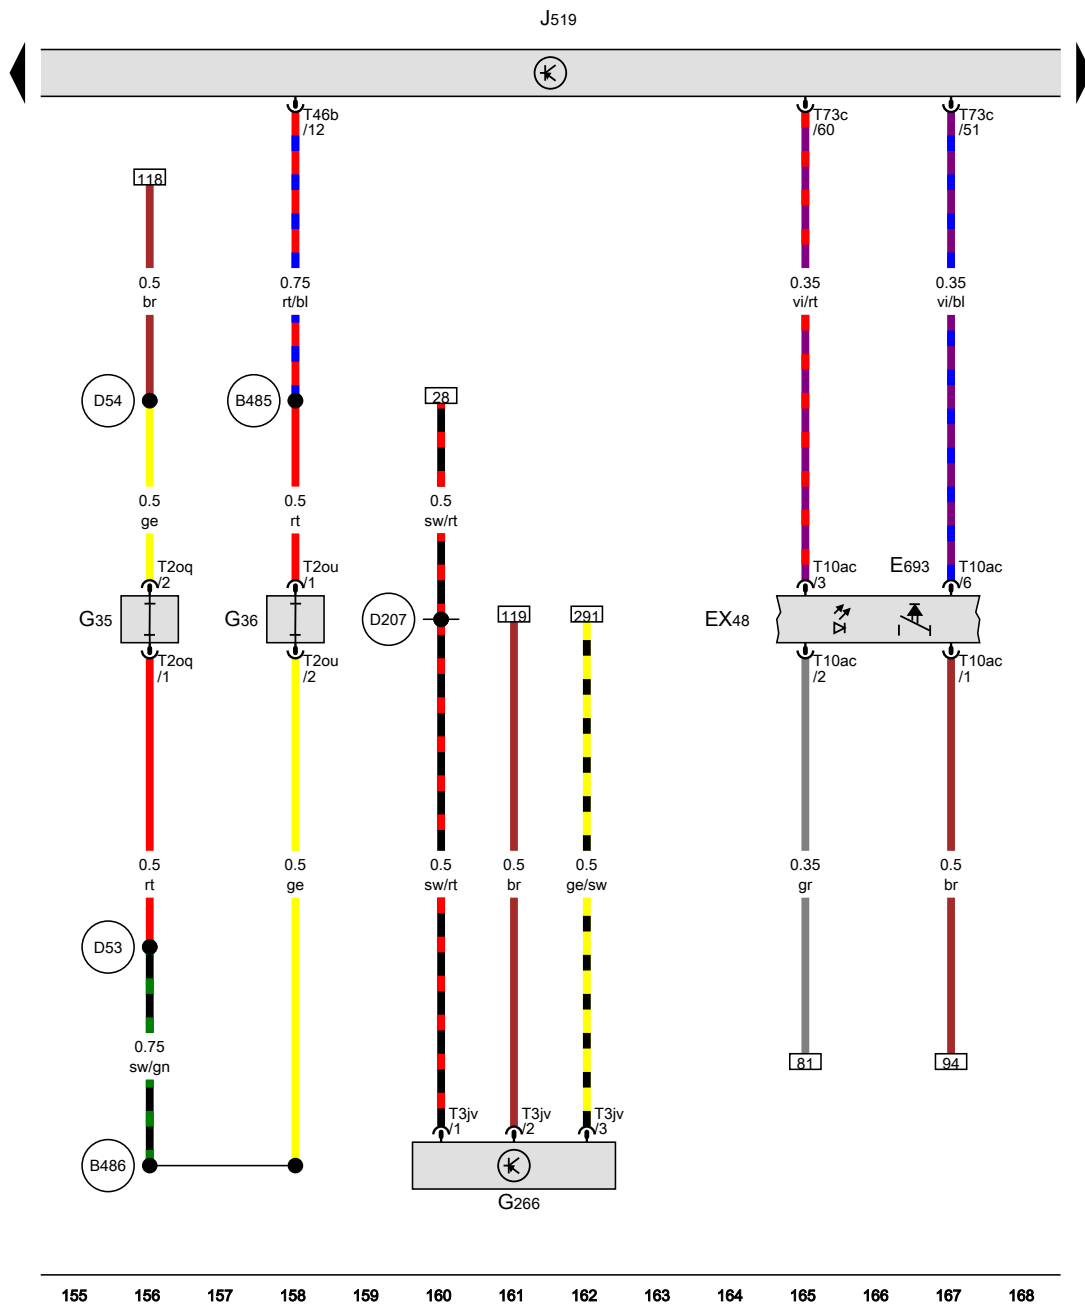

Start/Stop operation button, Front right brake pad wear sender, Rear left brake pad wear sender, Oil level and oil temperature sender, Onboard supply control unit

- EX48 Centre switch module 3 in dash panel
- E693 Start/Stop operation button
- G35 Front right brake pad wear sender
- G36 Rear left brake pad wear sender
- G266 Oil level and oil temperature sender
- J519 Onboard supply control unit
- T2oq 2-pin connector, black
- T2ou 2-pin connector, black
- T3jv 3-pin connector, black
- T10ac 10-pin connector, black
- T46b 46-pin connector, black
- T73c 73-pin connector, black
- B485 Connection 21, in main wiring harness
- B486 Connection 22, in main wiring harness
- D53 Connection (right brake wear indicator), in engine compartment wiring harness
- D54 Connection (right brake wear indicator), in engine compartment wiring harness
- D207 Connection 7 (87a), in engine compartment wiring harness

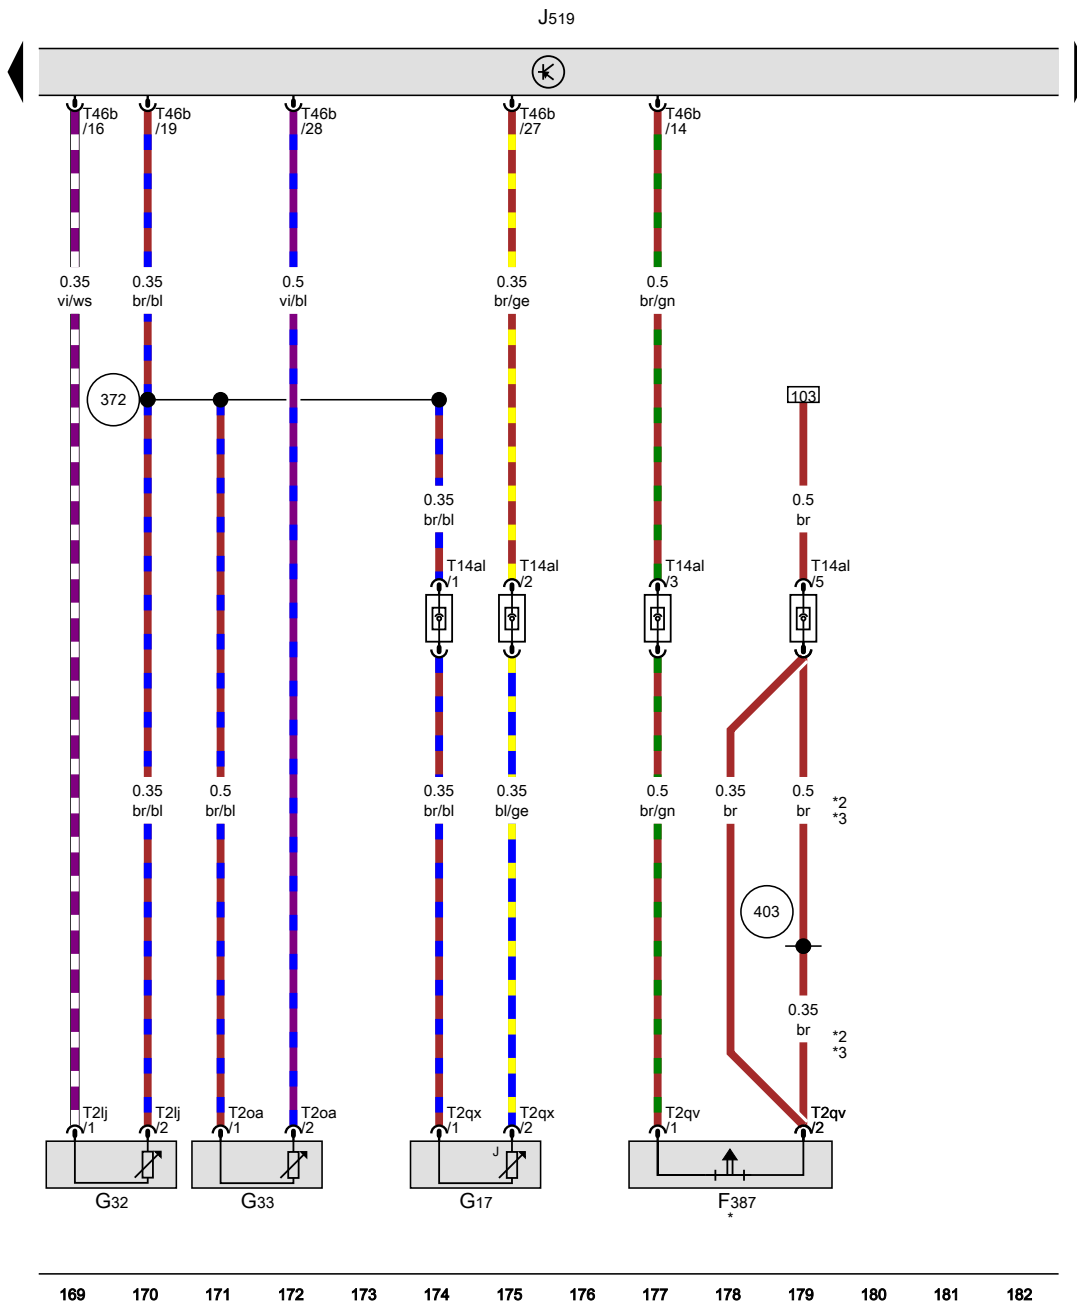

Bonnet contact switch, Ambient temperature sensor, Coolant shortage indicator sender, Windscreen washer fluid level sender, Onboard supply control unit

- F387 Bonnet contact switch
- G17 Ambient temperature sensor
- G32 Coolant shortage indicator sender
- G33 Windscreen washer fluid level sender
- J519 Onboard supply control unit
- T2lj 2-pin connector, black
- T2oa 2-pin connector, black
- T2qv 2-pin connector, black
- T2qx 2-pin connector, black
- T14al 14-pin connector, grey
- T46b 46-pin connector, black

372 Earth connection 7, in main wiring harness

403 Earth connection, in front end wiring harness

- * Pre-wired component
- *2 For models with BlueMotion equipment
- *3 Up to May 2017

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink


[SYN-087140119]


Treble horn, Bass horn, Onboard supply control unit, Left number plate light, Right number plate light

- H2 Treble horn
- H7 Bass horn
- J519 Onboard supply control unit
- T2ku 2-pin connector, black
- T2kv 2-pin connector, black
- T2qb 2-pin connector, black
- T2qc 2-pin connector, black
- T17s 17-pin connector, black
- T73a 73-pin connector, black
- X4 Left number plate light
- X5 Right number plate light

- 437 Earth connection, in number plate wiring harness
- B727 Connection (71a), in main wiring harness
- W41 Positive connection (58), in number plate lights wiring harness
- * For panel van and Kombi models
- *2 From December 2017
- *3 According to equipment

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

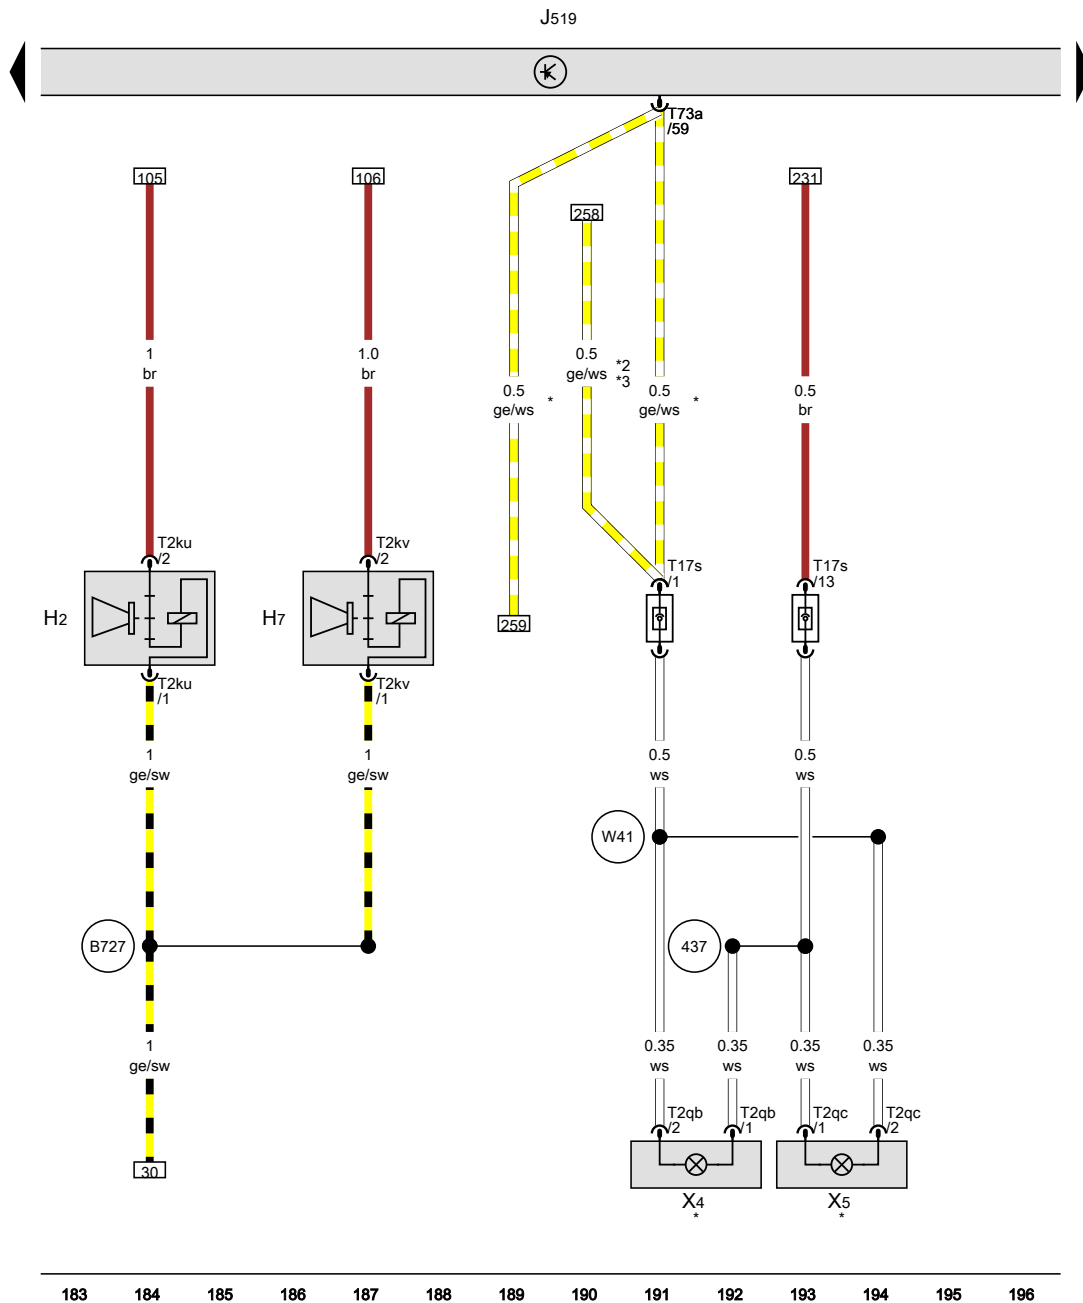


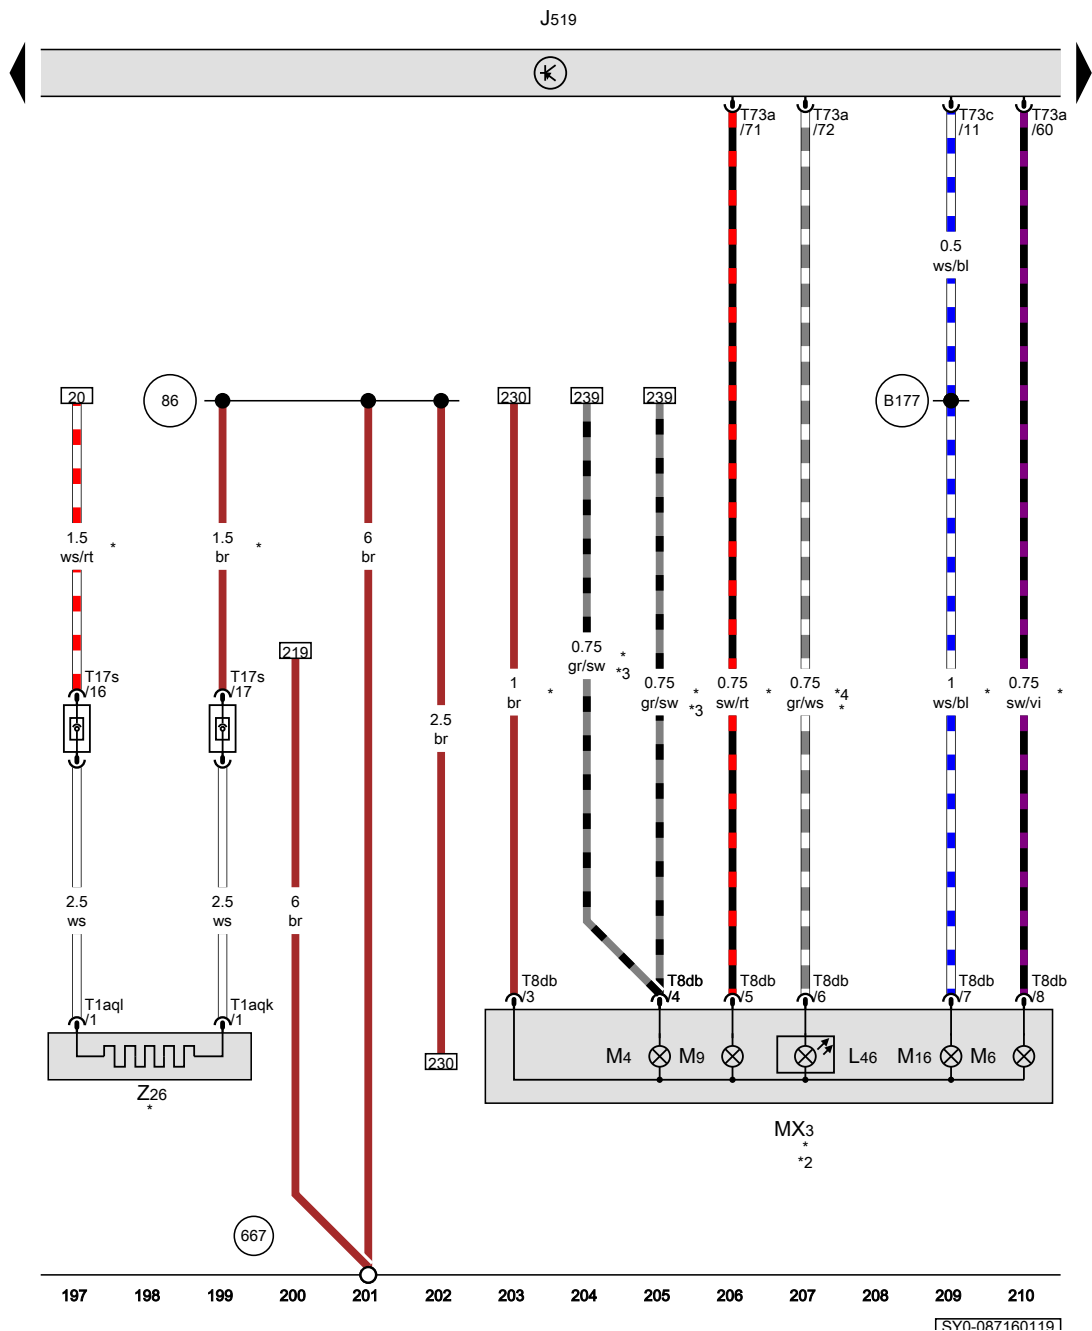

Onboard supply control unit, Left tail light cluster, Heated rear window in left wing door

- J519 Onboard supply control unit
- L46 Rear left fog light bulb
- MX3 Left tail light cluster
- M4 Left tail light bulb
- M6 Rear left turn signal bulb
- M9 Left brake light bulb
- M16 Left reversing light bulb
- T1aqk 1-pin connector
- T1aql 1-pin connector
- T8db 8-pin connector, black
- T17s 17-pin connector, black
- T73a 73-pin connector, black
- T73c 73-pin connector, black
- Z26 Heated rear window in left wing door
- 86 Earth connection 1, in rear wiring harness
- 667 Earth point, on rear left of roof
- B177 Connection (61), in interior wiring harness
- * For panel van and Kombi models
- *2 Not for models with double cab/ dropside
- *3 According to equipment
- *4 For left-hand drive models


- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

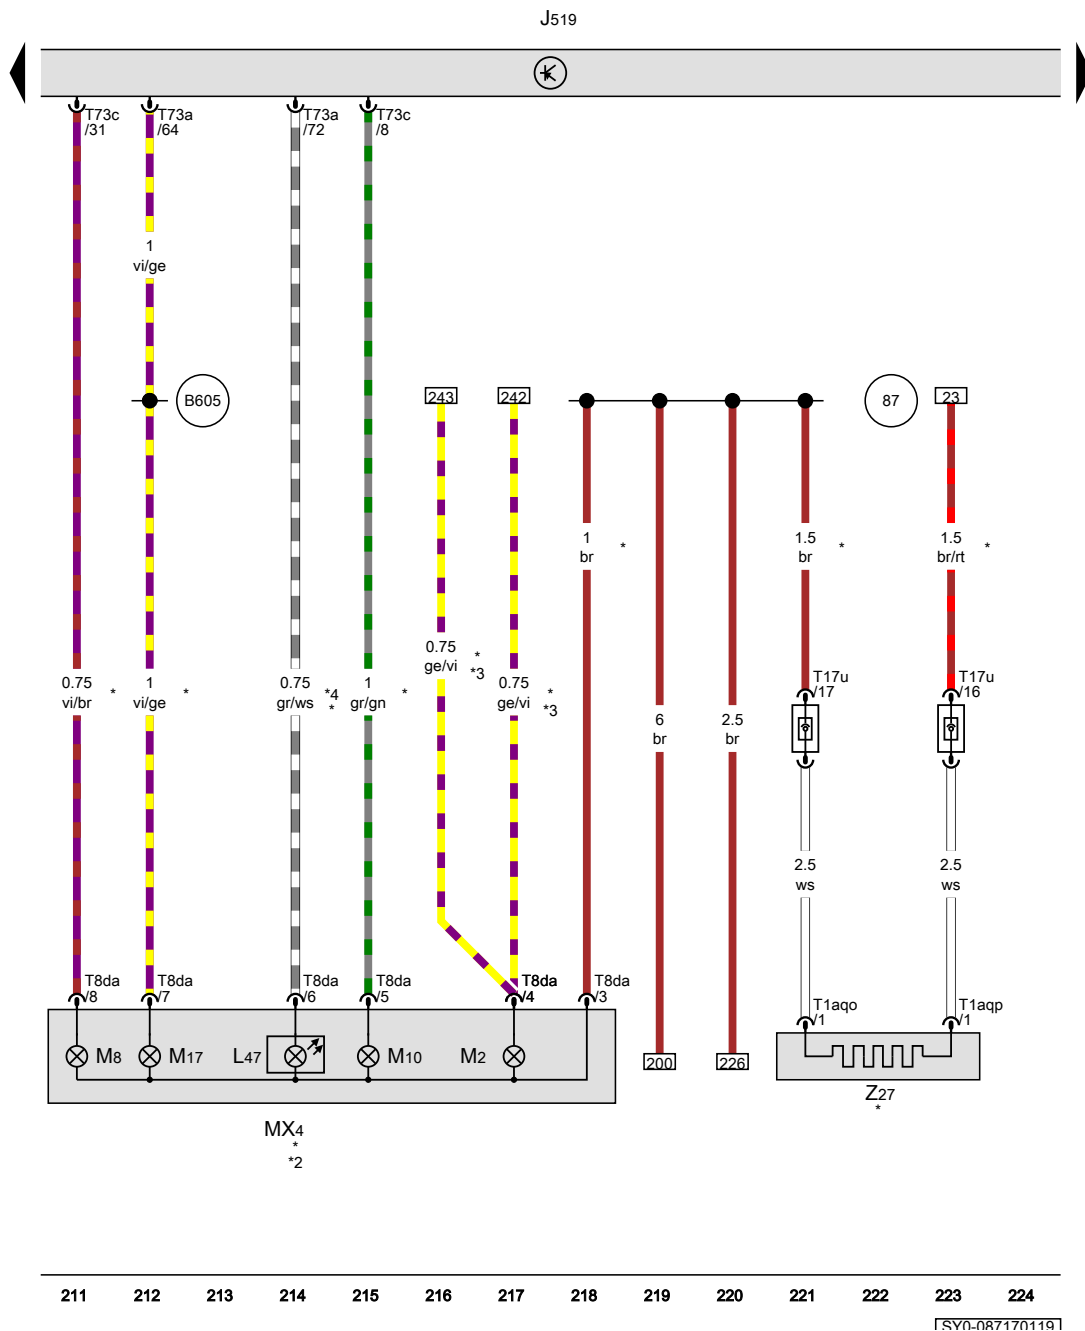


Onboard supply control unit, Right tail light cluster, Heated rear window in right wing door

- J519 Onboard supply control unit
- L47 Rear right fog light bulb
- M2 Right tail light bulb
- MX4 Right tail light cluster
- M8 Rear right turn signal bulb
- M10 Right brake light bulb
- M17 Right reversing light bulb
- T1aqp 1-pin connector
- T1aqo 1-pin connector
- T8da 8-pin connector, black
- T17u 17-pin connector, black
- T73a 73-pin connector, black
- T73c 73-pin connector, black
- Z27 Heated rear window in right wing door
- 87 Earth connection 2, in rear wiring harness
- B605 Connection 1, in interior wiring harness
- * For panel van and Kombi models
- *2 Not for models with double cab/ dropside
- *3 According to equipment
- *4 For right-hand drive models


ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

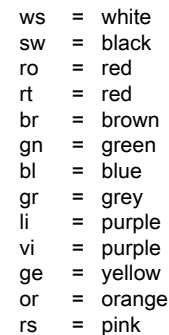

*2 For panel van and Kombi models

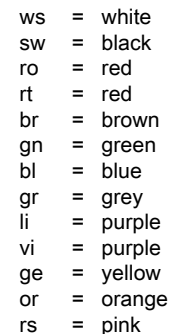

- * For panel van and Kombi models
- *2 According to equipment
- *3 For left-hand drive models
- *4 For right-hand drive models

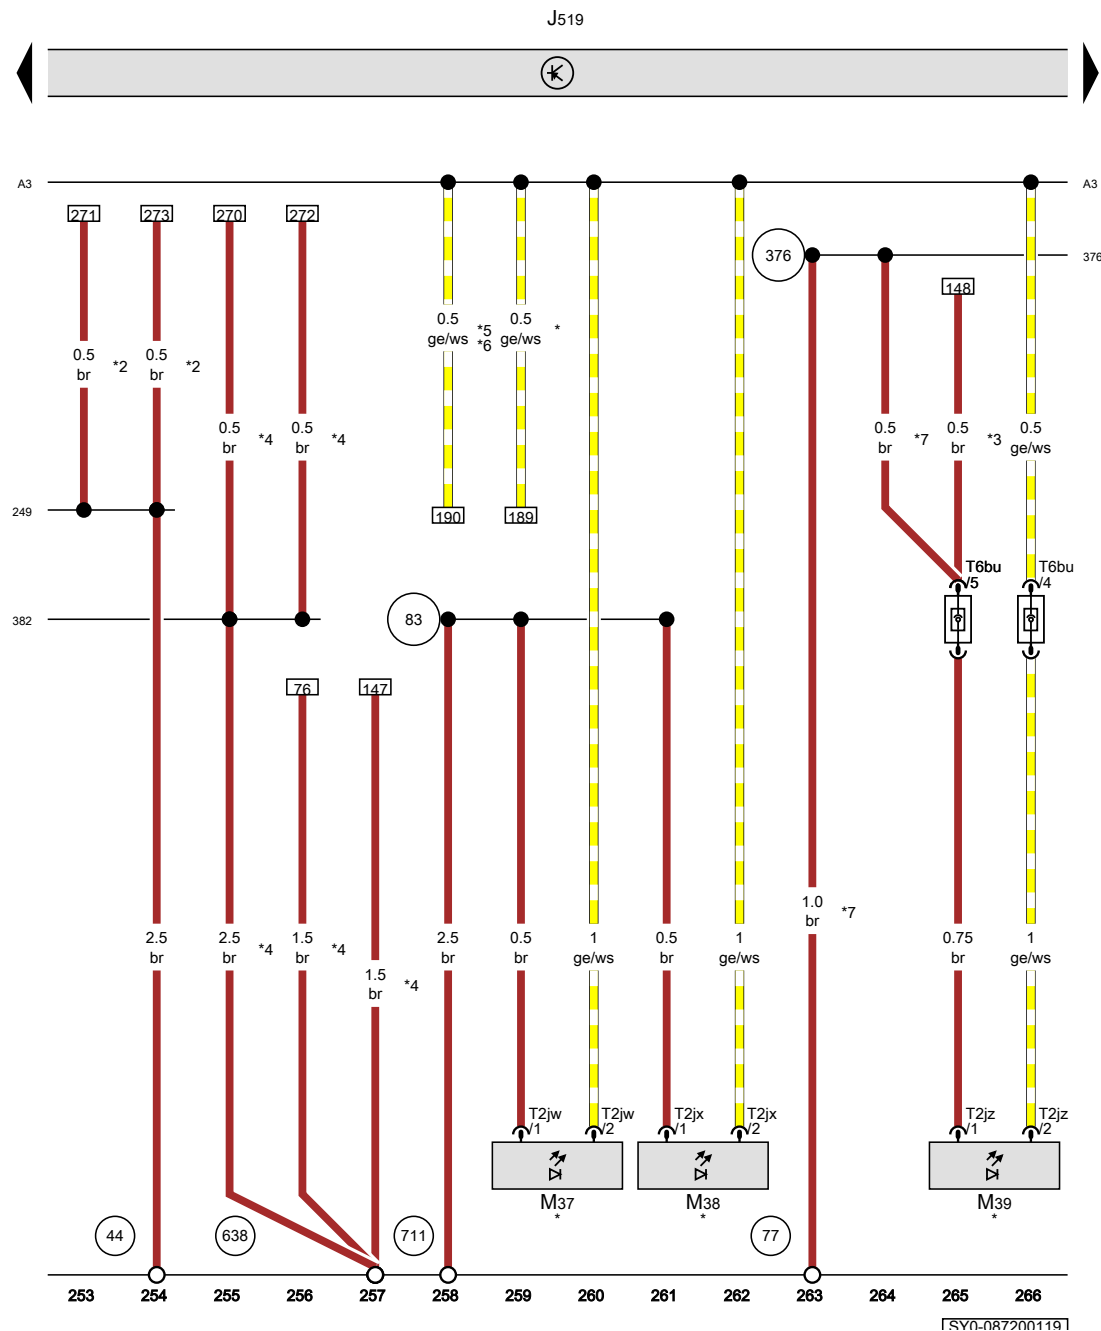


Onboard supply control unit, Rear left side marker bulb, Rear right side marker bulb, Centre left side marker bulb

J519 Onboard supply control unit
M37 Rear left side marker bulb
M38 Rear right side marker bulb
M39 Centre left side marker bulb
T2jw 2-pin connector, black
T2jx 2-pin connector, black
T2jz 2-pin connector, black
T6bu 6-pin connector, black

44 Earth point, lower part of left A-pillar
77 Earth point, lower part of left B-pillar
83 Earth connection 1, in front right wiring harness
249 Earth connection 2, in interior wiring harness
376 Earth connection 11, in main wiring harness
382 Earth connection 17, in main wiring harness
638 Earth point, on right A-pillar
711 Earth point 3 on rear left longitudinal member
A3 Positive connection (58), in dash panel wiring harness

* For panel van and Kombi models
*2 For left-hand drive models
*3 Up to July 2018
*4 For right-hand drive models
*5 From December 2017
*6 According to equipment
*7 From July 2018

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink

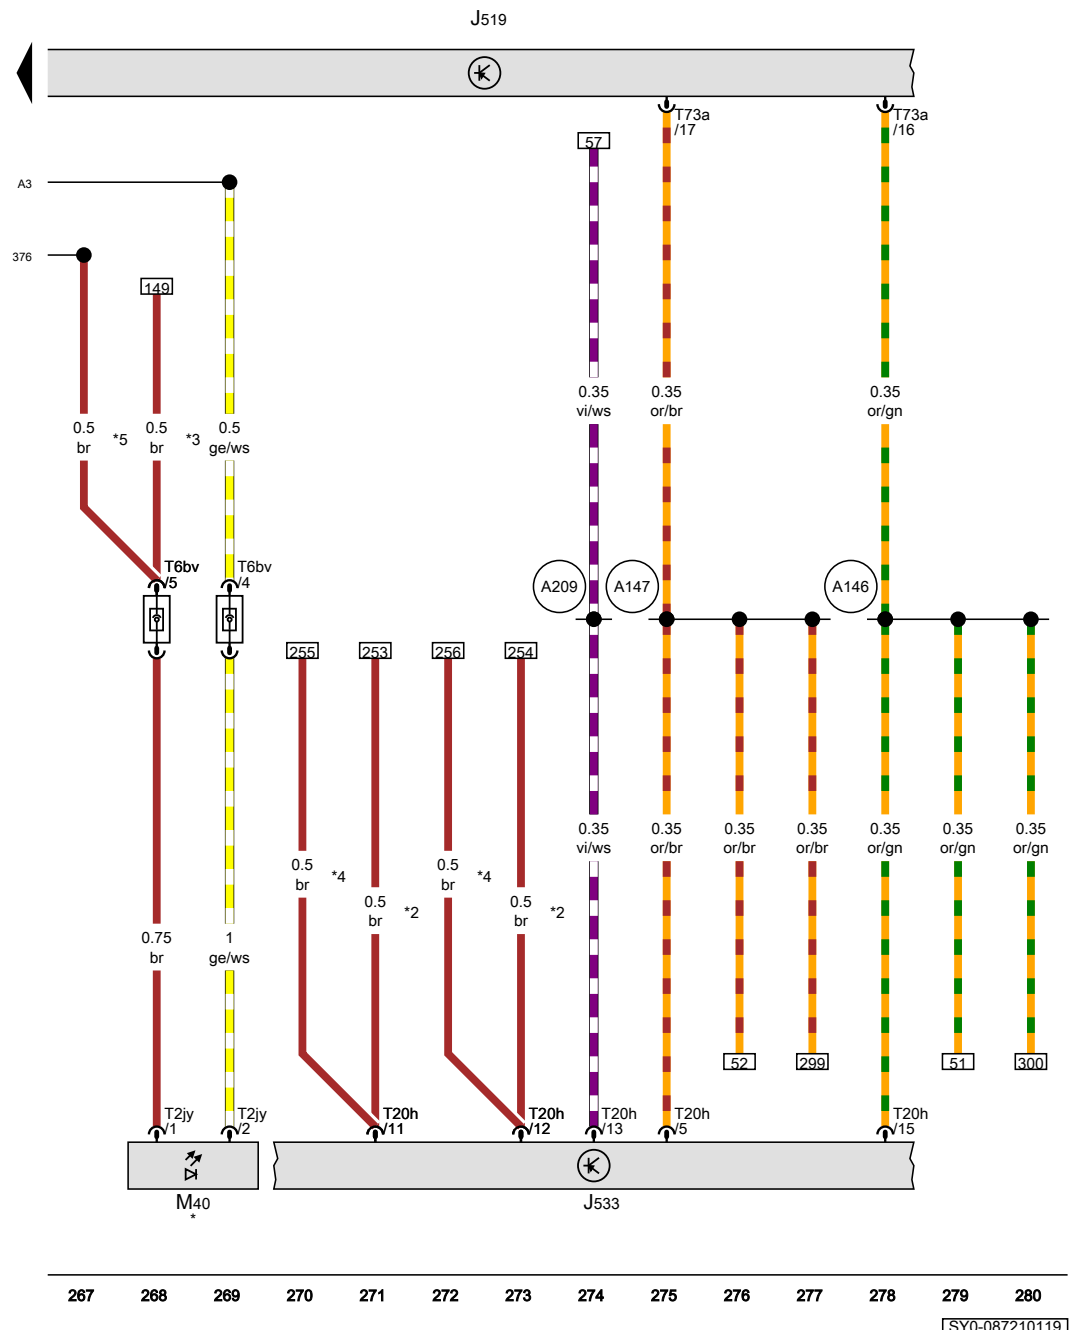


Onboard supply control unit, Data bus diagnostic interface, Centre right side marker bulb

- J519 Onboard supply control unit
- J533 Data bus diagnostic interface
- M40 Centre right side marker bulb
- T2jy 2-pin connector, black
- T6bv 6-pin connector, black
- T20h 20-pin connector, red
- T73a 73-pin connector, black


- 376 Earth connection 11, in main wiring harness
- A3 Positive connection (58), in dash panel wiring harness
- A146 Connection (convenience CAN bus, high), in dash panel wiring harness
- A147 Connection (convenience CAN bus, low), in dash panel wiring harness
- A209 Connection 1 (LIN bus) in dash panel wiring harness
- * For panel van and Kombi models
- *2 For left-hand drive models
- *3 Up to July 2018
- *4 For right-hand drive models
- *5 From July 2018

Engine/motor control unit

- J623 Engine/motor control unit
 T94b 94-pin connector, black
 * For models with cruise control system (CCS)
 *2 According to equipment
 *3 From December 2017

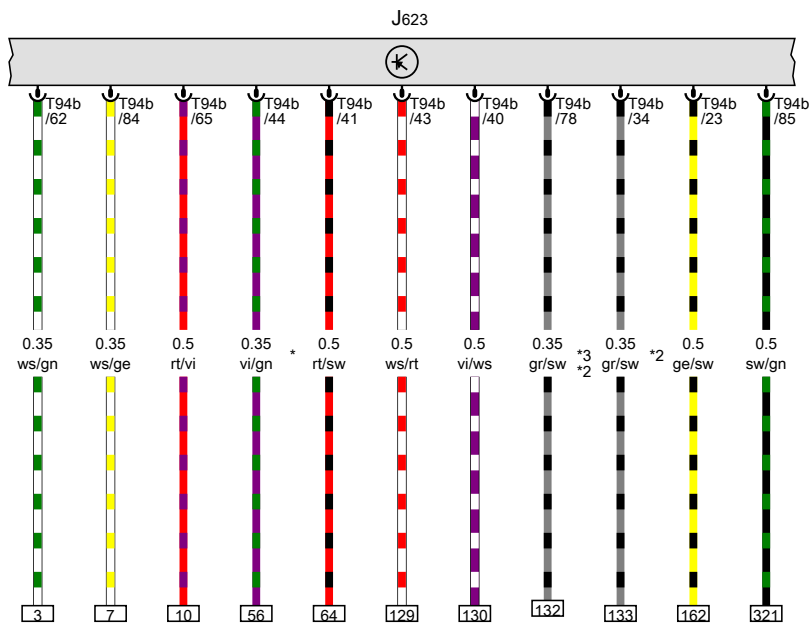

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

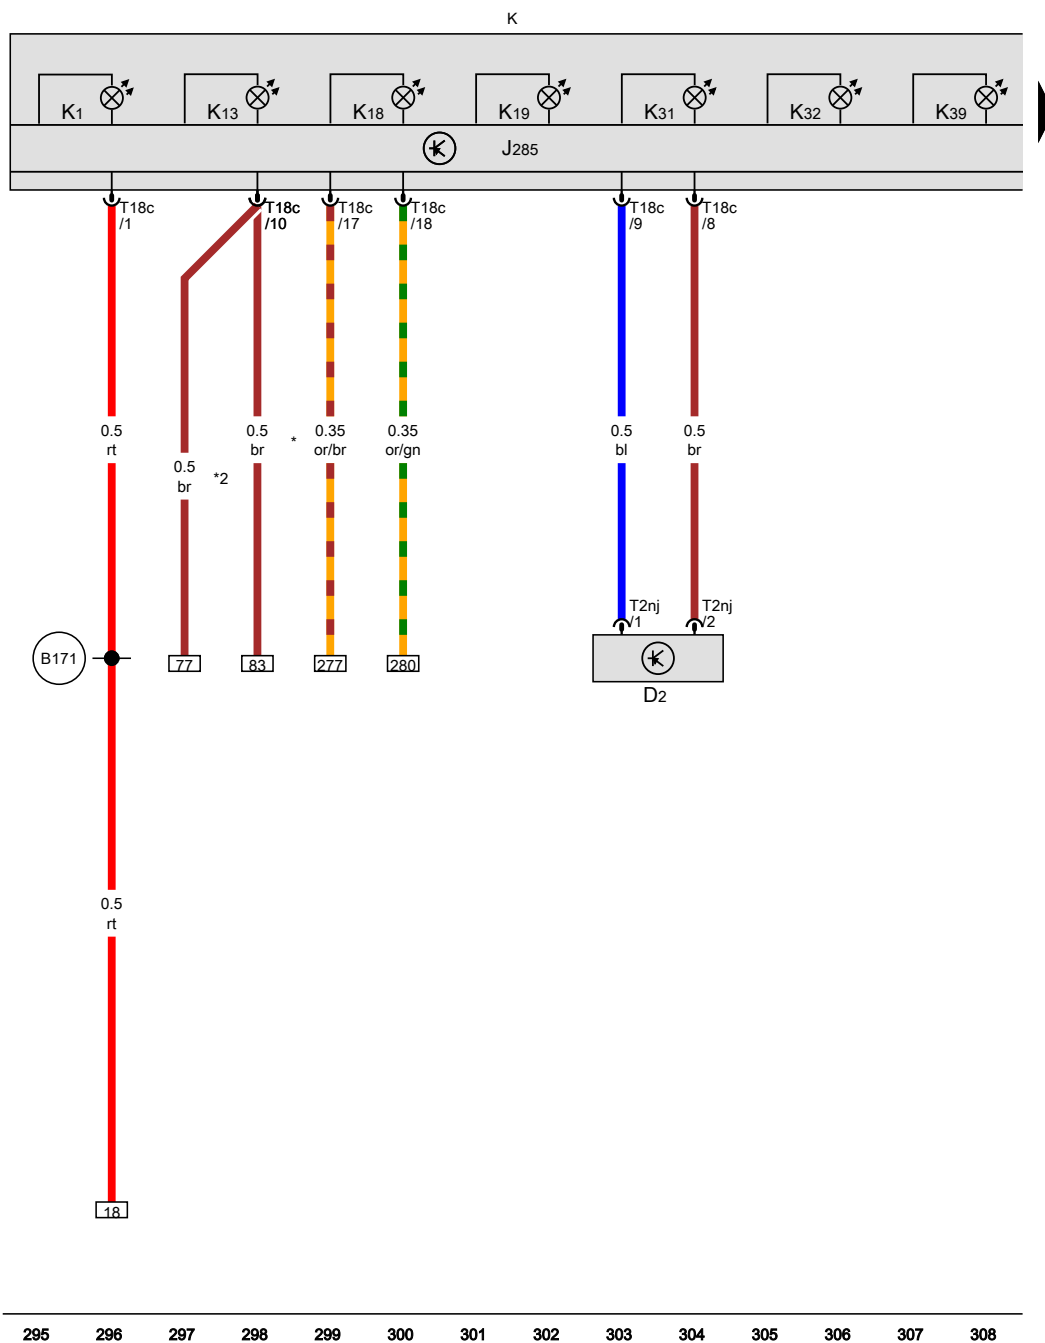

Immobiliser reader coil, Dash panel insert

- D2 Immobiliser reader coil
- J285 Control unit in dash panel insert
- K Dash panel insert
- K1 Main beam warning lamp
- K13 Rear fog light warning lamp
- K18 Trailer operation warning lamp
- K19 Seat belt warning system warning lamp
- K31 Cruise control system warning lamp
- K32 Brake pad warning lamp
- K39 Central warning lamp in display unit
- T2nj 2-pin connector, black
- T18c 18-pin connector, black


B171 Positive connection 3 (30), in interior wiring harness

* For left-hand drive models

*2 For right-hand drive models

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

[SYN-087230119]

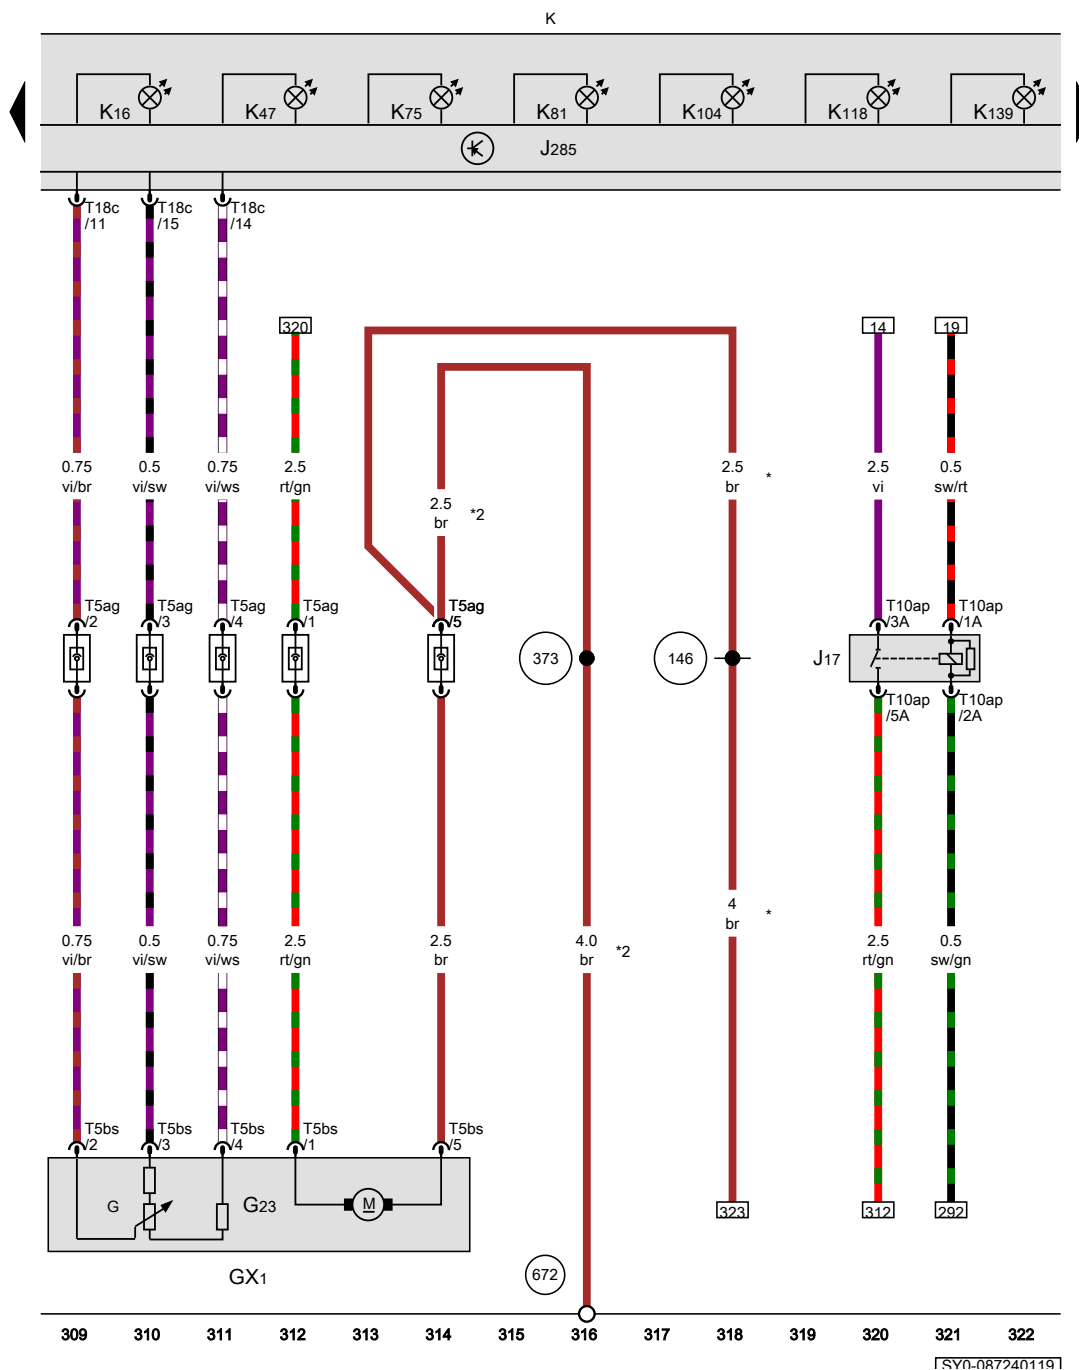

Fuel delivery unit, Fuel pump relay, Dash panel insert

- G Fuel gauge sender
- GX1 Fuel delivery unit
- G23 Fuel pump
- J17 Fuel pump relay
- J285 Control unit in dash panel insert
- K Dash panel insert
- K16 Reserve fuel warning lamp
- K47 ABS warning lamp
- K75 Airbag warning lamp
- K81 Differential lock warning lamp
- K104 Diesel electronics warning lamp
- K118 Brake system warning lamp
- K139 Handbrake warning lamp
- T5ag 5-pin connector, black
- T5bs 5-pin connector, black
- T10ap 10-pin connector, black
- T18c 18-pin connector, black

146 Earth connection 1, in auxiliary heater wiring harness


373 Earth connection 8, in main wiring harness

672 Earth point 2, on front of left longitudinal member

* Up to July 2018

*2 From July 2018

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

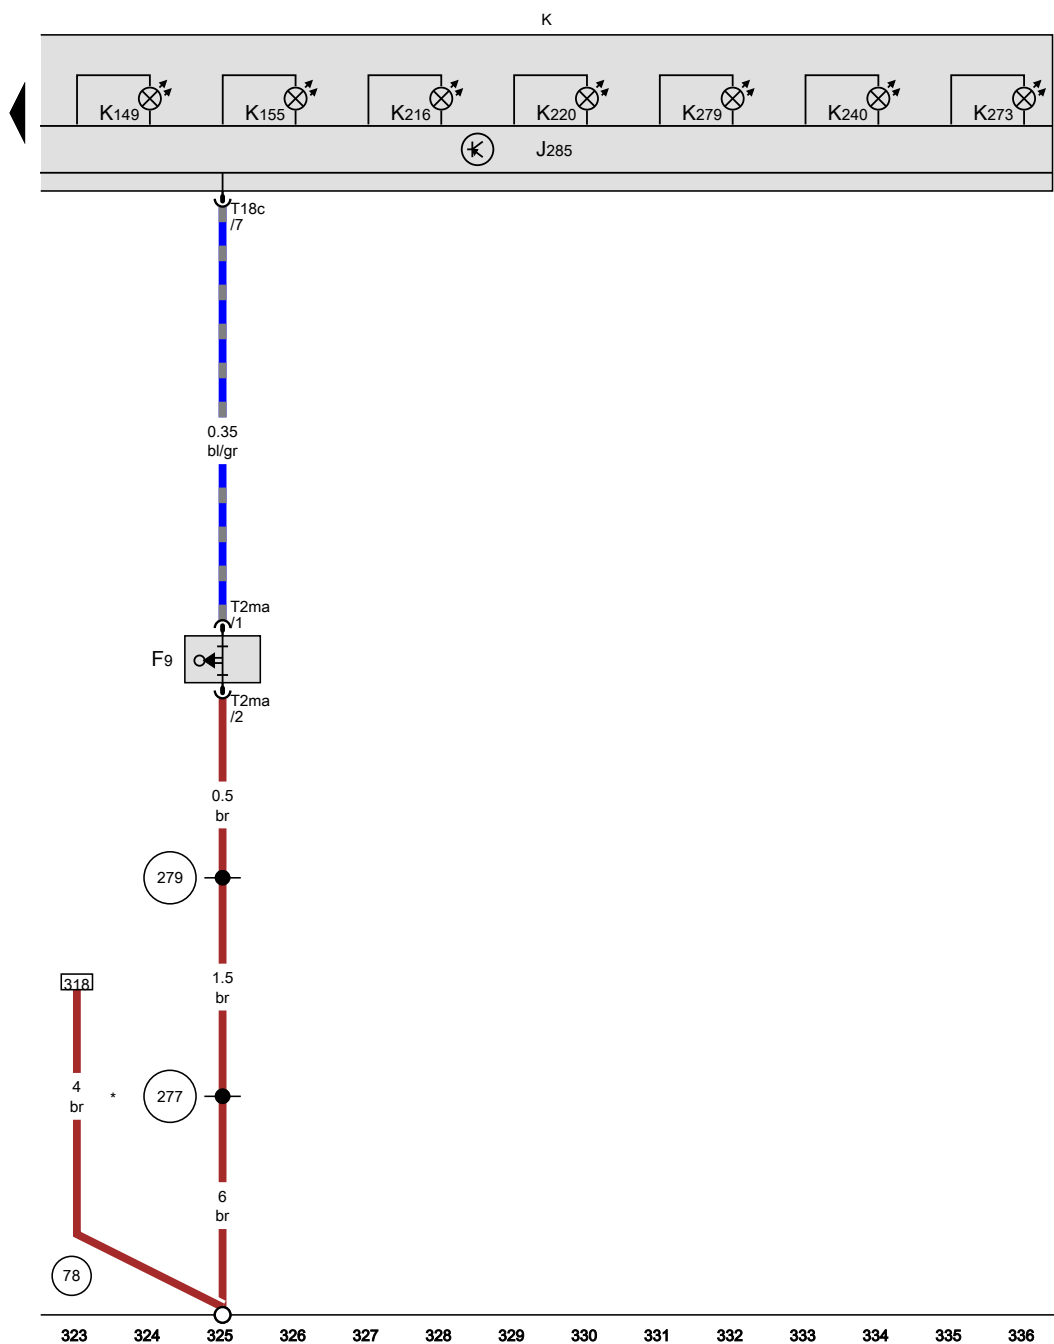

Handbrake warning switch, Dash panel insert

- F9 Handbrake warning switch
- J285 Control unit in dash panel insert
- K Dash panel insert
- K149 Engine electronics warning lamp
- K155 Warning lamp for electronic stabilisation program and TCS
- K216 Warning lamp 2 for electronic stabilisation program and TCS
- K220 Tyre Pressure Loss Indicator warning lamp
- K240 Lane departure warning lamp
- K273 Brake prompt warning lamp
- K279 Electrohydraulic power steering warning lamp
- T2ma 2-pin connector, black
- T18c 18-pin connector, black


- 78 Earth point, lower part of right B-pillar
- 277 Earth connection 3, in interior wiring harness
- 279 Earth connection 5, in interior wiring harness

* Up to July 2018

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

Convenience system

From November 2017

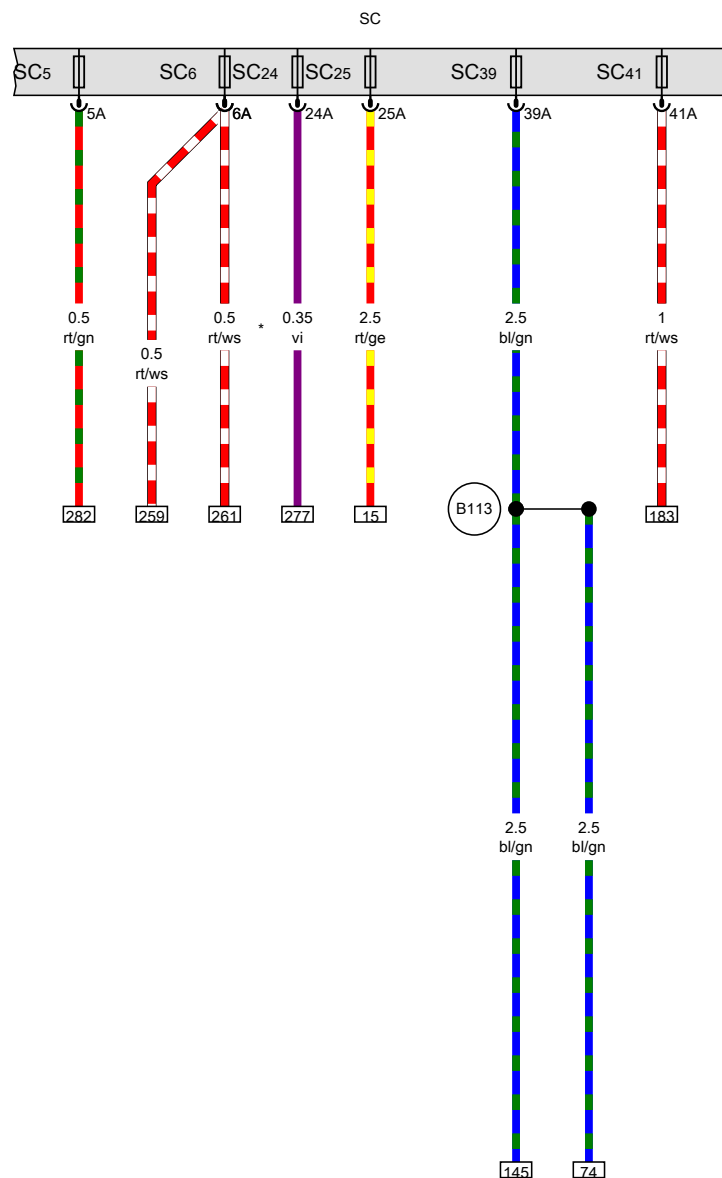

Fuse holder C

- SC Fuse holder C
- SC5 Fuse 5 on fuse holder C
- SC6 Fuse 6 on fuse holder C
- SC24 Fuse 24 on fuse holder C
- SC25 Fuse 25 on fuse holder C
- SC39 Fuse 39 on fuse holder C
- SC41 Fuse 41 on fuse holder C


 Positive connection (30a), in left interior wiring harness

* For models with anti-theft alarm system and front and rear interior monitor

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink


Driver door control unit, Driver door lock unit

- J386 Driver door control unit
T8dt 8-pin connector, black
T20k 20-pin connector, black
T28f 28-pin connector, black
VX21 Driver door lock unit
205 Earth connection, in driver door wiring harness

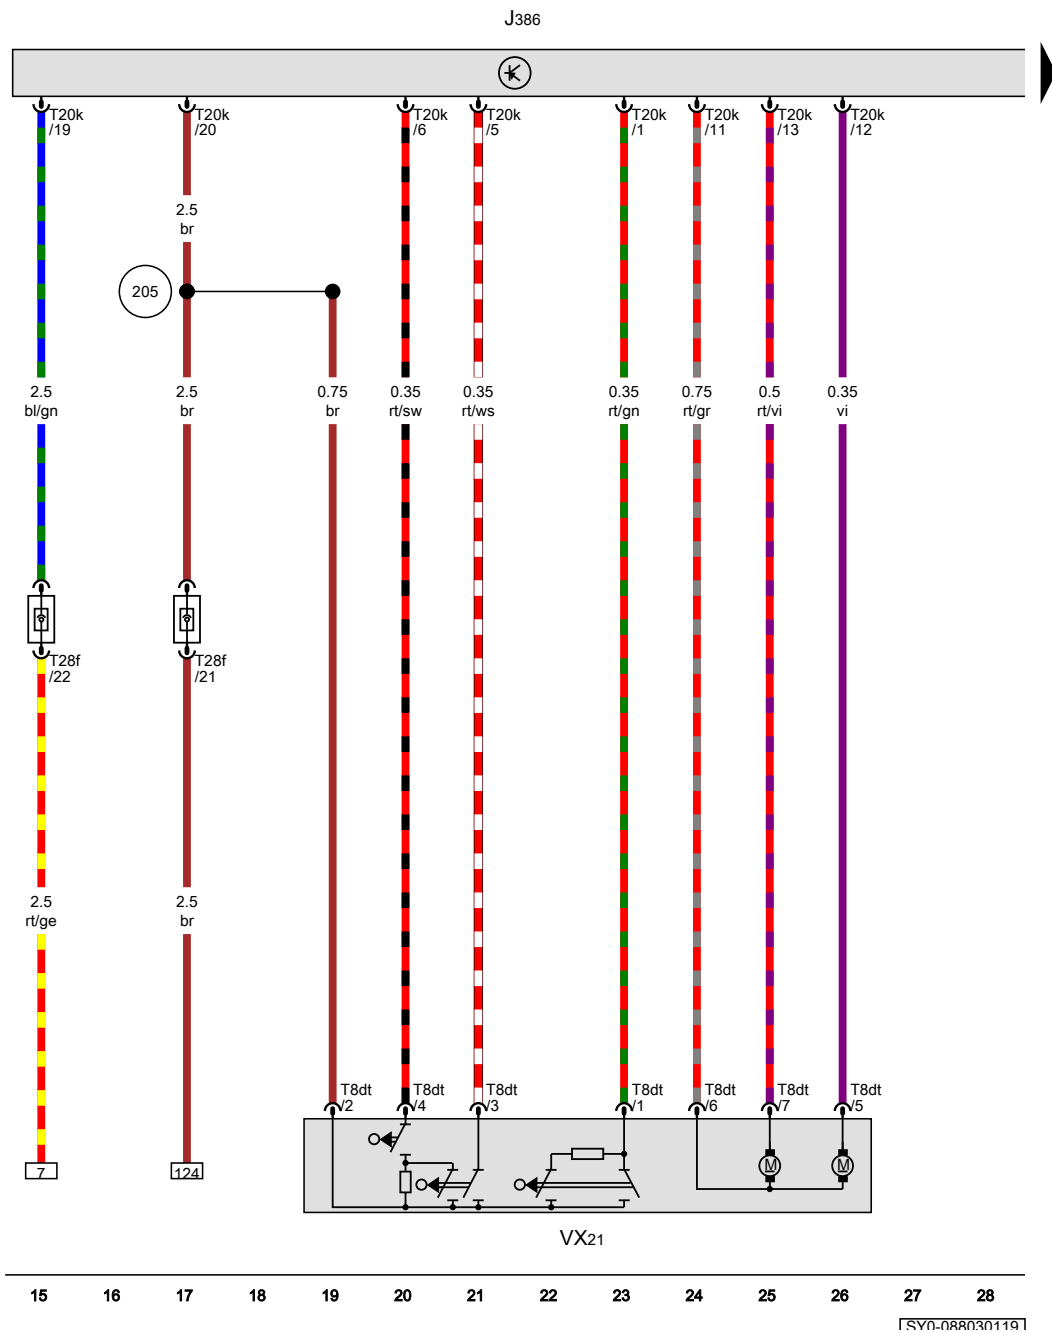


- ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink

Driver door control unit, Central locking SAFELOCK function warning lamp, Left window regulator motor

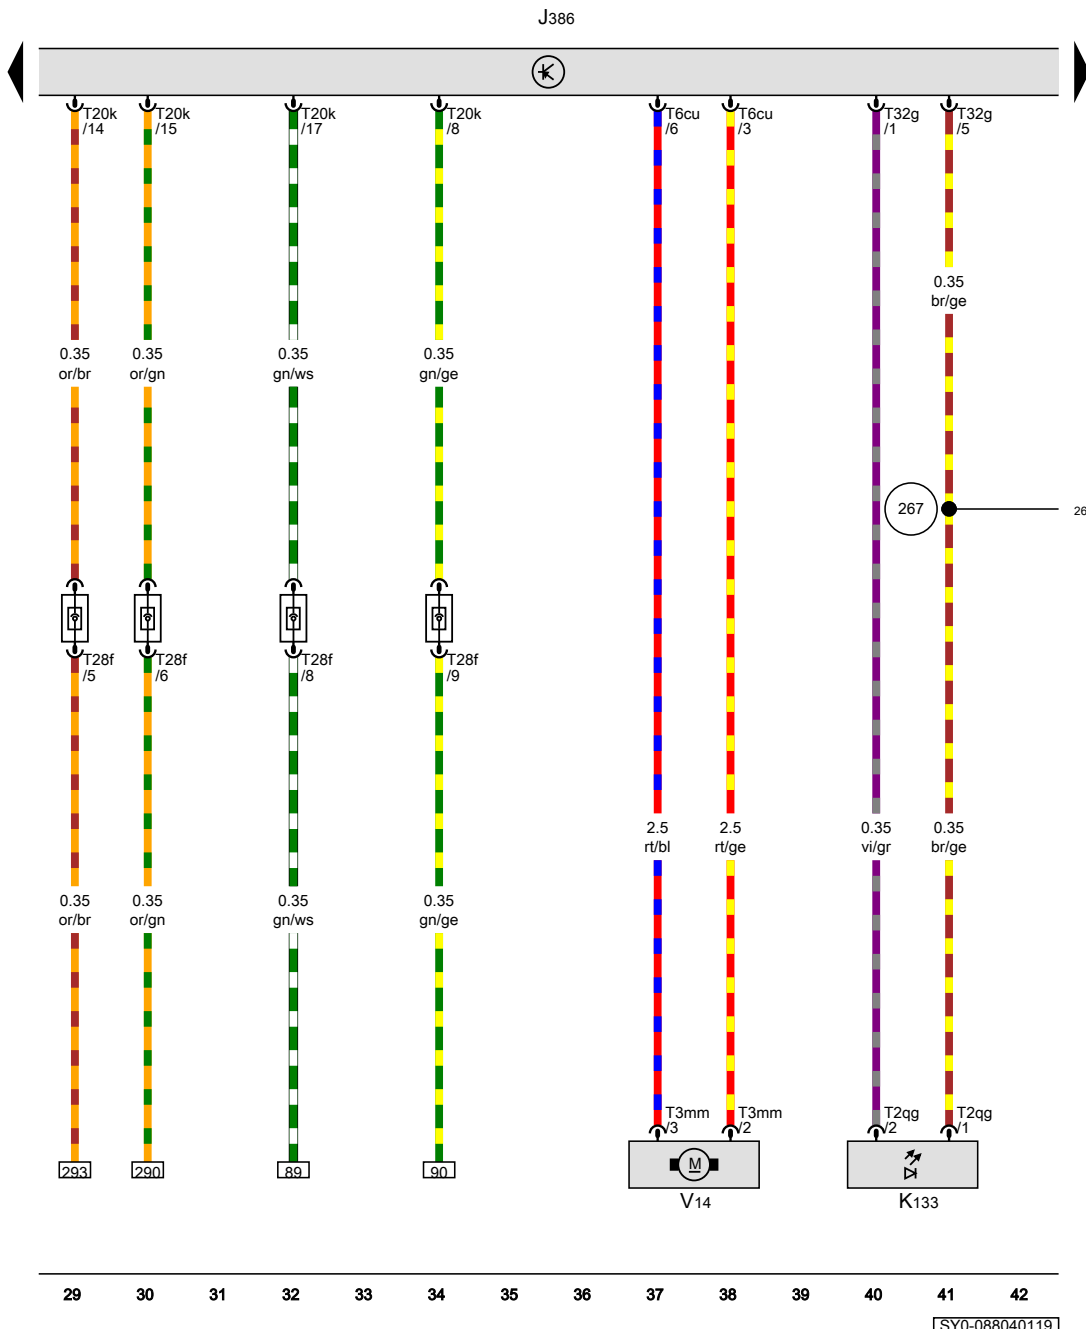

- J386 Driver door control unit
- K133 Central locking SAFELOCK function warning lamp
- T2qg 2-pin connector, black
- T3mm 3-pin connector, blue
- T6cu 6-pin connector, black
- T20k 20-pin connector, black
- T28f 28-pin connector, black
- T32g 32-pin connector, blue
- V14 Left window regulator motor
- 267 Earth connection 2, in drive side door wiring harness

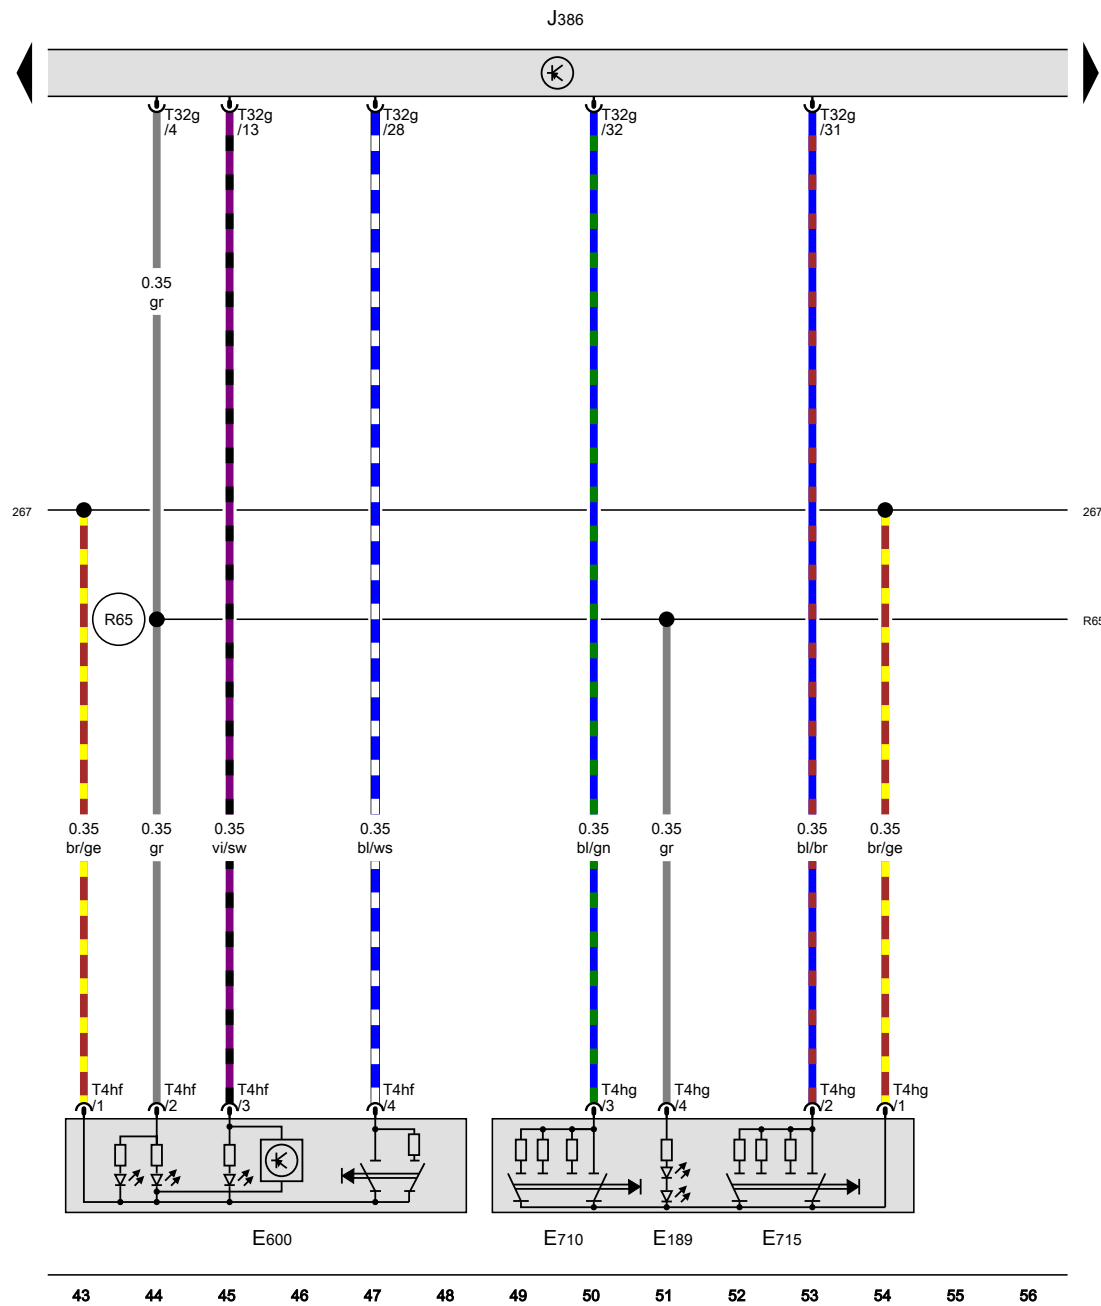

Central switch for window regulators in driver door, Central locking button, Driver door control unit


- E189 Central switch for window regulators in driver door
- E600 Central locking button
- E710 Front driver side window regulator button
- E715 Front passenger side window regulator button, in driver door
- J386 Driver door control unit
- T4hf 4-pin connector, blue
- T4hg 4-pin connector, brown
- T32g 32-pin connector, blue

267 Earth connection 2, in drive side door wiring harness

R65 Positive connection (58), in driver door wiring harness

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

1SY0-088050119

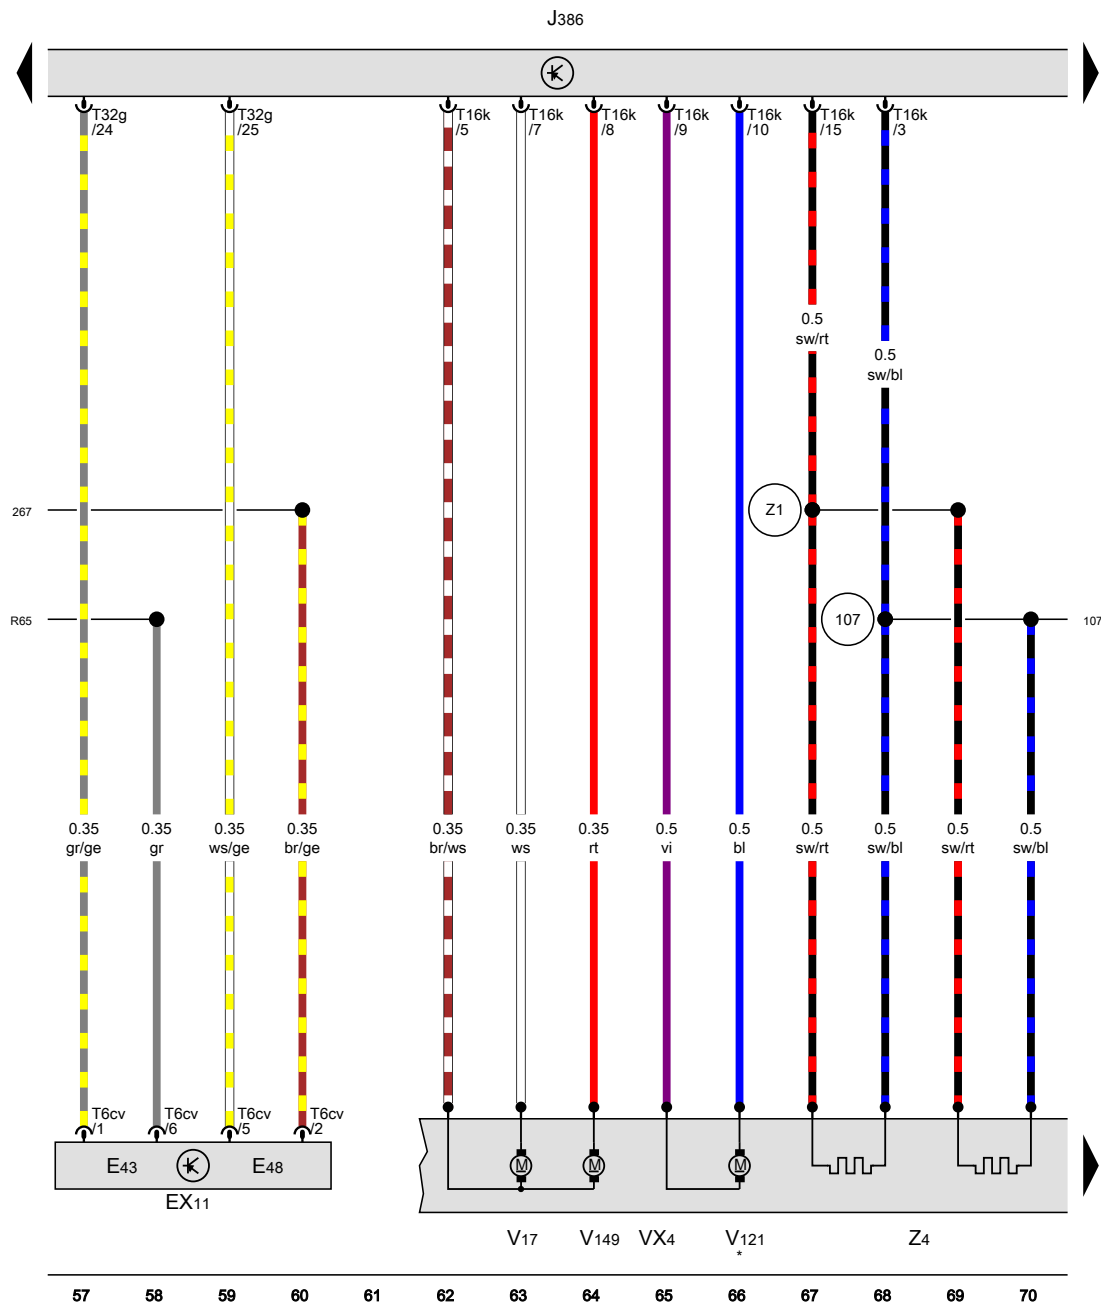


Exterior mirror adjuster, Driver door control unit, Driver side exterior mirror

- EX11 Exterior mirror adjuster
- E43 Mirror adjustment switch
- E48 Mirror adjustment changeover switch
- J386 Driver door control unit
- T6cv 6-pin connector, brown
- T16k 16-pin connector, black
- T32g 32-pin connector, blue
- VX4 Driver side exterior mirror
- V17 Driver side mirror adjustment motor 2
- V121 Driver side fold-in mirror motor
- V149 Driver side mirror adjustment motor
- Z4 Heated exterior mirror on driver side

- 107 Earth connection, in external mirror wiring harness
- 267 Earth connection 2, in drive side door wiring harness
- R65 Positive connection (58), in driver door wiring harness
- Z1 Connection 1, in mirror adjustment/heating wiring harness
- * For models with electric folding exterior mirrors


ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink

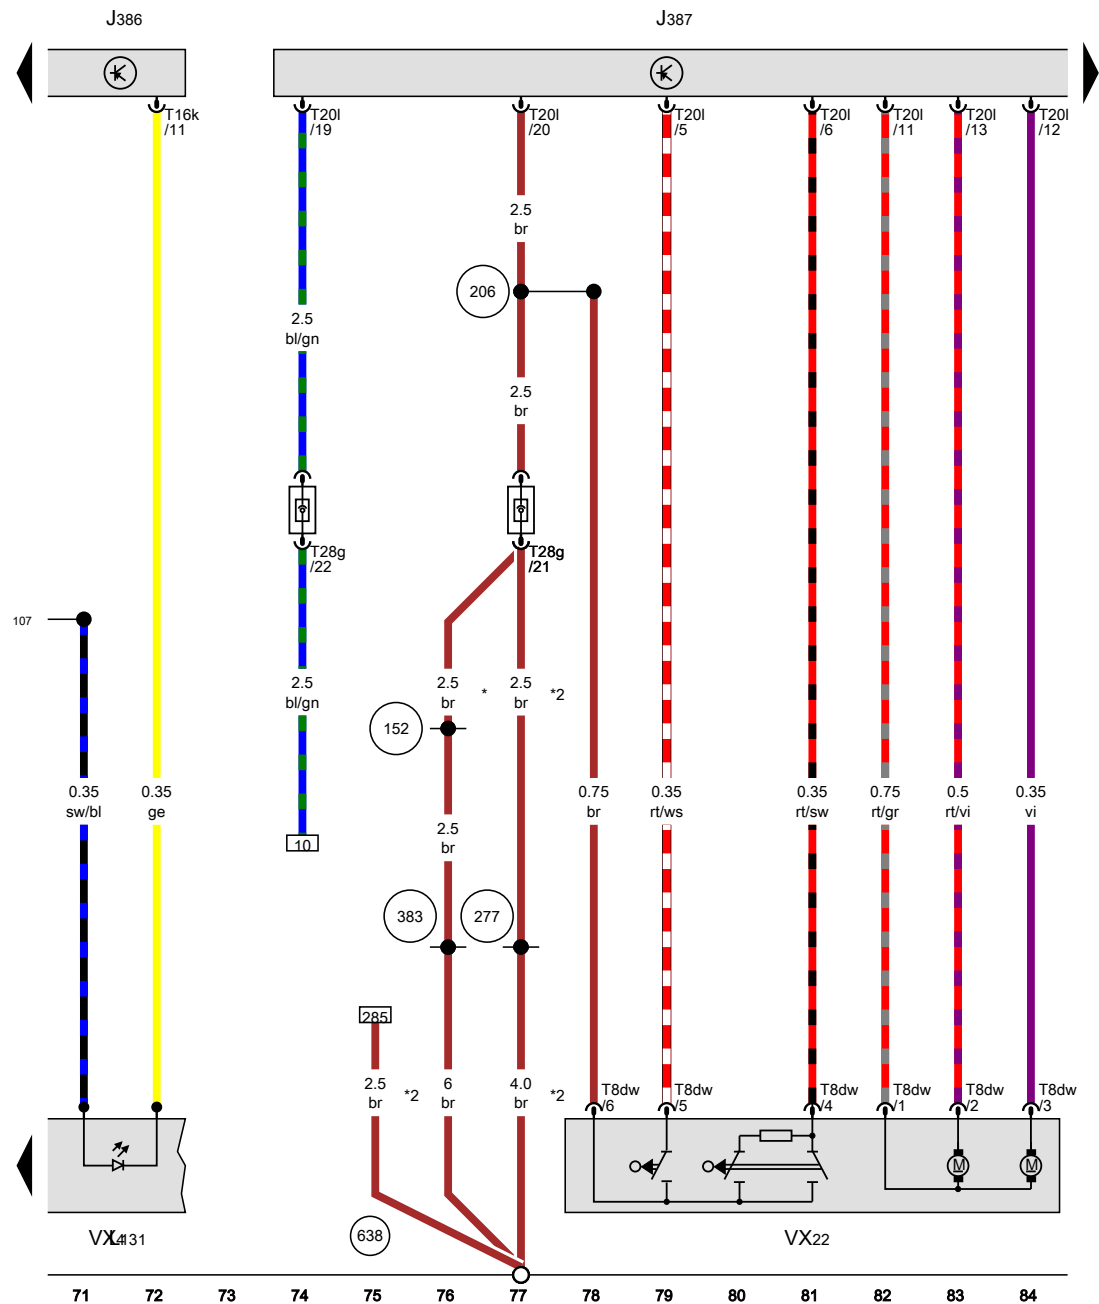

Driver door control unit, Front passenger door control unit, Driver side exterior mirror, Front passenger door lock unit

- J386 Driver door control unit
- J387 Front passenger door control unit
- L131 Driver side turn signal repeater bulb
- T8dw 8-pin connector, black
- T16k 16-pin connector, black
- T20l 20-pin connector, black
- T28g 28-pin connector, black
- VX4 Driver side exterior mirror
- VX22 Front passenger door lock unit

- 107 Earth connection, in external mirror wiring harness
- 152 Earth connection 2, in front wiring harness
- 206 Earth connection, in front passenger door wiring harness
- 277 Earth connection 3, in interior wiring harness
- 383 Earth connection 18, in main wiring harness
- 638 Earth point, on right A-pillar
- * For left-hand drive models
- *2 For right-hand drive models

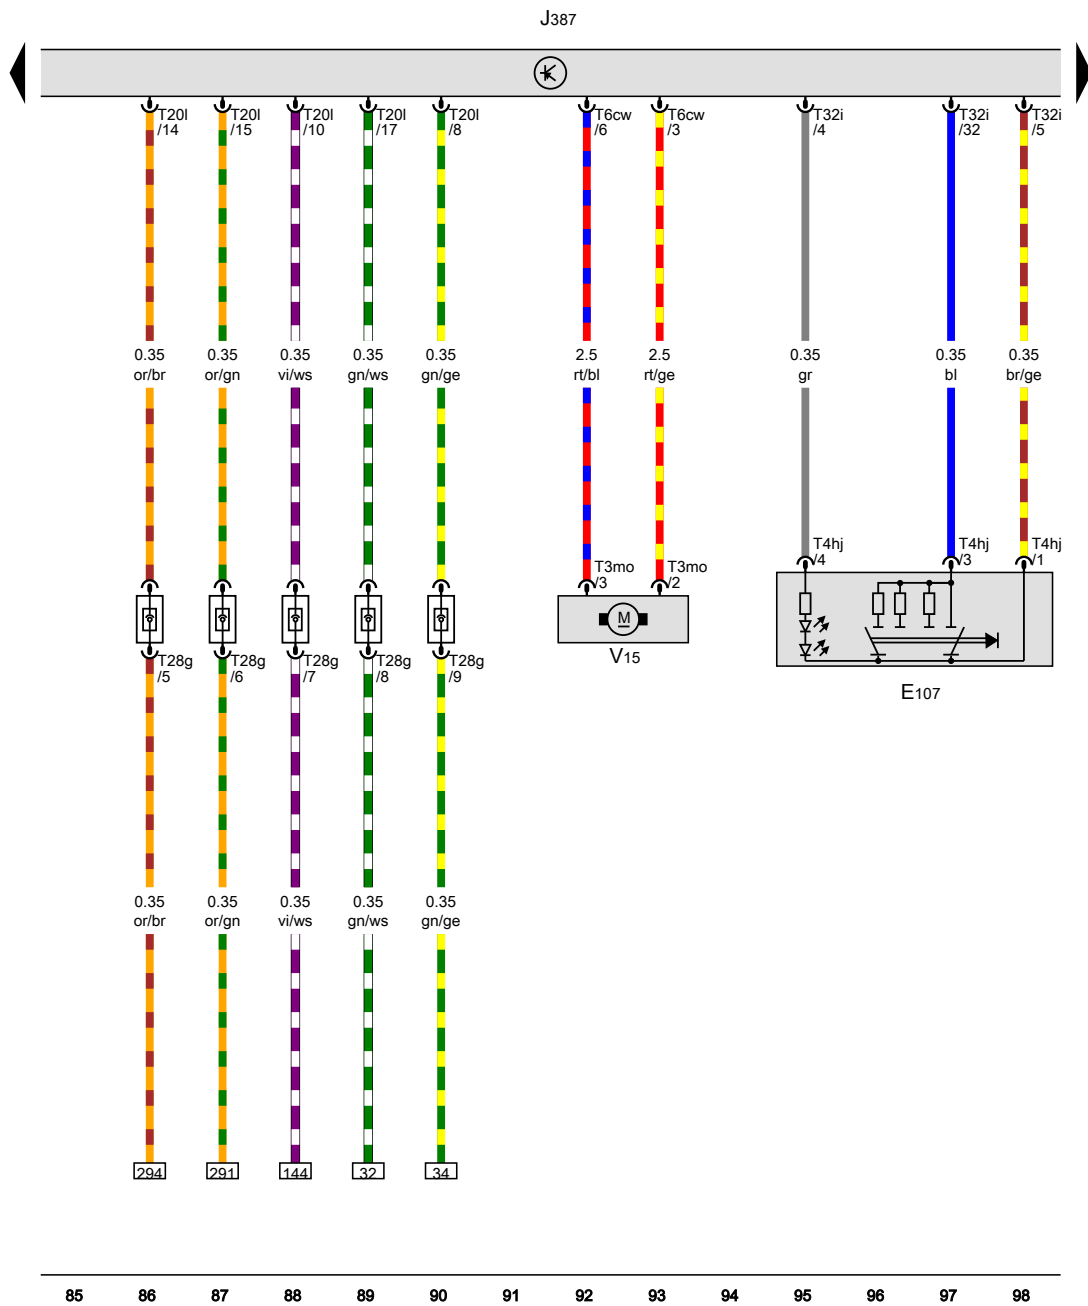


Window regulator switch in front passenger door, Front passenger door control unit, Right window regulator motor

- E107 Window regulator switch in front passenger door
- J387 Front passenger door control unit
- T3mo 3-pin connector, blue
- T4hj 4-pin connector, black
- T6cw 6-pin connector, black
- T20l 20-pin connector, black
- T28g 28-pin connector, black
- T32i 32-pin connector, blue
- V15 Right window regulator motor

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

[SYN-088080119]

Front passenger door control unit, Passenger side exterior mirror

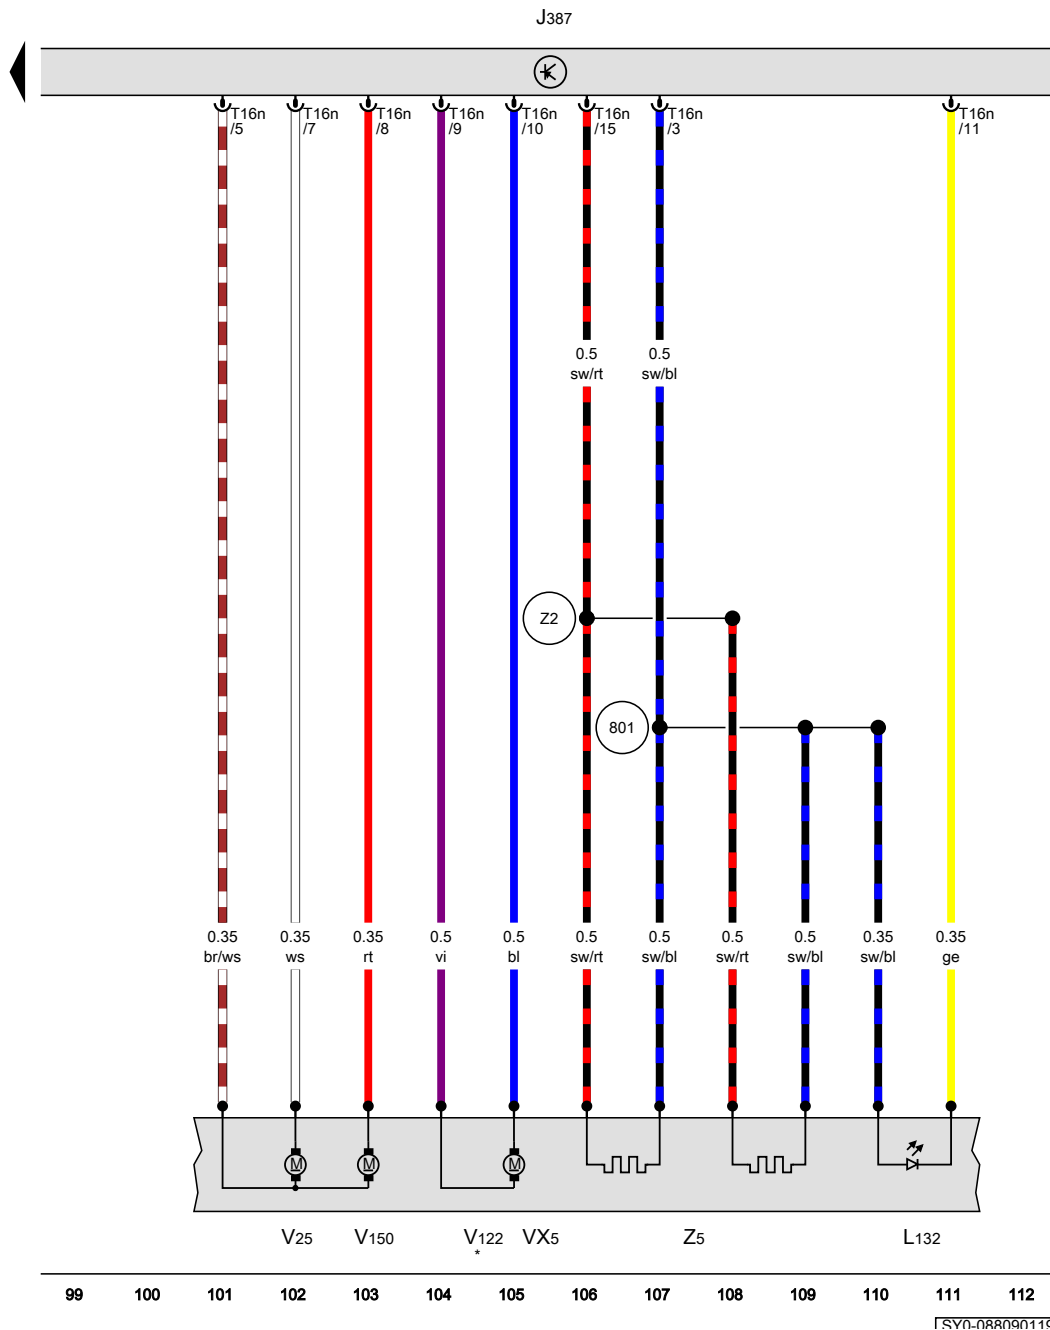

- J387 Front passenger door control unit
- L132 Front passenger side turn signal repeater bulb
- T16n 16-pin connector
- VX5 Passenger side exterior mirror
- V25 Front passenger side mirror adjustment motor 2
- V122 Front passenger side fold-in mirror motor
- V150 Front passenger side mirror adjustment motor
- Z5 Heated exterior mirror on passenger side
- 801 Earth connection 2, in external mirror wiring harness
- Z2 Connection 2, in mirror adjustment/heating wiring harness
- * For models with electric folding exterior mirrors

Contact strip in left sliding door, Onboard supply control unit,
Rear left door lock unit

F353 Contact strip in left sliding door
J519 Onboard supply control unit
T6bq 6-pin connector, black
T6co 6-pin connector, black
T8dp 8-pin connector, black
T73a 73-pin connector, black
T73c 73-pin connector, black
VX23 Rear left door lock unit

44 Earth point, lower part of left A-pillar

77 Earth point, lower part of left B-pillar

151 Earth connection 1, in front wiring harness

294 Earth connection 9, in interior wiring harness


* For models with SAFELOCK function

*2 For models with left sliding door

*3 For models with double cab

*4 For left-hand drive models


*5 For right-hand drive models

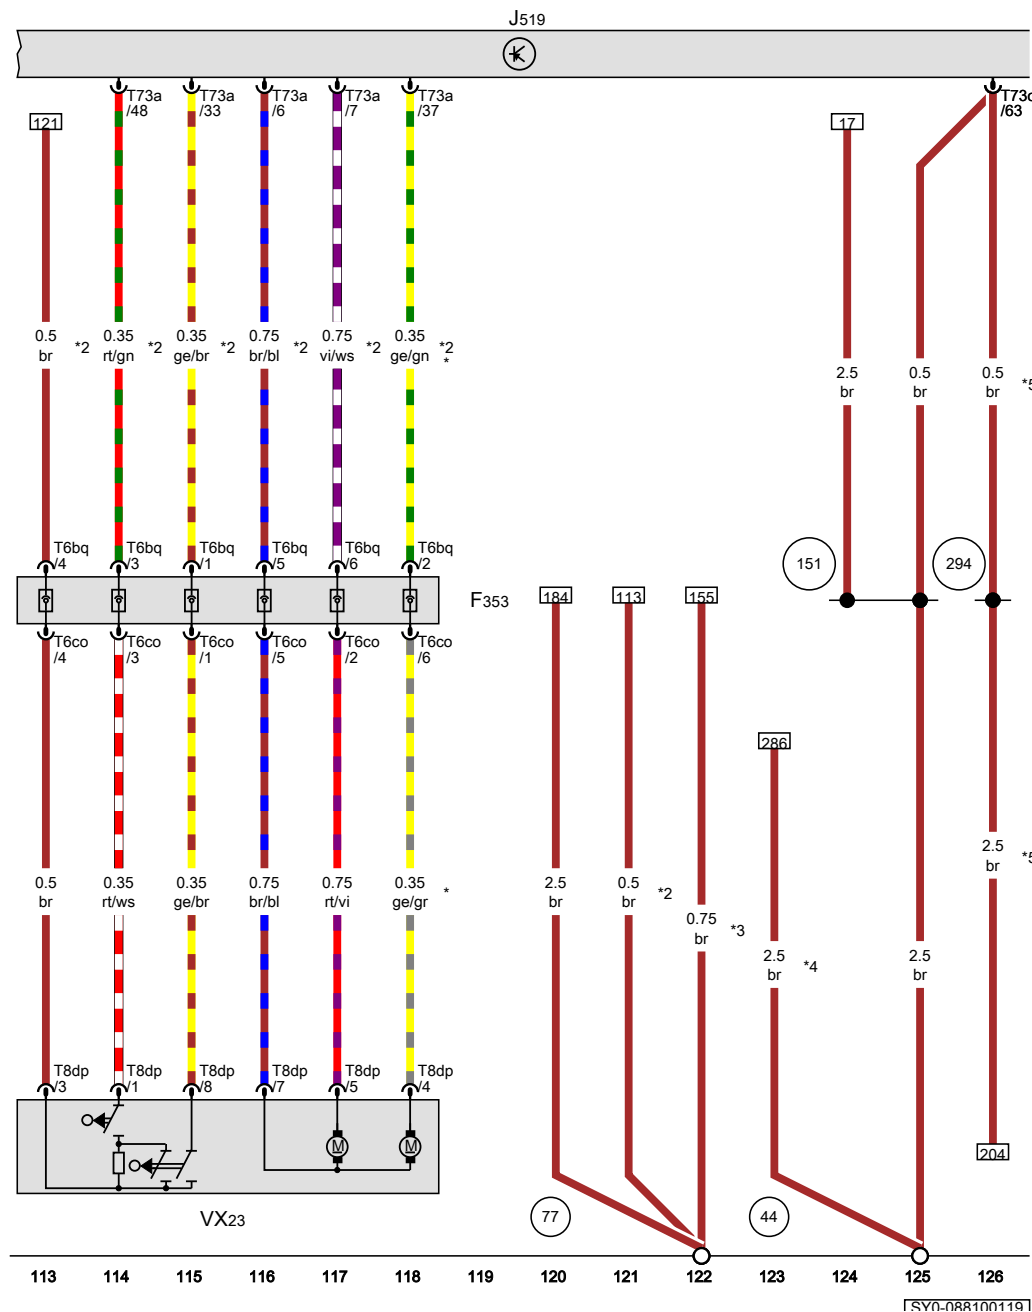


ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink

Contact strip in right sliding door, Onboard supply control unit, Rear right door lock unit

- F352 Contact strip in right sliding door
- J519 Onboard supply control unit
- T6bn 6-pin connector, black
- T6cp 6-pin connector, black
- T8dq 8-pin connector, black
- T73a 73-pin connector, black
- VX24 Rear right door lock unit
- * For models with right sliding door
- *2 For models with left and right sliding doors

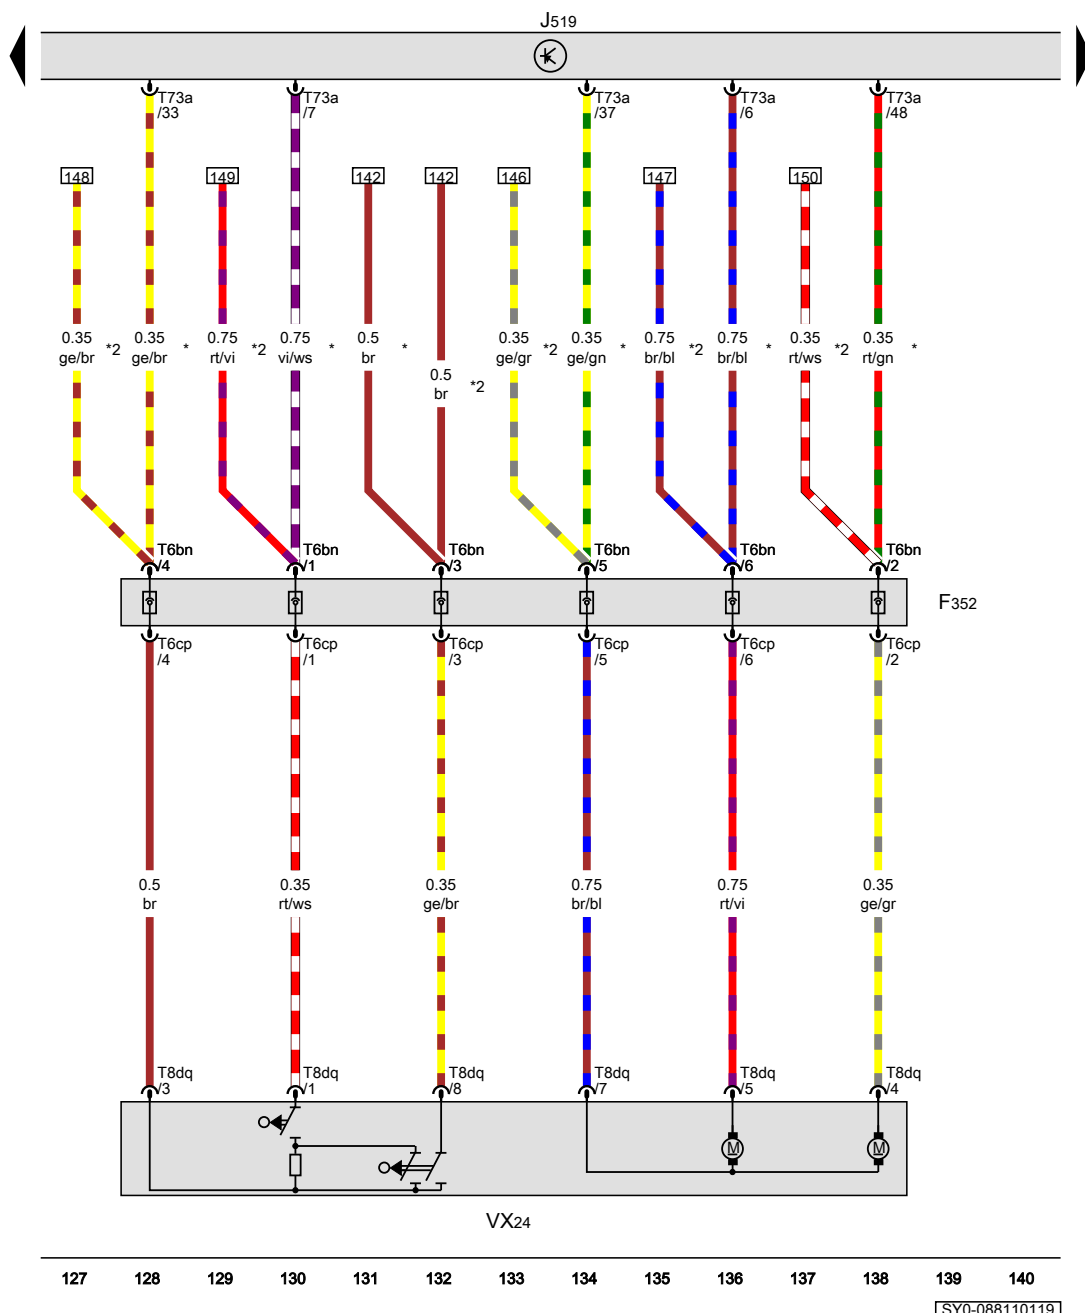

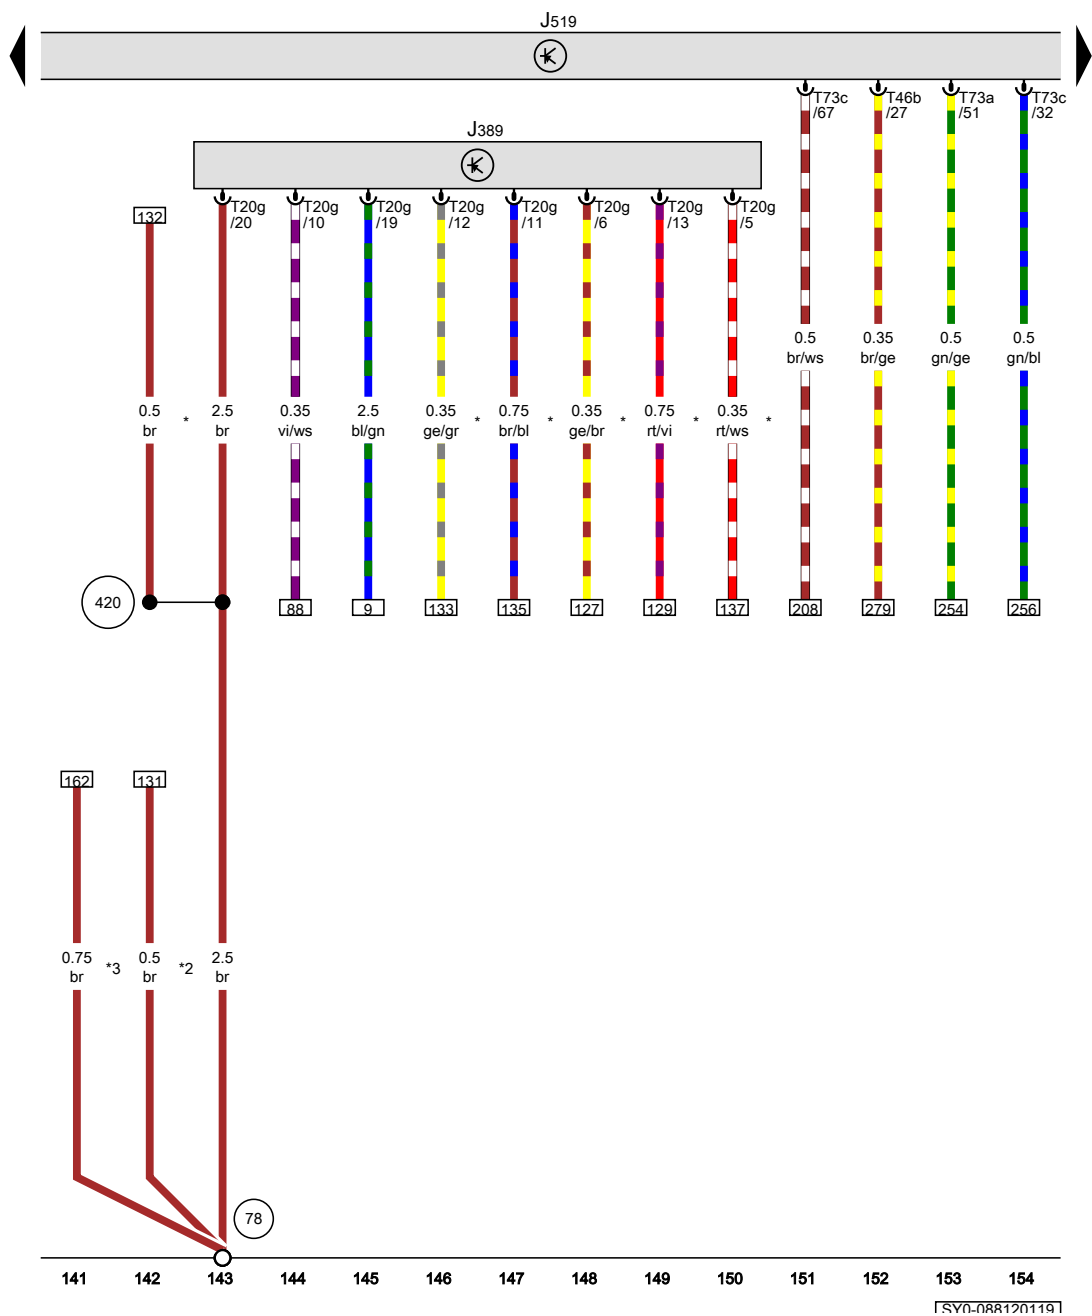

Rear right door control unit, Onboard supply control unit

J389 Rear right door control unit, behind lower section of right B-pillar trim

J519 Onboard supply control unit

T20g 20-pin connector, black

T46b 46-pin connector, black

T73a 73-pin connector, black

T73c 73-pin connector, black

78 Earth point, lower part of right B-pillar

420 Earth connection 1, in left sliding door wiring harness


* For models with left and right sliding doors


*2 For models with right sliding door

*3 For models with double cab

Onboard supply control unit, Rear left door lock unit, Rear right door lock unit

- J519 Onboard supply control unit
T6bo 6-pin connector, black
T6bp 6-pin connector, black
T6cy 6-pin connector, black
T8dy 8-pin connector, black
T8dz 8-pin connector, black
T73a 73-pin connector, black
VX23 Rear left door lock unit
VX24 Rear right door lock unit
* For models with double cab

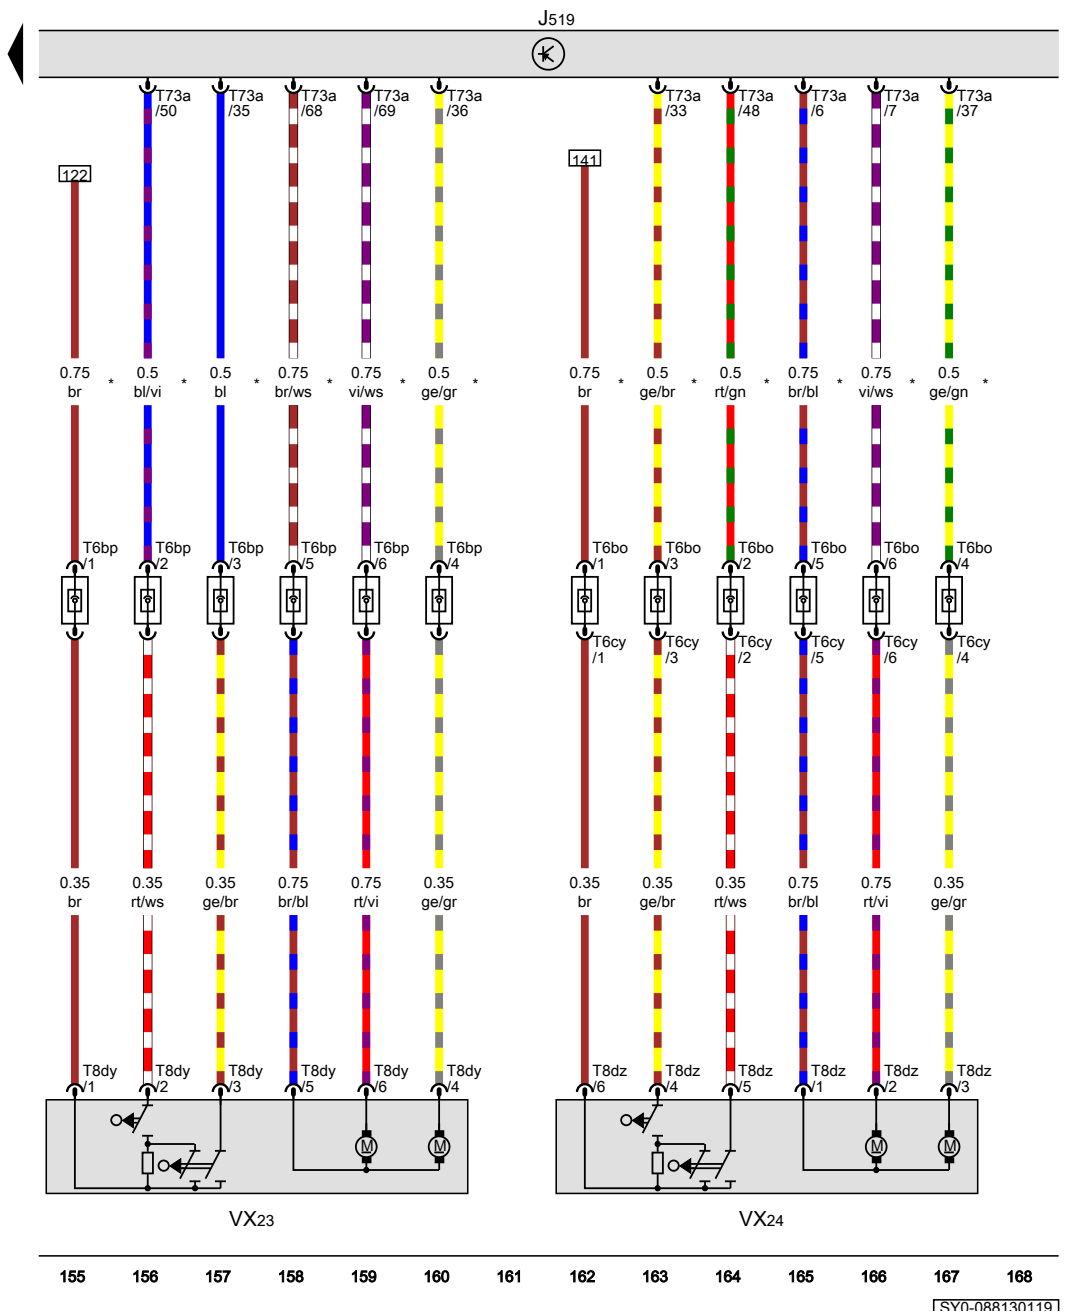

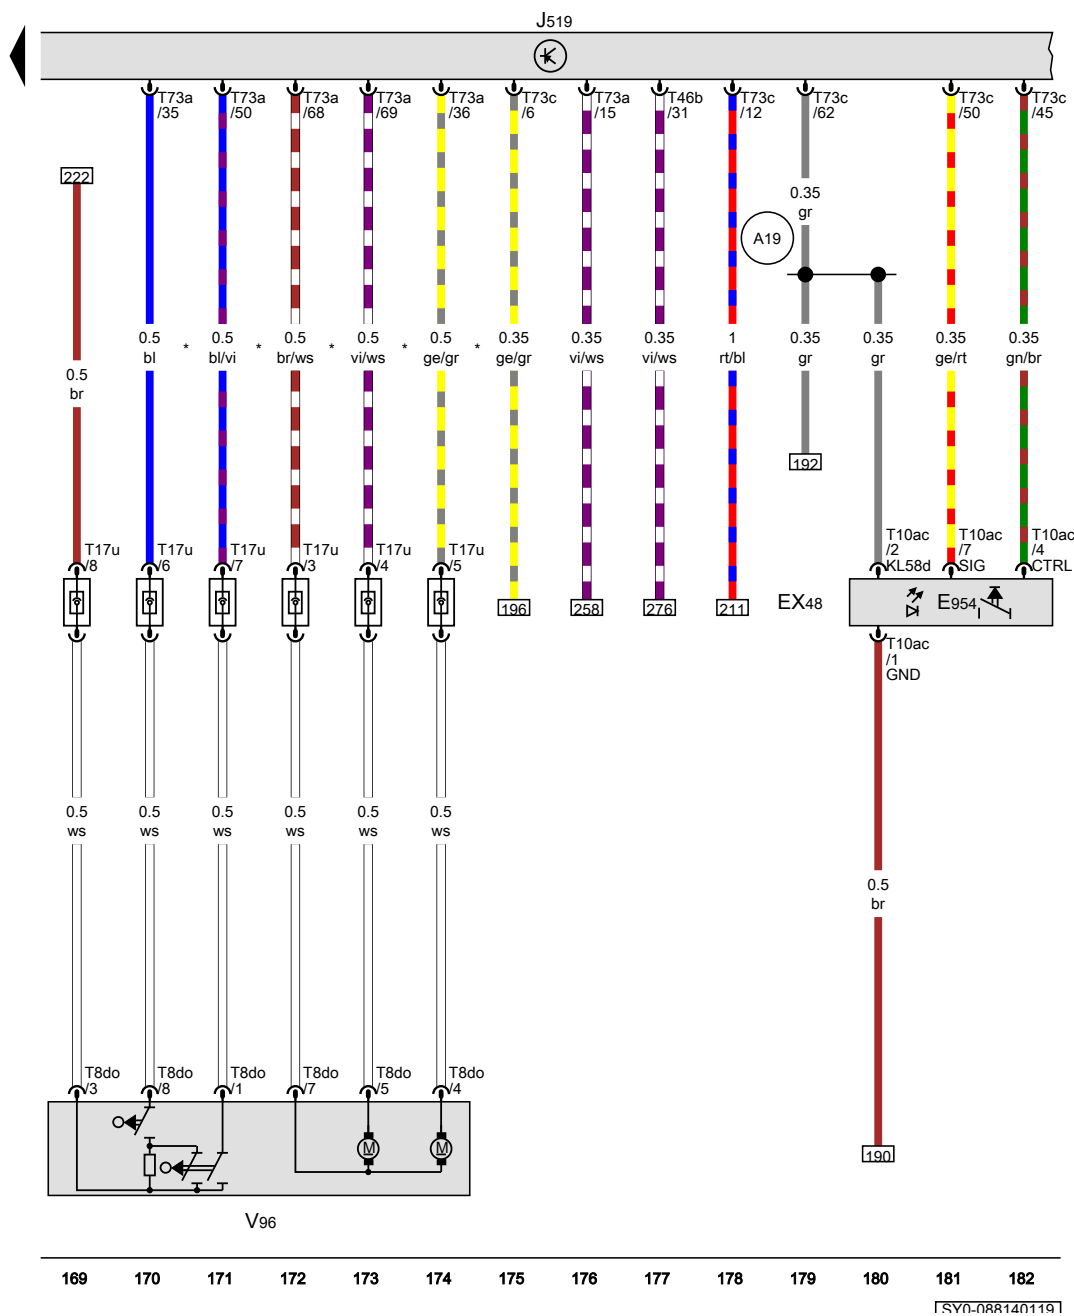


Centre switch module 3 in dash panel, Onboard supply control unit, Rear wing door central locking motor

- EX48 Centre switch module 3 in dash panel
- E954 Load area locking button
- J519 Onboard supply control unit
- T8do 8-pin connector, black
- T10ac 10-pin connector, black
- T17u 17-pin connector, black
- T46b 46-pin connector, black
- T73a 73-pin connector, black
- T73c 73-pin connector, black
- V96 Rear wing door central locking motor

A19 Connection (58d), in dash panel wiring harness

* For models with wing doors


Centre switch module 4 in dash panel, Interior light switch, Interior light relay

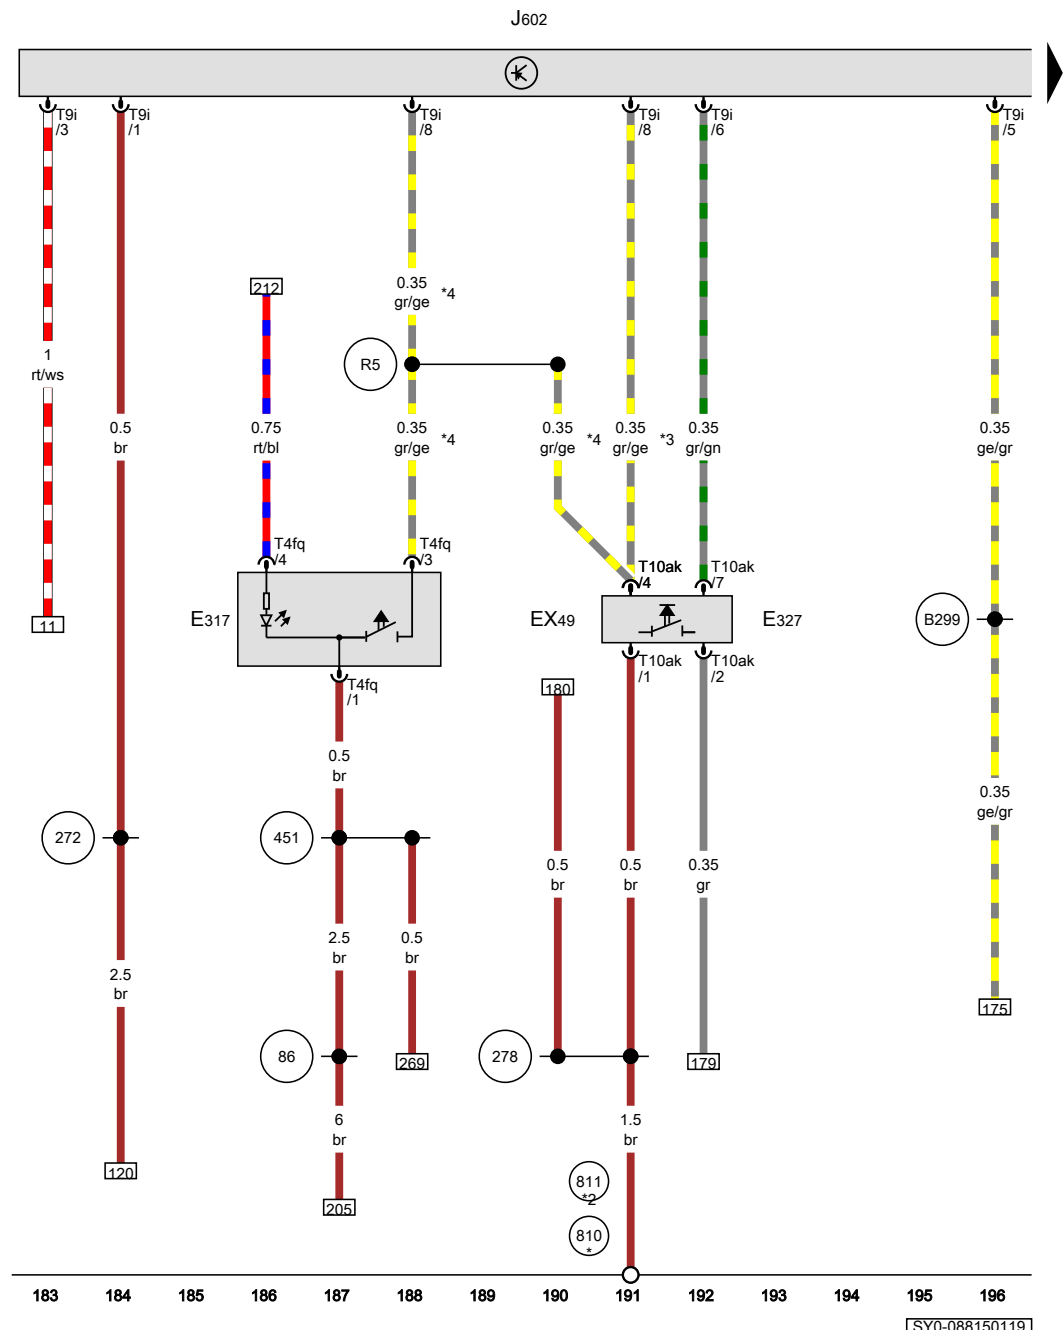

- EX49 Centre switch module 4 in dash panel
- E317 Interior light switch
- E327 Rear interior light button
- J602 Interior light relay
- T4fq 4-pin connector, black
- T9i 9-pin connector, grey
- T10ak 10-pin connector, black

- 86 Earth connection 1, in rear wiring harness
- 272 Earth connection 4, in front wiring harness
- 278 Earth connection 4, in interior wiring harness
- 451 Earth connection 1 in rear right side panel
- 810 Earth point on central tube for dash panel, centre left
- 811 Earth point on central tube for dash panel, centre right
- B299 Positive connection 3 (30), in main wiring harness
- R5 Connection 2, in interior light wiring harness
- * For left-hand drive models
- *2 For right-hand drive models
- *3 For models with no LED interior lights
- *4 For models with LED interior lights

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

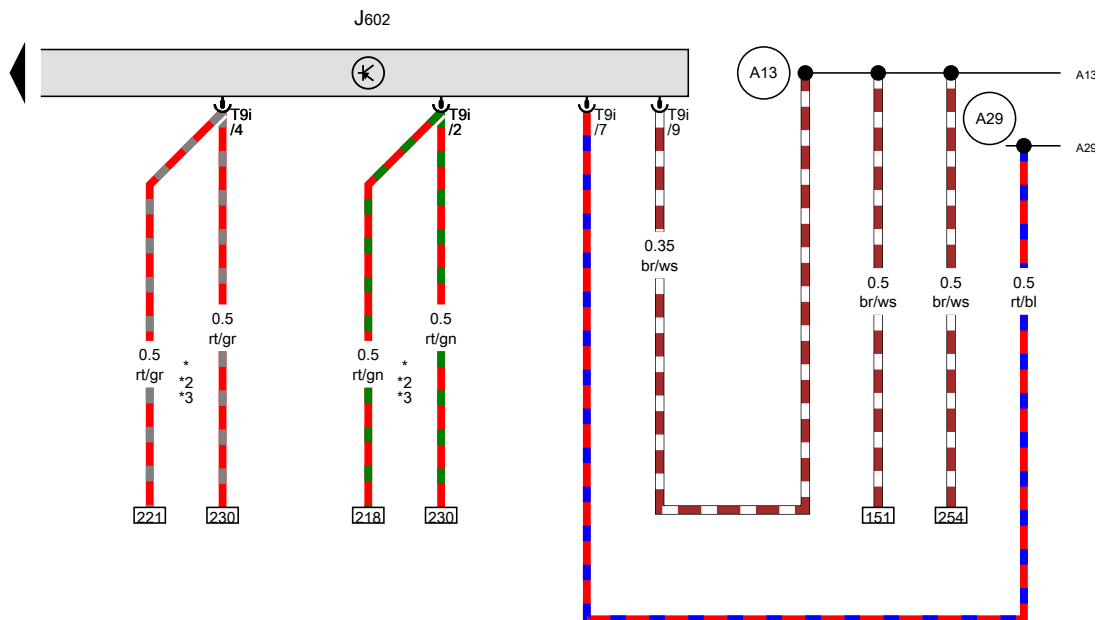

Interior light relay

J602 Interior light relay


T9i 9-pin connector, grey

667 Earth point, on rear left of roof


A13 Connection (door contact switch), in dash panel wiring harness

A29 Connection (interior light), in dash panel wiring harness

- * For models with no left sliding door and rear loudspeakers
- *2 For models with no right sliding door and rear loudspeakers
- *3 For models with entry lights
- *4 For right-hand drive models

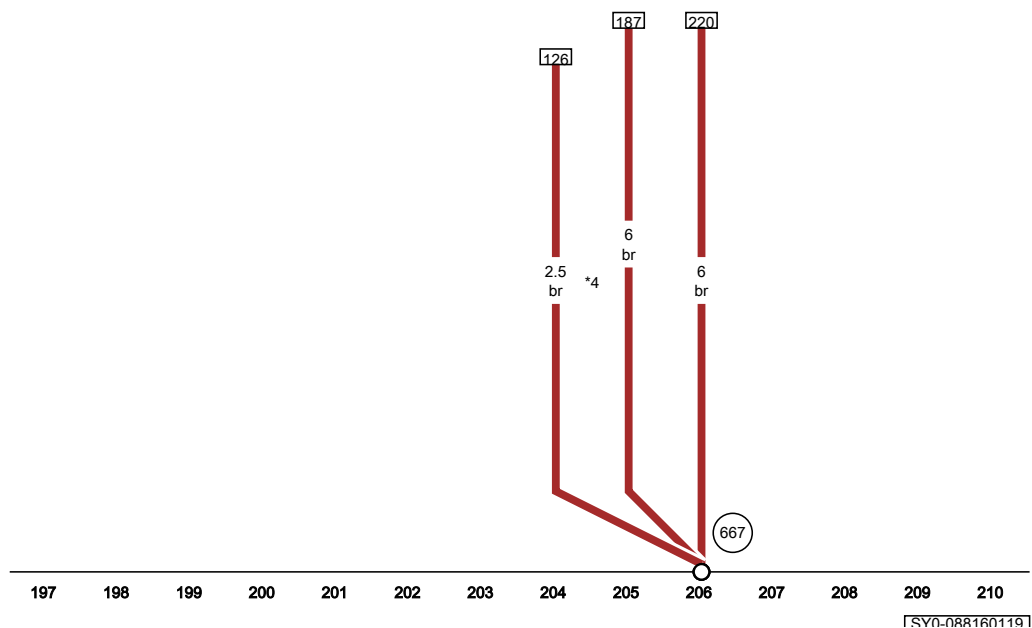

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

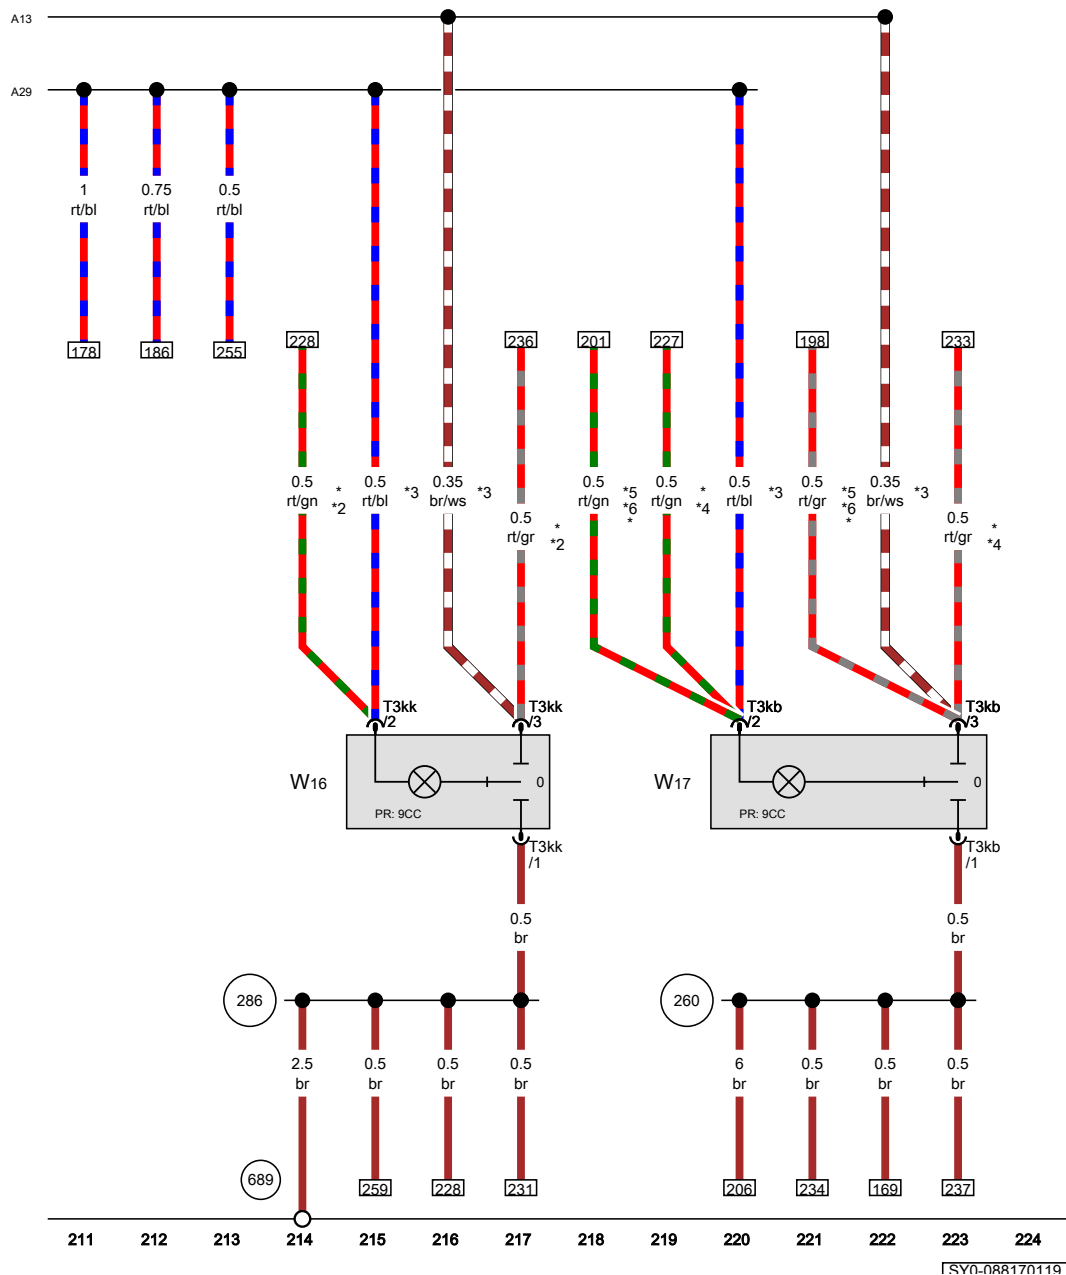

Left interior light, Right interior light

T3kb 3-pin connector, black

T3kk 3-pin connector, black

W16 Left interior light

W17 Right interior light

260 Earth connection, in tail light cluster wiring harness

286 Earth connection 8, in interior wiring harness

689 Earth point, at front, central in roof

A13 Connection (door contact switch), in dash panel wiring harness

A29 Connection (interior light), in dash panel wiring harness

* For models with entry lights

*2 For models with left sliding door

*3 For models with no entry lights

*4 For models with right sliding door

*5 For models with no left sliding door and rear loudspeakers

*6 For models with no right sliding door and rear loudspeakers


Left interior light, Right interior light, Rear left interior light, Rear right interior light

- T3km 3-pin connector, black
- T3kn 3-pin connector, black
- T3ko 3-pin connector, black
- T3kp 3-pin connector, black
- W16 Left interior light
- W17 Right interior light
- W47 Rear left interior light
- W48 Rear right interior light


A49 Connection 1, in dash panel wiring harness

B298 Positive connection 2 (30), in main wiring harness

- * For models with entry lights
- *2 For models with left sliding door
- *3 For models with right sliding door

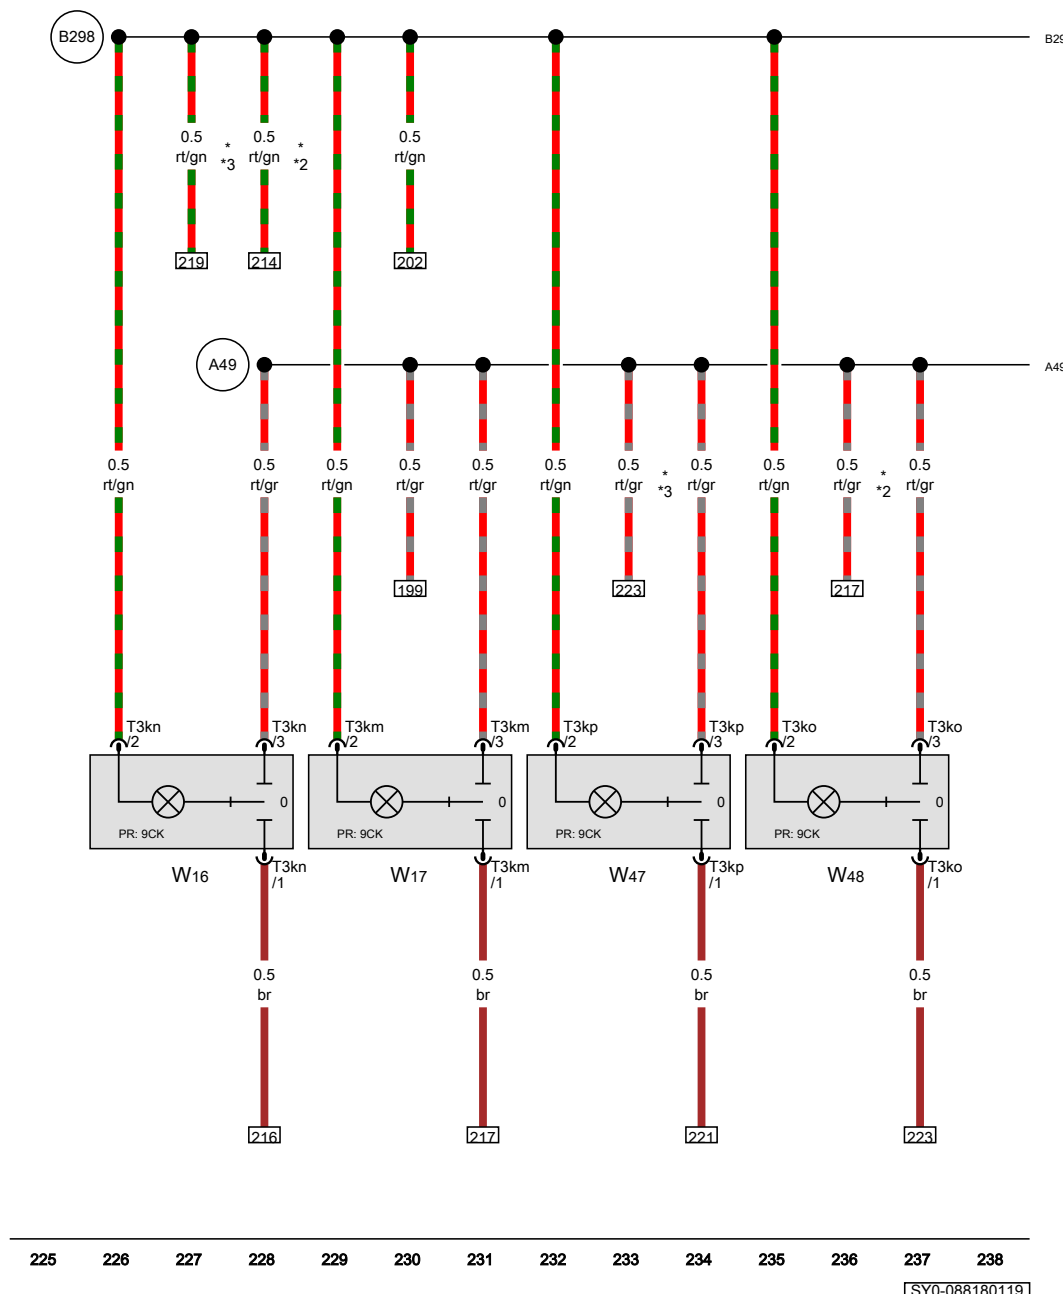

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

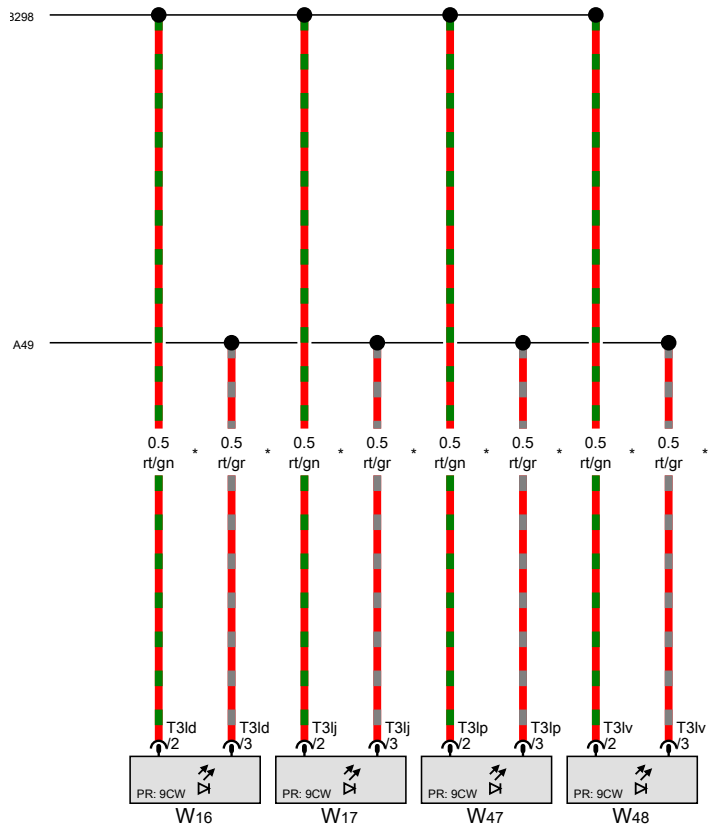

Left interior light, Right interior light, Rear left interior light, Rear right interior light

- T3ld 3-pin connector, black
- T3lj 3-pin connector, black
- T3lp 3-pin connector, black
- T3lv 3-pin connector, black
- W16 Left interior light
- W17 Right interior light
- W47 Rear left interior light
- W48 Rear right interior light

A49 Connection 1, in dash panel wiring harness

B298 Positive connection 2 (30), in main wiring harness

* For models with LED interior lights

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

Interior monitoring switch, Interior monitoring sensor


- E183 Interior monitoring switch
- G170 Left ultrasonic sensor for anti-theft alarm system
- G171 Right ultrasonic sensor for anti-theft alarm system
- G209 Anti-theft alarm ultrasonic sensor
- G273 Interior monitoring sensor
- T4el 4-pin connector, black
- T4en 4-pin connector, black

B681 Positive connection 7 (30), in interior wiring harness

* For models with anti-theft alarm system and front and rear interior monitor

*2 Sheathed cable, black


*3 Sheathed cable, grey

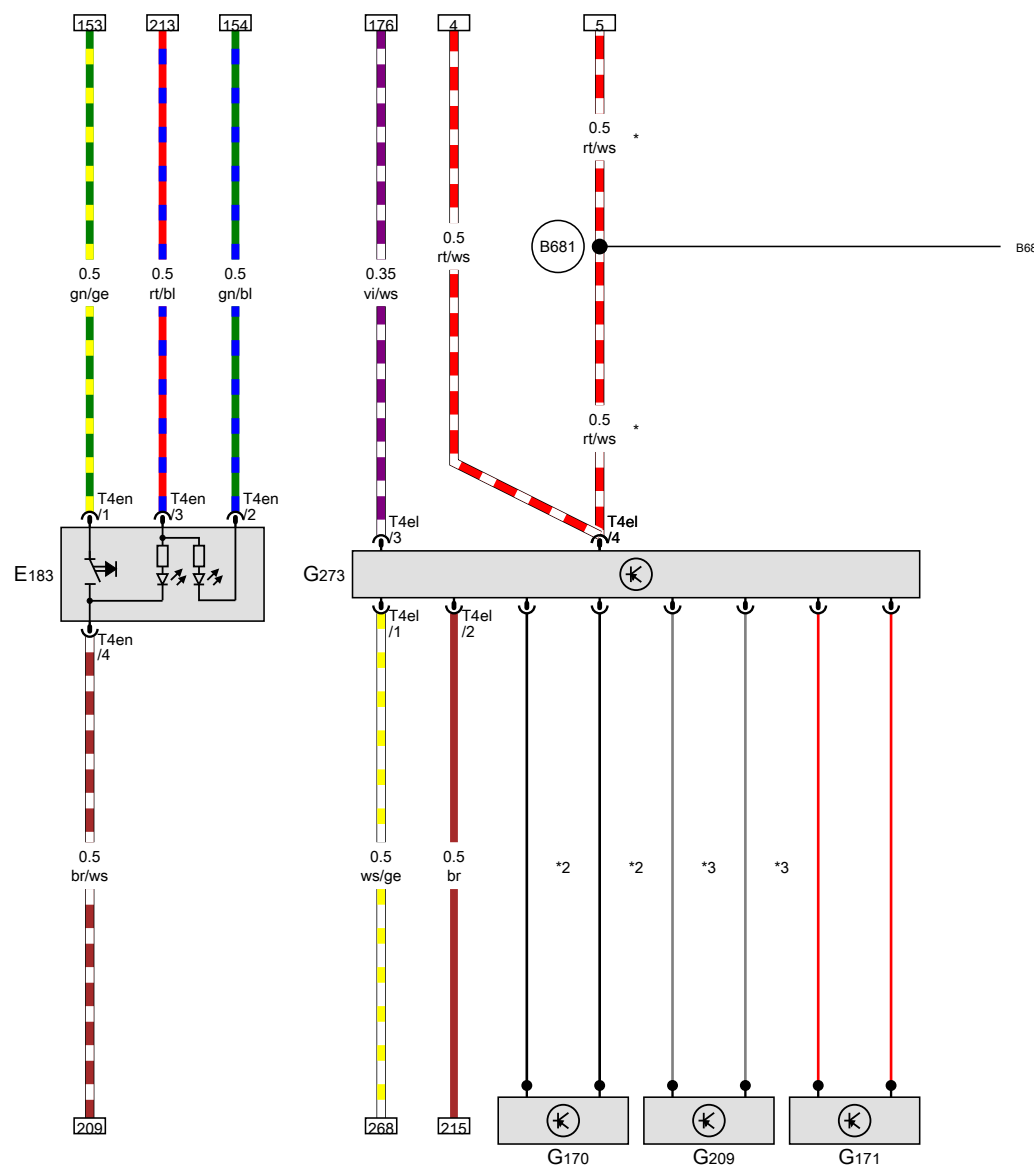

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

253 254 255 256 257 258 259 260 261 262 263 264 265 266

[SYN-088200119]

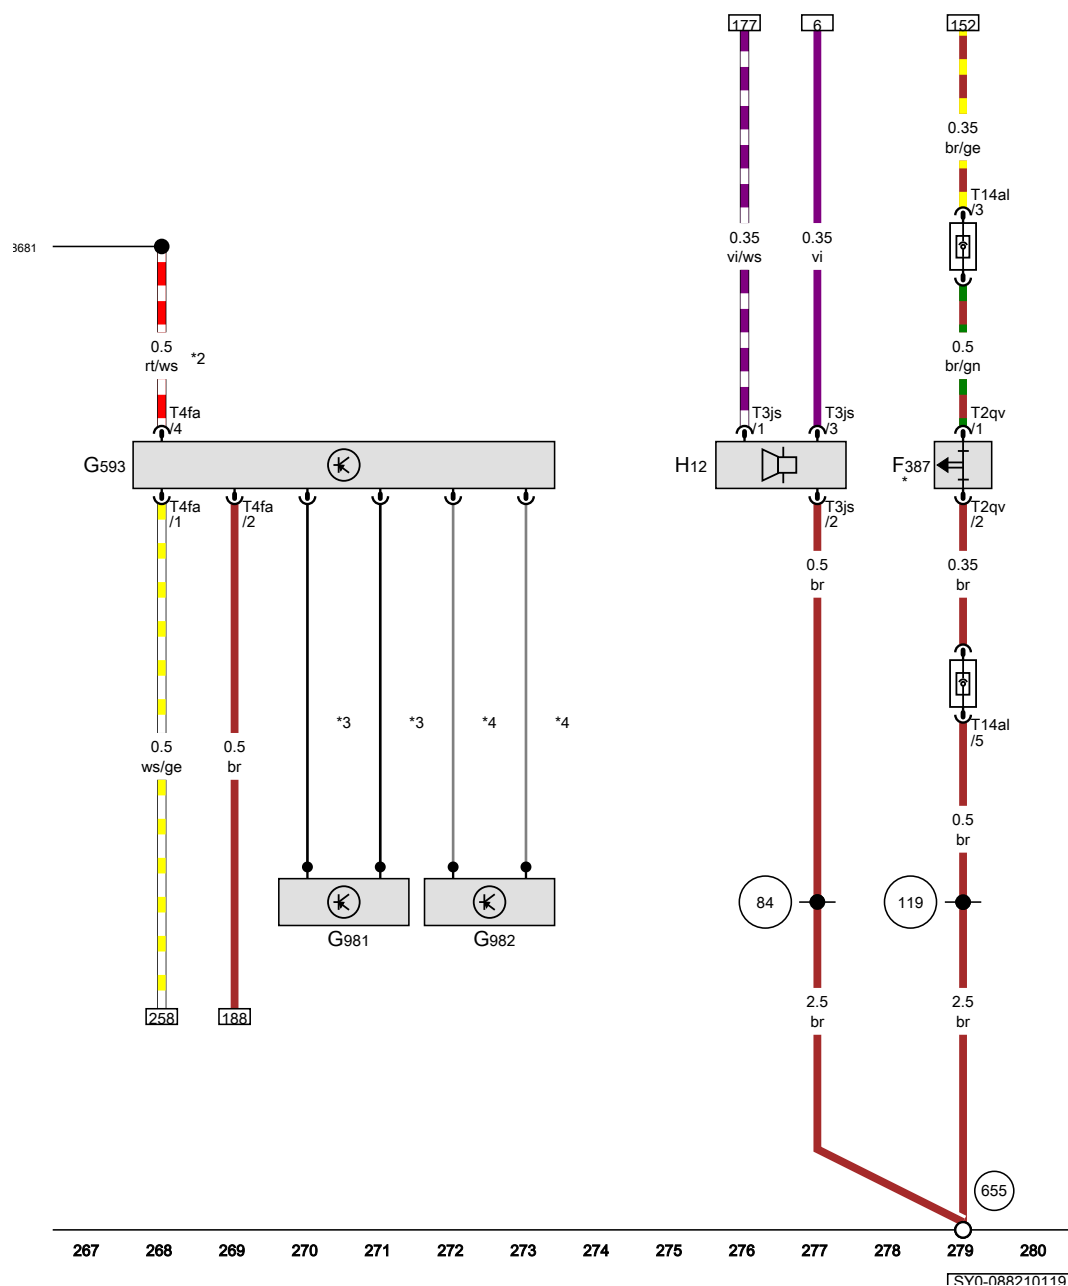

Bonnet contact switch, Interior monitoring sensor 3, Alarm horn

- F387 Bonnet contact switch
- G593 Interior monitoring sensor 3
- G981 Left ultrasonic sensor for passenger compartment monitoring system, rear
- G982 Right ultrasonic sensor for passenger compartment monitoring system, rear
- H12 Alarm horn
- T2qv 2-pin connector, black
- T3js 3-pin connector, black
- T4fa 4-pin connector, black
- T14al 14-pin connector, grey

- 84 Earth connection, engine block, in front right wiring harness
- 119 Earth connection 1, in headlight wiring harness
- 655 Earth point, on left headlight
- B681 Positive connection 7 (30), in interior wiring harness

- * Pre-wired component
- *2 For models with anti-theft alarm system and front and rear interior monitor
- *3 Sheathed cable, black
- *4 Sheathed cable, grey

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

Data bus diagnostic interface

J533 Data bus diagnostic interface

T20h 20-pin connector, red

249 Earth connection 2, in interior wiring harness

382 Earth connection 17, in main wiring harness


A146 Connection (convenience CAN bus, high), in dash panel wiring harness

A147 Connection (convenience CAN bus, low), in dash panel wiring harness

A164 Positive connection 2 (30a) in dash panel wiring harness

* For left-hand drive models

*2 For right-hand drive models

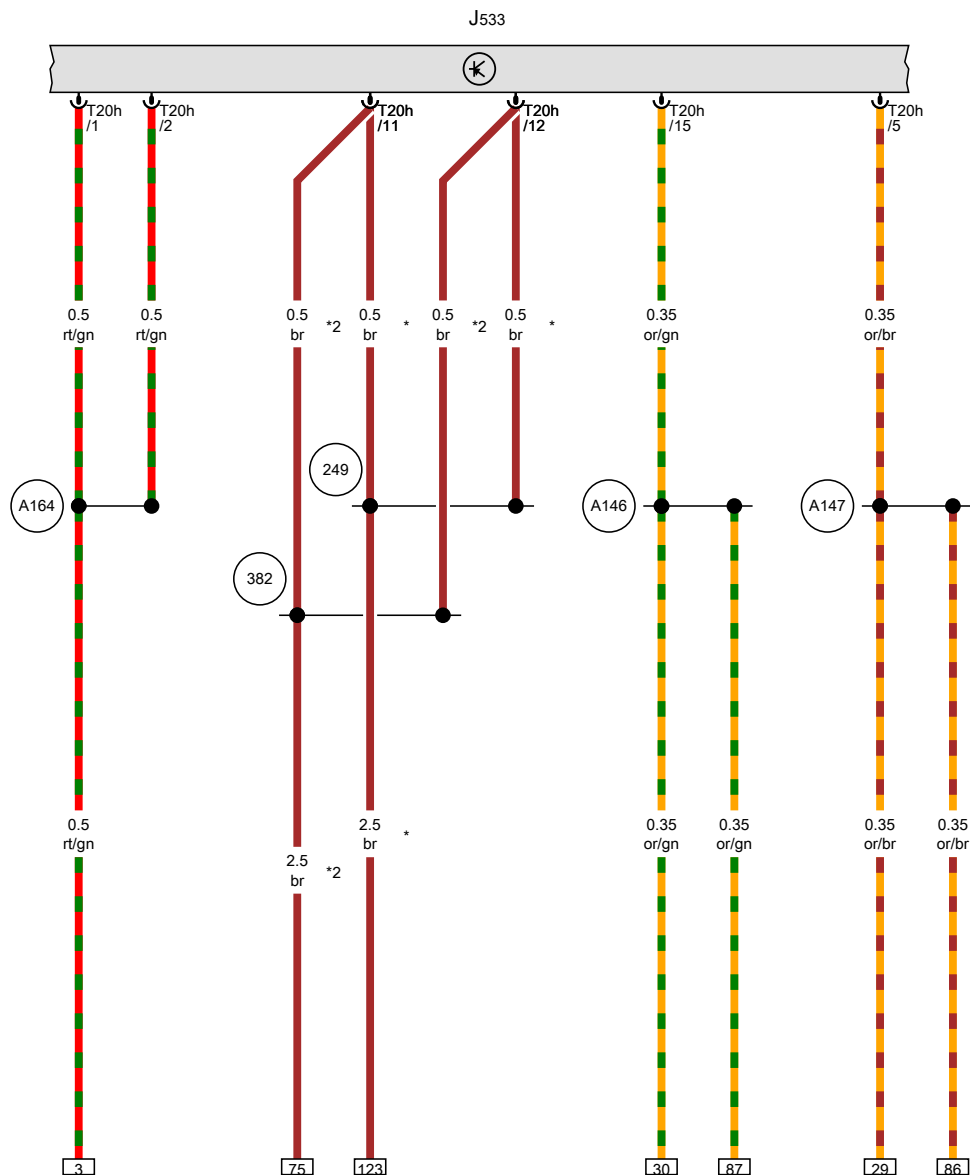

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink


281 282 283 284 285 286 287 288 289 290 291 292 293 294
[SYN-088220119]


Programmable special functions , (IS1),(IS2),(IS3),(IS4),(IS5),(IS6)

From November 2017

Special vehicle control unit, Fuse holder B, Fuse holder D

- J608 Special vehicle control unit
- SB Fuse holder B
- SB8 Fuse 8 on fuse holder B
- SB33 Fuse 33 on fuse holder B
- SB42 Fuse 42 on fuse holder B
- SB43 Fuse 43 on fuse holder B
- SB49 Fuse 49 on fuse holder B
- SB51 Fuse 51 on fuse holder B
- SD Fuse holder D
- SD1 Fuse 1 on fuse holder D
- SD3 Fuse 3 on fuse holder D
- T6cb 6-pin connector, blue
- * For models with no second battery
- *2 For models with second battery
- *3 For models with no air conditioning system
- *4 For models with telematics
- *5 For models with air conditioning system

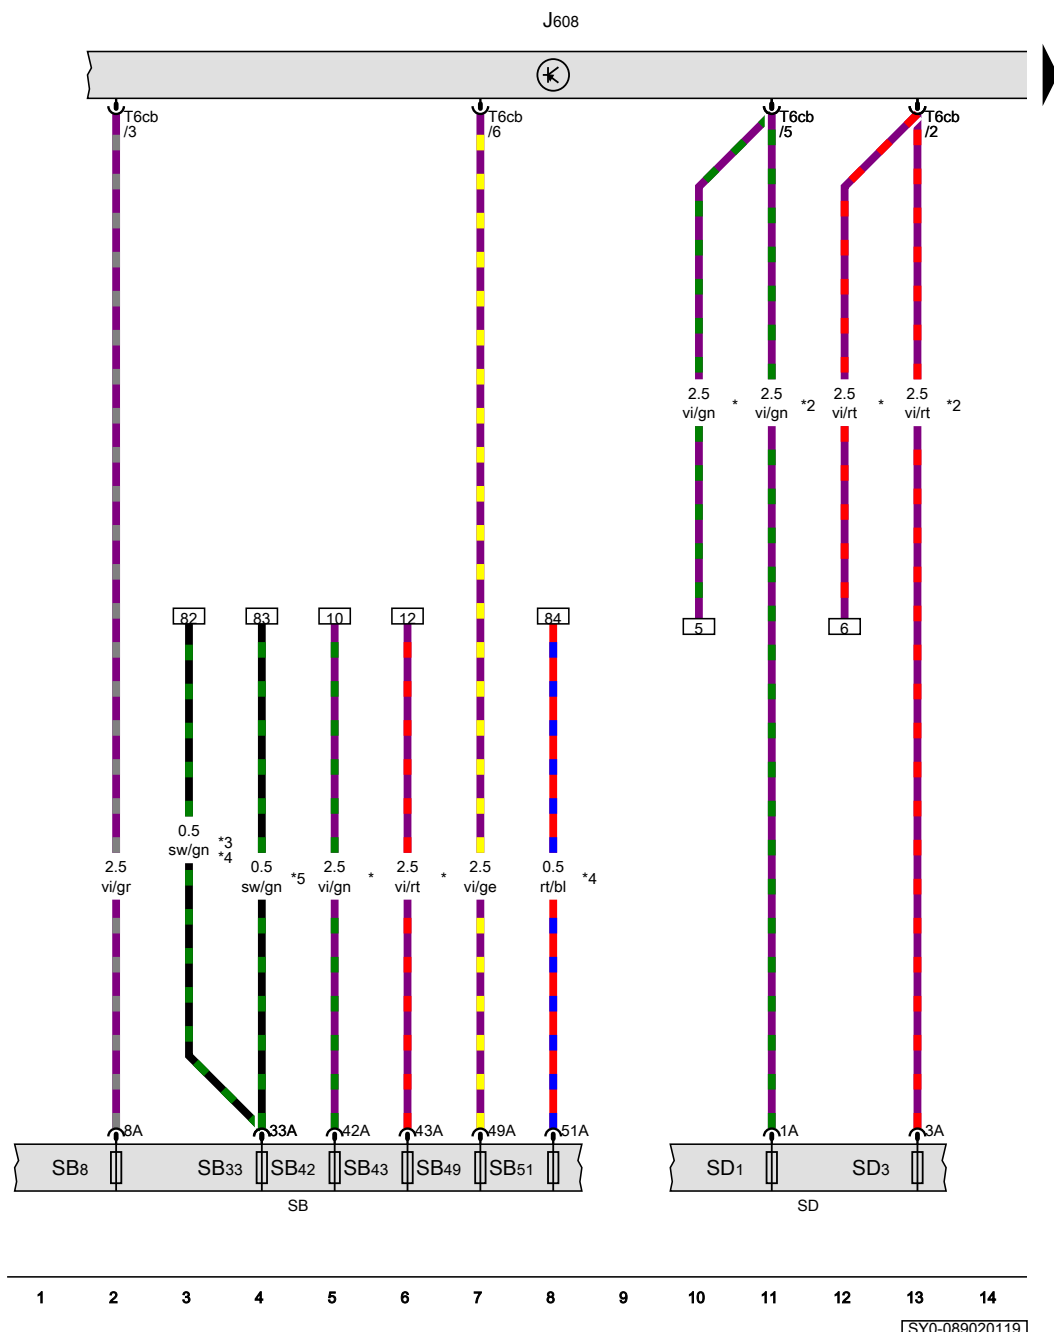

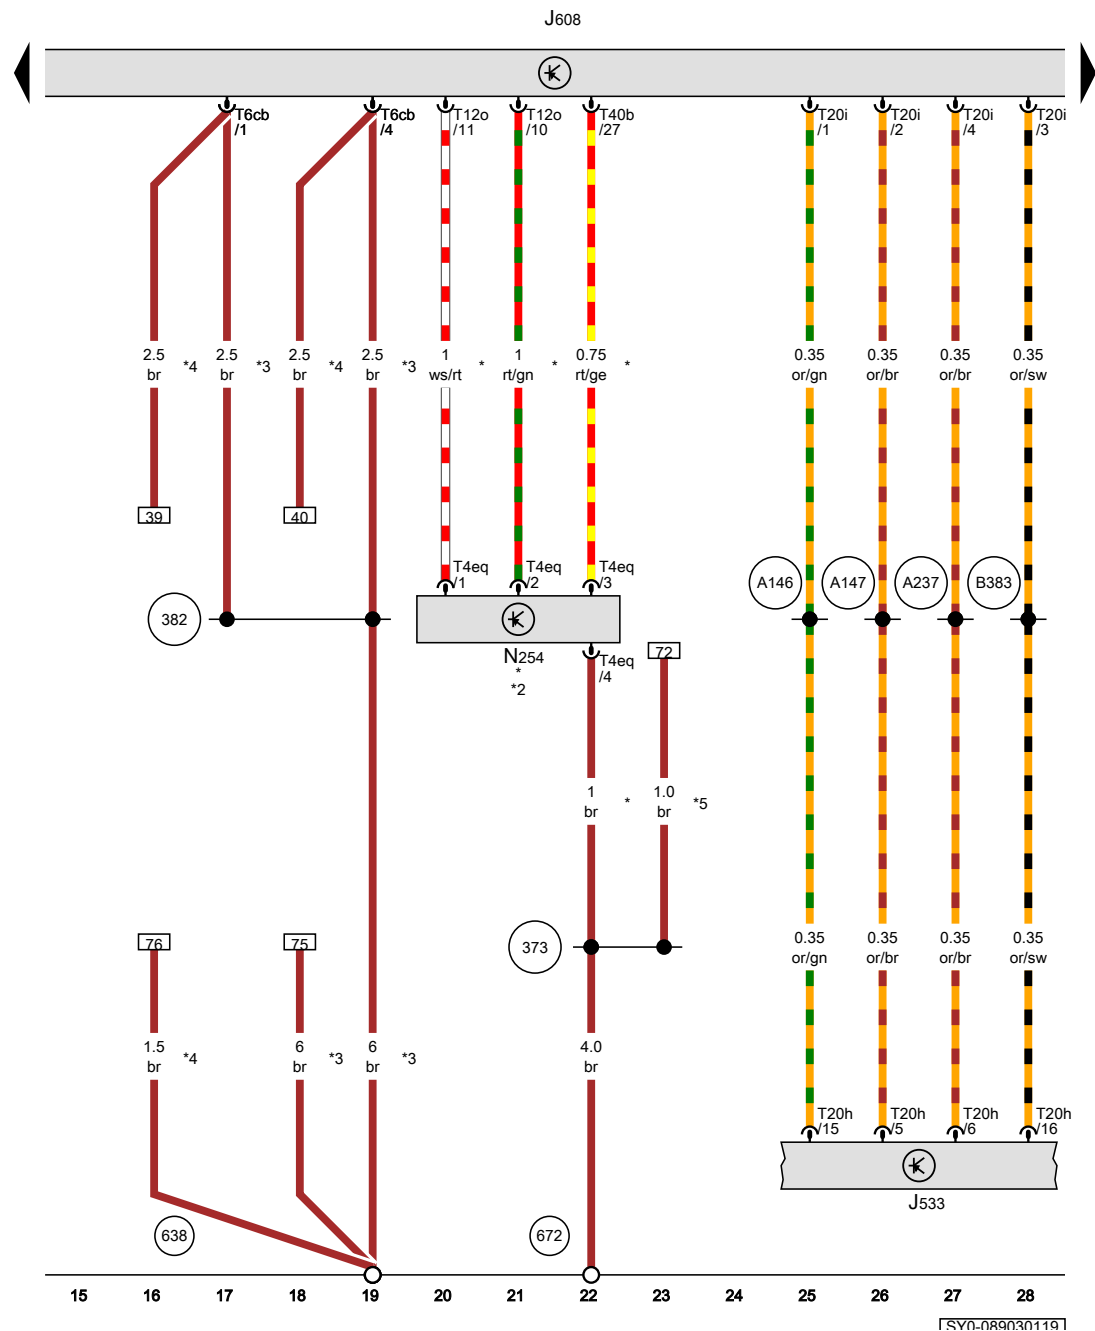


Special vehicle control unit, Power take-off valve

- J533 Data bus diagnostic interface
- J608 Special vehicle control unit
- N254 Power take-off valve, on underbody, next to auxiliary heater
- T4eq 4-pin connector, green
- T6cb 6-pin connector, blue
- T12o 12-pin connector, colourless
- T20h 20-pin connector, red
- T20i 20-pin connector, black
- T40b 40-pin connector, blue

- 373 Earth connection 8, in main wiring harness
- 382 Earth connection 17, in main wiring harness
- 638 Earth point, on right A-pillar
- 672 Earth point 2, on front of left longitudinal member
- A146 Connection (convenience CAN bus, high), in dash panel wiring harness
- A147 Connection (convenience CAN bus, low), in dash panel wiring harness
- A237 Connection 1 (powertrain CAN bus, low), in dash panel wiring harness
- B383 Connection 1 (powertrain CAN bus, high), in main wiring harness
- * For models with auxiliary drive
- *2 Pre-wired component
- *3 For left-hand drive models
- *4 For right-hand drive models
- *5 From July 2018

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

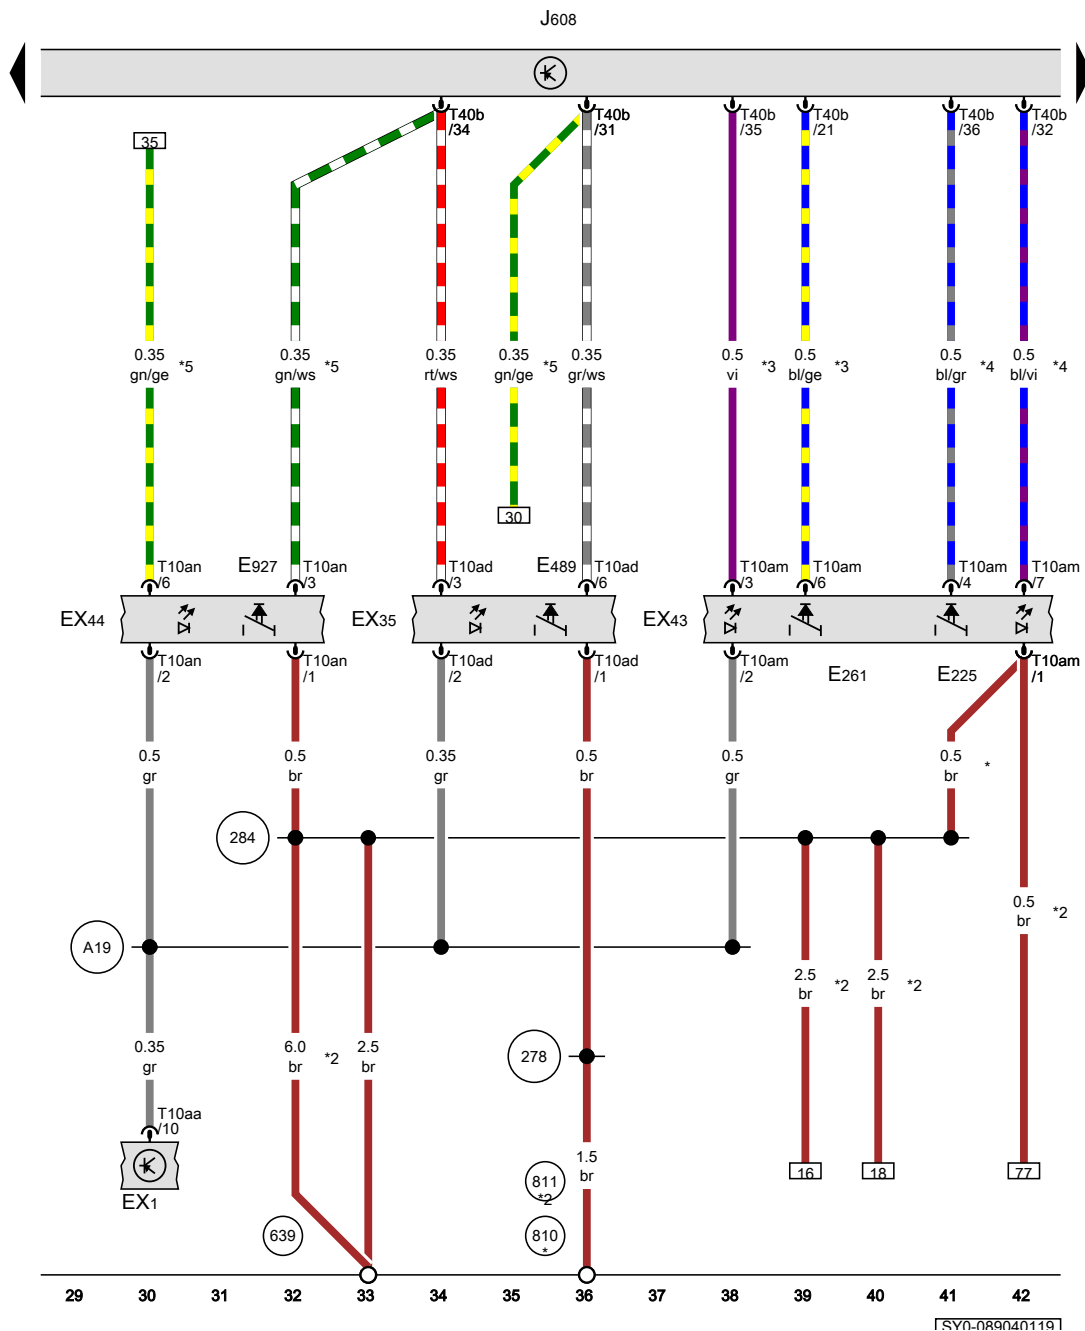


Power take-off switch, Working speed control switch, Ignition bypass button, Remote engine start button, Special vehicle control unit

- EX1 Rotary light switch
- EX35 Centre switch module 2 in dash panel
- EX43 Switch module 1 in dash panel, next to steering wheel
- EX44 Switch module 2 in dash panel, next to steering wheel
- E225 Power take-off switch
- E261 Working speed control switch
- E489 Ignition bypass button
- E927 Remote engine start button
- J608 Special vehicle control unit
- T10aa 10-pin connector, red
- T10ad 10-pin connector, black
- T10am 10-pin connector, red
- T10an 10-pin connector, black
- T40b 40-pin connector, blue

- 278 Earth connection 4, in interior wiring harness
- 284 Earth connection 6, in interior wiring harness
- 639 Earth point, left A-pillar
- 810 Earth point on central tube for dash panel, centre left
- 811 Earth point on central tube for dash panel, centre right
- A19 Connection (58d), in dash panel wiring harness
- * For left-hand drive models
- *2 For right-hand drive models
- *3 For models with electronic engine speed regulation
- *4 For models with auxiliary drive
- *5 For models with remote engine start

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

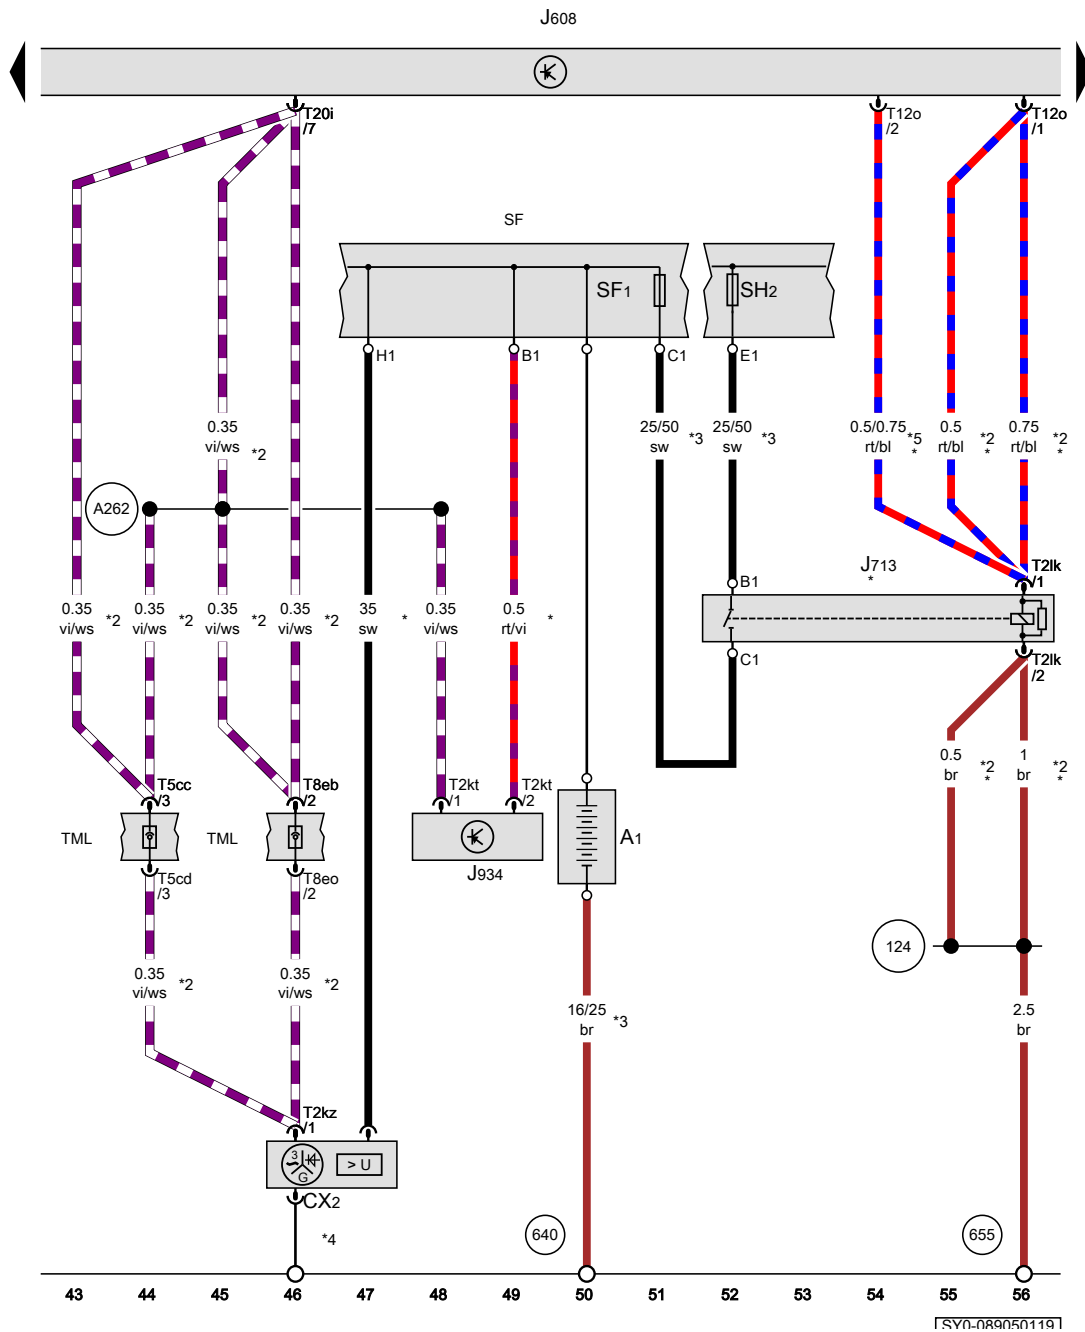

Second battery, Alternator 2 with voltage regulator, Special vehicle control unit, Second battery charging circuit relay, Battery monitor control unit 2

- A1 Second battery
- CX2 Alternator 2 with voltage regulator
- J608 Special vehicle control unit
- J713 Second battery charging circuit relay
- J934 Battery monitor control unit 2
- SF Fuse holder F
- SF1 Fuse 1 in fuse holder F
- SH2 Fuse 2 in fuse holder H
- T2kt 2-pin connector, black
- T2kz 2-pin connector, black
- T2lk 2-pin connector, black
- T5cc 5-pin connector, black
- T5cd 5-pin connector, black
- T8eb 8-pin connector, black
- T8eo 8-pin connector, black
- T12o 12-pin connector, colourless
- T20i 20-pin connector, black
- TML Coupling point in engine compartment, left

124 Earth connection, in right side engine compartment wiring harness

640 Earth point 2, left in engine compartment

655 Earth point, on left headlight

A262 Connection 3 (LIN bus) in dash panel wiring harness

- * For models with second battery
- *2 According to equipment
- *3 Cross section depends on equipment
- *4 Earth supply via housing
- *5 From July 2018


- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink


Steering column electronics control unit, Special vehicle control unit, Blocking diode 2, Blocking diode 3

- | | |
|-------|--|
| J519 | Onboard supply control unit |
| J527 | Steering column electronics control unit |
| J608 | Special vehicle control unit |
| J811 | Blocking diode 2 |
| J812 | Blocking diode 3 |
| T1bv | 1-pin connector, black |
| T1bw | 1-pin connector, black |
| T1by | 1-pin connector, black |
| T1bz | 1-pin connector, black |
| T12o | 12-pin connector, colourless |
| T14bk | 14-pin connector, black |
| T16h | 16-pin connector, black |
| T20i | 20-pin connector, black |
| T40b | 40-pin connector, blue |
| T73a | 73-pin connector, black |

- A139 Connection 3 (15) in dash panel wiring harness
 - B762 Connection 1 (blocking diode), in interior wiring harness
 - B763 Connection 2 (blocking diode), in interior wiring harness
 - X351 Connection 1 (blocking diode) in special vehicle wiring harness
- * For models with multifunction steering wheel

- ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink

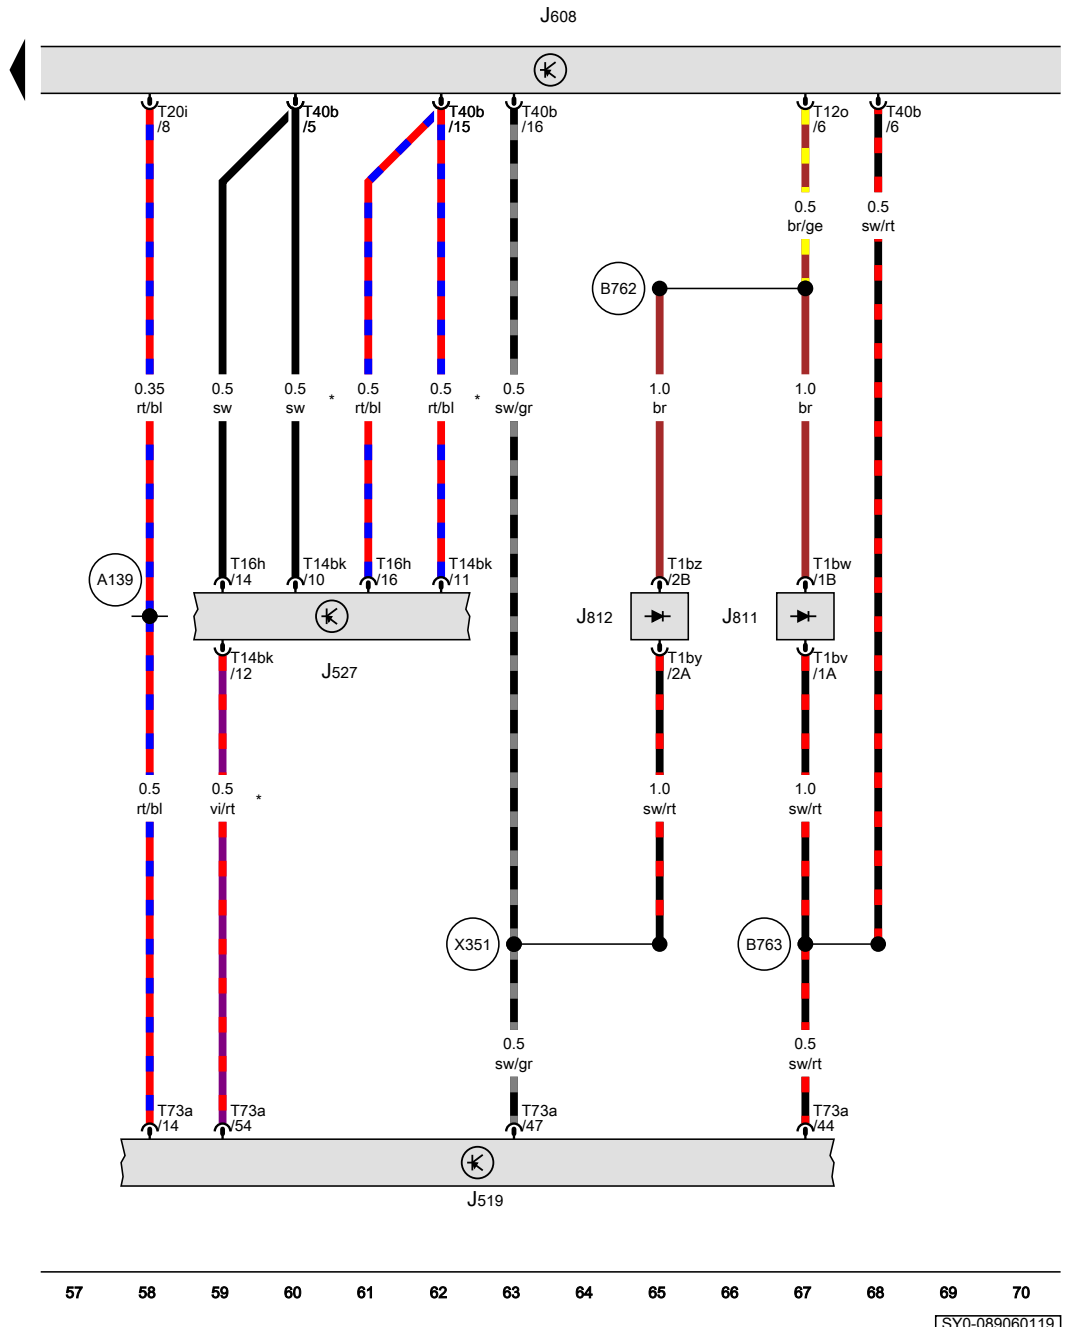

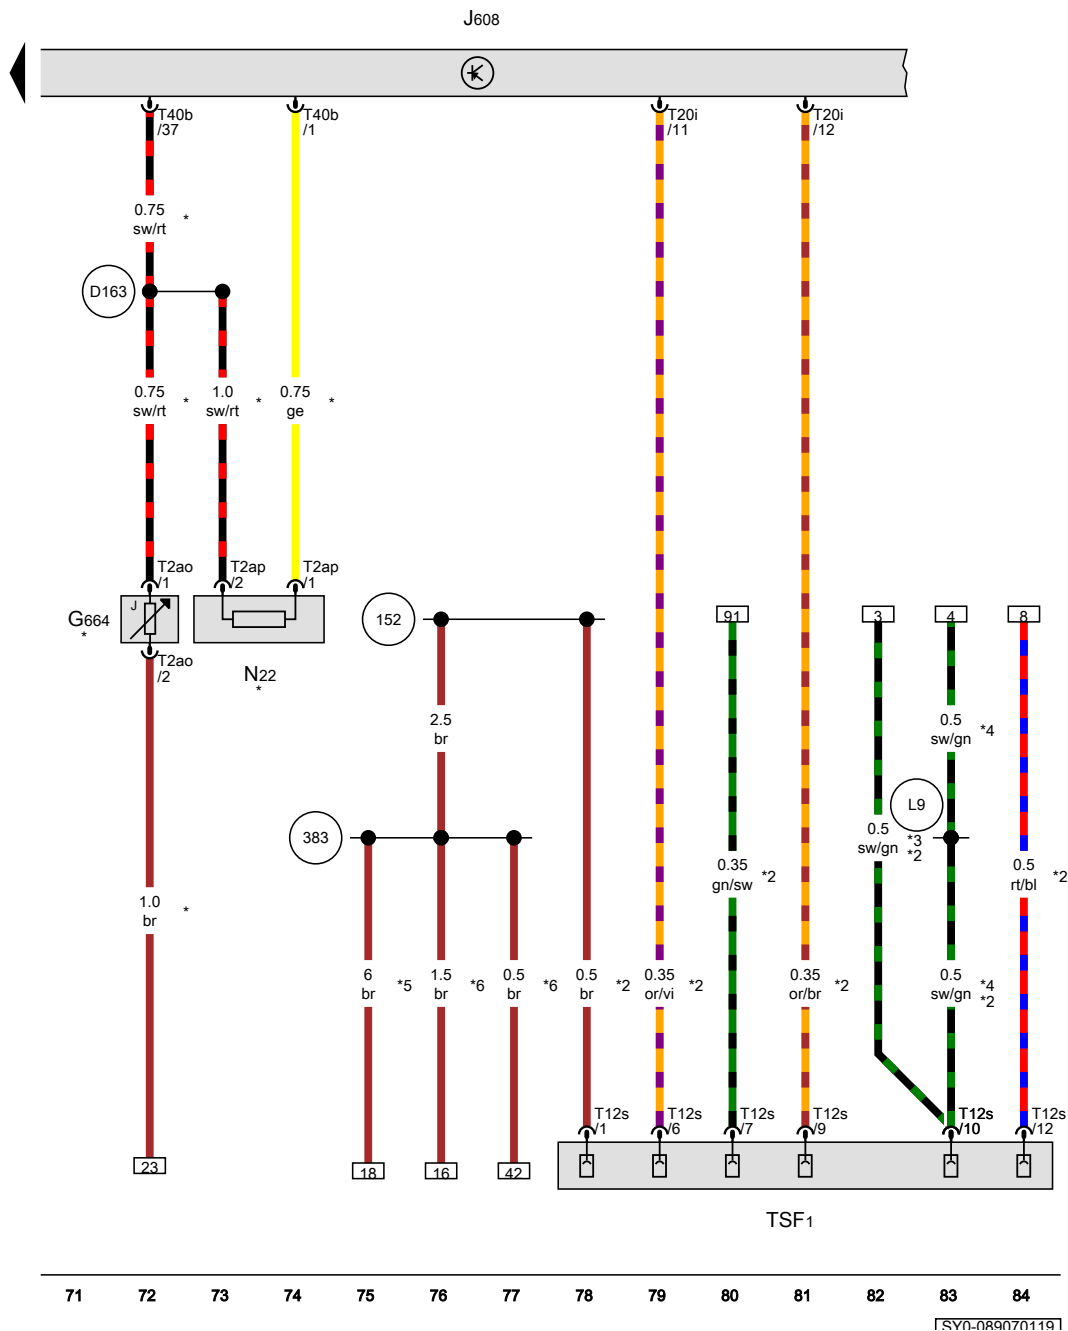

Oil temperature sender 2, Special vehicle control unit, Coupling point for special vehicles


- G664 Oil temperature sender 2
- J608 Special vehicle control unit
- N22 Temperature sensor 2 series resistor
- T2ao 2-pin connector, black
- T2ap 2-pin connector, black
- T12s 12-pin connector, green
- T20i 20-pin connector, black
- T40b 40-pin connector, blue
- TSF1 Coupling point for special vehicles

- 152 Earth connection 2, in front wiring harness
- 383 Earth connection 18, in main wiring harness
- D163 Connection (power take-off), in engine compartment wiring harness
- L9 Connection 1, in air conditioning system wiring harness

- * From July 2018
- *2 For models with telematics
- *3 For models with no air conditioning system
- *4 For models with air conditioning system
- *5 For left-hand drive models
- *6 For right-hand drive models

GPS aerial, LTE aerial 1, Coupling point for special vehicles

- G24 Tachograph
R50 GPS aerial, in passenger side exterior mirror housing
R297 LTE aerial 1, in passenger side exterior mirror housing
T2st 2-pin connector, blue
T2su 2-pin connector, purple
T2vx 2-pin connector
T2vy 2-pin connector
T4ij 4-pin connector, black
T8cv 8-pin connector, brown
T8ei 8-pin connector, red
T28g 28-pin connector, black
TSF1 Coupling point for special vehicles
* Pre-wired component
*2 For models with telematics

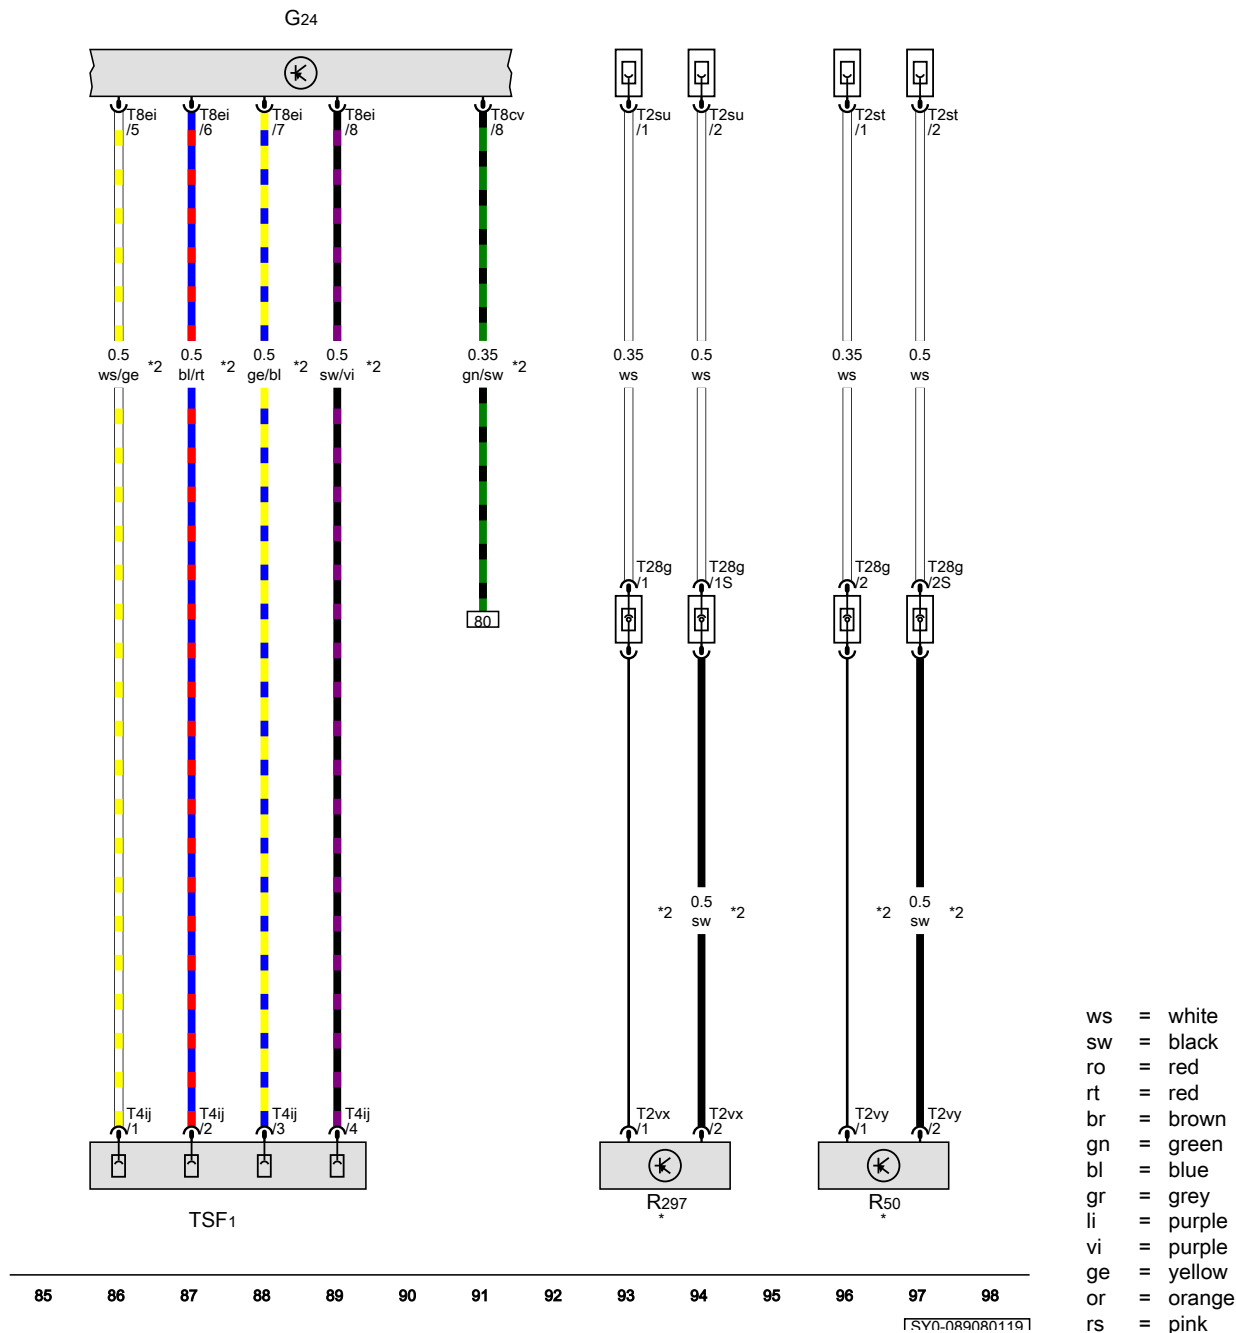



Programmable special functions , (IS7),(IS8)

From November 2017

Special vehicle control unit, Fuse holder B, Fuse holder D

- J608 Special vehicle control unit
 SB Fuse holder B
 SB8 Fuse 8 on fuse holder B
 SB33 Fuse 33 on fuse holder B
 SB42 Fuse 42 on fuse holder B
 SB43 Fuse 43 on fuse holder B
 SB49 Fuse 49 on fuse holder B
 SB51 Fuse 51 on fuse holder B
 SD Fuse holder D
 SD1 Fuse 1 on fuse holder D
 SD3 Fuse 3 on fuse holder D
 T6cb 6-pin connector, blue
 * For models with no second battery
 *2 For models with second battery
 *3 For models with no air conditioning system
 *4 For models with telematics
 *5 For models with air conditioning system

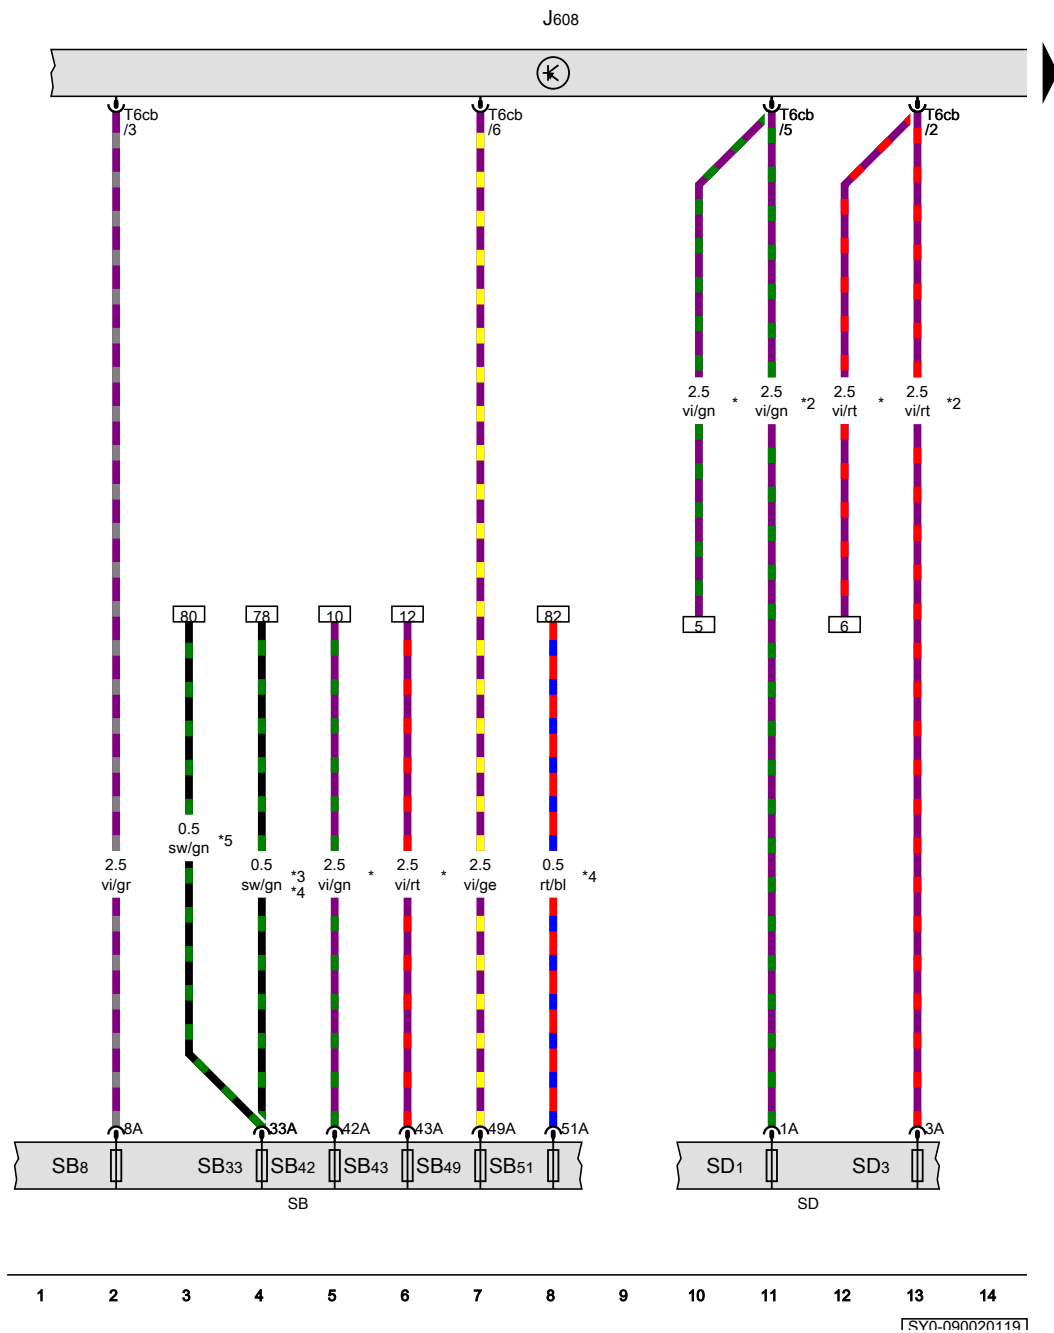

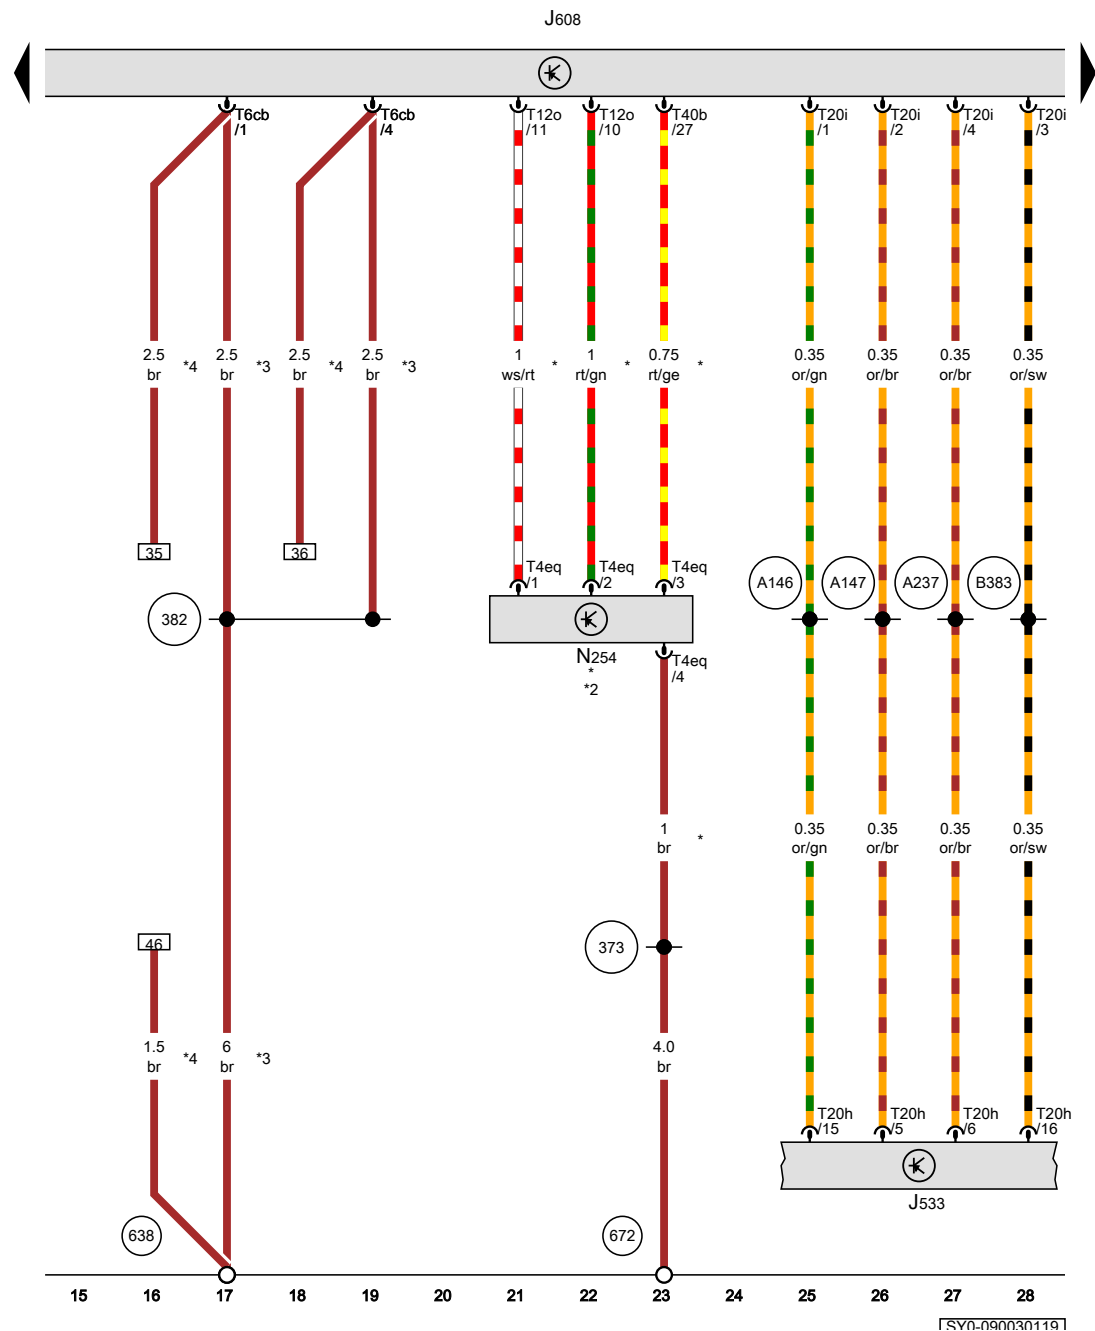


Special vehicle control unit, Power take-off valve

- J533 Data bus diagnostic interface
- J608 Special vehicle control unit
- N254 Power take-off valve
- T4eq 4-pin connector, green
- T6cb 6-pin connector, blue
- T12o 12-pin connector, colourless
- T20h 20-pin connector, red
- T20i 20-pin connector, black
- T40b 40-pin connector, black

- 373 Earth connection 8, in main wiring harness
- 382 Earth connection 17, in main wiring harness
- 638 Earth point, on right A-pillar
- 672 Earth point 2, on front of left longitudinal member
- A146 Connection (convenience CAN bus, high), in dash panel wiring harness
- A147 Connection (convenience CAN bus, low), in dash panel wiring harness
- A237 Connection 1 (powertrain CAN bus, low), in dash panel wiring harness
- B383 Connection 1 (powertrain CAN bus, high), in main wiring harness
- * For models with auxiliary drive
- *2 Pre-wired component
- *3 For left-hand drive models
- *4 For right-hand drive models

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

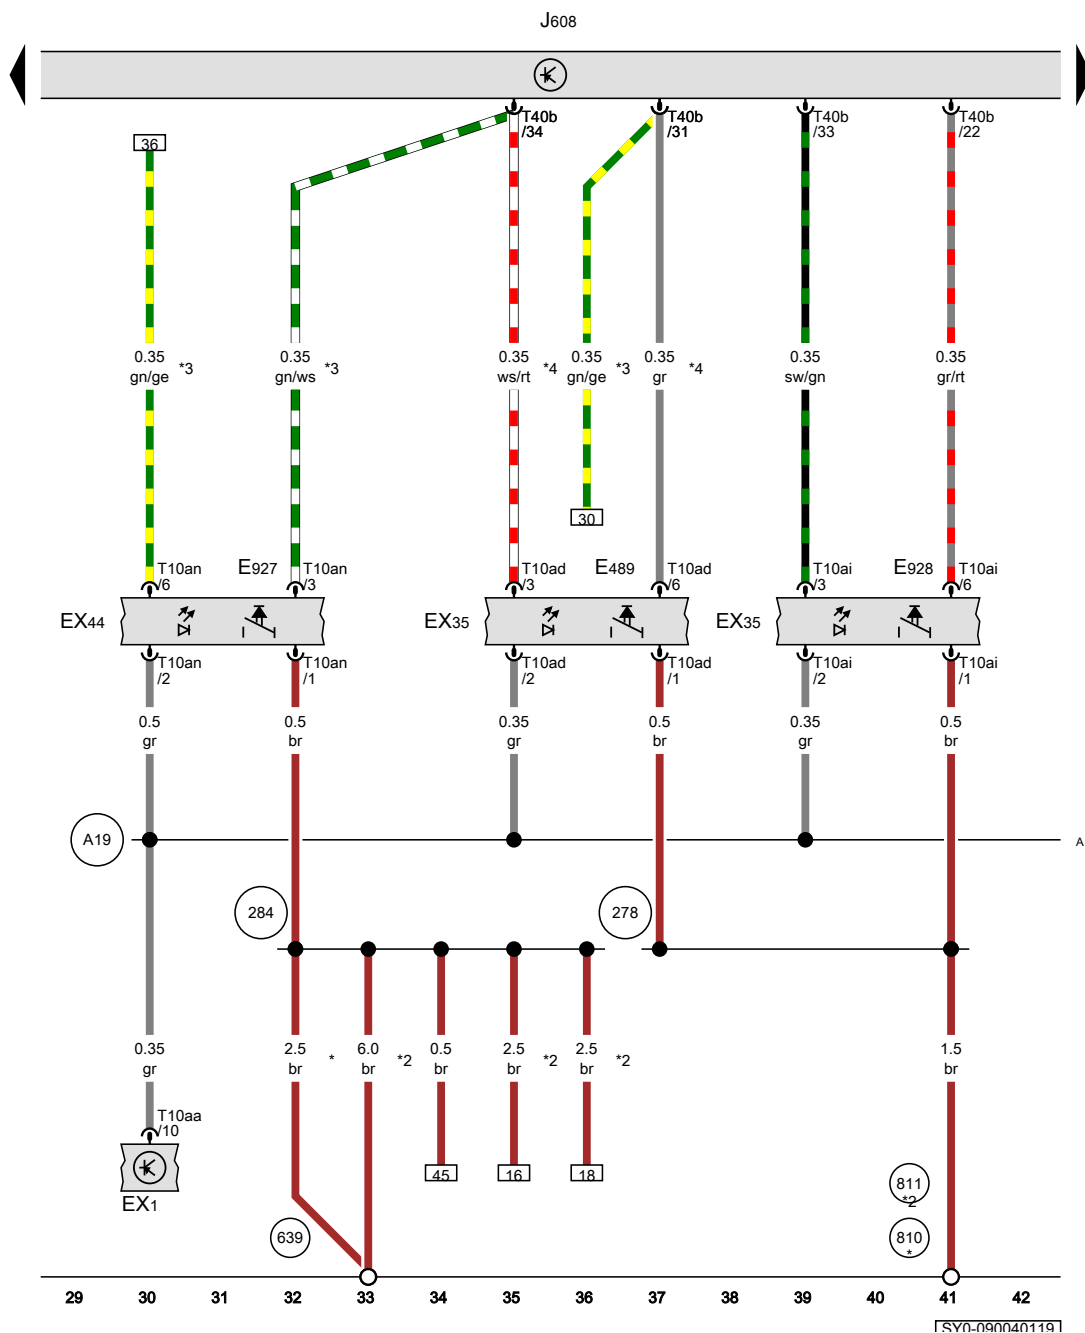


Ignition bypass button, Remote engine start button,
Wireless data transfer button, Special vehicle control unit

- EX1 Rotary light switch
- EX35 Centre switch module 2 in dash panel
- EX44 Switch module 2 in dash panel, next to steering wheel
- E489 Ignition bypass button
- E927 Remote engine start button
- E928 Wireless data transfer button
- J608 Special vehicle control unit
- T10aa 10-pin connector, red
- T10ad 10-pin connector, black
- T10ai 10-pin connector, red
- T10an 10-pin connector, black
- T40b 40-pin connector, black

- 278 Earth connection 4, in interior wiring harness
- 284 Earth connection 6, in interior wiring harness
- 639 Earth point, left A-pillar
- 810 Earth point on central tube for dash panel, centre left
- 811 Earth point on central tube for dash panel, centre right
- A19 Connection (58d), in dash panel wiring harness

- * For left-hand drive models
- *2 For right-hand drive models
- *3 For models with remote engine start
- *4 According to equipment


- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

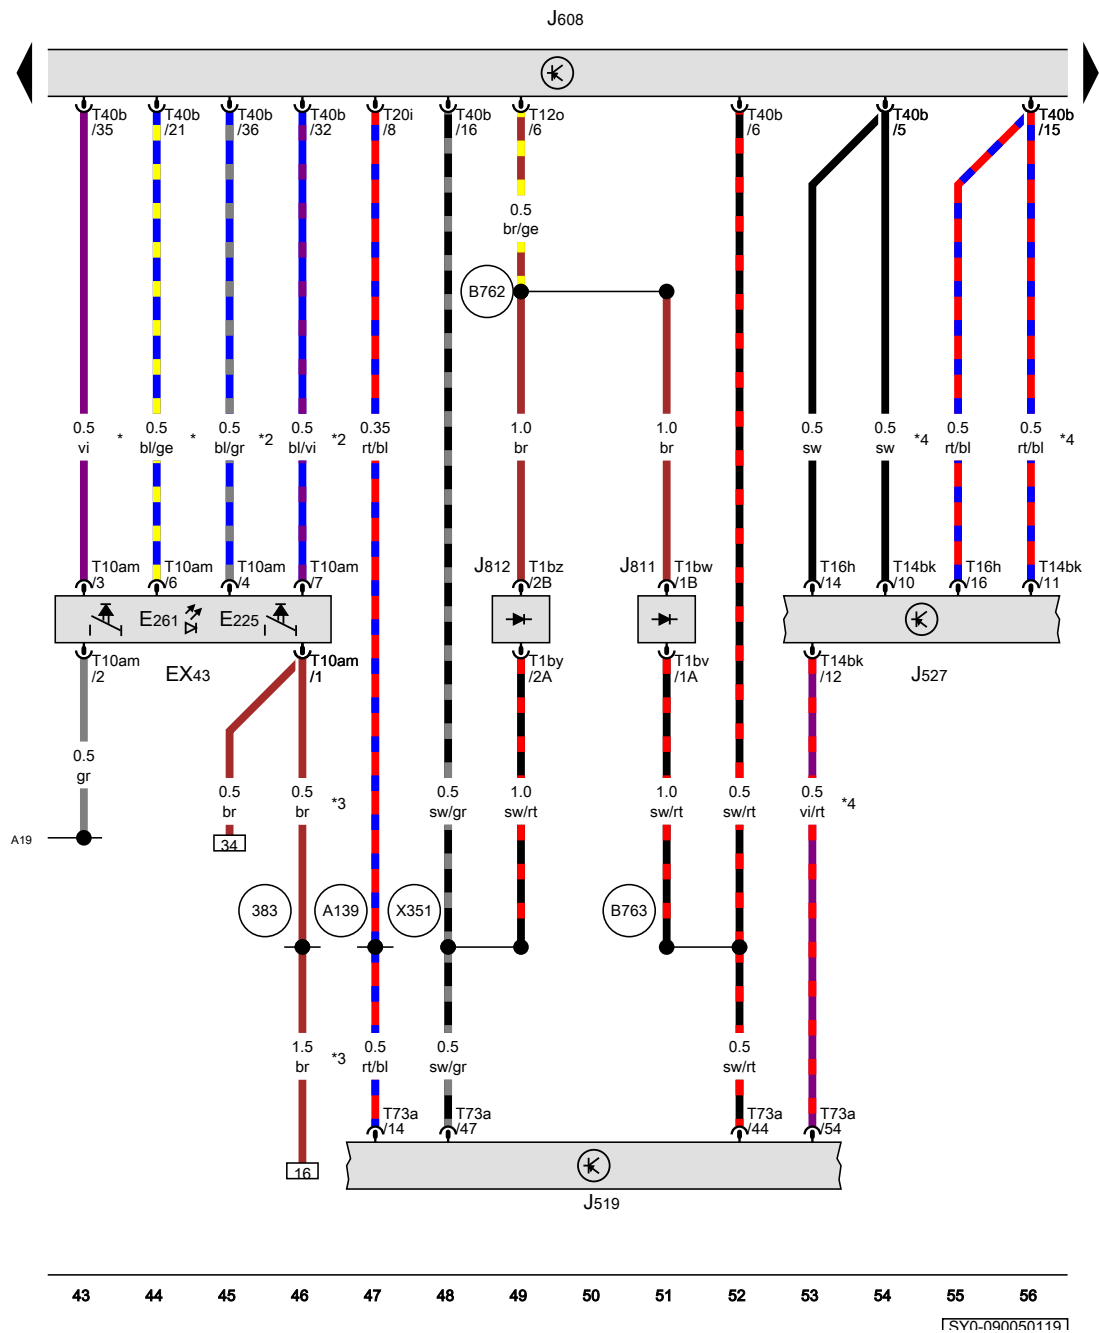

Switch module 1 in dash panel, next to steering wheel,
Power take-off switch, Special vehicle control unit, Blocking
diode 2, Blocking diode 3

- EX43 Switch module 1 in dash panel, next to steering wheel
- E225 Power take-off switch
- E261 Working speed control switch
- J519 Onboard supply control unit
- J527 Steering column electronics control unit
- J608 Special vehicle control unit
- J811 Blocking diode 2
- J812 Blocking diode 3
- T1bv 1-pin connector, black
- T1bw 1-pin connector, black
- T1by 1-pin connector, black
- T1bz 1-pin connector, black
- T10am 10-pin connector, red
- T12o 12-pin connector, colourless
- T14bk 14-pin connector, black
- T16h 16-pin connector, black
- T20i 20-pin connector, black
- T40b 40-pin connector, black
- T73a 73-pin connector, black
- 383 Earth connection 18, in main wiring harness
- A19 Connection (58d), in dash panel wiring harness
- A139 Connection 3 (15) in dash panel wiring harness
- B762 Connection 1 (blocking diode), in interior wiring harness
- B763 Connection 2 (blocking diode), in interior wiring harness
- X351 Connection 1 (blocking diode) in special vehicle wiring harness
- * For models with electronic engine speed regulation
- *2 For models with auxiliary drive
- *3 For right-hand drive models
- *4 For models with multifunction steering wheel

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink

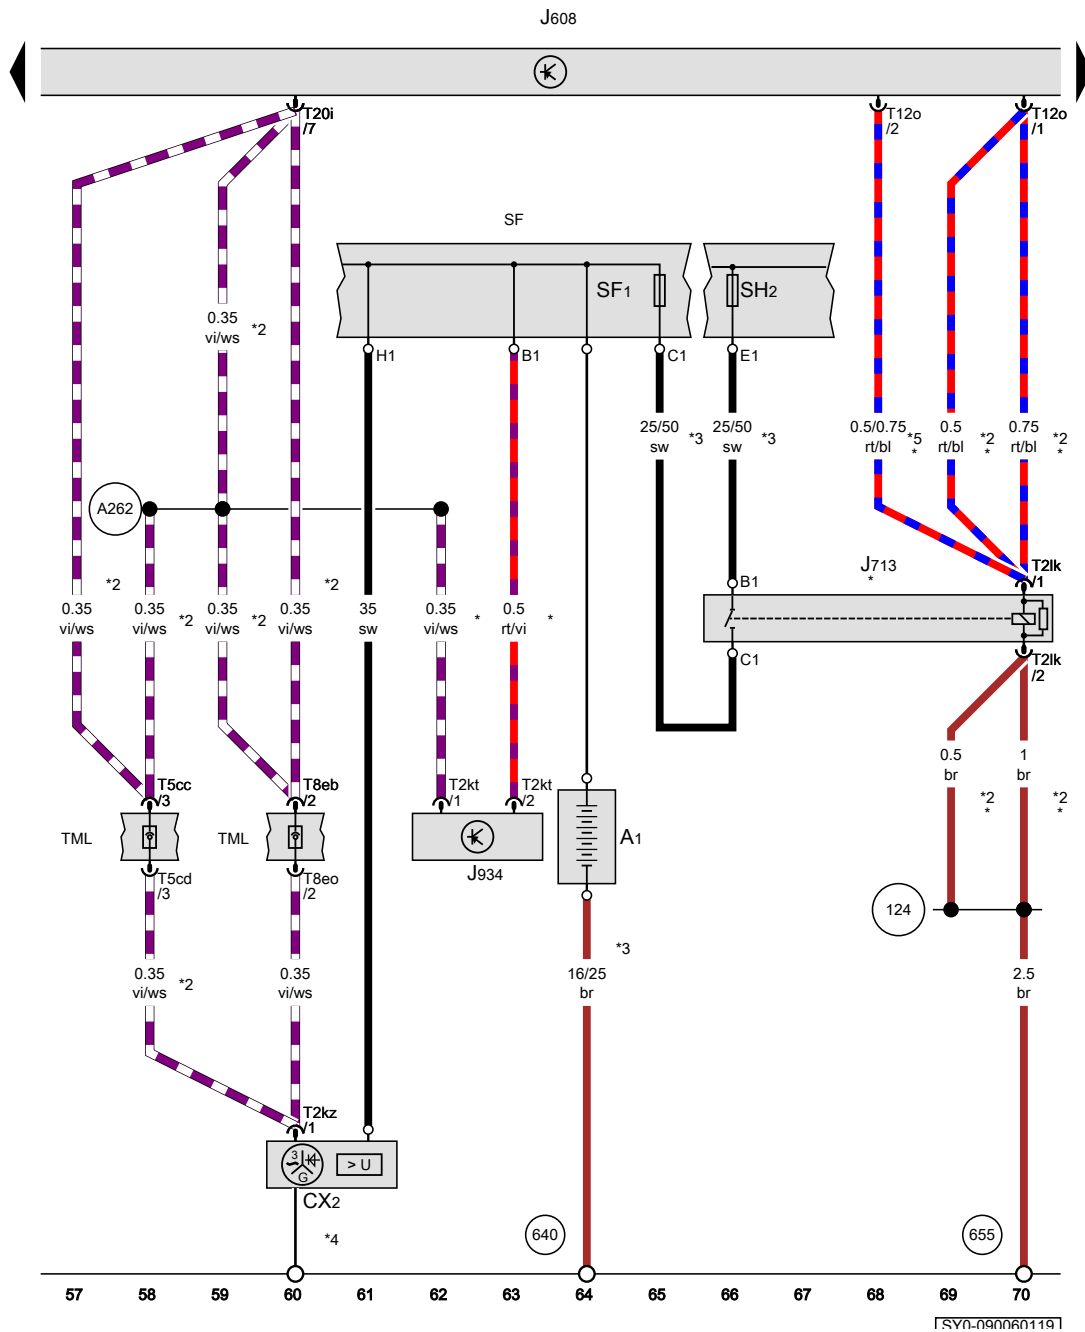


Second battery, Alternator 2 with voltage regulator, Special vehicle control unit, Second battery charging circuit relay, Battery monitor control unit 2

- | | |
|------|--|
| A1 | Second battery |
| CX2 | Alternator 2 with voltage regulator |
| J608 | Special vehicle control unit |
| J713 | Second battery charging circuit relay |
| J934 | Battery monitor control unit 2 |
| SF | Fuse holder F |
| SF1 | Fuse 1 in fuse holder F |
| SH2 | Fuse 2 in fuse holder H |
| T2kt | 2-pin connector, black |
| T2kz | 2-pin connector, black |
| T2lk | 2-pin connector, black |
| T5cc | 5-pin connector, black |
| T5cd | 5-pin connector, black |
| T8eb | 8-pin connector, black |
| T8eo | 8-pin connector, black |
| T12o | 12-pin connector, colourless |
| T20i | 20-pin connector, black |
| TML | Coupling point in engine compartment, left |

- 124 Earth connection, in right side engine compartment wiring harness
- 640 Earth point 2, left in engine compartment
- 655 Earth point, on left headlight
- A262 Connection 3 (LIN bus) in dash panel wiring harness

- * For models with second battery
- *2 According to equipment
- *3 Cross section depends on equipment
- *4 Earth supply via housing
- *5 From July 2018

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink

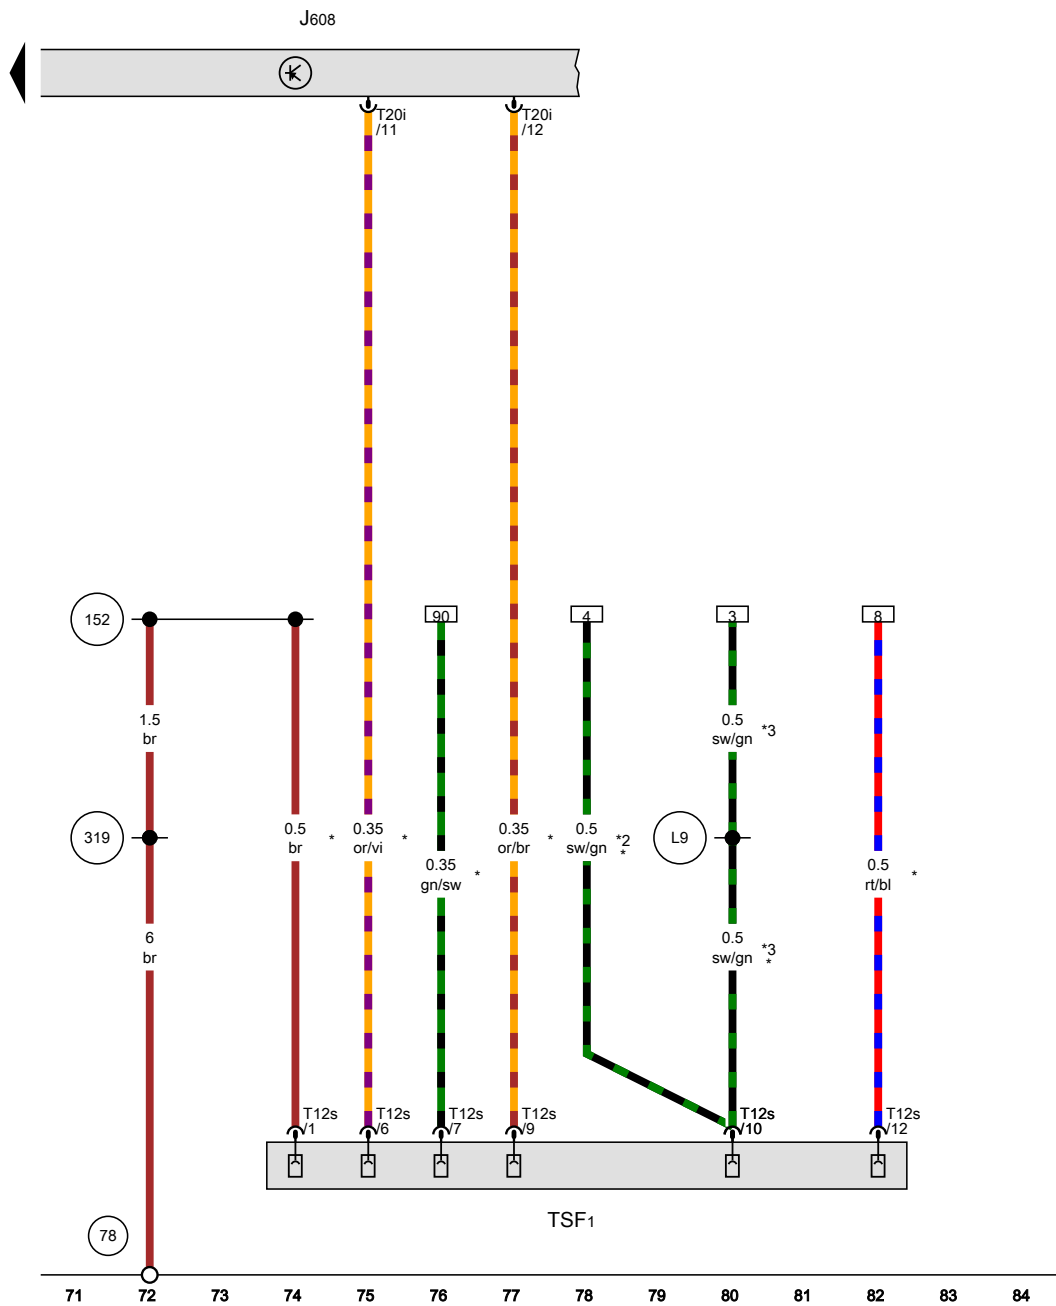

Special vehicle control unit, Coupling point for special vehicles

- J608 Special vehicle control unit
- T12s 12-pin connector, green
- T20i 20-pin connector, black
- TSF1 Coupling point for special vehicles

- 78 Earth point, lower part of right B-pillar
- 152 Earth connection 2, in front wiring harness
- 319 Earth connection 5, in seat heating wiring harness
- L9 Connection 1, in air conditioning system wiring harness

- * For models with telematics
- *2 For models with no air conditioning system
- *3 For models with air conditioning system


- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

G24	Tachograph
R50	GPS aerial, in passenger side exterior mirror housing
R297	LTE aerial 1, in passenger side exterior mirror housing
T2st	2-pin connector, blue
T2su	2-pin connector, purple
T2vx	2-pin connector
T2vy	2-pin connector
T4ij	4-pin connector, black
T8cv	8-pin connector, brown
T8ei	8-pin connector, red
T28g	28-pin connector, black
TSF1	Coupling point for special vehicles
*	Pre-wired component
*2	For models with telematics



Radiator fan

From November 2017

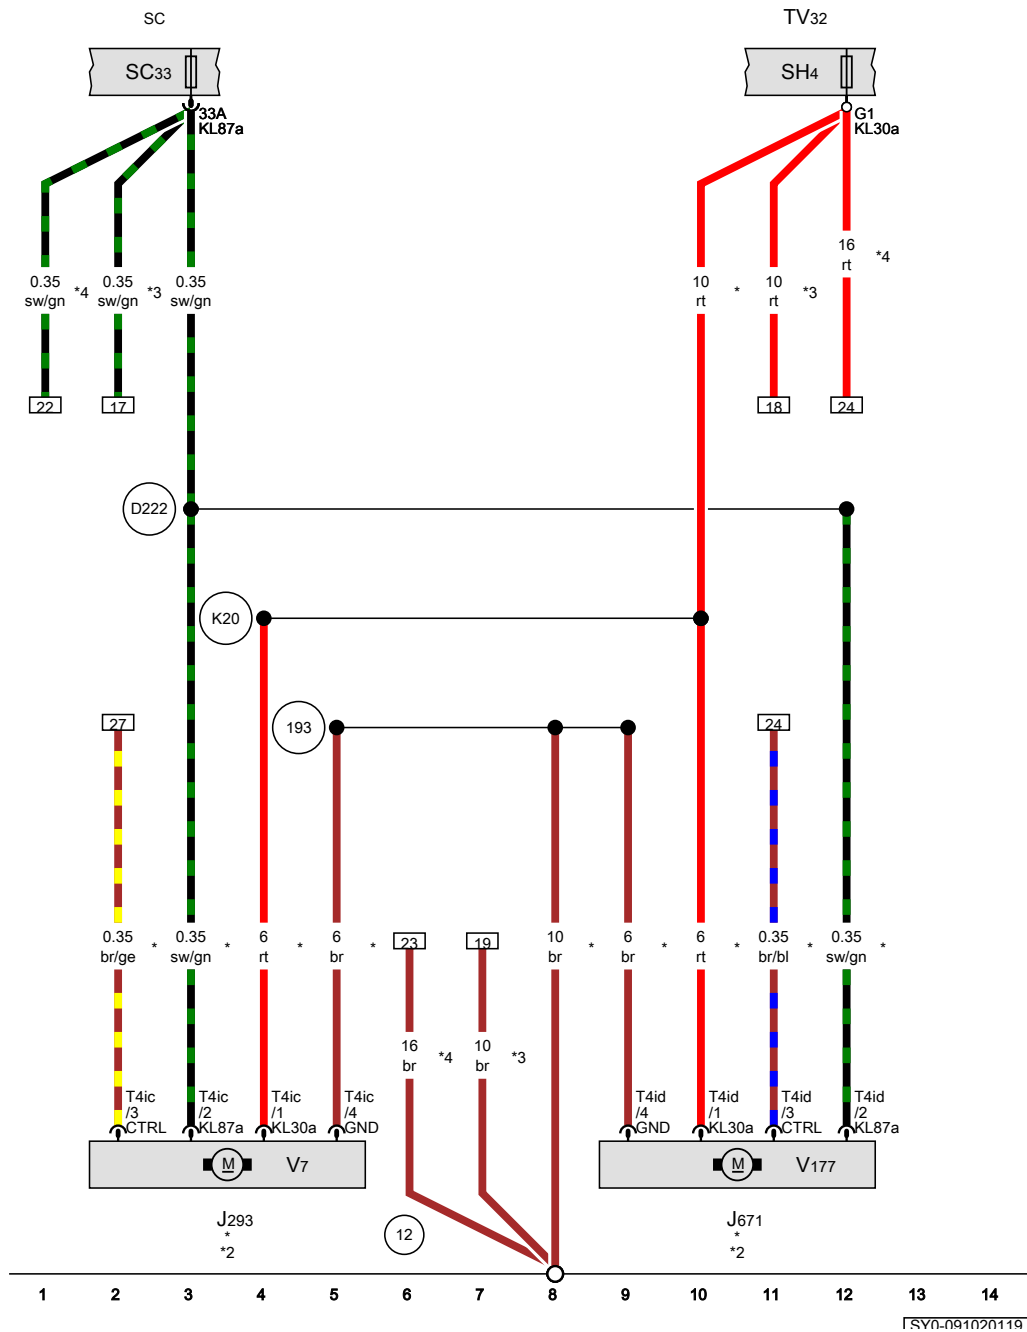


Fuse holder C, Jump start connection, Radiator fan, Radiator fan 2

- J293 Radiator fan control unit
- J671 Radiator fan control unit 2
- SC Fuse holder C
- SH4 Fuse 4 in fuse holder H
- SC33 Fuse 33 on fuse holder C
- T4ic 4-pin connector, black
- T4id 4-pin connector, black
- TV32 Jump start connection
- V7 Radiator fan
- V177 Radiator fan 2

- 12 Earth point, on left in engine compartment
- 193 Earth connection 1, in coolant fan wiring harness
- D222 Connection 10 (87a), in engine compartment wiring harness
- K20 Positive connection 1 (30), in radiator fan wiring harness
- * For models with two radiator fans
- *2 Pre-wired component
- *3 For models with no towing bracket
- *4 For models with towing bracket

Engine/motor control unit, Radiator fan

- J293 Radiator fan control unit
- J623 Engine/motor control unit
- T4ef 4-pin connector, black
- T4eg 4-pin connector, black
- T94b 94-pin connector, black
- V7 Radiator fan
- * For models with no towing bracket
- *2 Pre-wired component
- *3 For models with towing bracket
- *4 For models with two radiator fans

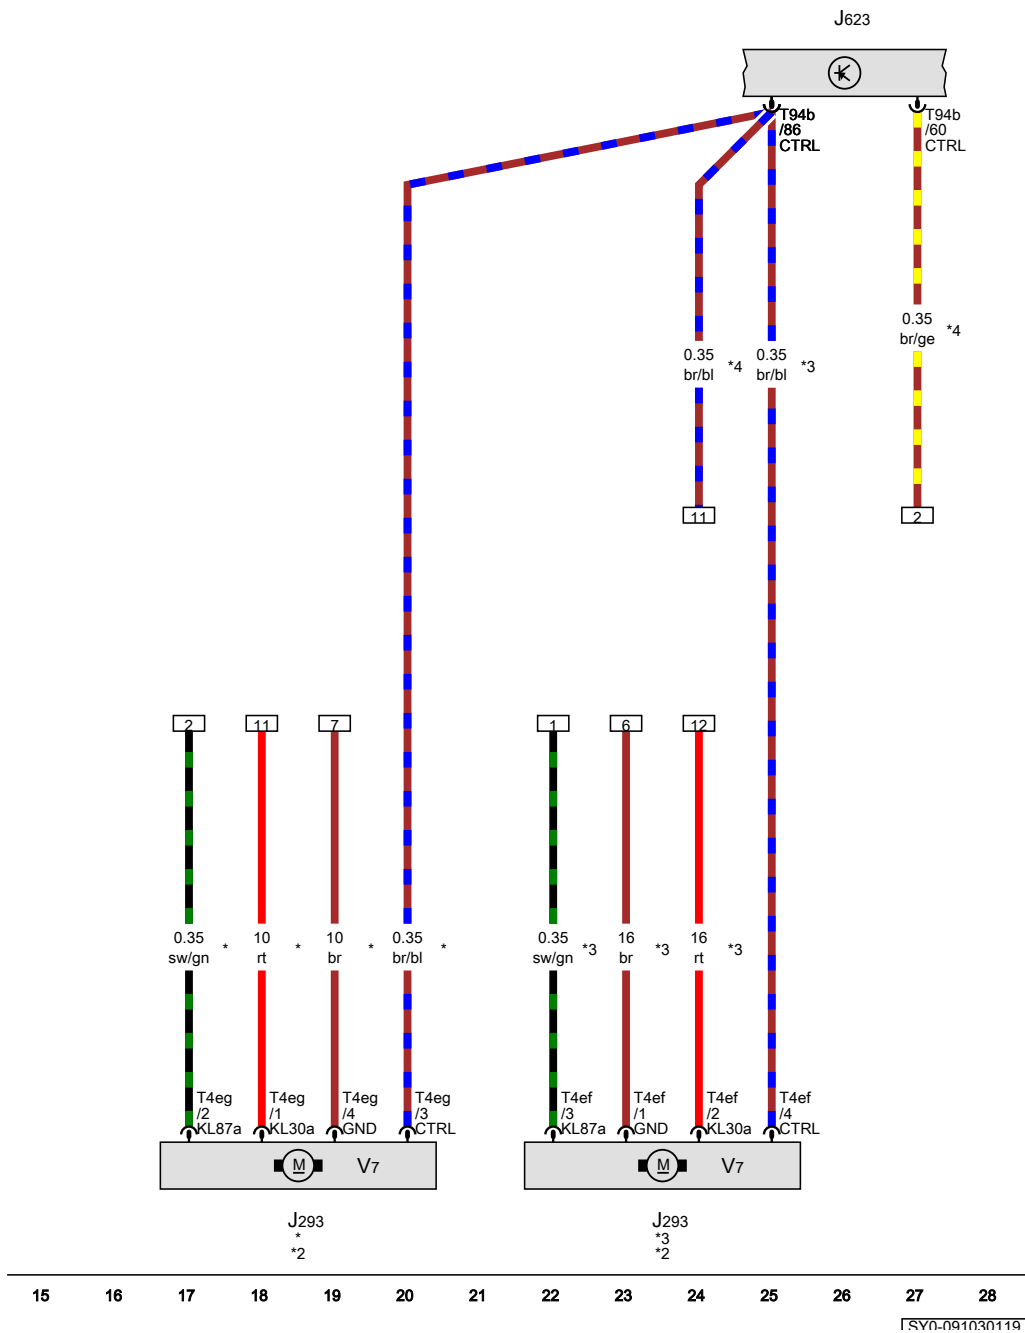


Radiator fan , EBHA

From December 2017

Engine/motor control unit, Fuse holder C, Jump start connection, Radiator fan

- J293 Radiator fan control unit
- J623 Engine/motor control unit
- SC Fuse holder C
- SH4 Fuse 4 in fuse holder H
- SC33 Fuse 33 on fuse holder C
- T4ef 4-pin connector, black
- T96b 96-pin connector, black
- TV32 Jump start connection
- V7 Radiator fan


- 12 Earth point, on left in engine compartment
- * Pre-wired component

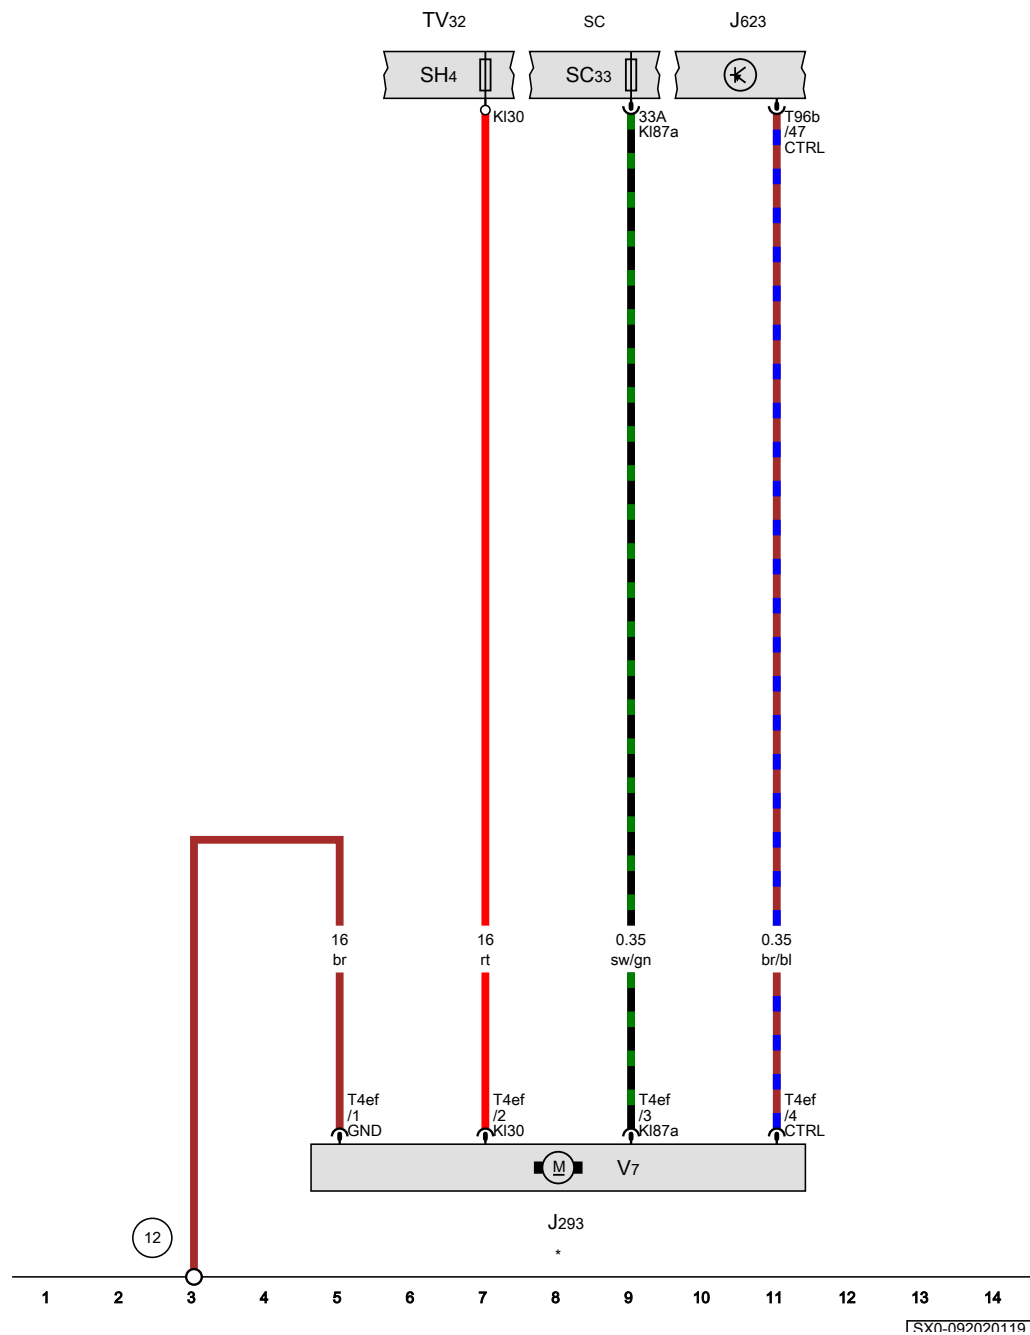

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink


8-speed automatic gearbox 0DR , (G1F@1X2)

From July 2018

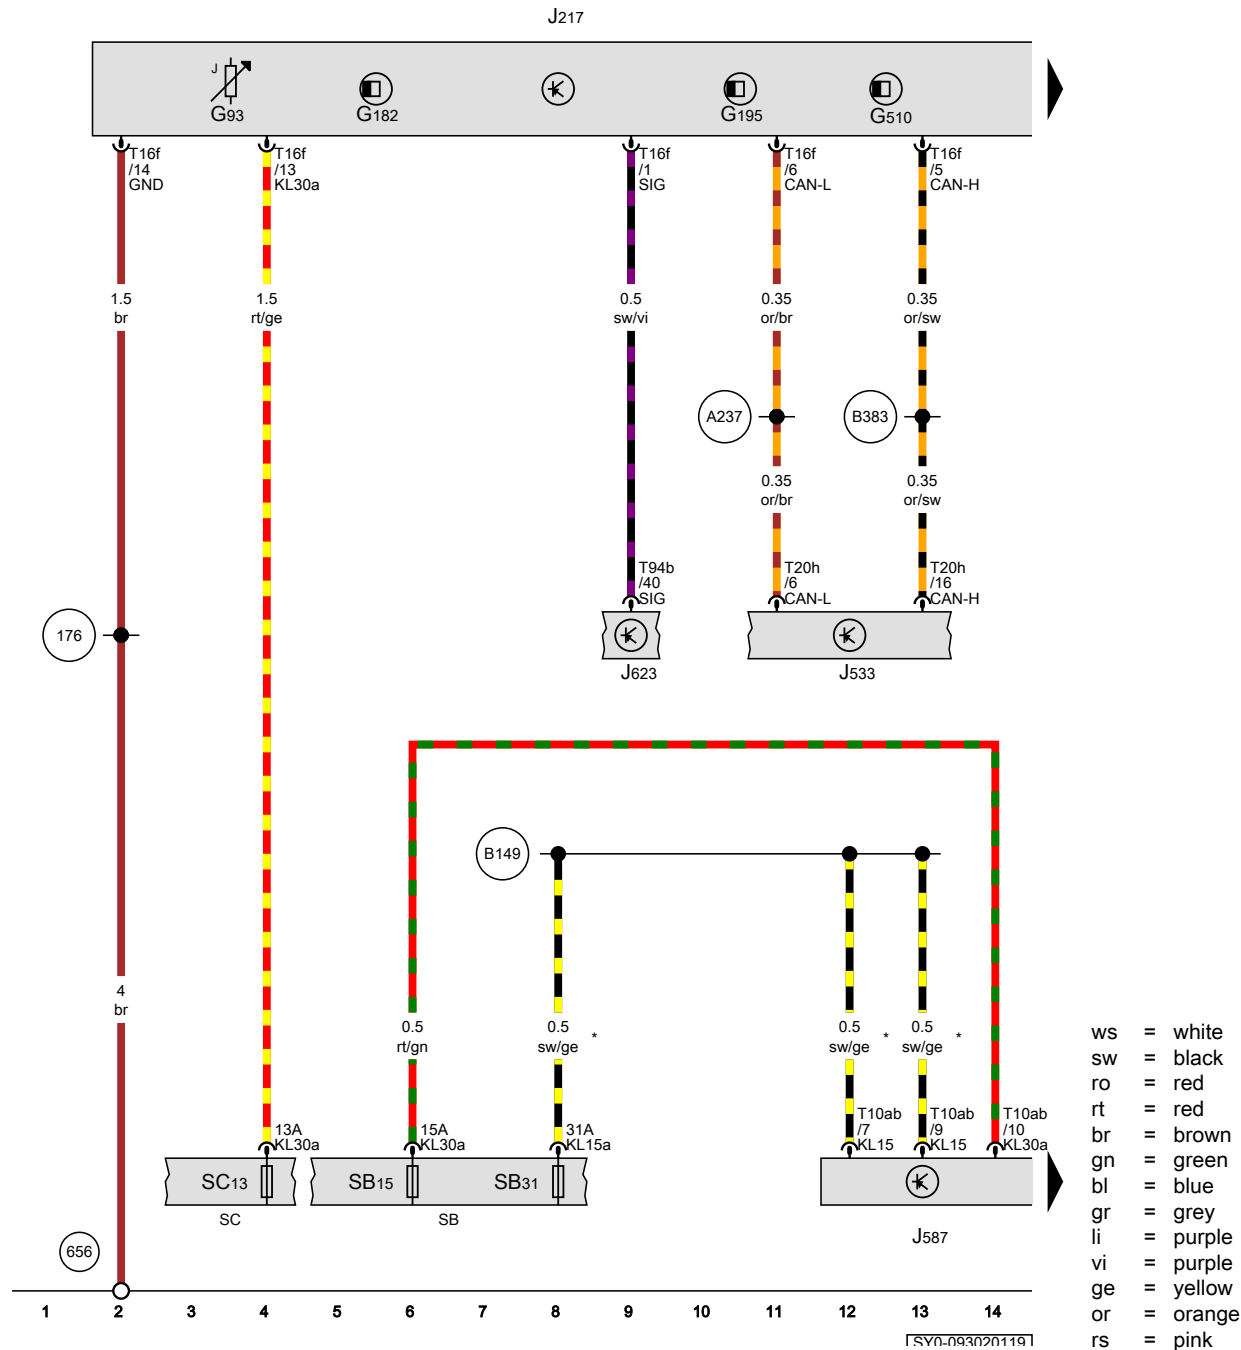

Automatic gearbox control unit, Selector lever sensors control unit, Fuse holder B, Fuse holder C

- | | |
|-------|--|
| G93 | Gearbox oil temperature sender |
| G182 | Gearbox input speed sender |
| G195 | Gearbox output speed sender |
| G510 | Temperature sender in control unit |
| J217 | Automatic gearbox control unit |
| J533 | Data bus diagnostic interface |
| J587 | Selector lever sensors control unit |
| J623 | Engine/motor control unit |
| SB | Fuse holder B |
| SC13 | Fuse 13 on fuse holder C |
| SB15 | Fuse 15 on fuse holder B |
| SB31 | Fuse 31 on fuse holder B |
| SC | Fuse holder C |
| T10ab | 10-pin connector, red |
| T16f | 16-pin connector, black |
| T20h | 20-pin connector, red |
| T94b | 94-pin connector, black |
| 176 | Earth connection, in right headlight wiring harness |
| 656 | Earth point, on right headlight |
| A237 | Connection 1 (powertrain CAN bus, low), in dash panel wiring harness |
| B149 | Positive connection 2 (15a), in interior wiring harness |
| B383 | Connection 1 (powertrain CAN bus, high), in main wiring harness |
| * | From November 2017 |

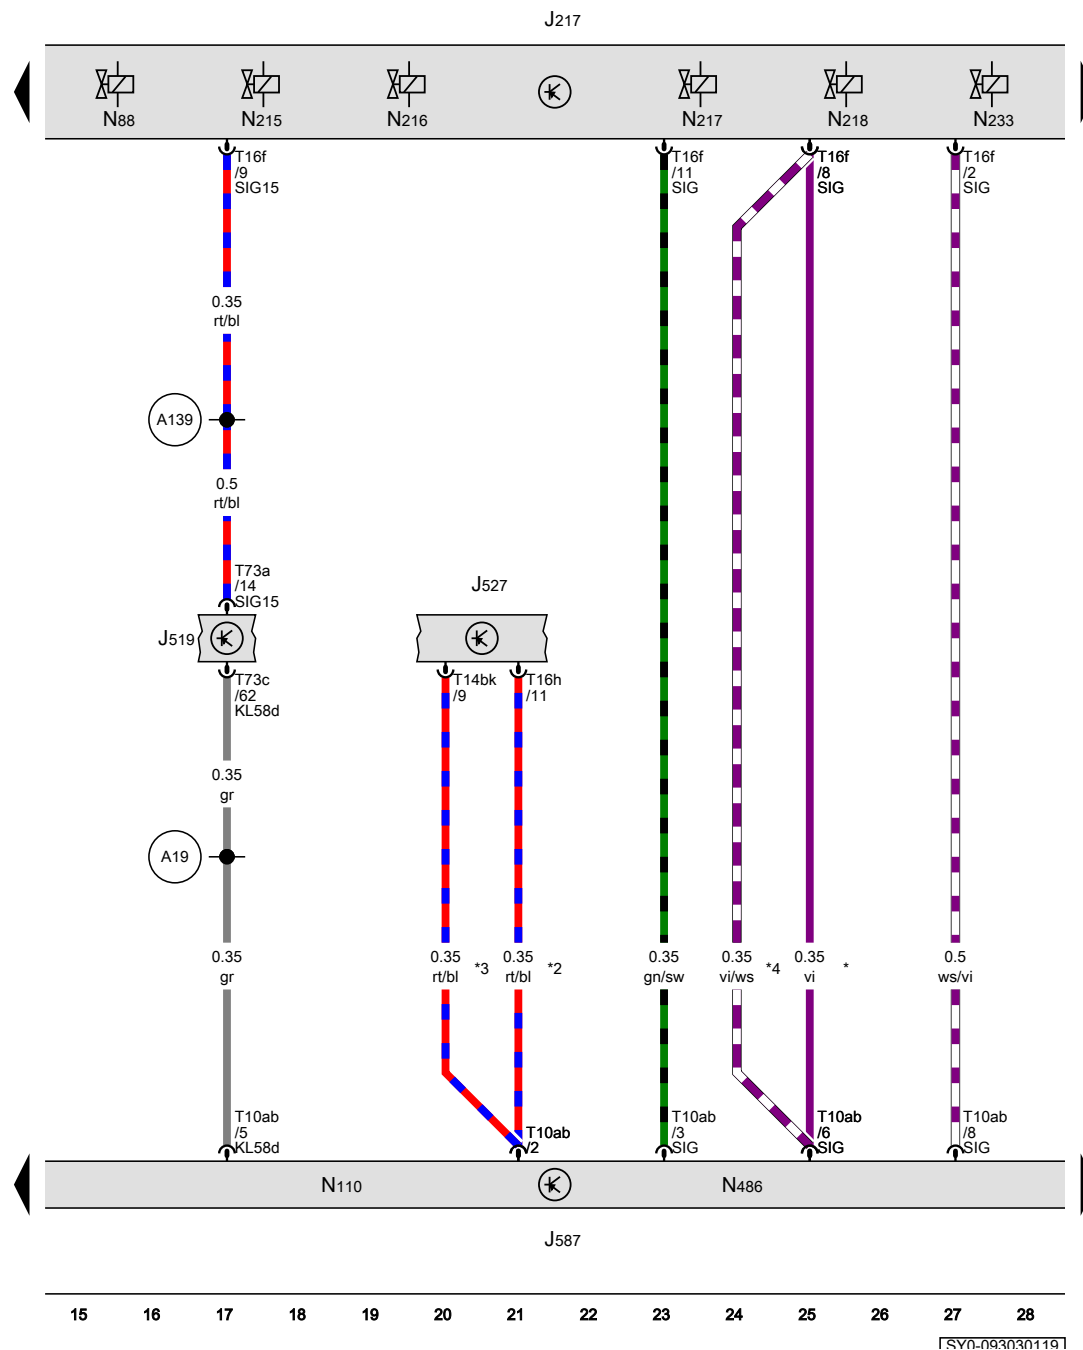

Automatic gearbox control unit, Selector lever sensors control unit

- J217 Automatic gearbox control unit
- J519 Onboard supply control unit
- J527 Steering column electronics control unit
- J587 Selector lever sensors control unit
- N88 Solenoid valve 1
- N110 Selector lever lock solenoid
- N215 Automatic gearbox pressure regulating valve 1
- N216 Automatic gearbox pressure regulating valve 2
- N217 Automatic gearbox pressure regulating valve 3
- N218 Automatic gearbox pressure regulating valve 4
- N233 Automatic gearbox pressure regulating valve 5
- N486 Parking lock solenoid
- T10ab 10-pin connector, red
- T14bk 14-pin connector, black
- T16f 16-pin connector, black
- T16h 16-pin connector, black
- T73a 73-pin connector, black
- T73c 73-pin connector, black

- A19 Connection (58d), in dash panel wiring harness
- A139 Connection 3 (15) in dash panel wiring harness

- * Up to November 2017
- *2 For models with no multifunction steering wheel
- *3 For models with multifunction steering wheel
- *4 From November 2017

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

J217




Automatic gearbox control unit, Selector lever sensors control unit, Selector lever position display

- G676 Gear sensor
- G747 Parking lock sender
- J217 Automatic gearbox control unit
- J587 Selector lever sensors control unit
- N371 Automatic gearbox pressure regulating valve 6
- N443 Automatic gearbox pressure regulating valve 7
- N485 Accumulator solenoid
- N509 Gearbox oil cooling valve
- T10ab 10-pin connector, red
- T10as 10-pin connector, black
- V475 Auxiliary hydraulic pump 1 for gearbox oil
- Y6 Selector lever position display

285 Earth connection 7, in interior wiring harness

685 Earth point 1, on front of right longitudinal member

Y6

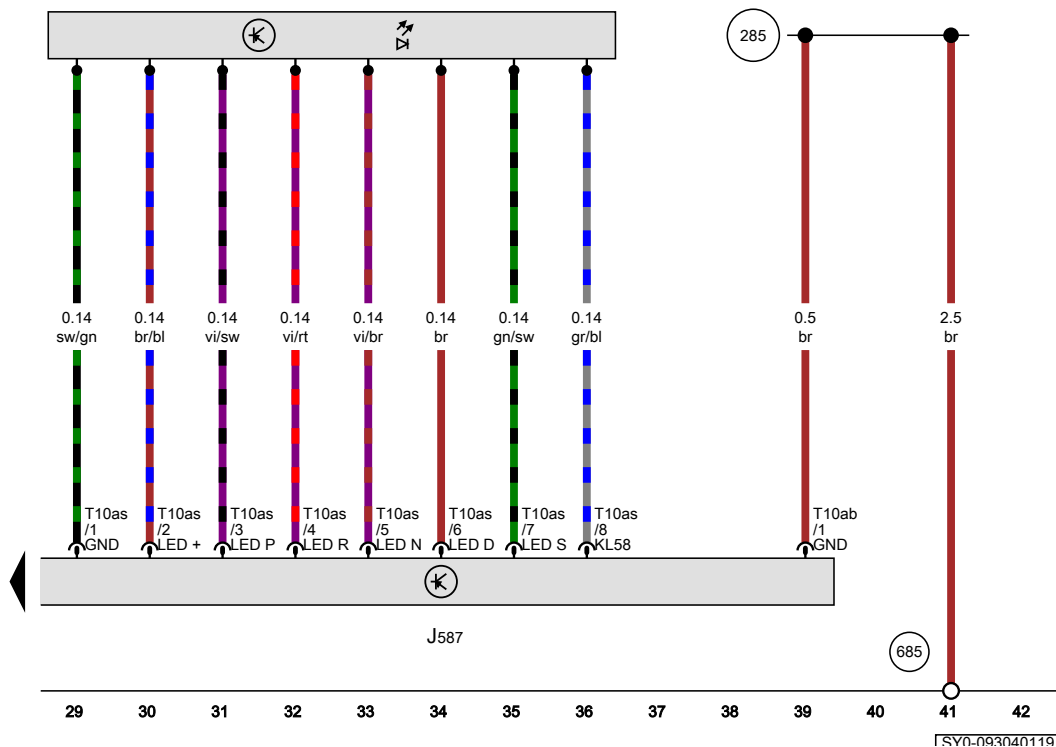


- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

8-speed automatic gearbox 09Q , (G1F),(1X0),(G1G),(1X1)

From July 2018


Automatic gearbox control unit, Selector lever sensors control unit, Fuse holder B, Fuse holder C

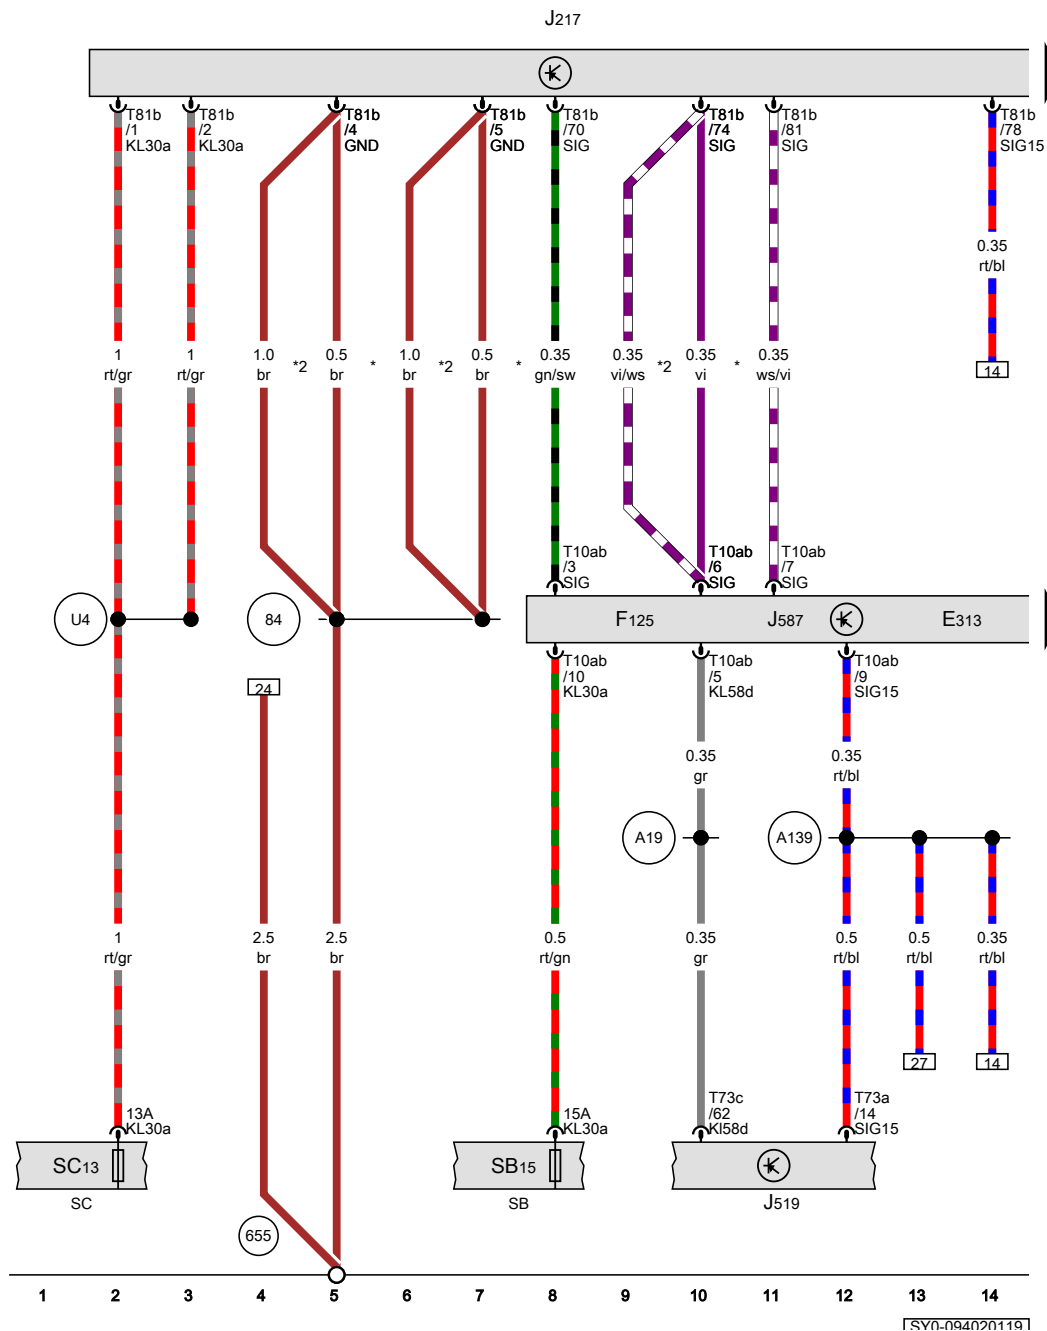

- E313 Selector lever
- F125 Multifunction switch
- J217 Automatic gearbox control unit
- J519 Onboard supply control unit
- J587 Selector lever sensors control unit
- SB Fuse holder B
- SC13 Fuse 13 on fuse holder C
- SB15 Fuse 15 on fuse holder B
- SC Fuse holder C
- T10ab 10-pin connector, red
- T73a 73-pin connector, black
- T73c 73-pin connector, black
- T81b 81-pin connector, black

- 84 Earth connection, engine block, in front right wiring harness
- 655 Earth point, on left headlight
- A19 Connection (58d), in dash panel wiring harness
- A139 Connection 3 (15) in dash panel wiring harness
- U4 Connection (30), in automatic gearbox wiring harness
- * Up to November 2017
- *2 From November 2017

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

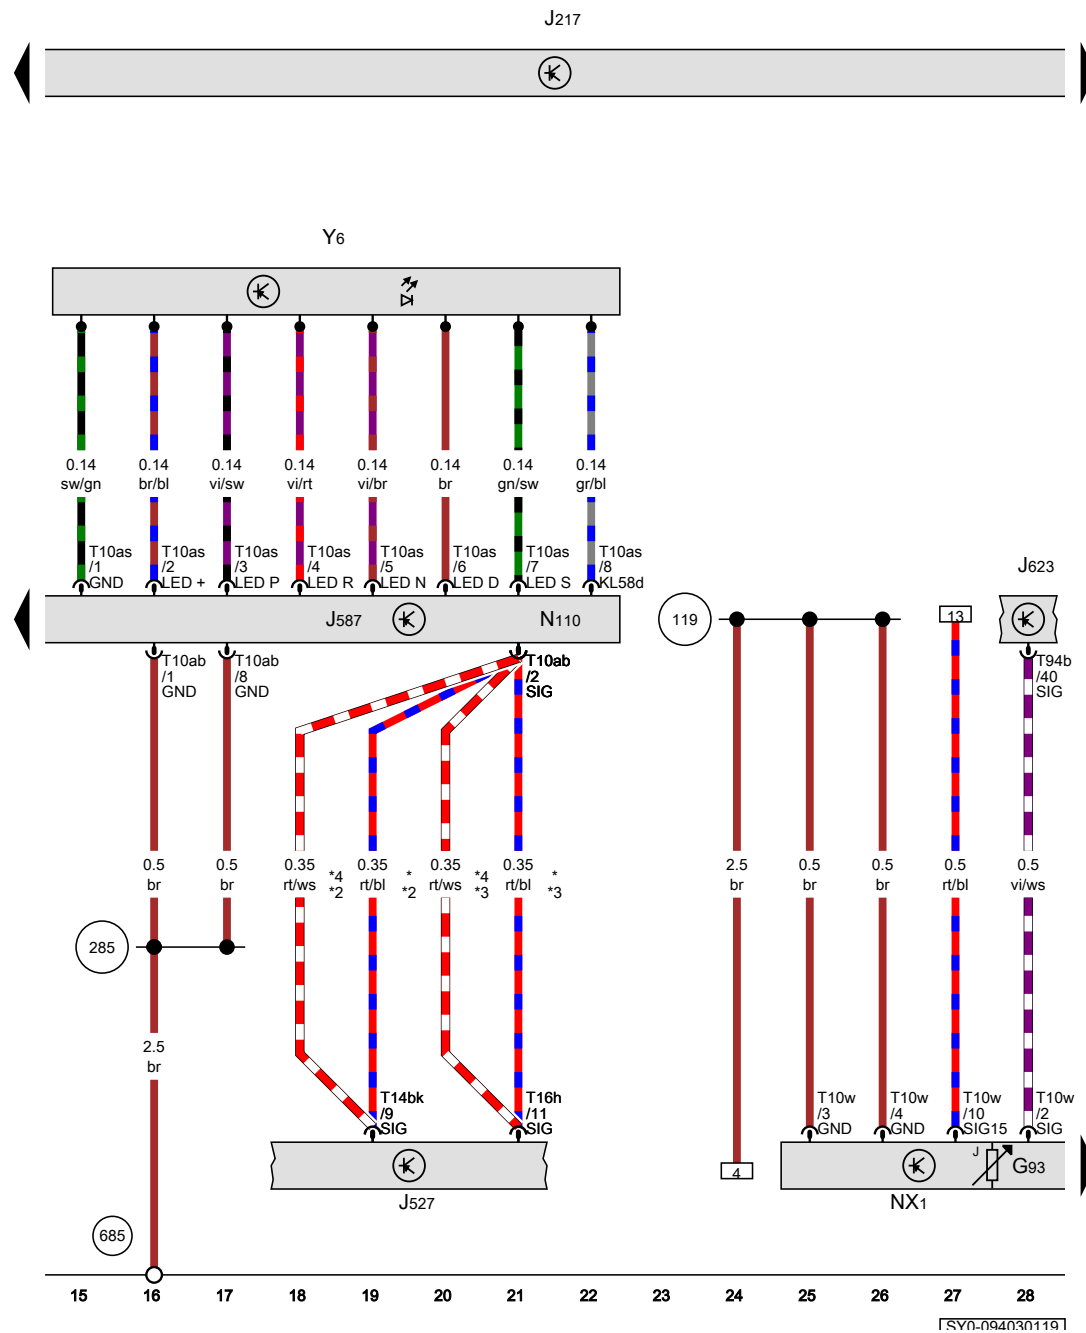

Automatic gearbox control unit, Selector lever sensors control unit, Gearbox

- G93 Gearbox oil temperature sender
- J217 Automatic gearbox control unit
- J527 Steering column electronics control unit
- J587 Selector lever sensors control unit
- J623 Engine/motor control unit
- NX1 Gearbox
- N110 Selector lever lock solenoid
- T10ab 10-pin connector, red
- T10as 10-pin connector, black
- T10w 10-pin connector, black
- T14bk 14-pin connector, black
- T16h 16-pin connector, black
- T94b 94-pin connector, black
- Y6 Selector lever position display


- 119 Earth connection 1, in headlight wiring harness
- 285 Earth connection 7, in interior wiring harness
- 685 Earth point 1, on front of right longitudinal member

- * Up to November 2017
- *2 For models with multifunction steering wheel
- *3 For models with no multifunction steering wheel
- *4 From November 2017

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink


Automatic gearbox control unit, Gearbox

- J217 Automatic gearbox control unit
- NX1 Gearbox
- N88 Solenoid valve 1
- N89 Solenoid valve 2
- N215 Automatic gearbox pressure regulating valve 1
- N216 Automatic gearbox pressure regulating valve 2
- T10w 10-pin connector, black
- T28b 28-pin connector, black
- T81b 81-pin connector, black

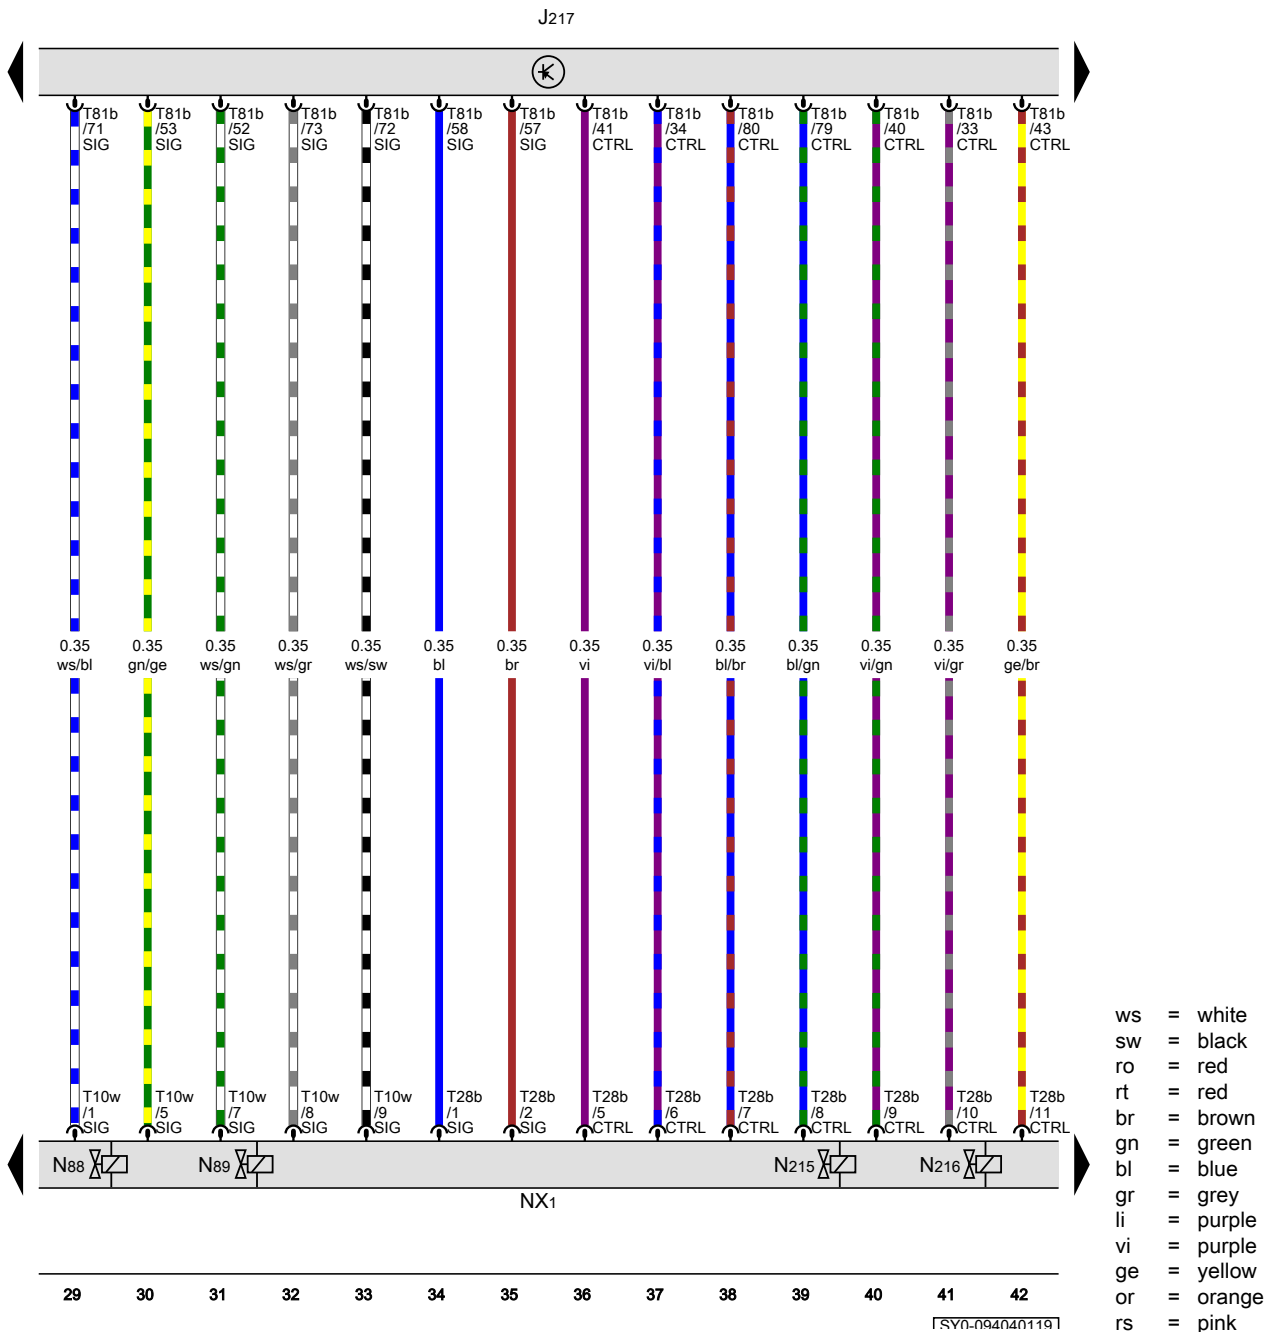


Automatic gearbox control unit, Gearbox

- G632 Gearbox input speed sender 1
- J217 Automatic gearbox control unit
- NX1 Gearbox
- N217 Automatic gearbox pressure regulating valve 3
- N218 Automatic gearbox pressure regulating valve 4
- N233 Automatic gearbox pressure regulating valve 5
- N371 Automatic gearbox pressure regulating valve 6
- N510 Automatic gearbox pressure regulating valve 8
- T28b 28-pin connector, black
- T81b 81-pin connector, black
- * Up to November 2017
- *2 From November 2017

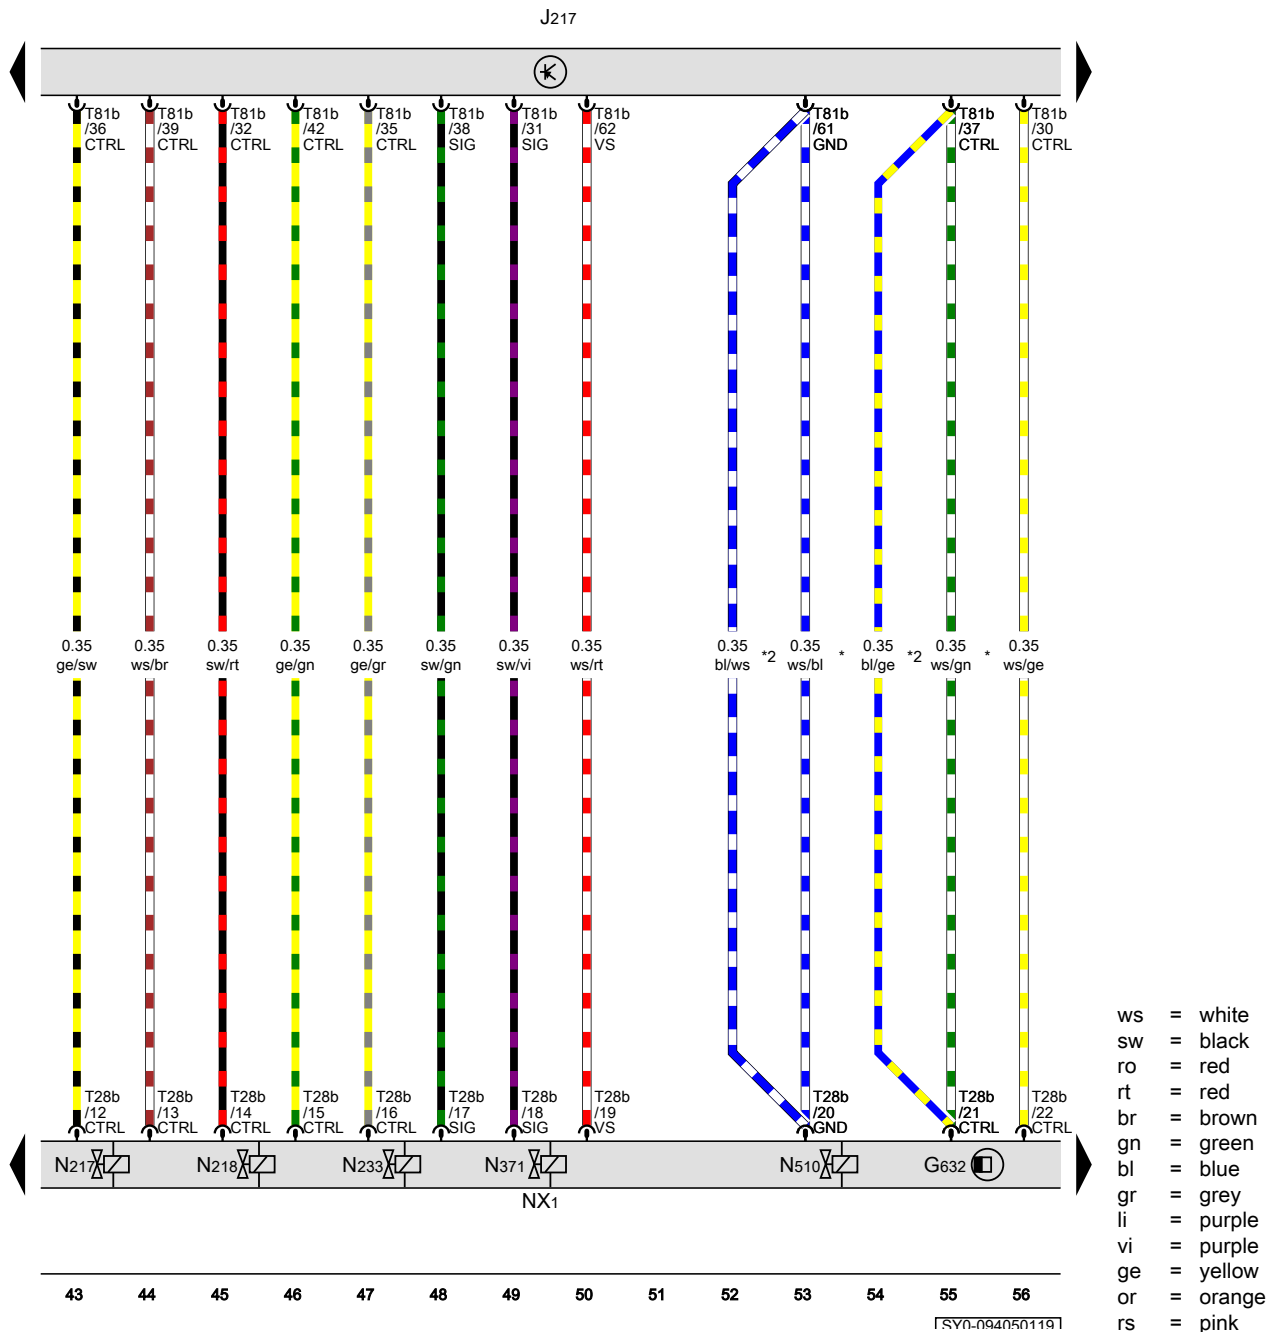

Automatic gearbox control unit, Gearbox

- G195 Gearbox output speed sender
- J217 Automatic gearbox control unit
- J533 Data bus diagnostic interface
- NX1 Gearbox
- T20h 20-pin connector, red
- T28b 28-pin connector, black
- T81b 81-pin connector, black
- V475 Auxiliary hydraulic pump 1 for gearbox oil
- A237 Connection 1 (powertrain CAN bus, low), in dash panel wiring harness
- B383 Connection 1 (powertrain CAN bus, high), in main wiring harness

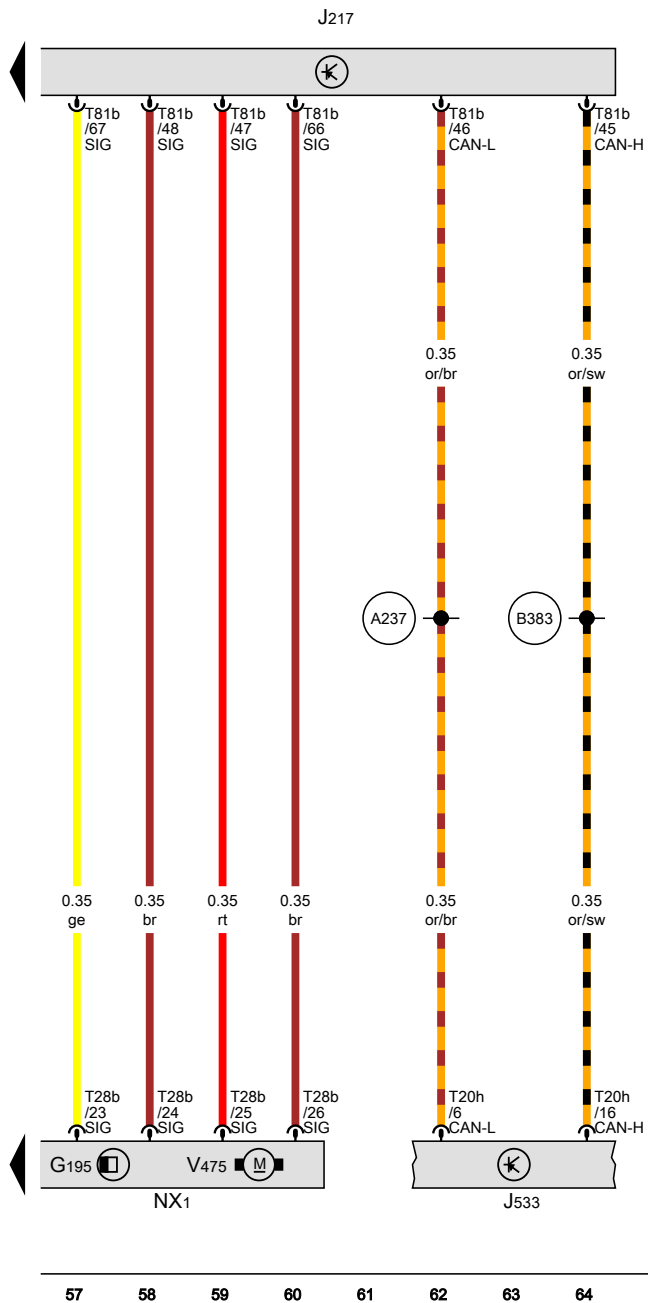


ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

Preparation for 3-way tip function , (Henschel)

From June 2017

Main switch for hydraulic system, Switch with approach function for zero position of tipper mechanism, Tipping mechanism limitation switch, Warning buzzer for hydraulic system, Tipping mechanism fuse, Hydraulic system, Hydraulic pump for tilting/tipping mechanism

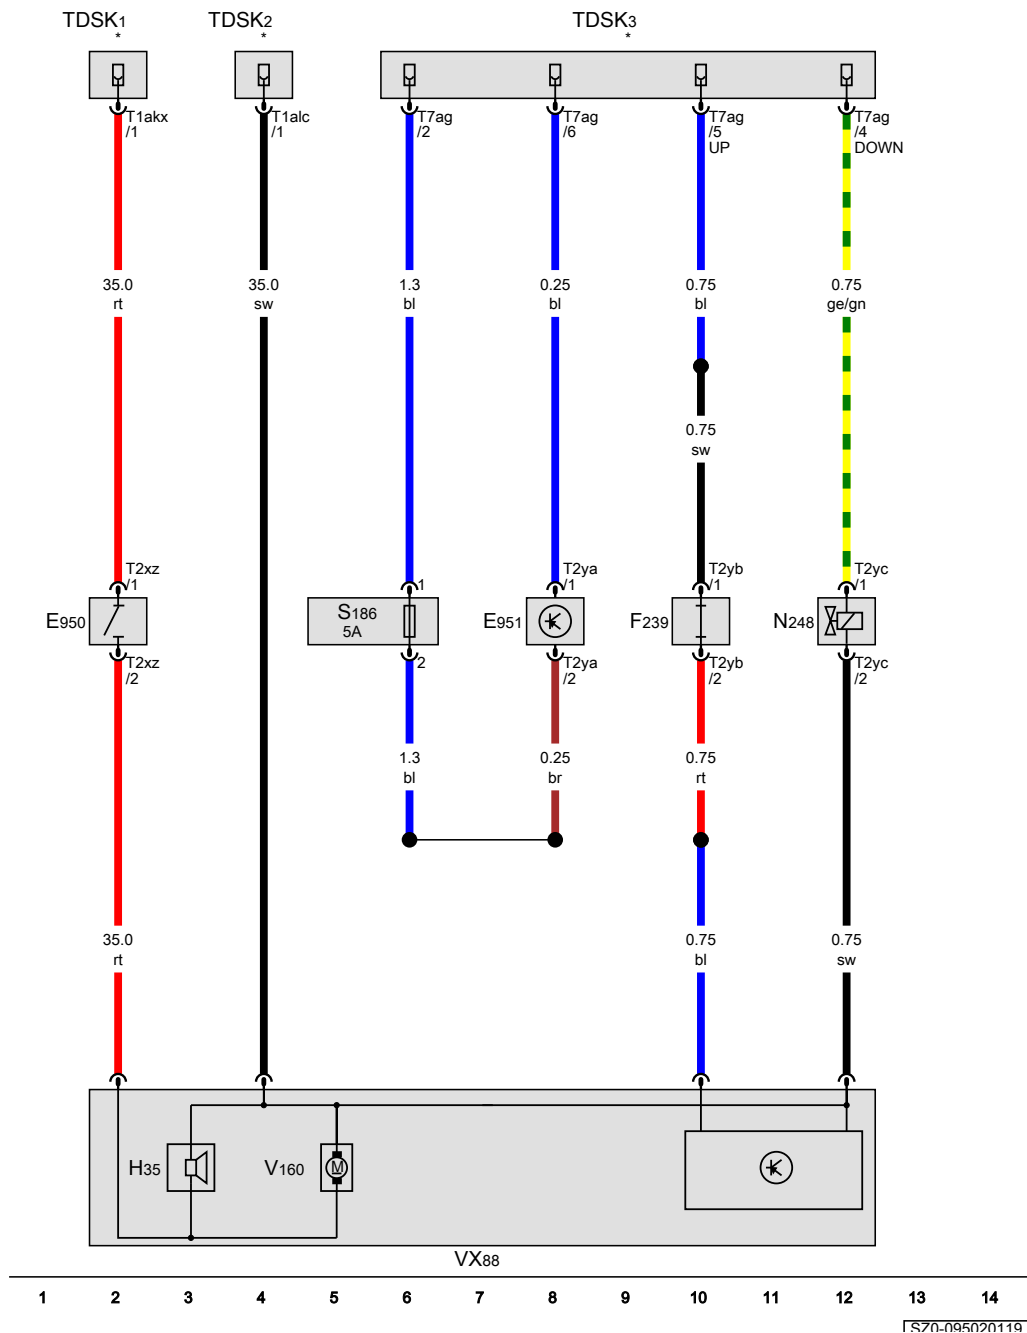


ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink

- E950 Main switch for hydraulic system
- E951 Switch with approach function for zero position of tipper mechanism
- F239 Tipping mechanism limitation switch
- H35 Warning buzzer for hydraulic system
- N248 Tipping mechanism valve
- S186 Tipping mechanism fuse
- T1akx 1-pin connector
- T1alc 1-pin connector
- T2xz 2-pin connector
- T2ya 2-pin connector
- T2yb 2-pin connector
- T2yc 2-pin connector
- T7ag 7-pin connector, black
- TDSK1 Coupling point 1 for 3-way tipper, on longitudinal member
- TDSK2 Coupling point 2 for 3-way tipper, on longitudinal member
- TDSK3 Coupling point 3 for 3-way tipper, on longitudinal member
- VX88 Hydraulic system
- V160 Hydraulic pump for tilting/tipping mechanism
- * see applicable current flow diagram for preparation for 3-way tip function

Preparation for 3-way tip function , (Schoon)

From June 2017

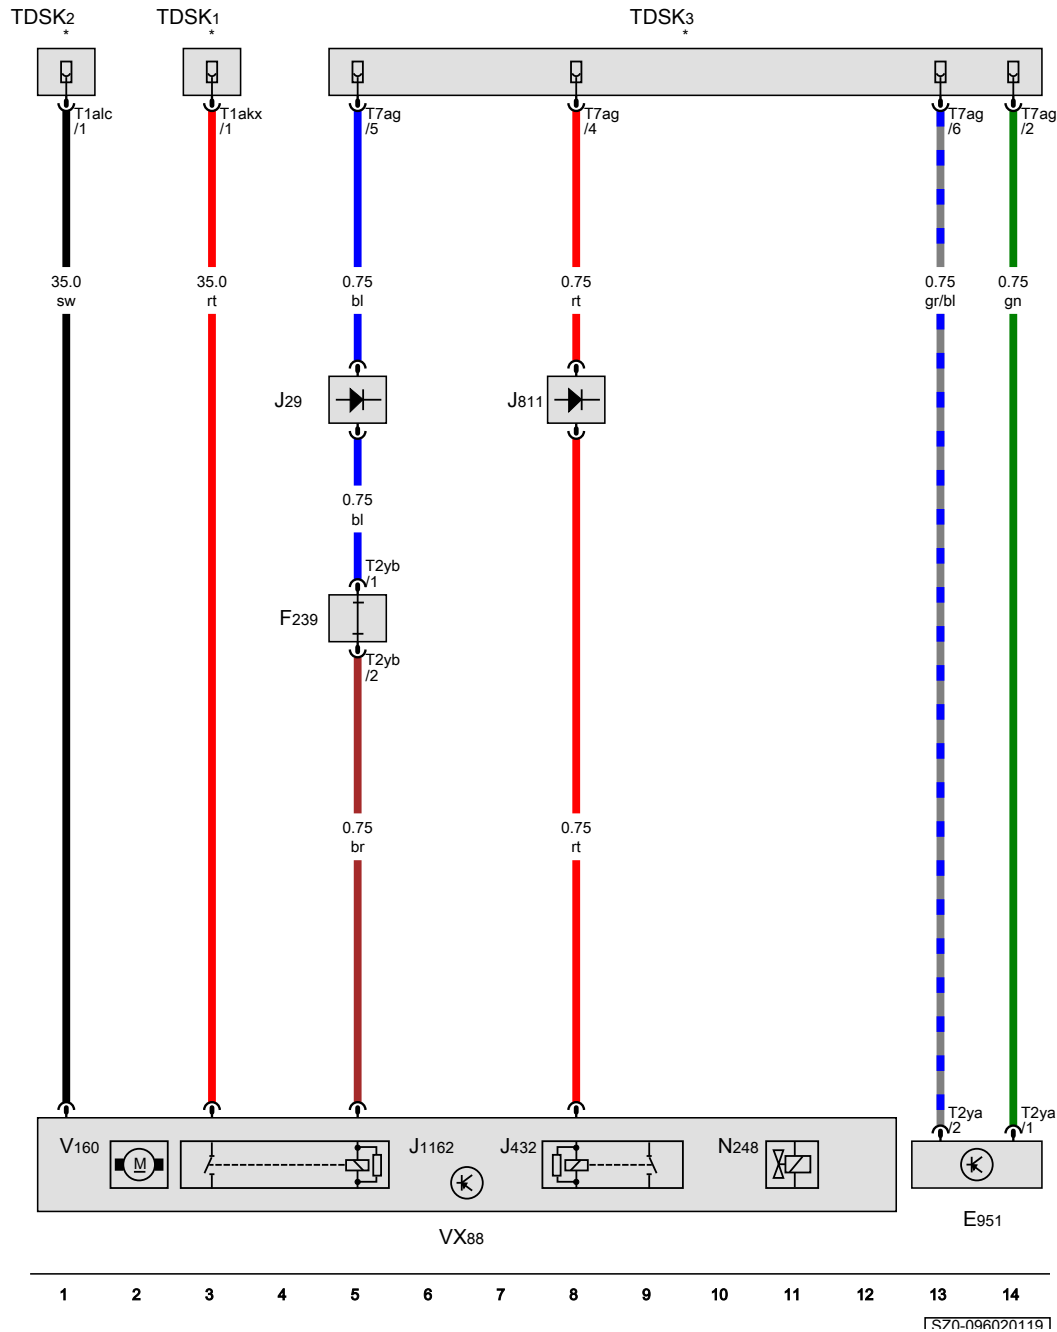


Switch with approach function for zero position of tipper mechanism, Tipping mechanism limitation switch, Blocking diode, Blocking diode 2, Hydraulics motor relay, Hydraulic system

- | | |
|-------|--|
| E951 | Switch with approach function for zero position of tipper mechanism |
| F239 | Tippering mechanism limitation switch |
| J29 | Blocking diode |
| J432 | Tippering mechanism relay |
| J811 | Blocking diode 2 |
| J1162 | Hydraulics motor relay |
| N248 | Tippering mechanism valve |
| T1akx | 1-pin connector, black |
| T1alc | 1-pin connector, black |
| T2ya | 2-pin connector, black |
| T2yb | 2-pin connector, black |
| T7ag | 7-pin connector, black |
| TDSK1 | Coupling point 1 for 3-way tipper, on longitudinal member |
| TDSK2 | Coupling point 2 for 3-way tipper, on longitudinal member |
| TDSK3 | Coupling point 3 for 3-way tipper, on longitudinal member |
| VX88 | Hydraulic system |
| V160 | Hydraulic pump for tilting/tippering mechanism |
| * | see applicable current flow diagram for preparation for 3-way tip function |

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink

Steering column electronics , EBHA

From December 2017

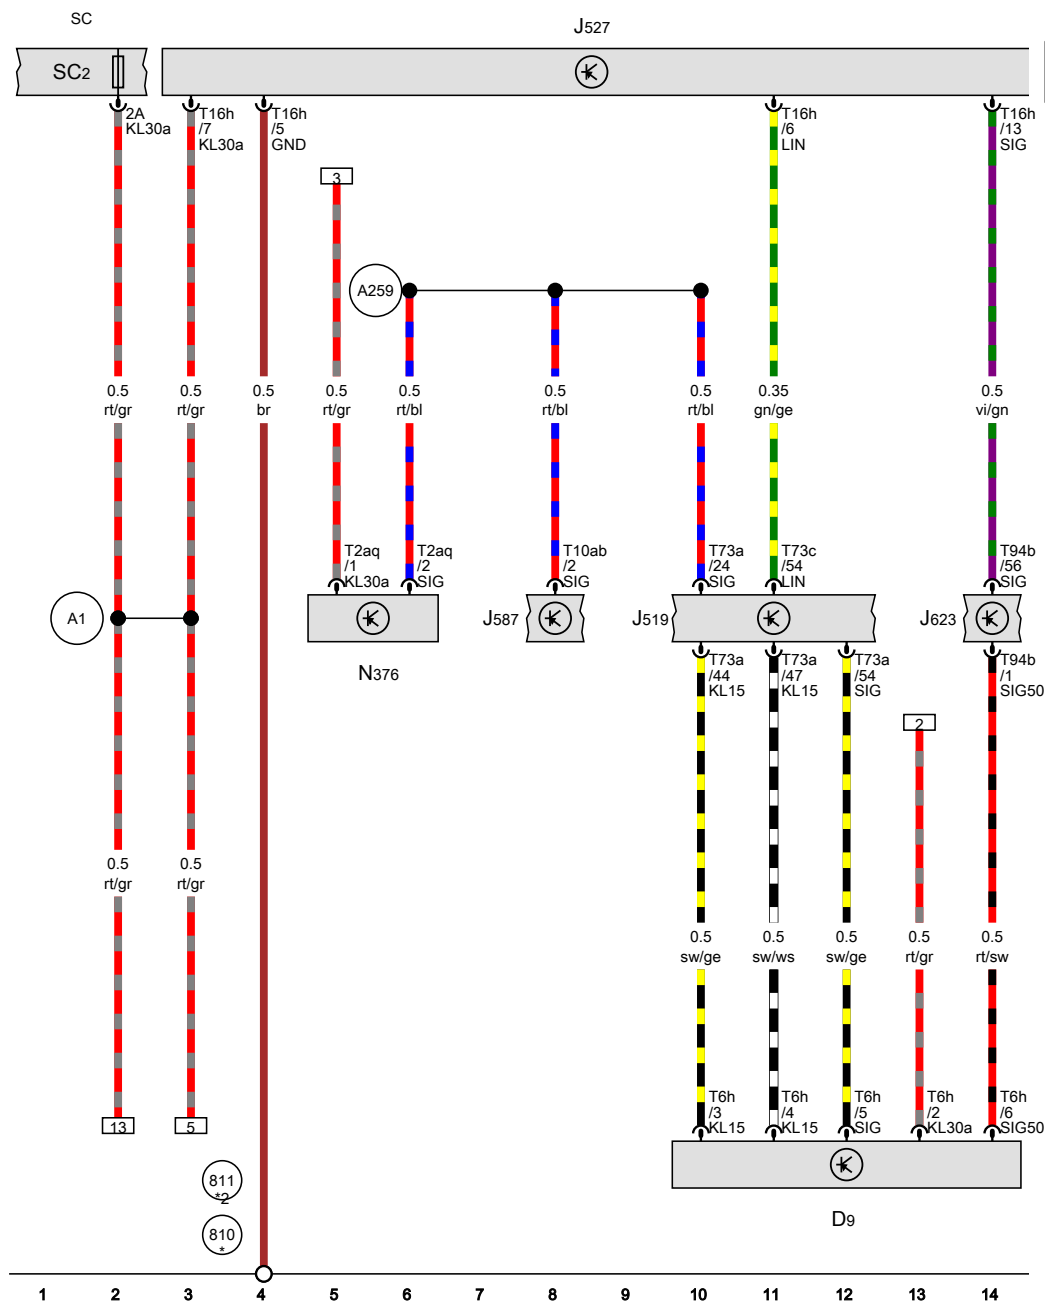

Electronic ignition lock, Onboard supply control unit, Steering column electronics control unit, Ignition key withdrawal lock solenoid, Fuse holder C


- D9 Electronic ignition lock
- J519 Onboard supply control unit
- J527 Steering column electronics control unit
- J587 Selector lever sensors control unit
- J623 Engine/motor control unit
- N376 Ignition key withdrawal lock solenoid
- SC Fuse holder C
- SC2 Fuse 2 on fuse holder C
- T2aq 2-pin connector, black
- T6h 6-pin connector, black
- T10ab 10-pin connector, red
- T16h 16-pin connector, black
- T73a 73-pin connector, black
- T73c 73-pin connector, black
- T94b 94-pin connector, black

- 810 Earth point on central tube for dash panel, centre left
- 811 Earth point on central tube for dash panel, centre right
- A1 Positive connection (30a), in dash panel wiring harness
- A259 Connection 3, in dash panel wiring harness

- * For left-hand drive models
- *2 For right-hand drive models

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

Steering column electronics control unit

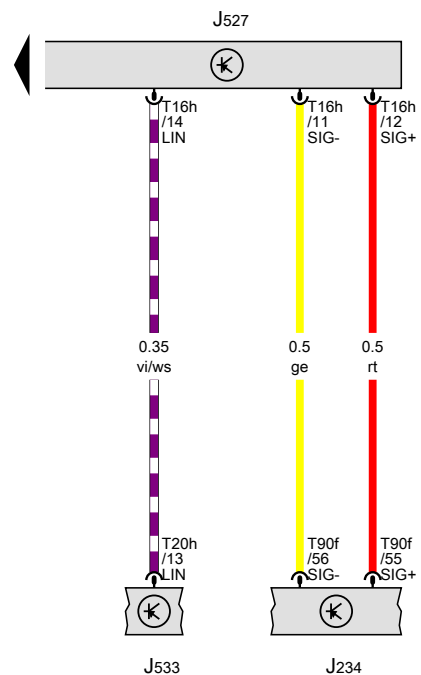


- J234 Airbag control unit
- J527 Steering column electronics control unit
- J533 Data bus diagnostic interface
- T16h 16-pin connector, black
- T20h 20-pin connector, red
- T90f 90-pin connector, yellow

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

Multifunction steering wheel , EBHA

From December 2017

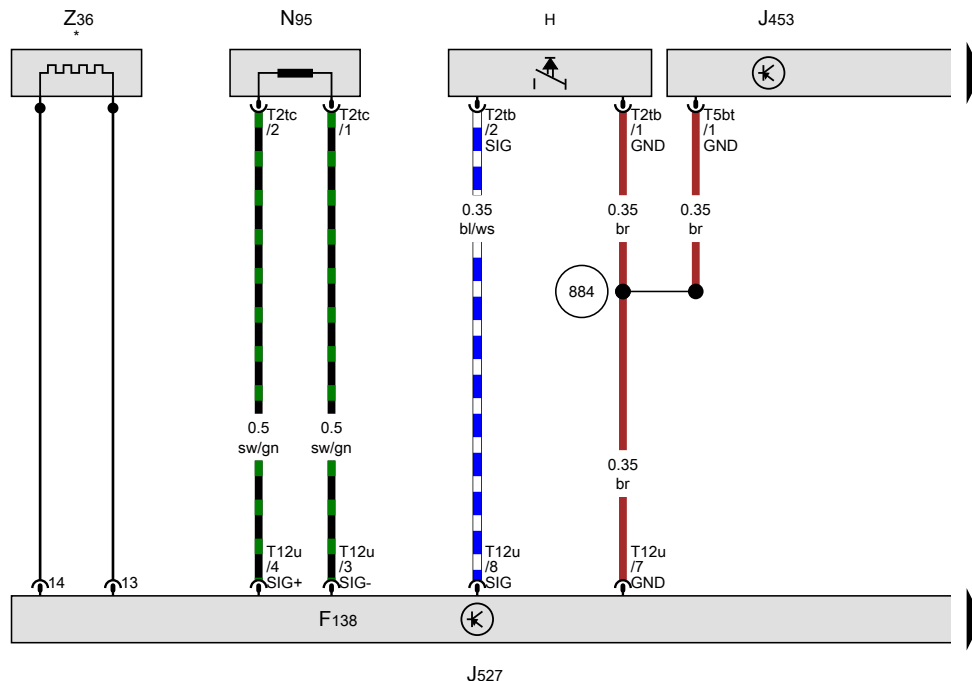


Horn plate, Multifunction steering wheel control unit, Steering column electronics control unit, Airbag igniter on driver side, Heated steering wheel

- F138 Airbag coil connector and return ring with slip ring
- H Horn plate
- J453 Multifunction steering wheel control unit
- J527 Steering column electronics control unit
- N95 Airbag igniter on driver side
- T2tb 2-pin connector
- T2tc 2-pin connector
- T5bt 5-pin connector, black
- T12u 12-pin connector
- Z36 Heated steering wheel

884 Earth connection 1 in steering wheel wiring harness

* For models with heated steering wheel

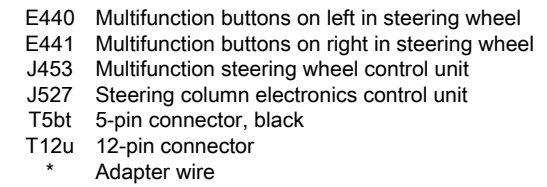


01.2019

Reversing camera (Rear Assist) , EBHA

From December 2017

Control unit 1 for information electronics, Reversing camera

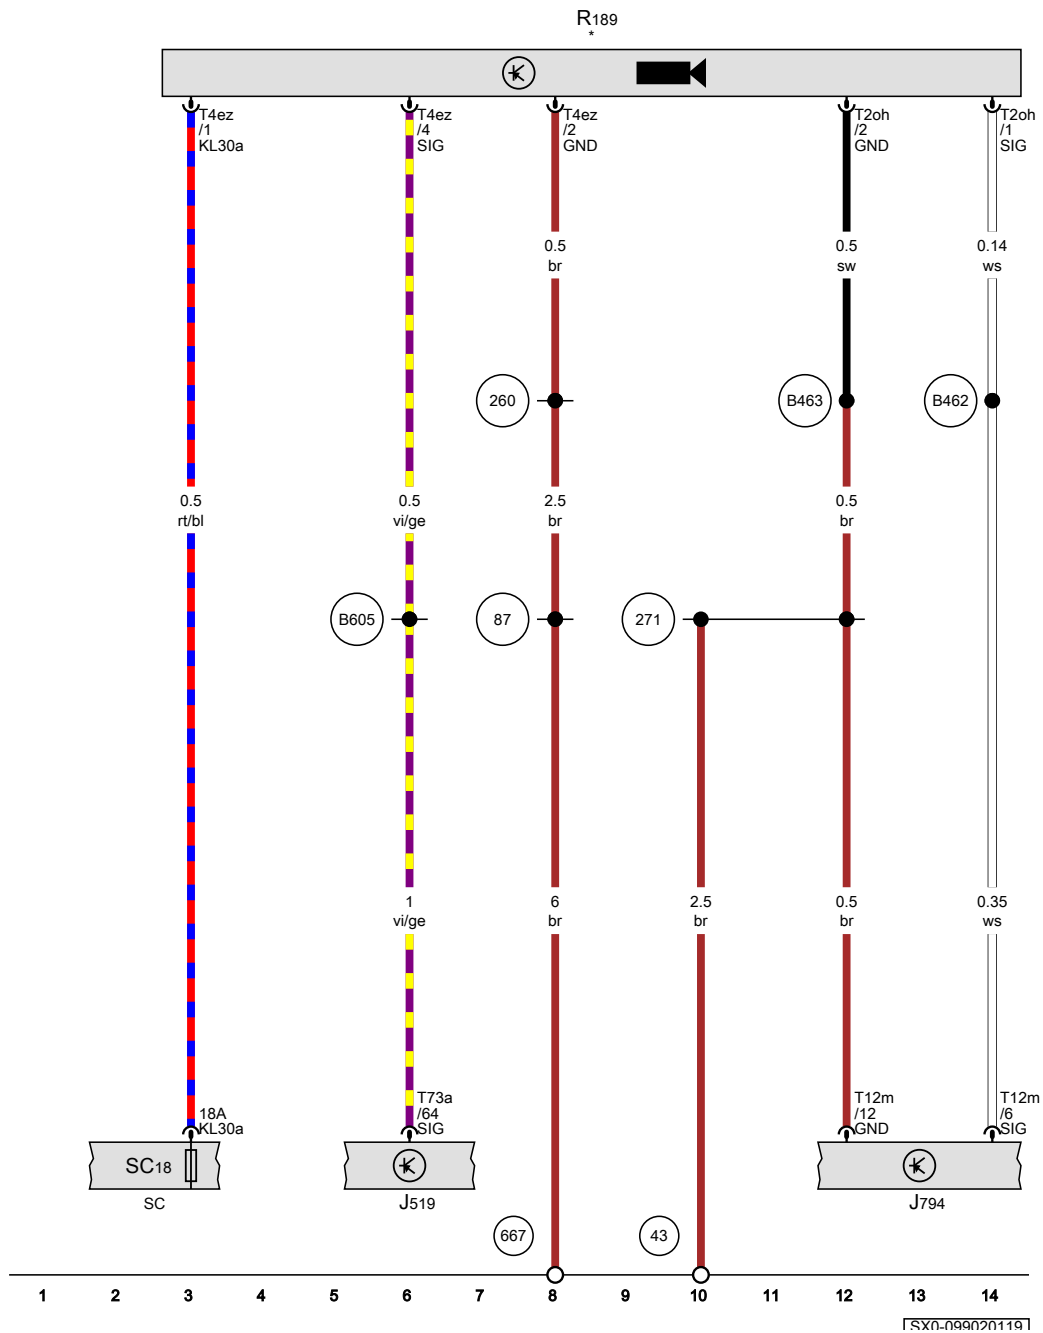

- J519 Onboard supply control unit
- J794 Control unit 1 for information electronics
- R189 Reversing camera, in roof
- SC Fuse holder C
- SC18 Fuse 18 on fuse holder C
- T2oh 2-pin connector, grey
- T4ez 4-pin connector, black
- T12m 12-pin connector, blue
- T73a 73-pin connector, black

- 43 Earth point, lower part of right A-pillar
- 87 Earth connection 2, in rear wiring harness
- 260 Earth connection, in tail light cluster wiring harness
- 271 Earth connection 3, in front wiring harness
- 667 Earth point, on rear left of roof
- B462 Connection 1 (video), in main wiring harness
- B463 Connection 2 (video), in main wiring harness
- B605 Connection 1, in interior wiring harness


* Pre-wired component

Special equipment, police , (F4G@IS9)

From July 2018

Fuse holder J, Fuse holder K


- SJ Fuse holder J
- SJ1 Fuse 1 on fuse holder J
- SJ2 Fuse 2 on fuse holder J
- SJ4 Fuse 4 on fuse holder J
- SJ6 Fuse 6 on fuse holder J
- SJ9 Fuse 9 on fuse holder J
- SJ11 Fuse 11 on fuse holder J
- SJ12 Fuse 12 on fuse holder J
- SK Fuse holder K
- SK1 Fuse 1 on fuse holder K
- SK3 Fuse 3 on fuse holder K
- SK5 Fuse 5 on fuse holder K
- SK7 Fuse 7 on fuse holder K
- SK11 Fuse 11 on fuse holder K

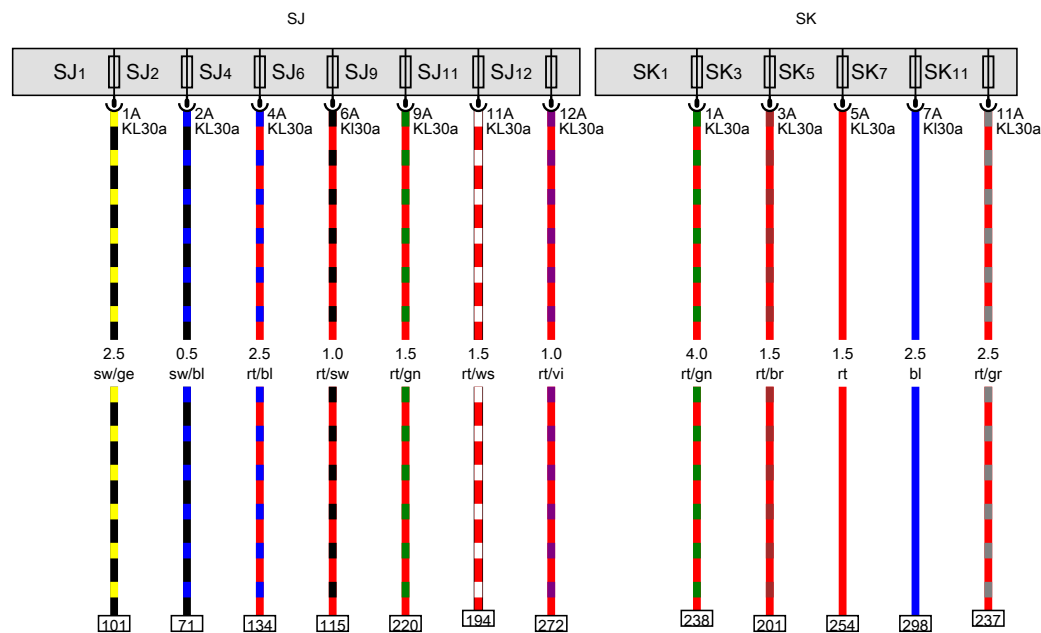


- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

Special vehicle control unit, Fuse holder B, Fuse holder D

- J608 Special vehicle control unit
- SB Fuse holder B
- SB8 Fuse 8 on fuse holder B
- SB22 Fuse 22 on fuse holder B
- SB49 Fuse 49 on fuse holder B
- SB59 Fuse 59 on fuse holder B
- SD Fuse holder D
- SD1 Fuse 1 on fuse holder D
- SD3 Fuse 3 on fuse holder D
- T6cb 6-pin connector, blue

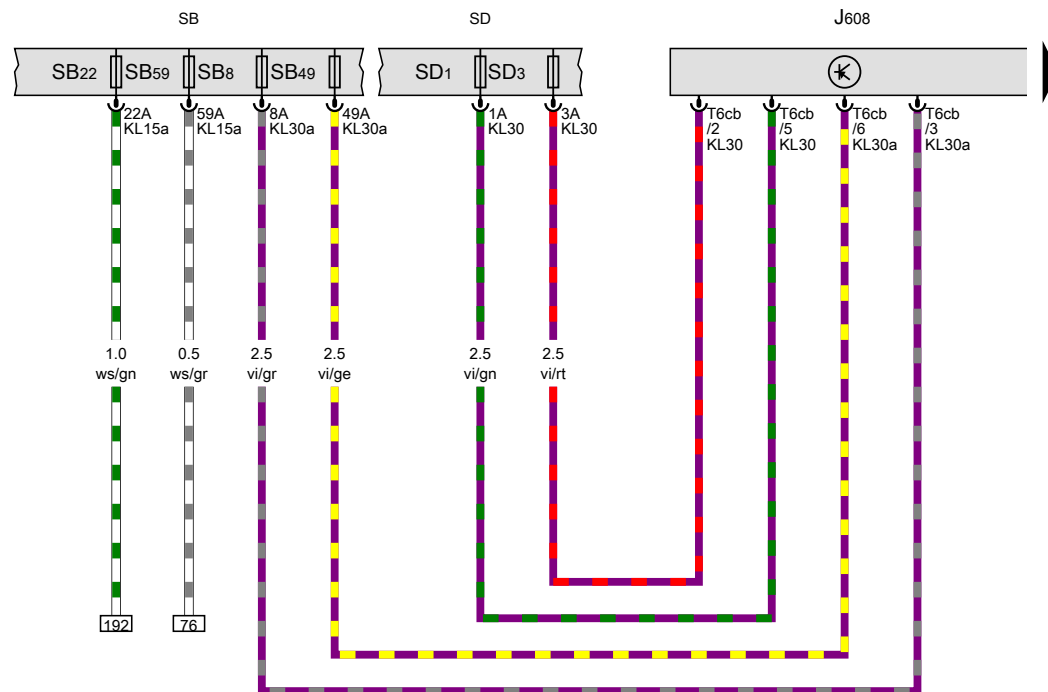

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

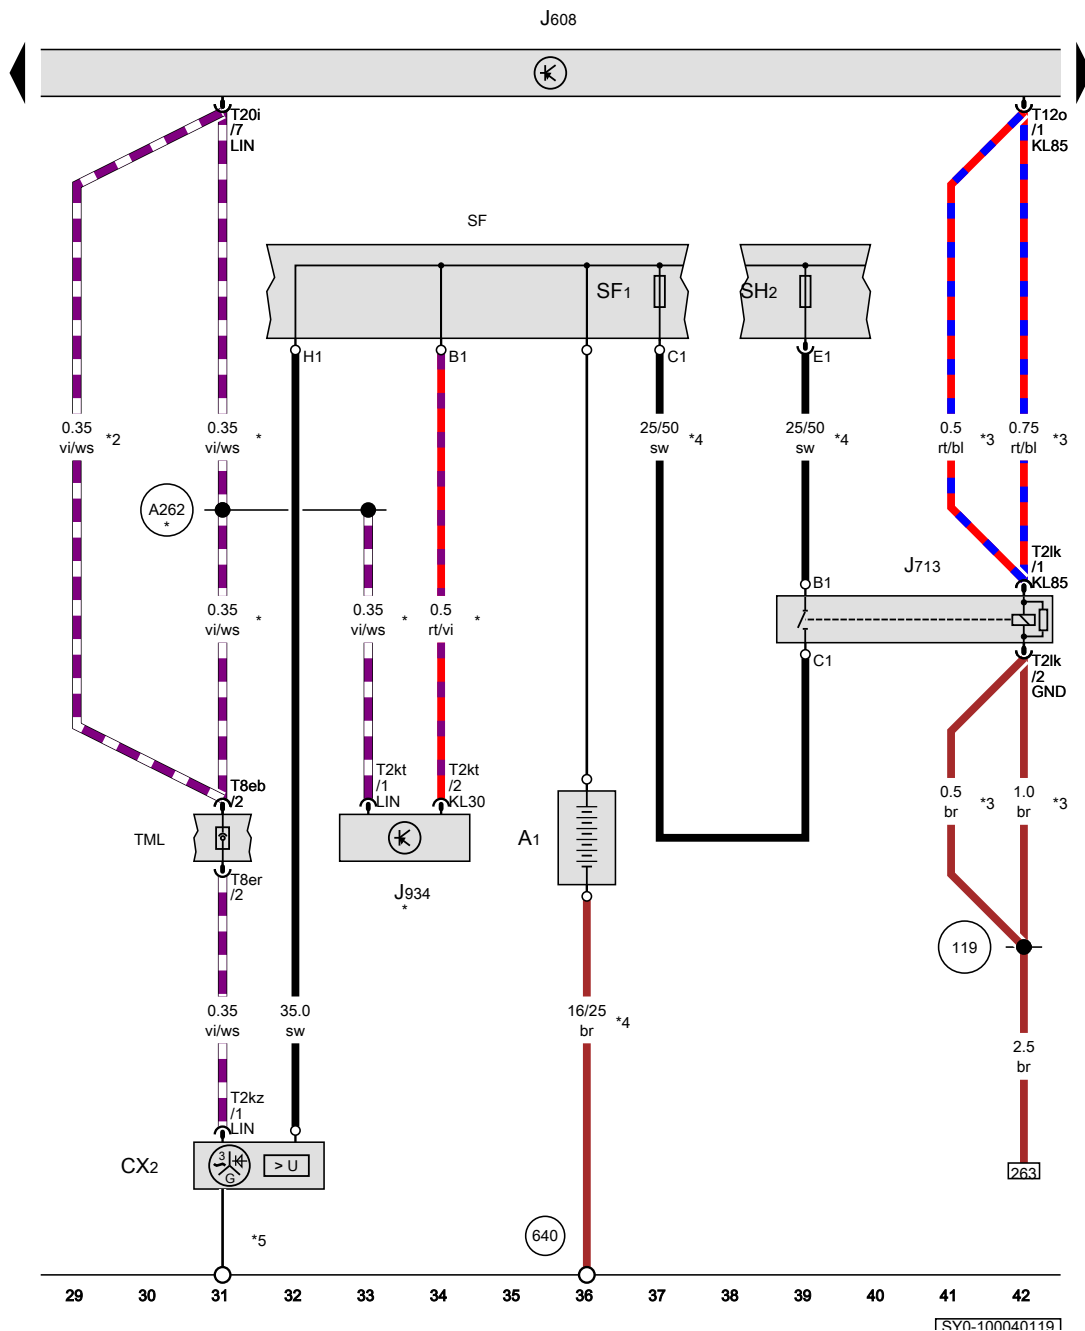

Second battery, Alternator 2 with voltage regulator, Special vehicle control unit, Second battery charging circuit relay, Battery monitor control unit 2, Fuse holder F

- A1 Second battery
- CX2 Alternator 2 with voltage regulator
- J608 Special vehicle control unit
- J713 Second battery charging circuit relay
- J934 Battery monitor control unit 2
- SF Fuse holder F
- SF1 Fuse 1 in fuse holder F
- SH2 Fuse 2 in fuse holder H
- T2kt 2-pin connector, black
- T2kz 2-pin connector, black
- T2lk 2-pin connector, black
- T8eb 8-pin connector, black
- T8er 8-pin connector, black
- T12o 12-pin connector, green
- T20i 20-pin connector, black
- TML Coupling point in engine compartment, left


119 Earth connection 1, in headlight wiring harness

640 Earth point 2, left in engine compartment

A262 Connection 3 (LIN bus) in dash panel wiring harness

- * For models with second battery
- *2 For models with no second battery
- *3 According to equipment
- *4 Cross section depends on equipment
- *5 Earth supply via housing


- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

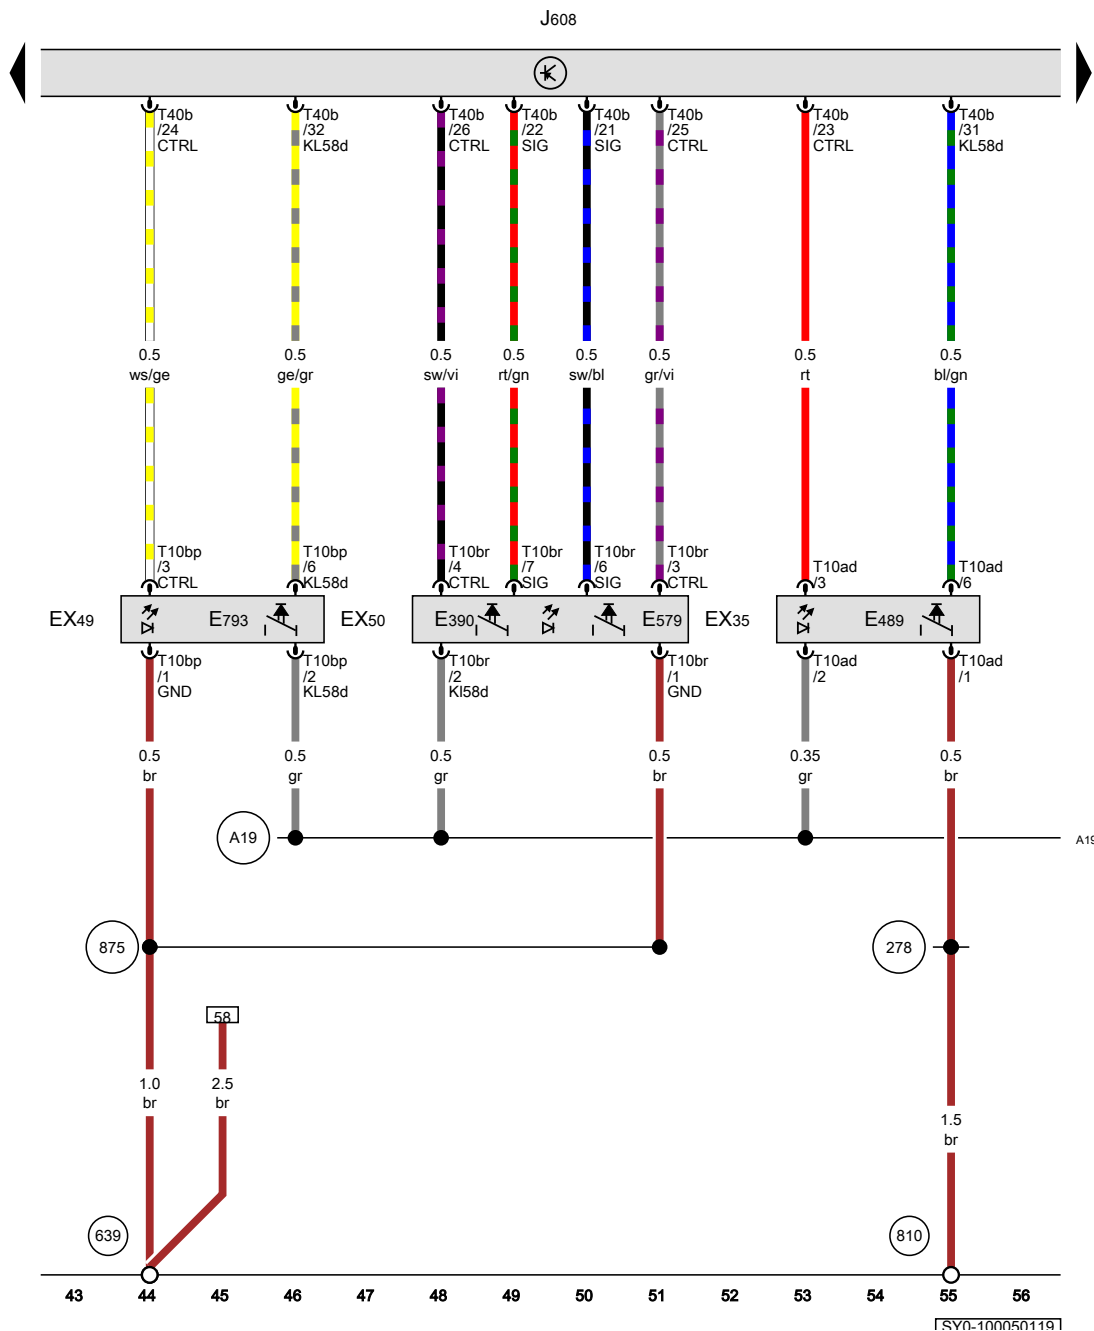

Centre switch module 2 in dash panel, Centre switch module 4 in dash panel, Centre switch module 1 in dash panel, Special vehicle control unit


- EX35 Centre switch module 2 in dash panel
- EX49 Centre switch module 4 in dash panel
- EX50 Centre switch module 1 in dash panel
- E390 Interior lighting central switch button
- E489 Ignition bypass button
- E579 Daytime running lights switch
- E793 Main switch for 2-way radio
- J608 Special vehicle control unit
- T10ad 10-pin connector, black
- T10bp 10-pin connector, red
- T10br 10-pin connector, black
- T40b 40-pin connector, black

- 278 Earth connection 4, in interior wiring harness
- 639 Earth point, left A-pillar
- 810 Earth point on central tube for dash panel, centre left
- 875 Earth connection 12 in special vehicle wiring harness
- A19 Connection (58d), in dash panel wiring harness

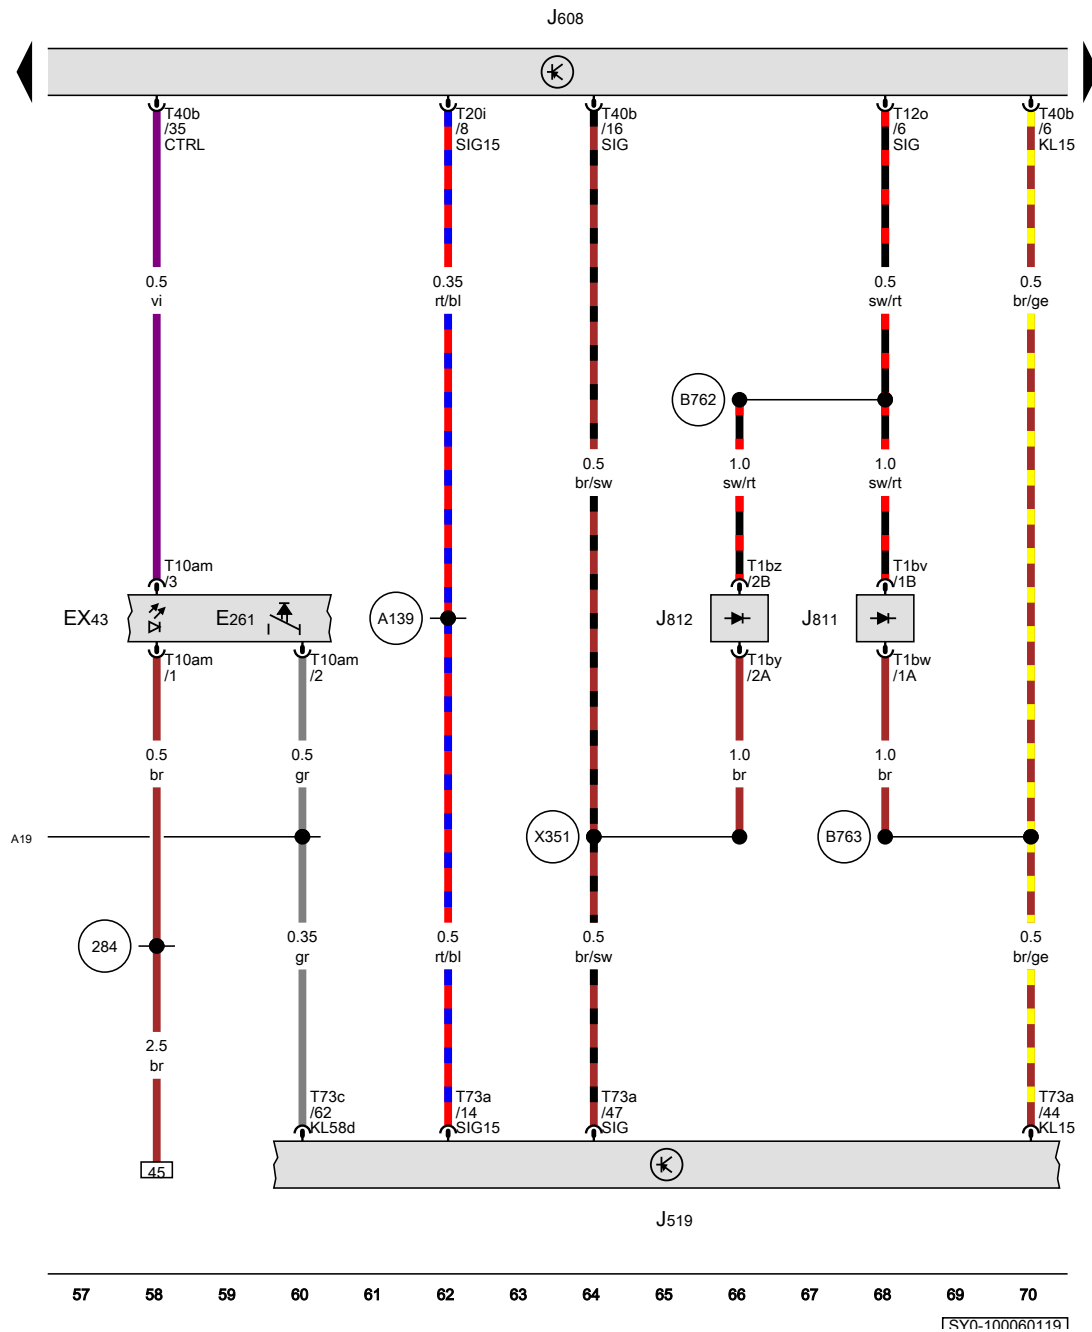

Switch module 1 in dash panel, next to steering wheel,
Special vehicle control unit, Blocking diode 2, Blocking
diode 3


- EX43 Switch module 1 in dash panel, next to steering wheel
- E261 Working speed control switch
- J519 Onboard supply control unit
- J608 Special vehicle control unit
- J811 Blocking diode 2, behind glove compartment
- J812 Blocking diode 3, behind glove compartment
- T1bv 1-pin connector, yellow
- T1bw 1-pin connector, yellow
- T1by 1-pin connector, yellow
- T1bz 1-pin connector, yellow
- T10am 10-pin connector, red
- T12o 12-pin connector, green
- T20i 20-pin connector, black
- T40b 40-pin connector, black
- T73a 73-pin connector, black
- T73c 73-pin connector, black
- 284 Earth connection 6, in interior wiring harness
- A19 Connection (58d), in dash panel wiring harness
- A139 Connection 3 (15) in dash panel wiring harness
- B762 Connection 1 (blocking diode), in interior wiring harness
- B763 Connection 2 (blocking diode), in interior wiring harness
- X351 Connection 1 (blocking diode) in special vehicle wiring harness

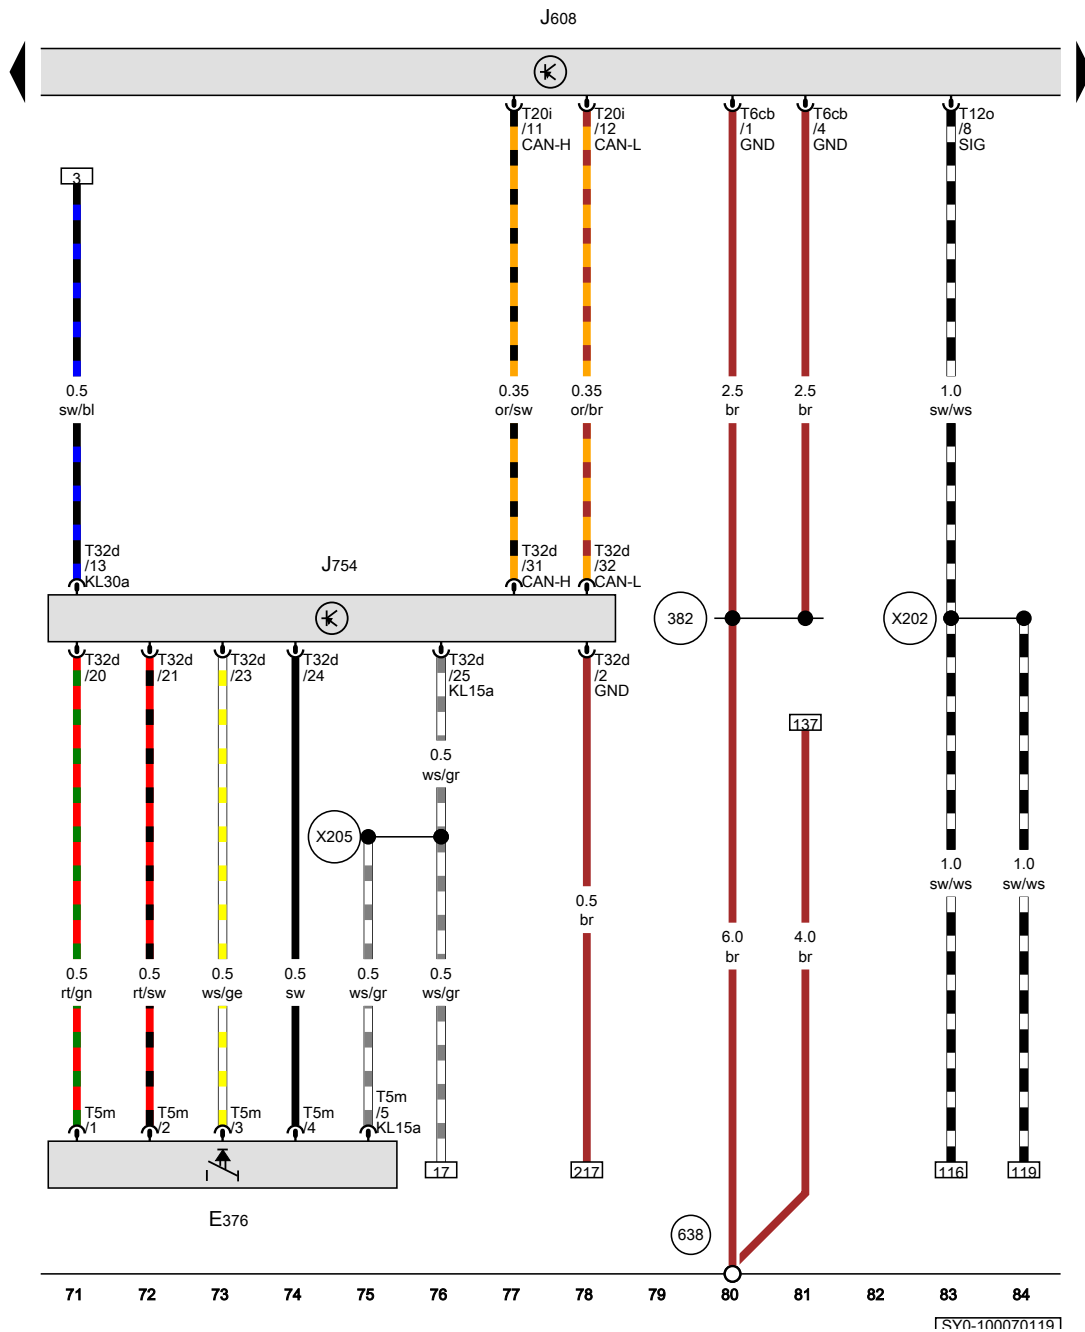

Accident data recorder button, Special vehicle control unit,
Accident data memory


- E376 Accident data recorder button
- J608 Special vehicle control unit
- J754 Accident data memory
- T5m 5-pin connector, black
- T6cb 6-pin connector, blue
- T12o 12-pin connector, green
- T20i 20-pin connector, black
- T32d 32-pin connector, black

- 382 Earth connection 17, in main wiring harness
- 638 Earth point, on right A-pillar
- X202 Connection 9, in optional equipment wiring harness
- X205 Connection 1 (15a), in special vehicle wiring harness

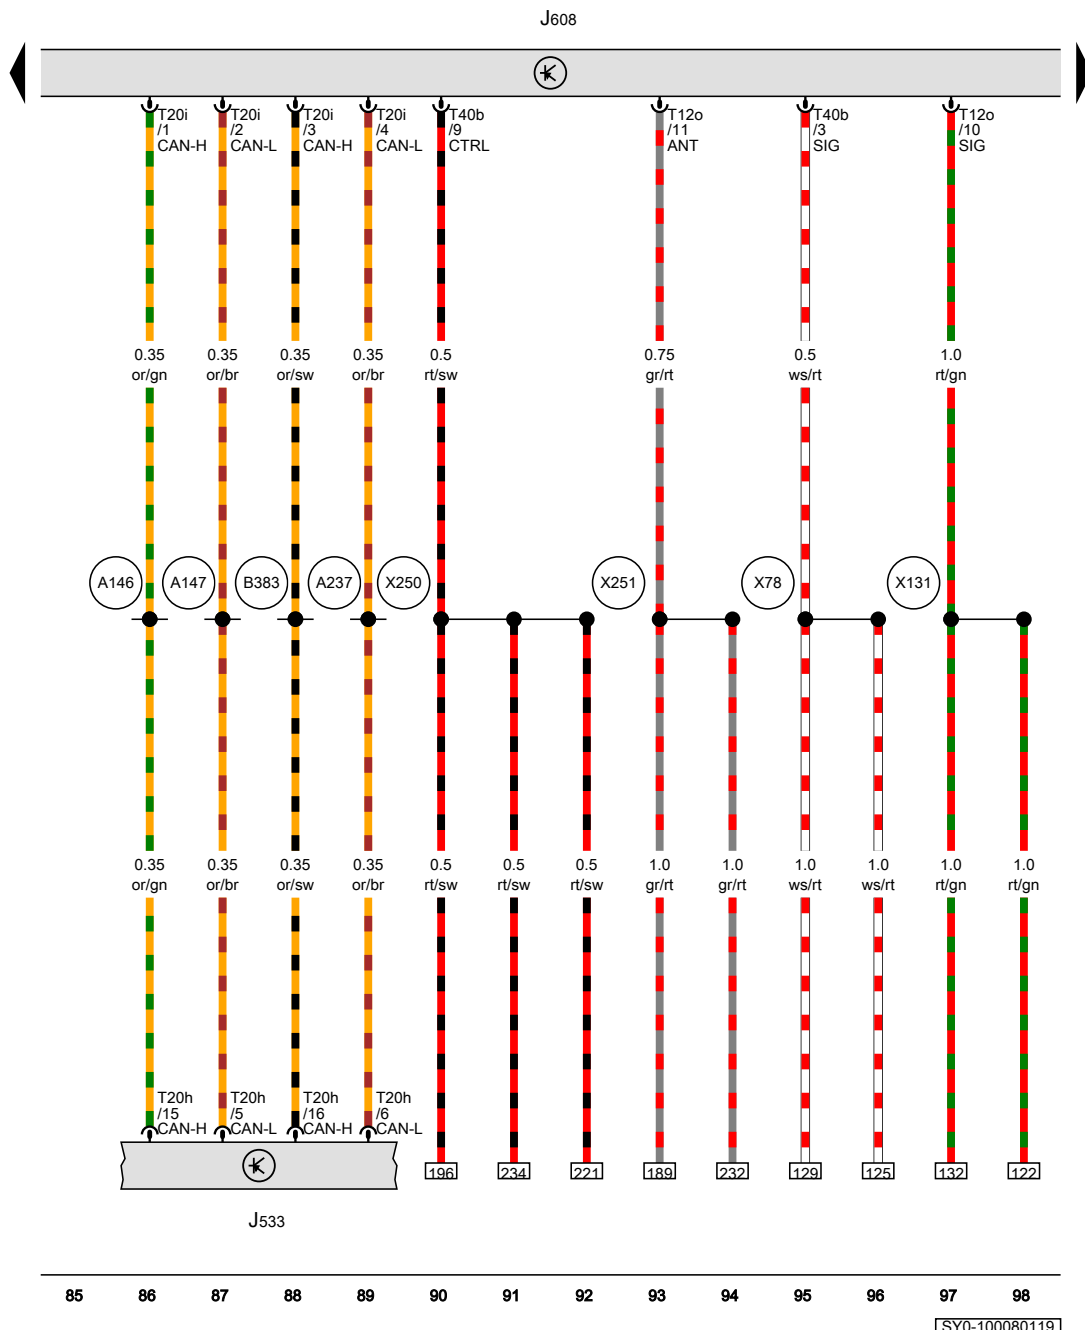

Data bus diagnostic interface, Special vehicle control unit

- J533 Data bus diagnostic interface
- J608 Special vehicle control unit
- T12o 12-pin connector, green
- T20h 20-pin connector, red
- T20i 20-pin connector, black
- T40b 40-pin connector, black
- A146 Connection (convenience CAN bus, high), in dash panel wiring harness
- A147 Connection (convenience CAN bus, low), in dash panel wiring harness
- A237 Connection 1 (powertrain CAN bus, low), in dash panel wiring harness
- B383 Connection 1 (powertrain CAN bus, high), in main wiring harness
- X78 Connection 1, in optional equipment wiring harness
- X131 Connection 4, in optional equipment wiring harness
- X250 Connection 6 in special vehicle wiring harness
- X251 Connection 7 in special vehicle wiring harness

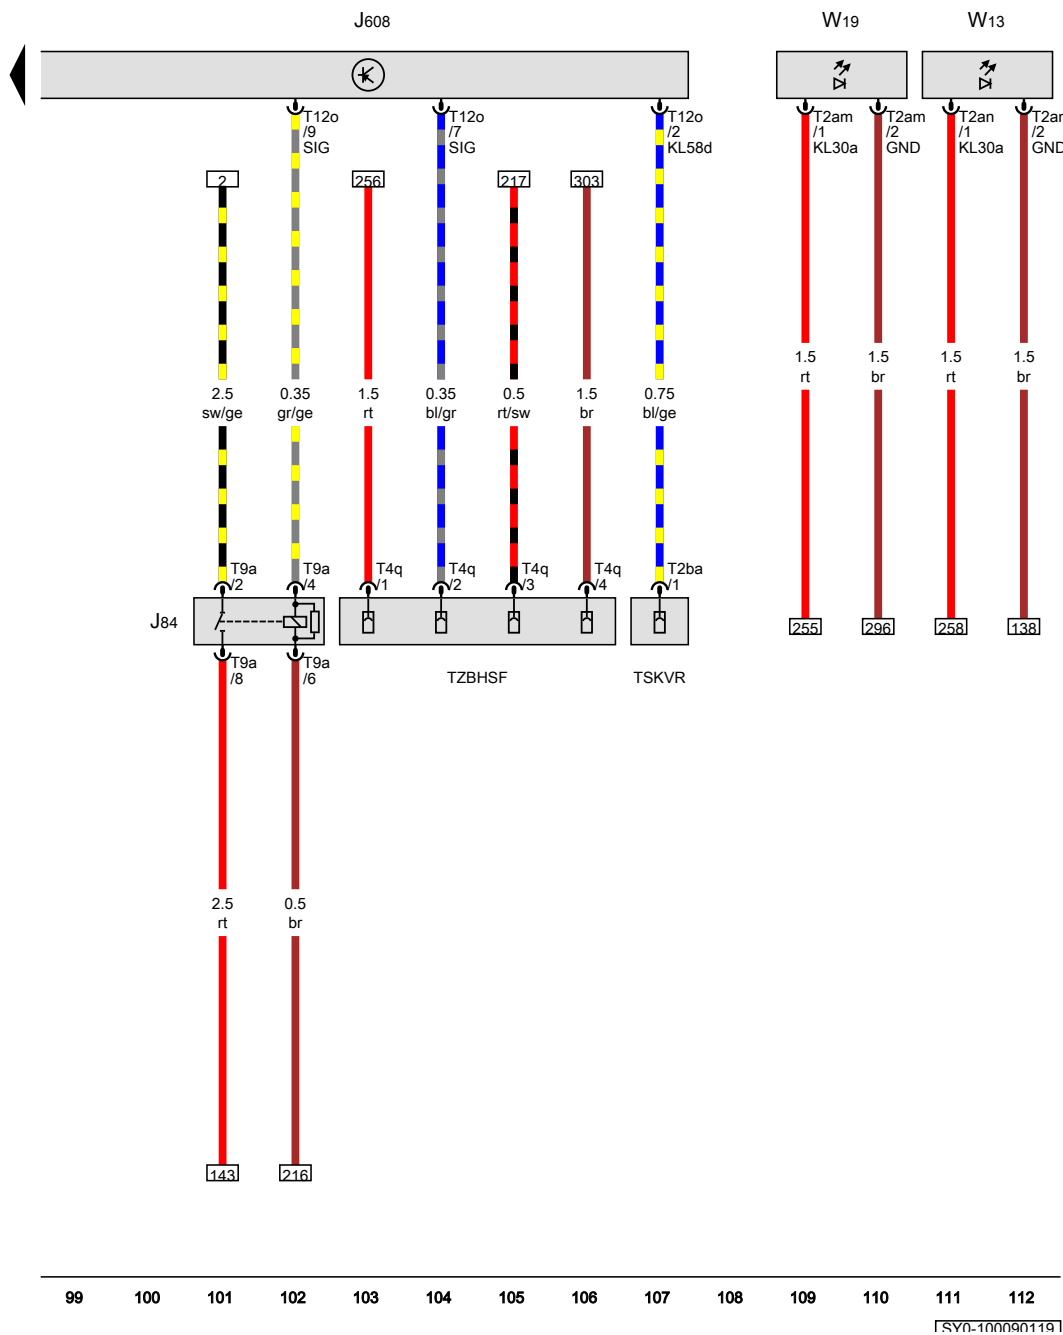


Two-way radio voltage relay, Special vehicle control unit,
Coupling point for rear additional lighting on special vehicle,
Front passenger reading light, Driver side reading light


- J84 Two-way radio voltage relay
- J608 Special vehicle control unit
- T2am 2-pin connector, black
- T2an 2-pin connector, black
- T2ba 2-pin connector, black
- T4q 4-pin connector, black
- T9a 9-pin connector, black
- T12o 12-pin connector, green
- TSKVR Coupling point in right seat box
- TZBHSF Coupling point for rear additional lighting on special vehicle, near left D-pillar
- W13 Front passenger reading light, near A-pillar
- W19 Driver side reading light, near left A-pillar

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink

Rear interior light, Rear left interior light, Folding table light, Folding table light 2

- T3d 3-pin connector, black
 T3e 3-pin connector, black
 T3f 3-pin connector, black
 T3g 3-pin connector, black
 W43 Rear interior light, middle
 W47 Rear left interior light, near left C-pillar
 W60 Folding table light, near left B-pillar
 W106 Folding table light 2, near left C-pillar
- 873 Earth connection 10 in special vehicle wiring harness
- X224 Positive connection 5 (30a) in special vehicle wiring harness

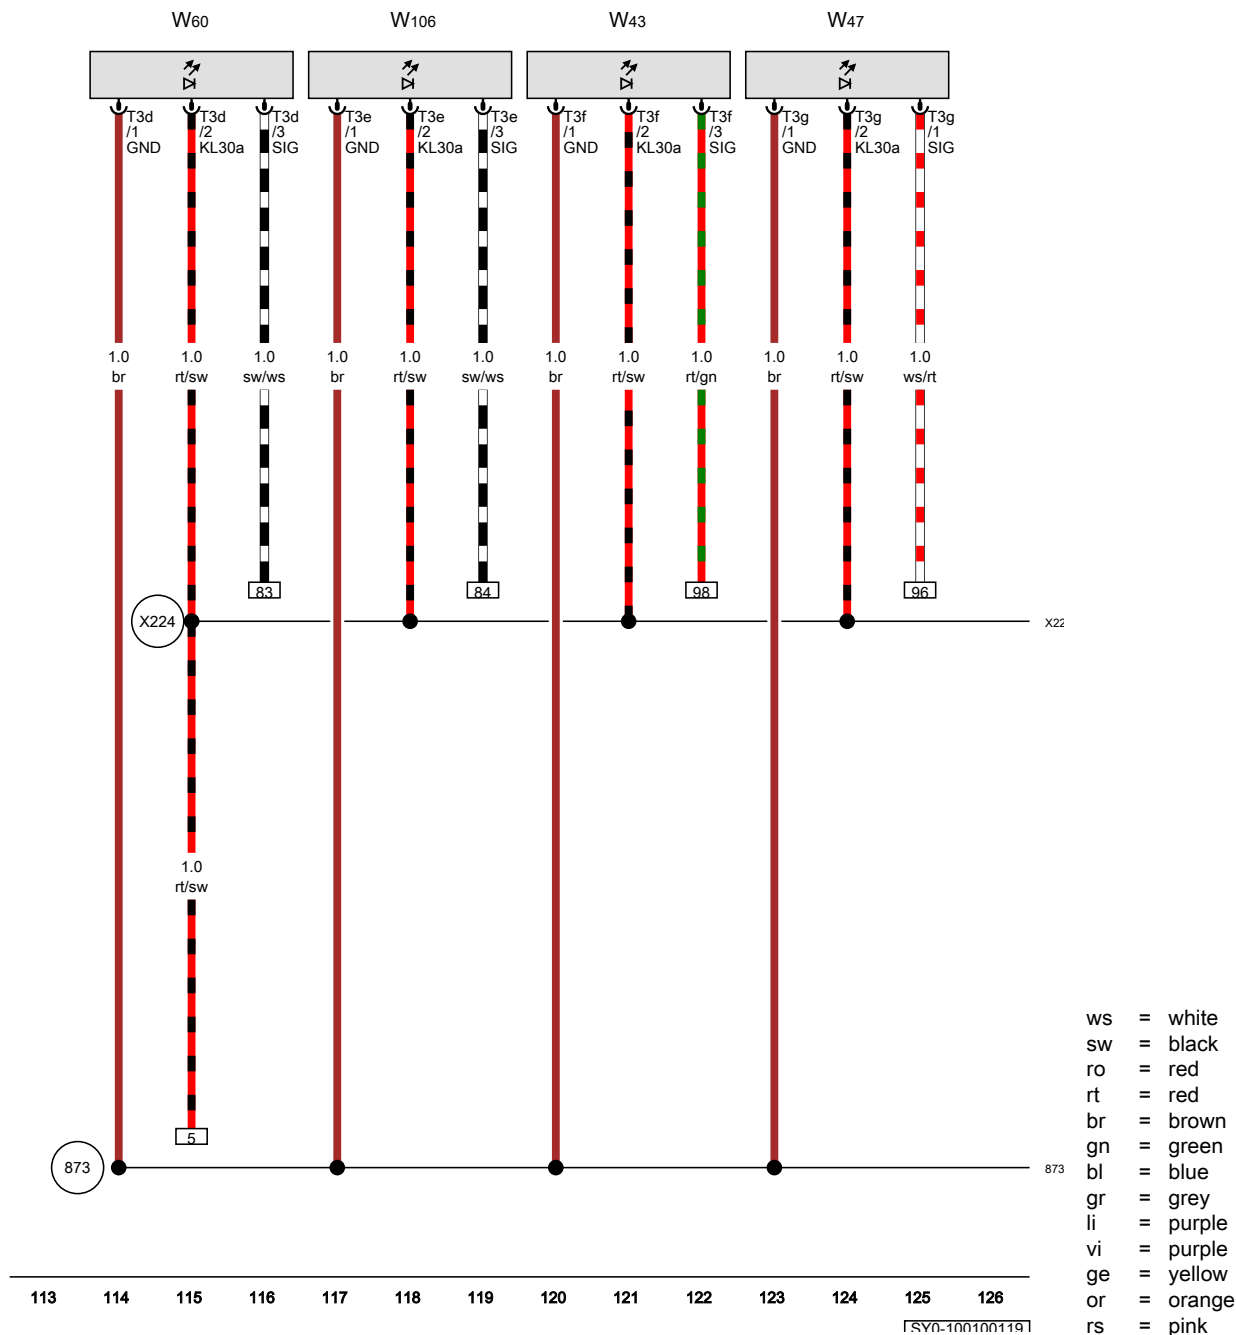

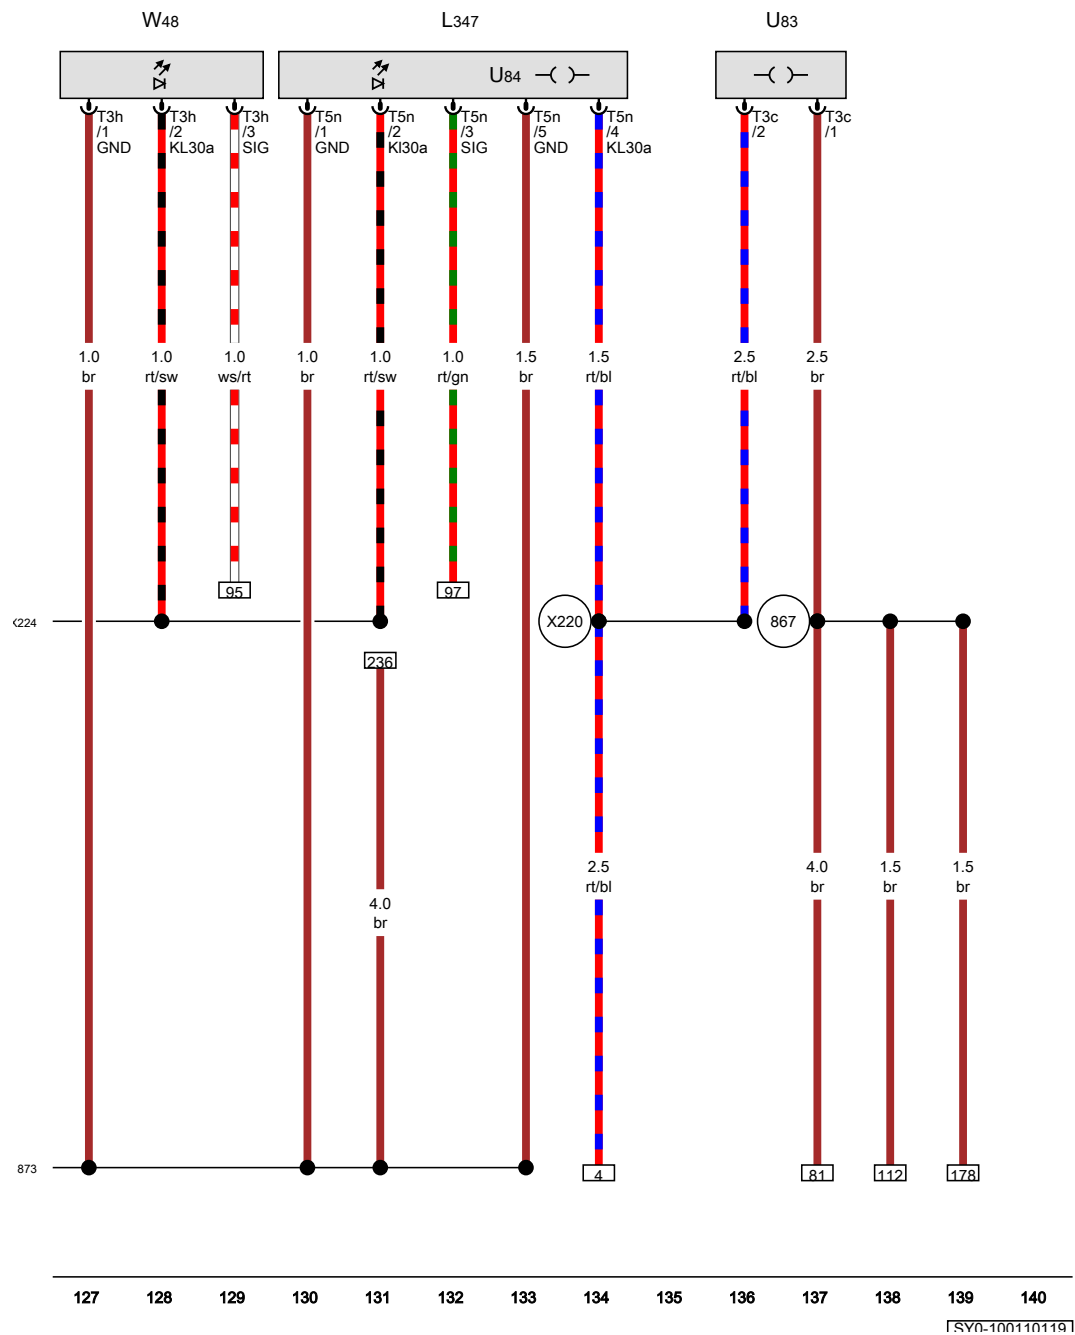


LED module for additional reading light, special vehicles, 12 V socket for special vehicles, 12 V socket 2 for special vehicles, Rear right interior light


- L347 LED module for additional reading light, special vehicles, in right D-pillar
- T3c 3-pin connector, colourless
- T3h 3-pin connector, black
- T5n 5-pin connector, black
- U83 12 V socket for special vehicles, on right in dash panel
- U84 12 V socket 2 for special vehicles
- W48 Rear right interior light, near right C-pillar
- 867 Earth connection 4 in special vehicle wiring harness
- 873 Earth connection 10 in special vehicle wiring harness
- X220 Positive connection 1 (30a) in special vehicle wiring harness
- X224 Positive connection 5 (30a) in special vehicle wiring harness

2-way radio unit microphone, Coupling point for two-way radio in special vehicle, Coupling point 2 for two-way radio in special vehicle

- R122 2-way radio unit microphone
- T2ag 2-pin connector, black
- T6i 6-pin connector, black
- T10ba 10-pin connector, black
- TFGSF Coupling point for two-way radio in special vehicle, under front passenger seat
- TFGSF2 Coupling point 2 for two-way radio in special vehicle, under front passenger seat

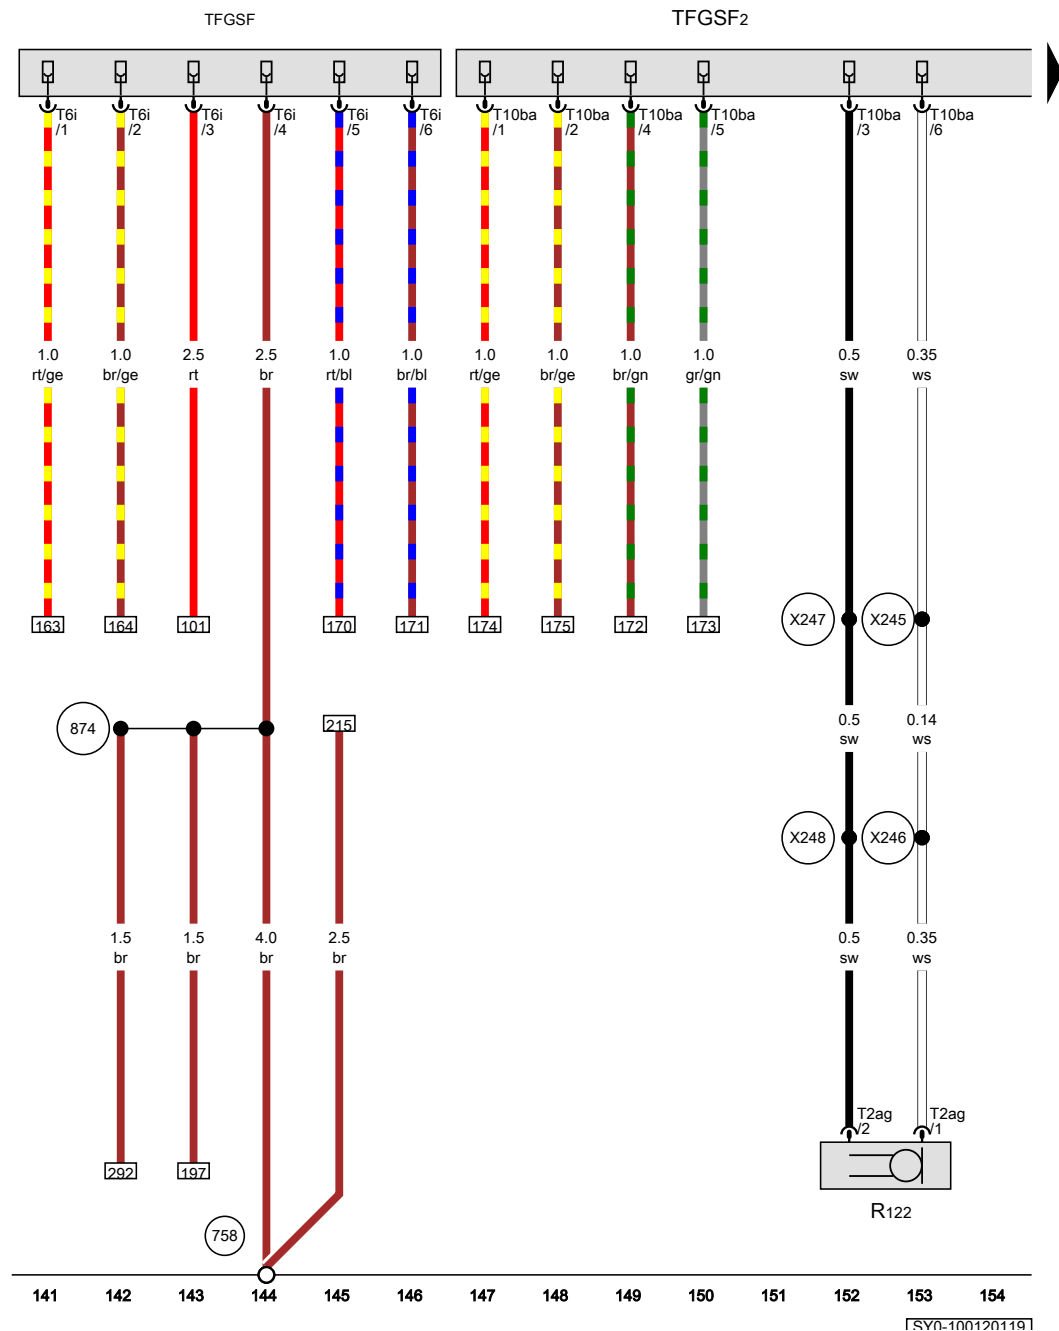


- 758 Earth point 3, on centre tunnel
- 874 Earth connection 11 in special vehicle wiring harness
- X245 Connection 1 in special vehicle wiring harness
- X246 Connection 2 in special vehicle wiring harness
- X247 Connection 3 in special vehicle wiring harness
- X248 Connection 4 in special vehicle wiring harness

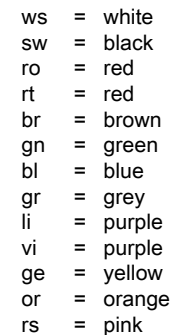


R25	Two-way radio loudspeaker, front
R261	Two-way radio loudspeaker 2, middle
R262	Two-way radio loudspeaker 3, rear
T2as	2-pin connector, black
T2at	2-pin connector, black
T2au	2-pin connector, black
T4s	4-pin connector, black
T4t	4-pin connector, black
T10ba	10-pin connector, black
TFGSF2	Coupling point 2 for two-way radio in special vehicle, under front passenger seat
TS13	Coupling point for radio loudspeaker in special vehicle, behind glove compartment
*	Loudspeaker connection for two-way radio in 4-metre band

Alarm rotary and pull switch, Two-way radio loudspeaker 4, Two-way radio loudspeaker 5, Two-way radio loudspeaker 6, Coupling point in left seat box

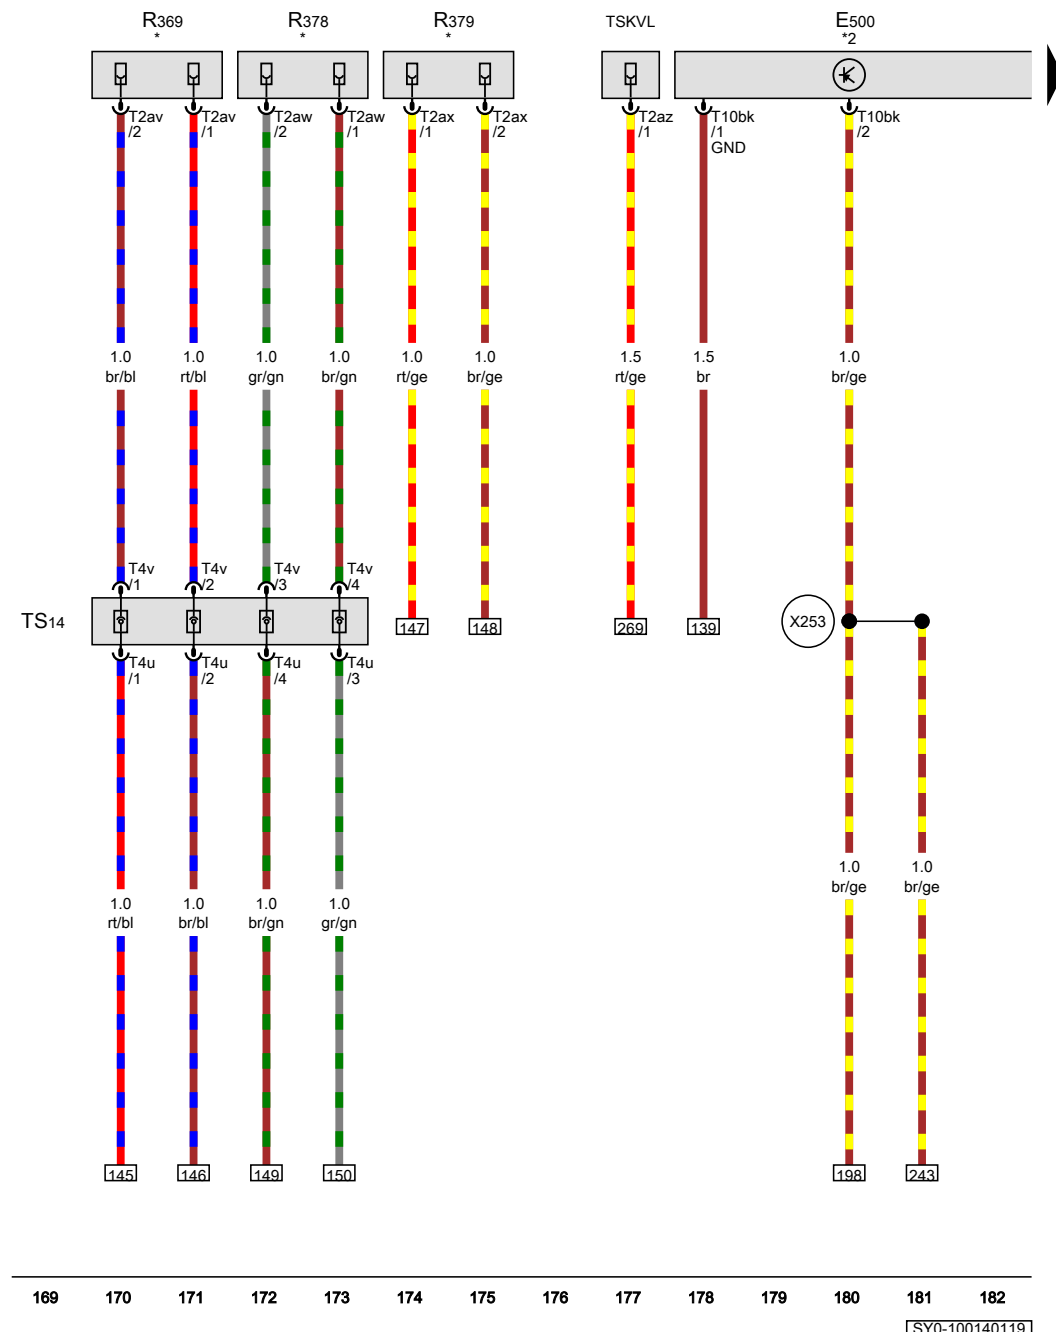

- E500 Alarm rotary and pull switch, in centre of dash panel
R369 Two-way radio loudspeaker 4, front
R378 Two-way radio loudspeaker 5, middle
R379 Two-way radio loudspeaker 6, rear
T2av 2-pin connector, black
T2aw 2-pin connector, black
T2ax 2-pin connector, black
T2az 2-pin connector, black
T4u 4-pin connector, black
T4v 4-pin connector, black
T10bk 10-pin connector, black
TS14 Coupling point for radio loudspeaker 2 in special vehicle, behind glove compartment
TSKVL Coupling point in left seat box
X253 Connection 9 in special vehicle wiring harness
* Loudspeaker connection for two-way radio in 2-metre band
*2 Connection for alarm rotary/pull switch

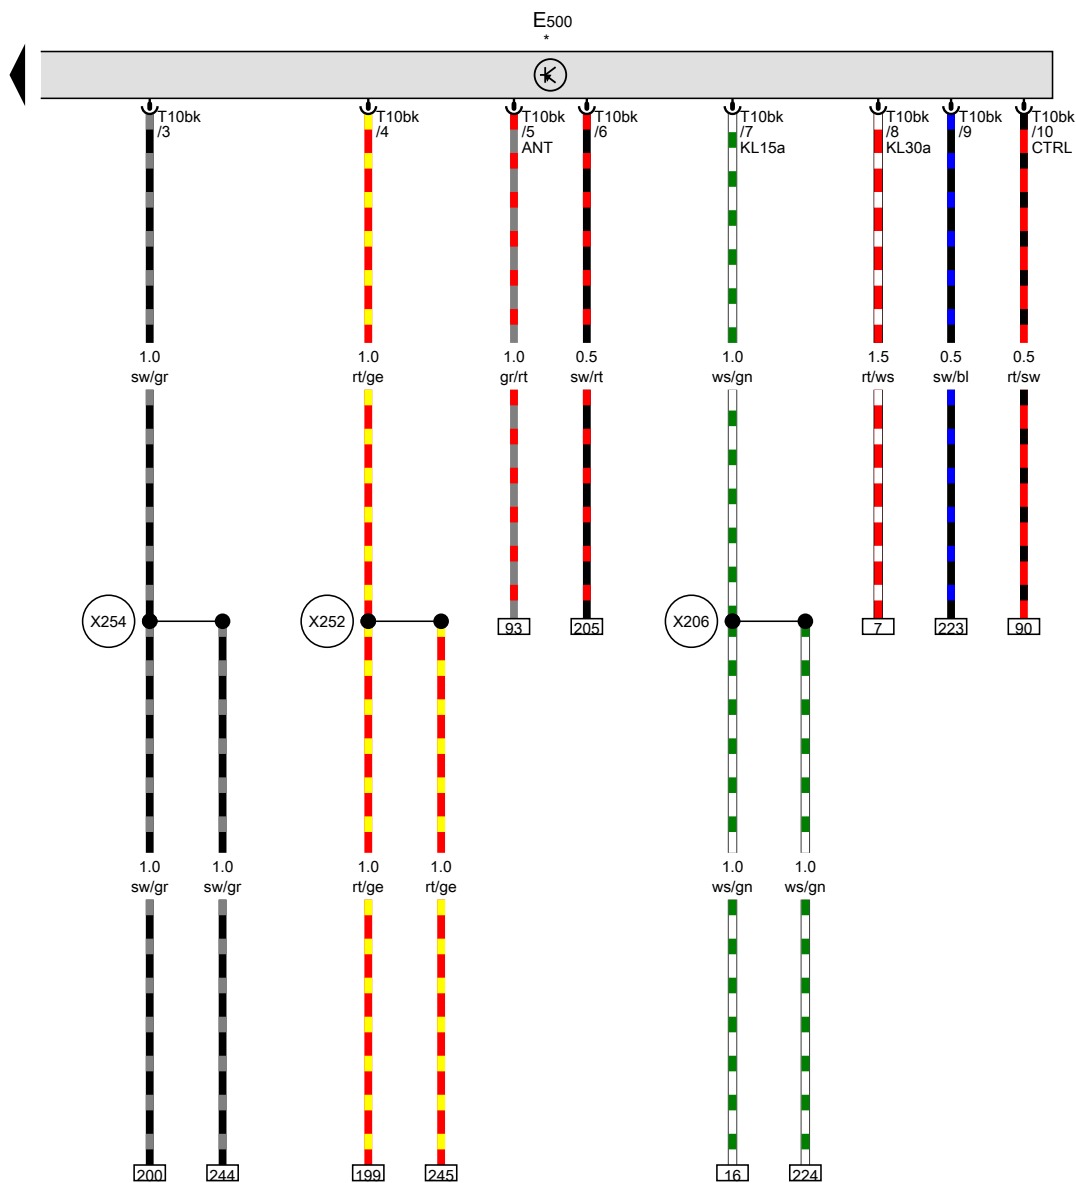

[SYN-100150119]

Alarm rotary and pull switch

E500 Alarm rotary and pull switch, in centre of dash panel
T10bk 10-pin connector, black

X206 Connection 2 (15a), in special vehicle wiring harness

X252 Connection 8 in special vehicle wiring harness


X254 Connection 10 in special vehicle wiring harness

* Connection for alarm rotary/pull switch

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink


Coupling point for special vehicles, Coupling point 2 for special vehicles


- T10bm 10-pin connector, black
 T10bs 10-pin connector, blue
 TSF1 Coupling point for special vehicles, under driver seat
 TSF2 Coupling point 2 for special vehicles, on upper section of right B-pillar
 X225 Positive connection 6 (30a) in special vehicle wiring harness

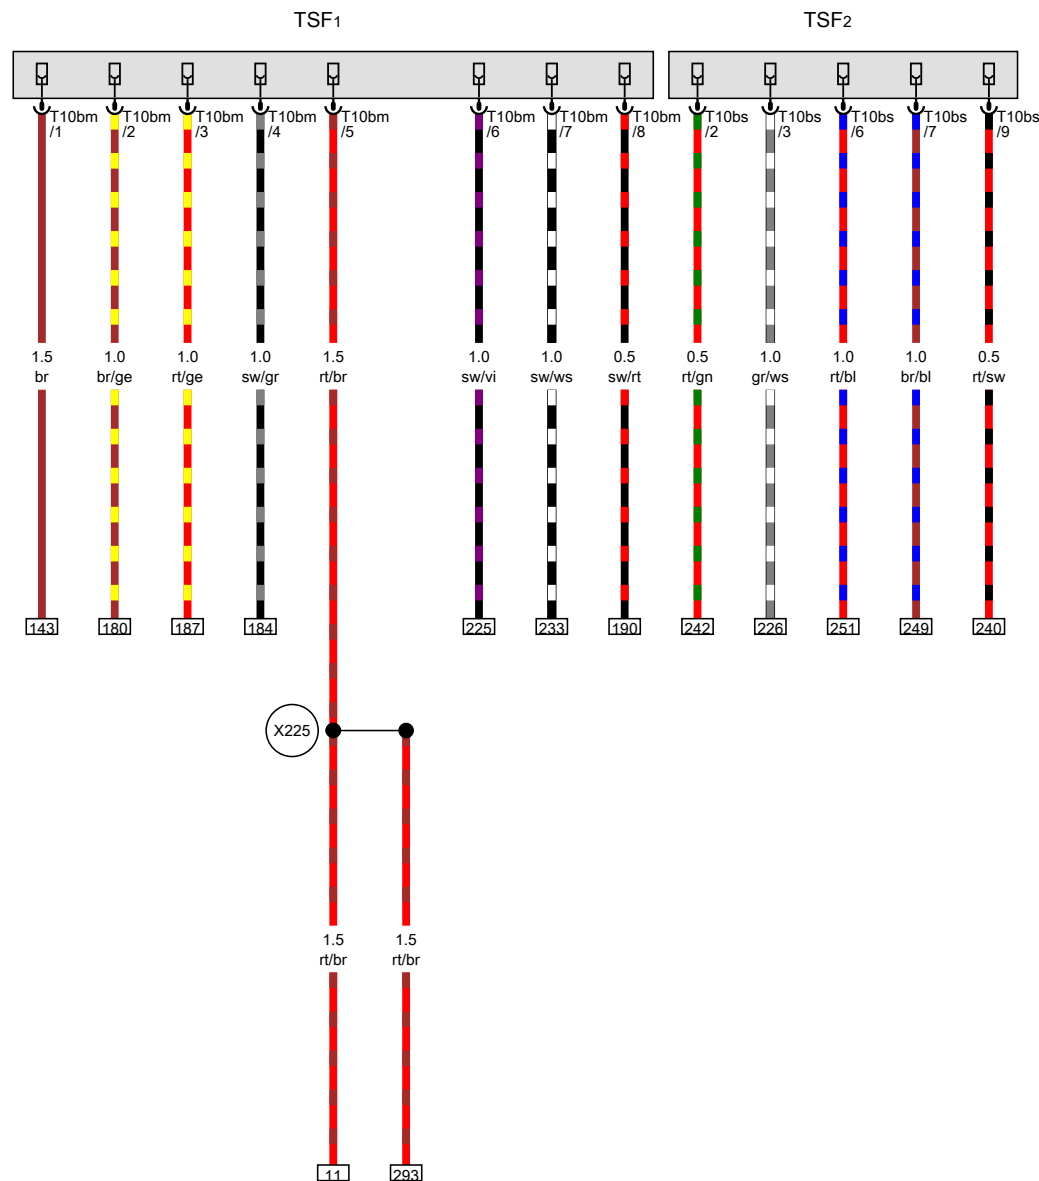

Rotating light relay, Relay for additional electrical equipment for special signal system, Rear right rotating light bulb, Coupling point 3 for special vehicles, Coupling point 2 on right B-pillar for special vehicles

- J326 Rotating light relay
- J1244 Relay for additional electrical equipment for special signal system
- L272 Rear right rotating light bulb, behind left D-pillar trim
- SR7 Relay and fuse carrier 7
- T3k 3-pin connector, black
- T10bt 10-pin connector, blue
- T12y 12-pin connector, black
- TSF3 Coupling point 3 for special vehicles, on upper section of right B-pillar
- TS24 Coupling point 2 on right B-pillar for special vehicles
- 869 Earth connection 6 in special vehicle wiring harness

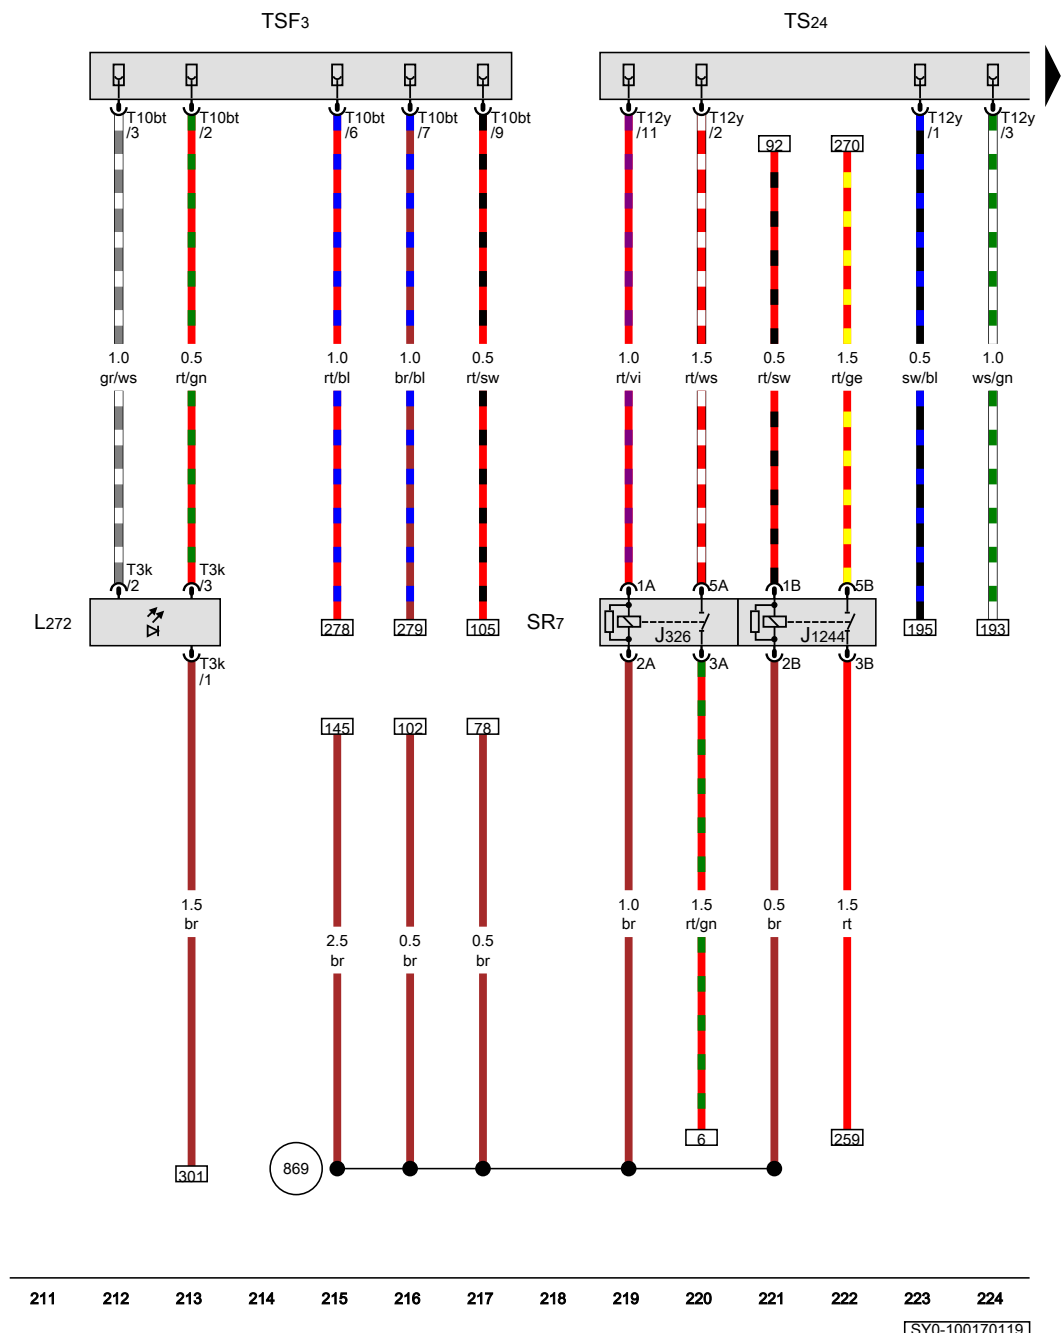

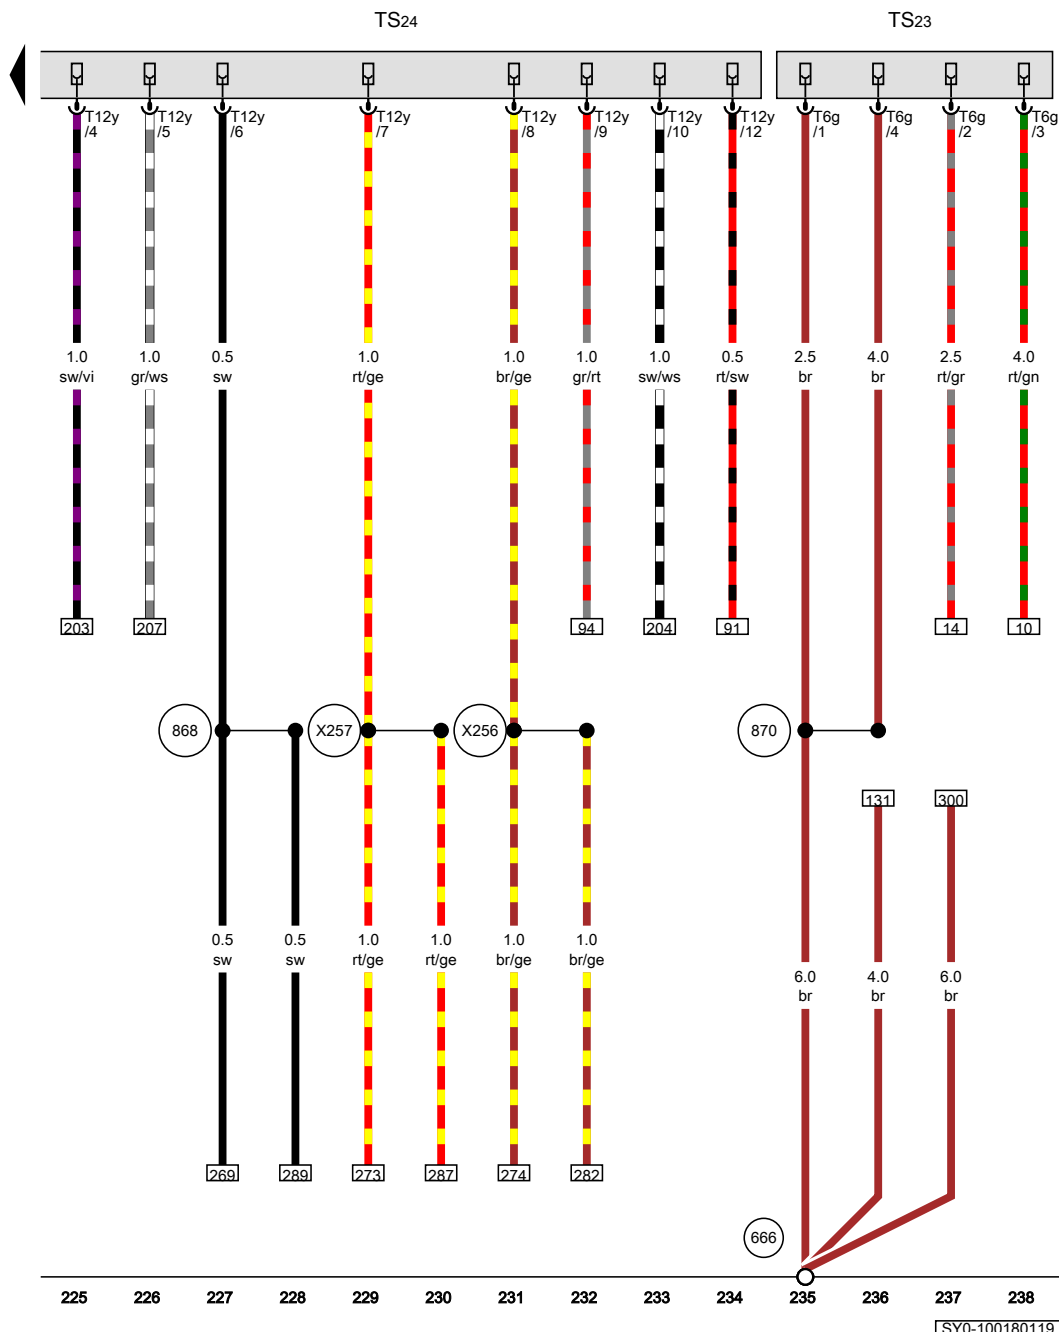


Coupling point on right B-pillar for special vehicles, Coupling point 2 on right B-pillar for special vehicles

- T6g 6-pin connector, black
- T12y 12-pin connector, black
- TS23 Coupling point on right B-pillar for special vehicles
- TS24 Coupling point 2 on right B-pillar for special vehicles
- 666 Earth point, on rear right of roof
- 868 Earth connection 5 in special vehicle wiring harness
- 870 Earth connection 7 in special vehicle wiring harness
- X256 Connection 12 in special vehicle wiring harness
- X257 Connection 13 in special vehicle wiring harness

Coupling point 3 on right B-pillar for special vehicles

- T12g 12-pin connector, black
 TS25 Coupling point 3 on right B-pillar for special vehicles
 X258 Connection 14 in special vehicle wiring harness
 X259 Connection 15 in special vehicle wiring harness
 X262 Connection 18 in special vehicle wiring harness
 X263 Connection 19 in special vehicle wiring harness

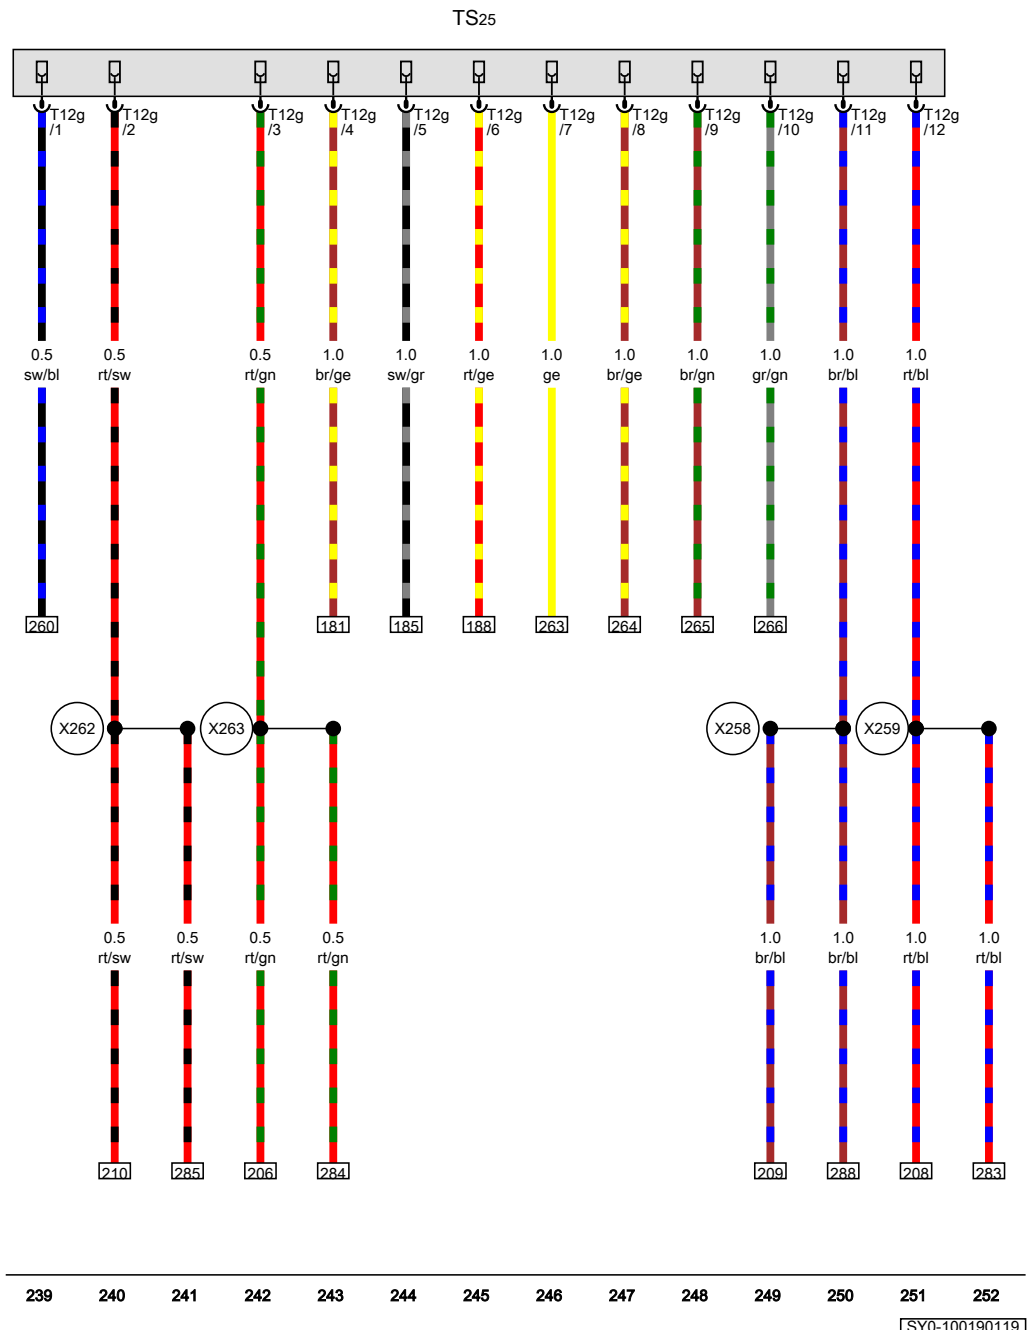



Coupling point for front flashing lights in special vehicle

T8o 8-pin connector, black

TBLSFV Coupling point for front flashing lights in special vehicle, near left headlight

- (179) Earth connection, in left headlight wiring harness
- (655) Earth point, on left headlight
- (X221) Positive connection 2 (30a) in special vehicle wiring harness
- (X255) Connection 11 in special vehicle wiring harness

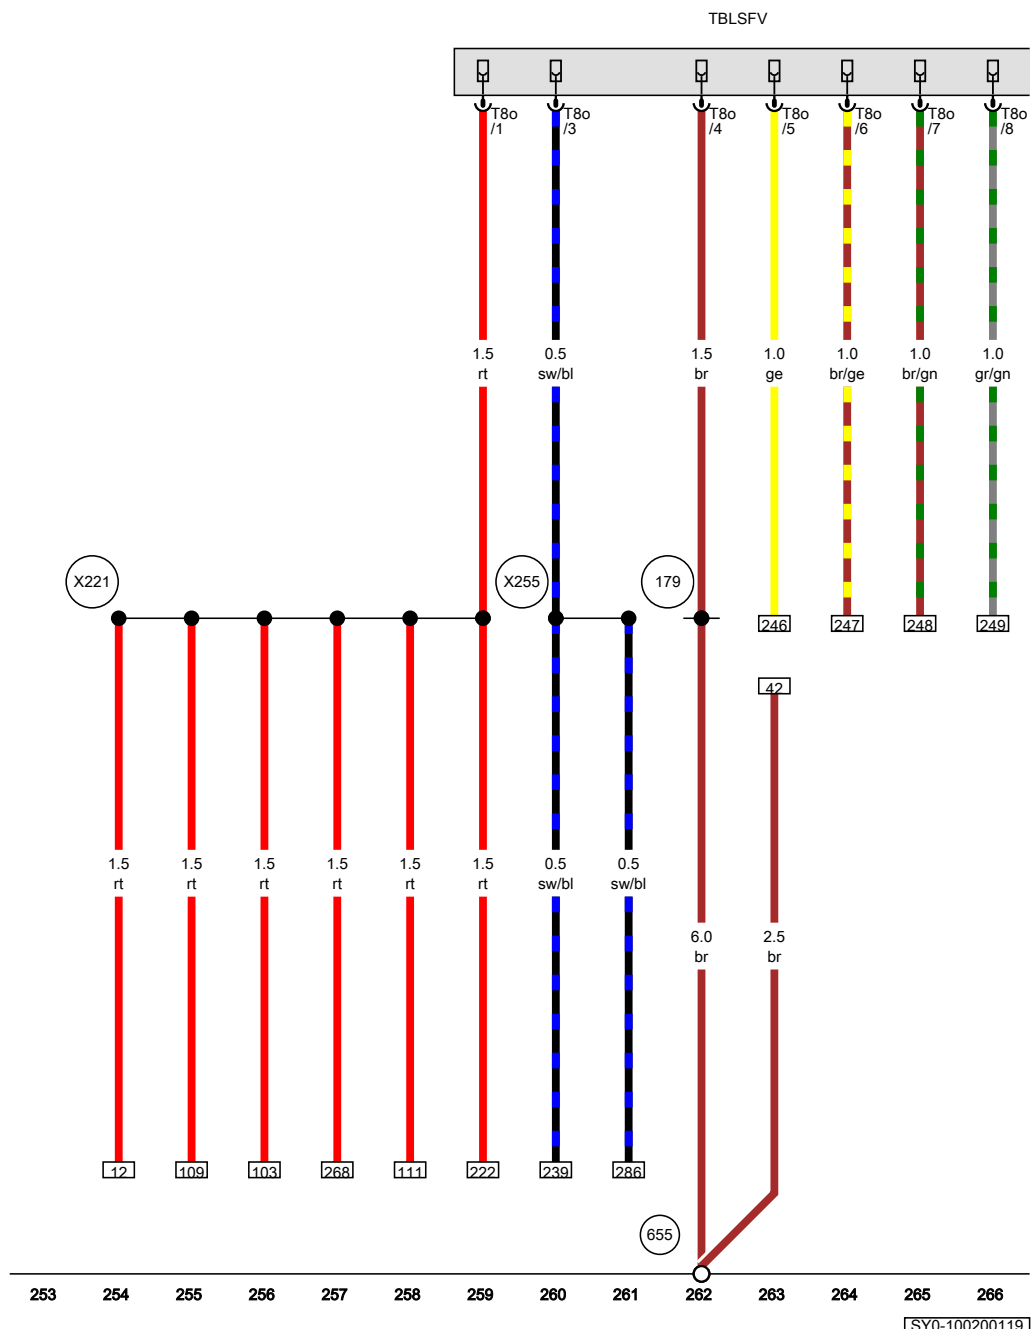


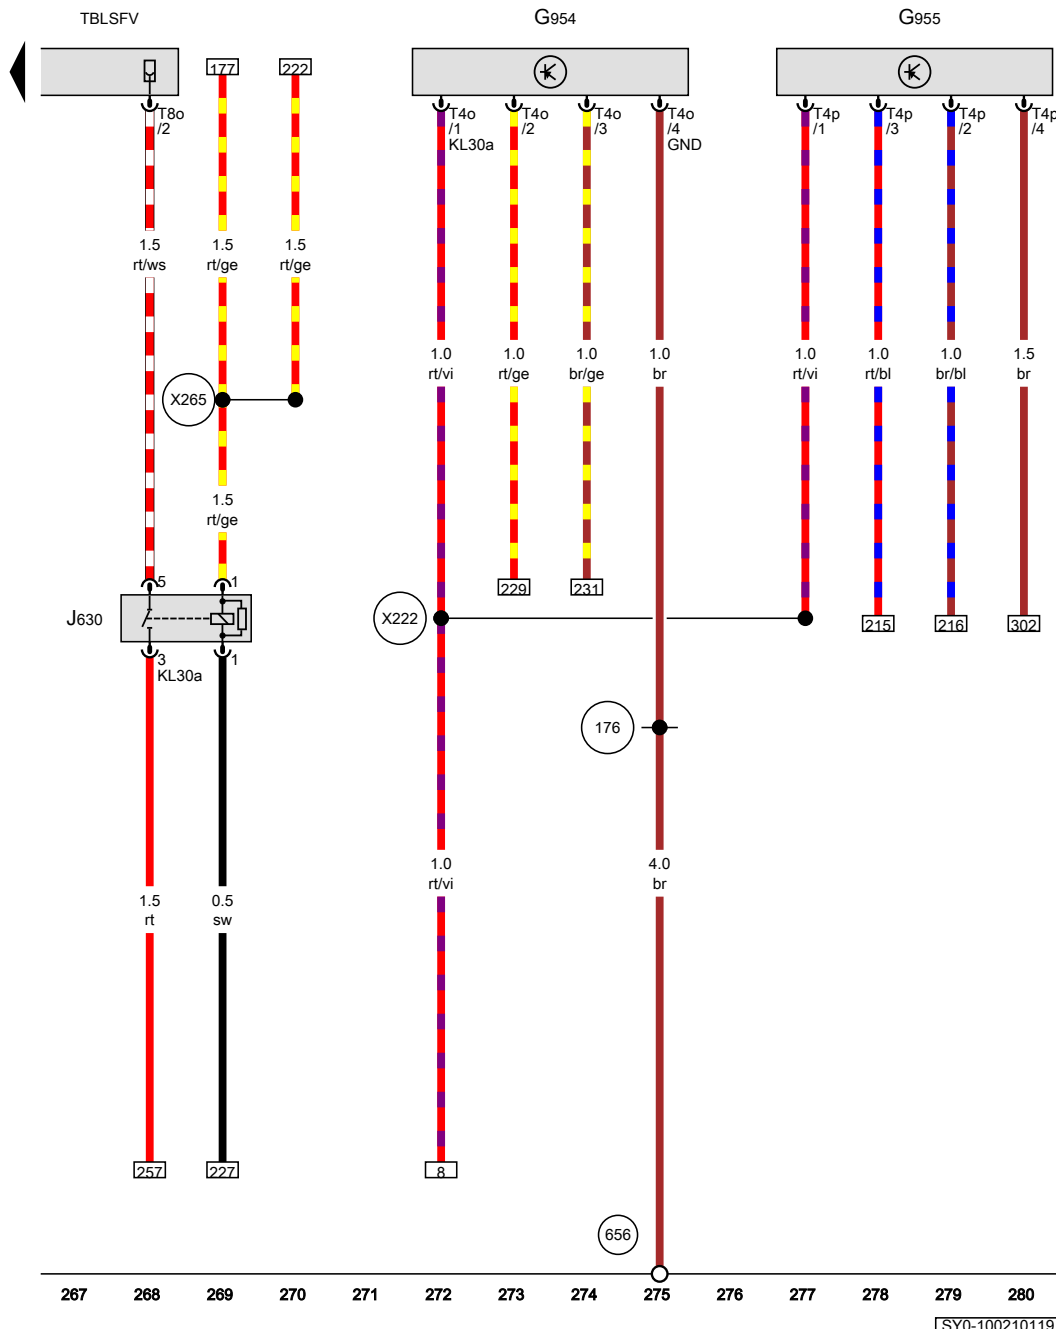

Front stop command light, Rear stop command light, Flashing lights relay, Coupling point for front flashing lights in special vehicle

- G954 Front stop command light, in middle of engine compartment
- G955 Rear stop command light, behind left D-pillar trim
- J630 Flashing lights relay
- T4o 4-pin connector, black
- T4p 4-pin connector, black
- T8o 8-pin connector, black
- TBLSFV Coupling point for front flashing lights in special vehicle, near left headlight

- 176 Earth connection, in right headlight wiring harness
- 656 Earth point, on right headlight
- X222 Positive connection 3 (30a) in special vehicle wiring harness
- X265 Connection 12, in optional equipment wiring harness

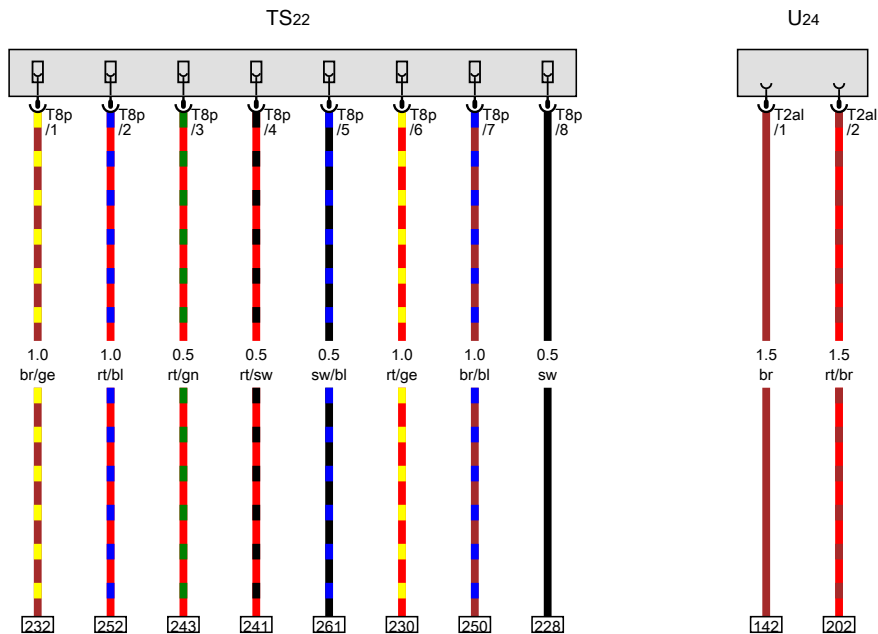

Coupling point for warning/indicator lamps in special vehicle, Charging station for hand-held 2-way radio


- T2al 2-pin connector, black
- T8p 8-pin connector, black
- TS22 Coupling point for warning/indicator lamps in special vehicle, in centre of dash panel
- U24 Charging station for hand-held 2-way radio, in front passenger seat storage compartment

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

12 V socket 3 for special vehicles, 12 V socket 4 for special vehicles

- T3i 3-pin connector, colourless
- T3j 3-pin connector, colourless
- U85 12 V socket 3 for special vehicles, near folding table
- U86 12 V socket 4 for special vehicles, near left D-pillar

- 286 Earth connection 8, in interior wiring harness
- 864 Earth connection 1 in special vehicle wiring harness
- X249 Connection 5 in special vehicle wiring harness

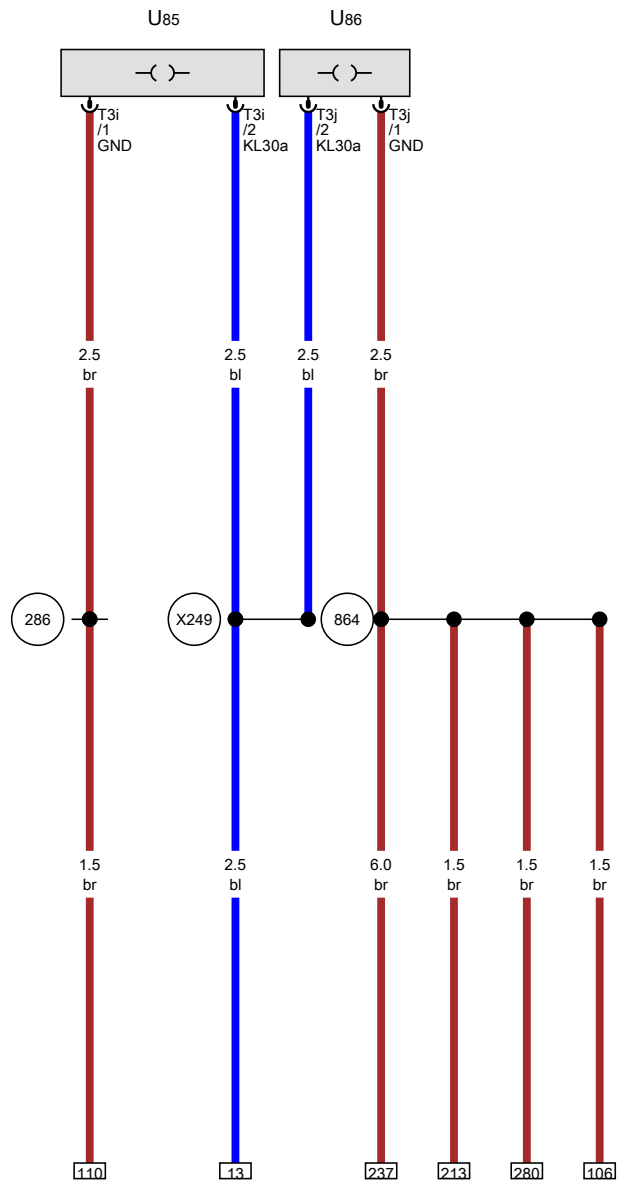


295 296 297 298 299 300 301 302 303 304 305 306 307 308
[SYN-100230119]

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink

Preparation for load compartment lighting , (5GB),(9CJ),(9CX)

From May 2017

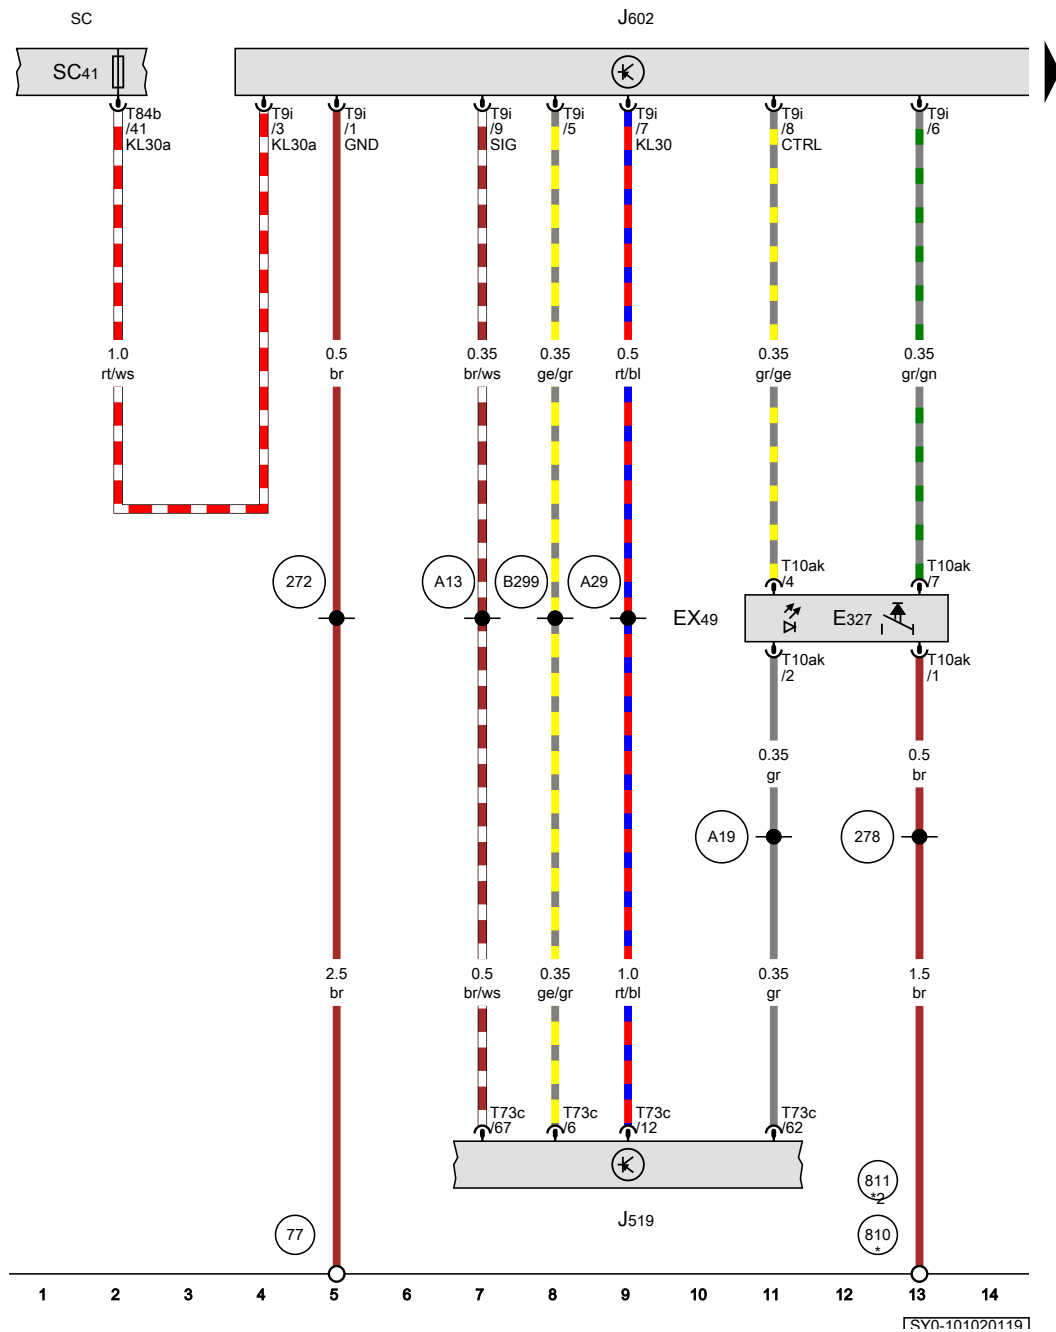


ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

Rear interior light button, Onboard supply control unit,
 Interior light relay, Fuse holder C

- EX49 Centre switch module 4 in dash panel
- E327 Rear interior light button
- J519 Onboard supply control unit
- J602 Interior light relay
- SC Fuse holder C
- SC41 Fuse 41 on fuse holder C
- T9i 9-pin connector, grey
- T10ak 10-pin connector, black
- T73c 73-pin connector, black
- T84b 84-pin connector, black

- 77 Earth point, lower part of left B-pillar
- 272 Earth connection 4, in front wiring harness
- 278 Earth connection 4, in interior wiring harness
- 810 Earth point on central tube for dash panel, centre left
- 811 Earth point on central tube for dash panel, centre right
- A13 Connection (door contact switch), in dash panel wiring harness
- A19 Connection (58d), in dash panel wiring harness
- A29 Connection (interior light), in dash panel wiring harness
- B299 Positive connection 3 (30), in main wiring harness

- * For left-hand drive models
- *2 For right-hand drive models

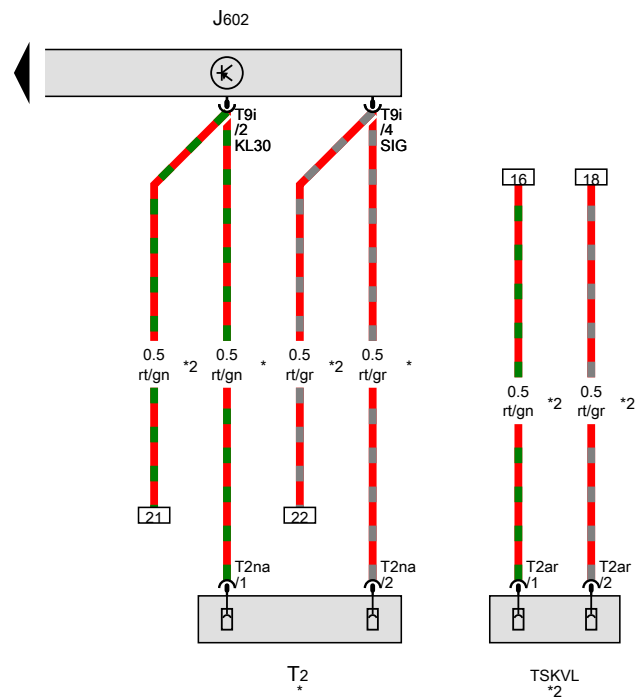

Interior light relay, 2-pin connector, Coupling point in left seat box


- J602 Interior light relay
- T2 2-pin connector, on longitudinal member
- T2ar 2-pin connector, black
- T2na 2-pin connector, black
- T9i 9-pin connector, grey
- TSKVL Coupling point in left seat box
- * For models with double cab/dropside
- *2 For panel van and Kombi models

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

Basic equipment


From November 2018

Battery, Starter relay 1, Starter relay 2, Fuse holder B

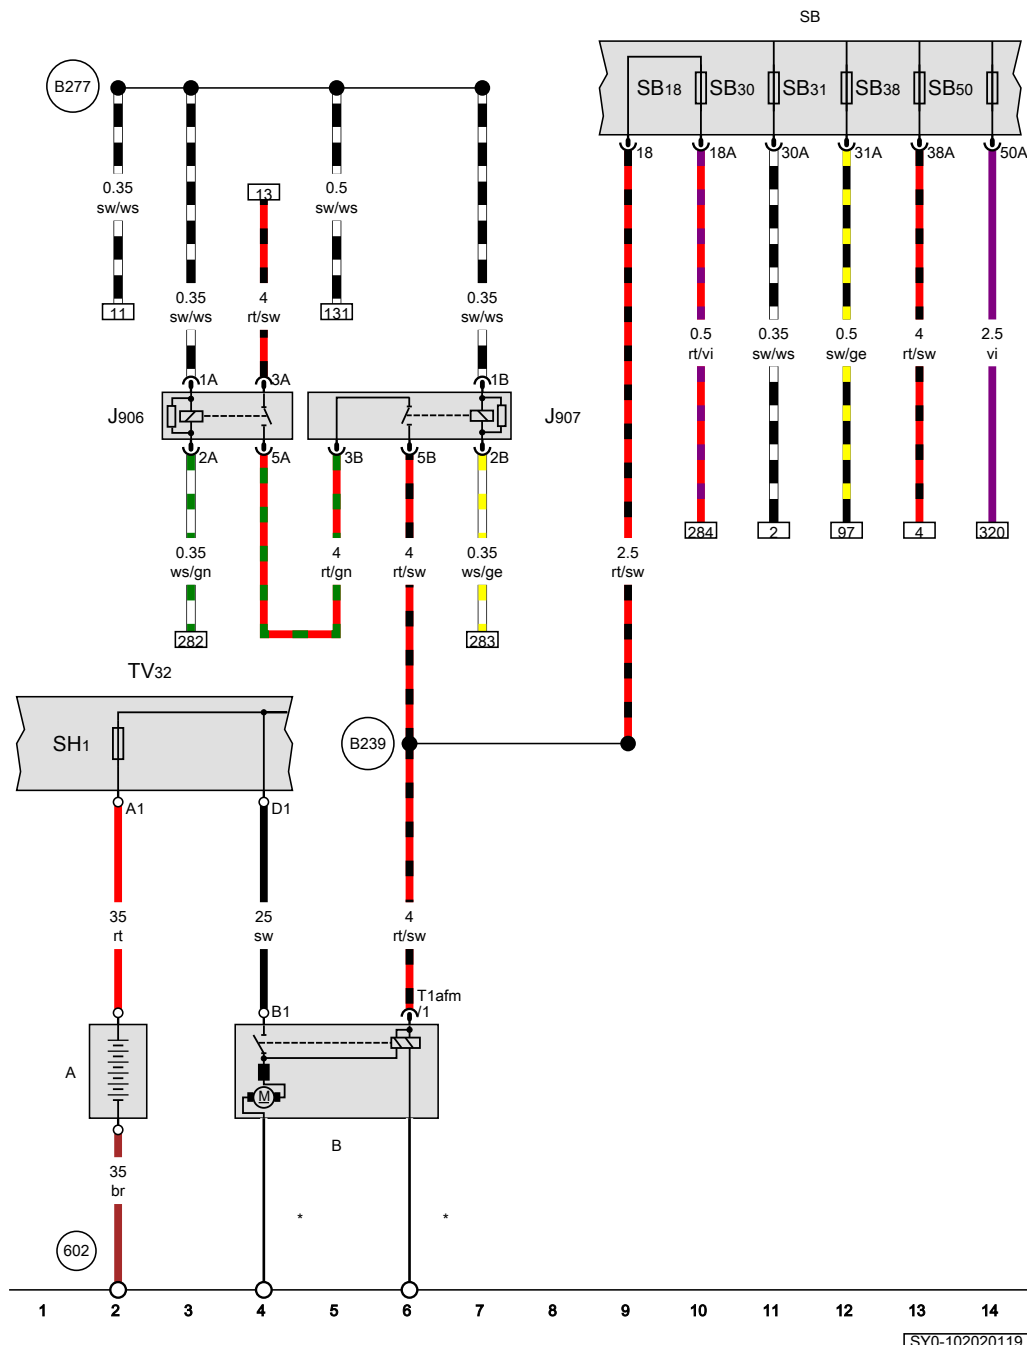

- A Battery
- B Starter
- J906 Starter relay 1
- J907 Starter relay 2
- SB Fuse holder B
- SH1 Fuse 1 in fuse holder H
- SB18 Fuse 18 on fuse holder B
- SB30 Fuse 30 on fuse holder B
- SB31 Fuse 31 on fuse holder B
- SB38 Fuse 38 on fuse holder B
- SB50 Fuse 50 on fuse holder B
- T1afm 1-pin connector, black
- TV32 Jump start connection
- 602 Earth point, in front left footwell
- B239 Positive connection 1 (50), in interior wiring harness
- B277 Positive connection 1 (15a) in main wiring harness
- * Earth supply via housing

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

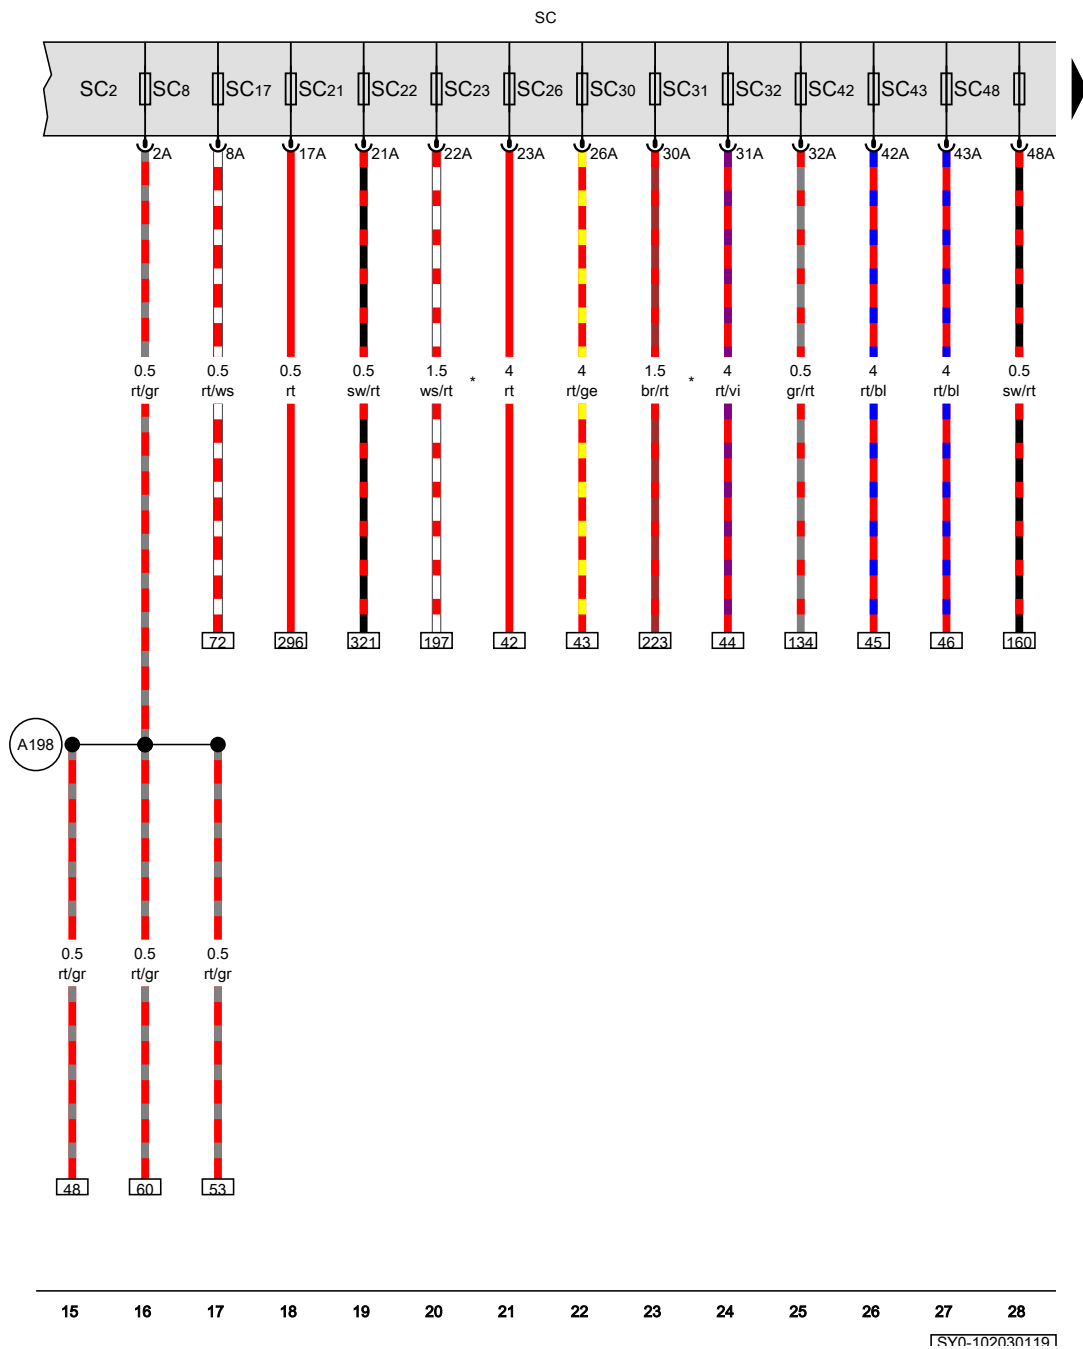


Fuse holder C

- SC Fuse holder C
- SC2 Fuse 2 on fuse holder C
- SC8 Fuse 8 on fuse holder C
- SC17 Fuse 17 on fuse holder C
- SC21 Fuse 21 on fuse holder C
- SC22 Fuse 22 on fuse holder C
- SC23 Fuse 23 on fuse holder C
- SC26 Fuse 26 on fuse holder C
- SC30 Fuse 30 on fuse holder C
- SC31 Fuse 31 on fuse holder C
- SC32 Fuse 32 on fuse holder C
- SC42 Fuse 42 on fuse holder C
- SC43 Fuse 43 on fuse holder C
- SC48 Fuse 48 on fuse holder C

A198 Positive connection 6 (30a) in dash panel wiring harness


* For panel van and Kombi models

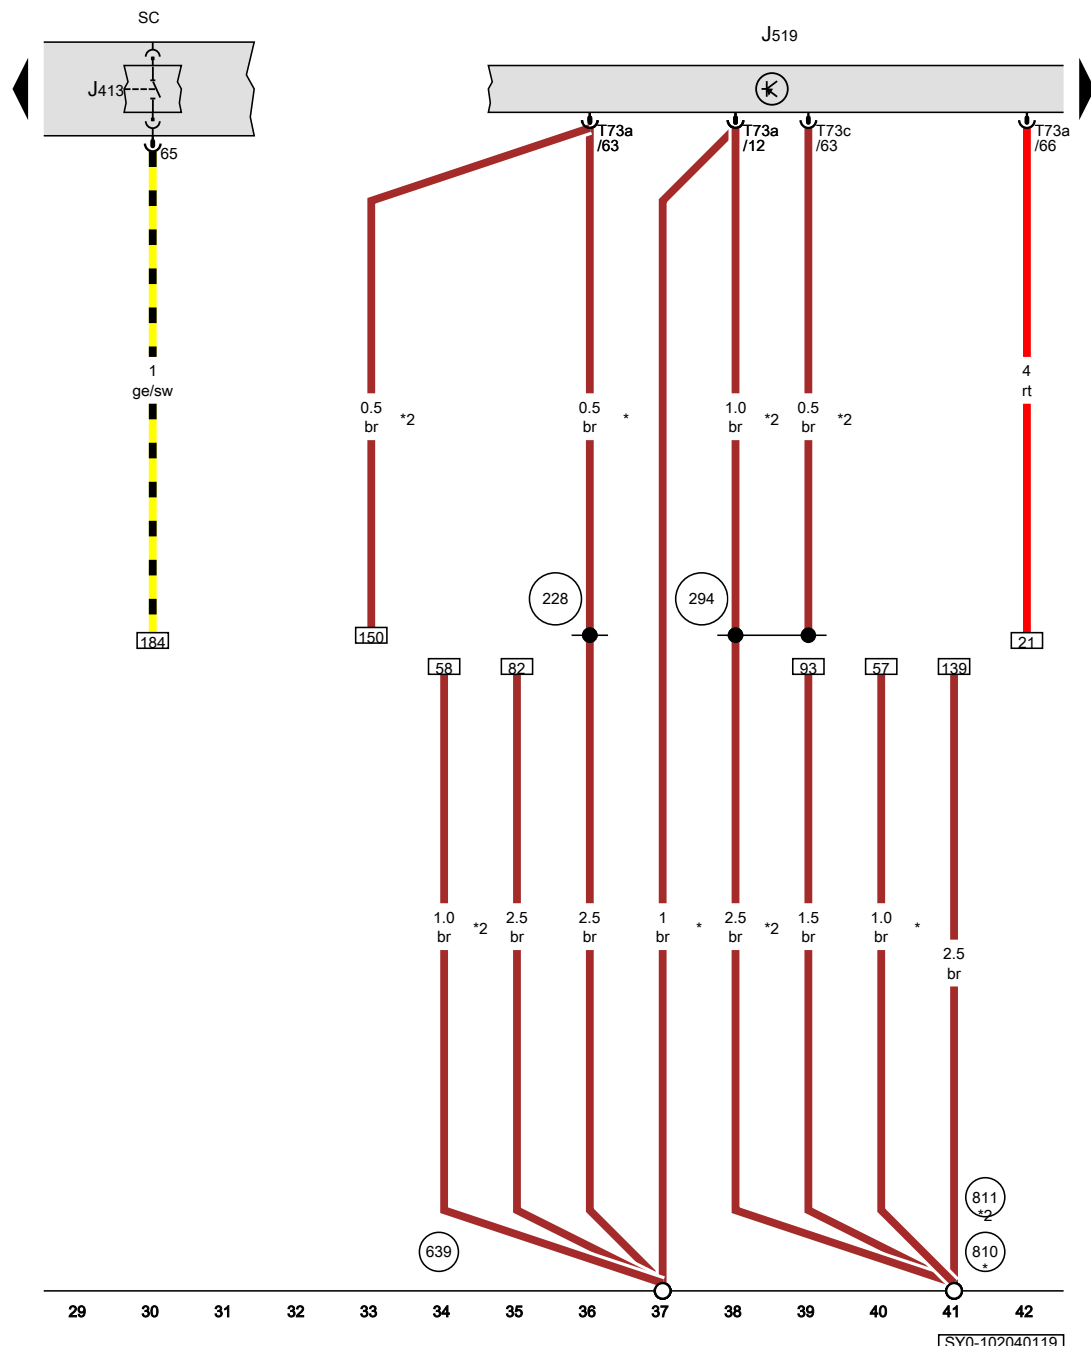

Onboard supply control unit, Fuse holder C

- J413 Horn relay
- J519 Onboard supply control unit
- SC Fuse holder C
- T73a 73-pin connector, black
- T73c 73-pin connector, black
- 228 Connection, in harness
- 294 Earth connection 9, in interior wiring harness
- 639 Earth point, left A-pillar
- 810 Earth point on central tube for dash panel, centre left
- 811 Earth point on central tube for dash panel, centre right
- * For left-hand drive models
- *2 For right-hand drive models


ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

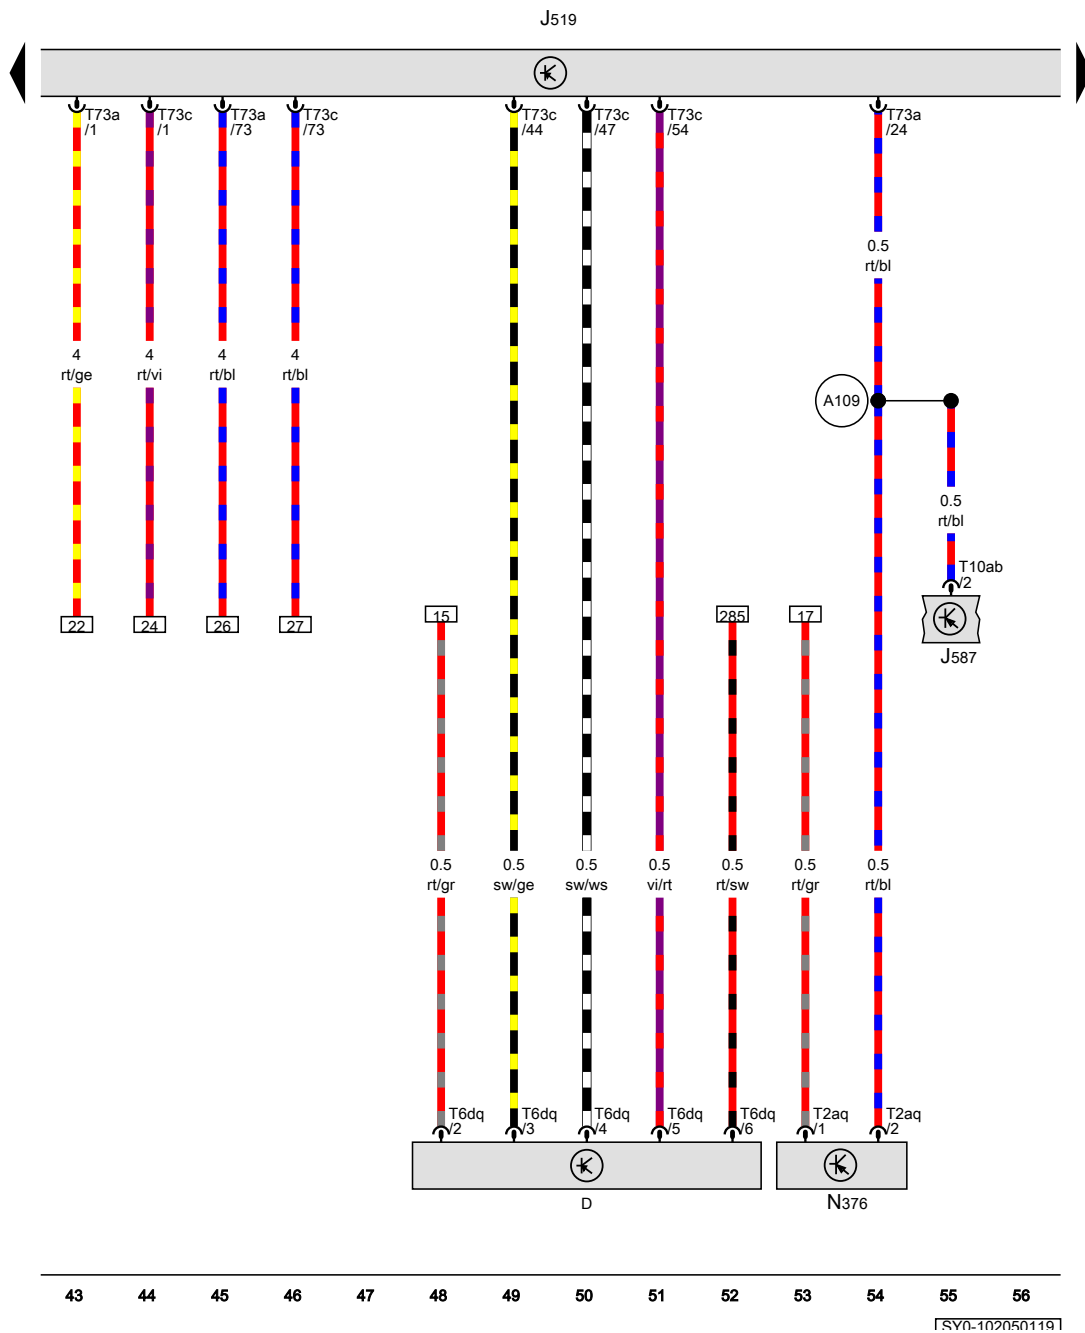

Ignition/starter switch, Onboard supply control unit, Selector lever sensors control unit

- D Ignition/starter switch
- J519 Onboard supply control unit
- J587 Selector lever sensors control unit
- N376 Ignition key withdrawal lock solenoid
- T2aq 2-pin connector, black
- T6dq 6-pin connector, black
- T10ab 10-pin connector, red
- T73a 73-pin connector, black
- T73c 73-pin connector, black
- A109 Connection (selector lever function display), in dash panel wiring harness

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink

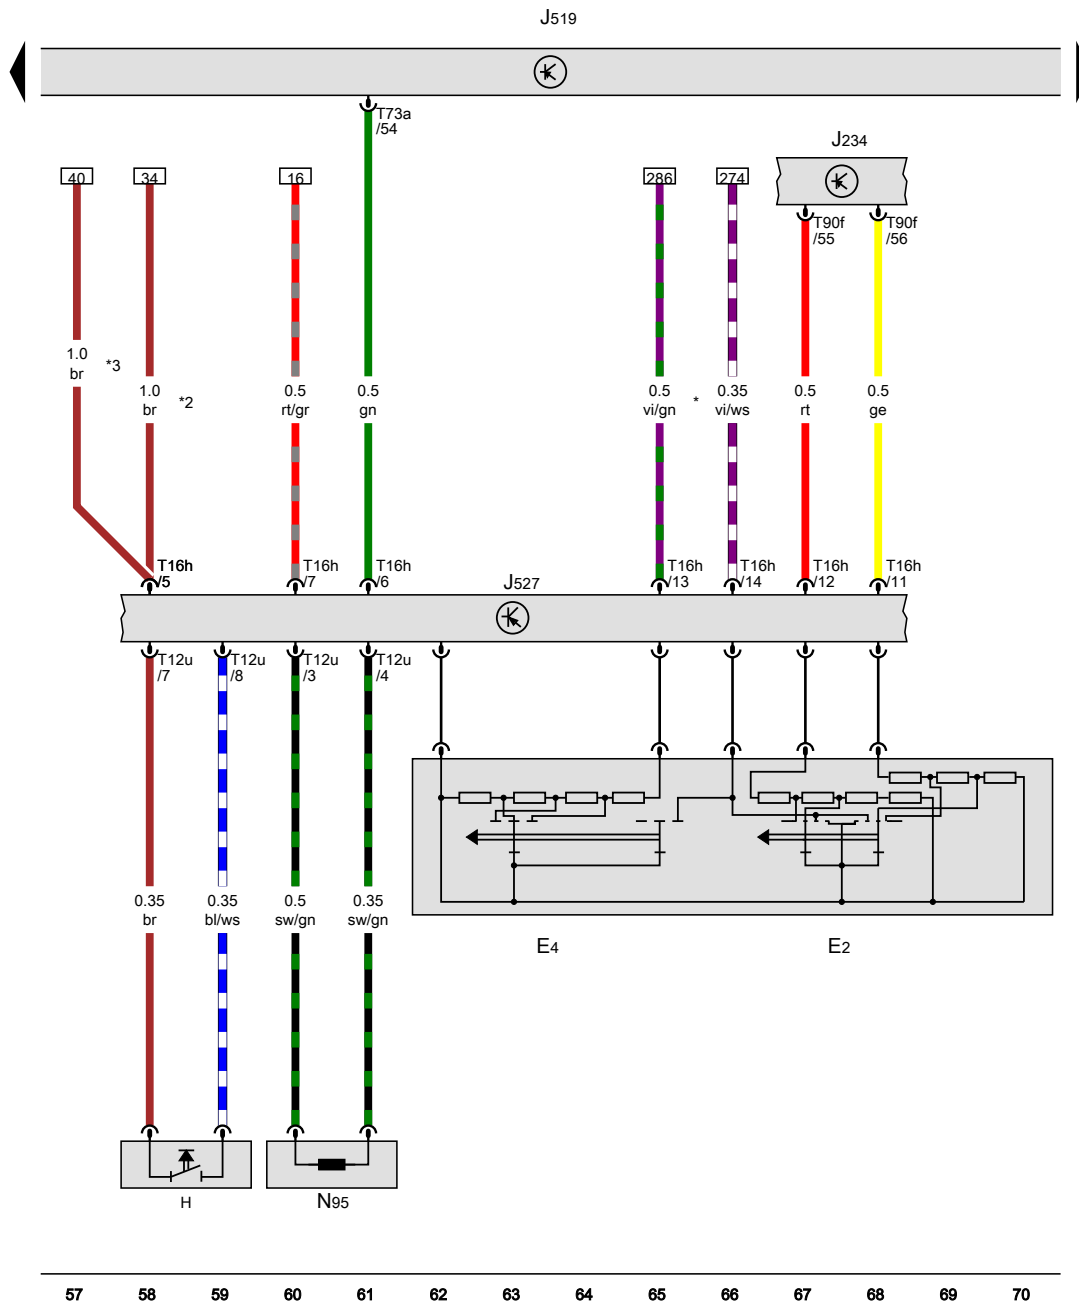


Turn signal switch, Headlight dipper and flasher switch, Horn plate, Onboard supply control unit, Steering column electronics control unit

- E2 Turn signal switch
- E4 Headlight dipper and flasher switch
- H Horn plate
- J234 Airbag control unit
- J519 Onboard supply control unit
- J527 Steering column electronics control unit
- N95 Airbag igniter on driver side
- T12u 12-pin connector
- T16h 16-pin connector, black
- T73a 73-pin connector, black
- T90f 90-pin connector, yellow
- * For models with cruise control system (CCS)
- *2 For right-hand drive models
- *3 For left-hand drive models

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

[SYN-102060119]

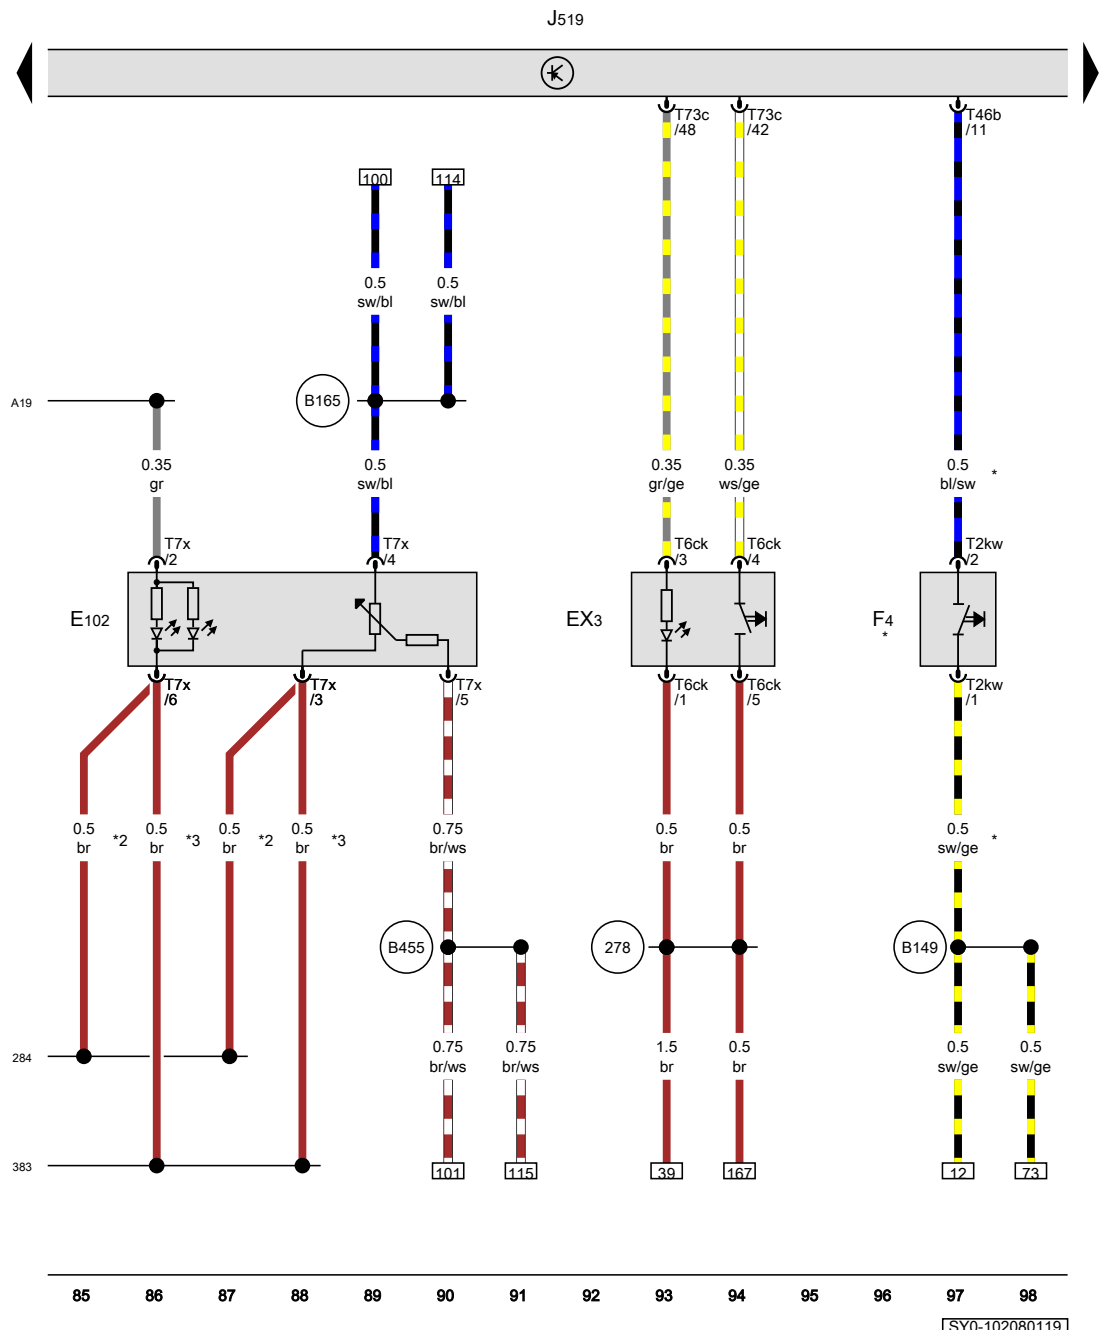

Hazard warning light switch, Headlight range control regulator, Reversing light switch, Onboard supply control unit

- EX3 Hazard warning light switch
- E102 Headlight range control regulator
- F4 Reversing light switch
- J519 Onboard supply control unit
- T2kw 2-pin connector, black
- T6ck 6-pin connector, blue
- T7x 7-pin connector, black
- T46b 46-pin connector, black
- T73c 73-pin connector, black

- 278 Earth connection 4, in interior wiring harness
- 284 Earth connection 6, in interior wiring harness
- 383 Earth connection 18, in main wiring harness
- A19 Connection (58d), in dash panel wiring harness
- B149 Positive connection 2 (15a), in interior wiring harness
- B165 Positive connection 2 (15), in interior wiring harness
- B455 Connection (HRC), in main wiring harness

- * For models with manual gearbox
- *2 For left-hand drive models
- *3 For right-hand drive models


- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

Onboard supply control unit, Left fog light bulb, Right fog light bulb, Front left headlight


- J519 Onboard supply control unit
- L22 Left fog light bulb
- L23 Right fog light bulb
- L174 Left daytime running light bulb
- MX1 Front left headlight
- M1 Left side light bulb
- M5 Front left turn signal bulb
- M29 Left headlight dipped beam bulb
- M30 Left headlight main beam bulb
- T2qt 2-pin connector, black
- T2qu 2-pin connector, black
- T10v 10-pin connector, black
- T14aj 14-pin connector, black
- T46b 46-pin connector, black
- T73c 73-pin connector, black
- V48 Left headlight range control motor

- 119 Earth connection 1, in headlight wiring harness
- 179 Earth connection, in left headlight wiring harness
- 203 Earth connection, in front fog light wiring harness
- 655 Earth point, on left headlight
- B554 Connection (fog light), in main wiring harness
- B812 Connection 2 (fog light), in main wiring harness

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

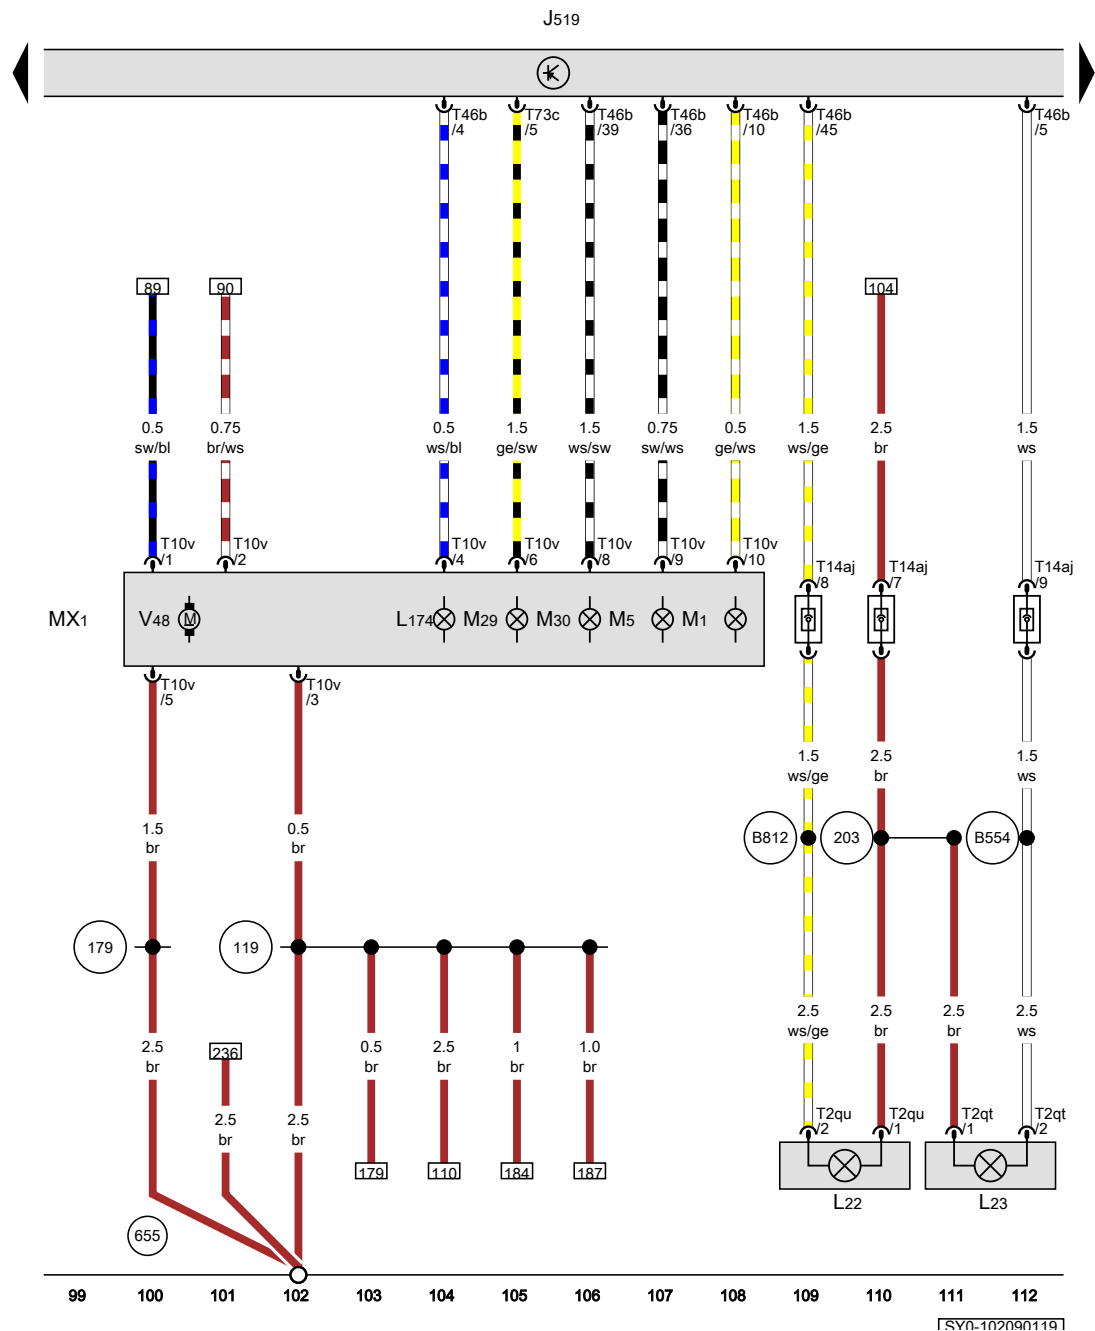


Onboard supply control unit, Front right headlight, Left washer jet heater element, Right washer jet heater element

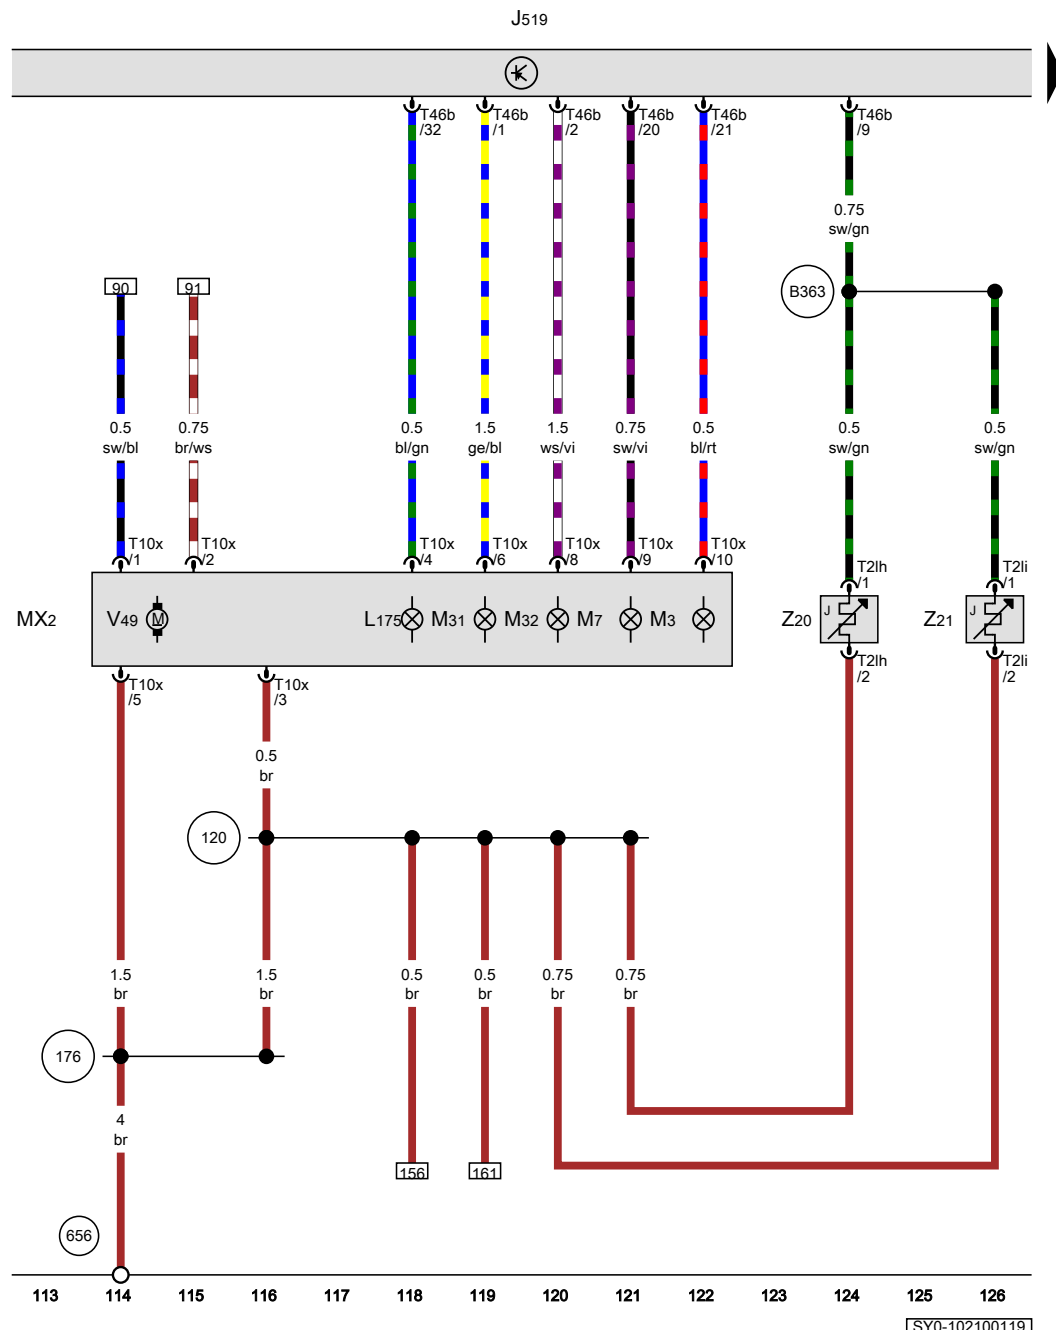

- J519 Onboard supply control unit
- L175 Right daytime running light bulb
- MX2 Front right headlight
- M3 Right side light bulb
- M7 Front right turn signal bulb
- M31 Right headlight dipped beam bulb
- M32 Right headlight main beam bulb
- T2lh 2-pin connector, black
- T2li 2-pin connector, black
- T10x 10-pin connector, black
- T46b 46-pin connector, black
- V49 Right headlight range control motor
- Z20 Left washer jet heater element
- Z21 Right washer jet heater element

- 120 Earth connection 2, in headlight wiring harness
- 176 Earth connection, in right headlight wiring harness
- 656 Earth point, on right headlight
- B363 Positive connection 14 (87a) in main wiring harness

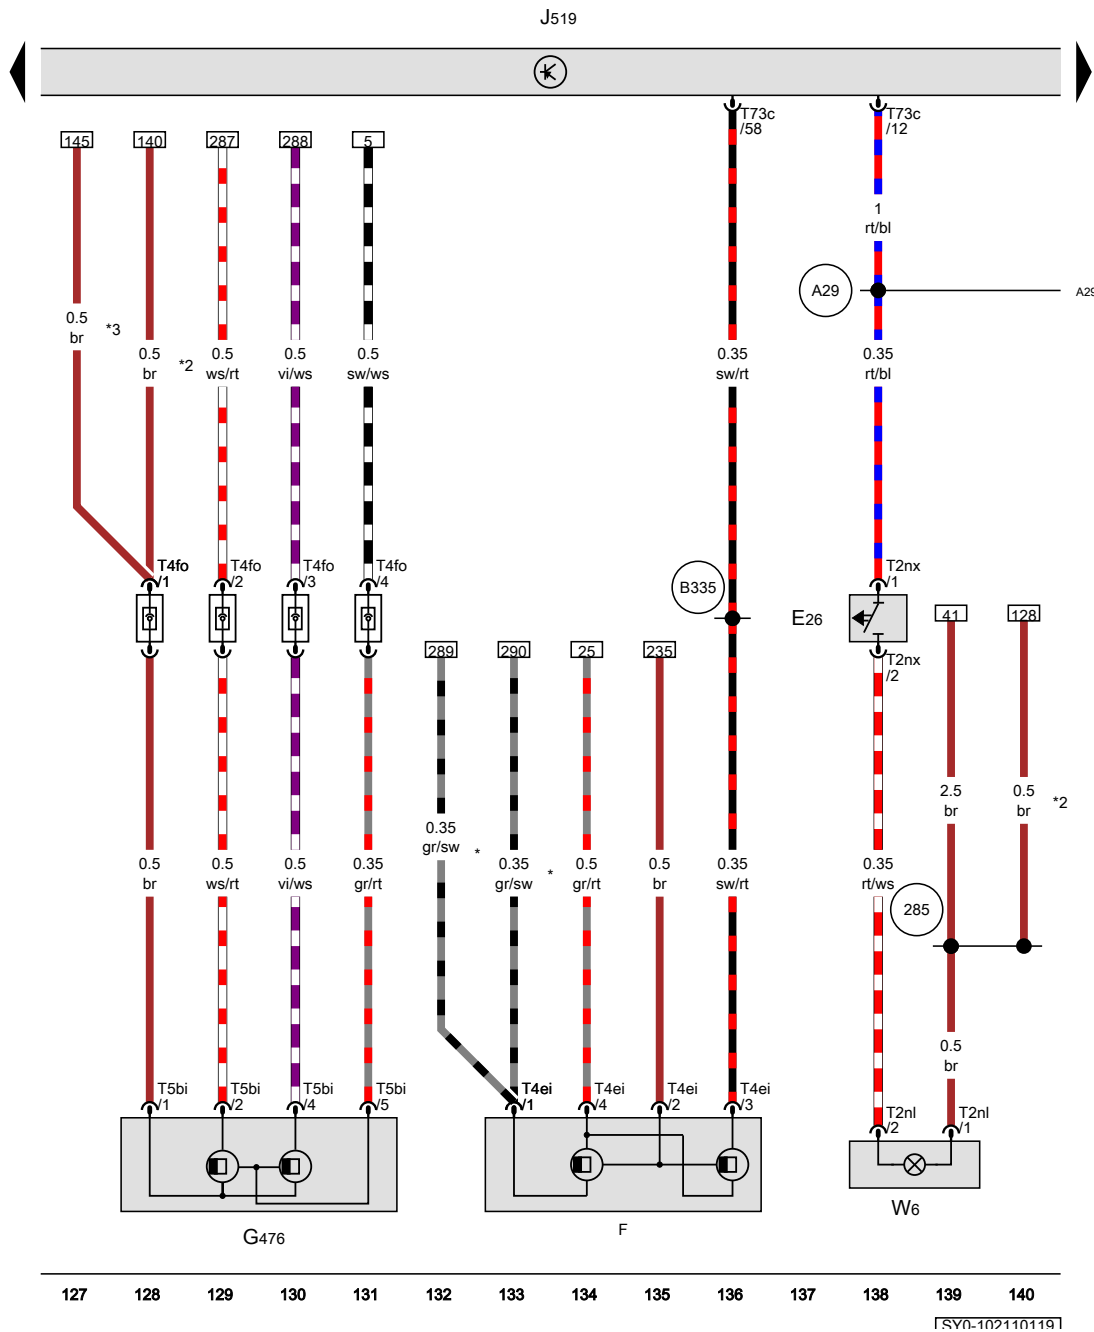

Glove compartment light switch, Brake light switch, Clutch position sender, Onboard supply control unit, Glove compartment light

- E26 Glove compartment light switch
- F Brake light switch
- G476 Clutch position sender
- J519 Onboard supply control unit
- T2nl 2-pin connector, black
- T2nx 2-pin connector, black
- T4ei 4-pin connector, black
- T4fo 4-pin connector, black
- T5bi 5-pin connector, black
- T73c 73-pin connector, black
- W6 Glove compartment light

285 Earth connection 7, in interior wiring harness

A29 Connection (interior light), in dash panel wiring harness


B335 Connection 1 (54), in main wiring harness

* According to equipment

*2 For left-hand drive models

*3 For right-hand drive models

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

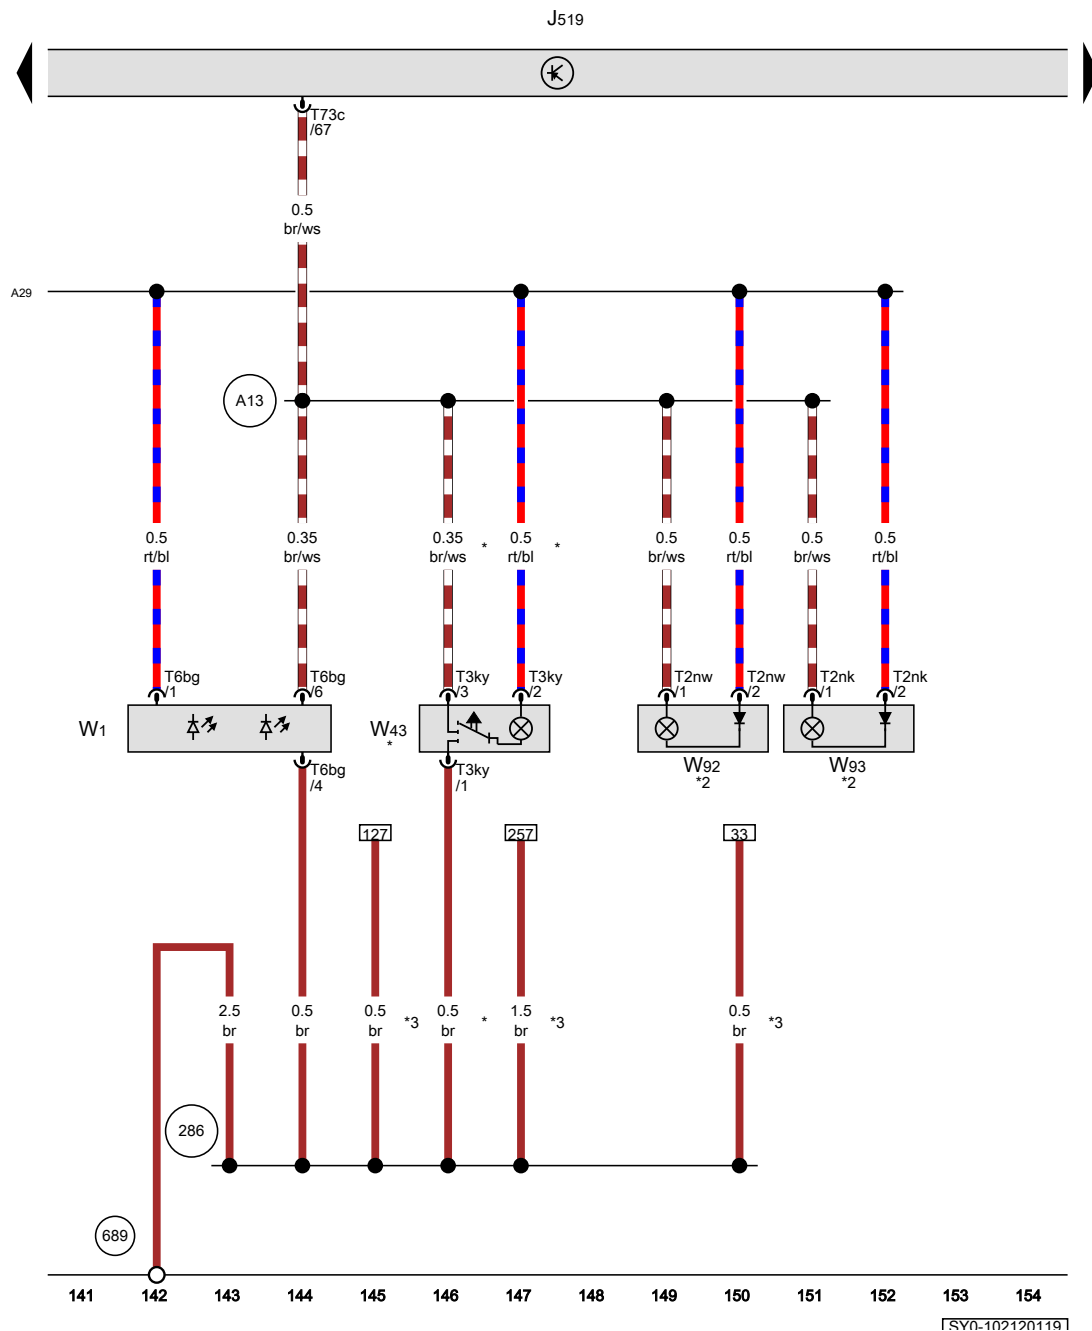


Onboard supply control unit, Front interior light, Rear interior light, Driver side entry light, Passenger side entry light


- J519 Onboard supply control unit
- T2nk 2-pin connector, black
- T2nw 2-pin connector, black
- T3ky 3-pin connector, black
- T6bg 6-pin connector, blue
- T73c 73-pin connector, black
- W1 Front interior light
- W43 Rear interior light
- W92 Driver side entry light
- W93 Passenger side entry light

- 286 Earth connection 8, in interior wiring harness
- 689 Earth point, at front, central in roof
- A13 Connection (door contact switch), in dash panel wiring harness
- A29 Connection (interior light), in dash panel wiring harness
- * For models with double cab
- *2 For models with entry lights
- *3 For right-hand drive models

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

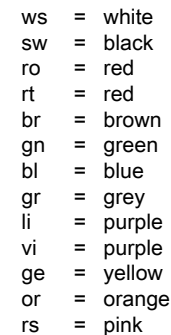

(D207) Connection 7 (87a), in engine compartment wiring harness

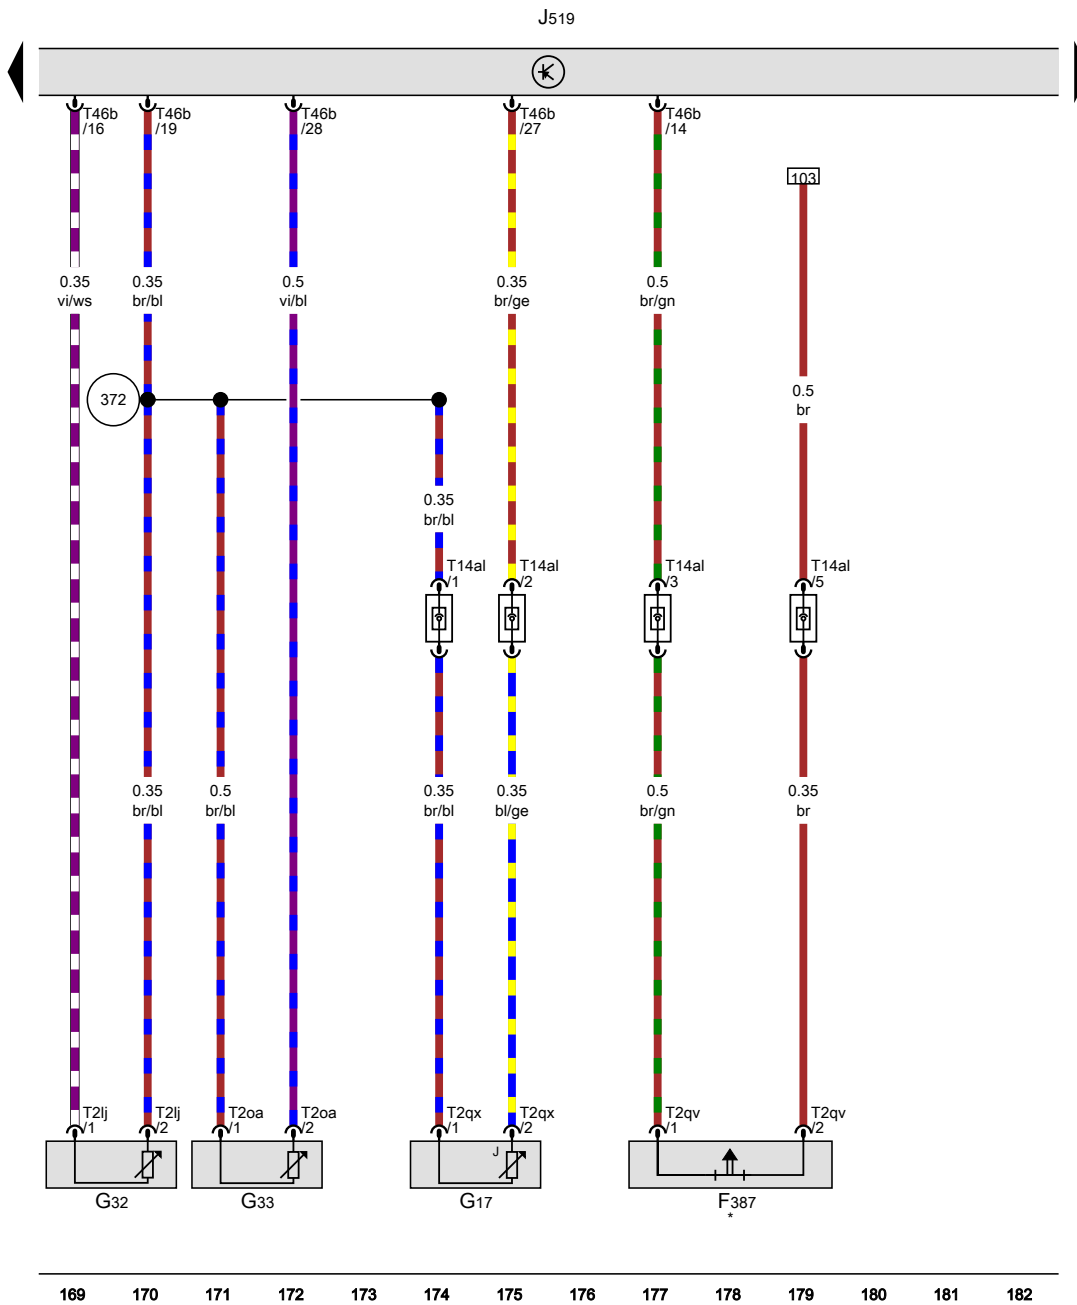

Bonnet contact switch, Ambient temperature sensor, Coolant shortage indicator sender, Windscreen washer fluid level sender, Onboard supply control unit

- F387 Bonnet contact switch
- G17 Ambient temperature sensor
- G32 Coolant shortage indicator sender
- G33 Windscreen washer fluid level sender
- J519 Onboard supply control unit
- T2lj 2-pin connector, black
- T2oa 2-pin connector, black
- T2qv 2-pin connector, black
- T2qx 2-pin connector, black
- T14al 14-pin connector, grey
- T46b 46-pin connector, black
- 372 Earth connection 7, in main wiring harness
- * Pre-wired component


ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

181 182


Treble horn, Bass horn, Onboard supply control unit, Left number plate light, Right number plate light


- H2 Treble horn
- H7 Bass horn
- J519 Onboard supply control unit
- T2ku 2-pin connector, black
- T2kv 2-pin connector, black
- T2qb 2-pin connector, black
- T2qc 2-pin connector, black
- T17s 17-pin connector, black
- T73a 73-pin connector, black
- X4 Left number plate light
- X5 Right number plate light
- 437 Earth connection, in number plate wiring harness
- B727 Connection (71a), in main wiring harness
- W41 Positive connection (58), in number plate lights wiring harness
- * For panel van and Kombi models
- *2 According to equipment

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

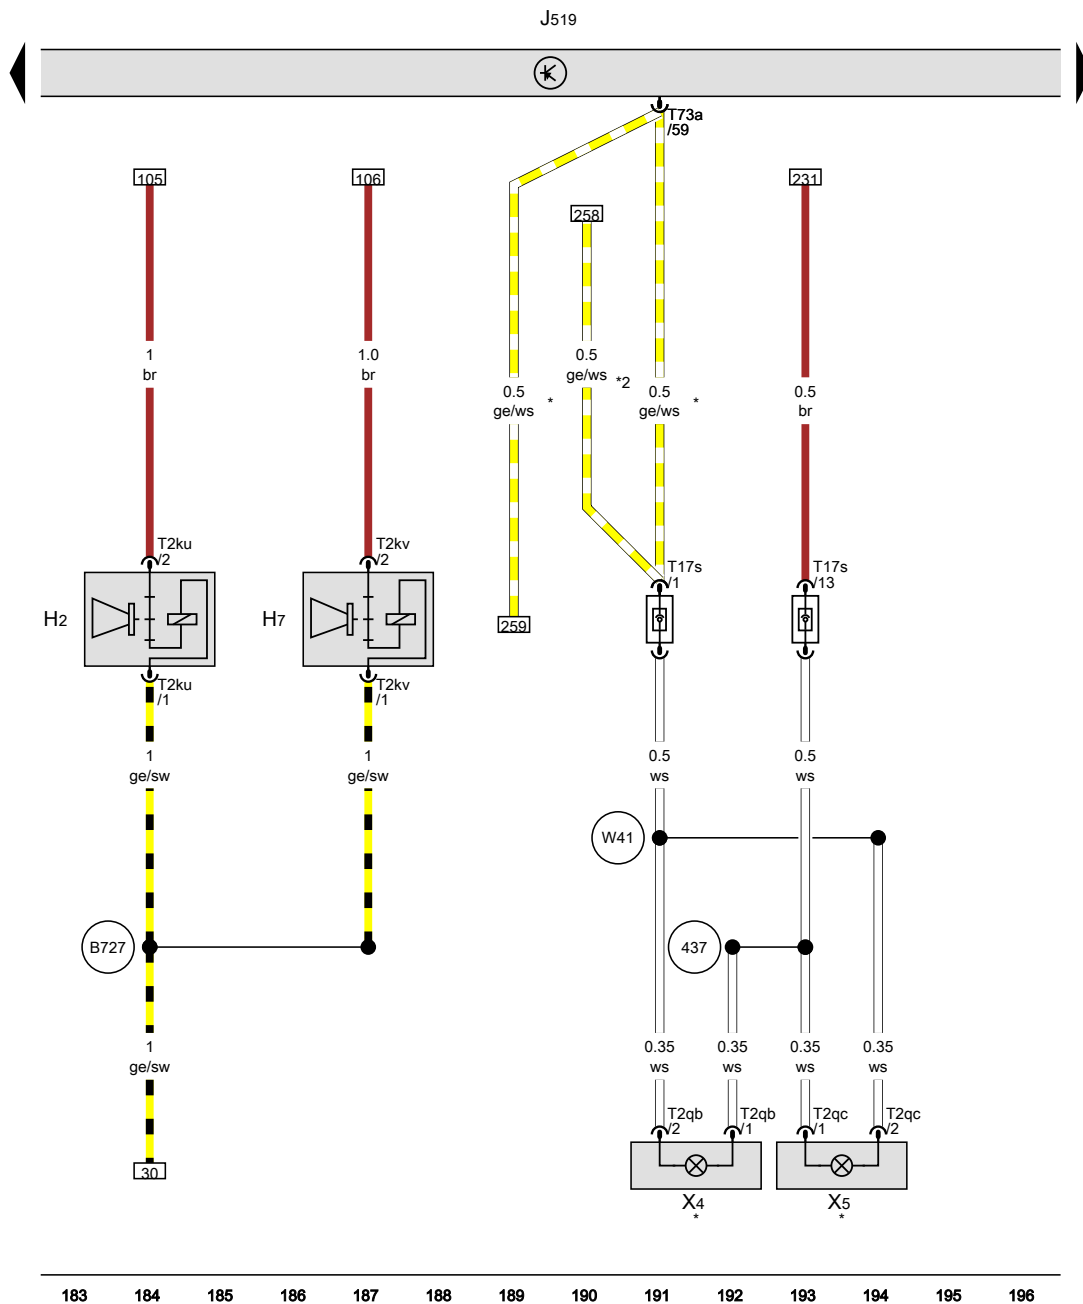

[SYN-102150119]



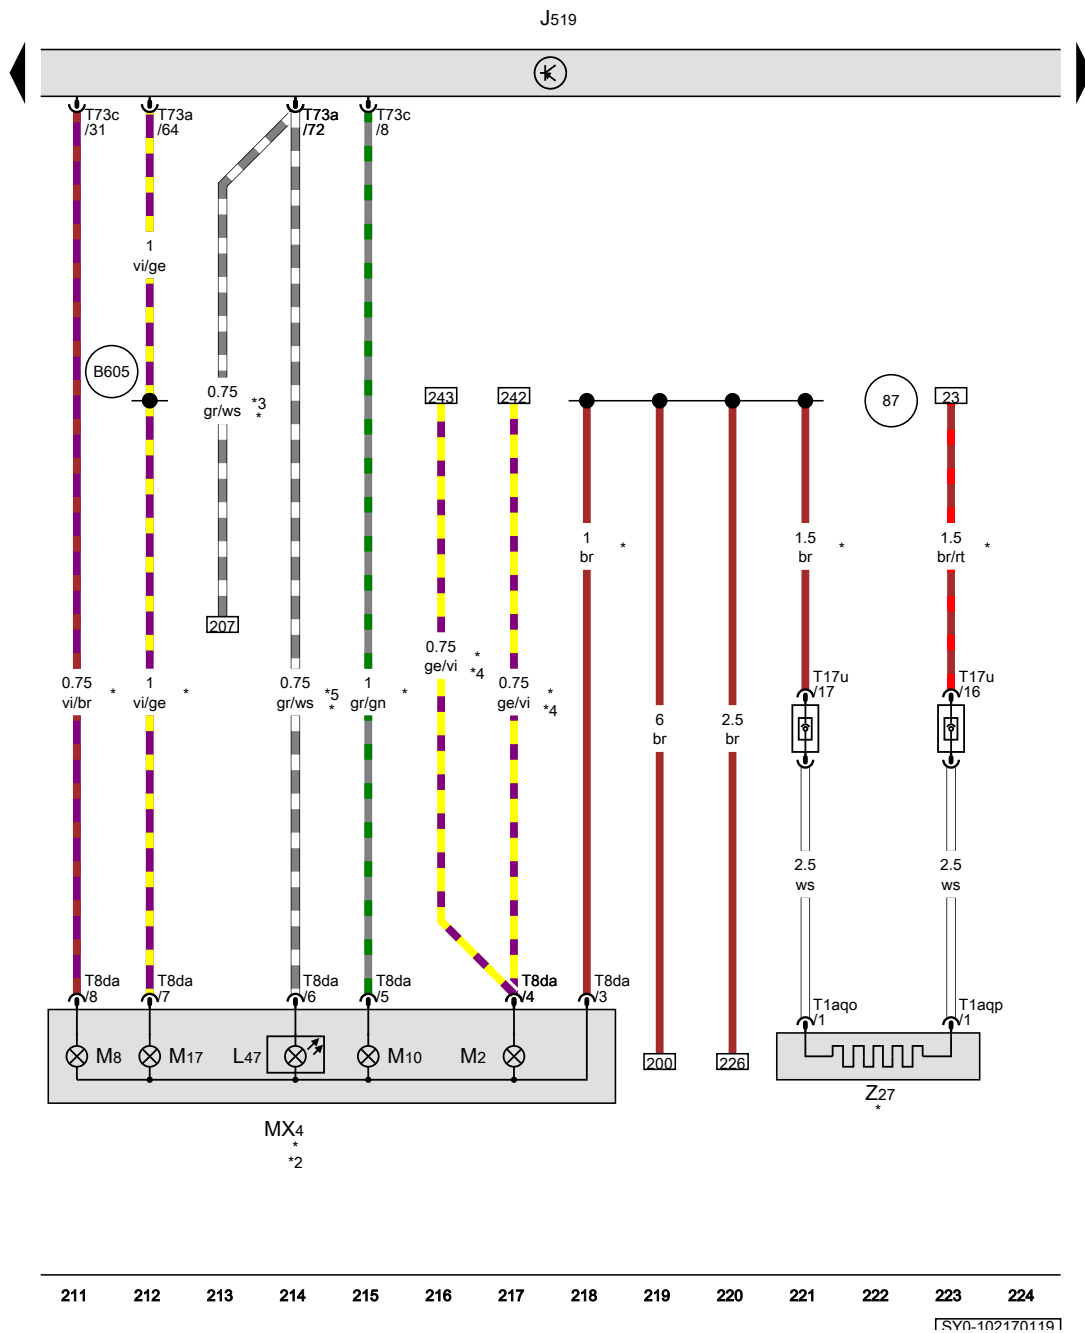


Onboard supply control unit, Right tail light cluster, Heated rear window in right wing door

- J519 Onboard supply control unit
- L47 Rear right fog light bulb
- M2 Right tail light bulb
- MX4 Right tail light cluster
- M8 Rear right turn signal bulb
- M10 Right brake light bulb
- M17 Right reversing light bulb
- T1aqp 1-pin connector
- T1aqp 1-pin connector
- T8da 8-pin connector, black
- T17u 17-pin connector, black
- T73a 73-pin connector, black
- T73c 73-pin connector, black
- Z27 Heated rear window in right wing door

87 Earth connection 2, in rear wiring harness

B605 Connection 1, in interior wiring harness

- * For panel van and Kombi models
- *2 Not for models with double cab/ dropside
- *3 For left-hand drive models
- *4 According to equipment
- *5 For right-hand drive models

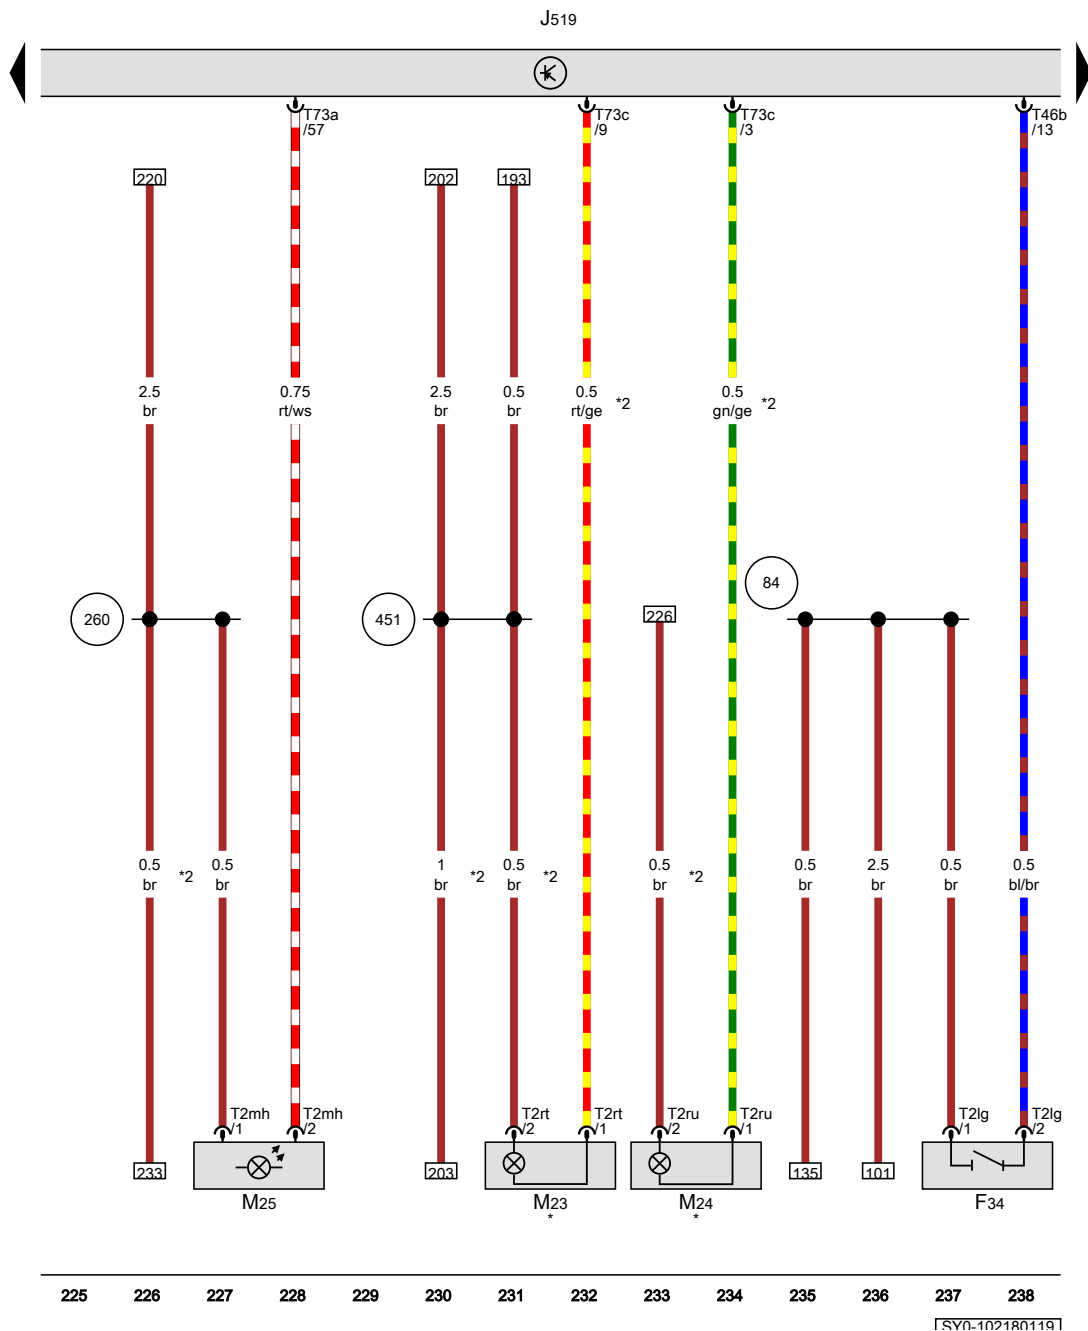

Brake fluid level warning contact, Onboard supply control unit, Left roof mounted turn signal bulb, Right roof mounted turn signal bulb, High-level brake light bulb

- F34 Brake fluid level warning contact
- J519 Onboard supply control unit
- M23 Left roof mounted turn signal bulb
- M24 Right roof mounted turn signal bulb
- M25 High-level brake light bulb
- T2lg 2-pin connector, black
- T2mh 2-pin connector, green
- T2rt 2-pin connector, black
- T2ru 2-pin connector, black
- T46b 46-pin connector, black
- T73a 73-pin connector, black
- T73c 73-pin connector, black

84 Earth connection, engine block, in front right wiring harness


260 Earth connection, in tail light cluster wiring harness

451 Earth connection 1 in rear right side panel

* Pre-wired component

*2 For panel van and Kombi models

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

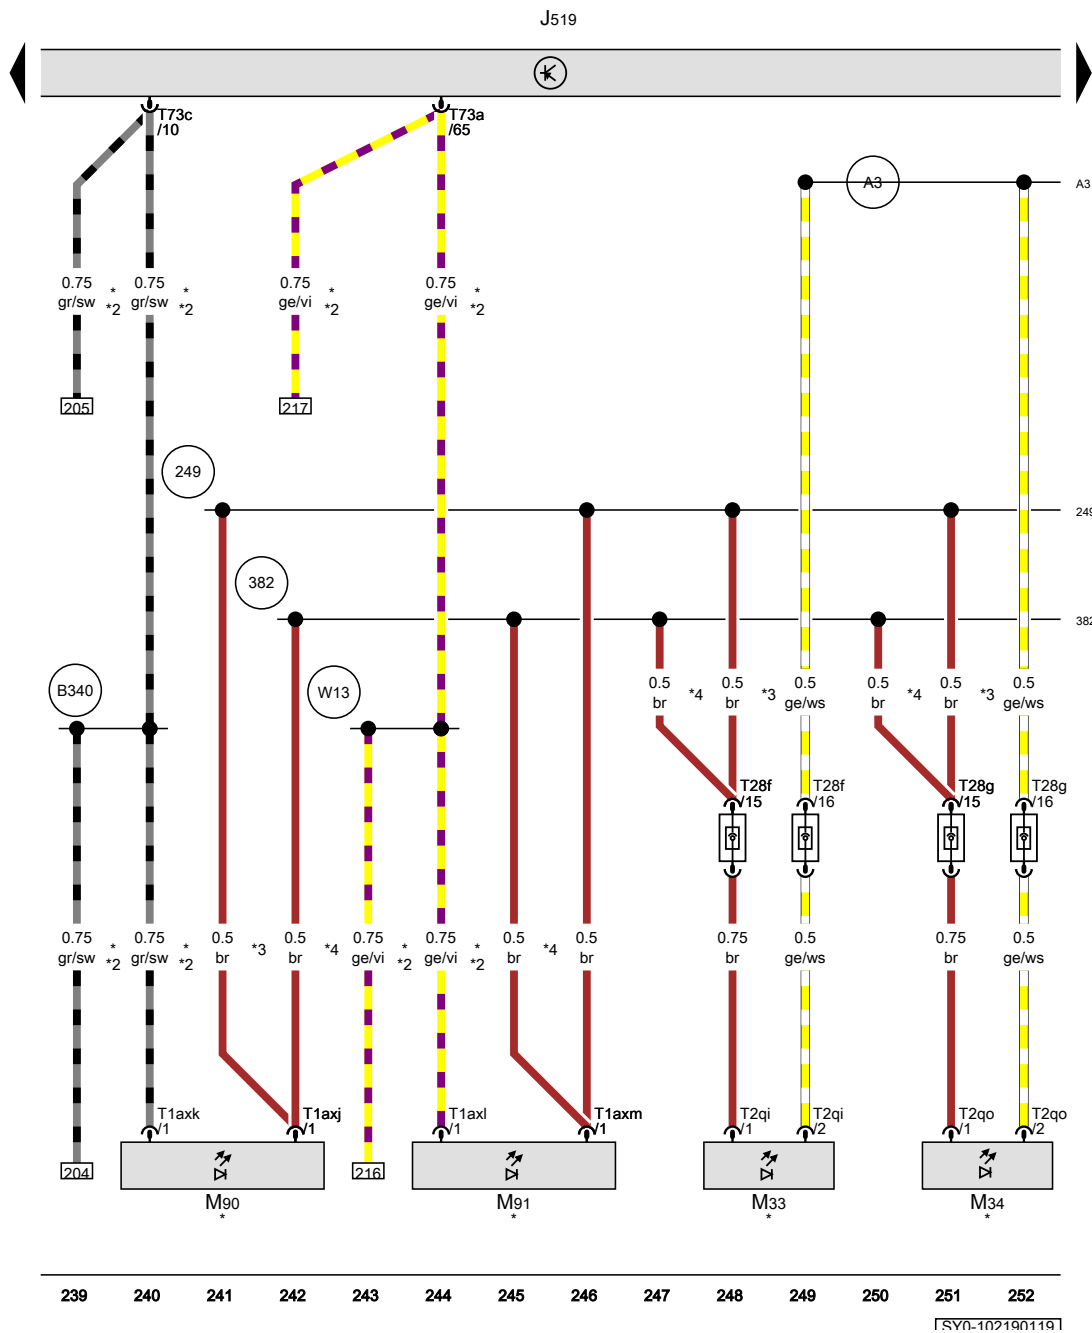


Onboard supply control unit, Front left side marker bulb, Front right side marker bulb, Elevated side light, front left, Elevated side light, front right


- J519 Onboard supply control unit
- M33 Front left side marker bulb
- M34 Front right side marker bulb
- M90 Elevated side light, front left
- M91 Elevated side light, front right
- T1axj 1-pin connector
- T1axk 1-pin connector
- T1axl 1-pin connector
- T1axm 1-pin connector
- T2qi 2-pin connector, black
- T2qo 2-pin connector, black
- T28f 28-pin connector, black
- T28g 28-pin connector, black
- T73a 73-pin connector, black
- T73c 73-pin connector, black

- 249 Earth connection 2, in interior wiring harness
- 382 Earth connection 17, in main wiring harness
- A3 Positive connection (58), in dash panel wiring harness
- B340 Connection 1 (58d), in main wiring harness
- W13 Connection (58L), in rear wiring harness

- * For panel van and Kombi models
- *2 According to equipment
- *3 For left-hand drive models
- *4 For right-hand drive models

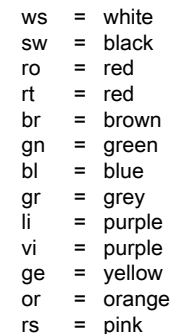

- 44 Earth point, lower part of left A-pillar
- 77 Earth point, lower part of left B-pillar
- 83 Earth connection 1, in front right wiring harness
- 249 Earth connection 2, in interior wiring harness
- 376 Earth connection 11, in main wiring harness
- 382 Earth connection 17, in main wiring harness
- 638 Earth point, on right A-pillar
- 711 Earth point 3 on rear left longitudinal member
- A3 Positive connection (58), in dash panel wiring harness
 - * For panel van and Kombi models
 - *2 For left-hand drive models
 - *3 For right-hand drive models
 - *4 According to equipment

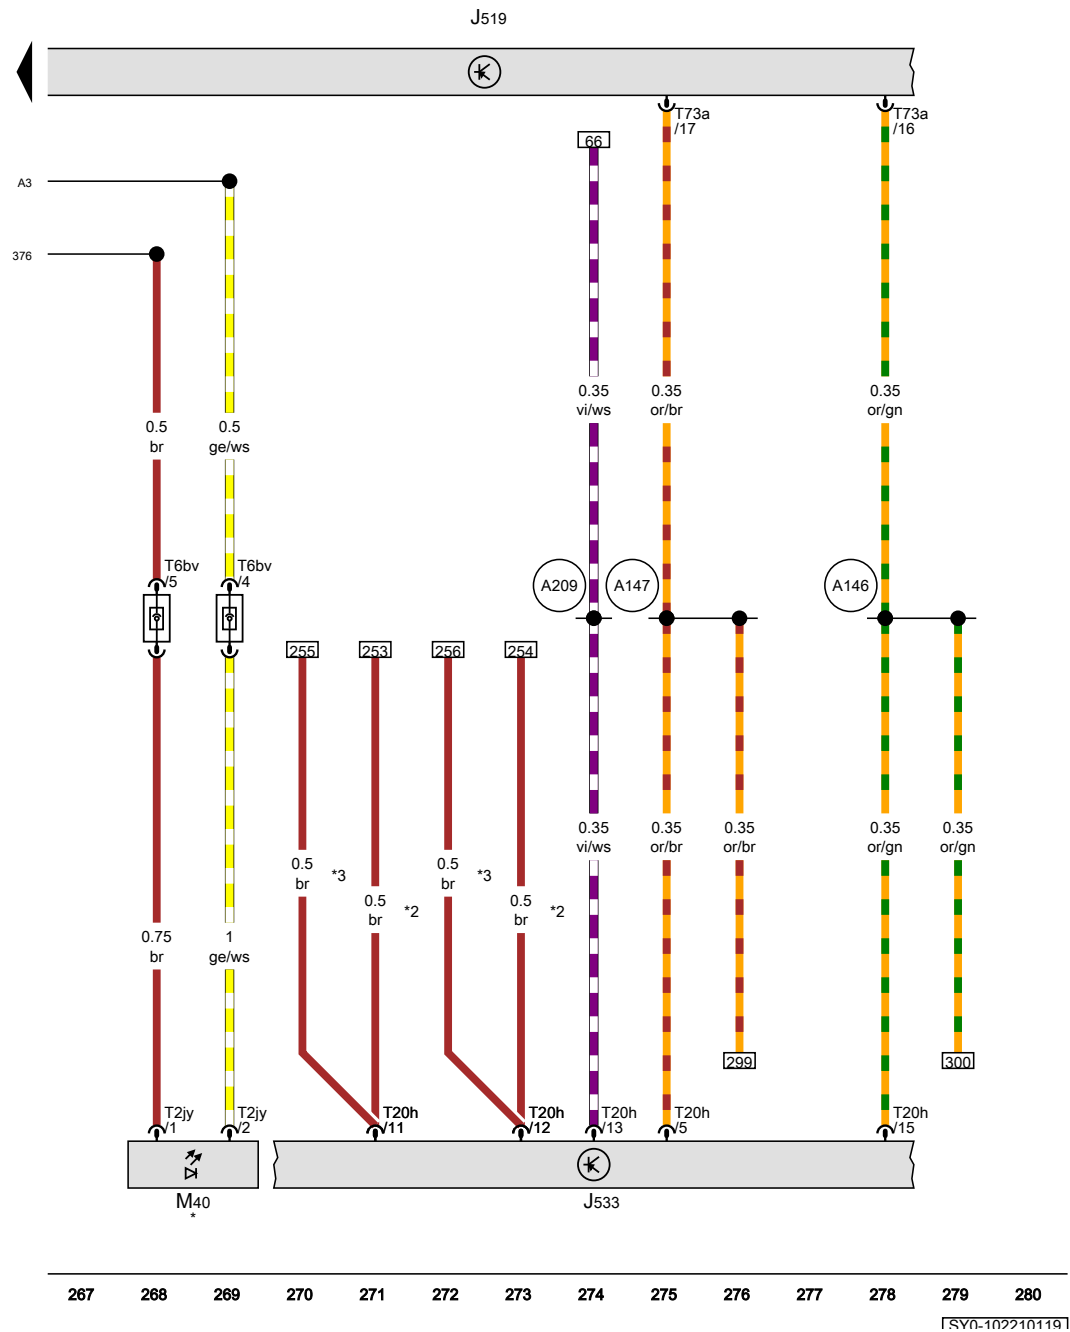


Onboard supply control unit, Data bus diagnostic interface, Centre right side marker bulb

- J519 Onboard supply control unit
- J533 Data bus diagnostic interface
- M40 Centre right side marker bulb
- T2jy 2-pin connector, black
- T6bv 6-pin connector, black
- T20h 20-pin connector, red
- T73a 73-pin connector, black


- 376 Earth connection 11, in main wiring harness
- A3 Positive connection (58), in dash panel wiring harness
- A146 Connection (convenience CAN bus, high), in dash panel wiring harness
- A147 Connection (convenience CAN bus, low), in dash panel wiring harness
- A209 Connection 1 (LIN bus) in dash panel wiring harness
- * For panel van and Kombi models
- *2 For left-hand drive models
- *3 For right-hand drive models

Engine/motor control unit

- J623 Engine/motor control unit
 T94b 94-pin connector, black
 * For models with cruise control system (CCS)
 *2 According to equipment

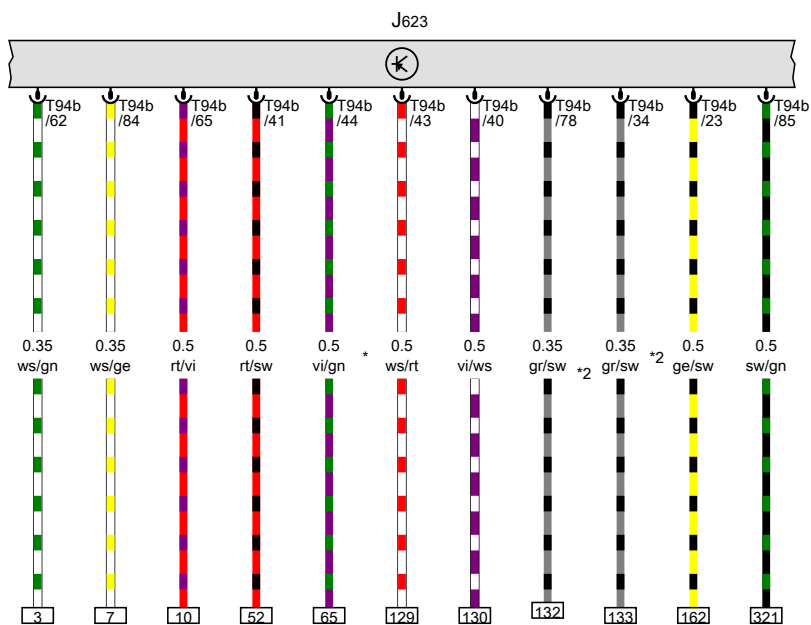

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

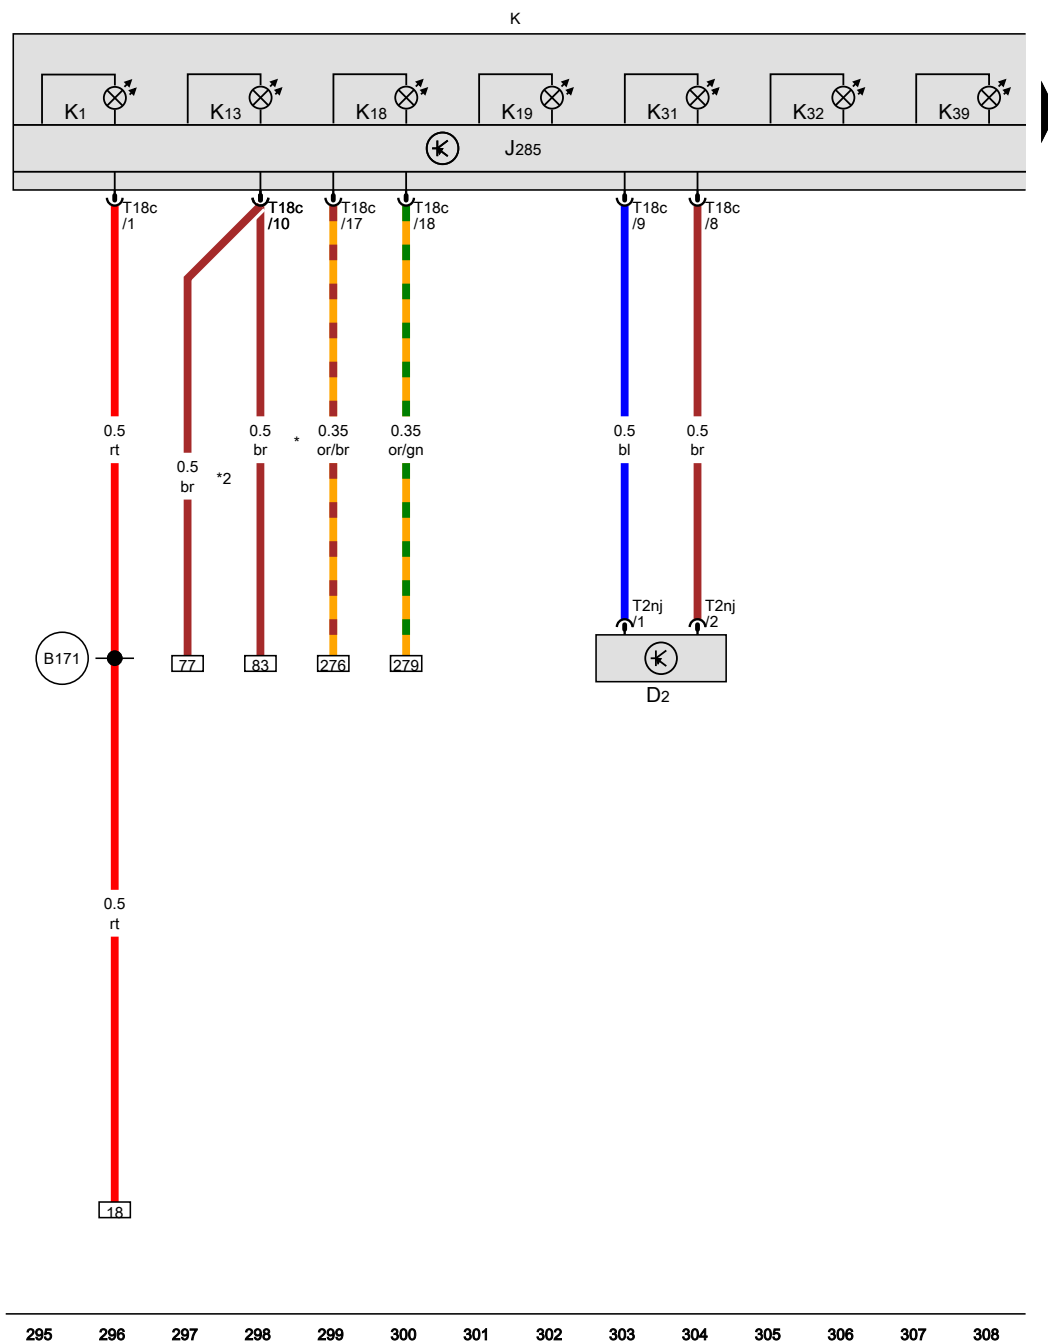


Immobiliser reader coil, Dash panel insert

- D2 Immobiliser reader coil
- J285 Control unit in dash panel insert
- K Dash panel insert
- K1 Main beam warning lamp
- K13 Rear fog light warning lamp
- K18 Trailer operation warning lamp
- K19 Seat belt warning system warning lamp
- K31 Cruise control system warning lamp
- K32 Brake pad warning lamp
- K39 Central warning lamp in display unit
- T2nj 2-pin connector, black
- T18c 18-pin connector, black

B171 Positive connection 3 (30), in interior wiring harness

- * For left-hand drive models
- *2 For right-hand drive models

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

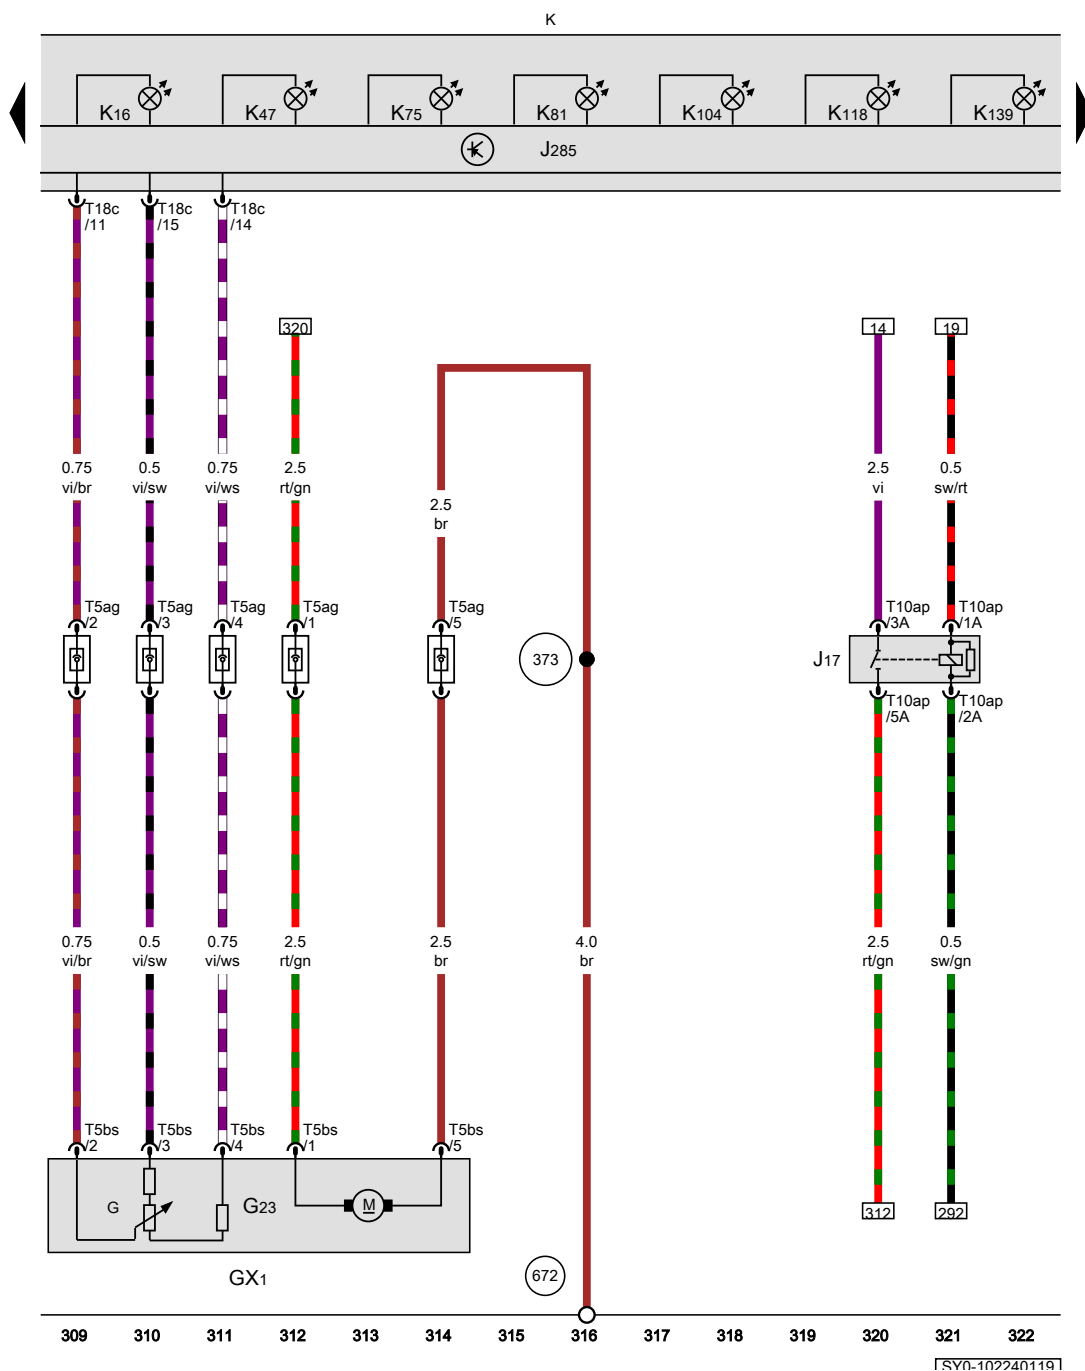


Fuel delivery unit, Fuel pump relay, Dash panel insert

- G Fuel gauge sender
- GX1 Fuel delivery unit
- G23 Fuel pump
- J17 Fuel pump relay
- J285 Control unit in dash panel insert
- K Dash panel insert
- K16 Reserve fuel warning lamp
- K47 ABS warning lamp
- K75 Airbag warning lamp
- K81 Differential lock warning lamp
- K104 Diesel electronics warning lamp
- K118 Brake system warning lamp
- K139 Handbrake warning lamp
- T5ag 5-pin connector, black
- T5bs 5-pin connector, black
- T10ap 10-pin connector, black
- T18c 18-pin connector, black

373 Earth connection 8, in main wiring harness

672 Earth point 2, on front of left longitudinal member



- 78 Earth point, lower part of right B-pillar
- 277 Earth connection 3, in interior wiring harness
- 279 Earth connection 5, in interior wiring harness

01.2019