

1 Earth points

1.1 Earth points, in engine compartment

1.1.1 Earth point, on right in engine compartment (crosswise installation)

656 - Earth point, on right headlight

- ☐ Specified torque -20Nm-

685 - Earth point 1, on front of right longitudinal member

- ☐ Specified torque -20Nm-




Only models with cross-obstructed engine

714 - Earth point on right of engine

- ☐ Specified torque -20Nm-



Only models with cross-obstructed engine

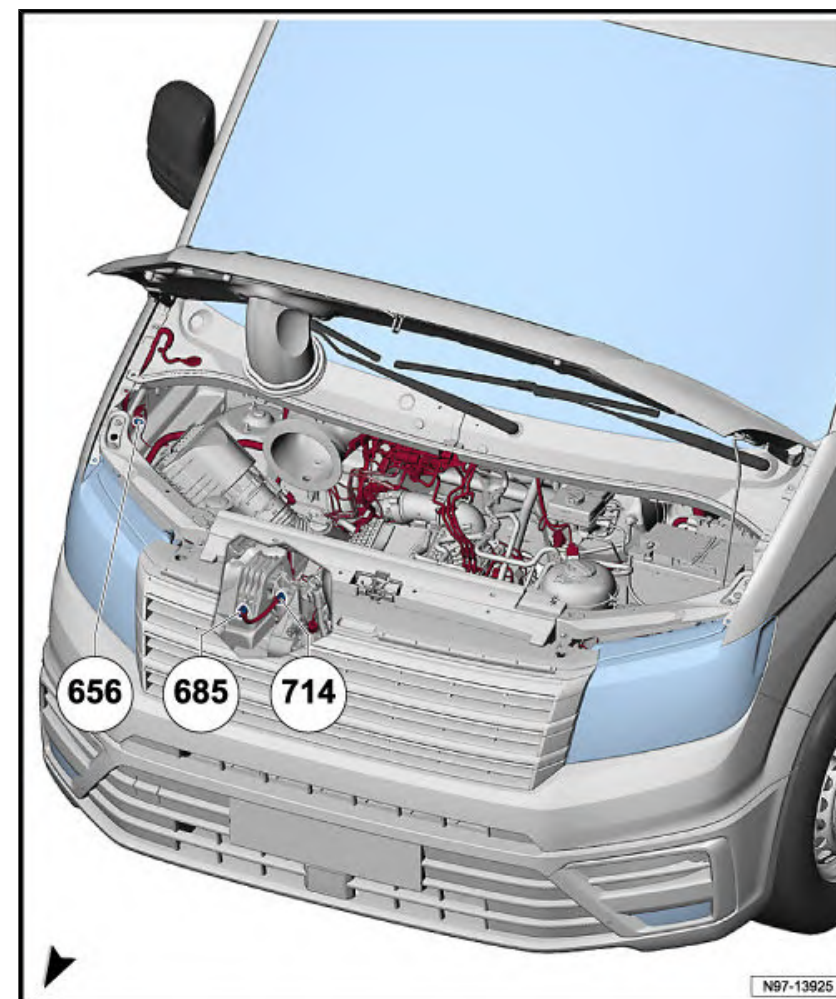

1.1.2 Earth point, on right in engine compartment (lengthwise installation)

656 - Earth point, on right headlight

- ☐ Specified torque -20Nm-

685 - Earth point 1, on front of right longitudinal member

- ☐ Specified torque -20Nm-



Note

Only models with length-obstructed engine


714 - Earth point on right of engine

- ☐ Specified torque -20Nm-



Note

Only models with length-obstructed engine

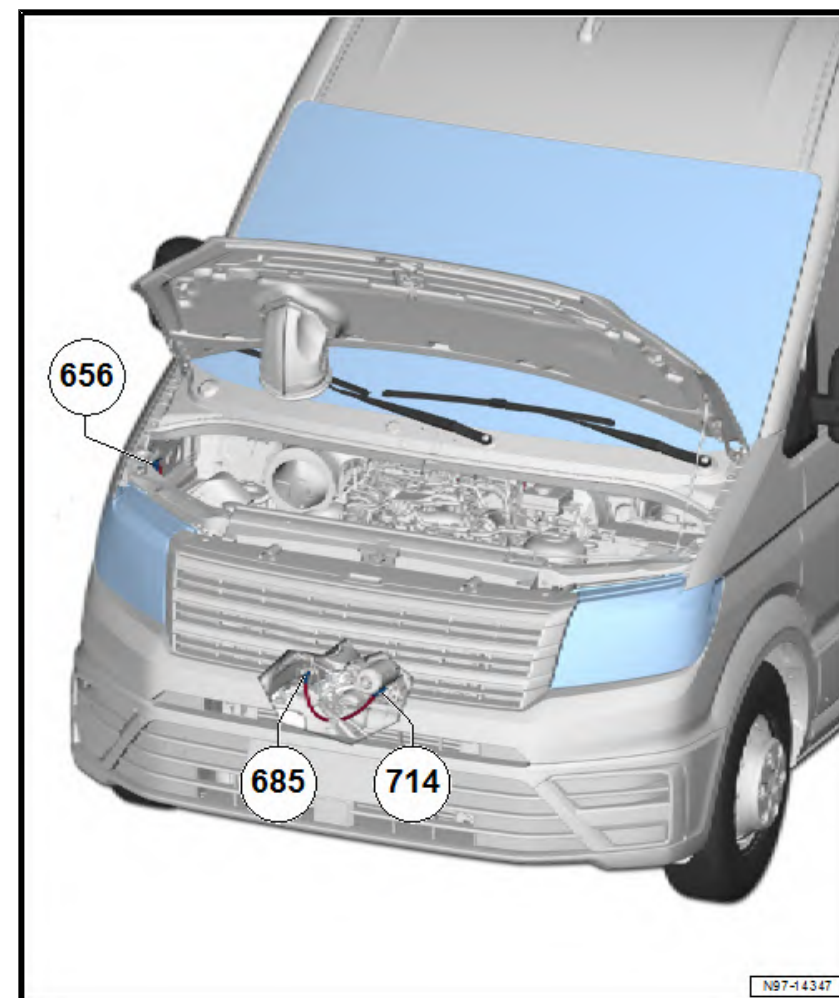

1.1.3 Earth point, on left in engine compartment

12 - Earth point, on left in engine compartment

- ☐ Specified torque -9Nm-

640 - Earth point 2, left in engine compartment


- ☐ Specified torque -9Nm-

641 - Earth point 3, left in engine compartment

- ☐ Specified torque -9Nm-

655 - Earth point, on left headlight

- ☐ Specified torque -20Nm-

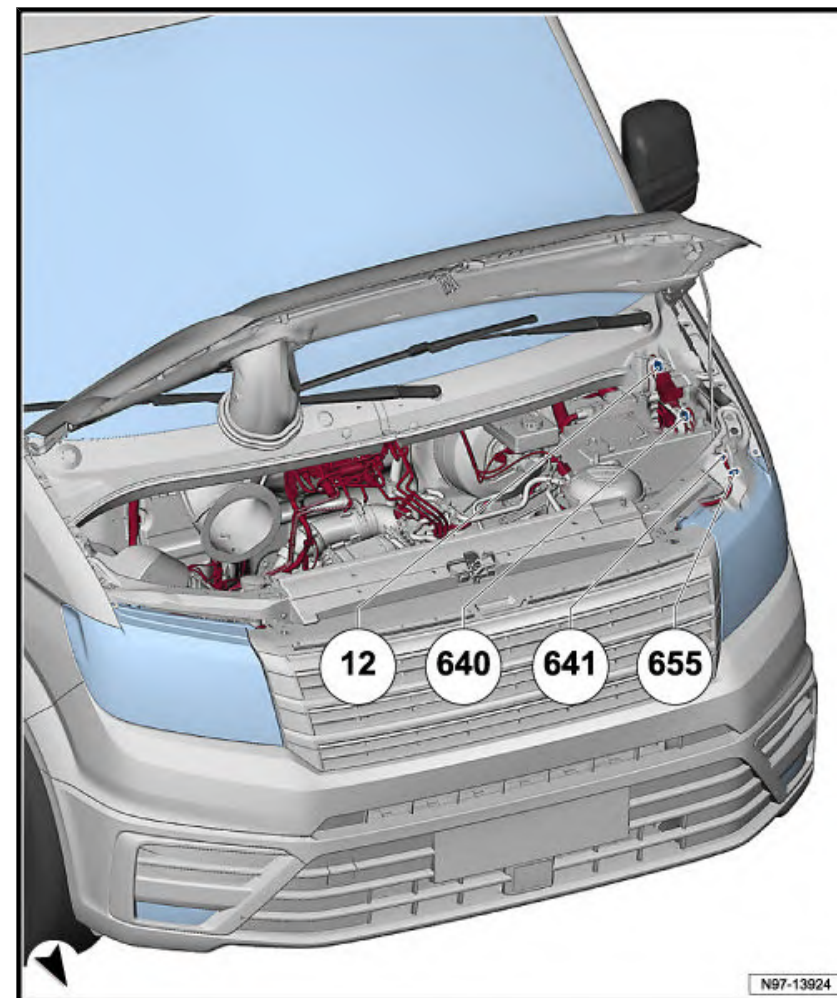

Volkswagen Technical Site: <https://vwts.ru>

1.1.4 Earth point of engine room, bottom view

14 - Earth point, on gearbox

- Specified torque -20Nm-



Only models with length-obstructed engine

671 - Earth point 1, on front of left longitudinal member


- Specified torque -9Nm-

686 - Earth point 2, on front of right longitudinal member

- Specified torque -20Nm-



Only models with length-obstructed engine

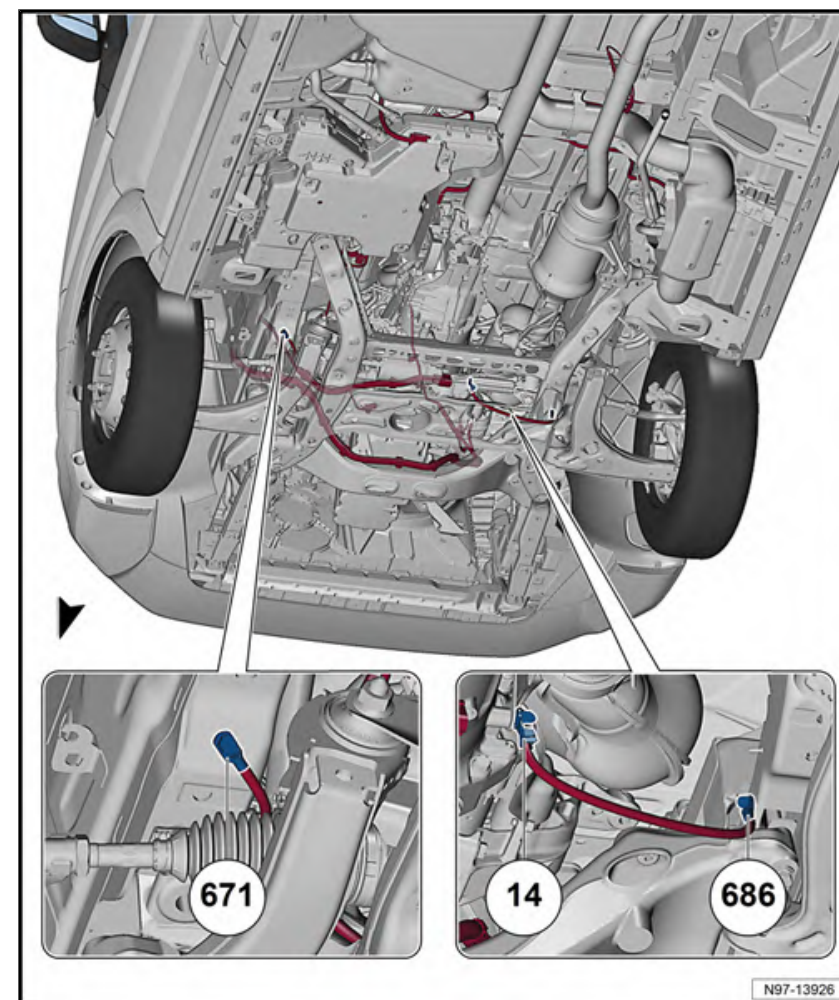

1.2 Earth points in interior

1.2.1 Earth points in interior, view from left

43 - Earth point, lower part of right A-pillar

- ☐ Specified torque -9Nm-

77 - Earth point, lower part of left B-pillar

- ☐ Specified torque -9Nm-

602 - Earth point, in front left footwell

- ☐ Specified torque -20Nm-
- ☐ Battery connection



Note

Earth point can be bolted or inserted

638 - Earth point, on right A-pillar


- ☐ Specified torque -9Nm-

687 - Earth point 1, on centre tunnel

- ☐ Specified torque -9Nm-

688 - Earth point 2, on centre tunnel

- ☐ Specified torque -9Nm-

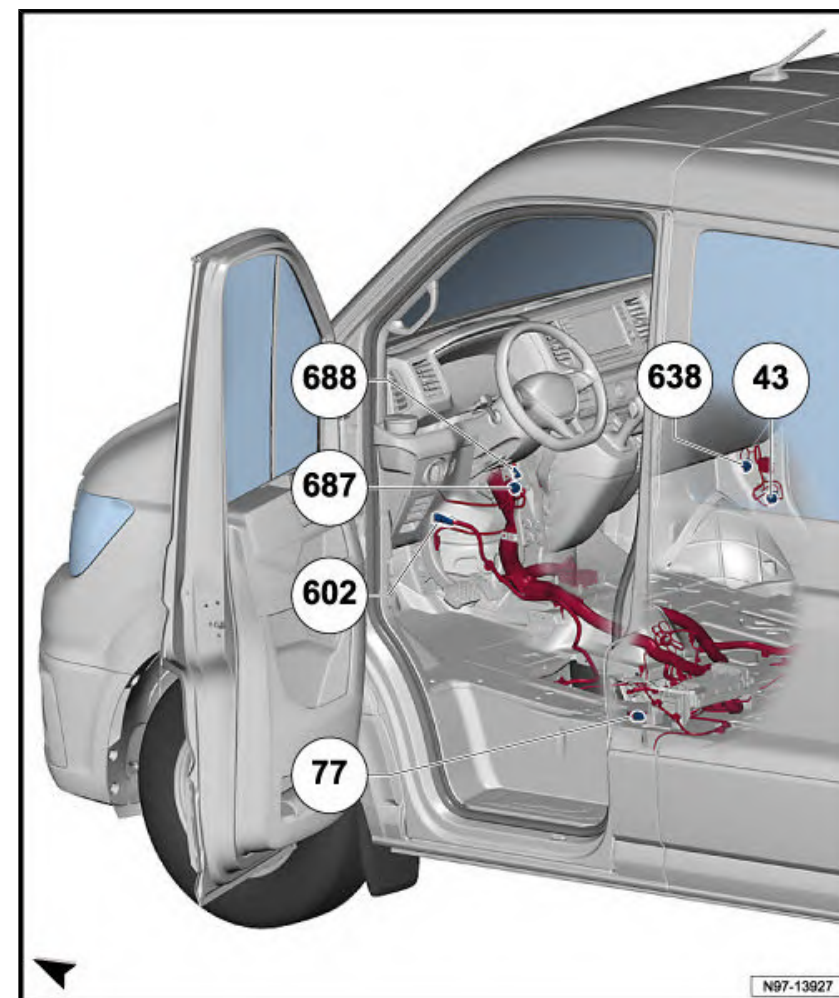

1.2.2 Earth points in interior, view from right

44 - Earth point, lower part of left A-pillar

- ☐ Specified torque -9Nm-

78 - Earth point, lower part of right B-pillar

- ☐ Specified torque -9Nm-

639 - Earth point, left A-pillar

- ☐ Specified torque -9Nm-

689 - Earth point, at front, central in roof


- ☐ Specified torque -9Nm-

734 - Earth point in front left door

- ☐ Specified torque -9Nm-

758 - Earth point 3, on centre tunnel

- ☐ Specified torque -9Nm-

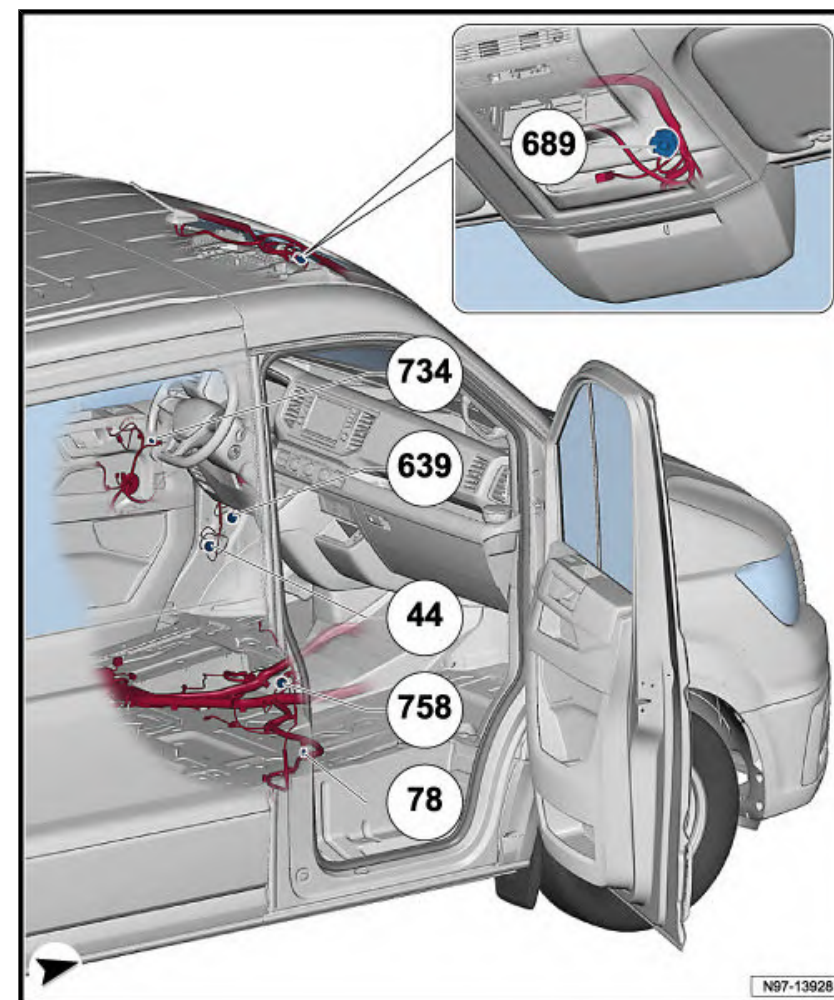

1.3 Earth points in rear part of vehicle

1.3.1 Panel/Combi earth point

667 - Earth point, on rear left of roof


- Specified torque -9Nm-

710 - Earth point 2 on rear left longitudinal member

- Specified torque -9Nm-

711 - Earth point 3 on rear left longitudinal member

- Specified torque -9Nm-

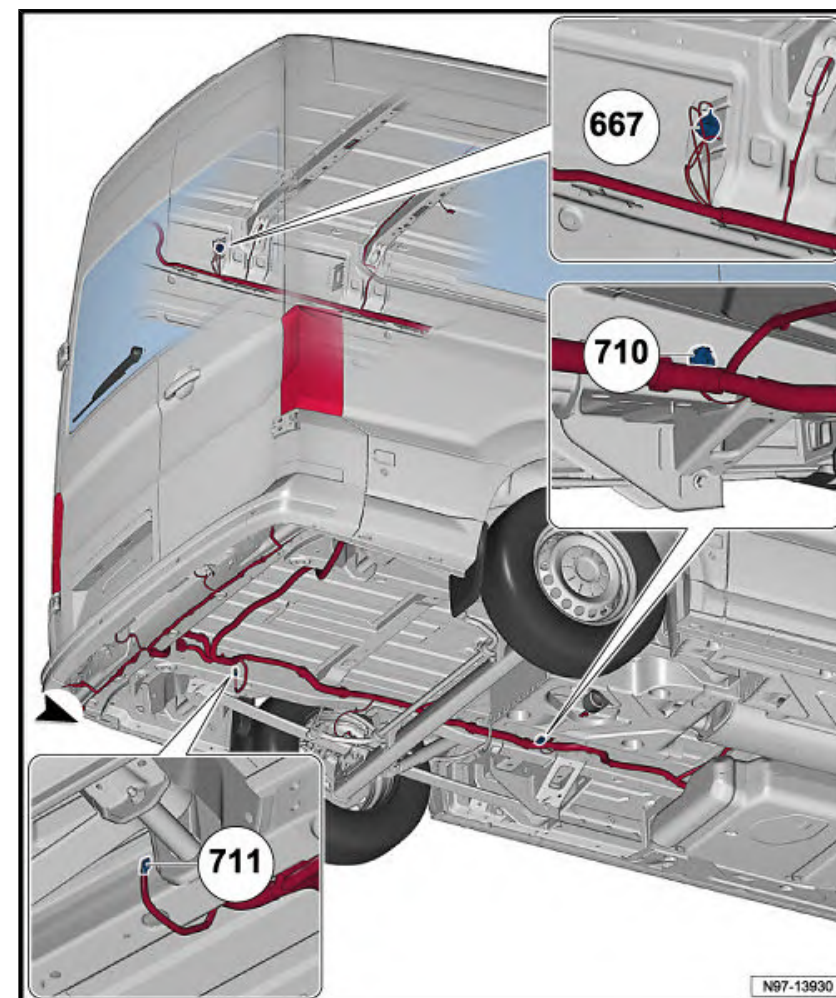


1.3.2 Platform earth point

65 - Earth point, on rear of left longitudinal member

- ❑ Specified torque -9Nm-

708 - Earth point 2 on rear right longitudinal member

- ❑ Specified torque -9Nm-

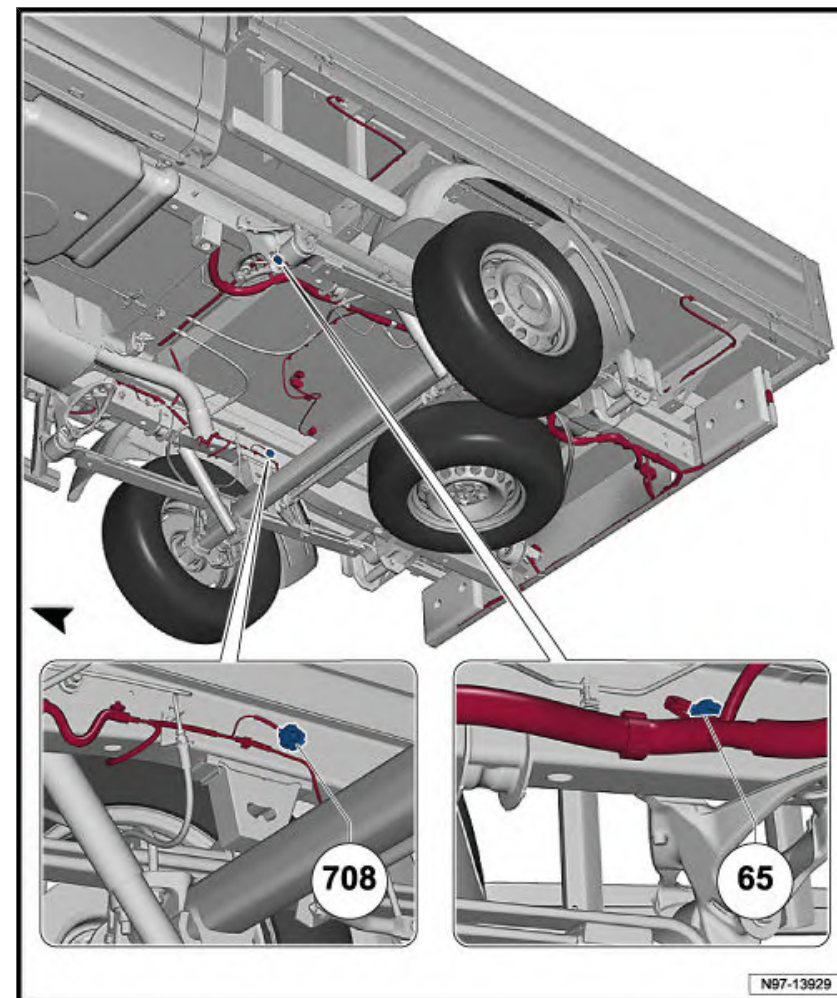

1 Fuses

Fitting location of fuse holder A -SA- ⇒ [page 1](#)

Fuse assignment of fuse holder A -SA- , from August 2016 ⇒ [page 3](#)

Fitting location of fuse holder B -SB- ⇒ [page 4](#)

Fuse assignment of fuse holder B -SB- , from August 2016 ⇒ [page 6](#)

Fuse assignment of fuse holder B -SB- , from May 2017 ⇒ [page 9](#)

Fitting location, fuse holder C -SC- , left-hand drive ⇒ [page 13](#)

Fitting location, fuse holder C -SC- , right-hand drive ⇒ [page 15](#)

Fuse assignment of fuse holder C -SC- , from August 2016 ⇒ [page 16](#)

Fuse assignment of fuse holder C -SC- , from May 2017 ⇒ [page 19](#)

Installation location of fuse holder D -SD- ⇒ [page 23](#)

Fuse assignment of fuse holder D -SD- , from August 2016 ⇒ [page 25](#)

Installation location of fuse holder F -SF- ⇒ [page 25](#)


Fuse assignment of fuse holder F -SF- , from August 2016 ⇒ [page 27](#)

Fitting location of fuse holder H -SH- ⇒ [page 27](#)

Fuse assignment of fuse holder H -SH- , from August 2016 ⇒ [page 29](#)

1.1 Fitting location of fuse holder A -SA-

A - Fuse holder A -SA-

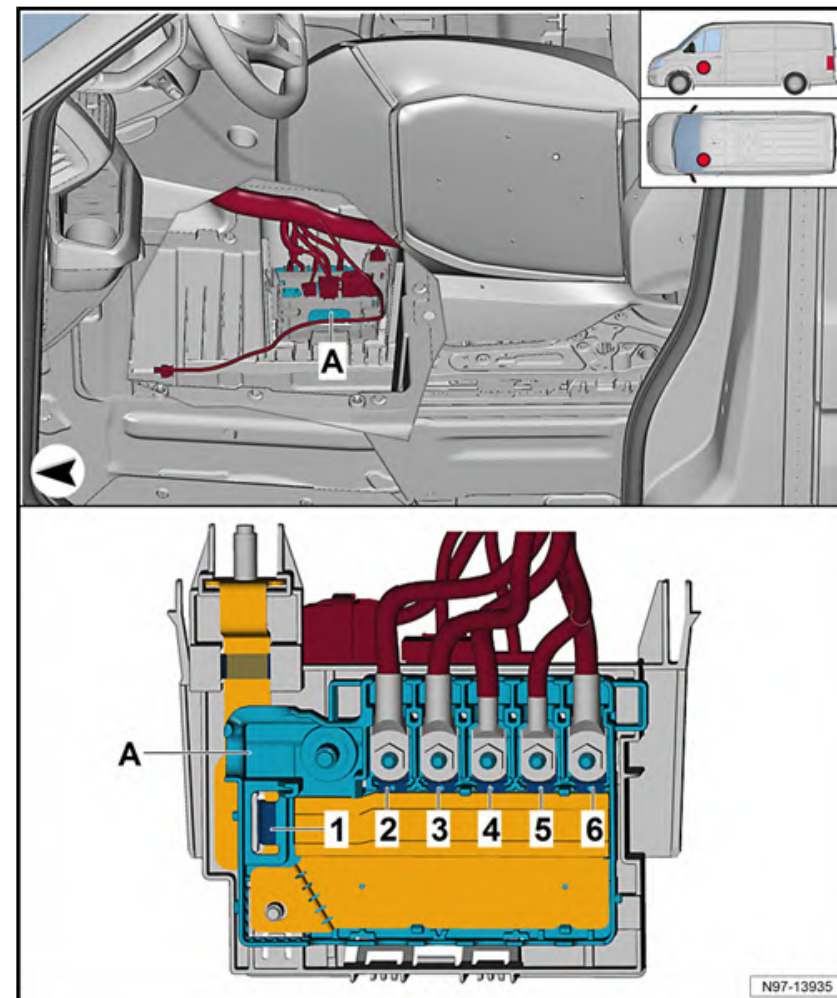

Multifuse strip fuse

⇒ Rep. Gr. 97 ; Removing and installing fuse holder



The fuse strip (multifuse) must be replaced as a complete unit.

Back to overview ⇒ [page 1](#)

1.2 Fuse assignment for fuse holder A -SA-

1.2.1 Fuse assignment of fuse holder A -SA- , from August 2016

N o.	- Current flow diagram designation	Nominal value	-	Function/component	Terminal
1	- Fuse 1 on fuse holder A -SA1-	-	-	not assigned	-
2	Fuse 2 on fuse holder A -SA2-	125A	-	Fuse holder B -SB- ◆ Fuse 1 on fuse holder B -SB1- - Fuse 17 on fuse holder B -SB17- ◆ ◆ Fuse 38 on fuse holder B -SB38- - Fuse 54 on fuse holder B -SB54-	30
3	- Fuse 3 on fuse holder A -SA3-	150A	-	Auxiliary air heater element -Z35-	15
4	- Fuse 4 on fuse holder A -SA4-	100A	-	Terminal 15 voltage supply relay -J329- ◆ Fuse 24 on fuse holder B -SB24- - Fuse 28 on fuse holder B -SB28- ◆ Fuse 29 on fuse holder B -SB29- - Fuse 37 on fuse holder B -SB37-	15
5	- Fuse 5 on fuse holder A -SA5-	100A	-	Fuse holder C -SC- ◆ Fuse 1 on fuse holder C -SC1- ◆ Fuse 3 on fuse holder C -SC3- ◆ Fuse 16 on fuse holder C -SC16- - fuse 20 on fuse holder C -SC20- ◆ Fuse 23 on fuse holder C -SC23- - fuse 28 on fuse holder C -SC28- ◆ Fuse 43 on fuse holder C -SC43- - fuse 45 on fuse holder C -SC45- ◆ Fuse 52 on fuse holder C -SC52-	30

N o.	- Current flow diagram designation	Nominal value	-	Function/component	Terminal
6	Fuse 6 on fuse holder A -SA6-	125A	-	Fuse holder C -SC- ♦ Fuse 2 on fuse holder C -SC2- ♦ Fuse 4 on fuse holder C -SC4- - fuse 14 on fuse holder C -SC14- ♦ Fuse 31 on fuse holder C -SC31- ♦ Fuse 38 on fuse holder C -SC38- - fuse 42 on fuse holder C -SC42- ♦ Fuse 46 on fuse holder C -SC46- ♦ Fuse 50 on fuse holder C -SC50- ♦ Fuse 52 on fuse holder C -SC52- - fuse 53 on fuse holder C -SC53- Heated rear window relay -J9- Terminal 15 voltage supply relay 2 -J681-	30

Back to overview ⇒ [page 1](#)

1.3 Fitting location of fuse holder B -SB-

B - Fuse holder B -SB-

Fuse colours for J-Case fuse:


- ◆ 50 A - red
- ◆ 40 A - green
- ◆ 30 A - pink

Fuse colours for ATO flat fuse:

- ◆ 40 A - orange
- ◆ 30 A - light green
- ◆ 25 A - natural (white)
- ◆ 20 A - yellow
- ◆ 15 A - light blue
- ◆ 10 A - red
- ◆ 7.5 A - brown
- ◆ 5 A - light brown
- ◆ 1A - black

Fuse colours, for mini fuses:

- ◆ 20 A - yellow
- ◆ 15 A - light blue
- ◆ 10 A - red
- ◆ 7.5 A - brown
- ◆ 5 A - light brown
- ◆ 1A - black

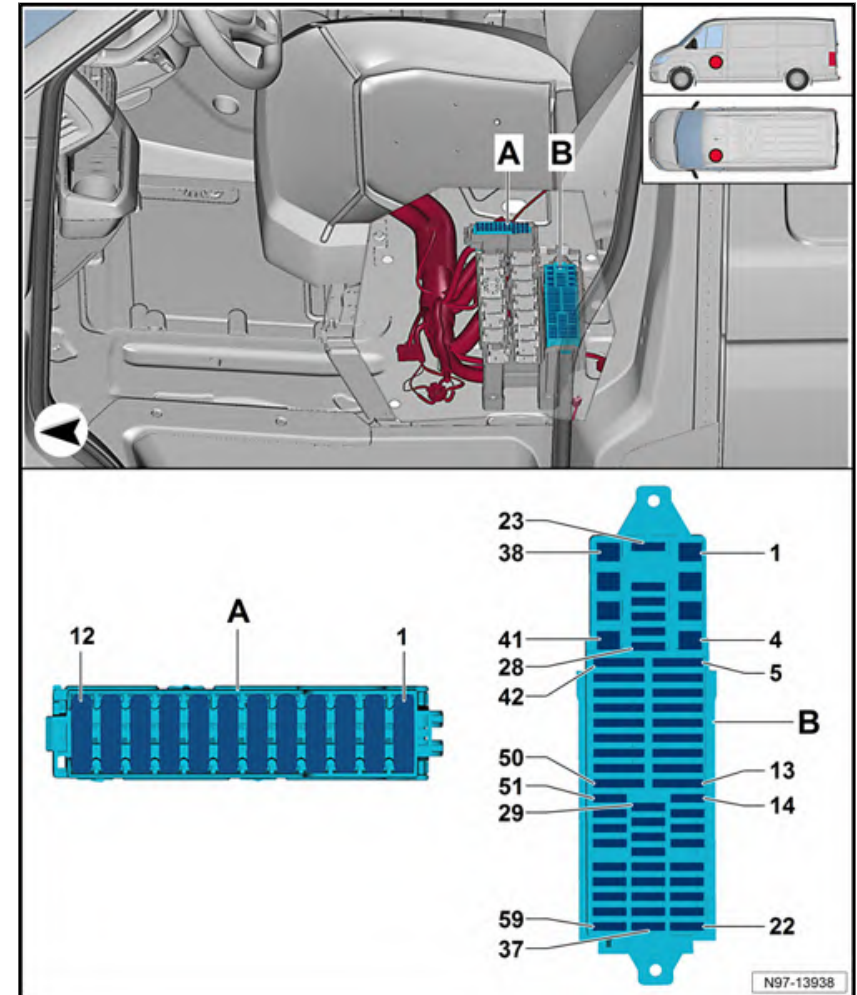

[Back to overview ⇒ page 1](#)

1.4 Fuse assignment for fuse holder B -SB-

1.4.1 Fuse assignment of fuse holder B -SB- , from August 2016

N o.	- Current flow diagram designation	Nominal value	-	Function/component	Terminal
1	- Fuse 1 on fuse holder B -SB1-	40A	-	Control unit for supplementary blower for air conditioning -J1144-	30
2	- Fuse 2 on fuse holder B -SB2-	40A	-	Fresh air blower control unit -J126-	30
3	- Fuse 3 on fuse holder B -SB3-	40A	-	Control unit for supplementary blower 2 for air conditioning -J1145-	30
4	- Fuse 4 on fuse holder B -SB4-	50A	-	Heated windscreen relay -J47- ◆ Heated windscreen -Z2-	30
5	- Fuse 5 on fuse holder B -SB5-	15A	-	Heater and air conditioning controls -EX21-	30
6	- Fuse 6 on fuse holder B -SB6-	20A	-	12 V socket 4 -U20- ¹⁾ 12 V socket 5 -U26- ¹⁾ 12 V socket 6 -U33- ¹⁾ Fuse 7 on fuse holder D -SD7- ²⁾	30
7	- Fuse 7 on fuse holder B -SB7-	15A	-	Coupling point 3 for tail lift -TLBW3-	30
8	- Fuse 8 on fuse holder B -SB8-	30A	-	Special vehicle control unit -J608-	30
9	- Fuse 9 on fuse holder B -SB9-	20A	-	Battery charger, 230 or 110 Volt/12 Volt -A10- ¹⁾ 12 V socket -U5- ¹⁾ 12 V socket 2 -U18- ¹⁾ 12 V socket 3 -U19- ¹⁾ 12 V socket -UX3- ¹⁾	30
10	- Fuse 10 on fuse holder B -SB10-	20A	-	Auxiliary heater control unit -J364-	30
11	- Fuse 11 on fuse holder B -SB11-	30A	-	Coupling point 3 for 3-way tipper -TDSK3-	30
12	- Fuse 12 on fuse holder B -SB12-	15A	-	Switch-over relay 1 for roof ventilator -J180- ¹⁾ ◆ Roof ventilator -V3-	30
13	- Fuse 13 on fuse holder B -SB13-	-	-	not assigned	-
14	- Fuse 14 on fuse holder B -SB14-	10A	-	Tyre Pressure Monitoring System control unit -J502-	30
15	- Fuse 15 on fuse holder B -SB15-	10A	-	Selector lever sensors control unit -J587-	30

N o.	- Current flow diagram designation	Nominal value	-	Function/component	Terminal
16	- Fuse 16 on fuse holder B -SB16-	10A	-	Relay for reducing agent metering system -J963-	30
17	- Fuse 17 on fuse holder B -SB17-	10A	-	Circulation pump relay -J160- ♦ Circulation pump -V55-	30
18	- Fuse 18 on fuse holder B -SB18-	10A	-	Engine control unit -J623-	30
19	- Fuse 19 on fuse holder B -SB19-	-	-	not assigned	-
20	- Fuse 20 on fuse holder B -SB20-	-	-	not assigned	-
21	- Fuse 21 on fuse holder B -SB21-	-	-	not assigned	-
22	- Fuse 22 on fuse holder B -SB22-	-	-	not assigned	-
23	- Fuse 23 on fuse holder B -SB23-	-	-	not assigned	-
24	- Fuse 24 on fuse holder B -SB24-	10A	-	Headlight range control regulator -E102- Tachograph -G24- Front left headlight -MX1- Front right headlight -MX2- Diagnostic connection -U31- Auxiliary air heater element -Z35-	15
25	- Fuse 25 on fuse holder B -SB25-	15A	-	Rear left wing door window wiper motor -V92- ³⁾	15
26	- Fuse 26 on fuse holder B -SB26-	20A	-	Coupling point 3 for tail lift -TLBW3- ⁴⁾	15
27	- Fuse 27 on fuse holder B -SB27-	10A	-	Adaptive cruise control unit -J428- Blind Spot Monitor control unit -J1086- Blind Spot Monitor control unit 2 -J1087- Front camera for driver assist systems -R242-	15
28	- Fuse 28 on fuse holder B -SB28-	15A	-	Rear right wing door window wiper motor -V93- ²⁾	15
29	- Fuse 29 on fuse holder B -SB29-	10A	-	ABS control unit -J104-	15
30	- Fuse 30 on fuse holder B -SB30-	7.5A	-	Terminal 50 voltage supply relay -J682- Terminal 50 voltage supply relay 2 -J1104-	15
31	- Fuse 31 on fuse holder B -SB31-	10A	-	TCS and ESP button -E256- Rotary light switch -EX1- Reversing light switch -F4-	15

N o.	- Current flow diagram designation	Nominal value	-	Function/component	Terminal
32	- Fuse 32 on fuse holder B -SB32-	7.5A	-	Reverse warning beeper control unit -J1113-	15
33	- Fuse 33 on fuse holder B -SB33-	10A	-	Tachograph -G24- ⁶⁾ Air quality sensor -G238- ⁵⁾ Pressure sender for refrigerant circuit -G805- ⁵⁾ 12-pin connector -T12s- ⁶⁾	15
34	- Fuse 34 on fuse holder B -SB34-	7.5A	-	Warning lamp for airbag deactivated on front passenger side -K145- Airbag control unit -J234-	15
35	- Fuse 35 on fuse holder B -SB35-	10A	-	Parking aid control unit -J446-	15
36	- Fuse 36 on fuse holder B -SB36-	-	-	not assigned	-
37	- Fuse 37 on fuse holder B -SB37-	7.5A	-	Relay for special installations, terminal 15 -J821-	15
38	- Fuse 38 on fuse holder B -SB38-	30A	-	Terminal 50 voltage supply relay -J682- Terminal 50 voltage supply relay 2 -J1104-	30
39	- Fuse 39 on fuse holder B -SB39-	-	-	not assigned	-
40	- Fuse 40 on fuse holder B -SB40-	40A	-	Warm air blower control unit -J350-	30
41	- Fuse 41 on fuse holder B -SB41-	50A	-	Heated windscreen relay 2 -J611- ♦ Heated windscreen -Z2-	30
42	- Fuse 42 on fuse holder B -SB42-	30A	-	Special vehicle control unit -J608-	30
43	- Fuse 43 on fuse holder B -SB43-	30A	-	Special vehicle control unit -J608-	30
44	- Fuse 44 on fuse holder B -SB44-	30A	-	Trailer detector control unit -J345-	30
45	- Fuse 45 on fuse holder B -SB45-	30A	-	Trailer detector control unit -J345-	30
46	- Fuse 46 on fuse holder B -SB46-	30A	-	Trailer detector control unit -J345-	30
47	- Fuse 47 on fuse holder B -SB47-	30A	-	Trailer detector control unit -J345-	30
48	- Fuse 48 on fuse holder B -SB48-	30A	-	Control unit for reducing agent heater -J891-	30
49	- Fuse 49 on fuse holder B -SB49-	30A	-	Special vehicle control unit -J608-	30

N o.	- Current flow diagram designation	Nominal value	-	Function/component	Terminal
50	- Fuse 50 on fuse holder B -SB50-	30A	-	Fuel pump relay -J17- ♦ Fuel delivery unit -GX1-	30
51	- Fuse 51 on fuse holder B -SB51-	10A	-	12-pin connector -T12s- ⁶⁾	30
52	- Fuse 52 on fuse holder B -SB52-	10A	-	Engine control unit -J623-	30
53	- Fuse 53 on fuse holder B -SB53-	7.5A	-	Battery regulation control unit -J840-	30
54	- Fuse 54 on fuse holder B -SB54-	-	-	not assigned	-
55	- Fuse 55 on fuse holder B -SB55-	-	-	not assigned	-
56	- Fuse 56 on fuse holder B -SB56-	-	-	not assigned	-
57	- Fuse 57 on fuse holder B -SB57-	-	-	not assigned	-
58	- Fuse 58 on fuse holder B -SB58-	-	-	not assigned	-
59	- Fuse 59 on fuse holder B -SB59-	-	-	not assigned	-

1) Only models with no second battery

2) Only models with second battery

3) Only panel van and Kombi models

4) According to equipment

5) Only models with air conditioning system

6) Only models with telematics

[Back to overview](#) ⇒ [page 1](#)

1.4.2 Fuse assignment for fuse holder B -SB- , from May 2017

N o.	- Current flow diagram designation	Nominal value	-	Function/component	Terminal
1	- Fuse 1 on fuse holder B -SB1-	40A	-	Control unit for supplementary blower for air conditioning -J1144-	30

N o.	- Current flow diagram designation	Nominal value	-	Function/component	Terminal
2	- Fuse 2 on fuse holder B -SB2-	60A	-	DC/AC converter with socket, 12 V - 230 V -U13-	30
3	- Fuse 3 on fuse holder B -SB3-	40A	-	Control unit for supplementary blower 2 for air conditioning -J1145-	30
4	- Fuse 4 on fuse holder B -SB4-	50A	-	Heated windscreen relay -J47- ◆ Heated windscreen -Z2-	30
5	- Fuse 5 on fuse holder B -SB5-	15A	-	Heater and air conditioning controls -EX21-	30
6	- Fuse 6 on fuse holder B -SB6-	20A	-	12 V socket 4 -U20- ¹⁾ 12 V socket 5 -U26- ¹⁾ 12 V socket 6 -U33- ¹⁾ Fuse 7 on fuse holder D -SD7- ²⁾	30
7	- Fuse 7 on fuse holder B -SB7-	15A	-	Coupling point 3 for tail lift -TLBW3-	30
8	- Fuse 8 on fuse holder B -SB8-	30A	-	Special vehicle control unit -J608-	30
9	- Fuse 9 on fuse holder B -SB9-	20A	-	Battery charger, 230 or 110 Volt/12 Volt -A10- ¹⁾ 12 V socket -U5- ¹⁾ 12 V socket 2 -U18- ¹⁾ 12 V socket 3 -U19- ¹⁾ 12 V socket -UX3- ¹⁾ Fuse 5 on fuse holder D -SD5- ²⁾	30
10	- Fuse 10 on fuse holder B -SB10-	20A	-	Auxiliary heater control unit -J364-	30
11	- Fuse 11 on fuse holder B -SB11-	20A 30A	-	Control unit for front right massage seat -J804- ⁴⁾ Coupling point 3 for 3-way tipper -TDSK3- ^{4) 7)}	30
12	- Fuse 12 on fuse holder B -SB12-	15A	-	Switch-over relay 1 for roof ventilator -J180- ¹⁾ ◆ Roof ventilator -V3-	30
13	- Fuse 13 on fuse holder B -SB13-	20A	-	Control unit for front left massage seat -J803-	30
14	- Fuse 14 on fuse holder B -SB14-	10A	-	Tyre Pressure Monitoring System control unit -J502-	30
15	- Fuse 15 on fuse holder B -SB15-	10A	-	Selector lever sensors control unit -J587-	30
16	- Fuse 16 on fuse holder B -SB16-	10A	-	Relay for reducing agent metering system -J963-	30
17	- Fuse 17 on fuse holder B -SB17-	10A	-	Circulation pump relay -J160- ◆ Circulation pump -V55-	30
18	- Fuse 18 on fuse holder B -SB18-	10A	-	Engine control unit -J623-	30

N o.	- Current flow diagram designation	Nominal value	-	Function/component	Terminal
19	- Fuse 19 on fuse holder B -SB19-	-	-	not assigned	-
20	- Fuse 20 on fuse holder B -SB20-	-	-	not assigned	-
21	- Fuse 21 on fuse holder B -SB21-	15A	-	Rear left wing door window wiper motor -V92- ³⁾	15
22	- Fuse 22 on fuse holder B -SB22-	-	-	not assigned	-
23	- Fuse 23 on fuse holder B -SB23-	-	-	not assigned	-
24	- Fuse 24 on fuse holder B -SB24-	10A	-	Headlight range control regulator -E102- Tachograph -G24- Front left headlight -MX1- Front right headlight -MX2- Diagnostic connection -U31- Auxiliary air heater element -Z35-	15
25	- Fuse 25 on fuse holder B -SB25-	15A	-	Fuse 21 on fuse holder B -SB21- Fuse 58 on fuse holder B -SB58-	15
26	- Fuse 26 on fuse holder B -SB26-	20A	-	Coupling point 3 for tail lift -TLBW3- ⁴⁾ Coupling point 3 for 3-way tipper -TDSK3- ^{4) 8)}	15
27	- Fuse 27 on fuse holder B -SB27-	10A	-	Adaptive cruise control unit -J428- Blind Spot Monitor control unit -J1086- Blind Spot Monitor control unit 2 -J1087- Front camera for driver assist systems -R242-	15
28	- Fuse 28 on fuse holder B -SB28-	-	-		-
29	- Fuse 29 on fuse holder B -SB29-	10A	-	ABS control unit -J104-	15
30	- Fuse 30 on fuse holder B -SB30-	7.5A	-	Clutch position sender -G476- Starter relay 1 -J906- Starter relay 2 -J907-	15
31	- Fuse 31 on fuse holder B -SB31-	10A	-	TCS and ESP button -E256- Rotary light switch -EX1- Reversing light switch -F4-	15
32	- Fuse 32 on fuse holder B -SB32-	7.5A	-	Reverse warning beeper control unit -J1113-	15
33	- Fuse 33 on fuse holder B -SB33-	10A	-	Air quality sensor -G238- ⁵⁾ Pressure sender for refrigerant circuit -G805- ⁵⁾ 12-pin connector -T12s- ⁶⁾	15

N o.	- Current flow diagram designation	Nominal value	-	Function/component	Terminal
34	- Fuse 34 on fuse holder B -SB34-	7.5A	-	Warning lamp for airbag deactivated on front passenger side -K145- Airbag control unit -J234-	15
35	- Fuse 35 on fuse holder B -SB35-	10A	-	Parking aid control unit -J446-	15
36	- Fuse 36 on fuse holder B -SB36-	-	-	not assigned	-
37	- Fuse 37 on fuse holder B -SB37-	10A	-	Relay for special installations, terminal 15 -J821-	15
38	- Fuse 38 on fuse holder B -SB38-	30A	-	Starter relay 1 -J906- Starter relay 2 -J907-	30
39	- Fuse 39 on fuse holder B -SB39-	-	-	not assigned	-
40	- Fuse 40 on fuse holder B -SB40-	40A	-	Warm air blower control unit -J350-	30
41	- Fuse 41 on fuse holder B -SB41-	50A	-	Heated windscreen relay 2 -J611- ♦ Heated windscreen -Z2-	30
42	- Fuse 42 on fuse holder B -SB42-	30A	-	Special vehicle control unit -J608-	30
43	- Fuse 43 on fuse holder B -SB43-	30A	-	Special vehicle control unit -J608-	30
44	- Fuse 44 on fuse holder B -SB44-	30A	-	Trailer detector control unit -J345-	30
45	- Fuse 45 on fuse holder B -SB45-	30A	-	Trailer detector control unit -J345-	30
46	- Fuse 46 on fuse holder B -SB46-	30A	-	Trailer detector control unit -J345-	30
47	- Fuse 47 on fuse holder B -SB47-	30A	-	Trailer detector control unit -J345-	30
48	- Fuse 48 on fuse holder B -SB48-	30A	-	Control unit for reducing agent heater -J891-	30
49	- Fuse 49 on fuse holder B -SB49-	30A	-	Special vehicle control unit -J608-	30
50	- Fuse 50 on fuse holder B -SB50-	30A	-	Fuel pump relay -J17- ♦ Fuel delivery unit -GX1-	30
51	- Fuse 51 on fuse holder B -SB51-	10A	-	12-pin connector -T12s- ⁶⁾	30

N o.	- Current flow diagram designation	Nominal value	-	Function/component	Terminal
52	- Fuse 52 on fuse holder B -SB52-	10A	-	Engine control unit -J623-	30
53	- Fuse 53 on fuse holder B -SB53-	7.5A	-	Battery regulation control unit -J840-	30
54	- Fuse 54 on fuse holder B -SB54-	-	-	not assigned	-
55	- Fuse 55 on fuse holder B -SB55-	-	-	not assigned	-
56	- Fuse 56 on fuse holder B -SB56-	-	-	not assigned	-
57	- Fuse 57 on fuse holder B -SB57-	-	-	not assigned	-
58	- Fuse 58 on fuse holder B -SB58-	15A	-	Rear right wing door window wiper motor -V93- ³⁾	15
59	- Fuse 59 on fuse holder B -SB59-	-	-	not assigned	-

1) Only models with no second battery

2) Only models with second battery

3) Only panel van and Kombi models

4) According to equipment

5) Only models with air conditioning system

6) Only models with telematics

7) Up to July 2017

8) from June 2017

Back to overview ⇒ [page 1](#)

1.5 Fitting location of fuse holder C -SC-

1.5.1 Fitting location of fuse holder C -SC- , LHD models

A - Fuse holder C -SC-

Fuse colours for J-Case fuse:


- ◆ 50 A - red
- ◆ 40 A - green
- ◆ 30 A - pink

Fuse colours for ATO flat fuse:

- ◆ 40 A - orange
- ◆ 30 A - light green
- ◆ 25 A - natural (white)
- ◆ 20 A - yellow
- ◆ 15 A - light blue
- ◆ 10 A - red
- ◆ 7.5 A - brown
- ◆ 5 A - light brown
- ◆ 1A - black

Fuse colours, for mini fuses:

- ◆ 20 A - yellow
- ◆ 15 A - light blue
- ◆ 10 A - red
- ◆ 7.5 A - brown
- ◆ 5 A - light brown
- ◆ 1A - black

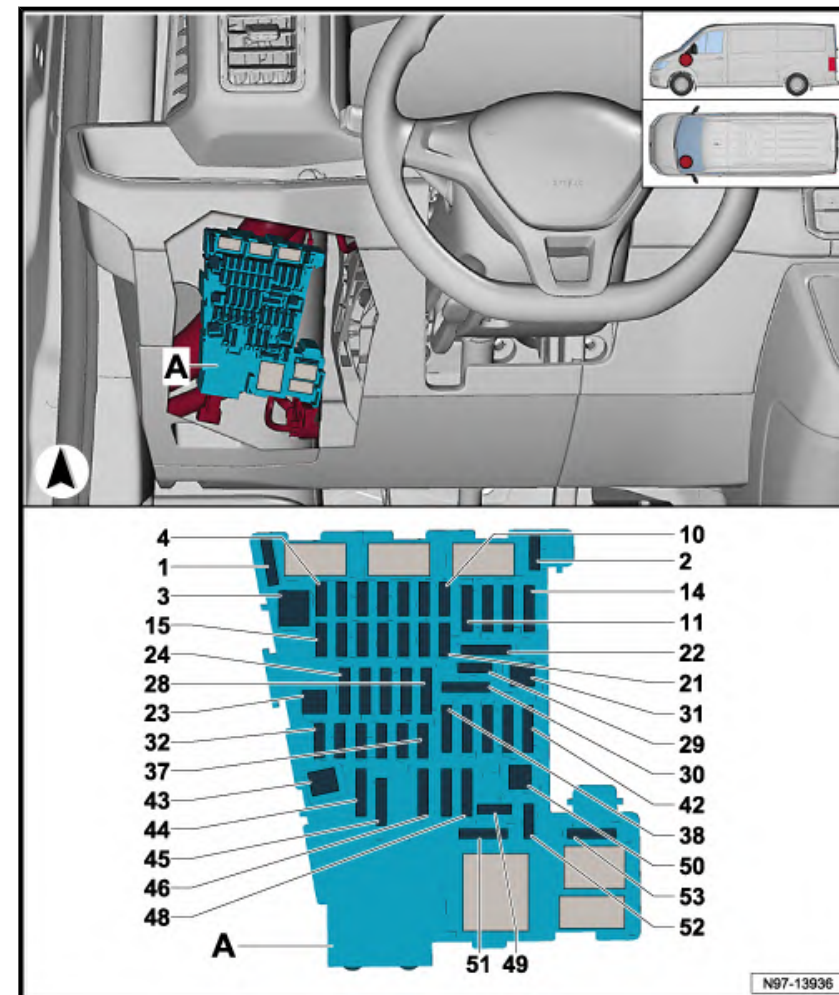


1.5.2 Fitting location of fuse holder C -SC- , RHD models

Fuse colours for J-Case fuse:

- Fuse colours for ATO flat fuse:**

- Fuse colours, for mini fuses:**

- ◆ 20 A - yellow
- ◆ 15 A - light blue
- ◆ 10 A - red
- ◆ 7.5 A - brown
- ◆ 5 A - light brown
- ◆ 1A - black



[Back to overview ⇒ page 1](#)

1.6 Fuse assignment for fuse holder C -SC-

1.6.1 Fuse assignment of fuse holder C -SC-, from August 2016

N o.	- Current flow diagram designation	Nominal value	-	Function/component	Terminal
1	- Fuse 1 on fuse holder C -SC1-	30A	-	Wiper motor relay 1 -J368- Wiper motor relay 2 -J369-	30
2	- Fuse 2 on fuse holder C -SC2-	10A	-	Steering column electronics control unit -J527-	30
3	- Fuse 3 on fuse holder C -SC3-	50A	-	ABS control unit -J104-	30
4	- Fuse 4 on fuse holder C -SC4-	10A	-	Differential lock control unit -J187- ⁷⁾ All-wheel drive control unit -J492- ⁷⁾	30
5	- Fuse 5 on fuse holder C -SC5-	10A	-	Data bus diagnostic interface -J533-	30
6	- Fuse 6 on fuse holder C -SC6-	10A	-	Interior monitoring sensor -G273- Interior monitoring sensor 3 -G593- ¹⁾	30
7	- Fuse 7 on fuse holder C -SC7-	10A	-	Heated rear window relay -J9- Air conditioning system control unit -J301- Remote control receiver for auxiliary heater -R64-	30
8	- Fuse 8 on fuse holder C -SC8-	10A	-	Rotary light switch -EX1- Air humidity, rain and light sensor -G823- Diagnostic connection -U31-	30
9	- Fuse 9 on fuse holder C -SC9-	7.5A	-	Tachograph -G24-	30
10	- Fuse 10 on fuse holder C -SC10-	10A	-	Multimedia system operating unit -E380- ⁷⁾ Display unit for front information display and operating unit control unit -J685- ⁷⁾	30
11	- Fuse 11 on fuse holder C -SC11-	15A	-	Relay for special installations, terminal 15 -J821- ◆ Electrical terminal strip for external use -TV65-	30
12	- Fuse 12 on fuse holder C -SC12-	30A	-	Control unit 1 for information electronics -J794-	30
13	- Fuse 13 on fuse holder C -SC13-	15A	-	Automatic gearbox control unit -J217-	30
14	- Fuse 14 on fuse holder C -SC14-	15A	-	Reverse warning beeper control unit -J1113-	30
15	- Fuse 15 on fuse holder C -SC15-	-	-	not assigned	-
16	- Fuse 16 on fuse holder C -SC16-	7.5A	-	USB hub -R293-	30

N o.	- Current flow diagram designation	Nominal value	-	Function/component	Terminal
17	- Fuse 17 on fuse holder C -SC17-	10A	-	Dash panel insert -K- Emergency call module control unit and communication unit -J949-	30
18	- Fuse 18 on fuse holder C -SC18-	10A	-	Rear overhead view camera -R246- Reversing camera -R189- 4-pin connector -T4fh- ²⁾	30
19	- Fuse 19 on fuse holder C -SC19-	7.5A	-	Terminal 15 voltage supply relay 2 -J681-	30
20	- Fuse 20 on fuse holder C -SC20-	7.5A	-	Storage compartment with interface for mobile telephone -R265- Transmission and reception stabilisation control unit -R308-	30
21	- Fuse 21 on fuse holder C -SC21-	10A	-	Fuel pump relay -J17-	30
22	- Fuse 22 on fuse holder C -SC22-	20A	-	Heated rear window in left wing door -Z26- ³⁾	30
23	- Fuse 23 on fuse holder C -SC23-	40A	-	Onboard supply control unit -J519-	30
24	- Fuse 24 on fuse holder C -SC24-	7.5A	-	Alarm horn -H12-	30
25	- Fuse 25 on fuse holder C -SC25-	30A	-	Driver door control unit -J386- Rear right door control unit -J389-	30
26	- Fuse 26 on fuse holder C -SC26-	30A	-	Onboard supply control unit -J519-	30
27	- Fuse 27 on fuse holder C -SC27-	15A	-	ABS control unit -J104-	30
28	- Fuse 28 on fuse holder C -SC28-	25A	-	Electrical terminal strip for external use -TV65-	30
29	- Fuse 29 on fuse holder C -SC29-	-	-	not assigned	-
30	- Fuse 30 on fuse holder C -SC30-	20A	-	Heated rear window in right wing door -Z27- ³⁾	30
31	- Fuse 31 on fuse holder C -SC31-	40A	-	Onboard supply control unit -J519-	30
32	- Fuse 32 on fuse holder C -SC32-	10A	-	Brake light switch -F- Clutch position sender -G476-	87
33	- Fuse 33 on fuse holder C -SC33-	7.5A	-	Radiator fan -V7- Relay for reducing agent metering system -J963- ♦ Delivery unit for reducing agent metering system -GX19- ♦ Reducing agent quality sensor -G849-	87

N o.	- Current flow diagram designation	Nominal value	-	Function/component	Terminal
34	- Fuse 34 on fuse holder C -SC34-	15A	-	Air mass meter -G70- Lambda probe 1 before catalytic converter -GX10- Control unit for NOx sender -J583- Control unit for sensor electronics -J849- Control unit for NOx sender 2 -J881-	87
35	- Fuse 35 on fuse holder C -SC35-	10A	-	Fuel metering valve -N290-	87
36	- Fuse 36 on fuse holder C -SC36-	15A	-	Valve for oil pressure control -N428- Charge air cooling pump -V188- Pump for exhaust gas recirculation cooler -V400- Auxiliary pump for heating -V488-	87
37	- Fuse 37 on fuse holder C -SC37-	7.5A	-	Heater element for crankcase breather -N79-	87
38	- Fuse 38 on fuse holder C -SC38-	15A	-	Rotating light relay -J326-	30
39	- Fuse 39 on fuse holder C -SC39-	30A	-	Front passenger door control unit -J387- Rear right door control unit -J389-	30
40	- Fuse 40 on fuse holder C -SC40-	15A	-	Steering column electronics control unit -J527- 4)	30
41	- Fuse 41 on fuse holder C -SC41-	10A	-	Interior light relay -J602-	30
42	- Fuse 42 on fuse holder C -SC42-	40A	-	Onboard supply control unit -J519-	30
43	- Fuse 43 on fuse holder C -SC43-	30A	-	Onboard supply control unit -J519-	30
44	- Fuse 44 on fuse holder C -SC44-	15A	-	Horn relay -J413-	30
45	- Fuse 45 on fuse holder C -SC45-	20A	-	Front left lumbar support adjustment switch -E752- 5) Front right lumbar support adjustment switch -E753- 6)	30
46	- Fuse 46 on fuse holder C -SC46-	30A	-	DC/AC converter with socket, 12 V - 230 V -U13-	30
47	- Fuse 47 on fuse holder C -SC47-	30A	-	Engine control unit -J623-	87
48	- Fuse 48 on fuse holder C -SC48-	10A	-	Oil level and oil temperature sender -G266- Automatic glow period control unit -J179- Charge pressure control solenoid valve -N75- Exhaust flap valve -N220- Intake manifold flap valve -N316- Exhaust gas recirculation cooling bypass valve -N386-	87

N o.	- Current flow diagram designation	Nominal value	-	Function/component	Terminal
49	- Fuse 49 on fuse holder C -SC49-	10A	-	Radiator blind control motor -V544- Radiator blind control motor 2 -V550-	87
50	- Fuse 50 on fuse holder C -SC50-	-	-	not assigned	-
51	- Fuse 51 on fuse holder C -SC51-	-	-	not assigned	-
52	- Fuse 52 on fuse holder C -SC52-	15A	-	Rotating light control unit -J1114-	30
53	- Fuse 53 on fuse holder C -SC53-	-	-	not assigned	-

1) Only models with anti-theft alarm system and front and rear interior monitor

2) Only models with double cab/ dropside

3) Only panel van and Kombi models

4) Only models with multifunction steering wheel

5) Only left-hand drive models

6) Only right-hand drive models

7) Depending on equipment

[Back to overview](#) ⇒ [page 1](#)

1.6.2 Fuse assignment for fuse holder C -SC- , from May 2017

N o.	- Current flow diagram designation	Nominal value	-	Function/component	Terminal
1	- Fuse 1 on fuse holder C -SC1-	-	-	not assigned	-
2	- Fuse 2 on fuse holder C -SC2-	10A	-	Steering column electronics control unit -J527-	30
3	- Fuse 3 on fuse holder C -SC3-	50A	-	ABS control unit -J104-	30
4	- Fuse 4 on fuse holder C -SC4-	10A	-	Differential lock control unit -J187- ⁷⁾ All-wheel drive control unit -J492- ⁷⁾	30
5	- Fuse 5 on fuse holder C -SC5-	10A	-	Data bus diagnostic interface -J533-	30
6	- Fuse 6 on fuse holder C -SC6-	10A	-	Interior monitoring sensor -G273- Interior monitoring sensor 3 -G593- ¹⁾	30

N o.	- Current flow diagram designation	Nominal value	-	Function/component	Terminal
7	- Fuse 7 on fuse holder C -SC7-	10A	-	Heated rear window relay -J9- Air conditioning system control unit -J301- Remote control receiver for auxiliary heater -R64-	30
8	- Fuse 8 on fuse holder C -SC8-	10A	-	Rotary light switch -EX1- Air humidity, rain and light sensor -G823- Diagnostic connection -U31-	30
9	- Fuse 9 on fuse holder C -SC9-	7.5A	-	Tachograph -G24-	30
10	- Fuse 10 on fuse holder C -SC10-	10A	-	Multimedia system operating unit -E380- 7) Display unit for front information display and operating unit control unit -J685- 7)	30
11	- Fuse 11 on fuse holder C -SC11-	15A	-	Relay for special installations, terminal 15 -J821- ◆ Electrical terminal strip for external use -TV65-	30
12	- Fuse 12 on fuse holder C -SC12-	30A	-	Control unit 1 for information electronics -J794-	30
13	- Fuse 13 on fuse holder C -SC13-	15A	-	Automatic gearbox control unit -J217-	30
14	- Fuse 14 on fuse holder C -SC14-	15A	-	Reverse warning beeper control unit -J1113-	30
15	- Fuse 15 on fuse holder C -SC15-	-	-	not assigned	-
16	- Fuse 16 on fuse holder C -SC16-	7.5A	-	USB hub -R293-	30
17	- Fuse 17 on fuse holder C -SC17-	10A	-	Emergency call module control unit and communication unit -J949- Dash panel insert -K-	30
18	- Fuse 18 on fuse holder C -SC18-	10A	-	Reversing camera -R189- Camera for trailer manoeuvring system -R368- 4-pin connector -T4fh- 2)	30
19	- Fuse 19 on fuse holder C -SC19-	7.5A	-	Terminal 15 voltage supply relay 2 -J681-	30
20	- Fuse 20 on fuse holder C -SC20-	7.5A	-	Storage compartment with interface for mobile telephone -R265- Transmission and reception stabilisation control unit -R308-	30
21	- Fuse 21 on fuse holder C -SC21-	10A	-	Fuel pump relay -J17-	30
22	- Fuse 22 on fuse holder C -SC22-	20A	-	Heated rear window in left wing door -Z26- 3)	30
23	- Fuse 23 on fuse holder C -SC23-	40A	-	Onboard supply control unit -J519-	30

N o.	- Current flow diagram designation	Nominal value	-	Function/component	Terminal
24	- Fuse 24 on fuse holder C -SC24-	7.5A	-	Alarm horn -H12-	30
25	- Fuse 25 on fuse holder C -SC25-	30A	-	Driver door control unit -J386-	30
26	- Fuse 26 on fuse holder C -SC26-	30A	-	Onboard supply control unit -J519-	30
27	- Fuse 27 on fuse holder C -SC27-	30A	-	ABS control unit -J104-	30
28	- Fuse 28 on fuse holder C -SC28-	25A	-	Electrical terminal strip for external use -TV65-	30
29	- Fuse 29 on fuse holder C -SC29-	-	-	not assigned	-
30	- Fuse 30 on fuse holder C -SC30-	20A	-	Heated rear window in right wing door -Z27- ³⁾	30
31	- Fuse 31 on fuse holder C -SC31-	40A	-	Onboard supply control unit -J519-	30
32	- Fuse 32 on fuse holder C -SC32-	10A	-	Brake light switch -F-	87
33	- Fuse 33 on fuse holder C -SC33-	7.5A	-	Radiator fan control unit -J293- ♦ Radiator fan -V7- Radiator fan control unit 2 -J671- ⁷⁾ ♦ Radiator fan 2 -V177-	87
34	- Fuse 34 on fuse holder C -SC34-	15A	-	Air mass meter -G70- ⁷⁾ Lambda probe 1 before catalytic converter -GX10- Control unit for NOx sender -J583- Control unit for sensor electronics -J849- Control unit for NOx sender 2 -J881-	87
35	- Fuse 35 on fuse holder C -SC35-	10A	-	Fuel metering valve -N290-	87
36	- Fuse 36 on fuse holder C -SC36-	15A	-	Valve for oil pressure control -N428- Charge air cooling pump -V188- Pump for exhaust gas recirculation cooler -V400- Auxiliary pump for heating -V488-	87
37	- Fuse 37 on fuse holder C -SC37-	7.5A	-	Air mass meter -G70- ⁷⁾ Automatic glow period control unit -J179- Heater element for crankcase breather -N79-	87
38	- Fuse 38 on fuse holder C -SC38-	15A	-	Rotating light relay -J326-	30

N o.	- Current flow diagram designation	Nominal value	-	Function/component	Terminal
39	- Fuse 39 on fuse holder C -SC39-	30A	-	Front passenger door control unit -J387- Rear right door control unit -J389-	30
40	- Fuse 40 on fuse holder C -SC40-	15A	-	Steering column electronics control unit -J527- 4)	30
41	- Fuse 41 on fuse holder C -SC41-	10A	-	Interior light relay -J602-	30
42	- Fuse 42 on fuse holder C -SC42-	40A	-	Onboard supply control unit -J519-	30
43	- Fuse 43 on fuse holder C -SC43-	30A	-	Onboard supply control unit -J519-	30
44	- Fuse 44 on fuse holder C -SC44-	15A	-	Horn relay -J413-	30
45	- Fuse 45 on fuse holder C -SC45-	20A	-	Front left lumbar support adjustment switch -E752- 5) Front right lumbar support adjustment switch -E753- 6)	30
46	- Fuse 46 on fuse holder C -SC46-	30A	-	Wiper motor relay 1 -J368- Wiper motor relay 2 -J369-	30
47	- Fuse 47 on fuse holder C -SC47-	30A	-	Engine control unit -J623-	87
48	- Fuse 48 on fuse holder C -SC48-	10A	-	Oil level and oil temperature sender -G266- Charge pressure control solenoid valve -N75- Exhaust flap valve -N220- Intake manifold flap valve -N316- Exhaust gas recirculation cooling bypass valve -N386-	87
49	- Fuse 49 on fuse holder C -SC49-	10A	-	Relay for reducing agent metering system -J963- ◆ Reducing agent quality sensor -G849- ◆ Delivery unit for reducing agent metering system -GX19-	87
50	- Fuse 50 on fuse holder C -SC50-	40A	-	Fresh air blower control unit -J126-	30
51	- Fuse 51 on fuse holder C -SC51-	-	-	not assigned	-
52	- Fuse 52 on fuse holder C -SC52-	15A	-	Rotating light control unit -J1114-	30
53	- Fuse 53 on fuse holder C -SC53-	-	-	not assigned	-

1) Only models with anti-theft alarm system and front and rear interior monitor

- 2) Only models with double cab/ dropside
- 3) Only panel van and Kombi models
- 4) Only models with multifunction steering wheel
- 5) Only left-hand drive models
- 6) Only right-hand drive models
- 7) Depending on equipment

Back to overview ⇒ [page 1](#)

1.7 Fitting location of fuse holder D -SD-

A - Fuse holder D -SD-

Fuse colours for J-Case fuse:


- ◆ 50 A - red
- ◆ 40 A - green
- ◆ 30 A - pink

Fuse colours for ATO flat fuse:

- ◆ 40 A - orange
- ◆ 30 A - light green
- ◆ 25 A - natural (white)
- ◆ 20 A - yellow
- ◆ 15 A - light blue
- ◆ 10 A - red
- ◆ 7.5 A - brown
- ◆ 5 A - light brown
- ◆ 1A - black

Fuse colours, for mini fuses:

- ◆ 20 A - yellow
- ◆ 15 A - light blue
- ◆ 10 A - red
- ◆ 7.5 A - brown
- ◆ 5 A - light brown
- ◆ 1A - black

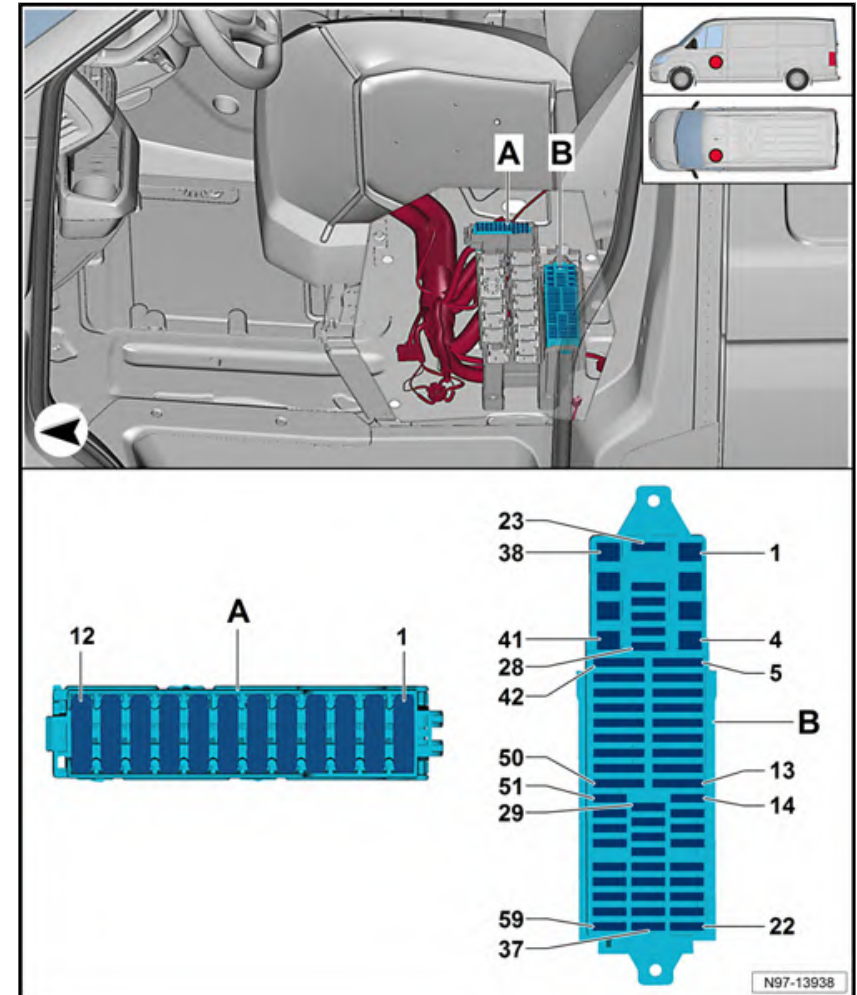

[Back to overview ⇒ page 1](#)

1.8 Fuse assignment for fuse holder D -SD-

1.8.1 Fuse assignment of fuse holder D -SD- , from August 2016

N o.	- Current flow diagram designation	Nominal value	-	Function/component	Terminal
1	- Fuse 1 on fuse holder D -SD1-	30A	-	Special vehicle control unit -J608- ¹⁾	30
2	- Fuse 2 on fuse holder D -SD2-	-	-	not assigned	-
3	- Fuse 3 on fuse holder D -SD3-	30A	-	Special vehicle control unit -J608- ¹⁾	30
4	- Fuse 4 on fuse holder D -SD4-	-	-	not assigned	-
5	- Fuse 5 on fuse holder D -SD5-	20A	-	12 V socket -U5- ¹⁾ 12 V socket 2 -U18- ¹⁾ 12 V socket 3 -U19- ¹⁾ 12 V socket -UX3- ¹⁾	30
6	- Fuse 6 on fuse holder D -SD6-	20A	-	Battery charger, 230 or 110 Volt/12 Volt -A10- ¹⁾	30
7	- Fuse 7 on fuse holder D -SD7-	20A	-	12 V socket 4 -U20- ¹⁾ 12 V socket 5 -U26- ¹⁾ 12 V socket 6 -U33- ¹⁾	30
8	- Fuse 8 on fuse holder D -SD8-	15A	-	Two-way radio socket -U4- ¹⁾ ²⁾	30
9	- Fuse 9 on fuse holder D -SD9-	15A	-	Rotating light relay -J326- ¹⁾	30
10	- Fuse 10 on fuse holder D -SD10-	15A	-	Rotating light control unit -J1114- ¹⁾	30
11	- Fuse 11 on fuse holder D -SD11-	15A	-	Switch-over relay 1 for roof ventilator -J180- ¹⁾ ◆ Roof ventilator -V3-	30
12	- Fuse 12 on fuse holder D -SD12-	25A	-	Auxiliary air heater control unit -J604-	30

¹⁾ Only models with second battery

²⁾ only for special vehicles

[Back to overview ⇒ page 1](#)

1.9 Fitting location of fuse holder F -SF-

B - Fuse holder F -SF-

Fuse colours for J-Case fuse:


- ◆ 50 A - red
- ◆ 40 A - green
- ◆ 30 A - pink

Fuse colours for ATO flat fuse:

- ◆ 40 A - orange
- ◆ 30 A - light green
- ◆ 25 A - natural (white)
- ◆ 20 A - yellow
- ◆ 15 A - light blue
- ◆ 10 A - red
- ◆ 7.5 A - brown
- ◆ 5 A - light brown
- ◆ 1A - black

Fuse colours, for mini fuses:

- ◆ 20 A - yellow
- ◆ 15 A - light blue
- ◆ 10 A - red
- ◆ 7.5 A - brown
- ◆ 5 A - light brown
- ◆ 1A - black

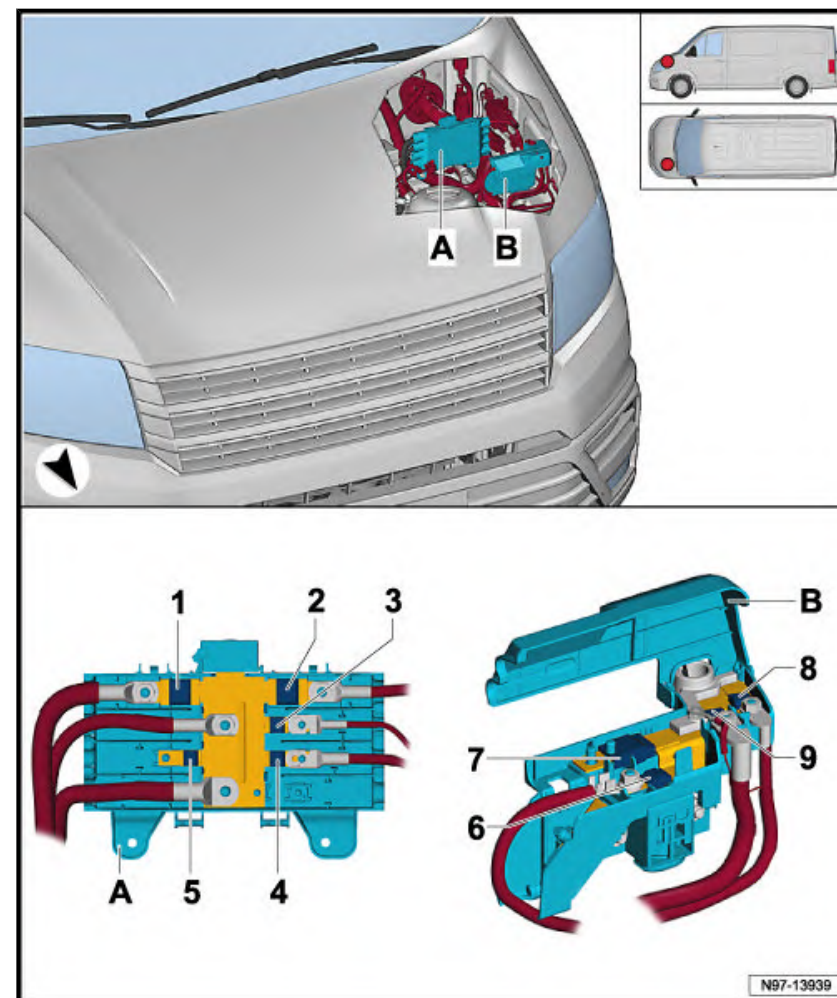

[Back to overview ⇒ page 1](#)

1.10 Fuse assignment for fuse holder F -SF-

1.10.1 Fuse assignment of fuse holder F -SF- , from August 2016

N o.	-	Current flow diagram designation	Nominal value	-	Function/component	Terminal
6	-	Fuse 1 on fuse holder F -SF1-	200A	-	not assigned	30
7	-	Fuse 2 on fuse holder F -SF2-	200A	-	Coupling point 1 for tail lift -TLBW1- ²⁾ Coupling point 1 for 3-way tipper -TDSK1- ²⁾	30
8	-	Fuse 3 on fuse holder F -SF3-	100A	-	Fuse holder D -SD- ¹⁾ ◆ Terminal 30	30
9	-	Fuse 4 on fuse holder F -SF4-	300A	-	not assigned	30

¹⁾ Only models with second battery

²⁾ According to equipment

[Back to overview ⇒ page 1](#)

1.11 Fitting location of fuse holder H -SH-

A - Fuse holder H -SH-

Fuse colours for J-Case fuse:


- ◆ 50 A - red
- ◆ 40 A - green
- ◆ 30 A - pink

Fuse colours for ATO flat fuse:

- ◆ 40 A - orange
- ◆ 30 A - light green
- ◆ 25 A - natural (white)
- ◆ 20 A - yellow
- ◆ 15 A - light blue
- ◆ 10 A - red
- ◆ 7.5 A - brown
- ◆ 5 A - light brown
- ◆ 1A - black

Fuse colours, for mini fuses:

- ◆ 20 A - yellow
- ◆ 15 A - light blue
- ◆ 10 A - red
- ◆ 7.5 A - brown
- ◆ 5 A - light brown
- ◆ 1A - black

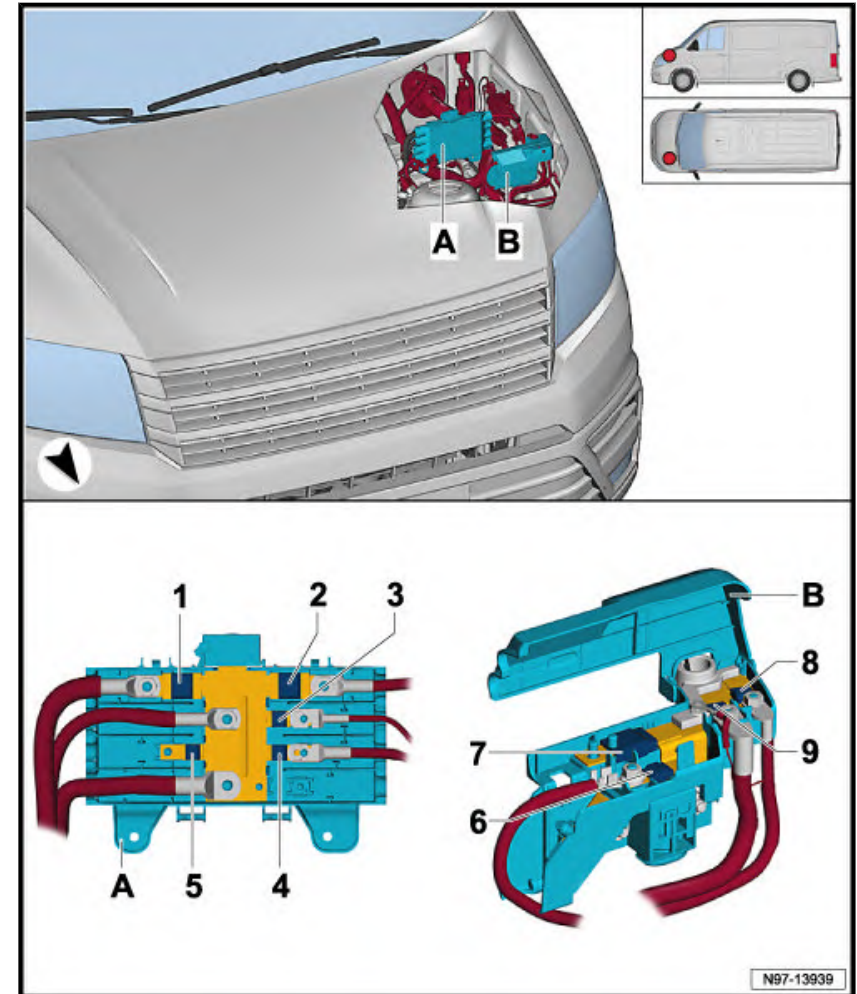

[Back to overview ⇒ page 1](#)

1.12 Fuse assignment for fuse holder H -SH-

1.12.1 Fuse assignment of fuse holder H -SH- , from August 2016

N o.	-	Current flow diagram designation	Nomina l value	-	Function/component	Termin al
1	-	Fuse 1 on fuse holder H -SH1-	250A / 400A	-	Alternator with voltage regulator -CX1-	30
2	-	Fuse 2 on fuse holder H -SH2-	300A	-	Second battery charging circuit relay -J713- ¹⁾ ♦ Second battery -A1-	30
3	-	Fuse 3 on fuse holder H -SH3-	60A	-	Automatic glow period control unit -J179-	30
4	-	Fuse 4 on fuse holder H -SH4-	70A / 100A	-	Radiator fan control unit -J293- ♦ Radiator fan -V7- Radiator fan control unit 2 -J671- ²⁾ ♦ Radiator fan 2 -V177-	30
5	-	Fuse 5 on fuse holder H -SH5-	125A	-	Power steering control unit -J500-	30

¹⁾ Only models with second battery

²⁾ According to equipment


[Back to overview ⇒ page 1](#)

1 Relays

1.1 Relay carrier 1 under seat on front left

1.1.1 Relay assignment

- 1 - not assigned
- 2 - Switch-over relay 2 for roof ventilator -J181-
- 3/1 - Fuel pump relay -J17-
- 3/2 - Relay for reducing agent metering system -J963-
- 4/1 - Starter relay 1 -J906-
- 4/2 - Starter relay 2 -J907-
- 5 - Terminal 15 voltage supply relay -J329-
- 6 - Reverse warning beeper control unit -J1113-
- 7 - not assigned
- 8 - Interior light relay -J602-
- 9 - not assigned
- 10 - Circulation pump relay -J160-
- 11 - Switch-over relay 1 for roof ventilator -J180-

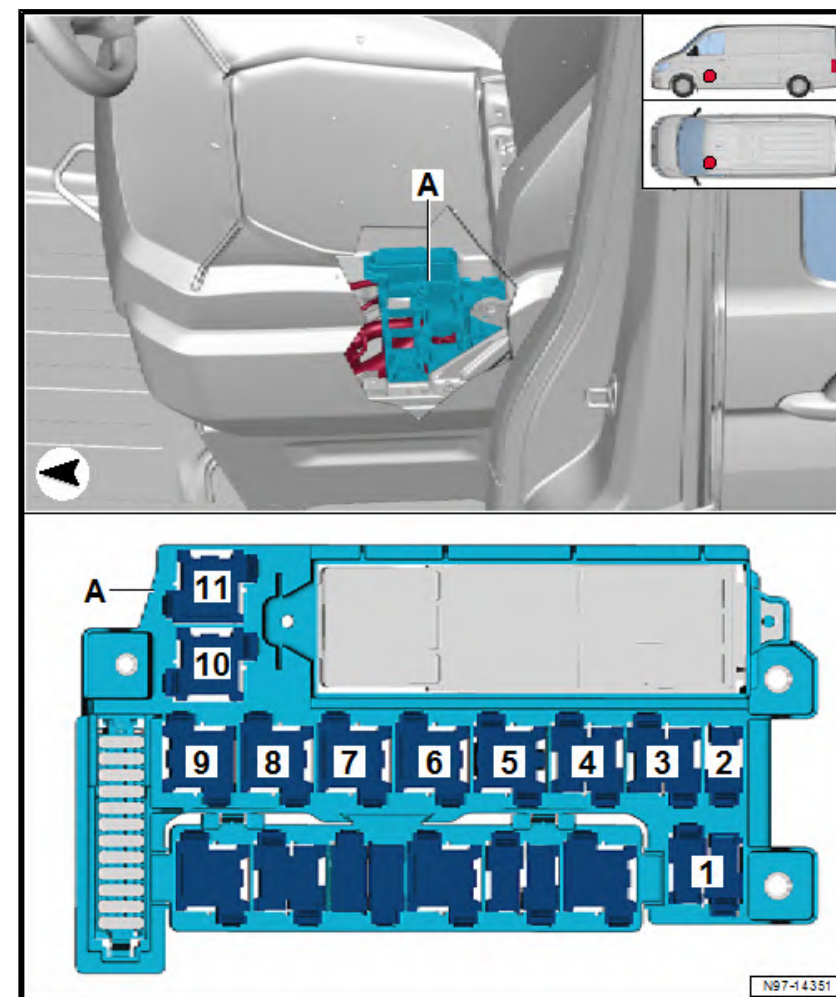

1.2 Relay carrier 2 under seat on front left

1.2.1 Relay assignment

1 - Rotating light control unit -J1114-

2/1 - Rotating light relay -J326-


2/2 - Relay for special installations, terminal 15 -J821-

3 - Relay for tail lift -J823-

4 - not assigned

5 - not assigned

6 - not assigned

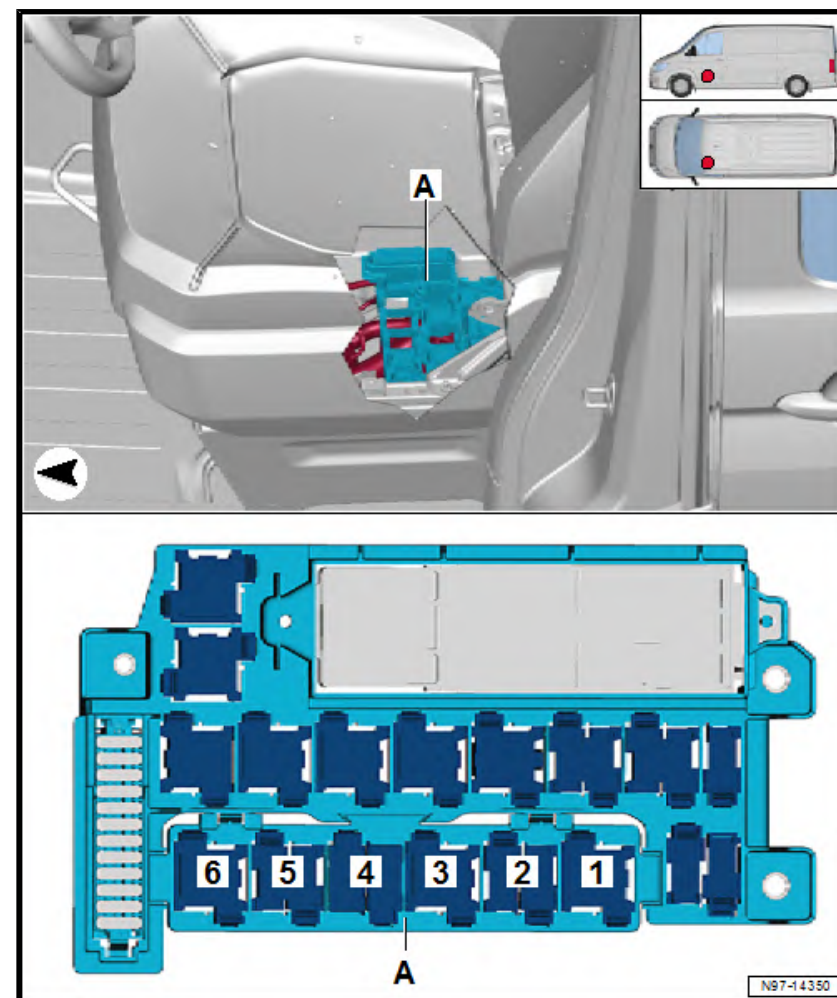

1.3 Relay carrier on left under dash panel (left-hand drive)

1.3.1 Relay assignment

1 - Horn relay -J413-


2 - not assigned

3 - not assigned

4 - Terminal 15 voltage supply relay 2 -J681-

5 - not assigned


6 - Heated rear window relay -J9-

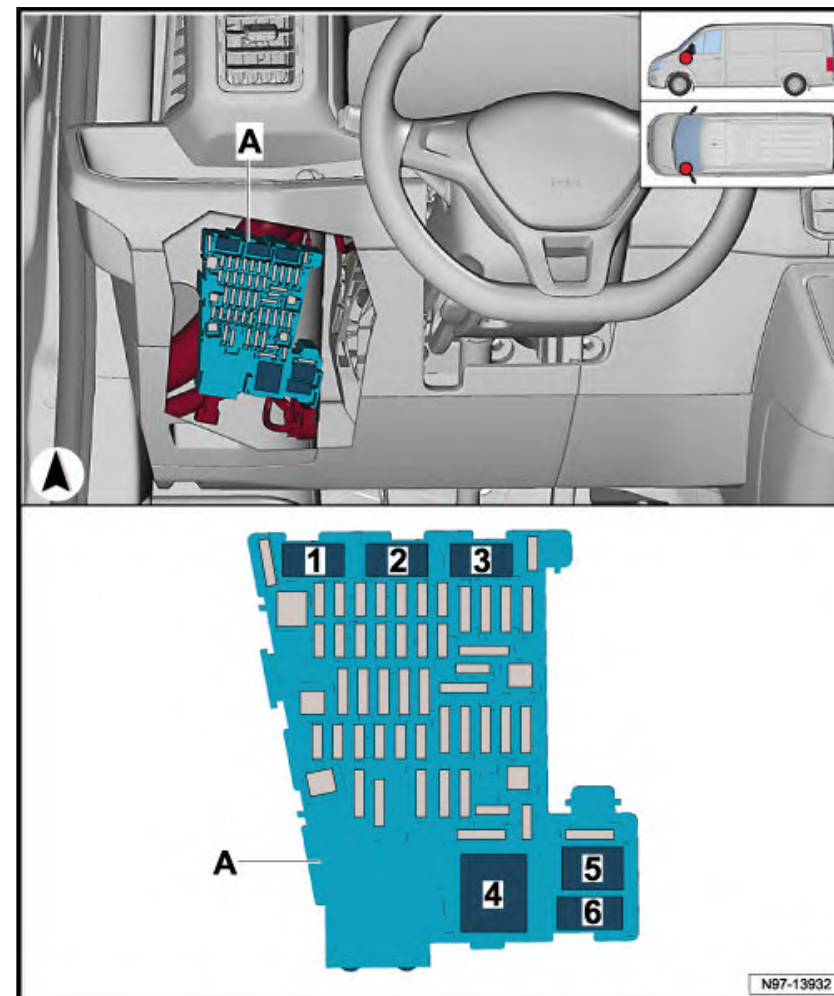

1.4 Relay carrier on right under dash panel (right-hand drive)

1.4.1 Relay assignment

- 1 - Horn relay -J413-
- 2 - not assigned
- 3 - not assigned
- 4 - Terminal 15 voltage supply relay 2 -J681-
- 5 - not assigned
- 6 - Heated rear window relay -J9-

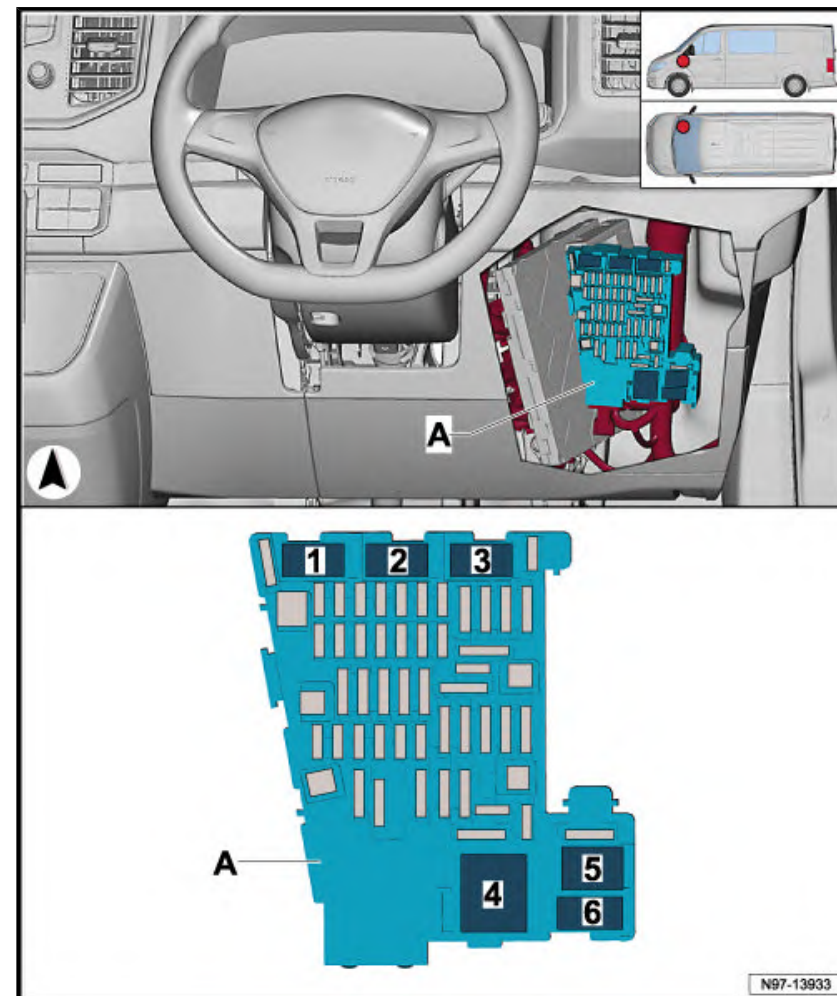


1.5 Relay carrier on left under dash panel, on onboard supply control unit (left-hand drive)

1.5.1 Relay assignment

A - Wiper motor relay 1 -J368-

B - Wiper motor relay 2 -J369-

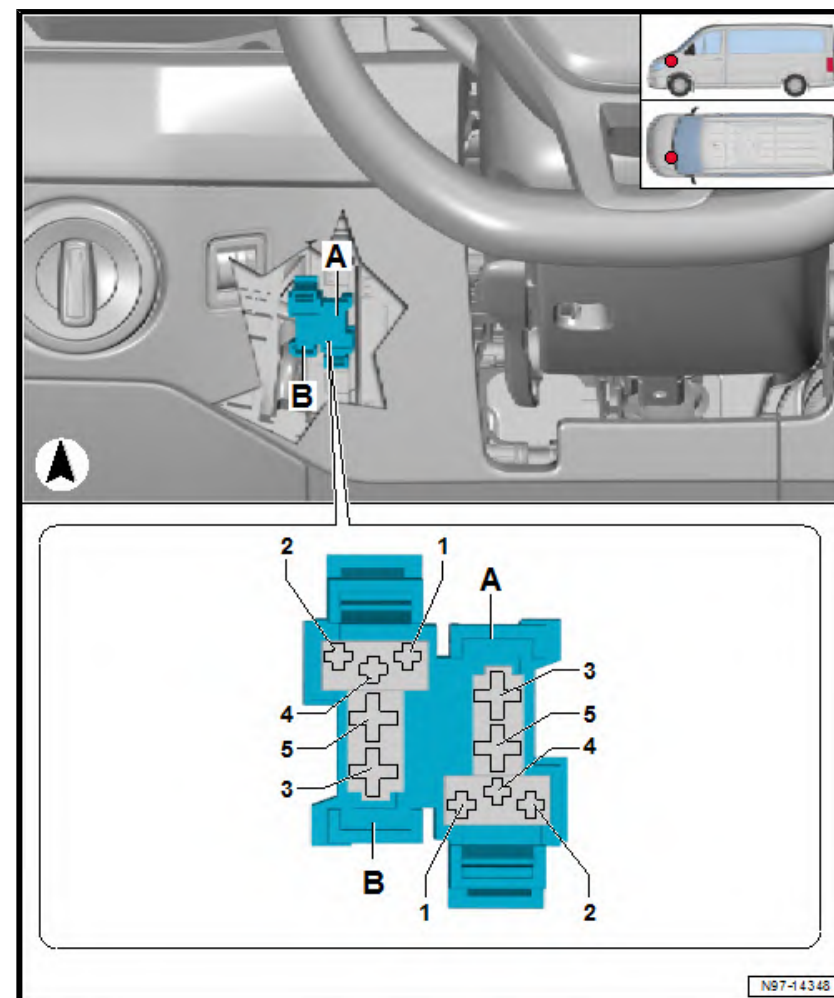


1.6 Relay carrier on left under dash panel, on onboard supply control unit (right-hand drive)

1.6.1 Relay assignment


A - Wiper motor relay 1 -J368-

B - Wiper motor relay 2 -J369-

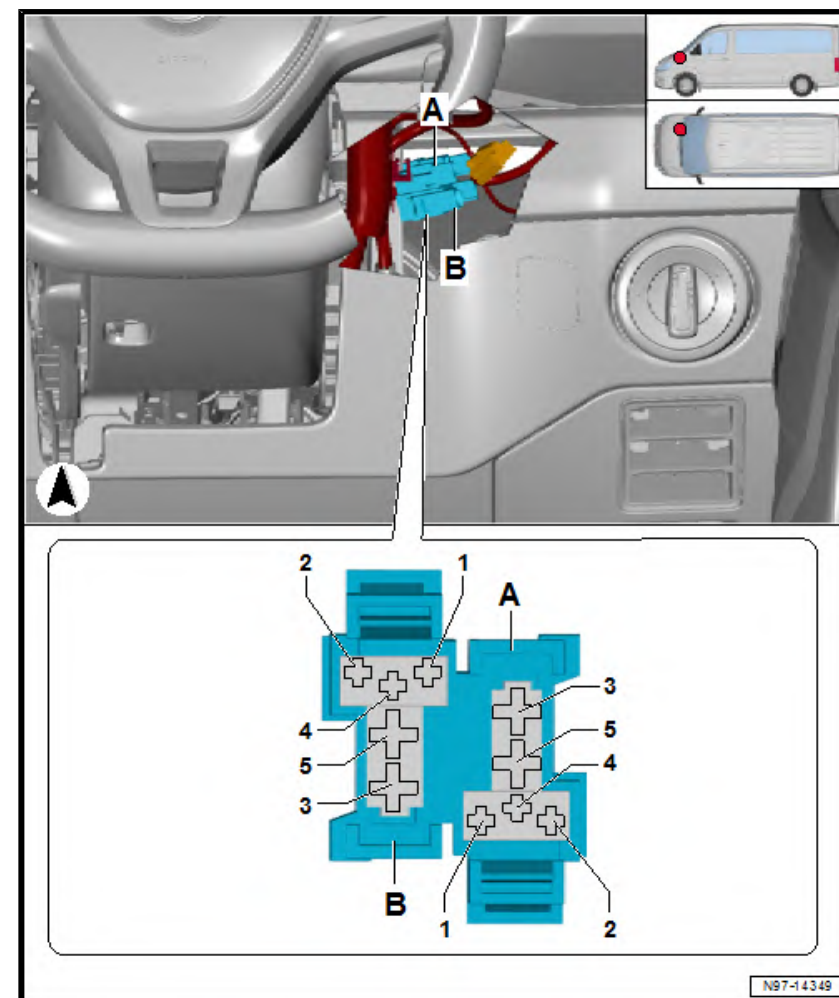

1.7 Relay in left engine compartment

- 1 - Heated windscreen relay -J47-
- 2 - Heated windscreen relay 2 -J611-
- 3 - Automatic glow period control unit -J179-
- 4 - Second battery charging circuit relay -J713-

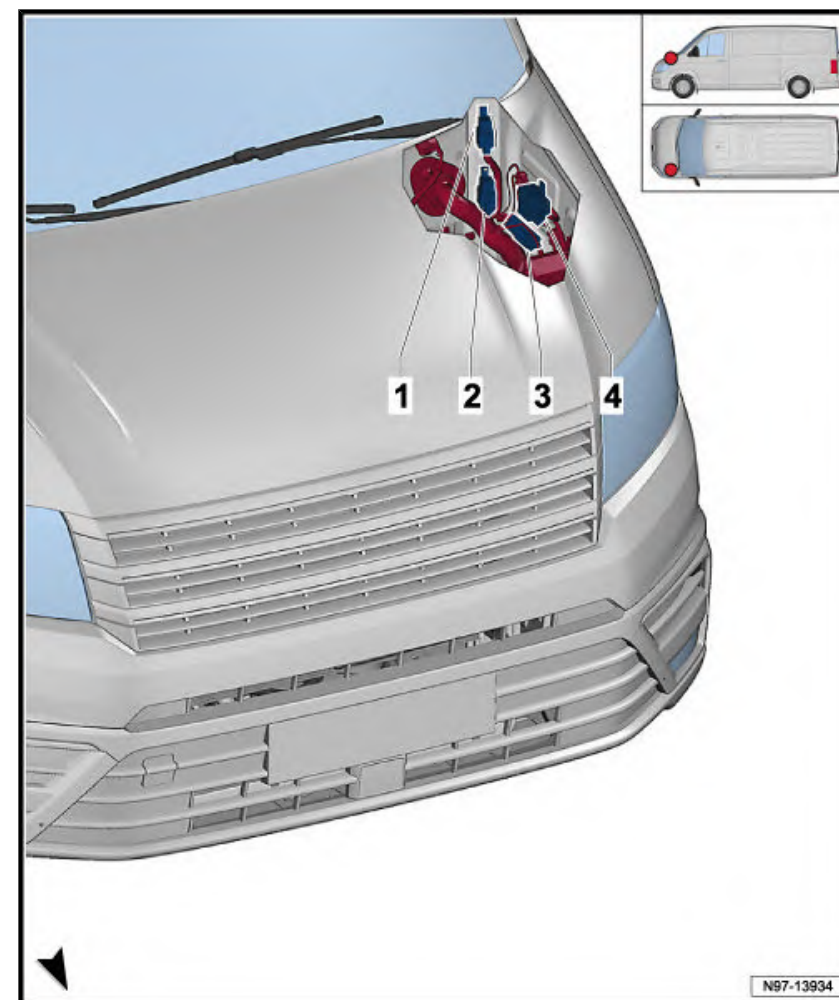


1 Control units in front part of vehicle

1.1 ABS control unit -J104-

1.1.1 Fitting location, left-hand drive

A - ABS control unit -J104-


A1 - 38-pin connector -T38b-

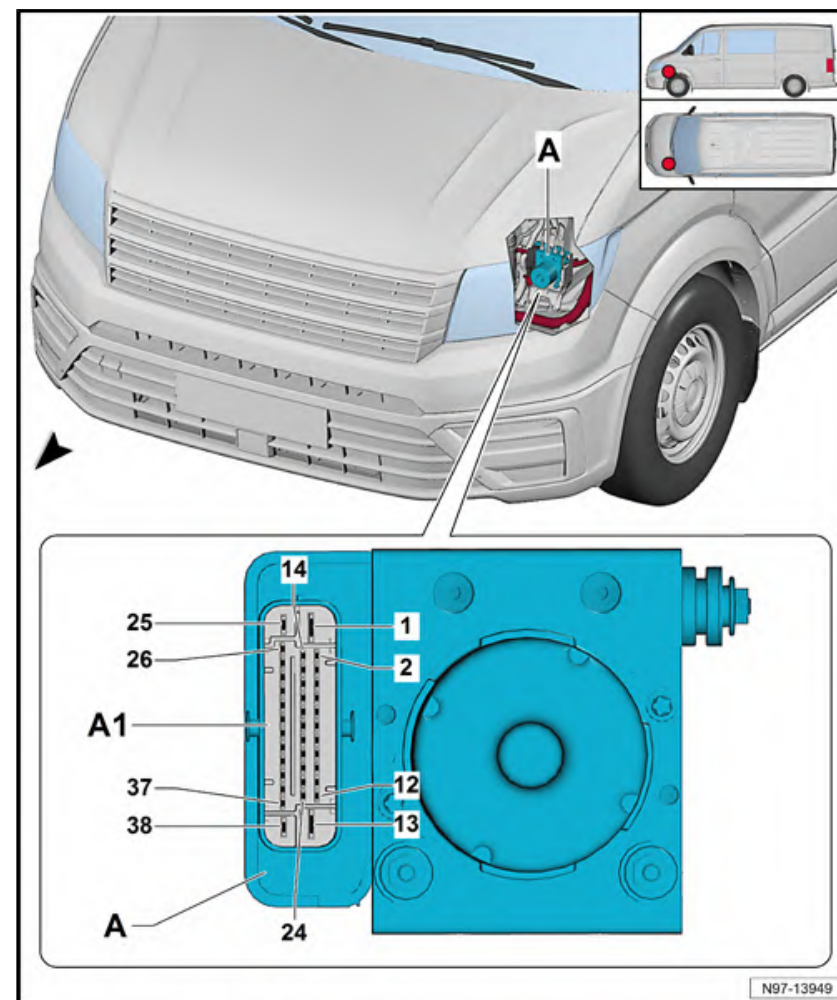

1.1.2 Fitting location, right-hand drive

A - ABS control unit -J104-

A1 - 38-pin connector -T38b-

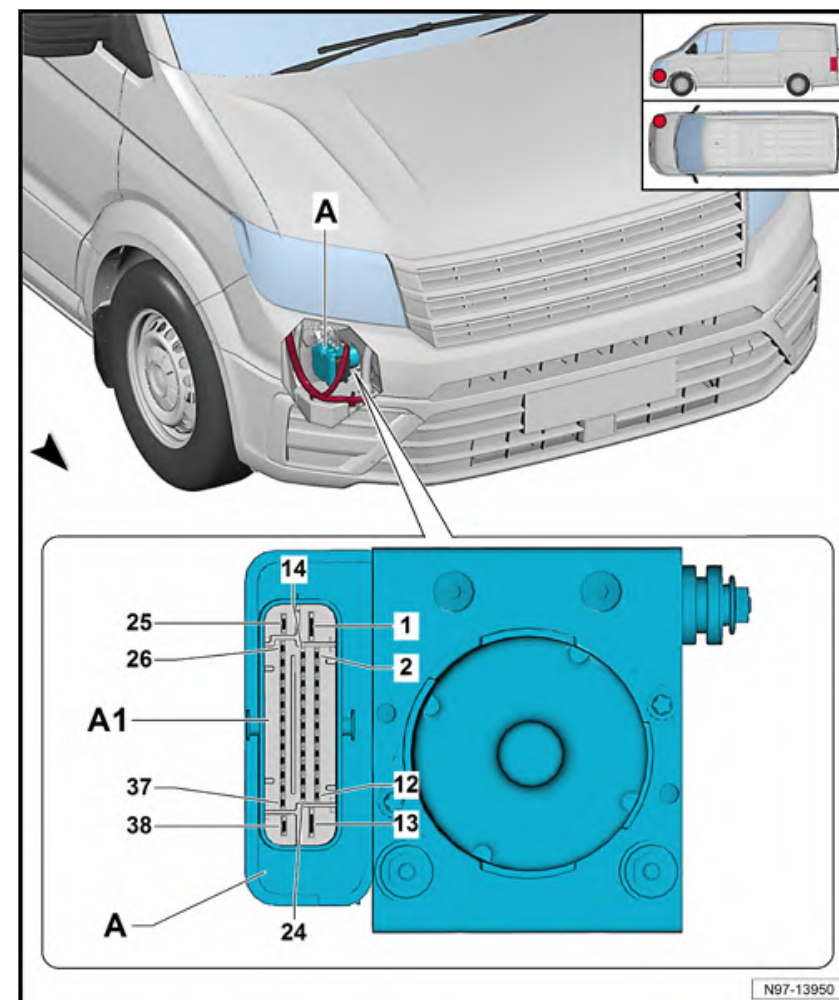


1.2 Power steering control unit -J500-

1.2.1 Fitting location, left-hand drive

A - Power steering control unit -J500-

A1 - 2-pin connector -T2qy-

A2 - 6-pin connector -T6cz-

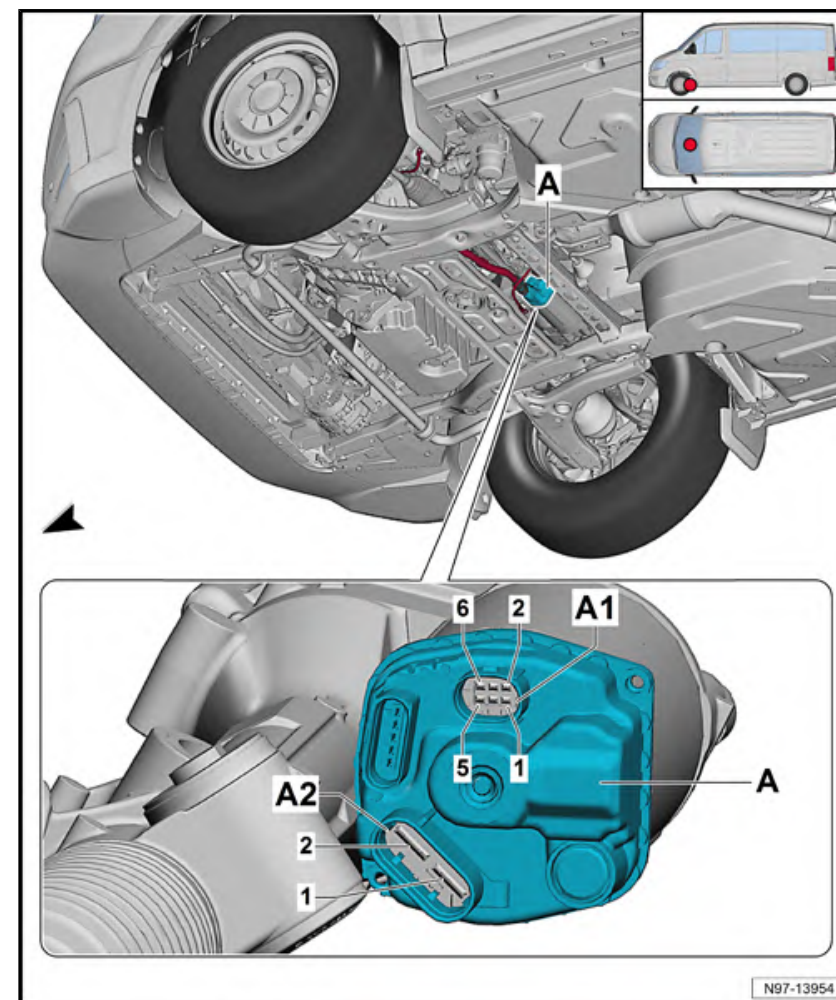


1.2.2 Fitting location, right-hand drive

A - Power steering control unit -J500-

A1 - 2-pin connector -T2qy-


A2 - 6-pin connector -T6cz-

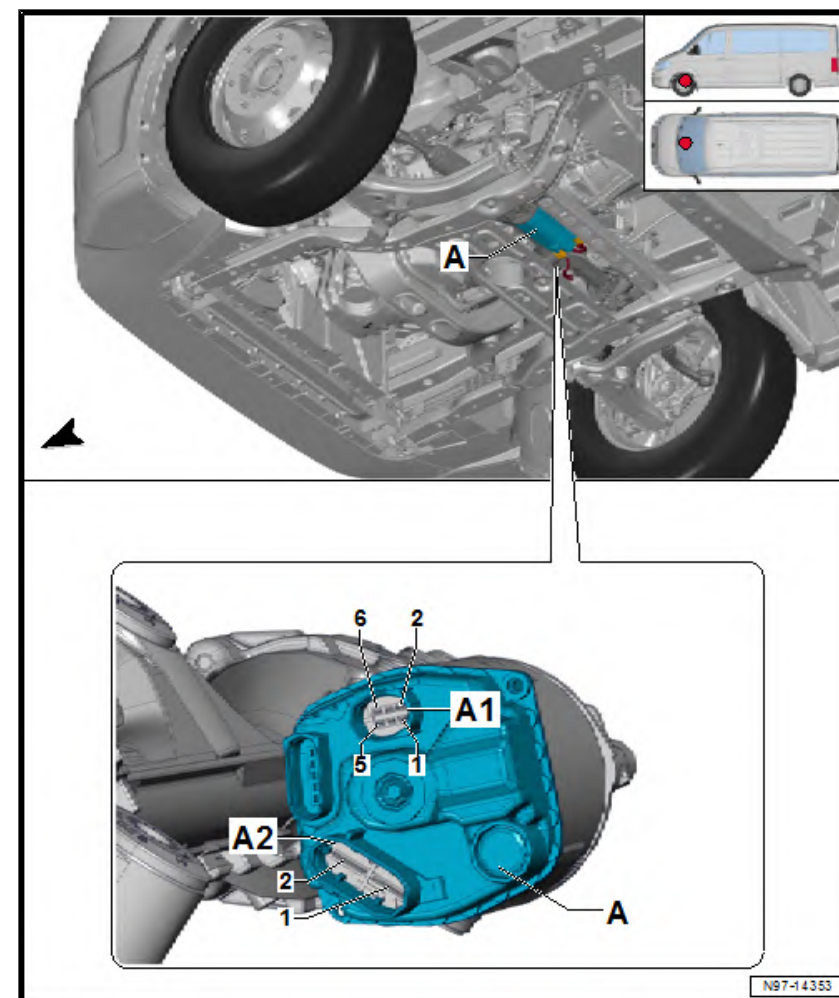

1.3 Adaptive cruise control unit -J428-

A - Adaptive cruise control unit -J428-


A1 - 7-pin connector -T7aj-

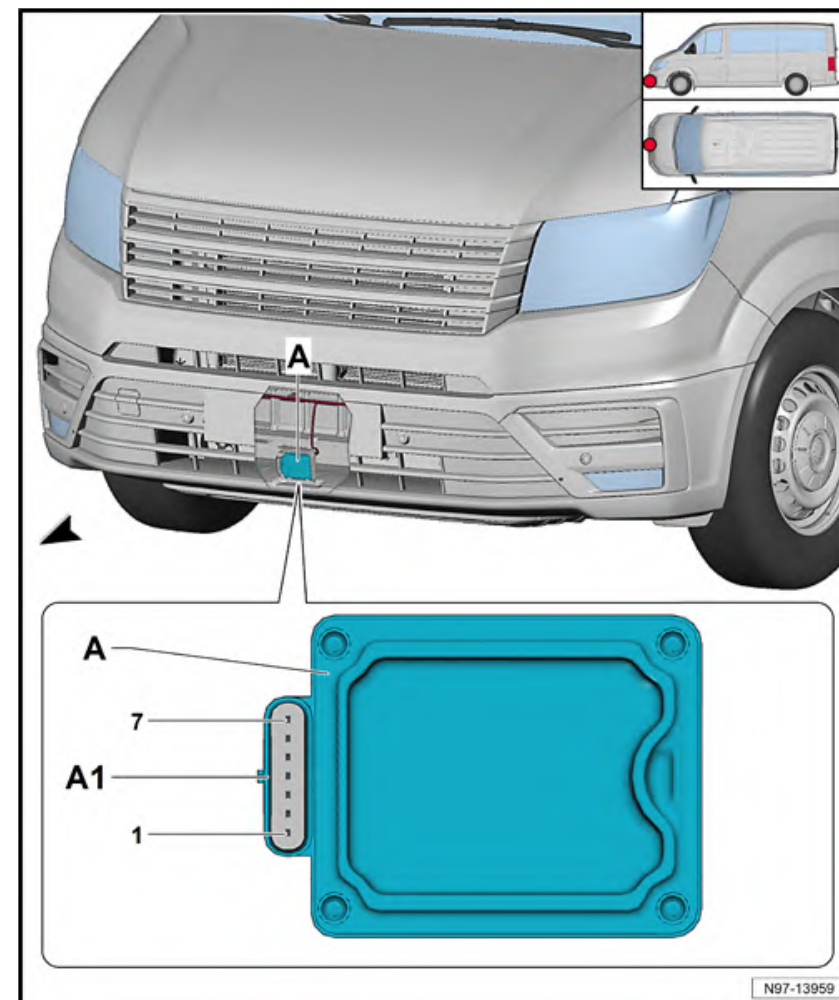

1.4 Automatic gearbox control unit -J217-

A - Automatic gearbox control unit -J217-


A1 - 81-pin connector -T81b-

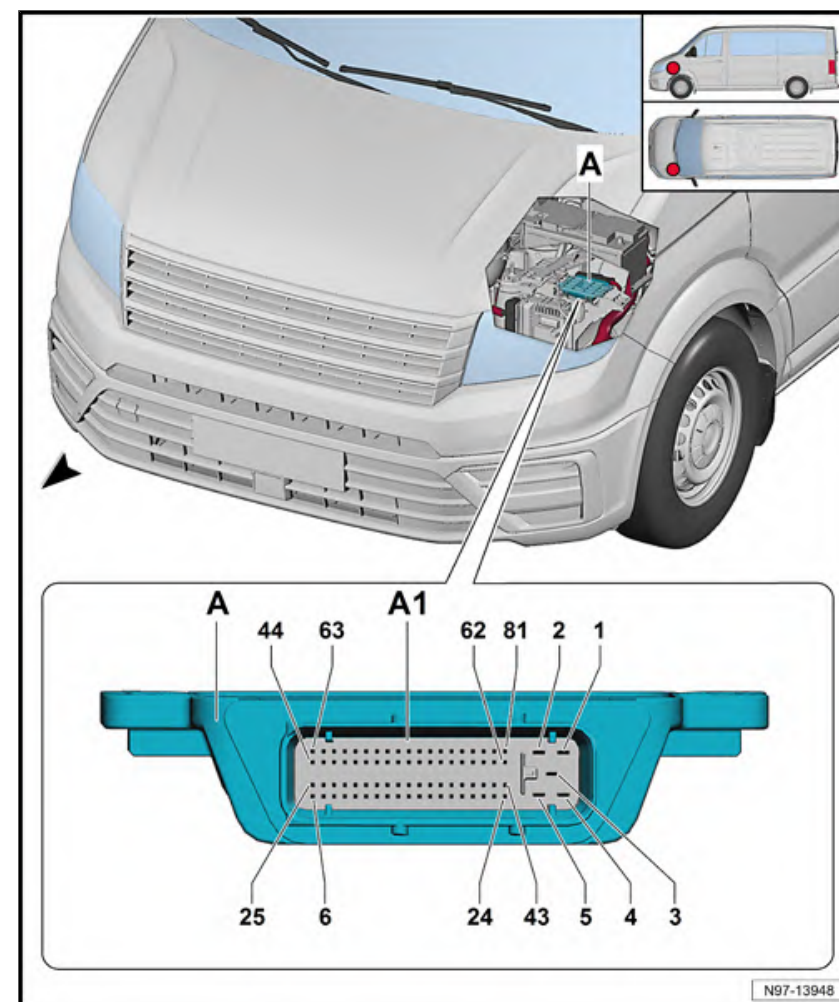

1.5 Battery monitor control unit 2 -J934-

A - Battery monitor control unit 2 -J934-

A1 - 2-pin connector -T2kt-

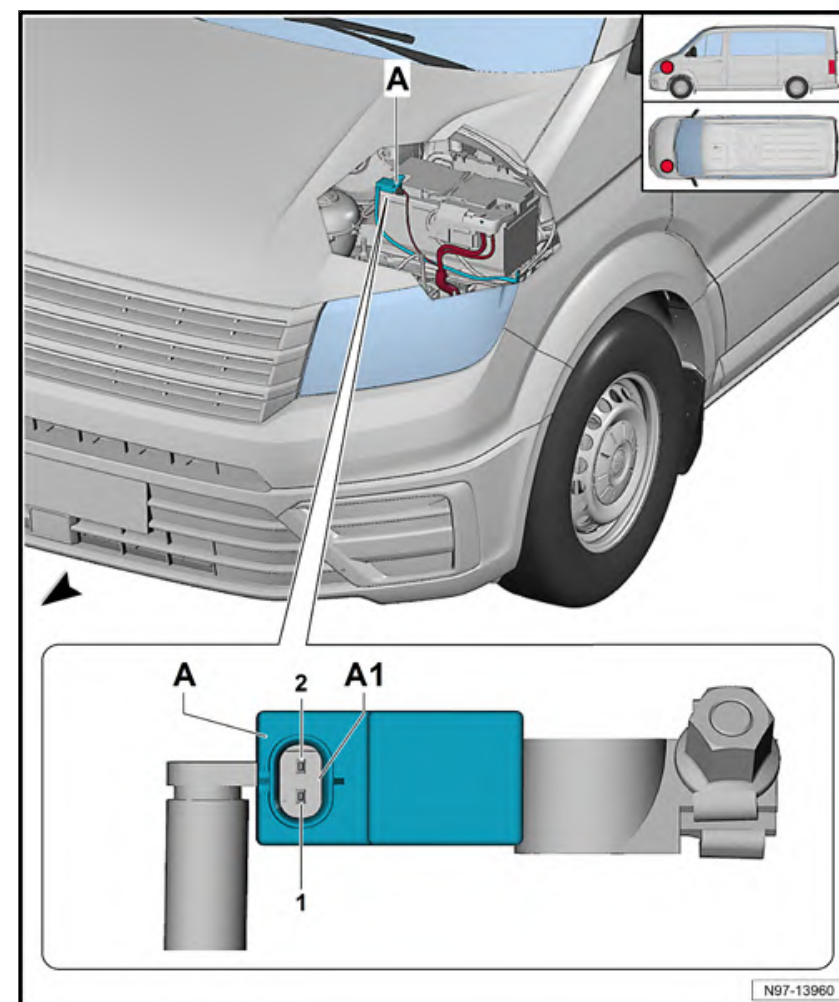

1.6 Radiator fan -V7-

A - Radiator fan control unit -J293- with Radiator fan -V7-


B - 4-pin connector -T4eg-

B - 4-pin connector -T4ef-

B - 4-pin connector -T4ic-



Connectors, variants B1 or B2

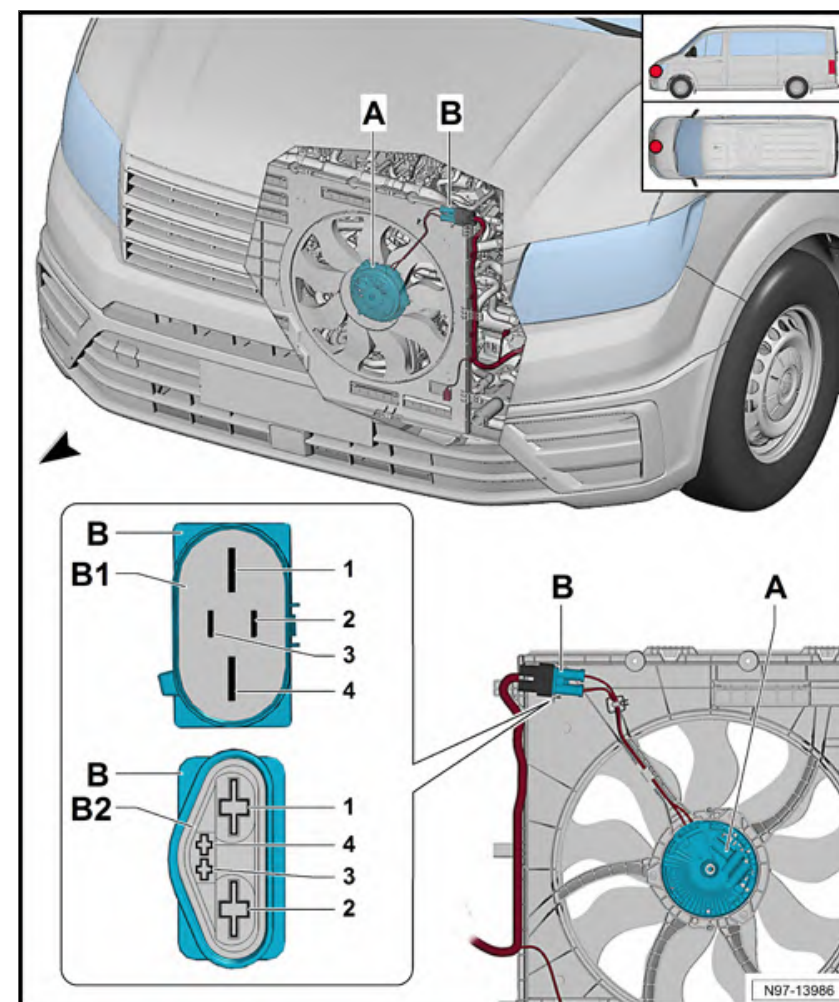


1.7 Engine control unit -J623-

A - Engine control unit -J623-

A1 - 60-pin connector -T60e-

A2 - 94-pin connector -T94b-

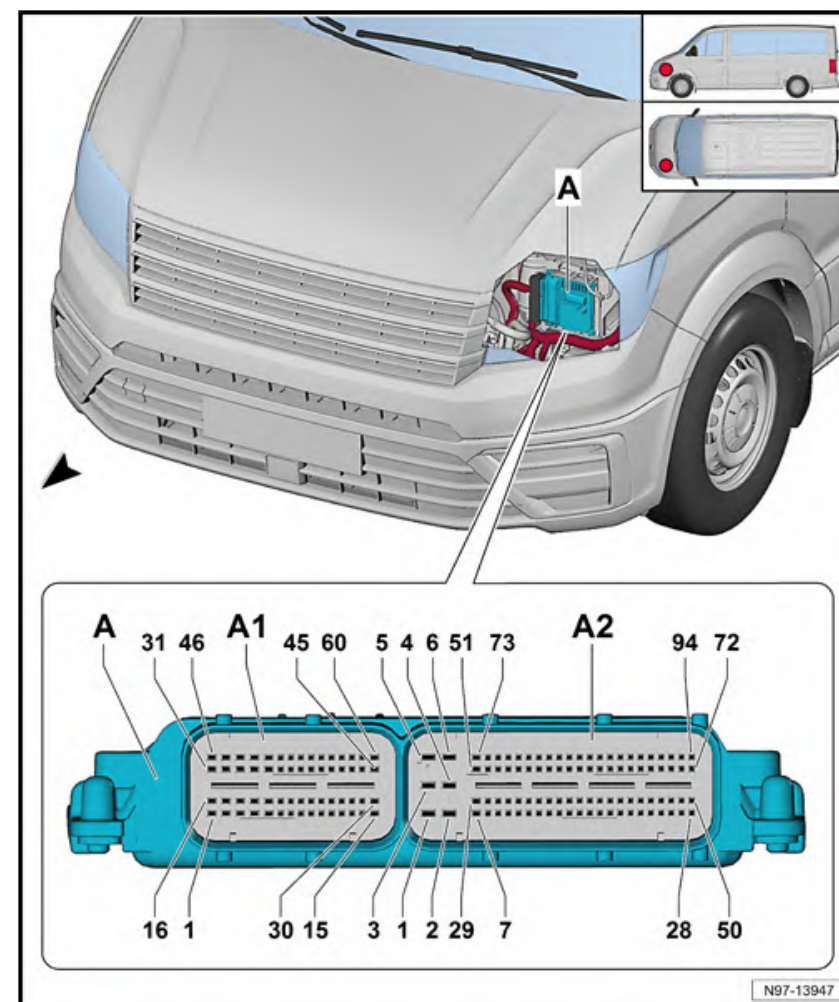

- 1 Control units in middle part of vehicle

- 1.1 Control unit 1 for information electronics -J794- and Multimedia system operating unit
 -E380- / Display unit for front information display and operating unit control unit -J685-
 Radio -R- or Radio -R-

- 1.1.1 Control unit 1 for information electronics -J794-

A - Control unit 1 for information electronics -J794-

A1 - 2-pin connector -T2pr-

A2/A3 - 4-pin connector -T4gk-

A4 - 2-pin connector -T2pn-

A5 - 5-pin connector -T5ay-

A6 - 5-pin connector -T5bf-

A7 - 2-pin connector -T2pl-


A8 - 12-pin connector -T12m-

A9 - 12-pin connector -T12n-

A10 - 12-pin connector -T12l-

A11 - 8-pin connector -T8df-

A12/A13 - 8-pin connector -T8dg-

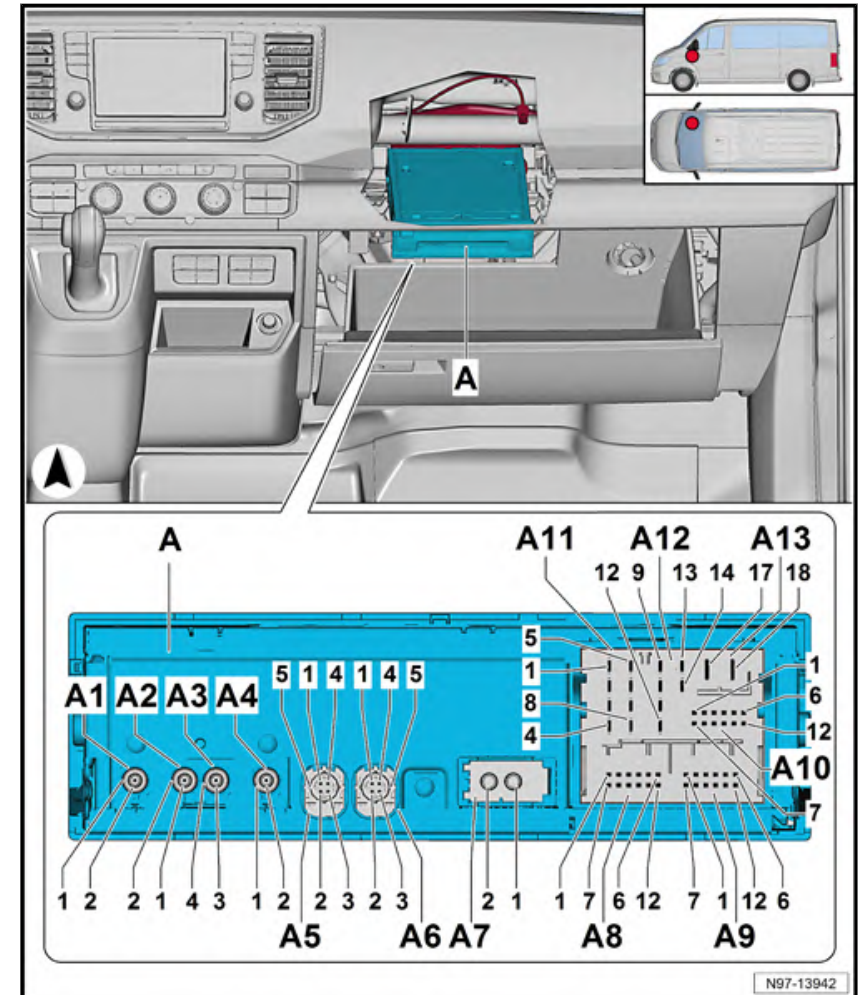


1.1.2 Multimedia system operating unit -E380- / Display unit for front information display and operating unit control unit -J685-

A - Multimedia system operating unit -E380- / Display unit for front information display and operating unit control unit -J685-


A1 - 12-pin connector -T12k-

A2 - 5-pin connector -T5az-

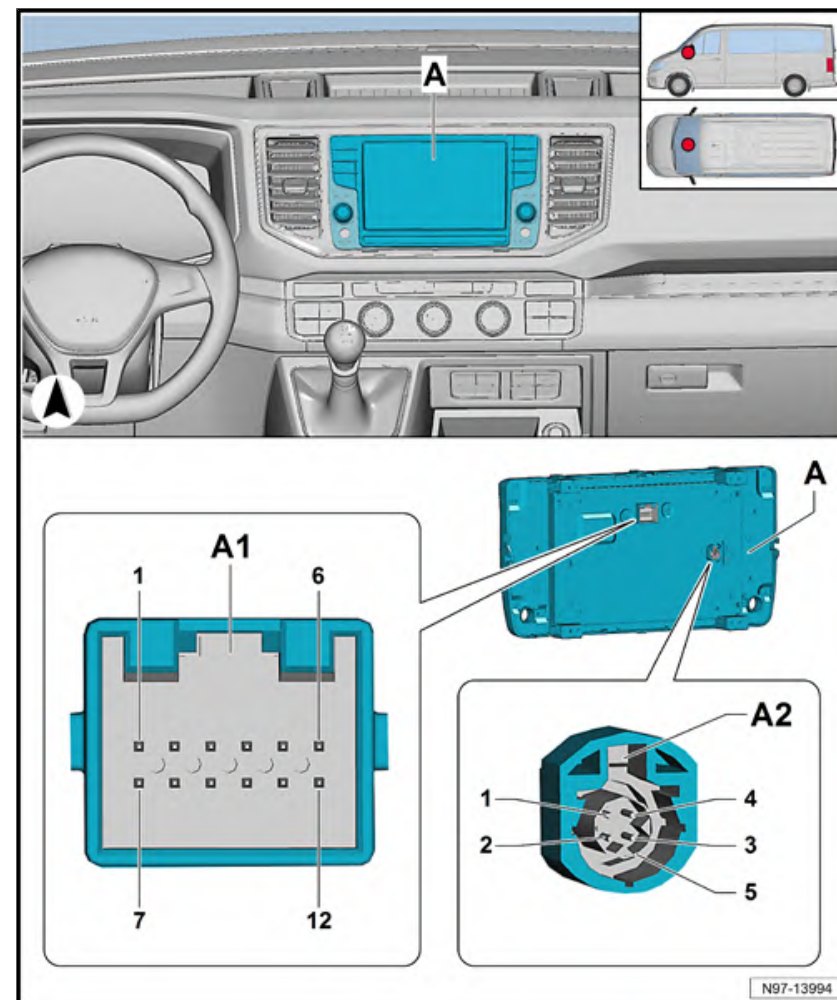

1.1.3 Radio -R-

- A1 - 2-pin connector -T2pn-
- A2 - 8-pin connector -T8df-
- A3 - 8-pin connector -T8dg-
- A4 - 12-pin connector -T12l-
- A5 - 12-pin connector -T12n-
- A6 - 12-pin connector -T12m-

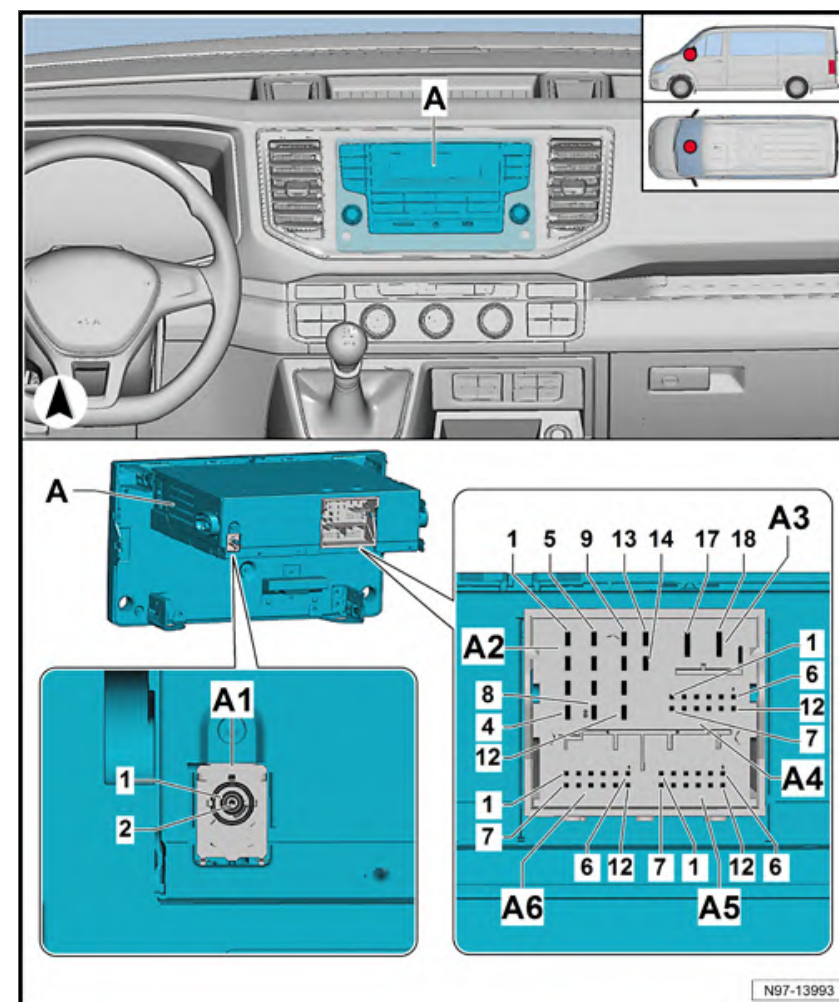


1.2 Emergency call module control unit and communication unit -J949-

A - Emergency call module control unit and communication unit -J949-

A1 - 4-pin connector -T4gl-

A2 - 26-pin connector -T26d-

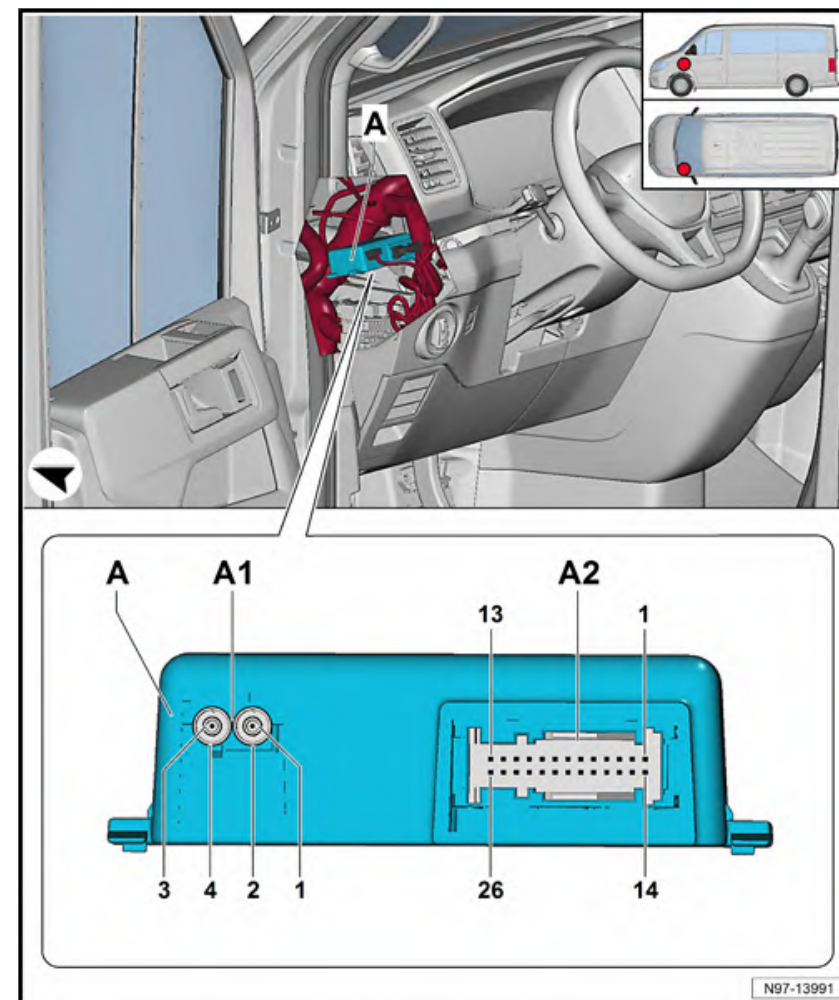

1.3 Tachograph -G24-


A - Tachograph -G24-

A1 - 8-pin connector -T8cv-

A2 - 8-pin connector -T8ct-

A3 - 8-pin connector -T8cu-

A4 - 8-pin connector -T8ei-

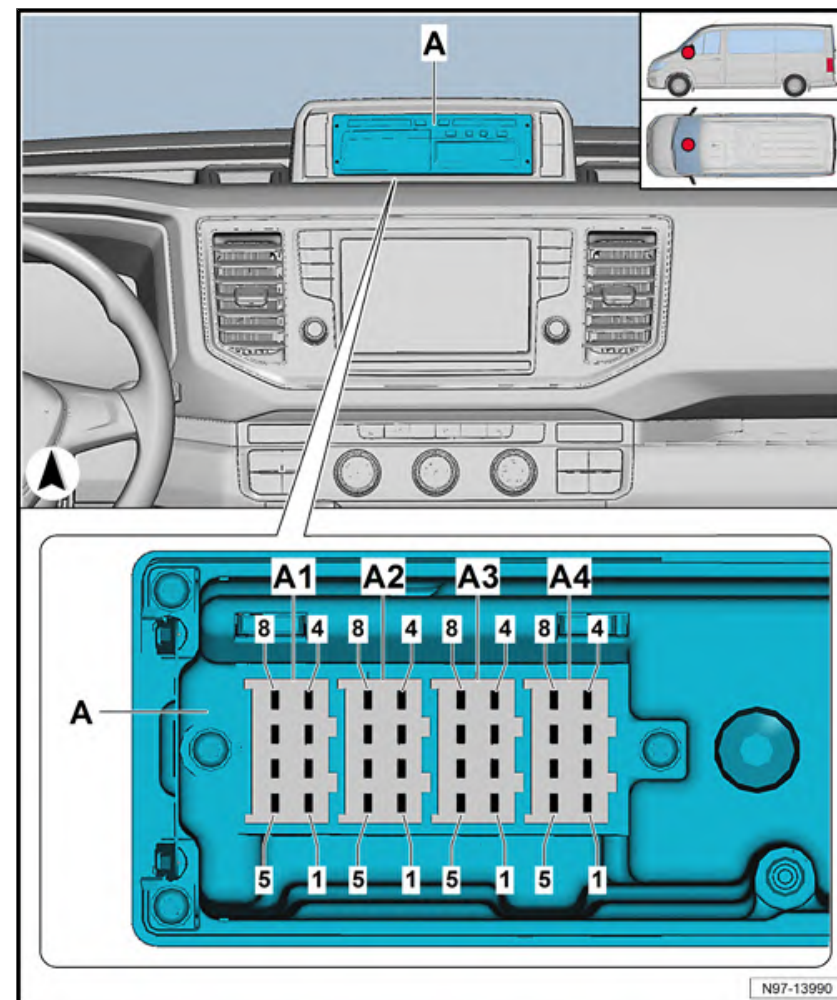


1.4 Heater and air conditioning controls -EX21-

A - Heater and air conditioning controls -EX21-

A1 - 20-pin connector -T20j-

A2 - 16-pin connector -T16o-

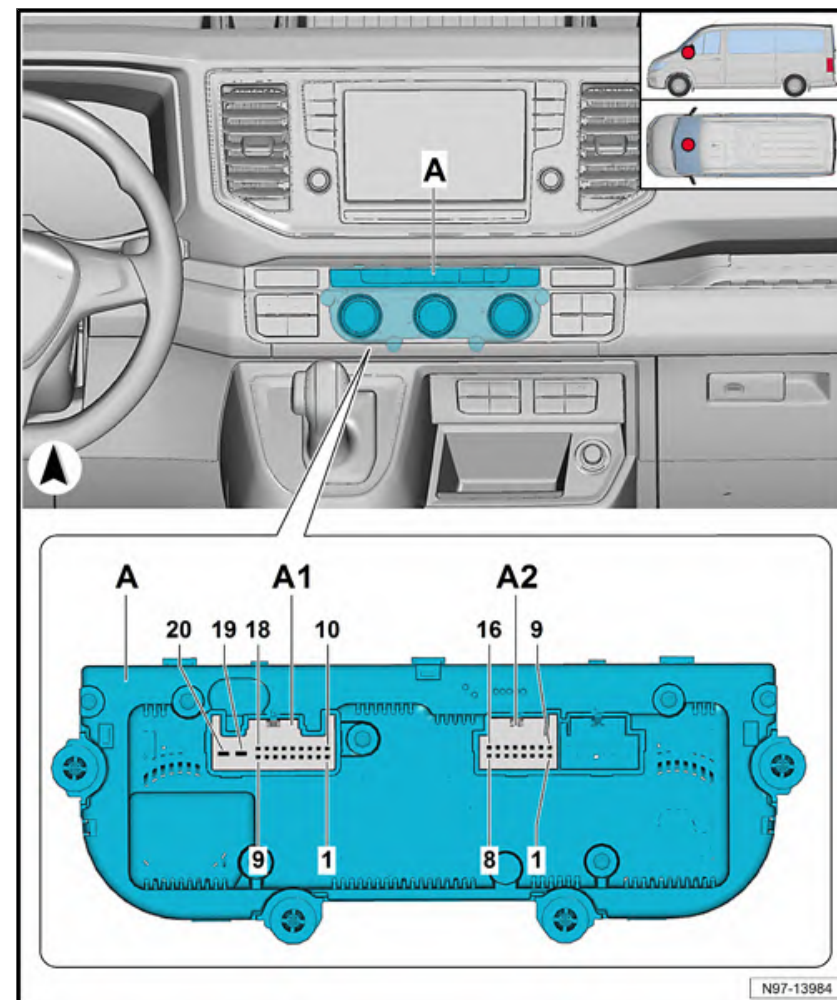


1.5 Climatronic control unit -J255-

A - Climatronic control unit -J255-

A1 - 20-pin connector -T20j-

A2 - 16-pin connector -T16o-


A3 - 16-pin connector -T16p-

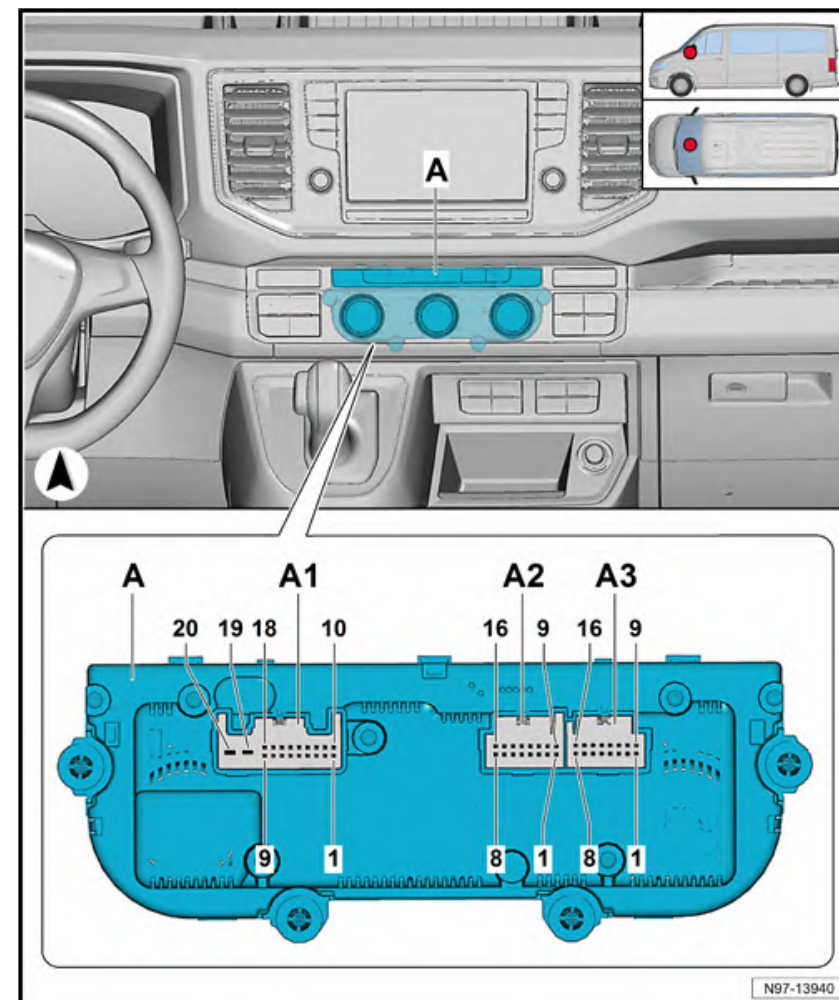

1.6 Air conditioning system control unit [rear] -J301-

A - Air conditioning system control unit [rear] -J301-

A1 - 6-pin connector -T6bi-

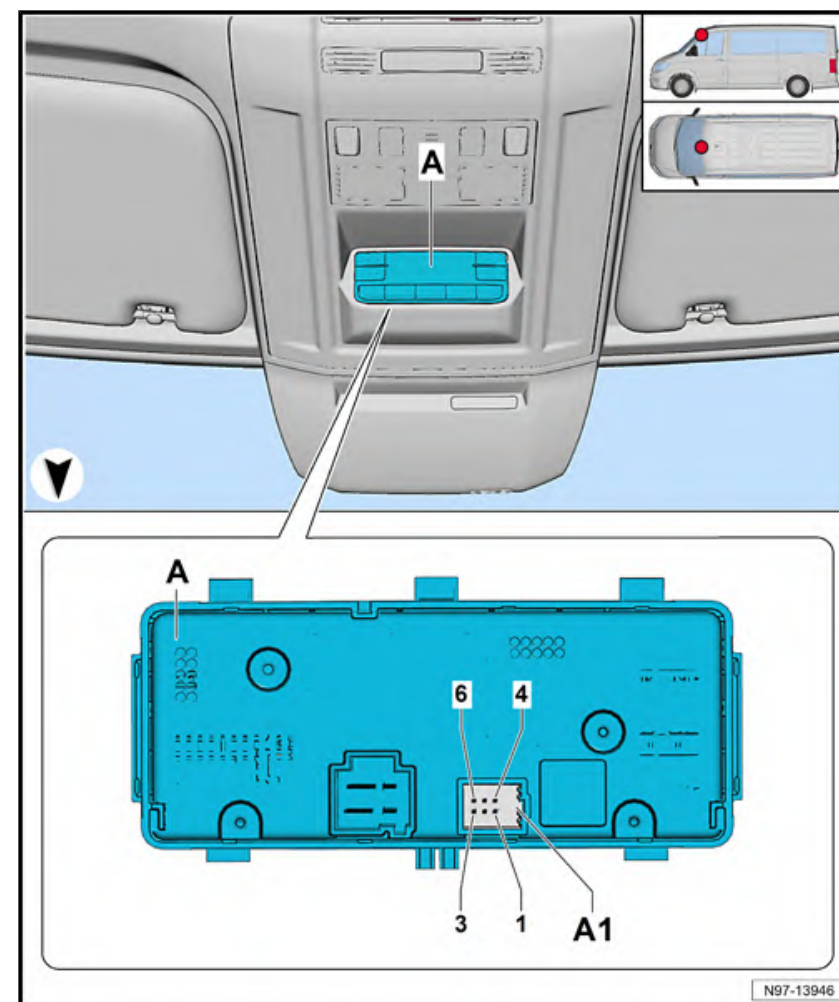

1.7 Onboard supply control unit -J519-


1.7.1 Fitting location, left-hand drive

A - Onboard supply control unit -J519-

A1 - 73-pin connector -T73d-

A2 - 46-pin connector -T46b-

A3 - 73-pin connector -T73c-

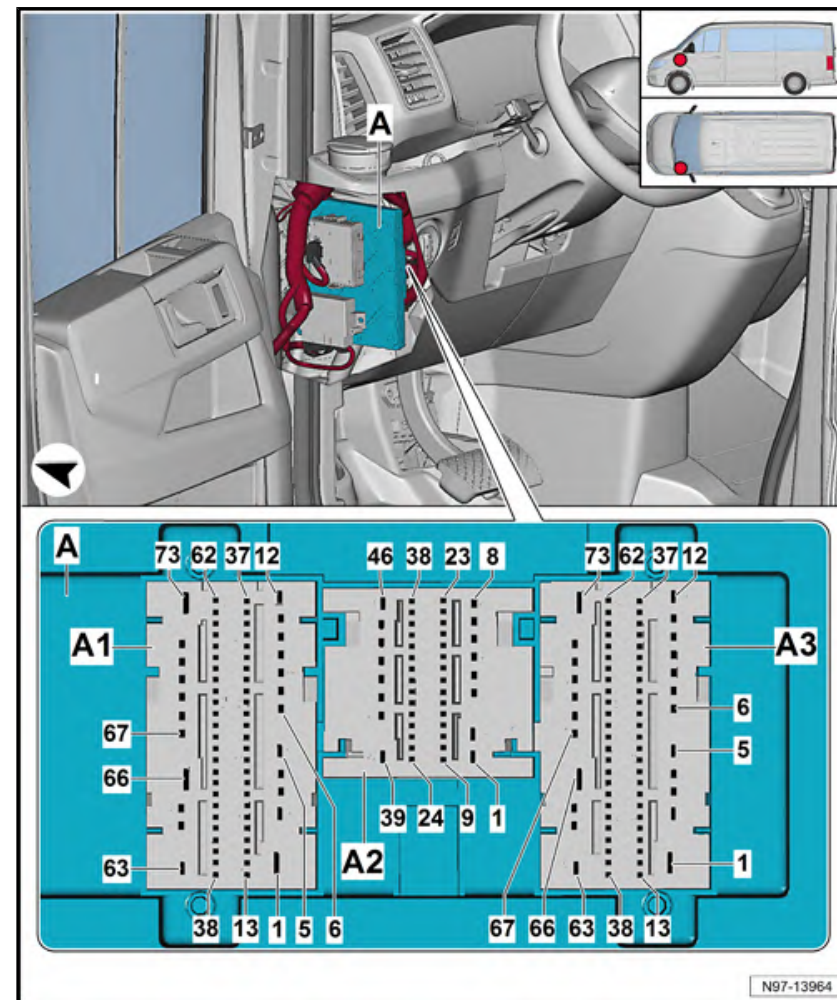


1.7.2 Fitting location, right-hand drive

A - Onboard supply control unit -J519-

A1 - 73-pin connector -T73d-

A2 - 46-pin connector -T46b-

A3 - 73-pin connector -T73c-

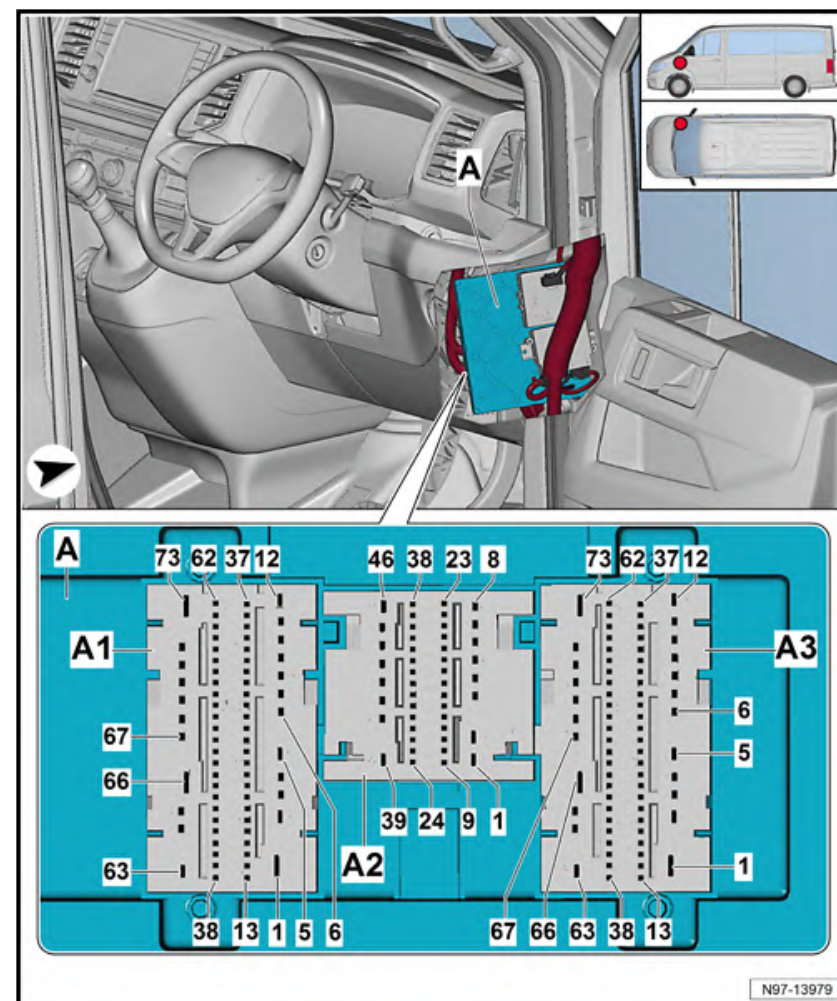


1.8 Parking aid control unit -J446-

1.8.1 Fitting location, left-hand drive

A - Parking aid control unit -J446-

A1 - 26-pin connector -T26c-

A2 - 18-pin connector -T18d-

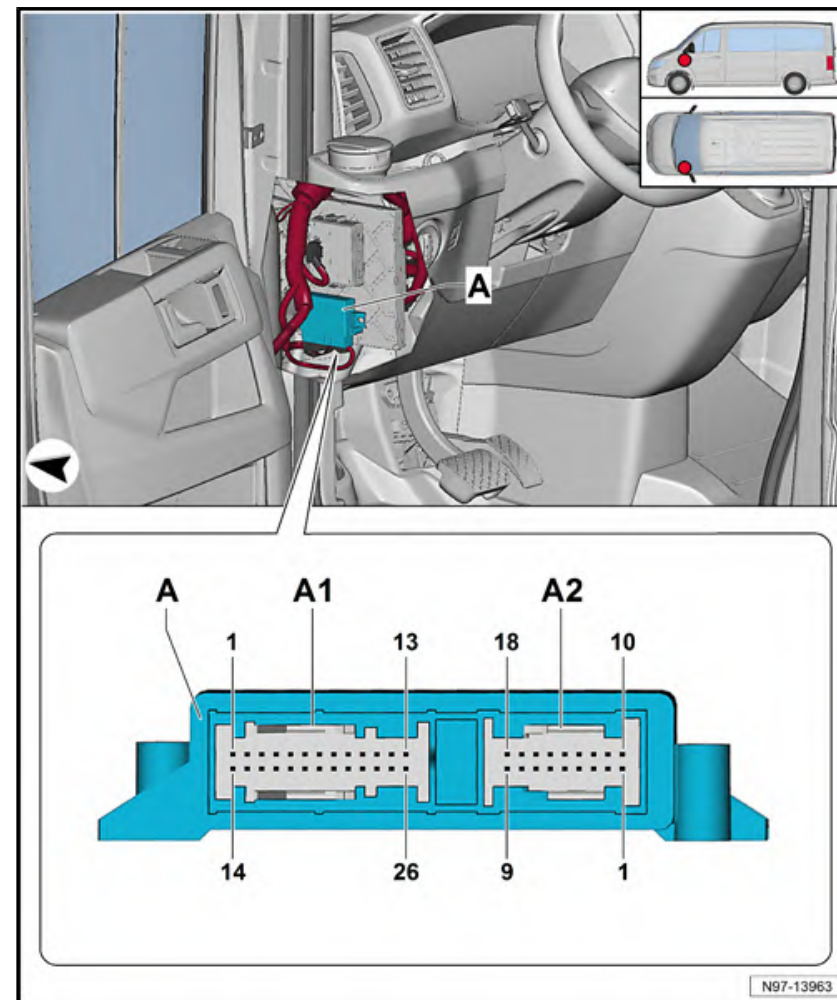


1.8.2 Fitting location, right-hand drive

A - Parking aid control unit -J446-

A1 - 26-pin connector -T26c-

A2 - 18-pin connector -T18d-

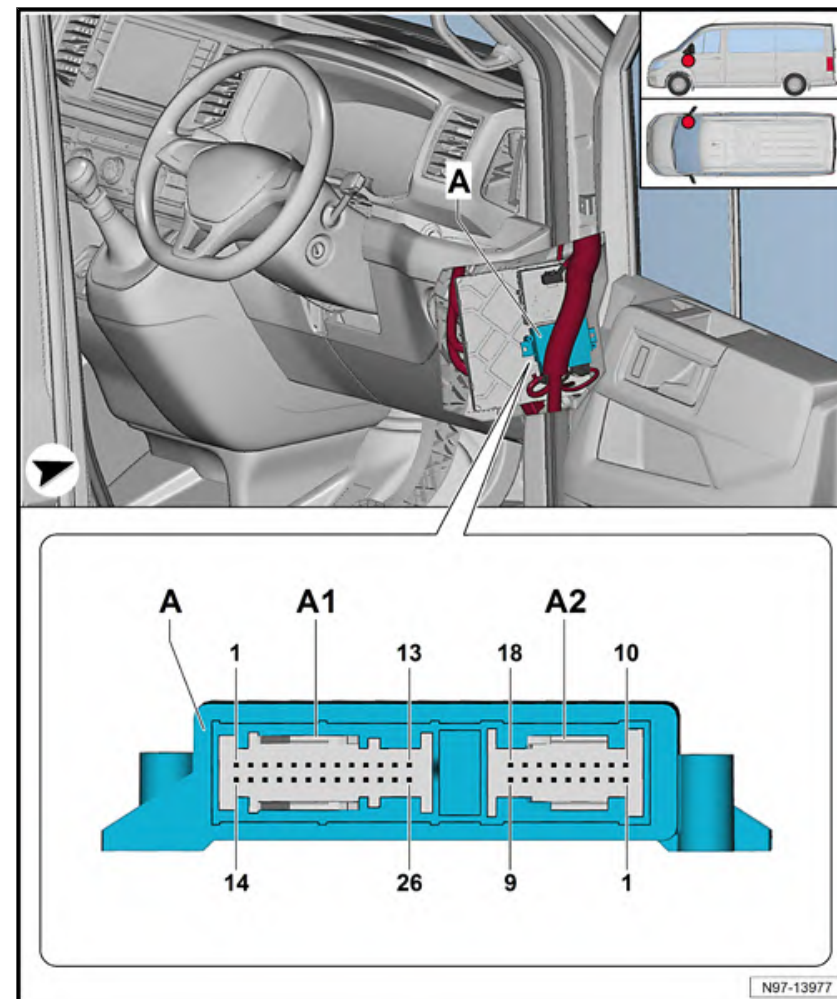


1.9 Data bus diagnostic interface -J533-

1.9.1 Fitting location, left-hand drive

A - Data bus diagnostic interface -J533-


A1 - 20-pin connector -T20h-

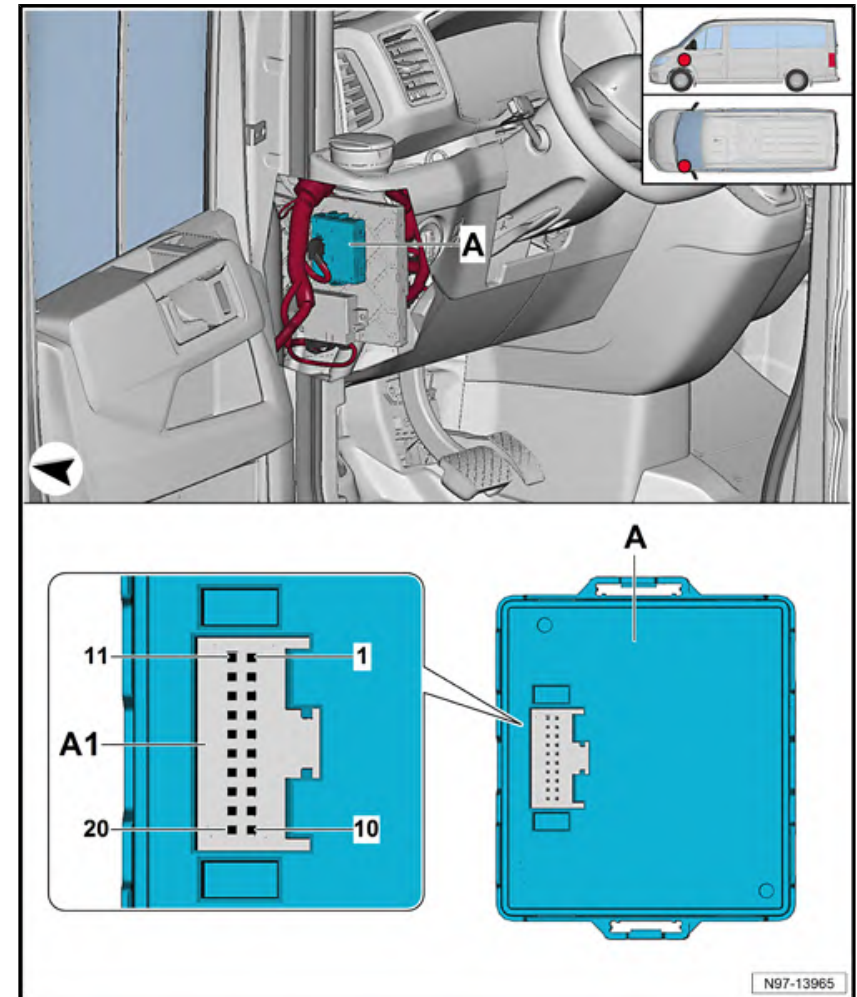

1.9.2 Fitting location, right-hand drive

A - Data bus diagnostic interface -J533-

A1 - 20-pin connector -T20h-

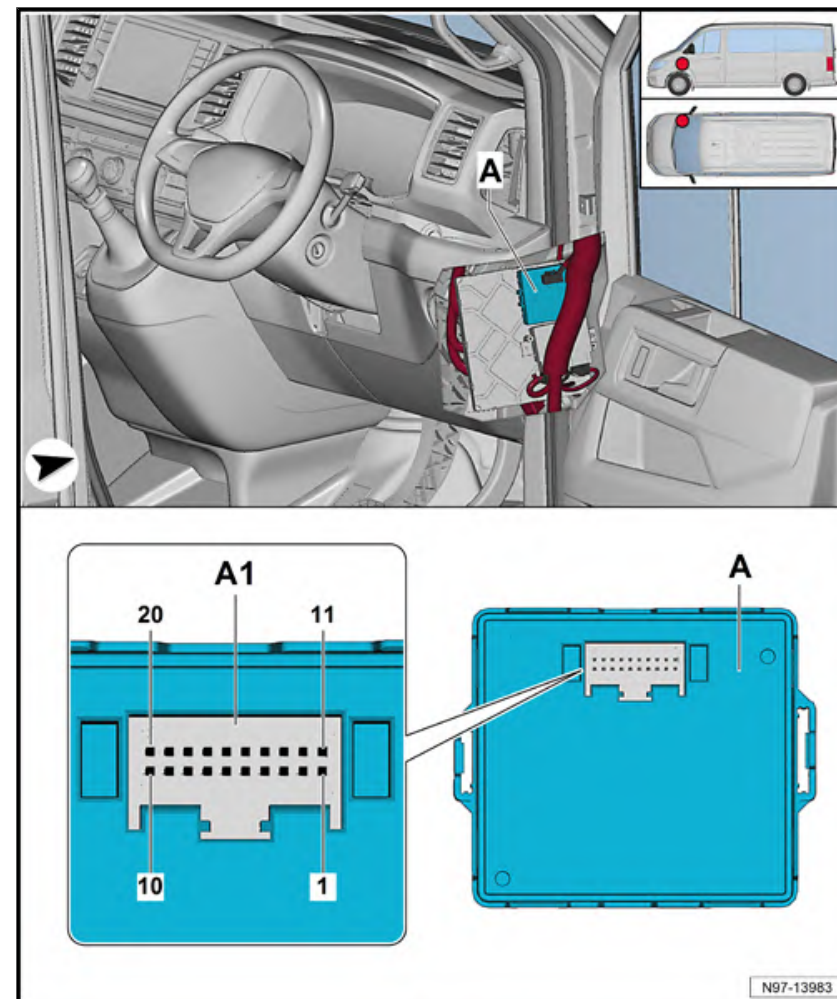

1.10 Trailer detector control unit -J345-


1.10.1 Fitting location, left-hand drive

A - Trailer detector control unit -J345-

A1 - 10-pin connector -T10y-

A2 - 6-pin connector -T6bk-

A3 - 24-pin connector -T24e-

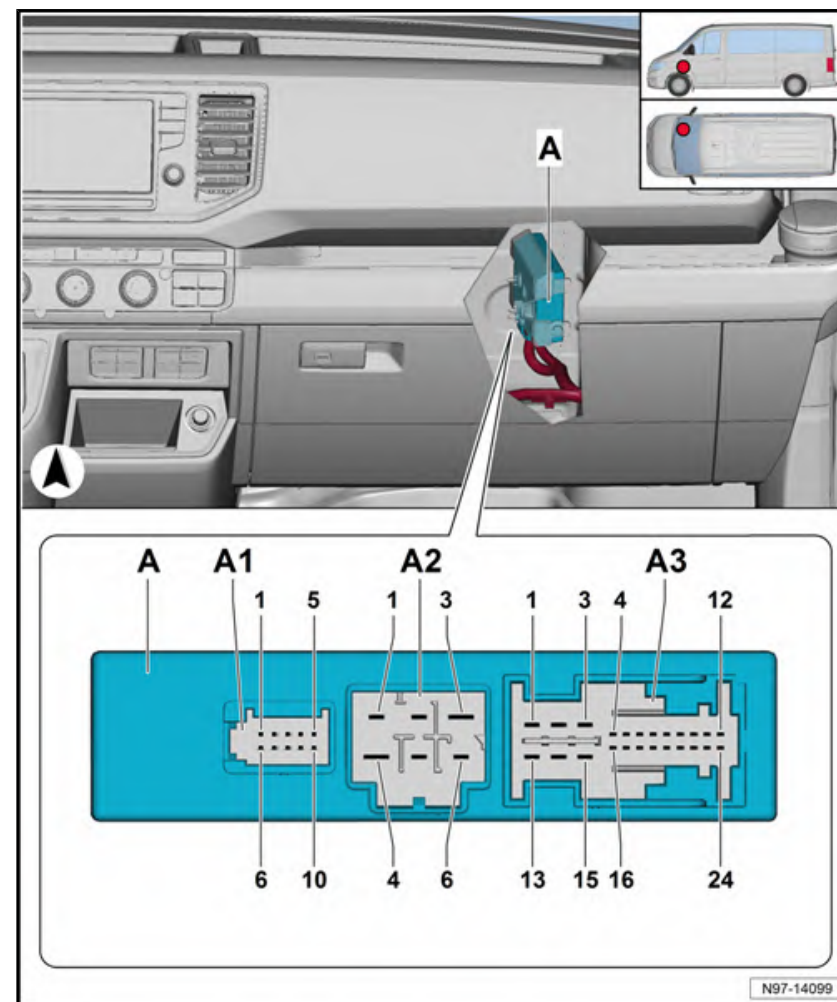


1.10.2 Fitting location, right-hand drive

A - Trailer detector control unit -J345-

A1 - 10-pin connector -T10y-

A2 - 6-pin connector -T6bk-

A3 - 24-pin connector -T24e-

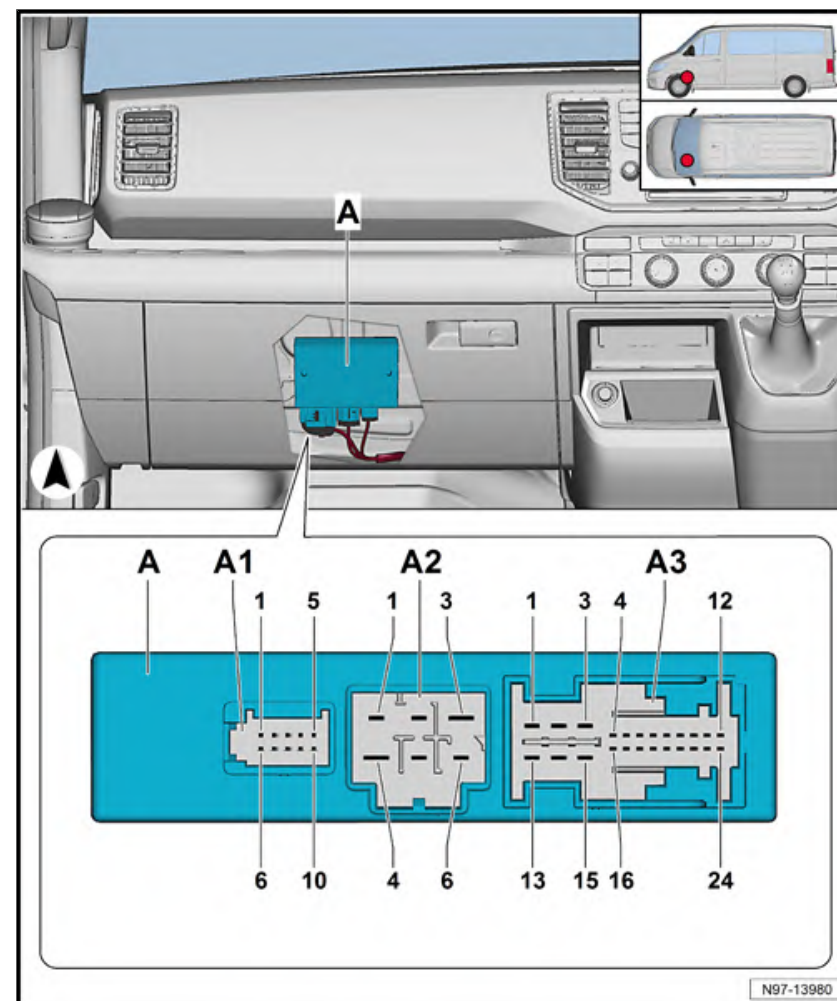


1.11 Dash panel insert -K-

1.11.1 Fitting location, left-hand drive

A - Dash panel insert -K-


A1 - 18-pin connector -T18c-

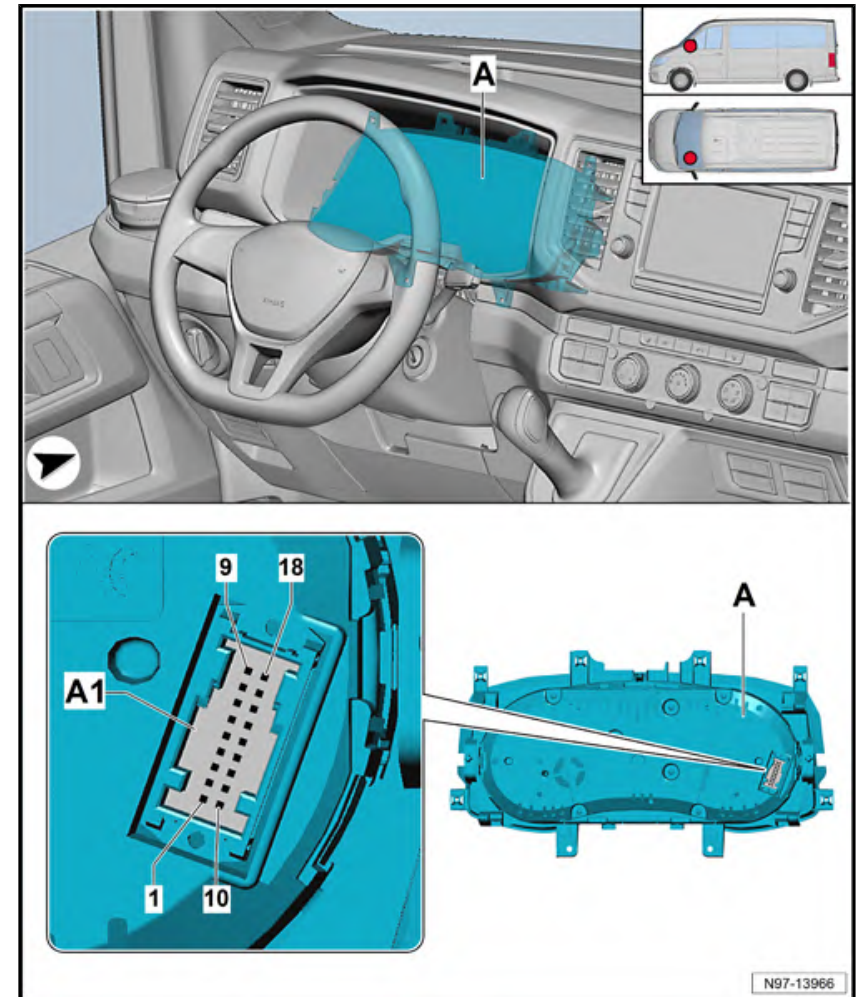

1.11.2 Fitting location, right-hand drive

A - Dash panel insert -K-

A1 - 18-pin connector -T18c-

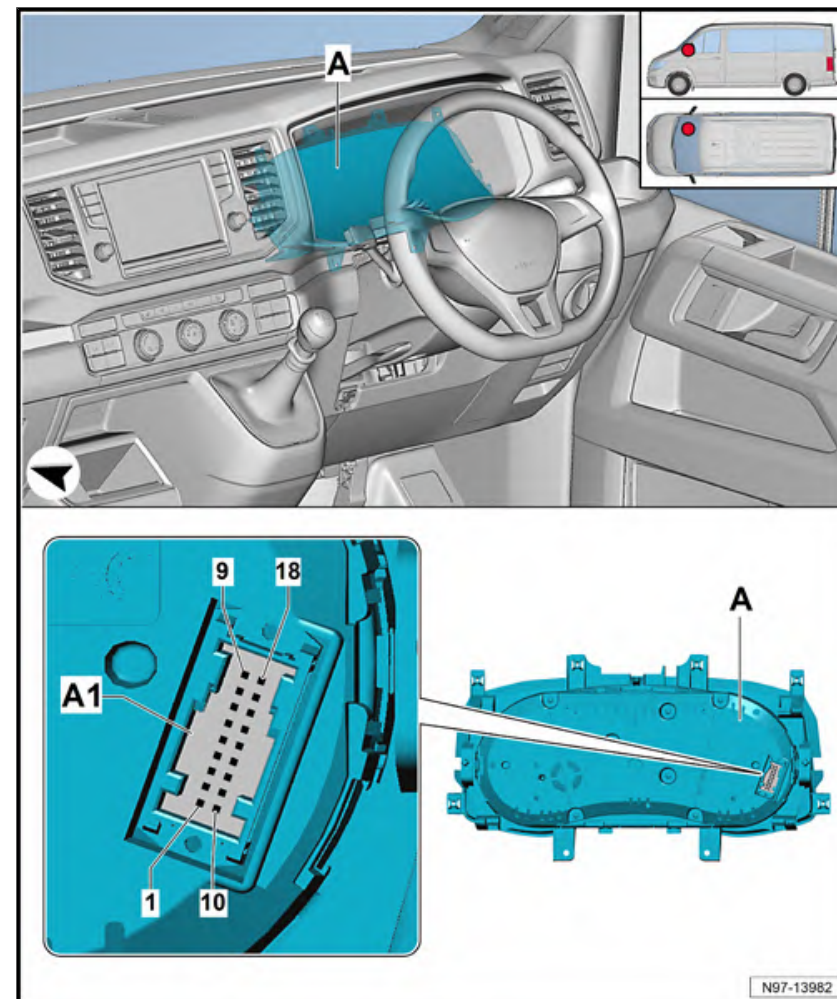


1.12 Fresh air blower control unit -J126-

1.12.1 Fitting location, left-hand drive

A - Fresh air blower control unit -J126-

A1 - 2-pin connector -T2-


A2 - 4-pin connector -T4fj-

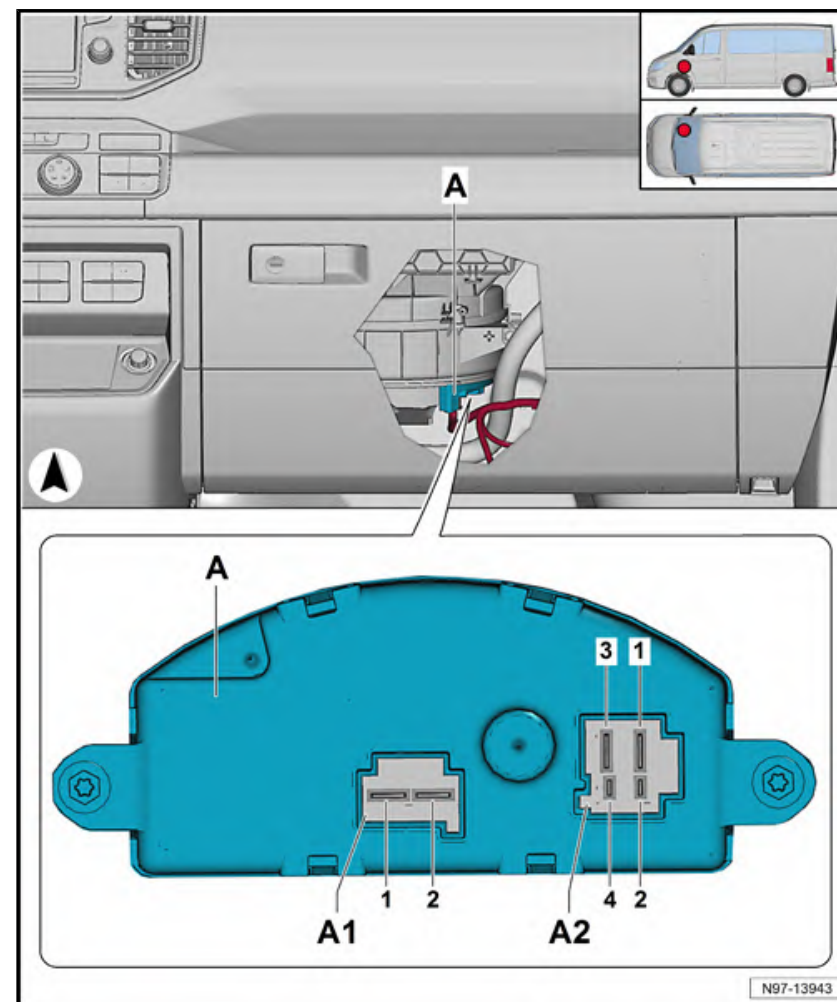

1.12.2 Fitting location, right-hand drive

A - Fresh air blower control unit -J126-


A1 - 4-pin connector -T4fj-

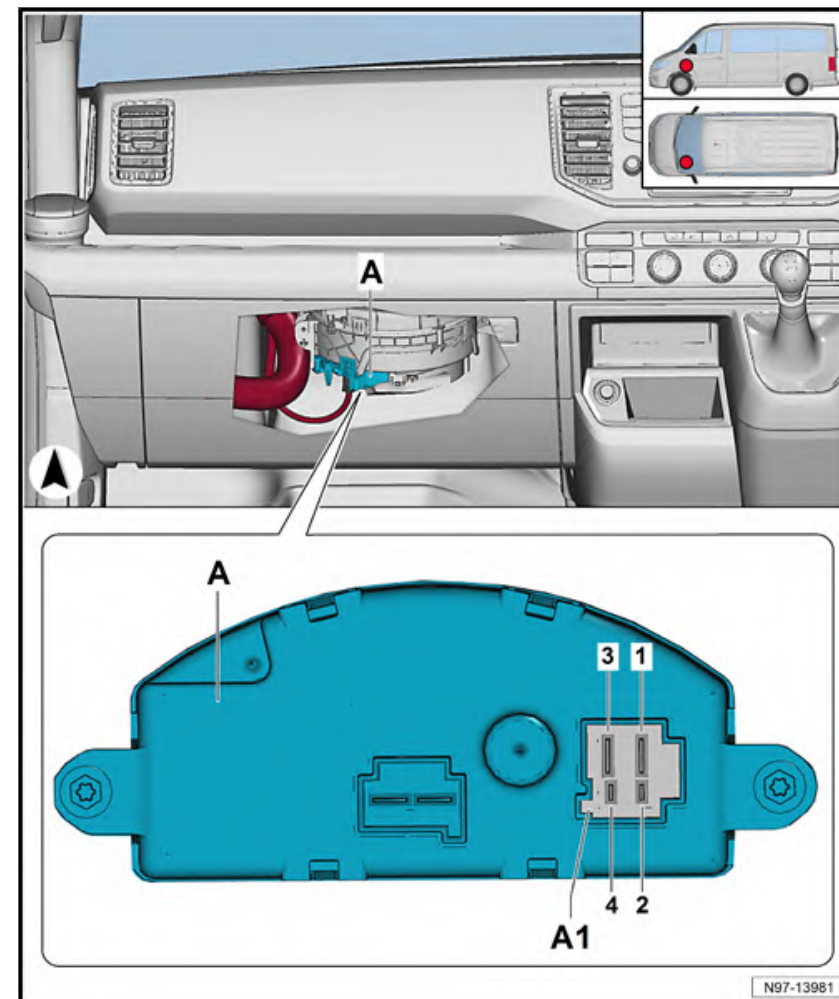

1.13 Warm air blower control unit -J350-

A - Warm air blower control unit -J350-

A1 - 4-pin connector -T4ep-

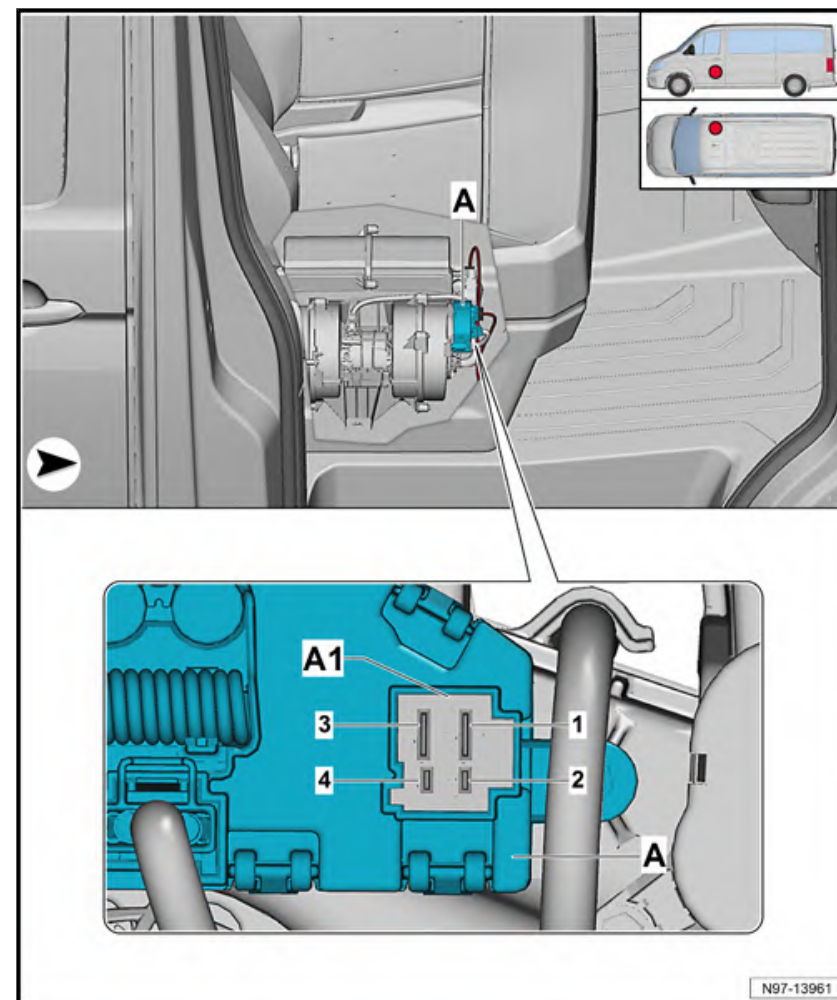

1.14 Driver door control unit -J386-


A - Driver door control unit -J386-

A1 - 6-pin connector -T6cu-

A2 - 20-pin connector -T20k-

A3 - 16-pin connector -T16k-

A4 - 32-pin connector -T32g-

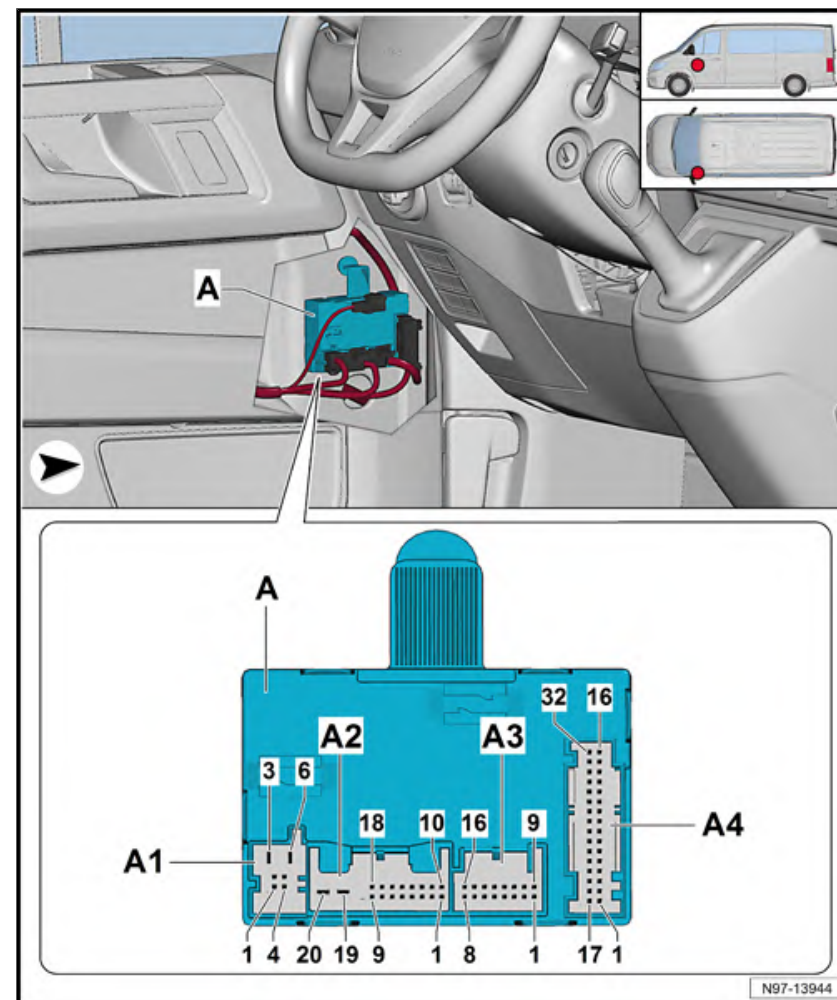

1.15 Front passenger door control unit -J387-


A - Front passenger door control unit -J387-

A1 - 6-pin connector -T6cw-

A2 - 20-pin connector -T20l-

A3 - 16-pin connector -T16n-


A4 - 32-pin connector -T32i-

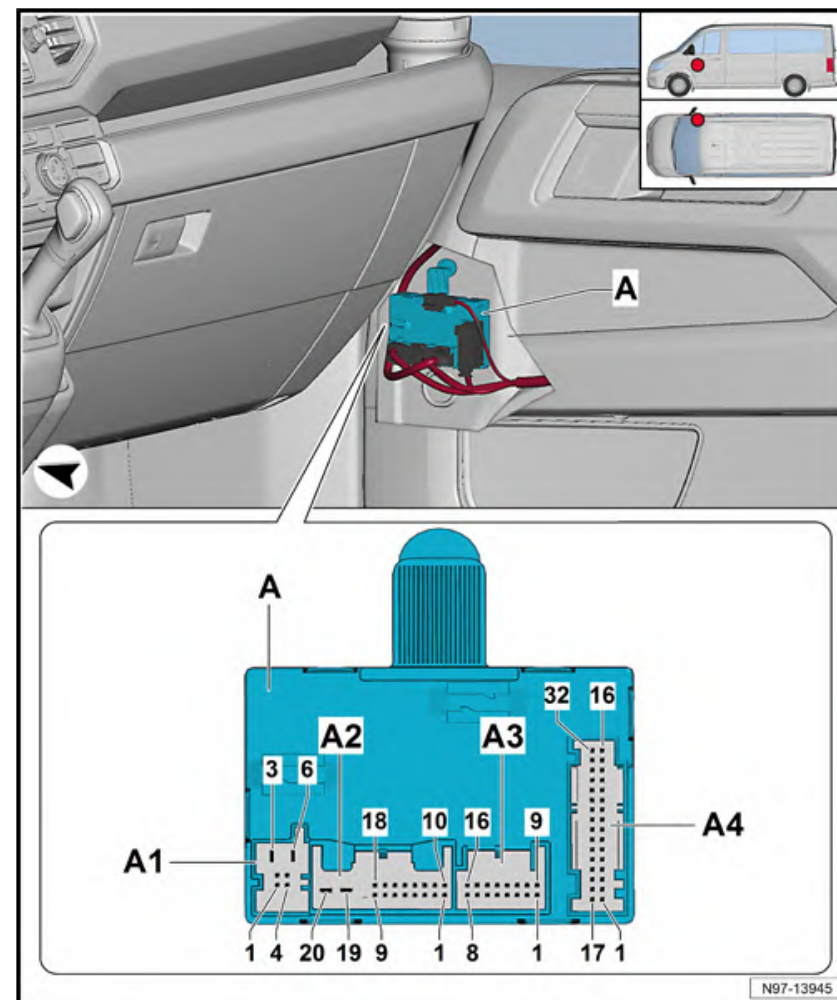

1.16 Rear right door control unit -J389-

A - Rear right door control unit -J389-


A1 - 20-pin connector -T20g-

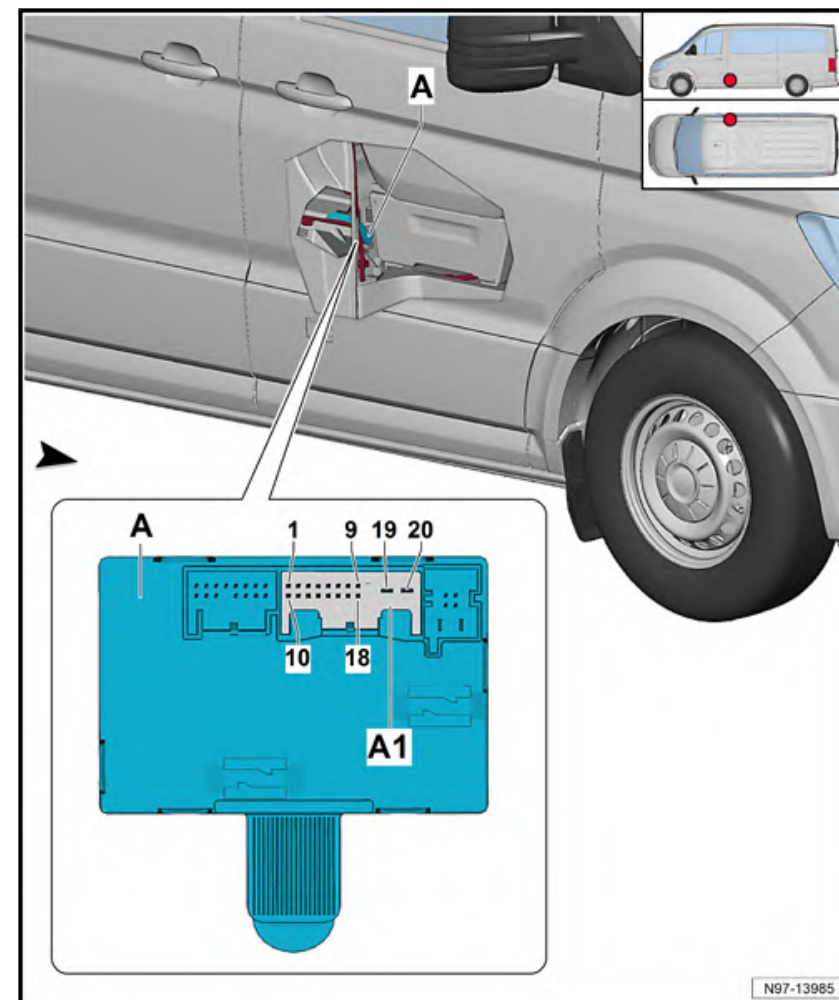

1.17 Airbag control unit -J234-

A - Airbag control unit -J234-


A1 - 90-pin connector -T90f-

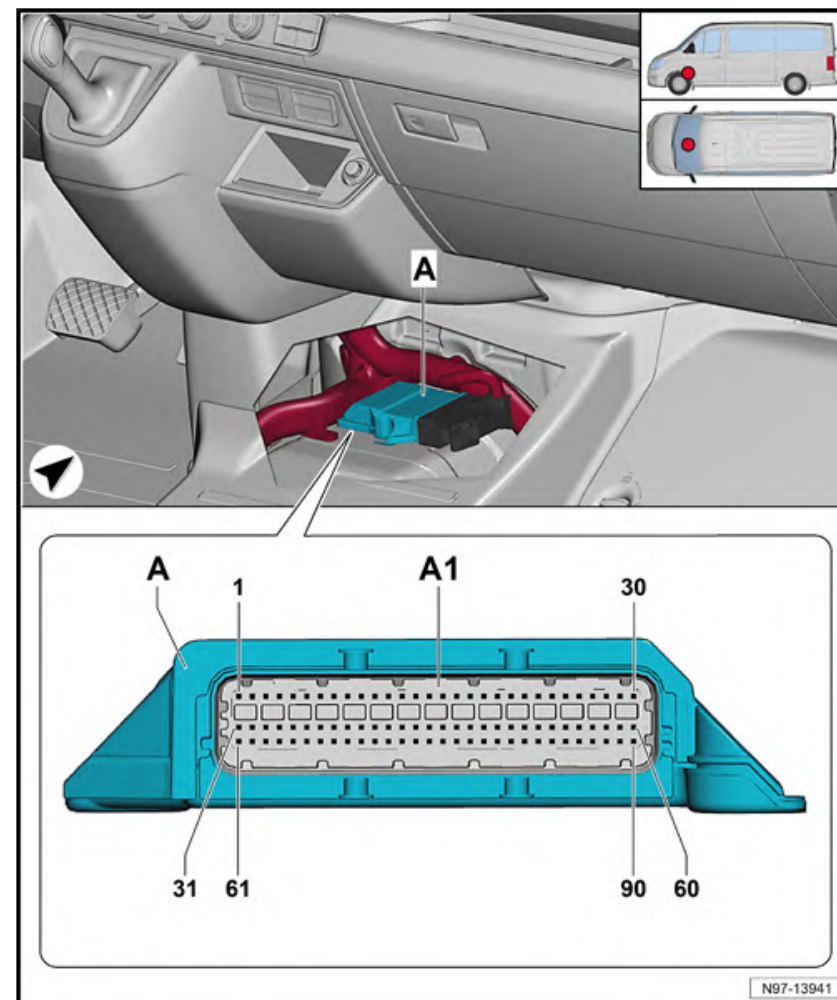

1.18 Interior monitoring sensor -G273-

A - Interior monitoring sensor -G273-

A1 - 4-pin connector -T4el-

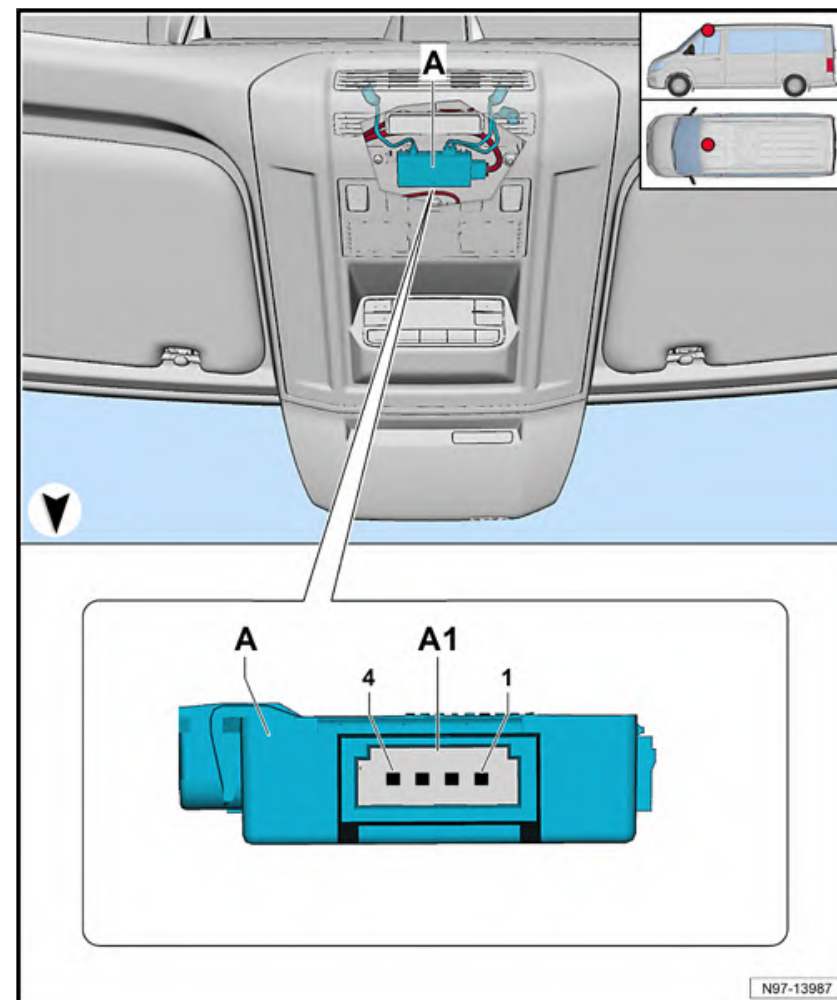


1.19 Steering column electronics control unit -J527-

A - Steering column electronics control unit -J527-

A1 - 4-pin connector -T4fk-


A2 - 16-pin connector -T16h-

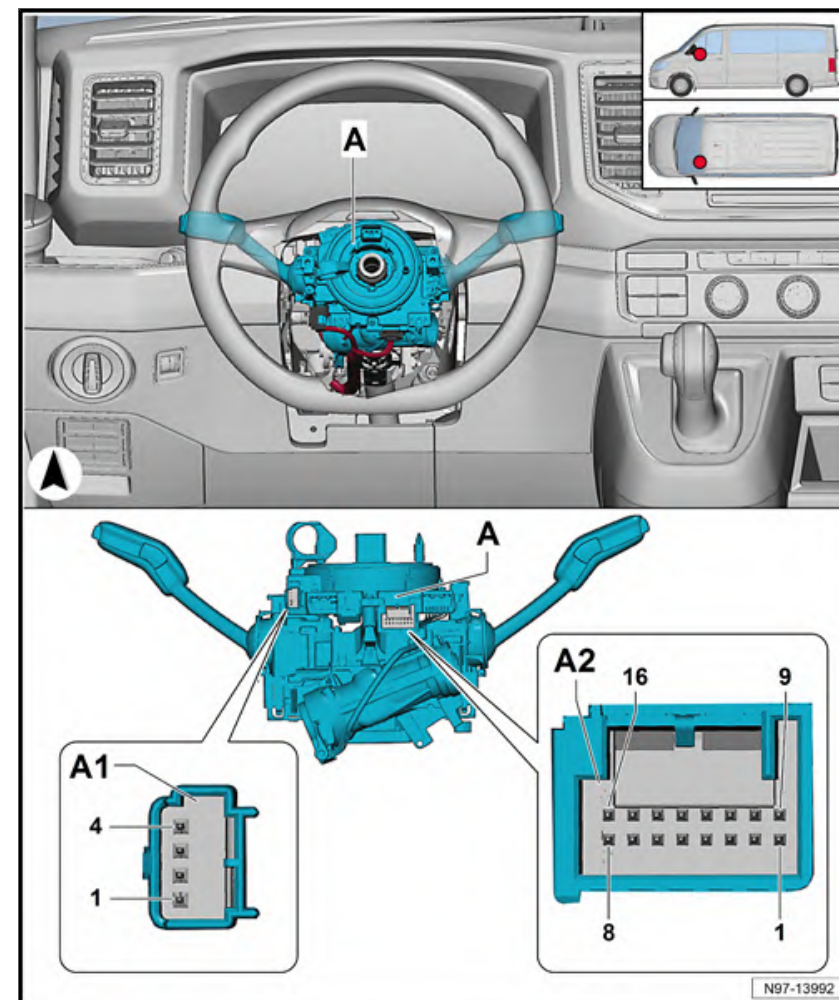

1.20 Selector lever sensors control unit -J587-

A - Selector lever sensors control unit -J587-

A1 - 10-pin connector -T10ab-

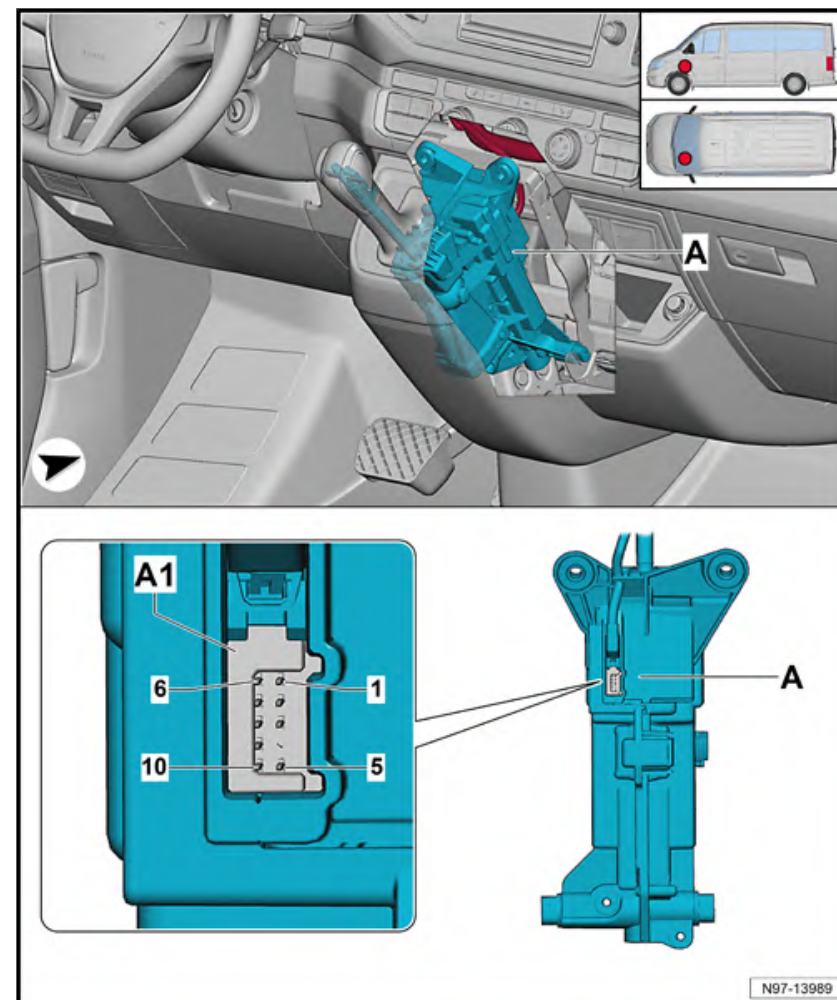


1.21 Storage compartment with interface for mobile telephone -R265-

A - Storage compartment with interface for mobile telephone -R265-

A1 - 4-pin connector -T4fn-

A2 - 2-pin connector -T2on-

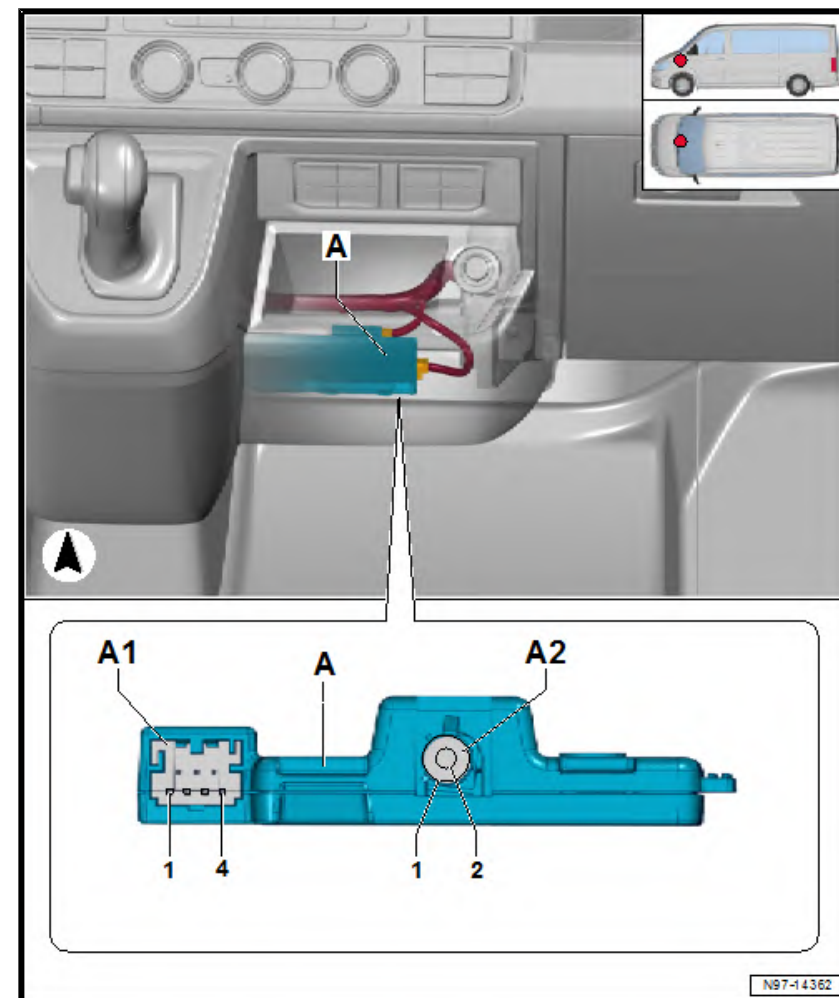


1.22 Control unit for front left massage seat -J803-

A - Control unit for front left massage seat -J803-

A1 - 12-pin connector -T12w-

A2 - 16-pin connector -T16q-

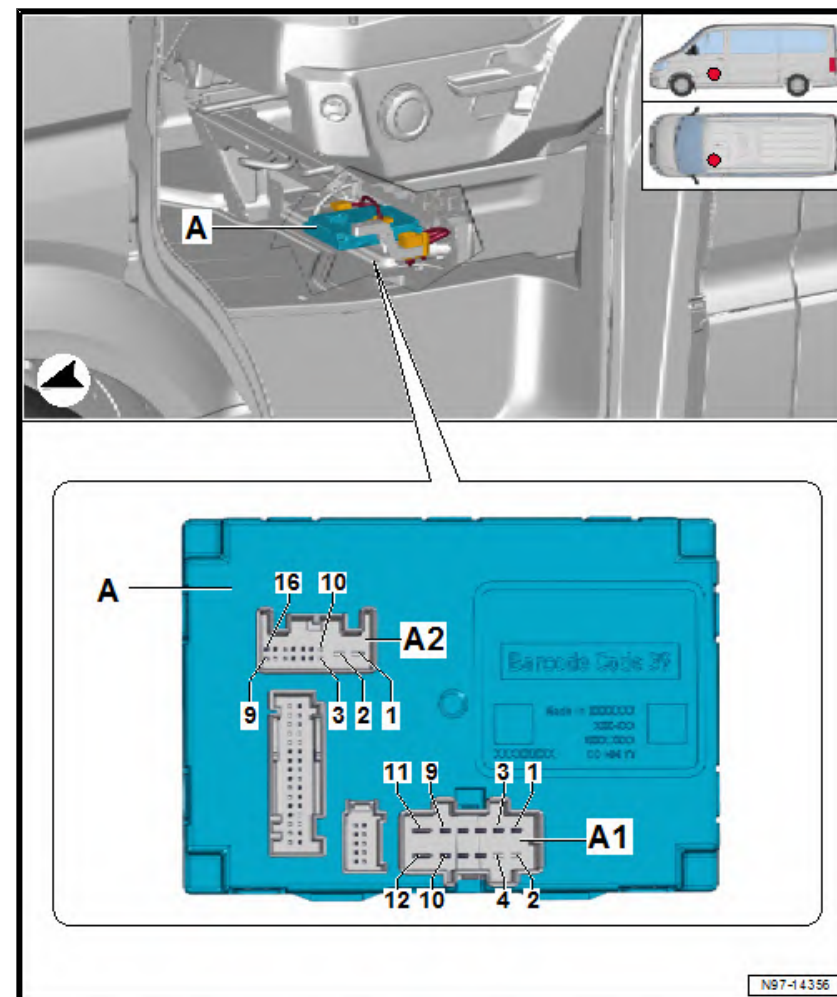


1.23 Control unit for front right massage seat -J804-

A - Control unit for front right massage seat -J804-

A1 - 12-pin connector -T12y-


A2 - 16-pin connector -T16r-

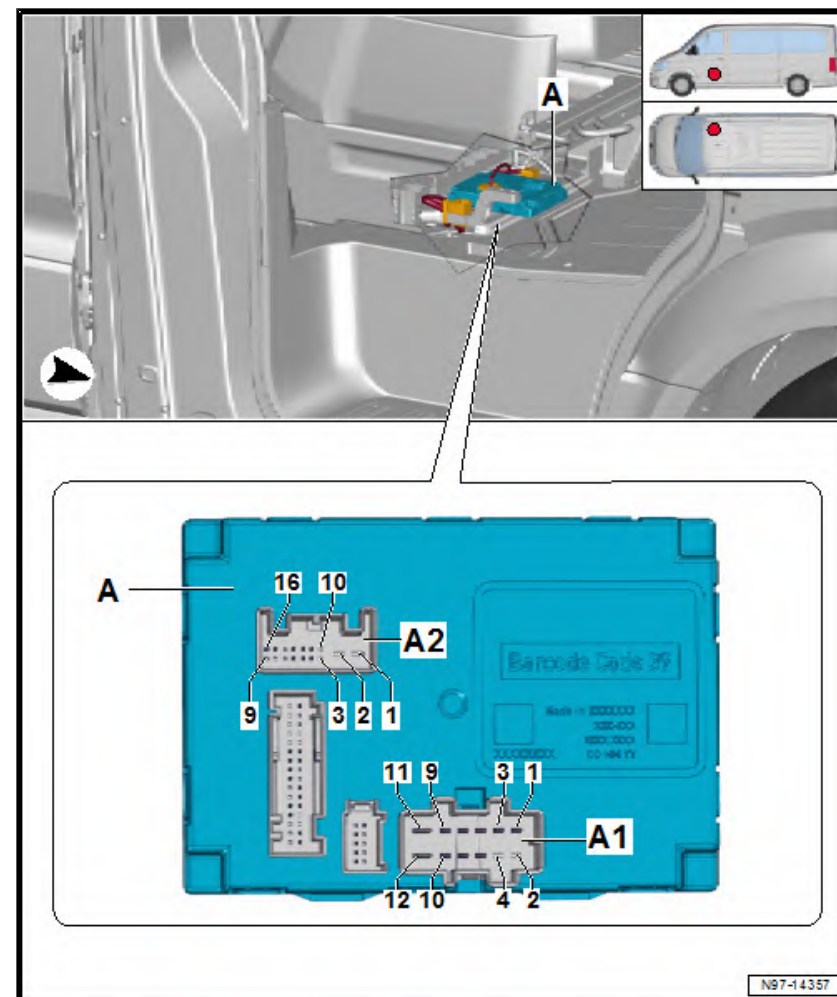

1.24 Battery regulation control unit -J840-

A - Battery regulation control unit -J840-

A1 - 2-pin connector -T2lw-

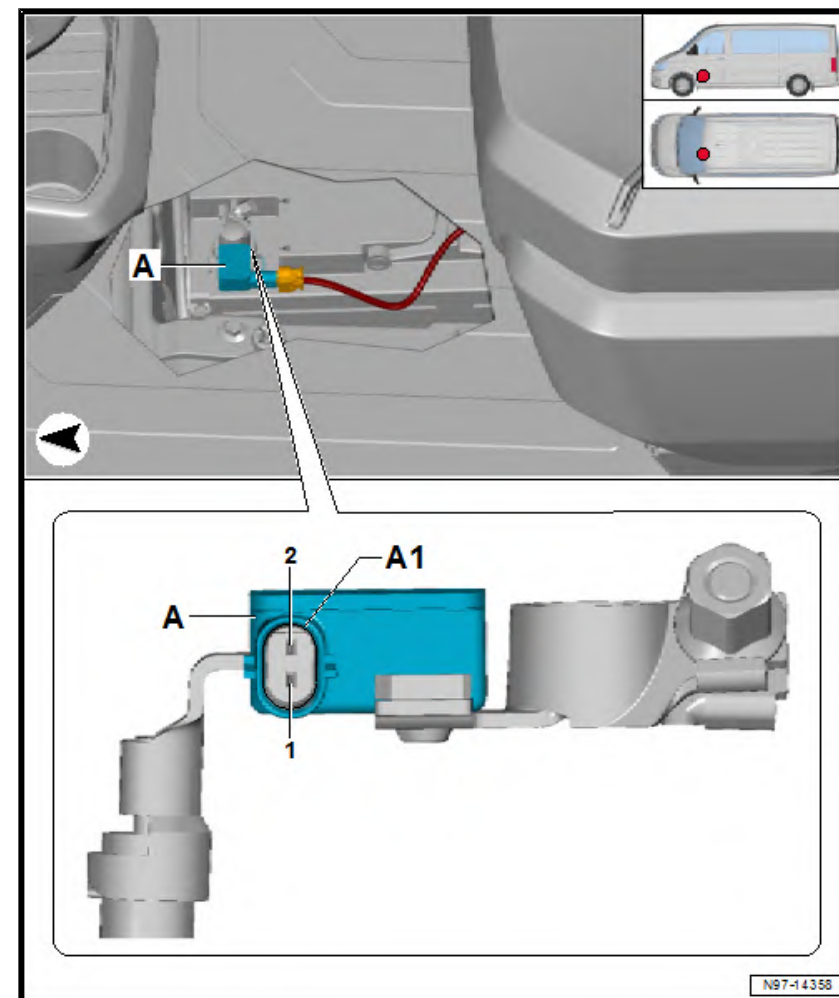


1.25 Control unit for supplementary blower for air conditioning -J1144-

A - Control unit for supplementary blower for air conditioning -J1144-

A1 - 2-pin connector -T2vb-

A2 - 4-pin connector -T4es-

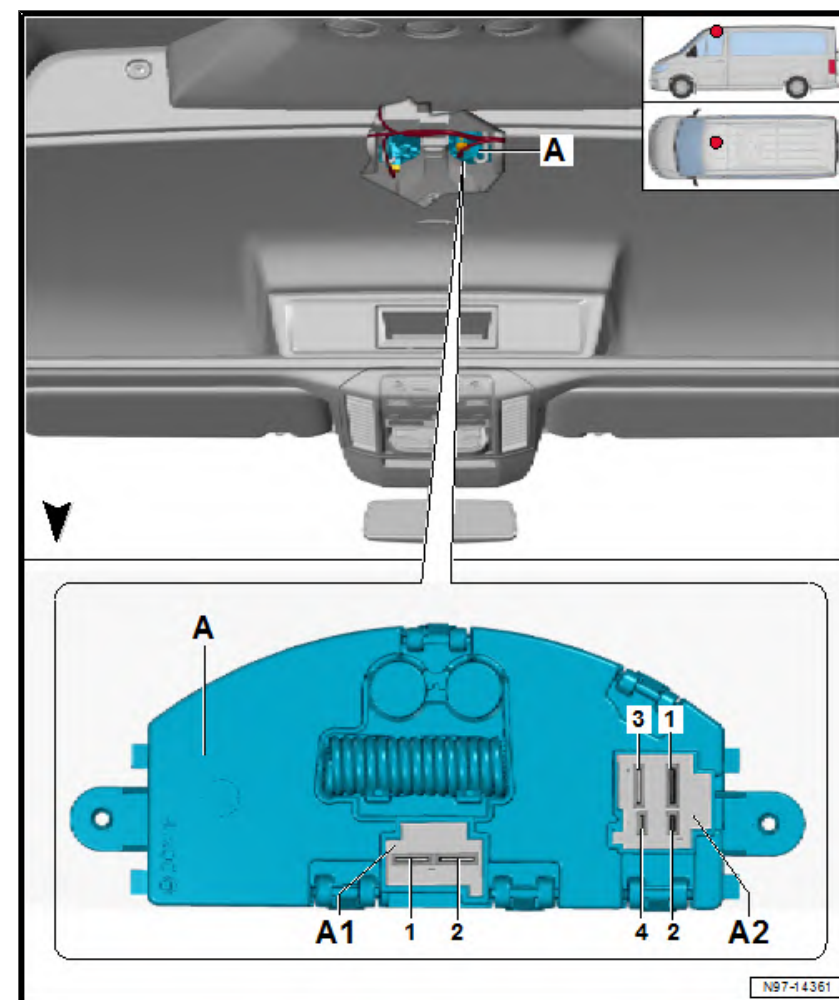


1.26 Control unit for supplementary blower 2 for air conditioning -J1145-

Volkswagen Technical Site: <https://vwts.ru>

A - Control unit for supplementary blower 2 for air conditioning -J1145-

A1 - 2-pin connector -T2ve-

A2 - 4-pin connector -T4er-

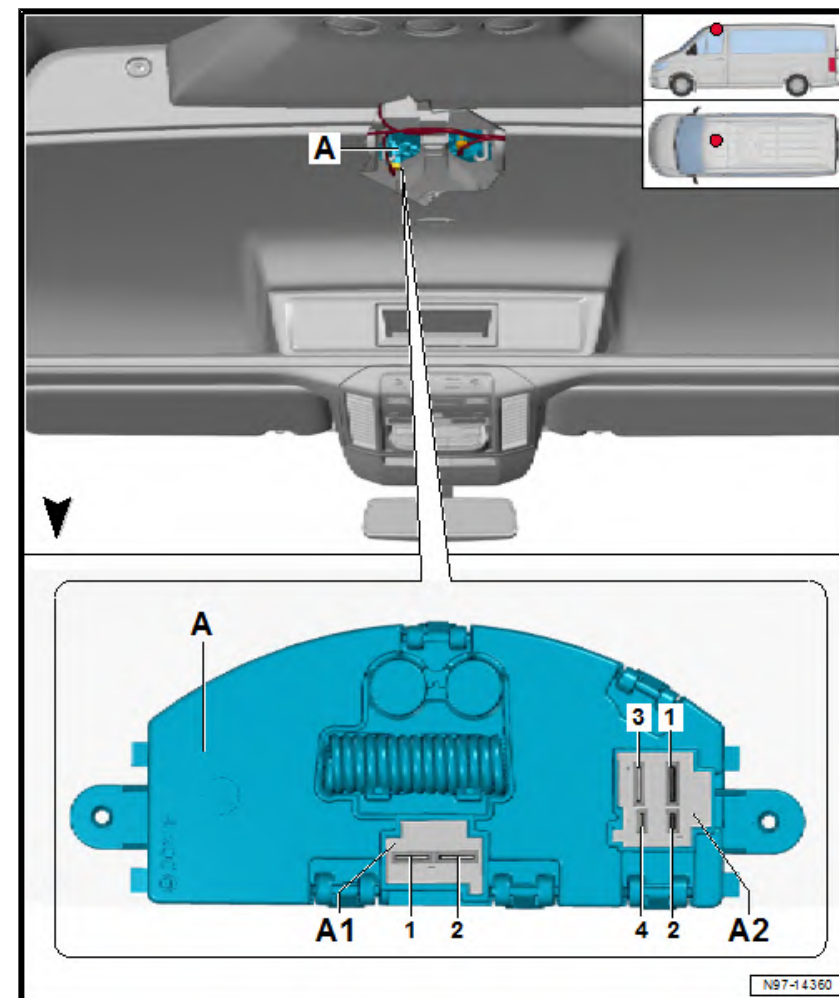


1.27 Auxiliary heater control unit -J364-

A - Auxiliary heater control unit -J364-

A1 - 6-pin connector -T6bm-

A2 - 2-pin connector -T2me-

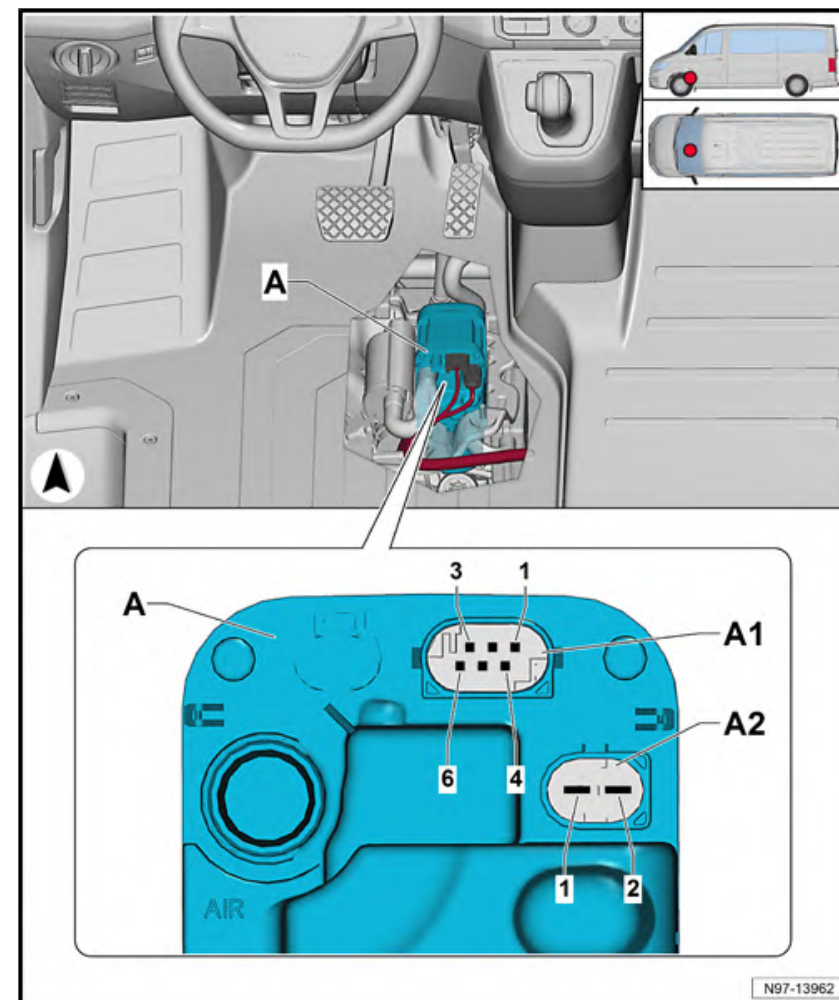


1.28 Control unit for reducing agent heater -J891-

A - Control unit for reducing agent heater -J891-

A1 - 4-pin connector -T4gn-


A2 - 5-pin connector -T5bh-

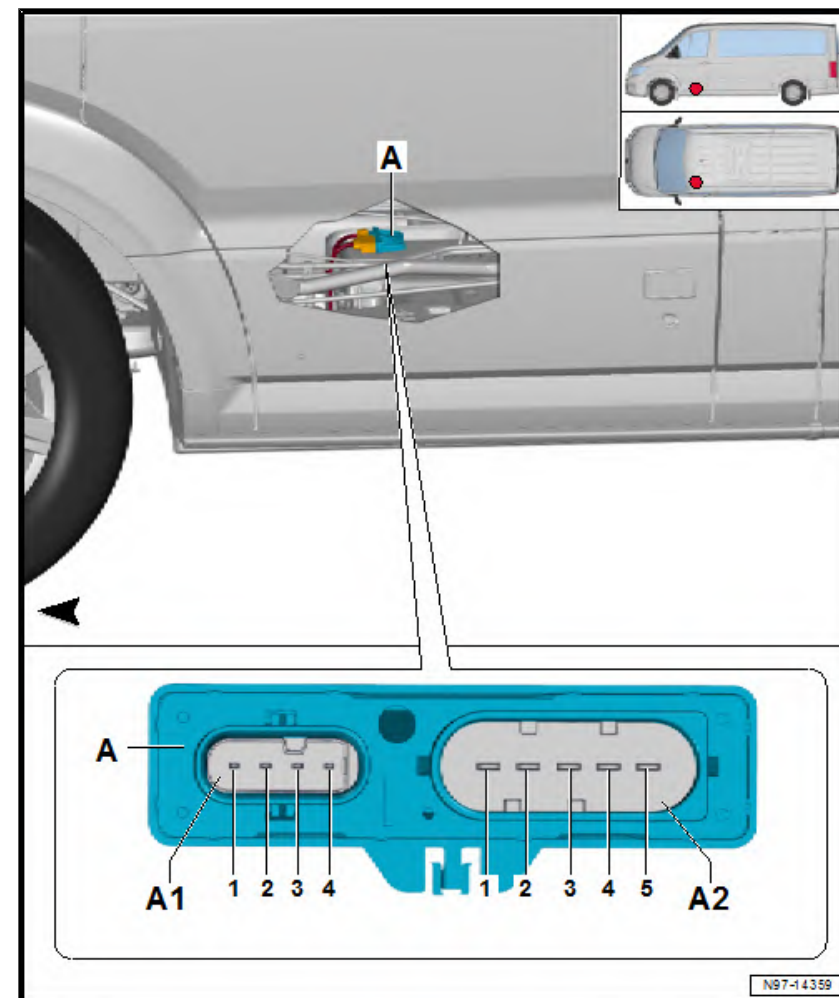

1.29 Control unit for NOx sender -J583-

A - Control unit for NOx sender -J583-

A1 - 5-pin connector -T5ai-

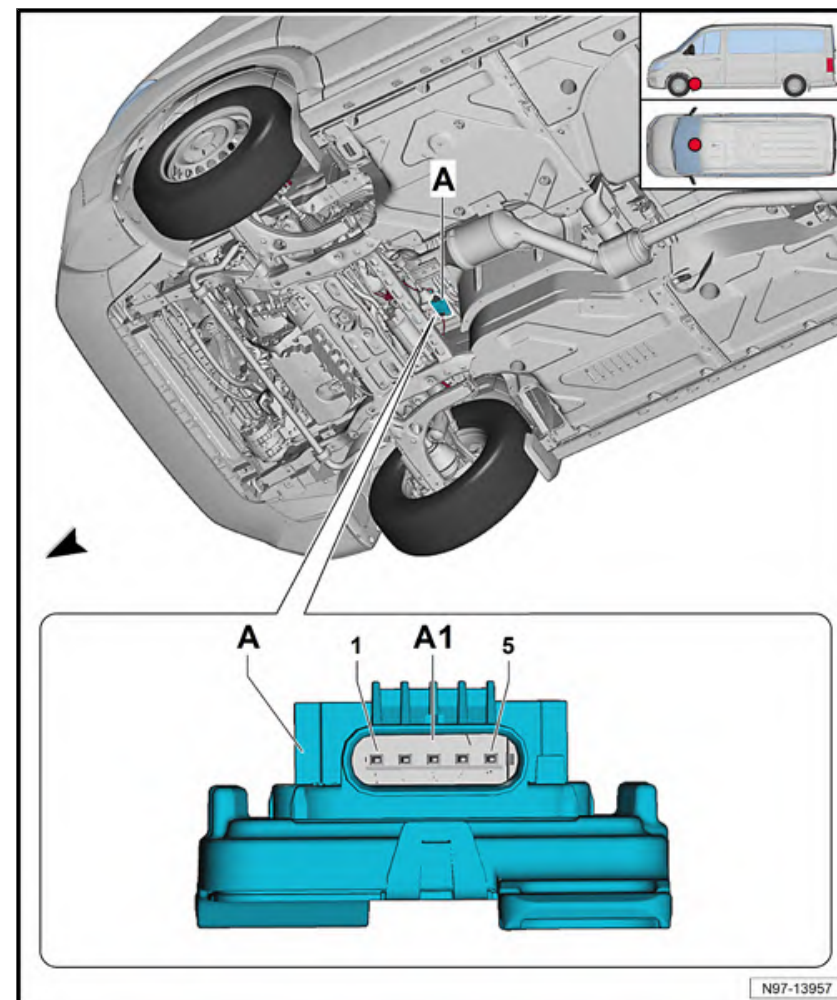


1.30 Control unit for NOx sender 2 -J881-
and Particulate sensor -G784-

A - Control unit for NOx sender 2 -J881-

A1 - 5-pin connector -T5ak-

B - Particulate sensor -G784-

B1 - 4-pin connector -T4ev-

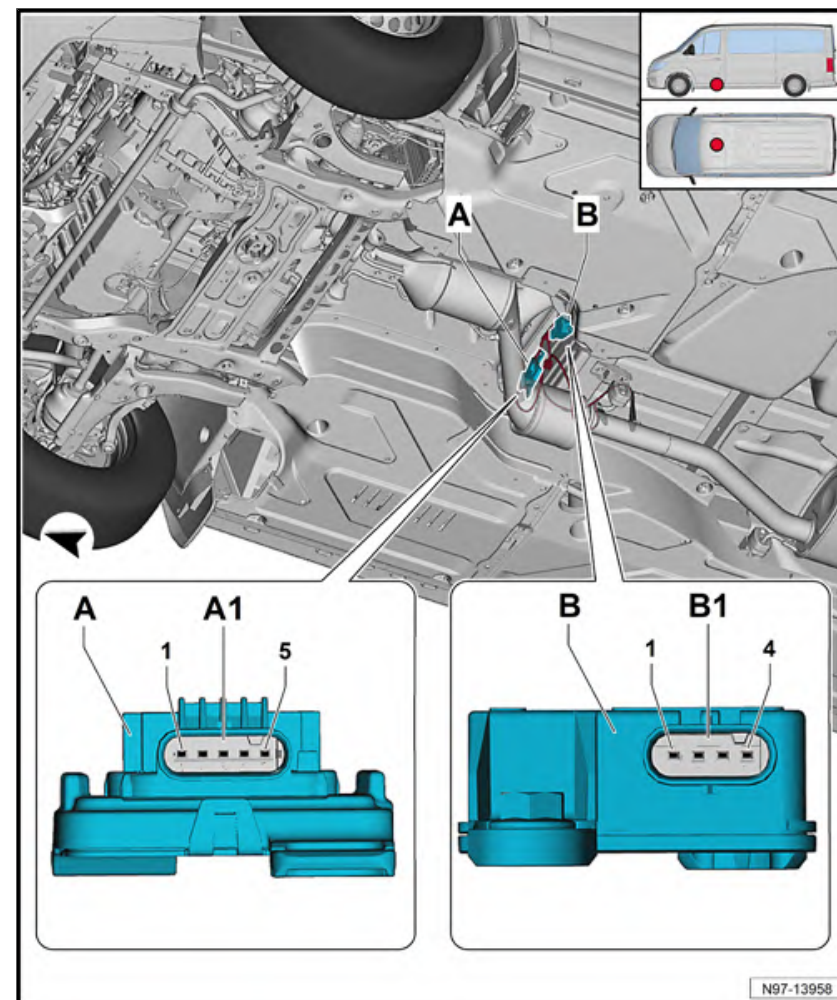

1.31 Special vehicle control unit -J608-

1.31.1 Fitting location, left-hand drive


A - Special vehicle control unit -J608-

A1 - 20-pin connector -T20i-

A2 - 40-pin connector -T40b-

A3 - 12-pin connector -T12o-

A4 - 6-pin connector -T6cb-

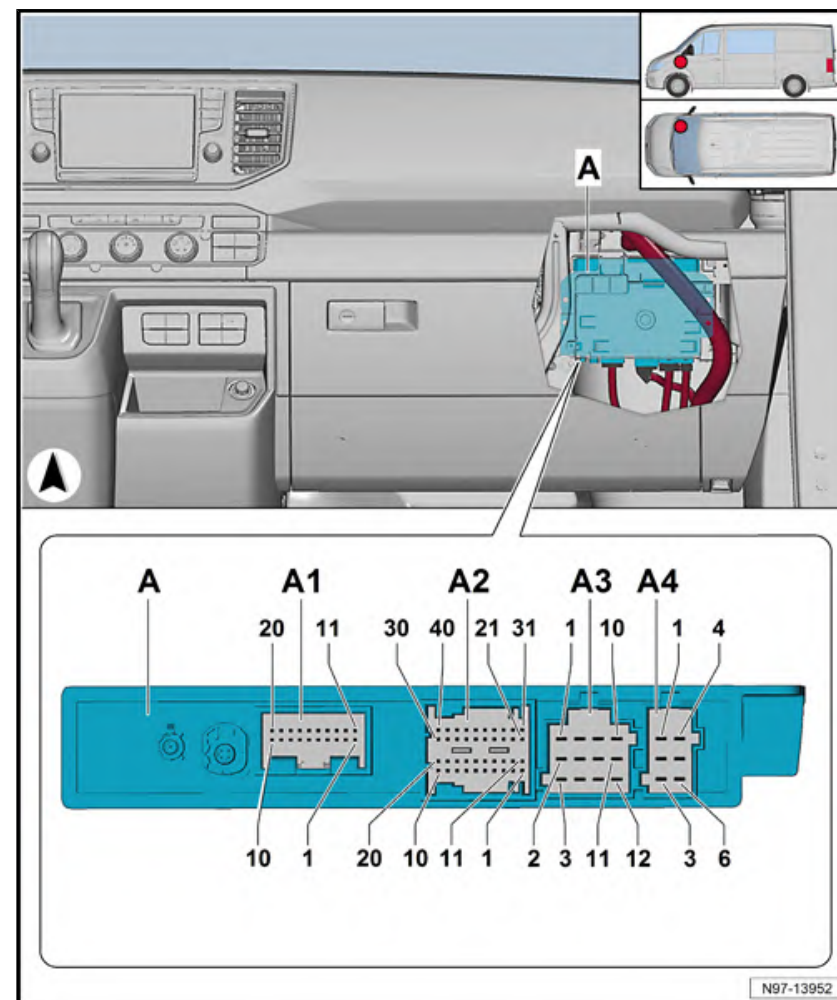

1.31.2 Fitting location, right-hand drive


A - Special vehicle control unit -J608-

A1 - 20-pin connector -T20i-

A2 - 40-pin connector -T40b-

A3 - 12-pin connector -T12o-

A4 - 6-pin connector -T6cb-

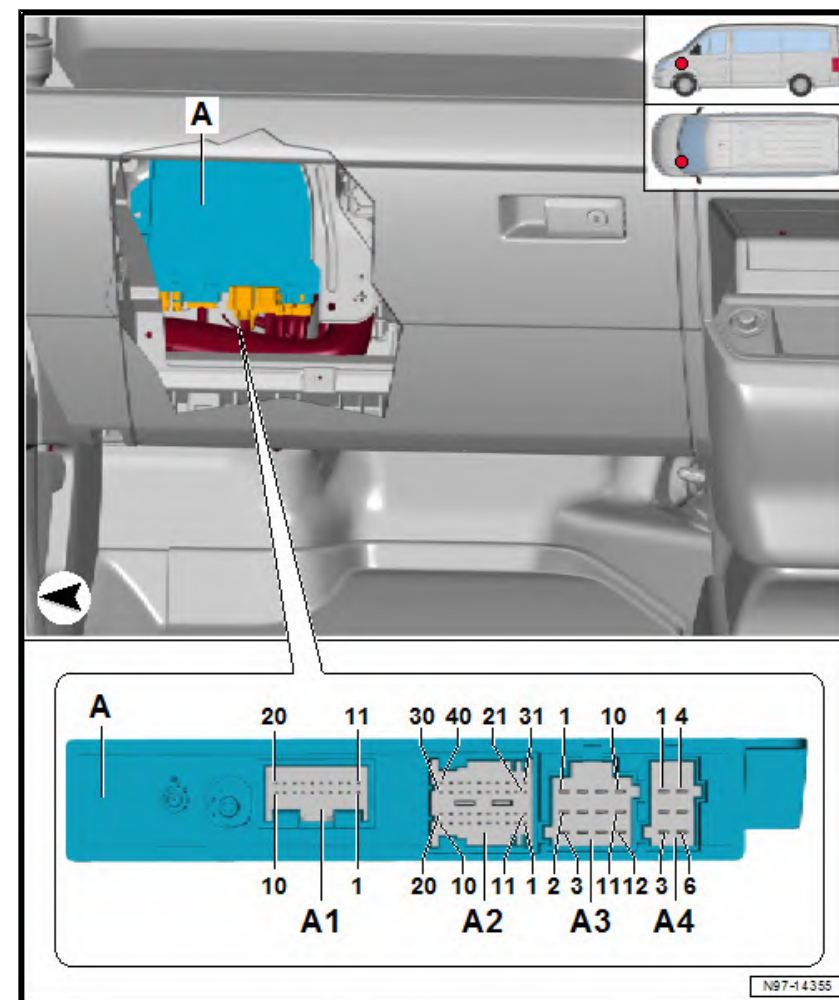


1 Control units in rear part of vehicle

1.1 Differential lock control unit -J187-

A - Differential lock control unit -J187-

A1 - 8-pin connector -T8by-


A2 - 2-pin connector -T2-

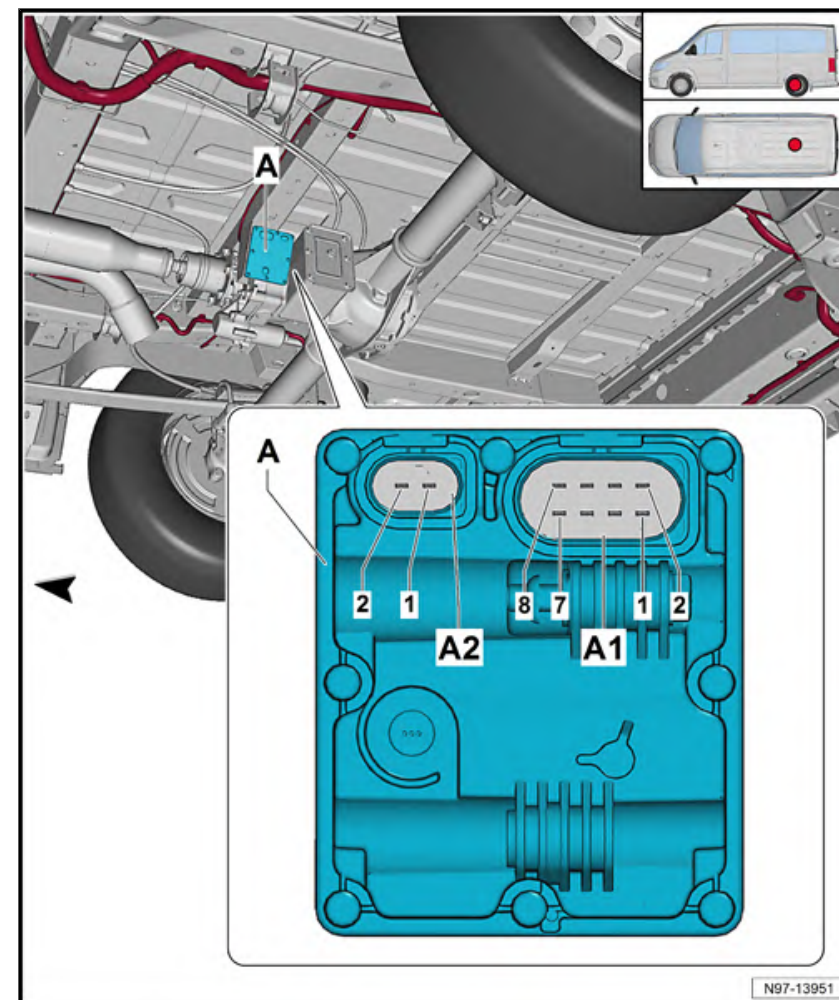

1.2 All-wheel drive control unit -J492-

A - All-wheel drive control unit -J492-


A1 - 8-pin connector -T8bx-

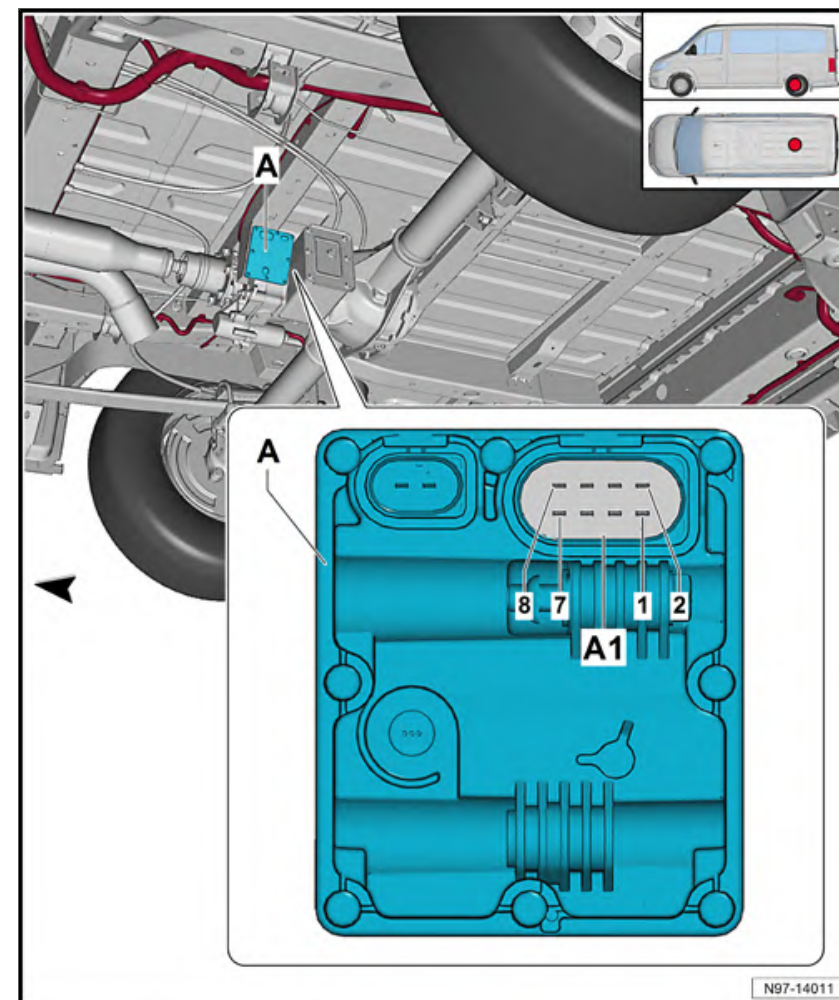

1.3 Tyre Pressure Monitoring System control unit -J502-

A - Tyre Pressure Monitoring System control unit -J502-


A1 - 4-pin connector -T4eo-

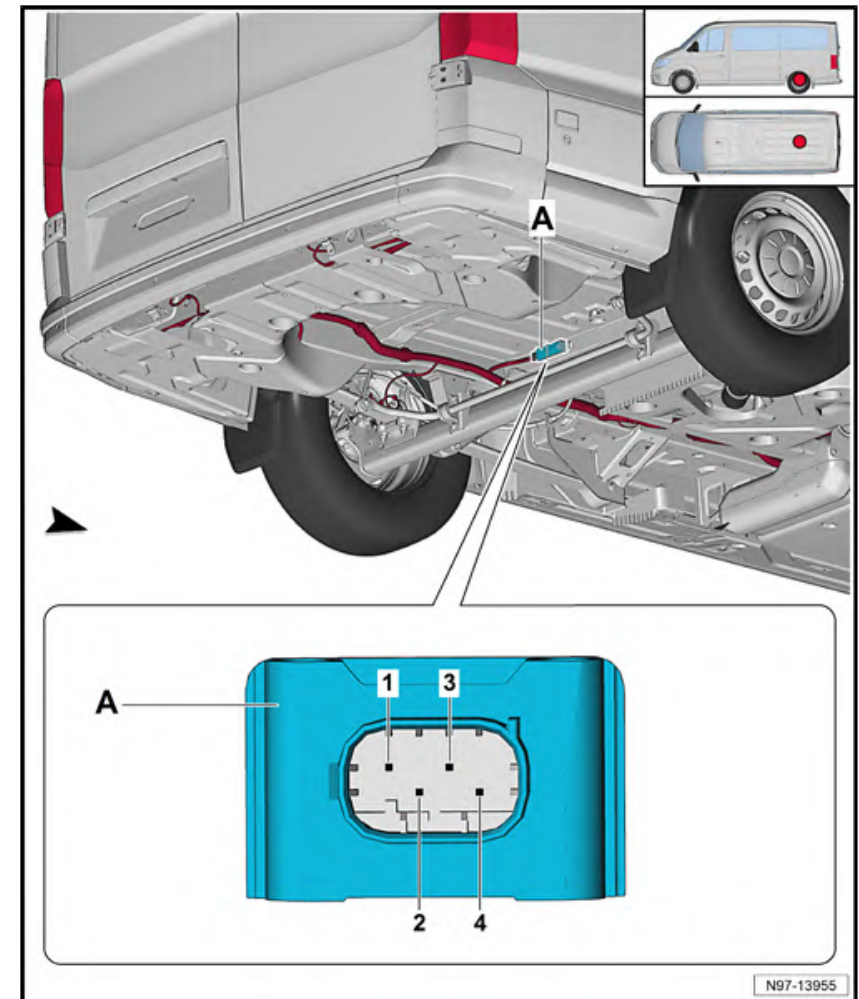

1.4 Interior monitoring sensor 3 -G593-


A - Interior monitoring sensor 3 -G593-

A1 - 4-pin connector -T4fa-

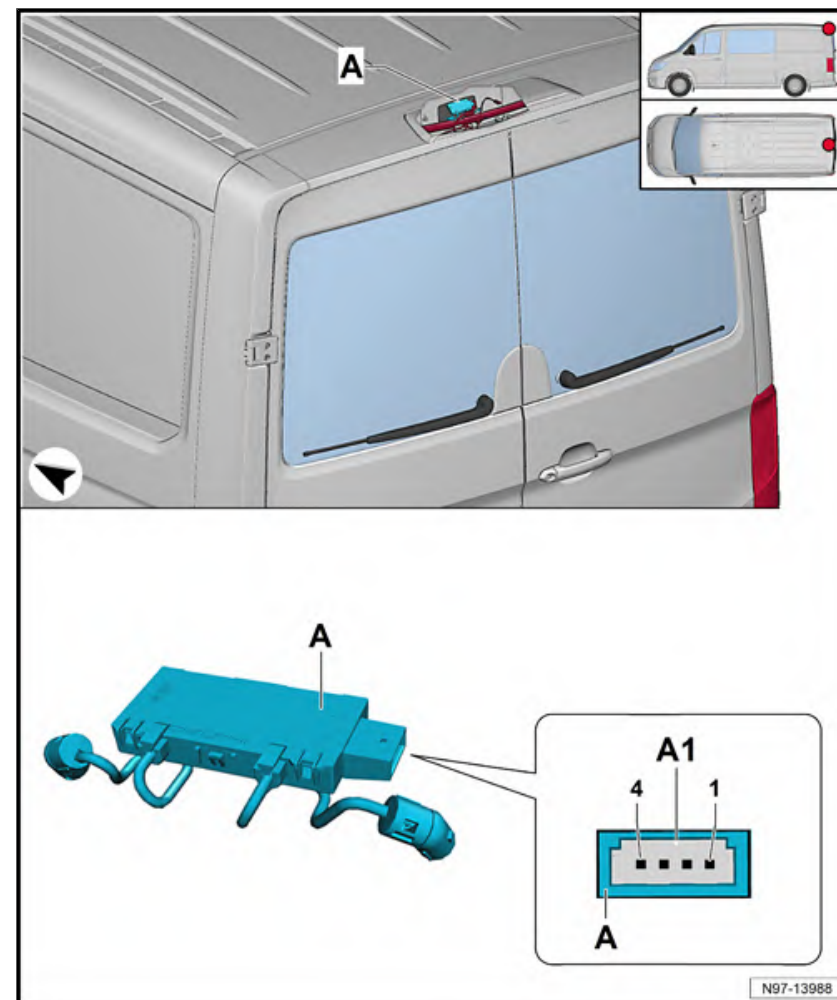

1.5 Blind Spot Monitor control unit -J1086-
and Blind Spot Monitor control unit 2 -J1087-

- A - Blind Spot Monitor control unit -J1086-
- A1 - 8-pin connector -T8cb-
- B - Blind Spot Monitor control unit 2 -J1087-
- B1 - 8-pin connector -T8ca-

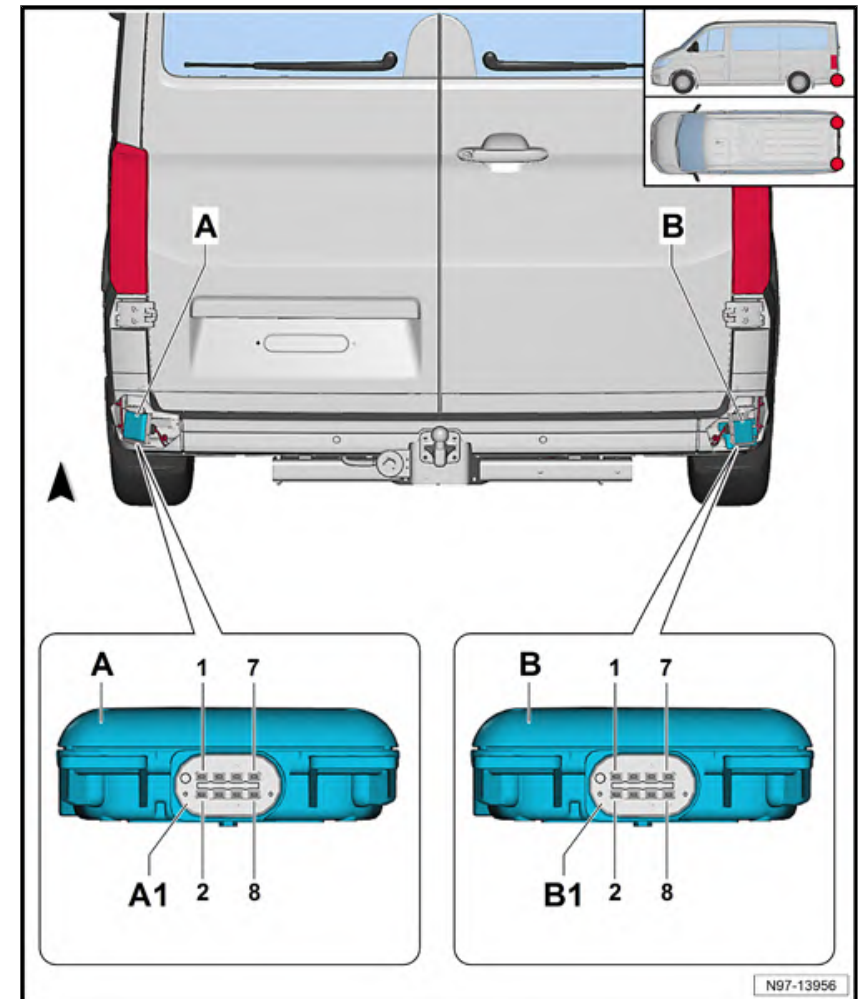


1 Coupling points

1.1 Coupling point on engine, bottom left -TMUL-

A - 8-pin connector -T8cs-


B - 14-pin connector -T14aj-

C - 14-pin connector -T14al-

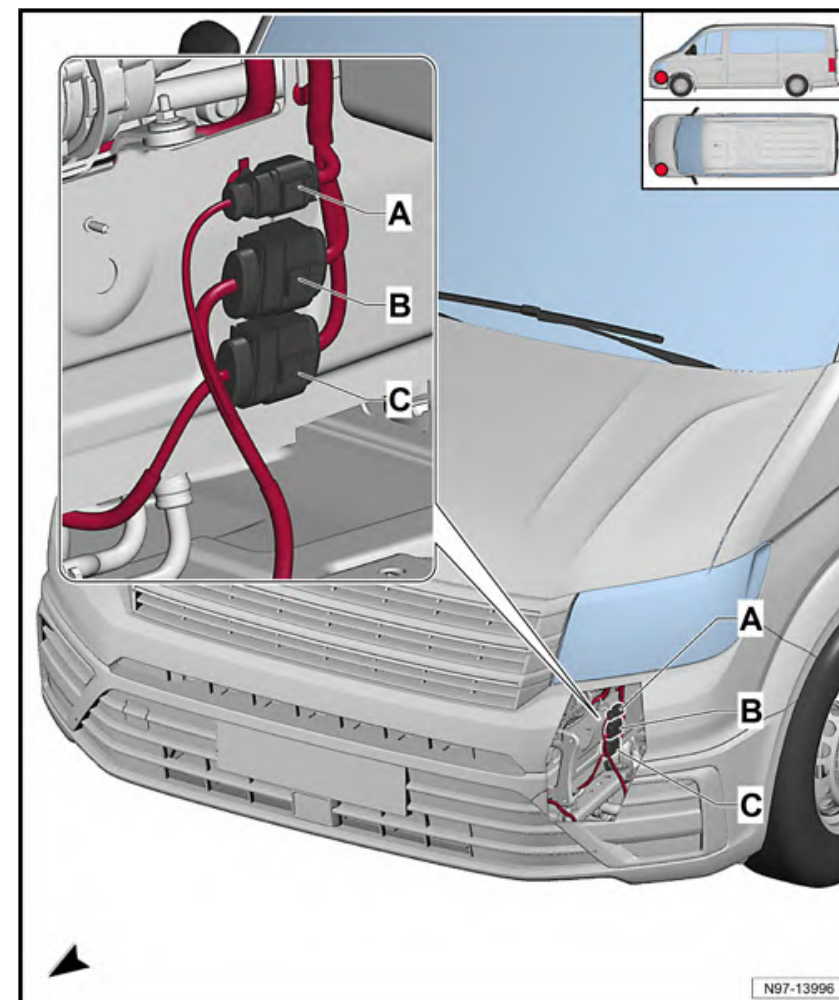


1.2 Coupling point for front left door -TTVL-

A - 28-pin connector -T28f-

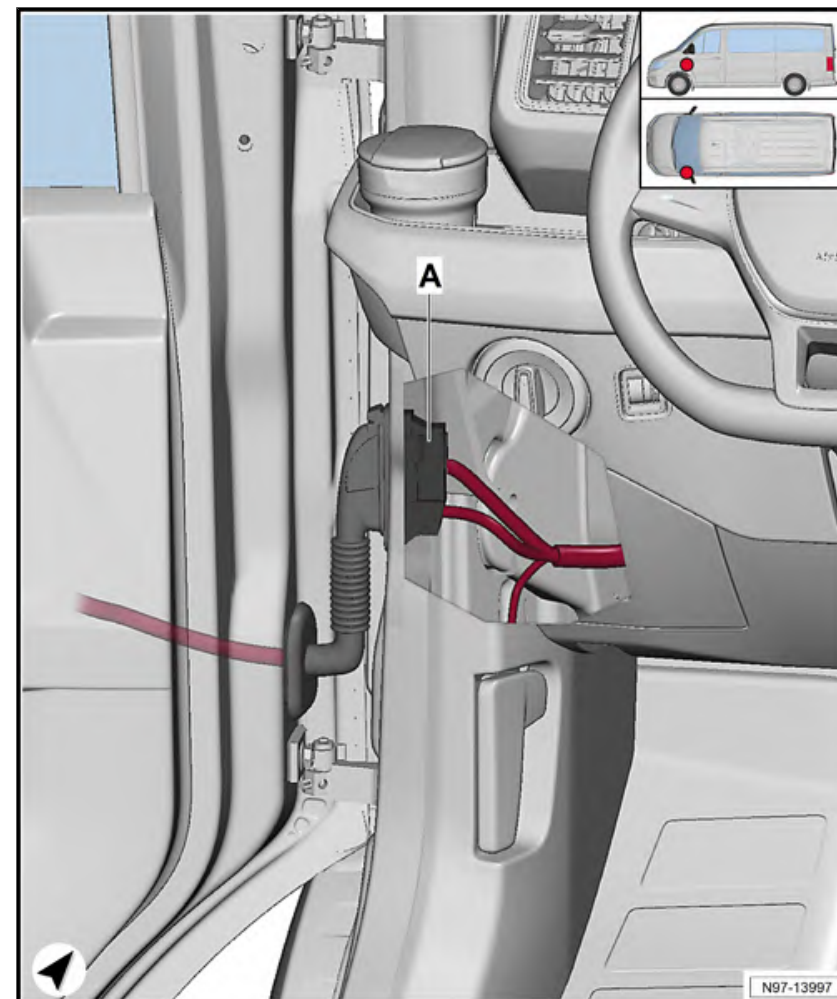


1.3 Coupling point for front right door -TTVR-

A - 28-pin connector -T28g-

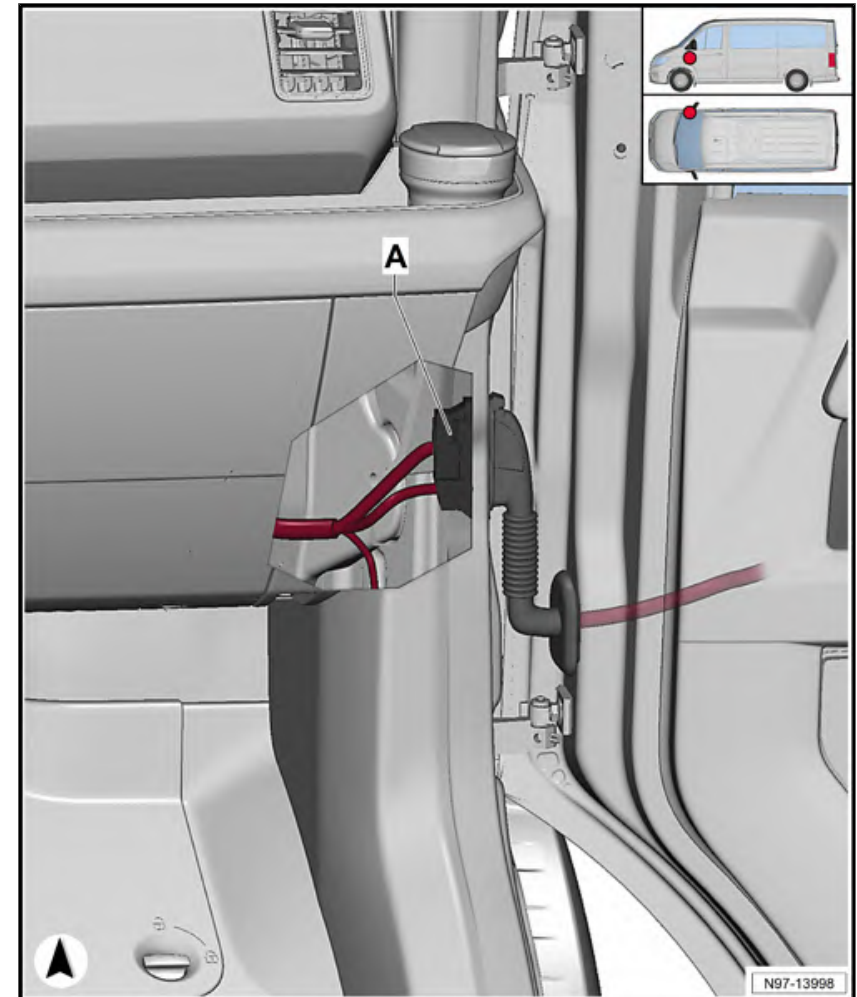


1.4 Coupling point for rear left door, only for models with double cab -TTHL-

A - 17-pin connector -T17aa-

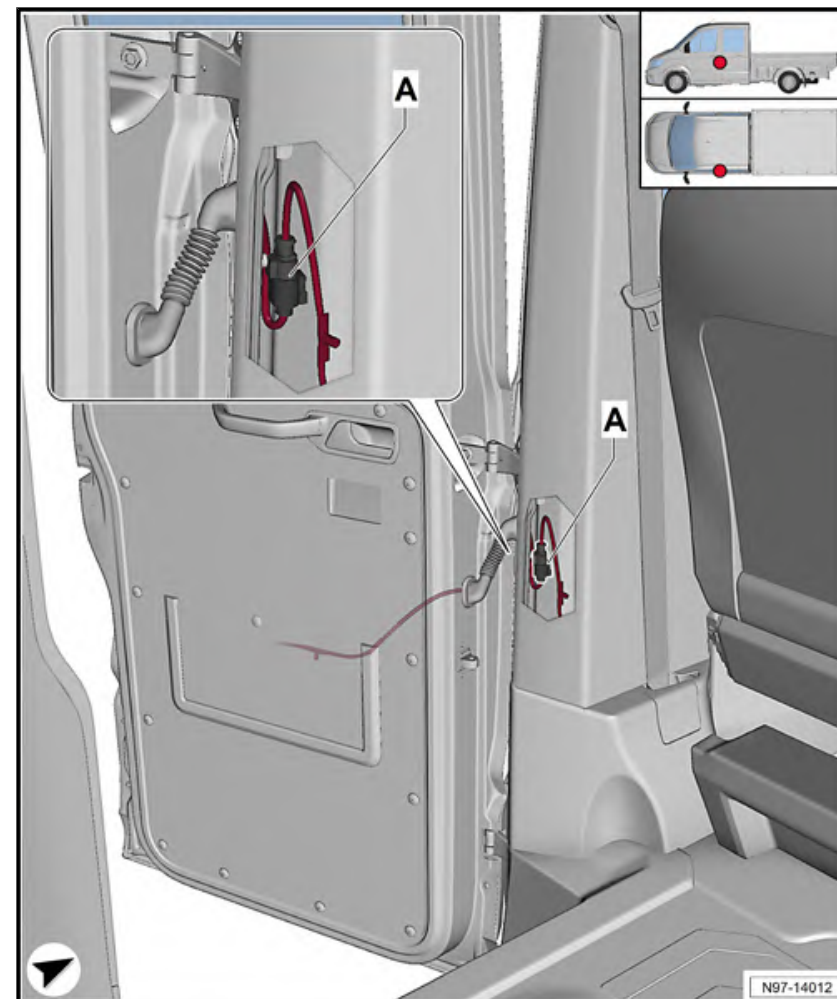


1.5 Coupling point for rear right door, only for models with double cab -TTHR-

A - 17-pin connector -T17ab-

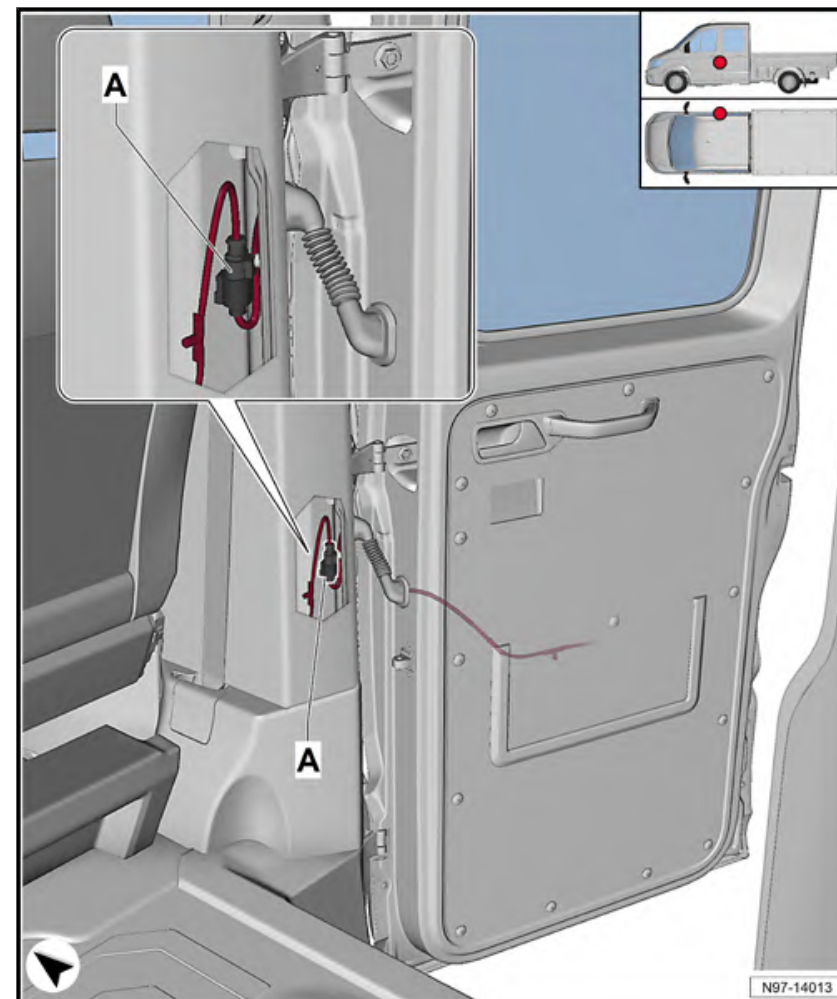


1.6 Contact strip in left sliding door -F353-

A - 1-pin connector -T1anx-

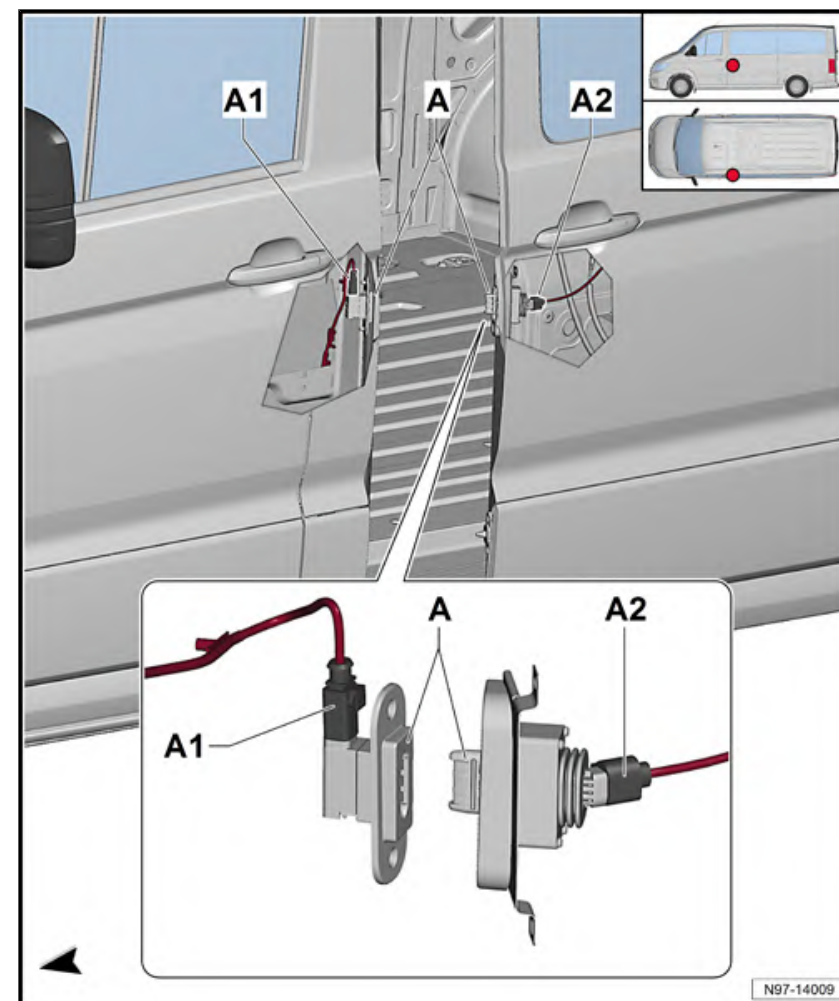

1.7 Contact strip in right sliding door -F352-


A - 1-pin connector -T1any-

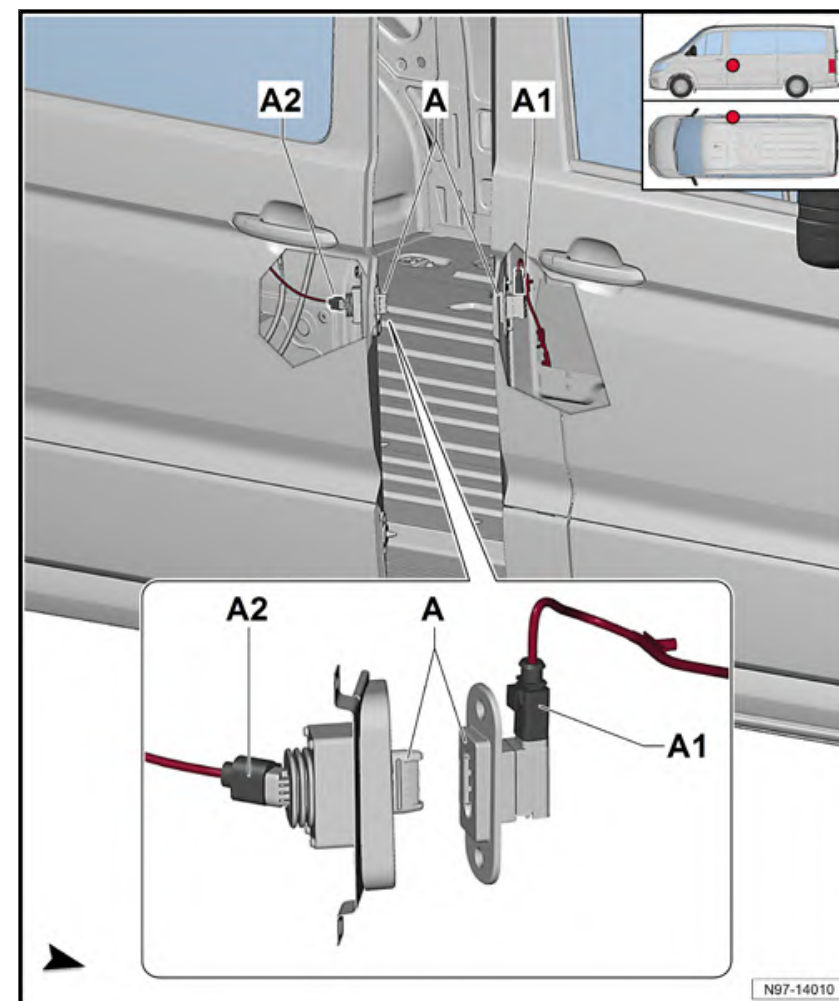

1.8 Coupling point in left seat box -TSKVL-

A - 3-pin connector -T3lb-


B - 17-pin connector -T17y-

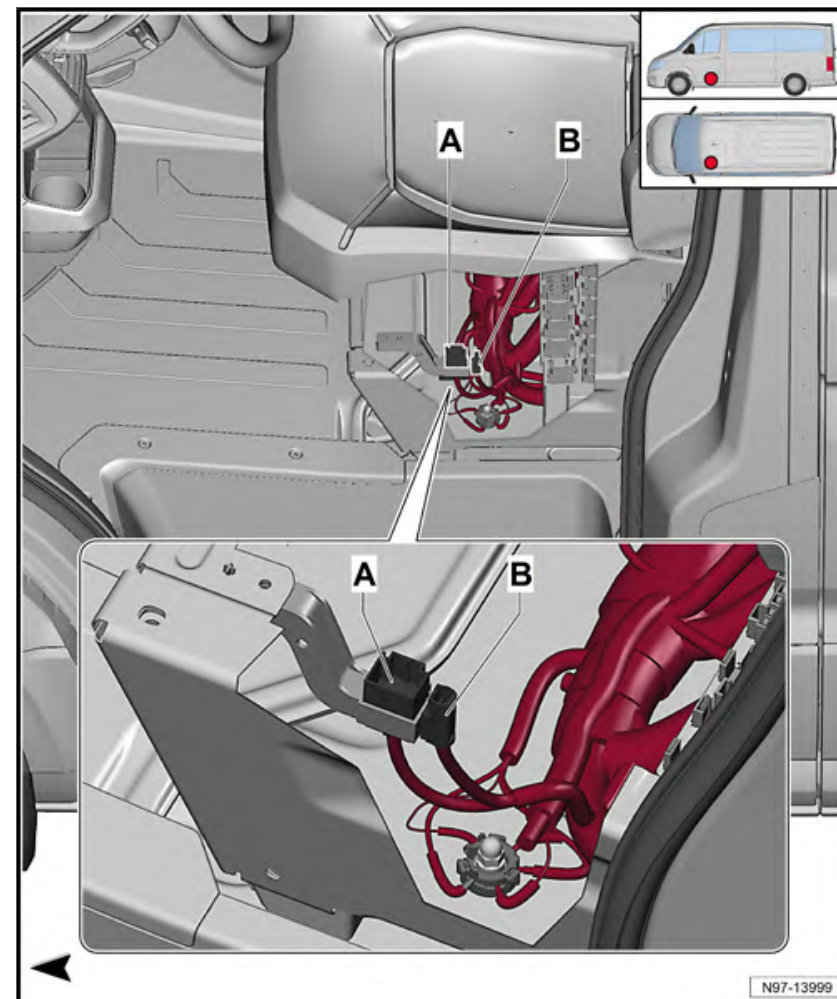

1.9 Coupling point in right seat box -TSKVR-


A - 3-pin connector -T3lc-

B - 17-pin connector -T17z-

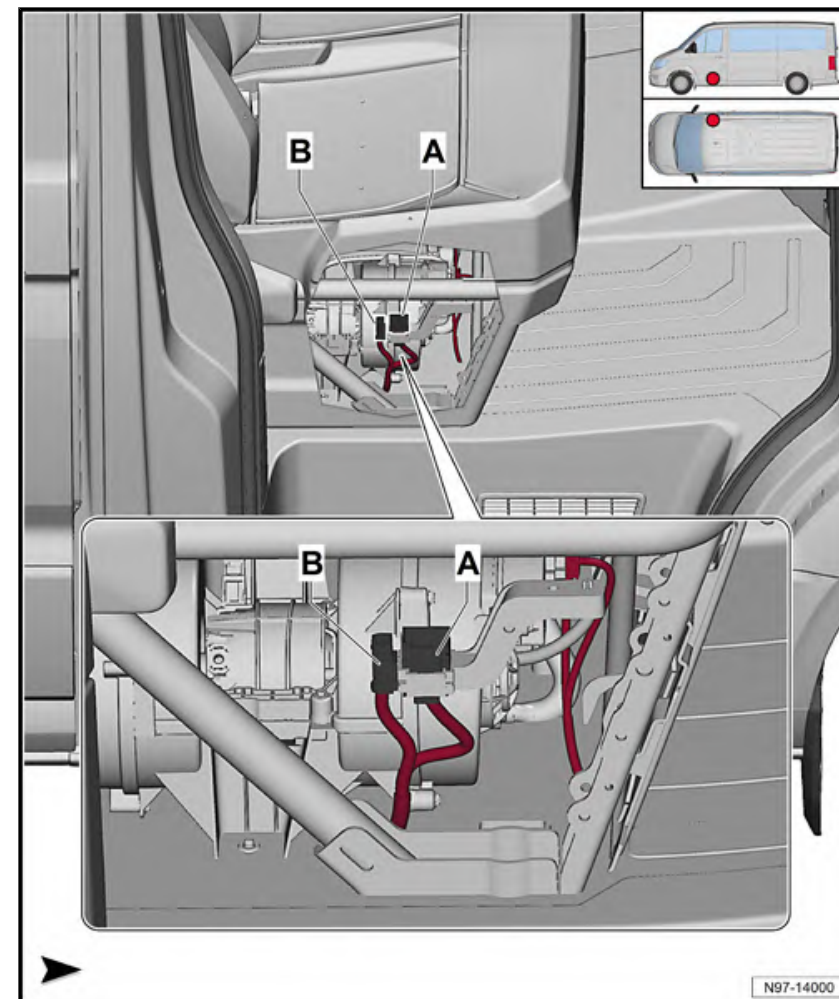

1.10 Coupling point for front heater and air conditioning system -THUKV-

A - 12-pin connector -T12p-

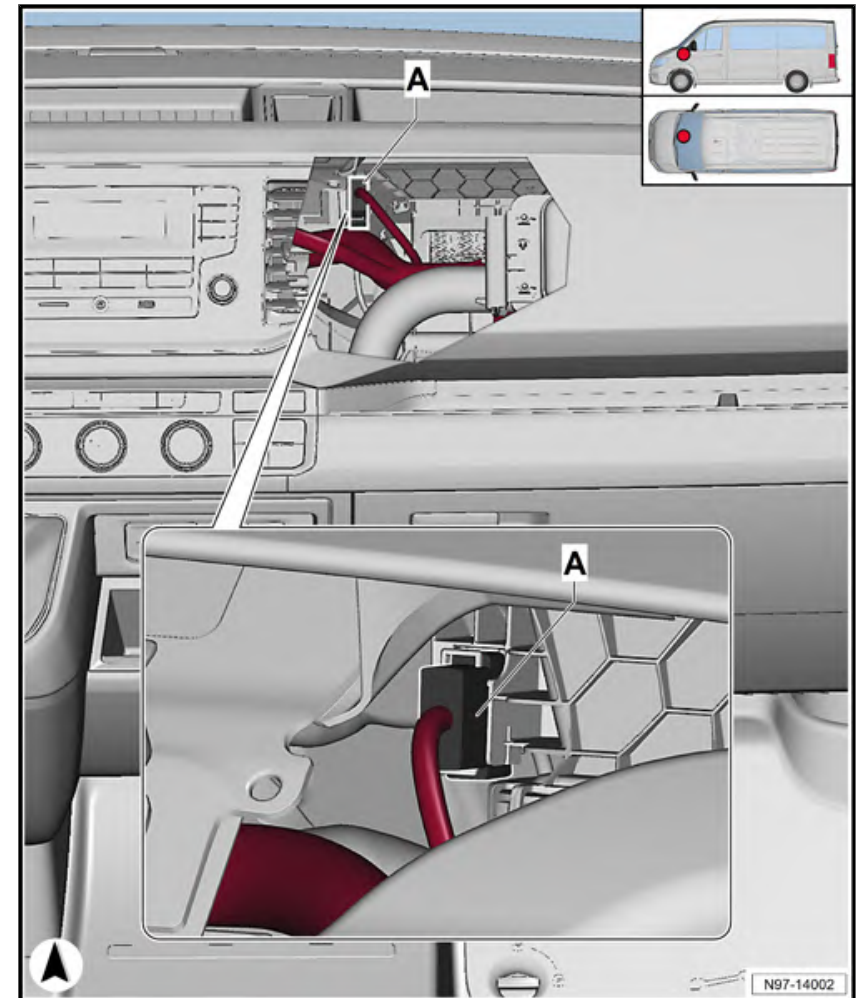


1.11 Coupling point in engine compartment, left -TML-

A - 14-pin connector -T14ak-




Note

Coupling point can be found on longitudinal member.

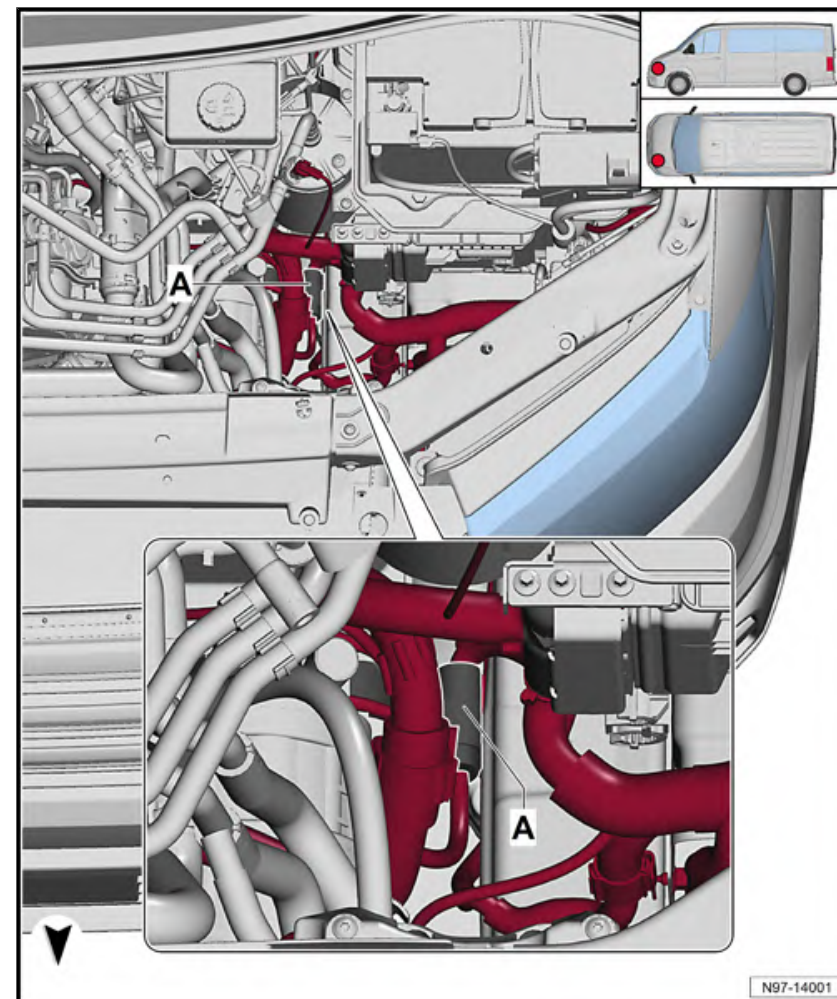


1.12 Coupling point for reducing agent metering system -TRMD-

A - 14-pin connector -T14ao-

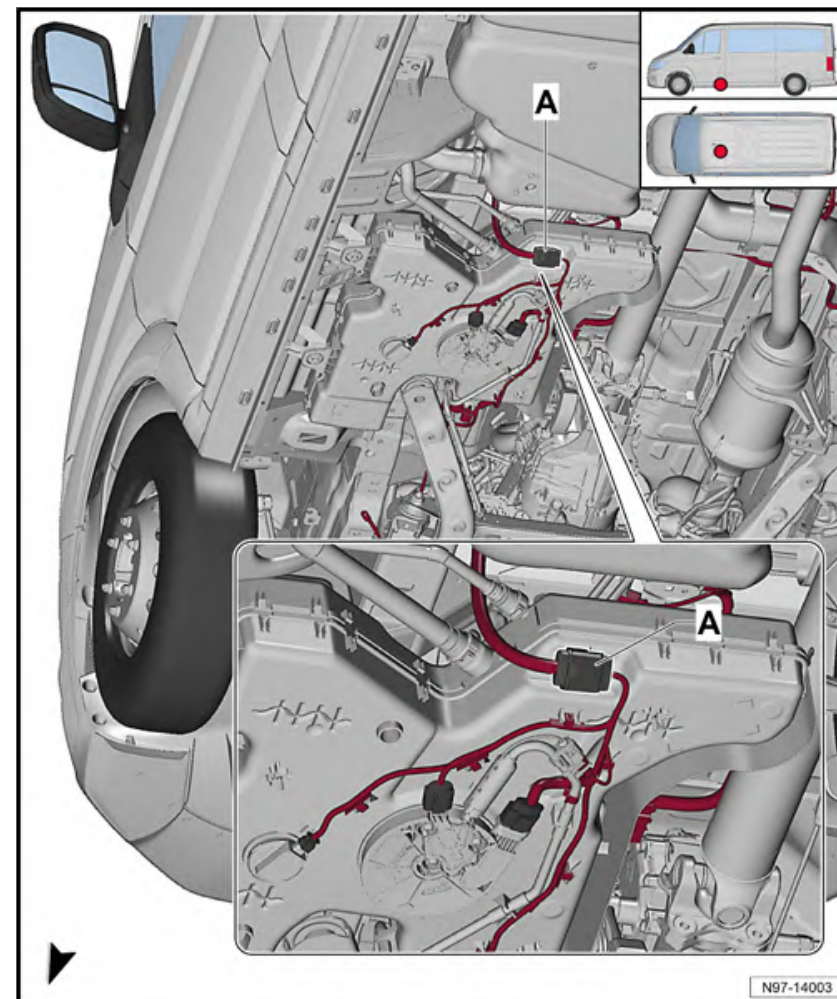


1.13 Coupling point in luggage compartment, left -THRL-

A - 6-pin connector -T6bw-

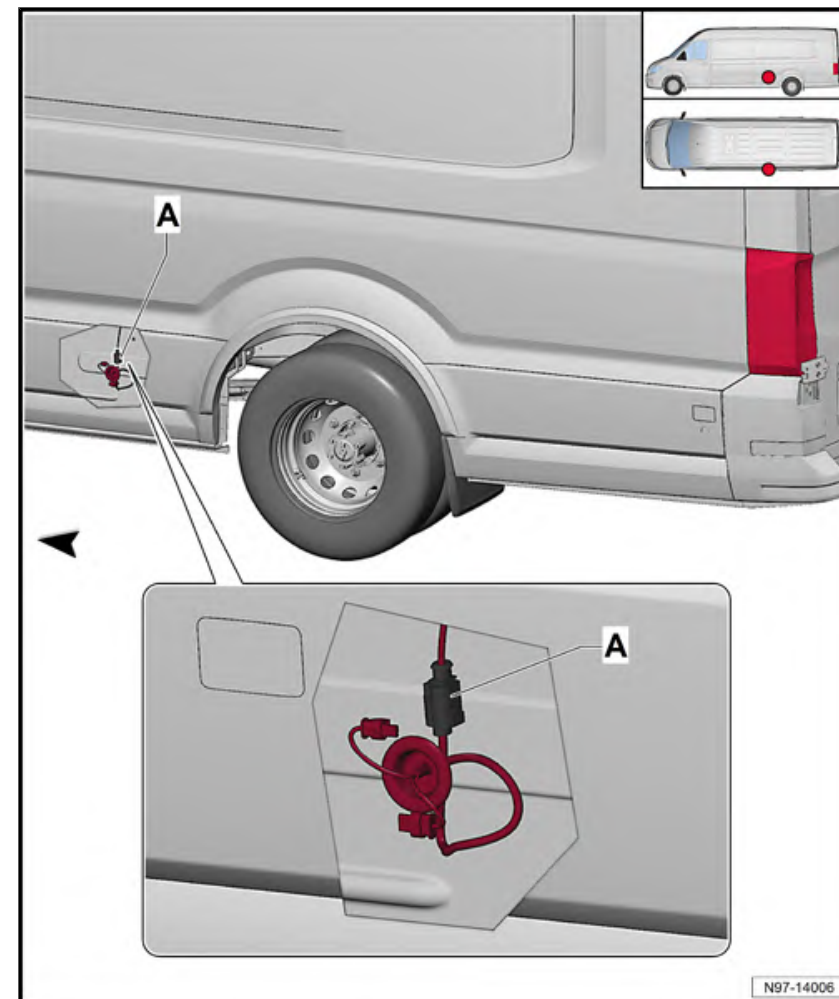


1.14 Coupling point in luggage compartment, right -THRR-

A - 6-pin connector -T6bx-

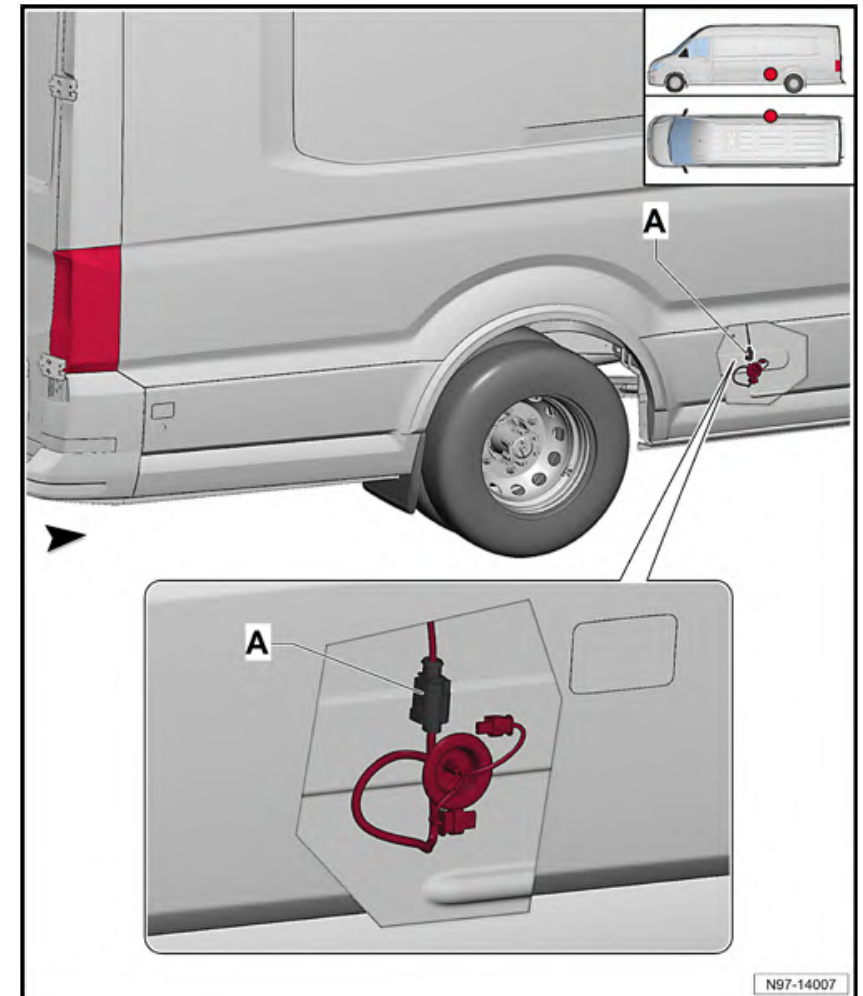


1.15 Coupling point on engine, bottom -TMU-

A - 3-pin connector -T3ma-

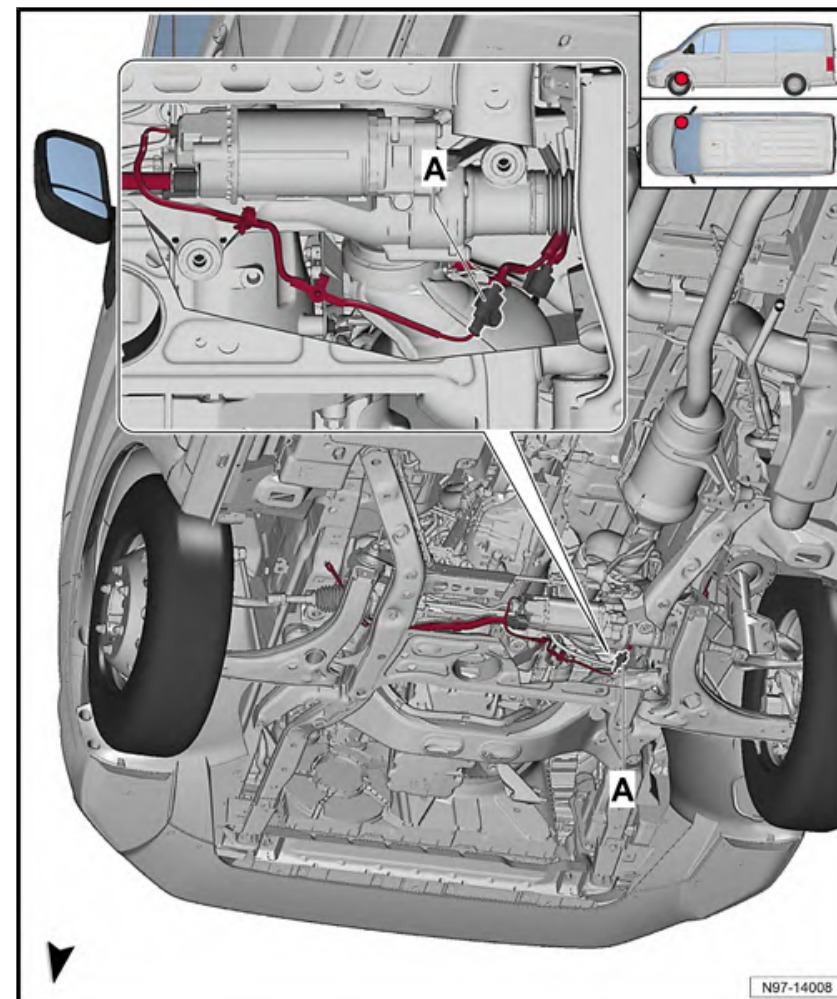

1.16 Coupling point on rear lid, left -THKL-

A - 17-pin connector -T17s-

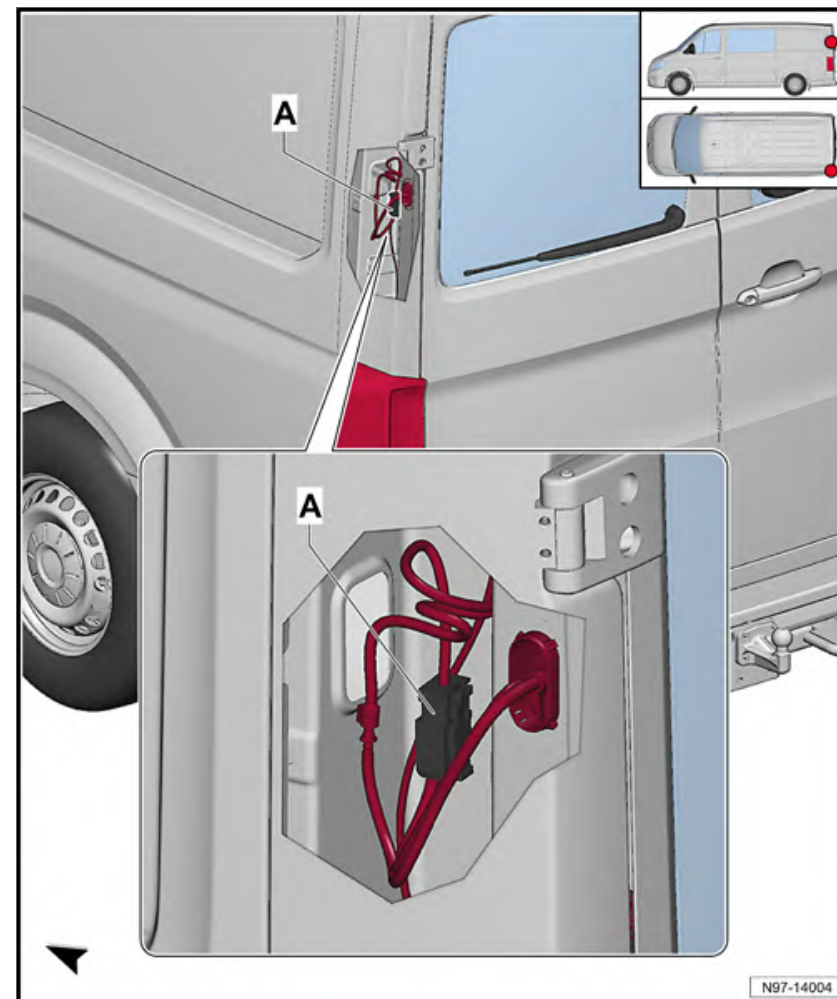

1.17 Coupling point on rear lid, right -THKR-

A - 17-pin connector -T17u-

