



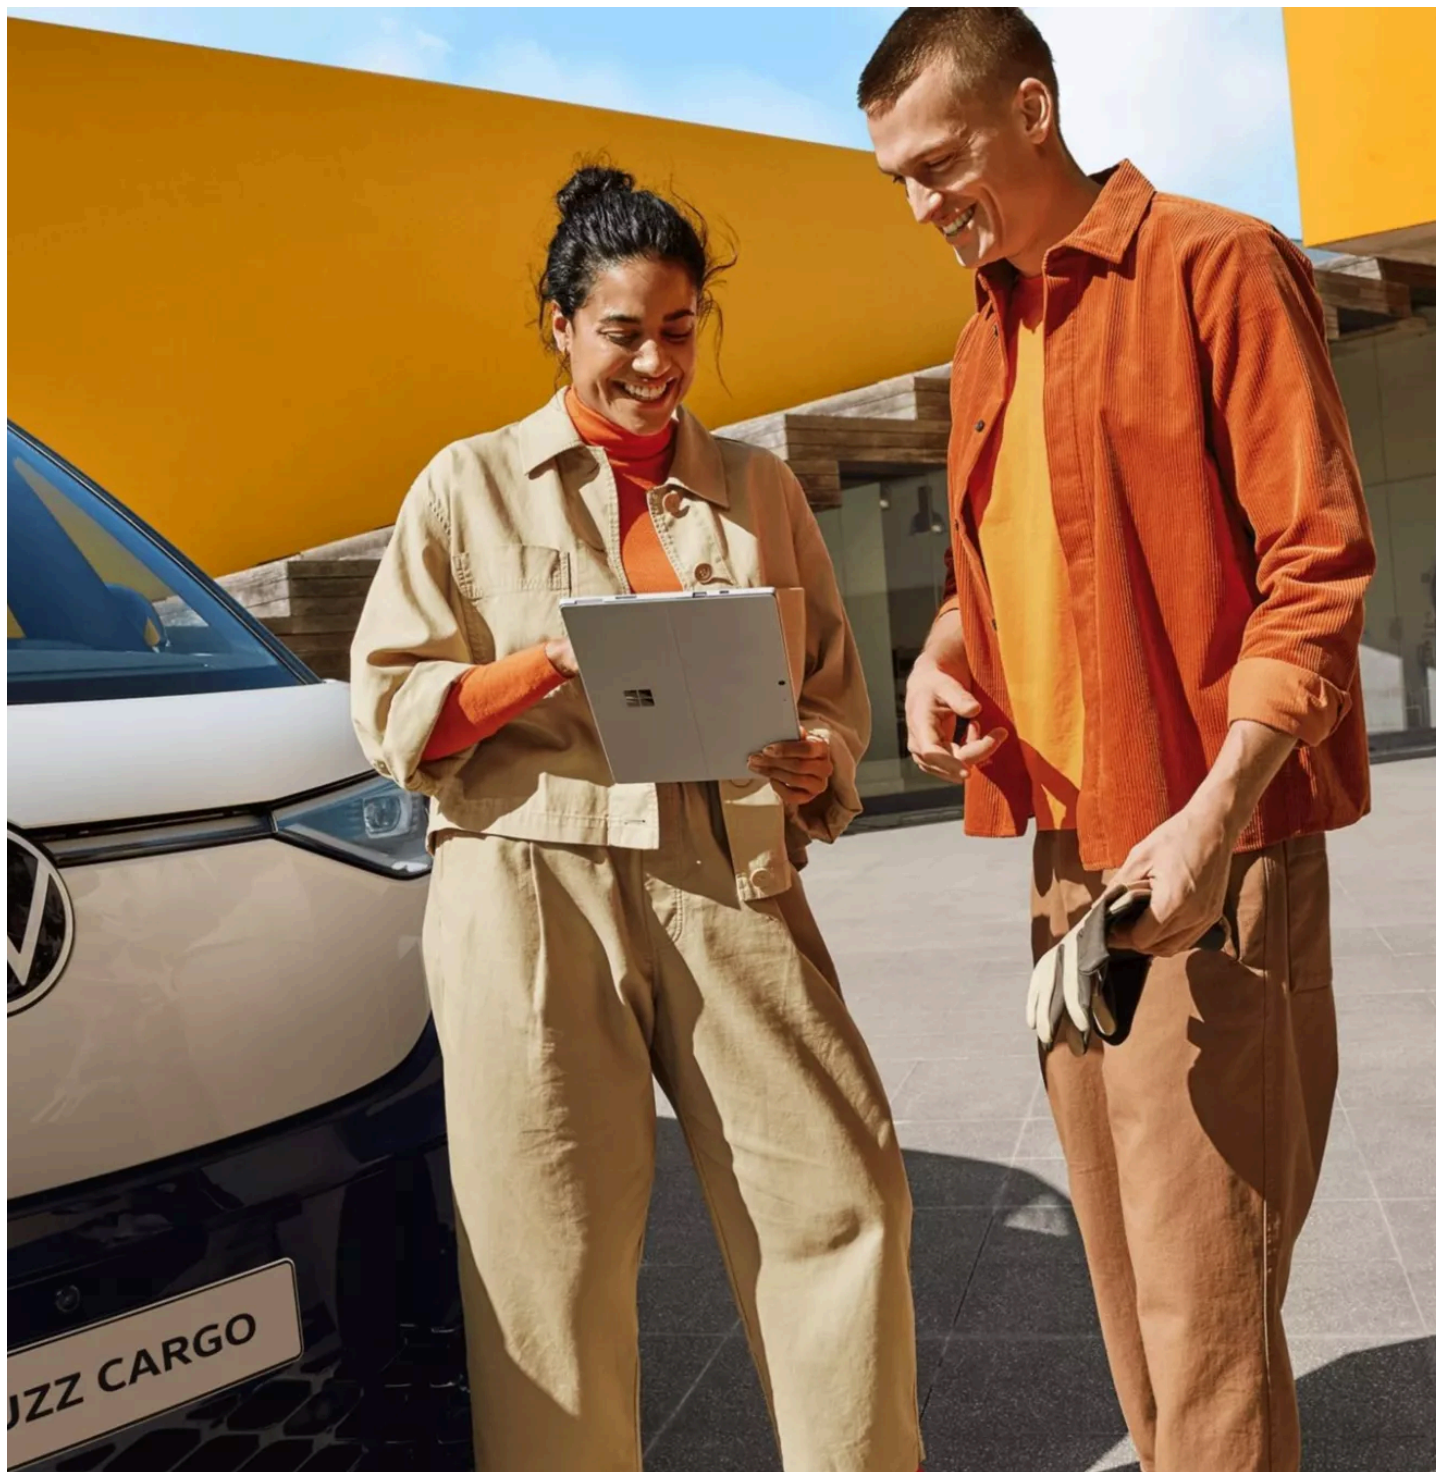

Owner Manuals

[Home](#) ▶ [Owners and drivers](#) ▶ [About my vehicle](#)

Our helpful tool helps you find the right



 [Book a service or MOT](#)

Identification Number (VIN) in our tool below.

How to find your VIN

You can find your VIN either in the front of your vehicles service book or in the bottom right-hand corner of the windshield on the driver's side.

 [Close digital manual](#)

Language selection
English (GB)



Digital manual

[Content](#) 

Your Vehicle



Crafter

VIN: WV1ZZZSYZM9040233

 [Switching the auxiliary heater on and off](#)

Programming the auxiliary heater



Book a service or MOT

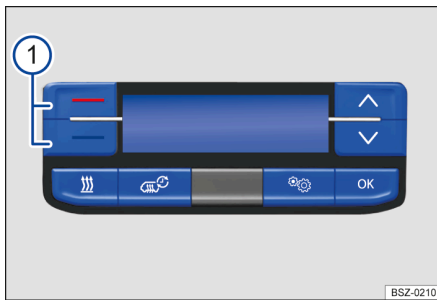


Fig. 1 In the front roof console:
auxiliary heater control.

Key to Fig. 1:

- ① Select temperature.
- 🔥 Switch the immediate heat function on and off.
- 🚗🔄 Continuous mode (only for auxiliary air heaters).
- ⚙️ Call up the menu.
- OK Confirm settings.
- ⬆️ Adjust settings.
- ⬆️ Adjust settings.

The auxiliary heater should only be switched on if the vehicle is outside or located in a well-ventilated room → ⚠️.

Basic controls

The auxiliary heater is controlled from the controls in the roof console.

Press and hold the ⚙️ button to open the menu for using the "Heat vehicle interior" mode with the ignition switched on or the engine running.

- Press the ⚙️ button to open or close the settings menu.
- Use the ⬆️ or ⬆️ button to select menus and adjust settings.
- **OR:** Use the ⬆️ or ⬆️ buttons to select the area that you wish to heat.
- Press the OK button to confirm a selection or complete an input.
- Press the ① buttons to adjust the temperature.

coolant heater and/or auxiliary air heater). If you are unable to



Commercial
Vehicles



 Search in the digital manual

not cooled in ventilation mode.

Depending on the equipment in the vehicle, you can select the temperature and the areas to be heated in some modes.

Adjusting settings while the heater is running

When the auxiliary heater is running, you can adjust the settings using the controls for the heating and fresh air system, the manual air conditioning system or Climatronic, depending on the equipment in the vehicle.

When the **REAR** zone is active, the auxiliary heater settings menu can be opened by pressing and holding the  button when the ignition is switched on or the engine is running.

Programming the auxiliary heater

Activation is always for one heating period only. The departure time must be activated for every start. If a departure time has been activated, a message will appear in the control panel display when the ignition is switched off.

Before programming, check that the date and time set in the vehicle are correct.

Departure time – Program up to three departure times (hh.mm).

Activate – Activate the auxiliary heater. The auxiliary heater starts before the selected time using the selected runtime and mode. A start time can be changed only when the heater is deactivated.

Change – Adjusts the departure time. Select **UM** if you wish to start the auxiliary heater at a specific time. Select day of the week if you want to switch the auxiliary heater on for a certain day of the week.



Book a service or MOT

Mode – Select the mode.

Manual air conditioning system: the programmed departure time determines the time at which the auxiliary heater should switch off. The point at which the auxiliary heater begins the heating process depends on the programmed operating period.

Climatronic: the programmed departure time determines when the set temperature should almost be reached in the vehicle. The point at which the auxiliary heater begins the heating process is determined automatically based on the exterior and interior temperatures.

Immediate heat function for the auxiliary heater

The auxiliary heater always starts using the last selected mode.

Press the  button to switch the immediate heat function on and off.

The immediate heat function can also be operated with the remote control ([→ Remote control for the auxiliary heater and auxiliary ventilation](#)).

Auxiliary heater in continuous mode (only for auxiliary air heaters)

Continuous mode can be switched on only using the  button.

Continuous mode is active only when the vehicle is stationary. If the vehicle is moved when continuous mode is switched on, a message may be shown on the control panel display.

Continuous mode is deactivated automatically while the vehicle is moving, and the message will disappear.

A message will be displayed on the control panel for a short time if the  button is pressed while the vehicle is moving.

However, it is not possible to switch on continuous mode.

- Press the  button to open the menu for continuous mode.
- Use the  or  buttons to select **Yes**.
- Press the  button to switch on continuous mode.
- Press the  or  button to switch off continuous mode.

The supplementary heater heats the vehicle interior as quickly as possible when the engine is running. The supplementary heater will start automatically when the relevant conditions are fulfilled.

For vehicles where an auxiliary heater is installed, it provides the supplementary heating.

The supplementary heater will be switched off automatically if the level in the fuel tank is low (reserve level).

The automatic supplementary heater can be deactivated using the  button on the Infotainment system and the  function button in the air conditioning menu.

WARNING

Among the emissions from the auxiliary heater is carbon monoxide, which is an odourless and colourless poisonous gas. Carbon monoxide can cause people to lose consciousness. It can also cause death.

- Never start or run the auxiliary heater in unventilated or closed rooms.
- Never program the auxiliary heater so that is switched on and run in unventilated or enclosed areas.



The display for the heating and fresh air system differs depending on whether the ignition is switched on or off.



When the ignition is switched on, the display for the vehicle's rear climate zone will appear first.

← [Switching the auxiliary heater on and off](#)

[Remote control](#) →



Book a service or MOT

[Back to the start](#)

Frequently asked questions

**My vehicle was registered before 2018.
How can I get an owner's manual?**



**I'd prefer a physical copy of the owner's
manual.**



Next **steps**



[Book a service or MOT](#)



Book a **service**



Find a **Van Centre**

Accessories and
merchandise

[FAQs](#)

[Find a Van Centre](#)

[Franchising](#)

[Contact us](#)

[Careers](#)

[Brochures](#)

[Subscribe to
newsletter](#)

Find us on:

[Facebook](#)

[Twitter](#)

[YouTube](#)

[LinkedIn](#)

[Instagram](#)

[Find a Van Centre](#) | [Contact us](#) | [Technology](#) | [Legal](#)
[Privacy statement](#) | [Cookie policy](#) | [Who regulates us](#) | [Manage cookies](#)
[Compliance and Integrity](#) | [Product safety information](#) |
[Volkswagen AG \(Imprint & Legal texts\)](#)

© Volkswagen Commercial Vehicles 2025

 [Book a service or MOT](#)

Important information :

Images are for illustration purposes only. Vehicle shown may not reflect UK specification.

The information presented here may differ partly from the manual that was originally delivered with your vehicle. Please refer to the printed Owner's Manual in your vehicle or the integrated on-board manual in the infotainment system of your vehicle as a binding source of information.