

Foot Valve Operation Manual

Purpose: This valve is installed at the bottom end of a pump suction pipeline. It automatically prevents fluid backflow.

Performance Specifications:

Model	Nominal Diameter DN (mm)	Nominal Pressure PN (MPa)	Test Pressure (MPa)		Operating Temp.	Suitable Media
			Strength	Sealing		
H42X-2.5	50 ~ 350	0.25	0.4	0.28	≤50°C	50

Structure:

- 3.1 The basic structure of this valve is shown in Figure 1.
- 3.2 Rubber sealing rings are used, providing reliable sealing performance.

Operating Principle:

The valve opens and closes automatically based on the flow of the medium itself, preventing backflow when the pump is stopped.

Storage, Maintenance, Installation, and Use:

- 5.1 Valves shall be stored indoors in a dry and ventilated area, with both pipeline openings sealed.
- 5.2 Valves stored for extended periods shall be inspected regularly; debris shall be removed. Pay special attention to keeping the sealing faces clean to prevent damage.
- 5.3 Before installation, verify that the valve markings match the requirements.
- 5.4 Before installation, inspect the valve interior and sealing faces; if any contaminants are present, wipe clean with a soft cloth.
- 5.5 The valve shall be installed on a vertical pipeline.

Possible Faults, Causes, and Resolutions — See Table:

Table Possible Faults, Causes, and Resolutions

Possible Fault	Cause	Resolution
Leakage at body-cover joint	1. Uneven tightening of connecting bolts 2. Damage to flange sealing surface 3. Gasket rupture or failure	1. Tighten evenly 2. Recondition / Refinish 3. Replace with a new gasket
Valve noisy / vibrating	1. The valve is installed too close to the pump 2. Unstable flow pressure of medium in the pipeline	1. Reinstall to a proper position 2. Eliminate pressure fluctuation

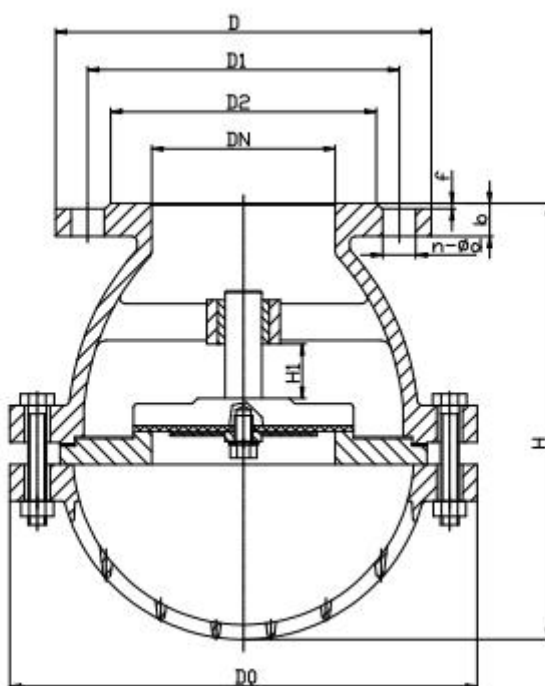


Figure 1 Foot Valve