



2010

RailSight™ Technical Guide



Customer Support Service: 1-877-724-5462
Customer Support e-mail: RailSight_Support@railinc.com

Railinc Corporation
7001 Weston Parkway, Suite 200
Cary, NC 27513

Table of Contents

1.	Introduction	1
2.	This Technical Guide	2
2.1	Document Conventions	2
	Fonting	2
	Table Keys	3
	Example Layouts	3
	Prerequisites	3
3.	Overview of Working with RailSight	4
3.1	Via FTP	4
3.2	Via MQ	5
4.	File Naming Conventions	6
4.1	Input File Naming Convention	6
4.2	Output File Naming Convention	6
5.	Input and Output File Format	7
5.1	Header Line	7
5.2	Detail Lines	7
5.3	Trailer Line	7
5.4	MQ Message Format	8
5.5	MQ Header Line	8
5.6	MQ Trailer Line	9
6.	Car Location Message (CLM Reporting)	10
7.	Demand Traces or Car Location Inquiry (CLI)	11
7.1	CLI Input Header	11
7.2	CLI Input Detail Lines	13
7.3	CLI Input Trailer	13
7.4	Sample CLI Input	13
7.5	Sample CLI Output	14
7.6	CLI Output Header	14
7.7	CLI Output Detail	15
7.8	CLI Output Trailer	15
8.	CLI Extended Feature Reporting	16
8.1	CLI Start-of-Trip Reporting	16
8.2	CLI Variable Date Reporting	16
9.	Fleet Traces (CLU)	18
9.1	CLU Input Header	18
9.2	CLU Input Detail Lines	20
9.3	CLU Input Trailer	21
9.4	Sample CLU Input	22
9.5	Sample CLU Output	22
9.6	CLU Output Header	22
9.7	CLU Output Detail	23
9.8	CLU Output Trailer	23
10.	Road Include/Exclude Filters	24
11.	RailSight Free Runner Drop Criteria	25
12.	Temporary Loaded Fleet Traces (CLR)	26
12.1	CLR Input Header	26
12.2	CLR Input Detail Lines	28
12.3	CLR Input Trailer	29
12.4	Sample CLR Input	29
12.5	Sample CLR Output	29
12.6	CLR Output Header	30
12.7	CLR Output Detail	30
12.8	CLR Output Trailer	31
13.	RailSight Fleet Management	32

14. CLL Inquiry	33
14.1 CLL Input Header	33
14.2 CLL Input Trailer	34
14.3 Sample CLL Input	34
14.4 Sample CLL Output	34
14.5 CLL Output Header	35
14.6 CLL Output Detail	36
14.7 CLL Output Trailer	37
15. Fleet Verification (CLLI) Inquiry	38
15.1 CLLI Input Header	38
15.2 CLLI Input Detail	39
15.3 CLLI Input Trailer	39
15.4 Sample CLLI Input	40
15.5 Sample CLLI Output	40
15.6 CLLI Output Header	40
15.7 CLLI Output Detail	41
15.8 CLLI Output Trailer	41
16. Event Data Format Extensions	42
17. RailSight Output Formats	44
17.1 CLM Output Format (With Headers and Trailers)	44
17.2 CLX Output Format (No Headers and Trailers)	45
17.3 CSV Output Format	45
17.4 EDI 214 Output Format	45
17.5 EDI 322 Output Format	46
18. RailSight Output Trigger Types	47
19. Start-Of-Trip Reporting	48
20. Party-to-Waybill Warnings (CLW)	49
20.1 Sample CLW Output	49
20.2 CLW Output Header	49
20.3 CLW Output Detail	50
20.4 CLW Output Trailer	51
21. RailSight Waybill Reporting	52
21.1 RailSight 417 Distribution	52
21.2 Waybill Layout	52
21.3 Waybill Detailed Description	53
ISA Header	53
GS Functional Group Header	53
ST Transaction Set Header	53
BX General Shipment Information	53
BX Rail Shipment Information	54
N9 Extended Reference Identification	54
N7 Equipment Details	54
N8 Waybill Reference	54
F9 Origin Station	54
D9 Destination Station	55
N1 Party Identification	55
R2 Route Information	55
LX Transaction Set Line Number	55
L5 Description, Marks, and Numbers	55
LH1 Hazardous Identification Information	55
LH2 Classification Information	56
LFH Freeform Hazardous Material Information	56
PER Administrative Communications Contact	56
SE Transaction Set Trailer	56
GE Functional Group Trailer	56
IEA Interchange Control Trailer	56
22. RailSight 417 On-Demand Distribution	57

23. Authorization and Security	58
23.1 Proof of Authorization.....	58
23.2 RailSight CLM Security	58
23.3 RailSight Security Profiles.....	58
24. RailSight Error Handling	59
24.1 CLE Message Format	59
25. CLM Sighting Codes.....	61
26. RailSight EDI 214 Layout.....	62
26.1 Sample EDI 214 Layout	62
26.2 Detailed Description.....	63
ISA Header	63
GS Functional Group Header	63
ST Transaction Set Header	63
B10 Beginning Segment for Transportation Carrier Shipment Status Message	63
L11 Business Instructions and Reference Number (Waybill).....	64
K1 Remarks.....	64
N1 Party Identification.....	64
N4 Geographic Location	64
LX Transaction Set Line Number.....	64
AT7 Shipment Status Details	64
MS1 Equipment, Shipment, or Real Property Location.....	64
MS2 Equipment or Container Owner and Type	65
L11 Business Instructions and Reference Number (there can be several instances of this)	65
K1 Remarks.....	65
SE Transaction Set Trailer.....	65
GE Functional Group Trailer.....	65
IEA Interchange Control Trailer	65
27. RailSight EDI 322 Layout.....	67
27.1 EDI 322 Layout	67
27.2 Detailed Description.....	68
ISA Header	68
GS Functional Group Header	68
ST Transaction Set Header	68
Q5 Status Details.....	69
N7 Equipment Details	69
W2 Equipment Identification	69
NA Cross Reference Equipment.....	69
R4 Port or Terminal	69
N9 Extended Reference Information.....	70
SE Transaction Set Trailer.....	70
GE Functional Group Trailer.....	70
IEA Interchange Control Trailer	70
27.3 Rail Event Mapping in RailSight EDI 322 Output	71
APPENDIX A – RailSight CLM Formats	72
CLM Format - A - Location with SPLC	73
CLM Format - B - Train	74
CLM Format - BLANK - Location	75
CLM Format - C - Train with SPLC	76
CLM Format - D - Destination	77
CLM Format - E - Destination with SPLC.....	78
CLM Format - F - Flatcar	79
CLM Format - G - Flatcar with SPLC	80
CLM Format - H - ETA	81
CLM Format - I - ETA with SPLC.....	82
CLM Format - K - Destination with Four-Digit Event Code.....	83
CLM Format - L - ETA with Numeric Event Type Code (Derived from Y)	84
CLM Format - M - Motor Carrier Movement.....	85
CLM Format - T - Text	86

CLM Format - W - Scale Weights	87
CLM Format - Y - Custom ETA with Years	88
CLM Format - Z - Text with Destination City and State.....	89
Glossary.....	90
Index	91

1. Introduction

RailSight™ is a rail data reporting system that allows customers to obtain rail equipment sightings, waybill data, estimated time of arrival information, and other critical logistics data in almost real time.

The *fleet* is the most important organizational unit for RailSight data. RailSight can define fleets, organize specific equipment in fleets, and receive tracing information for equipment that are part of a specific fleet. Depending on need—various events, output selections, and security profiles can be established for each fleet using the RailSight messaging system. RailSight can also automatically populate fleets based on waybill and event data flowing through Railinc's core rail industry applications.

RailSight provides data from rail equipment events reported to the Railinc event repository. Over 330 carriers provide more than five million events to Railinc daily. The application also provides important data from rail waybills; interline railroad trip plans, and the rail industry equipment registry.

RailSight also provides security for all the information that flows out of the system. It ensures all data that is sent out is delivered to the intended parties only, by applying multiple level of security when examining equipment events. In addition to Party-to-waybill security (a standard in the rail industry), RailSight also executes supplemental checks to determine if the intended party is entitled to view data related to hazardous material shipments and other critical characteristics.

All RailSight fleets operate under party-to-waybill security, hence requiring all parties requesting rail shipment data on behalf of another party must present a Letter of Authorization (LOA) to view specific equipment data. These LOAs are submitted at Railinc and are used to configure the security profiles for all RailSight fleets. LOAs are written for specific time periods and as those LOAs expire, the privileges they grant for the receipt of shipment data expire too.

2. This Technical Guide

The RailSight technical guide explains the functionality of the Railinc RailSight messaging system. It is intended as a guide for the RailSight customer in interacting with the system and also highlights the use of all the rich features that RailSight system provides to meet the industry demands.

The technical guide provides detailed descriptions of how to receive traces on demand using Railinc's very versatile and flexible RailSight system. It explains in great detail how RailSight messaging system allows the user to manage fleets, including but not limited to, purging fleets, purging specific types of units (Permanent, Temporary, Loaded, or Empty), adding or deleting equipment to and from the fleet.

This document also highlights the flexibility of RailSight system which supports seven distinct output formats (CLM, CLX, CSV, EDI 322, EDI 214 and CIDX XML) and provides more than 20 CLM formats which includes all formats adopted as standards by the National Industrial Transportation League (NITL). RailSight also provides a number of custom formats to satisfy the needs of RailSight customers. The details of these formats are provided in their respective sections.

RailSight also has the ability to append additional data elements to the end of standard messages allowing greater flexibility and customized output to meet industry needs. See Section [16 Event Data Format Extensions](#) for details.

While RailSight is used primarily to disseminate equipment data, it can also be used to distribute waybill information for a shipment. This waybill data is available in X12-Compliant EDI 417 format, which is the universally accepted format for the railroad industry. RailSight also provides the widely accepted waybill security where waybills will only be delivered to the authorized parties. RailSight also supports the ability to request and receive EDI 417 documents for a specific equipment. See Section [22 RailSight 417 On-Demand Distribution](#) for details.

2.1 Document Conventions

Fonting

Where detailed descriptions of input and output data are provided, the formatting required is described in a tabular form. Samples of system input and output are shown using the Courier font to help delineate required spacing.

Table Keys

The following key applies to all field description tables:

Key:	A	Alphabetic (letters only—left adjusted with trailing blanks)
	AN	Alphanumeric (numbers and letters)
	MT	Mandatory text (entered as shown in the example)
	N	Numeric (numbers only—right adjusted with leading zeros)
	*	Required Fields
	¶	End Of Line Character

The key is shown once in each section following the Input Header tables.

Example Layouts

Layout for files are shown with the following conventions:

1 - 4	5 - 10	11	← Indicates the column numbers involved
U P . .	0 1 2 3 4 5	¶	← Shows representative input as seen in columns
1	2	3	← Shows the field numbers (from preceding field definition table)

The shading is to help the reader match fields described in the table with the example which follows.

Prerequisites

RailSight users are expected to have an understanding of the operation of FTP, file transfer protocol. There are many custom scripts or tools to interface with an FTP mailbox. Railinc has no preference on what FTP method is used for file management.

Railinc uses a UNIX-based FTP server to manage customer FTP mailboxes. Customers place input files and retrieve output using their FTP mailbox. The name of the customer mailbox account is determined when the RailSight account is set up.


MQ users do not have FTP considerations.

3. Overview of Working with RailSight

3.1 Via FTP

RailSight is designed as a machine-to-machine application. Primarily, customers interact with RailSight by submitting fleet definition files (CLUs), demand traces (CLIs), or report requests to a secured FTP mailbox specifically created for individual customers. Once the input file is placed in the FTP mailboxes, it is read by RailSight, and starts processing—updating fleet definitions, performing security checks, and producing output files containing requested data. RailSight places the resulting output files into the same FTP mailbox—ready for delivery to the intended external system.

RailSight supports both *pull* and *push* technology to deliver data to an external system. Once the output file is delivered to the FTP mailboxes, it can either *pushed* to a specific system by a RailSight process, or *pulled* by an application running at a customer location, or by using the standard FTP commands to retrieve files from FTP mailboxes.

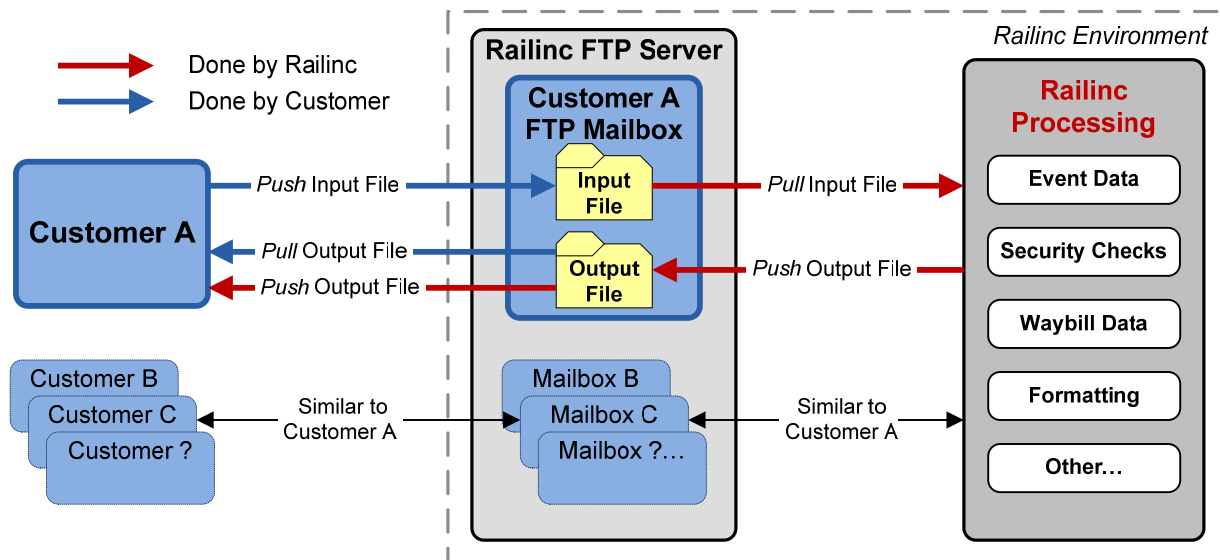


To control when the RailSight output arrives to an external system, a *pull* executed by the customer might be a good choice; however, an *untimely* pull can also delay receipt of the data.

If a situation requires a near real-time delivery of data, the *push* approach might be the best choice, since the RailSight process can deliver (push) the output data as soon as it is received in the mailbox.

3.2 Via MQ

RailSight also supports use of MQ for transmittal and receipt of CLMs and updates to fleets. The following diagram shows Railinc's network configuration for MQ users:

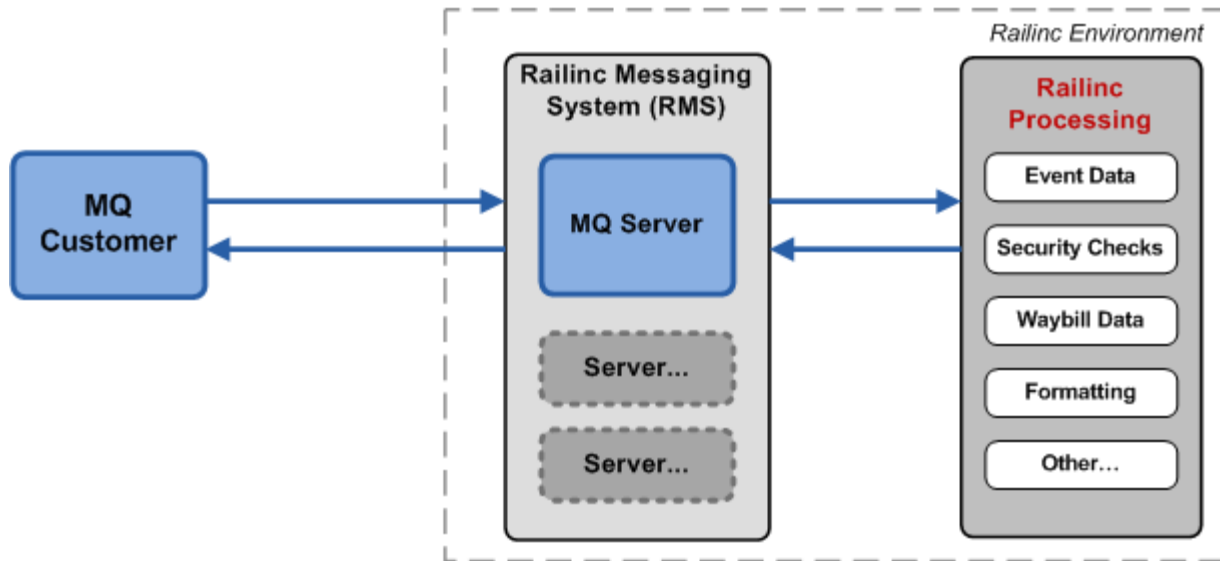

Unlike FTP, the input and output messages are transmitted automatically real-time, or as scheduled.

4. File Naming Conventions

The user can provide several types of input to the RailSight application. One of the most important rules that must be followed for these input files is that **each input filename must begin with the letters “CER” in either upper or lower case letters**. If this convention is not followed, RailSight cannot process the input file.

Note: File naming does not apply to MQ users.

4.1 Input File Naming Convention

All files submitted to RailSight **must** start with the letters ‘CER’ or ‘cer’ for RailSight to process correctly. The remainder of the filename can be any valid character allowed by the standard Filename naming convention.

- Examples of **valid** RailSight Input File Names are:

CERinput.txt

Cerclu040522

CER_fleet1_update_20040522

- Examples of **Invalid** RailSight Input File Name are:

Fleetupdate.txt (*Missing CER Prefix*)

Acmefleet040231a (*Missing CER Prefix*)

4.2 Output File Naming Convention

RailSight output files follow a few simple conventions. All output files begin with the name of the fleet for which they were generated, and they are followed by the file type. Some output files may also have a suffix that further clarifies the data type.

<FLEETNAME>_CLM	Normal CLM file
<FLEETNAME>_CLMCSV	CLM file with CSV output format
<FLEETNAME>_CLM_CLI	A response to a demand (CLI) query
<FLEETNAME>_CLL	A response to a fleet query (CLL)
<FLEETNAME>_CLLI	A response to a fleet equipment query (CLLI)

5. Input and Output File Format

Most RailSight Input and Output file consists of three parts:

- 1) **Header**,
- 2) **Body** (Detail lines)
- 3) **End of Message** marker

The format of your CLU looks like this:

CLU TO RRDC FLTNAME	←Header Line
PABCX123456	←Detail Line
PAB 001234	←Detail Line
DABC 056789	←Detail Line
DABCX012345	←Detail Line... (up to 10,000 lines)
EOM	←Trailer Line (End of Message) Line

5.1 Header Line

The header line must be at least 22 characters long. It consists of the following basic information.

- Type of Message
- CLM Format if required
- Where the message needs to be sent.
- Fleet Name
- Date and Hour

The detail of Header Line is covered in the individual traces in the later sections of this document.

5.2 Detail Lines

The Detail lines section of the file can contain lines for up to 10,000 pieces of equipment depending on the request type.

5.3 Trailer Line

The Trailer Line is generally the last line of the file. The end of the file must have the letters 'EOM' so RailSight knows it is at the last line of the file and input file processing is completed.

5.4 MQ Message Format

MQ users must have an MQ header line and trailer line surrounding the CLU message:

#FURX 8257SWSAM101002191326 RRDCRRRS/	←MQ Header Line (See Section 5.5)
CLU TO RRDC FLTNAME	←Header Line
PABCX123456	←Detail Line
PAB 001234	←Detail Line
DABC 056789	←Detail Line
DABCX012345	←Detail Line... (up to 10,000 lines)
EOM	←Trailer Line (End of Message) Line
\$0001EOMæ	←MQ Trailer Line (See Section 5.6)

5.5 MQ Header Line

Customers using MQ transmissions rather than FTP files, must add a specific header line before the message to allow correct interpretation of the message.

Field	Data Element	Length	Format	Description
1	Start Character	1	MT	Always a pound sign (#); identifies the beginning of a Message Header.
2	Origin Network Address	4	A	Network address of the originator of the message.
3	Subaddress	4	AN	
4	Message Number	4	N	4-digit, numeric; generated by the originator of the message or Railinc; ranges sequentially from 0001 to 9999; identifies the message for purposes of reference and control; discontinuity or duplication in the number alerts the addressee to possible loss or repetition of messages.
5	System Identity	5	A	Usually SWSAM for RailSight. The message type and the processing system required at the destination station to process the data in this message.
6	Suffix	2	N	Further identifies the data within the message for specific processing requirements.
7	Preparation Date	6	N	2-digit year, 2-digit month and 2-digit day of message preparation or transmission depending on the procedure used in individual railroad Telecommunications System. – Messages from Railinc contain Date of Transmission.
8	Time	4	N	2-digit hour, 2-digit minute of message preparation or transmission depending on the procedure used in individual railroad telecommunications system. – Messages from Railinc contain Time Of Transmission.
9	Destination Network Address	4	A	Network address of destination station. – For messages sent to Railinc, the Network Address field will usually be RRDC. Other values are possible, particularly for application specific switched messages (e.g., SWSAM). – Carriers will be advised in cases where a destination other than RRDC is appropriate.
10	Subaddress	4	AN	The office within the destination station. Usually RRRS. – May be left blank.
11	End Character	1	MT	Always a slash (/); indicates the end of a Message Header.

5.6 MQ Trailer Line

Customers using MQ transmissions rather than FTP files, must add a specific trailer line after the message to allow correct interpretation of the message.

Field	Data Element	Length	Format	Columns	Description
1	Start Character*	1	MT	1	Always a dollar sign (\$); identifies the beginning of a Message Trailer.
2	Group Count	4	N	2–5	Total number of Group Level records within the message for detection of possible data loss. – Always 0001 for SWCH messages.
3	Text	3	MT	6–8	Always EOM (end of message); facilitates visual clarity
4	End Character	1	MT	9	Always hex 9C (non–printable character); indicates the end of a Message Trailer. Example: æ Note: Railinc's midrange RMS system sends 'e6' in ASCII, which is equivalent to '9c' on the mainframe.

6. Car Location Message (CLM Reporting)

While RailSight furnishes a wide array of logistics data, its core function is distributing rail **Car Location Messages (CLMs)**. Taken from events reported to Railinc by railroads throughout North America, these messages help shippers, consignees, equipment owners and lessees, and logistics firms track and manage the many millions of carloads of cargo moved each year.

RailSight offers three basic types of traces for which CLMs are reported:

1. [Demand traces](#)
2. [Fleet traces](#)
3. Scheduled traces

While each of these trace types is useful under certain conditions, the most commonly used are Demand traces and Fleet traces. RailSight offers CLMs in a wide variety of formats and with a large number of value-adding features. This section discusses each of these features in detail.

7. Demand Traces or Car Location Inquiry (CLI)

Demand traces allow the user to request the most recent sighting data for one or more pieces of rail equipment.

A RailSight demand trace (also known as a **Car Location Inquiry** or CLI) allows the user to specify one or more pieces of rail equipment and have the system respond with the most recent sighting data for the event. The CLI input file¹ specification allows specifying the output format of the CLMs that is sent out to the external system.

There are some limitations to the demand trace output, however. For example, it cannot send format extensions with demand trace output as it can with normal fleet trace data.

As with most other RailSight input files, CLIs consist of one header line, one or more detail lines, and one trailer line. The output consists of one header line, the most recent sightings for the specified equipment in the format requested, and one trailer line. The precise format of the detailed information returned by RailSight depends on the values specified in the Format and Options fields of the header (bytes 4 and 7, respectively). Following is the detail specification of the Input and Output formats of the CLI request.

7.1 CLI Input Header

For MQ Users: Remember to add MQ Header at top. See [MQ Header Line](#) on page 8.

Field	Data Element	Length	Format	Columns	Description
1	Inquiry ID*	3	MT	1–3	Required (3 Characters alphabet Mandatory Text) For the CLI, this field should always contain the text “CLI”.
2	Format*	1	A	4	Required (1-character alphabet only) Specifies the CLM format to return results in. See APPENDIX A – RailSight CLM Formats the for a full description of all available formats.
3	To*	2	MT	5–6	Required (2-character Mandatory text) This field should always contain the text “TO” Indicates where the input file (TO) is being sent to.
4	Option*	1	A	7	Required (1-character alpha) By the National Industrial Transportation League (NITL) standards, this field can have one of four possible values. Please note, however, that RailSight is, by design, an interline tracing application. It does not act on these values: BLANK – No option specified S – Include reporting railroad SCAC on CLMs O – Include offline events B – Both option S and O

¹ Refer to Section [4 File Naming Conventions](#) for input file name.

Field	Data Element	Length	Format	Columns	Description
5	SCAC*	4	MT	8–11	Required (4-character alpha) For communication with RailSight, this field should always contain the text “RRDC”, which is a standard alpha carrier code referring to Railinc.
6	Reserved (space)	1		12	(1-character) Blank A space, if not specified otherwise. No Action S CLI Start-of Trip Reporting. This causes RailSight to report not only the most current sightings, but all sightings back to the start of the equipment’s current trip ² . V Variable Date Reporting. Use this feature to retrieve events for a specified list of equipment for up to 90 days in the past. ³ W 417 On-Demand Distribution. This returns latest EDI 417 documents for specific equipment. Additionally, all 417 documents for the last 90 days can be requested using this feature ⁴ .
7	Fleet ID*	9	AN	13–21	Required (9-character alphanumeric) This field must contain the name of the registered RailSight fleet containing the equipment. If the fleet ID is less than 9 characters, pad it with spaces on right to 9 characters.
8	Reserved (space)	1	.	22	(1-character) A space, if not specified otherwise.
9	Date and Time	8	N	23–30	Optional (Four 2-digit elements) Optional. Date and Time in YYMMDDHH format. Two-digit year. Two-digit month. Two-digit day. Two-digit hour in 24-hour time (15 is 3 PM).
10	Control ID	5	AN	31–35	Optional (5-character alphanumeric) Optional. A user-specified control ID. The RailSight application DOES NOT use this control ID. For example, it does not return the control ID in the headers of its responses to your query.
11	¶	1	¶	36	End Of Line/Separator (1-character) Carriage return or line feed indicator.

Key: A = Alphabetic (letters only—left adjusted with trailing blanks)
AN = Alphanumeric (numbers and letters)
MT = Mandatory text (entered as shown in the example)
N = Numeric (numbers only—right adjusted with leading zeros)
* = **Required Fields**
¶ = End Of Line Character

² Refer to Section [8.1 CLI Start-of-Trip Reporting](#) for details

³ Refer to Section [8.2 CLI Variable Date Reporting](#) for details

⁴ Refer to Section [22 RailSight 417 On-Demand Distribution](#) for details

Example (spaces and padding are shown as dots):

1-3	4	5-6	7	8-11	12	13-21	22	23-30	31-35	36
C L I	D T O	B R R D C	.	F L E E T 1	.	.	.	0 9 0 6 1 8 1 5	.	.
1	2	3	4	5	6	7	8	9-12	13	14

7.2 CLI Input Detail Lines

Field	Data Element	Length	Format	Columns	Description
1	Equipment Initials*	4	A	1-4	Required (4-character alpha only) All Equipment initials must be four characters long. If the equipment initial is shorter than four characters, use trailing spaces to make the initial four characters in length.
2	Equipment Number*	6	N	5-10	Required (6-digit numbers only) The equipment numbers must be six digits long. If the equipment number is less than six digits, use leading zeroes to make the number six characters long.
3	¶	1	¶	11	End Of Line/Separator (1-character) Carriage return or line feed indicator.

Example (spaces and padding are shown as dots):

1-4	5-10	11
U P . .	0 1 2 3 4 5	¶
1	2	3

7.3 CLI Input Trailer

For MQ Users: Remember to add MQ Trailer at bottom. See [MQ Trailer Line](#) on page 9.

Field	Data Element	Length	Format	Columns	Description
1	Trailer*	3	MT	1-3	Required (3-character Mandatory Text) This field should always have the value "EOM" EOM – Indicating End Of Message
2	¶	1	¶	4	End Of Line/Separator (1-character) Carriage return or line feed indicator.

Example:

1-3	4
E O M	¶
1	2

7.4 Sample CLI Input

The following is a sample input file showing a simple CLI query.

```
CLIHTO RRDC FLEET1    04042911
ACFX123456
BNSF654321
EOM
```

7.5 Sample CLI Output

The following is sample output based on the input file shown above. The response to or output from a query consists of a header (CLM), multiple detail records (in the format requested), and a trailer record (EOM).

```
CLMHFR RRDC FLEET1      04042911
ACFX 123456 PROVIS0    IL04280456LAQNPCH1YARDVILLENJUP  YARDVILLENJ D 062500
BNSF 654321 CANORA    SK04290358LAM30451EDGEMOOR DECN  EDGEMOOR DE D 062301
EOM000000002
```

7.6 CLI Output Header

Field	Data Element	Length	Format	Columns	Description
1	Inquiry ID*	3	MT	1–3	CLM always shown.
2	Format*	1	A	4	Specifies the CLM format used. See APPENDIX A – RailSight CLM Formats for a full description of all available formats.
3	FROM*	2	MT	5–6	FR always shown indicating that the file is sent from Railinc.
4	Option*	1	A	7	This field can have one of four possible values, depending on the parameter specified in the input file: BLANK – No option specified S – Include reporting railroad SCAC on CLMs O – Include offline events B – Both option S and O
5	SCAC*	4	A	8–11	Always contains the text “RRDC”, which is a standard alpha carrier code referring to Railinc.
6	Reserved (space)	1	.	12	A space, if not specified otherwise.
7	Fleet ID*	9	AN	13–21	This field contains the name of the RailSight fleet specified in the input file (padded as needed).
8	Reserved (space)	1	.	22	A space, if not specified otherwise.
9	Date/Hour	8	N	23–30	Optionally shown. Date and Time in YYMMDDHH format. Two-digit year. Two-digit month. Two-digit day. Two-digit hour in 24-hour time (15 is 3 PM).
10	¶	1		Varies	End Of Line/Separator (1-character) Carriage return or line feed indicator.

Example (spaces and padding are shown as dots):

1-3		4	5-6		7	8-11			12	13-21							22	23-30							31					
C	L	M	H	F	R	B	R	R	D	C	.	F	L	E	E	T	1	.	.	.	.	0	4	0	4	2	9	1	1	¶
1		2	3		4	5			6	7							8	9							10					

7.7 CLI Output Detail

The output provided on the detail lines of a CLI response depends on the message format requested in the CLI input file. See [APPENDIX A – RailSight CLM Formats](#) for detailed layouts of all available message formats.

7.8 CLI Output Trailer

For MQ Users: Remember to add MQ Trailer at bottom. See [MQ Trailer Line](#) on page 9.

Field	Data Element	Length	Format	Columns	Description
1	Trailer*	3	MT	1-3	Always shown as EOM indicating End Of Message
2	Equipment Count*	8	N	4-11	Always shown. The Equipment Count returned is eight characters long. If less than eight digits, it contains leading zeros to make it eight characters in length.
3	¶	1	¶	12	End of Line/Separator (1-character) Carriage return or line feed indicator.

Example:

E	O	M	0	0	0	0	0	0	0	1	¶
1			2								3

8. CLI Extended Feature Reporting

8.1 CLI Start-of-Trip Reporting

In addition to normal demand reporting, which returns the latest available sighting data for a specified list of equipment, RailSight also offers a feature known as start-of-trip reporting. To process a start-of-trip query, simply use the normal CLI input format⁵, but place the character “S” in byte 12 of the CLI header as shown below (highlighted in **red** text for emphasis).

```
CLIHT0 RRDCSFLEET1      04042911
ACFX123456
BNSF654321
EOM
```

This causes RailSight to report not only the most current sighting but all sightings back to the start of the equipment’s current trip. This feature can help gather complete event histories for equipment that may have been loaded to the fleet late.

For MQ Users: Remember to add MQ Header at top. See [MQ Header Line](#) on page 8.

8.2 CLI Variable Date Reporting

Another value-adding feature offered by RailSight’s demand tracing is variable date reporting. Using this feature, the user can retrieve events for a specified list of equipment for up to 90 days in the past. To process a variable date reporting query, use the normal CLI input format, but place the character “V” in byte 12 of the CLI header as shown below (highlighted in **red** text for emphasis). Additionally, a date and hour can be specified in the normal positions for those data elements in the header. When RailSight sees the “V” in byte 12 and the date specified, however, it recovers all events back to the date and hour specified for the given list of equipment.

```
CLIHT0 RRDCVFLEET1      04060111
ACFX123456
BNSF654321
EOM
```

This input causes all events for the two cars listed to be recovered back to 11 a.m. on June 1, 2004, provided that the following conditions are met:

- 1) The date specified (June 1, 2004 in this example) is not greater than 90 days in the past.
- 2) The date is correctly formatted (YYMMDDHH).
- 3) The date is not in the future.

⁵ Refer to Section [4.1 Input File Naming Convention](#) for input file names.

IMPORTANT NOTE:

If you do not provide a correctly formatted or valid date, the variable date report may not produce the output expected. If no date is provided, but "V" is specified in byte 12 of the CLI header, RailSight returns **the last seven days of event data** for the requested equipment by default. Similarly, if byte 12 of the CLI header contains the character "V" but the date/time specified is incorrectly formatted, the application defaults to returning **seven days of event data** for the requested equipment. Finally, if a future date is specified, the application **does not** return any output.

9. Fleet Traces (CLU)

While RailSight's demand trace (CLI) features allows prompting the system for event data and receiving the resulting responses, this process is not real time. RailSight provides fleet-based event reporting which provides near-real time event data pertaining to specific lists of equipment.

Railinc creates and configures fleets for all customers. RailSight application allows having one or more fleet in an account. At least one fleet is required to enable Railinc to configure a security profile for event data. Each fleet can have different characteristics, including independent security profiles, CLM formats, appendable data elements, scheduled traces, and event selections.

RailSight fleets are defined and maintained through fleet update messages, which are also known as CLUs. As with most other RailSight input files, CLUs consist of one header line, one or more detail lines, and one trailer line. The output consists of one header line, the most recent sightings for the specified equipment in the format requested, and one trailer line. The precise format of the detail information returned by RailSight depends on the configurations of customer fleets.

The detail specification of the CLU input and output file is described in the section below.

9.1 CLU Input Header

For MQ Users: Remember to add MQ Header at top. See [MQ Header Line](#) on page 8.

Field	Data Element	Length	Format	Columns	Description
1	Inquiry ID*	3	MT	1–3	Required (3-character alpha) Mandatory Text. For the CLU, this must be "CLU"
2	Reserved (space)	1	.	4	(1-character) A space, if not specified otherwise.
3	TO*	2	MT	5–6	Required (2-character alpha) Mandatory text This field always contains the text "TO" Indicates where the input file is sent TO.
4	Reserved (space)	1	.	7	(1-character) A space, if not specified otherwise.
5	SCAC*	4	MT	8–11	Required (4-character alpha) For communication with RailSight, this field should always contain the text "RRDC", which is a standard alpha carrier code referring to Railinc.
6	Reserved (space)	1	.	12	(1-character) A space, if not specified otherwise.

Field	Data Element	Length	Format	Columns	Description
7	Fleet ID*	9	AN	13–21	Required (9-character alphanumeric) This field must contain the name of the registered RailSight fleet containing the equipment. If the fleet ID is less than 9 characters, pad it with spaces on right to 9 characters.
8	Fleet Update* Code	1	A	22	Blank RailSight treats the fleet as a simple update, taking direction to add or delete equipment based on the fleet condition codes in the first byte of each detail line. C RailSight purges the complete fleet. Any detail lines following the header repopulates the fleet. P Purge permanent units only. This code causes RailSight to purge all permanent cars in the fleet. Any detail lines following the header repopulates the fleet. T Purge temporary units only. This code causes RailSight to purge all temporary cars in the fleet. Any detail lines following the header repopulates the fleet. L Purge temporary loaded units only. This code causes RailSight to purge all temporary loaded cars in the fleet. Any detail lines following the header repopulates the fleet. E Purge temporary empty units only. This code causes RailSight to purge all temporary empty cars in the fleet. Any detail lines following the header repopulates the fleet.
9	Date/Hour	8	N	23–30	Optional (8-digit elements in the YYMMDDHH format) Date and Time in YYMMDDHH format. Two-digit year. Two-digit month. Two-digit day. Two-digit hour in 24-hour time (15 is 3 PM).
10	Control ID	5	AN	31–35	Optional (5-character alphanumeric) RailSight DOES NOT currently use this control ID. For example, if the user provides a control ID in the CLI input message header, the application does not return it in the output message header.
11	¶	1	¶	36	End Of Line/Separator (1-character) Carriage return or line feed indicator.

Key: **A** = Alphabetic (letters only—left adjusted with trailing blanks)
AN = Alphanumeric (numbers and letters)
MT = Mandatory text (entered as shown in the example)
N = Numeric (numbers only—right adjusted with leading zeros)
*** = Required Fields**
¶ = End Of Line Character

Example (spaces and padding are shown as dots):

[illegible]

IMPORTANT NOTE:

The format of input files is critical to obtaining the desired results from RailSight. The CLU header must be formatted precisely as shown. Failing to put each data element in the correct position on the header causes the file to “error out” and prevents the system from processing the data request.

9.2 CLU Input Detail Lines

Field	Data Element	Length	Format	Columns	Description
1	Fleet Status Code*	1	A	1	Required (1-character alpha only) Instructs RailSight as to the action wanted for the specified equipment. Valid values for this field are as follows: P Instructs RailSight to add the specified equipment as a permanent member of the fleet. This causes RailSight to report all events concerning the car, regardless of load/empty status. T Instructs RailSight to add the specified equipment as a temporary member of the fleet. This causes RailSight to treat the equipment as a “free runner”, reporting event data on it until the load/empty status changes or another condition of the application’s free runner logic is met. See <i>Section 2.8 RailSight Free Runner Drop Criteria</i>, for a detailed discussion of these rules. L Instructs RailSight to add the specified equipment as a temporary loaded member of the fleet. This causes RailSight to report events on the equipment as long as its load/empty status indicates that the equipment is loaded. IMPORTANT NOTE: If the user adds a car as temporary loaded equipment, and the next event received by Railinc indicates that the car’s status is empty, RailSight drops the car from the fleet. E Instructs RailSight to add the specified equipment as a temporary empty member of the fleet. This causes RailSight to report events on the equipment as long as its load/empty status indicates that the equipment is empty. IMPORTANT NOTE: If the user adds a car as temporary empty equipment, and the next event received by Railinc indicates that the car’s status is loaded, RailSight drops the car from the fleet. D Instructs RailSight to delete the specified equipment from the fleet.
2	Equipment Initials*	4	A	2-5	Required (4-character alpha only) All Equipment initials must be four characters long. If the equipment initial is shorter than four characters, use trailing spaces to make the initial four characters in length.

Field	Data Element	Length	Format	Columns	Description
3	Equipment Number*	6	N	6-11	Required (6-characters digits only) The equipment numbers must be six digits long. If the equipment number is less than six digits, use leading zeroes to make the number six characters long.
4	¶	1	¶	12	End Of Line/Separator (1-character) Carriage return or line feed indicator.

Key:
A = Alphabetic (letters only—left adjusted with trailing blanks)
AN = Alphanumeric (numbers and letters)
MT = Mandatory text (entered as shown in the example)
N = Numeric (numbers only—right adjusted with leading zeros)
***** = **Required Fields**
¶ = End Of Line Character

Example (spaces and padding are shown as dots):

1	2-5	6-11	12
P	U P . .	0 0 0 3 4 5	¶
1	2	3	4

9.3 CLU Input Trailer

For MQ Users: Remember to add MQ Trailer at bottom. See [MQ Trailer Line](#) on page 9.

Field	Data Element	Length	Format	Columns	Description
1	Trailer*	3	MT	1-3	Required (3-character) Mandatory Text This field always contains the text "EOM" EOM – Indicating End Of Message
2	Equipment Count	8	N	4-11	Optional 8-digits number only The Equipment Count returned is eight digits long. If less than eight digits, it contains leading zeros to make it eight digits in length. IMPORTANT NOTE: If including an equipment count with the CLU input trailer, the count must match exactly the number of detail lines provided in the message. If there is a discrepancy between the specified equipment count and the number of detail lines in the message, RailSight does not process the input.
3	¶	1	¶	12	End of Line/Separator (1-character) Carriage return or line feed indicator.

Example:

E	O	M	0	0	0	0	0	0	3	3	¶
1	2									3	

9.4 Sample CLU Input

The following is a sample input file showing a simple CLU input file.

```

CLU TO RRDC FLEET1      04042911
PACFX123456
PBNSF654321
EOM

```

9.5 Sample CLU Output

The following is sample output based on the input file shown above. The response to or output from a query input consists of a header (CLM), multiple detail records (in the format requested), and a trailer record (EOM). Note also that the layout of the output will depend on the CLM formats, data extensions, and other parameters configured for the fleet in question.

```

CLMHFR RRDC FLEET1      04042911
ACFX 123456 PROVISO IL04280456LAQNPCH1YARDVILLENJUP YARDVILLENJ D 062500
BNSF 654321 CANORA SK04290358LAM30451EDGEMOOR DECN EDGEMOOR DE D 062301
EOM000000002

```

9.6 CLU Output Header

Field	Data Element	Length	Format	Columns	Description
1	Inquiry ID*	3	MT	1–3	Always shown as “CLM”
2	Format*	1	A	4	Specifies the CLM format that is configured for the fleet. See APPENDIX A – RailSight CLM Formats for a full description of all available formats.
3	FROM*	2	MT	5–6	Always shows the text “FR” Indicates the direction of the output file. For CLM output, this field always carries a value of “FR” indicating that the file is sent from Railinc.
4	Reserved (space)	1	A	7	Always shown as a space, if not specified otherwise.
5	SCAC*	4	A	8–11	Always shows the text “RRDC”, which is a standard alpha carrier code referring to Railinc.
6	Reserved (space)	1	.	12	Always shown as a space, if not specified otherwise.
7	Fleet ID*	9	AN	13–21	This field contains the name of the RailSight fleet specified in the input file (padded as needed).
8	Reserved (space)	1		22	Always shown as a space, if not specified otherwise.
9	Date/Hour	8	N	23–30	Optionally shown. Date and Time in YYMMDDHH format. Two-digit year. Two-digit month. Two-digit day. Two-digit hour in 24-hour time (15 is 3 PM).
10	Control ID	5	AN	31–35	RailSight currently places a value of “00001” in the Control ID field for each CLU response (if used in input).
11	¶	1		Varies	End Of Line/Separator (1-character) Carriage return or line feed indicator.

Example (spaces and padding are shown as dots):

1-3			4	5-6		7	8-11				12	13-21							22	23-30							31-35				36				
C	L	M	H	F	R	.	R	R	D	C	.	F	L	E	E	T	1	.	.	.	.	0	4	0	4	2	9	1	1	0	0	0	0	1	¶
1			2	3		4	5				6	7							8	9							10				11				

9.7 CLU Output Detail

The output provided on the detail lines of a CLU response depends on the message format and other parameters configured for the fleet. See [APPENDIX A – RailSight CLM Formats](#) for detailed layouts of all available message formats.

9.8 CLU Output Trailer

Field	Data Element	Length	Format	Columns	Description
1	Trailer*	3	MT	1-3	Always shown as EOM – Indicating End Of Message .
2	Equipment Count*	8	N	4-11	Always shown . The Equipment Count returned is eight digits long. If less than eight digits long, it contains leading zeros to make it eight characters in length.
3	¶	1	¶	12	End of Line/Separator (1-character) Carriage return or line feed indicator.

Example:

E	O	M	0	0	0	0	0	0	0	1	¶
1			2								3

10. Road Include/Exclude Filters

For each RailSight fleet, Railinc can configure an include/exclude filter that allows the user to constrain the events reported to those from a set of roads that the customer controls. By default, the filter is set to a value of **Include**. If this setting must be changed, contact Railinc customer support.

To use these filters, specify one or more roads after the car initial and number in the CLU input file detail lines. For example, if the include/exclude filter is set to **Include**, and the following CLU is submitted, all events reported by the roads CSXT, UP, CN, and BNSF are forwarded. No events reported by roads other than these are reported.

```
CLU TO RRDC FLEET1
TABOX050138CSXTUP  CN  BNSF
TACFX017119CSXTUP  CN  BNSF
TACFX018651CSXTUP  CN  BNSF
TACFX018706CSXTUP  CN  BNSF
TACFX018824CSXTUP  CN  BNSF
TACFX036093CSXTUP  CN  BNSF
TACFX036391CSXTUP  CN  BNSF
TACFX036406CSXTUP  CN  BNSF
EOM
```

Similarly, if the include/exclude filter is set to **Exclude**, this input file would cause RailSight to report all events for the specified list of equipment **unless** they were reported by CSXT, UP, CN, or BNSF. Events from **any** other road would be reported.

Up to 10 roads can be specified to include or exclude with each detail line.

Note: Each standard carrier alpha code (SCAC) specified must be four bytes long. If the SCAC you're specifying is less than four bytes in length, add trailing spaces to make the entry four bytes long, as shown in the example above.

11. RailSight Free Runner Drop Criteria

When adding equipment to RailSight with a status of **Temporary** by specifying a “T” in the Fleet Condition Code of the CLU detail line (or “L” for temporary loaded or “E” for temporary empty), RailSight adds the equipment as a free runner. This equipment remains in the fleet until the criteria described below are met. When the “drop” criteria are satisfied, RailSight removes the temporary equipment from the fleet and discontinues reporting on it.

Criteria	Description
Calendar	If you added the car to the fleet as any type of temporary equipment (T, E, or L), and the equipment has been in the fleet for 30 days, RailSight drops the equipment on the 31 st day.
Interchange to Non-Reporting Road	If the car was added as any type of temporary equipment (T, E, or L) and an interchange event to a road that does not report to Railinc is received, RailSight drops the equipment from the fleet.
End-of-Trip Event Received	If the car was added as any type of temporary equipment (T, E, or L) and Railinc receives one of the following events for the equipment, RailSight drops the equipment from the fleet. • Placement Actual • Departure Enroute to Non-Rail Facility • Intermodal Outgate • Intermodal Ingate
Load/Empty Status Change	If the car was added as temporary loaded equipment (L) and Railinc receives an event with a load/empty status of “Empty”, RailSight drops the equipment from the fleet. Similarly, if the car was added as temporary empty equipment (E) and Railinc receives an event with a load/empty status of “Loaded”, RailSight drops the equipment from the fleet.

12. Temporary Loaded Fleet Traces (CLR)

To ease the transition of customers who have been using railroad fleet tracing engines for a long time, RailSight also supports temporary loaded fleet traces, which are known as CLRs for the designation used in the header of the input file. These input files function much as CLU input files, but the user does not have to specify a fleet condition code. Instead, if the input type is CLR, RailSight loads the equipment to your fleet as temporary loaded equipment.

The detail specification of the CLR input and output file is described in the following sections.

12.1 CLR Input Header

For MQ Users: Remember to add MQ Header at top. See [MQ Header Line](#) on page 8.

Field	Data Element	Length	Format	Columns	Description
1	Inquiry ID*	3	MT	1–3	Required 3-character alphabets Mandatory Text For the CLR, this always contains the text "CLR"
2	Reserved (space)	1		4	(1-character) A space, if not specified otherwise.
3	TO*	2	MT	5–6	Required (2-character)Mandatory text This field always contains the text "TO" Indicates where the input file is sent TO.
4	Reserved (space)	1	.	7	(1-character) A space, if not specified otherwise.
5	SCAC*	4	MT	8–11	Required (4-character alpha) For communication with RailSight, this field should always contain the text "RRDC", which is a standard alpha carrier code referring to Railinc.
6	Reserved (space)	1		12	(1-character) A space, if not specified otherwise.
7	Fleet ID*	9	AN	13–21	Required (9-character alphanumeric) This field must contain the name of the registered RailSight fleet containing the equipment. If the fleet ID is less than 9 characters, pad it with spaces on right to 9 characters.

Field	Data Element	Length	Format	Columns	Description
8	Fleet Update* Code	1	A	22	Blank RailSight treats the fleet as a simple update, adding any equipment listed in the detail lines with a status of temporary loaded (L). C RailSight purges the complete fleet. Any equipment specified in detail lines following the header are added to the fleet with a status of temporary loaded (L). P Purge permanent units only. This code causes RailSight to purge all permanent cars in the fleet. Any equipment specified in detail lines following the header are added to the fleet with a status of temporary loaded (L). T Purge temporary units only. This code causes RailSight to purge all temporary cars in the fleet. Any equipment specified in detail lines following the header are added to the fleet with a status of temporary loaded (L). L Purge temporary loaded units only. This code causes RailSight to purge all temporary loaded cars in the fleet. Any equipment specified in detail lines following the header are added to the fleet with a status of temporary loaded (L). E Purge temporary empty units only. This code causes RailSight to purge all temporary empty cars in the fleet. Any equipment specified in detail lines following the header are added to the fleet with a status of temporary loaded (L).
9	Date/Hour	8	N	23–30	Optional (8-digit elements in the YYMMDDHH format) Date and Time in YYMMDDHH format. Two-digit year. Two-digit month. Two-digit day. Two-digit hour in 24-hour time (15 is 3 PM).
10	Control ID	5	AN	31–35	Optional (5-character alphanumeric) RailSight DOES NOT currently use this control ID. For example, if the user provides a control ID in the CLI input message header, the application does not return it in the output message header.
11	¶	1	¶	36	End Of Line/Separator (1-character) Carriage return or line feed indicator.

Key: A = Alphabetic (letters only—left adjusted with trailing blanks)
AN = Alphanumeric (numbers and letters)
MT = Mandatory text (entered as shown in the example)
N = Numeric (numbers only—right adjusted with leading zeros)
* = Required Fields
¶ = End Of Line Character

Example (spaces and padding are shown as dots):

1-3	4	5-6	7	8-11	12	13-21	22	23-30	31-35	36
C L R	.	T O	.	R R D C	.	F L E E T 1 . . .	.	.	.	¶
1	2	3	4	5	6	7	8	9	10	11

12.2 CLR Input Detail Lines

Field	Data Element	Length	Format	Columns	Description
1	Equipment Initials*	4	A	1-4	Required (4-character alpha only) All Equipment initials must be four characters long. If shorter than four characters, add trailing spaces to make the initial four characters in length.
2	Equipment Number*	6	N	5-10	Required (6-characters digits only) The equipment numbers must be six digits long. If less than six digits, add leading zeroes to make the number six digits long.
3	SCAC (include / Exclude Road(s))	4	A	11-14	Optional (4-character alpha) All SCAC must be four characters long. If shorter than four characters, add trailing spaces to make it four characters in length. Use this field to Include/Exclude reporting of sightings for the listed roads. IMPORTANT NOTE: Up to ten SCACs can be included in the include/exclude roads fields following the equipment initial and number. The effect of entries in these fields depends on the include/exclude filter settings for the fleet. If the fleet filter is set to Include , adding SCACs to these fields causes RailSight to report only sightings for the roads listed. Similarly, if the fleet filter is set to ' exclude ', adding SCACs to these fields causes RailSight to report any sightings received provided that they are not reported by one of the roads you specify. If the SCAC is shorter than four bytes, add trailing spaces to pad to four bytes.
4	¶	1	¶	15	End Of Line/Separator (1-character) Carriage return or line feed indicator.

Example (spaces and padding are shown as dots):

1-4	5-10	11-14	15
U P . .	0 1 2 3 4 5	B S N F	¶
1	2	3	4

12.3 CLR Input Trailer

For MQ Users: Remember to add MQ Trailer at bottom. See [MQ Trailer Line](#) on page 9.

Field	Data Element	Length	Format	Columns	Description
1	Trailer Id*	3	MT	1-3	Required (3-character) Mandatory Text This field always contains the text "EOM" EOM – Indicating End Of Message
2	Equipment Count	8	N	4-11	Optional 8-digits number only The Equipment Count returned is eight characters long. If less than eight digits long, it contains leading zeros to make it eight characters in length. IMPORTANT NOTE: If including an equipment count with the CLU input trailer, the count must match exactly the number of detail lines provided in the message. If there is a discrepancy between the specified equipment count and the number of detail lines in the message, RailSight does not process the input.
3	¶	1	¶	12	End of Line/Separator (1-character) Carriage return or line feed indicator.

Example:

E	O	M	0	0	0	0	0	0	3	3	¶
1			2								3

12.4 Sample CLR Input

The following is a sample input file showing a simple CLU query.

```
CLR TO RRDC FLEET1      04042911
ACFX123456
BNSF654321
EOM
```

12.5 Sample CLR Output

The following is sample output based on the input file shown above. The response to or output from a query input consists of a header (CLM), multiple detail records (in the format requested), and a trailer record (EOM). Note also that the layout of the output depends on the CLM formats, data extensions, and other parameters configured for the fleet in question.

```
CLMHFR RRDC FLEET1      04042911
ACFX 123456 PROVIS0 IL04280456LAQNPCH1YARDVILLENJUP YARDVILLENJ D 062500
BNSF 654321 CANORA SK04290358LAM30451EDGEMOOR DECN EDGEMOOR DE D 062301
EOM000000002
```

12.6 CLR Output Header

Field	Data Element	Length	Format	Columns	Description
1	Inquiry ID*	3	MT	1–3	Always shown as CLM. For the CLR output, this always contains the text “CLM”
2	Format*	1	A	4	Always shown. Specifies the CLM format that is configured for the fleet. See APPENDIX A – RailSight CLM Formats for a full description of all available formats.
3	FROM*	2	MT	5–6	Always shows as the text “FR” that indicates the direction of the output file. For CLM output this field will always carry a value of “FR” indicating that the file is sent from Railinc.
4	Reserved (space)	1	A	7	Shown as a space, if not specified otherwise.
5	SCAC*	4	A	8–11	Always shown as “RRDC”, which is a standard alpha carrier code referring to Railinc.
6	Reserved (space)	1	.	12	Shown as a space, if not specified otherwise.
7	Fleet ID*	9	AN	13–21	This field contains the name of the RailSight fleet specified in the input file (padded as needed).
8	Reserved (space)	1	.	22	Shown as a space, if not specified otherwise.
9	Date/Hour	8	N	23–30	Optionally shown. Date and Time in YYMMDDHH format. Two-digit year. Two-digit month. Two-digit day. Two-digit hour in 24-hour time (15 is 3 PM).
10	Control ID	5	AN	31–35	RailSight currently places a value of “00001” in the Control ID field for each CLR response (if used in input).
11	¶	1		Varies	End Of Line/Separator (1-character) Carriage return or line feed indicator.

Example (spaces and padding are shown as dots):

1-3			4	5-6		7	8-11			12	13-21							22	23-30							31-35					36				
C	L	M	H	F	R	.	R	R	D	C	.	F	L	E	E	T	1	.	.	.	.	0	4	0	4	2	9	1	1	0	0	0	0	1	¶
1			2	3		4	5			6	7							8	9							10					11				

12.7 CLR Output Detail

The output provided on the detail lines of a CLU response depends on the message format and other parameters configured for the fleet. See [APPENDIX A – RailSight CLM Formats](#) for detailed layouts of all available message formats.

12.8 CLR Output Trailer

Field	Data Element	Length	Format	Columns	Description
1	Trailer*	3	MT	1-3	Always shows the text "EOM" indicating End Of Message .
2	Equipment Count*	8	N	4-11	Always shown . The Equipment Count returned is eight digits long. If less than eight digits long, it contains leading zeros to make it eight characters in length.
3	¶	1	¶	12	End of Line/Separator (1-character) Carriage return or line feed indicator.

Example:

E	O	M	0	0	0	0	0	0	0	1	¶
1			2								3

13. RailSight Fleet Management

The initial configuration of customer accounts and fleets are managed by Railinc. After they are established; however, the customer has a great deal of control over the content and behavior of those fleets. Through the CLU files described earlier in this document, the customer can add and delete equipment, and through the CLI files described earlier the user can invoke on-demand reporting. Since RailSight is designed primarily as a machine-to-machine application, there is no human-centric interface to consult for information concerning the fleet.

To provide an avenue to efficiently gather information concerning fleet contents, Railinc supports two fleet inquiries that can help users quickly determine what equipment is and is not in fleets, the CLL and CLLI inquiries.

14. CLL Inquiry

The CLL inquiry allows the user to obtain a complete listing of the equipment in a specified fleet. It functions much as the CLU and CLI input/output pairs. Note, however, that there are no detail lines for a CLL. The input message consists only of a header and a trailer.

NOTE: RailSight returns the results of the CLL inquiry in a file named *FLEET1_CLL*, where *FLEET1* represents the name of the fleet for which a report is requested.

14.1 CLL Input Header

For MQ Users: Remember to add MQ Header at top. See [MQ Header Line](#) on page 8.

Field	Data Element	Length	Format	Columns	Description
1	Inquiry ID*	3	MT	1–3	Required (3 Characters alpha) Mandatory Text) For the CLL, this field always contains the text “CLL”.
2	Reserved (space)	1		4	(1-character) A space, if not specified otherwise.
3	To*	2	MT	5–6	Required (2-character Mandatory text) This field should always contain the text “TO” Indicates where the input file (TO) is being sent to.
4	Reserved (space)	1	.	7	(1-character) A space, if not specified otherwise.
5	SCAC*	4	MT	8–11	Required (4-character alpha) For communication with RailSight, this field should always contain the text “RRDC”, which is a standard alpha carrier code referring to Railinc.
6	Reserved (space)	1	.	12	(1-character) A space, if not specified otherwise.
7	Fleet ID*	9	AN	13–21	Required (9-character alphanumeric) This field must contain the name of the registered RailSight fleet containing the equipment. If the fleet ID is less than 9 characters, pad it with spaces on right to 9 characters.
8	Reserved (space)	1		22	(1-character) A space, if not specified otherwise.
9	Date and Time	8	N	23–30	Optional (Four 2-digit elements) Optional. Date and Time in YYMMDDHH format. Two-digit year. Two-digit month. Two-digit day. Two-digit hour in 24-hour time (15 is 3 PM).

Field	Data Element	Length	Format	Columns	Description
10	Control ID	5	AN	31-35	Optional (5-character alphanumeric) Optional. Can carry a user-specified control ID. The RailSight application DOES NOT use this control ID. For example, if the user provides a control ID in the CLI input message header, the application does not return it in the output message header.
11	¶	1	¶	36	End Of Line/Separator (1-character) Carriage return or line feed indicator.

Key:
A = Alphabetic (letters only—left adjusted with trailing blanks)
AN = Alphanumeric (numbers and letters)
MT = Mandatory text (entered as shown in the example)
N = Numeric (numbers only—right adjusted with leading zeros)
*** = Required Fields**
¶ = End Of Line Character

Example (spaces and padding are shown as dots):

1-3		4	5-6		7	8-11			12	13-21						22	23-30						31-35					36							
C	L	L	.	T	O	.	R	R	D	C	.	F	L	E	E	T	1	.	.	.	.	0	9	0	6	1	8	1	5	.	.	.	.	.	¶
1		2	3		4	5			6	7						8	9-12						13					14							

14.2 CLL Input Trailer

For MQ Users: Remember to add MQ Trailer at bottom. See [MQ Trailer Line](#) on page 9.

Field	Data Element	Length	Format	Columns	Description
1	Trailer*	3	MT	1-3	Required (3-character Mandatory Text) This field should always have the value "EOM" EOM – Indicating End Of Message
2	¶	1	¶	4	End Of Line/Separator (1-character) Carriage return or line feed indicator.

Example:

E	O	M	¶
↑	↑		
1	2		

14.3 Sample CLL Input

The following is a sample input file showing a simple CLL query.

```
CLL TO RRDC FLEET1      04042911
EOM
```

14.4 Sample CLL Output

The following is sample output based on the input file shown above. The response to or output from a query input consists of a header (CLL), multiple detail records, and a trailer record (consisting of five summary lines). This output file shows that there are 40 permanent cars in the fleet.

```

CLL FR RRDC FLEET1      04042911
DEX 005019P DEX 005031P DEX 005096P DEX 005328P DEX 005329P
DEX 005337P DEX 005338P DEX 005791P DEX 005813P DEX 006108P
DEX 006173P DEX 006182P DEX 006185P DEX 006216P DEX 006220P
DEX 006224P DEX 006241P DEX 006251P DEX 006271P DEX 006594P
DEX 006599P DEX 006617P DEX 006651P DEX 006664P DEX 006685P
DEX 007012P DEX 007013P DEX 007019P DEX 007020P DEX 007040P
DEX 007051P DEX 007061P DEX 007063P DEX 007065P DEX 007068P
DEX 007071P DEX 007075P DEX 007081P DEX 007091P DEX 007097P
P 00000040
T 00000000
L 00000000
E 00000000
C 00000040
EOM00000013

```

14.5 CLL Output Header

Field	Data Element	Length	Format	Columns	Description
1	Inquiry ID*	3	MT	1–3	Always shown. For the CLL output, this always contains the text “CLL”
2	Format*	1	A	4	Always shown. Specifies the CLM format requested in the input file. See APPENDIX A – RailSight CLM Formats for a full description of all available formats.
3	FROM*	2	MT	5–6	Always shows the text “FR” which indicates the direction of the output file. For CLM output this field always carries a value of “FR” indicating that the file is sent from Railinc.
4	Reserved (space)	1	.	7	Shown as a space, if not specified otherwise.
5	SCAC*	4	A	8–11	Always shown as “RRDC”, which is a standard alpha carrier code referring to Railinc.
6	Reserved (space)	1	.	12	Required 1-character A space, if not specified otherwise.
7	Fleet ID*	9	AN	13–21	This field contains the name of the RailSight fleet specified in the input file (padded as needed).
8	Reserved (space)	1	.	22	Shown as a space, if not specified otherwise.
9	Date/Hour	8	N	23–30	Optionally shown. Date and Time in YYMMDDHH format. Two-digit year. Two-digit month. Two-digit day. Two-digit hour in 24-hour time (15 is 3 PM).
10	Control ID	5	AN	31–35	RailSight currently places a value of “00001” in the Control ID field for each CLL response (if used in input).
11	¶	1		Varies	End Of Line/Separator (1-character) Carriage return or line feed indicator.

Example (spaces and padding are shown as dots):

1-3		4	5-6		7	8-11			12	13-21						22	23-30						31-35				36								
C	L	L	.	F	R	.	R	R	D	C	.	F	L	E	E	T	1	.	.	.	.	0	4	0	4	2	9	1	1	0	0	0	0	1	¶
1		2	3	4	5			6	7						8	9						10				11									

14.6 CLL Output Detail

Each detail line of the CLL output consists of zero to five car initials and numbers, along with a fleet status code for each identified piece of equipment. The layout below shows a detail line for two pieces of equipment.

Field	Data Element	Length	Format	Columns	Description
1	Equipment Initial	4	A	1-4	Always shown. All Equipment initials must be four characters long. If shorter than four characters, padded with trailing spaces to make the initial four characters in length.
2	Equipment Number	6	N	5-10	Always shown. Must be six digits long. If less than six digits, padded with leading zeroes to make the number six digits long.
3	Fleet Status Code	2	A	11	Always shown. The alphabetic indicator of the equipment's status in the fleet. Valid values include: P – Permanent equipment T – Temporary equipment L – Temporary loaded equipment E – Temporary empty equipment
4	Reserved (space)	1	.	12	Shown as a space, if not specified otherwise.
5	Equipment Initial	4	A	13-16	Always shown. All Equipment initials must be four characters long. If shorter than four characters, padded with trailing spaces to make the initial four characters in length.
6	Equipment Number	6	N	17-22	Always shown. Must be six digits long. If less than six digits, padded with leading zeroes to make the number six digits long.
7	Fleet Status Code	2	A	23	Always shown. The alphabetic indicator of the equipment's status in the fleet. Valid values include: P – Permanent equipment T – Temporary equipment L – Temporary loaded equipment E – Temporary empty equipment
8	Repeat Field 4-7 three times				
19	¶	1		60	End Of Line/Separator (1-character) Carriage return or line feed indicator.

Key:
A = Alphabetic (letters only—left adjusted with trailing blanks)
AN = Alphanumeric (numbers and letters)
MT = Mandatory text (entered as shown in the example)
N = Numeric (numbers only—right adjusted with leading zeros)
*** = Required Fields**
¶ = End Of Line Character

Example:

1-4	5-10	11	12	13-16	17-22	23	24	60
D E X .	0 0 5 0 1 9	P	.	D E X .	0 0 5 0 3 1	P	.	~ ¶
1	2	3	4	5	6	7	8	19

14.7 CLL Output Trailer

The CLL output trailer provides five lines summarizing the fleet contents report and an end of message marker.

```
P 00000040  
T 00000000  
L 00000000  
E 00000000  
C 00000040  
EOM00000013
```

These trailer lines summarize the number of permanent (P), temporary (T), temporary loaded (L), temporary empty (E), and total (C) pieces of equipment currently registered to the fleet. The End of Message line also indicates the total number of lines in the output file.

15. Fleet Verification (CLLI) Inquiry

CLLI queries are used to manage an equipment fleet that controls CLM reporting. The CLLI feature allows the user to verify whether one or more specified pieces of equipment are in the fleet.

The detail specification of CLLI input file is described in the following section.

NOTE: RailSight returns the results of a CLLI inquiry in a file named *FLEET1_CLLI*, where *FLEET1* represents the name of the fleet for which a report is requested.

15.1 CLLI Input Header

For MQ Users: Remember to add MQ Header at top. See [MQ Header Line](#) on page 8.

Field	Data Element	Length	Format	Columns	Description
1	Inquiry ID*	4	MT	1–4	Required (3 Characters alphabet Mandatory Text) For the CLLI, this field always contains the text “CLL”.
2	To*	2	MT	5–6	Required (2-character Mandatory text) This field always contains the text “TO” Indicates where the input file (TO) is being sent to.
3	Reserved (space)	1	.	7	(1-character) A space, if not specified otherwise.
4	SCAC*	4	MT	8–11	Required (4-character alpha) For communication with RailSight, this field should always contain the text “RRDC”, which is a standard alpha carrier code referring to Railinc.
5	Reserved (space)	1	.	12	(1-character) A space, if not specified otherwise.
6	Fleet ID*	9	AN	13–21	Required (9-character alphanumeric) This field must contain the name of the registered RailSight fleet containing the equipment. If less than 9 characters, pad it with spaces on right to 9 characters.
7	Reserved (space)	1	.	22	(1-character) A space, if not specified otherwise.
8	Date and Time	8	N	23–30	Optional (Four 2-digit elements) Optional. Date and Time in YYMMDDHH format. Two-digit year. Two-digit month. Two-digit day. Two-digit hour in 24-hour time (15 is 3 PM).
9	Control ID	5	AN	31–35	Optional (5-character alphanumeric) Optional. Can carry a user-specified control ID. The RailSight application DOES NOT use this control ID. For example, if the user provides a control ID in the CLLI input message header, the application does not return it in the output message header.

Field	Data Element	Length	Format	Columns	Description
10	¶	1	¶	36	End Of Line/Separator (1-character) Carriage return or line feed indicator.
Key:	A = Alphabetic (letters only—left adjusted with trailing blanks) AN = Alphanumeric (numbers and letters) MT = Mandatory text (entered as shown in the example) N = Numeric (numbers only—right adjusted with leading zeros) * = Required Fields ¶ = End Of Line Character				

Example (spaces and padding are shown as dots):

1-4	5-6	7	8-11	12	13-21	22	23-30	31-35	36
C L L I	T O .	R R D C	.	F L E E T 1 . . .	.	0 9 0 6 1 8 1 5	.	.	¶
1	2	3	4	5	6	7	8	9	10

15.2 CLLI Input Detail

The CLLI input detail lines specify the equipment about which you want to query the RailSight system.

Field	Data Element	Length	Format	Columns	Description
1	Equipment Initials*	4	A	1-4	Required (4-character alphabets only) All Equipment initials must be four characters long. If shorter than four characters, add trailing spaces to make the initial four characters in length.
2	Equipment Number*	6	N	5-10	Required (6-digit numbers only) The equipment numbers must be six digits long. If less than six digits, add leading zeroes to make the number six characters long.
3	¶	1	¶	11	End Of Line/Separator (1-character) Carriage return or line feed indicator.

Example (spaces and padding are shown as dots):

U P . .	0 1 2 3 4 5	¶
1	2	3

15.3 CLLI Input Trailer

For MQ Users: Remember to add MQ Trailer at bottom. See [MQ Trailer Line](#) on page 9.

Field	Data Element	Length	Format	Columns	Description
1	Trailer*	3	MT	1-3	Required (3-character Mandatory Text) This field should always have the value "EOM" EOM – Indicating End Of Message
2	¶	1	¶	4	End Of Line/Separator (1-character) Carriage return or line feed indicator.

Example:

E O M	¶
1	2

15.4 Sample CLLI Input

The following is a sample input file showing a simple CLLI query.

```
CLLITO RRDC FLEET1    04042911
PLM 003965
UNP 121742
ACFX015731
ACFX016913
BN 000102
EOM
```

15.5 Sample CLLI Output

The following is sample output based on the input file shown above. The response to or output from a query input consists of a header (CLLI), multiple detail records, and a trailer record (consisting of five summary lines and an end of message marker). RailSight indicates that equipment is not found in the fleet by showing a “CLE215” error (see Section [24 RailSight Error Handling](#) for a detailed description of CLE messages) and the text “NOT FOUND” next to the equipment number. This output file shows that two of the cars queried are permanent cars in the fleet.

```
CLLIFR RRDC FLEET1    04042911
CLE215 PLM 003965 NOT FOUND
CLE215 UNP 121742 NOT FOUND
ACFX015731 P
ACFX016913 P
CLE215 BN 000102 NOT FOUND
P 00000002
T 00000000
L 00000000
E 00000000
C 00000002
EOM00000010
```

15.6 CLLI Output Header

Field	Data Element	Length	Format	Columns	Description
1	Inquiry ID*	3	MT	1–4	Always shown. For the CLLI output, this always contains the text “CLLI”
2	FROM*	2	MT	5–6	Always shows as the text “FR” which indicates the direction of the output file. For CLLI output this field always carries a value of “FR” indicating that the file is sent from Railinc.
3	Reserved (space)	1	.	7	Shown as a space, if not specified otherwise.
4	SCAC*	4	A	8–11	Always shown as “RRDC”, which is a standard alpha carrier code referring to Railinc.
5	Reserved (space)	1	.	12	Shown as a space, if not specified otherwise.
6	Fleet ID*	9	AN	13–21	This field contains the name of the RailSight fleet specified in the input file (padded as needed).

Field	Data Element	Length	Format	Columns	Description
7	Reserved (space)	1	.	22	Shown as a space, if not specified otherwise.
8	Date/Hour	8	N	23–30	Optionally shown. Date and Time in YYMMDDHH format. Two-digit year. Two-digit month. Two-digit day. Two-digit hour in 24-hour time (15 is 3 PM).
9	Control ID	5	AN	31–35	RailSight currently places a value of "00001" in the Control ID field for each CLLI response (if used in input).
10	¶	1		Varies	End Of Line/Separator (1-character) Carriage return or line feed indicator.

Key:
A = Alphabetic (letters only—left adjusted with trailing blanks)
AN = Alphanumeric (numbers and letters)
MT = Mandatory text (entered as shown in the example)
N = Numeric (numbers only—right adjusted with leading zeros)
*** = Required Fields**
¶ = End Of Line Character

Example (spaces and padding are shown as dots):

1-4				5-6	7	8-11				12	13-21							22	23-30							31-35					36				
C	L	L	I	F	R	.	R	R	D	C	.	F	L	E	E	T	1	.	.	.	.	0	4	0	4	2	9	1	1	0	0	0	0	1	¶
1				2	3	4				5	6							7	8							9					10				

15.7 CLLI Output Detail

Each detail line of the CLLI output consists of a response for each input detail line. If the equipment specified is registered to the fleet, the system responds with the equipment initial and number followed by the equipment's status code (P for permanent, T for temporary, L for temporary loaded, or E for temporary empty).

If the equipment specified is not registered to the fleet, the system responds with an error code of "CLE215". It also shows the equipment initial and number and the text "NOT FOUND".

15.8 CLLI Output Trailer

The CLLI output trailer provides five lines summarizing the fleet contents report and an end of message marker. This output is similar to that produced for the CLLI response, but the summary lines detail the number of pieces of equipment with each fleet condition code currently populating the fleet.

```
P 00000002
T 00000000
L 00000000
E 00000000
C 00000002
EOM00000010
```

These trailer lines summarize the number of permanent (P), temporary (T), temporary loaded (L), temporary empty (E), and total (C) pieces of equipment currently registered to the fleet. The End of Message line also indicates the total number of lines in the output file.

16. Event Data Format Extensions

RailSight can currently provide car location messaging data in more than 20 output formats, including all formats adopted as standards by the National Industrial Transportation League (NITL) and a number of Railinc custom formats. In addition to these, RailSight can produce EDI 214 and EDI 322 output and XML output. With this wide range of output choices, RailSight can satisfy the information needs of most customers.

RailSight also has the ability, however, to append additional data elements to the end of standard messages. This allows you to customize your RailSight output to meet your specific needs.

[APPENDIX A – RailSight CLM Formats](#) provides a detailed layout of each available CLM format. The following table describes the extensions the user can select to augment any one of these CLM formats. Choose any number of these extensions as additions to the CLMs.

Display Text	Description	Length	Sample
Custom Information			
Equipment Cycle ID	Data element that tracks the equipment cycles of rail equipment. An equipment cycle is measured from the start of a loaded trip to the end of the next empty trip.	5	00062
Equipment Trip Sequence Number	Data elements that tracks the trips of rail equipment. Loaded trips are represented as '001', and empty trips are represented as '002'.	3	001
Equipment Type Code	Type of Equipment.	4	BOXC
Event Latitude-Longitude	The Latitude and Longitude where the event occurred.	23	+041.660800 +083.530100 (New)
Event SPLC location	The standard point location code (SPLC) for the geographic location at which the movement event occurred.	9	849659000
Event Time Zone	Time Zone of the reported event.	3	PT
Event Train ID	The train ID currently associated with the car.	6	QFTMCO
Event Type	The four digit number representing TRAIN event type such as a departure.	4	6016
SCAC of receiving Road	The standard carrier alpha code (SCAC) of the receiving road <i>on an interchange</i> event.	2–4	CSXT (pad)
Tripplan - 333 Abbreviated Station ETA	The 333 abbreviation for the station at the Estimated Time of Arrival as listed in the railroad trip plan.	9	HARRISBUR
Tripplan - End-of-trip Event Code	The end-of-trip event called for in the railroad trip plan.	1	Z
Tripplan - ETA City	The name of the station where the Estimated Time of Arrival will take place as listed in the railroad trip plan.	19	BAKERSFIELD
Tripplan - ETA SPLC	The SPLC code of the location where the Estimated Time of Arrival will take place as listed in the railroad trip plan.	9	380433000
Tripplan - ETA State	The two letter state abbreviation where the Estimated Time of Arrival will take place as listed in the railroad trip plan.	2	NC
Tripplan - ETA Time Stamp	The date and time stamp of when the Estimated Time of Arrival will take place as listed in the railroad trip plan.	26	2009-07-21- 05.25.00.000000
Tripplan - ETI Received	The date and time the Estimated Time of Interchange was received as listed in the railroad trip plan.	16	2009-05-28 17:53

Display Text	Description	Length	Sample
Tripplan - ETI SPLC	The SPLC code of the location where the Estimated Time of Interchange will take place as listed in the railroad trip plan.	9	674123000
Tripplan - ETI State	The two letter state code where the Estimated Time of Interchange will take place as listed in the railroad trip plan.	2	NE
Tripplan - ETI Time Stamp	The date and time stamp of when the Estimated Time of Interchange will take place as listed in the railroad trip plan.	26	2009-07-21-05.25.00.000000
Tripplan - SCAC of reporting Road at ETI	The SCAC of the road reporting that will be reporting the interchange as listed in the railroad trip plan.	4	NS
Tripplan receipt date	The date of receipt of the most recent trip plan pertaining to the equipment for which event data is reported.	10	2009-06-23
Tripplan receipt time	The time of receipt of the most recent trip plan pertaining to the equipment for which event data is reported.	15	05.25.00.000000
Waybill - 333 abbreviation for the station of origin	The 333 abbreviation for the station of origin on the waybill.	9	CENWHAIMS
Waybill - Bill of Lading	The Bill of Lading number that the equipment is moving under as listed on the waybill - format varies by road.	7	4611110
Waybill - Date	The date the waybill was originally issued or corrected.	10	2009-06-23
Waybill - Destination Road	The SCAC of the road handling the equipment at its destination listed on the waybill.	4	CSXT
Waybill - Destination SPLC	The SPLC of the destination station on the waybill.	9	668200000
Waybill - Equipment description code	The code assigned as the official equipment description.		
Waybill - Equipment Length	The length of the equipment described in the event report.		
Waybill - Number	The waybill number as issued by the posting railroad The number of the current waybill associated with the equipment for which event data is reported.	6	683637
Waybill - Origin State	The state of the origin station on the waybill.	2	ME
Waybill - Purchase Order Number	The Purchase Order number of the Waybill.		
Waybill - SCAC of Billing Road	The SCAC of the road posting the waybill.	4	BNSF
Waybill - SCAC of the road originating the shipment	The SCAC of the road originating the shipment on the waybill.	4	UP
Waybill - Sending Road	The SCAC of the railroad that posted the waybill.	4	FEC
Waybill - SPLC of Origin Station	The SPLC code of the origin station on the waybill.	9	456349000
Waybill - Station of Origin	The station of origin as listed on the waybill.	11	WOODS CROSS
Waybill - STCC	The STCC code of the commodity on the waybill.	7	1441310
Waybill - STCC Description	A description of the STCC commodity listed on the waybill.	15	SAND,INDUSTRIAL
Waybill - Vehicle Id Number			
Waybill - VERSION-NB	The version number communicated in the current waybill.		
Waybill Receipt Date	The date of receipt of the current waybill pertaining to the equipment for which event data is reported.	10	2009-06-23
Waybill Receipt Time	The time of receipt of the current waybill pertaining to the equipment for which event data is reported.	15	05.25.00.000000
Waybill Route Information			

These are the basic event extensions currently available in RailSight. Users can have them appended individually to their CLMs, and they can also be appended in the following combinations. When they are appended to CLMs, the system inserts no spaces between the end of the CLM and the beginning of the appended data element, and the system also inserts no spaces between the appended data elements.

17. RailSight Output Formats

RailSight currently supports seven distinct output formats. It is important to distinguish between **CLM formats** and **output formats**. While CLM formats describe the layout of the individual event reports, RailSight output formats refer to the formatting of the files containing the individual event reports. Most RailSight customers receive event data in one of the CLM formats described in [APPENDIX A – RailSight CLM Formats](#). The application can, however, produce event reports in EDI 214, EDI 322, and XML formats.

The following sections describe in detail the output formats available:

1. [CLM](#) (with headers and trailers)
2. [CLX](#) (no headers or trailers)
3. [CSV](#) (comma separated values)
4. [EDI 214](#)
5. [EDI 322](#)
6. CIDX XML

17.1 CLM Output Format (With Headers and Trailers)

The CLM output format is the default format for RailSight. This is the format described in detail in Sections [9.5](#) through [9.8](#) of this document. Review the example of this output below and see these sections for more detailed information on the content of the headers and footers. Remember that the format of the detail lines for this output varies depending upon the CLM format selected for the fleet.

```
CLMDFR RRDC FLEET1      0404291000001
NAHX 551025 WLAKCHARL LA 06 28 2300 E Z   YRB752 WLAKCHARL LA UP
RUSX 483312 WLAKCHARL LA 06 29 2000 E X   YRB752 VALLEYFIE PQ UP
NAHX 550160 WLAKCHARL LA 06 29 2030 E Z   YRB752 LAKCHARLE LA UP
NAHX 550486 WLAKCHARL LA 06 29 2100 E X   YRB752 CURBAY MD UP
SMNX 000630 WLAKCHARL LA 06 29 2030 L Z   YRB752 LAKCHARLE LA UP
ITGX 012654 WLAKCHARL LA 06 29 1930 E X   YRB752 WLAKCHARL LA UP
FURX 850726 WLAKCHARL LA 06 28 2300 L Z   YRB752 LAKCHARLE LA UP
EOM000000007
```

17.2 CLX Output Format (No Headers and Trailers)

The CLX output format provides the same detail information without headers and trailers on the output file. Many customers prefer this output format since it simplifies their data processing, eliminating the need to remove the headers and trailers from the output file before bringing it into their systems.

```
NAHX 551025 WLAKCHARL LA 06 28 2300 E Z   YRB752 WLAKCHARL LA UP
RUSX 483312 WLAKCHARL LA 06 29 2000 E X   YRB752 VALLEYFIE PQ UP
NAHX 550160 WLAKCHARL LA 06 29 2030 E Z   YRB752 LAKCHARLE LA UP
NAHX 550486 WLAKCHARL LA 06 29 2100 E X   YRB752 CURBAY MD UP
SMNX 000630 WLAKCHARL LA 06 29 2030 L Z   YRB752 LAKCHARLE LA UP
ITGX 012654 WLAKCHARL LA 06 29 1930 E X   YRB752 WLAKCHARL LA UP
FURX 850726 WLAKCHARL LA 06 28 2300 L Z   YRB752 LAKCHARLE LA UP
```

17.3 CSV Output Format

The Comma Separated Values (CSV) output format provides the same detail information as the CLM and CLX formats, but the detail lines are comma-delimited rather than fixed-width fields. This output format also suppresses headers and trailers.

```
PSPX,006031,BROWNWOOD,TX,06,22,,0802,E,RELEASED, , ,HOUSTON ,TX,TXR
PSPX,006031,BROWNWOOD,TX,06,22,,0803,E,PULL FROM PATRON, , ,HOUSTON ,TX,TXR
PSPX,006031,BROWNWOOD,TX,06,22,,2130,E,JUNCTION DELIVERY, ,BNSF ,HOUSTON ,TX,TXR
PSPX,006031,BROWNWOOD,TX,06,22,,2200,E,JUNCTION RECEIVED, ,TXR ,HOUSTON ,TX,BNSF
PSPX,006031,BROWNWOOD,TX,06,26,,1341,E,DEPARTURE, ,LGFC05,HOUSTON ,TX,BNSF
PSPX,006031,LOMETA ,TX,06,26,,1915,E,DEPARTURE, ,LGFC05,HOUSTON ,TX,BNSF
```

17.4 EDI 214 Output Format

The EDI 214 output format provides equipment movement reports in an ANSI X12 version 4050-compliant EDI 214 format. You can obtain detailed information on this format through the ANSI X12 EDI standards, which are available through the Data Interchange Standards Association (DISA) at their web site (<http://www.disa.org/bookstore/public/index.cfm>).

See Section [26 RailSight EDI 214 Layout](#) for a detailed description of this message format.

```
ISA*00*                *00*                *ZZ*RRDC                *01*certest
*040629*2310*U*00405*000000001*0*P*~
GS*QM*RRDCRS*CUSTOMER*20040429*231005*00001*X*004050
ST*214*0001
B10**NS*BNSF**WY*100917
K1*RAILSIGHT
N1*SH*SHIPPER X
N4*BROWNWOOD*TX
N1*CN*CONSIGNEE Y
N4*HOUSTON*TX
LX*1
AT7*X6*BG***20040629*1411
MS1*ROSENBERG*TX
MS2*PSPX*006031*RR
L11*STR*2821142
K1*POLYETHYLENE, OTHER THAN LIQUI*D
SE*14*0001
```

GE*1*00001
IEA*1*000000001

17.5 EDI 322 Output Format

The EDI 322 output format provides equipment movement reports in an ANSI X12 version 4050-compliant EDI 322 format. You can obtain detailed information on this format through the ANSI X12 EDI standards, which are available through the Data Interchange Standards Association (DISA) at their web site (<http://www.disa.org/bookstore/public/index.cfm>).

See Section [27 RailSight EDI 322 Layout](#) for a detailed description of this message format.

ST*322*1
Q5*P*20040702*114100*ET
N7*CAXU*497650*031098*N*****L
W2*CAXU*497650**CH*L
R4*5*SL*413785000*LINWOOD
R4*7*SL*439900000*MEMPHIS
N9*7W***20040702*114100*ET
N9*WY*593603**20040625
SE*0009*1

18. RailSight Output Trigger Types

RailSight offers several output trigger types, allowing a great deal of flexibility and control over how and when event data is reported to the customer. Below is a summary of the available trigger types.

Trigger Type	Description
Event	Instructs RailSight to forward event data as it is received.
CLU	Instructs RailSight to forward the last available event for any equipment added to the fleet through a fleet update (CLU) input file. This setting does not cause the application to send the last available event for the entire fleet when it receives an input file, and it does not send the last available event for any equipment the user instruct the system to delete from the fleet through the input file.
Time	Instructs RailSight to run a trace for all equipment in the fleet at a specified time each day. Up to three traces per day can be scheduled.

These trigger types are also available in any combination of the values above. For example, Railinc can configure a fleet to use an Event-CLU trigger, in which case the system forwards all event data for the fleet as it is received, and it also sends the last event for any equipment added through an input file mechanism.

19. Start-Of-Trip Reporting

Much of the rail equipment moving on North American railroads is managed and monitored on a trip-by-trip basis. The empty and loaded trips of a piece of rail equipment comprise what is known as that equipment's trip cycle. RailSight allows users to add equipment to the fleet at any point in the equipment's trip cycle. When Railinc configures the fleet to supply start-of-trip reporting, the system reports all events back to the start of the current trip when the user add the equipment to the fleet.

For example, if the RailSight fleet is configured to use a CLU trigger, when the user submits an input file, the system sends the last available event for any equipment being added with that file. If start-of-trip reporting were also enabled for that fleet, the system would also report all events back to the start of the current trip. This can be a useful feature for "backfilling" missing events if the user consistently learns that a trace is always needed after a car has already departed from the origin.

20. Party-to-Waybill Warnings (CLW)

Under the most stringent rail industry security levels, all RailSight fleets must operate under party-to-waybill security. When Railinc applies this security to fleets, only the event data associated with waybills to which the customer is a party flows through to the customer.

Railinc developed the party-to-waybill warning report to alert users that an event occurred for a piece of equipment in the fleet, but waybill security prevents Railinc from sending it to the user. With this information, the user can research the affected equipment and notify Railinc if the security block should be disputed. Known as CLW reports, these messages provide the equipment initial and number and the date and time of the blocked event. They do not provide any other event data.

20.1 Sample CLW Output

A sample of the CLW output follows.

```
CLW FR RRDC FLEET1      04060403
CNWX395565 06032355
CN  388266 06032355
CNWX395565 06040009
CN  388266 06040009
CN  377048 06040220
ICG 766496 06040224
EOM000000006
```

20.2 CLW Output Header

Field	Data Element	Length	Format	Columns	Description
1	Inquiry ID*	3	MT	1–3	Always shown. For the CLW output, this always contains the text “CLW”.
2	Reserved (space)	1	.	4	Shown as a space, if not specified otherwise.
3	FROM*	2	MT	5–6	Always shown as “FR” which indicates the direction of the output file. For CLW output this field always carries a value of “FR” indicating that the file is sent from Railinc.
4	Reserved (space)	1	.	7	Shown as a space, if not specified otherwise.
5	SCAC*	4	A	8–11	Always shown as “RRDC”, which is a standard alpha carrier code referring to Railinc.
6	Reserved (space)	1	.	12	Shown as a space, if not specified otherwise.
7	Fleet ID*	9	AN	13–21	This field contains the name of the RailSight fleet specified in the input file (padded as needed).

Field	Data Element	Length	Format	Columns	Description
8	Reserved (space)	1	.	22	Shown as a space, if not specified otherwise.
9	Date/Hour	8	N	23–30	Optionally shown. Date and Time in YYMMDDHH format. Two-digit year. Two-digit month. Two-digit day. Two-digit hour in 24-hour time (15 is 3 PM).
10	Control ID	5	AN	31–35	RailSight currently places a value of “00001” in the Control ID field for each CLLI response (if used in input).
11	¶	1		Varies	End Of Line/Separator (1-character) Carriage return or line feed indicator.

Key:
A = Alphabetic (letters only—left adjusted with trailing blanks)
AN = Alphanumeric (numbers and letters)
MT = Mandatory text (entered as shown in the example)
N = Numeric (numbers only—right adjusted with leading zeros)
*** = Required Fields**
¶ = End Of Line Character

Example (spaces and padding are shown as dots):

1-3	4	5-6	7	8-11	12	13-21	22	23-30	31-35	36
C L W	.	F R	.	R R D C	.	F L E E T 1 . . .	.	0 4 0 4 2 9 1 1	0 0 0 0 1	¶
1	2	3	4	5	6	7	8	9	10	11

20.3 CLW Output Detail

Each detail line of the CLW output consists of the initial and number of the equipment for which RailSight blocked an event, followed by the date/time stamp of the event.

Field	Data Element	Length	Format	Columns	Description
1	Equipment Initials*	4	A	1–4	Always shown. All Equipment initials must be four characters long. If shorter than four characters, padded with trailing spaces to make the initial four characters in length.
2	Equipment Number*	6	N	5-10	Always shown. Must be six digits long. If less than six digits, padded with leading zeroes to make the number six digits long.
3	Reserved (space)	1	.	11	(1-character) A space, if not specified otherwise.
4	Date/Hour*	8	N	12–19	Optionally shown. Date and Time in YYMMDDHH format. Two-digit year. Two-digit month. Two-digit day. Two-digit hour in 24-hour time (15 is 3 PM).
5	¶	1	¶	20	End Of Line/Separator (1-character) Carriage return or line feed indicator.

Key:
A = Alphabetic (letters only—left adjusted with trailing blanks)
AN = Alphanumeric (numbers and letters)
MT = Mandatory text (entered as shown in the example)
N = Numeric (numbers only—right adjusted with leading zeros)
*** = Required Fields**
¶ = End Of Line Character

Example (spaces and padding are shown as dots):

1-4				5-10						11	12-19								20
U	P	.	.	0	0	0	3	4	5	.	0	4	0	4	2	9	1	1	¶
1				2						3	4								5

20.4 CLW Output Trailer

The CLW output trailer provides a simple end of message marker and a count of the detail lines contained in the message.

21. RailSight Waybill Reporting

While RailSight's primary use is the dissemination of equipment event data, it can also distribute waybill detailed waybill information for your shipments. This waybill data is available in an X12-compliant EDI 417 format.

Note: Railinc will deliver waybills to you only where party-to-waybill security authorizes your access to the data.

21.1 RailSight 417 Distribution

RailSight can deliver railroad waybills (EDI 417s) to your FTP mailbox. Currently, RailSight supports ANSI X 12 versions 4050 of these documents. Railinc must receive valid letters of authorization (LOAs) prior to distributing waybills to your firm.

21.2 Waybill Layout

Below is a sample waybill from RailSight. Following this is a detailed explanation of the data shown.

```
ISA*04*SW417      *00*          *02*RRDC          *02*CUST01          *040402*151
1*U*00405*000016298*0*P*~
GS*WB*RRDC*CUST01*20040402*1511*16298*X*004050
ST*417*0000000001
BX*00*R*NC***L*E
BNX*M**S
N9*BM*NONE**20040402*140000
N7*ECUX*575170***0
N8*979797*20040402
F9*52646*BAYTOWN*TX*****684771000
D9*03227*BATON ROUGE*LA*****644800000
N1*SH*SHIPPERCO*C5*1234567890000
N1*CN*CONSIGNEECO*C5*9876543210000
R2*UP*A*BATON
R2*KCS*1
LX*1
L5*1*ISOPRENE*4907230*L
LH1*UN*1*UN1218**4907230***R*I
LH2*3*P***RQ*CE*37*****T*1
LH3*ISOPRENE, STABILIZED*D*NOS
LFH*HZC*(ISOPRENE)*OL)*B
LFH*ADI*(MAY PRODUCE A SHEEN IF*SPILLED ON WATER)*B
PER*HM*SHIPPERCO CONTACT*TE*8001112222
SE*21*0000000001
GE*1*16298
IEA*1*000016298
```

21.3 Waybill Detailed Description

ISA Header

ISA*04*SW417 *00* *02*RRDC *02*CUST01 *040402*151
1*U*00405*000016298*0*P*~

ISA01—Authorization Information Qualifier. Always set to '04' for 'Rail Communications ID'.
ISA02—Authorization Information. Always set to 'SW417' for 'Rail Waybill'.
ISA03—Security Information Qualifier. Always set to '00' for 'No Security Information Present'
ISA04—blank
ISA05—Interchange ID Qualifier. Always set to '02' because Railinc is regarded as the sending railroad.
ISA06—Interchange Sender ID. Always set to Railinc's SCAC of 'RRDC'.
ISA07—Interchange ID Qualifier. Always set to '02'.
ISA08—Interchange Receiver ID. Always set to the fleet name for which the RailSight customer is receiving the 417.
ISA09—Interchange Date. Set to the date on which Railinc transmits the 417 to the customer.
ISA10—Interchange Time. Set to the time at which Railinc transmits the 417 to the customer.
ISA11—Repetition Separator. Always set to 'U'.
ISA12—Interchange version control number. Always set to the version of the 417 document.
ISA13—Interchange Control Number. This is a Railinc-generated control number.
ISA14—Acknowledgement Requested. Always set to '0' for 'No Acknowledgement Requested'.
ISA15—Interchange Usage Indicator. Always set to 'P' for 'Production Data'.
ISA16—Component Element Separator. Always set to tilde (~).

GS Functional Group Header

GS*WB*RRDC*CUST01*20040402*1511*16298*X*004050

GS01—Functional Identifier Code. Always set to 'WB' for 'Rail Carrier Waybill'.
GS02—Application sender's code. Always set to 'RRDC' for Railinc.
GS03—Application receiver's code. Always set to the fleet name for which the customer is receiving the 417.
GS04—Date. Always set to the date on which Railinc transmits the 417 to the customer.
GS05—Time. Always set to the time at which Railinc transmits the 417 to the customer.
GS06—Group control number. This is a Railinc-generated control number.
GS07—Responsible Agency Code. Always set to 'X' for ANSI X12 Committee.
GS08—Version/Release/Industry Identifier Code. Always set to the X12 version of the document transmitted.

ST Transaction Set Header

ST*417*000000001

ST01—Transaction Set Identifier Code. Always set to '417' for 'Rail Carrier Waybill Interchange'.
ST02—Transaction Set Control Number. Always set to '000000001'.

BX General Shipment Information

BX*00*R*NC***L*E

BX01—Transaction Set Purpose Code. Always set to '00' for 'Original'.
BX02—Transportation Method/Type Code. Always set to 'R' for 'Rail'.
BX03—Shipment method of payment. From BX03 element on waybill
BX04—Shipment Identification Number. Always blank
BX05—Standard Carrier Alpha Code. Always blank
BX06—Weight Unit Code. Always 'L' for 'Pounds'.
BX07—Shipment Qualifier. 'E' if BX07 on waybill is E, W, X, 1, 8, or G. 'L' if BX07 on waybill is anything else.

BX Rail Shipment Information

BNX*M**S

BNX01—Shipment Weight Code. From BNX01 element on waybill.
BNX02—Referenced Pattern Identifier. Always blank.
BNX03—Billing Code. From BNX03 element on waybill.
BNX04—Repetitive pattern number. From BNX04 element on waybill.

N9 Extended Reference Identification

N9*BM*NONE**20040402*140000

N901—Reference Number Qualifier. 'BM' for 'Bill of Lading Number' if waybill element N901 is 'BL', 'BM', 'BN', 'CO', 'CR', 'OB', 'SI', 'WY'. 'PO' if waybill element N901 is 'PO'.
N902—Reference Number. From N902 element on waybill. 'NONE' if no data found.
N903—Free form description. Always blank.
N904—Date. From N904 element on waybill.
N905—Time. From N905 element on waybill.

N7 Equipment Details

N7*ECUX*575170***0

N701—Equipment Initial. From N701 element on waybill.
N702—Equipment Number. From N702 element on waybill.
N703—Weight. From N703 element on waybill.
N704—Weight Qualifier. From N704 element on waybill.
N705—Tare Weight. From N705 element on waybill.
N706—Weight Allowance. From N706 element on waybill.
N707—Dunnage. From N707 element on waybill.

N8 Waybill Reference

N8*979797*20040402

N801—Waybill number. From N801 element on waybill.
N802—Date. From N802 element on waybill.

F9 Origin Station

F9*52646*BAYTOWN*TX*****684771000

F901—Freight Station Accounting Code. From F901 element on waybill.
F902—City Name. From F902 element on waybill.
F903—State. From F903 element on waybill.
F908—Standard Point Location Code. From R201 and F901 elements on waybill evaluated to determine the SPLC.

D9 Destination Station

D9*03227*BATON ROUGE*LA*****644800000

D901—Freight Station Accounting Code. From D901 element on waybill.

D902—City Name. From D902 element on waybill.

D903—State. From D903 element on waybill.

D908—Standard Point Location Code. From R201 and D901 elements on waybill evaluated to determine the SPLC.

N1 Party Identification

N1*SH*SHIPPERCO*C5*1234567890000

N101—Entity identifier code. From N101 element of waybill.

N102—Name. From N102 element of waybill.

N103—Identification code qualifier. From N103 element of waybill.

N104—Identification code. From N104 element of waybill.

R2 Route Information

R2*UP*A*BATON

R201—Standard carrier alpha code. From R201 element of waybill.

R202—Routing sequence code. From R202 element of waybill.

R203—City name. From R203 element of waybill.

LX Transaction Set Line Number

LX*1

LX01 – Assigned number. From LX01 element of waybill.

L5 Description, Marks, and Numbers

L5*1*ISOPRENE*4907230*L

L501—Lading Line Item Number. From L501 element of waybill.

L502—Lading Description. From L502 element of waybill.

L503—Commodity Code. From L503 element of waybill.

L504—Commodity Code Qualifier. From L504 element of waybill.

LH1 Hazardous Identification Information

LH1*UN*1*UN1218**4907230***R*I

LH101—Unit or Basis for Measurement Code. From LH101 element of waybill.

LH102—Lading Quantity. From LH102 element of waybill.

LH103—UN/NA Identification Code. From LH103 element of waybill.

LH104—Hazardous Materials Page. From LH104 element of waybill.

LH105—Commodity Code. From LH105 element of waybill.

LH106—Unit or Basis for Measurement Code. From LH106 element of waybill.

LH107—Quantity. From LH107 element of waybill.

LH108—Compartment ID Code. From LH108 element of waybill.

LH109—Residue Indicator Code. From LH109 element of waybill.

LH110—Packing Group Code. From LH110 element of waybill.

LH2 Classification Information

LH2*3*P***RQ*CE*37*****T*1

LH201—Hazardous Classification. From LH201 element of waybill.
LH202—Hazardous Class Qualifier. From LH202 element of waybill.
LH205—Reportable Quantity Code. From LH205 element of waybill.
LH206—Unit or Basis for Measurement Code. From LH206 element of waybill.
LH207—Temperature. From LH207 element of waybill.
LH208—Unit or Basis for Measurement Code. From LH208 element of waybill.
LH209—Temperature. From LH209 element of waybill.
LH210—Unit or Basis for Measurement Code. From LH210 element of waybill.
LH211—Temperature. From LH211 element of waybill.
LH212—Weight Unit Code. From LH212 element of waybill.
LH213—Net Explosive Quantity. From LH213 element of waybill.

LFH Freeform Hazardous Material Information

LFH*HZC*(ISOPRENE)**B

LFH01—Hazardous Material Shipment Information Qualifier. From LFH01 element of waybill.
LFH02—Hazardous Material Shipment Information. From LFH02 element of waybill.
LFH03—Hazardous Material Shipment Information. From LFH03 element of waybill.
LFH04—Hazard Zone Code. From LFH04 element of waybill.

PER Administrative Communications Contact

PER*HM*SHIPPERCO CONTACT*TE*8001112222

PER01—Contact Function Code. From PER01 element of waybill.
PER02—Name. From PER02 element of waybill.
PER03—Communication Number Qualifier. From PER03 element of waybill.
PER04—Communication Number. From PER04 element of waybill.

SE Transaction Set Trailer

SE*21*000000001

SE01—Number of Included Segments. Calculated.
SE02—Transaction Set Control Number. Always set to '000000001'.

GE Functional Group Trailer

GE*1*16298

GE01—Number of Transaction Sets Included. Always set to '1'.
GE02—Group Control Number. Number defined by Railinc.

IEA Interchange Control Trailer

IEA*1*000016298

IEA01—Number of Included Functional Groups. Always set to '1'.
IEA02—Interchange Control Number. Number defined by Railinc.

22. RailSight 417 On-Demand Distribution

RailSight now supports the ability for you to request and receive EDI 417 documents for specific equipment. Using a variant of the CLI demand trace input file, you can specify the equipment for which you want to receive the latest 417. Additionally, you can request all 417s available for the equipment up to 90 days in the past.

In order for RailSight to transmit the 417 data to you, the documents must pass waybill security. This means that your firm or a firm that has granted you authorization by letter must appear on the waybill for the application to release the data to you.

A sample 417 demand trace input file is shown below.

```
CLI TO RRDCWFLEET1
AOK 001005
EOM
```

You instruct RailSight to send the 417 by placing the letter **W** in byte 12 of the CLI header. **You must use a valid fleet name in the header of this document.** Otherwise, the application cannot correctly evaluate waybill security, and you will receive no output. In this example, the active waybill for the equipment mentioned would be returned with a file name of FLEET1_CLMCSV_417.

Below is another input file example demonstrating the format for specifying a date range from which you want 417 data.

```
CLI TO RRDCWFLEET1
CRXU2461872005-05-042005-06-22
CRXU8510862005-05-042005-06-22
TEXU2183612005-05-042005-06-22
TEXU3938802005-05-042005-06-22
EOM
```

If your current security configuration in RailSight allows waybills within the specified date range up to 90 days in the past allows the documents to pass through, they will be transmitted to your mailbox. Note that the equipment initial and number is followed by the beginning and ending date with no spaces separating any of the data elements.

23. Authorization and Security

23.1 Proof of Authorization

For full compliance with industry security standards, Railinc requires that any customer requesting shipment status data provide written proof of their authorization to access the data. If you contract directly with Railinc and are a party to the waybill for the shipment data you receive, then your Railinc contract serves as sufficient authorization, and no other documentation is necessary. If, however, you are a third-party collecting shipment information for others, Railinc requires that you furnish letters of authorization (LOAs) from all parties for whom you wish to receive data. Common in the logistics industry, these letters of authorization simply indicate that your customer grants you permission to receive various types of shipment data (waybills, car location messages, etc.) and specifies the following:

- The entities for which the permission is granted
- The entities to which the permission is granted
- The duration of the authorization (one year is the most common term)
- Any specific restrictions on data types or other factors needed

You can submit your letters of authorization (or updates thereof) to the Railinc Customer Support Center at any time by emailing them to csc@railinc.com or by Faxing them to 919-651-5276 to the attention of RailSight Support.

23.2 RailSight CLM Security

Transportation information security is very sensitive for most participants in the commercial value chain. It is critical that only parties with the correct authorization have access to shipment data, both from a business confidentiality aspect and for physical security reasons. RailSight incorporates four levels of security to ensure that only authorized parties gain access to shipment data. These security levels are in full compliance with the Association of American Railroads (AAR) industry security levels.

23.3 RailSight Security Profiles

As described earlier in this document, RailSight maintains fleet-level security profiles that govern your access to both CLM and waybill data. Some elements of these profiles, such as department of defense and hazardous materials screening, are the same for all RailSight customers. Mark and party-to-waybill security, however, are configured specifically for each customer. Working with the Dun and Bradstreet hierarchy of organization entities, party-to-waybill security is configured to ensure that you receive only the data for which you are authorized. These security profiles are constructed and maintained at Railinc and can only be modified by authorized Railinc personnel.

24. RailSight Error Handling

Since RailSight is designed primarily as a machine-to-machine application, there is no readily visible user interface that communicates error conditions to the user. Instead, RailSight supports NITL standards for error reporting as defined in the AAR/NITL Car Location Message Standards.

When RailSight cannot process your input, it provides error messages in your normal data flows. These error messages, known as CLEs, provide numeric codes that can help you research and resolve the cause(s) of any errors you encounter. The error messages always contain at two or more parts:

CLE Car Location Exception message, followed by:
CLE Number Indicates the type of exception. The numeric codes indicate the following:
100-199 Headers/Text Structure
200-299 Text Details

More than one CLE message can be received for each input file if the input contains multiple errors.

24.1 CLE Message Format

Field	Data Element	Length	Format	Columns	Description
1	CLE Identifier	3	A	1–3	Required (4-character alpha only) All Equipment initials must be four characters long. If the equipment initial is shorter than four characters, use trailing spaces to make the initial four characters in length.
2	CLE Number	3	N	4-6	Required (6-digit numbers only) The equipment numbers must be six digits long. If the equipment number is less than six digits, use leading zeroes to make the number six characters long.
3	Reserved (space)	1	.	7	(1-character) A space, if not specified otherwise.
4	Equipment Initials*	4	A	8–11	Required (4-character alphabets only) All Equipment initials must be four characters long. If the equipment initial is shorter than four characters, use trailing spaces to make the initial four characters in length.
5	Equipment Number*	6	N	12-17	Required (6-digit numbers only) The equipment numbers must be six digits long. If the equipment number is less than six digits, use leading zeroes to make the number six characters long.

Field	Data Element	Length	Format	Columns	Description
6	¶	1	¶	18	End Of Line/Separator (1-character) Carriage return or line feed indicator.

Key:
A = Alphabetic (letters only—left adjusted with trailing blanks)
AN = Alphanumeric (numbers and letters)
MT = Mandatory text (entered as shown in the example)
N = Numeric (numbers only—right adjusted with leading zeros)
*** = Required Fields**
¶ = End Of Line Character

Example (spaces and padding are shown as dots);

1-3	4-6	7	8-11	12-17	18
C L E 2	1 5	.	C N . .	2 2 1 3 4 5	¶
1	2	3	4	5	6

The following tables describe the detailed error messages you can receive from the RailSight application. The messages are listed in alphabetic order. The type of input message to which these errors can apply is indicated by an **X** in the appropriate column.):

CLI	CLU	CLE Error Code	Description
X	X	100	The format of your input file header is valid, but the fleet name you have specified in the header does not match a current fleet name for your account. Correct the fleet name and resubmit the input file.
X	X	102	The format of your input file header is incorrect. Correct the file header and resubmit the input file.
X	X	105	Record counts do not balance. If you include a record count after the EOM portion of the message trailer, it must match the number of detail lines in the message. Correct the record count and resubmit the input file.
X	X	201	Detail record not accepted. The equipment initial specified in the detail line is invalid. This usually occurs when a numeric character has been placed in the equipment initial. Remember that all equipment initials must contain four bytes of alphabetic data. If your initial is shorter than four bytes, use trailing spaces to make the initial four bytes long.
X	X	202	Detail record not accepted. The equipment number specified in the detail line is invalid. This usually occurs when an alphabetic character has been placed in the equipment number field or the equipment number specified is shorter than six bytes in length. If the equipment number is shorter than six bytes, remember to use leading zeroes to make the number six bytes long.
X	X	203	Detail record not accepted. The equipment mark or number is missing. Correct the input file and resubmit it.
	X	210	The fleet status code on the detail line is invalid or missing. Correct the input file and resubmit it.
	X	212	Cannot delete the equipment specified because the equipment is not in your fleet.

25. CLM Sighting Codes

Code	Event Type	Description
A	Arrival In-Transit	Equipment has arrived at an in-transit railroad location other than the destination.
B	Bad Order	Equipment has been reported or received defective at the location shown.
C	Motor Carrier Arrival	Motor carrier arrival at initial rail facility.
D	Arrival at Destination	Arrival at rail destination.
E	Motor Carrier Departure	Motor carrier departure from final railroad facility en route to non-rail facility.
F	Flatcar Bad Order	Flatcar has been reported or received defective at location shown.
G	Bad Order Release	Equipment reported released from bad order status and returned to service.
H	Equipment Delayed or Held	Equipment delayed or held.
I	Equipment Offered in Interchange	Equipment offered to another railroad without any movement from the receiving road.
J	Junction Delivery	Delivery from one railroad to another railroad with no intervening highway move.
K	Intermodal Interchange	Final railroad delivery to another carrier mode for delivery to next railroad in route.
L	Motor Carrier Arrival	Railroad controlled arrival on motor carrier from intra-facility move.
M	Motor Carrier Move	Railroad controlled departure on motor carrier from intra-facility move.
N	No Bill	Equipment is No Bill at shown location.
P	Departure	Equipment has departed from an in-transit railroad location other than the destination.
Q	Flatcar Bad Order Release	Flatcar has been reported released from bad order status and returned to service.
R	Junction Received	Equipment received by one railroad from another with no intervening highway move.
S	Storage	Equipment is being stored.
U	Ramped	Container/trailer placed on flat car or roadrailer placed on rail.
V	Deramped	Container/trailer removed from flat car or roadrailer removed from rail.
W	Released	Equipment released by patron at date/time/location shown.
X	Pull	Car pulled from patron siding at date/time/location shown.
Y	Constructive Placement/Notify	Railroad notifies customer that railcar equipment is available for placement or that trailer or container is available for highway departure.
Z	Actual Placement	Equipment has been placed on the patron's siding.
3	ETA	Estimated time of arrival of equipment at either an interchange point, rail destination, or customer industry.
6	Lading Transfer To	Lading in the reported equipment has been transferred to another railcar, container, or trailer.
7	Lading Transfer From	Lading in the reported equipment has been transferred from another railcar, container, or trailer.

26. RailSight EDI 214 Layout

In addition to CLM output formats, RailSight can deliver equipment event messages in the ANSI standard EDI214 format. Currently, RailSight supports ANSI X12 version 4010 of these documents.

26.1 Sample EDI 214 Layout

Below is a sample EDI 214 document from RailSight. Following this is a detailed explanation of the data shown.

```
ISA*00*                *00*                *02*RRDC                *ZZ*CUSTONE                *050411*053
2*U*00401*000034506*0*P*~
GS*QM*RRDC*CUSTONE*20050411*053207*000034506*X*004010
ST*214*034506001
B10***CSXT**WY*948858
L11*948858*WY
N1*SH*SHIPPER CO*1*196574578
N4*CHICAGO*IL
N1*CN*CONSIGNEE CO*1*043242606
N4*MEMPHIS*TN
LX*1
AT7*X6*NS***20050411*0520
MS1*WAYCROSS*GA
MS2*PDRR*001106*RR
L11*182010*BM
L11*P0/561561/05*P0
L11*CSXT*SCA
L11*2499610*STR
L11*466430000*SPL
L11*13113*TT
K1*PARTICLEBOARD, WOOD,*STING OF FLAT BOARDSOR SHEETS,
SE*0016*034506001
GE*1*000034506
IEA*1*000034506
```

26.2 Detailed Description

ISA Header

ISA*00* *00* *02*RRDC *ZZ*CUSTONE *050411*053
2*U*00401*000034506*0*P*~

ISA01—Authorization Information Qualifier. Always set to '00' for 'No Authorization Information Present'.
ISA02—Authorization Information. Always blank.
ISA03—Security Information Qualifier. Always set to '00' for 'No Security Information Present'
ISA04—Always blank
ISA05—Interchange ID Qualifier. Always set to 'ZZ'.
ISA06—Interchange Sender ID. Always set to Railinc's SCAC of 'RRDC'.
ISA07—Interchange ID Qualifier. Always set to '01'.
ISA08—Interchange Receiver ID. Always set to the fleet name for which the RailSight customer is receiving the 214.
ISA09—Interchange Date. Set to the date on which Railinc transmits the 214 to the customer.
ISA10—Interchange Time. Set to the time at which Railinc transmits the 214 to the customer.
ISA 11—Repetition Separator. Always set to 'U'.
ISA12—Interchange version control number. Always set to the version of the 214 document.
ISA13—Interchange Control Number. This is a Railinc-generated control number.
ISA14—Acknowledgement Requested. Always set to '0' for 'No Acknowledgement Requested'.
ISA15—Interchange Usage Indicator. Always set to 'P' for 'Production Data'.
ISA16—Component Element Separator. Always set to tilde (~).

GS Functional Group Header

GS*QM*RRDC*CUSTONE*20050411*053207*000034506*X*004010

GS01—Functional Identifier Code. Always set to 'QM' for 'Transportation Carrier Shipment Status Message'.
GS02—Application sender's code. Always set to 'RRDCRS' for Railinc.
GS03—Application receiver's code. Always set to the fleet name for which the customer is receiving the 214.
GS04—Date. Always set to the date on which Railinc transmits the 214 to the customer.
GS05—Time. Always set to the time at which Railinc transmits the 214 to the customer.
GS06—Group control number. This is a Railinc-generated control number.
GS07—Responsible Agency Code. Always set to 'X' for ANSI X12 Committee.
GS08—Version/Release/Industry Identifier Code. Always set to the X12 version of the document transmitted.

ST Transaction Set Header

ST*214*034506001

ST01—Transaction Set Identifier Code. Always set to '214' for 'Transportation Carrier Shipment Status Message'.
ST02—Transaction Set Control Number.

B10 Beginning Segment for Transportation Carrier Shipment Status Message

B10***CSXT**WY*948858

B1001—Reference Identification. Always blank.
B1002—Shipment identifier, if available. If not available, this will be blank.
B1003—Standard carrier alpha code (SCAC) of the billing railroad.
B1004—Always blank.
B1005—Reference identification qualifier. Always 'WY' for waybill.
B1006—Reference Identification. Contains the equipment's current waybill number.

L11 Business Instructions and Reference Number (Waybill)

L11*948858*WY

L1101—Waybill Number, if available.

L1102—Contains “WY” for Waybill nNumber.

* **Note:** if the waybill number is not available, this segment will not be present in the 214.

K1 Remarks

K1*RAILSIGHT

K101—Always contains ‘RAILSIGHT’.

N1 Party Identification

N1*SH*SHIPPER CO*1*196574578

N1*CN*CONSIGNEE CO*1*043242606

N101—Entity Identifier Code. Contains ‘SH’ for Shipper, ‘CN’ for Consignee.

N102—Name. Contains the shipper name taken from the applicable waybill.

N103—Identification code qualifier. Contains “1” if the CIF number was communicated on the waybill. If the number was not communicated, this field is blank.

N104—CIF Number. Contains the customer information file number communicated on the waybill, if available.

N4 Geographic Location

N4*CHICAGO*IL

N1*MEMPHIS*TN

N401—City name.

N402—State name

LX Transaction Set Line Number

LX*1

LX01—Transaction Set Line Number. Always set to ‘1’.

AT7 Shipment Status Details

AT7*X6*NS***20050411*0520

AT701—Shipment Status Indicator. Contains a shipment status code.

AT702—Shipment Status Reason Indicator.

AT705—Date. Contains the date of the movement event.

AT706—Time. Contains the time of the movement event.

MS1 Equipment, Shipment, or Real Property Location

MS1*WAYCROSS*GA

MS101—Equipment Location City. Contains the event location city.

MS102—Equipment Location State. Contains the event location state.

MS2 Equipment or Container Owner and Type

MS2*PDRR*001106*RR

MS201—Equipment Initial. Contains the alphabetic initial identifier of the equipment.

MS202—Equipment Number. Contains the numeric identifier of the equipment.

MS203—Equipment Description Code. Always contains 'RR'.

L11 Business Instructions and Reference Number (there can be several instances of this)

L11*182010*BM

L11*PO/561561/05*PO

L11*CSXT*SCA

L11*2499610*STR

L11*466430000*SPL

L11*13113*TT

L1101—Reference Identification Qualifier. Contains the bill of lading number of the shipment. If L1102 = 'BM'.

Contains the PO number if L1102 = 'PO'. Contains the SCAC of the reporting road if L1102 = 'SCA'.

Contains the STCC associated with the shipment if L1102 = 'STR'. Contains the SPLC associated with the event report if L1102 = 'SPL'. Contains the FSAC associated with the event if L1102 = 'TT'.

L1102—Reference Identification. Always contains one of the values mentioned above.

K1 Remarks

K1*PARTICLEBOARD, WOOD,*STING OF FLAT BOARDSOR SHEETS,

K101—Free form information. Contains first 30 characters of description associated with shipment STCC.

K102—Free form information. Contains the next 30 characters of description associated with shipment STCC.

SE Transaction Set Trailer

SE*0016*034506001

SE01—Number of Included Segments. Calculated.

SE02—Transaction Set Control Number..

GE Functional Group Trailer

GE*1*000034506

GE01—Number of Transaction Sets Included. Always set to '1'.

GE02—Group Control Number. Number defined by Railinc.

IEA Interchange Control Trailer

IEA*1*000034506

IEA01—Number of Included Functional Groups. Always set to '1'.

IEA02—Interchange Control Number. Number defined by Railinc.

The table below describes event and shipment status codes used in the AT7 segment of the 214 messages.

Note: By default, RailSight uses a combination of carriage return and line feed characters (hex 0A0D) as the segment terminator.

Rail Sighting Code	Description	AT701	Description	AT702	Description
A	In-transit arrival	X6	En route to delivery location	NS	Normal Status
B	Bad Order	X6	En route to delivery location	AI	Mechanical breakdown
C	Motor Carrier Arrival	X4	Arrival at terminal location	NS	Normal Status
D	Arrival at Destination	AR	Arrival at destination ramp	NS	Normal Status
E	Motor Carrier Departure	CD	Carrier departed delivery location	NS	Normal Status
F	Flat car bad order	X6	En route to delivery location	AI	Mechanical breakdown
G	Bad order release	X6	En route to delivery location	BG	Other
H	Equipment held or delayed	SD	Shipment delayed	BG	Other
I	Equipment offered in interchange	X6	En route to delivery location	NS	Normal Status
J	Junction delivery	J1	Delivered to connecting line	NS	Normal Status
K	Intermodal Interchange	OA	Outgate	NS	Normal Status
L	Motor carrier arrival	X6	En route to delivery location	NS	Normal Status
M	Motor carrier move	X6	En route to delivery location	NS	Normal Status
N	No bill	X6	En route to delivery location	BN	Failed to release billing
P	In-transit departure	X6	En route to delivery location	NS	Normal Status
Q	Flatcar bad order release	X6	En route to delivery location	BG	Other
R	Junction received	R1	Received from prior carrier	NS	Normal Status
S	Storage	BC	Storage in transit	BG	Other
U	Ramped	CP	Completed loaded at pick-up location	NS	Normal Status
V	Deramped	D1	Completed unloading at delivery location	NS	Normal Status
W	Released	X6	En route to delivery location	NS	Normal Status
X	Pull	AF	Carrier departed pickup location with equipment	NS	Normal Status
Y	Constructive Placement/Notify	X1	Arrived at delivery location	NS	Normal Status
Z	Actual Placement	X1	Arrived at delivery location	NS	Normal Status
3	ETA	AG	Estimated delivery	NS	Normal Status
6	Lading transfer to	X6	En route to delivery location	NS	Normal Status
7	Lading transfer from	X6	En route to delivery location	NS	Normal Status
9	Release from hold or misc	X6	En route to delivery location	BG	Other

27. RailSight EDI 322 Layout

In addition to CLM output formats, RailSight can deliver equipment event messages in the ANSI standard EDI322 format. Currently, RailSight supports ANSI X12 version 4010 of these documents.

27.1 EDI 322 Layout

Below is a sample EDI 322 document from RailSight. Following this is a detailed explanation of the data shown.

```
ISA*00*                *00*                *02*BNSF                *01*FLEET1
*050124*0357*U*00401*001079479*0*P*~
GS*S0*BNSF*FLEET1*20050124*035700*001079479*X*004010
ST*322*1
Q5*P*20050124*024700*CT**SLATON*TX
N7*ABCD*123456*023077*N*****L
W2*ABCD*123456**CH*L
NA***DTTX*062290*F
R4*5*SL*677173000*SLATON**SLATON
R4*7*SL*797000000*PHOENIX**PHOENIX
N9*7W*SHOULA**20050124*024700*CT
N9*WY*638317**20050119
N9*BM*4200512577                **20050119
SE*0011*1
GE*1*001079479
IEA*1*001079479
```

27.2 Detailed Description

ISA Header

ISA*00* *00* *02*BNSF *01*FLEET1
*050124*0357*U*00401*001079479*0*P*~

ISA01—Authorization Information Qualifier. Always set to '00' for 'No Authorization Information Present'.
ISA02—Authorization Information. Always blank.
ISA03—Security Information Qualifier. Always set to '00' for 'No Security Information Present'
ISA04—Always blank
ISA05—Interchange ID Qualifier. Always set to '02'.
ISA06—Interchange Sender ID. Always set to the SCAC of the road reporting the event.
ISA07—Interchange ID Qualifier. Always set to '01'.
ISA08—Interchange Receiver ID. Always set to the customer fleet name for which the RailSight application is generating the 322.
ISA09—Interchange Date. Set to the date on which Railinc transmits the 322 to the customer.
ISA10—Interchange Time. Set to the time at which Railinc transmits the 322 to the customer.
ISA 11—Repetition Separator. Always set to 'U'.
ISA12—Interchange version control number. Always set to the version of the 322 document.
ISA13—Interchange Control Number. This is a Railinc-generated control number.
ISA14—Acknowledgement Requested. Always set to '0' for 'No Acknowledgement Requested'.
ISA15—Interchange Usage Indicator. Always set to 'P' for 'Production Data'.
ISA16—Component Element Separator. Always set to tilde (~).

GS Functional Group Header

GS*SO*BNSF*FLEET1*20050124*035700*001079479*X*004010

GS01—Functional Identifier Code. Always set to 'SO' for 'Ocean Shipment Information'.
GS02—Application sender's code. Always set to the SCAC of the railroad that reported the event.
GS03—Application receiver's code. Always set to the fleet name for which the customer is receiving the 322.
GS04—Date. Always set to the date on which Railinc transmits the 322 to the customer.
GS05—Time. Always set to the time at which Railinc transmits the 322 to the customer.
GS06—Group control number. This is a Railinc-generated control number.
GS07—Responsible Agency Code. Always set to 'X' for ANSI X12 Committee.
GS08—Version/Release/Industry Identifier Code. Always set to the X12 version of the document transmitted.

ST Transaction Set Header

ST*322*1

ST01—Transaction Set Identifier Code. Always set to '322' for 'Terminal Operations and Intermodal Ramp Activity'.
ST02—Transaction Set Control Number. Always set to '1'.

Q5 Status Details

Q5*P*20050124*024700*CT**SLATON*TX

Q501—Shipment Status Code. Set to the appropriate shipment status code as defined in ANSI X12 standards.

Q502—Date. Set to the event date as reported by the railroad.

Q503—Time. Set to the event time as reported by the railroad.

Q504—Time Code. Set to the code identifying the time zone in which the event occurred.

Q505—Status Reason Code. Always blank.

Q506—City Name. Set to the name of the location at which the event occurred.

Q507—State or Province Code. Set to the postal abbreviation for the state or province in which the event occurred.

N7 Equipment Details

N7*ABCD*123456*023077*N*****L

N701—Equipment Initial. Set to the initial of the equipment for which the event is being reported.

N702—Equipment Number. Set to the number of the equipment for which the event is being reported.

N703—Weight. Set to the weight value indicated by the weight qualifier in N704.

N704—Weight Qualifier Code. Set to the appropriate weight qualifier code as defined in ANSI X12 standards.

N717—Weight Unit Code. Always set to 'L' for pounds.

W2 Equipment Identification

W2*ABCD*123456**CH*L

W201—Equipment Initial. Set to the initial of the equipment for which the event is being reported.

W202—Equipment Number. Set to the number of the equipment for which the event is being reported.

W203—Commodity Code. Always blank.

W204—Equipment Description Code. Set to the appropriate equipment description code as defined in ANSI X12 standards.

W205—Equipment Status Code. Set to either 'L' for Loaded or 'E' for Empty as appropriate.

NA Cross Reference Equipment

NA***DTTX*062290*F

NA03—Equipment Initial. Set to the initial of the equipment that is associated with the container (flatcar, etc.)

NA04—Equipment Number. Set to the number of the equipment that is associated with the container (flatcar, etc.)

NA05—Cross Reference Type Code. Set to the appropriate equipment description code as defined in ANSI X12 standards. (Usually set to 'F' for flatcar).

R4 Port or Terminal

R4*5*SL*677173000*SLATON**SLATON

R401—Port or Terminal Function Code. Set to the appropriate function code as defined in ANSI X12 standards.

R402—Location Qualifier. Always set to 'SL' for Standard Point Location Code (SPLC).

R403—Location Code. Set to SPLC where event occurred.

R404—Port Name. Set to sighting city name corresponding to SPLC given in R403.

R405—Country Code. Always blank.

R406—Terminal Name. Set to sighting city name corresponding to SPLC given in R403.

N9 Extended Reference Information

N9*7W*SHOULA**20050124*024700*CT

N901—Reference Identification Qualifier. Set to the appropriate qualifier code as defined in ANSI X12 standards.

N902—Reference Identification. Set to the appropriate identifier as specified by the qualifier given in N901.

N904—Date. Contains the date of the event referenced, if appropriate.

N905—Time. Contains the time of the event referenced, if appropriate.

N906—Time Code. Contains a code denoting the time zone of the event referenced, if appropriate.

SE Transaction Set Trailer

SE*0011*1

SE01—Number of Included Segments. Calculated.

SE02—Transaction Set Control Number. Always set to '0001'.

GE Functional Group Trailer

GE*1*001079479

GE01—Number of Transaction Sets Included. Always set to '1'.

GE02—Group Control Number. Number defined by Railinc.

IEA Interchange Control Trailer

IEA*1*001079479

IEA01—Number of Included Functional Groups. Always set to '1'.

IEA02—Interchange Control Number. Number defined by Railinc.

27.3 Rail Event Mapping in RailSight EDI 322 Output

The following table details how rail events are mapped to the status codes found in the Q501 data elements in EDI 322 messages. The information in the leftmost column describes the numeric event code, which is a rail industry standard describing specific events.

Event Type Code	Description	CLM Sighting Code	EDI 322 Status Code
4040, 4041, 4042, 4043, 4045, 4046, 4049	Interchange delivery	J	J
4048, 4050, 4051, 4053, 4055	Interchange receipt	R	R
6001	Release Load	W	W
6002	Pull from patron siding	X	X
6005	Arrival at final destination	D	A
6006	Arrival in transit	A	AR
6007	Placement actual	Z	Z
6009	Placement constructive	Y	NT
6010	Bad Order w/hours to repair	B	B
6011	Bad Order repair > 20 hours	B	B
6013	Bad Order repair < 20 hours	B	B
6014	Bad Order hours to repair unknown	B	B
6015	Unit released from bad order	G	G
6016	Departed from location	P	P
6024	Held for billing or disposition	H	SD
6026	Unit held – no billing	N	N
6030	ETA	3	E
6036	Arrival at initial rail facility	C	I
6037	Departure enroute to non-rail facility	E	OA
6038	Intermodal ingate	K	I
6039	Intermodal outgate	K	OA
6044	Notified destination party		NT
6064	TOFC/COFC onto rail-controlled truck	M	M
6065	Rail controlled arrival on motor	L	T
6067	Ramped	U	AL
6068	Deramped	V	UR

APPENDIX A – RailSight CLM Formats

CLM Format - A - Location with SPLC.....	73
CLM Format - B - Train	74
CLM Format - BLANK - Location.....	75
CLM Format - C - Train with SPLC	76
CLM Format - D - Destination	77
CLM Format - E - Destination with SPLC	78
CLM Format - F - Flatcar	79
CLM Format - G - Flatcar with SPLC	80
CLM Format - H - ETA.....	81
CLM Format - I - ETA with SPLC	82
CLM Format - K - Destination with Four-Digit Event Code.....	83
CLM Format - L - ETA with Numeric Event Type Code (Derived from Y).....	84
CLM Format - M - Motor Carrier Movement.....	85
CLM Format - T - Text.....	86
CLM Format - W - Scale Weights	87
CLM Format - Y - Custom ETA with Years	88
CLM Format - Z - Text with Destination City and State.....	89

CLM Format - A - Location with SPLC

Field	Field in Trace	Position	Length	Example Value
Equipment Initial	Init	1	4	ABCD
Equipment Number	Num	5	6	645812
Sighting SPLC	Location SPLC	11	9	81280000
SPACE		20	3	
Sighting Event Code	EV	23	1	R
Sighting Day	DD	24	2	23
Sighting Hour	HH	26	2	22
Load/Empty Status	LE	28	1	L or E
Reporting Railroad SCAC	RR SCAC	29	4	ABCD

Total with spaces = 32 characters possible

"A" FORMAT SAMPLE TRACE

Equipment	Location	E	L	RR
Init Num	SPLC	VDDHH	ESCAC	
ABCD64581281280000		R2322	EABCD	

CLM Format - B - Train

Field Description	Field in Trace	Position	Length	Example Value
Equipment Initial	Init	1	4	ABCD
Equipment Number	Num	5	6	645812
Sighting City	Location City	11	9	CICERO
SPACE		20	1	
Sighting State	ST	21	2	IL
Sighting Event Code	EV	23	1	R
Sighting Day	DD	24	2	23
Sighting Hour	HH	26	2	22
Load/Empty Status	LE	28	1	L or E
Train ID	Train ID	29	6	NS
Reporting Railroad SCAC	RR SCAC	35	4	ABCD

Total with spaces = 38 characters possible

"B" FORMAT SAMPLE TRACE

Equipment	Location	S E	LTrain	RR
InitNum	City	T VDDHHE	ID	SCAC
ABCD645812	CICERO	ILR2322	ENS	ABCD

CLM Format - BLANK - Location

Field	Field in Trace	Position	Length	Example Value
Equipment Initial	Init	1	4	ABCD
Equipment Number	Num	5	6	645812
Sighting City	Location City	11	9	CICERO
SPACE		20	1	
Sighting State	ST	21	2	IL
Sighting Event Code	EV	23	1	R
Sighting Day	DD	24	2	23
Sighting Hour	HH	26	2	22
Load/Empty Status	LE	28	1	L or E
Reporting Railroad SCAC	RR SCAC	29	4	ABCD

Total with spaces = 32 characters possible

"Blank" FORMAT SAMPLE TRACE

```

Equipment Location  S E    L RR
InitNum   City      T VDDHHESCAC
ABCD645812CICERO   ILR2322EABCD

```

CLM Format - C - Train with SPLC

Field	Field in Trace	Position	Length	Example Value
Equipment Initial	Init	1	4	ABCD
Equipment Number	Num	5	6	645812
Sighting SPLC	Location SPLC	11	9	81280000
SPACE		20	3	
Sighting Event Code	EV	23	1	R
Sighting Day	DD	24	2	23
Sighting Hour	HH	26	2	22
Load/Empty Status	LE	28	1	L or E
Train ID	Train ID	29	6	NS
Reporting Railroad SCAC	RR SCAC	34	4	ABCD

Total with spaces = 38 characters possible

"C" FORMAT SAMPLE TRACE

Equipment Location	E	LTrain	RR
InitNum SPLC	VDDHHE	ID	SCAC
ABCD64581281280000	R2322ENS		ABCD

CLM Format - D - Destination

Field	Field in Trace	Position	Length	Example Value
Equipment Initial	Init	1	4	ABCD
SPACE		5	1	
Equipment Number	Number	6	6	645812
SPACE		12	1	
Sighting City	Location City	13	9	CICERO
SPACE		22	1	
Sighting State	ST	23	2	IL
SPACE		25	1	
Sighting Month	Mo	26	2	02
SPACE		28	1	
Sighting Day	DD	29	2	23
SPACE		31	1	
Sighting Hour	HH	32	2	22
Sighting Minute	MM	34	2	47
SPACE		36	1	
Load/Empty Status	LE	37	1	L or E
SPACE		38	1	
Sighting Event Code	EV	39	1	R
SPACE		40	3	
Train ID	Train ID	43	6	NS
SPACE		49	1	
Destination City	Dest City	50	9	Franconia
SPACE		59	1	
Destination State	ST	60	2	AZ
SPACE		61	1	
Reporting Railroad SCAC	RR SCAC	62	4	ABCD

Total with spaces = 66 characters possible

"D" FORMAT SAMPLE TRACE

Equipment	Location	S		L E	Train	Dest	S	RR
Init Number	City	T Mo DD HHMM	E V	ID	City	T	SCAC	
ABCD 645812	CICERO	IL 02 23 2247	E R	NS	Franconia	AZ	ABCD	

CLM Format - E - Destination with SPLC

Field	Field in Trace	Position	Length	Example Value
Equipment Initial	Init	1	4	ABCD
Equipment Number	Num	5	6	645812
Sighting SPLC	Location SPLC	11	9	81280000
SPACE		20	3	
Sighting Month	Mo	23	2	02
Sighting Day	DD	25	2	23
Sighting Hour	HH	27	2	22
Sighting Minute	MM	29	2	47
Load/Empty Status	LE	31	1	L or E
Sighting Event Code	EV	32	1	R
SPACE		33	2	
Train ID	Train ID	35	6	NS
Destination SPLC	Destination SPLC	41	9	883628000
SPACE		50	3	
Reporting Railroad SCAC	RR SCAC	53	4	ABCD

Total with spaces = 56 characters possible

"E" FORMAT SAMPLE TRACE

Equipment	Location	LE	Train	Destination	RR
InitNum	SPLC	MoDDHHMMEV	ID	SPLC	SCAC
ABCD645812381280000		02232247ER	NS	883628000	ABCD

CLM Format - F - Flatcar

Field	Field in Trace	Position	Length	Example Value
Equipment Initial	Init	1	4	ABCD
SPACE		5	1	
Equipment Number	Number	6	6	645812
SPACE		12	1	
Sighting City	Location City	13	9	CICERO
SPACE		22	1	
Sighting State	ST	23	2	IL
SPACE		25	1	
Sighting Month	Mo	26	2	02
SPACE		28	1	
Sighting Day	DD	29	2	23
Time Zone	TZ	31	1	Blank
Sighting Hour	HH	32	2	22
Sighting Minute	MM	34	2	47
SPACE		36	1	
Load/Empty Status	LE	37	1	L or E
SPACE		38	1	
Sighting Event Code	EV	39	1	R
SPACE		40	3	
Train ID	Train ID	43	6	NS
SPACE		49	1	
Destination City	Dest City	50	9	Franconia
SPACE		59	1	
Destination State	ST	60	2	AZ
SPACE		62	1	
Flatcar Initial	Init	63	4	ABCD
Flatcar Number	Num	67	6	123456
SPACE		73	1	
Reporting Railroad SCAC	RR SCAC	74	4	ABCD

Total with spaces = 77 characters possible

"F" FORMAT SAMPLE TRACE

Equipment	Location	T	L	E	Train	Dest	Flatcar ID	RR
Init	Number	City	ST	Mo	DDZHHMM	E	V	ID
ABCD	645812	CICERO	IL	02	23	2247	E	R
								NS
								Franconia
								AZ
								ABCD123456
								ABCD

CLM Format - G - Flatcar with SPLC

Field	Field in Trace	Position	Length	Example Value
Equipment Initial	Init	1	4	ABCD
Equipment Number	Num	5	6	645812
Sighting SPLC	Location SPLC	11	9	381280000
SPACE		20	3	
Sighting Month	Mo	23	2	02
Sighting Day	DD	25	2	23
Sighting Hour	HH	27	2	22
Sighting Minute	MM	29	2	47
Load/Empty Status	LE	31	1	L or E
Sighting Event Code	EV	32	1	R
SPACE		33	2	
Train ID	Train ID	35	6	NS
Destination SPLC	Destination SPLC	41	9	883628000
SPACE		50	3	
Flatcar Initial	Init	53	4	ABCD
Flatcar Number	Num	57	6	123456
Reporting Railroad SCAC	RR SCAC	63	4	ABCD

Total with spaces = 66 characters possible

"G" FORMAT SAMPLE TRACE

Equipment	Location	LE	Train	Destination	FlatcarID	RR
InitNum	SPLC	MoDDHHMMEV	ID	SPLC	InitNum	SCAC
ABCD645812381280000	02232247ER	NS	883628000	ABCD123456ABCD		

CLM Format - H - ETA

Field	Field in Trace	Position	Length	Example Value
Equipment Initial	Init	1	4	ABCD
SPACE		5	1	
Equipment Number	Number	6	6	645812
SPACE		12	1	
Sighting City	Location City	13	9	CICERO
Sighting State	ST	22	2	IL
Sighting Month	Mo	24	2	02
Sighting Day	DD	26	2	23
Sighting Hour	HH	28	2	22
Sighting Minute	MM	30	2	47
Load/Empty Status	LE	32	1	L or E
Sighting Event Code	EV	33	1	R
Train ID	Train ID	34	6	NS
Destination City	Dest City	40	9	VERNON
Destination State	ST	49	2	CA
Reporting Railroad SCAC	RR SCAC	51	4	ABCD
ETA Destination City	ETA City	55	9	FRANCONIA
ETA Destination State	St	64	2	CA
SPACE		66	1	
ETA Destination Event Code	EV	67	1	J
SPACE		68	1	
ETA Destination Month	MM	69	2	02
ETA Destination Day	DD	71	2	23
ETA Destination Hour	HH	73	2	22

Total with spaces = 74 characters possible

"H" FORMAT SAMPLE TRACE

Equipment	Location	LETrain	Dest	RR ETA	E ETA
Init Number	City	STMoDDHHMMEVID	City	STSCACCity	St V MMDDHH
ABCD 645812	CICERO	IL02232247ERNS	VERNON	CAABCDFRANCONIACA	J 022322

CLM Format - I - ETA with SPLC

Field	Field in Trace	Position	Length	Example Value
Equipment Initial	Init	1	4	ABCD
Equipment Number	Num	5	6	645812
Sighting SPLC	Location SPLC	10	9	381280000
Sighting Month	Mo	20	2	02
Sighting Day	DD	22	2	23
Sighting Hour	HH	24	2	22
Sighting Minute	MM	26	2	47
Load/Empty Status	LE	28	1	L or E
Sighting Event Code	EV	29	1	R
Train ID	Train ID	30	6	NS
Destination SPLC	Dest SPLC	36	9	883628000
Reporting Railroad SCAC	RR SCAC	45	4	ABCD
ETA Destination SPLC	ETA SPLC	49	9	123456789
ETA Destination Event Code	EV	58	1	J
ETA Destination Month	MM	59	2	02
ETA Destination Day	DD	61	2	23
ETA Destination Hour	HH	63	2	22

Total with spaces = 64 characters possible

"I" FORMAT SAMPLE TRACE

Equipment	Location	LE	Train	Dest	RR	ETA	E	ETA
InitNum	SPLC	Mo	DD	HH	MM	EV	ID	SPLC
ABCD645812381280000002232247	ERNS	883628000	ABCD123456789	J022322				

CLM Format - K - Destination with Four-Digit Event Code

Field	Field in Trace	Position	Length	Example Value
Equipment Initial	Init	1	4	ABCD
SPACE		5	1	
Equipment Number	Number	6	6	645812
SPACE		12	1	
Sighting City	Location City	13	9	CICERO
SPACE		22	1	
Sighting State	ST	23	2	IL
SPACE		25	1	
Sighting Month	Mo	26	2	02
SPACE		28	1	
Sighting Day	DD	29	2	23
SPACE		31	1	
Sighting Hour	HH	32	2	22
Sighting Minute	MM	34	2	47
SPACE		36	1	
Load/Empty Status	LE	37	1	L or E
SPACE		38	1	
Sighting Event Code	EV	39	1	R
SPACE		40	3	
Train ID	Train ID	43	6	NS
SPACE		49	1	
Destination City	Dest City	50	9	Franconia
SPACE		59	1	
Destination State	ST	60	2	AZ
SPACE		61	1	
Reporting Railroad SCAC	RR SCAC	62	4	ABCD
SPACE		61	1	
Event Type Code	Ev Code	62	4	ABCD

Total with spaces = 66 characters possible

"K" FORMAT SAMPLE TRACE

Equipment	Location	S				L E	Train	Dest	S	RR	Ev
Init Number	City	T	Mo	DD	HHMM	E V	ID	City	T	SCAC	Code
ABCD 645812	CICERO	IL	02	23	2247	E R	NS	Franconia	AZ	ABCD	6004

* Format only available with Railsight service from Railinc. For more information, please call 877-270-7245.

CLM Format - L - ETA with Numeric Event Type Code (Derived from Y)

Field	Field in Trace	Position	Length	Example Value
Record Type		1	1	1
Equipment Initial	Init	2	4	ABCD
Equipment Number	Num	6	6	123456
Sighting Century	CC	12	2	20
Sighting Year	YY	14	2	02
Sighting Month	MM	16	2	3
Sighting Day	DD	18	2	4
Sighting Hour	HH	20	2	10
Sighting Minute	MM	22	2	49
Sighting Event Code	EV	24	1	P
Sighting City	Location City	27	9	CICERO
Sighting State	ST	36	2	IL
Sighting SPLC	Location SPLC	38	9	793195000
Load/Empty Status	LE	47	1	L or E
Train ID	Train ID	48	6	NS
Sent Century	CC	54	2	20
Sent Year	YY	56	2	2
Sent Month	MM	58	2	3
Sent Day	DD	60	2	4
Sent Hour	HH	62	2	13
Header Railroad SCAC	HR SCAC	64	4	ABCD
Reporting Railroad SCAC	RR SCAC	68	4	ABCD
AEI Reid Indicator	AE	72	1	1
CLM Source	CS	73	1	1
Destination City	Dest City	74	9	Vernon
Destination State	ST	83	2	CA
Destination SPLC	Dest SPLC	85	9	883628000
ETA Destination City	ETA City	94	9	Vernon
ETA Destination State	ST	103	2	CA
ETA Destination SPLC	ETA SPLC	105	9	883628000
ETA Destination Event Code	EV	114	1	J
ETA Century	CC	117	2	20
ETA Year	YY	119	2	2
ETA Month	MM	121	2	3
ETA Day	DD	123	2	8
ETA Hour	HH	125	2	8
Event Type Code	Ev Code	127	4	4040

"L" FORMAT SAMPLE TRACE

```

Equipment      E Location S Location LTrain  Sent  HRR  RR ACDest  S  Dest  ETA  S ETA  E  ETA  EV
InitNum  CCYYMDDHHMMV  City  T SPLC  E ID  CCYYMDDHHSCACSCACESCITY  T  SPLC  City  T SPLC  V  CCYYMDDHHCode
1ABCD645812200203041049P  FRANCONIAAZ793195000LHKCKBA2002030413RRDCBNSF11VERNON  CA883628000VERNON  CA883628000J  20020308084040

```

* Format only available with Railsight service from Railinc. For more information, please call 877-270-7245.

CLM Format - M - Motor Carrier Movement

Field	Field in Trace	Position	Length	Example Value
Equipment Initial	Init	1	4	ABCD
Equipment Number	Num	5	6	123456
Sighting Year	YY	11	2	05
Sighting Month	MM	13	2	04
Sighting Day	DD	15	2	26
Sighting Hour	HH	17	2	11
Sighting Minute	MM	19	2	49
Sighting Event Code	EV	21	1	A
Sighting SPLC	SPLC	24	9	793195000
Load/Empty Status	LE	33	1	L or E
Train ID	Train ID	34	6	NS3221
Destination SPLC	Dest SPLC	40	9	883628000
Posting SCAC	Post SCAC	49	4	ICE
Header SCAC	Head SCAC	53	4	RRDC
Send Year	Send YY	57	2	05
Send Month	MM	59	2	04
Send Day	DD	61	2	26
Send Hour	HH	63	2	15
ETA Destination	ETA Dest	68	9	RAWLINS
ETA State	ST	78	2	WY
ETA Event	EV	81	1	Z
ETA Century	CC	83	2	20
ETA Year	YY	85	2	05
ETA Month	MM	87	2	05
ETA Day	DD	89	2	03
ETA Hour	HH	91	2	15
ETA SPLC	SPLC	94	9	737566000

"M" FORMAT SAMPLE TRACE

```

Equipment      E  SPLC    L Train Dest  PostHead Sent  ETA      E  ETA      ETA
InitNum  YYMMDDHHMMV  E ID    SPLC    SCACSCACYYMMDDHH  Dest  ST V CCYYMMDDHH SPLC
ACFX0945580504261115A  5384600000ENS322  7375660000ICE  RRDC05042615M  RAWLINS  WY Z 2005050315  737566000

```

CLM Format - T - Text

Field	Field in Trace	Position	Length	Example Value
Equipment Initial	Init	1	4	ABCD
SPACE		5	1	
Equipment Number	Number	6	6	645812
SPACE		12	1	
Sighting City	Location	13	9	CICERO
SPACE		22	6	
Sighting Province	Pr St	28	2	IL
SPACE		30	1	
Sighting Month	Mo	31	2	02
SPACE		33	1	
Sighting Day	DD	34	2	23
SPACE		36	1	
Sighting Hour	HH	37	2	22
Sighting Minute	MM	39	2	47
SPACE		41	1	
Load/Empty Status	LE	42	1	L or E
SPACE		43	1	
Sighting Event	Event	44	18	Junction Received
Train ID, Bad Order Code or Hold Code	Train/BO/HLD	62	6	NS or B or H
SPACE		68	3	
Destination City	Destination	71	9	Franconia
SPACE		80	6	
Destination State	PR St	86	2	AZ
SPACE		88	1	
Reporting Railroad SCAC	RR SCAC	89	4	ABCD

Total with spaces = 92 characters possible

"Text" FORMAT SAMPLE TRACE

Equipment	Location	Pr	Date	Time	L	Train/	Destination	Pr	RR
Init	Number	St	MM	DD	HHMM	E	Event	St	SCAC
ABCD	645812	CICERO	IL	02	23	2247	E Junction Received	NS	Franconia
								AZ	BNSF

CLM Format - W - Scale Weights

Field	Field in Trace	Position	Length	Example Value
Equipment Initial	Init	1	4	ABCD
Equipment Number	Number	5	6	645812
Gross Weight	Gross Weight	11	6	114069
Tare Weight	Tare Weight	17	6	285768
Weight Code	WC	23	1	8 (initial weight) or 9 (re-weight)
Net Weight	Net Weight	24	6	854930
Weight Month	MM	30	2	22
Weight Day	DD	32	2	23
Weight Location City	Weight City	34	9	VERNON
SPACE		43	10	
Weight State	St	53	2	CA
Waybill Year	YY	55	2	20
Waybill Month	MM	57	2	02
Waybill Day	DD	59	2	23
Allowance	Allow	61	5	546
Weight Indicator	WI	66	1	K (kilos) or L (pounds)

Total with spaces = 66 characters possible

"W" FORMAT SAMPLE TRACE

Equipment	Gross	Tare	WNet	WghtWeigh	Location	Waybll	W
InitNumber	Weight	Weight	CWeight	MMDD	City	StYYMMDD	AllowI
ABCD645812	11	4069	285768	9854930	2223	VERNON	CA200223546 K

CLM Format - Y - Custom ETA with Years

Field	Field in Trace	Position	Length	Example Value
Record Type		1	1	1
Equipment Initial	Init	2	4	ABCD
Equipment Number	Num	6	6	645812
Sighting Century	CC	12	2	20
Sighting Year	YY	14	2	02
Sighting Month	MM	16	2	03
Sighting Day	DD	18	2	04
Sighting Hour	HH	20	2	10
Sighting Minute	MM	22	2	49
Sighting Event Code	EV	24	1	P
SPACE		25	2	
Sighting City	Location City	27	9	Franconia
Sighting State	ST	36	2	AZ
Sighting SPLC	Location SPLC	38	9	793195000
Load/Empty Status	LE	47	1	L or E
Train ID, Bad Order Code or Hold Code	Train ID	48	6	HKCKBA or B or H
Sent Century	CC	54	2	20
Sent Year	YY	56	2	02
Sent Month	MM	58	2	03
Sent Day	DD	60	2	04
Sent Hour	HH	62	2	13
Header Railroad SCAC	HRR SCAC	64	4	ABCD
Reporting Railroad SCAC	RR SCAC	68	4	ABCD
AEI Reid Indicator	AE	72	1	1
CLM Source	CS	73	1	1
Destination City	Dest City	74	9	Vernon
Destination State	ST	83	2	CA
Destination SPLC	Dest SPLC	85	9	883628000
ETA Destination City	ETA City	94	9	Vernon
ETA Destination State	ST	103	2	CA
ETA Destination SPLC	ETA SPLC	105	9	883628000
ETA Destination Event Code	EV	114	1	J
SPACE		115	2	
ETA Century	CC	117	2	20
ETA Year	YY	119	2	02
ETA Month	MM	121	2	03
ETA Day	DD	123	2	08
ETA Hour	HH	126	2	08

Total with spaces = 125 characters possible

"Y" FORMAT SAMPLE TRACE

Equipment	E	Location	S	Location	L	Train	Sent	HRR	RR	AC	Dest	S	Dest	ETA	S	ETA	E	ETA
InitNum	CCYYMMDDHHMMV	City	T	SPLC	E	ID	CCYYMMDDHHHSCACSCACESC	City				T	SPLC	City	T	SPLC	V	CCYYMMDDHH
1ABCD645812200203041049P		FRANCONIA	A	Z	793195000	L	HKCKBA2002030413RRDCBNSF11	VERNON				CA	883628000	VERNON	CA	883628000	J	2002030808

CLM Format - Z - Text with Destination City and State

Field	Field in Trace	Position	Length	Example Value
Equipment Initial	INIT	1	4	ABCD
Equipment Number	NUMBER	5	6	645812
Sighting Year	YR	11	2	96
Sighting Month	MO	13	2	06
Sighting Day	DA	15	2	13
Sighting Hour	HR	17	2	15
Sighting Minute	MI	19	2	17
Sighting Event Code	S/C	21	1	S
SPACE		22	2	
Sighting Location	LOCATION CITY	24	9	Deerfield
SPACE		33	1	
Sighting State	ST	34	2	IL
Load/Empty Status	LE	36	1	L or E
Train ID	TRN/JUNCTION	37	6	139440
SPACE		42	8	
Reporting Railroad SCAC	ROAD	51	4	ABCD
Destination City	DESTINATION CITY	56	9	Vernon
SPACE		64	1	
Destination State	ST	65	2	CA
SPACE		67	1	

Total with spaces = 67 characters possible

"Z" FORMAT SAMPLE TRACE

EQUIPID	SIGHTDATE	S	LOCATION	L TRN/	ROADDESTINATION
INITNUMBER	YR	MODA	CITY	STEJUNCTION	SCACCITY ST
ABCD6458129606131517S			Deerfield	ILE139440	ABCDVernon CA

Glossary

CLM—Car location message.

CLX—CLX output format provides detail information without headers and trailers on the output file.

CSV—Comma-separated values. CSV output format provides detail lines separated by commas. Header and trailer lines are suppressed.

EDI 214—Equipment event messages in the ANSI standard EDI214 format (ANSI X12 version 4010).

EDI 322—Equipment event messages in the ANSI standard EDI322 format (ANSI X12 version 4010).

Fleet—An organizational grouping of equipment units. These can be of the same type, or same ownership, or specific usage, etc., defined by the RailSight user.

FTP—File Transfer Protocol.

FTP mailbox—Location where users place input files and retrieve output.

Letter of Authorization (LOA)—Need definition.

MQ—WebSphere MQ (Message Queue). IBM standard for program-to-program messaging across multiple platforms.

NITL—National Industrial Transportation League.

Party-to-waybill security—Checking for authorization of one company to view another's waybills prior to transmittal. Verified by presence of unexpired letter of authorization.

Pull—FTP process (generally using a GET command or equivalent).

Push—FTP process (generally using a PUT command or equivalent).

SPLC—Standard point location code.

Waybill—EDI 417 messaging that documents equipment travel between two points. Message data includes equipment initials, numbers, STCC code for load, SPLCs, junctions, various timestamps, revenue, etc. Because the data is confidential, a high level of security is used prior to transmitting waybills to requesters.

Index

- 417 demand trace
 - dated input file sample, 57
 - input file sample, 57
 - overview, 57
- AT7
 - codes, 66
 - shipment status details, 64
- B10 beginning segment for transportation carrier shipment status message, 63
- BX general shipment information
 - EDI 417, 53
- BX rail shipment information
 - EDI 417, 54
- car location inquiry. *See* CLI
- car location inquiry (CLI)
 - input example, 13
 - input trailer example, 13
- car location message. *See* CLM
- CLE
 - error codes, 60
 - message format, 59
 - message format example, 60
- CLI
 - input detail, 13
 - input detail example, 13
 - input header, 11
 - input sample, 13
 - input trailer, 13
 - output detail, 15
 - output header, 14
 - output header example, 14
 - output sample, 14
 - output trailer, 15
 - output trailer example, 15
 - overview, 11
 - start-of-trip reporting, 16
 - variable date reporting, 16
- CLL
 - input file sample, 34
 - input header, 33
 - input header example, 34
 - input trailer, 34
 - input trailer example, 34
 - output detail, 36
 - output file sample, 34
 - output header, 35
 - output header example, 35, 36
 - output trailer, 37
- CLLI
 - input detail, 39
 - input detail example, 39
 - input file sample, 40
 - input header, 38
 - input header example, 39
 - input trailer, 39
 - input trailer example, 39
 - output detail, 41
 - output file sample, 40
 - output header, 40, 41
 - output trailer, 41
- CLM
 - output format, 44
 - overview, 10
 - sighting codes, 61
- CLM format
 - A - Location with SPLC, 73
 - B - Train, 74
 - BLANK - Location, 75
 - C - Train with SPLC, 76
 - D - Destination, 77
 - E - Destination with SPLC, 78
 - F - Flatcar, 79
 - G - Flatcar with SPLC, 80
 - H - ETA, 81
 - I - ETA with SPLC, 82
 - K - Destination with Four-Digit Event Code, 83
 - L - ETA with Numeric Event Type Code, 84
 - M - Motor Carrier Movement, 85
 - T - Text, 86
 - W - Scale Weights, 87
 - Y - Custom ETA with Years, 88
 - Z - Text with Destination City and State, 89
- CLR
 - input detail, 28
 - input detail example, 28
 - input file, 29
 - input header, 26
 - input header example, 27
 - input trailer, 29
 - input trailer example, 29
 - output detail, 30
 - output file sample, 29
 - output header, 30
 - output header example, 30
 - output trailer, 31
 - output trailer example, 31
- CLU
 - input detail, 20
 - input detail example, 21
 - input file example, 22
 - input header, 18
 - input header example, 19
 - input trailer, 21
 - input trailer example, 21
 - output detail, 23
 - output file example, 22
 - output header, 22
 - output header example, 23
 - output trailer, 23
 - output trailer example, 23
- CLW
 - output detail, 50
 - output detail example, 51
 - output header, 49
 - output header example, 50
 - output sample, 49
 - output trailer, 51
- CLX
 - output format, 45
- code
 - AT7 segment, 66
- codes
 - error for CLE, 60
 - sighting for CLM, 61
- CSV
 - output format, 45
- D9 destination station
 - EDI 417, 55
- data element
 - append, 42
- demand trace
 - 417 waybill, 57

- overview, 11
- detail line, 7
- document conventions, 2
- drop criteria, 25
- EDI 214
 - AT7 shipment status details, 64
 - B10 beginning segment for transportation carrier shipment status message, 63
 - GE functional group trailer, 65
 - GS functional group header, 63
 - IEA interchange control trailer, 65
 - ISA header, 63
 - K1 remarks, 64, 65
 - L11 business instructions and reference number, 65
 - L11 business instructions and reference number (waybill), 64
 - layout, 62
 - LX transaction set line number, 64
 - MS1 equipment, shipment, or real property location, 64
 - MS2 equipment or container owner and type, 65
 - N1 party identification, 64
 - N4 geographic location, 64
 - output format, 45
 - SE transaction set trailer, 65
 - ST transaction set header, 63
- EDI 322
 - event mapping, 71
 - GE functional group trailer, 70
 - GS functional group header, 68
 - IEA interchange control trailer, 70
 - ISA header, 68
 - layout, 67
 - N7 equipment details, 69
 - N9 Extended reference information, 70
 - NA cross reference equipment, 69
 - output format, 46
 - output mapping, 71
 - Q5 status details, 69
 - R4 port or terminal, 69
 - SE transaction set trailer, 70
 - ST transaction set header, 68
 - W2 equipment identification, 69
- error
 - codes for CLE, 60
 - handling, 59
 - messages. *See* CLE
- event repository, 1
- exclude filter, 24
- extension
 - format, 42
- F9 origin station
 - EDI 417, 54
- file
 - detail line, 7
 - format overview, 7
 - header line, 7
 - input naming, 6
 - naming conventions, 6
 - output naming, 6
 - trailer line, 7
- filter
 - include/exclude, 24
- fleet
 - definition, 1
 - management, 32
 - query. *See* CLL and CLLI
- fleet update message. *See* CLU
- format
 - extensions, 2
 - output, 2, 44, *See* output format
- free runner, 25
- FTP
 - mailbox, 4
 - pull, 4
 - push, 4
 - UNIX server, 3
- FTP mailbox
 - waybill delivery, 52
- GE functional group trailer
 - EDI 214, 65
 - EDI 322, 70
 - EDI 417, 56
- GE interchange control trailer
 - EDI 214, 65
 - EDI 322, 70
- glossary, 90
- GS functional group header
 - EDI 214, 63
 - EDI 322, 68
 - EDI 417, 53
- header line, 7
- IEA interchange control trailer
 - EDI 417, 56
- include filter, 24
- input detail
 - CLI, 13
 - CLLI, 39
 - CLLI example, 39
 - CLR, 28
 - CLU, 20
 - CLU example, 21
- input file
 - CLL sample, 34
 - CLLI sample, 40
 - CLR, 29
 - CLU example, 22
- input header
 - CLI, 11
 - CLL, 33
 - CLL example, 34
 - CLLI, 38
 - CLLI example, 39
 - CLR, 26
 - CLR example, 27, 28
 - CLU, 18
 - CLU example, 19
 - MQ, 8
- input trailer
 - CLI, 13
 - CLL, 34
 - CLL example, 34
 - CLLI, 39
 - CLLI example, 39
 - CLR, 29
 - CLR example, 29
 - CLU, 21
 - CLU example, 21
 - MQ, 9
- inquiry
 - fleet listing, 33
 - fleet verification, 38
- ISA header
 - EDI 214, 63
 - EDI 322, 68
 - EDI 417, 53
- K1 remarks, 64, 65
- key for tables, 3
- L11 business instructions and reference number, 65
- L11 business instructions and reference number (waybill), 64
- L5 description, marks, and numbers, 55

- layout
 - EDI 214 sample, 62
 - EDI 322 sample, 67
 - waybill (EDI 417), 52
- letter of authorization (LOA), 1
- LFH hazardous material information
 - EDI 417, 56
- LH1 hazardous identification information
 - EDI 417, 55
- LH2 classification information
 - EDI 417, 56
- LOA
 - definition, 1
 - expiration, 1
 - submission, 58
 - third-party, 58
- LX transaction set line number
 - EDI 214, 64
 - EDI 417, 55
- mailbox
 - FTP, 4
- MQ
 - input header line, 8
 - processing overview, 5
 - trailer line, 9
- MS1 equipment, shipment, or real property location, 64
- MS2 equipment or container owner and type, 65
- N1 party identification
 - EDI 214, 64
 - EDI 417, 55
- N4 geographic location, 64
- N7 equipment details, 69
 - EDI 417, 54
- N9 extended reference identification
 - EDI 417, 54
- N9 Extended reference information, 70
- NA cross reference equipment, 69
- naming
 - input files, 6
 - output files, 6
- output
 - formats, 2
 - trigger, 47
- output detail
 - CLI, 15
 - CLL, 36
 - CLLI, 41
 - CLR, 30
 - CLU, 23
 - CLW, 50
 - CLW example, 51
- output file
 - CLL sample, 34
 - CLLI sample, 40
 - CLR sample, 29
 - CLU example, 22
 - CLW sample, 49
- output format
 - CLM, 44
 - CLX, 45
 - CSV, 45
 - EDI 214, 45
 - EDI 322, 46
- output header
 - CLI, 14
 - CLL, 35
 - CLL example, 35, 36
 - CLLI, 40, 41
 - CLR, 30
 - CLR example, 30
 - CLU, 22
 - CLU example, 23
 - CLW, 49
- output trailer
 - CLI, 15
 - CLL, 37
 - CLLI, 41
 - CLR, 31
 - CLR example, 31
 - CLU, 23
 - CLU example, 23
 - CLW, 51
- party-to-waybill warning. *See* CLW
- PER administrative communications contact
 - EDI 417, 56
- prerequisites, 3
- pull, 4
- push, 4
- Q5 status details, 69
- R2 route information
 - EDI 417, 55
- R4 port or terminal, 69
- RailSight
 - overview, 1
- SE transaction set trailer, 56
 - EDI 214, 65
 - EDI 322, 70
- security
 - AAR compliance, 58
 - hazardous material, 1
 - LOA, 1, 58
 - profiles, 58
 - waybill, 1
- sighting codes
 - CLM, 61
- ST transaction set header
 - EDI 214, 63
 - EDI 322, 68
- ST Transaction Set header
 - EDI 417, 53
- start-of-trip
 - reporting, 48
- start-of-trip reporting
 - CLI, 16
- status
 - drop criteria, 25
 - temporary, 25
- table key, 3
- temporary loaded fleet trace. *See* CLR
- temporary status
 - drop criteria, 25
- terminology, 90
- trace
 - fleet, 18
- trailer line, 7
- trigger
 - output, 47
- UNIX server, 3
- variable date reporting
 - CLI, 16
- W2 equipment identification, 69
- warning
 - party-to waybill, 49
- waybill
 - 417 On-Demand Distribution, 57
 - BX general shipment information, 53
 - BX rail shipment information, 54
 - D9 destination station, 55
 - F9 origin station, 54

GE functional group trailer, 56
GS functional group header, 53
IEA interchange control trailer, 56
ISA header, 53
L5 description, marks, and numbers, 55
layout, 52
LFH hazardous material information, 56
LH1 hazardous identification information, 55
LH2 classification information, 56
LX transaction set line number, 55
N1 party identification, 55
N7 equipment details, 54

N9 extended reference identification, 54
XE "party-to-waybill warning" \t "See CLW" \b party-to
waybill warning, 49
PER administrative communications contact, 56
R2 route information, 55
reference, 54
reporting, 52
SE transaction set trailer, 56
security, 1
ST Transaction Set header, 53
waybill reference
EDI 417, 54