




designed for short time duty and are disconnected by centrifugal switch when the motor has reached 75% speed.

PROCEDURE

NO-LOAD TEST

Make the connections as shown in the diagram.

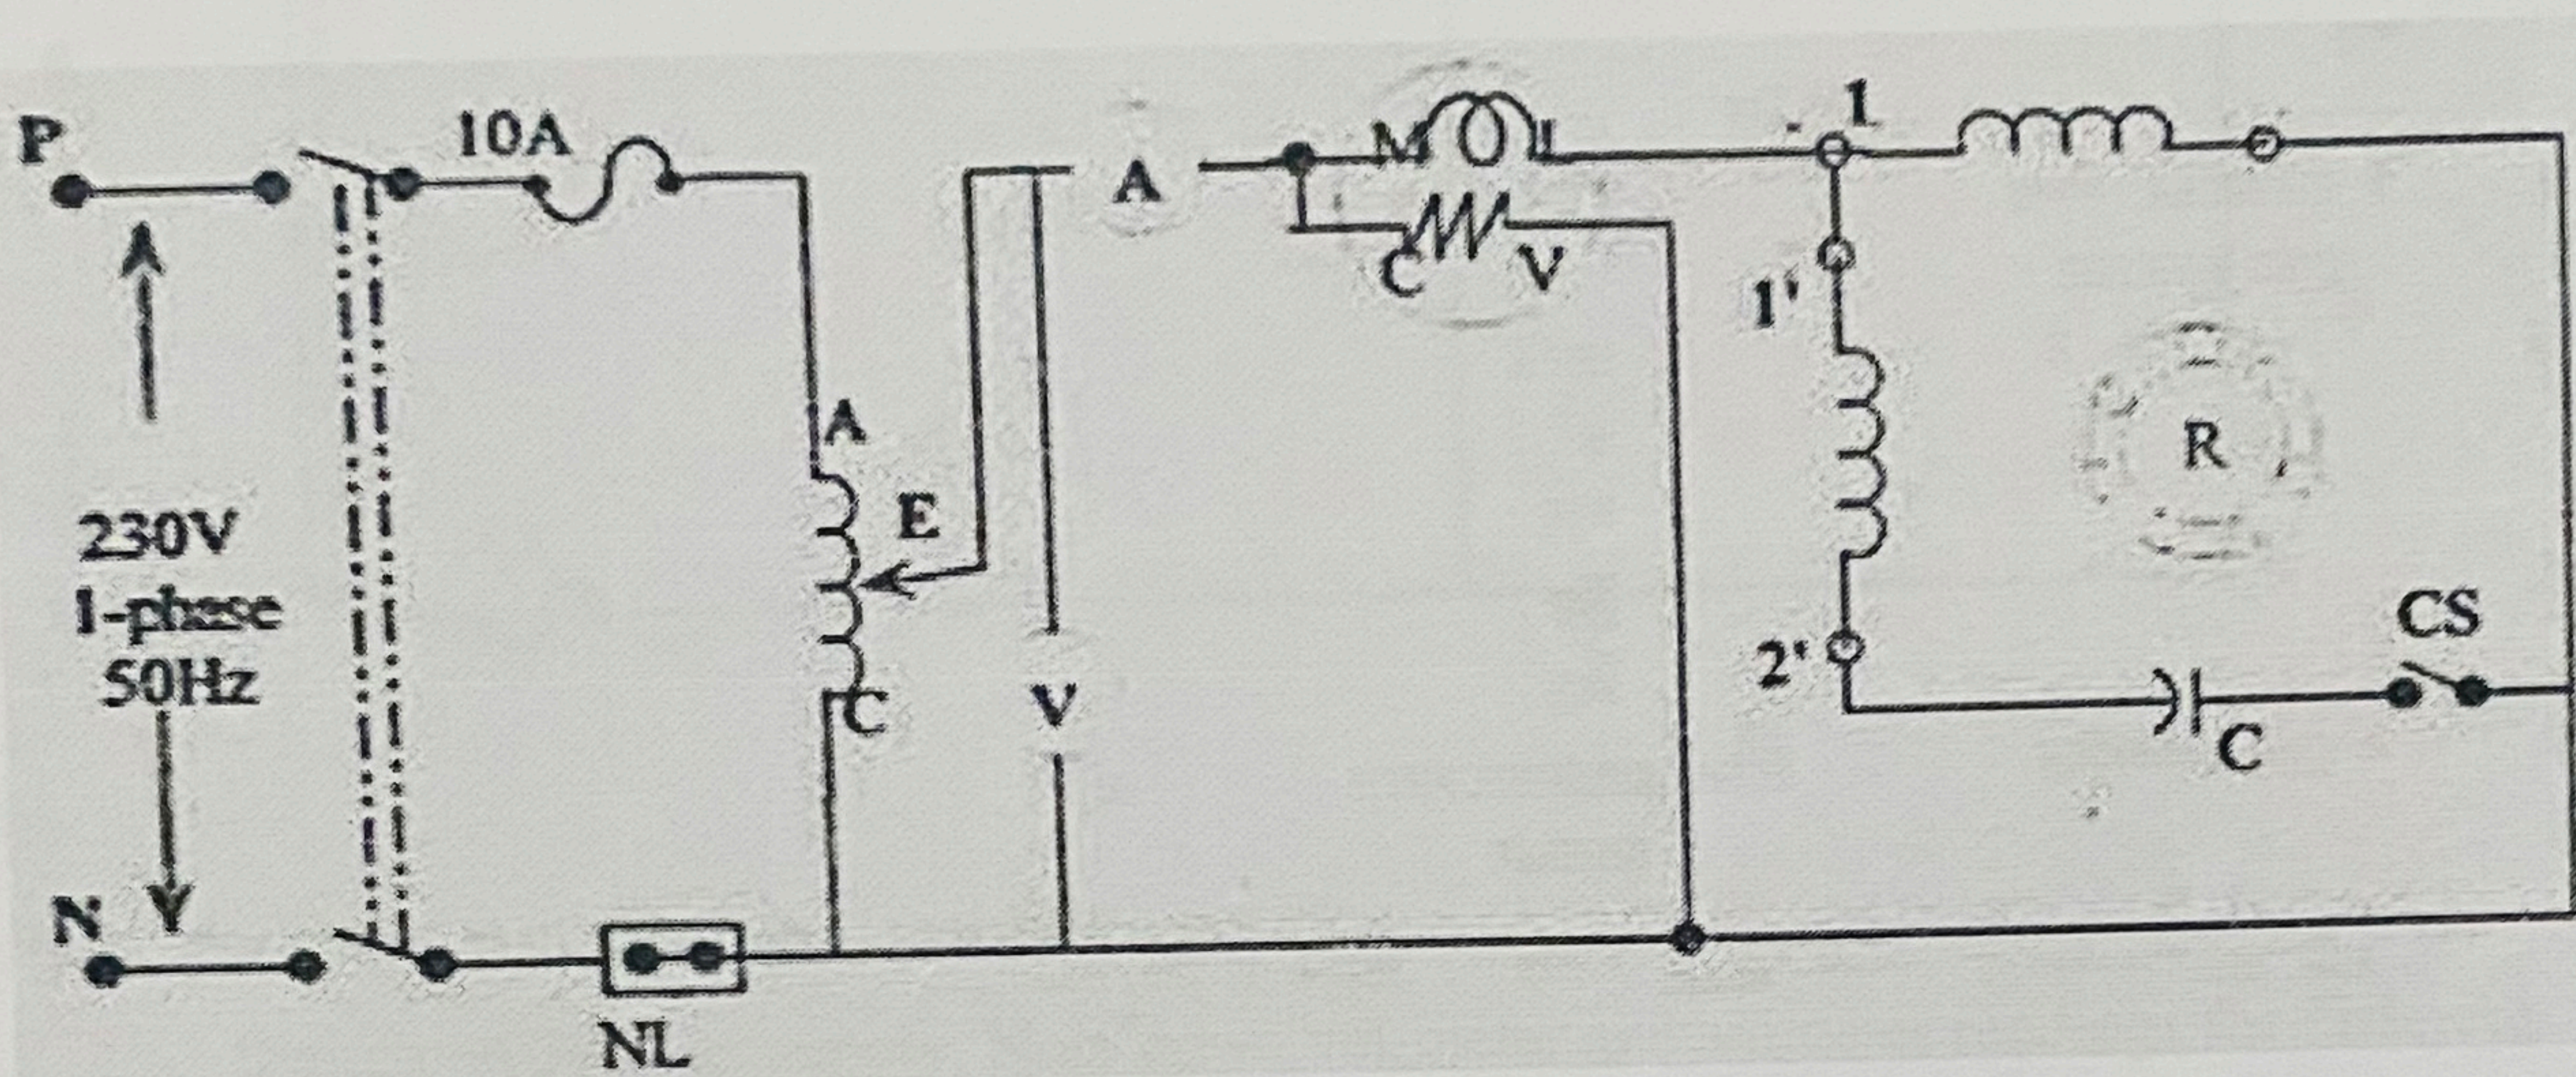


Precaution:

Keep the autotransformer at minimum voltage position.

Switch on the supply. Adjust the autotransformer and apply rated voltage. Note down the ammeter, voltmeter and wattmeter readings. Switch off the supply.

BLOCKED ROTOR TEST

Make the connections as shown in the diagram.

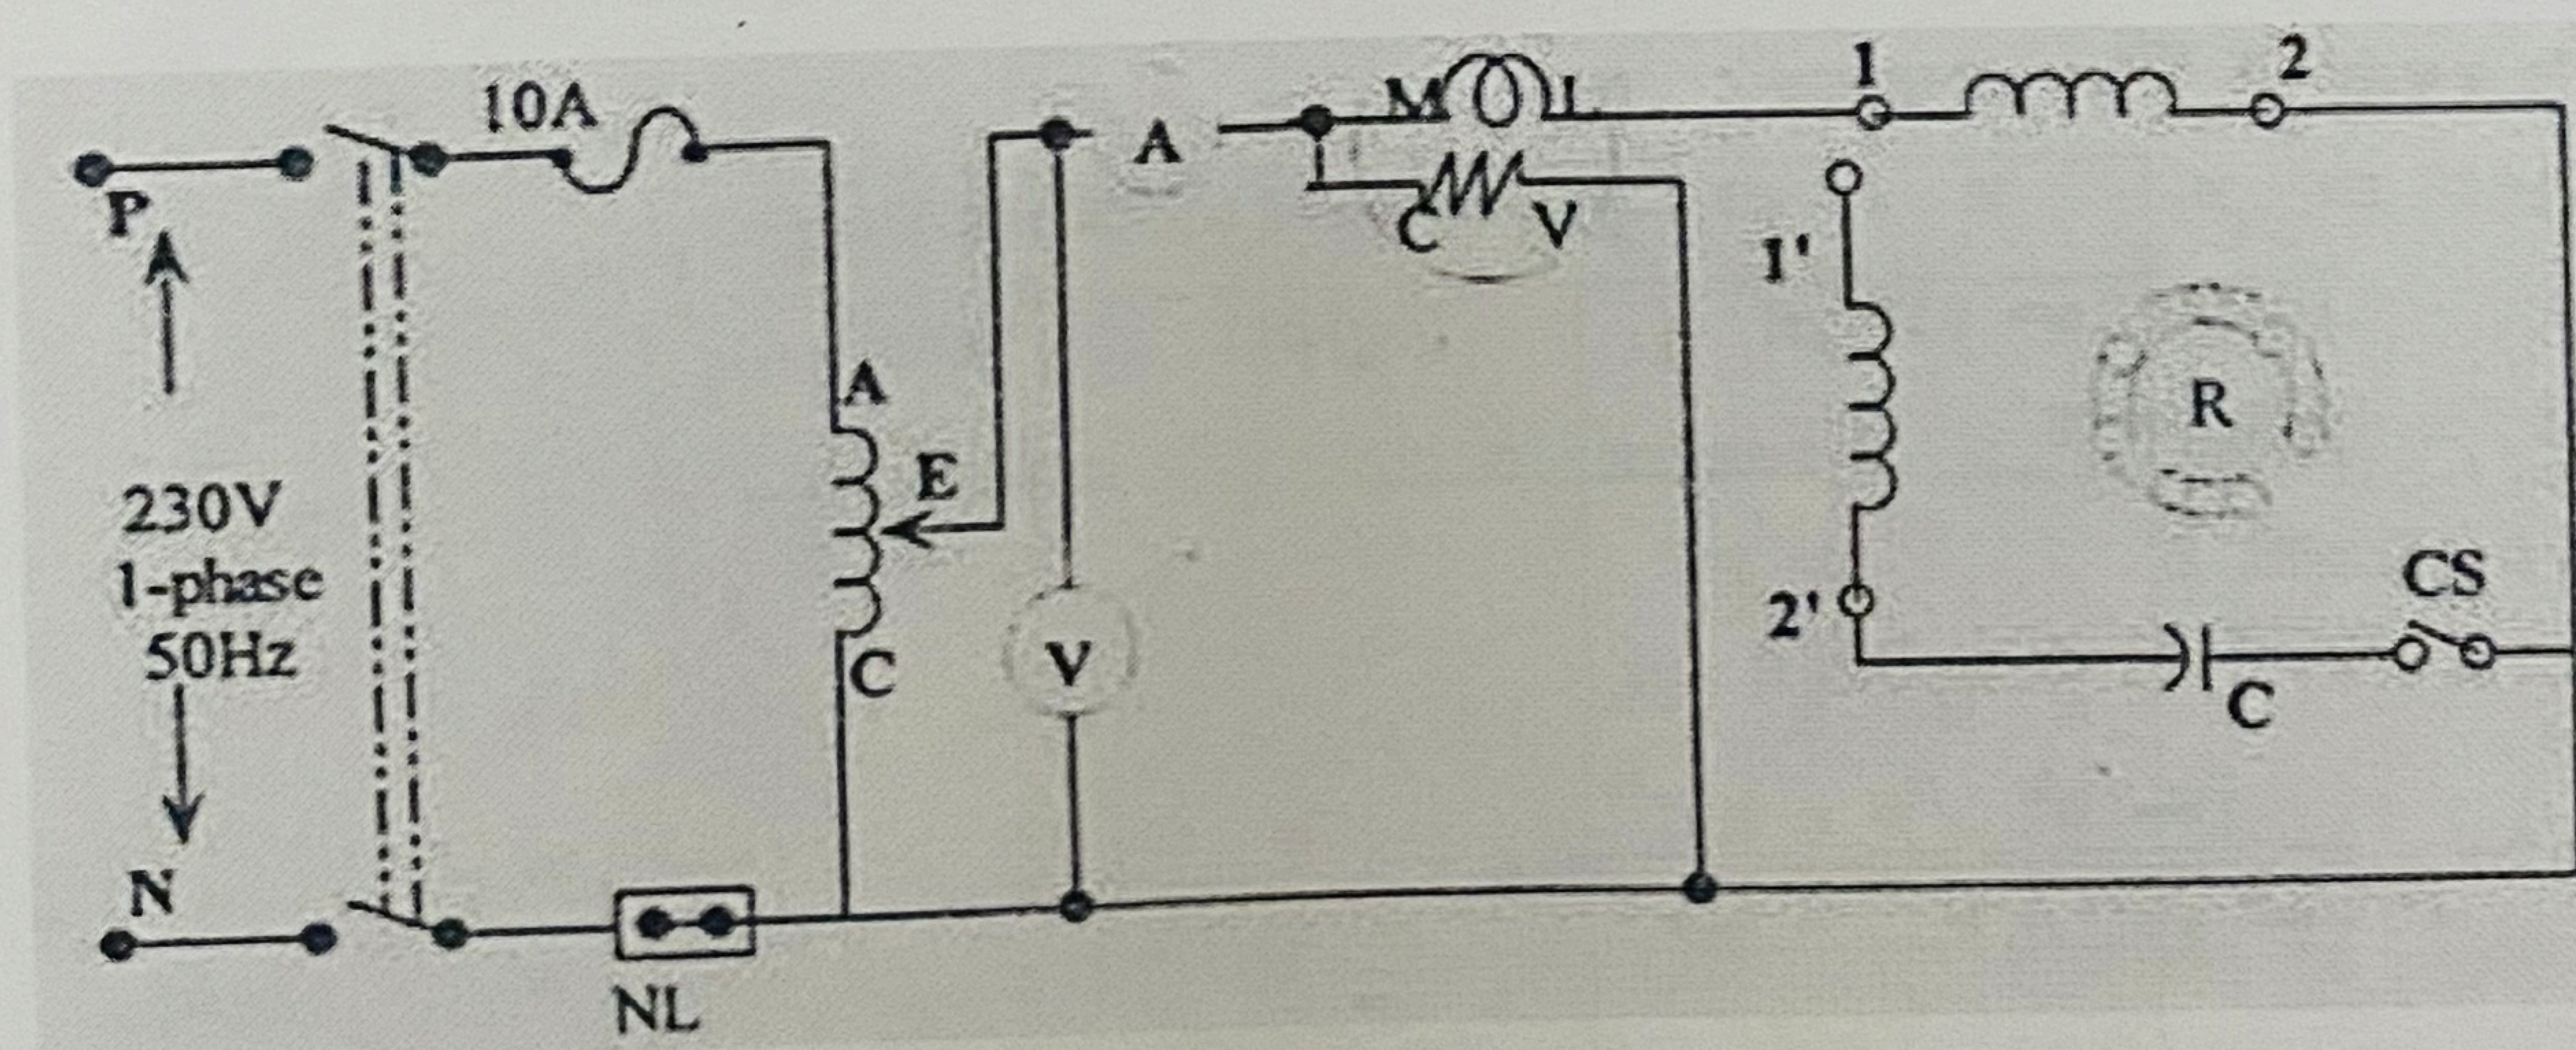

Note: For blocked rotor test, the auxiliary winding is disconnected and only the main winding is connected to ac supply.

Precaution: