

Section 41.3

Troubleshooting Flash Code 41

The following procedure will troubleshoot Flash Code 41.

Section 41.3.1

Check for Signal Open

Perform the following steps to check for signal open.

1. Turn ignition OFF.
2. Disconnect engine harness connector at the ECM. See Figure "Engine Harness Connector" .

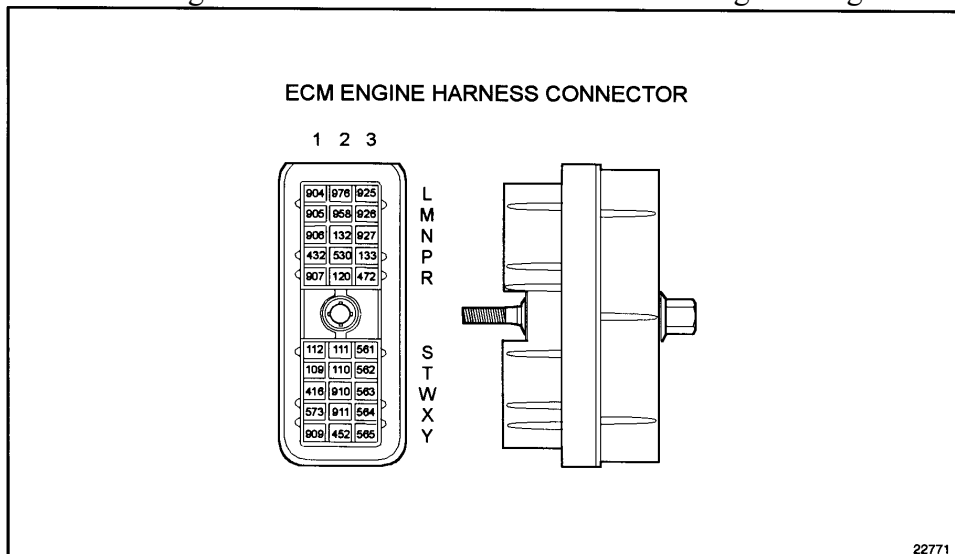


Figure 1. Engine Harness Connector

3. Read resistance between sockets T1 and T2 on the engine harness connector.
 - a. If the resistance reading is less than or equal to 200 Ω , refer to "41.3.2 Check for Short" .
 - b. If the resistance reading is greater than 200 Ω or open, refer to "41.3.3 Open Timing Reference Sensor Line Check" .

Section 41.3.2

Check for Short

Perform the following steps to check for a short.

1. Disconnect the TRS connector.
2. Measure resistance between sockets T1 and T2 on the engine harness connector. See Figure "Engine Harness Connector to Timing Reference Sensor" .