

PW1100G Inspection Task_Caution Extraction Tool

By Cyient Offshore Team

Table of contents

Sl.NO	Contents	Slide. No
<u>1</u>	<u>Background and Objective</u>	<u>3</u>
<u>2</u>	<u>Revision History</u>	<u>4</u>
<u>3</u>	<u>Tool Interface</u>	<u>5-6</u>
<u>4</u>	<u>Inputs</u>	<u>7</u>
<u>5</u>	<u>Tool functionality</u>	<u>8-13</u>
<u>6</u>	<u>Output</u>	<u>14</u>
<u>7</u>	<u>Contact</u>	<u>15</u>

- **Background and Objective**

BACKGROUND

-

OBJECTIVE

The objective of this tool is to automate the extraction of caution statements from


- Engine Manual
- Engine Manual CIR
- SP 72-35 (EM & CIR)
- SP 72-51 (EM & CIR)

- **Revision History**

Version	Date Updated	Remarks
V1.0	25-Aug-2026	Initial version of tool

Tool Interface

- Below picture is the user interface of **PW1100G Inspection Task_Caution Extraction Tool**.

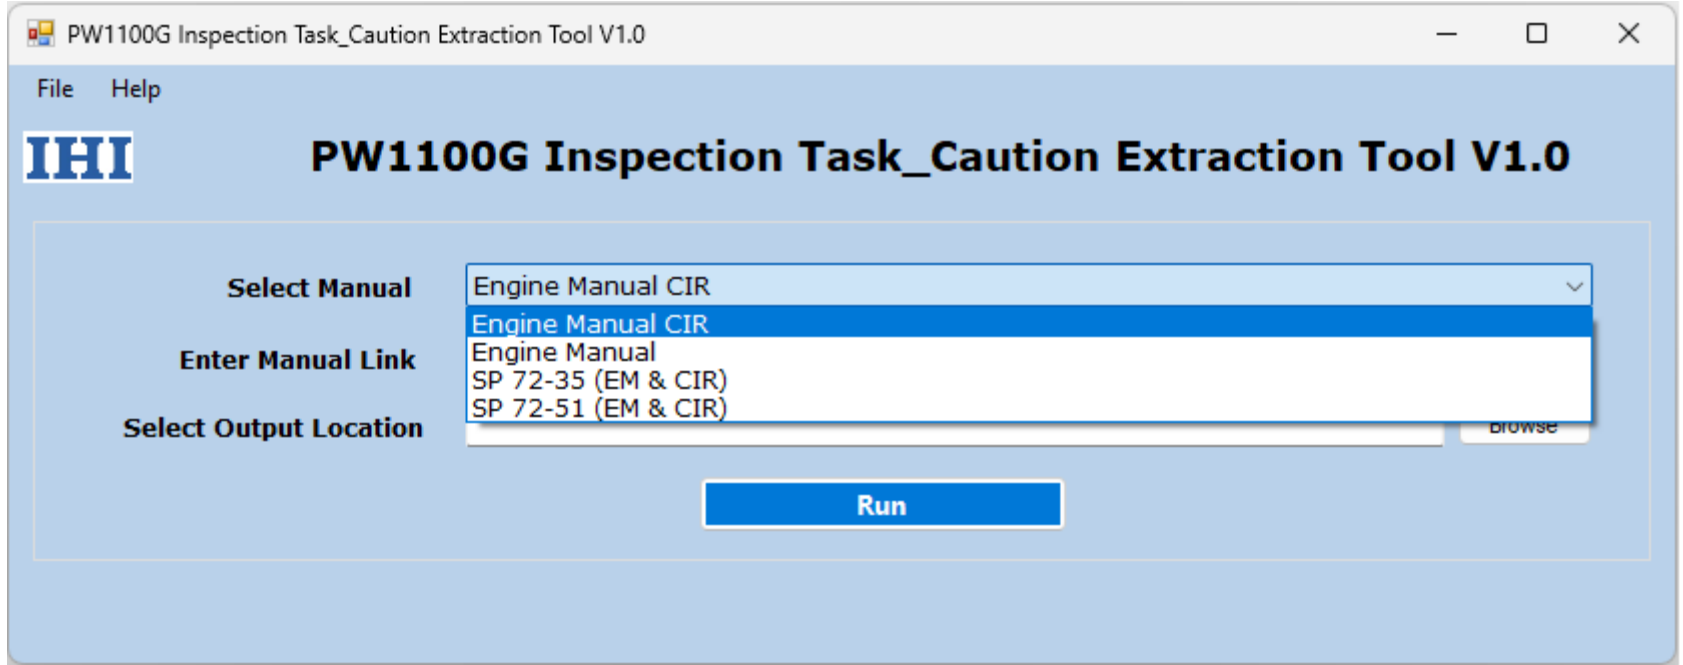

Tool User Interface

PW1100G Inspection Task_Caution Extraction Tool V1.0

File Help

IHI **PW1100G Inspection Task_Caution Extraction Tool V1.0**

Select Manual

Enter Manual Link

Select Output Location

Tool User Interface

Inputs

Manual Type

PW1100G Inspection Task_Caution Extraction Tool V1.0

File Help

IHI

PW1100G Inspection Task_Caution Extraction Tool V1.0

Select Manual Engine Manual CIR

Enter Manual Link

Select Output Location Browse

Run

Manual Link

Report Output location

Tool User Interface

• Tool functionality •

1. Manual Selection

The Manual Type drop-down list allows the user to select the Manual from which cautions will be extracted.

Available options:

- Engine Manual
- Engine Manual CIR
- SP 72-31 (EM & CIR)
- SP 72-51 (EM & CIR)

Select the appropriate Manual type before entering the Manual link.

2. Manual Link

The Manual Link field is used to enter the URL of the Manual page from which cautions need to be extracted.

Example:

http://127.0.0.1:8000/PW1000G-77445-19453-00/PW1000G-77445-16992-00.html	- EM
http://127.0.0.1:8000/PW1000G-77445-19453-00/PW1000G-77445-15653-00.html	- EM-CIR
<u>http://127.0.0.1:8002/PW1000G-77445-19155-00/SP 72-35 (EM & CIR)</u>	-
<u>http://127.0.0.1:8003/PW1000G-77445-19156-00/SP 72-51 (EM & CIR)</u>	-

←

→

↺

🔒

127.0.0.1:8000/PW1000G-77445-19453-00/PW1000G-77445-16992-00.html

☆

MID

🔊

📄

🔗

🌐

📁

🔍

📁 Mochahost

📁 google

📁 Cyient

📁 Adobe Acrobat

📁 EIPD

About

search

Navigation

Search

View

Home > PW1100G-JM Series Engine Manual PN 5316992

PMC: PW1000G-77445-16992-00 | Issue No: 046 | Issue Date: 2026-03-15

Sort by:

Title

Tec

Contents

Front Matter

Title Page

General Tools, Covers and Equipment

▼ PW1100G-JM Series Engine Manual PN 5316992

24-00-00 Electrical Power

29-00-00 Hydraulic Power

▶ 71-00-00 Power Plant

71-71-00 Engine Drain System

72-00-00 Engine

72-00-11 Fan Rotor - Module

72-00-15 Fan Drive Gearbox (FDG) - Module

72-00-21 Fan Case - Module

72-00-22 Fan Intermediate Case (FIC) - Module

72-00-30 Fan Drive Gearbox - Low Pressure Compressor Unit (FDG-LPC)

13 Documents Found in 72-00-11 Fan Rotor - Module

Do A Visual Inspection Of The Fan Rotor Module

Fan Rotor - Module - Visual Examination

PW1100G-A-72-00-11-00A-310A-B | 009

Do A Visual Inspection Of The Fan Rotor Module

Fan Rotor - Module - Visual Examination

PW1100G-B-72-00-11-00A-310A-B | 001

Do A Visual Inspection Of The Fan Rotor Module

Fan Rotor Module - Visual Examination

PW1100G-C-72-00-11-00A-310A-B | 001

Remove The Fan Rotor Module Fan Hub Retaining Nut

Fan Rotor Module - Fan Hub Retaining Nut - Remove procedure

PW1100G-A-72-00-11-01A-520A-B | 006

Remove The Fan Hub (Vertical)

Fan Rotor Module - Vertical Hub Removal - Remove procedure

PW1100G-B-72-00-11-02A-520A-B | 008

Remove The Fan Hub (Vertical)

Fan Rotor Module - Vertical Hub - Remove Procedure

PW1100G-C-72-00-11-02A-520A-B | 001

For the Engine Manual link, only tasks with INFORMATION CODE "-3xx" are fetched, and cautions are extracted from those task pages.

←

→

↺

📄 127.0.0.1:8000/PW1000G-77445-19453-00/PW1000G-77445-15653-00.html

☆

MID

🔥

📄

🔒

Paused

New Chrome

📁

🌐

🌐

📁 Mochahost

📁 google

📁 Cyient

📁 Adobe Acrobat

📁 EIPD

📁 A

About

search



Navigation

Search

View

Home > PW1100G-JM Series Cleaning, Inspection, And Repair Manual PN 5315653

PMC: PW1000G-77445-15653-00 | Issue No: 046 | Issue Date: 2026-03-15

Sort by: **Title** **Techname** **Infoname** **D**

Contents

[Front Matter](#)

[Title Page](#)

▼ PW1100G-JM Series Cleaning, Inspection, And Repair (CIR) Manual, PN 5315653

[71-71-00 Tubes And Hoses](#)

[72-00-00 Engine General](#)

[72-11-00 Fan Rotor](#)

[72-15-00 Fan Drive Gearbox \(FDG\)](#)

[72-21-00 Fan Case](#)

[72-22-00 Fan Intermediate Case](#)

[72-31-00 Low Pressure Compressor \(LPC\)](#)

[72-34-00 Compressor Intermediate Case \(CIC\)](#)

[72-35-00 High Pressure Compressor \(HPC\)](#)

[72-41-00 Diffuser Case](#)

41 Documents Found in 72-41-00 Diffuser Case

[Clean the Diffuser Case Assembly](#)

Diffuser Case Assembly - Clean And Apply Surface Protection
PW30K-A-72-41-0000-00A-250A-C | 016

[General Inspection Requirements - Diffuser Case Assembly](#)

Diffuser Case Assembly - Examinations, Tests And Checks
PW30K-A-72-41-0000-00A-300A-C | 002

[Visual Inspection - Diffuser Outer Case Assembly](#)

Case Assembly - Diffuser Outer - Visual Examination
PW30K-A-72-41-0111-00A-310A-C | 011

[Fluorescent Penetrant Inspection - Diffuser Outer Case Assembly](#)

Case Assembly - Diffuser Outer - Test For Surface Cracks By Fluorescent Penetrant Inspection (FPI)
PW30K-A-72-41-0111-00A-351A-C | 004

[Dimensional Inspection - Diffuser Outer Case Assembly](#)

Case Assembly - Diffuser Outer - Dimension Check
PW30K-A-72-41-0111-00A-361A-C | 006

[ECS Boss Threaded Hole Repair - Outer Diffuser Case Assembly \(RTN19CCJ77\)](#)

Case Assembly - Diffuser Outer - Thread/tap

SP 72-35 (EM & CIR) Link

127.0.0.1:8002/PW1000G-77445-19155-00/

MochahostgoogleCyientAdobe AcrobatEIPD

About

Navigation

Search

View

Home > PW1100G-JM Series SP-72-35 Special Procedures - High Pressure C 5319155

PMC: PW1000G-77445-19155-00 | Issue No: 045 | Issue Date: 2026-06-15

Contents

Welcome

Front Matter

Title Page

▼ SP-72-35 Special Procedures - High Pressure Compressor (HPC) Module

SP-72-35 Special Procedures - High Pressure Compressor (HPC) Module - Engine Manual (Base Engine Models)


SP-72-35 Special Procedures - High Pressure Compressor (HPC) Module - Engine Manual (Advantage Engine Models)

SP-72-35 Special Procedures - High Pressure Compressor (HPC) Module - Clean, Inspect, And Repair (CIR)

SP-72-35 Special Procedures - High Pressure Compressor (HPC) Module - Support Equipment And Tools

For SP 72-35 Manual Link, Cautions are retrieved from **Engine Manual & CIR**.
For the Engine Manual link, only tasks with INFORMATION CODE "-3xx" are fetched, and cautions are extracted from those task pages.

SP 72-51 (EM & CIR) Link

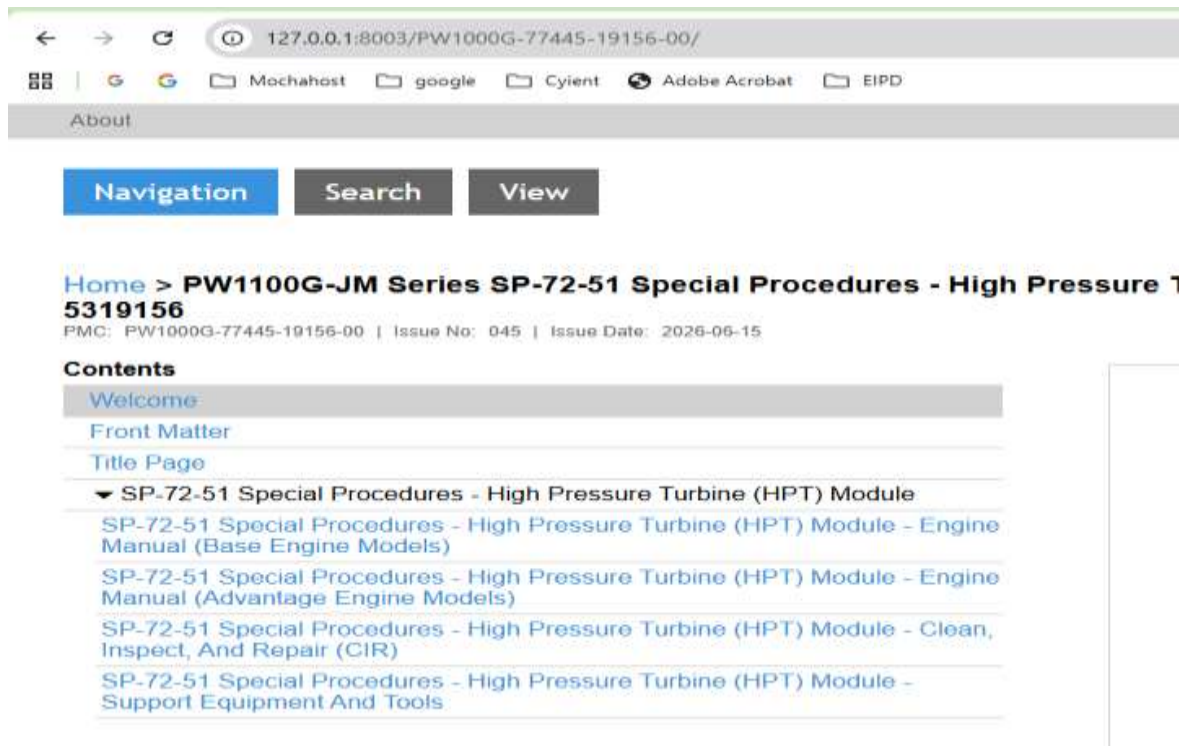

← → ↺ 127.0.0.1:8003/PW1000G-77445-19156-00/

⌵ | G MochaHost google Cyient Adobe Acrobat EIPD

About

Navigation **Search** **View**

[Home](#) > **PW1100G-JM Series SP-72-51 Special Procedures - High Pressure 1 5319156**

PMC: PW1000G-77445-19156-00 | Issue No: 045 | Issue Date: 2026-06-15

Contents

Welcome
Front Matter
Title Page
▼ SP-72-51 Special Procedures - High Pressure Turbine (HPT) Module
SP-72-51 Special Procedures - High Pressure Turbine (HPT) Module - Engine Manual (Base Engine Models)
SP-72-51 Special Procedures - High Pressure Turbine (HPT) Module - Engine Manual (Advantage Engine Models)
SP-72-51 Special Procedures - High Pressure Turbine (HPT) Module - Clean, Inspect, And Repair (CIR)
SP-72-51 Special Procedures - High Pressure Turbine (HPT) Module - Support Equipment And Tools

For SP 72-51 Manual Link, Cautions are retrieved from **Engine Manual & CIR**.
For the Engine Manual link, only tasks with INFORMATION CODE "-3xx" are fetched, and cautions are extracted from those task pages.

Ensure that the Engine Manual link corresponds to the Manual type selected in the drop-down list.

NOTE : The port numbers may change

3. Output Location

The Output location specifies the path where the extracted Cautions report will be generated. Users may enter the full file path or browse to the desired location.

Example:

D:\Reports\CautionList.xlsx

4. Run Button

Click Run Button to begin the extraction process.

The tool will:

1. Open the specified Manual Link in the background.
2. Scan the Link for task pages.
3. Extract cautions from these task pages.
4. Generate the report at the specified location.

Output

Cautions Report



CautionsList Public		
Search		
File Home Insert Draw Page Layout Formulas Data Review View Automate Developer Help		
Clipboard Font Alignment Number Styles Cells Editing Sensitivity Add-ins		
Comments Share		
A1 DMC		
DMC	Title	CautionText
PW1100G-A-24-21-01-00A-222A-D	Integrated Drive Generator (IDG) - Drain Oil	SOLVENTS THAT CONTAIN CHLORINE SHOULD NOT BE USED TO CLEAN EQUIPMENT REQUIRED TO VARIABLE FREQUENCY GENERATOR WITH OIL. CHLORINE CONTAMINATION CAN CAUSE RAPID D OIL AND SUBSEQUENT GENERATOR DAMAGE.
PW1100G-A-24-21-01-00A-222A-D	Integrated Drive Generator (IDG) - Drain Oil	SOME HOT OIL UNDER PRESSURE CAN COME OUT OF THE OVERFLOW DRAIN HOSE WHEN IT IS CO YOU MUST USE THE CORRECT SPECIFICATION OF CLEAN NEW OIL WHEN YOU ADD OR REPLACE TI INCORRECT OILS CAN CAUSE DAMAGE TO THE IDG.
PW1100G-A-24-21-01-00A-292A-D	Integrated Drive Generator (IDG) - Change Of Oil	SOLVENTS THAT CONTAIN CHLORINE SHOULD NOT BE USED TO CLEAN EQUIPMENT REQUIRED TO INTEGRATED DRIVE GENERATOR WITH OIL. CHLORINE CONTAMINATION CAN CAUSE RAPID DETE OIL AND SUBSEQUENT GENERATOR DAMAGE.
PW1100G-A-24-21-01-00A-292A-D	Integrated Drive Generator (IDG) - Change Of Oil	DO NOT DO THIS TASK FOR A DISCONNECTED INTEGRATED DRIVE GENERATOR. THE OPERATION INTEGRATED DRIVE GENERATOR CAN CAUSE DAMAGE TO EQUIPMENT.
PW1100G-A-24-21-01-00A-292A-D	Integrated Drive Generator (IDG) - Change Of Oil	YOU MUST USE THE CORRECT SPECIFICATION OF CLEAN NEW OIL WHEN YOU ADD OR REPLACE TI INCORRECT OILS CAN CAUSE DAMAGE TO THE IDG.
PW1100G-A-24-21-01-00A-292A-D	Integrated Drive Generator (IDG) - Change Of Oil	MAKE SURE THE DRAIN VALVE HOSE IS CONNECTED TO LET THE OIL DRAIN TO THE CORRECT LEVE MUCH HEAT CAN OCCUR IF THE IDG IS FILLED WITH TOO MUCH OIL.
PW1100G-A-24-21-01-00A-292A-D	Integrated Drive Generator (IDG) - Change Of Oil	DO NOT DISCONNECT THE OVERFLOW DRAIN HOSE UNTIL THE FLOW DECREASES TO SINGLE DRO YOU MUST USE A SECOND WRENCH TO HOLD THE MATING PARTS WHEN YOU LOOSEN OR TIGHTE IF YOU DO NOT OBEY THIS CAUTION, YOU CAN TWIST OR DAMAGE THE TUBES.
PW1100G-A-24-21-01-00A-520A-D	Remove The AC Generator - Integrated Drive Generator (IDG)	MAKE SURE THAT YOU APPLY ONLY SUFFICIENT PRESSURE WITH THE JACK TO HOLD THE WEIGHT MUCH PRESSURE ON THE IDG OR FAILURE TO HOLD THE IDG CORRECTLY CAN CAUSE DAMAGE TO
PW1100G-A-24-21-01-00A-520A-D	Remove The AC Generator - Integrated Drive Generator (IDG)	

IHI	Tatsuya Ito-San	<u>ito0114@ihi-g.com</u>
CYIENT Onsite	Suraj Prakash	<u>prakash7808@ihi-g.com</u>
CYIENT Offshore	Veerendra Kotari	<u>Veerendra.Kotari@cyient.com</u>

Thank You

Merci

Dank u wel

Danke

Gracias

ありがとうございました

شكرا