

PW1100G MANUAL_CautionS Extraction Tool

By Cyient Offshore Team

Table of contents

Sl.NO	Contents	Slide. No
<u>1</u>	<u>Background and Objective</u>	<u>3</u>
<u>2</u>	<u>Revision History</u>	<u>4</u>
<u>3</u>	<u>Tool Interface</u>	<u>5-6</u>
<u>4</u>	<u>Inputs</u>	<u>7</u>
<u>5</u>	<u>Tool functionality</u>	<u>8-14</u>
<u>6</u>	<u>Output</u>	<u>15-19</u>
<u>7</u>	<u>Contact</u>	<u>20</u>

- **Background and Objective**

BACKGROUND

-

OBJECTIVE

The objective of this tool is to automate the extraction of caution statements from


- Engine Manual
- Engine Manual CIR
- SP 72-35 (EM & CIR)
- SP 72-51 (EM & CIR)

- Revision History

Version	Date Updated	Remarks
V1.0	28-Aug-2026	Initial version of tool

Tool Interface

- Below picture is the user interface of **PW1100G Manual_CAUTIONS Extraction Tool**.

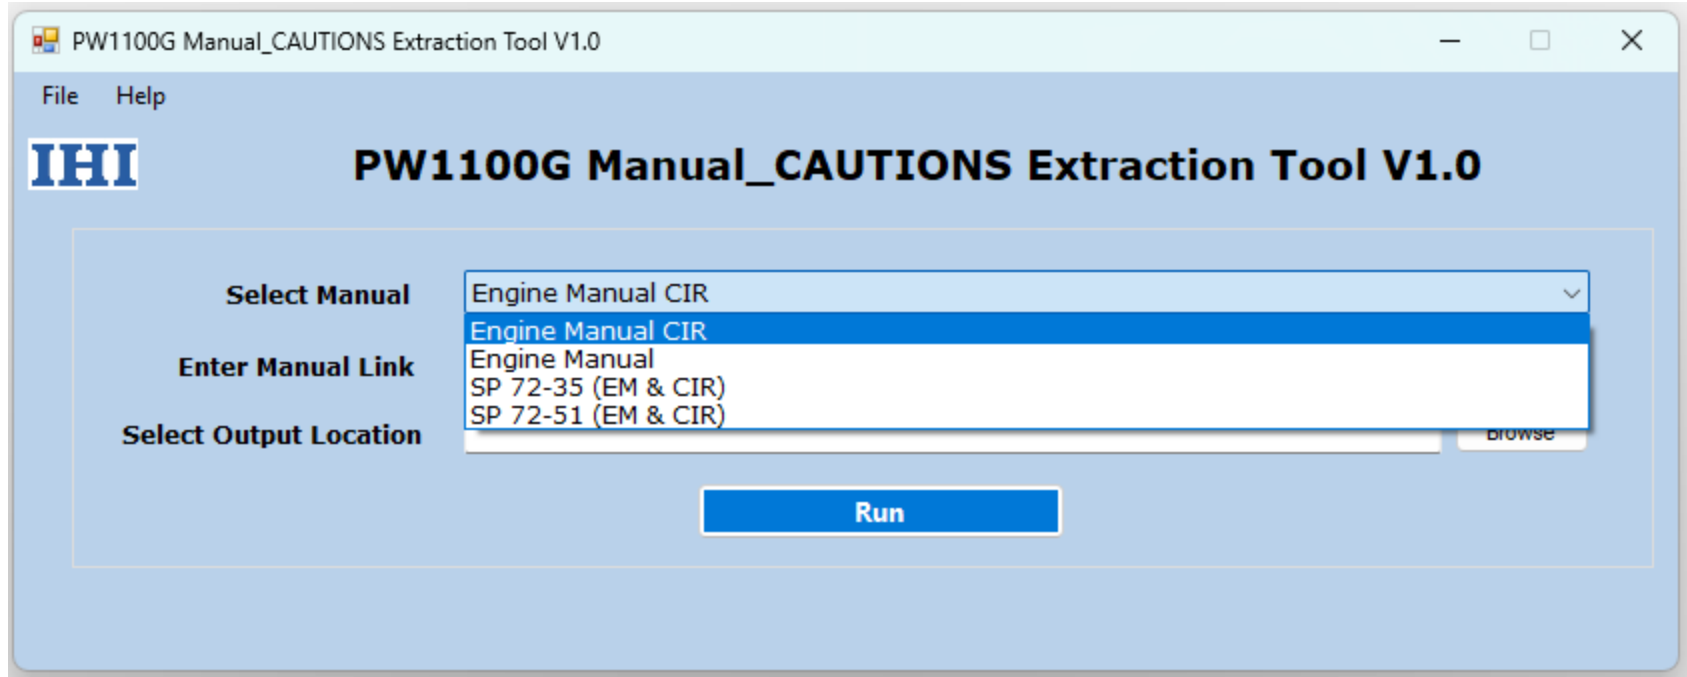

Tool User Interface

PW1100G Manual_CAUTIONS Extraction Tool V1.0

File Help

IHI **PW1100G Manual_CAUTIONS Extraction Tool V1.0**

Select Manual

Enter Manual Link

Select Output Location

Tool User Interface

Inputs

Manual Type

PW1100G Manual_CAUTIONS Extraction Tool V1.0

File Help

IHI

PW1100G Manual_CAUTIONS Extraction Tool V1.0

Select Manual Engine Manual CIR

Enter Manual Link

Select Output Location Browse

Run

Manual Link

Report Output location

Tool User Interface

• Tool functionality •

1. Manual Selection

The Manual Type drop-down list allows the user to select the Manual from which cautions will be extracted.

Available options:

- Engine Manual
- Engine Manual CIR
- SP 72-31 (EM & CIR)
- SP 72-51 (EM & CIR)

Select the appropriate Manual type before entering the Manual link.

2. Manual Link

The Manual Link field is used to enter the URL of the Manual page from which cautions need to be extracted.

Example:

http://127.0.0.1:8000/PW1000G-77445-19453-00/PW1000G-77445-16992-00.html	- EM
http://127.0.0.1:8000/PW1000G-77445-19453-00/PW1000G-77445-15653-00.html	- EM-CIR
<u>http://127.0.0.1:8002/PW1000G-77445-19155-00/SP 72-35 (EM & CIR)</u>	-
<u>http://127.0.0.1:8003/PW1000G-77445-19156-00/SP 72-51 (EM & CIR)</u>	-

←

→

↺

🕒

127.0.0.1:8000/PW1000G-77445-19453-00/PW1000G-77445-16992-00.html

☆

MID

🔌

📄

🔒

👤

📁

🌐

🌐

📁 Mochahost

📁 google

📁 Cyient

📄 Adobe Acrobat

📁 EIPD

About

search

- Navigation
- Search
- View

Home > PW1100G-JM Series Engine Manual PN 5316992

PMC: PW1000G-77445-16992-00 | Issue No: 046 | Issue Date: 2026-03-15

Sort by: Title Tec

Contents

Front Matter
Title Page
General Tools, Covers and Equipment
▼ PW1100G-JM Series Engine Manual PN 5316992
24-00-00 Electrical Power
29-00-00 Hydraulic Power
▶ 71-00-00 Power Plant
71-71-00 Engine Drain System
72-00-00 Engine
72-00-11 Fan Rotor - Module
72-00-15 Fan Drive Gearbox (FDG) - Module
72-00-21 Fan Case - Module
72-00-22 Fan Intermediate Case (FIC) - Module
72-00-30 Fan Drive Gearbox - Low Pressure Compressor Unit (FDG-LPC)

13 Documents Found in 72-00-11 Fan Rotor - Module

Do A Visual Inspection Of The Fan Rotor Module
Fan Rotor - Module - Visual Examination
PW1100G-A-72-00-11-00A-310A-B 009
Do A Visual Inspection Of The Fan Rotor Module
Fan Rotor - Module - Visual Examination
PW1100G-B-72-00-11-00A-310A-B 001
Do A Visual Inspection Of The Fan Rotor Module
Fan Rotor Module - Visual Examination
PW1100G-C-72-00-11-00A-310A-B 001
Remove The Fan Rotor Module Fan Hub Retaining Nut
Fan Rotor Module - Fan Hub Retaining Nut - Remove procedure
PW1100G-A-72-00-11-01A-520A-B 006
Remove The Fan Hub (Vertical)
Fan Rotor Module - Vertical Hub Removal - Remove procedure
PW1100G-B-72-00-11-02A-520A-B 008
Remove The Fan Hub (Vertical)
Fan Rotor Module - Vertical Hub - Remove Procedure
PW1100G-C-72-00-11-02A-520A-B 001

←

→

↺

📄 127.0.0.1:8000/PW1000G-77445-19453-00/PW1000G-77445-15653-00.html

☆

MID

🔥

📄

🔒

Paused

New Chrome

📁

🌐

🌐

📁 Mochahost

📁 google

📁 Cyient

📁 Adobe Acrobat

📁 EIPD

📁 A

About

search



Navigation

Search

View

Home > PW1100G-JM Series Cleaning, Inspection, And Repair Manual PN 5315653

PMC: PW1000G-77445-15653-00 | Issue No: 046 | Issue Date: 2026-03-15

Sort by: **Title** **Techname** **Infoname** **I**

Contents

[Front Matter](#)

[Title Page](#)

▼ PW1100G-JM Series Cleaning, Inspection, And Repair (CIR) Manual, PN 5315653

[71-71-00 Tubes And Hoses](#)

[72-00-00 Engine General](#)

[72-11-00 Fan Rotor](#)

[72-15-00 Fan Drive Gearbox \(FDG\)](#)

[72-21-00 Fan Case](#)

[72-22-00 Fan Intermediate Case](#)

[72-31-00 Low Pressure Compressor \(LPC\)](#)

[72-34-00 Compressor Intermediate Case \(CIC\)](#)

[72-35-00 High Pressure Compressor \(HPC\)](#)

[72-41-00 Diffuser Case](#)

41 Documents Found in 72-41-00 Diffuser Case

[Clean the Diffuser Case Assembly](#)

Diffuser Case Assembly - Clean And Apply Surface Protection
PW30K-A-72-41-0000-00A-250A-C | 016

[General Inspection Requirements - Diffuser Case Assembly](#)

Diffuser Case Assembly - Examinations, Tests And Checks
PW30K-A-72-41-0000-00A-300A-C | 002

[Visual Inspection - Diffuser Outer Case Assembly](#)

Case Assembly - Diffuser Outer - Visual Examination
PW30K-A-72-41-0111-00A-310A-C | 011

[Fluorescent Penetrant Inspection - Diffuser Outer Case Assembly](#)

Case Assembly - Diffuser Outer - Test For Surface Cracks By Fluorescent Penetrant Inspection (FPI)
PW30K-A-72-41-0111-00A-351A-C | 004

[Dimensional Inspection - Diffuser Outer Case Assembly](#)

Case Assembly - Diffuser Outer - Dimension Check
PW30K-A-72-41-0111-00A-361A-C | 006

[ECS Boss Threaded Hole Repair - Outer Diffuser Case Assembly \(RTN19CCJ77\)](#)

Case Assembly - Diffuser Outer - Thread/tap

SP 72-35 (EM & CIR) Link



Navigation

Search

View

[Home](#) > **PW1100G-JM Series SP-72-35 Special Procedures - High Pressure C 5319155**

PMC: PW1000G-77445-19155-00 | Issue No: 045 | Issue Date: 2026-06-15

Contents

[Welcome](#)

[Front Matter](#)

[Title Page](#)

▼ [SP-72-35 Special Procedures - High Pressure Compressor \(HPC\) Module](#)

[SP-72-35 Special Procedures - High Pressure Compressor \(HPC\) Module - Engine Manual \(Base Engine Models\)](#)

[SP-72-35 Special Procedures - High Pressure Compressor \(HPC\) Module - Engine Manual \(Advantage Engine Models\)](#)

[SP-72-35 Special Procedures - High Pressure Compressor \(HPC\) Module - Clean, Inspect, And Repair \(CIR\)](#)

[SP-72-35 Special Procedures - High Pressure Compressor \(HPC\) Module - Support Equipment And Tools](#)

SP 72-51 (EM & CIR) Link

127.0.0.1:8003/PW1000G-77445-19156-00/

MochahostgoogleCyientAdobe AcrobatEIPD

About

Navigation

Search

View

Home > PW1000G-JM Series SP-72-51 Special Procedures - High Pressure 1

5319156

PMC: PW1000G-77445-19156-00 | Issue No: 045 | Issue Date: 2026-06-15

Contents

Welcome

Front Matter

Title Page

▼ SP-72-51 Special Procedures - High Pressure Turbine (HPT) Module

SP-72-51 Special Procedures - High Pressure Turbine (HPT) Module - Engine Manual (Base Engine Models)

SP-72-51 Special Procedures - High Pressure Turbine (HPT) Module - Engine Manual (Advantage Engine Models)

SP-72-51 Special Procedures - High Pressure Turbine (HPT) Module - Clean, Inspect, And Repair (CIR)

SP-72-51 Special Procedures - High Pressure Turbine (HPT) Module - Support Equipment And Tools

Ensure that the Engine Manual link corresponds to the Manual type selected in the drop-down list.

NOTE : The port numbers may change

3. Output Location

The Output location specifies the path where the extracted Cautions report will be generated. Users may enter the full file path or browse to the desired location.

Example:

D:\Reports\CautionList.xlsx

4. Run Button

Click Run Button to begin the extraction process.

The tool will:

1. Open the specified Manual Link in the background.
2. Scan the Link for task pages.
3. Extract cautions from these task pages.

- If the selected manual link is EM, the output report will contain 2 worksheets:
 - Sheet 1: All EM cautions.
 - Sheet 2: EM Cautions having Information Code "-3xx".
 - If the selected manual link is EM_CIR, the output report will contain 2 worksheets:
 - Sheet 1: All EM_CIR cautions.
 - Sheet 2: EM_CIR Cautions having Information Code "-3xx".
 - If the selected manual link is SP 72-35, the output report will contain 3 worksheets:
 - Sheet 1: All EM cautions.
 - Sheet 2: All CIR cautions.
 - Sheet 3: EM & CIR Cautions having Information Code "-3xx".
 - If the selected manual link is SP 72-51, the output report will contain 3 worksheets:
 - Sheet 1: All EM cautions.
 - Sheet 2: All CIR cautions.
 - Sheet 3: EM & CIR Cautions having Information Code "-3xx".
4. Generate the report at the specified location.



Cautions Report

EM_CautionsList Public			Search
File Home Insert Draw Page Layout Formulas Data Review View Automate Developer Help			Comments Share
Clipboard Font Alignment Number Styles Cells Editing Sensitivity Add-ins			
A1			DMC
	A	B	C
1	DMC	Title	CautionText
2	PW1100G-A-24-21-01-00A-222A-D	Integrated Drive Generator (IDG) - Drain Oil	SOLVENTS THAT CONTAIN CHLORINE SHOULD NOT BE USED TO CLEAN EQUIPMENT REQUIRED TO CLEAN VARIABLE FREQUENCY GENERATOR WITH OIL. CHLORINE CONTAMINATION CAN CAUSE RAPID DETECTION OF OIL AND SUBSEQUENT GENERATOR DAMAGE.
3	PW1100G-A-24-21-01-00A-222A-D	Integrated Drive Generator (IDG) - Drain Oil	SOME HOT OIL UNDER PRESSURE CAN COME OUT OF THE OVERFLOW DRAIN HOSE WHEN IT IS COOLING. YOU MUST USE THE CORRECT SPECIFICATION OF CLEAN NEW OIL WHEN YOU ADD OR REPLACE THE OIL. INCORRECT OILS CAN CAUSE DAMAGE TO THE IDG.
4	PW1100G-A-24-21-01-00A-292A-D	Integrated Drive Generator (IDG) - Change Of Oil	SOLVENTS THAT CONTAIN CHLORINE SHOULD NOT BE USED TO CLEAN EQUIPMENT REQUIRED TO CLEAN INTEGRATED DRIVE GENERATOR WITH OIL. CHLORINE CONTAMINATION CAN CAUSE RAPID DETECTION OF OIL AND SUBSEQUENT GENERATOR DAMAGE.
5	PW1100G-A-24-21-01-00A-292A-D	Integrated Drive Generator (IDG) - Change Of Oil	DO NOT DO THIS TASK FOR A DISCONNECTED INTEGRATED DRIVE GENERATOR. THE OPERATION OF THE INTEGRATED DRIVE GENERATOR CAN CAUSE DAMAGE TO EQUIPMENT.
6	PW1100G-A-24-21-01-00A-292A-D	Integrated Drive Generator (IDG) - Change Of Oil	YOU MUST USE THE CORRECT SPECIFICATION OF CLEAN NEW OIL WHEN YOU ADD OR REPLACE THE OIL. INCORRECT OILS CAN CAUSE DAMAGE TO THE IDG.
7	PW1100G-A-24-21-01-00A-292A-D	Integrated Drive Generator (IDG) - Change Of Oil	MAKE SURE THE DRAIN VALVE HOSE IS CONNECTED TO LET THE OIL DRAIN TO THE CORRECT LEVEL. MUCH HEAT CAN OCCUR IF THE IDG IS FILLED WITH TOO MUCH OIL.
8	PW1100G-A-24-21-01-00A-292A-D	Integrated Drive Generator (IDG) - Change Of Oil	DO NOT DISCONNECT THE OVERFLOW DRAIN HOSE UNTIL THE FLOW DECREASES TO SINGLE DROPS. YOU MUST USE A SECOND WRENCH TO HOLD THE MATING PARTS WHEN YOU LOOSEN OR TIGHTEN THEM. IF YOU DO NOT OBEY THIS CAUTION, YOU CAN TWIST OR DAMAGE THE TUBES.
9	PW1100G-A-24-21-01-00A-292A-D	Integrated Drive Generator (IDG) - Change Of Oil	MAKE SURE THAT YOU APPLY ONLY SUFFICIENT PRESSURE WITH THE JACK TO HOLD THE WEIGHT OF THE IDG. MUCH PRESSURE ON THE IDG OR FAILURE TO HOLD THE IDG CORRECTLY CAN CAUSE DAMAGE TO THE IDG.
10	PW1100G-A-24-21-01-00A-520A-D	Remove The AC Generator - Integrated Drive Generator (IDG)	
	PW1100G-A-24-21-01-00A-520A-D	Remove The AC Generator - Integrated Drive Generator (IDG)	

EM Cautions Report

AutoSave Off EM_CautionsList Public Search			GS		
File Home Insert Draw Page Layout Formulas Data Review View Automate Developer Help			Comments Share		
Clipboard Font Alignment Number			Styles Cells Editing Sensitivity Add-ins		
A1 fx DMC					
	A	B	C		
1	DMC	Title	CautionText		
2	PW1100G-B-71-00-03-03A-320A-B	Test No. 9 - Engine Acceptance Test	THE FAN DUCT DOORS MUST BE IN THE OPEN POSITION AT IDLE POWER AND BELOW ONLY. MAK FAN DUCT DOORS ARE CLOSED BEFORE TAKING THE ENGINE ABOVE IDLE. IF YOU DO NOT OBEY T DAMAGE TO ENGINE PARTS CAN OCCUR.		
3	PW1100G-B-71-00-03-03A-320A-B	Test No. 9 - Engine Acceptance Test	IF AN ENGINE STALL OCCURS DURING THIS TEST, THE THRUST LEVER MUST BE MOVED TO MINIMI MORE THAN ONE SECOND AFTER THE STALL. FOLLOW PROCEDURE FOR NOT RECOVERABLE ENGI STALL MITIGATION IN Step.		
4	PW1100G-B-71-00-03-03A-320A-B	Test No. 9 - Engine Acceptance Test	IF AN ENGINE STALL OCCURS DURING THIS TEST, THE THRUST LEVER MUST BE MOVED TO MINIMI MORE THAN ONE SECOND AFTER THE STALL. FOLLOW PROCEDURE FOR NOT RECOVERABLE ENGI STALL MITIGATION IN Step.		
5	PW1100G-C-71-00-03-03A-320A-B	Test No. 9 - Engine Acceptance Test	THE FAN DUCT DOORS MUST BE IN THE OPEN POSITION AT IDLE POWER AND BELOW ONLY. MAK FAN DUCT DOORS ARE CLOSED BEFORE YOU TAKE THE ENGINE ABOVE IDLE. IF YOU DO NOT OBEY DAMAGE TO ENGINE PARTS CAN OCCUR.		
6	PW1100G-C-71-00-03-03A-320A-B	Test No. 9 - Engine Acceptance Test	IF AN ENGINE STALL OCCURS DURING THIS TEST, THE THRUST LEVER MUST BE MOVED TO MINIMI MORE THAN ONE SECOND AFTER THE STALL. THE PROCEDURES SHOWN IN "OPERATE THE ENGIN SURGE OR STALL" (PW1100G-A-71-00-00-01A-140A-B) AND THE START THE ENGINE (AFTER EMER SHUTDOWN) (PW1100G-A-71-00-00-00A-140A-B) MUST BE DONE. IF THESE PROCEDURES ARE NC CAN BE DONE TO THE TURBINE TIP SEALS.		
	PW1100G-C-71-00-03-03A-320A-B	Test No. 9 - Engine Acceptance Test	IF AN ENGINE STALL OCCURS DURING THIS TEST, THE THRUST LEVER MUST BE MOVED TO MINIMI MORE THAN ONE SECOND AFTER THE STALL. THE PROCEDURES SHOWN IN "OPERATE THE ENGIN SURGE OR STALL" (PW1100G-A-71-00-00-01A-140A-B) AND THE START THE ENGINE (AFTER EMER		

EM Cautions (IC-3xx) Report

AutoSave Off EMCIR_CautionsList Public • Saved to this PC Search			Comments Share		
File Home Insert Draw Page Layout Formulas Data Review View Automate Developer Help					
Clipboard Font Alignment Number Styles Cells Editing Sensitivity Add-ins					
A1 fx DMC					
	A	B	C		
1	DMC	Title	CautionText		
2	PW30K-A-72-00-0000-00A-810A-C	Dry And Oil The Seal Assembly - Carbon Seals	IF A SEAL ASSEMBLY USES A BELLOWS SPRING MAKE SURE IT IS PROTECTED FROM OIL. IF YOU DO CAUTION, DAMAGE TO THE ENGINE PARTS CAN OCCUR.		
3	PW30K-A-72-00-0000-00A-920A-C	Replace The Helical Coil Inserts - HPT Case Bracket Assembly	DO NOT INSTALL OVERSIZED INSERTS OR TWINSETS.		
4	PWMR30K-A-72-00-0000-00A-970B-C	Tack Weld Repair The Bushing (Vendor Application) - Clevis Assembly	EXCEPT FOR WORK OR SUPPLIES TO BE PERFORMED OR FURNISHED BY PRATT & WHITNEY, PRATT & WHITNEY DOES NOT ENDORSE THE WORK DONE BY THE COMPANY OR COMPANIES IDENTIFIED HEREIN OR ANY COMPANY AND DOES NOT ACCEPT RESPONSIBILITY TO ANY DEGREE FOR THE SELECTION OF SUCH COMPANIES FOR THE PERFORMANCE OF ANY WORK OR PROCUREMENT OF SUPPLIES.		
5	PW30K-A-72-11-0011-01A-609A-C	Touch-Up The Fluoroelastomer Coat - Inlet Cone Cover (RTN14CC476D)	BE CAREFUL NOT TO CAUSE DAMAGE TO THE FIBERGLASS LAYER WHEN YOU USE RAZOR KNIFE TO REMOVE DAMAGED PROTECTIVE COAT.		
6	PW30K-A-72-11-0011-00A-970A-C	Laminate Repair On Bolt Slot Erosion (Vendor Application) - Cover - Inlet Cone	EXCEPT FOR WORK OR SUPPLIES TO BE PERFORMED OR FURNISHED BY PRATT & WHITNEY, PRATT & WHITNEY DOES NOT ENDORSE THE WORK PERFORMED BY THE COMPANY OR COMPANIES IDENTIFIED HEREIN OR ANY COMPANY AND DOES NOT ACCEPT RESPONSIBILITY TO ANY DEGREE FOR THE SELECTION OF SUCH COMPANIES FOR THE PERFORMANCE OF ANY WORK OR PROCUREMENT OF SUPPLIES.		
7	PW30K-A-72-11-0011-02A-970A-C	Replace The Fluoroelastomer Coat (Vendor Application) - Inlet Cone Cover (RTN11CC131A)	EXCEPT FOR WORK OR SUPPLIES TO BE PERFORMED OR FURNISHED BY PRATT & WHITNEY, PRATT & WHITNEY DOES NOT ENDORSE THE WORK DONE BY THE COMPANY OR COMPANIES IDENTIFIED HEREIN OR ANY COMPANY AND DOES NOT ACCEPT RESPONSIBILITY TO ANY DEGREE FOR THE SELECTION OF SUCH COMPANIES FOR THE PERFORMANCE OF ANY WORK OR PROCUREMENT OF SUPPLIES.		
8	PW30K-A-72-11-0015-00A-609A-C	Touch-Up The Fluoroelastomer Coat - Inlet Cone Assembly (RTN15CC200B)	WHEN YOU REMOVE THE DAMAGED PROTECTIVE COAT, MAKE SURE THAT YOU DO NOT CAUSE DAMAGE TO THE FIBERGLASS LAYER.		
			SURFACES MUST BE CLEANED AND BONDING MUST OCCUR IN A PWA 104 AREA. IF YOU DO NOT OBEY		

CIR Cautions Report

AutoSaveOff

SP 72-35_CautionsList

Public • Saved to this PC

Search

FileHomeInsertDrawPage LayoutFormulasDataReviewViewAutomateDeveloperHelp

CommentsShare

PasteClipboard

Font

Alignment

Number

Styles

Cells

Editing

Sensitivity

Add-ins

A1

fx

DMC

	A	B	C
1	DMC	Title	CautionText
2	SP1100G-B-72-35-30-00A-251A-B	Clean The High Pressure Compressor (HPC) Rotor Assembly With Chemical Agent	THE ASSEMBLY MUST BE AT THE AXIAL ROTOR LEVEL WITH ALL THE PARTS FULLY ASSEMBLED THA Table. IF YOU DO NOT OBEY THIS CAUTION, DAMAGE TO THE ASSEMBLY CAN OCCUR.
3	SP1100G-B-72-35-30-00A-530A-B	Disassemble The Tie Shaft From The High Pressure Compressor (HPC) Rotor Assembly	THE PWA 111000 PULLER ADAPTER MUST BE CORRECTLY INSTALLED TO THE TIE SHAFT BEFORE YO HYDRAULIC PRESSURE. IF YOU DO NOT OBEY THIS CAUTION, DAMAGE TO THE PARTS CAN OCCUR
4	SP1100G-B-72-35-30-00A-530A-B	Disassemble The Tie Shaft From The High Pressure Compressor (HPC) Rotor Assembly	DO NOT APPLY TOO MUCH PRESSURE TO THE HYDRAULIC PUMP. TOO MUCH PRESSURE CAN CAU PARTS.
5	SP1100G-B-72-35-30-00A-530A-B	Disassemble The Tie Shaft From The High Pressure Compressor (HPC) Rotor Assembly	DO NOT APPLY TOO MUCH PRESSURE TO THE HYDRAULIC PUMP. TOO MUCH PRESSURE CAN CAU PARTS.
6	SP1100G-B-72-35-30-00A-530A-B	Disassemble The Tie Shaft From The High Pressure Compressor (HPC) Rotor Assembly	DO NOT APPLY MORE THAN 570 Â°F (298 Â°C) TO THE FRONT HUB. IF YOU DO NOT OBEY THIS CA TO ENGINE PARTS CAN OCCUR.
7	SP1100G-B-72-35-30-00A-530A-B	Disassemble The Tie Shaft From The High Pressure Compressor (HPC) Rotor Assembly	DO NOT APPLY MORE THAN 480 Â°F (248 Â°C) TO THE PART. IF YOU DO NOT OBEY THIS CAUTION TOOLS CAN OCCUR.
8	SP1100G-B-72-35-30-00A-530A-B	Disassemble The Tie Shaft From The High Pressure Compressor (HPC) Rotor Assembly	DO NOT LET TIE SHAFT [63] TOUCH THE BORE OF THE HPC ROTOR ASSEMBLY [1] WITH THIS REMO YOU DO NOT OBEY THIS CAUTION, DAMAGE TO ENGINE PARTS CAN OCCUR .
9	SP1100G-B-72-35-30-00B-709A-B	Balance The High Pressure Compressor (HPC) Rotor Assembly	DO NOT APPLY TOO MUCH HEAT WITH THE HEATER. IF YOU DO NOT OBEY THIS CAUTION, DAMA PARTS CAN OCCUR.
10	SP1100G-B-72-35-30-00B-709A-B	Balance The High Pressure Compressor (HPC) Rotor Assembly	LOWER THE BALANCE ARBOR SLOWLY WITH THE HOIST ONTO THE HPC ROTOR ASSEMBLY REAR H VERTICAL MOTION. IF YOU DO NOT OBEY THIS CAUTION, DAMAGE TO ENGINE PARTS CAN OCCU
11	SP1100G-B-72-35-30-00B-709A-B	Balance The High Pressure Compressor (HPC) Rotor Assembly	DO NOT CONTINUE IF THE BALANCE ARBOR IS NOT CORRECTLY SEATED. IF YOU DO NOT OBEY TH DAMAGE TO ENGINE PARTS CAN OCCUR.

EM (All)

CIR (All)

EM&CIR (IC-3xx)

+

SP 72-35 Cautions Report

AutoSave

Off

SP 72-51_CautionsList

Public • Saved to this PC

Search

File

Home

Insert

Draw

Page Layout

Formulas

Data

Review

View

Automate

Developer

Help

Clipboard

Paste

Font

Alignment

Number

Styles

Cells

Editing

Sensitivity

Add-ins

Calibri

11

A⁺

A⁻

B

I

U

Font Color

Background Color

General

Conditional Formatting

Format as Table

Cell Styles

Insert

Delete

Format

Σ

Sort & Filter

Find & Select

Sensitivity

Add-ins

A1

fx

DMC

	A	B	C
1	DMC	Title	CautionText
2	SP1100G-B-72-00-51-00A-520A-B	Remove The High Pressure Turbine (HPT) Module Coupling Nut	MAKE SURE THE ADAPTER ENGAGES THE THREADS ON THE HPC SHAFT FULLY. A PARTIALLY THREADED ADAPTER CAN CAUSE DAMAGE TO THE PART.
3	SP1100G-B-72-00-51-00A-520A-B	Remove The High Pressure Turbine (HPT) Module Coupling Nut	MAKE SURE THE DETAIL PULLER ADAPTER FULLY ENGAGES TO THE THREADS ON THE TIE SHAFT. IF YOU DO NOT OBEY THIS CAUTION, DAMAGE TO THE TOOL CAN OCCUR.
4	SP1100G-B-72-00-51-00A-520A-B	Remove The High Pressure Turbine (HPT) Module Coupling Nut	MAKE SURE YOU LOOSEN THE PULLER ADAPTER A HALF TURN. IF YOU DO NOT OBEY THIS CAUTION, THE PULLER ADAPTER CAN GET STUCK.
5	SP1100G-B-72-00-51-00A-520A-B	Remove The High Pressure Turbine (HPT) Module Coupling Nut	MAKE SURE TO LOOSEN THE LOCKRING TWO FULL TURNS. IF YOU DO NOT OBEY THIS CAUTION, THE LOCKRING CAN GET STUCK AND DAMAGE TO THE ENGINE PARTS AND TOOLING CAN OCCUR.
6	SP1100G-B-72-00-51-00A-520A-B	Remove The High Pressure Turbine (HPT) Module Coupling Nut	MAKE SURE THE MEASUREMENT IS WITHIN 0.073 INCH (1.854 mm) OF THE MEASUREMENT MARK ON THE PULLER ADAPTER. IF MEASUREMENT IS NOT MET, DAMAGE TO THE ENGINE HARDWARE CAN OCCUR.
7	SP1100G-B-72-00-51-00A-520A-B	Remove The High Pressure Turbine (HPT) Module Coupling Nut	WHEN REMOVING THE ANTI-TORQUE ADAPTER, BE CAREFUL WHEN REMOVING THE DETAIL CAP AND INSTALLING THEM INTO THE STORAGE HOLES ON THE ANTI-TORQUE ADAPTER OR ELSE DAMAGE TO THE ENGINE CAN OCCUR.
8	SP1100G-B-72-00-51-00A-720A-B	Prepare The HPT For Installation (Vertical)	MAKE SURE THE JAWS ARE FULLY ENGAGED TO THE HPT 2ND STAGE HUB BEFORE YOU LIFT THE HPT. IF YOU DO NOT OBEY THIS CAUTION, DAMAGE TO ENGINE PARTS CAN OCCUR.
9	SP1100G-B-72-00-51-01C-720A-B	Install The High Pressure Turbine (HPT) Module (Vertical)	IT IS HIGHLY RECOMMENDED THAT THE HPT INSTALLATION AND THE HPT COUPLING NUT PROCEDURE BE COMPLETED AS SOON AS POSSIBLE CONSECUTIVELY. IF YOU DO NOT OBEY THIS CAUTION, EXCESSIVE ENGINE VIBRATION CAN OCCUR.
	SP1100G-B-72-00-51-01C-720A-B	Install The High Pressure Turbine (HPT) Module (Vertical)	USE THE HOIST TO HOLD THE WEIGHT OF THE HPT MODULE. DO NOT PUT THE FULL WEIGHT OF THE HPT MODULE ON THE ENGINE PARTS.

<

>

EM (All)

CIR (All)

EM&CIR (IC-3xx)

+

SP 72-51 Cautions Report

IHI	Tatsuya Ito-San	<u>ito0114@ihi-g.com</u>
CYIENT Onsite	Suraj Prakash	<u>prakash7808@ihi-g.com</u>
CYIENT Offshore	Veerendra Kotari	<u>Veerendra.Kotari@cyient.com</u>

Thank You

Merci

Dank u wel

Danke

Gracias

ありがとうございました

شكرا