

EXTRACT Cautions FROM ENGINE MANUAL Tool

By Cyient Offshore Team

Table of contents

Sl.NO	Contents	Slide. No
<u>1</u>	<u>Background and Objective</u>	<u>3</u>
<u>2</u>	<u>Revision History</u>	<u>4</u>
<u>3</u>	<u>Tool Interface</u>	<u>5-6</u>
<u>4</u>	<u>Inputs</u>	<u>7</u>
<u>5</u>	<u>Tool functionality</u>	<u>8-9</u>
<u>6</u>	<u>Output</u>	<u>10</u>
<u>7</u>	<u>Contact</u>	<u>11</u>

- **Background and Objective**

BACKGROUND

-

OBJECTIVE


The objective of this tool is to automate the extraction of caution statements from


- Engine Manual
- Engine Manual CIR
- SP 72-35
- SP 72-51

- **Revision History**

Version	Date Updated	Remarks
V1.0	19-Aug-2026	Initial version of tool

- **Tool Interface**
- Below picture is the user interface of **Extract Cautions From Engine Manual Tool**.

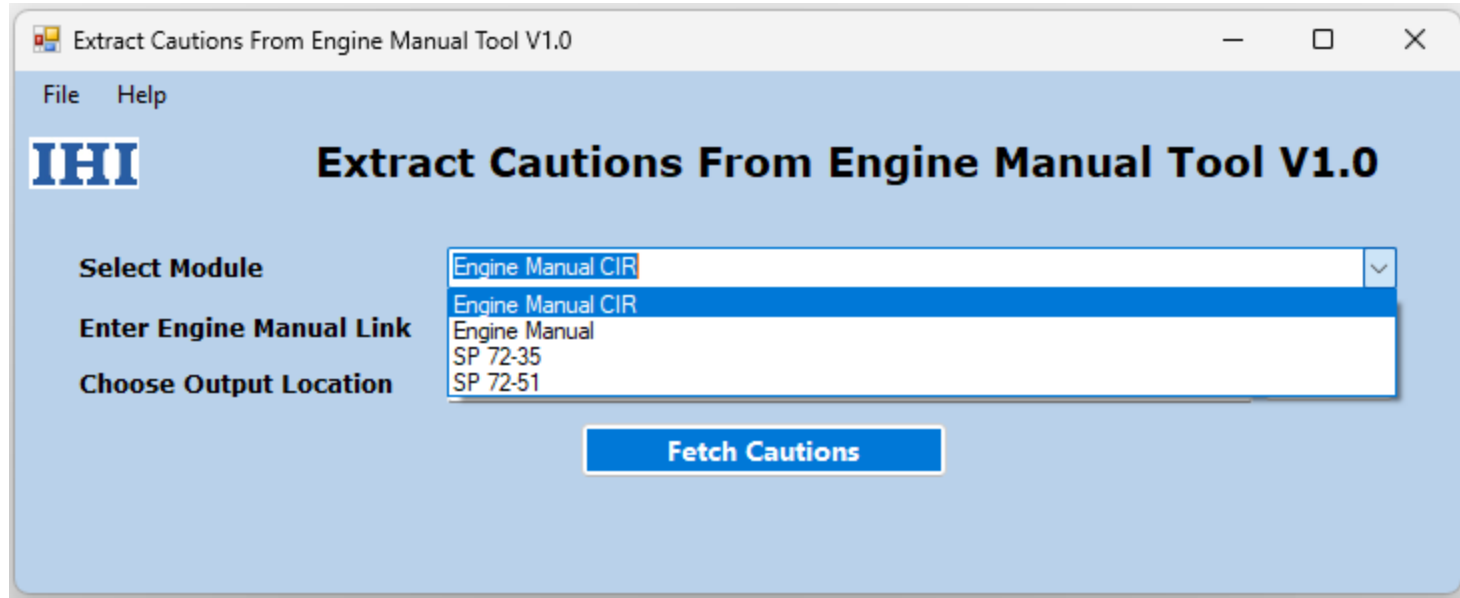

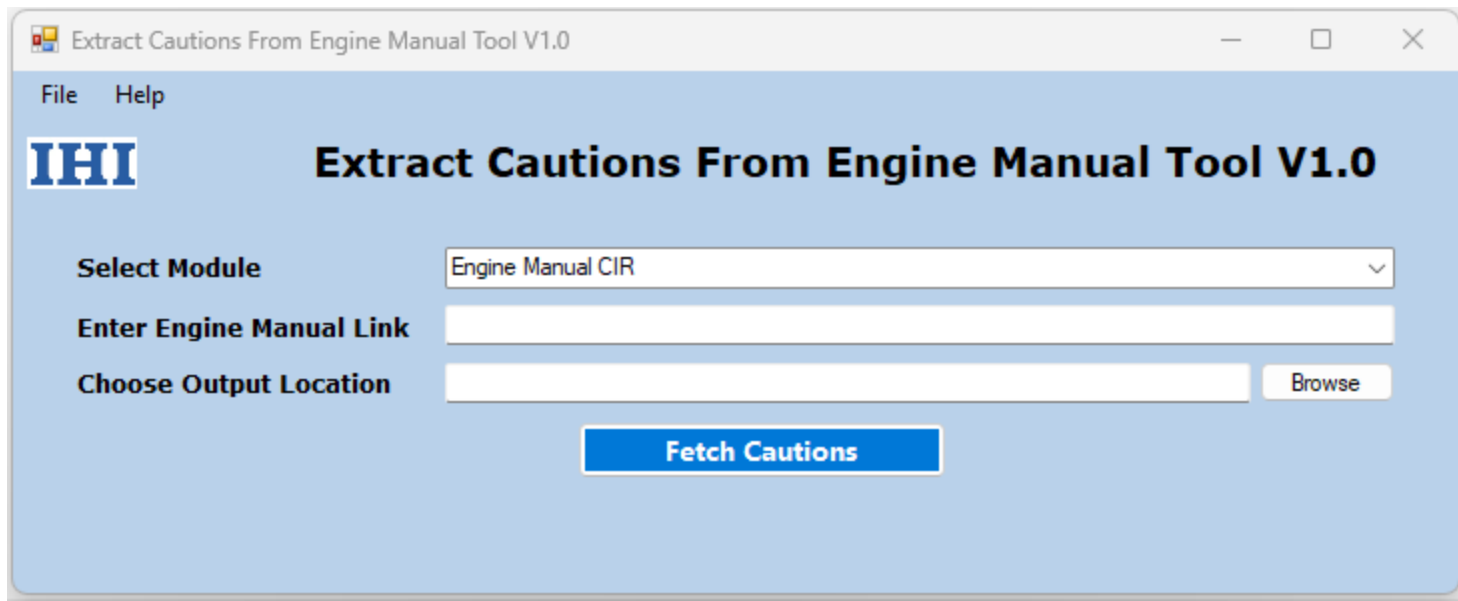

Inputs

Module Type

The screenshot shows a software window titled 'Extract Cautions From Engine Manual Tool V1.0'. It features a menu bar with 'File' and 'Help'. Below the menu is the IHI logo and the title 'Extract Cautions From Engine Manual Tool V1.0'. The main interface contains three input fields on the left: 'Select Module' (a dropdown menu showing 'Engine Manual CIR'), 'Enter Engine Manual Link' (a text box), and 'Choose Output Location' (a text box with a 'Browse' button to its right). A blue 'Fetch Cautions' button is centered below these fields. Four teal arrows point from external labels to the inputs: 'Module Type' points to the 'Select Module' dropdown, 'Module Link' points to the 'Enter Engine Manual Link' text box, and 'Report Output location' points to the 'Choose Output Location' text box. A fourth arrow points from the 'Fetch Cautions' button to the 'Report Output location' label.

Select Module

Engine Manual CIR

Enter Engine Manual Link

Choose Output Location

Browse

Fetch Cautions

Module Link

Report Output location

• Tool functionality •

1. Module Selection

The Module Type drop-down list allows the user to select the Engine Manual document from which cautions will be extracted.

Available options:

- Engine Manual
- Engine Manual CIR
- SP 72-31
- SP 72-51

Select the appropriate manual type before entering the Engine Manual link.

2. Engine Manual Link

The Engine Manual Link field is used to enter the URL of the module page from which cautions need to be extracted.

Example:

<http://127.0.0.1:8000/PW1000G-77445-19453-00/PW1000G-77445-15653-00.html> (EM_CIR)

<http://127.0.0.1:8001/PW1000G-77445-19453-00/PW1000G-77445-16992-00.html> (EM)

<http://127.0.0.1:8002/PW1000G-77445-19155-00/>
(SP_CIR_72_35)

<http://127.0.0.1:8003/PW1000G-77445-19156-00/>
(SP_CIR_72_51)

Ensure that the Engine Manual link corresponds to the module type selected in the drop-down list.

NOTE : The port numbers may change

3. Output Location

The Output location specifies the path where the extracted caution report will be generated. Users may enter the full file path or browse to the desired location.

Example:

D:\Reports\CautionList.xlsx

4. Fetch Cautions Button

Click Fetch Cautions to begin the extraction process.

The tool will:

1. Open the specified page in the background.
2. Scan the Engine Manual Page for caution statements.
3. Extract all identified cautions.
4. Generate the report at the specified location.

Output

Cautions Report



CautionsList Public		
Search		
File Home Insert Draw Page Layout Formulas Data Review View Automate Developer Help		
Clipboard Font Alignment Number Styles Cells Editing Sensitivity Add-ins		
A1 DMC		
DMC	Title	CautionText
PW1100G-A-24-21-01-00A-222A-D	Integrated Drive Generator (IDG) - Drain Oil	SOLVENTS THAT CONTAIN CHLORINE SHOULD NOT BE USED TO CLEAN EQUIPMENT REQUIRED TO VARIABLE FREQUENCY GENERATOR WITH OIL. CHLORINE CONTAMINATION CAN CAUSE RAPID D OIL AND SUBSEQUENT GENERATOR DAMAGE.
PW1100G-A-24-21-01-00A-222A-D	Integrated Drive Generator (IDG) - Drain Oil	SOME HOT OIL UNDER PRESSURE CAN COME OUT OF THE OVERFLOW DRAIN HOSE WHEN IT IS CO YOU MUST USE THE CORRECT SPECIFICATION OF CLEAN NEW OIL WHEN YOU ADD OR REPLACE TI INCORRECT OILS CAN CAUSE DAMAGE TO THE IDG.
PW1100G-A-24-21-01-00A-292A-D	Integrated Drive Generator (IDG) - Change Of Oil	SOLVENTS THAT CONTAIN CHLORINE SHOULD NOT BE USED TO CLEAN EQUIPMENT REQUIRED TO INTEGRATED DRIVE GENERATOR WITH OIL. CHLORINE CONTAMINATION CAN CAUSE RAPID DETE OIL AND SUBSEQUENT GENERATOR DAMAGE.
PW1100G-A-24-21-01-00A-292A-D	Integrated Drive Generator (IDG) - Change Of Oil	DO NOT DO THIS TASK FOR A DISCONNECTED INTEGRATED DRIVE GENERATOR. THE OPERATION INTEGRATED DRIVE GENERATOR CAN CAUSE DAMAGE TO EQUIPMENT.
PW1100G-A-24-21-01-00A-292A-D	Integrated Drive Generator (IDG) - Change Of Oil	YOU MUST USE THE CORRECT SPECIFICATION OF CLEAN NEW OIL WHEN YOU ADD OR REPLACE TI INCORRECT OILS CAN CAUSE DAMAGE TO THE IDG.
PW1100G-A-24-21-01-00A-292A-D	Integrated Drive Generator (IDG) - Change Of Oil	MAKE SURE THE DRAIN VALVE HOSE IS CONNECTED TO LET THE OIL DRAIN TO THE CORRECT LEVE MUCH HEAT CAN OCCUR IF THE IDG IS FILLED WITH TOO MUCH OIL.
PW1100G-A-24-21-01-00A-292A-D	Integrated Drive Generator (IDG) - Change Of Oil	DO NOT DISCONNECT THE OVERFLOW DRAIN HOSE UNTIL THE FLOW DECREASES TO SINGLE DRO YOU MUST USE A SECOND WRENCH TO HOLD THE MATING PARTS WHEN YOU LOOSEN OR TIGHTE IF YOU DO NOT OBEY THIS CAUTION, YOU CAN TWIST OR DAMAGE THE TUBES.
PW1100G-A-24-21-01-00A-520A-D	Remove The AC Generator - Integrated Drive Generator (IDG)	MAKE SURE THAT YOU APPLY ONLY SUFFICIENT PRESSURE WITH THE JACK TO HOLD THE WEIGHT MUCH PRESSURE ON THE IDG OR FAILURE TO HOLD THE IDG CORRECTLY CAN CAUSE DAMAGE TO
PW1100G-A-24-21-01-00A-520A-D	Remove The AC Generator - Integrated Drive Generator (IDG)	

IHI	Tatsuya Ito-San	<u>ito0114@ihi-g.com</u>
CYIENT Onsite	Suraj Prakash	<u>prakash7808@ihi-g.com</u>
CYIENT Offshore	Veerendra Kotari	<u>Veerendra.Kotari@cyient.com</u>

Thank You

Merci

Dank u wel

Danke

Gracias

ありがとうございました

شكرا