

NESPRESSO  
EXPERT  
MY MACHINE

NESPRESSO®

 EN	Instruction manual	 CN	3
 HK		 KR	28
 TW			55

# Get the App / App

- ① Download the *Nespresso* App.  
If you have it already, please update the App.


*Nespresso* App



To check your device's compatibility, go on [www.nespresso.com](http://www.nespresso.com)  
[www.nespresso.com](http://www.nespresso.com)

- ② Launch the App.


App

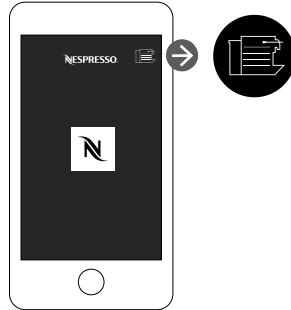

- ③ Click on the Machine Icon.

## Pairing /

- i** Please remember that the *Bluetooth®* mode must be activated beforehand on your smartphone or tablet.

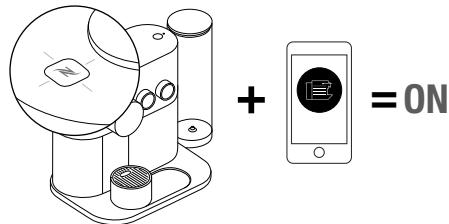


When the pairing is complete, the *Nespresso Light* will blink 3 times.

*Nespresso*  
3

## Connectivity Functions /

- Recipe Management
- Capsules stock management
- Schedule a coffee brewing
- Brew Now
- Maintenance notifications
- Descaling alert
- And more to see via the App

App

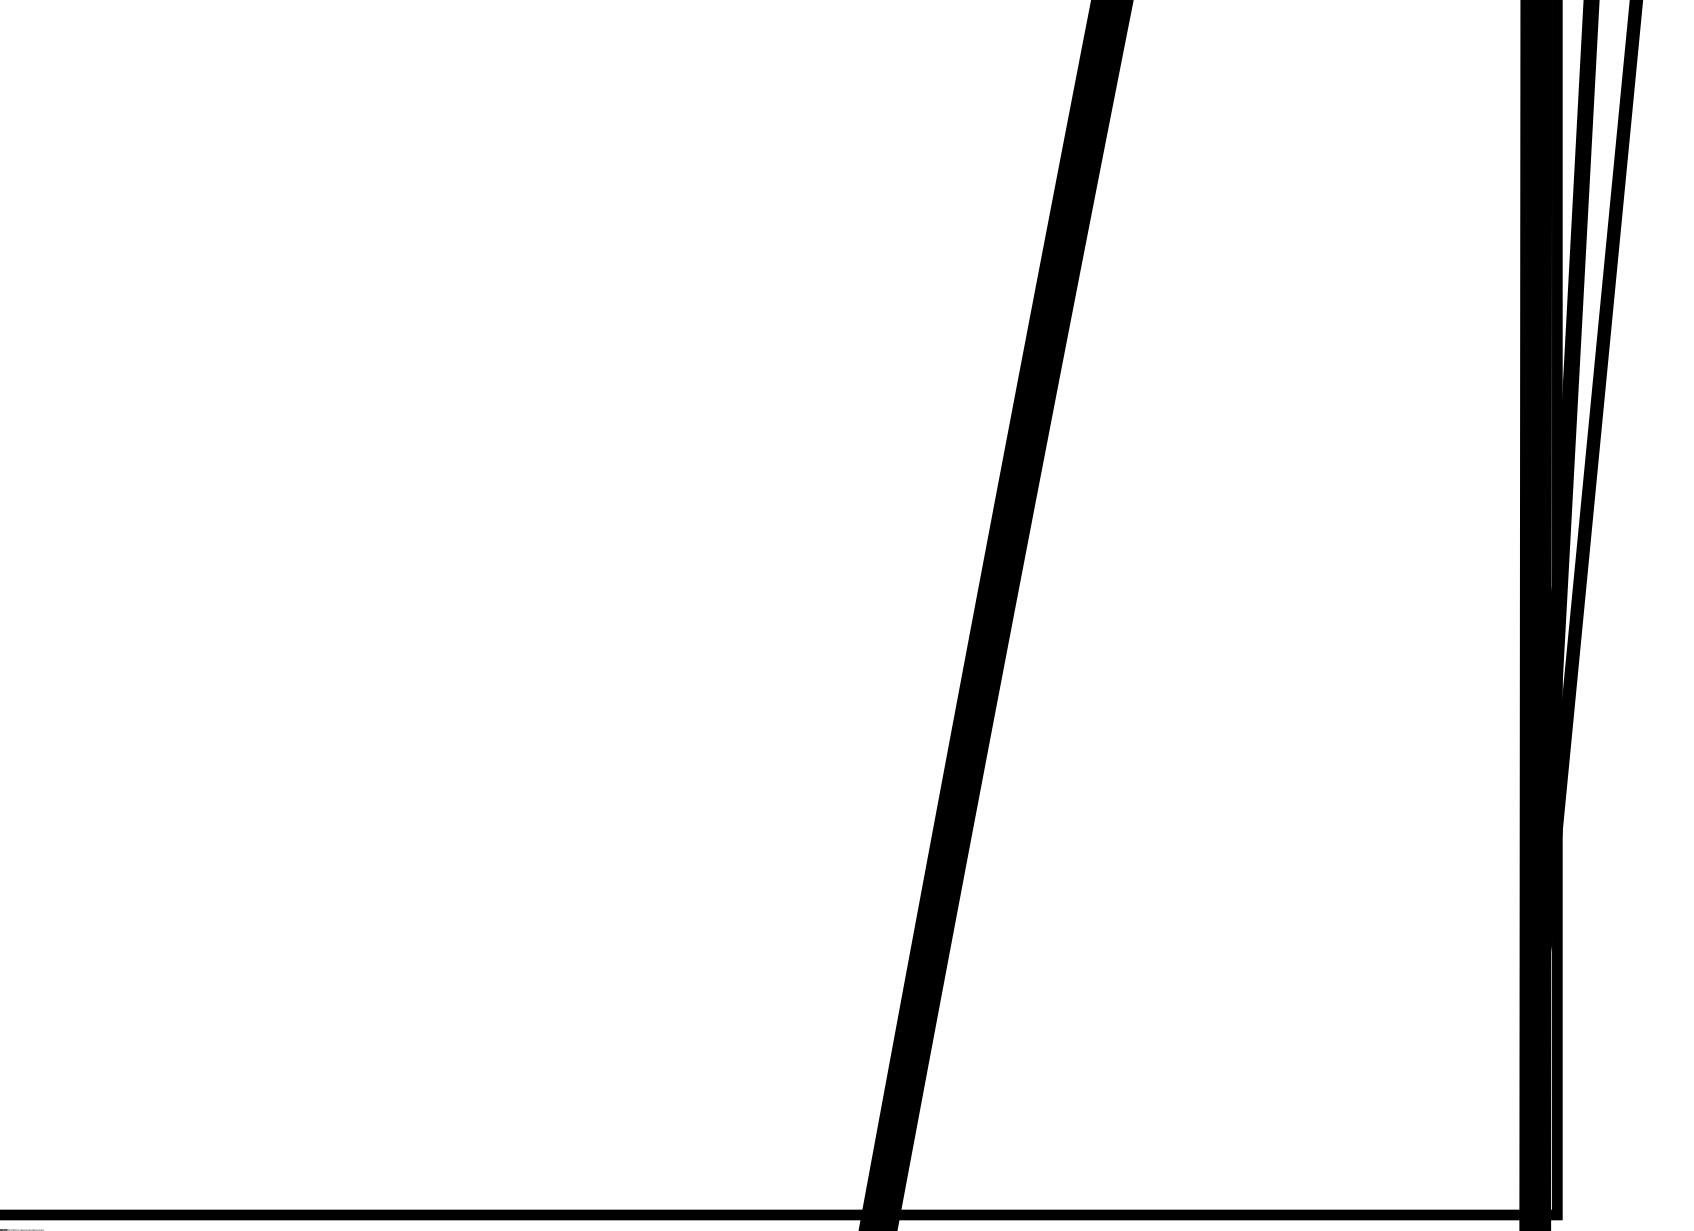

# C80 Specifications / C80

	220 V~, 50 Hz, 1150-1260 W
Frequency /	2.402 - 2.480 GHz
	MaxTransmit Power 4dBm /
<b>P<sub>max</sub></b>	19 bar / 1.9 MPa / 19 / 1.9 MPa
	Standard version: ~4.4 kg / ~4.4
	~1.11 L / ~1.11
	38.05 cm
	28.7 cm
	22.3 cm

# Content /

Get the App /	App	3
Pairing /		3
Connectivity Functions /		3
Packaging Content /		4
Nespresso Expert / Nespresso Expert		4
Specifications /		5
Safety Precautions /		6-11
Machine Overview /		12
First Use (or after a long period of non-use) /		13
Turning the machine ON/OFF /		14
Regular Coffee Preparation /		15-16
Entering the settings mode /		17
Settings mode: Energy Saving Concept /		17
Programming the water volume /		18
Settings mode: Reset to Factory Settings /		18-19
Settings mode: Emptying the System /		19
Cleaning /		20
Water Hardness /		21
Descaling /		22-23
Troubleshooting /		24-25
Contact Nespresso Club /		26
Disposal and Environmental Protection /		26
Limited Guarantee /		27

(EN)  
(CN)

# EN Safety Precautions



**⚠ CAUTION:** the safety precautions are part of the appliance. Read them carefully before using your new appliance for the first time. Keep them in a place where you can find and refer to them later on.

**⚠ CAUTION:** when you see this sign, please refer to the safety precautions to avoid possible harm and damage.

**⚠ CAUTION:** risks of injuries if you don't use this appliance correctly.

**⚠ CAUTION:** after using, do not touch hot surfaces (brewing unit, coffee and hot water nozzles), subjected to residual heat.

**⚠ CAUTION:** do not insert foreign objects into the

## water tank and the brewing unit.

**ℹ INFORMATION:** when you see this sign, please take note of the advice for the correct and safe usage of your appliance.

- The appliance is intended to prepare beverages according to these instructions.
- Do not use the appliance for anything other than its intended use.
- This appliance has been designed for use indoors and in non-extreme temperature conditions only.
- Protect the appliance from direct sunlight, prolonged water splash and humidity.
- This appliance is intended to be used in households and similar applications only such as: staff kitchen areas in shops, offices and other working environments, farm

houses; by clients in hotels, motels and other residential environments; bed and breakfast type environments.

- This appliance may be used by children who are at least 8 years of age, as long as they are supervised and have been given instructions about using the appliance safely and are fully aware of the dangers involved. Cleaning and user maintenance shall not be conducted by children unless they are older than 8 and they are supervised by an adult.

- Keep the appliance and its cord out of reach of children under 8 years of age.
- This appliance may be used by persons with reduced physical, sensory or mental capabilities, or whose experience or knowledge is not sufficient, provided they are supervised or have received instruction to use the appliance safely and

understand the dangers.

- Children shall not use the device as a toy.
- The manufacturer accepts no responsibility and the guarantee will not apply for any commercial use, inappropriate handling or use of the appliance, any damage resulting from use for other purposes, faulty operation, repair by non-professionals or failure to comply with the instructions.

## Always follow the cleaning instruction to clean your appliance.

- Unplug the appliance.
- Do not clean the appliance while hot.
- Clean with a damp cloth or sponge.
- Never immerse the appliance in water or put it under running water.

## Avoid risk of fatal electric shock and fire.

- In case of an emergency: immediately remove the plug from the power socket.
- Only plug the appliance into suitable, easily accessible, earthed mains connections. Make sure that the voltage of the power source is the same as that specified on the rating plate. The use of an incorrect connection voids the guarantee.

## The appliance must only be connected after installation.

- Do not pull the cord over sharp edges, clamp it or allow it to hang down.
- Keep the cord away from heat and damp.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons, in order to avoid all risks.

- If the cord is damaged, do not operate the appliance. Return the appliance to the *Nespresso Club* or to a *Nespresso* authorised representative.
  - If an extension cord is required, use only an earthed cord with a conductor cross-section of at least 1.5 mm<sup>2</sup> or matching input power.
  - To avoid hazardous damage, never place the appliance on or beside hot surfaces such as radiators, stoves, ovens, gas burners, open flame, or similar.
  - Always place it on a horizontal, stable and even surface. The surface must be resistant to heat and fluids, like water, coffee, descale fluid or similar liquids.
  - Disconnect the appliance from the mains when not in use for a long period. Disconnect by pulling out the plug and not by pulling the cord itself or the cord may become damaged.
  - Before cleaning and servicing, remove the plug from the mains socket and let the appliance cool down.
  - Never touch the cord with wet hands.
  - Never immerse the appliance or part of it in water or other liquid.
  - Never put the appliance or part of it in a dishwasher.
  - Electricity and water together is dangerous and can lead to fatal electrical shocks.
  - Do not open the appliance. Hazardous voltage inside!
  - Do not put anything into any openings. Doing so may cause fire or electrical shock!
- Avoid possible harm when operating the appliance.**
- Never leave the appliance unattended in case of manually operated brewing mode. In case of programmed or remote brewing mode, additional safety precautions must be undertaken to avoid any possible harm, such as: respect the intended use, make sure the cup of adequate size is placed on the cup support, slider is completely closed, ensure there is water in the water tank and keep the appliance and its cord out of reach of unassisted children or pets.
  - Do not use the appliance if it is damaged or not operating perfectly. Immediately remove the plug from the power socket. Contact the *Nespresso Club* or *Nespresso* authorised representative for examination, repair or adjustment.
  - A damaged appliance can cause electrical shocks, burns and fire.
  - Always completely close the slider and never open it during

## EN Safety Precautions

- operation. Scalding may occur.
- Do not put fingers under coffee outlet, risk of scalding.
- Do not put fingers into capsule compartment or the capsule shaft. Danger of injury!
- Water could flow around a capsule when not perforated by the blades and damage the appliance.
- Never use a damaged or deformed capsule. If a capsule is blocked in the capsule compartment, turn the machine off and unplug it before any operation. Call the *Nespresso Club* or *Nespresso* authorised representative.
- Fill the water tank only with fresh potable water.
- Empty water tank if the appliance will not be used for an extended time (holidays, etc.).
- Replace water in water tank when the appliance is not operated for a weekend or a

- similar period of time.
- Do not use the appliance without the drip tray and drip grid to avoid spilling any liquid on surrounding surfaces.
- Do not touch hot surfaces. Use handles, protected surfaces or knobs.
- Do not use any strong cleaning agent or solvent cleaner. Use a damp cloth and mild cleaning agent to clean the surface of the appliance.
- To clean machine, use only clean cleaning tools.
- When unpacking the machine, remove the plastic film and dispose.
- This appliance is designed for *Nespresso* coffee capsules available exclusively through the *Nespresso Club* or your *Nespresso* authorised representative.
- All *Nespresso* appliances pass stringent controls. Reliability tests under practical

- conditions are performed randomly on selected units. This can show traces of any previous use.
- *Nespresso* reserves the right to change instructions without prior notice.
- This machine contains magnets.

### Descaling

- *Nespresso* descaling agent, when used correctly, helps ensure the proper functioning of your machine over its lifetime and ensures that your coffee experience is as perfect as the first day.
- *Nespresso* descaling agent has been specifically developed for *Nespresso* machines; the use of any other descaling agent may lead to machine component damage or an insufficient descaling process.
- Your *Nespresso* machine

calculates when a descale is necessary based on the amount of water used and your water hardness level. This is set at the first use with the help of the water hardness test stick. Make sure to test the water hardness again if you use your machine in another state/region.

- Make sure you descale your machine as soon as the machine requests it; a late descaling procedure may not be completely efficient.

**SAVE THESE INSTRUCTIONS**  
**Pass them on to any subsequent user.**  
**This instruction manual is also available as a PDF at [nespresso.com](http://nespresso.com)**



.8

8

8

8

9

(CN)

Nespresso


1.5

/

10

- 
- 
- 
- Nespresso
  - www.nespresso.com
- Nespresso
  - Nespresso
- 
- Nespresso
  - Nespresso

(EN)  
(CN)

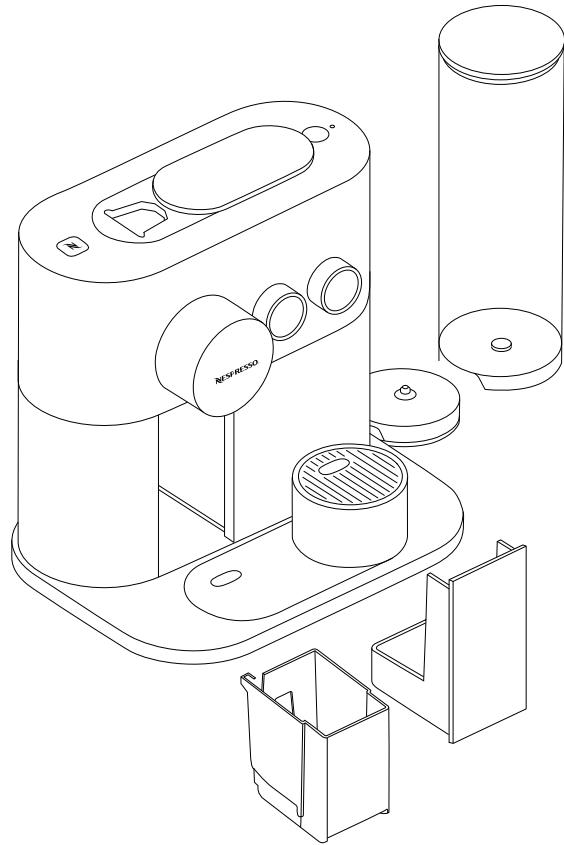


# First Use (or after a long period of non-use) /

EN


CN

**⚠ Read the safety** precautions first to avoid risks of fatal electrical shock and fire.

- ① Remove the water tank and capsule container to clean them. (see cleaning section).

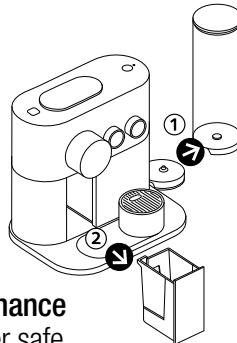


- ② Adjust the cable length and store the excess under the machine. Ensure machine is in the upright position.

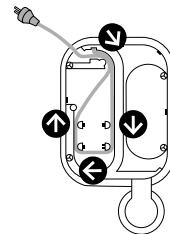

**⚠ Removable parts** are not dishwasher safe.


**⚠ Water tank and maintenance module** is not dishwasher safe.

- ③ Fill the water tank with fresh potable water.

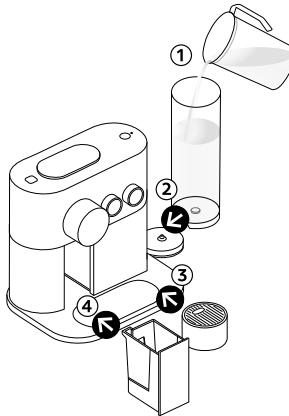

- ④ Place the water tank on its base and place the drip tray and the capsule container in position.

- ⑤ Plug the machine into the mains.

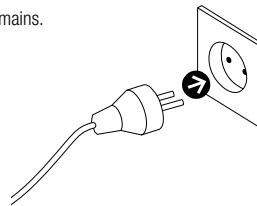


(EN)  
(CN)

## Turning the machine ON/OFF/

- ➊ Turn the machine **ON** by pressing the brewing button, moving the dials or by opening the slider. Lights will blink. Heating up takes approximately 25-30 seconds. Steady lights: machine is ready.

25-30

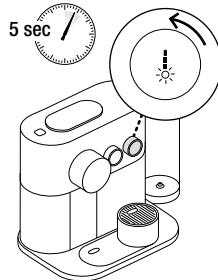


- ➋ To connect your machine, please follow the instructions in sections "Get the App" and "Pairing" on page 3.  
Multiple devices can be connected to your *Nespresso* Expert machine only if using a unique Club Members number. To pair these additional devices, please follow the instructions in the sections "Get the App" and "Pairing".



- ➌ Turn the machine **OFF** by turning the temperature dial anti clockwise until it reaches 0 temperature. The light will blink for 5 seconds before shutting off.

"0"  
5

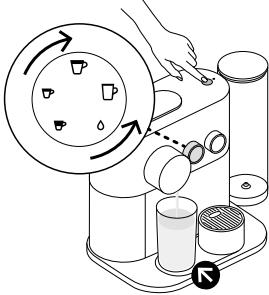

- ➍ Before making any coffee, make sure to rinse your machine by:  
1. Placing a container under coffee outlet.  
2. Close the slider, select the Lungo icon and press the brewing button.  
3. Repeat three times.  
4. Select hot water icon and press the brewing button.  
5. Repeat two times.  
6. Empty the drip tray.

- 1.
- 2.
- 3.
- 4.
- 5.
- 6.



# Regular Coffee Preparation/

EN

CN

- i** Heating up takes approximately 25-30 seconds. During heat up, you can select any coffee preparations and press the brewing button. The coffee will then flow automatically when the machine is ready.

25-30

- 2** Open the slider, insert a capsule and close the slider.

Ristretto (25 ml)

Espresso (40 ml)

Lungo (110 ml)

Americano (25 ml coffee; 125 ml hot water)

Hot water (200 ml)

	(25 )
	(40 )
	(110 )
	(25 : 125 )
	(200 )

To select your recipe, turn the beverage dial until the desired beverage. Then select the desired temperature by turning the temperature dial. Push the brewing button on the top of the machine. The coffee will then flow.

**i** To ensure hygienic conditions, it is highly recommended to not reuse a used capsule.



**i** The highest temperature setting is very hot, we recommend to use a cup with a handle.



- 3** Preparation will stop automatically.

The capsule will eject automatically after 10 seconds.

10

- 4** To manually top up your beverage, press the brewing button

within 10 seconds from the end of preparation.


For water top-up you may add manually by selecting the water icon on the beverage button.

Please note the temperature cannot be changed during the brew.



10 sec

10

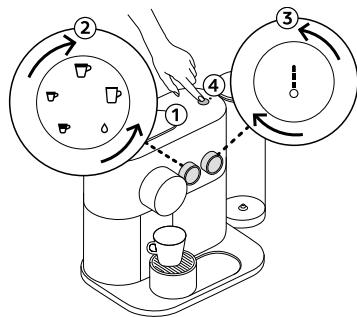


(EN)  
(CN)




## Regular Coffee Preparation/

- 5 To stop the coffee flow, press the brewing button or slightly move the slider towards the right of the machine. Please note, a manual top-up is not possible in this case.

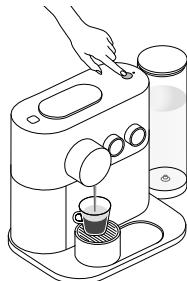

- 6 To change the selected cup size during brewing select the new desired coffee button. The machine will immediately stop if the coffee volume extracted is larger than new desired coffee size.

- 7 To accommodate a tall recipe glass, slide the cup support across the metallic base of the machine.

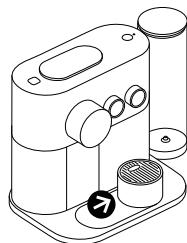

# Entering the settings mode /

## To enter a settings mode:

- Ensure machine is OFF and slider is closed.
- Press the brewing button for 6 seconds.
- Select the relevant dial.
- Press the brewing button.

6

## To exit settings mode:

- The machine goes back to stand-by mode automatically after 30 seconds.
- Open the slider.

-30

## Settings mode options:

	Ristretto: Descaling
	Espresso: Emptying the system
	Lungo: Reset to factory settings
	Americano: Water hardness
	Hot water: Energy savings mode
	All Lights lit up: Bluetooth®

	(Ristretto)
	(Espresso)
	(Lungo)
	(Americano)

# Settings mode: Energy Saving Concept /

The machine will turn into OFF mode automatically after 9 minutes of non-use.

9

## ① To change automatic OFF mode:

- Enter settings mode and select the hot water icon [●].
- Press the brewing button for confirmation.
- Use temperature dial to choose desired time.
- Confirm by pressing the brewing button.



You can now program another auto OFF mode:

→ 9 minutes

→ 30 minutes

→ 2 hours

→ 8 hours

→ 9

→ 30

→ 2


→ 8

The selected icon will blink twice to confirm change has been made and then the machine will turn OFF.

(EN)  
(CN)



## Programming the water volume /

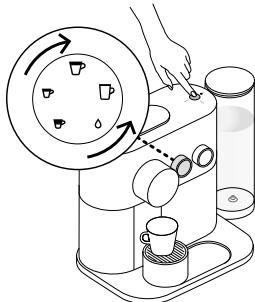

Any coffee button can be programmed:



Ristretto: from 15 to 30 ml



Espresso: from 30 to 70 ml



Lungo: from 70 to 130 ml



Americano: coffee from 15-110 ml,  
Hot water from 25 to 300 ml



Hot water from 50 to 300 ml

→ To program Ristretto, Espresso and Lungo volumes:

1. Ensure the machine is ON.
2. Open the slider and insert the capsule.
3. Close the slider.
4. Select desired coffee and press and hold brewing button
5. Release the button when desired volume is reached.
6. Brewing button will flash 3 times for confirmation.

→ To program Americano volume:

1. Select Americano recipe and press and hold brewing button until desired coffee volume is reached.
2. Press and hold again and keep pressed until desired water volume is reached.
3. Brewing button will flash once for confirmation.
4. Water and coffee volume are now stored.

→ To program water volume:

1. Select hot water icon and press and hold brewing button until desired water volume is reached.
2. Water volume is now stored.



## Settings mode: Reset to Factory Settings /



If you reset to factory settings, this will cancel the pairing and capsule stock management and reset the water hardness level.



## Settings mode: Reset to Factory Settings /

EN

CN

### Factory settings are:

1. Ristretto (25 ml), Espresso (40 ml), Lungo (110 ml), Americano (25 ml coffee; 125 ml hot water).  
Or select the drop icon for hot water (200 ml).
2. Automatic OFF mode after 9 minutes.
3. The water hardness set by default is hard.
4. No device paired.

1. (25 ml) (40 ml)  
125 ml (200 ml)
2. 9
- 3.
- 4.

### To do it via your machine:

- Ensure machine is OFF and slider is closed.
- Press brewing button for 6 seconds - both dials will flash to confirm you are in settings mode.
- Select Lungo cup and press brewing button.
- The Lungo cup will blink to confirm you have entered this mode.
- To exit this mode without doing a factory reset, push the brewing button. No/Exit: ⓘ Yes / Confirm: ⓘ
- To factory reset, turn temperature dial up to maximum position and press brewing button
- All lights will blink to confirm.

- 
- 6 -
- 
- 
- 
- 
- 
- / ⓘ / ⓘ / ⓘ

## Settings mode: Emptying the System before a period of non-use or for frost protection /

### ⚠ Steam may come out of outlet.




The machine remains blocked for 10 minutes after emptying!

10

- ① Remove the water tank.  
Place a container under the coffee outlet. Remove, empty and place back the drip tray.

- ② Ensure machine is OFF,  
and slider is closed.

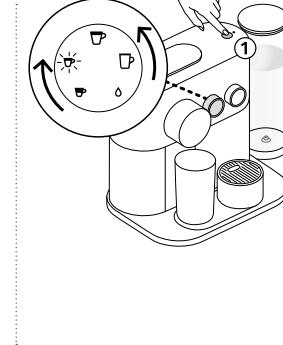

### ③ Enter settings mode:


- Press brewing button for 6 seconds - both dials will flash to confirm you are in settings mode.
- Select Espresso and press brewing button - Espresso icon flashes for confirmation.
- To exit this mode without doing a factory reset, push the brewing button. No/Exit: ⓘ Yes / Confirm: ⓘ
- To factory reset, turn temperature dial up to maximum position and press brewing button.
- The emptying process will begin.
- When the procedure is finished, clean the drip tray and the cup support.
- Machine turns to OFF mode automatically when empty.

- 
- 6 -
- 
- 
- 
- 
- 
- / ⓘ / ⓘ / ⓘ

# EN Cleaning / CN


 **To ensure hygienic conditions,** it is highly recommended to empty and clean the used capsule container every day.

- ① Remove lid and water tank and clean them all with odorless detergent and rinse with warm / hot water.**

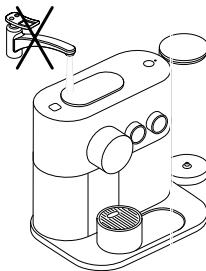


**⚠ Never immerse** the appliance or part of it in water or any other liquid.

- ② Dry all** water tank container parts with a fresh and clean towel, cloth or paper and reassemble all parts.

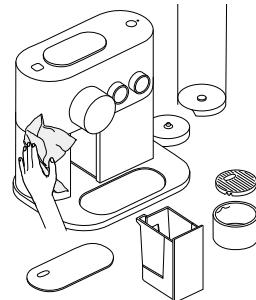

- ③ Clean the surface** of the machine, including under the metallic grid, with a damp cloth and odorless detergent.

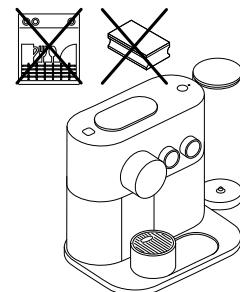



**⚠ Do not use** any strong or abrasive solvent, sponge or cream cleaner. Do not put in the dishwasher.

# Water Hardness /

EN  
CN

The water hardness level can be tested with the water hardness stick available on the first page of the user manual. To enter the water hardness mode:

- Ensure machine is OFF and slider is closed.
  - Press brew button 6 seconds, both dials will flash for confirmation.
  - Select Americano icon, press brew button, Americano icon will flash for confirmation.
  - Use the temperature dial to select the appropriate level.
  - Once done, press brew button for confirmation.
  - The machine will exit setting mode and turn off.
- 6 -

Water hardness*/		Descaling after:*/					
		App.		fH	dH	CaCO <sub>3</sub>	Cups /  (40 ml)
		Level 0 /	0	<5	<3	< 50 mg/l	4000
		Level 1 /	1	>7	>4	> 70 mg/l	3000
		Level 2 /	2	>13	>7	> 130 mg/l	2000
		Level 3 /	3	>25	>14	> 250 mg/l	1500
		Level 4 /	4	>38	>21	> 380 mg/l	1000

\* On the App, the water hardness can be adjusted any time under "Water status".

\* App      "      "



A strong use of Americano or hot water function may lead to an earlier descaling.

fH French degree

dH German Grade

CaCO<sub>3</sub> Calcium Carbonate

(EN)  
(CN)



## Descaling /

**⚠ Read the safety precautions** on the descaling package and refer to the table for the frequency of use. The descaling solution can be harmful. Avoid contact with eyes, skin and surfaces. Never use any product other than the *Nespresso* descaling kit available at the *Nespresso Club* to avoid damage to your machine. Please refer to the table on the "water hardness" section that indicates the descaling frequency required for the optimum performance of your machine, based on water hardness. For any additional questions you may have regarding descaling, please contact the *Nespresso Club*.



To exit the **descaling mode** before final validation with the temperature dial, open slider or machine goes back to stand-by mode automatically after 30 seconds.

30



Duration approximately 20 minutes.  
20

① Empty the **drip tray** and the used capsule container.



② Fill the **water tank** with 2 units of *Nespresso* descaling liquid and add potable water up to the max level.

2 Nespresso

③ Place a container (minimum volume: 1.2 L) under the coffee outlet.


1.2

- ④ To enter the descaling mode:** Ensure machine is OFF and slider is closed. Press brewing button for 6 seconds - both dials will flash for confirmation. On the recipe dial, select Ristretto icon, press brewing button to validate selection. Then, on the temperature dial, select high level "I" to confirm or lower level "O" to cancel, press brewing button to validate choice. Ristretto icon blinks to confirm you are in descaling mode.



**i** Ristretto icon will blink during the entire descaling process. Maintenance light will be steady ON while machine is automatically proceeding. Maintenance light will blink when a manual user action is required.


Ristretto

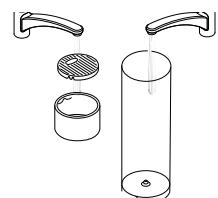

- ⑥ Rinse** the water tank, drip tray and cup support thoroughly to avoid any residue.

- ⑦ Refill the water tank** with 1.2 L fresh potable water.

1.2

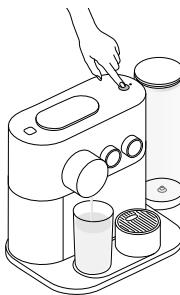

- ⑤ Press brewing button** to start the descaling cycle; descaling agent will flow through the coffee and hot water outlets. When machine stops and maintenance light blinks, remove and empty the drip tray and place back. Push brewing button again. Machine will stop when water tank is empty.

**i** Throughout the descaling process you can pause at any time by pressing the brewing button (e.g. to empty and place back your container). Continue by pressing the brew button again.

- ⑧ Press brewing button** to start rinsing the machine, pump will run. Machine will stop automatically when the water tank is empty. Remove and empty the drip tray and place back. The machine will automatically switch OFF when the descaling process is done. The machine is now ready for use.

**i** If maintenance light continues to blink after rinsing it means less than 1.2 L water was added. Repeat step 7.

1.2

7

# EN Troubleshooting



Videos are available on the App and on [www.nespresso.com](http://www.nespresso.com) - Go to section "services".

## Pairing has not succeeded.

- Check that the *Bluetooth®* on the smartphone or tablet is activated.
- Check the compatibility of your smartphone or tablet with the machine (see page 3).

- Ensure the smartphone or tablet is placed next to the machine (max distance 20 cm) during the pairing.
- Make sure to not turn ON any microwave close to the machine during pairing.

## If you want to unpair your machine, via the App.

- Go on the App "Name", click on "Machine status", then click on "Unpair this machine".
- Click on "unpair this device" to confirm the unpairing.

- **Note:** In case of an unpairing, all the setups and specifications will be lost and the machine will be reset to factory settings.

## No lights on the coffee machine.

- Machine turned OFF automatically. See paragraph on "Energy Saving Concept".

- Check the mains: plug, voltage, fuse.

## No coffee, no water, unusual coffee flow.

- Check if the water tank is correctly positioned, if empty, fill with potable water.

- Descale it if necessary.

## Coffee is not hot enough.

- Preheat cup.

- Descale the machine if necessary.

## The slider does not close completely or the machine doesn't start brewing.

- Empty the capsule container.

- Check that no capsule is blocked inside the machine.  
**(Note:** do not put the finger inside the machine)

## Leakage (water under the machine).

- Unplug the machine.
- Empty drip tray if full and remove all the water under the machine. Then plug again the machine.

- If problem persists, call the *Nespresso Club*.

## Maintenance light is ON.

- Brew button light ON and maintenance LED slow blinking means descaling is required.

- Brew button is OFF and maintenance LED is ON means water tank is empty and/or capsule tray full.
- If problem persists, call the *Nespresso Club*.

## Nespresso light is ON.

- It means your capsule stock is empty. You can order capsules via the App or *Nespresso* website.

## Machine overheating or in an environment below 0°.

- Maintenance light will go on.
- Brewing button will be off.

- Temperature button will blink fast.  
Please wait for all buttons to switch off, this will take a few minutes.  
During this time the machine cannot be used.

## Water or coffee flow does not stop even when pushing the brewing button.

- Gently move the slider towards the back of the machine to stop the flow.

- Hot water flow always stops a short time after pressing the brewing button to stop. this is a normal behavior not a troubleshooting.

## No coffee flow, water goes directly into the drip tray (despite inserted capsule).

- Pull the slider to ensure it is closed.

- If problem persists, call the *Nespresso Club*.

## Machine turns to OFF mode.

- To save energy the machine will turn to OFF mode after 9 minutes of non-use.
- See paragraph on "Energy Saving Concept".

- Press one of the coffee buttons to turn to "ON-mode" or open the slider.

## Capsule container and drip tray are stuck.

- Unplug the main.
- Lift the machine.

- Use the hole underneath the machine to manually push out the container.
- Clean the capsule container, the drip tray and the insert.



App

(www.nespresso.com)




App

App


3

20



O

App



9

## Contact the Nespresso Club /

**As we may not have foreseen all uses of your appliance**, should you need any additional information, in case of problems or simply to seek advice, call the Nespresso Club or your Nespresso authorised representative.

Contact details for your Nespresso Club or your Nespresso authorised representative can be found in the "Welcome to Nespresso" folder in your machine box or at [nespresso.com](http://nespresso.com)

[nespresso.com](http://nespresso.com)

---

## Disposal and environmental protection /

**This appliance complies** with the EU Directive 2012/19/EC. Packaging materials and appliance contain recyclable materials.

Your appliance contains valuable materials that can be recovered or can be recycled. Separation of the remaining waste materials into different types facilitates the recycling of valuable raw materials. Leave the appliance at a collection point. You can obtain information on disposal from your local authorities.

To know more about Nespresso sustainability strategy, go to  
[www.nespresso.com/positive](http://www.nespresso.com/positive)

EU Directive 2012/19/EC

[www.nespresso.com/positive](http://www.nespresso.com/positive)

Nespresso

## Limited Guarantee /



**Nespresso guarantees** this product against defects in materials and workmanship

(HK)

(KR)

① Nespresso

?



[www.nespresso.com](http://www.nespresso.com)  
[www.nespresso.com](http://www.nespresso.com)


②



③



Bluetooth®

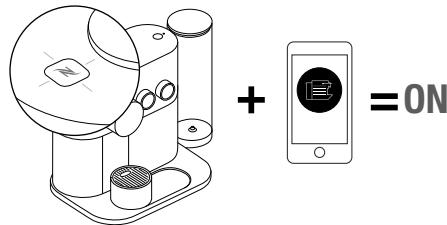

Nespresso  
3

3



(HK) C80

(KR)

/

~ HK: 220-240V~, 50-60Hz, 1150-1260W  
KR: 220V AC, 50Hz, 1150-1260W

/ 2.402 - 2.480GHz  
4dBm /  
4dBm

Pmax Pmax 19 / 1.9 MPa / 19

kg : ~4.4 / : ~4.4 kg

l 1.11 / 1.11

38.05 /cm 28.7 /cm 22.3 /cm

/

/

/

Nespresso Expert / Expert

/

/

/ ( )

/ /

/

/

/ :

/

/ :

/

:

/

/

/

Nespresso /

/

/

28

28

28

29

29

30

31-37

38

39

40

41-42

43

43

44

45

46

47

48

49-50

51-52

53

53

54



•

8

⚠ :

•

•

•

•

⚠ :

•

•

•

⚠ :

•

•

⚠ :

•

8

•

•

⚠ :

•

•

i :

8

•

•

•

•

Nespresso

Nespresso

1.5

Nespresso  
Nespresso

•

•

•

•

•

•

•

•

•

Nespresso  
Nespresso

• Nespresso



:

• Nespresso



:

•

•

Nespresso

[www.nespresso.com](http://www.nespresso.com)  
PDF



:

• Nespresso  
Nespresso



:

• Nespresso



:

(

)


(KR)

8

8

8

1.5 mm<sup>2</sup>



()

).


()

( 48

)


[www.nespresso.com](http://www.nespresso.com)  
PDF

(HK)  
(KR)

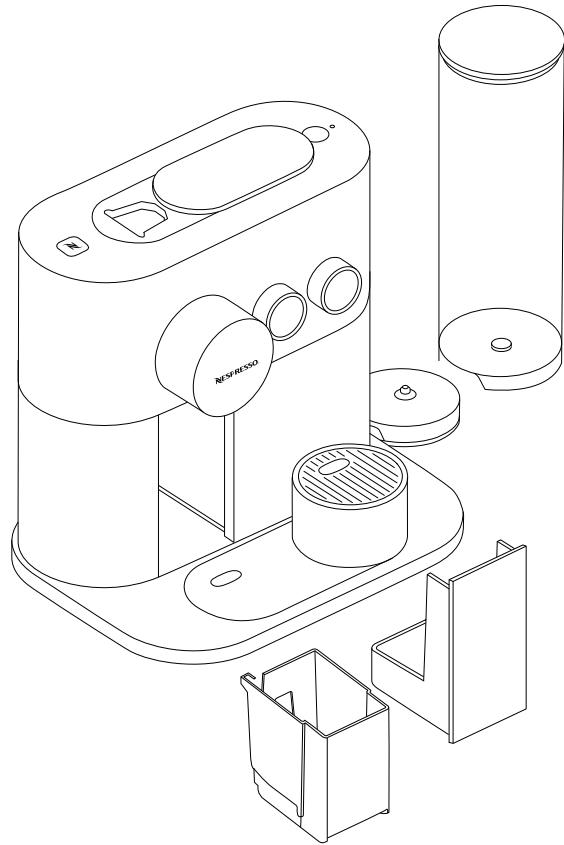





①

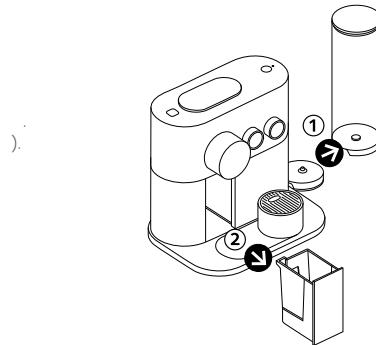


②

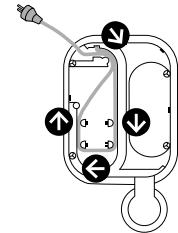


③

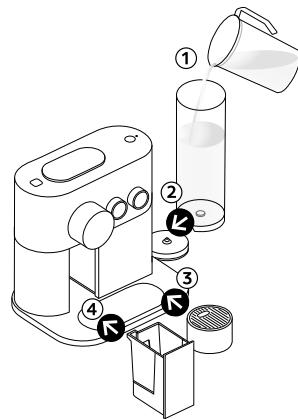

④

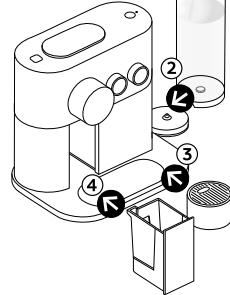

⑤

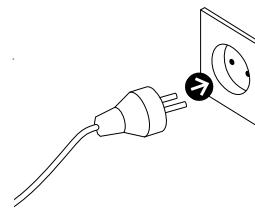

(HK)

(KR)


/

/


①

25-30

25-30

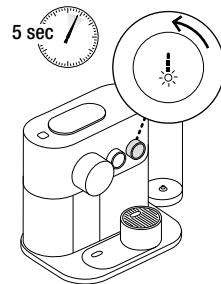

④  
1.

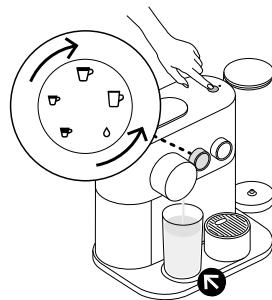




/

(HK)  
(KR)

25-30

25-30

①

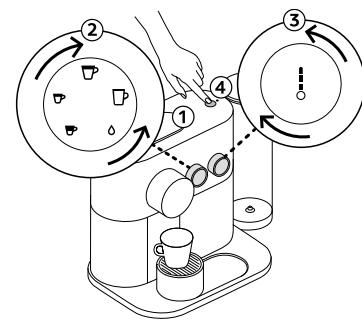

②

	Ristretto (25 )
	(40 )
	(110 )
	Americano (25 ; 125 )
	(200 )

	(25 ml)
	(40 ml)
	(110 ml)
	(25 ml ; 125 ml )
	(200 ml)



③

10

10

④

10

10




10 sec

(HK)


(KR)



5

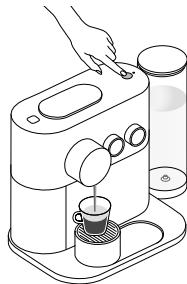

6

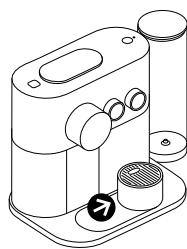

(HK)  
(KR)

/


OFF

6

30



6  
30

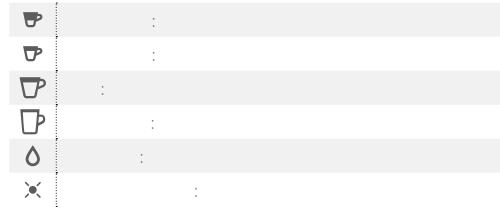

/



9

9

①

●	→	9
●	→	30
●	→	2
●	→	8


[●]

[●]

●	→	9
●	→	30
●	→	2
●	→	8

2

(HK)  
(KR)

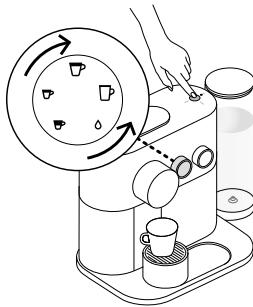

/

☕ Ristretto	15 - 30
☕	30 - 70
☕	70 - 130
☕ Americano	15-110 : 25-300
💧	50-300

→ 1. Ristretto  
2. ON  
3. 5.  
4. 6.  
5. 3.

→ 1. Americano  
2. Americano  
3. 1.  
4. 2.

→ 1. 2.

☕	: 15~30ml
☕	: 30~70ml
☕	: 70~130ml
☕	: 15-110ml / 25-300ml
💧	: 50~300ml

→ 1. 2.  
3. 4.  
5. 6.  
3. 4.

→ 1. 2.  
3. 4.

→ 1. 2.  
3. 4.



/

(HK)  
(KR)


1. Ristretto 25                  40                  110                  Americano                  1.                  (25 ml),  
25                  ; 125                  9                  200                  125 ml).                  (40 ml),                  (110 ml),                  ( 25 ml /  
2.                  9  
3.  
4.

-                  (OFF)  
-                  6  
-  
-  
-  
-  
-

1.                  (25 ml),  
125 ml).                  (200 ml).  
2. 9  
3.  
4.                  1000

-                  6  
-  
-  
-  
-  
-

/                  /                  /


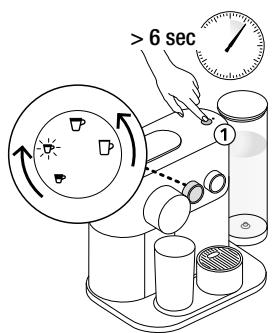




①

②

③

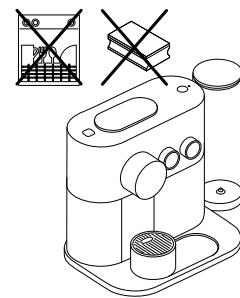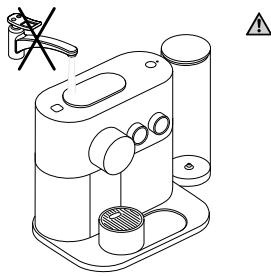

(HK)  
(KR)

/

1

OFF  
6  
Americano

6

Americano

\* / \*

	App.	fH	dH	CaCO <sub>3</sub>	/  (40 ml)	
		0/ 0	<5	<3	< 50 mg/l	4000
		1/ 1	>7	>4	> 70 mg/l	3000
		2/ 2	>13	>7	> 130 mg/l	2000
		3/ 3	>25	>14	> 250 mg/l	1500
		4/ 4	>38	>21	> 380 mg/l	1000

\*  
\*

Water status  
"Water Status"



Americano



/

(HK)  
(KR)

## Nespresso

## Nespresso




30



20

①

30

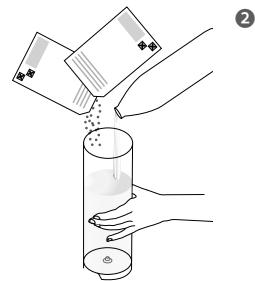

MAX

2 Nespresso

2

③

1.2

( 1.2 )

(HK)  
(KR)



/

4

Ristretto

6

"I"

OFF


Ristretto  
0

6


Ristretto



5

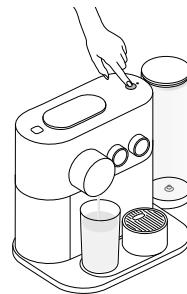

( )

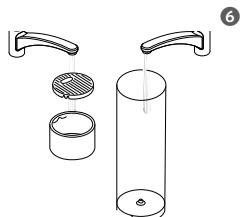

6

7 1.2  
1.2

8

OFF



7

1.2

, 1.2

7



www.nespresso.com

Service

-	®	28	-	20
-	Name Unpair this machine	Machine status	-	unpair this device

-	OFF	-	-
-	-	-	-
-	-	-	-

-	-	-	Nespresso
-	-	-	-
-	-	-	-

<b>Nespresso</b>	-	Nespresso	Nespresso
O	-	-	-

-	-	-	
-	-	-	-

<b>OFF</b>	-	9	OFF	-
-	-	-	-	-
-	-	-	-	-



www.nespresso.com

20cm

(28

).

"Name", "Machine Status"

"Unpair this machine"

"Unpair this device"

).

( :

)



).

9

Nespresso

/

HK

KR

Nespresso  
Nespresso

Nespresso  
Nespresso

[www.nespresso.com](http://www.nespresso.com)

[www.nespresso.com](http://www.nespresso.com)

"Welcome to Nespresso"

/

EU Directive 2012/19/EC

EU 2012/19/EC

Nespresso

[www.nespresso.com/positive](http://www.nespresso.com/positive)

[www.nespresso.com/positive](http://www.nespresso.com/positive)

(HK)  
(KR)

/

Nespresso 2

2

Nespresso

6

Nespresso

Nespresso


Nespresso

www.nespresso.com


(

)

www.nespresso.com

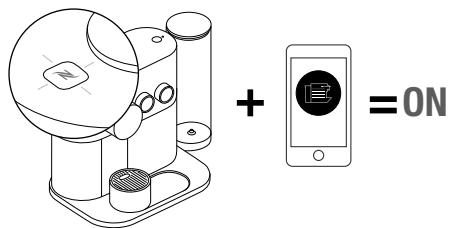

(TW)

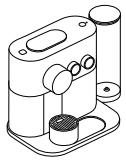

.....

~	110V~, 60Hz, 1200W	55
:	2.402 - 2.480GHz 4dBm	55
Pmax	19 bar / 1.9Mpa	56
kg	: 4.4	56
l	1.11	57
mm	38.05	58-60
mm	28.7	61
mm	223	62
	( )	63
		64-65
		66
	:	66
		67
	:	67
		68
	:	68
		69
		70
		71-72
		73
	Nespresso Club	74
		74
		75



⚠

:

• •  
• •  
• •

⚠

:

• 8  
8 •

⚠

:

• 8

⚠

:

• 1.5

ⓘ

:

• •

• •  
• •

• Nespresso  
Nespresso

Nespresso Club  
Nespresso

• Nespresso

(

• Nespresso

Nespresso Club  
Nespresso


)

- Nespresso

[nespresso.com](http://nespresso.com)  
PDF

- Nespresso
- Nespresso
- Nespresso

- Nespresso

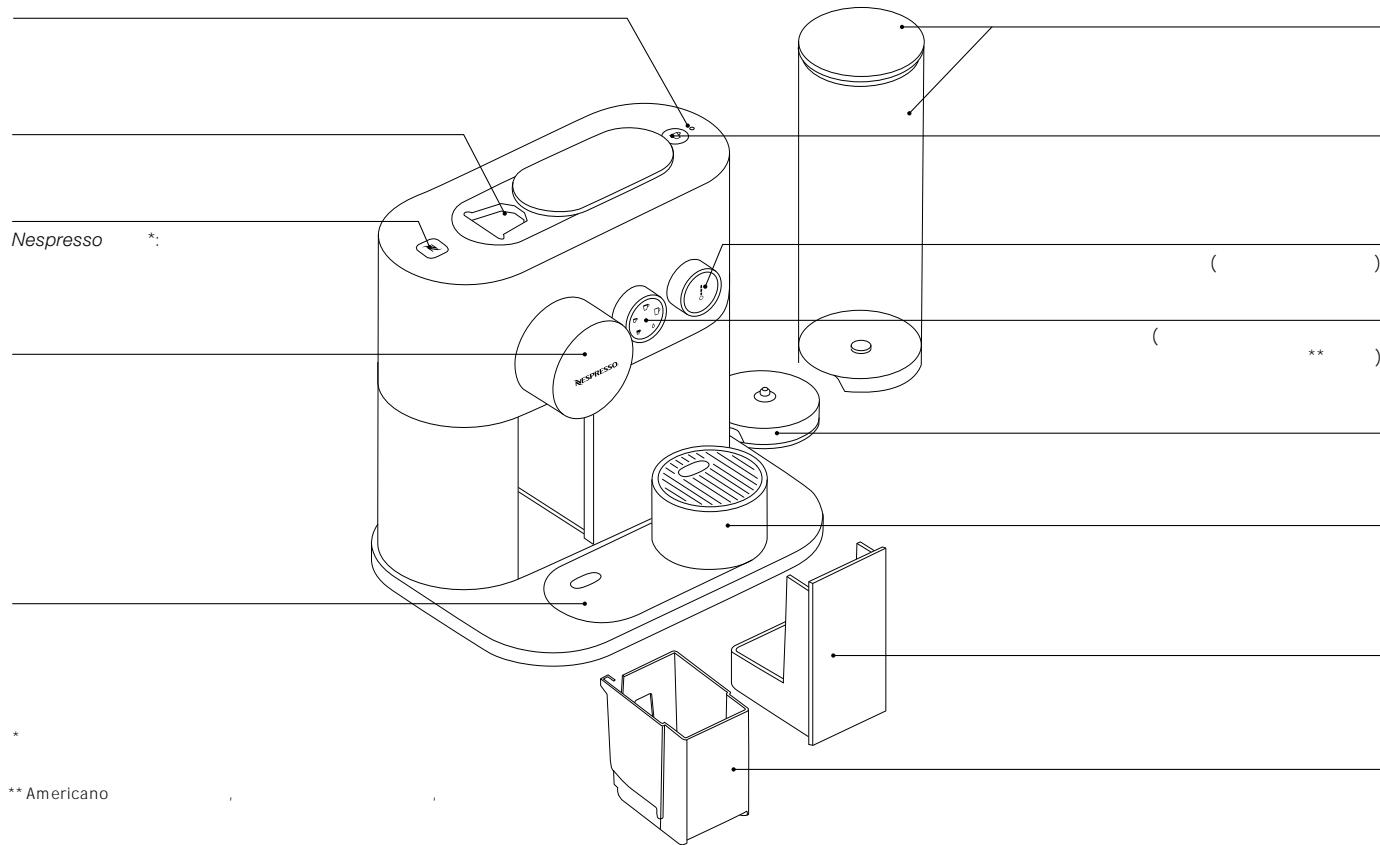


(TW)

(


)




①

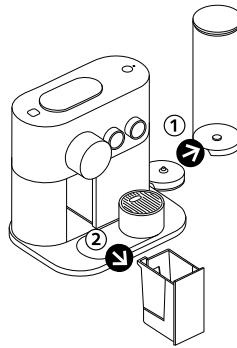

②

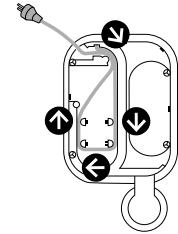


③

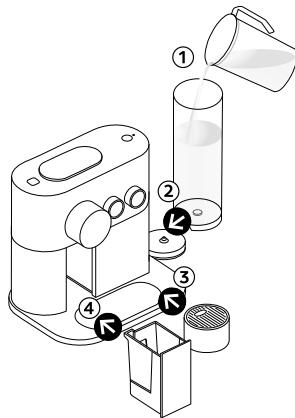

④

⑤

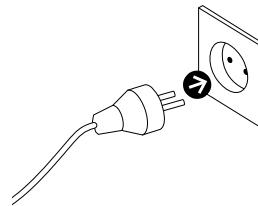


**1**

25-30

**2**

5

0

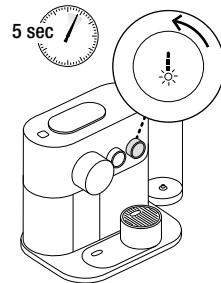**3**


club

55 " Nespresso Expert"

**4**

- 1.
- 2.
- 3.
- 4.
- 5.
- 6.

2

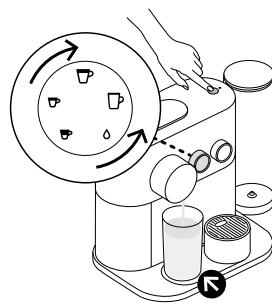

(TW)




25-30

①

②

cup	(25 )
cup	(40 )
cup	(110 )
cup	( 25      125 )
cup	(200 )

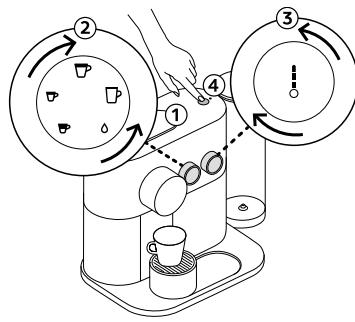

③

10


④

10



10 sec


5

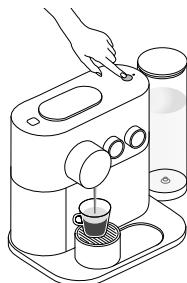

6



7

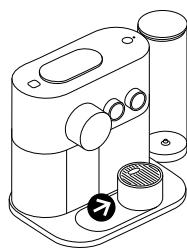

(TW)

6

30




®

9

1



- 9
- 30
- 2
- 8

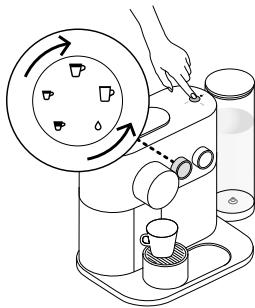

1.	15	30
2.	30	70
3.	70	130
4.	15-110	, 25 300
5.	50	300


- 1. 2. 3.  
4. 5. 6.  
→ 1. 2.  
→ 1. 2.  
→ 1. 2.



1. (25 , 125 ) (40 ), (110 , ( 200 ))  
2. 9  
3. " "  
4. :

- - 6 , , ,

NO/ YES/

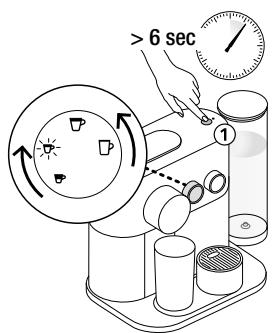






1



2

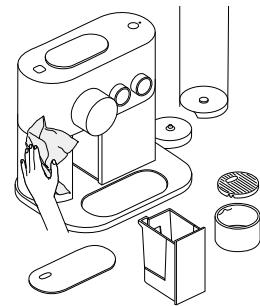


3

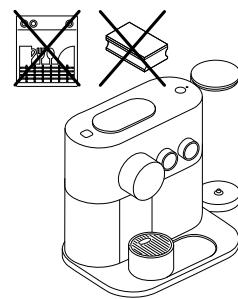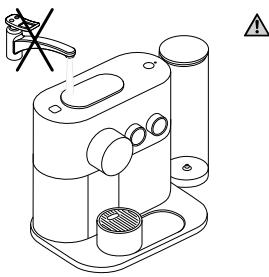

(TW)

6

*	App.	fH	dH	CaCO <sub>3</sub>	* ☕ (40 ml)	fH	dH	CaCO <sub>3</sub>
	0	<5	<3	< 50 mg/l	4000			
	1	>7	>4	> 70 mg/l	3000			
	2	>13	>7	> 130 mg/l	2000			
	3	>25	>14	> 250 mg/l	1500			
	4	>38	>21	> 380 mg/l	1000			

\*





TW



Nespresso

Nespresso




30



20

①

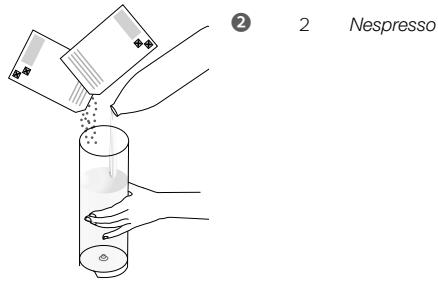

2

Nespresso

③

1.2

(TW)



④



"I"

"O"



6

5

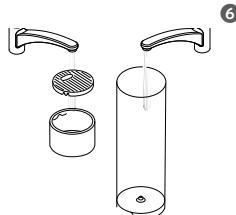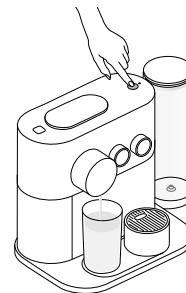

7 1.2

8



1.2

7



www.nespresso.com

( 55 )

( :20 )

" " " "

" "

: :

:

( : )

( : )

Nespresso Club

-

-

/

Nespresso Club

**Nespresso**

Nespresso

O°



Nespresso Club

9



## Nespresso Club

Nespresso

Nespresso Club  
nespresso.com

---

Nespresso

**[www.nespresso.com/positive](http://www.nespresso.com/positive)**

Nespresso 2  
Nespresso

Nespresso

Nespresso  
Nespresso  
Nespresso

Nespresso  
www.nespresso.com

Nespresso  
Nespresso

## ציירת קשור עם מועדון נספרסו

בכל שאלה, בקשת מידע ולכל מושא אחר, תוכל ליצור קשר עם מועדון נספרסו בכל עת. תוכל למצוא את פרטי ציירת הקשר עם מועדון נספרסו בערךת בחר הבא לנספרסו, המצורפת למכתבך.

## פינוי פסולת והגנה על הסביבה

אריזות המכשיר והמכ舍יר עצמו עשויים מחומרם בעלי ערך היכולים לשמש למיחזור מוסף. מוצר זה מכיל חומרים בעלי ערך שימושיים לשמש למיחזור סופי. אבא אהבה את המנוה לאთר פסולת "יעוד" או לאנשי שירות הליקוחות המוסמכים במועדון *Nespresso*.  
[www.nespresso.com](http://www.nespresso.com) פונה לאටר האינטרנט של נספרסו והגנה על הסביבה,

## אחריות מוגבלת

*Nespresso* תהיה אחראית לכל פגם בחומר ובטיב המכונה לשנה אחת ממועד רכישתה. בתקופת האחריות *Nespresso* תתקן או תחליף כל מוצר פגום על פי שיקול דעתה ולא תשלום הרוכש. האחריות על מוצרים שהוחלפו או החלקיים מתוקנים, תהיה למשך הזמן הנדרה לתקופת האחריות המקורי או שישנה חוויהם, הזמן הארוך מביניהם. אחריות מוגבלת זו, אינה מכסה פגם הנוצר עקב תאונה, הדנאה, שימוש שגוי, אי הקפדה על הוראות הפעלה, בלאי ושבב, שימוש מסחרי, שימוש במנוחה או בזרם החוזג מהמקובע על המוצר, שינוי תוואי המוצר ללא אישוש שרפה, מכתח ברק, שיטפון או סיבות חיצונית אחרות. פרט להיקף שימושו החוקי, התנאים לאחריות מוגבלת זו, אינםשוללים, אינם מגבלים או משנים את הזכויות החוקיות התקיפות בעת מכירת מוצר זה והם נוספים לזכויות אלו. אם הנרכ סבור שהמוצר פגום, צור קשר בהקדם עם מועדון *Nespresso* על מנת לעדכן את דרכי הרוחקשות לאיסוף ולהחזרת המכשיר.

# תפקיד תקלות



**סרטוני** הסברה זמינים באפליקציה ובכתובת [www.nespresso.co.il](http://www.nespresso.co.il)

**פעול החזמוד לא צלה.**

- בחק כי הבלתיו בסמאטרפין או הטאבלט דלק.

- בדק אם השהה האטום בין הסמאטרפין או הטאבלט למונטך (ראה עמוד 3).



**ביטול שימוש המכונה באמצעות האפליקציה.**

- באפליקציה, הקלק על "סאטאטוס מכונה" ולאחר מכן הקלק על "בטל שימוש מכונה".

- הקלק על "בטל שימוש המכשיר" כדי לוחוד בטול השימוש.



**הנרות של כפתורי הקפה אכן דולקות.**

- המכונה תכבה אוטומטית, ראה פיק' "שחזר הגדרת צ'ץ".



**לא צורם קפה, מים או זרימה חריגת של קפה.**

- בדק שמייל הימים ממוקם במקומו המקורי וירק, מלא במי שתייה.



**הקפה אינה חם מספיק.**

- חמס בראש את סופ הקפה באמצעות הרומר מים דרך דרך דרך דרך.



**מנגנון הרוחלה איבן נסגר עד הסוף או זרימת הקפה אינה מתהשתתת.**

- רוקן את מיל הקפסולות המשמשות.



**בילוי מים תחת המכונה.**

- נתקן את המכונה מהחלשל.

- הרים או אגן הניקוז במידה גנאל וובש את כל הימים מתחת למכונה. חרב את המכונה להחלשל.



**גורת התחזוקה דולקת.**

- כאשר נורת החליטה Dolkett נורת התחזוקה מההבדת לאט המשמשות היא שיש צורך בהסרה אבטית במכונה.



**גורת נספרטו Dolkett.**

- משמשותה כי מלאי הקפסולות לר' אל. תוכל לבצע הזמנה דרך האפליקציה או אחרinos.



**המכונה התהממה יתר על המידה או בסביבה מוחת לאפס מעלה.**

- גורת נספרטו החליטה Dolkett.



**דרמת מים או קפה אינה פסקת גם לאחר להיצעה על כל כפתור קפה.**

- ההז את מגנן ההחלה (סלייד) אחורי לילוון חלקה האחורי של המכונה.



**אין דימות מים, מים זורמים ישירות לאגן היכיקוד (מורת שוכנכה לפולו).**

- משוך את מגנן הרוחלה לוודא כי סגור עד הסוף.



**מצב כבוי אוטומטי.**

- כדי לחסוך באנרגיה, המכונה תיכתטו למלצב ליבי אוטומטי לאחר 9 דקות ללא שימוש.



**מיכל הקפסולות המשמשות ואגן הניקוז מתקווים.**

- נתקן את המכשיר מקבל החלשל.

- רחים את המכונה.

- והוא כי הסמאטרפין או הטאבלט מזוקקים שמוך למונטה במהלך תהליך הצמיה.

- והוא כי אין מושר מיקוראל פעיל לד המכונה בתוצאת תהליך יצוין.

- שם לב' במידה ובצען שוב בטול צמוד למונטה, ההדרחות וההוואמות האישיות יאבדו והמכונה תשחרר הגדתית הציגן.

- בדוק את שקע החשמל, פיז החשמל ומזה החשמל.

- בצע ייקו אבנית במכונה במידה ונדרש.

- בצע ייקו אבנית במכונה במידה ונדרש.

- בדוק כי אין קפסולה תקינה במכונה. (שים לב' אין להכניס עצבע לתוך המכונה).

- במידה והבעיה אינה נפתרת, יש ליזיר קשר עם מונדע נספרטו.

- כאשר כפטור החלטה כבוי ופורת התחזוקה Dolkett המשמשות היא שמייל הימים ריק או מיל הקסולות המשמשות מלא.

- במידה והבעיה אינה נפתרת, יש ליזיר קשר עם מונדע נספרטו.

- פתרת חוגת הטפרטורה התרגבב במניהות, אנה המתכת כמה דקות עד של המרת Dolkett, במן זה לא ניתן לרשטמש במכונה.

**הזרה:** דימת המים הנשיטה זמן קצר לאחר הלייטה על כפטור החלטה.


או אנה תקללה כך פועל המנגנון.

- במידה והבעיה אינה נפתרת, יש ליזיר קשר עם מונדע נספרטו.

- לחץ על אחד מכניםו הקפה כדי להחדיר למצב במכונה פעילה, או הקלק אחורותית את מגנן הרוחלה.

- דוחף את המיל הקפסולות המשמשות, און היכיקו וופתת.


- מקה את מיל הקפסולות המשמשות, און היכיקו וופתת.



ניקוי אבןית



► יש לקרוא את הוראות הבטיחות של גבי אריזת ערכת

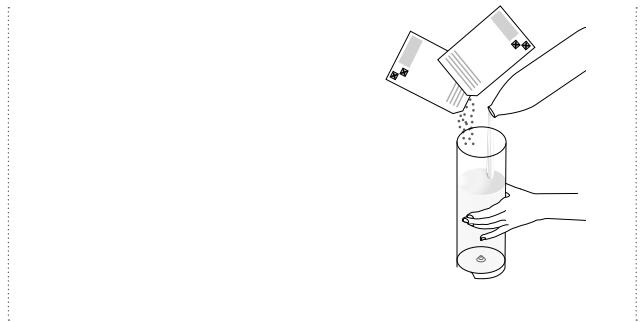

## קשירות מים


**ניתן לבדוק** את רמת קשיות המים באמצעות מקלון קביעת קשיות מים המודבקים בעמוד הראשון של הואהו ההפולני. לנסה לוגרתת קשיות המים:

- וודא כי המכונה בבה ומגננון החילתה (הטליידר סטאג'ו).
- לחץ על כפתור החילטה לפחות 6 שניות, שית נחוגות יhabה לאישוש.
- בחר באפשרות אמריקני, לחץ על כפתור החיליטה, פורת האמריקם התהגהב לאישוש.
- השתמש בחוגות הטטפורטורה לבחירה רמת הקשיות הרצוי.
- לאחר סיום הבחירה, לחץ על כפתור החיליטה לאישוש.
- המכונה תצא ממכבב הגדרות ותכבה.

		יקוי אבנית לאחר:		CaCO <sub>3</sub>		dH	fH	קשירות מים*	
		40 מ"ל ספל קפה		< 50 mg/l		> 3	< 5	רמה קשיות 0	
צרפתית	fH	4000		< 50 mg/l	< 3	< 5	0		
גרמני	dH	3000		> 70 mg/l	> 4	> 7	1		
סידן פחמתי	CaCO <sub>3</sub>	2000		> 130 mg/l	> 7	> 13	2		
		1500		> 250 mg/l	> 14	> 25	3		
		1000		> 380 mg/l	> 21	> 38	4		

\* באמצעות האפליקציה, רמת קשיות המים ניתנת לתכנות בלבד עט, תחת "סטטוטו מים".

שימוש נרחב במכשיר אמריקני או באפשרות מים חמימים עשויה להגביר את תדירות נקי האבנית.

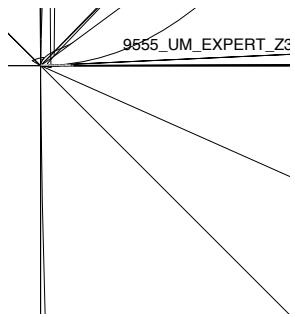

# שחזור הגדרות יצן



**שחזור יצן:** יטלו את פעולות הצימוד, את ניהול מלאי הקיטולות ואת התראות נקיי האבטחה.

## הגדרות יצן:

1. רטסרו (25 מיל'), אופרכו (40 מיל'), לונג (110 מיל'), אמריקם (25 מיל' קפח); 125 מיל' מים חמימים), או בחר באפשרות מים חמימים (200 מיל').
2. כבוי אוטומטי לאחר 9 דקות.
3. מרת קשיות המים המוגדרת בהגדרות יצן הנה גובה.
4. אף מכשיר לא חובר למכלולת הקפה.


## לביצוע הפעולה באמצעות המכונה:

- וואיא המכונה כבוה ומנגן החולקה (סילידי) סוגה.
- לחץ והחזק את כפתור החלטה לפחות 6 שניות - שתי פעות החוגות ידליקו לאישור כניסה למצב הגדרות.
- בחר את אופצייתו לנמוך ולחץ על כפתור החלטה.
- ווות ספל הלונגו תהברב לאישור כניסה למצב הגדרות.
- ליצאה ממצב הגדרות מבלי לאפס להגדרות יצן, לחץ על כפתור החלטה, לא / יצאה ☺ ק/אישור !!
- איפוס הגדרות יצן, סובב את חוגת הטמפרטורה למקס'ים ולחץ על כפתור החלטה.
- כל הנורות ייבהת לאישור הפעולה.

## ריקון המערכת לפני תקופה אחוריה של חוסר שימוש, להגנה מפני כפור ולפני תיקון

### ③ כניסה למאובג הדגדות:

- לחץ והחזק את כפתור החלטה לפחות 6 שניות - שתי פעות החוגות ייבהת לאישור כניסה למצב הגדרות.
- בחר באפשרות אופרסו לחץ על כפתור החלטה - מרת האופרסו תהברב לאישור כניסה למצב הגדרות.
- ליצאה ממצב הגדרות מבלי לאפס להגדרות יצן, לחץ על כפתור החלטה, לא / יצאה ☺ ק/אישור !!
- לחזרה להגדרות יצן, סובב את חוגת הטמפרטורה למקס'ים ולחץ על כפתור החלטה.
- תחלר ריקון ייל.
- בסיום התהליך מקה את אגן הרקוז ומגש הרכשות.
- המכונה תיכבה אוטומטית בסיום הריקון.

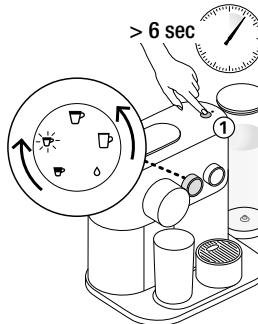

- ② **וודה כי המכונה כבוה ונמנגן החולקה (סילידי) סוגה**

## ⚠ אדים עלולים לצאת מפתח יציאה הקפה.

**שים לב,** המכונה תיחסם לפחות 10 דקות לאחר הריקון!

- ❶ הסר את מיכל המים. מקום מי מתחת מפתח יצאת הקפה. הסר ותקן את אגן היניקז, החזר למיקומו.

## תכנות חיסכון באנרגיה

### 1 כדי לשנות את הכיבוי האוטומטי:

- הנסם למשבב הדורתה ובור אפואציגית מים חמימים בחוגת המתכוונים [▲].
- לחץ על כפתור החיליטה לאישור.
- השמשש בחוגת המטיפותורה לבחירת הזמן הרצוי ליבוי אוטומטי.
- לחץ על כפתור החיליטה לאישור.

ניתן להגדיר כיבוי אוטומטי לאחר:



האפשרות הבוחרת תהברבב פעמיים לאישור השינוי ואז המנגנון תיכבה.

### המנגונה תכנס למשבב

- כיבוי אוטומטי לאחר
- 9 דקות ללא שימוש.

## כניסה למצב תכנות הגדרות

### כניסה למצב הגדרות:

- וואו כי הרכינה בכביה ומנגנון ההחלה (הסלידר) סגור.
- לחץ על כפתור החיליטה לפחות 6 שניות.
- בחר בחוגת הרציה.
- לחץ על כפתור החיליטה.

### יציאה ממצב הגדרות:

- המנגנון תיכנס למבוקב המתנה באופן אוטומטי לאחר 30 שניות.
- פתח את מנגנון ההחלה (הסלידר).

### אפשרויות הגדרות:

ריסטרטו: פיקוי אבטחת	
אספרסו: ריקון המערצת	
לונגנו: החזרה להגדרת יין	
אמריקן: קשיות מים	
מים חמימים: מצב חיסכון באנרגיה	

כל האפשרות מהברבות: חיבור בלאוות'

## תכנות כמות מים



### ניתן לתכנת כל כפתור הכנת קפה:

ריסטרטו: מ 15 מ"ל ועד 30 מ"ל	
אספרסו: מ 30 מ"ל ועד 70 מ"ל	
לונגנו: מ 70 מ"ל ועד 130 מ"ל	
אמריקן: קפה מה 15 מ"ל ועד 110 מ"ל	
מים חמימים 250 מ"ל ועד 300 מ"ל	
מים חמימים: מ 50 מ"ל ועד 300 מ"ל	

### ← לתוכנות כמותי התאמינו:

1. בחר מנגנון אמריקן בחוגת המתכוונים, לחץ והחזק את כפתור החיליטה עד הגעה למוגות המים.
2. לחץ וחזק שוב את כפתור החיליטה עד הגעה למוגות הקפה הרצiosa.
3. כפתור החיליטה יבהיר ברגע שבעמ' אחד את החלטה.
4. כמות הקפה והמים נקבע והוגדרה.

### ← לתוכנות כמותי המים:

1. בחר אפרשות מים חמימים, לחץ והחזק את כפתור החיליטה עד הגעה למוגות המים הרצiosa.
2. כמות המים נעת נשמרה בזיכרון.




לעט

הנחת

הנחת C

לעט

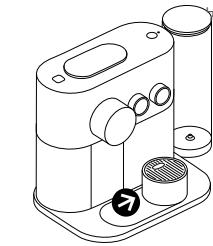

ו מתחום עבה ק אולט ה יש

הנחת C

ו מתחום עבה ק אולט ה יש

6 כדי לעצור את  
כך לאוקטן  
מגנט ה להן



6

מכונה וטעור מיד במידה ווג


זריאת גוד  
וזום גוד

ספל שטוח  
ספל הקפה ו

## הכנות קפה רגילה



**①** מלא את מיכל המים במים טריים וחאים לשתייה בלבד.  
הנץ סס מונחת לפתח יציאת הקפה.

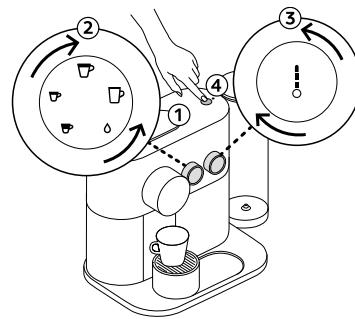


**②** פתח את מגנן ההורקאה (סליידר), הכנס קפסולות, סגור את מגנן ההורקאה (סליידר).

ריסטראטו (25 מ"ל)
אופרטו (40 מ"ל)




## הדלקה וכייבוי המכונה

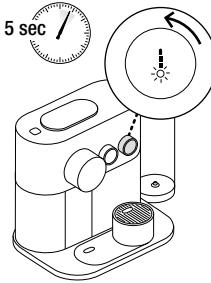

- ② ליבוי** המכונה סובב את חוגת טמפרטורה נdry כיוון השעון, עד טמפרטורה 0. האורות ייהבבו למשך 5 שניות טרם כיבוי המכונה.


**❶ להדלקה** המכונה לחץ על כפתור חיליטת הקפה או חז את החוגה או פתח את מנגנון ההחלקה (סליידר). האורות ייהבבו, המכונה מתחממת במשך 25 - 30 שניות. **⓪** אורות יציבים: המכונה מוכנה לשימוש.

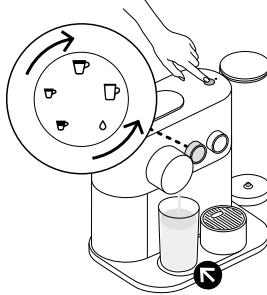

- ❷ טרם הכנת הקפה**, יש לשטוף את המכונה ע"י:  
1. הנחת מילר תחת פתח יציאת הקפה.  
2. סגירת מגנן ההחלקה (סליידר) וויבוב החוגה למתקן ולגא.  
כדי לבצע שטיפה למכונה.  
3. יש ללחוץ על הפעוללה 3 פעמים.  
4. בחר באפשרות ממס חם ולוחץ על כפתור חיליטת הקפה.  
5. יש ללחוץ על הפעוללה 2 פעמים.  
6. חקן את אגן הניקוז.


**❸ כדי** לחבר את המכונה יש לפעול לפי הוראות "הורדות האפליקציה" ו"צימוד" שבעמוק מס' 3.  
מספר מכשירים יכולים להיות מקושרים למכונת ה-Nespresso Expert של ע"י שימוש במספר לקלות יחודי. לביצוע צימוד למכשירים נוספים, אנא עקוב אחר אותן הוראות שבפרק "הורדות האפליקציה" ו"צימוד".

**⚠ קרא ומלא אחר הוראות הבטיחות במלואן כדי למנוע פגעה ונזק אפשריים.**

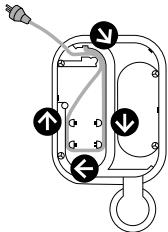


**② התאם את אורך הכבול, הסתור את שארית הכבול במקום האיחוסן שבתוחלת לאפסנה, וזאת כדי המכונה מוצבת בצורה תקינה.**

**⚠ חלקים חיצוניים אינם ניתנים לשטיפה במדיח כלים.**

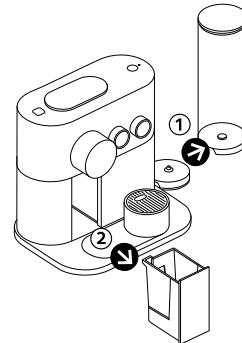

**① הסר את מכל המים ומילק הקפסולות המשמשות לניקוי (ואהה פרק ניקוי בחוברת).**


**⚠ אין להכניס את מכל המים למדיח הכלים.**

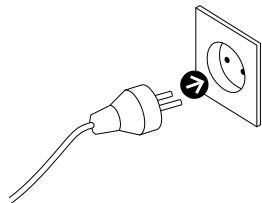


**⑤ לחבר את המכונה לשוקע החשמל.**

**③ מלא את מכל המים במיל שתייה טריים.**

**④ הצב את מכל המים בסיסי המיעוד והנץ את מגש היניקוז ומילק הקפסולות במקום.**

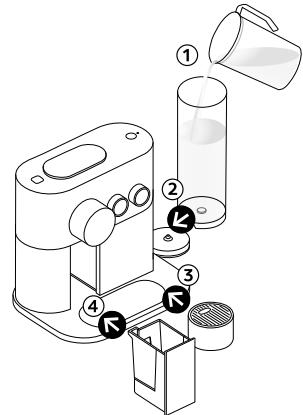

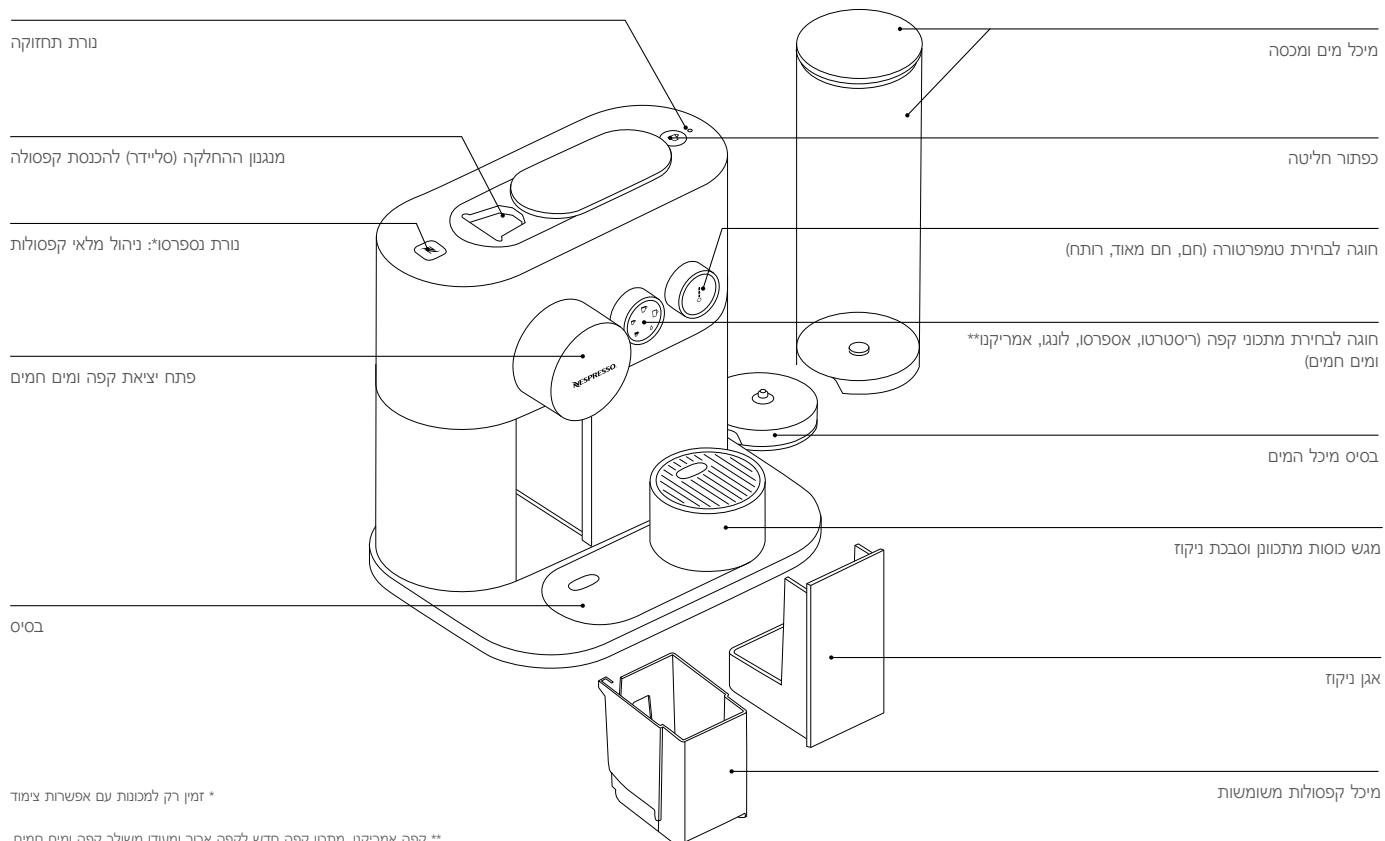

**שמור הוראות הפעלה אל  
העבר את הוראות  
הפעלה לכל משתמש  
אפשרי  
הוראות הפעלה זמינות  
גם בקובץ PDF באתר  
nespresso.com**

- בתחזקה נכונה של המכונה שבירכם ובכך להאריך את חי המכונה וליהנות מקפה מושלם כמו ביום הראשון.
- ערכת ניקוי האבנית של נספרטו פותחה במיוחד לשימוש במכונות נספרטו. כל שימוש בחומר מסיר אבניית אחר עלול להוביל לפגיעה באחד מרכיבי המכונה או לא לסתיר את האבניתה כהכלאה.
- תידירות ניקוי האבנית במכונות הנספרטו שברשותך תלוי בכמות המים וברמת הקשיות שלהם.
- חשוב לבצע ניקוי אבנית כמה שייותר סמוך להתראת ניקוי האבנית; ניקוי אבנית באחור עלול להיות אפקטיבי פחות.

- חזק או בחומרים ממיסים. השתמש במלילת לחה וחומר ניקוי עדין כדי לנוקות את משטח המכונה.
- כדי לנוקות את המכונה השתמש רק באביזרי ניקוי נקיים.
- בעת הוצאת המכונה מאריזתה, הסר את הנילון והשלך לפח.
- מכשיר זה תוכנן לשימוש עם קפסולות קפה של נספרטו הזרניות דרכן מעודן נספרטו בלבד.
- כל מכונת Nespresso עוברת בדיקות מחמירות וחלקו אף נלקח לבדיות פיזיות. על כן יתכן ובחלק מהמכונות יראו סימנים של שימוש, הנובעים מאותן בדיקות.
- נספרטו שומרת לעצמה הזכות לשנות הוראות ללא הträה מוקדמת.
- מכונה זו כוללת מגנטים.

**ניקוי אבנית**

- שימוש בערכת ניקוי אבנית של Nespresso, יסייע לכם

- ולגרום נזק למכשיר.
- אין להשתמש בקפסולה פגומה או עקומה. במידה וקפסולה נתקעה בבית הקפסולות, יש לכבות את המכונה ולהוציא את תקע החשמל טרם יבוצע כל שימוש נוספים במכונה. צור קשר עם נציגי המורשים.
- מלא את מיכל המים במים טריים וראוים לשתייה בלבד.
- ירוקן את מיכל המים במידה ולא יעשה שימוש במכשיר לפיק זמן ממושך.
- יש להחליף את המים במייל המים כאשר לא בוצע שימוש במכונה לפחות זמן ארוך, למשל בסופי שבוע.
- אין להשתמש במכשיר ללא אגן הניקוז והסבכה כדי להמנع משפיכת נזלים על המשטחים מסביב.
- אין לגעת במשטחים חמימים, השתמש בידיות או במשטחים מוגנים.
- אין להשתמש בחומר ניקוי

ההקלקה (הסליר) סגור לחלוון, ועוד כי יש מים במיכל במים, שמור את המכשיר וככל החשמל הרחק מהשג ידם של ילדים או חיוט מחמד. אין להשתמש במכשיר במידה ויזוק או איין פועל כראוי. הוצאת תקע החשמל מידית. צור קשר עם מודען נספרסואו או עם נציגי המורשים כדי לבחון את התקלה או לתקן.

מכשיר פגום עלול לגרום לדלקה, כוויות או התחרמלות.

יש לסגור את ידית ההרמה תמיד ואין להרימה בזמן פעולות המכונה.

אין להניח את האצבעות מתחת לפתח יציאת הקפה או המים החמים, סכנת כויה.

אין להניח את האצבעות בפתח הכנסת הקפסולה, סכנת פצעה.

מים עשויים לדזרום סביב הקפסולה כאשר אינה מתנקבת ע"י הלחים

- לעולם אין לטבול את המכשיר או חלק ממנו במים או כל נוזל אחר.
- לעולם אין להכניס את המכשיר לתוך מדיח כלים.
- הצירוף של חשמל ומים הינו מסוכן ועלול לגרום להתחSELות.
- אין לפתח את גוף המכשיר, מתוך חשמלי מסוכן.
- אין להכניס חפצים לתוך פתחי המכשיר. פעולה זו עלולה לגרום לדלקה או התחרמלות.
- יש להמנע מגיעה ונזק אפשריים כאשר מתפעלים את המכשיר.**
- אין להשאיר את המכשיר ללא השגחה במצב חליטה באופן ידני. במקרה של טרומ תכונות או תכונות מרחוק, יש לנ��וט באמצעות זיהירות נוספים על מנת להמנע מגיעה כגון:
- להקfid על השימוש לוועד המכשיר, לוודא כי גודל הספל המתאים מונח על תומך הכווותת מגנון
- במידה ונדרש לקבל מאירה, השתמש בכבול עם הארקה בלבד בעלי חוטי הולכה בעובי 1.5 ממ"ר לפחות, או בתקע תואם.
- כדי למנוע נזק וסכנה, אין למקם את המכשיר על גבי משטחים חמימים כגון רדיוטוריים, כיריים, מעברי גז, להבה פתוחה וצדומה, או בקרבתם.
- יש להניח את המכשיר על משטח יציב ומאוזן.
- המשטח חייב להיות חסין אש ונזלים, כגון: מים, קפה, מסיר אבניות וצדומה.
- נתק את המכשיר מהחשמל כאשר אינו בשימוש לפחות זמן ממושך. נתק באמצעות דקע החשמל ולא הוצאה תקע החשמל ולא ע"י משיכת כבל החשמל עצמו, פעולה זו עלולה לגרום נזק לכבל החשמל.
- טרם ניקוי המכונה יש לנטקה מהחשמל ולהניח לה התקרר. אין לנתק ע"י משיכת כבל החשמל.
- לעולם אין לגעת בכבול החשמל בידים רטובות.

## הוראות בטיחות






# מפרט טכני C80

## תיק

3	הורדת אפליקציה
3	צמוד
3	הגדירות חיבור
4	טפלת האראה
4	Nespresso Expert
5	מפרט טכני
8-6	הוראות בטיחות
9	סקירת מכונה
10	שימוש ראשוני
11	הדלקה וכיבוי המכונה
13-12	הנחת כפה רגילה
14	כניסה למצב תכנות הגדירות
14	תכנות חיסכון באנרגיה
14	תכנות כמות מים
15	שחזור הגדירות ייצן
15	ריקון המערכת
16	ניקיון
17	קשהות מים
19-18	ניקוי אבנית
20	פעולת תקלות
21	יזורת קשר עם מזעדי נספרוט
21	פיני פסולות והגנה על הסביבה
21	אחריות מגבלת

220-240 V~, 50-60 Hz, 1150-1260 W	~
GHz 2.480 - 2.402	
4dBm	מוגAIR שידור מקסימלית
תדר	
Pmax	בר 19
4 ק"ג	kg
1.1 ליטר	ליטר
38.05 ס"מ 28.7 ס"מ 22.3 ס"מ	

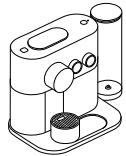

# הורדת אפליקציה

3 **הקלן** על איקון המכונה.



2 **פתח את**  
האפליקציה.

1 **הורד** את אפליקציית סופרזו במידה והאפליקציה כבר קיימת  
במכשיר, בצע עడון.



לבחינת התאימות מכשירך נסו לאתר [nespresso.com](http://www.nespresso.com)


## הגדרות חיבור

- ניהול מתכוני קפה
- ניהול מלאי קיטסולאות
- הגדלת מועד להכנות קפה
- הכנת קפה עת
- הודיעת תחזוקה
- התראות ניקוי אבטחת
- פונקציות נוספות דרך האפליקציה

## ציימוד

טרם לך, יש לוודא כי אופציית הבלוטות במכשיר דולקת.

כאשר פעולת הצימוד מסתיימת, תורת  
הנספרו ותחבר ב 3 פעמים.

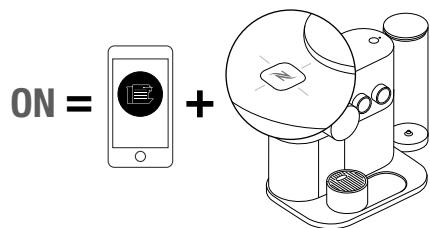

הוראות הפעלה

2

3

