


MOUNTING

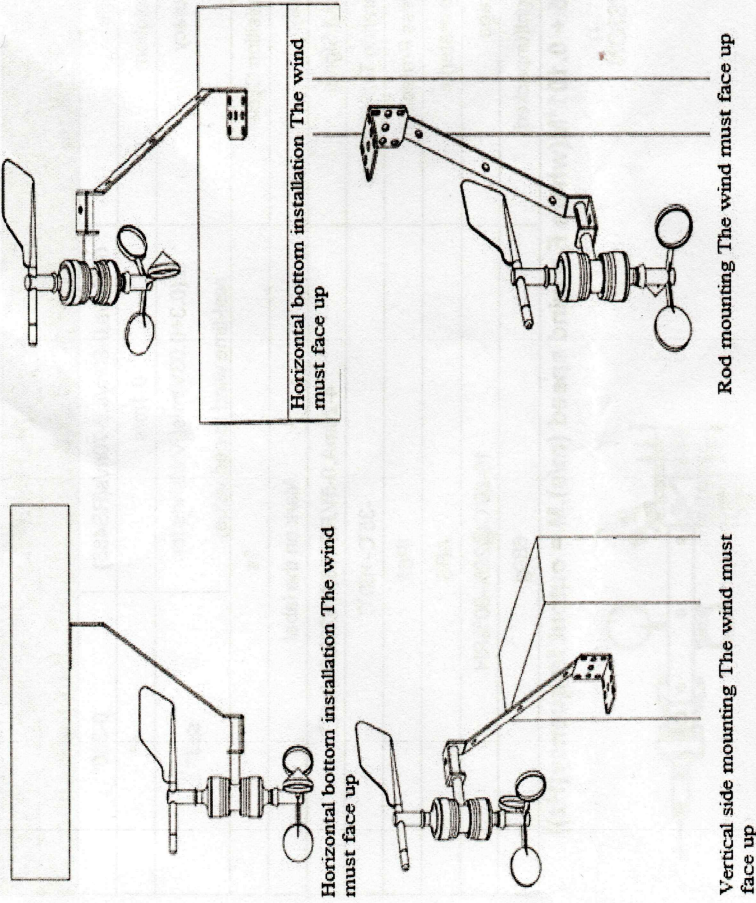

ELECTRICAL CONNECTIONS

Connector/cable	Current	0-5V	RS485/RS232
Red(PIN1)	V+	V+	V+
Green(PIN2)	V-	V-	V-
Black(PIN4)			RS485A/RXD
Yellow(PIN5)			RS485B/TXD
White	Wind speed	Wind speed	
Brown/Blue	Wind direction	Wind direction	
Green			

Note: This product has been tested and complies with European CE requirements for EMC directive.

Communication Protocol (MODBUS)

Transmission mode: MODBUS-RTU, Baud rate: 9600bps, Data bits: 8, Stop bit: 1, Check bit: no

Slave address: the factory default is 01H (set according to the need, 00H to FFH)

The 03H Function Code Example: Read The Wind Speed & Wind Direction

Host Scan Order (slave address: 0x01)

01 03 00 00 00 02 C40B

Slave Response

01 03 04 01 5C 00 73 7A 38

Wind speed: (015C)H = (348)D, 348/10 = 34.8m/s

Wind direction: (0073)H = (115)D = 115°

- The 06H Function Code Example: Modify the slave address (fixed command, ensure that no other devices on the bus)

Host Scan Order (Changed 01H to 02H):

01 06 00 20 00 02 09C1

Slave Response

01 06 00 20 00 02 09C1

If you forget the original address, you should use the broadcast address (00H) (ensure that no other devices on the bus at this time).

Note:

- All underlined is fixed bit;
- The last two bytes is CRC check command.

WARRANTY

This product is warranted to be free of defects in materials and construction for a period of 12 months from date of lead time. Liability is limited to repair or replacement of defective item.

CE