


Programming the test board

Only needed once, or when Jitter supplies new firmware. After programming, the board runs the test on its own, with no PC.

Equipment

Item	Setting
Power supply via Würth 691361300002 or 691368300002B	12.0 V, 1 A or more
SWD programmer (J-Link, ST-LINK, or another programmer that supports the STM32L4R5VIT6)	–
PC with the flash program and the firmware file, both supplied by Jitter	–

Connections

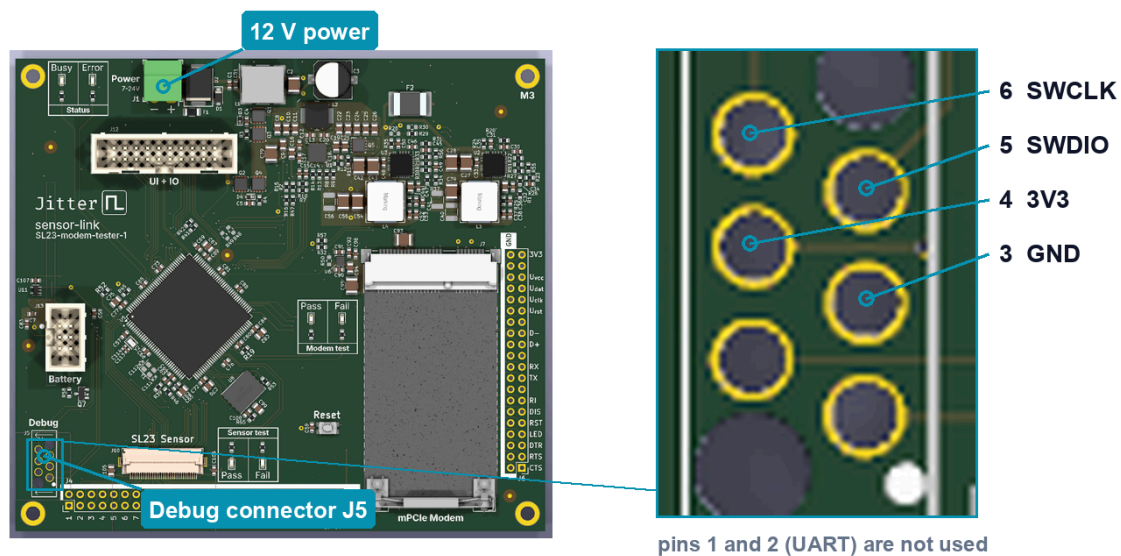

Steps

1. Connect the SWD programmer to **J5**, as in the drawing above.
2. Connect 12 V to the power connector.
3. Run the flash program on the PC and wait until it reports success.
4. Disconnect the programmer.

All LEDs light up briefly, then **Busy** starts blinking: the board is ready. It keeps the firmware when the power is removed.

The test itself is described in the work instruction, *Modem factory test*.