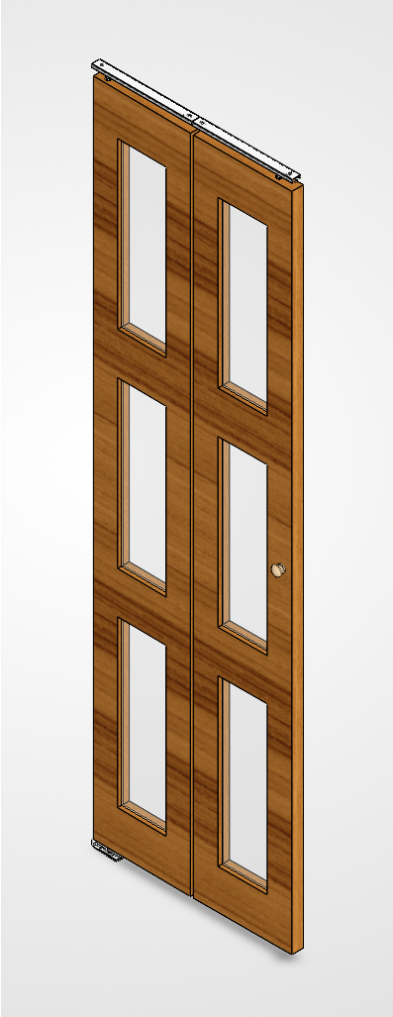
INSTALLATION GUIDE

Professional Bifold Door Installation Guide

BOM-Referenced | 2-Panel Bifold Door with Pivot and Guide Wheel Hardware



Assembled unit - isometric view



Assembled unit - front view

Before you begin. This guide references the supplied Bill of Materials (BOM). Verify all parts and quantities before starting. If any item is missing or damaged, stop and contact the supplier. Installation should be performed by a qualified individual using the manufacturer's instructions where they differ from this guide.

1 Tools and Materials

Tools

- Drill and assorted bits
- Spirit level
- Tape measure
- Hammer or rubber mallet
- Screwdrivers: Phillips and flat-head
- Hacksaw or metal snips for trimming rail
- Pencil
- Safety glasses
- Two-person lift assistance for hanging doors

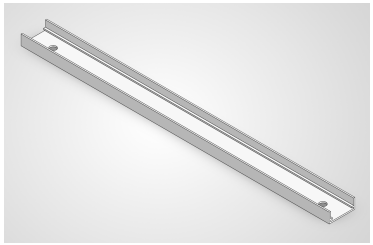
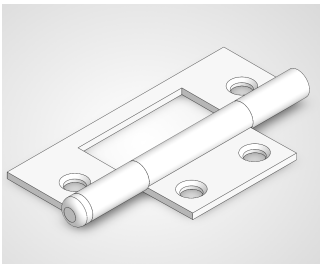
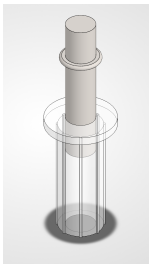
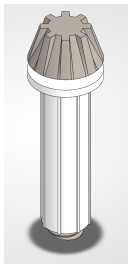
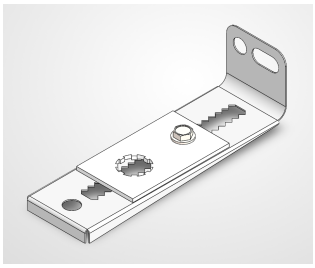
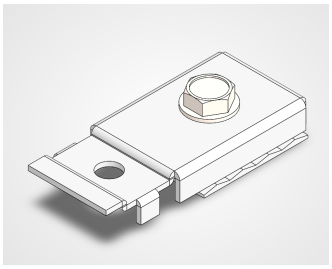
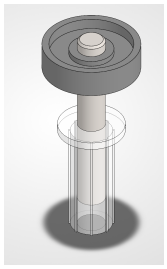
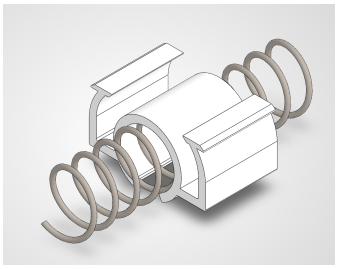
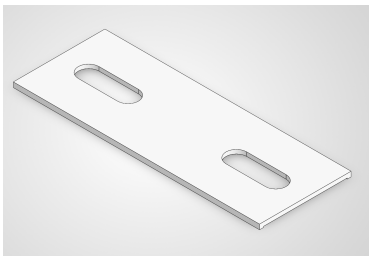
Bill of Materials

Item	Part Number	Part Name	Qty
1	**PRT-001**	Door	2
2	**PRT-002**	U Channel Aluminum Rail	2
3	**PRT-003**	Non Morse Hinge	3
4	**PRT-004**	Top Metal Pivot	1
5	**PRT-005**	Bottom Pivot	1
6	**PRT-006**	Bottom Bracket	1
7	**PRT-007**	Top Bracket	1
8	**PRT-008**	Guide Wheel	1
9	**PRT-009**	Door Spring	1
10	**PRT-010**	Connector	1
11	**PRT-011**	Handle	1
12	**HW-001**	#10 x 1.5" Flat Head Wood Screw	6
13	**HW-002**	#8 x 0.75" Flat Head Wood Screw	12
14	**HW-003**	#10 x 1" Flat Head Wood Screw / Concrete Anchor	1
17	**HW-006**	M4 x 40mm Machine Screw	1

Fastener note: Use the fasteners specified by the kit for each connection. Confirm substrate type (wood, drywall over framing, or concrete) and use HW-003 concrete anchors only where appropriate. Do not substitute fasteners unless approved by the manufacturer.

Component Reference

Use the images below to identify each part before you begin. Part numbers match the Bill of Materials.

		
PRT-001 Door (x2)	PRT-002 U Channel Aluminum Rail (x2)	PRT-003 Non Morse Hinge (x3)
		
PRT-004 Top Metal Pivot	PRT-005 Bottom Pivot	PRT-006 Bottom Bracket
		
PRT-007 Top Bracket	PRT-008 Guide Wheel	PRT-009 Door Spring
		
PRT-010 Connector	PRT-011 Handle	

Hardware Reference

Fasteners listed in the BOM. Reference photos are shown for each. Finish and head markings on your kit may differ slightly.



HW-001 **Qty 6**

#10 x 1.5" Flat Head Wood Screw

Used for: Top rail (PRT-002) to header, with or in place of HW-002 as the kit specifies; must engage structural framing. Two of the six screws are used on PRT-006 Bottom Bracket for vertical attachment.

Countersunk (flat) head; partially threaded shank.



HW-002 **Qty 12**

#8 x 0.75" Flat Head Wood Screw

Used for: Top rail (PRT-002) mounting, and the three PRT-003 hinges between door panels.

Countersunk (flat) head; threaded along the shank.



HW-003 **Qty 1**

#10 x 1" Flat Head Wood Screw / Concrete Anchor

Used for: Fastens PRT-006 Bottom Bracket to the floor or jamb. Use the anchor only on concrete or masonry.

Shown with expansion anchors (reference photo). Confirm the substrate first.



HW-006 **Qty 1**

M4 x 40mm Machine Screw

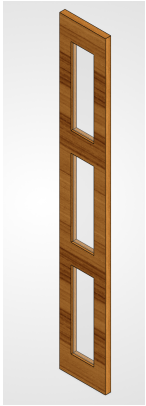
Used for: PRT-010 Connector where specified.

Metric machine thread, pan head.

Note: The BOM lists no HW-004 or HW-005. If your kit includes either, confirm its details with the supplier.

2 Pre-Installation Preparation

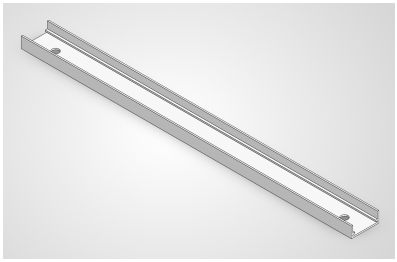
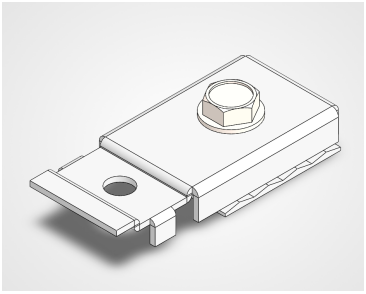
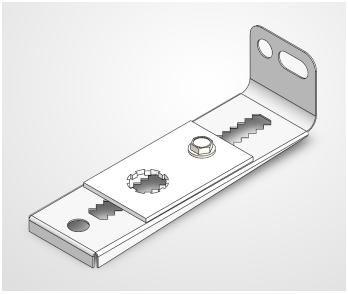
1. **Verify the opening dimensions.** Measure the finished opening height and width. The opening should typically be approximately 1/2 inch wider and 1 to 1.5 inches taller than the door unit, unless the manufacturer specifies otherwise.
2. **Check frame square and plumb.** Use a spirit level to confirm the header is level and the side jambs are plumb. Correct significant framing irregularities before installing hardware.
3. **Finish the doors first.** If painting or staining PRT-001 Door panels, complete all panels, edges, and sides before installing hardware.
4. **Identify the pivot side.** Confirm the hinge/pivot side and the lead-opening side before marking or drilling.



PRT-001 Door panel (shown with glazed openings)

3 Install U-Channel Rails and Brackets

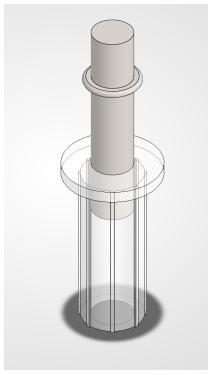
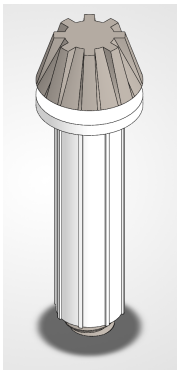
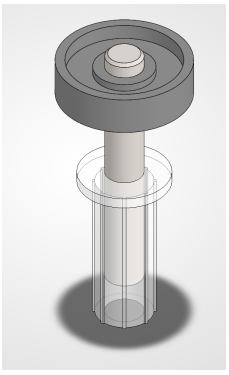
1. **Mark the center line.** Measure the opening width and mark the center line along the top header.
2. **Prepare PRT-002 U Channel Aluminum Rail.** Cut the rail to fit the opening if required, allowing slight clearance per manufacturer specification, typically 1/16 inch to 1/8 inch.
3. **Install the top rail.** Center PRT-002 on the header and fasten securely using HW-001 and/or HW-002 as specified by the kit. Ensure fasteners engage structural framing.
4. **Install the second PRT-002 rail if required.** Where the kit uses two U-channel rails, install the second rail as the bottom guide/track per manufacturer layout. Confirm it is level and aligned with the top rail.
5. **Install PRT-007 Top Bracket.** Position the top bracket on the pivot side under the top rail. Fasten securely.
6. **Install PRT-006 Bottom Bracket.** Use a plumb line from the top pivot point to align PRT-006 directly below PRT-007. Fasten PRT-006 to the floor or jamb using HW-003 as appropriate for the substrate. Secure the vertical flange of PRT-006 with two HW-001 screws.

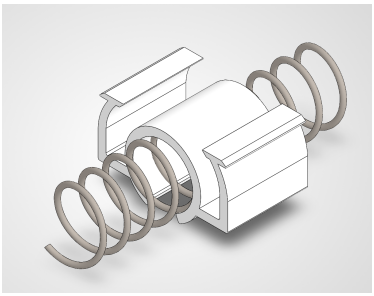
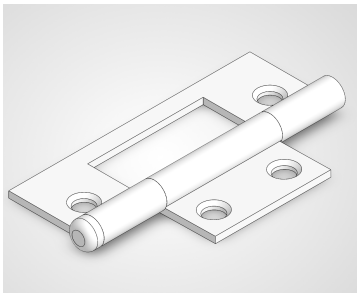
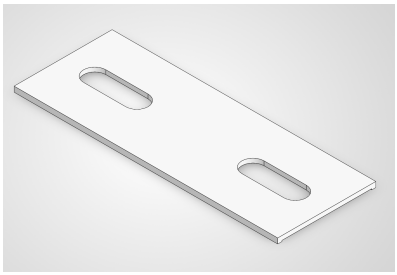
		
PRT-002 U Channel Aluminum Rail	PRT-007 Top Bracket	PRT-006 Bottom Bracket

Critical check: The top pivot point and bottom bracket pivot point must be plumb. Misalignment is the most common cause of binding doors.

4 Attach Hardware to Door Panels

1. **Install PRT-004 Top Metal Pivot.** Attach the top metal pivot to the top edge of the pivot door panel in the pre-drilled location.
2. **Install PRT-005 Bottom Pivot.** Attach the bottom pivot to the bottom edge of the pivot door panel in the pre-drilled location.
3. **Assemble PRT-008 Guide Wheel and PRT-009 Door Spring.** Insert the guide wheel and spring into the top pre-drilled hole of the lead door panel per kit design. Confirm the spring-loaded guide wheel depresses and returns freely.
4. **Connect door panels with PRT-003 Non Morse Hinge.** Attach the three hinges using HW-002, or as specified. Ensure panels fold freely and hinge screws are snug.
5. **Install PRT-010 Connector.** Install the connector where indicated by the kit layout, typically for panel-to-panel or rail connection. Use HW-006 as specified. Do not force the connector.
6. **Leave PRT-011 Handle for final adjustment.** Install the handle only after the doors are hung and aligned.

		
PRT-004 Top Metal Pivot	PRT-005 Bottom Pivot	PRT-008 Guide Wheel

		
PRT-009 Door Spring	PRT-003 Non Morse Hinge	PRT-010 Connector

5 Hang the Doors

Use two people for this step.

1. **Engage the top pivot.** Fold the door panels slightly and engage PRT-004 Top Metal Pivot into PRT-007 Top Bracket/top rail pivot point.
2. **Engage the guide wheel.** Depress PRT-008 Guide Wheel against PRT-009 Door Spring and guide it under the top PRT-002 U Channel Aluminum Rail. Release it so it locks inside the track.
3. **Set the bottom pivot.** Lift the doors slightly and lower PRT-005 Bottom Pivot into PRT-006 Bottom Bracket. Confirm the pivot is fully seated and any locking teeth or mechanism engage properly.

6 Adjust and Align

1. **Height and plumb adjustment.** Adjust the top pivot bracket screw or the threaded stem on PRT-005 Bottom Pivot to raise or lower the door until it hangs straight, plumb, and clears the floor.
2. **Side-to-side adjustment.** Slide PRT-007 Top Bracket left or right in the rail to achieve an even vertical gap along the door frame.
3. **Install PRT-011 Handle.** Install the handle on the leading panel approximately 36 inches from the floor, or per manufacturer recommendation.
4. **Operate the doors.** Open and close the doors several times. Confirm smooth movement, proper folding, and that PRT-008 Guide Wheel remains engaged in PRT-002 Rail.

	
PRT-011 Handle	Finished installation (isometric)

7 Final Inspection and Maintenance

- Confirm all screws are tight and all BOM components are installed.
- Verify the doors are plumb, level, and clear of the floor.
- Check that PRT-004, PRT-005, PRT-006, PRT-007, and PRT-008 operate without binding.
- Periodically inspect fasteners and lubricate track and pivot points with a silicone-based lubricant as needed.

> **Troubleshooting:** If operation is difficult, re-check that PRT-006 Bottom Bracket is plumb with PRT-007 Top Bracket, that PRT-002 rails are level and aligned, and that pivot pins and guide wheel are fully seated.