


NO.4 E/R VENT. FAN (REV) — How it works: POWER path from START

HI-2536-ME-SD1 · Highlighted wires show energize order for SUPPLY (Forward) start

1 Power in (R/S/T) 2 Reduced-V start 3 Full-V run 4 EOCR monitor 5 Feedback / heater

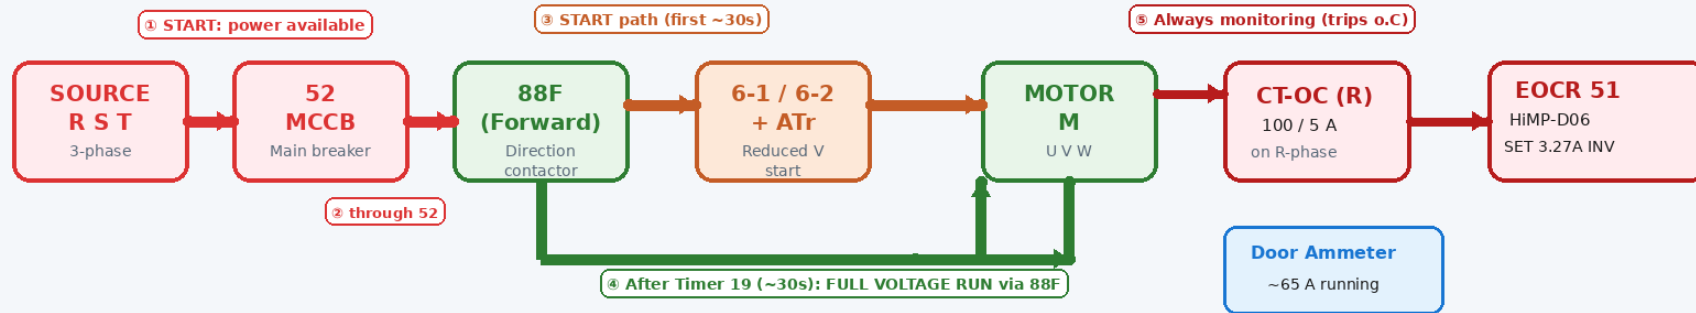

STEP A — Press SUPPLY

SMC commands 4F
88SH heater opens
Start contactors pick up

STEP B — Reduced voltage

Power wire via ATr taps
(6-1 / 6-2) limits inrush
Timer 19 starts (~30s)

STEP C — Full voltage run

Transfer to full V on 88F
4FX feedback to SMC
EOCR watches current

If EOCR > SET 3.27

INV delay → minutes
then o.C + ABNORMAL
(your confirmed trip)

Wire colors = energize order from START (Supply/Forward). Reverse uses 88R / 4RX the same way.


CT-OC(R) 100/5 · FLA 65.4A · EOCR SET 3.27A · Your run: door ~65A, EOCR ~3.63A

NO.4 E/R VENT. FAN (REV) — How it works: CONTROL wires from START

HI-2536-ME-SD2 · SMC-503H · Highlighted control path when you press SUPPLY



PROTECTION / STOP string in control (must stay closed to keep running)



YOUR TRIP PATH (confirmed)

EOCR measures ~3.63 A > SET 3.27 A

INV delay → several minutes

95-96 opens → 88F drops → Amp 0

97-98 → SMC ABNORMAL ON · display o.C

Full start sequence (wires energize in this order)

1. CPT feeds SMC SOURCE (control live).
2. Press SUPPLY → SMC 4F closes → run command wire to starter.
3. Heater circuit 88SH drops out (HEATING off).
4. Start wires energize 6-1 / 6-2 + ATr (reduced voltage) and 88F path.
5. Timer 19 (~30 s) — start wire transfers to full-voltage run on 88F.
6. 4FX aux closes — feedback wire to SMC → SUPPLY RUN lamp ON.
7. CT-OC(R) sense wire continuously feeds EOCR; if > SET → o.C trip opens control NC 95-96.
8. Normal STOP: SMC releases 4F → contactors open → (optional) heater ON if HEATER switch ON.

Highlighted thick lines = control/power wires in start order. Reverse = same with EXHAUST / 88R / 4RX.