

NO.4 E/R VENT. FAN (REV) | START -> RUN -> STOP SEQUENCE

START: 1) Press SUPPLY -> 88F ON -> 6-1 ON -> 6-2 ON -> TIMER 19 ON -> AUTO TR ON (80% = 352V)

RUN: AFTER ~30 SEC -> 6-1 & 6-2 OFF -> 88 ON (full voltage) -> CT-OC -> MOTOR | EOCR 51 monitoring

STOP: Press STOP / EOCR o.c -> 88 & 88F OFF -> Motor coasts -> (HEATER ON if switch ON)

START VOLTAGE
440V x 0.8 = 352V
(ATr 80% tap)


$I = V / R$
lower V => lower I start

1 START (~0-30s)
6-1 + 6-2 + ATr ON
Timer 19 timing
reduced voltage

2 RUN (after 30s)
6-1 & 6-2 OFF
88 ON full voltage
EOCR watches current

3 STOP
STOP or EOCR o.C
88 / 88F OFF
Amp -> 0

YOUR CASE
EOCR o.C on R
rc=3.40 R~3.65
Door ~65A

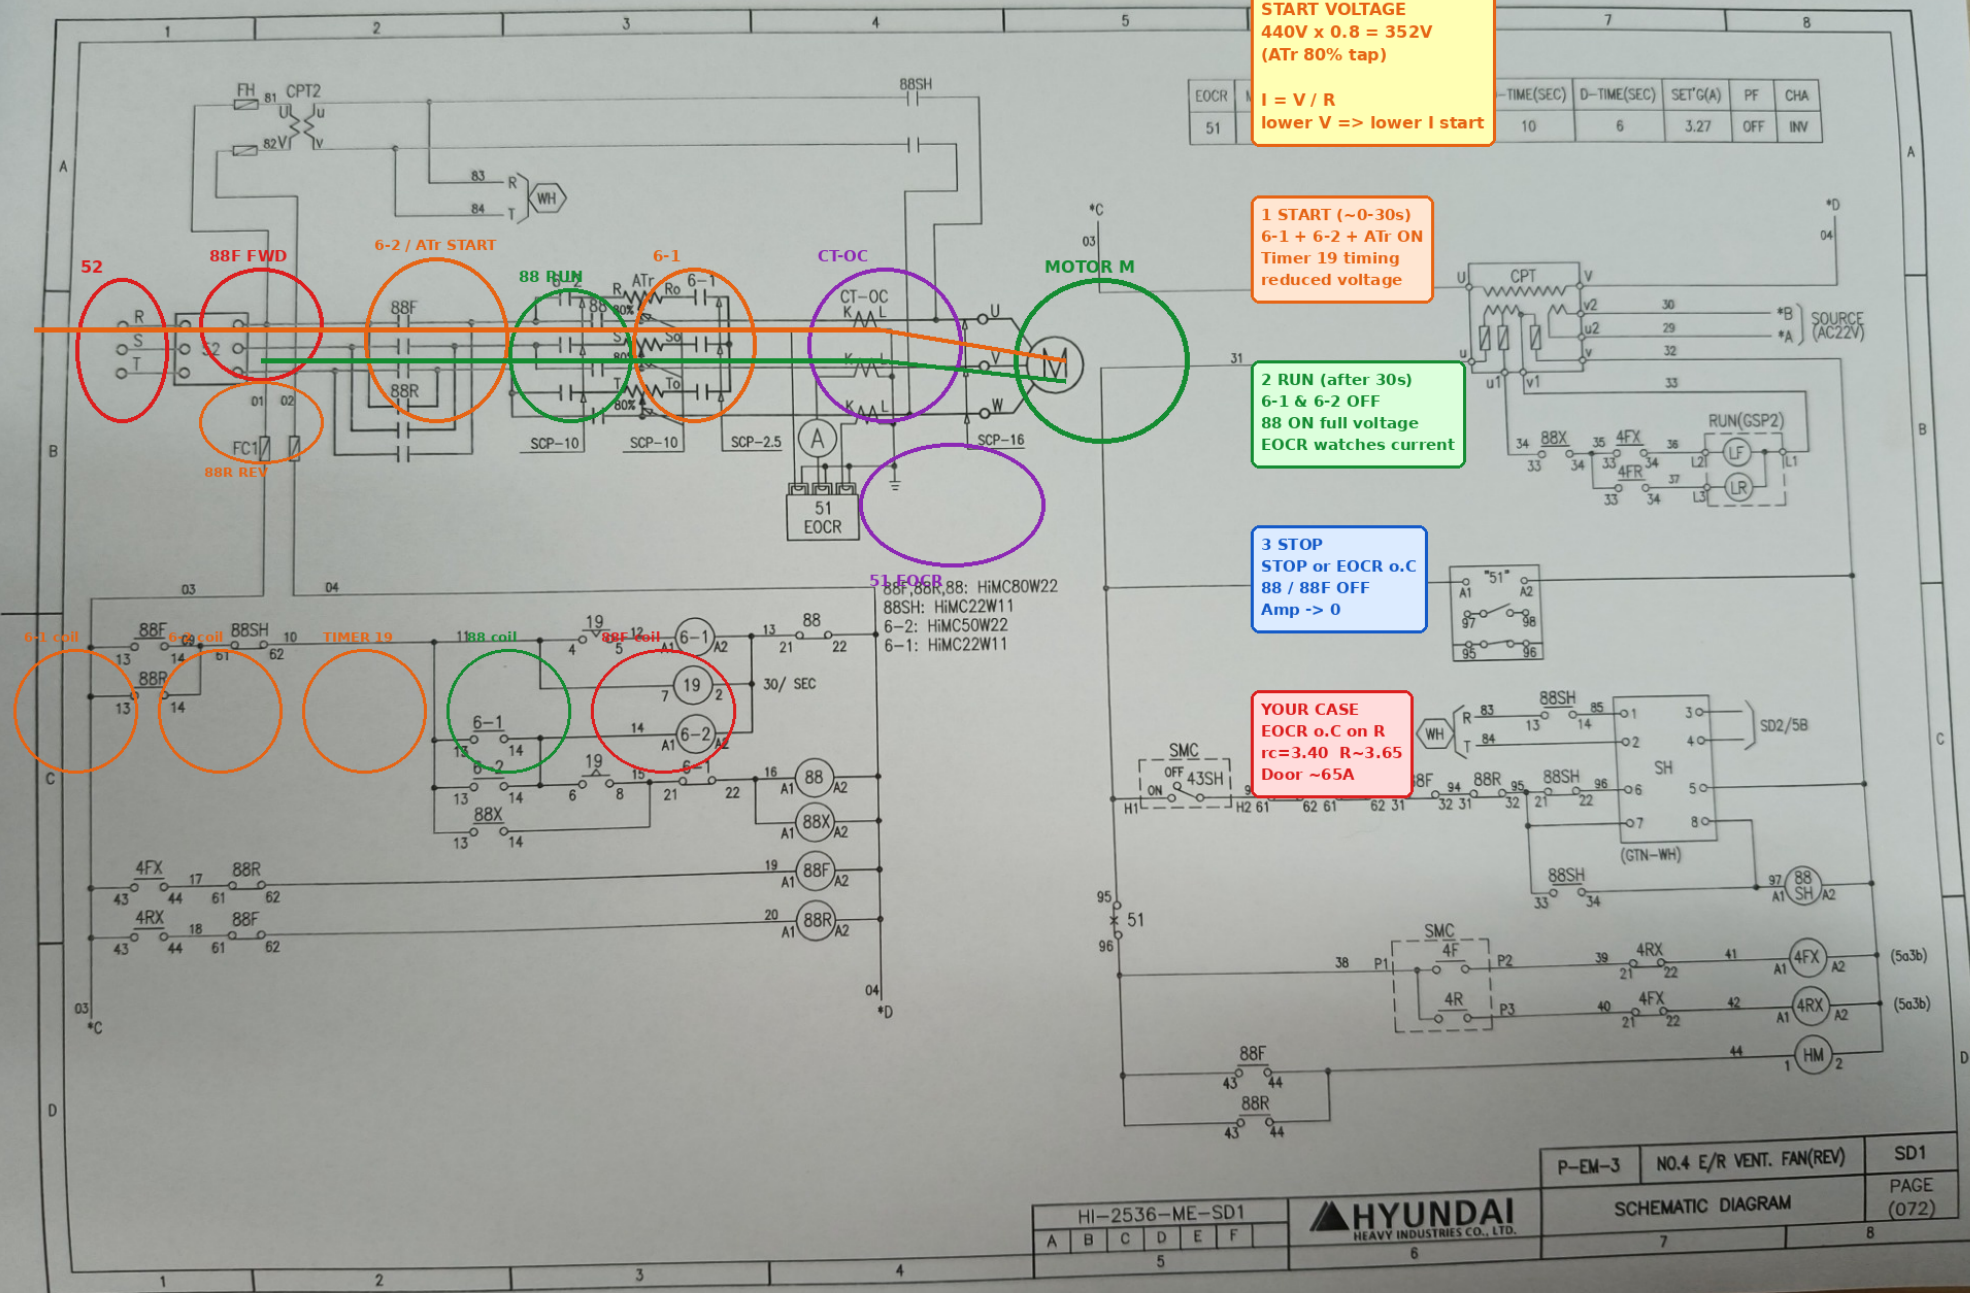

RED=direction/power in ORANGE=START path (ATr) GREEN=RUN path PURPLE=EOCR/CT BLUE=STOP

HI-2536-ME-SD1 p.072 | Annotated START -> RUN -> STOP | Same style as handwritten notes

NO.4 E/R VENT. FAN (REV) | SMC-503H CONTROL | START -> RUN -> STOP

START: SOURCE ON -> Press SUPPLY -> SMC 4F ON -> command to starter (88F + 6-1/6-2/ATr sequence)

RUN: 4FX feedback ON -> SUPPLY RUN lamp ON -> EOCR 51 monitors -> HEATING OFF

STOP: Press STOP OR EOCR o.C (51) -> 4F OFF -> ABNORMAL if trip -> HEATING ON if heater switch ON

1 SOURCE
S1-S2 AC220V
SOURCE lamp ON

2 START
Press SUPPLY
internal 4F ON


3 TO STARTER
pick up 88F
+ start sequence

4 RUN OK
4FX feedback
SUPPLY lamp ON

5 PROTECT
51 EOCR contact
opens on o.C

6 STOP
STOP button
or abnormal trip

SMC-503H CONTROLLER

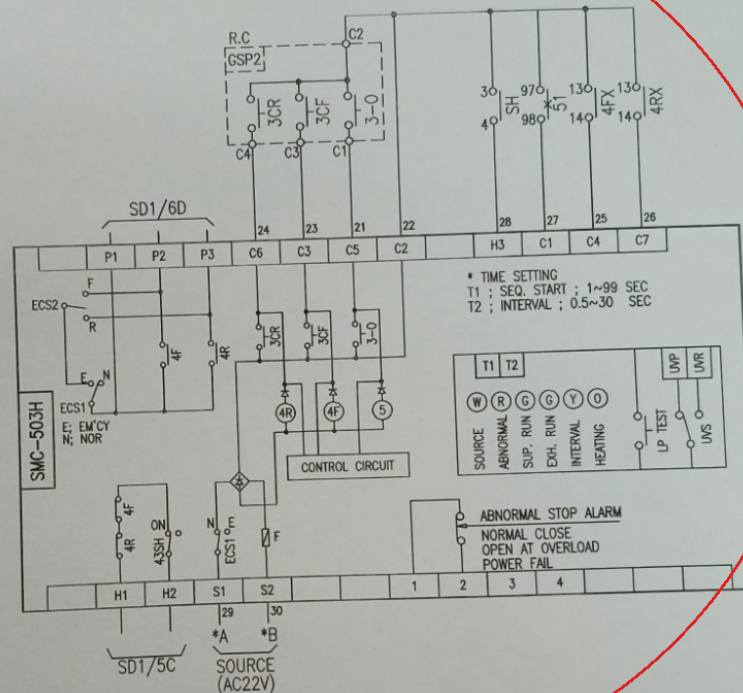

LAMPS
W SOURCE
R ABNORMAL
G SUP RUN
G EXH RUN
Y INTERVAL
O HEATING

YOUR TRIP
ABNORMAL ON
EOCR = o.C
R phase LED
rc=3.40
R reading 3.65

TIMERS
T1 SEQ START
T2 INTERVAL
Starter Timer19
~30 sec -> RUN

STOP TYPES
Normal: HEATING
ABNORMAL OFF
Trip: ABNORMAL
ON + o.C

HI-2536-ME-SD2					
A	B	C	D	E	F
5					

HYUNDAI	
HEAVY INDUSTRIES CO., LTD.	
6	

P-EM-3	NO.4 E/R VENT. FAN(REV)	SD2
SCHEMATIC DIAGRAM		PAGE (073)
7		8