

MPR121 & NEOPIXEL SEQUENCER UI CHEATSHEET

TOP LEVEL COMMANDS

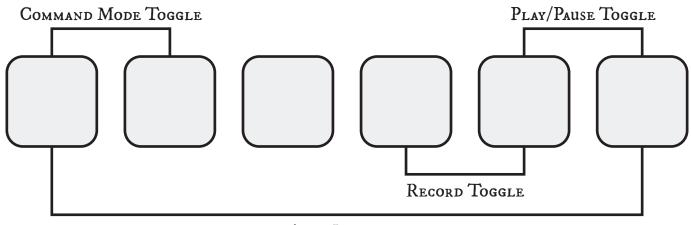


ALL NOTES OFF

COMMAND MODE SELECT



COMMAND MODE VALUE CHANGE

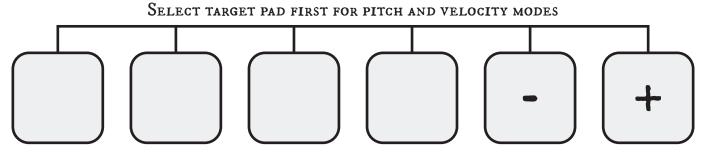

You do not need to select a target pad for tempo, shuffle, length and channel modes. Use pad 5 to decrement value and pad 6 to increment value. Press the command mode toggle pads to return to performance mode.