Data Formats Reference Manual
PSS®E 36.5.0

February 2026

SIEMENS

Siemens Industry, Inc.
Siemens Power Technologies International
400 State Street
Schenectady, NY 12301-1058 USA
+1 518-395-5000
www.siemens.com/power-technologies

Copyright © 1997 - 2026 Siemens Industry, Inc., Siemens Power Technologies International

Information in this manual and any software described herein is confidential and subject to change without notice and does not represent a commitment on the part of Siemens Industry, Inc., Siemens Power Technologies International. The software described in this manual is furnished under a license agreement or nondisclosure agreement and may be used or copied only in accordance with the terms of the agreement. No part of this manual may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying, for any purpose other than the purchaser's personal use, without the express written permission of Siemens Industry, Inc., Siemens Power Technologies International.

PSS®E high-performance transmission planning software is a registered trademark of Siemens Industry, Inc., Siemens Power Technologies International in the United States and other countries.

The Windows 10® and Windows Server 2016 and later operating systems, the Visual C++® development system, Microsoft Office Excel® and Microsoft Visual Studio® are registered trademarks of Microsoft Corporation in the United States and other countries.

The Intel® Visual Fortran Compiler and Intel® oneAPI Toolkit for Windows is a trademark of Intel Corporation in the United States and other countries.

The Python™ programming language is a trademark of the Python Software Foundation.

Other names may be trademarks of their respective owners.

Table of Contents

Power Flow Data File (RAW) 1
Overview 1
Extensible Power Flow Data File (RAWX) Documentation 1
Extended Bus Names 1
Default Values 2
Q Record 2
Case Identification Data 4
System-Wide Data 5
GENERAL Record 6
GAUSS Record 6
NEWTON Record 7
ADJUST Record 8
TYSL Record 8
SOLVER Record 9
BRANCH RATING NAME Record 10
SWITCHING DEVICE RATING NAME Record 10
Bus Data 11
Bus Data Notes 13
Load Data 13
Load Data Notes 15
Constant Power Load Characteristic 15
Constant Current Load Characteristic 16
Fixed Bus Shunt Data 17
Fixed Shunt Data Notes 19
Voltage Droop Control Data 19
Voltage Droop Control Data Notes 21
Generator Data 21
Reactive Power Limits 25
Modeling of Generator Step-Up Transformers (GSU) 25
Multiple Machine Plants 26
Switching Device Rating Table Data 28
Non-Transformer Branch Data 29
Zero Impedance Lines 32
System Switching Device Data 33
Transformer Data 35
Three-Winding Transformer Notes 50
Example Two-Winding Transformer Data Records 50
Example Three-Winding Transformer Data Records 51
Transformer Vector Group Clock Position and Phase Angle 52
Two Winding Transformer Vector Groups 54
Three Winding Transformer Vector Groups 55
Areas, Zones and Owners 57
Area Interchange Data 59
Area Interchange Data Notes 60
Two-Terminal DC Transmission Line Data 61
Two-Terminal DC Line Data Notes 65
Voltage Source Converter (VSC) DC Transmission Line Data 65
VSC DC Line Data Notes 68

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

Transformer Impedance Correction Tables 69
Impedance Correction Table Notes 71
Multi-Terminal DC Transmission Line Data 72
Multi-Terminal DC Line Notes 78
Multi-Section Line Grouping Data 79
Multi-Section Line Example 80
Multi-Section Line Notes 81
Zone Data 81
Zone Data Notes 82
Interarea Transfer Data 82
Interarea Transfer Data Notes 83
Owner Data 83
FACTS Device Data 84
FACTS Device Notes 88
Switched Shunt Data 89
Switched Shunt Notes 93
Switched Shunt Example 94
GNE Device Data 95
Induction Machine Data 97
Machine Electrical Data 101
Load Mechanical Data 102
Load Type Data 102
Load Type Data Notes 103
Interface Data 103
Interface Element Data 104
Substation Data Group 107
Substation Data 108
Node Data 108
Node Data Notes 109
Station Switching Device Data 110
Equipment Terminal Data 111
RAWX Data Table Format for Equipment Terminal Data 111
Load Terminal Data 112
Fixed Shunt Terminal Data 113
Machine Terminal Data 113
Branch and two winding Transformer Terminal Data 113
Three winding Transformer Terminal Data 114
Switched Shunt Terminal Data 114
Induction Machine Terminal Data 115
Two-terminal DC Line Terminal Data 115
Voltage Source Converter (VSC) DC Line Terminal Data 116
Multi-terminal DC Line Terminal Data 116
FACTS Device Terminal Data 117
End of Data Indicator 117
Power Flow RAW Format Change Summary 118
Extensible Power Flow Data File (RAWX) 127
Overview 127
Additional RAWX Documentation 127
Introduction to JSON 128
JSON Data Types 128
RAWX Format Specification 129

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

RAWX File Structure 129
Parameter Sets 131
Data Tables 132
Field List Customization 133
Custom Field Definitions 134
Partial Datasets (Read and Change) 135
Custom Table Definitions 137
Importing/Exporting from CSV files 138
Importing RAWX tables from CSV 138
Exporting RAWX tables to CSV 139
Sequence Data File 141
Overview 141
Change Code 142
System Wide Data 142
Generator Sequence Data 143
Load Sequence Data 146
Zero Sequence Non-Transformer Branch Data 147
Zero Sequence Mutual Impedance Data 148
Zero Sequence Transformer Data 150
Zero Sequence Switched Shunt Data 158
Zero Sequence Fixed Shunt Data 159
Induction Machine Sequence Data 160
Non-Conventional Source - Fault Contribution Characteristics Data 162
Non-Conventional Source - Generator Data 165
Application Notes - Transformers in the Zero Sequence 168
Auto Transformer Equivalent Circuit 169
Two Winding Transformer Zero Sequence Networks 170
CC=1 and CC=11 170
CC=2 and CC=12 171
CC=3 and CC=13 173
CC=4 and CC=14 175
CC=5 and CC=15 176
CC=6 and CC=16 177
CC=7 and CC=17 179
CC=8 and CC=18 180
CC=9 and CC=19 182
CC=20 184
CC=21 186
CC=22 187
Three Winding Transformer Zero Sequence Network 188
CC=1 and CC=11 (511) 189
CC=2 and CC=12 (113) 190
CC=3 and CC=13 (313) 191
CC=4 and CC=14 (333) 192
CC=5 and CC=15 (121) 193
CC=6 and CC=16 (111) 194
CC=17 195
CC=18 197
Sequence Data Format Change Summary 198
Optimal Power Flow Data File 201
Overview 201

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

Change Code 202
Bus Voltage Constraint Data 202
Bus Voltage Attribute Record 203
Adjustable Bus Shunt Data 204
Bus Load Data 205
Bus Load Record 205
Adjustable Bus Load Table Data 206
Adjustable Bus Load Table Record 206
Generator Dispatch Data 207
Generator Dispatch Data Record 207
Active Power Dispatch Data 208
Active Power Dispatch Record 208
Generation Reserve Data 209
Generation Reserve Record 209
Generation Reactive Capability Data 210
Generation Reactive Capability Record 210
Adjustable Branch Reactance Data 211
Adjustable Branch Reactance Record 211
Piece-wise Linear Cost Data 212
Piece-wise Linear Cost Record 213
Piece-wise Quadratic Cost Data 213
Piece-wise Quadratic Cost Record 214
Polynomial and Exponential Cost Table 215
Polynomial and Exponential Record 215
Period Reserve Constraint Data 216
Period Reserve Constraint Record 217
Branch Flow Constraint Data 218
Branch Flow Constraint Record 218
Interface Flow Constraint Data 220
Linear Constraint Dependency Data 222
Linear Constraint Dependency Record 222
GIC Data File 226
Overview 226
File Identification Data 227
Substation Data 227
Bus Substation Data 229
Transformer Data 229
Fixed Bus Shunt Data 233
Branch Data 233
User Earth Model Data 235
Switched Shunt Data 235
Two-Terminal DC Data 236
VSC DC Data 237
Multi-Terminal DC Data 238
FACTS Device Data 239
Load Data 239
Harmonics Data File (RAWX) 241
Overview 241
Impedance Characteristics Data 242
Voltage Sources Data 243
Current Sources Data 244

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

Load Data 246
Generator Data 248
Non-Transformer Branch Data 250
Transformer Data 251
Two-Terminal DC Data 253
VSC DC Data 254
FACTS Device Data 255
Induction (asynchronous) Machine Data 257
Multi-Terminal DC Data 258
Passive Filter Data 259
TSPF Data File 262
Overview 262
Profile Curve Set Data 262
Profile curve data 263
Profile 264
Machine Capability Curve Data File 269
Overview 269
Change Code Data 269
Capability Curve Data 269
IEC Data File 271
Overview 271
File Identification Data 271
GSU, Equivalent Generator and Motor Data 272
Transformer Nameplate Winding MVA Data 273
Induction Machine Data 273
Wind Power Station Asynchronous Generator Data 274
Wind Power Station Doubly Fed Asynchronous Generator Data 274
Wind and Photovoltaic Power Station Generator with Full Size Converter Data 275
SUB/MON/CON File Descriptions 277
Overview 277
File Notational Conventions 277
Bus Input/Output Using Bus Numbers and Names 278
Special Data Records 279
Subsystem Definition Data File 279
Monitored Element Data File 283
Individual Flow Monitoring Records 283
Group Flow Monitoring Records 284
Subsystem Tie Monitoring Records 286
Subsystem Switching Device Monitoring Records 290
Voltage Monitoring Records 290
Contingency Definition Data File 293
Contingency Case Block Structure 293
Automatic Contingency Specification 303
Node-Breaker Contingency Specification 306
Automatic Contingency Specification 308
Advanced Linear Analysis/MUST SUB/MON/CON File Extensions and Options 311
Description of Input Data 311
Input Data Types 311
Conventions and Special Data Records 311
INCLUDE Record 312
Subsystem Definition Data File 313

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

General Description and Advanced Linear Analysis/MUST Subsystem Extensions 313
Defining Buses within a Subsystem 314
Subsystem Adjustments Methods 317
Automatic Specifications Using the ADD Command 318
Defining Buses Using the PARTICIPATE Command 321
Automatic Participation Factors Definition within the SUBSYSTEM Group 322
Defining New Subsystems Based on Already Defined Subsystems 324
Adding Subsystems by Bus or Generator 325
Reporting Available Subsystems 326
Subsystem Detailed Report 326
Saving Subsystem Adjustments in a Load Flow Case 326
Monitored Element Data File 327
General Description and Advanced Linear Analysis/MUST Extensions 327
Monitored Branches Specifications 327
DC and Linear Analysis - Branch Limit Checking 327
Non-Linear AC Models - Branch Limit Checking 328
Interface Specifications 328
Flowgates Formats 330
Defining Rating Multiplier by Areas or Zones 331
Defining Distribution Factors Cutoff by Control Areas and Zones 332
Contingency Definition Data File 333
Individual Contingency Specifications 333
Automatic Contingency Specifications 334
Single Automatic Contingency Labels – Single Branch 334
Single Automatic Contingency Labels – Three-Winding Transformer 335
Automatic IN Contingencies 335
Automatic TIE Contingencies 337
Automatic Generator and Bus Contingencies 337
DISPATCH Record Format 338
DISPATCH Record 338
Default Dispatch 339
Multi-Section Line Outages 340
Load Throwover 340
Three-Winding Transformer Contingency 341
EXCLUDE Data File 342
Why Use an Exclude Data File? 342
Exclude Input Data Formats 342
Exclude File 343
Summary of Advanced Linear Analysis/MUST File Extensions Not Available in PSS®E 344
General Input Files Extensions 344
Subsystems Definition Extension 345
Monitored Elements Files Extensions 345
Contingency Data File Extensions 345
Simulation Run Assembler PSAS User's Ready Reference 347
NOTES: 351
PSAS Command Help 352
User-Entered PSS®E Commands 352
PSAS Input Files 352
To Execute PSAS From PSSDS4 352
Sample PSAS Command File 352
NOTES: 353

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

Engineering Basic PSEB User's Ready Reference 354
NOTES: 356
PSEB Command Help 357
User-Entered PSS®E Commands 357
PSEB Input Files 357
To Execute PSEB From PSSLF4 357
Sample PSEB Command File 357
NOTES: 358
Graphic Report Generator GRPG User's Ready Reference 359
NOTES: 363
GRPG Command Help 364
GRPG Input Files 364
To Execute GRPG From PSSLF4 364
Sample GRPG Command File 364
Locations Data File 366
Overview 366
Record Block Format 366
Block Identifier 366
Block Locations Data Format 366
Locations Data - BUSES 367
Locations Data - BRANCHES 368
Locations Data - NODES 369
Location Data File - Example 369

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

List of Figures

Load Representation on Bus 13
Constant Power Load Characteristics 16
Constant Current Load Characteristics 17
Fixed Shunt Representation on Bus 17
Generator QV characteristic 19
Generator Representation on Bus 21
Implicit GSU Configuration – Specified as Part of the Generator 26
Explicit GSU Configuration– Specified Separately from the Generator 26
Multiple Generators at a Single Plant 27
Data Set for the Multiple Generators in Figure 1.9 27
Equivalent PI model of a Long Transmission Line 29
Two and Three-winding Transformer Configurations Related to Data Records 35
Sample Data for Two-Winding Transformer 51
Sample Data for Three-Winding Transformer 52
Two Winding Transformer Vector Group Clock Position and Phase Angle 52
Three Winding Transformer Vector Group Clock Position and Phase Angle 53
Overlapping Areas and Zones 58
Two Terminal DC Configuration 61
VSC DC Configuration 65
Typical Impedance Correction Factor Curve 72
Multi-Terminal DC Configuration 72
Multi-Terminal DC Network 79
Multi-Section Line Grouping 79
Multi-Section Line Example 80
Interarea Transfer 82
Owner Data 83
FACTS Device Configuration 84
FACTS Control Device Setpoints and Limits 89
Switched Shunt Configuration 89
Example Data Record for Combination of Switched Shunts 95
Induction Machine Equivalent Circuit 101
Generator Sequence Networks 146
Mutual Coupline - Example 1 150
Mutual Coupline - Example 2 150
Two-Winding Transformer Positive Sequence Connections 157
Three-Winding Transformer Positive Sequence Connections 158
Induction Machine Sequence Network 161
Non-conventional Source Fault Contribution Characteristics 164
Non-conventional Source Sequence Network 165
Auto-transformer Equivalent Circuit 169
YNyn transformer zero sequence network 170
YNyn with neutral impedance transformer zero sequence network 170
YNd transformer zero sequence network 171
Znyn, Zny, or ZNd transformer zero sequence network 171
YNy core type transformer zero sequence network 172
Dyn transformer zero sequence network 173
YNzn, Yzn or Dzn transformer zero sequence network 173
Yyn core type transformer zero sequence network 174

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

Yy, Yd, Dy, Dd, Yyn or YNy transformer zero sequence network 175
Ya ungrounded auto transformer zero sequence network 175
CC=5 or CC=15 zero sequence network 176
YNd transformer with Zigzag or YNd earthing transformer on winding 2 side zero sequence network ... 177
YNzn or Dzn core type transformer zero sequence network 178
Dyn transformer with Zigzag or YNd earthing transformer on winding 1 side zero sequence network ... 179
ZNyn or ZNd core type transformer zero sequence network 179
YNa core type auto transformer zero sequence network 180
YNa core type auto transformer zero sequence network 182
YNyn with or without neutral impedance core type transformer zero sequence network 184
YNa auto transformer zero sequence network 186
Ya ungrounded core type auto transformer zero sequence network 187
YNynyn with magnetising impedance modelled transformer zero sequence network 189
YNynd transformer zero sequence network 190
Dynd transformer zero sequence network 191
Ddd, Ddy, Dyd, Dyy, Ydd, Ydy, Yyd or Yyy transformer zero sequence network 192
Dynd auto transformer zero sequence network 193
YNynyn transformer zero sequence network 194
Ynad (grounded) auto transformer zero sequence network 195
Equivalent zero sequnce network for a transformer with two externally available neutrals and 0° phase shift between windings 1 and 2 195
Yad (ungrounded) auto transformer zero sequence network 197
Capability Curve Example file savnw.gcp for savnw.sav Case 270

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

List of Tables

Power Flow Raw Data Input Structure 2
Examples of Two Winding Transformer Vector Groups 54
Clock Positions and Phase Angles specified in Transformer Power Flow Data 55
Three Winding CC=11 56
Three Winding CC=12 56
Three Winding CC=13 56
Three Winding CC=14 56
Three Winding CC=15 56
Three Winding CC=16 57
Three Winding CC=17 57
Three Winding CC=18 57
Sequence Data Input Structure 141

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

Chapter 1
Power Flow Data File (RAW)

1.1. Overview

The input stream to activity READ consists of 28 groups of records, with each group containing a particular type of data required in power flow work (refer to Table 1.1). The end of each category of data, except the Case Identification Data, is indicated by a record specifying a value of zero; the end of the system-wide, FACTS device, DC line, and GNE device data categories may alternatively be indicated with a record specifying a NAME value with blanks.

1.1.1. Extensible Power Flow Data File (RAWX) Documentation

Documentation for the Extensible Power Flow Data File (RAWX) is located in two places. This chapter contains consolidated syntax and data field documentation for both RAW and RAWX. The sections describing case identification, system-wide data, and all network element records include the record formats and data item descriptions for the RAW file records as well as the RAWX parameter sets and data tables. For the complete documentation for the RAWX format, see the Extensible Power Flow Data File (RAWX) chapter.

1.2. Extended Bus Names

On its Bus Data record, each bus is assigned a bus number and a 12 character alphanumeric name. When the bus *names* input option of activity READ is enabled, data fields designating buses on load, fixed shunt, generator, non-transformer branch, transformer, area, two-terminal dc line, VSC dc line, multi-terminal dc line, multi-section line, FACTS device, switched shunt, GNE device, and induction machine, data records may be specified as either extended bus names enclosed in single quotes or as bus numbers.

The requirements for specifying an extended bus name are:

- The extended name of a bus is a concatenation of its 12 character alphanumeric name and its base voltage.
- It must be enclosed in single quotes.
- The 12 character bus name, *including any trailing blanks*, must be the first 12 characters of the extended bus name.
- The bus base voltage in kV follows the 12 character bus name. Up to 6 characters may be used.
- For those data fields for which a sign is used to indicate a modeling attribute, a minus sign may be specified between the leading single quote and the first character of the 12 character bus name.

Thus, valid forms of an extended bus name include '*aaaaaaaaaaaavvvvvv*' and '*aaaaaaaaaaaavvv*'. For those data fields cited in (4) above, '-*aaaaaaaaaaaavvvvvv*' and '- *aaaaaaaaaaaavvv*' are also valid forms of extended bus names.

As an example, consider a 345 kV bus with the name ERIE BLVD. The following are all valid forms of its extended bus name:

```
'ERIE BLVD    345.0'
```


All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

```
'ERIE BLVD   345'
'ERIE BLVD      345'
```

The following is not a valid form of its extended bus name because the bus name, including trailing blanks, are not all included before the start of the base voltage:

```
'ERIE BLVD345'
```

1.3. Default Values

All data is read in free format with data items separated by a comma or one or more blanks; *[Tab]* delimited data items are not recommended.

Because there are default values for many of the data items specified in the Power Flow Raw Data File, you can include only the specific information you need. For example, if bus 99 is a 345 kV Type 1 bus assigned to zone 3, the Bus Data record in the file could be:

```
99,,345,,,3
```

This is equivalent to specifying the data record:

```
99,' ',345.0,1,1,3,1,1.0,0.0
```

If, in addition, you name the bus 'ERIE BLVD', the minimum data line would be:

```
99,'ERIE BLVD',345,,,3
```

1.4. Q Record

Generally, specifying a data record with a Q in column one is used to indicate that no more data records are to be supplied to activity READ. This end of data input indicator is permitted anywhere in the Power Flow Raw Data File *except* where activity READ is expecting one of the following:

- one of the three Case Identification Data records
- the second or subsequent records of the four-record block defining a two-winding transformer
- the second or subsequent records of the five-record block defining a three-winding transformer
- the second or third record of the three-record block defining a two-terminal dc transmission line
- the second or third record of the three-record block defining a VSC dc transmission line
- the second or subsequent records of the series of data records defining a multi-terminal dc transmission line
- the second or subsequent records of the series of data records defining a GNE device

Table 1.1. Power Flow Raw Data Input Structure

Case Identification Data	
System-Wide Data	
Bus Data	

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

Load Data
Fixed Bus Shunt Data
Voltage Droop Control Data
Generator Data
Switching Device Rating Tables
Non-Transformer Branch Data
System Switching Device Data
Transformer Data
Area Interchange Data
Two-Terminal DC Transmission Line Data
Voltage Source Converter (VSC) DC Transmission Line Data
Transformer Impedance Correction Tables
Multi-Terminal DC Transmission Line Data
Multi-Section Line Grouping Data
Zone Data
Interarea Transfer Data
Owner Data
FACTS Device Data
Switched Shunt Data
GNE Device Data
Induction Machine Data

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

Load Type Data
Interface Data
Interface element Data
Substation Data
Q Record

Each substation block data consists of following records.

Substation Data Record
Node Data
Station Switching Device Data
Equipment Terminal Data

1.5. Case Identification Data

Case identification data consists of 8 data items on 3 lines for case-wide parameters and case identification.

RAW Record Format

```
IC, SBASE, REV, XFRRAT, NXFRAT, BASFRQ

TITLE1

TITLE2
```

RAWx Record Format

```
"caseid":{
  "fields":["ic", "sbase", "rev", "xfrrat", "nxfrat", "basfrq", "title1",
            "title2"],
  "data":[0, 100.00, 35, 0, 1, 60.00, "", ""]
}
```

Field	RAWX Key	Description
IC	ic	New case flag: 0 for base case input (i.e., clear the working case before adding data to it)

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

Field	RAWX Key	Description
		1 to add data to the working case IC = 0 by default
SBASE	sbase	System MVA base SBASE = 100.0 by default
REV	rev	PSSE revision number REV = current revision by default
XFRRAT	xfrrat	Units of transformer ratings (refer to Transformer Data). The transformer percent loading units program option setting (refer to Saved Case Specific Option Settings) is set according to this data value. XFRRAT <= 0 for MVA XFRRAT > 0 for current expressed as MVA XFRRAT = present transformer percent loading program option setting by default (refer to activity OPTN).
NXFRAT	nxfrat	Units of ratings of non-transformer branches (refer to Non-Transformer Branch Data). The non-transformer branch percent loading units program option setting (refer to Saved Case Specific Option Settings) is set according to this data value NXFRAT <= 0 for MVA NXFRAT > 0 for current expressed as MVA NXFRAT = present non-transformer branch percent loading program option setting by default (refer to activity OPTN).
BASFRQ	basfrq	System base frequency in Hertz. The base frequency program option setting (refer to Saved Case Specific Option Settings) is set to this data value. BASFRQ = present base frequency program option setting value by default (refer to activity OPTN).
TITLE1	title1	First line of the case title. May contain up to 60 characters.
TITLE2	title2	Second line of the case title. May contain up to 60 characters.

When current ratings are being specified, ratings are entered as:

$MVA_{rated} = \sqrt{3} \times E_{base} \times I_{rated} \times 10^{-6}$

where:

E_{base}	Is the branch or transformer winding voltage base in volts.
I_{rated}	Is the rated phase current in amps

1.6. System-Wide Data

Through the system-wide data category, data that pertains to the case as a whole (rather than to individual equipment items) may be included in the Power Flow Raw Data File to allow convenient transfer of it with the case. Records may be included that define:

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

- power flow solution parameters
- descriptions of rating sets
- information on the most recent power flow solution attempt

Generally, each record specified in the System-Wide Data category begins with a NAME that defines the type of data specified on the record. The formats of the various records are described in the following paragraphs.

1.6.1. GENERAL Record

The GENRAL record contains solution parameters used by all of the power flow solution methods. These solution parameters that are specified may be entered in any order.

RAW Record Format

```
GENERAL, THRSHZ=0.0001, PQBRAK=0.7, BLOWUP=5.0, MAXISOLLVLS=4, CAMAXREPTSLN=20,
CHKDUPCNTLBL=0
```

RAWx Record Format

```
"general":{
  "fields":["thrshz", "pqbrak", "blowup", "maxisollvls", "camaxreptsln",
            "chkdupcntlbl"],
  "data":[0.0001, 0.7, 5.0, 4, 20, 0]
}
```

Using keyword input, any or all of the following solution parameters may be specified:

- THRSHZ (the zero impedance line threshold tolerance)
- PQBRAK (the constant power load characteristic voltage breakpoint)
- BLOWUP (the largest voltage change threshold)
- MAXISOLLVLS (the maximum levels to move outward from a element when attempting to isolate it by breaker/switch actions)
- CAMAXREPTSLN (the maximum number of times to try and solve a contingency/remedial action)
- CHKDUPCNTLBL (check for duplicate contingency labels when create DFAX file and running contingency analysis)

1.6.2. GAUSS Record

The GAUSS record contains solution parameters used by the Gauss-Seidel power flow solution methods (SOLV and MSLV).

RAW Record Format

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

```
GAUSS, ITMX=100, ACCP=1.6, ACCQ=1.6, ACCM=1.0, TOL=0.0001
```

RAWx Record Format

```
"gauss":{
  "fields":["itmx", "accp", "accq", "accm", "tol"],
  "data":[100, 1.6, 1.6, 1.0, 0.0001]
}
```

Using keyword input, any or all of the following solution parameters may be specified:

- ITMX (the maximum number of iterations)
- ACCP (real component voltage change acceleration factor)
- ACCQ (imaginary component voltage change acceleration factor)
- ACCM (type 1 bus complex voltage change acceleration factor in MSLV)
- TOL (voltage magnitude change convergence tolerance)

1.6.3. NEWTON Record

The NEWTON record contains solution parameters used by the Newton-Raphson power flow solution methods (FDNS, FNSL and NSOL).

RAW Record Format

```
NEWTON, ITMXN=20, ACCN=1.0, TOLN=0.1, VCTOLQ=0.1, VCTOLV=0.00001, DVLIM=0.99,
NDVFCT=0.99
```

RAWx Record Format

```
"newton":{
  "fields":["itmxn", "accn", "toln", "vctolq", "vctolv", "dvlim", "ndvfct"],
  "data":[20, 1.0, 0.1, 0.1, 0.00001, 0.99, 0.99]
}
```

The NEWTON record contains solution parameters used by the Newton-Raphson power flow solution methods (FDNS, FNSL and NSOL). Using keyword input, any or all of the following solution parameters may be specified:

- ITMXN (the maximum number of iterations)
- ACCN (voltage magnitude setpoint change acceleration factor at voltage controlled buses)
- TOLN (mismatch convergence tolerance)

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

- VCTOLQ (controlled bus reactive power mismatch convergence tolerance)
- VCTOLV (controlled bus voltage error convergence tolerance)
- DVLIM (maximum voltage magnitude change that may be applied on any iteration)
- NDVFCT (non-divergent solution improvement factor)

1.6.4. ADJUST Record

The ADJUST record contains solution parameters used by the automatic adjustment functions of the Gauss-Seidel and Newton-Raphson power flow solution methods.

RAW Record Format

```
ADJUST,  ADJTHR=0.005,  ACCTAP=1.0,  TAPLIM=0.05,  SWVBND=100.0,  MXTPSS=99,
MXSWIM=10
```

RAWx Record Format

```
"adjust":{
  "fields":["adjthr", "acctap", "taplim", "swvbnd", "mxtpss", "mxswim"],
  "data":[0.005, 1.0, 0.05, 100.0, 99, 10]
}
```

Using keyword input, any or all of the following solution parameters may be specified:

- ADJTHR (automatic adjustment threshold tolerance)
- ACCTAP (tap movement deceleration factor)
- TAPLIM (maximum tap ratio change on any iteration)
- SWVBND (percent of voltage band switched shunts with voltage violations that are adjusted on any iteration)
- MXTPSS (maximum number of tap and/or switched shunt adjustment cycles)
- MXSWIM (maximum number of induction machine state switchings)

1.6.5. TYSL Record

The TYSL record contains solution parameters used by the balanced switching network solution (TYSL)

RAW Record Format

```
TYSL, ITMXTY=20, ACCTY=1.0, TOLTY=0.00001
```

RAWx Record Format

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

```
"tysl":{
  "fields":["itmxty", "accty", "tolty"],
  "data":[20, 1.0, 0.00001]
}
```

Using keyword input, any or all of the following solution parameters may be specified:

- ITMXTY (the maximum number of iterations)
- ACCTY (voltage change acceleration factor)
- TOLTY (voltage magnitude change convergence tolerance)

1.6.6. SOLVER Record

The SOLVER record identifies the power flow solution method and solution options used in the last power flow solution attempt.

RAW Record Format

```
SOLVER, FNSL, ACTAPS=1, AREAIN=0, PHSHFT=0, DCTAPS=1, SWSHNT=1, FLATST=0, VAR-
LIM=0, NONDIV=0
```

RAWx Record Format

```
"solver":{
  "fields":["method", "actaps", "areain", "phshft", "dctaps", "swshnt",
            "flatst", "varlim", "nondiv"],
  "data":["FNSL", 1, 0, 0, 1, 1, 0, 0, 0]
}
```

Following the name SOLVER is the name of the solution method (either FDNS, FNSL, NSOL, SOLV or MSLV). Then, using keyword input, any or all of the following solution option selections may be specified:

- ACTAPS (the ac tap adjustment code)
- AREAIN (the area interchange adjustment code)
- PHSHFT (the phase shift adjustment code)
- DCTAPS (the dc tap adjustment code)
- SWSHNT (the switched shunt adjustment code)
- FLATST (the flat start code)
- VARLIM (the reactive power limit application code)

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

- NONDIV (the non-divergent solution code)

1.6.7. BRANCH RATING NAME Record

The RATING specifies a six-character name and a 32-character description associated with a specified non-transformer and transformer branch rating set.

RAW Record Format

```
RATING, 1, "STEMER", "Short term summer emergency"
```

RAWx Record Format

```
"rating":{
  "fields":["irate", "name", "desc"],
  "data":[
      [1, "STEMER", "Short term summer emergency"],
      ...
      [12, "WINCON", "Winter continuous"]
  ]
}
```

Following the name RATING are the following data items:

- the number of the rating set (1 through 12),
- a quoted string that contains the rating's name (this is used as a column heading in several reports), and
- a quoted string that contains the rating's description.

If no RATING record is specified for rating set "n", its name is set to "RATEn" and its description is set to "RATING SET n".

1.6.8. SWITCHING DEVICE RATING NAME Record

The SWITCHING DEVICE RATING NAME record specifies the options used by the 12 ratings of Switching Device Rating Table record. These rating names are applicable to the System Switching Devices and Station Switching Devices.

RAW Record Format

```
SWDRATNAM, RN, RNAM, RTYP, UNIT, DESC
```

RAW Example

```
SWDRATNAM,  1, "THERM1", 0, "MVA", "Thermal continuous limit 1"
...
SWDRATNAM, 12, "INTRP4", 1, "AMP", "Fault interruption limit 4"
```


All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

RAWx Record Format

```
"swdratnam":{
  "fields":["irate", "rnam", "rtyp", "unit", "desc"],
  "data":[
      [ 1, "THERM1", 0, "MVA", "Thermal limit 1"],
      ...
      [12, "INTRP4", 1, "AMP",  "Fault interrupting limit 4"]
  ]
}
```

The name SWDRATNAM is followed by these data items:

- RN -- the number of the rating set (1 through 12),
- RNAM -- 6-character name, a quoted string that contains the rating's name. This is used as a column heading in several reports. If no NAME is specified for rating "n", its name is set to "RATEn".
- RTYP -- type of rating RN. TYPE=0 for Thermal rating and TYPE=1 for interrupting rating. TYPE=0 by default.
- UNIT -- unit of rating RN. UNIT="MVA" or "AMP". UNIT="MVA" by default.
- DESC -- 32-character description, a quoted string that contains the rating's description that can be used to further identify the rating. It is used for information only. By default it is set as "SWD RATING SET n".

Note that RTYP and UNIT of rating set N are not allowed to change if that rating set has non zero rating values.

System wide data input is terminated with a record specifying a value of zero.

1.7. Bus Data

Each network bus to be represented in PSSE is introduced by reading a bus data record.

RAW Record Format

```
I, NAME, BASKV, IDE, AREA, ZONE, OWNER, VM, VA, NVHI, NVLO, EVHI, EVLO
```

RAWx Record Format

```
"bus":{
  "fields":["ibus", "name", "baskv", "ide", "area", "zone", "owner", "vm",
            "va", "nvhi", "nvlo", "evhi", "evlo"],
  "data":[
      [101, "NUC-A", 21.6, 2, 1, 1, 1, 1.01, -19.0, 1.1, 0.9, 1.1, 0.9],
      ...
```


All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

```
      [93002, "INDGEN2", 0.69, 1, 5, 6, 5, 0.94, -4.3, 1.1, 0.9, 1.1, 0.9]
  ]
}
```

Field	RAWX Key	Description
I	ibus	Bus number (1 through 999997). No default allowed.
NAME	name	Alphanumeric identifier assigned to bus I. NAME may be up to twelve characters and may contain any combination of blanks, uppercase letters, numbers and special characters, but the first character *must not* be a minus sign. NAME *must* be enclosed in single or double quotes if it contains any blanks or special characters. NAME = twelve blanks by default
BASKV	baskv	Bus base voltage; entered in kV BASKV = 0.0 by default
IDE	ide	Bus type code: • 1 - for a load bus or passive node (no generator boundary condition) • 2 - for a generator or plant bus (either voltage regulating or fixed Mvar) • 3 - for a swing bus • 4 - for a disconnected (isolated) bus IDE = 1 by default
AREA	area	Area number (1 through 9999). AREA = 1 by default
ZONE	zone	Zone number (1 through 9999). ZONE = 1 by default
OWNER	owner	Owner number (1 through 9999). OWNER = 1 by default
VM	vm	Bus voltage magnitude; entered in pu. VM = 1.0 by default
VA	va	Bus voltage phase angle; entered in degrees. VA = 0.0 by default
NVHI	nvhi	Normal voltage magnitude high limit; entered in pu. NVHI = 1.1 by default
NVLO	nvlo	Normal voltage magnitude low limit, entered in pu. NVLO = 0.9 by default
EVHI	evhi	Emergency voltage magnitude high limit; entered in pu. EVHI = 1.1 by default

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

Field	RAWX Key	Description
EVLO	evlo	Emergency voltage magnitude low limit; entered in pu. EVLO = 0.9 by default

Bus data input in the RAW file is terminated with a record specifying a bus number of zero.

1.7.1. Bus Data Notes

VM and VA need to be set to their actual solved case values only when the network, as entered into the working case via activity READ, is to be considered solved as read in. Otherwise, unless some better estimate of the solved voltage and/or phase angle is available, VM and VA may be omitted (and therefore set to their default values; see Default Values).

1.8. Load Data

Each network bus at which load is to be represented must be specified in at least one load data record. Multiple loads may be represented at a bus by specifying more than one load data record for the bus, each with a different load identifier.

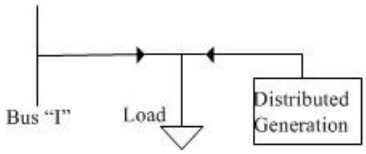


Figure 1.1. Load Representation on Bus

Each load at a bus can be a mixture of loads with three different characteristics: the Constant Power Load Characteristic, the Constant Current Load Characteristic, and the constant admittance load characteristic. For additional information on load characteristic modeling, refer to Load, activities CONL and RCNL, Modeling Load Characteristics and Basic Load Characteristics.

RAW Record Format (on single line)

```
I, ID, STATUS, AREA, ZONE, PL, QL, IP, IQ, YP, YQ, OWNER, SCALE, INTRPT, DGENP,
DGENQ, DGENM, LOADTYPE, NAME
```

RAWx Record Format

```
"load":{
  "fields":["ibus", "loadid", "stat", "area", "zone", "pl", "ql",
            "ip", "iq", "yp", "yq", "owner", "scale", "intrpt",
            "dgenp", "dgenq", "dgenm", "loadtype", "name"],
  "data":[
      [152, "1", 1, 1, 1, 1200.0, 360.0, 868.3, 360.5, 837.8, -351.3,
        1, 1, 0, 0.0, 0.0, 0, "", ""],
      ...
```


All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

```
      [3010, "1", 1, 5, 4, 12.0, 5.0, 0.0, 0.0, 0.0, 0.0, 5,
        1, 0, 0.0, 0.0, 0, "", ""]
  ]
}
```

Field	RAWX Key	Description
I	ibus	Bus number, or extended bus name enclosed in single quotes (refer to Extended Bus Names). No default allowed.
ID	loadid	One or two-character uppercase non-blank alphanumeric load identifier used to distinguish among multiple loads at bus I. It is recommended that, at buses for which a single load is present, the load be designated as having the load identifier '1'. ID = '1' by default
STATUS	stat	Load status of one for in-service and zero for out-of-service. STATUS = 1 by default
AREA	area	Area to which the load is assigned (1 through 9999). By default, AREA is the area to which bus I is assigned (refer to Bus Data).
ZONE	zone	Zone to which the load is assigned (1 through 9999). By default, ZONE is the zone to which bus I is assigned (refer to Bus Data).
PL	pl	Active power component of constant MVA load; entered in MW. PL = 0.0 by default
QL	ql	Reactive power component of constant MVA load; entered in Mvar. QL = 0.0 by default
IP	ip	Active power component of constant current load; entered in MW at one per unit voltage. IP = 0.0 by default
IQ	iq	Reactive power component of constant current load; entered in Mvar at one per unit voltage. IQ = 0.0 by default
YP	yp	Active power component of constant admittance load; entered in MW at one per unit voltage. YP = 0.0 by default
YQ	yq	Reactive power component of constant admittance load; entered in Mvar at one per unit voltage. YQ is a negative quantity for an inductive load and positive for a capacitive load. YQ = 0.0 by default
OWNER	owner	Owner to which the load is assigned (1 through 9999). By default, OWNER is the owner to which bus I is assigned (refer to Bus Data).
SCALE	scale	Load scaling flag of one for a scalable load and zero for a fixed load (refer to SCAL).

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

Field	RAWX Key	Description
		SCALE = 1 by default
INTRPT	intrpt	Interruptible load flag of one for an interruptible load for zero for a non interruptible load. INTRPT = 0 by default
DGENP	dgenp	Distributed Generation active power component; entered in units of MW. DGENP = 0.0 by default
DGENQ	dgenq	Distributed Generation reactive power component; entered in units of MVAR. DGENQ = 0.0 by default
DGENM	dgenm	Distributed Generation operation mode; 0 = distributed generation on feeder is OFF, 1 = distributed generation on feeder is ON. DGENM = 0 by default
LOADTYPE	loadtype	Alphanumeric load type descriptor of up to twelve characters used to distinguish among different types of load. LOADTYPE is blanks by default
NAME	name	Alphanumeric identifier assigned to the load. NAME may be up to forty characters and may contain any combination of blanks, uppercase letters, numbers and special characters. NAME must be enclosed in single or double quotes if it contains any blanks or special characters. NAME *must* be unique within all loads. NAME is blank by default

Load data input is terminated with a record specifying a bus number of zero.

1.8.1. Load Data Notes

The area, zone, and owner assignments of loads are used for area, zone, and owner totaling purposes (e.g., in activities AREA, OWNR, and ZONE) and for load scaling and conversion purposes. They may differ from those of the bus to which they are connected. The area and zone assignments of loads may optionally be used during area and zone interchange calculations (refer to Area Interchange Control and activities AREA, ZONE, TIES, TIEZ, INTA, and INTZ).

1.8.2. Constant Power Load Characteristic

The constant power characteristic holds the load power values, and also, the distributed generation power values, constant as long as the bus voltage exceeds a value specified by the solution parameter PQBRAK. The constant power characteristic assumes an elliptical current-voltage characteristic of the corresponding load current for voltages below this threshold. Figure 1.2 depicts this characteristic for PQBRAK values of 0.6, 0.7, and 0.8 pu. The user may modify the value of PQBRAK using the *[Solution Parameters]* GUI (refer to *PSSE GUI Users Guide*, Section 11.1.1, Boundary Conditions).

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

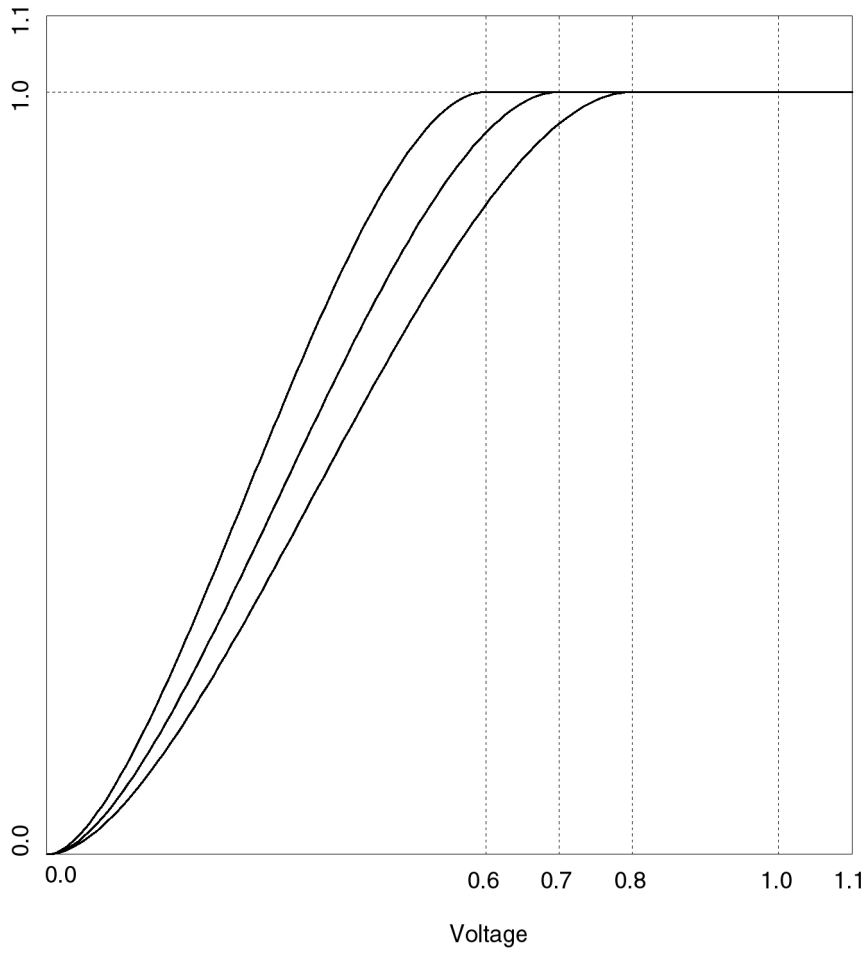


Figure 1.2. Constant Power Load Characteristics

1.8.3. Constant Current Load Characteristic

The constant current characteristic holds the load current constant as long as the bus voltage exceeds 0.5 pu, and assumes an elliptical current-voltage characteristic as shown in Figure 1.3 for voltages below 0.5 pu.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

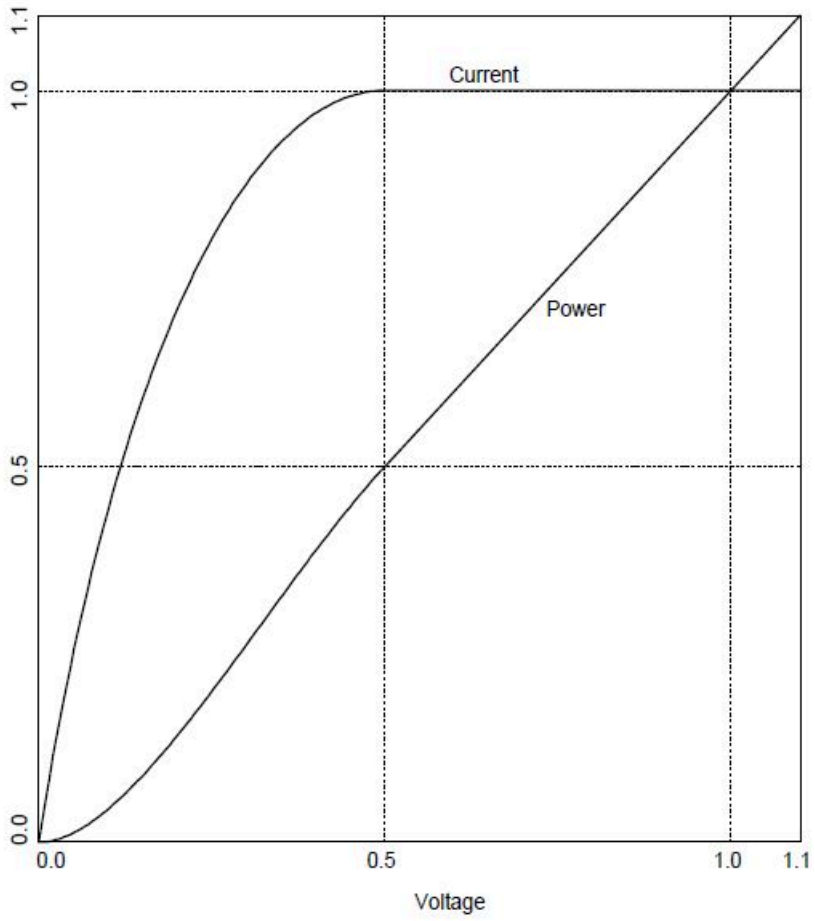


Figure 1.3. Constant Current Load Characteristics

1.9. Fixed Bus Shunt Data

Each network bus at which fixed bus shunt is to be represented must be specified in at least one fixed bus shunt data record. Multiple fixed bus shunts may be represented at a bus by specifying more than one fixed bus shunt data record for the bus, each with a different shunt identifier.

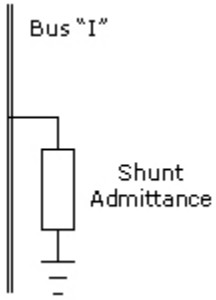


Figure 1.4. Fixed Shunt Representation on Bus

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

RAW Record Format

```
I, ID, STATUS, GL, BL, NAME
```

RAWx Record Format

```
"fixshunt":{
  "fields":["ibus", "shntid", "stat", "gl", "bl", "name"],
  "data":[
      [151, "F1", 1, 5.0, -400.0, ""],
      ...
      [3022, "1 ", 1, 0.0, 1080.0, ""]
  ]
}
```

Field	RAWX Key	Description
I	ibus	Bus number, or extended bus name enclosed in single quotes (refer to Extended Bus Names). No default allowed
ID	shntid	One- or two-character uppercase non-blank alphanumeric fixed shunt identifier used to distinguish among multiple fixed shunts at bus I. It is recommended that, at buses for which a single fixed shunt is present, the fixed shunt be designated as having the fixed shunt identifier '1'. ID = '1' by default
STATUS	stat	Shunt status of one for in-service and zero for out-of-service. STATUS = 1 by default
GL	gl	Active component of shunt admittance to ground; entered in MW at one per unit voltage. GL should not include any resistive impedance load, which is entered as part of load data. GL = 0.0 by default
BL	bl	Reactive component of shunt admittance to ground; entered in Mvar at one per unit voltage. BL should not include any reactive impedance load, which is entered as part of load data; line charging and line connected shunts, which are entered as part of non-transformer branch data; transformer magnetizing admittance, which is entered as part of transformer data; or switched shunt admittance, which is entered as part of switched shunt data. BL is positive for a capacitor, and negative for a reactor or an inductive load. BL = 0.0 by default
NAME	name	Alphanumeric identifier assigned to the fixed bus shunt. NAME may be up to forty characters and may contain any combination of blanks, uppercase letters, numbers and special characters. NAME must be enclosed in single or double quotes if it contains any blanks or special characters. NAME *must* be unique within all fixed bus shunts.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

Field	RAWX Key	Description
		NAME is blank by default

Fixed bus shunt data input is terminated with a record specifying a bus number of zero.

1.9.1. Fixed Shunt Data Notes

The area, zone, and owner assignments of the bus to which the shunt is connected are used for area, zone, and owner totaling purposes (e.g., in activities AREA, OWNR, and ZONE); refer to Section 14.7, "Summarizing Area Totals" through Section 14.12, "Summarizing Zone-to-Zone Interchange") and for shunt scaling purposes (refer to SCAL).

The admittance specified in the data record can represent a shunt capacitor or a shunt reactor (both with or without a real component) or a shunt resistor. It *must not* represent line connected admittance, switched shunts, loads, line charging or transformer magnetizing impedance, all of which are entered in other data categories.

1.10. Voltage Droop Control Data

The voltage droop control data defines QV characteristic curve and controlled bus.

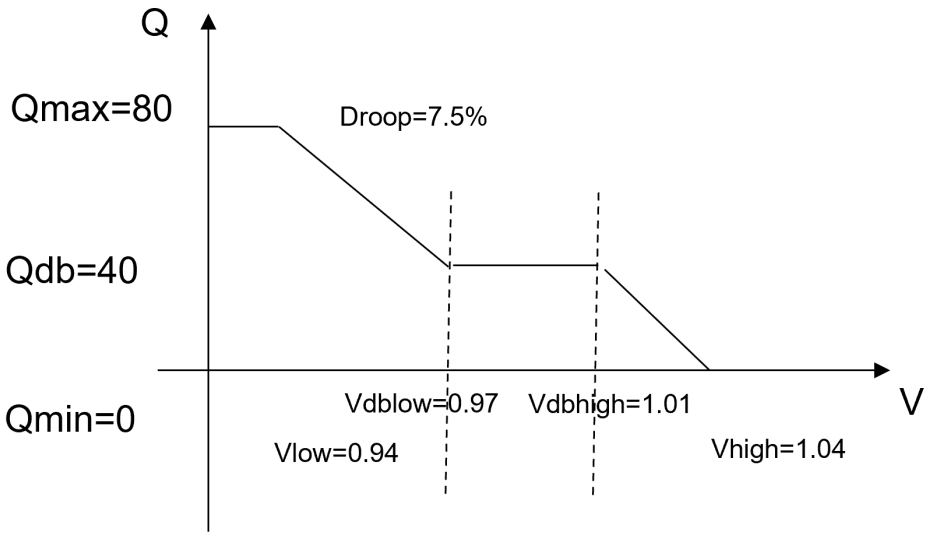


Figure 1.5. Generator QV characteristic

RAW Record Format

```
NAME, STATUS, REGBUS, QDB, QMIN, QMAX, VDBLOW, VDBHIGH, VLOW, VHIGH
```

RAWx Record Format

```
"voltagedroop":{
"fields":["name", "status", "regbus", "qdb", "qmin", "qmax", "vdblow",
```


All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

```
        "vdbhigh", "vlow", "vhigh"],
"data":[
  ["VLTDRP_A", 1,   0, 10, -50.0, 100.0,  0.97, 1.03, 0.95, 1.05],
  ["VLTDRP_B", 1, 101, 15, -70.0, 155.0,  0.98, 1.02, 0.96, 1.04],
  ]
}
```

Field	RAWX Key	Description
NAME	name	The non-blank alphanumeric identifier assigned to this voltage droop controller. Each voltage droop control must have a unique NAME of up to 40 characters. No default allowed.
STATUS	status	Status of voltage droop control, one for in-service and zero for out-of-service. If it is set to one, then the power flow solution will attempt to solve to meet the QV characteristic. If set to 0, then the devices that are assigned to this PPC will default back to their original behavior of controlling a regulated bus to a voltage setpoint. STATUS=1 by default
REGBUS	regbus	Bus number, or extended bus name enclosed in single quotes of the controlled bus(refer to Extended Bus Names). REGBUS=0 by default
QDB	qdb	The reactive power in Mvar at Regbus when voltage is within VDBLOW and VDB-HIGH. QDB = 0.0 by default
QMIN	qmin	Minimum reactive power in Mvar at the Regulated Bus being contributed by the devices in the Power Plant Controller. QMIN = -100.0 by default
QMAX	qmax	Maximum reactive power in Mvar at the Regulated Bus being contributed by the devices in the Power Plant Controller. QMAX = 100.0 by default
VDBLOW	vdblow	Lower end of the per unit voltage range at the Regulated Bus when the reactive power injection remains at QDB. VDBLOW = 0.98 by default
VDBHIGH	vdbhigh	Upper end of the per unit voltage range at the Regulated Bus when the reactive power injection remains at QDB. VDBLOW = 1.02 by default
VLOW	vlow	Per unit voltage at the Regulated Bus at QMAX VLOW = 0.90 by default
VHIGH	vhigh	Per unit voltage at the Regulated Bus at QMIN. VDBLOW = 1.1 by default

Voltage droop control data input is terminated with a record specifying a bus number of zero.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

1.10.1. Voltage Droop Control Data Notes

The Q inputs of voltage droop QV characteristic curve must be monotonically decreasing (QMAX>QDB>QMIN), and the V inputs of the curve must be monotonically increasing (VHIGH>VDBHIGH>VDBLOW>VLOW).

It is suggested to set the voltage range of each segment in the VQ characteristic curve to greater than 0.02 to prevent a numerical issue due to a narrow band.

1.11. Generator Data

Each network bus to be represented as a generator or plant bus in PSSE must be specified in a generator data record. In particular, each bus specified in the bus data input with a Type code of 2 or 3 must have a generator data record entered for it.

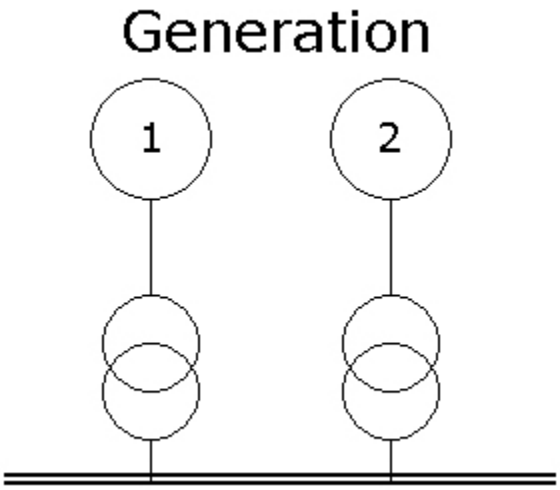


Figure 1.6. Generator Representation on Bus

RAW Record Format (on single line)

```
I, ID, PG, QG, QT, QB, VS, IREG, NREG, MBASE, ZR, ZX, RT, XT, GTAP, STAT, RMPCT,
PT, PB, BASLOD, O1, F1, ..., O4, F4, WMOD, WPF, DROOPNAME, NAME
```

RAWx Record Format

```
"generator":{
"fields":["ibus", "machid", "pg", "qg", "qt", "qb", "vs", "ireg", "nreg",
        "mbase", "zr", "zx", "rt", "xt", "gtap", "stat", "rmpct",
        "pt", "pb", "baslod", "o1", "f1", "o2", "f2", "o3", "f3", "o4",
        "f4", "wmod", "wpf","droopname","name"],
"data":[
  [101, "1", 750.0, 165.2, 400.0, -100.0 1.01, 101, 0, 900.0, 0.01,
  0.3, 0.0, 0.0, 1.0, 1, 100.0, 800.0, 50.0, 0, 1, 0.1289, 2, 0.2524,
  3, 0.1031, 4, 0.5156, 0, 1.0,"VLTDRP_A","GEN_A"],
  ...
```


All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

```
  [3018, "2", 100.0, -0.157, 75.0, -75.0, 0.99, 3018, 0, 120.0, 0.024,
  0.36, 0.0, 0.0, 1.0, 1, 92.5, 110.0, 20.0, 0, 1, 0.3003, 2, 0.1358,
  3, 0.2857, 4, 0.2782, 0, 1.0,"VLTDRP_B","GEN_B"]
  ]
}
```

Field	RAWX Key	Description
I	ibus	Bus number, or extended bus name enclosed in single quotes (refer to Extended Bus Names). No default allowed
ID	machid	One- or two-character uppercase non-blank alphanumeric machine identifier used to distinguish among multiple machines at bus I. It is recommended that, at buses for which a single machine is present, the machine be designated as having the machine identifier '1'. ID = '1' by default
PG	pg	Generator active power output; entered in MW. PG = 0.0 by default
QG	qg	Generator reactive power output; entered in Mvar. QG needs to be entered only if the case, as read in, is to be treated as a solved case. QG = 0.0 by default
QT	qt	Maximum generator reactive power output; entered in Mvar. For fixed output generators (i.e., nonregulating), QT must be equal to the fixed Mvar output. For infeed machines (WMOD=4), QT is not used in powerflow calculations. The reactive power output of infeed machines is held constant at QG. QT = 9999.0 by default
QB	qb	Minimum generator reactive power output; entered in Mvar. For fixed output generators, QB must be equal to the fixed Mvar output. For infeed machines (WMOD=4), QB is not used in powerflow calculations. The reactive power output infeed machines is held constant at QB = -9999.0 by default.
VS	vs	Regulated voltage setpoint; entered in pu. VS = 1.0 by default
IREG	ireg	Bus number, or extended bus name enclosed in single quotes, of the bus for which voltage is to be regulated by this plant to the value specified by VS. If IREG specifies a remote bus (i.e., a bus other than bus I), bus IREG must be a Type 1 or 2 bus (if it is other than a Type 1 or 2 bus, bus I regulates its own voltage to the value specified by VS). IREG may be entered as zero if the plant is to regulate its own voltage. If bus I is a Type 3 (swing) bus, IREG must *not* specify a remote bus. When the generator is under voltage droop control as specified by DROOPNAME, IREG is replaced by REGBUS of DROOPNAME record if the REGBUS is non-zero. IREG = 0 by default

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

Field	RAWX Key	Description
NREG	nreg	A node number of bus IREG. The bus section of bus IREG to which node NREG is connected is the bus section for which voltage is to be regulated by this plant to the value specified by VS. If bus IREG is not in a substation, NREG must be specified as 0. NREG = 0 by default
MBASE	mbase	Total MVA base of the units represented by this machine; entered in MVA. This quantity is not needed in normal power flow and equivalent construction work, but is required for switching studies, fault analysis, and dynamic simulation. MBASE = system base MVA by default
ZR,ZX	zr,zx	Complex machine impedance, ZSORCE; entered in pu on MBASE base. This data is not needed in normal power flow and equivalent construction work, but is required for switching studies, fault analysis, and dynamic simulation. For dynamic simulation, this impedance must be set equal to the unsaturated subtransient impedance for those generators to be modeled by subtransient level machine models, and to unsaturated transient impedance for those to be modeled by classical or transient level models. For short-circuit studies, the saturated subtransient or transient impedance should be used. ZR = 0.0 and ZX = 1.0 by default
RT,XT	rt,xt	Step-up transformer impedance, XTRAN; entered in pu on MBASE base. XTRAN should be entered as zero if the step-up transformer is explicitly modeled as a network branch and bus I is the terminal bus. RT + jXT = 0.0 by default
GTAP	gtap	Step-up transformer off-nominal turns ratio; entered in pu on a system base. GTAP is used only if XTRAN is non-zero. GTAP = 1.0 by default
STAT	stat	Machine status of one for in-service and zero for out-of-service; STAT = 1 by default
RMPCT	rmpct	Percent of the total Mvar required to hold the voltage at the bus controlled by bus I that are to be contributed by the generation at bus I; RMPCT must be positive. RMPCT is needed only if there is more than one local or remote setpoint mode voltage controlling device (plant, switched shunt, FACTS device shunt element, or VSC dc line converter) controlling the voltage at bus IREG. RMPCT = 100.0 by default
PT	pt	Maximum generator active power output; entered in MW. PT = 9999.0 by default
PB	pb	Minimum generator active power output; entered in MW. PB = -9999.0 by default
BASLOD	baslod	Base loaded flag; • = 0 Normal, the machine is not base loaded

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

Field	RAWX Key	Description
		• = 1 Down only; the machine can be scaled down but will not be scaled for any increase in generation • = 2 Neither up nor down; the machine can be scaled neither up nor down • = 3 Up only; the machine can be scaled up but will not be scaled for any decrease in generation BASLOD = 0 by default
Oi	o1, o2, o3, o4	Owner number (1 through 9999). Each machine may have up to four owners. By default, O1 is the owner to which bus I is assigned (refer to Bus Data) and O2, O3, and O4 are zero.
Fi	f1, f2, f3, f4	Fraction of total ownership assigned to owner Oi; each Fi must be positive. The Fi values are normalized such that they sum to 1.0 before they are placed in the working case. By default, each Fi is 1.0.
WMOD	wmod	Machine control mode; WMOD is used to indicate whether a machine is a conventional or a non-conventional machine (e.g. renewables, infeed) machine, and, if it is, the type of reactive power limits to be imposed. Non-conventional machines are renewables (e.g., wind, PV etc.) and infeed machines (for definition of infeed machines, see description below of WNMOD=4) 0 - a conventional machine (e.g. synchronous machines). 1 - renewable type machine for which reactive power limits are specified by QT and QB. 2 - renewable type machine for which reactive power limits are determined from the machine's active power output and WPF; limits are of equal magnitude and opposite sign 3 - renewable type machine with a fixed reactive power setting determined from the machine's active power output and WPF; when WPF is positive, the machine's reactive power has the same sign as its active power; when WPF is negative, the machine's reactive power has the opposite sign of its active power. 4 - infeed type machine. An infeed type machine is one for which the machine reactive power (QG) is held constant. The QT and QB limits values are not used and are for information only. QG value has to be between QT and QB. WMOD = 0 by default
WPF	wpf	Power factor used in calculating reactive power limits or output when WMOD is 2 or 3 WPF = 1.0 by default
DROOP-NAME	droopname	The alphanumeric name of voltage droop controller. DROOPNAME *must* be defined in voltage droop control table. Droopname is blank by default

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

Field	RAWX Key	Description
NAME	name	Alphanumeric identifier assigned to the machine. NAME may be up to forty characters and may contain any combination of blanks, uppercase letters, numbers and special characters. NAME must be enclosed in single or double quotes if it contains any blanks or special characters. NAME *must* be unique within all machines. NAME is blank by default

Generator data input in the RAW file is terminated with a record specifying a bus number of zero.

1.11.1. Reactive Power Limits

In specifying reactive power limits for voltage controlling plants (i.e., those with unequal reactive power limits), the use of very narrow var limit bands is discouraged. The Newton-Raphson based power flow solutions require that the difference between the controlling equipment's high and low reactive power limits be greater than 0.002 pu for all setpoint mode voltage controlling equipment (0.2 Mvar on a 100 MVA system base). It is recommended that voltage controlling plants have Mvar ranges substantially wider than this minimum permissible range.

For additional information on generator modeling in power flow solutions, refer to refer to Section 6.3.12, "Generation" and Section 6.3.18, "AC Voltage Control".

1.11.2. Modeling of Generator Step-Up Transformers (GSU)

Before setting-up the generator data, it is important to understand the two methods by which a generator and its associated GSU are represented.

The Implicit Method

- The transformer data is included on the generator data record.
- The transformer is not explicitly represented as a transformer branch.
- The generator terminal bus is not explicitly represented.

Figure 1.7 shows that bus K is the Type 2 bus. This is the bus at which the generator will regulate/control voltage unless the user specifies a remote bus.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

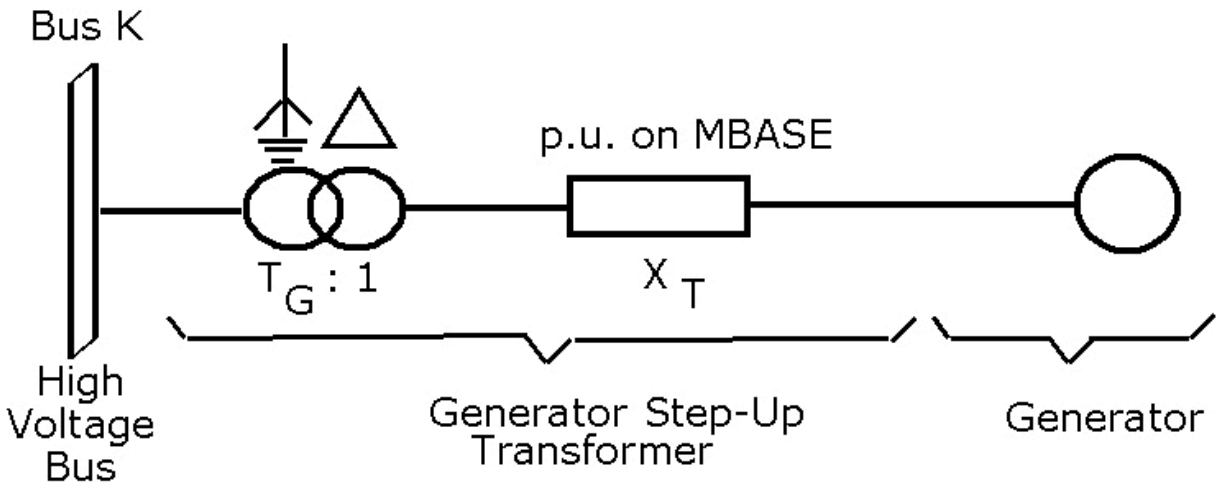


Figure 1.7. Implicit GSU Configuration – Specified as Part of the Generator

The Explicit Method

In this method, the transformer data is not specified with the generator data. It is entered separately (see Transformer Data) in a transformer branch data block.

In Figure 1.8 , there is an additional bus to represent the generator terminal. This is the Type 2 bus where the generator will regulate/control voltage unless the user specifies a remote bus.

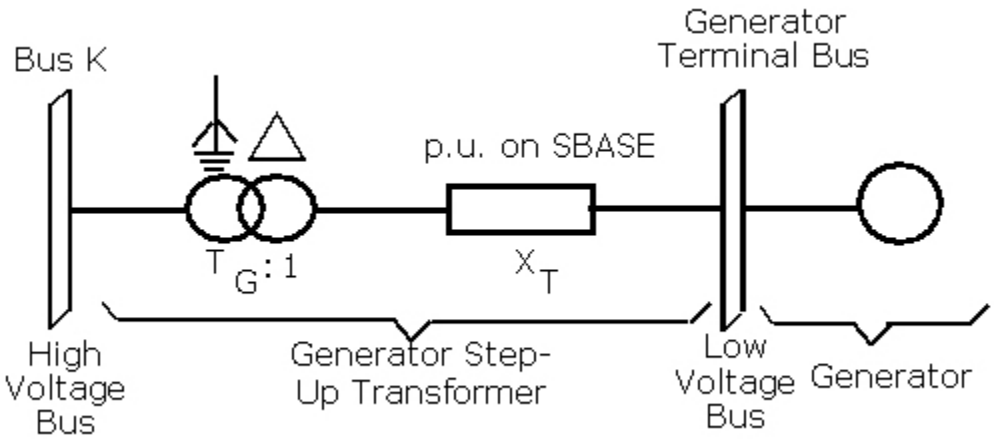


Figure 1.8. Explicit GSU Configuration– Specified Separately from the Generator

1.11.3. Multiple Machine Plants

If a generating plant has several units, they can be represented separately even if they are connected to the same Type 2 bus. When two or more machines are to be separately modeled at a plant, their data may be introduced into the working case using one of two approaches.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

A generator data record may be entered in activities READ, TRSQ, or RDCH for each of the machines to be represented, with machine powers, power limits, impedance data, and step-up transformer data for each machine specified on separate generator data records. The plant power output and power limits are taken as the sum of the corresponding quantities of the in-service machines at the plant. The values specified for VS, IREG, and RMPCT, which are treated as plant quantities rather than individual machine quantities, *must be identical* on each of these generator data records.

Alternatively, a single generator record may be specified in activities READ, TREA, or RDCH with the plant total power output, power limits, voltage setpoint, remotely regulated bus, and percent of contributed Mvar entered. Impedance and step-up transformer data may be omitted. The PSSE power flow activities may be used and then, any time prior to beginning switching study, fault analysis, or dynamic simulation work, activity MCRE may be used to introduce the individual machine impedance and step-up transformer data; activity MCRE also apportions the total plant loading among the individual machines.

As an example, Figure 1.9 shows three Type 2 buses, each having two connected units. For generators 1 through 4, the GSU is explicitly represented while for generators 5 and 6 the GSU is implicitly represented. Figure 1.10 shows the generator data records corresponding to Figure 1.9 .

The separate transformer data records for the explicitly represented transformers from buses 1238 and 1239 to bus 1237 are not included in Figure 1.10 .

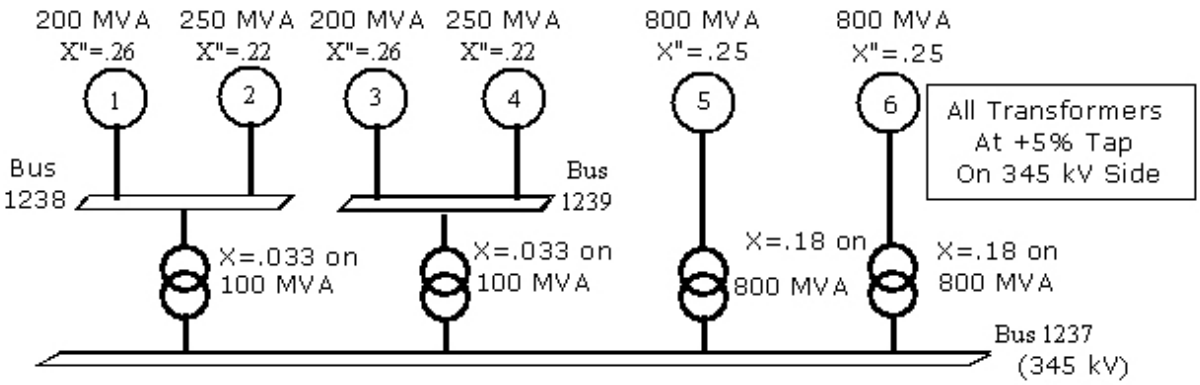


Figure 1.9. Multiple Generators at a Single Plant

```
  I,'ID',    PG,QG,    QT,   QB,    VS,IREG,NREG, MBASE,   ZR,   ZX,   T,    XT, GTAP,STAT, RMPCT, ...
1238,'1 ', 200.,   , 120., 0.0, 1.03,    0,    0, 200.0, 0.0, .26, 0.,  0.0, 1.00,    1, 50.0, ...
1238,'2 ', 250.,   , 150., 0.0, 1.03,    0,    0, 250.0, 0.0, .22, 0.,  0.0, 1.00,    1, 50.0, ...
1239,'3 ', 200.,   , 120., 0.0, 1.03,    0,    0, 200.0, 0.0, .26, 0.,  0.0, 1.00,    1, 50.0, ...
1239,'4 ', 250.,   , 150., 0.0, 1.03,    0,    0, 250.0, 0.0, .22, 0.,  0.0, 1.00,    1, 50.0, ...
1237,'5 ', 750.,   , 500., 0.0, 1.06,    0,    0, 800.0, 0.0, .25, 0., 0.18, 1.05,    1, 50.0, ...
1237,'6 ', 750.,   , 500., 0.0, 1.06,    0,    0, 800.0, 0.0, .25, 0., 0.18, 1.05,    1, 50.0, ...
```

Figure 1.10. Data Set for the Multiple Generators in Figure 1.9

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

1.12. Switching Device Rating Table Data

The Switching Device (SWD) Rating Tables are used to define rating sets for System Switching Devices or Station Switching Devices. These rating sets could contain continuous ratings [thermal] and fault interruption ratings [short circuit withstand current]. Multiple switching devices can refer to the same rating set.

```
RSETNAM, DESC, RATE1, ..., RATE12
```

RAWx Record Format

```
"swdratset":{
  "fields":["rsetnam", "desc",
            "rate1", "rate2", "rate3", "rate4", "rate5", "rate6",
            "rate7", "rate8", "rate9", "rate10", "rate11", "rate12"],
  "data":[
      ["BRK-MDL-123", "BREAKER MODEL 123, MFG ABC, INSTALL JULY 2022, TEST ANSI",
        100.98, 101.87, 102.76, 103.65, 200.98, 201.87,
        202.76, 203.65, 300.98, 301.87, 302.76, 303.65],
      ...
      ["DSW-MDL-456",
        "Disconnect Switch MODEL 456, MFG XYZ, INSTALL JULY 2023, TEST IEC60909",
        100.98, 101.87, 102.76, 103.65, 200.98, 201.87,
        202.76, 203.65, 300.98, 301.87, 302.76, 303.65]
  ]
}
```

Field	RAWX Key	Description
RSETNAM	rsetnam	Alphanumeric identifier assigned to the rating set. RSETNAM may be up to 40 characters and may contain any combination of blanks, uppercase letters, numbers and special characters. RSETNAM *must* be enclosed in single or double quotes if it contains any blanks or special characters. RSETNAM*must* be unique within all SWD rating tables. No default allowed.
DESC	desc	Alphanumeric description about switching device. DESC may contain any combination of blanks, uppercase letters, numbers and special characters. DESC could be used specify switching device type, model, manufacturer, testing standard, installation date etc. DESC is used for information only. DESC is blank by default.
RATEn	rate1, rate2, rate3, rate4, rate5, rate6, rate7, rate8, rate9, rate10,	nth rating; entered in the unit specified for that nth SWDRATNAM specified on the SWITCHING DEVICE RATING NAME Record. Each RATEn = 0.0 by default. When RATEn = 0.0, rating check for this switching device is not done in any rating examination. Refer to activity RATE.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

Field	RAWX Key	Description
	rate11, rate12	

Switching Device Rating Tables input is terminated with a record specifying a blank rating table name or a rating table name of '0'.

1.13. Non-Transformer Branch Data

Each ac network branch to be represented in PSSE as a non-transformer branch is introduced by reading a non-transformer branch data record.

Branches to be modeled as transformers are not specified in this data category; rather, they are specified in Transformer Data.

When specifying a non-transformer branch between buses I and J with circuit identifier CKT, if a two-winding transformer between buses I and J with a circuit identifier of CKT is already present in the working case, it is replaced (i.e., the transformer is deleted from the working case and the newly specified branch is then added to the working case).

In PSSE, the basic transmission line model is an Equivalent Pi connected between network buses. Figure 1.11 shows the required parameter data where the equivalent Pi is comprised of:

- A series impedance (R + jX).
- Two admittance branches (jB/2) representing the line's total capacitive admittance (line charging).
- Two admittance branches (GI+jBI and GJ+jBJ) for shunt equipment units (e.g., reactors) that are connected to and switched with the line.

To represent shunts connected to buses, that shunt data should be entered in fixed shunt and/or switched shunt data records.

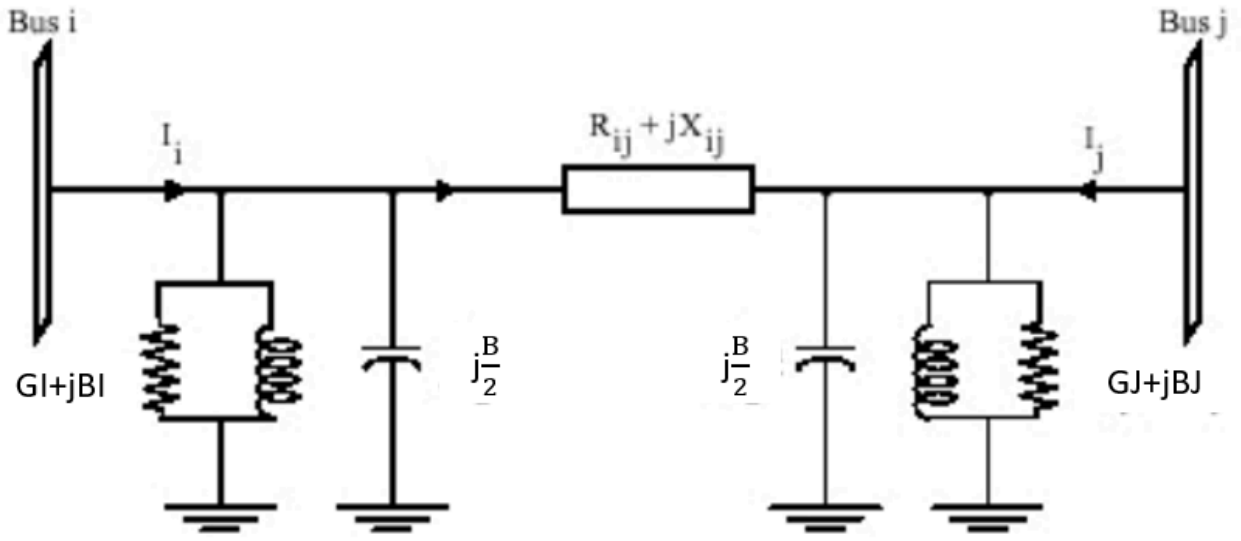


Figure 1.11. Equivalent PI model of a Long Transmission Line

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

I, J, CKT, R, X, B, NAME, RATE1, ..., RATE12, GI, BI, GJ, BJ, ST, BP, MET, LEN, O1, F1, ..., O4, F4

RAWx Record Format

```
"acline":{
  "fields":["ibus", "jbus", "ckt", "rpu", "xpu", "bpu", "name",
            "rate1", "rate2", "rate3", "rate4", "rate5", "rate6",
            "rate7", "rate8", "rate9", "rate10", "rate11", "rate12",
            "gi", "bi", "gj", "bj", "stat", "bypass", "met", "len",
            "o1", "f1", "o2", "f2", "o3", "f3", "o4", "f4"],
  "data":[
      [151, 152, "1", 0.0026, 0.046, 3.5, "", 1200.0, 1100.0, 1000.0,
        1200.4, 1100.5, 1000.6, 1200.70, 1100.80, 1000.90, 1200.10,
        1100.11, 1000.12, 0.01, -0.25, 0.011, -0.15, 1, 0, 2, 150.0, 1,
        0.2, 2, 0.3, 3, 0.4, 4, 0.1],
      ...

      [3008, 3009, "1", 0.003, 0.025, 0.06, "", 25.0, 22.0, 18.0, 0.0,
        0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 1, 0,
        2, 60.00, 1, 0.1797, 2, 0.2695, 3, 0.3594, 4, 0.1914]
  ]
}
```

Field	RAWX Key	Description
I	ibus	Branch from bus number, or extended bus name enclosed in single quotes (refer to Extended Bus Names). No default allowed
J	jbus	Branch to bus number, or extended bus name enclosed in single quotes.
CKT	ckt	One- or two-character uppercase non-blank alphanumeric branch circuit identifier; the first character of CKT *must* not be an ampersand ( ); refer to Multi-Section Line Grouping Data. CKT = '1' by default
R	rpu	Branch resistance; entered in pu. A value of R must be entered for each branch.
X	xpu	Branch reactance; entered in pu. A non-zero value of X must be entered for each branch. Refer to Zero Impedance Lines for details on the treatment of branches as zero impedance lines.
B	bpu	Total branch charging susceptance; entered in pu. B = 0.0 by default
NAME	name	Alphanumeric identifier assigned to the branch. NAME may be up to forty characters and may contain any combination of blanks, uppercase letters, numbers and special characters. NAME must be enclosed in single or double quotes if it contains any blanks or special characters. NAME *must* be unique within all non-transformer and transformer branches. NAME is blank by default

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

Field	RAWX Key	Description
RATEn	rate1, rate2, rate3, rate4, rate5, rate6, rate7, rate8, rate9, rate10, rate11, rate12	nth rating; entered in either MVA or current expressed as MVA, according to the value specified for NXFRAT specified on the first data record (refer to Case Identification). Each RATEn = 0.0 (bypass check for this branch; this branch will not be included in any examination of circuit loading) by default. Refer to activity RATE. When specified in units of current expressed as MVA, ratings are entered as: $MVA_{rated} = \sqrt{3} \times E_{base} \times I_{rated} \times 10^{-6}$ where: E_{base} is the base line-to-line voltage in volts of the buses to which the terminal of the branch is connected I_{rated} is the branch rated phase current in amperes.
GI, BI	gi, bi	Complex admittance of the line shunt at the bus I end of the branch; entered in pu. BI is negative for a line connected reactor and positive for line connected capacitor. GI + jBI = 0.0 by default
GJ, BJ	gj, bj	Complex admittance of the line shunt at the bus J end of the branch; entered in pu. BJ is negative for a line connected reactor nd positive for line connected capacitor. GJ + jBJ = 0.0 by default
ST	stat	Branch status of one for in-service and zero for out-of-service; ST = 1 by default
BP	bypass	bypass flag; one is to bypass the branch and treat it as a zero impedance line (refer to Zero Impedance Lines), and zero is to disable bypass; BP = 0 by default
MET	met	Metered end flag; • <= 1 to designate bus I as the metered end • >= 2 to designate bus J as the metered end MET = 1 by default PSSE assigns losses to non-metered end of the branch.
LEN	len	Line length; entered in user-selected units. LEN = 0.0 by default
Oi	o1, o2, o3, o4	Owner number (1 through 9999). Each branch may have up to four owners. By default, O1 is the owner to which bus I is assigned (refer to Bus Data) and O2, O3, and O4 are zero.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

Field	RAWX Key	Description
Fi	f1, f2, f3, f4	Fraction of total ownership assigned to owner Oi; each Fi must be positive. The Fi values are normalized such that they sum to 1.0 before they are placed in the working case. Each Fi is 1.0 by default

Non-transformer branch data input is terminated with a record specifying a from bus number of zero.

The branch is treated as series compensated line when its R=0 and X is < 0.

1.13.1. Zero Impedance Lines

PSSE provides for the treatment of bus ties, jumpers, breakers, switches, and other low impedance branches as zero impedance lines. For a branch to be treated as a zero impedance line, it must have the following characteristics:

- Its resistance must be zero.
- Its magnitude of reactance must be less than or equal to the zero impedance line threshold tolerance, THRSHZ.
- It must be a non-transformer branch.

A non-transformer branch is treated as zero impedance line if its bypass flag is enabled regardless of its impedance values.

During network solutions, buses connected by such lines are treated as the same bus, thus having identical bus voltages. At the completion of each solution, the loadings on zero impedance lines are determined.

When obtaining power flow solutions, zero impedance line flows, as calculated at the end of the solution, are preserved with the working case and are available to the power flow solution reporting activities. Similarly, in activity SCMU, the positive, negative, and zero sequence branch currents on zero impedance lines are determined and preserved, and are subsequently available to activity SCOP. In the ACCC, as well as activity ASCC and in the linearized network analysis activities, zero impedance line results are calculated and reported as needed.

The remainder of this section contains points to be noted, and restrictions to be observed, in using zero impedance lines.

Branch impedances may not be specified as identically zero; a non-zero reactance must be specified for all branches, and those meeting the criteria above are treated as zero impedance lines.

The zero impedance line threshold tolerance, THRSHZ, may be changed using the category of solution parameter data via activity CHNG or the *[Solution Parameters]* dialog. Setting THRSHZ to zero disables zero impedance line modeling, and all branches are represented with their specified impedances.

A zero impedance line may not have a transformer in parallel with it. Although not required, it is recommended that *no* other in-service lines exist in parallel with a zero impedance line.

A zero impedance line may have non-zero values of line charging and/or line connected shunts. This allows, for example, a low impedance cable to be modeled as a zero impedance line.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

When more than two buses are connected together by zero impedance lines in a loop arrangement, there is no unique solution to the flows on the individual zero impedance lines that form the loop. In this case, the reactances specified for these branches is used in determining the zero impedance line flows.

It is important to note that buses connected together by zero impedance lines are treated as a single bus by the power flow solution activities. Hence, equipment controlling the voltages of multiple buses in a zero impedance connected group of buses must have coordinated voltage schedules (i.e., the same voltage setpoint should be specified for each of the voltage controlling devices). Activity CNTB recognizes this condition in scanning for conflicting voltage objectives, and activity REGB may be used to generate a regulated bus report.

Similarly, if multiple voltage controlling devices are present in a group of buses connected together by zero impedance lines, the power flow solution activities handle the boundary condition as if they are all connected to the same bus (refer to Setpoint Voltage Control).

In fault analysis activities, a branch treated as a zero impedance line in the positive sequence is treated in the same manner in the zero sequence, regardless of its zero sequence branch impedance. Zero sequence mutual couplings involving a zero impedance line are ignored in the fault analysis solution activities.

1.14. System Switching Device Data

Breakers and switches can be represented by system switching devices in PSSE. System switching devices are set to represent breakers or switches by setting the STYPE data element described below.

Most activities do not honor the system switching devices. System switching devices are treated as zero impedance lines if they have characteristics of zero impedance lines; otherwise, they are treated as regular non-transformer branches.

System switching devices are recognized in Substation Reliability Assessment (refer to Section 6.16, Calculating Substation Reliability) and activity DFAX. Substation Reliability Assessment simulates operations of breakers to isolate faults in a substation and manual switching to restore the service to supply loads. Distribution Factor File setup activity can process automatic commands to operate and monitor breakers and switches in Contingency Description Data File and Monitored Element Data File respectively.

As mentioned in the section Zero Impedance Lines, PSSE is able to handle a loop arrangement consisting of zero impedance lines so that users can build a fully detailed bus/breaker model for any bus configuration, such as a ring bus configuration. When adding a system switching device into a network model, connectivity nodes where the terminals of a transmission line connect to the terminals of the system switching device must be added as well. This will change a bus branch configuration which is widely used in planning studies to a detailed bus breaker configuration and lead to a tremendous increase in number of buses. In such cases as this, the use of the the use of the extensive substation modeling capabilities introduced in PSSE 34 is recommended.

```
I, J, CKT, X, RSETNAM, STATUS, NSTATUS, METERED, STYPE, NAME
```

RAWx Record Format

```
"sysswd":{
  "fields":["ibus", "jbus", "ckt", "xpu",
            "rsetnam", "stat", "nstat", "met", "stype", "name"],
  "data":[
      [151, 201, "*1", 1.0E-4, "BREAKER_0103", 1, 1, 2, 3, ""],
      ...
```


All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

```
      [153, 3006, "@1", 1.0E-4, "DISCONNECT_0102", 1, 1, 2, 2, ""]
  ]
}
```

Field	RAWX Key	Description
I	ibus	From bus number. No default allowed
J	jbus	To bus number. No default allowed
CKT	ckt	Two-character uppercase non-blank alphanumeric switching device identifier. CKT = '1' by default
X	xpu	Branch reactance; entered in pu, must be less than or equal to THRSHZ (zero impedance line threshold tolerance) X = THRSHZ by default.
RSETNAM	rsetnam	Previously defined rating set Switching Device Rating Table name. RSETNAM is blank by default.
STATUS	stat	Switching device status 0 - Open 1 - Closed 2 - Stuck closed STATUS = 1 by default
NSTAT	nstat	Switching device normal status 0 - Open 1 - Closed 2 - Stuck closed NSTAT = 1 by default
METERD	met	Metered end
STYPE	stype	Switching device type 1 - Generic connector 2 - Circuit breaker 3 - Disconnect switch
NAME	name	System switching device name

System Switching Device data input is terminated with a record specifying a from bus number of zero.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

1.15. Transformer Data

Each ac transformer to be represented in PSSE is introduced through transformer data record blocks that specify all the data required to model transformers in power flow calculations, with one exception. That exception is an optional set of ancillary data, transformer impedance correction tables, which define the manner in which transformer impedance changes as off-nominal turns ratio or phase shift angle is adjusted. Those data records are described in Transformer Impedance Cor.

Both two-winding and three-winding transformers are specified in transformer data record blocks. Two-winding transformers require a block of four data records. Three-winding transformers require five data records.

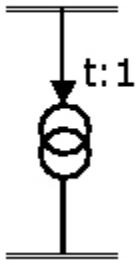
Transformer 	t_1: t_2:	t = t_1 / t_2; transformer turns ratio winding 1 turns ratio in kV or pu on bus voltage base or winding voltage base winding 2 turns ratio in kV or pu on bus voltage base or winding voltage base

Figure 1.12 shows the transformer winding configurations.

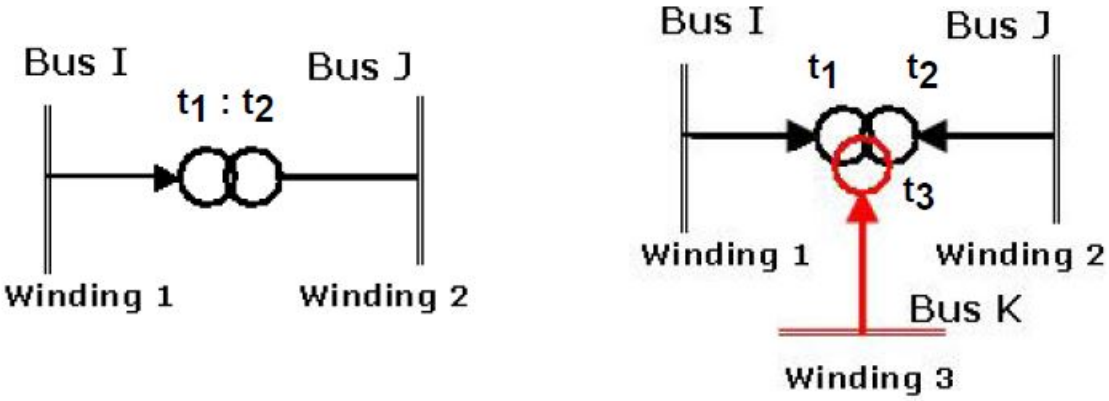


Figure 1.12. Two and Three-winding Transformer Configurations Related to Data Records

RAW Format

The five record transformer data block for three-winding transformers has the following format:

I, J, K, CKT, CW, CZ, CM, MAG1, MAG2, NMETR, NAME, STAT, O1, F1, ..., O4, F4, VECGRP, ZCOD

R1-2, X1-2, SBASE1-2, R2-3, X2-3, SBASE2-3, R3-1, X3-1, SBASE3-1, VMSTAR, ANSTAR

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

WINDV1, NOMV1, ANG1, RATE11, ..., RATE121, COD1, CONT1, NODE1, RMA1, RMI1, VMA1, VMI1, NTP1, TAB1, CR1, CX1, CNXA1

WINDV2, NOMV2, ANG2, RATE12, ..., RATE122, COD2, CONT2, NODE2, RMA2, RMI2, VMA2, VMI2, NTP2, TAB2, CR2, CX2, CNXA2

WINDV3, NOMV3, ANG3, RATE13, ..., RATE123, COD3, CONT3, NODE3, RMA3, RMI3, VMA3, VMI3, NTP3, TAB3, CR3, CX3, CNXA3

The four-record transformer data block for two-winding transformers is a subset of the data required for three-winding transformers and has the following format:

I, J, K, CKT, CW, CZ, CM, MAG1, MAG2, NMETR, NAME, STAT, O1, F1, ..., O4, F4, VECGRP

R1-2, X1-2, SBASE1-2

WINDV1, NOMV1, ANG1, RATE11, ..., RATE121, COD1, CONT1, NODE1, RMA1, RMI1, VMA1, VMI1, NTP1, TAB1, CR1, CX1, CNXA1

WINDV2, NOMV2

RAWx Record Format

```
"transformer":{
  "fields":["ibus", "jbus", "kbus", "ckt", "cw", "cz", "cm",
      "mag1", "mag2", "nmet", "name", "stat",
      "o1", "f1", "o2", "f2", "o3", "f3", "o4", "f4",
      "vecgrp", "zcod", "r1_2", "x1_2", "sbase1_2",
      "r2_3", "x2_3", "sbase2_3", "r3_1", "x3_1",
      "sbase3_1", "vmstar", "anstar",
      "windv1", "nomv1", "ang1",
      "wdg1rate1", "wdg1rate2", "wdg1rate3", "wdg1rate4",
      "wdg1rate5", "wdg1rate6", "wdg1rate7", "wdg1rate8",
      "wdg1rate9", "wdg1rate10", "wdg1rate11", "wdg1rate12",
      "cod1", "cont1", "node1", "rma1", "rmi1", "vma1", "vmi1",
      "ntp1", "tab1", "cr1", "cx1", "cnxa1",
      "windv2", "nomv2", "ang2",
      "wdg2rate1", "wdg2rate2", "wdg2rate3", "wdg2rate4",
      "wdg2rate5", "wdg2rate6", "wdg2rate7", "wdg2rate8",
      "wdg2rate9", "wdg2rate10", "wdg2rate11", "wdg2rate12",
      "cod2", "cont2", "node2", "rma2", "rmi2", "vma2", "vmi2",
      "ntp2", "tab2", "cr2", "cx2", "cnxa2",
      "windv3", "nomv3", "ang3",
      "wdg3rate1", "wdg3rate2", "wdg3rate3", "wdg3rate4",
      "wdg3rate5", "wdg3rate6", "wdg3rate7", "wdg3rate8",
      "wdg3rate9", "wdg3rate10", "wdg3rate11", "wdg3rate12",
      "cod3", "cont3", "node3", "rma3", "rmi3", "vma3", "vmi3",
      "ntp3", "tab3", "cr3", "cx3", "cnxa3"],
  "data":[
      [101, 151, 0, "T1", 2, 2, 1,
        0.171, -0.102, 2, "", 1,
        1, 0.32, 2, 0.39, 3, 0.14, 4, 0.15,
        "Dyn1", null, 0.001, 0.0091, 1200.0,
```


All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

```
        null, null, null, null, null,
        null, null, null,
        21.6, 21.6, 0.0,
        1200.0, 1100.0, 1000.0, 0.0,
        0.0, 0.0, 0.0, 0.0,
        0.0, 0.0, 0.0, 0.0,
        1, 101, 0, 22.68, 20.52, 1.05, 0.95,
        25, 0, 0.00021, 0.00051, 0.0,
        500.0],

      ...

      [3008, 3012, 3010, "2", 2, 1, 1,
        2.1E-04, -1.2E-04, 1, "", 2,
        5, 0.8, 3, 0.05, 2, 0.1, 1, 0.05,
        "D1y0y0", 0, 5.15E-3, 0.5, 20.0,
        9.2E-3, 0.8, 15.0, 3.75E-3, 0.41667,
        25.0, 0.98625, -30.5021,
        230.0, 230.0, 0.0,
        20.0, 18.0, 14.0, 0.0,
        0.0, 0.0, 0.0, 0.0,
        0.0, 0.0, 0.0, 0.0,
        0, 0, 0, 1.1, 0.9, 1.1, 0.9,
        33, 0, 0.0, 0.0, 0.0,
        230.0, 230.0, 0.0,
        15.0, 13.0, 9.0, 0.0,
        0.0, 0.0, 0.0, 0.0,
        0.0, 0.0, 0.0, 0.0,
        0, 0, 0, 1.1, 0.9, 1.1, 0.9,
        33, 0, 0.0, 0.0, 0.0,
        21.6, 21.6, 30.0,
        25.0, 19.0, 16.0,
        0.0, 0.0, 0.0,
        0.0, 0.0, 0.0,
        0.0, 0.0, 0.0,
        0, 0, 0, 1.1, 0.9, 1.1, 0.9,
        33, 0, 0.0, 0.0, 0.0]
  ]
}
```

Note: The above RAWX example includes both a 2-winding and a 3-winding data row example. The 2-winding example skips several trailing fields at the end of the record.

Control parameters for the automatic adjustment of transformers and phase shifters are specified on the third record of the two-winding transformer data block, and on the third through fifth records of the three-winding transformer data block. All transformers are adjustable and the control parameters may be specified either at the time of raw data input or subsequently via activity CHNG or the transformer *[Spreadsheets]*. Any two-winding transformer and any three-winding transformer winding for which no control data is provided has default data assigned to it; the default data is such that the two-winding transformer or three-winding transformer winding is treated as locked.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

Refer to Transformer Sequence Numbers and Three-Winding Transformer Notes for additional details on the three-winding transformer model used in PSSE.

When specifying a two-winding transformer between buses I and J with circuit identifier CKT, if a nontransformer branch between buses I and J with a circuit identifier of CKT is already present in the working case, it is replaced (i.e., the nontransformer branch is deleted from the working case and the newly specified two-winding transformer is then added to the working case).

All data items on the first record are specified for both two- and three-winding transformers except for ZCOD, which is specified only for three-winding transformers.

Field	RAWX Key	Description
I	ibus	The bus number, or extended bus name enclosed in single quotes (refer to Extended Bus Names), of the bus to which Winding 1 is connected. The transformer's magnetizing admittance is modeled on Winding 1. Winding 1 is the only winding of a two-winding transformer for which tap ratio or phase shift angle may be adjusted by the power flow solution activities; any winding(s) of a three-winding transformer may be adjusted. No default is allowed
J	jbus	The bus number, or extended bus name enclosed in single quotes, of the bus to which Winding 2 is connected. No default is allowed
K	kbus	The bus number, or extended bus name enclosed in single quotes, of the bus to which Winding 3 is connected. Zero is used to indicate that no third winding is present (i.e., that a two-winding rather than a three-winding transformer is being specified). K = 0 by default.
CKT	ckt	One- or two-character uppercase non-blank alphanumeric transformer circuit identifier; the first character of CKT *must not* be an ampersand ( ), at sign (@), or asterisk (*); refer to Multi-Section Line Grouping Data and Section 6.15.2, Outage Statistics Data File Contents. CKT = '1' by default.
CW	cw	The winding data I/O code defines the units in which the turns ratios WINDV1, WINDV2 and WINDV3 are specified (the units of RMAn and RMIn are also governed by CW when |CODn| is 1 or 2): • 1 for off-nominal turns ratio in pu of winding bus base voltage • 2 for winding voltage in kV • 3 for off-nominal turns ratio in pu of nominal winding voltage, NOMV1, NOMV2 and NOMV3 CW = 1 by default.
CZ	cz	The impedance data I/O code defines the units in which the winding impedances R1-2, X1-2, R2-3, X2-3, R3-1 and X3-1 are specified:

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

Field	RAWX Key	Description
		• 1 for resistance and reactance in pu on system MVA base and winding voltage base • 2 for resistance and reactance in pu on a specified MVA base and winding voltage base • 3 for transformer load loss in watts and impedance magnitude in pu on a specified MVA base and winding voltage base In specifying transformer leakage impedances, the base voltage values are always the nominal winding voltages that are specified on the third, fourth and fifth records of the transformer data block (NOMV1, NOMV2 and NOMV3). If the default NOMVn is not specified, it is assumed to be identical to the winding n bus base voltage. CZ = 1 by default.
CM	cm	The magnetizing admittance I/O code defines the units in which MAG1 and MAG2 are specified: • 1 for complex admittance in pu on system MVA base and Winding 1 bus voltage base • 2 for no load loss in watts and exciting current in pu on Winding 1 to two MVA base (SBASE1-2) and nominal Winding 1 voltage, NOMV1. CM = 1 by default.
MAG1, MAG2	mag1, mag2	The transformer magnetizing admittance connected to ground at bus I. When CM is 1, MAG1 and MAG2 are the magnetizing conductance and susceptance, respectively, in pu on system MVA base and Winding 1 bus voltage base. When a non-zero MAG2 is specified, it should be entered as a negative quantity. When CM is 2, MAG1 is the no load loss in watts and MAG2 is the exciting current in pu on Winding 1 to two MVA base (SBASE1-2) and nominal Winding 1 voltage (NOMV1). For three-phase transformers or three-phase banks of single phase transformers, MAG1 should specify the three-phase no-load loss. When a non-zero MAG2 is specified, it should be entered as a positive quantity. MAG1 = 0.0 and MAG2 = 0.0 by default.
NMETR	nmet	The nonmetered end code of either 1 (for the Winding 1 bus) or 2 (for the Winding 2 bus). In addition, for a three-winding transformer, 3 (for the Winding 3 bus) is a valid specification of NMETR. NMETR = 2 by default
NAME	name	Alphanumeric identifier assigned to the transformer. NAME may be up to forty characters and may contain any combination of blanks, uppercase letters, numbers and special characters. NAME *must* be enclosed in single or double quotes if it contains any blanks or special characters. NAME *must* be unique within all non-transformer and transformer branches.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

Field	RAWX Key	Description
		NAME is blank by default
STAT	stat	Transformer status of one for in-service and zero for out-of-service. In addition, for a three-winding transformer, the following values of STAT provide for one winding out-of-service with the remaining windings in-service: • 2 for only Winding 2 out-of-service • 3 for only Winding 3 out-of-service • 4 for only Winding 1 out-of-service STAT = 1 by default
Oi	o1, o2, o3, o4	An owner number (1 through 9999). Each transformer may have up to four owners. By default, O1 is the owner to which bus I is assigned and O2, O3, and O4 are zero.
Fi	f1, f2, f3, f4	The fraction of total ownership assigned to owner Oi; each Fi must be positive. The Fi values are normalized such that they sum to 1.0 before they are placed in the working case. Each Fi is 1.0 by default
VECGRP	vecgrp	Alphanumeric identifier specifying vector group based on transformer winding connections and phase angles. VECGRP value is used for information purpose only. VECGRP is 12 blanks by default
ZCOD	zcod	Method to be used in deriving actual transformer impedances in applying transformer impedance adjustment tables: • 0 apply impedance adjustment factors to winding impedances • 1 apply impedance adjustment factors to bus-to-bus impedances ZCOD = 0 by default ZCOD value is used only for three winding transformers. It is not used for two winding transformers. For three winding transformers, winding impedances are the equivalent T-model impedances Z1, Z2 and Z3; and the bus-to-bus impedances are impedances Z12, Z23 and Z31. For three winding transformers and bus-to-bus impedance correction factors, only one of the three windings must be adjustable (only one of COD1, COD2 and COD3 can be non-zero).

The first three data items on the second record are read for both two- and three-winding transformers; the remaining data items are used *only* for three-winding transformers:

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

Field	RAWX Key	Description
R1-2, X1-2	r1_2, x1_2	The measured impedance of the transformer between the buses to which its first and second windings are connected. When CZ is 1, they are the resistance and reactance, respectively, in pu on system MVA base and winding voltage base. When CZ is 2, they are the resistance and reactance, respectively, in pu on Winding 1 to 2 MVA base (SBASE1-2) and winding voltage base. When CZ is 3, R1-2 is the load loss in watts, and X1-2 is the impedance magnitude in pu on Winding 1 to 2 MVA base (SBASE1-2) and winding voltage base. For three-phase transformers or three-phase banks of single phase transformers, R1-2 should specify the three-phase load loss. R1-2 = 0.0 by default, but no default is allowed for X1-2.
SBASE1-2	sbase1-2	The Winding 1 to 2 three-phase base MVA of the transformer. SBASE1-2 = SBASE (the system base MVA) by default.
R2-3, X2-3	r2_3, x2_3	The measured impedance of a three-winding transformer between the buses to which its second and third windings are connected; ignored for a two-winding transformer. When CZ is 1, they are the resistance and reactance, respectively, in pu on system MVA base and winding voltage base. When CZ is 2, they are the resistance and reactance, respectively, in pu on Winding 2 to 3 MVA base (SBASE2-3) and winding voltage base. When CZ is 3, R2-3 is the load loss in watts, and X2-3 is the impedance magnitude in pu on Winding 2 to 3 MVA base (SBASE2-3) and winding voltage base. For three-phase transformers or three-phase banks of single phase transformers, R2-3 should specify the three-phase load loss. R2-3 = 0.0 by default, but no default is allowed for X2-3.
SBASE2-3	sbase2_3	The Winding 2 to 3 three-phase base MVA of a three-winding transformer; ignored for a two-winding transformer. SBASE2-3 = SBASE (the system base MVA) by default.
R3-1, X3-1	r3_1, x3_1	The measured impedance of a three-winding transformer between the buses to which its third and first windings are connected; ignored for a two-winding transformer. When CZ is 1, they are the resistance and reactance, respectively, in pu on system MVA base and winding voltage base. When CZ is 2, they are the resistance and reactance, respectively, in pu on Winding 3 to 1 MVA base (SBASE3-1) and winding voltage base. When CZ is 3, R3-1 is the load loss in watts, and X3-1 is the impedance magnitude in pu on Winding 3 to 1 MVA base (SBASE3-1) and winding voltage base. For three-phase transformers or three-phase banks of single phase transformers, R3-1 should specify the three-phase load loss.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

Field	RAWX Key	Description
		R3-1 = 0.0 by default, but no default is allowed for X3-1.
SBASE3-1	sbase3_1	The Winding 3 to 1 three-phase base MVA of a three-winding transformer; ignored for a two-winding transformer. SBASE3-1 = SBASE (the system base MVA) by default.
VMSTAR	vmstar	The voltage magnitude at the hidden star point bus; entered in pu. VMSTAR = 1.0 by default.
ANSTAR	anstar	The bus voltage phase angle at the hidden star point bus; entered in degrees. ANSTAR = 0.0 by default

All data items on the third record are read for both two- and three-winding transformers:

Field	RAWX Key	Description
WINDV1	windv1	When CW is 1, WINDV1 is the Winding 1 off-nominal turns ratio in pu of Winding 1 bus base voltage; WINDV1 = 1.0 by default. When CW is 2, WINDV1 is the actual Winding 1 voltage in kV; WINDV1 is equal to the base voltage of bus I by default. When CW is 3, WINDV1 is the Winding 1 off-nominal turns ratio in pu of nominal Winding 1 voltage, NOMV1; WINDV1 = 1.0 by default.
NOMV1	nomv1	The nominal (rated) Winding 1 voltage base in kV, or zero to indicate that nominal Winding 1 voltage is assumed to be identical to the base voltage of bus I. NOMV1 is used in converting magnetizing data between physical units and per unit admittance values when CM is 2. NOMV1 is used in converting tap ratio data between values in per unit of nominal Winding 1 voltage and values in per unit of Winding 1 bus base voltage when CW is 3. NOMV1 = 0.0 by default
ANG1	ang1	The winding one phase shift angle in degrees. For a two-winding transformer, ANG1 is positive when the winding one bus voltage leads the winding two bus voltage; for a three-winding transformer, ANG1 is positive when the winding one bus voltage leads the T (or star) point bus voltage. ANG1 must be greater than -180.0° and less than or equal to +180.0°. ANG1 = 0.0 by default.
RATE1n	wdg1rate1, wdg1rate2, wdg1rate3, wdg1rate4, wdg1rate5, wdg1rate6, wdg1rate7, wdg1rate8, wdg1rate9, wdg1rate10, wdg1rate11, wdg1rate12	

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

Field	RAWX Key	Description
COD1	cod1	The transformer control mode for automatic adjustments of the Winding 1 tap or phase shift angle during power flow solutions: • 0 - for fixed tap and fixed phase shift • ±1 - for voltage control • ±2 - for reactive power flow control • ±3 - for active power flow control • ±4 - for control of a dc line quantity (valid only for two-winding transformers) • ±5 - for asymmetric active power flow control If the control mode is entered as a positive number, automatic adjustment of this transformer winding is enabled when the corresponding adjustment is activated during power flow solutions; a negative control mode suppresses the automatic adjustment of this transformer winding. COD1 = 0 by default.
CONT1	cont1	The bus number, or extended bus name enclosed in single quotes (refer to Extended Bus Names), of the bus for which voltage is to be controlled by the transformer turns ratio adjustment option of the power flow solution activities when COD1 is 1. CONT1 should be non-zero only for voltage controlling transformer windings. CONT1 may specify a bus other than I, J, or K; in this case, the sign of CONT1 defines the location of the controlled bus relative to the transformer winding. If CONT1 is entered as a positive number, or a quoted extended bus name, the ratio is adjusted as if bus CONT1 is on the Winding 2 or Winding 3 side of the transformer; if CONT1 is entered as a negative number, or a quoted extended bus name with a minus sign preceding the first character, the ratio is adjusted as if bus |CONT1| is on the Winding 1 side of the transformer. CONT1 = 0 by default.
NODE1	node1	A node number of bus CONT1. The bus section of bus CONT1 to which node NODE1 is connected is the bus section for which voltage is to be controlled by the transformer turns ratio adjustment option of the power flow solution activities when COD1 is 1. NODE1 should be non-zero only for voltage controlling transformer windings. If bus CONT1 is not in a substation, NODE1 must be specified as 0. NODE1 = 0 by default.
RMA1, RMI1	rma1, rmi1	When |COD1| is 1, 2, 3, or 5, the upper and lower limits, respectively, of one of the following: • Off-nominal turns ratio in pu of Winding 1 bus base voltage when |COD1| is 1 or 2 and CW is 1; RMA1 = 1.1 and RMI1 = 0.9 by default.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

Field	RAWX Key	Description
		• Actual Winding 1 voltage in kV when |COD1| is 1 or 2 and CW is 2. No default is allowed. • Off-nominal turns ratio in pu of nominal Winding 1 voltage (NOMV1) when |COD1| is 1 or 2 and CW is 3; RMA1 = 1.1 and RMI1 = 0.9 by default. • Phase shift angle in degrees when |COD1| is 3 or 5. No default is allowed. Not used when |COD1| is 0 or 4; RMA1 = 1.1 and RMI1 = 0.9 by default.
VMA1, VMI1	vma1, vmi1	When |COD1| is 1, 2, 3, or 5, the upper and lower limits, respectively, of one of the following: • Voltage at the controlled bus (bus |CONT1|) in pu when |COD1| is 1. VMA1 = 1.1 and VMI1 = 0.9 by default. • Reactive power flow into the transformer at the Winding 1 bus end in Mvar when |COD1| is 2. No default is allowed. • Active power flow into the transformer at the Winding 1 bus end in MW when |COD1| is 3 or 5. No default is allowed. Not used when |COD1| is 0 or 4. VMA1 = 1.1 and VMI1 = 0.9 by default.
NTP1	ntp1	The number of tap positions available; used when COD1 is 1 or 2. NTP1 must be between 2 and 9999. NTP1 = 33 by default.
TAB1	tab1	The number of a transformer impedance correction table if this transformer winding's impedance is to be a function of either off-nominal turns ratio or phase shift angle (refer to Transformer Impedance Correction Tables), or 0 if no transformer impedance correction is to be applied to this transformer winding. TAB1 = 0 by default. For three winding transformers, these impedance correction factors are applied to the equivalent T-model impedance Z1 when ZCOD=0 and to the bus-to-bus impedance Z12 when ZCOD=1.
CR1, CX1	cr1, cx1	The load drop compensation impedance for voltage controlling transformers entered in pu on system base quantities; used when COD1 is 1. CR1 + j CX1 = 0.0 by default
CNXA1	cnxa1	Winding connection angle in degrees; used when COD1 is 5. There are no restrictions on the value specified for CNXA1; if it is outside of the range from -90.0 to +90.0, CNXA1 is normalized to within this range. CNXA1 = 0.0 by default.

The first two data items on the fourth record are read for both two- and three-winding transformers; the remaining data items are used *only* for three-winding transformers:

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

Field	RAWX Key	Description
WINDV2	windv2	When CW is 1, WINDV2 is the Winding 2 off-nominal turns ratio in pu of Winding 2 bus base voltage; WINDV2 = 1.0 by default. When CW is 2, WINDV2 is the actual Winding 2 voltage in kV; WINDV2 is equal to the base voltage of bus J by default. When CW is 3, WINDV2 is the Winding 2 off-nominal turns ratio in pu of nominal Winding 2 voltage, NOMV2; WINDV2 = 1.0 by default.
NOMV2	nomv2	The nominal (rated) Winding 2 voltage base in kV, or zero to indicate that nominal Winding 2 voltage is assumed to be identical to the base voltage of bus J. NOMV2 is used in converting tap ratio data between values in per unit of nominal Winding 2 voltage and values in per unit of Winding 2 bus base voltage when CW is 3. NOMV2 = 0.0 by default.
ANG2	ang2	The winding two phase shift angle in degrees. ANG2 is ignored for a two-winding transformer. For a three-winding transformer, ANG2 is positive when the winding two bus voltage leads the T (or star) point bus voltage. ANG2 must be greater than -180.0° and less than or equal to +180.0°. ANG2 = 0.0 by default.
RATE2n	wdg2rate1, wdg2rate2, wdg2rate3, wdg2rate4, wdg2rate5, wdg2rate6, wdg2rate7, wdg2rate8, wdg2rate9, wdg2rate10, wdg2rate11, wdg2rate12	Winding 2's twelve three-phase ratings, entered in either MVA or current expressed as MVA, according to the value specified for XFRRAT specified on the first data record (refer to Case Identification Data). Each RATEn2 = 0.0 (bypass loading limit check for this transformer winding) by default.
COD2	cod2	The transformer control mode for automatic adjustments of the Winding 2 tap or phase shift angle during power flow solutions: • 0 - for fixed tap and fixed phase shift • ±1 - for voltage control • ±2 - for reactive power flow control • ±3 - for active power flow control • ±5 - for asymmetric active power flow control If the control mode is entered as a positive number, automatic adjustment of this transformer winding is enabled when the corresponding adjustment is activated during power flow solutions; a negative control mode suppresses the automatic adjustment of this transformer winding.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

Field	RAWX Key	Description
		COD2 = 0 by default.
CONT2	cont2	The bus number, or extended bus name enclosed in single quotes (refer to Extended Bus Names), of the bus for which voltage is to be controlled by the transformer turns ratio adjustment option of the power flow solution activities when COD2 is 1. CONT2 should be non-zero only for voltage controlling transformer windings. CONT2 may specify a bus other than I, J, or K; in this case, the sign of CONT2 defines the location of the controlled bus relative to the transformer winding. If CONT2 is entered as a positive number, or a quoted extended bus name, the ratio is adjusted as if bus CONT2 is on the Winding 1 or Winding 3 side of the transformer; if CONT2 is entered as a negative number, or a quoted extended bus name with a minus sign preceding the first character, the ratio is adjusted as if bus |CONT2| is on the Winding 2 side of the transformer. CONT2 = 0 by default.
NODE2	node2	A node number of bus CONT2. The bus section of bus CONT2 to which node NODE2 is connected is the bus section for which voltage is to be controlled by the transformer turns ratio adjustment option of the power flow solution activities when COD2 is 1. NODE2 should be non-zero only for voltage controlling transformer windings. If bus CONT2 is not in a substation, NODE2 must be specified as 0. NODE2 = 0 by default.
RMA2, RMI2	rma2, rmi2	When |COD2| is 1, 2, 3, or 5, the upper and lower limits, respectively, of one of the following: • Off-nominal turns ratio in pu of Winding 2 bus base voltage when |COD2| is 1 or 2 and CW is 1; RMA2 = 1.1 and RMI2 = 0.9 by default. • Actual Winding 2 voltage in kV when |COD2| is 1 or 2 and CW is 2. No default is allowed. • Off-nominal turns ratio in pu of nominal Winding 2 voltage (NOMV2) when |COD2| is 1 or 2 and CW is 3; RMA2 = 1.1 and RMI2 = 0.9 by default. • Phase shift angle in degrees when |COD2| is 3 or 5. No default is allowed. Not used when |COD2| is 0. RMA2 = 1.1 and RMI2 = 0.9 by default.
VMA2, VMI2	vma2, vmi2	When |COD2| is 1, 2, 3, or 5, the upper and lower limits, respectively, of one of the following: • Voltage at the controlled bus (bus |CONT2|) in pu when |COD2| is 1. VMA2 = 1.1 and VMI2 = 0.9 by default. • Reactive power flow into the transformer at the Winding 2 bus end in Mvar when |COD2| is 2. No default is allowed.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

Field	RAWX Key	Description
		• Active power flow into the transformer at the Winding 2 bus end in MW when |COD2| is 3 or 5. No default is allowed. Not used when |COD2| is 0. VMA2 = 1.1 and VMI2 = 0.9 by default
NTP2	ntp2	The number of tap positions available; used when COD2 is 1 or 2. NTP2 must be between 2 and 9999. NTP2 = 33 by default
TAB2	tab2	The number of a transformer impedance correction table if this transformer winding's impedance is to be a function of either off-nominal turns ratio or phase shift angle (refer to Transformer Impedance Correction Tables), or 0 if no transformer impedance correction is to be applied to this transformer winding. TAB2 = 0 by default. For three winding transformers, these impedance correction factors are applied to the equivalent T-model impedance Z2 when ZCOD=0 and to the bus-to-bus impedance Z23 when ZCOD=1.
CR2, CX2	cr2, cx2	The load drop compensation impedance for voltage controlling transformers entered in pu on system base quantities; used when COD2 is 1. CR2 + j CX2 = 0.0 by default.
CNXA2	cnxa2	Winding connection angle in degrees; used when COD2 is 5. There are no restrictions on the value specified for CNXA2; if it is outside of the range from -90.0 to +90.0, CNXA2 is normalized to within this range. CNXA2 = 0.0 by default.

The fifth data record is specified only for three-winding transformers:

Field	RAWX Key	Description
WINDV3	windv3	When CW is 1, WINDV3 is the Winding 3 off-nominal turns ratio in pu of Winding 3 bus base voltage; WINDV3 = 1.0 by default. When CW is 2, WINDV3 is the actual Winding 3 voltage in kV; WINDV3 is equal to the base voltage of bus K by default. When CW is 3, WINDV3 is the Winding 3 off-nominal turns ratio in pu of nominal Winding 3 voltage, NOMV3; WINDV3 = 1.0 by default.
NOMV3	nomv3	The nominal (rated) Winding 3 voltage base in kV, or zero to indicate that nominal Winding 3 voltage is assumed to be identical to the base voltage of bus K. NOMV3 is used in converting tap ratio data between values in per unit of nominal Winding 3 voltage and values in per unit of Winding 3 bus base voltage when CW is 3. NOMV3 = 0.0 by default
ANG3	ang3	The winding three phase shift angle in degrees. ANG3 is positive when the winding three bus voltage leads the T (or star) point bus voltage. ANG3 must be greater than -180.0° and less than or equal to +180.0°.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

Field	RAWX Key	Description
		ANG3 = 0.0 by default
RATE3n	wdg3rate3, wdg3rate2, wdg3rate3, wdg3rate4, wdg3rate5, wdg3rate6, wdg3rate7, wdg3rate8, wdg3rate9, wdg3rate10, wdg3rate11, wdg3rate12	Winding 3's twelve three-phase ratings, entered in either MVA or current expressed as MVA, according to the value specified for XFRRAT specified on the first data record (refer to Case Identification Data). Each RATEn3 = 0.0 (bypass loading limit check for this transformer winding) by default.
COD3	cod3	The transformer control mode for automatic adjustments of the Winding 3 tap or phase shift angle during power flow solutions: • 0 - for fixed tap and fixed phase shift • ±1 - for voltage control • ±2 - for reactive power flow control • ±3 - for active power flow control • ±5 - for asymmetric active power flow control If the control mode is entered as a positive number, automatic adjustment of this transformer winding is enabled when the corresponding adjustment is activated during power flow solutions; a negative control mode suppresses the automatic adjustment of this transformer winding. COD3 = 0 by default
CONT3	cont3	The bus number, or extended bus name enclosed in single quotes (refer to Extended Bus Names), of the bus for which voltage is to be controlled by the transformer turns ratio adjustment option of the power flow solution activities when COD3 is 1. CONT3 should be non-zero only for voltage controlling transformer windings. CONT3 may specify a bus other than I, J, or K; in this case, the sign of CONT3 defines the location of the controlled bus relative to the transformer winding. If CONT3 is entered as a positive number, or a quoted extended bus name, the ratio is adjusted as if bus CONT3 is on the Winding 1 or Winding 2 side of the transformer; if CONT3 is entered as a negative number, or a quoted extended bus name with a minus sign preceding the first character, the ratio is adjusted as if bus |CONT3| is on the Winding 3 side of the transformer. CONT3 = 0 by default
NODE3	node3	A node number of bus CONT3. The bus section of bus CONT3 to which node NODE3 is connected is the bus section for which voltage is to be controlled by the transformer turns ratio adjustment option of the power flow solution activities

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

Field	RAWX Key	Description
		when COD3 is 1. NODE3 should be non-zero only for voltage controlling transformer windings. If bus CONT3 is not in a substation, NODE3 must be specified as 0. NODE3 = 0 by default.
RMA3, RMI3	rma3, rmi3	When |COD3| is 1, 2, 3, or 5, the upper and lower limits, respectively, of one of the following: • Off-nominal turns ratio in pu of Winding 3 bus base voltage when |COD3| is 1 or 2 and CW is 1; RMA3 = 1.1 and RMI3 = 0.9 by default. • Actual Winding 3 voltage in kV when |COD3| is 1 or 2 and CW is 2. No default is allowed. • Off-nominal turns ratio in pu of nominal Winding 3 voltage (NOMV3) when |COD3| is 1 or 2 and CW is 3; RMA3 = 1.1 and RMI3 = 0.9 by default. • Phase shift angle in degrees when |COD3| is 3 or 5. No default is allowed. Not used when |COD3| is 0. RMA3 = 1.1 and RMI3 = 0.9 by default
VMA3, VMI3	vma3, vmi3	When |COD3| is 1, 2, 3, or 5, the upper and lower limits, respectively, of one of the following: • Voltage at the controlled bus (bus |CONT3|) in pu when |COD3| is 1. VMA3 = 1.1 and VMI3 = 0.9 by default. • Reactive power flow into the transformer at the Winding 3 bus end in Mvar when |COD3| is 2. No default is allowed. • Active power flow into the transformer at the Winding 3 bus end in MW when |COD3| is 3 or 5. No default is allowed. Not used when |COD3| is 0. VMA3 = 1.1 and VMI3 = 0.9 by default
NTP3	ntp3	The number of tap positions available; used when COD3 is 1 or 2. NTP3 must be between 2 and 9999. NTP3 = 33 by default
TAB3	tab3	The number of a transformer impedance correction table if this transformer winding's impedance is to be a function of either off-nominal turns ratio or phase shift angle (refer to Transformer Impedance Correction Tables), or 0 if no transformer impedance correction is to be applied to this transformer winding. TAB3 = 0 by default For three winding transformers, these impedance correction factors are applied to the equivalent T-model impedance Z3 when ZCOD=0 and to the bus-to-bus impedance Z31 when ZCOD=1.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

Field	RAWX Key	Description
CR3, CX3	cr3, cx3	The load drop compensation impedance for voltage controlling transformers entered in pu on system base quantities; used when COD3 is 1. CR3 + j CX3 = 0.0 by default
CNXA3	cnxa3	Winding connection angle in degrees; used when COD3 is 5. There are no restrictions on the value specified for CNXA3; if it is outside of the range from -90.0 to +90.0, CNXA3 is normalized to within this range. CNXA3 = 0.0 by default

Transformer data input is terminated with a record specifying a Winding 1 bus number of zero.

1.15.1. Three-Winding Transformer Notes

The transformer data record blocks described in Transformer Data provide for the specification of both two-winding transformers and three-winding transformers. A three-winding transformer is modeled in PSSE as a grouping of three two-winding transformers, where each of these two-winding transformers models one of the windings. While most of the three-winding transformer data is stored in the two-winding transformer data arrays, it is accessible for reporting and modification only as three-winding transformer data.

In deriving winding impedances from the measured impedance data input values, one winding with a small impedance, in many cases negative, often results. In the extreme case, it is possible to specify a set of measured impedances that themselves do not individually appear to challenge the precision limits of typical power system calculations, but which result in one winding impedance of nearly (or identically) 0.0. Such data could result in precision difficulties, and hence inaccurate results, when processing the system matrices in power flow and short circuit calculations.

Whenever a set of measured impedance results in a winding reactance that is identically 0.0, a warning message is printed by the three-winding transformer data input or data changing function, and the winding's reactance is set to the zero impedance line threshold tolerance (or to 0.0001 if the zero impedance line threshold tolerance itself is 0.0). Whenever a set of measured impedances results in a winding impedance for which magnitude is less than 0.00001, a warning message is printed. As with all warning and error messages produced during data input and data modification phases of PSSE, the user should resolve the cause of the message (e.g., was correct input data specified?) and use engineering judgement to resolve modeling issues (e.g., is this the best way to model this transformer or would some other modeling be more appropriate?).

Activity BRCH may be used to detect the presence of branch reactance magnitudes less than a user-specified threshold tolerance; its use is always recommended whenever the user begins power system analysis work using a new or modified system model.

1.15.2. Example Two-Winding Transformer Data Records

Figure 1.13 shows the data records for a 50 MVA, 138/34.5 kV two-winding transformer connected to system buses with nominal voltages of 134 kV and 34.5 kV, and sample data on 100 MVA system base and winding voltage bases of 134 kV and 34.5 kV.

Example of 2-Winding Transformer:

Data Formats

```
I,J,K,CKT,CW,CZ,CM,MAG1,MAG2,NMETR,NAME;,STAT,O1,F1,...,O4,F4,VECGRP
```


All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

R1-2,X1-2,SBASE1-2

WINDV1,NOMV1,ANG1,RATE11...RATE121,COD1,CONT1,NODE1,RMA1,RMI1,

WINDV2,NOMV2

Data

6150, 6151, 0, '1', 1, 1, 1, 0.0, 0.0, 2, 'TWO-WINDINGS', 1, 5, 1.0

0.0, 0.30, 100.0

1.0299, 0.0, 0.0, 50.0, 60.0, 75.0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 1, 6151, 0, 1.1, 0.9, 1.025, 1.0, 33, 0, 0.0, 0.0

1.0, 0.0

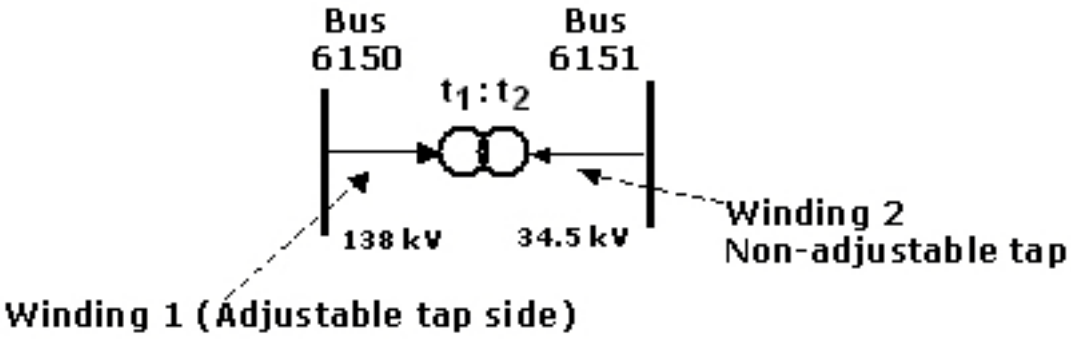


Figure 1.13. Sample Data for Two-Winding Transformer

1.15.3. Example Three-Winding Transformer Data Records

Figure 1.14 shows the data records for a 300 MVA, 345/138/13.8 kV three-winding transformer connected to system buses with nominal voltages of 345 kV, 138 kV and 13.8 kV, respectively, and sample data on 100 MVA system base and winding base voltages of 345 kV, 138 kV and 13.8 kV.

Example of 3-Winding Transformer:

Data Formats

I,J,K,CKT,CW,CZ,CM,MAG1,MAG2,NMETR,NAME;,STAT,O1,F1,...,O4,F4,VECGRP,ZCOD

R1-2,X1-2,SBASE1-2,R2-3,X2-3,SBASE2-3,R3-1,X3-1,SBASE3-1,VMSTAR,ANSTAR

WINDV1,NOMV1,ANG1,RATE11...RATE121,COD1,CONT1,NODE1,RMA1,RMI1,

WINDV2,NOMV2,ANG2,RATE12...RATE122,COD2,CONT2,NODE2,RMA2,RMI2,

WINDV3,NOMV3,ANG3,RATE13...RATE123,COD3,CONT3,NODE3,RMA3,RMI3,

Data

3001, 3002, 3000, '1', 1, 1, 1, 0.0, 0.0, 2, 'THREEWINDING', 1, 5, 1.0

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

0.003, 0.03, 100.0, 0.001, 0.03, 100.0, 0.001, 0.035, 100.0, 1.025, 0.0

1.00, 0.0, 0.0, 300, 400, 600, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 3001, 0, 1.1, 0.9, 1.04, 1.0, 33, 0, 0.0, 0.0, 0.0

1.02, 0.0, 0.0, 300, 400, 600

1.00, 0.0, 0.0, 50, 60, 75

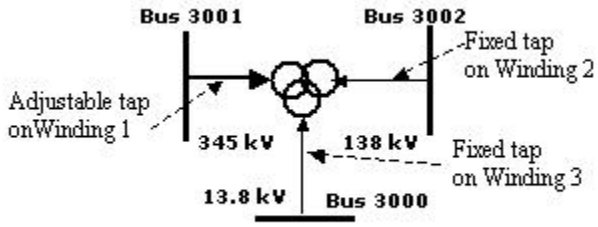


Figure 1.14. Sample Data for Three-Winding Transformer

1.15.4. Transformer Vector Group Clock Position and Phase Angle

Following examples provide how vector group clock position and power flow data winding phase angle are defined.

1. Two winding delta-wye transformer

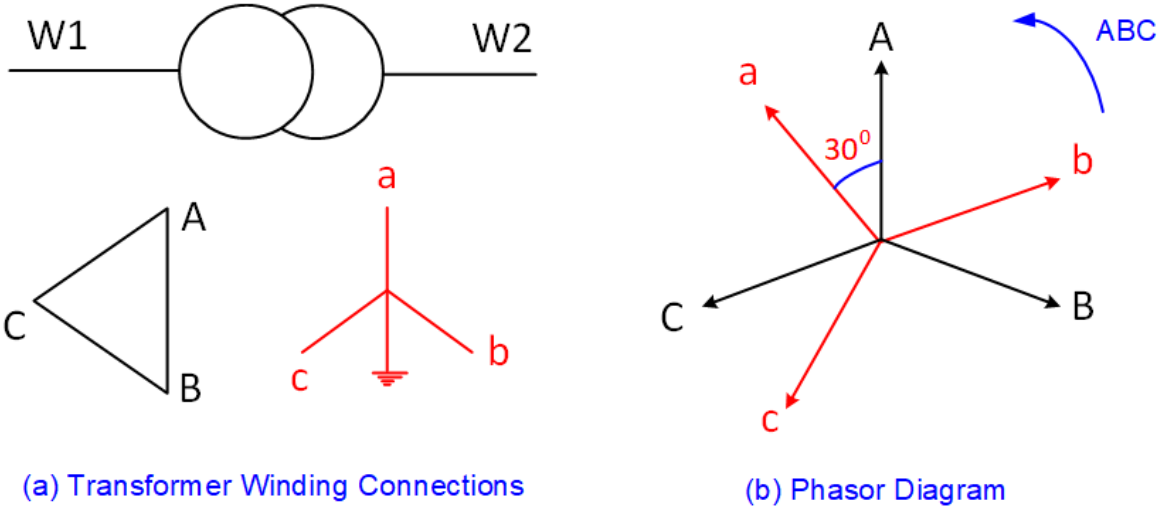


Figure 1.15. Two Winding Transformer Vector Group Clock Position and Phase Angle

For delta-wye transformer with winding connections as shown in Figure 1.15 (a), there is 30 degrees phase shift between phase-to-neutral and phase-to-phase voltages. The delta winding bus voltages [VABC] lag the wye winding bus voltages [Vabc] by 30 degrees. Therefore, using the PSSE power flow

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

winding phase shift angle convention (ANG1 is the winding 1 bus voltage by which leads winding 2 bus voltage), the PSSE power flow data input is entered as:

- Vector group = Dyn11 [delta clock position is 12 and wye clock position is 11.]
- ANG1 = -30 degrees [that is winding 1 bus voltage lags winding 2 bus voltage by 30 degrees.]

2. Three winding wye-delta-delta transformer

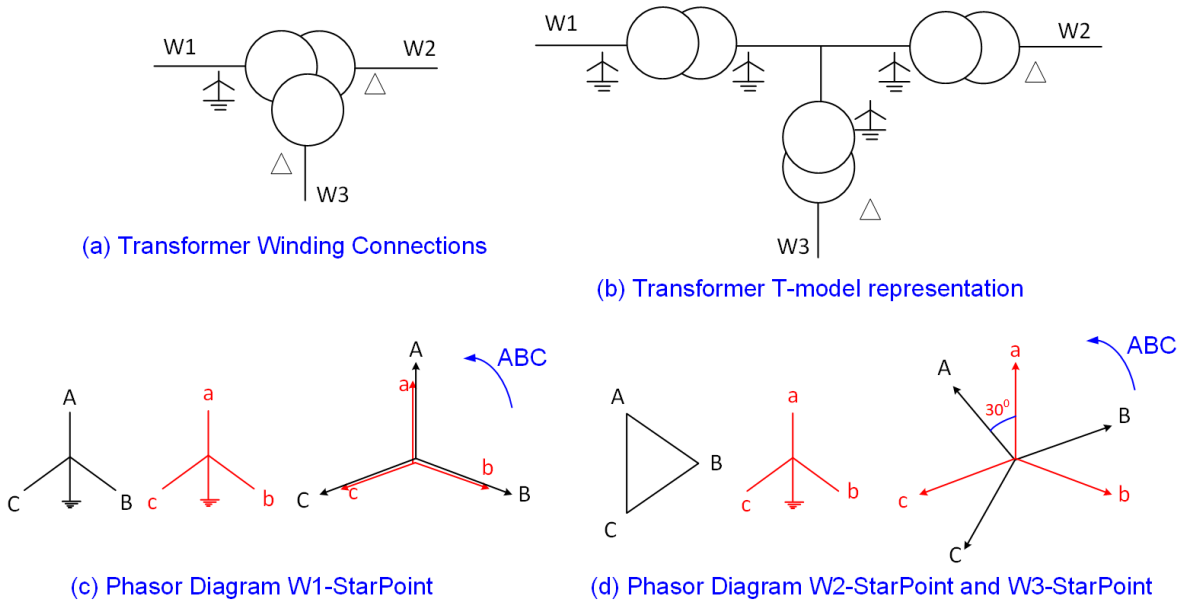


Figure 1.16. Three Winding Transformer Vector Group Clock Position and Phase Angle

Figure 1.16 (a) shows three winding wye-delta-delta transformer winding connections. Figure 1.16 (b) shows its T-model representation in analysis. It is three two winding transformers, with star-point transformers modeled as wye-grounded for flow continuity between windings.

- Winding 1 - Figure 1.16 (c) shows phasor diagram of winding 1 and star-point. It is a wye-wye transformer.
  - Vector group = YNyn0 [wye clock position is 12 and star-point wye clock position is 12.]
  - ANG1 = 0 degress [that is winding 1 bus voltage is in phase with VSTAR bus voltage.]
- Windings 2 and 3 - Figure 1.16 (d) shows phasor diagram of winding 2 - star-point and winding 3 – star-point. They are delta-wye transformers. Using the ANSI/IEEE standard for transformers stating that the HV winding bus voltages phase angle should lead the LV winding bus voltages, the delta winding bus voltage [VABC] leads the star-point wye winding bus voltage [Vabc] by 30 degrees.
  - Vector group = D11yn0 [delta clock position is 11 and star-point wye clock position is 12.]
  - ANG1 = +30 degrees [that is delta winding bus voltage leads the star-point VSTAR bus voltage by 30 degrees.]

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

- Therefore, for this wye-delta-delta transformer, power flow data is provided as below:
  - Vector group = YN0d11d11
  - ANG1 = 0, ANG2 = +30, ANG3 = +30 degrees

1.15.5. Two Winding Transformer Vector Groups

Table 1.2 shows examples of two winding transformer vector groups, corresponding phase angles and connection codes. A different winding clock position can be used by appropriately specifying the phase angle ANG1.

Table 1.2. Examples of Two Winding Transformer Vector Groups

Vector Group	PSSE Phase Angle (ANG1)	Transformer Type	Connection Code (CC)	Transformer Type	Connection Code (CC)
YNyn0	0	shell	11	core	20
YNyn6	180	shell	11	core	20
YNd1	30	shell	12		
YNd11	-30	shell	12		
YNd5	150	shell	12		
YNd7	-150	shell	12		
ZNd0	0	shell	12	core	17
ZNd1	30	shell	12	core	17
ZNd6	180	shell	12	core	17
ZNd7	-150	shell	12	core	17
ZNyn1	30	shell	12	core	17
ZNyn11	-30	shell	12	core	17
ZNyn5	150	shell	12	core	17
ZNyn7	-150	shell	12	core	17
ZNy1	30	shell	12	core	17
ZNy11	-30	shell	12	core	17
ZNy5	150	shell	12	core	17
ZNy7	-150	shell	12	core	17
Dyn1	30	shell	13		
Dyn11	-30	shell	13		
Dyn5	150	shell	13		
Dyn7	-150	shell	13		
Dzn0	0	shell	13	core	16
Dzn1	30	shell	13	core	16
Dzn6	180	shell	13	core	16
Dzn7	-150	shell	13	core	16
YNzn1	30	shell	13	core	16

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

YNzn11	-30	shell	13	core	16
YNzn5	150	shell	13	core	16
YNzn7	-150	shell	13	core	16
Yzn1	30	shell	13	core	16
Yzn11	-30	shell	13	core	16
Yzn5	150	shell	13	core	16
Yzn7	-150	shell	13	core	16
Dd0	0	shell	14		
Dd6	180	shell	14		
Dy1	30	shell	14		
Dy11	-30	shell	14		
Dy5	150	shell	14		
Dy7	-150	shell	14		
Yd1	30	shell	14		
Yd11	-30	shell	14		
Yd5	150	shell	14		
Yd7	-150	shell	14		
YNy0	0	shell	14	core	12
YNy6	180	shell	14	core	12
Yyn0	0	shell	14	core	13
Yyn6	180	shell	14	core	13
Yy0	0	shell	14		
Yy6	180	shell	14		
YNa0	0	core	18 or 19	shell	21
Ya0	0	core	22	shell	14

1.15.6. Three Winding Transformer Vector Groups

Table 1.3 through Table 1.11 show examples of three winding transformer vector groups, corresponding phase angles and connection codes. A different winding clock position can be used by appropriately specifying the phase angles ANG1, ANG2 and ANG3.

Vector groups are specified forming combinations of allowed winding connections and clock positions for various transformer connection codes.

Table 1.3. Clock Positions and Phase Angles specified in Transformer Power Flow Data

Clock Position	Phase Angles (ANG1/ANG2/ANG3)
0	0
6	180
1	-30
5	-150
7	150
11	30

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

Table 1.4. Three Winding CC=11

	Allowed Winding Configurations	Allowed Clock Positions
Winding 1	YN	0, 6
Winding 2	yn	0, 6
Winding 3	yn	0, 6
Examples	YN0yn6yn0, ANG1=0, ANG2=180, ANG3=0 YN0yn0yn0, ANG1=0, ANG2=0, ANG3=0	

Table 1.5. Three Winding CC=12

	Allowed Winding Configurations	Allowed Clock Positions
Winding 1	YN	0, 6
Winding 2	yn	0, 6
Winding 3	y	0, 6
	d	1, 5, 7, 11
Examples	YN0yn6d5, ANG1=0, ANG2=180, ANG3=-150 YN6yn0y0 ANG1=180, ANG2=0, ANG3=0	

Table 1.6. Three Winding CC=13

	Allowed Winding Configurations	Allowed Clock Positions
Winding 1	D	1, 5, 7, 11
Winding 2	yn	0, 6
Winding 3	d	1, 5, 7, 11
Examples	D1YN0d1, ANG1=-30, ANG2=0, ANG3=0 D5YN0d5, ANG1=-150, ANG2=0, ANG3=-150	

Table 1.7. Three Winding CC=14

	Allowed Winding Configurations	Allowed Clock Positions
Winding 1	Y	0, 6
	D	1, 5, 7, 11
Winding 2	y	0, 6
	d	1, 5, 7, 11
Winding 3	y	0, 6
	d	1, 5, 7, 11
Examples	Y6d11d7, ANG1=180, ANG2=30, ANG3=150 D1d1y6, ANG1=-30, ANG2=-30, ANG3=180	

Table 1.8. Three Winding CC=15

	Allowed Winding Configurations	Allowed Clock Positions
Winding 1*	D	1, 5, 7, 11

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

	Allowed Winding Configurations	Allowed Clock Positions
Winding 2	yn	0, 6
Winding 3*	d	1, 5, 7, 11
Examples	D1yn0d1, ANG1=-30, ANG2=0, ANG3=-30 D1yn6d11, ANG1= -30, ANG2=180, ANG3=30	

* Note: Windings 1 and 3 form auto-transformer. So their clock positions are always identical.

Table 1.9. Three Winding CC=16

	Allowed Winding Configurations	Allowed Clock Positions
Winding 1	YN	0, 6
Winding 2	yn	0, 6
Winding 3	yn	0, 6
Examples	YN0yn0yn0, ANG1=0, ANG2=0, ANG3=0 YN6yn0yn6, ANG1=180, ANG2=0, ANG3=180	

Table 1.10. Three Winding CC=17

	Allowed Winding Configurations	Allowed Clock Positions
Winding 1	YNa	0
Winding 2		
Winding 3	d	1, 5, 7, 11
Examples	YNa0d1, ANG1=0, ANG2=0, ANG3=-30 YNa0d7, ANG1=0, ANG2=0, ANG3=150	

Table 1.11. Three Winding CC=18

	Allowed Winding Configurations	Allowed Clock Positions
Winding 1	Ya	0
Winding 2		
Winding 3	d	1, 5, 7, 11
Examples	Ya0d5, ANG1=0, ANG2=0, ANG3=-150 Ya0d11, ANG1=0, ANG2=0, ANG3=30	

1.16. Areas, Zones and Owners

In the analysis of large scale power systems for both planning and operations purposes, it is often convenient to be able to restrict the processing or reporting of PSSE functions to one or more subsets of the complete power system model. PSSE provides three groupings of network elements which may be used for these purposes: areas, zones, and owners.

Areas are commonly used to designate sections of the network that represent control areas between which there are scheduled flows. PSSE provides for the identification of areas and their schedules. Alternatively, the network can be subdivided between utility companies or any other subdivisions useful for specific analyses.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

Each ac bus, load, and induction machine, as well as each dc bus of each multi-terminal dc line, is assigned to an area.

Assigning buses to specific zones allows an additional subdivision of the network to facilitate analyses and documentation. While PSSE provides documentation of zone interchange, it provides no analytical facility to schedule interchange between zones. Each ac bus, load, and induction machine as well as each dc bus of each multi-terminal dc line, is assigned to a zone.

Although areas cannot overlap other areas and zones cannot overlap other zones, areas and zones can overlap each other.

Figure 1.17 shows a system subdivided into three areas and three zones, each with a unique name. Notice the following:

- An area does not have to be contiguous. Area #1 covers two separate parts of the network.
- Zone #1 lies entirely in Area #1.
- Zone #2 lies partly in Area #1 and partly in Area #4.
- Zone #3 lies partly in Area 4 and Area 2.

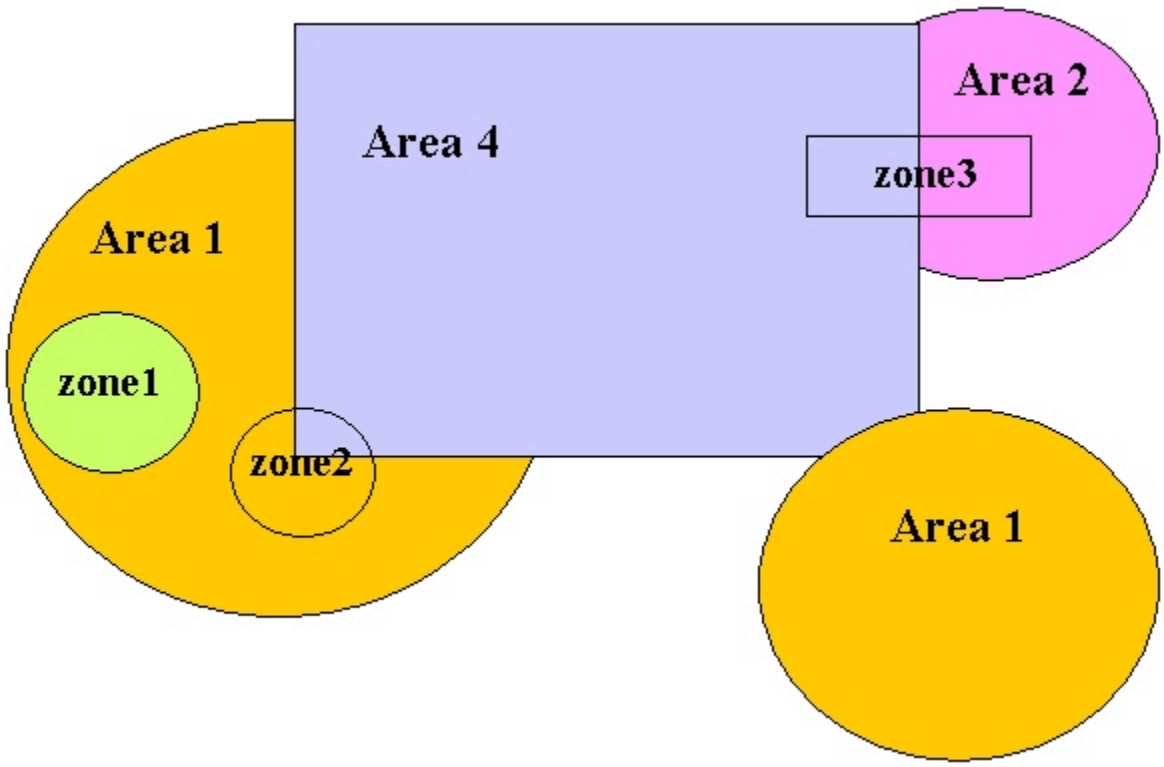


Figure 1.17. Overlapping Areas and Zones

Assigning ownership attributes to buses and other equipment allows an additional subdivision of the network for analysis and documentation purposes. PSSE provides neither analytical facility to schedule interchange

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

between owners, nor documentation of owner interchange. Each of the following power system elements is assigned to a single owner:

- ac bus
- load
- induction machine
- dc bus of a multi-terminal dc line
- FACTS device
- GNE device

Each of the following elements may have up to four owners:

- synchronous machine
- non-transformer branch
- two-winding and three-winding transformer
- VSC dc line

Area, zone and owner assignments are established at the time the network element is introduced into the working case, either as specified by the user or to a documented default value. Assignments may be modified either through the standard power flow data modification functions (refer to Section 5.9, Changing Service Status and Power Flow Parametric Data) or via activities ARNM, OWNM and ZONM.

Additional Information
See also: Section 4.8, Subsystem Selection Section 4.9, Subsystem Reporting Adjusting Net Interchange Area Interchange Control Area Interchange Data Interarea Transfer Data Owner Data Zone Data Bus Data Load Data Generator Data Non-Transformer Branch Data Transformer Data Voltage Source Converter (VSC) DC Transmission Line Data Multi-Terminal DC Transmission Line Data Induction Machine Data FACTS Device Data

1.17. Area Interchange Data

Area identifiers and interchange control parameters are specified in area interchange data records. Data for each interchange area may be specified either at the time of raw/rawx data input or subsequently via activity CHNG or the area *[Spreadsheet]*. Each area interchange data record has the following format:

RAW Record Format

```
I, ISW, PDES, PTOL, ARNAME
```

RAWx Record Format

```
"area":{
  "fields":["iarea", "isw", "pdes", "ptol", "arname"],
  "data":[
      [1, 101, -2800.0, 10.0, "CENTRAL"],
```


All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

```
      ...

      [6, 402, 300.0, 20.0, "EAST_COGEN2"]
  ]
}
```

Field	RAWX Key	Description
I	iarea	Area number (1 through 9999). No default allowed.
ISW	isw	Bus number, or extended bus name enclosed in single quotes (refer to Extended Bus Names), of the area slack bus for area interchange control. The bus *must* be a generator (Type 2) bus in the specified area. Any area containing a system swing bus (Type 3) *must have* either that swing bus or a bus number of zero specified for its area slack bus number. Any area with an area slack bus number of zero is considered a floating area by the area interchange control option of the power flow solution activities. ISW = 0 by default.
PDES	pdes	Desired net interchange leaving the area (export); entered in MW. PDES must be specified such that is consistent with the area interchange definition implied by the area interchange control code (tie lines only, or tie lines and loads) to be specified during power flow solutions (refer to Section 6.3.20, Automatic Adjustments and Area Interchange Control). PDES = 0.0 by default.
PTOL	ptol	Interchange tolerance bandwidth; entered in MW. PTOL = 10.0 by default
ARNAME	arname	Alphanumeric identifier assigned to area I. ARNAME may be up to twelve characters and may contain any combination of blanks, uppercase letters, numbers and special characters. ARNAME *must* be enclosed in single or double quotes if it contains any blanks or special characters. ARNAME is twelve blanks by default

Area interchange data input is terminated with a record specifying an area number of zero.

1.17.1. Area Interchange Data Notes

All buses (ac and dc), loads and induction machines can be assigned to an area. The area number is entered as part of the data records for the buses, loads, and induction machines (see Areas, Zones and Owners, Bus Data, Load Data and Multi-Terminal DC Transmission Line Data).

Area interchange is a required net export of power from, or net import of power to, a specific area. This does not imply that the power is destined to be transferred to or from any other specific area. To specify transfers between specific pairs of areas, see Interarea Transfer Data.

Each bus in the PSSE working case may be designated as residing in an interchange area, for purposes of both interchange control and selective output and other processing. When the interchange control option

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

is enabled during a power flow solution, each interchange area for which an area slack bus is specified has the active power output of its area slack bus modified such that the desired net interchange for the area falls within a desired band. Refer to Area Interchange Control for further discussion on this option of the power flow solution activities.

1.18. Two-Terminal DC Transmission Line Data

The two-terminal dc transmission line model is used to simulate either a point-to-point system with rectifier and inverter separated by a bipolar or mono-polar transmission system or a back-to-back system where the rectifier and inverter are physically located at the same site and separated only by a short bus-bar.

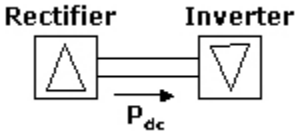


Figure 1.18. Two Terminal DC Configuration

The data requirements fall into three groups:

- Control parameters and set-points
- Converter transformers
- The dc line characteristics

RAW Record Format (3 lines)

```
NAME, MDC, RDC, SETVL, VSCHD, VCMOD, RCOMP, DELTI, METER, DCVMIN, CCCITMX, CCCACC

IPR, NBR, ANMXR, ANMNR, RCR, XCR, EBASR, TRR, TAPR, TMXR, TMNR, STPR, ICR, NDR,
IFR, ITR, IDR, XCAPR

IPI, NBI, ANMXI, ANMNI, RCI, XCI, EBASI, TRI, TAPI, TMXI, TMNI, STPI, ICI, NDI,
IFI, ITI, IDI, XCAPI
```

RAWx Record Format

```
"twotermdc":{
  "fields":["name", "mdc", "rdc", "setvl", "vschd", "vcmod", "rcomp",
            "delti", "met", "dcvmin", "cccitmx", "cccacc", "ipr", "nbr",
            "anmxr", "anmnr", "rcr", "xcr", "ebasr", "trr", "tapr",
            "tmxr","tmnr", "stpr", "icr", "ndr", "ifr", "itr", "idr",
            "xcapr", "ipi", "nbi", "anmxi", "anmni", "rci", "xci", "ebasi",
            "tri", "tapi", "tmxi", "tmni", "stpi", "ici", "ndi", "ifi",
            "iti", "idi", "xcapi"],
  "data":[
      ["TWO_TERM_DC1", 1, 7.8543, 1490.65, 525.0, 400.0, 3.942, 0.1556,
        "I", 0.00, 20, 1.0, 301, 2, 13.00, 7.50, 0.0111, 3.88, 500.0, 0.44,
        1.06275, 1.1, 0.9, 0.00525, 0, 0, 0, 0, "1 ", 2.0034, 3021, 2, 21.00,
        18.5, 0.0, 3.047, 230.0, 0.95652, 1.075, 1.1, 0.8, 0.00625, 0, 0,
        152, 3021, "T4", 2.0],
```


All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

```
      ...

      ["TWO_TERM_DC2", 1, 8.2, 1500.0, 525.0, 400.0, 4.1, 0.15, "I", 0.00,
        20, 1.0, 301, 2, 12.0, 8.0, 0.011, 3.88, 500.0, 0.44, 1.0545, 1.112,
        0.9, 0.00515, 0, 0, 0, 0, "1 ", 0.0098, 3022, 2, 20.0, 18.0, 0.012,
        3.047, 230.0, 0.95652, 1.06250, 1.1, 0.8, 0.00625, 0, 0, 152, 3022,
        "T5", 0.0074]
  ]
}
```

The first of the three dc line data records defines the following line quantities and control parameters:

Field	RAWX Key	Description
NAME	name	The non-blank alphanumeric identifier assigned to this dc line. Each two-terminal dc line *must* have a unique NAME. NAME may be up to twelve characters and may contain any combination of blanks, uppercase letters, numbers and special characters. NAME *must* be enclosed in single or double quotes if it contains any blanks or special characters. No default allowed
MDC	mdc	Control mode: 0 for blocked, 1 for power, 2 for current. MDC = 0 by default
RDC	rdc	The dc line resistance; entered in ohms. No default allowed
SETVL	setvl	Current (amps) or power (MW) demand. When MDC is one, a positive value of SETVL specifies desired power at the rectifier and a negative value specifies desired inverter power. No default allowed
VSCHD	vschd	Scheduled compounded dc voltage; entered in kV. No default allowed
VCMOD	vcmod	Mode switch dc voltage; entered in kV. When the inverter dc voltage falls below this value and the line is in power control mode (i.e., MDC = 1), the line switches to current control mode with a desired current corresponding to the desired power at scheduled dc voltage. VCMOD = 0.0 by default
RCOMP	rcomp	Compounding resistance; entered in ohms. Gamma and/or TAPI is used to attempt to hold the compounded voltage (VDCI + DCCUR*RCOMP) at VSCHD. To control the inverter end dc voltage VDCI, set RCOMP to zero; to control the rectifier end dc voltage VDCR, set RCOMP to the dc line resistance, RDC; otherwise, set RCOMP to the appropriate fraction of RDC. RCOMP = 0.0 by default
DELTI	delti	Margin entered in per unit of desired dc power or current. This is the fraction by which the order is reduced when ALPHA is at its minimum and the inverter is controlling the line current.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

Field	RAWX Key	Description
		DELTI = 0.0 by default
METER	met	Metered end code of either R (for rectifier) or I (for inverter). METER = I by default
DCVMIN	dcvmin	Minimum compounded dc voltage; entered in kV. Only used in constant gamma operation (i.e., when ANMXI = ANMNI) when TAPI is held constant and an ac transformer tap is adjusted to control dc voltage (i.e., when IFI, ITI, and IDI specify a two-winding transformer). DCVMIN = 0.0 by default
CCCITMX	cccitmx	Iteration limit for capacitor commutated two-terminal dc line Newton solution procedure. CCCITMX = 20 by default
CCCACC	cccacc	Acceleration factor for capacitor commutated two-terminal dc line Newton solution procedure. CCCACC = 1.0 by default

The second of the three dc line data records defines rectifier end data quantities and control parameters:

Field	RAWX Key	Description
IPR	ipr, ipi	Rectifier converter bus number, or extended bus name enclosed in single quotes (refer to Extended Bus Names). No default allowed
NBR	nbr, nbi	Number of bridges in series (rectifier). No default allowed
ANMXR	anmxr, anmxi	Nominal maximum rectifier firing angle; entered in degrees. No default allowed
ANMNR	anmnr, anmni	Minimum steady-state rectifier firing angle; entered in degrees. No default allowed
RCR	rcr, rci	Rectifier commutating transformer resistance per bridge; entered in ohms. No default allowed
XCR	xcr, xci	Rectifier commutating transformer reactance per bridge; entered in ohms. No default allowed
EBASR	ebasr, ebasi	Rectifier primary base ac voltage; entered in kV. No default allowed
TRR	trr, tri	Rectifier transformer ratio. TRR = 1.0 by default
TAPR	tapr, tapi	Rectifier tap setting. TAPR = 1.0 by default.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

Field	RAWX Key	Description
		If no two-winding transformer is specified by IFR, ITR, and IDR, TAPR is adjusted to keep alpha within limits; otherwise, TAPR is held fixed and this transformer's tap ratio is adjusted. The adjustment logic assumes that the rectifier converter bus is on the Winding 2 side of the transformer. The limits TMXR and TMNR specified here are used; except for the transformer control mode flag (COD1 of Transformer Data), the ac tap adjustment data is ignored.
TMXR	tmxr, tmxi	Maximum rectifier tap setting. TMXR = 1.5 by default
TMNR	tmnr, tmni	Minimum rectifier tap setting. TMNR = 0.51 by default
STPR	stpr, stpi	Rectifier tap step; must be positive. STPR = 0.00625 by default
ICR	icr, ici	Bus number of the rectifier commutating bus (rectifier firing angle measuring bus), or extended bus name enclosed in single quotes (refer to Extended Bus Names). The firing angle and angle limits used inside the dc model are adjusted by the difference between the phase angles at this bus and the ac/dc interface (i.e., the converter bus, IPR). ICR = 0 by default
NDR	ndr, ndi	A node number of bus ICR. The bus section of bus ICR to which node NDR is connected is the bus section used as the rectifier commutating bus. If bus ICR is not in a substation, NDR must be specified as 0. NDR = 0 by default
IFR	ifr, ifi	Winding 1 side from bus number, or extended bus name enclosed in single quotes, of a two-winding transformer. IFR = 0 by default
ITR	itr, iti	Winding 2 side to bus number, or extended bus name enclosed in single quotes, of a two-winding transformer. ITR = 0 by default
IDR	idr, idi	Circuit identifier; the branch described by IFR, ITR, and IDR *must* have been entered as a two-winding transformer; an ac transformer may control at most only one dc converter. IDR = '1' by default
XCAPR	xcapr, xcapi	Commutating capacitor reactance magnitude per bridge; entered in ohms. XCAPR = 0.0 by default

Data on the third of the three dc line data records contains the inverter quantities corresponding to the rectifier quantities specified on the second record described above. The significant difference is that the control angle ALFA for the rectifier is replaced by the control angle GAMMA for the inverter.

IPI, NBI, ANMXI, ANMNI, RCI, XCI, EBASI, TRI, TAPI, TMXI, TMNI, STPI, ICI, NDI, IFI, ITI, IDI, XCAPI

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

DC line data input is terminated with a record specifying a blank dc line name or a dc line name of '0'.

1.18.1. Two-Terminal DC Line Data Notes

The steady-state two-terminal dc line model used in power flow analysis establishes the initial steady state for dynamic analysis.

DC line converter buses, IPR and IPI, may be Type 1, 2, or 3 buses. Generators, loads, fixed and switched shunt elements, induction machines other dc line converters, FACTS device sending ends, and GNE devices are permitted at converter buses.

When either XCAPR > 0.0 or XCAPI > 0.0, the two-terminal dc line is treated as capacitor commutated. Capacitor commutated two-terminal dc lines preclude the use of a remote ac transformer as commutation transformer tap and remote commutation angle buses at either converter. Any data provided in these fields are ignored for capacitor commutated two-terminal dc lines.

For additional information on dc line modeling in power flow solutions, refer to Section 6.3.17, DC Lines.

1.19. Voltage Source Converter (VSC) DC Transmission Line Data

The voltage source converter (VSC) two-terminal dc transmission line model is used to simulate either a point-to-point system or a back-to-back system using voltage source converters.

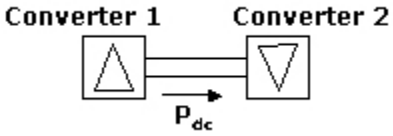


Figure 1.19. VSC DC Configuration

RAW Record Format (three lines)

```
NAME, MDC, RDC, O1, F1, ... O4, F4

IBUS, TYPE, MODE, DCSET, ACSET, ALOSS, BLOSS, MINLOSS, SMAX, IMAX, PWF, MAXQ,
MINQ, VSREG, NREG, RMPCT

IBUS, TYPE, MODE, DCSET, ACSET, ALOSS, BLOSS, MINLOSS, SMAX, IMAX, PWF, MAXQ,
MINQ, VSREG, NREG, RMPCT
```

RAWx Record Format

```
"vscdc":{
  "fields":["name", "mdc", "rdc", "o1", "f1", "o2", "f2", "o3", "f3", "o4",
      "f4", "ibus1", "type1", "mode1", "dcset1", "acset1", "aloss1",
      "bloss1","minloss1", "smax1", "imax1", "pwf1", "maxq1", "minq1",
      "vsreg1", "nreg1", "rmpct1", "ibus2", "type2", "mode2", "dcset2",
      "acset2", "aloss2", "bloss2", "minloss2", "smax2", "imax2", "pwf2",
      "maxq2", "minq2", "vsreg2", "nreg2", "rmpct2"],
```


All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

```
  "data":[
      ["VDCLINE1", 1, 0.710, 1, 0.3204, 2, 0.3883, 3, 0.1942, 4, 0.0971,
        3005, 2, 2, -209.0, 0.950, 100.0, 0.1, 50.0, 400.0, 1200.0, 0.1,
        100.00, -110.00, 3005, 0, 100.0, 3008, 1, 1, 100.0, 0.99, 90.0,
        0.150, 40.0, 350.0, 1200.0, 0.15, 150.0, -140.0, 3008, 0, 100.0],
      ...
      ["VDCLINE2", 1, 0.35, 1, 0.3705, 2, 0.3597, 3, 0.1799, 4, 0.0899,
        203, 2, 1, -100.0, 1.0, 100.0, 0.15, 123.0, 200.0, 1200.0, 1.0,
        200.0, -150.0, 203, 0, 100.0, 205, 1, 1, 100.0, 1.0, 93.0, 0.12,
        98.0, 250.0, 1250.0, 1.0, 225.0, -250.0, 205, 0, 99.0]
  ]
}
```

The first of the three VSC dc line data records defines the following line quantities and control parameters:

Field	RAWX Key	Description
NAME	name	The non-blank alphanumeric identifier assigned to this dc line. Each VSC dc line *must* have a unique NAME. NAME may be up to twelve characters and may contain any combination of blanks, uppercase letters, numbers and special characters. NAME *must* be enclosed in single or double quotes if it contains any blanks or special characters. No default allowed.
MDC	mdc	Control mode: • 0 - for out-of-service • 1 - for in-service MDC = 1 by default.
RDC	rdc	The dc line resistance; entered in ohms. RDC must be positive. No default allowed
Oi	o1, o2, o3, o4	An owner number (1 through 9999). Each VSC dc line may have up to four owners. By default, O1 is 1, and O2, O3 and O4 are zero.
Fi	f1, f2, f3, f4	The fraction of total ownership assigned to owner Oi; each Fi must be positive. The Fi values are normalized such that they sum to 1.0 before they are placed in the working case. Each Fi is 1.0 by default

The remaining two data records define the converter buses (converter 1 and converter 2), along with their data quantities and control parameters:

Field	RAWX Key	Description
IBUS	ibus	Converter bus number, or extended bus name enclosed in single quotes (refer to Extended Bus Names). No default allowed
TYPE	type	Code for the type of converter dc control:

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

Field	RAWX Key	Description
		• 0 - for converter out-of-service • 1 - for dc voltage control • 2 - for MW control • 3 - for converter AC bus angle control When both converters are in-service, exactly one converter of each VSC dc line must be TYPE 1. No default allowed
MODE	mode	Converter ac control mode: • 1 - for ac voltage control • 2 - for fixed ac power factor MODE = 1 by default
DCSET	dcset	Converter dc setpoint. For TYPE = 1, DCSET is the scheduled dc voltage on the dc side of the converter bus; entered in kV. For TYPE = 2, DCSET is the power demand, where a positive value specifies that the converter is feeding active power into the ac network at bus IBUS, and a negative value specifies that the converter is withdrawing active power from the ac network at bus IBUS; entered in MW. For Type = 3, DCSET is the converter AC bus angle; entered in degree. No default allowed
ACSET	acset	Converter ac setpoint. For MODE = 1, ACSET is the regulated ac voltage setpoint; entered in pu. For MODE = 2, ACSET is the power factor setpoint. ACSET = 1.0 by default
ALOSS, BLOSS	aloss, bloss	Coefficients of the linear equation used to calculate converter losses: $KW_{conv\ loss}$ = ALOSS + (I_{dc} * BLOSS) ALOSS is entered in kW. BLOSS is entered in kW/amp. ALOSS = BLOSS = 0.0 by default
MINLOSS	minloss	Minimum converter losses; entered in kW. MINLOSS = 0.0 by default
SMAX	smax	Converter MVA rating; entered in MVA. SMAX = 0.0 to allow unlimited converter MVA loading. SMAX = 0.0 by default
IMAX	imax	Converter ac current rating; entered in amps. IMAX = 0.0 to allow unlimited converter current loading. If a positive IMAX is specified, the base voltage assigned to bus IBUS must be positive. IMAX = 0.0 by default

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

Field	RAWX Key	Description
PWF	pwf	Power weighting factor fraction (0.0 <= PWF <= 1.0) used in reducing the active power order and either the reactive power order (when MODE is 2) or the reactive power limits (when MODE is 1) when the converter MVA or current rating is violated. When PWF is 0.0, only the active power is reduced; when PWF is 1.0, only the reactive power is reduced; otherwise, a weighted reduction of both active and reactive power is applied. PWF = 1.0 by default
MAXQ	maxq	Reactive power upper limit; entered in Mvar. A positive value of reactive power indicates reactive power flowing into the ac network from the converter; a negative value of reactive power indicates reactive power withdrawn from the ac network. Not used if MODE = 2. MAXQ = 9999.0 by default
MINQ	minq	Reactive power lower limit; entered in Mvar. A positive value of reactive power indicates reactive power flowing into the ac network from the converter; a negative value of reactive power indicates reactive power withdrawn from the ac network. Not used if MODE = 2. MINQ = -9999.0 by default
VSREG	vsreq	Bus number, or extended bus name enclosed in single quotes (refer to Extended Bus Names), of the bus for which voltage is to be regulated by this converter to the value specified by ACSET. If VSREG specifies a remote bus (i.e., a bus other than bus IBUS), bus VSREG must be a Type 1 or 2 bus (if it is other than a Type 1 or 2 bus, bus IBUS regulates its own voltage to the value specified by ACSET). VSREG may be entered as zero if the converter is to regulate its own voltage. Not used if MODE = 2. VSREG = 0 by default
NREG	nreg	A node number of bus VSREG. The bus section of bus VSREG to which node NREG is connected is the bus section for which voltage is to be regulated by this converter to the value specified by ACSET. If bus VSREG is not in a substation, NREG must be specified as 0. NREG = 0 by default
RMPCT	rmpct	Percent of the total Mvar required to hold the voltage at the bus controlled by bus IBUS that are to be contributed by this VSC converter; RMPCT must be positive. RMPCT is needed only if there is more than one local or remote setpoint mode voltage controlling device (plant, switched shunt, FACTS device shunt element, or VSC dc line converter) controlling the voltage at bus VSREG. RMPCT = 100.0 by default

VSC dc line data input is terminated with a record specifying a blank dc line name or a dc line name of '0'.

1.19.1. VSC DC Line Data Notes

Each VSC dc line converter bus must have the following characteristics:

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

- When TYPE is 1 or 2, it must be a Type 1 or 2 bus. Generators, loads, fixed and switched shunt elements, induction machines, other dc line converters, FACTS device sending ends, and GNE devices are permitted at converter buses.
- When TYPE is 3, it must be a Type 3 bus.
- It must not have the terminal end of a FACTS device connected to the same bus.
- It must not be connected by a zero impedance line to another bus that violates any of the above restrictions.

In specifying reactive power limits for converters that control ac voltage (i.e., those with unequal reactive power limits where the MODE is 1), the use of very narrow var limit bands is discouraged. The Newton-Raphson based power flow solutions require that the difference between the controlling equipment's high and low reactive power limits be greater than 0.002 pu for all setpoint mode voltage controlling equipment (0.2 Mvar on a 100 MVA system base). It is recommended that voltage controlling VSC converters have Mvar ranges substantially wider than this minimum permissible range.

For interchange and loss assignment purposes, the dc voltage controlling converter is assumed to be the non-metered end of each VSC dc line. As with other network branches, losses are assigned to the subsystem of the non-metered end, and flows at the metered ends are used in interchange calculations.

TYPE 3 converter must have MODE of 1.

For additional information on dc line modeling in power flow solutions, refer to Section 6.3.17 DC Lines.

1.20. Transformer Impedance Correction Tables

Transformer impedance correction tables are used to model a change of transformer impedance as off-nominal turns ratio or phase shift angle is adjusted. Data for each table may be specified either at the time of raw data input, or subsequently via activity CHNG or the impedance table *[Spreadsheet]*.

Each impedance correction table may have up to 99 points. The scaling factors are complex numbers; the imaginary components of these factors may be specified as 0.0. Points are specified six per line in the impedance correction table data block. As many records as are needed (with six points per record) are entered. End of data for a table is specified by specifying an additional point with the three values defining the point all specified as 0.0.

RAW Record Format

```
I, T1, Re(F1), Im(F1), T2, Re(F2), Im(F2), ..., T6, Re(F6), Im(F6)

T7, Re(F7), Im(F7), T8, Re(F8), Im(F8), ..., T12, Re(F12), Im(F12)

...

...

Tn, Re(Fn), Im(Fn), 0.0, 0.0, 0.0
```

RAWX Parameter Set Format (one data row for each point)

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

```
"impcor":{
  "fields":["itable", "tap", "refact", "imfact"]
  "data":[
      [1, -30.0,  1.100,  0.000],
      [1, -24.0,  1.091,  0.000],
      ...
      [1,  30.0,  1.110,  0.000],
      [2,   0.6,  1.060,  0.000],
      ...
      [2,   1.4,  0.950,  0.000]
  ]
}
```

Field	RAWX Key	Description
I	itable	Impedance correction table number (1 through the maximum number of impedance correction tables at the current size level; refer to Table 3-1, Standard Maximum PSS®E Program Capacities). No default allowed
T_i	tap	Either off-nominal turns ratio in pu of the controlling windings bus voltage base or phase shift angle in degrees. T_i = 0.0 by default
F_i	refact, imfact	Complex scaling factor by which transformer nominal impedance is to be multiplied to obtain the actual transformer impedance for the corresponding T_i. F_i = (0.0+j0.0) by default. The impedances used in calculation of F_i should be expressed in percent or pu on winding voltage base at specified tap position Ti and MVA base used in power flow data. This is the same base as per CZ of power flow data but winding voltage at tap Ti.

Transformer impedance correction data input is terminated with a record specifying a table number of zero.

Example: Transformer Test Data, MVA=50, Nominal Tap position=10, winding voltage=132 kV, Impedance=123.1118 ohms/phase

Tap Position	Winding kV	Z12 Data (ohms/phase)	Base Z (ohms)	PU Z
1	112.20	81.7016	251.7768	0.3245
10	132.0	123.1118	346.48	0.3532
19	151.8	178.8155	460.8648	0.3880

Corresponding Impedance Correction Table data would be as below (CZ=2).

Ti	Fi
0.85=112.2/132.0	0.9187=0.3245/0.3532
1.0=132.0/132.0	1.0=0.3532/0.3532
1.15=151.8/132.0	1.098277=0.3880/0.3532

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

1.20.1. Impedance Correction Table Notes

The T_i values on a transformer impedance correction table record block must all be either tap ratios or phase shift angles. They must be entered in strictly ascending order; i.e., for each i, $T_{i+1}>T_i$. Each F_i entered must be non-zero. For each table, at least 2 sets of values must be specified (plus the additional end-of-table point of zeros), and up to 99 may be entered. For a graphical view of a correction table for which the imaginary component of each scaling factor is 0.0, see Figure 1.20 .

The T_i values for tables that are a function of tap ratio (rather than phase shift angle) in pu of the controlling winding bus voltage base.

A transformer impedance is assigned to an impedance correction table either on the third, fourth or fifth record of the transformer data record block of activities READ, TREA, RDCH (refer to Trans), or via activity CHNG or the two-winding and three-winding transformer *[Spreadsheets]*. Each table may be shared among many transformer impedances. If the first T in a table is less than 0.5 or the last T entered is greater than 1.5, T is assumed to be the phase shift angle and each transformer impedance dependent on the table is treated as a function of phase shift angle. Otherwise, the transformer impedances dependent on the table are made sensitive to off-nominal turns ratio.

For three-winding transformers, a data item associated with the transformer (ZCOD) indicates whether impedance adjustment is to be applied to winding impedances or to the bus-to-bus impedances. If applied to winding impedances, the input to the table look-up is the winding tap ratio or phase shift angle, as appropriate, and the scaling factor is applied to the winding's nominal impedance.

When impedance adjustment is applied to the bus-to-bus impedances of a three-winding transformer, the following requirements must be met:

- exactly one winding of the transformer must be automatically adjustable.
- at least one winding must have an impedance correction table assigned to it.
- the impedance correction table(s) must be sensitive to the quantity that is automatically adjustable (tap ratio or phase shift angle, as appropriate).

In this case, the input to each of the tables is the appropriate quantity (tap ratio or phase shift angle) of the adjustable winding. If an impedance correction table is specified for winding 1, impedance adjustment is applied to Z1-2; if an impedance correction table is specified for winding 2, impedance adjustment is applied to Z2-3; and if an impedance correction table is specified for winding 3, impedance adjustment is applied to Z3-1.

The power flow case stores both a nominal and actual impedance for each transformer winding impedance. The value of transformer impedance entered in activities READ, TREA, RDCH, CHNG, or the transformer *[Spreadsheets]* is taken as the nominal value of impedance. Each time the complex tap setting of a transformer is changed, either automatically by the power flow solution activities or manually by the user, and the modified quantity is an input to the table look-up function of any impedance correction table associated with the transformer, actual transformer impedances are redetermined if appropriate. First, the scaling factor is established from the appropriate table by linear interpolation; then nominal impedance is multiplied by the scaling factor to determine actual impedance. An appropriate message is printed any time the actual impedance is modified.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

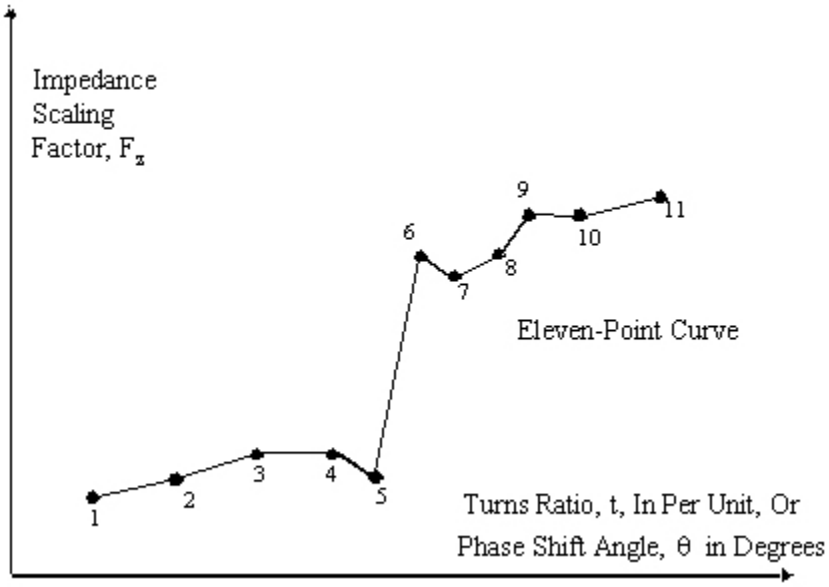


Figure 1.20. Typical Impedance Correction Factor Curve

1.21. Multi-Terminal DC Transmission Line Data

PSSE allows the representation of up to 12 converter stations on one multi-terminal dc line. The dc network of each multi-terminal dc line may consist of up to 20 dc network buses connected together by up to 20 dc links.

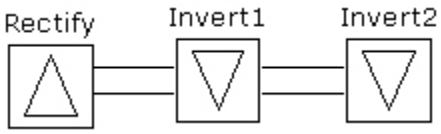


Figure 1.21. Multi-Terminal DC Configuration

Each multi-terminal dc transmission line to be represented in PSSE is introduced by reading a series of data records.

Each set of multi-terminal dc line data records begins with a record that defines the number of converters, number of dc buses and number of dc links as well as related bus numbers and the control mode. Following this first record there are subsequent records for each converter, each dc bus, and each dc link.

Each set of multi-terminal dc line data records begins with a record of system definition data in the following format:

RAW Format

NAME, NCONV, NDCBS, NDCLN, MDC, VCONV, VCMOD, VCONVN

RAWx Record Format

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

```
"ntermdc":{
  "fields":["name","nconv","ndcbs","ndcln","mdc","vconv","vcmod","vconvn"],
  "data":[
      ["MULTERM_DC_1", 4, 5, 4, 1, 212, 400.0, 0]
  ]
}
```

Field	RAWX Key	Description
NAME	name	The non-blank alphanumeric identifier assigned to this dc line. Each multi-terminal dc line *must* have a unique NAME. NAME may be up to twelve characters and may contain any combination of blanks, uppercase letters, numbers and special characters. NAME *must* be enclosed in single or double quotes if it contains any blanks or special characters. No default allowed
NCONV	nconv	Number of ac converter station buses in multi-terminal dc line I. No default allowed
NDCBS	ndcbs	Number of dc buses in multi-terminal dc line I (NCONV NDCBS). No default allowed
NDCLN	ndcln	Number of dc links in multi-terminal dc line I. No default allowed
MDC	mdc	Control mode: • 0 - for blocked • 1 - for power control • 2 - for current control MDC = 0 by default
VCONV	vconv	Bus number, or extended bus name enclosed in single quotes (refer to Extended Bus Names), of the ac converter station bus that controls dc voltage on the positive pole of multi-terminal dc line I. Bus VCONV *must* be a positive pole inverter. No default allowed
VCMOD	vcmod	Mode switch dc voltage; entered in kV. When any inverter dc voltage magnitude falls below this value and the line is in power control mode (i.e., MDC = 1), the line switches to current control mode with converter current setpoints corresponding to their desired powers at scheduled dc voltage. VCMOD = 0.0 by default
VCONVN	vconvn	Bus number, or extended bus name enclosed in single quotes, of the ac converter station bus that controls dc voltage on the negative pole of multi-terminal dc line I. If any negative pole converters are specified (see below), bus VCONVN must be a negative pole inverter. If the negative pole is not being modeled, VCONVN *must* be specified as zero.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

Field	RAWX Key	Description
		VCONVN = 0 by default

This data record is followed by NCONV converter records.

RAW Record Format

```
IB, N, ANGMX, ANGMN, RC, XC, EBAS, TR, TAP, TPMX, TPMN, TSTP, SETVL, DCPF,
MARG, CNVCOD
```

RAWx Record Format

```
"ntermdcconv":{
  "fields":["name", "ib", "n", "angmx", "angmn", "rc", "xc", "ebas", "tr",
          "tap", "tpmx", "tpmn", "tstp", "setvl", "dcpf", "marg", "cnvcod"],
  "data":[
      ["MULTERM_DC_1", 402, 4, 10.0, 8.0, 0.0, 19.0, 500.0, 0.22, 1.01,
        1.1, 0.97, 0.01, 321.0, 1.0, 0.15, 3],
      ...

      ["MULTERM_DC_1", 213, 4, 20.0, 18.0, 0.0, 10.0, 230.0, 0.452, 1.1,
        1.1, 0.9, 0.01, -303.8, 1.0, 0.0, 4]
  ]
}
```

Field	RAWX Key	Description
IB	ib	ac converter bus number, or extended bus name enclosed in single quotes (refer to Extended Bus Names). No default allowed
N	n	Number of bridges in series. No default allowed.
ANGMX	angmx	Nominal maximum ALPHA or GAMMA angle; entered in degrees. No default allowed
ANGMN	angmn	Minimum steady-state ALPHA or GAMMA angle; entered in degrees. No default allowed
RC	rc	Commutating resistance per bridge; entered in ohms. No default allowed
XC	xc	Commutating reactance per bridge; entered in ohms. No default allowed
EBAS	ebs	Primary base ac voltage; entered in kV. No default allowed

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

Field	RAWX Key	Description
TR	tr	Actual transformer ratio. TR = 1.0 by default
TAP	tap	Tap setting. TAP = 1.0 by default
TPMX	tpmx	Maximum tap setting. TPMX = 1.5 by default
TPMN	tpmn	Minimum tap setting. TPMN = 0.51 by default
TSTP	tstp	Tap step; must be a positive number. TSTP = 0.00625 by default
SETVL	setvl	Converter setpoint. When IB is equal to VCONV or VCONVN, SETVL specifies the scheduled dc voltage magnitude, entered in kV, across the converter. SETVL is positive for positive pole inverter and negative for negative pole inverter. For other converter buses, SETVL contains the converter current (amps) or power (MW) demand; a positive value of SETVL indicates that bus IB is a rectifier, and a negative value indicates an inverter. No default allowed
DCPF	dcpf	Converter participation factor. When the order at any rectifier in the multi-terminal dc line is reduced, either to maximum current or margin, the orders at the remaining converters on the same pole are modified according to their DCPFs to: SETVL + (DCPF/SUM)*R where SUM is the sum of the DCPFs at the unconstrained converters on the same pole as the constrained rectifier, and R is the order reduction at the constrained rectifier. DCPF = 1. by default
MARG	marg	Rectifier margin entered in per unit of desired dc power or current. The converter order reduced by this fraction, (1.-MARG)*SETVL, defines the minimum order for this rectifier. MARG is used only at rectifiers. MARG = 0.0 by default
CNVCOD	cnvcod	Converter code. A positive value or zero must be entered if the converter is on the positive pole of multi-terminal dc line I. A negative value must be entered for negative pole converters. CNVCOD = 1 by default

RAW Record Format

These data records are followed by NDCBS dc bus records of the following format:

```
IDC, IB, AREA, ZONE, DCNAME, IDC2, RGRND, OWNER
```


All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

RAWx Record Format

```
"ntermdcbus":{
  "fields":["name","idc","ib","area","zone","dcname","idc2","rgrnd","owner"],
  "data":[
      ["MULTERM_DC_1", 1, 401, 4, 4, "DC1", 0, 0.0, 4],
      ...

      ["MULTERM_DC_1", 5,   0, 4, 4, "DC5", 0, 0.0, 4]
  ]
}
```

Field	RAWX Key	Description
IDC	idc	dc bus number (1 to NDCBS). The dc buses are used internally within each multi-terminal dc line and *must* be numbered 1 through NDCBS. No default allowed
IB	ib	ac converter bus number, or extended bus name enclosed in single quotes (refer to Extended Bus Names), or zero. Each converter station bus specified in a converter record must be specified as IB in exactly one dc bus record. DC buses that are connected only to other dc buses by dc links and not to any ac converter buses must have a zero specified for IB. A dc bus specified as IDC2 on one or more other dc bus records must have a zero specified for IB on its own dc bus record. IB = 0 by default
AREA	area	Area number (1 through 9999). AREA = 1 by default
ZONE	zone	Zone number (1 through 9999). ZONE = 1 by default
DCNAME	dcname	Alphanumeric identifier assigned to dc bus IDC. DCNAME may be up to twelve characters and may contain any combination of blanks, uppercase letters, numbers and special characters. DCNAME *must* be enclosed in single or double quotes if it contains any blanks or special characters. DCNAME is twelve blanks by default
IDC2	idc2	Second dc bus to which converter IB is connected, or zero if the converter is connected directly to ground. For voltage controlling converters, this is the dc bus with the lower dc voltage magnitude and SETVL specifies the voltage difference between buses IDC and IDC2. For rectifiers, dc buses should be specified such that power flows from bus IDC2 to bus IDC. For inverters, dc buses should be specified such that power flows from bus IDC to bus IDC2. IDC2 is ignored on those dc bus records that have IB specified as zero. IDC2 = 0 by default
RGRND	rgrnd	Resistance to ground at dc bus IDC; entered in ohms. During solutions RGRND is used only for those dc buses specified as IDC2 on other dc bus records.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

Field	RAWX Key	Description
		RGRND = 0.0 by default
OWNER	owner	Owner number (1 through 9999). OWNER = 1 by default

RAW Record Format

These data records are followed by NDCLN dc link records of the following format:

```
IDC, JDC, CKT, MET, RDC, LDC
```

RAWx Record Format

```
"ntermdclink":{
  "fields":["name", "idc", "jdc", "dcckt", "met", "rdc", "ldc"],
  "data":[
      ["MULTERM_DC_1", 1, 5, "1", 1, 29.0000, 0.00],
      ...

      ["MULTERM_DC_1", 4, 5, "1", 1, 29.0000, 0.00]
  ]
}
```

Field	RAWX Key	Description
IDC	idc	Branch from bus dc bus number. No default allowed
JDC	jdc	Branch to bus dc bus number. No default allowed
CKT	ckt	One-character uppercase alphanumeric branch circuit identifier. It is recommended that single circuit branches be designated as having the circuit identifier '1'. CKT = '1' by default
MET	met	Metered end flag: • <= 1 - to designate bus IDC as the metered end • >= 2 - to designate bus JDC as the metered end MET = 1 by default
RDC	rdc	dc link resistance, entered in ohms. No default allowed
LDC	ldc	dc link inductance, entered in mH. LDC is not used by the power flow solution activities but is available to multi-terminal dc line dynamics models. LDC = 0.0 by default

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

Multi-terminal dc line data input is terminated with a record specifying a dc line number of zero.

1.21.1. Multi-Terminal DC Line Notes

The following points should be noted in specifying multi-terminal dc line data:

- Conventional two-terminal (refer to Two-Terminal DC Transmission Line Data) and multi-terminal dc lines are stored separately in PSSE working memory. Therefore, there may simultaneously exist, for example, a two-terminal dc line identified as dc line ABC along with a multi-terminal line for which the name is ABC.
- Multi-terminal lines should have at least three converter terminals; conventional dc lines consisting of two terminals should be modeled as two-terminal lines (refer to Two-Terminal DC Transmission Line Data).
- AC converter buses may be Type 1, 2, or 3 buses. Generators, loads, fixed and switched shunt elements, induction machines, other dc line converters, FACTS device sending ends, and GNE devices are permitted at converter buses.
- Each multi-terminal dc line is treated as a subnetwork of dc buses and dc links connecting its ac converter buses. For each multi-terminal dc line, the dc buses must be numbered 1 through NDCBS.
- Each ac converter bus must be specified as IB on exactly one dc bus record; there may be dc buses connected only to other dc buses by dc links but not to any ac converter bus.
- AC converter bus IB may be connected to a dc bus IDC, which is connected directly to ground. IB is specified on the dc bus record for dc bus IDC; the IDC2 field is specified as zero.
- Alternatively, ac converter bus IB may be connected to two dc buses IDC and IDC2, the second of which is connected to ground through a specified resistance. IB and IDC2 are specified on the dc bus record for dc bus IDC; on the dc bus record for bus IDC2, the ac converter bus and second dc bus fields (IB and IDC2, respectively) must be specified as zero and the grounding resistance is specified as RGRND.
- The same dc bus may be specified as the second dc bus for more than one ac converter bus.
- All dc buses within a multi-terminal dc line must be reachable from any other point within the dc subnetwork.
- The area numbers assigned to dc buses and the metered end designations of dc links are used in calculating area interchange and assigning losses in activities AREA, INTA, TIES, and SUBS as well as in the interchange control option of the power flow solution activities. Similarly, the zone assignments and metered end specifications are used in activities ZONE, INTZ, TIEZ, and SUBS.
- Section 5.7.2 Reading RDCH Data Files Created by Previous Releases of PSS®E describes the specification of NCONV, NDCBS and NDCLN when specifying changes to an existing multi-terminal dc line in activity RDCH.

For additional information on dc line modeling in power flow solutions, refer to Section 6.3.17, DC Lines.

A multi-terminal layout is shown in Figure 1.22 . There are 4 convertors, 5 dc buses and 4 dc links.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

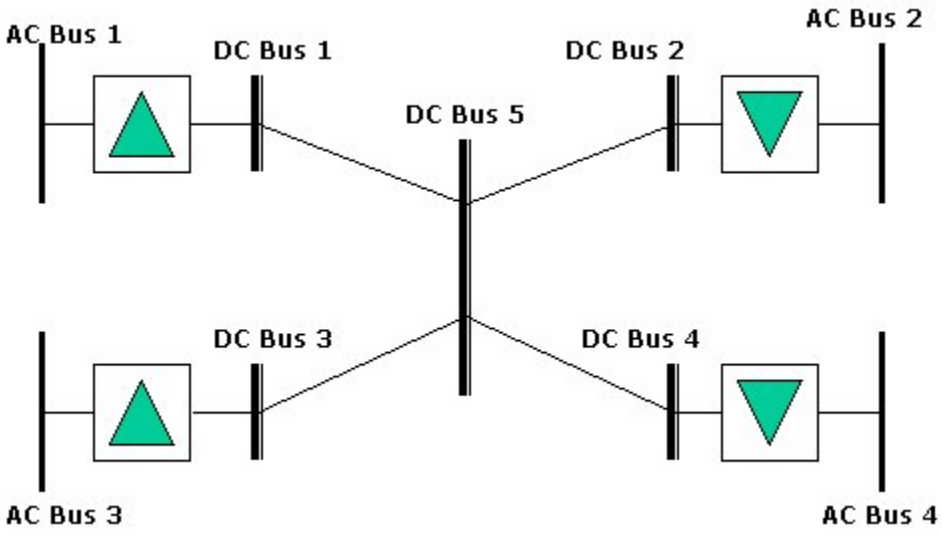


Figure 1.22. Multi-Terminal DC Network

1.22. Multi-Section Line Grouping Data

Transmission lines commonly have a series of sections with varying physical structures. The section might have different tower configurations, conductor types and bundles, or various combinations of these. The physical differences can result in the sections having different resistance, reactance and charging.

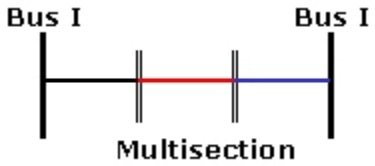


Figure 1.23. Multi-Section Line Grouping

A transmission line with several distinct sections can be represented as one multisection line group.

RAW Record Format

```
I, J, ID, MET, DUM1, DUM2, ..., DUM9
```

RAWx Record Format

```
"msline":{
  "fields":["ibus", "jbus", "mslid", "met", "dum1", "dum2", "dum3", "dum4",
            "dum5", "dum6", "dum7", "dum8", "dum9"],
  "data":[
      [101, 201, "&1", 2, 102, 103, 104, null, null, null, null, null, null]
      ...
```


All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

```
  ]
}
```

Field	RAWX Key	Description
I	ibus	From bus number, or extended bus name enclosed in single quotes (refer to Extended Bus Names). No default allowed
J	jbus	To bus number, or extended bus name enclosed in single quotes. No default allowed
ID	mslid	Two-character upper case alphanumeric multi-section line grouping identifier. The first character *must* be an ampersand (' '). ID = '1' by default
MET	met	Metered end flag: • <= 1 - to designate bus I as the metered end • >= 2 - to designate bus J as the metered end MET = 1 by default
DUM_i	dum1, dum2, dum3, dum4, dum5, dum6, dum7, dum8, dum9	Bus numbers, or extended bus names enclosed in single quotes (refer to Extended Bus Names), of the dummy buses connected by the branches that comprise this multi-section line grouping. No defaults allowed

Multi-section line grouping data input is terminated with a record specifying a from bus number of zero.

1.22.1. Multi-Section Line Example

The DUM_i values on each record define the branches connecting bus I to bus J, and are entered so as to trace the path from bus I to bus J. Specifically, for a multi-section line grouping consisting of three line sections (and hence two dummy buses):

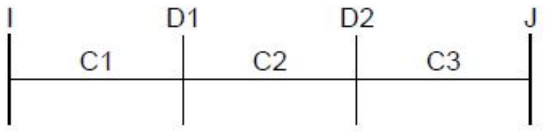


Figure 1.24. Multi-Section Line Example

The path from I to J is defined by the following branches:

I	D1	C1

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

D1	D2	C2
D2	J	C3

If this multi-section line grouping is to be assigned the line identifier 1, the corresponding multi-section line grouping data record is given by:

```
I J 1 1 D1 D2
```

1.22.2. Multi-Section Line Notes

Up to 10 line sections (and hence 9 dummy buses) may be defined in each multi-section line grouping. A branch may be a line section of at most one multi-section line grouping.

Each dummy bus must have exactly two branches connected to it, both of which must be members of the same multi-section line grouping. A multi-section line dummy bus may not be a converter bus of a dc transmission line. A FACTS control device may not be connected to a multi-section line dummy bus.

The status of line sections and type codes of dummy buses are set such that the multi-section line is treated as a single entity with regards to its service status.

When the multi-section line reporting option is enabled (refer to Section 3.3.3, Program Run-Time Option Settings and activity OPTN), several power flow reporting activities such as POUT and LOUT do not tabulate conditions at multi-section line dummy buses. Accordingly, care must be taken in interpreting power flow output reports when dummy buses are other than passive nodes (e.g., if load or generation is present at a dummy bus).

1.23. Zone Data

Zone identifiers are specified in zone data records. Zone names may be specified either at the time of raw/rawx data input or subsequently via activity CHNG or the zone *[Spreadsheet]*.

RAW Record Format

```
I, ZONAME
```

RAWx Record Format

```
"zone":{
  "fields":["izone", "zoname"],
  "data":[
      [1, "NORTH_A1"],
      ...

      [9, "ALL_A4_A6"]
  ]
}
```

Field	RAWX Key	Description
I	izone	Zone number (1 through 9999). No default allowed

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

Field	RAWX Key	Description
ZONAME	zoname	Alphanumeric identifier assigned to zone I. ZONAME may be up to twelve characters and may contain any combination of blanks, uppercase letters, numbers and special characters. ZONAME *must* be enclosed in single or double quotes if it contains any blanks or special characters. ZONAME is twelve blanks by default

Zone data input is terminated with a record specifying a zone number of zero.

1.23.1. Zone Data Notes

All buses (ac and dc), loads, and induction machines can be assigned to a zone. The zone number is entered as part of the data records for the buses, loads, and induction machines (see Areas, Zones and Owners, Bus Data, Load Data and Multi-Terminal DC Transmission Line Data).

The use of zones enables the user to develop reports and to check results on the basis of zones and, consequently, be highly specific when reporting and interpreting analytical results.

1.24. Interarea Transfer Data

The PSSE user has the ability to assign each bus, load, and induction machine to an area (see Bus Data, Load Data, Multi-Terminal DC Transmission Line Data, Area Interchange Data and Areas, Zones and Owners). Furthermore, the user can schedule active power transfers between pairs of areas.

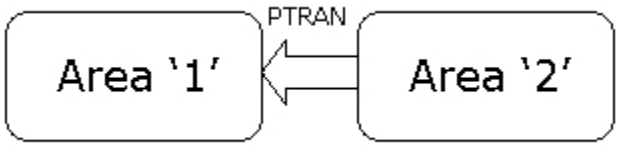


Figure 1.25. Interarea Transfer

These active power transfers are specified in interarea transfer data records.

RAW Record Format

```
ARFROM, ARTO, TRID, PTRAN
```

RAWx Record Format

```
"iatrans":{
  "fields":["arfrom", "arto", "trid", "ptran"],
  "data":[
      [1, 2, "A", 1000.0],
      ...

      [3, 5, "D", 2900.0]
  ]
}
```


All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

Field	RAWX Key	Description
ARFROM	arfrom	From area number (1 through 9999). No default allowed
ARTO	arto	To area number (1 through 9999). No default allowed
TRID	trid	Single-character (0 through 9 or A through Z) upper case interarea transfer identifier used to distinguish among multiple transfers between areas ARFROM and ARTO. TRID = '1' by default
PTRAN	ptran	MW comprising this transfer. A positive PTRAN indicates that area ARFROM is selling to area ARTO. PTRAN = 0.0 by default

Interarea transfer data input is terminated with a record specifying a from area number of zero.

1.24.1. Interarea Transfer Data Notes

Following the completion of interarea transfer data input, activity READ generates an alarm for any area for which at least one interarea transfer is present and where the sum of transfers differs from its desired net interchange, PDES (refer to Area Interchange Data).

1.25. Owner Data

PSSE allows the user to identify which organization or utility actually owns a facility, a piece of equipment or a load. Buses (ac and dc), loads, induction machines, FACTS devices, and GNE devices have provision for an owner, while machines, ac branches, and VSC dc lines can have up to four different owners. Ownership is specified as part of the data records for these network elements (see Bus Data, Load Data, FACTS Device Data, Generator Data, Non-Transformer Branch Data, Transformer Data, Voltage Source Converter (VSC) DC Transmission Line Data, Multi-Ter, and GNE Device Data).

The use of the ownership attribute enables the user to develop reports and to check results on the basis of ownership and, consequently, be highly specific when reporting and interpreting analytical results.

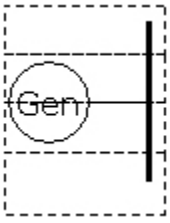


Figure 1.26. Owner Data

Owner identifiers are specified in owner data records. Owner names may be specified either at the time of raw/rawx data input or subsequently via activity CHNG or the owner *[Spreadsheet]*.

RAW Record Format

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

```
I, OWNAME
```

RAWx Record Format

```
"owner":{
  "fields":["iowner", "owname"],
  "data":[
      [1, "OWNER 1"],
      ...

      [5, "OWNER 5"]
  ]
}
```

Field	RAWX Key	Description
I	iowner	Owner number (1 through 9999). No default allowed
OWNAME	owner	Alphanumeric identifier assigned to owner I. OWNAME may be up to twelve characters and may contain any combination of blanks, uppercase letters, numbers and special characters. OWNAME *must* be enclosed in single or double quotes if it contains any blanks or special characters. OWNAME is twelve blanks by default

Owner data input is terminated with a record specifying an owner number of zero.

1.26. FACTS Device Data

There are a variety of Flexible AC Transmission System (FACTS) devices currently available. These include shunt devices, such as the Static Compensator (STATCOM), series devices such as the Static Synchronous Series Compensator (SSSC), combined devices such as the Unified Power Flow Controller (UPFC), and parallel series devices such as the Interline Power Flow Controller (IPFC).

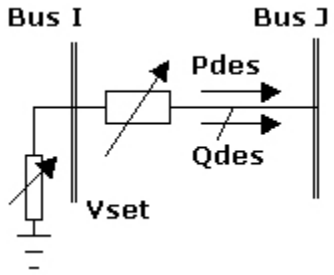


Figure 1.27. FACTS Device Configuration

PSSE accepts data for all of these devices through one generic set of data records. Each FACTS device to be represented in PSSE is specified in FACTS device data records.

RAW Record Format (on a single line)

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

```
NAME, I, J, MODE, PDES, QDES, VSET, SHMX, TRMX, VTMN, VTMX, VSMX, IMX, LINX,
RMPCT, OWNER, SET1, SET2, VSREF, FCREG, NREG, MNAME
```

RAWx Record Format

```
"facts":{
  "fields":["name", "ibus", "jbus", "mode", "pdes", "qdes", "vset", "shmx",
            "trmx", "vtmn", "vtmx", "vsmx", "imx", "linx", "rmpct", "owner",
            "set1", "set2", "vsref", "fcreg", "nreg", "mname"],
  "data":[
      ["FACTS_DVCE_1", 153, 0, 1, 0.0, 0.0, 1.015, 50.0,100.0, 0.9263, 1.134,
        1.0, 0.0, 0.05652, 100.0, 1, 0.0, 0.0, 0, 153, 0, ""],
      ...

      ["FACTS_DVCE_2", 153, 155, 1, 350.0, 40.0, 1.015, 25.0, 9999.0, 0.9,
        1.1, 1.0, 0.0, 0.05, 100.0, 1, 0.0, 0.0, 0, 153, 0, ""]
  ]
}
```

Field	RAWX Key	Description
NAME	name	The non-blank alphanumeric identifier assigned to this FACTS device. Each FACTS device *must* have a unique NAME. NAME may be up to twelve characters and may contain any combination of blanks, uppercase letters, numbers and special characters. NAME *must* be enclosed in single or double quotes if it contains any blanks or special characters. No default allowed
I	ibus	Sending end bus number, or extended bus name enclosed in single quotes (refer to Extended Bus Names). No default allowed
J	jbus	Terminal end bus number, or extended bus name enclosed in single quotes; 0 for a STATCON. J = 0 by default
MODE	mode	Controlmode: For a STATCON (i.e., a FACTS devices with a shunt element but no series element), J must be 0 and MODE must be either 0 or 1): • 0 - out-of-service (i.e., shunt link open) • 1 - shunt link operating For a FACTS device with a series element (i.e., J is not 0), MODE may be: • 0 - out-of-service (i.e., series and shunt links open) • 1 - series and shunt links operating

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

Field	RAWX Key	Description
		• 2 - series link bypassed (i.e., like a zero impedance line) and shunt link operating as a STATCON • 3 - series and shunt links operating with series link at constant series impedance • 4 - series and shunt links operating with series link at constant series voltage • 5 - master device of an IPFC with P and Q setpoints specified; another FACTS device must be designated as the slave device (i.e., its MODE is 6 or 8) of this IPFC • 6 - slave device of an IPFC with P and Q setpoints specified; the FACTS device specified in MNAME must be the master device (i.e., its MODE is 5 or 7) of this IPFC. The Q setpoint is ignored as the master device dictates the active power exchanged between the two devices. • 7 - master device of an IPFC with constant series voltage setpoints specified; another FACTS device must be designated as the slave device (i.e., its MODE is 6 or 8) of this IPFC • 8 - slave device of an IPFC with constant series voltage setpoints specified; the FACTS device specified in MNAME must be the master device (i.e., its MODE is 5 or 7) of this IPFC. The complex $V_d + jV_q$ setpoint is modified during power flow solutions to reflect the active power exchange determined by the master device MODE = 1 by default
PDES	pdes	Desired active power flow arriving at the terminal end bus; entered in MW. PDES = 0.0 by default
QDES	qdes	Desired reactive power flow arriving at the terminal end bus; entered in MVAR. QDES = 0.0 by default
VSET	vset	Voltage setpoint at the sending end bus; entered in pu. VSET = 1.0 by default
SHMX	shmx	Maximum shunt current at the sending end bus; entered in MVA at unity voltage. SHMX = 9999.0 by default
TRMX	trmx	Maximum bridge active power transfer; entered in MW. TRMX = 9999.0 by default
VTMN	vtmn	Minimum voltage at the terminal end bus; entered in pu. VTMN = 0.9 by default
VTMX	vtmx	Maximum voltage at the terminal end bus; entered in pu. VTMX = 1.1 by default
VSMX	vsmx	Maximum series voltage; entered in pu. VSMX = 1.0 by default

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

Field	RAWX Key	Description
IMX	imx	Maximum series current, or zero for no series current limit; entered in MVA at unity voltage. IMX = 0.0 by default
LINX	linx	Reactance of the dummy series element used during power flow solutions; entered in pu. LINX = 0.05 by default
RMPCT	pmpct	Percent of the total Mvar required to hold the voltage at the bus controlled by the shunt element of this FACTS device that are to be contributed by the shunt element; RMPCT must be positive. RMPCT is needed only if there is more than one local or remote setpoint mode voltage controlling device (plant, switched shunt, FACTS device shunt element, or VSC dc line converter) controlling the voltage at bus FCREG. RMPCT = 100.0 by default
OWNER	owner	Owner number (1 through 9999). OWNER = 1 by default
SET1, SET2	set1, set2	If MODE is 3, resistance and reactance respectively of the constant impedance, entered in pu; if MODE is 4, the magnitude (in pu) and angle (in degrees) of the constant series voltage with respect to the quantity indicated by VSREF; if MODE is 7 or 8, the real (V_d) and imaginary (V_q) components (in pu) of the constant series voltage with respect to the quantity indicated by VSREF; for other values of MODE, SET1 and SET2 are read, but not saved or used during power flow solutions. SET1 = 0.0 and SET2 = 0.0 by default
VSREF	vsref	Series voltage reference code to indicate the series voltage reference of SET1 and SET2 when MODE is 4, 7 or 8: • 0 - for sending end voltage • 1 - for series current VSREF = 0 by default
FCREG	fcreg	Bus number, or extended bus name enclosed in single quotes (refer to Extended Bus Names), of the bus for which voltage is to be regulated by the shunt element of this FACTS device to the value specified by VSET. If FCREG specifies a remote bus (i.e., a bus other than bus I), bus FCREG must be a Type 1 or 2 bus (if it is other than a Type 1 or 2 bus, the shunt element regulates voltage at the sending end bus to the value specified by VSET). FCREG may be entered as zero if the shunt element is to regulate voltage at the sending end bus and *must* be zero if the sending end bus is a Type 3 (swing) bus. FCREG = 0 by default
NREG	nreg	A node number of bus FCREG. The bus section of bus FCREG to which node NREG is connected is the bus section for which voltage is to be regulated by the shunt element to the value specified by VSET. If bus FCREG is not in a substation, NREG must be specified as 0.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

Field	RAWX Key	Description
		NREG = 0 by default
MNAME	mname	The name of the FACTS device that is the IPFC master device when this FACTS device is the slave device of an IPFC (i.e., its MODE is specified as 6 or 8). MNAME *must* be enclosed in single or double quotes if it contains any blanks or special characters. MNAME is blank by default

FACTS device data input is terminated with a record specifying a FACTS device number of zero.

1.26.1. FACTS Device Notes

PSSE's FACTS device model contains a shunt element that is connected between the sending end bus and ground, and a series element connected between the sending and terminal end buses.

A static synchronous condenser (STATCON) or static compensator (STATCOM) is modeled by a FACTS device for which the terminal end bus is specified as zero (i.e., the series element is disabled).

A unified power flow controller (UPFC) has both the series and shunt elements active, and allows for the exchange of active power between the two elements (i.e., TRMX is positive). A static synchronous series compensator (SSSC) is modeled by setting both the maximum shunt current limit (SHMX) and the maximum bridge active power transfer limit (TRMX) to zero (i.e., the shunt element is disabled).

An Interline Power Flow Controller (IPFC) is modeled by using two series FACTS devices. One device of this pair must be assigned as the IPFC master device by setting its control mode to 5 or 7; the other must be assigned as its companion IPFC slave device by setting its control mode to 6 or 8 *and* specifying the name of the master device in its MNAME. In an IPFC, both devices have a series element but no shunt element. Therefore, both devices typically have SHMX set to zero, and VSET of both devices is ignored. Conditions at the master device define the active power exchange between the two devices. TRMX of the master device is set to the maximum active power transfer between the two devices, and TRMX of the slave device is set to zero.

Figure 1.28 shows the PSSE FACTS control device model with its various setpoints and limits.

Each FACTS sending end bus must be a Type 1 or 2 bus, and each terminal end bus must be a Type 1 bus. Refer to FACTS Devices, and AC Voltage Control for other topological restrictions and for details on the handling of FACTS devices during the power flow solution activities.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

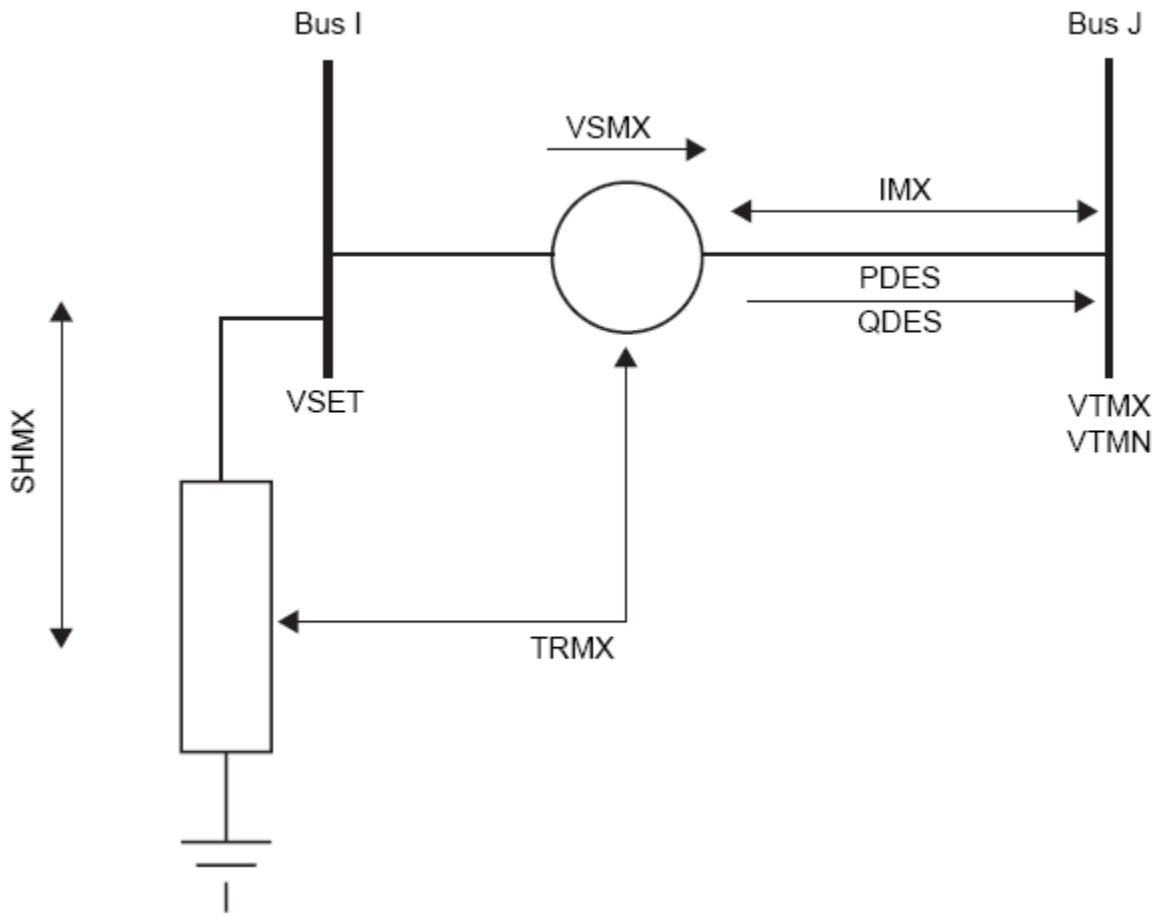


Figure 1.28. FACTS Control Device Setpoints and Limits

1.27. Switched Shunt Data

Automatically switched shunt devices may be represented on a network bus.

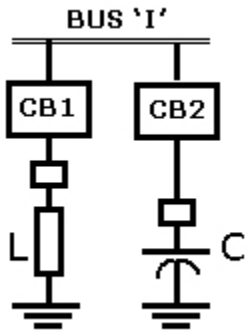


Figure 1.29. Switched Shunt Configuration

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

The switched shunt elements at a bus may consist entirely of blocks of shunt reactors (each B_i is a negative quantity), entirely of blocks of capacitor banks (each B_i is a positive quantity), or of both reactors and capacitors.

Each network bus to be represented in PSSE with switched shunt admittance devices must have a switched shunt data record specified for it. The switched shunts are represented with up to eight blocks of admittance, each one of which consists of up to nine steps of the specified block admittance.

RAW Record Format (on a single line)

```
I, ID, MODSW, ADJM, STAT, VSWHI, VSWLO, SWREG, NREG, RMPCT, RMIDNT, BINIT, NAME,
S1, N1, B1, S2, N2, B2, ..., S8, N8, B8
```

RAWx Record Format

```
"swshunt":{
  "fields":["ibus", "shntid", "modsw", "adjm", "stat", "vswhi", "vswlo",
      "swreg", "nreg", "rmpct", "rmidnt", "binit", "name", "s1", "n1", "b1",
      "s2", "n2", "b2", "s3", "n3", "b3", "s4", "n4", "b4", "s5", "n5",
      "b5", "s6", "n6", "b6", "s7", "n7", "b7", "s8", "n8", "b8"],
  "data":[
      [152, "1 ", 1, 0, 1, 1.045, 0.955, 152, 0, 100.0, "", -233.00, "SVD1"
        1, 1, -15.0, 1, 2, -5.0, 1, 3, -10.0, 1, 4, -8.0, 1, 5, -7.0, 1, 6,
        -5.0, 1, 7, -7.0, 1, 8, -4.0],
      ...

      [93002, "1 ", 1, 0, 1, 0.99628, 0.99628, 93002, 0, 100.0, "", 1.44,"SVD2"
        1, 1, 1.44, null, null, null, null, null, null, null, null, null,
        null, null, null, null, null, null, null, null, null, null, null,
        null]
  ]
}
```

Field	RAWX Key	Description
I	ibus	Bus number, or extended bus name enclosed in single quotes (refer to Extended Bus Names). No default allowed
ID	shntid	One- or two-character uppercase non-blank alphanumeric switched shunt identifier used to distinguish among multiple switched shunts at bus I. It is recommended that, at buses for which a single switched shunt is present, the switched shunt be designated as having the switched shunt identifier '1'. ID = '1' by default
MODSW	modsw	Control mode: • 0 - locked • 1 - discrete adjustment, controlling voltage locally or at bus SWREG

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

Field	RAWX Key	Description
		• 2 - continuous adjustment, controlling voltage locally or at bus SWREG • 3 - discrete adjustment, controlling the reactive power output of the plant at bus SWREG • 4 - discrete adjustment, controlling the reactive power output of the VSC dc line converter at bus SWREG of the VSC dc line for which the name is specified as RMIDNT • 5 - discrete adjustment, controlling the admittance setting of the switched shunt at bus SWREG • 6 - discrete adjustment, controlling the reactive power output of the shunt element of the FACTS device for which the name is specified as RMIDNT MODSW = 1 by default
ADJM	adjm	Adjustment method: • 0 - steps and blocks are switched on in input order, and off in reverse input order; this adjustment method was the only method available prior to PSSE-32.0. • 1 - steps and blocks are switched on and off such that the next highest (or lowest, as appropriate) total admittance is achieved. ADJM = 0 by default
STAT	stat	Initial status for entire switched shunt. Status of one for in-service and zero for out-of-service. STAT = 1 by default
VSWHI	vswhi	When MODSW is 1 or 2, the controlled voltage upper limit; entered in pu. When MODSW is 3, 4, 5 or 6, the controlled reactive power range upper limit; entered in pu of the total reactive power range of the controlled voltage controlling device. VSWHI is not used when MODSW is 0. VSWHI = 1.0 by default
VSWLO	vswlo	When MODSW is 1 or 2, the controlled voltage lower limit; entered in pu. When MODSW is 3, 4, 5 or 6, the controlled reactive power range lower limit; entered in pu of the total reactive power range of the controlled voltage controlling device. VSWLO is not used when MODSW is 0. VSWLO = 1.0 by default
SWREG	swreg	Bus number, or extended bus name enclosed in single quotes (refer to Extended Bus Names), of the bus for which voltage or connected equipment reactive power output is controlled by this switched shunt.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

Field	RAWX Key	Description
		When MODSW is 1 or 2, SWREG specifies the bus for which voltage is regulated. If SWREG specifies a remote bus (i.e., a bus other than bus I), bus SWREG must be a Type 1 or 2 bus (if it is other than a Type 1 or 2 bus, the switched shunt controls its own voltage). SWREG may be entered as 0 if the switched shunt is to regulate its own voltage. When MODSW is 3, SWREG specifies the Type 2 or 3 bus where plant reactive power output is to be regulated by this switched shunt. Set SWREG to I if the switched shunt and the plant that it controls are connected to the same bus. When MODSW is 4, SWREG specifies the converter bus of a VSC dc line where converter reactive power output is to be regulated by this switched shunt. Set SWREG to I if the switched shunt and the VSC dc line converter that it controls are connected to the same bus. When MODSW is 5, SWREG specifies the remote bus to which the switched shunt for which the admittance setting is to be regulated by this switched shunt is connected. SWREG is not used when MODSW is 0 or 6. SWREG = 0 by default
NREG	nreg	A node number of bus SWREG. The bus section of bus SWREG to which node NREG is connected is the bus section for which voltage or connected equipment reactive power output is controlled by this switched shunt. If bus SWREG is not in a substation, NREG must be specified as 0. NREG = 0 by default
RMPCT	rmpct	Percent of the total Mvar required to hold the voltage at the bus controlled by bus I that are to be contributed by this switched shunt; RMPCT must be positive. RMPCT is needed only if there is more than one local or remote setpoint mode voltage controlling device (plant, switched shunt, FACTS device shunt element, or VSC dc line converter) controlling the voltage at bus SWREG. Only used if MODSW = 1 or 2. RMPCT = 100.0 by default
RMIDNT	rmindt	When MODSW is 4, the name of the VSC dc line containing the converter bus that is specified in SWREG. When MODSW is 5, the identifier of the switched shunt connected to the bus that is specified in SWREG. When MODSW is 6, the name of the FACTS device where the shunt element's reactive output is to be controlled. RMIDNT is not used for other values of MODSW. RMIDNT is a blank name by default
BINIT	binit	Initial switched shunt admittance; entered in Mvar at unity voltage. BINIT = 0.0 by default
NAME	name	Alphanumeric identifier assigned to the switched shunt. NAME may be up to forty characters and may contain any combination of blanks, uppercase letters, numbers and special characters. NAME must be enclosed in single or double quotes if it contains any blanks or special characters.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

Field	RAWX Key	Description
		NAME *must* be unique within all switched shunts. NAME is blank by default
S_i	s1, s2, s3, s4, s5, s6, s7, s8	Initial switched shunt status of one for in-service and zero for out-of-service for block i (1 through 8) S_i = 1 by default
N_i	n1, n2, n3, n4, n5, n6, n7, n8	Number of steps for block i (1 through 8). The first zero value of N_i or B_i is interpreted as the end of the switched shunt blocks for bus I. N_i = 0 by default
B_i	b1, b2, b3, b4 ,b5, b6, b7, b8	Admittance increment for each of N_i steps in block i; entered in Mvar at unity voltage. B_i = 0.0 by default

Switched shunt data input in the RAW file is terminated with a record specifying a bus number of zero.

1.27.1. Switched Shunt Notes

BINIT needs to be set to its actual solved case value only when the network, as entered into the working case via activity READ, is to be considered solved as read in, or when the device is to be treated as locked (i.e., MODSW is set to zero or switched shunt adjustment is disabled during power flow solutions).

The switched shunt elements at a bus may consist entirely of reactors (each B_i is a negative quantity) or entirely of capacitor banks (each B_i is a positive quantity). In these cases, when ADJM is zero, the shunt blocks are specified in the order in which they are switched on the bus; when ADJM is one, the shunt blocks may be specified in any order.

The switched shunt devices at a bus may be comprised of a mixture of reactors and capacitors. In these cases, when ADJM is zero, the reactor blocks are specified first in the order in which they are switched on, followed by the capacitor blocks in the order in which they are switched on; when ADJM is one, the reactor blocks are specified first in any order, followed by the capacitor blocks in any order.

In specifying reactive power limits for setpoint mode voltage controlling switched shunts (i.e., those with MODSW of 1 or 2), the use of a very narrow admittance range is discouraged. The Newton-Raphson based power flow solutions require that the difference between the controlling equipment's high and low reactive power limits be greater than 0.002 pu for all setpoint mode voltage controlling equipment (0.2 Mvar on a 100 MVA system base). It is recommended that voltage controlling switched shunts have admittance ranges substantially wider than this minimum permissible range.

When MODSW is 3, 4, 5 or 6, VSWLO and VSWHI define a restricted band of the controlled device's reactive power range. They are specified in pu of the total reactive power range of the controlled device (i.e., the plant QMAX - QMIN when MODSW is 3, MAXQ - MINQ of a VSC dc line converter when MODSW is 4, SNiBi - SNjBj when MODSW is 5 where i are those switched shunt blocks for which Bi is positive and j are those for which Bi is negative, and 2.*SHMX of the shunt element of the FACTS device, reduced by the current corresponding to the bridge active power transfer when a series element is present, when MODSW is 6). VSWLO must be greater than or equal to 0.0 and less than VSWHI, and VSWHI must be less than or equal to 1.0. That is, the following relationship must be honored:

$0.0 \leq VSWLO < VSWHI \leq 1.0$

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

The reactive power band for switched shunt control is calculated by applying VSWLO and VSWHI to the reactive power band extremes of the controlled plant or VSC converter. For example, with MINQ of -50.0 pu and MAXQ of +50.0 pu, if VSWLO is 0.2 pu and VSWHI is 0.75 pu, then the reactive power band defined by VSWLO and VSWHI is:

-50.0 + 0.2*(50.0 - (-50.0)) = -50.0 + 0.2*100.0 = -50.0 + 20.0 = -30.0 Mvar

through:

-50.0 + 0.75*(50.0 - (-50.0)) = -50.0 + 0.75*100.0 = -50.0 + 75.0 = +25.0 Mvar

The switched shunt admittance is kept in the working case and reported in output tabulations separately from the fixed bus shunt, which is entered on the fixed bus shunt data record (refer to Fixed Bus Shunt Data).

Refer to Section 6.3.15, Switched Shunt Devices and Section 6.3.17, DC Lines and Switched Shunt Adjustment for details on the handling of switched shunts during power flow solutions.

It is required that the data record for a switched shunt for which the control mode is 5 (i.e., it controls the setting of another switched shunt) be placed in the file after the data record for the switched shunt that it controls. Otherwise, a warning message indicating that the controlled switched shunt is not found is printed, and control of the switched shunt will not be implemented. It is recommended that data records for switched shunts for which the control mode is 5 be grouped together following all other switched shunt data records. This practice will eliminate the behavior described above simply because the controlled switched shunt record has not as yet been read.

1.27.2. Switched Shunt Example

Figure 1.30 shows the data record that may be specified to match the combination of switched elements on Bus 791. Note that the quantity shown as Load is entered as Load Data, and the fixed bus shunt indicated as B SHUNT and G SHUNT is entered as Fixed Bus Shunt Data.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

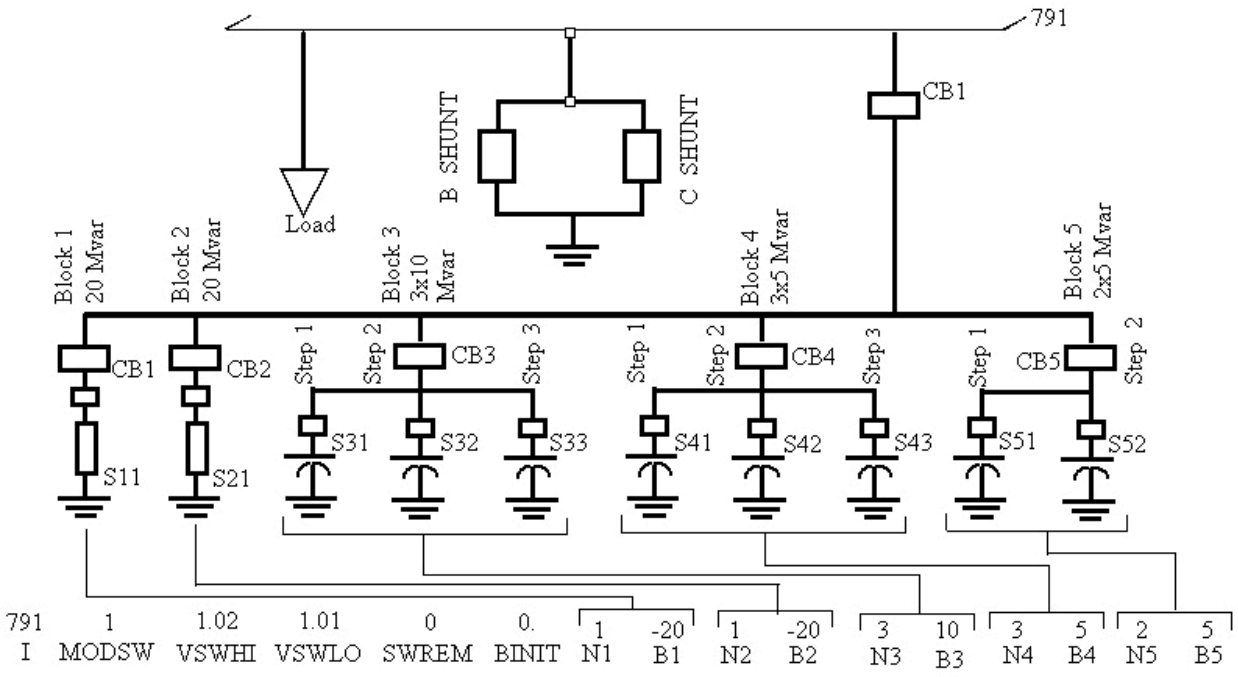


Figure 1.30. Example Data Record for Combination of Switched Shunts

1.28. GNE Device Data

PSSE accepts data for Generic Network Element (GNE) devices that are modeled in BOSL ".mac" or ".xmac" files. Each instance of a GNE device to be represented in PSSE is specified in a GNE device data record block.

RAW Record Format

```
NAME, MODEL, NTERM, BUS1, ..., BUSNTERM, NREAL, NINTG, NCHAR

STATUS, OWNER, NMET

REAL1, ..., REALmin(10, NREAL)

INTG1, ..., INTGmin(10, NINTG)

CHAR1, ..., CHARmin(10, NCHAR)
```

RAWx Record Format

```
"gne":{
  "fields":["name", "model", "nterm", "bus1", "bus2", "nreal", "nintg",
      "nchar", "stat", "owner", "nmet", "real1", "real2", "real3",
      "real4", "real5", "real6", "real7", "real8", "real9", "real10",
      "intg1", "intg2", "intg3", "intg4", "intg5", "intg6", "intg7",
      "intg8", "intg9", "intg10", "char1", "char2", "char3", "char4",
      "char5", "char6", "char7", "char8", "char9", "char10"],
```


All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

```
  "data":[
  ]
}
```

Field	RAWX Key	Description
NAME	name	The non-blank alphanumeric identifier assigned to this GNE device. Each GNE device instance *must* have a unique NAME. NAME may be up to twelve characters and may contain any combination of blanks, uppercase letters, numbers and special characters. NAME *must* be enclosed in single or double quotes if it contains any blanks or special characters. No default allowed
MODEL	model	The name of the BOSL model. NAME is the root name of the ".mac" or ".xmac" file containing the BOSL model. No default allowed
NTERM	nterm	The number of buses to which this instance of the model is connected. NTERM may be either 1 or 2 for a variable admittance model, and must be 1 for a variable power model and a variable current model. NTERM = 1 by default
BUSi	bus1, bus2	Bus number, or extended bus name enclosed in single quotes (refer to Extended Bus Names). For RAWX, if the value of nterm is equal to 1, data for bus2 will be ignored (treated as null). No default allowed
NREAL	nreal	Number of floating point data items required by model MODEL. NREAL must be identical to the number required by the ".mac" or ".xmac" file. NREAL = 0 by default
NINTG	nintg	Number of buses required in calculating the inputs required by model MODEL. NINTG must be identical to the number required by the ".mac" or .".xmac" file. NINTG = 0 by default
NCHAR	nchar	Number of two-character identifiers (e.g., machine identifiers, circuit identifiers, etc.) required in calculating the inputs required by model MODEL. NCHAR must be identical to the number required by the ".mac" or ".xmac" file. NINTG = 0 by default
STATUS	stat	Device status of one for in-service and zero for out-of-service. STATUS = 1 by default
OWNER	owner	Owner to which the device is assigned (1 through 9999). By default, OWNER is the owner to which BUS1 is assigned (refer to Bus Data).
NMET	nmet	Bus number, or extended bus name enclosed in single quotes (refer to Extended Bus Names), of the non-metered end bus. NMET is used for GNE devices with NTERM > 1.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

Field	RAWX Key	Description
		NMET = BUSNTERM by default
$REAL_I$	real1, real2, real3, real4, real5, real6, real7, real8, real9, real10	NREAL floating point data items required by model MODEL. Data items are entered 10 per line, with as many lines as required to supply NREAL data items. If NREAL is 0, no record is specified. $REAL_I$ = 0.0 by default
$INTG_I$	intg1, intg2, intg3, intg4, intg5, intg6, intg7, intg8, intg9, intg10	NINTG bus numbers or extended bus names required by model MODEL. $INTG_I$ = BUS1 by default. Data items are entered 10 per line, with as many lines as required to supply NINTG data items. If NINTG is 0, no record is specified. $INTG_I$ = BUS1 by default
$CHAR_I$	char1, char2, char3, char4, char5, char6, char7, char8, char9, char10	NCHAR two-character identifiers required by model MODEL. Data items are entered 10 per line, with as many lines as required to supply NCHAR data items. If NCHAR is 0, no record is specified. $CHAR_I$ = '1' by default

GNE device data input is terminated with a record specifying a blank GNE device name or a GNE device name of '0'.

GNE devices are not recognized in all forms of analysis available in PSS®E. For example, they are ignored in the fault analysis activities. Those analysis functions from which they are excluded print an appropriate message if any in-service GNE devices are present in the working case.

1.29. Induction Machine Data

Each network bus at which an induction machine is to be represented must be specified in at least one induction machine data record. Multiple induction machines may be represented at a bus by specifying more than one induction machine data record for the bus, each with a different machine identifier.

RAW Record Format (on a single line)

```
I, ID, STATUS, SCODE, DCODE, AREA, ZONE, OWNER, NAME, TCODE, BCODE, MBASE,
RATEKV, PCODE, PSET, H, A, B, D, E, RA, XA, XM, R1, X1, R2, X2, X3, E1, SE1,
E2, SE2, IA1, IA2, XAMULT
```

RAWx Record Format

```
"indmach":{
  "fields":["ibus", "imid", "stat", "sc", "dc", "area", "zone", "owner",
            "name", "tc", "bc", "mbase", "ratekv", "pcode", "pset", "hconst",
```


All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

```
            "aconst", "bconst", "dconst", "econst", "ra", "xa", "xm",
            "r1", "x1", "r2", "x2", "x3", "e1", "se1", "e2", "se2", "ia1",
            "ia2", "xamult"],
  "data":[
      [3010, "1", 1, 1, 2, 5, 4, 5, "", 1, 1, 1.0, 21.6, 1, 1.0, 1.0, 1.0, 1.0,
        1.0, 1.0, null, null, null, null, null, null, null, null, null, null,
        null, null, null, null, null],
      ...

      [93002, "1 ", 1, 1, 2, 5, 6, 5, "", 1, 2, 5.62, 0.69, 2, -5.0, 1.00, 1.0,
        1.0, -1.0, 1.0, null, null, null, null, null, null, null, null, null,
        null, null, null, null, null, null]
  ]
}
```

Field	RAWX Key	Description
I	ibus	Bus number, or extended bus name enclosed in single quotes (refer to Extended Bus Names). No default allowed
ID	imid	One- or two-character uppercase non-blank alphanumeric machine identifier used to distinguish among multiple induction machines at bus I. It is recommended that, at buses for which a single induction machine is present, it be designated as having the machine identifier '1'. ID = '1' by default
STATUS	stat	Machine status of 1 for in-service and 0 for out-of-service. STATUS = 1 by default
SCODE	scode	Machine standard code: • 1 - for NEMA • 2 - for IEC SCODE = 1 by default
DCODE	dcode	Machine design code. Following are allowed machine design codes: • 0 - for Custom design with equivalent circuit reactances specified • 1 - for NEMA Design A • 2 - for NEMA Design B / IEC Design N • 3 - for NEMA Design C / IEC Design H • 4 - for NEMA Design D • 5 - for NEMA Design E DCODE = 2 by default

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

Field	RAWX Key	Description
AREA	area	Area to which the induction machine is assigned (1 through 9999). By default, AREA is the area to which bus I is assigned (refer to Bus Data).
ZONE	zone	Zone to which the induction machine is assigned (1 through 9999). By default, ZONE is the zone to which bus I is assigned (refer to Bus Data).
OWNER	owner	Owner to which the induction machine is assigned (1 through 9999). By default, OWNER is the owner to which bus I is assigned (refer to Bus Data).
NAME	name	Alphanumeric identifier assigned to the induction machine. NAME may be up to forty characters and may contain any combination of blanks, uppercase letters, numbers and special characters. NAME must be enclosed in single or double quotes if it contains any blanks or special characters. NAME *must* be unique within all induction machines. NAME is blank by default
TCODE	tcode	Type of mechanical load torque variation: • 1 - for the simple power law • 2 - for the WECC model TCODE = 1 by default
BCODE	bcode	Machine base power code: • 1 - for 1 for mechanical power (MW) output of the machine • 2 - for apparent electrical power (MVA) drawn by the machine BCODE = 1 by default
MBASE	mbase	Machine base power; entered in MW or MVA. This value is specified according to BCODE, and could be either the mechanical rating of the machine or the electrical input. It is necessary only that the per unit values entered for the equivalent circuit parameters match the base power. MBASE = system base MVA by default
RATEKV	ratekv	Machine rated voltage; entered in kV line-to-line, or zero to indicate that machine rated voltage is assumed to be identical to the base voltage of bus I. RATEKV = 0.0 by default
PCODE	pcode	Scheduled power code: • 1 - for mechanical power (MW) output of the machine • 2 - for electrical real power (MW) drawn by the machine PCODE = 1 by default
PSET	pset	Scheduled active power for a terminal voltage at the machine of 1.0 pu of the machine rated voltage; entered in MW. This value is specified according to PCODE, and is either the mechanical power output of the machine or the real electrical power drawn by the machine. The sign convention used is that PSET specifies power supplied to the machine:

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

Field	RAWX Key	Description
		A positive value of electrical power means that the machine is operating as a motor; similarly, a positive value of mechanical power output means that the machine is driving a mechanical load and operating as a motor. No default allowed.
H	hconst	Machine inertia; entered in per unit on MBASE base. H = 1.0 by default
A, B, D, E	aconst, bconst, cconst, dconst	Constants that describe the variation of the torque of the mechanical load with speed. If TCODE is 1 (simple power law model), only D is used; if TCODE is 2 (WECC model), all of these constants are used. A = B = D = E = 1.0 by default.
RA	ra	Armature resistance, R_a (> 0.0); entered in per unit on the power base MBASE and voltage base RATEKV. RA = 0.0 by default
XA	xa	Armature leakage reactance, X_a (> 0.0); entered in per unit on the power base MBASE and voltage base RATEKV. XA = 0.0 by default
XM	xm	Unsaturated magnetizing reactance, X_m (> 0.0); entered in per unit on the power base MBASE and voltage base RATEKV. XM = 2.5 by default
R1	r1	Resistance of the first rotor winding ("cage"), r_1 (> 0.0); entered in per unit on the power base MBASE and voltage base RATEKV. R1 = 999.0 by default
X1	x1	Reactance of the first rotor winding ("cage"), X_1 (>0.0); entered in per unit on the power base MBASE and voltage base RATEKV. X1 = 999.0 by default
R2	r2	Resistance of the second rotor winding ("cage"), r_2 (> 0.0); entered in per unit on the power base MBASE and voltage base RATEKV. R2 = 999.0 by default
X2	x2	Reactance of the second rotor winding ("cage"), X_2 (>0.0); entered in per unit on the power base MBASE and voltage base RATEKV. X2 = 999.0 by default
X3	x3	Third rotor reactance, X_3 (> 0.0); entered in per unit on the power base MBASE and voltage base RATEKV. X3 = 0.0 by default
E1	e1	First terminal voltage point from the open circuit saturation curve, E_1 (> 0.0); entered in per unit on RATEKV base. E1 = 1.0 by default

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

Field	RAWX Key	Description
SE1	se1	Saturation factor at terminal voltage E1, $S(E_1)$. SE1 = 0.0 by default
E2	e2	Second terminal voltage point from the open circuit saturation curve, E_2 (> 0.0); entered in per unit on RATEKV base. E2 = 1.2 by default
SE2	se2	Saturation factor at terminal voltage E2, $S(E_2)$. SE2 = 0.0 by default
IA1, IA2	ia1, ia2	Stator currents in PU specifying saturation of the stator leakage reactance, XA. IA1 =IA2 = 0.0 by default
XAMULT	xamult	Multiplier for the saturated value. Allowed value 0 to 1.0. XAMULT = 1.0 by default

Induction machine data input in the RAW file is terminated with a record specifying a bus number of zero.

1.29.1. Machine Electrical Data

The positive sequence steady state equivalent circuit for the induction machine is shown in Figure 1.31

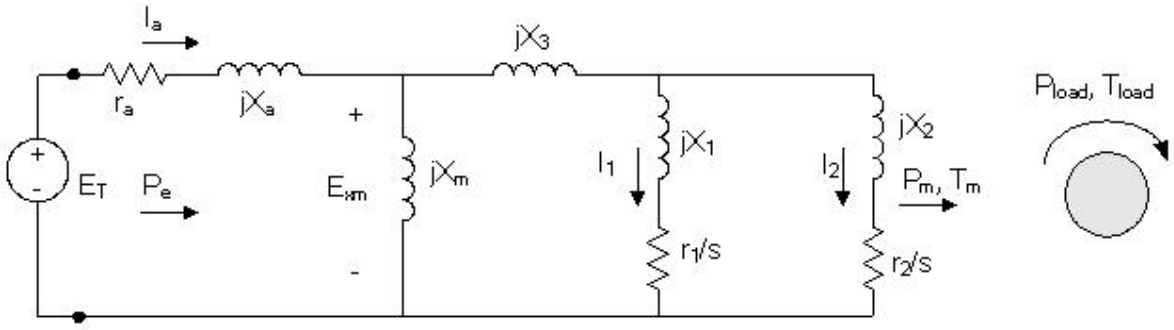


Figure 1.31. Induction Machine Equivalent Circuit

The machine model is described by eight electrical elements: three resistive and five inductive. Values are specified in per unit on the base power, MBASE, and rated voltage, RATEKV, which are also specified on the data record.

The left side of the circuit is the machine armature: r_a is the armature resistance and X_a is the armature leakage reactance. The armature and the rotor are linked through the magnetizing reactance X_m; the unsaturated value of the mutual reactance is specified.

The rotor is described by two parallel resistance and reactance branches, r_1, X_1 and r_2, X_2, that represent the "cages" or windings in the rotor. To model a single cage machine, the resistance and reactance of the second

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

of these parallel branches must *both* be specified as 999.0; i.e., to model a single cage machine, specify $r_2 = X_2 = 999.0$ on the data record.

The reactance X_3 is included to allow a more general model.

The mutual reactance X_m saturates. The saturation curve is for the induction machine operating with no load. Two points on the saturation curve must be specified. These are normally chosen such that E_1 is near the "knee" of the saturation curve and E_2 is near its ceiling. Saturation is neglected if $E_1 * S(E_1) = 0.0$; therefore, to neglect saturation, specify either E1 or SE1 as 0.0.

If a non-zero machine design code (DCODE) value is specified, all data items from RA to the end of the record are ignored, and pre-programmed machine electrical and saturation data values are assigned to the machine. If you wish to modify any of these data items after they have been assigned, you may change the machine design code to 0 (custom).

1.29.2. Load Mechanical Data

Five data items (TCODE, A, B, D and E) are used to describe how the torque of the mechanical load varies with speed. When TCODE is 1, a simple power law is applied that uses the constant specified as D. The equation is

$$T_{load} = T_{load0} \frac{(1-s)^D}{(1-s_0)^D}$$

where T_{load0} is the load torque and S_0 is the slip at a terminal voltage of 1.0 pu.

The WECC model applies the following equations:

$T_{load} = T_{load0} [A(1-s)^2+B(1-s)+D(1-s)^E+C_0]$ WECC Model

$C_0=1-A(1-s_0)^2-B(1-s_0)+D(1-s_0)^E$

1.30. Load Type Data

The load type defines the name of load types and the comment information of each load type.

RAW Record Format

```
NAME, DESC
```

RAWx Record Format

```
"loadtype":{
  "fields":["name" "desc"],
  "data":[
      ["A", "industry load"]
      ]
}
```


All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

Field	RAWX Key	Description
NAME	name	The non-blank alphanumeric identifier assigned to this load type. Each load type must have a unique NAME of up to 40 characters. No default allowed.
DESC	desc	The description string contains the information of the load type. blank by default

The load type data input is terminated with a record specifying a bus number of zero.

1.30.1. Load Type Data Notes

Multiple loads can be assigned to a load type. The loads can be returned by load type with subsystem retrieval APIs.

1.31. Interface Data

The Interface defines the interface name and ratings, MW or MVAr summation flow to be calculated and monitored.

RAW Record Format

```
NAME, INUM, TYPE, RATMAX1, RATMAX2, RATMAX3, RATMAX4, RATMAX5, RATMAX6, RATMAX7,
RATMAX8, RATMAX9, RATMAX10, RATMAX11, RATMAX12, RATMIN1, RATMIN2, RATMIN3, RAT-
MIN4, RATMIN5, RATMIN6, RATMIN7, RATMIN8, RATMIN9, RATMIN10, RATMIN11, RATMIN12
```

RAWx Record Format

```
"interface":{
"fields":["name","inum","type",
        "ratmax1", "ratmax2", "ratmax3", "ratmax4", "ratmax5", "ratmax6",
        "ratmax7", "ratmax8", "ratmax9", "ratmax10","ratmax11","ratmax12",
        "ratmin1", "ratmin2", "ratmin3", "ratmin4", "ratmin5", "ratmin6",
        "ratmin7", "ratmin8", "ratmin9", "ratmin10","ratmin11","ratmin12"],
"data":[
      ["TEST",1,1,1000,1000, 1000,1000, 1000,1000, 1000,1000, 1000,1000,
      1000,1000,0,0,0, 0,0,0, 0,0,0, 0,0,0]
      ]
}
```

Field	RAWX Key	Description
NAME	name	The non-blank alphanumeric identifier assigned to the interface. Each interface must have a unique Name, NAME may be up to 40 characters and may contain any combination of blanks, uppercase letters, numbers and special characters. NAME must be enclosed in single or double quotes if it contains any blanks or special characters. no default allowed. No default allowed.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

Field	RAWX Key	Description
INUM	inum	Interface number (1 through 999999). Each interface must have a unique NUMBER. By default, program assigns the next available number when inum is not provided.
TYPE	type	Type defines which flow component (MW and MVAr) of the interface flow model is calculated and monitored. Flow type: • 1 - MW • 2 - MVAr By default, flow type is 1. The quantities for ratings of interface are entered by TYPE.
RATEMAXn/ RATEMINn	ratemaxn/ rateminn	Each Interface has 12 pairs of limits (max/min) which are specified in physical units by TYPE. The MW or MVAr flows on the interface defined by TYPE are checked against the limits. When TYPE is MW, the ratings are defined in MW; when TYPE is MVAr, the ratings are defined in MVAr. for example: RATEMAX1/RATEMIN1 By default, RATEMAXn=9999.0, RATEMINn=-9999.0.

The interface data input is terminated with a record specifying zero.

1.32. Interface Element Data

An interface can include multiple interface elements, the MW or MVAr flow of the interface is the sum of MW or MVAr flows on all in-service interface elements. The amount and direction of MW or MVAr flows on interface elements are determined by their direction, weight factor and working case condition.

RAW Record Format

```
NAME, TYPE, INUM, JNUM, KNUM, NAMID, DIRCTN, IMET, WEIGHT
```

RAWx Record Format

```
"itfelmt":{
"fields":["name", "type", "inum", "jnum",  "knum", "namid",
        "dirctn", "imet", "weight"],
"data":[
  ["TEST",1,101,102,0, "1", 1, 1, 1.0]
  ]
}
```

Field	RAWX Key	Description
NAME	name	The alphanumeric name of the interface which the element belongs to. No default allowed.
TYPE	type	The interface element can be one of ten element types:

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

Field	RAWX Key	Description
		• 1-branch, two winding transformer, multi-section line • 2-three winding transformer • 3-load • 4-generator • 5-DC line • 6-VSCDC line • 7-area • 8-area tie and load • 9-zone • 10-zone tie and load No default allowed.
INUM	inum	bus number or extended bus name enclosed in single quotes or area number or zone number When TYPE is 1, from bus of the branch, two-winding transformer or the multiple section line. When TYPE is 2, from bus number of three winding transformer. When TYPE is 3, load bus number. When TYPE is 4, generator bus number. When TYPE is 5, from AC bus number of DC line. When TYPE is 6, from AC bus number of VSC DC line. When TYPE is 7 or 8, from area number. When TYPE is 9 or 10, from zone number. No default allowed.
JNUM	jnum	bus number or , or extended bus name enclosed in single quotes, or area number, or zone number. When TYPE is 1, to bus number of the branch, tow-winding transformer, or the multiple section. When TYPE is 2, to bus number of three winding transformer. When TYPE is 5, to AC bus number of DC line. When TYPE is 6, to AC bus number of VSC DC line.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

Field	RAWX Key	Description
		When TYPE is 7 or 8, to area number. When TYPE is 9 or 10, to zone number. It is zero for other types. JNUM is zero by default.
KNUM	knum	bus number or extended bus name enclosed in single quotes. When type is 2, the last bus number of three-winding transformer. It is zero for other types. KNUM is zero by default.
NAMID	namid	The device name or device ID of the element defined by TYPE. When TYPE is 1, One- or two-character uppercase non-blank alphanumeric identifier of branch, two-winding transformer, multiple section line. When TYPE is 2, One- or two-character uppercase non-blank alphanumeric identifier of a three-winding transformer. When TYPE is 3, One- or two-character uppercase non-blank alphanumeric identifier of a load. When TYPE is 4, One- or two-character uppercase non-blank alphanumeric identifier of a machine. When TYPE is 5, Twelve-character uppercase non-blank alphanumeric identifier (name) of a two-terminal DC line. When TYPE is 6, Twelve-character uppercase non-blank alphanumeric identifier (name) of a VSC DC line. When TYPE is 7,8,9 or 10, it is blank. NAMID is blank by default.
DIRCTN	dirctn	Direction defines the positive flow direction of the element: • 1-from 'from bus' • 2-to 'from bus' When DIRCTN is 1 and the TYPE is 1, 2, 5 or 6, the flow on the specified branch/three-winding transformer/DC line/VSC DC line is positive in the interface flow summation when flowing out of the from bus I. When DIRCTN is 1 and the TYPE is 3, the load consumption is positive. When DIRCTN is 1 and the TYPE is 4, the generation output is positive. When DIRCTN 1 and the TYPE is 7,8,9 or 10, the flow on the tie lines is positive in the interface flow summation when flowing out of the bus in AREA I. DIRCTN is 1 by default.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

Field	RAWX Key	Description
IMET	imet	Metered bus end of the interface element: • 0 - existing bus end • 1 - from bus end • 2 - not from bus end For TYPE 1 element, when IMET is 0, the MW or MVAr flow is taken at the metered bus defined in power flow case; when IMET is 1, the flow is taken at bus I; when IMET is 2, the flow is taken at bus J. For TYPE 2 element, when IMET is 0, the MW or MVAr flow is taken at the metered bus defined in power flow case; when IMET is 1, the flow is taken at bus I; when IMET is 2, the bus I is non-metered and flow is taken at both bus J and bus K. For TYPE 5 elements, when IMET is 0, the MW or MVAr flow is taken at the metered bus defined in power flow case; when IMET is 1, the flow is taken at bus I; when IMET is 2, the flow is taken at bus J. For TYPE 6 elements, when IMET is 0 or 1, the MW or MVAr flow is taken at bus I; when IMET is 2, the flow is taken at bus J. For TYPE 7,8,9 or 10 element, when IMET is 0, the MW or MVAr flow on a tie line is taken at the metered bus of the line defined in power flow case; when IMET is 1, the flow is taken at bus end in the area/zone I; when IMET is 2, the flow is taken at bus end in the area/zone J. IMET is 0 by default.
WEIGHT	weight	The weight factor of flow counted in the interface flow summation. It is from 0 to 1.0. WEIGHT is 1.0 by default.

The interface element data input is terminated with a record specifying zero.

1.33. Substation Data Group

Each substation to be represented in PSS®E is introduced by reading a substation data record block. Each substation block consists of:

- A substation data record
- Several node data records
- Several substation switching device data records
- Several equipment terminal data records

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

1.33.1. Substation Data

The first record in each substation block is a substation data record. Exactly one such record is specified in each substation block.

RAW Format

```
IS, NAME, LATI, LONG, SGR
```

RAWx Record Format

```
"sub":{
  "fields":["isub", "name", "lati", "long", "srg"],
  "data":[
      [1, "SS01_NILE_TYP_3_DBDB", 34.61, -86.67, 0.1100],
      ...
      [18, "SS18_PILCOMAYO_TYP_2_RB", 31.42, -81.02, 0.2900]
  ]
}
```

IS	Substation number (1 through 99999). No default allowed
NAME	Substation name, NAME may be up to forty characters and may contain any combination of blanks, uppercase letters, numbers and special characters. NAME must be enclosed in single or double quotes if it contains any blanks or special characters. NAME is forty blanks by default
LATI	Substation latitude in degrees (-90.0 to 90.0). It is positive for North and negative for South, 0.0 by default
LONG	Substation longitude in degrees. (-180.0 to 180.0). It is positive for East and negative for West, 0.0 by default
SRG	Substation grounding DC resistance in ohms. Substation grounding DC resistance in ohms 0.1 ohms by default

Substation data input is terminated with a record specifying a substation number of zero.

1.33.2. Node Data

The substation data record is followed by substation node data. Each node in the substation is specified in a node data record.

RAW Format

```
NI, NAME, I, STATUS, VM, VA
```

RAWx Record Format

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

```
"subnode":{
  "fields":["isub", "inode", "name", "ibus", "stat", "vm", "va"],
  "data":[
      [1, 1, "SS_NILE_NODE_1", 101, 1, null, null],
      ...
      [18, 2, "SS_PILCOMAYO_NODE_2", 3009, 1, null, null]
  ]
}
```

NI	Node number (1 through 999). No default allowed
NAME	Node name, NAME may be up to 40 characters and may contain any combination of blanks, uppercase letters, numbers and special characters. NAME must be enclosed in single or double quotes if it contains any blanks or special characters. Node names must be unique within the substation. NAME is set to a combination of the station name and node number by default
I	Electrical Bus number (1 through 999997) in bus branch model. The electrical bus represents this node NI and others that are connected by closed switching devices. No default allowed
STATUS	Node status. One for in-service and zero for out-of-service. STATUS = 1 by default
VM	Node voltage magnitude; entered in pu. VM = 1.0 by default
VA	Node voltage phase angle; entered in degrees. VA = 0.0 by default

Node data input for this substation is terminated with a record specifying a node number of zero.

Node Data Notes

VM and VA need to be set to their actual solved case values only under the following conditions:

- The network, as entered into the working case via activity READ, is to be considered solved as read in
- Substation bus “I” is represented in the bus branch model by multiple bus sections

The voltage of each bus representing one of the bus sections is set to the node voltage corresponding to the bus section number (e.g., if bus 154 is represented by the bus sections154-1 and 154-4, the voltage at bus 154-1 is set to the voltage specified for node 1 and the voltage at bus 154-4 is set to the voltage specified for node 4).

Otherwise, unless some better estimate of the solved voltage and/or phase angle is available, VM and VA may be omitted. In this case, the voltage at each of the bus sections is set to the voltage specified for bus “I”.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

1.33.3. Station Switching Device Data

The node data records are followed by substation switching device data. Each station switching device in the substation is specified in a station switching device data record.

RAW Format

```
NI, NJ, CKT, NAME, TYPE, STATUS, NSTAT, X, RSETNAM
```

RAWx Record Format

```
"subswd":{
  "fields":["isub", "inode", "jnode", "swdid", "name", "type", "stat",
            "nstat", "xpu", "rsetnam"],
  "data":[
      [ 1, 1, 3, "1", "BREAKER_0103",    2, 1, 1, 0.0001, "BRK-MDL-123"],
      ...
      [18, 1, 2, "1", "DISCONNECT_0102", 3, 1, 1, 0.0001, "DSW-MDL-456"]
  ]
}
```

NI	From node number (1 through 999). The from node must be in the sub- station IS. No default allowed
NJ	To node number (1 through 999). The to node must be in the substation IS. No default allowed
CKT	Two-character uppercase non-blank alphanumeric switching device identifier. CKT = '1' by default
NAME	Switching device name, NAME may be up to 40-characters and may contain any combination of blanks, uppercase letters, numbers and special characters. NAME *must* be enclosed in single or double quotes if it contains any blanks or special characters. Substation switching device names that are not blank *must* be unique within the substation. Name is blank by default.
TYPE	Switching device type whose ratings are specified. 1 - Generic connector 2 - Circuit breaker 3 - Disconnect switch TYPE=1 by default.
STATUS	Switching device status 0 - Open

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

	1 - Closed 2 - Stuck closed STATUS = 1 by default
NSTAT	Switching device normal status 0 - Open 1 - Closed 2 - Stuck closed NSTAT = 1 by default
X	Switching device reactance; entered in pu. A non-zero value of X must be entered for each switching device. The value X is used only in loop flow calculations. X = 0.0001 by default
RSETNAM	Previously defined rating set Switching Device Rating Table name. RSETNAM is blank by default.

Station switching device data input for this substation is terminated with a record specifying a from node number of zero.

1.33.4. Equipment Terminal Data

The substation switching device data records are followed by equipment terminal data. Equipment items that are connected to substation buses are specified in equipment terminal data records. The following paragraphs describe the record formats of the various types of terminal equipment that may be specified. Within the set equipment terminal data records specified for a substation, records maybe specified in any order.

Equipment terminal data input for this substation in the RAW file is terminated with a record specifying a bus number of zero.

RAWX Data Table Format for Equipment Terminal Data

Unlike RAW, all terminal data have a common format in RAWX regardless of terminal device type. This has the form:

RAWx Record Format

```
"subterm":{
  "fields":["isub", "inode", "type", "eqid", "ibus", "jbus", "kbus"],
  "data":[
      [1, 25, "L", "SC",          201,   null, null], // Load
      [1, 16, "F", "F1",          151,   null, null], // Shunt
      [1,  4, "M", "1 ",          101,   null, null], // Machine
      [1, 11, "B", "1 ",          151,   152,  null], // AC Line
      [1, 14, "2", "T1",          151,   101,  null], // 2-winding
      [5, 49, "3", "3 ",          208,   205,  215 ], // 3-winding
```


All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

```
      [7, 19, "S", "1 ",           93002, null, null], // Sw Shunt
      [7, 18, "I", "1 ",           93002, null, null], // Ind Mach
      [2, 30, "D", "TWO_TERM_DC1", 3021,  null, null], // 2-Term DC
      [4, 17, "V", "VDCLINE2    ", 203,   null, null], // VSC DC
      [12, 3, "N", "MULTERM_DC_1", 212,   null, null], // N-Term DC
      [2, 19, "A", "FACTS_DVCE_1", 153,   null, null]  // FACTS
  ]
}
```

Where the following terminal device type codes and required field apply for each terminal type:

Terminal Type	Type Code	Required Fields in RAWX Record
Load	"L"	isub, inode, type, eqid, ibus
Fixed Shunt	"F"	isub, inode, type, eqid, ibus
Machine	"M"	isub, inode, type, eqid, ibus
AC Line or Two-winding Transformer	"B" or "2"	isub, inode, type, eqid, ibus, jbus
Three-winding Transformer	"3"	isub, inode, type, eqid, ibus, jbus, kbus
Switched Shunt	"S"	isub, inode, type, eqid, ibus
Induction Machine	"I"	isub, inode, type, eqid, ibus
Two-terminal DC Line	"D"	isub, inode, type, eqid (as 12 character name), ibus
VSC DC Line	"V"	isub, inode, type, eqid (as 12 character name), ibus
Multi-terminal DC Line	"N"	isub, inode, type, eqid (as 12 character name), ibus
FACTS Device	"A"	isub, inode, type, eqid (as 12 character name), ibus

Load Terminal Data

Each load terminal data record has the following format in RAW:

```
I, NI, 'L', ID
```

I	Bus number. No default allowed
NI	Node number (1 through 999). If the electrical bus has node breaker model, in other words it represents a set of nodes in a substation, the node must be one node in the set and indicates the connections of the load within the substation. If the electrical bus has no node breaker model, it is zero. No default allowed
L	Single character 'L' to indicate the record contains terminal information for a Load.
ID	One or two-character uppercase non-blank alphanumeric load identifier used to distinguish among multiple loads at bus I. It is recommended that, at buses for which a single load is present, the load be designated as having the load identifier '1'. ID = '1' by default

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

Fixed Shunt Terminal Data

Each fixed shunt terminal data record has the following format:

```
I, NI, 'F', ID
```

I	Bus number. No default allowed
NI	Node number (1 through 999). If the electrical bus has node breaker model, in other words it represents a set of nodes in a substation, the node must be one node in the set and indicates the connections of the shunt within the substation. If the electrical bus has no node breaker model, it is zero. No default allowed
F	Single character 'F' to indicate the record contains terminal information for a Fixed Shunt.
ID	One or two-character uppercase non-blank alphanumeric fixed shunt identifier used to distinguish among multiple fixed shunts at bus I. It is recommended that, at buses for which a single fixed shunt is present, the fixed shunt be designated as having the fixed shunt identifier '1'. ID = '1' by default

Machine Terminal Data

Each machine terminal data record has the following format in RAW:

```
I, NI, 'M', ID
```

I	Bus number. No default allowed
NI	Node number (1 through 999). If the electrical bus has node breaker model, in other words it represents a set of nodes in a substation, the node must be one node in the set and indicates the connections of the machine within the substation. If the electrical bus has no node breaker model, it is zero. No default allowed
M	Single character 'M' to indicate the record contains terminal information for a Machine.
ID	One or two-character uppercase non-blank alphanumeric machine identifier used to distinguish among multiple machines at bus I. It is recommended that, at buses for which a single machine is present, the machine be designated as having the machine identifier '1'. ID = '1' by default

Branch and two winding Transformer Terminal Data

Each non-transformer branch and two-winding transformer terminal data record has the following format in RAW:

```
I, NI, 'B', J, CKT
```


All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

or

```
I, NI, '2', J, CKT
```

I	From bus number. No default allowed
NI	From node number (1 through 999). If the electrical from bus has node breaker model, in other words it represents a set of nodes in a substation, the from node must be one node in the set and indicates the connections of branch within the substation. If the electrical from bus has no node breaker model, it is zero. No default allowed
'B' or 2	Specifies that the record contains terminal information for a non-transformer or two-winding transformer.
J	To bus number. No default allowed
CKT	One or two-character uppercase non-blank alphanumeric switching device identifier. CKT = '1' by default

Three winding Transformer Terminal Data

Each three winding transformer terminal data record has the following format in RAW:

```
I, NI, '3', J, K, CKT
```

I	From bus number. No default allowed
NI	From node number (1 through 999). If the electrical from bus I has node breaker model, in other words it represents a set of nodes in a substation, the from node must be one node in the set and indicates the connections of branch within the substation. If the electrical from bus has no node breaker model, it is zero. No default allowed
3	Single character ‘3’ to indicate the record contains terminal information for a three-winding transformer.
J	To bus number. No default allowed
K	To bus number. No default allowed
CKT	One or two-character uppercase non-blank alphanumeric switching device identifier. CKT = '1' by default

Switched Shunt Terminal Data

Each switched shunt terminal data record has the following format in RAW:

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

```
I, NI, 'S', ID
```

I	Bus number. No default allowed
NI	Node number (1 through 999). If the electrical bus has node breaker model, in other words it represents a set of nodes in a substation, the node must be one in the set and indicates the connections of the switched shunt within the substation. If the electrical bus has no node breaker model, it is zero. No default allowed
S	Single character 'S' to indicate the record contains terminal information for a switched shunt.
ID	One or two-character uppercase non-blank alphanumeric switched shunt identifier used to distinguish among multiple switched shunts at bus I. It is recommended that, at buses for which a single switched shunt is present, the switched shunt be designated as having the switched shunt identifier '1'. ID = '1' by default

Induction Machine Terminal Data

Each induction machine terminal data record has the following format in RAW:

```
I, NI, 'I', ID
```

I	Bus number. No default allowed
NI	Node number (1 through 999). Must be one of the nodes of the bus within the substation to which the induction machine is to be connected to. If the bus has no node breaker model, it is zero. No default allowed
I	Single character 'I' to indicate the record contains terminal information for an induction machine.
ID	One or two-character uppercase non-blank alphanumeric machine identifier used to distinguish among multiple machines at bus I. It is recommended that, at buses for which a single machine is present, the machine be designated as having the machine identifier '1'. ID = '1' by default

Two-terminal DC Line Terminal Data

Each two-terminal DC line terminal data record has the following format in RAW:

```
I, NI, 'D', NAME
```

I	Rectifier or Inverter converter bus number. No default allowed

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

NI	Node number (1 through 999). Must be one of the nodes of the bus within the substation to which one end of the two-terminal dc line is to be connected to. If the electrical bus has no node breaker model, it is zero. No default allowed
D	Single character 'D' to indicate that the record contains terminal information for a two-terminal dc line connection.
NAME	The non-blank alphanumeric identifier of the two-terminal dc line. No default allowed

Voltage Source Converter (VSC) DC Line Terminal Data

Each VSC DC line terminal data record has the following format in RAW:

```
I, NI, 'V', NAME
```

I	Converter bus number. No default allowed
NI	Node number (1 through 999). Must be one of the nodes of a converter bus within a substation to which one end of the VSC dc line is to be connected to. If the bus has no node breaker model, it is zero. No default allowed
V	Single character 'V' to indicate that the record contains terminal information for a VSC dc line connection.
NAME	The non-blank alphanumeric identifier of the VSC dc line. No default allowed

Multi-terminal DC Line Terminal Data

Each multi-terminal DC line terminal data record has the following format in RAW:

```
I, NI, 'N', NAME
```

I	AC converter station bus number. No default allowed
NI	Node number (1 through 999). Must be one of the nodes of the ac converter station bus within the substation to which the multi-terminal dc line is to be connected to. If the bus has no node breaker model, it is zero. No default allowed
N	Single character 'N' to indicate that the record contains terminal information for a multi-terminal dc line connection.
NAME	The non-blank alphanumeric identifier of the multi-terminal dc line. No default allowed

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

FACTS Device Terminal Data

Each FACTS device terminal data record has the following format in RAW:

```
I, NI, 'A', NAME
```

I	Sending or terminal end bus number of the FACTS device. No default allowed
NI	Node number (1 through 999). Must be one of the nodes of the ac converter station bus within the substation to which the FACTS device is to be connected to. If the bus has no node breaker model, it is zero. No default allowed
A	Single character 'A' to indicate that the record contains terminal information for a FACTS device connection.
NAME	The non-blank alphanumeric identifier of the FACTS device. No default allowed

1.34. End of Data Indicator

It is good practice to end the Power Flow Raw Data File with a Q Record. Then, if new data categories are introduced in a point release of PSS®E, no modification of the file is required.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

Chapter 2
Power Flow RAW Format Change Summary

This chapter provides summary of power flow data changes from PSSE version 33 and later versions.

1. Case Identification Data

PSSE33	IC, SBASE, REV, XFRRAT, NXFRAT, BASFRQ TITLE1 TITLE2
PSSE34	same as previous version
PSSE35	same as previous version
PSSE36	same as previous version

2. System-Wide Data

PSSE33	did not exist
PSSE34	GENERAL, THRSHZ=0.0001, PQBRAK=, BLOWUP= GAUSS, ITMX=100, ACCP=, ACCQ=, ACCM=, TOL=0.0001 NEWTON, ITMXN=20, ACCN=, TOLN=, VCTOLQ=, VCTOLV=0.00001, DVLIM=, ND-VFCT= ADJUST, ADJTHR=0.005, ACCTAP=, TAPLIM=, SWVBND=100.0, MXTPSS=99, MXSWIM=10 TYSL, ITMXTY=20, ACCTY=, TOLTY=0.00001 SOLVER, FNSL, ACTAPS=1, AREAIN=0, PHSHFT=0, DCTAPS=1, SWSHNT=1, FLATST=0, VARLIM=0, NONDIV=0 RATING, N, NAME, DESC
PSSE35	GENERAL, GENERAL, THRSHZ=0.0001, PQBRAK=, BLOWUP=, **MAXISOLLVLS=4, CA-MAXREPTSLN=20, CHKDUPCNTLBL=0** GAUSS, same as previous version NEWTON, same as previous version ADJUST, same as previous version TYSL, same as previous version SOLVER, same as previous version

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

	RATING, same as previous version
PSSE36	GENERAL, same as previous version GAUSS, same as previous version NEWTON, same as previous version ADJUST, same as previous version TYSL, same as previous version SOLVER, same as previous version RATING, same as previous version **SWDRATNAM, RN, RNAM, RTYP, UNIT, DESC**

3. Bus Data

PSSE33	I, NAME, BASKV, IDE, AREA, ZONE, OWNER, VM, VA, NVHI, NVLO, EVHI, EVLO
PSSE34	same as previous version
PSSE35	same as previous version
PSSE36	same as previous version

4. Load Data

PSSE33	I, ID, STATUS, AREA, ZONE, PL, QL, IP, IQ, YP, YQ, OWNER, SCALE, INTRPT
PSSE34	I, ID, STATUS, AREA, ZONE, PL, QL, IP, IQ, YP, YQ, OWNER, SCALE, INTRPT, **DGENP, DGENQ, DGENM**
PSSE35	I, ID, STATUS, AREA, ZONE, PL, QL, IP, IQ, YP, YQ, OWNER, SCALE, INTRPT, DGENP, DGENQ, DGENM, **LOADTYPE**
PSSE36	I, ID, STATUS, AREA, ZONE, PL, QL, IP, IQ, YP, YQ, OWNER, SCALE, INTRPT, DGENP, DGENQ, DGENM, LOADTYPE, **NAME**

5. Fixed Bus Shunt Data

PSSE33	I, ID, STATUS, GL, BL
PSSE34	same as previous version
PSSE35	same as previous version
PSSE36	I, ID, STATUS, GL, BL, **NAME**

6. Voltage Droop Control Data

PSSE33	did not exist
PSSE34	did not exist
PSSE35	did not exist
PSSE36	**NAME, STATUS, REGBUS, QDB, QMIN, QMAX, VDBLOW, VDBHIGH, VLOW, VHIGH**

7. Generator Data

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

PSSE33	I, ID, PG, QG, QT, QB, VS, IREG, MBASE, ZR, ZX, RT, XT, GTAP, STAT, RMPCT, PT, PB, O1, F1, ..., O4, F4, WMOD, WPF
PSSE34	I, ID, PG, QG, QT, QB, VS, IREG, MBASE, ZR, ZX, RT, XT, GTAP, STAT, RMPCT, PT, PB, O1, F1, ..., O4, F4, WMOD, WPF, **NREG**
PSSE35	I, ID, PG, QG, QT, QB, VS, IREG, **NREG**, MBASE, ZR, ZX, RT, XT, GTAP, STAT, RMPCT, PT, PB, **BASLOD**, O1, F1, ..., O4, F4, WMOD, WPF
PSSE36	I, ID, PG, QG, QT, QB, VS, IREG, NREG, MBASE, ZR, ZX, RT, XT, GTAP, STAT, RMPCT, PT, PB, BASLOD, O1, F1, ..., O4, F4, WMOD, WPF, **DROOPNAME, NAME**

8. Switching Device Rating Tables

PSSE33	did not exist
PSSE34	did not exist
PSSE35	did not exist
PSSE36	**RSETNAM, DESCRIPTION, RATE1, ..., RATE12**

9. Non-Transformer Branch Data

PSSE33	I, J, CKT, R, X, B, NAME, RATEA, RATEB, RATEC, GI, BI, GJ, BJ, ST, MET, LEN, O1, F1, ..., O4, F4
PSSE34	I, J, CKT, R, X, B, NAME, **RATE1, ..., RATE12**, GI, BI, GJ, BJ, ST, MET, LEN, O1, F1, ..., O4, F4
PSSE35	same as previous version
PSSE36	I, J, CKT, R, X, B, NAME, RATE1, ..., RATE12, GI, BI, GJ, BJ, ST, **BP**, MET, LEN, O1, F1, ..., O4, F4

10. System Switching Device Data

PSSE33	did not exist
PSSE34	I, J, CKT, X, RATE1, ..., RATE12, STATUS, NSTATUS, METERED, STYPE, NAME
PSSE35	same as previous version
PSSE36	I, J, CKT, X, **RSETNAM**, STATUS, NSTATUS, METERED, STYPE, NAME

11. Transformer Data

PSSE33	Three winding I, J, K, CKT, CW, CZ, CM, MAG1, MAG2, NMETR, NAME, STAT, O1, F1, ..., O4, F4, VECGRP R1-2, X1-2, SBASE1-2, R2-3, X2-3, SBASE2-3, R3-1, X3-1, SBASE3-1, VMSTAR, ANSTAR WINDV1, NOMV1, ANG1, RATA1, RATB1, RATC1, COD1, CONT1, NODE1, RMA1, RMI1, VMA1, VMI1, NTP1, TAB1, CR1, CX1, CNXA1 WINDV2, NOMV2, ANG2, RATA2, RATB2, RATC2, COD2, CONT2, NODE2, RMA2, RMI2, VMA2, VMI2, NTP2, TAB2, CR2, CX2, CNXA2

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

	WINDV3, NOMV3, ANG3, RATA3, RATB3, RATC3, COD3, CONT3, NODE3, RMA3, RMI3, VMA3, VMI3, NTP3, TAB3, CR3, CX3, CNXA3 Two winding I, J, K, CKT, CW, CZ, CM, MAG1, MAG2, NMETR, NAME, STAT, O1, F1, ..., O4, F4, VECGRP, ZCOD R1-2, X1-2, SBASE1-2 WINDV1, NOMV1, ANG1, RATE11...RATE121, COD1, CONT1, NODE1, RMA1, RMI1, VMA1, VMI1, NTP1, TAB1, CR1, CX1, CNXA1 WINDV2, NOMV2
PSSE34	Three winding I, J, K, CKT, CW, CZ, CM, MAG1, MAG2, NMETR, NAME, STAT, O1, F1, ..., O4, F4, VECGRP, **ZCOD** R1-2, X1-2, SBASE1-2, R2-3, X2-3, SBASE2-3, R3-1, X3-1, SBASE3-1, VMSTAR, ANSTAR WINDV1, NOMV1, ANG1, RATE11, ..., RATE121, COD1, CONT1, NODE1, RMA1, RMI1, VMA1, VMI1, NTP1, TAB1, CR1, CX1, CNXA1 WINDV2, NOMV2, ANG2, RATE12, ..., RATE122, COD2, CONT2, NODE2, RMA2, RMI2, VMA2, VMI2, NTP2, TAB2, CR2, CX2, CNXA2 WINDV3, NOMV3, ANG3, RATE13, ..., RATE123, COD3, CONT3, NODE3, RMA3, RMI3, VMA3, VMI3, NTP3, TAB3, CR3, CX3, CNXA3 Two winding I, J, K, CKT, CW, CZ, CM, MAG1, MAG2, NMETR, NAME, STAT, O1, F1, ..., O4, F4, VECGRP, **ZCOD** R1-2, X1-2, SBASE1-2 WINDV1, NOMV1, ANG1, RATE11, ..., RATE121, COD1, CONT1, NODE1, RMA1, RMI1, VMA1, VMI1, NTP1, TAB1, CR1, CX1, CNXA1 WINDV2, NOMV2
PSSE35	same as previous version
PSSE36	same as previous version

12. Area Interchange Data

PSSE33	I, ISW, PDES, PTOL, ARNAME
PSSE34	same as previous version
PSSE35	same as previous version
PSSE36	same as previous version

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

13. Two-Terminal DC Transmission Line Data

PSSE33	NAME, MDC, RDC, SETVL, VSCHD, VCMOD, RCOMP, DELTI, METER, DCVMIN, CCCITMX, CCCACC IPR, NBR, ANMXR, ANMNR, RCR, XCR, EBASR, TRR, TAPR, TMXR, TMNR, STPR, ICR, IFR, ITR, IDR, XCAPR IPI, NBI, ANMXI, ANMNI, RCI, XCI, EBASI, TRI, TAPI, TMXI, TMNI, STPI, ICI, IFI, ITI, IDI, XCAPI
PSSE34	NAME, MDC, RDC, SETVL, VSCHD, VCMOD, RCOMP, DELTI, METER, DCVMIN, CCCITMX, CCCACC IPR, NBR, ANMXR, ANMNR, RCR, XCR, EBASR, TRR, TAPR, TMXR, TMNR, STPR, ICR, IFR, ITR, IDR, XCAPR, **NDR** IPI, NBI, ANMXI, ANMNI, RCI, XCI, EBASI, TRI, TAPI, TMXI, TMNI, STPI, ICI, IFI, ITI, IDI, XCAPI, **NDI**
PSSE35	NAME, MDC, RDC, SETVL, VSCHD, VCMOD, RCOMP, DELTI, METER, DCVMIN, CCCITMX, CCCACC IPR, NBR, ANMXR, ANMNR, RCR, XCR, EBASR, TRR, TAPR, TMXR, TMNR, STPR, ICR, **NDR**, IFR, ITR, IDR, XCAPR IPI, NBI, ANMXI, ANMNI, RCI, XCI, EBASI, TRI, TAPI, TMXI, TMNI, STPI, ICI, **NDI**, IFI, ITI, IDI, XCAPI
PSSE36	same as previous version

14. Voltage Source Converter (VSC) DC Transmission Line Data

PSSE33	NAME, MDC, RDC, O1, F1, ... O4, F4 IBUS, TYPE, MODE, DCSET, ACSET, ALOSS, BLOSS, MINLOSS, SMAX, IMAX, PWF, MAXQ, MINQ, REMOT, RMPCT IBUS, TYPE, MODE, DCSET, ACSET, ALOSS, BLOSS, MINLOSS, SMAX, IMAX, PWF, MAXQ, MINQ, REMOT, RMPCT
PSSE34	NAME, MDC, RDC, O1, F1, ... O4, F4 IBUS, TYPE, MODE, DCSET, ACSET, ALOSS, BLOSS, MINLOSS, SMAX, IMAX, PWF, MAXQ, MINQ, **VSREG**, RMPCT, **NREG** IBUS, TYPE, MODE, DCSET, ACSET, ALOSS, BLOSS, MINLOSS, SMAX, IMAX, PWF, MAXQ, MINQ, **VSREG**, RMPCT, **NREG**
PSSE35	NAME, MDC, RDC, O1, F1, ... O4, F4 IBUS, TYPE, MODE, DCSET, ACSET, ALOSS, BLOSS, MINLOSS, SMAX, IMAX, PWF, MAXQ, MINQ, VSREG, **NREG**, RMPCT IBUS, TYPE, MODE, DCSET, ACSET, ALOSS, BLOSS, MINLOSS, SMAX, IMAX, PWF, MAXQ, MINQ, VSREG, **NREG**, RMPCT
PSSE36	same as previous version

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

15. Transformer Impedance Correction Tables

PSSE33	I, T1, F1, T2, F2, T3, F3, ... T11, F11
PSSE34	I, **T1, Re(F1), Im(F1), T2, Re(F2), Im(F2), ..., T6, Re(F6), Im(F6)** **T7, Re(F7), Im(F7), T8, Re(F8), Im(F8), ..., T12, Re(F12), Im(F12)** ... ... **Tn, Re(Fn), Im(Fn), , ,**
PSSE35	same as previous version
PSSE36	same as previous version

16. Multi-Terminal DC Transmission Line Data

PSSE33	NAME, NCONV, NDCBS, NDCLN, MDC, VCONV, VCMOD, VCONVN IB, N, ANGMX, ANGMN, RC, XC, EBAS, TR, TAP, TPMX, TPMN, TSTP, SETVL, DCPF, MARG, CNVCOD IDC, IB, AREA, ZONE, DCNAME, IDC2, RGRND, OWNER IDC, JDC, CKT, MET, RDC, LDC
PSSE34	same as previous version
PSSE35	same as previous version
PSSE36	same as previous version

17. Multi-Section Line Grouping Data

PSSE33	I, J, ID, MET, DUM1, DUM2, ..., DUM9
PSSE34	same as previous version
PSSE35	same as previous version
PSSE36	same as previous version

18. Zone Data

PSSE33	I, ZONAME
PSSE34	same as previous version
PSSE35	same as previous version
PSSE36	same as previous version

19. Interarea Transfer Data

PSSE33	ARFROM, ARTO, TRID, PTRAN
PSSE34	same as previous version
PSSE35	same as previous version
PSSE36	same as previous version

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

20. Owner Data

PSSE33	I, OWNAME
PSSE34	same as previous version
PSSE35	same as previous version
PSSE36	same as previous version

21. FACTS Device Data

PSSE33	NAME, I, J, MODE, PDES, QDES, VSET, SHMX, TRMX, VTMN, VTMX, VSMX, IMX, LINX, RMPCT, OWNER, SET1, SET2, VSREF, REMOT, MNAME
PSSE34	NAME, I, J, MODE, PDES, QDES, VSET, SHMX, TRMX, VTMN, VTMX, VSMX, IMX, LINX, RMPCT, OWNER, SET1, SET2, VSREF, FCREG, MNAME, **NREG**
PSSE35	NAME, I, J, MODE, PDES, QDES, VSET, SHMX, TRMX, VTMN, VTMX, VSMX, IMX, LINX, RMPCT, OWNER, SET1, SET2, VSREF, FCREG, **NREG**, MNAME
PSSE36	same as previous version

22. Switched Shunt Data

PSSE33	I, MODSW, ADJM, STAT, VSWHI, VSWLO, SWREM, RMPCT, RMIDNT, BINIT, N1, B1, N2, B2, ..., N8, B8
PSSE34	I, MODSW, ADJM, STAT, VSWHI, VSWLO, SWREG, RMPCT, RMIDNT, BINIT, N1, B1, N2, B2, ..., N8, B8, **NREG**
PSSE35	I, **ID**, MODSW, ADJM, STAT, VSWHI, VSWLO, SWREG, **NREG**, RMPCT, RMIDNT, BINIT, **S1**, N1, B1, **S2**, N2, B2, ..., **S8**, N8, B8
PSSE36	I, ID, MODSW, ADJM, STAT, VSWHI, VSWLO, SWREG, NREG, RMPCT, RMIDNT, BINIT, **NAME**, S1, N1, B1, S2, N2, B2, ..., S8, N8, B8

23. GNE Device Data

PSSE33	NAME, MODEL, NTERM, BUS1, ..., BUSNTERM, NREAL, NINTG, NCHAR STATUS, OWNER, NMET REAL1, ..., REALmin(10, NREAL) INTG1, ..., INTGmin(10, NINTG) CHAR1, ..., CHARmin(10, NCHAR)
PSSE34	same as previous version
PSSE35	same as previous version
PSSE36	same as previous version

24. Induction Machine Data

PSSE33	I, ID, STATUS, SCODE, DCODE, AREA, ZONE, OWNER, TCODE, BCODE, MBASE, RATEKV, PCODE, PSET, H, A, B, D, E, RA, XA, XM, R1, X1, R2, X2, X3, E1, SE1, E2, SE2, IA1, IA2, XAMULT
PSSE34	same as previous version

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

PSSE35	same as previous version
PSSE36	I, ID, STATUS, SCODE, DCODE, AREA, ZONE, OWNER, **NAME**, TCODE, BCODE, MBASE, RATEKV, PCODE, PSET, H, A, B, D, E, RA, XA, XM, R1, X1, R2, X2, X3, E1, SE1, E2, SE2, IA1, IA2, XAMULT

25. Load Type Data

PSSE33	did not exist
PSSE34	did not exist
PSSE35	did not exist
PSSE36	NAME, DESC

26. Interface Data

PSSE33	did not exist
PSSE34	did not exist
PSSE35	did not exist
PSSE36	NAME, INUM, TYPE, RATMAX1, RATMAX2, RATMAX3, RATMAX4, RATMAX5, RATMAX6, RATMAX7, RATMAX8, RATMAX9, RATMAX10, RATMAX11, RATMAX12, RATMIN1, RATMIN2, RATMIN3, RATMIN4, RATMIN5, RATMIN6, RATMIN7, RATMIN8, RATMIN9, RATMIN10, RATMIN11, RATMIN12

27. Interface Element Data

PSSE33	did not exist
PSSE34	did not exist
PSSE35	did not exist
PSSE36	NAME, TYPE, INUM, JNUM, KNUM, NAMID, DIRCTN, IMET, WEIGHT

28. Substation Data

PSSE33	did not exist
PSSE34	IS, NAME, LATI, LONG, SGR
PSSE35	same as previous version
PSSE36	same as previous version

29. Node Data

PSSE33	did not exist
PSSE34	NI, NAME, I, STATUS, VM, VA
PSSE35	same as previous version
PSSE36	same as previous version

30. Station Switching Device Data

PSSE33	did not exist
PSSE34	NI, NJ, CKT, NAME, TYPE, STATUS, NSTAT, X, RATE1, RATE2, RATE3
PSSE35	same as previous version

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

PSSE36	NI, NJ, CKT, NAME, TYPE, STATUS, NSTAT, X, **RSETNAM**

31. Equipment Terminal Data

PSSE33	-	did not exist

PSSE34	Load Terminal Data	I, NI, 'L', ID
PSSE34	Fixed Shunt Terminal Data	I, NI, 'F', ID
PSSE34	Machine Terminal Data	I, NI, 'M', ID
PSSE34	Non-transformer Branch Terminal Data	I, NI, 'B', J, CKT
PSSE34	Two Winding Transformer Terminal Data	I, NI, '2', J, CKT
PSSE34	Three Winding Transformer Terminal Data	I, NI, '3', J, K, CKT
PSSE34	Switched Shunt Terminal Data	I, NI, 'S'
PSSE34	Induction Machine Terminal Data	I, NI, 'I', ID
PSSE34	Two-terminal DC Line Terminal Data	I, NI, 'D', NAME
PSSE34	VSC DC Line Terminal Data	I, NI, 'V', NAME
PSSE34	Multi-terminal DC Line Terminal Data	I, NI, 'N', NAME
PSSE34	FACTS Device Terminal Data	I, NI, 'A', NAME

PSSE35	Switched Shunt Terminal Data	I, NI, 'S', **ID**
PSSE35	all equipment except switched shunt	same as previous version

PSSE36	all equipment	same as previous version

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

Chapter 3
Extensible Power Flow Data File (RAWX)

3.1. Overview

The RAWX format is a JSON-compliant, human-readable data storage and exchange format for PSS®E data. Version 35 of PSS®E will support both the non-extensible, traditional RAW format along with RAWX. It is expected that the RAWX format will become the standard text-based data format for PSS®E in the future, and that updates to the functions that read and create the traditional RAW format will not be fully supported in a future version of PSS®E. Therefore, it is recommended that your current use of the RAW format be migrated to RAWX as soon as possible. PSS®E has tools for generating RAWX files from RAW and SAV files.

A RAWX files consist of two types of data objects, RAWX Parameter Sets and RAWX Data Tables. A minimal example of the content of a RAWX file looks like the example below, where "caseid" section is an example of a RAWX Parameter Set, and the "bus" section is an example of a RAWX Data Table (which has multiple data rows, one for each bus record).

```
{
"network":{
  "caseid":{
      "fields": ["title1", "company:string", "modelyear:int"],
      "data": ["SIMPLE EXAMPLE", "ElectroCorp", 2026]
  },
  "bus":{
      "fields": ["ibus", "name", "rdfid:string", "baskv", "ide"],
      "data":[
          [101, "Bus1", "c9bca33c8fcb4df5bbfae15a9a9157c7", 500.0, 3]
          [102, "Bus2", "8d4653380d374901bf856fa07c88c23a", 230.0, 1]
      ]
  }
}
}
```

Note that the above example is not sufficient to create a viable power flow case in PSS®E, but simply shows the general structure of the format. This document describes the specification of the underlying JSON format, the details of the RAWX objects, and a complete field key reference.

3.1.1. Additional RAWX Documentation

Documentation for the Extensible Power Flow Data File (RAWX) is located in two places. While this chapter contains the documentation for JSON, the RAWX specification, custom fields, and the RAWX Field Key reference, the Power Flow Data File (RAW) chapter contains consolidated syntax and data field documentation for both RAW and RAWX. The purpose of the consolidated documentation in to provide a side-by-side comparison of the traditional RAW and the RAWX formats.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

3.2. Introduction to JSON

JSON (JavaScript Object Notation) is a lightweight data-interchange format. It is easy for humans to read and write. It is easy for machines to parse and generate. It has been chosen as the basis for the RAWX format because it provides all the extensibility and data-tagging that XML provides, while also providing much more efficient storage of large data tables than XML. The JSON format is also very close to the format of the Python dictionary, and conversion between the two is straight-forward and JSON support is built into the Python standard library. Because the preferred language for using the public API of PSS®E is Python, the similarity of JSON to Python dictionaries is especially advantageous.

3.2.1. JSON Data Types

A JSON-compliant file consist of one or more JSON data types. These are the only data types allowed in a JSON-compliant file.

- *JSON Object*

  The JSON Object is an unordered collection of name–value pairs where the names (also called keys) are strings. Since objects are intended to represent associative arrays, it is recommended, though not required, that each key is unique within an object. Objects are delimited with curly brackets { }, and use commas to separate each pair, while within each pair the colon ':' character separates the key or name from its value.

  The RAWX format consist of two types of named JSON objects. These are referred to the RAWX Parameter Set, and the RAWX Data Table. An example of a JSON Object used in RAWX is:

```
"area":
{
        object attributes...
}
```

- *JSON Array*

  A JSON array in an ordered list of zero or more values, each of which may be of any type. Arrays use square bracket [ ] notation and elements are comma-separated.

  In the RAWX Format, JSON Arrays are used for *Field Lists* and *Data Rows*. Field Lists are attributes of RAWX Parameter Sets and Data Tables to indicate the order and subset of fields for which data is provided, for example:

```
"fields": ["iarea", "isw", "pdes", "ptol", "arname"]
```

  And Data Rows are JSON arrays that provide the data records for each element, for example:

```
"data": [
[1, 101, 250.000, 10.000, "FLAPCO"],
[2, 206, -100.000, 10.000, "LIGHTCO"]
]
```


All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

- *JSON String*

  A JSON string is a sequence of zero or more Unicode characters. Strings are delimited with double-quotation marks " " and support a backslash escaping syntax for certain special characters.

  JSON strings are used in RAWX data for data the field names in Field Lists, as well as values in Data Rows that are encoded in PSS®E as character data, such as equipment ids, equipment names, etc.

- *JSON Number*

  A JSON Number a signed decimal number that may contain a fractional part and may use exponential E notation, but cannot include non-numbers such as NaN. The format makes no distinction between integer and floating-point. JavaScript uses a double-precision floating-point format for all its numeric values, but other languages implementing JSON may encode numbers differently.

  Data values in Data Rows that correspond to either Integer or Real data in PSS®E are encoded as JSON numbers in the RAWX file. Note that these number values are interpreted as either Fortran Integers or Fortran Real values in PSS®E during the READX process that reads RAWX data into the PSS®E internal arrays.

- *JSON Boolean*

  The JSON boolean can be either of the values true or false, denoted by the literal symbols true and false, without quotes.

  The RAWX format does not have any boolean fields in the native RAWX data schema. However, custom fields may be included of type boolean, and these are stored as used as Fortran logical values in PSS®E.

- *JSON Null*

  An empty value, using the word null, without quotes.

  In RAWX, a value of null in a Data Row indicates a skipped value, which forces the data value to use the appropriate default value. In other words

3.3. RAWX Format Specification

3.3.1. RAWX File Structure

A RAWX file is a JSON-compliant text file. Any application that can validate JSON data will be able to validate a RAWX file. Therefore, the first step in validating the contents of a RAWX file is verifying that the file is valid JSON. However, the requirements for a valid RAWX go beyond JSON compliance.

A valid RAWX contains:

- An outer, top-level, unnamed object denoted with an opening curly bracket { and ending with a closing curly bracket }:

```
{
        file contents...
}
```


All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

- A named object within the top-level object in which the network data parameter sets and data tables reside. This object is a data set with the key "network":

```
{
"network":
{
        parameter sets and data tables...
}
}
```

- A comma-separated, unordered set of named objects within the "network" object. These objects are the parameter sets and the data tables. The names (keys) of the object are the documented names of the parameter sets and data tables, such as "caseid", "newton", "bus" or "generator":

```
{
"network":
{
  "caseid":
  {
        parameter set contents...
  },
  "bus":
  {
        data table contents...
  }

        additional, comma-separated parameter set and data table objects...
}
}
```

  The order of these does not matter, but when exporting RAWX data from PSS®E, the order will match the prescribed order of the sections of the traditional RAW format. Not all parameter sets or data tables need to be included, but only the subset of these objects need to be included in the file for which data will be provided. For example, if not FACTS devices exist in the power flow case encoded in the RAWX file, the data table object with key "facts" can be excluded completely in the file.

Additional considerations for the structure of the RAWX file:

- Additional objects included under the top-level object will be ignored and not stored or exported from PSS®E during a RAWX export (RAWDX command). In other words, the RAWX system currently only supports the data set "network".
- Any additional objects within the "network" object with unrecognized names will be ignored and not stored or exported from PSS®E during a RAWX export (RAWDX command). In other words, custom tables and parameter sets are not supported (Custom fields within known parameter sets and data table *are* supported, and will be discussed in the following sub sections).
- Indentation, additional whitespace, and new lines are all optional. The convention used in this document and in the PSS®E RAWX export is based on JSON best-practices for readability.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

- Commas are required between parameter sets and data tables. JSON validation will fail if these commas are missing. Also, the last object in the set must not have a trailing comma.

As and example, A minimal working case in the form of a RAWX file, available as mincas.rawx in the PSS®E EXAMPLE folder, is listed below.

```
{
"network":{
  "caseid":{
      "fields":["title1"],
      "data":["PSS(R)E MINIMUM RAWX CASE"]
  },
  "bus":{
      "fields":["ibus", "name", "ide"],
      "data":[
          [101, "Source", 3],
          [102, "Sink",   1]
      ]
  },
  "load":{
      "fields":["ibus", "loadid", "pl", "ql"],
      "data":[
          [102, "1", 500.0, 200.0]
      ]
  },
  "generator":{
      "fields":["ibus", "machid"],
      "data":[
          [101, "1"]
      ]
  },
  "acline":{
      "fields":["ibus", "jbus", "ckt", "xpu"],
      "data":[
          [101, 102, "1", 0.01]
      ]
  }
}
}
```

Note that only the parameter sets and data tables for which data is provided are present in the file. Also, only the parameters and fields for which data is provided are included in the field lists and data rows. The details of the contents of the parameter sets and data tables are described in the following section.

3.3.2. Parameter Sets

Parameter sets are structures that contain values for various PSS®E parameters. Parameter sets consist of the Parameter set name as the key of the JSON object, a field list, and a data array. The field list specifies the set and order of fields for which data will be provided, and the data array provides the corresponding values.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

The syntax of the parameter set is:

```
"    parameter_set_name":
{
"fields": [ "key1", "key2", ... , "keyN" ],
"data": [ value1, value2, ... , valueN ]
}
```

An example with real field keys and data values looks like:

```
"solver":
{
"fields": ["method", "actaps", "phshft", "swshnt"],
"data": ["FDNS", 0, 0, 0]
}
```

3.3.3. Data Tables

RAWX data tables are similar to the parameter sets, but with the key difference that the data array is an array of data rows, allowing multiple data rows (ie. element data records) to be defined.

The syntax of the data table is:

```
"    data_table_name":
{
"fields": [ "key1", "key2", ... , "keyN" ],
"data": [
  [    value1, value2, ... , valueN ],
  [    value1, value2, ... , valueN ],

    ...

  [    value1, value2, ... , valueN ]
]
}
```

An example with real field keys and data values is:

```
"fixshunt":{
"fields":["ibus", "shntid", "stat", "gl", "bl"],
"data":[
  [151, "1", 1, 0.000, -600.0],
  [201, "1", 1, 0.000,  300.0],
  [205, "1", 1, 0.000,  300.0]
]
```


All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

```
}
```

3.3.4. Field List Customization

Field lists can be customized by changing the field order and by excluding unused fields. For example, the default field list for the "fixshunt" data table is

```
["ibus", "shntid", "stat", "gl", "bl"]
```

This field list can be customized by excluding the "gl" field (which is typically zero) and moving the "stat" field to the end. This customized field list specification is:

```
["ibus", "shntid", "bl", "stat"]
```

The rows must provide the data values according to the customized field list specification. For this example, the new "fixshunt" data table object will appear as:

```
"fixshunt":{
"fields":["ibus", "shntid", "bl", "stat"],
"data":[
  [151, "1", -600.0, 1],
  [201, "1", 300.0, 1],
  [205, "1", 300.0, 1]
]
}
```

Primary key fields, or the fields that are used to uniquely define a PSS®E element, may not be excluded and must be present in the field list and data rows. For example, the primary key of the "bus" data table is the "ibus" field, and the primary keys for the "acline" table are the "ibus", "jbus", and "ckt" fields. Whether a field is a primary key can be determined from the "Is Primary Key" column in the RAWX Field Key Reference.

The only data values that can be excluded from the data rows, are trailing fields. In other words, if the number of elements in a data row is less than the number of elements the field list, the RAWX parser will assume that the data values matches the field list positionally, and the data values for the missing trailing data will be null. The effect of excluding a field is to force PSS®E to assume the default value for that field. For example, if one wishes to leave out the "stat" data for some rows, this can be achieved by simply excluding the data value and inserting an explicit null. Both methods have the same effect:

```
"fixshunt":{
"fields":["ibus", "shntid", "bl", "stat"],
"data":[
  [151, "1", -600.0],
  [201, "1",  300.0, null],
  [205, "1",  300.0, 1]
]
```


All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

```
}
```

In order to skip fields that are not at the end of the field list, the data value must be null. Again, the effect of skipping a field is to force PSS®E to assume the default value for that field. An example of this, where the default value for the field "bl" is desired at bus 201, appears as:

```
"fixshunt":{
"fields":["ibus", "shntid", "bl", "stat"],
"data":[
  [151, "1", -600.0, 1],
  [201, "1",   null, 1],
  [205, "1",  300.0, 1]
]
}
```

The default value of a field can be determined from the "Default" column in the RAWX Field Key.

3.3.5. Custom Field Definitions

Custom field can be added to most RAWX Parameter Sets and Data Tables. Custom fields are defined in the field list of the RAWX object, and their corresponding data values are adding in the data rows. Custom fields are read into PSS®E, stored internally, and exported when saving network data as RAWX. In this way, custom data can make a "roundup-trip" into and out of PSS®E.

The rules for defining and using custom fields are as follows:

- Custom fields may not have the same name as any known RAWX fields. See the RAWX Field Key Reference for a full list of known fields and the PSS®E minor version in which they have been introduced.
- Custom fields have one of several data types. Data types are specified in the field definition, delimited from the field name by a colon (eg. "myfield:integer"). Custom fields without a data type specification are assumed to be of type string. For example, a custom field of "myfield" without a data type specification, is interpreted and stored as a string.
- Custom fields may appear anywhere in the field list, however, the field order is not guaranteed to be retained when exporting RAWX data from PSS®E.
- PSS®E will attempt to read and store the custom data according to the defined data type of the custom field. If the data conversion fails, such as in the case of providing a String of characters for an integer field, a warning will be given in progress, and the data value will be null.
- Custom data is currently not supported in the following Data Tables:
  - Transformer Impedance Correction Tables (impcor)
  - All Multi-terminal DC Line Component Tables (ntermdcconv, ntermdcbus, and ntermdclink). (Note that the primary data record (ntermdc) does support custom fields)
  - Generic Network Element (gne) records

A full description of the custom field data type specification and examples are shown in the below table.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

Data Type	JSON Data Type	Valid RAWX Keywords	Example Field Definitions	Example Data Values
String (default)	JSON String	string strg str character char	"company" "loadtype:string" "fueltype:str"	"ElectroCorp" "industrial" "solar"
Integer	JSON Number	int intg integer	"normalstatus:int" "modelyear:integer"	1 2030
Floating Point	JSON Number	float flt real double	"scalfact:float" "sil:real"	1.25 869.3
Boolean	JSON Boolean	bool boolean logical	"baseload:bool" "firm:boolean"	true false

An example of a fixshunt data table with two custom fields is:

```
"fixshunt":{
"fields":["ibus", "shntid", "stat", "normalstat:int", "gl", "bl", "type:string"],
"data":[
  [151, "1", 1, 1, 0.000, -600.0, "reactor"],
  [201, "1", 1, 0, 0.000,  300.0, "capacitor"],
  [205, "1", 1, 1, 0.000,  300.0, "capacitor"]
]
}
```

3.3.6. Partial Datasets (Read and Change)

A RAWX file can be used to import partial datasets. Partial datasets are RAWX tables that include data records meant to be added to existing tables, or data records that include new or custom data to add to existing records. This is similar to the behavior of activity Read and Change (RDCH). The key to using RAWX is this way to set the "ic" field in the "caseid" parameter set to 1 (The default value of this field is 0). Therefore, somewhere in the RAWX file, the following parameter set definition must be present and must at least include the "ic" field:

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

```
"caseid":{
"fields":["ic"],
"data":[1]
}
```

If "ic" is set to 1, all of the parameter sets and data tables in the RAWX file are interpreted as data to update or add to the previously loaded loadflow data already in PSS®E.

For example, if one wishes to update only the area number of a few buses, the RAWX file contents would read as follows:

```
{
"network":
{
  "caseid":
  {
      "fields":["ic"],
      "data":[1]
  },

  "bus":
  {
      "fields":["ibus", "area"],
      "data":
      [
          [101, 10],
          [102, 10]
      ]
  }
}
}
```

Assuming a loadflow case that includes at least buses 101 and 102 has been loaded into PSS®E using READ, READX, or CASE, when the above RAWX file is read into PSS®E using the activity READX, the existing loadflow data remains intact, except the area number for buses 101 and 102 are updated to the value 10. If bus 101 or bus 102 are not present in the case, new bus record(s) will be added with default data (except for the area number of 10). This is analogous to the behavior of the data change APIs (eg. psspy.bus_data) where some arguments are the "default" or "do not change" values of _i or _f.

All or some of the fields included in partial datasets may be custom fields. For example, if one wishes to add latitude and longitude data to the buses in a case while leaving all other data intact, the following RAWX file could be used:

```
{
"network":
{
  "caseid":
  {
```


All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

```
      "fields":["ic"],
      "data":[1]
  },

  "bus":
  {
      "fields":["ibus", "lati:real", "long:real"],
      "data":
      [
          [101, 81.34, -34.51],
          [102, 81.85, -34.12],
          [151, 82.31, -33.51],
          [152, 82.87, -33.61],
          [153, 83.33, -32.81],
          ...    additional data rows...
      ]
  }
}
}
```

3.3.7. Custom Table Definitions

Custom tables can be added to the RAWX file via READX, stored in PSS®E, and exported via RAWDX.

The rules for defining and using custom tables are as follows:

- The name of the table must be unique within the file. If there are more than one table in the network data section of the rawx file with the same name, only one of the tables with that name will be stored in PSS®E.
- The field specifications in the field list follow the rules of the previous section (Custom Field Definitions). Note that all fields in a custom table are by definition custom fields.
- User defined tables do not have to be located at the end of the rawx file. They can be located anywhere within the network node. When rawx data is exported from PSS®E, however, the original order of the tables may not be maintained.

An example of two customs tables that encode simple interface definitions:

```
"interface":{
"fields":["name", "rating:real"],
"data":[
  ["InterfaceA", 600.0],
  ["InterfaceB", 850.0]
]
},

"interfaceBranch":{
"fields":["intname", "ibus:int", "jbus:int", "ckt"],
"data":[
  ["InterfaceA", 152,  3004, "1"],
```


All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

```
  ["InterfaceA", 3005, 3006, "1"],
  ["InterfaceA", 154,  3008, "1"],
  ["InterfaceB", 151,  201,  "1"],
  ["InterfaceB", 152,  202,  "1"],
  ["InterfaceB", 154,  203,  "1"],
  ["InterfaceB", 154,  205,  "1"]
]
}
```

Once the custom tables are imported into PSS®E via readx, the data in the custom tables are accessible using the Extension Data APIs (in the form get_ext_, set_ext_, etc.). An example of accessing the data using Python is given below. In this example, the get_ext_rowcount api is used to get the number of rows of each custom table, the get_ext_char, get_ext_int, and get_ext_real apis are used to get the ratings and flows of an interface, and a message is printed if the interface flow exceeds its rating.

```
ierr, nrows = psspy.get_ext_rowcount("interface")

rating = 0.0

for irow in range(1, nrows+1):
ierr, name = psspy.get_ext_char("interface", "name", irow)
if name == "InterfaceA"
  ierr, rating = psspy.get_ext_real("interface", "rating", irow)

ierr, nrows = psspy.get_ext_rowcount("interfaceBranch")

intflow = 0.0

for irow in range(1, nrows+1):
ierr, intname = psspy.get_ext_char("interfaceBranch", "intname", irow)
if intname == "InterfaceA"
  ierr, ibus = psspy.get_ext_int("interfaceBranch", "ibus", irow)
  ierr, jbus = psspy.get_ext_int("interfaceBranch", "jbus", irow)
  ierr, ckt = psspy.get_ext_char("interfaceBranch", "ckt", irow)
  ierr, sflow = psspy.brnflo(ibus, jbus, ckt)
  intflow += sflow

if abs(intflow) > rating:
print("Interface A flow of {} MVA > rating of {} MVA".format(abs(intflow), rating))
```

3.4. Importing/Exporting from CSV files

3.4.1. Importing RAWX tables from CSV

RAWX data can be imported from Comma-separated values (CSV) files. Each CSV file imported cooresponds to one RAWX parameter set or data table. Partial data sets, custom fields and custom tables are supported.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

The only required field(s) are the primary keys (unique identifiers) for the element for built-in (non-custom) data tables (primary keys are shown in the RAWX Field Reference Section of this document for each data table). Currently, the API CSV_TO_RAWX is the only method to perform this import. And example of an area table before and after a CSV import is shown below.

Original RAWX Table:

```
"area":{
  "fields":["iarea", "isw", "pdes", "ptol", "arname"],
  "data":[
      [1, 101, -2800.000, 10.000, "CENTRAL"],
      [2, 206, -1600.000, 10.000, "EAST"],
      [4, 401, 300.000, 15.000, "EAST_COGEN1"],
      [5, 3011, 900.000, 10.000, "WEST"]
  ]
}
```

Imported CSV File Contents

```
iarea, ptol, companyname:char
1, 5.000, "ElectroCorp"
2, 5.000, "Tesla Power and Light"
4, 10.000, "Gigawatt Industries"
5, 5.000, "Electron Wholesalers"
```

Resultant RAWX Table after CSV Import:

```
"area":{
  "fields":["iarea", "isw", "pdes", "ptol", "arname", "companyname:char"],
  "data":[
      [1, 101, -2800.000,  5.000, "CENTRAL"    , "ElectroCorp"           ],
      [2, 206, -1600.000,  5.000, "EAST"       , "Tesla Power and Light" ],
      [4, 401,   300.000, 10.000, "EAST_COGEN1", "Gigawatt Industries"   ],
      [5, 3011,  900.000,  5.000, "WEST"       , "Electron Wholesalers"  ]
  ]
}
```

3.4.2. Exporting RAWX tables to CSV

Parameter sets and data tables loaded into PSS®E can be exported to Comma-separated values (CSV) files. Each parameter set or data table is exported to its own CSV file one at a time. In otherwords, one CSV file cooresponds to one RAWX parameter set or data table. Currently, the API RAWX_TO_CSV is the only method to perform this export.

When exporting RAWX to CSV, all fields, built-in and custom, are included in the export, and the field ordering is identical to the ordering of RAWDX data export. Custom fields will retain their datatype specification

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

(eg. "latitude:real" vs. just "latitude") in the header row of the CSV file. An example of a Zone table and its cooresponding CSV output is shown below:

RAWX Table:

```
"zone":{
  "fields":["izone", "zoname", "loadfactor:real"],
  "data":[
      [1, "NORTH", 0.54],
      [2, "MID",   0.47],
      [3, "SOUTH", 0.56],
      [4, "EAST",  0.59]
  ]
}
```

Exported CSV File Contents:

```
izone, zoname, loadfactor:real
1, "NORTH", 0.54
2, "MID", 0.47
3, "SOUTH", 0.56
4, "EAST", 0.59
```


All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

Chapter 4
Sequence Data File

4.1. Overview

The input stream to activity RESQ is a Sequence Data File containing 11 groups of records with each group specifying a particular type of sequence data required for fault analysis work (refer to Table 4.1). Any piece of equipment for which sequence data is to be entered in activity RESQ *must* be represented as power flow data in the working case. That is, activity RESQ will not accept data for a bus, generator, branch, switched shunt or fixed shunt not contained in the working case.

All data is read in free format with data items separated by a comma or one or more blanks. Each category of data except the change code is terminated by a record specifying an I value of zero. Termination of all data is indicated by a value of Q.

Table 4.1. Sequence Data Input Structure

Change Code
System Wide Data
Generator Sequence Data
Load Sequence Data
Zero Sequence Non-Transformer Branch Data
Zero Sequence Mutual Impedance Data
Zero Sequence Transformer Data
Zero Sequence Switched Shunt Data
Zero Sequence Fixed Shunt Data
Induction Machine Sequence Data
Non-Conventional Source Fault Contribution Characteristics Data
Non-Conventional Source - Generator Data

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

Q Record

4.2. Change Code

The first record in the Sequence Data File contains two data items as follows:

```
IC, REV
```

IC	IC = 0 indicates the initial input of sequence data for the network contained in the working case. All buses, generators, branches, switched shunts and fixed shunts for which no data record is entered in a given category of data have the default values assigned for those data items. IC = 1 indicates change case input of sequence data for the network contained in the working case. All buses, generators, branches, switched shunts and fixed shunts for which no data record is entered in a given category of data have those data items unchanged; i.e., they are not set to the default values. IC=0 by default.
REV	PSSE revision number. REV = Current revision by default.

The use of the change case mode in activity RESQ is identical to its use in activity READ: for the addition of equipment to the working case (e.g., to add a zero sequence mutual coupling to the working case). It is not valid to set IC to one for the initial execution of activity RESQ for the network in the working case; in this case, an appropriate message is printed and activity RESQ continues its execution as if IC had been specified as zero.

4.3. System Wide Data

Through the system-wide data category, data that pertains to the case as a whole (rather than to individual equipment items) may be included in the Sequence Data File to allow convenient transfer of it with the case. Records may be included that define:

- Short Circuit Output Report Format
- Metal Var Oxide (MOV) Iteration Options
- Short Circuit Model

Generally, each record specified in the System-Wide Data category begins with a NAME that defines the type of data specified on the record. The formats of the various records are described in the following paragraphs.

RPTFORMAT Record

The Short Circuit Output Report Format record begins with the name RPTFORMAT and contains unit and co-ordinates option for reporting current, voltage and Thevenin impedance. Using keyword input, any or all of the following report format parameters may be specified:

AMPOUT = 0, Current and Voltages in PU) (default)

= 1, Current in Amperes and Voltages in kV

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

POLROU = 0, Currents and Voltages in Rectangular co-ordinates (default)

= 1, Currents and Voltages in Polar co-ordinates

AMPOUTZ = 0, Thevenin Impedance in PU (default)

= 1, Thevenin Impedance in ohms

POLROUZ = 0, Thevenin Impedance in Rectangular co-ordinates (default)

= 1, Thevenin Impedance in Polar co-ordinates

Those RPTFORMAT parameters that are specified may be entered n any order. The following is an example of this record:

RPTFORMAT, AMPOUT=0, POLROU=0, AMPOUTZ=0, POLROUZ=0

MOV Record

The Metal Var Oxide (MOV) Iteration Options record begins with the name MOV and contains linearized MOV model iteration parameters used by short circuit calculation methods. Using keyword input, any or all of the following MOV iteration parameters may be specified:

ITERATIONS Maximum number of iterations (default=20)

TOLERANCE Tolerance (default=0.01)

MOVALPHA Acceleration factor (default=0.3)

Those parameters that are specified may be entered in any order. The following is an example of this record:

MOV, ITERATIONS=20, TOLERANCE=0.01, MOVALPHA=0.3

SCMODEL Record

The Short Circuit Model Options record begins with the name SCMODEL and contains fault analysis modeling option setting. Using keyword input, SCMODEL parameters may be specified:

SCNRML = 0, center tapped two-phase modeling

= 1, Normal three-phase modeling (default)

The following is an example of this record:

SCMODEL, SCNRML=1

4.4. Generator Sequence Data

Each network bus to be represented as a generator bus (i.e., as a current source) in the unbalanced analysis activities must have sequence generator impedances entered into the PSSE working case for all in-service machines at the bus.

Each generator sequence impedance data record has the following format:

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

```
I, ID, ZRPOS, ZXPPDV, ZXPDV, ZXSDV, ZRNEG, ZXNEGDV, ZR0, ZX0DV, CZG, ZRG, ZXG,
REFDEG
```

I	Bus number; bus I must be present in the working case as a generator bus.
ID	One or two character machine identifier of the machine bus I for which the data is specified by this record. ID = '1' by default
ZRPOS	Generator positive sequence resistance; entered in pu on machine base (i.e., on bus voltage base and MBASE). ZRPOS = ZR (source resistance in raw data) by default.
ZXPPDV	Generator positive sequence saturated subtransient reactance; entered in pu on machine base (i.e., on bus voltage base and MBASE). ZXPPDV = ZX (source reactance in raw data) by default
ZXPDV	Generator positive sequence saturated transient reactance; entered in pu on machine base (i.e., on bus voltage base and MBASE). ZXPDV = ZXPPDV by default
ZXSDV	Generator positive sequence saturated synchronous reactance; entered in pu on machine base (i.e., on bus voltage base and MBASE). ZXSDV = XPPDV by default.
ZRNEG	Generator negative sequence resistance; entered in pu on machine base (i.e., on bus voltage base and MBASE). ZRNEG = ZRPOS by default
ZXNEGDV	Generator negative sequence saturated reactance; entered in pu on machine base (i.e., on bus voltage base and MBASE). ZXNEGDV = ZXPPDV by default
ZR0	Generator zero sequence resistance; entered in pu on machine base (i.e., on bus voltage base and MBASE). ZR0 = ZRPOS by default
ZX0DV	Generator zero sequence saturated reactance; entered in pu on machine base (i.e., on bus voltage base and MBASE). ZX0DV = ZXPPDV by default
CZG	Units of grounding impedance (ZRG and ZXG) values, = 1 for pu (on bus voltage base and MBASE), = 2 for Ohms
ZRG	Generator grounding resistance; entered in pu on machine base (i.e., on bus voltage base and MBASE) when CZG=1 or in ohms when CZG=2. ZRG = 0.0 by default
ZXG	Generator grounding reactance; entered in pu on machine base (i.e., on bus voltage base and MBASE) when CZG=1 or in ohms when CZG=2. ZXG = 0.0 by default

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

REFDEG	Generator Reference Angle; entered in degrees. This angle is used only when fault calculations with for "FLAT" voltage profile is selected. REFDEG = 0.0 by default

Throughout this Manual, the complex positive sequence generator impedance used in fault analysis will be referred to as ZPOS. The real component of ZPOS is always ZRPOS. Its imaginary component is either ZXPPDV, ZXPDV or ZXSDV, according to the selection made in selecting the fault analysis calculation activity. Similarly, the negative sequence generator impedance, ZNEG, is ZRNEG + j ZXNEGDV, and the zero sequence generator impedance, ZZERO, is ZR0 + j ZX0DV.

During the initial input of sequence data (i.e., IC = 0 on the first data record), any machine for which no data record of this category is entered has its positive sequence resistance set to ZR (the real component of ZSORCE), and all three positive sequence reactances set to ZX (the imaginary component of ZSORCE). ZSORCE is the generator impedance entered in activities READ, Section Activity, TREA, RDCH, and MCRE; it is used in switching studies and dynamic simulations (refer to Generator Data).

In subsequent executions of activity RESQ (i.e., IC = 1 on the first data record), any machine for which no data record of this category is entered has its positive sequence generator impedance values unchanged. Note that the generator positive sequence impedance values entered in activity RESQ for fault analysis purposes is not necessarily the same as the generator impedance (ZSORCE) used in dynamics, and that it does not overwrite ZSORCE. That is, the two different sets of positive sequence impedance data are specified in the working case simultaneously at different locations.

During the initial input of sequence data (i.e., IC = 0 on the first data record), any machine for which no data record of this category is entered has its negative sequence generator impedance ZNEG set equal to ZRPOS + j ZXPPDV. In subsequent executions of activity RESQ (i.e., IC = 1 on the first data record), any machine for which no data record of this category is entered has its negative sequence generator impedance unchanged.

For those machines at which the step-up transformer is represented as part of the generator data (i.e., XTRAN is non-zero), ZZERO is not used and, in the fault analysis activities, the step-up transformer is assumed to be a delta wye transformer. Refer to Modeling of Generator Step-Up Transformers (GSU).

For those machines that do not include the step-up transformer as part of the generator data (i.e., XTRAN is zero), a zero sequence impedance(ZR0, ZR0DV) of zero and grounding impedance (ZRG, ZXG) of zero results in the machine being treated as an open circuit in the zero sequence.

During the initial input of sequence data (i.e., IC = 0 on the first data record), any machine for which no data record of this category is entered has its zero sequence generator impedance ZZERO set equal to ZRPOS + j ZXPPDV. In subsequent executions of activity RESQ (i.e., IC = 1 on the first data record), any machine for which no data record of this category is entered has its zero sequence generator impedance unchanged.Generator sequence impedance data input is terminated with a record specifying a bus number of zero.

Figure 4.1 shows generator representation in sequence networks.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

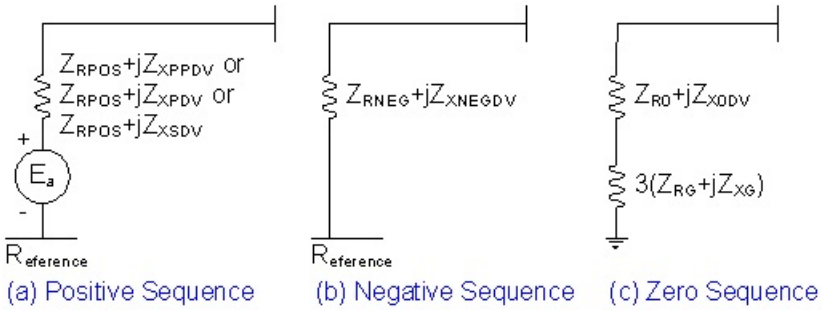


Figure 4.1. Generator Sequence Networks

PSS®E calculates pu grounding impedance from ohm as below:

$$Z_{RG} + jZ_{XG}\,\text{inPU} = Z_{RG} + jZ_{XG}\,\text{in ohm} \times \frac{\text{MBASE}}{\text{BASEKV}^2}$$

4.5. Load Sequence Data

Exceptional negative sequence loads (i.e., loads that, in the negative sequence, differ from the positive sequence loads) and zero sequence loads are entered into the working case in load sequence data records in the Sequence Data File. Each load negative and zero sequence data record has the following format:

```
I, ID, PNEG, QNEG, GRDFLG, PZERO, QZERO
```

I	Bus number, bus I must be present in the working case.
ID	One or two character load identifier of the load at bus I for which the data is specified by this record. ID = '1' by default
PNEG	Active component of negative sequence load; entered in MW at one per unit voltage. If PNEG=0 or is not specified, PNEG = positive sequence load MW.
QNEG	Reactive component of negative sequence load; entered in MVAR at one per unit voltage. If QNEG=0 or is not specified, QNEG = positive sequence load MVAR. QNEG is specified as negative MVAR for lagging (reactive) power factor loads.
GRDFLG	Grounding flag; 1 for grounded loads and 0 for ungrounded loads. GRDFLG=0 by default
PZERO	Active component of zero sequence load; entered in MW at 1 pu voltage. If PZERO is non-zero and GRDFLG=1, PZERO is modelled. If GRDFLG=0, PZERO is ignored. PZERO=0 by default
QZERO	Reactive component of zero sequence load; entered in MVAR at 1 pu voltage. If QZERO is non-zero and GRDFLG=1, QZERO is modelled. If GRDFLG=0, QZERO is ignored. QZERO is specified as negative MVAR for lagging (reactive) power factor loads.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

	QZERO = 0.0 by default

For any bus where no load sequence data record is specified, or PNEG and QNEG are both specified as zero, the load elements are assumed to be equal in the positive and negative sequence networks. For any bus where no load sequence data record is specified, or PZERO and QZERO are both specified as zero, or GRDFLG is specified as zero (i.e., an ungrounded load), no load component is represented in the zero sequence.

The user is advised to exercise caution in specifying negative and zero sequence loads. In the fault analysis calculations, constant power and constant current loads are converted to constant admittance at the pre-fault voltage. Further, when positive sequence loads are changed, either directly by the user or by activities such as SCAL, it may be appropriate to change previously specified negative and zero sequence loads. It is the user's responsibility to ensure that the positive sequence loading data, as contained in the working case, is coordinated with the specified negative and zero sequence load data.

Load sequence data input is terminated with a record specifying a bus number of zero.

4.6. Zero Sequence Non-Transformer Branch Data

Zero sequence non-transformer branch parameters are entered into the working case in zero sequence non-transformer branch data records in the Sequence Data File. Each zero sequence branch data record has the following format:

```
I, J, CKT, RLINZ, XLINZ, BCHZ, GI, BI, GJ, BJ, IPR, SCTYP
```

I	Bus number of one end of the branch.
J	Bus number of the other end of the branch.
CKT	One- or two-character branch circuit identifier; a non-transformer branch with circuit identifier CKT between buses I and J must be in the working case. CKT = '1' by default
RLINZ	Zero sequence branch resistance; entered in pu on system base MVA and bus voltage base. RLINZ = 0.0 by default
XLINZ	Zero sequence branch reactance; entered in pu on system base MVA and bus voltage base. Any branch which is not a zero impedance line and whose RLINZ and XLINZ are both 0.0 is treated as open in the zero sequence network. XLINZ must be negative for a series capacitor branch. XLINZ = 0.0 by default
BCHZ	Total zero sequence branch charging susceptance; entered in pu. BCHZ = 0.0 by default
GI,BI	Complex zero sequence admittance of the line connected shunt at the bus I end of the branch; entered in pu. GI + jBI = 0.0 by default
GJ,BJ	Complex zero sequence admittance of the line connected shunt at the bus J end of the branch; entered in pu. GJ + jBJ = 0.0 by default

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

IPR	MOV rated current for a series capacitor branch; entered in kA. It must be positive. IPR = 0.0 by default
SCTYP	MOV Protection Mode • 0 for normal branch (i.e., not a MOV protected branch) • 1 for MOV Protection enabled • 2 for MOV Protection disabled • 3 for Spark Gap Protection enabled (information only, not used in any calculations) SCTPY=0 by default

The zero sequence network is assumed to be a topological subset of the positive sequence network. That is, it may have a branch in every location where the positive sequence network has a branch, and may not have a branch where the positive sequence network does not have a branch. The zero sequence network does not need to have a branch in every location where the positive sequence network has a branch.

A branch treated as a zero impedance line (ZIL) in the positive sequence (refer to Zero Impedance Lines section) is treated as ZIL in the zero sequence, regardless of its specified zero sequence impedance (RLINZ and XLINZ).

During the initial input of sequence data (i.e., IC = 0 on the first data record), any non-transformer branch for which no data record of this category is entered is treated as open in the zero sequence network (i.e., the zero sequence impedance is set to zero). In subsequent executions of activity RESQ (i.e., IC = 1 on the first data record), any branch for which no data record of this category is entered has its zero sequence branch data unchanged.

Zero sequence branch data input is terminated with a record specifying a from bus number of zero.

4.7. Zero Sequence Mutual Impedance Data

Data describing mutual couplings between branches in the zero sequence network are entered into the working case in zero sequence mutual impedance data records in the Sequence Data File. Each zero sequence mutual impedance data record has the following format:

```
I, J, CKT1, K, L, CKT2, RM, XM, BIJ1, BIJ2, BKL1, BKL2
```

I	Bus number of one end of the first branch
J	Bus number of the other end of the first branch
CKT1	One- or two-character branch circuit identifier of the first branch; a non-transformer branch with circuit identifier ICKT1 between buses I and J must be in the working case. CKT1 = '1' by default
K	Bus number of one end of the second branch
L	Bus number of the other end of the second branch
CKT2	One- or two-character branch circuit identifier of the second branch; a non-transformer branch with circuit identifier ICKT2 between buses K and L must be in the working case.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

	CKT2 = '1' by default
RM,XM	Branch-to-branch mutual impedance coupling circuit CKT1 from bus I to bus J with circuit CKT2 from bus K to bus L; entered in pu. No default is allowed
BIJ1	Starting location of the mutual coupling along circuit CKT1 from bus I to bus J relative to the bus I end of the branch; entered in per unit of total line length. BIJ1 = 0.0 by default
BIJ2	Ending location of the mutual coupling along circuit CKT1 from bus I to bus J relative to the bus I end of the branch; entered in per unit of total line length. BIJ2 = 1.0 by default
BKL1	Starting location of the mutual coupling along circuit CKT2 from bus K to bus L relative to the bus K end of the branch; entered in per unit of total line length. BKL1 = 0.0 by default
BKL2	Ending location of the mutual coupling along circuit CKT2 from bus K to bus L relative to the bus K end of the branch; entered in per unit of total line length. BKL2 = 1.0 by default

The following rules must be observed in specifying mutual impedance data:

- The maximum number of zero sequence mutual couplings that may be entered at the standard size levels of PSSE is defined in Table 3-1 Standard Maximum PSS®E Program Capacities.
- The polarity of a mutual coupling is determined by the ordering of the bus numbers (I,J,K,L) in the data record. The dot convention applies, with the from buses (I and K) specifying the two dot ends of the coupled branches.
- RM+jXM specifies the circuit-to-circuit mutual impedance, given the polarity implied by I and K.
- The geographical B factors are required only if one or both of the two mutually coupled lines is to be involved in an unbalance part way down the line, *and* only part of the length of one or both of the lines is involved in the coupling. (Note that the default values of the B factors result in the entire length of the first line coupled to the entire length of the second line.)
- The values of the B factors must be between zero and one inclusive; they define the portion of the line involved in the coupling.
- BIJ1 must be less than BIJ2, and BKL1 must be less than BKL2.
- Mutuals involving transformers or zero impedance lines are ignored by the fault analysis solution activities.

Figure 4.2 schematically illustrates a mutual coupling with BIJ1 = 0.0, BIJ2 = 0.4, BKL1 = 0.0 and BKL2 = 1.0 (the first 40% of the first line coupled with the entire second line).

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

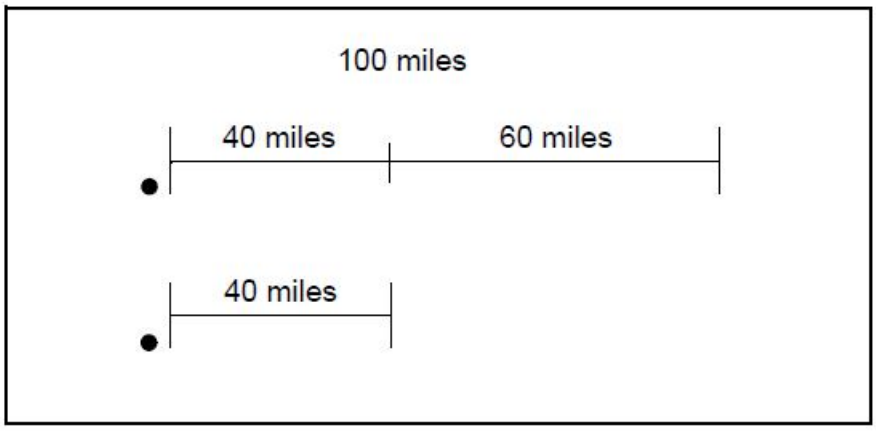


Figure 4.2. Mutual Coupline - Example 1

As a second example, BIJ1 = 0.6, BIJ2 = 1.0, BKL1 = 0.0 and BKL2 = 0.6 (last 40% of the first line coupled with the first 60% of the second line) might be depicted as in Figure 4.3

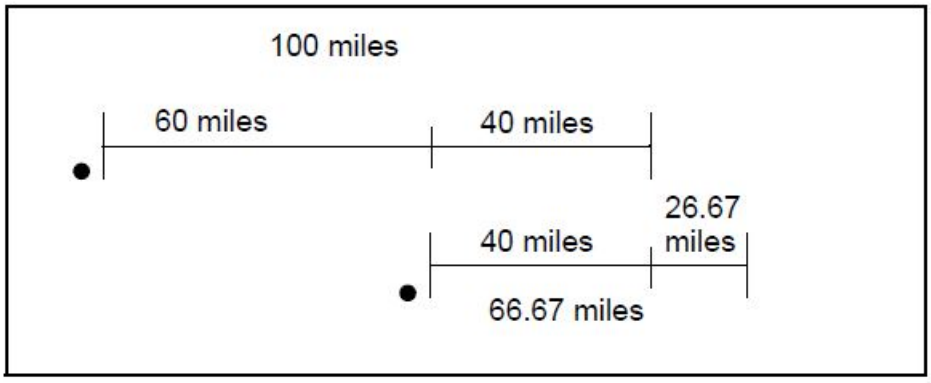


Figure 4.3. Mutual Coupline - Example 2

Zero sequence mutual impedance data input is terminated with a record specifying a from bus number of zero.

4.8. Zero Sequence Transformer Data

Zero sequence transformer parameters are entered into the working case in zero sequence transformer data records in the Sequence Data File. Each transformer data record has one of the following formats:

For two-winding transformers:

```
I,J,K,CKT,CZ0,CZG,CC,RG1,XG1,R01,X01,RG2,XG2,R02,X02,RNUTRL,XNUTRL
```

For three-winding transformers:

```
I,J,K,CKT,CZ0,CZG,CC,RG1,XG1,R01,X01,RG2,XG2,R02,X02,
```


All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

RG3,XG3,R03,X03,RNUTRL,XNUTRL

Notations used in Zero Sequence Networks

Z01=R01+jX01 Z02=R02+jX02 Z03=R03+jX03

Zg1=RG1+jXG1 Zg2=RG2+jXG2 Zg3=RG3+jXG3

Znutrl=RNUTRL+jXNUTRL

I	Bus number of the bus to which a winding of the transformer is connected.
J	Bus number of the bus to which another winding of the transformer is connected.
K	Bus number of the bus to which another winding of the transformer is connected. Zero is used to indicate that no third winding is present (i.e., that a two-winding transformer is being specified). K = 0 by default
CKT	One- or two-character transformer circuit identifier; a transformer with circuit identifier CKT between buses I and J (and K if K is non-zero) must be in the working case. CKT = '1' by default
CZ0	The non-grounding impedance data I/O code defines the units in which the impedance values Z01, Z02 and Z03 are specified. In specifying these impedances, the winding base voltage values are always the nominal winding voltages (NOMV1, NOMV2 and NOMV3) that are specified on the third, fourth and fifth records of the Transformer Data block in the Power Flow Raw Data File; see Transformer Data for more details. If no value for NOMVn is specified, the winding "n" voltage base is assumed to be identical to the winding "n" bus base voltage. **Legacy Connection Codes** For those connection codes that existed prior to PSS®E-33, CZ0 must be specified as 1. • For two-winding transformers, these are connection codes 1 through 9; • for three-winding transformers, these are connection codes 1 through 6, as well as the three digit connection codes where each digit refers to one of the two-winding connection codes 1 through 7 that is to be applied to one of the three windings of the transformer. • For all two-winding transformers with legacy connection codes, Z01 is specified in per unit on system MVA base and winding voltage base. Only for two-winding transformers with connection code 9, Z02 is specified in per unit on system MVA base and winding 2 voltage base. • For all three-winding transformers with legacy connection codes, Z01, Z02 and Z03 are specified in per unit on system MVA base and winding "n" voltage base. **Connection Codes Introduced in PSS®E-33** For all two-digit connection codes for two- and three-winding transformers, CZ0 may be specified as one of the following values:

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

	• 1 for per unit on system MVA base and winding "n" voltage base • 2 for per unit on a specified MVA base and winding "n" voltage base These are the same units dictated by CZ values 1 and 2 on the transformer data record of the Power Flow Raw Data File.
CZG	The grounding impedance data I/O code defines the units in which the impedance values Zg1, Zg2, Zg3 and Znutrl are specified. In specifying these impedances, the winding base voltage values are always the nominal winding voltages (NOMV1, NOMV2 and NOMV3) that are specified on the third, fourth and fifth records of the Transformer Data block in the Power Flow Raw Data File. If no value for NOMVn is specified, the winding "n" voltage base is assumed to be identical to the winding "n" bus base voltage. **Legacy Connection Codes** For those connection codes that existed prior to PSS®E-33, CZG must be specified as 1. • For two-winding transformers, these are connection codes 1 through 9; • For three-winding transformers, these are connection codes 1 through 6, as well as the three digit connection codes. • For two-winding transformers with legacy connection codes 2, 3 and 9, Zg1 is specified in per unit on system MVA base and winding voltage base. • For two-winding transformers with connection codes 5 through 8, Zg1 is specified in per unit on system MVA base and winding voltage base. • For two-winding transformers with connection code 8, Zg2 is specified in per unit on system MVA base and winding 2 voltage base. • For three-winding transformers with legacy connection code 1, Zg1 is specified in per unit on system MVA base and winding 1 voltage base. • For three-winding transformers with legacy connection code 5, Zg2 is specified in per unit on system MVA base and winding 2 voltage base. **Connection Codes Introduced in PSS®E-33** For all two-digit connection codes for two- and three-winding transformers, CZG may be specified as one of the following values: • 1 for per unit on system MVA base and winding voltage base • 2 for per unit on a specified MVA base and winding voltage base • 3 for ohms For three winding transformers, Zg1 is on SBASE12, Zg2 on SBASE23, Zg3 on SBASE31, and Znutrl on SABSE12.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

	For CZG values of 1 and 2, these are the same units dictated by CZ values 1 and 2 on the transformer data record of the Power Flow Raw Data File
CC	Winding connection code indicating the connections and ground paths to be used in modeling the transformer in the zero sequence network. For a two-winding transformer, valid values are 1 through 9 and 11 through 23. They define the following zero sequence connections that are shown in Section Two Winding Transformer Zero Sequence Networks. 1, 11 series path, no ground path. 2, 12 no series path, ground path on Winding 1 side. 3, 13 no series path, ground path on Winding 2 side. 4, 14 no series or ground paths. 5, 15 series path, ground path on Winding 2 side (normally only used as part of a three-winding transformer). 6, 16 no series path, ground path on Winding 1 side, earthing transformer on Winding 2 side. 7, 17 no series path, earthing transformer on Winding 1 side, ground path on Winding 2 side. 8, 18 series path, ground path on each side. 9, 19 series path on each side, ground path at the junction point of the two series paths. 20 series path on each side, ground path at the junction point of the two series paths; wye grounded - wye grounded core type transfromer 21 series path, no ground path; wye grounded - wye grounded non core type auto transfromer 22 series path, no ground path; wye - wye ungrounded core type auto transfromer For a three-winding transformer, CC may be specified as a three digit number, each digit of which is 1 through 7; the first digit applies to Winding 1, the second to Winding 2, and the third to Winding 3, where the winding connections correspond to the first seven two-winding transformer connections defined above and shown in Section Three Winding Transformer Zero Sequence Networks. Alternatively, several common zero sequence three-winding transformer connection combinations may be specified using the single digit values 1 through 6. These are defined the zero sequence transformer connections. The following ' single digit three-winding connection codes are available, where the connection codes of the three two-winding transformers comprising the three-winding transformer are shown in parenthesis in winding number order:

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

	1, 11 series path in all three windings, Winding 1 ground path at the star point bus (5-1-1). 2, 12 series path in Windings 1 and 2, Winding 3 ground path at the star point bus (1-1-3). 3, 13 series path in Winding 2, ground paths from windings one and three at the star point bus (3-1-3).
	4, 14 no series paths, ground paths from all three windings at the star point bus (3-3-3). 5, 15 series path in windings one and three, ground path at the Winding 2 side bus (1-2-1). 6, 16 series path in all three windings, no ground path (1-1-1). 17 series path in Windings 1 and 2, Winding 3 ground path at the star point bus; wye grounded - wye grounded - delta auto transfromer 18 series path in Windings 1 and 2, no ground path in Winding 3;wye - wye - delta ungrounded neutral auto transfromer Section Two Winding Transformer Zero Sequence Networks, includes examples of the proper specification of CC and the remaining transformer data items for several types of transformers. CC = 14 by default
RG1, XG1	Zero sequence grounding impedance on for an impedance grounded transformer. This data is specified in units specified by CZG. Refer zero sequence network diagrams for each connection code for specifying this value. RG1 = 0.0 and XG1 = 0.0 by default
	From two winding transformers connection codes ZG1=RG1+jXG1 is interpreted as: • ZG1 is grounding impedance of winding 1 when CC>9 • ZG1 is grounding impedance of winding 1 when CC=2 • ZG1 is grounding impedance of winding 2 when CC=3 • ZG1 is grounding impedance at winding 2 bus when CC=5,6 • ZG1 is grounding impedance at winding 1 bus when CC=7,8 • ZG1 is grounding impedance at star point of zero-sequence network T-model when CC=9
	From three winding transformers connection codes ZG1=RG1+jXG1 is interpreted as: • ZG1 is grounding impedance of winding 1 when CC are two digits, like, CC=12

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

	• ZG1 is grounding impedance at star point of zero-sequence network T-model when CC=1 or User Code Digit=5 • ZG1 is grounding impedance of winding 1 when CC=2 or user code digit is 2. • ZG1 is grounding impedance of winding 2 when CC=3 or user code digit is 3.
R01, X01	Refer zero sequence network diagram for each connection code for specifying this value. This value could be: • Two winding transformer: Z01 is equal to the transformer's zero sequence leakage impedance. Z01 is equal to the transformer's positive sequence impedance by default. • Three winding transformers and connection codes CC=11 and higher: Z01 is equal to the transformer's winding 1 to winding 2 zero sequence impedance. Z01 is equal to the transformer's winding 1 to winding 2 positive sequence impedance by default. • For three winding transformers and connection codes CC=1 through 9 and User Code: Z01 is equal to the transformer's winding 1 star-circuit equivalent zero sequence impedance. is equal to the transformer's winding 1 star-circuit equivalent positive sequence impedance by default. This data is specified in units specified by CZ0.
RG2, XG2	Zero sequence grounding impedance on winding 2 for an impedance grounded transformer. This data is applicable for connection codes CC=11 and higher. This data is specified in units specified by CZG. Refer zero sequence network diagram for each connection code for specifying this value. RG2 = 0.0 and XG2 = 0.0 by default

R02, X02	Refer zero sequence network diagram for each connection code for specifying this value. This value could be: • For two winding transformer: Refer zero sequence network diagram for each connection code for specifying Z02 value. R02 = 0.0 and X02 = 0.0 by default. • For three winding transformer and connection codes CC=11 and higher: Z02 is equal to the transformer's winding 2 to winding 3 zero sequence impedance. Z02 is equal to the transformer's winding 2 to winding 3 positive sequence impedance by default. • For three winding transformer and connection codes CC=1 through 9 and User Code: Z02 is equal to the transformer's winding 2 star-circuit equivalent zero sequence impedance. Z02 is equal to the transformer's winding 2 star-circuit equivalent positive sequence impedance by default.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

	This data is specified in units specified by CZ0.
RG3, XG3	Zero sequence grounding impedance on winding 3 for an impedance grounded transformer. This data is applicable for connection codes CC=11 and higher. This data is specified in units specified by CZG. Refer zero sequence network diagram for each connection code for specifying this value. RG3 = 0.0 and XG3 = 0.0 by default.
R03, X03	Refer zero sequence network diagram for each connection code for specifyingthis value. This value could be: • For three winding transformer and connection codes CC=11 and higher: Z03 is equal to the transformer's winding 3 to winding 1 zero sequence impedance. Z03 is equal to the transformer's winding 3 to winding 1 positive sequence impedance by default. • For three winding transformer and connection codes CC=1 through 9: Z03 is equal to the transformer's winding 3 star-circuit equivalent zero sequence impedance. Z03 is equal to the transformer's winding 3 star-circuit equivalent positive sequence impedance by default. This data is specified in units specified by CZ0.
RNUTRL, XNUTRL	Zero sequence common neutral grounding impedance. This data is applicable for connection codes CC=11 and higher. This data is specified in units specified by CZG. Refer zero sequence network diagram for each connection code for specifying this value. RNUTRL = 0.0 and XNUTRL = 0.0 by default.

Refer Section Application Notes - Transformers in the Zero Sequence for transformer winding connections, zero sequence network diagrams and connection codes.

In specifying zero sequence impedances for three-winding transformers, note that *winding* impedances are required, and that the zero sequence impedances return to the default value of the positive sequence winding impedances. Recall that, in specifying positive sequence data for three-winding transformers (refer to Transformer Data), measured impedances between pairs of buses to which the transformer is connected, not winding impedances, are required. PSSE converts the measured bus-to-bus impedances to winding impedances that are subsequently used in building the network matrices. Activities LIST and EXAM tabulate both sets of positive sequence impedances.

Recall that the service status of a three-winding transformer may be specified such that two of its windings are in-service and the remaining winding is out-of-service (refer to Transformer Data). Recall also that data for the three windings of a three-winding transformer is stored in the working case as three two-winding transformers (refer to Three-Winding Transformer Notes). Ri + jXi is stored with the two-winding transformer containing winding i's data; RG + jXG is stored with the two-winding transformer containing the data of the winding at which it is applied.

Placing one winding of a three-winding transformer out-of-service may require a change to the zero sequence data of the two windings that remain in-service. As the fault analysis calculation functions construct the zero sequence admittance matrix, when a three-winding transformer with one winding out-of-service is encoun-

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

tered, all data pertaining to the out-of-service winding (i.e., pertaining to the two-winding transformer containing the data of the out-of-service winding) is ignored. Thus, any zero sequence series and ground paths resulting from the impedances and connection code of the out-of-service winding are excluded from the zero sequence admittance matrix. It is the user's responsibility to ensure that the zero sequence impedances and connection codes of the two in-service windings result in the appropriate zero sequence modeling of the transformer.

Specification of the transformer connection code along with the impedances entered here enables the fault analysis activities to correctly model the zero sequence transformer connections, including the ground ties and open series branch created by certain grounded transformer windings. If no connection code is entered for a transformer, all windings are assumed to be open. Section Transformers in the Zero Sequence , gives additional details on the treatment of transformers in the zero sequence network, including examples of specifying data for several types of transformers.

During the initial input of sequence data (i.e., IC = 0 on the first data record), any transformer for which no data record of this category is entered has it zero sequence winding impedance(s) set to the same value(s) as its positive sequence winding impedance(s). In subsequent executions of activity RESQ (i.e., IC = 1 on the first data record), any transformer for which no data record of this category is entered has its zero sequence transformer data unchanged.

Zero sequence transformer data input is terminated with a record specifying a from bus number of zero.

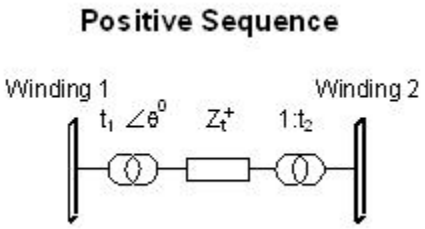


Figure 4.4. Two-Winding Transformer Positive Sequence Connections

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

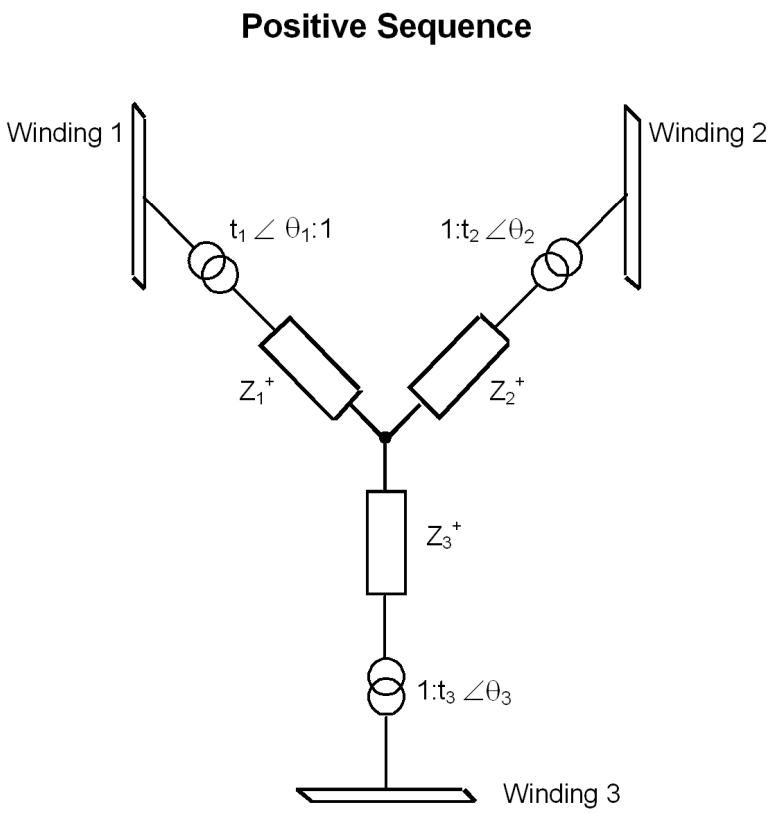


Figure 4.5. Three-Winding Transformer Positive Sequence Connections

4.9. Zero Sequence Switched Shunt Data

Zero sequence shunt admittances for switched shunts are entered into the working case in zero sequence switched shunt data records in the Sequence Data File. Each switched shunt data record has the following format:

```
I, ID, BZ1, BZ2, ... BZ8
```

I	Bus number; bus I must be present in the working case with positive sequence switched shunt data.
ID	One or two character identifier of the switched shunt at bus I for which the data is specified by this record. ID = '1' by default
BZ_i	Zero sequence admittance increment for each of the steps in block i; entered in MVAR at 1 pu unit voltage. BZ_i = 0.0 by default

Data specified on zero sequence switched shunt data records must be coordinated with the corresponding positive sequence data (refer to Switched Shunt Data). The number of blocks and the number of steps in each block are taken from the positive sequence data.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

Activity RESQ generates an alarm for any block for which any of the following applies:

- The positive sequence admittance is positive and the zero sequence admittance is negative.
- The positive sequence admittance is negative and the zero sequence admittance is positive.
- The positive sequence admittance is zero and the zero sequence admittance is non-zero.

The zero sequence admittance switched on at a bus is determined from the bus positive sequence value, with the same number of blocks and steps in each block switched on.

Zero sequence switched shunt data input is terminated with a record specifying a bus number of zero.

4.10. Zero Sequence Fixed Shunt Data

Zero sequence fixed shunts are entered into the working case in zero sequence fixed shunt data records in the Sequence Data File. Each zero sequence fixed shunt data record has the following format:

```
I, ID, GSZERO, BSZERO
```

I	Bus number; bus I must be present in the working case.
ID	One or two character identifier of the fixed shunt at bus I for which the data is specified by this record. ID = '1' by default
GSZERO	Active component of zero sequence admittance to ground to represent this fixed shunt at bus I; entered in MW at 1 pu voltage.
BSZERO	Reactive component of zero sequence admittance to ground to represent this fixed shunt at bus I; entered in MVAR at 1 pu voltage.

For any fixed shunt for which either no such data record is specified or GSZERO and BSZERO are both specified as 0.0, no zero sequence ground path is modeled for this fixed shunt. The zero sequence ground tie created by a grounded transformer winding is automatically added to whatever zero sequence fixed shunt and shunt load is specified at the bus when the transformer winding connection code data for the transformer is specified (refer to Zero Sequence Transformer Data).

Zero sequence fixed shunt data input is terminated with a record specifying a bus number of zero.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

4.11. Induction Machine Sequence Data

Each zero sequence induction machine data has the following format:

```
I, ID, CZG, GRDFLG, ILR2IR_SUB, R2X_SUB, ZR0, ZX0, ZRG, ZXG, ILR2IR_TRN, R2X_TRN,
ILR2IR_NEG, R2X_NEG
```

I	Bus number; bus I must be present in the working case as an induction machine bus.
ID	One or two character identifier of the induction machine at bus I for which the data is specified by this record. ID = '1' by default
CZG	Units of grounding impedance (ZRG and ZXG) values, = 1 for pu (on bus voltage base and MBASE), = 2 for Ohms
GRDFLG	1 for grounded machine, 0 for ungrounded machine (Most commonly, stator winding is either delta connected or star connected with the neutral isolated.) GRDFLG=0 by default.
ILR2IR_SUB	Ratio of positive sequence subtransient locked rotor current to rated current.
R2X_SUB	Ratio of positive sequence subtransient resistance to reactance. This is used only when positive sequence impedance is calculated using ILR2IR_SUB. R2X_SUB = 0.0 by default
ZR0	Zero sequence resistance; entered in pu on machine base (i.e., on bus voltage base and MBASE). ZR0 = 0.0 by default
ZX0	Zero sequence reactance; entered in pu on machine base (i.e., on bus voltage base and MBASE). Induction machine is isolated in zero sequence if the stator winding is either delta connected or star connected with the neutral isolated. For a star connected stator winding with an earthed neutral, zero sequence impedance is much smaller than motor starting impedance (subtransient or transient) and does not vary with time. Induction machine zero sequence impedance can be assumed equal to the stator ac resistance ZX0 = ZXPPDV by default depending on generator impedance option
ZRG	Grounding resistance; entered in pu on machine base (i.e., on bus voltage base and MBASE) when CZG=1 or in ohms when CZG=2. ZRG = 0.0 by default
ZXG	Grounding reactance; entered in pu on machine base (i.e., on bus voltage base and MBASE) when CZG=1 or in ohms when CZG=2. ZXG = 0.0 by default
ILR2IR_TRN	Ratio of positive sequence transient locked rotor current to rated current.
R2X_TRN	Ratio of positive sequence transient resistance to reactance. This is used only when positive sequence impedance is calculated using ILR2IR_TRN. R2X_TRN = 0.0 by default

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

ILR2IR_NEG	Ratio of negative sequence locked rotor current to rated current.
R2X_NEG	Ratio of negative sequence resistance to reactance. This is used only when negative sequence impedance is calculated using ILR2IR_NEG. R2X_NEG = 0.0 by default

Application Notes:

Positive (ZP) and negative (ZN) sequence impedances are calculated as below.

1. When locked rotor current to rated current sequence data is provided, depending on activity "reactance" option used:

$$|Z_P| = \frac{1}{ILR2IR_{SUB}} \text{ OR } \frac{1}{ILR2IR_{TRN}}$$

$$|Z_N| = \frac{1}{ILR2IR_{NEG}}$$

2. When locked rotor current to rated current sequence data is not provided:

$$X'' = X_\alpha + \frac{X_m\left[X_3 + \frac{X_1 X_2}{X_1 + X_2}\right]}{X_m + X_3 + \frac{X_1 X_2}{X_1 + X_2}}$$

$$R_m = R_a$$

$$Z_P = Z_N = R_m + jX''$$

3. When ILR2IR_NEG and R2X_NEG are not provided, ZN=ZP.

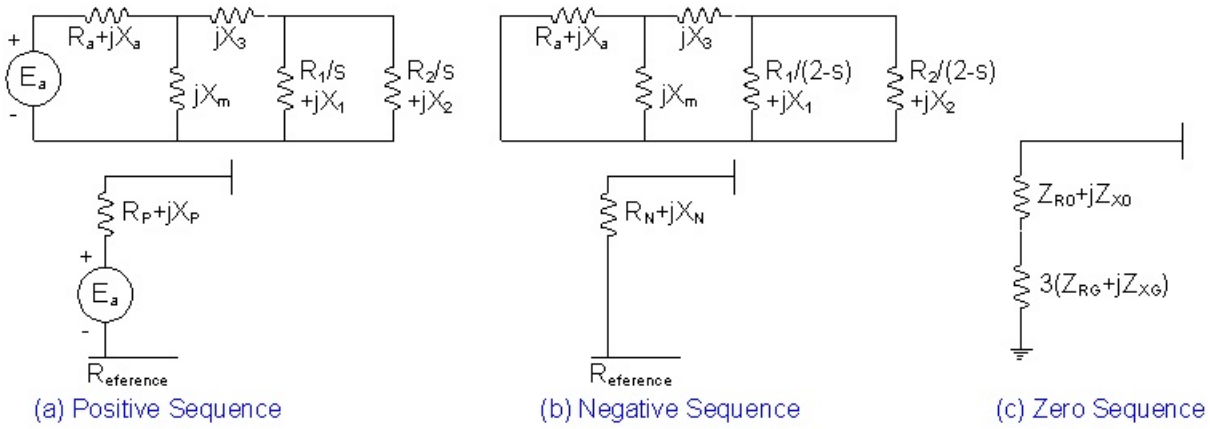


Figure 4.6. Induction Machine Sequence Network

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

4.12. Non-Conventional Source - Fault Contribution Characteristics Data

The fault contribution from non-conventional sources like Type 3 and Type 4 Wind Generators and Photo Voltaic Sources is very much dependent on the voltage source converters and their controls. This is also true with any other inverter based resources (IBRs) connected to the grid. The IBRs fault contributions is modeled with following two different characteristics.

- Time dependent fault current contribution (TI Characteristics)

  A source injects short circuit current and is independent of its terminal voltage. The amount of fault current contribution is determined from its pre-fault loading condition and TI characteristics. For example, activities ASCC and SCMU calculates momentary fault currents, so the fault current contribution specified at Time=0.0 is used.

  The active and reactive components of short circuit current, C_{iP} and C_{iQ}, are dependent on the pre-fault active power of the source. Considering rated active power and power factor, specify C_{iP} and C_{iQ} in per unit on rated voltage and base MVA of the source. The components C_{iP} and C_{iQ} do not include the source pre-fault loadings.

- Voltage dependent fault current contribution (VI Characteristics)

  A source injects short circuit current which is a function of its terminal voltage and mode of operation [active power or reactive power priority]. The amount of fault current contribution is determined by iterating over the positive sequence bus voltage and desired current as per its characteristics and pre-fault loading condition. For faults at source bus, the fault contribution will be maximum and as fault moves away from its bus the contribution will decrease. If the fault is farther enough such that its terminal voltage remains same as pre-fault voltage or within dead-band voltage limits, the source will contribute only pre-fault loading condition currents to the fault.

  The active and reactive components of short circuit current, C_{iP} and C_{iQ}, are dependent on the pre-fault active power of the source. Considering rated active power and power factor, specify C_{iP} and C_{iQ} in per unit on rated voltage and base MVA of the source. The components C_{iP} and C_{iQ} do not include the source pre-fault loadings.

As shown in Figure 4.7, the fault contribution characteristics may have up to 20 points. A minimum of one point is required. This characteristics could be defined separately for each postive and negative sequence components. Points are specified six per line in each source data block. As many records as needed (with six points per record) are entered. The end of data for a source is specified by specifying an additional point with the three values defining the point all specified as 0.0.

Each data record has following format:

```
NAME, CHRTYP, T1, C1P, C1Q, T2, C2P, C2Q, ... T6,  C6P,  C6Q
              T7, C7P, C7Q, T8, C8P, C8Q, ... T12, C12P, C12Q
              .
              .
              Tn, CnP, CnQ, 0.0, 0.0, 0.0
```


All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

NAME	The non-blank alphanumeric identifier assigned to table. Each Fault Contribution Character- istics table must have unique NAME. The NAME may be up to 12 characteristics and may contain any combination of blanks, uppercase letters, numbers and special characters, but the first character must not be a minus sign. The NAME must be enclosed in single or double quotes if it contains any blanks or special characters. No default allowed.
CHRTYP	Three character Fault Contribution Characteristics Type. CHRTYP = 'TIM' for Time dependent fault current contribution CHRTYP = 'VLT' for Voltage dependent fault current contribution No default allowed.
Ti	Time in seconds when curve is for Time dependent fault current contribution. Source Terminal (Bus) Voltage in PU when curve is for Voltage dependent fault current contribution. Ti values must be specified in ascending order.
CiP	The active component of the fault current contribution in pu on rated (1.0 pu) current and rated voltage base (1.0 pu) at Ti.
CiQ	The reactive component of fault current contribution in pu on rated (1.0 pu) current and rated voltage base (1.0 pu) at Ti. When supplying reactive power, specify CiQ as positive.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

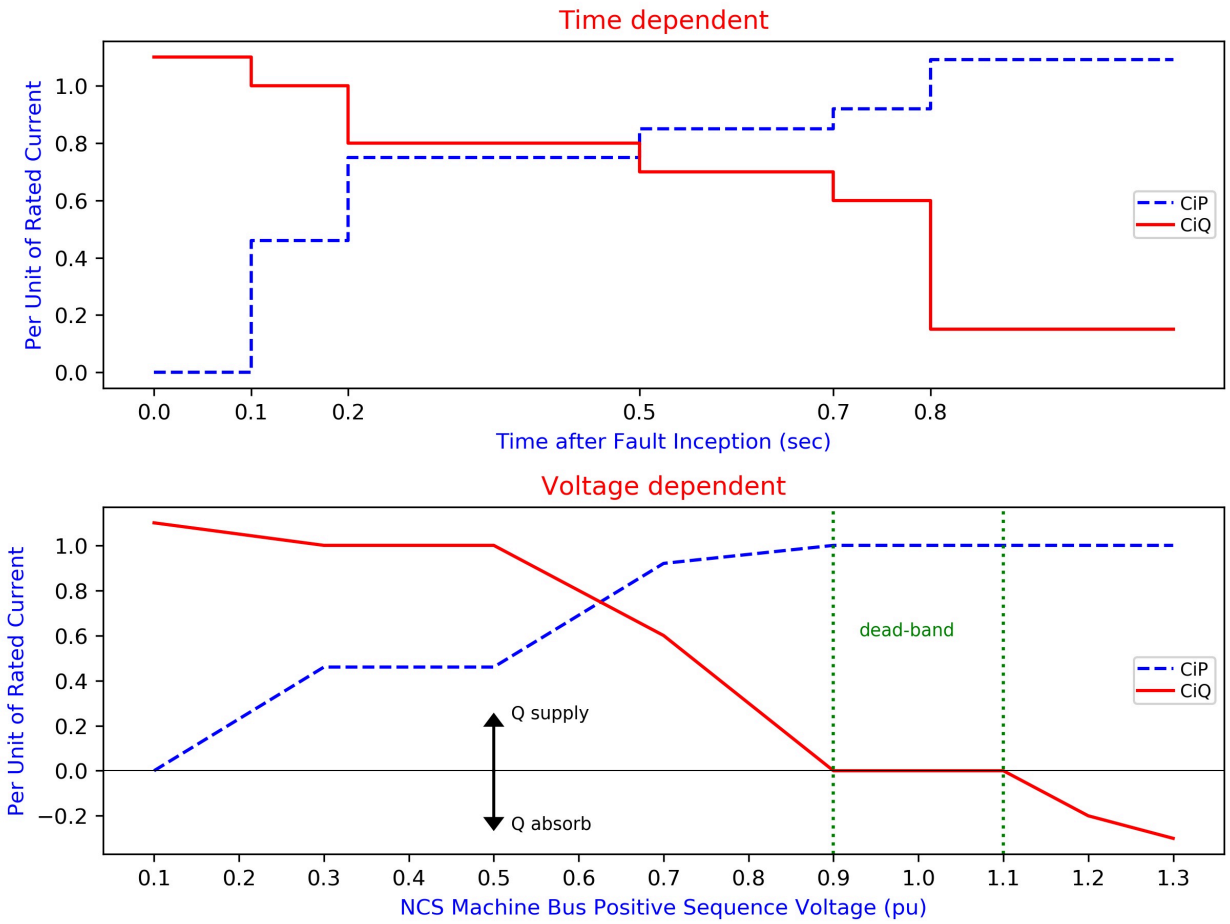


Figure 4.7. Non-conventional Source Fault Contribution Characteristics

Application Notes - The fault current (CiP+jCiQ) is limited to possible maximum amount of fault current contribution, which is generally upto 1.3 pu. Refer Program Applicate Guide, Volume 1, Chapter "Fault Analysis" for technical details.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

4.13. Non-Conventional Source - Generator Data

When a source in the network is not a conventional synchronous machine, but a non-conventional source which is typically connected to the grid though voltage source converters, viz.,Type 4 WTG or PV, then the fault contributions from such a source is specified using this data record. For these sources the fault response is controlled by its converter control characteristics.

When a generator has non-conventional source data specified, its "generator sequence data" record, even if present, is ignored.

This fault current contribution and its sequence network model is shown in Figure 4.8.

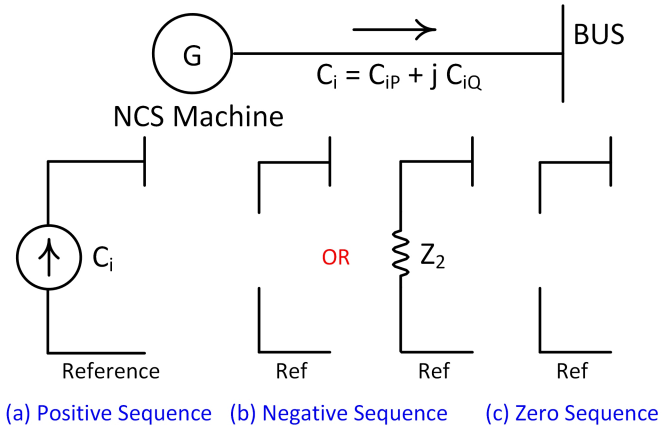


Figure 4.8. Non-conventional Source Sequence Network

Each data record has following format:

```
I, ID, CHRTYP, POSTBL, NEGTBL, IFMAX, DBVMIN, DBVMAX
```

I	Bus number; bus I must be present in the working case as a generator bus. No default is allowed
ID	One or two character source identifier of the generator bus I for which the data is specified by this record. ID = '1' by default
CHRTYP	Three character Fault Contribution Characteristics Type. CHRTYP = 'TIM' for Time dependent fault current contribution CHRTYP = 'VLT' for Voltage dependent fault current contribution CHRTYP = 'TIM' by default
POSTBL	Previously defined Fault Contribution Characteristics table name used to determine fault current contribution.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

	The POSTBL table name must be defined in "Non-Conventional Source Fault Contribution Characteristics Data" records. No default allowed.
NEGTBL	Previously defined Fault Contribution Characteristics table name used to determine negative sequence impedance. The NEGTBL table name must be defined in "Non-Conventional Source Fault Contribution Characteristics Data" records. NEGTBL=" (blank) by default meaning this generator is treated as open circuit in negative sequence. It is allowed to specifiy NEGTBL to be same as POSTBL.
IFMAX	PU maximum total current magnitude allowed during a fault. IFMAX = 1.3 pu by default
DBVMIN DBVMAX	PU dead-band minimum and maximum voltage limits at the source bus. In this voltage dead-band, the source is considered operating in normal state with active power priority. Outside of this voltage dead-band, the source is considered operating with reactive power priority. When DBVMIN=DBVMAX these limits are ignored and the source is considered operating with reactive power priority. DBVMIN=0.9 pu be default DBVMAX=1.1 pu be default

Application Notes:

- The characteristics type (CHRTYP) of POSTBL and NEGTBL tables must be the same. The names of POSTBL and NEGTBL could be different.
- Two data record groups “NCS Fault Contribution Characteristics Data” and “NCS – Generator Data” are used to specify NCS fault contributions. They provide following benefits.
  - Ability to specify same “Fault Contribution Characteristics Data” to multiple sources.
  - Ability to specify different fault contribution characteristics for positive sequence and negative sequence.
  - Ability to specify voltage dependent fault contribution characteristics.
  - Ability to specify voltage limits during which NCS contributes only pre-fault loading currents to the fault.
  - Ability to specify maximum fault current contribution from NCS.
- Sequence file formats of version 35.0.x through 35.1.x and version 35.2.x are different. Version 36.0 [and later] format is same as version 35.2.x format.
- For previous version 35.x sequence file, only version 35.2.x format sequence files are written.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

- For previous version 34.x sequence file, only positive sequence time dependent fault contribution characteristics are written.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

4.14. Application Notes - Transformers in the Zero Sequence

The fault analysis activities of PSS®E handle the zero sequence representation of two- and three-winding transformers automatically. Other nonstandard transformer types must be reduced to combinations of two-winding transformers, three-winding transformers, and/or branches by the use of dummy buses and equivalent circuits. Note again that the introduction of buses and branches needed for the modeling of nonstandard transformers is accomplished by their addition to the positive sequence network via activities READ, TREA, or RDCH, or the *[Spreadsheet]*.

Transformer zero sequence data is entered into the working case by means of zero sequence transformer data records in the Sequence Data File. Transformers are represented in the zero sequence as per their connection codes. The establishment of the connections and ground paths is handled automatically on the basis of the impedances and connection code entered and the winding turns ratios.

Zero sequence transformer default data is such that the transformer appears as an open circuit in the zero sequence network. Therefore, zero sequence data must be entered for all grounded transformers.

Connection codes *do not* indicate the inherent phase shift due to the relative connection of delta and wye windings. If this phase shift is to be represented, it must be specified in the positive sequence power flow data.

Virtually any impedance grounded two-winding transformer may be modeled automatically by specifying its winding and grounding impedances along with the appropriate connection code. Many three-winding transformer configurations may be handled in a similar manner; others require the addition of $3Z_g$ or other impedances to one or more of the winding impedances.

The winding numbers specified in zero sequence network diagrams are not directly associated with the nominal voltage levels of those windings. They are associated with corresponding winding connection only.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

4.14.1. Auto Transformer Equivalent Circuit

The equivalent circuit impedance of an auto transformer can be determined from a short circuit test performed as shown in Figure 4.9 .

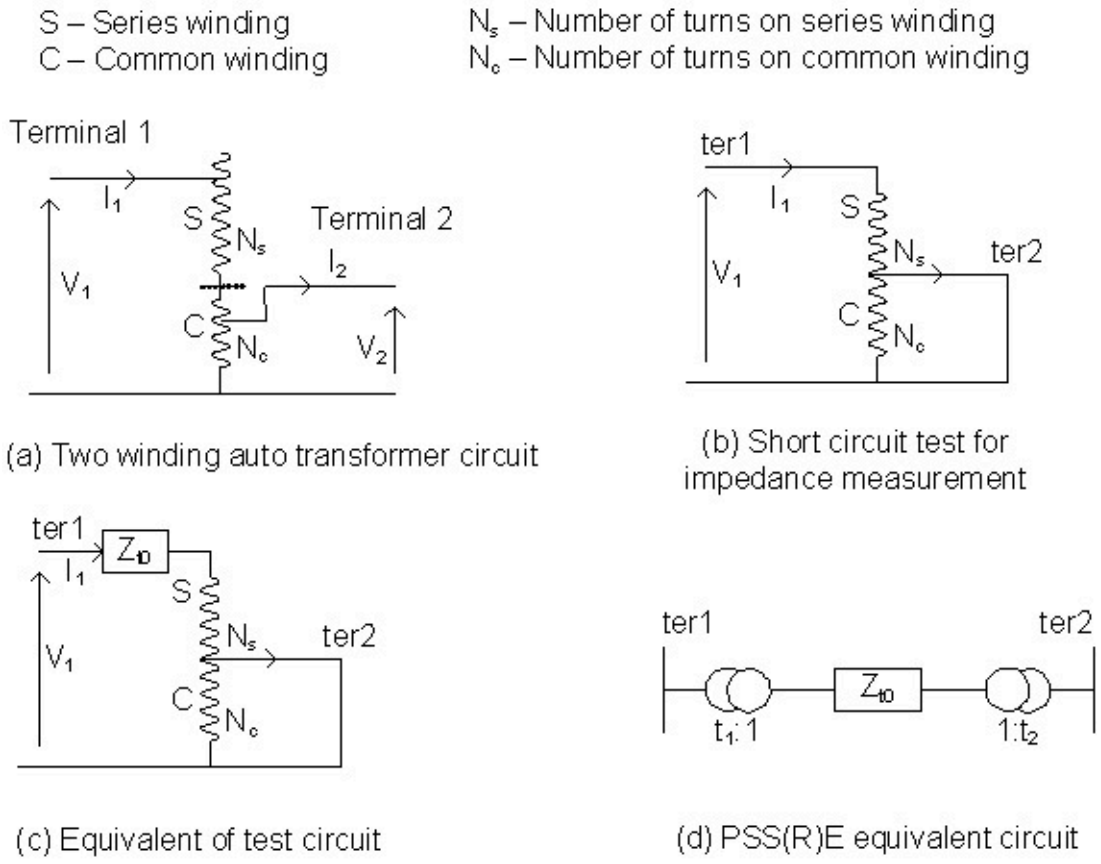


Figure 4.9. Auto-transformer Equivalent Circuit

Auto transformer ohmic impedance measured across circuit 1 when circuit 2 is short circuited (winding impedance) as shown in (b) and (c) is given by:

Winding Impedance $Z_{t0} = \frac{V_1}{I_1}$ ohms

Auto transformer turns ratio are defined as:

$$N = \frac{V_1}{V_2} = \frac{N_S + N_C}{N_C} = \frac{\text{NOMV1}}{\text{NOMV2}}$$

$$t_1 = \frac{\text{Winding 1 Voltage}}{\text{Winding 1 Nominal Voltage}} = \frac{\text{WINDV1}}{\text{NOMV1}}$$

$$t_2 = \frac{\text{Winding 2 Voltage}}{\text{Winding 2 Nominal Voltage}} = \frac{\text{WINDV2}}{\text{NOMV2}}$$

$$\frac{\text{KVA Winding}}{\text{KVA circuit}} = \frac{\text{N-1}}{N}$$

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

4.14.2. Two Winding Transformer Zero Sequence Networks

NOTE: * in grounding impedance notations (like Z_{g1}^{*}) in zero seq/uence network diagrams means PSS®E will automatically multiply that grounding impedance by a factor 3.

CC=1 and CC=11

Series Path, No Ground Path

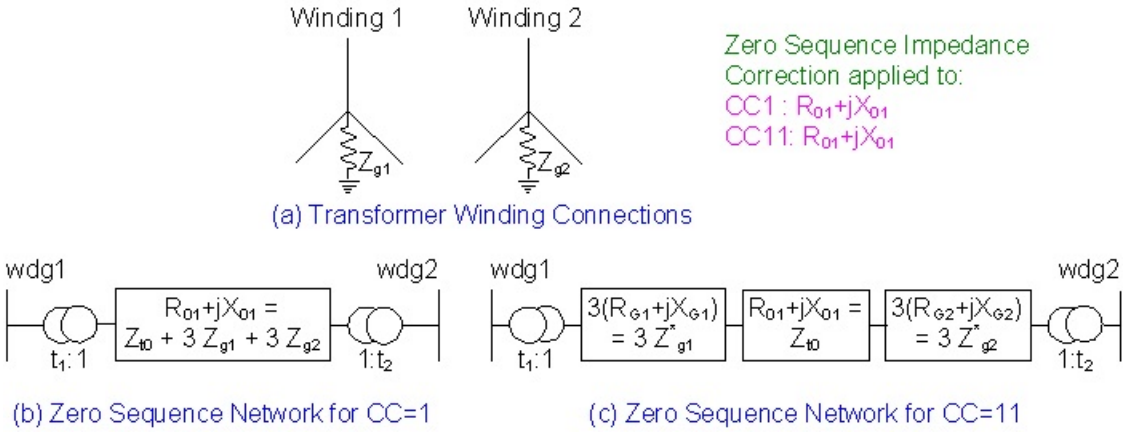


Figure 4.10. YNyn transformer zero sequence network

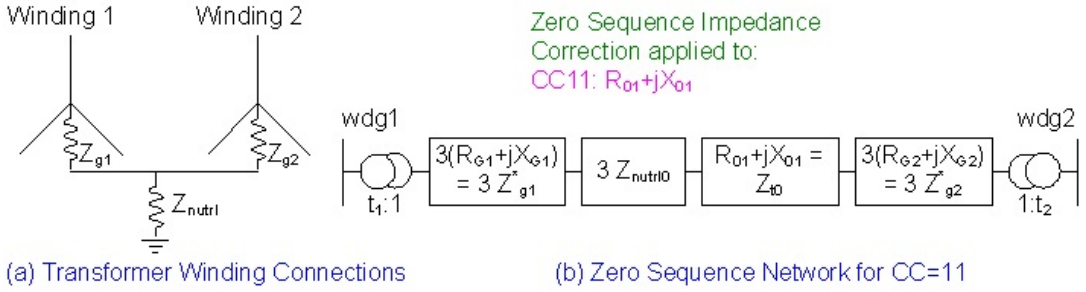


Figure 4.11. YNyn with neutral impedance transformer zero sequence network

CC=11 Set: • R01+jX01 = Z_{t0} • RG1+jXG1 = Z_{g1} • RG2+jXG2 = Z_{g2} • RNUTRL+jXNUTRL = Z_{nutrl}	PSS®E calculates pu Znutrl0 as below: $Z_{\text{nutrl pu}} = \frac{Z_{\text{nutrl ohm}} \times S_{\text{base12}}}{\text{wdg1kV}^2}$ $Z_{\text{nutrl0}} = Z_{\text{nutrl pu}} \frac{(N_{21}-1)^2}{N_{21}^2}$ $N_{21} = \frac{\text{Winding 2 Nominal Voltage}}{\text{Winding 1 Nominal Voltage}} = \frac{\text{NOMV2}}{\text{NOMV1}}$

NOTE: When CC=1, data specified for Zg1 and Zg2 will be ignored. Hint instead use CC=11.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

CC=2 and CC=12

No Series Path, Ground Path on Winding 1 side

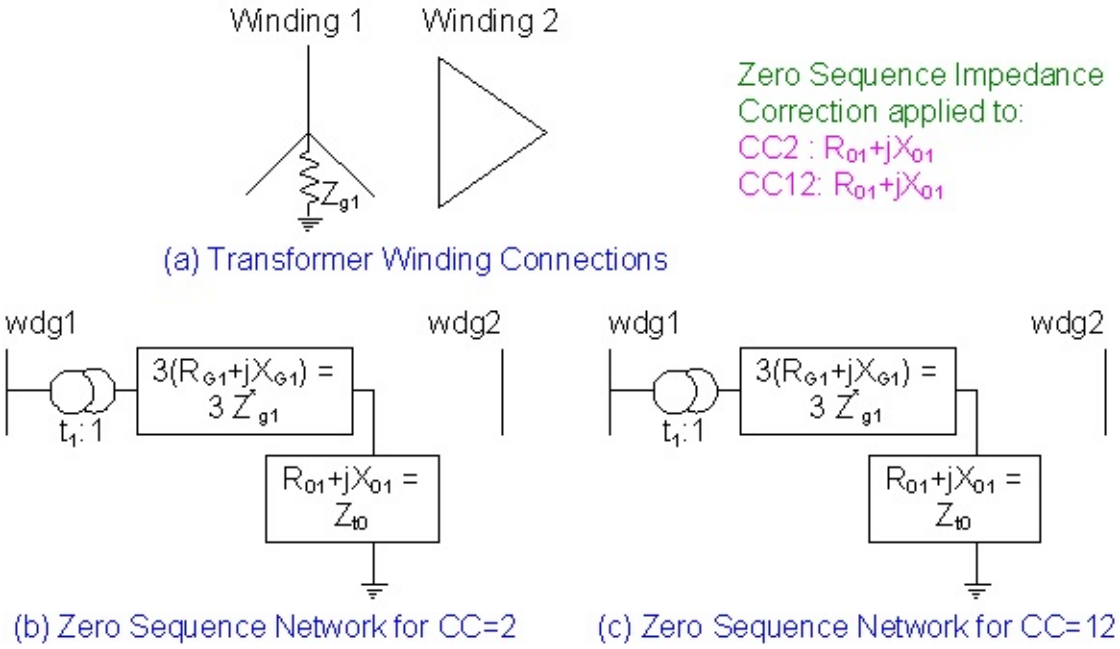


Figure 4.12. YNd transformer zero sequence network

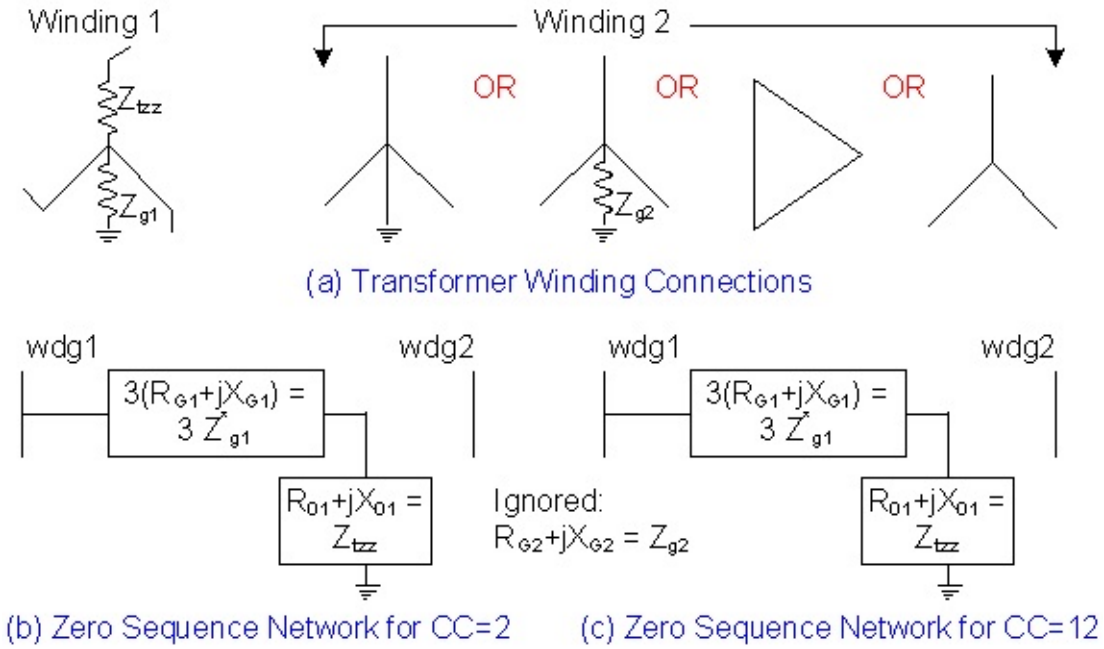


Figure 4.13. Znyn, Zny, or ZNd transformer zero sequence network

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

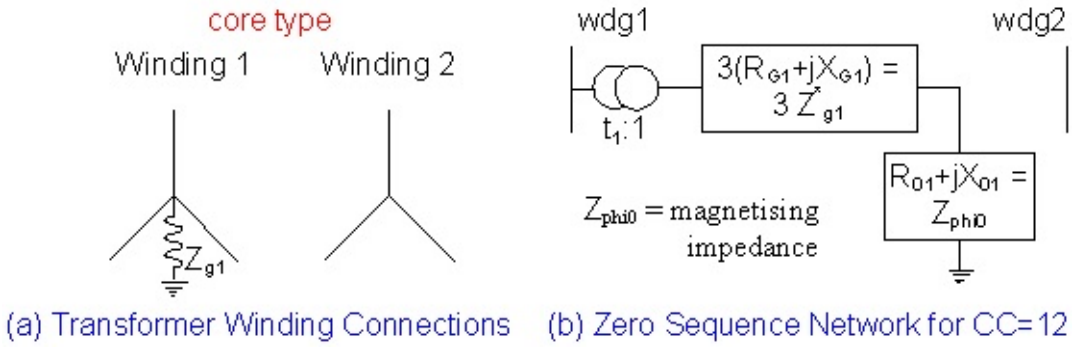


Figure 4.14. YNy core type transformer zero sequence network

NOTE: When CC=2, data specified for Zg1 will be used as grounding impedance of winding 1.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

CC=3 and CC=13

No Series Path, Ground Path on Winding 2 side

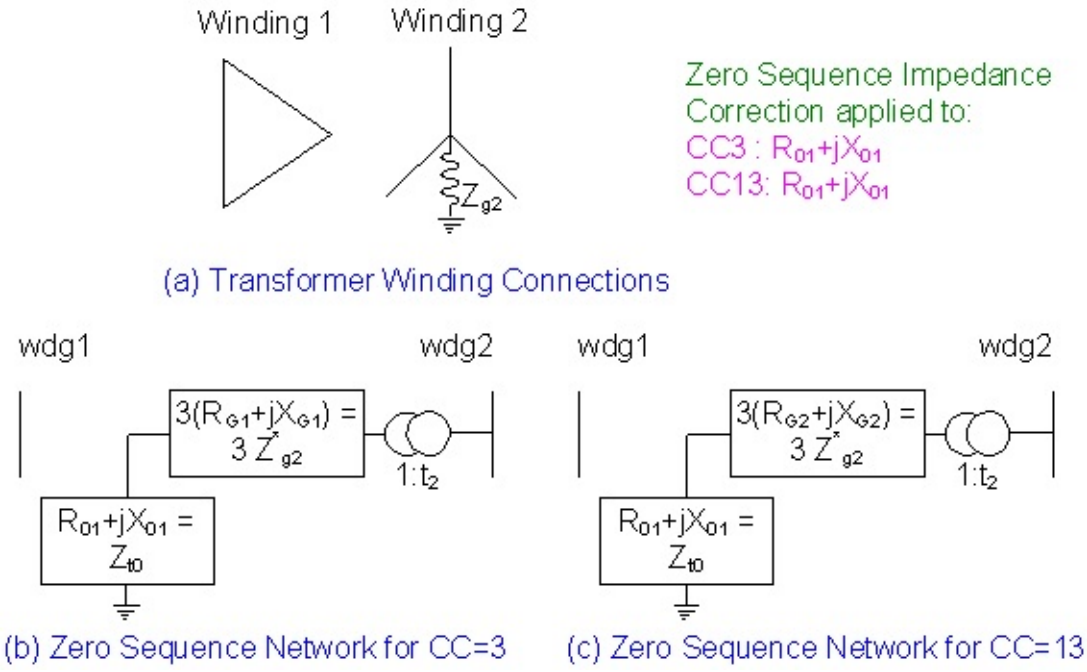


Figure 4.15. Dyn transformer zero sequence network

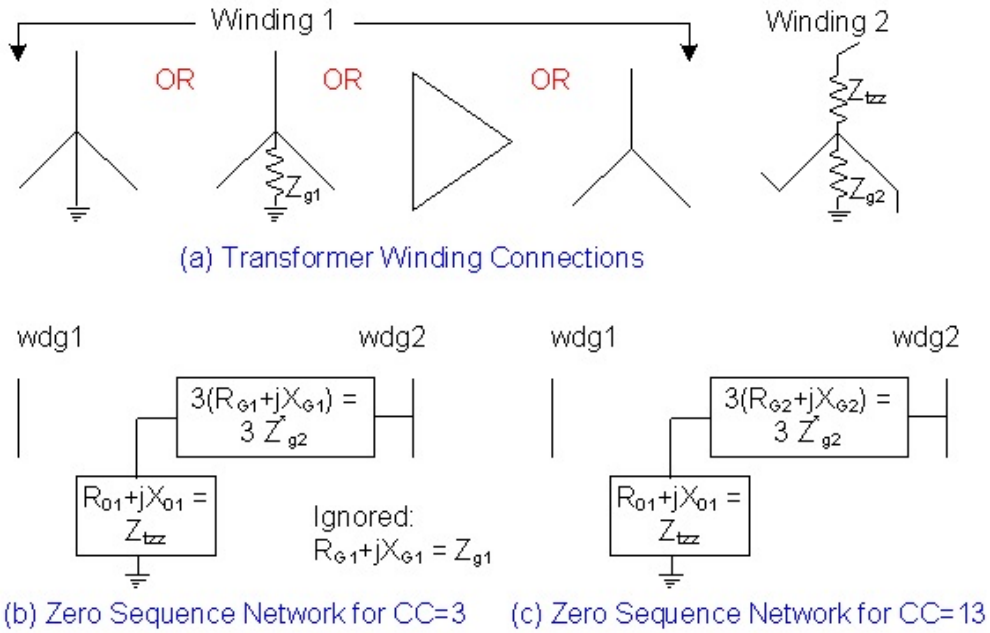


Figure 4.16. YNzn, Yzn or Dzn transformer zero sequence network

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

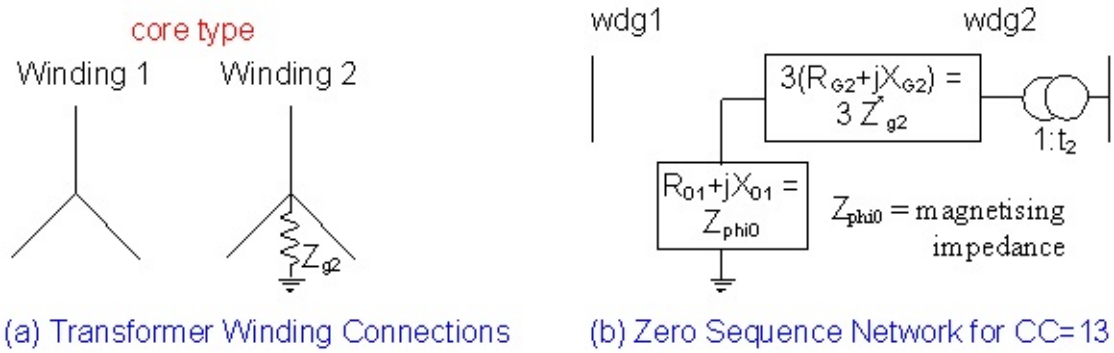


Figure 4.17. Yyn core type transformer zero sequence network

NOTE: To make backward compatible, when CC=3, data specified for Zg1 will be used as grounding impedance of winding 2. Hint instead use CC=13 and specify Zg2.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

CC=4 and CC=14

No Series Path, No Ground Path

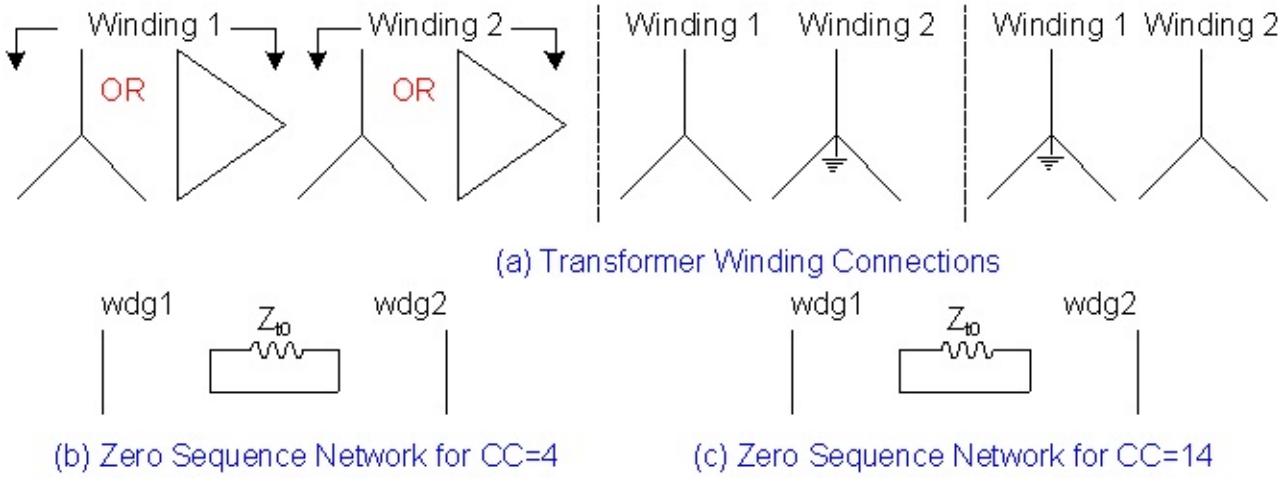


Figure 4.18. Yy, Yd, Dy, Dd, Yyn or YNy transformer zero sequence network

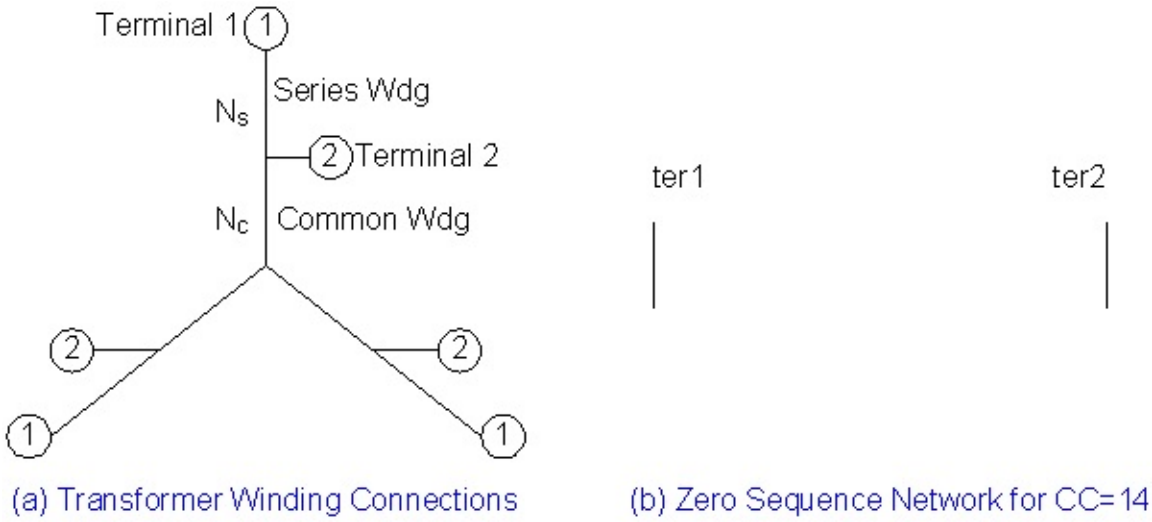


Figure 4.19. Ya ungrounded auto transformer zero sequence network

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

CC=5 and CC=15

Series Path, Ground Path on Winding 2 side

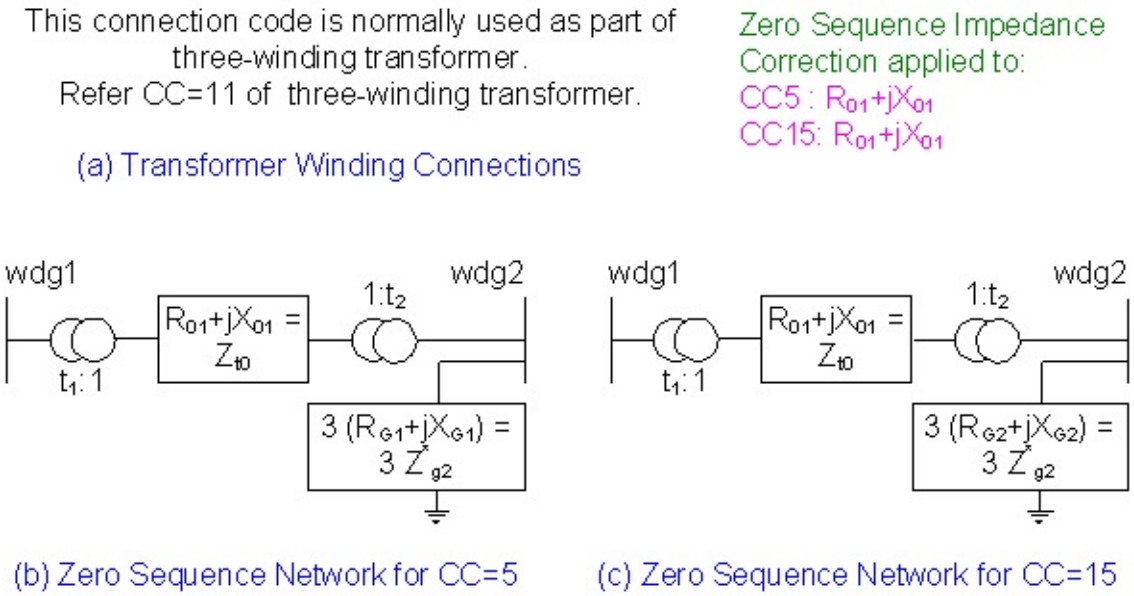


Figure 4.20. CC=5 or CC=15 zero sequence network

NOTE: To make backward compatible, when CC=5, data specified for Zg1 will be used as grounding impedance at winding 2 side. Hint instead use CC=15 and specify Zg2.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

CC=6 and CC=16

Wye grounded - delta with an earting transformer

No Series Path, Ground Path on Winding 1 side, Earthing transformer on Winding 2 Side

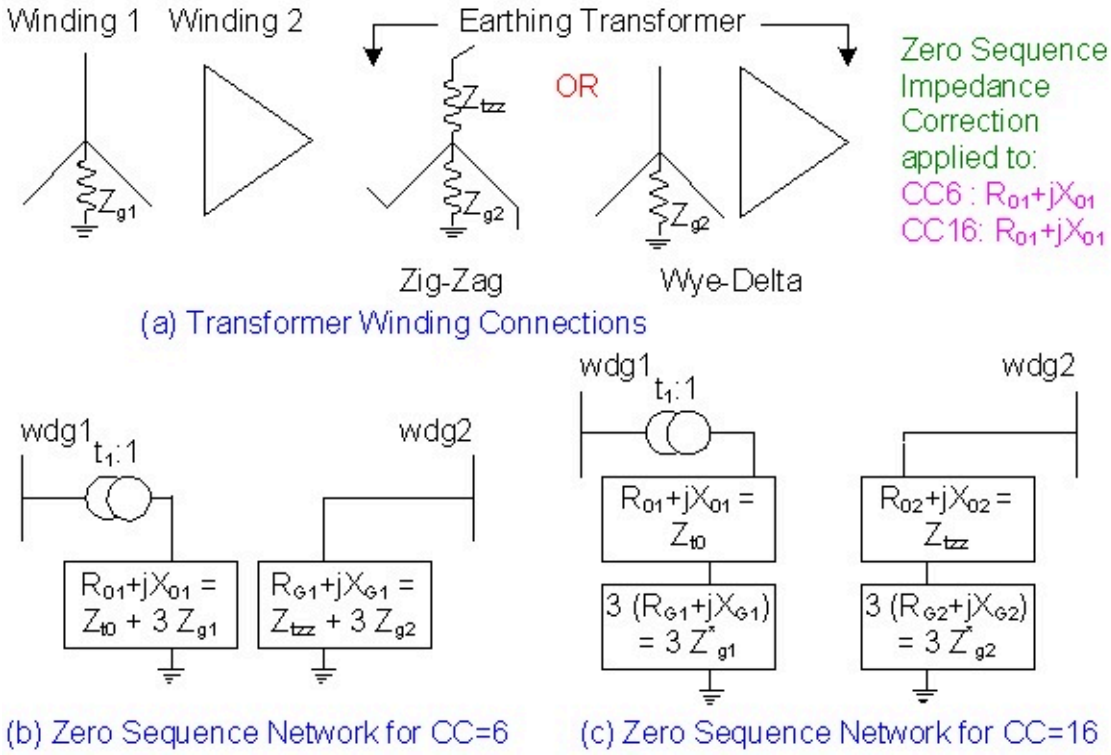


Figure 4.21. YNd transformer with Zigzag or YNd earthing transformer on winding 2 side zero sequence network

Note: Activity IECS applies impedance correction factors to transformer impedances. When main and earthing transformers are modeled separately with CC=2, impedance correction factors are applied to both main and earthing transformers. This is incorrect. The impedance correction factors should not applied to earthing transformer. So model main and earthing transformers correctly using CC=6 or CC=16.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

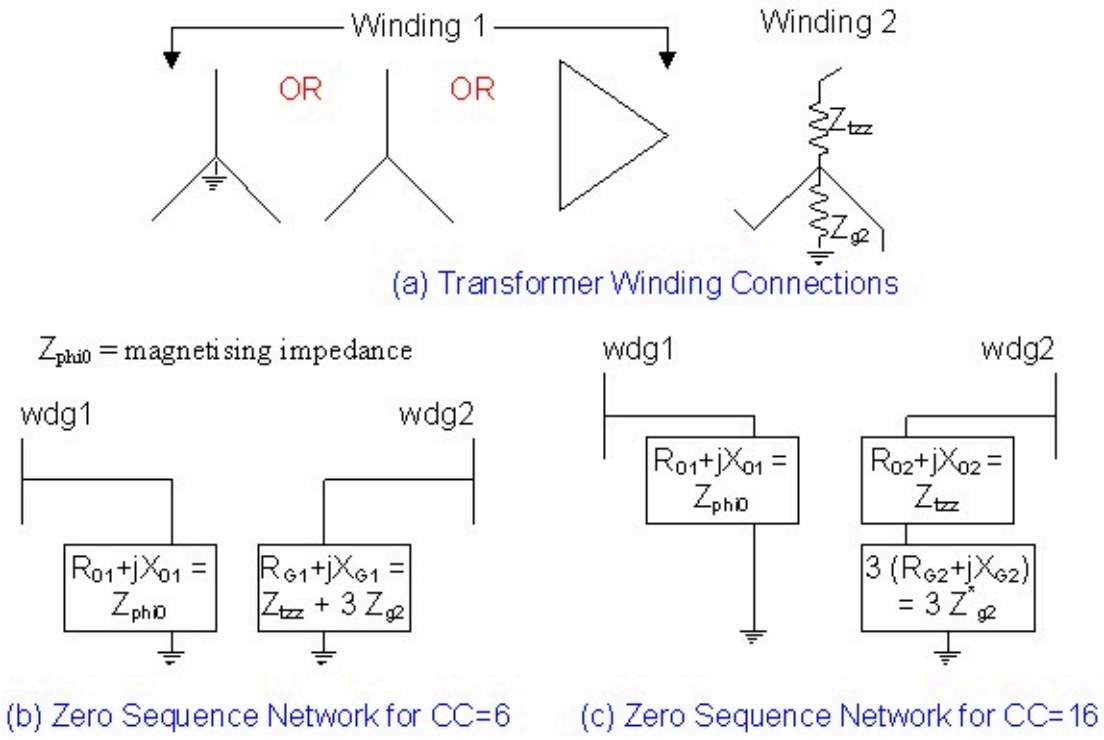


Figure 4.22. YNzn or Dzn core type transformer zero sequence network

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

CC=7 and CC=17

Delta with an earting transformer - Wye grounded

No Series Path, Earting transformer on Winding 1 Side, Ground Path on Winding 2 side

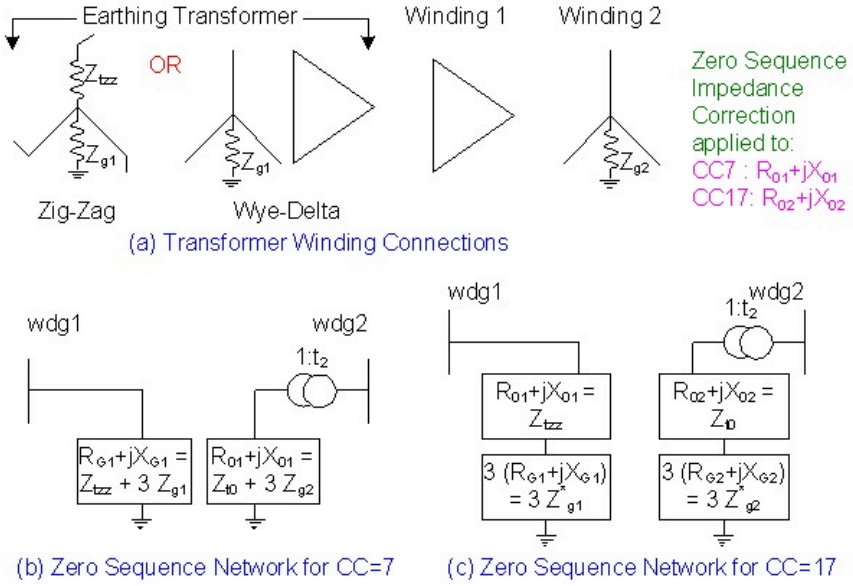


Figure 4.23. Dyn transformer with Zigzag or YNd earthing transformer on winding 1 side zero sequence network

No Series Path, Ground Path on Winding 2 side through core magnetizing impedance

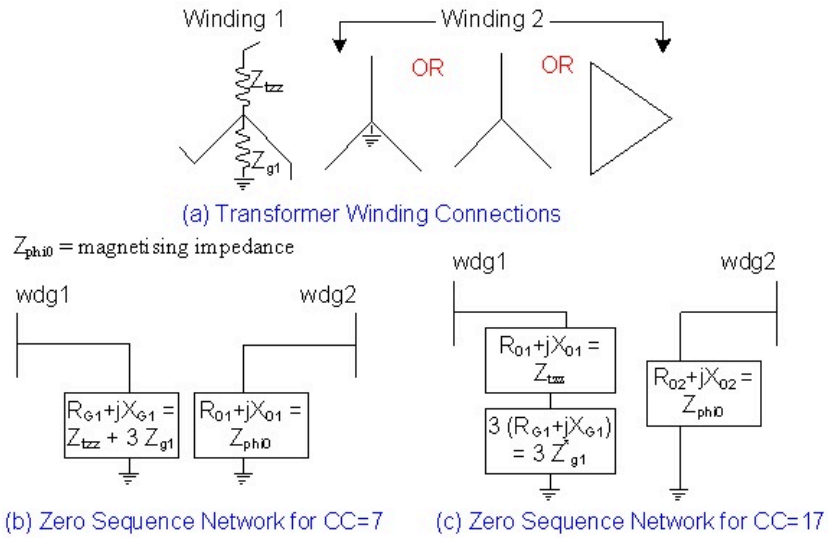


Figure 4.24. ZNyn or ZNd core type transformer zero sequence network

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

CC=8 and CC=18

Wye grounded - wye grounded three legged core type auto transformer

Series Path, Ground Path each side

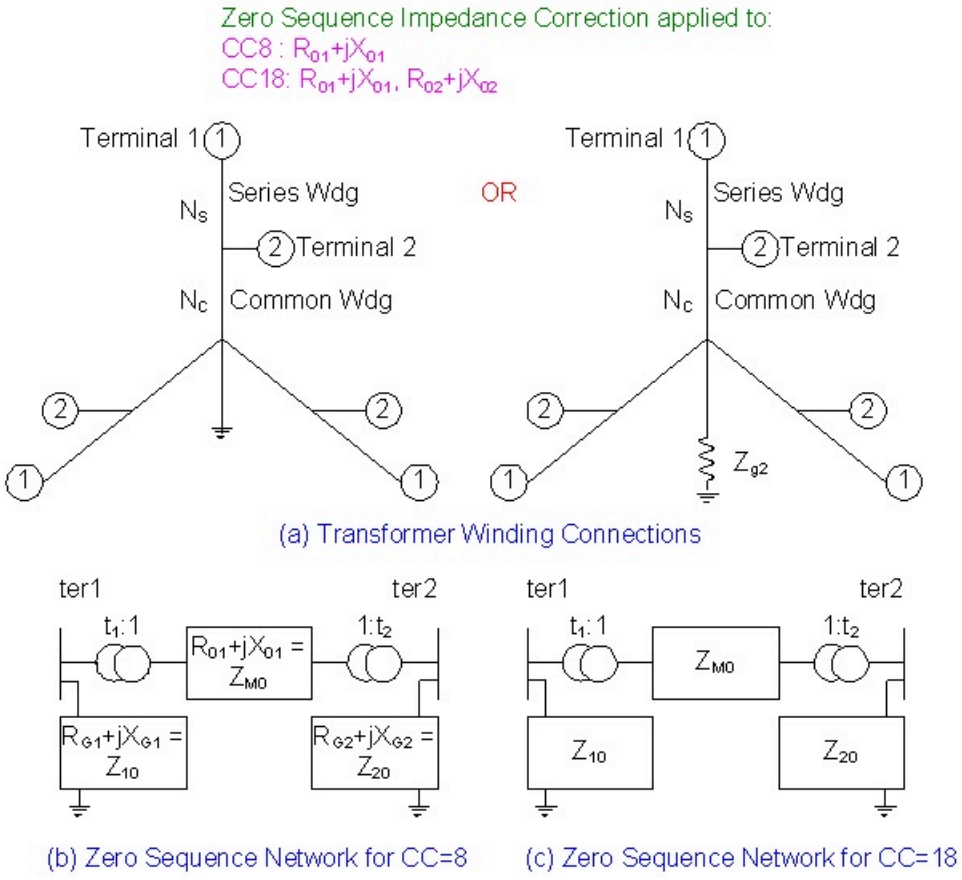


Figure 4.25. YNa core type auto transformer zero sequence network

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

CC=8	CC=18
Calculate: Z10, Z20, ZM0 from equations as in CC=18 Set: - R01+jX01 = Z_{M0} - RG1+jXG1 = Z_{10} - RG2+jXG2 = Z_{20} CC=18 Set: - R01+jX01 = Z_{to} - R02+jX02 = Z_{phiC} - RG2+jXG2 = Z_{g2}	PSS®E calculates pu values as: $Z_{1S} = \frac{N-2}{2N} Z_{CS} - \frac{3(N-1)}{N^2} Z_{g2}$ $Z_{2S} = \frac{1}{2} Z_{CS} + \frac{3(N-1)}{N} Z_{g2}$ $Z_{SG} = \frac{N}{N-1} Z_{phiC} - \frac{1}{2} Z_{CS} + \frac{3}{N} Z_{g2}$ $Z_{M0} = Z_{1S} + Z_{2S} + \frac{Z_{1S} Z_{2S}}{Z_{SG}}$ $Z_{10} = Z_{1S} + Z_{SG} + \frac{Z_{1S} Z_{SG}}{Z_{2S}}$ $Z_{20} = Z_{2S} + Z_{SG} + \frac{Z_{2S} Z_{SG}}{Z_{1S}}$

Where:

Z_{phiC} is the magnetising (exciting) impedance as measured on the Common Winding with series winding on the same core open circuited and zero sequence voltage is applied to Terminal 2.

Refer auto transformer equivalent circuit represention description for definition of N and Z_{to}.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

CC=9 and CC=19

- Series Path on each side, Ground Path at the junction point of the two series paths
- Wye grouned - wye grounded three legged core type auto transformer

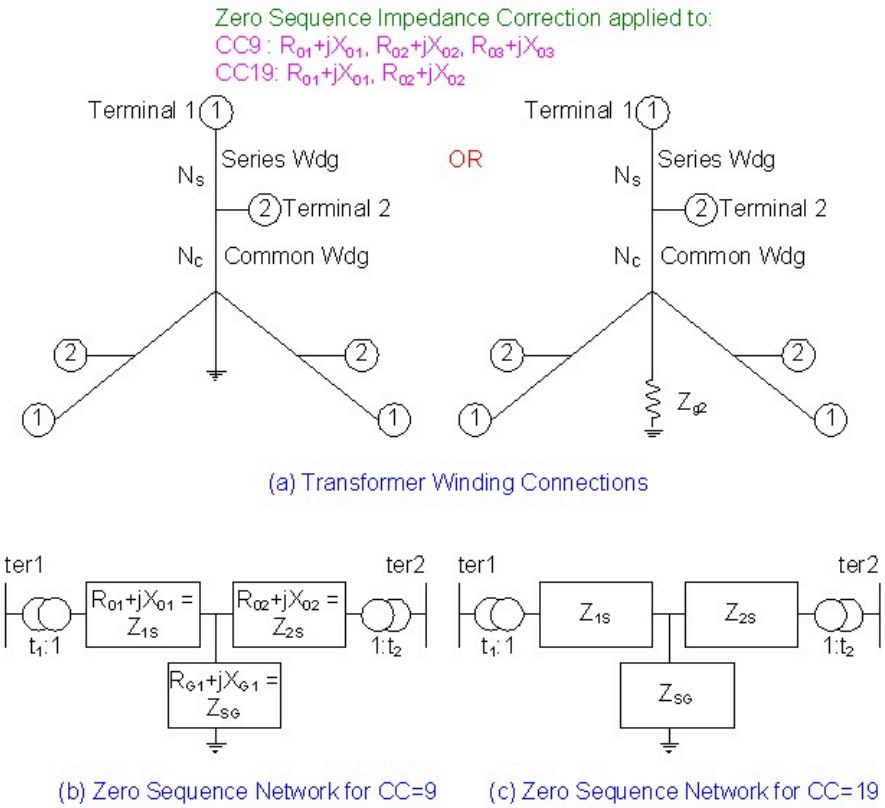


Figure 4.26. YNa core type auto transformer zero sequence network

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

CC=9	CC=19
Calculate: Z_{1S}, Z_{2S}, Z_{SG} from equations as in CC=19 Set: - R01+jX01 = Z_{1S} - R02+jX02 = Z_{2S} - RG1+jXG1 = Z_{SG}	Set: - R01+jX01 = Z_{to} - R02+jX02 = Z_{phiC} - RG2+jXG2 = Z_{g2} PSS®E calculates pu values as: $Z_{1S} = \frac{N-2}{2N} Z_{to} - \frac{3(N-1)}{N^2} Z_{g2}$ $Z_{2S} = \frac{1}{2} Z_{to} + \frac{3(N-1)}{N} Z_{g2}$ $Z_{SG} = \frac{N}{N-1} Z_{phiC} - \frac{1}{2} Z_{to} + \frac{3}{N} Z_{g2}$

Where:

Z_{phiC} is the magnetising (exciting) impedance as measured on the Common Winding with series winding on the same core open circuited and zero sequence voltage is applied to Terminal 2.

Refer auto transformer equivalent circuit representation description for definition of N and Z_{CS}.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

CC=20

- Series Path on each side, Ground Path at the junction point of the two series paths
- Wye grouned - wye grounded core type transformer

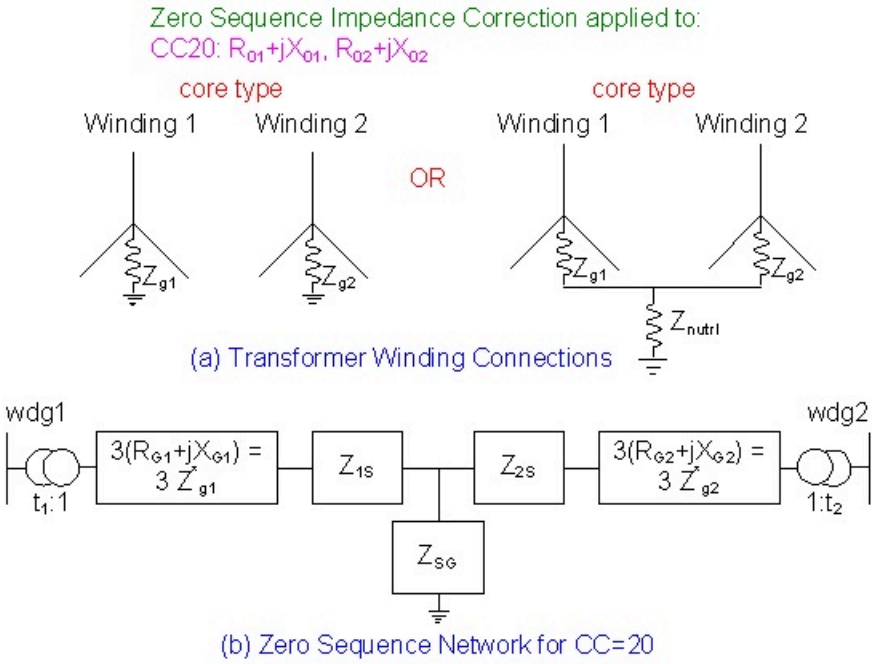


Figure 4.27. YNyn with or without neutral impedance core type transformer zero sequence network

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

Set:	PSS®E calculates pu values as:
- R01+jX01 = Zt0 - R02+jX02 = Zphi0 - RG1+jXG1 = Zg1 - RG2+jXG2 = Zg2 - RNUTRL+jXNUTRL = Znutrl	$N_{21} = \frac{\text{Winding 2 Nominal Voltage}}{\text{Winding 1 Nominal Voltage}} = \frac{\text{NOMV2}}{NOMV1}$ $Z_{\text{nutrl}} = Z_{\text{nutrl pu}} = Z_{\text{nutrl ohm}} \frac{S_{BASE12}}{wdg1kV^2}$ $Z_{1s} = \frac{1}{2} Z_{t0} - 3\frac{N_{21}-1}{N_{21}^2} Z_{\text{nutrl}}$ $Z_{2s} = \frac{1}{2} Z_{t0} + 3\frac{N_{21}-1}{N_{21}} Z_{\text{nutrl}}$ $Z_{SG} = Z_{phi0} - \frac{1}{2} Z_{t0} + 3\frac{1}{N_{21}} Z_{nutrl}$

Where:

Z_{phi1} is the magnetising (exciting) impedance as measured on Winding 1 with winding 2 on the same core open circuited and zero sequence voltage is applied to Winding 1.

Z_{phi2} is the magnetising (exciting) impedance as measured on Winding 2 with winding 2 on the same core open circuited and zero sequence voltage is applied to Winding 2.

$Z_{phi0} = Z_{phi1}$ or Z_{phi2}, if $Z_{phi1} = Z_{phi2}$

$Z_{phi0} = 0.5(Z_{phi1} + Z_{phi2})$ if $Z_{phi1} \neq Z_{phi2}$

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

CC=21

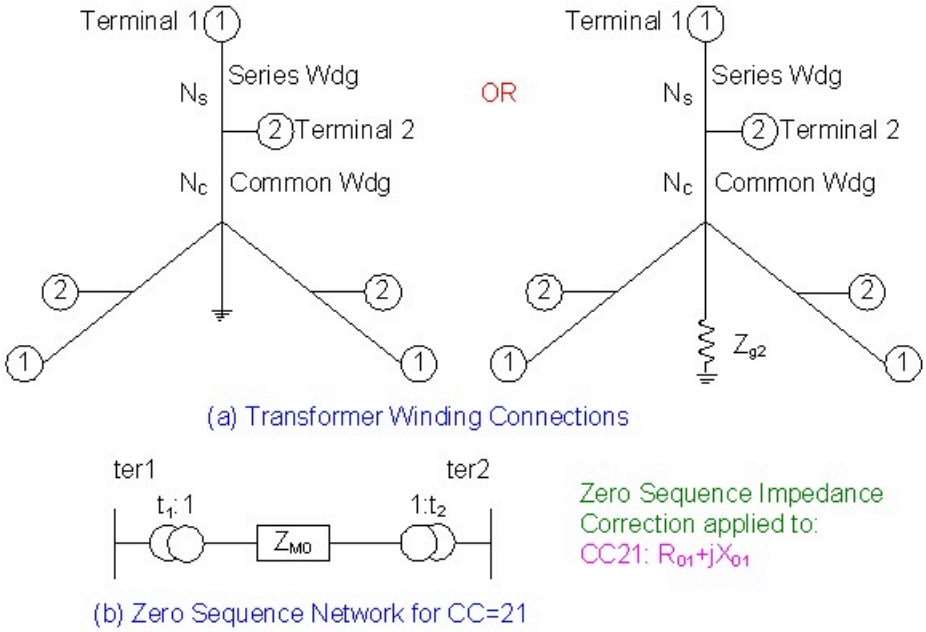


Figure 4.28. YNa auto transformer zero sequence network

Set:	PSS®E calculates pu values as:
- R01+jX01 = Zto - RG2+jXG2 = Zg2	$Z_{M0} = Z_{t0}\left(\frac{N-1}{N}\right) + 3\left(\frac{N-1}{N}\right)^2 Z_{g2}$

Refer auto transformer equivalent circuit represention description for definition of N and Z_{to}.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

CC=22

Wye - wye ungrounded core type auto transformer

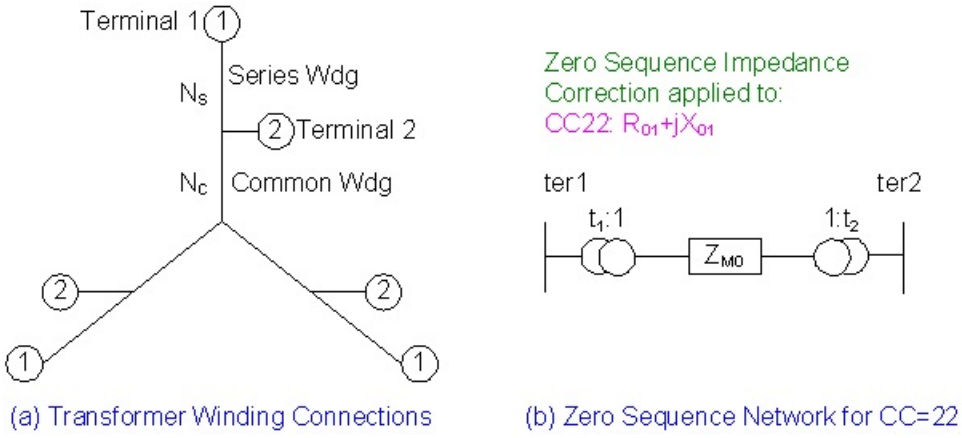


Figure 4.29. Ya ungrounded core type auto transformer zero sequence network

Set:	PSS®E calculates pu values as:
- R01+jX01 = Z_{phiS}	$Z_{M0} = \frac{N-1}{N} Z_{phiS}$

Where:

Z_{phiS} is the magnetising (exciting) impedance as measured on the Series Winding with all the other windings on the same core open circuited and zero sequence voltage is applied to Terminal 1.

Refer auto transformer equivalent circuit representation description for definition of N.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

4.14.3. Three Winding Transformer Zero Sequence Network

Note:

Impedance Notations used in the Zero Sequence Networks:

$Z_{12}{}^{0}$ = Zero sequence leakage impedance between winding 1 and winding 2

$Z_{23}{}^{0}$ = Zero sequence leakage impedance between winding 2 and winding 3

$Z_{31}{}^{0}$ = Zero sequence leakage impedance between winding 3 and winding 1

Z_{g1} = Winding 1 grounding impedance

Z_{g2} = Winding 2 grounding impedance

Z_{g3} = Winding 3 grounding impedance

Znutrl = Neutral grounding impedance

The three Winding transformer is modeled as T-model in zero sequence network. The impedances of this T-model are calculated from transformer test report in-between winding impedances as below.

$Z_{t1}{}^{0} = 0.5(Z_{12}{}^{0} + Z_{31}{}^{0} - Z_{23}{}^{0})$

$Z_{t2}{}^{0} = 0.5(Z_{12}{}^{0} + Z_{23}{}^{0} - Z_{31}{}^{0})$

$Z_{t3}{}^{0} = 0.5(Z23^{0} + Z_{31}{}^{0} - Z_{12}{}^{0})$

where:

$Z_{t1}{}^{0}$ = Zero sequence impedance between winding 1 and star point

$Zt_{2}{}^{0}$ = Zero sequence impedance between winding 2 and star point

$Zt_{3}{}^{0}$ = Zero sequence impedance between winding 3 and star point

The in-between winding impedances can be calculated from T-model impedances as below:

$Z_{12} = Z_1 + Z_2$

$Z_{23} = Z_2 + Z_3$

$Z_{31} = Z_3 + Z_1$

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

CC=1 and CC=11 (511)

Series path in all three Windings, Winding 1 ground path at star point bus

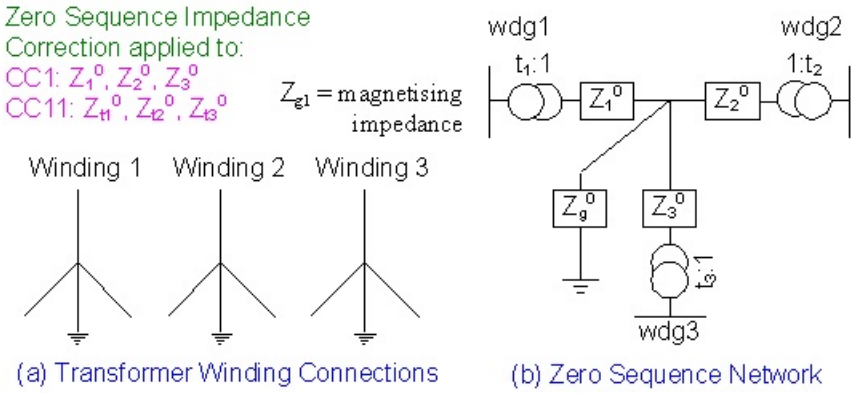


Figure 4.30. YNynyn with magnetising impedance modelled transformer zero sequence network

CC=1 or CC=511	**CC=11**
Calculate: Z_1^0, Z_2^0, Z_3^0 from equations as in CC=11 Set (pu): - R01+jX01 = Z_1^0 - R02+jX02 = Z_2^0 - R03+jX03 = Z_3^0 - RG1+jXG1 = Z_{g1} Assigned: - Z_1^0 = R01+jX01 - Z_2^0 = R02+jX02 - Z_3^0 = R03+jX03 PSS®E automatically multiplies grounding impedance by 3. - Z_g^0 = 3(RG1+jXG1)	Set: - R01+jX01 = Z_{12}^0 - R02+jX02 = Z_{23}^0 - R03+jX03 = Z_{31}^0 - RG1+jXG1 = Z_{g1} PSS®E calculates pu values as: - Z_{t1}^0, Z_{t2}^0, Z_{t3}^0 - Z_1^0 = Z_{t1}^0 - Z_2^0 = Z_{t2}^0 - Z_3^0 = Z_{t3}^0 - Z_g^0 = 3(RG1+jXG1)

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

CC=2 and CC=12 (113)

Series path in Windings 1 and 2, Winding 3 ground path at star point bus

(For YNad, refer CC=17)

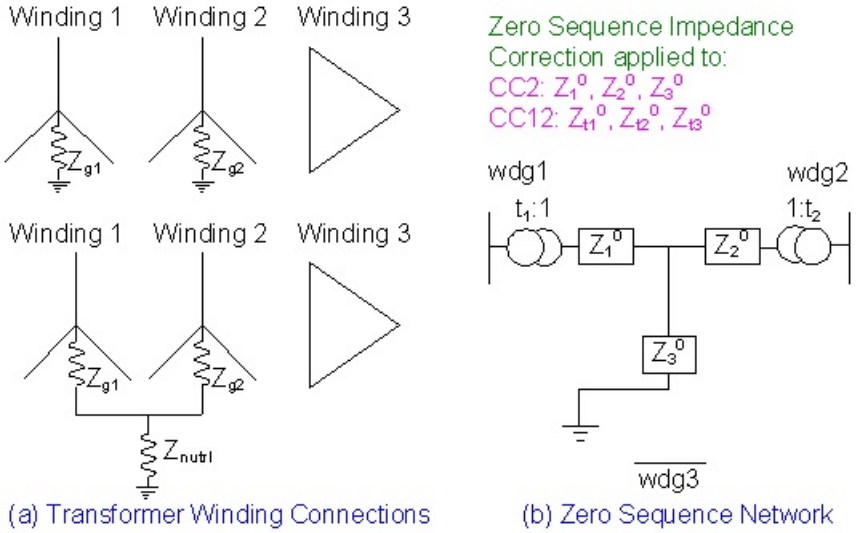


Figure 4.31. YNynd transformer zero sequence network

CC=2 or CC=113	**CC=12**	Calculated (pu):
Calculate: $Z_{t1}{}^{0}$, $Z2^{0}$, $Z3^{0}$ from equations as in CC=12 Set (pu): - R01+jX01 = $Z_{t1}{}^{0}$ - R02+jX02 = $Z_{2}{}^{0}$ - R03+jX03 = $Z_{3}{}^{0}$ - RG1+jXG1 = Z_{g3} Assigned: - $Z1^{0}$ = R01+jX01 - $Z2^{0}$ = R02+jX02 - $Z3^{0}$ = R03+jX03+ $3Z_{g3}$	Set: - R01+jX01 = $Z_{12}{}^{0}$ - R02+jX02 = $Z_{23}{}^{0}$ - R03+jX03 = $Z_{31}{}^{0}$ - RG1+jXG1 = Z_{g1} - RG2+jXG2 = Z_{g2} Calculated (pu): (no Znutrl) - $Z_{t1}{}^{0}$, $Z_{t2}{}^{0}$, $Z_{t3}{}^{0}$ - $Z_{1}{}^{0}$ = $Zt_{1}{}^{0}$+ $3Z_{g1}$ - $Z_{2}{}^{0}$ = $Z_{t2}{}^{0}$ + $3Zg_{2}$ - $Z_{3}{}^{0}$ = $Z_{t3}{}^{0}$	(with Znutrl) $N_{21} = \frac{Winding\ 2\ Nominal\ Voltage}{Winding\ 1\ Nominal\ Voltage} = \frac{NOMV2}{NOMV1}$ $Z_1{}^0 = Z_{t1}{}^0 + 3Z_{g1} + 3\frac{N_{21}-1}{N_{21}}Z_{nutrl}$ $Z_2{}^0 = Z_{t2}{}^0 + 3Z_{g2} - 3\frac{N_{21}-1}{N_{21}{}^2}Z_{nutrl}$ $Z_3{}^0 = Z_{t3}{}^0 + 3\frac{1}{N_{21}}Z_{nutrl}$

Note: When CC=2 or CC=113, Z_{g3} assigned is a fictious grounding impedance derived from T-model.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

CC=3 and CC=13 (313)

Series path in Windings 2, ground paths from Windings 1 and 3 at star point bus

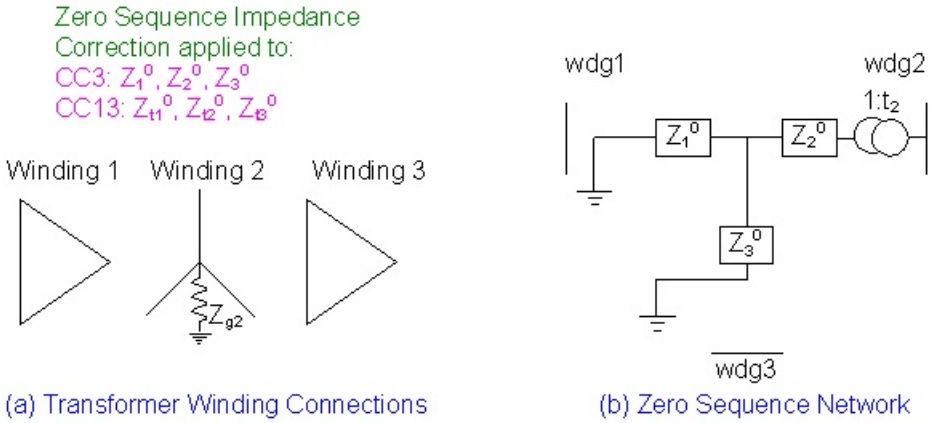


Figure 4.32. Dynd transformer zero sequence network

CC=3 or CC=313	**CC=13**
Calculate:	Set:
Z_1^0, Z_2^0, Z_3^0 from equations as in CC=13	- R01+jX01 = Z_{12}^0
Set (pu):	- R02+jX02 = Z_{23}^0
- R01+jX01 = Z_1^0	- R03+jX03 = Z_{31}^0
- R02+jX02 = Z_2^0	- RG2+jXG2 = Z_{g2}
- R03+jX03 = Z_3^0	Calculated (pu):
- RG1+jXG1 = Z_{g1}	- Z_{t1}^0, Z_{t2}^0, Z_{t3}^0
Assigned:	- $Z_1^0 = Z_{t1}^0$
- Z_1^0 = R01+jX01 + 3Z_{g1}	- $Z_2^0 = Z_{t2}^0$ + 3(RG2+jXG2)
- Z_2^0 = R02+jX02	- $Z_3^0 = Z_{t3}^0$
- Z_3^0 = R03+jX03	

Note: When CC=3 or CC=313, Z_{g1} assigned is a fictious grounding impedance derived from T-model.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

CC=4 and CC=14 (333)

No series paths, ground paths from all three Windings at the star point bus

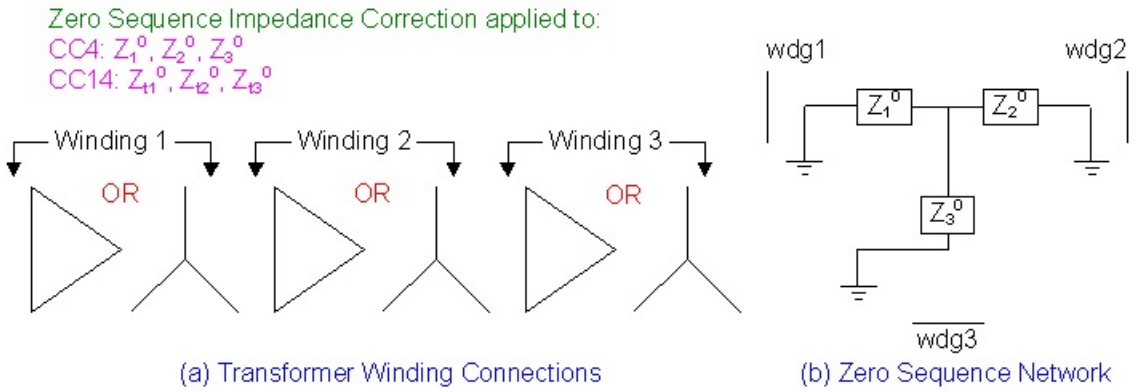


Figure 4.33. Ddd, Ddy, Dyd, Dyy, Ydd, Ydy, Yyd or Yyy transformer zero sequence network

CC=4 or CC=333	**CC=14**
Calculate:	Set:
Z_1^0, Z_2^0, Z_3^0 from equations as in CC=14	- R01+jX01 = Z_{12}^0
Set (pu):	- R02+jX02 = Z_{23}^0
- R01+jX01 = Z_1^0	- R03+jX03 = Z_{31}^0
- R02+jX02 = Z_2^0	Calculated (pu):
- R03+jX03 = Z_3^0	- Z_{t1}^0, Z_{t2}^0, Z_{t3}^0
Assigned:	- Z_1^0 = Z_{t1}^0
- Z_1^0 = R01+jX01	- Z_2^0 = Z_{t2}^0
- Z_2^0 = R02+jX02	- Z_3^0 = Z_{t3}^0
- Z_3^0 = R03+jX03	

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

CC=5 and CC=15 (121)

Series path in Windings 1 and 3, ground path at Winding 2 side bus

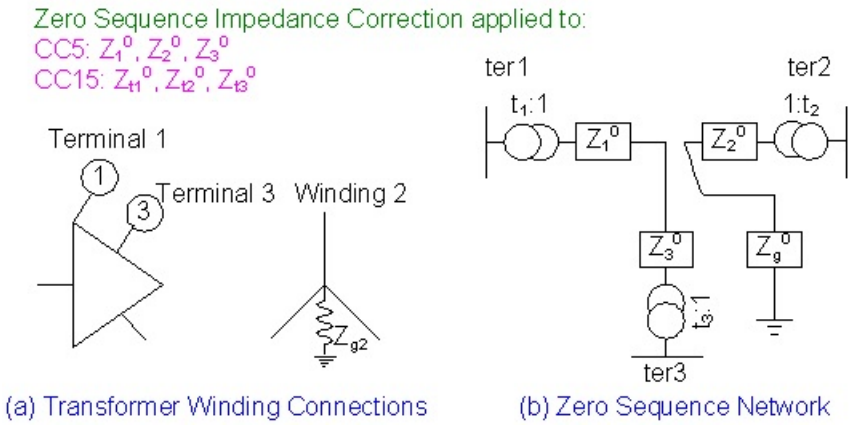


Figure 4.34. Dynd auto transformer zero sequence network

CC=5 or CC=121	**CC=15**
Calculate: Z_1^0, Z_2^0, Z_3^0 from equations as in CC=15 Set (pu): - R01+jX01 = Z_1^0 - R02+jX02 = Z_2^0 - R03+jX03 = Z_3^0 - RG2+jXG2 = Z_{g2} Assigned: - Z_1^0 = R01+jX01 - Z_2^0 = R02+jX02 - Z_3^0 = R03+jX03 Calculated (pu) - Z_g^0 = 3(RG2+jXG2)	Set: - R01+jX01 = Z_{12}^0 - R02+jX02 = Z_{23}^0 - R03+jX03 = Z_{31}^0 - RG2+jXG2 = Z_{g2} Calculated (pu): - Z_{t1}^0, Z_{t2}^0, Z_{t3}^0 - Z_1^0 = Z_{t1}^0 - Z_2^0 = Z_{t2}^0 - Z_3^0 = Z_{t3}^0 - Z_g^0 = 3(RG2+jXG2)

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

CC=6 and CC=16 (111)

Series path in all three Windings, no ground path

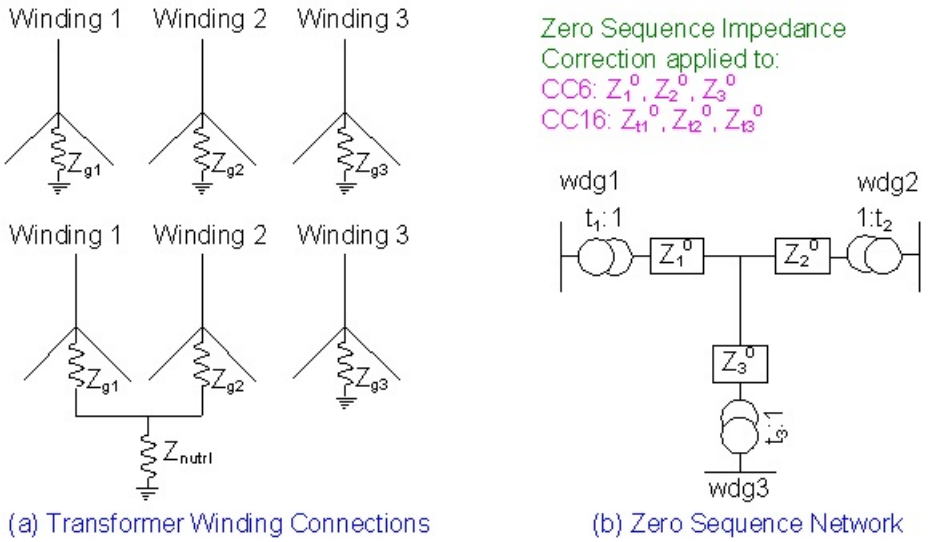


Figure 4.35. YNynyn transformer zero sequence network

CC=6 or CC=111	**CC=16**	Calculated (pu):
Calculate:	Set:	(with Znutrl)
Z_1^0, Z_2^0, Z_3^0 from equations as in CC=16	- R01+jX01 = Z_{12}^0	- Calculate Z_{t1}^0, Z_{t2}^0, Z_{t3}^0
	- R02+jX02 = Z_{23}^0	$N_{21} = \frac{NOMV2}{NOMV1}$
Set (pu):	- R03+jX03 = Z_{31}^0	
- R01+jX01 = Z_1^0	- RG1+jXG1 = Z_{g1}	$-Z_1^0 = Z_{t1}^0 + 3Z_{g1} + 3\frac{N_{21}-1}{N_{21}}Znutrl$
- R02+jX02 = Z_2^0	- RG2+jXG2 = Z_{g2}	
- R03+jX03 = Z_3^0	- RG3+jXG3 = Z_{g3}	$-Z_2^0 = Z_{t2}^0 + 3Z_{g2} - 3\frac{N_{21}-1}{N_{21}^2}Znutrl$
Assigned:	Calculated (pu):	
- Z_1^0 = R01+jX01	(without Znutrl)	$-Z_3^0 = Z_{t3}^0 + 3Z_{g3} + 3\frac{1}{N_{21}}Znutrl$
- Z_2^0 = R02+jX02	- Z_{t1}^0, Z_{t2}^0, Z_{t3}^0	
- Z_3^0 = R03+jX03	- $Z_1^0 = Z_{t1}^0 + 3$ (RG1+jXG1)	
	- $Z_2^0 = Z_{t2}^0 + 3$ (RG2+jXG2)	
	- $Z_3^0 = Z_{t3}^0 + 3$ (RG3+jXG3)	

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

CC=17

Series path in Windings 1 and 2, Winding 3 ground path at star point bus

(For wye grounded - wye grounded - delta non auto transformer, refer CC=12)

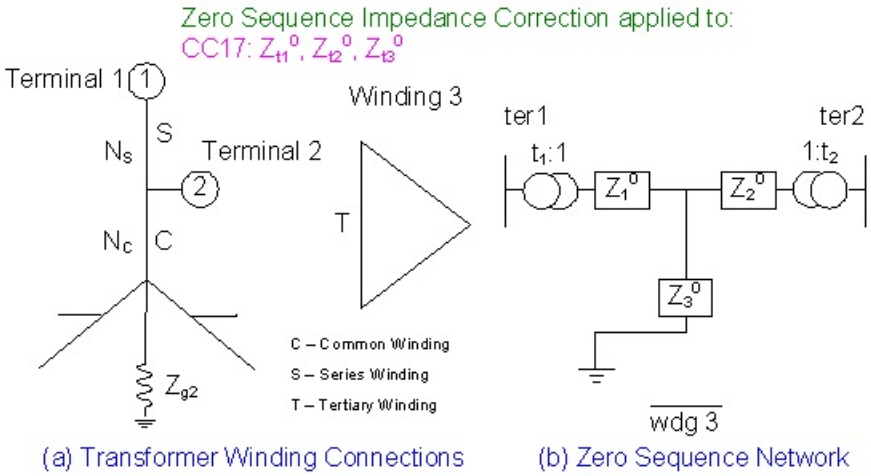


Figure 4.36. Ynad (grounded) auto transformer zero sequence network

CC=17	Calculated (pu):
Set: - R01+jX01 = Z_{12}^0 - R02+jX02 = Z_{23}^0 - R03+jX03 = Z_{31}^0 - RG2+jXG2 = Z_{g2}	– *calculate* $Z_{t1}^0, Z_{t2}^0, Z_{t3}^0$ $Z_1^0 = Z_{t1}^0 - \frac{3(N-1)}{N^2} Z_{g2}$ $Z_2^0 = Z_{t2}^0 + \frac{3(N-1)}{N} Z_{g2}$ $Z_3^0 = Z_{t3}^0 + \frac{3}{N} Z_{g2}$

For auto transformers with one/two neutral connections taken out, IEEE Std C57.12.90-2015 standard provides the test procedure and T-model impedance calculations from that test data.

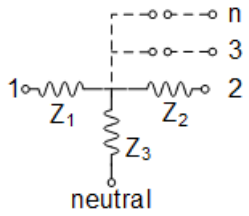


Figure 4.37. Equivalent zero sequnce network for a transformer with two externally available neutrals and 0° phase shift between windings 1 and 2

Following four test results are used to determine zero sequence network:

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

- Test 1 - Apply voltage winding 1 and its neutral. All other windings are open-circuited. The measured zero sequence is represented by Z_{1N0}.
- Test 2 - Apply voltage winding 1 and its neutral. Short Winding 2 and its neutral. All other windings may be open-circuited or shorted. The measured zero sequence is represented by Z_{1Ns}.
- Test 3 - Apply voltage winding 2 and its neutral. All other windings are open-circuited. The measured zero sequence is represented by Z_{2N0}.
- Test 4 - Apply voltage winding 2 and its neutral. Short Winding 1 and its neutral. All other windings may be open-circuited or shorted. The measured zero sequence is represented by Z_{2Ns}.

The zero sequence network T-model impedances are calculated as below.

$$Z_3 = +\sqrt{Z_{2N0}\left(Z_{1N0} - Z_{1Ns}\right)} = +\sqrt{Z_{1N0}\left(Z_{2N0} - Z_{2Ns}\right)}$$

$$Z_2 = Z_{2N0} - Z_3$$

$$Z_1 = Z_{1N0} - Z_3$$

Set PSSE seqence data as below.

- $R_{01} + j\,X_{01} = Z_{12}{}^{0} = Z_1 + Z_2$
- $R_{02} + j\,X_{02} = Z_{23}{}^{0} = Z_2 + Z_3$
- $R_{03} + j\,X_{03} = Z_{31}{}^{0} = Z_3 + Z_1$

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

CC=18

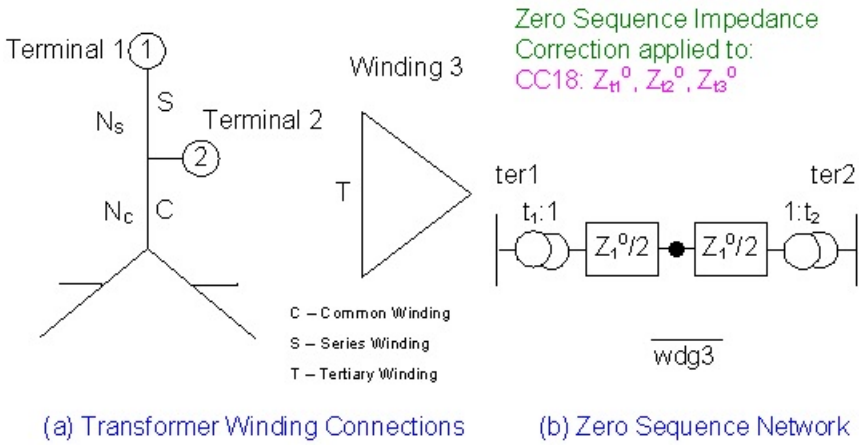


Figure 4.38. Yad (ungrounded) auto transformer zero sequence network

Set:

- R01+jX01 = Z_{12}^{0}

- R02+jX02 = Z_{23}^{0}

- R03+jX03 = Z_{31}^{0}

Calculated (pu):

Calculate Z_{t1}^{0}, Z_{t2}^{0}, Z_{t3}^{0}

$$Z_1^0 = \left(\frac{N-1}{N}\right) Z_{31}^{0} - \left(\frac{N-1}{N^2}\right) Z_{23}^{0} + \frac{1}{N} Z_{12}^{0}$$

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

Chapter 5
Sequence Data Format Change Summary

This chapter provides summary of sequence data changes from PSSE version 33 and later versions.

1. Change Code

PSSE33	IC, REV
PSSE34	same as previous version
PSSE35	same as previous version
PSSE36	same as previous version

2. System-Wide Data

PSSE33	did not exist
PSSE34	RPTFORMAT, AMPOUT=0, POLROU=0, AMPOUTZ=0, POLROUZ=0 MOV, ITERATIONS=20, TOLERANCE=0.01, MOVALPHA=0.3 SCMODEL, SCNRML=1
PSSE35	same as previous version
PSSE36	same as previous version

3. Generator Sequence Data

PSSE33	I, ID, ZRPOS, ZXPPDV, ZXPDV, ZXSDV, ZRNEG, ZXNEGDV, ZR0, ZX0DV, CZG, ZRG, ZXG
PSSE34	I, ID, ZRPOS, ZXPPDV, ZXPDV, ZXSDV, ZRNEG, ZXNEGDV, ZR0, ZX0DV, CZG, ZRG, ZXG, **REFDEG**
PSSE35	same as previous version
PSSE36	same as previous version

4. Load Sequence Data

PSSE33	I, ID, PNEG, QNEG, GRDFLG, PZERO, QZERO
PSSE34	same as previous version
PSSE35	same as previous version
PSSE36	same as previous version

5. Zero Sequence Non-Transformer Branch Data

PSSE33	I, J, ICKT, RLINZ, XLINZ, BCHZ, GI, BI, GJ, BJ, IPR, SCTYP
PSSE34	same as previous version
PSSE35	same as previous version
PSSE36	same as previous version

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

6. Zero Sequence Mutual Impedance Data

PSSE33	I, J, ICKT1, K, L, ICKT2, RM, XM, BIJ1, BIJ2, BKL1, BKL2
PSSE34	same as previous version
PSSE35	same as previous version
PSSE36	same as previous version

7. Zero Sequence Transformer Data

PSSE33	Two winding I, J, K, ICKT, CZ0, CZG, CC, RG1, XG1, R01, X01, RG2, XG2, R02, X02, RNUTRL, XNUTRL Three winding I, J, K, ICKT, CZ0, CZG, CC, RG1, XG1, R01, X01, RG2, XG2, R02, X02, RG3, XG3, R03, X03, RNUTRL, XNUTRL
PSSE34	same as previous version
PSSE35	same as previous version
PSSE36	same as previous version

8. Zero Sequence Switched Shunt Data

PSSE33	I, BZ1, BZ2, BZ3, BZ4, BZ5, BZ6, BZ7, BZ8
PSSE34	same as previous version
PSSE35	I, **ID**, BZ1, BZ2, BZ3, BZ4, BZ5, BZ6, BZ7, BZ8
PSSE36	same as previous version

9. Zero Sequence Fixed Shunt Data

PSSE33	I, ID, GSZERO, BSZERO
PSSE34	same as previous version
PSSE35	same as previous version
PSSE36	same as previous version

10. Induction Machine Sequence Data

PSSE33	I, ID, CZG, GRDFLG, ILR2IR, RTOX, ZR0, ZX0, ZRG, ZXG
PSSE34	I, ID, CZG, GRDFLG, ILR2IR, RTOX, ZR0, ZX0, ZRG, ZXG, **ILR2IR_TRN**, **R2X_TRN**, **ILR2IR_NEG**, **R2X_NEG**
PSSE35	same as previous version
PSSE36	same as previous version

11. Non-Conventional Source – Fault Contribution Characteristics Data

PSSE33	did not exist
PSSE34	I, ID, T1, C1P, C1Q, T2, C2P, C2Q, T3, C3P, C3Q, T4, C4P, C4Q, T5, C5P, C5Q, T6, C6P, C6Q

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

PSSE35.0	same as previous version
PSSE35.2	NAME, CHRTYP, T1, C1P, C1Q, T2, C2P, C2Q, ... T6, C6P, C6Q T7, C7P, C7Q, T8, C8P, C8Q, ... T12, C12P, C12Q Tn, CnP, CnQ, 0.0, 0.0, 0.0
PSSE36	same as previous (35.2) version

12. Non-Conventional Source - Generator Data

PSSE33	did not exist
PSSE34	did not exist
PSSE35.0	did not exist
PSSE35.2	I, ID, CHRTYP, POSTBL, NEGTBL, IFMAX, DBVMIN, DBVMAX
PSSE36	same as previous (35.2) version

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

Chapter 6
Optimal Power Flow Data File

6.1. Overview

The optimal power flow problem typically consists of several components: one or more objectives, a set of available system controls and any number of system constraints. The purpose of this chapter is to present the available controls and constraints for the optimal power flow problem statement.

The input stream to activity ROPF is an Optimal Power Flow Data File containing 17 groups of records with each group specifying a particular type of OPF data or constraint definition required for OPF work. Any piece of equipment for which OPF data is to be entered in activity ROPF must be represented as power flow data in the working case. That is, activity ROPF will not accept data for a bus, generator, branch, switched shunt or fixed shunt not contained in the working case.

All data is read in free format with data items separated by a comma or one or more blanks. Each category of data except the change code is terminated by a record specifying an I value of zero. Termination of all data is indicated by a value of Q.

The sections within this chapter are presented in the order in which the data categories must appear within the PSSE OPF Raw Data File. The format of the file itself is outlined in the below figure. Each section of this chapter fully describes the data elements associated with each data model.

Change Code
Bus Voltage Constraint Data
Adjustable Bus Shunt Data
Bus Load Data
Adjustable Bus Load Table Data
Generator Dispatch Data
Active Power Dispatch Data
Generation Reserve Data
Generation Reactive Capability Data
Adjustable Branch Reactance Data

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

Piece-wise Linear Cost Data
Piece-wise Quadratic Cost Data
Polynomial and Exponential Cost Table
Period Reserve Constraint Data
Branch Flow Constraint Data
Interface Flow Constraint Data
Linear Constraint Dependency Data

Optimal Power Flow Raw Data File Structure

6.2. Change Code

The OPF data modification code indicates whether a new set of optimal power flow data records are to be loaded into the working case, or whether the existing optimal power flow data is to be modified or appended with updated information. This value is only used within the OPF Raw Data File.

Within the OPF Raw Data File, this record contains one data field entered as follows:

```
ICODE
```

ICODE	ICODE = 0. All data within the OPF Raw Data File is treated as new data and entered into the working case. Any optimal power flow data that may have previously existed within the working case is erased prior to the reading of the rest of the data records contained within the OPF Raw Data File. ICODE = 1. All data within the OPF Raw Data File is to supersede values that currently exist in the working case. Any data records introduced through the OPF Raw Data File which do not correspond to an existing record within the working case, are automatically appended to the data records already within the current working case. Data records which do correspond to an entry within the working case are simply updated to reflect the new values.

6.3. Bus Voltage Constraint Data

OPF Bus Voltage Constraint records define lower and upper voltage limits at each bus existing within the PSSE power flow data model. Constraints may only be applied to existing buses; no new buses may be added through the Bus Voltage Constraint record.

By default, all buses within the working case automatically have OPF Bus Voltage Constraint records defined. The OPF Bus Voltage records of out of service (Type 4) buses can be modified but the bus and all bus associated models (voltage constraints, bus shunts, loads, etc.) will not be utilized by the optimal power flow solution process.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

6.3.1. Bus Voltage Attribute Record

The format for each OPF Bus Voltage Attribute record is:

```
BUS, VNMAX, VNMIN, VEMAX, VEMIN, LTYP, SLPEN
```

When entered in the OPF Raw Data File each field must be separated by either a space or a comma. Any blank fields must be delineated by commas. A bus value of zero (0) indicates that no further bus voltage constraint records are to be processed.

Each bus voltage constraint record is uniquely identified by a bus identifier. The values for each record is defined as follows:

BUS	A bus number between 1 and 999997. The specified bus number must correspond to a bus already defined within the power flow working case.
VNMAX	The maximum bus voltage magnitude value, entered in pu. The normal and emergency OPF bus voltage limits are independent of the normal and emergency bus voltage limits in the main network bus data. The OPF bus voltage limits may be initialized to those of the network bus voltage limits through either the OPF bus and bus subsystem spreadsheets, or through the OPF bus API commands. VNMAX = 9999.0 by default
VNMIN	The minimum bus voltage magnitude value, entered in pu. VNMIN = -9999.0 by default
VEMAX	The maximum emergency bus voltage magnitude value, entered in pu. To enforce recognition of the minimum and maximum emergency voltage limits during the OPF solution, select the *Impose emergency bus voltage limits* solution option. Otherwise the normal voltage limits, as entered above, will be utilized. Refer to Impose Emergency Bus Voltage Limits for more information. VEMAX = 9999.0 by default
VEMIN	The minimum emergency bus voltage magnitude value, entered in pu. VEMIN = -9999.0 by default
LTYP	One of four limit types may be enforced during the OPF solution: • Reporting only (0),Only report on violations of the bus voltage limits, taking no action if the voltage falls outside of limits. • Hard limit (1). Strictly enforce the specified bus voltage magnitude limits through the use of barrier terms. • Soft limit with a linear penalty (2). Permit bus voltages to go outside of their specified voltage magnitude limits, but penalize excursions linearly. The Soft limit penalty weight, SLPEN, is used in conjunction with this penalty to indicate severity of excursion. • Soft limit with a quadratic penalty (3). Permit bus voltages to go outside of their specified voltage limits, but penalize excursions along a quadratic curve. The Soft limit penalty weight, SLPEN, is used in conjunction with this penalty to indicate severity of excursion.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

	Refer to Section 14.7.2 Accommodating Inequality Constraints for more information on the limit type options. LTYP = 1 (Hard limit) by default
SLPEN	The soft limit penalty weight value applied to either the linear or quadratic soft limit penalty functions. The larger the number, the higher the penalty for voltage excursions outside of limits. SLPEN = 1.0 by default

6.4. Adjustable Bus Shunt Data

Adjustable Bus Shunt Records define candidate bus locations for shunt compensation. These records are unique to the PSSE OPF but do impact bus shunts within the power flow data model after an OPF solution. If a corresponding bus and bus shunt identifier is found, then the BINIT value will be updated with the new OPF solution value; otherwise a new bus shunt will be added to the power flow network data. The switched shunt data records defined within the PSSE power flow data model are not affected by the OPF Adjustable Bus Shunt data.

The maximum and minimum var limits specified in the Adjustable Bus Shunt records are used in conjunction with the Minimize Adjustable Bus Shunts objective function. Details of the adjustable bus shunt model can be found in Section 14.6.2 Adjustable Bus Shunt.

An individual bus may have one or more adjustable bus shunts defined, each differentiated by a unique bus shunt identifier.

The format for each Adjustable Bus Shunt record is:

```
BUS, ID, BINIT, BMAX, BMIN, BCOST, STATUS, CTYP, CTBL
```

When entering records in the OPF Raw Data File, each field must be separated by either a space or a comma and any fields left blank must be delineated by commas. A bus value of zero indicates that no further Adjustable Bus Shunt records are to be processed.

The bus number and shunt identifier uniquely identifies each Adjustable Bus Shunt record. The values for each record are described as follows:

BUS	A bus number between 1 and 999997. The specified bus number must correspond to an existing bus within the power flow working case.
ID	A one or two character identifier that uniquely identifies the bus shunt at the bus. If this field is left blank, the bus shunt identifier will default to a value of '1'. The bus number and bus shunt identifier may optionally correspond to a fixed shunt record within the power flow network. If so, then the corresponding fixed shunt data record will be updated after an OPF solution.
BINIT	The initial additional shunt value, entered in Mvar at nominal voltage. BINIT = 0.0 by default.
BMAX	The maximum bus shunt limit, entered in Mvar. To define an initial fixed shunt component, deployed at no cost, enter the desired value into the main power flow model as a fixed bus shunt with the same bus number and shunt identifier.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

	BMAX = 0.0 by default.
BMIN	The minimum bus shunt limit, entered in Mvar. Negative or positive shunt values may be entered for the maximum and minimum bus shunt susceptance to indicate inductors or capacitors respectively. BMIN = 0.0 by default.
BCOST	The cost coefficient, entered in cost units per Mvar. This coefficient assigns a cost value to each Mvar employed during the solution process. For example, one application for the cost scale coefficient is to assign a relatively low cost to an Adjustable Bus Shunt record representing an existing var installation, and a high cost to an Adjustable Bus Shunt record representing a potentially new installation. This higher cost may take into consideration the additional costs associated with the purchase of new equipment and the labor required for installation. This setup ensures that vars from the existing installation will likely be employed during solution before any new vars are applied. BCOST = 1.0 by default.
STATUS	The status switch determines whether the specified bus shunt control should be considered active or not. Only in-service bus shunts are recognized as candidates for var control. • In-service (1) • Out of service (0) STATUS = 1 (In-service) by default.
CTYP	Cost curve type. This value is not currently utilized by the program.
CTBL	Cost curve table number. This value is not currently utilized by the program.

6.5. Bus Load Data

Each OPF Bus Load Data record points to an Adjustable Bus Load table (Section 3.6 Adjustable Bus Load Table Data) that, in turn, defines load limits for use in load adjustment studies (i.e., load shedding, power transfer). These records are used in conjunction with the Minimize Adjustable Bus Loads objective function.

By default, all bus loads within the working case are initialized with default OPF Bus Load data. When a new bus load is added to the power flow network, a corresponding OPF Bus Load data record will automatically be created with default values. These data values may be updated. Bus loads connected to buses that are out of service can have their OPF Bus Load Data modified, but the load will not be acknowledged by the optimal power flow solution process.

6.5.1. Bus Load Record

The format for each OPF Bus Load record is as follows:

```
BUS, LOADID, LOADTBL
```

Within the OPF Raw Data File each field must be separated by either a space or a comma. A bus value of zero indicates that no further adjustable bus load records are being entered.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

The bus number and load identifier uniquely identify each adjustable bus load record. The values for the record are described as follows:

BUS	A bus number between 1 and 999997. The specified bus number must correspond to an existing bus within the power flow working case.
LOADID	A one or two character load identifier that uniquely identifies the load at the bus. If left blank, a default bus load identifier of '1' is assumed.
LOADTBL	The adjustable bus load table reference number, as presented in Section 3.6 Adjustable Bus Load Table Data. An adjustable bus load table number of zero indicates that the corresponding bus load is not being utilized within any OPF Adjustable Bus Load models. Multiple OPF bus load records may reference the same adjustable bus load table number.

6.6. Adjustable Bus Load Table Data

Adjustable Bus Load Table records define load scaling limits for use in load adjustment studies (load shedding, power transfer). They are referenced by the OPF Bus Load records defined in Section 3.5 Bus Load Data and are used in conjunction with the Minimize Adjustable Bus Loads objective. Details of the load adjustment model are covered in Section 14.6.3 Load Adjustment.

An Adjustable Bus Load Table must be defined before it can be referenced by an OPF Bus Load record. Not all Adjustable Bus Load Tables however have to be referenced by an adjustable bus load record. Those tables which are defined but not referenced are ignored during the OPF solution process. There may be up to 1000 Adjustable Bus Load Table records defined within the working case.

6.6.1. Adjustable Bus Load Table Record

The format of each Adjustable Bus Load Table record is:

```
TBL, LM, LMMAX, LMMIN, LR, LRMAX, LRMIN, LDCOST, CTYP, STATUS, CTBL
```

When entering data in the OPF Raw Data File each field must be separated by either a space or a comma. Any fields left blank must be delineated with commas. A load table value of zero indicates that no further adjustable bus load table records are to be processed.

The adjustable bus load table number uniquely identifies each adjustable bus load table record. The values for the record are defined as follows:

TBL	Adjustable bus load table number is an integer number. A value less than four digits in length is most suitable for reporting purposes.
LM	Load multiplier. The initial load adjustment variable, as indicated by Yi in the load adjustment model of Section 14.6.3 Load Adjustment. LM = 1.0 by default
LMMAX	The maximum load adjustment multiplier, used to establish an upper limit for the load multiplier Y. To represent a load shedding model, `YMAX` should be between 0.0 and 1.0 and larger than `YMIN`. For a load addition model, `YMAX` should be greater than 1.0.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

	LMMAX = 1.0 by default
LMMIN	The minimum load adjustment multiplier, used to establish a lower limit for the load multiplier Y. This value should be less than or equal to the value defined for the maximum load multiplier. LMMIN = 1.0 by default
LR	Load ratio multiplier. This value is not presently utilized by the program.
LRMAX	Maximum load ratio multiplier. This value is not presently utilized by the program.
LRMIN	Minimum load ratio multiplier. This value is not presently utilized by the program.
LDCOST	Cost scale coefficient. The cost, in $/pu MW, assigned to each OPF bus load participating in this adjustable bus load group. LDCOST = 1.0 by default
CTYP	Cost curve type. This value is not presently utilized by the program.
STATUS	The status switch determines whether the specified Adjustable Bus Load Table should be considered active or not. Only in-service Adjustable Bus Load Tables and their associated OPF Bus Loads will be recognized as adjustable bus load candidates. • In-service (1) • Out of service (0) STATUS = 1 (In-service) by default
CTBL	Cost table cross-reference number. This value is not presently utilized by the program.

6.7. Generator Dispatch Data

Generator Dispatch Data records reference Active Power Dispatch Tables (Section 3.8 Active Power Dispatch Data) which, in turn, reference Cost Curves (Sections 3.12 to 3.14). These relationships, in conjunction with the Minimize Fuel Cost objective, introduce active power controls for generator dispatch studies.

All or a portion of the generating unit's capacity may be made available for dispatch. The active power dispatch model, including the minimum and maximum active power limits, is defined within the active power dispatch table record, described in Section 3.8 Active Power Dispatch Data.

By default, all machines within the working case that do not already have generator dispatch data defined, are initialized with default data. When a new generator is added to the power flow network, a corresponding OPF Generator Dispatch record is automatically created with default values.

6.7.1. Generator Dispatch Data Record

The format for each OPF Generator Dispatch data record is:

```
BUS, GENID, DISP, DSPTBL
```

When entering data in the OPF Raw Data File each field must be separated by either a space or a comma. A bus value of zero indicates that no further generator dispatch records are being entered. Any blank fields must be delineated by commas.

The bus number and machine identifier uniquely identifies each Generator Dispatch record. The values for each Generator Dispatch data record are described as follows:

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

BUS	A bus number between 1 and 999997. The specified bus number must correspond to a bus already defined within the power flow working case.
GENID	A one or two character machine identifier that uniquely identifies the machine at the bus. If left blank, a default machine identifier of '1' is assumed.
DISP	The fractional dispatch value of the machine's total active power output available for participation in the active power dispatch control. A value of 1.0 indicates that 100% of the current active power output at the machine will be employed in the associated active power control.The sum of the dispatch fractions for all of the generator dispatch records that reference the same active power dispatch table should add up to 1.0 for typical applications. DISP = 1.0 by default
DSPTBL	The table number of the active power dispatch control table. Multiple generator dispatch records may reference the same active power dispatch table. An active power dispatch table number of zero implies that the generator is not participating as an active power control. DSPTBL = 1 by default

6.8. Active Power Dispatch Data

Active Power Dispatch Table records define the maximum and minimum active power dispatch limits.

Each Active Power Dispatch Table references a Cost Curve (Sections 3.12- 3.14) that specifies the costs associated with dispatching generation between the defined active power limits. Active Power Dispatch Table records in turn are referenced by Generator Dispatch records (Section 3.7 Generator Dispatch Data). The combination of these data records are used in conjunction with the Minimize Fuel Cost objective to perform dispatch studies.

6.8.1. Active Power Dispatch Record

The format for each Active Power Dispatch Table data record is:

```
TBL, PMAX, PMIN, FUELCOST, CTYP, STATUS, CTBL
```

When entering data in the OPF Raw Data File each field must be separated by either a space or a comma. Any fields left blank must be delineated with commas. A table value of zero indicates that no further active power dispatch table records are to be processed.

Each active power dispatch table is uniquely identified by a numerical identifier. The values of each record are defined as follows:

TBL	Active power dispatch table number is an integer number. A number less than four digits is most suitable for reporting purposes.
PMAX	The upper limit on the total amount of active power available for dispatch, specified in MW. PMAX = 9999.0 by default
PMIN	The lower limit on the total amount of active power available for dispatch, specified in MW.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

	PMIN = -9999.0 by default
FUELCOST	Fuel cost scale coefficient. A value chosen such that when the product between this value and the associated cost curve coordinate value produces a result that has cost units of (cost units)/hour. As an example, if the cost curve table coordinate value has units of MBTU/hour, then the fuel cost scale coefficient should be entered with units of (cost units)/MBTU. FUELCOST = 1.0 by default
CTYP	One of three cost curve models may be specified to represent the fuel dispatch curves of the generator units. 1. Polynomial and exponential curve 2. Piece-wise linear curve 3. Piece-wise quadratic curve CTYP = 1 (Polynomial and exponential curve) by default
STATUS	The status switch indicates whether the active power dispatch record is an active control within the OPF problem statement or not. Only in-service active power dispatch tables and their associated generators will be recognized as active power dispatch candidates. • 1 - In-service • 0 - Out of service STATUS = 1 (In-service) by default
CTBL	The table number of the cost curve to employ. Multiple active power dispatch table records may reference the same cost curve. A cost curve table number of zero indicates that the active power dispatch record, along with its participating generators will not be utilized within the OPF solution. CTBL = 0 by default

6.9. Generation Reserve Data

Generation Reserve records define a generating unit's MW output capability and ramp rate. These records are used in conjunction with the Period Reserve Constraint records (Section 3.15 Period Reserve Constraint Data) to introduce MW reserve constraints into the optimal power flow problem.

Generation Reserve records may be utilized by one or more generation Period Reserve Constraint records. The period reserve constraint model, as described in Section 14.6.6 Generator Period Reserve, provides a means of imposing a specified MW reserve within a certain time limit (i.e., 200 MW in 10 minutes) by the participating generator reserve units.

6.9.1. Generation Reserve Record

The format for each Generation Reserve record is:

```
BUS, GENID, RAMP, RTMWMAX
```


All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

When entering records into the OPF Raw Data File, each field must be separated by either a space or a comma. A bus number of zero indicates that no further generator reserve records are being entered. Any blank fields must be delineated by commas.

The bus number and machine identifier uniquely identifies each Generation Reserve record. The values for each record are defined as follows:

BUS	A bus number between 1 and 999997. The specified bus number must correspond to a bus defined within the power flow working case.
GENID	A one or two character machine identifier that uniquely identifies the machine at the bus. If left blank, a default machine identifier of '1' is assumed.
RAMP	Unit ramp rate. The rate at which it takes the generator to reach its maximum MW capability, specified in MW / minute. RAMP = 9999.0 by default
RTMWMAX	The maximum unit reserve contribution, specified in MW RTMWMAX = 9999.0 by default

6.10. Generation Reactive Capability Data

Generation Reactive Capability records define the limits in the armature reaction and stator current magnitude.

Whereas the conventional generator model provides for constant reactive generation limits, the reactive capability model represents generator armature reaction (Efd) behind synchronous reactance (Xd). With limits applied to armature reaction magnitude and stator current magnitude, the reactive power capability of the unit is recognized in a manner which is independent of any assumptions in terminal voltage magnitude or active power generation. This is further discussed in Section 14.6.5 Generator Reactive Capability.

6.10.1. Generation Reactive Capability Record

The format for each Reactive Capability record is:

```
BUS, GENID, XD, ISMAX, PFLAG, PFLEAD, QLIMIT, STATUS
```

When entering records in the OPF Raw Data File each field must be separated by either a space or a comma and any fields left blank must be delineated with commas. A bus number of zero indicates that no further generator reactive capability records are being entered.

A bus number and machine identifier is used to uniquely identify each Generation Reactive Capability record. The values for each record are defined as follows:

BUS	A bus number between 1 and 999997. The specified bus number must correspond to a bus already defined within the power flow working case.
GENID	The one or two character machine identifier of a valid machine within the working case. If this field is left blank, a default machine identifier of '1' will be assumed.
XD	The direct axis synchronous reactance of the machine, entered in pu on machine base. XD = 1.0 by default
ISMAX	The generator stator current limit, entered in pu on machine base.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

	ISMAX = 1.0 by default
PFLAG	Real value generator rated lagging power factor. PFLAG = 1.0 by default
PFLEAD	Real value generator rated leading power factor. PFLEAD = 1.0 by default
QLIMIT	The maximum reactive absorption limit at zero power factor, entered in pu on machine base. QLIMIT = 1.0 by default
STATUS	Reactive Capability Limit Status: • 0 - Out-of-service. The program will employ reactive generation limits directly from the power flow data. • 1 - Enabled. The generator is fully enabled with no reactive generation limits. • 2 - Enabled with +DEfd inhibited. The generator is in service and any increase in the field voltage is inhibited. • 3 - Enabled with -DEfd inhibited. The generator is in service and any decrease in the field voltage is inhibited. • 4 - Enabled with Efd fixed. The generator is in service with an invariant field voltage. The limit status determines how the specified reactive capability record should be employed in the optimal power flow problem. STATUS = 4 (Enabled with Efd fixed) by default

6.11. Adjustable Branch Reactance Data

Adjustable Branch Reactance records define the reactive compensation limits and associated costs of adding series var compensation. The data records are used in conjunction with the Minimize Adjustable Branch Reactances objective to identify candidate branches for use in series var compensation studies. A full description of the adjustable branch reactance model is presented in Section 14.6.4 Adjustable Branch Reactance.

6.11.1. Adjustable Branch Reactance Record

The format for each Adjustable Branch Reactance record is:

```
IBUS, JBUS, CKT, XMLT, XMLTMAX, XMLTMIN, XCOST, CTYP, STATUS, CTBL
```

Each field must be separated by either a space or a comma and any fields left blank must be delineated by commas. An IBUS number of zero indicates that no further adjustable branch reactance records are being entered.

The from bus, to bus and circuit identifier uniquely identify each Adjustable Branch Reactance record. The values for each record are defined as follows:

IBUS	The sending bus, specified by a number between 1 and 999997. The number must correspond to a bus already contained within the power flow working case.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

JBUS	The receiving bus, specified by a number between 1 and 999997. The number must correspond to a bus already contained within the power flow working case.
CKT	The one or two character branch identifier of an existing branch between the from bus and the to bus. If this field is left blank a default circuit identifier of '1' is assumed.
XMLT	The multiplier applied to the current reactance of the branch to yield the initial series compensation value. A value of 1.0 implies that the initial reactance will be the current reactance of the branch as obtained from the working case. XMLT = 1.0 by default
XMLTMAX	The maximum multiplier value applied to the reactance of the branch. The calculated value determines the upper limit on the amount of available branch reactance compensation. It is specified as a fraction of the branch reactance. Values over 1.0 are allowed for situations where a potential increase in reactance is desired. XMLTMAX = 1.0 by default
XMLTMIN	The minimum multiplier value applied to the reactance of the branch. The calculated value determines the lower limit on the amount of available branch reactance compensation. It is specified as a fraction of the branch reactance. For example, if the minimum reactance multiplier is specified as 0.3 and the maximum reactance multiplier is specified as 1.0 then 70% of the branch reactance is available as compensation. The minimum value cannot be less than 0.1 to ensure that compensation does not exceed 90% of the branch impedance. XMLTMIN = 1.0 by default
XCOST	The adjustable branch reactance cost in cost units / pu ohms. XCOST = 1.0 by default
CTYP	This value is not presently utilized by the program
STATUS	• 1 - In-service • 0 - Out-of-service The status determines whether the specified Adjustable Branch Reactance record should be considered active or not. Only in-service Adjustable Branch Reactance records are recognized as candidates for series var adjustment. STATUS = 1 (In-service) by default
CTBL	This value is not presently utilized by the program

6.12. Piece-wise Linear Cost Data

The Cost Curve data record provides essential information on the fuel cost characteristics of each participating generator unit. It is used specifically in conjunction with the Minimize Fuel Cost objective and the Active Power Dispatch tables (Section 3.8 Active Power Dispatch Data) for generator dispatch analysis.

The Piece-wise Linear cost model defines a linear relation between a cost, in cost units (i.e., dollars, pounds, etc.), and a particular control variable value. For example, an active power dispatch model may reference a

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

piece-wise linear cost curve in order to obtain the relative fuel cost for dispatching a participating generator unit at a certain active power dispatch level.

6.12.1. Piece-wise Linear Cost Record

The format for each Piece-wise Linear Cost Table data record is a multi-line record as follows:

LTBL, LABEL, NPAIRS, X_1, Y_1...X_N, Y_N

Each field must be separated by either a space or a comma and any fields left blank must be delineated by commas.

The total number of pairs entered must equal the value specified for NPAIRS.

An LTBL number of zero indicates that no further piece-wise linear cost table records are to be processed.

Each Piece-wise Linear Cost Curve Table record is uniquely identified by a linear cost table number. The values for each record are defined as follows:

LTBL	The piece-wise linear cost table number is an integer number. A number less than four digits in length is most suitable for reporting purposes. Note that the same cost table number may be used for multiple cost curve tables, provided that each table represents a different cost curve type (i.e., quadratic or polynomial).
LABEL	A descriptive label of the piece-wise linear cost table, containing at most, 12 characters. This label is strictly used for reporting purposes. LABEL = '' by default
NPAIRS	The number of cost pairs. The total number of xi, yi coordinate pairs being entered. This value is only used when entering raw data records in the OPF Raw Data File format or when using PSSE Automation commands. NPAIRS = 0 by default
Coordinate Pairs	The individual coordinate pairs. Each pair (X_1, Y_1 through X_N, Y_N) defines one segment of the piece-wise linear cost curve. • X_1... X_N The control variable value. In the typical situation where the cost curve is representing fuel cost characteristics, this value would define the active power generation, in MW. • Y_1... Y_N The total cost or energy consumption. For the fuel cost model, this value would typically be entered in cost units / hour.

The Piece-wise Linear Cost Table displays all Piece-wise Linear Cost Tables in the working case. The subsystem filter has no effect on the list displayed. If there are no Piece-wise Linear Cost Tables in the working case, the Tables list will be blank.

6.13. Piece-wise Quadratic Cost Data

The Cost Curve data record provides essential information on the fuel cost characteristics of each participating generator unit. It is used specifically in conjunction with the Minimize Fuel Cost objective and the Active Power Dispatch tables (Section 3.8 Active Power Dispatch Data).

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

The Piece-wise Quadratic Cost Curve model presents the cost, in cost units (i.e., dollars, pounds, etc.), as a quadratic function of a control variable value. For example, an active power dispatch model may reference a piece-wise quadratic cost curve to obtain the relative fuel costs for dispatching a participating generator unit at a certain active power dispatch level.

6.13.1. Piece-wise Quadratic Cost Record

The format for each Piece-wise Quadratic Cost Table data record is a multi-line record as follows:

QTBL, LABEL, COST, NPAIRS, X_1, Y_1... X_N, Y_N

Each field of the data record must be separated by either a space or a comma, with any blank fields being delineated by commas.

The total number of pairs entered must equal the value specified for NPAIRS.

A QTBL number of zero indicates that no further Piece-wise Quadratic Cost Table records are to be entered.

Each Piece-wise Quadratic Cost Curve Table is uniquely identified by a quadratic cost table number. The data values for each record are defined as follows:

QTBL	The piece-wise quadratic cost table number is an integer number. A number less than four digits in length is most suitable for reporting purposes. Note that the same cost table number may be used for multiple cost curve tables, provided that each table represents a different cost curve type (i.e., quadratic or polynomial).
LABEL	A descriptive label of the piece-wise linear cost table, containing at most, 12 characters. This label is strictly used for reporting purposes. LABEL = '' by default
COST	The cost or energy integration constant used to calculate the total fuel cost. When this value is used in conjunction with the active power dispatch table, it should be defined in units which, when its product is taken with the fuel cost scale coefficient defined in the active power dispatch table record, the resultant units are cost units / hour. For example, if the fuel cost scale coefficient in the active power dispatch table has units of $/MBTU, then the integration constant should be specified in units of MBTU/hour. COST = 0.0 by default
NPAIRS	The number of cost pairs. The total number of xi, yi coordinate pairs being entered. This value is only used when entering raw data records in the OPF Raw Data File format or when using PSSE Automation commands. NPAIRS = 0 by default
Coordinate Pairs	The individual coordinate pairs. Each pair (X_1, Y_1 through X_N, Y_N) defines one segment of the piece-wise quadratic cost curve. • X_1... X_N The control variable value. In the typical situation where the cost curve is representing fuel cost characteristics, this value would define the active power generation, in MW.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

	• Y_1... Y_N The incremental cost or energy consumption. For the fuel cost model, this value would typically be entered in cost units / MW.

The Piece-wise Quadratic Cost Table editor displays in the editor all Piece-wise Quadratic Cost Curve Tables in the working case. The subsystem filter has no effect on the list displayed. If no Piece-wise Quadratic Cost Curve Tables exist in the working case, the editor will be blank.

6.14. Polynomial and Exponential Cost Table

The Cost Curve data records provide essential information on the fuel cost characteristics of each participating generator unit. It is used specifically in conjunction with the Minimize Fuel Cost objective and the Active Power Dispatch tables (Section 3.8 Active Power Dispatch Data) for generator dispatch analysis.

The Polynomial and Exponential Cost Curve model describes the cost, in cost units (i.e., dollars, pounds, etc.), as a polynomial equation in terms of a control variable value. Similar to the linear and quadratic cost curve models, an active power dispatch model may reference a polynomial cost curve in order to obtain the relative fuel cost to dispatch a participating generator unit at a certain active power dispatch level. The following equation is employed:

$$Cost = (Cost_0 + A \cdot P_{gen} + B \cdot P^2_{gen} + C \cdot \varepsilon^{DP_{gen}}) VAL$$

where:

$Cost_0$	=	Fuel cost integration constant
A	=	Linear cost coefficient
B	=	Quadratic cost coefficient
C	=	Exponential cost coefficient
D	=	Exponent scale factor
VAL	=	The cost scale coefficient. In the example of the active power dispatch model, this value is the fuel cost scale coefficient.

Polynomial Cost Equation

6.14.1. Polynomial and Exponential Record

The format for each Polynomial and Exponential Cost Curve Table record is:

```
PTBL, LABEL, COST, COSTLIN, COSTQUAD, COSTEXP, EXPN
```

Each field of the data record must be separated by either a space or a comma with blank fields delineated by commas. A PTBL number of zero indicates that no further polynomial and exponential cost table records are being entered.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

Each Polynomial and Exponential Cost Curve Table record is uniquely identified by a polynomial and exponential cost table number.

PTBL	The polynomial and exponential cost table number is an integer number. A number less than four digits in length is most suitable for reporting purposes. Note that the same cost table number may be used for multiple cost curve tables, provided that each table represents a different cost curve type (i.e., linear or quadratic).
LABEL	A descriptive label of the piece-wise linear cost table, containing at most, 12 characters. This label is strictly used for reporting purposes. LABEL = '' by default
COST	The cost or energy integration constant used to calculate the total fuel cost. COST = 0.0 by default
COSTLIN	The linear cost coefficient as indicated by A in the equation given in Figure 3-2. COSTLIN = 0.0 by default
COSTQUAD	The quadratic cost coefficient as indicated by B in the equation given in Figure 3-2. COSTQUAD = 0.0 by default
COSTEXP	The exponential cost coefficient as indicated by C in the equation given in Figure 3-2. COSTEXP = 0.0 by default
EXPN	The scale factor value which may be applied to the exponent of the exponential term as indicated by D in the equation given in Figure 3-2. EXPN = 0.0 by default

The values for the integration constant and each of the coefficients should be specified in units that will allow them to be multiplied by a cost scale value. When the polynomial and exponential table is used in conjunction with the active power dispatch table, the coefficients and integration constant should be defined in units which, when a product is taken with the fuel cost scale coefficient defined in the active power dispatch table record, the resulting value is in units of cost units / hour. For example, if the fuel cost scale coefficient in the active power dispatch table has units of $/MBTU, then the integration constant should be specified in units of MBTU / hour.

The Polynomial and Exponential Cost Table displays in the editor all Polynomial and Exponential Cost Curve Tables that exist in the working case. The subsystem filter has no effect on the list displayed. If no Polynomial and Exponential Cost Curve Tables exist in the working case, the editor will simply show a blank record.

6.15. Period Reserve Constraint Data

Period Reserve Constraint data records are used in conjunction with the Generation Reserve records (Section 3.9 Generation Reserve Data) to impose MW reserve limits.

The period reserve constraint model, as described in Section 14.6.6 Generator Period Reserve, defines a MW reserve that must be met within a stated time limit (i.e., 200 MW in 10 minutes). Some or all of a group of participating generator units may be deployed to meet this requirement.The maximum reserve contribution in MWand the unit ramp rate in MW/minute are defined for each participating generator unit as part of the generation reserve data presented in Section 3.9 Generation Reserve Data. The period reserve records described here define the desired reserve limit and the time limit in which the reserve limit must be met.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

6.15.1. Period Reserve Constraint Record

The format for each Period Reserve data record is a multi-line record as follows:

```
RSVID, MWLIMIT, T, STATUS

BUS, GENID

...

BUS, GENID

0
```

Each field of the data record must be separated by either a space or a comma and any fields left blank must be delineated by commas. For each complete period reserve record entered, a single zero must be placed on the line immediately following the last generator unit entered, or immediately after the main RSVID record if no participating units are specified. A RSVID value of zero indicates that no further period reserve records are being entered.

Each Period Reserve record is uniquely identified by a reserve identification number between one and fifteen. The values for each record are defined as follows:

RSVID	The Reserve identifier is a number between one and fifteen, inclusive.
MWLIMIT	The reserve requirement, in MW. If the sum of maximum reserves for all of the units participating in the Period Reserve data record is less than the specified reserve limit, then the constraint cannot be satisfied. The solution will terminate if this situation arises. If the reserve limit is set to 0.0, the reserve constraint will not be employed as part of the optimal power flow problem statement. MWLIMIT = 0.0 by default
T	The time constraint for which the reserve requirement must be fulfilled, in minutes. T = 9999.0 by default
STATUS	• 1 - In-service • 0 - Out-of-service The status switch indicates whether the specified period reserve record should be included within the OPF problem statement. Only in-service period reserve records will be included as a reserve constraint. STATUS = 1 (In-service) by default
Participating Units	A list of participating generator reserve units available to the period reserve constraint. Each unit must already have a corresponding generator reserve data record defined. Each participating unit is uniquely specified by the following identifiers: • BUS - The bus number of the bus where the unit is located. When using the spreadsheet, this value may need to be entered as a bus name, depending upon the input mode currently in effect.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

	• GENID - The generator unit identifier of the participating generator. A default identifier of 1 is assumed if left blank.

The Period Reserve data editor displays all Period Reserve data records within the working case. The subsystem filter has no effect on the list displayed. If no Period Reserve records exist in the working case, the editor will be blank.

6.16. Branch Flow Constraint Data

Branch Flow Constraint records define upper and lower flow limits on selected non zero impedance branches. Four different flow limits may be imposed: MW, MVar, MVA and Ampere. More than one branch flow constraint type may be defined for the same branch.

6.16.1. Branch Flow Constraint Record

The format of each Branch Flow Constraint record is:

```
IBUS, JBUS, CKT, BFID, FMAX, FMIN, EFMAX, EFMIN, FTYP, LTYP, LPEN, KBUS
```

Each field of the data record must be separated by either a space or a comma and any fields left blank must be delineated by commas. An IBUS number of zero indicates that no further branch flow constraint records are being entered.

The from bus, to bus, third bus (for three-winding transformers), circuit id and flow id uniquely identify each Branch Flow Constraint record. The values for each record are defined as follows:

IBUS	The sending bus, specified by a number from 1 through 999997. The number must correspond to an existing bus within the power flow working case. If a three-winding transformer is being specified, the from bus defines the winding for which the flow constraint is being introduced.
JBUS	The receiving bus, specified by a number from 1 through 999997. The number must correspond to an existing bus within the power flow working case.
CKT	A one or two character identifier used to differentiate between multiple connecting lines between the from bus, to bus and third bus (if three-winding transformer). If this field is left blank, a circuit identifier of '1' is assumed.
BFID	A single character identifier to differentiate between multiple branch flow constraints defined at the same branch. If this field is left blank, a flow identifier of '1' is assumed.
FMAX	The maximum normal flow limit on the specified branch. Values are specified in physical units appropriate to the flow limit type being specified; Ampere constraints are specified in MVA. If the difference between the specified upper and lower branch flow limits is less than 0.0001 then the specified flow constraint is *fixed* at the indicated limit. This value, along with the minimum normal limit defined below, is used to define one of two possible flow limits assigned to the branch. An alternate set of emergency limits is defined below. By default, the normal flow limits are employed during the OPF solution unless the Impose Emergency Branch Flow Limits solution option is selected. FMAX = 0.0 by default

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

FMIN	The minimum normal flow limit on the specified branch. Values are specified in physical units appropriate to the flow limit type being specified; Ampere constraints are specified in MVA. If the difference between the specified upper and lower branch flow limits is less than 0.0001 then specified flow constraint is treated as *fixed* at the indicated limit. FMIN = 0.0 by default
EFMAX	The maximum emergency flow limit on the specified branch. This limit, in conjunction with the minimum emergency limit, defines an optional alternate set of flow limits. Values are specified in physical units appropriate to the flow limit type being specified; Ampere constraints are specified in MVA. To enforce recognition of the minimum and maximum emergency flow limits as opposed to the normal flow limits during the OPF solution, select the Impose Emergency Branch Flow Limits solution option. EFMAX = 0.0 by default
EFMIN	The minimum emergency flow limit on the specified branch. This limit, in conjunction with the maximum emergency limit, defines an optional alternate set of flow limits. Values are specified in physical units appropriate to the flow limit type being specified; Ampere constraints are specified in MVA. If emergency limits are employed during the OPF solution and the difference between the specified upper and lower emergency branch flow limits is less than 0.0001, then the specified flow constraint is treated as *fixed* at the indicated limit. EFMIN = 0.0 by default
FTYP	One of four different flow types specified for the constraint: • 1 - MW • 2 - MVar • 3 - MVA • 4 - Ampere (4) FTYP is 4 (Ampere) by default
LTYP	One of four constraint limit types enforced during the OPF solution: • 0 - Reporting only. Only report on violations of the specified branch flow limits, taking no action if the branch flow falls outside of limits. • 1 - Hard limit. Strictly enforce the specified branch flow limits through the use of barrier terms. • 2 - Soft limit with a linear penalty. Permit branch flows to go outside of their specified branch flow limits, but penalize excursions along a linear curve. The *Soft limit penalty weight*, as defined below, is used in conjunction with this penalty to indicate severity of excursion.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

	• 3 - Soft limit with a quadratic penalty. Permit branch flow limit to go outside of their specified flow limits, but penalize excursions along a quadratic curve. The *Soft limit penalty weight*, as defined below, is used in conjunction with this penalty to indicate severity of excursion. Refer to Section 14.7.2 Accommodating Inequality Constraints for more information on the limit type options. LTYP is 1 (Hard limit) by default
LPEN	The penalty weight value applied to either the linear or quadratic soft limit penalty functions. The larger the number, the higher the penalty for branch flow excursions outside of limits. LPEN is 1.0 by default
KBUS	The third bus of a three-winding transformer, specified by a number from 1 through 999997. The number must correspond to an existing bus within the power flow working case. If a three-winding transformer is not being entered, this value is zero.

6.17. Interface Flow Constraint Data

Interface flow records introduce MW or MVar flow constraints across a defined interface. These limits are only enforced when the Constrain Interface Flows option is enabled, otherwise they are ignored during the OPF solution. In conjunction with both the interface flow constraint records and the directive to Constrain Interface Flows, the Minimize Interface Flows objective may be employed to either minimize or maximize flows across an interface.

An interface consists of a collection of branches that may include the tie lines between two areas, the flows through a particular transmission corridor, or the collection of lines emanating from an area. Each interface flow constraint record defines a set of branches included in the interface and the flow limits that are to be imposed on that set during the optimization process. By default, the interface flow definitions are for informational purposes only. They do not automatically introduce constraint equations or objective terms in the optimization problem unless one or both of the corresponding Constrain Interface Flows or Minimize Interface Flows options are enforced.

The format for each Interface Flow Constraint data record is a multi-line record as follows:

```
IFLWID, LABEL, FMAX, FMIN, FTYP, LTYP, LPEN

IBUS, JBUS, CKT, KBUS

IBUS, JBUS, CKT, KBUS

...

0
```

Each field of the data record must be separated by either a space or a comma, with any blank fields delineated by commas. For each interface flow record entered, a single zero must be placed on the line immediately following the last participating branch entered, or immediately after the main IFLWID record if no participating branches are specified.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

An IFLWID value of zero indicates that no further interface flow records are to be processed.

Each Interface Flow Constraint record is uniquely identified by an interface flow identifier. The values for each record are defined as follows:

IFLWID	The interface flow identifier is an integer number. A value less than four digits in length is most suitable for reporting purposes.
LABEL	A string containing a maximum of 32 characters used to describe the interface. This label is only used for reporting purposes. LABEL is '' by default
FMAX	The maximum flow limit across the interface, specified in the physical units appropriate for the specified flow limit type defined below. If the range between the maximum and minimum interface MW flow limits is less than 0.001, then the maximum interface flow limit is set to the average of the two interface flow limit values plus 0.1. FMAX is 0.0 by default
FMIN	The minimum flow limit across the interface, specified in the physical units appropriate for the specified flow limit type defined below. If the range between the maximum and minimum interface MW flow limits is less than 0.001, then the minimum interface flow limit is set to the average of the two interface flow limit values minus 0.1. FMIN is 0.0 by default
FTYP	One of two valid flow types: • 1 - MW • 2 - MVar FTYP is 1 (MW) by default
LTYP	One of four different limit types: • 0 - Reporting only. Only report on violations of the specified interface flow limits, taking no action if the interface flow falls outside of limits. • 1 - Hard limit. Strictly enforce the specified interface flow limits through the use of barrier terms. • 2 - Soft limit with a linear penalty. Permit interface flows to go outside of the specified interface flow limits, but penalize excursions along a linear curve. The *Soft limit penalty weight*, as defined below, is used in conjunction with this penalty to indicate severity of excursion. • 3 - Soft limit with a quadratic penalty. Permit interface flows to go outside of the specified interface flow limits, but penalize excursions along a quadratic curve. The *Soft limit penalty weight*, as defined below, is used in conjunction with this penalty to indicate severity of excursion.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

	Refer to Section 14.7.2 Accommodating Inequality Constraints for more information on the limit type options. LTYP is 1 (Hard limit) by default
LPEN	The penalty weight value applied to either the linear or quadratic soft limit penalty functions. The larger the number, the higher the penalty for interface flow excursions outside of the defined interface flow limits. LPEN is 1.0 by default
Participating Branches	A list of branches defining the interface. Each branch is individually specified by the following identifiers: • IBUS - From bus number. The sending bus number (1 through 999997). When using the spreadsheet, this value may optionally be entered as a bus name, provided that *names* input mode is in effect. • JBUS - To bus number. The receiving end bus number (1 through 999997). When using the spreadsheet, this value may optionally be entered as a bus name, provided that *names* input mode is in effect. • CKT - Circuit ID. The one or two character circuit identifier. If no circuit identifier is entered, a default value of '1' is assumed. • KBUS - Third bus number. The third bus number (1 through 999997) if a three winding transformer is specified; zero (0) otherwise. When using the spreadsheet, this value may optionally be entered as a bus name, provided that *names* input mode is in effect.

The Interface Flow Constraint editor displays all Interface Flow Constraint records within the working case in the data table. The subsystem filter has no effect on the list displayed. If there are no Interface Flow Constraint records in the working case, then the editor window will be blank.

6.18. Linear Constraint Dependency Data

Linear Constraint Dependency records provide a way to introduce customized linear constraint equations into the optimal power flow problem statement. Each dependency equation may be comprised of any number of variables, selected from a group of previously defined records. Details of the linear constraint dependency equation model are discussed in Section 14.6.8 Linear Constraint Dependency Equation.

6.18.1. Linear Constraint Dependency Record

The format of each Linear Constraint Dependency data record is a multi-lined record as follows:

```
EQID, LABEL, SLKMAX, SLKMIN

VTYP, "ID FIELDS", COEFF

VTYP, "ID FIELDS", COEFF

...

0
```


All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

Each field of the data record must be separated by either a space or a comma, with any blank fields delineated by commas. For each Linear Constraint Equation record entered, a single zero must be placed on the line immediately following the last participating variable record entered, or immediately after the main EQID record if no participating variables are specified.

An EQID value of zero indicates that no further linear constraint dependency records are to be processed.

Each Linear Constraint Dependency record is uniquely identified by a constraint equation identifier. The values for each field within the record are defined as follows:

EQID	The linear constraint equation identifier is an integer number. A value less than four digits in length is most suitable for reporting purposes.
LABEL	A string containing a maximum of 32 characters used to describe the linear constraint dependency equation being defined. This label is only used for reporting purposes. LABEL is '' by default
SLKMAX	The constraint equation maximum slack variable limit SLKMAX is 0.0 by default.
SLKMIN	The constraint equation minimum slack variable limit SLKMIN is 0.0 by default.
VTYP	A number (1 through 10) corresponding to the type of dependency variable being added to the constraint equation. The numerical values associated with each variable type are as follows: 1. voltage magnitude, in pu 2. voltage angle, in radians (degrees/57.29578) 3. active power generation, in per unit of reactive power based on system base(i.e. 400 MW limit base on a system base of 100 is entered as 4.0) 4. reactive power generation, in per unit of reactive power based on system base(i.e. 400 Mvar limit base on a system base of 100 is entered as 4.0) 5. transformer tap ratio, entered as the inverse of the tap ratio; or transformer phase shift angle, in radians 6. branch flow, in per unit flow value based on system base 7. interface flow, in per unit flow value based on system base 8. adjustable bus shunt, in per unit Mvar value based on system base 9. switched shunt, in per unit Mvar value based on system base 10. load adjustment, entered in terms of the load multiplier (i.e. 0.8 for 80% of load or 1.8 for 180% of load
"ID FIELDS"	Depending upon the variable type code selected above, one or more identification fields must be specified in order to uniquely identify the record to be employed as the variable entry. The identification fields corresponding to each of the variable type codes defined above, are as follows:

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

	1. Bus number (1 through 999997) 2. Bus number (1 through 999997) 3. Active power dispatch table number 4. Bus number (1 through 999997) Generator identifier [" 1"] 5. From bus number To bus number Circuit identifier [" 1"] Third bus number, if a three-winding transformer is specified; placed after the Coeff value [0] 6. From bus number To bus number Circuit identifier [" 1"] Branch flow identifier ["1"] Third bus number, if a three-winding transformer is specified; placed after the Coeff value [0] 7. Interface flow identifier 8. Bus number (1 through 999997) Adjustable bus shunt identifier [" 1"] 9. Bus number (1 through 999997) 10. Adjustable bus load table number Depending upon the variable type code selected above, one or more identification fields must be specified in order to uniquely identify the record to be employed as the variable entry. The identification fields corresponding to each of the variable type codes defined above, are as follows: When using the linear constraint equation table editor, bus identifiers may alternately be entered as extended bus names instead of bus number, provided that the *names* input mode option is in effect.
COEFF	A real variable coefficient applied to the dependency variable specified above. COEFF is 1.0 by default.

Any number of participating variables may be included in the linear constraint dependency equation. The variable identifiers must correspond to a record that already exists within the working case.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

The Linear Constraint Dependency Equation data table displays in the editor all Linear Constraint Dependency Equation records within the working case. The subsystem filter has no effect on the list displayed. If there are no Linear Constraint Dependency Equation records in the working case, the editor window will be blank.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

Chapter 7
GIC Data File

7.1. Overview

The geomagnetic induced currents can flow through transformer winding and substation ground paths. For power flow calculations and substation ground paths data is not required. So this data is not available in power flow data. This additional data is provided in GIC data file (extension .gic). The accuracy of GIC calculations will depend on the data provided in GIC data file.

Depending on the size of the power flow network studied, this data could be large. It is recommended to create a GIC data template with one of the following ways and edit/modify that:

1. Using activity GIC GUI, GIC data file from Excel GIC data templates
   - GIC > Excel template for GIC data file
   - GIC > Create GIC data file from Excel template
2. Python module “gicdata” (See PSSE Application Program Interface (API) manual)

All data is read in free format with data items separated by a comma or one or more blanks. Each category of data except the change code is terminated by a record specifying an I value of zero. Termination of all data is indicated by a value of Q.

File Identification Data
Substation Data
Bus Substation Data
Transformer Data
Fixed Bus Shunt Data
Branch Data
User Earth Model Data
Switched Shunt Data
Two-Terminal DC Data

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

VSC DC Data
Multi-Terminal DC Data
FACTS Device Data
Load Data
Q Record

GIC Data Input Structure

7.2. File Identification Data

This record contains only one data item which is specified as:

```
GICFILEVRSN=vernum
```

GICFILEVRSN	GICFILEVRSN is the keyword to specify the GIC data file version number. vernum is an integer value specifying GIC data file version number. No default allowed. Allowed, GICFILEVRSN = 4 GICFILEVRSN = 5 Note: The first release of the GIC data file did not have this record and is treated as file version 1

At PSSE version 35.0.0, network equipment location information is consolidated in one source which is base case data. To faciliate that:

- The substation location information is moved from the GIC data file to the Base Case data (power flow data).
- When GIC data file version 4 is read, "Single Bus" substation configuration is added to each bus-substation data record and non Node-Breaker base case is converted to Node-Breaker base case.
- For this to work without any data conflicts, GIC data file version 4 is allowed to be read into base case that has no Node-Breaker configurations.

7.3. Substation Data

Each substation data record has the following format:

GICFILEVRSN 4

```
I, NAME, UNIT, LATITUDE, LONGITUDE, RG, EARTHMDL, RGFLAG
```


All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

GICFILEVRSN 5

```
I, RG, EARTHMDL, RGFLAG
```

I	Substation number (1 through 999997) No default allowed.
NAME	Alphanumeric identifier assigned to substation I. NAME may be up to 40 characters and may contain any combination of blanks, uppercase letters, numbers and special characters, but the first character must not be a minus sign. NAME must be enclosed in single or double quotes if it contains any blanks or special characters. NAME = "" by default.
UNIT	Unit for geophysical location (longitude and longitude) data • 0 - degrees UNIT = 0 by default.
LATITUDE	Substation latitude, positive for North and negative for South. When UNIT = 0, latitude is specified in degrees. No default allowed.
LONGITUDE	Substation longitude, positive for East and negative for West. When UNIT = 0, longitude is specified in degrees. No default allowed.
RG	Substation grounding DC resistance in ohms. If RG <= 0.0 or RG > = 99.0, it is assumed that the substation is ungrounded. RG = 0.1 by default.
EARTHMDL	Name of the earth model. EARTHMDL may be up to 32 characters. • When specified this earth model will be used in determining Benchmark GMD event earth model scaling factor (beta) and Non-uniform GMD event calculations • When not specified, the earth model specified in GIC API is used. EARTHMDL = "" by default.
RGFLAG	Method used to specify RG value. RGFLAG may be up to 40 characters. It is used for informational purposes only. Possible methods: • "Assumed" • "Measured" • "Calculated" • "Brief comment of your choice" RGFLAG = "Assumed" by default.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

7.4. Bus Substation Data

Each bus substation data record has the following format::

GICFILEVRSN 4

```
BUSNUM, SUBNUM
```

GICFILEVRSN 5

There is no bus substation data group.

BUSNUM	Bus number. Bus BUSNUM must be present in the working case. No default allowed.
SUBNUM	Substation number (1 through 999997). This is the substation number to which bus BUSNUM belongs to. SUBNUM must be previously defined in “Substation Data” record group. The following restrictions apply when assigning bus and its substation: • Generally two buses connected by a transmission line (non-transformer branch) reside in two different substations. Exception to this would be short lines between two buses of same substation. Those short branches are treated as zero length branches with no GMD induced voltage in those. • Two buses connected by a two winding transformer must be in same substation. • Three buses connected by a three winding transformer must be in same substation. • Two buses connected by zero impedance line must have same substation number. No default allowed.

7.5. Transformer Data

The transformer specified by buses “I, J, K, CKT” must exist in the working case. Also the winding bus order must be same as in the working case.


Note 1 : For two and three winding auto transformers WRI, WRJ and WRK could represent per phase dc resistances of series winding (Rs) or common winding (Rc).

For example, as shown in figure below:

- Bus I is series winding bus, WRI=Rs
- Bus J is common winding bus, WRJ=Rc

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

S – Series winding, C – Common winding
R_s – Series winding dc resistance, ohms/ phase
R_c – Common winding dc resistance, ohms/ phase
kV I_{bus} > kV J_{bus}

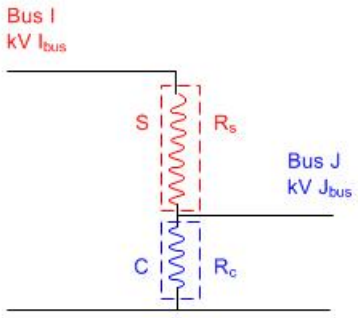


Two winding auto transformer circuit


Note 2 : Figure below shows generic Phase Angle Regulator (PAR) connections where series unit has split tap. It is represented as T model in GIC calculation DC network. The series unit is connected between Bus I and Bus J. In GIC data file:

- WRI is dc resistance of series unit section connected to Bus I
- WRJ is dc resistance of series unit section connected to Bus J
- WRK is dc resistance of exciting unit

It is imperative that WRI, WRJ and WRK values are calculated and specified in GIC data file for correct modeling of such a transformer.

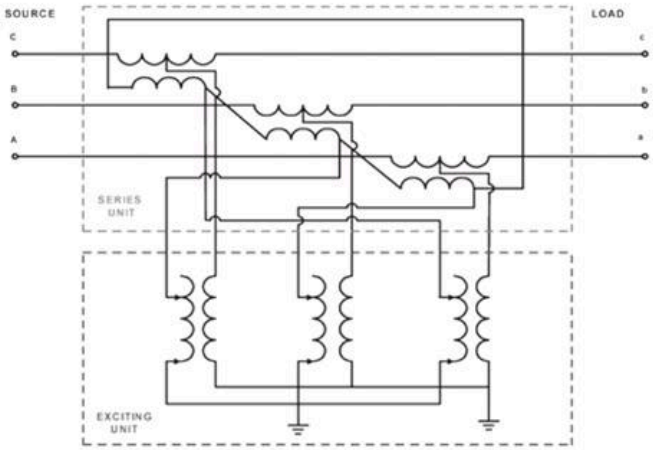

(a) AC Connections

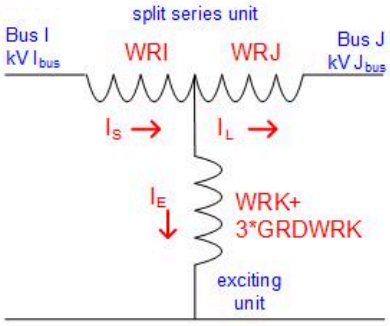

(b) GIC Equivalent DC Circuit T Model

Split Series Winding Phase Angle Regulator Circuit

Each transformer data record has the following format:

```
I, J, K, CKT, WRI, WRJ, WRK, GICBDI, GICBGJ, GICBDK, VECGRP, CORE, KFACTOR,
GRDWRI, GRDWRJ, GRDWRK, TMODEL
```


All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

I	The bus number of the bus to which Winding 1 is connected. It must be same Winding 1 bus for the same transformer in the working case. No default allowed
J	The bus number of the bus to which Winding 2 is connected. It must be same Winding 2 bus for the same transformer in the working case. No default allowed
K	The bus number of the bus to which Winding 3 is connected. It must be same Winding 3 bus for the same transformer in the working case. K = 0 for two winding transformers. No default allowed for three winding transformers.
CKT	One- or two-character branch circuit identifier. CKT = '1' by default
WRI	DC resistance of Winding 1 in ohms/phase. When WRI is not specified, working case resistance is used to determine WRI. DC resistance of series unit of PAR (see Note 2). WRI = 0.0 by default
WRJ	DC resistance of Winding 2 in ohms/phase. When WRJ is not specified, working case resistance is used to determine WRJ. DC resistance of series unit of PAR (see Note 2). WRJ = 0.0 by default
WRK	DC resistance of Winding 3 in ohms/phase. For three-winding transformers, when WRK is not specified, working case resistance is used to determine WRK. DC resistance of exiciting unit of PAR (see Note 2). WRK = 0.0 by default
GICBDI	GIC blocking device in neutral of Winding 1 • 0 - no GIC blocking device present • 1 - GIC blocking device present For an auto-transformers, if either GICBDI = 1 or GICBDJ = 1, that auto-transformer is treated as if it has GIC blocking device present. GICBDI = 0 by default
GICBDJ	GIC blocking device in neutral of Winding 2 • 0 - no GIC blocking device present • 1 - GIC blocking device present For an auto-transformers, if either GICBDI = 1 or GICBDJ = 1, that auto-transformer is treated as if it has GIC blocking device present.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

	GICBDJ = 0 by default
GICBDK	GIC blocking device in neutral of Winding 3 • 0 - no GIC blocking device present • 1 - GIC blocking device present GICBDK = 0 by default. GICBDK = 0 for two-winding transformers.
VECGRP	Alphanumeric identifier specifying vector group based on transformer winding connections and phase angles. If vector group is specified in power flow data that data will be used and it is not needed to be specified here. As far as GIC calculations are concerned, winding grounding connection information is used; its clock angles are not used. Refer to POM Sections "Two Winding Transformer Vector Groups" and "Three Winding Transformer Vector Groups" for allowed vector groups. • When bus number orders in GIC data file record are different than the bus number orders in power flow RAW data file, the bus number orders in power flow RAW data file is used to assign winding configuration as per vector group specified. • For auto-transformers, bus with lower base bus voltage is treated as common winding bus. • For three-winding auto-transformers, windings on bus I and bus J form auto-transformer. VECGRP = "" by default
CORE	Number of cores in transformer core design. This information is used to calculate transformer reactive power loss from GIC flowing its winding. • -1 - three phase shell form • 0 - unknown core design • 1 - single phase core • 3 - three phase 3-legged core form • 5 - three phase 5-legged core form CORE = 0 by default
KFACTOR	Factor to calculate transformer reactive power loss from GIC flowing its winding (MVAR/AMP) KFACTOR = 0.0 by default
GRDWRI	Winding 1 grounding DC resistance in ohms Common winding grounding DC resistance in ohms for 2 or 3 winding auto transformers, when bus I is common bus. GRDWRI = 0.0 by default (no grounding resistance; solidly grounded)

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

GRDWRJ	Winding 2 grounding DC resistance in ohms Common winding grounding DC resistance in ohms for 2 or 3 winding auto transformers, when bus J is common bus. GRDWRJ = 0.0 by default (no grounding resistance; solidly grounded)
GRDWRK	Winding 3 grounding DC resistance in ohms DC resistance of exciting unit grounding of PAR (see Note 2). GRDWRK = 0.0 by default (no grounding resistance; solidly grounded)
TMODEL	Number of cores in transformer core design. This information is used to calculate transformer reactive power loss from GIC flowing its winding. • 0 - two/three/auto transformer model as defined by its vector group • 1 - transformer as T model in DC network (See Note 2) TMODEL = 0 by default

7.6. Fixed Bus Shunt Data

Only in-service fixed bus shunts provided on this data record are modeled in the GIC DC network.

Each fixed bus shunt data record has the following format:

```
I, ID, R, RG
```

I	Bus number of the bus to which the fixed shunt is connected. It must be present in the working case. No default allowed
ID	One- or two-character non-blank alphanumeric fixed bus shunt identifier. ID = '1' by default
R	DC resistance in ohms/phase. It must be > 0.0. Fixed bus shunt records with R = 0.0 will be ignored. No default allowed
RG	Grounding DC resistance in ohms RG = 0.0 by default (no grounding resistance; solidly grounded)

7.7. Branch Data

Only in-service branches are modeled in the GIC DC network.

Each user branch data record has the following format:

```
I, J, CKT, RBRN, INDVP, INDVQ, RLNSHI, RLNSHJ
```

I	Branch from bus number

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

	No default allowed
J	Branch to bus number No default allowed
CKT	One- or two-character transformer circuit identifier; a transformer with circuit identifier CKT between buses I and J must be in the working case. CKT = '1' by default
RBRN	Branch DC resistance in ohms/phase. When RBRN is not specified or RBRN=0.0, power flow data branch resistance in pu is converted to ohms/phase and used. There is no temperature correction applied. RBRN = 0.0 by default
INDVP	Real part of total branch GMD induced electric field in volts. See note below on how to specify this value.
INDVQ	Imaginary part of total branch GMD induced electric field in volts. See note below on how to specify this value.
	Note 1 : Total branch GMD induced electric field, INDUCEDV = INDVP + j INDVQ volts Branch INDUCEDV is determined as below: • When INDUCEDV is not specified, GIC activity calculates this according to its options specified • When INDUCEDV is specified, it is used as GMD induced on that branch • When INDUCEDV is specified as INDVP = 0.0 and INDVQ = 0.0, then that branch is treated as part of the GIC DC network but does not have GMD induced voltage, like “underground pipe-type cables (cables enclosed in the steel pipe).” For uniform filed modeling INDUCEDV will be real value, but for non-uniform field modeling this will be complex value. This voltage will have positive polarity at branch To Bus (J bus). Note 2 : • When the Branch INDVP + j INDVQ is specified, it is used as is. There are no other scaling factors applied to this voltage. • When INDVP + j INDVQ is specified for all branches, specified GMD event option is ignored during GIC calculations. • When INDVP + j INDVQ is specified for few branches, the induced Efield for remaining branches in study subsystem is calculated using the GMD event option specified.
RLNSHI	DC resistance in ohms/phase of the line shunt at the bus I end of the branch. It must be > 0. When RLNSHI = 0 or not specified, there will be no ground path for this line shunt. No default allowed
RLNSHJ	DC resistance in ohms/phase of the line shunt at the bus J end of the branch. It must be > 0. When RLNSHJ = 0 or not specified, there will be no ground path for this line shunt.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

	No default allowed

7.8. User Earth Model Data

Activity GIC models US and Canada Earth Models (Ref...). However, if any other Earth Model is required, use this data to define such an earth model. A total of up to 50 user earth models are allowed. Also each earth model may have up to 25 layers. Use as many records needed to specify the data. The thickness of the last layer is infinity. This is specified as any value less than 0.0 (= -999.0 for example). The thickness value less than 0.0 is also used as end of earth model data.

Each user earth model data record has the following format:

```
NAME, BETAFTR, DESC, RESISTIVITY1, THICKNESS1, RESISTIVITY2, THICKNESS2, ...,
RESISTIVITY24, THICKNESS24, RESISTIVITY25, THICKNESS25
```

NAME	The non-blank alphanumeric identifier assigned to this earth model. Each earth model must have unique name. NAME may be up to 32 characters. This name should be different than the Standard US and Canada Earth Models defined (Refer ...). No default allowed
BETAFTR	Earth Model scaling factor used when calculating branch induced electric field for Benchmark GMD event. BETAFTR = 1 by default
DESC	Description of the earth model. NAME may be up to 72 characters. This is used for information purpose only DESC = "" by default
$RESISTIVITY_1$	Layer 1 resistivity in ohm-m No default allowed
$THICKNESS_1$	Layer 1 thickness in km No default allowed
$RESISTIVITY_N$	Nth layer resistivity in ohm-m. Up to 25 layers are allowed No default allowed
$THICKNESS_N$	Nth layer 1 thickness in km. Up to 25 layers are allowed. The thickness of the last layer is infinity. This is specified as any value less than 0 (= -999.0 for example). No default allowed

7.9. Switched Shunt Data

Only in-service switched shunts provided on this data record are modeled in the GIC DC network.

Each switched shunt data record has the following format:

GICFILEVRSN 4

```
I, R, RG
```


All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

GICFILEVRSN 5

```
I, ID, R, RG
```

I	Bus number; bus I must be present in the working case with positive sequence switched shunt data.
ID	One- or two-character non-blank alphanumeric switched shunt identifier. ID = '1' by default
R	DC resistance in ohms/phase. It must be > 0.0. Switched shunt records with R = 0.0 will be ignored. No default allowed
RG	Grounding DC resistance in ohms. No grounding resistance; solidly grounded. RG = 0.0 by default

7.10. Two-Terminal DC Data

The rectifier and inverter converter stations are connected to ac network through converter transformers. If these converter transformers are not explicitly modeled in the power flow, then use this data record to specify the GIC DC network data for them.

Provide DC resistance data of grounded windings of converter transformers.

The status (blocked or in-service) of two-terminal DC lines from power flow data is not considered. The DC data provided on this data record is modeled in the GIC DC network. Up to 10 GIC DC network elements are allowed per DC line.

Each two-terminal DC data record has the following format:


```
NAME, I, ID, R, RG
```

NAME	The non-blank alphanumeric identifier assigned to this DC line. It must be present in the working case. NAME may be up to 12 characters. No default allowed
I	Bus number of the rectifier (IPR) or inverter (IPI) converter AC bus. It must be present in the working case. No default allowed
ID	One- or two-character non-blank alphanumeric identifier. There could be more than one ground path at rectifier or inverter ac bus. This ID is used to be able to specify more than one ground path. This is specific to GIC data and it does not exist in the working case. No default allowed
R	DC resistance in ohms/phase of grounded winding of converter transformers. It must be > 0.0. R = 0.0 or not specified means there will be no ground path. No default allowed


All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

RG	Grounding DC resistance in ohms RG = 0.0 by default (no grounding resistance; solidly grounded)

Two-terminal DC data input is terminated with a record specifying a bus number of zero.

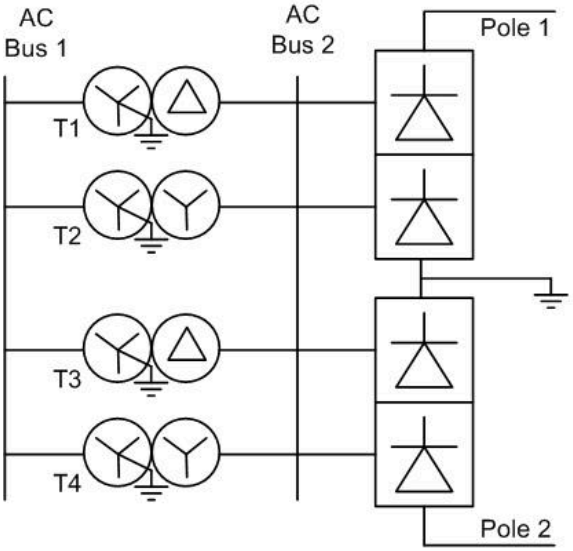

Typical HVDC Converter station

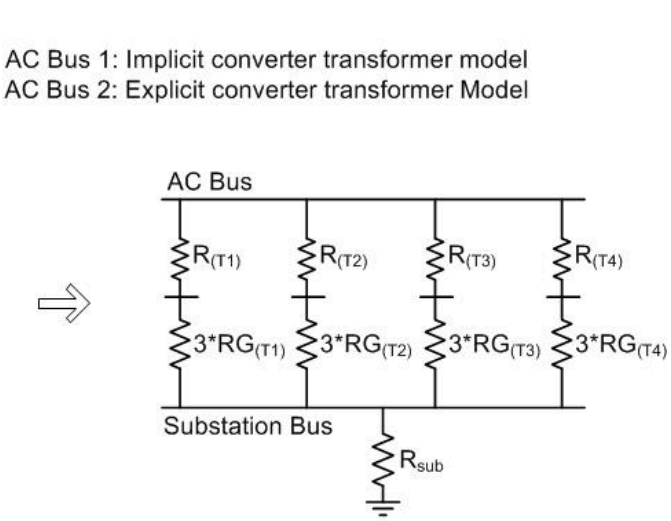

Converter transformer grounded windings representation in GIC DC network

7.11. VSC DC Data

The rectifier and inverter converter stations are connected to ac network through converter transformers. If these converter transformers are not explicitly modeled in the power flow, then use this data record to specify the GIC DC network data for them.

Provide DC resistance data of grounded windings of converter transformers.

The status (blocked or in-service) of VSC DC lines from power flow data is not considered. The DC data provided on this data record is modeled in the GIC DC network. Up to 10 GIC DC network elements are allowed per DC line.

Each VSC DC data record has the following format:

```
NAME, I, ID, R, RG
```

NAME	The non-blank alphanumeric identifier assigned to this VSC DC line. It must be present in the working case. NAME may be up to 12 characters. No default allowed
I	Bus number of the rectifier (IPR) or inverter (IPI) converter AC bus. It must be present in the working case. No default allowed
ID	One- or two-character non-blank alphanumeric identifier. There could be more than one ground path at rectifier or inverter ac bus. This ID is used to be able to specify

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

	more than one ground path. This is specific to the GIC data and it does not exist in the working case. No default allowed
R	DC resistance in ohms/phase of grounded winding of converter transformers. It must be > 0.0. R = 0.0 or not specified means there will be no ground path. No default allowed
RG	Grounding DC resistance in ohms RG = 0.0 by default (no grounding resistance; solidly grounded)

VSC DC data input is terminated with a record specifying a bus number of zero.

7.12. Multi-Terminal DC Data

The multi-terminal converters are connected to ac network through converter transformers. If these converter transformers are not explicitly modeled in the working case, then use this data record to specify the GIC DC network data for them.

Provide DC resistance data of grounded windings of converter transformers.

The status (blocked or in-service) of multi-terminal DC lines in the working case is not considered. The DC data provided on this data record is modeled in the GIC DC network. Up to 10 GIC DC network elements are allowed per DC line.

Each multi-terminal DC data record has the following format:

```
NAME, I, ID, R, RG
```

NAME	The non-blank alphanumeric identifier assigned to this Multi-Terminal DC line. It must be present in the working case. NAME may be up to 12 characters. No default allowed
I	Converter ac bus number (IB). It must be present in the working case. No default allowed
ID	One- or two-character non-blank alphanumeric identifier. There could be more than one ground path at ac bus. This ID is used to be able to specify more than one ground path. This is specific to the GIC data and it does not exist in the working case. No default allowed
R	DC resistance in ohms/phase of grounded winding of converter transformers. It must be > 0.0. R = 0.0 or not specified means there will be no ground path. No default allowed
RG	Grounding DC resistance in ohms RG = 0.0 by default (no grounding resistance; solidly grounded)

Multi-Terminal DC data input is terminated with a record specifying a bus number of zero.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

7.13. FACTS Device Data

The FACTS device converters are connected to ac network through converter transformers. If these converter transformers are not explicitly modeled in the working case, then use this data record to specify the GIC DC network data for them.

Provide DC resistance data of grounded windings of converter transformers.

The status (in-service or out-of-service) of FACTS device from power flow data is not considered. The DC data provided on this data record is modeled in the GIC DC network. Up to 10 GIC DC network elements are allowed per DC line.

Each multi-terminal DC data record has the following format:

```
NAME, I, ID, R, RG
```

NAME	The non-blank alphanumeric identifier assigned to this FACTS device. It must be present in the working case. NAME may be up to 12 characters. No default allowed
I	FACTS device sending end bus number (IBUS). It must be present in the working case. No default allowed
ID	One- or two-character non-blank alphanumeric identifier. There could be more than one ground path at ac bus. This ID is used to be able to specify more than one ground path. This is specific to the GIC data and it does not exist in the working case. No default allowed
R	DC resistance in ohms/phase of grounded winding of converter transformers. It must be > 0.0. R = 0.0 or not specified means there will be no ground path. No default allowed
RG	Grounding DC resistance in ohms RG = 0.0 by default (no grounding resistance; solidly grounded)

FACTS device data input is terminated with a record specifying a bus number of zero.

7.14. Load Data

Only in-service loads provided on this data record are modeled in the GIC DC network.

Each load data record has the following format:

```
I, ID, R, RG
```

I	Bus number of the bus to which load is connected. It must be present in the working case. No default allowed
ID	One- or two-character non-blank alphanumeric load identifier.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

	ID = '1' by default
R	DC resistance in ohms/phase of grounded loads. It must be > 0.0. R = 0.0 or not specified means there will be no ground path. No default allowed
RG	Grounding DC resistance in ohms RG = 0.0 by default (no grounding resistance; solidly grounded)

Load data input is terminated with a record specifying a bus number of zero.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

Chapter 8
Harmonics Data File (RAWX)

8.1. Overview

To perform harmonic analysis comprising network frequency scan and distortion calculations following data is needed.

1. power flow data (.raw file)
2. sequence flow data (.seq file) [optional] When sequence data is provided, appropriate positive, negative or zero sequence impedance is used to calculate impedance for each harmonics order and determine if equipment is grounded to consider in triplen harmonic calculations.
3. harmonic models and network elements frequency dependency data [optional]. When this data is not provided inductive or capacitive reactance is calculated for each harmonics order.
4. harmonic source data [optional] However, when harmonic current source data is not provided, voltage and current distortion calculations are not performed.

These additional data items (3) and (4) are provided in extended raw file (.rawx) under "harmonics" domain. The accuracy of harmonic analysis will depend on the quality this additional data provided. [Note - Harmonics data is provided in RAWx format, not RAW format.]

This section describes the format of the harmonic .rawx file.

Impedance Characteristics Data
Voltage Sources Data
Current Sources Data
Load Data
Generator (Synchronous Machine) Data
Non-Transformer Branch Data
Transformer Data
Two-Terminal DC Data
VSC DC Data

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

FACTS Device Data
Induction Machine (Asynchronous Machine) Data
Multi-Terminal DC Data
Passive Filter Data
Q Record

8.2. Impedance Characteristics Data

The frequency dependency of various network elements is defined in this table. The resistance, inductive reactance and capacitance reactance harmonic response is provided by this characteristics.

There is no limit on number of harmonics modeled in each impedance characteristics table.

Following two tables specify impedance characteristics data.

1. Impedance Characteristics
2. Impedance Characteristics Points

Each impedance characteristics data table has the following format:

```
"impchr":{
  "fields":["name"],
  "data":[
      ["ZTABLE1"],
      ...
      ["ZTABLE9"]
  ]
}
```

Each impedance characteristics points table has the following format:

```
"impchrpts":{
  "fields":["name", "hn", "rn", "x1", "x2"],
  "data":[
      ["ZTABLE1", 1.000000, 1.110000, 2.110000, 3.110000],
      ...
      ["ZTABLE9", 93.00000, 1.120000, 2.120000, 3.120000]
  ]
}
```

Field	RAWX Key	Description
NAME	name	The non-blank alphanumeric identifier assigned to table. Each Impedance Characteristics table must have unique NAME. The NAME may be up to 40 characteristics and may contain any combination of blanks, uppercase letters, numbers and special characters, but the first character must not be a minus sign. The NAME

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

Field	RAWX Key	Description
		must be enclosed in single or double quotes if it contains any blanks or special characters. No default allowed.
HN	hn	Harmonic Order No default allowed.
RN	rn	Resistance in ohms at harmonic order 'N'. No default allowed.
X1N	x1n	Inductive reactance (positive value) or Capacitive reactance (negative value) in ohms at harmonic order 'N'. No default allowed.
X2N	x2n	Inductive reactance (positive value) or Capacitive reactance (negative value) in ohms at harmonic order 'N'. No default allowed.

The total impedance at harmonic order 'N' is determined by series connection of RN, X1N and X2N.

8.3. Voltage Sources Data

The harmonic voltage sources are defined in this table.

There is no limit on number of harmonics modeled in each voltage sources table.

Following two tables specify voltage source data.

1. Voltage Source
2. Voltage Source Points

Each voltage sources data table has the following format:

```
"vltsrc":{
  "fields":["name", "angoptn"],
  "data":[
      ["VLTSRC1", 1],
      ...
      ["VLTSRC9", 1]
  ]
}
```

Each voltage sources points data table has the following format:

```
"vltsrcpts":{
  "fields":["name", "hn", "vn_v0", "angn"],
  "data":[
      ["VLTSRC1", 11.00000, 1.110000, 18.21000],
      ...
      ["VLTSRC9", 13.00000, 1.510000, -150.6100]
```


All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

```
  ]
}
```

Field	RAWX Key	Description
NAME	name	The non-blank alphanumeric identifier assigned to table. Each Voltage Sources table must have unique NAME. The NAME may be up to 40 characteristics and may contain any combination of blanks, uppercase letters, numbers and special characters, but the first character must not be a minus sign. The NAME must be enclosed in single or double quotes if it contains any blanks or special characters. No default allowed.
ANGOPTN	angoptn	Default angle determination • 0 - No • 1 - Yes ANGLE = 0 by default SINCAL value = Flag_DefAngle
HN	hn	Harmonic Order No default allowed. HN = 0 means end of table data
VN/V0	vn_v0	Ratio of voltage at harmonic order 'N' to voltage at fundamental frequency. No default allowed.
ANGN	angn	Angle in degrees at harmonic order 'N'. No default allowed.

Voltage Sources modeling is not implemented at this time.

8.4. Current Sources Data

The harmonic current sources are defined in this table.

There is no limit on number of harmonics modeled in each current sources table. Each current source characteristics must have fundamental harmonic order specified.

Each current source provided is treated as harmonic current injection at a bus. The pu value of this injection is calculated as below.

1. When CURTYP=0 (currents in percent of fundamental): The fundamental current to derive its actual PU contribution is calculated as below.

   - Loads, generators, and induction motors - The power flow solution fundamental current (I0) is considered as 1 PU or 100%.

   - Transformers - The base current calculated using system MVA base and bus base voltage of in-service highest voltage winding bus is considered as 1 PU or 100%.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

- 2TDC, VSCDC and MTDC Lines - Power flow solution fundamental current (I0) at its specified AC bus is considered as 1 PU or 100%.
- FACTS Device - Power flow solution fundamental current (I0) at its sending end bus is considered as 1 PU or 100%.

2. When CURTYP=1 (currents in amperes): The base current to derive its PU contribution is calculated as below.
   - Loads - System MVA base and bus base voltage
   - Generators - Generator MVA base and bus base voltage
   - Induction Motor - Induction motor MVA base and bus base voltage
   - Transformers - System MVA base and bus base voltage of in-service highest voltage winding bus
   - 2TDC, VSCDC, MTDC and FACTS Device - CURTYP=1 not allowed, specify data in terms of CURTYP=0

Following two tables tables specify current source data.

1. Current Source
2. Current Source Points

Each current sources data table has the following format:

```
"cursrc":{
          "fields":["name", "curtyp", "angoptn"],
          "data":[
              ["CURSRC1", 0, 1],
              ...
              ["CURSRC9", 0, 1],
          ]
      }
```

Each current sources points data table has the following format:

```
"cursrcpts":{
  "fields":["name", "hn", "in_i0", "angn"],
  "data":[
      ["CURSRC1", 1.000000, 1.311000, 18.32100],
      ...
      ["CURSRC9", 18.00000, 1.359000, -150.3690],
  ]
}
```

For a specified equipment/network element, a fundamental current (I0) from power flow solution is obtained. Then that current is used to derive harmonic current.

Each Current Sources data table has the following format. A harmonic current of this value is injected at the specified bus.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

Field	RAWX Key	Description
NAME	name	The non-blank alphanumeric identifier assigned to table. Each Current Sources table must have unique NAME. The NAME may be up to 40 characteristics and may contain any combination of blanks, uppercase letters, numbers and special characters, but the first character must not be a minus sign. The NAME must be enclosed in single or double quotes if it contains any blanks or special characters. No default allowed.
CURTYP	curtyp	Current source type • 0 - Current in percent of fundamental current • 1 - Current in amperes CURTYP = 0 by default
ANGOPTN	angoptn	Option to determine harmonic source injection phase shift relative to fundamental current • 0 - Yes. The angle of harmonic current sources is adjusted/shifted relative to fundamental frequency power flow solution equipment/network element current flow. • 1 - No. Use the angle specified. ANGOPTN = 0 by default
HN	hn	Harmonic Order Each current source table provided must have data points for fundamental harmonic order HN=1.0. When there is no injection at HN=1.0, specify I1=0.0, ANG1=0.0. No default allowed. HN = 0 means end of table data
IN or IHN/I0	in_i0	Harmonic current in amperes at harmonic order 'N' or Percent ratio of harmonic current at harmonic order 'N' to current at fundamental frequency. No default allowed.
ANGN	angn	Harmonic current angle in degrees at harmonic order 'N'. No default allowed.

8.5. Load Data

The frequency dependency behavior and harmonics contribution of only in-service loads provided on this data record are modeled.

Each load data record has the following format:

```
"load":{
```


All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

```
  "fields":["ibus", "id", "hstate", "htype", "hquality", "hireg", "hpk",
            "zharm", "vharm", "iharm"],
  "data":[
      [152, "1", 1, 16, 1.000000, 0.000000, 0.000000,
        "ZTABLE1", "VLTSRC1", "CURSRC1"],
      ...
      [3010, "1", 0, 5, 1.000000, 0.000000, 0.000000,
        "ZTABLE3", "VLTSRC3", "CURSRC3"]
  ]
}
```

Field	RAWX Key	Description
I	ibus	Bus number of the bus to which the load is connected. It must be present in the working case. No default allowed
ID	id	One- or two-character load identifier. ID = '1' by default
HSTATE	hstate	Current control state • 0 - Not active in harmonics • 1 - Active in harmonics HSTATE = 1 by default
HTYPE	htype	Harmonic Model type • 0 - No frequency dependency • 1 - Quality - R constant (serial) • 2 - Quality - X/R constant (serial) • 3 - Impedance characteristics • 4 - Quality - X/R constant (parallel) • 5 - CIGRE Measurements model • 6 - Quality - R constant (parallel) • 7 - IEEE Measurements model • 8 - IEEE RL Series Model • 9 - IEEE RL Parallel Model • 10 - Infinite, ignored in harmonics network • 11 - IEEE Skin Effect Model • 12 - IEEE Induction Motor Model

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

Field	RAWX Key	Description
		• 13 - IEEE 2RL Parallel Model • 14 - CIGRE Passive Model • 15 - CIGRE Motive Model • 16 - Large Area Asynchronous Motor Model HTYPE = 0 by default SINCAL value = Flag_Har
HQUALITY	hquality	Harmonic quality constant (not used) HQUALITY = 1.0 by default.
HIREG	hireg	Control current (not used) HCTRLCUR = 0.0 by default SINCAL value = Ireg
HPK	hpk	Reference Compensation Power (not used) HPK = 0.0 by default SINCAL value = pk
ZHARM_TABLE	zharm	Previously defined Harmonic Impedance Characteristics table name. The frequency behavior of the load is modeled using the impedance characteristics specified in this table when provided. ZHARM_TABLE = '' by default.
VHARM_TABLE	vharm	Previously defined Harmonic Voltage Source table name. When modeled the load will inject the voltage harmonics to the network at bus 'I'. The voltage source value at harmonic order 'N' is calculated using the voltage source characteristics specified in this table. When table is not found or specified as blank, the voltage harmonics by the load are ignored. VHARM_TABLE = '' by default. VHARM_TABLE is not yet implemented and is ignored.
IHARM_TABLE	iharm	Previously defined Harmonic Current Source table name. When modeled the load will inject the current harmonics in the network at bus 'I'. The Current source value at harmonic order 'N' is calculated using the current source characteristics specified in this table. When table is not found or specified as blank, the current harmonics by the load are ignored. IHARM_TABLE = '' by default.

8.6. Generator Data

The frequency dependency behavior and harmonics contribution of only in-service generators provided on this data record are modeled.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

Each generator data record has the following format:

```
"generator":{
  "fields":["ibus", "id", "hstate", "htype", "hquality",
            "zharm", "vharm", "iharm"],
  "data":[
      [101, "1", 0, 3, 1.000000, "ZTABLE1", "VLTSRC1", "CURSRC1"],
      ...
      [3018, "2", 1, 5, 1.000000, "ZTABLE3", "VLTSRC3", "CURSRC3"]
  ]
}
```

Field	RAWX Key	Description
I	ibus	Bus number of the bus to which the generator is connected. It must be present in the working case. No default allowed
ID	id	One- or two-character generator identifier. ID = '1' by default
HSTATE	hstate	Current control state • 0 - Not active in harmonics • 1 - Active in harmonics HSTATE = 1 by default
HTYPE	htype	Harmonic type • 0 - No frequency dependency, R and X used as in power flow data • 1 - quality constant R series • 2 - quality constant X/R series (generator R data if any, ignored and R calculated from HQUALITY) • 3 - Impedance characteristics • 4 - Model 1: IEEE • 5 - Model 2: CIGRE Electra 167 • 6 - Model 3: HQ (Hydro Quebec) • 7 - Infinite, ignored in harmonics network HTYPE = 0 by default
HQUALITY	hquality	Harmonic quality constant (not used) HQUALITY = 1.0 by default.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

Field	RAWX Key	Description
ZHARM_TABLE	zharm	Previously defined Harmonic Impedance Characteristics table name. The frequency behavior of the generator is modeled using the impedance characteristics specified in this table when provided. ZHARM_TABLE = '' by default.
VHARM_TABLE	vharm	Previously defined Harmonic Voltage Source table name. When modeled the generator will inject the voltage harmonics to the network at bus 'I'. The voltage source value at harmonic order 'N' is calculated using the voltage source characteristics specified in this table. When table is not found or specified as blank, the voltage harmonics by the generator are ignored. VHARM_TABLE = '' by default. VHARM_TABLE is not yet implemented and is ignored.
IHARM_TABLE	iharm	Previously defined Harmonic Current Source table name. When modeled the generator will inject the current harmonics in the network at bus 'I'. The Current source value at harmonic order 'N' is calculated using the current source characteristics specified in this table. When table is not found or specified as blank, the current harmonics by the generator are ignored. IHARM_TABLE = '' by default.

8.7. Non-Transformer Branch Data

The frequency dependency behavior of only in-service non-transformer branches provided on this data record are modeled.

The branch is always modeled with branch resistance skin effect and long line effects considered except when ZHARM table is specified.

The branch shunts are modeled as per the HTYPE specified below.

Each non-transformer branch data record has the following format:

```
"ntbranch":{
  "fields":["ibus", "jbus", "ckt", "hstate", "htype", "hquality", "zharm"],
  "data":[
      [151, 152, "1", 1, 4, 1.000000, "ZTABLE1"],
      ...
      [3008, 3009, "1", 0, 0, 1.000000, "ZTABLE6"]
  ]
}
```

Field	RAWX Key	Description
I	ibus	Branch from bus number. It must be present in the working case. No default allowed
J	jbus	Branch to bus number. It must be present in the working case. No default allowed

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

Field	RAWX Key	Description
CKT	ckt	One- or two-character non-transformer branch identifier. A branch with cicuit identifier CKT between buses I and J must be in the working case. CKT = '1' by default
HSTATE	hstate	Current control state • 0 - Not active in harmonics • 1 - Active in harmonics HSTATE = 1 by default
HTYPE	htype	Harmonic type. Used to specify branch shunt model. • 0 - no frequency dependency, R and X used as in power flow data • 1 - quality constant R series • 2 - quality constant X/R series (applicable only when branch shunt is inductive), (Line shunt R data if any, ignored and shunt R calculated from HQUALITY) • 3 - quality constant R parallel • 4 - quality constant X/R parallel (applicable only when branch shunt is inductive), (Line shunt R data if any, ignored and shunt R calculated from HQUALITY) HTYPE = 0 by default
HQUALITY	hquality	Harmonic quality constant (not used) HQUALITY = 1.0 by default.
ZHARM_TABLE	zharm	Previously defined Harmonic Impedance Characteristics table name. The frequency behavior of the non-transformer branch is modeled using the impedance characteristics specified in this table when provided. ZHARM_TABLE = '' by default.

8.8. Transformer Data

The frequency dependency behavior and harmonics contribution of only in-service transformers provided on this data record are modeled.

Each transformer data record has the following format:

```
"trbranch":{
  "fields":["ibus", "jbus", "kbus", "ckt", "hstate", "htype", "hquality",
            "zharm", "iharm"],
  "data":[
      [101, 151, 0, "T1", 1, 0, 1.000000, "ZTABLE1", "CURSRC1"],
      ...
      [3008, 3012, 3010, "2", 0, 5, 1.000000, "ZTABLE4", "CURSRC4"]
  ]
```


All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

}

Field	RAWX Key	Description
I	ibus	Transformer Winding 1 bus number. It must be present in the working case. No default allowed
J	jbus	Transformer Winding 2 bus number. It must be present in the working case. No default allowed
K	kbus	Transformer Winding 3 bus number. K is specified as 0 (zero) to indicate that no third winding is present. When K specified is non-zero, it must be present in the working case. K = 0 by default.
CKT	ckt	One- or two-character transformer identifier. A transformer with circuit identifier CKT between buses I and J (and K if K is non-zero) must be in the working case. CKT = '1' by default
HSTATE	hstate	Current control state • 0 - Not active in harmonics • 1 - Active in harmonics HSTATE = 1 by default
HTYPE	htype	Harmonic type • 0 - No frequency dependency, R and X used as in power flow data • 1 - Model 1 - CIGRE Electra No. 167 • 2 - Model 2 – IEEE Std. 399 • 3 - Model 3 – CIGRE Electra No. 164 • 4 - Model 4 – Arrillaga • 5 - Model 5 – Funk • 6 - Impedance characteristics (allowed only for 2 winding transformers) HTYPE = 0 by default
HQUALITY	hquality	Harmonic quality constant (not used) HQUALITY = 1.0 by default.
ZHARM_TABLE	zharm	Previously defined Harmonic Impedance Characteristics table name. The frequency behavior of the transformer is modeled using the impedance characteristics specified in this table when provided. ZHARM_TABLE = '' by default.
IHARM_TABLE	iharm	Previously defined Harmonic Current Source table name. When modeled the transformer will inject the current harmonics in the network at in-service highest

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

Field	RAWX Key	Description
		voltage winding bus. The Current source value at harmonic order 'N' is calculated using the current source characteristics specified in this table. When table is not found or specified as blank, the current harmonics by the transformer are ignored. IHARM_TABLE = '' by default.

8.9. Two-Terminal DC Data

The voltage and current harmonics contribution of only in-service two-terminal dc lines provided on this data record are modeled.

Each two-terminal dc line data record has the following format:

```
"2tdc":{
  "fields":["name", "acbus", "hstate", "vharm", "iharm"],
  "data":[
      ["TWO_TERM_DC1", 301, 1, "VLTSRC1", "CURSRC1"],
      ...
      ["TWO_TERM_DC2", 301, 0, "VLTSRC2", "CURSRC2"]
  ]
}
```

Field	RAWX Key	Description
NAME	name	The non-blank alphanumeric two-terminal dc line name. It must be present in the working case. No default allowed
ACBUS	acbus	Two-terminal dc line rectifier or inverter converter AC bus number. A two-terminal dc line 'NAME' with 'ACBUS' as one of the rectifier or inverter buses must be in the working case. No default allowed
HSTATE	hstate	Current control state • 0 - Not active in harmonics • 1 - Active in harmonics HSTATE = 1 by default
VHARM_TABLE	vharm	Previously defined Harmonic Voltage Source table name. When modeled the two-terminal dc line will inject the voltage harmonics to the network at bus 'ACBUS'. The voltage source value at harmonic order 'N' is calculated using the voltage source characteristics specified in this table. When table is not found or specified as blank, the voltage harmonics by the two-terminal dc line are ignored. VHARM_TABLE = '' by default. VHARM_TABLE is not yet implemented and is ignored.
IHARM_TABLE	iharm	Previously defined Harmonic Current Source table name. When modeled the two-terminal dc line will inject the current harmonics in the network at bus 'ACBUS'.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

Field	RAWX Key	Description
		The Current source value at harmonic order 'N' is calculated using the current source characteristics specified in this table. When table is not found or specified as blank, the current harmonics by the two-terminal dc line are ignored. IHARM_TABLE = '' by default.

8.10. VSC DC Data

The voltage and current harmonics contribution of only in-service VSC dc lines provided on this data record are modeled.

Each VSC dc line data record has the following format:

```
"vscdc":{
  "fields":["name", "acbus", "hstate", "vharm", "iharm"],
  "data":[
      ["VDCLINE1", 3005, 1, "VLTSRC1", "CURSRC1"],
      ...
      ["VDCLINE2", 203, 0, "VLTSRC2", "CURSRC2"]
  ]
}
```

Field	RAWX Key	Description
NAME	name	The non-blank alphanumeric VSC dc line name. It must be present in the working case. No default allowed
ACBUS	acbus	VSC dc line converter AC bus number. A VSC dc line 'NAME' with 'ACBUS' as one of its converters AC buses must be in the working case. No default allowed
HSTATE	hstate	Current control state • 0 - Not active in harmonics • 1 - Active in harmonics HSTATE = 1 by default
VHARM_TABLE	vharm	Previously defined Harmonic Voltage Source table name. When modeled the VSC dc line will inject the voltage harmonics to the network at bus 'ACBUS'. The voltage source value at harmonic order 'N' is calculated using the voltage source characteristics specified in this table. When table is not found or specified as blank, the voltage harmonics by the VSC dc line are ignored. VHARM_TABLE = '' by default. VHARM_TABLE is not yet implemented and is ignored.
IHARM_TABLE	iharm	Previously defined Harmonic Current Source table name. When modeled the VSC dc line will inject the current harmonics in the network at bus 'ACBUS'. The Current source value at harmonic order 'N' is calculated using the current source charac-

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

Field	RAWX Key	Description
		teristics specified in this table. When table is not found or specified as blank, the current harmonics by the VSC dc line are ignored. IHARM_TABLE = '' by default.

8.11. FACTS Device Data

The voltage and current harmonics contribution of only in-service FACTS devices provided on this data record are modeled.

Each FACTS device data record has the following format:

```
"facts":{
  "fields":["name", "sendbus", "termbus", "hstate", "htype", "hquality",
            "zharm", "vharm", "iharm"],
  "data":[
      ["FACTS_DVCE_1", 153, 0, 0, 0, 1.000000, "ZTABLE1", "VLTSRC1", "CURSRC1"],
      ...
      ["FACTS_DVCE_2", 153, 155, 1, 1, 1.000000, "ZTABLE2", "VLTSRC2", "CURSRC2"]
  ]
}
```

Field	RAWX Key	Description
NAME	name	The non-blank alphanumeric FACTS device name. It must be present in the working case. No default allowed
SENDBUS	sendbus	FACTS device Sending End AC bus number. A FACTS device 'NAME' with 'SENDBUS' as its sending AC bus must be in the working case. A SENDBUS value must be provided as every FACTS device has as least one bus, making it a shunt device. No default allowed
TERMBUS	termbus	FACTS device Terminal End AC bus number. A FACTS device 'NAME' with 'TERMBUS' as its terminal AC bus must be in the working case. A TERMBUS value must be provided if the FACTS device is operating as a serial device. TERMBUS = 0 by default
HSTATE	hstate	Current control state • 0 - Not active in harmonics • 1 - Active in harmonics HSTATE = 1 by default
HTYPE	htype	Harmonic type If TERMBUS = 0: • 0 - No frequency dependency • 1 - Quality - R constant (serial)

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

Field	RAWX Key	Description
		• 2 - Quality - X/R constant (serial) • 3 - Impedance characteristics • 4 - Quality - X/R constant (parallel) • 5 - CIGRE Measurements model • 6 - Quality - R constant (parallel) • 7 - Infinite If TERMBUS != 0: • 0 - No frequency dependency • 1 - Quality - R constant (serial) • 2 - Quality - X/R constant (serial) • 3 - Impedance characteristics HTYPE = 0 by default SINCAL value = Flag_Har
HQUALITY	hquality	Harmonic quality constant (not used) HQUALITY = 1.0 by default.
ZHARM_TABLE	zharm	This item is required if the FACTS device is serial device, SENDBUS is not zero and TERMBUS is not zero. Previously defined Harmonic Impedance Characteristics table name. The frequency behavior of the FACTS device is modeled using the impedance characteristics specified in this table when provided. ZHARM_TABLE = '' by default.
VHARM_TABLE	vharm	Previously defined Harmonic Voltage Source table name. When modeled the FACTS device will inject the voltage harmonics to the network at bus 'SENDBUS'. The voltage source value at harmonic order 'N' is calculated using the voltage source characteristics specified in this table. When table is not found or specified as blank, the voltage harmonics by the FACTS device are ignored. VHARM_TABLE = '' by default. VHARM_TABLE is not yet implemented and is ignored.
IHARM_TABLE	iharm	Previously defined Harmonic Current Source table name. When modeled the FACTS device will inject the current harmonics in the network at bus 'SENDBUS'. The Current source value at harmonic order 'N' is calculated using the current source characteristics specified in this table. When table is not found or specified as blank, the current harmonics by the FACTS device are ignored.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

Field	RAWX Key	Description
		IHARM_TABLE = '' by default.

8.12. Induction (asynchronous) Machine Data

The frequency dependency behavior and harmonics contribution of only in-service induction machines provided on this data record are modeled.

Each induction machine data record has the following format:

```
"indmach":{
  "fields":["ibus", "id", "hstate", "htype", "hquality",
            "zharm", "vharm", "iharm"],
  "data":[
      [3010, "1", 1, 2, 1.000000, "ZTABLE1", "VLTSRC1", "CURSRC1"],
      ...
      [93002, "1", 1, 9, 1.000000, "ZTABLE4", "VLTSRC4", "CURSRC4"]
  ]
}
```

Field	RAWX Key	Description
I	ibus	Bus number of the bus to which the induction machine is connected. It must be present in the working case. No default allowed
ID	id	One- or two-character induction machine identifier. ID = '1' by default
HSTATE	hstate	Current control state • 0 - Not active in harmonics • 1 - Active in harmonics HSTATE = 1 by default
HTYPE	htype	Harmonic type • 0 - No frequency dependency • 1 - Quality - R constant • 2 - Quality - X/R constant • 3 - Impedance characteristics • 4 - Infinite HTYPE = 0 by default SINCAL value = Flag_Har
HQUALITY	hquality	Harmonic quality constant (not used)

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

Field	RAWX Key	Description
		HQUALITY = 1.0 by default.
ZHARM_TABLE	zharm	Previously defined Harmonic Impedance Characteristics table name. The frequency behavior of the induction machine is modeled using the impedance characteristics specified in this table when provided. ZHARM_TABLE = '' by default.
VHARM_TABLE	vharm	Previously defined Harmonic Voltage Source table name. When modeled the induction machine will inject the voltage harmonics to the network at bus 'I'. The voltage source value at harmonic order 'N' is calculated using the voltage source characteristics specified in this table. When table is not found or specified as blank, the voltage harmonics by the induction machine are ignored. VHARM_TABLE = '' by default. VHARM_TABLE is not yet implemented and is ignored.
IHARM_TABLE	iharm	Previously defined Harmonic Current Source table name. When modeled the induction machine will inject the current harmonics in the network at bus 'I'. The Current source value at harmonic order 'N' is calculated using the current source characteristics specified in this table. When table is not found or specified as blank, the current harmonics by the induction machine are ignored. IHARM_TABLE = '' by default.

8.13. Multi-Terminal DC Data

The voltage and current harmonics contribution of only in-service multi-terminal dc lines provided on this data record are modeled.

Each multi-terminal dc line data record has the following format:

```
"mtdc":{
  "fields":["name", "acbus", "hstate", "vharm", "iharm"],
  "data":[
      ["MULTERM_DC_1", 402, 1, "VLTSRC4", "CURSRC4"],
      ...
      ["MULTERM_DC_1", 213, 1, "VLTSRC2", "CURSRC2"]
  ]
}
```

Field	RAWX Key	Description
NAME	name	The non-blank alphanumeric multi-terminal dc line name. It must be present in the working case. No default allowed
ACBUS	acbus	Multi-terminal dc line rectifier or inverter converter AC bus number. A multi-terminal dc line 'NAME' with 'ACBUS' as one of the rectifier or inverter buses must be in the working case. No default allowed
HSTATE	hstate	Current control state

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

Field	RAWX Key	Description
		• 0 - Not active in harmonics • 1 - Active in harmonics HSTATE = 1 by default
VHARM_TABLE	vharm	Previously defined Harmonic Voltage Source table name. When modeled the multi-terminal dc line will inject the voltage harmonics to the network at bus 'ACBUS'. The voltage source value at harmonic 'N' is calculated using the voltage source characteristics specified in this table. When table is not found or specified as blank, the voltage harmonics by the multi-terminal dc line are ignored. VHARM_TABLE = '' by default. VHARM_TABLE is not yet implemented and is ignored.
IHARM_TABLE	iharm	Previously defined Harmonic Current Source table name. When modeled the multi-terminal dc line will inject the current harmonics in the network at bus 'ACBUS'. The Current source value at harmonic 'N' is calculated using the current source characteristics specified in this table. When table is not found or specified as blank, the current harmonics by the multi-terminal dc line are ignored. IHARM_TABLE = '' by default.

8.14. Passive Filter Data

The passive filter will be added as fixed bus shunt to PSSE working case only during harmonic analysis activities.

For each harmonic frequency, the fixed bus shunt MW and MVAR are calculated and the working case updated accordingly.

Given RG, XB1 and XB2 at the fundamental frequency and CZY, the units in which they are specified, the passive filter equivalent impedance and corresponding fixed bus shunt MW and MVAR are calculated.

The passive filter specified with "I, ID" should not exist in the working case as the Fixed Bus Shunt "I, ID". If Fixed Bus Shunt "I, ID" exists in the working case, the passive filter specified with "I, ID" will be ignored.

Each Passive Filter data record has the following format:

```
"pfilter":{
          "fields":["ibus", "id", "hstate", "czy", "cfg", "rg", "xb1", "xb2"],
  "data":[
      [101, "FO", 0, 0, 1, 0.1000000, 0.2000000, 0.3100000],
      ...
      [204, "YK", 0, 0, 2, 0.1000000, 0.2000000, 0.3200000]
  ]
}
```

Field	RAWX Key	Description
I	ibus	Bus number of the bus to which the passive filter is connected. It must be present in the working case.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

Field	RAWX Key	Description
		No default allowed
ID	id	One- or two-character passive filter identifier. No default allowed
NAME	name	Alphanumeric identifier assigned to the Passive Filter. NAME may be up to forty characters and may contain any combination of blanks, uppercase letters, numbers and special characters. NAME must be enclosed in single or double quotes if it contains any blanks or special characters. NAME must be unique within all passive filters. By default name is generated as string formed with bus number + filter ID.
HSTATE	hstate	Current control state • 0 - Not active in harmonics • 1 - Active in harmonics HSTATE = 1 by default
CZY	czy	Units of RG, XB1 and XB2 • 0 - Impedance expressed in PU on bus voltage and system MVA base • 1 - Admittance expressed in PU on bus voltage and system MVA base • 2 - Admittance expressed in MW and MVAR at 1 PU voltage • 3 - Impedance expressed in ohms. XB1 and XB2 are expressed as positive for inductive reactance and negative for capacitive reactance. The filter per unit impedance is calculated on bus voltage and system MVA base. • 4 - RG is resistance in PU, XB1 in inductive reactance in PU, XB2 is capacitive susceptance in PU on bus voltage and system MVA base CZY = 0 by default
CFG	cfg	Configuration of RG, XB1 and XB2 • 0 - RG, XB1, XB2 are connected in series • 1 - RG, XB1, XB2 are connected in parallel • 2 - RG and XB1 are connected in parallel and that equivalent in series with XB2 • 3 - RG and XB2 are connected in parallel and that equivalent in series with XB1 CFG = 0 by default
RG	rg	Resistance, Conductance or MW as per CZY RG = 0.0 by default.
XB1	xb1	Reactance, Susceptance or MVAR as per CZY XB1 = 0.0 by default.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

Field	RAWX Key	Description
XB2	xb2	Reactance, Susceptance or MVAR as per CZY XB2 = 0.0 by default.

RG is positive for resistance, conductance and MW.

XB1 and XB2 are positive for inductive reactance and capacitive susceptance.

XB1 and XB2 are negative for inductive susceptance and capacitive reactance .

XB1 and XB2 are positive for capacitive MVAR.

XB1 and XB2 are negative for inductive MVAR.

When RG, XB1 and XB2 are 0.0 (zero), the record will be ignored.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

Chapter 9
TSPF Data File

9.1. Overview

The time series power flow (TSPF) solution uses porfile data to set up operation conditions and calculate full ac power flow solutions for each time point during a period of time. One goal of the time series power flow soltuion is to sutdy how branch loadings, bus voltages and voltage controlling devices etc vary when operation conditions change. The operation conditions are determined by load, generation, operating status of network elements at time points which are decribed by profile data.

The input profile data needed to run TSPF is provided in TSPF RAWx file.

In most cases, profile data is large volume data stored in some proprietary data bases. Such data can be extracted to Excel worksheets in a generic format (rowwise or columnwise). Python module "tspfdata" installed can be used to convert such data from Excel to TSPF RAWx format data file. Refer "tspfdata" module in Application Program Interface (API) manual.

Following three record groups define TSPF RAWx file contents.

1. profile curve set data - defines the start time and time step for all profile curves in the set
2. profile curve data - defines the profile curves in profile curve set
3. profile data - defines curve set and curve assigned to network elements

9.2. Profile Curve Set Data

The profile curve set record defines the start time and time step for all profile curves in the set. TSPF solution is performed on one of profile curve sets at a time. Rawx data table format:

```
"profilecurveset":{
"fields":["curvesetid", "start", "timestep", "interval", "intmult"],
"data":[
          [1, "2022-01-01 00:00:00", 15, 6, 1.000000],
          [3, "2022-01-01 00:00:00",  1, 5, 1.000000]
       ]
}
```

curvesetid	An integer identifier of curve set, each set has a unique id.
start	alphanumeric string of starting time of the curve set, defined as “year-month-date hour:minute:second”
timestep	An integer of the time step describes interval between time points

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

interval	An integer of interval describes the resolution of timestep =1, for year =2, for month =3, for week =4, for day =5, for hour =6, for minute =7, for second
intmult	Timestep multiplier, 1.0 by default

9.3. Profile curve data

The profile curve data defines the profile curves in profile curve set. Each record defines one single time point indexed by the profile curve set, profile curve column number, and time index. Rawx data table format is:

```
"profiledata":{
"fields":["curvesetid", "curvecol", "index", "value"],
"data":[
          [1, 1, 1, 1163.360],
          [1, 1, 2, 1155.040]
       ]
}
```

curvesetid	curve set identifier, no default allowed
curvecol	An integer curve column identifier, no default allowed
index	An integer time point index, no default allowed
value	A real time point value on the profile curve

When there are one or multiple profile curves in a profile set, a master list of time point indcies is established with time point indcies of all curves in the set. If a curve does not have one or multiple time point indcies in the master list, the missing points will be estimated by interpolation during time series power flow solution if the curve is not used in "*Schedule*" mode. If a profile curve is used in *Schedule* mode, the missing points mean no changes to the data quantities that it applies to. The order in which profile data records are entered is not important, the time point indcies in the master list are in the ascending order of index number. Index is used as time step to calculate the actual time too. For an index *t*, the time is calculated in the form of:

Time=start_time+t timestep*

The profile time points are defined indivadully in any order, it is likely that time points of one curve are not defined sequantially and consecutively. The api TSPF_OUTPUT_PMATRIX is used to present profile data in matrix form for each profile curve set, where one profile curve is a column, and one time point index is a row. Figure shows the example of matrix form of profile curves within a profile curve set.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

	Time	CURVE 1	CURVE 2	CURVE 3	CURVE 4	CURVE 11
	2022-01-01 00:00:00	1163.36000	1454.20000	436.260000	87.252000	0.000000
	2022-01-01 00:15:00	1155.04000	1443.80000	433.140000	86.628000	
	2022-01-01 00:30:00	1149.20000	1436.50000	430.950000	86.190000	
	2022-01-01 00:45:00	1143.84000	1429.80000	428.940000	85.788000	
	2022-01-01 01:00:00	1142.16000	1427.70000	428.310000	85.662000	1.000000
	2022-01-01 01:15:00	1139.92000	1424.90000	427.470000	85.494000	
	2022-01-01 01:30:00	1134.24000	1417.80000	425.340000	85.068000	
	2022-01-01 01:45:00	1130.08000	1412.60000	423.780000	84.756000	
	2022-01-01 02:00:00	1125.12000	1406.40000	421.920000	84.384000	
	2022-01-01 02:15:00	1121.12000	1401.40000	420.420000	84.084000	
	2022-01-01 02:30:00	1117.44000	1396.80000	419.040000	83.808000	
	2022-01-01 02:45:00	1112.24000	1390.30000	417.090000	83.418000	
	2022-01-01 03:00:00	1101.20000	1376.50000	412.950000	82.590000	
	2022-01-01 03:15:00	1096.56000	1370.70000	411.210000	82.242000	
	2022-01-01 03:30:00	1096.88000	1371.10000	411.330000	82.266000	
	2022-01-01 03:45:00	1101.84000	1377.30000	413.190000	82.638000	
	2022-01-01 04:00:00	1115.60000	1394.50000	418.350000	83.670000	
	2022-01-01 04:15:00	1116.48000	1395.60000	418.680000	83.736000	
	2022-01-01 04:30:00	1121.36000	1401.70000	420.510000	84.102000	
	2022-01-01 04:45:00	1127.04000	1408.80000	422.640000	84.528000	
	2022-01-01 05:00:00	1136.16000	1420.20000	426.060000	85.212000	
	2022-01-01 05:15:00	1140.80000	1426.00000	427.800000	85.560000	

TSPF Summary | TSPF Loading | TSPF Voltage | TSPF SWShunt | **TSPF PMatrix**

9.4. Profile

Profile record defines the data quantities of network elements to be changed by profile curve data.

Profile assignment data is defined as following:

```
"profiles":{
"fields":["name", "element", "field", “status”, "curvesetid", "curvecol", "adjmode",
          "offset", "scalefactor", "mwlimits"],
"data":[
          ["1", "area 1", 1, 1, 1, 1,1, .000000, 1.000000, 0],
          ["2", "gen 3018 "1", 3, 1, 1, 4,1, .000000, 1.000000, 1]
       ]
}
```

name	The non-blank alphanumeric name of profile record. Each record has an unique name and assigns profile curve to one data quantity of a network element
element	The non-blank alphanumeric identifier of a system element: “gen 101 ‘1’” “load 101 ‘1’”

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

	"area 1" "zone 1" "owner 1"
field	Define data field of the elements to be modified by profile data during time series power flow solution, for example: 1 for active power load 2 for reactive power load 3 for active power generation When element is area/zone, the data field refers to the total load or total generation in the area/zone.
status	Status of profile record, 0 to ignore the record definition during the time series power flow solution, 1 to apply the record definition
curvesetid	Assign the Curve set number to the element, the set is defined in the curve set data table. When the set is selected for time series power flow solution, the data filed of the element is modified by time points.
curvecol	Assign the curve column number to the field of the element.
adjmode	Define the mode in which the data filed is modified: =1 for absolute, the time points are in MW/MVar =2 for scale, time points are percentage values of the current values of load and generation =3 for deviation, the time points specify changes in MW/MVar from load and generation current values. =4 for schedule, the time points specify planed outages.
offset	Define the offset to the time points for the element, each time point
scalefactor	Define the scaling factor of the time points
mwlimits	Define the maximum limit of the time points

Network elements can have a profile curve for each of its parameters that is adjustable by profile data. In the profile assignment record, the curve set number (*curvesetid*) and curve column number (*curvecol*) refer to definitions in profile curve set tabel and profile curve data table; the adjustment model (adjmode), offset and factor determine how the profile time point values of the specified curve are interpreted and used by the element. For example, two loads may have the same curve column number in the same curve set, but they have different offset.

The adjustment modes of 1,2,3 (absolute, scale and deviation) are used for load demands and generation outputs that change continuously; profile curves are assgined to the elements are treated as continuous curves. The schedule mode of 4 is used for planned outage of network elements to disribe the discrete events, such as line maintanance outages, generation dispatch change. some fields of network elements can be changed in all four modes, other fields are allowed to change in some mode. Data quantities of elements

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

that are allowed to change change by profile curves are defined by *field*. Available fields for each type of element is defined as following:

Element	Element identifier string	Available field
load	The keyword is load, followed by bus number and load id “load 101 ‘1’”	1 load status (s) 2 active load 3 reactive load
machine	The keyword is gen, followed by bus number and machine id Example: “gen 101 ‘1’”	1 machine status (s) 2 active generation output 3 reactive generation output (s) 6 voltage schedule at the bus controlled by the generator(s)
bus fixed shunt	“shunt 101 ‘1’”	1 bus fixed shunt status (s) 2 active component of shunt (s) 3 reactive component of shunt (s)
switched shunt	“swshunt 101 ‘1’”	1 switched shunt status (s) 3 switched shunt admittance (s) 4 voltage schedule at the bus controlled by the switched shunt (s) 5 voltage upper limit of the controlled bus voltage (s) 6 voltage lower limit of the controlled bus voltage (s)
induction machine	"indmach 101 '1'"	1 induction machine status (s)
branch	“branch 101 102 ‘1’”	1 branch status (s) 3 branch reactance (s)
Three winding transformer	“3wxformer 101 102 103 ‘1’”	4 for three winding transformer status (s)
two terminal DC line	"twotermdc 'anme'"	1 two terminal dc line status (s) 2 Power setting in MW (s) 3 Current setting in AMPS (s) 4 Scheduled compounded dc voltage in KV (s) 5 line resistance in Ohms (s)
multiple terminal DC line	"ntermdc 'name'	1 multiple terminal DC line status (s)
VSCDC	"vscdc 'name'"	1 VSCDC line status (s)

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

Element	Element identifier string	Available field
		2 MW setting of VSCDC line (s) 3 Voltage setting of VSCDC line (s) 4 VSCDC line resistance in Ohms (s)
FACTs	"facts 'name'"	1 FACTs device status (s)
breaker in a substation	The keyword is subswd, followed by substation number,from node, to node and breaker id “subswd 1 102 103 ‘1’”	1 breaker status (s)
area	“area 1”	1 for active load (ns) 2 for reactive load (ns) 3 for active generation (ns)
zone	“zone 1”	1 for active load (ns) 2 for reactive load (ns) 3 for active generation (ns)
owner	“owner 1”	1 for active load (ns) 2 for reactive load (ns) 3 for active generation (ns)

Note:

1. **s** indicates that the field can only be changed by the profile curve assignment in schedule mode only
2. **ns** indicates that the field can only be changed in one of absolute, scale and deviation modes

Outage profile example:

The following records define planned outage profile for "branch 101 102 '1'", the outage happens at time point 30, and the line is back to service at 45.

```
"profiledata":{
 "fields":["curvesetid", "curvecol", "index", "value"],
 "data":[
          [1, 1, 30, 0],
          [1, 1, 45, 1]
       ]
 }

 "profiles":{
 "fields":["name", "element", "field", “status”, "curvesetid", "curvecol", "adjmode",
          "offset", "scalefactor", "mwlimits"],
 "data":[
```


All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

```
            ["1", "branch 101 102 '1'", 4, 1, 1, 1,4, .000000, 1.000000, 0]
        ]
    }
```


All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

Chapter 10
Machine Capability Curve Data File

10.1. Overview

The input stream to activity REGC consists of a Change Code record, followed by a group of capability curve data records. One such record is specified for each machine whose capability curve is to be read into the working case.

All data is read in free format with data items separated by a comma or one or more blanks. The capability curve data category is terminated by a record specifying an I value of zero.

10.2. Change Code Data

The first record in the Capability Curve Data File contains two data items as follows:

```
IC, REV
```

IC	New capability curve data flag: IC = 0 indicates the initial input of capability curve data for the network contained in the working case. Any capability curves in the case are deleted from the case before adding the capability curves specified in the input file. IC = 1 indicates change case input of capability curve data for the network contained in the working case. If a record is specified for a machine that already has a capability curve, default values for omitted data items are the existing values of the capability curve. IC = 0 by default
REV	PSSE revision number REV = current revision by default

10.3. Capability Curve Data

Each machine to be represented with its capability curve in PSSE must be specified in a capability curve data record. Each data record in this file has the following format:

```
I, ID, P1, QT1, QB1, P2, QT2, QB2, ... P20, QT20, QB20
```

where:

I	Bus number. Bus I must be present in the working case with a plant sequence number assigned to it (refer to Section Plant and Machine Sequence Numbers in POM). No default is allowed

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

ID	One-or two character machine identifier used to distinguish among multiple machines at a plant (i.e., at a generator bus) ID = 1 by default
P_i	Generator active power output along the MW axis of the machine's capability curve, entered in MW No default is allowed
QT_i	Maximum (i.e., overexcited) reactive power limit at P_i MW, entered in Mvar QT_i = 0.0 by default
QB_i	Minimum (i.e., underexcited) reactive power limit at P_i MW, entered in Mvar QB_i = 0.0 by default

At least two sets of points must be specified for each capability curve; up to 20 sets of points on the capability curve may be entered. When the machine is a generator, the P_i values must be in ascending order with P_1greater than or equal to zero. When the machine is a motor, the P_i values must be in descending order with P_1 less than or equal to zero.

Capability curves may be specified for non-conventional as well as conventional machines. For a non-conventional machines with machine control mode (WMOD) greater than 1, the capability curve will not be used to update the machine's reactive power limits; the limits will be determined from the specified power factor (WPF) for mode 2 and 3 machines, and from the machine's fixed reactive power (QG) for mode 4 machines.

Data input is terminated with a record specifying a bus number of zero.

In the PSS®E EXAMPLE directory, there is an example capability curve established for the machines in the *savnw.sav* power flow case. The data file is savnw.gcp, and the contents of the file are listed in Figure 10.1, "Capability Curve Example file savnw.gcp for savnw.sav Case".

```
    PTI INTERACTIVE POWER SYSTEM SIMULATOR--PSS(R)E     TUE, SEP 24 2019  12:29
PSS(R)E PROGRAM APPLICATION GUIDE EXAMPLE
BASE CASE INCLUDING SEQUENCE DATA

CAPABILITY CURVE CHECK:
                                                 X-- CAPABILITY CURVE --X X------- WORKING  CASE -------X
BUS#-SCT X-- NAME --X BASKV ID    PGEN    QGEN     QMAX    QMIN  PLIMIT    QMAX    QMIN    PMAX    PMIN
  101     NUC-A       21.600 1    750.0    81.3    243.8   -37.5   900.0   600.0  -100.0   810.0     0.0
  102     NUC-B       21.600 1    750.0    81.3    243.8   -37.5   900.0   600.0  -100.0   810.0     0.0
  206     URBGEN      18.000 1    800.0   600.0    600.0     0.0  1000.0   600.0     0.0   900.0     0.0
  211     HYDRO_G     20.000 1    600.0    17.3    583.3   -77.8   950.0   400.0  -100.0   616.2     0.0
3011     MINE_G      13.800 1    258.6   103.6    270.5  -100.0  1000.0   600.0  -100.0   900.0     0.0
3018     CATDOG_G    13.800 1    100.0    80.0     80.0     0.0   130.0    80.0     0.0   117.0     0.0
```

Figure 10.1. Capability Curve Example file savnw.gcp for savnw.sav Case

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

Chapter 11
IEC Data File

11.1. Overview

The impedances and admittances of electrical equipment in the working case are modified according to the correction factors defined in IEC 60909-0 (2016 Section 6 or 2001 Section 3).

Generators, equivalent generators, asynchronous motors, wind farms and photovoltaic (PV) farms are represented as sources in the working case. To calculate their impedance correction factors or correct contribution to fault additional data is required. This additional data is provided in IEC data file (.iec).

Additional data is needed in the following cases.

- If a generator model includes a GSU transformer. It is recommended to represent the GSU transformer explicitly as a separate power component so as to be able to correctly modify the generator and transformer impedances as per the IEC 60909 standard.
- If a generator in the working case is an equivalent generator representation.
- If a generator is a used in the modeling of a synchronous motor.
- If a generator is set with QMIN=QMAX, then it is treated as an asynchronous motor. If this is the case, then additional data is not necessary.
- If a transformer winding MVA specified in system MVA base and not nameplate winding MVA.
- If an induction machine base power (MBASE) is specified as mechanical power output (BCODE=1), then power factor and efficiency are needed to calculate base MVA. If an induction machine scheduled active power (PSET) is set as real electrical power drawn by the machine, efficiency is needed to calculate mechanical power output (MW) of the machine.
- If a generator in the working case is a Wind Farm or PV Farm.

There are six groups of records, with each group containing a particular type of data required. Each record is terminated by specifying a bus number of 0.

11.2. File Identification Data

This record contains only one data item which is specified as:

```
IECFILEVRSN=vernum
```

IECFILEVRSN	IECFILEVRSN is the keyword to specify the IEC data file version number. vernum is an integer value specifying IEC data file version number. No default allowed.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

	Allowed, IECFILEVRSN = 2 Note: The first release of the IEC data file did not have this record and is treated as file version 1

11.3. GSU, Equivalent Generator and Motor Data

(Induction Motors are specified as part of Generator data category.)

Each data record has the following format:

I, ID, MCTYPE, UrG, PG, PFactor, PolePair, GSUType, Ix, Jx, Kx, Ckt, PT

where:

I	Machine bus number
ID	Machine ID
MCTYPE	Machine type MCTYPE =1, for Generator MCTYPE =2, for Equivalent generator MCTYPE =3, for Induction machines specified as part of generator data category MCTYPE =4, for Wind power station asynchronous generator MCTYPE =5, for Wind power station double fed asynchronous generator MCTYPE =6, for Wind or Photovoltaic power station generator with full size converter
UrG	Rated terminal voltage, line-to-line in kV r.m.s. (this need not be the rated bus voltage)
PG	Range of generator voltage regulation in %, e.g., if PG is ±5%, enter PG=5. PG = (UG -UrG)/UrG, where UG is the scheduled generator terminal voltage = 0 default
PFactor	Generator rated power factor (used only if MCTYPE=1). This is used in impedance correction factor calculations. = 1.0 default
PolePair	Number of pole pairs if machine is induction machine (used only if the machine is modeled as induction machine) Example: If the induction machine has a six pole construction then Polepair=3
GSUType	Generator step-up-transformer type GSUType =0, no GSU, GSU transformer modeled explicitly. GSUType =1, GSU with OLTC

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

	GSUType =2, GSU without OLTC
Ix	GSU transformer I bus number = 0 by default to specify no GSU transformer
Jx	GSU transformer J bus number = 0 by default to specify no GSU transformer
Kx	GSU transformer K bus number = 0 by default to specify no GSU transformer
Ckt	GSU transformer circuit identifier = blank (') by default to specify no GSU transformer
PT	Tap range of GSU off-load tap-changer transformer in % of transformer winding rated voltage, e.g., if PT is ±5%, enter PT=5 = 0.0 by default to ignore off-load tap range

11.4. Transformer Nameplate Winding MVA Data

Each data record has the following format:

I, J, K, Ckt, Sbase 1-2, Sbase 2-3, Sbase 3-1

where:

I	Winding 1 bus number
J	Winding 2 bus number
K	Winding 3 bus number (=0 for two-winding transformer)
Ckt	Transformer circuit identifier
Sbase 1-2	Winding 1 to winding 2 Nameplate MVA
Sbase 2-3	Winding 2 to winding 3 Nameplate MVA (not required for two-winding transformer)
Sbase 3-1	Winding 3 to winding 1 Nameplate MVA (not required for two-winding transformer)

11.5. Induction Machine Data

(Induction Motors are specified as part of Induction machine data category)

Each data record has the following format:

I, ID, PolePair, PFactor, Efficiency

where:

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

I	Machine bus number
ID	Machine ID
PolePair	Number of pole pairs Example: If the induction machine has a six pole construction then Polepair=3
PFactor	Induction Machine rated power factor = 1.0 default
Efficiency	Induction Machine percent efficiency. =100 by default Example: Efficiency=96.5 for 96.5% efficiency.

11.6. Wind Power Station Asynchronous Generator Data

(These equipment are specified as part of Generator data category and modeled as MCTYPE=4 in IEC data file.)

Each data record has the following format:

I, ID, ILR2IR_1, R2X_1, ILR2IR_2, R2X_2, ILR2IR_0, R2X_0

where:

I	Machine bus number
ID	Machine ID
ILR2IR_1	Ratio of Positive Sequence locked rotor current to rated current, no default allowed.
R2X_1	Ratio of Positive Sequence resistance to reactance =0.1 by default
ILR2IR_2	Ratio of Negative Sequence locked rotor current to rated current ILR2IR_2=ILR2IR_1 by default
R2X_2	Ratio of Negative Sequence resistance to reactance R2X_2=R2X_1 by default
ILR2IR_0	Ratio of Zero Sequence locked rotor current to rated current ILR2IR_0=ILR2IR_1 by default
R2X_0	Ratio of Zero Sequence resistance to reactance R2X_0=R2X_1 by default

11.7. Wind Power Station Doubly Fed Asynchronous Generator Data

(These equipment are specified as part of Generator data category, and modeled as MCTYPE=5 in IEC data file.)

Each data record has the following format:

I, ID, IMAX_1, R2X_1, IMAX_2, R2X_2, IMAX_0, R2X_0, KWD, IKWDmax, IKWDmin

where:

I	Machine bus number

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

ID	Machine ID
IMAX2IR_1	Ratio of Positive Sequence highest instantaneous short circuit value in case of a three-phase short circuit to rated current, no default allowed
R2X_1	Ratio of Positive Sequence resistance to reactance. R2X_1=0.1 by default
IMAX2IR_2	Ratio of Negative Sequence highest instantaneous short circuit value in case of an unbalance short circuit to rated current, IMAX2IR_2=IMAX2IR_1 by default
R2X_2	Ratio of Negative Sequence resistance to reactance. R2X_2=R2X_1 by default
IMAX2IR_0	Ratio of Zero Sequence highest instantaneous short circuit value in case of an unbalance short circuit to rated current, IMAX2IR_0=IMAX2IR_1 by default
R2X_0	Ratio of Zero Sequence resistance to reactance. R2X_0=R2X_1 by default
KWD	Factor for the calculation of the peak short-circuit current, KWD=1.7 by default
IkWDmax	Ratio of maximum steady state short circuit current to rated current, IkWDmax=IMAX2IR_1 by default. This is used in calculation of symmetrical breaking current.
IkWDmin	Ratio of minimum steady state short circuit current to rated current, IkWDmin=IMAX2IR_1 by default. This is used in calculation of symmetrical breaking current.

11.8. Wind and Photovoltaic Power Station Generator with Full Size Converter Data

(These equipment are specified as part of Generator data category, and modeled as MCTYPE=6, 7 in IEC data file.)

Each data record has the following format:

I, ID, IMAX_1, R2X_1, IMAX_2, R2X_2, IMAX_0, R2X_0, IkPFmax, IkPFmin

where:

I	Machine bus number
ID	Machine ID
IMAX2IR_1	Ratio of Positive Sequence short circuit current value to rated current, no default allowed
R2X_1	Ratio of Positive Sequence resistance to reactance. R2X_1=0.1 by default
IMAX2IR_2	Ratio of Negative Sequence short circuit current value to rated current, IMAX2IR_2=IMAX2IR_1 by default
R2X_2	Ratio of Negative Sequence resistance to reactance. R2X_2=R2X_1 by default
IMAX2IR_0	Ratio of Zero Sequence short circuit value in case of an unbalance short circuit to rated current, IMAX2IR_0=IMAX2IR_1 by default
R2X_0	Ratio of Zero Sequence resistance to reactance. R2X_0=R2X_1 by default
IkPFmax	Ratio of maximum steady state short circuit current to rated current, IkPFmax=IMAX2IR_1 by default. This is used in calculation of symmetrical breaking current.
IkPFmin	Ratio of minimum steady state short circuit current to rated current, IkPFmin=IMAX2IR_1 by default. This is used in calculation of symmetrical breaking current.

IEC File Data records for generators, transformers and motors are created only for those units that need IEC data and they may be entered in any order and using a free format with blanks or commas separating each data item in each record group.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

Following is an example of IEC data for IEC 60909-4, Section 6 network, refer PAG for details.

```
1  Q1 2
5  Q2 2
6  G3 1 10.5 0.0 0.8
41 G1 1 21.0 0.0 0.85 0 1 4 41 0 T1 12
31 G2 1 10.5 7.5 0.9  0 2 3 31 0 T2
0 / END OF GSU, EQV, GEN, AND INDUCTION MACHINE DATA
0 / END OF TRANSFORMER DATA
7  M1 1 0.88 97.5
7  M2 2 0.89 96.8
7  M3 2 0.89 96.8
0 / END OF INDUCTION MACHINE DATA
Q
```

or

```
IECFILEVRSN=2
1  Q1 2
5  Q2 2
6  G3 6 10.5 0.0 0.8
41 G1 4 21.0 0.0 0.85 0 1 4 41 0 T1 12
31 G2 5 10.5 7.5 0.9  0 2 3 31 0 T2
0 / END OF GSU, EQV, GEN, AND MOTOR DATA
0 / END OF TRANSFORMER DATA
7  M1 1 0.88 97.5
7  M2 2 0.89 96.8
7  M3 2 0.89 96.8
0 / END OF INDUCTION MACHINE DATA
41 G1 5.0 0.2
0 / END OF WIND POWER STATION ASYNCHRONOUS GENERATOR DATA
31 G2 6.0 0.3
0 / END OF WIND POWER STATION DOUBLY FED ASYNCHRONOUS GENERATOR DATA
6 G3 7.0 0.4
0 / END OF WIND AND PHOTOVOLTAIC POWER STATION GENERATOR WITH FULL SIZE CONVERTER DATA
Q
```


All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

Chapter 12
SUB/MON/CON File Descriptions

12.1. Overview

This section contains details on the formats of the data input files used by activity DFAX. File Notational Conventions defines the notational conventions used in the data record descriptions defined below. Special Data Records describes those records that are common to all of the Linear Network Analysis Data Files. Section 12.2, "Subsystem Definition Data File" gives the record formats used in the Subsystem Definition data file, Monitored Element Data File describes the Monitored Element data file, and Contingency Definition Data File defines the Contingency Definition data file.

12.1.1. File Notational Conventions

In describing the input file syntax, the following notational conventions are used:

CAPITALS	Keyword that must be specified exactly as shown. No keyword abbreviations are allowed.
[...]	Items enclosed in square brackets are optional keywords and/or values.
|A| or A|B |B|	Specify one from the list separated by, or enclosed in, the vertical bars.
bsid	Bus identifier; this data value *must* be a bus number when the *numbers* input option is in effect, and an extended bus name (twelve character name plus bus base voltage) when the *names* input option is in effect (refer to Section 3.3.3, "Program Run-Time Option Settings" and activity OPTN). If an extended bus name contains blanks or special characters, it must be enclosed in single quotes.
bsid1 bsid2	A range of bus identifiers.
staid	Substation identifier; this data value *must* be a substation number.
ndid	Substation node identifier; this data value *must* be a valid substation node number for the substation specified in the same context.
ckid	One-or two-character circuit identifier.
mcid, ldid, shid, swid, imid	One- or two-character equipment identifier for a machine, load, shunt, switched shunt, or induction machine, respectively.
devid	FACTS device or dc line name; up to twelve characters. If a device name contains blanks or special characters, it must be enclosed in single quotes.
i	An integer value.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

i j	An range of integer values.
r	A floating point value; the decimal point is optional when specifying a whole number (e.g., 10, 10., and 10.0 all specify the floating point number ten).
r1 r2, or rlow rhigh	A range of floating point values.
filename	A filename. Up to 260 characters is allowed.
label	A 32-character label identifier. If a label contains blanks or special characters, it must be enclosed in single quotes.
category-string	Up to 160 characters are allowed. If the string contains blanks or special characters, it must be enclosed in single quotes. The total size of all the category-strings in a CATEGORY structure combined is limited. The limit depends on a number of things, but is certainly less than 300 characters

Keywords and data values must be separated by one or more blanks.

12.1.2. Bus Input/Output Using Bus Numbers and Names

PSS®E allows users to specify buses by using either bus numbers or names. PSS®E's bus input/output mode is set to bus numbers by default.

PSS®E will automatically accept bus names of the format 'nnnnnnnnnnnnvvvv' (12-character name plus 4-character voltage); where nnnnnnnnnnnn is the name portion and vvvv the voltage portion of the bus name.

Bus names have to be specified via a name and voltage level as shown below:

```
BUS 'ALPHABETA 345' / Bus name
BUS 'GAMMAALPHAXX 169' 11.000 / Bus name with participation factor
```

There are two ways to tell PSS®E to use the bus name. It can be done by changing the BUS Input/Output option or by directly using the BUSNAMES command in the input file.

Inputting by bus names provides independence from bus numbering, and allows bus renumbering, which is done by some companies in the United States on a consistent basis when creating combined load flow cases. It is quite common to use bus names in various transfer analysis/assessment reports.

To accommodate the advantages of both types of bus input, PSS®E allows the user to alternate between the two modes of bus input within the same input files. For example, one subsystem may be defined using a bus name, the next one using bus numbers; or, define a subsystem file by using bus names, and then use input by bus number to define monitored elements.

Changing bus input mode can be done anywhere in the subsystem, contingent, monitored, and/or exclude data input files via BUSNAMES and BUSNUMBERS keywords. BUSNAMES and BUSNUMBERS records are specified on separate input lines.

```
BUSNAMES / will switch input to read by bus names
BUSNUMBERS / will switch input to read by bus number
```


All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

The default mode for specifying the use of bus names or bus numbers can be set by selecting the BUS Input/Output option. If a user has redefined the input mode to bus name, this redefinition will propagate to other input functions. For example, if a user used bus input by names to read in the subsystem file, then PSS®E will use bus names input mode when reading monitored element and contingency files. Only the explicit record BUSNUMBERS will switch the bus input mode to bus numbers.

12.1.3. Special Data Records

The following record types are allowed in each of the Linear Network Analysis data files:

TRACE	Enable or disable input tracing. When enabled, each line read from the input file is written to the *Progress* tab or the user's designated output file; refer to Section 4.4, "Virtual Output Devices" . Tracing is initially disabled.
ECHO filename	Write each input line to the designated file; if the filename specification contains any blanks or slashes (/), it must be enclosed in single quotes. Echoing of input records is useful when data records are being entered interactively and the same set of input records will be used in subsequent executions of activity DFAX. The file specified here is completely independent of any file specified to the PSS®E activity ECHO (refer to Section 19.12, "Running a Response File" and Section 19.13, "Recording User Actions"). Refer to Section 2.4.1, "File Usage " for the file specification conventions used by activity DFAX.
COM	Comment line that is ignored during input processing. Any meaningful comments may be placed on a comment line following the COM keyword.
END	End of block structure or end of data input, as appropriate.

In addition, blank lines may be included anywhere in the file. These are ignored during the input file processing.

12.2. Subsystem Definition Data File

Subsystems of the working case are defined via the Subsystem Definition data file. While format details differ, the subsystem definition provided is functionally identical to the specification of subsystems via the bus subsystem selector dialog and the optional suffixes of many PSS®E reporting and processing activities (refer to Section 4.8, "Subsystem Selection").

The portion of the working case to be contained in each subsystem being defined is specified in the following block structure:

```
SUBSYSTEM|SYSTEM [label]
(subsystem specification data record)
.
```


All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

```
.
(subsystem specification data record)
END
```

The subsystem specification data records allowed are as described below.

The optional subsystem labels are used on several record types in the Monitored Element and Contingency Definition data files; they are also printed in the line mode dialog of activity TLTG, SPIL, and POLY, which summarizes the subsystems defined and allows the user to select the study and opposing systems. If no label is specified on a SUBSYSTEM record, the label UNNAMED n is assigned to the subsystem, where < n > is a unique integer. Up to 100 subsystems may be specified in a Subsystem Definition data file, and each subsystem must be defined within a single SUBSYSTEM block structure.

Buses can be selected to be included in a SUBSYSTEM or SYSTEM using a series of criteria; that is selecting by BUS, AREA, ZONE, OWNER, and KV. Furthermore, buses can be selected on an individual basis or in groups.

Selecting buses by number requires data records of the following form:

```
BUS bsid
BUSES bsid bsid
```

The BUSES record is valid only when the *numbers* input option is in effect (refer to Section 3.3.3, "Program Run-Time Option Settings" and activity OPTN), and assigns the designated buses, as well as all buses where bus numbers fall between the two bus numbers specified, to the subsystem being defined. For example, the data record BUSES 15 77 may be used to select all buses with numbers from 16 to 76, inclusive.

All buses in selected areas may be assigned to a subsystem with data records in the following format:

```
AREA i
AREAS i j
```

where `i` is an area number. The AREAS record type assigns all buses in a range of area numbers to the subsystem being defined. For example, the data record AREAS 5 7 may be used to assign all buses in areas five, six, and seven to the subsystem.

Similarly, all buses in selected zones and owners may be assigned to a subsystem with data records of the following form:

```
ZONE i
ZONES i j
OWNER i
OWNERS i j
```

Buses at designated voltage levels may be assigned to a subsystem with records of the following form, where, as above, the KVRANGE record defines a range of voltage levels:

```
KV r
KVRANGE r1 r2
```


All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

Note that, in specifying ranges of bus numbers, areas, zones, owners, and voltage levels, the second value specified *must not* be preceded with a minus sign. The second number specified *must* be greater than the first.

In addition, a join group block structure provides for the specification of a group of buses through the logical anding of two or more of the five selection criteria described above. A join group has the following block structure:

```
JOIN [label]
(subsystem specification data record)
.
.
(subsystem specification data record)
END
```

where each subsystem specification data record is one of the simple record types (BUS, AREA, ZONE, OWNER, KV, or the corresponding range of records) described above. The optional JOIN group label is for the user's convenience and is neither used by activity DFAX nor preserved in the Distribution Factor data file.

Each join group block structure must appear within the subsystem block structure described above. Both join group block structures and the simple record types may be included within a subsystem block structure.

The following example defines the subsystem MY COMPANY, which consists of all buses in Area 5, along with all buses in Area 6, which are in Zones 8 through 10:

```
SUBSYSTEM 'MY COMPANY'
AREA 5
JOIN 'GROUP 1'
AREA 6
ZONES 8 10
END
END
```

A single bus or a set of buses can be excluded from a subsystem with the SKIP commands as described below. The commands must follow the simple subsystem specification records and/or join group block structures; in other words they must be the last records or only appear before the participation block within the subsystem specification block.

A single bus may be excluded from a subsystem with the data record in the form of:

```
SKIP BUS bsid
```

A set of buses may be excluded form a subsystem with the following data records:

```
SKIP BUS WITH [IN-SERVICE] |LOAD       | |LESS   | r  |MW   |
                           |GENERATION | |GREATER|    |MVAR|
                           |GENUPLIMIT |              |MVA  |
                           |GENLOWLIMIT|
                           |SHUNT      |
```


All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

When the optional IN-SERVICE keyword is present, only in-service components are considered in summation, otherwise both in-service and out-of-service components are counted. The 'r' value is the threshold in the specified unit of one of keywords MW, MVAR, or MVA. In using the LESS keyword, a bus is skipped from a subsystem if the corresponding data quantity of the bus is less than the 'r' value. In using the GREATER keyword, a bus is skipped from a subsystem if its data quantity is greater than the 'r' value.

At each bus that is assigned to the subsystem, in using LOAD keyword the total nominal load of loads is compared against the 'r' value. When the GENERATION keyword is used, the total generation of the machines is compared against the 'r' value. In using GENUPLIMIT or GENLOWLIMIT keyword, the corresponding total upper or lower limit of machines is considered in the summation. When the SHUNT keyword is present, the total nominal output of bus fixed shunts is used for comparing against the 'r' value.

The following data record can be used to exclude buses from a subsystem by comparing the current nominal reactive power output from the switched shunt at the buses against the 'r' value.

```
SKIP BUS WITH [IN-SERVICE] SWSHUNT |LESS    | r  MVAR
                                   |GREATER|
```

The following data record can be used to exclude buses by comparing the total active power settings of induction machines at the buses against the 'r' value.

```
SKIP BUS WITH [IN-SERVICE] INDUCMACHINE |LESS    | r MVAR
                                        |GREATER|
```

A “SKIP” record can be used to exclude a single bus or a group of buses from a subsystem, as shown in the following example.

```
SYSTEM  MONITOR5
AREA 5
SKIP BUS 567
SKIP BUS WITH GENUPLIMIT LESS 10 MW
END
```

SKIP records must “follow” the simple subsystem specification records and/or join group block structures within the subsystem specification block.

Activities TLTG, SPIL, and POLY and the PV Analysis calculation modify the generation/load profile within designated subsystems to determine transfer capability. The participation block structure allows the user to specify those buses that are to participate in the generation/load shift, along with their participation factors that determine how the change in subsystem power injection is to be shared among the designated buses. To establish the participating buses and their participation factors, the PARTICIPATE block structure is used.

The form of the participation block structure is:

```
PARTICIPATE
BUS bsid r
.
.
BUS bsid r
```


All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

```
END
```

Each participation block structure must appear within the subsystem block structure described above, and *must follow* the simple record types and/or join group block structures defining the SUBSYSTEM; that is, it must be the last data record block in the SUBSYSTEM specification.

Each bus specified must be present in the subsystem being processed. Any bus that violates this requirement or which is disconnected (i.e., its type code is four or greater) generates an alarm and is excluded from the group of participating buses.

The `r` values are non-zero participation factors that are normally expressed in percent or per unit of the total subsystem generation shift. While individual `r` values may be negative, the sum of the `r` values within a participate block structure must be positive.

12.3. Monitored Element Data File

This file identifies those elements, or groups of elements that are to be monitored for flow violations and those buses that are to be monitored for voltage violations.

12.3.1. Individual Flow Monitoring Records

Each monitored element may consist of either a single branch or a group of branches (an interface), where the flow on an interface is taken as the sum of the flows on the branches comprising the interface.

Up to 1,000 interfaces are allowed, and the total of single branches plus branches contained in all interfaces may not exceed the number of branches for which PSS®E is dimensioned. Only in-service branches are added to the monitored element list.

To specify a single substation switching device for monitoring, the following data record may be used:

```
MONITOR |BREAKER| |SUBSTATION| staid FROM NODE ndid TO NODE ndid [|CIRCUIT | ckid]
        |SWITCH | |SUB       |                                    |CKT     |
        |SWD    |
```

To specify a single branch for monitoring, the following data record may be used:

```
[MONITOR] |BRANCH| FROM BUS bsid TO BUS bsid [|CIRCUIT| ckid]
          |LINE  |                            |CKT    |
```

To specify one winding of a three-winding transformer for monitoring, the bus to which the winding is connected must be the first bus specified in the following data record:

```
[MONITOR] |BRANCH| FROM BUS bsid TO BUS bsid TO BUS bsid [|CIRCUIT| ckid]
          |LINE  |                                        |CKT    |
```

Example:

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

```
Monitor branch from bus 288 to bus 2000 to bus 398
```

The above example will only monitor flow into the winding of the three-winding transformer connected to bus 288. If it is desired to monitor bus 2000 and bus 398 flows into the transformer additional monitor statements are required.

If the optional circuit identifier keyword and data value are omitted, a circuit identifier of '1' is assumed.

As a convenience to save typing, the following block structure may be used to designate a series of single branches for monitoring where, as above, the default circuit identifier is '1'. Three-winding transformers cannot be specified using this block structure.

```
[MONITOR] BRANCHES|LINES
bsid bsid [ckid]
.
.
bsid bsid [ckid]
END
```

In specifying a branch with the above records, if it is already in the monitored element list in the specified direction, an appropriate message is printed and the record is ignored. If a branch is included in the monitored element list in both directions, flows (and distribution factors) for the two entries are printed in activities OTDF, DCCC, TLTG, SPIL, IMPC, and POLY with equal magnitude and opposite sign; in activity ACCC, the same results are shown in both directions.

When the multi-section line reporting option is enabled (refer to Section 3.3.3, "Program Run-Time Option Settings" and activity OPTN), in-service multi-section line groupings may be specified with the above records. If an in-service member of a multi-section line grouping is specified, the multi-section line (rather than the specified member) is added to the monitored element list in the same direction as the specified member.

When the multi-section line reporting option is disabled, multi-section line groupings may not be specified in the above records; in-service members of multi-section line groupings may be designated and are added as specified to the monitored element list.

12.3.2. Group Flow Monitoring Records

The following four record types provide for the addition of a group of branches to the monitored element list with a single record. When the keyword BRANCHES, LINES, or TIES is used, all branches in the grouping except breakers and switches are added as monitored elements. When using the BREAKERS keyword, only breaker and switch branches in the grouping are added as monitored elements. Any branch that is included in the subset specified by the record, but which is already included in the monitored element list in either direction, is skipped.

For these record types, when the multi-section line reporting option is enabled, multi-section line groupings within the specified subset, but not the individual members of such groupings, are added to the monitored line list. When the multi-section line reporting option is disabled, members of multi-section line groupings within the specified subset, but not the multi-section line groupings, are added to the monitored line list.

To place all branches in the monitored element list, the following data record may be used:

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

```
[MONITOR] ALL |BRANCHES|
              |LINES   |
              |BREAKERS|
```

Branches are entered into the monitored element list in single entry form, with the lower ordered bus (number or name, according to the bus output option currently in effect) as the from bus.

The following data record may be used to select for monitoring all branches connected to a specified bus:

```
[MONITOR] |BRANCHES| FROM BUS bsid
          |LINES   |
          |BREAKERS|
```

All branches within a specified subsystem may be monitored by entering the data record:

```
[MONITOR] |BRANCHES| IN |AREA    i      | [3WLOWVOLTAGE] [IN KVRANGE r1 r2]
          |LINES   |    |AREAS   i  j   |
                        |ZONE    i      |
                        |ZONES   i  j   |
                        |OWNER   i      |
                        |OWNERS  i  j   |
                        |KV      r1     |
                        |KVRANGE r1 r2  |
                        |SYSTEM    label|
                        |SUBSYSTEM label|
```

When using the SYSTEM or SUBSYSTEM keywords, the label must correspond to a subsystem label specified in a previously accessed Subsystem Definition data file (refer to Section 12.2, "Subsystem Definition Data File").

For a three-winding transformer to be included, without the keyword 3WLOWVOLTAGE specified all of its in-service windings must be connected to subsystem buses; when using the keyword 3WLOWVOLTAGE, checking on connection of its low voltage winding to a subsystem bus is disabled if all its three winding bus voltages are specified as non-zero values. For any such three-winding transformer, all of its in-service windings connected to subsystem buses are added to the monitored element list.

The IN KVRANGE keyword can be added to simplify defining monitored elements within a desired voltage range. The first r1 is the lower bound of the voltage range, and the second r2 is the upper bound of the voltage range. With IN KVRANGE keyword, all terminal buses of selected branches are within the desired voltage range.

When AREAS, ZONES or OWNERS is specified, a range of items is selected based on the i and j values entered.

To place branches that are assigned to a line owner into the monitored element list, the following data record can be used:

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

```
[MONITOR] |LINES    | WITH LINE OWNER i
          |BRANCHES|
          |BREAKERS|
```

12.3.3. Subsystem Tie Monitoring Records

The following record provides for the monitoring of all ties from a specified subsystem, or all ties between a pair of subsystems:

```
[MONITOR] |TIES| FROM |AREA    i      | [TO |AREA    i      |] [IN KVRANGE r1 r2]
          |TIE |      |AREAS   i j    |     |AREAS   i j    |
                     |ZONE    i      |     |ZONE    i      |
                     |ZONES   i j    |     |ZONES   i j    |
                     |OWNER   i      |     |OWNER   i      |
                     |OWNERS  i j    |     |OWNERS  i j    |
                     |KV      r1     |     |KV      r2     |
                     |KVRANGE r1 r2  |     |KVRANGE r1 r2  |
                     |SYSTEM    label|     |SYSTEM    label|
                     |SUBSYSTEM label|     |SUBSYSTEM label|
```

The main difference between the IN, FROM, and TO specifications is that IN specifies the kV requirement of both terminal buses for the selected branches, while the FROM and TO specifications define only the from or to selection, respectively.

For a three-winding transformer to be included, at least one of its in-service windings must be connected to a subsystem bus, and at least one of its in-service windings must be connected to a bus that is either not in the subsystem or in the to subsystem, as appropriate; for any such three-winding transformer, all of its in-service windings connected to subsystem buses are added to the monitored element list.

The following provides several examples of selecting monitored branches using the formats described above.

Example:

```
MONITOR BRANCHES IN AREA 1
MONITOR BRANCHES IN KVRANGE 200 999
MONITOR BRANCHES IN AREAS 40 42 IN KVRANGE 100 300
MONITOR BRANCHES IN AREA 1 IN KVRANGE 100 300
MONITOR TIES FROM AREA 1 IN KVRANGE 100 999}
MONITOR TIES FROM AREA 1 TO AREA 5 IN KVRANGE 100 999
```

The user must be aware that specification:

```
MONITOR BRANCHES IN AREAS 40 42 IN KVRANGE 100 300
```

includes not only branches within areas 40, 41, and 42, but also all ties between areas 40, 41, and 42.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

For a tie branch between a pair of subsystems to be added to the monitored element list, both of the following must be satisfied:

1. One bus is in the FROM subsystem.

2. Another bus is in the TO subsystem, and it is not in the FROM subsystem.

For the case of disjoint subsystems (e.g., TIES FROM AREA 1 TO AREA 2), the selection of tie branches is clear and unambiguous. However, in the case of overlapping subsystems (e.g., TIES FROM AREA 1 TO ZONE 5), the user must be aware of the above rules in specifying TIES records. The possibility exists that, in applying the above criteria, the set of branches included as ties may not be the same if the from and to subsystems are interchanged. Consider, for example, the following area and zone assignments:

Bus	*Area*	*Zone*
1	1	10
2	1	5
3	2	5
4	1	5

Further, assume that a branch exists between each pair of buses. The following record would include branches 1-3, 2-3, and 4-3, but not 1-2, 1-4, or 2-4:

```
TIES FROM AREA 1 TO ZONE 5
```

Conversely, the following record would include branches 2-1, 3-1, and 4-1, but not 2-3, 2-4, or 3-4:

```
TIES FROM ZONE 5 TO AREA 1
```

When the multi-section line reporting option is enabled (refer to Section 3.3.3, "Program Run-Time Option Settings" and activity OPTN) the subsystem assignments of the dummy buses of each multi-section line grouping are ignored; a multi-section line grouping is treated as a tie branch if and only if its endpoint buses satisfy items (1) and (2) above. When the multi-section line reporting option is disabled, the multi-section line grouping definitions are ignored and any member of a multi-section line grouping satisfying items (1) and (2) above is considered a tie branch.

The `IN KVRANGE` keyword can be added to simplfy defining monitored elements within a desired voltage range. The first `r1` is the lower bound of the voltage range, and the second `r2` is the upper bound of the voltage range. The KVRANGE is ignored if it is defined after the `FROM KV r1` or `TO KV r1` keywords. With KVRANGE keyword, all terminal buses of selected branches are within the desired voltage range

To demonstrate the use of KVRANGE specifications, assume that subsystem COMPANY1 was defined as:

```
SUBSYSTEM COMPANY1
JOIN
  AREAS 25 35
  KVRANGE 200 999
END
END
```


All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

The example below shows how to add all ties from COMPANY1, including step-up transformers within COMPANY2 and all ties from COMPANY1 to other neighbors:

```
MONITOR TIES FROM SYSTEM COMPANY1
```

To avoid adding step-up transformers, a user should use:

```
MONITOR TIES FROM SYSTEM COMPANY1 TO KVRANGE 200 300
```

This specification excludes from the selection all 345-kV ties from COMPANY1.

A KVRANGE specification eliminates the need to create intermediate subsystems if a user wants to define ties from some area(s)/zone(s) within some kV level as shown below:

```
MONITOR TIES FROM AREAS 40 45 IN KVRANGE 200 240
```

An INTERFACE is defined using the following block structure:

```
[MONITOR] INTERFACE label[|RATING r [MW]            |]
                        [|RATINGS r1 r2 ...r12  [MW]|]
(branch specification record; see below)
.
.
(branch specification record; see below)
END
```

where the branch specification records may specify sets of tie lines:

```
[MONITOR] |TIES| FROM |AREA    i      | [TO |AREA    i      |] [IN KVRANGE r1 r2]
          |TIE |      |AREAS   i j    |     |AREAS   i j    |
                     |ZONE    i      |     |ZONE    i      |
                     |ZONES   i j    |     |ZONES   i j    |
                     |OWNER   i      |     |OWNER   i      |
                     |OWNERS  i j    |     |OWNERS  i j    |
                     |KV      r1     |     |KV      r2     |
                     |KVRANGE r1 r2  |     |KVRANGE r1 r2  |
                     |SYSTEM    label|     |SYSTEM    label|
                     |SUBSYSTEM label|     |SUBSYSTEM label|
```

individual branches:

```
[MONITOR] |BRANCH| FROM BUS bsid TO BUS bsid [|CIRCUIT | ckid]
          |LINE  |                            |CKT     |
```

individual three-winding transformer windings:

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

```
[MONITOR] |BRANCH| FROM BUS bsid TO BUS bsid TO BUS bsid [|CIRCUIT| ckid]
          |LINE  |                                        |CKT    |
```

or, simply:

```
bsid bsid [ckid]
```

The 32-character interface labels are used to identify interfaces in the output reports of those activities that use the Distribution Factor data file. As with ac branches, provision is made for up to twelve interface ratings. Interface ratings that are entered as zero, or omitted, are handled in the same way as branch ratings of zero in activities DCCC, TLTG, SPIL, POLY, IMPC, and ACCC.

If the optional specification of ratings is omitted, the sum of the appropriate rating set values of each of the interface members is taken as the interface rating. An interface rating is usually specified as something other than a thermal limit; for example, contractual or stability considerations may determine the interface rating to be used.

The SKIP block structure is used to specify individual branches that are to be excluded from the monitored element list generated as a result of subsequent specification records that are used to define a group of branches.

```
SKIP
(branch specification record; see below)
(branch specification record; see below)
END
```

Non-transformer branches and two-winding transformers are specified on branch specification records using the following record format:

```
bsid TO bsid [|CIRCUIT| ckid]
             |CKT    |
```

Three-winding transformers are specified on branch specification records using the following record format:

```
bsid TO bsid TO bsid [|CIRCUIT| ckid]
                     |CKT    |
```

The default circuit identifier is '1' if this specification is omitted.

“SKIP blocks” can also be used to omit individual branches from the monitored element list generated by subsequent automatic specification commands, as shown in the following example.

```
SKIP
  3008  TO 154
```


All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

```
  100 TO 200 TO 300
END
MONITOR BRANCHES IN AREA 5
```

The SKIP block must be “above” the automatic specification records.

Branches specified in a SKIP block structure apply only to MONITOR ALL, MONITOR LINES and MONITOR TIES records which define a group of branches and are below it in the Monitored Element data file. Multiple SKIP block structures are allowed, and each SKIP block structure appends to the list of branches to be omitted from monitoring as a result of subsequent group specification records.

12.3.4. Subsystem Switching Device Monitoring Records

All switching devices within a specified subsystem may be monitored by entering the data record:

```
[MONITOR] |BREAKERS| IN |AREA    i       | [IN KVRANGE r1 r2]
          |SWITCHES|    |AREAS   i j     |
          |SWDS    |    |ZONE    i       |
                        |ZONES   i j     |
                        |OWNER   i       |
                        |OWNERS  i j     |
                        |KV      r       |
                        |KVRANGE r1 r2   |
                        |SYSTEM     label|
                        |SUBSYSTEM  label|
                        |SUB        staid|
                        |SUBSTATION staid|
```

When using the SYSTEM or SUBSYSTEM keywords, the label must correspond to a subsystem label specified in a previously accessed Subsystem Definition data file (refer to Section 12.2, “Subsystem Definition Data File”).

When the keyword SWDS is used, all the system and substation switching devices will be included. Using the keyword BREAKERS will limit the selected switching devices to those designated as breakers. Using the keyword SWITCHES will limit the selected switching devices to those designated as switches.

12.3.5. Voltage Monitoring Records

Buses that are to be monitored for voltage violations by the AC Contingency Solution (refer to Section 6.12.1, “AC Contingency Solution Options”) are specified in the Monitored Element data file. Two types of voltage violations may be detected.

The following data record defines a voltage band along with a set of buses where voltages are to be checked against the band.

```
[MONITOR] VOLTAGE RANGE |ALL BUSES                | [|KV r         |] rlow [rhigh]
                        |ALL NODES                |  |KVRANGE r1 r2|
                        |AREA    i                |
```


All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

```
                          |AREAS   i j              |
                          |ZONE    i                |
                          |ZONES   i j              |
                          |OWNER   i                |
                          |OWNERS  i j              |
                          |KV      r                |
                          |KVRANGE r1 r2            |
                          |BUS     bsid             |
                          |BUSES   bsid1 bsid2      |
                          |SYSTEM    label          |
                          |SUBSYSTEM label          |
                          |SUB        staid NODE ndid|
                          |SUBSTATION staid NODE ndid|
```

This example monitors all 500kV bus voltages in areas 1 through 5 within 0.98 to 1.10 per unit, all lower voltage buses within 0.95 to 1.05 per unit and monitors bus number 1234 within 0.93 to 1.05 per unit.

Example:

```
monitor voltage range areas 1 5 .95 1.05
monitor voltage range areas 1 5 kvrange 500 9999 .98 1.10
monitor voltage range bus 1234 .93 1.05
```

```
[MONITOR] VOLTAGE RANGE NODES IN |AREA    i          | [|KV r          |] rlow [rhigh]
                                 |AREAS   i j        |  |KVRANGE r1 r2|
                                 |ZONE    i          |
                                 |ZONES   i j        |
                                 |OWNER   i          |
                                 |OWNERS  i j        |
                                 |KV      r          |
                                 |KVRANGE r1 r2      |
                                 |BUS     bsid       |
                                 |BUSES   bsid1 bsid2|
                                 |SYSTEM     label   |
                                 |SUBSYSTEM  label   |
                                 |SUB        staid   |
                                 |SUBSTATION staid   |
```

Where the first `r` value is the lower bound of the per unit voltage band and the optional second `r` value is the upper bound. If the upper bound is omitted, the upper end of the band is not checked.

The following data records define a set of buses to be monitored for voltage limit violations.

```
[MONITOR] VOLTAGE LIMIT |ALL BUSES               |
                        |ALL NODES               |
                        |AREA    i               |
```


All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

```
                          |AREAS   i j              |
                          |ZONE    i                |
                          |ZONES   i j              |
                          |OWNER   i                |
                          |OWNERS  i j              |
                          |KV      r                |
                          |KVRANGE r1 r2            |
                          |BUS     bsid             |
                          |BUSES   bsid1 bsid2      |
                          |SYSTEM    label          |
                          |SUBSYSTEM label          |
                          |SUB        staid NODE ndid|
                          |SUBSTATION staid NODE ndid|


[MONITOR] VOLTAGE LIMIT NODES IN |AREA    i          |
                                 |AREAS   i j        |
                                 |ZONE    i          |
                                 |ZONES   i j        |
                                 |OWNER   i          |
                                 |OWNERS  i j        |
                                 |KV      r          |
                                 |KVRANGE r1 r2      |
                                 |BUS     bsid       |
                                 |BUSES   bsid1 bsid2|
                                 |SYSTEM     label   |
                                 |SUBSYSTEM  label   |
                                 |SUB        staid   |
                                 |SUBSTATION staid   |
```

When multiple voltage limit records are used in a monitored element data file, buses that have already been included in the set will be ignored. Bus data includes normal and emergency bus voltage limits. The designation of the voltage limit to be used is made at result post-processing stage.

The following data record defines voltage drop and voltage rise deviation thresholds along with a set of buses where voltage changes in contingency cases from their base case values are to be checked.

```
[MONITOR] VOLTAGE DEVIATION |ALL BUSES               | [|KV r         |] rlow [rhigh]
                            |ALL NODES               |  |KVRANGE r1 r2|
                            |AREA    i               |
                            |AREAS   i j             |
                            |ZONE    i               |
                            |ZONES   i j             |
                            |OWNER   i               |
                            |OWNERS  i j             |
                            |KV      r               |
                            |KVRANGE r1 r2           |
                            |BUS     bsid            |
                            |BUSES   bsid1 bsid2     |
```


All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

```
                                |SYSTEM    label          |
                                |SUBSYSTEM label          |
                                |SUB        staid NODE ndid|
                                |SUBSTATION staid NODE ndid|


[MONITOR] VOLTAGE DEVIATION NODES IN |AREA    i          | [|KV r         |] rlow [rhigh]
                                     |AREAS   i j        |  |KVRANGE r1 r2|
                                     |ZONE    i          |
                                     |ZONES   i j        |
                                     |OWNER   i          |
                                     |OWNERS  i j        |
                                     |KV      r          |
                                     |KVRANGE r1 r2      |
                                     |BUS     bsid       |
                                     |BUSES   bsid1 bsid2|
                                     |SYSTEM    label    |
                                     |SUBSYSTEM label    |
                                     |SUB        staid   |
                                     |SUBSTATION staid   |
```

Where the first `r` value is the magnitude of voltage drop in per unit and the optional second `r` value is the magnitude of voltage rise. If the voltage rise threshold is omitted, the voltage rise check is omitted.

12.4. Contingency Definition Data File

Contingency cases are defined in a Contingency Definition data file. While activity OTDF allows only single event contingencies, the remaining activities provide for contingency cases consisting of up to 32 events.

The Contingency Defintion data file provides two means by which contingency cases may be specified. Individual contingency cases consisting of single or multiple events involving bus boundary condition and/or branch status changes may be specified in a contingency case block structure (refer to Contingency Case Block Structure In addition, the selection of a group of single or double line outage contingency cases may be specified with a single data record (refer to Automatic Contingency Specification). Default contingency categories are defined with the following structure:

```
CATEGORY category-string
VALUE category-string
VALUE category-string
.
END
```

If the contingency cases below a contingency category structure do not have categories specified then they are assigned to the contingency categories defined in the structure. Multiple category structures can be used in a contingency description file to change default categories.

12.4.1. Contingency Case Block Structure

In this method, a contingency case is defined in a block structure as follows:

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

```
CONTINGENCY label  | [r  r]  [CATEGORY category-string] |
                   | CATEGORY category-string  r  r     |
(contingency event specification record;  below)
.
.
(contingency event specification record;  below)
END
```

The 32-character contingency label is printed in output reports to identify each contingency. The first r value on the data record represents frequency in occurrence/year and the second r value on the data record represents duration in hours of the contingency. They are used for probabilistic reliability assessment. The category-string can be a single string or a quoted comma-delimited set of strings. Categories are used to select elements of report tables. A contingency can contain up to 32 contingency event specification records

The remainder of this section describes the contingency event specification records supported.

The outaging of an in-service non-transformer branch or two-winding transformer is specified with the following record, where the default circuit identifier is '1' if this specification is omitted:

```
|DISCONNECT| |BRANCH| FROM BUS bsid TO BUS bsid [|CIRCUIT| ckid]
|OPEN      | |LINE  |                            |CKT    |
|TRIP      |
```

Similarly, an out-of-service non-transformer branch or two-winding transformer may be placed in-service with a record of the form:

```
CLOSE  |BRANCH| FROM BUS bsid TO BUS bsid [|CIRCUIT| ckid]
       |LINE  |                            |CKT    |
```

When the multi-section line reporting option is enabled (refer to Section 3.3.3, "Program Run-Time Option Settings" and activity OPTN), multi-section line groupings may be specified with the above records. If a member of a multi-section line grouping is specified, switching the entire multi-section line (rather than the specified member) is treated as the contingency event.

When the multi-section line reporting option is disabled, multi-section line groupings may not be specified in the above records; members of multi-section line groupings may be designated on OPEN and CLOSE records, and only the specified member is switched.

The outaging of an in-service three-winding transformer is specified with the following record, where the default circuit identifier is '1' if this specification is omitted:

```
|DISCONNECT| |BRANCH| FROM BUS bsid TO BUS bsid TO BUS bsid [|CIRCUIT| ckid]
|OPEN      | |LINE  |                                        |CKT    |
|TRIP      |
```


All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

Similarly, all windings of an out-of-service three-winding transformer may be placed in-service with a record of the form:

```
CLOSE  |BRANCH| FROM BUS bsid TO BUS bsid to BUS bsid [|CIRCUIT| ckid]
       |LINE  |                                        |CKT    |
```

The outaging of one winding of a three-winding transformer is specified with the following record, where the default circuit identifier is 1 if this specification is omitted:

```
|DISCONNECT|THREEWINDING AT BUS bsid TO BUS bsid TO BUS bsid [|CIRCUIT| ckid]
|OPEN      |                                                  |CKT    |
|TRIP      |
```

Similarly, one winding of a three-winding transformer may be placed in-service with a record of the form:

```
CLOSE THREEWINDING AT BUS bsid TO BUS bsid to BUS bsid [|CIRCUIT| ckid]
                                                       |CKT    |
```

The winding to be opened or closed is the winding connected to the first bus specified. Prior to opening one winding of a three-winding transformer, all three windings of the transformer must be in-service; prior to closing one winding of a three-winding transformer, the other two windings of the transformer must be in-service.

An out-of-service two-terminal dc line may be placed in-service with a record of the form:

```
CLOSE TWOTERMDC devid AT r |MW   |
                           |AMPS |
```

When keyword MW is used, the two terminal dc line must be in power control mode and `r` is the power demand to be designated. When keyword AMPS is used, the two terminal dc line must be in current control mode and `r` is the current demand to be designated.

An out-of-service VSC dc line may be placed in-service with a record of the form:

```
CLOSE VSCDC devid AT r MW
```

When keyword MW is used, the VSC dc line's power demand to be designated to `r`.

An in-service FACTS device or dc line may be blocked with a record of the form:

```
BLOCK |TWOTERMDC   | devid
      |MULTITERMDC|
      |VSCDC      |
      |FACTS      |
```


All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

where the four tokens in the selection list allow access to two-terminal dc lines, multi-terminal dc lines, VSC dc lines, and FACTS devices, respectively.

The settings of an in-service two terminal dc line may be specified with a record of the form:

```
SET TWOTERMDC devid TO r |MW  |
                         |AMPS|
                         |KV  |
                         |OHMS|
```

When keyword MW is used, the two terminal dc line must be in power control mode and r is the power demand to be designated. When keyword AMPS is used, the two terminal dc line must be in current control mode and r is the current demand to be designated. The scheduled compounded dc voltage is changed to r when keyword KV is employed. The ohms of two terminal dc line is changed when OHMS is employed.

The settings of an in-service VSC dc line may be specified with a record of the form:

```
SET VSCDC devid TO r |MW  |
                     |KV  |
                     |OHMS|
```

When keyword MW is used, the VSC dc line power demand is set to r. The scheduled VSC dc voltage is changed to r when keyword KV is employed. The ohms of VSC dc line is changed when OHMS is employed.

The outaging of all in-service branches connected to a bus may be specified with a record of the form:

```
|DISCONNECT| BUS bsid
|OPEN      |
|TRIP      |
```

This command is converted to as many OPEN BRANCH commands as are required before it is passed to the Distribution Factor data file.

When the multi-section line reporting option is enabled (refer to Section 3.3.3, "Program Run-Time Option Settings" and activity OPTN), each in-service multi-section line connected to the specified bus is switched out as a unit. If the specified bus is a dummy bus of a multi-section line, this command is converted to a single OPEN BRANCH command that outages the corresponding multi-section line.

When the multi-section line reporting option is disabled, only the line section adjacent to the specified bus is outaged for each multi-section line connected to the bus.

The next four record types allow the user to specify contingency events in which the load and generation boundary conditions may be changed at a selected bus. Load and shunt are synonymous in the linearized network model and specifying either results in identical contingency events. When changing generation, the bus must have in-service generation connected to it and it may not be a swing bus.

The following data record is used to set the load or generation at a bus either to a designated value or to a specified percentage of its initial value:

```
SET BUS bsid |GENERATION| TO r |MW     | [DISPATCH]
```


All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

```
              |LOAD       |       |PERCENT|
              |SHUNT      |
```

The number r specified must not be a negative number when the PERCENT keyword is used.

When LOAD is set either by PERCENT or MW, the power factor of load is constant (i.e., the reactive power is changed by the same ratio as the active power). When GENERATION or SHUNT is set either by PERCENT or MW, only active power is changed.

When the optional keyword DISPATCH is included at the end of the SET record, the user may designate how the change in the bus boundary condition is to be apportioned among selected network buses rather than having it all assigned to the system swing bus(es). In this case, the SET data record *must* be followed by records of the form:

```
BUS bsid r
.
.
BUS bsid r
END
```

The r values are positive participation factors that are normally expressed in percent or per unit of the total MW change specified by the contingency event specification record.

When SET commands operate on the bus fixed shunt, an additional keyword MVAR can be used to change reactive power component of a bus fixed shunt:

```
SET BUS bsid SHUNT  TO r MVAR
```

The real power component of bus fixed shunts remains constant. DISPATCH keyword is not allowed to be included in the above command.

The following data record is used to set an **individual** load either to a designated amount or by a specified percentage of its initial value:

```
SET LOAD ldid AT BUS bsid TO r |MW     |
                               |PERCENT|
```

When LOAD is set either by PERCENT or MW, the power factor of load is constant (i.e., the reactive power is changed by the same ratio as the active power).

The following data record is used to set an **individual** machine's Voltage Scheduled/Active Power/Reactive Power either to a designated amount or by a specified percentage of its initial value:

```
SET |MACHINE| mcid AT BUS bsid VSCHED   TO r PERUNIT
    |UNIT   |
SET |MACHINE| mcid AT BUS bsid ACTIVE   TO r |MW     |
    |UNIT   |                                |PERCENT|
SET |MACHINE| mcid AT BUS bsid REACTIVE TO r |MVAR   |
    |UNIT   |                                |PERCENT|
```


All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

```
SET |MACHINE| mcid AT BUS bsid REACTIVE TO ACTIVE
    |UNIT   |
```

The following data record is used to set an **individual** shunt either to a designated amount or by a specified percentage of its initial value:

```
SET SHUNT shid AT BUS bsid TO r |MW     |
                                |MVAR   |
                                |PERCENT|
```

The following data record is used to set an **individual** switched shunt's Voltage Scheduled/VMAX/VMIN/Reactive Power either to a designated amount or by a specified percentage of its initial value (swid defaults to "1 "):

```
SET SWSHUNT [swid] AT BUS bsid |VSCHED| TO r PERUNIT
                               |VMAX  |
                               |VMIN  |

SET SWSHUNT [swid] AT BUS bsid |REACTIVE| TO r |MVAR   |
                                               |PERCENT|
```

The following data record is used to change the load/generation/shunt at a bus either by a designated amount or by a specified percentage of its initial value:

```
|CHANGE| BUS bsid |GENERATION| BY r |MW     | [DISPATCH]
|ALTER |          |LOAD      |      |PERCENT|
|MODIFY|          |SHUNT     |
```

When LOAD is changed either by PERCENT or MW, the power factor of load is constant (i.e., the reactive power is changed by the same ratio as the active power). When GENERATION or SHUNT is changed either by PERCENT or MW, only active power is changed.

When the PERCENT keyword is specified, the magnitude of the initial value of the quantity to be modified is used to determine the amount of the change; i.e.,

$P_{new} = P_{orig} + r \times |P_{orig}| / 100$

When changing either by PERCENT or MW, when the quantity to be modified is initially positive and the change is a reduction (i.e., r is negative), a negative result is treated as an error condition.

The presence of the optional keyword DISPATCH is handled as described above for the SET data record.

The next two data record types are similar to the CHANGE record, except the direction of the change is defined by the first keyword, and r must be a positive number:

```
|INCREASE| BUS bsid |GENERATION| BY r |MW     | [DISPATCH]
|RAISE   |          |LOAD      |      |PERCENT|
                    |SHUNT     |
|DECREASE| BUS bsid |GENERATION| BY r |MW     | [DISPATCH]
|REDUCE  |          |LOAD      |      |PERCENT|
                    |SHUNT     |
```


All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

The presence of the optional keyword DISPATCH is handled as described above for the SET datarecord.

When LOAD is changed either by PERCENT or MW, the power factor of load is constant (i.e., the reactive power is changed by the same ratio as the active power). When GENERATION or SHUNT is changed either by PERCENT or MW, only active power is changed.

Similarly, keyword MVAR can be used in CHANGE/INCREASE/DECREASE commands to change reactive power component of bus fixed shunts, e.g.:

```
|CHANGE   | BUS bsid SHUNT BY r MVAR
|ALTER    |
|MODIFY   |
|INCREASE|
|RAISE    |
|DECREASE|
|REDUCE   |
```

The following data record is used to change an **individual** load either by a designated amount or by a specified percentage of its initial value:

```
|CHANGE   | LOAD ldid AT BUS bsid BY r |MW      |
|ALTER    |                            |PERCENT|
|MODIFY   |
|INCREASE|
|RAISE    |
|DECREASE|
|REDUCE   |
```

When LOAD is changed either by PERCENT or MW, the power factor of load is constant (i.e., the reactive power is changed by the same ratio as the active power).

The following data record is used to change an **individual** machine's Voltage Schedule/Active Power/Reactive Power either by a designated amount or by a specified percentage of its initial value:

```
|CHANGE   | |MACHINE| mcid AT BUS bsid VSCHED BY r PERUNIT
|ALTER    | |UNIT    |
|MODIFY   |
|INCREASE|
|RAISE    |
|DECREASE|
|REDUCE   |

|CHANGE   | |MACHINE| mcid AT BUS bsid ACTIVE BY r |MW      |
|ALTER    | |UNIT    |                              |PERCENT|
|MODIFY   |
|INCREASE|
|RAISE    |
|DECREASE|
|REDUCE   |
```


All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

```
|CHANGE   | |MACHINE| mcid AT BUS bsid REACTIVE BY r |MVAR   |
|ALTER    | |UNIT   |                                |PERCENT|
|MODIFY   |
|INCREASE|
|RAISE    |
|DECREASE|
|REDUCE   |
```

The following data record is used to change an **individual** shunt's power either by a designated amount or by a specified percentage of its initial value:

```
|CHANGE   | SHUNT shid AT BUS bsid BY r |MW     |
|ALTER    |                             |PERCENT|
|MODIFY   |                             |MVAR   |
|INCREASE|
|RAISE    |
|DECREASE|
|REDUCE   |
```

The following data record is used to change an **individual** switched shunt's Voltage Scheduled/VMAX/VMIN/ Reactive Power either by a designated amount or by a specified percentage of its initial value (swid defaults to "1 "):

```
|CHANGE   | SWSHUNT [swid] AT BUS bsid |VSCHED| BY r PERUNIT
|ALTER    |                            |VMAX  |
|MODIFY   |                            |VMIN  |
|INCREASE|
|RAISE    |
|DECREASE|
|REDUCE   |

|CHANGE   | SWSHUNT [swid] AT BUS bsid |REACTIVE| BY r |MVAR   |
|ALTER    |                                           |PERCENT|
|MODIFY   |
|INCREASE|
|RAISE    |
|DECREASE|
|REDUCE   |
```

The following data record is used to change the two-terminal dc line either by a designated amount of power or by a specified percentage of its initial value:

```
|CHANGE   | TWOTERMDC devid BY r |MW     |
|ALTER    |                      |AMPS   |
|MODIFY   |                      |PERCENT|
|INCREASE|
|RAISE    |
|DECREASE|
```


All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

```
|REDUCE   |
```

When keyword MW is used, the two-terminal dc line must be in power control mode and`r` is the power demand to be changed. When keyword AMPS is used, the two terminal dc line must be in current control mode and`r` is the current demand to be changed. When the PERCENTkeyword is specified, the power demand of two-terminal dc line is changed by`r` percent.

The following data record is used to change the VSC dc line either by a designated amount of power or by a specified percentage of its initial value:

```
|CHANGE   | VSCDC devid BY r |MW     |
|ALTER    |                  |PERCENT|
|MODIFY   |
|INCREASE|
|RAISE    |
|DECREASE|
|REDUCE   |
```

When keyword MW is used, the VSC dc line power demand is increased by`r`. When the PERCENT keyword is specified, the power demand of VSC dc line is changed by `r` percent.

The following data record is used to transfer load or generation from one bus to another:

```
MOVE r |MW     | |GENERATION| FROM BUS bsid TO BUS bsid
       |PERCENT| |LOAD      |
                 |SHUNT     |
```

When LOAD is moved either by PERCENT or MW, the power factor of load is constant (i.e., the reactive power is changed by the same ratio as the active power). When GENERATION or SHUNT is moved either by PERCENT or MW, only active power is changed.

When transferring MW, the power shift, P_{shift}, is set to `r`; when the PERCENT keyword is specified, the power shift is calculated as:

$P_{shift} = r \times P_{orig} / 100$

where P_{orig} is initial load or generation, as appropriate, at the from bus. The power shift is then subtracted from the original power at the from bus and added to the original power at the to bus. When the quantity to be modified at the from bus is initially positive, a negative post-shift power at the from bus is treated as an error condition.

When generation is being transferred, the from bus must have in-service generation. If the to bus is not a generator bus, an appropriate message is printed and the power shift is treated as negative load at the to bus. Either of the two buses may be a swing bus.

The following data record is used to transfer the active power and reactive power of load from one bus to another:

```
MOVE r |MW     | ACTIVE LOAD FROM BUS bsid TO BUS bsid
       |PERCENT|
```


All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

```
MOVE r |MVAR    | REACTIVE LOAD FROM BUS bsid TO BUS bsid
       |PERCENT|
```

The keyword MVAR can be used to transfer the reactive power component of bus fixed shunts with the data record:

```
MOVE r MVAR SHUNT FROM BUS bsid TO BUS bsid
```

The following data record is used to transfer **individual** load from one bus to another:

```
MOVE LOAD ldid r |MW     | FROM BUS bsid TO BUS bsid
                 |PERCENT|
                 |MVAR   |
                 |MWPF   |
```

When the keyword MW is used, only the active power of the individual load is moved; when the keyword MVAR is used, only the reactive power of the individual load is moved; when the keyword PERCENT is used, both active power and reactive power of the individual load is moved by **r** percent; when the keyword MWPF is used, the active power of the individual load is moved by **r** MW, and the reactive power is changed by the same ratio as the active power.

The following data record is used to transfer **individual** machine from one bus to another:

```
MOVE |MACHINE| mcid r |MW     | FROM BUS bsid TO BUS bsid
     |UNIT   |        |PERCENT|
```

The following data record is used to transfer **individual** shunt from one bus to another:

```
MOVE SHUNT shid r |MW     | FROM BUS bsid TO BUS bsid
                  |PERCENT|
                  |MVAR   |
```

The following data record is used to transfer **individual** switched shunt from one bus to another:

```
MOVE SWSHUNT swid r |MVAR   | FROM BUS bsid TO BUS bsid
                    |PERCENT|
```

An in-service synchronous machine, induction machine, load or fixed bus shunt may be removed from service using the following data record:

```
REMOVE |MACHINE      mcid| FROM BUS bsid [DISPATCH]
       |UNIT         mcid|
       |INDUCMACHINE imid|
       |LOAD         ldid|
       |SHUNT        shid|
```

Similarly, an out-of-service synchronous machine, induction machine, load or fixed bus shunt may be placed in-service with a record of the form:

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

```
ADD |MACHINE      mcid| TO BUS bsid [DISPATCH]
    |UNIT         mcid|
    |INDUCMACHINE imid|
    |LOAD         ldid|
    |SHUNT        shid|
```

The presence of the optional keyword DISPATCH is handled as described above for the SET data record. The machine status contingency events are not permitted at swing buses.

An in-service switched shunt may be removed form service with the following data record (swid defaults to "1 "):

```
REMOVE SWSHUNT [swid] FROM BUS bsid
```

Similarly, an out-of-service switched shunt may be placed in-service with a record of the form (swid defaults to "1 "):

```
ADD SWSHUNT [swid] TO BUS bsid
```

12.4.2. Automatic Contingency Specification

Automatic Single and Double Line Outage Contingency Specification

When the keyword BRANCH, LINE, or TIE is used in automatic single and double line outage contingency specification commands, all branches except breakers and switches are included in the contingencies. When the keyword BREAKER is used, only breaker and switch branches are included in the contingencies.

The following data record provides for the designation of a series of single line outage contingency cases:

```
SINGLE |BRANCH | FROM BUS bsid
       |LINE   |
       |BREAKER|
```

Each in-service branch connected to the designated bus is outaged, one at a time. Similarly, a series of double line outage contingency cases may be specified with the data record:

```
DOUBLE |BRANCH | FROM BUS bsid
       |LINE   |
       |BREAKER|
```

All branches within a specified subsystem may be outaged, either singly or in pairs, by entering the data record:

```
|SINGLE   | |BRANCH | IN |AREA i         | [3WLOWVOLTAGE]
|DOUBLE   | |LINE   |    |ZONE i         |
```


All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

```
|BUSDOUBLE| |BREAKER|     |OWNER i         |
|PARALLEL |               |KV r            |
                          |SYSTEM label    |
                          |SUBSYSTEM label|
```

Without the token '3WLOWVOLTAGE', for a three-winding transformer to be included, all of its in-service windings must be connected to subsystem buses. In using the token '3WLOWVOLTAGE', the three-winding transformer is included if its in-service high and median voltage windings are connected to subsystem buses.

The DOUBLE, BUSDOUBLE, and PARALLEL contingency specification records all generate contingency cases consisting of two simultaneous line outages. The DOUBLE record generates all combinations of double line outage contingencies for all branches where endpoint buses are contained in the specified subsystem. That is, each branch in the subsystem is outaged in turn with every other branch in the subsystem. DOUBLE may be viewed as considering independent events causing simultaneous outages.

The BUSDOUBLE record is more restrictive than the DOUBLE record. For each bus in the specified subsystem, it generates all combinations of double line outage contingencies for all branches between that bus and other subsystem buses. BUSDOUBLE may be viewed as considering single events in substations that affect pairs of branches connected to a substation.

The PARALLEL record is more restrictive than the BUSDOUBLE record. It generates double line outage contingencies only for parallel branches (i.e., for each contingency case, the two branches being outaged connect the same pair of subsystem buses). Three-winding transformer contingencies are not generated by the PARALLEL record. PARALLEL may be viewed as considering single events on rights-of-way that affect pairs of branches on a right-of-way.

In using the SYSTEM or SUBSYSTEM keywords, the label must correspond to a subsystem label specified in a previously accessed Subsystem Definition data file (refer to Section 12.2, “Subsystem Definition Data File”).

Branches that are assigned to a line owner can be outaged, either singly or in pairs by using the following data record:

```
|SINGLE   | |BRANCH| WITH LINE OWNER i
|DOUBLE   | |LINE  |
|BUSDOUBLE|
|PARALLEL |
```

All in-service buses within a specified subsystem may be singly disconnected with the data record:

```
SINGLE BUS IN |AREA i         |
              |ZONE i         |
              |OWNER i        |
              |KV r           |
              |SYSTEM label   |
              |SUBSYSTEM label|
```

Each single bus outage is converted to as many OPEN BRANCH commands as are required to open all in-service branches connected to the bus before it is passed to Distribution Factor Data File.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

In-service machines connected to in-service generator buses within a specified subsystem may be removed from service singly with the data record:

```
SINGLE |MACHINE| IN |AREA i         |
       |UNIT   |    |ZONE i         |
                    |OWNER i        |
                    |KV r           |
                    |SYSTEM label   |
                    |SUBSYSTEM label|
```

Only one machine can be outaged for each generator bus. When a generator bus has multiple in-service machines, the machine with the biggest real power generation is chosen to be outaged.

Finally, the following data record provides for the outaging, either singly or in pairs, of all ties from a specified subsystem or all ties between a pair of subsystems:

```
|SINGLE   | TIE FROM  |AREA i         | TO |AREA i        |
|DOUBLE   |           |ZONE i         |    |ZONE i        |
|BUSDOUBLE|           |OWNER i        |    |OWNER i       |
|PARALLEL |           |KV r           |    |KV r          |
                      |SYSTEM label   |    |SYSTEM label  |
                      |SUBSYSTEM label|    |SUBSYTEM label|
```

The selection of tie branches in the case of overlapping subsystems is handled using the same criteria defined in Monitored Element Data File for the monitoring of ties.

For these record types, when the multi-section line reporting option is enabled, the outaging of a multi-section line grouping within the specified subset is treated as a contingency event; the entire multi-section line is outaged. When the multi-section line reporting option is disabled, individual members of multi-section line groupings within the specified subset (rather than entire multi-section line groupings) are outaged.

The SKIP block structure is used to specify individual branches that are to be excluded from outaging in contingencies generated as a result of subsequent SINGLE, DOUBLE, BUSDOUBLE, and PARALLEL contingency specification records. Each SKIP block structure is specified as follows:

```
SKIP |LINE  |
     |BRANCH|
(branch specification record;  below)
.
.
(branch specification record;  below)
END
```

Non-transformer branches and two-winding transformers are specified on branch specification records using the following record format:

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

```
bsid TO bsid [|CIRCUIT| ckid]
             |CKT    |
```

Three-winding transformers are specified on branch specification records using the following record format:

```
bsid TO bsid TO bsid [|CIRCUIT| ckid]
                     |CKT    |
```

The default circuit identifier is '1' if this specification is omitted,

Branches specified in a SKIP block structure apply only to SINGLE, DOUBLE, BUSDOUBLE, and PARALLEL contingency specification records which are below it in the Contingency Definition data file. Multiple SKIP block structures are allowed, and each SKIP block structure appends to the list of branches to be omitted from outaging as a result of subsequent automatic contingency specification records.

When the multi-section line reporting option is enabled and a branch that is a member of a multi-section line is specified, the multi-section line is excluded from outaging. When the multi-section line reporting option is disabled and a multi-section line is specified, an error message is printed and the record is ignored.

12.4.3. Node-Breaker Contingency Specification

The following commands can be processed only when the PSS®E network case contains node breaker data, otherwise they are ignored by the applications where they are simulated.

The following command will isolate an in-service branch, system switching device or two- winding transformer by breaker operations.

```
ISOLATE |BRANCH| FROM BUS bsid TO BUS bsid [|CIRCUIT| ckid]
        |LINE  |                            |CKT    |
```

The processing of this and other isolate contingencies consists of:

- Using the full topology network model to systematically follow the circuits outward from the line to be isolated, and identify and open breakers in order to clear the fault on the circuit. The operation may result in one or multiple circuits (i.e. branches, transformers, etc.) being opened en route to the opening of a breaker. Once a breaker is successfully opened, the search along that path terminates. If the process extends along paths beyond a user specified number of bus levels outward (OPTN) and the line has not been successfully isolated, then the process will terminate with a message.
- The breakers include those defined as both system switching devices and substation switching devices. The operations may result in one or more breakers being opened.
- If a stuck breaker status is encountered, the process will continue without opening the breaker and a message will be displayed. Refer to the Stuck Breaker command below.
- With the successful isolation of the line the following process are completed in order:
- The topology processor will automatically be run to update the bus branch model based the status of switching devices.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

- Once the topology processing is complete, the power flow solution will be run to solve the new contingency state.

The following command will isolate an in-service three-winding transformer by breaker operations:

```
ISOLATE |BRANCH| FROM BUS bsid TO BUS bsid TO BUS bsid [|CIRCUIT| ckid]
        |LINE  |                                        |CKT    |
```

The following command will isolate one winding of a three-winding transformer by breaker operations:

```
ISOLATE THREEWINDING AT BUS bsid TO BUS bsid TO BUS bsid [|CIRCUIT| ckid]
                                                         |CKT    |
```

Isolation of all in-service branches connected to a bus may be specified with a record of the form:

```
ISOLATE BUS bsid
```

The following commands will isolate in-service bus-connected equipment by breaker operations(swid defaults to "1 "):

```
ISOLATE |MACHINE      mcid| AT BUS bsid
        |UNIT         mcid|
        |LOAD         ldid|
        |SHUNT        shid|
        |SWSHUNT    [swid]|
        |INDUCMACHINE imid|
```

The following commands will isolate in-service dc lines or a FACTS device by breaker operations:

```
ISOLATE |TWOTERMDC   | devid
        |MULTITERMDC|
        |VSCDC      |
        |FACTS      |
```

The following command opens an in-service switching device (SWD) in a substation:

```
|DISCONNECT| |SWD    | |SUBSTATION| staid FROM NODE ndid TO NODE ndid [|CIRCUIT| ckid]
|OPEN      | |SWITCH | |SUB       |                                     |CKT    |
|TRIP      | |BREAKER|
```

The following command closes an out-of-service switching device in a substation:

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

```
CLOSE |SWD    | |SUBSTATION| staid FROM NODE ndid TO NODE ndid [|CIRCUIT| ckid]
      |SWITCH | |SUB       |                                    |CKT    |
      |BREAKER|
```

The following command isolates an in-service switching device in a substation by breaker operations.

```
ISOLATE |SWD    | |SUBSTATION| staid FROM NODE ndid TO NODE ndid
        |SWITCH | |SUB       |
        |BREAKER|
```

The following command will isolate a single end of an in-service branch, system switching device or two-winding transformer by breaker operations:

```
|DISCONNECT| TERMINAL FROM BUS bsid TO BUS bsid [|CIRCUIT| ckid]
|OPEN      |                                     |CKT    |
```

The following command will isolate a single terminal of an in-service three-winding transformer by breaker operations:

```
|DISCONNECT| TERMINAL FROM BUS bsid TO BUS bsid TO BUS bsid [|CIRCUIT| ckid]
|OPEN      |                                                  |CKT    |
```

The following command will isolate a single node of a substation by breaker operations:

```
ISOLATE |SUBSTATION| staid NODE ndid
        |SUB       |
```

The following command will place a closed breaker in the status of “stuck”. It will fail to open in subsequent isolation operations in that contingency:

```
STUCK BREAKER |SUBSTATION| staid FROM NODE ndid TO NODE ndid [|CIRCUIT| ckid]
              |SUB       |                                    |CKT    |
```

Automatic Contingency Specification

The following record will create contingencies for every in-service branch or transformer connected to a bus:

```
|SINGLE| |OPEN TERMINAL | FROM BUS bsid
|DOUBLE| |ISOLATE LINE  |
         |ISOLATE BRANCH|
```


All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

The following records will create contingencies for every in-service branch or transformer in a subsystem:

```
|SINGLE   | |ISOLATE LINE  | IN |AREA i         | [3WLOWVOLTAGE]
|DOUBLE   | |ISOLATE BRANCH|    |ZONE i         |
|BUSDOUBLE|                     |OWNER i        |
|PARALLEL |                     |KV r           |
                                |SYSTEM label   |
                                |SUBSYSTEM label|
```

```
|SINGLE| OPEN TERMINAL IN |AREA i         |
|DOUBLE|                  |ZONE i         |
                          |OWNER i        |
                          |KV r           |
                          |SYSTEM label   |
                          |SUBSYSTEM label|
```

The following record will create contingencies for every in-service substation switching device (which can be limited to switches or breakers) in a subsystem:

```
SINGLE |OPEN   | |SWD    | IN |AREA i         |
       |CLOSE  | |SWITCH |    |ZONE i         |
       |ISOLATE| |BREAKER|    |OWNER i        |
                              |KV r           |
                              |SYSTEM label   |
                              |SUBSYSTEM label|
```

The following record will create contingencies for every in-service bus in a subsystem:

```
SINGLE ISOLATE BUS IN |AREA i         |
                      |ZONE i         |
                      |OWNER i        |
                      |KV r           |
                      |SYSTEM label   |
                      |SUBSYSTEM label|
```

The following record will create stuck breaker contingencies for a subsystem. For each substation in the subsystem, for each node in that substation, all combinations of in-service branches or transformers and closed breakers connected to that node will be found. Each combination will generate a contingency consisting of a stuck breaker record for that breaker and an isolate record for that branch or transformer.

```
SINGLE STUCK BREAKER IN |AREA i         |
```


All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

```
                        |ZONE i         |
                        |OWNER i        |
                        |KV r           |
                        |SYSTEM label   |
                        |SUBSYSTEM label|
```

The SKIP block structure is used to specify individual substation switching device that are to be excluded from outaging in contingencies generated as a result of subsequent SINGLE, DOUBLE, BUSDOUBLE, and PARALLEL contingency specification records. Each SKIP block structure is specified as follows:

```
SKIP SWD
(substation switching device specification record;  below)
.
.
(substation switching device specification record;  below)
END
```

Substation switching devices are specified on branch specification records using the following record format:

```
staid FROM ndid TO ndid [|CIRCUIT| ckid]
                         |CKT    |
```

The default circuit identifier is '1' if this specification is omitted,

Substation switching devices (SWDs) specified in a SKIP block structure apply only to SINGLE, DOUBLE, BUSDOUBLE, and PARALLEL contingency specification records which are below it in the Contingency Definition data file. Multiple SKIP block structures are allowed, and each SKIP block structure appends to the list of SWDs to be omitted from outaging as a result of subsequent automatic contingency specification records.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

Chapter 13
Advanced Linear Analysis/MUST SUB/MON/CON File Extensions and Options

13.1. Description of Input Data

An effort has been made to harmonize the SUB, MON, and CON files between PSS®E and the Advanced Linear Analysis/MUST module. To this end, items in these files that share the exact same syntax will only be found in the previous chapter. This chapter will only contain the the elements that are *different* in their syntax.

The approach to harmonizing these files has taken three approaches:

1. Make sure that the SUB/MON/CON files for *either* module does not cause an issue when run in the *other* module i.e. PSS®E files run in Advanced Linear Analysis/MUST and vice versa

   If there are unsupported elements or syntax contained in the files when run in the opposing system thengenerate an error message, ignorethe record, and continue execution.

2. *Extend* the supported syntax in *both* modules to close gaps

3. Extend, where practical, recognized elements to further close gaps. The caveat to this is approach is we will *not* make both modules equal in their functionality. The Advanced Linear Analysis/MUST module will support certain logical network elements that are key to its analysis. PSS®E will not support these element where it is not key to its analysis. An example of this would be flowgates. These are key to the Advanced Linear Analysis/MUST module calculations but play no part in PSS®E core calculations.

13.1.1. Input Data Types

Several types of input data files are required to run Advanced Linear Analysis/MUST

- A solved load flow case.
- Subsystems data file, which defines potential sources and sinks for transactions and subsystems that may be used later for defining monitored elements and contingencies.
- Monitored element data file, which specifies monitored branches, interfaces and flowgates.
- Contingency data file, which defines user-specified contingencies.
- Optional exclude data file, which allows custom adjustments to the monitored element data file, excluding specific pairs of monitored elements and contingencies, changing branch ratings, or interface limits.

13.1.2. Conventions and Special Data Records

In describing the input file syntax, the following notational conventions are used. Keywords and data values must be separated by one or more blanks. As noted above, this table lists only those items are in addition to those described in Section 1.1.1 or differ in some way.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

label	A 12- or 14-character (depending on the contents) label identifier. If a label contains blanks or special characters, it must be enclosed in single quotes. This differs from the PSS®E label description.
contingency names	The maximum contingency name length is 50 characters Contingency labels must be unique and can have a maximum width of 42 characters. This differs from PSS®E where the contingency name field is not identified specifically but is a *label* field.
flowgate_id	flowgate_id is an integer number in the range from 1 to 99999.
flowgate_label	flowgate_label is the flowgate text descriptor with a maximum width of 45 characters.
Contingencies	The number of elementary events (excluding dispatch events) for a contingency is 100.

13.1.3. INCLUDE Record

The INCLUDE record allows the user to split large input files into several smaller ones, which are then processed via the INCLUDE statement. The INCLUDE statement has the following format:

```
INCLUDE filename
```

Every INCLUDE statement should start from a new line. Included files may also contain another INCLUDE record. The user is limited to 10 levels of nesting of INCLUDE statements.

Data files included via the INCLUDE statement can reside in different directories. The directory of the main file (the file specified by the user for the MUST request) is considered the current directory. All paths provided in the INCLUDE statement should be relative to this current directory or should provide an absolute path. If, for example, c:\MUST\userdata\main contains the main subsystem file specified for the MUST requests, the following two examples will be equivalent:

```
INCLUDE ..\pjmdata\pseg.sub
INCLUDE c:\must\userdata\pjmdata\pseg.sub
```

The INCLUDE statement simplifies data maintenance of large files especially if different parts of the data come from different sources. The example below demonstrates how a large number of subsystem files can be maintained by using a master subsystem file. As shown in the example below, the master subsystem file contains several automatic subsystem specification records and INCLUDE statements for every control area of interest.

Example:

```
ADD ALL AREAS FOR EXPORT SUFFIX _EXA WITH PMAX GREATER 50 MW
```


All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

```
ADD ALL AREAS SCALE GENERATION SUFFIX _SCG WITH PMAX GREATER 50 MW
ADD ALL AREAS SCALE LOAD SUFFIX _LD
ADD ALL AREAS FOR IMPORT SUFFIX _IMA WITH PMAX GREATER 50 MW
/
INCLUDE aep.sub
INCLUDE ap.sub
INCLUDE cin.sub
INCLUDE cple.sub
.
.
INCLUDE southern.sub
INCLUDE tva.sub
INCLUDE vp.sub
/
```

The first four records result in creating up to four subsystems for every existing area in the load flow case. Each of the included files should contain subsystem definitions specific to the corresponding control area. The same multilevel approach can be used for maintaining large monitored element data files, including large flowgate files and large contingency files because it distributes the data maintenance support functions.

13.2. Subsystem Definition Data File

13.2.1. General Description and Advanced Linear Analysis/MUST Subsystem Extensions

Subsystems of the working case are defined via the subsystem data file. Currently, the notion of a subsystem is used in two senses

1. Sources and sinks (or purchasing and selling entities) by defining the set of buses involved in the transactions

2. Control areas defined as any groups of buses. Several Advanced Linear Analysis/MUST activities allow evaluations of transaction impacts on defined subsystems. Also, defined subsystems can be used later to specify monitored elements and contingencies.

Separating these two notions can increase flexibility of modeling and accounting for transactions.

Advanced Linear Analysis/MUST allows automatic definition of many subsystems on an area and zone basis. A key feature of Advanced Linear Analysis/MUST is the independence of the subsystem definition and the current load flow case data. The same subsystem definitions can be used simultaneously for different load flow cases. For example, a single ADD ALL record defines one subsystem for each area existing in the current load flow case, and automatically selects generator participation factors such that all generators would reach their upper/lower limit simultaneously. This is a convenient shortcut for defining external systems and fast screening studies.

Advanced Linear Analysis/MUST allows definition of participation factors on the fly according to current generation, generation minimum and maximum, and generator current status from the load flow. This makes subsystem definitions less dependent on the current load flow case generation dispatch. Advanced Linear Analysis/MUST provides automatic selection of only large generators with maximum or current generation above a user-specified threshold. This provides, for example, a convenient approach for selecting all essential generators on the area-wide basis for generator sensitivity analysis.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

Advanced Linear Analysis/MUST allows load scaling by areas, zones, or subsystems. When scaling load, Advanced Linear Analysis/MUST adjusts all selected load buses in the subsystems in proportion to the bus loads.

13.2.2. Defining Buses within a Subsystem

Advanced Linear Analysis/MUST allows many ways to define the buses of a subsystem, using the bus ids, areas, zones, kV, owner or join blocks. It also allows several ways to show how buses participate and which ones do participate using the PARTICIPATE command or some form of scaling (Section 3.2.6). However, in all cases, buses making up the subsystem must be defined somehow. Just scaling is not enough.

This applies to all scaling methods (FOR EXPORT, FOR IMPORT, GENERATION and LOAD) methods. The PARTICIPATE command is an exception; buses defined by PARTICIPATE will also be included in the subsystem.

Bus Names can be of the format 'nnnnnnnnvvvv' (old format) or 'nnnnnnnnnnnnvvvv' (new format); where nnnnnnnn or nnnnnnnnnnnn is the name portion and vvvv the voltage portion of the bus name. Bus names have to be specified via a name and voltage level as shown below:

```
BUS '01PLEAS126.0' 140.000 /old format name with participation factor
BUS '02SAMMIS 345' 11.000 /old format name with participation factor
BUS 'ALPHABETA 345' /new format name
BUS 'GAMMAALPHAXX 169' /new format name
```

Below is an incorrect definition, and correct definitions for a subsystem. Generation scaling is used in the example, but all scaling methods except for PARTICIPATE have the same requirement.

Example:

Incorrect Subsystem Definition (no buses defined)

```
SUBSYSTEM "MY GENERATORS"
SCALE GENERATION
  BUS 11111
  BUS 22222
  BUS 33333
END
END
```

Example:

Correct Subsystem Definition (Subsystem consists of buses 11111,22222, and 33333)

```
SUBSYSTEM "MY GENERATORS"
BUS 11111
BUS 22222
BUS 33333
SCALE ALL GENERATION
END
```

Example:

Correct Subsystem Definition

```
SUBSYSTEM "MY GENERATORS"
BUS 11111
```


All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

```
BUS 22222
BUS 33333
SCALE GENERATION
    BUS 11111
    BUS 22222
    BUS 33333
END
END
```

Example:

Correct Subsystem Definition (same as above but more wordy)

```
SUBSYSTEM "MY GENERATORS"
any good definition of a subsystem
SCALE GENERATION
    BUS 11111
    BUS 22222
    BUS 33333
END
END
```

To specify participation buses via the PARTICIPATE command, Advanced Linear Analysis/MUST users do not have to specify buses within the subsystem definition. If Advanced Linear Analysis/MUST finds a bus defined within a participate record but not defined in the subsystem above, it will add such bus to the subsystem automatically.

The portion of the working case buses to be contained in each subsystem definition is specified in the following block structure:

```
SUBSYSTEM|SYSTEM [label]
(subsystem specification data record)
.
.
(subsystem specification data record)
END
```

where the subsystem specification data records allowed are as described below. Subsystem/system label width in Advanced Linear Analysis/MUST can be up to 20 characters. If no label is specified on a SUBSYSTEM record, the label "UNNAMED N" is assigned to the subsystem, where "N" is a unique integer.

Selected buses may be designated as part of a subsystem with data records of the following form:

```
BUS bsid
BUSES bsid bsid
```

Example:

```
BUS 200
BUSES 300 400
```

BUS and BUSES records are valid only when using bus input by bus numbers. The BUSES record assigns the designated buses, as well as all buses whose bus numbers fall between the two bus numbers specified, to the subsystem being defined.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

All buses in selected areas may be assigned to a subsystem with data records in the following format:

```
AREA i
AREAS i j
```

where "i" and "j" are area numbers. The AREAS record type assigns all buses in a range of area numbers to the subsystem being defined.

Example:

```
AREAS 5 7
```

In the example above, the data record "AREAS 5 7" may be used to assign all buses in areas five, six, and seven to the subsystem.

Similarly, all buses in selected zones may be assigned to a subsystem with data records of the following form:

```
ZONE i
ZONES i j
```

where "i" and "j" are zone numbers.

Buses at designated voltage levels may be assigned to a subsystem with records of the following form, where, the KVRANGE record defines a range of voltage levels:

```
KV r
KVRANGE r1 r2
```

Example:

```
KVRANGE 100 500
```

In specifying ranges of bus numbers, areas, zones, and voltage levels, the second specified value should be a positive number greater than the first one.

Example:

```
AREAS 7 3 -wrong
KVRANGE 135 -500 -wrong
```

All buses with selected owners may be assigned to a subsystem with data records in the following format:

Example:

```
OWNER i
OWNERS i j
```

where "i" and "j" are owner numbers. The OWNERS record type assigns all buses in a range of owner numbers to the subsystem being defined.

Example:

```
OWNERS 2 4
```


All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

In the example above, the data record "OWNERS 2 4" may be used to assign all buses with owners two, three, and four to the subsystem.

In addition, a JOIN specification block structure provides for the specification of a group of buses through the logical "anding" of two or more of the four selection criteria described above. A JOIN specification has the following block structure:

```
JOIN [label]
(subsystem specification data record)
.
.
(subsystem specification data record)
END
```

where each subsystem specification data record is one of the simple record types (BUS, AREA, ZONE, KV, or the corresponding "range of" records) described above. The optional JOIN specification label is for the user's convenience and is not used by Advanced Linear Analysis/MUST functions.

Each JOIN specification block structure must appear within the subsystem block structure described above. Both JOIN specification block structures and the simple record types may be included within a subsystem block structure.

Example:

```
SUBSYSTEM 'MY COMPANY'
AREA 5
JOIN 'GROUP 1'
    AREA 6
    ZONES 8 10
END
END
```

The above example defines the subsystem "MY COMPANY", that consists of all buses in area 5, along with all buses in area 6, which are in zones 8 through 10.

13.2.3. Subsystem Adjustments Methods

There are several methods for adjusting power injection in sending and receiving systems. These methods can be categorized into several groups:

- Adjustments according to user-specified participation factors using the PARTICIPATE record.
- Adjusting generation in proportion to available generator reserves in a load flow case. This is defined as the difference between maximum and current generation (Pmax - Pcur). Several selected generators are adjusted in such a way that all selected generators would reach their maximum simultaneously. This type of adjustment can be defined using the EXPORT specification.
- Adjusting generation based on the current and minimum generation in a load flow case. For this method, generators will be adjusted so that all generators would reach their minimum at the same time (but stay on line if Pmin is greater than zero). This type of adjustment can be defined using the IMPORT specification. Reaching zero generation will not change the generator status to OFF.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

- The SCALE GENERATION specification defines generator participation factors in proportion to the current generation. Generators will be adjusted in a way that, for example, all selected generators would reach zero generation level simultaneously.

- The SCALE LOAD specification defines bus participation factors in proportion to the current bus load relative to the total load in the system.

Participation factors used for adjustments can be either explicitly specified by a user or selected automatically according to the adjustment methods described above.

Report	Notation
PartFactSpec	Participating generators and factors are user specified
PartFactSpecOff	Participating generators and factors are user specified, subsystem transfer limit checking will consider offline generators.
PartFactDef	Default PARTICIPATE type in case the PARTICIPATE record was omitted in the subsystem specification and participation factors were selected in MBASE on the basis of machine availability
ExportSpec	Participating generators are user specified, but participation factors are selected automatically according to export specification
ExportSpecOff	Participating generators are user specified, but participation factors are selected automatically according to export specification (off-line generators included)
ExportDef	All available subsystem generators were selected to participate automatically with export type participation factors
ExportDefOff	All available subsystem generators were selected to participate automatically with export type participation factors (off-line generators included)
ImportSpec	Participating generators are user specified with import type participation factors
ImportDef	All available subsystem generators were selected to participate automatically with import type participation factors
ScaleGenSpec	Participating generators are user specified with participation factors proportional to generation in a load flow case.
ScaleGenDef	All available subsystem generators were selected with participation factors proportional to generation in a load flow case
ScaleLoadSpec	Participation buses are user specified with adjustments proportional to load level in a load flow case
ScaleLoadDef	All load buses will be scaled in the subsystem
SingleBus	Systems added by the BUS method.
SingleGen	Systems added by the GENERATOR method.
SingleGenOff	Systems added by the GENERATOR method (off-line generators included)

Advanced Linear Analysis/MUST transfer limit analysis calculation functions do not enforce generator limits. A user can use the detailed subsystem report to identify the maximum shifts possible before violating generation limits.

13.2.4. Automatic Specifications Using the ADD Command

The ADD ALL command allows the addition of multiple subsystems based on the user-specified criteria using areas and zones definitions. One record allows the addition of all subsystems with generation or load being adjusted according to the record type. The ADD ALL command provides a convenient means for approximate

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

definition of external systems for screening studies. For MMWG load flow cases, one ADD ALL areas command adds 60 to 100 subsystems allowing transactions from or to any automatically created subsystem.

There are four different types of ADD ALL commands which define different ways of adjusting/scaling specified subsystems:

```
ADD ALL |AREAS| |FOR EXPORT      | [SUFFIX label] [WITH_GROUP] [INCLUDE OFFLINE]
    |ZONES| |FOR IMPORT      |
            |SCALE GENERATION|
```

and

```
ADD ALL |AREAS| SCALE LOAD [SUFFIX label]
    |ZONES|
```

ADD ALL records add one subsystem for each valid area or zone existing in the current load flow case. For adjusting generation, Advanced Linear Analysis/MUST creates subsystems for every area or zone that has generation that can be adjusted without violating the corresponding limit. For example, an area with all generators at maximum will not be considered as a valid EXPORT subsystem. Specifications FOR EXPORT and FOR IMPORT result in creating subsystems with the maximum export/import capability before violating generator limits.

For automatically specified contingencies, Advanced Linear Analysis/MUST uses area/zone to build a subsystem name. An optional SUFFIX specification provides a simple solution for resolving possible name collision problems. The specified suffix is added to subsystems area/zone names. If the SUFFIX specification is omitted, the program will use the default suffixes EXA, EXZ, IMA, IMZ, SGA, SGZ, LDA, LDZ, which correspond to EXPORT, IMPORT, SCALE GENERATION, and SCALE LOAD records by areas and zones. The user-defined suffix can have up to six characters.

An optional WITH_GROUP specification allows the user to apply additional criteria to automatic generator selection by selecting only generators with the current or maximum generation above a user-specified threshold. The WITH GROUP record has the following format:

```
WITH |PMAX| GREATER r [MW]
  |PGEN|
```

The extension INCLUDE OFFLINE allows the user to include off-line units in automatically defined subsystems; INCLUDE OFFLINE is most useful within FOR EXPORT specifications. The INCLUDE OFFLINE specification changes Advanced Linear Analysis/MUST logic for automatic participation factors definition. Advanced Linear Analysis/MUST internally computes the maximum plant output for all units, including off-line units, if FOR EXPORT was used. By default, Advanced Linear Analysis/MUST uses maximum plant output arrays, which exclude off-line units.

The INCLUDE OFFLINE keywords belong after WITH_GROUP, if any, as shown in the ADD ALL definition above.

Example:

```
ADD ALL AREAS FOR EXPORT SUFFIX _EXA50 WITH PMAX GREATER 50 MW
```

As illustrated above, ADD ALL automatically selects all areas with available generation reserve for export type scaling. Using this method, all generators reach their maximum level simultaneously. All export type subsystem names have the suffix _EXA50. Only generators with available reserve and maximum generation greater than 50 MW will be included. Areas without available export will not be added.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

Example:

```
ADD ALL AREAS SCALE GENERATION SUFFIX _SCG
```

This command automatically selects all areas with nonzero generation for scaling in proportion to current case generation.

Example:

```
ADD ALL ZONES SCALE LOAD SUFFIX _LD
```

This command selects all zones existing in the load flows as subsystems for scaling load in proportion to the current bus loads.

Example:

```
ADD ALL AREAS FOR IMPORT SUFFIX _IMA WITH PGEN GREATER 50 MW
ADD ALL ZONES FOR EXPORT SUFFIX _50E WITH PMAX GREATER 50 MW
```

The above examples show how to select all areas/zones for import/export. Only generators with the current/maximum generation above 50 MW will be selected for adjustments.

Example:

```
ADD AREAS 40 45 FOR EXPORT INCLUDE OFFLINE
ADD ALL ZONES FOR EXPORT SUFFIX _EXAOF INCLUDE OFFLINE
```

The above examples demonstrate how to include off-line generators in subsystem definitions. Participating factors for off-line generators will be proportional to maximum generation at each generator.

Automatically selected participation factors can be reported using the detailed report for the subsystem of interest.

ADD records allows the addition of several specified areas or zones using scaling methods similar to the ADD ALL command based on the grammar rules shown below:

```
ADD |AREA  i  | |FOR EXPORT      | [SUFFIX label][WITH_GROUP][INCLUDE OFFLINE]
|AREAS i j| |FOR IMPORT      |
|ZONE  i  | |SCALE GENERATION|
|ZONES i j|
```

The SCALE LOAD record has a very similar format but does not use WITH_GROUP and INCLUDE OFFLINE specification:

```
ADD |AREA  i  | SCALE LOAD [SUFFIX label]
|AREAS i j|
|ZONE  i  |
|ZONES i j|
```

Several restrictions are applied:

- Subsystems defined using the SCALE GENERATION record should have at least one generator bus among selected buses with positive generation

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

- In the case of EXPORT and IMPORT records, only generators with available required reserves are accepted. The area or zone is valid only if at least one generator has available reserve (correspondingly FOR EXPORT or FOR IMPORT) depending on the type of ADD ALL record.
- Any area or zone with at least one bus with positive load will be accepted as a valid subsystem for load scaling. Buses with negative load are not selected for load scaling.
- Automatically defined participation factors are calculated on the fly internally within Advanced Linear Analysis/MUST. These factors can be reported using a detailed subsystem report, but cannot be edited by the user.

13.2.5. Defining Buses Using the PARTICIPATE Command

These paragraphs describe the method to define participating buses via the PARTICIPATE command. The participation block structure allows the user to specify those buses that are to participate in the generation shift along with their participation factors, which determine how the change in subsystem generation is to be shared among the designated buses.

The form of the participation block structure is:

```
PARTICIPATE [INCLUDE OFFLINE]
BUS bsid r
.
.
BUS bsid r
END
```

Each participation block structure must appear within the subsystem block structure described above, and must follow the simple record types and/or JOIN specification block structures defining the subsystem. Each bus specified must reside in the subsystem being processed. Any bus that violates this requirement or is disconnected (i.e., its type code is four or greater) is alarmed, and ignored.

The "r" values are participation factors that are normally expressed in percent or per unit of the total subsystem generation shift. The sum of the "r" values within a participate block structure must be positive.

Example:

```
PARTICIPATE
BUS 100 100 /* PGEN = 100 PMAX = 200
BUS 110 300 /* PGEN = 300 PMAX = 400
END
```

In the example above, the sum of the "r" values is 400, i.e,. total participation =400. BUS 100 participates at 25% (100/400), while BUS 110 participates at 75% (300/400).

For generation sensitivity analysis within Advanced Linear Analysis/MUST it is convenient to assign zero participation factors for a generator that should be considered for worst dispatch scenarios, but not for study transfers.

The optional [INCLUDE OFFLINE] specification has no impact on the defined participating factors, but will be used for checking subsystem export capability. The maximum capability of all generators including offline will be used for maximum generation output.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

13.2.6. Automatic Participation Factors Definition within the SUBSYSTEM Group

The SCALE record specification within the SUBSYSTEM group provides an alternative to the PARTICIPATE record method for defining participation buses. Only one PARTICIPATE or SCALE record can be defined for each subsystem definition. The SCALE record does not require the user to specify hard-coded participation factors, which represent the main advantage compared to the PARTICIPATE record. Participation factors are computed automatically. SCALE records are only recognized by Advanced Linear Analysis/MUST.

The use of SCALE still requires that the user define the buses in the subsystem. Unlike PARTICIPATE, SCALE does not do this for the user.

The SCALE record allows specification of either all generators (load buses) within a specified subsystem using SCALE ALL specification or by specifying the user-defined list of participating buses.

The SCALE ALL specification has the following format:

```
SCALE ALL |FOR EXPORT [WITH_GROUP] [INCLUDE OFFLINE]|
      |FOR IMPORT [WITH_GROUP] [INCLUDE OFFLINE]|
      |GENERATION [WITH_GROUP] [INCLUDE OFFLINE]|
      |LOAD                                     |
```

Example:

```
SUBSYSTEM VACAR_LOAD
AREAS 40 45
SCALE ALL LOAD
END
```

The example above demonstrates the creation of a subsystem for scaling load within the group of areas.

Example:

```
SUBSYSTEM 'MY COMPANY'
AREA 5
JOIN 'GROUP 1'
    AREA 6
    ZONES 8 10
END
SCALE ALL FOR EXPORT INCLUDE OFFLINE
END
```

The above example demonstrates automatic creation of scaling factors using FOR EXPORT for subsystems built by using the JOIN specification:

Optional EXCEPT specification for automatic scaling specifications allows the user to exclude several buses from scaling using the following format:

```
SCALE ALL |FOR EXPORT [WITH_GROUP] [INCLUDE OFFLINE]| [EXCEPT]
      |FOR IMPORT [WITH_GROUP] [INCLUDE OFFLINE]|
      |GENERATION [WITH_GROUP] [INCLUDE OFFLINE]|
      |LOAD                                     |
```


All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

```
bus bsid
bus bsid
...
bus bsid
END
```

It is quite convenient to exclude several generators that cannot participate in transfer or allow the user to exclude non-conforming load buses from load scaling.

The following example will define the subsystem for import but exclude several plants from adjustments.

Example:

```
System AMEREN
Area 356
scale all for generation with pmax greater 100 MW except
    Bus 12345 / excludes plant1
    Bus 23456 / excludes plant2
End
End
```

The following example creates a subsystem for load scaling with the exclusion of several buses to simulate non-conforming load adjustments.

Example:

```
System CE
Area 363
scale all load except
  Bus 12345 / excluded
  Bus 23456 / excluded
End
End
```

The SCALE command allows specification by individual buses with the following format:

```
SCALE |FOR EXPORT| [INCLUDE OFFLINE]
  |FOR IMPORT|
  |GENERATION|
  |LOAD      |
BUS bsid
.
.
BUS bsid
END
```

Assume that all three specified buses have on-line generation values of 100 MW at bus 12345, 200 MW at bus 12346, and 100 MW at bus 12347. The SCALE GENERATION specification for these buses is shown below:

```
SUBSYSTEM NORTH
ZONE 1 2
SCALE GENERATION
```


All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

```
    bus 12345
    bus 12346
    bus 12347
END
END
```

Buses 12345 and 12347 have a normalized participation factor of 0.25, while bus 12346 has a participation factor of 0.5.

The ADD ALL GENERATORS record allows users to select all generators as participation points in the user defined subset of buses (normally control area). The format is similar to the SCALE ALL command within subsystem definition as shown below:

```
SYSTEM SYS_LABEL
ADD ALL GENERATATORS [WITH_GROUP] [INCLUDE OFFLINE] [EXCEPT]
    bus bsid
    bus bsid
    . . .
    bus bsid
END
END
```

This option simplifies defining a subsystem for Advanced Linear Analysis/MUST sensitivity analysis when a user would like to get the sensitivity report for all generators in a control area as shown in the example below.

Example:

```
SYSTEM PJM
AREA 1 99
Add all generators
END
```

13.2.7. Defining New Subsystems Based on Already Defined Subsystems

Advanced Linear Analysis/MUST allows the use of previously defined subsystems for defining new subsystems as described above.

```
SUBSYSTEM|SYSTEM [label]
(definition of subsystem buses)
PARTICIPATE
    BUS bsid r
    subsystem label r
    subsystem label r
    . . .
    BUS bsid r
    subsystem label r
END
END
```

There are various applications for this extension such as scaling loads in different areas/zones with different proportions, and mixing scaled loads with scaled generation specifications as it shown in the next example.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

Example:

```
/ Next record will create a subsystem with the name AMRNl_GENEX
Add area 356 for export suffix GENEX
Add area 356 scale load suffix _LOAD
System AMRN_EXPORT
Participate
    System AMRN_GENEX 70
    System AMRN_LOAD 30
End
End
```

Advanced Linear Analysis/MUST allows the simultaneous use of bus and subsystem specifications within one participate group as shown below.

Example:

```
System TEST
Participate
    Bus 12345 40
    System AMRN_LOAD 30
End
End
```

13.2.8. Adding Subsystems by Bus or Generator

Adding subsystems by BUS provides a convenient method for defining subsystems for every specified bus in a user-provided list using the following format:

```
ADD SYSTEMS BY BUS
(subsystem specification data record)
.
.
(subsystem specification data record)
END
```

Subsystem names are built from bus name and number. If the current mode of bus input is input by numbers, then subsystem names will be formed by concatenating first the bus number and then the bus name. If the bus input mode is bus input by bus names, bus names will precede bus numbers in the automatically built subsystem names.

Example:

```
ADD SYSTEMS BY BUS
BUS 12345
BUSES 12347 12350
JOIN
    AREA 25
    KVRANGE 300 999
END
END
```

The example above illustrates how a subsystem is created for every specified bus.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

Similarly, adding subsystems by GENERATOR specification provides a convenient method for defining subsystems for every generator bus using the following format:

```
ADD SYSTEMS BY GENERATOR [WITH_GROUP] [INCLUDE OFFLINE]
(subsystem specification data record)
.
.
(subsystem specification data record)
END
```

Example:

```
ADD SYSTEMS BY GENERATOR WITH PMAX GREATER 100 MW INCLUDE OFFLINE
AREAS 40 45
END
```

In the example above a subsystem is created for every generator with maximum generation greater than 100 MW, including off-line generators.

13.2.9. Reporting Available Subsystems

The report provides summary information for every existing subsystem including subsystem type and maximum import and export capability without violating generators limits.

13.2.10. Subsystem Detailed Report

The subsystem detailed report provides detailed information on a user selected subsystem including generator participation factors and generators that violate capability limits at the userspecified level of Export or Import.

The subsystem detailed report is computed when a user selects a generator subsystem and a transfer level.

13.2.11. Saving Subsystem Adjustments in a Load Flow Case

Advanced Linear Analysis/MUST can be used to save subsystem adjustments in a load flow case. This feature allows updating the load flow case by saving transaction dispatches in the load flow case without adjusting individual buses.

Advanced Linear Analysis/MUST uses several rules when saving adjustments in load flow cases:

- For PARTICIPATE records, Advanced Linear Analysis/MUST attempts to save adjustments in the generation array. If the PARTICIPATE record is used to specify load buses, for nongenerator buses or off-line generators, Advanced Linear Analysis/MUST saves adjustments in the load arrays preserving the same power factor (Q/P ratio).
- Generation scaling methods (SCALE GENERATION, FOR EXPORT, and FOR IMPORT methods) are accomplished by generation changes only. No load buses or buses with off-line generation can be assigned for adjustments; scale generation records can select only generator buses and honor generation status.
- Load scaling will always be accomplished by scaling load with a fixed power factor (e.g., reactive load will be adjusted too.)

When saving subsystem adjustments in the load flow case, Advanced Linear Analysis/MUST also adjusts the change area interchange data for that load flow case.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

13.3. Monitored Element Data File

13.3.1. General Description and Advanced Linear Analysis/MUST Extensions

The user designates those elements to be monitored via the monitored element data file. Advanced Linear Analysis/MUST supports all flow type monitoring records available in PSS®E and also all voltage monitoring records except for those involving SUBSTATION (and NODE), BREAKER, SWITCH, and SWD. This subsection describes in full the flow monitoring records available within Advanced Linear Analysis/MUST.

Four types of monitored elements are supported by Advanced Linear Analysis/MUST:

1. Monitored branches

2. Monitored interfaces, where the flow on an interface is taken as the sum of the flows on the branches comprising the interface. As many as 5000 interfaces can be specified within Advanced Linear Analysis/MUST. The total number of branches contained in all interfaces may not exceed the total number of branches in the load flow.

3. Monitored flowgates. Up to 5000 flowgates are allowed by Advanced Linear Analysis/MUST. The total number of branches contained in all flowgates may not exceed the total number of branches in the load flow.

4. Monitored bus voltages

Only in-service branches are processed; out-of-service branches, if specified, will be ignored. Branches closed in contingencies are monitored for violations.

MUST uses two sets of ratings for every monitored branch and interface: base case and contingency. One of the user-specified options allows the user to disable checking/reporting base case violations. By default, MUST checks contingency violations (using the same contingency rating) for all specified contingencies. The MUST EXCLUDE function allows the user to disable checking violations for some of defined contingencies, and allows the user to specify different rating parameters for specified branches.

13.3.2. Monitored Branches Specifications

MUST does not support the Multisection Line Reporting option available within PSS®E. MUST does support the outage of multi-sectionlines.

DC and Linear Analysis - Branch Limit Checking

The user specifies the percentage of ratings to be used by MUST in branch limit checking on the MUST Options Menu. A typical specification would be to check against 100% of RATEA (Normal) in the base case and against 100% of RATEB (Long Term Emergency) post-contingency.

In the linear transfer and contingency analysis functions, MUST checks the MW loadings against the specified ratings which are in MVA (if the user chooses not to Convert Branch Ratings To Estimated MW in MUST Options). If the Convert Branch Ratings To Estimated MW option is chosen, MUST calculates a MW Rating using the base case power factor to reduce the MVA rating to an estimated MW value. In all cases MUST will use the flow at the branch metered end.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

Non-Linear AC Models - Branch Limit Checking

In the AC transfer and contingency analysis functions, the way MUST checks branch limits depends on the branch type. For nontransformer branches, MUST checks the current loading against designated branch ratings. Ratings are assumed to have been entered as:

$$MVA_{rated} = SQRT(3) \times E_{base} \times I_{rated} \times 10^{-6}$$

where:

- E_{base} is the base voltage in volts of the bus to which the terminal of the branch is connected.
- I_{rated} is the rated phase current in amps.

Any checked branch whose current loading, including line charging and line connected shunt components, exceeds the percentage of rating, specified in MUST Options, is reported.

For transformers, MUST checks the MVA loading against designated branch ratings that are assumed to have been entered as MVA ratings. Any checked transformer branch whose MVA loading, including line charging and line connected shunt components, exceeds the percentage of rating, specified in MUST Options, is reported.

MUST always checks both terminals of the monitored branches and reports the highest branch loading irrelevant of the metered end location.

13.3.3. Interface Specifications

An interface is defined using the following block structure:

```
[MONITOR] INTERFACE label [RATING_GROUP]
(branch specification record)
.
.
(branch specification record)
END
```

where RATING GROUP has one of the following formats:

```
|RATING r [MW]                                                    |
|RATINGS r r r [MW]                                               |
|BIRATINGS AmaxImp AmaxExp BmaxImp BmaxExp CmaxImp CmaxExp [MW]|
```

RATING and RATINGS specifications assume that interface minimum flows (e.g., imports through the interface) are negative and equal in absolute values to maximum flow (exports).

BIRATINGS specifications allows the user to specify bidirectional ratings (e.g., Pmin not equal to - Pmax); there are no limitations on the sign of IMPORT and EXPORT. Using the RATING command provides that AmaxImp = -AmaxExp.

Branch specification records allowing the user to specify sets of TIE lines are identical to the MONITOR TIES command:

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

```
[MONITOR] |TIES| FROM SUBSET [TO SUBSET] [IN KVRANGE r1 r2]
      |TIE |
```

where SUBSET is one of the following:

```
AREA i
ZONE i
AREAS i j
ZONES i j
SYSTEM label
SUBSYSTEM label
KV r1
KVRANGE r1 r2
```

and individual branches:

```
[MONITOR] |BRANCH| FROM BUS bsid [|CIRCUIT | ckid ] TO BUS bsid
      |LINE  |                |CKT     |
```

or, simply:

```
bsid bsid [ckid]
```

The following provides two identical examples of defining interfaces.

```
MONITOR INTERFACE NORTHEAST RATINGS 1000 1100 1200 MW
MONITOR BRANCH FROM BUS 12345 TO BUS 23456 CKT 1
MONITOR BRANCH FROM BUS 12345 TO BUS 23456 CKT 2
END
MONITOR INTERFACE NORTHEAST BIRATINGS -1000 1000 -1100 1100 -1200 1200 MW
MONITOR BRANCH FROM BUS 12345 TO BUS 23456 CKT 1
MONITOR BRANCH FROM BUS 12345 TO BUS 23456 CKT 2
END
MONITOR INTERFACE "AEP_VP" BIRATINGS 0 1000 0 1100 0 1200 MW
TIES FROM AREA 5 TO AREA 45
END
```

To create an interface containing only 230kV lines as ties from system MAACEHV, a user should use:

```
MONITOR INTERFACE 'MAAC 230 TIES' RATING 12345 MW
MONITOR TIES FROM SYSTEM MAACEHV IN KVRANGE 200 240
END
```

A 12-character interface label is printed in the output reports of these activities to identify each interface. As with AC branches, provision is made for three interface ratings. When the first form of the INTERFACE record above is used (i.e., the keyword RATING and a single value are specified), the designated value is used for each of the three interface ratings. When the second form of the INTERFACE record is used (i.e., the keyword

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

RATINGS and three values are specified), the designated values are used as the interface's A, B, and C ratings, respectively. Interfaces with ratings specified as zero are not checked by MUST violation analysis activities.

If the optional specification of ratings is omitted, the sum of the appropriate rating set values of each of the interface members is taken as the interface rating. An interface rating is intended to be specified as something different than a thermal limit; for example, contractual or stability considerations may determine the interface rating to be used.

13.3.4. Flowgates Formats

Flowgates in MUST can be specified using the following format:

```
[MONITOR] FLOWGATE flowgate_id flowgate_label RATING r [MW]
  { monitored branch specification }
  { monitored branch specification }
  . . .
  { monitored branch specification }
CONTINGENCY
  { contingency event }
  { contingency event }
  . . .
  { contingency event }
END
[ CA LABEL [LABEL2] [LABEL3] [LABEL4] [LABEL5] ]
[ SC LABEL [LABEL2] [LABEL3] [LABEL4] [LABEL5] ]
[ TP LABEL [LABEL2] [LABEL3] [LABEL4] [LABEL5] ]
END
```

where:

- Contingency definition is optional. If omitted, MUST will consider the flowgate as the base case flowgate and will use PTDF factors to update flowgate values. The contingency definition within the flowgate has the same format as the contingency definitions within contingency files with the only exception that contingency labels following the keyword contingency are ignored.
- If the flowgate limit is omitted, MUST determines the flowgate rating using the rating of the monitored branches.
- Optional Flowgate properties (Control Area (CA), Security Coordinator (SC) and Transmission Provider (TP)) are optional and currently are used for reporting purposes only. Keywords CA, SC, and TP can be specified in any order. CA, SC, and TP properties are used for reporting only.

There are no limitations on the number of monitored branches within one flowgate. MUST processes the reading of monitored branches until it finds one of the following keywords: CONTINGENCY, TP, CA, SC or END. Up to 100 elementary events can be specified within one contingency definition.

Bus IDs can be specified using either bus numbers or names. MUST allows switching between input from bus name to bus number within input files using the BUSNUMBERS and BUSNAMES records. It appears that bus names are more convenient for defining flowgates. The use of bus input by bus names tends to be more stable (i.e., bus names don't change when buses are renumbered) than that of bus by numbers.

The following are several examples of flowgate definitions.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

Example 1 defines base case flowgate.

```
MONITOR FLOWGATE 1004 'MccTieAEC'
  BRANCH FROM BUS 'MCCRED 7 345' TO BUS 'MCCREDIE 345' CKT 1
  CA       AECI AMRN
  SC       EES MAIN
  TP       AECI AMRN
END
```

Example 2 defines contingency (OTDF) flowgate with the single branch outage as the contingency. For this type of flowgate MUST will provide various additional information describing the contingency impact on monitored elements (LODF) and various other factors.

```
FLOWGATE 3133 'JOPPA-CAPE GIRARDEAU-SHAWNEE-KELSO'
BRANCH FROM BUS 'JOPPA S 161' TO BUS 'CAPE GIR 161' CKT 1
CONTINGENCY 999
    OPEN BRANCH FROM BUS '7SHAWNEE 345' TO BUS 'KELSO 345' CKT 1
END
CA   AMRN EEI
SC   MAIN
TP   AMRN EEI
END
```

Example 3 defines contingency (OTDF) flowgate with a multiple event contingency.

```
MONITOR FLOWGATE 3222 'Lock-LisleB for Lock-Li R +G'/ reliability(OTDF)
BRANCH FROM BUS 'LOCKP; B 345' TO BUS 'LISLE; B 345' CKT 1
CONTINGENCY 999
    TRIP BRANCH FROM BUS 'LOCKP; R 345' TO BUS 'LISLE; R 345' CKT 1
    CLOSE BRANCH FROM BUS 'MCCOO; B 345' TO BUS 'MCCOO; R 345' CKT 1
END
CA    CE
SC    MAIN
TP    CE
END
```

Flowgates are reported in similar ways as branches and interfaces in all MUST reports.

13.3.5. Defining Rating Multiplier by Areas or Zones

Rating multiplier specification allows the user to redefine the base case and contingent branch rating specified via the MUST Options button. There are several applications of this format. MUST users report that when rating B, usually used as a contingent rating, is not available for some control areas they have to use the base case rating A with a multiplier. In some regions Transmission Reliability Margin (TRM) are modeled via rating adjustments with a different multiplier factor for different control areas.

Rating multiplier specification has the following format:

```
rating multipliers '\n'
```


All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

```
Area/Zone definition
Area/Zone definition
. . .
Area/Zone definition
end
```

where Area/Zone definition has one of the following formats:

```
|area  i  | BaseRateId BaseRateMult ContRateId ContRateMult
|areas i j|
|zone  i  |
|zones i j|
```

The rating multipliers adjustment may be used for either areas or zones, but not for both in the same monitor file.

The example below shows the redefinition of the default ratings A and B as set in the MUST Options, i.e., base case and contingent ratings. In general, it defines a default of 100% (A) for base case and 100% (B) for contingent ratings. Then, for area 151 it defines rating A with the 120% multiplier as the contingent rating. Further, for areas 300-400 it reduces the base case ratings to 98% of A and the contingent ratings to 95% of B.

Example:

```
Rating multipliers
Areas 1 999 A 100 B 100
Area 151 A 100 A 120 / the second definition will overwrite
                     / the previous definition for that area
Areas 300 400 A 98 B 95
End
```

13.3.6. Defining Distribution Factors Cutoff by Control Areas and Zones

The default distribution factor cutoff specified via MUST Options allows the user to skip reporting monitored elements which are impacted by a study transfer below a user specified threshold. This single threshold defines both the Base Case (PTDF) and Contingent Case (OTDF) distribution factor cutoffs. There are a few examples when a user may need to apply different cutoff values for different control areas. The most common example is in using a relatively large cutoff value for external control areas (3-5%) and a smaller value (2-3%) for internal control areas. Also, this specification allows the user to use different distribution factor cutoff values for the base and contingent cases constraints.

Distribution factors cutoff record has the following format:

```
Factors cutoff '\n'
Area/Zone definition
Area/Zone definition
. . .
Area/Zone definition
end
```

where Area/Zone definition has one of the following formats:

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

```
|area i   |  BaseCutoff ContCutOff
|areas i j|
|zone i   |
|zones i j|
```

The example below redefines the default distribution factor cutoff of 0.05 (PTDF and OTDF) to the lower values of 0.02 (PTDF) and 0.03 (OTDF) for the group of control areas with the area number in the range between 300 and 400.

Example:

```
Factors cutoff
Areas 1 300 0.05 0.05
Areas 301 400 0.02 0.03
End
```

13.4. Contingency Definition Data File

Advanced Linear Analysis/MUST supports contingency records available in PSS®E except for those involving SUBSTATION (and NODE), BREAKER, SWITCH, and SWD.

The contingency description data file provides two means by which contingency cases may be specified. Individual contingency cases containing branches with status changes may be specified in a contingency case block structure (described in the following subsections) or by using an automatic contingency specification allowing the selection of a group of single- or doubleline/ generator/bus outage contingency cases within a single data record.

MUST has a function that allows generation of new contingency files. MUST-generated contingency files always contain only explicit individual contingency definitions without automatic specifications. This feature allows a user to customize the contingency definition files originally created using automatic specifications.

Section 5.2.2, “Statistics on All Contingencies” and Section 5.2.6, “Details for Selected Contingencies” describes the MUST interactive facilities for examining specified contingencies and checking for dataerrors. The MUST log file contains all errors and warnings about specified input data, mismatches between load flow case and input files. It is strongly recommended that the user review this file after significant modification to the load flow case.

13.4.1. Individual Contingency Specifications

Each contingency is defined by a contingency block which consists of a contingency label record, a number of contingency event specification records, and an end record.

A contingency case block structure is of the form:

```
CONTINGENCY label
(contingency event specification record) [dispatch group]
.
.
(contingency event specification record) [dispatch group]
END
```


All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

MUST incorporates a duplicate contingency label checker. Duplicate contingency labels will be flagged as an error and the duplicate contingency will be disabled.

Most of the elementary contingency events can be specified using DISPATCH_GROUP. Use of the DISPATCH_GROUP option causes any power mismatch within the contingency event to be distributed among the buses specified within the DISPATCH_GROUP.

The outaging of an in-service branch is specified with the following record where the default circuit identifier is '1' if this specification is omitted:

```
|DISCONNECT| |BRANCH       FROM BUS bsid TO BUS bsid            | [|CIRCUIT| ckid]
|OPEN      | |LINE         FROM BUS bsid TO BUS bsid            |  |CKT    |
|TRIP      | |WND [WND_ID] FROM BUS bsid TO BUS bsid TO BUS bsid|
|OUTAGE    |
```

Use of the record operator WND assumes that the FROM BUS bisd is bus number 1, the first TO BUS bsid is bus number 2 and the second TO BUS bsid is bus number 3. The operator WND is followed by a number WND_ID which can take on the values 1, 2, 3, or any two digit combinations of these values; ex 23, 13, 31, ... indicating which buses are to be opened or closed.

Similarly, an out-of-service branch may be placed in service with a record of the form:

```
| CLOSE | | BRANCH       FROM BUS bsid TO BUS bsid            | [| CIRCUIT| ckid]
      | LINE         FROM BUS bsid TO BUS bsid            |  | CKT    |
      | WND [WND_ID] FROM BUS bsid TO BUS bsid TO BUS bsid|
```

Various record types allow the user to specify bus contingency events in which the load and generation boundary conditions may be changed at a selected bus. When changing generation, the bus must have in-service generation connected to it and it cannot be a swing bus.

A single bus outage record has the following format:

```
DISCONNECT BUS bsid [DISPATCH_GROUP]
```

A single DISCONNECT BUS specification results in defining several branch openings for all branches connected to a specified bus. Bus outage records provide a convenient means to specify multisection line outages by specifying boundary bus outages. Bus outage specifications are shorter than branch outage records and do not require testing the status of specified branches.

13.4.2. Automatic Contingency Specifications

All contingencies are labeled. Automatic contingency labels include the circuit identification code and in the case of three-winding transformers, the transformer name. Automatic contingency labeling follows the convention as shown below.

Single Automatic Contingency Labels – Single Branch

Automatic contingency labels referencing a single branch are labeled using an automatic branch name. The automatic branch name includes the FROM bus number, FROM bus name, FROM bus voltage, TO bus number, TO bus name, bus voltage and circuit identifier.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

Example:

```
28354 Yolanda 315 35555 East Jibit 315 1
54941 HSL   4 138 54973 RENO 4     138 1
```

Single Automatic Contingency Labels – Three-Winding Transformer

The automatic branch name for a three-winding transformer consists of the three-winding star bus number, the transformer name and circuit identifier. Automatic contingency labels referencing a three-winding transformer as labeled using the prefix, "3Wnd: OPEN", followed by the automatic branch name.

Example:

```
3Wnd: OPEN B$070 T3XXXX 3 1
Double Automatic Contingency Labels
```

Double automatic contingency labels are built using the automatic branch names of both contingency pairs. Because the automatic branch name for a single branch is rather long as defined above, the automatic branch name for the single branch (double automatic contingencies only) is shortened to be the FROM bus name, the term "-", the TO bus name, and the circuit identifier.

The double automatic contingency label consists of the prefix, "D:", followed by the automatic branch name for first contingency, the term "+", and the automatic branch name for second contingency.

Example:

(Double with two branches one on circuit 22, the other 33)

```
D:20ABCDEF-10XXXXXX22+001BBBBB-CCCCCCCC33
```

Example:

(Double with a single branch on circuit 44 and a three-winding transformer on circuit 22)

```
D:HAZEL -WALNUT 44+ B$211 TREES 1 22
```

Automatic IN Contingencies

All branches within a specified subsystem may be outaged, either singly or in pairs, by entering the data record:

```
|SINGLE   | |BRANCH| IN SUBSET [IN KVRANGE r1 r2] [DISPATCH_GROUP]
|DOUBLE   | |LINE  |
|BUSDOUBLE| |
|PARALLEL | |
```

where SUBSET is one of the following:

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

```
AREA i
ZONE i
AREAS i j
ZONES i j
SYSTEM label
SUBSYSTEM label
KV r1
KVRANGE r1 r2
```

When using the SYSTEM or SUBSYSTEM keywords, the label must correspond to a subsystem label specified in a previously accessed subsystem description data file.

The DOUBLE, BUSDOUBLE, and PARALLEL contingency specification records all generate contingency cases consisting of two simultaneous branch outages. The DOUBLE record generates all combinations of double line outage contingencies for all branches whose endpoint buses are contained in the specified subsystem. That is, each branch in the subsystem is outaged, in turn, with every other branch in the subsystem. DOUBLE may be viewed as considering independent events causing simultaneous outages.

The BUSDOUBLE record is more restrictive than the double record. For each bus in the specified subsystem, it generates all combinations of double line outage contingencies for all branches between that bus and other subsystem buses. BUSDOUBLE may be viewed as considering single events in substations that affect pairs of branches connected to a substation (e.g., stuck breaker events).

The PARALLEL record is more restrictive than the BUSDOUBLE record. It generates double line outage contingencies only for parallel branches (i.e., for each contingency case, the two branches being outaged connect the same pair of subsystem buses). PARALLEL may be viewed as considering single events on right-of-ways, which affect pairs of branches on a right-of-way.

Example:

```
SINGLE BRANCH IN AREA 1
SINGLE BRANCH IN AREA 1 IN KVRANGE 100 9999
SINGLE BRANCH IN KVRANGE 100 9999
SINGLE BRANCH IN SYSTEM SOUTH IN KVRANGE 100 9999
```

The use of the SINGLE/DOUBLE/BUSDOUBLE/PARALLEL branch outages may result in the loss of load or generation, or island creation. The optional keyword DISPATCH allows a user to designate how the change in the bus boundary condition is to be apportioned among selected network buses rather than having it all assigned to the system swing bus(es). Without the DISPATCH specification, island mismatch causes swing bus adjustments, which is most likely an erroneous solution. The DISPATCH_GROUP specification is only used with single/double branch outages. The following example specifies how to adjust subsystem INERTIA in the case of a single line outage resulting in the loss of load, generation, or island creation.

Example:

```
single branch in area 45 dispatch
subsystem INERTIA
end
```

The following data record designates a series of single/double line outage contingencies from a selected bus:

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

```
|SINGLE| |BRANCH| FROM BUS bsid
|DOUBLE| |LINE   |
```

Automatic TIE Contingencies

The following data record creates a list of single/double outages encompassing all ties from a specified subsystem or all ties between a pair of subsystems:

```
|SINGLE| |TIE | FROM SUBSET [TO SUBSET] [IN KVRANGE r1 r2]
|DOUBLE| |TIES|
```

where SUBSET is one of the following:

```
AREA i
ZONE i
AREAS i j
ZONES i j
SYSTEM label
SUBSYSTEM label
KV r1
KVRANGE r1 r2
```

The main difference between the IN, FROM, and TO specifications is that IN specifies the kV requirement for both terminal buses for the selected branches, while FROM and TO specifications define only corresponding FROM or TO selection. The selection of tie branches in the case of overlapping subsystems is handled using the criteria described above for monitored ties between systems.

The KVRANGE specification selects single branch outages only if both terminal buses are within the selected kV range. To select all transformers between two kV levels or ranges, the user should use the TIE command. Optional DISPATCH_GROUP specifications are used only for single/double branch outages resulting in creating an island.

The selection of tie branches in the case of overlapping subsystems is handled using the criteria described for monitored element selection.

The following several examples show automatic contingency specifications records.

Example:

```
SINGLE TIE FROM AREA 1 IN KVRANGE 100 9999
SINGLE TIE FROM AREA 1 TO AREA 2 IN KVRANGE 100 9999
SINGLE TIE FROM SYSTEM SOUTH TO AREA 2 KVRANGE 100 9999
SINGLE TIE FROM ZONE 15 TO AREA 2 KVRANGE 100 9999
```

Automatic Generator and Bus Contingencies

The following data record creates a list of single unit/generator/bus outages in the specified subsystem:

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

```
SINGLE |UNIT      | OUTAGE IN SUBSET [DISPATCH_GROUP]
    |GENERATOR|
    |BUS      |
```

where SUBSET is one of the following:

```
AREA i
ZONE i
AREAS i j
ZONES i j
SYSTEM label
SUBSYSTEM label
KV r1
KVRANGE r1 r2
```

In the case of a UNIT specification, MUST selects the single largest unit contingency at every generator bus in the specified subset.

A GENERATOR specification creates the set contingencies for every single plant outage (all units) of all generator buses in the specified subsystem.

A BUS outage record allows the user to select as contingencies every single bus outage in the selected subset.

Example:

```
SINGLE UNIT OUTAGE IN AREA 45 DISPATCH
SUBSYSTEM INERTIA
END
```

13.4.3. DISPATCH Record Format

DISPATCH Record

When the optional keyword DISPATCH is included with the contingency event or automatic contingency specifications, a user may designate how the change in the bus boundary condition is to be apportioned among selected network buses rather than having it all assigned to the system swing bus(es). DISPATCH records can be used when specifying individual events and within automatic contingency specifications, involving changes in bus boundary conditions. DISPATCH records may not be used with branch open/close specifications.

DISPATCH records have the following format:

```
(single event or automatic contingency specification record) DISPATCH
BUS bsid r
subsystem label r
system label    r
.
.
BUS bsid        r
subsystem label r
```


All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

```
system label    r
END
```

The "r" values are positive participation factors that are normally expressed in percent or per unit of the total MW change. MUST allows the user to use BUS and SYSTEM records simultaneously within one DISPATCH_GROUP definition. If a user wants to specify only one subsystem within a subsystem group, then the "r" value specification can be omitted.

Using bus dispatch records, as shown below:

```
REMOVE MACHINE A FROM BUS 12345 DISPATCH
BUS 12346 100
BUS 12347 100
END
```

If participating factors in subsystem INERTIA have been defined to simulate inertia redispatch, then the example below will provide a simple solution to simulate inertia redispatch for every single largest generator outage.

If only one subsystem has to be specified, then there is no need to specify "r" value.

```
SINGLE UNIT IN AREA 45 DISPATCH
SYSTEM INERTIA
END
```

BUS and SYSTEM records can be used within one DISPATCH_GROUP, as shown below:

```
SINGLE UNIT IN AREA 45 DISPATCH
SYSTEM INERTIA 100
BUS 12345       50
BUS 12346       50
END
```

In the above example, 50% of mismatch will be accomplished by adjusting subsystem INERTIA; 25% by adjusting generation at bus 12345; and 25% at bus 12346.

The following is an example of single bus outage event specification:

```
DISCONNECT BUS 123456 DISPATCH
BUS 2100 100
END
```

Default Dispatch

By default, for imbalanced contingencies (with the loss of load or generation) MUST will adjust the system swing bus. Imbalanced contingencies are commonly created by using automatic contingency definition (single branch in area, for example). In most cases system swing bus adjustment does not provide adequate model. It is the user's responsibility to identify imbalanced contingencies and then improve contingency definitions. MUST has several ways to identify imbalanced contingencies within DC contingency analysis

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

The DEFAULT DISPATCH specification described below provides a simple and convenient solution to defining a "default dispatch" subsystem that would pick up the power mismatch introduced by contingency events. A default dispatch subsystem can be defined using all features available for defining subsystems, for example, proportional scaling of all generators in the LF case as the default subsystem.

Default Dispatch has the following format:

```
default dispatch
bsid      x
subsystem x
. . .
End
```

For every imbalanced contingency MUST will apply the default dispatch. The default dispatch subsystem can be redefined several times within one contingency file.

Example:

```
Subsystem file
subsystem inertia
  areas 1 999
  scale all generation with pmax greater 100 MW
end
Contingency file
default dispatch
  system inertia
end
```

13.4.4. Multi-Section Line Outages

If the Multi-section Line option is ON, then for multi-section branches, the single branch contingency specification will outage the whole multi-section line instead of one segment at a time when using both single or automatic contingency definitions as it is shown in the example below.

Example:

```
open branch from bus 123 to bus 234 ckt &1
single branch in area 1
```

If multi-section reporting is on, MUST will outage only multi-section lines.

13.4.5. Load Throwover

If a bus that has a connected load becomes isolated due to a contingency, the bus-load will be automatically transferred from the FROM bus to the TO bus using the following format:

```
load throwover
```


All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

```
from_bus_id to_bus_id
. . .
End
```

where from_bus_id and to_bus_id are bus numbers.

In addition, a load throwover data file may be used as in the example below:

```
LOAD THROWOVER
include Ldthrowover.dat
END
```

The file Ldthrowover.dat contains from / to bus pairs in the format:

```
from_bus_id to_bus_id
. . .
0
```

the last entry being a bus number of zero "0".

The load throwover file is available within all MUST activities including DC and AC based contingency analysis and transfer limit analysis.

13.4.6. Three-Winding Transformer Contingency

The syntax for three-winding transformer contingency specification is similar to that of single branch contingency specification.

All windings of a three-winding transformer may be placed in/out of-service with a record of the form:

```
|CLOSE     | BRANCH FROM BUS bsid TO BUS bsid TO BUS bsid [ | CIRCUIT | ckid ]
|OPEN      |                                                | CKT     |
|TRIP      |
|OUTAGE    |
|DISCONNECT|
```

(where the default circuit identifier of '1 ' is assumed if omitted)

Each TO BUS bsid and the FROM BUS bsid must be unique and specific to the intended threewinding transformer.

Example:

```
Open branch from bus 288 to bus 2000 to bus 398
```

The above example will open all three windings of the in-service three-winding transformer connected to bus 288, bus 2000 and bus 398. This single contingency will be internally registered as three single branch events, one for each of the three winding buses of the transformer.

Three-winding transformers are modeled as three two winding transformers connected together by a common bus, known as the star bus. Star buses are indicated in MUST by the bus number B$xxx; where xxx is

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

an artificial number assigned to the three-winding transformer. Report lines containing three-winding transformers are highlighted in yellow.

13.5. EXCLUDE Data File

13.5.1. Why Use an Exclude Data File?

The exclude data file allows adjustment of monitored elements defined in the monitored element and contingency specification files. The exclude data file can be read in at any time while running MUST activities.

A user can read in the file by using the exclude Data File button, which brings in the file selector. In command line mode, a user can read the exclude data file by invoking function CONSTR/CHANGE.

If a user has restarted MUST with different options, data files, or a new load flow case, the user has to read the exclude data file again to exclude elements or reactivate excluded elements.

Also, a user can exclude/include selected contingencies on the fly with a MUST session within contingency analysis group functions. MUST can generate the new exclude data file based on the current selection of excluded monitored elements, contingencies, and monitored/contingencies combinations.

For more detailed explanation for Exclusion see Section 7.1, “Overview Of Exclusion”

13.5.2. Exclude Input Data Formats

The BRANCH record has the following format:

```
|LINE   | FROM BUS bsid TO BUS bsid [| CIRCUIT | CktId ]
|BRANCH|                             | CKT     |
```

The INTERFACE record has the following format:

```
INTERFACE |NAME   Label |
    |NUMBER Number|
```

The difference between the above format of the INTERFACE record and that of the monitored element definition file. The user must use one of the keywords (NAME or NUMBER) as there are two possible ways to identify interfaces.

The CONTINGENCY record has the following format:

```
CONTINGENCY |NUMBER i       |
      |(BRANCH RECORD)|
      |NAME Label     |
```

The contingency number can be obtained from the list of contingencies and is also reported by many MUST reports.

The RATING record has the following format:

```
|RATING r      [MW]|
```


All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

```
|RATINGS r r r [MW]|
```

The first record type assumes that all three ratings are equal.

13.5.3. Exclude File

```
EXCLUDE [INITIAL] VIOLATIONS
```

The EXCLUDE record above allows the user to exclude all initial overloads. This record provides a simple solution when running MUST for the first time; a user can then create an explicit exclude data file at a later date.

The following format allows excluding initial violations just in several selected areas and zones. It is quite a common and simple solution to avoid reporting local problems in the external control areas.

```
EXCLUDE [INITIAL]VIOLATIONS IN |AREA  i  |
                      IN |AREAS i j|
                      IN |ZONE  i  |
                      IN |ZONES i j|
```

An exclude monitored element statement can have one of the following formats:

```
|EXCLUDE| |(BRANCH RECORD)   | |                                  |  (1)
|INCLUDE| |(INTERFACE RECORD)| |IN BASE CASE                      |  (2)
                          |IN ALL CONTINGENCIES             |  (3)
                          |IN [New Line](CONTINGENCY RECORD)|  (5)
```

where:

- Type (1) excludes a monitored element from the base case and all contingencies
- Type (2) excludes a monitored element only from the base case
- Type (3) excludes a monitored element from all contingencies, but it is monitored in the base case

The include command in combination with exclude command allows the user to exclude a monitored element under all contingencies and then to include checking that constraint back in for only a few contingencies.

The following format should be used to exclude flowgates:

```
EXCLUDE flowgate fgate_ID
```

Example:

```
exclude branch from bus 70001 to bus 70003 circuit 2 in base case
exclude branch from bus 70001 to bus 70003 cktid 2 in all contingencies
exclude interface number 3 in base case
exclude interface name XYZ_1 3 in all contingencies
exclude            branch from bus 70001 to bus 70003 circuit 2 in
  contingency branch from bus 70001 to bus 70002 circuit 3
```


All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

```
exclude branch from bus 10 to bus 20 in contingency number 527
```

The EXCLUDE BRANCH/INTERFACE in the contingency record specification can use one or two lines. In the case of two lines, it is important that the IN keyword is the last keyword on the first line with a monitored branch specification as shown above.

The EXCLUDE CONTINGENCY statement has the following format:

```
EXCLUDE (CONTINGENCY RECORD)
```

Example:

```
exclude contingency branch from bus 70001 to bus 70002 circuit 3
exclude contingency number 12
```

The CHANGE RATING statement has the following format:

```
CHANGE |(BRANCH RECORD)   | (RATING RECORD)
  |(INTERFACE RECORD)|
```

For branches, the CHANGE record changes A, B, and C ratings defined in the load flow case. For interfaces, it changes limits specified in the monitored file.

When new ratings are specified, these ratings will be assigned to the load flow case ratings (A, B, C). These ratings will be scaled according to the rating multiplier specified on the MUST Startup dialog.

Example:

```
CHANGE BRANCH FROM BUS 70001 TO BUS 70002 CIRCUIT 3 rating 120 MW
CHANGE BRANCH FROM BUS 70001 TO BUS 70002 CIRCUIT 3 ratings 100 110 120
```

Contingencies and branches can be excluded by circuit number.

Example:

```
exclude contingencies ckt 99
exclude branches circuit 99
```

Buses can be excluded from the monitored bus set. Buses can be excluded using the bus name or bus number.

```
exclude bus bsid
```

13.6. Summary of Advanced Linear Analysis/MUST File Extensions Not Available in PSS®E

13.6.1. General Input Files Extensions

- INCLUDE records allow nesting while reading input files. This feature can essentially simplify the burden of data maintenance.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

- Function EXCLUDE allows customizing specified monitored elements and contingencies

13.6.2. Subsystems Definition Extension

- Automatic subsystem definitions FOR EXPORT, FOR IMPORT, and SCALE GENERATION allow various new types of subsystem adjustments. Automatic specifications minimize subsystem definition dependencies on the current load flow conditions, which simplifies input data maintenance.
- SCALE LOAD for subsystem adjustments can be explicitly specified (e.g., "scale load in area ...").
- Maximum number of subsystems is 5000, compared to 100 in PSS®E.
- INCLUDE OFFLINE specification provides simple solution to include off-line generators in subsystems and enhances reporting/limit checking.
- Advanced Linear Analysis/MUST allows the automatic adding of subsystems by every bus or generator within a user-defined subset of buses (areas, zones, bus ranges).
- Advanced Linear Analysis/MUST allows defining new subsystems by combining previously defined subsystems with user defined participating factor.

13.6.3. Monitored Elements Files Extensions

- Advanced Linear Analysis/MUST allows modeling bidirectional ratings for interfaces, which provides efficient modeling of bidirectional relay protection devices.
- Advanced Linear Analysis/MUST has the EMS Flows Method, which allows using flows provided by a user (not obtained from the load flow case).
- Flowgates as an additional type of monitored parameters is not available within PSS®E.
- Advanced Linear Analysis/MUST allows to specify rating selection and multipliers on the area and zone basis.
- Advanced Linear Analysis/MUST allows selective selection of the distribution factors cutoff on area and zone basis.
- Optional exclude files allows to customize reporting violations. Primary objective of this function is to reflect existing operating guides (in the very simplified form).

13.6.4. Contingency Data File Extensions

- All contingency definition formats are consistently available with all Advanced Linear Analysis/MUST activities, allows for example, all type bus events, branch closing events within AC contingency analysis and load throwover file support within linear transfer analysis.
- Default dispatch subsystem definition provides convenient approach to model imbalanced contingencies. DISPATCH records can be used for automatic contingency specifications.
- Subsystems can be used to define dispatch records.
- Automatic unit/generator/bus contingency specifications.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

- Advanced Linear Analysis/MUST checks contingent violations for branches opened in the base case, but closed in the contingencies; PSS®E does not do this.
- Advanced Linear Analysis/MUST provides better modeling of dynamic bus events in the case of interaction between study transfer and the size of bus injections in contingencies.
- Advanced Linear Analysis/MUST allows generating a new contingency file for user-selected contingencies. Advanced Linear Analysis/MUST always generates individual contingency definitions even if contingencies are specified using automatic specifications.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

Chapter 14
Simulation Run Assembler PSAS User's Ready Reference

```
         |MWP  |
         |MWI  |
|ALTER | |MWY  |                                          [ |MW | ]
|CHANGE| |MVARQ| LOAD [n] BUS (bus id) [L0AD(id)] TO (R) [ |MVAR|]
         |MVARI|
         |MVARY|


|ALTER | |MWG  | |LOAD |                                     [|MW  | ]
|CHANGE| |MVARB| |SHUNT| [n] BUS (bus id) [SHUNT (id)] TO (R) [|MVAR| ]


|ALTER |
|CHANGE| BUS (bus id) CODE TO (I)


|ALTER | |R|                                                    [|CKT    |     ]
|CHANGE| |X| TO (R) [n] FROM [n] BUS (bus id) TO [n] BUS (bus id) [|CIRCUIT| (id)]
         |B|

                                  [|Y         |           |MVA   |             ]
APPLY FAULT [n] BUS (bus id) [n] [|ADMITTANCE| (R1) (R2) |MHO[S]| [BASEKV (R)]]


                                  [|Z        |                              ]
APPLY FAULT [n] BUS (bus id) [n] [|IMPEDANCE| (R1) (R2) OHM[S] [BASEKV(R)]]


                |LINE  |                                          [|CKT    |     ]
APPLY FAULT [n] |TIE   | [n] FROM [n] BUS (bsid) TO [n] BUS (bsid) [|CIRCUIT| (id)] [n]
                |BRANCH|
                                        [|Y        |           |MVA   |             ]
                                        [|ADMITTANCE|(R1) (R2) |MHO[S]| [BASEKV (R)]]


                |LINE  |                                          [|CKT    |     ]
APPLY FAULT [n] |TIE   | [n] FROM [n] BUS (bsid) TO [n] BUS (bsid)[|CIRCUIT| (id)] [n]
                |BRANCH|
                                        [|Z        |                              ]
                                        [|IMPEDANCE|(R1) (R2) OHM[S] [BASEKV (R)]]


     |L-G  |
SCMU |L-L  | FAULT [n] BUS (bsid) [n] [ZL-G (R1) (R2)] [n] [ZL-L (R3) (R4)]
     |L-L-G|
```


All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

```
                                          [n] [CONVERTDC] [n] [APPLYZCOREC]


     |L-G   |
     |L-L   |                                                          [|CKT    |     ]
SPCB |L-L-G | FAULT (R1) [n] FROM [n] BUS (bsid) TO [n] BUS (bsid)[n] [|CIRCUIT| (id)]
     |3PHASE|
                  [n] [ZL-G (R2) (R3)] [n] [ZL-L (R4) (R5)][n] [CONVERTDC] [n] [APPLYZCOREC]


                                                              [|CKT    |    ]
SPCB 2PHASE OPEN [n] FROM [n] BUS (bsid) TO [n] BUS (bsid) [n] [|CIRCUIT|(id)]

                                           [n] [CONVERTDC] [n] [APPLYZCOREC]


                                                              [|CKT   |     ]
SPCB 1PHASE OPEN [n] FROM [n] BUS (bsid) TO [n] BUS (bsid) [n] [|CIRCUIT|(id)]

                  [n] [PATH (R1) [ [n] [ZL-G (R2) (R3)] ][n] [CONVERTDC] [n] [APPLYZCOREC]


                                                            [|CKT   |     ]
SPCB BREAKER OPEN [n] AT [n] BUS (bsid) TO [n] BUS (bsid) [n] [|CIRCUIT|(id)]

                  [n] [PATH (R1) [ [n] [ZL-G (R2) (R3)]] [n] [CONVERTDC] [n] [APPLYZCOREC]


|BLOCK
|UNBLOCK| DCLINE (dc id)


CLEAR FAULT [n] [BUS (bus id)]


CLEAR BUS [FAULT] [n] [BUS (bus id)]

      |LINE  |
CLEAR |TIE   | FAULT [n]
      |BRANCH|

CONVERT [n] MW TO (R) (R) [MVAR TO (R) (R)]

|RECONNECT| |LINE  |                                                  [|CKT    |     ]
|CLOSE    | |TIE   | [n] FROM [n] BUS (bus id) TO [n] BUS (bus id)[|CIRCUIT| (id)]
|RECLOSE  | |BRANCH|

|DISCONNECT| |LINE  |                                                   [|CKT    |     ]
|TRIP      | |TIE   | [n] FROM [n] BUS (bus id) TO [n] BUS (busid) [|CIRCUIT| (id)]
|OPEN      | |BRANCH|

|RECONNECT|                                                                          [|CKT          ]
|CLOSE    | THREEWINDING [n] FROM [n] BUS (bsid) TO [n] BUS (bsid) TO [n] BUS (bsid) [|CIRCUIT| (id)]
|RECLOSE  |

|DISCONNECT|                                                                         [|CKT          ]
|TRIP      | THREEWINDING [n] FROM [n] BUS (bsid) TO [n] BUS (bsid)TO [n] BUS (bsid) [|CIRCUIT| (id)]
|OPEN      |

|DISCONNECT|                                                                              [|CKT          ]
```


All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

```
|TRIP      | THREEWINDING [n] AT [n] BUS (bsid) TO [n] BUS (bsid)TO [n] BUS (bsid) [|CIRCUIT| (id)]
|OPEN      |


DISCONNECT BUS (bus id) [n]


     |UNIT     |
     |GENERATOR|
DROP |MACHINE  | (id) [n] BUS (bus id)
     |LOAD     |
     |SHUNT    |


          |UNIT     |
          |GENERATOR|
RECONNECT |MACHINE  | (id) [n] BUS (bus id)
          |LOAD     |
          |SHUNT    |


DROP PLANT [n] BUS (bus id)


RECONNECT PLANT [n] BUS (bus id)

                                          [NOW                              ]
HOLD [n] IN (filename-1) AND (filename-2) [SIZE[S] (I1) (I2) (I3)(I4) (I5)]

                     |ON |
CONVERGENCE MONITOR |OFF|


|INITIALIZE| OUTPUT |(filename)| [SNAPSHOT |(filename)|]
|START     |        |NONE      | [         |NONE      |]


|INITIALIZE| EXTENDED [n] OUTPUT |(filename)| [n]
|START     |                     |NONE      |



NEXT [CHANNEL[S] (I)] [VAR[S] (I)] [ICON[S] (I)]


      |FLOWP  |                                        [|CKT    |    ]
PLACE |FLOWPQ | [n] BUS (bus id) TO [n] BUS (bus id) [|CIRCUIT|(id)]
      |FLOWMVA|
      |RELAY2 |
                                        IN CHANNEL[S] [WITH IDENTIFIER[S] (ident) [AND (ident)]]


      |3WNDFLOWP  |                                                          [|CKT    |     ]
PLACE |3WNDFLOWPQ | [n] BUS (bus id) TO [n] BUS (bus id) TO [n]BUS (bus id) [|CIRCUIT| (id)]
      |3WNDFLOWMVA|
      |3WNDRELAY3 |
                                        IN CHANNEL[S] [WITH IDENTIFIER[S] (ident) [AND (ident)]]


PLACE quantity [n] BUS (bus id) [MACHINE (id)] IN CHANNEL[S] [WITH IDENTIFIER[S] (ident) [AND (ident)]]
```


All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

```
      where "quantity" is one of the following mnemonics:
          ANGLE  PELEC   QELEC   ETERM    ECOMP     EFD        PMECH      VREF
          SPEED  XADIFD  VOTHSG  VUEL     VOEL      MACHITERM  MACHAPPIMP


      |PLOAD|
PLACE |QLOAD| [n] BUS (bus id) [LOAD (id)]IN CHANNEL [WITH IDENTIFIER (ident)]


      |BSFREQ  |
PLACE |VOLTAGE | [n] BUS (bus id) IN CHANNEL[S] [WITH IDENTIFIER[S] (ident) [AND (ident)]]
      |VOLT&ANG|


PLACE quantity [n] BUSES (I1) THRU (I2) IN CHANNEL[S]

      where "quantity" is one of the following mnemonics:
          ANGLE  PELEC   QELEC   ETERM    ECOMP     EFD        PMECH      VREF
          SPEED  XADIFD  VOTHSG  VUEL     VOEL      MACHITERM  MACHAPPIMP
          PLOAD  QLOAD   BSFREQ  VOLTAGE  VOLT&ANG


      |VAR[S]  |
PLACE |STATE[S]| (I1) [THRU (I2)] IN CHANNEL[S]


RECOVER [n] FROM (snapshot-filename) AND (saved-case-filename) [NOFACT] [NOTYSL] [NORETURN]


        |TO |     |CYCLE[S] |
RUN [n] |FOR| (R) |SECOND[S]| [PRINT (I)] [PLOT (I)] [CRTPLT (I)]


                      |POWER   |
                      |CURRENT |
SET [n] DCLINE (dc id) |SETPOINT| TO (R)
                      |SCHEDULE|
                      |VOLTAGE |


        |VAR
SET [n] |CON| (I) TO (R)


                    |(C)|
SET [n] ICON (I) TO |(I)|


        |VAR[S]|
SET [n] |CON[S]| (I1) THRU (In) TO (R1) ... (Rn)


                                  |(C1) ... (Cn)|
SET [n] ICON[S] (I1) THRU (In) TO |(I1) ... (In)|


                        [|CYCLE[S] |]
SET [n] STEP TO (R) (n) [|SECOND[S]|] [n]
```


All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

```
SHED LOAD [n] BUS (bus id)


|PSS     |
|PASS    |
|PASSTHRU|

FIN

ABORT

CHECK

WATCH |ON |
      |OFF|

|USE |
|COPY| (response-file-filename) [arg1...[arg9]]
|IDEV|

EXECUTE (iplan-program-filename)

HELP [(command)]

END
```

14.1. NOTES:

1. [n] => Optional comments
2. | | => "or" - pick one from list
3. [ ] => optional argument
4. (I) => INTEGER value to be entered
5. (R) => REAL value to be entered
6. (C) => quoted CHARACTER value to be entered (1 or 2 characters)
7. Words in CAPITALS must be entered exactly as shown.
8. Commas and "=" can be used in lieu of spaces for clarity.
9. Default PSAS output file is PSASnnn.IDV.
10. If "CIRCUIT (ID)" is not specified, default is circuit "1". If "LOAD (id)" is not specified, default is load "1".
11. BASEKV optional with PU. BASEKV required with OHMS or MHOS unless BASEKV is stored with working case.
12. BUS-ID is sensitive to the name/number input options switch of PSS®E (names must be enclosed in quotes and include the voltage field).

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

13. A $ is used to continue a PSAS command on the following line.

14. Section 16.15.2 of the *PSS® E Program Operation Manual* contains detailed instructions on the use of each PSAS command.

14.2. PSAS Command Help

Entering the command "HELP" while executing PSAS will cause the list of PSAS commands to be displayed on the user terminal. "HELP, command" will cause the format for that command to be displayed.

14.3. User-Entered PSS®E Commands

To enter a series of PSS®E commands into the output file, type "PSS". PSAS responds with the "PASSTHRU:" prompt, indicting pass-thru mode. Each line entered is passed to the output file as ENTERED. To terminate the PSS®E pass-thru mode, type "FIN", the "PSAS:" prompt is then issued. This mode of input is accepted both from the terminal and from input files.

14.4. PSAS Input Files

Commands may be taken from a file as well as from the terminal. If a file is to be used for input, the commands are entered in the file exactly as they would be from the terminal. When PSAS has processed all input file commands (the "END" command has been reached), PSAS exits to the PSS®E dynamics activity selector. If any errors are encountered while processing the input file, an error message is sent to the terminal and the input line is ignored. Execution of the generated response file is not attempted if any errors are detected.

14.5. To Execute PSAS From PSSDS4

Type "PSAS" or "PSAS,CHECK" to the prompt "ACTIVITY?".

PSAS requests input and output filenames. To enter commands interactively, type a carriage return to the input file request. PSAS prompts with "PSAS:" when ready for a new command. If the optional suffix "CHECK" is included, PSAS does not attempt to execute the generated response file.

14.6. Sample PSAS Command File

```
RECOVER data FROM SNU1 AND SME2

PLACE PMECH at BUS 100 IN CHANNEL

START, OUTPUT=OUT1

RUN pre-fault conditions TO 0 SECONDS

APPLY FAULT at BUS 201 z=.05,0 OHMS

RUN with fault FOR 3 CYCLES, PLOT=1

CLEAR FAULT

TRIP LINE FROM BUS 200 TO BUS 201
```


All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

```
RUN post-fault conditions TO.5 SECONDS

RECLOSE LINE FROM BUS 201 TO BUS 200

RUN TO 5 SECONDS

HOLD final conditions IN STEMP AND LTEMP

END
```

14.7. NOTES:

1. Optional text is shown in lower case.
2. Commas and equal signs are used only to clarify the dialog. They are not required.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

Chapter 15
Engineering Basic PSEB User's Ready Reference

```
ABORT


         |MW   |
         |MWP  |
         |MWI  |
|ALTER | |MWY  |                                          [ |MW | ]
|CHANGE| |MVAR | LOAD [n] BUS (bus id) [LOAD (id)] TO (R) [ |MVAR|]
         |MVARQ|
         |MVARI|
         |MVARY|


         |MW   |
|ALTER | |MWG  |                                            [|MW  |]
|CHANGE| |MVAR | SHUNT [n] BUS (bus id) [SHUNT (id)] TO (R) [|MVAR|]
         |MVARB|


|ALTER |
|CHANGE| BUS (bus id) CODE TO (I)


|ALTER | |R|                                                    [|CKT    |     ]
|CHANGE| |X| TO (R) [n] FROM [n] BUS (bus id) TO [n] BUS (bus id)[|CIRCUIT| (id)]
         |B|


|BLOCK  |
|UNBLOCK| DCLINE (dc id)


CHECK


|RECONNECT| |LINE  |                                                [|CKT    |     ]
|CLOSE    | |TIE   | [n] FROM [n] BUS (bus id) TO [n] BUS (bus id)[|CIRCUIT| (id)]
|RECLOSE  | |BRANCH|


|RECONNECT|                                                                          [|CKT          ]
|CLOSE    | THREEWINDING [n] FROM [n] BUS (bsid) TO [n] BUS (bsid)TO [n] BUS (bsid) [|CIRCUIT| (id)]
|RECLOSE  |


     |UNIT     |
DROP |GENERATOR| (id) [n] BUS (bus id)
     |MACHINE  |
     |LOAD     |
     |SHUNT    |
```


All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

```
          |UNIT     |
RECONNECT |GENERATOR| (id) [n] BUS (bus id)
          |MACHINE  |
          |LOAD     |
          |SHUNT    |


DROP PLANT [n] BUS (bus id)


RECONNECT PLANT [n] BUS (bus id)


END


FIN


HELP [(command)]


HOLD [n] IN (saved-case-filename) [NOW]


|USE |
|COPY| (response-file-filename) [arg1...[arg9]]
|IDEV|


EXECUTE (iplan-program-filename)


|DISCONNECT| |LINE  |                                                  [|CKT    |     ]
|TRIP      | |TIE   | [n] FROM [n] BUS (bus id) TO [n] BUS (busid) [|CIRCUIT| (id)]
|OPEN      | |BRANCH|


|DISCONNECT|                                                                          [|CKT          ]
|TRIP      | THREEWINDING [n] FROM [n] BUS (bsid) TO [n] BUS (bsid)TO [n] BUS (bsid) [|CIRCUIT| (id)]
|OPEN      |


|DISCONNECT|                                                                        [|CKT          ]
|TRIP      | THREEWINDING [n] AT [n] BUS (bsid) TO [n] BUS (bsid)TO [n] BUS (bsid) [|CIRCUIT| (id)]
|OPEN      |


DISCONNECT BUS (bus id) [n]


                   |BUS  |
NET GENERATION [n] |BUSES| (bus id) [(bus id)...[(bus id)]]


NET GENERATION [n] FOR BUSES (I) THRU (I)
```


All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

```
|PSS     |
|PASS    |
|PASSTHRU|


RECOVER [n] FROM (saved-case-filename)


                   |SETPOINT|
SET DCLINE (dc id) |SCHEDULE| TO (R)


SET LOADFLOW TITLE LINE |1| TO '(title)'
                        |2|


SET SOLUTION OPTION[S] TO DEFAULT


SET SOLUTION OPTION[S] TO [|DISCRETE-TAP|],[|AREA-LOCKED|],[FLAT-START],[|DC-LOCKED|],
                          [|DIRECT-TAP  |] [|AREA-INTCHG|]              [|DC-ADJUST|]
                          [|TAP-LOCKED  |] [|TIES&LOADS |]
                                                                [|SHUNT-LOCKED|],[|PHASE-SHIFT |]
                                                                [|SHUNT-ADJUST|] [|PSHFT-LOCKED|]
                                                                [|SHN-ADJ-CONT|]


SHED LOAD [n] BUS (bus id)


                |FNSL|
                |FDNS| [                     |AFTER (I) [ITERATION[S]]|]
SOLVE [n] USING |NSOL| [WITH VAR LIMITS [n] |IMMEDIATE[LY]           |]
                |SOLV| [                     |IGNORED                |]
                |MSLV|
                |INLF|


WATCH [OFF]
```

15.1. NOTES:

1. [n] => Optional comments
2. | | => "or" - pick one from list
3. [ ] => optional argument
4. (I) => INTEGER value to be entered
5. (R) => REAL value to be entered
6. Words in CAPITALS must be entered exactly as shown.
7. Commas and "=" can be used in lieu of spaces for clarity.
8. Default PSEB output file is PSEBnnn.IDV.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

9. If "CIRCUIT (id)" is not specified, default is circuit "1". If "LOAD (id)" is not specified, default is load "1".
10. BUS-ID is sensitive to the name/number input options switch of ®E (names must be enclosed in quotes and include the base voltage field).
11. A $ is used to continue a PSEB command on the following line.
12. (title) => a quoted string specifying the 60 character title line.
13. Section 16.4.2 of the ®*E Program Operation Manual* contains detailed instructions on the use of each PSEB command.

15.2. PSEB Command Help

Entering the command "HELP" while executing PSEB will cause the list of PSEB commands to be displayed on the user terminal. "HELP, command" will cause the format for that command to be displayed.

15.3. User-Entered PSS®E Commands

To enter a series of PSS®E commands into the output file, type "PSS". PSEB responds with the "PASSTHRU:" prompt, indicting pass-thru mode. Each line entered is passed to the output file as ENTERED. To terminate the PSS®E pass-thru mode, type "FIN", the "PSEB:" prompt is then issued. This mode of input is accepted both from the terminal and from input files.

15.4. PSEB Input Files

Commands may be taken from a file as well as from the terminal. If a file is to be used for input, the commands are entered in the file exactly as they would be from the terminal. When PSEB has processed all input file commands (the "END" command has been reached), PSEB exits to the PSS®E power flow activity selector. If any errors are encountered while processing the input file, an error message is sent to the terminal and the input line is ignored. Execution of the generated response file is not attempted if any errors are detected.

15.5. To Execute PSEB From PSSLF4

Type "PSEB" or "PSEB,CHECK" to the prompt "ACTIVITY?".

PSEB requests input and output filenames. To enter commands interactively, type a carriage return to the input file request. PSEB prompts with "PSEB:" when ready for a new command. If the optional suffix "CHECK" is included, PSEB does not attempt to execute the generated responses.

15.6. Sample PSEB Command File

```
RECOVER network FROM SAVNW.SAV

SET SOLUTION OPTIONS TO DIRECT-TAP, $

   AREA-INT, SHUNT-LOCKED

TRIP BRANCH FROM BUS 153 TO BUS 154 CKT 2

SOLVE USING FDNS WITH VAR LIMITS applied $
```


All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

```
   AFTER 2 ITERATIONS

HOLD network IN SAVNEW.SAV

END
```

15.7. NOTES:

1. Optional text is shown in lower case.
2. Commas and equal signs are used only to clarify the dialog. They are not required.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

Chapter 16
Graphic Report Generator GRPG User's Ready Reference

```
ABORT

APPEND LINE [FROM x,y] TO x,y

APPEND LINE FOR x,y

APPEND VECTOR [FROM x,y] FOR length [c] ANGLE angle [c]

APPEND BOX FROM x,y TO x,y [c] [RADIUS rad]

APPEND BOX CENTERED AT x,y WITH SIDES length-x BY length-y [c] [RADIUS
rad]

APPEND CIRCLE [c] AT x,y [c] RADIUS rad

APPEND ARC [c] AT x,y [c] RADIUS rad [c] FROM angle [c] TO angle
[c]

       |CLOCKWISE       |
APPEND |CW              | ELLIPSE FROM x,y TO x,y
       |COUNTERCLOCKWISE|
       |CCW             |

APPEND POLYGON[S] FROM filename [c] [OFFSET x,y] [c] [SCALE scale]

CLOSE POLYGON

COMMENT string

DECLARE |REAL   | &label [&label2...&label10]
        |STRING|

DEFINE MACRO macroname

DRAW LINE [FROM x,y] TO x,y

DRAW LINE FOR x,y

DRAW LOGO AT x,y WITH SIZE size [c] [ANGLE angle] [c]

DRAW VECTOR [FROM x,y] FOR length [c] ANGLE angle [c]
```


All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

```
DRAW BOX FROM x,y TO x,y [c] [RADIUS rad]

DRAW BOX CENTERED AT x,y WITH SIDES length-x BY length-y [c] [RADIUS
rad]

DRAW CIRCLE [c] AT x,y [c] RADIUS rad

DRAW ARC [c] AT x,y [c] RADIUS rad [c] FROM angle [c] TO angle [c]

     |CLOCKWISE       |
DRAW |CW              | ELLIPSE FROM x,y TO x,y
     |COUNTERCLOCKWISE|
     |CCW             |

DRAW POLYGON[S] FROM filename [c] [OFFSET x,y] [c] [SCALE scale]

DRAW GRID FROM x,y TO x,y [c] DELTA x,y

ELSE

       |&label|      |&label|
ELSEIF |string| oper |string|
       |real  |      |real  |

   where "oper" is "EQ", "=", "NE", "<>", "GT", ">",  "GE",
">=", "LT", "<", "LE", or "<=".

END [c]

ENDIF

ENDMACRO

FLUSH ACCUMULATED POLYGON[S]

HELP [command]

   |&label|      |&label|
IF |string| oper |string|
   |real  |      |real  |

   where "oper" is "EQ", "=", "NE", "<>", "GT", ">", "GE", ">=",
"LT", "<", "LE", or "<=".

INCLUDE filename [c] [OFFSET x,y] [c] [SCALE scale]

INCLUDE [BINARY] ONE-LINE [c] FROM filename

INVOKE MACRO macroname USING p1 [p2...p9]
```


All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

```
             |LEFT    |
JUSTIFY TEXT |RIGHT   |
             |CENTERED|

             |real  |
LET &label = |string|
             |&label|

LET &label = |real  |  oper |real  |
             |&label|       |&label|

   where "oper" is "PLUS", "+", "MINUS", "-", "TIMES", "*", "OVER",
or "/".

LET &label = THE CABS OF |real  | AND |real  |
                         |&label|     |&label|

LET &label2 = THE CASE TITLE

LET &label = THE NAME FOR |AREA| n
                          |ZONE|

LET &label2 = THE INTERCHANGE FROM AREA n TO AREA n

LET &label2 = THE INTERCHANGE FROM ZONE n TO ZONE n

LET &label2 = THE NET INTERCHANGE FROM |AREA| n
                                       |ZONE|

                  |GENERATION|
LET &label2 = THE |LOAD      | FOR |AREA| n
                  |LOSSES    |     |ZONE|

LET &label2 = THE GENERATION AT BUS busid

LET &label2 = THE LOAD AT BUS busid [LOADID lid]

LET &label = THE ANGLE AT BUS busid

                         |GENERATION|
LET &label2 = THE SYSTEM |LOAD      |
                         |LOSSES    |

LET &label = THE [EXTENDED] NAME FOR BUS busid

LET &label = THE BASE VOLTAGE FOR BUS busid

LET &label = THE VOLTAGE AT BUS busid [ IN |PU| ]
                                      [    |KV| ]

LET &label = THE STATUS FOR |BRANCH| FROM BUS busid TO BUS busid
```


All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

```
                              |LINE  |                       [CIRCUIT
cid]

LET &label2 = THE FLOW FOR |BRANCH| FROM BUS busid TO BUS busid
                           |LINE  |                       [CIRCUIT
cid]

LET &label2 = THE |INVERTER | FLOW FOR 2-TERMINAL DC LINE n
                  |RECTIFIER|

LET &label2 = THE |ACTUAL | |FIXED   | SHUNT AT BUS busid
                  |NOMINAL| |SWITCHED|

LET &label2 = THE CONVERTER FLOW AT BUS busid FOR N-TERMINAL
DC LINE n

LET &label = THE MW TRANSACTION FROM AREA n TO
AREA n [IDENTIFIER id]

LET &label = THE CONTROL MODE FOR |2-TERMINAL| DC LINE n
                                  |N-TERMINAL|

MOVE LINE TO x,y

MOVE LINE FOR x,y

MOVE VECTOR FOR length [c] ANGLE angle [c]

     |SCATTER PLOT  |
PLOT |STRAIGHT LINES| FROM filename
     |SPLINE CURVES |

ROTATE PLOT angle [c] AROUND x,y

SET |X| COORDINATE |PAPER   | LIMITS TO min AND max
    |Y|            |DATA    |
                   |PLOTTING|

SET UNITS TO |INCHES     |
             |CENTIMETERS|

SET ANGLE TO |DEGREES|
             |RADIANS|

         |TYPE |
SET LINE |WIDTH| TO integer
         |COLOR|

SET FONT TYPE TO |STANDARD |
                 |LOWERCASE|
                 |integer  |
```


All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

```
SET PLOT ORIENTATION TO |PORTRAIT |
                        |LANDSCAPE|

SET PLOT SYMBOL TO integer

SET PRINT FORMAT TO integer,integer

SET |TEXT  | [HEIGHT TO size] [c] [ANGLE TO angle] [c]
    |SYMBOL|

SET SHADING PATTERN TO integer

SET SHADING OUTLINE |VISIBLE  |
                    |INVISIBLE|

SHADE BOX FROM x,y TO x,y [c] [RADIUS rad]

SHADE BOX CENTERED AT x,y WITH SIDES length-x BY length-y [c] [RADIUS
rad]

SHADE CIRCLE [c] AT x,y [c] RADIUS rad

SHADE ARC [c] AT x,y [c] RADIUS rad [c] FROM angle [c] TO angle
[c]

      |CLOCKWISE       |
SHADE |CW              | ELLIPSE FROM x,y TO x,y
      |COUNTERCLOCKWISE|
      |CCW             |

SHADE POLYGON[S] FROM filename [c] [OFFSET x,y] [c] [SCALE scale]

SHADE ACCUMULATED POLYGON[S]

START NEW PLOT

WRITE item1 [item2...item10] [AT x,y]

Each "item" may be a string, a reserved symbolic name (%name%),
or an ampersand label (&label) which was previously declared
and assigned a value.  Up to ten items may be output with a single
WRITE command.
```

16.1. NOTES:

1. [c] => Optional comments
2. | | => "or" - pick one from list
3. [ ] => optional argument

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

4. Lower case words are variable fields. For more information on a specific variable, refer to Section C.4.1 of the *PSS®E Program Operation Manual*.
5. Words in CAPITALS must be entered exactly as shown.
6. Commas and "=" can be used in lieu of spaces for clarity.
7. If "CIRCUIT cid" is not specified, default is circuit "1". If "LOADID lid" is not specified, default is load "1".
8. "busid" may be specified as either the extended bus name enclosed in single quotes or the bus number.
9. A $ is used to continue a GRPG command on the following line.
10. &label2 is used to show which statements will return 2 values.
11. If "IDENTIFIER id" is not specified for MW TRANSACTION, default is 1.

16.2. GRPG Command Help

Entering the command "HELP" while executing GRPG causes the list of GRPG commands to be displayed on the user terminal. "HELP, command" causes the format for the specified command to be displayed.

16.3. GRPG Input Files

Commands may be taken from a file as well as from the terminal. If a file is to be used for input, the commands are entered in the file exactly as they would be from the terminal. When GRPG has processed all input file commands (the "END" command has been reached), the program prompts the user for a valid plotting device on which the resulting picture will be generated. If any errors are encountered while processing the input file, an error message is sent to the terminal and the input line is ignored. The resulting drawing, without the erroneous commands, may be displayed.

16.4. To Execute GRPG From PSSLF4

Type "GRPG" to the prompt "ACTIVITY?".

GRPG requests input and output filenames. To enter commands interactively, type a carriage return to the input file request. GRPG prompts with "GRPG:" when ready for a new command.

16.5. Sample GRPG Command File

```
DECLARE REAL &LOADP, &LOADQ, &GENP, &GENQ

DRAW LINE FROM 0,2.5 TO 0,4.5

DRAW LINE TO 1.5,4.5

DRAW LINE TO 1.5,6

DRAW LINE TO 7,6

DRAW LINE TO 7,2.5
```


All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

```
DRAW LINE TO 0,2.5

SET TEXT HEIGHT TO 0.25

SET TEXT ANGLE TO 90.

JUSTIFY TEXT CENTERED

WRITE 'AREA 1' AT 2.5,4.25

SET TEXT HEIGHT TO 0.1

JUSTIFY TEXT LEFT

LET &LOADP = THE LOAD FOR AREA 1

LET &GENP = THE GENERATION FOR AREA 1

WRITE 'LOAD =',&LOADP,'MW<CR>', AT 4.25,3.25

WRITE ' ',&LOADQ,'MVAR<CR><CR>'

WRITE 'GEN =',&GENP,'MW<CR>'

WRITE ' ',&GENQ,'MVAR'

END
```


All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

Chapter 17
Locations Data File

17.1. Overview

Locations Data File (*.loc) allows the network element locations in the diagram to be specified from the same Cartesian or GIS coordinates across repeated analyses or different working case subsystem configurations.

File data is used to position any network element drawn or *Grown* for which an entry exists in the file. Those network elements in the working case that are not defined in the locations file are assigned default locations in the diagram.

The Bus Location file *does not* require an entry for every component in the case. If a position record is not found in the file when positioning a component on the diagram, default component positioning is used. If a component is specified that does not exist in the case, that component's record will be ignored.

17.2. Record Block Format

The location data file is specified in terms of record blocks/groups. Each file could contain one or more of these blocks. Each record block has following format.

End of record block is detected by any of the block identifer data.

- Block Identifier
- Block Locations Data Format
- (any number of) Block Locations Data

17.3. Block Identifier

The first record in the block specifies what kinds of network items are being given locations.

The file has following record blocks.

[BUSES | BRANCHES | NODES]

These record blocks can appear in any order in the file.

This can be left out of the first block as the default assumption is BUSES.

17.4. Block Locations Data Format

The optional second record in the block describes the format of all locations data in the block.

[CARTESIAN [SCALE] | GEOPHYSICAL [LATLON]]

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

If this record is not specified, GEOPHYSICAL is assumed.

The locations data can be specified in two different formats.

- CARTESIAN with additional option SCALE
- GEOPHYSICAL with additional option LATLON

In the CARTESIAN format the locations are provided as X/Y coordinates on the diagram.

If CARTESIAN is specified, a SCALE can be specified to give more detail on how the CARTESIAN units translate to physical units. By default the positions will translate into logical inches on the diagram.

In the GEOPHYSICAL format the locations are specified in GIS coordinates on the diagram.

If GEOPHYSICAL is specified, the optional keyword LATLON may be added to specify that LATITUDE will be specified before LONGITUDE for each position record.

The GIS coordinates can be specified in the following format.

- Degrees - Degrees are specified as a set of 1 to 3 real numbers (degrees, minutes, seconds) followed by a direction (E, W, N, S) (the direction can be omitted if all three numbers are specified). Positive values are interpreted as E or N, negative values as W or S. The degree parts can be separated by spaces, commas, apostrophes, or by the specific unit markers for degree, minutes, or seconds (in which case they must be used in order).
- Decimal Degrees - decimal fractions of a degree.

For example, all the following formats represent the same value.

79°30'36W

-79 -30 -36

79.51W

-79.51,,,

17.5. Locations Data - BUSES

The format of a bus location record is as follows:

```
IBUS, XLOC, YLOC, ROTATION, LENGTH
```

where:

IBUS	Bus number. No default allowed.
XLOC	Bus X location on the diagram. No default allowed.
YLOC	Bus Y location on the diagram.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

	No default allowed.
ROTATION	Bus rotation in degrees. 0 degress by default.
LENGTH	Length of the busbar, in inches. A point bus will be used if Length is zero. 0 inches by default.

17.6. Locations Data - BRANCHES

The format of a branch location record is as follows:

```
IBUS, JBUS, CKT, XLOC_IBUS, YLOC_IBUS, [XLOC_KP1, YLOC_KP1, ..., XLOC_KPn,
YLOC_KPn], XLOC_JBUS, YLOC_JBUS
```

Optional, n number of knee points and their locations can be specified.

where:

IBUS	Branch from bus number or extended bus name enclosed in single quotes. No default allowed.
JBUS	Branch to bus number or extended bus name enclosed in single quotes. No default allowed.
CKT	Branch circuit identifier. CKT = '1' by default
XLOC_IBUS	IBUS X location on the diagram. No default allowed.
YLOC_IBUS	IBUS Y location on the diagram. No default allowed.
XLOC_KP1	Optional, the first knee point X location on the diagram. When specified, no default allowed.
YLOC_KP1	Optional, the first knee point Y location on the diagram. When specified, no default allowed.
XLOC_KPn	Optional, the nth knee point X location on the diagram. When specified, no default allowed.
YLOC_KPn	Optional, the nth knee point Y location on the diagram. When specified, no default allowed.
XLOC_JBUS	JBUS X location on the diagram. No default allowed.
YLOC_JBUS	YBUS Y location on the diagram.

All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International

	No default allowed.

17.7. Locations Data - NODES

The format of a bus location record is as follows:

```
ISUB, INODE, XLOC, YLOC, ROTATION, LENGTH
```

The substation GIS coordinates are specified in the power flow data file. The node locations here specify station node offsets from the station location.

where:

ISUB	Substation number. No default allowed.
INODE	Node number in substation ISUB. No default allowed.
XLOC	Node X offset on the diagram. No default allowed.
YLOC	Node X offset on the diagram. No default allowed.
ROTATION	Bus rotation in degrees. 0 degress by default.
LENGTH	Length of the busbar, in inches. A point bus will be used if Length is zero. 0 inches by default.

17.8. Location Data File - Example

```
BUSES
GEOPHYSICAL
101  73.971254W  42.533109N  90  1.20
151  73.967661W  42.528475N  90  4.00
102  73.963169W  42.533109N  90  1.20
BRANCHES
GEOPHYSICAL
101 151 T1 73.970356W 42.533026N 73.970356W 42.528558N
102 151 T2 73.962271W 42.533026N 73.962271W 42.528558N
201 211 T6 73.946999W 42.527896N 73.946999W 42.533026N
154 203 1  73.974847W 42.499340N 73.959576W 42.506625N 73.953288W 42.506625N
```


All material contained in this documentation is proprietary to Siemens Industry Inc., Siemens Power Technologies International