48 Spencer Street
Lebanon, NH 03766, USA
Tel: 603·448·1562
Fax: 603·448·3216
Email: geokon@geokon.com
http://www.geokon.com

Instruction Manual

Model GK-604D

Inclinometer Readout Application

No part of this instruction manual may be reproduced, by any means, without the written consent of Geokon, Inc.

The information contained herein is believed to be accurate and reliable. However, Geokon, Inc. assumes no responsibility for errors, omissions, or misinterpretation. The information herein is subject to change without notification.

Copyright © 2016-2018 by Geokon, Inc.
(Doc Rev V, 11/13/18)

Warranty Statement

Geokon, Inc. warrants its products to be free of defects in materials and workmanship, under normal use and service for a period of 13 months from date of purchase. If the unit should malfunction, it must be returned to the factory for evaluation, freight prepaid. Upon examination by Geokon, if the unit is found to be defective, it will be repaired or replaced at no charge. However, the WARRANTY is VOID if the unit shows evidence of having been tampered with or shows evidence of being damaged as a result of excessive corrosion or current, heat, moisture or vibration, improper specification, misapplication, misuse or other operating conditions outside of Geokon's control. Components which wear or which are damaged by misuse are not warranted. This includes fuses and batteries.

Geokon manufactures scientific instruments whose misuse is potentially dangerous. The instruments are intended to be installed and used only by qualified personnel. There are no warranties except as stated herein. There are no other warranties, expressed or implied, including but not limited to the implied warranties of merchantability and of fitness for a particular purpose. Geokon, Inc. is not responsible for any damages or losses caused to other equipment, whether direct, indirect, incidental, special or consequential which the purchaser may experience as a result of the installation or use of the product. The buyer's sole remedy for any breach of this agreement by Geokon, Inc. or any breach of any warranty by Geokon, Inc. shall not exceed the purchase price paid by the purchaser to Geokon, Inc. for the unit or units, or equipment directly affected by such breach. Under no circumstances will Geokon reimburse the claimant for loss incurred in removing and/or reinstalling equipment.

Every precaution for accuracy has been taken in the preparation of manuals and/or software, however, Geokon, Inc. neither assumes responsibility for any omissions or errors that may appear nor assumes liability for any damages or losses that result from the use of the products in accordance with the information contained in the manual or software.

TABLE of CONTENTS

1. INTRODUCTION 1

1.1 INCLINOMETER PROBE 1
1.2 READOUT UNIT 2
1.2.1 GK-604D Inclinometer Readout Application 2
1.3 REMOTE MODULE 3
1.4 PULLEY ASSEMBLY 5

2. INSTALLATION AND OPERATION 6

2.1 BEFORE USING THE GK-604D INCLINOMETER READOUT 6
2.2 INITIAL QUICK START SEQUENCE 6
2.3 ESTABLISHING CONTACT WITH THE REMOTE MODULE 11
2.4 INSTALLING THE GK-604D IRA 16
2.4.1 Launching the GK-604D Installer 18
2.5 STARTING THE INCLINOMETER READOUT THE FIRST TIME 21

3. USER INTERFACE 25

3.1 OVERVIEW 25
3.2 PROJECT EXPLORER 25
3.2.1 Context Menu 26
3.3 APPLICATION MENU 27
3.3.1 Live Readings 27
3.3.2 Edit Settings 33
3.3.3 Terminal Window 33
3.3.4 About GK-604D 34
3.3.5 System Configuration 35
3.4 FILE MENU 44
3.4.1 Export Menu 44
3.4.2 Import Menu 46
3.4.3 View Data 50
3.4.4 Delete/Restore Menu 53
3.4.5 Exit 54

4. CONFIGURING PROJECT EXPLORER ELEMENTS 55

4.1 HOLE CONFIGURATION 55
4.2 PROBE CONFIGURATION 57
4.3 PROJECT CONFIGURATION 59

5. FILES, FOLDERS AND TRANSFERRING DATA 60

5.1 FILE TRANSFER 61
5.2 BACKING UP CONFIGURATIONS 61

6. MAINTENANCE 62

6.1 O-RING 62
6.2 WHEEL ASSEMBLIES 62
6.3 WATER ENTRY 63
6.4 ZERO SHIFT CHANGES 63
6.5 SELF CALIBRATION CHECK 63
6.6 DATA BACKUP AND TRANSFER 63

7. TROUBLESHOOTING 64

7.1 BLUETOOTH/CONNECTION 64
7.1.1 "Cannot Connect…the passcode is incorrect" 64
7.1.2 "Reconnect…Communications Error" 64
7.1.3 "Probe Error" 65
7.2 COMMON TROUBLESHOOTING SOLUTIONS 66

APPENDIX A. INCLINOMETER THEORY **67**

A.1 INCLINOMETER THEORY 67
A.2 CONDUCTING THE SURVEY 70
A.3 CHECKSUMS AND "FACE ERRORS" ON INCLINOMETER PROBES 71
A.3.1 Effect of "Face Error" on reading accuracy *71*
A.3.2 Measurement of "Face Error" *72*
A.3.3 Setting of the "Face Error" to zero *72*
A.3.4 Conclusion *73*

APPENDIX B. DATA FILE FORMAT **74**

B.1 HOLE DATA GKN FILE FORMAT 74

APPENDIX C. TEXT REPORTS **76**

C.1 RAW DATA TEXT REPORT 76
C.2 A-AXIS PROFILE DATA TEXT REPORT 78
C.3 B-AXIS PROFILE DATA TEXT REPORT 80
C.4 A-AXIS DEFLECTION DATA TEXT REPORT 82
C.5 B-AXIS DEFLECTION DATA TEXT REPORT 84

APPENDIX D. REMOTE MODULE COMMAND STRUCTURE **86**

APPENDIX E. DATA REDUCTION FORMULAS **88**

E.1 DEFLECTION CALCULATION 88
E.2 PROFILE CALCULATION 89
E.3 GTILT USERS 90
E.4 SITEMASTER USERS 90

APPENDIX F. TECHNICAL SPECIFICATIONS **91**

F.1 GK-604D DIGITAL SYSTEM SPECIFICATIONS 91
F1.1 Compass Sensor Specifications *91*
F.2 ANALOG PROBE SYSTEM SPECIFICATIONS 92
F.3 FIELD PC (FPC-2) SPECIFICATIONS 93

APPENDIX G. PORTABLE TILTMETER OPERATION **94**

G.1 SINGLE CHANNEL TILTMETER (MODEL 6101) 94
G.2 TILTMETER DATA FORMAT 98
G.3 DUAL CHANNEL DIGITAL TILTMETER (MODEL 6101D) 99
G.4 DUAL-AXIS TILTMETER DATA FORMAT 103

APPENDIX H. SPIRAL AND COMPASS PROBE OPERATION **104**

H.1 SPIRAL INDICATOR PROBE (6005-3) 104
H.2 INCLINOMETER/COMPASS PROBE (6100D-*) 107
H.2.1 Calibrate Compass *111*
H.3 SPIRAL INDICATOR DATA 112
H.4 COMPASS SURVEY DATA 112

APPENDIX I. COMMONLY ASKED INCLINOMETER PROBE QUESTIONS **113**

FIGURES

FIGURE 1 - 6100D DIGITAL PROBE 1
FIGURE 2 - 6000/6100 ANALOG PROBE 1
FIGURE 3 - FPC-2 RUNNING GK-604D IRA 2
FIGURE 4 - GK-604D REMOTE MODULE 3
FIGURE 5 - GK-604-4 INTERFACE 3
FIGURE 6 - GK-604-3 REEL SYSTEM (SHOWN WITH THE ARCHER UNIT AND CARRYING CASE) 4
FIGURE 7 - MODEL 6000-2 CONTROL CABLE 4
FIGURE 8 - PULLEY STYLE CABLE GRIP 5
FIGURE 9 - WORK SPACE NAME 7
FIGURE 10 - USER INTERFACE 7
FIGURE 11 - COMMUNICATIONS ERROR 8
FIGURE 12 - LIVE READINGS SCREEN 8
FIGURE 13 – NEW PROBE FOUND 9
FIGURE 14 - INITIAL PROBE SETTINGS 9
FIGURE 15 - NO PROBE ASSOCIATION WINDOW 9
FIGURE 16 - LIVE READINGS SCREEN 10
FIGURE 17 - STARTING BLUETOOTH MANAGER 11
FIGURE 18 - TURN ON BLUETOOTH 11
FIGURE 19 - ADD NEW DEVICE 12
FIGURE 20 - SELECT A BLUETOOTH DEVICE 12
FIGURE 21 - ENTER PASSCODE 13
FIGURE 22 - NEW OUTGOING PORT 13
FIGURE 23 - ADD A DEVICE 14
FIGURE 24 - COM PORT SELECTION 14
FIGURE 25 - SERIAL PORT CHECK BOX 15
FIGURE 26 - CONNECT BUTTON 15
FIGURE 27 - ACTIVESYNC WINDOW SHOWING ACTIVE CONNECTION 16
FIGURE 28 - WINDOWS MOBILE DEVICE CENTER 17
FIGURE 29 - WINDOWS EXPLORER WINDOW DISPLAYING HHD ROOT FOLDER 18
FIGURE 30 - HAND-HELD DEVICE ROOT FOLDER CONTENTS 18
FIGURE 31 - INSTALLATION FOLDER CONTENTS 19
FIGURE 32 - GK-604D INSTALLER AT ROOT OF HDD 19
FIGURE 33 - GK-604D INSTALL SCREEN 20
FIGURE 34 - GK-604D IRA ICON IN START->PROGRAM 20
FIGURE 35 - SELECT WORKSPACE NAME 21
FIGURE 36 - SELECT WORKSPACE FOLDER 22
FIGURE 37 - WORKSPACE EXISTS 22
FIGURE 38 - SELECT PROBE LIBRARY NAME 23
FIGURE 39 - SELECT PROBE LIBRARY FOLDER 23
FIGURE 40 - PROBE LIBRARY EXISTS 24
FIGURE 41 - EMPTY WORKSPACE AND PROBE LIBRARY 24
FIGURE 42 - USER INTERFACE 25
FIGURE 43 – CONTEXT MENU 26
FIGURE 44 - APPLICATION MENU 27
FIGURE 45 - REMOTE MODULE CONNECTION PROBLEM 27
FIGURE 46 - TEMPORARY FILE DATA PROMPT 28
FIGURE 47 - VIEW SAVED DATA 28
FIGURE 48 - LOAD PREVIOUS DATA 29
FIGURE 49 - LIVE READINGS SCREEN 29
FIGURE 50 - UNSAVED DATA PROMPT 30
FIGURE 51 - AUTO INCREMENT SAVE 30
FIGURE 52 - SAVE FILE SCREEN 31
FIGURE 53- MENU OPTION (LIVE READINGS SCREEN) 31
FIGURE 54 - VIEWING INCLINOMETER DATA 32
FIGURE 55 - VIEWING COMPASS DATA 32
FIGURE 56 - VIEW SAVED DATA 32

FIGURE 57 - LOAD PREVIOUS DATA 33
FIGURE 58 - REMOTE MODULE CONNECTION PROBLEM 33
FIGURE 59 - TERMINAL WINDOW 34
FIGURE 60 - ABOUT GK-604D IRA 34
FIGURE 61 - READY FOR CONNECTION? 34
FIGURE 62 - REMOTE MODULE/PROBE STATUS 35
FIGURE 63 - SYSTEM CONFIGURATION 35
FIGURE 64 - LIVE READING, NO STABILITY INDICATION 36
FIGURE 65 - STABLE INDICATION 36
FIGURE 66 - UNSTABLE INDICATION 37
FIGURE 67 – AUTO RECORD ENABLED 38
FIGURE 68 - AUTO RECORD ACTIVE 38
FIGURE 69 - AUTO RECORD PAUSED, DATASET TWO SELECTED 40
FIGURE 70 - UNSAVED DATA PROMPT 40
FIGURE 71 - AUTO INCREMENT SAVE 41
FIGURE 72 - SAVE FILE SCREEN 41
FIGURE 73 - READINGS UPDATED TO REFLECT NUMBER TAKEN 42
FIGURE 74 - SURVEY FILLED WITH NAN(S) 42
FIGURE 75 - MISSING ROWS FILLED WITH BLANK CHARACTERS 43
FIGURE 76 - MALE DB-9 HOUSING (FEMALE PINS) 43
FIGURE 77 - FILE MENU 44
FIGURE 78 - EXPORT MENU 44
FIGURE 79 - EXPORT DATA WINDOW 45
FIGURE 80 - SAVE DATA FILE 45
FIGURE 81 - SELECT EXPORT PATH 46
FIGURE 82 - PROBE SELECTION WINDOW 46
FIGURE 83 - IMPORT MENU 46
FIGURE 84 - SELECT HOLE EXPORT FILE 47
FIGURE 85 - SELECT PROJECT EXPORT FILE 48
FIGURE 86 - SELECT PROBE EXPORT FILE 48
FIGURE 87 - PROBE LIBRARY EXPORT FILE 49
FIGURE 88 - PROBE LIBRARY SWITCH 49
FIGURE 89 - SELECT VIEW OPTIONS WINDOW 50
FIGURE 90 - VIEW OPTION LIST 50
FIGURE 91 - MENU OPTIONS FOR REPORTS 50
FIGURE 92 - RAW DATA REPORT 50
FIGURE 93 - AXIS PROFILE REPORT 51
FIGURE 94 - AXIS DEFLECTION REPORT 52
FIGURE 95 - PROFILE PLOT 52
FIGURE 96 - PROFILE PLOT - MARKER ON 52
FIGURE 97 - DEFLECTION PLOT 53
FIGURE 98 - DELETE / RESTORE WINDOW 54
FIGURE 99 - HOLE DELETE / RESTORE WINDOW 54
FIGURE 100 - HOLE GENERAL SETTINGS 55
FIGURE 101 - HOLE PARAMETERS 56
FIGURE 102 - PROBE GENERAL SETTINGS 57
FIGURE 103 - PROBE COEFFICIENTS 58
FIGURE 104 - READY FOR CONNECTION? 59
FIGURE 105 - PROJECT SETTINGS 59
FIGURE 106 – WHEEL LUBRICANT (ADH-106 BELRAY WATERPROOF GREASE TYPE 99540) 62
FIGURE 107 – GREASING WHEELS 62
FIGURE 108 – "CANNOT CONNECT…THE PASSCODE IS INCORRECT" 64
FIGURE 109 – "RECONNECT…COMMUNICATIONS ERROR" 65
FIGURE 110 – "PROBE ERROR. PROBE COMMUNICATIONS TIMEOUT!" 65
FIGURE 111 - INCLINOMETER CASING (END VIEW) 67
FIGURE 112 - INCLINOMETER PROBE 67
FIGURE 113 - INCLINOMETER SURVEY DESCRIPTION 69
FIGURE 114 - PLOT OF BOREHOLE DEFLECTION 69
FIGURE 115 - GK-604-4 PROBE INTERFACE MODULE 94

FIGURE 116 - MODEL 6101 TILTMETER WITH 6201-3 INTERFACE CABLE 94
FIGURE 117 - TILTPLATES: 6201-1C (CERAMIC), 6201-1A (COPPER PLATED ALUMINUM), 6201-1S (STAINLESS) 95
FIGURE 118 - LIVE READINGS (TILTMETER) 96
FIGURE 119 - SAVING DATA QUERY 97
FIGURE 120 - SAVE FILE DIALOG 97
FIGURE 121 - FILE EXISTS DIALOG 98
FIGURE 122 - MODEL 6101D DIGITAL TILTMETER 99
FIGURE 123 - TILTPLATES: 6201-1C (CERAMIC), 6201-1A (COPPER PLATED ALUMINUM), 6201-1S (STAINLESS) 99
FIGURE 124 - LIVE READINGS (TILTMETER) 100
FIGURE 125 - SAVE DATA QUERY 101
FIGURE 126 - SAVE FILE DIALOG 102
FIGURE 127 - FILE EXISTS DIALOG 102
FIGURE 128 - SPIRAL INDICATOR PROBE (6005-3) 104
FIGURE 129 - GK-604-3 ANALOG REEL SYSTEM 104
FIGURE 130 - GK-604-4 INTERFACE MODULE 105
FIGURE 131 - APPLICATION MENU 106
FIGURE 132 - LIVE READINGS FOR SPIRAL DATA 106
FIGURE 133 - SAVING COMPASS SURVEY DATA 106
FIGURE 134 - APPLICATION MENU 107
FIGURE 135 - LIVE READINGS SCREEN 107
FIGURE 136 – NEW PROBE FOUND 108
FIGURE 137 - INITIAL PROBE SETTINGS 108
FIGURE 138 - NO PROBE ASSOCIATION WINDOW 108
FIGURE 139- MENU OPTION (LIVE READINGS SCREEN) 109
FIGURE 140 – COMPASS ENABLE MESSAGE 109
FIGURE 141 - LIVE COMPASS DATA 110
FIGURE 142 - UNSAVED DATA PROMPT 110
FIGURE 143 - INITIAL CALIBRATION SCREEN 111
FIGURE 144 - CALIBRATION ROUTINE 111

TABLES

TABLE 1 – FOLDER PATHS AND FILE NAMES 60
TABLE 2 - COMMON TROUBLE SHOOTING PROBLEMS AND SOLUTIONS 66
TABLE 3 - REMOTE MODULE COMMANDS 86
TABLE 4 - DATA REDUCTION VARIABLES (DEFLECTION) 88
TABLE 5 - DATA REDUCTION VARIABLES (PROFILE) 89
TABLE 6 - GK-604D SPECIFICATIONS 91
TABLE 7 - COMPASS SENSOR SPECIFICATIONS 91
TABLE 8 - ANALOG PROBE SYSTEM SPECIFICATIONS 92
TABLE 9 - FIELD PC SPECIFICAITONS 93

EQUATIONS

EQUATION 1 - CHANGE IN DIGITS CALCULATION (DEFLECTION) 88
EQUATION 2 - DEFLECTION CALCULATION 88
EQUATION 3 - CHANGE IN DIGITS CALCULATION (PROFILE) 89
EQUATION 4 - PROFILE CALCULATION 89

1. INTRODUCTION

The GK-604D is made up of four components: An Inclinometer Probe, the Readout Unit, the Remote Module, and a Pulley Assembly.

1.1 Inclinometer Probe

Geokon sells many different inclinometer probes. The standard models are: 6100D digital probe (Figure 1) and 6000/6100 analog probes (Figure 2). In addition to standard inclinometer probes, the GK-604D IRA also can be used with Geokon Tiltmeter and Compass Probes. See Appendices G and H for more information on these probe types.

Figure 1 - 6100D Digital Probe

Figure 2 - 6000/6100 Analog Probe

Features Include:

- Waterproof, stainless steel housing.
- Rubber cushion on base to reduce shock.
- Extra-high quality, hermetically sealed connector with gold plated pins.
- Protective cap for connector when not in use.
- Replaceable wheels.
- Model 6100D Digital Probes feature a built-in compass.

1.2 Readout Unit

The Readout Unit consists of a hand-held field PC (Model FPC-2), running the GK-604D Inclinometer Readout Application (Figure 3).

Figure 3 - FPC-2 running GK-604D IRA

Features Include:

- Rugged
- Reliable
- All the benefits of a Windows Mobile compatible device (Windows file system, RS-232, USB and wireless connectivity)
- Long battery life
- Ease of use

1.2.1 GK-604D Inclinometer Readout Application

The GK-604D Inclinometer Readout Application (GK-604D IRA) installs and runs on a rugged hand-held PC, Model FPC-2, (Figure 3) and is designed to communicate via Bluetooth with Remote Modules connected to analog or digital probes, both MEMS and force-balance type.

Note: The GK-604D Inclinometer Readout Application will also operate on the Archer 2 and Archer Field PC from Juniper Systems (shown in Figure 6) as well as the Nautiz X7 (Geokon Model FPC-1).

1.3 Remote Module

The GK-604D Remote Module is housed in a weatherproof reel enclosure containing the cable, which connects directly to the inclinometer probe (Figure 4). The Readout Unit and Remote Module components communicate wirelessly using Bluetooth®, a reliable digital communications solution. This simplifies the handling of the system in the field as well as simplifying the transfer of data to your PC workstation for final analysis.

For digital probes, the Remote Module is fully contained within the reel as depicted by Figure 4.

Figure 4 - GK-604D Remote Module

For analog probes, an interface unit (Model GK-604-4 Figure 5) connects directly to the probe (analog MEMS and force-balance type) and can be purchased as a separate unit or as part of the GK-604-3 reel system (Figure 6).

Figure 5 - GK-604-4 Interface

Figure 6 - GK-604-3 Reel System (shown with the Archer unit and carrying case)

Features Include:

- Lightweight
- Easy to use, one button operation.
- Rugged
- Lithium battery (Eight plus hours of continuous use)
- Automatic power down when Bluetooth connection is dropped or after several minutes of inactivity.
- Reliable connection to standard inclinometer probes (see Figure 1 and Figure 2) is accomplished via model 6000-2 control cable, which features a lightweight, polyurethane jacket and is less than 7 mm in diameter (Figure 7). The control cable contains a central Kevlar® strand with a breaking strength of 150 kg.

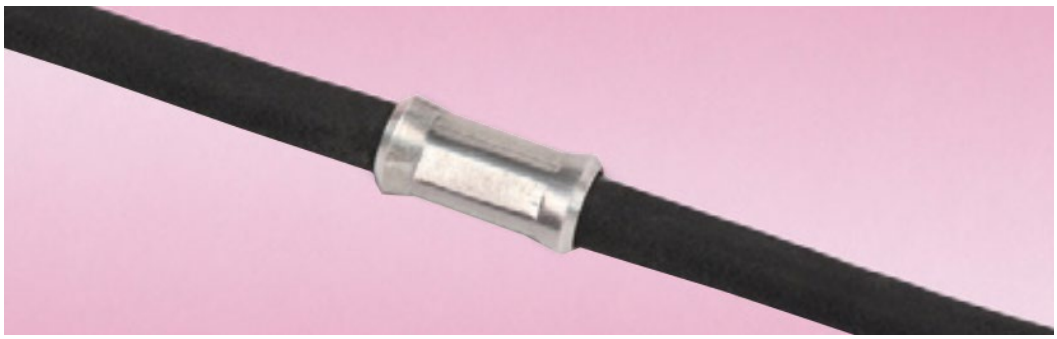

Figure 7 - Model 6000-2 Control Cable

1.4 Pulley Assembly

A pulley assembly (Figure 8) is used to grip the control cable. This ensures that the cable markers are not dislodged from the cable as the might be using cable holds The pulley style places no stress on the cable markers and removes any tendency for markers to slip over the cable as when using cable holds.

Figure 8 - Pulley Style Cable Grip

2. INSTALLATION AND OPERATION

2.1 Before using the GK-604D Inclinometer Readout

The readout software runs as an application under Windows Mobile 6 operating system installed on a hand-held PC (FPC-2).

- The user should familiarize themselves with the FPC-2 and the Windows Mobile OS.
- It is assumed in the instructions below that the user can launch applications from the Start button including File Explorer and the Bluetooth Settings manager.
- It is assumed that the user can tap the keyboard icon as needed and use the on-screen keyboard to enter text and numbers.
- Review the Maintenance requirements in Section 6.

If all parts of the GK-604D are purchased as a system, Geokon makes every effort to ensure that the system is completely set up and working before it leaves the factory. This includes the Bluetooth pairing between the Field PC and the Remote Module.

The steps described in Section 2.2 are an attempt to guide the user through the process of launching the GK-604D IRA, connecting to the probe, and taking a survey. Other times, the user may already own the hand-held PC and are setting up their hardware and software for the very first time. The steps below attempt to cover all cases and refer the user to the appropriate section when more information is needed.

For those users that have purchased a complete GK-604D system, a workspace with the name of "GK604D" and a probe library called "ProbeLibrary" will have been pre-defined. Note that the workspace and probe library names can be changed at any time or new ones can be created (see Section 3.2). When purchasing a GK-604D system, Sections 2.2 through 2.4 can possibly be skipped but a quick review of them is recommended.

NOTE: Always make sure that the inclinometer probe is attached to the reel before attempting the quick start sequence below.

2.2 Initial Quick Start Sequence

The following steps are a guide to the typical operation of the GK-604D and, if followed, should result in a successful "hole" survey being taken:

1) If the Remote Module was purchased separately from the FPC-2 unit or if a new Bluetooth pairing is needed, see Section 2.3 (Establishing Contact with the Remote Module).

2) Launch the GK-604D IRA by tapping on "Start" from the FPC-2 main window, tap "Programs", then tap the GK-604D IRA icon. If the GK-604D Inclinometer Readout Application has not been installed, please see Section 2.4 (Installing the GK-604D IRA).

3) If the Workspace Name window shown in Figure 9 is displayed instead of the Main Window shown in Figure 10, please refer to Section 2.5 (Starting the Inclinometer Readout the First Time).

Figure 9 - Work Space Name

Figure 10 - User Interface

4) If the Inclinometer System is an analog system (Model numbers 6100-1E and 6100-1M) then a "probe" must be defined in the Project Explorer Probe Library. (See Sections 3.2 and 4.2 for more information regarding adding and configuring a new probe.) After adding a new analog probe configuration, continue to step five.

   If the Inclinometer System is a digital system (Model numbers 6100D-E and 6100D-M), any new "probe" will be discovered upon connection to the Remote Module (covered in later steps).

5) If launching the GK-604D IRA for the first time, a "project" and a "hole" must be defined before connecting to the Remote Module (see Sections 3.2, 4.1 and 4.3 for more information regarding adding and configuring Project Explorer elements).

6) **NOTE**: If preparing to connect to a digital system the first time, please select "UNKNOWN" for the hole parameter, "Probe Name:".

7) If it is not selected already, select the new hole (by tapping on the hole icon in the Project Explorer) created in step five. Press the button labeled "POWER ON (BLUETOOTH)" on the Remote Module. A blue light should come on and start to blink, signifying that the Remote Module is waiting to connect to the FPC-2 unit.

8) To start the connection process, tap on the Application Menu (see Section 3.3) then tap “Live Readings”. By default, the application will look for a Bluetooth connection on “COM5”. If the Remote Module fails to connect with the FPC-2, then the window shown in Figure 11 will be displayed. This indicates that either the Remote Module is no longer trying to connect (timed out) or that the Bluetooth pairing is associated with another COM port. Make sure that the proper COM port is selected and then tap “Reconnect”.

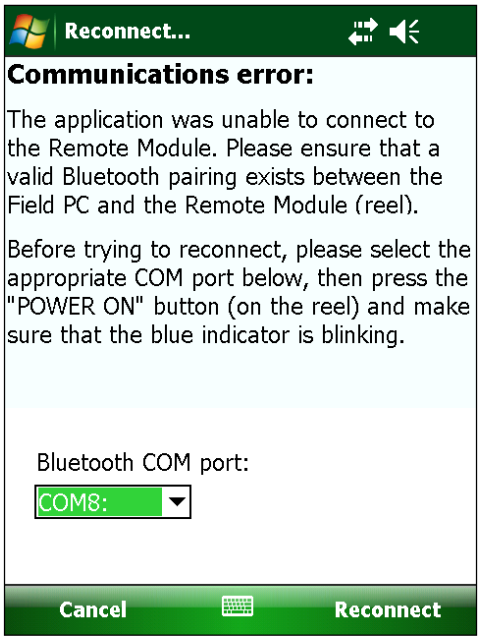

Figure 11 - Communications Error

If connecting to an analog system, after a few seconds, the blue light on the Remote Module should change to a steady state blue (lit but not flashing) and the Live Readings Window will be displayed (Figure 12). Skip to step nine.

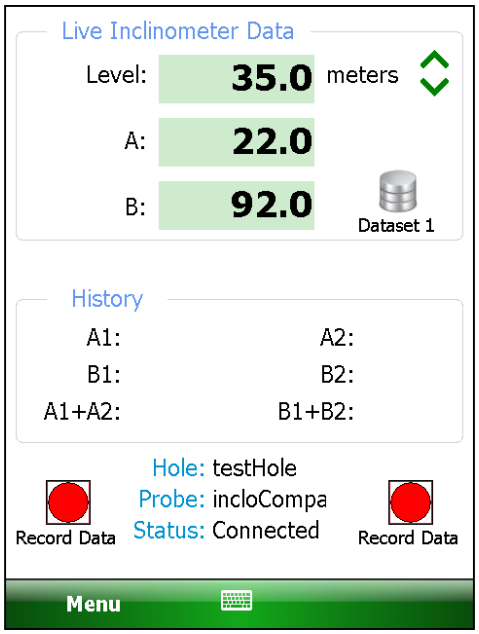

Figure 12 - Live Readings Screen

If connecting to a digital system, after few seconds, the blue light on the Remote Module should change to a steady state blue (lit but not flashing) and one of two windows will be displayed:

a. If the window shown in Figure 13 is displayed, then the probe has not been previously detected by the GK-604D IRA (digital systems only). In this case, tap "ok" and the probe will be added to the Probe Library and the window shown in Figure 14 will be displayed. This allows an opportunity to give the new newly detected probe a user-friendly name and description. See Section 4.2 (Probe Configuration), for more information on probe settings. When satisfied with the settings, tap "Menu->Save Settings" to exit the Probe Settings Window.

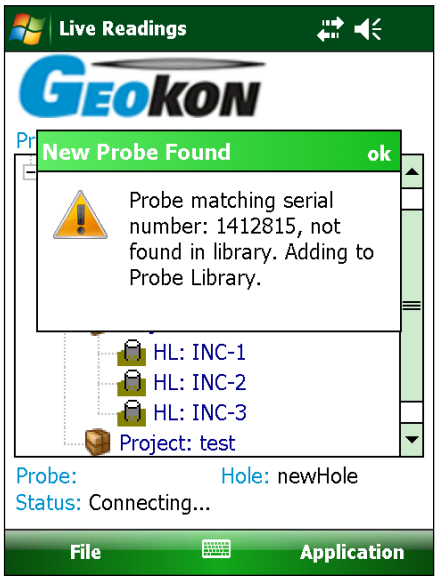

Figure 13 – New Probe Found

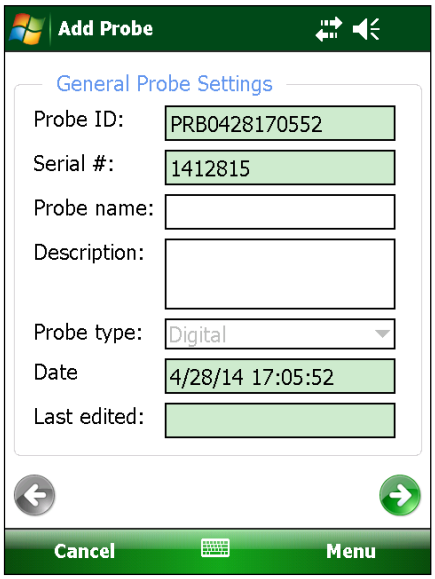

Figure 14 - Initial Probe Settings

If the probe name was set to "UNKNOWN" in step five, the window in Figure 15 will be displayed, allowing the name of the probe to be saved into the current hole configuration.

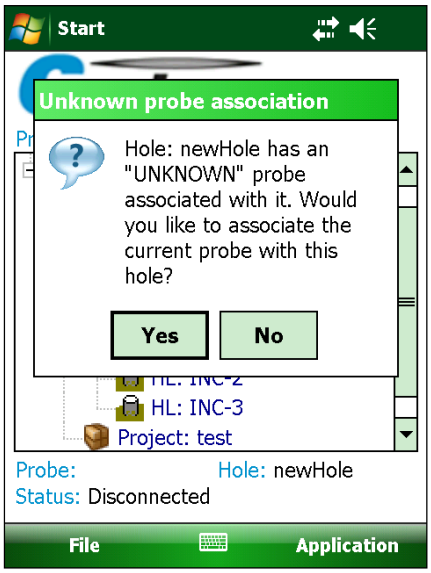

Figure 15 - No Probe Association Window

b. The Live Readings Window will be displayed (Figure 16). This indicates that the GK-604D IRA has recognized the probe as one it has connected to before.

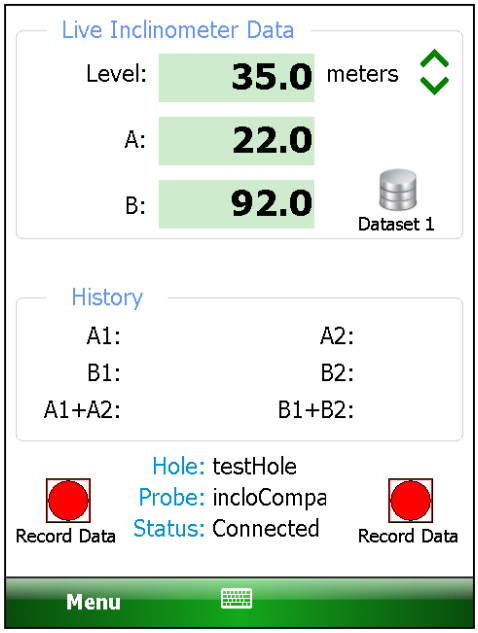

Figure 16 - Live Readings Screen

9) Refer to Section 3.3.1 for more information about taking a survey using the Live Readings window. Also, refer Appendix A.2 for information regarding the mechanical process of taking a survey.

10) After performing a survey, any saved data corresponding to a particular hole survey may be reviewed and/or reports generated by tapping the “File” menu then “View Data”. See Section 3.4.3 for more information about the View Data option.

11) Raw data files may be exported to a file system folder of the user’s choosing by tapping on “File”, then “Export”, then “Data”. See Section 3.4.1.1 for more information regarding data export options.

12) To close the GK-604D IRA, tap “File” then “Exit”.

2.3 Establishing Contact with the Remote Module

In general, this should only need to be done once and is typically done before it leaves the factory. Follow the steps below to ensure the 'partnership' with the remote is established before using the readout software:

1) Use the Bluetooth Settings Manager on the hand-held PC to set up the link to the remote. Read about setting up a Bluetooth "partnership" in Chapter 9 of the Field PC's Reference Guide. See the diagrams below for two examples of how to start Bluetooth Manager.

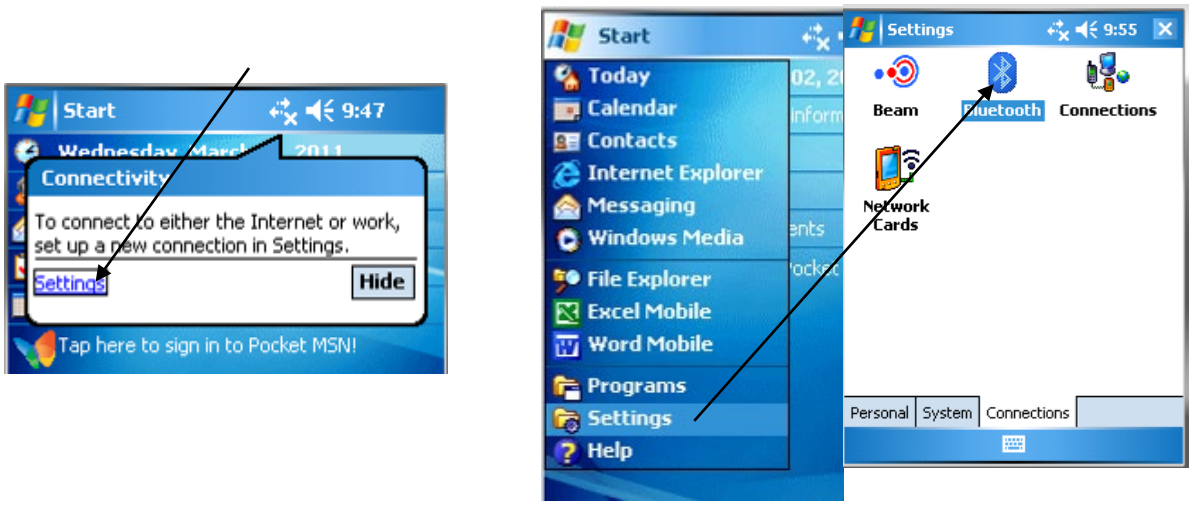

Figure 17 - Starting Bluetooth Manager

2) Once in the Bluetooth Settings Manager, click on the "Mode" tab and then make sure that the box next to "Turn on Bluetooth" is checked (Figure 18).

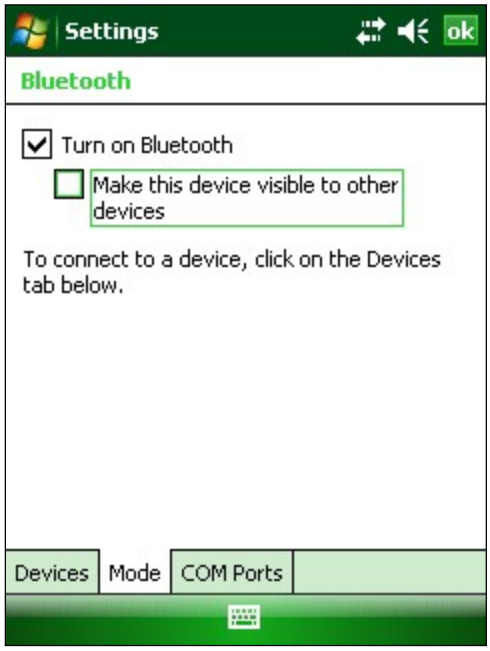

Figure 18 - Turn on Bluetooth

3) Click on the “Devices” tab. If it shows a “Geokon” device (name will start with “GK-604” and contain the remote’s serial number), go to step six. Otherwise turn on the remote module (should see a flashing blue indicator on the remote) and select “Add new device…”.

Figure 19 - Add New Device

4) When a suitable remote is discovered, highlight the device and tap “Next” (Figure 20).

Figure 20 - Select a Bluetooth Device

5) A prompt will be displayed for a password; enter "**default**" and tap "Next" again. If a partnership with the device is successfully established the screen will momentarily display the prompt shown at the bottom of Figure 21 and then return to the Bluetooth Devices screen.

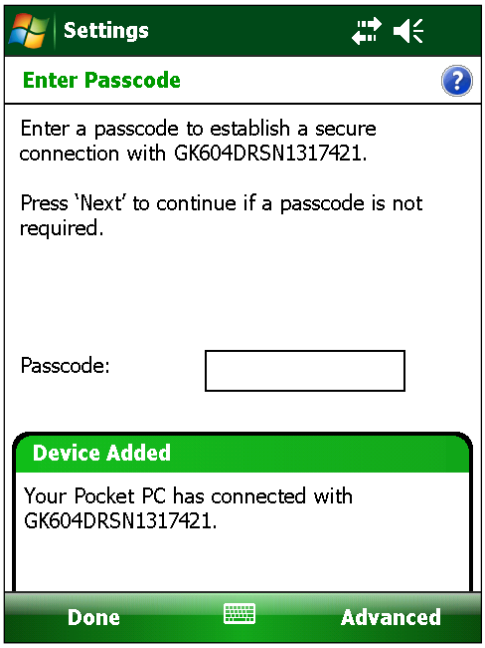

Figure 21 - Enter Passcode

6) Click on the COM Ports tab. If the "Geokon" device is already assigned to a COM Port, skip to step nine. If no COM port is assigned, select "New Outgoing Port". In the example shown in Figure 22, there is no COM Port assigned to a "GK604" device.

Figure 22 - New Outgoing Port

7) Figure 23 shows the devices that a COM Port may be selected for. Select the appropriate "Geokon" device from the list and tap "Next".

Figure 23 - Add a Device

8) From the "Port:" drop-down list, select COM6, COM7, or COM8. (The other COM Ports are used by the system and are not available.) Be sure to remember the number of the COM port as you may have to select it later in the readout software (see Sections 3.3.1 and 3.3.3, as well as Figure 45). Make sure to "uncheck" the "Secure Connection" check box (Figure 24). Tap "Finish" when done to return to the Bluetooth Settings "COM Ports" screen.
*Note: If using a Nautiz X7, COM5 may be available, depending on the model.

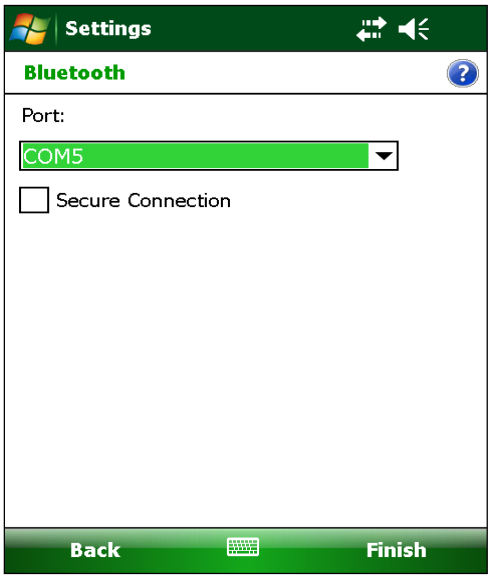

Figure 24 - COM Port Selection

9) Lastly verify that the Bluetooth device is set for Serial Port operation. From the "Devices" tab of the Bluetooth Settings manager, tap the device to be used to communicate with the remote. Figure 25 will be displayed. Ensure that the "Serial Port" checkbox is checked. Tap "Save" to complete the Bluetooth Settings.

Figure 25 - Serial Port Check Box

NOTE: After "Save" is selected, you will be brought back to the "Devices" window. There will be a "Connect" button available at the bottom of the screen. See Figure 26 below.

DO NOT USE THE "CONNECT" BUTTON TO TEST THE CONNECTION!

It will always fail after the pairing has been made successfully. Test the pairing by entering the GK-604D_IRA application.

Figure 26 - Connect Button

2.4 Installing the GK-604D IRA

The installation of the GK-604D IRA requires a Hand-held device (HHD) running Windows Mobile Classic 6.0 or higher, with at least 50 Mbytes of free memory. HHD must be Bluetooth enabled and be able to assign a Bluetooth connection to a COM port. Windows .NET 3.5 Compact Framework (CF) and .NET framework English-language Messages package installed on HHD. Both "CAB" file installers are included in the GK-604D IRA installer "Zip" file, available on Geokon's website (http://www.geokon.com/digital-inclinometer-system/).

Also required is Microsoft ActiveSync version 4.5.0 or higher running on the host PC (Figure 27) or Windows Mobile Device Center if PC is running Windows 7 (Figure 28 on the following page) as well as the HHD. An active connection between the two must be established via either a physical link or Bluetooth.

Note: For customers using a PC running Window 10 operating system; Windows Mobile Device Center (WMDC) may no longer operate as it should because of an operating system update (released October of 2017) called "Fall Creator Update". If WMDC no longer launches when a mobile device is connected via USB cable or will not manually launch, the link below should help fix the issue. Please note that administrative privileges are need to launch some of the files involved in the fix so your local IT person may need to be involved. The fix can be accessed via the following link:
https://www.handheldgroup.com/support-rugged-computers/knowledgebase-KB/22996/

Should the link above fail to fix the WMDC launch problem, the link below offers another possible solution:
http://www.junipersys.com/Juniper-Systems-Rugged-Handheld-Computers/support/Knowledge-Base/Support-Knowledge-Base-Topics/Desktop-Connection-ActiveSync-or-Windows-Mobile-Device-Center/WMDC-in-Windows-10

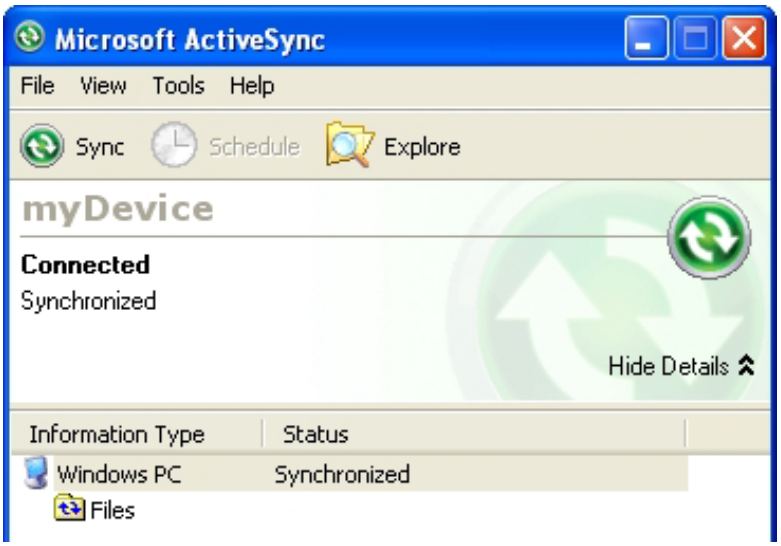

Figure 27 - ActiveSync Window showing active connection

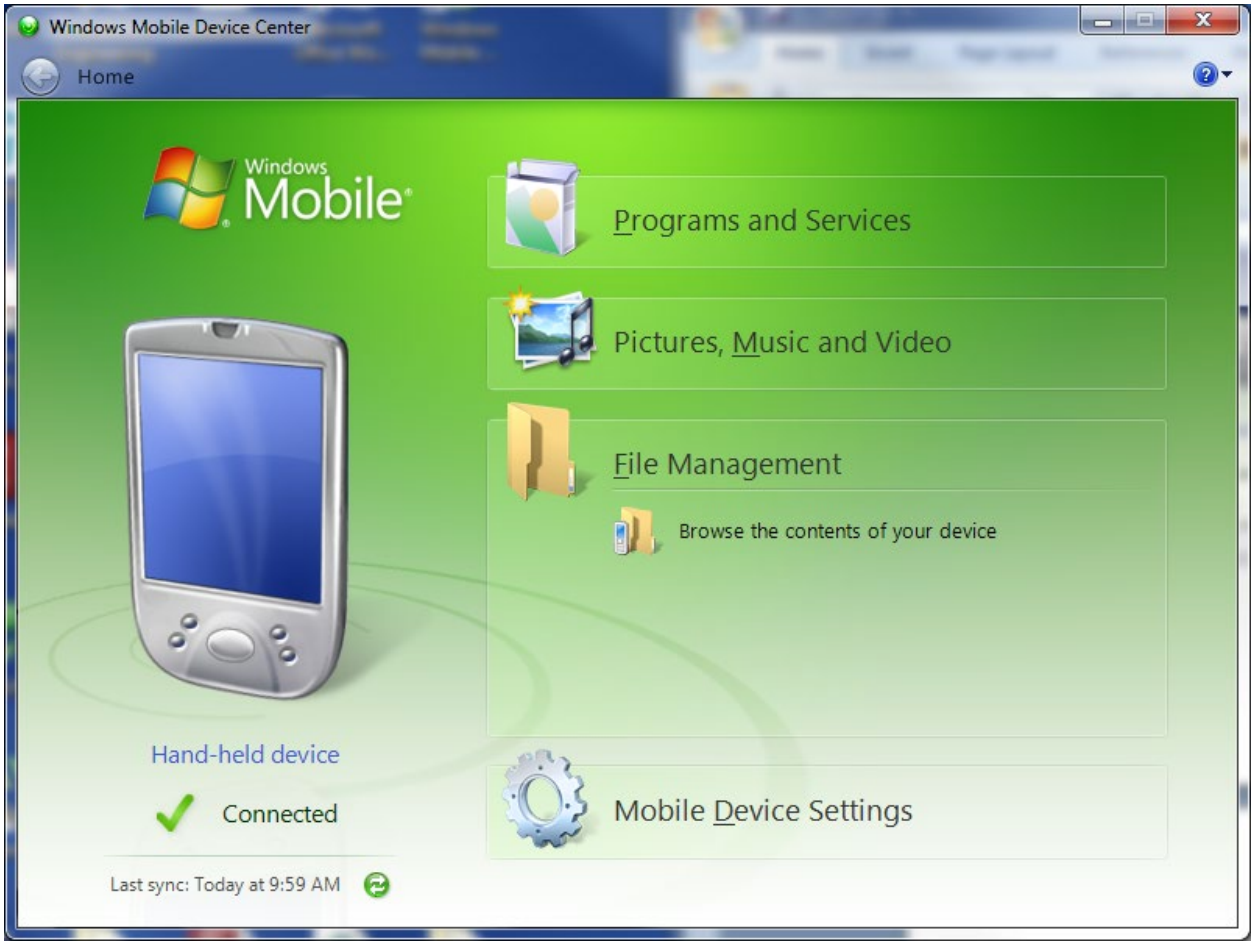

Figure 28 - Windows Mobile Device Center

2.4.1 Launching the GK-604D Installer

1) From the Windows Mobile Device Center window on a desktop PC (see Figure 28 above), click on the folder icon labeled "Browse the contents of your device" to call up an Explorer Window for the HHD (Figure 29). The procedure for ActiveSync is very similar.

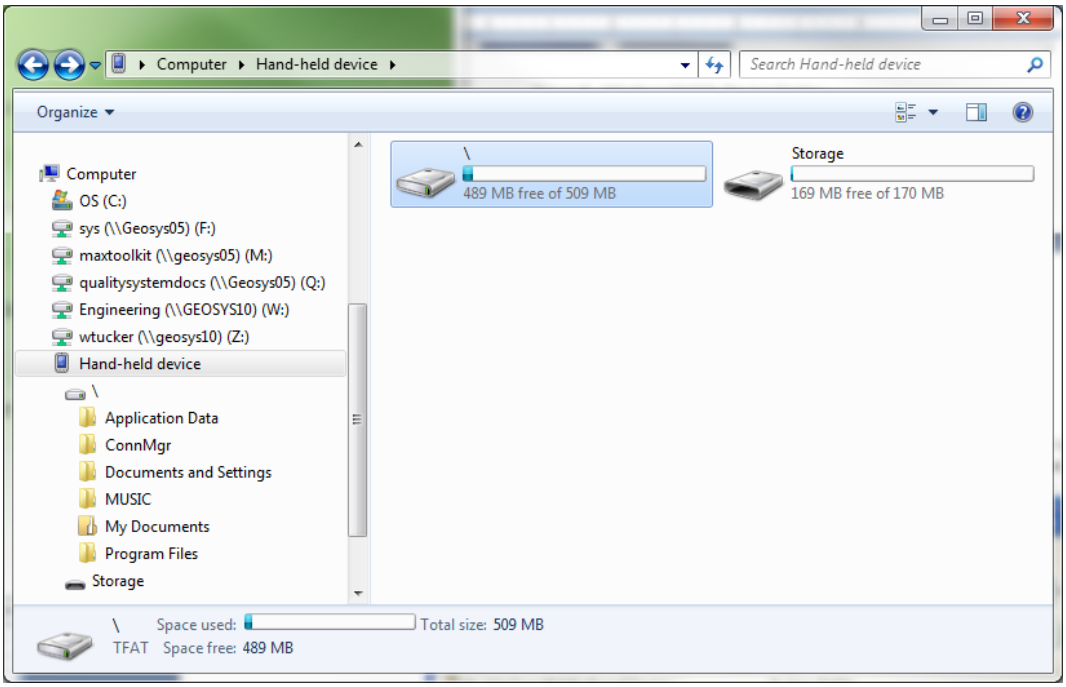

Figure 29 - Windows Explorer Window Displaying HHD Root Folder

2) In the Explorer Window, double-click the icon labeled "\" to navigate to the hand-held PC's system root shown in Figure 30.

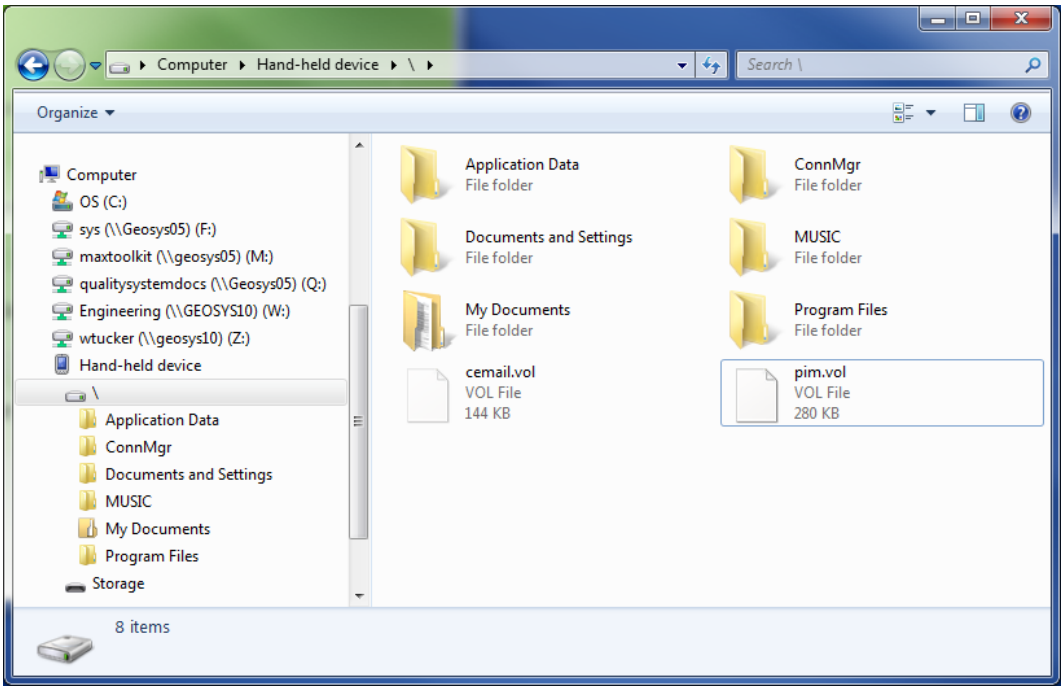

Figure 30 - Hand-held device root folder contents

3) Unzip the GK-604D Installer (downloaded from Geokon's website), open a Windows Explorer window, and then navigate to the root folder of the Installation folder (Figure 31).

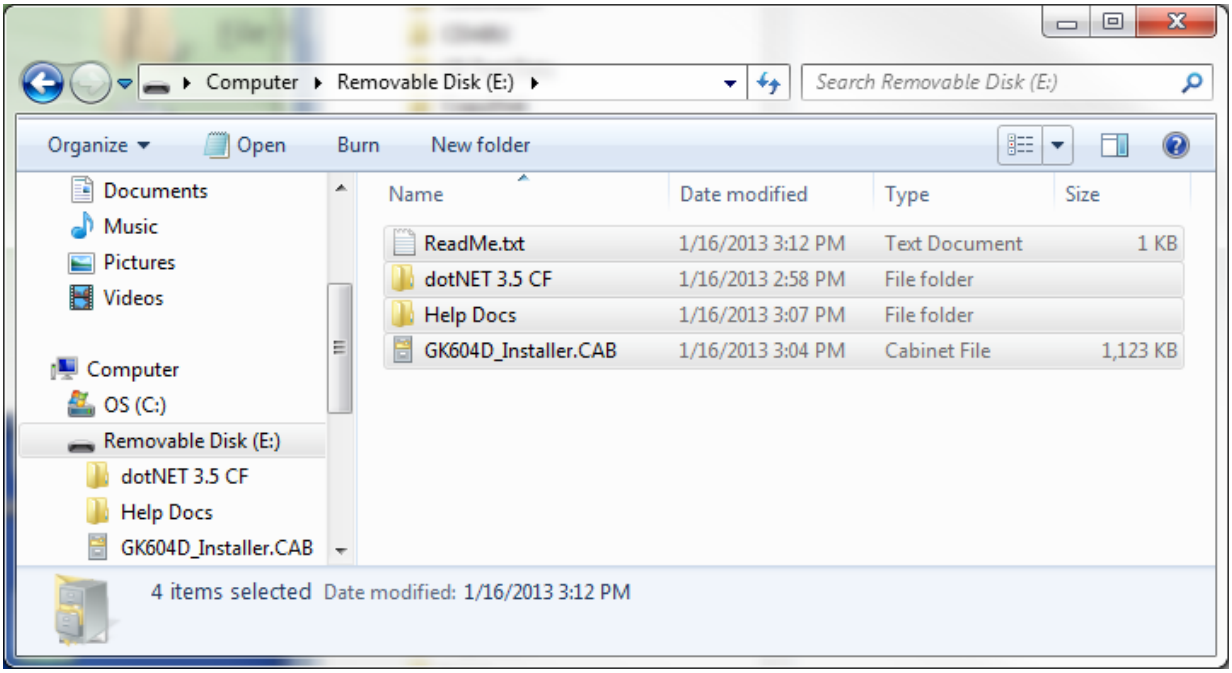

Figure 31 - Installation Folder Contents

4) Copy the file, "GK604D_Installer.CAB" from the installation folder to the HHD system root folder. From the HDD, navigate to the system root folder using File Explorer (Figure 32) and tap the file, "GK604D_Installer" to execute the installer.

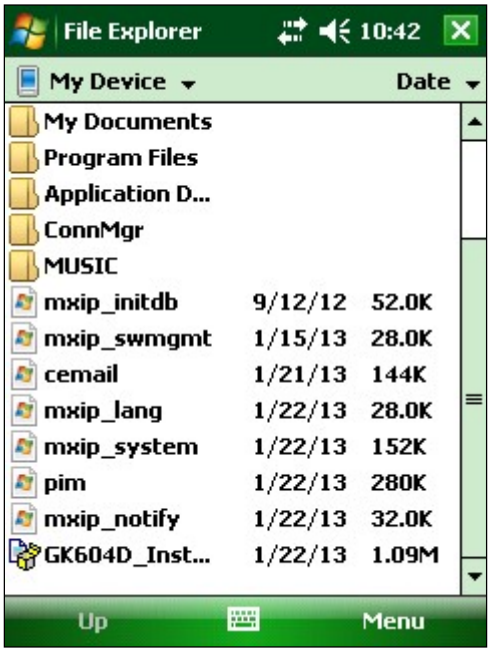

Figure 32 - GK-604D Installer at root of HDD

5) If there is a storage card installed in the HHD then the user will be prompted to choose the location for the installation (Figure 33). It is recommended that “Device” be selected then tap “Install” with the stylus to initiate the install process.

Figure 33 - GK-604D Install Screen

6) The file, GK604D_Installer.CAB can be now deleted from the system root folder to free up memory. The GK-604D IRA is now installed and its icon should appear in “Start->Programs” (Figure 34).

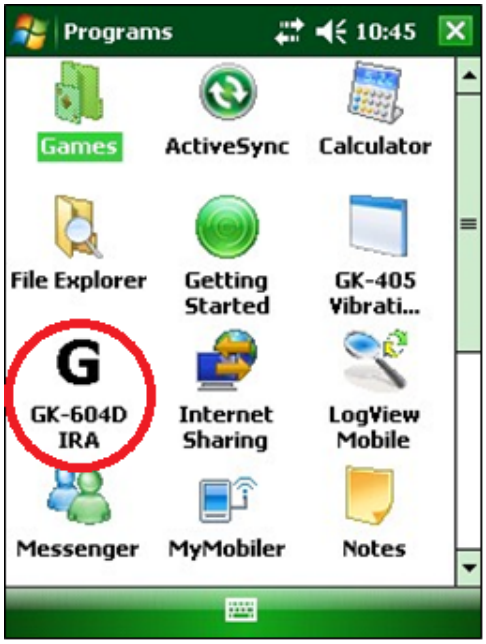

Figure 34 - GK-604D IRA Icon in Start->Program

2.5 Starting the Inclinometer Readout the first time

The readout software is launched by tapping the Start button (or clicking on Programs) and then selecting the GK-604D IRA icon (shown on the right).

If the application fails to launch and the message, “This application requires a newer version of the Microsoft .NET Compact Framework than the version installed on this device”, is displayed then the .NET Compact framework that is included in the installer “Zip” file should be installed. The .NET Compact Framework installer is called “NETCFv35.wm.arm4i.cab” and is located in a folder called “dotNET 3.5 CF” (see Figure 31). Installation is very similar to installing the GK-604D IRA.

A companion package for the .NET Framework, “NETCFv35.Messages.EN.wm.cab”, should also be installed at this time and is located in the same folder.

When starting the GK-604D Inclinometer Readout Application (GK-604D IRA) for the first time, you will be prompted to create a workspace name (Figure 35). The workspace name can be any combination of letters and numbers and should be descriptive in nature. After creation, this name will be displayed in the Project Explorer window.

Figure 35 - Select Workspace Name

Once the name for your workspace is selected, you will be prompted to choose or create a folder on your PC where all the workspace elements will be stored (Figure 36). The default workspace location is in a folder named the same as the workspace name, under a special shared folder reserved for workspaces. For Windows Mobile devices, this folder is located at: \Application Data\Geokon\GK-604D\Workspaces.

GK-604D IRA appends the name of the new workspace to this shared folder and uses it as the default location for the new workspace. The user is free to select their own location, either by entering it directly, or the Browse button (...) may be used to navigate to a different folder location or to create a new folder

This workspace location will be stored in the GK-604D IRA configuration for subsequent application access. After workspaces are created, all future user access to workspaces is always by name.

Figure 36 - Select Workspace Folder

Note: If the newly selected workspace folder contains an existing workspace, GK-604D IRA will display a dialog prompt asking the user if they want to import the workspace as is or to rename it with the previously specified new workspace name (Figure 37).

Figure 37 - Workspace Exists

Much like what was done for the initial workspace, a probe library also needs to be created before the application can fully launch. After specifying the workspace folder, you will be prompted to create a probe library name (Figure 38). The probe library name can be any combination of letters and numbers and should be descriptive in nature. After creation, this name will be displayed in the Project Explorer window.

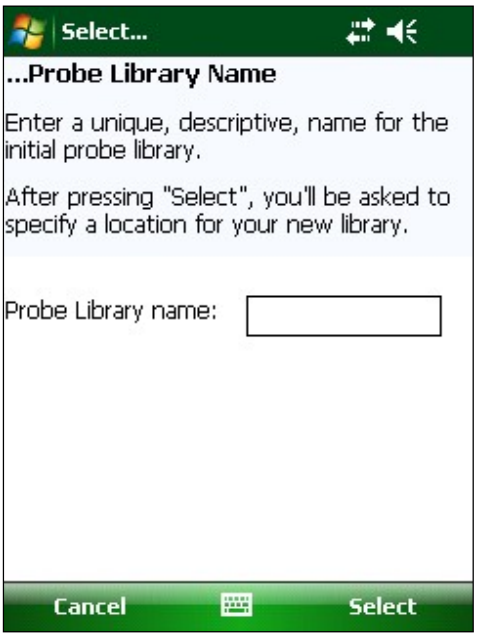

Figure 38 - Select Probe Library Name

Once you have selected the name for your probe library, you will be prompted to choose or create a folder on your PC where all the probe library elements will be stored (Figure 39). The default probe library location is in a folder named the same as the probe library name, under a special shared folder reserved for probe libraries. For Windows Mobile devices this folder is located at: \Application Data\Geokon\GK-604D\Probe Libraries

GK-604D IRA appends the name of the new probe library to this shared folder and uses it as the default location for the new probe library. The user is free to select their own location, either by entering it directly, or the Browse button (...) may be used to navigate to a different folder location or to create a new folder. This probe library location will be stored in the GK-604D IRA configuration for subsequent application access. After probe libraries are created, all future user access to probe libraries is always by name.

Figure 39 - Select Probe Library Folder

Note: If the newly selected probe library folder contains an existing probe library, GK-604D IRA will display a dialog prompt asking the user if they want to import the probe library as is or to rename it with the previously specified new workspace name (Figure 40).

Figure 40 - Probe Library Exists

After the initial workspace and probe library are created the GK-604D IRA will open, displaying the newly created workspace and probe library (Figure 41). New project(s) and hole configurations may be added to your workspace as well as adding new probes (settings) to the new probe library.

Figure 41 - Empty Workspace and Probe Library

3. USER INTERFACE

3.1 Overview

The GK-604D IRA user interface contains a number of navigation controls designed to make job of selecting application elements and functions easier. These navigation controls present an organizational view of the active workspace, inform the user about the state of the application, and provide the user with tools to configure and control Geokon devices.

The GK-604D IRA User Interface is comprised of several core components:
Project Explorer:
Element selection tool. Context (drop-down) menu. Covered in Section 3.2.

Application Menu:
Allows display changes, project, hole and probe configuration and connection to the remote module. Covered in Section 3.3.

File Menu:
File and project explorer element exporting, importing and restoration. Data view/reporting options. Covered in Section 3.4.

Status Area:
Displays the currently selected hole and probe as well as application status.

3.2 Project Explorer

The Project Explorer is the primary navigation mechanism for moving around the GK-604D IRA workspace and probe library. The Project Explorer presents a view of the workspace including projects and holes and a view of the probe library that includes available probes. These views reflect the hierarchical relationship between these elements.

Figure 42 - User Interface

The highest element in the workspace hierarchy tree is a project. Projects allow a GK-604D IRA user to group holes into organizational units based on the user's preference. A project can reflect a specific site where holes have been drilled such as a construction project. This organizational feature makes it easy to find hole configurations along with related data files. The list of holes defined under the project can be viewed by selecting a specific project and expanding its branch in the explorer view (click on + sign preceding project name) (see Figure 42 above).

In the hierarchy of the project explorer, holes are child elements of a project. Hole settings can be edited by selecting the desired hole in the explorer tree. Once selected, hole settings can be displayed using "Edit Settings" from the Application Menu (see Section 3.3) or by using the context menu (see Section 3.2.1 below).

Much as a project is a child element of a workspace, a probe is a child element of a probe library.

3.2.1 Context Menu

From the Project Explorer, new workspace elements can be added using the context menu. Access the drop-down menu by tapping and holding the explorer element that is to be operated on. The context menu is context sensitive in that, based on the current selection, the appropriate elements will be enabled, and others will be disabled. Figure 43 shows the drop-down menu with the menu item, "Add Hole", enabled (not grayed out) since a "project" element is selected in the Project Explorer.

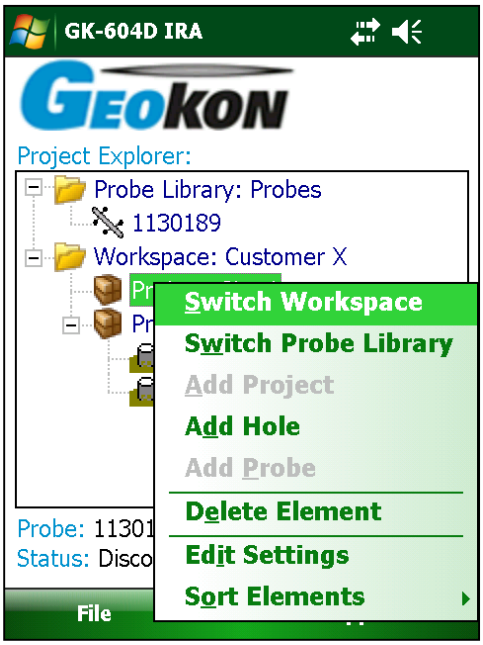

Figure 43 – Context Menu

As can be seen from Figure 43, the settings for a project explorer element can also be edited from the context menu.

Note that certain explorer elements can be sorted by newest or oldest first. The elements that can be sorted in a project explorer list are: Holes, Projects, and Probes.

3.3 Application Menu

The GK-604D IRA Application Menu (Figure 44) provides access to high level application functionality. It is located in the lower, right corner of the main window frame. The "Edit Settings" menu sub-item of this menu can also be accessed via the context menu. The Application Menu sub-items are further described below.

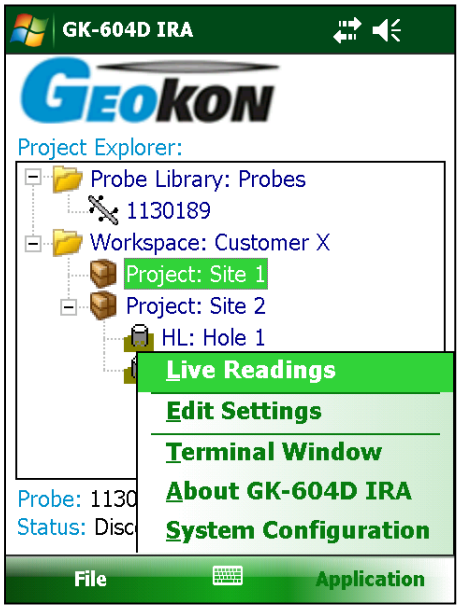

Figure 44 - Application Menu

3.3.1 Live Readings

Tapping on this menu item initiates the Remote Module connection process and after a successful connection, the Live Readings screen will be displayed (see Figure 49). Should the connection attempt fail, the window shown in Figure 45 will be displayed with suggestions for correcting any issues before re-trying.

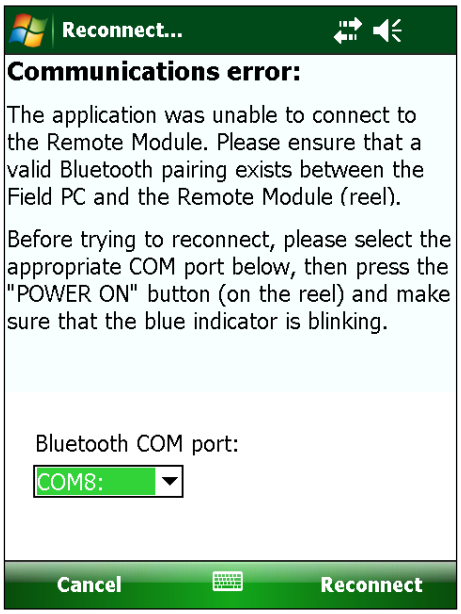

Figure 45 - Remote Module Connection Problem

Note: When attempting to connect to the Remote Module, please ensure that the “Power On” button on the Remote Module has been pressed (blue light will be blinking) before tapping on the “Live Readings” menu item.

After the Remote Module successfully connects to the FPC-2, the blue “POWER ON” indicator will transition from blinking to steadily lit and one of two possible screens will be displayed:

Screen 1 - Temporary File Data Prompt:

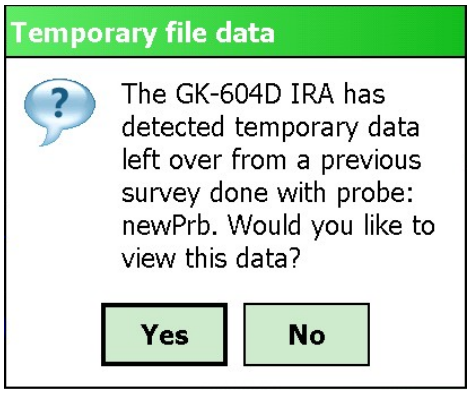

Figure 46 - Temporary File Data Prompt

Figure 46 shows the message displayed if the GK-604D detects that a previous survey was not saved. Tapping “Yes” displays the temporary data (Figure 47). Tapping “No” displays the “Load previous data” prompt (Figure 48).

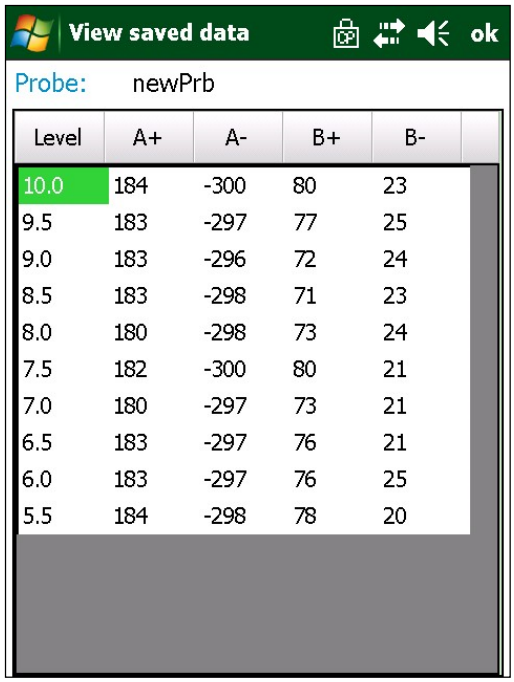

Level	A+	A-	B+	B-
10.0	184	-300	80	23
9.5	183	-297	77	25
9.0	183	-296	72	24
8.5	183	-298	71	23
8.0	180	-298	73	24
7.5	182	-300	80	21
7.0	180	-297	73	21
6.5	183	-297	76	21
6.0	183	-297	76	25
5.5	184	-298	78	20

Figure 47 - View Saved Data

To dismiss the "View saved data" window tap on "ok" which will then display the "Load previous data" prompt (Figure 48). Tapping "Yes" on the Load previous data" window will load the temporary data into memory and then display "Live Readings" (Figure 49). Tapping "No" will load "Live Readings" as normal.

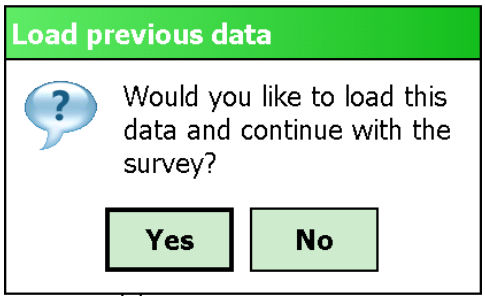

Figure 48 - Load Previous Data

Screen 2 - Live Readings Screen:

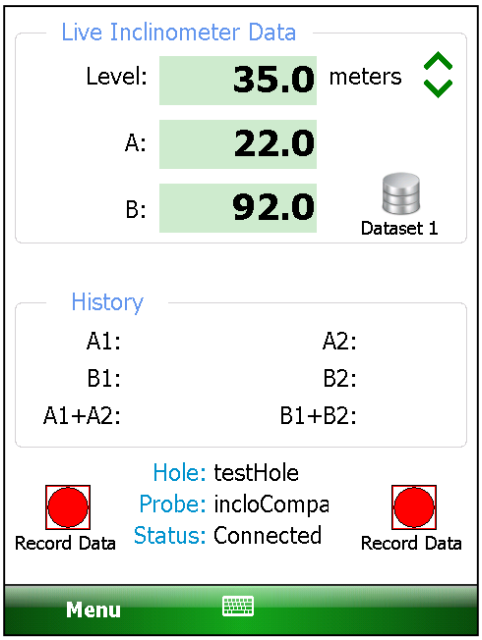

Figure 49 - Live Readings Screen

- Readings are continuously updated from the Remote Module. The data set always starts with 'Dataset 1', but can be switched at any time to 'Dataset 2' (usually after rotating the probe 180 degrees).

- At the start of a survey, the 'Level' is set to the "Starting Level" configured for a particular hole. Pressing either of the "Record Data" buttons (with a finger or tap of the stylus) records that set of A and B values and automatically changes the 'Level' (on screen) by the amount based on the hole configuration "Interval" value (see Section 4.1). The "Record Data" option can also be activated by pressing the "Enter" key on the lower-right side of the keypad.

- A "beep" sound should be heard, confirming that the reading has been stored. If no beep is heard, tap the "volume" control at the top of the screen and adjust the volume.

- Be sure to move the probe to the new level and wait for the readings to stabilize before recording the next reading.

- At any point you can scroll the 'Level' using the green up and down arrow buttons on the screen and view data stored and checksums (lower half of the screen). When done taking readings, tap "Menu" (lower-left corner of the screen), followed by "Exit Live Readings". You will be given the option to save the readings to a file (Figure 50).

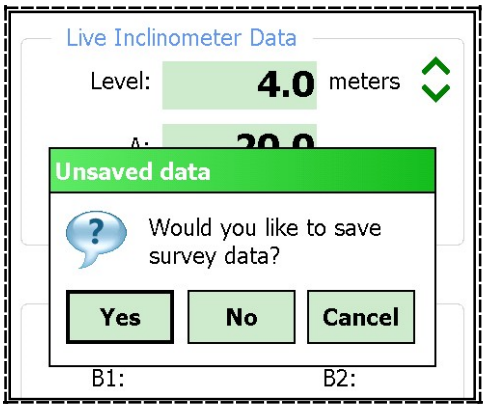

Figure 50 - Unsaved Data Prompt

  - Even if you select **No**, the readings will be saved to a temporary file and can be restored the next time "Live Readings" is entered.

  - If **Yes** is selected, you then will be given the choice of saving with the auto-increment suffix on the standard filename (Figure 51). Selecting Yes again causes the save operation to be carried out using a filename of the form: *[Hole_Name][3 digit AutoIncr_Suffix].GKN*

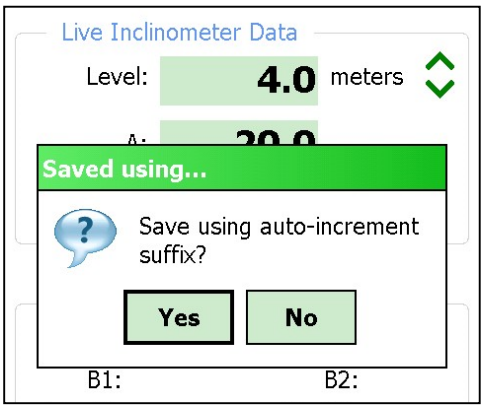

Figure 51 - Auto Increment Save

  - If **No** is selected, you will be shown the standard **File Save As** screen (Figure 52) and you can modify the file name to anything you choose. Use the stylus to click on the keyboard icon (bottom) and make the changes you desire.

Figure 52 - Save File Screen

See Section 3.3.5 (System Configuration) for more information about options that affect Live Readings and taking surveys.

3.3.1.1 Live Readings Screen Menu Options

Figure 53 shows the available options from the Live Readings "Menu" item when a Digital Inclinometer/Compass probe is detected. These options are described below.

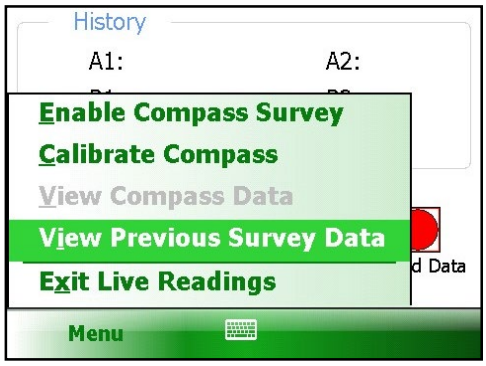

Figure 53- Menu option (Live Readings screen)

Enable Compass Survey:

For GK-604D systems with a reel firmware version of V2.7 (or greater) AND a probe firmware version of V2.7 (or greater), capability exists to take a Compass Survey of the selected hole at the same time as the inclinometer survey. This menu item is only shown if a compass probe is detected. See Appendix H for a complete description of the Compass and Spiral Probes.

Calibrate Compass:

Tapping this item causes the Compass Calibration dialog to be displayed where a procedure to calibrate the Digital Inclinometer/Compass probe can be followed. See Appendix H.2.1 for a complete description of the Compass Calibration procedure.

View Compass Data:

When a compass survey is enabled, this menu item is also enabled, allowing the compass heading to be displayed in place of the inclinometer "A" data. This item toggles between "View Inclinometer Data" (Figure 54) and "View Compass Data" (Figure 55) depending on the data currently being viewed. This menu item is only shown if a compass probe is detected. See Appendix H for a complete description of the Compass and Spiral Probes.

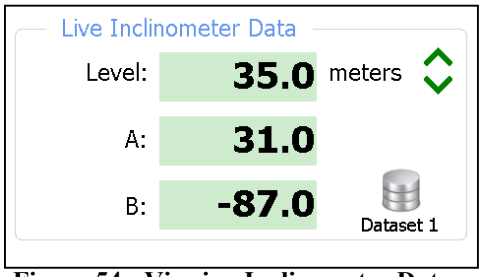

Figure 54 - Viewing Inclinometer Data

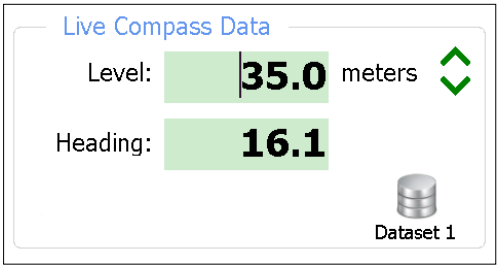

Figure 55 - Viewing Compass Data

View Previous Survey Data:

Allows viewing (and loading) of previous survey data. When tapped, the user must first select the previous survey file to view. After selecting a file a window very similar to Figure 56 will be displayed. After dismissing this window by tapping "ok" another prompt is displayed similar to Figure 57 is displayed. Tap "Yes" to load the data or "No" to continue with the current survey.

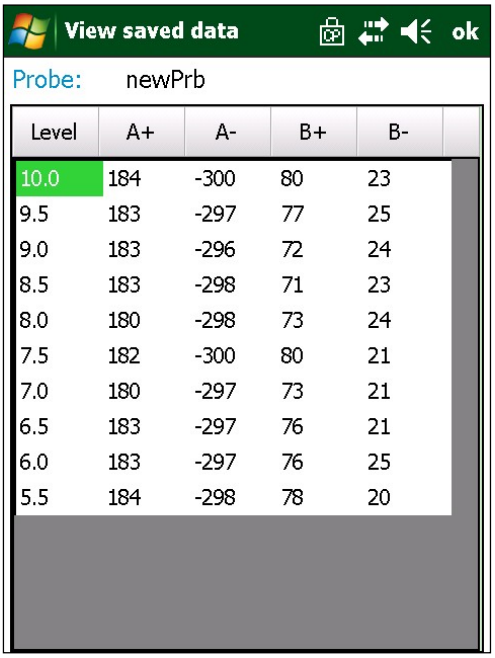

Level	A+	A-	B+	B-
10.0	184	-300	80	23
9.5	183	-297	77	25
9.0	183	-296	72	24
8.5	183	-298	71	23
8.0	180	-298	73	24
7.5	182	-300	80	21
7.0	180	-297	73	21
6.5	183	-297	76	21
6.0	183	-297	76	25
5.5	184	-298	78	20

Figure 56 - View Saved Data

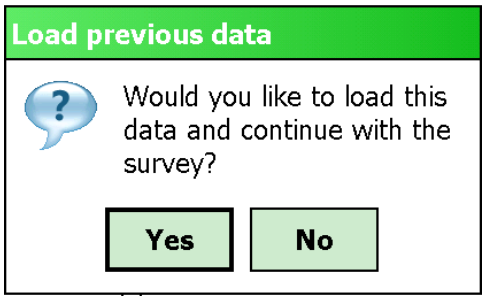

Figure 57 - Load Previous Data

Exit Live Readings:

When tapped, causes the GK-604D to prompt to save survey data, shuts down the Remote Module (reel), then exits the Live Readings screen.

3.3.2 Edit Settings

As with the Context Menu (see Section 3.2.1), tapping the "Edit Settings" menu will invoke the Settings Editor for the currently selected Project Explorer element (See Section 4 for more information on settings).

3.3.3 Terminal Window

This feature requires an active connection to a Remote Module and will attempt to connect the module when invoked. If a connection cannot be made, the window shown in Figure 58 will be displayed.

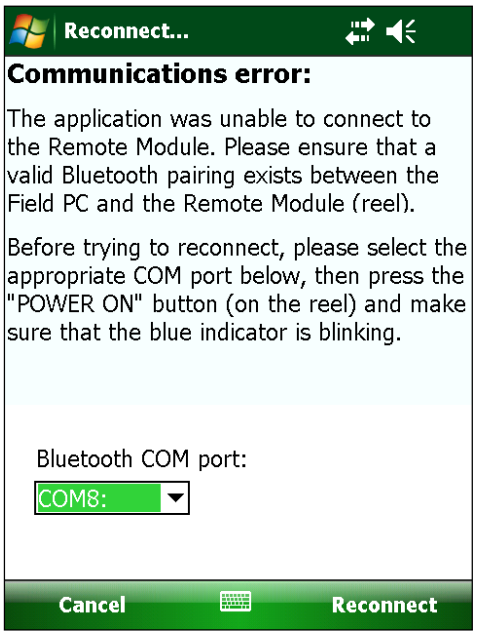

Figure 58 - Remote Module Connection Problem

If a connection can be made, the window shown in Figure 59 is displayed. Using the "Terminal Window" requires the use of the on-screen keyboard to enter simple one or two character commands to the Remote Module. (See Appendix D for more information regarding the Remote Module command structure.)

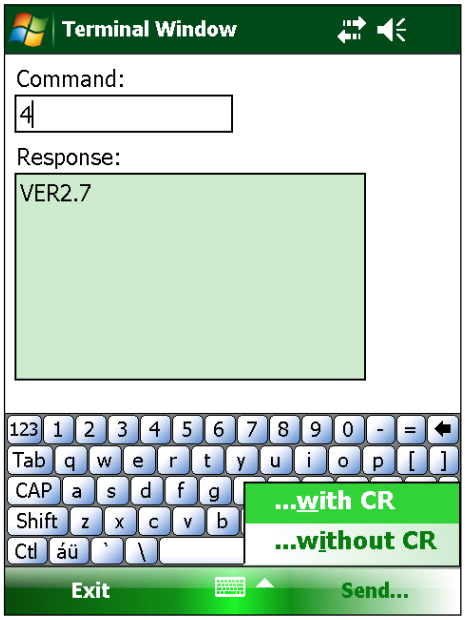

Figure 59 - Terminal Window

After typing in a command, tapping the "Return" (Enter) key will cause the command to be sent to the Remote Module. Figure 59 shows the response to a Firmware Version command (4). Alternately, tapping the "Send" menu gives the user the ability to send a character to the Remote Module with or without a Carriage Return (CR) appended to the character string (see bottom right of Figure 59). This is useful when a confirmation character is required (such as for the calibration routine) but no carriage return.

3.3.4 About GK-604D

This displays an information panel giving copyright information as well as the application version (Figure 60). Tapping on the "Remote Module Status" button will display another screen asking if a probe is connected to a Remote Module and is the Remote Module ready to connect (blue light blinking) (Figure 61).

Figure 60 - About GK-604D IRA

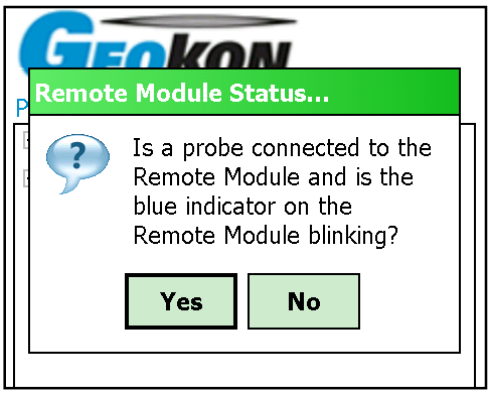

Figure 61 - Ready for Connection?

Tapping on the "Yes" button causes the GK-604D IRA to initiate the connection process with the Remote Module. If the connection is successful then Figure 62 is displayed, giving status about the Remote Module.

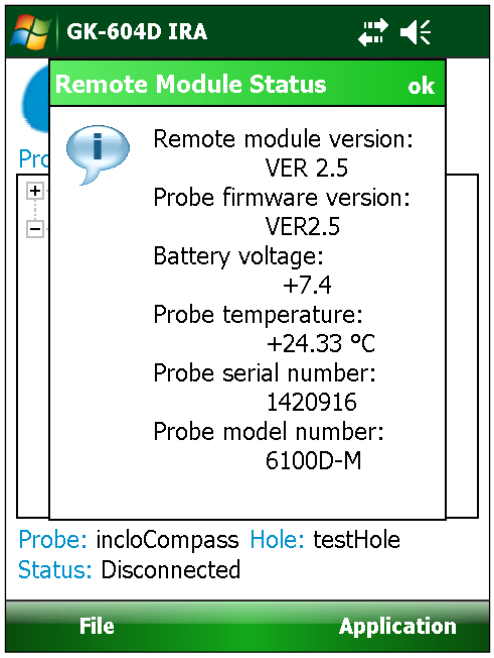

Figure 62 - Remote Module/Probe Status

Figure 62 depicts the status available for a digital Remote Module and probe. For analog systems, only the Remote Module version and battery voltage is listed.

3.3.5 System Configuration

This screen allows selecting options that affect how the system works and how a survey is taken (Figure 63). The subsections that follow describe each parameter in detail.

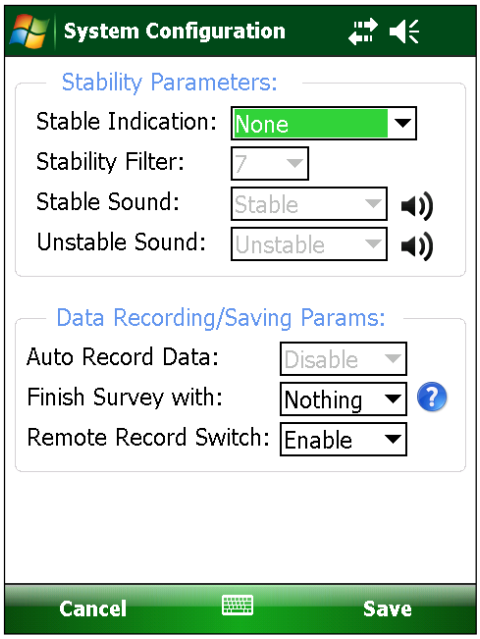

Figure 63 - System Configuration

3.3.5.1 Stable Indication

Valid choices for this selection include:

None:
When this stability indication is selected, the only indication on the Live Readings Screen of the reading's stability will be to monitor the A and B readings (Figure 64).

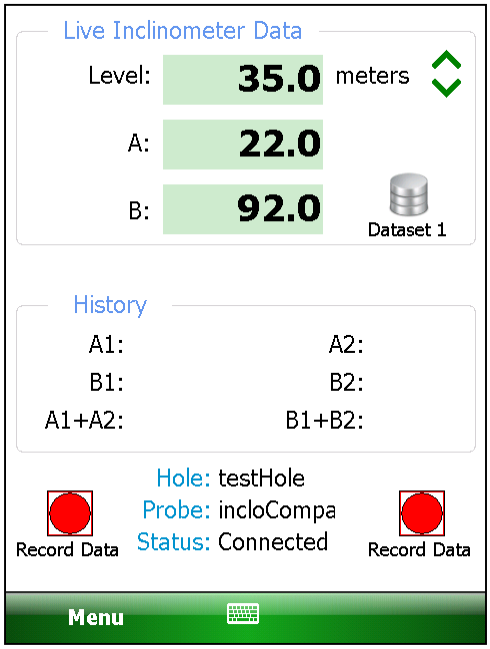

Figure 64 - Live Reading, No Stability Indication

Visual Only:
When this stability indication is selected, an icon is displayed on the Live Readings Screen, indicating whether the reading is stable or not (Figure 65 and Figure 66).

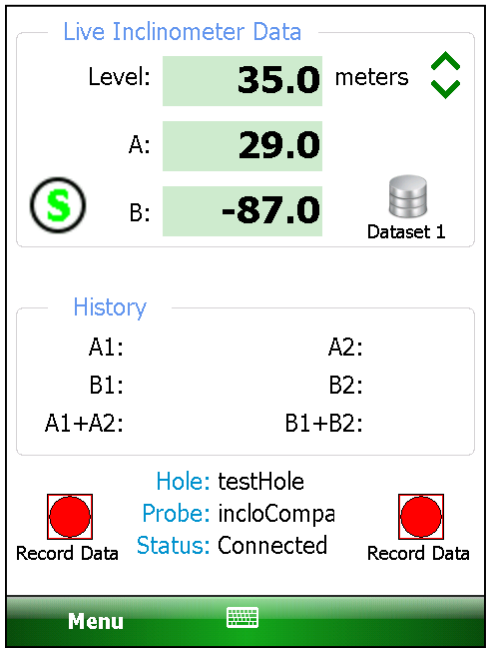

Figure 65 - Stable Indication

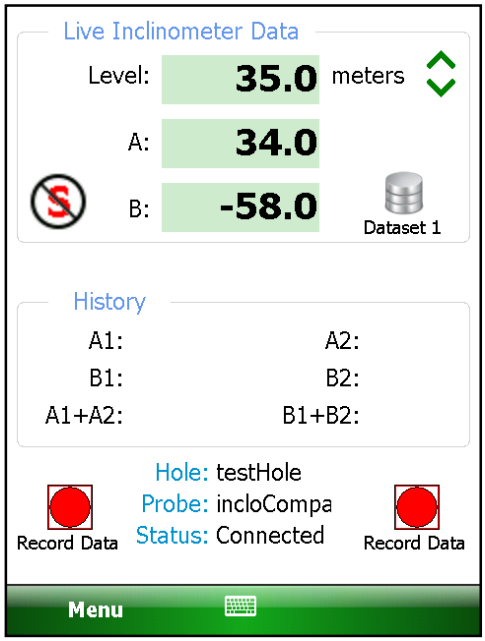

Figure 66 - Unstable Indication

Visual/Audible:
When this stability indication is selected, in addition to the icon shown in Figure 65 and Figure 66, an audible indication is played indicating the reading's stability or instability.

Selecting Visual/Audible will enable the drop-down lists for "Stable Sound" and "Unstable Sound" in Figure 63. These lists display the choices of sounds that the HHD can make when the reading in the "Live Readings" screen is determined to be stable or unstable.

Tapping on the plays a preview of the actual sound heard.

3.3.5.2 Stability Filter

If the "Stable Indication" (see Section 3.3.5.1) selection is set to something other than "None", this parameter will be enabled and a drop-down list will facilitate the entry of a number that is used to determine readings stability (a value less than 10 is recommended).

When taking live readings, if the difference between two subsequent readings of the A **and** B channels are less than or equal to the "Stability Filter" then the reading will be deemed stable and, if enabled, the "Stability Indication" icon (see Figure 65 and Figure 66) will be set accordingly.

3.3.5.3 Auto Record Data

If this selection is set to “Enable”, upon entry into the “Live Readings” screen, the “Auto Record” feature will be enabled (Figure 67).

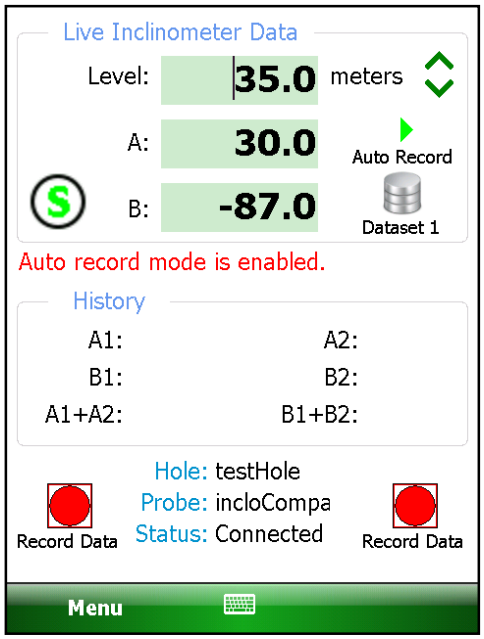

Figure 67 – Auto Record Enabled

To activate the “Auto Record” feature, tap on the Auto Record icon. The green “Play” icon above “Auto Record” will be replaced with a red “Pause” icon and the red text status message will change to “Auto record mode is active”. If the readings are stable, the first reading will automatically be recorded (Figure 68).

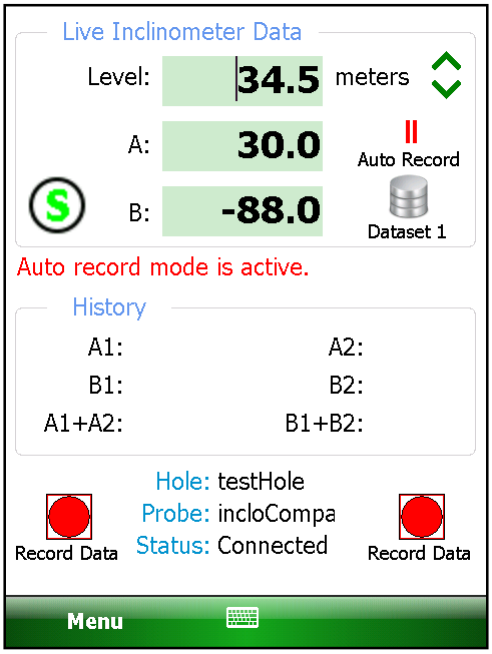

Figure 68 - Auto Record Active

The list of steps below illustrates the proper way to utilize the “Auto Record” feature. For the purpose of this example, the following is assumed:

- The hand-held device is connected via Bluetooth to the Remote Module
- In System Configuration, the “Stable Indication” parameter is set to “Visual/Audible” and the “Auto Record Data” parameter is set to “Enable” (Figure 63).
- At the start of an “Auto Record” sequence, the probe should be down the casing at the starting level, in the “A+” orientation.

NOTE: An “Auto Record” survey can be paused at any time and restarted as long as the probe is moved to the proper level reflected by the “Level:” display. When an Auto Record survey is paused, the data can still be recorded in the “normal” fashion by tapping on the “Record Data” buttons.

1) Tapping on the “Live Readings” menu item displays the screen shown in Figure 67).

2) As in the normal operation, readings are continuously updated from the remote. The data set always starts with ‘Dataset 1’ (can be switched at any time to ‘Dataset 2’). At the start, the “Level” is set to the “Starting Level”, previously set in the Hole Settings screen (see Section 4.1, Figure 100).

3) Tap on the Auto Record icon to activate the “Auto Record” feature. The red status text message will change to “Auto record mode is active” and the green “Play” icon will change to the red “Pause” icon. If the readings are stable, the initial A & B readings will be taken and a “beep” sound should be heard, confirming that the readings have been stored. If no beep is heard, tap the “volume” control at the top of the screen and adjust the volume.

4) By pulling on the inclinometer cable, move the probe to the next level, ensuring that the cable marker/ferrule sits just above the cable grips in the pulley assembly, (or securely in the cable hold if one is used). Approximately one second after moving the probe, the system will determine that the readings are no longer stable. The stability icon will be set to its unstable state “”and the “Unstable” sound selected in the “System Configuration” screen (see Figure 63) will be played.

5) Approximately two seconds after the cable marker/ferrule is locked in the cable grips, (or cable hold), the system will determine that the readings are again stable and respond by setting the stability icon to its stable state and the “Stable” sound selected in the “System Configuration” screen (see Figure 63) will be played. Immediately following the stable sound, the current readings are stored, the record “beep” is heard, and the level is decremented by the preselected interval.

6) Repeat steps four and five until all the “A+” readings have been taken.

7) Tap the “Dataset 1” icon and observe that the red status text message will change to “Auto record mode is paused” and the “Pause” icon will change to the “Play” icon while “Dataset 1” becomes “Dataset 2” (Figure 69).

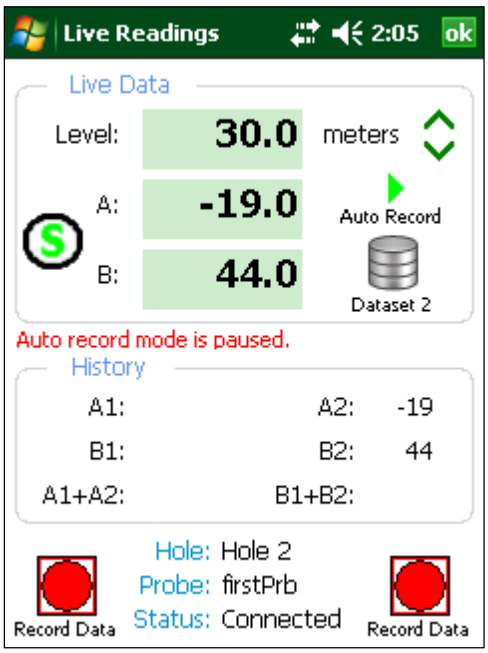

Figure 69 - Auto record paused, Dataset two Selected

8) After rotating the probe 180 degrees, lower it back to the "Starting Level" appropriate for this hole. Repeat step three.

9) Repeat steps four and five until all the "A-" readings have been taken.

10) When done taking readings, tap the "Menu" item (bottom-left corner of the screen), followed by "Exit Live Readings". You will be given the option to save the readings to a file (Figure 70).

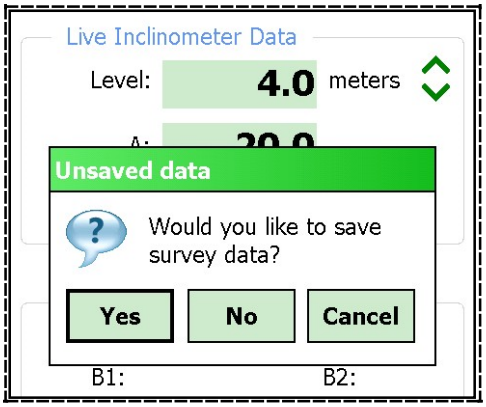

Figure 70 - Unsaved Data Prompt

11) Even if "No" is selected, the readings will be saved to a temporary file and can be restored the next time the Live Readings screen is entered.

12) If "Yes" is selected, then another dialog box will be displayed giving the choice of saving with the auto-increment suffix on the standard filename (Figure 71). Selecting "Yes" again causes the save operation to be carried out using a filename of the form: *[Hole_Name][3 digit AutoIncr_Suffix].GKN*

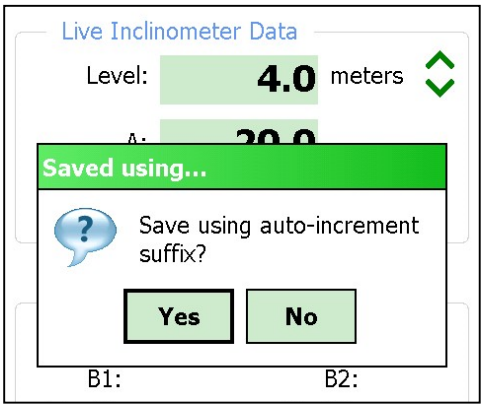

Figure 71 - Auto Increment Save

13) If "No" is selected (to the auto incrementing option) the standard **File Save As** screen (Figure 72) will be shown giving the option of modifying the file name to another name of the user's choosing. Use the stylus to click on the keyboard icon (bottom) and make the changes desired.

Figure 72 - Save File Screen

3.3.5.4 Finish Survey with:

This parameter (set in the System Configuration Screen, Figure 63) deals exclusively with "unfinished" survey data files. A survey is unfinished if readings were not taken at each level from starting up to the zero level. Many surveys may not completely finished because the geometry of the probe will not allow the last reading or two to be taken while the probe is still in the casing.

Valid choices for this selection include:

Nothing:
The survey will not be filled in and will remain unfinished. "READINGS" will be modified to reflect the actual number taken. See Figure 73.

```
      :
      :
      :
#READINGS:5
FLEVEL,    A+,    A-,    B+,    B-
     5.0,    45,    12,   -87,    81
     4.5,    46,    12,   -84,    81
     4.0,    44,    12,   -85,    82
     3.5,    46,    13,   -85,    82
     3.0,    44,    13,   -86,    82
```

Figure 73 - Readings Updated to Reflect Number Taken

NaN(s):
Each missing level "row" of the survey will be filled in with "NaN(s)" which is the floating-point representation of a non-numerical value. NaN is an abbreviation for "Not a Number". See Figure 74.

```
      :
      :
      :
#READINGS:11
FLEVEL,    A+,    A-,    B+,    B-
   5.0,    32,    25,   -81,    82
   4.5,    33,    24,   -81,    82
   4.0,    30,    24,   -81,    82
   3.5,    30,    24,   -80,    81
   3.0,    29,    24,   -80,    81
   2.5,    29,    24,   -81,    81
   2.0,    30,    24,   -83,    81
   1.5,   NaN,   NaN,   NaN,   NaN
   1.0,   NaN,   NaN,   NaN,   NaN
   0.5,   NaN,   NaN,   NaN,   NaN
   0.0,   NaN,   NaN,   NaN,   NaN
```

Figure 74 - Survey filled with NaN(s)

Blanks:

Each missing level "row" of the survey will be filled in with blank characters. See Figure 75.

```
      :
      :
      :
#READINGS:11
FLEVEL,    A+,    A-,    B+,    B-
   5.0,    46,    17,   -86,    80
   4.5,    46,    17,   -86,    82
   4.0,    46,    14,   -86,    81
   3.5,    42,    19,   -86,    80
   3.0,    50,    18,   -86,    80
   2.5,    45,    12,   -86,    80
   2.0,      ,      ,      ,
   1.5,      ,      ,      ,
   1.0,      ,      ,      ,
   0.5,      ,      ,      ,
   0.0,      ,      ,      ,
```

Figure 75 - Missing Rows Filled with Blank Characters

3.3.5.5 Remote Record Switch:

If this parameter is "Enabled", an auxiliary switch can be used to record data points without having to tap the "Record Data" buttons on the Nautiz screen. A "remote" "Record Data" event is triggered by shorting pins seven and eight of the RS-232, DB-9 connector (Figure 76) on the Nautiz.

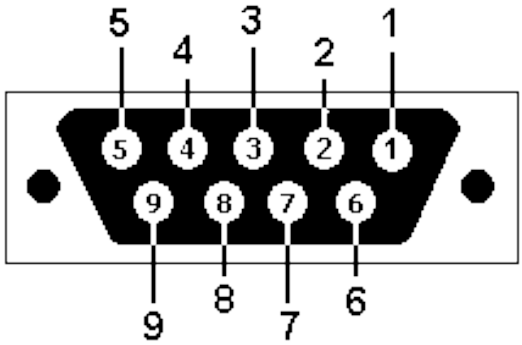

Figure 76 - Male DB-9 housing (female pins)

3.4 File Menu

The file menu (Figure 77) is used to import and export Project Explorer element settings along with data export, viewing and report generation. It also is used to fully delete and/or restore previous deleted Project Explorer elements.

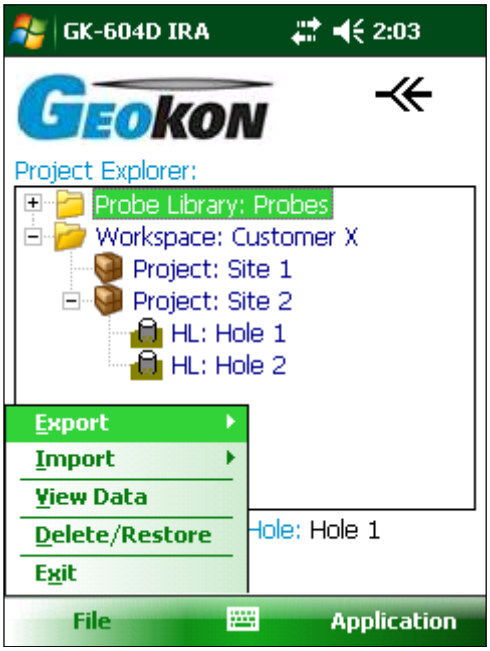

Figure 77 - File Menu

3.4.1 Export Menu

The Export menu (Figure 78) is used to export hole data and Project Explorer element settings to a folder of the user's choosing.

Figure 78 - Export Menu

3.4.1.1 Export Data Menu

The Export Data menu allows exporting of data from the current hole, either selected via the Project Explorer or listed in the status area. Figure 79 shows the files available for hole, “Hole1”. A file may be selected by tapping and holding on the file name. When a context menu is displayed, tap on “Select” to select the file for exporting. Multiple files may be selected. Once all the desired files are selected, tap “Export” to display the Save File window (Figure 80) where a new name and folder may be specified for each file.

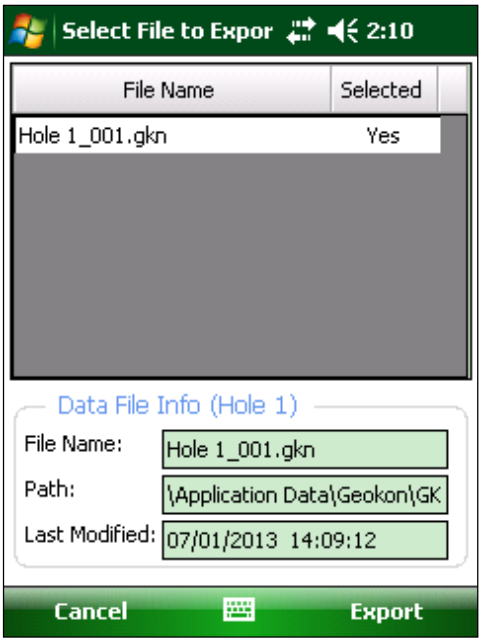

Figure 79 - Export Data Window

Figure 80 - Save Data File

3.4.1.2 Export Hole Settings

Clicking on this menu item displays the “Select Export Path” window (Figure 81), from which a path to export the hole settings file can be selected. All files within the hole element folder are compressed into a single export file. The naming format for the hole export file is: <Selected Path> + <Hole Name> + “.lvhe”

3.4.1.3 Export Project Settings

Clicking on this menu item displays the “Select Export Path” window (Figure 81), from which a path to export the project settings file can be selected. All files within the project are compressed into a single export file. The naming format for the project export file is: <Selected Path> + <Project Name> + “.lvpe”

3.4.1.4 Export Probe Settings

Clicking on this menu item displays the “Select… …Probe” window (Figure 82), from which a probe can be selected. After selecting a probe, the “Select Export Path” window (Figure 81) is displayed, from which a path to export the probe settings file can be selected. The naming format for the probe export file is:
<Selected Path> + <Probe Name> + “.gkpe”

3.4.1.5 Export Probe Library

Clicking on this menu item displays the "Select Export Path" window (Figure 81), from which a path to export the probe library files can be selected. All files and folders within the probe library are compressed into a single export file. The naming format for the probe library export file is: <Selected Path> + <Probe Library Name> + ".gple"

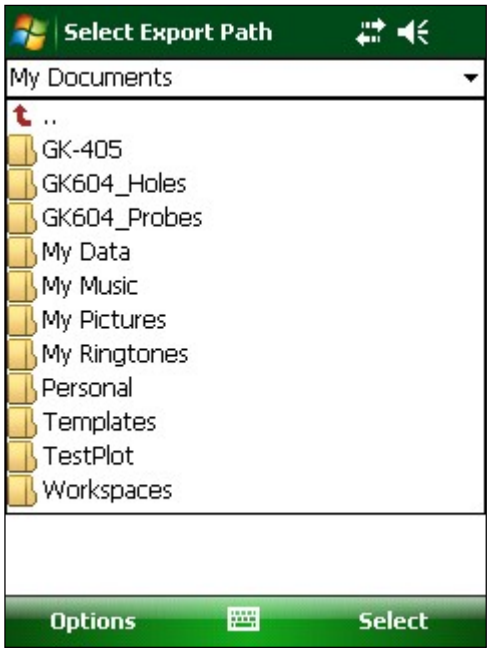

Figure 81 - Select Export Path

Figure 82 - Probe Selection Window

3.4.2 Import Menu

The Import Menu is used to import Project Explorer element settings (see Figure 83) that were previously exported using the Export Menu functions (see Figure 78).

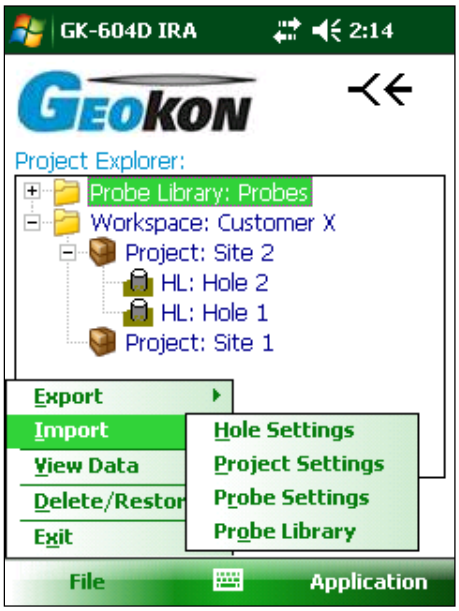

Figure 83 - Import Menu

3.4.2.1 Import Hole Settings

Clicking on this menu item displays the "Select .LVHE File" window (Figure 84), from which a hole export file can be selected (see Section 3.4.1.2). After selection, a new "Hole" will be created in the currently selected project. This new "Hole" will contain all the settings and any data files that were contained in the hole export file. If a hole with the same name already exists in the currently selected project a message will be displayed and the hole import will be cancelled.

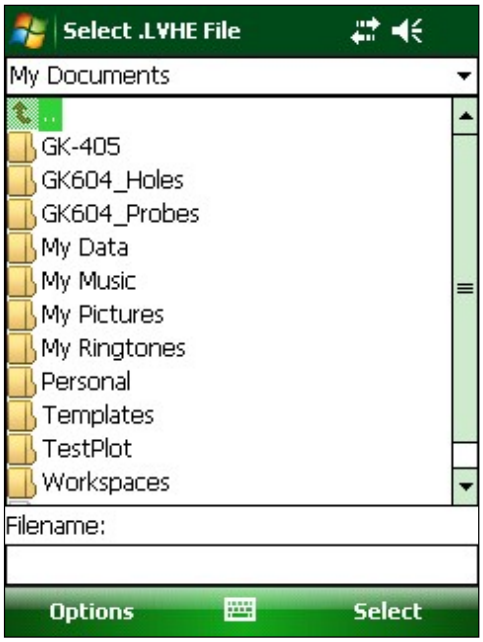

Figure 84 - Select Hole Export File

3.4.2.2 Import Project Settings

Clicking on this menu item displays the "Select .LVPE File" window (Figure 85), from which a project export file can be selected (see Section 3.4.1.3). After selection, a new "Project" will be created in the current workspace. This new project will contain all the settings and any "holes" that were contained in the project export file. If a project with the same name already exists in the current workspace, a message will be displayed and the project import will be cancelled.

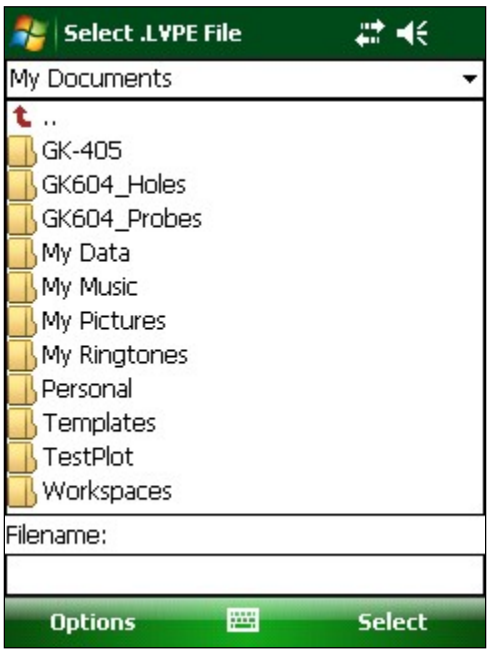

Figure 85 - Select Project Export File

3.4.2.3 Import Probe Settings

Clicking on this menu item displays the "Select .GKPE File" window (Figure 86), from which a probe export file can be selected (see Section 3.4.1.4). After selection, a new "Probe" will be created in the current probe library. This new probe will contain all the settings that were contained in the probe export file. If a probe with the same name already exists in the current probe library, a message will be displayed and the probe import will be cancelled.

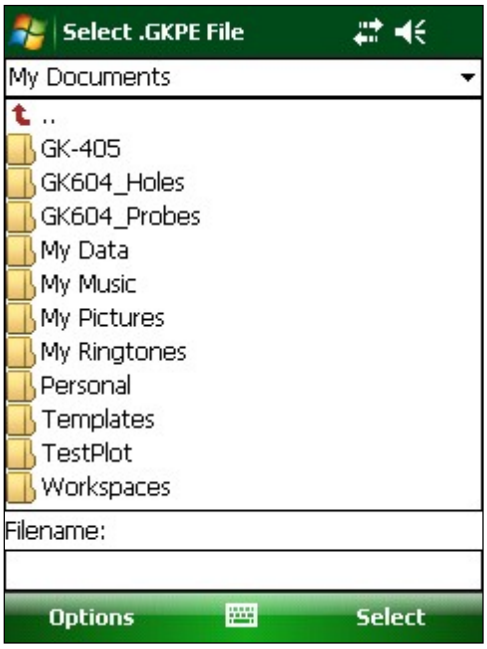

Figure 86 - Select Probe Export File

3.4.2.4 Import Probe Library

Clicking on this menu item displays the "Select .GPLE File" window (Figure 87), from which a probe library export file can be selected (see Section 3.4.1.5).

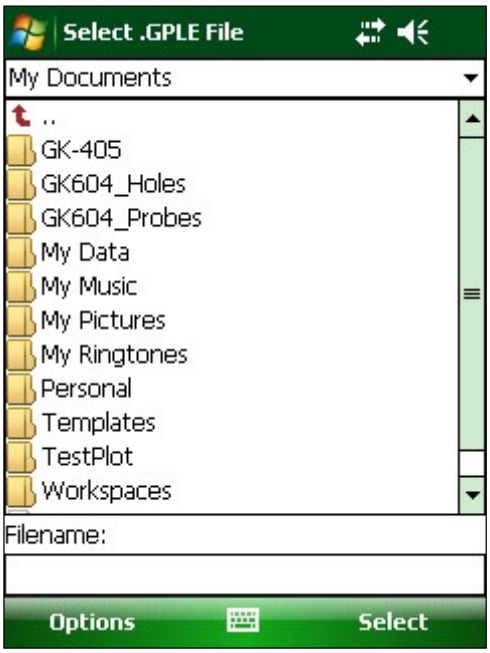

Figure 87 - Probe Library Export File

After selection, a message query will be displayed (Figure 88) asking the user if they would like to make the imported probe library the current one. Answering "Yes" to the query will replace the current probe library with the imported probe library. Answering "No" will simply add the new probe library to the list of probe libraries that the GK-604D IRA keeps track of. The new probe library can be "switched" to at a later date.

Figure 88 - Probe Library Switch

3.4.3 View Data

When the View Data Menu is clicked, the screen displayed in Figure 89 is shown. The Select View Options screen (Figure 90) is used to select a view option and data files to view a graphical or tabular report. The available "View" options are explained in the following subsections.

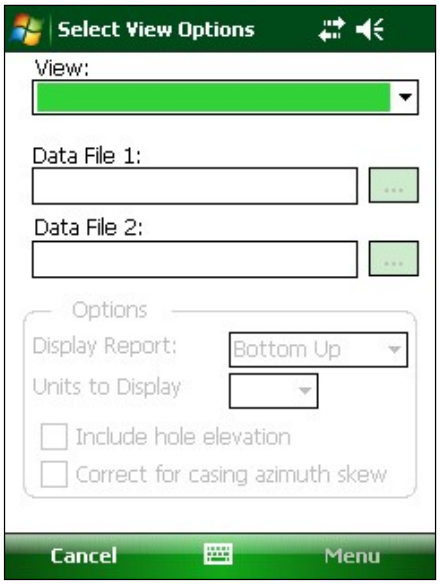

Figure 89 - Select View Options Window

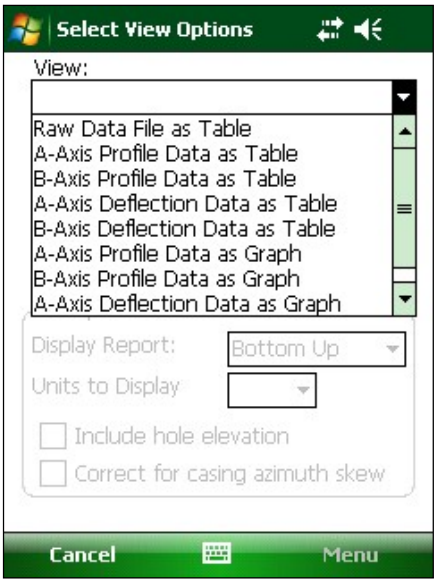

Figure 90 - View Option List

3.4.3.1 Raw Data File as Table

This selection will cause the selected "hole" raw data to be displayed or saved in tabular form. Figure 91 shows the available options for any report. Figure 92 illustrates the report as viewed on the FPC-2 unit. See Appendix C for examples of reports saved in text form. Tabular reports may also be saved in comma-separated value (.csv) or "Text" (.txt) format.

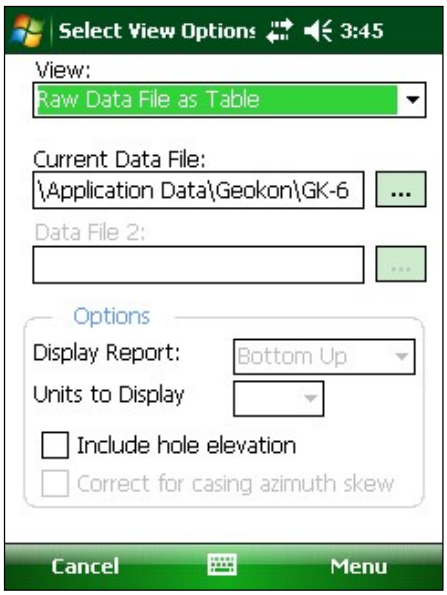

Figure 91 - Menu Options for Reports

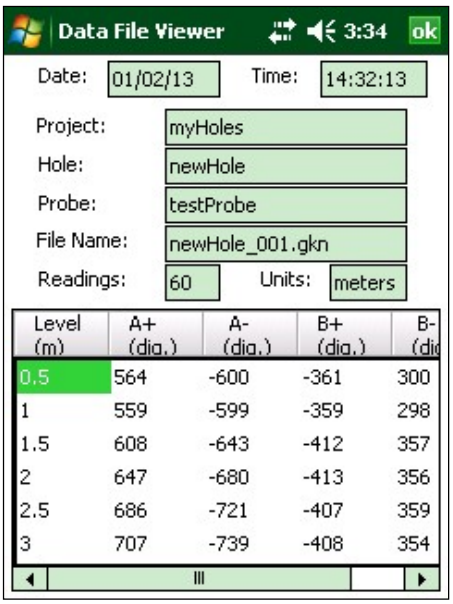

Figure 92 - Raw Data Report

3.4.3.2 Axis Profile Data as Table

Selecting this option allows viewing or saving hole profile data for the A or B axis (Figure 93). The profile is calculated from the magnitude of the readings at each level.

This report lists the profile of the casing as calculated from the bottom of the casing upward or from the top down (see the Options pane in Figure 91). Tabular reports may also be saved in comma-separated value (.csv) or "Text" (.txt) format**. (**See Appendix C for an example of a profile report saved in text form.)

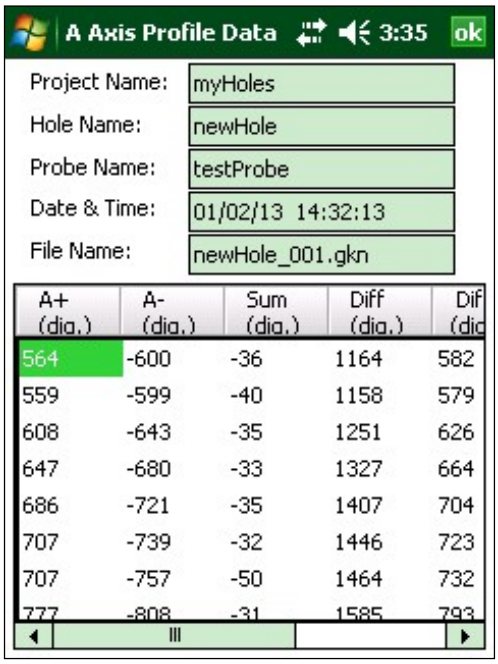

Figure 93 - Axis Profile Report

3.4.3.3 Axis Deflection Data as Table

Selecting this option allows viewing or saving hole deflection data for the A or B axis (Figure 94). Deflection is determined from the accumulated change in deflection between the two selected data files at each level.

This report lists the deflection of the casing as accumulated from the bottom of the casing upward or from the top down (see the Options pane in Figure 91). Tabular reports may be saved in comma-separated value (.csv) or "Text" (.txt) format**.** (See Appendix C for an example of a deflection report saved in text form.)

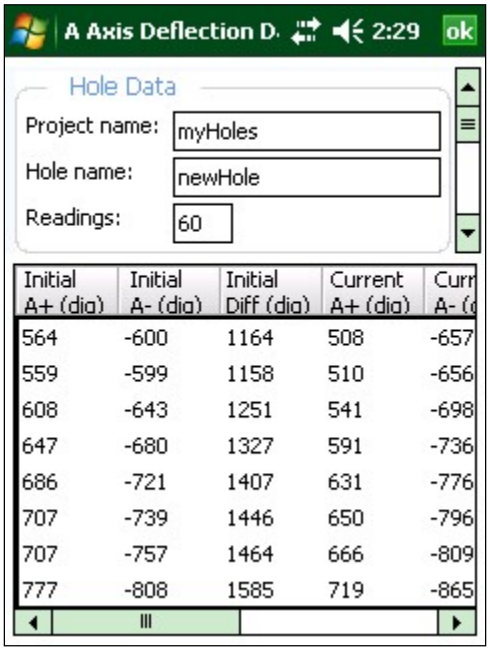

Initial A+ (dig)	Initial A- (dig)	Initial Diff (dig)	Current A+ (dig)	Curr A- (
564	-600	1164	508	-657
559	-599	1158	510	-656
608	-643	1251	541	-698
647	-680	1327	591	-736
686	-721	1407	631	-776
707	-739	1446	650	-796
707	-757	1464	666	-809
777	-808	1585	719	-865

Figure 94 - Axis Deflection Report

3.4.3.4 Axis Profile Data as Graph

Selecting this option allows a graphical view of hole profile data and is useful for visualizing the actual installed characteristics (inclination, couplings, anomalies, etc.) of the casing. Figure 95 shows a typical profile plot. Tapping on the icon in the upper-left corner of the plot (a circle with a vertical line), enables a “marker” line on the plot. Moving the marker line by tapping and dragging shows corresponding X and Y values below the plot (see Figure 96). “Screen-shots” of graphical reports may be saved in “.bmp” format”.

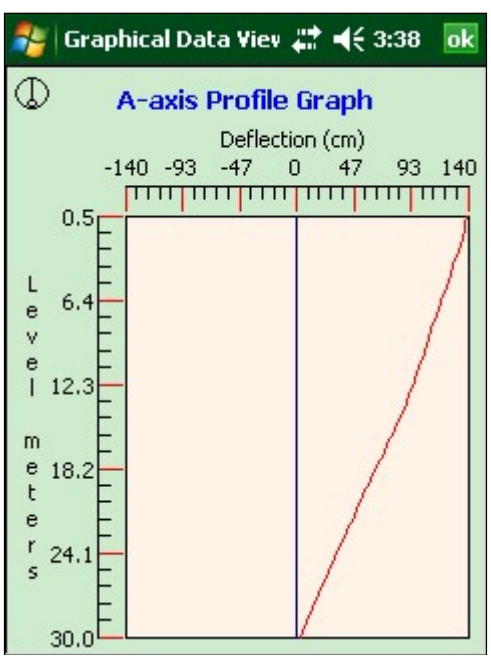

Figure 95 - Profile Plot

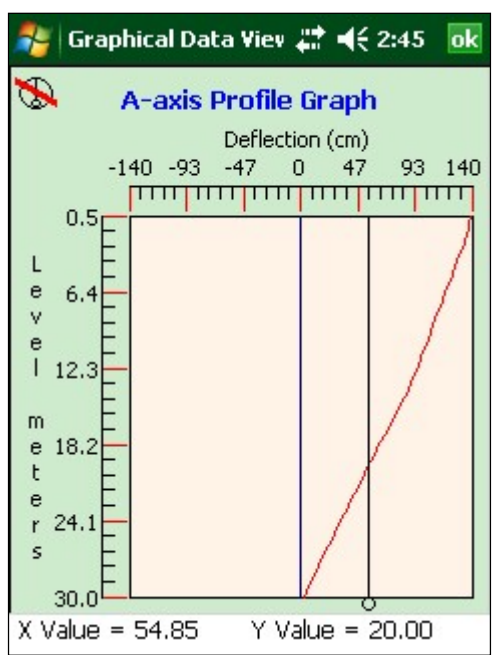

Figure 96 - Profile Plot - Marker On

3.4.3.5 Axis Deflection Data as Graph

Selecting this option allows a graphical view of hole deflection data for either axis (Figure 97). This view is useful for visualizing magnitude and direction of any movement of the borehole. “Screen-shots” of graphical reports may be saved in “.bmp” format”.

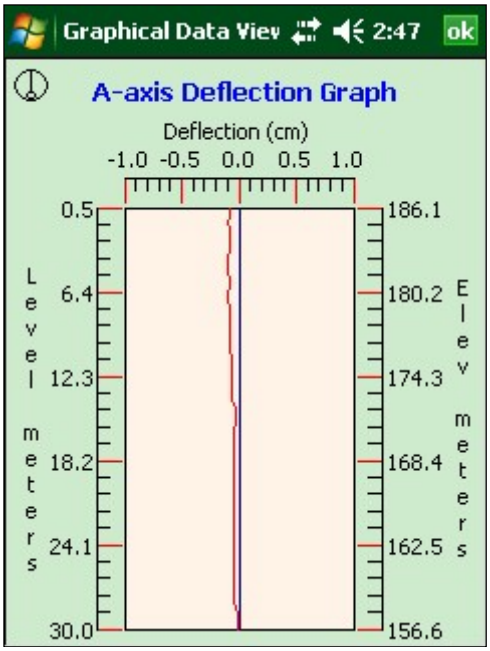

Figure 97 - Deflection Plot

3.4.4 Delete/Restore Menu

This menu allows Project Explorer elements to be permanently deleted or restored back to their original location. A special folder is reserved for storing project explorer elements that are deleted from a workspace. Data files from the currently selected hole can also be deleted. Tapping the Delete/Restore menu causes the GK-604D IRA to search this folder to see which elements are available for restoring or permanent deletion.

As can be seen in Figure 98, there are holes, projects, probes and probe libraries that are stored in the special folder that can be either restored or permanently deleted. Figure 99 shows the window that is created when the “Holes” button is tapped in Figure 98.

Figure 98 - Delete / Restore Window

Figure 99 - Hole Delete / Restore Window

In each element delete/restore window, an element may be selected by tapping and holding on the element name. When a context menu is displayed, tap on “Select” to select the file for deleting or restoring. Multiple files may be selected. Once all the desired files are selected, tap either “Delete” or “Restore” from the “Menu” options.

WARNING! Selecting “Delete” will permanently delete the selected element and later restoration will **NOT** be possible.

3.4.5 Exit

Tapping on this menu item will cause the program to cease execution.

4. CONFIGURING PROJECT EXPLORER ELEMENTS

Each project explorer element has settings that can be configured. For some, like Workspace, Probe Library, and Project, the settings consist only of a name and description. Elements such as Holes and Probes require more configuration parameters such as English/metric units, initial level, and gauge factors. These settings can be adjusted to meet the user's needs and the specifications of the probe. The software currently supports three different probe types and as many probe and hole configurations as the Field PC can store in memory. All these can be adjusted using the Edit Settings option from the Context or Application Menu.

4.1 Hole Configuration

Figure 100 depicts the Hole General Settings, the first screen of the Edit Hole Settings dialog. When done editing, the settings can be saved via the "Menu->Save Settings" option.

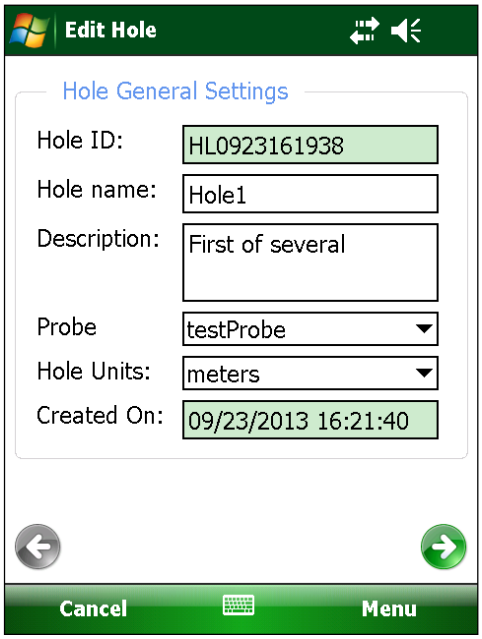

Figure 100 - Hole General Settings

Hole ID:
Read-only value, generated when the hole was created. Used internally by the GK-604D IRA.

Hole name:
Tap on the keyboard icon (bottom of the screen) to bring up the on-screen keyboard. Use it to enter a unique and descriptive hole name.

Description:
Optional parameter. Using the on-screen keyboard; enter a brief description pertaining to the hole's location and purpose.

Probe Name:
Select the Probe Name from the drop down list. This associates a hole with a particular probe. Enter "UNKNOWN" if the probe has not yet been "found".

Hole Units:
The units for the hole level and interval. Select either meters or feet from the drop-down list.

Created On:
Read-only date and time value, generated when the hole was created.

Starting Level:
Using the on-screen keyboard; enter a value for the initial level of the survey for this hole (Figure 101).

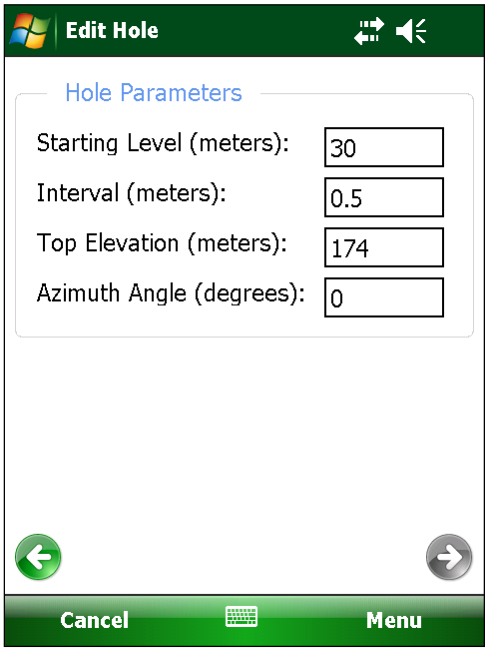

Figure 101 - Hole Parameters

Interval:
Enter an interval to be used for the survey. This value is dependent on Hole Units and is typically .5 meters or two feet.

Top Elevation:
This optional parameter corresponds to the elevation at the top of the hole.

Azimuth Angle:
This optional parameter allows correction of any casing deviation from the appropriate A+ direction.

4.2 Probe Configuration

Figure 102 depicts the General Probe Settings, the first screen of the Edit Probe Settings dialog. When done editing, project settings are saved via “Menu->Save Settings” options.

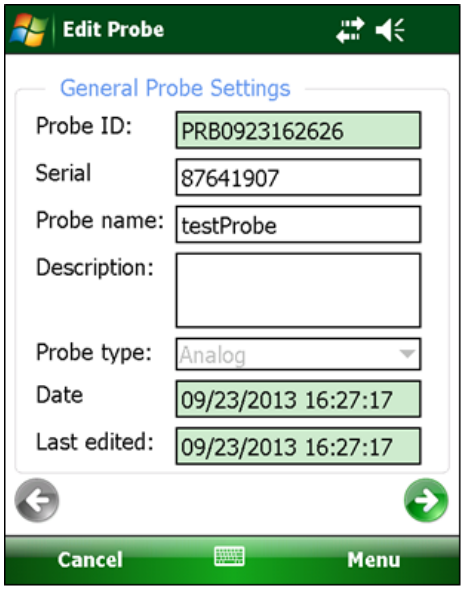

Figure 102 - Probe General Settings

Probe ID:
Read-only value, generated when the probe was created. Used internally by the GK-604D IRA.

Serial number:
Read-only parameter for digital inclinometer probes, read/write parameter for analog and compass probes.

Probe name:
Use the on-screen keyboard to enter a friendly name for the probe

Description:
Optional parameter. Enter a brief description pertaining to the probe

Probe type:
Select a probe type from drop-down list. Choices are: Analog, Digital, Compass, and Tiltmeter.

Compass mode selects the Geokon 6005-3 Spiral Indicator Probe which requires the GK-604-3 Analog Reel System or the GK-604-4 Interface Module. In this mode, the GK-604D IRA will rescale the output to properly display 0-360 degrees on the Live Readings screen. In both Compass and Tiltmeter modes, only one channel (A) is read and displayed on the Live Readings screen and only the A readings are stored in the data file.

Date:
Read-only date and time value, generated when the probe was created.

Last edited:
Read-only data and time value, updated whenever the probe settings are modified.

Figure 103 depicts the Probe Coefficients Settings, the second screen of the Edit Probe Settings dialog. When done editing, project settings are saved via “Menu->Save Settings” options.

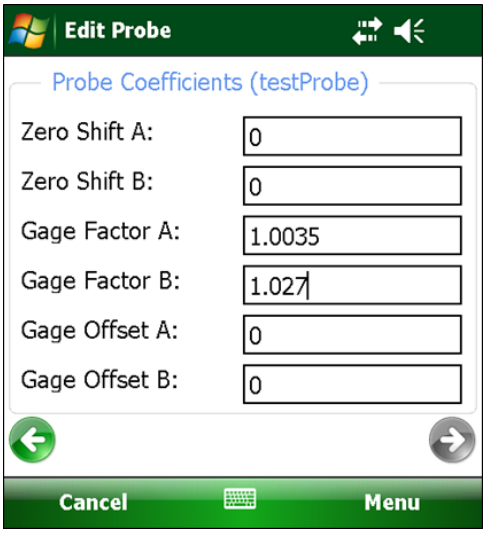

Figure 103 - Probe Coefficients

A and B Channel Zero Shift:
To compensate for any offset at zero, enter appropriate values for the Zero Shift values. See the Inclinometer Probe manual and Calibration sheet for more information. Digital probes may have these values programmed at the factory. When the probe type is set to Compass, the Zero Shift A value should be set to 200. See Appendix H for more information regarding Spiral Indicator Probe operation.

A and B Channel Gauge Factors:
Using the on-screen keyboard, enter appropriate numbers for the two gauge factors (see the Inclinometer Probe manual and Calibration sheet for more information). Digital probes may have these values programmed at the factory. When the probe type is set to Compass, the Gauge Factor A value should be set to 0.1. See Appendix H for more information regarding Spiral Indicator Probe operation.

A and B Channel Gauge Offsets:
These values are typically “0” and are occasionally needed to remove an offset from a Compass probe. Offsets are entered in engineering units using the on-screen keyboard. For a Compass probe there will be no “B” channel and the B Channel value should be left at “0”. Digital probes may have these values programmed at the factory.

When the probe type is set to Compass, the offset can be determined by taking readings (using the Live Readings screen) and determining if the compass value is ever greater than 360. If so, the Gauge Offset A value should be set to 360 – (current reading > 360). For example, if the current compass probe reading is 365 then the Gauge Offset A value = (360 – 365) = -5. See Appendix H for more information regarding Spiral Indicator Probe operation.

If the probe “Type” is set to Tiltmeter, the “B Channel” parameters are not used and can be left at 0. When done editing, the settings can be saved via the “Menu->Save Settings” option.
If connected to a digital Remote Module and digital probe, Zero Shift, Gauge Factor and Gauge Offset changes can be uploaded to the probe via the “Menu->Save and Upload Settings” option.

After tapping “Save and Upload Settings”, the reminder window shown in Figure 104 will be displayed to ensure that the Remote Module is ready to connect.

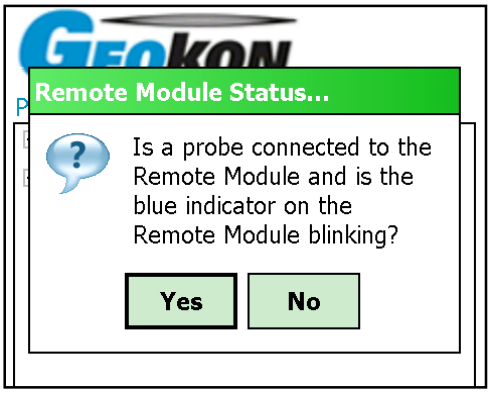

Figure 104 - Ready for Connection?

4.3 Project Configuration

Figure 105 depicts the Projects Settings dialog.

Figure 105 - Project Settings

Project ID:
Read-only value, generated upon project creation. Used internally by the GK-604D IRA.

Project Name:
Use the on-screen keyboard to enter a unique and descriptive project name.

Description:
Optional. Use the on-screen keyboard to enter a brief description pertaining to the project.

Created On:
Read-only date and time value, generated when the project was created.

5. FILES, FOLDERS AND TRANSFERRING DATA

The GK-604D IRA uses several types of files and dedicated folder locations to keep track of Workspaces and Project Explorer element configuration files, such as hole and probe configuration files and data files. The default locations and names for most of these appear in Table 1.

CAUTION! Manual editing any of the configuration files or renaming folders above may result in data loss or unexplained operation and is strongly discouraged.

Purpose	**Default Folder**	**Filename**
GK-604D IRA preferences and configuration	\Application Data\Geokon\GK-604D\	Config.xml
Workspace repository	\Application Data\Geokon\GK-604D\Workspaces\	N/A
Probe Library repository	\Application Data\Geokon\GK-604D\Probe Libraries\	N/A
Project repository (Workspace)	\Application Data\Geokon\GK-604D\Workspaces\<WRK_SPC_FLDR>\[1]	.wkspc
Hole repository (Project)	\Application Data\Geokon\GK-604D\ Workspaces\<WRK_SPC_FLDR>\ <PROJECT ID>\	.proj
Hole configuration	\Application Data\Geokon\GK-604D\ Workspaces\<WRK_SPC_FLDR>\ <PROJECT ID>\<Hole ID>\	.hole
Data Files (per Hole)	\Application Data\Geokon\GK-604D\ Workspaces\<WRK_SPC_FLDR>\ <PROJECT ID>\<Hole ID>\data\	*.gkn
Probe repository (Probe Library)	\Application Data\Geokon\GK-604D\Probe Libraries\ <PRB_LIB_FLDR>\[2]	.prblib
Probe configuration	\Application Data\Geokon\GK-604D\Probe Libraries\ <PRB_LIB_FLDR>\<Probe ID>\	.probe

Table 1 – Folder paths and File Names

[1]<WRK_SPC_FLDR> is usually the same as the workspace name but is not required to be.
[2]<PRB_LIB_FLDR> is usually the same as the probe library name but is not required to be

5.1 File Transfer

In general, the only files generated by the GK-604D IRA that will have to be transferred are the "hole" data files, although periodically archiving others on a "master" PC is recommended. Connecting the Field PC to a desktop or laptop PC using the supplied USB cable (Type A to mini B) is straightforward and allows the user to view the Field PC's storage as a flash drive on the desktop/laptop; you can then simply drag the files around to any folder on the desktop/laptop.

- If you are using Windows XP you will need to download and install the program, "ActiveSync". This application is available for free from the Microsoft site (www.microsoft.com and search for "Active Sync download"). Once installed (generally requires a reboot), simply connect the USB cable from the Field PC and then open "My Computer" on the XP machine and see a "PDA" entry under drives. Double click on it to see the folders in the Field PC.

- If you are using Windows Vista or Windows 7, a free application called "Windows Mobile Device Center" is available on Microsoft's website. Once installed, a hardware connection between the Field PC and the desktop/laptop typically initiates the software connection.

It is not necessary to set up any 'syncing' options although it can easily be accomplished. Another Bluetooth partnership can also be set up from your desktop/laptop (assuming they have Bluetooth modules) to the Field PC and transfer files that way.
All of these options (and more) are described in the reference guide of the FPC-2 Field PC, available in the Inclinometer section of the Geokon manuals webpage:
http://www.geokon.com/manuals/

5.2 Backing up configurations

To guard against accidental data loss and as a matter of good computer technique, critical data and configuration files should be periodically backed up.

- Entire projects can be backed up using the Project Export function from the File menu. After exporting, the resulting ".lvpe" file should be transferred to a desktop PC using the techniques described in Section 5.1

- Probe Libraries can be backed up using the Probe Library Export function from the File menu. After exporting, the resulting ".gple" file should be transferred to a desktop PC using the techniques described in Section 5.1

- Although backing up a project automatically includes any data files stored as part of the project element "hole" structure, data files can be individually backed up per hole using the Data Export function from the File menu. After exporting, the resulting ".gkn" file should be transferred to a desktop PC using the techniques described in Section 5.1.

6. MAINTENANCE

The inclinometer probe is a totally sealed unit and, as such, field adjustments are not required.

6.1 O-ring

Maintenance of the 'O' ring on the connector requires that it be kept clean, as well as free of cuts and nicks. Periodic greasing with 'O' lube is recommended. A worn or damaged 'O' ring should be replaced with a new one (five 'O' rings are supplied with each new probe).

6.2 Wheel assemblies

Wheel assemblies should be kept dry when in storage. They should be kept free of dirt by using a compressed air gun to blow away grit. **After every survey, spray the springs, pivots and axles with light oil**. **This is very important and should not be neglected.**

Geokon **recommends lubricating the wheel bearings after each use with waterproof grease** as shown below. This practice forces out any water or contaminates that may be present thus extending the service life.

Figure 106 – Wheel lubricant (ADH-106 Belray Waterproof Grease Type 99540)

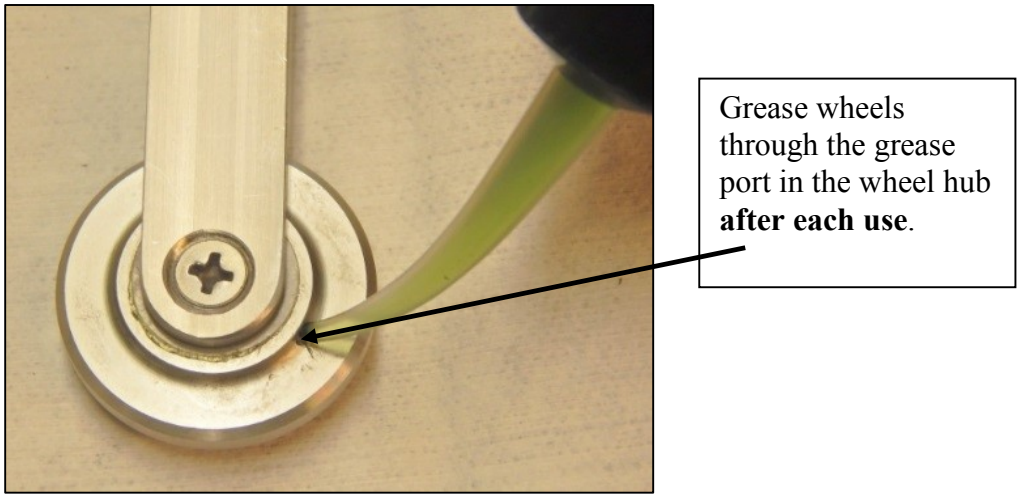

Figure 107 – Greasing wheels

6.3 Water entry

One of the main problems encountered is failure to keep the cable and probe connectors dry. Often this is caused by failure to fully tighten the cable connector to the probe connector. This connection must be made up tight in order to compress the O-ring in the end of the probe connector. Periodically the pins of the probe connector **must** be sprayed with DEOXIT #DN5 spray contact cleaner and rejuvenator. A small spray can of this is supplied with each inclinometer probe. After each daily use, always make sure that the connectors are completely dry before replacing the protective caps. Otherwise, corrosion could result.

6.4 Zero shift changes

If the zero shift changes due to aging or rough handling this will not affect the quality or accuracy of the readings because the shift is removed by taking two sets of readings in the A+ and A− directions. However, if the zero shift changes by more than 5000 digits then the probe should be returned to the factory for repairs. Zero shift can be set to zero at any time using the software inside the GK-604 readout instrument (see Section 4.2).

6.5 Self calibration check

It is good practice to have a piece of inclinometer casing permanently fastened to a fixed immovable structure in the laboratory. This casing is used as a periodic check on the calibration of the probe. Placing the probe in the casing should give a reading that does not change with time.

6.6 Data backup and transfer

Remember, from time to time, to backup and remove the survey data from the Field PC. Failure to do this can cause the physical memory to run out and corrupt the system.

7. TROUBLESHOOTING

7.1 Bluetooth/Connection

7.1.1 "Cannot Connect…the passcode is incorrect"

"Cannot connect. Your device did not connect with GK604DRSNxxxxxxxxx. The connection failed or the passcode is incorrect."

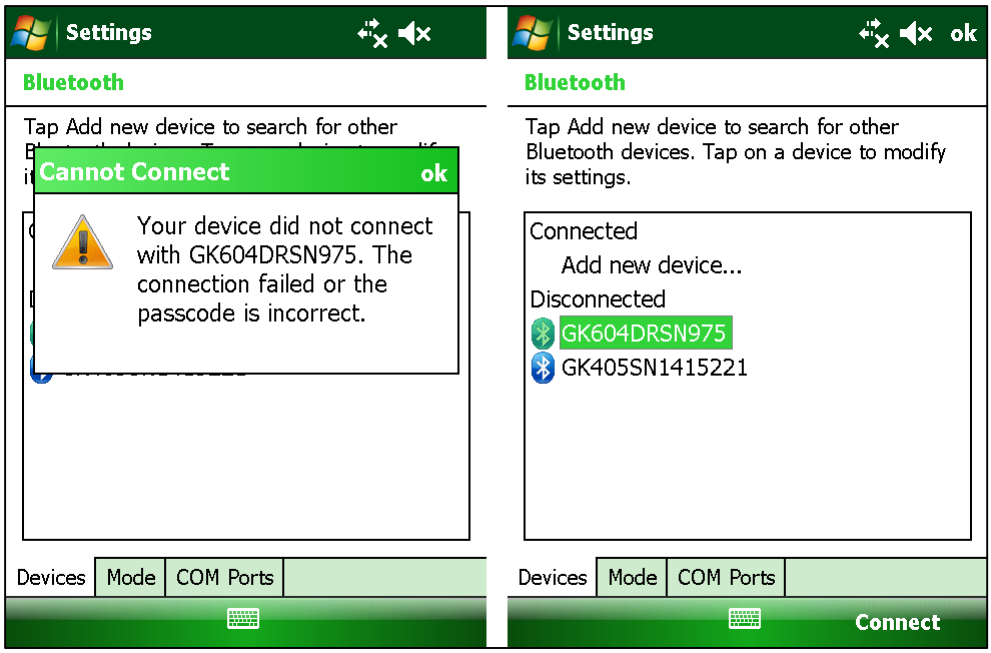

Figure 108 – "Cannot connect…the passcode is incorrect"

The most common cause of this message is by tapping the "Connect" button in the Windows Bluetooth settings window after a successful pairing has been established. This connection method will never be successful and should not be used to test the pairing. To test the pairing, use the GK-604D_IRA program.

*NOTE: If the Connect button is pressed, the pairing remains the same; it is not corrupted and does not need to be set up again.

7.1.2 "Reconnect…Communications Error"

"Reconnect…Communications error: The application was unable to connect to the Remote Module…"

If this error occurs, first verify which COM port is being used by the GK-604D by checking in the COM Port section of the Windows Bluetooth settings. Then select that Bluetooth COM Port from the drop down box in the Communication Error window and tap on Reconnect.

If connection fails multiple times when the verified COM port is selected, perform a full power down and restart of the Field PC, and attempt to connect again through the GK-604D_IRA program.

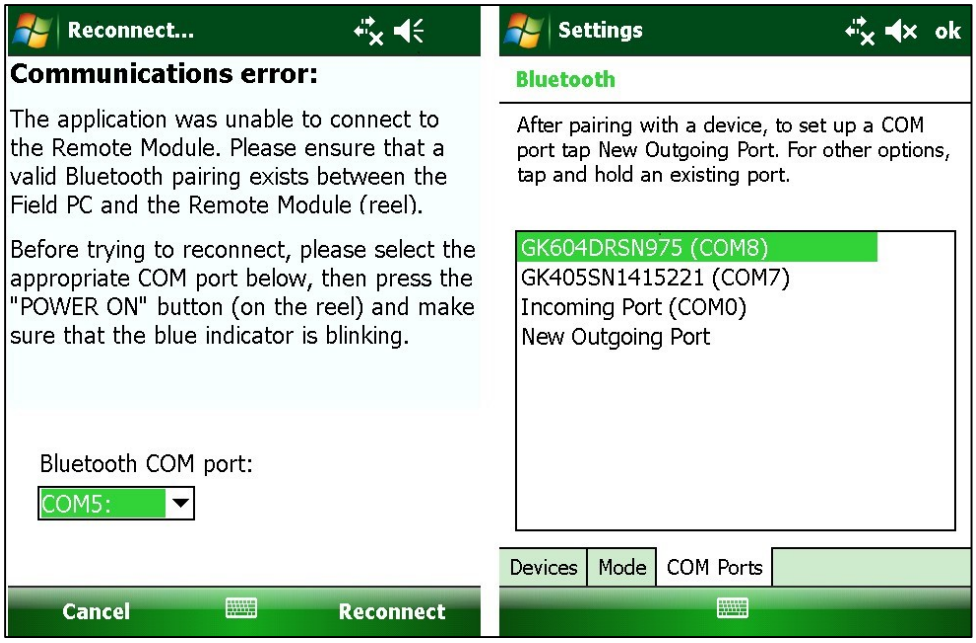

Figure 109 – "Reconnect…Communications error"

7.1.3 "Probe Error"

"Probe Error. Probe communications timeout! Try to re-connect."

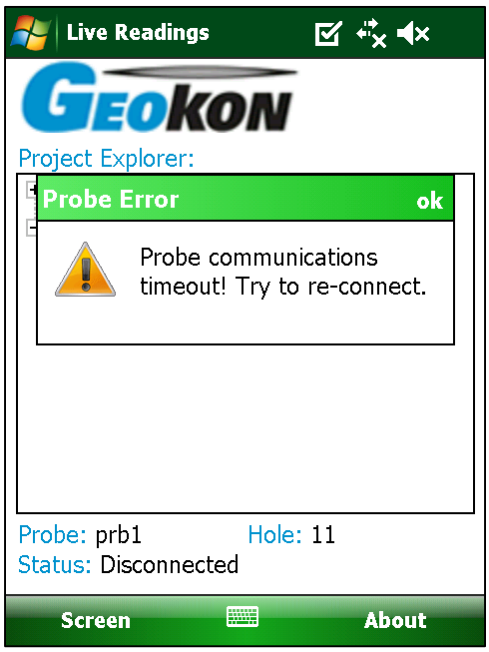

Figure 110 – "Probe error. Probe communications timeout!"

The most common cause of this error is the probe not being connected to the cable reel when Live Readings is attempted. Verify the probe is connected and attempt Live Readings again. If the error persists, there may be damage to the probe or cable.

7.2 Common Troubleshooting Solutions

Problem	Solution
FPC-2 does not power up	Attach FPC-2 charger for two hours, then try again.
When launched, IRA asks for a Probe Library name	Please refer to Section 2.4.
When adding a "**Hole**," "**UNKNOWN**" is the only choice for "**Probe name**."	FPC-2 may not have been purchased as part of the GK-604D system or probe was deleted from library. Please refer to Section 2.2, step 8.a.
The blue indicator light does not blink when the "**POWER ON/OFF (BLUETOOTH)**" button is pressed on the Remote Module.	Attach Remote Module charger for two hours, then try again.
After tapping on the "**Live Readings**" the blue light never goes solid blue and a "**Communications error**" screen is displayed.	Check that the Bluetooth status on the FPC-2 "**Start**" screen in "**On**." Check that there is a valid Bluetooth pairing in the Bluetooth Setting window of the FPC-2. Please refer to Section 2.3.
The GK-604D IRA appears to be "hung" or "frozen" and will not respond to any key press.	Check for a "**background**" error message. An error message may exist behind the main window that requires user input. Tap on "**Start**" and then "**Task Manager**" to see if there is another window hidden.
Blue light on Remote Module does not go off after "Live Readings" window has been exited.	If the above solution does not apply, press the "**POWER ON/OFF (BLUETOOTH)**" button on the Remote Module.

Table 2 - Common Trouble Shooting Problems and Solutions

APPENDIX A. INCLINOMETER THEORY

A.1 Inclinometer Theory

In the geotechnical field inclinometers are used primarily to measure ground movements such as might occur in unstable slopes (landslides) or in the lateral movement of ground around on-going excavations. They are also used to monitor the stability of embankments, slurry walls, the disposition, and deviation of driven piles or drilled boreholes and the settlement of ground in fills, embankments, and beneath storage tanks.

In all these situations it is normal to either install a casing in a borehole drilled in the ground, to cast it inside a concrete structure, to bury it beneath an embankment, or the like. The inclinometer casing has four orthogonal grooves (Figure 111) designed to fit the wheels of a portable inclinometer probe (Figure 112). This probe, suspended on the end of a cable connected to a readout device, is used to survey the inclination of the casing with respect to vertical (or horizontal) and in this way to detect any changes in inclination caused by ground movements.

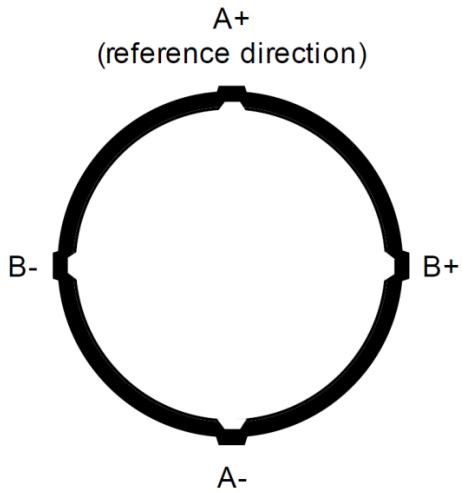

Figure 111 - Inclinometer Casing (end view)

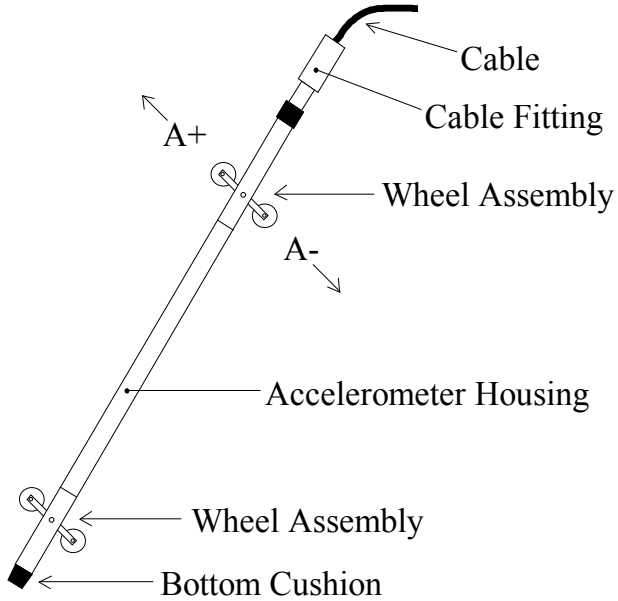

Figure 112 - Inclinometer Probe

The probe itself contains two MEMS, (Micro Electro-Mechanical Sensor), accelerometers, which flex when acted on by the force of gravity. Since the output voltage is proportional to the sine of the angle of inclination, the output is also proportional to horizontal deviation of the borehole (or the vertical deviation of a horizontal borehole).

In order to obtain a complete survey of the ground around the installed inclinometer casing it is necessary to take a series of tilt measurements along the casing. Typically, an inclinometer probe has two sets of wheels separated by a distance of two feet (English system) or .5 meter (Metric system). A casing survey would begin by lowering the probe to the bottom of the casing and taking a reading. The probe would then be raised at two foot (English system) or .5 meter (Metric system) intervals and a reading taken at each interval until the top of the casing is reached. The set of readings thus generated is called the A+ readings. Marks on the cable at two foot (English) or .5 meter (Metric) spacing facilitate the process. The probe is then removed from the casing, rotated through 180°, replaced in the casing, lowered to the bottom of the borehole and a second set of readings (the A− set) obtained as the probe is raised at the reading interval.

Inclinometer probes usually contain two accelerometers with their axes oriented at 90° to each other. The A axis is in line with the wheels (Figure 112 illustrates) with the B axis orthogonal to it. Thus, during the survey, as the A+, A− readings are obtained, the B+, B− readings are also recorded.

During the data reduction, these two sets of readings (A+, A− and B+, B−) are combined (by subtracting one set of readings from the other) in such a way that the effect of any zero offset of the force balance accelerometer is eliminated. [This zero offset is the reading obtained from the inclinometer probe when it hangs vertical. Ideally, the offset (or bias) would be zero, but usually there is a zero offset, which can change during the life of the probe. This change is most likely due to a sudden shock to the transducer caused by dropping or allowing it to hit too hard against the bottom of an installed inclinometer casing, but it can also be due to drift of the transducer or wear and damage of the wheels.

Subsequent surveys of the inclinometer casing, when compared with the original survey, will reveal any changes of inclination of the casing and locations at which these changes are taking place. Analysis of the change of inclination is best performed by computing the horizontal offset of the upper wheels relative to the lower wheels which has produced the tilting (θ) over the reading interval (L) of the survey (usually the wheel base of the probe, two feet for English systems, .5 meter for Metric). At each position of the inclinometer, the two readings taken on each axis (A+, A− and B+, B−) are subtracted from each other leaving a measure of sineθ. This value is then multiplied by the reading interval (L) and the appropriate factor to output horizontal deflection in engineering units (inches for English, centimeters, or millimeters for Metric) (see Figure 113).

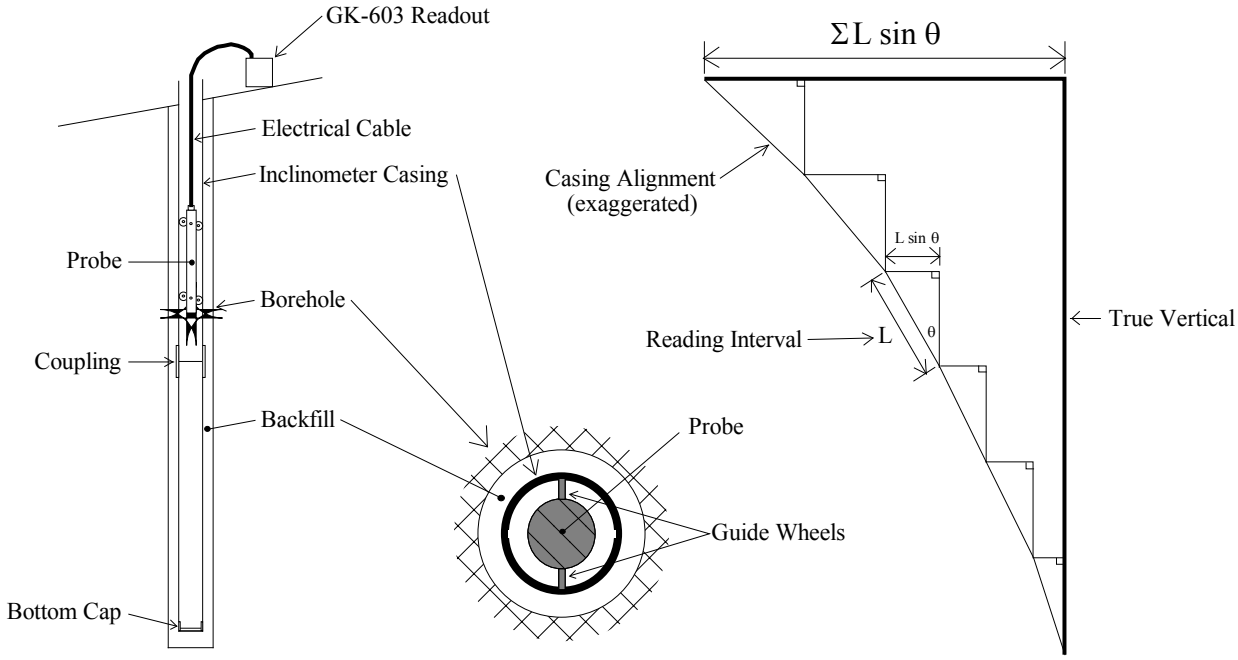

Figure 113 - Inclinometer Survey Description

When all these incremental horizontal deflections are accumulated and plotted, beginning at the bottom of the borehole, the net result is to produce a plot of the change in horizontal deflection between the time of the initial survey and the time of any subsequent survey. From such a deflection plot, it is easy to see at which depth the movement is occurring and its magnitude (Figure 114).

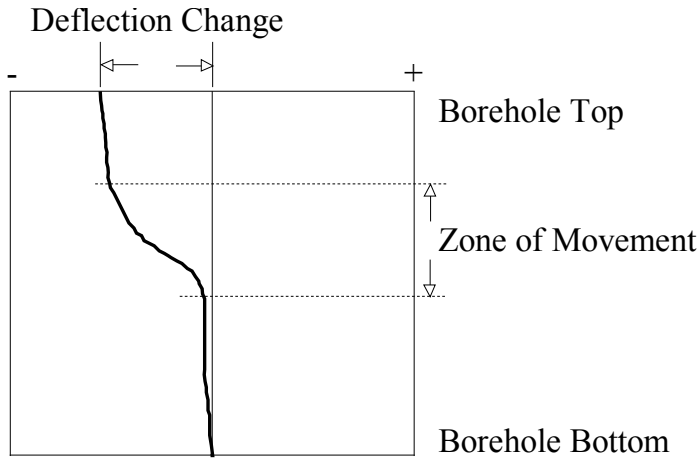

Figure 114 - Plot of Borehole Deflection

Other methods of analysis can be used but generally add little to the overall understanding of the situation. For example, using a single set of data, a profile of the borehole can be created. In addition, a plot can be made of the actual change in reading (inclination) at each measurement depth increment. A plot of this nature reveals the depths at which movement is occurring. This information can be obtained from the change in deflection curve with little difficulty.

One other analysis is the Check Sum (or Instrument Check) which can be used to measure the quality of the survey data.

The quality of the data can be impaired by any or all of the following:

- Skipping over or duplicating a reading.
- Not allowing the inclinometer sufficient time to come to rest before taking a reading.
- Not allowing sufficient time to allow the probe to reach temperature equilibrium before commencing the survey.
- Malfunction of the probe, cable, or readout device. This may be the result of shock, moisture, low battery conditions, opens or shorts in the cable or probe, etc.
- Carelessness when positioning the wheels so that the probe wheels do not rest on the same part of the casing from one survey to the next.
- Positioning the wheels so that they fall right on top of a casing joint, causing the reading to be unstable or simply erroneous.

The Check Sum analysis is performed by adding the A+, A- readings and the B+, B- readings. When this is done, the part of the reading due to the tilt is eliminated, leaving only a value that is equivalent to twice the zero offset of the inclinometer transducer.

A.2 Conducting the survey

The following is a synopsis of the steps involved in taking a survey (see Section 3.3.1 for more details):

1) Attach the cable to the probe making sure that the connector is clean and the O-ring undamaged. Tighten the connector to ensure that the O-ring is compressed and watertight.

2) Twist the probe so that the uppermost wheel fits into the casing groove that faces the direction of the anticipated movement, (In the case of a slope this would be downhill, or, in the case of a foundation wall in the direction of the opening. This guarantees that the measured deflections will be positive. Lower the inclinometer probe to the bottom of the casing. To avoid damage to the probe be careful not to let the probe strike hard against the bottom of the hole.

3) Select the size of pulley assembly, (or cable hold), that matches the inclinometer casing and place it inside the top of the casing. Lift the inclinometer until the first cable marker passes the clamps on the pulley assembly (or sits in the cable hold if a cable hold is being used).

4) Switch on the FPC-2, turn on the Remote Module (blue light blinking) then launch the GK-604D IRA. After verifying that the hand-held unit has connected to the probe, click on the “Live Readings” menu and observe the inclinometer reading. Wait until the probe temperature has stabilized and the reading does not change.

5) Make sure that the GK-604D IRA is set to Data Set 1. Take the first reading, pull up on the cable until the next cable marker sits just above the cable grips on the pulley assembly, (or in the cable hold), and, after a short pause, take another reading.

6) Continue in this way until the top marker is reached, then remove the pulley assembly, (or cable hold), and pull the inclinometer out of the hole.

7) Twist the probe through 180 degrees then lower it to the bottom of the hole. Tap the "Dataset 1" button to select data set 2.

8) Repeat steps three through six.

9) Tap on "Menu->Exit Live Readings" to save the data.

A.3 Checksums and "Face Errors" on Inclinometer Probes

Many users have expressed concern about **checksums or "face errors"** on inclinometer probes. They are concerned with the effect of the "face error" on the accuracy of the readings. The purpose of this section is to show that under normal circumstances the effect of the "face error" or checksum is negligible even with checksums as large as 2000. **The only time a problem would arise is if the face error or checksum was to change between the two halves of a survey**. **This is why it is extremely important not to bang the probe on the bottom of the borehole between survey halves, and not to handle the probe roughly while out of the hole.** The term "face error" comes from surveying terminology. It is normal for all theodolites to have a "face error" which is caused by imperfections of alignment of the collimation axis and other misalignments. These "face errors" are removed routinely by taking two readings of the theodolite: one angle is measured with the face of the vertical scale on the left of the theodolite and another with the face of the vertical scale on the right of the theodolite. The average of the two readings "face right" and "face left" gives the **true angle since the "face error" cancels out.**

Similarly with the inclinometer probe: the "face error" arises from the fact that the axis of the inclinometer probe is not parallel with the electrical axis of the internal, force-balance, servo-accelerometer transducer. Once again, the "face error" is eliminated by taking two surveys of inclinometer readings one with the wheels of the inclinometer probe pointing in one direction and another with the wheels of the probe at 180° to the first direction. If the first set of readings are all too <u>large</u> by the amount of the "face error", then the second set of readings will be too <u>small</u> by the amount of the "face error". Thus the average (or sum) of the two readings will be a measure of the true inclination, since the effect of the face error will be eliminated.

A.3.1 Effect of "Face Error" on reading accuracy

The "face error" or check-sum can only affect the accuracy of the readings if it affects the calibration of the probe. This is possible because the output of the probe transducer is proportional to the sine of the inclination from the vertical and the sine function is non-linear.

Imagine, for a moment, that the electrical axis of the transducer is five degrees away from being parallel with the axis of the inclinometer. This would give rise to a "face error" of 01743. (The inclinometer reader displays 20,000 sin ∅). This would cause one set of readings would be all too large by this amount and the other set of readings from a normal inclinometer survey would be too small by this amount, but the sum of the two readings would be accurate, the "face errors" having canceled out. However, if we assume that the hole is almost vertical then the transducer will be tilted at an angle of 5°. The difference in the slope of the sine function at any point is equal to the cosine of the angle at that point. The cosine of 0 ° is 1.0000 the cosine of 5° is 0.996 so that the effect of this "face error" on the calibration of the probe is to increase it by a factor of 1/0.996 = 1.004.

The practical implication of this would mean that if the apparent deflection of a borehole was 100 mm, the true deflection would be 100.4 mm. For practically all applications in the real world, the difference is insignificant and is a lot less than the differences that normally occur from survey to survey, i.e., a lot less than the precision of the inclinometer probe survey. (Lack of precision is caused by a failure to position the wheels of the probe in exactly the same place from survey to survey; failure to wait sufficiently long to allow the probe transducer to come to rest before reading; and random dirt in the inclinometer casing).

Note that the normal system accuracy of an inclinometer probe is ± 3 mm in 30 meters. By comparison, it can be seen that the normal system accuracy or precision is very much larger than the calibration error caused by the "face error" and that for all practical purposes the "face error" is of no consequence and can be completely discounted if it is less than 2000 digits.

(As another example, supposing the check-sum was as large as 5000 digits. This is equivalent to a gross angular error of misalignment of almost 15 degrees. The effect on the calibration would be a little over 3 % so that the apparent deflection of 100 mm would be out by 3 mm, which again is smaller than the normal data spread due to imprecision).

A.3.2 Measurement of "Face Error"

The "face error" is the reading shown by the inclinometer probe when it is perfectly vertical. In practice, the easiest way to obtain the "face error" is to run a normal inclinometer survey, with the two sets of readings at 180°, and then to run a profile or deflection report (see Appendixes C.2 and C.3, the column labeled "Diff"). Examination of the data will reveal **the average checksum, which is equal to twice the "face error."**

A.3.3 Setting of the "Face Error" to zero

There are three ways of setting the "face error" to zero. None of them is necessary from the point of view of improving accuracy. These methods are detailed in the subsections below.

A.3.3.1 Mechanically

At the time of manufacture, the electrical axis of the transducer is adjusted by means of shims etc., until it points parallel to the axis of the inclinometer probe. This method suffers from the disadvantage that if the ”face error” changes due to wear and tear on the probe and rough handling, or shock loading of the transducer then the probe needs to be returned to the factory for dismantling and re-adjustment.

A.3.3.2 Electrically

Electronic circuitry can be included in the probe so that the output of the transducer can be adjusted to zero when the probe is vertical. The disadvantage of this method is that it introduces electronic components into the inside of the probe which may alter with time, temperature and humidity and which, if the “face error” changes due to wear and tear or rough handling, will require the probe to be dismantled and the electronic circuitry readjusted. In addition, this form of correction does not really remove the “face error”, it only masks it, and if the “face error” is very large, the calibration will be affected.

A.3.3.3 By software

The best way for setting the “face error” to zero is by applying an automatic correction to the measured readings using the software capabilities of the inclinometer readout box.

The procedure for setting the face error to zero is described in Section 4.2, which covers the subject of “Zero shifts”, which are the same as “face errors”. The advantage of this method lies in its simplicity and the ability to set the “face error” to zero at any time without dismantling the probe. This is the method chosen by Geokon.

Another advantage of this method is that it is possible by judicious choice of the “face error” entered into the software program to make one probe give exactly the same digits output as another probe. This is sometimes thought to be desirable where probes are switched and unbroken continuity of the raw data is desired. It is not necessary for reason of accuracy as has already been explained.

The disadvantage of this method is that, if the probe is changed, the operator must remember to change the zero shift offset in the program to accommodate the “face error” of the new probe.

A.3.4 Conclusion

It has been shown that for most practical purposes check-sums of less than 2000 digits are of no consequence and can be completely ignored providing the inclinometer survey is conducted in the normal way. (i.e., two sets of readings at 180°) It has further been shown that the best method by far, for setting the “face error” to zero, is by means of the software capabilities in the inclinometer reader. This is the method chosen by Geokon.

APPENDIX B. DATA FILE FORMAT

B.1 Hole Data GKN File Format

```
***
GK 604M(v1.0.1.0,01/13);2.0;FORMAT II
PROJECT  :myHoles
HOLE NO. :newHole
DATE     :01/02/13
TIME     :14:32:13
PROBE NO.:testProbe
FILE NAME:newHole_001.gkn
#READINGS:61
FLEVEL,    A+,    A-,    B+,    B-
  30.0,  1013, -1052,  -380,   320
  29.5,   945,  -985,  -377,   315
  29.0,   946,  -981,  -346,   290
  28.5,   945,  -978,  -331,   276
  28.0,   995, -1048,  -337,   278
  27.5,  1014, -1050,  -318,   263
  27.0,  1034, -1068,  -316,   265
  26.5,  1046, -1078,  -348,   288
  26.0,  1037, -1075,  -376,   326
  25.5,  1042, -1075,  -415,   366
  25.0,  1079, -1116,  -430,   366
  24.5,  1053, -1087,  -440,   378
  24.0,  1027, -1066,  -449,   385
  23.5,  1024, -1061,  -477,   413
  23.0,  1020, -1054,  -474,   422
  22.5,  1029, -1063,  -500,   448
  22.0,  1099, -1131,  -485,   437
  21.5,  1080, -1116,  -503,   439
  21.0,  1047, -1082,  -514,   462
  20.5,  1043, -1075,  -518,   454
  20.0,  1042, -1077,  -527,   469
  19.5,  1062, -1096,  -542,   480
  19.0,  1074, -1105,  -551,   487
  18.5,  1085, -1118,  -553,   490
  18.0,  1104, -1140,  -572,   513
  17.5,  1097, -1128,  -541,   483
  17.0,  1090, -1125,  -549,   500
  16.5,  1069, -1105,  -545,   493
  16.0,  1103, -1139,  -567,   497
  15.5,  1082, -1129,  -566,   506
  15.0,  1065, -1100,  -553,   495
  14.5,  1052, -1086,  -529,   467
  14.0,  1009, -1045,  -519,   452
  13.5,   956,  -991,  -534,   468
  13.0,   899,  -933,  -558,   492
  12.5,   841,  -874,  -557,   493
  12.0,   800,  -836,  -568,   499
  11.5,   778,  -808,  -547,   482
  11.0,   755,  -789,  -522,   464
  10.5,   752,  -785,  -489,   440
  10.0,   754,  -789,  -465,   409
   9.5,   766,  -802,  -433,   378
   9.0,   769,  -804,  -429,   371
   8.5,   765,  -800,  -435,   372
   8.0,   762,  -795,  -442,   379
   7.5,   785,  -819,  -441,   386
   7.0,   811,  -844,  -456,   388
   6.5,   809,  -842,  -450,   394
   6.0,   802,  -837,  -472,   414
   5.5,   786,  -817,  -464,   398
   5.0,   776,  -809,  -475,   412
```

```
4.5,   788,  -818,  -468,   404
4.0,   777,  -808,  -447,   381
3.5,   707,  -757,  -435,   375
3.0,   707,  -739,  -408,   354
2.5,   686,  -721,  -407,   359
2.0,   647,  -680,  -413,   356
1.5,   608,  -643,  -412,   357
1.0,   559,  -599,  -359,   298
0.5,   564,  -600,  -361,   300
0.0,   565,  -600,  -359,   300
```

NOTE: The date value following the “DATE:” header in the data file above is displayed in the “Short date” format from Regional Settings of the Nautiz. The time value following the “Time:” header in the data file above is always displayed as "HH:mm:ss".

APPENDIX C. TEXT REPORTS

C.1 Raw Data Text Report

```
Hole Survey Raw Data Report
-----------------------------------------------------------------
        Project Name:      myHoles
           Hole Name:      newHole
       Top Elevation:      186.6

           File Name:      newHole_001.gkn
        Reading Date:      01/02/13
        Reading Time:      14:32:13
          Probe Name:      testProbe
-----------------------------------------------------------------
Level  A+     A-     B+     B-     Elev.
(m)    (dig.) (dig.) (dig.) (dig.) (m)
-----------------------------------------------------------------
0.5    564    -600   -361   300    186.1
1             559    -599   -359   298    185.6
1.5    608    -643   -412   357    185.1
2             647    -680   -413   356    184.6
2.5    686    -721   -407   359    184.1
3             707    -739   -408   354    183.6
3.5    707    -757   -435   375    183.1
4             777    -808   -447   381    182.6
4.5    788    -818   -468   404    182.1
5             776    -809   -475   412    181.6
5.5    786    -817   -464   398    181.1
6             802    -837   -472   414    180.6
6.5    809    -842   -450   394    180.1
7             811    -844   -456   388    179.6
7.5    785    -819   -441   386    179.1
8             762    -795   -442   379    178.6
8.5    765    -800   -435   372    178.1
9             769    -804   -429   371    177.6
9.5    766    -802   -433   378    177.1
10            754    -789   -465   409    176.6
10.5   752    -785   -489   440    176.1
11            755    -789   -522   464    175.6
11.5   778    -808   -547   482    175.1
12            800    -836   -568   499    174.6
12.5   841    -874   -557   493    174.1
13            899    -933   -558   492    173.6
13.5   956    -991   -534   468    173.1
14            1009   -1045  -519   452    172.6
14.5   1052   -1086  -529   467    172.1
15            1065   -1100  -553   495    171.6
15.5   1082   -1129  -566   506    171.1
16            1103   -1139  -567   497    170.6
16.5   1069   -1105  -545   493    170.1
17            1090   -1125  -549   500    169.6
17.5   1097   -1128  -541   483    169.1
18            1104   -1140  -572   513    168.6
18.5   1085   -1118  -553   490    168.1
19            1074   -1105  -551   487    167.6
19.5   1062   -1096  -542   480    167.1
20            1042   -1077  -527   469    166.6
20.5   1043   -1075  -518   454    166.1
21            1047   -1082  -514   462    165.6
21.5   1080   -1116  -503   439    165.1
22            1099   -1131  -485   437    164.6
22.5   1029   -1063  -500   448    164.1
23            1020   -1054  -474   422    163.6
23.5   1024   -1061  -477   413    163.1
```

24		1027	-1066	-449	385	162.6
24.5	1053	-1087	-440	378	162.1	
25		1079	-1116	-430	366	161.6
25.5	1042	-1075	-415	366	161.1	
26		1037	-1075	-376	326	160.6
26.5	1046	-1078	-348	288	160.1	
27		1034	-1068	-316	265	159.6
27.5	1014	-1050	-318	263	159.1	
28		995	-1048	-337	278	158.6
28.5	945	-978	-331	276	158.1	
29		946	-981	-346	290	157.6
29.5	945	-985	-377	315	157.1	
30		1013	-1052	-380	320	156.6

C.2 A-axis Profile Data Text Report

Report: A-Axis Digits and Profile in Centimeters (Bottom Up)

Project Name:	myHoles
Hole Name:	newHole
Top Elevation:	186.6
Azimuth Angle:	0.0
File Name:	newHole_001.gkn
Reading Date:	01/02/13
Reading Time:	14:32:13
Probe Name:	testProbe

Elev (m)	A+ (dig.)	A- (dig.)	Sum (dig.)	Diff (dig.)	Diff/2 (dig.)	Defl (cm)	Level (m)
186.1	564	-600	-36	1164	582	139.79	0.5
185.6	559	-599	-40	1158	579	138.34	1
185.1	608	-643	-35	1251	626	136.89	1.5
184.6	647	-680	-33	1327	664	135.33	2
184.1	686	-721	-35	1407	704	133.67	2.5
183.6	707	-739	-32	1446	723	131.91	3
183.1	707	-757	-50	1464	732	130.10	3.5
182.6	777	-808	-31	1585	793	128.27	4
182.1	788	-818	-30	1606	803	126.29	4.5
181.6	776	-809	-33	1585	793	124.28	5
181.1	786	-817	-31	1603	802	122.30	5.5
180.6	802	-837	-35	1639	820	120.30	6
180.1	809	-842	-33	1651	826	118.25	6.5
179.6	811	-844	-33	1655	828	116.19	7
179.1	785	-819	-34	1604	802	114.12	7.5
178.6	762	-795	-33	1557	779	112.11	8
178.1	765	-800	-35	1565	783	110.17	8.5
177.6	769	-804	-35	1573	787	108.21	9
177.1	766	-802	-36	1568	784	106.24	9.5
176.6	754	-789	-35	1543	772	104.28	10
176.1	752	-785	-33	1537	769	102.35	10.5
175.6	755	-789	-34	1544	772	100.43	11
175.1	778	-808	-30	1586	793	98.50	11.5
174.6	800	-836	-36	1636	818	96.52	12
174.1	841	-874	-33	1715	858	94.48	12.5
173.6	899	-933	-34	1832	916	92.33	13
173.1	956	-991	-35	1947	974	90.04	13.5
172.6	1009	-1045	-36	2054	1027	87.61	14
172.1	1052	-1086	-34	2138	1069	85.04	14.5
171.6	1065	-1100	-35	2165	1083	82.37	15
171.1	1082	-1129	-47	2211	1106	79.66	15.5
170.6	1103	-1139	-36	2242	1121	76.90	16
170.1	1069	-1105	-36	2174	1087	74.10	16.5
169.6	1090	-1125	-35	2215	1108	71.38	17
169.1	1097	-1128	-31	2225	1113	68.61	17.5
168.6	1104	-1140	-36	2244	1122	65.83	18
168.1	1085	-1118	-33	2203	1102	63.02	18.5
167.6	1074	-1105	-31	2179	1090	60.27	19
167.1	1062	-1096	-34	2158	1079	57.55	19.5
166.6	1042	-1077	-35	2119	1060	54.85	20
166.1	1043	-1075	-32	2118	1059	52.20	20.5
165.6	1047	-1082	-35	2129	1065	49.55	21
165.1	1080	-1116	-36	2196	1098	46.89	21.5
164.6	1099	-1131	-32	2230	1115	44.15	22
164.1	1029	-1063	-34	2092	1046	41.36	22.5
163.6	1020	-1054	-34	2074	1037	38.74	23
163.1	1024	-1061	-37	2085	1043	36.15	23.5
162.6	1027	-1066	-39	2093	1047	33.54	24
162.1	1053	-1087	-34	2140	1070	30.93	24.5
161.6	1079	-1116	-37	2195	1098	28.25	25

161.1	1042	-1075	-33	2117	1059	25.51	25.5
160.6	1037	-1075	-38	2112	1056	22.86	26
160.1	1046	-1078	-32	2124	1062	20.22	26.5
159.6	1034	-1068	-34	2102	1051	17.57	27
159.1	1014	-1050	-36	2064	1032	14.94	27.5
158.6	995	-1048	-53	2043	1022	12.36	28
158.1	945	-978	-33	1923	962	9.81	28.5
157.6	946	-981	-35	1927	964	7.40	29
157.1	945	-985	-40	1930	965	4.99	29.5
156.6	1013	-1052	-39	2065	1033	2.58	30

Average Channel A Offset: -17.5

C.3 B-axis Profile Data Text Report

Report: B-Axis Digits and Profile in Centimeters (Bottom Up)

Project Name:	myHoles
Hole Name:	newHole
Top Elevation:	186.6
Azimuth Angle:	0.0
File Name:	newHole_001.gkn
Reading Date:	01/02/13
Reading Time:	14:32:13
Probe Name:	testProbe

Elev (m)	B+ (dig.)	B- (dig.)	Sum (dig.)	Diff (dig.)	Diff/2 (dig.)	Defl (cm)	Level (m)
186.1	-361	300	-61	-661	-330	-65.30	0.5
185.6	-359	298	-61	-657	-328	-64.48	1
185.1	-412	357	-55	-769	-384	-63.65	1.5
184.6	-413	356	-57	-769	-384	-62.69	2
184.1	-407	359	-48	-766	-383	-61.73	2.5
183.6	-408	354	-54	-762	-381	-60.77	3
183.1	-435	375	-60	-810	-405	-59.82	3.5
182.6	-447	381	-66	-828	-414	-58.81	4
182.1	-468	404	-64	-872	-436	-57.77	4.5
181.6	-475	412	-63	-887	-443	-56.68	5
181.1	-464	398	-66	-862	-431	-55.58	5.5
180.6	-472	414	-58	-886	-443	-54.50	6
180.1	-450	394	-56	-844	-422	-53.39	6.5
179.6	-456	388	-68	-844	-422	-52.34	7
179.1	-441	386	-55	-827	-413	-51.28	7.5
178.6	-442	379	-63	-821	-410	-50.25	8
178.1	-435	372	-63	-807	-403	-49.22	8.5
177.6	-429	371	-58	-800	-400	-48.21	9
177.1	-433	378	-55	-811	-405	-47.21	9.5
176.6	-465	409	-56	-874	-437	-46.20	10
176.1	-489	440	-49	-929	-464	-45.11	10.5
175.6	-522	464	-58	-986	-493	-43.94	11
175.1	-547	482	-65	-1029	-514	-42.71	11.5
174.6	-568	499	-69	-1067	-533	-41.43	12
174.1	-557	493	-64	-1050	-525	-40.09	12.5
173.6	-558	492	-66	-1050	-525	-38.78	13
173.1	-534	468	-66	-1002	-501	-37.47	13.5
172.6	-519	452	-67	-971	-485	-36.21	14
172.1	-529	467	-62	-996	-498	-35.00	14.5
171.6	-553	495	-58	-1048	-524	-33.76	15
171.1	-566	506	-60	-1072	-536	-32.45	15.5
170.6	-567	497	-70	-1064	-532	-31.11	16
170.1	-545	493	-52	-1038	-519	-29.78	16.5
169.6	-549	500	-49	-1049	-524	-28.48	17
169.1	-541	483	-58	-1024	-512	-27.17	17.5
168.6	-572	513	-59	-1085	-542	-25.89	18
168.1	-553	490	-63	-1043	-521	-24.53	18.5
167.6	-551	487	-64	-1038	-519	-23.23	19
167.1	-542	480	-62	-1022	-511	-21.93	19.5
166.6	-527	469	-58	-996	-498	-20.65	20
166.1	-518	454	-64	-972	-486	-19.41	20.5
165.6	-514	462	-52	-976	-488	-18.19	21
165.1	-503	439	-64	-942	-471	-16.97	21.5
164.6	-485	437	-48	-922	-461	-15.79	22
164.1	-500	448	-52	-948	-474	-14.64	22.5
163.6	-474	422	-52	-896	-448	-13.46	23
163.1	-477	413	-64	-890	-445	-12.34	23.5
162.6	-449	385	-64	-834	-417	-11.22	24
162.1	-440	378	-62	-818	-409	-10.18	24.5
161.6	-430	366	-64	-796	-398	-9.16	25

161.1	-415	366	-49	-781	-390	-8.16	25.5
160.6	-376	326	-50	-702	-351	-7.19	26
160.1	-348	288	-60	-636	-318	-6.31	26.5
159.6	-316	265	-51	-581	-290	-5.52	27
159.1	-318	263	-55	-581	-290	-4.79	27.5
158.6	-337	278	-59	-615	-307	-4.06	28
158.1	-331	276	-55	-607	-303	-3.29	28.5
157.6	-346	290	-56	-636	-318	-2.54	29
157.1	-377	315	-62	-692	-346	-1.74	29.5
156.6	-380	320	-60	-700	-350	-.88	30

Average Channel B Offset: -29.6

C.4 A-axis Deflection Data Text Report

```
Report: A-Axis Change in Digits and Deflection in Centimeters (Bottom Up)
        Project Name:      myHoles
           Hole Name:      newHole
       Top Elevation:      186.6
       Azimuth Angle:      0.0
-------------------------------------------------------------------------------
                       --Initial Data-- --Current Data--
           File Name:      newHole_001.gkn     newHole_002.gkn
        Reading Date:      01/02/13            01/03/13
        Reading Time:      14:32:13            13:54:50
          Probe Name:      testProbe           testProbe
-------------------------------------------------------------------------------
Elev.  --Initial (digits)--       --Current (digits)--       Corr.  Defl.  Level
(m)      A+     A-   Diff.    A+     A-   Diff.  Diff.  (cm)   (m)
-------------------------------------------------------------------------------
186.1  564    -600   1164   508    -657   1165   1      -.09   0.5
185.6  559    -599   1158   510    -656   1166   8      -.09   1
185.1  608    -643   1251   541    -698   1239   -12    -.10   1.5
184.6  647    -680   1327   591    -736   1327   0      -.08   2
184.1  686    -721   1407   631    -776   1407   0      -.08   2.5
183.6  707    -739   1446   650    -796   1446   0      -.08   3
183.1  707    -757   1464   666    -809   1475   11     -.08   3.5
182.6  777    -808   1585   719    -865   1584   -1     -.10   4
182.1  788    -818   1606   728    -874   1602   -4     -.09   4.5
181.6  776    -809   1585   719    -865   1584   -1     -.09   5
181.1  786    -817   1603   730    -873   1603   0      -.09   5.5
180.6  802    -837   1639   747    -893   1640   1      -.09   6
180.1  809    -842   1651   753    -898   1651   0      -.09   6.5
179.6  811    -844   1655   755    -898   1653   -2     -.09   7
179.1  785    -819   1604   729    -874   1603   -1     -.09   7.5
178.6  762    -795   1557   706    -851   1557   0      -.09   8
178.1  765    -800   1565   710    -855   1565   0      -.09   8.5
177.6  769    -804   1573   714    -859   1573   0      -.09   9
177.1  766    -802   1568   711    -857   1568   0      -.09   9.5
176.6  754    -789   1543   699    -845   1544   1      -.09   10
176.1  752    -785   1537   682    -840   1522   -15    -.09   10.5
175.6  755    -789   1544   698    -844   1542   -2     -.07   11
175.1  778    -808   1586   720    -865   1585   -1     -.07   11.5
174.6  800    -836   1636   746    -892   1638   2      -.06   12
174.1  841    -874   1715   782    -929   1711   -4     -.07   12.5
173.6  899    -933   1832   843    -989   1832   0      -.06   13
173.1  956    -991   1947   900    -1047  1947   0      -.06   13.5
172.6  1009   -1045  2054   931    -1100  2031   -23    -.06   14
172.1  1052   -1086  2138   996    -1142  2138   0      -.03   14.5
171.6  1065   -1100  2165   1008   -1156  2164   -1     -.03   15
171.1  1082   -1129  2211   1038   -1185  2223   12     -.03   15.5
170.6  1103   -1139  2242   1046   -1193  2239   -3     -.05   16
170.1  1069   -1105  2174   1014   -1161  2175   1      -.04   16.5
169.6  1090   -1125  2215   1034   -1180  2214   -1     -.04   17
169.1  1097   -1128  2225   1041   -1184  2225   0      -.04   17.5
168.6  1104   -1140  2244   1048   -1196  2244   0      -.04   18
168.1  1085   -1118  2203   1029   -1174  2203   0      -.04   18.5
167.6  1074   -1105  2179   1019   -1164  2183   4      -.04   19
167.1  1062   -1096  2158   1006   -1150  2156   -2     -.05   19.5
166.6  1042   -1077  2119   985    -1133  2118   -1     -.05   20
166.1  1043   -1075  2118   987    -1131  2118   0      -.04   20.5
165.6  1047   -1082  2129   991    -1138  2129   0      -.04   21
165.1  1080   -1116  2196   1025   -1171  2196   0      -.04   21.5
164.6  1099   -1131  2230   1041   -1187  2228   -2     -.04   22
164.1  1029   -1063  2092   974    -1119  2093   1      -.04   22.5
163.6  1020   -1054  2074   965    -1110  2075   1      -.04   23
163.1  1024   -1061  2085   969    -1117  2086   1      -.04   23.5
162.6  1027   -1066  2093   972    -1119  2091   -2     -.05   24
162.1  1053   -1087  2140   998    -1143  2141   1      -.04   24.5
```

161.6	1079	-1116	2195	1023	-1171	2194	-1	-.04	25
161.1	1042	-1075	2117	985	-1131	2116	-1	-.04	25.5
160.6	1037	-1075	2112	982	-1130	2112	0	-.04	26
160.1	1046	-1078	2124	989	-1134	2123	-1	-.04	26.5
159.6	1034	-1068	2102	977	-1125	2102	0	-.04	27
159.1	1014	-1050	2064	958	-1105	2063	-1	-.04	27.5
158.6	995	-1048	2043	937	-1093	2030	-13	-.04	28
158.1	945	-978	1923	889	-1022	1911	-12	-.02	28.5
157.6	946	-981	1927	888	-1037	1925	-2	-.01	29
157.1	945	-985	1930	889	-1039	1928	-2	-.01	29.5
156.6	1013	-1052	2065	956	-1107	2063	-2	.00	30

C.5 B-axis Deflection Data Text Report

```
Report: B-Axis Change in Digits and Deflection in Centimeters (Bottom Up)
        Project Name:      myHoles
           Hole Name:      newHole
       Top Elevation:      186.6
       Azimuth Angle:      0.0
-------------------------------------------------------------------------------
                       --Initial Data-- --Current Data--
           File Name:      newHole_001.gkn     newHole_002.gkn
        Reading Date:      01/02/13            01/03/13
        Reading Time:      14:32:13            13:54:50
          Probe Name:      testProbe           testProbe
-------------------------------------------------------------------------------
Elev.  --Initial (digits)--       --Current (digits)--       Corr.  Defl.  Level
(m)      B+     B-   Diff.    B+     B-   Diff.  Diff.  (cm)   (m)
-------------------------------------------------------------------------------
186.1  -361   300    -661   -361   300    -661   0      .05    0.5
185.6  -359   298    -657   -361   300    -661   -4     .05    1
185.1  -412   357    -769   -413   358    -771   -2     .06    1.5
184.6  -413   356    -769   -412   355    -767   2      .06    2
184.1  -407   359    -766   -412   357    -769   -3     .06    2.5
183.6  -408   354    -762   -408   356    -764   -2     .06    3
183.1  -435   375    -810   -434   376    -810   0      .07    3.5
182.6  -447   381    -828   -447   382    -829   -1     .07    4
182.1  -468   404    -872   -468   404    -872   0      .07    4.5
181.6  -475   412    -887   -474   411    -885   2      .07    5
181.1  -464   398    -862   -464   406    -870   -8     .06    5.5
180.6  -472   414    -886   -469   411    -880   6      .07    6
180.1  -450   394    -844   -450   393    -843   1      .07    6.5
179.6  -456   388    -844   -454   386    -840   4      .07    7
179.1  -441   386    -827   -437   379    -816   11     .06    7.5
178.6  -442   379    -821   -442   378    -820   1      .05    8
178.1  -435   372    -807   -435   371    -806   1      .05    8.5
177.6  -429   371    -800   -430   369    -799   1      .04    9
177.1  -433   378    -811   -438   376    -814   -3     .04    9.5
176.6  -465   409    -874   -464   408    -872   2      .05    10
176.1  -489   440    -929   -489   439    -928   1      .04    10.5
175.6  -522   464    -986   -523   460    -983   3      .04    11
175.1  -547   482    -1029  -546   481    -1027  2      .04    11.5
174.6  -568   499    -1067  -566   502    -1068  -1     .04    12
174.1  -557   493    -1050  -557   494    -1051  -1     .04    12.5
173.6  -558   492    -1050  -557   491    -1048  2      .04    13
173.1  -534   468    -1002  -533   470    -1003  -1     .04    13.5
172.6  -519   452    -971   -519   451    -970   1      .04    14
172.1  -529   467    -996   -526   468    -994   2      .04    14.5
171.6  -553   495    -1048  -554   496    -1050  -2     .03    15
171.1  -566   506    -1072  -564   505    -1069  3      .04    15.5
170.6  -567   497    -1064  -566   508    -1074  -10    .03    16
170.1  -545   493    -1038  -540   492    -1032  6      .05    16.5
169.6  -549   500    -1049  -551   499    -1050  -1     .04    17
169.1  -541   483    -1024  -540   481    -1021  3      .04    17.5
168.6  -572   513    -1085  -571   513    -1084  1      .04    18
168.1  -553   490    -1043  -553   491    -1044  -1     .03    18.5
167.6  -551   487    -1038  -550   487    -1037  1      .04    19
167.1  -542   480    -1022  -541   481    -1022  0      .03    19.5
166.6  -527   469    -996   -529   469    -998   -2     .03    20
166.1  -518   454    -972   -517   454    -971   1      .04    20.5
165.6  -514   462    -976   -513   449    -962   14     .04    21
165.1  -503   439    -942   -502   439    -941   1      .02    21.5
164.6  -485   437    -922   -486   437    -923   -1     .02    22
164.1  -500   448    -948   -499   447    -946   2      .02    22.5
163.6  -474   422    -896   -475   422    -897   -1     .02    23
163.1  -477   413    -890   -476   414    -890   0      .02    23.5
162.6  -449   385    -834   -448   384    -832   2      .02    24
162.1  -440   378    -818   -440   377    -817   1      .01    24.5
```

161.6	-430	366	-796	-423	364	-787	9	.01	25
161.1	-415	366	-781	-416	366	-782	-1	.00	25.5
160.6	-376	326	-702	-377	324	-701	1	.00	26
160.1	-348	288	-636	-349	290	-639	-3	.00	26.5
159.6	-316	265	-581	-316	266	-582	-1	.01	27
159.1	-318	263	-581	-316	263	-579	2	.01	27.5
158.6	-337	278	-615	-338	275	-613	2	.00	28
158.1	-331	276	-607	-329	272	-601	6	.00	28.5
157.6	-346	290	-636	-350	293	-643	-7	-.01	29
157.1	-377	315	-692	-377	315	-692	0	.00	29.5
156.6	-380	320	-700	-379	319	-698	2	.00	30

APPENDIX D. REMOTE MODULE COMMAND STRUCTURE

COMMAND	FUNCTION	SYNTAX	RETURN VALUE
0	TAKE VA READING	0	(+/-)#####
1	TAKE VB READING	1	(+/-)#####
2	TAKE BATTERY READING	2	<sp><sp>+#.#
3	TAKE -12V READING [1]	3	<sp>-12.0
4	FIRMWARE VERSION [4]	4	VER#.#
5	(see Note 2)	5	<CR>
6	(see Note 2)	6	000<sp><sp><sp>
7	TAKE +12V READING [1]	7	<sp>+12.0
8	TAKE +5V REFERENCE READING	8	<sp><sp>+#.#
9	TAKE 3.3V READING [1]	9	<sp><sp>+3.3
D	LOAD PROBE DEFAULTS [3]	D	See Example D
G	DISPLAY GAUGE PARAMETERS [3]	G	See Example G2
G	ENTER GAUGE PARAMETERS [3]	G70A/(LorP)/#/#/# or G70B/(LorP)/#/#/# See example G below	See Example G1
T	PROBE TEMPERATURE (°C) [3]	T	(+/-)##.####
V	FIRMWARE VERSION (Remote Module) [3]	V	VER #.#
#	DISPLAY PROBE SERIAL # [3]	#	See example #
#sn	ENTER PROBE SERIAL # [3]	#sn (16 alphanumeric characters or symbols)	See example #sn

Table 3 - Remote Module Commands

Notes:
[1] These commands exist only for GK-604 analog systems and are included in the digital system for compatibility.
[2] Similar to Note 1, but are for internal use only.
[3] These commands exist only for GK-604D digital system.
[4] Firmware Version (Command 4) returns the Remote Module version for analog systems and the probe firmware version for digital systems.

Example 1: LOAD PROBE DEFAULTS

Loads probe default gauge parameters (calibration factors):
Command: D<CR>
Response: GT:70A ZR:0.0000 GF:1.0000 GO:0.0000 GT:70B ZR:0.0000 GF:1.0000 GO:0.0000

Channels VA and VB: Linear Conversion
Zero Read Offset = 0
Gauge Factor = 1
Gauge Offset = 0

Results in digits display = 2500(Vout)

Example 2: ENTER GAUGE PARAMETERS

Enter and store gauge parameters for each axis:

A axis: Linear conversion
Zero Read Offset = 0
Gauge Factor = .62
Gauge Offset = 0

Command: G70A/L/0/.62/0<CR>
Response: GT:70A ZR:0.0000 GF:0.6200 GO:0.0000 GT:70B ZR:0.0000 GF:1.0000 GO:0.0000

B axis: Linear conversion
Zero Read Offset = 0
Gauge Factor = 1.005
Gauge Offset = 0

Command: G70B/L/0/1.005/0<CR>
Response: GT:70A ZR:0.0000 GF:0.6200 GO:0.0000 GT:70B ZR:0.0000 GF:1.005 GO:0.0000

Example 3: DISPLAY GAUGE PARAMETERS

Display gauge parameters stored in the probe:
Command: G<CR>
Response: GT:70A ZR:0.0000 GF:0.6200 GO:0.0000 GT:70B ZR:0.0000 GF:1.005 GO:0.0000

Example 4: DISPLAY PROBE SERIAL NUMBER

Display the serial number that is stored in the probe:
Command: #<CR>
Response: 6001-E,126543

Example 5: ENTER PROBE SERIAL NUMBER

NOTE: The GK-604D IRA uses the serial number to determine the inclinometer probe units (metric or English) by reading the model number portion of the serial number string (the part to the left of the comma). If the model number does not contain an "-E" or a "–M" then unpredictable results may occur.

Enter and store probe serial number:
(Up to 16 alphanumeric characters and symbols may be stored.)

Command: #sn6001-E,126543<CR>
Response: 6001-E,126543

APPENDIX E. DATA REDUCTION FORMULAS

E.1 Deflection Calculation

Label	Description
ZZ	Correction Angle (usually 0°).
RINT	Absolute Reading Interval in feet or meters.
IA+,IA−	Initial A Axis Data in Digits (2sinθ=10000 @ 30°, 2.5sinθ=12500 @ 30°).
PA+,PA−	Present A Axis Data in Digits (2sinθ=10000 @ 30°, 2.5sinθ=12500 @ 30°).
IB+,IB−	Initial B Axis Data in Digits (2sinθ=10000 @ 30°, 2.5sinθ=12500 @ 30°).
PB+,PB−	Present B Axis Data in Digits (2sinθ=10000 @ 30°, 2.5sinθ=12500 @ 30°).
SA	Calculated Digit Change for A Axis.
SB	Calculated Digit Change for B Axis.
M	Multiplier, where: Geokon probe Sinco Probe Probe configuration 2sinθ, 2.5sinθ. Metric units, millimeters, 0.05 0.04 Metric units, centimeters, 0.005 0.004. Imperial units, inches 0.0006 0.00048
CA	Deflection A (in inches, English units, not corrected). Deflection A (in centimeters or millimeters, Metric units, not corrected).
CB	Deflection B (in inches, English units, not corrected). Deflection B (in centimeters or millimeters, Metric units, not corrected).
DA	Deflection A (in inches, English units, corrected for angle). Deflection A (in centimeters or millimeters, Metric units, corrected for angle).
DB	Deflection B (in inches, English units, corrected for angle). Deflection B (in centimeters or millimeters, Metric units, corrected for angle).
cos	Cosine function.
sin	Sine function .

Table 4 - Data Reduction Variables (Deflection)

$$SA = ((PA+)-(PA-))/2 - ((IA+)-(IA-))/2$$
$$SB = ((PB+)-(PB-))/2 – ((IB+)-(IB-))/2$$

Equation 1 - Change in Digits Calculation (Deflection)

$$CA = M \times RINT \times SA$$
$$CB = M \times RINT \times SB$$
$$DA = (CA \times \cos(ZZ))-(CB \times \sin(ZZ))$$
$$DB = (CA \times \sin(ZZ))+(CB \times \cos(ZZ))$$

Equation 2 - Deflection Calculation

NOTE: Accumulate (Σ) DA and DB results at each depth increment (from the bottom up or the top down) to obtain the deflection change (Figure 94).

E.2 Profile Calculation

Label	Description
ZZ	Correction Angle (usually 0°).
RINT	Absolute Reading Interval in feet or meters.
A+, A–	A Axis Data in Digits (2sinθ=10000 @ 30°, 2.5sinθ=12500 @ 30°).
B+, B–	B Axis Data in Digits (2sinθ=10000 @ 30°, 2.5sinθ=12500 @ 30°).
SA	Calculated Digit Change for A Axis.
SB	Calculated Digit Change for B Axis.
M	Multiplier, where: Geokon probe Sinco Probe Probe configuration 2sinθ, 2.5sinθ. Metric units, millimeters, 0.05 0.04 Metric units, centimeters, 0.005 0.004. Imperial units, inches 0.0006 0.00048
CA	Deflection A (in inches, English units, not corrected). Deflection A (in centimeters or millimeters, Metric units, not corrected).
CB	Deflection B (in inches, English units, not corrected). Deflection B (in centimeters or millimeters, Metric units, not corrected).
DA	Deflection A (in inches, English units, corrected for angle). Deflection A (in centimeters or millimeters, Metric units, corrected for angle).
DB	Deflection B (in inches, English units, corrected for angle). Deflection B (in centimeters or millimeters, Metric units, corrected for angle).
cos	Cosine function.
sin	Sine function .

Table 5 - Data Reduction Variables (Profile)

$$SA = ((A+)-(A-))/2$$
$$SB = ((B+)-(B-))/2$$

Equation 3 - Change in Digits Calculation (Profile)

$$CA = M \times RINT \times SA$$
$$CB = M \times RINT \times SB$$
$$DA = (CA \times \cos(ZZ))-(CB \times \sin(ZZ))$$
$$DB = (CA \times \sin(ZZ))+(CB \times \cos(ZZ))$$

Equation 4 - Profile Calculation

NOTE: Accumulate (Σ) DA and DB results at each depth increment (from the bottom up or the top down) to obtain the profile.

E.3 GTILT Users

When using GTILT with the GK-604D use a Probe Constant of 10000 for both English and Metric probes when using 2.0sin Units! For 2.5sin Units use a Probe Constant of 12500.

E.4 SiteMaster Users

When using SiteMaster with the GK-604D, use a Probe Constant of 20000 for both English and Metric probes.

APPENDIX F. TECHNICAL SPECIFICATIONS

F.1 GK-604D Digital System Specifications

Standard Range:	± 30°
Sensors:	Two MEMS accelerometers
MEMS Output:	Differential ± 4 VDC
6100D Probe Output:	Digital Data Stream
Probe Resolution:	24-bit
System Resolution[1]:	± 0.025 mm/500 mm (± 0.0001 ft./2 ft.)
Accuracy:	± 0.05% Full Scale (F.S.)
Linearity:	± 0.02% F.S., up to ±10°
Repeatability:	± 1 mm/30 m
Total System Accuracy[2]:	± 3 mm/30 m (± 0.125 in/100 ft.)
Temperature Range (Probe):	-30°C to 85 °C
Temperature Range (Remote Module):	-30°C to 85 °C
Temperature Coefficient:	0.002% F.S./°C
Wheel Base:	0.5 m, 1 m or 2 ft.
Length x Diameter[3]:	700 x 25 mm, 1200 x 25 mm or 32 x 1 in.
Casing Size I.D.[4]:	48 to 89 mm (1.9 to 3.5 in)
Weight (with case):	7.5 kg (16 lb.)
Shock Survival[5]:	2000 g
Battery (Remote Module):	Li-Ion, 7.4 V, 2600 mAh; >40 hours continuous operation per charge
Maximum Probe-Reel Cable Length	500 m (1640 ft.)

Table 6 - GK-604D Specifications

NOTES:

[1] ± 10 arc seconds. This resolution is true only in the range of ± 5° from vertical. Beyond this, the resolution is diminished by the cosine of the angle from vertical.

[2] Within 3° of vertical. This takes into account the accumulation of the error inherent with each reading and normal placement errors in positioning the probe inside the casing; also the effect of debris in the casing or casing damage.

[3] The cable connector adds 150 mm to the length of the probe. The wheel diameter is 30 mm.

[4] The probe is designed for use in all standard inclinometer casing up to a maximum diameter of 89 mm (3.5 inches).

[5] The Inclinometer Probe is a highly sensitive device and should be treated with great care at all times in order to maintain calibration. In particular, the probe should be prevented from impacting the bottom of the casing with any force.

F1.1 Compass Sensor Specifications

Table 7 contains specifications for the Digital Compass sensor embedded in digital inclinometer probes.

Compass Sensor:	Anisotropic Magnetoresistive
MEMS Output:	± 4 VDC
Compass Sensor Resolution:	12 bit
Remote Module Resolution:	16 bit
Compass Sensor Accuracy:	± 2 degrees
Operating Temperature:	–30°C to 85°C (–22° to 185°F)

Table 7 - Compass Sensor Specifications

F.2 Analog Probe System Specifications

Table 8 contains specifications for the analog probe system, which is comprised of a probe (6100-1M or 6100-1E) and the Remote Module. The Remote Module can be either a GK-604-3 (reel system) or a GK-604-4 (probe interface).

Probe Range (100% F.S.):	± 30°
Remote Module Input Range:	± 8 VDC
Sensors:	2 MEMS accelerometers
MEMS Output[1]:	± 4 VDC
Probe Resolution[2]:	.025 mm /500 mm (.0001 ft./ 2 ft.)
Remote Module Resolution:	16 bit
Repeatability[3]:	± 1 mm/30 m (± 0.05 in./100 ft.)
Total System Accuracy[4]:	± 4 mm/ 30 m (± 0.17 inch/ 100 ft.)
Remote Module Accuracy:	± 0.1% F.S.
Probe Temperature Range:	–20°C to 50°C (–4° to 122°F)
Remote Module Temp. Range:	-30°C to 50°C
Temperature Coefficient:	<.0002% F.S./ °C (<.0002% F.S./ °F)
Wheel Base:	0.5 m or 1.0 m (2 ft.)
Casing Size I.D.[5]:	48 to 89 mm (1.9 to 3.5 in)
Probe Length x Diameter[6]:	700 × 25 mm dia. (32 × 1 in dia.)
GK-604-3 Dimensions:	*(L x W x H):* 380 x 280 x 490 mm
GK-604-4 Dimensions:	*(L x W x H):* 160 x 75 x 75 mm
Weight (with case) (GK-604-1):	7.5 kg (16 lb.)
Shock Survival:	2000 g
Battery (Remote Module):	Li-Ion, 7.4 V, 2600 mAh; >16 hours continuous operation per charge
Maximum Probe-Reel Cable Length	850 m (2790 ft.)

Table 8 - Analog Probe System Specifications

NOTES:

[1] The probe outputs ±4 volts at an inclination of ±30° to the vertical. These parameters are referred to as full scale. Operation beyond this inclination is not possible with a standard MEMS probe.

[2] The resolution shown in Table 8 is only true in the range of ± 5° from the vertical. Beyond this, the resolution is reduced by a factor equal to 1/cosine of the angle from the vertical. For instance the resolution at 0 degrees from vertical is 10.3 arc seconds and the resolution at 15 degrees from the vertical is 10.3 x 1/0.966 = 10.7 arc seconds. The figures given assume that the readout box can detect a change of output of 0.0005 VDC.

[3] The figure shown applies to the use of a single probe used repeatedly over a short space of time in a single borehole.

[4] In practice, system accuracy is controlled mainly by the precision with which the inclinometer can be positioned at exactly the same depth in the casing from survey to survey. Factors such as debris in the casing or casing damage also have an effect. The stated accuracy assumes that the surveys are conducted over a period of time, in a proper manner, and that the casing is within five degrees of vertical. Accuracy is improved by allowing the probe to reach equilibrium at each depth before taking a reading.

[5] The probe is designed for use in all standard inclinometer casing up to a maximum diameter of 89 mm (3.5 inches).

[6] The wheel diameter is 30 mm. The cable connector adds 150 mm to the length of the probe.

F.3 Field PC (FPC-2) Specifications

Processor:	806 MHz PXA310
Operating System:	Windows Mobile® 6.1 Classic
Included Software:	Microsoft® Office Mobile; multiple languages
Memory:	88.99 MB RAM
Data Storage:	4 GB internal data storage; compact Flash slot (Type I or II); SD/SDHC slot; SDIO supported; user accessible CF and SD slots
Color Display:	480 x 640 pixel, Anti-glare 3.5" VGA resolution, sunlight readable, 262K color (18 bit), TMR Technology with LED backlight
Keyboard:	Dedicated backlit numeric keypad; Four-way directional buttons using function key (Fn); discrete keys for Start, Menu Left, Menu Right, Camera, "ok", Return and Power/Suspend
Ports:	RS-232C 9-pin "D" connector; 1 x USB host and client (Mini AB USB OTG, 1.2 host, 2.0 client); 12 VDC @ 4.1 Amps Max power in;
Case:	IP67 waterproof
Environmental:	Tested to MIL-STD810F for water, humidity, sand, dust vibration, altitude, shock and temperature
Power:	Intelligent 5600 mAh Li-Ion battery; battery easily changed in the field without tools
Wireless Connectivity:	Internal Bluetooth® wireless technology option, 2.0 +EDR, Class 1, range 20 m; WLAN: Integrated 802.11b/g supports AES TKIP, WEP, WPA and WPA2
Certification & Standards:	FCC Class B; CE Mark; EN60950; RoHS compliant; FM approved Class I, Div 2
Operating Temperature:	-30 °C to 60 °C
Storage Temperature:	-40 °C to 70 °C
Shock Survival:	Multiple drops from 1.22 m onto concrete
Dimensions (L x W x H):	179 mm (7") x 97 mm (3.8") x 37 mm (1.5")
Weight:	490 g, with battery

Table 9 - Field PC Specifications

APPENDIX G. PORTABLE TILTMETER OPERATION

G.1 Single Channel Tiltmeter (Model 6101)

When connected to the GK-604-4 Probe Interface Module (Figure 115), the Model 6101 Tiltmeter (Figure 116) can be read with the FPC-2 using the GK-604D IRA.

Figure 115 - GK-604-4 Probe Interface Module

Figure 116 - Model 6101 Tiltmeter with 6201-3 Interface Cable

The Model 6101 Portable Tiltmeter is designed to be placed on an alignment plate (Tiltplate) that has been permanently attached to the structure being monitored. (Geokon Tiltplates and model numbers are shown in Figure 117.) Measurements can be made on horizontal or vertical surfaces. The readings are taken in pairs, 180 degrees apart from each other, to eliminate any instrument bias and thereby obtain true tilt.

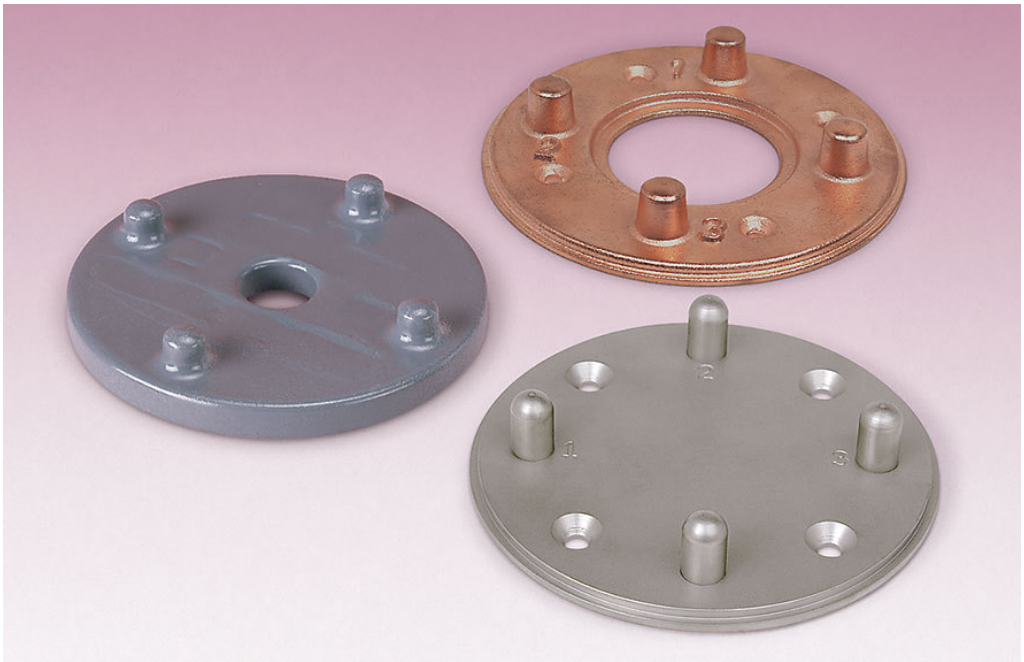

Figure 117 - Tiltplates: 6201-1C (ceramic), 6201-1A (Copper plated Aluminum), 6201-1S (stainless)

It is assumed that a valid Bluetooth pairing exists between the GK-604-4 Interface Module and the FPC-2 (see Section 2.3 for more information about establishing communication with the Interface Module). The recommended steps for connecting to and taking a reading with the Model 6101 Tiltmeter are as follows:

1) Connect one end of the 6201-3 cable to the Tiltmeter

2) Connect the other end of the 6201-3 cable to the GK-604-4 Interface Module.

3) On the FPC-2, launch the GK-604D IRA and create a new probe configuration:
   - Using the Context Menu (see Section 3.2.1), after highlighting the Probe Library, select the “Add Probe” menu item to create a new probe.
   - Name the new probe and select “Tiltmeter” for probe type.
   - Using the calibration sheet as a guide, enter the “Zero Shift A” and “Gauge Factor A” parameters. Leave the B channel parameters at zero.
   - Tap “Save Settings” to save the new probe configuration. See Section 4.2 for more information about probe configuration.

4) Create a new hole configuration for every unique location where tilt is to be measured:
   - Using the Context Menu (see Section 3.2.1), after highlighting the Project element, select the “Add Hole” menu item to create a new hole configuration.
   - Since the “hole” corresponds to a physical location, be sure to name it appropriately, such as, “Location1”.
   - Additional information may be entered in the “Description” field.
   - For each new hole created, select the probe created in step three.
   - The hole parameters such as “Starting Level”, “Interval”, “Top Elevation” and “Azimuth Angle” are not applicable for Tiltmeter operation and can be left blank.
   - Tap “Save Settings” to save the new hole configuration. See Section 4.1 for more information about hole configuration.

5) Make sure that the "hole" corresponding to the location to be measured is selected in the Project Explorer.

6) Press the "POWER ON" button on the GK-604-4 interface and ensure that the blue indicator is blinking.

7) Tap the Live Readings menu item from the Application menu to start the reading process. If a valid Bluetooth connection can be established, a Tiltmeter specific Live Readings screen will be displayed (Figure 118).

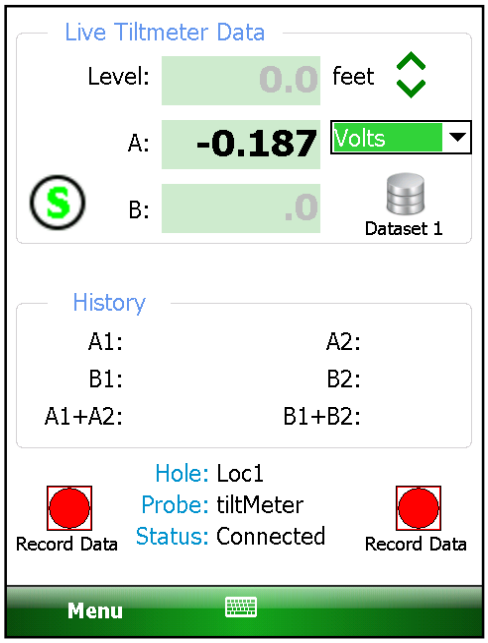

Figure 118 - Live Readings (Tiltmeter)

Note the drop-down control in Figure 118, located just to the right of the "A" value display. This allows the "A" value to be displayed in three different units, described below.

DIGITS:
Digit values are calculated as follows:
R1 = Probe Voltage (**PV**) * 2000 [R1 is read from the Remote Module]
R0 = Zero Shift A [from probe configuration]
GF = Gauge Factor A [from probe configuration]
GO = Gauge Offset A [from probe configuration – usually zero (0)]
DIGITS = ((R1 – R0) * GF) + GO

VOLTS:
PV = (**R1** – **R0**) / 2000 [for Geokon probes: $\pm$4V ≈ $\pm$15 degrees]

DEGREES:
DEGREES = arcsin(**DIGITS** / 20000)
[multiply by 180/Pi if arcsin produces angles in radians]

8) Align the Tiltmeter on the tiltplate in the A+ orientation, then tap “Record Data” to take the “A+” reading (see the 6101 User’s Manual).

9) Tap the “Dataset” icon and observe that the dataset number changes to “2”.

10) Reverse the Tiltmeter orientation to A- and, again, tap “Record Data” to take the “A-” reading. Tapping “Menu-›Exit Live Readings” will display the window in Figure 119.

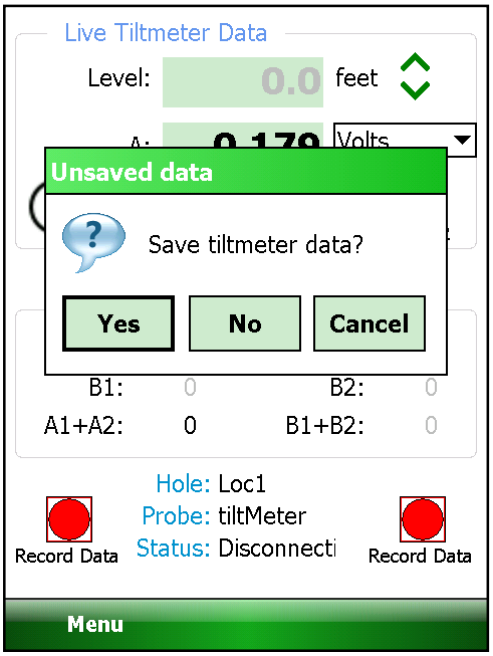

Figure 119 - Saving data query

11) Tap the “Yes” button to start the data saving process. The “Save File” dialog (Figure 120) will be displayed, allowing the user to name the data file to save.

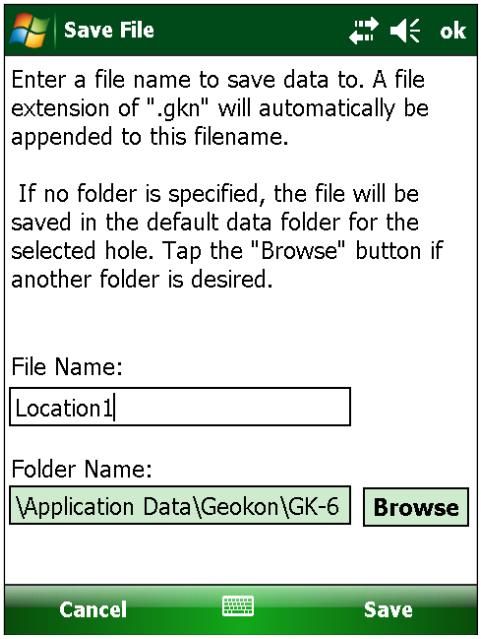

Figure 120 - Save File Dialog

12) After tapping “Save”, the GK-604D IRA will determine if the file exists. If this is a new file then the data will be written to it in a format similar to the standard Inclinometer format. If a file of the same name already exists then the dialog shown in Figure 121 will be displayed.

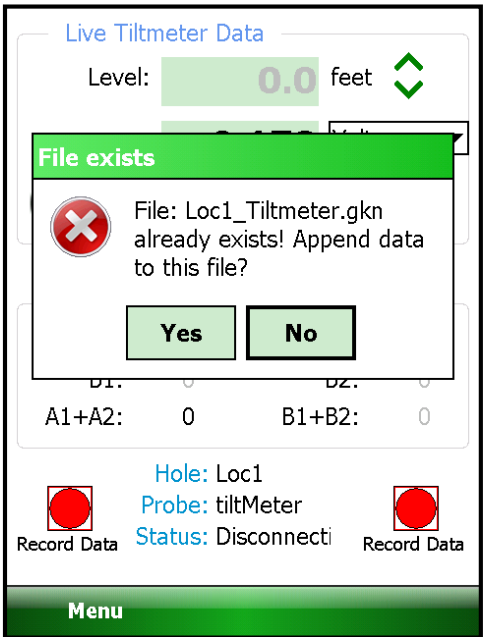

Figure 121 - File Exists Dialog

13) Tapping “Yes” on the “File exists” dialog allows multiple reads for this location to be stored in a single data file. See Appendix G.2 for an example of Tiltmeter data format.

14) Tapping “No” at the “File exists” dialog will again call up the “Save File” dialog (see Figure 120) and another opportunity will be given to select a new file.

G.2 Tiltmeter Data Format

```
***
GK 604E(v1.2.0.0,07/14);2.0;FORMAT II
PROJECT  :Site 1
LOCATION :Loc1
DATE     :07/16/14
TIME     :11:43:37
PROBE NO.:tiltMeter
UNITS    :DIGITS
FILE NAME:Loc1_Tiltmeter.gkn
    A+,     A-,     Date/Time
 -1358,  1587,  07/16/14 11:43:37
 -1477,   964,  07/16/14 11:48:13
  1003, -1552,  07/16/14 14:01:44
 -1555,  1696,  07/16/14 14:13:23
 -2021,  1888,  07/16/14 14:58:51
```

G.3 Dual Channel Digital Tiltmeter (Model 6101D)

The Model 6101D Tiltmeter (Figure 122) contains an integral battery and Bluetooth module, allowing the tiltmeter to be read directly with the FPC-2 running the GK-604D IRA. No external Interface Module is needed. The Model 6101D can also measure tilt in two axes: A and B.

Figure 122 - Model 6101D Digital Tiltmeter

The Model 6101D Portable Tiltmeter is designed to be placed on an alignment plate (Tiltplate) that has been permanently attached to the structure being monitored. (Geokon Tiltplates and model numbers are shown in Figure 123.) Measurements can be made on horizontal or vertical surfaces. The readings are taken in pairs, 180 degrees apart from each other, to eliminate any instrument bias and thereby obtain true tilt.

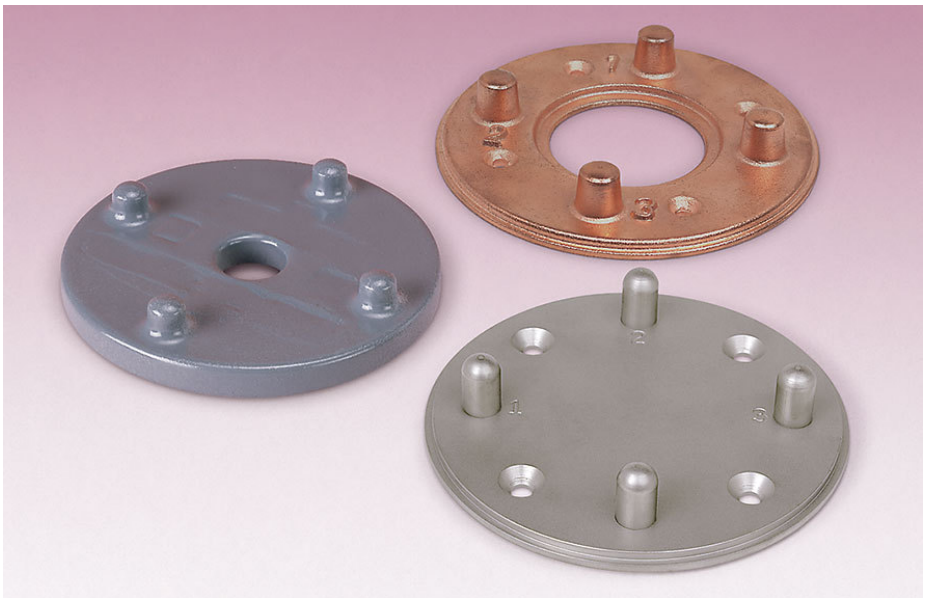

Figure 123 - Tiltplates: 6201-1C (ceramic), 6201-1A (Copper plated Aluminum), 6201-1S (stainless)

It is assumed that a valid Bluetooth pairing exists between the 6101D and the FPC-2 (see Section 2.3 for more information about establishing Bluetooth pairings).

The recommended steps for connecting to and taking a reading with the Model 6101D Tiltmeter are as follows:

1) Create an initial "hole" configuration corresponding to the unique location where tilt is to be measured:
   - Using the Context Menu (see Section 3.2.1), after highlighting the Project element, select the "Add Hole" menu item to create a new configuration.
   - Since the "hole" corresponds to a physical location, be sure to name it appropriately, such as, "Location1".
   - Additional information may be entered in the "Description" field.
   - For the first location (hole) created, select "UNKNOWN" for "Probe name:".
   - The hole parameters such as "Starting Level", "Interval", "Top Elevation" and "Azimuth Angle" are not applicable for Tiltmeter operation and can be left blank.
   - Tap "Save Settings" to save the new location (hole) configuration. See Section 4.1 for more information about hole configuration.

2) Make sure that the "hole" corresponding to the location to be measured is selected in the Project Explorer.

3) Press the "ON/OFF" button on the 6101D and ensure that the blue indicator light is blinking.

4) Tap the "Live Readings" menu item from the "Application" menu to start the reading process. If a valid Bluetooth connection can be established, a dual axis, tiltmeter specific, Live Readings screen will be displayed (Figure 124).

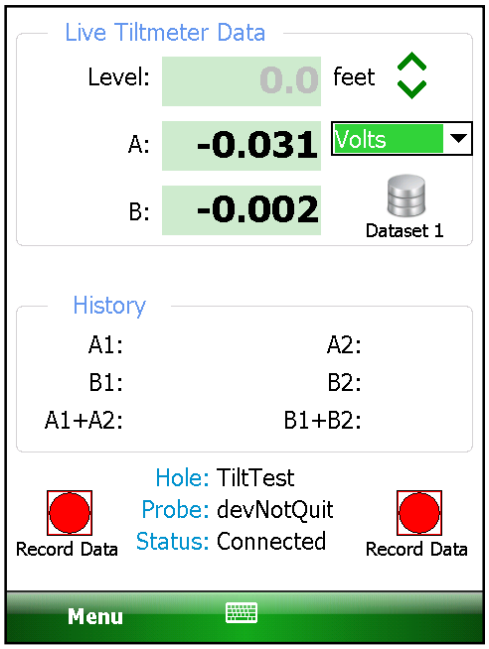

Figure 124 - Live Readings (Tiltmeter)

Note the drop-down control in Figure 124, located just to the right of the "A" value display. This allows the "A" and "B" values to be displayed in three different units, described below:

Digits:
Digit values are read directly from the 6101D Tiltmeter and are internally calculated as follows:
R1 = internal MEMS module voltage, (volts)
R0 = Zero Shift A [from internal probe configuration]
GF = Gauge Factor A [from internal probe configuration]
GO = Gauge Offset A [from internal probe configuration – usually zero]
DIGITS = (((2500 * R1) – R0) * GF) + GO

Volts:
PV = **DIGITS / 2500** [for Geokon Tiltmeters: ±4V ≈ ±15 degrees]

Degrees:
DEGREES = **arcsin(DIGITS / 38637.03305)**
[multiply by 180/Pi if **arcsin** produces angles in radians]

5) Align the Tiltmeter on the tiltplate in the A+ orientation, then tap "Record Data" to take the "A+" reading (see the 6101 User's Manual). For the Model 6101D, the "B+" reading is taken at the same time as "A+".

6) Tap the "Dataset" icon and observe that the dataset number changes to "2".

7) Reverse the Tiltmeter orientation to A- and, again, tap "Record Data" to take the "A-" reading. For the Model 6101D, the "B-" reading is taken at the same time as "A-". Tapping "Menu-›Exit Live Readings" will display the window in Figure 125.

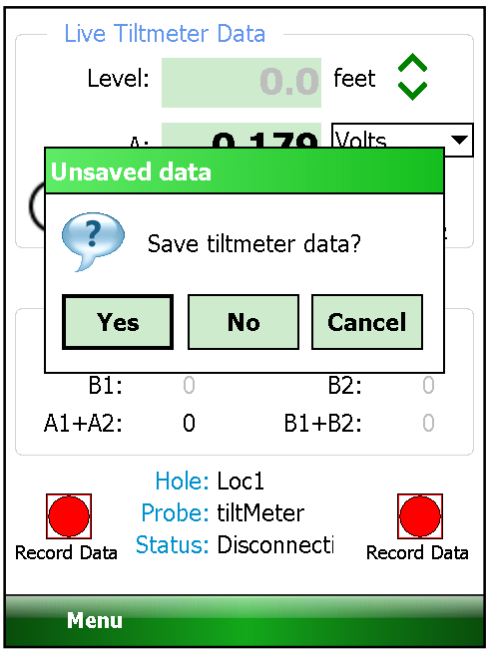

Figure 125 - Save Data Query

8) Tap the “Yes” button to start the data saving process. The “Save File” dialog (Figure 126) will be displayed, allowing the user to name the data file to save.

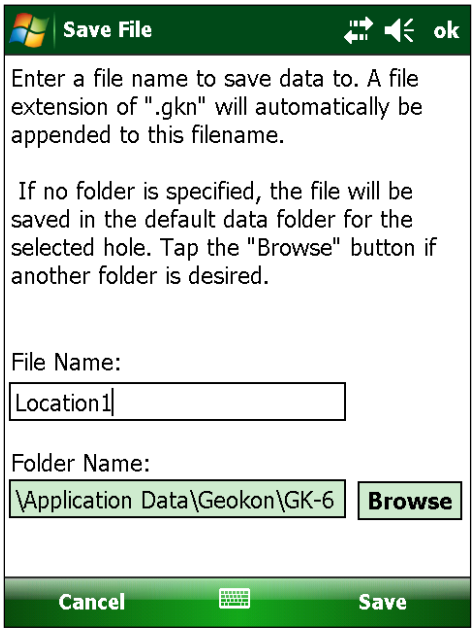

Figure 126 - Save File Dialog

9) After tapping “Save”, the GK-604D IRA will determine if the file exists. If this is a new file then the data will be written to it in a format similar to the standard Inclinometer format. If a file of the same name already exists then the dialog shown in Figure 127 will be displayed.

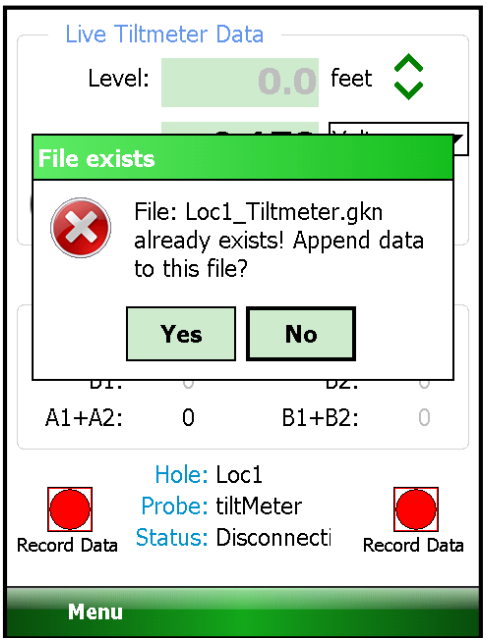

Figure 127 - File Exists Dialog

10) Tapping “Yes” on the “File exists” dialog allows multiple reads for this location to be stored in a single data file. See Appendix G.4 for an example of Dual Axis Tiltmeter data format.

11) Tapping “No” at the “File exists” dialog will again call up the “Save File” dialog (Figure 126) and another opportunity will be given to select a new file.

G.4 Dual-Axis Tiltmeter Data Format

```
***
GK 604E(v1.3.0.0,02/15);2.0;FORMAT II
PROJECT  :Site 1
LOCATION :Loc1
DATE     :02/19/15
TIME     :14:54:17
PROBE NO.:tiltMeter
UNITS    :DIGITS
FILE NAME:Loc1_Tiltmeter.gkn
    A+,    A-,    B+,       B-,      Date/Time
 -1358,  1587,    55,   -58,  2/19/15 14:50:25
 -1477,  1600,    55,   -58,  2/21/15 14:45:07
 -1458,  1557,    53,   -56,  2/23/15 14:30:15
 -1555,  1696,    57,   -51,  2/25/15 14:37:33
```

APPENDIX H. SPIRAL AND COMPASS PROBE OPERATION

The GK-604D IRA supports two different compass probes:

1) The analog Spiral Indicator Probe (6005-3), requiring the GK-604-3 Analog Reel System or the GK-604-4 Interface Module.

2) The digital Inclinometer/Compass Probe (6100D-*, Firmware Version V2.5), requiring a GK-604D-* Digital Reel System with a firmware version of V2.5 or higher.

While both probes can provide spiral survey data, there are significant differences in their features and operation. The two probes are individually described in the sections that follow.

H.1 Spiral Indicator Probe (6005-3)

The Spiral Indicator Probe (Figure 128) connects to a GK-604-3 Analog Reel System (Figure 129) or the GK-604-4 Interface Module (Figure 130). In general, operation of the Spiral probe is similar to the standard 6100-1* probe with a few exceptions.

Figure 128 - Spiral Indicator Probe (6005-3)

Figure 129 - GK-604-3 Analog Reel System

Figure 130 - GK-604-4 Interface Module

The steps below provide basic instruction on how to perform a spiral survey:

1) Connect the 6005-3 probe to the Remote Module and ensure that a Bluetooth pairing exists between the Remote Module and the FPC-2 Field PC. See Section 2.3 for more information regarding Bluetooth pairing.

2) Launch the GK-604D IRA.

3) Create a new probe in the Probe Library and configure it for a probe type of “Compass”. Enter “200” for “Zero Shift A” and “.1” for “Gauge Factor A” parameters (see Section 4.2, Probe Configuration). Save the settings.

4) Create a new hole to represent the physical hole, shaft or well that a spiral survey is to be performed on. Select the compass probe created in item #3 as the probe to be assigned to this hole. Set the “Azimuth Angle” parameter to “0” then save settings (see Section 4.1, Hole Configuration).

5) Press the “POWER ON (BLUETOOTH)” button on the reel and ensure that the blue light is blinking.

6) From the main screen, tap the “Application” menu (Figure 131), then “Live Readings” (see Section 3.3.1 for more information) to display the “Live Readings” screen for compass headings (Figure 132).

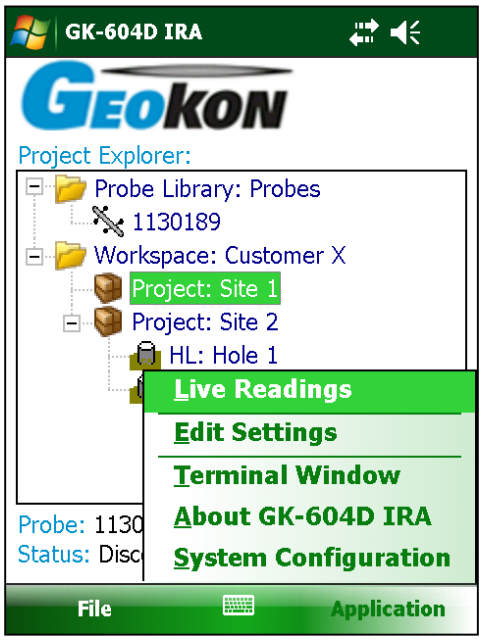

Figure 131 - Application Menu

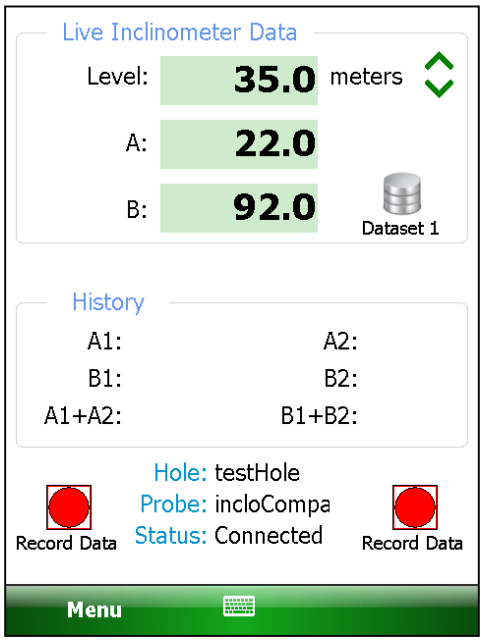

Figure 132 - Live Readings for Spiral Data

7) Unlike an inclinometer survey, a spiral survey only requires A+ data; a second pass is not necessary (do **not** tap Dataset after first pass).

8) When done the survey, tap "Menu->Exit Live Readings" and the screen shown in Figure 133 will be displayed. Tap "Yes" to save the compass survey data.

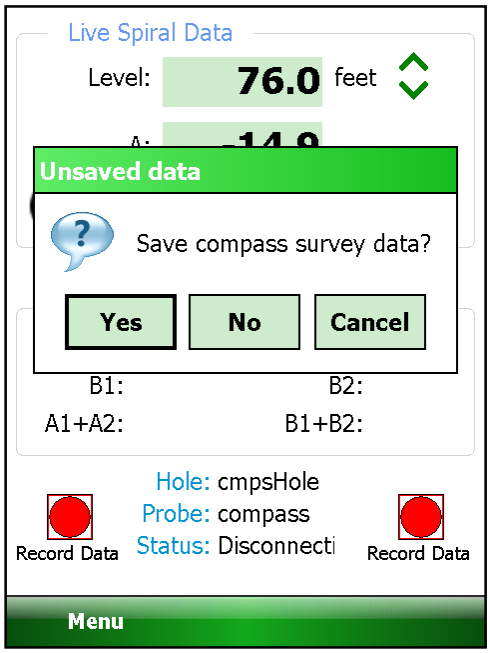

Figure 133 - Saving Compass Survey Data

9) The survey data is saved into a ".gkn" file with a slightly different format than for an inclinometer survey (see Appendix H.3, Spiral Indicator Data). This data file can be viewed (select "Raw Data as Table") and/or exported for later use in analysis.

H.2 Inclinometer/Compass Probe (6100D-*)

As of probe firmware version V2.5, coupled with the GK-604D reel assembly (also V2.5), all digital inclinometer probes include a 3-axis, magneto-resistive, compass sensor survey. The compass sensor coupled with two axes of MEMS, allow a spiral survey to be performed **at the same time** as the inclinometer survey.

Follow the steps below to perform a compass survey with the Digital Inclinometer/Compass Probe:

1) Connect the 6100D-* probe to the Remote Module and ensure that a Bluetooth pairing exists between the Remote Module and the FPC-2 Field PC. See Section 2.3 for more information regarding Bluetooth pairing.

2) Launch the GK-604D IRA.

3) If one does not already exist, create a hole to represent the physical hole, shaft or well where the inclinometer/compass survey is to be performed. If a probe configuration exists for the Inclinometer/Compass probe, then select the name of the probe to be assigned to this hole, otherwise set the "Probe" to "UNKNOWN". Set the "Azimuth Angle" parameter to "0" then save settings.

4) Press the "POWER ON (BLUETOOTH)" button on the reel and ensure that the blue light is blinking.

5) From the main screen, tap the "Application" menu (Figure 134) then "Live Readings" (see Section 3.3.1 for more information). If the probe serial number matches a probe configuration serial number from the Probe Library then the "Live Readings" screen will be displayed (Figure 135). Proceed to step six.

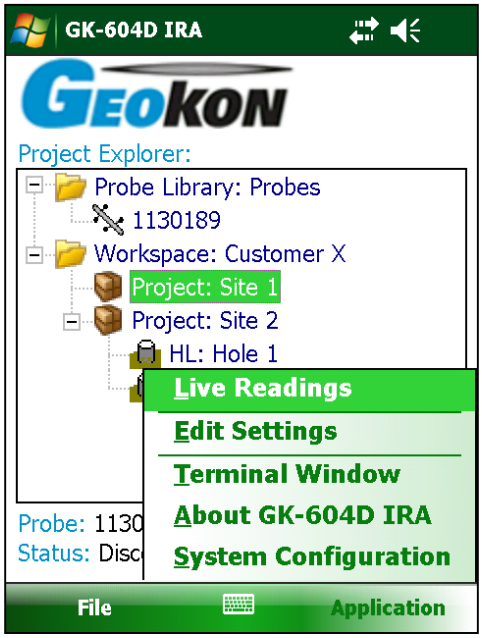

Figure 134 - Application Menu

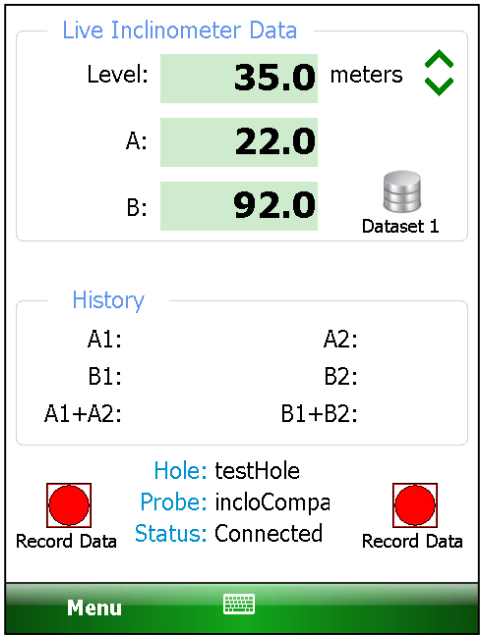

Figure 135 - Live Readings Screen

If the probe has never been detected before, a screen similar to the one in Figure 136 will be displayed. Tap “ok” to continue and the GK-604D IRA will display a probe editing screen to allow the probe to be named (Figure 137). After entering a name, tap “Menu->Save Settings”.

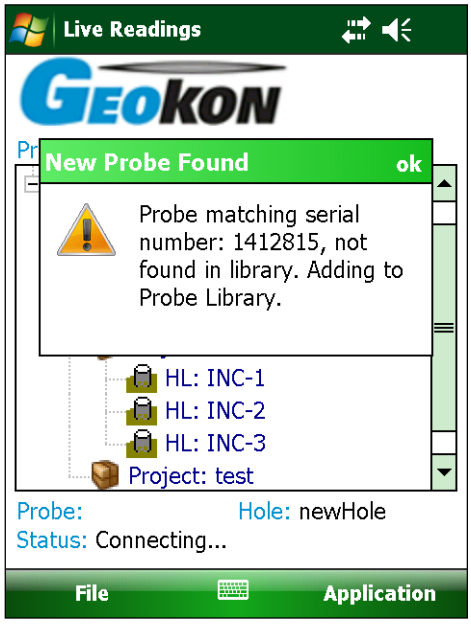

Figure 136 – New Probe Found

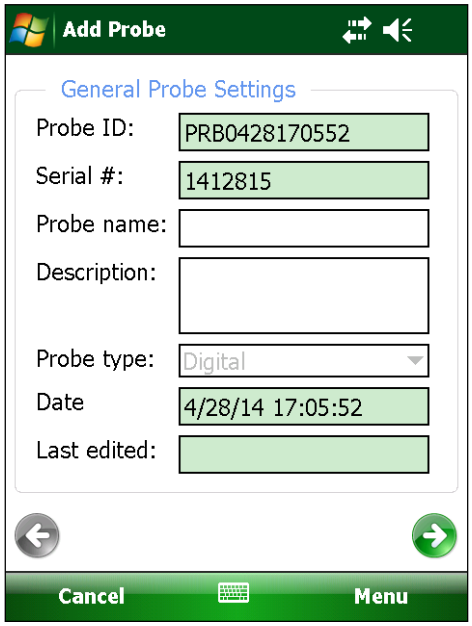

Figure 137 - Initial Probe Settings

If the hole to be surveyed has an “UNKNOWN” probe assigned to it, then the GK-604D IRA will ask if this newly discovered probe should be assigned to this hole (Figure 138). Selecting “Yes” will cause the GK-604D IRA to display the “Live Readings” screen (see Figure 135).

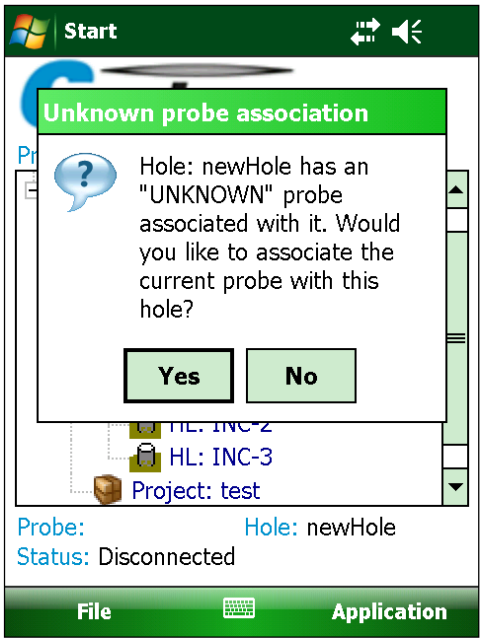

Figure 138 - No Probe Association Window

6) If the GK-604D IRA has detected an inclinometer with the integral compass, tapping the "Menu" option will the display the menu shown in Figure 139.

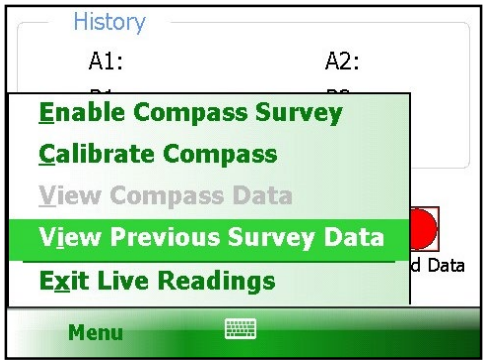

Figure 139- Menu option (Live Readings screen)

Tapping the menu option, "Enable Compass Survey", will display the message shown (in red) in Figure 140 for approximately five seconds and will enable the compass survey option. This message informs the user that, with the compass enabled; an inclinometer survey will take approximately 30% longer.

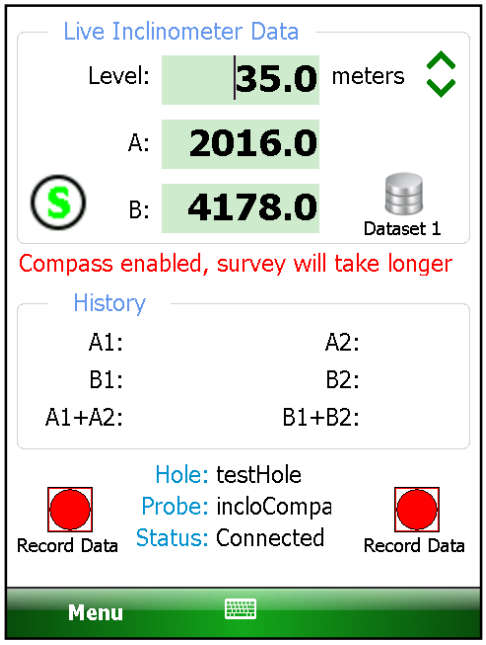

Figure 140 – Compass Enable Message

7) With the compass enabled, a survey is performed as normal (see Section 3.3.1) and the compass heading can be displayed at any level by tapping on "Menu->View Compass Data", displaying the screen shown in Figure 141.

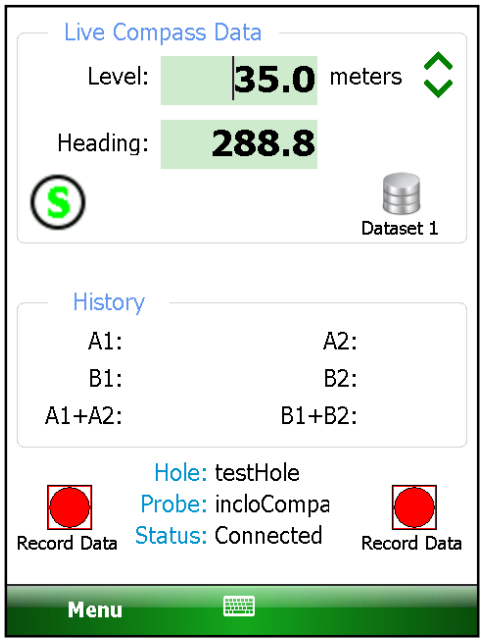

Figure 141 - Live Compass Data

8) While live compass data is being shown, "Live Inclinometer Data" can be re-displayed at any time by tapping on "Menu->View Inclinometer Data".

9) When the survey is finished, tap "Menu->Exit Live Readings". The "Unsaved data" prompt (Figure 142) will be displayed. Tap "Yes" to save the inclinometer/compass survey data.

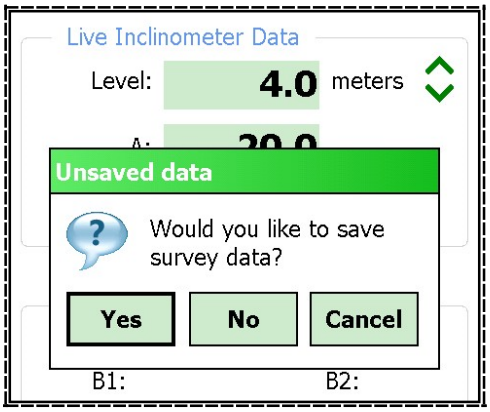

Figure 142 - Unsaved Data Prompt

10) The inclinometer survey data is saved into a ".gkn" file as normal while the compass survey data is saved into a ".gks" file. The ".gks" file format is supported by SiteMaster inclinometer analysis software and is very similar to standard inclinometer survey data with the following exceptions:
    - **A+** data is always in degrees.
    - **A-** and **B-** are always zero (0)
    - **B+** data is always 90 degrees greater than **A+**

11) The compass data file can be viewed (select "Raw Data as Table") and/or exported for later use in analysis. See Appendix H.4 for an example ".gks" file.

H.2.1 Calibrate Compass

For optimum accuracy, the digital inclinometer/compass probe should be calibrated for each site. The GK-604D IRA provides a dialog to facilitate this (see Section 3.3.1.1 and Figure 53). A compass survey does not need to be enabled to perform the calibration.

While the GK-604D IRA is connected to the probe and displaying the "Live Readings" screen, tap on "Menu->Calibrate Compass" to display the initial calibration screen (Figure 143).

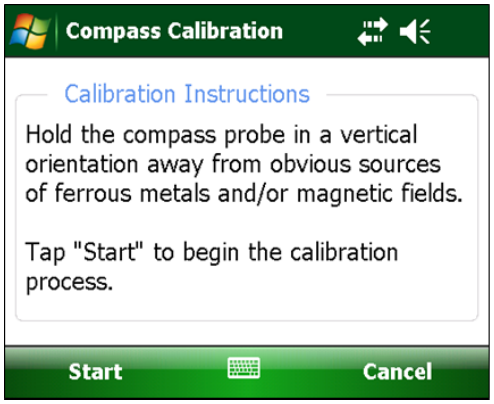

Figure 143 - Initial Calibration Screen

Tapping "Start" begins the calibration process (Figure 144).

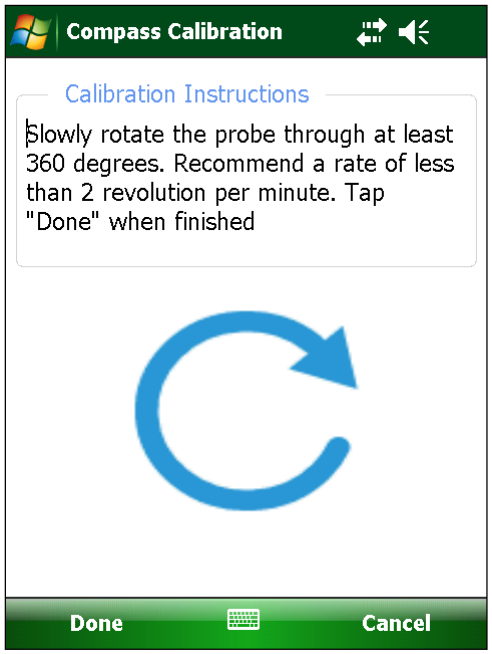

Figure 144 - Calibration Routine

As the instructions state, the probe should be held in an upright position and slowly rotated through at least 360 degrees. The large rotating blue "arrow" serves two purposes: one, it indicates to the user that the probe should be turned and two, it provides feedback that the calibration routine is still running. Tapping "Done" sends a command to the probe that calibration is finished and the Live Readings screen is re-displayed.

H.3 Spiral Indicator Data

```
***
GK 604E(v1.2.0.0,07/14);2.0;FORMAT II
PROJECT  :testProj
HOLE NO. :cmpsHole
DATE     :7/21/14
TIME     :15:12:03
PROBE NO.:compass
FILE NAME:cmpsHole_Compass001.gkn
#READINGS:51
FLEVEL,    HEADING
 100.0, -14.5
  98.0, -14.5
  96.0, -14.5
  94.0, -14.4
  92.0, -14.4
  90.0, -14.5
  88.0, -14.5
  86.0, -14.6
  84.0, -14.5
  82.0, -14.6
  80.0, -14.5
  78.0, -17.5
```

H.4 Compass Survey Data

```
***
GK 604M(v1.2.0.0,07/14);2.0;FORMAT II
PROJECT  :testProj
HOLE NO. :testHole
DATE     :7/22/14
TIME     :11:30:57
PROBE NO.:incloCompass
FILE NAME:testHole_012_Compass.GKS
#READINGS:71
FLEVEL,    A+,    A-,    B+,    B-
  35.0,   164,     0,   254,     0
  34.5,   164,     0,   254,     0
  34.0,   168,     0,   258,     0
```

APPENDIX I. COMMONLY ASKED INCLINOMETER PROBE QUESTIONS

Can inclinometer probes be swapped freely to perform surveys in the same borehole?

Immediately after leaving the factory, probes may be swapped freely as they will meet the system accuracy specification, which is ±3 mm/30 m (±.125 in/100 ft.).

Can corrections be made to the data when instruments are swapped? Such as an offset or formula?

As time passes, correcting the output of one probe to match that of another probe becomes quite difficult, and would involve a tremendous amount of time and effort spent recording, calculating, and converting every data point for every level in every survey.

Unfortunately, there is not a universal formula, any simple corrections, or offsets that can be used to correct one probe to another.

We recently sent our probe in for calibration. After receiving it back from Geokon, the old surveys do not match up with the newly calibrated probe's surveys and are showing significant displacement. It is the same probe, so why don't the surveys match?

For the same reasons that two different probes will show differences in the same borehole, a newly calibrated probe will also show differences (from its old calibration) even though it is physically the same piece of equipment. Essentially, after a re-calibration you are working with a "new" probe.

How can I compare my old data with my new data?

The recommended method to check compatibility between two sets of probes is to take at least three surveys with the new probe and compare them to the most recent survey taken with the old probe. If the resulting *cumulative displacement* plots performed with the new system overlay the latest survey from the old system, consider yourself lucky. However, if you see significant differences, we recommend the following method.

From the old series of surveys performed with the original system, create a final summary of cumulative displacement and a summary of displacement vs. time. Also, create a comparison of the final survey with the old system to the initial surveys taken with the new system. Then archive these summaries and data.

Next, use one of the three surveys obtained with the new system that you feel is most accurate. Use that survey to establish a new baseline survey and start a new series. This is the most accepted method in the long term.

The reason Geokon recommends this method is that you already know the magnitude and rate of movements you were detecting with the old system. This will be based on the final cumulative displacement plot and the displacement vs. time summaries created earlier. When movements occur, you will catch them with the new series based on the new system.