


SERVICE AND LUBRICATION POINTS

6320501-6321000

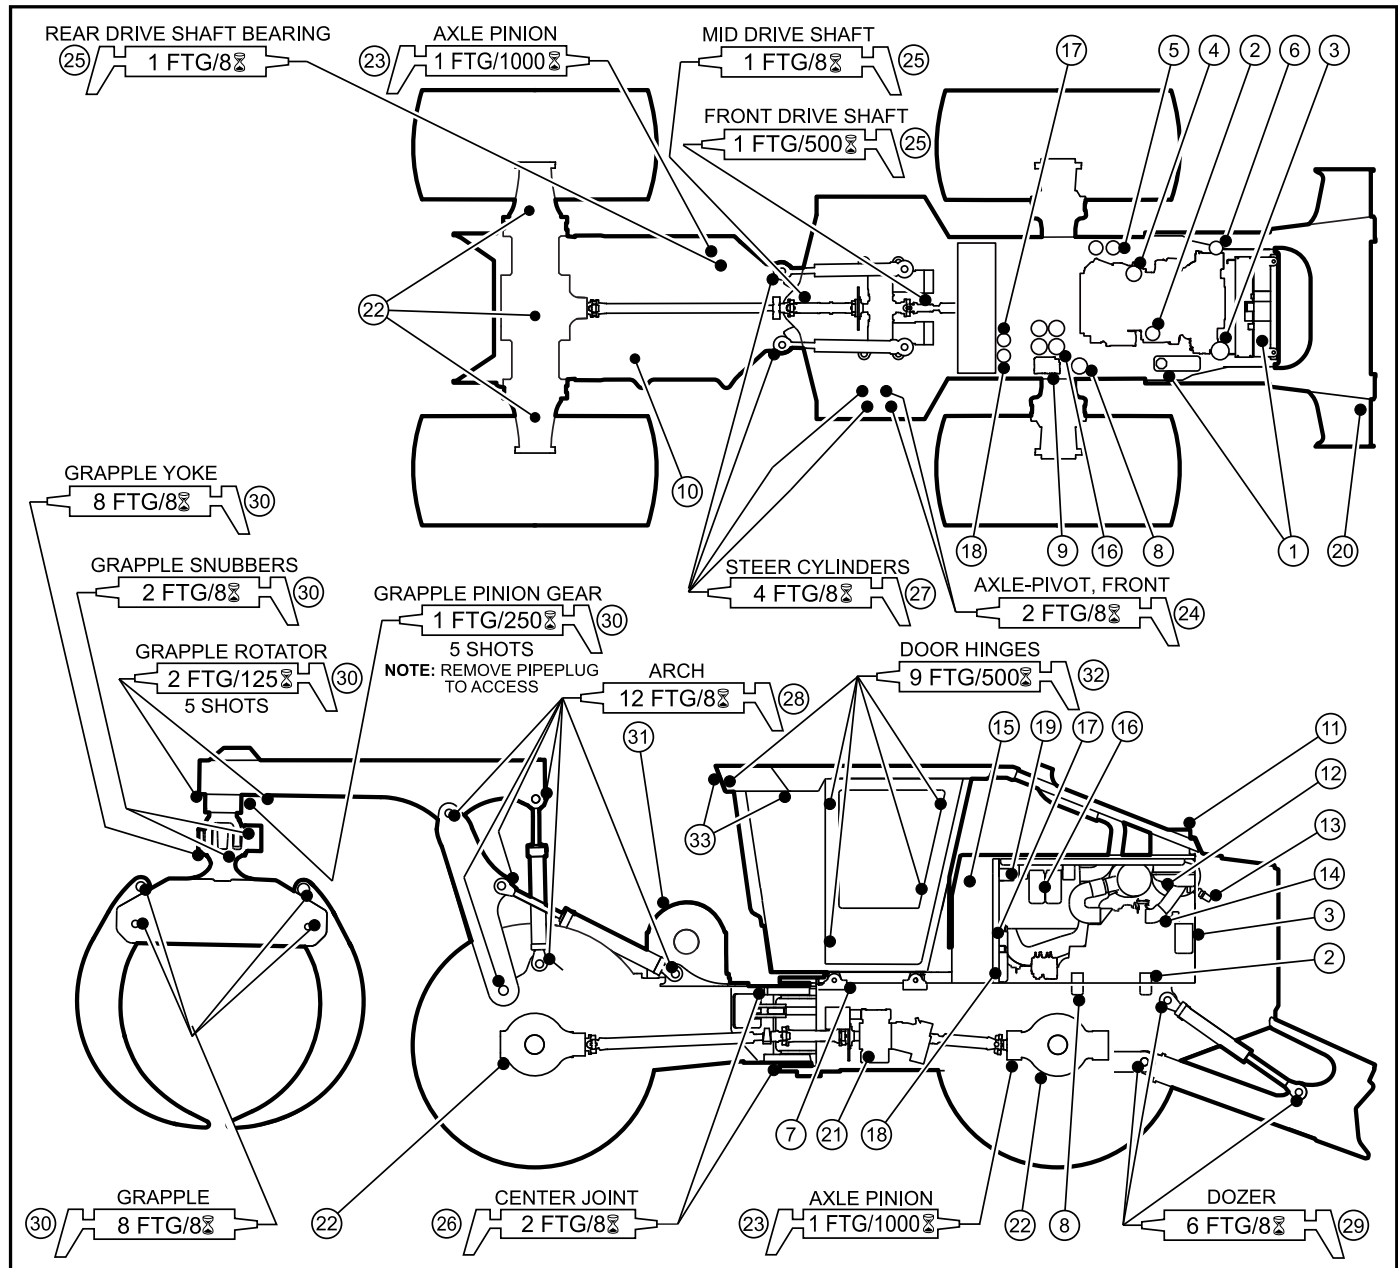

LEGEND

** STEER MACHINE FULLY BEFORE GREASING MID DRIVE SHAFT SLIP YOKE.

*** MAY USE UP TO BUT NOT MORE THAN 1 LITER OF LUBRIZOL 6178, DSL-178, OR EQUA-TORQUE 2411 OR 2414 (BRAKE NOISE REDUCTION).

LUBRICATION POINT WITH A DESIGNATED NUMBER OF FITTINGS (2FTG) AND HOURS BETWEEN SERVICING (125). JOINT TO BE PURGED.

◆ USE LITHIUM BASED GREASE CONTAINING MOLYBDENUM DISULFIDE.

† USE OF FILTERS OTHER THAN GENUINE OEM REPLACEMENT FILTERS IS NOT RECOMMENDED.



⌚ HOURS
CHK CHECK
REP REPLACE
DRN DRAIN
D/R DRAIN AND REFILL
LUB LUBRICATE

NOTE: The aftertreatment system and its related components are applicable to Tier 4f machines only.

632H SKIDDER												
SERVICE AND LUBRICATION POINTS												
REFER TO OPERATOR'S MANUAL FOR FURTHER INFORMATION												
SERVICE POINT NO.	ITEM	SERVICE EVERY						CAPACITY			DESCRIPTION	
		8 8	125 8	250 8	500 8	1000 8	2000 8	LITERS	USG	QTY		
1	COOLING SYSTEM	CHK	CHANGE COOLANT EVERY 2 YEARS						34.4	9.1		SEE ENGINE MANUFACTURER'S OPERATION AND MAINTENANCE MANUAL FOR REQUIRED ANTIFREEZE SOLUTION AND MIXTURE.
2	ENGINE OIL/FILTER	CHK •		REP •				•	•		• SEE ENGINE MANUFACTURER'S OPERATION AND MAINTENANCE MANUAL FOR PROCEDURES AND CAPACITIES.	
3	CRANKCASE VENTILATION FILTER - T4F ONLY				REP •					1		
4	FUEL FILTER, ENGINE						REP			1	THIS REPLACEMENT INTERVAL SUPERCEDES THE ONE SHOWN IN THE ENGINE MANUFACTURER'S OPERATION AND MAINTENANCE MANUAL DUE TO THE DUAL FUEL FILTERS ALSO USED ON THIS MACHINE	
5	FUEL FILTER, DUAL				REP					2		
6	FUEL FILTER/WATER SEPARATOR	DRN		REP						1	REFER TO SECTION 3 OF THE MANUAL FOR DETAILS.	
7	DEF TANK FILLER SCREEN		CHK							1		
7	DEF TANK STRAINER						CHK			1		
8	IN-LINE DEF STRAINER					CHK	REP					
9	DEF DOSING MODULE FILTER						REP			1		
10	FUEL TANK FILLER SCREEN		CHK							1		
11	AIR INTAKE PRECLEANER/INLET HOOD	CHK								1	CLEAN AS REQUIRED.	
12	AIR INTAKE PRIMARY ELEMENT	CHK								1	CHECK FILTER RESTRICTION INDICATOR. REFER TO 8 HOUR SCHEDULED MAINTENANCE FOR DETAILS.	
	AIR INTAKE SAFETY ELEMENT	CHK								1		
13	AIR CLEANER UNLOADER VALVE	CHK				REP				1	REFER TO SECTION 3 OF THE MANUAL.	
14	AIR INTAKE CONNECTIONS	CHK					REP			1	CHECK FOR LOOSE CLAMPS AND DAMAGED RUBBER COMPONENTS. REPLACE RUBBER COMPONENTS. INCLUDES CCV FILTER CONNECTION HOSES.	
15	HYDRAULIC TANK	CHK						123	32.5	1	DRAIN AND REFILL AS REQUIRED BY SEASONAL OIL CHANGE. (SEE HYDRAULIC OIL CHART)	
16	HYDRAULIC FILTER, FULL FLOW, INCLUDES: 1 BLUE WATER ABSORBING ELEMENT 3 WHITE HIGH PERFORMANCE FILTER				REP †					4	NOTE: MUST USE: 1 BLUE FILTER ELEMENT. 3 WHITE FILTER ELEMENT.	
17	CHARGE PRESSURE FILTER				REP †					1	CHECK FILTER RESTRICTION INDICATOR ON FILTER WITH ENGINE RUNNING AT FULL AND WITH OIL FLOW.	
18	TRANSMISSION OIL FILTER				REP †					1		
19	HYDRAULIC TANK BREATHER						REP			1		
20	PRESSURIZED WATER SYSTEM	CHK	TEST			D/R		52	13.7		SEASONAL DRAIN AND REFILL.	
21	TRANSMISSION TRANSMISSION, EHS (OPTIONAL)	CHK			D/R			6.2 12.6	1.6 3.3	1	FILL WITH MIL-L-2105C OR API-GL-5 LUBRICANT GRADE 75W-90.	
22	AXLES, SEVERE DUTY : FRONT REAR PLANETARY REAR DIFFERNETIAL		CHK			D/R ***		39 18 27	10.3 4.8 7.1	1 2 1	FILL WITH MIL-L-2105C OR API-GL-5 LUBRICANT GRADE/WEATHER TEMPERATURE: BELOW -10°F(-23°C) USE 75W-90 UP TO 100°F(38°C) USE 80W-90 ABOVE 100°F(38°C) USE 85W-140	
23	PINION GREASE SEAL - FRONT AND REAR AXLE					LUB		PURGE		2	ONE FITTING PER AXLE LITHIUM BASE EP2 GREASE ◆	
24	AXLE-PIVOT (FRONT ONLY)	LUB						PURGE		2	LITHIUM BASE EP2 GREASE ◆	
25	FRONT DRIVE SHAFT				LUB			PURGE		1	LITHIUM BASE EP2 GREASE ◆	
	MID DRIVE SHAFT	LUB **					1					
	REAR DRIVE SHAFT BEARING	LUB								1		
26	CENTER JOINT	LUB						PURGE		2	LITHIUM BASE EP2 GREASE ◆	
	CENTER JOINT BEARING PRELOAD	CHK 48 8				CHK					REFER TO SECTION 3 OF THE MANUAL FOR DETAILS.	
27	STEERING CYLINDERS	LUB						PURGE		4	LITHIUM BASE EP2 GREASE ◆	
28	DUAL ARCH CYLINDER & PIVOTS	LUB						PURGE		12	LITHIUM BASE EP2 GREASE ◆	
29	DOZER BLADE CYLINDER & PIVOTS	LUB						PURGE		6	LITHIUM BASE EP2 GREASE ◆	
30	GRAPPLE	SEE LUBRICATION POINTS DIAGRAM										
31	WINCH: CARCO	CHK				D/R		12	3		REFER TO WINCH MAINTENANCE IN SECTION 3 OF MANUAL SEE ALSO WINCH MANUFACTURER'S MANUAL.	
32	DOOR HINGES				LUB			PURGE		9	LITHIUM BASE EP2 GREASE ◆	
33	CABIN AIR AND A/C FILTERS		CHK		REP †					2	CLEAN OR REPLACE AS NECESSARY	