

MANUAL OF FACE ACCESS CONTROL


Catalog

1. Notice for Use.....	2
1.1 Access Control Wiring Diagram	2
2. Install the Device	3
2.1 Device Installation Environment	3
.....	3
2.2 Device Installation Steps	3
3. Use Introduction.....	6
3.1 User Interface and Enter the Main Menu	6
3.2 Identifying Methods	6
4. User Management.....	7
4.1 User Registration	7
4.2 Modify User Information.....	7
4.3 Download & Upload Data.....	8
5. Download the Report	8
6. Setting.....	8
6.1 Device	9
6.2 Time Setting.....	9
6.3 Network.....	9
6.4 Initial.....	10
6.5 Access Control Function	10
7. Record View	11
7.2 Registration Information	11
7.3 Device Information	11
8. Wireless Doorbell	11
8.1 Doorbell Button Function	11
8.2 Function Introduction:.....	11
9 Device Administrator Clearing Method	12


1. Notice for Use

1.1 Access Control Wiring Diagram

1) Access Control External Power wiring diagram (recommendation)

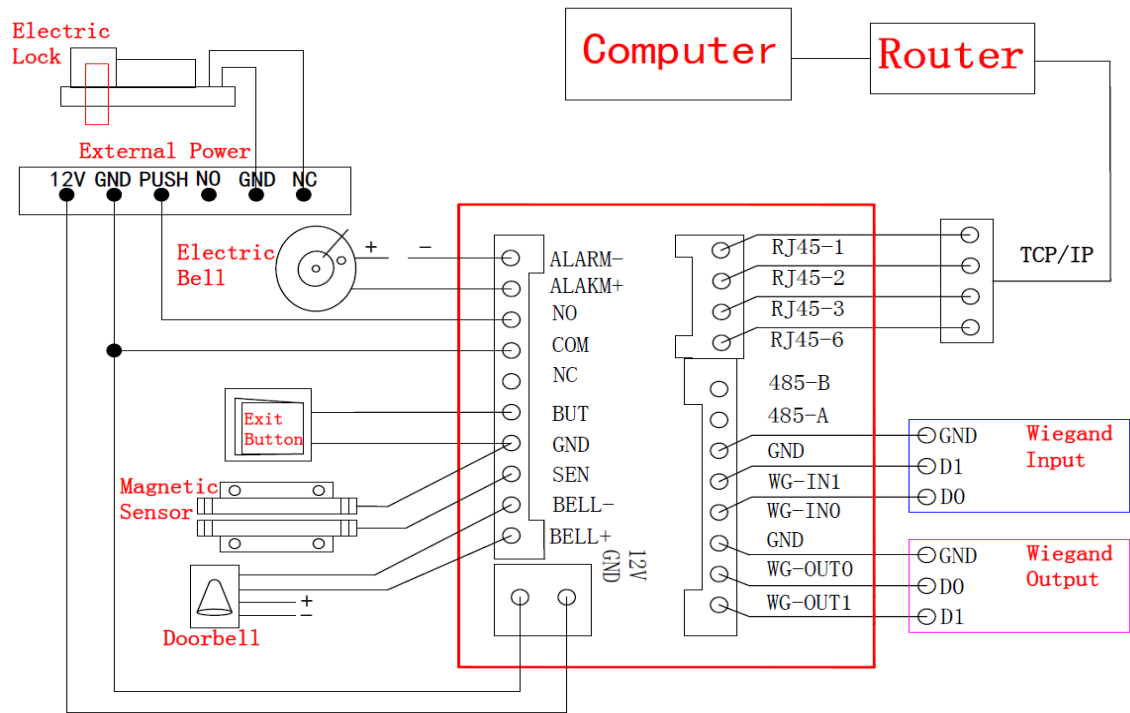

2) General Power wiring diagram

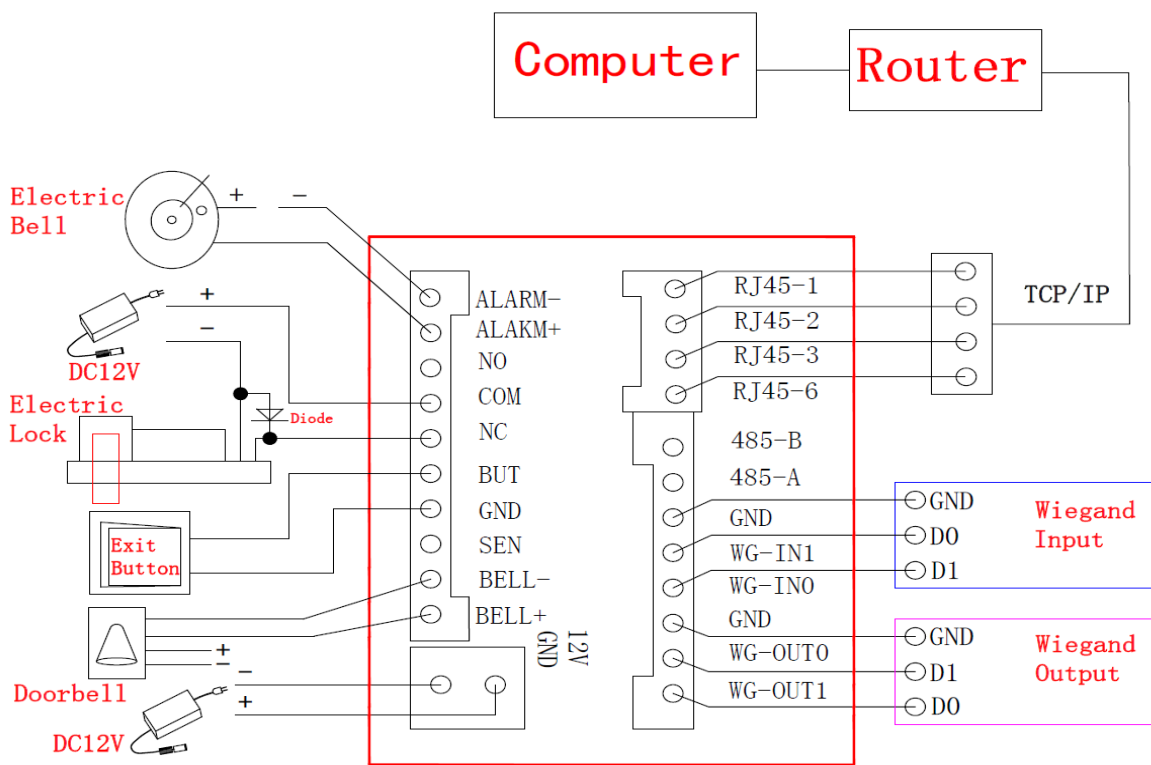


(Note: Need to connect a diode in parallel at both ends of the electric lock to prevent the back electromotive force released by the electromagnet from burning out the access control system.)

2. Install the Device


2.1 Device Installation Environment

1) Recommended Install Environment

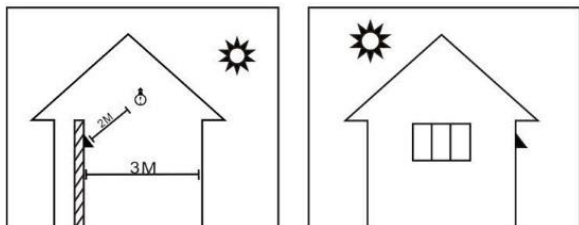

Install the device indoors or outdoors, the ambient light source installation environment lighting 0-8000LUX. When you install the device indoors, away from the window and door for 3 meters, and light source for 2 meters. Avoid direct sunlight when installing outdoors.


2) Several Location Which Will Affect Installation

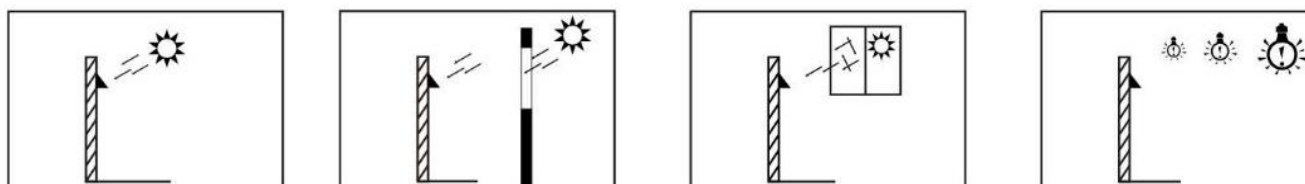


1.Direct Sunlight (outdoors) 2. The sun shines through the window (indoors) 3. The sun is oblique through the window (indoors) 4. Light irradiation at close range (indoors)

2.2 Device Installation Steps


- 1) It is recommended that the height from the baseline to the ground is 1.25m (suitable for height range 1.5m -1.8m), it can be adjusted according to the overall height of the user. After the installation height is determined, the installation positioning template will be affixed to the installation location. Drilling cable entry and fixing holes according to the positioning template (picture 1)
- 2) Remove the bottom of the fuselage screws with screwdriver (picture 2)
- 3) Separate the device from the bottom cover (picture 3)
- 4) Fix the seal ring and the bottom of the bottom cover and fixed it on the wall (picture 4)
- 5) Align the device with the mounting tabs of the bottom cover and pull it down into the mounting position (picture 5)
- 6) Screw the device and bottom cover firmly (picture 6)

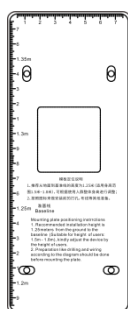


Picture 1

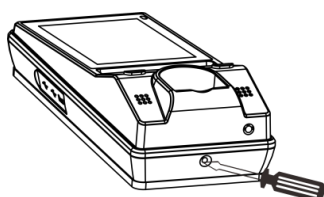


Picture 2

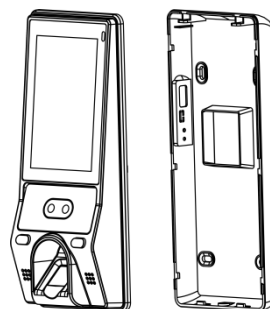


Picture 3

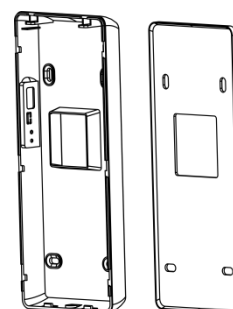

Picture 4

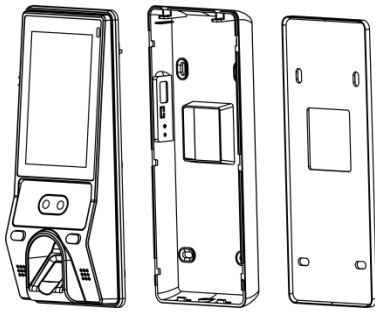


Picture 5

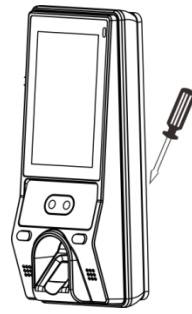

Picture 6


2.3 Distance from Staff to Device

Recommended distance between the machine and the machine is 0.8 meters (for height range of 1.55-1.85 meters). It can be adjusted according to the effect face images the device obtain; when the face image is displayed large, it can be moved backwards appropriately; when the face image is displayed small, it can be moved forward properly.

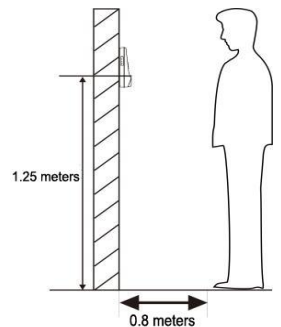

2.4 Staff Facial Expressions and Standing Posture

- 1) Recommended Facial Expressions and Several Kinds of Facial Expressions that Affect Recognition:

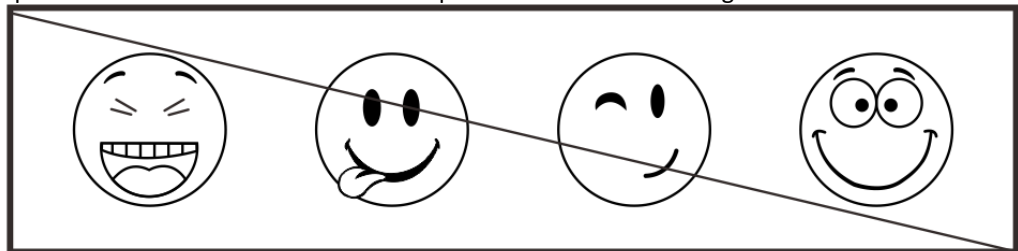


Right

Wrong

- 2) Recommended Staff Standing Posture and Several Kinds of Recognition Posture that Effect Standing Posture: (Note: In the process of face registration and identification, please maintain a natural look and standing posture.)



Right

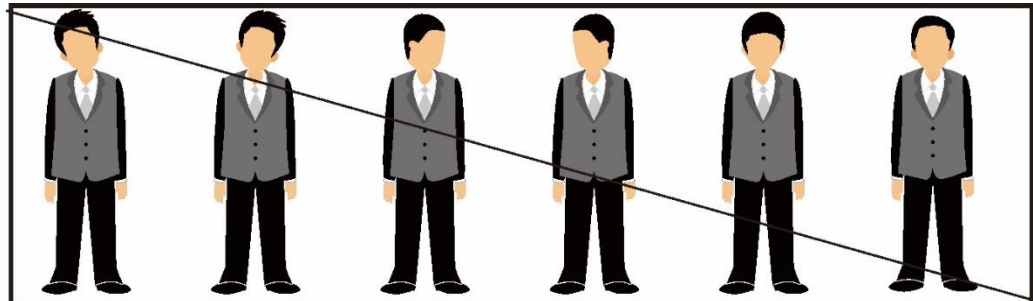


Wrong


2.5 The Use of Device

Recommended location and method:


In the process of face registration and identification, the installation position of the equipment must be kept unchanged. If the equipment needs to be moved, the installation height must be the same as the installation environment. Otherwise, the identification effect of the equipment may be deteriorated.

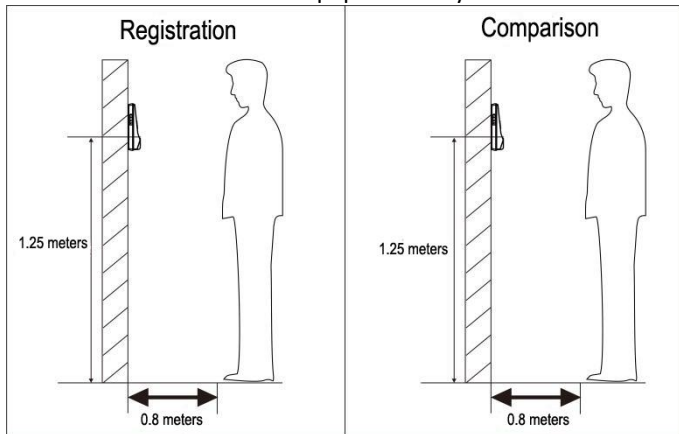


Several methods which will affect face recognition

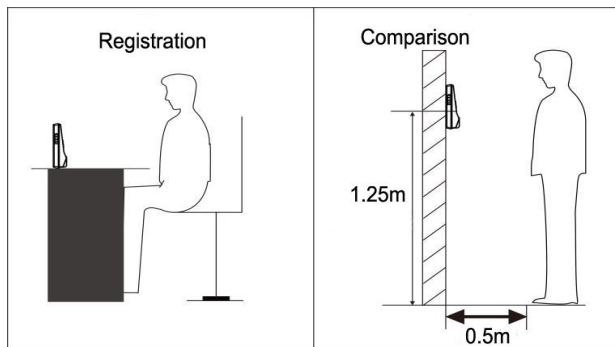


Inconsistence between registration and contrast postures.

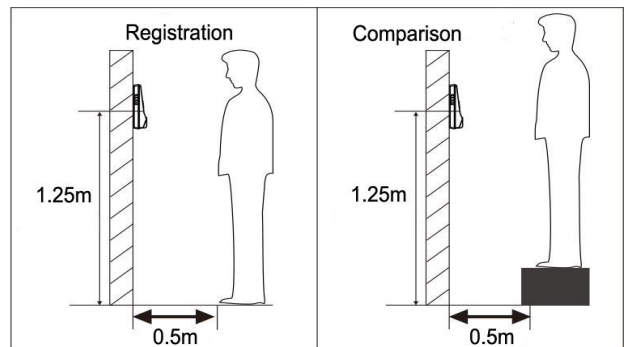

Inconsistence between registration and height.

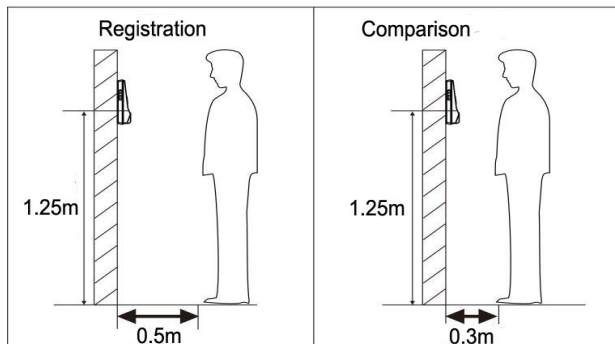


Inconsistence between registration and distance.

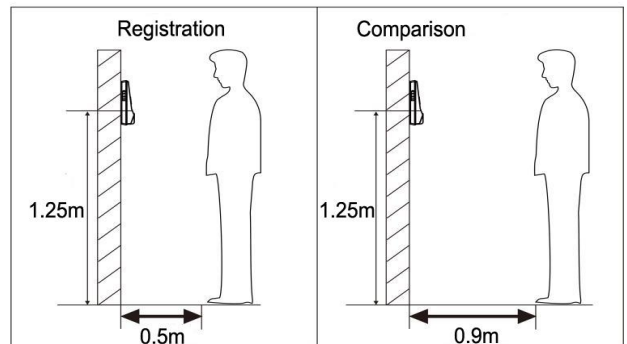


Inconsistence between registration and distance.


2.6 Press the fingerprints

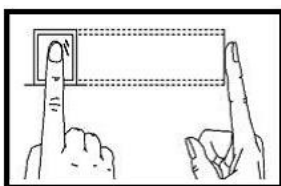


Right

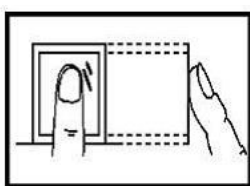


Fingerprint heart misalignment

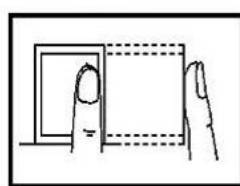

Too biased

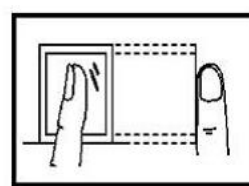

Tilt

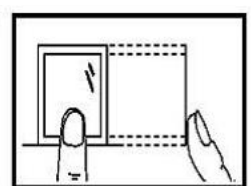

Too down

Tip: fingerprint center as far as the center of the window

Please use the correct way to press the registration and comparison, to avoid improper operation caused by degradation of recognition performance.

3. Use Introduction


1) Keypad Description

ESC Delete Button: Exit the current interface or cancel the current operation;

 Doorbell Button.


3.1 User Interface and Enter the Main Menu

Press the icon to  enter menu
Or slip left / right to enter menu; Enter the menu by manager if there have manager.

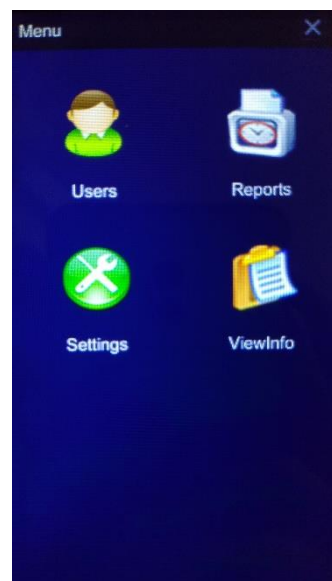


3.2 Identifying Methods

User identifies through face, fingerprint, ID / IC card and password authentication at the initial interface. After the authentication is passed, the open record will be saved on the device. The voice prompt "Thank you" will return to the initial interface after a period of verification.

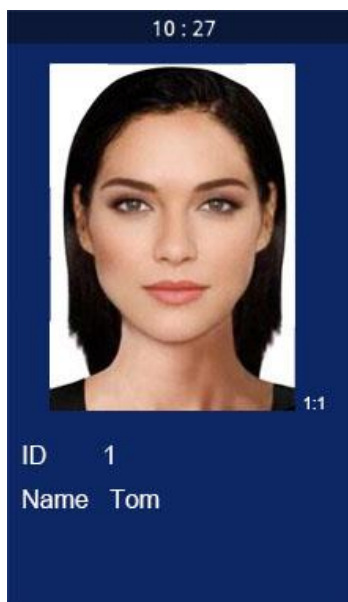

Success Recognition

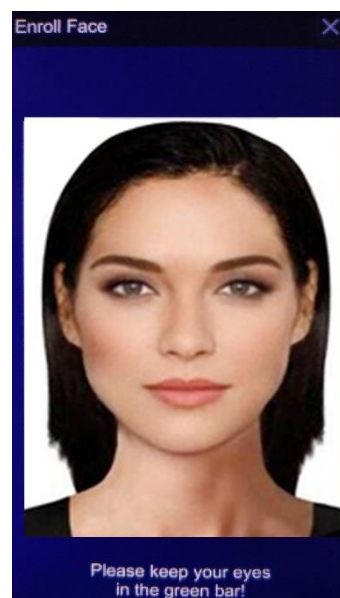


4. User Management

Enter the menu to jump to the "User" to into the user management

4.1 User Registration


New employees enter the work number and name of the staff face, fingerprint, ID / IC card and password registration. The device supports T9 input method.

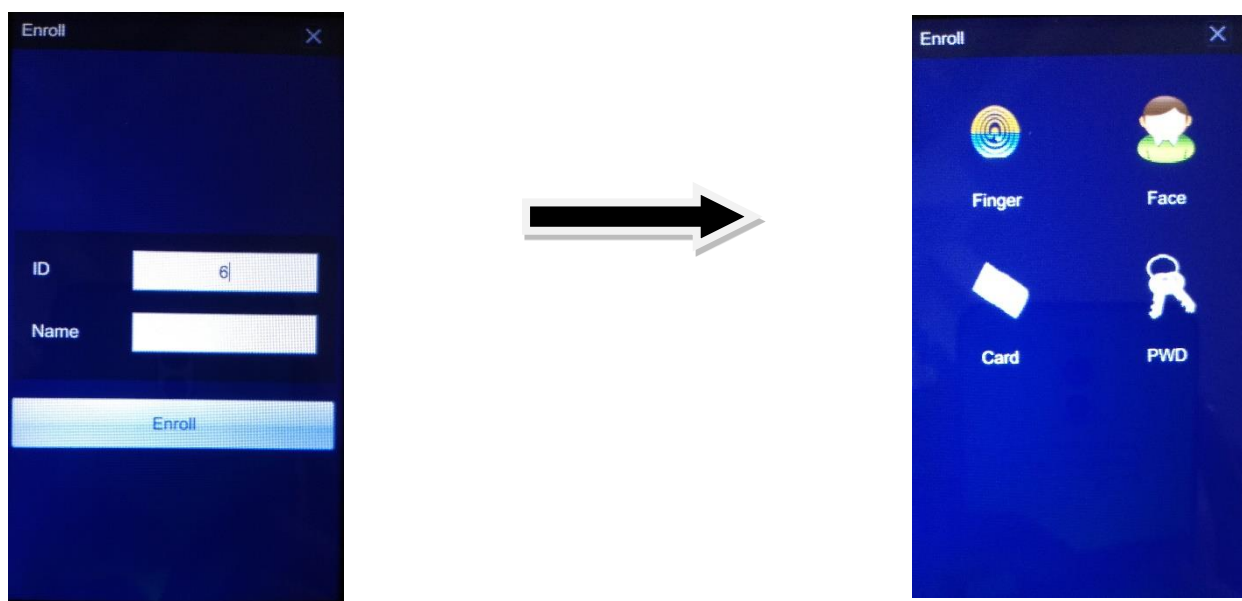

4.2 Modify User Information

There are two ways to find the specified user in the "User Browsing" interface

- 1) Click the "ID" to enter ID editing interface, enter the corresponding ID to find the specified user;
 - 2) Click on the user's name or face and fingerprint pattern to enter "Modify" interface. Enter the editing interface from "ID" column and enter the corresponding ID and confirm, enter the user's data modification interface;
- Data modification includes name, card number, password, authority, access control settings, face and fingerprinting and deletion of users.

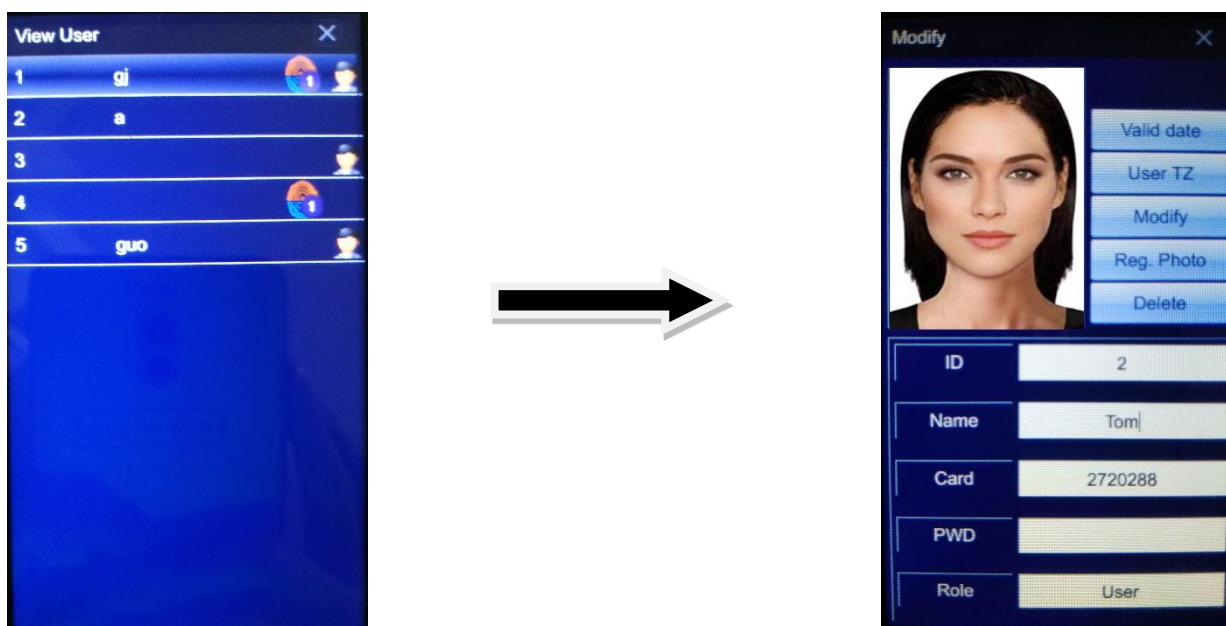

Lock Register:

Lock Register is based on related settings user needs.

You can enter this menu to check the access control setting status of a user:

That is, the user's time every day, click the "Lock Register" into the Sunday - Saturday time slot selection

4.3 Download & Upload Data


Download data to the U disk backup, to prevent data loss and upload data conveniently in the future.

You can upload employee's information from U disk to several access control, eliminating duplication of input operations.

5. Download the Report


Steps:

- 1) Insert the USB flash into the U-DISK port of the device.
- 2) Enter the menu, click "Report"
- 3) Click "Log", and it will hint "Encript?". Press "ESC" key is not encrypted, press "OK" key for encryption. Then select "Working!" to download original record to U Disk. After download completed and hinted "Download OK!", can you pull out the U disk.
- 4) The original record file that downloaded to the U disk and generated not encrypted, can be viewed on the computer with Notepad.

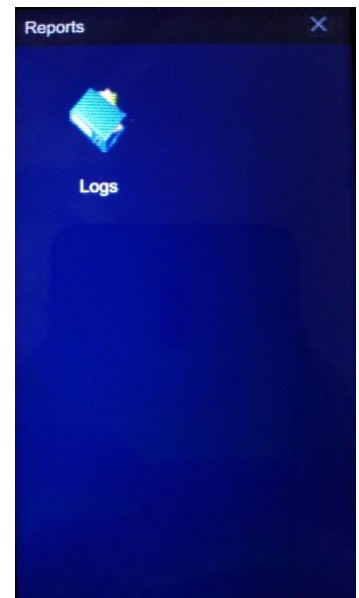

6. Setting


Enter the menu, click "Settings"

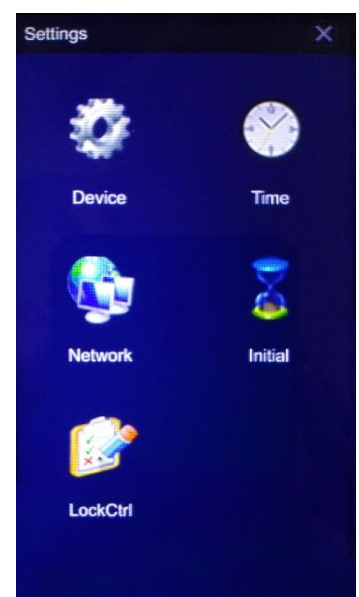

6.1 Device

Click “settings” to enter setting menu


Admins:	0 to 10 optional
Volume Settings:	0 to 10 optional
Verify Mode:	FC/face, FP/fingerprint, P/password, C/ID/IC card
Verify Mode:	The time that back to the menu after verification
AVL Logs Alert:	Set the minimum logs quantity, it will alarm after be reached
Punch Interval:	The interval for two or more than two times of verification, After setting, device will save the first log
Screen Saver:	The device will into screensaver model after the setting time
Sleep Time:	The device will into sleep time from screensaver model after the setting time
Set Alarms:	Up to 24 rings can be set in a day

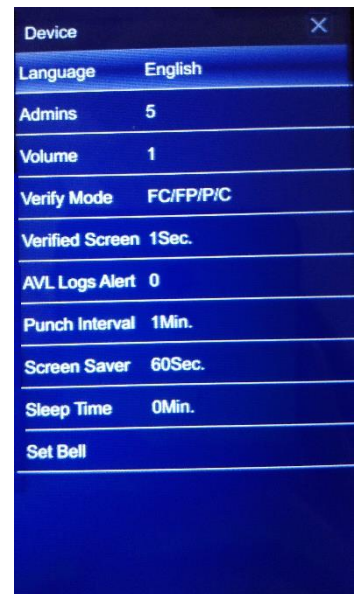

6.2 Time Setting

Menu → Settings → Time

Set the date and time, then save it.

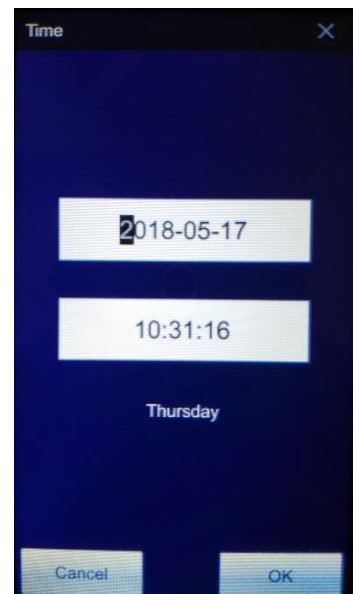


6.3 Network


Menu → Network (You could set LAN, Wi-Fi, Server Port, Net Password, Server IP, Server Port, Realtime Req).

When real-time monitoring needs to be started, set the corresponding “Server IP” and “Server Port”, and set "Realtime Req" to "Yes".

- 1) Choose whether to use the LAN network, the default is LAN enabled, you can enter the LAN settings interface, set the Device IP, Subnet mask, Gateway, according to the actual network environment configuration

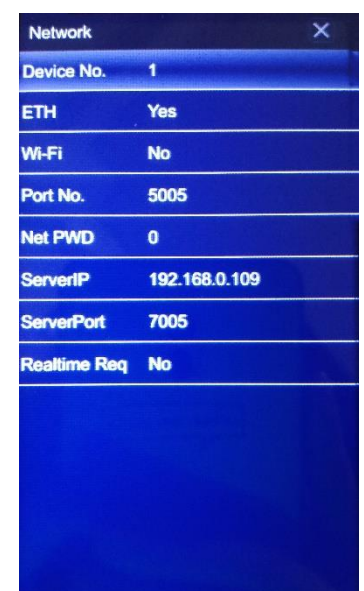

- 2) Wi-Fi network: Enter the Wi-Fi network Select "Yes" to open the Wi-Fi network communication function, enable DHCP by default or select "No" to turn off the IP setting manually, then enter "Select Network" to select the WIFI signal which need to connect, finally enter the password to connect Wi-Fi network.

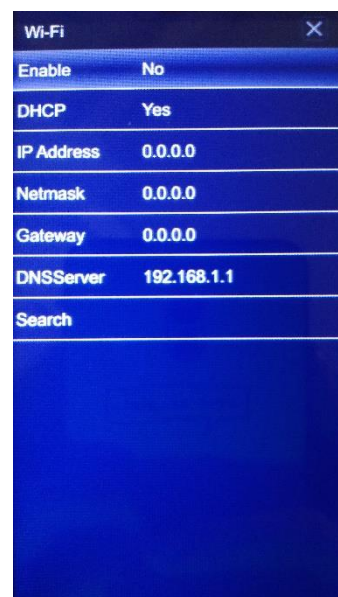


6.4 Initial

Menu → Setting → Initial

You could Reset Default, Delete All Logs, Delete All Users, Delete All Data, Upgrade Firmware From USB.

Password for deleting is "8282".


Please note "Reset Default" will not delete user data and logs, "Delete All Data" will delete all data, logs, and default device, please use it carefully.

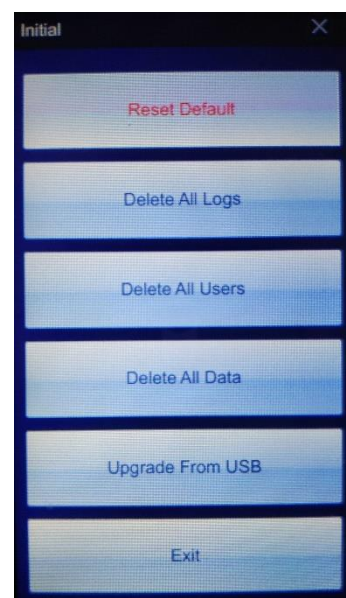

6.5 Access Control Function

Click "Setting" to enter Settings menu, then click "LockCtrl" to enter the LockCtrl (you can set the "Time Setting", "Users", "Unlock Time", "Alarm Type", "Anti Pass", "Alarm delay", "Turn Off Alarm", "Tamper Alarm", "Wiegand format", "Wiegand output").

Time Setting:	The definition of the time interval for unlocking every day
Users:	Require a few users to confirm before they can open the door at the same time
Unlock Time:	The machine control time of opening or closing the electric lock
Alarm Type:	The type of door magnet: there are three types: No, Open Type, Closed Type; "No" does not use the door switch, "Open Type" refers to the case of the door closed normally open magnet, "Closed Type" under the door magnet is closed.
Door magnetic delay:	Open the door after some time before starting the alarm, this time is the door magnetic delay.
Anti-Pass:	Prevent trailing out
Alarm delay:	After triggering tamper switch of the machine, start alarm if over the delay time
Turn Off Alarm:	This alarm can be stopped with this option when the alarm has been triggered and it has been excluded that it is not an illegal operation

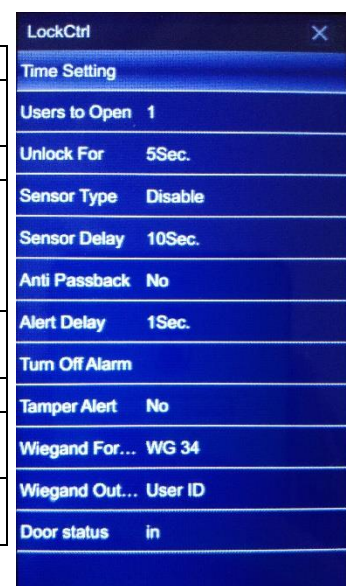

Tamper Alarm:	Set the alarm signal on or off when the machine is removed
Wiegand format:	Formats of WG input and output is the 26 or 34 optional, the default WG26
Wiegand Output	WG output number or card number optional, the default number

7. Record View

Viewing Administrator user record:

Enter ID, select the time of starting and ending. Click "OK" to check the employee's face, fingerprint, ID / IC or time when password recognition successful in this period.

(Note: The confirmation method FC is face recognition, FP is fingerprint recognition, C is ID / IC card recognition, P is password recognition.)

7.2 Registration Information

View user registration, management registration, attendance records, face, fingerprint, ID / IC card, password registration and other information.


7.3 Device Information

Check manufacturer(MFG), date of manufacture (Mfg. Date) and firmware version(Firmware).

8. Wireless Doorbell

8.1 Doorbell Button Function

- 1) Doorbell music selection button;
- 2) Doorbell volume up and down adjustment button;
- 3) Doorbell code and clear the code button

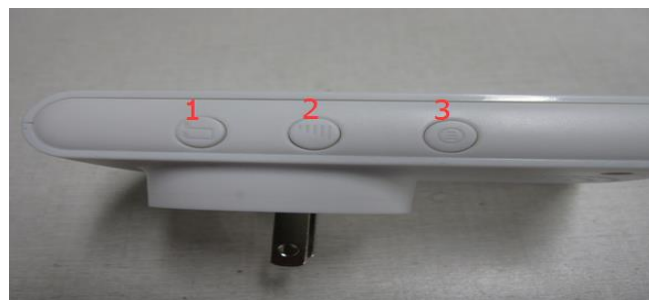

8.2 Function Introduction:

1) Doorbell music selection operation: Each time you press the button, different music rings (36 songs in total). The doorbell will keep the selected music when it is power off. If the power is off, the music automatically returns to the default "Ding Dong" music.

2) Doorbell volume addition and subtraction adjustment: the machine default volume is maximum, each time press the button, the volume down one level (total 4 volume adjustment) can be adjusted cycle.

3) Doorbell code operation: when the machine is powered on, the wireless doorbell plugged in; press the doorbell on the code key, you can hear the doorbell "ding dong", then click the machine doorbell button to check the code; and then click the machine doorbell button to see whether the wireless doorbell music will ring. If there is music ringing, the code is right; if there is no music ring, the code is wrong. Then re-follow the above operation and connect the code, a wireless doorbell can match multiple machines.

4) The doorbell clear the code operation: put the wireless doorbell on the code into the power, hold down button of clear the code (5 seconds); After you hear the "ding dong", release the button, then clear code successfully; Then press the triggers button of the doorbell of the machine to see if the doorbell will ring the codes just cleared. If it does not sound, it indicates that the code is cleared successfully. If it sounds, it indicates that the code clearing is unsuccessful and operates again according to the above operation mode.

(Note: When the doorbell is on the code, it must be one-to-one to avoid the code matching failure; when the multiple-machine is switched on, the rate of code matching will be affected.)

9 Device Administrator Clearing Method

With the machine turned on, use a tool such as a small screwdriver to insert the device into the middle hole of the bottom of the device and hold the button inside for 3 seconds to clear the device administrator.

