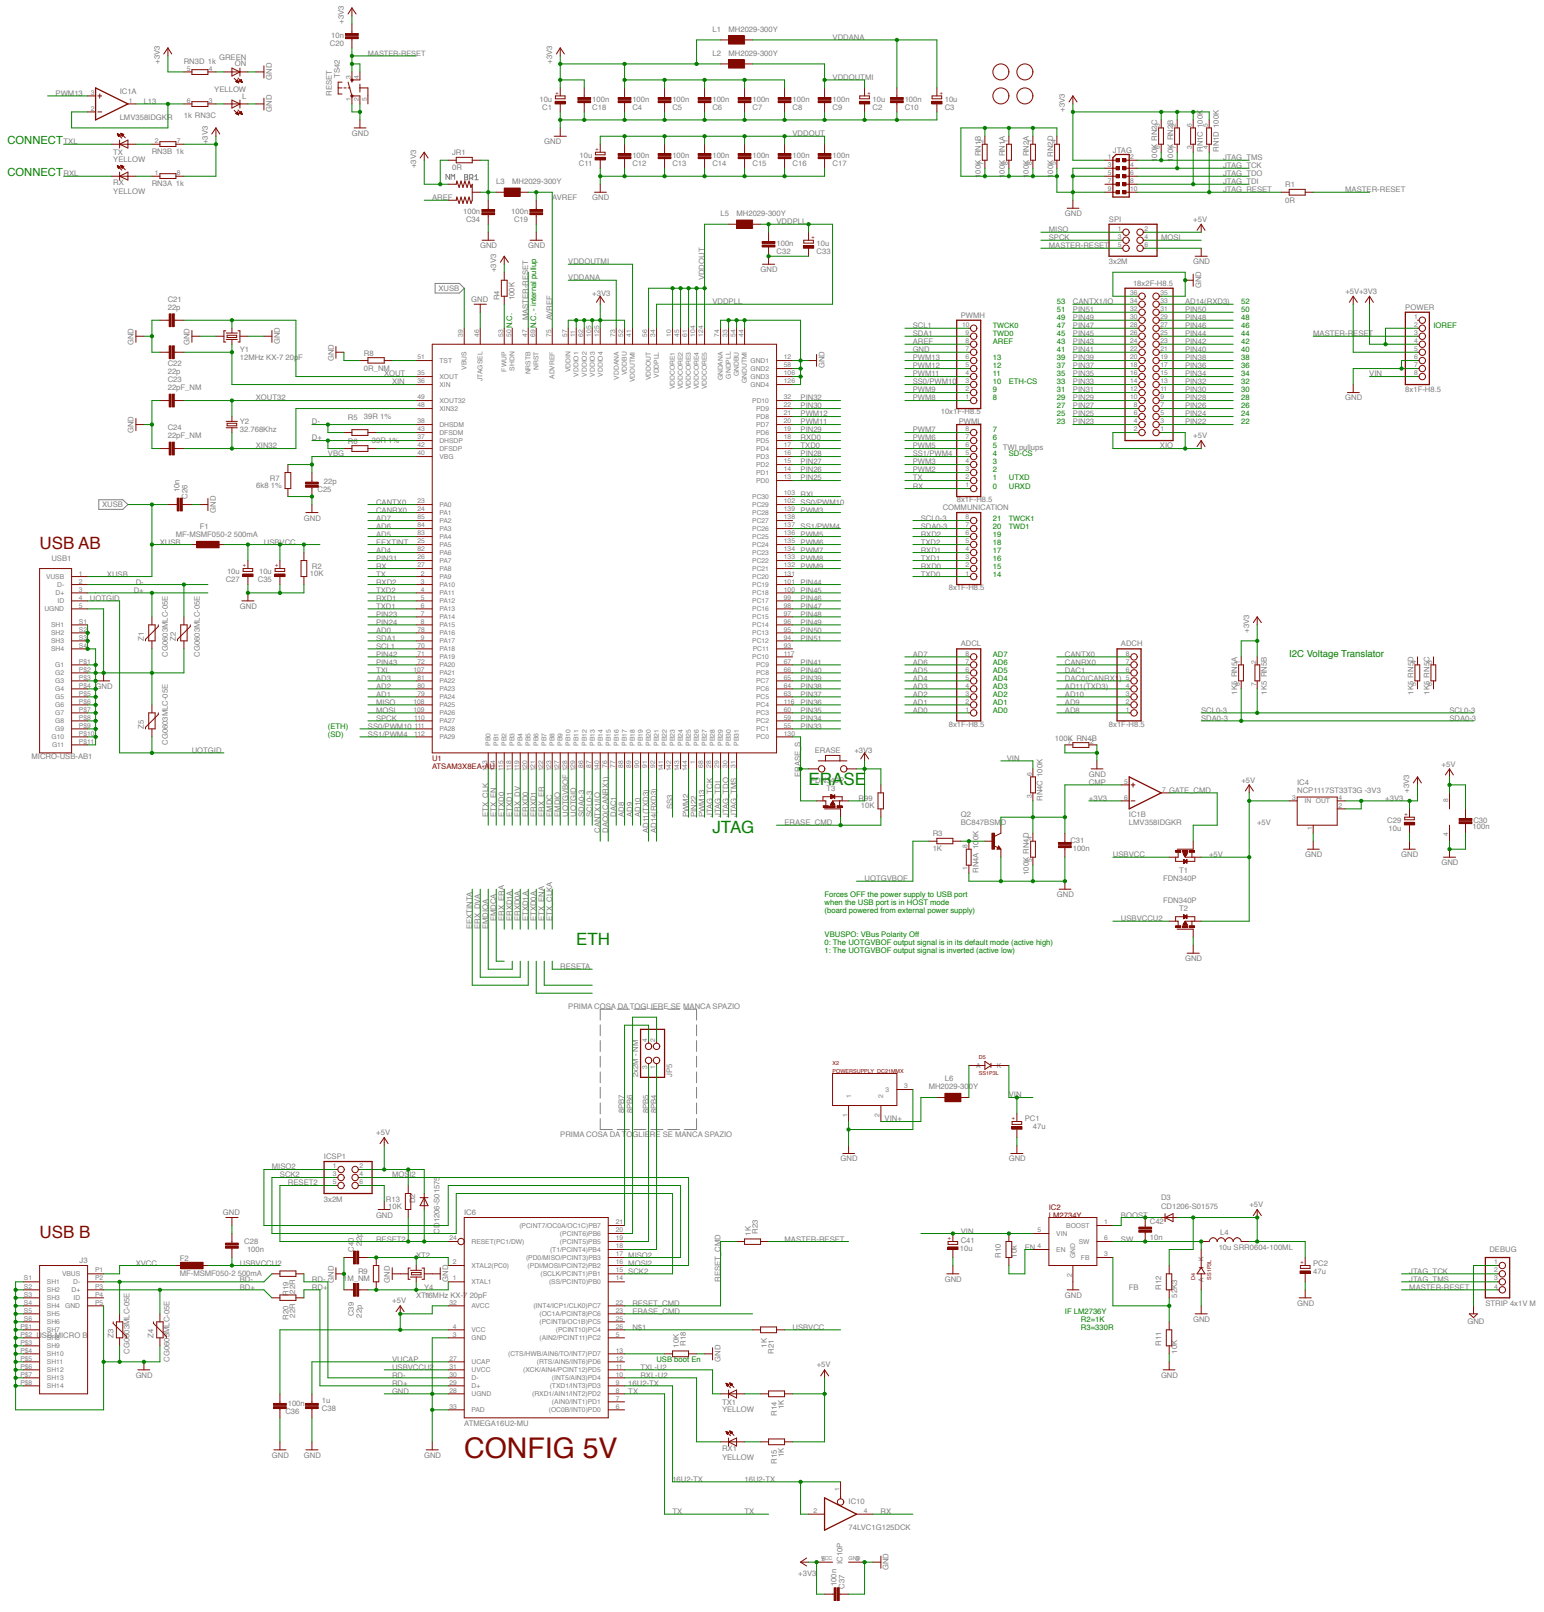
USB AB
USB B
CONFIG 5V
ERASE
JTAG
ETH
I2C Voltage Translator
Forces OFF the power supply to USB port when the USB port is in HOST mode (board powered from external power supply)
VBUSPO: VBus Polarity Off
0: The UOTGVBOF output signal is in its default mode (active high)
1: The UOTGVBOF output signal is inverted (active low)
PRIMA COSA DA TOGLIERE SE MANCA SPAZIO
ATSAM3X8EA-AU
ATMEGA16U2-MU
MICRO USB-AB1
MICRO B
74LVC1G125DCK
IF LM2736Y
R2=1K
R3=330R