



imageRUNNER

2206

User's Guide

Contents

Basic Operations	2
Parts and Their Functions	4
External View	5
Internal View	7
Control Panel	9
Display	11
Customizing the <Home> Screen	14
Using the Display	16
Placing Documents	19
Loading Paper	20
Loading Paper in the Paper Drawer	22
Loading Paper in the Multi-Purpose Tray	25
Loading Envelopes in the Multi-Purpose Tray	28
Loading Preprinted Paper	31
Specifying Paper Size and Type	34
Registering a Custom Paper Size	36
Setting Auto Shutdown Time	38
Entering Sleep Mode	39
 Copying	 42
Basic Copy Operations	44
Selecting Copy Paper	46
Canceling Copies	47
Various Copy Settings	49
Enlarging or Reducing	50
Selecting Document Type	51
Adjusting Density	52
Copying Multiple Documents onto One Sheet (2 on 1/4 on 1)	53
Copying Both Sides of an ID Card onto One Page	55
Erasing Dark Borders and Frame Lines (Erase Frame)	56
Collating Copies by Page	58
Splitting Facing Page Documents into Separate Pages for Copying	60
Configuring Copy Settings to Your Needs	61
Changing Default Settings	62
Registering Frequently Used Copy Settings	63
 Using the Machine as a Printer	 65
Printing from a Computer	66
Canceling Prints	68
Checking the Printing Status	71
Configuring Print Settings to Your Needs	73

Registering Combinations of Frequently Used Print Settings	74
Changing Default Settings	76
Using the Machine as a Scanner	79
Scanning from the Machine	80
Scanning from a Computer	83
Scanning Using an Application	84
Configuring Scan Settings in ScanGear MF	86
Security	88
Protecting the Machine from Unauthorized Access	89
Setting Access Privileges	90
Setting the System Manager PIN	91
Restricting the Machine's Functions	92
Restricting USB Functions	93
Setting Menu List	95
Preferences	96
Timer Settings	99
Common Settings	104
Copy Settings	106
Printer Settings	108
Adjustment/Maintenance	109
System Management Settings	114
Troubleshooting	119
Clearing Jams	121
Countermeasures for Each Message	130
Countermeasures for Each Error Code	133
Common Problems	134
Installation/Settings Problems	136
Copy/Printing Problems	137
Miscellaneous Problems	138
When You Cannot Print Properly	139
Printing Results Are Not Satisfactory	141
Paper Creases or Curls	145
Paper Is Fed Incorrectly	147
When a Problem Cannot Be Solved	149
Maintenance	151
Cleaning the Machine	152
Exterior	153
Platen Glass	154
Transfer Roller	155

Drum	156
Fixing Assembly	157
Replacing the Toner Cartridges	159
Configuring Purchase Information for Consumables	161
How to Replace the Toner Cartridges	163
How to Replace the Drum Unit	166
Printing Reports and Lists	170
User Data List/System Manager Data List	171
Copy/Print Charge Log Report	172
Viewing the Counter Value	173
Initializing Settings	175
Initializing Menu	176
Initializing System Management Settings	177
Initializing All Data/Settings	178
Replacement Parts	179

Appendix 181

Third Party Software	182
Feature Highlights	183
Going Green and Saving Money	184
Improving Efficiency	186
Going Digital	187
So Much More	189
Specifications	190
Main Unit	191
Available Paper	194
Scan Function	197
Printer Functions	198
System Environment	199
Options	200
Optional Equipment	201
Manuals and Their Contents	202
Using User's Guide	203
Screen Layout of User's Guide	204
Viewing User's Guide	207
Basic Windows Operations	208
Notice	212

Basic Operations

Basic Operations	2
Parts and Their Functions	4
External View	5
Internal View	7
Control Panel	9
Display	11
Customizing the <Home> Screen	14
Using the Display	16
Placing Documents	19
Loading Paper	20
Loading Paper in the Paper Drawer	22
Loading Paper in the Multi-Purpose Tray	25
Loading Envelopes in the Multi-Purpose Tray	28
Loading Preprinted Paper	31
Specifying Paper Size and Type	34
Registering a Custom Paper Size	36
Setting Auto Shutdown Time	38
Entering Sleep Mode	39

Basic Operations

3EEJ-000

This chapter describes basic operations, such as how to use the control panel or how to load the paper and documents, that are frequently performed to use the functions of the machine.


■ Parts and Their Functions

This section describes the exterior and interior parts of the machine and their functions, as well as how to use the keys on the control panel and how to view the display. ▶ **Parts and Their Functions(P. 4)**



■ Using the Display

This section describes how to toggle the display and select items. ▶ **Using the Display(P. 16)**

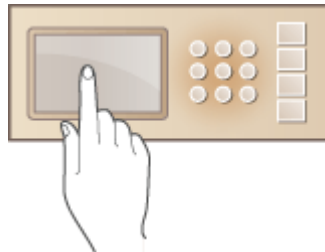

■ Placing Documents


This section describes how to place documents on the platen glass. ▶ **Placing Documents(P. 19)**



(

■ Loading Paper

This section describes how to load the paper into the paper drawer and multi-purpose tray. ▶ **Loading Paper(P. 20)**

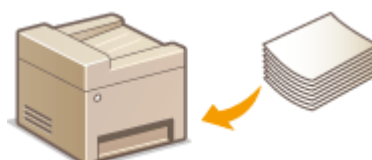

■ Entering Sleep Mode

This section describes how to set the sleep mode. ▶ **Entering Sleep Mode(P. 39)**



Parts and Their Functions


3EEJ-001

This section describes the parts of the machine (exterior, front and back side, and interior) and how they function. In addition to describing the parts of the machine used for such basic operations as placing documents, loading paper, and replacing the toner cartridges, this section also describes the keys on the control panel and display. Read this section for tips on how to use the machine properly.



- ▶ **External View(P. 5)**
- ▶ **Internal View(P. 7)**
- ▶ **Control Panel(P. 9)**

External View

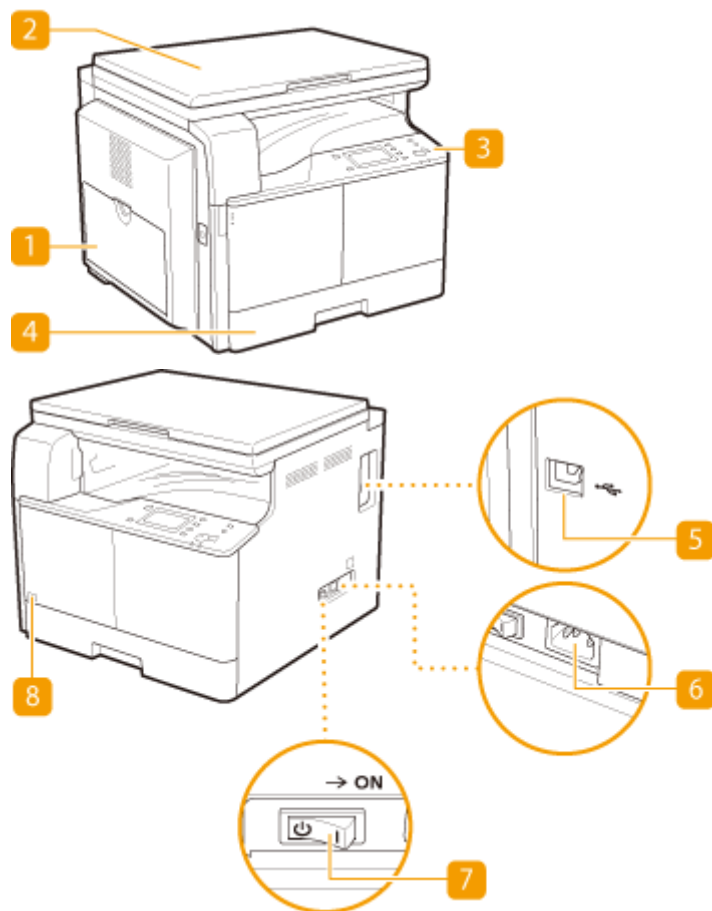

1 Multi-purpose tray

Load the paper into the multi-purpose tray when you want to temporarily use a type of paper different from that which is loaded in the paper drawer. ▶ **Loading Paper in the Multi-Purpose Tray(P. 25)**

2 Platen cover

Secures the originals placed on the platen glass. ▶ **Placing Documents(P. 19)**

3 Control panel

The control panel consists of keys such as the [Start] key and [Stop] key, a display, and status indicators. You can perform all the operations and specify settings from the control panel. ▶ **Control Panel(P. 9)** ▶ **Display(P. 11)**

4 Paper drawer 1

Load the type of paper you frequently use into the paper drawer. ▶ **Loading Paper in the Paper Drawer(P. 22)**

5 USB port

Connect a USB cable when connecting the machine and a computer.

6 Power socket

Connect the power cord.


7 Power switch

Turns the power ON or OFF. To restart the machine, turn OFF the machine, wait for at least 10 seconds, and turn it back ON.

8 Toner code

This code indicates the type of genuine toner that can be used with the machine. Use toner with a code that includes the same letters as the code on the front cover of the machine.

Internal View

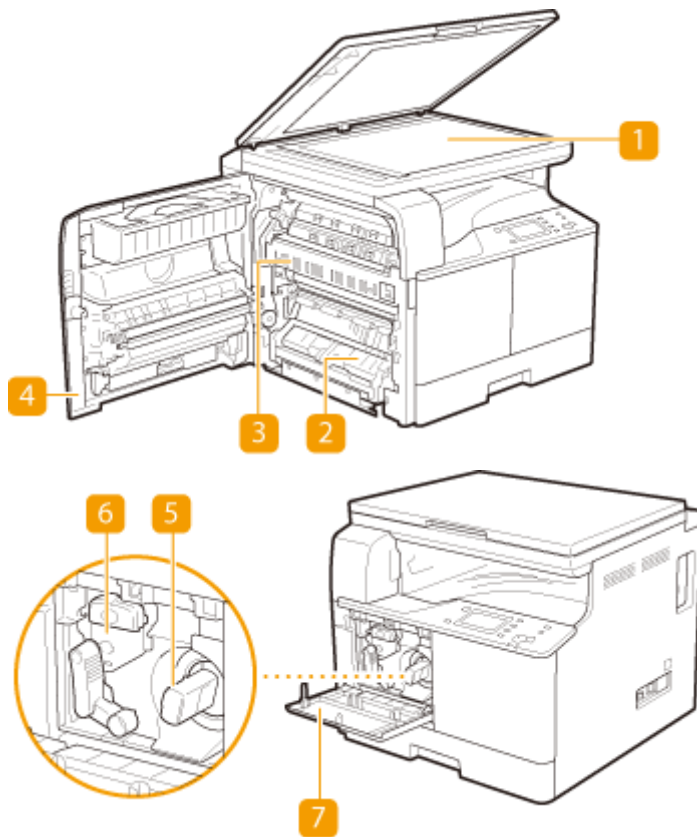

1 Platen glass

Place documents to scan on the platen glass. Also, use the platen glass to place thick or bound documents such as books. ► **Placing Documents(P. 19)**

2 Drawer 1 left cover

Open this cover when clearing a paper jam in paper drawer 1. ► **Clearing Jams(P. 121)**

3 Fixing assembly

When a paper jam occurs around the fixing assembly, clear the paper jam from here. ► **Clearing Jams(P. 121)**

4 Left cover

Open this cover to clear a paper jam inside the main unit. ► **Clearing Jams(P. 121)**

5 Toner cartridge

Replace the toner cartridge when the toner runs out. ► **How to Replace the Toner Cartridges(P. 163)**

6 Drum unit


Replace the drum unit before the usage period expires. ► **How to Replace the Drum Unit(P. 166)**

7 Front cover

Open this cover to replace the toner cartridge or drum unit. ▶ **How to Replace the Toner Cartridges(P. 163)**

Control Panel

3EEJ-004

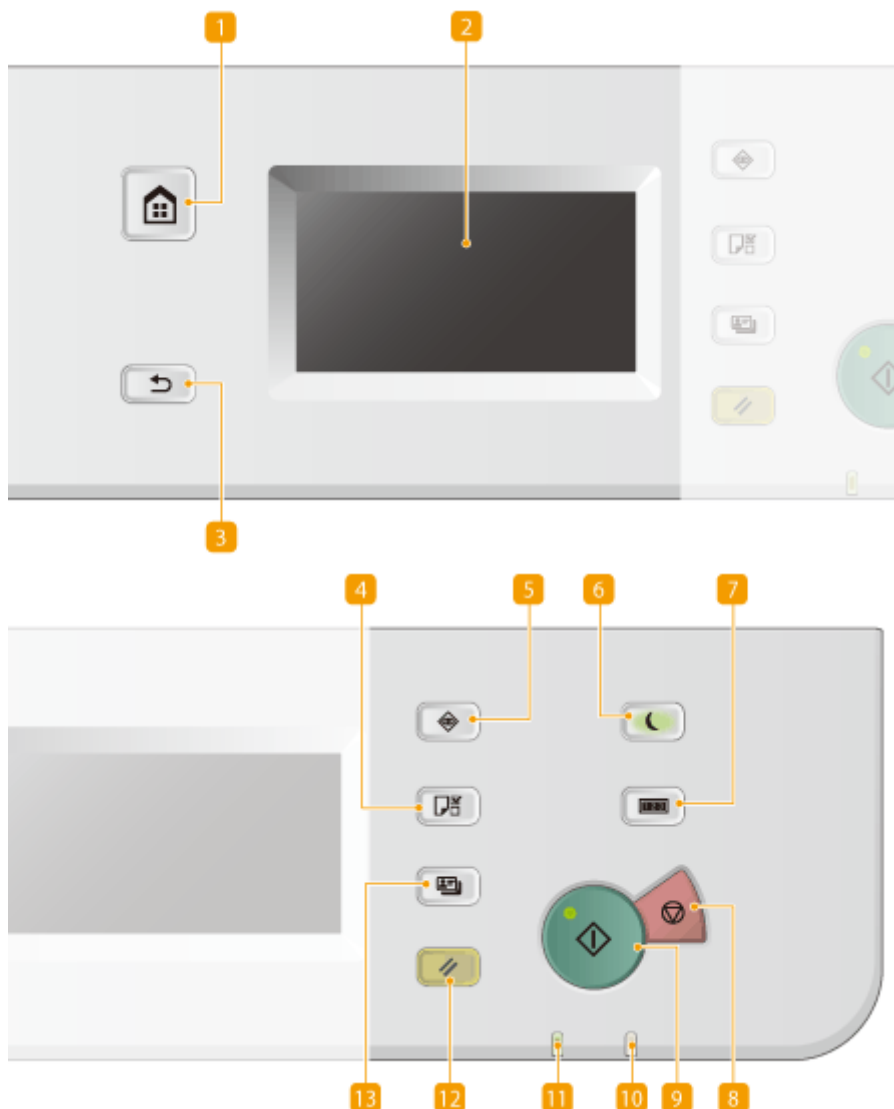

1 [Home] key

Press to display the <Home> screen. ▶ **Customizing the <Home> Screen(P. 14)**

2 Display

You can view the progress of copy and other jobs and error statuses. The display is a touch panel, allowing you to operate the screen by touch to specify settings. ▶ **Display(P. 11)** ▶ **Using the Display(P. 16)**

3 [Back] key

Press to return to the previous screen. If you press this key when specifying settings, for example, the settings are not applied and the display returns to the previous screen.

4 [Paper Settings] key

Press to select a paper source, such as a paper drawer or multi-purpose tray, and register paper size and type.

5 [Status Monitor] key

Press to check the status of printing, or to view the usage history. You can also check the status of the machine, such as the remaining amounts of paper and toner, or whether any errors occurred. ▶ **Display(P. 11)**

6 [Energy Saver] key

Press to put the machine into sleep mode. The key lights up green when the machine is in sleep mode. Press the key again to exit sleep mode. ▶ **Entering Sleep Mode(P. 39)**

7 [Counter Check] key

Press to display the total number of pages used for operations such as copying or printing on the touch panel display. You can also check the serial number of the machine (three letters and five numbers).

8 [Stop] key

Press to cancel copying and other operations.

9 [Start] key

Press to scan or copy documents.

10 [Error] indicator

Blinks or lights up when an error such as a paper jam occurs.

11 [Processing/Data] indicator

Blinks while operations are being performed. Lights up when there are documents waiting to be processed.

12 [Reset] key

Press to reset the settings.

13 [ID Card Copy] key

Press to copy a card-size original, such as an ID card and driver's license. ▶ **Copying Both Sides of an ID Card onto One Page(P. 55)**

LINKS


▶ **Using the Display(P. 16)**

Display

The <Home> screen for initiating operations and screens for specifying settings appear in the display. You can also view job progress and messages here. Touch the display to operate it.

<Home> Screen

The <Home> screen is displayed when the power is turned ON or by pressing  on the control panel. Use this screen to specify settings for and register functions.

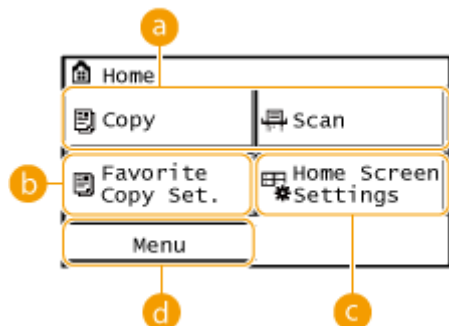

a Toggle functions

Switch to copy or scan functions. ▶ **Copying(P. 42)** ▶ **Using the Machine as a Scanner(P. 79)**

b <Favorite Copy Set.>

You can register frequently used combinations of copy settings, and recall them easily when needed. ▶ **Registering Frequently Used Copy Settings(P. 63)**

c <Home Screen Settings>


Allows you to change the order that the <Home> screen buttons are displayed in. ▶ **Customizing the <Home> Screen(P. 14)**

d <Menu>

<Timer Settings>, <Preferences>, and many other machine settings start from this button. ▶ **Setting Menu List(P. 95)**


<Status Monitor> Screen

When you press , a screen is displayed that enables you to check the status of documents that are being printed, as well as the status of the machine such as the toner level.

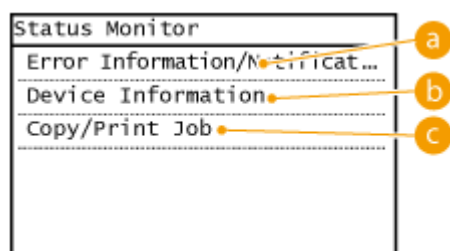


a <Error Information/Notification>

Displays the details of any errors that occurred. **Countermeasures for Each Message(P. 130)**

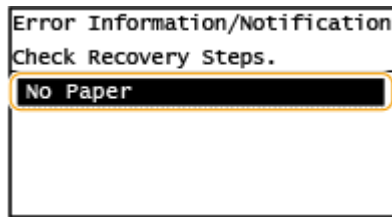**b <Device Information>**

Displays the status of the machine, such as the amount of paper or toner remaining.

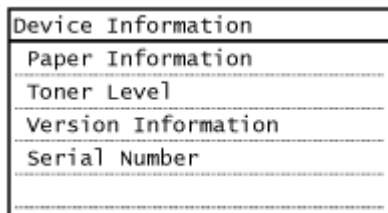**<Paper Information>**


Displays whether paper is loaded in each paper source.

<Toner Level>


Displays the amount of toner remaining. Depending on the environment in which your machine is located, other internal parts may reach the end of their lifetime before the toner runs out.

c Status of copy/print jobs

Displays the current status of the selected item. The <Copy/Print Job Status> screen is shown below as an example.

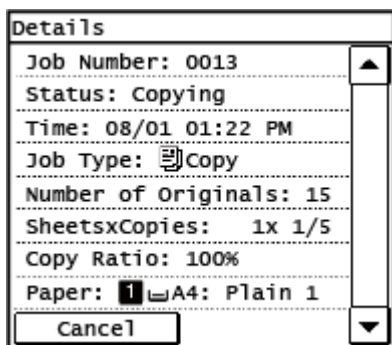**When a Message Is Displayed**

Messages are displayed at the top of the screen in situations such as when toner level is low or when a cover is left open. The display alternates between showing the normal screen and the message.

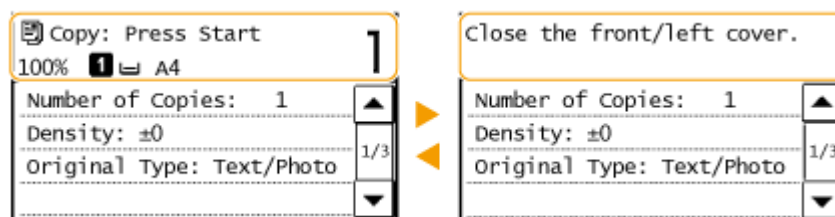


Countermeasures for Each Message(P. 130)

NOTE


When <You have notifications.> or <Tap Icon on Right ->> Is Displayed

Tap ⓘ to view the notification.

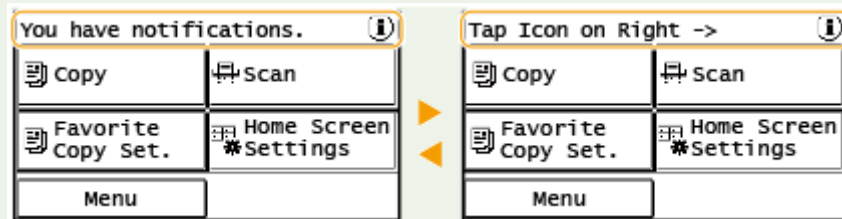

When an Error Occurs

In some cases when an error occurs, instructions on how to respond to the error are displayed. Follow the on-screen instructions to solve the problem. The screen displayed when a paper jam occurs is shown below as an example (▶ **Countermeasures for Each Message(P. 130)**).

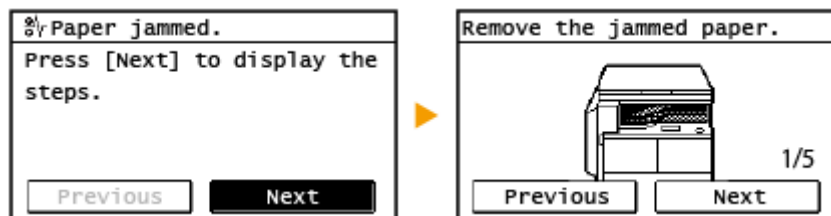

LINKS


- ▶ Customizing the <Home> Screen(P. 14)
- ▶ Using the Display(P. 16)

Customizing the <Home> Screen

You can change the order that buttons in the <Home> screen are displayed in according to your application or a preferred arrangement.

■ Changing the Home Screen Button Display Order


- 1 Press  and tap <Home Screen Settings>.

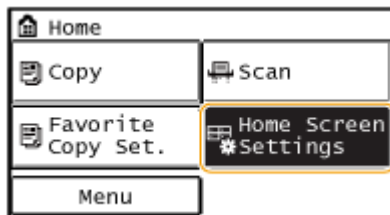


- If a screen for entering a PIN is displayed, enter the PIN, and tap <Apply>.  **Setting the System Manager PIN(P. 91)**

- 2 Tap <Set Display Order>.

- 3 Tap the button to move.

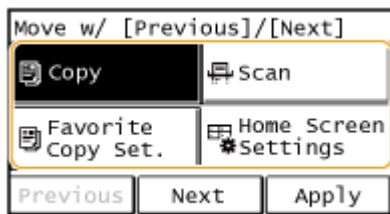

- 4 Tap <Previous> or <Next> to move the button, and tap <Apply>.

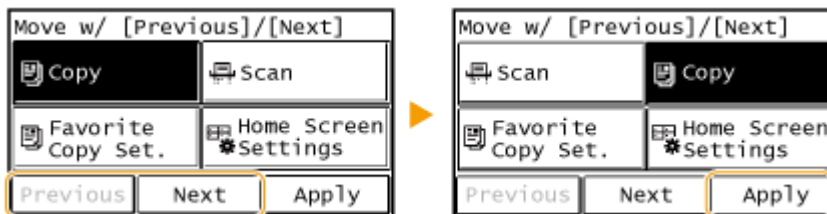


- 5 Repeat steps 3 and 4 to move all buttons you want to move.

- 6 Tap <End>.

■ To Insert Blanks in <Home> Screen

- 1 Press  and tap <Home Screen Settings>.

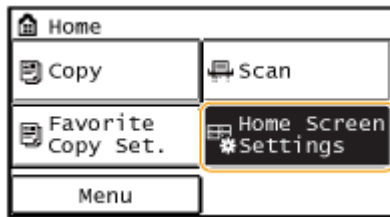


- If a screen appears prompting you to enter a PIN, enter the correct PIN, and tap <Apply>.  **Setting the System Manager PIN(P. 91)**


- 2 Tap <Insert and Delete Blank>.

- 3 Tap the button where you want to insert a blank, and tap <Insert>.

- To delete an inserted blank, select the blank, tap <Delete>, and proceed to step 5.

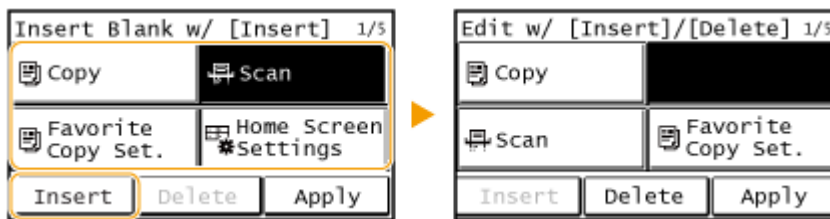

- 4 Tap <Apply>.

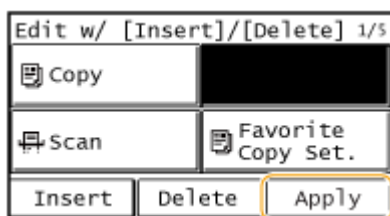

- 5 Tap <End>.

LINKS

-  **Display(P. 11)**

Using the Display

3EEJ-007

The display is a touch panel, allowing you to operate directly on the screen.

IMPORTANT


Avoid the following actions.

The display may malfunction or be damaged.

- Pressing forcefully
- Pressing with pointed objects (fingernails, ballpoint pen, pencil, etc.)
- Operating with wet/soiled hands
- Operating the display while an object is placed on it


Tap

Touch the screen lightly and quickly. Use for selecting or finalizing items.

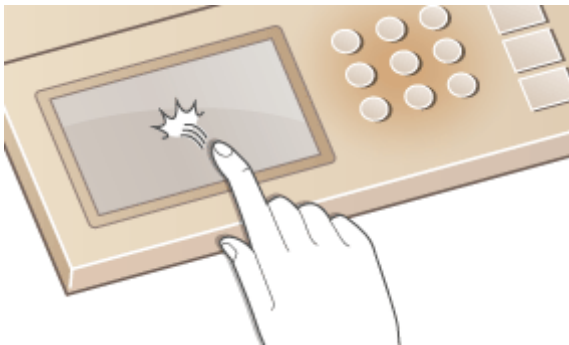


Long Touch

Keep finger held on the screen. When text cannot be completely displayed on one line ("..." appears), touch and hold the line to scroll all of the text. Also continuously increases/decreases the copy magnification.

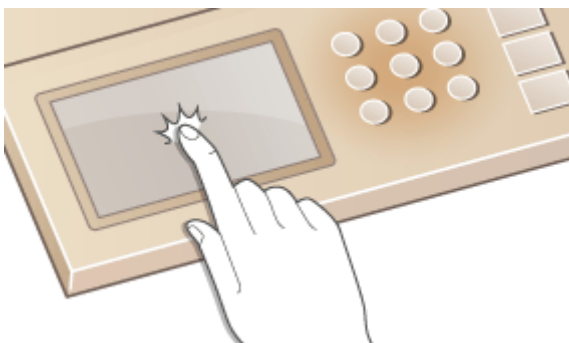

■ Selecting items


Tap an item name or button to make a selection.

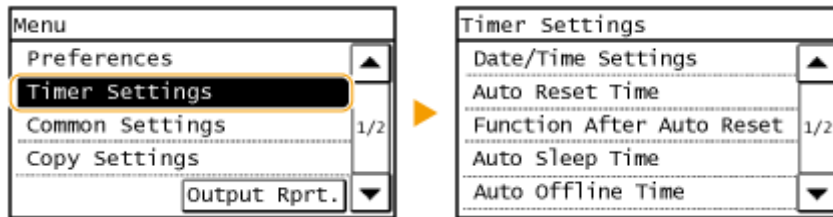

NOTE

If an item is mistakenly touched

Slide your finger away then release it from the screen to cancel the selection.

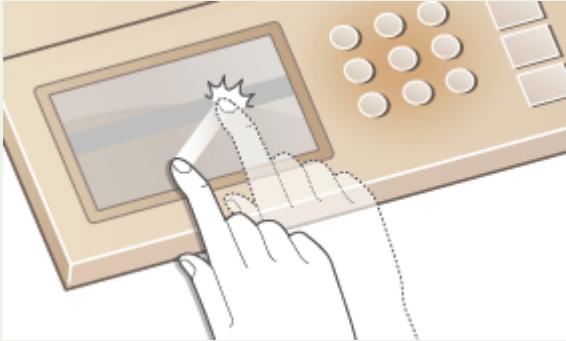


To return to the previous screen

Press  to return to the previous screen.

■ Scrolling the screen


The scroll bar is displayed on the screen when there is still information that is undisplayed. If the scroll bar is displayed, tap ▲ / ▼ to scroll the screen. The screen changes page by page, and the page number is displayed in the scroll bar.

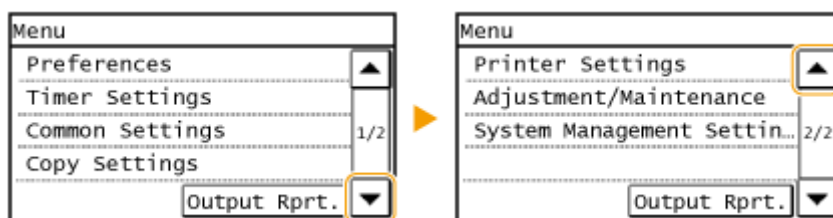

■ Changing values and settings

Changing values

Tap ▲ / ▼ to enter values.

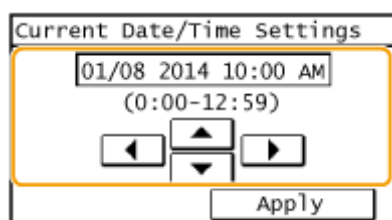


NOTE

To move the cursor

When ◀ / ▶ is displayed, tap to move the cursor.

Changing setting values

To adjust a value on a scale, tap <-> / <+>.

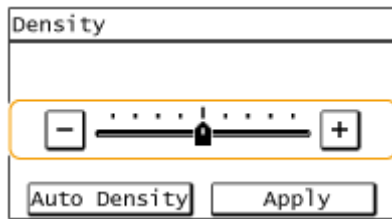**TIPS**

- You can change a variety of display-related settings, such as the scrolling speed or display language:
 - ▶ **Display Settings(P. 96)**
- To change the screen that is automatically displayed when the machine remains idle for a specified length of time:
 - ▶ **Function After Auto Reset(P. 101)**

Placing Documents


Place documents on the platen glass. For information about the scannable area of a document, see [Main Unit\(P. 191\)](#) .

IMPORTANT

Use documents that are completely dry

When placing documents, make sure that any glue, ink, or correction fluid on the documents has completely dried.

1 Open the platen cover.

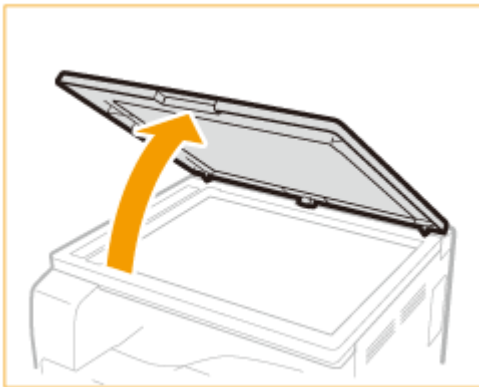

2 Place the document face down on the platen glass.

- Align the corner of the document with the top-left corner of the platen glass.



NOTE:

To scan transparent documents (for example, tracing paper or transparencies), cover them with plain white paper.


3 Gently close the platen cover.

- The machine is ready to scan the document.
- When scanning is complete, remove the document from the platen glass.

Loading Paper

3EEJ-009

You can load the paper into the paper drawer or multi-purpose tray. Load the paper you usually use into the paper drawer. The paper drawer is convenient when using large amounts of paper. Use the multi-purpose tray when you temporarily use size or type of paper that is not loaded in the paper drawer. See [▶ Available Paper\(P. 194\)](#) for available paper sizes.

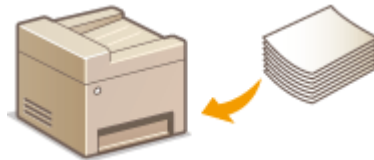

Paper Type and Setting for the Machine

See the table below to specify the paper settings according to the type and weight of the paper to load into the paper source. For more information about how to specify the paper settings on the machine, see [▶ Specifying Paper Size and Type\(P. 34\)](#) . For the amount of paper that can be loaded in each paper source, see [▶ Available Paper\(P. 194\)](#) .

Paper Type	Paper Weight	Paper Setting on the Machine
Plain paper	64 to 75 g/m ²	<Plain 1 (64-75 g/m ²)>
	76 to 90 g/m ²	<Plain 2 (76-90 g/m ²)>
Recycled paper	64 to 80 g/m ²	<Recycled (64-80 g/m ²)>
Color paper	64 to 80 g/m ²	<Color (64-80 g/m ²)>
Heavy paper	91 to 105 g/m ²	<Heavy 1 (91-105 g/m ²)>
	106 to 128 g/m ²	<Heavy 2 (106-128 g/m ²)>
Bond paper	75 to 90 g/m ²	<Bond>
Envelope	—	<Envelope>
Pre-punched	75 to 80 g/m ²	<Pre-Punched>
Transparency	—	<Transparency>
Label	—	<Labels>

IMPORTANT

Do not use the following types of paper:

- Wrinkled or creased paper
- Curled or rolled paper
- Torn paper
- Damp paper
- Very thin paper
- Paper printed by a thermal transfer printer

- Highly textured paper
- Glossy paper

Paper handling and storage

- Store the paper on a flat surface.
- Keep the paper wrapped in its original package to protect the paper from moisture or dryness.
- Do not store the paper in such a way that may cause it to curl or fold.
- Do not store the paper vertically or stack too much paper.
- Do not store the paper in direct sunlight, or in a place subject to high humidity, dryness, or drastic changes in temperature or humidity.

NOTE

When printing on paper that has absorbed moisture

Steam may emit from the paper output area, or water droplets may form on the back side of the control panel or around the paper output area. There is nothing unusual about any of these occurrences, which occur when the heat generated from fixing toner on the paper causes moisture in the paper to evaporate (most likely to occur at low room temperatures).

LINKS


 **Registering a Custom Paper Size(P. 36)**

Loading Paper in the Paper Drawer


3EEJ-00A

Load the paper that you usually use in the paper drawer. When you want to print on paper that is not loaded in the paper drawer, load the paper in the multi-purpose tray. **▶ Loading Paper in the Multi-Purpose Tray(P. 25)**


- 1 Hold the handle of the paper drawer and pull it out until it stops.**

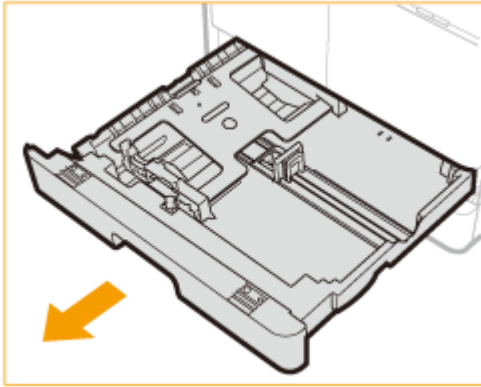


- 2 Push down the metal plate to lock it.**

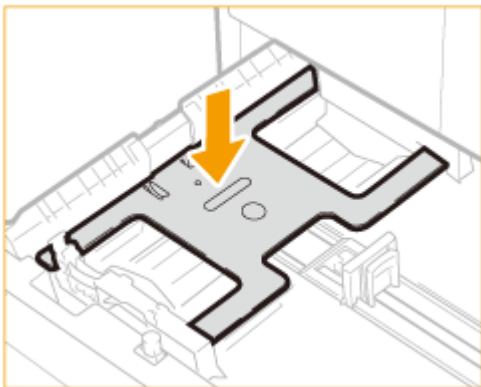

- 3 Adjust the position of the paper guides.**

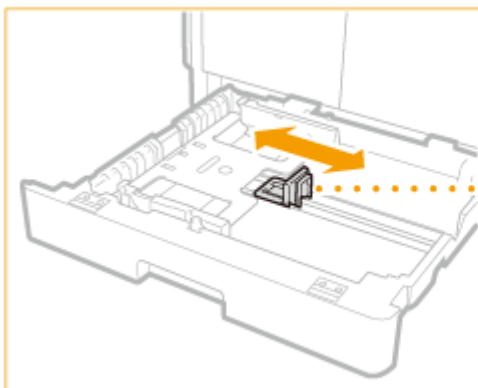

- 1** While squeezing the top part of the right guide, slide it to align with the size indicator for the paper to be loaded.

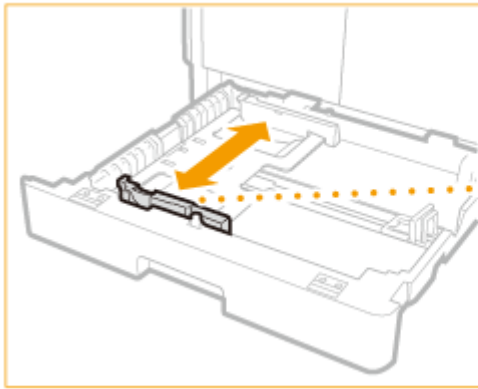

- 2** While squeezing the top part of the front guide, slide it to align with the size indicator for the paper to be loaded.

4 Prepare paper.

- Fan the paper stack well, and tap it on a flat surface to align the edges.




NOTE:

Size abbreviations on the paper guides

The abbreviations on the paper guides in the paper drawer indicate paper sizes as follows:

- LGL: Legal
- LTR: Letter
- STMT: Statement

5 Insert the paper into the paper drawer.

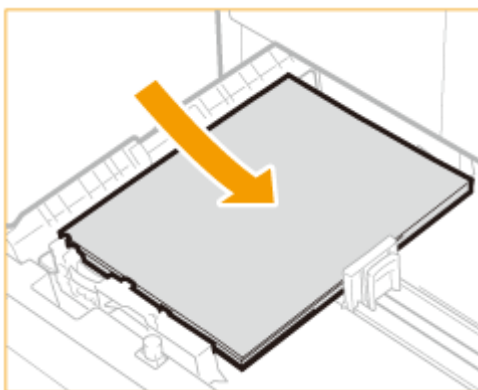


- 1** Make sure that the paper size setting of the paper drawer matches the size of the paper to load in the paper drawer.

- 2** Load the paper stack with the print side face up, and against the left guide of the paper drawer.

IMPORTANT:**Do not exceed the load limit mark when loading paper**

Make sure that the paper stack does not exceed the load limit mark. Loading too much paper can cause paper jams.

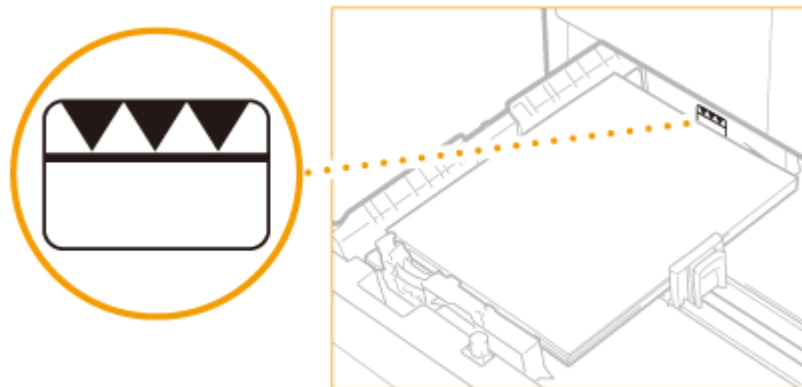**NOTE:**

When loading envelopes or paper with a logo, see [▶ Loading Envelopes in the Multi-Purpose Tray\(P. 28\)](#) or [▶ Loading Preprinted Paper\(P. 31\)](#) .

6 Gently insert the paper drawer into the machine.

» Continue to [▶ Specifying Paper Size and Type\(P. 34\)](#)

IMPORTANT:**When changing the paper size or type**

If you load a different size or type of paper into the machine, make sure to change the settings. If you do not change the settings, the machine cannot print properly.

LINKS


[▶ Available Paper\(P. 194\)](#)

Loading Paper in the Multi-Purpose Tray


3EEJ-00C

When you want to print on paper that is not loaded in the paper drawer, load the paper in the multi-purpose tray. Load the paper that you usually use in the paper drawer. ➡ **Loading Paper in the Paper Drawer(P. 22)**


1 Open the multi-purpose tray.

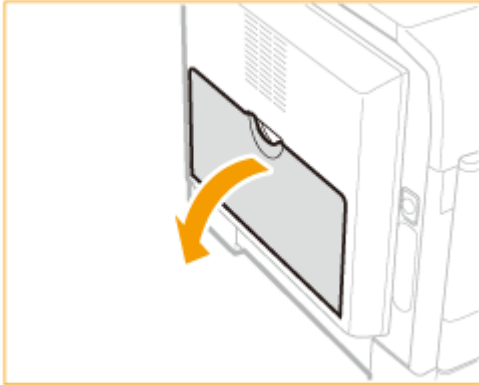

- Pull out the auxiliary tray (a), and extend the tray extension (b) when loading large-sized paper.

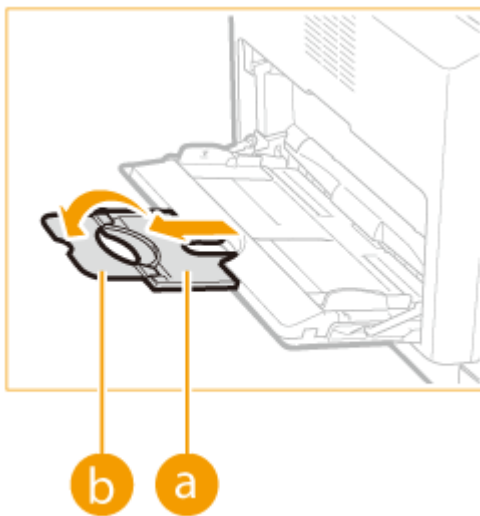


2 Adjust the slide guides (a) to match the size of the paper.

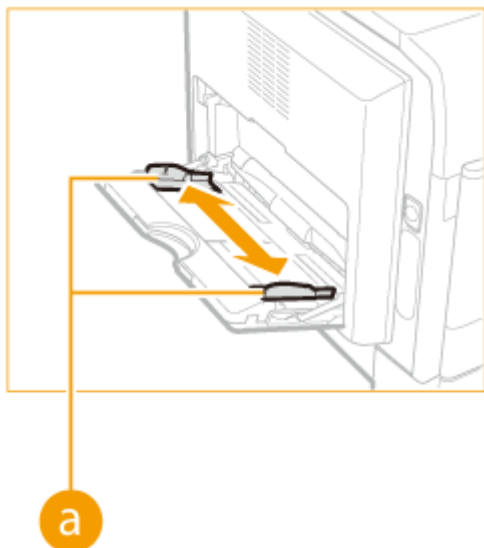

3 Insert the paper into the multi-purpose tray until the paper stops.

- Load the paper with the print side face down.
- Fan the paper stack well, and tap it on a flat surface to align the edges.

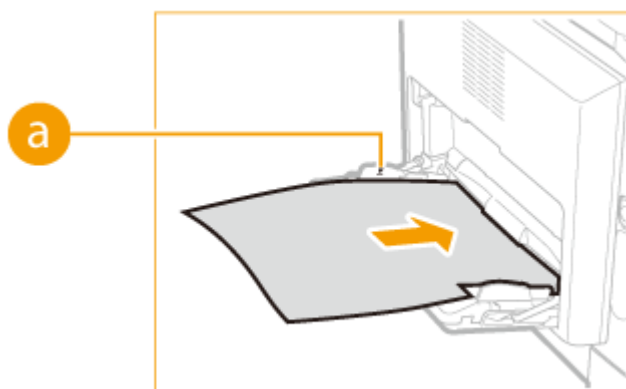

IMPORTANT:

Do not exceed the load limit mark when loading paper

Make sure that the paper stack does not exceed the load limit mark (a). Loading too much paper can cause paper jams.


NOTE:

When loading envelopes or paper with a logo, see ▶ **Loading Envelopes in the Multi-Purpose Tray(P. 28)** or ▶ **Loading Preprinted Paper(P. 31)** .

Continue to ▶ **Specifying Paper Size and Type(P. 34)**

Printing on the Back Side of Printed Paper (Manual 2-Sided Printing)

You can print on the back side of printed paper. Flatten any curls on the printed paper and insert it into the multi-purpose tray in the orientation indicated below (a), with the side to print face down (previously printed side face up).

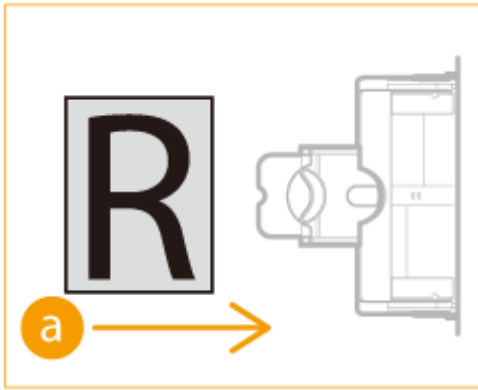

- You can use only the paper printed with this machine.

Loading Envelopes in the Multi-Purpose Tray

3EEJ-00E

Make sure to flatten any curls on envelopes before loading them. Also pay attention to the orientation of envelopes and which side is face up.

▶ **Before Loading Envelopes(P. 28)**

▶ **Loaded Orientation(P. 29)**

NOTE

This section describes how to load envelopes in the orientation you want, as well as procedures that you need to complete before loading envelopes. For a description of the general procedure for loading paper in the paper drawer or multi-purpose tray, see ▶ **Loading Paper in the Paper Drawer(P. 22)** or ▶ **Loading Paper in the Multi-Purpose Tray(P. 25)** .


Before Loading Envelopes

Follow the procedure below to prepare the envelopes before loading.


NOTE

10 envelope at a time can be loaded in the multi-purpose tray. Follow steps 1 to 4 in the procedure below to prepare the envelope for loading.


1 Close the flap of each envelope.

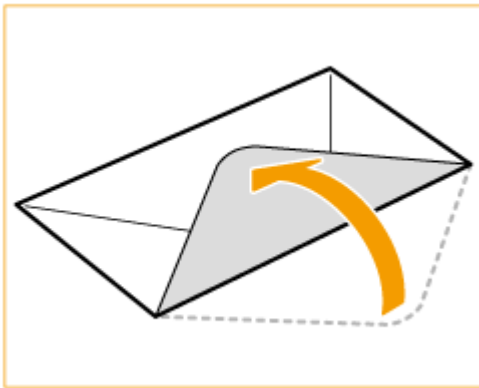


2 Flatten them to release any remaining air, and make sure that the edges are pressed tightly.

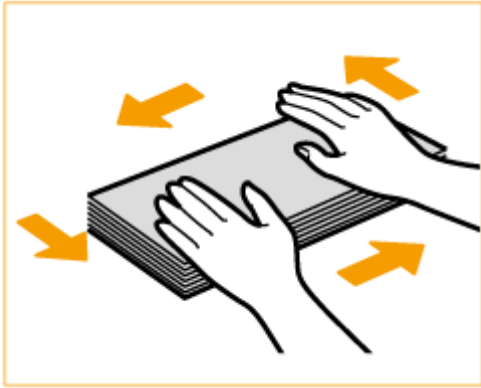

3 Loosen any stiff corners of the envelopes and flatten any curls.

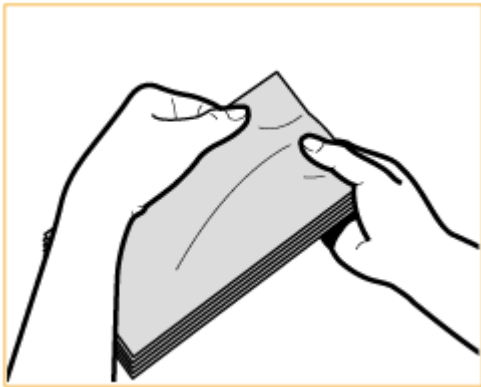


4 Align the edges of the envelope on a flat surface.

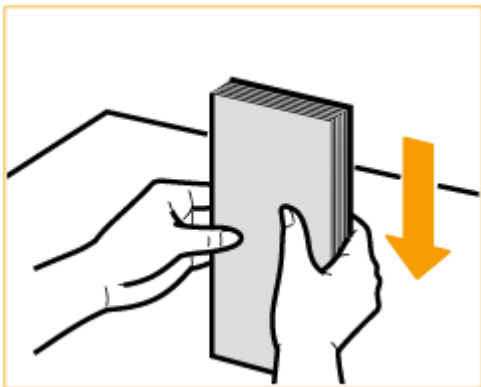

Loaded Orientation

Load the envelopes in portrait orientation, short edge first, with the non-glued side (front side) face up.

Load the envelopes, as shown in the illustrated below (a : feeding direction).

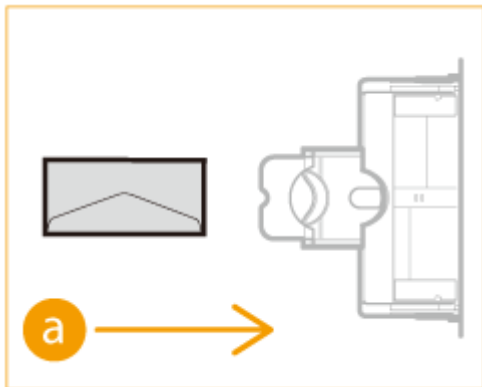

Loading Preprinted Paper

3EEJ-00F

When you use paper that has been preprinted with a logo, pay attention to the orientation of the paper when loading it in the paper source. Load the paper properly so that printing is performed on the same side as the logo.

- **Loading Paper with Logos in Portrait Orientation(P. 31)**
- **Loading Paper with Logos in Landscape Orientation(P. 32)**

NOTE

- This section describes how to load preprinted paper with the proper orientation. For a description of the general procedure for loading paper in the paper drawer or multi-purpose tray, see ➤ **Loading Paper in the Paper Drawer(P. 22)** or ➤ **Loading Paper in the Multi-Purpose Tray(P. 25)** .

Loading Paper with Logos in Portrait Orientation


The loading method varies depending on the size of the paper with the logo and the paper source that is used.



When Loading A4-size Paper with Logos

Load the paper so that the logo faces up in the paper drawer and faces down in the multi-purpose tray, as shown in the illustrations below.

Paper drawer Multi-purpose tray

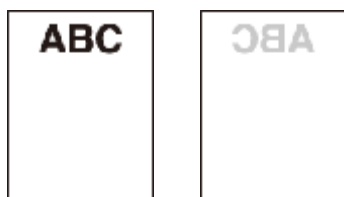

Pay attention to the orientation when placing a document. Place as follows, with the document facing down on the platen glass.

Platen glass



When Loading A3-size Paper with Logos


Load the paper so that the logo faces up in the paper drawer and faces down in the multi-purpose tray, as shown in the illustrations below.

Paper drawer Multi-purpose tray



Pay attention to the orientation when placing a document. Place as follows, with the document facing down on the platen glass.

Platen glass

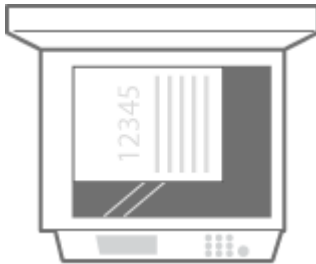

Loading Paper with Logos in Landscape Orientation

The loading method varies depending on the size of the paper with the logo and the paper source that is used.



When Loading A4-size Paper with Logos

Load the paper so that the logo faces up in the paper drawer and faces down in the multi-purpose tray, as shown in the illustrations below.

Paper drawer Multi-purpose tray



Pay attention to the orientation when placing a document. Place as follows, with the document facing down on the platen glass.

Platen glass



When Loading A3-size Paper with Logos

Load the paper so that the logo faces up in the paper drawer and faces down in the multi-purpose tray, as shown in the illustrations below.

Paper drawer Multi-purpose tray



Pay attention to the orientation when placing a document. Place as follows, with the document facing down on the platen glass.

Platen glass



Specifying Paper Size and Type

You must specify the paper size and type settings to match the paper that is loaded. Make sure to change the paper settings when you load the paper that is different from the previously loaded paper. You can also register a default paper size and paper type for the multi-purpose tray, which is convenient if you always load paper of the same size and type.

IMPORTANT


If the setting does not match the size and type of loaded paper, a paper jam or printing error may occur.

1 Press .

2 Select the paper source.


■ If the same size/type of paper is always set in the Multi-Purpose Tray

Tap <Multi-Purpose Tray> ► <On>.

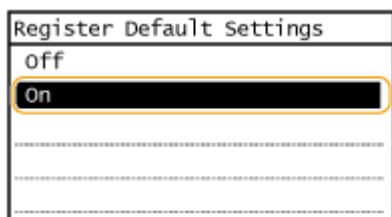


■ If you want to register the paper in paper drawer 1

Tap <Drawer 1>.

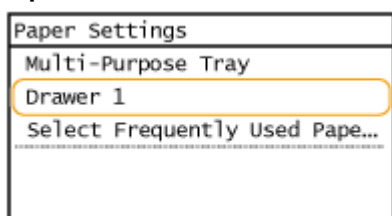


3 Select the loaded paper size.

- If the loaded paper size is not displayed, tap <Other Sizes>.

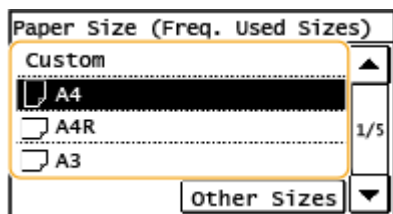

4 Select the loaded paper type.

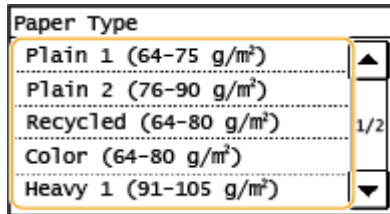


TIPS

When a frequently used paper size is known

You can set the machine to display only frequently used paper sizes in the selection screen.

- 1 Press .
- 2 Tap <Select Frequently Used Paper Sizes>.
- 3 Select the paper source.
- 4 Select the frequently used paper sizes.

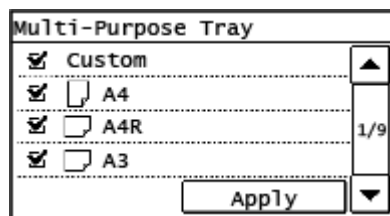

NOTE:

The paper sizes without check mark are displayed in the <Paper Size (Other Sizes)> screen.

- 5 Tap <Apply>.

LINKS

- ▶ Loading Paper in the Paper Drawer(P. 22)
- ▶ Available Paper(P. 194)


Registering a Custom Paper Size

3EEJ-00J


You can register a custom paper size and type to load in the multi-purpose tray.

1 Press .


2 Tap <Multi-Purpose Tray>.

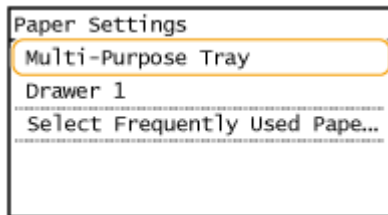

3 Tap <On>.

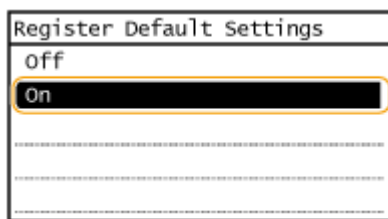


4 Tap <Custom>.

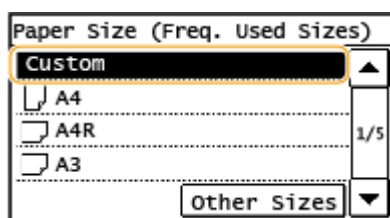

5 Specify the paper size.

1 Specify the length of the <X> side.

- Tap <X>.
- Input the length of the <X> side using ▲ / ▼, with ◀ / ▶ to move the cursor between the digits for inputting whole numbers and fractions, and tap <Apply>.

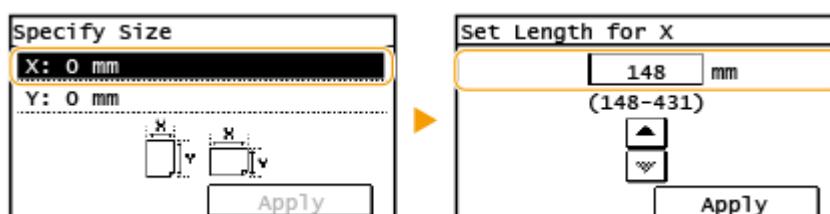

2 Specify the length of the <Y> side.

- Tap <Y>.
- Input the length of the <Y> side, and tap <Apply>.

Specify Size
X: 148 mm
Y: 0 mm
Apply

Set Length for Y
250 mm
(95-297)
Apply

3 Tap <Apply>.

Specify Size
X: 148 mm
Y: 250 mm
Apply

6 Select the paper type.

Paper Type
Plain 1 (64-75 g/m²)
Plain 2 (76-90 g/m²)
Recycled (64-80 g/m²)
Color (64-80 g/m²)
Heavy 1 (91-105 g/m²)
1/2

LINKS

- ▶ Loading Paper in the Paper Drawer(P. 22)
- ▶ Loading Paper in the Multi-Purpose Tray(P. 25)

Setting Auto Shutdown Time

3EEJ-00L

By enabling this setting, you can set the machine to automatically shut down. The machine automatically turns OFF after the specified period of idle time has elapsed since entering the sleep mode. You can cut electric power consumption at night and on holidays if you forget to turn OFF the machine.



<Menu> ▶ <Timer Settings> ▶ <Auto Shutdown Time> ▶ Set the time period ▶ <Apply>


NOTE

- The default setting is 4 hours.

Entering Sleep Mode

3EEJ-00R

The sleep mode function reduces the amount of power consumed by the machine by disabling power flow to the control panel. If no operations will be performed on the machine for a while, such as during a lunch break, you can save power simply by pressing  on the control panel. You can also use the Auto Sleep Time setting to automatically put the machine into sleep mode if it remains idle for a specified length of time.

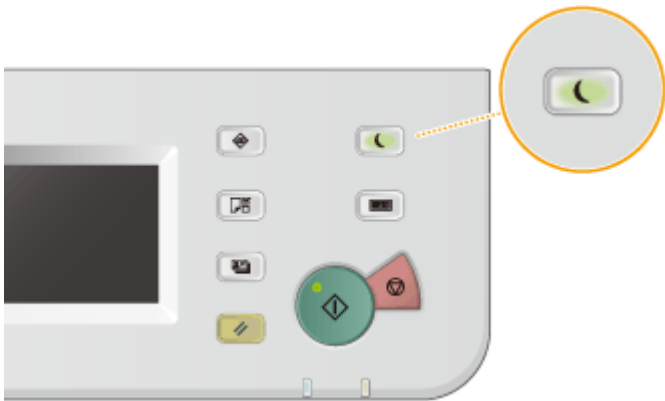

NOTE

When in sleep mode

When the machine enters sleep mode,  lights up yellow green.

Situations in which the machine does not enter sleep mode

- When the machine is in operation
- When the [Processing/Data] indicator is lit up or blinking
- When the machine is performing an operation such as adjustment or cleaning
- When a paper jam occurs
- When the menu screen is displayed
- When a job is waiting to be scanned to a computer
- When an error message is displayed on the screen (There are some exceptions. The machine sometimes enters sleep mode when error messages are displayed.)


When You Want to Set the Auto Sleep Timer

The factory default settings for the amount of time that elapses before the machine enters auto sleep mode are listed below. We recommend using the factory default settings to save the most power. If you want to change the amount of time that elapses before the machine enters auto sleep mode, follow the procedure below.

- 10 minutes (setting range is 3 to 60 minutes)



<Menu> ► <Timer Settings> ► <Auto Sleep Time> ► Set the amount of time that elapses before the machine automatically enters sleep mode ► <Apply>

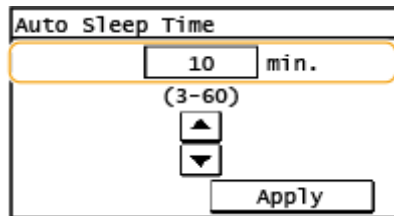

Exiting Sleep Mode

Press . You can also tap the display or press any key other than  to exit sleep mode.

Copying

Copying	42
Basic Copy Operations	44
Selecting Copy Paper	46
Canceling Copies	47
Various Copy Settings	49
Enlarging or Reducing	50
Selecting Document Type	51
Adjusting Density	52
Copying Multiple Documents onto One Sheet (2 on 1/4 on 1)	53
Copying Both Sides of an ID Card onto One Page	55
Erasing Dark Borders and Frame Lines (Erase Frame)	56
Collating Copies by Page	58
Splitting Facing Page Documents into Separate Pages for Copying	60
Configuring Copy Settings to Your Needs	61
Changing Default Settings	62
Registering Frequently Used Copy Settings	63


Copying

This chapter describes basic copy operations and various other useful functions.

■ Using Basic Operations

- ▶ Basic Copy Operations(P. 44)
- ▶ Selecting Copy Paper(P. 46)
- ▶ Canceling Copies(P. 47)

■ Using Copy Settings to Suit Your Needs

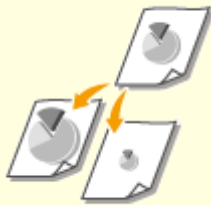

▶ Enlarging or Reducing(P. 50)



▶ Collating Copies by Page(P. 58)



▶ Selecting Document Type(P. 51)



▶ Adjusting Density(P. 52)



▶ Erasing Dark Borders and Frame Lines (Erase Frame)(P. 56)



▶ Copying Both Sides of an ID Card onto One Page(P. 55)



▶ Copying Multiple Documents
onto One Sheet (2 on 1/4 on 1)
(P. 53)

▶ Splitting Facing Page Documents
into Separate Pages for
Copying(P. 60)

■ Simplifying Your Frequent Copy Operations

▶ Changing Default Settings(P. 62)

▶ Registering Frequently Used Copy Settings(P. 63)


Basic Copy Operations

3EEJ-00U

1 Place the document(s). Placing Documents(P. 19)




2 Press and tap <Copy>.

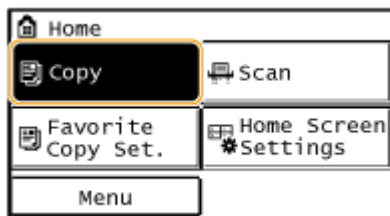


3 Enter the number of copies.

- Enter a quantity from 1 to 999.
- Tap <Clear> to cancel the entered quantity.

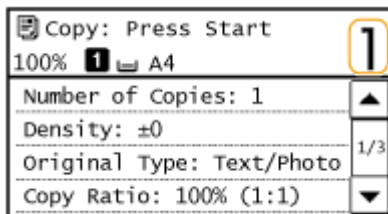

4 Specify the copy settings as necessary.

- Select the settings.  Various Copy Settings(P. 49)

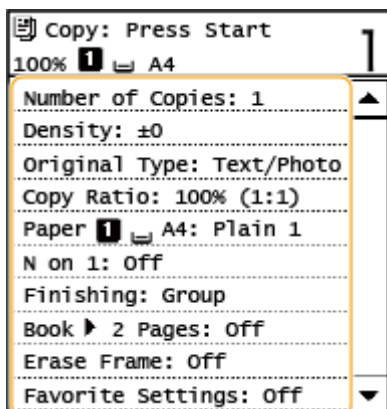


5 Press .

- Copying starts.
- If you want to cancel copying, tap <Cancel> ► <Yes>.  **Canceling Copies(P. 47)**

■When placing documents on the platen glass in step 1

Depending on the copy settings you made, the screen for selecting the document size is displayed when copying multiple documents. Follow the procedure below.

1 Select the document size.

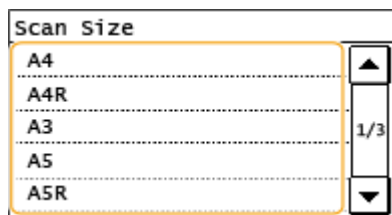

2 Place the next document on the platen glass, and press .

- Repeat this step until you finish scanning the entire document.

3 Tap <Start Copy>.

NOTE:

- When the <Paper Size & Settings Mismatch> message appears.
 **Countermeasures for Each Message(P. 130)**

IMPORTANT

When copying documents with text or images that extend to the edges of the page

The edges of the document might not be copied. For more information about the scan margins, see  **Main Unit(P. 191)** .

TIPS


- If you always want to make copies with the same settings:
 -  **Changing Default Settings(P. 62)**
 -  **Registering Frequently Used Copy Settings(P. 63)**

Selecting Copy Paper

Specify the paper source that contains the paper to use for printing out copies.

NOTE

- You must first specify the size and type of paper that is loaded in the paper source.
- ▶ **Specifying Paper Size and Type(P. 34)**
- ▶ **Loading Paper(P. 20)**

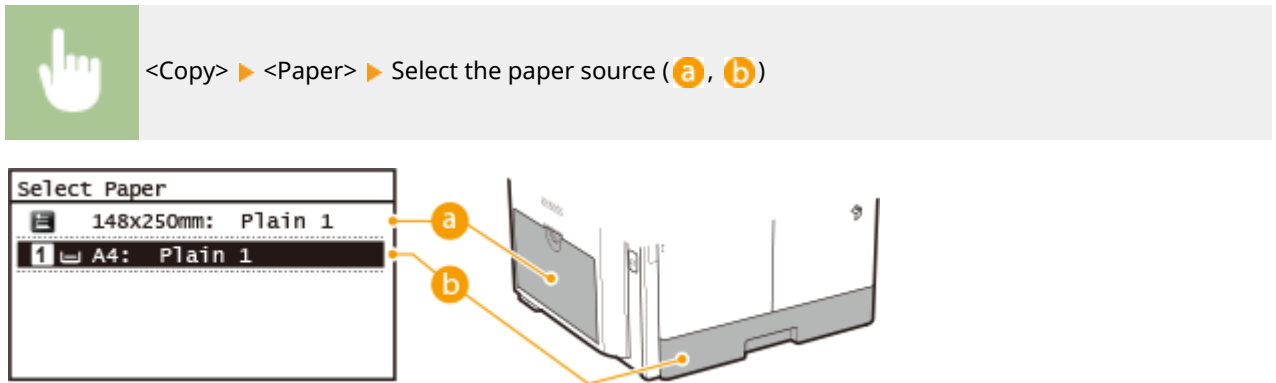

a <  >

Selects the paper loaded in the multi-purpose tray.

b <  >

Selects the paper loaded in the paper drawer.


LINKS

▶ **Basic Copy Operations(P. 44)**


Canceling Copies

If you want to cancel copying immediately after pressing , tap <Cancel> on the screen or press  on the control panel. You can also cancel copying after checking the copy status.

■ Tap <Cancel> on the Screen That is Displayed While Copying

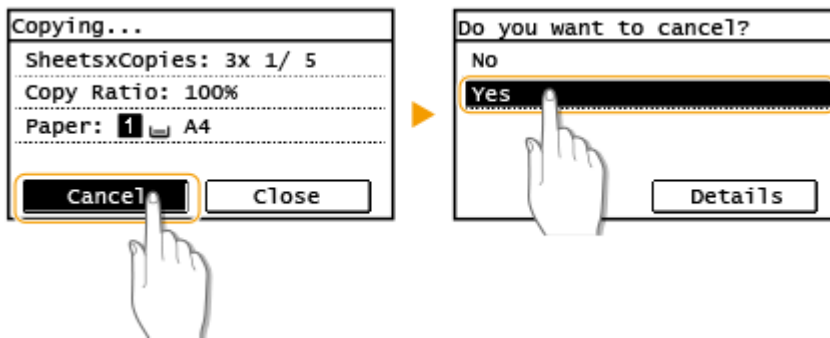


■ Press to Cancel

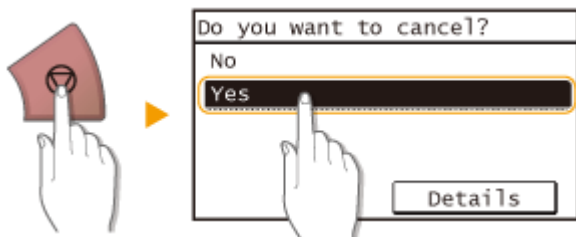



If the Screen Displays a List of Documents When is Pressed

Documents have been scanned and are waiting to be printed. Select the copy document to cancel.

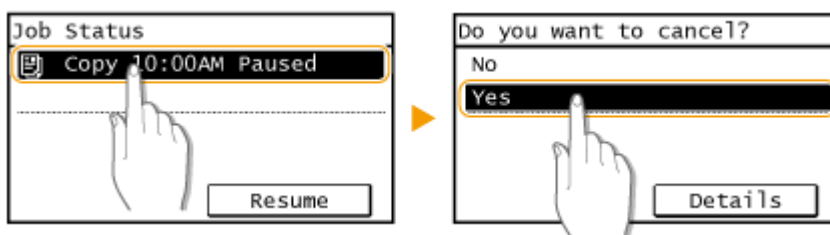

■ Use to Cancel

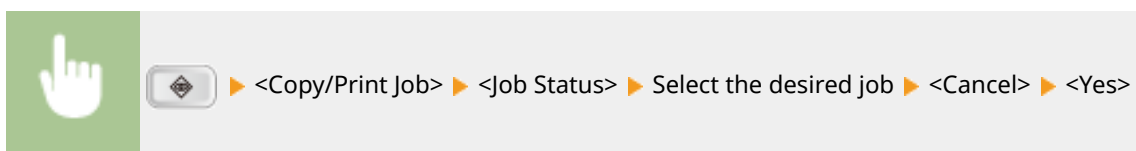

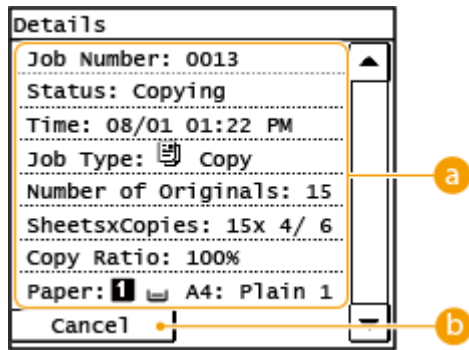

a Copy details

The number of copies, settings, and other details are displayed. If you only want to check the details without canceling copying, press  to return to the copy main screen.

b <Cancel>

Cancels copying.

LINKS

 **Basic Copy Operations(P. 44)**

Various Copy Settings

A variety of settings are available to suit your needs, such as when you want to save paper or make your documents easier to read.



▶ **Enlarging or Reducing(P. 50)**



▶ **Collating Copies by Page(P. 58)**



▶ **Selecting Document Type(P. 51)**



▶ **Adjusting Density(P. 52)**



▶ **Erasing Dark Borders and Frame Lines (Erase Frame)(P. 56)**



▶ **Copying Both Sides of an ID Card onto One Page(P. 55)**



▶ **Copying Multiple Documents onto One Sheet (2 on 1/4 on 1) (P. 53)**



▶ **Splitting Facing Page Documents into Separate Pages for Copying(P. 60)**

Enlarging or Reducing




You can enlarge or reduce copies by using a preset copy ratio such as <A5> → <A4>, or by setting a custom copy ratio in increments of 1%.

NOTE

<Copy Ratio> is not available when using <ID Card Copy>.




<Copy> ► <Copy Ratio> ► Select the copy ratio

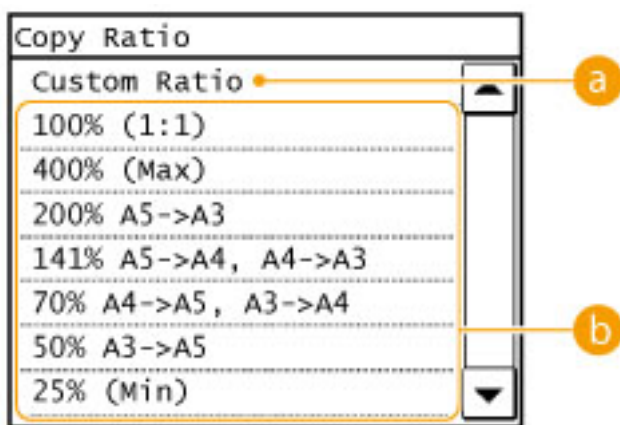

a <Custom Ratio>

Use ▲ / ▼ to enter the copy ratio, and tap <Apply>. You can set any copy ratio from 25% to 400% in 1% increments.

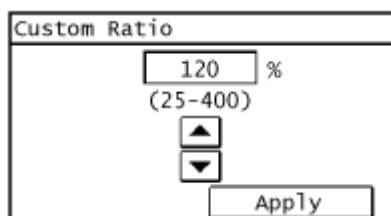

b Preset copy ratio

Select a copy ratio.

LINKS

► Basic Copy Operations(P. 44)

Selecting Document Type



You can select the optical image quality for the copy depending on the document type, such as text-only documents, documents with charts and graphs, or magazine photos.



<Copy> ► <Original Type> ► Select the document type

Original Type	
Text	a
Text/Photo	b
Photo	c

a <Text>

Suitable when copying documents that only contain text.

b <Text/Photo>

Suitable when copying documents that contain both text and photos.

c <Photo>

Suitable when copying documents that contain printed photos, such as magazines or pamphlets.

NOTE

Even if <Density> is set to <Auto Density>, when <Original Type> is set to <Text/Photo> or <Photo>, <Auto Density> is canceled.

LINKS

➤ **Basic Copy Operations(P. 44)**

Adjusting Density


3EEJ-012



You can adjust the density of the copy if the text or images in a document are too light or dark. You can also automatically set an optimal density for a document.



<Copy> ▶ <Density> ▶ Adjust the density ▶ <Apply>

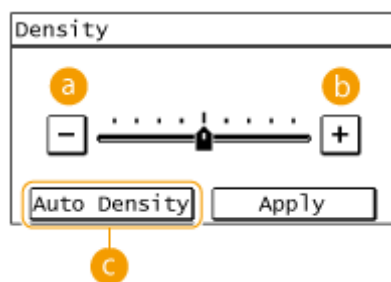

a <->

Decreases the density.

b <+>

Increases the density.

c <Auto Density>

An optimal density for the document is automatically set.

<Original Type> is automatically set to <Text>. (▶ **Selecting Document Type(P. 51)**)

LINKS

▶ **Basic Copy Operations(P. 44)**

▶ **Auto Recognize Original Orientation (P. 107)**

Copying Multiple Documents onto One Sheet (2 on 1/4 on 1)

3EEJ-013




You can copy two or four documents onto a single sheet at a reduced size. This decreases the number of pages, enabling you to save paper.

NOTE

- Using <2 on 1>/<4 on 1> reduces the copy ratio automatically (the copy ratio is displayed on the screen). You can increase or further reduce the copy ratio before pressing , but the edges of the document might not be copied if you increase it.
- <2 on 1>/<4 on 1> is not available when using <Erase Frame>, <Book -> 2 Pages>, or <ID Card Copy>.
- When you copy multiple documents onto one page, margins may be created in the copied image.



<Copy> ▶ <N on 1> ▶ Select <2 on 1> or <4 on 1> ▶ Select the document size on the <Scan Size> screen ▶ On the <Output Size> screen, select the paper source that contains the paper you want to use

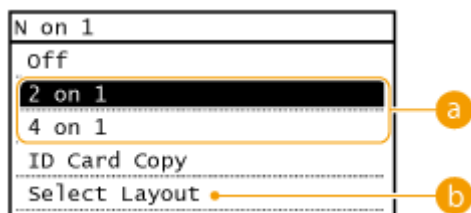


a <2 on 1>/<4 on 1>

Select <2 on 1> to copy two pages of documents onto a single sheet, or select <4 on 1> to copy four pages of documents onto a single sheet.

b <Select Layout>

Specify how to arrange the documents on the page.

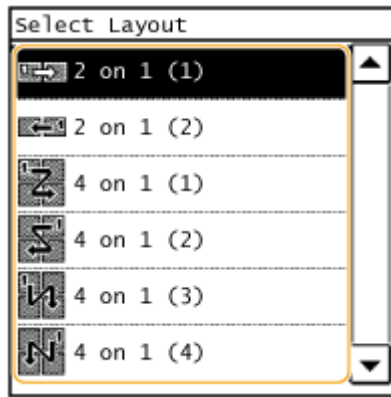

LINKS

🔗 Basic Copy Operations(P. 44)

Copying Both Sides of an ID Card onto One Page

3EEJ-014



You can use <ID Card Copy> to copy the front and back sides of a card onto the same side of a page. This function is useful when copying a driver's license or ID card.

NOTE

- <ID Card Copy> is available with A4/Letter size paper or larger.
- <Copy Ratio> is automatically set to <100% (1:1)>.
- <ID Card Copy> is not available when using <Erase Frame>, <Book -> 2 Pages>, or <2 on 1>/<4 on 1>.




Place the card ▶



Turn the card over ▶



■How to place the card

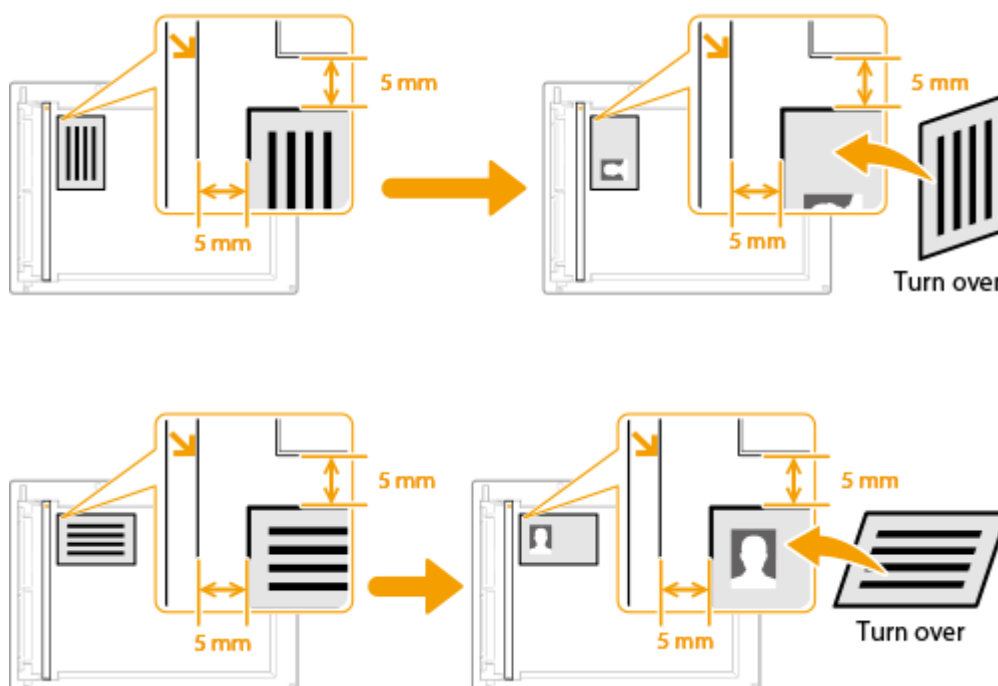

NOTE:

- When the <Paper Size & Settings Mismatch> message appears.
 ▶ **Countermeasures for Each Message(P. 130)**

LINKS

▶ **Basic Copy Operations(P. 44)**

Erasing Dark Borders and Frame Lines (Erase Frame)

3EEJ-015



When copying documents that are smaller than the output paper size, frame lines may appear around the edges in the copied image. When copying facing pages from thick book, dark borders may appear. <Erase Frame> enables you to erase these frame lines and dark borders.

NOTE

- The width of the frame to erase is increased or decreased relative to the <Copy Ratio> setting.
- <Erase Frame> is not available when using <2 on 1>/<4 on 1> or <ID Card Copy>.




<Copy> ▶ <Erase Frame> ▶ Select the type of Erase Frame ▶ Specify the width of the frame to erase ▶ <Apply> ▶ Select the paper size on the <Scan Size> screen

Erase Frame	
off	
Original Frame	a
Book Frame	b

a Original Frame

Specify <Outer Frame Width> to erase the dark borders and frame lines that appear around the copy if the original is smaller than the selected paper size. You can also use this mode to create a blank border around the edge of the copy.

Outer Frame Width	
	4 mm (1-50)
	▲ ▼
	Apply

b Book Frame

Specify <Center Frame Width> and <Outer Frame Width> to erase the dark borders, as well as center and contour lines that appear if you are copying facing pages in a bound original onto a single sheet of paper.

Center Frame Width		Outer Frame Width	
	10 mm (1-50)		4 mm (1-50)
	▲ ▼		▲ ▼
	Apply		Apply

LINKS

▶ **Basic Copy Operations(P. 44)**

Collating Copies by Page


3EEJ-016



When preparing multiple copies of multi-page documents, you can select <Group>, <Collate>, <Rotate + Group>, or <Rotate + Collate> for the order of copied papers. This function is useful when preparing handouts for meetings or presentations.



<Copy> ► <Finishing> ► Select page order

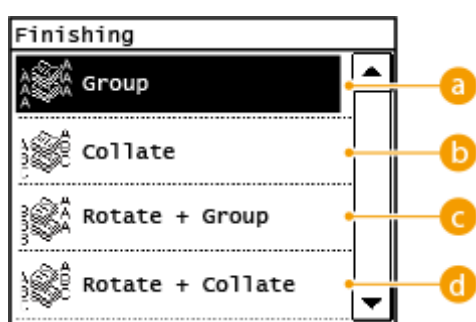

a <Group>

The copies are grouped by page. For example, if you are making three copies of a five-page document, the printouts will be arranged in the following order.



b <Collate>

The copies are collated by sequential page order.

For example, if you are making three copies of a five-page document, the printouts will be arranged in the following order.



c <Rotate + Group>

The copies are grouped by page, and each group is rotated 90 degrees.

For example, if you are making three copies of a five-page document, the printouts will be arranged in the following order.



d <Rotate + Collate>

The copies are collated by sequential page order, and each group is rotated 90 degrees.

For example, if you are making three copies of a five-page document, the printouts will be arranged in the following order.



LINKS

► **Basic Copy Operations(P. 44)**

Splitting Facing Page Documents into Separate Pages for Copying

3EEJ-017



You can copy documents with two facing pages such as books and magazines into separate pages, dividing the left and right pages.

NOTE


- When scanning a facing page document, place it on the platen glass. Place the document face down with its corner aligned with the top-left corner of the platen glass, as shown below.



- <Book -> 2 Pages> is not available when using <2 on 1>/<4 on 1> or <ID Card Copy>.



<Copy> ► <Book->2 Pages>

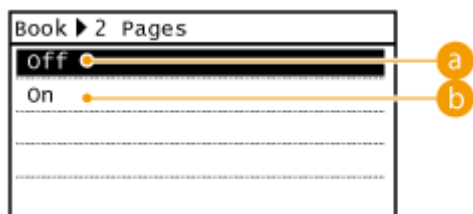

a <Off>

Does not set this function.

b <On>

Sets this function.

Configuring Copy Settings to Your Needs

3EEJ-018

The default settings are the settings that are displayed whenever you turn ON the machine, or when you press . If you register your frequently used settings as default settings, you can eliminate the need to configure the same settings every time you make copies. In addition, you can also register combinations of multiple copy settings and use them whenever you need them.

NOTE

The machine comes pre-configured with factory default settings ( **Setting Menu List(P. 95)**). You can change and register the default settings according to your needs.



I often copy documents with pages full of information, and I always reduce the copy ratio to 95%.



Change the copy ratio to 95% and register it as the default setting. From now on, you can make copies without changing the copy ratio.  **Changing Default Settings(P. 62)**



For our regular weekly meetings, I always make copies for each member, and collate them according to the page order of the original document.



Go to <Favorite Settings> and register the combination of <Number of Copies> and <Finishing Type> turned <Collate>. You can then easily use this setting combination whenever you need it.  **Registering Frequently Used Copy Settings(P. 63)**


Changing Default Settings

3EEJ-019

The default settings are the settings that are displayed whenever you turn ON the machine, or when you press . If you change these default settings to match the operations that you perform frequently, you can eliminate the need to configure the same settings every time you make copies.



<Menu> ▶ <Copy Settings> ▶ <Change Default Settings> ▶ Select the setting ▶ Change the default value of the selected item ▶ <Apply> ▶ <Apply>

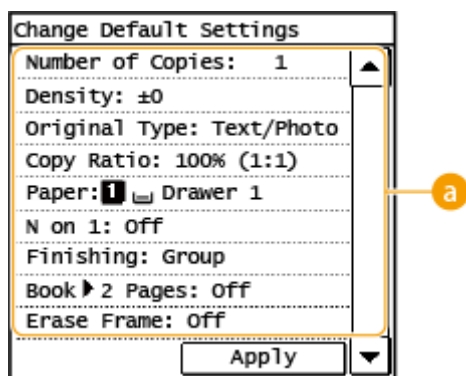

a Settings

Select the item you want to set, and change the default value.



LINKS

- ▶ Basic Copy Operations(P. 44)
- ▶ Various Copy Settings(P. 49)
- ▶ Copy Settings(P. 106)

Registering Frequently Used Copy Settings

3EEJ-01A

You can register up to four frequently used combinations of copy settings. By simply selecting a registered setting combination when it is needed, you can eliminate the need to configure the same settings every time you make copies, such as if you frequently set the number of copies to 5, set <Erase Frame> to <On>, and increase the sharpness when copying. You can register the setting combinations as <Settings 1> to <Settings 4>.

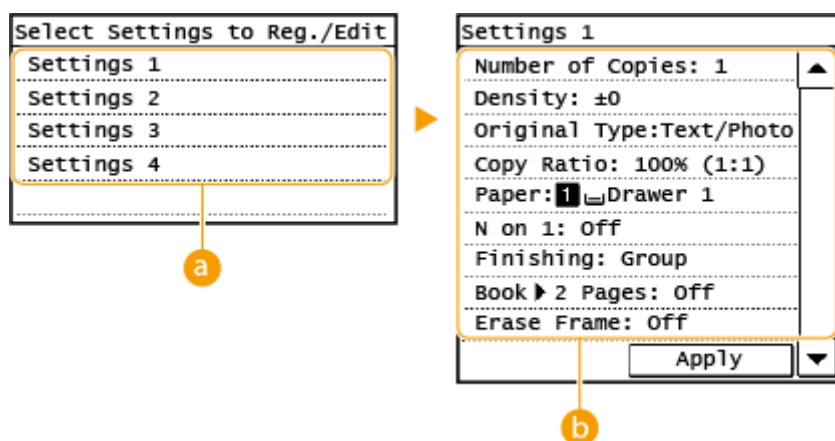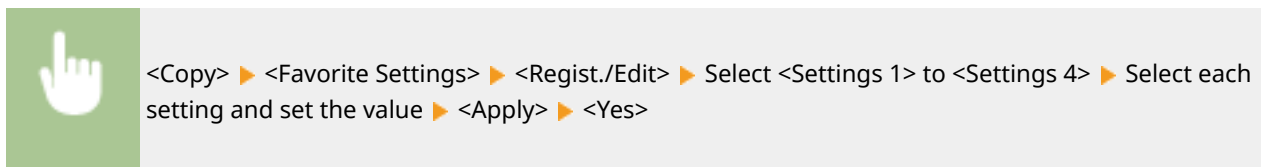

a <Settings 1> to <Settings 4>

Register frequently used combinations of copy settings as one of the modes. To edit the settings for a mode that has already been registered, select that mode, and tap <Regist./Edit> again.

b Settings

Configure your frequently used settings. [▶ Various Copy Settings \(P. 49\)](#)

NOTE

- If you want to delete a registered setting, tap <Copy> > <Favorite Settings> > <Delete> > select the setting > <Yes>.
- If you want to use a registered setting, tap <Copy> > <Favorite Settings> > select the setting.
- Registered settings are saved even when the machine is turned OFF.
- You can change the settings of a mode after it is activated.

LINKS

[▶ Basic Copy Operations \(P. 44\)](#)

Using the Machine as a Printer

Using the Machine as a Printer	65
Printing from a Computer	66
Canceling Prints	68
Checking the Printing Status	71
Configuring Print Settings to Your Needs	73
Registering Combinations of Frequently Used Print Settings	74
Changing Default Settings	76


Using the Machine as a Printer

3EEJ-01C

There are many ways to use the machine as a printer. You can print documents on your computer by using the printer driver. Make full use of the print functions to suit your needs.

■ Printing from a Computer


You can print a document made on your computer by using the printer driver. ➡ **Printing from a Computer(P. 66)**

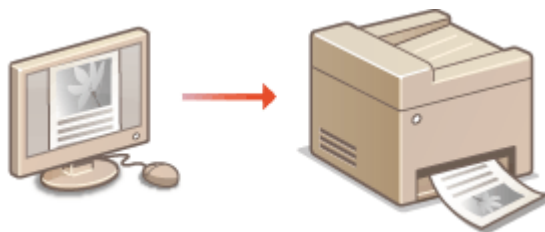

Printing from a Computer

3EEJ-01E

You can print a document made with an application on your computer by using the printer driver. There are useful settings on the printer driver, such as enlarging/reducing, that enable you to print your documents in various ways. Before you can use this function, you need to complete some procedures, such as installing the printer driver on your computer. For more information, see the manuals for the relevant drivers on the online manual website.

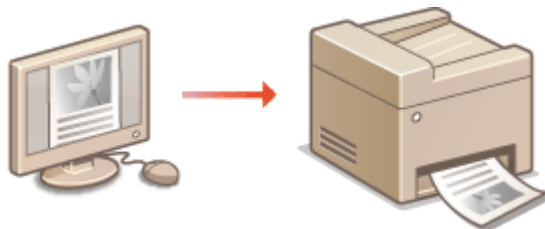

- ▶ **About the Printer Driver Help(P. 66)**
- ▶ **Basic Printing Operations(P. 66)**

About the Printer Driver Help

Clicking [Help] on the printer driver screen displays the Help screen. On this screen, you can see the detailed descriptions that are not in the User's Guide.

Basic Printing Operations


This section describes how to print a document on your computer by using the printer driver.

NOTE

Paper settings on the machine

- Normally, it is necessary to specify the paper size and type for the paper loaded in each paper source before proceeding to printing.

- 1** Open a document in an application and display the print dialog box.
- 2** Select the printer driver for this machine, and click [Preferences] or [Properties].
- 3** Specify the print settings as necessary, and click [OK].
 - Switch the tab according to the settings.

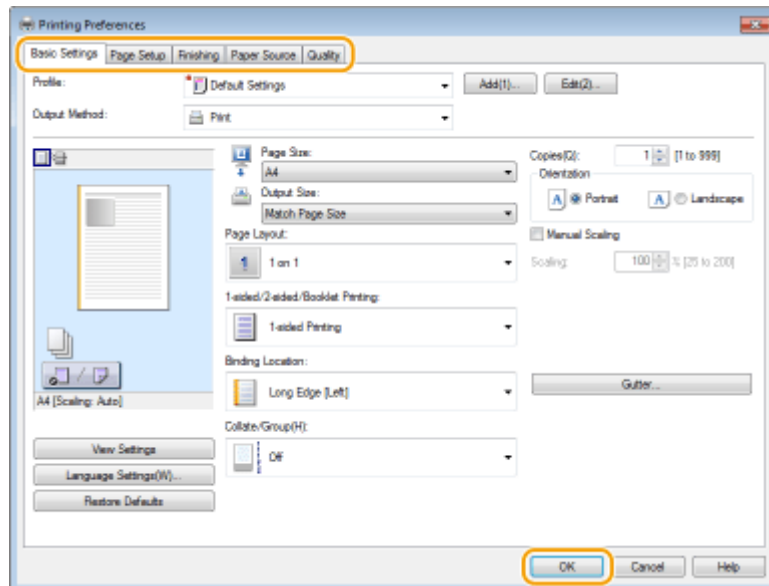

4 Click [Print] or [OK].

⇒ Printing starts.

- If you want to cancel printing, see [▶Canceling Prints\(P. 68\)](#) .

LINKS

[▶Checking the Printing Status\(P. 71\)](#)

Canceling Prints

You can cancel printing from your computer or on the control panel of the machine.

- ▶ **From a Computer(P. 68)**
- ▶ **From the Control Panel(P. 69)**

From a Computer

You can cancel printing from the printer icon displayed on the system tray on the desktop.

1 Double-click the printer icon.




NOTE:


When the printer icon is not displayed

Open the printer folder (▶ **Displaying the Printer Folder(P. 208)**), right-click your printer icon, and click [See what's printing] (or double-click the icon of the printer driver for the machine).

2 Select the document you want to cancel, and click [Document] ▶ [Cancel].

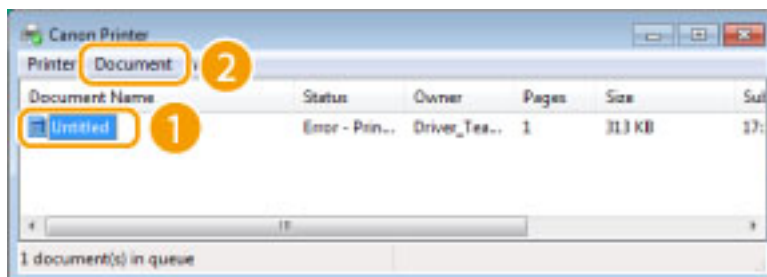

3 Click [Yes].

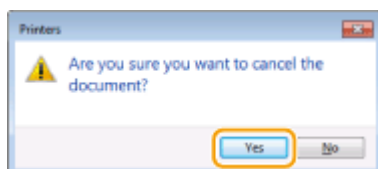

- Printing of the selected document is canceled.

NOTE

Several pages may be output after you cancel printing.

TIPS

Canceling from an application


On some applications, a screen like shown below appears. You can cancel printing by clicking [Cancel].



From the Control Panel


Cancel printing using  or .

■ Press  to Cancel


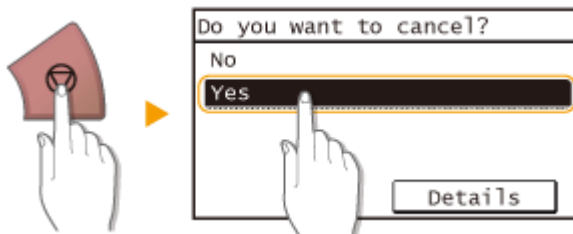


If the Screen Displays a List of Documents When  is Pressed

Tap the document to cancel.

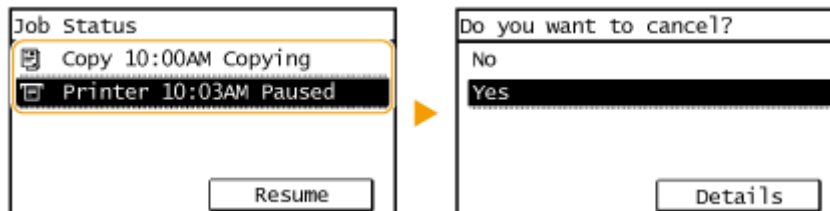

■ Use  to Cancel

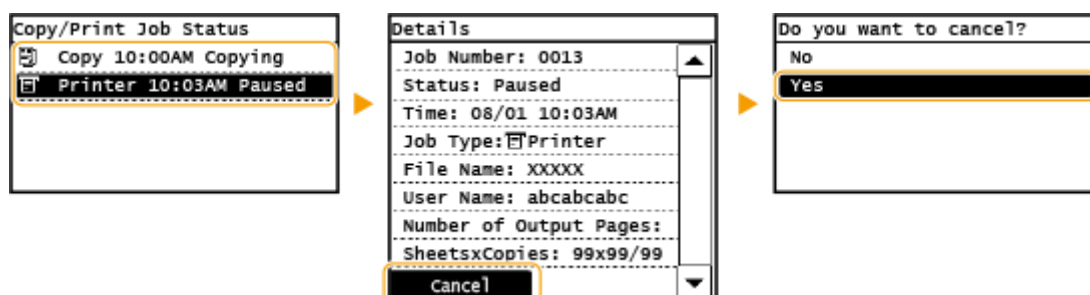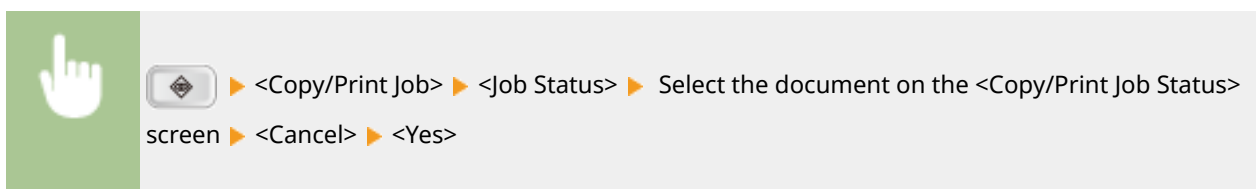

NOTE

Several pages may be output after you cancel printing.

LINKS

- ▶ **Basic Printing Operations(P. 66)**
- ▶ **Checking the Printing Status(P. 71)**

Checking the Printing Status

3EEJ-01H

You can check the current print statuses.

IMPORTANT

- When <Display Job Log> is set to <Off>, you cannot check the print logs. **▶Display Job Log(P. 115)**


Useful in the Following Cases

- When your documents are not printed for a long time, you may want to see the waiting list of the documents waiting to be printed.
- When you cannot find your printouts that you thought had been printed, you may want to see whether an error has occurred.


1 Press .

2 Tap <Copy/Print Job>.

3 Tap <Job Status>.

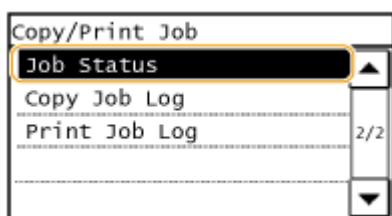

4 Select the document to check.

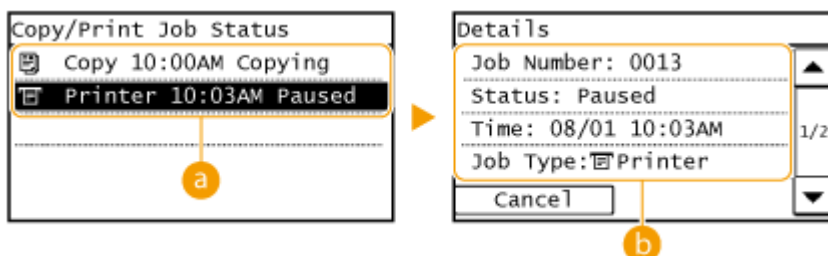

a <Copy/Print Job Status>

Displays a list of the documents that are being processed or are waiting to be processed.

b <Details>

Displays detailed information about the document selected from the list.

LINKS

▶Basic Printing Operations(P. 66)

 Canceling Prints(P. 68)

Configuring Print Settings to Your Needs

3EEJ-01J

You can register combinations of settings as "profiles" to suit your different printing objectives. Also, you can register the settings that you frequently use as the default settings. Once the default settings are registered, they are displayed automatically in the printer driver screen, and you can skip the operations to specify them and proceed to printing immediately.



When I print highly confidential documents, I include a "TOP SECRET" watermark.



Set "TOP SECRET" as a watermark and register it in "profiles." You can then select this watermark from profiles whenever you need it. **▶Registering Combinations of Frequently Used Print Settings(P. 74)**



To save printing costs, I always print 2 document pages on 1 printout page.



Set [2 on 1] as a default setting in the printer driver. From the next print job, every printout page will show 2 pages from the document. **▶Changing Default Settings(P. 76)**

Registering Combinations of Frequently Used Print Settings

3EEJ-01K

Specifying combinations of settings such as "1-sided landscape orientation on A4 size paper in save toner mode" every time you print is time consuming. If you register your frequently used combinations of print settings as "profiles," you can specify print settings simply by selecting one of the profiles from the list. This section explains how to register profiles and how to print using profiles.


▶ Registering a Profile(P. 74)

▶ Selecting a Profile(P. 75)

Registering a Profile


1 Change the settings that you want to register as a profile, and click [Add].

- Make print settings as required on the [Basic Settings], [Page Setup], [Finishing], and [Quality] tabs.

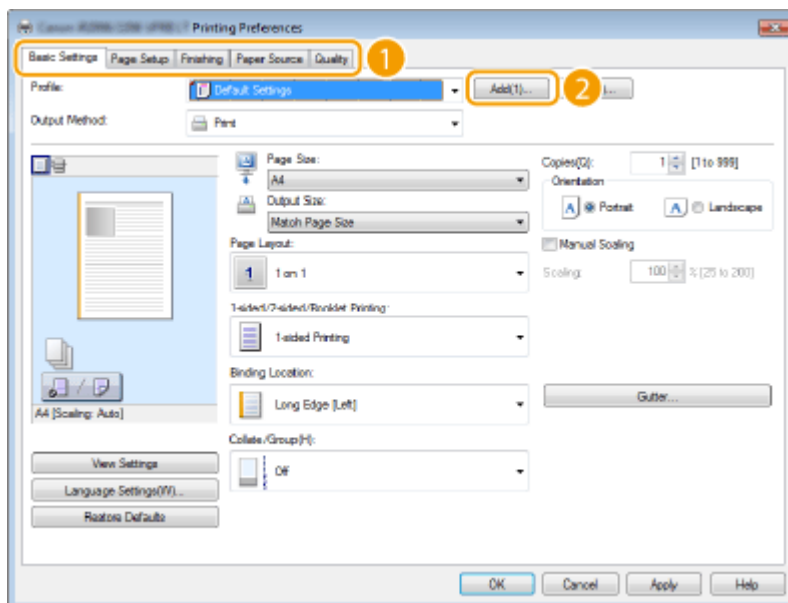

2 Enter a profile name in [Name], select an icon, and then click [OK].

- As necessary, enter comments about the profile in [Comment].
- Click [View Settings] to see the settings that will be registered.

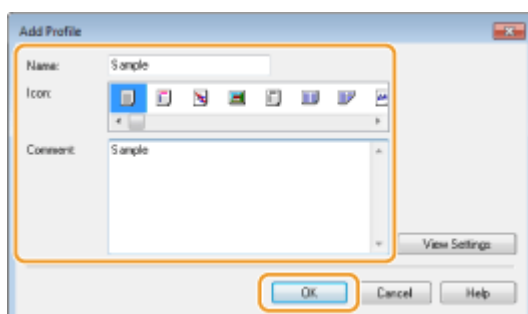


NOTE**Editing a profile**

By clicking [Edit] on the right side of [Profile] on the screen shown in step 1, you can change the name, icon, or comment of the profiles you have previously registered. However, you cannot edit the pre-registered profiles.

Selecting a Profile

Simply select the profile that suits your objective, and click [OK].

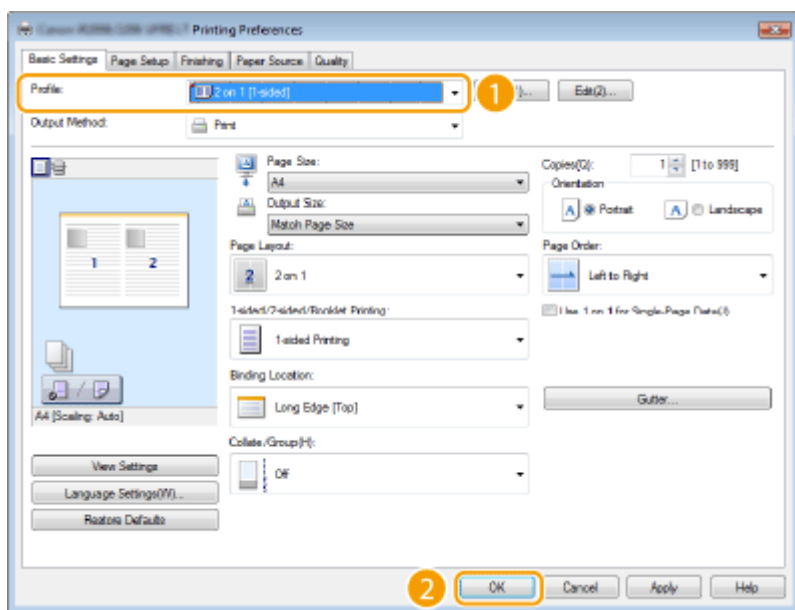**NOTE****Changing the settings of the currently selected profile**

You can change the settings of the currently selected profile. In addition, the changed settings can be registered as another profile.

LINKS

- ▶ **Basic Printing Operations(P. 66)**
- ▶ **Changing Default Settings(P. 76)**

Changing Default Settings


3EEJ-01L

The default settings are the settings that are first displayed whenever you open the print settings screen of the printer driver. You can change these settings to the settings that you use most often. For example, if you always want to print 2 document pages on each printout page, set [2 on 1] as the default page layout setting. From the next time that you open the printer driver screen, the setting will always be [2 on 1], eliminating the need to change this setting every time you make prints.


IMPORTANT

To perform the following procedure, log on to your computer with an administrator account.

- 1** Open the printer folder. ▶ **Displaying the Printer Folder(P. 208)**
- 2** Right-click the icon of the machine and then click [Printing preferences].

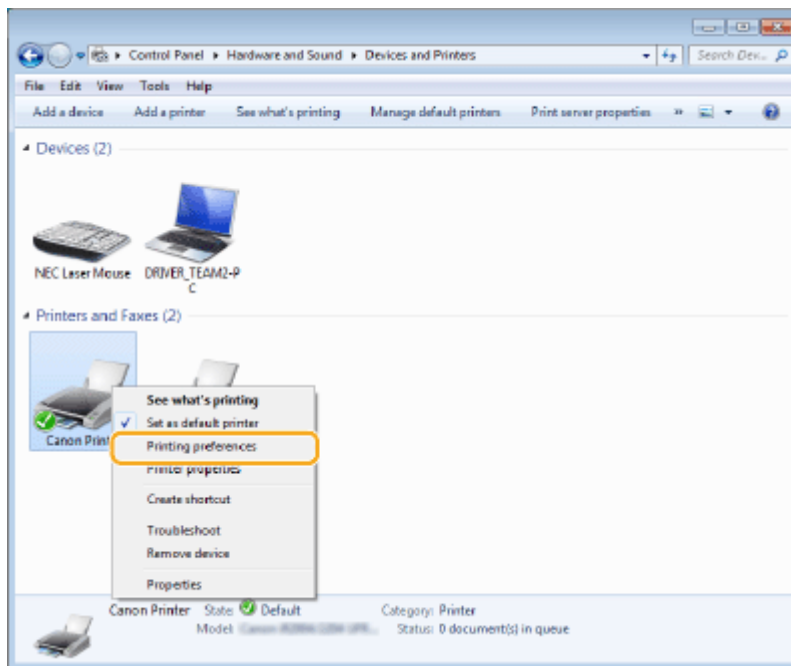

- 3** Change the settings on the printing preferences screen, and click [OK].
 - Make print settings as required on the [Basic Settings], [Page Setup], [Finishing], and [Quality] tabs.

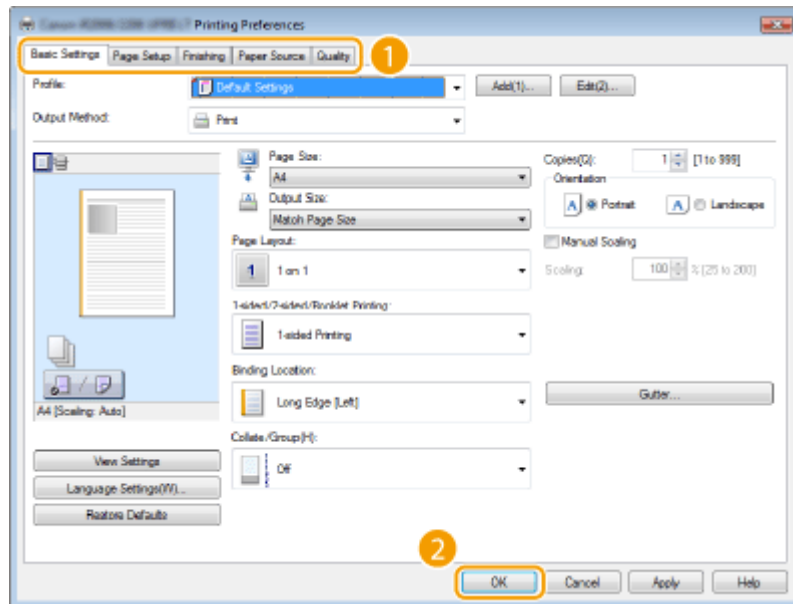

LINKS

- ▶ **Basic Printing Operations(P. 66)**
- ▶ **Registering Combinations of Frequently Used Print Settings(P. 74)**

Using the Machine as a Scanner

Using the Machine as a Scanner	79
Scanning from the Machine	80
Scanning from a Computer	83
Scanning Using an Application	84
Configuring Scan Settings in ScanGear MF	86

Using the Machine as a Scanner

3EEJ-01R

You can scan original documents by using the control panel of the machine or an application on a computer. Whichever way you use, the scanned documents are converted into electronic file formats such as PDFs. Use the scan function to convert large-volume paper documents into files so that you can organize them easily.

NOTE

- To use this machine as a scanner, you must complete preparations in advance, including installation of software to a computer. For more information, see the manuals for the relevant drivers or software on the online manual website.
- Depending on the operating system and the version of the scanner driver or applications you are using, the screens in this manual may differ from your screens.

■ Scanning from the Machine


You can scan and save documents to your computer by using the control panel of the machine.

➡ **Scanning from the Machine(P. 80)**



■ Scanning from a Computer

You can scan documents placed on the machine from a computer. The scanned documents are saved to the computer. You can scan using MF Scan Utility (included with the machine), or with other applications such as an image-processing or word-processing application. ➡ **Scanning from a Computer(P. 83)**

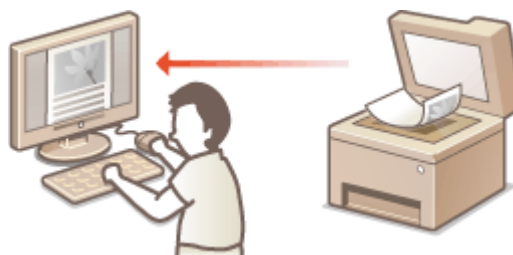

Scanning from the Machine

3EEJ-01S




The sequence of "scanning a document and saving it to a computer" can only be done when scanning from the machine. Scan while specifying what computer documents will be saved to; whether to scan documents in color or black and white; whether to save documents as PDFs or JPEGs; and other settings.


1 Place the document(s). ▶ Placing Documents(P. 19)




2 Press and tap <Scan>.

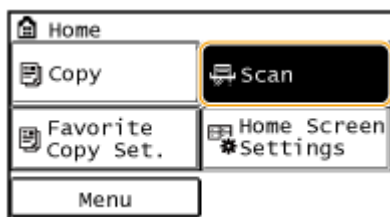

3 Tap <Computer>.

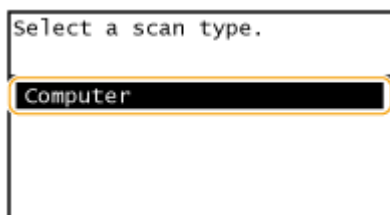

4 Select the scan type.

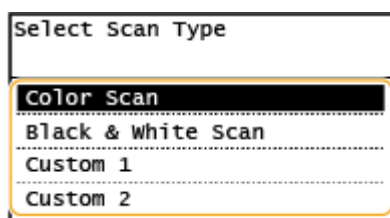

Scan type	Color	Resolution	File format
<Color Scan>	Color	300 dpi	JPEG (Exif)
<Black & White Scan>	Black and white ^{*1}	300 dpi	PDF (searchable ^{*2})
<Custom 1>	Color	300 dpi	JPEG (Exif)
<Custom 2>	Color	300 dpi	JPEG (Exif)

^{*1} Documents are scanned in black and white only, with no intermediate shades of gray.

^{*2} A PDF format where characters on the document are scanned as text data and the text can be searched using a computer.

NOTE:

To change settings


- The settings in the table above are all factory default settings. You can change settings from MF Scan Utility. For more information, click [Instructions] on MF Scan Utility.
- If you are a macOS user, see the manuals for the relevant drivers or software on the online manual website.

5 Press .

- Scanning starts.
- To cancel, tap <Cancel> ► <Yes>.

IMPORTANT:

You cannot scan while the ScanGear MF is displayed. Close the screen before scanning.

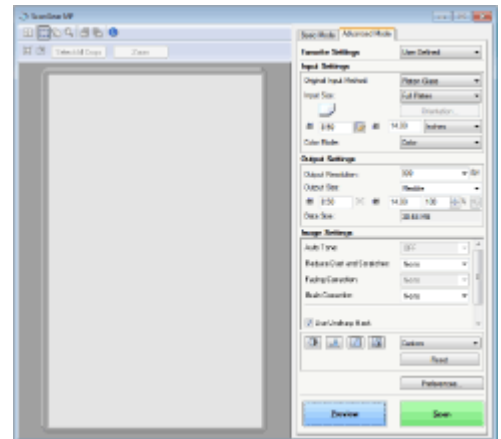

■ When placing documents on the platen glass in step 1

When scanning is complete, follow the procedure below (when file format is PDF).

- 1 If there are additional pages of documents to be scanned, place the next document on the platen glass, and press .



- Repeat this step until you finish scanning all of the pages.
- When there is only one page to be scanned, proceed to the next step.

- 2** Tap <Finish Scan>.
 - The save destination folder is displayed on the computer.

NOTE


About the save destination folder

- By default, the scanned data is saved to the [My Documents] folder. A subfolder named with the scanning date is created, and the data is saved to that folder.
- You can change the save destination from the MF Scan Utility. For more information, click [Instructions] on MF Scan Utility.

Scanning from a Computer

3EEJ-01U

There are two ways to scan from a computer: using MF Scan Utility and using an application such as an image-processing or word-processing application.

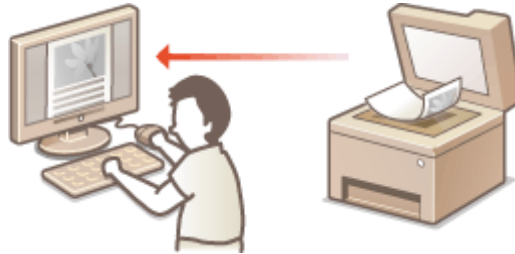

Scanning Using MF Scan Utility



MF Scan Utility is an application included with the machine that enables you to scan documents or images to a computer. You can forward the scanned data to a specified application, or attach it to an e-mail message. For more information, click [Instructions] on MF Scan Utility.

NOTE

- If you are a macOS user, see the manuals for the relevant drivers or software on the online manual website.

Scanning Using an Application



You can scan images by using an application such as a word-processing or image-processing application, and load the images directly into the application. You do not need to start another application to scan.

Scanning Using an Application

3EEJ-01W



You can scan originals from applications such as image-processing or word-processing software. The scanned image is directly loaded in the application, allowing you to edit or process the image immediately. The following procedure varies depending on the application.

IMPORTANT

- The application must be compatible with TWAIN or WIA*. For more information, see the instruction manual for your application.

* TWAIN is a standard for connecting image input devices, such as scanners, with computers. WIA is a function that is an integrated standard in Windows.

- When using the machine with a USB connection, exit sleep mode before scanning. **▶Entering Sleep Mode(P. 39)**

1 Place the document(s). **▶Placing Documents(P. 19)**



IMPORTANT:

- The second or subsequent documents may not be scanned, or an error message may be displayed depending on the application. In such a case, place and scan one document at a time.
- When <Auto Online for Remote Scan> is set to <Off>, you must tap <Scan> ▶ <Remote Scanner> in the <Home> screen to bring the machine online. **▶Auto Online for Remote Scan(P. 115)**

2 From the application, select the start scan command.

- The procedure for selecting the start scan command varies depending on the application. For more information, see the instruction manual for your application.

3 Select the scanner driver for the machine.

- Select ScanGear MF or WIA. If you select ScanGear MF, you can configure advanced scan settings.

4 Configure the scan settings as necessary.

5 Click [Scan].

- Scanning starts.
- When scanning is complete, the scanned image is forwarded to an application.

LINKS

▶ **Configuring Scan Settings in ScanGear MF(P. 86)**

Configuring Scan Settings in ScanGear MF

3EEJ-01X



You can use ScanGear MF to configure advanced scan settings when you scan. The way of starting ScanGear MF differs depending of the way of scanning from the computer.

Starting from MF Scan Utility

When scanning from MF Scan Utility, click [ScanGear] to start ScanGear MF. For more information, click [Instructions] on MF Scan Utility.

NOTE

- If you are a macOS user, see the manuals for the relevant drivers or software on the online manual website.

Starting from an application

To scan from applications such as image-processing or word-processing software, select ScanGear MF as scanner driver. ➡ **Scanning Using an Application(P. 84)**


TIPS

Operations available with ScanGear MF

- Previewing the image before scanning
- Specifying the scanning area
- Finely adjusting the image quality

How to use ScanGear MF

- Click  for ScanGear MF, and see help.

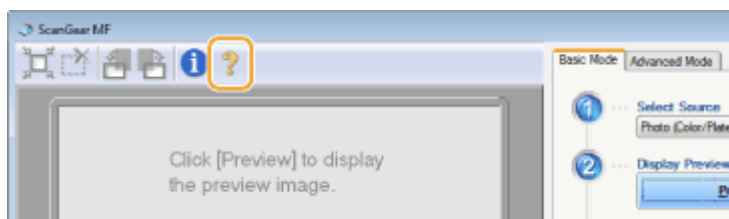

Security

Security	88
Protecting the Machine from Unauthorized Access	89
Setting Access Privileges	90
Setting the System Manager PIN	91
Restricting the Machine's Functions	92
Restricting USB Functions	93

Security

3EEJ-01Y

Confidential information is handled by information devices everywhere, including computers and printers, and any of these devices may become a target for malicious third parties at anytime. Attackers may directly gain unauthorized access to your devices, or indirectly take advantage of negligence or improper use. Either way, you may incur unanticipated losses when your confidential information is leaked. To counter these risks, the machine is equipped with a variety of security functions. Set the necessary configuration depending on your environment.

■ Establishing the Basics of Information Security



▶ Protecting the Machine from Unauthorized Access(P. 89)

Protecting the Machine from Unauthorized Access

3EEJ-020

Prevent unauthorized third parties from accessing and using the machine.

Setting Access Privileges

3EEJ-021

Protect the machine from unauthorized access by only allowing users with access privileges to use the machine. When privileges are set, the user must enter a PIN to change settings.



System Manager PIN

System Manager PIN is intended exclusively for Administrators having full access privileges. If you specify this PIN, you need to log on to the machine using this PIN in order to access <System Management Settings>.

▶ **Setting the System Manager PIN(P. 91)**

Setting the System Manager PIN

3EEJ-022

Set a System Manager PIN that is intended exclusively for Administrators. You can access <System Management Settings> only when the PIN has been entered correctly. It is recommended that only Administrators know the PIN.

- 1** Tap <Menu> in the <Home> screen.
- 2** Tap <System Management Settings>.
- 3** Select <System Manager Information Settings> ► <System Manager PIN> ► <OK>.
- 4** Specify the System Manager PIN.

- Enter a number of up to seven digits, and tap <Apply>.
- When <PIN (Confirm)> is displayed, enter the PIN once again to confirm.

The image shows two sequential screens for setting a System Manager PIN. The first screen, titled "System Manager PIN", features a text input field at the top containing seven asterisks, indicating a masked PIN. Below this is a numeric keypad with buttons for digits 1 through 9 and 0. At the bottom of the screen are two buttons: "Clear" and "Apply". The second screen, titled "PIN (Confirm)", has an identical layout but is used for re-entering the PIN to confirm it. An arrow points from the first screen to the second, indicating the sequence of steps.

NOTE:

- You cannot set a PIN that consists only of zeros, such as "00" or "0000000".
- To disable the PIN, press  to erase the PIN (leave the text box blank), and tap <Apply>.

Restricting the Machine's Functions

3EEJ-023

Some of the functions of the machine may rarely be used or provide opportunities for misuse. For security purposes, the machine can be set to limit its capabilities by partially or completely disabling these functions.

Restricting USB Functions



▶ Restricting USB Functions(P. 93)

Restricting USB Functions

You can disable the USB port located on the right side of the machine. If this port is disabled, the machine cannot communicate with a computer via USB.


1 Tap <Menu> in the <Home> screen.

2 Tap <System Management Settings>.

- If a screen for entering a PIN is displayed, enter the PIN, and tap <Apply>. ▶ **Setting the System Manager PIN(P. 91)**

3 Select <Use as USB Device>.

4 Select <Off>.

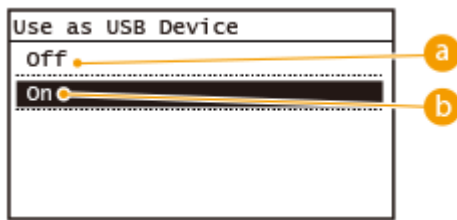

a <Off>

Disables the USB port located on the back side of the machine.

b <On>

Enables the USB port located on the back side of the machine.

5 Restart the machine.

- Turn OFF the machine, wait for at least 10 seconds, and turn it back ON.

Setting Menu List

Setting Menu List	95
Preferences	96
Timer Settings	99
Common Settings	104
Copy Settings	106
Printer Settings	108
Adjustment/Maintenance	109
System Management Settings	114

Setting Menu List

3EEJ-025


There are various settings in this machine. You can adjust each of the settings in detail. Access these settings by tapping <Menu> in the <Home> screen.

TIPS

You can print the setting menu in list form to check the current settings:

▶ **User Data List/System Manager Data List(P. 171)**

Preferences

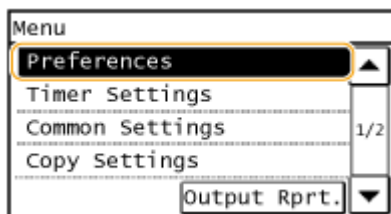

All the settings about the display are listed with short descriptions. Default settings are marked with a dagger (†).

NOTE

If a screen for entering a PIN is displayed

Enter the PIN and tap <Apply>. ➤ **Setting the System Manager PIN(P. 91)**

Asterisks (*)

Settings marked with "*" may be unavailable or vary or have different defaults depending on your country or region.

➤ Display Settings(P. 96)

Display Settings

Default Screen after Startup/Restoration

By default, the <Home> screen is displayed immediately after the machine is turned ON or when the Auto Reset function is performed. Specify the setting to change the default screen and display the main screen of a different function.

Home †
Copy
Scan



<Menu> ➤ <Preferences> ➤ <Display Settings> ➤ <Default Screen after Startup/Restoration>
➤ Select a function to display the desired screen ➤

Home Screen Button Display Settings

Change the order in which the <Home> screen buttons are displayed. ➤ **Customizing the <Home> Screen(P. 14)**



<Menu> ➤ <Preferences> ➤ <Display Settings> ➤ <Home Screen Button Display Settings> ➤ Select
<Set Display Order> or <Insert and Delete Blank> ➤ Change display settings ➤

Contrast

Adjust the brightness of the display to suit the installation location of the machine.

Five Levels



<Menu> ▶ <Preferences> ▶ <Display Settings> ▶ <Contrast> ▶ Use <->/<+> to adjust the brightness ▶ <Apply> ▶

Invert Screen Colors

Select <On> to invert the display colors. Select <On> if the display is hard to view even after the brightness was adjusted in <Contrast>.

Off [†]
On



<Menu> ▶ <Preferences> ▶ <Display Settings> ▶ <Invert Screen Colors> ▶ Select <On> or <Off> ▶

Millimeter/Inch Entry Switch

Select the unit of measurement.

Millimeter [†]
Inch



<Menu> ▶ <Preferences> ▶ <Display Settings> ▶ <Millimeter/Inch Entry Switch> ▶ Select <Millimeter> or <Inch> ▶

Notify to Check Paper Settings

You can set the machine so that, after you load the paper in the paper drawer, a pop-up screen is displayed prompting you to confirm the paper loaded in the paper drawer is the same as the paper registered in the paper settings.

Off
On [†]



<Menu> ► <Preferences> ► <Display Settings> ► <Notify to Check Paper Settings> ► Select <On> or <Off> ►

Message Display Time

Specify the interval in seconds at which two different messages are alternately displayed.

1 to 2 ⁺ to 5 (sec.)



<Menu> ► <Preferences> ► <Display Settings> ► <Message Display Time> ► Set a number for the interval ► <Apply> ►

Scrolling Speed

Adjust the speed for scrolling the screen by selecting from three levels.

Slow
Standard ⁺
Fast



<Menu> ► <Preferences> ► <Display Settings> ► <Scrolling Speed> ► Select the speed ►

Language ^{*1}


Select the display language used for the display, reports, and lists.

Arabic, Bulgarian, Catalan, Chinese (Simplified), Chinese (Traditional), Croatian, Czech, Danish, Dutch, English ⁺, Estonian, Finnish, French, German, Greek, Hungarian, Italian, Japanese, Korean, Latvian, Lithuanian, Norwegian, Polish, Portuguese, Romanian, Russian, Slovak, Slovene, Spanish, Swedish, Turkish



<Menu> ► <Preferences> ► <Display Settings> ► <Language> ► Select a language ►

Timer Settings

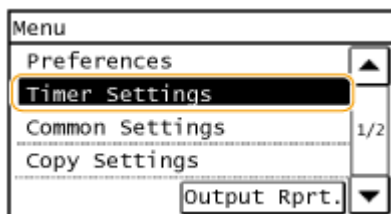

All the settings about the timer are listed with short descriptions. Default settings are marked with a dagger (†).

NOTE

Asterisks (*)

Settings marked with "†" may be unavailable or vary or have different defaults depending on your country or region.

- ▶ **Date/Time Settings(P. 99)**
- ▶ **Auto Reset Time(P. 101)**
- ▶ **Function After Auto Reset(P. 101)**
- ▶ **Auto Sleep Time(P. 102)**
- ▶ **Auto Offline Time (P. 102)**
- ▶ **Auto Shutdown Time (P. 102)**

Date/Time Settings

Specify date and time settings, including the date format and the 12- or 24-hour clock display setting. The date and time that are printed on each report and list are determined by these settings.

Date Format *1

Select the date format (order of year, month, and day).

YYYY MM/DD
MM/DD/YYYY
DD/MM YYYY †



<Menu> ▶ <Timer Settings> ▶ <Date/Time Settings> ▶ <Date Format> ▶ Select the date format

Time Format

Select the 12- or 24-hour clock display setting.


12 Hour (AM/PM) †
24 Hour



<Menu> ► <Timer Settings> ► <Date/Time Settings> ► <Time Format> ► Select the display setting
 ► 

Current Date/Time Settings

Set the current date and time. Use ◀ / ▶ to move the cursor, and ▲ / ▼ to specify the date and time or switch between <AM>/<PM>.

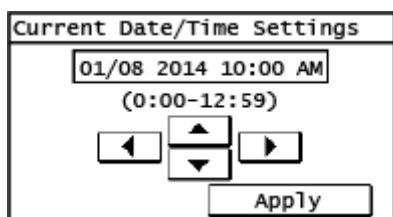


<Menu> ► <Timer Settings> ► <Date/Time Settings> ► <Current Date/Time Settings> ► Set the date and time ► <Apply> ► 

NOTE

The current date and time cannot be changed for 1 hour after daylight saving time is in effect.

Time Zone *1

Select the time zone. If the time zone setting is changed, the values set in <Current Date/Time Settings> are also changed accordingly.

(UTC-12:00) International Date Line West to (UTC) Coordinated Universal Time [†] to (UTC+14:00) Kiribati Island

NOTE

UTC

Coordinated Universal Time (UTC) is the primary time standard by which the world regulates clocks and time. The correct UTC time zone setting is required for Internet communications.



<Menu> ► <Timer Settings> ► <Date/Time Settings> ► <Time Zone> ► Select a time zone ► 

Daylight Saving Time Settings *1

Enable or disable daylight saving time. If daylight saving time is enabled, specify the dates from which and to which daylight saving time is in effect.

Off

On [†]

Start: Month, Week, Day

End: Month, Week, Day



<Menu> ▶ <Timer Settings> ▶ <Date/Time Settings> ▶ <Daylight Saving Time Settings> ▶ Select a month and day ▶ <Apply> ▶

Auto Reset Time

If a key is not pressed for a specified period of time, the screen and the settings are initialized to display the default screen (Auto Reset). Specify the interval at which the Auto Reset is performed. Select <0> to disable the Auto Reset function. The Auto Reset is not performed in the following cases:

- The setting menu is displayed.
- The machine is processing data, such as when printing documents.
- An error message is displayed and the [Error] indicator is blinking (However, Auto Reset is performed when the error does not prevent the user from continuing to use a function.)

0 (Auto Reset is disabled.)

1 to 2 [†] to 9 (min.)

<Menu> ▶ <Timer Settings> ▶ <Auto Reset Time> ▶ Set the Auto Reset time ▶ <Apply> ▶

NOTE

The screen displayed after the Auto Reset is performed can be selected in <Function After Auto Reset>.

Function After Auto Reset

Select whether to return the display to the default screen after the Auto Reset is performed. If <Default Function> is selected, the main screen of the function selected in <Default Screen after Startup/Restoration> is displayed (**Default Screen after Startup/Restoration(P. 96)**). If <Selected Function> is selected, the display returns to the main screen of the function that was selected.

Default Function [†]

Selected Function



<Menu> ► <Timer Settings> ► <Function After Auto Reset> ► Select <Default Function> or
<Selected Function> ►


Auto Sleep Time

If the machine has not been operated or has had no data to process for a specified period of time, the machine enters sleep mode to save energy consumption (Auto Sleep). Specify the period of time after which auto sleep is performed. Auto Sleep is not performed when the setting menu is displayed. We recommend using the factory default settings to save the most power. **▶ Entering Sleep Mode(P. 39)**

3 to 10 to 60 (min.)

Auto Offline Time

If a key has not been pressed for a specified period of time after the screen below is displayed (the machine is set online for scanning), the machine automatically becomes offline. Specify the time period at which the machine becomes offline. You can also set the machine to remain online.

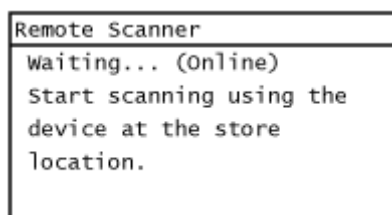

0 (The machine remains online.)
1 to 5 to 60 (min.)



<Menu> ► <Timer Settings> ► <Auto Offline Time> ► Set the time period ► <Apply> ►

Auto Shutdown Time

Set a timer to automatically shut down the machine after the specified period of idle time has elapsed since the machine entered sleep mode. **▶ Setting Auto Shutdown Time(P. 38)**


0 (Auto Shutdown is disabled.)
1 to 4 to 8 (hr.)



<Menu> ▶ <Timer Settings> ▶ <Auto Shutdown Time> ▶ Set the Auto Shutdown time

▶ <Apply> ▶ 

Common Settings

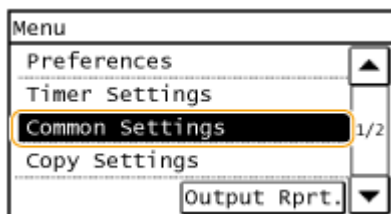

All the settings about the operation of the paper drawer are listed with short descriptions. Default settings are marked with a dagger (†).

▶ Paper Source Auto Selection (P. 104)

Paper Source Auto Selection

Enable or disable the automatic drawer selection feature for the paper sources. If automatic drawer selection is set to <On> when printing document the machine automatically selects a paper source that is loaded with the appropriate paper size.

Copy

Multi-Purpose Tray

Off †

On

Drawer 1

Off

On †

Printer

Drawer 1

Off

On †

Other

Multi-Purpose Tray

Off †

On


Drawer 1

Off

On †



<Menu> ▶ <Common Settings> ▶ <Paper Source Auto Selection> ▶ Select the function ▶ Select the paper source ▶ Select <Off> or <On> ▶ 

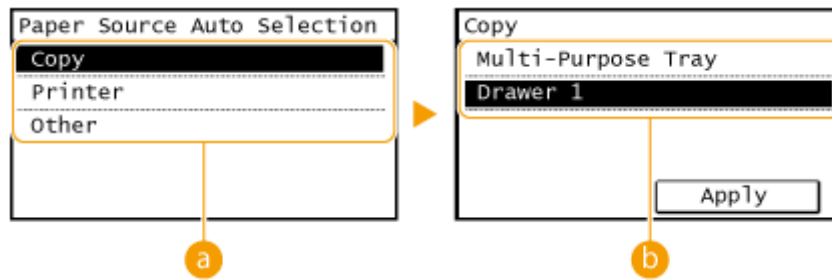

a Functions

Select the function for which you want to configure automatic drawer selection.

NOTE:

Select <Other> for functions such as printing reports and lists.


b Paper Sources

Select the paper source for which you want to enable.

NOTE:

<Multi-Purpose Tray> is not displayed if <Printer> was selected on the previous screen (**a**). Automatic drawer selection is always enabled for printing on paper fed from the multi-purpose tray.

Copy Settings

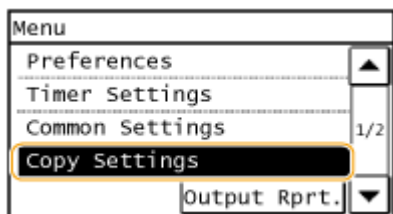

All the settings about the copy are listed with short descriptions. Default settings are marked with a dagger (†).

- ▶ Change Default Settings (P. 106)
- ▶ Auto Recognize Original Orientation (P. 107)
- ▶ Initialize Default Settings (P. 107)

Change Default Settings

You can change the factory default settings about copy. The selected settings are used as the default settings of the copy function. ▶ Changing Default Settings(P. 62)

Number of Copies

1 † to 999

Density

-4 to 0 † to +4

Auto Density

Original Type

Text

Text/Photo †

Photo

Copy Ratio

Custom Ratio

100% (1:1) †

400% (Max)

200% A5->A3

141% A5->A4, A4->A3

70% A4->A5, A3->A4

50% A3->A5

25% (Min)

Paper

Multi-Purpose Tray

Drawer 1 †

N on 1

Off †

2 on 1

4 on 1

ID Card Copy
Select Layout

Finishing

Group
Collate 
Rotate + Group
Rotate + Collate

Book -> 2 Pages

Off 
On


Erase Frame

Off 
Original Frame
Book Frame

Auto Recognize Original Orientation


Automatically rotate images by calculating original size/copy ratio/etc, and print them on paper loaded in the paper source.

Off
On 

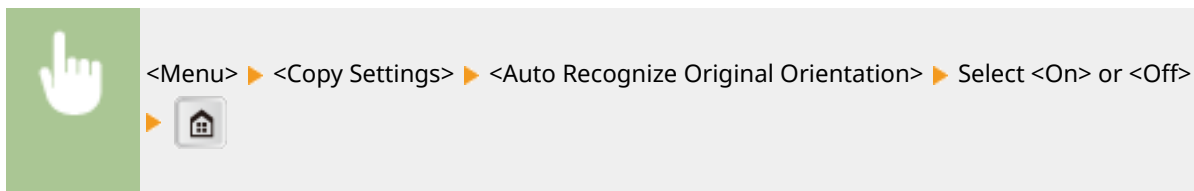


Initialize Default Settings

Select to restore the copy settings that you specified in <Change Default Settings> to the factory defaults.

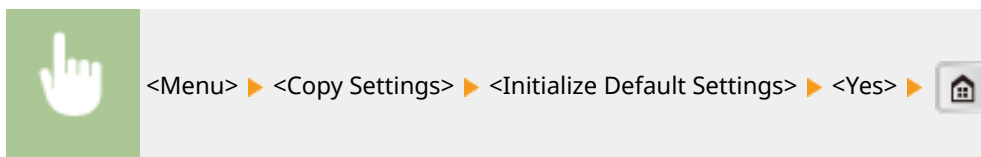

Printer Settings

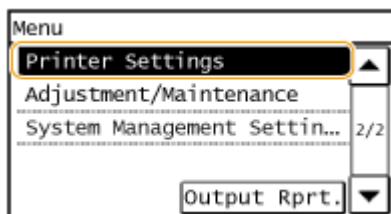

All the settings about the printer are listed with short descriptions. Default settings are marked with a dagger (†).

▶ **Paper Size Override (P. 108)**

▶ **Print Quality(P. 108)**

Paper Size Override

Select whether to switch between printing on A4 and Letter size paper if one of these paper sizes is loaded but the other is not. For example, if you are printing a Letter size document but only A4 paper is loaded in the machine, the machine will print your document on A4 paper.

Off †
On



<Menu> ▶ <Printer Settings> ▶ <Paper Size Override> ▶ Select <Off> or <On> ▶



Print Quality

You can change settings related to print quality.

Toner Save

You can save toner consumption when printing without using a printer driver. Select <On> when you want to check the layout or other appearance characteristics before proceeding to final printing of a large job.

Off †
On




<Menu> ▶ <Printer Settings> ▶ <Print Quality> ▶ <Toner Save> ▶ Select <Off> or <On> ▶



Adjustment/Maintenance

3EEJ-02C

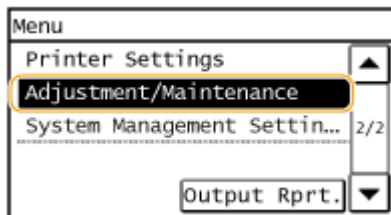

All the settings about adjustment and maintenance are listed with short descriptions. Default settings are marked with a dagger (†).

- ▶ **Printer Density (P. 109)**
- ▶ **Toner Save (P. 109)**
- ▶ **Speed/Image Quality Priority for Rotate + Collate (P. 110)**
- ▶ **Special Processing(P. 110)**
- ▶ **Clean Transfer Roller(P. 112)**
- ▶ **Clean Drum Unit(P. 112)**
- ▶ **Clean Fixing Assembly (P. 113)**

Printer Density

Adjust the density to the most appropriate levels for copying and printing reports and lists.

Nine Levels



<Menu> ▶ <Adjustment/Maintenance> ▶ <Printer Density> ▶ Adjust the density ▶ <Apply> ▶ 

Toner Save

Select whether to reduce toner consumption when copying.

Copy

Off †

Save Mode (Low Saving)

Save Mode (High Saving)



<Menu> ▶ <Adjustment/Maintenance> ▶ <Toner Save> ▶ <Copy> ▶ Select <Off>, <Save Mode (Low Saving)>, or <Save Mode (High Saving)> ▶ 

Speed/Image Quality Priority for Rotate + Collate

When <Rotate + Collate> is set, you can specify either <Speed Priority> or <Image Quality Priority>.

Speed Priority [†]
Image Quality Priority



<Menu> ▶ <Adjustment/Maintenance> ▶ <Speed/Image Quality Priority for Rotate + Collate> ▶
Select <Speed Priority> or <Image Quality Priority> ▶

Special Processing

If the print results are not satisfactory due to the paper type or usage environment, you may use the settings below to improve the quality of the printouts.

Special Printing Mode O

Paper jams may frequently occur when using the multi-purpose tray to copy/print on the reverse side of paper that has already been copied/printed on. <Off> should normally be specified for this setting. Only change this setting if the above symptom occurs.

Off [†]
Mode 1
Mode 2

IMPORTANT

Do not use paper that has been exposed to high temperature or humidity for an extended period of time. Printing on such paper may result in frequent paper jams.



<Menu> ▶ <Adjustment/Maintenance> ▶ <Special Processing> ▶ <Special Printing Mode O> ▶ Select the mode ▶

Special Printing Mode M

Change the <Special Printing Mode M> setting if there is a degradation in print quality or irregularity in print density. This mode enables you to select one of five levels for the machine's transfer output. Select a higher mode number if you want to print on paper to which toner does not adhere well, such as index cards. Select a lower mode number when printing on paper that has been stored at high temperature and high humidity for a long time.

Mode 1
Mode 2
Mode 3 [†]
Mode 4



<Menu> ▶ <Adjustment/Maintenance> ▶ <Special Processing> ▶ <Special Printing Mode M>
 ▶ Select the mode ▶

Special Printing Mode N

Change the <Special Printing Mode N> setting if paper curls or jams when printing on paper that has absorbed moisture. If <Mode 3> is set, the effect of this setting is maximized, but it may take the machine longer to print.

Off [†]

Mode 1

Mode 2

Mode 3

IMPORTANT

Do not use paper that has been exposed to high temperature or humidity for an extended period of time. Printing on such paper may result in frequent paper jams.

NOTE

If both <Special Printing Mode P> and <Special Printing Mode N> are enabled when printing on a lightweight paper, <Special Printing Mode P> overrides <Special Printing Mode N>.



<Menu> ▶ <Adjustment/Maintenance> ▶ <Special Processing> ▶ <Special Printing Mode N>
 ▶ Select the mode ▶

Special Printing Mode S

If you switch to a larger size of paper than previously used, it may take a long time for the machine to resume printing. In this case, set the <Special Printing Mode S> setting to <Mode 1> or <Mode 2> to reduce the waiting time for the next print. If <Mode 1> is set, waiting time is minimized.


Off [†]

Mode 1

Mode 2

NOTE

If this mode is enabled, the previously printed image may re-appear faintly on the next output.

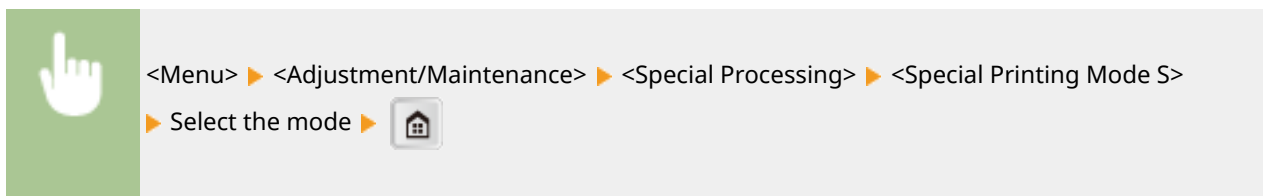


Special Printing Mode P

Set the <Special Printing Mode P> setting to <On> if paper curls when printing on a lightweight paper.

Off [†] On

NOTE


If both <Special Printing Mode P> and <Special Printing Mode N> are enabled, <Special Printing Mode P> overrides <Special Printing Mode N>.

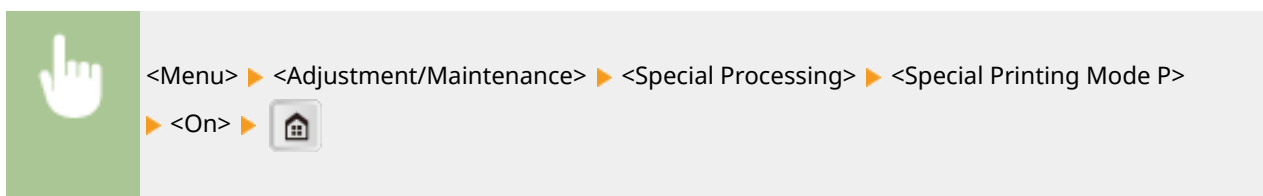

Special Printing Mode F

Uneven images may appear on the printed paper. In this case, change this setting. If <Mode 3> is set, the effect of this setting is maximized.

Off [†] Mode 1 Mode 2 Mode 3
--

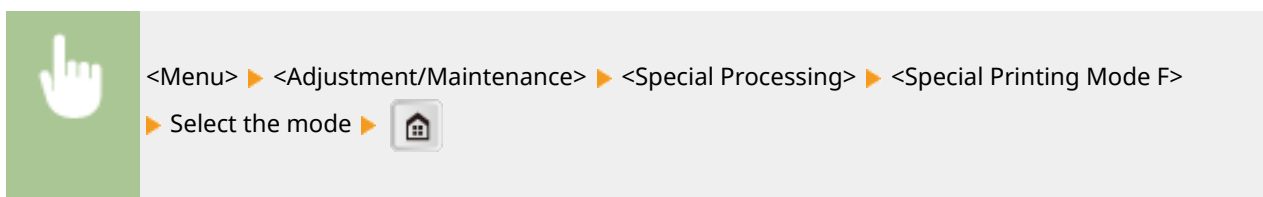

Clean Transfer Roller

Clean the transfer roller if print quality deteriorates or dots appear on printouts. **▶Transfer Roller(P. 155)**


Clean Drum Unit

Clean the drum unit if print quality deteriorates. **▶Drum(P. 156)**

Clean Fixing Assembly

Clean the fixing assembly after a toner cartridge is replaced or if black streaks appear on printouts. ▶ **Fixing Assembly(P. 157)**

System Management Settings

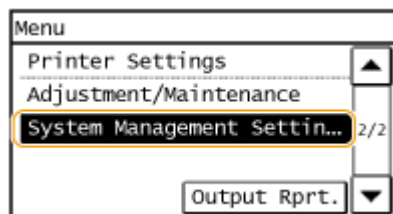

All the settings about System Management Settings are listed with short descriptions. Default settings are marked with a dagger (†).

NOTE

If a screen for entering a PIN is displayed

Enter the PIN and tap <Apply>. ➤ **Setting the System Manager PIN(P. 91)**

Asterisks (*)

Settings marked with "*" may be unavailable or vary or have different defaults depending on your country or region.

- **System Manager Information Settings(P. 114)**
- **Select Country/Region(P. 114)**
- **Auto Online for Remote Scan(P. 115)**
- **Display Job Log(P. 115)**
- **Use as USB Device(P. 115)**
- **PDL Selection (Plug and Play)(P. 116)**
- **Update Firmware(P. 116)**
- **Initialize Menu(P. 117)**
- **Initialize All Data/Settings(P. 117)**

System Manager Information Settings

Specify the PIN exclusively for Administrators who have access privileges to <System Management Settings>. You can set the PIN from <System Manager PIN>. ➤ **Setting the System Manager PIN(P. 91)**

System Manager PIN

Enter a number of up to seven digits for the System Manager PIN.

Select Country/Region *1

Specify the country or region where the machine is used. The default setting may vary depending on the setting selected at initial power-on.

Austria (AT)	Netherlands (NL)
Belarus (BY)	Norway (NO)
Belgium (BE)	Poland (PL)
Czech Republic (CZ)	Portugal (PT)
Denmark (DK)	Russia (RU)
Egypt (EG)	Saudi Arabia (SA)
Finland (FI)	Slovenia (SI)
France (FR)	South Africa (ZA)

Germany (DE)	Spain (ES)
Greece (GR)	Sweden (SE)
Hungary (HU)	Switzerland (CH)
Ireland (IE)	Ukraine (UA)
Italy (IT)	Great Britain (GB) †
Jordan (JO)	Other
Luxembourg (LU)	



<Menu> ▶ <System Management Settings> ▶ <Select Country/Region> ▶ Select a country or region ▶ 

Auto Online for Remote Scan

Select whether to use this feature to go online for remote scanning, even without using the control panel.

Off
On †



<Menu> ▶ <System Management Settings> ▶ <Auto Online for Remote Scan> ▶ Select <On> or <Off> ▶ 

Display Job Log

Select whether to display the copying, printing and scanning logs on the display of the machine.

Off
On †



<Menu> ▶ <System Management Settings> ▶ <Display Job Log> ▶ Select <Off> or <On> ▶ 

Use as USB Device

Enable or disable the USB port that is used for connecting the machine to a computer.

Off
On †



<Menu> ▶ <System Management Settings> ▶ <Use as USB Device> ▶ Select <Off> or <On>
▶ Restart the machine

PDL Selection (Plug and Play)

Select a page description language so that the machine is detected as a printer that is compatible with that language when it is connected to a computer by using Plug and Play.

USB

Select a page description language so that the machine is detected as a printer that is compatible with that language when it is connected to a computer via USB.



UFRII LT +
UFRII LT (V4)

NOTE:

Any setting change is enabled the next time the main power is turned ON.



<Menu> ▶ <System Management Settings> ▶ <PDL Selection (Plug and Play)> ▶ <USB> ▶ Select a page description language ▶

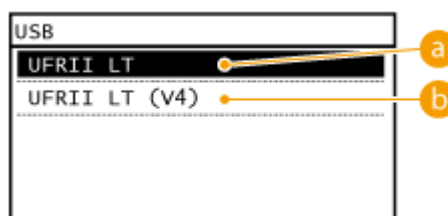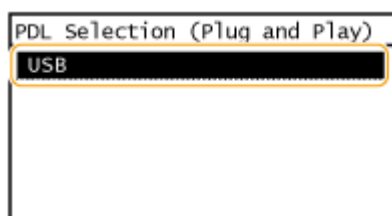

a <UFRII LT>

Detects and connects the machine as a UFRII LT printer.

b <UFRII LT (V4)>

Detects and connects the machine as a UFRII LT printer that is compatible with XML Paper Specification (XPS).

Update Firmware

Select how to install the firmware update according to the environment of the machine.

- <Via PC>
Select to manually install the firmware update available on the Canon Web site yourself. For instructions on how to install the update, see the instruction manual available on the Web site.
- <Version Information>

Select to check details for the current firmware.

Via PC
Version Information

Initialize Menu

Select to restore the settings listed below to the factory defaults. You can restore all the settings listed below at once, or you can restore individual settings separately.  **Initializing Menu(P. 176)**  **Initializing System Management Settings(P. 177)**

Preferences
Timer Settings
Common Settings
Copy Settings
Printer Settings
Adjustment/Maintenance
System Management Settings
Initialize All

Initialize All Data/Settings

Delete all data on the machine and return it to its factory default settings.



<Menu> ▶ <System Management Settings> ▶ <Initialize All Data/Settings> ▶ <Yes> ▶ <Yes>
▶ Restart the machine

Troubleshooting

Troubleshooting	119
Clearing Jams	121
Countermeasures for Each Message	130
Countermeasures for Each Error Code	133
Common Problems	134
Installation/Settings Problems	136
Copy/Printing Problems	137
Miscellaneous Problems	138
When You Cannot Print Properly	139
Printing Results Are Not Satisfactory	141
Paper Creases or Curls	145
Paper Is Fed Incorrectly	147
When a Problem Cannot Be Solved	149

Troubleshooting

3EEJ-02F

When a problem occurs, check this chapter to find out solutions before contacting Canon.

■ Paper Jams

If a document or paper jams, see [▶Clearing Jams\(P. 121\)](#) to remove the jammed paper.



■ A Message or Error Code Appears

If the screen displays a message or error code (three digits), see the following sections.



- ▶Countermeasures for Each Message(P. 130)
- ▶Countermeasures for Each Error Code(P. 133)

■ Common Problems

If you suspect that the machine is malfunctioning, see the following sections before contacting Canon.



- ▶Common Problems(P. 134)
- ▶Installation/Settings Problems(P. 136)
- ▶Copy/Printing Problems(P. 137)
- ▶Miscellaneous Problems(P. 138)

■ Printing Results are Not Satisfactory

If printing results are not satisfactory, see [▶When You Cannot Print Properly\(P. 139\)](#) .



■ When a Problem Cannot Be Solved


If a problem persists, see [▶When a Problem Cannot Be Solved\(P. 149\)](#) to find out where to contact.



Clearing Jams

3EEJ-02H

If a paper jams, <Paper jammed.> is displayed on the screen. Press <Next> to display simple solutions. If it is difficult to understand the procedures on the display, see the following sections to clear jams.

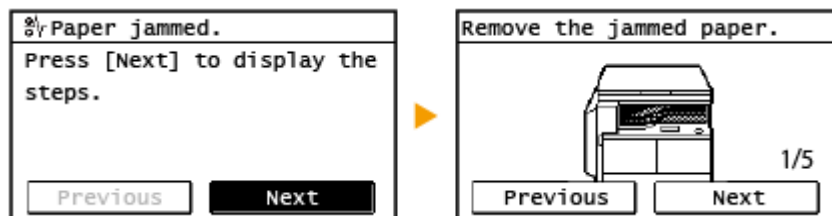

- ▶ Paper Jams in the Paper Drawer 1(P. 121)
- ▶ Paper Jams around the Output Area(P. 124)
- ▶ Paper Jams around the Fixing Assembly(P. 126)
- ▶ Paper Jams in the Multi-Purpose Tray(P. 127)

IMPORTANT

When removing the jammed paper, do not turn OFF the machine

Turning OFF the machine deletes the data that is being printed.

If paper tears

Remove all the paper fragments to prevent them from becoming jammed.

If paper jams repeatedly

- Tap the paper stack on a flat surface to even the edges of the paper before loading it into the machine.
- Check that the paper is appropriate for the machine.

▶ Available Paper(P. 194)

- Check that no jammed paper fragments remain in the machine.

Do not forcibly remove the jammed document or paper from the machine

Forcibly removing the paper may damage parts. If you are not able to remove the paper, contact your local authorized Canon dealer.


▶ When a Problem Cannot Be Solved(P. 149)

Paper Jams in the Paper Drawer 1


- 1** Remove the jammed paper from the output tray.




2 Press the button on the left cover of the main unit, and open the left cover.

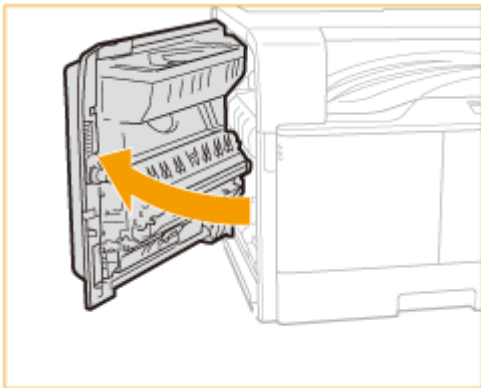


3 Open the drawer 1 left cover.

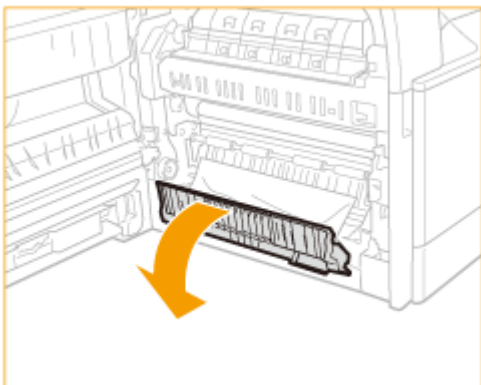


4 Remove the jammed paper.

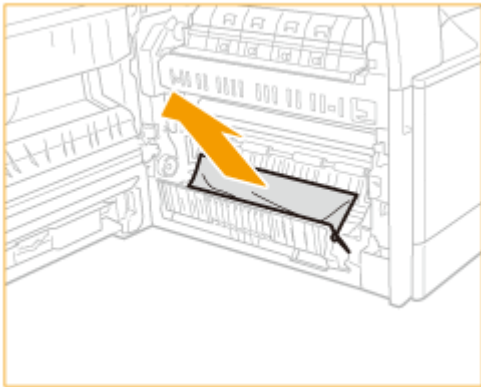

5 Grip the handle, and pull out the paper drawer 1 until it stops.

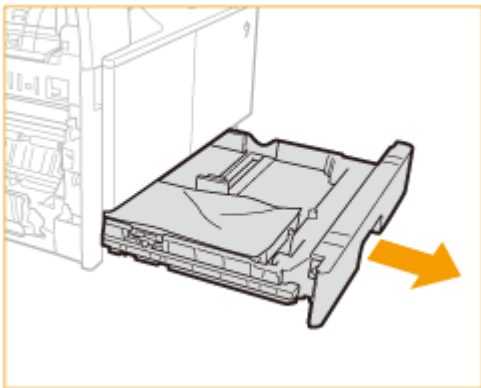

6 Remove the jammed paper.

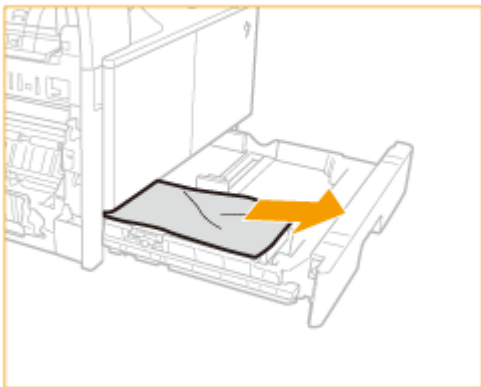

7 Gently push the paper drawer 1 back into the machine until it clicks.

8 Close the drawer 1 left cover.


9 Place your hand where the hand symbol is located on the left cover of the main unit, and then gently close the left cover until it clicks into place in the closed position.

Paper Jams around the Output Area


- 1** Remove the jammed paper from the output tray.



- 2** Press the button on the left cover of the main unit, and open the left cover.

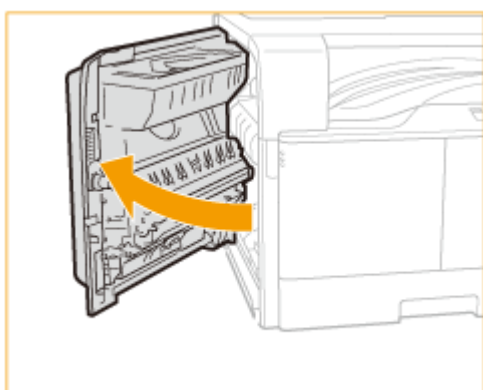


- 3** Remove the jammed paper.

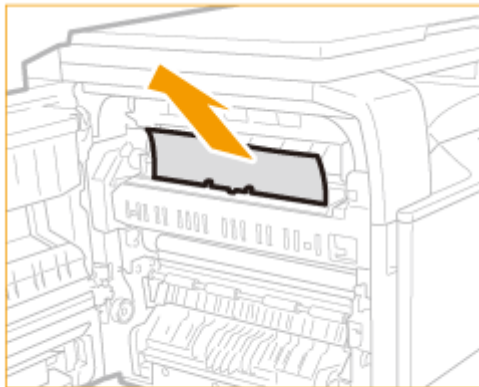


CAUTION

The fixing assembly and its surroundings inside the printer are hot during use. Make sure the fixing assembly is completely cool before removing the jammed paper. Touching the fixing assembly when it is still hot may result in burns.

4 Open the drawer 1 left cover.

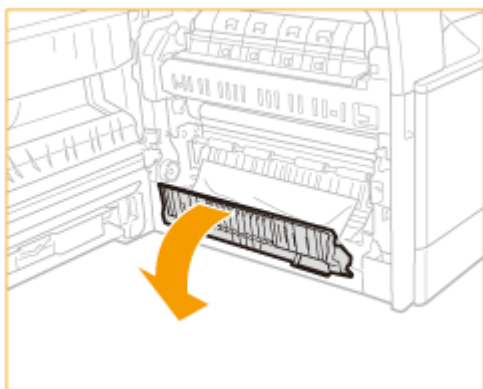

5 Remove the jammed paper.

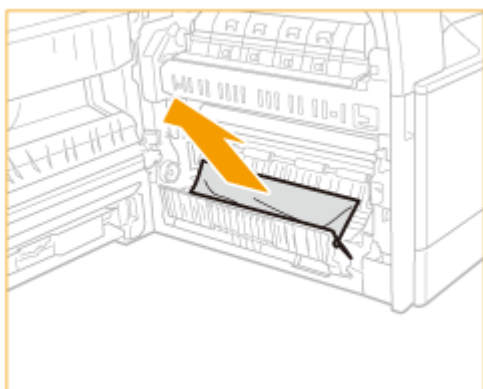

6 Close the drawer 1 left cover.


- 7** Place your hand where the hand symbol is located on the left cover of the main unit, and then gently close the left cover until it clicks into place in the closed position.

Paper Jams around the Fixing Assembly


- 1** Remove the jammed paper from the output tray.




- 2** Press the button on the left cover of the main unit, and open the left cover.

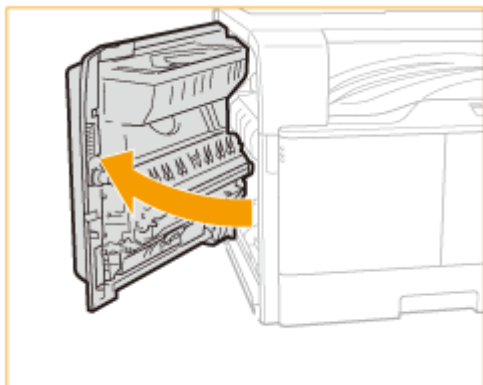

- 3** Open the drawer 1 left cover.

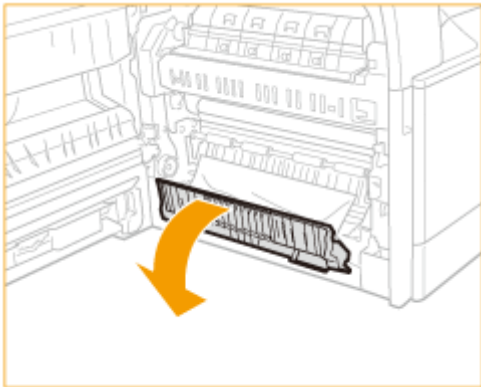

4 Remove the jammed paper.

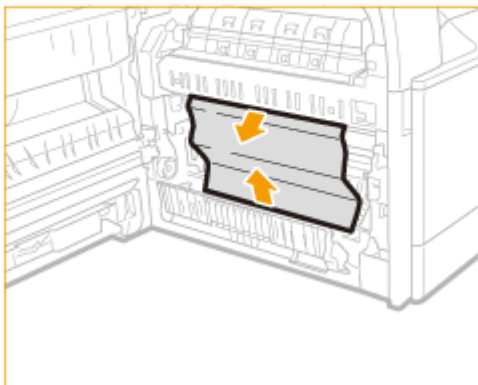

! CAUTION

The fixing assembly and its surroundings inside the printer are hot during use. Make sure the fixing assembly is completely cool before removing the jammed paper. Touching the fixing assembly when it is still hot may result in burns.

5 Close the drawer 1 left cover.


6 Place your hand where the hand symbol is located on the left cover of the main unit, and then gently close the left cover until it clicks into place in the closed position.

Paper Jams in the Multi-Purpose Tray


1 If paper is loaded in the multi-purpose tray, remove the paper.



2 Press the button on the left cover of the main unit, and open the left cover.

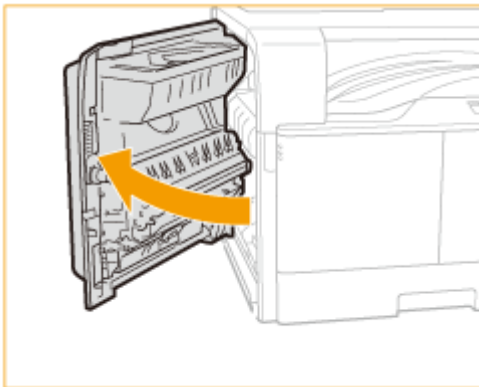

3 Remove any jammed paper.

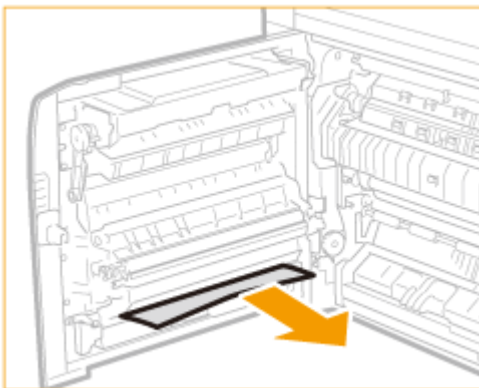

- 4** Place your hand where the hand symbol is located on the left cover of the main unit, and then gently close the left cover until it clicks into place in the closed position.

Countermeasures for Each Message

3EEJ-04S

If the memory is full or you encounter operation problems, a message appears on the display. Find out more information about messages in the following list.

Could not perform cleaning.

Paper jammed during cleaning.

- Remove the jammed paper, set paper correctly, and perform cleaning again.
 ▶ **Clearing Jams(P. 121)**

The amount of toner required for cleaning the fixing assembly is insufficient.

- Cleaning requires toner. Replace the toner cartridge, and perform the cleaning again.
 ▶ **Replacing the Toner Cartridges(P. 159)**

Insert the drum unit.

The drum unit is not inserted.

- Insert the drum unit.
 ▶ **How to Replace the Drum Unit(P. 166)**

No Paper: XXXX*

* <Drawer 1> or <Multi-Purpose Tray> is displayed for XXXX.

Paper is not loaded in the paper drawer or the multi-purpose tray.

- Load the paper.
 ▶ **Loading Paper(P. 20)**

Paper on which reports or lists can be printed is not loaded.

- Reports or lists can be printed on A4 or Letter size paper. Load A4 or Letter size paper and set its size.
 ▶ **Loading Paper(P. 20)**
 ▶ **Specifying Paper Size and Type(P. 34)**

Paper jammed.

Paper jams.

- Remove the jammed paper, and print again (Printing may resume automatically).
 ▶ **Clearing Jams(P. 121)**

Paper Size & Settings Mismatch

The paper size setting on the control panel does not match the loaded paper size.

- Match the paper size setting specified in <Paper Settings> and the size of the paper that is actually loaded.

To use the loaded paper

Change the setting of <Paper Settings> to match the loaded paper size.

▶ **Specifying Paper Size and Type(P. 34)**

NOTE:

If printing from a computer, check whether the paper size setting in the printer driver matches the loaded paper size.

To load paper without changing the settings

Load the paper with the size that is set to <Paper Settings>.

▶ **Loading Paper(P. 20)**

Prepare the toner cartridge.

The toner cartridge needs to be replaced soon.

- It is recommended to replace the toner cartridge when printing a large volume of documents.
- ▶ **Replacing the Toner Cartridges(P. 159)**

Replace the toner cartridge.

The toner cartridge has reached the end of its lifetime.

- Replace the toner cartridge with a new one.
- ▶ **Replacing the Toner Cartridges(P. 159)**

The connection with the PC has been lost. Check the connection.

The connection to the computer was lost during a scan.

- Check the connection between the machine and the computer.

The memory is full.

An original could not be scanned due to insufficient memory space.

- If a printing job is queued, wait until the job is completed.
 - If scanning, change the file format to reduce its file size.
- ▶ **Scanning from the Machine(P. 80)**

The memory is full. Scanning will be canceled. Do you want to print?

The document being printed contains a page with a very large amount of data.

- Select whether to print as far as the portion scanned into memory or to cancel the job.
- Copy the document in two or more parts.

Turn the main power OFF and ON. If the device does not recover, contact your dealer or service representative.

An error has occurred with the machine.

- Turn OFF the power switch, wait 10 seconds, and turn it back ON. If the problem persists, turn OFF the power switch, disconnect the power cord, and contact your local authorized Canon dealer or the Canon help line. Be sure to provide the displayed <Ennn-nnnn>.

Turn the main power OFF and ON. If the problem persists, change the drum unit.

The drum unit has reached the end of its lifetime.

- Replace the drum unit.
 **How to Replace the Drum Unit(P. 166)**

Countermeasures for Each Error Code

3EEJ-04U

If printing is not successful or another error occurs, that error appears on a message on the <Status Monitor> screen as a three-digit number (error code). Check the following to find out causes and solutions for each error code. For details of the <Status Monitor> screen, see  **<Status Monitor> Screen(P. 11)** .

#037

Memory is full.

- If a printing job is queued, wait until the job is completed.

#099

An operation that caused a job to be canceled has been performed.

- When you cancel a job, this error code is displayed, but this is not abnormal. Print documents again as necessary.

#852

The machine turns OFF for some reason.

- Check whether the power plug is inserted into an outlet firmly.

#853

A document could not be printed because its data size exceeded the machine's upper processing capability.

- The machine may not be able to print documents with many pages. Reduce the number of pages per printing, or print when no print job is queued or no document is being printed. If you are still unable to print, check the document data for any defects.

Printing was canceled from the computer.

- If you cancel an operation when the print data is being sent to the machine from a computer, this error code is displayed, but this is not abnormal. Print again as necessary.

You tried to print a file that is either corrupted or not supported.

- Check the file and try again.
 **Basic Printing Operations(P. 66)**

Common Problems

3EEJ-02L

If you encounter problems when using the machine, check the items in this section before contacting us. If the problems persist, contact your local authorized Canon dealer.

Check the Following

→ Is the machine turned ON? Is the power cord connected?

- If the machine is turned ON but does not respond, turn it OFF, check whether the power cord is connected correctly, and turn it back ON.

→ Is the USB cable connected correctly?

- Check whether the USB cable is connected correctly.
▶ **Parts and Their Functions(P. 4)**

→ Is sleep mode activated?

- If you leave the machine unattended for a specific period of time, it enters sleep mode for power conservation, not allowing you to operate it.
To cancel sleep mode, press .

→ Is any message displayed on the screen?

- If a problem occurs, a message is displayed.
▶ **When a Problem Cannot Be Solved(P. 149)**

→ Has the Power Switch Been Just Turned ON?

- Wait a few moments until the machine starts and warms up.

→ Are the Settings Properly Configured?

- If the machine does not start operating even after  has been pressed, the settings may not have been configured properly. Check the configured settings.

→ Is the [Error] Indicator on or Blinking?

- Make sure that paper is loaded properly in the paper drawer or multi-purpose tray.
▶ **Loading Paper(P. 20)**
- Check if paper is jammed.
▶ **Clearing Jams(P. 121)**

- Turn OFF the power switch, wait 10 seconds, and turn it ON again. If the problem is solved, the [Error] indicator will turn off and the display will return to standby mode. If the [Error] indicator keeps blinking, unplug the power cord and contact your local authorized Canon dealer.

▶ **When a Problem Cannot Be Solved(P. 149)**

→ Paper Is Not Fed, or Multiple Sheets of Paper Are Fed at a Time.

- Make sure that the paper is properly loaded.
▶ **Loading Paper(P. 20)**
- Make sure that the number of paper you have loaded or paper to be used meets the paper requirements.
▶ **Loading Paper(P. 20)**
- Make sure to load the same size and type of paper into the paper drawer or multi-purpose tray.

→ Paper Jams Occur Repeatedly.

- Make sure that the paper is properly loaded.
▶ **Loading Paper(P. 20)**
- Make sure that the number of paper you have loaded or paper to be used meets the paper requirements.
▶ **Loading Paper(P. 20)**

If a problem persists even after checking

Click the link that corresponds to the problem.

- ▶ **Installation/Settings Problems(P. 136)**
- ▶ **Copy/Printing Problems(P. 137)**
- ▶ **Miscellaneous Problems(P. 138)**

Installation/Settings Problems

3EEJ-02R

See  **Common Problems(P. 134)** also.

Problem with the USB Connection

Cannot communicate.

- Change the USB cable. If you are using a long USB cable, replace it with a short one.
- If you are using a USB hub, connect the machine directly to your computer using a USB cable.

Copy/Printing Problems

3EEJ-02S

See **Common Problems(P. 134)** also.

Printing/copy results are not satisfactory. Paper creases or curls.

▶When You Cannot Print Properly(P. 139)

You cannot print.

- Can you print a Windows test page? If you can print a Windows test page, there is no problem with the machine or the printer driver. Check the print settings of your application.

▶Printing a Test Page in Windows(P. 208)

If you cannot print a test page, check the following according to your environment.

■ USB connection

- Have you selected the correct port? If there is no port to use or you are not sure, reinstall the printer driver. When you reinstall the printer driver, the correct port is created automatically. For more information, see the manuals for the relevant drivers on the online manual website.

▶Checking the Printer Port(P. 209)

- Is bidirectional communication enabled? Enable bidirectional communication, and restart the computer.

▶Checking Bidirectional Communication(P. 210)

- Disable security software and other resident software.
- Connect to another USB port on the computer.
- Can you print from a USB connection to another computer? If you also cannot print from other computers, contact your local authorized Canon dealer or the Canon help line.

Printing seems to be slow. *

- Print or delete data in memory.

* When the free space in memory is running low, the processing speed of the machine becomes slow, just as a computer does. There is nothing abnormal.

It takes a long time before printing starts.

- Did you print to narrow width paper? After you print to narrow width paper, the machine may cool itself to maintain the print quality. As a result, it may take some time before the next job is printed. Wait until the machine is ready to print. Printing will resume when the temperature inside the machine has fallen.

A blank sheet is output (nothing is printed).

- Did you pull the sealing tape out when loading the toner cartridge? If you did not pull it out, remove the toner cartridge, pull the sealing tape out, and reload the toner cartridge.

▶How to Replace the Toner Cartridges(P. 163)

Miscellaneous Problems

3EEJ-02U

See  **Common Problems(P. 134)** also.

Steam is Emitted from the Machine's Output Area.

- Use only dry paper in the machine. Moisture evaporates from damp paper due to the heat generated inside the fixing assembly (it is most likely to occur at low room temperatures). This is not a malfunction, but you can prevent this by using a stack of new unopened paper. However, if you smell something burning, immediately turn OFF the machine, unplug the power plug from the AC power outlet, and contact your local authorized Canon dealer. Continued use may lead to a fire or electrical shock.

Water Droplets From in the Output Area.

- Use only dry paper in the machine. Moisture evaporates from damp paper due to the heat generated inside the fixing assembly (it is most likely to occur at low room temperatures). This is not a malfunction, but you can prevent this by using a stack of new unopened paper. However, if you smell something burning, immediately turn OFF the machine, unplug the power plug from the AC power outlet, and contact your local authorized Canon dealer. Continued use may lead to a fire or electrical shock.

The Settings That You Specified Are Not Enabled or Saved.

- If you turn OFF the machine immediately after changing settings via the control panel, the settings may not be stored in the machine. After changing the settings, wait for approximately five seconds before turning OFF the machine.

When You Cannot Print Properly

3EEJ-02W


If printing results are not satisfactory, or paper creases or curls, try the following solutions. If the problems persist, contact your local authorized Canon dealer.



▶ Streaks Appear on Printouts(P. 141)



▶ White Streaks Appear(P. 141)

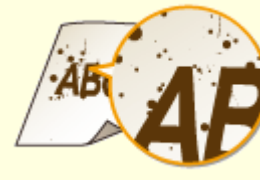

▶ Toner Smudges and Splatters Appear(P. 141)



▶ Printouts Are Faded(P. 142)



▶ Printed Pages Have White Specks(P. 142)



▶ Print Density Is Uneven(P. 143)



▶ Printouts Are Grayish(P. 143)



▶ The Toner Adheres to the Hand(P. 144)



▶ Paper Creases(P. 145)



▶ **Paper Curls(P. 145)**



▶ **Printouts Are Skewed(P. 147)**



▶ **Paper Is Not Fed/Two or More
Sheets Are Fed Together(P. 147)**

Printing Results Are Not Satisfactory

3EEJ-02X

Dirt inside the machine may affect printing results. Perform care and cleaning to the machine first.

▶ **Cleaning the Machine(P. 152)**

Streaks Appear on Printouts



→ Are you using appropriate paper?

- Check usable paper, and replace with appropriate paper.

▶ **Available Paper(P. 194)**

▶ **Loading Paper(P. 20)**

White Streaks Appear



→ Is toner running low?

- Check how much toner is left, and replace the toner cartridges as necessary.

▶ **Replacing the Toner Cartridges(P. 159)**

Toner Smudges and Splatters Appear



→ Are you using appropriate paper?

- Check usable paper, and replace with appropriate paper.
- ▶ **Available Paper(P. 194)**
- ▶ **Loading Paper(P. 20)**

→ Is toner running low?

- Check how much toner is left, and replace the toner cartridges as necessary.
- ▶ **Replacing the Toner Cartridges(P. 159)**

Printouts Are Faded



→ Is toner running low?

- Check how much toner is left, and replace the toner cartridges as necessary.
- ▶ **Replacing the Toner Cartridges(P. 159)**

→ Are you using appropriate paper?

- Check usable paper, and replace with appropriate paper. Also, specify the paper size and type settings properly.
- ▶ **Available Paper(P. 194)**
- ▶ **Loading Paper(P. 20)**
- ▶ **Specifying Paper Size and Type(P. 34)**

Printed Pages Have White Specks



→ Are you using appropriate paper?

- Check usable paper, and replace with appropriate paper.

▶ **Available Paper(P. 194)**

▶ **Loading Paper(P. 20)**

→ **Is the drum in the toner cartridge deteriorated?**

- Replace the toner cartridge with a new one.

▶ **Replacing the Toner Cartridges(P. 159)**

Print Density Is Uneven



→ **Is toner running low?**

- Check how much toner is left, and replace the toner cartridges as necessary.

▶ **Replacing the Toner Cartridges(P. 159)**

Printouts Are Grayish



→ **Is <Density> in <Copy Settings> set too dark?**

- Adjust the setting so that density is lighter.

▶ **Setting Menu List(P. 95)**

→ **Is the printer installed where it is subject to direct sunlight or strong light?**

- Install the printer in an appropriate location.

→ **Was the toner cartridge been left in direct sunlight for a long period of time?**

- Store the toner cartridge in an appropriate location for two to three hours, then try printing again. This may solve the problem. If the problem persists, replace the toner cartridge.

▶ **Replacing the Toner Cartridges(P. 159)**

The Toner Adheres to the Hand



→ The paper type setting specified is not appropriate.

- Select the appropriate paper type setting. ▶ **Loading Paper(P. 20)**

→ The paper type loaded is not appropriate.

- Make sure that the number and type of the paper loaded in the paper drawer meets the paper requirements. ▶ **Available Paper(P. 194)**

Paper Creases or Curls

3EEJ-02Y

Paper Creases



→ Is paper loaded correctly?

- If paper is not loaded below the load limit mark or is loaded obliquely, it may crease.
- ▶ **Loading Paper(P. 20)**

→ Are you using paper that has absorbed moisture?

- Replace with appropriate paper.
- ▶ **Loading Paper(P. 20)**

→ Are you using appropriate paper?

- Check usable paper, and replace with appropriate paper.
- ▶ **Available Paper(P. 194)**

Paper Curls



→ Are you using appropriate paper?

- Check usable paper, and replace with appropriate paper. Also, specify the paper size and type settings properly.
- ▶ **Available Paper(P. 194)**
- ▶ **Loading Paper(P. 20)**
- ▶ **Specifying Paper Size and Type(P. 34)**
- Change the setting of <Paper Type> to a setting for thinner paper. For example, if the current setting is <Plain 2 (76-90 g/m²)>, change it to <Plain 1 (64-75 g/m²)>.

- ▶ **Specifying Paper Size and Type(P. 34)**
- ▶ **Available Paper(P. 194)**

Paper Is Fed Incorrectly

3EEJ-030

Printouts Are Skewed



→ Do the paper guides align with the edges of the paper?

- If the paper guides are too loose or too tight, the printouts are skewed.
- ▶ **Loading Paper(P. 20)**

→ Is the paper source the multi-purpose tray?

- Load the paper into the paper drawer.
- ▶ **Loading Paper in the Paper Drawer(P. 22)**

→ Are you printing on curled envelopes?

- Uncurl the envelopes, and print again.
- ▶ **Loading Envelopes in the Multi-Purpose Tray(P. 28)**

Paper Is Not Fed/Two or More Sheets Are Fed Together



→ Is paper loaded correctly?

- Fan the paper stack thoroughly so that paper is not stuck together.
- Check whether paper is loaded correctly.
- ▶ **Loading Paper(P. 20)**
- Check whether the number of sheets of paper loaded is appropriate and whether the appropriate paper is used.
- ▶ **Available Paper(P. 194)**

▶ **Loading Paper(P. 20)**

- Check whether mixed sizes and types of paper are loaded together.

When a Problem Cannot Be Solved

3EEJ-031

If you have read this chapter and a problem is yet to be resolved, contact your authorized Canon dealer.

IMPORTANT

Do not disassemble or repair the machine yourself

- If you disassemble or repair the machine yourself, it may not be covered by the warranty.

■ Information To Prepare Before When Contacting Canon

When contacting us, have the following information ready:

- Product name (imageRUNNER 2206)
- Dealer where you purchased the machine
- Problem details (performed operations and the results, phenomena, etc.)
- The error code displayed on the touch panel display


Maintenance

Maintenance	151
Cleaning the Machine	152
Exterior	153
Platen Glass	154
Transfer Roller	155
Drum	156
Fixing Assembly	157
Replacing the Toner Cartridges	159
Configuring Purchase Information for Consumables	161
How to Replace the Toner Cartridges	163
How to Replace the Drum Unit	166
Printing Reports and Lists	170
User Data List/System Manager Data List	171
Copy/Print Charge Log Report	172
Viewing the Counter Value	173
Initializing Settings	175
Initializing Menu	176
Initializing System Management Settings	177
Initializing All Data/Settings	178
Replacement Parts	179

Maintenance


This chapter describes upkeep of the machine, including how to clean the machine and initialize settings.

■ Basic Cleaning ▶ **Cleaning the Machine(P. 152)**

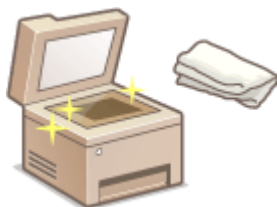

- The machine becomes dirty ▶ **Exterior(P. 153)**
- Smudge marks appear on originals or printouts ▶ **Platen Glass(P. 154)**
- Streaks appear on printouts ▶ **Fixing Assembly(P. 157)**

■ Replacing Toner Cartridges

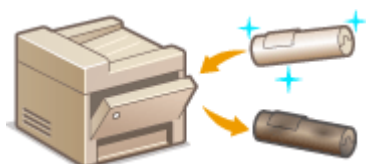

- If you want to check the remaining toner level ▶ **Replacing the Toner Cartridges(P. 159)**
- How to replace toner cartridges ▶ **How to Replace the Toner Cartridges(P. 163)**

■ Printing Reports and Lists



- If you want to check the machine settings ▶ **Printing Reports and Lists(P. 170)**

■ Checking the Total Pages Printed by the Machine

If you want to check the total page number of printouts ▶ **Viewing the Counter Value(P. 173)**

■ Initializing Settings


If you want to restore the settings ▶ **Initializing Settings(P. 175)**

Cleaning the Machine

3EEJ-033

Regularly clean the machine to prevent deterioration in printing quality and to ensure that you use it safely and easily.

Where to Clean

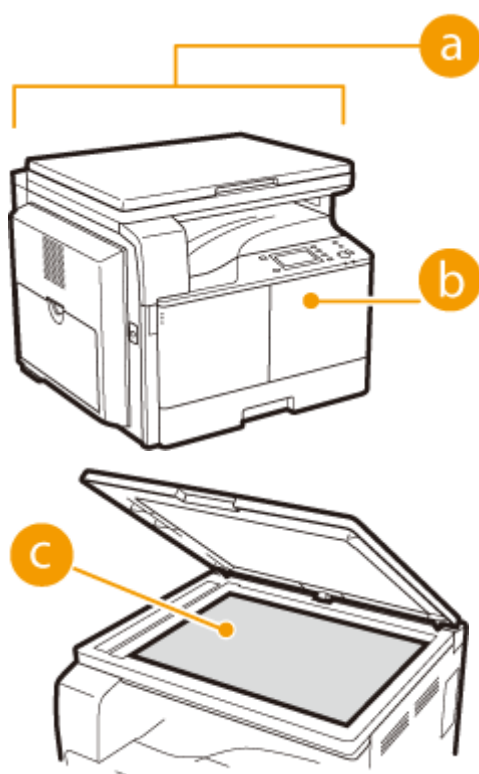

a Exterior of the machine and ventilation slots

▶ **Exterior(P. 153)**

b Interior of the machine and fixing assembly

▶ **Fixing Assembly(P. 157)**

c Platen glass and the underside of the platen cover ▶ **Platen Glass(P. 154)**

Exterior

3EEJ-034


Regularly wipe the exterior of the machine, especially around the ventilation slots, to keep the machine in good condition.

1 Turn OFF the machine, and unplug the power cord from the AC power outlet.

- When you turn OFF the machine, data that is waiting to be printed is deleted.

2 Clean the exterior of the machine and the ventilation slots.

- Use a soft, well-wrung-out cloth dampened with water or a mild detergent diluted with water.
- To locate the ventilation slots, see  **External View(P. 5)** .

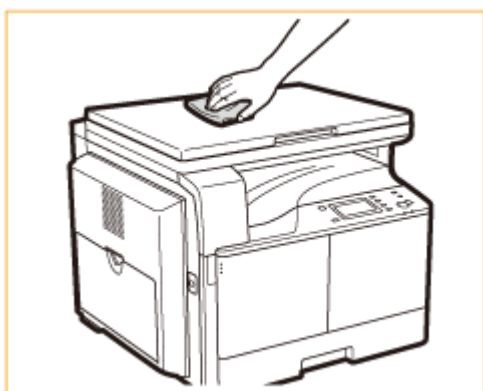

3 Wait for the exterior of machine to dry completely.

4 Reconnect the power cord and turn ON the machine.


Platen Glass

Regularly wipe off the dust from the platen glass and the underside of the platen cover to prevent smudges to be printed on documents or printouts.

1 Turn OFF the machine, and unplug the power cord from the AC power outlet.

- When you turn OFF the machine, data that is waiting to be printed is deleted.

2 Open the platen cover.

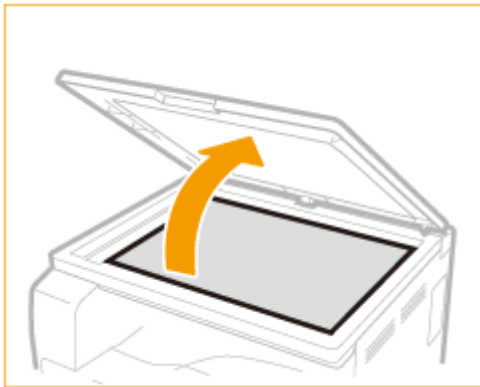

3 Clean the platen glass and the underside of the platen cover.

- Clean the areas with a cloth dampened with water. Then, wipe the area with a soft, dry cloth.

4 Wait for the cleaned area to dry completely.

5 Gently close the platen cover.

6 Reconnect the power cord and turn ON the machine.

Transfer Roller

3EEJ-036

When the transfer roller inside the machine becomes dirty, print quality may deteriorate or dots may appear on printouts. If this happens, follow the procedure below to clean the transfer roller. Note that you cannot clean the transfer roller when the machine has documents waiting to be printed.

1 Press  and tap <Menu>.

2 Tap <Adjustment/Maintenance>.

3 Tap <Clean Transfer Roller>.

4 Tap <Start>.

- Cleaning starts. When the <Finished.> message is displayed approximately 30 seconds later, press  to return to the <Home> screen.

Drum

3EEJ-037

When the drum unit inside the machine becomes dirty, print quality may deteriorate. If this happens, follow the procedure below to clean the drum unit. Note that you cannot clean the drum unit when the machine has documents waiting to be printed.

1 Press  and tap <Menu>.

2 Tap <Adjustment/Maintenance>.

3 Tap <Clean Drum Unit>.

4 Tap <Start>.

- Cleaning starts. When the <Finished.> message is displayed approximately 30 seconds later, press  to return to the <Home> screen.

Fixing Assembly

Dirt may adhere to the fixing assembly inside the machine and cause black streaks to appear on printouts. To clean the fixing assembly, perform the following procedure. Note that you cannot clean the fixing assembly when the machine has documents waiting to be printed. To clean the fixing assembly, you need A4 or Letter size paper. Set the paper in the paper drawer or multi-purpose tray before performing the following procedure.


NOTE

- Cleaning requires toner. Make sure that there is sufficient toner remaining beforehand.
- It takes approximately 90 seconds to clean the fixing assembly.

▶ **Checking Toner Level(P. 160)**

▶ **Loading Paper in the Multi-Purpose Tray(P. 25)**


1 Press  and tap <Menu>.

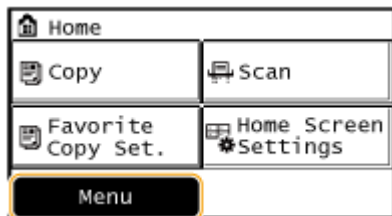

2 Tap <Adjustment/Maintenance>.

3 Tap <Clean Fixing Assembly>.

4 Load paper (A4 or LTR) in the multi-purpose tray, and tap <OK> ▶ <Start>.

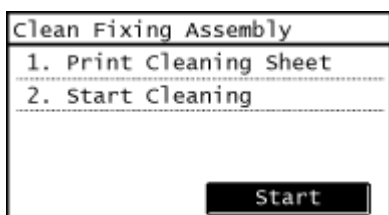

- A sheet for cleaning the fixing assembly is printed.

Follow the instructions on the screen to place the sheet for cleaning with the side to be printed face up in the multi-purpose tray, and then press <OK>.



- After cleaning is completed and the message <Finished.> appears, press  to return to the <Home> screen.

Replacing the Toner Cartridges

The machine will display a message when a toner cartridge is nearly empty. Note that the print quality becomes poor if you continue printing without taking any action. You can check the remaining toner level on the display.


- ▶ **When a Message Appear(P. 159)**
- ▶ **If Printouts Are Poor in Quality(P. 159)**
- ▶ **Checking Toner Level(P. 160)**

■ When a Message Appear

The message that is displayed depends on the amount of remaining toner. Depending on which message is displayed, you will need to make sure that you have a replacement toner cartridge ready or replace the toner cartridge. ▶ **How to Replace the Toner Cartridges(P. 163)** ▶ **Replacement Parts(P. 179)**

<Prepare the toner cartridge.>

This message notifies you that a toner cartridge needs to be replaced soon. Shake the toner cartridge to evenly distribute the toner inside the cartridge. Replace the toner cartridge if you see this message before you start to print a large job.

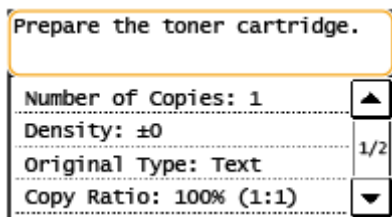

IMPORTANT

- You can continue printing when this message is displayed, but the print quality may deteriorate.

■ If Printouts Are Poor in Quality

If your printouts begin to show any of the following features, your toner cartridge is nearly empty. Replace the nearly empty toner cartridge even if no message is displayed.

▶ How to Replace the Toner Cartridges(P. 163)

White streaks appear



Partially faded



Uneven density



Toner smudges and splatters appear





Blank space of originals becomes grayish in printouts



■ Checking Toner Level

You can check the level of remaining toner according to the following, whenever you want to. It is recommended that you check the level before you start to print a large job.

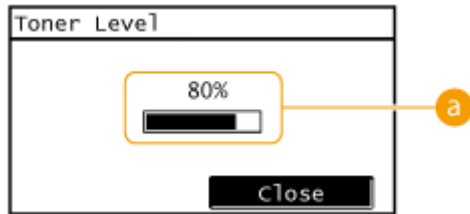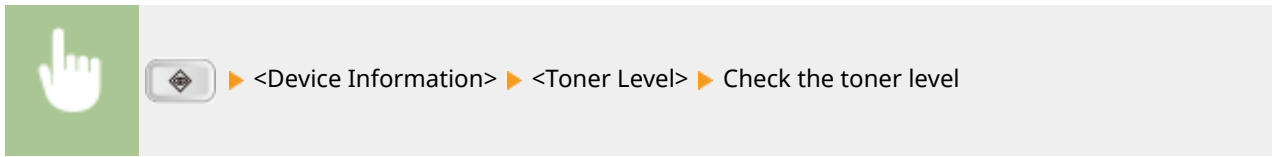

a Toner Level

Displays the amount of remaining toner.

NOTE

- The toner level value that is displayed is an approximation, and may differ from the actual value.

LINKS

▶ Replacement Parts(P. 179)

Configuring Purchase Information for Consumables

3EEJ-03A

You can scan and register the documentation of your local authorized Canon dealer (business card, information, etc.). You can print their contact information when you run out of consumables.

- ▶ **Registering/Editing Purchase Information(P. 161)**
- ▶ **Printing Purchase Information(P. 161)**
- ▶ **Deleting Purchase Information(P. 162)**

Registering/Editing Purchase Information

You can scan and register/edit the documentation of your local authorized Canon dealer (business card, information, etc.).

1 Press  and tap <Menu> ▶ <Output Rprt.> ▶ <Purchase Information for Consumables>.

2 Tap <Register/Edit Purchase Information> ▶ <Yes>.

3 Place the document. ( **Placing Documents(P. 19)**) ▶ press  ▶  .

- If the documentation is already registered, a confirmation screen for overwriting the existing data is displayed.

Printing Purchase Information

Specify to print purchase information for consumables. The following items are printed:

- a** Product Name
- b** Genuine Canon Toner Name
- c** Documentation data for your local authorized Canon dealer



1 Press  and tap <Menu> ► <Output Rprt.> ► <Purchase Information for Consumables>.

2 Tap <Print> ► <OK> ► press .

Deleting Purchase Information

Delete purchase information that you no longer need.

1 Press  and tap <Menu> ► <Output Rprt.> ► <Purchase Information for Consumables>.

2 Tap <Delete Purchase Information> ► <Yes>.

3 Press .

How to Replace the Toner Cartridges


3EEJ-03C

When replacing the toner cartridge, the procedure is also displayed on the screen. Check the information displayed on the screen in addition to the following procedure.


1 Open the front cover.




2 While pressing the unlock tab on the grip (a), turn the toner cartridge in the direction of the arrow (clockwise).

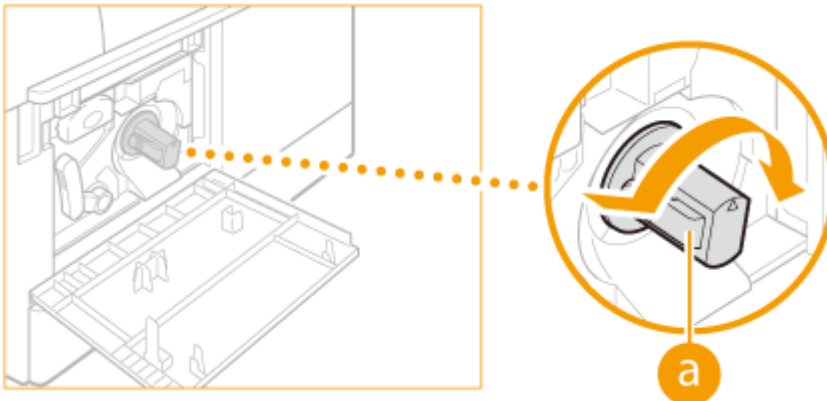


3 Pressing the unlock tab, pull out the toner cartridge.

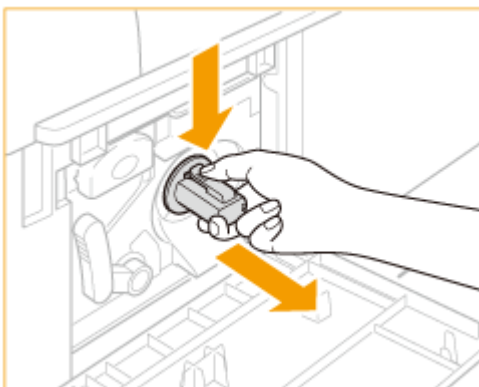

4 Remove a new toner cartridge from the box.

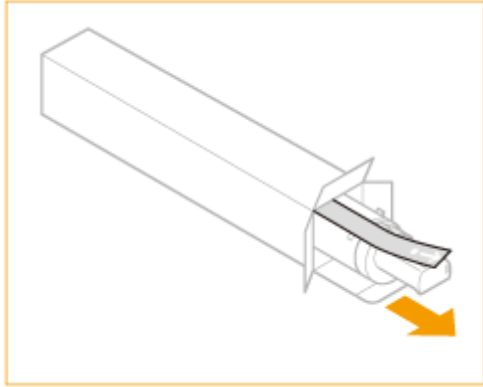


- 5** Shake the new toner cartridge 5 or 6 times as shown below to evenly distribute the toner inside the cartridge.

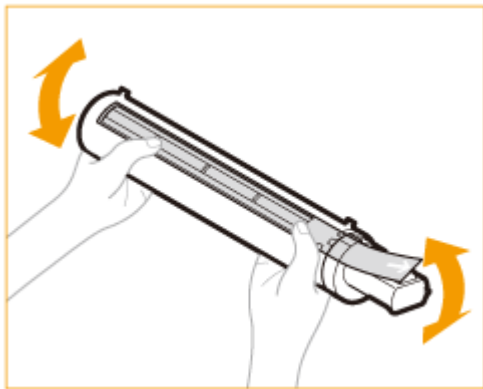


- 6** Install the toner cartridge.

- Make sure that the side of the cartridge with the label is facing up, and push the toner cartridge into the machine as far as it will go.
- Support the new toner cartridge with one hand from underneath, while pushing it into the machine with the other hand.

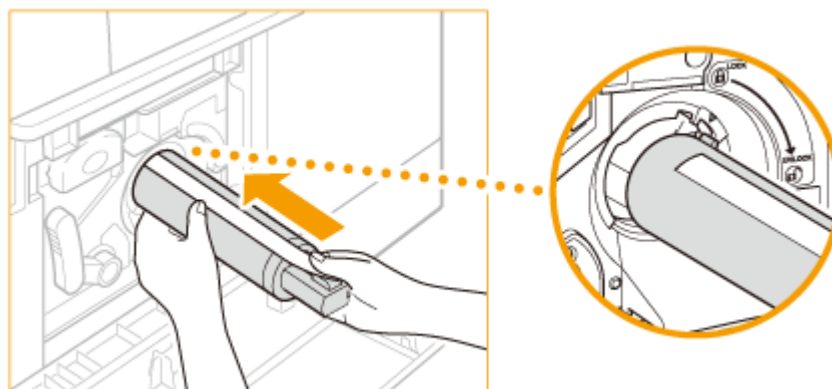


- 7** Hold the toner cartridge in place with one hand, and then remove the protective seal by pulling it straight out with the other hand.

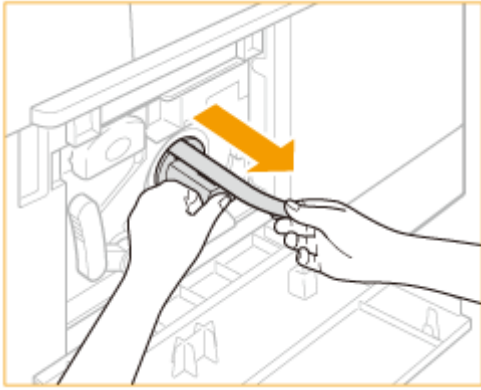

IMPORTANT

- Pull out the seal slowly, otherwise the toner may scatter and soil your clothes or skin.
- Make sure that you pull out the seal completely, otherwise print errors may occur.
- Make sure that you pull the seal straight out. Pulling the seal upwards or downwards may break the seal. If the seal breaks inside the toner cartridge and cannot be removed completely, the toner cartridge cannot be used.
- Throw away the seal after removing it from the toner cartridge.

8 Turn the toner cartridge in the direction of the arrow (counterclockwise).

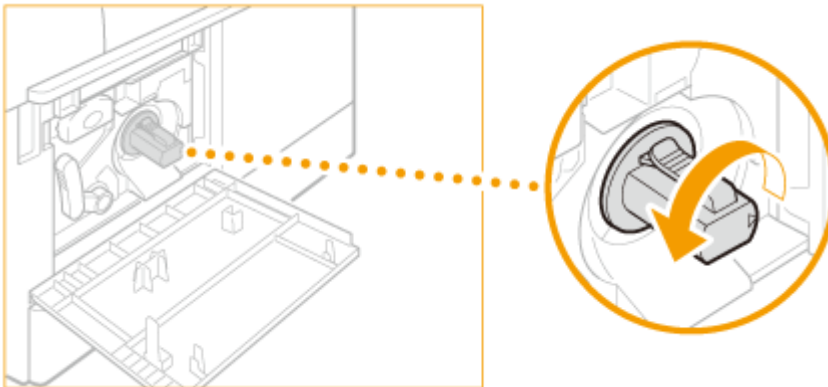

IMPORTANT

Turn the toner cartridge fully until it locks into place.

9 Close the front cover.

NOTE:

If you cannot close the front cover


Make sure that the toner cartridge is inserted properly. Forcing it closed may cause damage.

How to Replace the Drum Unit

3EEJ-03E

When the drum unit needs to be replaced, a message appears on the display. Follow the procedure below to replace the drum unit.


- 1 Press the button on the left cover, and open the left cover.**

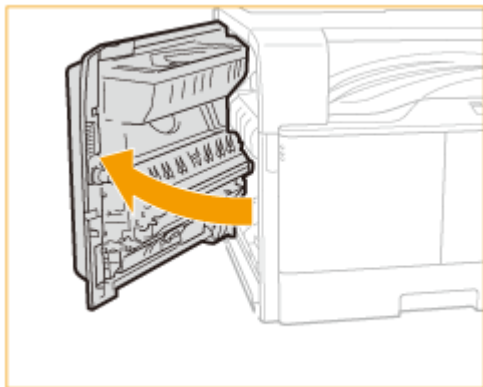


IMPORTANT

To avoid damage to the drum unit, always open the left cover wider than 50 mm.


- 2 Open the front cover.**

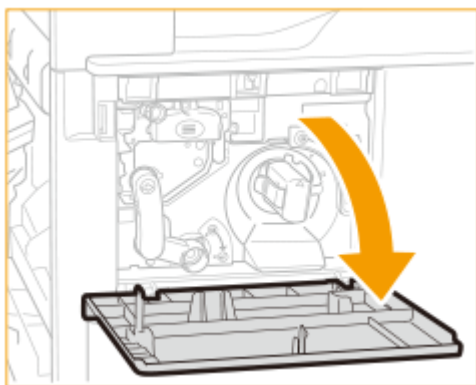


- 3 Turn the unlock lever.**

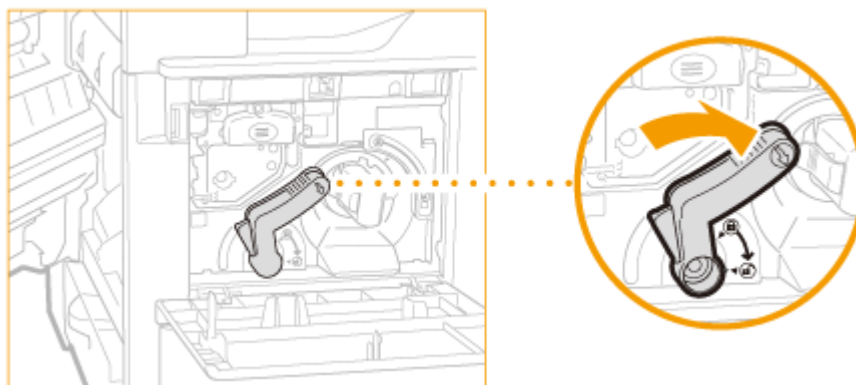

- 4** Turn a screw and remove it.

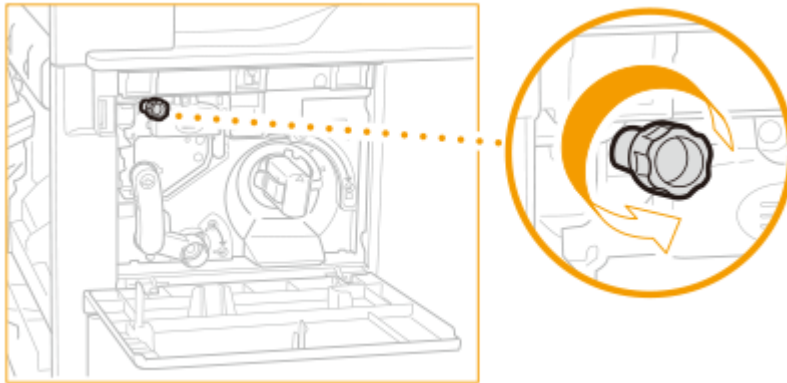

- 5** While gripping the handle of the drum unit, pull the unit out slightly upward.

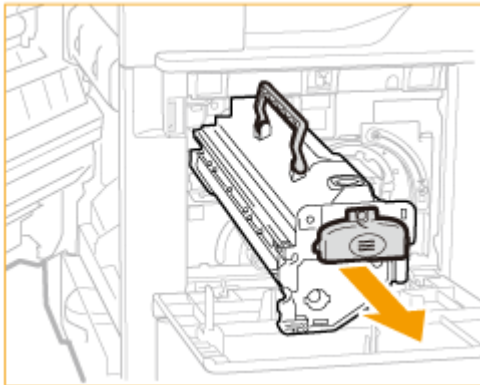


- 6** Remove a new drum unit from the package.




IMPORTANT

Do not remove the protective cover before attaching the drum unit to the machine.

- 7** Hold the protective cover of the drum unit, and align it with the slots inside the main unit.

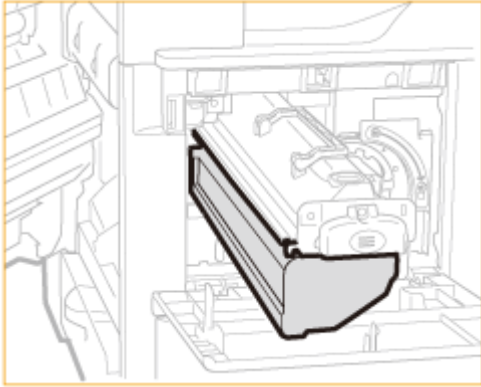


- 8** While holding the protective cover, insert the drum unit.

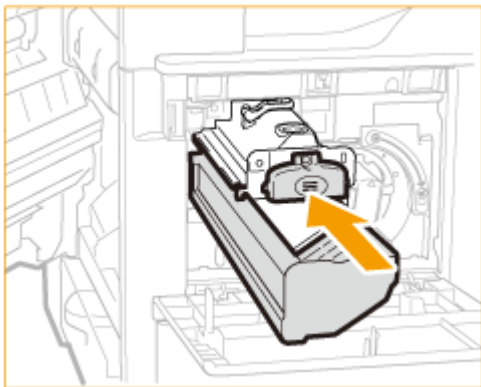


IMPORTANT

Be careful not to touch the blue-green part of the drum.


- 9** Remove the protective cover of the drum unit.

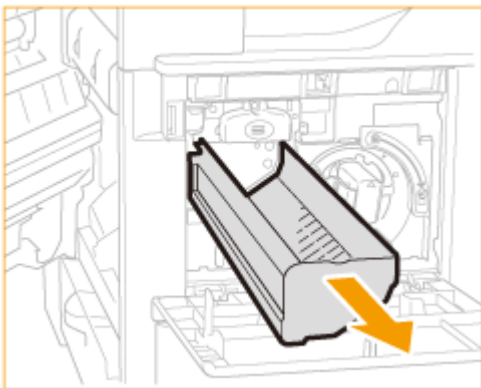

- 10** Turn a screw and attach it.

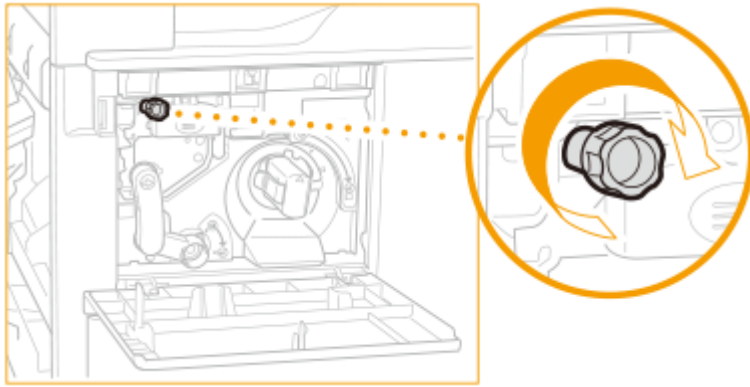


11 Turn the unlock lever to its vertical position.

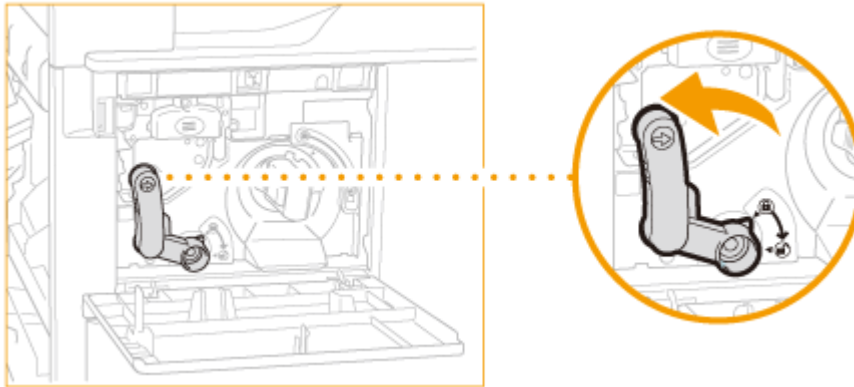

12 Check the counter ► enter the date and counter value in the drum counter label.

日付	date	カウンター	counter	備考	notes
date	Datum	compteur	Zähler	note	Notiz

13 Affix the counter label (a) on the drum unit.

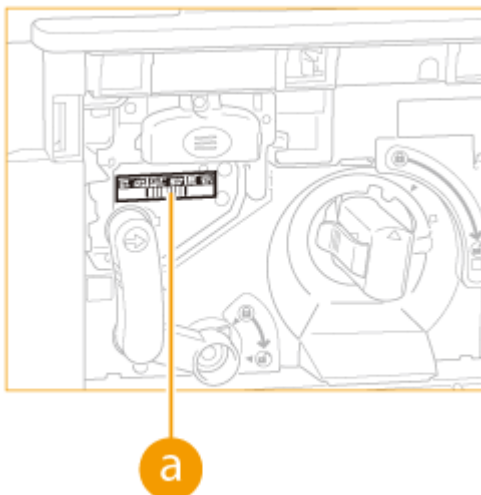

14 Close the front cover and left cover.

Printing Reports and Lists

3EEJ-03F

You can check the machine settings by printing reports and lists.

User Data List/System Manager Data List

You can check the list of the settings ( **Setting Menu List(P. 95)**) as well as the content that has been registered in the machine.  **User Data List/System Manager Data List(P. 171)**

Copy/Print Charge Log Report

You can check the counter information.  **Copy/Print Charge Log Report(P. 172)**

User Data List/System Manager Data List

3EEJ-03H

You can check the list of setting items ( **Setting Menu List(P. 95)**) and current settings registered in the machine. This list includes the paper size and type registered in the machine.



<Menu> ▶ <Output Rprt.> ▶ <Print List> ▶ <User Data List> or <System Manager Data List>
 ▶ Check that the size and type of paper displayed on the screen is loaded in the machine
 ▶ <OK> ▶ <Yes>

Example:

31/08 2016 10:21 AM

P.0001

*** User Data List ***

Rom Controller Version

Boot ROM 02.03

Main Controller 02.16

Language 02.16

DCON 02.03

OPT-DUP 00.02

Memory Capacity 512 MB

Option

References

Settings

31/08 2016 10:22 AM

P.0001

*** System Manager Data List ***

Rom Controller Version

Boot ROM 02.03

Main Controller 02.16

Language 02.16

DCON 02.03

OPT-DUP 00.02

Memory Capacity 512 MB

Option

Work Settings

LAN

Logs

NOTE

The User Data List does not include the setting information for <System Management Settings>. To check all setting items, print the System Manager Data List.

LINKS

 **Loading Paper(P. 20)**

Copy/Print Charge Log Report

3EEJ-03J

You can check the counter numbers which are used for the total counter (charge counter).



<Menu> ▶ <Output Rprt.> ▶ <Print List> ▶ <Copy/Print Charge Log Report> ▶ Check that the size and type of paper displayed on the screen is loaded in the machine ▶ <OK> ▶ <Yes>

Example:

31/08 2015 10:24 AM

P.0001


*** Copy/Print Charge Log Report ***	

Counter Check Date/Time: 31/08 2015 10:24	
Model: imageRUNNER	
Serial Number: WDG00035	
Total Counter Type	Count
112: Total (Black & White/Large)	60
113: Total (Black & White/Small)	105
(Total 1)	
(Total 1)	

Viewing the Counter Value

3EEJ-03K

You can check total for the number of pages used for printouts. This total includes reports and lists, in addition to copies and printouts of data from computers.

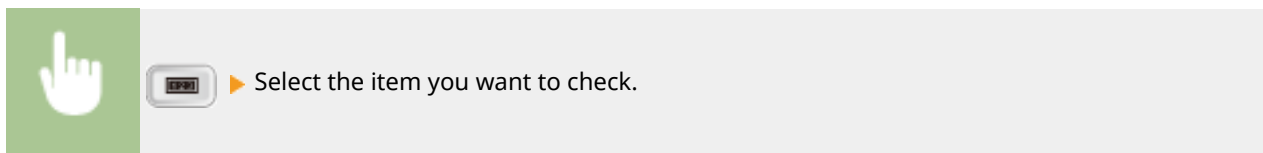

Check Counter	
Check Device Configuration	
112:	Total (Black & White/L...
113:	Total (Black & White/S...
501:	Scan (Total 1)
301:	Print (Total 1)

NOTE

- Each item of the counter is counted under the following conditions.
- Depending on the settings performed by the local authorized Canon dealer, the following counter may not be displayed or counter not listed below may be displayed.

Number	Counter Name	Counted Items	Counted Number per One Printed/Scanned Sheet *1		
			Size		Number of Printed/Scanned Sides
			Large *2	Small *3	One-Sided
101	Total 1	All Print Jobs	1	1	1
102	Total 2	All Print Jobs	2	1	1
103	Total (Large)	All Print Jobs	1	0	1
112	Total (Black & White/Large)	All Print Jobs	1	0	1
113	Total (Black & White/Small)	All Print Jobs	0	1	1
201	Copy (Total 1)	Copy Jobs	1	1	1
202	Copy (Total 2)	Copy Jobs	2	1	1
203	Copy (Large)	Copy Jobs	1	0	1
301	Print (Total 1)	All Print Jobs (Except Copy Jobs)	1	1	1
501	Scan (Total 1)	All Scan Jobs	1	1	1

*1 The counted number per one printed/scanned sheet for each item on the counter is as follows:

"number in the Size (Large or Small) column" × "number in the Number of Printed/Scanned Sides (One-Sided or Two-Sided) column"

Example: For large, single-sided print, the number added to <102: Total 2> is $2 \times 1 = 2$.

*2 Large: Standard size larger than A3/11" x 17".

*3 Small: Standard size smaller than B4/LGL.

Initializing Settings

3EEJ-03L

You can restore the following settings:

- ▶ **Initializing Menu(P. 176)**
- ▶ **Initializing System Management Settings(P. 177)**
- ▶ **Initializing All Data/Settings(P. 178)**

Initializing Menu


You can restore the settings of the machine (▶ **Setting Menu List(P. 95)**).

NOTE

If a screen for entering a PIN is displayed, enter the PIN and tap <Apply>. ▶ **Setting the System Manager PIN(P. 91)**



<Menu> ▶ <System Management Settings> ▶ <Initialize Menu> ▶ Select the item you want to initialize ▶ <Yes>

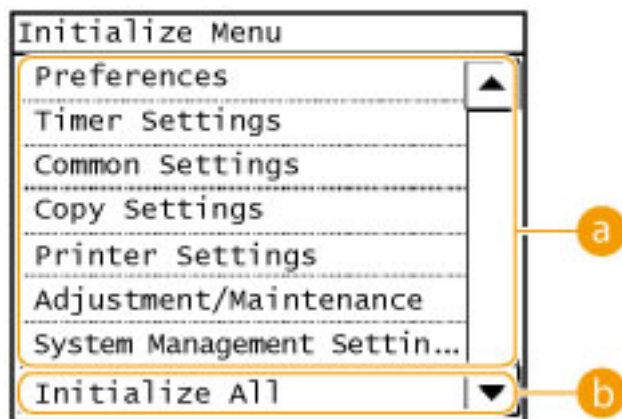

a Items for initializing

Select the setting you want to initialize.

b <Initialize All>

Initializes all the settings.

Initializing System Management Settings

3EEJ-03S


You can restore the settings of the machine (▶ **Setting Menu List(P. 95)**). Some settings require restarting the machine to be initialized.

NOTE

If a screen for entering a PIN is displayed, enter the PIN and tap <Apply>. ▶ **Setting the System Manager PIN(P. 91)**



<Menu> ▶ <System Management Settings> ▶ <Initialize Menu> ▶ <System Management Settings> ▶ Select the item that you want to initialize ▶ <Yes> ▶ Restart the machine if necessary.

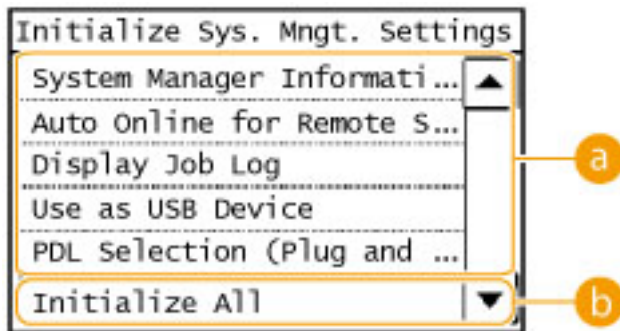

a Items for initializing

Select the setting you want to initialize.

b <Initialize All>

Initializes all the settings.

Initializing All Data/Settings

3EEJ-03U

To make changes to registered data and settings all at once such as when changing the installation location of the machine, you can delete registered data and initialize all settings ( **Setting Menu List(P. 95)**) together at the same time. You are required to restart the machine after initializing all data/settings.

NOTE

- If a screen for entering a PIN is displayed, enter the PIN and tap <Apply>.  **Setting the System Manager PIN(P. 91)**



<Menu>  <System Management Settings>  <Initialize All Data/Settings>  <Yes>  <Yes> and restart the machine.

Replacement Parts

3EEJ-03W

This section describes the replacement parts (consumables/consumable parts) used by the machine. Purchase the replacement parts from the authorized Canon dealer that you purchased the machine from. Follow the precautions when handling and storing the replacement parts.

Genuine Consumables

Canon continuously develops technology innovations in Canon manufactured Toner, Cartridge, and Parts, specifically designed for use in Canon Multi-Functional machines. Experience the benefits of optimal print performance, print volume and high quality outputs, achieved through Canon's new advanced technologies. Therefore, the use of Canon genuine consumables is recommended for your Canon Multi-Functional machines.



NOTE

- For information on handling and storing the replacement parts, follow the precautions indicated in the Getting Started included with the machine.
- You can check the level of remaining toner.

▶ **Checking Toner Level(P. 160)**

■ Toner Cartridge for Replacement



Confirm that the code on the front cover of the machine and the one on the package of the genuine toner are the same.

Model name	Genuine Canon toner
imageRUNNER 2206	• Canon C-EXV 42 Black Toner

IMPORTANT

Be careful of counterfeit toners

- Please be aware that there are counterfeit Canon toners in the marketplace. Use of counterfeit toner may result in poor print quality or machine performance. Canon is not responsible for any malfunction, accident or damage caused by the use of counterfeit toner. For more information, see global.canon/ctc.

■ Drum Unit

Product Name	Model Number
imageRUNNER 2206	• Canon C-EXV 42 Drum Unit

Appendix

Appendix	181
Third Party Software	182
Feature Highlights	183
Going Green and Saving Money	184
Improving Efficiency	186
Going Digital	187
So Much More	189
Specifications	190
Main Unit	191
Available Paper	194
Scan Function	197
Printer Functions	198
System Environment	199
Options	200
Optional Equipment	201
Manuals and Their Contents	202
Using User's Guide	203
Screen Layout of User's Guide	204
Viewing User's Guide	207
Basic Windows Operations	208
Notice	212

Appendix

3EEJ-03X

This chapter contains technical specifications of this machine, instructions on how to use the User's Guide, disclaimers, copyright information, and other important information for customers.

Third Party Software

3EEJ-03Y

For information related to third-party software, click the following icon(s).



Feature Highlights


3EEJ-040

This section describes tips for leveraging the features of the machine by category. You can make use of the features according to your intended purposes and operating environment.

- ▶ **Going Green and Saving Money(P. 184)**
- ▶ **Improving Efficiency(P. 186)**
- ▶ **Going Digital(P. 187)**
- ▶ **So Much More(P. 189)**

Going Green and Saving Money

3EEJ-041

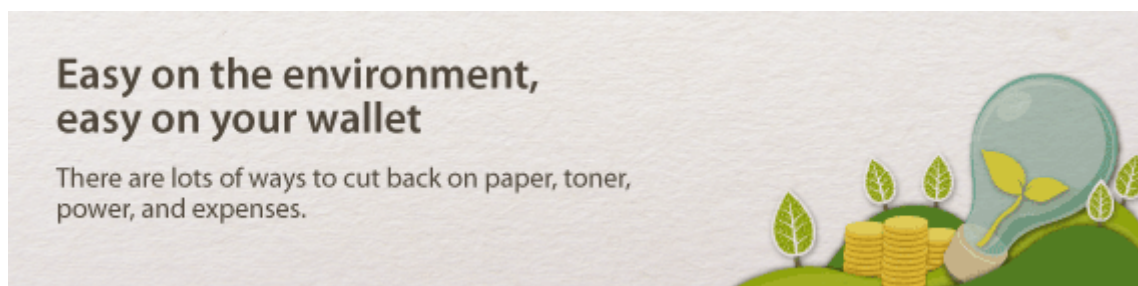

01



Print Multiple Pages on a Single Sheet

To really start saving paper, shrink multiple pages onto a single sheet - 2 or 4 pages for copies, and up to 16 pages for print jobs sent from your computer.



To copy multiple pages of a document onto one sheet: ▶ **Copying Multiple Documents onto One Sheet (2 on 1/4 on 1)(P. 53)**

To print multiple pages of a document onto one sheet: ▶ **Printing from a Computer(P. 66)**

02



Sleep Mode

For saving energy and money, a sleep mode that powers down a machine when nobody is using it has become an essential feature. This machine will enter sleep mode automatically, and can also be put to sleep whenever you want. Press  once to put the machine to sleep. Press it again to instantly wake the machine back into action.



For more information about this function, see ▶ **Entering Sleep Mode(P. 39)** .

03



Save Toner

Got multi-page documents or drafts that don't need presentation-quality printing?


There's a setting that uses less toner. Give it a try and save toner and money.



For more information about this function, see [▶ Printing from a Computer\(P. 66\)](#) .

Improving Efficiency

3EEJ-042

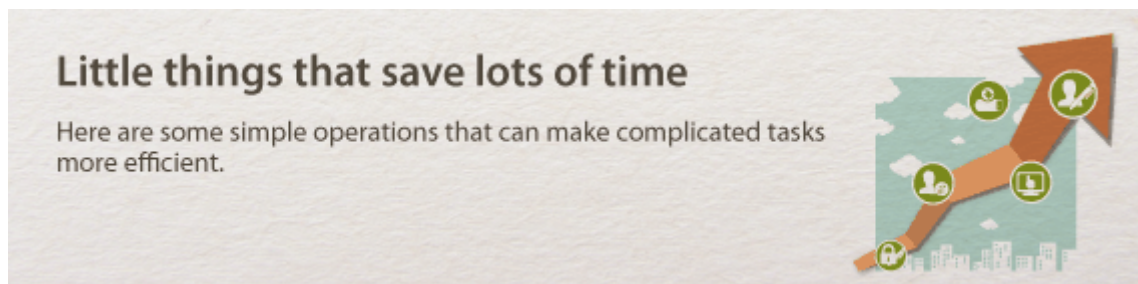


01



Make Print Settings Quickly with Intuitive Operation


You can easily specify the page layout as well as binding position, etc. intuitively on the preview image in the printer driver. The simple click-operation allows you to conveniently make settings while viewing how settings are applied.

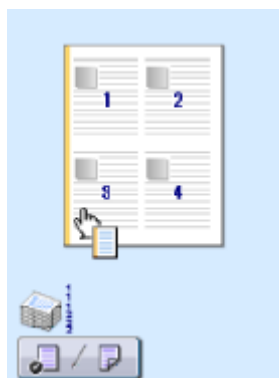

For more information, see [▶Printing from a Computer\(P. 66\)](#) .

Going Digital

3EEJ-043

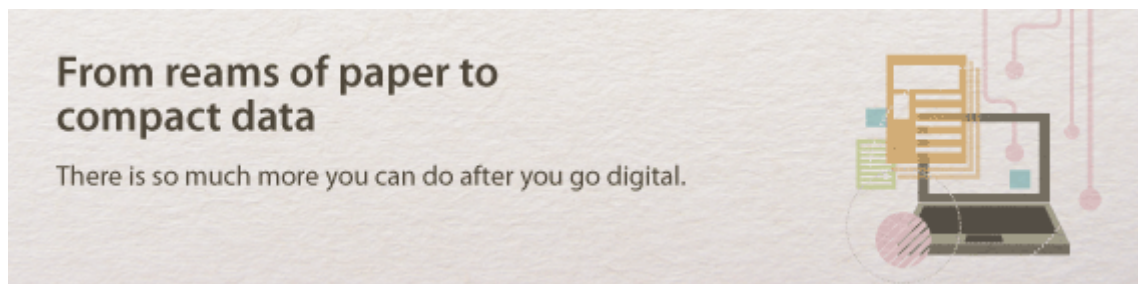

01



Scan Only What You Need

What if you're scanning a whole page of a newspaper but all you're really interested in is a headline and a photo? Use ScanGear MF. You can select what you want from a preview, and then have the scanner disregard the rest. Otherwise you'll have to use an editing program to crop out everything you don't need.

IMPORTANT

Using your product to scan, print or otherwise reproduce certain documents, and the use of such images as scanned, printed or otherwise reproduced by your product, may be prohibited by law and may result in criminal and/or civil liability. If you are uncertain about the legality of using your product to scan, print or otherwise reproduce any particular document, and/or of the use of the images scanned, printed or otherwise reproduced, you should consult in advance with your legal advisor for guidance.



For more information about this function, see [▶Configuring Scan Settings in ScanGear MF\(P. 86\)](#) .

02



Searchable PDFs

Searching of text in a PDF can be done with a "searchable PDF*". By scanning an original with both text and images, text portions are converted by OCR into text data. In addition to being able to search for text information, you can also copy required portions into an Excel spreadsheet or Word document in Microsoft Office. Eliminate the need to type in customer data, addresses, etc. from scratch.

* You cannot create a searchable PDF in the macOS environment.



For more information about this function, see [▶ Scanning from a Computer\(P. 83\)](#) .

03



Add Images to a Work in Progress


Some applications work with the machine to let you easily import scanned images directly into documents you're working on. This way you can skip the steps of opening a separate application just for receiving the scanned images and then exporting them to the application you're really using.



For more information about this function, see [▶ Scanning Using an Application\(P. 84\)](#) .


So Much More

3EEJ-044

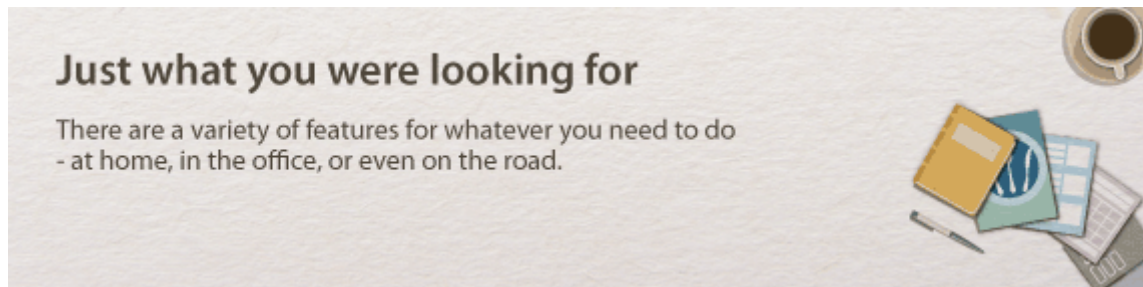**01**

Make Posters

Blow up a regular one-sheet printout and make an exceptionally large poster. A large poster will be printed out on nine sheets. Put them together in a 3x3 grid, and voila!

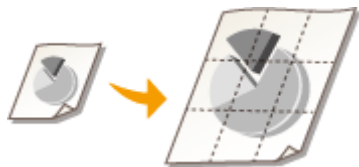

For more information about this function, see [▶Printing from a Computer\(P. 66\)](#) .

Specifications

3EEJ-04W

Specifications are subject to change without notice for product improvement or future release.

■ Machine Specifications

- ▶ Main Unit(P. 191)
- ▶ Available Paper(P. 194)

■ Functional Specifications

- ▶ Scan Function(P. 197)
- ▶ Printer Functions(P. 198)

■ Environment To Use the Machine

- ▶ System Environment(P. 199)

Main Unit

3EEJ-04X

NOTE

- For information on paper sizes and types for each paper source, see "  **Available Paper(P. 194)** . "

Name	Canon imageRUNNER 2206
Type	Desktop
Color Supported	Black and White
Resolution for Reading	600 dpi x 600 dpi
Resolution for Writing	600 dpi x 600 dpi
Number of Tones	256
Acceptable Originals	Up to 297.0 mm x 431.8 mm
Copy Size/Copy Paper	Paper Sizes - Max (Paper drawer) : 11" x 17" - Min (Paper drawer) : A5R - Max (Multi-purpose tray): 297.0 mm x 431.8 mm - Min (Multi-purpose tray): 95.0 mm x 148.0 mm Margin - TOP: 3.0 mm ± 1.5 mm - Left: 3.0 mm ± 2.0 mm Paper Weight - Paper drawer: 64 g/m² to 90 g/m² - Multi-purpose tray: 64 g/m² to 128 g/m²
Paper Type	 Available Paper(P. 194)
Warm-Up Time ^{*1}	After Powering ON 13 seconds Returning from the Sleep mode 4.3 seconds
First Copy Time (A4)	7.4 seconds
Copy Speed ^{*2}	22 sheets/minute

(A4)	
Scanning Speed (A4)	● Full Color: 3.42 seconds ● Black and White: 1.71 seconds
Magnification	25 % to 400 % (in 1 % increments)
Paper Feeding System/Capacity *3	Paper drawer 300 sheets (64 g/m²)/250 sheets (80 g/m²) x 1 Multi-purpose tray ● A4, A4R, B5, B5R, A5, A5R, Letter, LetterR, Statement, StatementR 100 sheets (64 g/m²)/80 sheets (80 g/m²) ● A3, B4, 11" x 17", Legal 50 sheets (64 g/m²)/50 sheets (80 g/m²) ● Transparency 50 sheets ● Label 1 sheet ● Envelope 10 sheets
Paper Output System/Capacity *3	● A4, B5, Letter 250 sheets (64 to 80 g/m²) ● Other sizes 100 sheets (64 to 80 g/m²)
Multiple Copies	999 sheets
Power Source	AC 220 V - 240 V, 2.4 A, 50/60 Hz
Power Consumption *1	Maximum Power Consumption 1.5 kW During Sleep Mode 2.0 W With the Main Power Turned OFF 0.1 W
Dimensions (W x D x H)	622 mm x 589 mm x 499 mm
Weight	Approx. 28.7 kg*4
Installation Space	See "Getting Started". 📖 Manuals and Their Contents(P. 202)
Memory Capacity	RAM: 256 MB

*1 May vary depending on the environment and conditions under which the machine is being used.

*²Copy/print speeds are measured based on internal testing using A4 size paper copied/printed with 100% copy/print ratio to original on one-sided paper. Internal testing involved continuously copying/printing the same one page of content on plain paper (copy speed is tested by copying on the platen glass). Copy/print speeds may vary depending on paper type, paper size or paper feeding direction.

The device may automatically pause or slow down in order to adjust printer condition such as controlling temperature of a certain unit or limiting impact to image quality during continuous copying/printing.

*³May vary depending on the installation environment and paper to use.

*⁴The toner cartridge is included.

Available Paper

3EEJ-04Y

The paper types that can be used with this machine are shown in the following table.

■ Supported Paper Sizes

✓ : Available — : Unavailable

Paper Sizes	Multi-Purpose tray	Paper Drawer 1
A3 ^{*1}	✓	✓
B4 ^{*1}	✓	✓
A4 ^{*1}	✓	✓
A4R	✓	✓
B5	✓	✓
B5R	✓	✓
A5	✓	—
A5R	✓	✓
11" x 17" ^{*1}	✓	✓
Legal ^{*1}	✓	✓
Letter ^{*1}	✓	✓
LetterR	✓	✓
Statement	✓	—
StatementR	✓	✓
Executive	✓	—
Oficio	✓	✓
Oficio (Ecuador)	✓	✓

Paper Sizes	Multi-Purpose tray	Paper Drawer 1
Oficio (Brazil)	✓	✓
Oficio (Mexico)	✓	✓
Oficio (Argentina)	✓	✓
Letter (Argentina)	✓	✓
LetterR (Argentina)	✓	✓
Letter (Government)	✓	✓
LetterR (Government)	✓	✓
Legal (Government)	✓	✓
Foolscap (Australia)	✓	✓
Foolscap	✓	✓
8K	✓	✓
16K	✓	✓
16KR	✓	✓
F4A	✓	✓
Legal (India)	✓	✓
Custom ^{*2}	✓	—
Envelope No.10 (COM10) ^{*3}	✓	—
Envelope Monarch ^{*3}	✓	—
Envelope ISO-C5 ^{*3}	✓	—
Envelope DL ^{*3}	✓	—

^{*1}Can be used for printing reports or lists.

^{*2}Custom paper size of 95.0 to 297.0 mm in width and 148.0 to 431.8 mm in length can be loaded in the multi-purpose tray.

^{*3}Make sure the flap is folded.

■ Supported Paper Types

Chlorine-free paper can be used with this machine.

✓ : Available — : Unavailable

Paper Type	Multi-Purpose tray	Paper Drawer 1
Plain 1	✓	✓
Plain 2	✓	✓
Heavy 1	✓	—
Heavy 2	✓	—
Recycled	✓	✓
Color	✓	✓
Pre-Punched *	✓	✓
Bond	✓	—
Transparency	✓	—
Labels	✓	—
Envelope	✓	—

*Usable paper sizes are A4, A4R, Letter, LetterR.

Scan Function

3EEJ-050

Type	Color Scanner
Original Scanning Size (Max)	Same as "Acceptable Originals" in "Main Unit"  Main Unit(P. 191)
Resolution (Max)	600 dpi x 600 dpi
Scanning Speed	Same as "Scanning Speed" in "Main Unit"  Main Unit(P. 191)
Interface	USB USB 1.1 Full-Speed, USB 2.0 Hi-Speed
Protocol Supported	USB
Output Format (Push Scan)	TIFF (MMR), JPEG (Single-Page), PDF

Printer Functions

3EEJ-051

Type	Internal
Print Size	▶ Available Paper(P. 194)
Print Speed	Same as "Copy Speed" in "Main Unit" ▶ Main Unit(P. 191)
Resolution	Data Processing 600 dpi x 600 dpi
Page Description Language (PDL)	UFR II-LT
Resident Fonts	None
Interface	USB USB 1.1 Full-Speed, USB 2.0 Hi-Speed

System Environment

3EEJ-053

System Requirements for the User's Guide	Windows • Internet Explorer 9 and later • Microsoft Edge • Firefox • Firefox ESR • Chrome* macOS • Safari • Firefox • Chrome* Linux • Firefox iOS • Safari* Android • Chrome*
---	--

*Only when viewing manuals on the Internet.

Options

3EEJ-054

Installing options on the machine enables you to use more features.

■ Knowing What Types of Options are Available

▶ Optional Equipment(P. 201)

Optional Equipment

3EEJ-04C

The functionality of the machine can be expanded by installing optional equipment to the machine. Install the optional equipment to meet your needs such as by loading a large amount of paper.


▶ Optional Paper Drawer(P. 201)

Optional Paper Drawer

You can install the optional paper drawer to the machine.

■ FL Cassette-BB

You can replace the standard paper drawer of the machine with the optional paper drawer.

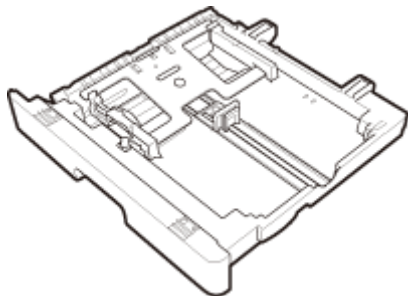

NOTE

- For how to load paper into the paper drawer, see ▶ **Loading Paper(P. 20)** .
- For available paper sizes, see ▶ **Available Paper(P. 194)** .

Manuals and Their Contents

3EEJ-04E

The manuals listed below are included with the machine. Refer to them as necessary.

Getting Started		Read this manual first. It describes the flow of settings to perform before using this machine. 
User's Guide (This Manual)		This manual describes all the functions of the machine in a manual that is viewed using a Web browser. You can browse information by category or enter a keyword to search for pages on a specific topic. ▶ Using User's Guide(P. 203)

Using User's Guide

3EEJ-055

The User's Guide is a manual that can be viewed on your computer or mobile device and it describes all of the functions of the machine. You can search from your intended use or enter a keyword to quickly find the page you are looking for. The section describes the screen layout of the User's Guide and how to read the Guide. You can specify how the appearance of the User's Guide looks.

■ Screen Layout of User's Guide

This section describes the screens configuring the User's Guide and how to use the on-screen buttons.  **Screen Layout of User's Guide(P. 204)**

■ Viewing User's Guide

This section describes the meaning of the marks used in the User's Guide, how the keys on the control panel and the buttons on the computer display are represented, and other matters that help you understand the information contained in the User's Guide.  **Viewing User's Guide(P. 207)**

■ Specifying How the Appearance of the User's Guide Looks

You can change the character size used in the User's Guide, and switch the screen layout to fit to the device you use to view the User's Guide.

NOTE

- If you do not have access to Adobe Reader to view the manuals in PDF format, try other programs such as PDF Preview developed by Vivid Document Imaging Technologies.

How to Find the Topic You Are Looking for

Search the contents

- You can find the page you are looking for by selecting the topic from the "Contents" on the left side of the screen.

Search by keyword

- Perform a search by entering a keyword, such as "envelope" or "toner cartridge," and the pages containing the keyword are displayed. You can find the page you are looking for from those results. You can also enter phrases such as "connecting to a network." The keyword search also supports the AND Boolean to search for multiple keywords. For the organization of the search screen and how to operate the search screen, see  **Search(P. 205)** .


Screen Layout of User's Guide

3EEJ-056

The User's Guide is divided into different screens, and the content of each screen varies.

Top Page

Appears when User's Guide is started.

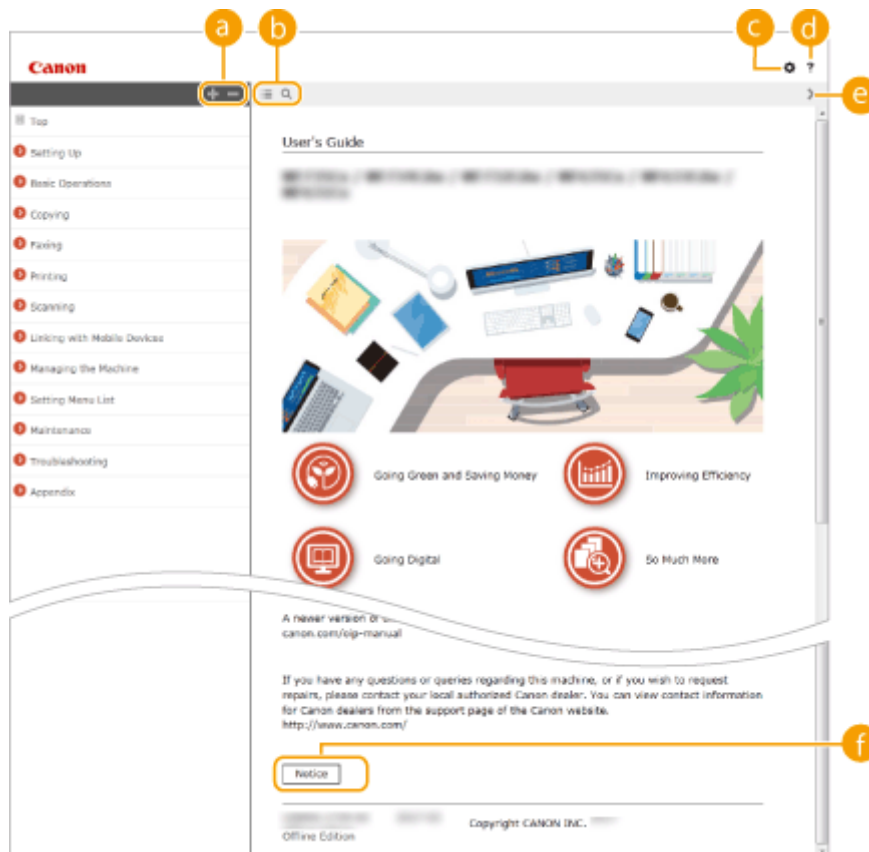

Click to also display all of the sections under the chapters. Click to return to the previous display.



Click to toggle the display between the contents and search. When the table of contents is displayed, each click on switches between hiding and showing the display. When the search display is shown, each click on switches between hiding and showing the display.



Click to set parameters to determine how the User's Guide is displayed, such as character size or layout.



Click to display information on how to view the User's Guide, how to perform a search, and other information.




Click to display the previous or following topic.



Click to view important information you should know when using the machine.

Topic Page

Contains information about how to configure and use the machine.

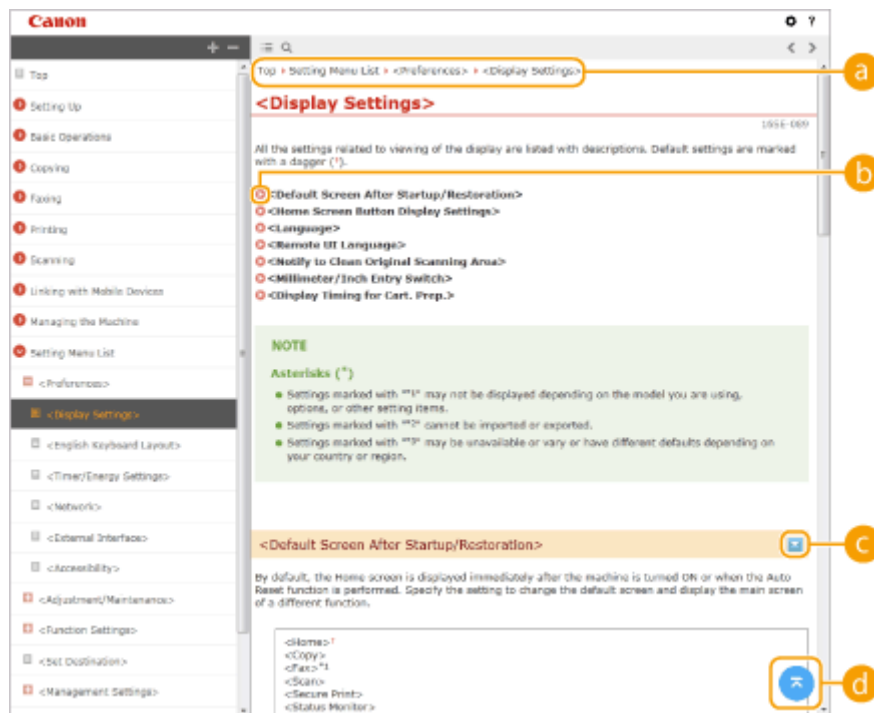

a Navigation

See what chapter topic you are currently viewing.



Click to jump to the corresponding page. To return to the previous page, click "Back" on your Web browser.




Click  to display the hidden detailed descriptions. Click  to close the detailed descriptions.



Click to return to the page top.

Search

Click  to display the search window. Contains a text box to perform a search by keyword and find the page you are looking for.

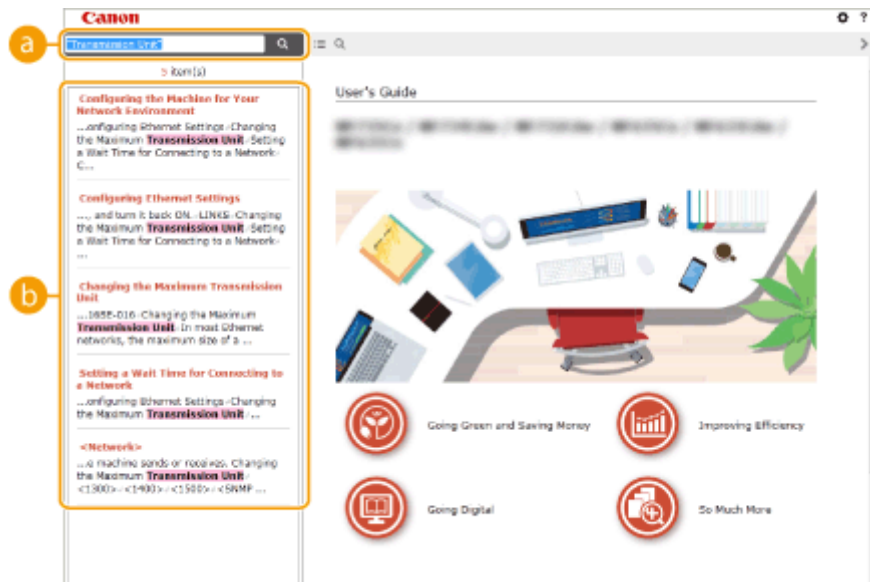

a [Enter keyword(s) here]

Enter a keyword or keywords and click  to display the search results. You can search for pages containing all the keywords by separating the keywords by a space (blank). Also you can only search for pages containing an exact phrase by enclosing the keywords in double quotation marks.

b Search result

Displays the search results of the pages that contain the specified keywords. From the results, locate the page you are looking for and click the topic title of the page.

NOTE:

- The specified keyword(s) are shown in bold in the search results.

Viewing User's Guide

3EEJ-04J

This section describes the marks, buttons, screens, and other items used in the User's Guide. The warnings are also given in the "Important Safety Instructions" in the "Getting Started" included with the machine. See also these instructions.

Marks

Cautions regarding safety, restrictions and cautions regarding the handling of the machine, useful tips, and other information are indicated using the marks below.



Indicates a caution concerning operations that may lead to injury to persons if not performed correctly. To use the machine safely, always pay attention to these cautions.



Indicates an operation that must not be performed. Read these items carefully, and make sure not to perform the described operations.

IMPORTANT

Indicates operational requirements and restrictions. Be sure to read these items carefully to operate the machine correctly, and avoid damage to the machine or property.

NOTE

Indicates a clarification of an operation, or contains additional explanations for a procedure.

TIPS

Indicates useful functions or tips for using the machine.

Keys and Buttons Used in this Manual

Keys on the control panel and buttons on the computer display appear in the following notation:

Type	Example
Keys on the control panel	 
Settings displayed on the control panel	<Timer Settings> <Paper jammed.>
Buttons and other text interfaces displayed on the computer display	[Preferences]

Computer Screens Used in This Manual

Unless otherwise noted, displays used in the User's Guide are those for the imageRUNNER 2206. Depending on the operating system you are using, the appearance of the displays used in this manual may slightly differ from the actual displays. Also, the appearance of drivers and software may differ depending on their version.

Basic Windows Operations

- ▶ **Displaying the Printer Folder(P. 208)**
- ▶ **Printing a Test Page in Windows(P. 208)**
- ▶ **Checking the Printer Port(P. 209)**
- ▶ **Checking Bidirectional Communication(P. 210)**

NOTE

- Depending on the computer that you use, the operation may differ.

■ Displaying the Printer Folder

Windows 7/Server 2008 R2

[Start] ▶ select [Devices and Printers].

Windows 8/Server 2012

Right-click the lower-left corner of the screen ▶ select [Control Panel] ▶ [View devices and printers].

Windows 8.1/Server 2012 R2

Right-click [Start] ▶ select [Control Panel] ▶ [View devices and printers].

Windows 10

[

Windows Server 2008

[Start] ▶ select [Control Panel] ▶ double-click [Printers].


Windows Server 2016

Right-click [


■ Printing a Test Page in Windows

You can check whether the printer driver is operational by printing a test page in Windows.

- 1 Load A4 size paper in the paper drawer. ▶ Loading Paper in the Paper Drawer(P. 22)**
- 2 Open the printer folder. ▶ Displaying the Printer Folder(P. 208)**
- 3 Right-click the printer driver icon for this machine, and click [Printer properties] or [Properties].**

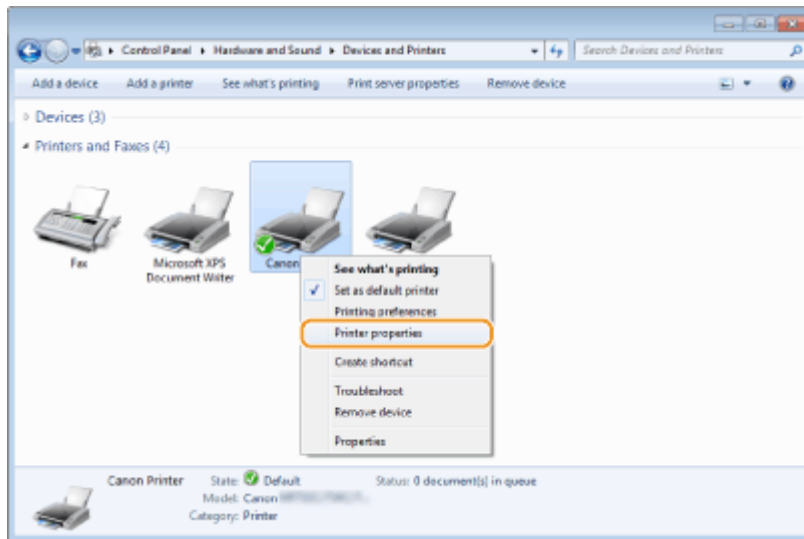

4 Click [Print Test Page] in [General] tab.

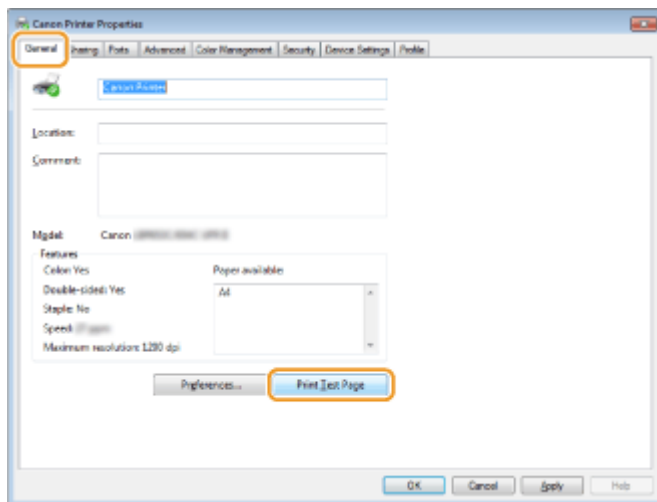


⇒ The test page is printed.


■ Checking the Printer Port

1 Open the printer folder. ▶ Displaying the Printer Folder(P. 208)

2 Right-click the printer driver icon for this machine, and click [Printer properties] or [Properties].

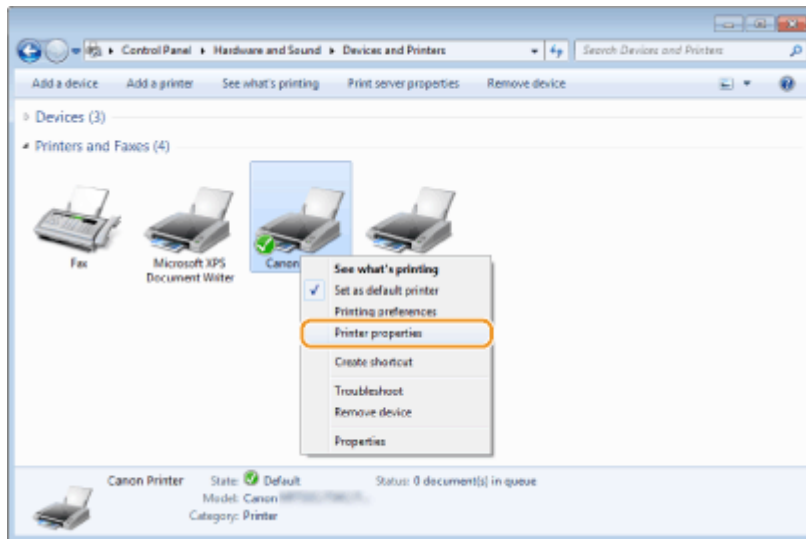


3 In the [Ports] tab, check that the port is selected correctly.

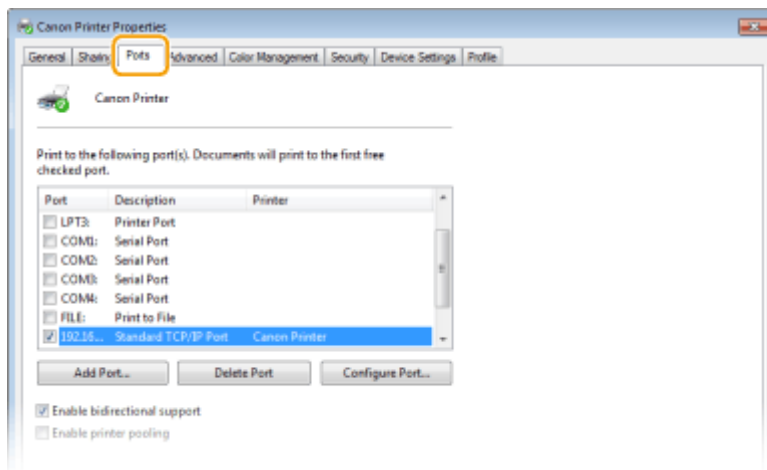


■ Checking Bidirectional Communication

1 Open the printer folder. ▶ Displaying the Printer Folder(P. 208)

2 Right-click the printer driver icon for this machine, and click [Printer properties] or [Properties].

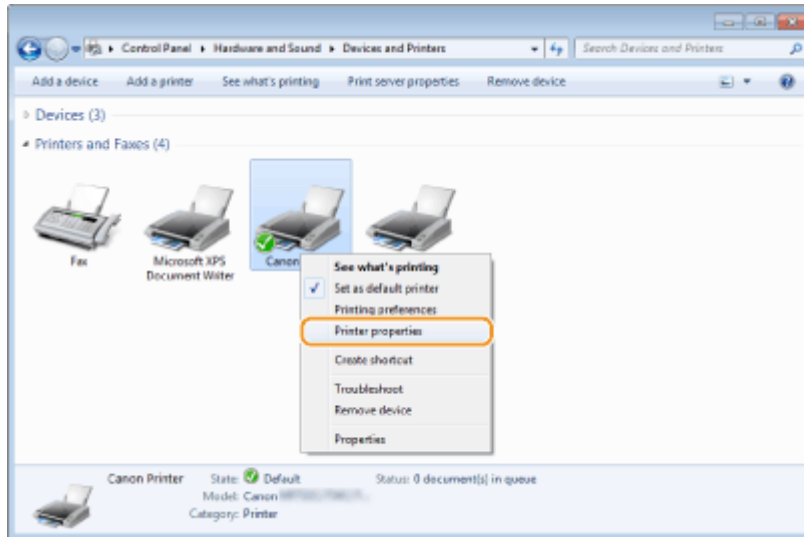

3 In the [Ports] tab, make sure that the [Enable bidirectional support] check box is selected.

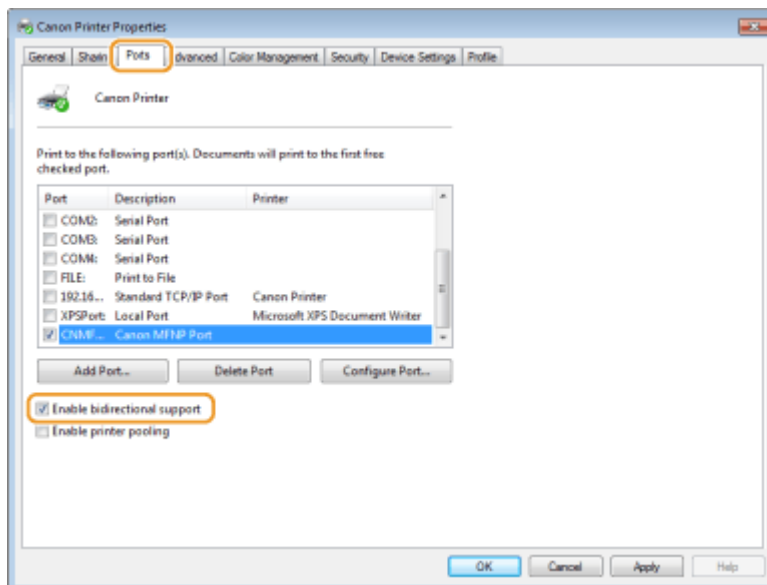

Notice

3EEJ-04R

■ Product Information required by COMMISSION REGULATION (EU) No 801/2013 amending Regulation (EC) No 1275/2008

Power consumption of the product in networked standby if wired network ports are connected and all wireless network ports are activated (if they are available at the same time).

Model Name	Power consumption of the product in networked standby
imageRUNNER 2206	3.0 w or less

NOTE

- The above value(s) are the actual values for single machine, chosen arbitrarily, and may therefore vary from the value of the machine in use. Optional network ports are not connected and/or activated in the measurement.

■ WEEE and Battery Directives



Only for European Union and EEA (Norway, Iceland and Liechtenstein)

These symbols indicate that this product is not to be disposed of with your household waste, according to the WEEE Directive (2012/19/EU), the Battery Directive (2006/66/EC) and/or national legislation implementing those Directives. If a chemical symbol is printed beneath the symbol shown above, in accordance with the Battery Directive, this indicates that a heavy metal (Hg = Mercury, Cd = Cadmium, Pb = Lead) is present in this battery or accumulator at a concentration above an applicable threshold specified in the Battery Directive.

This product should be handed over to a designated collection point, e.g., on an authorized one-for-one basis when you buy a new similar product or to an authorized collection site for recycling waste electrical and electronic equipment (EEE) and batteries and accumulators. Improper handling of this type of waste could have a possible impact on the environment and human health due to potentially hazardous substances that are generally associated with EEE. Your cooperation in the correct disposal of this product will contribute to the effective usage of natural resources.

For more information about the recycling of this product, please contact your local city office, waste authority, approved scheme or your household waste disposal service or visit www.canon-europe.com/weee, or www.canon-europe.com/battery.

■ Environmental Information

Reducing your environmental impact while saving money

Power Consumption and Activation Time

The amount of electricity a device consumes depends on the way the device is used. This product is designed and set in a way to allow you to reduce your electricity costs. After the last print it switches to Ready Mode. In this mode it can print again immediately if required. If the product is not used for a time, the device switches to its Power Save Mode. The devices consume less power (Watt) in these modes.

If you wish to set a longer Activation Time or would like to completely deactivate the Power Save Mode, please consider that this device may then only switch to a lower energy level after a longer period of time or not at all. Canon does not recommend extending the Activation Times from the optimum ones set as default.

Energy Star®

The Energy Star® programme is a voluntary scheme to promote the development and purchase of energy efficient models, which help to minimise environmental impact.

Products which meet the stringent requirements of the Energy Star® programme for both environmental benefits and the amount of energy consumption will carry the Energy Star® logo accordingly.

Paper types

This product can be used to print on both recycled and virgin paper (certified to an environmental stewardship scheme), which complies with EN12281 or a similar quality standard. In addition it can support printing on media down to a weight of 64g/m².

Lighter paper means less resources used and a lower environmental footprint for your printing needs.

Duplex printing (Standard duplex printing products only)

Duplex printing capability enables you to print on both sides automatically, and therefore helps to reduce the use of valuable resources by reducing your paper consumption.

The duplex function has been auto enabled during the set up and driver installation and Canon strongly recommends that you do not disable this function. You should continue to use the duplex function to reduce the environmental impact of your work with this product at all times.

■ Disclaimers

- The information in this document is subject to change without notice.
- CANON INC. MAKES NO WARRANTY OF ANY KIND WITH REGARD TO THIS MATERIAL, EITHER EXPRESS OR IMPLIED, EXCEPT AS PROVIDED HEREIN, INCLUDING WITHOUT LIMITATION, THEREOF, WARRANTIES AS TO MARKETABILITY, MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OF USE, OR NON-INFRINGEMENT. CANON INC. SHALL NOT BE LIABLE FOR ANY DIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES OF ANY NATURE, OR LOSSES OR EXPENSES RESULTING FROM THE USE OF THIS MATERIAL.

■ Copyright

Reproduction of the contents of this document in whole or in part without prior permission is prohibited.

■ Trademarks

Adobe, Acrobat, and Reader are registered trademarks of Adobe Systems Incorporated in the United States and/or other countries.

Apple, Bonjour, Mac, macOS, OS X and Safari are trademarks of Apple Inc.

Microsoft, Windows, Windows Vista, Windows Server, Internet Explorer, Word and Excel are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

This product contains the Universal Font Scaling Technology or UFST® under license from Monotype Imaging, Inc.

UFST® is a trademark of Monotype Imaging, Inc. registered in the United States Patent and Trademark Office and may be registered in certain jurisdictions.

UFST: Copyright © 1989 - 1996, 1997, 2003, 2004, 2008, all rights reserved, by Monotype Imaging Inc.



The Adobe PDF logo is a trademark or registered trademark of Adobe Systems Incorporated in the United States and other countries.

Copyright © 2008 Adobe Systems Incorporated. All rights reserved.

Protected by U.S. Patents 6,185,684; 6,205,549; 7,213,269; 7,272,628; 7,278,168; Patents pending in the U.S. and other countries.

All instances of the name PostScript in the text are references to the PostScript language as defined by Adobe Systems Incorporated unless otherwise stated. The name PostScript also is used as a product trademark for Adobe Systems' implementation of the PostScript language interpreter.

Except as otherwise stated, any reference to a "PostScript printing device," "PostScript display device," or similar item refers to a printing device, display device or item (respectively) that contains PostScript technology created or licensed by Adobe Systems Incorporated and not to devices or items that purport to be merely compatible with the PostScript language.

Adobe, the Adobe logo, Adobe LiveCycle® Policy Server, InDesign, PostScript, the PostScript Logo, and PostScript 3 are either registered trademarks or trademarks of Adobe Systems Incorporated in the United States and/or other countries.

All other trademarks are the property of their respective owners.

Portions of this software are copyright © 2007 The FreeType Project (www.freetype.org). All rights reserved.

All other product and brand names are registered trademarks, trademarks or service marks of their respective owners.

V_180517

This Font Software is licensed under the SIL Open Font License, Version 1.1.

This license is copied below, and is also available with a FAQ at: <http://scripts.sil.org/OFL>

SIL OPEN FONT LICENSE Version 1.1 - 26 February 2007

PREAMBLE

The goals of the Open Font License (OFL) are to stimulate worldwide development of collaborative font projects, to support the font creation efforts of academic and linguistic communities, and to provide a free and open framework in which fonts may be shared and improved in partnership with others.

The OFL allows the licensed fonts to be used, studied, modified and redistributed freely as long as they are not sold by themselves. The fonts, including any derivative works, can be bundled, embedded, redistributed and/or sold with any software provided that any reserved names are not used by derivative works. The fonts and derivatives, however, cannot be released under any other type of license. The requirement for fonts to remain under this license does not apply to any document created using the fonts or their derivatives.

DEFINITIONS

"Font Software" refers to the set of files released by the Copyright Holder(s) under this license and clearly marked as such. This may include source files, build scripts and documentation.

"Reserved Font Name" refers to any names specified as such after the copyright statement(s).

"Original Version" refers to the collection of Font Software components as distributed by the Copyright Holder(s).

"Modified Version" refers to any derivative made by adding to, deleting, or substituting -- in part or in whole -- any of the components of the Original Version, by changing formats or by porting the Font Software to a new environment.

"Author" refers to any designer, engineer, programmer, technical writer or other person who contributed to the Font Software.

PERMISSION & CONDITIONS

Permission is hereby granted, free of charge, to any person obtaining a copy of the Font Software, to use, study, copy, merge, embed, modify, redistribute, and sell modified and unmodified copies of the Font Software, subject to the following conditions:

- 1) Neither the Font Software nor any of its individual components, in Original or Modified Versions, may be sold by itself.
- 2) Original or Modified Versions of the Font Software may be bundled, redistributed and/or sold with any software, provided that each copy contains the above copyright notice and this license. These can be included either as stand-alone text files, human-readable headers or in the appropriate machine-readable metadata fields within text or binary files as long as those fields can be easily viewed by the user.
- 3) No Modified Version of the Font Software may use the Reserved Font Name(s) unless explicit written permission is granted by the corresponding Copyright Holder. This restriction only applies to the primary font name as presented to the users.
- 4) The name(s) of the Copyright Holder(s) or the Author(s) of the Font Software shall not be used to promote, endorse or advertise any Modified Version, except to acknowledge the contribution(s) of the Copyright Holder(s) and the Author(s) or with their explicit written permission.
- 5) The Font Software, modified or unmodified, in part or in whole, must be distributed entirely under this license, and must not be distributed under any other license. The requirement for fonts to remain under this license does not apply to any document created using the Font Software.

TERMINATION

This license becomes null and void if any of the above conditions are not met.

DISCLAIMER

THE FONT SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO ANY WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT OF COPYRIGHT, PATENT, TRADEMARK, OR OTHER RIGHT. IN NO EVENT SHALL THE COPYRIGHT HOLDER BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, INCLUDING ANY GENERAL, SPECIAL, INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF THE USE OR INABILITY TO USE THE FONT SOFTWARE OR FROM OTHER DEALINGS IN THE FONT SOFTWARE.

The Software Subjected to the Other License Conditions

Please refer to Table of Software and respective License terms below, for more detail and corresponding license conditions.

Table of Software

Names of Software	Terms and Conditions of the License: See Page
Adobe PDF Scan Library	2
bldimake	5
FreeType	6
Incl	11
JPEG	12
math	13
pcftypes.h	14
xpm	15

Portions use software under the following terms:

This product contains either BSAFE and/or TIPEM software by RSA Security Inc.

This product includes software developed by the Apache Software Foundation (<http://www.apache.org/>).
Copyright (c) 1998-2000 The Apache Software Foundation. All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. The end-user documentation included with the redistribution, if any, must include the following acknowledgment:

"This product includes software developed by the Apache Software Foundation (<http://www.apache.org/>)."

Alternately, this acknowledgment may appear in the software itself, if and wherever such third-party acknowledgments normally appear.

4. The names "Xerces" and "Apache Software Foundation" must not be used to endorse or promote products derived from this software without prior written permission. For written permission, please contact apache@apache.org.
5. Products derived from this software may not be called "Apache", nor may "Apache" appear in their name, without prior written permission of the Apache Software Foundation.

THIS SOFTWARE IS PROVIDED ``AS IS" AND ANY EXPRESSED OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE APACHE SOFTWARE FOUNDATION OR ITS CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

This software consists of voluntary contributions made by many individuals on behalf of the Apache Software Foundation and was originally based on software copyright (c) 1999, International Business Machines, Inc., <http://www.ibm.com>. For more information on the Apache Software Foundation, please see <http://www.apache.org/>.

March 27, 2003

Portions of this product are based on Modifications created from the Original Code known as the "Sablotron XSLT Processor". The Sablotron XSLT Processor is subject to the Mozilla Public License Version 1.1 (the "License"). You may obtain a copy of the License at <http://www.mozilla.org/MPL/>

Software distributed under the License is distributed on an "AS IS" basis, WITHOUT WARRANTY OF ANY KIND, either express or implied. See the License for the specific language governing rights and limitations under the License.

The Original Code is the Sablotron XSLT Processor.

The Initial Developer of the Original Code is Ginger Alliance Ltd. Portions created by Ginger Alliance are Copyright (C) 2000 Ginger Alliance Ltd. All Rights Reserved.

Pursuant to sections 3.2 and 3.6 of the License, the Modifications created by Adobe Systems Incorporated are available as Source Code. The Modifications may be downloaded via the Internet from:

<http://partners.adobe.com/asn/tech/xml/sablotron/index.jsp>

The Original Code may be downloaded via the Internet from:

<https://sourceforge.net/projects/sablotron/>

Portions Copyright (c) 1997-1999 Silicon Graphics Computer Systems, Inc.

Permission to use, copy, modify, distribute and sell this software and its documentation for any purpose is hereby granted without fee, provided that the above copyright notice appear in all copies and that both that copyright notice and this permission notice appear in supporting documentation. Silicon Graphics makes no representations about the suitability of this software for any purpose. It is provided "as is" without express or implied warranty.

The Loki Library

Portions Copyright (c) 2001 by Andrei Alexandrescu . This code accompanies the book: Alexandrescu, Andrei. "Modern C++ Design: Generic Programming and Design Patterns Applied".

Portions Copyright (c) 2001. Addison-Wesley. Permission to use, copy, modify, distribute and sell this software for any purpose is hereby granted without fee, provided that the above copyright notice appear in all copies and that both that copyright notice and this permission notice appear in supporting documentation. The author or Addison-Wesley Longman make no representations about the suitability of this software for any purpose. It is provided "as is" without express or implied warranty.

Updated Information/Additional Third Party Code Information available at <http://www.adobe.com/go/thirdparty> .

bldimake

Copyright (c) 1985, 1986, 1987, 1988 The Open Group

All right Reserved.

Permission to use, copy, modify, distribute, and sell this software and its documentation for any purpose is hereby granted without fee, provided that the above copyright notice appear in all copies and that both that copyright notice and this permission notice appear in supporting documentation. The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE OPEN GROUP BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

Except as contained in this notice, the name of The Open Group shall not be used in advertising or otherwise to promote the sale, use or other dealings in this Software without prior written authorization from The Open Group.

FreeType

The FreeType Project LICENSE

2006-Jan-27

Copyright 1996-2002, 2006 by
David Turner, Robert Wilhelm, and Werner Lemberg

Introduction

=====

The FreeType Project is distributed in several archive packages; some of them may contain, in addition to the FreeType font engine, various tools and contributions which rely on, or relate to, the FreeType Project.

This license applies to all files found in such packages, and which do not fall under their own explicit license. The license affects thus the FreeType font engine, the test programs, documentation and makefiles, at the very least.

This license was inspired by the BSD, Artistic, and IJG (Independent JPEG Group) licenses, which all encourage inclusion and use of free software in commercial and freeware products alike. As a consequence, its main points are that:

- o We don't promise that this software works. However, we will be interested in any kind of bug reports. ('as is' distribution)
- o You can use this software for whatever you want, in parts or full form, without having to pay us. ('royalty-free' usage)
- o You may not pretend that you wrote this software. If you use it, or only parts of it, in a program, you must acknowledge

somewhere in your documentation that you have used the FreeType code. ('credits')

We specifically permit and encourage the inclusion of this software, with or without modifications, in commercial products. We disclaim all warranties covering The FreeType Project and assume no liability related to The FreeType Project.

Finally, many people asked us for a preferred form for a credit/disclaimer to use in compliance with this license. We thus encourage you to use the following text:

""""

Portions of this software are copyright © <year> The FreeType Project (www.freetype.org). All rights reserved.

""""

Please replace <year> with the value from the FreeType version you actually use.

Legal Terms

=====

0. Definitions

Throughout this license, the terms 'package', 'FreeType Project', and 'FreeType archive' refer to the set of files originally distributed by the authors (David Turner, Robert Wilhelm, and Werner Lemberg) as the 'FreeType Project', be they named as alpha, beta or final release.

'You' refers to the licensee, or person using the project, where 'using' is a generic term including compiling the project's source code as well as linking it to form a 'program' or 'executable'. This program is referred to as 'a program using the FreeType

engine'.

This license applies to all files distributed in the original FreeType Project, including all source code, binaries and documentation, unless otherwise stated in the file in its original, unmodified form as distributed in the original archive. If you are unsure whether or not a particular file is covered by this license, you must contact us to verify this.

The FreeType Project is copyright (C) 1996-2000 by David Turner, Robert Wilhelm, and Werner Lemberg. All rights reserved except as specified below.

1. No Warranty

THE FREETYPE PROJECT IS PROVIDED 'AS IS' WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. IN NO EVENT WILL ANY OF THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY DAMAGES CAUSED BY THE USE OR THE INABILITY TO USE, OF THE FREETYPE PROJECT.

2. Redistribution

This license grants a worldwide, royalty-free, perpetual and irrevocable right and license to use, execute, perform, compile, display, copy, create derivative works of, distribute and sublicense the FreeType Project (in both source and object code forms) and derivative works thereof for any purpose; and to authorize others to exercise some or all of the rights granted herein, subject to the following conditions:

- o Redistribution of source code must retain this license file ('FTL.TXT') unaltered; any additions, deletions or changes to the original files must be clearly indicated in accompanying documentation. The copyright notices of the unaltered,

original files must be preserved in all copies of source files.

- o Redistribution in binary form must provide a disclaimer that states that the software is based in part of the work of the FreeType Team, in the distribution documentation. We also encourage you to put an URL to the FreeType web page in your documentation, though this isn't mandatory.

These conditions apply to any software derived from or based on the FreeType Project, not just the unmodified files. If you use our work, you must acknowledge us. However, no fee need be paid to us.

3. Advertising

Neither the FreeType authors and contributors nor you shall use the name of the other for commercial, advertising, or promotional purposes without specific prior written permission.

We suggest, but do not require, that you use one or more of the following phrases to refer to this software in your documentation or advertising materials: 'FreeType Project', 'FreeType Engine', 'FreeType library', or 'FreeType Distribution'.

As you have not signed this license, you are not required to accept it. However, as the FreeType Project is copyrighted material, only this license, or another one contracted with the authors, grants you the right to use, distribute, and modify it. Therefore, by using, distributing, or modifying the FreeType Project, you indicate that you understand and accept all the terms of this license.

4. Contacts

There are two mailing lists related to FreeType:

o freetype@nongnu.org

Discusses general use and applications of FreeType, as well as future and wanted additions to the library and distribution.

If you are looking for support, start in this list if you haven't found anything to help you in the documentation.

o freetype-devel@nongnu.org

Discusses bugs, as well as engine internals, design issues, specific licenses, porting, etc.

Our home page can be found at

<http://www.freetype.org>

--- end of FTL.TXT ---

Incl

Copyright (c) 1994-96 SunSoft, Inc.

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL SUNSOFT INC. OR ITS PARENT COMPANY BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

Except as contained in this notice, the name of SunSoft, Inc. shall not be used in advertising or otherwise to promote the sale, use or other dealings in this Software without prior written authorization from SunSoft, Inc.

JPEG

"this software is based in part on the work of the Independent JPEG Group."

math

Copyright (c) 1993 by Sun Microsystems, Inc. All rights reserved.

Developed at SunPro, a Sun Microsystems, Inc. business.

Permission to use, copy, modify, and distribute this software is freely granted, provided that this notice is preserved.

copysignf.c:*	Copyright (c) 1993 by Sun Microsystems, Inc. All rights reserved.
math_private.h:*	Copyright (c) 1993 by Sun Microsystems, Inc. All rights reserved.
powf.c:*	Copyright (c) 1993 by Sun Microsystems, Inc. All rights reserved.
scalbnf.c:*	Copyright (c) 1993 by Sun Microsystems, Inc. All rights reserved.

pcftypes.h

Copyright (c) 2000, 2001, 2002 by Francesco Zappa Nardelli

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

xpm

Copyright (c) 1989-95 GROUPE BULL

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL GROUPE BULL BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

Except as contained in this notice, the name of GROUPE BULL shall not be used in advertising or otherwise to promote the sale, use or other dealings in this Software without prior written authorization from GROUPE BULL.