

# MEGA 65

## BASIC 65 REFERENCE



# MEGA65 TEAM

## **Dr. Paul Gardner-Stephen**

(highlander)

Founder

Software and virtual hardware architect

Spokesman and lead scientist

## **Martin Streit**

(seriously)

Video and photo production

Tax and organization

Social media

## **Dan Sanderson**

(ddaaannn)

Media and documentation

MEGA65.ROM

## **Dr. Edilbert Kirk**

(Bit Shifter)

MEGA65.ROM

Manual and tools

## **Gábor Lénárt**

(LGB)

Emulator

## **Farai Aschwanden**

(Tayger)

Filehost and tools

Financial advisory

## **Falk Rehwagen**

(bluewaysw)

GEOS

## **Robert Steffens**

(kibo)

Network technology

Core bug hunting

## **Detlef Hastik**

(deft)

Co-founder

General manager

Marketing and sales

## **Oliver Graf**

(lydon)

Release management

VHDL and platform enhancements

## **Antti Lukats**

(antti-brain)

Host hardware design and production

## **Dieter Penner**

(doubleflash)

Host hardware support

## **Mirko H.**

(sy2002)

Additional platforms and consulting

## **Gürce Işıkyıldız**

(gurce)

Tools and enhancements

## **Daniel England**

(Mew Pokémon)

Additional code and tools

## **Hernán Di Pietro**

(indiocolifa)

Additional emulation and tools

## **Roman Standzikowski**

(FeralChild)

Open ROMs

## **Anton Schneider-Michallek**

(adtbm)

Presentation and support

# Reporting Errors and Omissions

This book is being continuously refined and improved upon by the MEGA65 community. The version of this edition is:

```
commit 4e8e6c54bbda5a8817d0cf77d781ce67c3cf367c  
date: Tue Jan 16 11:06:08 2024 -0800
```

We want this book to be the best that it possibly can. So if you see any errors, find anything that is missing, or would like more information, please report them using the MEGA65 User's Guide issue tracker:

<https://github.com/mega65/mega65-user-guide/issues>

You can also check there to see if anyone else has reported a similar problem, while you wait for this book to be updated.

Finally, you can always download the latest versions of our suite of books from these locations:

- <https://mega65.org/mega65-book>
- <https://mega65.org/user-guide>
- <https://mega65.org/developer-guide>
- <https://mega65.org/basic65-ref>
- <https://mega65.org/chipset-ref>
- <https://mega65.org/docs>



# MEGA65 BASIC 65 REFERENCE

Published by  
the MEGA Museum of Electronic Games & Art e.V., Germany.

## WORK IN PROGRESS

Copyright ©2019 – 2024 by Paul Gardner-Stephen, the MEGA Museum of Electronic Games & Art e.V. and contributors.

This reference guide is made available under the GNU Free Documentation License v1.3, or later, if desired. This means that you are free to modify, reproduce and redistribute this User's Guide, subject to certain conditions. The full text of the GNU Free Documentation License v1.3 can be found at <https://www.gnu.org/licenses/fdl-1.3.en.html>.

Implicit in this copyright license, is the permission to duplicate and/or redistribute this document in whole or in part for use in education environments. We want to support the education of future generations, so if you have any worries or concerns, please contact us.

January 16, 2024

# Contents

<b>1</b>	<b>Introduction</b>	<b>v</b>
	Welcome to the MEGA65! . . . . .	vii
	Other Books in this series . . . . .	viii
	Come Join Us! . . . . .	viii
<b>2</b>	<b>BASIC 65 Command Reference</b>	<b>1</b>
	Commands, Functions, and Operators . . . . .	3
	BASIC Command Reference . . . . .	19
<b>3</b>	<b>Screen Codes</b>	<b>277</b>
	Screen Codes . . . . .	279
<b>4</b>	<b>PETSCII Codes</b>	<b>281</b>
	PETSCII Codes and CHR\$ . . . . .	283
<b>5</b>	<b>Screen Editor Keys</b>	<b>287</b>
	Screen Editor Keys . . . . .	289
	Control codes . . . . .	289
	Shifted codes . . . . .	292
	Escape Sequences . . . . .	293

<b>6 System Palette</b>	<b>297</b>
System Palette . . . . .	299
<b>7 Supporters &amp; Donors</b>	<b>301</b>
Organisations . . . . .	303
Contributors . . . . .	304
Supporters . . . . .	305
<b>INDEX</b>	<b>315</b>

# 1

## CHAPTER

### Introduction

- Welcome to the MEGA65!
- Other Books in this series
- Come Join Us!



# WELCOME TO THE MEGA65!

Congratulations on your purchase of one of the most long-awaited computers in the history of computing! The MEGA65 is community designed, and based on the never-released Commodore® 65<sup>1</sup> computer; a computer designed in 1989 and intended for public release in 1990. Decades have passed, and we have endeavoured to invoke memories of an earlier time when computers were simple and friendly. They were not only simple to operate and understand, but friendly and approachable for new users.

These 1980s computers inspired many of their owners to pursue the exciting and rewarding technology careers they have today. Just imagine the exhilaration these early computing pioneers experienced, as they learned they could use their new computer to solve problems, write a letter, prepare taxes, invent new things, discover how the universe works, and perhaps even play an exciting game or two! We want to re-awaken that same level of excitement (which alas, is no longer found in modern computing), so we have created the **MEGA65**.

The MEGA65 team believes that owning a computer is like owning a home. You don't just use a home; you change things, big and small, to make it your own custom living space. After a while, when you settle in, you may decide to renovate or expand your home to make it more comfortable, or provide more utility. Think of the MEGA65 as your very own "computing home".

This guide will teach you how to do more than just hang pictures on a wall; it will show you how to build your dream home. While you read this user's guide, you will learn how to operate the MEGA65, write programs, add additional software, and extend hardware capabilities. What won't be immediately obvious is that along the journey, you will also learn about the history of computing as you explore the many facets of BASIC version 65 and operating system commands.

Computer graphics and music make computing more fun, and we designed the MEGA65 to be fun! In this user's guide, you will learn how to write programs using the MEGA65's built-in **graphics** and **sound** capabilities. But you don't need to be a programmer to have fun with the MEGA65. Because the MEGA65 includes a complete Commodore® 64™<sup>2</sup>, it can also run thousands of existing games, utilities, and business software packages, as well as new programs being written today by Commodore computer enthusiasts. Excitement for the MEGA65 will grow as we all witness the programming marvels our MEGA65 community create, as they (and you!) discover and master the powerful capabilities of this modern Commodore computer recreation. Together, we can build a new "homebrew" community, teeming with software

---

<sup>1</sup>Commodore is a trademark of C= Holdings

<sup>2</sup>Commodore 64 is a trademark of C= Holdings

and projects that push the MEGA65's capabilities far beyond what anyone thought would be possible.

We welcome you on this journey! Thank you for becoming a part of the MEGA65 community of users, programmers, and enthusiasts!

## OTHER BOOKS IN THIS SERIES

This book is one of several within the MEGA65 documentation suite. The series includes:

- **The MEGA65 User's Guide**

Provides an introduction to the MEGA65, and a condensed BASIC 65 command reference

- **The MEGA65 BASIC 65 Reference**

Comprehensive documentation of all BASIC 65 commands, functions and operators

- **The MEGA65 Chipset Reference**

Detailed documentation about the MEGA65 and C65's custom chips

- **The MEGA65 Developer's Guide**

Information for developers who wish to write programs for the MEGA65

- **The MEGA65 Complete Compendium**

(Also known as **The MEGA65 Book**)

All volumes in a single huge PDF for easy searching. 1200 pages and growing!

## COME JOIN US!

Get involved, learn more about your MEGA65, and join us online at:

- <https://mega65.org/chat>
- <https://mega65.org/forum>

# CHAPTER 2

## BASIC 65 Command Reference

- **Commands, Functions, and Operators**
- **BASIC Command Reference**



# COMMANDS, FUNCTIONS, AND OPERATORS

This appendix describes each of the commands, functions, and other callable elements of BASIC 65, which is an enhanced version of BASIC 10. Some of these can take one or more arguments, which are pieces of input that you provide as part of the command or function call, to help describe what you want to achieve. Some also require that you use special words.

Below is an example of how commands, functions, and operators (all of which are also known as keywords) will be described in this appendix.

**KEY** number, string

Here, **KEY** is a *keyword*. Keywords are special words that BASIC understands. In this manual, keywords are always written in **BOLD CAPITALS**, so that you can easily recognise them.

The “number” and “string” (in non-bold text) are examples of *arguments*. You replace these with values or algebraic phrases (*expressions*) that represent the data that controls the command’s behavior.

Punctuation and other letters in bold text represent other characters that are typed as they appear. In this example, a comma must appear between the number argument and the string argument.

Here is an example of using the **KEY** command based on this pattern:

```
KEY 8,"LIST"+CHR$(13)
```

When you see square brackets around arguments, this indicates that the arguments are optional. You are not meant to type the square brackets. Consider this description of the **CIRCLE** command, which accepts optional arguments:

**CIRCLE** xc, yc, radius [, flags , start, stop]

The following examples of the **CIRCLE** command are both valid. They have different behavior based on their different arguments.

```
CIRCLE 100,150,30
```

```
CIRCLE 100,150,30,0,45,135
```

This arrangement of keywords, symbols, and arguments is called *syntax*. If you leave something out, or put the wrong thing in the wrong place, the computer will fail to understand the command and report a *syntax error*.

There is nothing to worry about if you get an error from the MEGA65. It is just the MEGA65's way of telling you that something isn't quite right, so that you can more easily find and fix the problem. For example, if you omit the comma in the **KEY** command, or replace it with a period, the MEGA65 will respond with a **?SYNTAX ERROR:**

```
READY.  
KEY 8" FISH"  
  
?SYNTAX ERROR  
READY.  
KEY 8." FISH"  
  
?SYNTAX ERROR  
READY.
```

Expressions can be a number value such as `23.7`, a string value such as `"HELLO"`, or a more complex calculation that combines values, functions, and operators to describe a number or string value: `"LIST"+CHR$(13)`

It is important to use the correct type of expression when writing your programs. If you accidentally use the wrong type, the MEGA65 will display a `?TYPE MISMATCH ERROR`, to say that the type of expression you gave doesn't match what it expected. For example, the following command results in a `?TYPE MISMATCH ERROR`, because `"POTATO"` is a string expression, and a numeric expression is expected:

```
KEY "POTATO", "SOUP"
```

Commands are statements that you can use directly from the `READY.` prompt, or from within a program, for example:

```
READY.  
PRINT "HELLO"  
HELLO  
  
READY.  
10 PRINT "HELLO"  
RUN  
HELLO
```

You can place a sequence of statements within a single line by separating them with colons, for example:

```
PRINT "HELLO" : PRINT "HOW ARE YOU?" : PRINT "HOW IS THE WEATHER?"  
HELLO  
HOW ARE YOU?  
HOW IS THE WEATHER?
```

## Direct Mode Commands

Some commands only work in **direct mode** (sometimes called “immediate mode”). This means that the command can’t be part of a BASIC program, but can be entered directly to the screen. For example, the **RENUMBER** command only works in direct mode, because its function is to renumber the lines of a BASIC program.

In the two **PRINT** examples above, the first was entered in direct mode, whereas the second one was part of a program. The **PRINT** command works in both immediate mode and in a program.

## Command Syntax Descriptions

The following table describes the other symbols found in command syntax descriptions.

Symbol	Meaning
[ ]	Optional
...	The bracketed syntax can be repeated zero or more times
<   >	Include one of the choices
[   ]	Optionally include one of the choices
{ , }	One or more of the arguments is required. The commas to the left of the last argument included are required. Trailing commas must be omitted. See <b>CURSOR</b> for an example.
[{ , }]	Similar to { , } but all arguments can be omitted

## Fonts

Examples of text that appears on the screen, either typed by you or printed by the MEGA65, appear in the screen font: "LIST"+CHR\$(13)

## BASIC 65 Constants

Values that are typed directly into an expression or program are called *constants*. The values are “constant” because they do not change based on other aspects of the program state.

The following are types of constants that can appear in a BASIC 65 expression.

Type	Example	Example
Decimal Integer	32000	-55
Decimal Fixed Point	3.14	-7654.321
Decimal Floating Point	1.5E03	7.7E-02
Hex	\$0020	\$FF
String	"X"	"TEXT"

## BASIC 65 Variables

A program manipulates data by storing values in the computer’s memory, referring to stored values, and updating them based on logic. In BASIC, elements of memory that store values are called *variables*. Each variable has a name, there are separate sets of variable names for each type of value.

For example, the variable `AA` can store a number value. The variable `AA$` can store a string value. Commodore BASIC considers these to be separate variables, even though the names both begin with `AA`.

One way to store a value in a variable is with the assignment = operator. For example:

```
AA = 1.95  
AA$ = "HELLO, "
```

Variable names must start with a letter, and contain only letters and numbers. They can be of any length, but Commodore BASIC only recognizes the first two letters of the name. `SPEED` and `SP` would be considered the same variable.

Variable names cannot contain any of the BASIC keywords. This makes using long names difficult: it is easy to use a keyword accidentally. For example, `ENFORCEMENT` is not a valid variable name, because `FOR` is a keyword. It is common to use short variable names to avoid these hazards.

A variable can be used within an expression with other constants, variables, functions, and operators. It is substituted with the value that it contains at that point in the program’s execution.

```
10 INPUT "WHAT IS YOUR NAME";NA$  
20 MSG$ = "HELLO, "+NA$+"!"  
20 PRINT MSG$
```

Unlike some programming languages, BASIC variables do not need to be declared before use. A variable has a default value of zero for number type variables, or the empty string ("") for string type variables.

A variable that stores a single value is also known as a *scalar variable*. The scalar variable types and their value ranges are as follows.

Type	Name Symbol	Range	Example
Byte	&	0 .. 255	B& = 23
Integer	%	-32768 .. 32767	I% = 5
Real	none	-1E37 .. 1E37	X# = 1/3
String	\$	length = 0 .. 255	AB\$ = "TEXT"

A variable whose name is a single letter followed by the type symbol (or no symbol for real number variables) is a *fast variable*. BASIC 65 stores the variable in a way that makes it faster to access or update the value than variables with longer names. It otherwise behaves like any other variable. This is also true for functions defined by **DEF FN**.

## BASIC 65 Arrays

In addition to scalar variables, Commodore BASIC also supports a type of variable that can store multiple values, called an *array*.

The following example stores three string values in an array, then uses a **FOR** loop to **PRINT** a message for each element:

```
10 DIM NA$(3)  
20 NA$(0) = "DEFT"  
30 NA$(1) = "GARDNERS"  
40 NA$(2) = "LYDON"  
50 FOR I=0 TO 3  
60 PRINT "HELLO, ";NA$(I);!"  
70 NEXT I
```

Each value in an array is referenced by the name of the array variable and an integer index. For example, **AA(7)** refers to the element of the array named **AA()** with index 7. Indexes are “zero-based:” the first element in the array has an index of 0. The index can be a numeric expression, which can be a powerful way to operate on multiple elements of data.

All values in an array must be of the same type. The type is indicated in the name of the variable, similar to scalar variables. `##()` is an array of real numbers, `##$()` is an array of strings.

Array variable names are considered separate from scalar variable names. The scalar variable `#` has no relationship to the array variable `##()`.

BASIC needs to know the maximum size of the array before its first use, so that it can allocate the memory for the complete array. A program can declare an array's size using the **DIM** keyword, with the "dimensions" of the array. If an array variable is used without an explicit declaration, BASIC allocates a one-dimensional array of 10 elements, and the array cannot be re-dimensioned later (unless you **CLR** all variables).

An array can have multiple dimensions, each with its own index separated by a comma. The array must be declared with the maximum value for each dimension. Keep in mind that BASIC 65 allocates memory for the entire array, so large arrays may be constrained by available memory.

```
DIM B0$(3,3)
B0$(1,1) = "X"
B0$(0,0) = "0"
B0$(0,2) = "X"
B0$(1,0) = "0"
```

## Screen Text and Colour Arrays

A BASIC 65 program can place text on the screen in several ways. The **PRINT** command displays a string at the current cursor location, which is especially useful for terminal-like output. The **CURSOR** command moves the cursor to a given position. A program can use these commands together to draw pictures or user interfaces.

A program can access individual characters on the screen using the special built-in arrays **Tc&()** and **Cc&()**. These arrays are two-dimensional with indexes corresponding to the column and row of each character on the screen, starting from (0,0) at the top left corner.

**Tc&(column, row)** is the screen code of the character. Screen codes are not the same as PETSCII codes. See appendix [3 on page 279](#) for a list of screen codes.

**Cc&(column, row)** is the colour code of the character. This is an entry number of the system palette. See appendix [6 on page 299](#) for the list of colours in the default system palette. Upper bits also set text attributes, such as blinking.

Like regular arrays, the screen and colour array entries can be assigned new values, or used in expressions to refer to their current values.

```
10 FOR X=10 TO 30
20 C0&(X,2)=1
30 C0&(X,2)=INT(RND(1)*16)
40 NEXT X
50 PRINT "COLOUR AT POSITION 15: ";C0&(15,2)
```

The dimensions of these arrays depend on the current text screen mode. In  $80 \times 25$  text mode, the column is in the range 0 - 79, and the row is in the range 0 - 24. The MEGA65 also supports  $80 \times 50$  and  $40 \times 25$  text modes.

## BASIC 65 Operators

An *operator* is a symbol or keyword that performs a function in an expression. It operates on one or two sub-expressions, called *operands*. The operator and its operands evaluate to the result of the operation.

For example, the \* (asterisk) operator performs a multiplication of two number operands. The operator and its operands evaluate to the result of the multiplication.

```
A=6
PRINT A*7
```

The + (plus) operator has a different meaning depending on the type of the operands. If both operands are numbers, then the operator performs an addition of the numbers. If both operands are strings, then the operator evaluates to a new string that is the concatenation of the operands.

```
A=64
PRINT A+1

A$="MEGA"
PRINT A$+"65"
```

The - (minus) operator accepts either one operand or two operands. Given one number operand on the right-hand side, it evaluates to the negation of that number. Given two number operands, one on either side, it evaluates to the subtraction of the second operand from the first operand.

```
A=64
PRINT -A

PRINT A-16
```

The = symbol is used both as an assignment statement and as a relational operator. As an assignment, the = symbol is a statement that updates the value of a variable. The left-hand side must be a variable or array element reference, and its type must match the type of the expression on the right-hand side. The assignment is not an operator: it is not part of an expression.

```
AA=7  
NA$="DEFT"
```

As a relational operator, the = symbol behaves as an expression. It evaluates the expressions on both sides of the operator, then tests whether the values are equal. If they are equal, the equality operator evaluates to -1, BASIC's representation of "true." If they are not equal, the operator evaluates to 0, or "false." The equality expression can be used with an IF statement to control program flow, or it can be used as part of a numeric expression. Both expressions must be of the same type.

```
100 IF X=99 THEN 130  
110 X=X+1  
120 GOTO 100  
130 PRINT "DONE."
```

BASIC 65 knows the difference between assignment and equality based on context. Consider this line of code:

```
A = B = 10
```

BASIC 65 expects a statement, and notices a variable name followed by the = symbol. It concludes that this is a statement assigning a value to the number variable A. It then expects a number expression on the right-hand side of the assignment, and notices the = symbol is an operator in that expression. It concludes that the operation is an equality test, and proceeds to evaluate the expression and assign the result.

The operators **NOT**, **AND**, **OR** and **XOR** can be used either as logical operators or as boolean operators. A logical operator joins two conditional expressions as operands and evaluates to the logical comparison of their truth values.

```
IF X=99 OR Y<5 THEN 130  
IF Y>10 AND Y<20 THEN 150
```

A boolean operator accepts two number operands and performs a calculation on the bits of the binary values.

A=17

PRINT A AND 20

Unlike other cases where operators have different behaviors based on how they are used, BASIC 65 does not need to determine whether these operators are behaving as logical operators or boolean operators. Because “true” and “false” are represented by carefully chosen numbers, the logical operators have the same behavior whether their operands are conditional expressions or numbers. A “true” conditional expression is the number  $-1$ , which internally is a binary number with all bits set. The logical expression “true and false” is equivalent to the binary boolean expression  $\%....0000 \& \%....1111$ . In this case, the **AND** operator evaluates to 0, which is “false.”

Conditional expressions evaluating to numbers can be used in some clever programming tricks. Consider this example:

```
A = A - (B > 7)
```

This statement will increment the value in the **A** by 1 if the value in **B** is greater than 7. Otherwise it leaves it unchanged. If the sub-expression  $B > 7$  is true, then it evaluates to  $-1$ .  $A - (-1)$  is equivalent to  $A + 1$ . If the sub-expression is false, then it evaluates to 0, and  $A - 0$  is equivalent to **A**.

When multiple operators are used in a single expression, the order in which they are evaluated is specified by *precedence*. For example, in the statement  $A * A - B * B$ , both multiplications will be performed first, then the subtraction. As in algebra, you can use parentheses to change the order of execution. In the expression  $A * (A - B) * B$ , the subtraction is performed first.

The complete set of operators and their order of precedence are summarised in the sections that follow.

### Assignment Statement

Symbol	Description	Examples
=	Assignment	$A = 42$ , $A\$ = "HELLO"$ , $A = B < 42$

### Unary Mathematical Operators

Name	Symbol	Description	Example
Plus	+	Positive sign	$A = +42$
Minus	-	Negative sign	$B = -42$

## Binary Mathematical Operators

Name	Symbol	Description	Example
Plus	+	Addition	$A = B + 42$
Minus	-	Subtraction	$B = A - 42$
Asterisk	*	Multiplication	$C = A * B$
Slash	/	Division	$D = B / 13$
Up Arrow	$\uparrow$	Exponentiation	$E = 2 \uparrow 10$
Left Shift	$\ll$	Left Shift	$A = B \ll 2$
Right Shift	$\gg$	Right Shift	$A = B \gg 1$

NOTE: The  $\uparrow$  character used for exponentiation is entered with , which is next to

**RESTORE**

## Relational Operators

Symbol	Description	Example
$>$	Greater Than	$A > 42$
$\geq$	Greater Than or Equal To	$B \geq 42$
$<$	Less Than	$A < 42$
$\leq$	Less Than or Equal To	$B \leq 42$
$=$	Equal	$A = 42$
$\neq$	Not Equal	$B \neq 42$

## Logical Operators

Keyword	Description	Example
AND	And	$A > 42 \text{ AND } A < 84$
OR	Or	$A > 42 \text{ OR } A = 0$
XOR	Exclusive Or	$A > 42 \text{ XOR } B > 42$
NOT	Negation	$C = \text{NOT } A > B$

## Boolean Operators

Keyword	Description	Example
AND	And	$A = B \text{ AND } \$FF$
OR	Or	$A = B \text{ OR } \$80$
XOR	Exclusive Or	$A = B \text{ XOR } 1$
NOT	Negation	$A = \text{NOT } 22$

## String Operator

Name	Symbol	Description	Operand type	Example
Plus	+	Concatenates Strings	String	A\$ = B\$ + ",PRG"

## Operator Precedence

Precedence	Operators
High	↑ + - (Unary Mathematical) * / + - (Binary Mathematical) << >> (Arithmetic Shifts) ( ( = ) ) = = () NOT AND OR XOR
Low	

## Keywords And Tokens Part 1

*	AC	COLLECT	F3	EXP	BD
+	AA	COLLISION	FE17	FAST	FE25
-	AB	COLOR	E7	FGOSUB	FE48
/	AD	CONCAT	FE13	FGOTO	FE47
<	B3	CONT	9A	FILTER	FE03
<<	FE52	COPY	F4	FIND	FE2B
=	B2	COS	BE	FN	A5
>	B1	CURSOR	FE41	FONT	FE46
>>	FE53	CUT	E4	FOR	81
ABS	B6	DATA	83	BACKGROUND	FE39
AND	AF	DCLEAR	FE15	FORMAT	FE37
APPEND	FEOE	DCLOSE	FEOF	FRE	B8
ASC	C6	DEC	D1	FREAD#	FE1C
ATN	C1	DEF	96	FREEZER	FE4A
AUTO	DC	DELETE	F7	FWRITE#	FE1E
BACKGROUND	FE3B	DIM	86	GCOPY	FE32
BACKUP	F6	DIR	EE	GET	A1
BANK	FE02	DISK	FE40	GO	CB
BEGIN	FE18	DLOAD	F0	GOSUB	8D
BEND	FE19	DMA	FE1F	GOTO	89
BIT	FE4E	DMODE	FE35	GRAPHIC	DE
BLOAD	FE11	DO	EB	HEADER	F1
BOOT	FE1B	DOPEN	FE0D	HELP	EA
BORDER	FE3C	DOT	FE4C	HEX\$	D2
BOX	E1	DPAT	FE36	HIGHLIGHT	FE3D
BSAVE	FE10	DSAVE	EF	IF	8B
BUMP	CE03	DVERIFY	FE14	INFO	FE4D
BVERIFY	FE28	ECTORY	FE29	INPUT	85
CATALOG	FE0C	EDIT	FE45	INPUT#	84
CHANGE	FE2C	EDMA	FE21	INSTR	D4
CHAR	E0	ELLIPSE	FE30	INT	B5
CHDIR	FE4B	ELSE	D5	JOY	CF
CHR\$	C7	END	80	KEY	F9
CIRCLE	E2	ENVELOPE	FEOA	LEFT\$	C8
CLOSE	A0	ERASE	FE2A	LEN	C3
CLR	9C	ERR\$	D3	LET	88
CMD	9D	EXIT	ED	LINE	E5

## Keywords And Tokens Part 2

LIST	9B	PRINT	99	SOUND	DA
LOAD	93	PRINT#	98	SPC(	A6
LOADIFF	FE43	PUDEF	DD	SPEED	FE26
LOCK	FE50	RCOLOR	CD	SPRCOLOR	FE08
LOG	BC	RCURSOR	FE42	SPRITE	FE07
LOG10	CE08	READ	87	SPRSAV	FE16
LOOP	EC	RECORD	FE12	SQR	BA
LPEN	CE04	REM	8F	STEP	A9
MEM	FE23	RENAME	F5	STOP	90
MERGE	E6	RENUMBER	F8	STR\$	C4
MID\$	CA	RESTORE	8C	SYS	9E
MKDIR	FE51	RESUME	D6	TAB(	A3
MOD	CEOB	RETURN	8E	TAN	CO
MONITOR	FA	RGRAPHIC	CC	TEMPO	FE05
MOUNT	FE49	RIGHT\$	C9	THEN	A7
MOUSE	FE3E	RMOUSE	FE3F	TO	A4
MOVSPR	FE06	RND	BB	TRAP	D7
NEW	A2	RPALETTE	CE0D	TROFF	D9
NEXT	82	RPEN	DO	TRON	D8
NOT	A8	RPLAY	CEO F	TYPE	FE27
OFF	FE24	RREG	FE09	UNLOCK	FE4F
ON	91	RSPCOLOR	CE07	UNTIL	FC
OPEN	9F	RSPEED	CEO E	USING	FB
OR	B0	RSPPOS	CE05	USR	B7
PAINT	DF	RSprite	CE06	VAL	C5
PALETTE	FE34	RUN	8A	VERIFY	95
PASTE	E3	RWINDOW	CE09	VIEWPORT	FE31
PEEK	C2	SAVE	94	VOL	DB
PEN	FE33	SAVEIFF	FE44	VSYNC	FE54
PIXEL	CEO C	SCNCLR	E8	WAIT	92
PLAY	FE04	SCRATCH	F2	WHILE	FD
POINTER	CEO A	SCREEN	FE2E	WINDOW	FE1A
POKE	97	SET	FE2D	WPEEK	CE10
POLYGON	FE2F	SGN	B4	WPOKE	FE1D
POS	B9	SIN	BF	XOR	E9
POT	CE02	SLEEP	FEOB	~	AE

## Tokens And Keywords Part 1

80 END	A5 FN	CA MID\$
81 FOR	A6 SPC(	CB GO
82 NEXT	A7 THEN	CC RGRAPHIC
83 DATA	A8 NOT	CD RCOLOR
84 INPUT#	A9 STEP	CF JOY
85 INPUT	AA +	DO RPEN
86 DIM	AB -	D1 DEC
87 READ	AC *	D2 HEX\$
88 LET	AD /	D3 ERR\$
89 GOTO	AE ^	D4 INSTR
8A RUN	AF AND	D5 ELSE
8B IF	B0 OR	D6 RESUME
8C RESTORE	B1 >	D7 TRAP
8D GOSUB	B2 =	D8 TRON
8E RETURN	B3 <	D9 TROFF
8F REM	B4 SGN	DA SOUND
90 STOP	B5 INT	DB VOL
91 ON	B6 ABS	DC AUTO
92 WAIT	B7 USR	DD PUDEF
93 LOAD	B8 FRE	DE GRAPHIC
94 SAVE	B9 POS	DF PAINT
95 VERIFY	BA SQR	E0 CHAR
96 DEF	BB RND	E1 BOX
97 POKE	BC LOG	E2 CIRCLE
98 PRINT#	BD EXP	E3 PASTE
99 PRINT	BE COS	E4 CUT
9A CONT	BF SIN	E5 LINE
9B LIST	CO TAN	E6 MERGE
9C CLR	C1 ATN	E7 COLOR
9D CMD	C2 PEEK	E8 SCNCLR
9E SYS	C3 LEN	E9 XOR
9F OPEN	C4 STR\$	EA HELP
A0 CLOSE	C5 VAL	EB DO
A1 GET	C6 ASC	EC LOOP
A2 NEW	C7 CHR\$	ED EXIT
A3 TAB(	C8 LEFT\$	EE DIR
A4 TO	C9 RIGHT\$	EF DSAVE

## Tokens And Keywords Part 2

F0 DLOAD	FE09 RREG	FE2F POLYGON
F1 HEADER	FE0A ENVELOPE	FE30 ELLIPSE
F2 SCRATCH	FE0B SLEEP	FE31 VIEWPORT
F3 COLLECT	FE0C CATALOG	FE32 GCOPY
F4 COPY	FE0D DOPEN	FE33 PEN
F5 RENAME	FE0E APPEND	FE34 PALETTE
F6 BACKUP	FE0F DCLOSE	FE35 DMODE
F7 DELETE	FE10 BSAVE	FE36 DPAT
F8 RENUMBER	FE11 BLOAD	FE37 FORMAT
F9 KEY	FE12 RECORD	FE39 FOREGROUND
FA MONITOR	FE13 CONCAT	FE3B BACKGROUND
FB USING	FE14 DVERIFY	FE3C BORDER
FC UNTIL	FE15 DCLEAR	FE3D HIGHLIGHT
FD WHILE	FE16 SPRSAV	FE3E MOUSE
CEO2 POT	FE17 COLLISION	FE3F RMOUSE
CEO3 BUMP	FE18 BEGIN	FE40 DISK
CEO4 LPEN	FE19 BEND	FE41 CURSOR
CEO5 RSPPPOS	FE1A WINDOW	FE42 RCURSOR
CEO6 RSPRITE	FE1B BOOT	FE43 LOADIFF
CEO7 RSPCOLOR	FE1C FREAD#	FE44 SAVEIFF
CEO8 LOG10	FE1D WPOKE	FE45 EDIT
CEO9 RWINDOW	FE1E FWRITE#	FE46 FONT
CEOA POINTER	FE1F DMA	FE47 FGOTO
CEOB MOD	FE21 EDMA	FE48 FGOSUB
CEOCE PIXEL	FE23 MEM	FE49 MOUNT
CEOED RPALETTE	FE24 OFF	FE4A FREEZER
CEOEE RSPEED	FE25 FAST	FE4B CHDIR
CEOEF RPLAY	FE26 SPEED	FE4C DOT
CE10 WPEEK	FE27 TYPE	FE4D INFO
FEO2 BANK	FE28 BVERIFY	FE4E BIT
FEO3 FILTER	FE29 ECTORY	FE4F UNLOCK
FEO4 PLAY	FE2A ERASE	FE50 LOCK
FEO5 TEMPO	FE2B FIND	FE51 MKDIR
FEO6 MOVSPR	FE2C CHANGE	FE52 <<
FEO7 SPRITE	FE2D SET	FE53 >>
FEO8 SPRCOLOR	FE2E SCREEN	FE54 VSYNC

# BASIC COMMAND REFERENCE

# **ABS**

**Token:** \$B6

**Format:** **ABS(x)**

**Returns:** The absolute value of the numeric argument **x**.

**x** numeric argument (integer or real expression)

**Remarks:** The result is of type real.

**Example:** Using **ABS**

```
PRINT ABS(-123)
123
PRINT ABS(4.5)
4.5
PRINT ABS(-4.5)
4.5
```

# AND

**Token:** \$AF

**Format:** operand **AND** operand

**Usage:** Performs a bit-wise logical AND operation on two 16-bit values.

Integer operands are used as they are. Real operands are converted to a signed 16-bit integer (losing precision). Logical operands are converted to 16-bit integer using \$FFFF (decimal -1) for TRUE, and \$0000 (decimal 0) for FALSE.

Expression	Result
0 AND 0	0
0 AND 1	0
1 AND 0	0
1 AND 1	1

**Remarks:** The result is of type integer. If the result is used in a logical context, the value of 0 is regarded as FALSE, and all other non-zero values are regarded as TRUE.

**Examples:** Using **AND**

```
PRINT 1 AND 3  
1  
PRINT 128 AND 64  
0
```

**AND** can be used in **IF** statements to require multiple conditions.

```
IF (C >= 0 AND C < 256) THEN PRINT "BYTE VALUE"
```

# APPEND

**Token:** \$FE \$0E

**Format:** APPEND# channel, filename [,D drive] [,U unit]

**Usage:** Opens an existing sequential file of type **SEQ** or **USR** for writing, and positions the write pointer at the end of the file.

**channel** number, where:

- **1 <= channel <= 127** line terminator is CR.
- **128 <= channel <= 255** line terminator is CR LF.

**filename** the name of a file. Either a quoted string such as "DATA", or a string expression in brackets such as (FI\$).

**drive** drive # in dual drive disk units.

The drive # defaults to **0** and can be omitted on single drive units such as the 1541, 1571, or 1581.

**unit** device number on the IEC bus. Typically in the range from 8 to 11 for disk units. If a variable is used, it must be placed in brackets. The unit # defaults to **8**.

**Remarks:** APPEND# works similarly to DOPEN#... ,W, except that the file must already exist. The content of the file is retained, and all printed text is appended to the end. Trying to APPEND to a non-existing file reports a DOS error.

**Examples:** Open existing file in append mode:

```
APPEND#5,"DATA",U9  
APPEND#130,(DD$),U(UN%)  
APPEND#3,"USER FILE,U"  
APPEND#2,"DATA BASE"
```

# ASC

**Token:** \$C6

**Format:** **ASC**(string)

**Returns:** The PETSCII code of the first character of the string argument, as a number.

**Remarks:** **ASC** returns zero for an empty string. This is different to BASIC 2, which raised an error for **ASC("")**.

The inverse function to **ASC** is **CHR\$**. Refer to the **CHR\$** function on page [48](#) for more information.

The name was apparently chosen to be a mnemonic to “ASCII,” but the returned value is a PETSCII code.

**Examples:** Using **ASC**

```
PRINT ASC("MEGA")
77
PRINT ASC("")
0
```

# ATN

**Token:** \$C1

**Format:** **ATN**(numeric expression)

**Returns:** The arc tangent of the argument.

The result is in the range  $(-\pi/2 \text{ to } \pi/2)$

**Remarks:** A multiplication of the result with  $180/\pi$  converts the value to the unit "degrees". **ATN** is the inverse function to **TAN**.

**Examples:** Using **ATN**

```
PRINT ATN(0.5)
.463647609
PRINT ATN(0.5) * 180 / pi
26.5650512
```

# AUTO

**Token:** \$DC

**Format:** **AUTO** [step]

**Usage:** Enables or disables automatic line numbering during BASIC program entry. After submitting a new program line to the BASIC editor with **RETURN**, the **AUTO** function generates a new BASIC line number for the entry of the next line. The new number is computed by adding **step** to the current line number.

**step** line number increment

Typing **AUTO** with no argument disables it.

**Examples:** Using **AUTO**

```
AUTO 10 : USE AUTO WITH INCREMENT 10
AUTO     : SWITCH AUTO OFF
```

# BACKGROUND

**Token:** \$FE \$3B

**Format:** **BACKGROUND** colour

**Usage:** Sets the background colour of the screen.

colour the palette entry number, in the range 0 - 255

All colours within this range are customisable via the **PALETTE** command.

On startup, the MEGA65 only has the first 32 colours configured. See appendix [6 on page 299](#) for the list of colours in the default system palette.

**Example:** Using **BACKGROUND**

```
BACKGROUND 3 : REM SELECT BACKGROUND COLOUR CYAN
```

# BACKUP

**Token:** \$F6

**Format:** **BACKUP U** source **TO U** target  
**BACKUP D** source **TO D** target [,U unit]

**Usage:** Copies one disk to another.

The first form of **BACKUP**, specifying units for source and target, can only be used for the drives connected to the internal FDC (Floppy Disk Controller). Units 8 and 9 are reserved for this controller. These can be either the internal floppy drive (unit 8) and another floppy drive (unit 9) attached to the same ribbon cable, or mounted D81 disk images. **BACKUP** can be used to copy from floppy to floppy, floppy to image, image to floppy and image to image, depending on image mounts and the existence of a second physical floppy drive.

The second form of **BACKUP**, specifying drives for source and target, is meant to be used for dual drive units connected to the IEC bus. For example: CBM 4040, 8050, 8250 via an IEEE-488 to IEC adapter. In this case, the backup is then done by the disk unit internally.

**source** unit or drive # of source disk.

**target** unit or drive # of target disk.

**Remarks:** The target disk will be formatted and an identical copy of the source disk will be written.

**BACKUP** cannot be used to backup from internal devices to IEC devices or vice versa.

**Examples:** Using **BACKUP**

```
BACKUP U8 TO U9      : REM BACKUP INTERNAL DRIVE 8 TO DRIVE 9
BACKUP U9 TO U8      : REM BACKUP DRIVE 9 TO INTERNAL DRIVE 8
BACKUP D8 TO D1, U10 : REM BACKUP ON DUAL DRIVE CONNECTED VIA IEC
```

# BANK

**Token:** \$FE \$02

**Format:** **BANK** bank number

**Usage:** Selects the memory configuration for BASIC commands that use 16-bit addresses. These are **LOAD**, **LOADIFF**, **PEEK**, **POKE**, **SAVE**, **SYS**, and **WAIT**. Refer to the system memory map in the *MEGA65 Book*, [System Memory Map \(Appendix I\)](#) for more information.

**Remarks:** A value > 127 selects memory mapped I/O. The default value at system startup for the bank number is 128. This configuration has RAM from \$0000 to \$1FFF, the BASIC and KERNEL ROM, and I/O from \$2000 to \$FFFF.

**Example:** Using **BANK**

```
BANK 1 :REM SELECT MEMORY CONFIGURATION 1
```

# BEGIN

**Token:** \$FE \$18

**Format:** BEGIN ... BEND

**Usage:** The beginning of a compound statement to be executed after **THEN** or **ELSE**. This overcomes the single line limitation of the standard **IF ... THEN ... ELSE** clause.

**Remarks:** Do not jump with **GOTO** or **GOSUB** into a compound statement, as it may lead to unexpected results.

**Example:** Using **BEGIN** and **BEND**

```
10 GET A$  
20 IF A$>="A" AND A$<="Z" THEN BEGIN  
30 PW$=PW$+A$  
40 IF LEN(PW$)>7 THEN 90  
50 BEND :REM IGNORE ALL EXCEPT (A-Z)  
60 IF A$<>CHR$(13) GOTO 10  
90 PRINT "PW=",PW$
```

# BEND

**Token:** \$FE \$19

**Format:** **BEGIN ... BEND**

**Usage:** The end of a compound statement to be executed after **THEN** or **ELSE**. This overcomes the single line limitation of the standard **IF ... THEN ... ELSE** clause.

**Remarks:** The example below shows a quirk in the implementation of the compound statement. If the condition evaluates to **FALSE**, execution does not resume right after **BEND** as it should, but at the beginning of the next line. Test this behaviour with the following program:

**Example:** Using **BEGIN** and **BEND**

```
10 IF Z > 1 THEN BEGIN:A$="ONE"  
20 B$="TWO"  
30 PRINT A$;" ";B$;:BEND:PRINT " QUIRK"  
40 REM EXECUTION RESUMES HERE FOR Z <= 1
```

# BLOAD

**Token:** \$FE \$11

**Format:** **BLOAD** filename [,B bank] [,P address] [,R] [,D drive] [,U unit]

**Usage:** Loads a file of type **PRG** into RAM at address P. ("Binary load.")

**BLOAD** has two modes: The flat memory address mode can be used to load a program to any address in the 28-bit (256MB) address range where RAM is installed. This includes the standard RAM banks 0 to 5, as well as the 8MB of "attic RAM" at address \$8000000.

This mode is triggered by specifying an address at parameter P that is larger than \$FFFF. The bank parameter is ignored in this mode.

For compatibility reasons with older BASIC versions, **BLOAD** accepts the syntax with a 16-bit address at P and a bank number at B as well. The attic RAM is out of range for this compatibility mode.

The optional parameter **R** (RAW MODE) does not interpret or use the first two bytes of the program file as the load address, which is otherwise the default behaviour. In RAW MODE every byte is read as data.

**filename** the name of a file. Either a quoted string such as "**DATA**", or a string expression in brackets such as **(F1\$)**.

**bank** specifies the RAM bank to be used. If not specified, the current bank, as set with the last **BANK** statement will be used.

**address** overrides the load address that is stored in the first two bytes of the **PRG** file.

**drive** drive # in dual drive disk units.

The drive # defaults to **0** and can be omitted on single drive units such as the 1541, 1571, or 1581.

**unit** device number on the IEC bus. Typically in the range from 8 to 11 for disk units. If a variable is used, it must be placed in brackets. The unit # defaults to **8**.

**Remarks:** **BLOAD** cannot cross bank boundaries.

**BLOAD** uses the load address from the file if no P parameter is given.

**Examples:** Using **BLOAD**

```
BLOAD "ML DATA", B0, U9
BLOAD "SPRITES"
BLOAD "ML ROUTINES", B1, P32768
BLOAD (FI$), B(BA%), P(PA), U(UN%)
BLOAD "CHUNK",P($8000000)      :REM LOAD TO ATTIC RAM
```

# BOOT

**Token:** \$FE \$1B

**Format:** **BOOT** filename [,**B** bank] [,**P** address] [,**D** drive] [,**U** unit]

**BOOT SYS**

**BOOT**

**Usage:** Loads and runs a program or boot sector from a disk.

**BOOT filename** loads a file of type **PRG** into RAM at address **P** and bank **B**, and starts executing the code at the load address.

**BOOT SYS** loads the boot sector (512 bytes in total) from sector 0, track 1 and unit 8 to address \$0400 in bank 0, and performs a **JSR \$0400** afterwards (Jump To Subroutine).

**BOOT** with no parameters attempts to load and execute a file named AUTOBOOT.C65 from the default unit 8. It's short for **RUN "AUTO-BOOT.C65"**.

**filename** the name of a file. Either a quoted string such as "**DATA**", or a string expression in brackets such as **(F1\$)**.

**bank** specifies the RAM bank to be used. If not specified, the current bank, as set with the last **BANK** statement, will be used.

**address** overrides the load address, that is stored in the first two bytes of the **PRG** file.

**drive** drive # in dual drive disk units.

The drive # defaults to **0** and can be omitted on single drive units such as the 1541, 1571, or 1581.

**unit** device number on the IEC bus. Typically in the range from 8 to 11 for disk units. If a variable is used, it must be placed in brackets. The unit # defaults to **8**.

**Examples:** Using **BOOT**

```
BOOT SYS
BOOT (F1$), B(BA%), P(PA), U(UN%)
BOOT
```

# BORDER

**Token:** \$FE \$3C

**Format:** **BORDER** colour

**Usage:** Sets the border colour of the screen.

colour the palette entry number, in the range 0 - 255

All colours within this range are customisable via the **PALETTE** command.  
See appendix [6 on page 299](#) for the list of colours in the default system palette.

**Example:** Using **BORDER**

```
10 BORDER 4 : REM SELECT BORDER COLOUR PURPLE
```

# BOX

**Token:** \$E1

**Format:** **BOX** x0,y0, x2,y2 [, solid]  
**BOX** x0,y0, x1,y1, x2,y2, x3,y3 [, solid]

**Usage:** Bitmap graphics: draws a box.

The first form of **BOX** with two coordinate pairs and an optional **solid** parameter draws a simple rectangle, assuming that the coordinate pairs declare two diagonally opposite corners.


The second form with four coordinate pairs declares a path of four points, which will be connected with lines. The path is closed by connecting the last coordinate with the first.

The quadrangle is drawn using the current drawing context set with **SCREEN**, **PALETTE** and **PEN**. The quadrangle is filled if the parameter **solid** is not 0.


**Remarks:** **BOX** can be used with four coordinate pairs to draw any shape that can be defined with four points, not only rectangles. For example rhomboids, kites, trapezoids and parallelograms. It is also possible to draw bow tie shapes.

**Examples:** Using **BOX**

```
BOX 0,0, 160,0, 160,80, 0,80
```

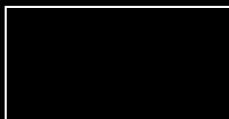

```
BOX 0,0, 160,80, 160,0, 0,80
```

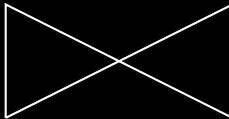

BOX 20,0, 140,0, 160,80, 0,00



# BSAVE

**Token:** \$FE \$10

**Format:** **BSAVE** filename, **P** start **TO** **P** end [,**B** bank] [,**D** drive] [,**U** unit]

**Usage:** Saves a memory range to a file of type **PRG**. ("Binary save.")

**BSAVE** has two modes: The flat memory address mode can be used to save a memory block in the 28-bit (256MB) address range where RAM is installed. This includes the standard RAM banks 0 to 5, as well as the 8MB of "attic RAM" at address \$8000000.

This mode is triggered by specifying addresses for the start and end parameter **P**, that are larger than \$FFFF. The bank parameter is ignored in this mode. This flat memory mode allows saving ranges greater than 64K.

For compatibility reasons with older BASIC versions, **BSAVE** accepts the syntax with 16-bit addresses at **P** and a bank number at **B** as well. The attic RAM is out of range for this compatibility mode. This mode cannot cross bank boundaries, so start and end address must be in the same bank.

**filename** the name of a file. Either a quoted string such as "DATA", or a string expression in brackets such as (F1\$). If the first character of the filename is an at sign '@', it is interpreted as a "save and replace" operation. It is not recommended to use this option on 1541 and 1571 drives, as they contain a "save and replace bug" in their DOS.

**start** the first address, where the saving begins. It also becomes the load address, which is stored in the first two bytes of the **PRG** file.

**end** address where the saving ends. **end-1** is the last address to be used for saving.

**bank** the RAM bank to be used. If not specified, the current bank, as set with the last **BANK** statement, will be used.

**drive** drive # in dual drive disk units.

The drive # defaults to **0** and can be omitted on single drive units such as the 1541, 1571, or 1581.

**unit** device number on the IEC bus. Typically in the range from 8 to 11 for disk units. If a variable is used, it must be placed in brackets. The unit # defaults to **8**.

**Remarks:** The length of the file is **end - start + 2**.  
If the number after an argument letter is not a decimal number, it must be set in parenthesis, as shown in the third and fourth line of the examples.

The **PRG** file format that is used by **BSAVE** requires the load address to be written to the first two bytes. If the saving is done with a bank number that is not zero, or a start address greater than \$FFFF, this information will not fit. For compatibility reasons, only the two low order bytes are written. Loading the file with the **BLOAD** command will then require the full 16-bit range of the load address as a parameter.

**Examples:** Using **BSAVE**

```
BSAVE "ML DATA", P 32768 TO P 33792, B8, U9  
BSAVE "SPRITES", P 1536 TO P 2058  
BSAVE "ML ROUTINES", B1, P($9000) TO P($A000)  
BSAVE (F1$), B(BX%), P(PA) TO P(PE), U(UN%)
```

# BUMP

**Token:** \$CE \$03

**Format:** **BUMP**(type)

**Returns:** A bitfield of sprites currently colliding with other sprites (type=1) or screen data (type=2).

Each bit set in the returned value indicates that the sprite corresponding to that bit position was involved in a collision since the last call of **BUMP**. Calling **BUMP** resets the collision mask, so you will always get a summary of collisions encountered since the last call of **BUMP**.

**Remarks:** It's possible to detect multiple collisions, but you will need to evaluate the sprite coordinates to detect which sprites have collided.

**Example:** Using **BUMP**

```
10 SX = BUMP(1) : REM SPRITE-SPRITE COLLISION
20 IF (SX AND 6) = 6 THEN PRINT "SPRITE 1 & 2 COLLISION"
30 REM ---
40 SX = BUMP(2) : REM SPRITE-DATA COLLISION
50 IF (SX <> 0) THEN PRINT "SOME SPRITE HIT DATA REGION"
```

Sprite	Return	Mask
0	1	0000 0001
1	2	0000 0010
2	4	0000 0100
3	8	0000 1000
4	16	0001 0000
5	32	0010 0000
6	64	0100 0000
7	128	1000 0000

# BVERIFY

**Token:** \$FE \$28

**Format:** **BVERIFY** filename [,P address] [,B bank] [,D drive] [,U unit]

**Usage:** Compares a memory range to a file of type **PRG**. ("Binary verify.")

**filename** the name of a file. Either a quoted string such as "DATA", or a string expression in brackets such as (FI\$).

**bank** specifies the RAM bank to be used. If not specified, the current bank, as set with the last **BANK** statement, will be used.

**address** is the address where the comparison begins. If the parameter P is omitted, it is the load address that is stored in the first two bytes of the **PRG** file that will be used.

**drive** drive # in dual drive disk units.

The drive # defaults to **0** and can be omitted on single drive units such as the 1541, 1571, or 1581.

**unit** device number on the IEC bus. Typically in the range from 8 to 11 for disk units. If a variable is used, it must be placed in brackets. The unit # defaults to **8**.

**Remarks:** **BVERIFY** can only test for equality. It gives no information about the number, or position of different valued bytes. In direct mode **BVERIFY** exits either with the message **OK** or with **VERIFY ERROR**. In program mode, a **VERIFY ERROR** either stops execution or enters the **TRAP** error handler, if active.

**Examples:** Using **BVERIFY**

```
BVERIFY "ML DATA", P 32768, B0, U9  
BVERIFY "SPRITES", P 1536  
BVERIFY "ML ROUTINES", B1, P(DEC("9000"))  
BVERIFY (FI$), B(BA%), P(PA), U(UN%)
```

# CATALOG

**Token:** \$FE \$0C

**Format:** **CATALOG** [filepattern] [,W] [,R] [,D drive] [,U unit]  
\$ [filepattern] [,W] [,R] [,D drive] [,U unit]

**Usage:** Prints a file catalog/directory of the specified disk.

The **W** (Wide) parameter lists the directory three columns wide on the screen and pauses after the screen has been filled with a page (63 directory entries). Pressing any key displays the next page.

The **R** (Recoverable) parameter includes files in the directory which are flagged as deleted but still recoverable.

**filepattern** is either a quoted string, for example: "D\\*" or a string expression in brackets, e.g. (DI\$)

**drive** drive # in dual drive disk units.

The drive # defaults to **0** and can be omitted on single drive units such as the 1541, 1571, or 1581.

**unit** device number on the IEC bus. Typically in the range from 8 to 11 for disk units. If a variable is used, it must be placed in brackets. The unit # defaults to **8**.

**Remarks:** **CATALOG** is a synonym of **DIRECTORY** and **DIR**, and produces the same listing. The **filepattern** can be used to filter the listing. The wildcard characters \* and ? may be used. Adding ,T= to the pattern string, with **T** specifying a filetype of **P**, **S**, **U** or **R** (for **PRG**, **SEQ**, **USR**, **REL**) filters the output to that filetype.

The shortcut symbol **\$** can only be used in direct mode.

**Examples:** Using **CATALOG**

```
CATALOG
0 "BLACK SMURF      " BS 2A
508 "STORY PHOBOS"   SEQ
27  "C8096"          PRG
25  "C128"           PRG
104 BLOCKS FREE.
```

```
CATALOG "*,T=S"
0 "BLACK SMURF"    " BS 2A
508 "STORY PHOBOS"   SEQ
104 BLOCKS FREE.
```

Below is an example showing how a directory looks with the **wide** parameter:

DIR W					
0 "BASIC EXAMPLES "					
1 "BEGIN"	P	1 "FREAD"	P	2 "PAINT.COR"	P
1 "BEND"	P	1 "FRE"	P	3 "PALETTE.COR"	P
1 "BUMP"	P	2 "GET#"	P	1 "PEEK"	P
1 "CHAR"	P	1 "GETKEY"	P	3 "PEN"	P
1 "CHRS"	P	1 "GET"	P	1 "PLAY"	P
4 "CIRCLE"	P	2 "GOSUB"	P	2 "POINTER"	P
1 "CLOSE"	P	2 "GOTO.COR"	P	1 "POKE"	P
1 "CLR"	P	2 "GRAPHIC"	P	1 "POS"	P
2 "COLLISION"	P	1 "HELP"	P	1 "POT"	P
1 "CURSOR"	P	1 "IF"	P	1 "PRINT#"	P
0 "DATA BASE"	R	2 "INPUT#"	P	1 "PRINT"	P
1 "DATA"	P	2 "INPUT"	P	1 "RCOLOR.COR"	P
1 "DEF FN"	P	2 "JOY"	P	1 "READ"	P
1 "DIM"	P	1 "LINE INPUT#"	P	1 "RECORD"	P
1 "DO"	P	3 "LINE"	P	1 "REM"	P
5 "ELLIPSE"	P	1 "LOOP"	P	1 "RESTORE"	P
1 "ELSE"	P	1 "MIDS"	P	1 "RESUME"	P
1 "EL"	P	1 "MOD"	P	1 "RETURN"	P
1 "ENVELOPE"	P	1 "MOUSPR"	P	1 "REVERS"	S
2 "EXIT"	P	1 "NEXT"	P	3 "RGRAPHIC"	P
1 "FOR"	P	2 "ON"	P	1 "RMOUSE"	P

# CHANGE

**Token:** \$FE \$2C

**Format:** **CHANGE** /findstring/ **TO** /replacestring/ [, line range]

**CHANGE** "findstring" **TO** "replacestring" [, line range]

**Usage:** Edits the BASIC program that is currently in memory to replace all instances of one string with another.

An optional **line range** limits the search to this range, otherwise the entire BASIC program is searched. At each occurrence of the **findstring**, the line is listed and the user is prompted for an action:

- **Y** **RETURN** perform the replace and find the next string
- **N** **RETURN** do **not** perform the replace and find the next string
- **\*** **RETURN** replace the current and all following matches
- **RETURN** exit the command, and don't replace the current match

**Remarks:** Almost any character that is not part of the string, including letters and punctuation, can be used instead of **/**.

However, using the double quote character finds text strings that are not tokenised, and therefore not part of a keyword.

For example, **CHANGE** "LOOP" **TO** "OOPS" will not find the BASIC keyword **LOOP**, because the keyword is stored as a token and not as text. However **CHANGE** /LOOP/ **TO** /OOPS/ will find and replace it (possibly causing **SYNTAX ERRORS**).

Due to a limitation of the BASIC parser, **CHANGE** is unable to match the **REM** and **DATA** keywords. See **FIND**.

Can only be used in direct mode.

**Examples:** Using **CHANGE**

```
CHANGE "XX$" TO "UU$", 2000-2700
```

```
CHANGE /IN/ TO /OUT/
```

```
CHANGE &IN& TO &OUT&
```

# CHAR

**Token:** \$E0

**Format:** **CHAR** column, row, height, width, direction, string [, address of character set]

**Usage:** Bitmap graphics: displays text on a graphic screen.

**column** (in units of character positions) is the start position of the output horizontally. As each column unit is 8 pixels wide, a screen width of 320 has a column range of 0 - 39, while a screen width of 640 has a column range of 0 - 79.

**row** (in pixel units) is the start position of the output vertically. In contrast to the column parameter, its unit is in pixels (not character positions), with the top row having the value of 0.

**height** is a factor applied to the vertical size of the characters, where 1 is normal size (8 pixels), 2 is double size (16 pixels), and so on.

**width** is a factor applied to the horizontal size of the characters, where 1 is normal size (8 pixels) 2 is double size (16 pixels), and so on.

**direction** controls the printing direction:

- **1** up
- **2** right
- **4** down
- **8** left

The optional **address of character set** can be used to select a character set, different to the default character set at \$29800, which includes upper and lower case characters.

Three character sets (see also **FONT**) are available:

- **\$29000** Font A (ASCII)
- **\$3D000** Font B (Bold)
- **\$2D000** Font C (CBM)

The first part of the font (upper case / graphics) is stored at \$xx000 - \$xx7FF.

The second part of the font (lower case / upper case) is stored at \$xx800 - \$xxFFF.

**string** is a string constant or expression which will be printed. This string may optionally contain one or more of the following control characters:

Expression	Keyboard Shortcut	Description
CHR\$(2)	CTRL+B	Blank Cell
CHR\$(6)	CTRL+F	Flip Character
CHR\$(9)	CTRL+I	AND With Screen
CHR\$(15)	CTRL+O	OR With Screen
CHR\$(24)	CTRL+X	XOR With Screen
CHR\$(18)	RVSON	Reverse
CHR\$(146)	RVSOFF	Reverse Off
CHR\$(147)	CLR	Clear Viewport
CHR\$(21)	CTRL+U	Underline
CHR\$(25)+"-"	CTRL+Y + "-"	Rotate Left
CHR\$(25)+"+"	CTRL+Y + "+"	Rotate Right
CHR\$(26)	CTRL+Z	Mirror
CHR\$(157)	Cursor Left	Move Left
CHR\$(29)	Cursor Right	Move Right
CHR\$(145)	Cursor Up	Move Up
CHR\$(17)	Cursor Down	Move Down

Notice that the start position of the string has different units in the horizontal and vertical directions. Horizontal is in columns and vertical is in pixels.

Refer to the **CHR\$** function on page [48](#) for more information.

#### **Remarks:** Using **CHAR**

```
10 SCREEN 640,400,2
20 CHAR 28,180,4,4,2,"MEGA65",\$29000
30 GETKEY A$
40 SCREEN CLOSE
```

Will print the text "MEGA65" at the centre of a 640 x 400 graphic screen.

# CHARDEF

**Token:** \$E0 \$96

**Format:** **CHARDEF** index, bit-matrix

**Usage:** Changes the appearance of a character.

**index** is the screen code of the character to change (@:0, A:1, B:2, ...). See appendix [3 on page 279](#) for a list of screen codes.

**bit-matrix** is a set of 8 byte values, which define the raster representation for the character from top row to bottom row. If more than 8 values are used as arguments, the values 9 - 16 are used for the character index+1, 17 - 24 for index+2, etc.

**Remarks:** The character bitmap changes are applied to the VIC character generator, which resides in RAM at the address \$FF7E000.

All changes are volatile and the VIC character set can be restored by a reset or by using the **FONT** command.

**Examples:** Using **CHARDEF**

```
CHARDEF 1,$FF,$81,$81,$81,$81,$81,$81,$FF :REM CHANGE 'A' TO RECTANGLE  
CHARDEF 9,$18,$18,$18,$18,$18,$18,$18,$00 :REM MAKE 'I' SANS SERIF
```

# CHDIR

**Token:** \$FE \$4B

**Format:** **CHDIR** dirname [,U unit]

**Usage:** Changes the current working directory.

**dirname** the name of a directory. Either a quoted string such as "SOMEDIR", or a string expression in brackets such as (DR\$).

Dependent on the **unit**, **CHDIR** is applied to different filesystems.

**UNIT 12** is reserved for the SD-Card (FAT filesystem). This command can be used to navigate to subdirectories and mount disk images that are stored there. **CHDIR "..",U12** changes to the parent directory on **UNIT 12**.

For other units managed by CBDOS (typically 8 and 9), **CHDIR** is used to change into or out of subdirectories on floppy or disk image of type **D81**. Existing subdirectories are displayed as filetype **CBM** in the parent directory, they are created with the command **MKDIR**. **CHDIR "/" ,U unit** changes to the root directory.

**Examples:** Using **CHDIR**

```
CHDIR "ADVENTURES",U12 :REM ENTER ADVENTURES ON SD CARD
CHDIR "..",U12          :REM GO BACK TO PARENT DIRECTORY
CHDIR "RACING",U12      :REM ENTER SUBDIRECTORY RACING
0 "MEGAS5"             " 1D
800 "MEGAS5 GAMES"     CBM
800 "MEGAS5 TOOLS"     CBM
600 "BASIC PROGRAMS"   CBM
960 BLOCKS FREE.
```

```
CHDIR "MEGAS5 GAMES",U8 :REM ENTER SUBDIRECTORY ON FLOPPY DISK
CHDIR "/",U8            :REM GO BACK TO ROOT DIRECTORY
```

# CHR\$

**Token:** \$C1

**Format:** CHR\$(numeric expression)

**Returns:** A string containing one character of the given PETSCII value.

**Remarks:** The argument range is from 0 – 255, so this function may also be used to insert control codes into strings. Even the NULL character, with code 0, is allowed.

CHR\$ is the inverse function to ASC. The complete table of characters (and their PETSCII codes) is on page [283](#).

**Example:** Using CHR\$

```
10 QUOTE$ = CHR$(34)
20 ESCAPE$ = CHR$(27)
30 PRINT QUOTE$;"MEGA65";QUOTE$ : REM PRINT "MEGA65"
40 PRINT ESCAPE$;"Q";      : REM CLEAR TO END OF LINE
```

# CIRCLE

**Token:** \$E2

**Format:** **CIRCLE** xc, yc, radius [, flags , start, stop]

**Usage:** Bitmap graphics: draws a circle.

This is a special case of **ELLIPSE**, using the same value for horizontal and vertical radius.

**xc** the x coordinate of the centre in pixels

**yc** the y coordinate of the centre in pixels

**radius** the radius of the circle in pixels

**flags** controls filling, arcs and the position of the 0 degree angle. Default setting (zero) is don't fill, draw legs and the 0 degree radian points to 3 o' clock.

Bit	Name	Value	Action if set
0	fill	1	Fill circle or arc with the current pen colour
1	legs	2	Suppress drawing of the legs of an arc
2	combs	4	Let the zero radian point to 12 o' clock


The units for the start- and stop-angle are degrees in the range of 0 to 360. The 0 radian starts at 3 o' clock and moves clockwise. Setting bit 2 of flags (value 4) moves the zero-radian to the 12 o' clock position.

**start** start angle for drawing an arc

**stop** stop angle for drawing an arc

**Remarks:** **CIRCLE** is used to draw circles on screens with an aspect ratio of 1:1 (for example: 320 x 200 or 640 x 400). Whilst using other resolutions (such as 640 x 200), the shape will be an ellipse instead.

The example program uses the random number function **RND** for circle colour, size and position. So it shows a different picture for each run.

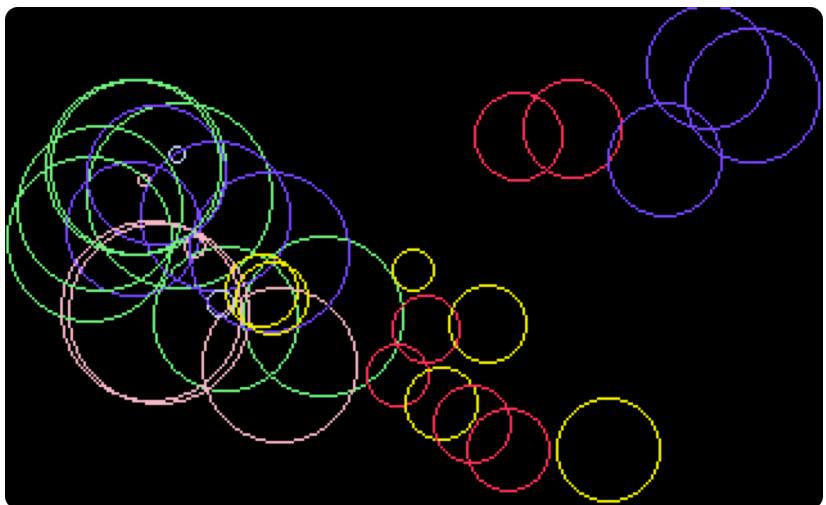

**Example:** Using **CIRCLE**

```
100 REM CIRCLE (AFTER F.BOWEN)
110 BORDER 0 :REM BLACK
120 SCREEN 320,200,4 :REM SIMPLE SCREEN SETUP
130 PALETTE 0,0,0,0 :REM BLACK
140 PALETTE 0,1,RND(.)*16,RND(.)*16,15 :REM RANDOM COLOURS
150 PALETTE 0,2,RND(.)*16,15,RND(.)*16
160 PALETTE 0,3,15,RND(.)*16,RND(.)*16
170 PALETTE 0,4,RND(.)*16,RND(.)*16,15
180 PALETTE 0,5,RND(.)*16,15,RND(.)*16
190 PALETTE 0,6,15,RND(.)*16,RND(.)*16
200 SCNC LR 0 :REM CLEAR
210 FOR I=0 TO 32 :REM CIRCLE LOOP
220 PEN 0,RND(.)*6+1 :REM RANDOM PEN
230 R=RND(.)*36+1 :REM RADIUS
240 XC=XC+RND(.)*320:IF(XC>319)THEN240:REM X CENTRE
250 YC=YC+RND(.)*200:IF(YC>199)THEN250:REM Y CENTRE
260 XC=XC+WT*320:YC=YC+HT*200
270 CIRCLE XC,YC,R,. :REM DRAW
280 NEXT
290 GETKEY A$:REM WAIT FOR KEY
300 SCREEN CLOSE:BORDER 6
```

# CLOSE

**Token:** \$A0

**Format:** **CLOSE** channel

**Usage:** Closes an input or output channel.

**channel** number, which was given to a previous call of commands such as **APPEND**, **DOPEN**, or **OPEN**.

**Remarks:** Closing files that have previously been opened before a program has completed is very important, especially for output files. **CLOSE** flushes output buffers and updates the directory information on disks. Failing to **CLOSE** can corrupt files and disks. BASIC does *not* automatically close channels nor files when a program stops.

**Example:** Using **CLOSE**

```
10 OPEN 2,8,2,"TEST$,W"  
20 PRINT#2,"TESTSTRING"  
30 CLOSE 2 : REM OMITTING CLOSE GENERATES A SPLAT FILE
```

# CLR

**Token:** \$9C

**Format:** **CLR**

**CLR** variable

**Usage:** Clears BASIC variable memory.

After executing **CLR**, all variables and arrays will be undeclared. The run-time stack pointers and the table of open channels are also reset. **RUN** performs **CLR** automatically.

**CLR** variable clears (zeroes) the variable. **variable** can be a numeric variable or a string variable, but not an array.

**Remarks:** **CLR** should not be used inside loops or subroutines, as it destroys the return address. After **CLR**, all variables are unknown and will be initialised when they are next used.

**Example:** Using **CLR**

```
10 A=5: P$="MEGA65"
20 CLR
30 PRINT A;P$
RUN

0
```

# CLRBIT

**Token:** \$9C \$FE \$4E

**Format:** CLRBIT address, bit number

**Usage:** Clears (resets) a single bit at the **address**.

If the address is in the range of \$0000 to \$FFFF (0 - 65535), the memory bank set by **BANK** is used.

Addresses greater than or equal to \$10000 (decimal 65536) are assumed to be flat memory addresses and used as such, ignoring the **BANK** setting.

The **bit number** is a value in the range of 0 - 7.

**Remarks:** CLRBIT is a short version of using a bitwise **AND** to clear a bit, but you can only clear one bit at a time. Refer to **SETBIT** to set a bit instead.

**Example:** Using CLRBIT

```
10 BANK 128      :REM SELECT SYSTEM MAPPING
20 CLRBIT $D011,4 :REM DISABLE DISPLAY
30 CLRBIT $D016,3 :REM SWITCH TO 38 OR 76 COLUMN MODE
```

# CMD

**Token:** \$9D

**Format:** **CMD** channel [, string]

**Usage:** Redirects the standard output from screen to a channel.

This enables you to print listings and directories to other output channels. It is also possible to redirect this output to a disk file, or a modem.

**channel** number, which was given to a previous call of commands such as **APPEND**, **DOPEN**, or **OPEN**.

The optional **string** is sent to the channel before the redirection begins and can be used, for example, for printer or modem setup escape sequences.

**Remarks:** The **CMD** mode is stopped with **PRINT#**, or by closing the channel with **CLOSE**. It is recommended to use **PRINT#** before closing to make sure that the output buffer has been flushed.

**Example:** Using **CMD** to print a program listing:

```
OPEN 1,4 :REM OPEN CHANNEL #1 TO PRINTER AT UNIT 4
CMD 1
LIST
PRINT#1
CLOSE 1
```

# COLLECT

**Token:** \$F3

**Format:** **COLLECT [,D drive] [,U unit]**

**Usage:** Rebuilds the Block Availability Map (BAM) of a disk, deleting splat files (files which have been opened, but not properly closed) and marking unused blocks as free.

**drive** drive # in dual drive disk units.

The drive # defaults to **0** and can be omitted on single drive units such as the 1541, 1571, or 1581.

**unit** device number on the IEC bus. Typically in the range from 8 to 11 for disk units. If a variable is used, it must be placed in brackets. The unit # defaults to **8**.

**Remarks:** While this command is useful for cleaning a disk from splat files, it is dangerous for disks with boot blocks or random access files. These blocks are not associated with standard disk files and will therefore be marked as free and may be overwritten by further disk write operations.

**Examples:** Using **COLLECT**

```
COLLECT  
COLLECT U9  
COLLECT D0, U9
```

# COLLISION

**Token:** \$FE \$17

**Format:** **COLLISION** type [, line number]

**Usage:** Enables or disables a user-programmed interrupt handler for sprite collision.

With a handler enabled, a sprite collision of the given **type** interrupts the BASIC program and performs a **GOSUB** to **line number**. This handler must give control back with **RETURN**.

**type** the collision type for this interrupt handler:

Type	Description
1	Sprite - Sprite Collision
2	Sprite - Data - Collision
3	Light Pen

**line number** the line number of a subroutine which handles the sprite collision and ends with **RETURN**

A call without the line number argument disables the handler.

**Remarks:** It is possible to enable the interrupt handler for all types, but only one can execute at any time. An interrupt handler cannot be interrupted by another interrupt handler. Functions such as **BUMP**, **LPEN** and **RSPPoS** may be used for evaluation of the sprites which are involved, and their positions.

**Info:** **COLLISION** wasn't completed in BASIC 10. It is available in BASIC 65.

**Example:** Using **COLLISION**

```
10 COLLISION 1,70 : REM ENABLE
20 SPRITE 1,1 : MOVSPR 1,120, 0 : MOVSPR 1,0H5
30 SPRITE 2,1 : MOVSPR 2,120,100 : MOVSPR 2,180H5
40 FOR I=1 TO 50000:NEXT
50 COLLISION 1 : REM DISABLE
60 END
70 REM SPRITE <-> SPRITE INTERRUPT HANDLER
80 PRINT "BUMP RETURNS";BUMP(1)
90 RETURN: REM RETURN FROM INTERRUPT
```

# COLOR

**Token:** \$E7

**Format:** COLOR colour

**Usage:** Sets the foreground text colour for subsequent PRINT commands.

colour the palette entry number, in the range 0 - 31

See appendix [6 on page 299](#) for the list of colours in the default system palette.

**Remarks:** This is another name for FOREGROUND.

**Example:** Using COLOR

```
COLOR 2  
PRINT "THIS IS RED"  
COLOR 3  
PRINT "THIS IS CYAN"
```

# CONCAT

**Token:** \$FE \$13

**Format:** **CONCAT** appendfile [,D drive] **TO** targetfile [,D drive] [,U unit]

**Usage:** Appends (concatenates) the contents of the file **appendfile** to the file **targetfile**. Afterwards, **targetfile** contains the contents of both files, while **appendfile** remains unchanged.

**appendfile** is either a quoted string, for example: "DATA" or a string expression in brackets, for example: (FI\$)

**targetfile** is either a quoted string, for example: "SAFE" or a string expression in brackets, for example: (F\$S\$)

If the disk unit has dual drives, it is possible to apply **CONCAT** to files which are stored on different disks. In this case, it is necessary to specify the drive# for both files. This is also necessary if both files are stored on drive#1.

**drive** drive # in dual drive disk units.

The drive # defaults to **0** and can be omitted on single drive units such as the 1541, 1571, or 1581.

**unit** device number on the IEC bus. Typically in the range from 8 to 11 for disk units. If a variable is used, it must be placed in brackets. The unit # defaults to **8**.

**Remarks:** **CONCAT** is executed in the DOS of the disk drive. Both files must exist and no pattern matching is allowed. Only files of type **SEQ** may be concatenated.

**Examples:** Using **CONCAT**

```
CONCAT "NEW DATA" TO "ARCHIVE" ,U9  
CONCAT "ADDRESS",D0 TO "ADDRESS BOOK",D1
```

# CONT

**Token:** \$9A

**Format:** **CONT**

**Usage:** Resumes program execution after a break or stop caused by an **END** or **STOP** statement, or by pressing .

This is a useful debugging tool. The BASIC program may be stopped and variables can be examined, and even changed. The **CONT** statement resumes execution.

**Remarks:** **CONT** cannot be used if a program has stopped because of an error. Also, any editing of a program inhibits continuation. Stopping and continuation can spoil the screen output, and can also interfere with input/output operations.

**Example:** Using **CONT**

```
10 I=I+1:GOTO 10
RUN

BREAK IN 10
READY.
PRINT I
947
CONT
```

# COPY

**Token:** \$F4

**Format:** **COPY** source [,D drive] [,U unit] **TO** [target] [,D drive] [,U unit]

**Usage:** Copies a file to another file, or one or more files from one disk to another.

**source** is either a quoted string, e.g. "DATA" or a string expression in brackets, e.g. (FI\$).

**target** is either a quoted string, e.g. "BACKUP" or a string expression in brackets, e.g. (F9\$).

**drive** drive # in dual drive disk units.

The drive # defaults to **0** and can be omitted on single drive units such as the 1541, 1571, or 1581.

**unit** device number on the IEC bus. Typically in the range from 8 to 11 for disk units. If a variable is used, it must be placed in brackets. The unit # defaults to **8**.

If none or one unit number is given, or the unit numbers before and after the TO token are equal, **COPY** is executed on the disk drive itself, and the source and target files will be on the same disk.

If the source unit (before TO) is different to the target unit (after TO), **COPY** executes a CPU-driven routine that reads the source files into a RAM buffer and writes to the target unit. In this case, the target file name cannot be chosen, it will be the same as the source filename. The extended unit-to-unit copy mode allows the copying of single files, pattern matching files or all files of a disk. Any combination of units is allowed, internal floppy, D81 disk images, IEC floppy drives such as the 1541, 1571, 1581, or CMD floppy and hard drives.

**Remarks:** The file types **PRG**, **SEQ** and **USR** can be copied. If source and target are on the same disk, the target filename must be different to the source file name.

**COPY** cannot copy **DEL** files, which are commonly used as titles or separators in disk directories. These do not conform to Commodore DOS rules and cannot be accessed by standard **OPEN** routines.

**REL** files cannot be copied from unit to unit.

**Examples:** Using **COPY**

```
COPY U8 TO U9      :REM COPY ALL FILES  
COPY "CODES" TO "BACKUP" :REM COPY SINGLE FILE  
COPY "*.TXT",U8 TO U9   :REM PATTERN COPY  
COPY "M*U",U9 TO U11    :REM PATTERN COPY
```

# COS

**Token:** \$BE

**Format:** **COS**(numeric expression)

**Returns:** The cosine of an angle.

The argument is expected in units of radians. The result is in the range (-1.0 to +1.0)

**Remarks:** A value in units of **degrees** can be converted to **radians** by multiplying it with  $\pi/180$ .

**Examples:** Using **COS**

```
PRINT COS(0.7)
0.76484219

X=60:PRINT COS(X * pi / 180)
0.5
```

# CURSOR

**Format:** **CURSOR <ON | OFF> [{, column, row, style}]**  
**CURSOR column, row**

**Usage:** Moves the text cursor to the specified position on the current text screen.

**ON** or **OFF** displays or hides the cursor. When the cursor is **ON**, it will appear at the cursor position during **GETKEY**.

**column** and **row** specify the new position.

**style** sets a solid (1) or flashing (0) cursor.

**Example:** Using **CURSOR**

```
10 SCNCLR
20 CURSOR 1,2
30 PRINT "A"; : SLEEP 1
40 PRINT "B"; : SLEEP 1
50 PRINT "C"; : SLEEP 1
60 CURSOR 20,10
70 PRINT "D"; : SLEEP 1
80 CURSOR ,5           :REM MOVE THE CURSOR TO ROW 5 BUT DO NOT CHANGE THE COLUMN
90 PRINT "E"; : SLEEP 1
100 CURSOR 0          :REM MOVE THE CURSOR TO THE START OF THE ROW
110 PRINT "F"; : SLEEP 1
```

# CUT

**Token:** \$E4

**Format:** **CUT** x, y, width, height


**Usage:** Bitmap graphics: copies the content of the specified rectangle with upper left position **x, y** and the **width** and **height** to a buffer, and fills the region afterwards with the colour of the currently selected pen.

The cut out can be inserted at any position with the command **PASTE**.

**Remarks:** The size of the rectangle is limited by the 1K size of the buffer. The memory requirement for a cut out region is width \* height \* number of bitplanes / 8. It must not equal or exceed 1024 byte. For a 4-bitplane screen for example, a 45 x 45 region needs 1012.5 byte.

**Example:** Using **CUT**

```
10 SCREEN 320,200,2
20 BOX 60,60,300,180,1 :REM DRAW A WHITE BOX
30 PEN 2 :REM SELECT RED PEN
40 CUT 140,80,40,40 :REM CUT OUT A 40 * 40 REGION
50 PASTE 10,10,40,40 :REM PASTE IT TO NEW POSITION
60 GETKEY A$ :REM WAIT FOR KEYPRESS
70 SCREEN CLOSE
```

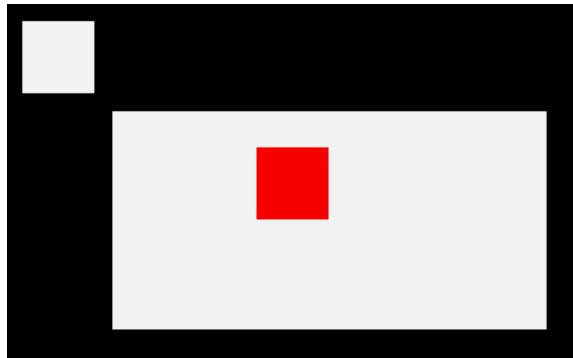

# DATA

**Token:** \$83

**Format:** **DATA** [constant [, constant ...]]

**Usage:** Defines constants which can be read by **READ** statements in a program.

Numbers and strings are allowed, but expressions are not. Items are separated by commas. Strings containing commas, colons or spaces must be placed in quotes.

**RUN** initialises the data pointer to the first item of the first **DATA** statement and advances it for every read item. It is the programmer's responsibility that the type of the constant and the variable in the **READ** statement match. Empty items with no constant between commas are allowed and will be interpreted as zero for numeric variables and an empty string for string variables.

**RESTORE** may be used to set the data pointer to a specific line for subsequent reads.

**Remarks:** It is good programming practice to put large amounts of **DATA** statements at the end of the program, so they don't slow down the search for line numbers after **GOTO**, and other statements with line number targets.

**Example:** Using **DATA**

```
1 REM DATA
10 READ NX$, VE
20 READ NX : FOR I=2 TO NX : READ GL(I) : NEXT I
30 PRINT "PROGRAM:";NX$;" VERSION:";VE
40 PRINT "N-POINT GAUSSLEGENDRE FACTORS E1":
50 FOR I=2 TO NX:PRINT I;GL(I):NEXT I
60 END
80 DATA "MEGA65",1.1
90 DATA 5,0.5120,0.3573,0.2760,0.2252
```

RUN

```
PROGRAM:MEGA65 VERSION: 1.1
N-POINT GAUSSLEGENDRE FACTORS E1
2 0.512
3 0.3573
4 0.276
5 0.2252
```

# DCLEAR

**Token:** \$FE \$15

**Format:** **DCLEAR** [,**D** drive] [,**U** unit]

**Usage:** Sends an initialise command to the specified unit and drive.

**drive** drive # in dual drive disk units.

The drive # defaults to **0** and can be omitted on single drive units such as the 1541, 1571, or 1581.

**unit** device number on the IEC bus. Typically in the range from 8 to 11 for disk units. If a variable is used, it must be placed in brackets. The unit # defaults to **8**.

The DOS of the disk drive will close all open files, clear all channels, free buffers and re-read the BAM. All open channels on the computer will also be closed.

**Examples:** Using **DCLEAR**

```
DCLEAR  
DCLEAR U9  
DCLEAR D0, U9
```

# DCLOSE

**Token:** \$FE \$0F

**Format:** **DCLOSE [U unit]**  
**DCLOSE # channel**

**Usage:** Closes a single file or all files for the specified unit.

**channel** number, which was given to a previous call to commands such as **APPEND**, **DOPEN**, or **OPEN**.

**unit** device number on the IEC bus. Typically in the range from 8 to 11 for disk units. If a variable is used, it must be placed in brackets. The unit # defaults to **8**.

**DCLOSE** is used either with a channel argument or a unit number, but never both.

**Remarks:** It is important to close all open files before a program ends. Otherwise buffers will not be freed and even worse, open files that have been written to may be incomplete (commonly called splat files), and no longer usable.

**Examples:** Using **DCLOSE**

```
DCLOSE#2 :REM CLOSE FILE ASSIGNED TO CHANNEL 2  
DCLOSE U9:REM CLOSE ALL FILES OPEN ON UNIT 9
```

# DEC

**Token:** \$D1

**Format:** **DEC**(string expression)

**Returns:** The decimal value of a hexadecimal string.

The argument range is "0" to "FFFFFFF". **DEC()** ignores everything after the first non-hex digit or the eighth character.

**Remarks:** Allowed digits in uppercase/graphics mode are 0 - 9 and A - F (0123456789ABCDEF) and in lowercase/uppercase mode are 0 - 9 and a - f (0123456789abcdef).

**Example:** Using **DEC**

```
PRINT DEC("D800")
```

```
53248
```

```
POKE DEC("600"),255
```

# DEF FN

**Token:** \$96

**Format:** **DEF FN** name(real variable) = [expression]

**Usage:** Defines a single statement user function with one argument of type real, that returns a real value when evaluated.

The definition must be executed before the function can be used in expressions. The argument is a dummy variable, which will be replaced by the argument when the function is used.

**Remarks:** The function argument is not a real variable and will not overwrite a variable with that name. It only represents the argument value within the function definition.

**Example:** Using **DEF FN**

```
10 PD = pi / 180
20 DEF FN CD(X)= COS(X*PD): REM COS FOR DEGREES
30 DEF FN SD(X)= SIN(X*PD): REM SIN FOR DEGREES
40 FOR D=0 TO 360 STEP 90
50 PRINT USING "#####";D
60 PRINT USING " ##.##";FNC(D);
70 PRINT USING " ##.##";FNSD(D)
80 NEXT D
RUN
    0  1.00  0.00
    90  0.00  1.00
    180 -1.00  0.00
    270  0.00 -1.00
    360  1.00  0.00
```

# DELETE

**Token:** \$F7

**Format:** **DELETE** [line range]

**DELETE** filename [,D drive] [,U unit] [,R]

**Usage:** The first form deletes a range of lines from the BASIC program. The second form deletes one or more files from a disk.

**line range** consists of the first and last line to delete, or a single line number. If the first number is omitted, the first BASIC line is assumed. The second number in the range specifier defaults to the last BASIC line.

**filename** is either a quoted string, for example: "SAFE"" or a string expression in brackets, for example: (F\$)

**drive** drive # in dual drive disk units.

The drive # defaults to **0** and can be omitted on single drive units such as the 1541, 1571, or 1581.

**unit** device number on the IEC bus. Typically in the range from 8 to 11 for disk units. If a variable is used, it must be placed in brackets. The unit # defaults to **8**.

**R** Recover a previously deleted file. This will only work if there were no write operations between deletion and recovery, which may have altered the contents of the file.

**Remarks:** **DELETE filename** is a synonym of **SCRATCH filename** and **ERASE filename**.

**Examples:** Using **DELETE**

```
DELETE 100      :REM DELETE LINE 100
DELETE 240-350  :REM DELETE ALL LINES FROM 240 TO 350
DELETE 500-    :REM DELETE FROM 500 TO END
DELETE -70     :REM DELETE FROM START TO 70

DELETE "DRM",U9 :REM DELETE FILE DRM ON UNIT 9
DELETE "*=SEQ"  :REM DELETE ALL SEQUENTIAL FILES
DELETE "R*=PRG" :REM DELETE PROGRAM FILES STARTING WITH 'R'
```

# DIM

**Token:** \$86

**Format:** **DIM** name(limits) [, name(limits) ...]

**Usage:** Declares the shape, bounds and the type of a BASIC array.

As a declaration statement, it must be executed only once and before any usage of the declared arrays. An array can have one or more dimensions. One dimensional arrays are often called vectors while two or more dimensions define a matrix. The lower bound of a dimension is always zero, while the upper bound is as declared. The rules for variable names apply for array names as well. You can create byte arrays, integer arrays, real arrays and string arrays. It is legal to use the same identifier for scalar variables and array variables. The left parenthesis after the name identifies array names.

**Remarks:** Byte arrays consume one byte per element, integer arrays two bytes, real arrays five bytes and string arrays three bytes for the string descriptor plus the length of the string itself.

If an array identifier is used without being previously declared, an implicit declaration of an one dimensional array with limit of 10 is performed.

**Example:** Using **DIM**

```
1 REM DIM
10 DIM AX(8) : REM ARRAY OF 9 ELEMENTS
20 DIM XX(2,3) : REM ARRAY OF 3X4 = 12 ELEMENTS
30 FOR I=0 TO 8 : AX(I)=PEEK(256+I) : PRINT AX(I);: NEXT:PRINT
40 FOR I=0 TO 2 : FOR J=0 TO 3 : READ XX(I,J):PRINT XX(I,J);: NEXT J,I
50 END
60 DATA 1,-2,3,-4,5,-6,7,-8,9,-10,11,-12

RUN
45 52 50 0 0 0 0 0 0
1 -2 3 -4 5 -6 7 -8 9 -10 11 -12
```

# DIR

**Token:** \$EE (DIR) \$FE \$29 (ECTORY)

**Format:** **DIR** [filepattern] [,W] [,R] [,D drive] [,U unit]

**DIRECTORY** [filepattern] [,W] [,R] [,D drive] [,U unit]

**\$** [filepattern] [,W] [,R] [,D drive] [,U unit]

**Usage:** Prints a file directory/catalog of the specified disk.

The **W** (Wide) parameter lists the directory three columns wide on the screen and pauses after the screen has been filled with a page (63 directory entries). Pressing any key displays the next page.

The **R** (Recoverable) parameter includes files in the directory, which are flagged as deleted but are still recoverable.

**filepattern** is either a quoted string, for example: "M\*" or a string expression in brackets, e.g. (DI\$)

**drive** drive # in dual drive disk units.

The drive # defaults to **0** and can be omitted on single drive units such as the 1541, 1571, or 1581.

**unit** device number on the IEC bus. Typically in the range from 8 to 11 for disk units. If a variable is used, it must be placed in brackets. The unit # defaults to **8**.

**Remarks:** **DIR** is a synonym of **CATALOG** and **DIRECTORY**, and produces the same listing. The **filepattern** can be used to filter the listing. The wildcard characters \* and ? may be used. Adding ,T= to the pattern string, with **T** specifying a filetype of **P**, **S**, **U** or **R** (for **PRG**, **SEQ**, **USR**, **REL**) filters the output to that filetype.

The shortcut symbol **\$** can only be used in direct mode.

**Examples:** Using **DIR**

```
DIR
0 "BLACK SMURF      " BS 2A
508 "STORY PHOBOS"   SEQ
27  "C8096"          PRG
25  "C128"            PRG
104 BLOCKS FREE.
```

For a **DIR** listing with the **wide** parameter, please refer to the example under **CATALOG** on page [42](#).

# DISK

**Token:** \$FE \$40

**Format:** **DISK** command [,U unit]

 command [,U unit]

**Usage:** Sends a command string to the specified disk unit.

**unit** device number on the IEC bus. Typically in the range from 8 to 11 for disk units. If a variable is used, it must be placed in brackets. The unit # defaults to **8**.

**command** is a string expression.

**Remarks:** The command string is interpreted by the disk unit and must be compatible to the used DOS version. Read the disk drive manual for possible commands.

Using **DISK** with no parameters prints the disk status.

The shortcut key  can only be used in direct mode.

**Examples:** Using **DISK**

```
DISK "I0" :REM INITIALISE DISK IN DRIVE 0  
DISK "U0>9" :REM CHANGE UNIT# TO 9
```

# DLOAD

**Token:** \$F0

**Format:** **DLOAD** filename [,D drive] [,U unit]

**DLOAD** "\$[pattern=type]" [,D drive] [,U unit]

**DLOAD** "\$\$[pattern=type]" [,D drive] [,U unit]

**Usage:** The first form loads a file of type PRG into memory reserved for BASIC programs.

The second form loads a directory into memory, which can then be viewed with **LIST**. It is structured like a BASIC program, but file sizes are displayed instead of line numbers.

The third form is similar to the second one, but the files are numbered. This listing can be scrolled like a BASIC program with the keys **F9** or **F11**, edited, listed, saved or printed.

A filter can be applied by specifying a pattern or a pattern and a type. The asterisk matches the rest of the name, while the ? matches any single character. The type specifier can be a character of (P,S,U,R), that is Program, Sequential, User, or Relative file.

**filename** the name of a file. Either a quoted string such as "DATA", or a string expression in brackets such as (FI\$).

**drive** drive # in dual drive disk units.

The drive # defaults to **0** and can be omitted on single drive units such as the 1541, 1571, or 1581.

**unit** device number on the IEC bus. Typically in the range from 8 to 11 for disk units. If a variable is used, it must be placed in brackets. The unit # defaults to **8**.

**Remarks:** The load address that is stored in the first two bytes of the PRG file is ignored. The program is always loaded into BASIC memory. This enables loading of BASIC programs that were saved on other computers with different memory configurations. After loading, the program is re-linked and ready to be **RUN** or edited.

It is possible to use **DLOAD** in a running program. This is called overlaying, or chaining. If you do this, then the newly loaded program replaces the current one, and the execution starts automatically on the first line of the new program. Variables, arrays and strings from the current run are preserved and can also be used by the newly loaded program.

Every **DLOAD**, of either a program or a directory listing, will replace a program that is currently in memory.

**Examples:** Using **DLOAD**

```
DLOAD "APOCALYPSE"  
DLOAD "MEGA TOOLS",U9  
DLOAD (FI$),U(UN%)  
  
DLOAD "$"           :REM LOAD WHOLE DIRECTORY - WITH FILE SIZES  
DLOAD "$$"          :REM LOAD WHOLE DIRECTORY - SCROLLABLE  
DLOAD "$$XX=P"       :REM DIRECTORY WITH PRG FILES STARTING with 'X'
```

# DMA

**Token:** \$FE \$1F

**Format:** **DMA** command [, length, source address, source bank, target address, target bank [, sub]]

**Usage:** **DMA** ("Direct Memory Access") is obsolete, and has been replaced by **EDMA**.

**command** The lower two bits control the function: 0: copy, 1: mix, 2: swap, 3: fill. Note that only copy and fill are implemented in the MEGA65 DMAcontroller at the time of writing. Other DMAic command bits can also be set, for example, to allow copying data in the reverse direction, or holding the source or destination address.

**length** number of bytes (in the range 0 to 65535). NOTE: Specifying a length of 0 will be interpreted as a length of 65536 (exactly 64 kilobytes).

**source address** 16-bit address of read area or fill byte

**source bank** bank number for source (ignored for fill mode)

**target** 16-bit address of write area

**target bank** bank number for target

**sub** sub command

**Remarks:** **DMA** has access to the lower 1MB address range organised in 16 banks of 64 K. To avoid this limitation, use **EDMA**, which has access to the full 256MB address range.

**Examples:** A sequence of **DMA** calls to demonstrate fast screen drawing operations

```
DMA 0, 80*25, 2048, 0, 0, 4 :REM SAVE SCREEN TO $00000 BANK 4
DMA 3, 80*25, 32, 0, 2048, 0 :REM FILL SCREEN WITH BLANKS
DMA 0, 80*25, 0, 4, 2048, 0 :REM RESTORE SCREEN FROM $00000 BANK 4
DMA 2, 80, 2048, 0, 2048+80, 0 :REM SWAP CONTENTS OF LINE 1 & 2 OF SCREEN
```

# **D MODE**

**Token:** \$FE \$35

**Format:** **D MODE** jam, complement, stencil, style, thick

**Usage:** Bitmap graphics: sets "display mode" parameters of the graphics context, which is used by drawing commands.

<b>Mode</b>	<b>Values</b>
<b>jam</b>	0 - 1
<b>complement</b>	0 - 1
<b>stencil</b>	0 - 1
<b>style</b>	0 - 3
<b>thick</b>	1 - 8

# DO

**Token:** \$EB

**Format:** **DO** ... **LOOP**

**DO** [<**UNTIL** | **WHILE**] logical expression]  
. . . statements [**EXIT**]  
**LOOP** [<**UNTIL** | **WHILE**] logical expression]

**Usage:** **DO** and **LOOP** define the start of a BASIC loop.

Using **DO** and **LOOP** alone without any modifiers creates an infinite loop, which can only be exited by the **EXIT** statement. The loop can be controlled by adding **UNTIL** or **WHILE** after the **DO** or **LOOP**.

**Remarks:** **DO** loops may be nested. An **EXIT** statement only exits the current loop.

**Examples:** Using **DO** and **LOOP**

```
10 PW$="" : DO  
20 GET A$: PW$=PW$+A$  
30 LOOP UNTIL LEN(PW$)>7 OR A$=CHR$(13)  
  
10 DO : REM WAIT FOR USER DECISION  
20 GET A$  
30 LOOP UNTIL A$="Y" OR A$="N" OR A$="y" OR A$="n"  
  
10 DO WHILE ABS(EPS) > 0.001  
20 GOSUB 2000 : REM ITERATION SUBROUTINE  
30 LOOP  
  
10 I%=0 : REM INTEGER LOOP 1-100  
20 DO: I%=I%+1  
30 LOOP WHILE I% < 101
```

# DOPEN

**Token:** \$FE \$0D

**Format:** **DOPEN#** channel, filename [,**L** [reclen]] [,**W**] [,**D** drive] [,**U** unit]

**Usage:** Opens a file for reading or writing.

**channel** number, where:

- **1 <= channel <= 127** line terminator is CR.
- **128 <= channel <= 255** line terminator is CR LF.

**L** indicates, that the file is a relative file, which is opened for read/write, as well as random access.

The **reclen** record length is mandatory for creating relative files. For existing relative files, **reclen** is used as a safety check, if given.

**W** opens a file for write access. The file must not exist.

**filename** the name of a file. Either a quoted string such as "**DATA**", or a string expression in brackets such as **(FI\$)**.

**drive** drive # in dual drive disk units.

The drive # defaults to **0** and can be omitted on single drive units such as the 1541, 1571, or 1581.

**unit** device number on the IEC bus. Typically in the range from 8 to 11 for disk units. If a variable is used, it must be placed in brackets. The unit # defaults to **8**.

**Remarks:** **DOPEN#** may be used to open all file types. The sequential file type **SEQ** is default. The relative file type **REL** is chosen by using the **L** parameter. Other file types must be specified in the filename, e.g. by adding ",P" to the filename for **PRG** files or ",U" for **USR** files.

If the first character of the filename is an at sign '@', it is interpreted as a "save and replace" operation. It is not recommended to use this option on 1541 and 1571 drives, as they contain a "save and replace bug" in their DOS.

**Examples:** Using **DOPEN**

```
DOPEN#5,"DATA",U9  
DOPEN#130,(DD$),U(UNK)  
DOPEN#3,"USER FILE,U"  
DOPEN#2,"DATA BASE",L240  
DOPEN#4,"MYPROG,P" : REM OPEN PRG FILE
```

# DOT


**Token:** \$FE \$4C

**Format:** **DOT** x, y [,colour]

**Usage:** Bitmap graphics: draws a pixel at screen coordinates x and y. The optional third parameter defines the colour to be used. If not specified, the current pen colour will be used.

**Example:** Using **DOT**:

```
10 SCREEN 320,200,5
20 BOX 50,50,270,150
30 VIEWPORT 50,50,220,100
40 FOR I=0 TO 127
50 DOT I+I+I,I+I,I
60 NEXT
70 GETKEY A
80 SCREEN CLOSE
```

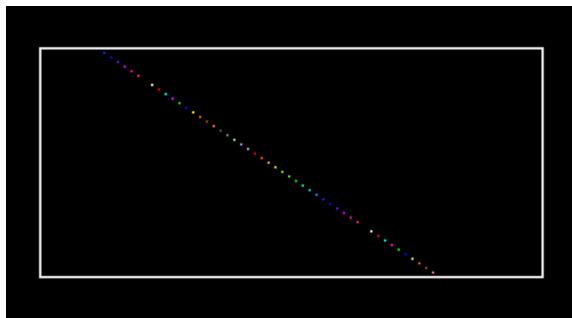

# DPAT

**Token:** \$FE \$36

**Format:** **DPAT** type [, number, pattern ...]

**Usage:** Bitmap graphics: sets the drawing pattern of the graphics context for drawing commands.

There are four predefined pattern types, that can be selected by specifying the type number (1, 2, 3, or 4) as a single parameter.

A value of zero for the type number indicates a user defined pattern. This pattern can be set by using a bit string that consists of either 8, 16, 24, or 32 bits. The number of used pattern bytes is given as the second parameter. It defines how many pattern bytes (1, 2, 3, or 4) follow.

- **Type** 0 – 4
- **Number** number of following pattern bytes (1 – 4)
- **Pattern** pattern bytes

# DS

**Format:** DS

**Usage:** The status of the last disk operation.

This is a volatile variable. Each use triggers the reading of the disk status from the current disk device in usage.

DS is coupled to the string variable DSS which is updated at the same time.

Reading the disk status from a disk device automatically clears any error status on that device, so subsequent reads will return 0, if no other activity has since occurred.

**Remarks:** DS is a reserved system variable.

**Example:** Using DS

```
100 DOPEN#1,"DATA"  
110 IF DS<>0 THEN PRINT"COULD NOT OPEN FILE DATA":STOP
```

# **DSS**

**Format:** **DSS**

**Usage:** The status of the last disk operation in text form of the format:  
Code,Message,Track,Sector.

**DSS** is coupled to the numeric variable **DS**. It is updated when **DS** is used.  
**DS\$** is set to **00,OK,00,00** if there was no error, otherwise it is set to a DOS  
error message (listed in the disk drive manuals).

**Remarks:** **DSS** is a reserved system variable.

**Example:** Using **DSS**

```
100 DOPEN#1,"DATA"  
110 IF DS<>0 THEN PRINT DSS:STOP
```

# DSAVE

**Token:** \$EF

**Format:** **DSAVE** filename [,**D** drive] [,**U** unit]

**Usage:** Saves the BASIC program in memory to a file of type **PRG**.

**filename** the name of a file. Either a quoted string such as "DATA", or a string expression in brackets such as (FI\$). The maximum length of the filename is 16 characters. If the first character of the filename is an at sign '@' it is interpreted as a "save and replace" operation. It is not recommended to use this option on 1541 and 1571 drives, as they contain a "save and replace bug" in their DOS.

**drive** drive # in dual drive disk units.

The drive # defaults to **0** and can be omitted on single drive units such as the 1541, 1571, or 1581.

**unit** device number on the IEC bus. Typically in the range from 8 to 11 for disk units. If a variable is used, it must be placed in brackets. The unit # defaults to **8**.

**Remarks:** **DVERIFY** can be used after **DSAVE** to check if the saved program on disk is identical to the program in memory.

**Example:** Using **DSAVE**

```
DSAVE "ADVENTURE"  
DSAVE "ZORK-I",U9  
DSAVE "DUNGEON",D1,U10
```

# DT\$

**Format:** DT\$

**Usage:** The current date, as a string.

The date value is updated from RTC (Real-Time Clock). The string DT\$ is formatted as: "DD-MON-YYYY", for example: "04-APR-2021".

**Remarks:** DT\$ is a reserved system variable. For more information on how to set the Real-Time Clock, refer to *the MEGA65 Book*, [The Configuration Utility](#) ([section 4](#)).

**Example:** Using DT\$

```
100 PRINT "TODAY IS: ";DT$
```

# DVERIFY

**Token:** \$FE \$14

**Format:** DVERIFY filename [,D drive] [,U unit]

**Usage:** Verifies that the BASIC program in memory is equivalent to a file of type PRG.

**filename** the name of a file. Either a quoted string such as "DATA", or a string expression in brackets such as (FI\$).

**drive** drive # in dual drive disk units.

The drive # defaults to 0 and can be omitted on single drive units such as the 1541, 1571, or 1581.

**unit** device number on the IEC bus. Typically in the range from 8 to 11 for disk units. If a variable is used, it must be placed in brackets. The unit # defaults to 8.

**Remarks:** DVERIFY can only test for equality. It gives no information about the number or position of different valued bytes. DVERIFY exits either with the message OK or with VERIFY ERROR.

**Example:** Using DVERIFY

```
DVERIFY "ADVENTURE"  
DVERIFY "ZORK-I",U9  
DVERIFY "DUNGEON",D1,U10
```

# EDIT

**Format:** **EDIT <ON | OFF>**

**Usage:** Enables or disables the text editing mode of the screen editor.

**EDIT ON** enables text editing mode. In this mode, you can create, edit, save, and load files of type SEQ as text files using the same line editor that you use to write BASIC programs. In this mode:

- The prompt appears as **OK**, instead of **READY**.
- The editor does no tokenising/parsing. All text entered after a linenumber remains pure text, BASIC keywords such as **FOR** and **GOTO** are not converted to BASIC tokens, as they are whilst in program mode.
- The line numbers are only used for text organisation, sorting, deleting, listing, etc.
- When the text is saved to file with **DSAVE**, a sequential file (type **SEQ**) is written, not a program (**PRG**) file. Line numbers are *not* written to the file.
- **DLOAD** in text mode can load only sequential files. Line numbers are automatically generated for editing purposes.
- Text mode applies to lines entered with line numbers only. Lines with no line number are executed as BASIC commands, as usual.

**EDIT OFF** disables text editing mode and returns to BASIC program editing mode. The MEGA65 starts in BASIC program editing mode.

Sequential files created with the text editor can be displayed (without loading them) on the screen by using **TYPE <filename>**.

**Example:** Using **EDIT**

```
ready.  
edit on  
  
ok.  
100 This is a simple text editor.  
dsave "example"  
  
ok.  
new  
  
ok.  
catalog  
  
0 "demoempty"    " 00 3d  
1 "example"      seq  
3159 blocks free  
  
ok.  
type "example"  
This is a simple text editor.  
  
ok.  
dload "example"  
  
loading  
  
ok.  
list  
  
1000 This is a simple text editor.  
  
ok.
```

# EDMA

**Token:** \$FE \$21

**Format:** **EDMA** command, length, source, target

**Usage:** Copies or updates a large amount of memory quickly.

**EDMA** ("Extended Direct Memory Access") is the fastest method to manipulate memory areas using the DMA controller. Please refer to the [MEGA65 Book](#), [F018-Compatible Direct Memory Access \(DMA\) Controller \(Appendix O\)](#) for more details on EDMA.

**command** 0: copy, 1: mix, 2: swap, 3: fill.

Because this two bits of the command share the same register with other bits you can for example use bit 5 to reverse loop operation. This is also working in overlapping memory regions for source and target. Please see the example below.

**length** number of bytes (in the range 0 to 65535). NOTE: Specifying a length of 0 will be interpreted as a length of 65536 (exactly 64 kilobytes).

**source** 28-bit address of read area or fill byte.

**target** 28-bit address of write area.

**Remarks:** **EDMA** can access the entire 256MB address range, using up to 28 bits for the addresses of the source and target.

**Examples:** Using **EDMA**

```
EDMA 0, $800, $F700, $8000000 :REM COPY SCALAR VARIABLES TO ATTIC RAM  
EDMA 3, 80*25, 32, 2048      :REM FILL SCREEN WITH BLANKS  
EDMA 0, 80*25, 2048, $8000800 :REM COPY SCREEN TO ATTIC RAM
```

By adding 32 (bit 5) to the command parameter, the DMA operation can be performed in reverse order:

```
10 PRINT "MEGA65!"  
20 EDMA 0,10,2048,3020 : REM 2048 IS BEGINNING OF SCREEN RAM  
30 EDMA 32,10,2048,3100 : REM 3020 AND 3100 ARE THE LOWER PART OF THE SCREEN
```

Listing and output of the last example:

```
MEGA65!
READY.
L,
10 PRINT"MEGA65!"
20 EDMA 0,10,2048,3020
30 EDMA 32,10,2048,3100
READY.

MEGA65!←
→ !56AGEM
```

# **EL**

**Format:** **EL**

**Usage:** The line number where the most recent BASIC error occurred, or the value -1 if there was no error.

**Remarks:** **EL** is a reserved system variable.

This variable is typically used in a **TRAP** routine, where the error line is taken from **EL**.

**Example:** Using **EL**

```
10 TRAP 100
20 PRINT SQR(-1)      :REM PROVOKE ERROR
30 PRINT "AT LINE 30":REM HERE TO RESUME
40 END
100 IF ER>0 THEN PRINT ERR$(ER); " ERROR"
110 PRINT " IN LINE";EL
120 RESUME NEXT      :REM RESUME AFTER ERROR
```

# ELLIPSE

**Token:** \$FE \$30

**Format:** **ELLIPSE** xc, yc, xr, yr [, flags , start, stop]

**Usage:** Bitmap graphics: draws an ellipse.

**xc** is the x coordinate of the centre in pixels

**yc** is the y coordinate of the centre in pixels

**xr** is the x radius of the ellipse in pixels

**yr** is the y radius of the ellipse in pixels

**flags** control filling, arcs and orientation of the zero radian (combs flag named after **retroCombs**). Default setting (zero) is: Don't fill, draw legs, start drawing at 3 'o clock.

Bit	Name	Value	Action if set
0	fill	1	Fill ellipse or arc with the current pen colour
1	legs	2	Suppress drawing of the legs of an arc
2	combs	4	Drawing (0 degree) starts at 12 'o clock

The units for the start- and stop-angle are degrees in the range of 0 to 360. The 0 radian starts at 3 o' clock and moves clockwise. The combs-flag shifts the 0 radian and the start position to the 12 o' clock position.


**start** start angle for drawing an elliptic arc.

**stop** stop angle for drawing an elliptic arc.

**Remarks:** **ELLIPSE** is used to draw ellipses on screens at various resolutions. If a full ellipse is to be drawn, start and stop should be either omitted or set both to zero (not 0 and 360). Drawing and filling of full ellipses is much faster, than using elliptic arcs.

**Example:** Using **ELLIPSE**

```
100 SZ=2:DZ=3:WZ=320*S%:HZ=200*S% :REM SCREEN SETTINGS  
110 CXZ=WZ/2:CYZ=HZ/2 :REM CENTRE AND RADII  
120 RXZ=WZ/2:RYZ=HZ/2  
130 SCREEN WZ,HZ,D% :REM OPEN SCREEN  
140 ELLIPSE CXZ,CYZ,CXZ-4,CYZ-4  
150 PEN2:CIRCLE CXZ,CYZ,RYZ-4,2  
160 PEN3:CIRCLE CXZ,CYZ,RYZ-14,2  
170 PEN4:CIRCLE CXZ,CYZ,RYZ-24,0,135,45  
180 PEN5:ELLIPSE CXZ,CYZ/2,RXZ/4,RYZ/4,1  
190 PEN6:CIRCLE 120*S%,CY%,40,1,45,315  
200 PEN7:CIRCLE 200*S%,CY%,40,1,225,135  
210 PEN0:CHAR 34,CYZ/2-8,2,2,2,"MEGAB5",\$3D000  
220 GETKEY A% :REM WAIT FOR ANY KEY  
230 SCREEN CLOSE :REM CLOSE GRAPHICS SCREEN
```

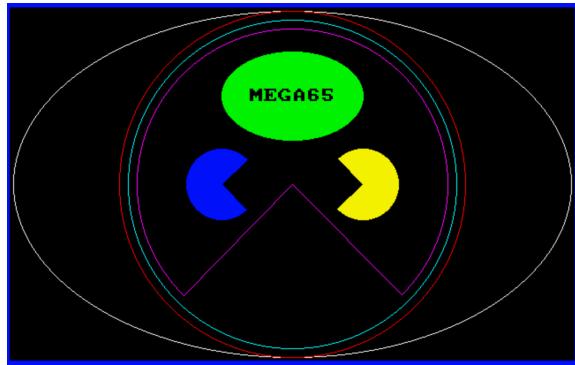

# ELSE

**Token:** \$D5

**Format:** **IF** expression **THEN** true clause [**:ELSE** false clause]

**Usage:** **ELSE** is an optional part of an **IF** statement.

**expression** a logical or numeric expression. A numeric expression is evaluated as **FALSE** if the value is zero and **TRUE** for any non-zero value.

**true clause** one or more statements starting directly after **THEN** on the same line. A linenumber after **THEN** performs a **GOTO** to that line instead.

**false clause** one or more statements starting directly after **ELSE** on the same line. A linenumber after **ELSE** performs a **GOTO** to that line instead.

**Remarks:** There must be a colon before **ELSE**. There cannot be a colon or end-of-line after **ELSE**.

The standard **IF ... THEN ... ELSE** structure is restricted to a single line. But the **true clause** and **false clause** may be expanded to several lines using a compound statement surrounded with **BEGIN** and **BEND**.

When the **true clause** does not use **BEGIN** and **BEND**, **ELSE** must be on the same line as **IF**.

**Example:** Using **ELSE**

```
100 REM ELSE
110 RED$=CHR$(28):BLACK$=CHR$(144):WHITE$=CHR$(5)
120 INPUT "ENTER A NUMBER";V
130 IF V<0 THENPRINT RED$;:ELSEPRINT BLACK$;
140 PRINT V : REM PRINT NEGATIVE NUMBERS IN RED
150 PRINT WHITE$
160 INPUT "END PROGRAM:(Y/N)";A$
170 IF A$="Y" THENEND
180 IF A$="N" THEN120:ELSE160
```

Using **ELSE** with **BEGIN** and **BEND**.

```
100 A = 0 : GOSUB 200
110 A = 1 : GOSUB 200
120 END
200 IF A = 0 THEN BEGIN
210 PRINT "HELLO"
220 BEND : ELSE BEGIN
230 PRINT "GOODBYE"
240 BEND
250 RETURN
```

# **END**

**Token:** \$80

**Format:** **END**

**Usage:** Ends the execution of the BASIC program.

The **READY**. prompt appears and the computer goes into direct mode waiting for keyboard input.

**Remarks:** **END** does **not** clear channels nor close files. Variable definitions are still valid after **END**. The program may be continued with the **CONT** statement. After executing the last line of a program, **END** is executed automatically.

**Example:** Using **END**

```
10 IF V < 0 THEN END : REM NEGATIVE NUMBERS END THE PROGRAM  
20 PRINT V
```

# ENVELOPE

**Token:** \$FE \$0A

**Format:** ENVELOPE n [, attack, decay, sustain, release, waveform, pw]

**Usage:** Sets the parameters for the synthesis of a musical instrument for use with **PLAY**.

**n** envelope slot (0 – 9).

**attack** attack rate (0 – 15).

**decay** decay rate (0 – 15).

**sustain** sustain rate (0 – 15).

**release** release rate (0 – 15).

**waveform** 0: triangle, 1: sawtooth, 2: square/pulse, 3: noise, 4: ring modulation.

**pw** pulse width (0 – 4095) for waveform.

There are 10 slots for storing instrument parameters, preset with the following default values:

<b>n</b>	<b>A</b>	<b>D</b>	<b>S</b>	<b>R</b>	<b>WF</b>	<b>PW</b>	<b>Instrument</b>
0	0	9	0	0	2	1536	Piano
1	12	0	12	0	1		Accordion
2	0	0	15	0	0		Calliope
3	0	5	5	0	3		Drum
4	9	4	4	0	0		Flute
5	0	9	2	1	1		Guitar
6	0	9	0	0	2	512	Harpsichord
7	0	9	9	0	2	2048	Organ
8	8	9	4	1	2	512	Trumpet
9	0	9	0	0	0		Xylophone

**Example:** Using ENVELOPE

```
10 ENVELOPE 9,10,5,10,5,2,4000
20 VOL 9
30 TEMPO 30
40 PLAY "T9040 CDEFGAB U3T8 CDEFGAB L","T5030 H CGEGB T7 HCGBEQ L"
```

# ER

**Format:** ER

**Usage:** The number of the most recent BASIC error that has occurred, or -1 if there was no error.

**Remarks:** ER is a reserved system variable.

This variable is typically used in a TRAP routine, where the error number is taken from ER.

**Example:** Using ER

```
10 TRAP 100
20 PRINT SQR(-1)      :REM PROVOKE ERROR
30 PRINT "AT LINE 30":REM HERE TO RESUME
40 END
100 IF ER>0 THEN PRINT ERR$(ER); " ERROR"
110 PRINT " IN LINE";EL
120 RESUME NEXT      :REM RESUME AFTER ERROR
```

# ERASE

**Token:** \$FE \$2A

**Format:** ERASE filename [,D drive] [,U unit] [,R]

**Usage:** Erases (deletes) a disk file.

**filename** the name of a file. Either a quoted string such as "DATA", or a string expression in brackets such as (FI\$).

**drive** drive # in dual drive disk units.

The drive # defaults to **0** and can be omitted on single drive units such as the 1541, 1571, or 1581.

**unit** device number on the IEC bus. Typically in the range from 8 to 11 for disk units. If a variable is used, it must be placed in brackets. The unit # defaults to **8**.

**R** Recover a previously erased file. This will only work if there were no write operations between erasing and recovery, which may have altered the contents of the disk.

**Remarks:** ERASE filename is a synonym of SCRATCH filename and DELETE filename.

In direct mode, the success and the number of erased files is printed. The second to last number from the message contains the number of successfully erased files.

**Examples:** Using ERASE

```
ERASE "DRM",U9 :REM ERASE FILE DRM ON UNIT 9
01, FILES SCRATCHED,01,00
ERASE "OLD*"   :REM ERASE ALL FILES BEGINNING WITH "OLD"
01, FILES SCRATCHED,04,00
ERASE "R*=PRG" :REM ERASE PROGRAM FILES STARTING WITH 'R'
01, FILES SCRATCHED,09,00
```

# ERR\$

**Token:** \$D3

**Format:** **ERR\$(number)**

**Returns:** The string description of a given BASIC error number.

**number** a BASIC error number (1 - 41)

This function is typically used in a **TRAP** routine, where the error number is taken from the reserved variable **ER**.

**Remarks:** Arguments out of range (1 - 41) will produce an ILLEGAL QUANTITY error.

**Example:** Using **ERR\$**

```
10 TRAP 100
20 PRINT SQR(-1)      :REM PROVOKE ERROR
30 PRINT "AT LINE 30":REM HERE TO RESUME
40 END
100 IF ER>0 THEN PRINT ERR$(ER); " ERROR"
110 PRINT " IN LINE";EL
120 RESUME NEXT      :REM RESUME AFTER ERROR
```

# EXIT

**Token:** \$FD

**Format:** EXIT

**Usage:** Exits the current **DO .. LOOP** and continues execution at the first statement after **LOOP**.

**Remarks:** In nested loops, **EXIT** exits only the current loop, and continues execution in an outer loop (if there is one).

**Example:** Using **EXIT**

```
1 REM EXIT
10 OPEN 2,8,0,"$"           : REM OPEN CATALOG
15 IF DS THEN PRINT DS$: STOP: REM CANT READ
20 GET#2,D$,D$              : REM DISCARD LOAD ADDRESS
25 DO                      : REM LINE LOOP
30  GET#2,D$,D$             : REM DISCARD LINE LINK
35  IF ST THEN EXIT         : REM END-OF-FILE
40  GET#2,L0,HI              : REM FILE SIZE BYTES
45  S=L0 + 256 * HI          : REM FILE SIZE
50  LINE INPUT#2, F$          : REM FILE NAME
55  PRINT S;F$              : REM PRINT FILE ENTRY
60 LOOP
65 CLOSE 2
```

# EXP

**Token:** \$BD

**Format:** EXP(numeric expression)

**Returns:** The value of the mathematical constant Euler's number (**2.71828183**) raised to the power of the argument.

**Remarks:** An argument greater than 88 produces an **OVERFLOW ERROR**.

**Examples:** Using EXP

```
PRINT EXP(1)  
2.71828183
```

```
PRINT EXP(0)  
1
```

```
PRINT EXP(LOG(2))  
2
```

# FAST

**Token:** \$FE \$25

**Format:** **FAST** [speed]

**Usage:** Sets CPU clock speed to 1MHz, 3.5MHz or 40MHz.

**speed** CPU clock speed where:

- **1** sets CPU to 1MHz.
- **3** sets CPU to 3MHz.
- Anything other than **1** or **3** sets the CPU to 40MHz.

**Remarks:** Although it's possible to call **FAST** with any real number, the precision part (the decimal point and any digits after it), will be ignored.

**FAST** is a synonym of **SPEED**.

**FAST** has no effect if **POKE 0,65** has previously been used to set the CPU to 40MHz.

**Example:** Using **FAST**

```
10 FAST      :REM SET SPEED TO MAXIMUM (40 MHZ)
20 FAST 1    :REM SET SPEED TO 1 MHZ
30 FAST 3    :REM SET SPEED TO 3.5 MHZ
40 FAST 3.5  :REM SET SPEED TO 3.5 MHZ
```

# **FGOSUB**

**Token:** \$FE \$48

**Format:** **FGOSUB** numeric expression

**Usage:** Evaluates the given numeric expression, then calls (**GOSUBs**) the subroutine at the resulting line number.

**Warning:** Take care when using **RENUMBER** to change the line numbers of your program that any **FGOSUB** statements still use the intended numbers.

**Example:** Using **FGOSUB**:

```
10 INPUT "WHICH SUBROUTINE TO EXECUTE 100,200,300";LI
20 FGOSUB LI      :REM HOPEFULLY THIS LINE # EXISTS
30 GOTO 10        :REM REPEAT
100 PRINT "AT LINE 100":RETURN
200 PRINT "AT LINE 200":RETURN
300 PRINT "AT LINE 300":RETURN
```

# **FGOTO**

**Token:** \$FE \$47

**Format:** **FGOTO** numeric expression

**Usage:** Evaluates the given numeric expression, then jumps (**GOesTO**) to the resulting line number.

**Warning:** Take care when using **RENUMBER** to change the line numbers of your program that any **FGOTO** statements still use the intended numbers.

**Example:** Using **FGOTO**:

```
10 INPUT "WHICH LINE # TO EXECUTE 100,200,300";LI
20 FGOTO LI      :REM HOPEFULLY THIS LINE # EXISTS
30 END
100 PRINT "AT LINE 100":END
200 PRINT "AT LINE 200":END
300 PRINT "AT LINE 300":END
```

# FILTER

**Token:** \$FE \$03

**Format:** **FILTER** sid [{, freq, lp, bp, hp, res}]

**Usage:** Sets the parameters for a SID sound filter.

**sid** 1: right SID, 2: left SID

**freq** filter cut off frequency (0 - 2047)

**lp** low pass filter (0: off, 1: on)

**bp** band pass filter (0: off, 1: on)

**hp** high pass filter (0: off, 1: on)

**resonance** resonance (0 - 15)

**Remarks:** Missing parameters keep their current value. The effective filter is the sum of all filter settings. This enables band reject and notch effects.

**Example:** Using **FILTER**

```
10 PLAY "T7X103P9C"
15 SLEEP 0.02
20 PRINT "LOW PASS SWEEP":L=1:B=0:H=0:GOSUB 100
30 PRINT "BAND PASS SWEEP":L=0:B=1:H=0:GOSUB 100
40 PRINT "HIGH PASS SWEEP":L=0:B=0:H=1:GOSUB 100
50 GOTO 20
100 REM *** SWEEP ***
110 FOR F = 50 TO 1950 STEP 50
120 IF F >= 1000 THEN FF = 2000-F : ELSE FF = F
130 FILTER 1,FF,L,B,H,15
140 PLAY "X1"
150 SLEEP 0.02
160 NEXT F
170 RETURN
```

# FIND

- Token:** \$FE \$2B
- Format:** **FIND /string/** [, line range]  
**FIND "string"** [, line range]
- Usage:** Searches the BASIC program that is currently in memory for all instances of a string.  
It searches a given line range (if specified), otherwise the entire BASIC program is searched.  
At each occurrence of the "find string" the line is listed with the string highlighted.
-  can be used to pause the output.
- Remarks:** Almost any character that is not part of the string, including letters and punctuation, can be used instead of the slash **/**.  
Using double quotes **"** as a delimiter has a special effect: The search text is not tokenised. **FIND "FOR"** will search for the three letters F, O, and R, not the BASIC keyword **FOR**. Therefore, it can find the word **FOR** in string constants or REM statements, but not in program code.  
On the other hand, **FIND /FOR/** will find all occurrences of the BASIC keyword, but not the text "FOR" in strings.  
Partial keywords cannot be searched. For example, **FIND /LOO/** will not find the keyword **LOOP**.  
Due to how BASIC is parsed, finding the **REM** and **DATA** keywords requires using the colon as the delimiter: **FIND :REM TODO:** This does not work with the **CHANGE** command.  
**FIND** is an editor command that can only be used in direct mode.

**Example:** Using **FIND**

```
READY.  
LIST  
10 REM PARROT COLOUR SCHEME  
20 FONT 8 :REM SERIF  
30 FOREGROUND 5 :REM GREEN  
40 BACKGROUND 0 :REM BLACK  
50 HIGHLIGHT 4,0 :REM SYSTEM PURPLE  
60 HIGHLIGHT 4,1 :REM REM BLUE  
70 HIGHLIGHT 7,2 :REM KEYWORD YELLOW  
  
READY.  
FIND /OLO/  
10 REM PARROT COLOUR SCHEME  
  
READY.  
FIND /HIGHLIGHT/  
  
50 HIGHLIGHT 4,0 :REM SYSTEM PURPLE  
60 HIGHLIGHT 4,1 :REM REM BLUE  
70 HIGHLIGHT 7,2 :REM KEYWORD YELLOW  
  
READY.  
■
```

# **FN**

**Token:** \$A5

**Format:** **FN** name(numeric expression)

**Usage:** **FN** functions are user-defined functions, that accept a numeric expression as an argument and return a real value. They must first be defined with **DEF FN** before being used.

**Example:** Using **FN**

```
10 PD = π / 180
20 DEF FN CD(X)= COS(X*PD): REM COS FOR DEGREES
30 DEF FN SD(X)= SIN(X*PD): REM SIN FOR DEGREES
40 FOR D=0 TO 360 STEP 90
50 PRINT USING "###";D
60 PRINT USING " ##.##";FNCD(D);
70 PRINT USING " ##.##";FNSD(D)
80 NEXT D
RUN
    0  1.00  0.00
    90  0.00  1.00
    180 -1.00  0.00
    270  0.00 -1.00
    360  1.00  0.00
```

# FONT

**Token:** \$FE \$46

**Format:** **FONT <A | B | C>**

**Usage:** Updates all characters to the given built-in font.

**FONT A** is the PETSCII font with several lowercase characters replaced with ASCII punctuation.

**FONT B** is an alternate appearance of **FONT A**.

**FONT C** is the PETSCII font. This is the default when the MEGA65 is first switched on.

This resets any changes made by the **CHARDEF** command.

The ASCII symbols of fonts **A** and **B** are typed by pressing the keys in the table below, some of which also require the holding down of the



key. The codes for uppercase and lowercase are swapped compared to ASCII.

Code	Key	PETSCII	ASCII
\$5C	Pound	£	\ (backslash)
\$5E	Up Arrow (next to RESTORE)	↑	^ (caret)
\$5F	Left Arrow (next to 1)	↶	_ (underscore)
\$7B	MEGA + Colon	↶	{ (open brace)
\$7C	MEGA + Dot	↷	(pipe)
\$7D	MEGA + Semicolon		} (close brace)
\$7E	MEGA + Comma	↷	~ (tilde)

**Remarks:** The additional ASCII characters provided by FONT A and B are only available while using the lowercase character set.

**Examples:** Using **FONT**

```
FONT A :REM ASCII - ENABLE {}_~^
FONT B :REM LIKE A, WITH A SERIF FONT
FONT C :REM COMMODORE FONT (DEFAULT)
```

# FOR

**Token:** \$81

**Format:** **FOR** index = start **TO** end [**STEP** step] ... **NEXT** [index]

**Usage:** **FOR** statements start a BASIC loop with an index variable.

**index** may be incremented or decremented by a constant value on each iteration. The default is to increment the variable by 1. The index variable must be a real variable.

**start** is used to initialise the index.

**end** is checked at the end of an iteration, and determines whether another iteration will be performed, or if the loop will exit.

**step** defines the change applied to the index variable at the end of an iteration. Positive step values increment it, while negative values decrement it. It defaults to 1.0 if not specified.

**Remarks:** For positive increments **end** must be greater than or equal to **start**, whereas for negative increments **end** must be less than or equal to **start**.

It is bad programming practice to change the value of the **index** variable inside the loop or to jump into or out of a loop body with **GOTO**.

**Examples:** Using **FOR**

```
10 FOR D=0 TO 360 STEP 30
20 R = D * π / 180
30 PRINT D;R;SIN(R);COS(R);TAN(R)
40 NEXT D

10 DIM M(20,20)
20 FOR I=0 TO 20
30 FOR J=1 TO 20
40 M(I,J) = I + 100 * J
50 NEXT J,I
```

# FOREGROUND

**Token:** \$FE \$39

**Format:** FOREGROUND colour

**Usage:** Sets the foreground text colour for subsequent PRINT commands.

colour the palette entry number, in the range 0 - 31

See appendix [6 on page 299](#) for the list of colours in the default system palette.

**Remarks:** This is another name for COLOR.

**Example:** Using FOREGROUND

```
READY.  
FOREGROUND 7  
  
READY.  
■
```

# FORMAT

**Token:** \$FE \$37

**Format:** **FORMAT** diskname [,I id] [,D drive] [,U unit]

**Usage:** Formats a disk. *This erases all data on the disk.*

I The disk ID.

**diskname** is either a quoted string, e.g. "DATA" or a string expression in brackets, e.g. (DMS). The maximum length of **diskname** is 16 characters.

**drive** drive # in dual drive disk units.

The drive # defaults to 0 and can be omitted on single drive units such as the 1541, 1571, or 1581.

**unit** device number on the IEC bus. Typically in the range from 8 to 11 for disk units. If a variable is used, it must be placed in brackets. The unit # defaults to 8.

**Remarks:** **FORMAT** is another name for the **HEADER** command.

For new floppy disks which have not already been formatted in MEGA65 (1581) format, it is necessary to specify the disk ID with the I parameter. This switches the format command to low level format, which writes sector IDs and erases all contents. This takes some time, as every block on the floppy disk will be written.

If the I parameter is omitted, a quick format will be performed. This is only possible if the disk has already been formatted as a MEGA65 or 1581 floppy disk. A quick format writes the new disk name and clears the block allocation map, marking all blocks as free. The disk ID is not changed, and blocks are not overwritten, so contents may be recovered with **ERASE R**. You can read more about **ERASE** on page 103.

**Examples:** Using **FORMAT**

```
FORMAT "ADVENTURE",IDK : FORMAT DISK WITH NAME ADVENTURE AND ID DK  
FORMAT "ZORK-I",U9      : FORMAT DISK IN UNIT 9 WITH NAME ZORK-I  
FORMAT "DUNGEON",D1,U10: FORMAT DISK IN DRIVE 1 UNIT 10 WITH NAME DUNGEON
```

# FRE

**Token:** \$B8

**Format:** **FRE(bank)**

**Returns:** The number of free bytes for banks 0 or 1, or the ROM version if the argument is negative.

**FRE(0)** returns the number of free bytes in bank 0, which is used for BASIC program source.

**FRE(1)** returns the number of free bytes in bank 1, which is the bank for BASIC variables, arrays and strings. **FRE(1)** also triggers “garbage collection”, which is a process that collects strings in use at the top of the bank, thereby defragmenting string memory.

**FRE(-1)** returns the ROM version, a six-digit number of the form 92XXXX.

**Example:** Using **FRE**:

```
10 PM = FRE(0)
20 VM = FRE(1)
30 RV = FRE(-1)
40 PRINT PM;" FREE FOR PROGRAM"
50 PRINT VM;" FREE FOR VARIABLES"
60 PRINT RV;" ROM VERSION"
```

# FREAD

**Token:** \$FE \$1C

**Format:** **FREAD#** channel, pointer, size

**Usage:** Reads **size** bytes from **channel** to memory starting at the 32-bit address **pointer**.

**channel** number, which was given to a previous call to commands such as **DOPEN**, or **OPEN**

**FREAD** can be used to read data from disk directly into a variable. It is recommended to use the **POINTER** statement for the pointer argument, and to compute the size parameter by multiplying the number of elements with the item size.

Type	Item Size
Byte Array	1
Integer Array	2
Real Array	5

Keep in mind that the **POINTER** function with a string argument does *not* return the string address, but the string descriptor. It is not recommended to use **FREAD** for strings or string arrays unless you are fully aware on how to handle the string storage internals.

To read into an array, ensure that you always specify an array index so that **POINTER** returns the address of an element. The start address of array **XY()** is **POINTER(XY(0))**. **POINTER(XY)** returns the address of the scalar variable **XY**.

**Example:** Using **FREAD**:

```
100 N=23
110 DIM B&(N),C&(N)
120 DOPEN#2,"TEXT"
130 FREAD#2,POINTER(B&(0)),N
140 DCLOSE#2
150 FOR I=0 TO N-1:PRINT CHR$(B&(I));:NEXT
160 FOR I=0 TO N-1:C&(I)=B&(N-1-I):NEXT
170 DOPEN#2,"REVERSE",N
180 FWRITE#2,POINTER(C&(0)),N
190 DCLOSE#2
```

# FREEZER

**Token:** \$FE \$4A

**Format:** FREEZER

**Usage:** Invokes the Freezer menu.

**Remarks:** Entering the **FREEZER** command is an alternative to holding and releasing the **RESTORE** key.

**Examples:** Using **FREEZER**

```
FREEZER :REM CALL FREEZER MENU
```

# FWRITE

**Token:** \$FE \$1E

**Format:** **FWRITE#** channel, pointer, size

**Usage:** Writes **size** bytes to **channel** from memory starting at the 32-bit address **pointer**.

**channel** number, which was given to a previous call to commands such as **APPEND**, **DOPEN**, or **OPEN**.

**FWRITE** can be used to write the value of a variable to a file. It is recommended to use the **POINTER** statement for the pointer argument and compute the size parameter by multiplying the number of elements with the item size.

Refer to the **FREAD** item size table on page 119 for the item sizes.

Keep in mind that the **POINTER** function with a string argument does *not* return the string address, but the string descriptor. It is not recommended to use **FWRITE** for strings or string arrays unless you are fully aware on how to handle the string storage internals.

To write an array, ensure that you always specify an array index so that **POINTER** returns the address of an element. The start address of array **XY()** is **POINTER(XY(0))**. **POINTER(XY)** returns the address of the scalar variable **XY**.

**Example:** Using **FWRITE**:

```
100 N=23
110 DIM B&(N),C&(N)
120 DOPEN#2,"TEXT"
130 FREAD#2,POINTER(B&(0)),N
140 DCLOSE#2
150 FOR I=0 TO N-1:PRINTCHR$(B&(I));:NEXT
160 FOR I=0 TO N-1:C&(I)=B&(N-1-I):NEXT
170 DOPEN#2,"REVERS",W
180 FWRITE#2,POINTER(C&(0)),N
190 DCLOSE#2
```

# GCOPY

**Token:** \$FE \$32

**Format:** **GCOPY** x, y, width, height

**Usage:** Bitmap graphics: copies the content of the specified rectangle with upper left position **x, y** and the **width** and **height** to a buffer.

The copied region can be inserted at any position with the command **PASTE**.

**Remarks:** The size of the rectangle is limited by the 1K size of the buffer. The memory requirement for a region is width \* height \* number of bitplanes / 8. It must not equal or exceed 1024 byte. For a 4-bitplane screen for example, a 45 x 45 region needs 1012.5 byte.

**Example:** Using **GCOPY** (see also **CUT**).

```
10 SCREEN 320,200,2
20 BOX 60,60,300,180,1 :REM DRAW A WHITE BOX
30 GCOPY 140,80,40,40 :REM COPY A 40 * 40 REGION
40 PASTE 10,10,40,40 :REM PASTE IT TO NEW POSITION
50 GETKEY A$           :REM WAIT FOR KEYPRESS
60 SCREEN CLOSE
```

# GET

**Token:** \$A1

**Format:** **GET** variable

**Usage:** Gets the next character, or byte value of the next character, from the keyboard queue.

If the variable being set to the character is of type string and the queue is empty, an empty string is assigned to it, otherwise a one character string is created and assigned instead. If the variable is of type numeric, the byte value of the key is assigned to it, otherwise zero will be assigned if the queue is empty. **GET** does not wait for keyboard input, so it's useful to check for key presses at regular intervals or in loops.

**Remarks:** **GETKEY** is similar, but waits until a key has been pressed.

**Example:** Using **GET**:

```
10 DO: GET A$: LOOP UNTIL A$ <> ""
40 IF A$ = "W" THEN 1000 :REM GO NORTH
50 IF A$ = "A" THEN 2000 :REM GO WEST
60 IF A$ = "S" THEN 3000 :REM GO EAST
70 IF A$ = "Z" THEN 4000 :REM GO SOUTH
80 IF A$ = CHR$(13) THEN 5000 :REM RETURN
90 GOTO 10
```

# GET#

**Token:** \$A1 '#

**Format:** GET# channel, variable [, variable ...]

**Usage:** Reads a single byte from the channel argument and assigns single character strings to string variables, or an 8-bit binary value to numeric variables.

This is useful for reading characters (or bytes) from an input stream one byte at a time.

**channel** number, which was given to a previous call to commands such as **DOPEN**, or **OPEN**.

**Remarks:** All values from 0 to 255 are valid, so **GET#** can also be used to read binary data.

**Example:** Using **GET#** to read a disk directory:

```
1 REM GET#
10 OPEN 2,8,0,"$"           : REM OPEN CATALOG
15 IF DS THEN PRINT DS$: STOP: REM CANT READ
20 GET#2,D$,D$              : REM DISCARD LOAD ADDRESS
25 DO                         : REM LINE LOOP
30 GET#2,D$,D$              : REM DISCARD LINE LINK
35 IF ST THEN EXIT          : REM END-OF-FILE
40 GET#2,LO,HI              : REM FILE SIZE BYTES
45 S=LO + 256 * HI          : REM FILE SIZE
50 LINE INPUT#2, F$          : REM FILE NAME
55 PRINT S;F$                : REM PRINT FILE ENTRY
60 LOOP
65 CLOSE 2
```

# GETKEY

**Token:** \$A1 \$F9 (GET token and KEY token)

**Format:** **GETKEY** variable

**Usage:** Gets the next character, or byte value of the next character, from the keyboard queue. If the queue is empty, the program will wait until a key has been pressed.

After a key has been pressed, the variable will be set and program execution will continue. When used with a string variable, a one character string is created and assigned. Otherwise if the variable is of type numeric, the byte value is assigned.

**Example:** Using **GETKEY**:

```
10 GETKEY A$ :REM WAIT AND GET CHARACTER
40 IF A$ = "W" THEN 1000 :REM GO NORTH
50 IF A$ = "A" THEN 2000 :REM GO WEST
60 IF A$ = "S" THEN 3000 :REM GO EAST
70 IF A$ = "Z" THEN 4000 :REM GO SOUTH
80 IF A$ = CHR$(13) THEN 5000 :REM RETURN
90 GOTO 10
```

# **GO64**

**Token:** \$CB \$36 \$34 (GO token and 64 )

**Format:** **GO64**

**Usage:** Switches the MEGA65 to C64-compatible mode.

If you're in direct mode, a security prompt **ARE YOU SURE?** is displayed, which must be responded with **Y** to continue.

You can switch back to MEGA65 mode with this command: **\$Y\$58552**

**Example:** Using **GO64**:

```
GO64  
ARE YOU SURE?
```

# GOSUB

**Token:** \$8D

**Format:** **GOSUB** line

**Usage:** **GOSUB** (GOto SUBroutine) continues program execution at the given BASIC line number, saving the current BASIC program counter and line number on the run-time stack. This enables the resumption of execution after the **GOSUB** statement, once a **RETURN** statement in the called subroutine is executed. Calls to subroutines via **GOSUB** may be nested, but the subroutines must always end with **RETURN**, otherwise a stack overflow may occur.

**Remarks:** Unlike other programming languages, BASIC 65 does not support arguments or local variables for subroutines.

Programs can be optimised by grouping subroutines at the beginning of the program source. The **GOSUB** calls will then have low line numbers with fewer digits to decode. The subroutines will also be found faster, since the search for subroutines often starts at the beginning of the program.

**Example:** Using **GOSUB**:

```
10 GOTO 100 :REM TO MAIN PROGRAM
20 REM *** SUBROUTINE DISK STATUS CHECK ***
30 DD=DS:IF DD THEN PRINT "DISK ERROR";DS$
40 RETURN
50 REM *** SUBROUTINE PROMPT Y/N ***
60 DO:INPUT "CONTINUE (Y/N)",A$ 
70 LOOP UNTIL A$="Y" OR A$="N"
80 RETURN
90 REM *** MAIN PROGRAM ***
100 DOPEN#2,"BIG DATA"
110 GOSUB 30: IF DD THEN DCLOSE#2:GOSUB 60:REM ASK
120 IF A$="N" THEN STOP
130 GOTO 100: REM RETRY
```

# GOTO

**Token:** \$89 (GOTO) or \$CB \$A4 (GO TO)

**Format:** **GOTO** line  
**GO TO** line

**Usage:** Continues program execution at the given BASIC line number.

**Remarks:** If the target **line** number is higher than the current line number, the search starts from the current line, proceeding to higher line numbers. If the target **line** number is lower, the search starts at the first **line** number of the program. It is possible to optimise the run-time speed of the program by grouping often used targets at the start (with lower line numbers).

**GOTO** (written as a single word) executes faster than **GO TO**.

**Example:** Using **GOTO**:

```
10 GOTO 100 :REM TO MAIN PROGRAM
20 REM *** SUBROUTINE DISK STATUS CHECK ***
30 DD=DS:IF DD THEN PRINT "DISK ERROR";DS$
40 RETURN
50 REM *** SUBROUTINE PROMPT Y/N ***
60 DO:INPUT "CONTINUE (Y/N)";A$
70 LOOP UNTIL A$="Y" OR A$="N"
80 RETURN
90 *** MAIN PROGRAM ***
100 DOPEN#2,"BIG DATA"
110 GOSUB 30: IF DD THEN DCLOSE#2:GOSUB 60:REM ASK
120 IF A$="N" THEN STOP
130 GOTO 100: REM RETRY
```

# GRAPHIC

**Token:** \$DE

**Format:** **GRAPHIC CLR**

**Usage:** Bitmap graphics: initialises the BASIC bitmap graphics system. It clears the graphics memory and screen, and sets all parameters of the graphics context to their default values.

Once the graphics system has been cleared, commands such as **LINE**, **PALETTE**, **PEN**, **SCNCLR**, and **SCREEN** can be used to set graphics system parameters.

**Example:** Using **GRAPHIC**:

```
100 REM GRAPHIC
110 GRAPHIC CLR      : REM INITIALISE
120 SCREEN DEF 1,1,1,2 : REM 640 X 400 X 2
130 SCREEN OPEN 1     : REM OPEN IT
140 SCREEN SET 1,1    : REM VIEW IT
150 PALETTE 1,0,0, 0,0 : REM BLACK
160 PALETTE 1,1,0,15,0 : REM GREEN
170 SCNCLR 0          : REM FILL SCREEN WITH BLACK
180 PEN 0,1            : REM SELECT PEN
190 LINE 50,50,590,350 : REM DRAW LINE
200 GETKEY A$         : REM WAIT FOR KEYPRESS
210 SCREEN CLOSE 1    : REM CLOSE SCREEN AND RESTORE PALETTE
```

# HEADER

**Token:** \$F1

**Format:** **HEADER** diskname [,I id] [,D drive] [,U unit]

**Usage:** Formats a disk. *This erases all data on the disk.*

I The disk ID.

**diskname** is either a quoted string, e.g. "DATA" or a string expression in brackets, e.g. (DMS). The maximum length of **diskname** is 16 characters.

**drive** drive # in dual drive disk units.

The drive # defaults to 0 and can be omitted on single drive units such as the 1541, 1571, or 1581.

**unit** device number on the IEC bus. Typically in the range from 8 to 11 for disk units. If a variable is used, it must be placed in brackets. The unit # defaults to 8.

**Remarks:** **HEADER** is another name for the **FORMAT** command.

For new floppy disks which have not already been formatted in MEGA65 (1581) format, it is necessary to specify the disk ID with the I parameter. This switches the format command to low level format, which writes sector IDs and erases all contents. This takes some time, as every block on the floppy disk will be written.

If the I parameter is omitted, a quick format will be performed. This is only possible if the disk has already been formatted as a MEGA65 or 1581 floppy disk. A quick format writes the new disk name and clears the block allocation map, marking all blocks as free. The disk ID is not changed, and blocks are not overwritten, so contents may be recovered with **ERASE R**. You can read more about **ERASE** on page 103.

**Examples:** Using **HEADER**

```
HEADER "ADVENTURE",IDK : FORMAT DISK WITH NAME ADVENTURE AND ID DK  
HEADER "ZORK-I",U9      : FORMAT DISK IN UNIT 9 WITH NAME ZORK-I  
HEADER "DUNGEON",D1,U10: FORMAT DISK IN DRIVE 1 UNIT 10 WITH NAME DUNGEON
```

# HELP

**Token:** \$EA

**Format:** **HELP**

**Usage:** Displays information about where an error occurred in a BASIC program.

When the BASIC program stops due to an error, **HELP** can be used to gain further information. The interpreted line is listed, with the erroneous statement highlighted or underlined.

**Remarks:** Displays BASIC errors. For errors related to disk I/O, the disk status variable **DS** or the disk status string **DS\$** should be used instead.

**Example:** Using **HELP**

```
10 A=1.E20
20 B=A+A:C=EXP(A):PRINT A,B,C
RUN

?OVERFLOW ERROR IN 20
READY.
HELP

20 B=A+A:(B=EXP(A)):PRINT A,B,C
```

# **HEX\$**

**Token:** \$D2

**Format:** **HEX\$(numeric expression)**

**Returns:** A four character hexadecimal representation of the argument.

The argument must be in the range of 0 - 65535, corresponding to the hex numbers \$0000-\$FFFF.

**Remarks:** If real numbers are used as arguments, the fractional part will be ignored.  
In other words, real numbers will not be rounded.

**Example:** Using **HEX\$**:

```
PRINT HEX$(10),HEX$(100),HEX$(1000.9)
000A      0064      03E8
```

# HIGHLIGHT

**Token:** \$FE \$3D

**Format:** **HIGHLIGHT** colour [, mode]

**Usage:** Sets the colours used for code highlighting.

Different colours can be set for system messages, **REM** statements and BASIC 65 keywords.

**colour** is one of the first 16 colours in the current palette. See appendix 6 on page 299 for the list of colours in the default system palette.

**mode** indicates what the colour will be used for.

- **0** system messages (the default mode)
- **1** **REM** statements
- **2** BASIC keywords

**Remarks:** The system messages colour is used when displaying error messages, and in the output of **CHANGE**, **FIND**, and **HELP**. The colours for **REM** statements and BASIC keywords are used by **LIST**.

**Example:** Using **HIGHLIGHT** to change the colour of BASIC keywords to red.

```
LIST
10 REM *** THIS IS HELLO WORLD ***
20 PRINT "HELLO WORLD"
READY,
HIGHLIGHT 8,2
READY,
LIST
10 REM *** THIS IS HELLO WORLD ***
20 PRINT "HELLO WORLD"
READY.
```

# IF

**Token:** \$8B

**Format:** **IF** expression **THEN** true clause [**ELSE** false clause]

**Usage:** Starts a conditional execution statement.

**expression** a logical or numeric expression. A numeric expression is evaluated as **FALSE** if the value is zero and **TRUE** for any non-zero value.

**true clause** one or more statements starting directly after **THEN** on the same line. A linenumber after **THEN** performs a **GOTO** to that line instead.

**false clause** one or more statements starting directly after **ELSE** on the same line. A linenumber after **ELSE** performs a **GOTO** to that line instead.

**Remarks:** The standard **IF ... THEN ... ELSE** structure is restricted to a single line. But the **true clause** and **false clause** may be expanded to several lines using a compound statement surrounded with **BEGIN** and **BEND**.

**Example:** Using **IF**

```
1 REM IF
10 RED$=CHR$(28) : BLACK$=CHR$(144) : WHITE$=CHR$(5)
20 INPUT "ENTER A NUMBER";V
30 IF V<0 THEN PRINT RED$; : ELSE PRINT BLACK$;
40 PRINT V : REM PRINT NEGATIVE NUMBERS IN RED
50 PRINT WHITE$
60 INPUT "END PROGRAM: (Y/N)"; A$
70 IF A$="Y" THEN END
80 IF A$="N" THEN 20 : ELSE 60
```

# IMPORT

**Token:** \$DD

**Format:** **IMPORT** filename [,D drive] [,U unit]

**Usage:** Loads BASIC code in text format from a file of type **SEQ** into memory reserved for BASIC programs.

**filename** the name of a file. Either a quoted string such as "DATA", or a string expression in brackets such as (FI\$).

**drive** drive # in dual drive disk units.

The drive # defaults to **0** and can be omitted on single drive units such as the 1541, 1571, or 1581.

**unit** device number on the IEC bus. Typically in the range from 8 to 11 for disk units. If a variable is used, it must be placed in brackets. The unit # defaults to **8**.

**Remarks:** The program is loaded into BASIC memory and converted from text to the tokenised form of **PRG** files. This enables loading of BASIC programs that were saved as plain text files as program listing.

After loading, the program is re-linked and ready to be **RUN** or edited. It is possible to use **IMPORT** for merging a program text file from disk to a program already in memory. Each line read from the file is processed in the same way, as if typed from the user with the screen editor.

There is no **EXPORT** counterpart, because this function is already available. The sequence **DOPEN#1,"LISTING",W:CMD 1:LIST:DCLOSE#1** converts the program in memory to text and writes it to the file, that is named in the **DOPEN** statement.

**Examples:** Using **IMPORT**

```
IMPORT "APOCALYPSE"  
IMPORT "MEGA TOOLS",U9  
IMPORT (FI$),U(UNX)
```

# INPUT

**Token:** \$85

**Format:** INPUT [prompt <, | ;>] variable [, variable ...]

**Usage:** Prompts the user for keyboard input, printing an optional prompt string and question mark to the screen.

**prompt** optional string expression to be printed as the prompt

If the separator between **prompt** and **variable list** is a comma, the cursor is placed directly after the prompt. If the separator is a semicolon, a question mark and a space is added to the prompt instead.

**variable list** list of one or more variables that receive the input

The input will be processed after the user presses .

**Remarks:** The user must take care to enter the correct type of input, so it matches the **variable list** types. Also, the number of input items must match the number of variables. A surplus of input items will be ignored, whereas too few input items trigger another request for input with the prompt ???. Typing non numeric characters for integer or real variables will produce a **TYPE MISMATCH ERROR**. Strings for string variables must be in double quotes ("") if they contain spaces or commas. Many programs that need a safe input routine use **LINE INPUT** and a custom parser, in order to avoid program errors by wrong user input.

**Example:** Using **INPUT**:

```
10 DIM N$(100),A%(100),S$(100)
20 DO
30 INPUT "NAME, AGE, GENDER";N$,A%,S$
40 IF N$="" THEN 30
50 IF N$="END" THEN EXIT
60 IF A% < 18 OR A% > 100 THEN PRINT "AGE?":GOTO 30
70 IF S$ <> "M" AND S$ <> "F" THEN PRINT "GENDER?":GOTO 30
80 REM CHECK OK: ENTER INTO ARRAY
90 N$(N)=N$:A%(N)=A%:S$(N)=S$:N=N+1
100 LOOP UNTIL N=100
110 PRINT "RECEIVED";N;" NAMES"
```

# INPUT#

**Token:** \$84

**Format:** **INPUT#** channel, variable [, variable ...]

**Usage:** Reads a record from an input device, e.g. a disk file, and assigns the data to the variables in the list.

**channel** number, which was given to a previous call to commands such as **DOPEN**, or **OPEN**.

**variable list** list of one or more variables, that receive the input.

The input record must be terminated by a RETURN character and must be not longer than the input buffer (160 characters).

**Remarks:** The type and number of data in a record must match the variable list. Reading non numeric characters for integer or real variables will produce a **FILE DATA ERROR**. Strings for string variables have to be put in quotes if they contain spaces or commas.  
**LINE INPUT#** may be used to read a whole record into a single string variable.

Sequential files, that can be read by **INPUT#** can be generated by programs with **PRINT#** or with the editor of the MEGA65. For example:

```
EDIT ON  
  
10 "CHUCK PEDDLE",1937,"ENGINEER OF THE 6502"  
20 "JACK TRAMIEL",1928,"FOUNDER OF CBM"  
30 "BILL MENSCH",1945,"HARDWARE"  
  
DSAVE "CBM-PEOPLE"  
EDIT OFF
```

**Example:** Using **INPUT#**:

```
10 DIM N$(100),B%(100),S$(100):
20 DOPEN#2,"CBM-PEOPLE":REM OPEN SEQ FILE
25 IF DS THEN PRINT DS$:STOP:REM OPEN ERROR
30 FOR I=0 TO 100
40 INPUT#2,N$(I),B%(I),S$(I)
50 IF ST AND 64 THEN 80:REM END OF FILE
60 IF DS THEN PRINT DS$:GOTO 80:REM DISK ERROR
70 NEXT I
80 DCLOSE#2
110 PRINT "READ";I+1;" RECORDS"
120 FOR J=0 TO I:PRINT N$(J):NEXT J
```

RUN  
READ 3 RECORDS  
CHUCK PEDDLE  
JACK TRAMIEL  
BILL MENSCH

TYPE "CBM-PEOPLE"  
"CHUCK PEDDLE",1937,"ENGINEER OF THE 6502"  
"JACK TRAMIEL",1928,"FOUNDER OF CBM"  
"BILL MENSCH",1945,"HARDWARE"

# INSTR

**Token:** \$D4

**Format:** **INSTR**(haystack, needle [, start])

**Usage:** Locates the position of the string expression **needle** in the string expression **haystack**, and returns the index of the first occurrence, or zero if there is no match.

The string expression **haystack** is searched for the occurrence of the string expression **needle**.

An enhanced version of string search using pattern matching is used if the first character of the search string is a pound sign '#'. The pound sign is not part of the search but enables the use of the '.' (dot) as a wildcard character, which matches any character. The second special pattern character is the '\*' (asterisk) character. The asterisk in the search string indicates that the preceding character may never appear, appear once, or repeatedly in order to be considered as a match.

The optional argument **start** is an integer expression, which defines the starting position for the search in **haystack**. If not present, it defaults to one.

**Remarks:** If either string is empty or there is no match the function returns zero.

**Examples:** Using **INSTR**:

```
I = INSTR("ABCDEF","CD")      : REM I = 3
I = INSTR("ABCDEF","XY")      : REM I = 0
I = INSTR("RAIIIN","*A*IN")   : REM I = 5
I = INSTR("ABCDEF","E.C.E")   : REM I = 3
I = INSTR(A$+B$,C$)
```

# INT

**Token:** \$B5

**Format:** INT(numeric expression)

**Returns:** The integer part of a number.

This function is **NOT** limited to the typical 16-bit integer range (-32768 to 32767), as it uses real arithmetic. The allowed range is therefore determined by the size of the real mantissa which is 32-bits wide (-2147483648 to 2147483647).

**Remarks:** It is not necessary to use the **INT** function for assigning real values to integer variables, as this conversion will be done implicitly, but only for the 16-bit range.

**Examples:** Using **INT**:

```
X = INT(1.9)      :REM X = 1
X = INT(-3.1)     :REM X = -3
X = INT(100000.5) :REM X = 100000
N% = INT(100000.5) :REM ?ILLEGAL QUANTITY ERROR
```

# JOY

**Token:** \$CF

**Format:** JOY(port)

**Returns:** The state of the joystick for the selected controller port (1 or 2).

Bit 7 contains the state of the fire button. The stick can be moved in eight directions, which are numbered clockwise starting at the upper position.

	<b>Left</b>	<b>Centre</b>	<b>Right</b>
Up	8	1	2
Centre	7	0	3
Down	6	5	4

**Example:** Using JOY:

```
10 N = JOY(1)
20 IF N AND 128 THEN PRINT "FIRE!";
30 REM           N   NE  E   SE  S   SW  W   NW
40 ON N AND 15 GOSUB 100,200,300,400,500,600,700,800
50 GOTO 10
100 PRINT "GO NORTH":RETURN
200 PRINT "GO NORTHEAST":RETURN
300 PRINT "GO EAST":RETURN
400 PRINT "GO SOUTHEAST":RETURN
500 PRINT "GO SOUTH":RETURN
600 PRINT "GO SOUTHWEST":RETURN
700 PRINT "GO WEST":RETURN
800 PRINT "GO NORTHWEST":RETURN
```

# KEY

**Token:** \$F9

**Format:** **KEY**

**KEY <ON | OFF>**

**KEY <LOAD | SAVE> filename**

**KEY** number, string

**Usage:** Manages the function key macros in the BASIC editor.

Each function key can be assigned a string that is typed when pressed. The function keys have default assignments on boot, and can be changed by the **KEY** command.

**KEY** : list current assignments.

**KEY ON** : switch on function key strings. The keys will send assigned strings if pressed.

**KEY OFF** : switch off function key strings. The keys will send their character code if pressed.

**KEY LOAD** filename : loads key definitions from file.

**KEY SAVE** filename : saves key definitions to file.

**KEY** number, string : assigns the string to the key with the given number.

**number** can be any value within this range:

- **1 - 14**: corresponds to keys ranging from **F1** to **F14**
- **15**: corresponds to **HELP**
- **16**: corresponds to **SHIFT** **RUN STOP**

Default assignments:

```
KEY  
KEY 1,CHR$(27)+"X"  
KEY 2,CHR$(27)+"0"  
KEY 3,"DIR"+CHR$(13)  
KEY 4,"DIR "+CHR$(34)+"*=PRG"+CHR$(34)+CHR$(13)  
KEY 5,"  
KEY 6,"KEY6"+CHR$(141)  
KEY 7,"  
KEY 8,"MONITOR"+CHR$(13)  
KEY 9,"  
KEY 10,"KEY10"+CHR$(141)  
KEY 11,"  
KEY 12,"KEY12"+CHR$(141)  
KEY 13,CHR$(27)+"0"  
KEY 14,""+CHR$(27)+"0"  
KEY 15,"HELP"+CHR$(13)  
KEY 16,"RUN "+CHR$(34)+"*"+CHR$(34)+CHR$(13)
```

**Remarks:** The sum of the lengths of all assigned strings must not exceed 240 characters. Special characters such as RETURN or QUOTE are entered using their codes with the **CHR\$** function. Refer to **CHR\$** on page 48 for more information.

**Examples:** Using **KEY**:

KEY ON	:REM ENABLE FUNCTION KEYS
KEY OFF	:REM DISABLE FUNCTION KEYS
KEY	:REM LIST ASSIGNMENTS
KEY 2,"PRINT A"+CHR\$(14)	:REM ASSIGN PRINT PI TO F2
KEY SAVE "MY KEY SET"	:REM SAVE CURRENT DEFINITIONS TO FILE
KEY LOAD "ELEVEN-SET"	:REM LOAD DEFINITIONS FROM FILE

# LEFT\$

**Token:** \$C8

**Format:** LEFT\$(string, n)

**Returns:** A string containing the first **n** characters from the argument **string**.

If the length of **string** is equal to or less than **n**, the resulting string will be identical to the argument string.

**string** a string expression

**n** a numeric expression (0 – 255)

**Remarks:** Empty strings and zero length strings are legal values.

**Example:** Using LEFT\$:

```
PRINT LEFT$("MEGA-65",4)  
MEGA
```

# LEN

**Token:** \$C3

**Format:** **LEN**(string)

**Returns:** The length of a string.

**string** a string expression

**Remarks:** Commodore BASIC strings can contain any character, including the null character. Internally, the length of a string is stored in a string descriptor.

**Example:** Using **LEN**:

```
PRINT LEN("MEGA-65"+CHR$(13))  
8
```

# LET

**Token:** \$88

**Format:** [LET] variable = expression

**Usage:** Assigns values (or results of expressions) to variables.

**Remarks:** The **LET** statement is obsolete and not required. Assignment to variables can be done without using **LET**, but it has been left in BASIC 65 for backwards compatibility.

**Examples:** Using **LET**:

```
LET A=5 :REM LONGER AND SLOWER  
A=5 :REM SHORTER AND FASTER
```

# LINE

**Token:** \$E5

**Format:** **LINE** xbeg, ybeg [, xnxt1, ynxt1 ...]

**Usage:** Bitmap graphics: draws a line or series of lines.


If only one coordinate pair is given, **LINE** draws a dot.

If more than one pair is defined, a line is drawn on the current graphics screen from the coordinate (xbeg/ybeg) to the next coordinate pair(s).

All currently defined modes and values of the graphics context are used.

**Example:** Using **LINE**:

```
1 REM SCREEN EXAMPLE 1
10 SCREEN 320,200,2      :REM SCREEN #0 320 X 200 X 2
20 PEN 1                  :REM DRAWING PEN COLOUR 1 (WHITE)
30 LINE 25,25,295,175    :REM DRAW LINE
40 GETKEY A$              :REM WAIT FOR KEYPRESS
50 SCREEN CLOSE            :REM CLOSE SCREEN AND RESTORE PALETTE
```

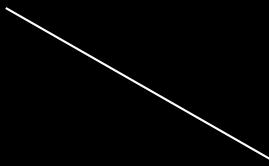

# LINE INPUT

**Token:** \$E5 \$85

**Format:** **LINE INPUT** [prompt <, | ;>] string variable [, string variable ...]

**Usage:** Prompts the user for keyboard input, printing an optional prompt string and question mark to the screen.

**prompt** optional string expression to be printed as the prompt

If the separator between **prompt** and the first **string variable** is a comma, the cursor is placed directly after the prompt. If the separator is a semicolon, a question mark and a space is added to the prompt instead.

**string variable** one or more string variables that accept one line of input each

**Remarks:** This differs from **INPUT** in how the input is parsed. **LINE INPUT** accepts every character entered on a line as a single string value. Only the  key does not produce a character.

If the variable list has more than one variable, **LINE INPUT** will use the entire first line for the first variable, and present the ?? prompt for each subsequent variable.

**LINE INPUT** only works with string variables. If a non-string variable is used, **LINE INPUT** throws produces a **TYPE MISMATCH ERROR** after data has been entered.

**Example:** Using **LINE INPUT**:

```
10 LINE INPUT "ENTER A PHRASE: ",PH$  
20 PRINT "THE PHRASE YOU ENTERED:";CHR$(13);" ",PH$  
RUN  
ENTER A PHRASE: YOU SAY "POTATO," I SAY "POTATO."  
THE PHRASE YOU ENTERED:  
YOU SAY "POTATO," I SAY "POTATO."
```

# LINE INPUT#

**Token:** \$E5 \$84

**Format:** **LINE INPUT#** channel, variable [, variable ...]

**Usage:** Reads one record per variable from an input device, (such as a disk drive) and assigns the read data to the variable.

The records must be terminated by a **RETURN** character, which will not be copied to the string variable. Therefore, an empty line consisting of only the **RETURN** character will result in an empty string being assigned.

**channel** number, which was given to a previous call to commands such as **DOPEN**, or **OPEN**.

**variable list** list of one or more variables, that receive the input.

**Remarks:** Only string variables or string array elements can be used in the variable list. Unlike other INPUT commands, **LINE INPUT#** does not interpret or remove quote characters in the input. They are accepted as data, as all other characters.

Records must not be longer than the input buffer, which is 160 characters.

**Example:** Using **LINE INPUT#**:

```
10 DIM NS(100)
20 DOPEN#2,"DATA"
30 FOR I=0 TO 100
40 LINE INPUT#2,NS(I)
50 IF ST=64 THEN 80:REM END OF FILE
60 IF DS THEN PRINT DS$:GOTO 80:REM DISK ERROR
70 NEXT I
80 DCLOSE#2
110 PRINT "READ";I;" RECORDS"
```

# LIST

**Token:** \$9B

**Format:** **LIST [P] [line range]**

**Usage:** Lists a range of lines from the BASIC program in memory.

Given a single line number, **LIST** lists that line.

Given a range of line numbers, **LIST** lists all lines in that range. A range can be two numbers separated by a hyphen (-), or it can omit the beginning or end of the range to imply the beginning or end of the program. (See examples below.)

**Format:** **LIST [P] filename [,U unit]**

**Usage:** Lists a range of lines from a BASIC program directly from a file.

**Remarks:** The optional parameter **P** enables page mode. After listing a screenful of lines, the listing will stop and display the prompt **[MORE]** at the bottom of the screen. Pressing **Q** quits page mode, while any other key continues to the next page.

**LIST** output can be redirected to other devices via **CMD**.

Another way to display a program listing from memory on the screen is to use the keys **F9** and **F11**, or **Ctrl** **P** and **Ctrl** **V**, to scroll a BASIC listing on screen up or down.

**Examples:** Using **LIST**

```
LIST 100      :REM LIST LINE 100
LIST 240-350  :REM LIST ALL LINES FROM 240 TO 350
LIST 500-    :REM LIST FROM 500 TO END
LIST -70     :REM LIST FROM START TO 70
LIST "DEMO"   :REM LIST FILE "DEMO"
LIST P       :REM LIST PROGRAM IN PAGE MODE
LIST P "MURX" :REM LIST FILE "MURX" IN PAGE MODE
```

# LOAD

**Token:** \$93

**Format:**

- LOAD** filename [, unit [, flag]]
- LOAD** "\$[pattern=type]" [, unit]
- LOAD** "\$\$[pattern=type]" [, unit]
- / filename [, unit [, flag]]

**Usage:** The first form loads a file of type **PRG** into memory reserved for BASIC programs.

The second form loads a directory into memory, which can then be viewed with **LIST**. It is structured like a BASIC program, but file sizes are displayed instead of line numbers.

The third form is similar to the second one, but the files are numbered. This listing can be scrolled like a BASIC program with the keys **F9** or **F11**, edited, listed, saved or printed.

A filter can be applied by specifying a pattern or a pattern and a type. The asterisk \* matches the rest of the name, while the ? matches any single character. The type specifier can be a character of (P,S,U,R), that is Program, Sequential, User, or Relative file.

A common use of the shortcut symbol / is to quickly load **PRG** files. To do this:

1. Print a disk directory using either **DIR**, or **CATALOG**.
2. Move the cursor to the desired line.
3. type / in the first column of the line, and press **RETURN**.

After pressing **RETURN**, the listed file on the line with the leading / will be loaded. Characters before and after the file name double quotes ("") will be ignored. This applies to **PRG** files only.

**filename** is either a quoted string, e.g. "PROG", or a string expression.

The unit number is optional. If not present, the default disk device is assumed.

If **flag** has a non-zero value, the file is loaded to the address which is read from the first two bytes of the file. Otherwise, it is loaded to the start of BASIC memory and the load address in the file is ignored.

**Remarks:** **LOAD** loads files of type **PRG** into RAM bank 0, which is also used for BASIC program source.

**LOAD "/\*"** can be used to load the first **PRG** from the given **unit**.

**LOAD "\$"** can be be used to load the list of files from the given **unit**. When using **LOAD "\$"**, **LIST** can be used to print the listing to screen.

**LOAD** is implemented in BASIC 65 to keep it backwards compatible with BASIC V2.

The shortcut symbol / can only be used in direct mode.

By default the C64 uses **unit** 1, which is assigned to datasette tape recorders connected to the cassette port. However the MEGA65 uses **unit** 8 by default, which is assigned to the internal disk drive. This means you don't need to add ,8 to **LOAD** commands that use it.

**Examples:** Using **LOAD**

```
LOAD "APOCALYPSE" :REM LOAD A FILE CALLED APOCALYPSE TO BASIC MEMORY
LOAD "MEGA TOOLS",9 :REM LOAD A FILE CALLED "MEGA TOOLS" FROM UNIT 9 TO BASIC MEMORY
LOAD "*",8,1      :LOAD THE FIRST FILE ON UNIT 8 TO RAM AS SPECIFIED IN THE FILE

LOAD "$"          :REM LOAD WHOLE DIRECTORY - WITH FILE SIZES
LOAD "$$"         :REM LOAD WHOLE DIRECTORY - SCROLLABLE
LOAD "$$XX=P"     :REM DIRECTORY, WITH PRG FILES STARTING WITH 'X'
```

# LOADIFF

**Token:** \$FE \$43

**Format:** **LOADIFF** filename [,D drive] [,U unit]

**Usage:** Bitmap graphics: loads an IFF file into graphics memory.

The IFF (Interchange File Format) is supported by many different applications and operating systems. **LOADIFF** assumes that files contain bit-plane graphics which match the currently active graphics screen for resolution and colour depth.

Supported resolutions are:

Width	Height	Bitplanes	Colours	Memory
320	200	max. 8	max. 256	max. 64 K
640	200	max. 8	max. 256	max. 128 K
320	400	max. 8	max. 256	max. 128 K
640	400	max. 4	max. 16	max. 128 K

**filename** the name of a file. Either a quoted string such as "DATA", or a string expression in brackets such as {FI\$}.

**drive** drive # in dual drive disk units.

The drive # defaults to **0** and can be omitted on single drive units such as the 1541, 1571, or 1581.

**unit** device number on the IEC bus. Typically in the range from 8 to 11 for disk units. If a variable is used, it must be placed in brackets. The unit # defaults to **8**.

**Remarks:** Tools are available to convert popular image formats to IFF. These tools are available on several operating systems, such as AMIGA OS, macOS, Linux, and Windows. For example, **ImageMagick** is a free graphics package that includes a tool called **convert**, which can be used to create IFF files in conjunction with the **ppmtoilbm** tool from the **Netpbm** package.

To use **convert** and **ppmtoilbm** for converting a JPG file to an IFF file on Linux:

```
convert <myImage.jpg> <myImage.ppm>
ppmtoilbm -aga <myImage.ppm> > <myImage.iff>
```

**Example:** Using **LOADIFF**

```
100 BANK128:SCNCLR
110 REM DISPLAY PICTURES IN 320 X 200 X 7 RESOLUTION
120 GRAPHIC CLR:SCREEN DEF 0,0,0,7:SCREEN OPEN 0:SCREEN SET 0,0
130 FORI=1TO7: READF$
140 LOADIFF(F$+".IFF"):SLEEP 4:NEXT
150 DATA ALIEN,BEAKER,JOKER,PICARD,PULP,TROOPER,RIPLEY
160 SCREEN CLOSE 0
170 PALETTE RESTORE
```

# LOCK

**Token:** \$FE \$50

**Format:** **LOCK** filename/pattern [,D drive] [,U unit]

**Usage:** Locks a file on disk, preventing it from being updated or deleted.

The specified file or a set of files, that matches the pattern, is locked and cannot be deleted with the commands **DELETE**, **ERASE** or **SCRATCH**.

The command **UNLOCK** removes the lock.

**filename** the name of a file. Either a quoted string such as "DATA", or a string expression in brackets such as (FI\$).

**drive** drive # in dual drive disk units.

The drive # defaults to **0** and can be omitted on single drive units such as the 1541, 1571, or 1581.

**unit** device number on the IEC bus. Typically in the range from 8 to 11 for disk units. If a variable is used, it must be placed in brackets. The unit # defaults to **8**.

**Remarks:** In direct mode the number of locked files is printed. The second to last number from the message contains the number of locked files,

**Examples:** Using **LOCK**

```
LOCK "DRM",U9 :REM LOCK FILE DRM ON UNIT 9  
03,FILES LOCKED,01,00  
LOCK "B$*"    :REM LOCK ALL FILES BEGINNING WITH "BS"  
03,FILES LOCKED,04,00
```

# LOG

**Token:** \$BC

**Format:** **LOG**(numeric expression)

**Returns:** The natural logarithm of a number.

The natural logarithm uses Euler's number (**2.71828183**) as base, not base 10 which is typically used in log functions on a pocket calculator.

**Remarks:** The log function with base 10 can be computed by dividing the result by  $\log(10)$ . **LOG10()** provides this feature as a function.

**Example:** Using **LOG**

```
PRINT LOG(1)
0

PRINT LOG(0)
?ILLEGAL QUANTITY ERROR

PRINT LOG(4)
1.38629436

PRINT LOG(100) / LOG(10)
2
```

# LOG10

**Token:** \$CE \$08

**Format:** **LOG10**(numeric expression)

**Returns:** The decimal logarithm of the argument.

The decimal logarithm uses 10 as base.

**Example:** Using **LOG10**

```
PRINT LOG10(1)
0

PRINT LOG10(0)
?ILLEGAL QUANTITY ERROR

PRINT LOG10(5)
0.69897

PRINT LOG10(100);LOG10(10);LOG10(1);LOG10(0.1);LOG10(0.01)
2 1 0 -1 -2
```

# LOOP

**Token:** \$EC

**Format:** **DO** ... **LOOP**

**DO** [<**UNTIL** | **WHILE**> logical expression]  
. . . statements [**EXIT**]  
**LOOP** [<**UNTIL** | **WHILE**> logical expression]

**Usage:** **DO** and **LOOP** define the start of a BASIC loop. Using **DO** and **LOOP** alone without any modifiers creates an infinite loop, which can only be exited by the **EXIT** statement. The loop can be controlled by adding **UNTIL** or **WHILE** after the **DO** or **LOOP**.

**Remarks:** **DO** loops may be nested. An **EXIT** statement only exits the current loop.

**Examples:** Using **DO** and **LOOP**

```
10 PW$="" : DO  
20 GET A$: PW$=PW$+A$  
30 LOOP UNTIL LEN(PW$)>7 OR A$=CHR$(13)  
  
10 DO : REM WAIT FOR USER DECISION  
20 GET A$  
30 LOOP UNTIL A$="Y" OR A$="N" OR A$="y" OR A$="n"  
  
10 DO WHILE ABS(EPS) > 0.001  
20 GOSUB 2000 : REM ITERATION SUBROUTINE  
30 LOOP  
  
10 IX=0 : REM INTEGER LOOP 1-100  
20 DO IX=IX+1  
30 LOOP WHILE IX < 101
```

# LPEN

**Token:** \$CE \$04

**Format:** LPEN(coordinate)

**Returns:** The state of a light pen peripheral.

This function requires the use of a CRT monitor (or TV), and a light pen. It will not work with an LCD or LED screen. The light pen must be connected to port 1.

**LPEN(0)** returns the X position of the light pen, the range is 60 – 320.

**LPEN(1)** returns the Y position of the light pen, the range is 50 – 250.

**Remarks:** The X resolution is two pixels, therefore **LPEN(0)** only returns even numbers. A bright background colour is needed to trigger the light pen. The **COLLISION** statement may be used to enable an interrupt handler.

**Example:** Using LPEN

```
PRINT LPEN(0),LPEN(1) :REM PRINT LIGHT PEN COORDINATES
```

# MEM

**Token:** \$FE \$23

**Format:** **MEM mask4,mask5**

**Usage:** Reserves memory in banks 4 or 5 such that the bitmap graphics system will not use it.

**mask4** and **mask5** are byte values, that are interpreted as mask of 8 bits. Each bit set to 1 reserves an 8K segment of memory in bank 4 for the first argument and in bank 5 for the second argument.

bit	memory segment
0	\$0000 - \$1FFF
1	\$2000 - \$3FFF
2	\$4000 - \$5FFF
3	\$6000 - \$7FFF
4	\$8000 - \$9FFF
5	\$A000 - \$BFFF
6	\$C000 - \$DFFF
7	\$E000 - \$FFFF

**Remarks:** After reserving memory with **MEM** the graphics library will not use the reserved areas, so it can be used for other purposes. Access to bank 4 and 5 is possible with the commands **PEEK**, **WPEEK**, **POKE**, **WPOKE** and **EDMA**.

If a graphics screen cannot be opened, because the remaining memory is not sufficient, the program stops with a ?OUT OF MEMORY ERROR.

Some direct mode commands like **RENUMBER** use memory in banks 4 and 5 and do not honour **MEM** reservations. Such reservations are only guaranteed during program execution.

**Example:** Using **MEM**

```
10 MEM 1,3      :REM RESERVE $40000 - $41FFF AND $50000 - $53FFF
20 SCREEN 320,200 :REM SCREEN WILL NOT USE RESERVED SEGMENTS
40 EDMA 3,$2000,0,$4000:REM FILL SEGMENT WITH ZEROES
```

# MERGE

**Token:** \$E6

**Format:** **MERGE** filename [,D drive] [,U unit]

**Usage:** Loads a BASIC program file from disk and appends it to the program in memory.

**filename** the name of a file. Either a quoted string such as "DATA", or a string expression in brackets such as (FI\$).

**drive** drive # in dual drive disk units.

The drive # defaults to **0** and can be omitted on single drive units such as the 1541, 1571, or 1581.

**unit** device number on the IEC bus. Typically in the range from 8 to 11 for disk units. If a variable is used, it must be placed in brackets. The unit # defaults to **8**.

**Remarks:** The load address that is stored in the first two bytes of the file is ignored. The loaded program does not replace a program in memory (which is what **DLOAD** does), but is appended to a program in memory. After loading, the program is re-linked and ready to run or edit.

It is the user's responsibility to ensure that there are no line number conflicts among the program in memory and the merged program. The first line number of the merged program must be greater than the last line number of the program in memory.

**Example:** Using **MERGE**

```
DLOAD "MAIN PROGRAM"  
MERGE "LIBRARY"
```

# MID\$

**Token:** \$CA

**Format:** **MID\$(string, index, n)**

**MID\$(string variable, index, n)** = string expression

**Usage:** As a function, the substring of a string. As a statement, replaces a substring of a string variable with another string.

**string** a string expression.

**index** start index (1 - 255).

**n** length of sub-string (0 - 255).

**Remarks:** Empty strings and zero lengths are legal values.

**Example:** Using **MID\$**:

```
10 A$ = "MEGA-65"
20 PRINT MID$(A$,3,4)
30 MID$(A$,5,1) = "+"
40 PRINT A$
RUN
GA-
MEGA+65
```

# MKDIR

**Token:** \$FE \$51

**Format:** **MKDIR** dirname ,L size [,U unit]

**Usage:** Makes (creates) a subdirectory on a floppy or D81 disk image.

**dirname** the name of a directory. Either a quoted string such as "SOMEDIR", or a string expression in brackets such as (DR\$).

**MKDIR** can only be used on units managed by CBDOS. These are the internal floppy disk drive and SD-Card images of **D81** type. The command cannot be used on external drives connected to the serial IEC bus.

The **size** parameter specifies the number of tracks, to be reserved for the subdirectory, with one track = 40 sectors at 256 byte. The first track of the reserved range is used as directory track for the subdirectory.

The minimum size is 3 tracks, the maximum 38 tracks. There must be a contiguous region of empty tracks on the floppy (D81 image), that is large enough for the creation of the subdirectory. The error message **DISK FULL** is reported if there isn't such a region.

Several subdirectories may be created as long as there are enough empty tracks.

After successful creation of the subdirectory an automatic **CHDIR** into this subdirectory is performed.

**CHDIR** "/" changes back to the root directory.

**Examples:** Using **MKDIR**

```
MKDIR "SUBDIR",L5 :REM MAKE SUBDIRECTORY WITH 5 TRACKS
DIR
0 "SUBDIR" 1D
160 BLOCKS FREE.
```

# MOD

**Token:** \$NN

**Format:** **MOD**(dividend, divisor)

**Returns:** The remainder of a division operation.

**Remarks:** In other programming languages such as C, this function is implemented as an operator (%). In BASIC 65 it is implemented as a function.

**Example:** Using **MOD**:

```
FOR I = 0 TO 8: PRINT MOD(I,4);: NEXT I  
0 1 2 3 0 1 2 3 0
```

# MONITOR

**Token:** \$FA

**Format:** MONITOR

**Usage:** Invokes the machine language monitor.

**Remarks:** Using the **MONITOR** requires knowledge of the CSG4510 / 6502 / 6510 CPU, the assembly language they use, and their architectures. More information on the **MONITOR** is available in the *MEGA65 Book, Machine Language Monitor (Appendix N)*.

To exit the monitor press **X**.

Help text can be displayed with either **?** or **H**.

**Example:** Using **MONITOR**

MONITOR

```
BS MONITOR COMMANDS ABCDEFGHIJKLMNOPQRSTUVWXYZ, >, ;, $, *, ?, !, S, U
PC SK AC XK YK ZX BP SP NOEBDIZC
; 00FFFA2 00 00 00 00 00 00 01F8 -----
ASSEMBLE - A ADDRESS MNEMONIC OPERAND
BITMAPS - B [FROM]
COMPARE - C FROM TO WITH
DISASSEMBLE - D [FROM TO]
FILL - F FROM TO FILLBYTE
GO - G [ADDRESS]
HUNT - H FROM TO (STRING OR BYTES)
JSR - J ADDRESS
LOAD - L FILENAME [UNIT [ADDRESS]]
MEMORY - M [FROM TO]
REGISTERS - R
SAVE - S FILENAME UNIT FROM TO
TRANSFER - T FROM TO TARGET
VERIFY - U FILENAME [UNIT [ADDRESS]]
EXIT - X
(DOT) - . ADDRESS MNEMONIC OPERAND
(>) (GREATER) - > ADDRESS BYTE SEQUENCE
(;) (SEMICOLON) - ; REGISTER CONTENTS
@POS - @ IDOS COMMAND
?HELP - ?
```

# MOUNT

**Token:** \$FE \$49

**Format:** **MOUNT** filename [,U unit]

**Usage:** Mounts a floppy image file of type **D81** from SD-Card to unit 8 (default) or unit 9.

If no argument is given, **MOUNT** assigns the real floppy drive of the MEGA65 to unit 8.

**filename** the name of a file. Either a quoted string such as "**DATA**", or a string expression in brackets such as **(FI\$)**.

**unit** device number on the IEC bus. Typically in the range from 8 to 11 for disk units. If a variable is used, it must be placed in brackets. The unit # defaults to **8**.

**Remarks:** **MOUNT** can be used either in direct mode or in a program. It searches the file on the SD-card and mounts it, as requested, on unit 8 or 9. After mounting the floppy image can be used as usual with all DOS commands.

**Examples:** Using **MOUNT**

```
MOUNT "APOCALYPSE.D81" ;REM MOUNT IMAGE TO UNIT 8
MOUNT "BASIC.D81",U9    ;REM MOUNT IMAGE TO UNIT 9
MOUNT (FI$),U(UN%)     ;REM MOUNT WITH VARIABLE ARGUMENTS
MOUNT                  ;REM SELECT REAL FLOPPY DRIVE
```

# MOUSE

**Token:** \$FE \$3E

**Format:** **MOUSE ON** [{, port, sprite, pos}]  
**MOUSE OFF**

**Usage:** Enables the mouse driver and connects the mouse at the specified port with the mouse pointer sprite.

**port** mouse port 1, 2 (default) or 3 (both).

**sprite** sprite number for mouse pointer (default 0).

**pos** initial mouse position (x,y).

**MOUSE OFF** disables the mouse driver and frees the associated sprite.

**Remarks:** The "hot spot" of the mouse pointer is the upper left pixel of the sprite.

When the system boots, sprite 0 is initialised to a picture of a mouse pointer.

Use **RMOUSE()** to test the location and button status of the mouse.

**Examples:** Using **MOUSE**:

```
REM LOAD DATA INTO SPRITE #0 BEFORE USING IT
MOUSE ON, 1      :REM ENABLE MOUSE WITH SPRITE #0
MOUSE OFF        :REM DISABLE MOUSE
```

# MOVSPR

**Token:** \$FE \$06

**Format:** **MOVSPR** number, position

**Usage:** Moves a sprite to a location on screen.

Each **position** argument consists of two 16-bit values, which specify either an absolute coordinate, a relative coordinate, an angle, or a speed. The value type is determined by a prefix:

- **+value** relative coordinate: positive offset.
- **-value** relative coordinate: negative offset.
- **#value** speed.

If no prefix is given, the absolute coordinate or angle is used.

Therefore, the position argument can be used to either:

- set the sprite to an absolute position on screen.
- specify a displacement relative from the current position.
- trigger a relative movement from a specified position.
- describe movement with an angle and speed starting from the current position.

**MOVSPR** number, **position** is used to set the sprite immediately to the position or, in the case of an angle#speed argument, describe its further movement.

**Format:** **MOVSPR** number, start-position **TO** end-position, speed

**Usage:** Places the sprite at the start position, defines the destination position, and the speed of movement.

The sprite is placed at the start position, and will move in a straight line to the destination at the given speed. Coordinates must be absolute or relative. The movement is controlled by the BASIC interrupt handler and happens concurrently with the program execution.

**number** sprite number (0 - 7).

**position** x,y | xrel,y | x,yrel | xrel,yrel | angle#speed.

**x** absolute screen coordinate pixel.

**y** absolute screen coordinate pixel.

**xrel** relative screen coordinate pixel.

**yrel** relative screen coordinate pixel.


**angle** compass direction for sprite movement [degrees]. 0: up, 90: right, 180: down, 270: left, 45 upper right, etc.

**speed** speed of movement, configured as a floating point number in the range of 0.0 – 127.0, in pixels per frame. PAL has 50 frames per second whereas NTSC has 60 frames per second. A speed value of 1.0 will move the sprite 50 pixels per second in PAL mode.

**Remarks:** The "hot spot" is the upper left pixel of the sprite.

**Example:** Using **MOVSPR**:

```
100 CLR:SCNCLR:SPRITECLR  
110 BLOAD "DEMOsprites1",B0,P1536  
130 FORT=0TO7: C=I+1:SP=0.07*(I+1)  
140 MOVSPRI, 160,120  
145 MOVSPRI,45*I#SP  
150 SPRITEI,1,C,,0,0  
160 NEXT  
170 SLEEP 3  
180 FORI=0TO7:MOVSPR I,0#0:NEXT
```

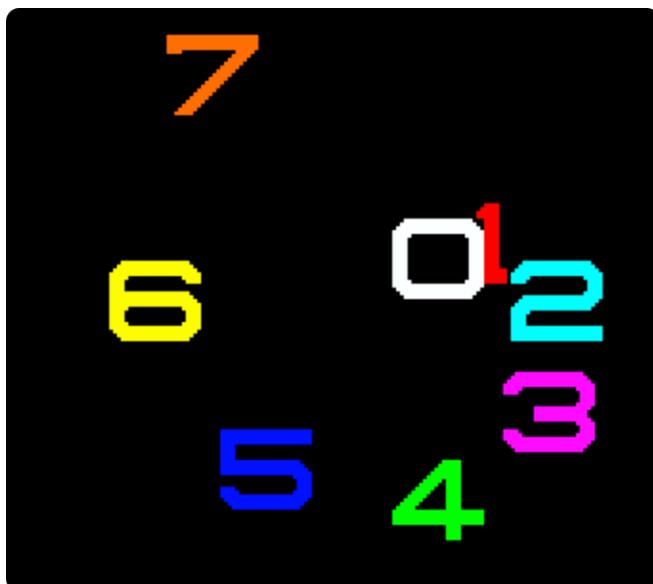

# **NEW**

**Token:** \$A2

**Format:** **NEW**

**NEW RESTORE**

**Usage:** Erases the BASIC program in memory, and resets all BASIC parameters to their default values.

Since **NEW** resets parameters and pointers, (but does not overwrite the address range of a BASIC program that was in memory), it is possible to recover the program. If there were no **LOAD** operations, or editing performed after **NEW**, the program can be restored with the **NEW RESTORE**.

**Examples:** Using **NEW**:

```
NEW      :REM RESET BASIC  
NEW RESTORE :REM TRY TO RECOVER NEW'ED PROGRAM
```

# NEXT

**Token:** \$82

**Format:** **FOR** index = start **TO** end [**STEP** step] ... **NEXT** [index]

**Usage:** Marks the end of the BASIC loop associated with the given index variable. When a BASIC loop is declared with **FOR**, it must end with **NEXT**.

The **index** variable may be incremented or decremented by a constant value **step** on each iteration. The default is to increment the variable by 1. The index variable must be a real variable.

**start** value to initialise the index with.

**end** is checked at the end of an iteration, and determines whether another iteration will be performed, or if the loop will exit.

**step** defines the change applied to the index variable at the end of every iteration. Positive step values increment it, while negative values decrement it. It defaults to 1.0 if not specified.

**Remarks:** The **index** variable after **NEXT** is optional. If it is omitted, the variable for the current loop is assumed. Several consecutive **NEXT** statements may be combined by specifying the indexes in a comma separated list. The statements **NEXT I:NEXT J:NEXT K** and **NEXT I,J,K** are equivalent.

**Example:** Using **NEXT**

```
10 FOR D=0 TO 360 STEP 30
20 R = D * π / 180
30 PRINT D;R;SIN(R);COS(R);TAN(R)
40 NEXT D

10 DIM M(20,20)
20 FOR I=0 TO 20
30 FOR J=I TO 20
40 M(I,J) = I + 100 * J
50 NEXT J,I
```

# NOT

**Token:** \$A8

**Format:** NOT operand

**Usage:** Performs a bit-wise logical NOT operation on a 16-bit value.

Integer operands are used as they are, whereas real operands are converted to a signed 16-bit integer (losing precision). Logical operands are converted to a 16-bit integer, using \$FFFF (decimal -1) for TRUE, and \$0000 (decimal 0) for FALSE.

Expression	Result
NOT 0	1
NOT 1	0

**Remarks:** The result is of type integer.

**Examples:** Using NOT

```
PRINT NOT 3  
-4  
PRINT NOT 64  
-65
```

In most cases, NOT is used in IF statements.

```
OK = C < 256 AND C >= 0  
IF (NOT OK) THEN PRINT "NOT A BYTE VALUE"
```

# OFF

**Token:** \$FE \$24

**Format:** keyword **OFF**

**Usage:** **OFF** is a secondary keyword used in combination with primary keywords, such as **KEY** and **MOUSE**.

**Remarks:** **OFF** cannot be used on its own.

**Examples:** Using **OFF**

```
KEY OFF :REM DISABLE FUNCTION KEY STRINGS  
MOUSE OFF :REM DISABLE MOUSE DRIVER
```

# ON

<b>Token:</b>	\$91
<b>Format:</b>	<b>ON</b> expression <b>GOSUB</b> line number [, line number ...] <b>ON</b> expression <b>GOTO</b> line number [, line number ...] keyword <b>ON</b>
<b>Usage:</b>	Performs <b>GOSUB</b> or <b>GOTO</b> to a line number selected by a number expression.  Depending on the result of the expression, the target for <b>GOSUB</b> and <b>GOTO</b> is chosen from the table of line addresses at the end of the statement.  When used as a secondary keyword, <b>ON</b> is used in combination with primary keywords, such as <b>KEY</b> and <b>MOUSE</b> .  <b>expression</b> is a positive numeric value. Real values are converted to integer (losing precision). Logical operands are converted to a 16-bit integer, using \$FFFF (decimal -1) for TRUE, and \$0000 (decimal 0) for FALSE.
<b>Remarks:</b>	Negative values for <b>expression</b> will stop the program with an error message. The <b>line number list</b> specifies the targets for values of 1, 2, 3, etc.  An expression result of zero, or a result that is greater than the number of target lines will not do anything, and the program will continue execution with the next statement.

**Example:** Using **ON**

```
20 KEY ON :REM ENABLE FUNCTION KEY STRINGS
30 MOUSE ON :REM ENABLE MOUSE DRIVER
40 N = JOY(1):IF N AND 128 THEN PRINT "FIRE! ";
60 REM           N  NE  E   SE  S   SW  W   NW
70 ON N AND 15 GOSUB 100,200,300,400,500,600,700,800
80 GOTO 40
100 PRINT "GO NORTH" :RETURN
200 PRINT "GO NORTHEAST":RETURN
300 PRINT "GO EAST" :RETURN
400 PRINT "GO SOUTHEAST":RETURN
500 PRINT "GO SOUTH" :RETURN
600 PRINT "GO SOUTHWEST":RETURN
700 PRINT "GO WEST" :RETURN
800 PRINT "GO NORTHWEST":RETURN
```

# OPEN

**Token:** \$9F

**Format:** **OPEN** channel, first address [, secondary address [, filename]]

**Usage:** Opens an input/output channel for a device.

**channel** number, where:

- **1 <= channel <= 127** line terminator is CR.
- **128 <= channel <= 255** line terminator is CR LF.

**first address** device number. For IEC devices the unit number is the primary address. Following primary address values are possible:

Unit	Device
0	Keyboard
1	System Default
2	RS232 Serial Connection
3	Screen
4 - 7	IEC Printer and Plotter
8 - 31	IEC Disk Drives

The **secondary address** has some reserved values for IEC disk units, 0: load, 1: save, 15: command channel. The values 2 - 14 may be used for disk files.

**filename** is either a quoted string, e.g. "DATA" or a string expression. The syntax is different to **DOPEN#**, since the **filename** for **OPEN** includes all file attributes, for example: "0:DATA,\$,W".

**Remarks:** For IEC disk units the usage of **DOPEN#** is recommended.

If the first character of the filename is an at sign '@', it is interpreted as a "save and replace" operation. It is not recommended to use this option on 1541 and 1571 drives, as they contain a "save and replace bug" in their DOS.

**Example:** Using **OPEN**

```
OPEN 4,4 :REM OPEN PRINTER
CMD 4 :REM REDIRECT STANDARD OUTPUT TO 4
LIST :REM PRINT LISTING ON PRINTER DEVICE 4
OPEN 3,8,3,"0:USER FILE,U"
OPEN 2,9,2,"0:DATA,$,W"
```

# OR

**Token:** \$B0

**Format:** operand **OR** operand

**Usage:** Performs a bit-wise logical OR operation on two 16-bit values.

Integer operands are used as they are. Real operands are converted to a signed 16-bit integer (losing precision). Logical operands are converted to a 16-bit integer using \$FFFF (decimal -1) for TRUE, and \$0000 (decimal 0), for FALSE.

Expression	Result
0 OR 0	0
0 OR 1	1
1 OR 0	1
1 OR 1	1

**Remarks:** The result is of type integer. If the result is used in a logical context, the value of 0 is regarded as FALSE, and all other non-zero values are regarded as TRUE.

**Example:** Using **OR**

```
PRINT 1 OR 3
3
PRINT 128 OR 64
192
```

In most cases, **OR** is used in **IF** statements.

```
IF (C < 0 OR C > 255) THEN PRINT "NOT A BYTE VALUE"
```

# PAINT

**Token:** \$DF

**Format:** PAINT x, y, mode [, region border colour]

**Usage:** Bitmap graphics: performs a flood fill of an enclosed graphics area using the current pen colour.

x, y is a coordinate pair, which must lie inside the area to be painted.

**mode** specifies the paint mode:

- **0** The colour of pixel (x,y) defines the colour, which is replaced by the pen colour.
- **1** The **region border colour** defines the region to be painted with the pen colour.
- **2** Paint the region connected to pixel (x,y).

**region border colour** defines the colour index for mode 1.

**Example:** Using PAINT

```
10 SCREEN 320,200,2      :REM OPEN SCREEN
20 PALETTE 0,1,10,15,10 :REM COLOUR 1 TO LIGHT GREEN
30 PEN 1                 :REM SET DRAWING PEN (PEN 0) TO LIGHT GREEN (1)
40 LINE 160,0,240,100    :REM 1ST. LINE
50 LINE 240,100,80,100   :REM 2ND. LINE
60 LINE 80,100,160,0     :REM 3RD. LINE
70 PAINT 160,10          :REM FILL TRIANGLE WITH PEN COLOUR
80 GETKEY A&              :REM WAIT FOR KEY
90 SCREEN CLOSE           :REM END GRAPHICS
```

# PALETTE

**Token:** \$FE \$34

**Format:** PALETTE screen, colour, red, green, blue  
PALETTE COLOR colour, red, green, blue  
PALETTE RESTORE

**Usage:** PALETTE can be used to change an entry of the system colour palette, or the palette of a screen.

PALETTE RESTORE resets the system palette to the default values.

**screen** screen number (0 - 3).

**COLOR** keyword for changing system palette.

**colour** index to palette entry (0 - 255). PALETTE can define colours beyond the default system palette entries 0 - 31.

**red** red intensity (0 - 15).

**green** green intensity (0 - 15).

**blue** blue intensity (0 - 15).

**Example:** Using PALETTE

```
10 REM CHANGE SYSTEM COLOUR INDEX
20 REM --- INDEX 9 (BROWN) TO (DARK BLUE)
30 PALETTE COLOR 9,0,0,7
```

```
10 GRAPHIC CLR      :REM INITIALISE
20 SCREEN DEF 1,0,0,2 :REM 320 X 200
30 SCREEN OPEN 1     :REM OPEN
40 SCREEN SET 1,1     :REM MAKE SCREEN ACTIVE
50 PALETTE 1,0, 0, 0, 0 :REM 0 = BLACK
60 PALETTE 1,1, 15, 0, 0 :REM 1 = RED
70 PALETTE 1,2, 0, 0,15 :REM 2 = BLUE
80 PALETTE 1,3, 0,15, 0 :REM 3 = GREEN
90 PEN 2             :REM SET DRAWING PEN (PEN 0) TO BLUE (2)
100 LINE 160,0,240,100 :REM 1ST. LINE
110 LINE 240,100,80,100 :REM 2ND. LINE
120 LINE 80,100,160,0 :REM 3RD. LINE
130 PAINT 160,10,0,2   :REM FILL TRIANGLE WITH BLUE (2)
140 GETKEY K$         :REM WAIT FOR KEY
150 SCREEN CLOSE 1     :REM END GRAPHICS
```

# PASTE

**Token:** \$E3


**Format:** PASTE x, y, width, height

**Usage:** Bitmap graphics: pastes the content of the **CUT** / **GCOPY** buffer onto the screen. The arguments upper left position **x, y** and the **width** and **height** specify the paste position on the screen.

**Remarks:** The size of the rectangle is limited by the 1K size of the buffer. The memory requirement for region is width \* height \* number of bitplanes / 8. It must not equal or exceed 1024 byte. For a 4-bitplane screen for example, a 45 x 45 region needs 1012.5 byte.

**Example:** Using **PASTE**

```
10 SCREEN 320,200,2
20 BOX 60,60,300,180,1 :REM DRAW A WHITE BOX
30 PEN 2 :REM SELECT RED PEN
40 CUT 140,80,40,40 :REM CUT OUT A 40 * 40 REGION
50 PASTE 10,10,40,40 :REM PASTE IT TO NEW POSITION
60 GETKEY A$ :REM WAIT FOR KEYPRESS
70 SCREEN CLOSE
```

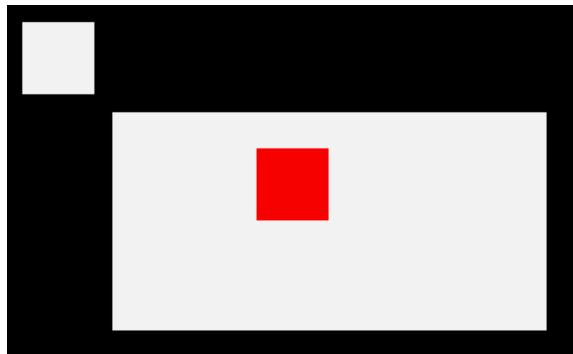

# PEEK

**Token:** \$C2

**Format:** PEEK(address)

**Returns:** The byte value stored in memory at **address**, as an unsigned 8-bit number.

If the address is in the range of \$0000 to \$FFFF (0 – 65535), the memory bank set by **BANK** is used.

Addresses greater than or equal to \$10000 (decimal 65536) are assumed to be flat memory addresses and used as such, ignoring the **BANK** setting.

**Remarks:** Banks 0 – 127 give access to RAM or ROM banks. Banks greater than 127 are used to access I/O, and the underlying system hardware such as the VIC, SID, FDC, etc.

**Example:** Using PEEK

```
10 BANK 128      :REM SELECT SYSTEM BANK
20 L = PEEK($02F8) :REM USR JUMP TARGET LOW
30 H = PEEK($02F9) :REM USR JUMP TARGET HIGH
40 T = L + 256 * H :REM 16-BIT JUMP ADDRESS
50 PRINT "USR FUNCTION CALLS ADDRESS";T
```

# PEN

**Token:** \$FE \$33

**Format:** **PEN** [pen,] colour

**Usage:** Bitmap graphics: sets the colour of the graphic pen for the current screen.

**pen** pen number (0 - 2):

- **0** drawing pen (default, if only single parameter provided).
- **1** off bits in jam2 mode.
- **2** currently unused.

**colour** palette index, from the palette of the current screen

See appendix [6 on page 299](#) for the list of colours in the default system palette.

**Remarks:** The colour selected by **PEN** will be used by all graphic/drawing commands that follow it. If you intend to set the drawing **pen** 0 to a colour, you can omit the first parameter, and only provide the **colour** parameter.

**Example:** Using **PEN**

```
10 GRAPHIC CLR      :REM INITIALISE
20 SCREEN DEF 1,0,0,2 :REM 320 X 200
30 SCREEN OPEN 1     :REM OPEN
40 SCREEN SET 1,1    :REM MAKE SCREEN ACTIVE
50 PALETTE 1,0, 0, 0, 0 :REM 0 = BLACK
60 PALETTE 1,1, 15, 0, 0 :REM 1 = RED
70 PALETTE 1,2, 0, 0,15 :REM 2 = BLUE
80 PALETTE 1,3, 0,15, 0 :REM 3 = GREEN
90 PEN 1             :REM SET DRAWING PEN (PEN 0) TO RED (1)
100 LINE 160,0,240,100 :REM DRAW RED LINE
110 PEN 2             :REM SET DRAWING PEN (PEN 0) TO BLUE (2)
120 LINE 240,100,80,100 :REM DRAW BLUE LINE
130 PEN 3             :REM SET DRAWING PEN (PEN 0) TO GREEN (3)
140 LINE 80,100,160,0   :REM DRAW GREEN LINE
150 GETKEY K$         :REM WAIT FOR KEY
160 SCREEN CLOSE 1    :REM END GRAPHICS
```

# PIXEL

**Token:** \$CE \$0C

**Format:** **PIXEL**(*x*, *y*)

**Returns:** Bitmap graphics: the colour of a pixel at the given position.

**x** absolute screen coordinate.

**y** absolute screen coordinate.

# PLAY

**Token:** \$FE \$04

**Format:** **PLAY** {[string1, string2, string3, string4, string5, string6]}

**Usage:** Starts playing a sequence of musical notes, or stops a currently playing sequence.

**PLAY** without any arguments will cause all voices to be silenced, and all of the music system's variables to be reset (such as **TEMPO**).

**PLAY** accepts up to six comma-separated string arguments, where each string describes the sequence of notes and directives to be played on a specific voice on the two available SID chips, allowing for up to 6-channel polyphony.

**PLAY** uses SID1 (for voices 1 to 3) and SID3 (for voices 4 to 6) of the 4 SID chips of the system. By default, SID1 and SID2 are slightly right-biased and SID3 and SID4 are slightly left-biased in the stereo mix.

```
PLAY "CEG"  
PLAY "C","E","G"
```

Within a **PLAY** string, a musical note is a character (A, B, C, D, E, F, or G), which may be preceded by an optional modifier.

Possible modifiers are:

Character	Effect
#	Sharp
\$	Flat
.	Dotted
W	Whole Note
H	Half Note
Q	Quarter Note
I	Eighth Note
S	Sixteenth Note
R	Pause (rest)

Notice that the dot (.) modifier appears before the note name, not after it as in traditional sheet music.

Directives consist of a letter, followed by a digit. Directives apply to all future notes, until the parameter is changed by another directive.

Character	Directive	Argument Range
O	Octave	0 - 6
T	Instrument Envelope	0 - 9
U	Volume	0 - 9
X	Filter	0 - 1
M	Modulation	0 - 9
P	Portamento	0 - 9
L	Loop	N/A

An octave is a range of notes from C to B. The default octave is 4, representing the “middle” octave.

Instrument envelopes describe the nature of the sound. See **ENVELOPE** for a list of default envelope styles, and information on how to adjust the ten envelopes.

The modulation directive adds a pitch-based vibrato your note by the magnitude you specify (1 - 9). A value of 0 disables it.

Similarly, the portamento directive slides between consecutive notes at the speed you specify (1 - 9). A value of 0 disables it. Note that the gate-off behaviour of notes is disabled while portamento is enabled. To re-enable the gate-off behavior, you must disable portamento (P0).

If a string ends with the L directive, the pattern loops back to the beginning of the string upon completion.

You can omit a string for a given voice to allow an already playing pattern in that voice to continue, using empty arguments:

```
PLAY "04EDCDEEERL","",","02CGEGCGEGL"
```

An example using voice 2 and voice 5:

```
PLAY , "05T2IGAGFEDCEG06.QCL","",","03T2,00,B 04IC036E.QCL"
```

**RPLAY(voice)** tests whether music is playing on the given voice, and returns 1 if it is playing or 0 if it is not.

One caveat to be aware of is that BASIC strings have a maximum length of 255 bytes. If your melody needs to exceed this length, consider breaking up your melody into several strings, then use **RPLAY(voice)** to assess when your first string has finished and then play the next string.

Instrument envelope slots may be modified by using the **ENVELOPE** statement. The default settings for the envelopes are on page 101.

**Remarks:** The **PLAY** statement makes use of an interrupt driven routine that starts parsing the string and playing the melody. Program execution continues with the next statement, and will not block until the melody has finished. This is different to the Commodore 128, which stops program execution during playback.

The 6 voice channels used by the **PLAY** command (on SID1+SID3) are distinct to the 6 channels used by the **SOUND** command (on SID2+SID4). Sound effects will not interrupt music, and vice versa.

**Example:** Using **PLAY**

```
5 REM *** SIMPLE LOOPING EXAMPLE ***
10 ENVELOPE 9,10,5,10,5,0,300
20 VOL 8
30 TEMPO 30
40 PLAY "05T9HCIDCDEHCG IGAGFEFDEWCL", "02T8QCGEGCGEG DBGB CGEGL"
```

```
5 REM *** MODULATION + PORTAMENTO EXAMPLE ***
10 TEMPO 20
20 M$ = "M5 T205P0QD P5FP0RP5QG .A1#AQA HQQE.C IDQE HFQD .D1#CQD HEQHCQ04HA"
30 M$ = M$ + "05QDHFQG.A1#AQA HQQE.C IDQEFEHD#C04B05HC D04AFD POR L"
40 B$ = "T0QR02H.D.F.C01.A.#A.G.A QAI02AGFE H.D.F.C01.A.#A.A02 .D DL"
50 PLAY M$,B$
```

# POINTER

- Token:** \$CE \$0A
- Format:** **POINTER**(variable)
- Returns:** The current address of a variable or an array element as a 32-bit pointer.
- For string variables, it is the address of the string descriptor, not the string itself. The string descriptor consists of three bytes: length, string address low, string address high. The string address is an offset in bank 1.
- For number-type scalar variables, it is the address of the value. The format depends on the type. A byte variable (A&) is one byte, in a "two's complement" signed integer format. An integer variable (A%) is two bytes, with the least significant byte first. A real variable (A) is five bytes, in a compact floating point number format.
- To get the address of an array, use **POINTER** with the first element of the array (index 0 in each dimension). Array elements are stored consecutively, in the format of the scalar record, with the left-most index using the shortest stride. For example, an array dimensioned as `DIM A%(3,2)` starts at address `POINTER(A%(0,0))`, has two-byte records, and is ordered as:
- (0,0) (1,0) (2,0) (3,0) (0,1) (1,1) (2,1) (3,1) ...
- Remarks:** The address values of arrays and their elements are constant while the program is executing.  
However, the addresses of strings (not their descriptors) may change at any time due to "garbage collection."
- Example:** Using **POINTER**

```
10 BANK 0 :REM SCALARS ARE IN BANK 0
20 H$="HELLO" :REM ASSIGN STRING TO H$
30 P=POINTER(H$) :REM GET DESCRIPTOR ADDRESS
40 PRINT "DESCRIPTOR AT: $",HEX$(P)
50 L=PEEK(P):SP=WPEEK(P+1) :REM LENGTH & STRING POINTER
60 PRINT "LENGTH = ",L :REM PRINT LENGTH
70 BANK 1 :REM STRINGS ARE IN BANK 1
80 FOR IX=0 TO L-1:PRINT PEEK(SP+IX);:NEXT:PRINT
90 FOR IX=0 TO L-1:PRINT CHR$(PEEK(SP+IX));:NEXT:PRINT
```

RUN

DESCRIPTOR AT: \$FD75

LENGTH = 5

72 69 76 76 79

HELLO

# POKE

**Token:** \$97

**Format:** **POKE** address, value [, value ...]

**Returns:** Writes one or more bytes into memory or memory mapped I/O, starting at **address**.

If the address is in the range of \$0000 to \$FFFF (0 – 65535), the memory bank set by **BANK** is used.

Addresses greater than or equal to \$10000 (decimal 65536) are assumed to be flat memory addresses and used as such, ignoring the **BANK** setting.

If **value** is in the range of 0 – 255, this is poked into memory, otherwise the low byte of value is used. So a command like **POKE AD,V AND 255** can be written as **POKE AD,V** because **POKE** uses the low byte anyway.

**Remarks:** The address is incremented for each data byte, so a memory range can be written to with a single **POKE**.

Banks greater than 127 are used to access I/O, and the underlying system hardware such as the VIC, SID, FDC, etc.

**Example:** Using **POKE**

```
10 BANK 128      :REM SELECT SYSTEM BANK
20 POKE $02F8,0,24 :REM SET USR VECTOR TO $1800
```

# POLYGON

**Token:** \$FE \$2F

**Format:** **POLYGON** x, y, xrad, yrad, sides [{, drawssides, subtend, angle, solid}]

**Usage:** Bitmap graphics: draws a regular n-sided polygon. The polygon is drawn using the current drawing context set with **SCREEN**, **PALETTE**, and **PEN**.

**x,y** centre coordinates.

**xrad,yrad** radius in x- and y-direction.

**sides** number of polygon sides.

**drawssides** sides to draw.

**subtend** draw line from centre to start (1).

**angle** start angle.


**solid** fill (1) or outline (0).

**Remarks:** A regular polygon is both isogonal and isotonal, meaning all sides and angles are alike.

**Example:** Using **POLYGON**

```
100 SCREEN 320,200,1      :REM OPEN 320 x 200 SCREEN
110 POLYGON 160,100,40,40,6 :REM DRAW HONEYCOMB
120 GETKEY @\$              :REM WAIT FOR KEY
130 SCREEN CLOSE            :REM CLOSE GRAPHICS SCREEN
```

Results in:

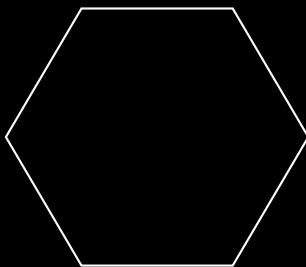

# POS

**Token:** \$B9

**Format:** **POS**(dummy)

**Returns:** The cursor column relative to the currently used window.

**dummy** a numeric value, which is ignored.

**Remarks:** **POS** gives the column position for the screen cursor. It will not work for redirected output.

**Example:** Using **POS**

```
10 IF POS(0) > 72 THEN PRINT :REM INSERT RETURN
```

# POT

**Token:** \$CE \$02

**Format:** **POT**(paddle)

**Returns:** The position of a paddle peripheral.

**paddle** paddle number (1 - 4).

The low byte of the return value is the paddle value, with 0 at the clockwise limit and 255 at the anticlockwise limit.

A value greater than 255 indicates that the fire button is also being pressed.

**Remarks:** Analogue paddles are noisy and inexact. The range may be less than 0 - 255 and there could be some jitter in the values returned from **POT**.

Paddles made for Atari game consoles return different values from paddles made for Commodore computers. Commodore paddles provide more accurate values in the 0 - 255 range.

**Example:** Using **POT**

```
10 X = POT(1)      : REM READ PADDLE #1
20 B = X > 255    : REM TRUE (-1) IF FIRE BUTTON IS PRESSED
30 V = X AND 255  : REM PADDLE #1 VALUE
```

# PRINT

**Token:** \$99

**Format:** **PRINT** arguments

**Usage:** Prints a series of values formatted to the current output stream, typically the screen.

Values are formatted based on their type. For more control over formatting, see **PRINT USING**.

The following expressions and characters can appear in the argument list:

- **numeric** the printout starts with a space for positive and zero values, or a minus sign for negative values. Integer values are printed with the necessary number of digits. Real values are printed in either fixed point form (typically 9 digits), or scientific form if the value is outside the range of 0.01 to 999999999.
- **string** the string may consist of printable characters and control codes. Printable characters are printed at the cursor position. Control codes are executed.
- ; (semicolon) separates arguments of the list. It does not print any characters. A semicolon at the end of the argument list suppresses the automatic return (carriage return) character.
- , (comma) moves the cursor to the next tab position.

**Remarks:** The **SPC** and **TAB** functions may be used in the argument list for positioning.

**CMD** can be used to redirect printed characters to a device other than the screen.

**Example:** Using **PRINT**

```
10 FOR I=1 TO 10 : REM START LOOP
20 PRINT I,I*I,SQR(I)
30 NEXT
```

# PRINT#

**Token:** \$98

**Format:** PRINT# channel, arguments

**Usage:** Prints a series of values formatted to the device assigned to **channel**.

Values are formatted based on their type. For more control over formatting, see **PRINT# USING**.

**channel** number, which was given to a previous call to commands such as **APPEND**, **DOPEN**, or **OPEN**.

The following argument types are evaluated:

- **numeric** the printout starts with a space for positive and zero values, or a minus sign for negative values. Integer values are printed with the necessary number of digits. Real values are printed in either fixed point form (typically 9 digits), or scientific form if the value is outside the range of 0.01 to 999999999.
- **string** may consist of printable characters and control codes. Printable characters are printed at the cursor position, while control codes are executed.
- ; (semicolon) separates arguments of the list. It does not print any characters. A semicolon at the end of the argument list suppresses the automatic return (carriage return) character.
- , (comma) moves the cursor to the next tab position.

**Remarks:** The **SPC** and **TAB** functions are not suitable for devices other than the screen.

**Example:** Using **PRINT#** to write a file to drive 8:

```
10 DOPEN#2,"TABLE",W,U8
20 FOR I=1 TO 10 : REM START LOOP
30 PRINT#2,I,I*I,SQR(I)
40 NEXT
50 DCLOSE#2
```

You can confirm that the file '**TABLE**' has been written by typing **DIR "TAX"**, and then view the contents of the file by typing **TYPE "TABLE"**.

# PRINT USING

**Token:** \$98 \$FB or \$99 \$FB

**Format:** **PRINT**[# channel,] **USING** format; argument

**Usage:** Prints a series of values formatted using a pattern to the current output stream (typically the screen) or an output channel.

The argument can be either a string or a numeric value. The format of the resulting output is directed by the **format** string.

**channel** number, which was given to a previous call to commands such as **APPEND**, **DOPEN**, or **OPEN**. If no channel is specified, the output goes to the screen.

**format** string variable or a string constant which defines the rules for formatting. When using a number as the **argument**, formatting can be done in either CBM style, providing a pattern such as ####.## or in C style using a <width.precision> specifier, such as %3D %7.2F %4X .

**argument** the number to be formatted. If the argument does not fit into the format e.g. trying to print a 4 digit variable into a series of three hashes (###), asterisks will be used instead.

**Remarks:** The format string is applied for one argument only, but it is possible to append more with **USING format;argument** sequences.

**argument** may consist of printable characters and control codes. Printable characters are printed to the cursor position, while control codes are executed. The number of # characters sets the width of the output. If the first character of the format string is an equals '=' sign, the argument string is centered. If the first character of the format string is a greater than '>' sign, the argument string is right justified.

**Examples:** Using **PRINT# USING**

```
PRINT USING "####.###";#, USING " [%.4F] ";SQR(2)
3.14 [1.4142]

PRINT USING " < # # # > ";12*31
< 3 7 2 >

PRINT USING "#####"; "ABCDE"
ABC

PRINT USING ">#####"; "ABCDE"
CDE

PRINT USING "ADDRESS:$%4X";65000
ADDRESS:$FDE8

A$="#####,#####.##":PRINT USING A$;1E8/3
33,333,333.3
```

# **RCOLOR**

**Token:** \$CD

**Format:** **RCOLOR**(colour source)

**Returns:** The current colour index for the selected colour source.

Colour sources are:

- **0** background colour (VIC \$D021).
- **1** text colour (\$F1).
- **2** highlight colour (\$2D8).
- **3** border colour (VIC \$D020).

**Example:** Using **RCOLOR**

```
10 C = RCOLOR(3) : REM C = colour index of border colour
```

# RCURSOR

**Token:** \$FE \$42

**Format:** **RCURSOR** {colvar, rowvar}

**Usage:** Reads the current cursor column and row into variables.

**Remarks:** The row and column values start at zero, where the left-most column is zero, and the top row is zero.

**Example:** Using **RCURSOR**

```
100 CURSOR ON,20,10  
110 PRINT "[HERE]";  
120 RCURSOR X,Y  
130 PRINT " COL:",X;" ROW:",Y
```

RUN

```
[HERE] COL: 26  ROW: 10
```

# READ

**Token:** \$87

**Format:** **READ** variable [, variable ...]

**Usage:** Reads values from **DATA** statements into variables.

**variable list** Any legal variables.

All types of constants (integer, real, and strings) can be read, but not expressions. Items are separated by commas. Strings containing commas, colons or spaces must be put in quotes.

**RUN** initialises the data pointer to the first item of the first **DATA** statement and advances it for every read item. It is the programmer's responsibility that the type of the constant and the variable in the **READ** statement match. Empty items with no constant between commas are allowed and will be interpreted as zero for numeric variables and an empty string for string variables.

**RESTORE** may be used to set the data pointer to a specific line for subsequent readings.

**Remarks:** It is good programming practice to put large amounts of **DATA** statements at the end of the program, so they don't slow down the search for line numbers after **GOTO**, and other statements with line number targets.

**Example:** Using **READ**

```
10 READ NA$, VE
20 READ NX:FOR I=2 TO NX:READ GL(I):NEXT I
30 PRINT "PROGRAM:",NA$," VERSION:",VE
40 PRINT "N-POINT GAUSS-LEGENDRE FACTORS E1":
50 FOR I=2 TO NX:PRINT I,GL(I):NEXT I
60 STOP
80 DATA "MEGA65",1.1
90 DATA 5,0.5120,0.3573,0.2760,0.2252
```

# RECORD

**Token:** \$FE \$12

**Format:** RECORD# channel, record [, byte]

**Usage:** Positions the read/write pointer of a relative file.

**channel** number, which was given to a previous call of commands such as **DOPEN**, or **OPEN**.

**record** target record (1 - 65535).

**byte** byte position in record.

**RECORD** can only be used for files of type **REL**, which are relative files capable of direct access.

**RECORD** positions the file pointer to the specified record number. If this record number does not exist and there is enough space on the disk which **RECORD** is writing to, the file is expanded to the requested record count by adding empty records. When this occurs, the disk status will give the message **RECORD NOT PRESENT**, but this is not an error!

After a call of **INPUT#** or **PRINT#**, the file pointer will proceed to the next record position.

**Remarks:** The Commodore disk drives have a bug in their DOS, which can destroy data by using relative files. A recommended workaround is to use the command **RECORD** twice, before and after the I/O operation.

**Example:** Using **RECORD**

```
100 DOPENH#2,"DATA BASE",L240 :REM OPEN OR CREATE
110 FOR IX=1 TO 20 :REM WRITE LOOP
120 PRINT#2,"RECORD #";IX :REM WRITE RECORD
130 NEXT IX :REM END LOOP
140 DCLOSE#2 :REM CLOSE FILE
150 :REM NOW TESTING
160 DOPENH#2,"DATA BASE",L240 :REM REOPEN
170 FOR IX=20 TO 2 STEP -2 :REM READ FILE BACKWARDS
180 RECORD#2,IX :REM POSITION TO RECORD
190 INPUT#2,A$ :REM READ RECORD
200 PRINT A$;:IF IX AND 2 THEN PRINT
210 NEXT IX :REM LOOP
220 DCLOSE#2 :REM CLOSE FILE

RUN
RECORD # 20 RECORD # 18
RECORD # 16 RECORD # 14
RECORD # 12 RECORD # 10
RECORD # 8 RECORD # 6
RECORD # 4 RECORD # 2
```

# **REM**

**Token:** \$8F

**Format:** **REM**

**Usage:** Ignores all subsequent characters on a line of BASIC code, as a code comment.

**Example:** Using **REM**

```
10 REM *** PROGRAM TITLE ***
20 N=1000 :REM NUMBER OF ITEMS
30 DIM N$(N)
```

# RENAME

**Token:** \$F5

**Format:** **RENAME** old **TO** new [,**D** drive] [,**U** unit]

**Usage:** Renames a disk file.

**old** is either a quoted string, e.g. "DATA" or a string expression in brackets, e.g. (F1\$).

**new** is either a quoted string, e.g. "BACKUP" or a string expression in brackets, e.g. (F9\$).

**drive** drive # in dual drive disk units.

The drive # defaults to **0** and can be omitted on single drive units such as the 1541, 1571, or 1581.

**unit** device number on the IEC bus. Typically in the range from 8 to 11 for disk units. If a variable is used, it must be placed in brackets. The unit # defaults to **8**.

**Remarks:** **RENAME** is executed in the DOS of the disk drive. It can rename all regular file types (**PRG**, **REL**), **SEQ**, **USR**. The old file must exist, and the new file must not exist. Only single files can be renamed, wildcard characters such as '\*' and '?' are not allowed. The file type cannot be changed.

**Example:** Using **RENAME**

```
RENAME "CODES" TO "BACKUP" :REM RENAME SINGLE FILE
```

# RENUMBER

**Token:** \$F8

**Format:** **RENUMBER** [{new, inc, range}]

**Usage:** Renumbers lines of a BASIC program.

**new** new starting line of the line range to renumber. The default value is 10.

**inc** increment to be used. The default value is 10.

**range** line range to renumber. The default values are from first to last line.

**RENUMBER** executes in either space conserving mode or optimisation mode. Optimisation mode removes space characters before line numbers, thereby reducing code size and decreasing execution time, while the space conserving leaves spaces untouched. Optimisation mode is triggered by typing the first argument, (the **new** starting number), adjacent to the keyword **RENUMBER** with no space in between.

**RENUMBER** changes all line numbers in the chosen range and also changes all references in statements that use **GOSUB**, **GOTO**, **RESTORE**, **RUN**, **TRAP**, etc.

**RENUMBER** can only be executed in direct mode. If it detects a problem such as memory overflow, unresolved references or line number overflow (more than than 64000 lines), it will stop with an error message and leave the program unchanged.

**RENUMBER** may be called with 0 - 3 parameters. Unspecified parameters use their default values.

**Remarks:** **RENUMBER** may need several minutes to execute for large programs.

**RENUMBER** can only be used in direct mode.

This command temporarily uses memory in banks 4 and 5, and may overwrite anything stored there.

**Examples:** Using **RENUMBER**

```
RENUMBER          :REM SPACE CONSERVING, NUMBERS WILL BE 10,20,30,....
RENUMBER 100,5     :REM SPACE CONSERVING, NUMBERS WILL BE 100,105,110,115,...
RENUMBER601,1,500   :REM OPTIMISATION, RENUMBER STARTING AT 500 TO 601,602,...
RENUMBER 100,5,120-180 :REM SPACE CONSERVING RENUMBER LINES 120-180 TO 100,105,....

10 GOTO 20
20 GOTO 10
RENUMBER 100,10      :REM SPACE CONSERVING
100 GOTO 110
110 GOTO 100
RENUMBER100,10      :REM OPTIMISATION
100 GOTO110
110 GOTO100
```

# RESTORE

**Token:** \$8C

**Format:** RESTORE [line]

**Usage:** Sets the internal pointer for **READ** from **DATA** statements.

**line** new position for the pointer. The default is the first program line.

**Remarks:** The new pointer target **line** does not need to contain **DATA** statements. Every **READ** will advance the pointer to the next **DATA** statement automatically.

**Example:** Using **RESTORE**

```
10 DATA 3,1,4,1,5,9,2,6
20 DATA "MEGAB5"
30 DATA 2,7,1,8,2,8,9,5
40 FOR I=1 TO 8:READ P:PRINT P:NEXT
50 RESTORE 30
60 FOR I=1 TO 8:READ P:PRINT P:NEXT
70 RESTORE 20
80 READ A$:PRINT A$
```

# RESUME

**Token:** \$D6

**Format:** **RESUME** [line | **NEXT**]

**Usage:** Resumes normal program execution in a **TRAP** routine, after handling an error.

**RESUME** with no parameters attempts to re-execute the statement that caused the error. The **TRAP** routine should have examined and corrected the issue where the error occurred.

**line** line number to resume program execution at.

**NEXT** resumes execution following the statement that caused the error. This could be the next statement on the same line (separated with a colon ':'), or the statement on the next line.

**Remarks:** **RESUME** cannot be used in direct mode.

**Example:** Using **RESUME**

```
10 TRAP 100
20 FOR I=1 TO 100
30 PRINT EXP(I)
40 NEXT
50 PRINT "STOPPED FOR I =" ; I
60 END
100 PRINT ERR$(ER): RESUME 50
```

# RETURN

**Token:** \$8E

**Format:** RETURN

**Usage:** Returns control from a subroutine that was called with **GOSUB** or an event handler declared with **COLLISION**.

The execution continues at the statement following the **GOSUB** call.

In the case of the **COLLISION** handler, the execution continues at the statement where it left from to call the handler.

**Example:** Using RETURN

```
10 SCNCLR      :REM CLEAR SCREEN
20 FOR I=1 TO 20 :REM DEFINE LOOP
30 GOSUB 100    :REM CALL SUBROUTINE
40 NEXT I       :REM LOOP
50 END          :REM END OF PROGRAM
100 CURSOR ON,I,I,0 :REM ACTIVATE AND POSITION CURSOR
110 PRINT "X";
120 SLEEP 0.5   :REM WAIT 0.5 SECONDS
130 CURSOR OFF  :REM SWITCH BLINKING CURSOR OFF
140 RETURN       :REM RETURN TO CALLER
```

# RGRAPHIC

**Token:** \$CC

**Format:** RGRAPHIC(screen, parameter)

**Returns:** Bitmap graphics: the status of a given graphic screen parameter.

Parameter	Description
0	Open (1), Closed (0), or Invalid (>1)
1	Width (0=320, 1=640)
2	Height (0=200, 1=400)
3	Depth (1 - 8 Bitplanes)
4	Bitplanes Used (Bitmask)
5	Bank 4 Blocks Used (Bitmask)
6	Bank 5 Blocks Used (Bitmask)
7	Drawscreen # (0 - 3)
8	Viewscreen # (0 - 3)
9	Drawmodes (Bitmask)
10	pattern type (bitmask)

**Example:** Using RGRAPHIC

```
10 GRAPHIC CLR      :REM INITIALISE
20 SCREEN DEF 0,1,0,4 :REM SCREEN 0:640 X 200 X 4
30 SCREEN OPEN 0     :REM OPEN
40 SCREEN SET 0,0     :REM DRAW = VIEW = 0
50 SCNCLR 0          :REM CLEAR
60 PEN 0,1            :REM SELECT COLOUR
70 LINE 0,0,639,199   :REM DRAW LINE
80 FOR I=0 TO 10:A(I)=RGRAPHIC(0,I) :NEXT
90 SCREEN CLOSE 0
100 FOR I=0 TO 6:PRINT I;A(I):NEXT :REM PRINT INFO
```

RUN

```
0 1
1 1
2 0
3 4
4 15
5 15
6 15
```

# RIGHT\$

**Token:** \$C9

**Format:** **RIGHT\$**(*string*, *n*)

**Returns:** A string containing the last *n* characters from **string**.

If the length of **string** is equal or less than *n*, the result string will be identical to the argument string.

**string** a string expression.

**n** a numeric expression (0 – 255).

**Remarks:** Empty strings and zero lengths are legal values.

**Example:** Using **RIGHT\$**:

```
PRINT RIGHTS("MEGA-65",2)  
65
```

# RMOUSE

**Token:** \$FE \$3F

**Format:** **RMOUSE** x variable, y variable, button variable

**Usage:** Reads mouse position and button status.

**x variable** numeric variable where the x-position will be stored.

**y variable** numeric variable where the y-position will be stored.

**button variable** numeric variable receiving button status.

left button sets bit 7, while right button sets bit 0.

Coordinates are reported to be compatible with sprite coordinates, limited to the visible screen inside the border. In the top-left corner, X=24 and Y=50.

Value	Status
0	No Button
1	Right Button
128	Left Button
129	Both Buttons

**RMOUSE** places -1 into all variables if the mouse is not connected or disabled.

**Remarks:** Active mice on both ports merge the results.

**Example:** Using **RMOUSE**:

```
10 MOUSE ON, 1, 1      :REM MOUSE ON PORT 1 WITH SPRITE 1
20 RMOUSE XP, YP, BU   :REM READ MOUSE STATUS
30 IF XP < 0 THEN PRINT "NO MOUSE ON PORT 1":STOP
40 PRINT "MOUSE: ";XP;YP;BU
50 MOUSE OFF            :REM DISABLE MOUSE
```

# RND

**Token:** \$BB

**Format:** RND(type)

**Returns:** A pseudo-random number.

This is called a “pseudo-random” number as computers cannot generate numbers that are truly random. Pseudo-random numbers are derived mathematically from another number called a “seed” that generates reproducible sequences. **type** determines which seed is used:

- **type = 0** use system clock.
- **type < 0** use the value of **type** as seed.
- **type > 0** derive a new random number from previous one.

**Remarks:** Seeded random number sequences produce the same sequence for identical seeds.

The algorithm is initially seeded from the Real-Time Clock and other factors during boot, so RND(1) is unlikely to return the same sequence twice. This is unlike the Commodore 64, which always used the same initial seed. If RND() is ever called with a negative value, that value is used as a new seed, and sequences generated by RND(1) become predictable. Use RND(0) to re-seed with an unpredictable value.

Each call to RND(0) generates a new seed based on the system clock and other factors. Calling RND(0) repeatedly tends to produce a better distribution of values than on a Commodore 64 due to the precision of the sources of the seed.

**Example:** Using RND:

```
10 DEF FN1(X) = INT(RND(0)*6)+1 :REM DICE FUNCTION
20 FOR I=1 TO 10
30 PRINT I;FN1(0)
40 NEXT
```

# RPALETTE

**Token:** \$CE \$0D

**Format:** RPALETTE(screen, index, rgb)

**Returns:** The red, green, or blue value of a palette colour index.

**screen** screen number (0 - 3).

**index** palette colour index.

**rgb** (0: red, 1: green, 2:blue).

**Example:** Using RPALETTE

```
10 SCREEN 320,200,4 :REM DEFINE AND OPEN SCREEN
20 R = RPALETTE(0,3,0) :REM GET RED
30 G = RPALETTE(0,3,1) :REM GET GREEN
40 B = RPALETTE(0,3,2) :REM GET BLUE
50 SCREEN CLOSE :REM CLOSE SCREEN
60 PRINT "PALETTE INDEX 3 RGB =",R;G;B

RUN
PALETTE INDEX 3 RGB = 0 15 15
```

# RPEN

**Token:** \$D0

**Format:** RPEN(**n**)

**Returns:** The colour index of pen **n**.

**n** pen number (0 – 2), where:

- 0 draw pen
- 1 erase pen
- 2 outline pen

**Example:** Using RPEN

```
10 GRAPHIC CLR      :REM INITIALISE
20 SCREEN DEF 0,1,0,4 :REM SCREEN 0:640 X 200 X 4
30 SCREEN OPEN 0     :REM OPEN
40 SCREEN SET 0,0    :REM DRAW = VIEW = 0
50 SCNCLR 0          :REM CLEAR
60 PEN 0,1           :REM SELECT COLOUR
70 X = RPEN(0)
80 Y = RPEN(1)
90 C = RPEN(2)
100 SCREEN CLOSE 0
110 PRINT "DRAW PEN COLOUR = ";X
RUN
DRAW PEN COLOUR = 1
```

# RPLAY

**Token:** \$FE \$0F

**Format:** RPLAY(voice)

**Returns:** Tests whether music is playing on the given voice channel.

**voice** the voice channel to assess, ranging from 1 to 6.

Returns 1 if music is playing on the channel, otherwise 0.

**Example:** Using RPLAY:

```
10 PLAY "04ICDEFGAB05CR","02QCGEGC01GCR"  
30 IF RPLAY(1) OR RPLAY(2) THEN GOTO 30: REM WAIT FOR END OF SONG
```

# RREG

**Token:** \$FE \$09

**Format:** **RREG** [{areg, xreg, yreg, zreg, sreg}]

**Usage:** Reads the values that were in the CPU registers after a **SYS** call, into the specified variables.

**areg** gets accumulator value.

**xreg** gets X register value.

**yreg** gets Y register value.

**zreg** gets Z register value.

**sreg** gets status register value.

**Remarks:** The register values after a **SYS** call are stored in system memory. This is how **RREG** is able to retrieve them.

**Example:** Using **RREG**:

```
10 POKE $1800, $18, $8A, $65, $06, $60
20 REM      CLC TXA ADC  06 RTS
30 SYS $1800, 77, 11 : REM A=77 X=11
40 RREG AC,X,Y,Z,$
50 PRINT "REGISTER:",AC,X,Y,Z,$
```

# RSPCOLOR

**Token:** \$CE \$07

**Format:** RSPCOLOR(*n*)

**Returns:** The colour setting of a multi-colour sprite colour.

**n** sprite multi-colour number:

- **1** get multi-colour # 1.
- **2** get multi-colour # 2.

**Remarks:** Refer to **SPRITE** and **SPRCOLOR** for more information.

**Example:** Using RSPCOLOR:

```
10 SPRITE 1,1      :REM TURN SPRITE 1 ON
20 C1% = RSPCOLOR(1) :REM READ COLOUR #1
30 C2% = RSPCOLOR(2) :REM READ COLOUR #2
```

# RSPEED

**Token:** \$CE \$0E

**Format:** **RSPEED(n)**

**Returns:** The current CPU clock in MHz.

**n** numeric dummy argument, which is ignored.

**Remarks:** **RSPEED(n)** will not return the correct value if **POKE 0,65** has previously been used to enable the highest speed (40MHz).

Refer to the **SPEED** command for more information.

**Example:** Using **RSPEED**:

```
10 X=RSPEED(0)      :REM GET CLOCK
20 IF X=1 THEN PRINT "1 MHZ" :GOTO 50
30 IF X=3 THEN PRINT "3.5 MHZ" :GOTO 50
40 IF X=40 THEN PRINT "40 MHZ"
50 END
```

# RSPPoS

**Token:** \$CE \$05

**Format:** RSPPoS(sprite, n)

**Returns:** A sprite's position or speed.

**sprite** sprite number.

**n** sprite parameter to retrieve:

- **0** X position.
- **1** Y position.
- **2** speed.

**Remarks:** Refer to the **MOVSPR** and **SPRITE** commands for more information.

**Example:** Using RSPPoS:

```
10 SPRITE 1,1      :REM TURN SPRITE 1 ON
20 XP = RSPPoS(1,0) :REM GET X OF SPRITE 1
30 YP = RSPPoS(1,1) :REM GET Y OF SPRITE 1
30 SP = RSPPoS(1,2) :REM GET SPEED OF SPRITE 1
```

# RSprite

**Token:** \$CE \$06

**Format:** **RSprite**(sprite, n)

**Returns:** A sprite parameter.

**sprite** sprite number (0 - 7).

**n** the sprite parameter to return (0 - 5):

- **0** turned on (0 or 1) A 0 means the sprite is off.
- **1** foreground colour (0 - 15).
- **2** background priority (0 or 1).
- **3** x-expanded (0 or 1). 0 means it's not expanded.
- **4** y-expanded (0 or 1). 0 means it's not expanded.
- **5** multi-colour (0 or 1). 0 means it's not multi-colour.

**Remarks:** Refer to the **MOVSPR** and **SPRITE** commands for more information.

**Example:** Using **RSprite**:

```
10 SPRITE 1,1      :REM TURN SPRITE 1 ON
20 EN = RSsprite(1,0) :REM SPRITE 1 ENABLED ?
30 FG = RSsprite(1,1) :REM SPRITE 1 FOREGROUND COLOUR INDEX
40 BP = RSsprite(1,2) :REM SPRITE 1 BACKGROUND PRIORITY
50 XE = RSsprite(1,3) :REM SPRITE 1 X EXPANDED ?
60 YE = RSsprite(1,4) :REM SPRITE 1 Y EXPANDED ?
70 MC = RSsprite(1,5) :REM SPRITE 1 MULTI-COLOUR ?
```

# RUN

**Token:** \$8A

**Format:** **RUN** [line number]

**RUN** filename [,D drive] [,U unit] ↑ filename

**Usage:** Runs the BASIC program in memory, or loads and runs a program from disk.

If a filename is given, the program file is loaded into memory and run, otherwise the program that is currently in memory will be used instead.

The ↑ can be used as shortcut, if used in direct mode at the leftmost column. It can be used to load and run a program from a dir listing by moving the cursor to the row with the filename, typing the ↑ at the start of the row and pressing return. Characters before and after the quoted filename, will be ignored (like the PRG for example).

**line number** an existing line number of the program in memory to run from.

**filename** either a quoted string, e.g. "PRG" or a string expression in brackets, e.g. (PR\$). The filetype must be **PRG**.

**drive** drive # in dual drive disk units.

The drive # defaults to **0** and can be omitted on single drive units such as the 1541, 1571, or 1581.

**unit** device number on the IEC bus. Typically in the range from 8 to 11 for disk units. If a variable is used, it must be placed in brackets. The unit # defaults to **8**.

**RUN** first resets all internal pointers to their default values. Therefore, there will be no variables, arrays or strings defined. The run-time stack is also reset, and the table of open files is cleared.

**Remarks:** To start or continue program execution without resetting everything, use **GOTO** instead.

**Examples:** Using **RUN**

```
RUN "FLIGHTSIM" :REM LOAD AND RUN PROGRAM FLIGHTSIM  
RUN 1000      :REM RUN PROGRAM IN MEMORY, START AT LINE# 1000  
RUN          :REM RUN PROGRAM IN MEMORY
```

# RWINDOW

**Token:** \$CE \$09

**Format:** **RWINDOW(n)**

**Returns:** A parameter of the current text window.

n the screen parameter to retrieve:

- 0 width of current text window.
- 1 height of current text window.
- 2 number of columns on screen (40 or 80).

**Remarks:** Older versions of **RWINDOW** reported the width - 1 and the height - 1 for arguments 0 and 1.

Refer to the **WINDOW** command for more information.

**Example:** Using **RWINDOW**:

```
10 W = RWINDOW(2)      :REM GET SCREEN WIDTH
20 IF W=80 THEN BEGIN   :REM IS 80 COLUMNS MODE ACTIVE?
30   PRINT CHR$(27)+"X";  :REM YES, SWITCH TO 40COLUMNS
40 BEND
```

# SAVE

**Token:** \$94

**Format:** **SAVE** filename [, unit]

 filename [, unit]

**Usage:** Saves a BASIC program to a file of type **PRG**.

**filename** the name of a file. Either a quoted string such as "DATA", or a string expression in brackets such as (FI\$).

The maximum length of the filename is 16 characters, not counting the optional save and replace character 'e' and the in-file drive definition. If the first character of the filename is an at sign '@', it is interpreted as a "save and replace" operation. It is not recommended to use this option on 1541 and 1571 drives, as they contain a "save and replace bug" in their DOS. The filename may be preceded by the drive number definition "0:" or "1:", which is only relevant for dual drive disk units.

**unit** device number on the IEC bus. Typically in the range from 8 to 11 for disk units. If a variable is used, it must be placed in brackets. The unit # defaults to **8**.

**Remarks:** **SAVE** is obsolete, implemented only for backwards compatibility. **DSAVE** should be used instead. The shortcut symbol  is next to **1**. Can only be used in direct mode.

**Examples:** Using **SAVE**

```
SAVE "ADVENTURE"  
SAVE "ZORK-I",8  
SAVE "1:DUNGEON",9
```

# SAVEIFF

**Token:** \$FE \$44

**Format:** **SAVEIFF** filename [,D drive] [,U unit]

**Usage:** Bitmap graphics: saves the current graphics screen to a disk file in **IFF** format.

The IFF (Interchange File Format) is supported by many different applications and operating systems. **SAVEIFF** saves the image, the palette and resolution parameters.

**filename** the name of a file. Either a quoted string such as "**DATA**", or a string expression in brackets such as **(FI\$)**. The maximum length of the filename is 16 characters. If the first character of the filename is an at sign '@' it is interpreted as a "save and replace" operation. It is not recommended to use this option on 1541 and 1571 drives, as they contain a "save and replace bug" in their DOS.

**drive** drive # in dual drive disk units.

The drive # defaults to **0** and can be omitted on single drive units such as the 1541, 1571, or 1581.

**unit** device number on the IEC bus. Typically in the range from 8 to 11 for disk units. If a variable is used, it must be placed in brackets. The unit # defaults to **8**.

**Remarks:** Files saved with **SAVEIFF** can be loaded with **LOADIFF**. Tools are available to convert popular image formats to IFF. These tools are available on several operating systems, such as Amiga OS, macOS, Linux, and Windows. For example, **ImageMagick** is a free graphics package that includes a tool called **convert**, which can be used to create IFF files in conjunction with the **ppmtoilbm** tool from the **Netpbm** package.

**Example:** Using **SAVEIFF**

```
10 SCREEN 320,200,2      :REM SCREEN #0 320 X 200 X 2
20 PEN 1                  :REM DRAWING PEN COLOUR 1 (WHITE)
30 LINE 25,25,295,175    :REM DRAW LINE
40 SAVEIFF "LINE-EXAMPLE",U8 :REM SAVE CURRENT VIEW TO FILE
50 SCREEN CLOSE            :REM CLOSE SCREEN AND RESTORE PALETTE
```

# SCNCLR

**Token:** \$E8

**Format:** SCNCLR [colour]

**Usage:** Clears a text window or bitmap graphics screen.

**SCNCLR** (with no arguments) clears the current text window. The default window occupies the whole screen.

**SCNCLR colour** clears the graphic screen by filling it with the given colour.

**Example:** Using SCNCLR:

```
1 REM SCREEN EXAMPLE 2
10 GRAPHIC CLR      :REM INITIALISE
20 SCREEN DEF 1,0,0,2 :REM SCREEN #1 320 X 200 X 2
30 SCREEN OPEN 1     :REM OPEN SCREEN 1
40 SCREEN SET 1,1    :REM USE SCREEN 1 FOR RENDERING AND VIEWING
50 SCREEN CLR 0      :REM CLEAR SCREEN
60 PALETTE 1,1,15,15,15 :REM DEFINE COLOUR 1 AS WHITE
70 PEN 0,1           :REM DRAWING PEN
80 LINE 25,25,295,175 :REM DRAW LINE
90 SLEEP 10          :REM WAIT FOR 10 SECONDS
100 SCREEN CLOSE 1   :REM CLOSE SCREEN AND RESTORE PALETTE
```

# SCRATCH

**Token:** \$F2

**Format:** **SCRATCH** filename [,D drive] [,U unit] [,R]

**Usage:** Erases ("scratches") a disk file.

**filename** the name of a file. Either a quoted string such as "DATA", or a string expression in brackets such as (FI\$).

**drive** drive # in dual drive disk units.

The drive # defaults to **0** and can be omitted on single drive units such as the 1541, 1571, or 1581.

**unit** device number on the IEC bus. Typically in the range from 8 to 11 for disk units. If a variable is used, it must be placed in brackets. The unit # defaults to **8**.

**R** Recover a previously erased file. This will only work if there were no write operations between erasure and recovery, which may have altered the contents of the disk.

**Remarks:** **SCRATCH filename** is a synonym of **ERASE filename** and **DELETE filename**.

In direct mode the success and the number of erased files is printed. The second to last number from the message contains the number of successfully erased files,

**Examples:** Using **SCRATCH**

```
SCRATCH "DRM",U9 :REM ERASE FILE DRM ON UNIT 9  
81, FILES SCRATCHED,01,00  
SCRATCH "OLD%" :REM ERASE ALL FILES BEGINNING WITH "OLD"  
01, FILES SCRATCHED,04,00  
SCRATCH "R*=PRG" :REM ERASE PROGRAM FILES STARTING WITH 'R'  
01, FILES SCRATCHED,09,00
```

# SCREEN

**Token:** \$FE \$2E

**Format:**

- SCREEN** [screen,] width, height, depth
- SCREEN CLR** colour
- SCREEN DEF** width flag, height flag, depth
- SCREEN SET** drawscreen, viewscreen
- SCREEN OPEN** [screen]
- SCREEN CLOSE** [screen]

**Usage:** Bitmap graphics: manages a graphics screen.

There are two approaches available when preparing the screen for the drawing of graphics: a simplified approach, and a detailed approach.

## Simplified approach:

The first version of **SCREEN** (which has pixel units for width and height) is the easiest way to start a graphics screen, and is the preferred method if only a single screen is needed (i.e., a second screen isn't needed for double buffering). This does all of the preparatory work for you, and will call commands such as **GRAPHIC CLR**, **SCREEN CLR**, **SCREEN DEF**, **SCREEN OPEN** and, **SCREEN SET** on your behalf. It takes the following parameters:

**SCREEN** [screen,] width, height, depth

- **screen** the screen number (0 - 3) is optional. If no screen number is given, screen 0 is used. To keep this approach as simple as possible, it is suggested to use the default screen 0.
- **width** 320 or 640 (default 320)
- **height** 200 or 400 (default = 200)
- **depth** 1..8 (default = 8), colours =  $2^{\text{depth}}$ .

The argument parser is error tolerant and uses default values for width (320) and height (200) if the parsed argument is not valid.

This version of **SCREEN** starts with a predefined palette and sets the background to black, and the pen to white, so drawing can start immediately using the default values.

On the other hand, the detailed approach will require the setting of palette colours and pen colour before any drawing can be done.

The **colour** value must be in the range of 0 to 15. See appendix [6 on page 299](#) for the list of colours in the default system palette.

When you are finished with your graphics screen, simply call **SCREEN CLOSE** [screen] to return to the text screen.

### **Detailed approach:**

The other versions of **SCREEN** perform special actions, used for advanced graphics programs that open multiple screens, or require "double buffering". If you have chosen the simplified approach, you will not require any of these versions below, apart from **SCREEN CLOSE**.

#### **SCREEN CLR colour** (or **SCNCLR colour**)

Clears the active graphics screen by filling it with **colour**.

#### **SCREEN DEF** screen, width flag, height flag, depth

Defines resolution parameters for the chosen screen. The width flag and height flag indicate whether high resolution (1) or low resolution (0) is chosen.

- **screen** screen number 0 – 3
- **width flag** 0 – 1 (0:320, 1:640 pixel)
- **height flag** 0 – 1 (0:200, 1:400 pixel)
- **depth** 1 – 8 (2 – 256 colours)

Note that the width and height values here are **flags**, and **not pixel units**.

#### **SCREEN SET** drawscreen, viewscreen

Sets screen numbers (0 – 3) for the drawing and the viewing screen, i.e., while one screen is being viewed, you can draw on a separate screen and then later flip between them. This is what's known as double buffering.

#### **SCREEN OPEN** screen

Allocates resources and initialises the graphics context for the selected **screen** (0 – 3). An optional variable name as a further argument, gets the result of the command that can be tested afterwards for success.

#### **SCREEN CLOSE** [screen]

Closes **screen** (0 – 3) and frees resources. If no value is given, it will default to 0. Also note that upon closing a screen, **PALETTE RESTORE** is automatically performed for you.

**Examples:** Using **SCREEN**:

```
5 REM *** SIMPLIFIED APPROACH ***
10 SCREEN 320,200,2 :REM SCREEN #0: 320 X 200 X 2
20 PEN 1 :REM DRAWING PEN COLOUR = 1 (WHITE)
30 LINE 25,25,295,175 :REM DRAW LINE
40 GETKEY A$ :REM WAIT KEYPRESS
50 SCREEN CLOSE :REM CLOSE SCREEN 0 (RESTORE PALETTE)
```

```
5 REM *** DETAILED APPROACH ***
10 GRAPHIC CLR :REM INITIALISE
20 SCREEN DEF 1,0,0,2 :REM SCREEN #1: 320 X 200 X 2
30 SCREEN OPEN 1 :REM OPEN SCREEN 1
40 SCREEN SET 1,1 :REM USE SCREEN 1 FOR RENDERING AND VIEWING
50 SCREEN CLR 0 :REM CLEAR SCREEN
60 PALETTE 1,1,15,15,15:REM DEFINE COLOUR 1 AS WHITE
70 PEN 0,1 :REM DRAWING PEN
80 LINE 25,25,295,175 :REM DRAW LINE
90 SLEEP 10 :REM WAIT 10 SECONDS
100 SCREEN CLOSE 1 :REM CLOSE SCREEN 1 (RESTORE PALETTE)
```

# SET

**Token:** \$FE \$2D

**Format:** **SET DEF** unit

**SET DISK** old **TO** new

**SET VERIFY** <ON | OFF>

**Usage:** **SET DEF** redefines the default unit for disk access, which is initialised to 8 by the DOS. Commands that do not explicitly specify a unit will use this default unit.

**SET DISK** is used to change the unit number of a disk drive temporarily.

**SET VERIFY** enables or disables the DOS verify-after-write mode for 3.5 drives.

**Remarks:** These settings are valid until a reset or shutdown.

**Examples:** Using **SET**:

```
DIR           :REM SHOW DIRECTORY OF UNIT 8
SET DEF 11    :REM UNIT 11 BECOMES DEFAULT
DIR           :REM SHOW DIRECTORY OF UNIT 11
DLOAD "*"     :REM LOAD FIRST FILE FROM UNIT 11
SET DISK 8 TO 9 :REM CHANGE UNIT# OF DISK DRIVE 8 TO 9
DIR U9         :REM SHOW DIRECTORY OF UNIT 9 (FORMER 8)
SET VERIFY ON   :REM ACTIVATE VERIFY-AFTER-WRITE MODE
```

# SETBIT

**Token:** \$FE \$2D \$FE \$4E

**Format:** **SETBIT** address, bit number

**Usage:** Sets a single bit at the **address**.

If the address is in the range of \$0000 to \$FFFF (0 - 65535), the memory bank set by **BANK** is used.

Addresses greater than or equal to \$10000 (decimal 65536) are assumed to be flat memory addresses and used as such, ignoring the **BANK** setting.

The **bit number** is a value in the range of 0 - 7.

A bank value > 127 is used to access I/O, and the underlying system hardware such as the VIC, SID, FDC, etc.

**Example:** Using **SETBIT**

```
10 BANK 128      :REM SELECT SYSTEM MAPPING
20 SETBIT $D011,6 :REM ENABLE EXTENDED BACKGROUND MODE
30 SETBIT $D01B,0 :REM SET BACKGROUND PRIORITY FOR SPRITE 0
```

# **SGN**

**Token:** \$B4

**Format:** **SGN**(numeric expression)

**Returns:** The sign of a numeric expression, as a number.

- **-1** negative argument.
- **0** zero.
- **1** positive, non-zero argument.

**Example:** Using **SGN**

```
10 ON SGN(X)+2 GOTO 100,200,300 :REM TARGETS FOR MINUS,ZERO,PLUS  
20 Z = SGN(X) * ABS(Y) : REM COMBINE SIGN OF X WITH VALUE OF Y
```

# SIN

**Token:** \$BF

**Format:** **SIN**(numeric expression)

**Returns:** The sine of an angle.

The argument is expected in units of radians. The result is in the range (-1.0 to +1.0)

**Remarks:** A value in units of degrees can be converted to radians by multiplying it with  $\pi/180$ .

**Examples:** Using **SIN**

```
PRINT SIN(0.7)
.644217687

X=30:PRINT SIN(X * pi / 180)
.5
```

# SLEEP

**Token:** \$FE \$0B

**Format:** **SLEEP** seconds

**Usage:** Pauses execution for the given duration.

The argument is a positive floating point number of seconds. The precision is 1 microsecond.

**Remarks:** Pressing **RUN STOP** interrupts the sleep.

**Example:** Using **SLEEP**

```
20 SLEEP 10      :REM WAIT 10 SECONDS
40 SLEEP 0.0005 :REM SLEEP 500 MICRO SECONDS
50 SLEEP 0.01    :REM SLEEP 10 MILLI SECONDS
60 SLEEP DD      :REM TAKE SLEEP TIME FROM VARIABLE DD
70 SLEEP 600     :REM SLEEP 10 MINUTES
```

# SOUND

**Token:** \$DA

**Format:** **SOUND** voice, freq, dur [, dir, min, sweep, wave , pulse]

**Usage:** Plays a sound effect.

**voice** voice number (1 - 6).

**freq** frequency (0 - 65535).

**dur** duration in jiffies (0 - 32767). The duration of a jiffy depends on the display standard. There are 50 jiffies per second with PAL, 60 per second with NTSC.

**dir** direction (0:up, 1:down, 2:oscillate).

**min** minimum frequency (0 - 65535).

**sweep** sweep range (0 - 65535).

**wave** waveform (0:triangle, 1:sawtooth, 2:square, 3:noise).

**pulse** pulse width (0 - 4095).

**Remarks:** **SOUND** starts playing the sound effect and immediately continues with the execution of the next BASIC statement while the sound effect is played. This enables the showing of graphics or text and playing sounds simultaneously.

**SOUND** uses SID2 (for voices 1 to 3) and SID4 (for voices 4 to 6) of the 4 SID chips of the system. By default, SID1 and SID2 are slightly right-biased and SID3 and SID4 are slightly left-biased in the stereo mix.

The 6 voice channels used by the **SOUND** command (on SID2+SID4) are distinct to the 6 channels used by the **PLAY** command (on SID1+SID3). Sound effects will not interrupt music, and vice versa.

**Examples:** Using **SOUND**

```
IF PEEK($D06F) AND $80 THEN J = 60: ELSE J = 50 :REM J IS JIFFIES PER SECOND
SOUND 1, 7382, J :REM PLAY SQUARE WAVE ON VOICE 1 FOR 1 SECOND
SOUND 2, 800, J*60 :REM PLAY SQUARE WAVE ON VOICE 2 FOR 1 MINUTE
SOUND 3, 4000, 120, 2, 2000, 400, 1 :REM PLAY SWEEEPING SAWTOOTH WAVE ON VOICE 3
```

# SPC

**Token:** \$A6

**Format:** **SPC**(columns)

**Returns:** As an argument to **PRINT**, a string of cursor-right PETSCII codes, suitable for printing to advance the cursor the given number of columns.

Printing this is similar to pressing → <column> times.

This is not a real function and does not generate a string. It can only be used as an argument to **PRINT**.

**Remarks:** The name of this function is derived from “spaces,” which is misleading. The function prints **cursor right characters**, not spaces. The contents of those character cells that are skipped will not be changed.

**Example:** Using **SPC**

```
10 FOR I=8 TO 12
20 PRINT SPC(-(I<10));I :REM TRUE = -1, FALSE = 0
30 NEXT I
RUN
 8
 9
10
11
12
```

# SPEED

**Token:** \$FE \$26

**Format:** **SPEED** [speed]

**Usage:** Sets the CPU clock speed to 1MHz, 3.5MHz, or 40MHz.

**speed** CPU clock speed where:

- **1** sets CPU to 1MHz.
- **3** sets CPU to 3MHz.
- Anything other than **1** or **3** sets the CPU to 40MHz.

**Remarks:** Although it's possible to call **SPEED** with any real number, the precision part (the decimal point and any digits after it), will be ignored.

**SPEED** is a synonym of **FAST**.

**SPEED** has no effect if **POKE 0,65** has previously been used to set the CPU to 40MHz.

**Example:** Using **SPEED**

```
10 SPEED      :REM SET SPEED TO MAXIMUM (40 MHZ)
20 SPEED 1    :REM SET SPEED TO 1 MHZ
30 SPEED 3    :REM SET SPEED TO 3.5 MHZ
40 SPEED 3.5  :REM SET SPEED TO 3.5 MHZ
```

# SPRCOLOR

**Token:** \$FE \$08

**Format:** **SPRCOLOR** [{mc1, mc2}]

**Usage:** Sets multi-colour sprite colours.

**SPRITE**, which sets the attributes of a sprite, only sets the foreground colour. For setting the additional two colours of multi-colour sprites, use **SPRCOLOR** instead.

**Remarks:** The colours used with **SPRCOLOR** will affect all sprites. Refer to the **SPRITE** command for more information.

The final argument to **SPRITE** enables multi-colour mode for the sprite.

**Example:** Using **SPRCOLOR**:

```
10 SPRITE 1,1,2,,,,1 :REM TURN SPRITE 1 ON (FG = 2)
20 SPRCOLOR 4,5      :REM MC1 = 4, MC2 = 5
```

# SPRITE

**Token:** \$FE \$07

**Format:** **SPRITE CLR**

**SPRITE LOAD** filename [,D drive] [,U unit]

**SPRITE SAVE** filename [,D drive] [,U unit]

**SPRITE** num [{, switch, colour, prio, expx, expy, mode}]

**Usage:** **SPRITE CLR** clears all sprite data and sets all pointers and attributes to their default values.

**SPRITE LOAD** loads sprite data from **filename** to sprite memory.

**SPRITE SAVE** saves sprite data from sprite memory to **filename**.

**filename** the name of a file. Either a quoted string such as "DATA", or a string expression in brackets such as (FI\$).

The last form switches a sprite on or off and sets its attributes:

**num** sprite number

**switch** 1: on, 0: off

**colour** sprite foreground colour

**prio** 0: sprite in front of text, 1: sprite behind text

**expx** 1: sprite X expansion

**expy** 1: sprite Y expansion

**mode** 1: multi-colour sprite

**Remarks:** **SPRCOLOR** must be used to set additional colours for multi-colour sprites (mode = 1).

**Example:** Using **SPRITE**:

```
2290 CLR:SCNCLR:SPRITE CLR
2300 SPRITE LOAD "DEMOsprites1"
2320 FORI=0TO7: C=I: IFC=6THENC=8
2330 MOVSPR I, 60+30*I,0 TO 60+30*I,65+20*I, 3:SPRITE I,I,C,,1,1:NEXT: SLEEP3
2340 FORI=0TO7: SPRITE I,,,0,0 :NEXT: SLEEP3: SPRITE CLR
2350 FORI=0TO7: MOVSPR I,45*I#5 :NEXT: FORI=0TO7: SPRITE I,I: NEXT
2360 FORI=0TO7:X=60+30*I:Y=65+20*I:DO
2370 LOOPUNTIL(X=RSPPOS(I,,))AND(Y=RSPPOS(I,1)):MOVSPI,.,#:NEXT
```

# SPRSAV

**Token:** \$FE \$16

**Format:** **SPRSAV** source, destination

**Usage:** Copies sprite data between two sprites, or between a sprite and a string variable.

**source** sprite number or string variable.

**destination** sprite number or string variable.

**Remarks:** Source and destination can either be a sprite number or a string variable,

**SPRSAV** can be used with the basic form of sprites (C64 compatible) only. These sprites occupy 64 bytes of memory, and create strings of length 64, if the destination parameter is a string variable.

Extended sprites and variable height sprites cannot be used with **SPRSAV**.

A string array of sprite data can be used to store many shapes and copy them fast to the sprite memory with the command **SPRSAV**.

It's also a convenient method to read or write shapes of single sprites from or to a disk file.

**Example:** Using **SPRSAV**:

```
10 SPRITE LOAD "SPRITEDATA" :REM LOAD DATA FOR 8 SPRITES
20 SPRITE 1,1 :REM TURN SPRITE 1 ON
30 SPRSAV 1,2 :REM COPY SPRITE 1 DATA TO SPRITE 2
40 SPRITE 2,1 :REM TURN SPRITE 2 ON
50 SPRSAV 1,A$ :REM SAVE SPRITE 1 DATA IN STRING A$
```

# SQR

**Token:** \$BA

**Format:** **SQR**(numeric expression)

**Returns:** The square root of a numeric expression.

**Remarks:** The argument must not be negative.

**Example:** Using **SQR**

```
PRINT SQR(2)
```

```
1.41421356
```

# ST

**Format:** ST

**Usage:** The status of the last I/O operation.

If ST is zero, there was no error, otherwise it is set to a device dependent error code.

**Remarks:** ST is a reserved system variable.

**Example:** Using ST

```
100 MX=100:DIM T$(MX)      :REM DATA ARRAY
110 DOPEN#1,"DATA"          :REM OPEN FILE
120 IF DS THEN PRINT"COULD NOT OPEN":STOP
130 LINE INPUT#1,T$(N):N=N+1 :REM READ ONE RECORD
140 IF N>MX THEN PRINT "TOO MANY DATA":GOTO 160
150 IF ST=0 THEN 130        :REM ST = 64 FOR END-OF-FILE
160 DCLOSE#1
170 PRINT "READ",N;" RECORDS"
```

# STEP

**Token:** \$A9

**Format:** **FOR** index = start **TO** end [**STEP** step] ... **NEXT** [index]

**Usage:** **STEP** is an optional part of a **FOR** loop.

The **index** variable may be incremented or decremented by a constant value after each iteration. The default is to increment the variable by 1. The index variable must be a real variable.

**start** initial value of the index.

**end** is checked at the end of an iteration, and determines whether another iteration will be performed, or if the loop will exit.

**step** defines the change applied to the **index** at the end of a loop iteration. Positive step values increment it, while negative values decrement it. It defaults to 1.0 if not specified.

**Remarks:** For positive increments, **end** must be greater than or equal to **start**. For negative increments, **end** must be less than or equal to **start**.

It is bad programming practice to change the value of the **index** variable inside the loop or to jump into or out of a loop body with **GOTO**.

**Example:** Using **STEP**

```
10 FOR D=0 TO 360 STEP 30
20 R = D * π / 180
30 PRINT D;R;SIN(R);COS(R);TAN(R)
40 NEXT D
```

# **STOP**

**Token:** \$90

**Format:** **STOP**

**Usage:** Stops the execution of the BASIC program.

A message will be displayed showing the line number where the program stopped. The **READY**. prompt appears and the computer goes into direct mode, waiting for keyboard input.

**Remarks:** All variable definitions are still valid after **STOP**. They may be inspected or altered, and the program may be continued with **CONT**. However, any editing of the program source will disallow any further continuation.

Program execution can be resumed with **CONT**.

**Example:** Using **STOP**

```
10 IF V < 0 THEN STOP : REM NEGATIVE NUMBERS STOP THE PROGRAM
20 PRINT SQR(V)      : REM PRINT SQUARE ROOT
```

# **STR\$**

**Token:** \$C4

**Format:** **STR\$**(numeric expression)

**Returns:** A string of the formatted value of the argument, as if it were **PRINTed** to the string.

**Example:** Using **STR\$**:

```
A$ = "THE VALUE OF PI IS " + STR$(π)  
PRINT A$  
THE VALUE OF PI IS 3.14159265
```

# SYS

**Token:** \$9E

**Format:** **SYS** address [{, areg, xreg, yreg, zreg, sreg}]

**Usage:** Calls a machine language subroutine.

**address** start address of the subroutine. This can be a ROM-resident KERNEL routine or any other routine which has previously been loaded or **POKEd** to RAM.

**areg** CPU accumulator value.

**xreg** CPU X register value.

**yreg** CPU Y register value.

**zreg** CPU Z register value.

**sreg** Status register value.

**SYS** loads the arguments (if any) into registers, then calls the subroutine. The called routine must exit with an **RTS** instruction. After the subroutine has returned, it saves the new register contents, then returns control to the BASIC program.

If the address value is 16 bit (\$0000 - \$FFFF), the **BANK** value is used to determine the actual address. If the address is higher than \$FFFF, it is interpreted as a linear 24 bit address and the value of **BANK** is ignored.

Unlike other BASIC commands that access memory, there are restrictions on which addresses **SYS** can access:

- **SYS** can only access banks 0 - 5, and cannot access Attic RAM or upper memory, even when using long addresses.
- Only offsets \$2000 - \$7FFF within a given bank actually refer to the memory of that bank.
- **SYS** can only access offsets \$0000 - \$1FFF in bank 0.
- Accessing offsets \$8000 - \$FFFF always accesses memory as if **BANK** is set to 128 (including ROM and I/O register mappings), even when **BANK** is set to a different bank or when using long addresses.

**Remarks:** The register values after a **SYS** call are stored in system memory. **RREG** can be used to retrieve these values.

Despite the unusual restrictions on addresses, the **SYS** command is a powerful way to combine BASIC and machine language code. For short routines, memory in bank 0 offsets \$1800 - \$1EFF are available for program use. If care is taken to avoid overwriting the end of the BASIC program, machine language routines can be loaded elsewhere in bank 0 up to offset \$BFFF.

Using **SYS** properly (i.e. without corrupting the system) requires some technical skill, which is out of scope of the User's Guide. For more information and examples, see *the MEGA65 Book, Programming with Memory (chapter 12)*.

**Example:** Using **SYS**:

```
10 REM DEMO FOR SYS:CHANGING THE BORDER COLOUR
20 BANK 0
30 POKE $4000,$EE,$20,$00,$60 :REM INC $D020:RTS
40 SYS $4000 :REM CALL SUBROUTINE AT $4000 / BANK $00
50 GETKEY A$:IF A$ <> "Q" THEN 40
```

# TAB

**Token:** \$A3

**Format:** TAB(column)

**Returns:** Positions the cursor at **column**.

This is only done if the target column is *right* of the current cursor column, otherwise the cursor will not move. The column count starts with 0 being the left-most column.

**Remarks:** This function shouldn't be confused with **TAB**, which advances the cursor to the next tab-stop.

**Example:** Using TAB

```
10 FOR I=1 TO 5
20 READ A$
30 PRINT "* " A$ TAB(10) " *"
40 NEXT I
50 END
60 DATA ONE,TWO,THREE,FOUR,FIVE
```

```
RUN
* ONE      *
* TWO      *
* THREE    *
* FOUR     *
* FIVE     *
```

# TAN

**Token:** \$C0

**Format:** **TAN**(numeric expression)

**Returns:** The tangent of an angle.

The argument is expected in units of radians. The result is in the range (-1.0 to +1.0)

**Remarks:** A value in units of degrees can be converted to radians by multiplying it with  $\pi/180$ .

**Example:** Using **TAN**

```
PRINT TAN(0.7)
.84228838

X=45:PRINT TAN(X * pi / 180)
.99999999
```

# TEMPO

**Token:** \$FE \$05

**Format:** TEMPO speed

**Usage:** Sets the playback speed for PLAY.

**speed** 1 - 255

The duration (in seconds) of a whole note is computed with *duration* =  $24/speed$ .

**Example:** Using TEMPO

```
10 VOL 8
20 FOR T = 24 TO 18 STEP -2
30 TEMPO T
40 PLAY "T0M3040GAGFED","T204M5P0H.DP56B","T503IGAGAGAABABAB"
50 IF RPLAY(1) THEN GOTO 50
60 NEXT T
70 PLAY "T0050C04GEH.C","T205IEFEDEDCE606P8CP0R","T503ICDCDEFEDC04C"
```

# THEN

**Token:** \$A7

**Format:** **IF** expression **THEN** true clause [**ELSE** false clause]

**Usage:** **THEN** is part of an **IF** statement.

**expression** is a logical or numeric expression. A numeric expression is evaluated as **FALSE** if the value is zero and **TRUE** for any non-zero value.

**true clause** one or more statements starting directly after **THEN** on the same line. A linenumber after **THEN** performs a **GOTO** to that line instead.

**false clause** one or more statements starting directly after **ELSE** on the same line. A linenumber after **ELSE** performs a **GOTO** to that line instead.

**Remarks:** The standard **IF ... THEN ... ELSE** structure is restricted to a single line. But the **true clause** and **false clause** may be expanded to several lines using a compound statement surrounded with **BEGIN** and **BEND**.

**Example:** Using **THEN**

```
1 REM THEN
10 RED$=CHR$(28) : BLACK$=CHR$(144) : WHITE$=CHR$(5)
20 INPUT "ENTER A NUMBER";V
30 IF V<0 THEN PRINT RED$; : ELSE PRINT BLACK$;
40 PRINT V : REM PRINT NEGATIVE NUMBERS IN RED
50 PRINT WHITE$
60 INPUT "END PROGRAM: (Y/N)"; A$
70 IF A$="Y" THEN END
80 IF A$="N" THEN 20 : ELSE 60
```

# TI

**Format:** TI

**Usage:** A high precision timer variable with a resolution of 1 micro second.

It is started or reset with **CLR TI**, and can be accessed in the same way as any other variable in expressions.

**Remarks:** TI is a reserved system variable. The value in TI is the number of seconds (to 6 decimal places) since it was last cleared or started.

**Example:** Using TI

```
100 CLR TI           :REM START TIMER
110 FOR I% = 1 TO 10000:NEXT :REM DO SOMETHING
120 ET = TI           :REM STORE ELAPSED TIME IN ET
130 PRINT "EXECUTION TIME:";ET;" SECONDS"
```

# TI\$

**Format:** TI\$

**Usage:** The current time of day, as a string.

The time value is updated from the RTC (Real-Time Clock). The string TI\$ is formatted as: "hh:mm:ss".

TI\$ is a read-only variable, which reads the registers of the RTC and formats the values to a string. This differs from other Commodore computers that do not have an RTC.

**Remarks:** TI\$ is a reserved system variable.

It is possible to access the RTC registers directly via PEEK. The start address of the registers is at \$FFD7110.

For more information on how to set the Real-Time Clock, refer to the Configuration Utility section on page *the MEGA65 Book*, [The Configuration Utility \(section 4\)](#).

```
100 REM ***** READ RTC ***** ALL VALUES ARE BCD ENCODED
110 RT = $FFD7110          :REM ADDRESS OF RTC
120 FOR I=0 TO 5           :REM SS,MM,HH,DD,MO,YY
130 T(I)=PEEK(RT+I)       :REM READ REGISTERS
140 NEXT I                :REM USE ONLY LAST TWO DIGITS
150 T(2) = T(2) AND 127    :REM REMOVE 24H MODE FLAG
160 T(5) = T(5) + $2000    :REM ADD YEAR 2000
170 FOR I=2 TO 0 STEP -1   :REM TIME INFO
180 PRINT USING ">HHH ";HEX$(T(I));
190 NEXT I
RUN
12 52 36
```

**Example:** Using TI\$

```
PRINT DT$,TI$
05-APR-2021 15:10:00
```

# TO

**Token:** \$A4

**Format:** keyword TO

**Usage:** TO is a secondary keyword used in combination with primary keywords, such as **BACKUP**, **BSAVE**, **CHANGE**, **CONCAT**, **COPY**, **FOR**, **GO**, **RENAME**, and **SET DISK**

**Remarks:** TO cannot be used on its own.

**Example:** Using TO

```
10 GO TO 1000 :REM AS GOTO 1000
20 GOTO 1000 :REM SHORTER AND FASTER
30 FOR I=1 TO 10 :REM TO IS PART OF THE LOOP
40 PRINT I:NEXT :REM LOOP END
50 COPY "CODES" TO "BACKUP" :REM COPY SINGLE FILE
```

# TRAP

**Token:** \$D7

**Format:** **TRAP** [line number]

**Usage:** Registers (or clears) a BASIC error handler subroutine.

With an error handler registered, when a BASIC program encounters an error, it calls the subroutine instead of exiting the program. During the subroutine, the system variable **ER** contains the error number. The **TRAP** error handler can then decide whether to **STOP** or **RESUME** execution.

**TRAP** with no argument disables the error handler, and errors will then be handled by the normal system routines.

**Example:** Using **TRAP**

```
10 TRAP 100
20 FOR I=1 TO 100
30 PRINT EXP(I)
40 NEXT
50 PRINT "STOPPED FOR I =";I
60 END
100 PRINT ERR$(ER): RESUME 50
```

# TROFF

**Token:** \$D9

**Format:** TROFF

**Usage:** Turns off trace mode (switched on by **TRON**).

When trace mode is active, each line number is printed before it is executed. **TROFF** turns off trace mode.

**Example:** Using **TROFF**

```
10 TRON           :REM ACTIVATE TRACE MODE
20 FOR I=85 TO 100
30 PRINT I;EXP(I)
40 NEXT
50 TROFF          :REM DEACTIVATE TRACE MODE

RUN
[10][20][30] 85  8.22381268E+36
[40][30] 86  2.2352466E+37
[40][30] 87  6.0760302E+37
[40][30] 88  1.65163625E+38
[40][30] 89
?OVERFLOW ERROR IN 30
READY.
```

# TRON

**Token:** \$D8

**Format:** TRON

**Usage:** Turns on trace mode.

When trace mode is active, each line number is printed before it is executed. **TRON** turns on trace mode.

This is useful for debugging the control flow of a BASIC program. To use it, add **TRON** and **TROFF** statements to the program around the lines that need debugging.

**Example:** Using **TRON**

```
10 TRON      :REM ACTIVATE TRACE MODE
20 FOR I=85 TO 100
30 PRINT I;EXP(I)
40 NEXT
50 TROFF      :REM DEACTIVATE TRACE MODE

RUN
[10][20][30] 85  8.22381268E+36
[40][30] 86  2.2352466E+37
[40][30] 87  6.0760302E+37
[40][30] 88  1.65163625E+38
[40][30] 89
?OVERFLOW ERROR IN 30
READY.
```

# TYPE

**Token:** \$FE \$27

**Format:** **TYPE** filename [,D drive] [,U unit]

**Usage:** Prints the contents of a file containing text encoded as PETSCII.

**filename** the name of a file. Either a quoted string such as "DATA", or a string expression in brackets such as (F1\$).

**drive** drive # in dual drive disk units.

The drive # defaults to **0** and can be omitted on single drive units such as the 1541, 1571, or 1581.

**unit** device number on the IEC bus. Typically in the range from 8 to 11 for disk units. If a variable is used, it must be placed in brackets. The unit # defaults to **8**.

**Remarks:** **TYPE** cannot be used to print BASIC programs. Use **LIST** for programs instead. **TYPE** can only process **SEQ** or **USR** files containing records of PETSCII text, delimited by the CR character. (The CR (carriage return) character can be written to a file using **CHR\$(13)**.)

See the **EDIT** command for a way to create and modify text files interactively with the MEGA65.

**Example:** Using **TYPE**

```
TYPE "README"  
TYPE "README 1ST",U9
```

# UNLOCK

**Token:** \$FE \$4F

**Format:** **UNLOCK** filename/pattern [,D drive] [,U unit]

**Usage:** Unlocks a locked file on disk.

The specified file or a set of files, that matches the pattern, is unlocked and no more protected. It can be deleted afterwards with the commands **DELETE**, **ERASE** or **SCRATCH**

The **LOCK** command locks a file.

**filename** the name of a file. Either a quoted string such as "DATA", or a string expression in brackets such as {F1\$}.

**drive** drive # in dual drive disk units.

The drive # defaults to **0** and can be omitted on single drive units such as the 1541, 1571, or 1581.

**unit** device number on the IEC bus. Typically in the range from 8 to 11 for disk units. If a variable is used, it must be placed in brackets. The unit # defaults to **8**.

**Remarks:** Unlocking a file that is already unlocked has no effect.

In direct mode the number of unlocked files is printed. The second to last number from the message contains the number of unlocked files,

**Examples:** Using **UNLOCK**

```
UNLOCK "SNOOPY",U9 :REM UNLOCK FILE SNOOPY ON UNIT 9  
03,FILES UNLOCKED,01,00  
UNLOCK "BS*"    :REM UNLOCK ALL FILES BEGINNING WITH "BS"  
03,FILES UNLOCKED,04,00
```

# UNTIL

**Token:** \$FC

**Format:** **DO ... LOOP**

**DO** [<UNTIL | WHILE> logical expression]  
. . . statements [**EXIT**]  
**LOOP** [<UNTIL | WHILE> logical expression]

**Usage:** **DO** and **LOOP** define the start of a BASIC loop. Using **DO** and **LOOP** alone without any modifiers creates an infinite loop, which can only be exited by the **EXIT** statement. The loop can be controlled by adding **UNTIL** or **WHILE** after the **DO** or **LOOP**.

**Remarks:** **DO** loops may be nested. An **EXIT** statement exits the current loop only.

**Examples:** Using **DO** and **LOOP**.

```
10 PW$="" : DO  
20 GET A$: PW$=PW$+A$  
30 LOOP UNTIL LEN(PW$)>7 OR A$=CHR$(13)  
  
10 DO : REM WAIT FOR USER DECISION  
20 GET A$  
30 LOOP UNTIL A$="Y" OR A$="N" OR A$="y" OR A$="n"  
  
10 DO WHILE ABS(EPS) > 0.001  
20 GOSUB 2000 : REM ITERATION SUBROUTINE  
30 LOOP  
  
10 IX=0 : REM INTEGER LOOP 1-100  
20 DO IX=IX+1  
30 LOOP WHILE IX < 101
```

# USING

**Token:** \$FB

**Format:** PRINT[# channel,] USING format; argument

**Usage:** Parses the **format** string and evaluates the argument. The argument can be either a string or a numeric value. The format of the resulting output is directed by the **format** string.

**channel** number, which was given to a previous call to commands such as **APPEND**, **DOPEN**, or **OPEN**. If no channel is specified, the output goes to the screen.

**format** string variable or a string constant which defines the rules for formatting. When using a number as the **argument**, formatting can be done in either CBM style, providing a pattern such as ####.## or in C style using a <width.precision> specifier, such as %3D %7.2F %4X .

**argument** the number to be formatted. If the argument does not fit into the format e.g. trying to print a 4 digit variable into a series of three hashes (###), asterisks will be used instead.

**Remarks:** The format string is only applied for one argument, but it is possible to append more than one **USING format;argument** sequences.

**argument** may consist of printable characters and control codes. Printable characters are printed to the cursor position, while control codes are executed. The number of # characters sets the width of the output. If the first character of the format string is an equals '=' sign, the argument string is centered. If the first character of the format string is a greater than '>' sign, the argument string is right justified.

**Example:** **USING** with a corresponding **PRINT#**

```
PRINT USING "####.###";#, USING " [%.4F] ";SQR(2)
3.14 [1.4142]

PRINT USING " < # # # > ";12*31
< 3 7 2 >

PRINT USING "#####"; "ABCDE"
ABC

PRINT USING ">#####"; "ABCDE"
CDE

PRINT USING "ADDRESS:$%4X";65000
ADDRESS:$FDE8

A$="#####,#####.##":PRINT USING A$;1E8/3
33,333,333.3
```

# USR

**Token:** \$B7

**Format:** **USR**(numeric expression)

**Usage:** Invokes an assembly language routine whose memory address is stored at \$02F8 - \$02F9.

The result of the **numeric expression** is written to floating point accumulator 1.

After executing the assembly routine, BASIC returns the contents of the floating point accumulator 1.

**Remarks:** Banks 0 - 127 give access to RAM or ROM banks. Banks greater than 127 are used to access I/O, and the underlying system hardware such as the VIC, SID, FDC, etc.

The floating point accumulator is a facility of the KERNAL that is outside the scope of the User's Guide.

**Example:** Using **USR**

```
10 WPOKE $2F8, $7F33 : REM NEGATE ROUTINE
20 PRINT USR(a)
30 PRINT USR(-5)
```

# VAL

**Token:** \$C5

**Format:** **VAL**(string expression)

**Returns:** The decimal floating point value represented by a string.

**Remarks:** **VAL** parses characters from the beginning of the string that resemble a BASIC decimal number, including a leading negative sign, digits, a decimal point, and an exponent. If it encounters an invalid character, it stops parsing and returns the result up to that point in the string.

**Example:** Using **VAL**

```
PRINT VAL("78E2")
7800
```

```
PRINT VAL("7+5")
7
```

```
PRINT VAL("1.256")
1.256
```

```
PRINT VAL("$FFFF")
0
```

# VERIFY

**Token:** \$95

**Format:** **VERIFY** filename [, unit [, binflag]]

**Usage:** **VERIFY** with no **binflag** compares a BASIC program in memory with a disk file of type **PRG**. It does the same as **DVERIFY**, but the syntax is different.

**VERIFY** with **binflag** compares a binary file in memory with a disk file of type **PRG**. It does the same as **BVERIFY**, but the syntax is different.

**filename** is either a quoted string, e.g. "PROG" or a string expression.

**unit** device number on the IEC bus. Typically in the range from 8 to 11 for disk units. If a variable is used, it must be placed in brackets. The unit # defaults to **8**.

**Remarks:** **VERIFY** can only test for equality. It gives no information about the number or position of different valued bytes. **VERIFY** exits with either the message **OK** or with **VERIFY ERROR**.

**VERIFY** is obsolete in BASIC 65. It is only here for backwards compatibility. It is recommended to use **DVERIFY** and **BVERIFY** instead.

**Examples:** Using **VERIFY**

```
VERIFY "ADVENTURE"  
VERIFY "ZORK-I",9  
VERIFY "1:DUNGEON",10
```

# VIEWPORT

**Token:** \$FE \$31

**Format:** **VIEWPORT CLR**

**VIEWPORT DEF** x, y, width, height

**Usage:** Bitmap graphics: manages the viewport of a screen.

**VIEWPORT DEF** defines a clipping region with the origin (upper left position) set to **x, y** and the **width** and **height**. All following graphics commands are limited to the **VIEWPORT** region.

**VIEWPORT CLR** fills the clipping region with the colour of the drawing pen.

**Remarks:** The clipping region can be reset to full screen by the command **VIEWPORT DEF 0,0,WIDHT,HEIGHT** using the same values for WIDHTH and HEIGHT as in the **SCREEN** command.

**Example:** Using **VIEWPORT**

```
10 SCREEN 320,200,2
20 VIEWPORT DEF 20,30,100,120 :REM REGION 20->119, 30->149
30 PEN 1 :REM SELECT COLOUR 1
40 VIEWPORT CLR :REM FILL REGION WITH COLOUR OF PEN
50 GETKEY A$ :REM WAIT FOR KEYPRESS
60 SCREEN CLOSE
```

# VOL

**Token:** \$DB

**Format:** VOL volume

**Usage:** Sets the volume for sound output with **SOUND** or **PLAY**.

volume 0 (off) to 15 (loudest).

**Remarks:** This volume setting affects all voices.

**Example:** Using VOL

```
10 TEMPO 22
20 FOR V = 2 TO 8 STEP 2
30 VOL V
40 PLAY "T0M304QGAGFED","T204M5P0H.DP5GB","T503IGAGAGAABABAB"
50 IF RPLAY(1) THEN GOTO 50
60 NEXT V
70 PLAY "T005QCD04GEH.C","T205IEFEDEDCEG06P9CP0R","T503ICDCDEFEDC04C"
```

# VSYNC

**Token:** \$FE \$54

**Format:** **VSYNC** raster line

**Usage:** Waits until the selected raster line is active.

**raster line** (0 - 311) for PAL, (0 - 262) for NTSC mode.

This pauses execution of the BASIC program until the screen update reaches the given vertical pixel coordinate. This is a very brief pause: the screen updates 50 times per second in PAL mode, and 60 times per second in NTSC mode. This is useful to change graphics parameters at specific points in the screen update, and to synchronize BASIC program logic with the screen refresh rate.

**Example:** Using **VSYNC**

```
10 IF FRE(-1)<920364 THEN PRINT"UPDATE ROM":END
20 BORDER 3      :REM CHANGE BORDER COLOUR TO CYAN
30 VSYNC 100     :REM WAIT UNTIL RASTER LINE 100
40 BORDER 7      :REM CHANGE BORDER COLOUR TO YELLOW
50 VSYNC 260     :REM WAIT UNTIL RASTER LINE 260
60 GOTO 20       :REM LOOP
```

# WAIT

**Token:** \$92

**Format:** **WAIT** address, andmask [, xormask]

**Usage:** Pauses the BASIC program until a requested bit pattern is read from the given address.

**address** the address at the current memory bank, which is read.

**andmask AND** mask applied.

**xormask XOR** mask applied.

**WAIT** reads the byte value from **address** and applies the masks:

**result = PEEK(address) AND andmask XOR xormask.**

The pause ends if the result is non-zero, otherwise reading is repeated.  
This may hang the computer indefinitely if the condition is never met.

**Remarks:** **WAIT** is typically used to examine hardware registers or system variables and wait for an event, e.g. joystick event, mouse event, keyboard press or a specific raster line is about to be drawn to the screen.

**Example:** Using **WAIT**

```
10 BANK 128
20 WAIT 211,1      :REM WAIT FOR SHIFT KEY BEING PRESSED
```

# WHILE

**Token:** \$ED

**Format:** **DO ... LOOP**

**DO** [<UNTIL | WHILE> logical expression]  
. . . statements [**EXIT**]  
**LOOP** [<UNTIL | WHILE> logical expression]

**Usage:** **DO** and **LOOP** define the start of a BASIC loop. Using **DO** and **LOOP** alone without any modifiers creates an infinite loop, which can only be exited by the **EXIT** statement. The loop can be controlled by adding **UNTIL** or **WHILE** after the **DO** or **LOOP**.

**Remarks:** **DO** loops may be nested. An **EXIT** statement exits the current loop only.

**Examples:** Using **DO** and **LOOP**

```
10 PW$="" : DO  
20 GET A$: PW$=PW$+A$  
30 LOOP UNTIL LEN(PW$)>7 OR A$=CHR$(13)  
  
10 DO : REM WAIT FOR USER DECISION  
20 GET A$  
30 LOOP UNTIL A$="Y" OR A$="N" OR A$="y" OR A$="n"  
  
10 DO WHILE ABS(EPS) > 0.001  
20 GOSUB 2000 : REM ITERATION SUBROUTINE  
30 LOOP  
  
10 IX=0 : REM INTEGER LOOP 1-100  
20 DO IX=IX+1  
30 LOOP WHILE IX < 101
```

# WINDOW

**Token:** \$FE \$1A

**Format:** **WINDOW** left, top, right, bottom [, clear]

**Usage:** Sets the text screen window.

**left** left column

**top** top row

**right** right column

**bottom** bottom row

**clear** clear text window flag

By default, text updates occur on the entire available text screen. **WINDOW** narrows the update region to a rectangle of the available screen space.

**Remarks:** The row values range from 0 to 24. The column values range from 0 to either 39 or 79. This depends on the screen mode.

There can be only one window on the screen. Pressing  twice or PRINTing **CHR\$(19)CHR\$(19)** will reset the window to the default (full screen).

**Example:** Using **WINDOW**

```
10 WINDOW 0,1,79,24      :REM SCREEN WITHOUT TOP ROW
20 WINDOW 0,0,79,24,1    :REM FULL SCREEN WINDOW CLEARED
30 WINDOW 0,12,79,24     :REM LOWER HALF OF SCREEN
40 WINDOW 20,5,59,15     :REM SMALL CENTRED WINDOW
```

# WPEEK

**Token:** \$CE \$10

**Format:** **WPEEK**(address)

**Returns:** The 16-bit word value stored in memory at **address** (low byte) and **address + 1** (high byte), as an unsigned 16-bit number.

If the address is in the range of \$0000 to \$FFFF (0 - 65535), the memory bank set by **BANK** is used.

Addresses greater than or equal to \$10000 (decimal 65536) are assumed to be flat memory addresses and used as such, ignoring the **BANK** setting.

**Remarks:** Banks 0 – 127 give access to RAM or ROM banks. Banks greater than 127 are used to access I/O, and the underlying system hardware such as the VIC, SID, FDC, etc.

**Example:** Using **WPEEK**

```
20 UA = WPEEK($02F8) :REM USR JUMP TARGET  
50 PRINT "USR FUNCTION CALL ADDRESS";UA
```

# WPOKE

**Token:** \$FE \$1D

**Format:** **WPOKE** address, word [, word ...]

**Returns:** Writes one or more 16-bit words into memory or memory mapped I/O, starting at **address**.

If the address is in the range of \$0000 to \$FFFF (0 – 65535), the memory bank set by **BANK** is used.

Addresses greater than or equal to \$10000 (decimal 65536) are assumed to be flat memory addresses and used as such, ignoring the **BANK** setting.

**word** a value from 0 – 65535. The first word is stored at address (low byte) and address+1 (high byte). The second word is stored at address+2 (low byte) and address+3 (high byte), etc. If a value is larger than 65535, only the lower two bytes are used.

**Remarks:** The address is increased by two for each data word, so a memory range can be written to with a single **WPOKE**.

Banks greater than 127 are used to access I/O, and the underlying system hardware such as the VIC, SID, FDC, etc.

**Example:** Using **WPOKE**

```
10 BANK 128      :REM SELECT SYSTEM BANK
20 WPOKE $02F8,$1800  :REM SET USR VECTOR TO $1800
```

# XOR

**Token:** \$E9

**Format:** operand **XOR** operand

**Usage:** Performs a bit-wise logical Exclusive OR operation on two 16-bit values.

Integer operands are used as they are. Real operands are converted to a signed 16-bit integer (losing precision). Logical operands are converted to 16-bit integer using \$FFFF, (decimal -1) for TRUE, and \$0000 (decimal 0) for FALSE.

Expression	Result
0 XOR 0	0
0 XOR 1	1
1 XOR 0	1
1 XOR 1	0

**Remarks:** The result is of type integer. If the result is used in a logical context, the value of 0 is regarded as FALSE, and all other non-zero values are regarded as TRUE.

**Example:** Using **XOR**

```
FOR I = 0 TO 8: PRINT I XOR 5;; NEXT I
5 4 7 6 1 0 3 2 13
```



# CHAPTER

# 3

## Screen Codes

- Screen Codes



# SCREEN CODES

A text character is represented in screen memory by a screen code. There are 256 possible screen codes, each referring to an image in the current character set.

A complete character set contains two groups of 256 images, one for the uppercase mode and one for the lowercase mode, for a total of 512 images. Only one mode can be displayed at a time. The built-in character sets use the first 128 characters of each group for normal characters and the next 128 for reversed versions of the same characters.

In BASIC, the **T&()** special array provides access to the characters on the screen using column and row indexes. The values in this special array are screen codes. The **FONT** command changes between the built-in character sets. The **CHARDEF** command changes the image associated with a screen code.

Note: Screen codes are different to PETSCII codes. PETSCII codes are used to store, transmit, and receive textual data, and control the way strings are printed to the screen. When a PETSCII character is printed to the screen, the corresponding screen code is written to screen memory. For a list of PETSCII codes, see appendix [4 on page 283](#).

The following table lists the screen codes. When a code produces a different character based on the mode, the character is listed as “uppercase / lowercase.”

<b>0</b> @	<b>13</b> M / m	<b>26</b> Z / z	<b>39</b> '
<b>1</b> A / a	<b>14</b> N / n	<b>27</b> [	<b>40</b> (
<b>2</b> B / b	<b>15</b> O / o	<b>28</b> £	<b>41</b> )
<b>3</b> C / c	<b>16</b> P / p	<b>29</b> ]	<b>42</b> *
<b>4</b> D / d	<b>17</b> Q / q	<b>30</b> ↑	<b>43</b> +
<b>5</b> E / e	<b>18</b> R / r	<b>31</b> ←	<b>44</b> ,
<b>6</b> F / f	<b>19</b> S / s	<b>32</b> space	<b>45</b> -
<b>7</b> G / g	<b>20</b> T / t	<b>33</b> !	<b>46</b> .
<b>8</b> H / h	<b>21</b> U / u	<b>34</b> "	<b>47</b> /
<b>9</b> I / i	<b>22</b> V / v	<b>35</b> #	<b>48</b> 0
<b>10</b> J / j	<b>23</b> W / w	<b>36</b> \$	<b>49</b> 1
<b>11</b> K / k	<b>24</b> X / x	<b>37</b> %	<b>50</b> 2
<b>12</b> L / l	<b>25</b> Y / y	<b>38</b> &	<b>51</b> 3

<b>52</b> 4	<b>71</b> ☐ / G	<b>90</b> ☢ / Z	<b>109</b> ☣
<b>53</b> 5	<b>72</b> ☑ / H	<b>91</b> ☕	<b>110</b> ☤
<b>54</b> 6	<b>73</b> ☒ / I	<b>92</b> ☖	<b>111</b> ☦
<b>55</b> 7	<b>74</b> ☓ / J	<b>93</b> ☗	<b>112</b> ☘
<b>56</b> 8	<b>75</b> ☔ / K	<b>94</b> ☙ / ☚	<b>113</b> ☙
<b>57</b> 9	<b>76</b> ☕ / L	<b>95</b> ☚ / ☙	<b>114</b> ☚
<b>58</b> :	<b>77</b> ☖ / M	<b>96</b> space	<b>115</b> ☖
<b>59</b> ;	<b>78</b> ☗ / N	<b>97</b> ☘	<b>116</b> ☘
<b>60</b> <	<b>79</b> ☙ / O	<b>98</b> ☙	<b>117</b> ☙
<b>61</b> =	<b>80</b> ☚ / P	<b>99</b> ☚	<b>118</b> ☚
<b>62</b> >	<b>81</b> ☙ / Q	<b>100</b> ☙	<b>119</b> ☙
<b>63</b> ?	<b>82</b> ☚ / R	<b>101</b> ☙	<b>120</b> ☙
<b>64</b> ☐	<b>83</b> ☙ / S	<b>102</b> ☚	<b>121</b> ☙
<b>65</b> ☑ / A	<b>84</b> ☙ / T	<b>103</b> ☙	<b>122</b> ☙ / ☚
<b>66</b> ☒ / B	<b>85</b> ☙ / U	<b>104</b> ☙	<b>123</b> ☙
<b>67</b> ☓ / C	<b>86</b> ☙ / V	<b>105</b> ☙ / ☚	<b>124</b> ☙
<b>68</b> ☔ / D	<b>87</b> ☙ / W	<b>106</b> ☙	<b>125</b> ☙
<b>69</b> ☕ / E	<b>88</b> ☙ / X	<b>107</b> ☙	<b>126</b> ☙
<b>70</b> ☖ / F	<b>89</b> ☙ / Y	<b>108</b> ☙	<b>127</b> ☙

Note: In the built-in character sets, codes 128-255 are reversed versions of 0-127.

# CHAPTER 4

## PETSCII Codes

- PETSCII Codes and CHR\$



# PETSCII CODES AND CHR\$

In BASIC, `PRINT CHR$(X)` can be used to print a character from a PETSCII code. Below is the full table of PETSCII codes you can print by index. For example, while in the default uppercase/graphics mode, by using index 65 from the table below as: `PRINT CHR$(65)` you will print the letter `A`. You can read more about **CHR\$** on page [48](#).

You can also do the reverse with the `ASC` statement. For example: `PRINT ASC("A")` will output `65`, which matches the code in the table.

NOTE: Function key (F1-F14 + HELP) values in this table are not intended to be printed via `CHR$(())`, but rather to allow function-key input to be assessed in BASIC programs via the `GET` / `GETKEY` commands.

<b>0</b>		<b>18</b> 	<b>37</b> %	<b>57</b> 9
<b>1</b> ALTERNATE PALETTE		<b>19</b> 	<b>38</b> &	<b>58</b> :
<b>2</b> UNDERLINE ON			<b>39</b> '	<b>59</b> ;
<b>3</b>		<b>20</b> 	<b>40</b> (	<b>60</b> <
<b>4</b> DEFAULT PALETTE		<b>21</b> F10 / BACK WORD	<b>41</b> )	<b>61</b> =
<b>5</b> WHITE		<b>22</b> F11	<b>42</b> *	<b>62</b> >
<b>6</b>		<b>23</b> F12 / NEXT WORD	<b>43</b> +	<b>63</b> ?
<b>7</b> BELL		<b>24</b> SET/CLEAR TAB	<b>44</b> ,	<b>64</b> @
<b>8</b>		<b>25</b> F13	<b>45</b> -	<b>65</b> A
<b>9</b> 		<b>26</b> F14 / BACK TAB	<b>46</b> .	<b>66</b> B
<b>10</b> LINEFEED		<b>27</b> ESCAPE	<b>47</b> /	<b>67</b> C
<b>11</b> DISABLE 		<b>28</b> RED	<b>48</b> 0	<b>68</b> D
<b>12</b> ENABLE 		<b>29</b> 	<b>49</b> 1	<b>69</b> E
<b>13</b> 		<b>30</b> GREEN	<b>50</b> 2	<b>70</b> F
<b>14</b> LOWER CASE		<b>31</b> BLUE	<b>51</b> 3	<b>71</b> G
<b>15</b> BLINK/FLASH ON		<b>32</b> 	<b>52</b> 4	<b>72</b> H
<b>16</b> F9		<b>33</b> !	<b>53</b> 5	<b>73</b> I
<b>17</b> 		<b>34</b> "	<b>54</b> 6	<b>74</b> J
		<b>35</b> #	<b>55</b> 7	<b>75</b> K
		<b>36</b> \$	<b>56</b> 8	<b>76</b> L

77 M	106 □	135 F5	163 □
78 N	107 □	136 F7	164 □
79 O	108 □	137 F2	165 □
80 P	109 □	138 F4	166 □
81 Q	110 □	139 F6	167 □
82 R	111 □	140 F8	168 □
83 S	112 □	141 SHIFT RETURN	169 □
84 T	113 □	142 UPPERCASE	170 □
85 U	114 □	143 BLINK/FLASH OFF	171 □
86 V	115 □	144 BLACK	172 □
87 W	116 □	145 ↑	173 □
88 X	117 □	146 RVS OFF	174 □
89 Y	118 □	147 SHIFT CLR HOME	175 □
90 Z	119 □	148 SHIFT INST DEL	176 □
91 [	120 □	149 BROWN	177 □
92 £	121 □	150 LT. RED (PINK)	178 □
93 ]	122 □	151 DK. GREY	179 □
94 ↑	123 □	152 GREY	180 □
95 ←	124 □	153 LT. GREEN	181 □
96 ☐	125 □	154 LT. BLUE	182 □
97 ☒	126 π	155 LT. GREY	183 □
98 ☑	127 □	156 PURPLE	184 □
99 ☒	128	157 ←	185 □
100 ☐	129 ORANGE	158 YELLOW	186 □
101 ☐	130 UNDERLINE OFF	159 CYAN	187 □
102 ☐	131 SHIFT RUN STOP	160 SPACE	188 □
103 ☑	132 HELP	161 ☐	189 □
104 ☑	133 F1	162 ☐	190 □
105 ☒	134 F3		191 □

Note 1: Codes from 192 to 223 are equal to 96 to 127. Codes from 224 to 254 are equal to 160 to 190, and code 255 is equal to 126.

Note 2: While using lowercase/uppercase mode (by pressing  + ) , be aware that:

- The uppercase letters in region 65-90 of the above table are replaced with lowercase letters.
- The graphical characters in region 97-122 of the above table are replaced with uppercase letters.
- PETSCII's lowercase (65-90) and uppercase (97-122) letters are in ASCII's uppercase (65-90) and lowercase (97-122) letter regions.



# CHAPTER 5

## Screen Editor Keys

- Screen Editor Keys
- Control codes
- Shifted codes
- Escape Sequences



# SCREEN EDITOR KEYS

The following key combinations perform actions in the MEGA65 screen editor.

In some cases, a program can print the equivalent PETSCII codes to perform the same actions. For example, **CTRL** + **G**, which plays a bell sound, can be printed by a program as `CHR$(7)`. To print an **ESC** sequence, use `CHR$(27)` to represent the **ESC** key, followed by the next key in the sequence.

## CONTROL CODES

Keyboard Control	Function
<b>Colours</b>	
<b>CTRL</b> + <b>1</b> to <b>8</b>	Choose from the first range of colours. See appendix <a href="#">6 on page 299</a> for the list of colours in the system palette.
<b>M</b> + <b>1</b> to <b>8</b>	Choose from the second range of colours.
<b>CTRL</b> + <b>E</b>	Restores the colour of the cursor back to the default (white).
<b>CTRL</b> + <b>D</b>	Switches the VIC-IV to colour range 0–15 (default colours). These colours can be accessed with <b>CTRL</b> and keys <b>1</b> to <b>8</b> (for the first 8 colours), or <b>M</b> and keys <b>1</b> to <b>8</b> (for the remaining 8 colours).
<b>CTRL</b> + <b>A</b>	Switches the VIC-IV to colour range 16–31 (alternate/rainbow colours). These colours can be accessed with <b>CTRL</b> and keys <b>1</b> to <b>8</b> (for the first 8 colours), or <b>M</b> and keys <b>1</b> to <b>8</b> (for the remaining 8 colours).

## Keyboard Control

## Function

### Tabs

<b>CTRL</b> + <b>Z</b>	Tabs the cursor to the left. If there are no tab positions remaining, the cursor will remain at the start of the line.
<b>CTRL</b> + <b>I</b>	Tabs the cursor to the right. If there are no tab positions remaining, the cursor will remain at the end of the line.
<b>CTRL</b> + <b>X</b>	Sets or clears the current screen column as a tab position. Use <b>CTRL</b> + <b>Z</b> and <b>I</b> to jump back and forth to all positions set with <b>X</b> .

### Movement

<b>CTRL</b> + <b>Q</b>	Moves the cursor down one line at a time. Equivalent to <b>↓</b> .
<b>CTRL</b> + <b>J</b>	Moves the cursor down a position. If you are on a long line of BASIC code that has extended to two lines, then the cursor will move down two rows to be on the next line.
<b>CTRL</b> + <b>L</b>	Equivalent to <b>→</b> .
<b>CTRL</b> + <b>T</b>	Backspace the character immediately to the left and to shift all rightmost characters one position to the left. This is equivalent to <b>INST DEL</b> .
<b>CTRL</b> + <b>M</b>	Performs a carriage return, equivalent to <b>RETURN</b> .

### Word movement

Keyboard Control	Function
<b>CTRL</b> + <b>U</b>	Moves the cursor backward to the start of the previous word. If there is no previous word on the current line, it moves to the first column of the current line, then to the previous line, until a line with a word is encountered.
<b>CTRL</b> + <b>W</b>	Advances the cursor forward to the start of the next word. If there is no next word on the current line, it moves to the first column of the next line, until a line with a word is encountered.
<b>Scrolling</b>	
<b>CTRL</b> + <b>P</b>	Scroll BASIC listing down one line. Equivalent to <b>F9</b> .
<b>CTRL</b> + <b>V</b>	Scroll BASIC listing up one line. Equivalent to <b>F11</b> .
<b>CTRL</b> + <b>S</b>	Equivalent to <b>NO SCROLL</b> .
<b>Formatting</b>	
<b>CTRL</b> + <b>B</b>	Enables underline text mode. You can disable underline mode by pressing <b>ESC</b> , then <b>O</b> .
<b>CTRL</b> + <b>O</b>	Enables flashing text mode. You can disable flashing mode by pressing <b>ESC</b> , then <b>O</b> .
<b>Casing</b>	
<b>CTRL</b> + <b>N</b>	Changes the text case mode from uppercase to lowercase.

Keyboard Control	Function
<b>CTRL</b> + <b>K</b>	Locks the uppercase/lowercase mode switch usually performed with  + <b>SHIFT</b> .
<b>CTRL</b> + <b>L</b>	Enables the uppercase/lowercase mode switch that is performed with the  + <b>SHIFT</b> .
<b>Miscellaneous</b>	
<b>CTRL</b> + <b>G</b>	Produces a bell tone.
<b>CTRL</b> + <b>[</b>	Equivalent to pressing <b>ESC</b> .
<b>CTRL</b> + <b>*</b>	Enters the Matrix Mode Debugger.

## SHIFTED CODES

Keyboard Control	Function
<b>SHIFT</b> + <b>INST DEL</b>	Insert a character at the current cursor position and move all characters to the right by one position.
<b>SHIFT</b> + <b>HOME</b>	Clear home, clear the entire screen, and move the cursor to the home position.

# ESCAPE SEQUENCES

To perform an Escape Sequence, briefly press and release , then press one of the following keys to perform the sequence.

Key	Sequence
<b>Editor behaviour</b>	
 	Clears the screen and toggles between $40 \times 25$ and $80 \times 25$ text modes.
 	Clears the screen and switches to $40 \times 25$ text mode.
 	Clears the screen and switches to $80 \times 25$ text mode.
 	Switches to $80 \times 50$ text mode.
Note that some programs expect to be started in $80 \times 25$ mode, and may not behave correctly when started in $80 \times 50$ mode.	
 	Clears a region of the screen, starting from the current cursor position, to the end of the screen.
 	Cancels the quote, reverse, underline, and flash modes.
<b>Scrolling</b>	
 	Scrolls the entire screen up one line.
 	Scrolls the entire screen down one line.
 	Enables scrolling when  is pressed at the bottom of the screen.

Key	Sequence
 	<p>Disables scrolling. When pressing  at the bottom of the screen, the cursor will move to the top of the screen. However, when pressing  at the top of the screen, the cursor will remain on the first line.</p>
<b>Insertion and deletion</b>	
 	<p>Inserts an empty line at the current cursor position and moves all subsequent lines down one position.</p>
 	<p>Deletes the current line and moves lines below the cursor up one position.</p>
 	<p>Erases all characters from the cursor to the start of the current line.</p>
 	<p>Erases all characters from the cursor to the end of the current line.</p>
<b>Movement</b>	
 	<p>Moves the cursor to the start of the current line.</p>
 	<p>Moves the cursor to the last non-whitespace character on the current line.</p>
 	<p>Saves the current cursor position. Use   (next to  ) to move it back to the saved position. Note that the  used here is next to .</p>

Key	Sequence	
	<p>Restores the cursor position to the position stored via a prior a press of the  </p>	<p>Restores the cursor position to the position stored via a prior a press of <b>Windowing</b></p>
	<p>Sets the top-left corner of the windowed area. All typed characters and screen activity will be restricted to the area. Also see </p>	<p>Sets the bottom right corner of the windowed area. All typed characters and screen activity will be restricted to the area. Also see <b>Cursor behaviour</b></p>
	<p>Enables auto-insert mode. Any keys pressed will be inserted at the current cursor position, shifting all characters on the current line after the cursor to the right by one position.</p>	
	<p>Disables auto-insert mode, reverting back to overwrite mode.</p>	
	<p>Sets the cursor to non-flashing mode.</p>	

Key	Sequence
 	Sets the cursor to regular flashing mode.
<b>Bell behaviour</b>	
 	Enables the bell which can be sounded using  and  .
 	Disable the bell so that pressing  and  will have no effect.
<b>Colours</b>	
 	Switches the VIC-IV to colour range 0-15 (default colours). These colours can be accessed with  and keys  to  (for the first 8 colours), or  and keys  to  (for the remaining colours).
 	Switches the VIC-IV to colour range 16-31 (alternate/rainbow colours). These colours can be accessed with  and keys  to  (for the first 8 colours), or  and keys  to  (for the remaining colours).
<b>Tabs</b>	
 	Set the default tab stops (every 8 spaces) for the entire screen.
 	Clears all tab stops. Any tabbing with  and  will move the cursor to the end of the line.

# 6

## CHAPTER

# System Palette

- System Palette



# SYSTEM PALETTE

The following table describes the system colour palette as it is defined by default.

Colour palette indexes are used as values in the **C&()** special array, and as arguments for BASIC commands such as **BACKGROUND**, **BORDER**, **COLOR**, **FOREGROUND**, **HIGHLIGHT**, **PEN**, and **SCREEN CLR**.

Index	Red	Green	Blue	Colour
0	0	0	0	Black
1	15	15	15	White
2	15	0	0	Red
3	0	15	15	Cyan
4	15	0	15	Purple
5	0	15	0	Green
6	0	0	15	Blue
7	15	15	0	Yellow
8	15	6	0	Orange
9	10	4	0	Brown
10	15	7	7	Light Red (Pink)
11	5	5	5	Dark Grey
12	8	8	8	Medium Grey
13	9	15	9	Light Green
14	9	9	15	Light Blue
15	11	11	11	Light Grey
16	14	0	0	Guru Meditation
17	15	5	0	Rambutan
18	15	11	0	Carrot
19	14	14	0	Lemon Tart
20	7	15	0	Pandan
21	6	14	6	Seasick Green
22	0	14	3	Soylent Green
23	0	15	9	Slimer Green
24	0	13	13	The Other Cyan
25	0	9	15	Sea Sky
26	0	3	15	Smurf Blue
27	0	0	14	Screen of Death
28	7	0	15	Plum Sauce
29	12	0	15	Sour Grape
30	15	0	11	Bubblegum
31	15	3	6	Hot Tamales



# CHAPTER 7

## Supporters & Donors

- **Organisations**
- **Contributors**
- **Supporters**



The MEGA65 would not have been possible to create without the generous support of many organisations and individuals.

We are still compiling these lists, so apologies if we haven't included you yet. If you know anyone we have left out, please let us know, so that we can recognise the contribution of everyone who has made the MEGA65 possible, and into the great retro-computing project that it has become.

## ORGANISATIONS

**The MEGA Museum of Electronic Games & Art e.V. Germany**

**EVERYTHING**

**Trenz Electronic, Germany**

**MOTHERBOARD**

**MANUFACTURING**

**SALES**

**Hintsteiner, Austria**

**CASE**

**GMK, Germany**

**KEYBOARD**

**KEVAG Telekom, Germany**

**WEB HOSTING**

# CONTRIBUTORS

## **Andreas Liebeskind**

(*libi in paradise*)

CFO MEGA eV

## **Thomas Hertzler**

(*grumpyninja*)

USA spokesman

## **Russell Peake**

(*rdpeake*)

Bug herding

## **Alexander Nik Petra**

(*n0d*)

Early case design

## **Ralph Egas**

(*O-limits*)

Business advisor

## **Lucas Moss**

MEGAphone PCB design

## **Daren Klamer**

(*Impakt*)

Manual proof-reading

## **Daniël Mantione**

(*dmantione*)

C64 hardware guru

## **Dr. Canan Hastik**

(*indica*)

Chairwoman MEGA eV

## **Simon Jameson**

(*Shallan*)

Platform enhancements

## **Stephan Kleinert**

(*ubik*)

Destroyer of BASIC 10

## **Wayne Johns**

(*sausage*)

Manual additions

## **L. Kleiss**

(*LAK132*)

MegaWAT presentation software

## **Maurice van Gils**

(*Maurice*)

BASIC 65 example programs

## **Andrew Owen**

(*Cheveron*)

Keyboard, Sinclair support

## **Adam Barnes**

(*amb51*)

HDMI expert and board revision

# SUPPORTERS

@11110110100	Arne Neumann	Christian Gräfe
3c74ce64	Arne Richard Tyarks	Christian Heffner
8-Bit Classics	Axel Klahr	Christian Kersting
Aaron Smith	Balaz Ondrej	Christian Schiller
Achim Mrotzek	Barry Thompson	Christian Streck
Adolf Nefischer	Bartol Filipovic	Christian Weyer
Adrian Esdaile	Benjamin Maas	Christian Wyk
Adrien Guichard	Bernard Alaiz	Christoph Haug
Ahmed Kablaoui	Bernhard Zorn	Christoph Huck
Alan Bastian Witkowski	Bieno Marti-Braitmaier	Christoph Pross
Alan Field	Bigby	Christopher Christopher
Alastair Paulin-Campbell	Bill LaGrue	Christopher Kalk
Alberto Mercuri	Bjoerg Stojalowski	Christopher Kohlert
Alexander Haering	Björn Johannesson	Christopher Nelson
Alexander Kaufmann	Bjørn Melbøe	Christopher Taylor
Alexander Niedermeier	Bo Goeran Kvamme	Christopher Whillock
Alexander Soppert	Boerge Noest	Claudio Piccinini
Alfonso Ardire	Bolko Beutner	Claus Skrepk
Amiga On The Lake	Brett Hallen	Collen Blijenberg
André Kudra	Brian Gajewski	Constantine Lignos
André Simeit	Brian Green	Crnjaninja
André Wösten	Brian Juul Nielsen	Daniel Auger
Andrea Farolfi	Brian Reiter	Daniel Julien
Andrea Minutello	Bryan Pope	Daniel Lobitz
Andreas Behr	Burkhard Franke	Daniel O'Connor
Andreas Freier	Byron Goodman	Daniel Teicher
Andreas Grabski	Cameron Roberton (KONG)	Daniel Tootill
Andreas Millinger	Carl Angervall	Daniel Wedin
Andreas Nopper	Carl Danowski	Daniele Benetti
Andreas Ochs	Carl Stock	Daniele Gaetano Capursi
Andreas Wendel Manufaktur	Carl Wall	Dariusz Szczesniak
Andreas Zschunke	Carlo Pastore	Darrell Westbury
Andrew Bingham	Carlos Silva	David Asenjo Raposo
Andrew Dixon	Carsten Sørensen	David Dillard
Andrew Mondt	Cenk Miroglu Miroglu	David Gorgon
Andrzej Hłuchyj	Chang sik Park	David Norwood
Andrzej Sawiniec	Charles A. Hutchins Jr.	David Raulo
Andrzej Śliwa	Chris Guthrey	David Ross
Anthony W. Leal	Chris Hooper	de voughn accooe
Arkadiusz Bronowicki	Chris Stringer	Dean Scully
Arkadiusz Kwasny	Christian Boettcher	Dennis Jeschke
Arnaud Léandre	Christian Eick	Dennis Schaffers
Arne Drews	Christian Gleinser	Dennis Schierholz

Dennis Schneck	Frank Haaland	Helge Förster
denti	Frank Hempel	Hendrik Fensch
Dick van Ginkel	Frank Koschel	Henning Harperath
Diego Barzon	Frank Linhares	Henri Parfait
Dierk Schneider	Frank Sleeuwaert	Henrik Kühn
Dietmar Krueger	Frank Wolf	Holger Burmester
Dietmar Schinnerl	FranticFreddie	Holger Sturk
Dirk Becker	Fredrik Ramsberg	Howard Knibbs
Dirk Wouters	Fridun Nazaradeh	Hubert de Hollain
Domingo Fivoli	Friedel Kropp	Huberto Kusters
DonChaos	Garrick West	Hugo Maria Gerardus v.d. Aa
Donn Lasher	Gary Lake-Schaal	Humberto Castaneda
Douglas Johnson	Gary Pearson	Ian Cross
Dr. Leopold Winter	Gavin Jones	IDE64 Staff
Dusan Sobotka	Geir Sigmund Straume	Igor Ianov
Earl Woodman	Gerd Mitlaender	Immo Beutler
Ed Reilly	Giampietro Albiero	Ingo Katte
Edoardo Auteri	Giancarlo Valente	Ingo Keck
Eduardo Gallardo	Gianluca Girelli	Insanely Interested Publishing
Eduardo Luis Arana	Giovanni Medina	IT-Dienstleistungen Obsieger
Eirik Juliussen Olsen	Glen Fraser	Ivan Elwood
Emilio Monelli	Glen R Perye III	Jaap HUIJSMAN
EP Technical Services	Glenn Main	Jace Courville
Epic Sound	Gordon Rimac	Jack Wattenhofer
Erasmus Kuhlmann	GRANT BYERS	Jakob Schönplug
ergoGnomik	Grant Louth	Jakub Tyszko
Eric Hilaire	Gregor Bubek	James Hart
Eric Hildebrandt	Gregor Gramlich	James Marshburn
Eric Hill	Guido Ling	James McClanahan
Eric Jutrzenka	Guido von Gösseln	James Sutcliffe
Erwin Reichel	Guillaume Serge	Jan Bitruff
Espen Skog	Gunnar Hemmerling	Jan Hildebrandt
Evangelos Mpouras	Günter Hummel	Jan Iemhoff
Ewan Curtis	Guy Simmons	Jan Kösters
Fabio Zanicotti	Guybrush Threepwood	Jan Peter Borsje
Fabrizio Di Dio	Hakan Blomqvist	Jan Schulze
Fabrizio Lodi	Hans Pronk	Jan Stoltenberg-Lerche
FARA Gießen GmbH	Hans-Jörg Nett	Janne Tompuri
FeralChild	Hans-Martin Zedlitz	Jannis Schulte
First Choice Auto's	Harald Dosch	Jari Loukasmäki
Florian Rienhardt	Harri Salokorpi	Jason Smith
Forum64. de	Harry Culpan	Javier Gonzalez Gonzalez
Francesco Baldassarri	Harry Venema	Jean-Paul Lauque
Frank Fechner	Heath Gallimore	Jeffrey van der Schilden
Frank Glaush	Heinz Roesner	Jens Schneider
Frank Gulasch	Heinz Stampfli	Jens-Uwe Wessling

Jesse DiSimone	Kevin Edwards	Marco Rivelas
Jett Adams	Kevin Thomasson	Marco van de Water
Johan Arneklev	Kim Jorgensen	Marcus Gerards
Johan Berntsson	Kim Rene Jensen	Marcus Herbert
Johan Svensson	Kimmo Hamalainen	Marcus Linkert
Johannes Fitz	Konrad Buryło	Marek Pernicky
John Cook	Kosmas Einbrodt	Mario Esposito
John Deane	Kurt Klemm	Mario Fetka
John Dupuis	Lachlan Glaskin	Mario Teschke
John Nagi	Large bits collider	Mariusz Tymków
John Rorland	Lars Becker	Mark Adams
John Sargeant	Lars Edelmann	Mark Anderson
John Traeholt	Lars Slivsgaard	Mark Green
Jon Sandelin	Lasse Lambrecht	Mark Hucker
Jonas Bernemann	Lau Olivier	Mark Leitiger
Jonathan Prosise	Lee Chatt	Mark Spezzano
Joost Honig	Loan Leray	Mark Watkin
Jordi Pakey-Rodriguez	Lorenzo Quadri	Marko Rizvic
Jöre Weber	Lorenzo Travagli	Markus Bieler
Jörg Jungermann	Lorin Millsap	Markus Bonet
Jörg Schaeffer	Lothar James Foss	Markus Dauberschmidt
Jörg Weese	Lothar Serra Mari	Markus Fehr
Josef Hesse	Luca Papinutti	Markus Fuchs
Josef Soucek	Ludek Smetana	Markus Guenther-Hirn
Josef Stohwasser	Lukas Burger	Markus Liukka
Joseph Clifford	Lutz-Peter Buchholz	Markus Merz
Joseph Gerth	Luuk Spaetgens	Markus Roesgen
Jovan Crnjanin	Mad Web Skills	Markus Uttenweiler
Juan Pablo Schisano	MaDCz	Martin Bauhuber
Juan S. Cardona Iguina	Magnus Wiklander	Martin Benke
JudgeBeeb	Maik Diekmann	Martin Gendera
Juliusen Olsen	Malte Mundt	Martin Groß
Juna Luis Fernandez Garcia	Manfred Wittemann	Martin Gutenbrunner
Jürgen Endras	Manuel Beckmann	Martin Johansen
Jürgen Herm Stapelberg	Manzano Mérida	Martin Marbach
Jyrki Laurila	Marc "3D-vice" Schmitt	Martin Sonleitner
Kai Pernau	Marc Bartel	Martin Steffen
Kalle Pöyhönen	Marc Jensen	Marvin Hardy
Karl Lamford	Marc Schmidt	Massimo Villani
Karl-Heinz Blum	Marc Theunissen	Mathias Dellacherie
Karsten Engstler	Marc Tutor	Mathieu Chouinard
Karsten Westebbe	Marc Wink	Matthew Adams
katarakt	Marcel Buchtmann	Matthew Browne
Keith McComb	Marcel Kante	Matthew Carnevale
Kenneth Dyke	Marco Beckers	Matthew Palmer
Kenneth Joensson	Marco Cappellari	Matthew Santos

Matthias Barthel	Miguel Angel Rodriguez Jodar	Paul Johnson
Matthias Dolenc	Mikael Lund	Paul Kuhnast (mindrail)
Matthias Fischer	Mike Betz	Paul Massay
Matthias Frey	Mike Kastrantas	Paul Westlake
Matthias Grandis	Mike Pikowski	Paul Woegerer
Matthias Guth	Mikko Hämäläinen	Pauline Brasch
Matthias Lampe	Mikko Suontausta	Paulo Apolonia
Matthias Meier	Mirko Roller	Pete Collin
Matthias Mueller	Miroslav Karkus	Pete of Retrohax.net
Matthias Nofer	Morgan Antonsson	Peter Eliades
Matthias Schonder	Moritz	Peter Gries
Maurice Al-Khaliedy	Morten Nielsen	Peter Habura
Max Ihlenfeldt	MUBIQUO APPS,SL	Peter Herklotz
Meeso Kim	Myles Cameron-Smith	Peter Huyoff
Michael Dailly	Neil Moore	Peter Knörzer
Michael Dötsch	Nelson	Peter Leswell
Michael Dreßel	neoman	Peter Weile
Michael Fichtner	Nicholas Melnick	Petri Alvinen
Michael Fong	Nikolaj Brinch Jørgensen	Philip Marien
Michael Geoffrey Stone	Nils Andreas	Philip Timmermann
Michael Gertner	Nils Eilers	Philipp Rudin
Michael Grün	Nils Hammerich	Pierre Kressmann
Michael Habel	Nils77	Pieter Labie
Michael Härtig	Norah Smith	Piotr Kmiecik
Michael Haynes	Norman King	Power-on.at
Michael J Burkett	Normen Zoch	Przemysław Safonow
Michael Jensen	Olaf Grunert	Que Labs
Michael Jurisch	Ole Eitels	R Welbourn
Michael Kappelgaard	Oliver Boerner	R-Flux
Michael Kleinschmidt	Oliver Brüggemann	Rafał Michno
Michael Lorenz	Oliver Graf	Rainer Kappler
Michael Mayerhofer	Oliver Smith	Rainer Kopp
Michael Nurney	Olivier Bori	Rainer Weninger
Michael Rasmussen	ONEPSI LLC	Ralf Griewel
Michael Richmond	oRdYNe	Ralf Pöscha
Michael Sachse	Osaühing Trioflex	Ralf Reinhardt
Michael Sarbak	OSHA-PROS USA	Ralf Schenden
Michael Schneider	Padawer	Ralf Smolarek
Michael Scholz	Patrick Becher	Ralf Zenker
Michael Timm	Patrick Bürkstümmer	Ralph Bauer
Michael Traynor	Patrick de Zoete	Ralph Wernecke
Michael Whipp	Patrick Toal	Rédl Károly
Michal Ursiny	Patrick Vogt	Reiner Lanowski
Michele Chiti	Paul Alexander Warren	Remi Veilleux
Michele Perini	Paul Gerhardt (KONG)	Riccardo Bianchi
Michele Porcu	Paul Jackson	Richard Englert

Richard Good  
Richard Menedetter  
Richard Sopuch  
Rick Reynolds  
Rico Gruninger  
Rob Dean  
Robert Bernardo  
Robert Eaglestone  
Robert Grasböck  
Robert Miles  
Robert Schwan  
Robert Shively  
Robert Tangmar  
Robert Trangmar  
Rodney Xerri  
Roger Olsen  
Roger Pugh  
Roland Attila Kett  
Roland Evers  
Roland Schatz  
Rolf Hass  
Ronald Cooper  
Ronald Hunn  
Ronny Hamida  
Ronny Preiß  
Roy van Zundert  
Rüdiger Wohlfomm  
Ruediger Schlenter  
Rutger Willemsen  
Sampo Peltonen  
Sarmad Gilani  
SAS74  
Sascha Hesse  
Scott Halman  
Scott Hollier  
Scott Robison  
Sebastian Baranski  
Sebastian Bölling  
Sebastian Felzmann  
Sebastian Lipp  
Sebastian Rakel  
Şemseddin Moldibi  
Seth Morabito  
Shawn McKee  
Siegfried Hartmann  
Sigurbjörn Larusson  
Sigurdur Finnsson  
Simon Lawrence  
Simon Wolf  
spreen.digital  
Stefan Haberl  
Stefan Kramperth  
Stefan Richter  
Stefan Schultze  
Stefan Sonnek  
Stefan Theil  
Stefan Vrampe  
Stefano Canali  
Stefano Mozzi  
Steffen Reiersen  
Stephan Bielmann  
Stephen Jones  
Stephen Kew  
Steve Gray  
Steve Kurlin  
Steve Lemieux  
Steven Combs  
Stewart Dunn  
Stuart Marsh  
Sven Neumann  
Sven Stache  
Sven Sternberger  
Sven Wiegand  
Szabolcs Bence  
Tantrumedia Limited  
Techvana Operations Ltd.  
Teddy Turmeaux  
Teemu Korvenpää  
The Games Foundation  
Thierry Supplisson  
Thieu-Duy Thai  
Thomas Bierschenk  
Thomas Edmister  
Thomas Frauenknecht  
Thomas Gitzen  
Thomas Gruber  
Thomas Haidler  
Thomas Jager  
Thomas Karlßen  
Thomas Laskowski  
Thomas Marschall  
Thomas Niemann  
Thomas Scheelen  
Thomas Schilling  
Thomas Tahsin-Bey  
Thomas Walter  
Thomas Wirtzmann  
Thorsten Knoll  
Thorsten Nolte  
Tim Krome  
Tim Waite  
Timo Weirich  
Timothy Blanks  
Timothy Henson  
Timothy Prater  
Tobias Butter  
Tobias Heim  
Tobias Köck  
Tobias Lüthi  
Tommi Vasarainen  
Toni Ammer  
Tore Olsen  
Torleif Strand  
Torsten Schröder  
Tuan Nguyen  
Uffe Jakobsen  
Ulrich Hintermeier  
Ulrich Nieland  
Ulrik Kruse  
Ursula Förstle  
Uwe Anfang  
Uwe Boschanski  
Vedran Vrbanc  
Verm Project  
Wayne Rittmann  
Wayne Sander  
Wayne Steele  
Who Knows  
Winfried Falkenhahn  
Wolfgang Becker  
Wolfgang Stabla  
Worblehat  
www.patop69.net  
Yan B  
Zoltan Markus  
Zsolt Zsila  
Zytex Online Store



# **Bibliography**



- [1] L. Soares and M. Stumm, "Flexsc: Flexible system call scheduling with exceptionless system calls." in *Osdi*, vol. 10, 2010, pp. 1-8.
- [2] N. Montfort, P. Baudoin, J. Bell, I. Bogost, J. Douglass, M. C. Marino, M. Mateas, C. Reas, M. Sample, and N. Vawter, *10 PRINT CHR \$(205.5+ RND (1));: GOTO 10*. MIT Press, 2012.
- [3] Actraiser, "Vic-ii for beginners: Screen modes, cheaper by the dozen," 2013. [Online]. Available: <http://dustlayer.com/vic-ii/2013/4/26/vic-ii-for-beginners-screen-modes-cheaper-by-the-dozen>



# INDEX



BASIC 65 Arrays, 8  
BASIC 65 Commands  
    APPEND, 22  
    AUTO, 25  
    BACKGROUND, 26  
    BACKUP, 27  
    BANK, 28  
    BEGIN, 29  
    BEND, 30  
    BLOAD, 31  
    BOOT, 33  
    BORDER, 34  
    BOX, 35  
    BSAVE, 37  
    BVERIFY, 40  
    CATALOG, 41  
    CHANGE, 43  
    CHAR, 44  
    CHARDEF, 46  
    CHDIR, 47  
    CIRCLE, 49  
    CLOSE, 52  
    CLR, 53  
    CLRBITS, 54  
    CMD, 55  
    COLLECT, 56  
    COLLISION, 57  
    COLOR, 58  
    CONCAT, 59  
    CONT, 60  
    COPY, 61  
    CURSOR, 64  
    CUT, 65  
    DATA, 66  
    DCLEAR, 68  
    DCLOSE, 69  
    DEF FN, 71  
    DELETE, 72  
    DIM, 73  
    DIR, 74  
    Direct Mode, 6  
    DISK, 76  
    DLOAD, 77  
    DMA, 79  
    DMODE, 80  
    DO, 81  
    DOT, 84  
    DPAT, 85  
    DSAVE, 88  
    DVERIFY, 90  
    EDMA, 93  
    ELLIPSE, 96  
    ELSE, 98  
    END, 100  
    ENVELOPE, 101  
    ERASE, 103  
    EXIT, 105  
    FAST, 107  
    FGOSUB, 108  
    FGOTO, 109  
    FILTER, 110  
    FIND, 111  
    FONT, 114  
    FOR, 115  
    FOREGROUND, 116  
    FORMAT, 117  
    FREAD, 119  
    FREEZER, 120  
    FWRITE, 121  
    GCOPY, 122  
    GET, 123  
    GET#, 124  
    GETKEY, 125  
    GO64, 126  
    GOSUB, 127  
    GOTO, 128  
    GRAPHIC, 129  
    HEADER, 130  
    HELP, 131  
    HIGHLIGHT, 133  
    IF, 134  
    IMPORT, 135  
    INPUT, 136  
    INPUT#, 137

INSTR, 139  
KEY, 142  
LET, 146  
LINE, 147  
LINE INPUT, 148  
LINE INPUT#, 149  
LIST, 150  
LOAD, 151  
LOADIFF, 153  
LOCK, 155  
LOOP, 158  
MEM, 160  
MERGE, 161  
MKDIR, 163  
MONITOR, 165  
MOUNT, 166  
MOUSE, 167  
MOVSPR, 168  
NEW, 170  
NEXT, 171  
OFF, 173  
ON, 174  
OPEN, 176  
PAINT, 178  
PALETTE, 179  
PASTE, 181  
PEN, 183  
PLAY, 185  
POLYGON, 191  
PRINT, 194  
PRINT USING, 196  
PRINT#, 195  
RCURSOR, 199  
READ, 200  
RECORD, 201  
REM, 203  
RENAME, 204  
RENUMBER, 205  
RESTORE, 207  
RESUME, 208  
RETURN, 209  
RMOUSE, 212  
RREG, 217  
RUN, 222  
SAVE, 224  
SAVEIFF, 225  
SCNCLR, 226  
SCRATCH, 227  
SCREEN, 228  
SET, 231  
SETBIT, 232  
SLEEP, 235  
SOUND, 236  
SPEED, 238  
SPRCOLOR, 239  
SPRITE, 240  
SPRSAV, 241  
STEP, 244  
STOP, 245  
SYS, 247  
TEMPO, 251  
THEN, 252  
TO, 255  
TRAP, 256  
TROFF, 257  
TRON, 258  
TYPE, 259  
UNLOCK, 260  
UNTIL, 261  
USING, 262  
VERIFY, 266  
VIEWPORT, 267  
VOL, 268  
VSYNC, 269  
WAIT, 270  
WHILE, 271  
WINDOW, 272  
BASIC 65 Constants, 7  
BASIC 65 Examples  
    ABS, 20, 81, 158, 233, 261, 271  
    ATN, 24  
    BANK, 28, 54, 182, 189, 190,  
        232, 248, 270, 274  
    BEND, 29, 30, 99, 223

BORDER, 34, 51, 269  
CHDIR, 47  
CLRBIT, 54  
CMD, 55, 176  
CONCAT, 59  
CONT, 60  
COPY, 62, 255  
CUT, 65, 181  
DATA, 67, 73, 154, 200, 207, 249  
DIR, 42, 74, 163, 231  
DSAVE, 88, 137  
EDMA, 93, 160  
ELLIPSE, 97  
ELSE, 99, 110, 134, 236, 252  
END, 57, 67, 73, 95, 99, 100, 102, 104, 109, 134, 208, 209, 219, 249, 252, 256, 269  
ENVELOPE, 101, 187  
FGOTO, 109  
FORMAT, 117, 130  
GCOPY, 122  
GET, 29, 81, 105, 123, 124, 158, 261, 271  
IF, 21, 29, 30, 39, 51, 86, 87, 95, 98–100, 102, 104, 105, 110, 123–125, 127, 128, 134, 136, 138, 141, 149, 172, 175, 177, 192, 202, 212, 216, 219, 223, 236, 243, 245, 248, 251, 252, 268, 269  
INPUT, 98, 105, 108, 109, 124, 127, 128, 134, 136, 138, 148, 149, 202, 243, 252  
INSTR, 139  
INT, 140, 213  
KEY, 143, 173, 175  
LEFT, 144  
LINE, 105, 124, 129, 147–149, 178, 180, 183, 210, 225, 226, 230, 243  
LOOP, 81, 105, 123, 124, 127, 128, 136, 158, 261, 271  
LPEN, 159  
MOD, 164  
MOUNT, 166  
NEXT, 51, 57, 67, 71, 73, 84, 95, 102, 104, 110, 113–115, 119, 121, 138, 149, 154, 164, 169, 171, 189, 194, 195, 200, 202, 207–210, 213, 237, 240, 244, 249, 251, 253–258, 268, 275  
OFF, 25, 137, 143, 167, 173, 209, 212  
ON, 137, 141, 143, 152, 153, 167, 175, 199, 209, 212, 231, 233  
OPEN, 52, 55, 105, 124, 129, 154, 176, 180, 183, 210, 215, 226, 230  
PEN, 51, 65, 129, 147, 178, 180, 181, 183, 210, 215, 225, 226, 230, 267  
POKE, 70, 190, 217, 248  
POLYGON, 191  
POT, 193  
RCURSOR, 199  
RECORD, 202  
REM, 26–30, 32, 34, 39, 46–48, 51, 52, 54, 55, 57, 62, 64, 65, 67, 69, 71–73, 76, 78, 79, 81, 83, 93, 95, 97, 98, 100, 102–105, 107–110, 113, 114, 120, 122–125, 127–129, 134, 136, 138–141, 143, 146, 147, 149, 150, 152–155, 158–160, 163, 166, 167, 170, 173, 175, 176,

178-183, 187, 189-195,  
198, 202-204, 206, 209,  
210, 212-223, 225-227,  
230-233, 235-239, 241,  
243, 245, 248, 252-255,  
257, 258, 260, 261, 264,  
267, 269-274

RENAME, 204

RESUME, 95, 102, 104, 208,  
256

RMOUSE, 212

RND, 51, 213

RPALETTE, 214

RSPEED, 219

RUN, 53, 60, 67, 71, 73, 113,  
114, 131, 138, 148, 162,  
189, 199, 202, 210, 214,  
215, 222, 237, 249, 254,  
257, 258

RWINDOW, 223

SAVEIFF, 225

SCRATCH, 227

SIN, 71, 113-115, 171, 234,  
244

SQR, 95, 102, 104, 194, 195,  
197, 242, 245, 263

STEP, 71, 110, 113-115, 171,  
202, 244, 251, 254, 268

SYS, 53, 217, 248

THEN, 21, 29, 30, 39, 86, 87,  
95, 99, 100, 102, 104,  
105, 110, 123-125, 127,  
128, 134, 136, 138, 141,  
149, 172, 175, 177, 192,  
202, 212, 216, 219, 223,  
236, 243, 245, 248, 251,  
252, 268, 269

TO, 27, 38, 43, 57, 59, 62, 67,  
71, 73, 110, 113-115, 138,  
149, 152, 153, 164, 171,  
194, 195, 200, 202, 204,  
207-210, 213, 231, 237,

240, 244, 249, 251,  
253-258, 268, 275

TRON, 257, 258

UNLOCK, 260

UNTIL, 81, 123, 127, 128, 136,  
158, 261, 271

VAL, 265

VIEWPORT, 84, 267

VSYNC, 269

WAIT, 270

WINDOW, 272

WPEEK, 189, 273

BASIC 65 Functions

ABS, 20

ASC, 23

ATN, 24

BUMP, 39

CHR\$, 48

COS, 63

DEC, 70

ERR\$, 104

EXP, 106

FN, 71, 113

FRE, 118

HEX\$, 132

INT, 140

JOY, 141

LEFT\$, 144

LEN, 145

LOG, 156

LOG10, 157

LPEN, 159

MID\$, 162

MOD, 164

PEEK, 182

PIXEL, 184

POINTER, 188

POKE, 190

POS, 192

POT, 193

RCOLOR, 198

RGRAPHIC, 210

RIGHT\$, 211  
RND, 213  
RPALETTE, 214  
RPEN, 215  
RPLAY, 216  
RSPCOLOR, 218  
RSPEED, 219  
RSPPOS, 220  
RSprite, 221  
RWINDOW, 223  
SGN, 233  
SIN, 234  
SPC, 237  
SQR, 242  
STR\$, 246  
TAB, 249  
TAN, 250  
USR, 264  
VAL, 265  
WPEEK, 273  
WPOKE, 274

BASIC 65 Operators, 10  
AND, 21  
NOT, 172  
OR, 177  
XOR, 275

BASIC 65 System Commands  
EDIT, 91

BASIC 65 System Variables  
DS, 86

DS\$, 87  
DT\$, 89  
EL, 95  
ER, 102  
ST, 243  
TI, 253  
TI\$, 254

BASIC 65 Variables, 7

Commodore 64  
GO64 mode, 126

copyright, ii

Keyboard  
CTRL, 289  
Cursor Keys, 294  
Escape Sequences, 293  
PETSCII Codes and CHR\$, 48,  
283  
Screen Codes, 279  
Shift Keys, 292

Keywords, 3

Machine Code Monitor  
MONITOR command, 165

Screen Text and Colour Arrays, 9

Windows  
WINDOW command, 272