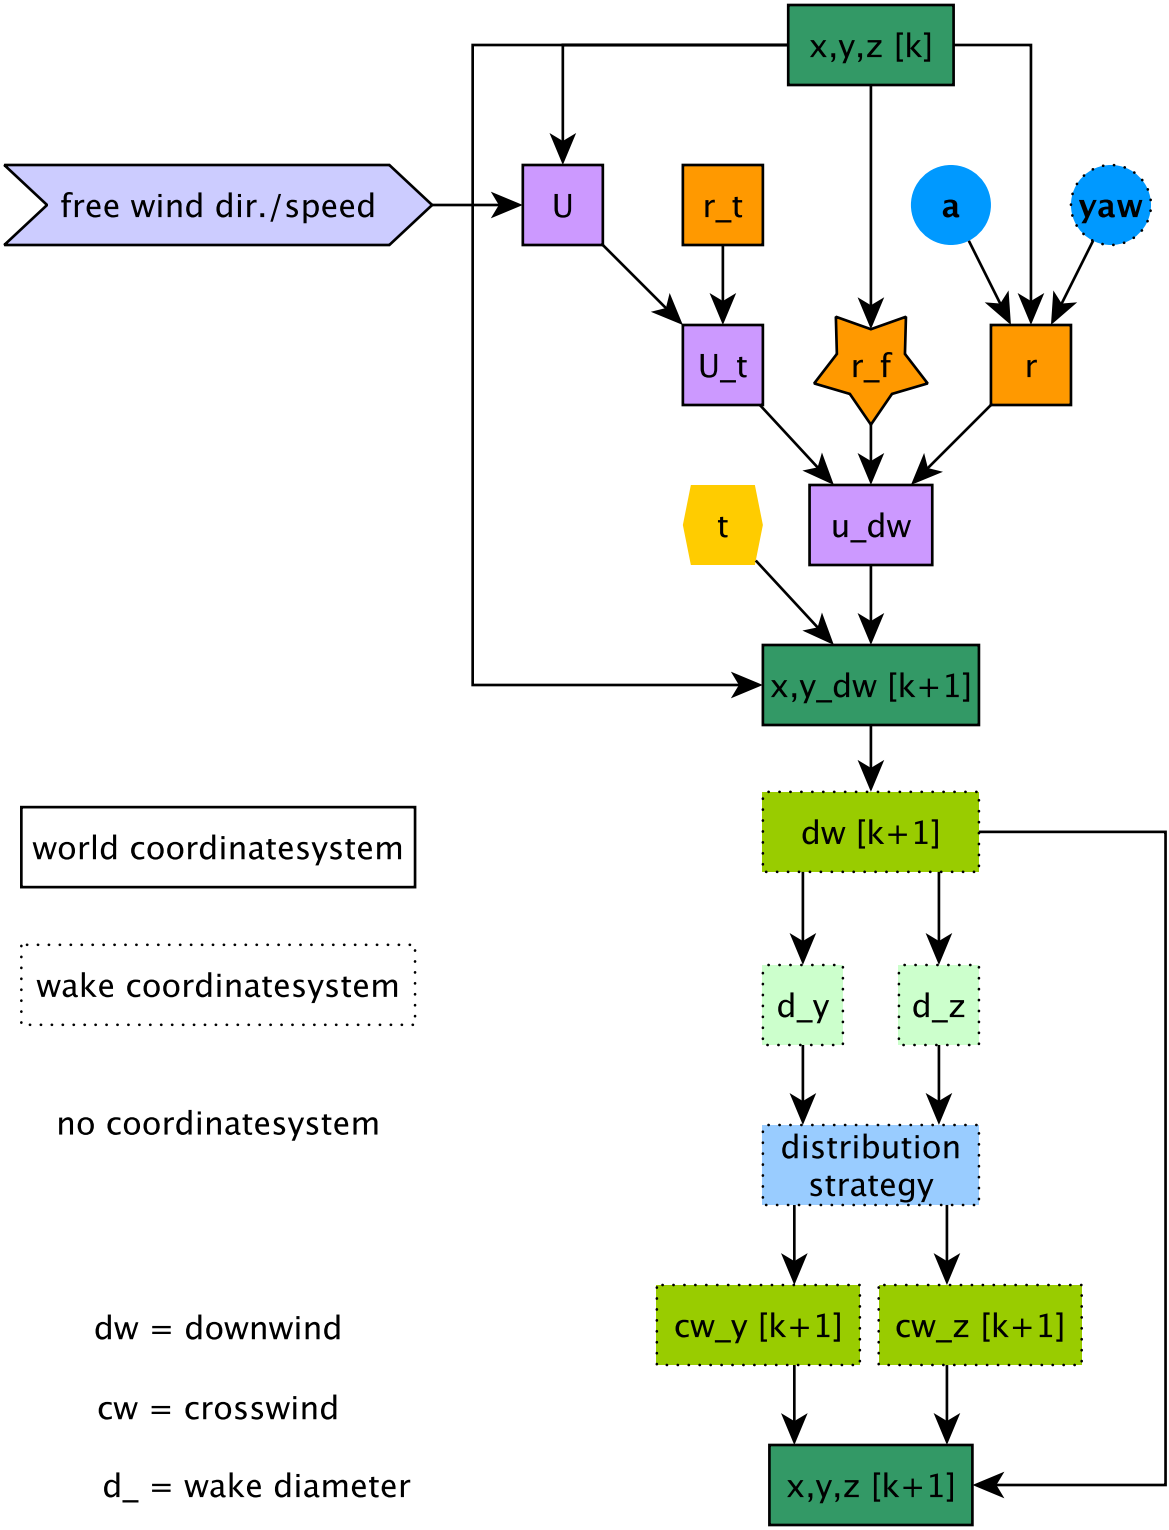
x,y,z [k]
free wind dir./speed
U
r_t
a
yaw
U_t
r_f
r
t
u_dw
x,y_dw [k+1]
dw [k+1]
world coordinatesystem
wake coordinatesystem
d_y
d_z
no coordinatesystem
distribution strategy
cw_y [k+1]
cw_z [k+1]
dw = downwind
cw = crosswind
d_ = wake diameter
x,y,z [k+1]