
How to do update by HIDBootloader


1. Make sure **the power is turn off**.
   確實關閉電源

2. **Keep shorting** the Pin 1 & Pin 3 of JSP on PCB.
   於 PCB 板上短路 JSP 的 Pin 1 及 Pin 3 腳位

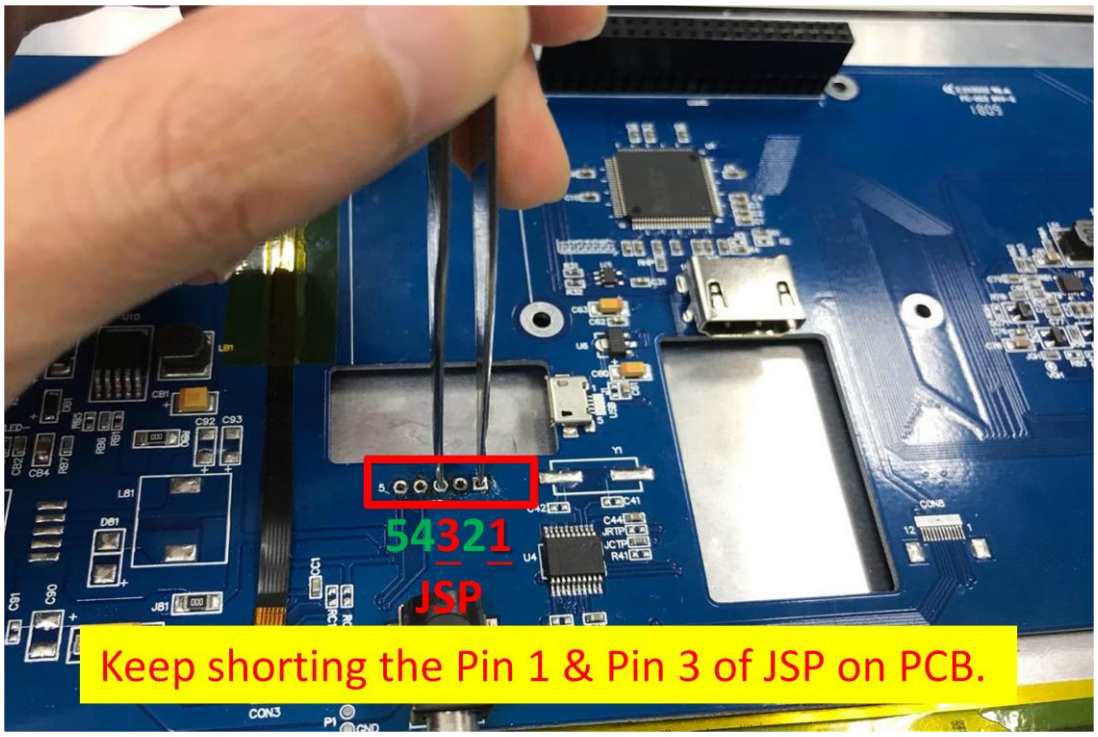


3. Turn on the power and connect USB to computer.
   接上 micro USB 於電腦上，並開啟電源

4. Open the HIDBootloader, **Always Keep shorting the Pin 1 & Pin 3 and USB to be connected the PC**.
開啟 HIDBootloader.exe 程式，**Pin 1 及 Pin 3 持續保持短路狀態**

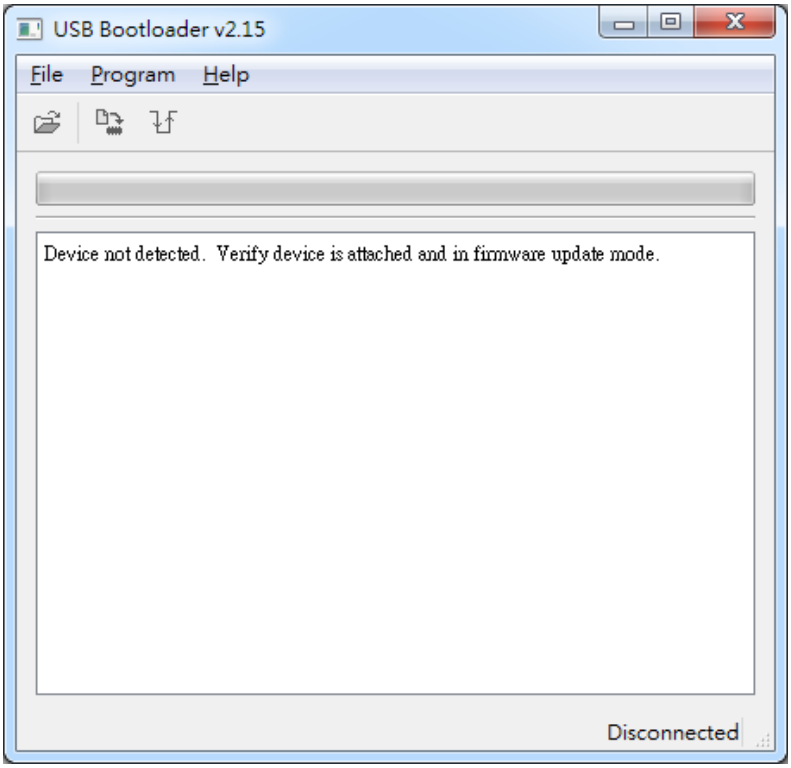


5. There is a bar will became green. And the message on the bottom right will show”**Connected**”.
直到出現**綠色光條**，以及**右下角顯示為"Connected"**

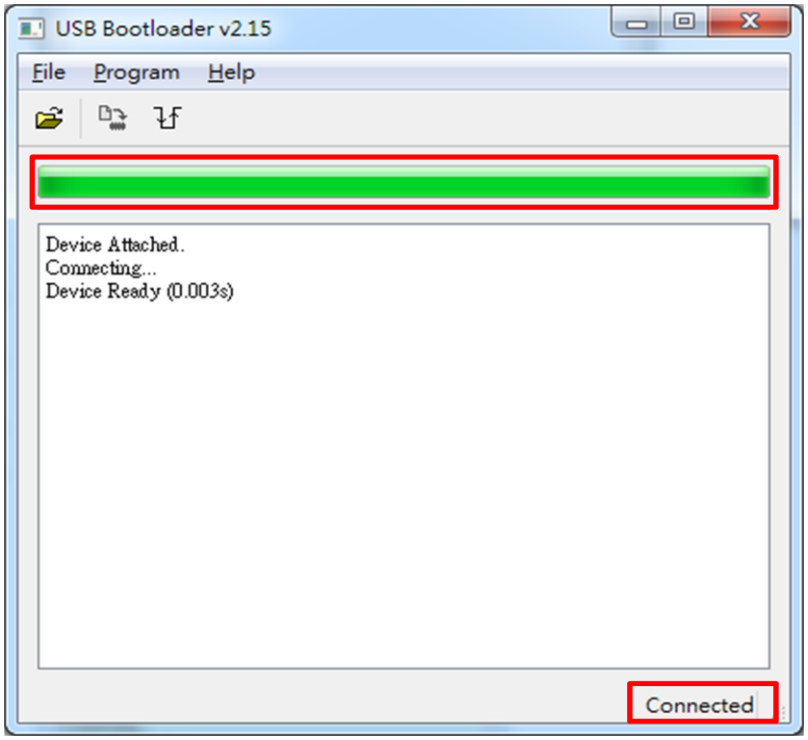

6. Remove shorting. 移除短路狀態


7. Click  to choose the import file.

   點擊  圖示選擇"Import Firmware Image"

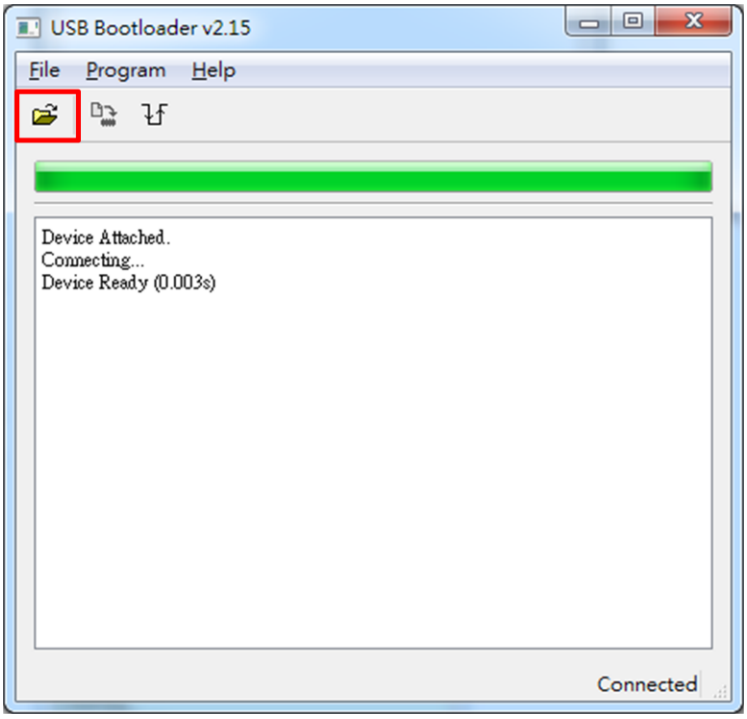

8. Click  to download the file.

   點擊  圖示進行檔案的燒錄。

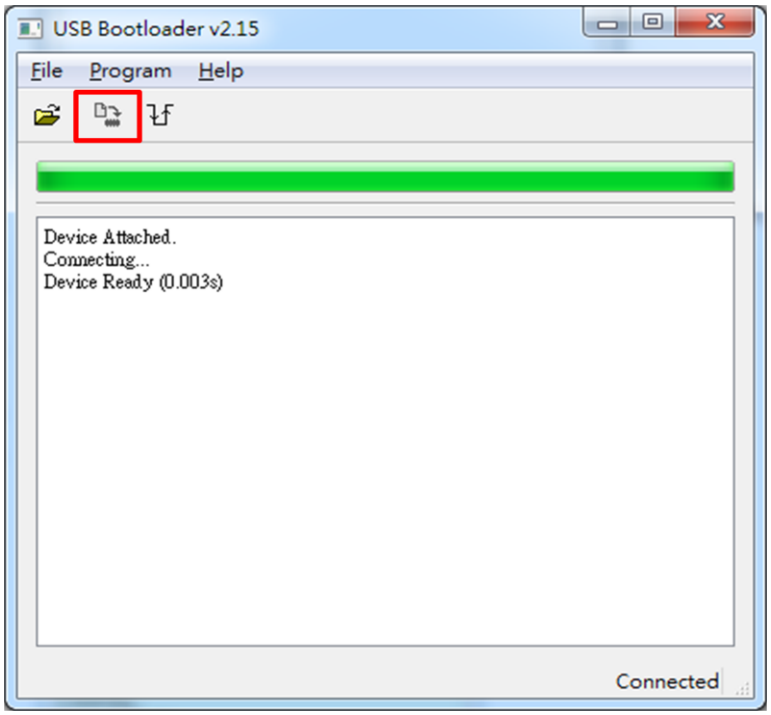

9. After finish download, reset the power.

燒錄完成出現以下畫面，**即可重新插拔電源重開機**。

