
SO-50 Pass Plan

Monday 10/19/2026 Rise 07:54:08 Max 07:58:48 Set 08:03:32 Max El 64° Az 199°→38°

TX (uplink) 145.850 MHz FM, 67.0 Hz CTCSS **RX (downlink) 436.795 MHz FM** — Doppler-corrected, rounded to 5 kHz (error up to 2.5 kHz)

Time	TX MHz	RX MHz	Az	El
07:54:08	145.845	436.805	199°	10°
07:54:38	145.845	436.805	198°	13°
07:55:08	145.845	436.805	197°	16°
07:55:38	145.845	436.805	195°	20°
07:56:08	145.845	436.805	193°	25°
07:56:38	145.845	436.805	190°	31°
07:57:08	145.850	436.800	185°	38°
07:57:38	145.850	436.800	176°	47°
07:58:08	145.850	436.800	161°	57°
07:58:38	145.850	436.795	131°	64°
07:59:08	145.850	436.795	94°	62°
07:59:38	145.850	436.790	70°	53°
08:00:08	145.850	436.790	58°	44°
08:00:38	145.850	436.790	51°	36°
08:01:08	145.855	436.785	46°	29°
08:01:38	145.855	436.785	43°	24°
08:02:08	145.855	436.785	41°	19°
08:02:38	145.855	436.785	40°	15°
08:03:08	145.855	436.785	39°	12°

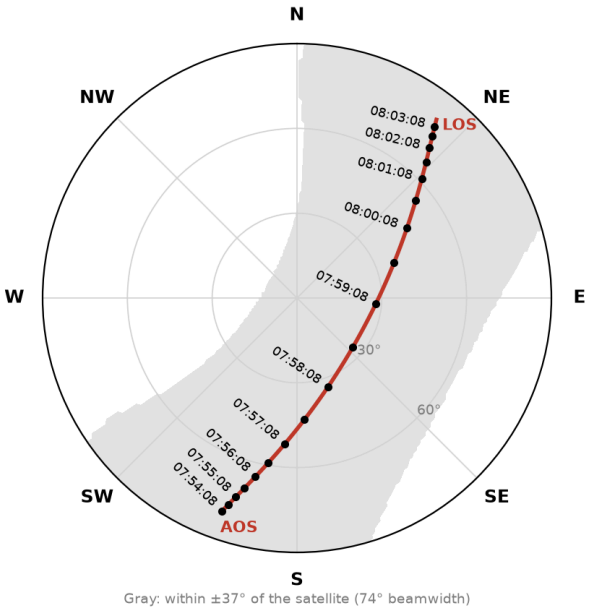

Yaesu VX-6R + speaker mic: uplink TX

- **Set Mode access:** [F/W] then [0(SET)], dial to the item, [0(SET)] to edit, dial = value, PTT = save
- **Frequency:** VHF band, VFO: key in digits for 145.850; the dial retunes for Doppler
- **Tone:** [F/W] then [MODE(SPS) SQ TYP], dial to TONE (not T SQL), PTT to save; [F/W] then [2(CODE)], dial to 67.0 Hz, press [2(CODE)] to save
- **Power:** [F/W] then [7(LK)TXPO] cycles HIGH / LOW3 (2.5 W) / LOW2 (1 W) / LOW1; use LOW3
- **Set Mode 1 APO:** OFF
- **Set Mode 4 ARS:** OFF
- **Set Mode 6 BCLO:** OFF, so PTT is never blocked by the downlink
- **Set Mode 27 HLF.DEV:** OFF: full deviation
- **Set Mode 37 MCGAIN:** LVL 5, adjust to your voice on the speaker mic
- **Set Mode 51 RPT:** SIMP (simplex); shortcut [F/W] [6(RPT)]
- **Set Mode 67 TOT:** 1 min (default 3)
- **Set Mode 70 TXSAVE:** OFF
- **Do not:** tap [7(LK)TXPO] alone: it turns on the Internet DTMF beep at every TX
- **Arming tone:** set tone to 74.4 Hz (as above) and key 2 s, then set 67.0 Hz and talk

Alinco DJ-VX50: downlink RX

- **Menu access:** FUNC, then 8, UP/DOWN to the menu number, dial = value, FUNC = confirm, ESC = exit
- **Frequency:** VFO mode: key in digits, e.g. 436.795 = 4 3 6 7 9 5; the dial then retunes for Doppler
- **Menu 01 R-CDC:** OFF (default): a tone squelch would mute the down-link
- **Menu 03 STEP:** 5K (default is 10K), so each dial click is one ladder step
- **Menu 04 W/N:** WIDE (default)
- **Menu 17 SAVE:** OFF (default is ON): battery saver can clip weak openings
- **Menu 19 SQL:** start at 1-2 (default 9 is tight); raise only if noise is constant
- **Menu 20 REPEAT:** OFF (default), and FUNC 4 until no offset is shown: simplex
- **Keypad lock:** FUNC, then hold #; the dial still retunes, and PTT stays untouched on this radio
- **Audio:** Earphone, volume up enough to hear a weak FM carrier

Notes

- ARM FIRST: 2 s carrier with 74.4 Hz tone, then switch to 67.0 Hz. The timer runs about 10 min, so arm just after rise (re-arm if it drops).
- Single-channel FM: short calls, no long conversations.

General

- **Identify:** KF8EEZ, short calls; low power. Keep both radios and the TX antenna well away from the SDR
- **Two radios:** Yaesu VX-6R + MH-57A4B speaker mic = uplink TX (log-periodic); Alinco DJ-VX50 = downlink RX. Use an earphone on the Alinco so its speaker doesn't feed the speaker mic
- **Aim (log-periodic):** point AT satellite: pre-aim at rise Az, follow the Az/El ladder; slant 45°