4007ES/4007ES HYBRID OPERATING INSTRUCTIONS FOLLOWING AN ALARM, SUPERVISORY, OR TROUBLE CONDITION

System Using Individual Acknowledge


Perform actions by tapping the designated button on the touchscreen display



YOUR SAFETY AND THE SAFETY OF THOSE AROUND YOU ALWAYS COMES FIRST.
Actions taken during a fire depend upon local practices. Be sure you know what to do.

ALARM OR PRIORITY 2

RED LED FLASHES AND TONE ALERT PULSES

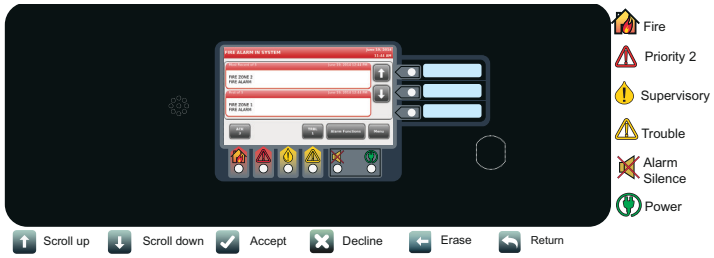

Normal Operation

Under normal conditions (i.e., no alarm, troubles, or supervisories) the panel appears as follows:

- Green AC power LED is on steady
- Yellow and RED LEDs below the display are off
- The message SYSTEM IS NORMAL is displayed on the touchscreen

Acknowledging Alarms Conditions

An alarm condition occurs when an initiating device activates.

1. Alarm and Pri2 conditions are indicated by the following:
   - The fire LED or the PRI2 LED begins to blink.
   - The piezo sounds a pulsating tone.
   - The user interface displays the **Fire Alarm in System** or the **Pri2 Alarm in System** screen, which shows the list of all the triggered alarms.
2. Tap an unacknowledged alarm from the Zone Alarm List. The alarms that have not been acknowledged display the text "Press to acknowledge" on the top right.

Silencing the Signals

Silencing an alarm turns off audible notification appliances that are programmed to turn off with Signal Silence. Tap **Alarm Functions**, then tap **Alarm Silence**, and confirm.

Resetting the System

Note: Reset the system only after the source of the alarm is determined and dealt with.

1. Tap **Alarm Function**.
2. Tap **System Reset**.
3. Confirm.

Note: If a zone or a device has reset successfully, the user interface returns to its normal display. If a zone or a device remains in alarm when you reset the system, the system reset aborts. A message confirming the abort appears on the user interface.

Viewing an Alarm Condition

Each alarm condition contains detailed information on the point (or points) that has triggered it. To access that information:

1. Tap the desired alarm condition on the **Fire Alarm in System** screen. That alarm condition can be either a point or a zone containing multiple devices.
2. Take the necessary actions, using the available functions at the point details screen.

Performing a Hardware Reset

To perform a hardware reset, tap **Hardware Reset**. It is used to reset Class A troubles after the problem causing the trouble is resolved.

SUPERVISORY/TROUBLE

YELLOW LED FLASHES AND TONE ALERT ON STEADY



Acknowledging Supervisory or Trouble Conditions

A supervisory trouble indicates a problem with the condition of the building's automatic sprinkler system or another system used for the protection of life and property. A Trouble message indicates a failure in the system that requires attention. Restore or replace the defective equipment (such as, switch, wire, device) in accordance with the equipment's instructions.

When a Supervisory or a Trouble event occurs, it needs to be acknowledged and the cause of the event resolved for the system to return to normal.

1. Supervisory and Trouble conditions are indicated by the following:
   - The supervisory LED or the trouble LED blinks.
   - The piezo sounds a continuous tone.
   - The user interface displays the **Supervisory in System** or the **Trouble in System** screen, which shows the list of all the Supervisory or Trouble conditions.
2. Tap an unacknowledged trouble from the Events List. The alarms that have not been acknowledged display the text "Press to acknowledge" on the top right.

Silencing the Signals

Tap anywhere on the user interface touchscreen to silence the piezo. Until the alarm conditions are acknowledged, it will re-start sounding after 1 minute of inactivity at the user interface.

Viewing a Supervisory or a Trouble Condition

Each Supervisory or Trouble condition contains detailed information on the points that triggered it. To access that information:

1. Tap the trouble condition on the **Trouble in System** screen.
2. Take the necessary actions, using the available functions at the point details screen.

In case of trouble, notify:
Name _____
Address _____
Phone # _____

Releasing Service

☐ Manual Release overrides abort switches.

☐ Manual Release DOES NOT override abort switches.

FRAME AND MOUNT THESE INSTRUCTIONS ADJACENT TO THE PANEL.
SEE OPERATOR'S MANUAL FOR DETAILED OPERATION.

AUTOCALL

© 2014-2017 Tyco Fire Products. All rights reserved.

579-1109AC
Rev. B

4007ES/4007ES HYBRID OPERATING INSTRUCTIONS FOLLOWING AN ALARM, SUPERVISORY, OR TROUBLE CONDITION

System Using Global Acknowledge


Perform actions by tapping the designated button on the touchscreen display



YOUR SAFETY AND THE SAFETY OF THOSE AROUND YOU ALWAYS COMES FIRST.
Actions taken during a fire depend upon local practices. Be sure you know what to do.


ALARM OR PRIORITY 2

RED LED FLASHES AND TONE ALERT PULSES

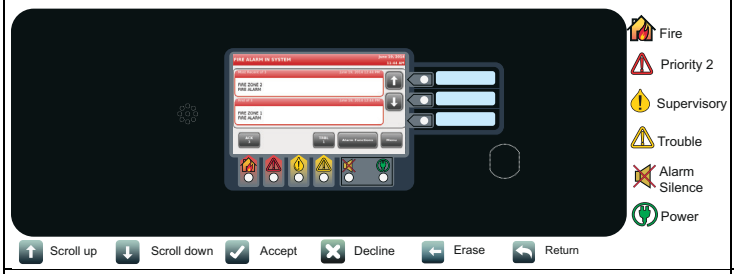

SUPERVISORY/TROUBLE

YELLOW LED FLASHES AND TONE ALERT ON STEADY

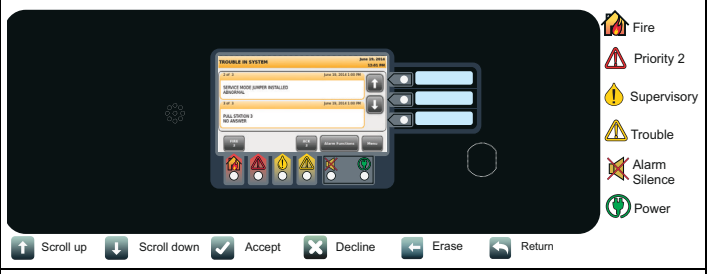

Normal Operation

Under normal conditions (i.e., no alarm, troubles, or supervisories) the panel appears as follows:

- Green AC power LED is on steady
- Yellow and RED LEDs below the display are off
- The message SYSTEM IS NORMAL is displayed on the touchscreen

Acknowledging Alarms Conditions

An alarm condition occurs when an initiating device activates.

1. Alarm and Pri2 conditions are indicated by the following:
   - The fire LED or the PRI2 LED blinks.
   - The piezo sounds a pulsating tone.
   - The user interface displays the **Fire Alarm in System** or the **Pri2 Alarm in System** screen, which shows the list of all the triggered alarms.
2. Tap on **Ack**. Acknowledging alarms does not silence the horns. You need to silence an alarm as explained in the Silencing the Signals section.

Silencing the Signals

Silencing an alarm turns off audible notification appliances that are programmed to turn off with Signal Silence. Tap on **Alarm Functions**, then tap **Alarm Silence**, and confirm.

Resetting the System

Note: Reset the system only after the source of the alarm is determined and dealt with.

1. Tap **Alarm Function**.
2. Tap **System Reset**.
3. Confirm.

Note: If a zone or a device has reset successfully, the user interface returns to its normal display. If a zone or a device remains in alarm when you reset the system, the system reset aborts. A message confirming the abort appears on the user interface.

Viewing an Alarm Condition

Each alarm condition contains detailed information on the point (or points) that has triggered it. To access that information:

1. Tap the alarm condition on the **Fire Alarm in System** screen. That alarm condition can be either a point or a zone containing multiple devices.
2. Take the necessary actions, using the available functions at the point details screen.

Performing a Hardware Reset

To perform a hardware reset, tap **Hardware Reset**. It is typically used to reset Class A troubles after the problem causing the trouble is resolved.

Acknowledging Supervisory or Trouble Conditions

A supervisory trouble indicates a problem with the condition of the building's automatic sprinkler system or another system used for the protection of life and property. A Trouble message indicates a failure in the system that requires attention. Restore or replace the defective equipment (such as, switch, wire, device) in accordance with the equipment's instructions.

When a Supervisory or a Trouble event occurs, it needs to be acknowledged and the cause of the event resolved for the system to return to normal.

1. Supervisory and Trouble conditions are indicated by the following:
   - The supervisory LED or the trouble LED blinks.
   - The piezo sounds a continuous tone.
   - The user interface displays the **Supervisory in System** or the **Trouble in System** screen, which shows the list of all the Supervisory or Trouble conditions.
2. Tap **Ack**.

Silencing the Signals

Tap anywhere on the user interface touchscreen to silence the piezo. Until the alarm conditions are acknowledged, it will re-start sounding after 1 minute of inactivity at the user interface.

Viewing a Supervisory or a Trouble Condition

Each Supervisory or Trouble condition contains detailed information on the points that have triggered it. To access that information:

1. Tap on a desired trouble condition from the **Trouble in System** screen.
2. Take the necessary actions, using the available functions at the point details screen.

In case of trouble, notify:

Name

_____

Address

_____

Phone #

_____

Releasing Service

☐ Manual Release overrides abort switches.

☐ Manual Release DOES NOT override abort switches.

FRAME AND MOUNT THESE INSTRUCTIONS ADJACENT TO THE PANEL.
SEE OPERATOR'S MANUAL FOR DETAILED OPERATION.

AUTOCALL

© 2014-2017 Tyco Fire Products. All rights reserved.

579-1109AC
Rev. B