
4100ES OPERATING INSTRUCTIONS
FOLLOWING AN ALARM, SUPERVISORY, OR TROUBLE CONDITION

YOUR SAFETY AND THE SAFETY OF THOSE AROUND YOU ALWAYS COMES FIRST.
Actions taken during a fire depend upon local practices. Be sure you know what to do.

Systems Using Individual Acknowledge

ALARM
RED LED FLASHES AND TONE ALERT PULSES

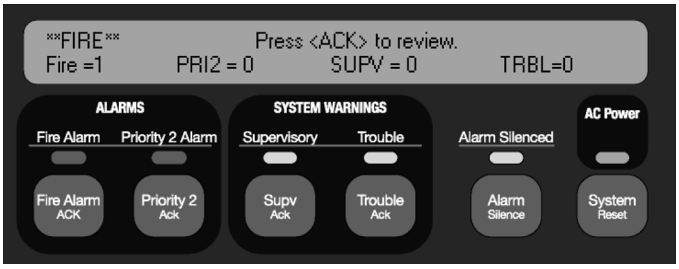

1. Unlock and open the panel door. The appearance of the alphanumeric display depends on whether the Display 1st Alarm Option is enabled.

- **If Display 1st Alarm Option** is enabled. The display alternates between two screens similar to Screen 1 and Screen 2 (which is a detailed description of the 1st alarm) below.

Screen 1

```
**FIRE**                Press (ACK) to review.
FIRE = 1    PRI2=0      SUPV=0      TRBL=0
```

Screen 2

```
FIRST FLOOR EAST WING     ROOM 31
PULL STATION
```

- **If Display 1st Alarm Option is not enabled**. Only a screen similar to Screen 1 appears, indicating the total number of alarm conditions present on the system.

2. Press the <ALARM ACK> key under the flashing red LED. Read the alphanumeric display. Continue to press the ALARM ACK key until all alarms are acknowledged. When this occurs, the tone-alert turns off and the ALARM led changes from flashing to ON steady

Silencing the Signals

1. Press the ALARM SILENCE key and read the display. The alphanumeric display reads “ALARM SILENCE IN PROGRESS” and the ALARM SILENCED LED turns on steady.

Note: The Disable switch on the front panel is not to be used during an alarm condition to silence the notification appliances.

Resetting the System

1. When the alarm condition has been cleared, restore or replace all affected devices (smoke detectors, motion sensors, etc.) in accordance with the instructions provided with each device.

2. Reset the system as follows:


- FIRE ALARM Condition. Press the SYSTEM RESET key.
- PRIORITY 2 ALARM Condition. Reset these conditions using either the System Reset key or a dedicated CONTROL key, located on left side of panel.

After a delay, the red ALARM LED flashes and the tone-alert sounds with a pulsing tone.

3. Press the <ALARM ACK> key under the flashing red LED. Continue to press the ALARM ACK> key until all alarm conditions have been acknowledged.

After a delay, the display reads “SYSTEM IS NORMAL”.

SUPERVISORY/TROUBLE
YELLOW LED FLASHES AND TONE ALERT ON STEADY

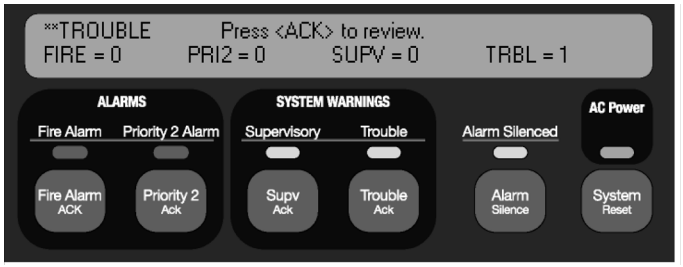

1. Unlock and open the panel door. The alphanumeric display shows the number of abnormal conditions. (This example describes managing a Trouble condition. A Supervisory condition is handled similarly.)

```
**TROUBLE**             Press (ACK) to review.
FIRE = 0    PRI2=0      SUPV=0      TRBL=1
```

2. Press the <TBL ACK> key under the flashing yellow LED. Read and follow instructions on the alphanumeric display. The display shows the area and type of problem, as shown in the example below. The tone alert momentarily silences and then resounds.

```
FIRST FLOOR EAST WING     ROOM 31
FIRE MONITOR ZONE       OPEN CKT TROUBLE
```

3. Press the <TBL ACK> key under the flashing yellow LED again to review the abnormal status. The alphanumeric display shows the area and type of problem, the tone-alert silences, and the SYSTEM TROUBLE LED turns on steady. Read the alphanumeric display and then investigate the problem to determine its cause.

4. If a Trouble condition exists, restore or replace the defective equipment (switch, wire, device, etc.) in accordance with the equipment’s instructions.

Note: When the abnormal condition causing the trouble clears, the yellow LED flashes and the tone-alert sounds steady.

5. Press the <TROUBLE ACK> key under the flashing yellow LED. The alphanumeric display shows the system status.

6. Press the <TROUBLE ACK> key again. After a delay the system shows the following:

```
SYSTEM IS NORMAL
9:27:40    TUE 29 NOV 00
```

In case of trouble, notify:

Name: _____

Address: _____

Phone #: _____

© 2017 Johnson Controls. All rights reserved. All specifications and other information shown were current as of document revision and are subject to change without notice. Additional listings may be applicable, contact your local Autocall® product supplier for the latest status. Listings and approvals under Tyco Fire & Security GmbH, and the product names listed in this material are marks and/or registered marks. Unauthorized use is strictly prohibited. NFPA 72 and National Fire Alarm Code are registered trademarks of the National Fire Protection Association (NFPA).


574-852AC
Rev. B

4100ES OPERATING INSTRUCTIONS
FOLLOWING AN ALARM, SUPERVISORY, OR TROUBLE CONDITION

YOUR SAFETY AND THE SAFETY OF THOSE AROUND YOU ALWAYS COMES FIRST.
Actions taken during a fire depend upon local practices. Be sure you know what to do.

Systems Using Global Acknowledge

ALARM
RED LED FLASHES AND TONE ALERT PULSES

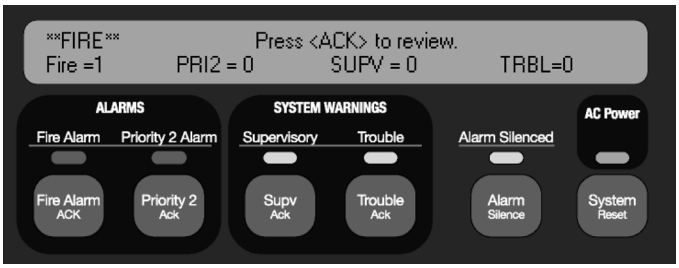

1. Unlock and open the panel door. The appearance of the alphanumeric display depends on whether the Display 1st Alarm Option is enabled.

- **If Display 1st Alarm Option is enabled.** The display alternates between two screens similar to Screen 1 and Screen 2 (which is a detailed description of the 1st alarm) below.

Screen 1

```
**FIRE**                Press (ACK) to review.
FIRE = 1    PRI2=0      SUPV=0      TRBL=0
```

Screen 2

```
FIRST FLOOR EAST WING     ROOM 31
PULL STATION
```

- **If Display 1st Alarm Option is not enabled**. Only a screen similar to Screen 1 appears, indicating the total number of alarm conditions present on the system.

2. Press the <ALARM ACK> key under the flashing red LED. Read the alphanumeric display. The tone-alert turns off and the ALARM led changes from flashing to ON steady.

Silencing the Signals

1. Press the ALARM SILENCE key and read the display. The alphanumeric display reads “ALARM SILENCE IN PROGRESS” and the ALARM SILENCED LED turns on steady.

Note: The Disable switch on the front panel is not to be used during an alarm condition to silence the notification appliances.

Resetting the System

1. When the alarm condition has been cleared, restore or replace all affected devices (smoke detectors, motion sensors, etc.) in accordance with the instructions provided with each device.

2. Reset the system as follows:


- FIRE ALARM Condition. Press the SYSTEM RESET key.
- PRIORITY 2 ALARM Condition. Reset these conditions using either the System Reset key or a dedicated CONTROL key, located on left side of panel.

After a delay, the red ALARM LED flashes and the tone-alert sounds with a pulsing tone.

3. Press the <ALARM ACK> key under the flashing red LED. Continue to press the ALARM ACK> key until all alarm conditions have been acknowledged.

After a delay, the display reads “SYSTEM IS NORMAL”.

SUPERVISORY/TROUBLE
YELLOW LED FLASHES AND TONE ALERT ON STEADY

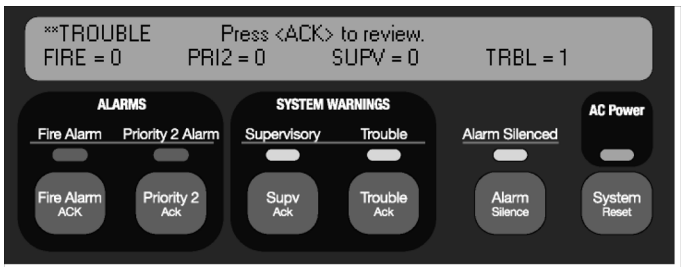

1. Unlock and open the panel door. The alphanumeric display shows the number of abnormal conditions. (This example describes managing a Trouble condition. A Supervisory condition is handled similarly.

```
**TROUBLE**             Press (ACK) to review.
FIRE = 0    PRI2=0      SUPV=0      TRBL=1
```

2. Press the <TBL ACK> key under the flashing yellow LED. Read and follow instructions on the alphanumeric display. The display shows the area and type of problem, as shown in the example below. The tone alert momentarily silences and then resounds.

```
FIRST FLOOR EAST WING     ROOM 31
FIRE MONITOR ZONE      OPEN CKT TROUBLE
```

3. Press the <TBL ACK> key under the flashing yellow LED again to review the abnormal status. The alphanumeric display shows the area and type of problem, the tone-alert silences, and the SYSTEM TROUBLE LED turns ON steady. Read the alphanumeric display and then investigate the problem to determine its cause.

4. If a Trouble condition exists, restore or replace the defective equipment (switch, wire, device, etc.) in accordance with the equipment’s instructions.

The Trouble condition automatically clears when the abnormal condition has been corrected.

After a short delay, the system returns to normal and displays the following.

```
          SYSTEM IS NORMAL
       9:27:40    TUE 29 NOV 00
```

In case of trouble, notify:

Name:_____

Address: _____

Phone #: _____

AUTOCALL

© 2017 Johnson Controls. All rights reserved. All specifications and other information shown were current as of document revision and are subject to change without notice. Additional listings may be applicable, contact your local Autocall® product supplier for the latest status. Listings and approvals under Tyco Fire & Security GmbH, and the product names listed in this material are marks and/or registered marks. Unauthorized use is strictly prohibited. NFPA 72 and National Fire Alarm Code are registered trademarks of the National Fire Protection Association (NFPA).

574-852AC
Rev. B