


6 5 4 3 2 1

ITEM NO.	PART NUMBER	QTY.
1	Nose_Cone	1
2	Primary_Turbine_Bush	1
3	Bearing_1	1
4	Central_Mount_Shift	1
5	Rear_Mounting_Shift	1
6	Rear_Case	1
7	End_cone	1
8	Exhaust_Case	1
9	Primary_Turbine	1
10	Air_Turbine-1	1
11	Air_Turbine-2	1
12	Air_Turbine-3	1
13	Air_Turbine-4	1
14	Air_Turbine-5	1
15	Petrol_Turbine-1	1
16	Petrol_Turbine-2	1
17	Petrol_Turbine-3	1
18	Petrol_Turbine-4	1
19	Petrol_Turbine-5	1
20	Airturbine_Bracket	1
21	Petrol_intake_Chamber	1
22	Petrol_Bracket	1
23	Primary_Turbine_Case	1
24	Bearing_Case	1
25	Airturbine_Case	1
26	Petrol_Intake_Case	1
27	Petrol_Turbine_Case	1
28	Petrol_pipe_array	1
29	Front_Rim	1
30	Inner_Body	1
31	Outer_body	1

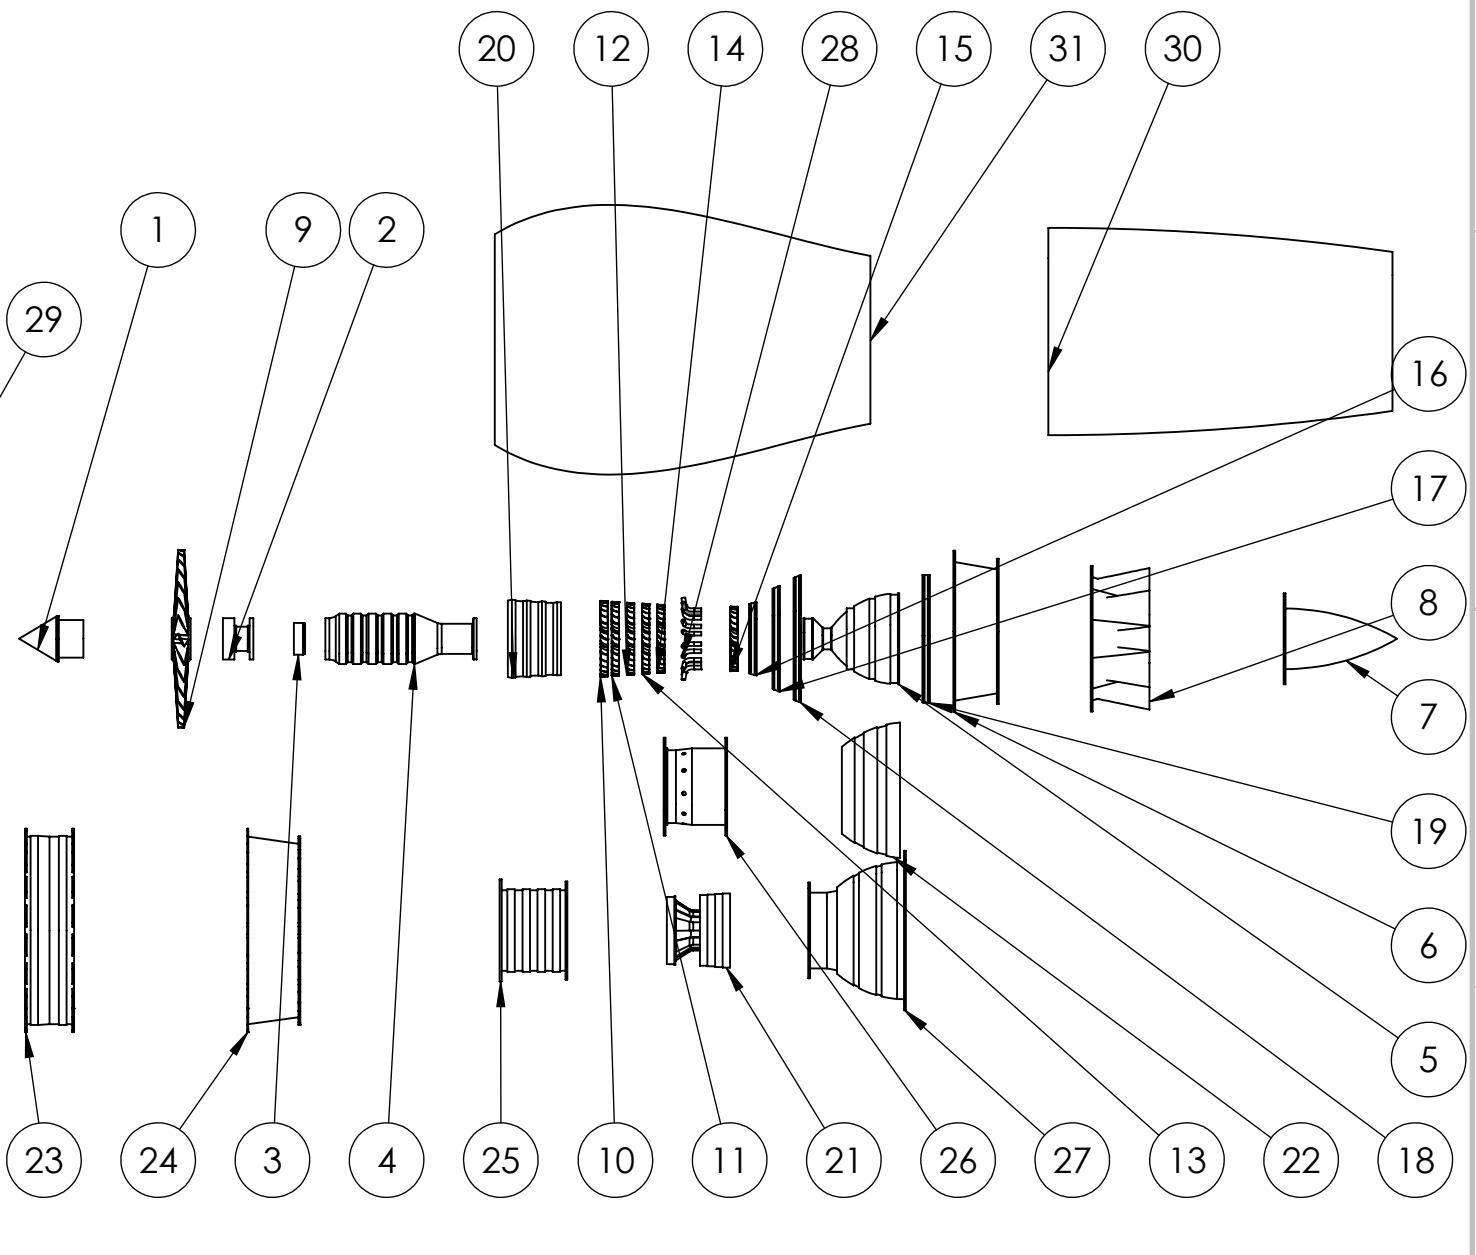

6 5 4 3 2 1