Easy Carve – quick guide

For the Genmitsu PROVerXL 4030. Keep this next to the machine. Open it at **kscnetman.github.io/Easy_Carve**


Once only: getting set up

1. Save **easy-carve.html** in Documents. Right-click it → **Send to → Desktop (create shortcut)**. Double-click the shortcut to open it in Edge or Chrome; both work.
2. Switch the machine on, plug in the USB cable, press **Connect to machine** and pick the port (usually "USB-SERIAL CH340").
3. Press **First time? Check my machine** and follow the steps. It checks the machine moves the right way and the right distance, using a scrap of wood.
4. Touch plate (if you have one): measure its thickness and type it in under **"Or find the surface with the touch plate"**. It's remembered.


Every job

Use the menu on the left: **1 Design → 2 How to cut → 3 Cut it** (or **Next →**).

1. **Clamp the wood down firmly** and fit the right bit (see table on page 2).
2. Open Easy Carve → **Connect** → **Home**.
3. **Pick your design**: **Open design...** for a photo or file, or **Type some text**.
   For a photo of a drawing, choose what you want: *carve its lines*, *cut out its shape*, or *3D raised carving*.
4. Set **how wide** it should be and the **gaps** from the left and front edges of the wood.
5. **How to cut it**: Engrave, Carve out, Cut out or 3D raised. Then pick the material and bit. Settings you choose are remembered for next time.
6. Check the picture on the right, or press **👀 Preview** to see it cut in 3D.

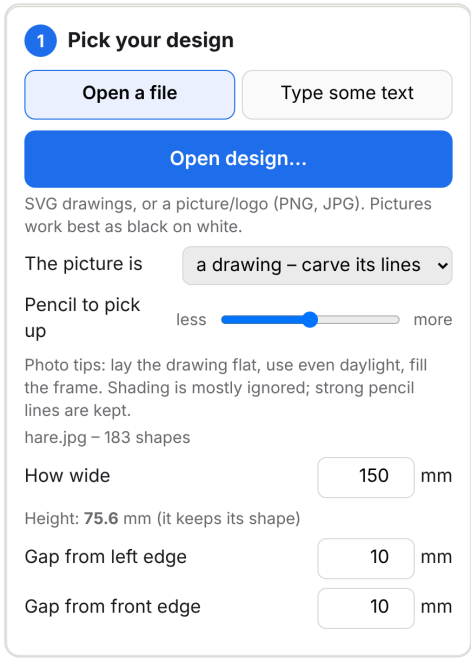


1 · Pick your design

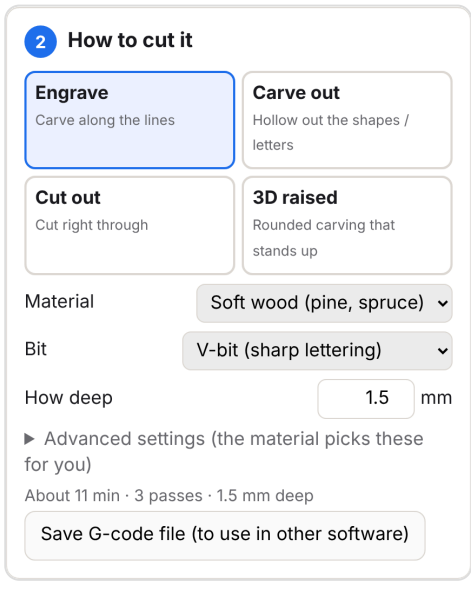

2 · How to cut it

7. **Set the start corner.** Use the arrow buttons to put the bit over the **front-left corner** of the wood, then press **Bit is over the front-left corner → set as start**.
8. **Set the surface.** Either lower the bit with **Z↓** (use 1 then 0.1 mm steps) until it just touches the wood and press **set as surface**, or use the **touch plate** button. Take the clip off afterwards!
9. Tick **Test run in the air** → **Start**. Watch the bit trace the job above the wood.
10. Untick the test box → safety glasses on, extraction on → **Start**.
11. Keep the window open while it cuts. **Pause** holds it; **STOP** stops everything.
12. When it says **Finished**, wait for the bit to stop spinning before touching anything.

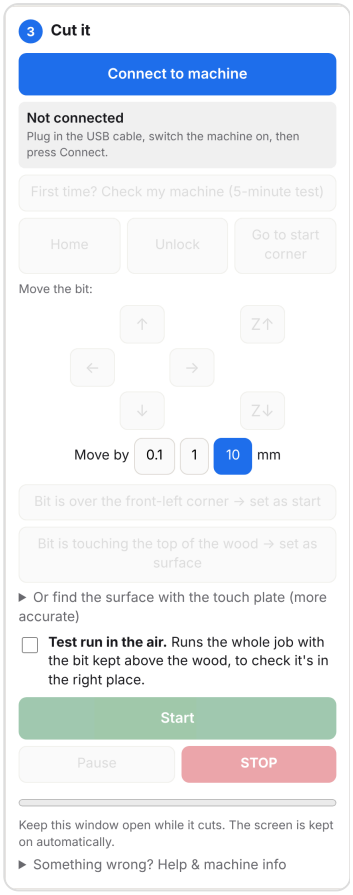

3 · Cut it

Safety. Stay with the machine while it runs. Hands away from the bit. Wear safety glasses. If anything looks wrong, press **STOP** on screen, or switch the machine off at its power switch.

Which bit?

Job	Bit	Notes
Engrave lines, drawings, writing	V-bit	Sharp, crisp lines. 1–1.5 mm deep.
Carve out (hollow) letters / shapes	Flat 3.175 mm (came with machine)	Use the 1 mm bit for small lettering.
Cut out a shape	Flat 3.175 mm	Leaves a thin skin; snap the piece out and sand.
3D raised carving	Ball-nose 3.175 mm or 6 mm	Slow: 1–3 hours. Wood at least 3 mm thicker than the carving height.

If something goes wrong

- **"Locked"**: press **Unlock**, then **Home**.
- **A red box with an error or alarm number**: it says what happened and what to do.
- **The job stopped part-way**: press Unlock → Home, **don't** reset the start corner or surface, then press **Carry on from where it stopped**.
- **Still stuck?** Open **"Something wrong? Help & machine info"** → **Copy report** and paste it in a message for help.

Photos of drawings: lay the drawing flat in daylight and use the phone's document scanner (iPhone: Notes → Scan Documents; Android: Google Drive → Scan). Going over the lines in black fineliner gives the crispest carving.

More things Easy Carve can do

- **Ready-made projects** – the top menu in step 1: house sign, name plaque, coaster set, chopping board, tree ornament, bookmark, keyrings. It asks for the words and sets everything up.
- **Several pieces on one job** – `+ Picture / file`, `+ Text`, `+ Shape…`. Click a piece to change it. On the picture: drag to move, red square to resize, red dot to turn. `Copies…` makes a grid (6 coasters at once).
- **Each piece has its own way of cutting.** If a job needs two bits, Start does one step at a time and tells you when to change bit – then set the **surface** again, not the start corner.
- **V-carve** – crisp, chiselled sign-writer letters with a V-bit. Text uses it automatically.
- **Slate** – choose "Slate" as the material, use a V-bit, keep it 0.5–1.5 mm deep, wear a dust mask. Oil it afterwards.
- **Inlays** – select a piece → `Make an inlay from this piece`. Step 1 cuts a pocket in your board; the last step cuts a mirror-image plug from a second, contrasting wood. Saw the plug wood off just outside the cut band, glue it in upside down, clamp overnight, then sand or cut it flush.
- **Jigsaw puzzle** – select a picture → `+ Shape…` → *Jigsaw puzzle*. Use 3–6 mm plywood and the 1 mm bit.
- 👀 **Preview the finished piece** – watch it being cut, then **turn it round in 3D**. Do this before every new job.
- **My piece of wood** (step 1) – type your wood's size; it warns if the job doesn't fit or is too near the clamps, and can centre it.
- 📷 **Take a photo of a drawing** – uses the webcam (or phone camera) and squares off the page for you.
- **Chime when finished** – leave the room during long jobs; it chimes and pops up a message.
- 📒 **Job diary** – every job is logged with how long it took. Add notes, and press **Do this again** to repeat it. **Save this job to a file** keeps it for later.



The preview: V-carved house sign



Turn it round in 3D: the hare as a raised carving